

# DEMO MANUAL DC1928A

## LTC3867EUF High Efficiency Synchronous Buck Converter

#### DESCRIPTION

Demonstration circuit 1928A is a single output synchronous buck converter featuring the LTC®3867EUF in a 24-lead 4mm x 4mm QFN package.

The DC1928A is configured with a sense resistor. Inductor DCR sensing circuit is optional. Using the inductor's DCR as the sense element instead of the onboard sense resistor saves cost, board space while improving efficiency. Using a sense resistor provides more accurate current limit.

The board has a lot of features including an internal 5V linear regulator for bias, output voltage remote-sense, programmable nonlinear control to improve load transient performance, programmable thermal shutdown, an

optional temperature compensated DCR sense circuit, and selectable continuous, pulse-skipping or Burst Mode® operation. Synchronization to an external clock is also possible.

The input voltage range is from 18V to 36V. The LTC3867 data sheet gives a complete description of the part, operation and application information and must be read in conjunction with this demo manual for DC1928A.

Design files for this circuit board are available at http://www.linear.com/demo

7, LT, LTC, LTM, Linear Technology, the Linear logo and Burst Mode are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners

### **PERFORMANCE SUMMARY** Specifications are at T<sub>A</sub> = 25°C

PARAMETER	CONDITIONS / NOTES	VALUE
Input Voltage Range		18V ~ 36V
Output Voltage, V <sub>OUT</sub>	V <sub>IN</sub> = 18V ~ 36V, I <sub>OUT</sub> = 0A ~ 12A, JP3: CCM	12V ±2% (11.76V ~ 12.24V)
Default Operating Frequency (Typical)		250kHz
External Clock Sync. Frequency Range		200kHz to 780kHz
Typical Full Load Efficiency (See Figure 3)	V <sub>IN</sub> = 24V, V <sub>OUT</sub> = 12V, I <sub>OUT1</sub> = 12A, f <sub>SW</sub> = 250kHz	97.6%



#### **QUICK START PROCEDURE**

Demonstration circuit DC1928A is easy to set up to evaluate the performance of the LTC3867EUF. Please refer to Figure 2 for proper measurement equipment setup and follow the procedure below:

1. Place jumpers in the following positions for a typical application:

**JP2:** On **JP3:** CCM

- With power off, connect the input power supply, load and meters as shown in Figure 1. Preset the load to 0A and V<sub>IN</sub> supply to 24V.
- 3. Turn on the power supply at the input.

**Note:** Make sure that the input voltage does not exceed 36V.

4. Check the output voltage. The output voltage should be between 11.76V and 12.24V.

Once the proper output voltage is established, adjust the load within the operating range and observe the output voltage regulation, output voltage ripple, efficiency and other parameters.

**Note:** When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the VIN or VOUT and GND terminals. See Figure 2 for proper scope probe technique.

5. Change JP3 jumper position to select different operation modes. Set jumper to CCM, BURST or P.S. position toe set forced continuous conduction, burst or pulseskipping mode respectively. For synchronizing to an external clock source, set the jumper to BURST position and apply the clock signal to MODE/PLLIN turret.

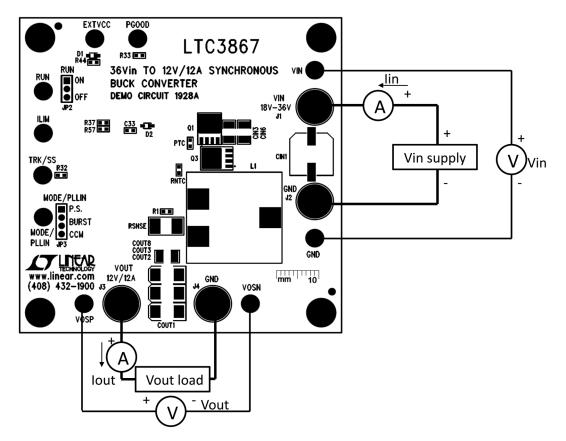


Figure 1. Test Setup of DC1928A



## **QUICK START PROCEDURE**

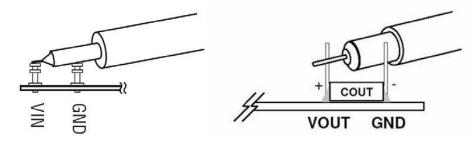


Figure 2. Measuring Input or Output Ripple Across Terminals or Directly Across Bulk Capacitor

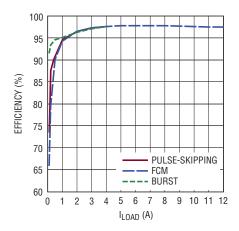


Figure 3. Measured Efficiency

## **RAIL TRACKING**

Demonstration circuit 1928A is configured for an onboard soft-start circuit. The soft-start ramp rate can be adjusted by changing the value of C24. Demonstration circuit 1928A

can also be modified to track an external reference. Refer to Table 1 for tracking options and to the data sheet for more details.

	TRK/SS RESISTORS AND CAPACITOR			RAIL TRACKING
CONFIGURATION	R32	R35	C24	TRK/SS PIN
Soft-Start without Tracking (Default)	0Ω	Open	0.1µF	OPEN
V <sub>OUT</sub> Equals External Ramp	0Ω	Open	Open	External Reference Applied
V <sub>OUT</sub> Tracking Scaled External Ramp	Resistor Divider		Open	External Reference Applied




# **PARTS LIST**

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER	
Required	d Circuit	t Components			
1	1	CIN1	CAP, ALUM, 56µF 20% 50V	SUN ELECT 50HVH56M	
2	2	CIN3, CIN6	CAP, X5R 10μF 20% 50V 1210	TAIYO YUDEN UMK325BJ106MM-T	
5	2	COUT1, COUT2	CAP, POSCAP 150µF 20% 16V 7343	SANYO, 16TQC150MYF	
7	2	COUT4, COUT8	CAP, X5R 22µF 20% 16V 1210	AVX 1210YD226MAT2A	
9	1	C32	CAP., X7R 10pF 10% 25V 0603	AVX 06033C100KAT2A	
10	1	C33	CAP, X5R 1µF 10% 50V 0603	TDK C1608X5R1E105K	
11	1	C19	CAP, X5R 0.033µF 10% 50V 0603	AVX 06035D333KAT2A	
12	1	C30	CAP, X7R 1nF 10% 25V 0603	AVX 06033C102KAT	
13	2	C24, C25	CAP, X5R 0.1µF 10% 10V 0603	AVX 0603ZD104KAT	
14	1	C26	CAP, COG 470pF 5% 50V 0603	MURATA GCM1885C1H471JA16D	
15	1	C27	CAP, X5R 4.7µF 10% 10V 0603	AVX 0603ZD475KAT2A	
16	1	C28	CAP, COG 100pF 5% 50V 0603	TDK C1608C0G1H101JK	
17	1	D1	DIODE, 6.8V SOD-323	CENTRAL CMDZ6L8	
18	1	D2	DIODE, SOD-323	CENTRAL SEMI CMDSH05-4-LTC	
23	1	L1	IND., 7µH	WURTH., 7443630700	
24	2	Q1, Q3	XSTR, MOSFET LFPAK	INFINEON BSC035N04LSG	
28	1	RSNSE	RES, 3mΩ 1% 1W 2512	PANASONIC ERJM1WTF3M0U	
29	2	R9, R10	RES, 100Ω 1% 1/10W 0603	NIC NRC06F1000TRF	
31	4	R32, R36, R56, R58	RES, 0Ω 1/10W 0603	VISHAY CRCW06030000Z0EA	
32	1	R33	RES, 100k 1% 1/10W 0603	NIC NRC06F1003TRF	
33	1	R37	RES, 2.2Ω 5% 1/10W 0603	NIC NRC06F2R20TRF	
34	1	R39	RES, 191KΩ 1% 0603	VISHAY CRCW060375K0FKEA	
35	4	R38, R53, R57, R59	RES, 10k 1% 0603	NIC NRC06F1002TRF	
36	1	R40	RES, 44.2k 1% 0603	VISHAY CRCW060344K2FKEA	
37	1	R51	RES, 30.1k 1% 0603	NIC NRC06f3012TRF	
38	3	R49, R50, PTC	RES, 10Ω 1% 0603	NIC NRC06f10R0TRF	
39	1	U1	IC., LTC3867EUF, QFN 4mm x 4mm	LINEAR TECH. LTC3867EUH#PBF	
Addition	al Demo	Board Circuit Components			
1	2	COUT5, COUT7 (OPT)			
2	3	CIN4, CIN5, CIN7,	CAP, X5R 22µF 20% 25V 1210		
3	1	COUT3 (OPT)	CAP, POSCAP 7343		
4	3	C18, C23, C29 (OPT)	CAP, 0603		
5	2	Q2, Q4 (OPT)	XSTR, MOSFET LFPAK		
6	1	Q5 (OPT)	XSTR, MOSFET, DUAL N-CHANNEL		
7	13	R1, R27, R29, R35, R42, R43, R46-R48, R52, R54, R55, RNTC (OPT)	RES, 0603		
Hardwar	e-For D	emo Board Only			
1	8	E1, E2, E4-E11	TURRET, 0.094"	MILL-MAX 2501-2-00-80-00-00-07-0	
2	1	JP2	HEADER, 3-PIN	SAMTEC TMM-103-02-L-S	
3	1	JP3	HEADER, 4-PIN	SAMTEC TMM-104-02-L-S	
4	4	J1-J4	JACK, BANANA	KEYSTONE 575-4	
5	2	XJP2, XJP3	SHUNT	SAMTEC 2SN-BK-G	
6	4		STANDOFF, SNAP ON	KEYSTONE 8832	
7	1		FAB, PRINTED CIRCUIT BOARD	DEMO CIRCUIT 1928A	

LINEAR TECHNOLOGY

## SCHEMATIC DIAGRAM

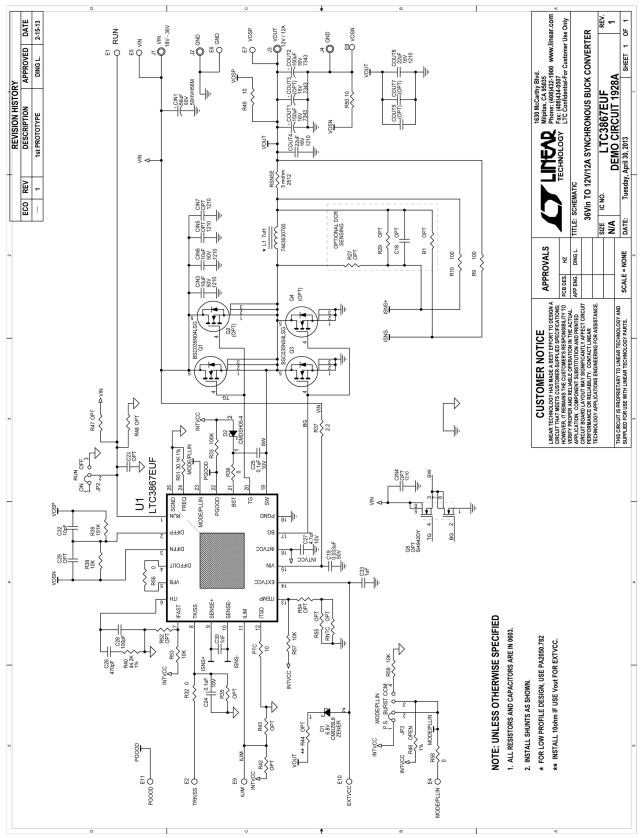

#### DEMO MANUAL DC1928A

#### DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following AS IS conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

**Please read the DEMO BOARD manual prior to handling the product**. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged**.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

