

FAULT

VIN

2.5V-16.5V


ON/OFF

GND

RESET

VOUT
2.5V-16.5V

GND

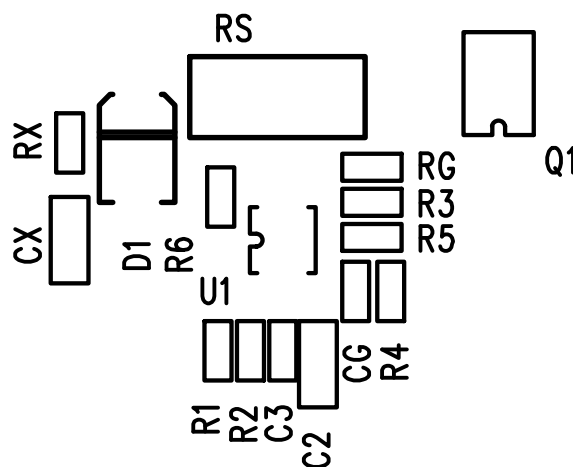

Demo Circuit 536B- 
HOTSWAP CONTROLLER WITH
MULTIFUNCTION CURRENT CONTROL
FOR LTC CUSTOMER USE ONLY

12/23/15