

93/95/97 SCOPEMETER®



Quick Operating Guide

CONTENTS:

Figure	Subject
1.	LF / HF CONNECTIONS
2.	COMMON (GROUND) CONNECTIONS
3.	MEASURING AC-RMS VOLTS
4.	MEASURING DC VOLTS
5.	ACCESSORY INPUT
6.	DIODE TEST
7.	MEASURING RESISTANCE
8.	MEASURING FREQUENCY
9.	METER RECORD MODE
10.	COMPONENT TESTING
11.	DISPLAYING A WAVEFORM
12.	DISPLAYING TWO WAVEFORMS
13.	ZOOM IN A WAVEFORM
14.	TIME BASE POSITIONS
15.	SELECTING A TRIGGER
16.	SINGLE SHOT CHECKLIST
17.	USING CURSORS
18.	SAVE & RECALL SETUP
19.	SAVE A WAVEFORM
20.	DISPLAY A WAVEFORM
21.	MENU KEY ROAD MAP I
22.	MENU KEY ROAD MAP II
23.	HARD COPY

97



95



93




CONTENTS:

Figure	Subject
1.	LF / HF CONNECTIONS
2.	COMMON (GROUND) CONNECTIONS
3.	MEASURING AC-RMS VOLTS
4.	MEASURING DC VOLTS
5.	ACCESSORY INPUT
6.	DIODE TEST
7.	MEASURING RESISTANCE
8.	MEASURING FREQUENCY
9.	METER RECORD MODE
10.	COMPONENT TESTING
11.	DISPLAYING A WAVEFORM
12.	DISPLAYING TWO WAVEFORMS
13.	ZOOM IN A WAVEFORM
14.	TIME BASE POSITIONS
15.	SELECTING A TRIGGER
16.	SINGLE SHOT CHECKLIST
17.	USING CURSORS
18.	SAVE & RECALL SETUP
19.	SAVE A WAVEFORM
20.	DISPLAY A WAVEFORM
21.	MENU KEY ROAD MAP I
22.	MENU KEY ROAD MAP II
23.	HARD COPY


1

LF/HF CONNECTIONS

LF MEASUREMENT (DC to 1MHz)

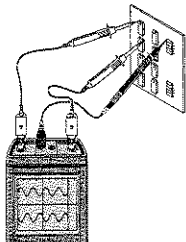

HF MEASUREMENT (DC to 50 MHz)

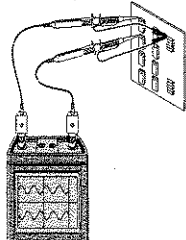

93

95


97

517221


COMMON (GND) CONNECTIONS

2

WRONG

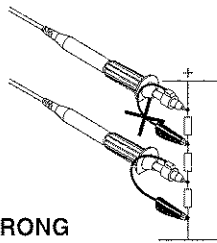

RIGHT

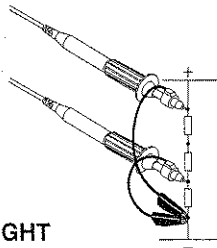

93


95

97

517221


3

MEASURING AC-RMS VOLTS

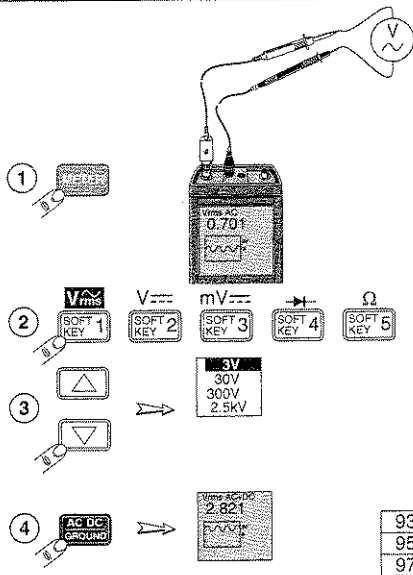



MEASURING DC VOLTS

4

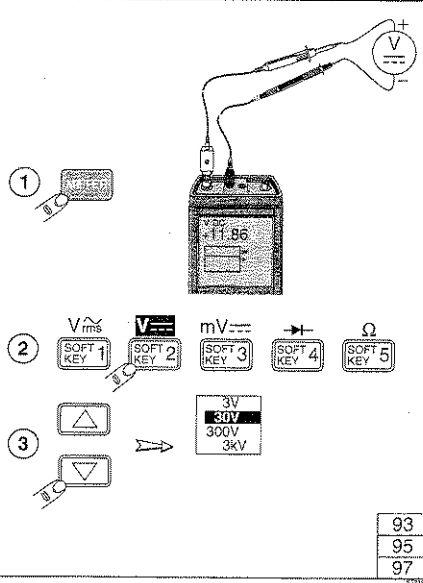

5

 ACCESSORY INPUT

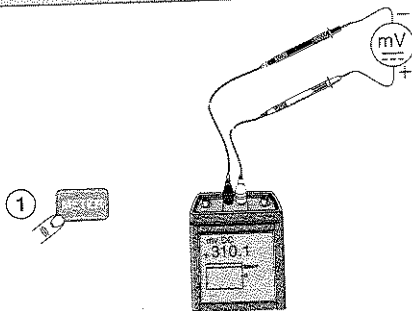

93


95

97


9770

DIODE TEST

6

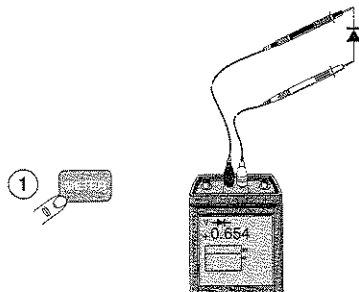

DIODE TEST WITH AUDIO ALERT:

 

93


95

97

9771

7

MEASURING RESISTANCE

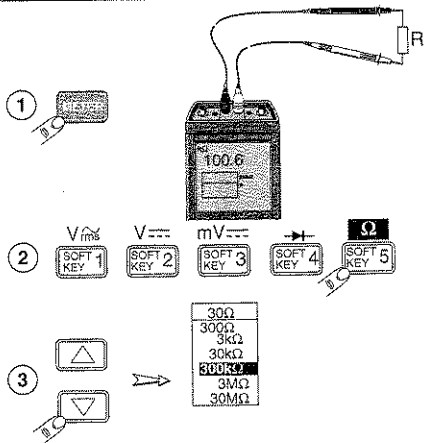



CONTINUITY TESTING:



MEASURING FREQUENCY

8

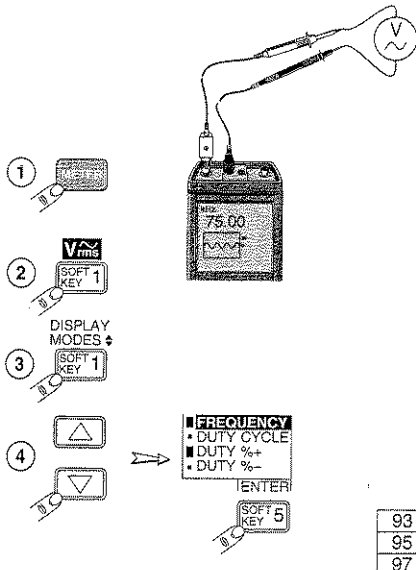

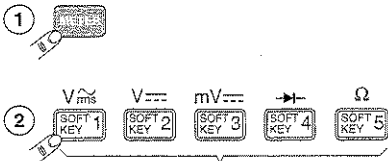

Vrms AC
29.63 NOW
 32.45 MAX 00:00r 00:58
 29.23 AVG 00:1V 00:21
 26.44 MIN 00:00r 02:37

ATTENTION!

Vrms AC
27.50 NOW
OL MAX 00:00r 02:58
32.26 AVG 00:1V 00:21
 26.44 MIN 00:00r 02:37

 
 
Average value:
 32.26 Vrms
 valid at
 000hr 00:57

93
 95
 97

57116




MEASURE



Components:
 • VOLTAGE
 • CURRENT

ENTER

SOFT KEY 5

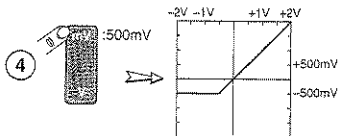


93
 95
 97

57116

11

DISPLAYING A WAVEFORM

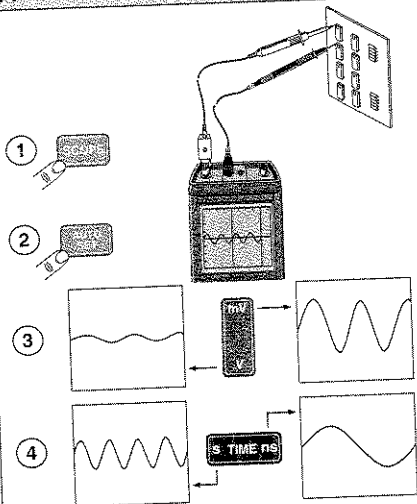


93

95

97

DISPLAYING TWO WAVEFORMS 12

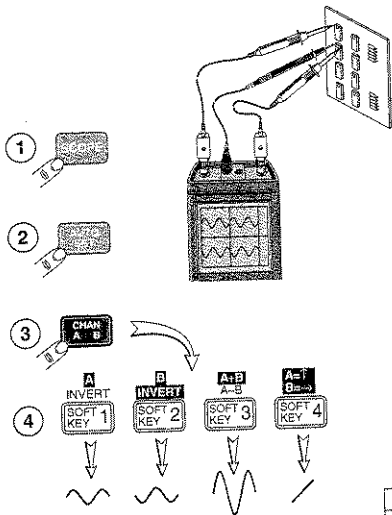


93

95

97


13

ZOOM IN A WAVEFORM

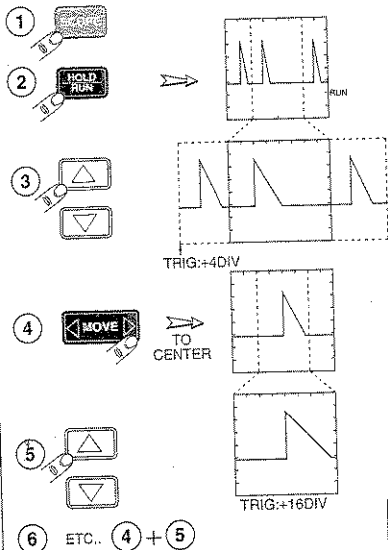

TIME BASE POSITIONS

14

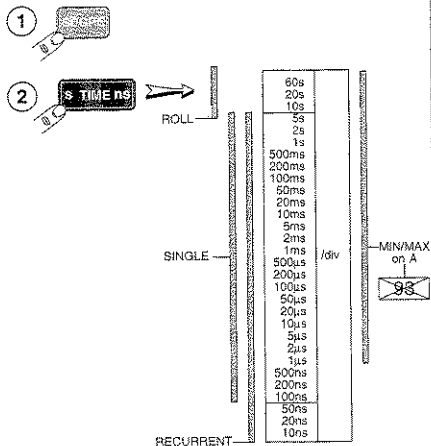

93

95

97

97225

15

SELECTING A TRIGGER

1

2

3

EXT A B	+SLOPE -SLOPE	TRIGGER LEVEL	DELAY ↑	DELAY ZERO
SOFT 1 KEY	SOFT 2 KEY	SOFT 3 KEY	SOFT 4 KEY	SOFT 5 KEY

NO TRIG
RUN

+SLOPE:

-SLOPE:

TIME DELAY
N-CYCLE 93
EVENTS 95

LEVEL:

4

93
95
97

SINGLE SHOT CHECKLIST

16

1

SINGLE RECURRENT	FREE RUN	CAPTURE 10/20	MIN MAX on A	TRIGGER at 50%
Set to SINGLE	Set to off	Set as needed	Set as needed	---

2

A INVERT	B INVERT	A=B A-B	A=T B=→	---
Set as needed	Set as needed	Set as needed	---	---

3 and/or

Set to cover input signal(s)

4 and/or

Set to DC

5

EXT A B	+SLOPE -SLOPE	TRIGGER LEVEL	DELAY	DELAY ZERO
Set as needed	Set for 1st edge	Press and Adjust with and	Press and Adjust in	Press and Pop up


6

Set as needed

7


Press to start (or stop) **HOLD** on display changes to **NOTRIG**
On triggering to **RUN**. On completion to **HOLD**

Notes : MIN MAX affects channel choices
: Models 93 and 95 have fewer softkey choices
: If GEN on then EXT trigger replaced by GEN.

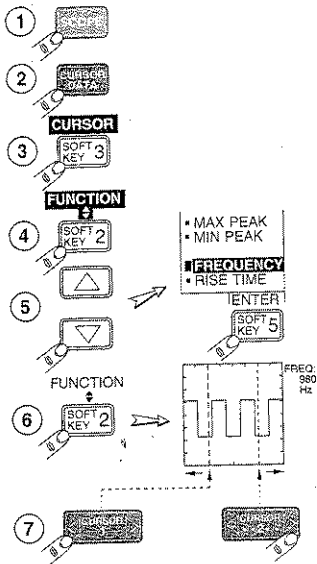


98
95
97



SAVING:

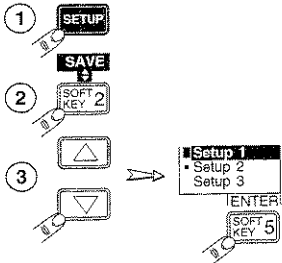

RECALLING:

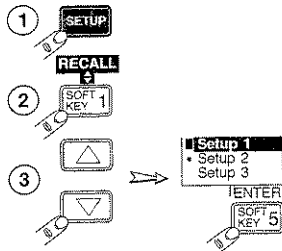


98
95
97

  

COPY FROM:

- Channel A
- Channel B
- A+B

 ENTER



COPY TO:

- Memory 4
- Memory 5
- Memory 6

ENTER

93

95

 
97

57110



WAVEFORM:

ON/OFF




- Memory 4
- Memory 5
- Memory 6

ENTER

WAVEFORM:

 ON/OFF


(MIN. 1 WAVEFORM
MAX. 4 WAVEFORMS)Y-POS
4

93

95

97


57110

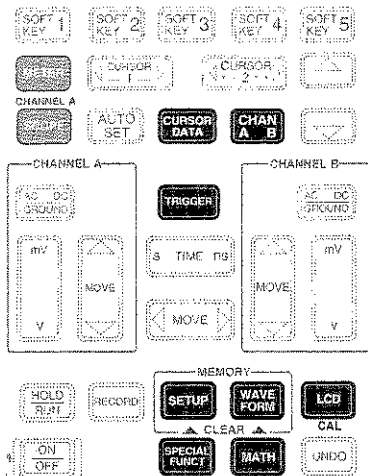

MODEL 97

Note: Models 93 and 95 have fewer key choices

51721

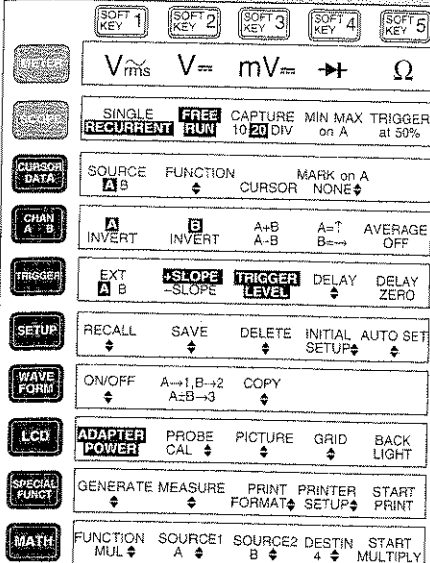

51722

