



Agilent X-Series Wireless Communications Test Set

This manual provides documentation
for the following test sets:

EXT Test Set E6607A/B/C

**U9071A GSM/EDGE with
EDGE Evolution
Measurement Application:
User's and Programmer's
Reference**



Agilent Technologies

Notices

© Agilent Technologies, Inc.
2010-2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Trademark Acknowledgements

Microsoft® is a U.S. registered trademark of Microsoft Corporation.

Windows® and MS Windows® are U.S. registered trademarks of Microsoft Corporation.

Adobe Acrobat® and Reader® are U.S. registered trademarks of Adobe Systems Incorporated.

Java™ is a U.S. trademark of Sun Microsystems, Inc.

MATLAB® is a U.S. registered trademark of Math Works, Inc.

Norton Ghost™ is a U.S. trademark of Symantec Corporation.

Wikipedia® is a registered trademark of the Wikimedia Foundation.

Manual Part Number

U9071-90011

Supersedes: U9071-90007 and U9071-90009

Print Date

February 2013

Supersedes: N/A

Printed in USA

Agilent Technologies Inc.
1400 Fountaingrove Parkway
Santa Rosa, CA 95403

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government

prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Warranty

This Agilent technologies instrument product is warranted against defects in material and workmanship for a period of one year from the date of shipment. During the warranty period, Agilent Technologies will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies, and Agilent Technologies shall pay shipping charges to return the product to Buyer. For products returned to Agilent Technologies from another country, Buyer shall pay all shipping charges, duties, and taxes.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URLs, according to the name of your product:

<http://www.agilent.com/find/ext>

To receive the latest updates by email, subscribe to Agilent Email Updates at the following URL:

<http://www.agilent.com/find/emailupdates>

Information on preventing test set damage can be found at:

<http://www.agilent.com/find/tips>

Is your product software up-to-date?

Periodically, Agilent releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Agilent Technical Support website at:

<http://www.agilent.com/find/techsupport>

Contents

1. Using Help

How Help is Organized	80
Front Panel Keys used by the Help System	83
Navigating the Help Files	85
Basic Help Window Operations	86
Navigating Help with a Mouse	87
Navigating Help Without a Mouse	88
Definition of Terms	93
Viewing Help Files on a separate Computer	95
Other Help Resources	97
Context Sensitive Help not Available	99

2. About the Test Set

How the Test Set Is Used	102
Receiver Testing	102
Transmitter Testing	102
Hardware Elements of the Test Set	103
Software Elements of the Test Set	108
Methods of Operating the Source	111
Waveform Segment Files	111
Methods of Operating the Analyzer	111
Creating Sequences	111
Executing Sequences	112
Installing Application Software	113
Viewing a license key	113
Obtaining and installing a license key	113
Missing and old Measurement application software	114
X-Series options and accessories	115
Front-Panel Features (E6607A/B)	116
Overview of key types	118
Front-Panel Features (E6607C)	123
Overview of key types	125
Display Annotations	129
Test Set Display Indicators	131
Rear-Panel Features	132
Window Control Keys	134
Multi-Window	134
Zoom	134
Next Window	135
Mouse and Keyboard Control	137
Right-Click	137
Virtual Front Panel	139
PC Keyboard	140
Instrument Security & Memory Volatility	144

3. About the GSM/EDGE Measurement Application

4. Programming the Test Set

Contents

What Programming Information is Available?	148
IEEE Common GPIB Commands	149
Calibration Query	149
Clear Status	149
Standard Event Status Enable	149
Standard Event Status Register Query	150
Identification Query	150
Instrument Model Number	151
Operation Complete	151
Query Instrument Options	152
Recall Instrument State	152
Save Instrument State	153
Service Request Enable	153
Status Byte Query	154
Trigger	154
Self Test Query	154
Wait-to-Continue	155

5. System Functions

File	158
File Explorer	158
Page Setup	159
Print	160
Maximize/Restore Down	160
Minimize	161
Exit	161
Mode Preset	162
Restore Mode Defaults	164
Meas Preset	165
Preset Type (Remote Command Only)	165
*RST (Remote Command Only)	166
Print	167
Quick Save	168
Recall	170
State	171
Trace (+State)	176
Sequences	179
Data (Import)	181
Save	183
State	183
Trace (+State)	188
Sequences	190
Data (Export)	192
Screen Image	194
Mass Storage Catalog (Remote Command Only)	198
Mass Storage Change Directory (Remote Command Only)	198
Mass Storage Copy (Remote Command Only)	198
Mass Storage Delete (Remote Command Only)	199
Mass Storage Data (Remote Command Only)	199

Contents

Mass Storage Make Directory (Remote Command Only).....	200
Mass Storage Move (Remote Command Only)	200
Mass Storage Remove Directory (Remote Command Only)	200
System.....	202
Show	202
Power On.....	209
Alignments	219
I/O Config	261
Restore Defaults	270
Control Panel.....	275
Licensing.....	275
Security	278
Diagnostics	278
Service.....	290
Internet Explorer.....	290
System Remote Commands (Remote Commands Only)	290
User Preset	294
User Preset.....	294
User Preset All Modes.....	295
Save User Preset	296

6. EDGE Power vs. Time Measurement

AMPTD Y Scale	302
Ref Value	302
Attenuation	304
Scale/Div	304
Internal Preamp	306
Ref Position.....	306
Auto Scaling	307
Auto Couple	310
BW	311
Info BW	311
Filter Type	312
Cont (Continuous Measurement/Sweep)	313
FREQ Channel	314
Input/Output	315
Marker.....	316
Select Marker	316
Marker Type	316
Marker X-axis Value (Remote Command Only).....	317
Marker X-axis Position (Remote Command Only).....	317
Marker Y-axis Value (Remote Command Only).....	318
Properties.....	319
Couple Markers	321
All Markers Off.....	321
Marker Function	322
Marker To	323
Meas	324
Meas Setup	325

Avg/Hold Num	325
Avg Mode	325
Avg Type	326
Meas Time	327
Burst Sync	328
IF Gain	329
Limit Test	330
Limit Mask	331
Advanced	332
Meas Preset	335
Custom Limit Mask (Remote Commands Only)	336
Lower Limit within Useful Part (Remote Commands Only)	340
Mode	343
Mode Setup	344
Peak Search	345
Recall	346
Restart	347
Save	348
Single	349
Source (Internal)	350
SPAN X Scale	351
Ref Value	351
Scale/Div	352
Ref Position	354
Auto Scaling	355
Sweep/Control	358
Trace/Detector	359
Max Hold Trace	359
Min Hold Trace	360
Trigger	361
View/Display	362
Display	362
View Selection	362
Limit Mask	370

7. EDGE EVM Measurement

AMPTD Y Scale	380
Ref Value	380
Attenuation	381
Range	382
Scale/Div	382
Internal Preamp	383
Ref Position	384
Auto Scaling	384
Auto Couple	386
BW	387
Cont (Continuous Measurement/Sweep)	388
FREQ Channel	389
Input/Output	390

Contents

Marker	391
Select Marker	391
Marker Type	391
Marker X-axis Value (Remote Command Only)	392
Marker X-axis Position (Remote Command Only)	392
Marker Y-axis Value (Remote Command Only)	393
Properties	394
Couple Markers	396
All Markers Off	396
Marker Function	397
Marker To	398
Meas	399
Meas Setup	400
Avg /Hold Num	400
Avg Mode	401
Burst Sync	401
IF Gain	402
Limits	404
Droop Compensation	461
Freq Error Tolerance Rng	461
Polar Mod Align	462
Meas Preset	462
Mode	463
Mode Setup	464
Peak Search	465
Min Peak Search (Backward Compatibility/Remote Command Only)	465
Recall	466
Restart	467
Save	468
Single (Single Measurement/Sweep)	469
Source (Internal)	470
SPAN X Scale	471
Ref Value	471
Scale/Div	472
Ref Position	472
Auto Scaling	473
Sweep/Control	474
Trace/Detector	475
Max Hold Trace	475
Min Hold Trace	475
Trigger	477
View/Display	478
Display	478
View Selection	478
View Selection by number (SCPI only)	479
I/Q Measured Polar Graph	480
I/Q Error	485
Data Bits	489

8. EDGE Output RF Spectrum Measurement

AMPTD Y Scale	503
Ref Value	503
Attenuation	504
Scale/Div	504
Internal Preamp	505
Ref Position	505
Auto Scaling	506
Auto Couple	507
BW	508
Cont (Continuous Measurement/Sweep)	509
FREQ Channel	510
Input/Output	511
Marker	512
Select Marker	512
Marker Type	512
Properties	515
Couple Markers	517
All Markers Off	517
Marker State (Backwards Compatibility/Remote Command Only)	518
Marker Function	519
Marker To	520
Meas	521
Meas Setup	522
Avg/Hold Num	522
Meas Type	523
Mod Average	525
Power Ref Carrier	526
Meas Method	529
Non-Contiguous Meas Region	537
Advanced	539
Meas Preset	558
Select Modulation Method (Backwards Compatibility/Remote Command Only)	558
Mode	560
Mode Setup	561
Peak Search	562
Min Peak Search (Backwards Compatibility/Remote Command Only)	562
Recall	563
Restart	564
Save	565
Single (Single Measurement/Sweep)	566
Source (Internal)	567
SPAN X Scale	568
Ref Value	568
Scale/Div	569
Ref Position	571
Auto Scaling	572
Sweep/Control	573
Trace/Detector	574

Trigger	575
View/Display	576
Display	576
View Selection	576
Multi Offset Views	578
Single Offset Views	599
Swept Spectrum Views	605

9. GMSK Phase and Frequency Measurement

AMPTD Y Scale	616
Ref Value	616
Attenuation	617
Range	618
Scale/Div	618
Internal Preamp	620
Ref Position	620
Auto Scaling	621
Auto Couple	622
BW	623
Cont (Continuous Measurement/Sweep)	624
FREQ Channel	625
Input/Output	626
Marker	627
Select Marker	627
Marker Type	627
Marker X-axis Value (Remote Command Only)	628
Marker X-axis Position (Remote Command Only)	629
Marker Y-axis Value (Remote Command Only)	629
Properties	630
Couple Markers	632
All Markers Off	632
Marker Function	634
Marker To	635
Meas	636
Meas Setup	637
Avg/Hold Num	637
Avg Mode	638
Burst Sync	638
IF Gain	639
Limits	641
Meas Preset	647
Mode	648
Mode Setup	649
Peak Search	650
Recall	651
Restart	652
Save	653
Single (Single Measurement/Sweep)	654
Source (Internal)	655

SPAN X Scale.....	656
Ref Value.....	656
Scale/Div.....	657
Ref Position.....	659
Auto Scaling.....	660
Sweep/Control.....	661
Trace/Detector.....	662
Trigger.....	663
View/Display.....	664
Display.....	664
View.....	664

10. Transmit Power (Burst Power)

AMPTD Y Scale.....	676
Y Ref Value.....	676
Attenuation.....	676
Scale/Division.....	677
Internal Preamp.....	677
Ref Position.....	678
Auto Scaling.....	678
Auto Couple.....	680
BW.....	681
Res BW.....	681
RBW Control.....	682
Cont (Continuous).....	683
FREQ/Channel.....	684
Input/Output.....	685
Marker.....	686
Select Marker.....	686
Marker Type.....	686
Marker X Axis Value.....	687
Marker X Axis Position (Remote Command Only).....	688
Marker Y Axis Value (Remote Command Only).....	688
Properties.....	689
Couple Markers.....	691
All Markers Off.....	692
Marker Function.....	693
Marker To.....	694
Meas.....	695
Meas Setup.....	696
Avg/Hold Num.....	696
Avg Mode.....	697
Avg Type.....	697
Threshold Lvl.....	699
Meas Method.....	700
Burst Width.....	701
IF Gain.....	702
Meas Interval (for TD-SCDMA mode).....	704
Meas Preset.....	705

Mode	706
Mode Setup	707
Peak Search	708
Recall	709
Restart	710
Save	711
Single	712
Source (Internal)	713
SPAN X Scale	714
Ref Value	714
Scale/Div	714
Ref Position	715
Auto Scaling	716
Sweep/Control	717
Sweep Time (for GSM mode)	717
Pause/Resume	717
Trace/Detector	719
Max Hold Trace	719
Min Hold Trace	719
Trigger	721
View/Display	722
Display	725
Bar Graph	726

11. Common Measurement Functions

AMPTD Y Scale	729
Reference Level	729
Attenuation	730
Range	742
Scale / Div	748
Scale Type	749
Presel Center	749
Preselector Adjust	751
Y Axis Unit	752
Reference Level Offset	759
μ W Path Control	760
Internal Preamp	765
Auto Couple	769
BW	771
Res BW	771
Video BW	773
VBW:3dB RBW	774
Span:3dB RBW	776
RBW Control	777
Cont (Continuous Measurement/Sweep)	783
FREQ/Channel	785
ARFCN	785
Center Frequency	786
BMT Freq	789

Multi Carrier Setup	793
Timeslot	803
Burst Type	803
TSC (Std)	803
Input/Output	805
RF Input	807
RF Calibrator	810
External Gain	812
Restore Input/Output Defaults	816
Data Source	816
Corrections	818
Freq Ref In	831
RF Output & Test Set Config	834
Output Config	868
Marker	879
Select Marker	882
Normal	882
Delta	883
Fixed	883
Off	884
Properties	885
Marker Table	892
Marker Count	892
Couple Markers	896
All Markers Off	897
Marker Function	899
Select Marker	900
Marker Noise	900
Band/Interval Power	902
Band/Interval Density	902
Marker Function Off	904
Band Adjust	904
Measure at Marker	908
Marker To	919
Mkr->CF	919
Mkr->CF Step	920
Mkr->Start	920
Mkr->Stop	921
Mkr Δ ->Span	921
Mkr Δ ->CF	922
Mkr->Ref Lvl	922
Meas	925
Remote Measurement Functions	925
Meas Setup	941
Average/Hold Number	941
Average Type	942
Limits	945
N dB Points	967
PhNoise Opt	970

Contents

ADC Dither	973
Swept IF Gain	975
FFT IF Gain	977
Analog Demod Tune & Listen	979
Mode	987
Application Mode Number Selection (Remote Command Only)	989
Application Mode Catalog Query (Remote Command Only)	990
Application Identification (Remote Commands Only)	991
Application Identification Catalog (Remote Commands Only)	992
Detailed List of Modes	994
Global Settings	998
Mode Setup	1001
Radio	1001
Demod	1008
Noise Reduction	1022
Restore Mode Defaults	1024
Peak Search	1025
Next Peak	1025
Next Pk Right	1026
Next Pk Left	1026
Marker Delta	1027
Mkr->CF	1027
Mkr->Ref Lvl	1027
Peak Criteria	1028
Peak Table	1032
Continuous Peak Search On/Off	1036
Pk-Pk Search	1037
Min Search	1038
Recall	1039
Amplitude Correction	1039
Restart	1045
Save	1047
Amplitude Correction	1047
Single (Single Measurement/Sweep)	1055
Source (Internal)	1057
RF Output	1057
Amplitude	1057
Modulation	1062
Frequency	1063
Modulation Setup	1095
Multiport Adapter Output Port Amplitude Correction Configuration Validation (Remote Command Only)	1145
List Sequencer	1145
Source Preset	1189
Source Self Test	1190
Recall	1190
Save	1190
Signal Studio Commands	1190
Sequence Studio Commands	1192

Span	1195
Span	1195
Full Span	1196
Zero Span	1197
Last Span	1198
Sweep/Control	1199
Sweep Time	1199
Sweep Setup	1201
Pause/Resume	1212
Gate	1213
Points	1228
Zoom Points	1230
Abort (Remote Command Only)	1231
Trace/Detector	1233
Select Trace	1235
Clear Write	1236
Trace Average	1236
Max Hold	1237
Min Hold	1238
View/Blank	1239
Detector	1242
Preset Detectors	1249
Clear Trace	1251
Clear All Traces	1251
Math	1251
Copy/Exchange	1263
Send/Query Trace Data (Remote Command Only)	1264
Format Data: Numeric Data (Remote Command Only)	1266
Format Data: Byte Order (Remote Command Only)	1267
Smooth Trace Data (Remote Command Only)	1268
Number of Points for Smoothing (Remote Command Only)	1268
Mean Trace Data (Remote Command Only)	1269
Trigger	1271
Free Run	1279
Video (IF Envelope)	1280
Line	1284
External 1	1286
External 2	1289
RF Burst	1292
Periodic Timer (Frame Trigger)	1298
Baseband I/Q	1306
TV	1317
Auto/Holdoff	1323
View/Display	1327
Display	1327
Full Screen	1336
Display Enable (Remote Command Only)	1336

List of Commands

This list includes every SCPI command described in this document. To find a command in the list, search according to its first alphanumeric character, ignoring any leading "*", ":" or "[" characters.

:ABORt.	1231
*CAL?	228
:CALCulate:BWIDth BANDwidth:NDB <rel_ampl>.....	967
:CALCulate:BWIDth BANDwidth:NDB?	967
:CALCulate:BWIDth BANDwidth:RESult?	968
:CALCulate:BWIDth BANDwidth[:STATe] OFF ON 0 1	967
:CALCulate:BWIDth BANDwidth[:STATe]?	967
:CALCulate:CLIMits:FAIL?	930
:CALCulate:DATA<n>:COMPRESS? BLOCK CFIT MAXimum MINimum MEAN DMEan RMS RM- SCubed SAMPLE SDEVIation PPHase [,<soffset>[,<length>[,<roffset>[,<rlimit>]]]]	931
:CALCulate:DATA[1] 2 3 4 5 6:PEAKs? <threshold>,<excursion>[,<AMPLitude FREQuency TIME]	936
:CALCulate:DATA[n]?	930
:CALCulate:EEVM:LIMit:BTS:EXTReme:EVMP95 <real>.....	438
:CALCulate:EEVM:LIMit:BTS:EXTReme:EVMP95?	438
:CALCulate:EEVM:LIMit:BTS:EXTReme:FERRor <real>.....	446
:CALCulate:EEVM:LIMit:BTS:EXTReme:FERRor?	446
:CALCulate:EEVM:LIMit:BTS:EXTReme:IQOOffset <real>.....	442
:CALCulate:EEVM:LIMit:BTS:EXTReme:IQOOffset?	442
:CALCulate:EEVM:LIMit:BTS:EXTReme:PEVM <real>.....	434
:CALCulate:EEVM:LIMit:BTS:EXTReme:PEVM?	434
:CALCulate:EEVM:LIMit:BTS:EXTReme:PPERror GMSK, <real>	458
:CALCulate:EEVM:LIMit:BTS:EXTReme:PPERror? GMSK	458
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM <real>.....	406
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM?	406
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate QAM16, <real>	422
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate QAM32, <real>	426

List of Commands

:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate QPSK, <real>	418
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate? QAM16	422
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate? QAM32	426
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:HSRate? QPSK	418
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate AQPSK1, <real>	430
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate AQPSK2, <real>	432
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate QAM16, <real>	411
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate QAM32, <real>	414
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? AQPSK1	430
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? AQPSK2	432
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? QAM16	411
:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? QAM32	414
:CALCulate:EEVM:LIMit:BTS:EXTReme:RPERror GMSK, <real>	454
:CALCulate:EEVM:LIMit:BTS:EXTReme:RPERror? GMSK	454
:CALCulate:EEVM:LIMit:BTS:NORMal:EVMP95 <real>	438
:CALCulate:EEVM:LIMit:BTS:NORMal:EVMP95?	438
:CALCulate:EEVM:LIMit:BTS:NORMal:FERRor <real>	446
:CALCulate:EEVM:LIMit:BTS:NORMal:FERRor?	446
:CALCulate:EEVM:LIMit:BTS:NORMal:IQOOffset <real>	442
:CALCulate:EEVM:LIMit:BTS:NORMal:IQOOffset?	442
:CALCulate:EEVM:LIMit:BTS:NORMal:PEVM <real>	434
:CALCulate:EEVM:LIMit:BTS:NORMal:PEVM?	434
:CALCulate:EEVM:LIMit:BTS:NORMal:PPERror GMSK, <real>	458
:CALCulate:EEVM:LIMit:BTS:NORMal:PPERror? GMSK	458
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM <real>	406
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM?	406
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QAM16, <real>	422
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QAM32, <real>	426
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QPSK, <real>	418
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QAM16	422
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QAM32	426

List of Commands

:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QPSK	418
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate AQPSK1, <real>	430
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate AQPSK2, <real>	432
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate QAM16, <real>	409
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate QAM32, <real>	414
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? AQPSK1	430
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? AQPSK2	432
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? QAM16	409
:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? QAM32	414
:CALCulate:EEVM:LIMit:BTS:NORMal:RPERror GMSK, <real>	454
:CALCulate:EEVM:LIMit:BTS:NORMal:RPERror? GMSK	454
:CALCulate:EEVM:LIMit:MBTS:EXTReme:FERRor <real>	448
:CALCulate:EEVM:LIMit:MBTS:EXTReme:FERRor?	448
:CALCulate:EEVM:LIMit:MBTS:NORMal:FERRor <real>	448
:CALCulate:EEVM:LIMit:MBTS:NORMal:FERRor?	448
:CALCulate:EEVM:LIMit:MS:EXTReme:EVMP95 <real>	440
:CALCulate:EEVM:LIMit:MS:EXTReme:EVMP95?	440
:CALCulate:EEVM:LIMit:MS:EXTReme:FERRor <real>	452
:CALCulate:EEVM:LIMit:MS:EXTReme:FERRor?	452
:CALCulate:EEVM:LIMit:MS:EXTReme:IQOOffset <real>	444
:CALCulate:EEVM:LIMit:MS:EXTReme:IQOOffset?	444
:CALCulate:EEVM:LIMit:MS:EXTReme:PEVM <real>	436
:CALCulate:EEVM:LIMit:MS:EXTReme:PEVM?	436
:CALCulate:EEVM:LIMit:MS:EXTReme:PPERror GMSK, <real>	460
:CALCulate:EEVM:LIMit:MS:EXTReme:PPERror? GMSK	460
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM <real>	408
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM?	408
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate QAM16, <real>	424
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate QAM32, <real>	428
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate QPSK, <real>	420
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate? QAM16	424

List of Commands

:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate? QAM32	428
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:HSRate? QPSK	420
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate QAM16, <real>	413
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate QAM32, <real>	416
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate? QAM16	413
:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate? QAM32	416
:CALCulate:EEVM:LIMit:MS:EXTReme:RPERror GMSK, <real>	456
:CALCulate:EEVM:LIMit:MS:EXTReme:RPERror? GMSK	456
:CALCulate:EEVM:LIMit:MS:NORMal:EVMP95 <real>	440
:CALCulate:EEVM:LIMit:MS:NORMal:EVMP95?	440
:CALCulate:EEVM:LIMit:MS:NORMal:FERRor <real>	452
:CALCulate:EEVM:LIMit:MS:NORMal:FERRor?	452
:CALCulate:EEVM:LIMit:MS:NORMal:IQOOffset <real>	444
:CALCulate:EEVM:LIMit:MS:NORMal:IQOOffset?	444
:CALCulate:EEVM:LIMit:MS:NORMal:PEVM <real>	436
:CALCulate:EEVM:LIMit:MS:NORMal:PEVM?	436
:CALCulate:EEVM:LIMit:MS:NORMal:PPERror GMSK, <real>	460
:CALCulate:EEVM:LIMit:MS:NORMal:PPERror? GMSK	460
:CALCulate:EEVM:LIMit:MS:NORMal:REVM <real>	408
:CALCulate:EEVM:LIMit:MS:NORMal:REVM?	408
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QAM16, <real>	424
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QAM32, <real>	428
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QPSK, <real>	420
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QAM16	424
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QAM32	428
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QPSK	420
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate QAM16, <real>	411
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate QAM32, <real>	416
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate? QAM16	411
:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate? QAM32	416
:CALCulate:EEVM:LIMit:MS:NORMal:RPERror GMSK, <real>	456

List of Commands

:CALCulate:EEVM:LIMit:MS:NORMal:RPERror? GMSK	456
:CALCulate:EEVM:LIMit:PBTS:EXTRemE:FERRor <real>.....	450
:CALCulate:EEVM:LIMit:PBTS:EXTRemE:FERRor?	450
:CALCulate:EEVM:LIMit:PBTS:NORMal:FERRor <real>.....	450
:CALCulate:EEVM:LIMit:PBTS:NORMal:FERRor?.....	450
:CALCulate:EEVM:LIMit:TEST[:STATe] OFF ON 0 1	404
:CALCulate:EEVM:LIMit:TEST[:STATe]?	404
:CALCulate:EEVM:LIMit:TYPE NORMal EXTRemE.....	405
:CALCulate:EEVM:LIMit:TYPE?.....	405
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum.....	465
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum	465
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF	391
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	391
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>.....	394
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?	394
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe POLar	395
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?.....	395
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real>.....	392
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?.....	392
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer>	393
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?.....	393
:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?.....	393
:CALCulate:EEVM:MARKer:AOFF.....	396
:CALCulate:EEVM:MARKer:COUPle[:STATe] ON OFF 1 0	396
:CALCulate:EEVM:MARKer:COUPle[:STATe]?.....	396
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum	562
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum	562
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF	512
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	512
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>.....	516
:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?.....	516

List of Commands

:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1	518
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:STATe?	518
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:TRACe RFEMod RFESwitching SPEMod LIMMod	516
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:TRACe?	516
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X <real>	513
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X?	513
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer>	514
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X:POSition?	514
:CALCulate:EORFspectr:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:Y?	515
:CALCulate:EORFspectr:MARKer:AOFF	518
:CALCulate:EORFspectr:MARKer:COUPlE[:STATe] ON OFF 1 0	517
:CALCulate:EORFspectr:MARKer:COUPlE[:STATe]?	517
:CALCulate:EPVTime:LIMit:TEST[:STATe] OFF ON 0 1	330
:CALCulate:EPVTime:LIMit:TEST[:STATe]?	330
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:MAXimum	345
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF	316
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:MODE?	316
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>	319
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:REFerence?	319
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:TRACe RFENvelope UMASK LMASK MAXRfenvelop MINRfenvelop	320
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:TRACe?	320
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X <real>	317
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X?	317
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer>	318
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:X:POSition?	318
:CALCulate:EPVTime:MARKer[1]2 3 4 5 6 7 8 9 10 11 12:Y?	319
:CALCulate:EPVTime:MARKer:AOFF	321
:CALCulate:EPVTime:MARKer:COUPlE[:STATe] ON OFF 1 0	321
:CALCulate:EPVTime:MARKer:COUPlE[:STATe]?	321
:CALCulate:LIMit[1]2 3 4 5 6:CLEar	965

List of Commands

:CALCulate:LLIMit[1] 2 3 4 5 6:CONTRol[:DATA] <x>, <x>,	963
:CALCulate:LLIMit[1] 2 3 4 5 6:CONTRol[:DATA]?	963
:CALCulate:LLIMit[1] 2 3 4 5 6:CONTRol:POINts?	963
:CALCulate:LLIMit[1] 2 3 4 5 6:FAIL?	965
:CALCulate:LLIMit[1] 2 3 4 5 6:LOWer[:DATA] <ampl>,	964
:CALCulate:LLIMit[1] 2 3 4 5 6:LOWer[:DATA]?	964
:CALCulate:LLIMit[1] 2 3 4 5 6:LOWer:POINts?	964
:CALCulate:LLIMit[1] 2 3 4 5 6:STATe ON OFF 0 1	962
:CALCulate:LLIMit[1] 2 3 4 5 6:STATe?	962
:CALCulate:LLIMit[1] 2 3 4 5 6:UPPer[:DATA] <ampl>, <ampl>,	964
:CALCulate:LLIMit[1] 2 3 4 5 6:UPPer[:DATA]?	964
:CALCulate:LLIMit[1] 2 3 4 5 6:UPPer:POINts?	964
:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative ON OFF 1 0	952
:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative?	952
:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:INTerpolate:TYPE LOGarithmic LINear	950
:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:INTerpolate:TYPE?	950
:CALCulate:LLINe[1] 2 3 4 5 6:BUILd TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	956
:CALCulate:LLINe[1] 2 3 4 5 6:COMMeNt "text"	953
:CALCulate:LLINe[1] 2 3 4 5 6:COMMeNt?	953
:CALCulate:LLINe[1] 2 3 4 5 6:CONTRol:INTerpolate:TYPE LOGarithmic LINear	950
:CALCulate:LLINe[1] 2 3 4 5 6:CONTRol:INTerpolate:TYPE?	950
:CALCulate:LLINe[1] 2 3 4 5 6:COpy LLINe1 LLINe2 LLINe3 LLINe4 LLINe5 LLINe6	956
:CALCulate:LLINe[1] 2 3 4 5 6:DATA <x>,<ampl>,<connect>	961
:CALCulate:LLINe[1] 2 3 4 5 6:DATA?	961
:CALCulate:LLINe[1] 2 3 4 5 6:DATA:MERGe <x-axis>,<ampl>,<connected>	966
:CALCulate:LLINe[1] 2 3 4 5 6:DELete	959
:CALCulate:LLINe[1] 2 3 4 5 6:DESCRiption "Description"	952
:CALCulate:LLINe[1] 2 3 4 5 6:DESCRiption?	952
:CALCulate:LLINe[1] 2 3 4 5 6:DISPlay OFF ON 0 1	947
:CALCulate:LLINe[1] 2 3 4 5 6:DISPlay?	947
:CALCulate:LLINe[1] 2 3 4 5 6:FAIL?	962

List of Commands

:CALCulate:LLINE[1] 2 3 4 5 6:FREQuency:CMODE:RELative ON OFF 1 0	951
:CALCulate:LLINE[1] 2 3 4 5 6:FREQuency:CMODE:RELative?	951
:CALCulate:LLINE[1] 2 3 4 5 6:MARGin <rel_ampl>	953
:CALCulate:LLINE[1] 2 3 4 5 6:MARGin?	953
:CALCulate:LLINE[1] 2 3 4 5 6:MARGin:STATe OFF ON 0 1	953
:CALCulate:LLINE[1] 2 3 4 5 6:MARGin:STATe?	953
:CALCulate:LLINE[1] 2 3 4 5 6:OFFSet:UPDate	958
:CALCulate:LLINE[1] 2 3 4 5 6:OFFSet:X <value>	957
:CALCulate:LLINE[1] 2 3 4 5 6:OFFSet:X?	957
:CALCulate:LLINE[1] 2 3 4 5 6:OFFSet:Y <rel_ampl>	958
:CALCulate:LLINE[1] 2 3 4 5 6:OFFSet:Y?	958
:CALCulate:LLINE[1] 2 3 4 5 6:TRACe 1 2 3 4 5 6	948
:CALCulate:LLINE[1] 2 3 4 5 6:TRACe?	948
:CALCulate:LLINE[1] 2 3 4 5 6:TYPE UPPer LOWer	949
:CALCulate:LLINE[1] 2 3 4 5 6:TYPE?	949
:CALCulate:LLINE:ALL:DELeTe	961
:CALCulate:LLINE:CMODE FIXed RELative	966
:CALCulate:LLINE:CMODE?	966
:CALCulate:LLINE:CONTRol:DOMain FREQuency TIME	960
:CALCulate:LLINE:CONTRol:DOMain?	960
:CALCulate:LLINE:TEST OFF ON 0 1	960
:CALCulate:LLINE:TEST?	960
:CALCulate:MAMarker:COUPling ON OFF 1 0	917
:CALCulate:MAMarker:COUPling?	917
:CALCulate:MAMarker:DETEctor[1] 2 3 OFF NORMal AVERage POSitive SAMPle NEGative QPEak EAverage RAverage	913
:CALCulate:MAMarker:DETEctor[1] 2 3?	913
:CALCulate:MAMarker:DETEctor[1] 2 3:DWELl <dwel time>	913
:CALCulate:MAMarker:DETEctor[1] 2 3:DWELl?	913
:CALCulate:MAMarker:PCENter ON OFF 1 0	918
:CALCulate:MAMarker:PCENter?	918

List of Commands

:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CPSearch[:STATe] ON OFF 0 1	1036
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CPSearch[:STATe]?	1036
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime <time>	896
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime?	896
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime:AUTO OFF ON 0 1	896
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:GATetime:AUTO?	896
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt[:STATe] OFF ON 0 1	893
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt[:STATe]?	893
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FCOunt:X?	894
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION NOISe BPOWer BDENsity OFF	899
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION?	899
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:LEFT <freq>	906
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:LEFT?	906
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:RIGHT <freq>	907
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:RIGHT?	907
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:SPAN <freq>	905
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:BAND:SPAN?	905
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTION:MAMarker?	908
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:LINes[:STATe] OFF ON 0 1	891
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:LINes[:STATe]?	891
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum	1025
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT	1026
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT	1026
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT	1026
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum	1038
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA FIXed OFF	879
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	879
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak	1038
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>	885
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?	885
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:CENTer	919

List of Commands

:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DELTA:CENTer	922
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DELTA:SPAN	921
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:RLEVel	923
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:START	920
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:STEP	920
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:STOP	921
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe 1 2 3 4 5 6	890
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?	890
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe:AUTO OFF ON 0 1	891
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe:AUTO?	891
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq>	880
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?	880
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>	881
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?	881
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:READout FREQuency TIME ITIME PERiod	887
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:READout?	887
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:READout:AUTO ON OFF 1 0	887
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:READout:AUTO?	887
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y <real>	882
:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?	882
:CALCulate:MARKer:AOFF	897
:CALCulate:MARKer:COUPle[:STATe] OFF ON 0 1	896
:CALCulate:MARKer:COUPle[:STATe]?	896
:CALCulate:MARKer:PEAK:EXCursion <rel_ampl>	1030
:CALCulate:MARKer:PEAK:EXCursion?	1030
:CALCulate:MARKer:PEAK:EXCursion:STATe OFF ON 0 1	1030
:CALCulate:MARKer:PEAK:EXCursion:STATe?	1030
:CALCulate:MARKer:PEAK:SEARch:MODE MAXimum PARAmeter	1028
:CALCulate:MARKer:PEAK:SEARch:MODE?	1028
:CALCulate:MARKer:PEAK:SORT FREQuency AMPLitude	1033
:CALCulate:MARKer:PEAK:SORT?	1033

List of Commands

:CALCulate:MARKer:PEAK:TABLE:READout ALL GTDLine LTDLine	1034
:CALCulate:MARKer:PEAK:TABLE:READout?	1034
:CALCulate:MARKer:PEAK:TABLE:STATE OFF ON 0 1	1033
:CALCulate:MARKer:PEAK:TABLE:STATE?	1033
:CALCulate:MARKer:PEAK:THReshold <ampl>	1031
:CALCulate:MARKer:PEAK:THReshold?	1031
:CALCulate:MARKer:PEAK:THReshold:STATE OFF ON 0 1	1031
:CALCulate:MARKer:PEAK:THReshold:STATE?	1031
:CALCulate:MARKer:TABLE[:STATE] OFF ON 0 1	892
:CALCulate:MARKer:TABLE[:STATE]?	892
:CALCulate:MATH TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, PDIFference PSUM LOFF-set LDIFference OFF, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, <real>,<real>	1252
:CALCulate:MATH? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	1252
:CALCulate:NTData[:STATE] OFF ON 0 1	1259
:CALCulate:NTData[:STATE]?	1259
:CALCulate:PFERror:LIMit:BTS:FERRor <real>	645
:CALCulate:PFERror:LIMit:BTS:FERRor?	645
:CALCulate:PFERror:LIMit:BTS:PPHase <real>	643
:CALCulate:PFERror:LIMit:BTS:PPHase?	643
:CALCulate:PFERror:LIMit:BTS:RPHase <real>	642
:CALCulate:PFERror:LIMit:BTS:RPHase?	642
:CALCulate:PFERror:LIMit:MBTS:FERRor <real>	645
:CALCulate:PFERror:LIMit:MBTS:FERRor?	645
:CALCulate:PFERror:LIMit:MS:FERRor <real>	646
:CALCulate:PFERror:LIMit:MS:FERRor?	646
:CALCulate:PFERror:LIMit:MS:PPHase <real>	644
:CALCulate:PFERror:LIMit:MS:PPHase?	644
:CALCulate:PFERror:LIMit:MS:RPHase <real>	642
:CALCulate:PFERror:LIMit:MS:RPHase?	642
:CALCulate:PFERror:LIMit:PBTS:FERRor <real>	646
:CALCulate:PFERror:LIMit:PBTS:FERRor?	646

List of Commands

:CALCulate:PFERror:LIMit:TEST[:STATe] OFF ON 0 1	641
:CALCulate:PFERror:LIMit:TEST[:STATe]?	641
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum	650
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF	627
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	627
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>	631
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?	631
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe PERRor PFERror RFENvelope POLar	631
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?	631
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real>	628
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?	628
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer>	629
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?	629
:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?	630
:CALCulate:PFERror:MARKer:AOFF	632
:CALCulate:PFERror:MARKer:COUPlE[:STATe] ON OFF 1 0	632
:CALCulate:PFERror:MARKer:COUPlE[:STATe]?	632
:CALCulate:TRACe[1] 2 3 4 5 6:FAIL?	965
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum	708
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF	686
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?	686
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer>	690
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?	690
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFENvelope MAXHold MINHold	690
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?	690
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real>	687
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?	687
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>	688
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?	688
:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?	689
:CALCulate:TXPower:MARKer:AOFF	692

List of Commands

:CALCulate:TXPower:MARKer:COUPlE[:STATe] ON OFF 1 0	691
:CALCulate:TXPower:MARKer:COUPlE[:STATe]?	691
:CALibration[:ALL]?	227
:CALibration[:ALL]	227
:CALibration:AUTO ON PARTial OFF	219
:CALibration:AUTO?	219
:CALibration:AUTO:ALERT TTEMPerature DAY WEEK NONE	223
:CALibration:AUTO:ALERT?	223
:CALibration:AUTO:MODE ALL NRF	222
:CALibration:AUTO:MODE?	222
:CALibration:AUTO:TIME:OFF?	237
:CALibration:DATA:BACKUp <filename>	246
:CALibration:DATA:DEFault	240
:CALibration:DATA:RESTore <filename>	246
:CALibration:EMIXer?	231
:CALibration:EMIXer	231
:CALibration:EXPIred?	226
:CALibration:FREQUency:REFerence:COARse <integer>	251
:CALibration:FREQUency:REFerence:COARse?	251
:CALibration:FREQUency:REFerence:FINE <integer>	251
:CALibration:FREQUency:REFerence:FINE?	251
:CALibration:FREQUency:REFerence:MODE CALibrated USER	250
:CALibration:FREQUency:REFerence:MODE?	250
:CALibration:INTernal:SOURce[:ALL]?	232
:CALibration:INTernal:SOURce[:ALL]	232
:CALibration:MPADapter:CABLEs:TEST	289
:CALibration:MPADapter:GAIN?	249
:CALibration:MPADapter:GAIN	249
:CALibration:NRF?	229
:CALibration:NRF	229
:CALibration:RF?	230

List of Commands

:CALibration:RFPSelector:ALERt ON OFF 0 1	256
:CALibration:RFPSelector:ALERt?	256
:CALibration:RFPSelector:CONDucted?	252
:CALibration:RFPSelector:CONDucted	252
:CALibration:RFPSelector:FULL?	255
:CALibration:RFPSelector:FULL	255
:CALibration:RFPSelector:RADiated?	254
:CALibration:RFPSelector:RADiated	254
:CALibration:RFPSelector:SCHeduler:RECurrence DAY WEEK OFF	259
:CALibration:RFPSelector:SCHeduler:RECurrence?	259
:CALibration:RFPSelector:SCHeduler:RECurrence:DAY SUN MON TUE WED THU FRI SAT	260
:CALibration:RFPSelector:SCHeduler:RECurrence:DAY?	260
:CALibration:RFPSelector:SCHeduler:RECurrence:WEEK <integer>	260
:CALibration:RFPSelector:SCHeduler:RECurrence:WEEK?	260
:CALibration:RFPSelector:SCHeduler:STATe ON OFF 0 1	261
:CALibration:RFPSelector:SCHeduler:STATe?	261
:CALibration:RFPSelector:SCHeduler:TASK T1 T2 T3	257
:CALibration:RFPSelector:SCHeduler:TASK?	257
:CALibration:RFPSelector:SCHeduler:TIME:NEXT?	238
:CALibration:RFPSelector:SCHeduler:TIME:START "date","time"	257
:CALibration:RFPSelector:SCHeduler:TIME:START?	257
:CALibration:RF	230
:CALibration:SOURce:STATe OFF ON 0 1	811
:CALibration:SOURce:STATe?	811
:CALibration:TEMPerature:CURRent?	234
:CALibration:TEMPerature:LALL?	234
:CALibration:TEMPerature:LPReselector?	236
:CALibration:TEMPerature:LRF?	235
:CALibration:TEMPerature:RFPSelector:LCONDucted?	237
:CALibration:TEMPerature:RFPSelector:LRADiated?	238
:CALibration:TEMPerature:SOURce: LALL?	236

List of Commands

:CALibration:TIME:LALL?	234
:CALibration:TIME:LPReselector?	236
:CALibration:TIME:LRF?	235
:CALibration:TIME:RFPSelector:LCONducted?	237
:CALibration:TIME:RFPSelector:LRADiated?	237
:CALibration:TIME:SOURce:LALL?	235
:CALibration:YTF?	247
:CALibration:YTF	247
*CLS	149
:CONFigure:<Measurement>	165
:CONFigure?	930
:CONFigure:EEVM	373
:CONFigure:EEVM	462
:CONFigure:EEVM:NDEFault	373
:CONFigure:EORFspectr	558
:CONFigure:EORFspectr:NDEFault	495
:CONFigure:EORFspectr	495
:CONFigure:EPVTime	297
:CONFigure:EPVTime	335
:CONFigure:EPVTime:NDEFault	297
:CONFigure:PFERror	611
:CONFigure:PFERror	647
:CONFigure:PFERror:NDEFault	611
:CONFigure:TXPower	705
:CONFigure:TXPower BPOwer	673
:CONFigure:TXPower BPOwer:NDEFault	673
:COUPle ALL NONE	769
:DISPlay:<measurement>:ANNotation:TITLe:DATA <string>	1331
:DISPlay:<measurement>:ANNotation:TITLe:DATA?	1331
:DISPlay:ACTivefunc[:STATe] ON OFF 1 0	1330
:DISPlay:ACTivefunc[:STATe]?	1330

List of Commands

:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1	1328
:DISPlay:ANNotation:MBAR[:STATe]?	1328
:DISPlay:ANNotation:SCREen[:STATe] OFF ON 0 1	1329
:DISPlay:ANNotation:SCREen[:STATe]?	1329
:DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0	1329
:DISPlay:ANNotation:TRACe[:STATe]?	1329
:DISPlay:BACKlight ON OFF	1335
:DISPlay:BACKlight?	1335
:DISPlay:BACKlight:INTensity <integer>	1335
:DISPlay:BACKlight:INTensity?	1335
:DISPlay:EEVM:SDERotation[:STATe] OFF ON 0 1	485
:DISPlay:EEVM:SDERotation[:STATe]?	485
:DISPlay:EEVM:SDOTs[:STATe] OFF ON 0 1	488
:DISPlay:EEVM:SDOTs[:STATe]?	488
:DISPlay:EEVM:TEXT:TFUNit SECond SYMBol	489
:DISPlay:EEVM:TEXT:TFUNit?	489
:DISPlay:EEVM:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONStn	484
:DISPlay:EEVM:VIEW[1]:WINDow2:TRACe:POLar?	484
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPlE ON OFF 1 0	473
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPlE?	473
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:PDIVision <real>	472
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:PDIVision?	472
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:RLEVel <real>	471
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:RLEVel?	471
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt	472
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:X[:SCALe]:RPOSition?	472
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:Y[:SCALe]:COUPlE ON OFF 1 0	384
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:Y[:SCALe]:COUPlE?	384
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom	384
:DISPlay:EEVM:VIEW2:WINDow[1] 2 3:TRACe:Y[:SCALe]:RPOSition?	384
:DISPlay:EEVM:VIEW2:WINDow[1] 3:TRACe:Y[:SCALe]:PDIVision <real>	382

List of Commands

:DISPlay:EEVM:VIEW2:WINDow[1]3:TRACe:Y[:SCALe]:PDIVision?	382
:DISPlay:EEVM:VIEW2:WINDow[1]3:TRACe:Y[:SCALe]:RLEVel <real>	380
:DISPlay:EEVM:VIEW2:WINDow[1]3:TRACe:Y[:SCALe]:RLEVel?	380
:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MAXHold[:STATe] ON OFF 1 0	475
:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MAXHold[:STATe]?	475
:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MINHold[:STATe] ON OFF 1 0	475
:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MINHold[:STATe]?	475
:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>	383
:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision?	383
:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>	381
:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel?	381
:DISPlay:EEVM:VIEW:NSElect <integer>	479
:DISPlay:EEVM:VIEW:NSElect?	479
:DISPlay:EEVM:VIEW[:SElect] POLar ERRor DBITs	478
:DISPlay:EEVM:VIEW[:SElect]?	478
:DISPlay:ENABle OFF ON 0 1	1337
:DISPlay:ENABle?	1337
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON	572
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:COUPle?	572
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt	571
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?	571
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON	506
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:COUPle?	506
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	504
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	504
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	503
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	503
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom	505
:DISPlay:EORFspectr:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	505
:DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time>	570
:DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	570

List of Commands

:DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time>	568
:DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	568
:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <freq>	570
:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	570
:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <freq>	569
:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	569
:DISPlay:EORFspectr:VIEW:NSElect <integer>	578
:DISPlay:EORFspectr:VIEW:NSElect?	578
:DISPlay:EORFspectr:VIEW[:SElect] RSUMmary CINFormation	577
:DISPlay:EORFspectr:VIEW[:SElect]?	577
:DISPlay:EPVTime:LIMit:MASK OFF ON 0 1	370
:DISPlay:EPVTime:LIMit:MASK?	370
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:COUple 0 1 OFF ON	355
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:COUple?	355
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time>	353
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	353
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time>	351
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	351
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT	354
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:X[:SCALe]:RPOStion?	354
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:COUple 0 1 OFF ON	308
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:COUple?	308
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	304
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	304
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	302
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	302
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:RPOStion TOP CENTer BOTTom	306
:DISPlay:EPVTime:VIEW[1]3:WINDow[1]:TRACe:Y[:SCALe]:RPOStion?	306
:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe] ON OFF 1 0	359
:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]?	359
:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe] ON OFF 1 0	360

List of Commands

:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]?	360
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON	356
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:COUPlE?	356
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:PDIVision <time>	353
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:PDIVision?	353
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:RLEVel <time>	352
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:RLEVel?	352
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt	355
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:X[:SCALe]:RPOSition?	355
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON	309
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:COUPlE?	309
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:PDIVision <rel_amp>	305
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:PDIVision?	305
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:RLEVel <real>	303
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:RLEVel?	303
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom	307
:DISPlay:EPVTime:VIEW2:WINDow[1]2:TRACe:Y[:SCALe]:RPOSition?	307
:DISPlay:EPVTime:VIEW:NSElect <integer>	363
:DISPlay:EPVTime:VIEW:NSElect?	363
:DISPlay:EPVTime:VIEW[:SElect] ALL BOTH MSLot	363
:DISPlay:EPVTime:VIEW[:SElect]?	363
:DISPlay:FSCReen[:STATe] OFF ON 0 1	1336
:DISPlay:FSCReen[:STATe]?	1336
:DISPlay:PFERror:BDOTs[:STATe] ON OFF 1 0	671
:DISPlay:PFERror:BDOTs[:STATe]?	671
:DISPlay:PFERror:VIEW[1]:WINDow[1]2 3:TRACe:X[:SCALe]:COUPlE ON OFF 1 0	660
:DISPlay:PFERror:VIEW[1]:WINDow[1]2 3:TRACe:X[:SCALe]:COUPlE?	660
:DISPlay:PFERror:VIEW[1]:WINDow[1]2 3:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt	659
:DISPlay:PFERror:VIEW[1]:WINDow[1]2 3:TRACe:X[:SCALe]:RPOSition?	659
:DISPlay:PFERror:VIEW[1]:WINDow[1]2 3:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom	620
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:X[:SCALe]:PDIVision <real>	658

List of Commands

:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:X[:SCALe]:PDIVision?	658
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:X[:SCALe]:RLEVel <real>	656
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:X[:SCALe]:RLEVel?	656
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:Y[:SCALe]:PDIVision <real>	618
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:Y[:SCALe]:PDIVision?	618
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:Y[:SCALe]:RLEVel <real>	616
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:Y[:SCALe]:RLEVel?	616
:DISPlay:PFERror:VIEW[1]:WINDow[1]2:TRACe:Y[:SCALe]:RPOSITion?	620
:DISPlay:PFERror:VIEW[1]:WINDow[1]23:TRACe:Y[:SCALe]:COUPlE ON OFF 1 0.	621
:DISPlay:PFERror:VIEW[1]:WINDow[1]23:TRACe:Y[:SCALe]:COUPlE?	621
:DISPlay:PFERror:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONStn.	668
:DISPlay:PFERror:VIEW[1]:WINDow2:TRACe:POLar?	668
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALe]:PDIVision <time>	658
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALe]:PDIVision?	658
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALe]:RLEVel <time>	657
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALe]:RLEVel?	657
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	619
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:PDIVision?	619
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:RLEVel <real>	617
:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:RLEVel?	617
:DISPlay:PFERror:VIEW:NSElect <integer>	666
:DISPlay:PFERror:VIEW:NSElect?.	666
:DISPlay:PFERror:VIEW[:SElect] POLar ERRor DBITs	666
:DISPlay:PFERror:VIEW[:SElect]?.	666
:DISPlay:THEMe TDColor TDMonochrome FCOLor FMONochrome.	1334
:DISPlay:THEMe?.	1334
:DISPlay:TXPower:BARGraph[:STATe] ON OFF 1 0	726
:DISPlay:TXPower:BARGraph[:STATe]?.	726
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe] ON OFF 1 0	719
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]?.	719
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe] ON OFF 1 0	720

List of Commands

:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]?	720
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON	716
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPlE?	716
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time>	715
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision?	715
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time>	714
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RLEVel?	714
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT	715
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RPOSition?	715
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON	678
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?	678
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	677
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	677
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	676
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	676
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom	678
:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?	678
:DISPlay:WINDow[1]:ANNotation[:ALL] OFF ON 0 1	1334
:DISPlay:WINDow[1]:ANNotation[:ALL]?	1334
:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1	1332
:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?	1332
:DISPlay:WINDow[1]:TRACe:Y:DLINe <ampl>	1333
:DISPlay:WINDow[1]:TRACe:Y:DLINe?	1333
:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe OFF ON 0 1	1333
:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe?	1333
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel <rel_ampl>	1261
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel?	1261
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition <integer>	1262
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRPosition?	1262
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl>	748
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?	748

List of Commands

:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real>	729
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?	729
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel:OFFSet <rel_ampl>	759
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel:OFFSet?	759
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing LINear LOGarithmic	749
:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing?	749
:DISPlay:WINDow:FORMat:TILE	135
:DISPlay:WINDow:FORMat:ZOOM	135
:DISPlay:WINDow:MAMarker:POSition LEFT RIGHT	912
:DISPlay:WINDow:MAMarker:POSition?	912
:DISPlay:WINDow:MAMarker[:STATe] ON OFF 1 0	912
:DISPlay:WINDow:MAMarker[:STATe]?	912
:DISPlay:WINDow[:SElect] <number>	135
:DISPlay:WINDow[:SElect]?	135
*ESE <integer>	150
*ESE?	150
*ESR?	150
:FEED:RF:PORT:OUTP RFIO1	835
:FETCh:EEVM[n]?	373
:FETCh:EORFspectr[n]?	495
:FETCh:EPVTime[n]?	297
:FETCh:PFERror[n]?	611
:FETCh:TXPower BPOWer[n]?	673
:FORMat:BORDer NORMal SWAPped	1268
:FORMat:BORDer NORMal SWAPped	939
:FORMat:BORDer?	1268
:FORMat:BORDer?	939
:FORMat[:TRACe][:DATA] ASCii INTeger,32 REAL,32 REAL,64	1266
:FORMat[:TRACe][:DATA] ASCii INTeger,32 REAL,32 REAL,64	937
:FORMat[:TRACe][:DATA]?	1266
:FORMat[:TRACe][:DATA]?	937

List of Commands

:GLOBal:FREQuency:CENTer[:STATe] 1 0 ON OFF	999
:GLOBal:FREQuency:CENTer[:STATe]?	999
:HCOPy:ABORt	167
:HCOPy[:IMMediate]	167
*IDN?	151
:INIT	112
:INITiate:CONtinuous OFF ON 0 1	783
:INITiate:CONtinuous?	783
:INITiate:EEVM	373
:INITiate:EORFspectr	495
:INITiate:EPVTime	297
:INITiate[:IMMediate]	1045
:INITiate:PAUSe	1212
:INITiate:PFERror	611
:INITiate:RESart	1045
:INITiate:RESume	1212
:INITiate:TXPower BPOWer	673
:INPut:MIXer EXTernal INTernal	806
:INPut:MIXer?	806
:INSTrument:CATalog?	990
:INSTrument:COUPle:DEFault	999
:INSTrument:COUPle:FREQuency:CENTer ALL NONE	999
:INSTrument:COUPle:FREQuency:CENTer?	999
:INSTrument:DEFault	164
:INSTrument:NSElect <integer>	990
:INSTrument:NSElect?	990
:INSTrument[:SElect] SEQAN BASIC WCDMA EDGE GSM WIMAX OFDMA ADEMOD BTooth TDSCDMA CDMA2K CDMA1XEV LTE LTETDD	987
:INSTrument[:SElect]?	987
:MEASure:EEVM[n]?	373
:MEASure:EORFspectr[n]?	495

List of Commands

:MEASure:EPVTime[n]?	297
:MEASure:PFERror[n]?	611
:MEASure:TXPower BPOwer[n]?	673
:MEMMory:RDIRectory <directory_name>	200
:MEMory[:SOURce]	1191
:MEMory[:SOURce]:DATA <file_name>, <data>	1192
:MEMory[:SOURce]:DATA:APPend <file_name>, <data>	1192
:MMEMory:CATalog? [<directory_name>]	198
:MMEMory:CDIRectory [<directory_name>]	198
:MMEMory:CDIRectory?	198
:MMEMory:COpy <string>,<string>[,<string>,<string>]	198
:MMEMory:DATA <file_name>, <data>	199
:MMEMory:DATA? <file_name>	199
:MMEMory:DELeTe <file_name>[,<directory_name>]	199
:MMEMory:HEADer:ID? “<file name>”	1139
:MMEMory:LOAD:CORRection 1 2 3 4 5 6, <filename>	1039
:MMEMory:LOAD:MPADapter:CORRection 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16, <filename>	1041
:MMEMory:LOAD:SEQuences: SLISt ALISt SAALISt “MySequence.txt”	179
:MMEMory:LOAD:STATe <filename>	171
:MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,<filename>	177
:MMEMory:LOAD:TRACe:REGISter TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,<integer>	177
:MMEMory:MDIRectory <directory_name>	200
:MMEMory:MOVE <string>,<string>[,<string>,<string>]	200
:MMEMory:REGISter:STATe:LABel <reg number>,”label”	186
:MMEMory:REGISter:STATe:LABel? <reg number>	186
:MMEMory:STORE:CORRection 1 2 3 4 5 6, <filename>	1047
:MMEMory:STORE:MPADapter:CORRection 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16, <filename>	1050
:MMEMory:STORE:SCReen <filename>	195
:MMEMory:STORE:SCReen:THEMe TDColor TDMonochrome FCOLor FMONochrome	195
:MMEMory:STORE:SCReen:THEMe?	195
:MMEMory:STORE:STATe <filename>	183

List of Commands

:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<filename> . . .	188
:MMEMory:STORe:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<integer> 188	
:MMEM:STOR:SEQuences: SLISt ALISt SAALISt SSTep "MySequence.txt"	190
:MPAD:PORT:INP RFIO1	838
*OPC?	151
*OPC	151
*OPT?	152
:OUTPut:ANALog OFF SVIDeo LOGVideo LINVideo DAUDio	873
:OUTPut:ANALog?	873
:OUTPut:ANALog:AUTO OFF ON 0 1	874
:OUTPut:ANALog:AUTO?	874
:OUTPut[:EXTernal][:STATe] ON OFF 1 0	1057
:OUTPut[:EXTernal][:STATe]?	1057
:OUTPut:MODulation[:STATe] ON OFF 1 0	1062
:OUTPut:MODulation[:STATe]?	1062
*RCL <register #>	153
:READ:EEVM[n]?	373
:READ:EORFspectr[n]?	495
:READ:EPVTime[n]?	297
:READ:PFERror[n]?	611
:READ:TXPower BPOWer[n]?	673
*RST	166
*SAV <register #>	153
[:SENSe]:<measurement>:TRIGger:SOURce IF	1272
[:SENSe]:<measurement>:TRIGger:SOURce	1272
[:SENSe]:ADC:DITHer:AUTO[:STATe] OFF ON 0 1	974
[:SENSe]:ADC:DITHer:AUTO[:STATe]?	974
[:SENSe]:ADC:DITHer[:STATe] OFF ON HIGH	973
[:SENSe]:ADC:DITHer[:STATe]?	973
[:SENSe]:AVERAge:CLEAr	942

List of Commands

[[:SENSe]:AVERAge:COUNT <integer>	941
[[:SENSe]:AVERAge:COUNT?	941
[[:SENSe]:AVERAge:TYPE RMS LOG SCALar [[:SENSe]:AVERAge:TYPE?	943
[[:SENSe]:AVERAge:TYPE:AUTO OFF ON 0 1	942
[[:SENSe]:AVERAge:TYPE:AUTO?	942
[[:SENSe]:BANDwidth BWIDth[:RESolution] <freq>	771
[[:SENSe]:BANDwidth BWIDth[:RESolution]?	771
[[:SENSe]:BANDwidth BWIDth[:RESolution]:AUTO OFF ON 0 1	771
[[:SENSe]:BANDwidth BWIDth[:RESolution]:AUTO?	771
[[:SENSe]:BANDwidth BWIDth:SHAPE GAUSSian FLATtop	777
[[:SENSe]:BANDwidth BWIDth:SHAPE?	777
[[:SENSe]:BANDwidth BWIDth:TYPE DB3 DB6 IMPulse NOISe	780
[[:SENSe]:BANDwidth BWIDth:TYPE?	780
[[:SENSe]:BANDwidth BWIDth:VIDeo <freq>	773
[[:SENSe]:BANDwidth BWIDth:VIDeo?	773
[[:SENSe]:BANDwidth BWIDth:VIDeo:AUTO OFF ON 0 1	773
[[:SENSe]:BANDwidth BWIDth:VIDeo:AUTO?	773
[[:SENSe]:BANDwidth BWIDth:VIDeo:RATio <real>	774
[[:SENSe]:BANDwidth BWIDth:VIDeo:RATio?	774
[[:SENSe]:BANDwidth BWIDth:VIDeo:RATio:AUTO OFF ON 0 1	774
[[:SENSe]:BANDwidth BWIDth:VIDeo:RATio:AUTO?	774
[[:SENSe]:CHANnel:ARFCn RFCHannel <integer>	785
[[:SENSe]:CHANnel:ARFCn RFCHannel?	785
[[:SENSe]:CHANnel:ARFCn RFCHannel:BOTTom	792
[[:SENSe]:CHANnel:ARFCn RFCHannel:MIDdle	791
[[:SENSe]:CHANnel:ARFCn RFCHannel:TOP	790
[[:SENSe]:CHANnel:BURSt NORMal SYNC ACCess HSRate MIXed	1011
[[:SENSe]:CHANnel:BURSt?	1011
[[:SENSe]:CHANnel:CARRier:BASE:CLASs C1 C2	801
[[:SENSe]:CHANnel:CARRier:BASE:CLASs?	801
[[:SENSe]:CHANnel:CARRier:COUNt <integer>	793

List of Commands

[[:SENSe]:CHANnel:CARRier:COUNT?	793
[[:SENSe]:CHANnel:CARRier:FALLocation CONTiguous NCONtiguous	798
[[:SENSe]:CHANnel:CARRier:FALLocation?	798
[[:SENSe]:CHANnel:CARRier:FALLocation:NCONtiguous:ABPoint <integer>.	799
[[:SENSe]:CHANnel:CARRier:FALLocation:NCONtiguous:ABPoint?	799
[[:SENSe]:CHANnel:CARRier:FALLocation:NCONtiguous:FSEParation <freq>.	800
[[:SENSe]:CHANnel:CARRier:FALLocation:NCONtiguous:FSEParation?	800
[[:SENSe]:CHANnel:CARRier:LIST:COUple OFF ON 0 1,	795
[[:SENSe]:CHANnel:CARRier:LIST:COUple?	795
[[:SENSe]:CHANnel:CARRier:LIST:INTerval <freq>,	797
[[:SENSe]:CHANnel:CARRier:LIST:INTerval?	797
[[:SENSe]:CHANnel:CARRier:LIST:PPResent YES NO,	796
[[:SENSe]:CHANnel:CARRier:LIST:PPResent?	796
[[:SENSe]:CHANnel:CARRier:RCARRier <integer>.	794
[[:SENSe]:CHANnel:CARRier:RCARRier?	794
[[:SENSe]:CHANnel:SLOT <integer>	1009
[[:SENSe]:CHANnel:SLOT?.	1009
[[:SENSe]:CHANnel:SLOT:AUTO OFF ON 0 1	1009
[[:SENSe]:CHANnel:SLOT:AUTO?.	1009
[[:SENSe]:CHANnel:TSCode <integer>.	1012
[[:SENSe]:CHANnel:TSCode?	1012
[[:SENSe]:CHANnel:TSCode:AUTO OFF ON 0 1.	1012
[[:SENSe]:CHANnel:TSCode:AUTO?	1012
[[:SENSe]:CORRection:BTS[:RF]:GAIN <rel_ampl>.	815
[[:SENSe]:CORRection:BTS[:RF]:GAIN?	815
[[:SENSe]:CORRection:BTS[:RF]:LOSS <rel_ampl>.	815
[[:SENSe]:CORRection:BTS[:RF]:LOSS?	815
[[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:COMMeNt "text"	823
[[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:COMMeNt?	823
[[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DATA <freq>, <ampl>,	830
[[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DATA?	830

List of Commands

<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DATA:MERGe <freq>, <ampl>, ...</code>	831
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DELeTe</code>	829
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DESCription "text"</code>	823
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:DESCription?</code>	823
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT RFIN RFIO1 RFIO2 RFOut</code>	824
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT?</code>	824
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT:RFIO1 SOURce ANALyzer BOTH</code>	825
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT:RFIO1?</code>	825
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT:RFIO2 SOURce ANALyzer BOTH</code>	826
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:RF:PORT:RFIO2?</code>	826
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6[:STATe] ON OFF 1 0</code>	819
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6[:STATe]?</code>	819
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:X:SPACing LINear LOGarithmic</code>	821
<code>[:SENSe]:CORRection:CSET[1] 2 3 4 5 6:X:SPACing?</code>	821
<code>[:SENSe]:CORRection:CSET:ALL:DELeTe</code>	830
<code>[:SENSe]:CORRection:CSET:ALL[:STATe] ON OFF 1 0</code>	829
<code>[:SENSe]:CORRection:CSET:ALL[:STATe]?</code>	829
<code>[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50 75</code>	808
<code>[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]?</code>	808
<code>[:SENSe]:CORRection:MS[:RF]:GAIN <rel_ampl></code>	813
<code>[:SENSe]:CORRection:MS[:RF]:GAIN?</code>	813
<code>[:SENSe]:CORRection:MS[:RF]:LOSS <rel_ampl></code>	814
<code>[:SENSe]:CORRection:MS[:RF]:LOSS?</code>	814
<code>[:SENSe]:CORRection:NOISe:FLOor ON OFF 1 0</code>	1023
<code>[:SENSe]:CORRection:NOISe:FLOor?</code>	1023
<code>[:SENSe]:CORRection:SA[:RF]:GAIN <rel_ampl></code>	813
<code>[:SENSe]:CORRection:SA[:RF]:GAIN?</code>	813
<code>[:SENSe]:DEMod AM FM PM OFF</code>	979
<code>[:SENSe]:DEMod?</code>	979
<code>[:SENSe]:DEMod:AM:BANDwidth:CHANnel <freq></code>	980
<code>[:SENSe]:DEMod:AM:BANDwidth:CHANnel?</code>	980

List of Commands

[[:SENSe]:DEMod:FM:BANDwidth:CHANnel <freq>	981
[[:SENSe]:DEMod:FM:BANDwidth:CHANnel?	981
[[:SENSe]:DEMod:FM:DEEMphasis OFF US25 US50 US75 US750	982
[[:SENSe]:DEMod:FM:DEEMphasis?	982
[[:SENSe]:DEMod:PM:BANDwidth:CHANnel <freq>	984
[[:SENSe]:DEMod:PM:BANDwidth:CHANnel?	984
[[:SENSe]:DEMod:STATe OFF ON 0 1	985
[[:SENSe]:DEMod:STATe?	985
[[:SENSe]:DEMod:TIME <time>	985
[[:SENSe]:DEMod:TIME?	985
[[:SENSe]:DETEctor:AUTO ON OFF 1 0	1246
[[:SENSe]:DETEctor:AUTO?	1246
[[:SENSe]:DETEctor[:FUNCTION] NORMAl AVERAge POSitive SAMPlE NEGAtive QPEak EAVERage EPOSitive MPOSitive RMS	1243
[[:SENSe]:DETEctor[:FUNCTION]?	1243
[[:SENSe]:DETEctor:TRACe[1] 2 3 4 5 6 AVERAge NEGAtive NORMAl POSitive SAMPlE QPEak EAVERage RAVERage	1242
[[:SENSe]:DETEctor:TRACe[1] 2 3 4 5 6?	1242
[[:SENSe]:DETEctor:TRACe[1] 2 3 4 5 6:AUTO ON OFF 1 0	1245
[[:SENSe]:DETEctor:TRACe[1] 2 3 4 5 6:AUTO?	1245
[[:SENSe]:EEVM:AVERAge:COUNt <integer>	400
[[:SENSe]:EEVM:AVERAge:COUNt?	400
[[:SENSe]:EEVM:AVERAge[:STATe] OFF ON 0 1	400
[[:SENSe]:EEVM:AVERAge[:STATe]?	400
[[:SENSe]:EEVM:AVERAge:TCONtrol EXPonential REPeat	401
[[:SENSe]:EEVM:AVERAge:TCONtrol?	401
[[:SENSe]:EEVM:BSYNc:PMODulation:ALIGNment OFF ON 0 1	462
[[:SENSe]:EEVM:BSYNc:PMODulation:ALIGNment?	462
[[:SENSe]:EEVM:BSYNc:SOURce TSEQUence RFBurst PMODulation NONE	402
[[:SENSe]:EEVM:BSYNc:SOURce?	402
[[:SENSe]:EEVM:DROOp OFF ON 0 1	461
[[:SENSe]:EEVM:DROOp?	461

List of Commands

[:SENSe]:EEVM:FERRor:TRANge WIDE NORMal	461
[:SENSe]:EEVM:FERRor:TRANge?	461
[:SENSe]:EEVM:IF:GAIN:AUTO[:STATe] ON OFF 1 0	403
[:SENSe]:EEVM:IF:GAIN:AUTO[:STATe]?	403
[:SENSe]:EEVM:IF:GAIN[:STATe] ON OFF 1 0	403
[:SENSe]:EEVM:IF:GAIN[:STATe]?	403
[:SENSe]:EORFspectr:AVERage:COUNT <integer>	522
[:SENSe]:EORFspectr:AVERage:COUNT?	522
[:SENSe]:EORFspectr:AVERage:FAST[:STATe] OFF ON 0 1	524
[:SENSe]:EORFspectr:AVERage:FAST[:STATe]?	524
[:SENSe]:EORFspectr:AVERage:MODulation:TYPE LOG RMS	526
[:SENSe]:EORFspectr:AVERage:MODulation:TYPE?	526
[:SENSe]:EORFspectr:AVERage[:STATe] OFF ON 0 1	522
[:SENSe]:EORFspectr:AVERage[:STATe]?	522
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier <freq>	540
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier?	540
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier:AUTO OFF ON 0 1	540
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier:AUTO?	540
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:CLOSe <freq>	541
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:CLOSe?	541
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:FAR[1] <freq>	542
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:FAR[1]?	542
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:IM:FAR2 <freq>	542
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:IM:FAR2?	542
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:CARRier <freq>	543
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:CARRier?	543
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:OFFSet:CLOSe <freq>	544
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:OFFSet:CLOSe?	544
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:OFFSet:FAR <freq>	545
[:SENSe]:EORFspectr:BANDwidth[:RESolution]:SWITching:OFFSet:FAR?	545
[:SENSe]:EORFspectr:BFRequency <freq>	533

List of Commands

[[:SENSe]:EORFspectr:BFRequency?	533
[[:SENSe]:EORFspectr:CARRier:PREFeRence:TYPE REF MAX.	527
[[:SENSe]:EORFspectr:CARRier:PREFeRence:TYPE?	527
[[:SENSe]:EORFspectr:DETEctor:SWITChing:FAST[:STATe] ON OFF 1 0	525
[[:SENSe]:EORFspectr:DETEctor:SWITChing:FAST[:STATe]?	525
[[:SENSe]:EORFspectr:FREQUency:SYNThesis[:STATe] 2 3	557
[[:SENSe]:EORFspectr:FREQUency:SYNThesis[:STATe]?	557
[[:SENSe]:EORFspectr:IMPOrder <integer>.	556
[[:SENSe]:EORFspectr:IMPOrder?	556
[[:SENSe]:EORFspectr:LIST:MODulation:APPLy RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute	550
[[:SENSe]:EORFspectr:LIST:MODulation:APPLy?.	550
[[:SENSe]:EORFspectr:LIST:MODulation:BANDwidth <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>.	547
[[:SENSe]:EORFspectr:LIST:MODulation:BANDwidth?	547
[[:SENSe]:EORFspectr:LIST:MODulation[:FREQUency] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>.	546
[[:SENSe]:EORFspectr:LIST:MODulation[:FREQUency]?	546
[[:SENSe]:EORFspectr:LIST:MODulation:LOFFset:ABSolute <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>.	549
[[:SENSe]:EORFspectr:LIST:MODulation:LOFFset:ABSolute?	549
[[:SENSe]:EORFspectr:LIST:MODulation:LOFFset[:RCARrier] <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>.	548
[[:SENSe]:EORFspectr:LIST:MODulation:LOFFset[:RCARrier]?	548
[[:SENSe]:EORFspectr:LIST:MODulation:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1	546
[[:SENSe]:EORFspectr:LIST:MODulation:STATe?	546
[[:SENSe]:EORFspectr:LIST:SELEct CUSTom SHORT STANDARD.	532
[[:SENSe]:EORFspectr:LIST:SELEct?	532

List of Commands

[:SENSe]:EORFspectr:NCONtiguous:REGion?	537
[:SENSe]:EORFspectr:OFRequency <freq>	534
[:SENSe]:EORFspectr:OFRequency?	534
[:SENSe]:EORFspectr:REFerence:AVERage[:AUTO] ON OFF 1 0.	535
[:SENSe]:EORFspectr:REFerence:AVERage[:AUTO]?	535
[:SENSe]:EORFspectr:REFerence:AVERage:COUNt <integer>	535
[:SENSe]:EORFspectr:REFerence:AVERage:COUNt?	535
[:SENSe]:EORFspectr:SWITching:RPOWer <ampl>	528
[:SENSe]:EORFspectr:SWITching:RPOWer:AUTO[:STATe] OFF ON 0 1	528
[:SENSe]:EORFspectr:SWITching:RPOWer:AUTO[:STATe]?	528
[:SENSe]:EORFspectr:SWITching:RPOWer:TYPE AVERage MAXHold.	558
[:SENSe]:EORFspectr:SWITching:RPOWer:TYPE?	558
[:SENSe]:EORFspectr:SWITching:RPOWer.	528
[:SENSe]:EORFspectr:TYPE MODulation MSWitching SWITching FFModulation.	523
[:SENSe]:EORFspectr:TYPE?	523
[:SENSe]:EORFspectr:TYPE:MODulation[:METHod] DISCrete SWEep.	559
[:SENSe]:EORFspectr:TYPE:MODulation[:METHod]?	559
[:SENSe]:EORFspectr:WBNoise ON OFF 1 0	536
[:SENSe]:EORFspectr:WBNoise?	536
[:SENSe]:EPVTime:AVERage:COUNt <integer>.	325
[:SENSe]:EPVTime:AVERage:COUNt?	325
[:SENSe]:EPVTime:AVERage[:STATe] OFF ON 0 1	325
[:SENSe]:EPVTime:AVERage[:STATe]?	325
[:SENSe]:EPVTime:AVERage:TCONtrol EXPonential REPeat.	326
[:SENSe]:EPVTime:AVERage:TCONtrol?	326
[:SENSe]:EPVTime:AVERage:TYPE LOG RMS MAXimum MINimum MXMinimum.	327
[:SENSe]:EPVTime:AVERage:TYPE?	327
[:SENSe]:EPVTime:BANDwidth[:RESolution] <bandwidth>	311
[:SENSe]:EPVTime:BANDwidth[:RESolution]?	311
[:SENSe]:EPVTime:BANDwidth[:RESolution]:TYPE FLATtop GAUSSian.	312
[:SENSe]:EPVTime:BANDwidth[:RESolution]:TYPE?	312

List of Commands

[[:SENSe]:EPVTime:BSYNc:SLENgth EVEN INTeger	334
[[:SENSe]:EPVTime:BSYNc:SLENgth?	334
[[:SENSe]:EPVTime:BSYNc:SOURce TSEQuence RFBurst NONE	328
[[:SENSe]:EPVTime:BSYNc:SOURce?	328
[[:SENSe]:EPVTime:IF:GAIN:AUTO[:STATe] ON OFF 1 0	329
[[:SENSe]:EPVTime:IF:GAIN:AUTO[:STATe]?	329
[[:SENSe]:EPVTime:IF:GAIN[:STATe] ON OFF 1 0.	330
[[:SENSe]:EPVTime:IF:GAIN[:STATe]?	330
[[:SENSe]:EPVTime:MASK:CUSTom[:TYPE] FASLot AASLots	335
[[:SENSe]:EPVTime:MASK:CUSTom[:TYPE]?	335
[[:SENSe]:EPVTime:MASK:LIST:LOWer:ABSolute <real>, ...	336
[[:SENSe]:EPVTime:MASK:LIST:LOWer:ABSolute?	336
[[:SENSe]:EPVTime:MASK:LIST:LOWer:POINts?	337
[[:SENSe]:EPVTime:MASK:LIST:LOWer:RELative <rel_ampl>, ...	337
[[:SENSe]:EPVTime:MASK:LIST:LOWer:RELative?	337
[[:SENSe]:EPVTime:MASK:LIST:LOWer:TIME <seconds>, ...	338
[[:SENSe]:EPVTime:MASK:LIST:LOWer:TIME?	338
[[:SENSe]:EPVTime:MASK:LIST:UPPer:ABSolute <real>, ...	338
[[:SENSe]:EPVTime:MASK:LIST:UPPer:ABSolute?	338
[[:SENSe]:EPVTime:MASK:LIST:UPPer:POINts?	339
[[:SENSe]:EPVTime:MASK:LIST:UPPer:RELative <rel_ampl>, ...	339
[[:SENSe]:EPVTime:MASK:LIST:UPPer:RELative?	339
[[:SENSe]:EPVTime:MASK:LIST:UPPer:TIME <seconds>, ...	340
[[:SENSe]:EPVTime:MASK:LIST:UPPer:TIME?	340
[[:SENSe]:EPVTime:MASK:RPOWer <ampl>	333
[[:SENSe]:EPVTime:MASK:RPOWer?	333
[[:SENSe]:EPVTime:MASK:RPOWer:AUTO[:STATe] OFF ON 0 1	333
[[:SENSe]:EPVTime:MASK:RPOWer:AUTO[:STATe]?	333
[[:SENSe]:EPVTime:MASK:RPOWer:OFFSet <ampl>	333
[[:SENSe]:EPVTime:MASK:RPOWer:OFFSet?	333
[[:SENSe]:EPVTime:MASK:RPOWer:TYPE UPARt MAMBle ESTimated.	332

List of Commands

[[:SENSe]:EPVTime:MASK:RPOWer:TYPE?	332
[[:SENSe]:EPVTime:MASK:SElect STANdard CUSTom	331
[[:SENSe]:EPVTime:MASK:SElect?	331
[[:SENSe]:EPVTime:MASK[:UPARt]:LOWer:HSRate QAM16 QAM32, <rel_amp>	342
[[:SENSe]:EPVTime:MASK[:UPARt]:LOWer:HSRate? QAM16 QAM32	342
[[:SENSe]:EPVTime:MASK[:UPARt]:LOWer:NORMal QAM16 QAM32, <rel_amp>	341
[[:SENSe]:EPVTime:MASK[:UPARt]:LOWer:NORMal? QAM16 QAM32	341
[[:SENSe]:EPVTime:SWEep:TIME <integer>	327
[[:SENSe]:EPVTime:SWEep:TIME?	327
[[:SENSe]:FEED RF AIQ EMIXer	805
[[:SENSe]:FEED?	805
[[:SENSe]:FEED:AREFERENCE REF50 REF4800 OFF	810
[[:SENSe]:FEED:AREFERENCE?	810
[[:SENSe]:FEED:DATA INPut STORed	816
[[:SENSe]:FEED:DATA?	816
[[:SENSe]:FEED:DATA:STORe	818
[[:SENSe]:FEED:RF:PORT[:INPut] RFIN RFIN2 RFIO1 RFIO2	809
[[:SENSe]:FEED:RF:PORT[:INPut]?	809
[[:SENSe]:FEED:RF:PORT:OUTPut RFOut RFIO1 RFIO2	835
[[:SENSe]:FEED:RF:PORT:OUTPut?	835
[[:SENSe]:FREQuency:CENTer <freq>	787
[[:SENSe]:FREQuency:CENTer?	787
[[:SENSe]:FREQuency:IQ:CENTer <freq>	789
[[:SENSe]:FREQuency:IQ:CENTer?	789
[[:SENSe]:FREQuency:RF:CENTer <freq>	788
[[:SENSe]:FREQuency:RF:CENTer?	788
[[:SENSe]:FREQuency:SPAN <freq>	1195
[[:SENSe]:FREQuency:SPAN?	1195
[[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio <integer>	776
[[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio?	776
[[:SENSe]:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF ON 0 1	776

List of Commands

[[:SENSe]:FREQUency:SPAN:BAWdwidth[:RESolution]:RATio:AUTO?]	776
[[:SENSe]:FREQUency:SPAN:FULL]	1197
[[:SENSe]:FREQUency:SPAN:PREVious]	1198
[[:SENSe]:FREQUency:SYNThesis:AUTO[:STATe] OFF ON 0 1]	972
[[:SENSe]:FREQUency:SYNThesis:AUTO[:STATe]?]	972
[[:SENSe]:FREQUency:SYNThesis[:STATe] 1 2 3]	970
[[:SENSe]:FREQUency:SYNThesis[:STATe]?]	970
[[:SENSe]:IF:GAIN:FFT:AUTO[:STATe] OFF ON 0 1]	978
[[:SENSe]:IF:GAIN:FFT:AUTO[:STATe]?]	978
[[:SENSe]:IF:GAIN:FFT[:STATe] AUTOrange LOW HIGH]	977
[[:SENSe]:IF:GAIN:FFT[:STATe]?]	977
[[:SENSe]:IF:GAIN:SWEpt:AUTO[:STATe] OFF ON 0 1]	976
[[:SENSe]:IF:GAIN:SWEpt:AUTO[:STATe]?]	976
[[:SENSe]:IF:GAIN:SWEpt[:STATe] OFF ON 0 1]	975
[[:SENSe]:IF:GAIN:SWEpt[:STATe]?]	975
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:ANTenna[:UNIT] GAUSs PTES- la UVM UAM NOConversion]	848
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:ANTenna[:UNIT]?]	848
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:COMMeNT "text"]]	852
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:COMMeNT?]	852
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA <freq>, <ampl>, ...]	867
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA?]	867
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA:MERGe <freq>, <ampl>, ...]	868
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DELeTe]	866
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DESCRiption "text"]]	851
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DESCRiption?]	851
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT RFIO RFIO1 RFIO2 RFIO3 RFIO4 RFIO5 RFIO6 RFIO7]	852
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT?]	852
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO0 SOURce AN- ALyzer BOTH]	853

List of Commands

[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO0?	853
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO1 SOURCE AN-ALyzer BOTH	854
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO1?	854
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO2 SOURCE AN-ALyzer BOTH	855
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO2?	855
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO3 SOURCE AN-ALyzer BOTH	857
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO3?	857
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO4 SOURCE AN-ALyzer BOTH	858
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO4?	858
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO5 SOURCE AN-ALyzer BOTH	859
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO5?	859
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO6 SOURCE AN-ALyzer BOTH	861
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO6?	861
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7 SOURCE AN-ALyzer BOTH	862
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7?	862
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16[:STATe] ON OFF 1 0	846
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16[:STATe]?	846
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:X:SPACing LINear LOGarithmic	850
[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:X:SPACing?	850
[[:SENSe]:MPADapter:CORRection:CSET:ALL:DElete	867
[[:SENSe]:MPADapter:CORRection:CSET:ALL[:STATe] ON OFF 1 0	866
[[:SENSe]:MPADapter:CORRection:CSET:ALL[:STATe]?	866
[[:SENSe]:MPADapter:GAIN[:STATe] ON OFF 1 0	844
[[:SENSe]:MPADapter:GAIN[:STATe]?	844
[[:SENSe]:MPADapter:PORT:INPut OFF	839
[[:SENSe]:MPADapter:PORT:INPut OFF RFIO0 RFIO1 RFIO2 RFIO3 RFIO4 RFIO5 RFIO6 RFIO7	838

List of Commands

[[:SENSe]:MPADapter:PORT:INPut RFIO0	839
[[:SENSe]:MPADapter:PORT:INPut?	838
[[:SENSe]:MPADapter:PORT:OUTPut:BITMap <integer>	841
[[:SENSe]:MPADapter:PORT:OUTPut:BITMap?	841
[[:SENSe]:MPADapter[:STATe] ON OFF 1 0	838
[[:SENSe]:MPADapter[:STATe]?	838
[[:SENSe]:PFERror:AVERage:COUNT <integer>	637
[[:SENSe]:PFERror:AVERage:COUNT?	637
[[:SENSe]:PFERror:AVERage[:STATe] OFF ON 0 1	637
[[:SENSe]:PFERror:AVERage[:STATe]?	637
[[:SENSe]:PFERror:AVERage:TCONtrol EXPonential REPeat	638
[[:SENSe]:PFERror:AVERage:TCONtrol?	638
[[:SENSe]:PFERror:BSYNc:SOURce RFBurst TSEquence	639
[[:SENSe]:PFERror:BSYNc:SOURce?	639
[[:SENSe]:PFERror:IF:GAIN:AUTO[:STATe] ON OFF 1 0	639
[[:SENSe]:PFERror:IF:GAIN:AUTO[:STATe]?	639
[[:SENSe]:PFERror:IF:GAIN[:STATe] ON OFF 1 0	640
[[:SENSe]:PFERror:IF:GAIN[:STATe]?	640
[[:SENSe]:POWER:IQ[:I]:RANGe[:UPPer] <ampl>	744
[[:SENSe]:POWER:IQ[:I]:RANGe[:UPPer]?	744
[[:SENSe]:POWER:IQ:Q:RANGe[:UPPer] <ampl>	747
[[:SENSe]:POWER:IQ:Q:RANGe[:UPPer]?	747
[[:SENSe]:POWER:IQ:RANGe:AUTO OFF ON 0 1	744
[[:SENSe]:POWER:IQ:RANGe:AUTO?	744
[[:SENSe]:POWER[:RF]:ATTenuation <rel_ampl>	733
[[:SENSe]:POWER[:RF]:ATTenuation?	733
[[:SENSe]:POWER[:RF]:ATTenuation:AUTO OFF ON 0 1	733
[[:SENSe]:POWER[:RF]:ATTenuation:AUTO?	733
[[:SENSe]:POWER[:RF]:ATTenuation:STEP[:INCRement] 10 dB 2 dB	741
[[:SENSe]:POWER[:RF]:ATTenuation:STEP[:INCRement]?	741
[[:SENSe]:POWER[:RF]:EATTenuation <rel_ampl>	738

List of Commands

[[:SENSe]:POWer[:RF]:EATTeNuatiOn?	738
[[:SENSe]:POWer[:RF]:EATTeNuatiOn:STATe OFF ON 0 1	735
[[:SENSe]:POWer[:RF]:EATTeNuatiOn:STATe?	735
[[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL	766
[[:SENSe]:POWer[:RF]:GAIN:BAND?	766
[[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1	765
[[:SENSe]:POWer[:RF]:GAIN[:STATe]?	765
[[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer] <real>	742
[[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer]?	742
[[:SENSe]:POWer[:RF]:MW:PATH STD LNPath MPBypass FULL	761
[[:SENSe]:POWer[:RF]:MW:PATH?	761
[[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON OFF 0 1	765
[[:SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?	765
[[:SENSe]:POWer[:RF]:PADJust <freq>	751
[[:SENSe]:POWer[:RF]:PADJust?	751
[[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTErnal	752
[[:SENSe]:POWer[:RF]:PADJust:PRESelector?	752
[[:SENSe]:POWer[:RF]:PCENter	750
[[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0	740
[[:SENSe]:POWer[:RF]:RANGe:AUTO?	740
[[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE	739
[[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuatiOn OFF ELECTriCal COMBined	739
[[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuatiOn?	739
[[:SENSe]:RADio:CARRier:HOP OFF ON 0 1	1004
[[:SENSe]:RADio:CARRier:HOP?	1004
[[:SENSe]:RADio:CARRier:NUMBer SINGLE MULTiple	803
[[:SENSe]:RADio:CARRier:NUMBer?	803
[[:SENSe]:RADio:CARRier:NUMBer:AUTO ON OFF 1 0	802
[[:SENSe]:RADio:CARRier:NUMBer:AUTO?	802
[[:SENSe]:RADio:CARRier[:TYPE] BURSt CONTInuous	1005
[[:SENSe]:RADio:CARRier[:TYPE]?	1005

List of Commands

[:SENSe]:RADio:DEVice BTS MS	1002
[:SENSe]:RADio:DEVice?	1002
[:SENSe]:RADio:DEVice:BASE[:TYPE] NORMal MICRo MICR1 MICR2 MICR3 PICO PICO1	1003
[:SENSe]:RADio:DEVice:BASE[:TYPE]?	1003
[:SENSe]:RADio:PCLevel <integer>	1008
[:SENSe]:RADio:PCLevel?	1008
[:SENSe]:RADio:PCLevel:AUTO 0 1 OFF ON	1008
[:SENSe]:RADio:PCLevel:AUTO?	1008
[:SENSe]:RADio:PSHape NARRow WIDE	1020
[:SENSe]:RADio:PSHape?	1020
[:SENSe]:RADio:STANdard:BAND PGSM EGSM RGSM DCS1800 PCS1900 GSM450 GSM480 GSM700 GSM850 TGSM810	1002
[:SENSe]:RADio:STANdard:BAND?	1002
[:SENSe]:ROSCillator:EXTeRnal:FREQuency <freq>	834
[:SENSe]:ROSCillator:EXTeRnal:FREQuency?	834
[:SENSe]:ROSCillator:SOURce INTernal EXTeRnal	832
[:SENSe]:ROSCillator:SOURce?	832
[:SENSe]:ROSCillator:SOURce:TYPE INTernal EXTeRnal SENSe	832
[:SENSe]:ROSCillator:SOURce:TYPE?	832
[:SENSe]:SWEep:EGATe:CONTRol EDGE LEVel	1223
[:SENSe]:SWEep:EGATe:CONTRol?	1223
[:SENSe]:SWEep:EGATe:DELay <time>	1219
[:SENSe]:SWEep:EGATe:DELay?	1219
[:SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE OFF SETTled GDELay	1225
[:SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE?	1225
[:SENSe]:SWEep:EGATe:EXTeRnal[1] 2:LEVel <voltage>	1228
[:SENSe]:SWEep:EGATe:EXTeRnal[1] 2:LEVel?	1228
[:SENSe]:SWEep:EGATe:HOLDoff <time>	1224
[:SENSe]:SWEep:EGATe:HOLDoff?	1224
[:SENSe]:SWEep:EGATe:HOLDoff:AUTO OFF ON 0 1	1224
[:SENSe]:SWEep:EGATe:HOLDoff:AUTO?	1224

List of Commands

[[:SENSe]:SWEep:EGATe:LENGth <time>	1219
[[:SENSe]:SWEep:EGATe:LENGth?	1219
[[:SENSe]:SWEep:EGATe:METhod LO VIdEo FFt	1220
[[:SENSe]:SWEep:EGATe:METhod?	1220
[[:SENSe]:SWEep:EGATe:MINFast?	1227
[[:SENSe]:SWEep:EGATe:POLarity NEGative POSitive	1228
[[:SENSe]:SWEep:EGATe:POLarity?	1228
[[:SENSe]:SWEep:EGATe:SOURce EXTernal1 EXTernal2 LINE FRAME RFBurst	1222
[[:SENSe]:SWEep:EGATe:SOURce?	1222
[[:SENSe]:SWEep:EGATe[:STATe] OFF ON 0 1	1213
[[:SENSe]:SWEep:EGATe[:STATe]?	1213
[[:SENSe]:SWEep:EGATe:TIME <time>	1218
[[:SENSe]:SWEep:EGATe:TIME?	1218
[[:SENSe]:SWEep:EGATe:VIEW ON OFF 1 0.	1215
[[:SENSe]:SWEep:EGATe:VIEW?	1215
[[:SENSe]:SWEep:EGATe:VIEW:STARt <time>	1218
[[:SENSe]:SWEep:EGATe:VIEW:STARt?	1218
[[:SENSe]:SWEep:FFT:WIDTh <real>.	1209
[[:SENSe]:SWEep:FFT:WIDTh?	1209
[[:SENSe]:SWEep:FFT:WIDTh:AUTO OFF ON 0 1	1210
[[:SENSe]:SWEep:FFT:WIDTh:AUTO?	1210
[[:SENSe]:SWEep:POINts <integer>	1229
[[:SENSe]:SWEep:POINts?	1229
[[:SENSe]:SWEep:TIME <time>	1200
[[:SENSe]:SWEep:TIME?	1200
[[:SENSe]:SWEep:TIME:AUTO OFF ON 0 1	1200
[[:SENSe]:SWEep:TIME:AUTO?	1200
[[:SENSe]:SWEep:TIME:AUTO:RULEs NORMal ACCuracy SRESponse	1202
[[:SENSe]:SWEep:TIME:AUTO:RULEs?	1202
[[:SENSe]:SWEep:TIME:AUTO:RULEs:AUTO[:STATe] ON OFF 1 0.	1203
[[:SENSe]:SWEep:TIME:AUTO:RULEs:AUTO[:STATe]?	1203

List of Commands

[:SENSe]:SWEep:TIME:GATE:LEVel HIGH LOW	1228
[:SENSe]:SWEep:TIME:GATE:LEVel?	1228
[:SENSe]:SWEep:TYPE FFT SWEep	1205
[:SENSe]:SWEep:TYPE?	1205
[:SENSe]:SWEep:TYPE:AUTO OFF ON 0 1	1206
[:SENSe]:SWEep:TYPE:AUTO?	1206
[:SENSe]:SWEep:TYPE:AUTO:RULes SPEEd DRANge	1207
[:SENSe]:SWEep:TYPE:AUTO:RULes?	1207
[:SENSe]:SWEep:TYPE:AUTO:RULes:AUTO[:STATe] OFF ON 0 1	1208
[:SENSe]:SWEep:TYPE:AUTO:RULes:AUTO[:STATe]?	1208
[:SENSe]:SWEep:TZOom:POINts <integer>	1231
[:SENSe]:SWEep:TZOom:POINts?	1231
[:SENSe]:SYNC:ALIGNment GSM HBIT	1021
[:SENSe]:SYNC:ALIGNment?	1021
[:SENSe]:SYNC:BURSt:RFAMplitude:DELay <time>	1022
[:SENSe]:SYNC:BURSt:RFAMplitude:DELay?	1022
[:SENSe]:SYNC:BURSt:STHReshold <rel_ampl>	1019
[:SENSe]:SYNC:BURSt:STHReshold?	1019
[:SENSe]:SYNC:CONFigure:METhod FORCe DISCard	1016
[:SENSe]:SYNC:CONFigure:METhod?	1016
[:SENSe]:SYNC:HSRate:MODulation QPSK QAM16 QAM32	1015
[:SENSe]:SYNC:HSRate:MODulation?	1015
[:SENSe]:SYNC:HSRate:MODulation:AUTO ON OFF 1 0	1015
[:SENSe]:SYNC:HSRate:MODulation:AUTO?	1015
[:SENSe]:SYNC:NORMal:MODulation GMSK EPSK QAM16 QAM32 AQPSK	1014
[:SENSe]:SYNC:NORMal:MODulation?	1014
[:SENSe]:SYNC:NORMal:MODulation:AQPSk:ALPHa:ARCTan <real>	1019
[:SENSe]:SYNC:NORMal:MODulation:AQPSk:ALPHa:ARCTan?	1019
[:SENSe]:SYNC:NORMal:MODulation:AQPSk:ALPHa:SCPIr <real>	1018
[:SENSe]:SYNC:NORMal:MODulation:AQPSk:ALPHa:SCPIr?	1018
[:SENSe]:SYNC:NORMal:MODulation:AUTO ON OFF 1 0	1013

List of Commands

[[:SENSe]:SYNC:NORMal:MODulation:AUTO?	1013
[[:SENSe]:SYNC:NORMal:MODulation:AUTO:AQPSk INCLude EXCLude	1017
[[:SENSe]:SYNC:NORMal:MODulation:AUTO:AQPSk?	1017
[[:SENSe]:TXPower:AVERAge:COUNT <integer>	696
[[:SENSe]:TXPower:AVERAge:COUNT?	696
[[:SENSe]:TXPower:AVERAge[:STATe] OFF ON 0 1	696
[[:SENSe]:TXPower:AVERAge[:STATe]?	696
[[:SENSe]:TXPower:AVERAge:TCONtrol EXPONential REPeat	697
[[:SENSe]:TXPower:AVERAge:TCONtrol?	697
[[:SENSe]:TXPower:AVERAge:TYPE LOG MAXimum MINimum RMS	698
[[:SENSe]:TXPower:AVERAge:TYPE LOG RMS	698
[[:SENSe]:TXPower:AVERAge:TYPE?	698
[[:SENSe]:TXPower:AVERAge:TYPE?	698
[[:SENSe]:TXPower:BANDwidth[:RESolution] <bandwidth>	681
[[:SENSe]:TXPower:BANDwidth[:RESolution]?	681
[[:SENSe]:TXPower:BANDwidth:TYPE GAUSSian FLATtop	682
[[:SENSe]:TXPower:BANDwidth:TYPE?	682
[[:SENSe]:TXPower:BURSt:AUTO ON OFF 1 0	701
[[:SENSe]:TXPower:BURSt:AUTO?	701
[[:SENSe]:TXPower:BURSt:WIDTh <time>	701
[[:SENSe]:TXPower:BURSt:WIDTh?	701
[[:SENSe]:TXPower:IF:GAIN:AUTO[:STATe] OFF ON 0 1	703
[[:SENSe]:TXPower:IF:GAIN:AUTO[:STATe]?	703
[[:SENSe]:TXPower:IF:GAIN[:STATe] ON OFF 1 0	703
[[:SENSe]:TXPower:IF:GAIN[:STATe]?	703
[[:SENSe]:TXPower:METHod THReshold BWIDth	700
[[:SENSe]:TXPower:METHod THReshold BWIDth SINGle	701
[[:SENSe]:TXPower:METHod?	700
[[:SENSe]:TXPower:METHod?	701
[[:SENSe]:TXPower:SWEep:TIME <integer>	704
[[:SENSe]:TXPower:SWEep:TIME <integer>	717

List of Commands

[[:SENSe]:TXPower:SWEp:TIME?	704
[[:SENSe]:TXPower:SWEp:TIME?	717
[[:SENSe]:TXPower:THReshold <real>.	699
[[:SENSe]:TXPower:THReshold?	699
[[:SENSe]:TXPower:THReshold:TYPE ABSolute RELAtive	699
[[:SENSe]:TXPower:THReshold:TYPE?	699
[[:SENSe]:VOLTage POWer:IQ:MIRROred OFF ON 0 1.	745
[[:SENSe]:VOLTage POWer:IQ:MIRROred?	745
[[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage>	744
[[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?	744
[[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage>.	746
[[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?	746
[[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1	743
[[:SENSe]:VOLTage:IQ:RANGe:AUTO?	743
:SERVice[:PRODUCTION]:SIQuery:SCPI:LIST?	1193
:SOURce:AM[:DEPTH][:LINear]?	1141
:SOURce:AM[:DEPTH][:LINear]	1141
:SOURce:AM:INTernal:FREQuency?	1142
:SOURce:AM:INTernal:FREQuency	1142
:SOURce:AM:STATe?	1141
:SOURce:AM:STATe	1141
:SOURce:FM[:DEViation]?	1143
:SOURce:FM[:DEViation].	1143
:SOURce:FM:INTernal:FREQuency?	1143
:SOURce:FM:INTernal:FREQuency	1143
:SOURce:FM:STATe?	1142
:SOURce:FM:STATe	1142
:SOURce:FREQuency:CHANnels:BAND NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BANDI BAN DII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BAND XIII BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMT EXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BA ND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21	

List of Commands

BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BANDA BANDB BANDC BANDD BANDE BANDF.	1074
:SOURce:FREQuency:CHANnels:BAND?.....	1074
:SOURce:FREQuency:CHANnels:NUMBer <int>.....	1064
:SOURce:FREQuency:CHANnels:NUMBer?.....	1064
:SOURce:FREQuency[:CW] <freq>.....	1063
:SOURce:FREQuency[:CW]?.....	1063
:SOURce:FREQuency:OFFSet <freq>.....	1095
:SOURce:FREQuency:OFFSet?.....	1095
:SOURce:FREQuency:REFerence <freq>.....	1094
:SOURce:FREQuency:REFerence?.....	1094
:SOURce:FREQuency:REFerence:SET.....	1093
:SOURce:FREQuency:REFerence:STATe OFF ON 0 1.....	1094
:SOURce:FREQuency:REFerence:STATe?.....	1094
:SOURce:LIST:INITiation:ARMed?.....	1189
:SOURce:LIST:MPADapter:CORRection:ERRor?.....	1188
:SOURce:LIST:MPADapter:PORT:OUTPut:BITMap:MODE LIST FIXed.....	1188
:SOURce:LIST:MPADapter:PORT:OUTPut:BITMap:MODE?.....	1188
:SOURce:LIST:NUMBer:STEPs <integer>.....	1147
:SOURce:LIST:NUMBer:STEPs?.....	1147
:SOURce:LIST:SETup:AMPLitude <ampl>, <ampl>, <ampl>,	1184
:SOURce:LIST:SETup:AMPLitude?.....	1184
:SOURce:LIST:SETup:CLear.....	1187
:SOURce:LIST:SETup:CNFRrequency <double>, <double>, <double>,	1183
:SOURce:LIST:SETup:CNFRrequency?.....	1183
:SOURce:LIST:SETup:DURation:TYPE <enum>, <enum>, <enum>,	1185
:SOURce:LIST:SETup:DURation:TYPE?.....	1185
:SOURce:LIST:SETup:INPut:TRIGger <enum>, <enum>, <enum>,	1181
:SOURce:LIST:SETup:INPut:TRIGger?.....	1181
:SOURce:LIST:SETup:OUTPut:TRIGger <bool>, <bool>, <bool>,	1187
:SOURce:LIST:SETup:OUTPut:TRIGger ?.....	1187

List of Commands

:SOURce:LIST:SETup:RADio:BAND <enum>, <enum>, <enum>,	1182
:SOURce:LIST:SETup:RADio:BAND?	1182
:SOURce:LIST:SETup:RADio:BAND:LINK <enum>, <enum>, <enum>,	1183
:SOURce:LIST:SETup:RADio:BAND:LINK?	1183
:SOURce:LIST:SETup:TOCount <time/int>, <time/int>, <time/int>,	1186
:SOURce:LIST:SETup:TOCount?	1186
:SOURce:LIST:SETup:TRANSition:TIME <time>, <time>, <time>,	1181
:SOURce:LIST:SETup:TRANSition:TIME?	1181
:SOURce:LIST:SETup:WAVeform <string>, <string>, <string>,	1185
:SOURce:LIST:SETup:WAVeform?	1185
:SOURce:LIST[:STATe] ON OFF 1 0	1146
:SOURce:LIST[:STATe]?	1146
:SOURce:LIST:STEP[1] 2 3 4..1000:SETup IMMEDIATE INTERNAL KEY BUS EXTERNAL2, <time>, NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMT EXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER NONE BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BANDA BANDB BANDC BANDD BANDE BANDF, DOWN UP, <freq>, <ampl>, <string>, TIME COUNT CONTinuous, <time>, ON OFF 1 0, [<int>],	1179
:SOURce:LIST:STEP[1] 2 3 4..1000:SETup?	1179
:SOURce:LIST:STEP[1] 2 3...1000:SETup: RADio:BAND?	1152
:SOURce:LIST:STEP[1] 2 3...1000:SETup:AMPLitude <double>	1172
:SOURce:LIST:STEP[1] 2 3...1000:SETup:AMPLitude?	1172
:SOURce:LIST:STEP[1] 2 3...1000:SETup:CNFRequency <double>	1170
:SOURce:LIST:STEP[1] 2 3...1000:SETup:CNFRequency <double>	1171
:SOURce:LIST:STEP[1] 2 3...1000:SETup:CNFRequency?	1170
:SOURce:LIST:STEP[1] 2 3...1000:SETup:CNFRequency?	1171
:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TCOunt <double>	1177
:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TCOunt <double>	1178
:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TCOunt?	1177
:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TCOunt?	1178
:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TYPE TIME COUNT CONTinuous	1176

List of Commands

:SOURce:LIST:STEP[1] 2 3...1000:SETup:DURation:TYPE?	1176
:SOURce:LIST:STEP[1] 2 3...1000:SETup:INPut:TRIGger IMMEDIATE INTERNAL EXTERNAL2 KEY BUS	1149
:SOURce:LIST:STEP[1] 2 3...1000:SETup:INPut:TRIGger?	1149
:SOURce:LIST:STEP[1] 2 3...1000:SETup:OUTPut:TRIGger ON OFF 1 0	1178
:SOURce:LIST:STEP[1] 2 3...1000:SETup:OUTPut:TRIGger	1178
:SOURce:LIST:STEP[1] 2 3...1000:SETup:RADio:BAND NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMT EXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER NONE BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BANDA BANDB BANDC BANDD BANDE BANDF	1152
:SOURce:LIST:STEP[1] 2 3...1000:SETup:RADio:BAND:LINK DOWN UP	1170
:SOURce:LIST:STEP[1] 2 3...1000:SETup:RADio:BAND:LINK?	1170
:SOURce:LIST:STEP[1] 2 3...1000:SETup:TRANSition:TIME <time>	1152
:SOURce:LIST:STEP[1] 2 3...1000:SETup:TRANSition:TIME?	1152
:SOURce:LIST:STEP[1] 2 3...1000:SETup:WAVEform <string>	1173
:SOURce:LIST:STEP[1] 2 3...1000:SETup:WAVEform?	1173
:SOURce:LIST:TRIG	112
:SOURce:LIST:TRIGger[:IMMEDIATE]	1146
:SOURce:LIST:TRIGger:INITiate[:IMMEDIATE]	1147
:SOURce:PM[:DEViation]?	1144
:SOURce:PM[:DEViation]	1144
:SOURce:PM:INTERNAL:FREQuency?	1144
:SOURce:PM:INTERNAL:FREQuency	1144
:SOURce:PM:STATe?	1144
:SOURce:PM:STATe	1144
:SOURce:POWer:ALC[:STATe] ON OFF 1 0	1062
:SOURce:POWer:ALC[:STATe]?	1062
:SOURce:POWer[:LEVel][:IMMEDIATE][:AMPLitude] <amp>	1058
:SOURce:POWer[:LEVel][:IMMEDIATE][:AMPLitude]?	1058
:SOURce:POWer[:LEVel][:IMMEDIATE]:OFFSet <rel_amp>	1061
:SOURce:POWer[:LEVel][:IMMEDIATE]:OFFSet?	1061

List of Commands

:SOURce:POWer:REFeRence <ampl>	1060
:SOURce:POWer:REFeRence?	1060
:SOURce:POWer:REFeRence:STATe OFF ON 0 1	1060
:SOURce:POWer:REFeRence:STATe?	1060
:SOURce:PRESet	1189
:SOURce:RADio:ARB: DEFault:DIRectory?	1100
:SOURce:RADio:ARB:BASeband:FREQUency:OFFSet <freq>	1104
:SOURce:RADio:ARB:BASeband:FREQUency:OFFSet?	1104
:SOURce:RADio:ARB:CATalog?	1102
:SOURce:RADio:ARB:DEFault:DIRectory <string>	1100
:SOURce:RADio:ARB:DELeTe <string>	1100
:SOURce:RADio:ARB:DELeTe:ALL	1101
:SOURce:RADio:ARB:FCATalog?	1102
:SOURce:RADio:ARB:HEADer:CLear	1138
:SOURce:RADio:ARB:HEADer:INformation?	1140
:SOURce:RADio:ARB:HEADer:SAVE	1139
:SOURce:RADio:ARB:LOAD <string>	1098
:SOURce:RADio:ARB:LOAD:ALL <string>	1099
:SOURce:RADio:ARB:MDEStination:ALCHold NONE M1 M2 M3 M4	1137
:SOURce:RADio:ARB:MDEStination:ALCHold?	1137
:SOURce:RADio:ARB:MDEStination:PULSe NONE M1 M2 M3 M4	1135
:SOURce:RADio:ARB:MDEStination:PULSe?	1135
:SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?	1132
:SOURce:RADio:ARB:MPLicensed:UID:LOCKed?	1132
:SOURce:RADio:ARB:MPOLarity:MARKer1 POSitive NEGative	1133
:SOURce:RADio:ARB:MPOLarity:MARKer1?	1133
:SOURce:RADio:ARB:MPOLarity:MARKer2 POSitive NEGative	1133
:SOURce:RADio:ARB:MPOLarity:MARKer2?	1133
:SOURce:RADio:ARB:MPOLarity:MARKer3 POSitive NEGative	1134
:SOURce:RADio:ARB:MPOLarity:MARKer3?	1134
:SOURce:RADio:ARB:MPOLarity:MARKer4 POSitive NEGative	1134

List of Commands

:SOURce:RADio:ARB:MPOlarity:MARKer4?	1134
:SOURce:RADio:ARB:RETRigger ON OFF IMMediate	1106
:SOURce:RADio:ARB:RETRigger?	1106
:SOURce:RADio:ARB:RSCaling <real>	1103
:SOURce:RADio:ARB:RSCaling?	1103
:SOURce:RADio:ARB:SCLock:RATE <freq>	1103
:SOURce:RADio:ARB:SCLock:RATE?	1103
:SOURce:RADio:ARB:SEQuence[:MWAVeform] <filename>, <waveform1>, <reps>, NONE M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M1M2M4 M1M3M4 M2M3M4 M 1M2M3M4 ALL, {<waveform2>, <reps>, NONE M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M1M2M4 M1M3M4 M2M3M4 M 1M2M3M4 ALL, }	1115
:SOURce:RADio:ARB:SEQuence[:MWAVeform]? <filename>	1115
:SOURce:RADio:ARB[:STATe] ON OFF 1 0	1096
:SOURce:RADio:ARB[:STATe]?	1096
:SOURce:RADio:ARB:TRIGger:INITiate	1141
:SOURce:RADio:ARB:TRIGger[:SOURce] KEY BUS EXTernal2	1108
:SOURce:RADio:ARB:TRIGger[:SOURce]?	1108
:SOURce:RADio:ARB:TRIGger:TYPE CONTInuous SINGle SADVance GATE	1105
:SOURce:RADio:ARB:TRIGger:TYPE?	1105
:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE] FREE TRIGger RESet	1105
:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]?	1105
:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE] SINGle CONTInuous	1108
:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE]?	1108
:SOURce:RADio:ARB:WAVeform <string>	1097
:SOURce:RADio:ARB:WAVeform?	1097
:SOURce:RADio:BAND:LINK DOWN UP	1092
:SOURce:RADio:BAND:LINK?	1092
:SOURce:RADio:MPADapter:CORRection:ERRor?	1145
:SOURce:SELF:TEST[:ALL]	1190
*SRE <integer>	153
*SRE?	153

List of Commands

*STB?	154
:SYSTem:APPLIcation:CATalog[:NAME]?	993
:SYSTem:APPLIcation:CATalog[:NAME]:COUNt?	992
:SYSTem:APPLIcation:CATalog:OPTion? <model>	993
:SYSTem:APPLIcation:CATalog:REVIsion? <model>	993
:SYSTem:APPLIcation[:CURRent][:NAME]?	991
:SYSTem:APPLIcation[:CURRent]:OPTion?	992
:SYSTem:APPLIcation[:CURRent]:REVIsion?	991
:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRes <integer>	261
:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRes?	261
:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTRoller[:ENABle] ON OFF 0 1	262
:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTRoller[:ENABle]?	262
:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle OFF ON 0 1	265
:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle?	265
:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle OFF ON 0 1	265
:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle?	265
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol?	266
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1	264
:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle?	264
:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1	263
:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle?	263
:SYSTem:COMMunicate:USB:CONNecTion?	268
:SYSTem:COMMunicate:USB:PACKets?	270
:SYSTem:COMMunicate:USB:STATus?	269
:SYSTem:CONFIgure[:SYSTem]?	208
:SYSTem:CSYSTem?	208
:SYSTem:DATE “<year>,<month>,<day>”	293
:SYSTem:DATE?	293
:SYSTem:DEFault [ALL] ALIGn INPut MISC MODes PON	270
:SYSTem:ERRor[:NEXT]?	203
:SYSTem:ERRor:OVERload[:STATe] 0 1 OFF ON	206

List of Commands

:SYSTem:ERRor:VERBose OFF ON 0 1	205
:SYSTem:ERRor:VERBose?	205
:SYSTem:HELP:HEADers?	292
:SYSTem:HID?	278
:SYSTem:IDN <string>	267
:SYSTem:IDN?	267
:SYSTem:KLOCK OFF ON 0 1	292
:SYSTem:KLOCK?	292
:SYSTem:LIcense:EXTernal:LIST?	1191
:SYSTem:LIcense[:FPACk]:WAVEform:ADD <string>	1125
:SYSTem:LIcense[:FPACk]:WAVEform:CLEar <int>	1128
:SYSTem:LIcense[:FPACk]:WAVEform:FREE?	1130
:SYSTem:LIcense[:FPACk]:WAVEform:LOCK <int>	1129
:SYSTem:LIcense[:FPACk]:WAVEform:NAME? <int>	1131
:SYSTem:LIcense[:FPACk]:WAVEform:REPLace <int>, <string>	1127
:SYSTem:LIcense[:FPACk]:WAVEform:STATus? <int>	1129
:SYSTem:LIcense[:FPACk]:WAVEform:UID? <int>	1131
:SYSTem:LIcense[:FPACk]:WAVEform:USED?	1130
:SYSTem:LIcense:LIST:DETail?	1191
:SYSTem:LKEY <"OptionInfo">, <"LicenseInfo">	276
:SYSTem:LKEY? <"OptionInfo">	277
:SYSTem:LKEY:DELeTe <"OptionInfo">, <"LicenseInfo">	276
:SYSTem:LKEY:LIST?	277
:SYSTem:LKEY:WAVEform:ADD <string>	1125
:SYSTem:LKEY:WAVEform:CLEar <int>	1128
:SYSTem:LKEY:WAVEform:FREE?	1130
:SYSTem:LKEY:WAVEform:LOCK <int>	1129
:SYSTem:LKEY:WAVEform:NAME? <int>	1131
:SYSTem:LKEY:WAVEform:REPLace <int>, <string>	1127
:SYSTem:LKEY:WAVEform:STATus? <int>	1129
:SYSTem:LKEY:WAVEform:UID? <int>	1131

List of Commands

:SYSTem:LKEY:WAVeform:USED?	1130
:SYSTem:MRELay:COUNt?	280
:SYSTem:OPTions?	291
:SYSTem:PDOWn [NORMal FORCe]	291
:SYSTem:PON:APPLication:LLISt <string of INSTrument:SElect names>.	217
:SYSTem:PON:APPLication:LLISt?	217
:SYSTem:PON:APPLication:VMEMory[:AVAIlable]?	217
:SYSTem:PON:APPLication:VMEMory:TOTal?	217
:SYSTem:PON:APPLication:VMEMory:USED?	218
:SYSTem:PON:APPLication:VMEMory:USED:NAME? <INSTrument:SElect name>	218
:SYSTem:PON:ETIME?	281
:SYSTem:PON:MODE SA BASIC ADEMOD NFIGURE PNOISE CDMA2K TDSCD- MA VSA VSA89601 WCDMA WIMAXOFDMA	212
:SYSTem:PON:MODE?	212
:SYSTem:PON:TIME?	234
:SYSTem:PON:TYPE MODE USER LAST	210
:SYSTem:PON:TYPE?	210
:SYSTem:PRESet.	162
:SYSTem:PRESet:TYPE FACTory MODE USER	165
:SYSTem:PRESet:TYPE?	165
:SYSTem:PRESet:USER	295
:SYSTem:PRESet:USER:ALL	296
:SYSTem:PRESet:USER:SAVE	296
:SYSTem:PRINt:THEMe TDColor TDMonochrome FCOLor FMONochrome.	160
:SYSTem:PRINt:THEMe?	160
:SYSTem:PUP:PROcEss	215
:SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWStatistcs ALIGNment SOFTware CAPPLication	202
:SYSTem:SHOW?	202
:SYSTem:TEMPerature:HEXTreme?	281
:SYSTem:TEMPerature:LEXTreme?	280
:SYSTem:TEST:WCTS:[ALL]	282

List of Commands

:SYSTem:TEST:WCTS:FEC	284
:SYSTem:TEST:WCTS:FEC:RESult?	288
:SYSTem:TEST:WCTS:MPADapter	283
:SYSTem:TEST:WCTS:MPADapter:RESult?	287
:SYSTem:TEST:WCTS:SHOW:RESult FEC	287
:SYSTem:TEST:WCTS:SHOW:RESult MPADapter	286
:SYSTem:TEST:WCTS:SHOW:RESult SOURce	284
:SYSTem:TEST:WCTS:SOURce	283
:SYSTem:TEST:WCTS:SOURce:RESult?	285
:SYSTem:TIME "<hour>,<minute>,<second>"	293
:SYSTem:TIME?	293
:SYSTem:VERSion?	292
:TRACe[1] 2 3 4 5 6:DISPlay[:STATe] ON OFF 0 1	1241
:TRACe[1] 2 3 4 5 6:DISPlay[:STATe]?	1241
:TRACe[1] 2 3 4 5 6:TYPE WRITe AVERAge MAXHold MINHold.	1233
:TRACe[1] 2 3 4 5 6:TYPE?	1233
:TRACe[1] 2 3 4 5 6:UPDate[:STATe] ON OFF 0 1	1241
:TRACe[1] 2 3 4 5 6:UPDate[:STATe]?	1241
:TRACe:CLEar TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6.	1251
:TRACe:CLEar:ALL	1251
:TRACe:COpy TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	1263
:TRACe:COpy?	1263
:TRACe[:DATA] TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, <data>	1265
:TRACe[:DATA]? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6.	1265
:TRACe:EXCHange TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	1263
:TRACe:EXCHange?	1263
:TRACe:MATH:MEAN? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	1269
:TRACe:MATH:SMOoth TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6	1268
:TRACe:MATH:SMOoth:POINts <integer>	1268
:TRACe:MATH:SMOoth:POINts?	1268

List of Commands

*TRG	154
:TRIGger:<measurement>[:SEquence]:IQ:SOURce EXTernal1 EXTernal2 IMMediate IQMag IDEMod QDE-Mod IINPut QINPut AIQMag	1277
:TRIGger:<measurement>[:SEquence]:IQ:SOURce?	1277
:TRIGger:<measurement>[:SEquence]:RF:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAME RF-Burst VIDeo IF ALARm LAN TV	1276
:TRIGger:<measurement>[:SEquence]:RF:SOURce?	1276
:TRIGger:<measurement>[:SEquence]:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAME RFBurst VIDeo IF ALARm LAN IQMag IDEMod QDEMod IINPut QINPut AIQMag TV	1271
:TRIGger:<measurement>[:SEquence]:SOURce?	1271
:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen SPOint SSWeep SSETtled S1Marker S2Marker S3Marker S4Marker OFF	868
:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut?	868
:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut:POLarity POSitive NEGative	869
:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut:POLarity?	869
:TRIGger[:SEquence]:AIQMag:BANDwidth <freq>	1317
:TRIGger[:SEquence]:AIQMag:BANDwidth?	1317
:TRIGger[:SEquence]:AIQMag:CENTer <freq>	1316
:TRIGger[:SEquence]:AIQMag:CENTer?	1316
:TRIGger[:SEquence]:AIQMag:DELay <time>	1316
:TRIGger[:SEquence]:AIQMag:DELay?	1316
:TRIGger[:SEquence]:AIQMag:DELay:STATe OFF ON 0 1	1316
:TRIGger[:SEquence]:AIQMag:DELay:STATe?	1316
:TRIGger[:SEquence]:AIQMag:LEVel <ampl >	1315
:TRIGger[:SEquence]:AIQMag:LEVel?	1315
:TRIGger[:SEquence]:AIQMag:SLOPe POSitive NEGative	1315
:TRIGger[:SEquence]:AIQMag:SLOPe?	1315
:TRIGger[:SEquence]:ATRigger <time>	1324
:TRIGger[:SEquence]:ATRigger?	1324
:TRIGger[:SEquence]:ATRigger:STATe OFF ON 0 1	1324
:TRIGger[:SEquence]:ATRigger:STATe?	1324
:TRIGger[:SEquence]:DELay <time>	1283

List of Commands

:TRIGger[:SEquence]:DELay?	1283
:TRIGger[:SEquence]:DELay:STATe OFF ON 0 1	1283
:TRIGger[:SEquence]:DELay:STATe?	1283
:TRIGger[:SEquence]:EXTernal1:DELay <time>	1288
:TRIGger[:SEquence]:EXTernal1:DELay?	1288
:TRIGger[:SEquence]:EXTernal1:DELay:COMPensation OFF ON 0 1	1289
:TRIGger[:SEquence]:EXTernal1:DELay:COMPensation?	1289
:TRIGger[:SEquence]:EXTernal1:DELay:STATe OFF ON 0 1	1288
:TRIGger[:SEquence]:EXTernal1:DELay:STATe?	1288
:TRIGger[:SEquence]:EXTernal1:LEVel <level>	1287
:TRIGger[:SEquence]:EXTernal1:LEVel?	1287
:TRIGger[:SEquence]:EXTernal1:SLOPe POSitive NEGative	1287
:TRIGger[:SEquence]:EXTernal1:SLOPe?	1287
:TRIGger[:SEquence]:EXTernal2:DELay <time>	1291
:TRIGger[:SEquence]:EXTernal2:DELay?	1291
:TRIGger[:SEquence]:EXTernal2:DELay:COMPensation OFF ON 0 1	1292
:TRIGger[:SEquence]:EXTernal2:DELay:COMPensation?	1292
:TRIGger[:SEquence]:EXTernal2:DELay:STATe OFF ON 0 1	1291
:TRIGger[:SEquence]:EXTernal2:DELay:STATe?	1291
:TRIGger[:SEquence]:EXTernal2:LEVel	1290
:TRIGger[:SEquence]:EXTernal2:LEVel?	1290
:TRIGger[:SEquence]:EXTernal2:SLOPe POSitive NEGative	1291
:TRIGger[:SEquence]:EXTernal2:SLOPe?	1291
:TRIGger[:SEquence]:FRAMe:ADJust <time>	1301
:TRIGger[:SEquence]:FRAMe:DELay <time>	1305
:TRIGger[:SEquence]:FRAMe:DELay?	1305
:TRIGger[:SEquence]:FRAMe:DELay:STATe OFF ON 0 1	1305
:TRIGger[:SEquence]:FRAMe:DELay:STATe?	1305
:TRIGger[:SEquence]:FRAMe:OFFSet <time>	1300
:TRIGger[:SEquence]:FRAMe:OFFSet?	1300
:TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet	1302

List of Commands

:TRIGger[:SEQuence]:FRAMe:PERiod <time>	1299
:TRIGger[:SEQuence]:FRAMe:PERiod?	1299
:TRIGger[:SEQuence]:FRAMe:SYNC EXTernal1 EXTernal2 RFBurst OFF	1302
:TRIGger[:SEQuence]:FRAMe:SYNC?	1302
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff <time>	1306
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff?	1306
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff:STATe OFF ON 0 1	1306
:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff:STATe?	1306
:TRIGger[:SEQuence]:HOLDoff <time>	1325
:TRIGger[:SEQuence]:HOLDoff?	1325
:TRIGger[:SEQuence]:HOLDoff:STATe OFF ON 0 1	1325
:TRIGger[:SEQuence]:HOLDoff:STATe?	1325
:TRIGger[:SEQuence]:HOLDoff:TYPE NORMal ABOVe BELow	1326
:TRIGger[:SEQuence]:HOLDoff:TYPE?	1326
:TRIGger[:SEQuence]:IDEMod:DELay <time>	1309
:TRIGger[:SEQuence]:IDEMod:DELay?	1309
:TRIGger[:SEQuence]:IDEMod:DELay:STATe OFF ON 0 1	1309
:TRIGger[:SEQuence]:IDEMod:DELay:STATe?	1309
:TRIGger[:SEQuence]:IDEMod:LEVel <voltage>	1308
:TRIGger[:SEQuence]:IDEMod:LEVel?	1308
:TRIGger[:SEQuence]:IDEMod:SLOPe POSitive NEGative	1309
:TRIGger[:SEQuence]:IDEMod:SLOPe?	1309
:TRIGger[:SEQuence]:IINPut:DELay <time>	1312
:TRIGger[:SEQuence]:IINPut:DELay?	1312
:TRIGger[:SEQuence]:IINPut:DELay:STATe OFF ON 0 1	1312
:TRIGger[:SEQuence]:IINPut:DELay:STATe?	1312
:TRIGger[:SEQuence]:IINPut:LEVel <voltage>	1312
:TRIGger[:SEQuence]:IINPut:LEVel?	1312
:TRIGger[:SEQuence]:IINPut:SLOPe POSitive NEGative	1312
:TRIGger[:SEQuence]:IINPut:SLOPe?	1312
:TRIGger[:SEQuence]:IQMag:DELay <time>	1308

List of Commands

:TRIGger[:SEquence]:IQMag:DElAy?	1308
:TRIGger[:SEquence]:IQMag:DElAy:STATe OFF ON 0 1	1308
:TRIGger[:SEquence]:IQMag:DElAy:STATe?	1308
:TRIGger[:SEquence]:IQMag:LEVel <ampl >	1307
:TRIGger[:SEquence]:IQMag:LEVel?	1307
:TRIGger[:SEquence]:IQMag:SLOPe POSitive NEGative	1307
:TRIGger[:SEquence]:IQMag:SLOPe?	1307
:TRIGger[:SEquence]:LINE:DElAy <time>	1286
:TRIGger[:SEquence]:LINE:DElAy?	1286
:TRIGger[:SEquence]:LINE:DElAy:STATe OFF ON 0 1	1286
:TRIGger[:SEquence]:LINE:DElAy:STATe?	1286
:TRIGger[:SEquence]:LINE:SLOPe POSitive NEGative	1285
:TRIGger[:SEquence]:LINE:SLOPe?	1285
:TRIGger[:SEquence]:OFFSet <time>	1284
:TRIGger[:SEquence]:OFFSet?	1284
:TRIGger[:SEquence]:OFFSet:STATe OFF ON 0 1	1284
:TRIGger[:SEquence]:OFFSet:STATe?	1284
:TRIGger[:SEquence]:QDEMod:DElAy <time>	1311
:TRIGger[:SEquence]:QDEMod:DElAy?	1311
:TRIGger[:SEquence]:QDEMod:DElAy:STATe OFF ON 0 1	1311
:TRIGger[:SEquence]:QDEMod:DElAy:STATe?	1311
:TRIGger[:SEquence]:QDEMod:LEVel <voltage>	1310
:TRIGger[:SEquence]:QDEMod:LEVel?	1310
:TRIGger[:SEquence]:QDEMod:SLOPe POSitive NEGative	1310
:TRIGger[:SEquence]:QDEMod:SLOPe?	1310
:TRIGger[:SEquence]:QINPut:DElAy <time>	1314
:TRIGger[:SEquence]:QINPut:DElAy?	1314
:TRIGger[:SEquence]:QINPut:DElAy:STATe OFF ON 0 1	1314
:TRIGger[:SEquence]:QINPut:DElAy:STATe?	1314
:TRIGger[:SEquence]:QINPut:LEVel <voltage>	1313
:TRIGger[:SEquence]:QINPut:LEVel?	1313

List of Commands

:TRIGger[:SEQuence]:QINPut:SLOPe POSitive NEGative	1314
:TRIGger[:SEQuence]:QINPut:SLOPe?	1314
:TRIGger[:SEQuence]:RFBurst:DELay <time>	1296
:TRIGger[:SEQuence]:RFBurst:DELay?	1296
:TRIGger[:SEQuence]:RFBurst:DELay:COMPensation OFF ON 0 1	1297
:TRIGger[:SEQuence]:RFBurst:DELay:COMPensation?	1297
:TRIGger[:SEQuence]:RFBurst:DELay:STATe OFF ON 0 1	1296
:TRIGger[:SEQuence]:RFBurst:DELay:STATe?	1296
:TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute <ampl>	1293
:TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute?	1293
:TRIGger[:SEQuence]:RFBurst:LEVel:RELative <rel_ampl>	1295
:TRIGger[:SEQuence]:RFBurst:LEVel:RELative?	1295
:TRIGger[:SEQuence]:RFBurst:LEVel:TYPE ABSolute RELative	1294
:TRIGger[:SEQuence]:RFBurst:LEVel:TYPE?	1294
:TRIGger[:SEQuence]:RFBurst:SLOPe POSitive NEGative	1296
:TRIGger[:SEQuence]:RFBurst:SLOPe?	1296
:TRIGger[:SEQuence]:SLOPe POSitive NEGative	1282
:TRIGger[:SEQuence]:SLOPe?	1282
:TRIGger[:SEQuence]:TV:FMODE ENTire ODD EVEN	1319
:TRIGger[:SEQuence]:TV:FMODE?	1319
:TRIGger[:SEQuence]:TV:LINE <integer>	1318
:TRIGger[:SEQuence]:TV:LINE?	1318
:TRIGger[:SEQuence]:TV:STANdard MNTSc JNTSc NTSC443 MPAL BPAL NPAL CPAL PAL60 LSEC . .	1321
:TRIGger[:SEQuence]:TV:STANdard?	1321
:TRIGger[:SEQuence]:VIDeo:DELay <time>	1283
:TRIGger[:SEQuence]:VIDeo:DELay?	1283
:TRIGger[:SEQuence]:VIDeo:DELay:STATe OFF ON 0 1	1283
:TRIGger[:SEQuence]:VIDeo:DELay:STATe?	1283
:TRIGger[:SEQuence]:VIDeo:LEVel <ampl>	1281
:TRIGger[:SEQuence]:VIDeo:LEVel?	1281
:TRIGger[:SEQuence]:VIDeo:SLOPe POSitive NEGative	1282

List of Commands

:TRIGger[:SEQuence]:VIDeo:SLOPe?	1282
*TST?	155
:UNIT:POWer DBM DBMV DBMA V W A DBUV DBUA DBPW DBUVM DBUAM DBPT DBG	753
:UNIT:POWer?	753
*WAI	155

1 Using Help

The online Help system is "context-sensitive", which means that the information displayed when you invoke the Help system depends on the selected instrument Mode, Measurement and key.

NOTE The instructions for using help are applicable to the instrument front-panel as well as a virtual front panel.

TIP To view help for any front-panel key or menu key, press that key while this Help Window is open.

To scroll any page vertically, press the **Down Arrow** or **Up Arrow** front-panel keys. To locate these keys, see [“Front Panel Keys used by the Help System” on page 83](#).

NOTE **E6607C:** When using the E6607C there is no instrument front-panel. Therefore, the PC mouse and monitor are required for instrument control through a virtual front panel (VFP). For ease in using the VFP, the PC keyboard is recommended.

Structure of Help

See [“How Help is Organized” on page 80](#).

Navigating Help

- If the instrument has an attached mouse, see [“Navigating Help with a Mouse” on page 87](#).
- If the instrument does not have an attached mouse, see [“Navigating Help Without a Mouse” on page 88](#).

For specific details of how to navigate to topics, see [“Finding a Topic” on page 92](#).

- You can also copy the Help files to a separate computer and view them there. For details, see [“Viewing Help Files on a separate Computer” on page 95](#).

Locating Other Documentation

See [“Other Help Resources” on page 97](#).

Key Path	Front-panel key
Help Map ID	1001

How Help is Organized

This topic includes:

- “Help Contents Listing” on page 80
- “Key Descriptions for Each Measurement” on page 81
- “Key Information for Softkeys” on page 81
- “Common Measurement Functions” on page 82

Help Contents Listing

The listing under the Contents tab in the Help Window includes a topic for each Front-panel key and each softkey, for each available measurement.

The Contents listing is split into several major sections, as shown below for the HTML Help version of the document. The structure of the PDF version is similar.



Help information is split between these sections as follows:

1. Using Help

This section.

2. Additional Documentation

Describes available documents for the test set, with links to allow you to download or open the files.

3. About the Analyzer

Provides general information about the instrument.

4. About this Mode or Measurement Application

Provides an overview of the currently-selected Measurement Application

5. Programming the Test Set

Provides an overview of available programming information. Includes a list of all SCPI commands for the currently-selected Measurement Application.

6. System Functions

This section contains information for the following front-panel keys, which are listed in alphabetical order: **File, Preset, Print, Quick Save, Recall, Save, System, User Preset.**

The functions of these keys do not vary between measurements: they operate the same way, irrespective of which instrument measurement you have selected.

The sections for **Recall** and **Save** contain only cross-references to the respective sections in “[Common Measurement Functions](#)” on page 82, and are included here for convenience.

7. Measurement Functions

See “[Key Descriptions for Each Measurement](#)” on page 81 below.


8. Common Measurement Functions

See “[Common Measurement Functions](#)” on page 82 below.

[Back to Top](#)

Key Descriptions for Each Measurement

The Contents section for each Measurement is sub-divided into topics for each front-panel key, in alphabetical order, as shown below.

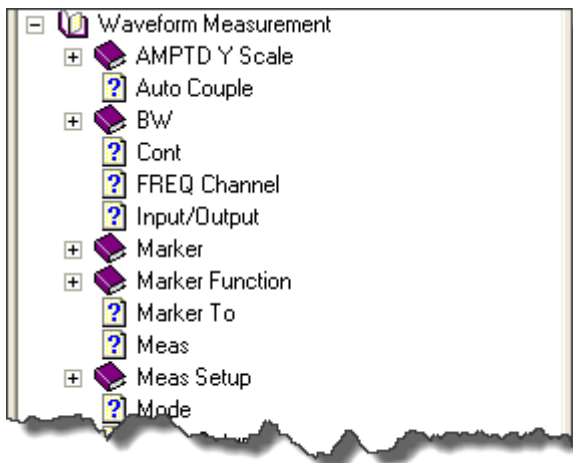

When you expand any front-panel key section, you will see a listing of softkeys in the menu for that front-panel key (if there is a menu), plus any SCPI Remote Commands associated with the functionality, as described in “[Key Information for Softkeys](#)” on page 81 below.

If you don't see a topic for a front-panel key in the Measurement-specific section, then it is located in the System Functions section.


[Back to Top](#)

Key Information for Softkeys

Information for each softkey that appears when you press a front-panel key (or a softkey with a submenu) is listed under the entry for each key.

Using Help
How Help is Organized

The example below shows the submenu under the **SPAN X Scale** Front-panel key in the "Waveform" Measurement, alongside the actual softkeys for that menu.

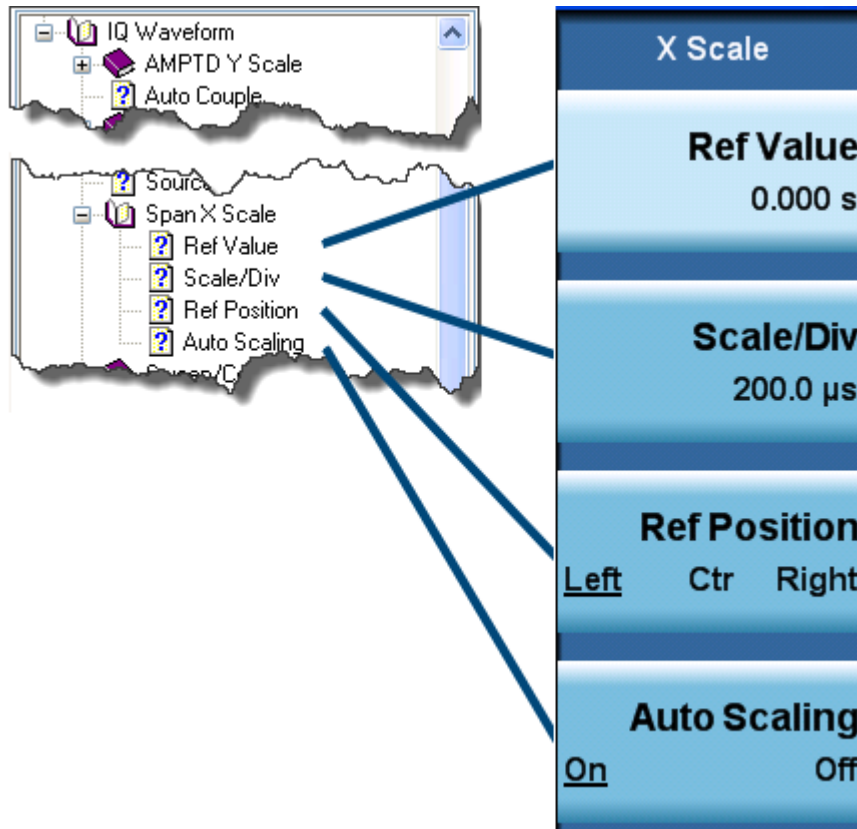

In these subsections, all softkeys are listed in the order they appear in their menu (that is, **not** in alphabetical order).

[Back to Top](#)

Common Measurement Functions

This section groups together function and key information that is shared between measurements. However, there is a listing for every front-panel key and subkey in the [Key Descriptions for Each Measurement](#), so you will generally not need to refer to this section.

The key subsections are listed alphabetically.

NOTE The presence of a key or command description in this section indicates that it is available in more than one measurement. Its presence does **not** indicate that the functionality is necessarily available in all measurements.

[Back to Top](#)


Front Panel Keys used by the Help System

The interactive Help system uses the front-panel keys shown below.

E6607A/B



E6607C

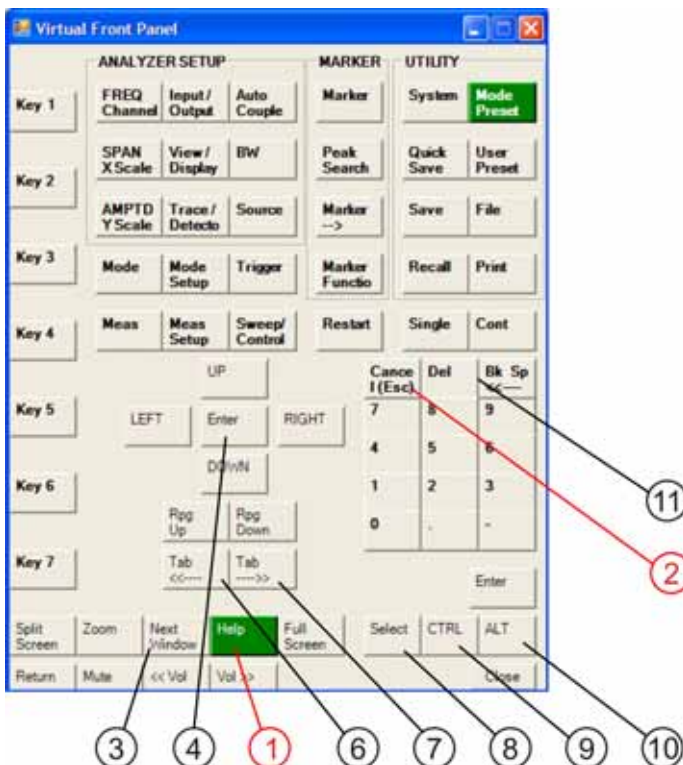

Using Help

Front Panel Keys used by the Help System

Item		Description
#	Name	
1	Help Key	Opens Help (displaying the topic for the last key pressed).
2	Cancel (Esc) Key	Exits Help.
3	Next Window Key	Changes the current window pane selection.
4	Arrow / Enter Keys	A central Enter key, surrounded by four directional arrow keys. Navigates within the Help system.
5	Knob	For future use.
6	Backward Tab Key	Moves between controls in the Help display.
7	Forward Tab Key	Moves between controls in the Help display.
8	Select / Space Key	Navigates within the Help system, in conjunction with other keys.
9	Ctrl Key	Navigates within the Help system, in conjunction with other keys. See “Navigating the Help Files” on page 85.
10	Alt Key	Navigates within the Help system, in conjunction with other keys. See “Navigating the Help Files” on page 85.
11	Bk Sp (Backspace) Key	Acts as a "Back" key when navigating the pages of the Help system.

[Back to Top](#)

Navigating the Help Files

This topic includes:

- “Help Window Components” on page 85
- “Basic Help Window Operations” on page 86
- “Navigating Help with a Mouse” on page 87

Help Window Components

The Help Window appears on top of, and to the left of, the measurement display. When Help is open, the instrument’s display appears as below.



1. Application Title Bar

The instrument retains its current Mode and Measurement when Help is open, as shown in the Title Bar.

2. Help Button Bar

These buttons provide shortcuts to frequently-used help functions, including printing.

3. Help Navigation Pane Tabs

Click one of these tabs to display either the Table of Contents, Index, Search, or Favorites controls.

4. Help Navigation Pane

5. Help Topic Pane

6. Previous Page and Next Page Buttons

Use these buttons to move to the previous or next page in the Help file.

7. Application Softkey Menu

You can still see and use the current softkey menu when Help is open.

When Help is open, pressing a softkey displays Help for that softkey, but does **not** execute the softkey’s function.

[Back to Top](#)

Basic Help Window Operations

This topic includes:

- “Opening Help” on page 86
- “Getting Help for a Specific Key” on page 86
- “Closing Help” on page 86
- “Viewing Help on Using Help” on page 87

For more Help window operations, see “Navigating Help Without a Mouse” on page 88.

To locate the keys mentioned in this section, see “Front Panel Keys used by the Help System” on page 83.

Opening Help

To access the Help system, press the green **Help** key below the front panel display while an Agilent application is running.



Note that the softkey menu remains visible when Help is open.

Getting Help for a Specific Key

- If Help **is** already open, press the desired key. The relevant Help topic appears.
The function normally invoked by the key is **not** executed when the key is pressed with Help open.
If you want to execute the key’s function, first close Help by pressing the **Cancel (Esc)** key (as described in “Closing Help” on page 86), then press the key, before opening Help again (if required).
- If Help is **not** already open, press the desired key (which executes the key’s function), then press the **Help** key to display the relevant Help page. Help is available for all softkeys, and for all the front-panel keys listed under the "System Functions" and "Measurement" sections.

For details of how to navigate within the panes of the Help window, see “Navigating the Help Files” on page 85.

[Back to Top](#)

Closing Help

To close Help, and return to the measurement application, press the **Cancel (Esc)** key (depicted below).



[Back to Top](#)

Viewing Help on Using Help

With the Help window open, press the green **Help** key a second time.

The "Using Help" page appears.

To exit Help on Using Help, press the **Bk Sp** key, or see [“Topic Pane Operations” on page 90](#) for equivalent methods.



[Back to Top](#)

Navigating Help with a Mouse


When Help is open, you can point-and-click to navigate, as you would when using Help for any Microsoft Windows computer application.

If you also have a keyboard attached to the instrument, you can use the Help system's full-text search feature to locate help for any topic, by typing in a key name, a topic name, or any other desired text. See [“Searching for a Help Topic” on page 88](#).

Selecting a Topic from the Contents Listing

To select and display a topic, do the following:

- If necessary, press the green **Help** key on the Front Panel, as described in [“Opening Help” on page 86](#), to open Help.
- Choose the desired topic from the list under the Contents Tab of the Navigation Pane, then click on the topic title to display the first page of the topic.
- To expand the tree and display a listing of subtopics (if any), click on the + icon to the left of the topic's book icon, as shown below.

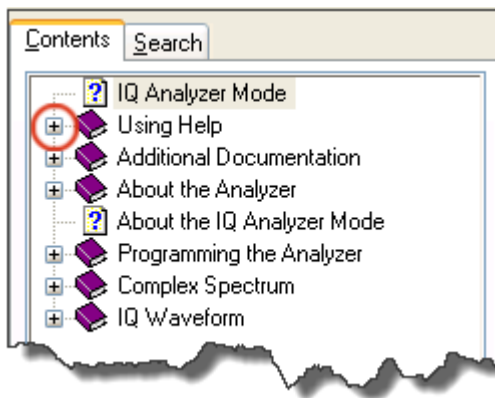


- To move to the next or previous page within a topic, click the **Next Page** or **Previous Page** keys (at the top right of the **Topic Pane**), as shown below.



[Back to Top](#)

Searching for a Help Topic

Select the "Search" tab of the Help Navigation Pane, then use the following procedure:

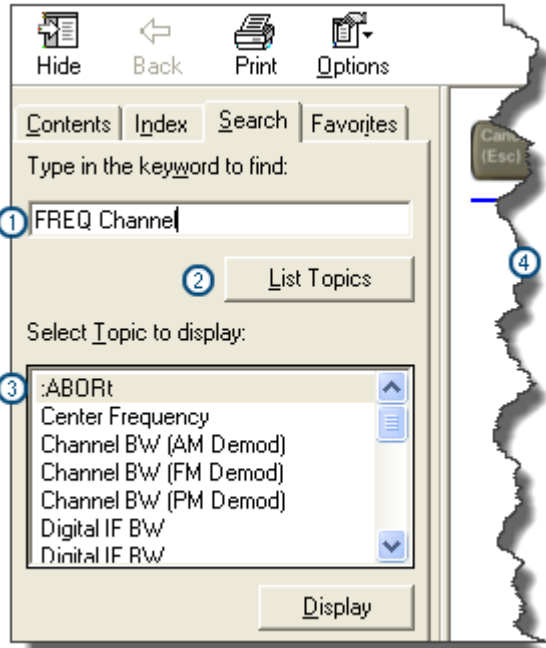

1. Type the desired topic text into the Search edit box. Note that the text search is **not** case-sensitive.
2. Click on the **List Topics** button.
3. **Either:**
 - Double-click on the desired topic in the list,
 - Or:**
 - Click on the desired topic to select it, then click the **Display** button beneath the list.
4. The topic is displayed in the Topic Pane.

[Back to Top](#)

Navigating Help Without a Mouse

Most features of the Help system can be accessed and navigated without attaching a mouse or keyboard to the instrument.

There are a few exceptions, as noted in [“Functions that cannot be used without a Mouse and Keyboard” on page 92](#).

This topic includes:

- [“Next Window Key” on page 89](#)
- [“Contents Tab \(Navigation Pane\) Operations” on page 89](#)

- “Topic Pane Operations” on page 90
- “Selecting a Hyperlink” on page 91
- “Finding a Topic” on page 92

To locate all the keys mentioned in this section, see “Front Panel Keys used by the Help System” on page 83.

Next Window Key

- To toggle the focus between the Navigation Pane and the Topic Pane, press the **Next Window** key.




Contents Tab (Navigation Pane) Operations


- To switch the active tab, hold down the **Ctrl** key, then press either the **Forward Tab** or **Backward Tab** key.



- To scroll **horizontally**, hold down the **Ctrl** key, then press either the **Left Arrow** or **Right Arrow** keys.

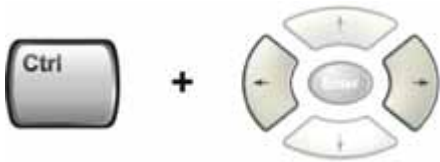

- To scroll **vertically**, hold down the **Ctrl** key, then press either the **Up Arrow** or **Down Arrow** keys.

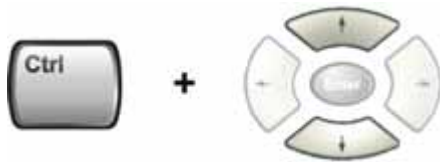

- To scroll up or down the list of topics, press the **Up Arrow** or **Down Arrow** keys.




Using Help

Navigating the Help Files

- To display a selected topic in the Topic Pane, select it in the Contents listing, then press the **Enter** key.



- To expand or collapse a selected topic, press the **Right Arrow** or **Left Arrow** key.

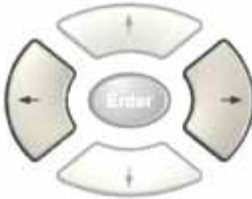


Back to Top

Topic Pane Operations

- To scroll up or down within a topic, press either the **Up Arrow** key or **Down Arrow** key.



- To go **back**
(that is, to display the previously-viewed topic), **either**:
Hold down the **Alt** key, then press the **Left Arrow** key.

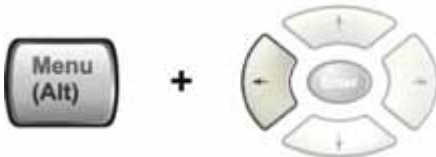


Or:

Press the **Bk Sp** key.



- To go **forward**, hold down the **Alt** key, then press the **Right Arrow** key.

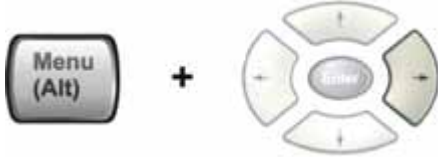

(The "Forward" operation has no effect unless there have been previous "Back" operations.)

- To go to the next or previous page, use the **Forward Tab** or **Backward Tab** keys



to select the **Next Page** or **Previous Page** key



then press **Enter**.



- To print the currently displayed, topic, press the Front-panel **Print** key



[Back to Top](#)

Selecting a Hyperlink

To select and follow a hyperlink on a Help page:.

1. Ensure that the focus is in the **Topic Pane**.
(If necessary, toggle the focus between the Navigation Pane and the Topic Pane by pressing the [Next Window Key](#).)
2. Move from link to link in the Topic Pane by pressing the **Forward Tab** and **Backward Tab** keys.



Links become highlighted upon selection.

Using Help

Navigating the Help Files

3. When you have selected the desired link, activate it by pressing the **Enter** key.



[Back to Top](#)

Finding a Topic


To display a different Help topic by selecting it from the Contents tab of the Navigation Pane:

1. Ensure that the focus is in the Contents tab of the Navigation Pane.
(If necessary, toggle the focus between the Navigation Pane and the Topic Pane, by pressing the [Next Window Key](#). Then press **Ctrl + Forward Tab** or **Backward Tab** to select the Contents tab.)
2. Move up or down the Contents list, by pressing the **Up Arrow** or **Down Arrow** keys.



Topics become highlighted upon selection.

3. Display the selected topic, by pressing the **Enter** key.

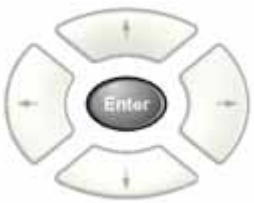

[Back to Top](#)

Functions that cannot be used without a Mouse and Keyboard

The following parts of the HTML Help System **cannot** easily be used without attaching a mouse and keyboard to the instrument.

- The buttons in the Help Button Bar, consisting of: **Hide**, **Back**, **Print** and **Options**.
- The functionality of the Search Tab of the Navigation Pane.
- The functionality of the Favorites Tab of the Navigation Pane.

[Back to Top](#)

Definition of Terms

Many special terms are used throughout this documentation. The table below provides brief definitions of commonly-used terms. Please refer to the "Getting Started Guide" for detailed explanations.

Term	Meaning
Default Unit	The default measurement unit of the setting.
Default Terminator	Indicates the units that will be attached to the numeric value that you have entered. This default will be used from the front panel, when you terminate your entry by pressing the Enter key, rather than selecting a units key. This default will be used remotely when you send the command without specifying any units after your value(s).
Dependencies/ Couplings	Some commands may be unavailable when other parameters are set in certain ways. If applicable, any such limitations are described here.
Example	Provides command examples using the indicated remote command syntax.
Factory Preset	Describes the function settings after a Factory Preset .
Key Path	The sequence of Front-panel keys that accesses the function or setting.
Knob Increment/Decrement	The numeric value of the minimum increment or decrement that is applied when turning the thumb wheel knob.
Max	The Maximum numerical value that the setting can take.
Min	The Minimum numerical value that the setting can take.
Meas Global	The functionality described is the same in all measurements.
Meas Local	The functionality described is only true for the measurement selected.
Mode Global	The functionality described is the same for all modes.
Preset	In some cases, a Preset operation changes the status of a parameter. If the operation of the key specified is modified by a Preset operation, the effect is described here.
Range	Describes the range of the smallest to largest values to which the function can be set. If you try to set a value below the minimum value, the instrument defaults to the minimum value. If you try to set a value above the maximum value, the instrument defaults to the maximum value.
Remote Command	Shows the syntax requirements for each SCPI command.
Remote Command Notes	Additional notes regarding Remote Commands.
Resolution	Specifies the smallest change that can be made to the numeric value of a parameter.
SCPI Status Bits/ OPC Dependencies	Pressing certain keys may affect one or more status bits. If applicable, details are given here.

Term

State Saved

Meaning

Indicates what happens to a particular function when the instrument state is saved (either to an external memory device or the internal D: drive). It also indicates whether the current settings of the function are maintained if the instrument is powered on or preset using **Power On Last State** or **User Preset**.

[Back to Top](#)

Viewing Help Files on a separate Computer

You may want to view the help pages **without** having them appear on top of the instrument's screen.

Two separate Help files are available for each instrument Mode (or Measurement Application). The two files contain all the same help pages in different formats:

1. HTML Help (CHM) format.

These files are installed on the instrument's hard disk. To copy these files to another computer, see [“Copying the HTML Help \(CHM\) Files” on page 96](#) below.

2. Adobe Acrobat (PDF) format.

These files are called "Users & Programmers References". They are included on the Documentation CD supplied with the instrument, or may be downloaded from the Agilent web site.

For details of the names and locations of these files, see [“Additional Documentation” on page 83](#).

For details of how to navigate PDF files, see [“Navigating Acrobat \(PDF\) Files” on page 97](#).

You can copy any of the CHM or PDF files to another computer, then open and view the help pages in the file on that computer.

Your choice of which file to copy and view may depend on what you want to do with the file (for example, whether you want to print it and read the paper copy, or view it on the computer).

The table below compares the relative advantages of the two formats:

Format Type	HTML Help Format (CHM Files)	Acrobat Format (PDF Files)
File Extension	CHM	PDF
Software Required to view file	Microsoft Windows operating system only, with Microsoft Internet Explorer installed.	Free Adobe Reader software can be downloaded for many operating systems, including: Microsoft Windows, Macintosh, Linux, Solaris.
Full Text Search?	Yes	Yes
Printable?	Yes, but with limited control.	Yes. Full print control. See “Printing Acrobat Files” on page 98 .
Printable Table of Contents?	No	Yes
Navigable without a Mouse and Keyboard?	Yes, but with some loss of functionality.	No
Has Page Numbers?	No	Yes
Context-Sensitive Display?	Yes, when viewed using the X-Series Analyzer application window.	No
Indexed?	Yes	No

Active Hyperlinks? Yes

Yes

[Back to Top](#)

Copying the HTML Help (CHM) Files

You can find the HTML Help (.chm) files:

- **Either**, on the documentation CD that came with the instrument,
- **Or**, in a special directory on the instrument's hard disk. The directory path is:
C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help

NOTE You can open and view the HTML Help files only on a computer that has Microsoft Windows and Microsoft Internet Explorer installed.

[Back to Top](#)

Other Help Resources

- All available documentation is present either on the test set hard disk, either as HTML Help or Acrobat PDF files, or may be downloaded from the Agilent web site.
- To view a list of links to other documentation, see “Additional Documentation” on page 83, or click the item “Additional Documentation” in the Contents tab of the Help Navigation Pane.
- Many of the supporting documents use the Adobe Acrobat (PDF) file format. You can view PDF files using the pre-installed Adobe Reader software.


The Adobe Reader user interface differs from the Windows Help interface. For full details, see “Navigating Acrobat (PDF) Files” on page 97 and “Printing Acrobat Files” on page 98.

Navigating Acrobat (PDF) Files

IMPORTANT To navigate PDF files effectively, you must attach a mouse and keyboard to the instrument. If it is not possible to attach a mouse and keyboard to the instrument, you should transfer the PDF file to a separate computer, then open it on that computer.

Acrobat Reader Window

When a PDF file is open and being viewed, the instrument’s display shows the Adobe Acrobat Reader Window, which has the following features.

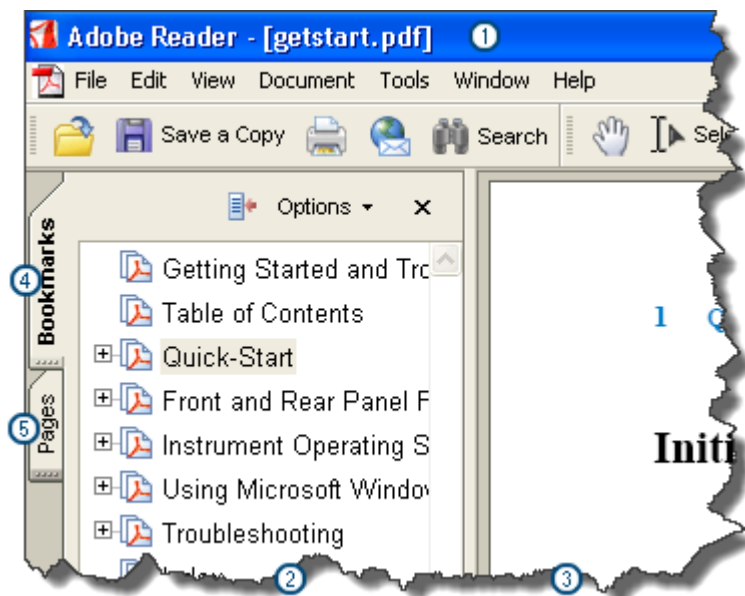

1. Adobe Acrobat Reader Window title bar
2. Navigation Pane
3. Document Pane

4. Navigation Pane: Bookmarks tab

5. Navigation Pane: Pages tab

The Navigation Pane also has tabs labeled Attachments and Comments, but, typically, PDF files for Agilent X-Series Analyzers contain useful content only under the Bookmarks and Pages Tabs.


Unlike the HTML Help Window, the Acrobat Reader Window is **not** embedded in the instrument's Application window, but can be resized, moved and closed independently of the Application window.

[Back to Top](#)

Printing Acrobat Files

NOTE The driver for the appropriate printer must be installed on the instrument's hard disk before any file can be printed. For driver installation instructions, see the printer manufacturer's documentation.

To print all or part of an open Acrobat file from the instrument, do the following.

1. **Either,**
 - a. click on the Print icon in the Acrobat Reader toolbar,
The image shows a standard printer icon with a sheet of paper coming out, set against a light background with a subtle shadow.
 - b. **or,** select File > Print from the menu.
2. The Acrobat Reader Print dialog opens.
3. Choose the desired options within the Print dialog, then click OK to print (or click Cancel to cancel printing).

NOTE Clicking the Properties button within the Print dialog opens a window containing controls that are specific to the printer model installed. Check the printer manufacturer's documentation for details of these capabilities.

[Back to Top](#)

Context Sensitive Help not Available

There is currently no context-sensitive help for the function you selected. However, this does not necessarily mean that no help is available for the function.

To find related information:

- If your instrument has an attached Mouse and Keyboard, see “Searching for a Help Topic” on page 88.
- If your instrument does **not** have an attached Mouse and Keyboard, see “Finding a Topic” on page 92.
- To learn how to select on-page links **without** a Mouse attached to your instrument, see “Selecting a Hyperlink” on page 91.

TIP To understand the organization of Help, see “How Help is Organized” on page 80.

Help Map ID	1002
-------------	------

Using Help
Context Sensitive Help not Available

2


About the Test Set

The EXT Wireless Communication Test Set is a one-box tester, combining a vector signal analyzer with a vector signal source in a single instrument. The analyzer and source are each provided with a dedicated list sequencer, for rapid execution of a series of stimulus or measurement steps. The test set is optimized for production testing (including calibration and verification) of wireless mobile devices.

E6607A/B




E6607C

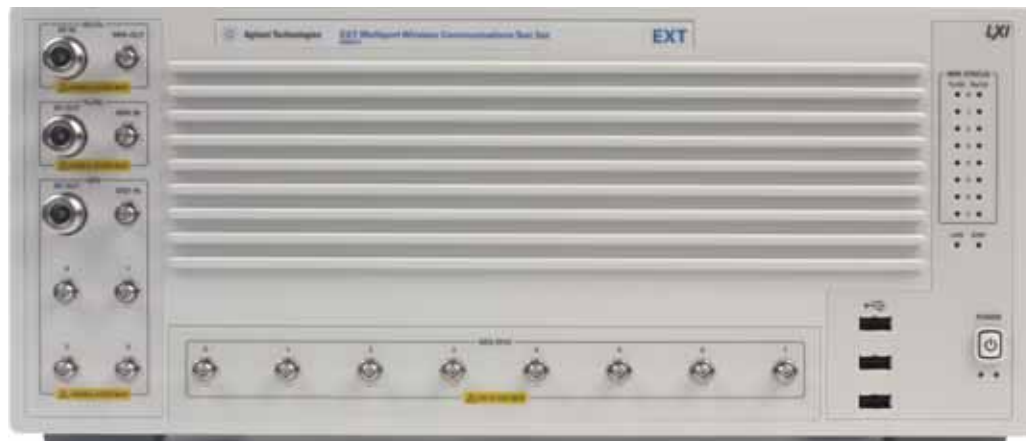

How the Test Set Is Used

The E6607A/B/C Wireless Communication Test Set is typically used in a production test environment where mobile devices are being calibrated and verified in a “non-signalling” mode (that is, in a mode of operation which does not involve call processing, and which relies instead on test functions which are built into the device under test).

The test controller communicates with both the DUT and the test set to coordinate Rx and Tx test operations and to collect test results. However, both the DUT and the test set perform their own independent operations during the process (for example, internal test routines run by the DUT, and sequences run by the test set).

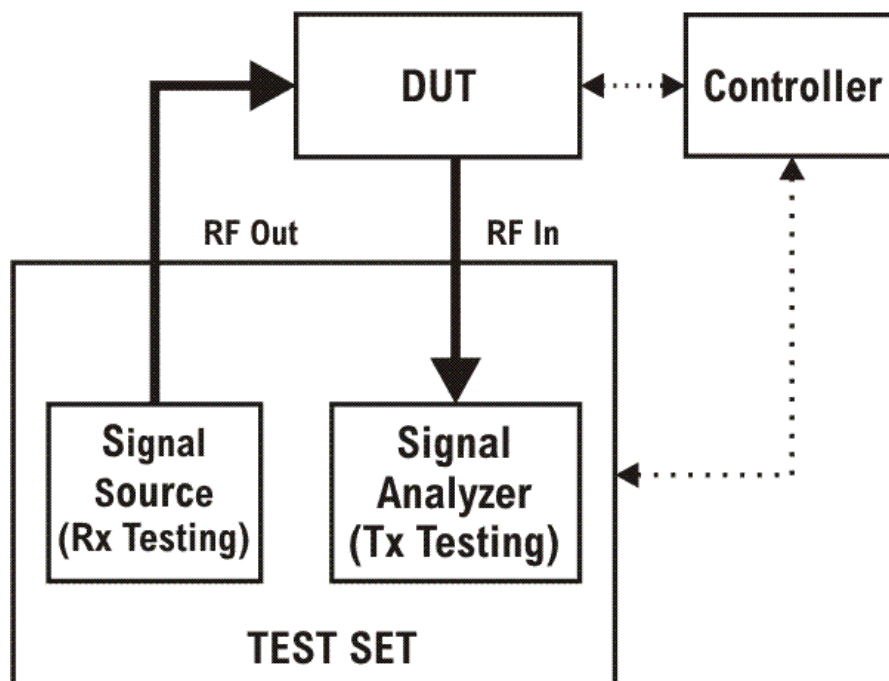

Receiver Testing

The source within the test set can supply test signals to the DUT for the purpose of receiver testing. Typically the source plays a waveform which has been downloaded to the test set (for example, a .wfm file generated using Agilent Signal Studio or some other application). In receiver testing, the test set is providing the necessary stimulus for measurements which are performed by the DUT itself, using its built-in self-test capabilities. The test results (bit error rate, for example) come back to the controller from the DUT rather than from the test set.

Transmitter Testing

The signal analyzer within the test set receives and measures signals from the DUT for the purpose of transmitter testing. Because the DUT is not being operated in a call-processing mode, the measurements


made by the analyzer pertain to signal quality (power, modulation accuracy, and so on) rather than to the data content of the transmitted signal. In transmitter testing, the measurement results come back to the controller from the test set rather than the DUT.

Hardware Elements of the Test Set


The test set includes a source and analyzer, which operate independently. You can control either of them directly (using front panel keys, the virtual front panel, or remote commands) or indirectly (by running a sequence, in which case the source and analyzer are operated by their list sequencers).

The source list sequencer and analyzer list sequencer function independently; however, you can coordinate their actions by setting them up to exchange trigger signals.

E6607A/B

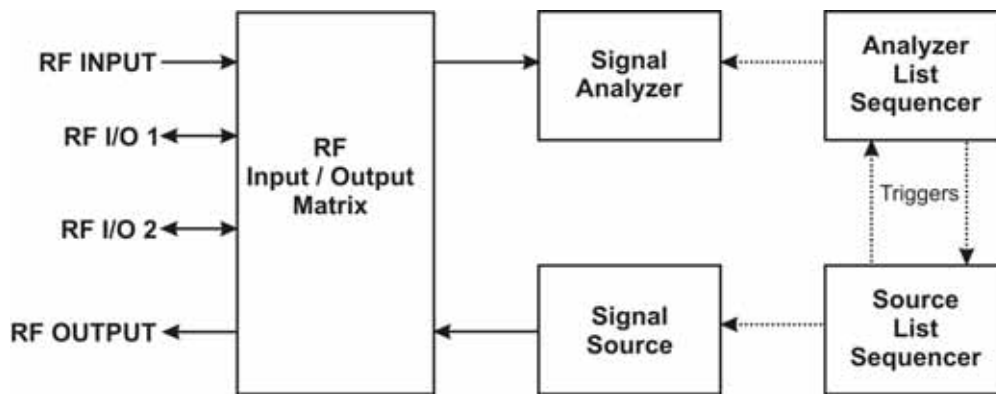


E6607C

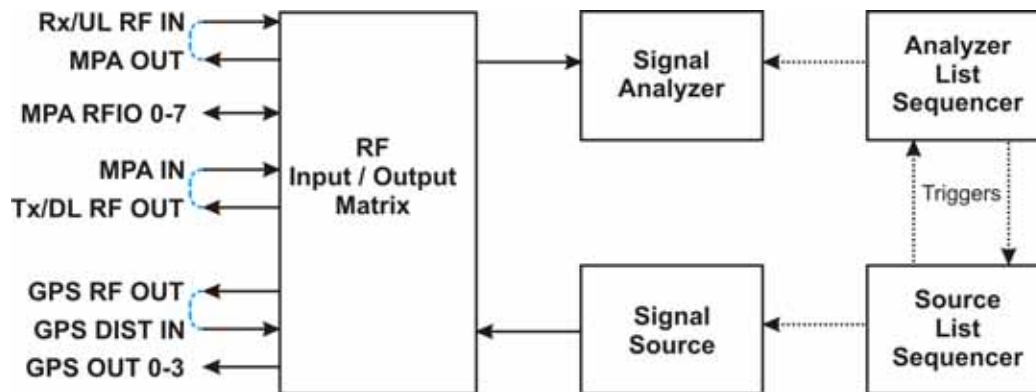


E6607A/B

The source and analyzer communicate with the device under test through an RF input/output matrix with four ports. Two of the ports have a fixed direction: an RF Output port which can be connected only to the source, and an RF Input port which can be connected only to the analyzer.

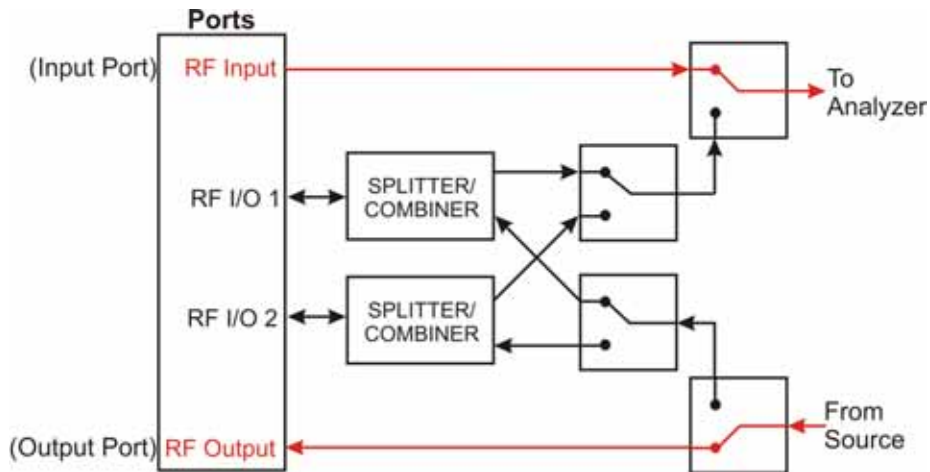


E6607C

The source and analyzer communicate with the device under test through an RF input/output matrix with multiple ports. Two of the ports have a fixed direction: an Tx/DL RF Out port which can be connected only to the source, and an Rx/UL RF In port which can be connected only to the analyzer.

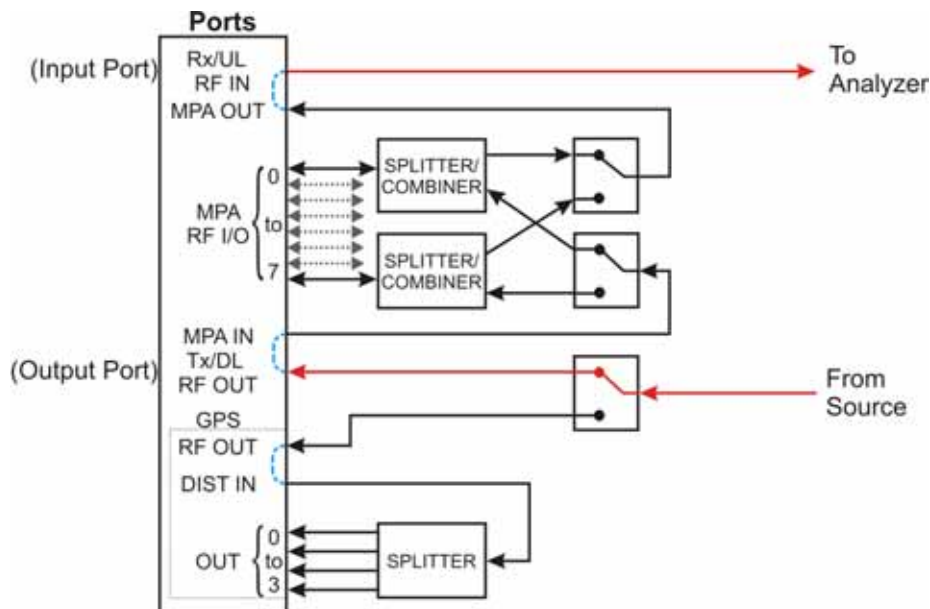


E6607A/B

The remaining two ports (the RF I/O ports) have bi-directional capability; they can be connected (through a splitter/combiner) to the source, to the analyzer, or to both at once. For example, in testing a mobile phone, both the source and the analyzer might be set up to interface with the device through the RF I/O 1 port, employing different frequencies for the transmit and receive signals.

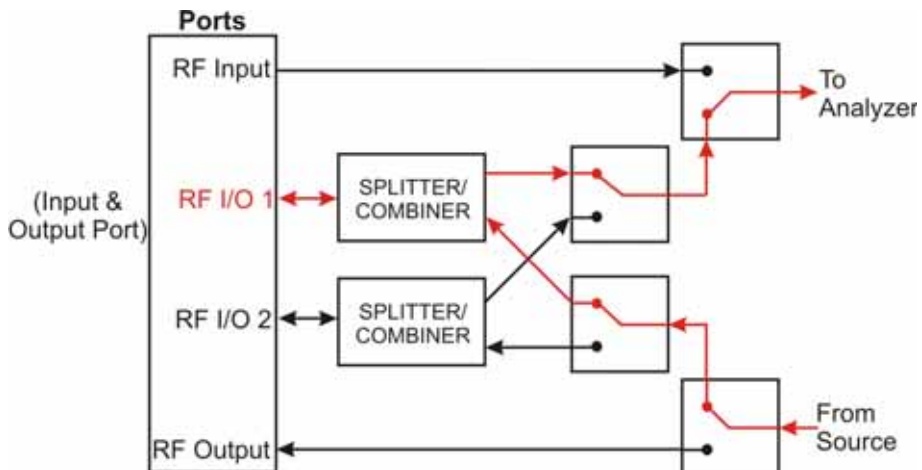


E6607C

The eight MPA RFIO ports have bi-directional capability; they can be connected (through internal splitter/combiners) to the source, to the analyzer, or to both at once. For example, in testing a mobile phone, both the source and the analyzer might be set up to interface with the device through the MPA RFIO 0 port, employing different frequencies for the transmit and receive signals.

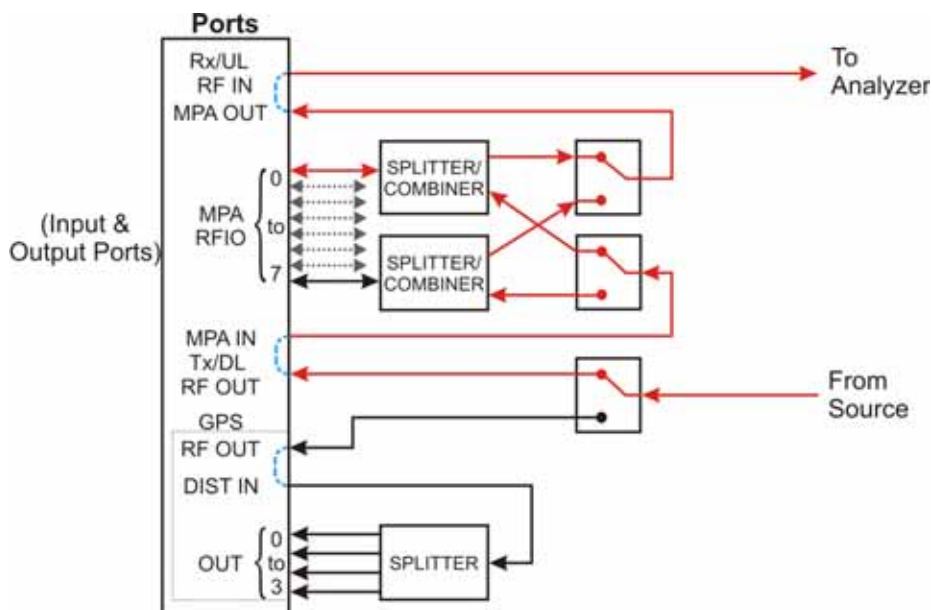


E6607A/B

The RF I/O ports can also be used in a single direction, as in the case illustrated below, where RF I/O 1 serves as the input port, and RF Output serves as the output port.

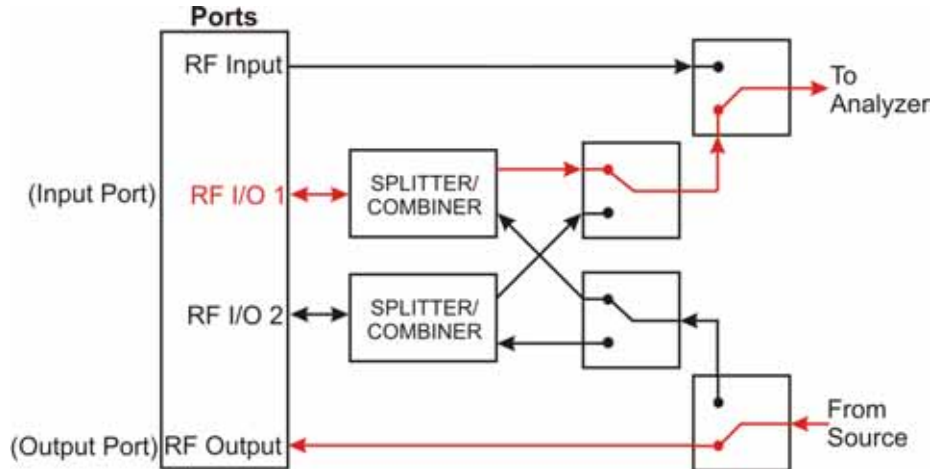


E6607C

The MPA RFIO ports can also be used in a single direction, as in the case illustrated below. In this case, the MPA RFIO 0-7 ports are paired and each pair is connected to a single DUT. In each pair, one serves as the input port and the other serves as the output port. This provides for a total of 4 DUTs connected to a single test set at the same time.

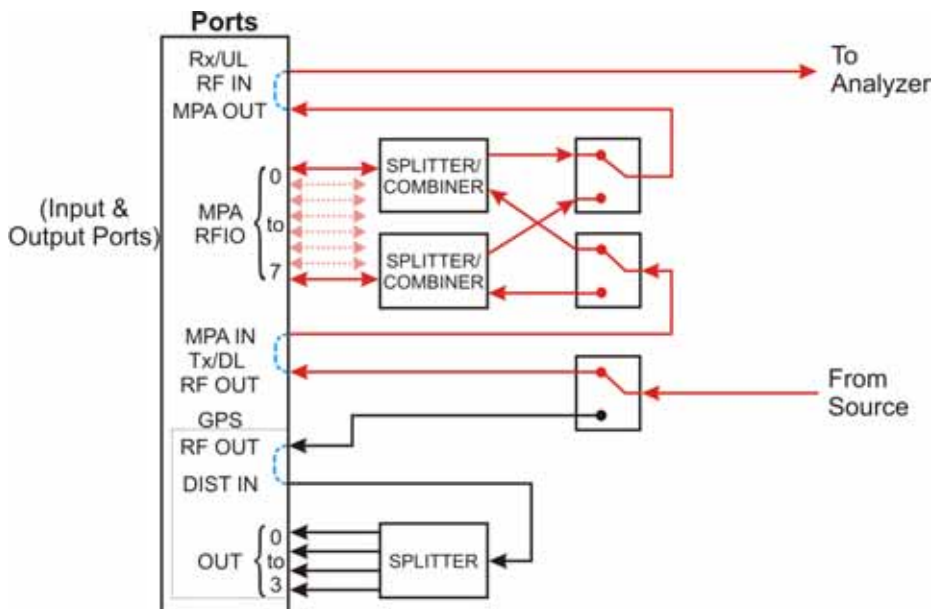

E6607C

When making GPS tests, the GPS OUT ports are fixed direction and are connected only to the source, as in the case illustrated below. In this case, four of the MPA RFIO 0-7 ports are paired with the four GPS OUT ports and each pair is connected to a single DUT. In each pair, the MPA RFIO port serves as the input port and the GPS OUT port serves as the output port. This provides for a total of 4 DUTs connected to a single test set at the same time.

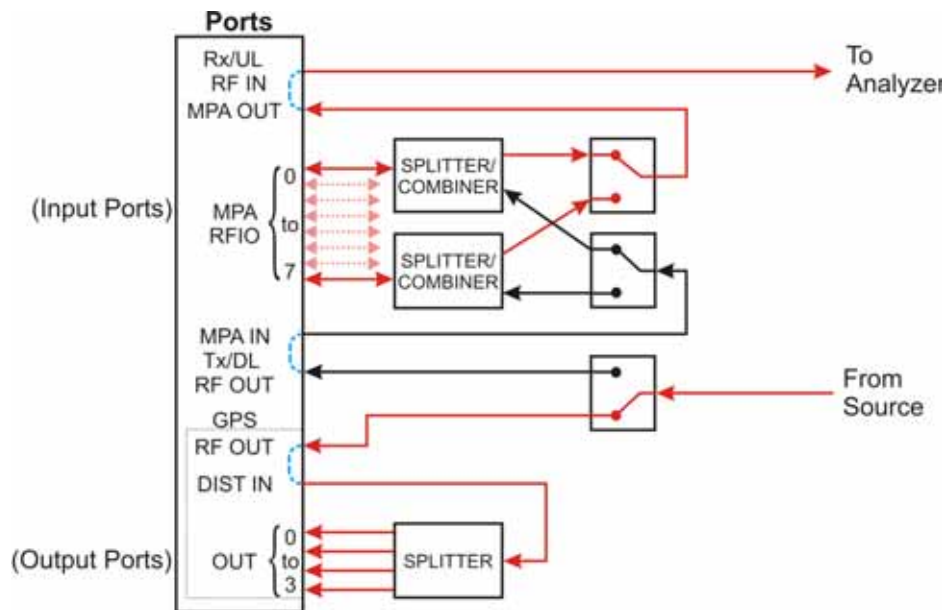

E6607A/B

For any sequence that the test set runs, a single port must be designated the input port, and a single port must be designated the output port. These port assignments cannot be changed during a sequence. The rules for port assignments are:

- Only one port at a time can be the input port, and it must be one of the following: RF Input, RF I/O 1, or RF I/O 2.
- Only one port at a time can be the output port, and it must be one of the following: RF Output, RF I/O 1, or RF I/O 2.
- RF I/O 1 can serve as both the input port and the output port simultaneously, but in that case it must be the only port in use.
- RF I/O 2 can serve as both the input port and the output port simultaneously, but in that case it must be the only port in use.

Although the two RF I/O ports cannot both be used bi-directionally at the same time, having two bi-directional ports offers practical advantages in reducing the impact of fixturing delays. For example, you can set up two sequences which are exactly alike, except that one of them designates RF I/O 1 as the input and output port, while the other sequence uses RF I/O 2 in the same way. During testing, the two sequences are run alternatively; a DUT is tested on one port while the next DUT is being fixtured on the other port.

E6607C

For any sequence that the test set runs using the MPA RFIO or GPS OUT ports, a single MPA RFIO port must be designated the input port. For the output signal to the DUT, any of the MPA RFIO ports can be designated as output ports. Up to eight of the MPA RFIO ports can provide an output signal at one time. (However, if the MPA RFIO ports are used in input/output pairs, this will limit the number of available output ports to four.) These port assignments cannot be changed during a sequence. The rules for port assignments are:

- Only one port at a time can be the input port, and it must be one of the following: Rx/UL RF IN or any one of MPA RFIO 0-7.
- MPA RFIO 0-7 serve as both input ports or output ports when the MPA RF OUT is connected to the MPA IN.
- GPS 0-3 serve as output ports simultaneously when the GPS OUT is connected to the Dist .

Software Elements of the Test Set

The test set firmware, which runs within the Windows XP Pro operating system, controls the source and analyzer, and provides access to a variety of licensed measurement applications which are available to be installed on the test set.

The basic test set includes licenses for two applications: the IQ Analyzer Mode (U9060A) and the Sequence Analyzer Mode (U9065A). Several other applications are available for installation. Many of the measurements which are included in these applications can be run from within the Sequence Analyzer mode, and not just in the native mode of the measurement. The table below shows all the available applications, and the measurements they include. Measurements which can be run from within the Sequence Analyzer mode are marked “available to sequencer” in the table.

Table 2-1 Applications and Measurements in the Test Set

Application	Measurement
IQ Analyzer Mode (U9060A)	<ul style="list-style-type: none"> • IQ Waveform • Complex Spectrum
Analog Demodulation Mode (U9063A)	<ul style="list-style-type: none"> • Amplitude Modulation • Frequency Modulation • Phase Modulation
Sequence Analyzer Mode (U9065A)	<ul style="list-style-type: none"> • Basic measurements: Power, Phase & Frequency, Discrete PAVT, IQ Data • List Sequencer • All application-specific measurements listed below that are marked “available to sequencer”.

Table 2-1 Applications and Measurements in the Test Set

Application	Measurement
GSM/EDGE Mode (U9071A)	<ul style="list-style-type: none"> • Transmit Power, also known as Burst Power • Power Vs. Time, GSM & Edge versions (available to sequencer) • GMSK Phase & Frequency (available to sequencer) • Output RF Spectrum, GMSK & EDGE versions (available to sequencer) • EDGE Error Vector Magnitude (available to sequencer)
cdma2000 Mode (U9072A)	<ul style="list-style-type: none"> • Channel Power • Code Domain • ACP (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Occupied Bandwidth (available to sequencer) • Modulation Accuracy (available to sequencer) • QPSK Error Vector Magnitude (available to sequencer)
W-CDMA/HSPA Mode (U9073A)	<ul style="list-style-type: none"> • Channel Power • Adjacent Channel Power (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Occupied Bandwidth (available to sequencer) • Code Domain (available to sequencer) • Modulation Accuracy (available to sequencer) • QPSK Error Vector Magnitude (available to sequencer) • Power Control (available to sequencer)
“WiMAX” Mode (802.16 OFDMA, U9075A)	<ul style="list-style-type: none"> • Channel Power • Adjacent Channel Power • Spectrum Emission Mask • Modulation Analysis
1xEVDO Mode (U9076A)	<ul style="list-style-type: none"> • Channel Power • Reverse-Link Code Domain • Adjacent Channel Power (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Occupied Bandwidth (available to sequencer) • Reverse-Link Modulation Accuracy (available to sequencer)

Table 2-1 Applications and Measurements in the Test Set

Application	Measurement
TD-SCDMA with HSPA/8PSK (U9079A)	<ul style="list-style-type: none"> • Burst Power (Transmit Power) • Power vs Time • ACP (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Occupied Bandwidth (available to sequencer) • Code Domain Power (available to sequencer) • Conformance Error Vector Magnitude (available to sequencer)
LTE Mode (U9080A)	<ul style="list-style-type: none"> • Channel Power • Modulation Analysis (available to sequencer) • Occupied Bandwidth (available to sequencer) • ACP (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Conformance Error Vector Magnitude (available to sequencer)
Bluetooth (U9081A)	<ul style="list-style-type: none"> • ACP • LE In-band Emissions • EDR In-band Spurious Emissions • Occupied Bandwidth • Transmit Analysis
LTE TDD Mode (U9082A)	<ul style="list-style-type: none"> • Channel Power • Occupied Bandwidth (available to sequencer) • ACP (available to sequencer) • Spectrum Emission Mask (available to sequencer) • Transmit On/Off Power (available to sequencer) • LTE Modulation Analysis (available to sequencer) • Conformance Error Vector Magnitude (available to sequencer)

NOTE Some measurements which are not marked “available to sequencer” can be replaced by a basic measurement function which is available in the Sequence Analyzer mode. For example, it is possible to use the basic Power measurement in Sequence Analyzer mode as a substitute for a Channel Power measurement from one of the other modes. Some measurements are not currently supported by the analyzer list sequencer, and therefore can be run only in the native mode of the measurement.

Methods of Operating the Source

Regardless of which measurement mode is currently selected, the source can be operated using front panel keys, the virtual front panel, or remote commands, or by initiating the source list sequencer (which executes a predefined series of signal-generation steps).

The RF output of the source can be modulated by its internal arbitrary waveform generator, which runs waveform segment files that have been downloaded to the test set and loaded into ARB memory. (If a source sequence refers to a number of different waveform segments, all of these segments need to be loaded into ARB memory before the sequence can execute.)

In addition to playing back waveform segments in ARB memory, the source provides basic modulation functions (AM, FM, and PM).

Waveform Segment Files

A waveform segment can be defined in a set of binary files (an I/Q data file with its supporting header and marker files) or in a .wfm file (a combined file format which is produced by Agilent Signal Studio). Playback of .wfm segments requires installation of a Signal Studio license on the test set.

Where the segment is represented by separate binary files, the files need to be placed in the same directory, and need to follow a naming convention which enables the test set to recognize them: if the I/Q data file is called "testWaveform.bin", then the header file needs to be called "testWaveform_hdr.bin" and the marker file needs to be called "testWaveform_mkr.bin". The I/Q data file is the one that is loaded to ARB memory and is referenced by name in source sequences.

Methods of Operating the Analyzer

When a measurement mode other than Sequence Analyzer mode is selected, the analyzer can be operated using front panel keys, the virtual front panel, or remote commands. When the analyzer is used in this way, measurements are made in their native measurement mode (for example, GSM measurements in GSM/EDGE mode).

In Sequence Analyzer mode, initiating the analyzer list sequencer causes it to execute a predefined series of acquisitions and measurements. As described in [“Software Elements of the Test Set” on page 108](#) Sequence Analyzer mode incorporates many measurements from other modes; that is, measurements such as EDGE EVM in GSM/EDGE mode can also be included in a sequence, so that the measurements are made when the analyzer list sequencer is initiated. The Sequence Analyzer mode also includes four basic measurements (power, frequency, phase, and I/Q data).

Creating Sequences

A sequence is a set of parameters which defines a series of signals to be generated, or acquisitions to be analyzed, or both. The parameters can be saved to a text file and later recalled. Initiating the sequencers causes the source and/or analyzer to execute all steps defined in the sequence. (A series of SCPI commands can also be used for the same purpose.)

Although it is possible to create and save a simple sequence using front panel keys, the complexity of the format makes it preferable to use a spreadsheet template or other tool to create a sequence (which is saved to a text file).

The easiest method is to use Agilent Sequence Studio, a PC application designed specifically to generate

sequences for the EXT Wireless Communication Test Set. Sequence Studio is able to load waveform traces directly from the test set, so that the analysis intervals in the sequence can be aligned with the waveform, using an interactive graph display; this method of creating sequences is much more efficient than typing in numerical values.

Executing Sequences

Sequences are executed by initiating the source list sequencer, the analyzer list sequencer, or both.

The source list sequencer can be initiated (in any measurement mode) by using the **[Source], List Sequencer, Initiate Sequence** key, or by sending the `:SOURCE:LIST:TRIG` command.

The analyzer list sequencer can be initiated (in the Sequence Analyzer mode) by using the **[Restart]** key, or by sending the `:INIT` command.

When both list sequencers are used together, initiation of the sequencers must be carefully coordinated. It is not possible for both sequencers to be initiated absolutely simultaneously. When both are used, the source list sequencer should always be initiated first. There are two ways to coordinate the sequencers so that they are initiated in the proper order:

- Enable **Meas Setup, Include Source in Sequence**. When this selection is made, both of the list sequencers are initiated automatically, in the correct order, when you use a command or key to initiate the analyzer sequence (in this case, the source sequence cannot be initiated independently of the analyzer sequence).
- If “Include Source in Sequence” is disabled, then the source and analyzer must be initiated independently, and the source must be initiated first.

In addition to the initiating the sequencers, it is also necessary to trigger them. Output and input triggering for the two sequencers (as defined in the sequences they are executing) must be set up to coordinate the timing of their operations. Typically, the analyzer list sequencer generates a trigger input to the source list sequencer, so that the source begins generating a signal once the analyzer is ready to receive and analyze it.

Installing Application Software

When you want to install a measurement application after your initial hardware purchase, you only need to license it. All of the available applications are loaded in your test set at the time of purchase.

When you purchase an application, you receive an entitlement certificate that is used to obtain a license key for that particular measurement application. Enter the license key that you obtain into the EXT test set to activate the new measurement application.

For the latest information on Agilent X-series measurement applications and upgrade kits, visit the following internet URL: <http://www.agilent.com/find/ext>

Viewing a license key

Measurement personalities purchased with your test set have been installed and activated at the factory before shipment. The test set requires a unique **License Key** for every measurement application purchased. The license key is a hexadecimal string that is specific to your measurement application, test set model number and serial number. It enables you to install, or reactivate that particular application.

Press **System, Show, System** to display which measurement applications are currently licensed in your test set.

Go to the following location to view the license keys for the installed measurement applications:

C:\Programing Files\Agilent\Licensing

NOTE You may want to keep a copy of your license key in a secure location. You can print out a copy of the display showing the license numbers to do this. If you should lose your license key, call your nearest Agilent Technologies service or sales office for assistance.

Obtaining and installing a license key

If you purchase an additional application that requires installation, you will receive an “Entitlement Certificate” which may be redeemed for a license key for one test set. Follow the instructions that accompany the certificate to obtain your license key.

Installing a license key for the selected application can be done using a USB memory device. To do this, you put the license file on the USB memory device at the root level. Follow the instructions that come with your software installation kit.

Installing a license key can also be done manually using the license management application in the test set. It is found through the test set front panel keys at **System, Licensing...**, or internally at C:\Programming Files\Agilent\Licensing.

NOTE You can also use these procedures to reinstall a license key that has been accidentally deleted, or lost due to a memory failure.

Missing and old Measurement application software

All the software applications were loaded at the time of original test set manufacture. It is a good idea to regularly update your software with the latest available version. This assures that you get any improvements and expanded functionality that is available.

Because the software was loaded at the initial purchase, there may be additional measurement applications that are now available. If the application you are interested in licensing is not available, you will need to do a software update. (Press **System, Show, System.**)

Check the Agilent internet website for the latest software versions available for downloading:

http://www.agilent.com/find/ext_software

You must load the updated software package into the test set from a USB drive, or directly from the internet. An automatic loading program is included with the files.

X-Series options and accessories

“EXT Test Set Options” on page 115

“EXT X-series accessories” on page 115

“Advanced Measurement Application Software” on page 115

EXT Test Set Options

Product	Description
<EXT model number>	Wireless communications test set
<EXT model number>-503	Frequency range from 10 MHz to 3.6 GHz
<EXT model number>-504	Frequency range from 10 MHz to 3.8 GHz
<EXT model number>-UK6	Commercial Calibration Certificate with Test Data

EXT X-series accessories

Product	Description
<EXT model number>-EFM	USB storage device 4 GB blank
<EXT model number>-KYB	Keyboard, USB interface
<EXT model number>-HTC	Hard transit case
<EXT model number>-ICP	Rackmount kit with handles
<EXT model number>-1CN	Front handle kit
<EXT model number>-1CM	Rackmount kit
<EXT model number>-1CR	Rack slide kit

Advanced Measurement Application Software

For a current list of application software, go to the following URLs.

<http://www.agilent.com/find/ext>

Select the **Options** tab on the top of the webpage.

Front-Panel Features (E6607A/B)



Item		Description
#	Name	
1	Menu Keys	Key labels appear to the left of the menu keys to identify the current function of each key. The displayed functions are dependent on the currently selected Mode and Measurement, and are directly related to the most recent key press.
2	Measurement Keys	These keys select the Mode, and the Measurement within the mode. They also control the initiation and rate of recurrence of measurements.
3	Setup Keys	These keys set the parameters used for setting up the test set in the current Mode.
4	Marker Keys	Markers are often available for a measurement, to measure a very specific point/segment of data within the range of the current measurement data.
5	Utility Keys	These keys control system-wide functionality such as <ul style="list-style-type: none"> test set configuration information and I/O setup, printer setup and printing, file management, save and recall, test set presets.
6	Probe Power	Supplies power for external high frequency probes and accessories.
7	Headphones Output	Headphones can be used to hear any available audio output.
8	Back Space Key	Press this key to delete the previous character when entering alphanumeric information. It also works as the Back key in Help and Explorer windows.
9	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, DVD drive or hard drive.

Item		Description
#	Name	
10	Delete Key	Press this key to delete files, or to perform other deletion tasks.
11	Local/Cancel/(Esc) Key	<p>If you are in remote operation the Local key</p> <ul style="list-style-type: none"> • returns test set control from remote back to local (the front panel). • turns the display on (if it was turned off for remote operation). • can be used to clear errors. (Press the key once to return to local control, and a second time to clear error message line.) <p>If you have not already pressed the units or Enter key, Cancel exits the currently selected function without changing its value.</p> <p>Esc works the same as it does on a pc keyboard. It</p> <ul style="list-style-type: none"> • exits Windows dialogs • clears errors • aborts printing • cancels operations. <p>This key also exits the help system if it has been accessed.</p>
12	Numeric Keypad	Enters a specific numeric value for the current function. Entries appear on the upper left of the display, in the measurement information area.
13	Enter and Arrow Keys	<p>The Enter key terminates data entry when either no unit of measure is needed, or you want to use the default unit.</p> <p>The arrow keys</p> <ul style="list-style-type: none"> • Increment and decrement the value of the current measurement selection. • Navigate help topics. • Navigate, or make selections, within Windows dialogs. • Navigate within forms used for setting up measurements. • Navigate within tables. <p>NOTE The arrow keys cannot be used to move a mouse pointer around on the display.</p>
14	Menu/ (Alt) Key	Alt works the same as a pc keyboard. Use it to change control focus in Windows pull-down menus.
15	Ctrl Key	Ctrl works the same as a pc keyboard. Use it to navigate in Windows applications, or to select multiple items in lists.
16	Select / Space Key	Select is also the Space key and it has typical pc functionality. For example, in Windows dialogs, it selects files, checks and unchecks check boxes, and picks radio button choices. It opens a highlighted Help topic.
17	Tab Keys	Use these keys to move between fields in Windows dialogs.
18	Knob	Increments and decrements the value of the current active function.
19	Return Key	Exits the current menu and returns to the previous menu. Has typical pc functionality.
20	Full Screen Key	Pressing this key turns off the softkeys to maximize the graticule display area.

About the Test Set
Front-Panel Features (E6607A/B)

Item		Description
#	Name	
21	Help Key	Initiates a context-sensitive help display for the current Mode. Once Help is accessed, pressing a front panel key brings up the help topic for that key function. Use the Local/Cancel/(Esc) key to exit help.
22	Speaker Control Keys	Enables you to increase or decrease the speaker volume, or mute it.
23	Window Control Keys	These keys select between single or multiple window displays. They zoom the current window to fill the data display, or change the currently selected window. They can be used to switch between the Help window navigation pane and the topic pane.
24	Power Standby/ On	Turns the test set on. A green light indicates power on. A yellow light indicates standby mode. <div style="border: 1px solid gray; padding: 2px; display: inline-block; margin: 5px 0;">NOTE</div> The front-panel switch is a standby switch, not a LINE switch (disconnecting device). The test set continues to draw power even when the line switch is in standby. The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.
25	RF I/O 1 Connector	RF Input/Output port #1 (communicates with both the source and the analyzer).
26	RF I/O 2 Connector	RF Input/Output port #2 (communicates with both the source and the analyzer).
27	RF Output	The test set's RF output port (communicates only with the source).
28	RF Input	The test set's RF input port (communicates only with the analyzer).

Overview of key types

The keys labeled **FREQ Channel**, **System**, and **Marker Functions** are all examples of front-panel keys.



Most of the dark or light gray keys access menus of functions that are displayed along the right side of the display. These displayed key labels are next to a column of keys called menu keys.


Menu keys list functions based on which front-panel key was pressed last. These functions are also dependant on the current selection of measurement application (**Mode**) and measurement (**Meas**).

If the numeric value of a menu key function can be changed, it is called an active function. The function label of the active function is highlighted after that key has been selected. For example, press **AMPTD Y Scale**. This calls up the menu of related amplitude functions. The function labeled **Ref Level** (the default selected key in the Amplitude menu) is highlighted. **Ref Level** also appears in the upper left of the display in the measurement information area. The displayed value indicates that the function is selected and its

value can now be changed using any of the data entry controls.



Some menu keys have multiple choices on their label, such as **On/Off** or **Top/Ctr/Bot** (as shown below). The different choices are selected by pressing the key multiple times. For example, the Auto/Man type of key. To select the function, press the menu key and notice that Auto is underlined and the key becomes highlighted. To change the function to manual, press the key again so that Man is underlined. If there are more than two settings on the key, keep pressing it until the desired selection is underlined.

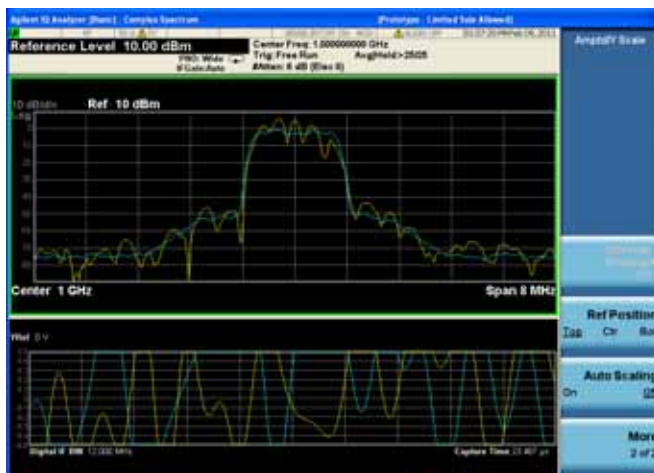

When a menu first appears, one key label is highlighted to show which key is the default selection. If you

About the Test Set Front-Panel Features (E6607A/B)

press **Marker Function**, the **Marker Function Off** key is the menu default key, and is highlighted.



Some of the menu keys are grouped together by a yellow bar running behind the keys near the left side or by a yellow border around the group of keys. When you press a key within the yellow region, such as **Marker Noise**, the highlight moves to that key to show it has been selected. The keys that are linked are related functions, and only one of them can be selected at any one time. For example, a marker can only have one marker function active on it. So if you select a different function it turns off the previous selection. If the current menu is two pages long, the yellow bar or border could include keys on the second page of keys.



In some key menus, a key label is highlighted to show which key has been selected from multiple available choices. And the menu is immediately exited when you press one of the other keys. For example, when you press the **Select Marker** key (in the **Marker** menu), it brings up its own menu of keys. The **Marker 1** key is highlighted. When you press the **marker 2** key, the highlight moves to that key and

the screen returns to the **Marker** menu.




If a displayed key label shows a small solid-black arrow tip pointing to the right, it indicates that additional key menus are available. If the arrow tip is not filled in solid then pressing the key the first time selects that function. Now the arrow is solid and pressing it again brings up an additional menu of

About the Test Set Front-Panel Features (E6607A/B)

settings.



Front-Panel Features (E6607C)

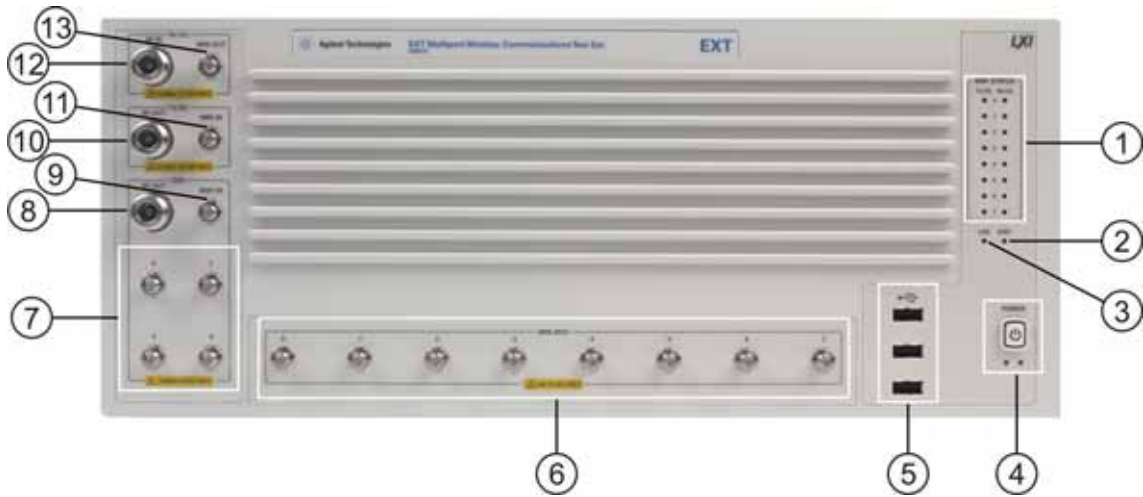

Item		Description
#	Name	
1	MPA Status	<p>MPA Status Indicator LEDs light indicating the status of the instrument:</p> <ul style="list-style-type: none"> Tx/DL 0 - 7 (these light to indicate that the related RFIO ports are being used to transmit RF outputs to the connected DUTs). Rx/UL 0 - 7 (these light to indicate that the related RFIO ports are being used to receive RF inputs from the connected DUTs). <p>NOTE There are no indicators for the GPS ports, because the ports cannot be switched on or off. Whatever RF input is provided to the GPS DIST IN port is always split and delivered to the GPS 0 - 3 ports.</p>
2	Stat	<p>SCPI Status Indicator LED lights to indicate that the instrument is ready to receive a remote SCPI command.</p>
3	LAN	<p>LAN Status Indicator LED lights to indicate that the instrument has made an active LAN connection.</p>
4	Power	<p>Power Standby/On switch and indicator LEDs. A green light indicates power on. A yellow light indicates standby mode.</p> <p>NOTE The front-panel switch is a standby switch, not a LINE switch (disconnecting device). The test set continues to draw power even when the line switch is in standby.</p> <p>The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.</p>
5	USB Connectors	<p>Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, DVD drive or hard drive.</p>

About the Test Set
Front-Panel Features (E6607C)

Item		Description
#	Name	
6	MPA RFIO, Ports 0 - 7	RF input and output connections to the DUTs (SMA connectors). The maximum safe input level at any of these ports is 2 W (+33 dBm), ± 15 Vdc.
7	GPS, Ports 0 - 3	RF input and output connections to the DUTs (SMA connectors). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), 0 Vdc. Because GPS Ports 0 - 3 are the outputs of a four-way splitter, the maximum output power levels from these ports are lower than for RFIO Ports 0 - 7; see the E6607C data sheet for specifics.
8	RF OUT	GPS RF output port (communicates only with the source). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), 0 Vdc.
9	DIST IN	GPS RF distribution input port (SMA connector). This port is connected to the four-way splitter that provides the signal to the 4 GPS output Ports 0 - 3. The maximum safe input level at any of these ports is 0.25 W (+24 dBm), 0 Vdc.
10	RF OUT	Tx/DL RF output port (communicates only with the source). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), ± 15 Vdc.
11	MPA IN	Tx/DL MPA RF input port (SMA connector). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), ± 15 Vdc.
12	RF IN	Rx/UL RF input port (communicates only with the analyzer). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), ± 15 Vdc.
13	MPA OUT	Rx/UL RF MPA output port (SMA connector). The maximum safe input level at any of these ports is 0.25 W (+24 dBm), ± 15 Vdc.

Overview of key types

The keys labeled **FREQ Channel**, **System**, and **Marker Function** are all examples of front-panel keys.



Most of the dark or light gray keys access menus of functions that are displayed along the right side of the display. These displayed key labels are next to a column of keys called menu keys.

Menu keys list functions based on which front-panel key was pressed last. These functions are also dependant on the current selection of measurement application (**Mode**) and measurement (**Meas**).

If the numeric value of a menu key function can be changed, it is called an active function. The function label of the active function is highlighted after that key has been selected. For example, press **AMPTD Y Scale**. This calls up the menu of related amplitude functions. The function labeled **Ref Level** (the default selected key in the Amplitude menu) is highlighted. **Ref Level** also appears in the upper left of the display in the measurement information area. The displayed value indicates that the function is selected and its value can now be changed using any of the data entry controls.




Some menu keys have multiple choices on their label, such as **On/Off** or **Top/Ctr/Bot** (as shown below). The different choices are selected by pressing the key multiple times. For example, the Auto/Man type of key. To select the function, press the menu key and notice that Auto is underlined and the key becomes highlighted. To change the function to manual, press the key again so that Man is underlined. If there are

About the Test Set

Overview of key types

more than two settings on the key, keep pressing it until the desired selection is underlined.

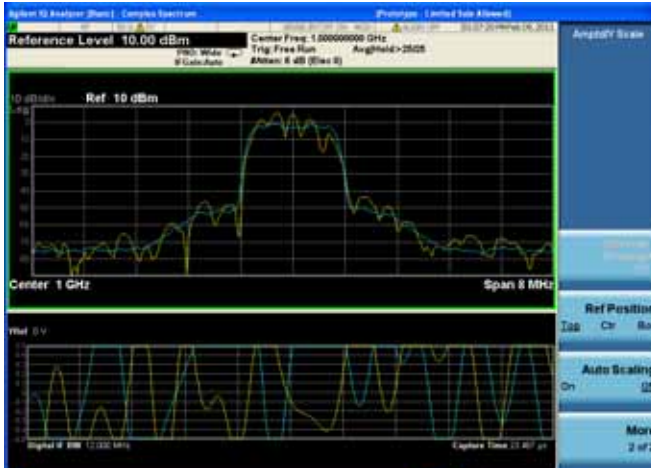

When a menu first appears, one key label is highlighted to show which key is the default selection. If you press **Marker Function**, the **Marker Function Off** key is the menu default key, and is highlighted.



Some of the menu keys are grouped together by a yellow bar running behind the keys near the left side or by a yellow border around the group of keys. When you press a key within the yellow region, such as **Marker Noise**, the highlight moves to that key to show it has been selected. The keys that are linked are related functions, and only one of them can be selected at any one time. For example, a marker can only have one marker function active on it. So if you select a different function it turns off the previous selection. If the current menu is two pages long, the yellow bar or border could include keys on the

second page of keys.



In some key menus, a key label is highlighted to show which key has been selected from multiple available choices. And the menu is immediately exited when you press one of the other keys. For example, when you press the **Select Marker** key (in the **Marker** menu), it brings up its own menu of keys. The **Marker 1** key is highlighted. When you press the **marker 2** key, the highlight moves to that key and the screen returns to the **Marker** menu.



If a displayed key label shows a small solid-black arrow tip pointing to the right, it indicates that additional key menus are available. If the arrow tip is not filled in solid then pressing the key the first time selects that function. Now the arrow is solid and pressing it again brings up an additional menu of


About the Test Set Overview of key types



settings.



Display Annotations

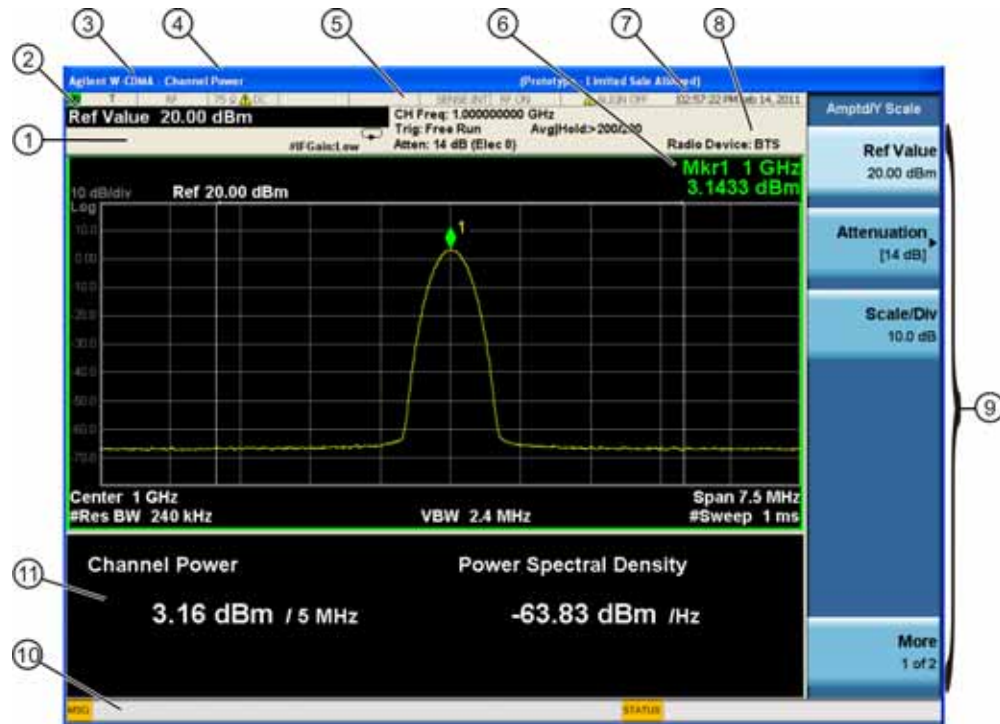This section describes the display annotation as it is on the Sequence Analyzer measurement application display. Other measurement application modes have some annotation differences.




Item	Description	Function Keys
1	<p>Measurement bar - Shows general measurement settings and information.</p> <p>  Indicates single/continuous measurement.</p> <p>Some measurements include limits that the data is tested against. A Pass/Fail indication may be shown in the lower left of the measurement bar.</p>	All the keys in the test set Setup part of the front panel.
2	Active Function (measurement bar) - when the current active function has a settable numeric value, it is shown here.	Currently selected front panel key.
3	Banner - shows the name of the selected application that is currently running.	Mode

About the Test Set
Display Annotations

Item	Description	Function Keys
4	Measurement title - shows title information for the current measurement, or a title that you created for the measurement.	Meas View/Display, Display, Title
5	Settings panel - displays system information that is not specific to any one application. <ul style="list-style-type: none"> • Input/Output status - RLTS indicate Remote, Listen, Talk, SRQ • Input impedance and coupling • Selection of external frequency reference • Setting of automatic internal alignment routine 	Local and System, I/O Config Input/Output, Amplitude, System and others
6	Active marker frequency, amplitude or function value	Marker
7	Settings panel - time and date display.	System, Control Panel
8	Trace and detector information	Trace/Detector, Clear Write (W) Trace Average (A) Max Hold (M) Min Hold (m) Trace/Detector, More, Detector, Average (A) Normal (N) Peak (P) Sample (S) Negative Peak (p)
9	Key labels that change based on the most recent key press.	Softkeys
10	Displays information, warning and error messages. Message area - single events, Status area - conditions	
11	Measurement settings for the data currently being displayed in the graticule area. In the example above: center frequency, resolution bandwidth, video bandwidth, frequency span, sweep time and number of sweep points.	Keys in the test set Setup part of the front panel.

Test Set Display Indicators

 
The display of the EXT Test Set includes, in the measurement bar, a field (highlighted in red below) which indicates the state of the internal source. When using the E6607A/B with the Multiport Adapter or when using the E6607C, this display is modified to indicate which output ports of the Multiport Adapter (if any) are supplying RF output power.

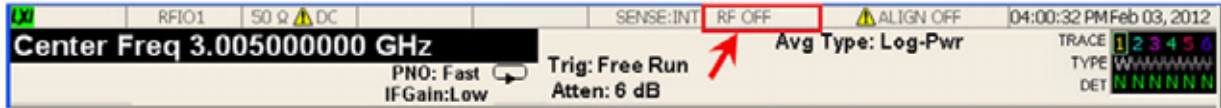

The table below illustrates the content of this field under different circumstances.

Multiport Adapter Usage	In Sequence Analyzer Mode	Not in Sequence Analyzer Mode, RF On	Not in Sequence Analyzer Mode, RF Off
Any or all of the 8 “RFIO” ports are in use.	SEQ MPA	RF ON MPA	RF OFF MPA
The 4 “GPS” ports are in use.	SEQ MPA-G	RF ON MPA-G	RF OFF MPA-G
Multiport Adapter is not in use.	SEQ	RF ON	RF OFF

Rear-Panel Features

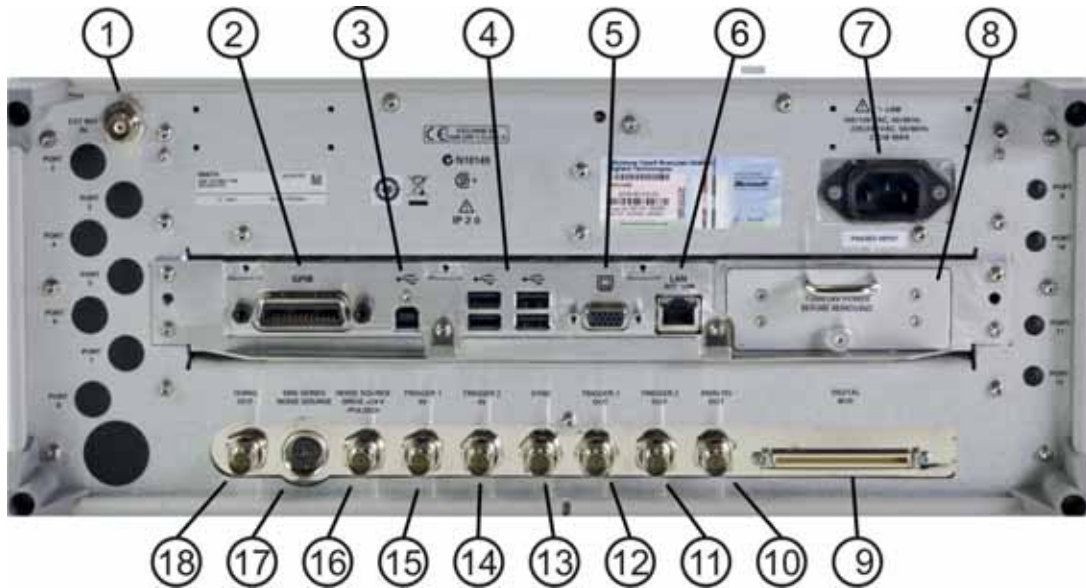


Item		Description
#	Name	
1	EXT REF IN	Input for an external frequency reference signal: 1 to 50 MHz
2	GPIB	A General Purpose Interface Bus (GPIB, IEEE 488.1) connection that can be used for remote test set operation.
3	USB Connector	USB 2.0 port, Type B. USB TMC (test and measurement class) connects to an external pc controller to control the test set and for data transfers over a 480 Mbps link.
4	USB Connectors	Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, printer, DVD drive, or hard drive.
5	MONITOR	Allows connection of an external VGA monitor.
6	LAN	A TCP/IP Interface that is used for remote test set operation.
7	Line power input	The AC power connection. See the product specifications for more details.
8	Removable Hard Drive	Standard on E6607A.
9	DIGITAL BUS	Reserved for future use.
10	ANALOG OUT	Reserved for future use.
11	TRIGGER 2 OUT	A trigger output used to synchronize other test equipment with the test set. Configurable from the Input/Output keys.


Item		Description
#	Name	
12	TRIGGER 1 OUT	A trigger output used to synchronize other test equipment with the test set. Configurable from the Input/Output keys.
13	SYNC	Reserved for future use.
14	TRIGGER 2 IN	Allows external triggering of measurements.
15	TRIGGER 1 IN	Allows external triggering of measurements.
16	NOISE SOURCE DRIVE +28 V (PULSED)	Not functional in the EXT Test Set.
17	SNS SERIES NOISE SOURCE	Not functional in the EXT Test Set.
18	10 MHz OUT	An output of the test set internal 10 MHz frequency reference signal. It is used to lock the frequency reference of other test equipment to the test set.

Window Control Keys

The instrument provides three front-panel keys for controlling windows. They are Multi Window, Zoom, and Next Window. These are all “immediate action” keys.

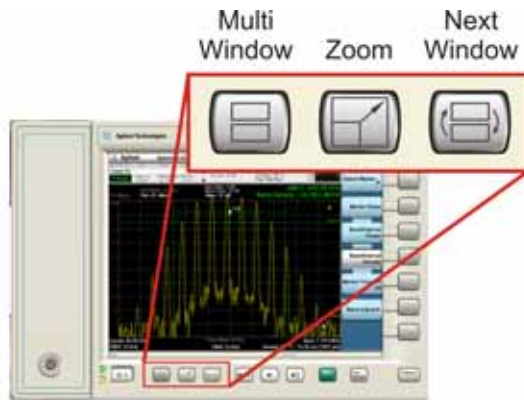

Multi-Window

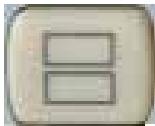

The **Multi Window** front-panel key will toggle you back and forth between the Normal View and the last Multi Window View (Zone Span, Trace Zoom or Spectrogram) that you were in, when using the Swept SA measurement of the Spectrum Analyzer Mode. It remembers which View you were in through a Preset. This “previous view” is set to Zone Span on a Restore Mode Defaults.

Key Path:	Front-panel key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3496

Zoom

Zoom is a toggle function. Pressing this key once increases the size of the selected window; pressing the key again returns the window to the original size.

When Zoom is on for a window, that window will get the entire primary display area. The zoomed window, since it is the selected window, is outlined in green.

Zoom is local to each Measurement. Each Measurement remembers its Zoom state. The Zoom state of each Measurement is part of the Mode’s state.

NOTE Data acquisition and processing for the other windows continues while a window


is zoomed, as does all SCPI communication with the other windows.

Remote Command:	:DISPlay:WINDow:FORMat:ZOOM
Remote Command:	:DISPlay:WINDow:FORMat:TILE
Example:	:DISP:WIND:FORM:ZOOM sets zoomed :DISP:WIND:FORM:TILE sets un-zoomed
Preset:	TILE
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3497


Next Window

Selects the next window of the current view. When the Next Window key is pressed, the next window in the order of precedence becomes selected. If the selected window was zoomed, the next window will also be zoomed.

 The window numbers are as follows. Note that these numbers also determine the order of precedence (that is, Next Window goes from 1 to 2, then 2 to 3, etc.):

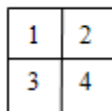

Four window display

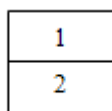 

Two window display

Remote Command:	:DISPlay:WINDow[:SElect] <number> :DISPlay:WINDow[:SElect]?
Example:	:DISP:WIND 1
Preset:	1
Min:	1
Max:	If <number> is greater than the number of windows, limit to <number of windows>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

One and only one window is always selected. The selected window has the focus; this means that all window-specific key presses apply only to that window. You can tell which window is selected by the thick green border around it. If a window is not selected, its boundary is gray.

If a window in a multi-window display is zoomed it is still outlined in green. If there is only one window,

About the Test Set
Window Control Keys

the green outline is not used. This allows the user to distinguish between a zoomed window and a display with only one window.

The selected window is local to each Measurement. Each Measurement remembers which window is selected. The selected window for each Measurement is remembered in Mode state.

NOTE When this key is pressed in Help Mode, it toggles focus between the table of contents window and the topic pane window.


Mouse and Keyboard Control

If you do not have access to the instrument front-panel, there are several ways that a mouse and PC Keyboard can give you access to functions normally accessed using the front-panel keys.

NOTE **E6607C:** When using the E6607C there is no instrument front-panel. Therefore, the PC mouse and monitor are required for instrument control through a virtual front panel (VFP). For ease in using the VFP, the PC keyboard is recommended.


Right-Click

If you plug in a mouse and right-click on the analyzer screen, a menu will appear as below:

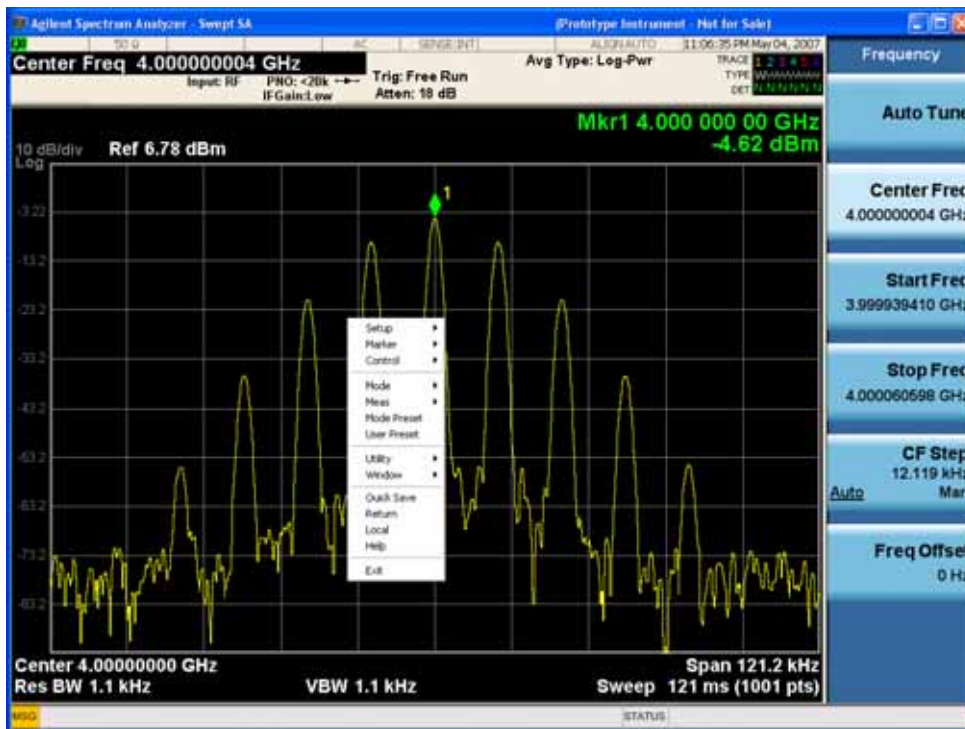


Placing the mouse on one of the rows marked with a right arrow symbol will cause that row to expand, as for example below where the mouse is hovered over the “Utility” row:

About the Test Set Mouse and Keyboard Control

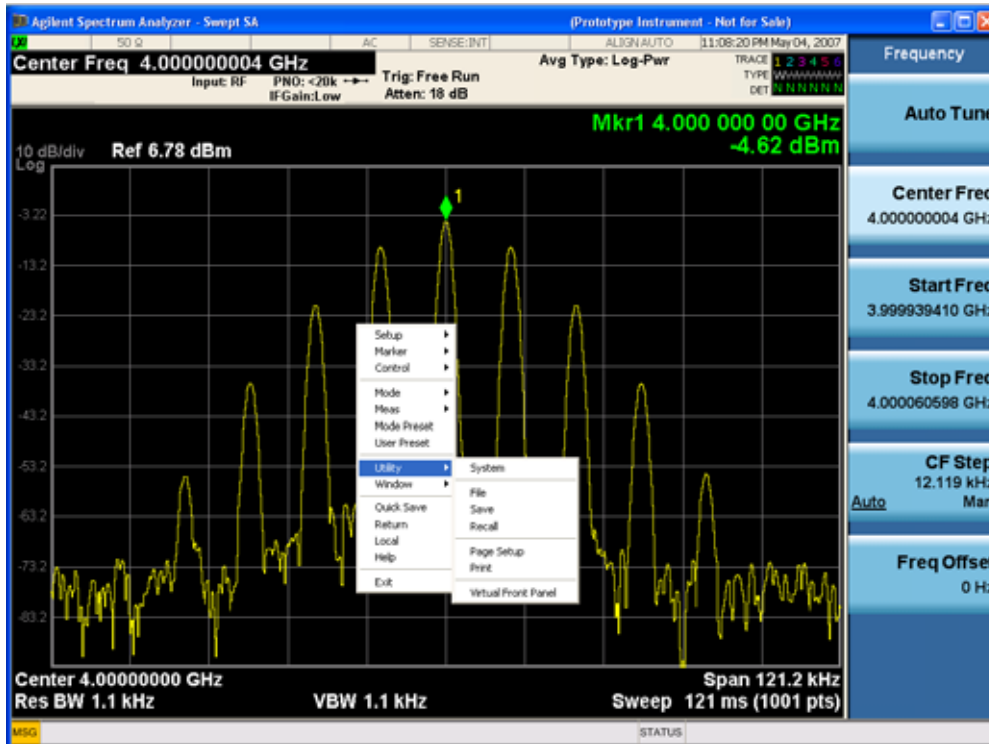

This method can be used to access any of the front-panel keys by using a mouse; as for example if you are accessing the instrument through Remote Desktop.

The array of keys thus available is shown below:

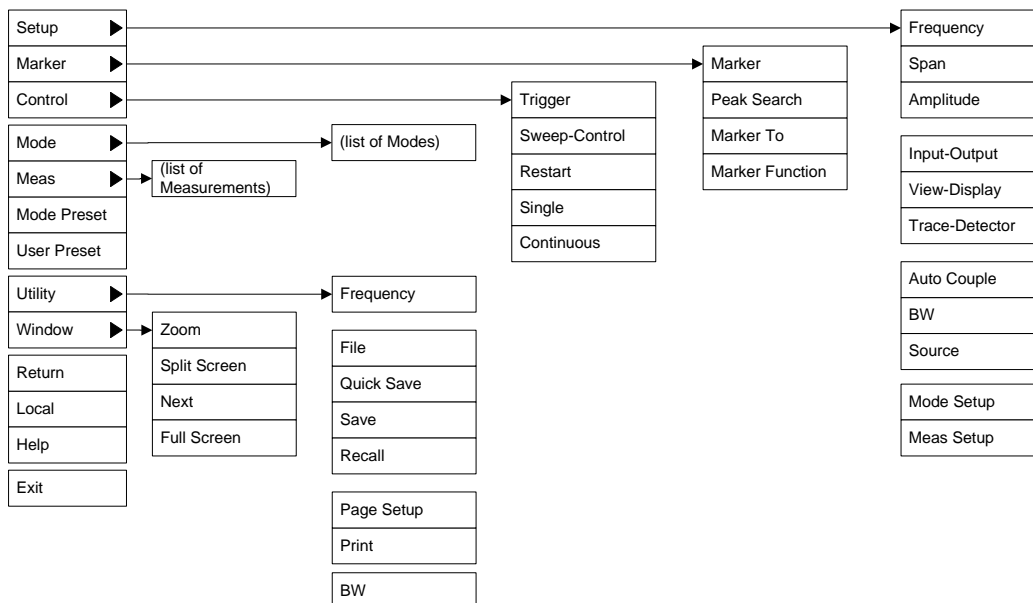


Virtual Front Panel

If you have a PC mouse, monitor, and keyboard plugged in (or through a Remote Desktop), you can navigate the front panel using the virtual front panel (VFP) shown below. Access the VFP as follows:

1. Right-click the mouse as described in [“Right-Click” on page 137](#).
2. Left-click Utility (1) in the menu, as shown below.
3. Left-click Virtual Front Panel (2) in the menu, as shown below.

NOTE The PC mouse and monitor are required when using the E6607C. For ease in using the VFP, the PC keyboard is recommended.

:

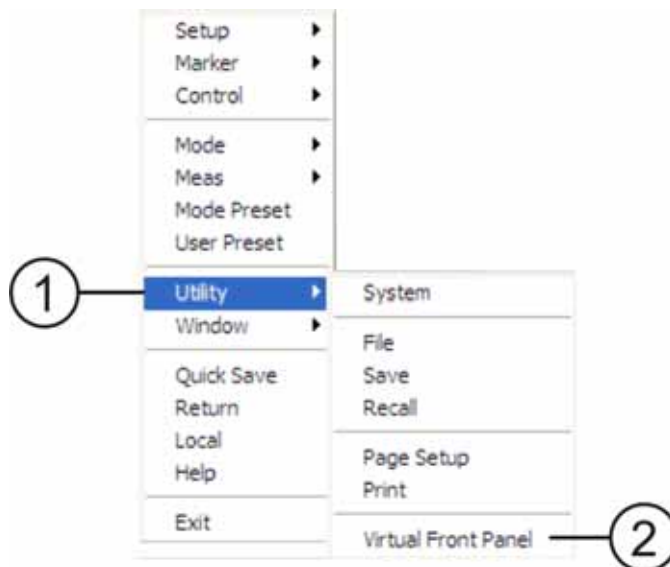

When the VFP opens, the keys behave just as the front-panel and menu keys described in [“Front-Panel Features \(E6607A/B\)” on page 116](#) and [“Overview of key types” on page 125](#). On the VFP the keys labeled "Key 1" through "Key 7" function as the menu keys. Using the mouse to click on a combination of the VFP keys and the menu keys on the display screen, you can operate the instrument just as you would using the front-panel of the E6607A/B.

About the Test Set
Mouse and Keyboard Control



PC Keyboard

If you have a PC keyboard plugged in (or via Remote Desktop), certain key codes on the PC keyboard map to front-panel keys on the GPSA front panel. These key codes are shown below:

Front-panel key	Key code
Frequency	CTRL+SHIFT+F
Span	CTRL+SHIFT+S
Amplitude	CTRL+SHIFT+A
Input/Output	CTRL+SHIFT+O
View/Display	CTRL+SHIFT+V
Trace/Detector	CTRL+ALT+T
Auto Couple	CTRL+SHIFT+C
Bandwidth	CTRL+ALT+B
Source	CTRL+ALT-U


Front-panel key	Key code
Marker	CTRL+ALT+K
Peak Search	CTRL+ALT+P
Marker To	CTRL+ALT+N
Marker Function	CTRL+ALT+F
System	CTRL+SHIFT+Y
Quick Save	CTRL+Q
Save	CTRL+S
Recall	CTRL+R
Mode Preset	CTRL+M
User Preset	CTRL+U
Print	CTRL+P
File	CTRL+SHIFT+L
Mode	CTRL+SHIFT+M
Measure	CTRL+ALT+M
Mode Setup	CTRL+SHIFT+E
Meas Setup	CTRL+ALT+E
Trigger	CTRL+SHIFT+T
Sweep/Control	CTRL+SHIFT+W
Restart	CTRL+ALT+R
Single	CTRL+ALT+S
Cont	CTRL+ALT+C
Zoom	CTRL+SHIFT+Z
Next Window	CTRL+SHIFT+N
Split Screen	CTRL+L
Full Screen	CTRL+SHIFT+B
Return	CTRL+SHIFT+R
Mute	Mute
Inc Audio	Volume Up
Dec Audio	Volume Down
Help	F1

About the Test Set
Mouse and Keyboard Control

Front-panel key	Key code
Control	CTRL
Alt	ALT
Enter	Return
Cancel	Esc
Del	Delete
Backspace	Backspace
Select	Space
Up Arrow	Up
Down Arrow	Down
Left Arrow	Left
Right Arrow	Right
Menu key 1	CTRL+SHIFT+F1
Menu key 2	CTRL+SHIFT+F2
Menu key 3	CTRL+SHIFT+F3
Menu key 4	CTRL+SHIFT+F4
Menu key 5	CTRL+SHIFT+F5
Menu key 6	CTRL+SHIFT+F6
Menu key 7	CTRL+SHIFT+F7
Backspace	BACKSPACE
Enter	ENTER
Tab	Tab
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Front-panel key	Key code
0	0

This is a pictorial view of the table:

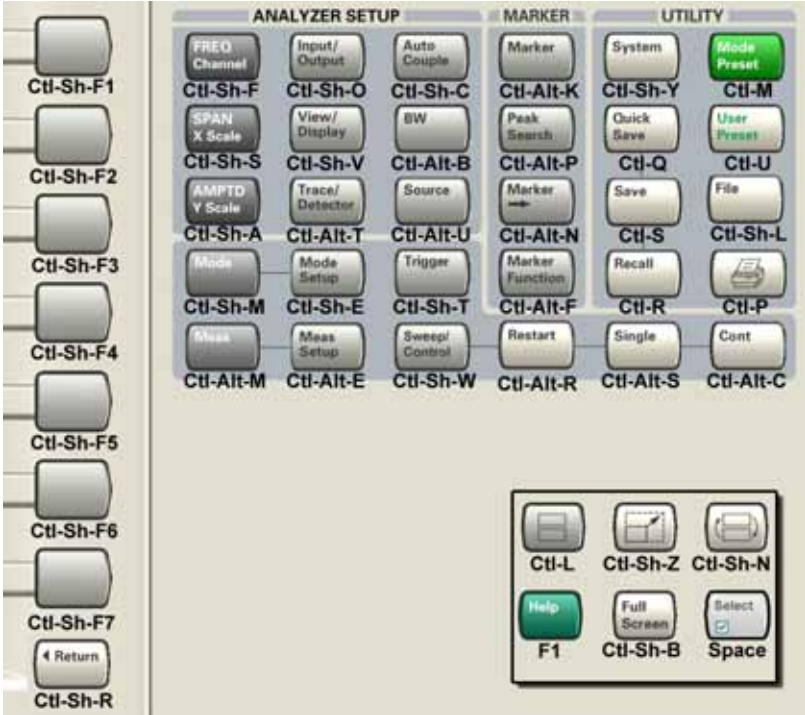

Instrument Security & Memory Volatility

If you are using the test set in a secure environment, you may need details of how to clear or sanitize its memory, in compliance with published security standards of the United States Department of Defense, or other similar authorities.

For the X Series test sets, this information is contained in the document "Security Features and Volatility". This document is **not** included in the test set's on-disk library, but it may be downloaded from Agilent's web site.

To obtain a copy of the document, click on or browse to the following URL:

<http://www.agilent.com/find/security>

To locate and download the document, select a Model Number, for example "E6607A", then click "Submit". Then, follow the on-screen instructions to download the file.

This chapter provides information on using the GSM/EDGE Mode in the Agilent X-series Wireless Communications Test Set.

What Does GSM/EDGE Mode Do?

This Mode includes five measurements.

1. [“EDGE Power vs. Time Measurement” on page 297](#)
2. [“EDGE EVM Measurement” on page 373](#)
3. [“EDGE Output RF Spectrum Measurement” on page 495](#)
4. [“GMSK Phase and Frequency Measurement” on page 611](#)
5. [“Transmit Power \(Burst Power\)” on page 673](#)

This chapter provides introductory information about the programming documentation included with your test set.

What Programming Information is Available?

The X-Series Documentation can be accessed through the Additional Documentation page in the instrument Help system and is included on the Documentation CD shipped with the instrument. It can also be found in the instrument at: C:\ProgramsFiles\Agilent\SignalAnalysis\Infrastructure\Help\otherdocs, or online at: http://www.agilent.com/find/mxa_manuals.

The following resources are available to help you create programs for automating your X-Series measurements:

Resource	Description
X-Series Programmer's Guide	<p>Provides general SCPI programming information on the following topics:</p> <ul style="list-style-type: none"> • Programming the X-Series Applications • Programming fundamentals • Programming examples <p>Note that SCPI command descriptions for measurement applications are NOT in this book, but are in the User's and Programmer's Reference.</p>
User's and Programmer's Reference manuals	<p>Describes all front-panel keys and softkeys, including SCPI commands for a measurement application. Note that:</p> <ul style="list-style-type: none"> • Each measurement application has its own User's and Programmer's Reference. • The content in this manual is duplicated in the analyzer's Help (the Help that you see for a key is identical to what you see in this manual).
Embedded Help in your instrument	<p>Describes all front-panel keys and softkeys, including SCPI commands, for a measurement application.</p> <p>Note that the content that you see in Help when you press a key is identical to what you see in the User's and Programmer's Reference.</p>
X-Series Getting Started Guide	<p>Provides valuable sections related to programming including:</p> <ul style="list-style-type: none"> • Licensing New Measurement Application Software - After Initial Purchase • Configuring instrument LAN Hostname, IP Address, and Gateway Address • Using the Windows XP Remote Desktop to connect to the instrument remotely • Using the Embedded Web Server Telnet connection to communicate SCPI <p>This printed document is shipped with the instrument.</p>
Agilent Application Notes	Printable PDF versions of pertinent application notes.
Agilent VISA User's Guide	Describes the Agilent Virtual Instrument Software Architecture (VISA) library and shows how to use it to develop I/O applications and instrument drivers on Windows PCs.

IEEE Common GPIB Commands

Numeric values for bit patterns can be entered using decimal or hexi-decimal representations. (that is,. 0 to 32767 is equivalent to #H0 to #H7FFF).

Calibration Query

*CAL? Performs a full alignment and returns a number indicating the success of the alignment. A zero is returned if the alignment is successful. A one is returned if any part of the alignment fails. The equivalent SCPI command is CALibrate[:ALL]?

See “Alignments” on page 219 for details of *CAL?.

Clear Status

Clears the status byte register. It does this by emptying the error queue and clearing all bits in all of the event registers. The status byte register summarizes the states of the other registers. It is also responsible for generating service requests.

Key Path:	No equivalent key. Related key System, Show Errors, Clear Error Queue
Remote Command:	*CLS
Example:	*CLS Clears the error queue and the Status Byte Register.
Notes:	For related commands, see the SYSTem:ERRor[:NEXT]? command. See also the STATus:PRESet command and all commands in the STATus subsystem.
Status Bits/OPC dependencies:	Resets all bits in all event registers to 0, which resets all the status byte register bits to 0 also.
Backwards Compatibility Notes:	In general the status bits used in the X-Series status system will be backwards compatible with ESA and PSA. However, note that all conditions will generate events that go into the event log, and some will also generate status bits.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Standard Event Status Enable

Selects the desired bits from the standard event status enable register. This register monitors I/O errors and synchronization conditions such as operation complete, request control, query error, device dependent error, status execution error, command error, and power on. The selected bits are OR'd to become a summary bit (bit 5) in the byte register which can be queried.

The query returns the state of the standard event status enable register.

Key Path:	No equivalent key. Related key System, Show Errors, Clear Error Queue
-----------	--

Remote Command:	*ESE <integer> *ESE?
Example:	*ESE 36 Enables the Standard Event Status Register to monitor query and command errors (bits 2 and 5). *ESE? Returns a 36 indicating that the query and command status bits are enabled.
Notes:	For related commands, see the <i>STATUS</i> subsystem and <i>SYSTEM:ERROR[:NEXT]?</i> commands.
Preset:	255
State Saved:	Not saved in state.
Min:	0
Max:	255
Status Bits/OPC dependencies:	Event Enable Register of the Standard Event Status Register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Standard Event Status Register Query

Queries and clears the standard event status event register. (This is a destructive read.) The value returned is a hexadecimal number that reflects the current state (0/1) of all the bits in the register.

Remote Command:	*ESR?
Example:	*ESR? Returns a 1 if there is either a query or command error, otherwise it returns a zero.
Notes:	For related commands, see the <i>STATUS</i> subsystem commands.
Preset:	0
Min:	0
Max:	255
Status Bits/OPC dependencies:	Standard Event Status Register (bits 0 – 7).
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Identification Query

Returns a string of instrument identification information. The string will contain the model number, serial number, and firmware revision.

The response is organized into four fields separated by commas. The field definitions are as follows:

Manufacturer
Model
Serial number
Firmware version

Key Path:	No equivalent key. See related key System, Show System.
Remote Command:	*IDN?
Example:	*IDN? Returns instrument identification information, such as: Agilent Technologies,N9020A,US01020004,A.01.02
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Instrument Model Number

ID? - Returns a string of the instrument identification. The string will contain the model number.

When in Remote Language compatibility mode the query will return the model number of the emulated instrument, when in any other mode the returned model number will be that of the actual hardware.

Operation Complete

The *OPC command sets bit 0 in the standard event status register (SER) to “1” when pending operations have finished, that is when all overlapped commands are complete. It does not hold off subsequent operations. You can determine when the overlapped commands have completed either by polling the OPC bit in SER, or by setting up the status system such that a service request (SRQ) is asserted when the OPC bit is set.

The *OPC? query returns a “1” after all the current overlapped commands are complete. So it holds off subsequent commands until the "1" is returned, then the program continues. This query can be used to synchronize events of other instruments on the external bus.

Remote Command:	*OPC *OPC?
Example:	INIT:CONT 0 Selects single sweeping. INIT:IMM Initiates a sweep. *OPC? Holds off any further commands until the sweep is complete.
Status Bits/OPC dependencies:	Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port as the *OPC command was issued from. *OPC is an overlapped command, but *OPC? is sequential.

Backwards Compatibility Notes:	<p>The ESA/PSA/VSA products do not meet all the requirements for the *OPC command specified by IEEE 488.2. This is corrected for X-Series. This will sometimes cause behavior that is not backward compatible, but it will work as customers expect.</p> <p>Commands such as, *OPC/*OPC?/*WAI/*RST used to be global. They considered front panel operation in conjunction with the GPIB functionality. Now they are evaluated on a per channel basis. That is, the various rear panel remote ports and the front panel i/o are all considered separately. Only the functionality initiated on the port where the *OPC was sent, is considered for its operation.</p> <p>*OPC used to hold off until the operation bits were cleared. Now it holds off until all overlapping commands are completed. Also, earlier instruments did not wait for completion of all processes, only the ones identified here (in the STATus:OPERation register):</p> <p>Calibrating: monitored by PSA, ESA, VSA (E4406A)</p> <p>Sweeping: monitored by PSA, ESA, VSA (E4406A)</p> <p>Waiting for Trigger: monitored by PSA, ESA, VSA (E4406A)</p> <p>Measuring: monitored by PSA and ESA (but not in all Modes).</p> <p>Paused: monitored by VSA (E4406A).</p> <p>Printing: monitored by VSA (E4406A).</p> <p>Mass memory busy: monitored by VSA (E4406A).</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Query Instrument Options

Returns a string of all the installed instrument options. It is a comma separated list with quotes, such as: "503,P03,PFR".

To be IEEE compliant, this command should return an arbitrary ascii variable that would not begin and end with quotes. But the quotes are needed to be backward compatible with previous SA products and software. So, the actual implementation will use arbitrary ascii. But quotes will be sent as the first and last ascii characters that are sent with the comma-separated option list.

Remote Command:	*OPT?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Recall Instrument State

This command recalls the instrument state from the specified instrument memory register.

If the state being loaded has a newer firmware revision than the revision of the instrument, no state is recalled and an error is reported

If the state being loaded has an equal firmware revision than the revision of the instrument, the state will be loaded.

If the state being loaded has an older firmware revision than the revision of the instrument, the instrument will only load the parts of the state that apply to the older revision.

Remote Command:	*RCL <register #>
Example:	*RCL 7 Recalls the instrument state that is currently stored in register 7.
Notes:	Registers 0 through 6 are accessible from the front panel in menu keys for Recall Registers.
Min:	0
Max:	127
Status Bits/OPC dependencies:	The command is sequential.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Save Instrument State

This command saves the current instrument state and mode to the specified instrument memory register.

Remote Command:	*SAV <register #>
Example:	*SAV 9 Saves the instrument state in register 9.
Notes:	Registers 0 through 6 are accessible from the front panel in menu keys for Save Registers.
Min:	0
Max:	127
Status Bits/OPC dependencies:	The command is sequential.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Service Request Enable

This command enables the desired bits of the service request enable register.

The query returns the value of the register, indicating which bits are currently enabled.

Remote Command:	*SRE <integer> *SRE?
Example:	*SRE 22 Enables bits 1, 2, and 4 in the service request enable register.

Notes:	For related commands, see the STATus subsystem and SYSTem:ERRor[:NEXT]? commands.
Preset:	0
Min:	0
Max:	255
Status Bits/OPC dependencies:	Service Request Enable Register (all bits, 0 – 7).
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Status Byte Query

Returns the value of the status byte register without erasing its contents.

Remote Command:	*STB?
Example:	*STB? Returns a decimal value for the bits in the status byte register. For example, if a 16 is returned, it indicates that bit 5 is set and one of the conditions monitored in the standard event status register is set.
Notes:	See related command *CLS.
Status Bits/OPC dependencies:	Status Byte Register (all bits, 0 – 7).
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Trigger

This command triggers the instrument. Use the :TRIGger[:SEQuence]:SOURce command to select the trigger source.

Key Path:	No equivalent key. See related keys Single and Restart.
Remote Command:	*TRG
Example:	*TRG Triggers the instrument to take a sweep or start a measurement, depending on the current instrument settings.
Notes:	See related command :INITiate:IMMediate.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Self Test Query

This query performs the internal self-test routines and returns a number indicating the success of the

testing. A zero is returned if the test is successful, 1 if it fails.

Remote Command:	*TST?
Example:	*TST? Runs the self-test routines and returns 0=passed, 1=some part failed.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Wait-to-Continue

This command causes the instrument to wait until all overlapped commands are completed before executing any additional commands. There is no query form for the command.

Remote Command:	*WAI
Example:	INIT:CONT OFF; INIT;*WAI Sets the instrument to single sweep. Starts a sweep and waits for its completion.
Status Bits/OPC dependencies:	Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port as the *OPC command was issued from.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

File

Opens a menu that enables you to access various standard and custom Windows functions. Press any other front-panel key to exit


Key Path:	Front-panel key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2200

File Explorer

Opens the standard Windows File Explorer. The File Explorer opens in the My Documents directory for the current user.

The File Explorer is a separate Windows application, so to return to the analyzer once you are in the File Explorer, you may either:

Exit the File Explorer by clicking on the red X in the upper right hand corner, with a mouse

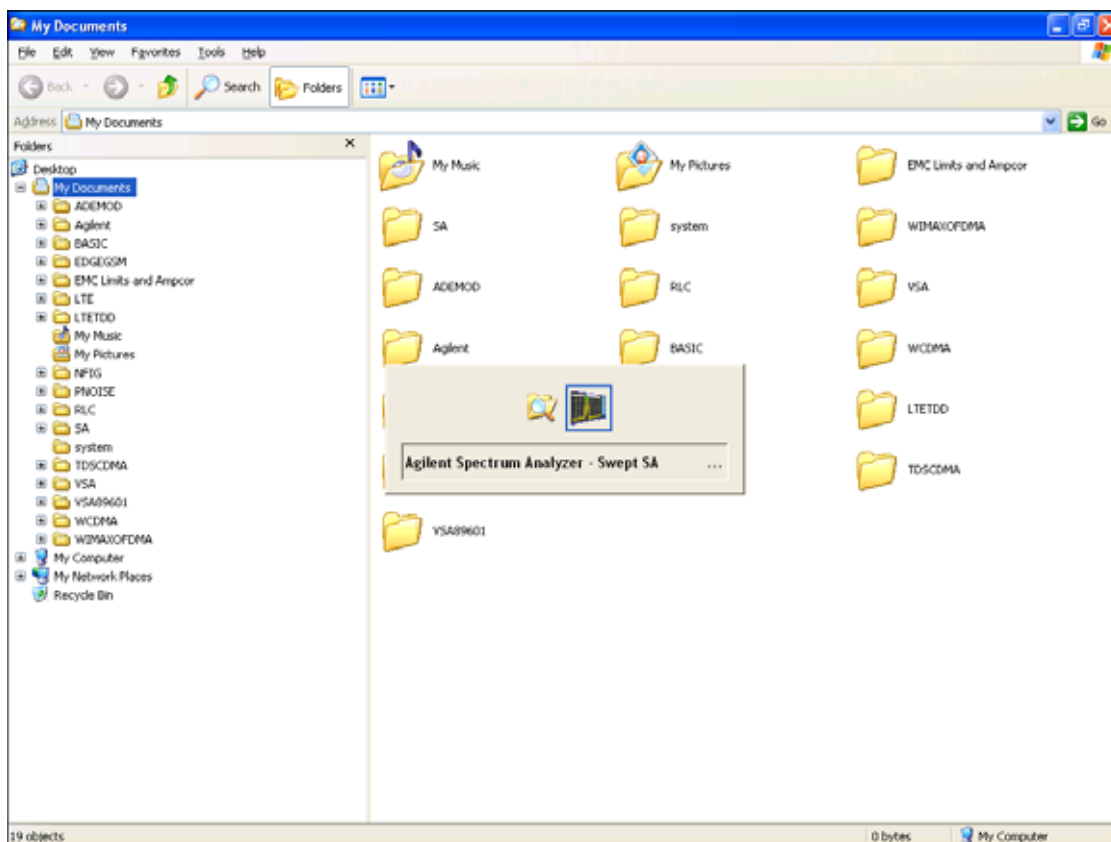

Or use Alt-Tab: press and hold the Alt key and press and release the Tab key until the Analyzer

logo is showing in the window in the center of the screen, as shown above, then release the Alt key.


Key Path:	File
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2201

Page Setup

The Page Setup key brings up a Windows Page Setup dialog that allows you to control aspects of the pages sent to the printer when the PRINT hardkey is pressed.

Key Path:	File
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3513

Paper size, the printer paper source, the page orientation and the margins are all settable. Just like any standard Windows dialog, you may navigate the dialog using the front-panel keys, or a mouse. There are no SCPI commands for controlling these parameters.

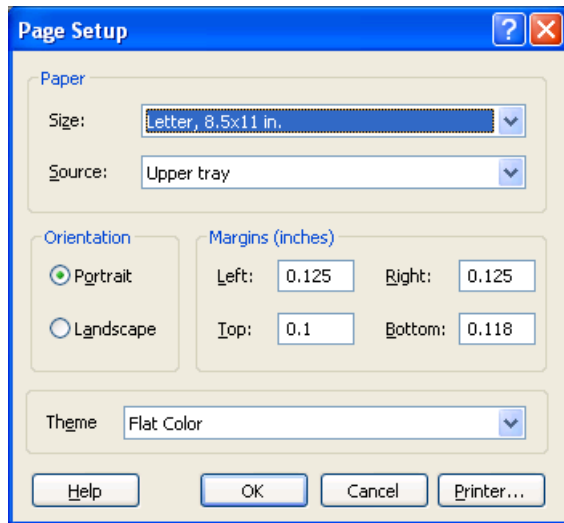

Also contained in this dialog is a drop-down control that lets you select the Theme to use when printing. For more on Themes, see information under View/Display, Display, System Display Settings, Theme. The Theme control has a corresponding SCPI command.

Parameter Name:	Print Themes
Parameter Type:	Enum
Mode:	All

Remote Command:	:SYSTem:PRINT:THEMe TDCoLor TDMonochrome FCoLoR FMONochrome :SYSTem:PRINT:THEMe?
Example:	:SYST:PRIN:THEM FCOL
Setup:	:SYSTem:DEFault MISC
Preset:	FCOL; not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Print

The Print key opens a Print dialog for configured printing (for example, to the printer of your choice). Refer to your Microsoft Windows Operating System manual for more information.

Maximize/Restore Down

These keys allow the Instrument Application to be maximized and then restored to its prior state. Only one of the two keys is visible at a time. When not already maximized the Maximize Application key is visible, and when maximized, the Restore Down Application key is visible and replaces the Maximize Application key.

Maximize

This key allows you to Maximize the Instrument Application, which causes the analyzer display to fill the screen. Once the application is maximized, this key is replaced by the Restore Down key.

Key Path:	File
Mode:	All
Notes:	No equivalent remote command for this key.
State Saved:	No
Initial S/W Revision:	A.05.01
Help Map ID:	3668

Restore Down


This key allows you to Restore Down the Instrument Application and reverses the action taken by Maximize. This key is only visible when the application has been maximized, and after the Restore Down action has been completed this key is replaced by the Maximize key.

Key Path:	File
-----------	-------------

Mode:	All
Notes:	No equivalent remote command for this key.
State Saved:	No
Initial S/W Revision:	A.05.01
Help Map ID:	3669

Minimize


The Minimize key causes the analyzer display to disappear down into the task bar, allowing you to see

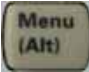the Windows Desktop. You can use Alt-Tab (press and hold the Alt  key and press and release the Tab key) to restore the analyzer display.

Key Path:	File
Mode:	All
Notes:	No equivalent remote command for this key.
State Saved:	No
Initial S/W Revision:	A.05.01
Help Map ID:	3670

Exit

This key, when pressed, will exit the Instrument Application. A dialog box is used to confirm that you intended to exit the application:

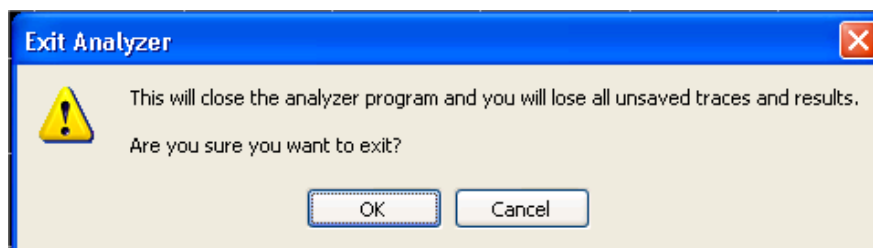

Key Path:	File
Mode:	All
Notes:	The Instrument Application will close. No further SCPI commands can be sent. Use with caution!
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2202

Mode Preset

Returns the active mode to a known state.

Mode Preset does the following for the currently active mode:

Aborts the currently running measurement.

Brings up the default menu for the mode, with no active function.

Sets measurement Global settings to their preset values for the active mode only.

Activates the default measurement.

Brings up the default menu for the mode.

Clears the input and output buffers.

Sets Status Byte to 0.

Mode Preset does not:

Cause a mode switch

Affect mode persistent settings

Affect system settings

See [“How-To Preset” on page 163](#) for more information.

Key Path:	Front-panel key
Remote Command:	:SYSTem:PRESet
Example:	:SYST:PRES
Notes:	*RST is preferred over :SYST:PRES for remote operation. *RST does a Mode Preset, as done by the :SYST:PRES command, and it sets the measurement mode to Single measurement rather than Continuous for optimal remote control throughput. Clears all pending OPC bits. The Status Byte is set to 0.
Couplings:	A Mode Preset aborts the currently running measurement, activates the default measurement, and gets the mode to a consistent state with all of the default couplings set.

Backwards Compatibility Notes:	<p>In the X-Series, the legacy “Factory Preset” has been replaced with Mode Preset, which only presets the currently active mode, not the entire instrument. In the X-Series, the way in to preset the entire instrument is by using System, Restore System Defaults All, which behaves essentially the same way as restore System Defaults does on ESA and PSA.</p> <p>There is also no “Preset Type” as there is on the PSA. There is a green Mode Preset front-panel key that does a Mode Preset and a white-with-green-letters User Preset front-panel key that does a User Preset. The old PRESet:TYPE command is ignored (without generating an error), and SYST:PRES without a parameter does a Mode Preset, which should cover most backward code compatibility issues.</p> <p>The settings and correction data under the Input/Output front-panel key (examples: Input Z Corr, Ext Amp Gain, etc.) are no longer part of any Mode, so they will not be preset by a Mode Preset. They are preset using Restore Input/Output Defaults, Restore System Defaults All. Note that because User Preset does a Recall State, and all of these settings are saved in State, they ARE recalled when using User Preset.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2300

How-To Preset

The table below shows all possible presets, their corresponding SCPI commands and front-panel access (key paths). Instrument settings depend on the current measurement context. Some settings are local to the current measurement, some are global (common) across all the measurements in the current mode, and some are global to all the available modes. In a similar way, restoring the settings to their preset state can be done within the different contexts.

Auto Couple - is a measurement local key. It sets all Auto/Man parameter couplings in the measurement to Auto. Any Auto/Man selection that is local to other measurements in the mode will not be affected.

Meas Preset - is a measurement local key. Meas Preset resets all the variables local to the current measurement except the persistent ones.

Mode Preset - resets all the current mode's measurement local and measurement global variables except the persistent ones.

Restore Mode Defaults - resets ALL the Mode variables (and all the Meas global and Meas local variables), including the persistent ones.

Type Of Preset	SCPI Command	Front Panel Access
Auto Couple	:COUPle ALL	Auto Couple front-panel key
Meas Preset	:CONFigure:<Measurement>	Meas Setup Menu
Mode Preset	:SYSTem:PRESet	Mode Preset (green key)
Restore Mode Defaults	:INSTrument:DEFault	Mode Setup Menu

System Functions
Mode Preset

Type Of Preset	SCPI Command	Front Panel Access
Restore All Mode Defaults	:SYSTem:DEFault MODEs	System Menu; Restore System Default Menu
*RST	*RST	not possible (Mode Preset with Single)
Restore Input/Output Defaults	:SYSTem:DEFault INPut	System Menu; Restore System Default Menu
Restore Power On Defaults	:SYSTem:DEFault PON	System Menu; Restore System Default Menu
Restore Alignment Defaults	:SYSTem:DEFault ALIGn	System Menu; Restore System Default Menu
Restore Miscellaneous Defaults	:SYSTem:DEFault MISC	System Menu; Restore System Default Menu
Restore All System Defaults	:SYSTem:DEFault [ALL] :SYSTem:PRESet:PERsistent	System Menu; Restore System Default Menu
User Preset	:SYSTem:PRESet:USER	User Preset Menu
User Preset All Modes	:SYSTem:PRESet:USER:ALL	User Preset Menu
Power On Mode Preset	:SYSTem:PON:TYPE MODE	System Menu
Power On User Preset	:SYSTem:PON:TYPE USER	System Menu
Power On Last State	:SYSTem:PON:TYPE LAST	System Menu

Restore Mode Defaults

Resets the state for the currently active mode by resetting the mode persistent settings to their factory default values, clearing mode data and by performing a Mode Preset. This function will never cause a mode switch. This function performs a full preset for the currently active mode; whereas, Mode Preset performs a partial preset. Restore Mode Defaults does not affect any system settings. System settings are reset by the Restore System Defaults function. This function does reset mode data; as well as settings.

Key Path:	Mode Setup
Remote Command:	:INSTrument :DEFault
Example:	:INST:DEF
Notes:	Clears all pending OPC bits. The Status Byte is set to 0. A message comes up saying: "If you are sure, press key again".
Couplings:	A Restore Mode Defaults will cause the currently running measurement to be aborted and causes the default measurement to be active. It gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision:	Prior to A.02.00

Help Map ID:	2307
--------------	------

Meas Preset

Resets the measurement local variables for the currently active measurement to their factory default values. The measurement settings that get reset are the same ones that are reset during a Mode Preset. This function keeps the instrument in the current measurement and the current mode and does not affect the settings for other measurements, but does abort the currently running measurement.

Key Path:	Meas Setup
Remote Command:	:CONFigure:<Measurement>
Example:	:CONF:ACP immediately does a Meas Preset to the ACP measurement.
Notes:	Clears the Measuring bit :CONF:<Measurement> resets the specified measurement settings to default in ESA, VSA and PSA; in GPSA it allows the addition of the NDEFault node to the command to prevent a measurement preset from occurring after a measurement switch. :MEASure:<Measurement> also restores the default values of the selected measurement, but it also initiates the specified measurement.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2306

Preset Type (Remote Command Only)

As stated in the Backward Compatibility section, to be compatible with ESA/PSA the PRESet:TYPE command will be implemented as a no-op.

Mode:	All
Remote Command:	:SYSTem:PRESet:TYPE FACTory MODE USER :SYSTem:PRESet:TYPE?
Example:	:SYST:PRESet:TYPE FACT
Notes:	This command is supported for backward compatibility only. It is a no-op which does not change the behavior of any preset operation.
Preset:	This is unaffected by Preset but is set to Mode on a “Restore System Defaults->All”
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

***RST (Remote Command Only)**

*RST is equivalent to :SYST:PRES;:INIT:CONT OFF, which is a Mode Preset in the Single measurement state. This remote command is preferred over Mode Preset remote command - :SYST:PRES, as optimal remote programming occurs with the instrument in the single measurement state.

Remote Command:	*RST
Example:	*RST
Notes:	Sequential Clears all pending OPC bits and the Status Byte is set to 0.
Couplings:	A *RST will cause the currently running measurement to be aborted and cause the default measurement to be active. *RST gets the mode to a consistent state with all of the default couplings set.
Backwards Compatibility Notes:	In legacy analyzers *RST did not set the analyzer to Single, but in the X-Series it does, for compliance with the IEEE 488.2 specification. In the X-Series, *RST does not do a *CLS (clear the status bits and the error queue). In legacy analyzers, *RST used to do the equivalent of SYSTem:PRESet, *CLS and INITiate:CONTinuous OFF. But to be 488.2 compliant, *RST in the X-Series does not do a *CLS.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2301

Print

This front-panel key is equivalent to performing a File, Print, OK. It immediately performs the currently configured Print to the Default printer.

The :HCOPY command is equivalent to pressing the PRINT key. The HCOpy:ABORt command can be used to abort a print which is already in progress. Sending HCOpy:ABORt will cause the analyzer to stop sending data to the printer, although the printer may continue or even complete the print, depending on how much data was sent to the printer before the user sent the ABORt command.

Key Path:	Front-panel key
Remote Command:	:HCOPY[:IMMediate]
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3495

Key Path:	SCPI command only
Remote Command:	:HCOpy:ABORt
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Quick Save

The Quick Save front-panel key repeats the most recent save that was performed from the Save menu, with the following exceptions:

Register saves are not remembered as Saves for the purpose of the Quick Save function

If the current measurement does not support the last non-register save that was performed, an informational message is generated, “File type not supported for this measurement”

Quick Save repeats the last type of qualified save (that is, a save qualified by the above criteria) in the last save directory by creating a unique filename using the Auto File Naming algorithm described below.

If Quick Save is pressed after startup and before any qualified Save has been performed, the Quick Save function performs a Screen Image save using the current settings for Screen Image saves (current theme, current directory), which then becomes the “last save” for the purpose of subsequent Quick Saves.

The Auto File Naming feature automatically generates a file name for use when saving a file. The filename consists of a prefix and suffix separated by a dot, as is standard for the Windows® file system. A default prefix exists for each of the available file types:

Type	Default Prefix	Menu
State	State_	(Save/Recall)
Trace + State	State_	(Save/Recall)
Screen	Screen_	(Save/Recall)
Amplitude Corrections	Ampcor_	(Import/Export)
Traces	Trace_	(Import/Export)
Limit Lines	LLine_	(Import/Export)
Measurement Result	MeasR_	(Import/Export)
Capture Buffer	CapBuf_	(Import/Export)

A four digit number is appended to the prefix to create a unique file name. The numbering sequence starts at 0000 within each Mode for each file type and updates incrementally to 9999, then wraps to 0000 again. It remembers where it was through a Mode Preset and when leaving and returning to the Mode. It is reset by Restore Misc Defaults and Restore System Defaults and subsequent running of the instrument application. So, for example, the first auto file name generated for State files is State_0000.state. The next is State_0001, and so forth.

One of the key features of Auto File Name is that we guarantee that the Auto File Name will never conflict with an existing file. The algorithm looks for the next available number. If it gets to 9999, then it looks for holes. If it find no holes, that is no more numbers are available, it gives an error.

For example, if when we get to State_0010.state there is already a State_0010.state file in the current directory, it advances the counter to State_0011.state to ensure that no conflict will exist (and then it verifies that State_0011.state also does not exist in the current directory and advances again if it does,

and so forth).

If you enter a file name for a given file type, then the prefix becomes the filename you entered instead of the default prefix, followed by an underscore. The last four letters (the suffix) are the 4-digit number.

For example, if you save a measurement results file as “fred.csv”, then the next auto file name chosen for a measurement results save will be fred_0000.csv.

NOTE Although 0000 is used in the example above, the number that is used is actually the current number in the Meas Results sequence, that is, the number that would have been used if you had not entered your own file name.

NOTE If the filename you entered ends with _dddd, where d=any number, making it look just like an auto file name, then the next auto file name picks up where you left off with the suffix being dddd + 1.

Key Path:	Front-panel key
Notes:	No remote command for this key specifically.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2635

Recall

The **Recall** menu lets you choose what you want to recall, and where you want to recall it from. Among the types of files you can recall are **States and Traces**. In addition, an **Import (Data)** option lets you recall a number of data types stored in CSV files (as used by Excel and other spreadsheet programs).

The default paths for Recall are data type dependent and are the same as for the Save key.

Key Path:	Front-panel key
Notes:	<p>No remote command for this key specifically, but the :MMEM:LOAD command is available for specific file types. An example is :MMEM:LOAD:STATe <filename>.</p> <p>If you try to recall a State file for a mode that is not licensed or not available in the instrument, an error message will occur and the state will not change.</p>
Backwards Compatibility Notes:	<p>In legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly (since User Preset is actually loading a state), it was possible to do a User Preset without affecting the trace data, limit lines or correction data.</p> <p>In the X-Series, “state” always includes all of this data; so whenever state is loaded, all of the traces, limit lines and corrections are affected. Although this differs from previous behavior, it is desirable behavior, and should not cause adverse issues for users.</p>
Backwards Compatibility Notes:	<p>Recall for the X-Series supports backward compatibility in the sense that you can recall a state file from any X-Series model number and any version of X-Series software. If you try to recall a state file onto an instrument with less capability than what was available on the instrument during the save, the recall will ignore the state it doesn’t support and it will limit the recalled setting to what it allows.</p> <p>Example: if the saved state includes preamp ON, but the recalling instrument does not have a preamp; the preamp is limited to OFF. Conversely, if you save a state without a preamp, the preamp is OFF in the state file. When this saved file is recalled on an instrument with a licensed preamp, the preamp is changed to OFF. Another example is if the saved state has center frequency set to 20 GHz, but the instrument recalling the saved state is a different model and only supports 13.5 GHz. In this case, the center frequency is limited along with any other frequency based settings. Since the center frequency can’t be preserved in this case, the recall limiting tries to at least preserve span to keep the measurement setup as intact as possible.</p> <p>Note that there is no state file compatibility outside of the X-Series. For example, you cannot recall a state file from ESA or PSA.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2637

State

The **Recall State** menu lets you choose a register or file from which to recall the state.

The content of a state file includes all of the settings and data required to return the analyzer as closely as possible to the Mode it was in, with the exact settings that were in place, when the save occurred. The Mode settings in each state file include the settings that are affected by Mode Preset, as well as the additional settings affected by Restore Mode Defaults; all of the Mode's settings. In addition, all of the settings of the **Input/Output** system are included, even though they are outside of the Mode's state, because they are needed to restore the complete setup. Persistent System settings (for example, GPIB address) are not affected by either a Mode Preset or Restore Mode Defaults, nor are they included in a saved State file.

Since each state file is only for one Mode, the settings for other Modes are unaffected when it is loaded. **Recall State** will cause a mode switch if the state being recalled is not from the current active mode.

After the recall completes, the message "File <filename> recalled" or "Recalled State Register <register number>" is displayed.

For rapid recalls, the State menu lists 16 registers that you can choose from to recall. Pressing a Register key initiates the recall. You can also select a file from which to recall.

The default path for all State Files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

See ["More Information" on page 172](#).

Key Path:	Recall
Mode:	All
Remote Command:	:MMEMory:LOAD:STATe <filename>
Example:	:MMEM:LOAD:STAT "myState.state" This recalls the file myState.state on the default path
Example:	MMEM:LOAD:STAT "MyStateFile.state" This loads the state file data (on the default file directory path) into the instrument state.

System Functions
Recall

Notes:	<p>When you pick a file to recall, the analyzer first verifies that the file is recallable in the current instrument by checking the software version and model number of the instrument. If everything matches, a full recall proceeds by aborting the currently running measurement, clearing any pending operations, and then loading the State from the saved state file. You can open state files from any mode, so recalling a State file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file. The saved measurement of the mode becomes the newly active measurement and the data relevant to the measurement (if there is any) is recalled.</p> <p>If there is a mismatch between file version or model number or instrument version or model number, the recall function tries to recall as much as possible and returns a warning message. It may limit settings that differ based on model number, licensing or version number.</p> <p>After recalling the state, the Recall State function does the following:</p> <p>Makes the saved measurement for the mode the active measurement.</p> <p>Clears the input and output buffers.</p> <p>Status Byte is set to 0.</p> <p>Executes a *CLS</p> <p>If the file specified is empty an error is generated. If the specified file does not exist, another error is generated. If there is a mismatch between the file and the proper file type, an error is generated. If there is a mismatch between file version or model number or instrument version or model number, a warning is displayed. Then it returns to the State menu and File Open dialog goes away.</p> <p>After the Recall, the analyzer exits the Recall menu and returns to the previous menu.</p>
Backwards Compatibility SCPI:	<p>:MMEMory:LOAD:STATe 1,<filename></p> <p>For backwards compatibility, the above syntax is supported. The "1" is simply ignored.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2638

More Information

In measurements that support saving Traces, for example, Swept SA, the Trace data is saved along with the State in the State file. When recalling the State, the Trace data is recalled as well. Traces are recalled exactly as they were stored, including the writing mode and update and display modes. If a Trace was updating and visible when the State was saved, it will come back updating and visible, and its data will be rewritten right away. When you use State to save and recall traces, any trace whose data must be preserved should be placed in View or Blank mode before saving.

The following table describes the Trace Save and Recall possibilities:

<p>You want to recall state and one trace's data, leaving other traces unaffected.</p>	<p>Save Trace+State from 1 trace. Make sure that no other traces are updating (they should all be in View or Blank mode) when the save is performed.</p>	<p>On Recall, specify the trace you want to load the one trace's data into. This trace will load in View. All other traces' data will be unaffected, although their trace mode will be as it was when the state save was performed.</p>
<p>You want to recall all traces</p>	<p>Save Trace+State from ALL traces.</p>	<p>On Recall, all traces will come back in View (or Blank if they were in Blank or Background when saved)</p>
<p>You want all traces to load exactly as they were when saved.</p>	<p>Save State</p>	<p>On recall, all traces' mode and data will be exactly as they were when saved. Any traces that were updating will have their data immediately overwritten.</p>

From File...

When you press "From File", the analyzer brings up a Windows dialog and a menu entitled "**File Open.**" This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

System Functions

Recall



Listed below are the functions of the various fields in the dialog, and the corresponding softkeys:

Open

Performs the recall of the specified file. While the recall is being performed, the floppy icon appears briefly in the Meas bar.

File/Folder List

Enables you to navigate to the center of the dialog that contains the list of files and folders. Once here you can get information about the file and use the tab keys to navigate to the other fields in the dialog, such as Look In.

Look In

The **Look In** field shows the path from which the file will be recalled and allows you to change the path using the up and down arrow keys to navigate to other paths; the Enter key to open a directory; and the Backspace key to go back one directory. The **Look In field** first uses the last path from the Save As dialog **Save In:** path for that same file type. There is no softkey for directly navigating to the Look In field, but you can use the left tab to get here from the File/Folder List.

User specified paths are remembered when you leave and return to a Mode and are reset back to the default using **Restore Mode Defaults**.

Sort

Accesses a menu that enables you to sort the files within the File Open dialog. Only one sorting type can

be selected at a time and the sorting happens immediately. The sorting types are **By Date**, **By Name**, **By extension**, and **By Size**.

Files of Type

This field shows the file suffix for the type of file you have selected to recall. For example, if you navigated here while recalling State, "Mode state (*.state)" is in the field. If you navigated here while recalling Trace, "Mode state (*.trace)" is in the field. If you navigated here while importing a trace data file, "Trace Data (*.csv)" is in the field. For some file types, there is more than one choice in the dropdown menu, which you can select by using the up and down arrow keys and Enter.

Up One Level

This key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. When pressed, it causes the file and folder list to navigate up one level in the directory structure. The Backspace key does the same thing.

Cancel

This key corresponds to the **Cancel** selection in the dialog. It causes the current **Open** request to be cancelled. The ESC key does the same thing.

Key Path:	Recall, State
Notes:	Brings up the Open dialog for recalling a State Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2646

Edit Register Names

You may enter a custom name on any of the Register keys, to help you remember what you are using that state to save. To do this, press the **Edit Register Names** key, choose the register whose name you wish to edit, and then enter the desired label using the Alpha Editor or an external PC keyboard.

The maximum number of characters that can be added is 30. In most cases, 30 characters will fit on two lines of the key.

For more information and the SCPI command, see Edit Register Names under the **Save, State** function.

Key Path:	Recall, State
Mode:	All
Dependencies:	N9060A-7FP or N9060B-2FP license required to edit the register names. When the feature is not licensed, sending the SCPI command generates an error, -221, "Settings conflict;Option not available"
Initial S/W Revision:	A.11.00
Help Map ID:	50008

Register 1 thru Register 16

Selecting any one of these register keys causes the State of the mode from the specified Register to be

System Functions

Recall

recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified. In addition, you can use the **Edit Register Names** key under **Save, State** to enter custom names for each register.

Registers are shared by all modes, so recalling from any one of the registers will cause a mode switch to the mode that was active when the save to the Register occurred.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17–128 are only available from the SCPI interface, using the *RCL command.

After the recall completes, the message "Register <register number> recalled" appears in the message bar. If you are in the Spectrum Analyzer Mode, and you are recalling a register that was saved in the Spectrum Analyzer Mode, then after the recall, you will still be in the Recall Register menu. If the Recall causes you to switch modes, then after the Recall, you will be in the Frequency menu.

If a requested register is empty an error is generated.

Key Path:	Recall, State
Example:	*RCL 1
Range:	1–16 from front panel, 1–128 from SCPI
Readback:	Date and time with seconds resolution are displayed on the key OR A custom name of up to 30 characters entered using the Save, State, Edit Register Names key OR “(empty)” if no prior save operation has been performed to this register.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	Prior to A.11.00
Help Map ID:	2639

Trace (+State)

The Recall Trace (+State) menu lets you choose a register or file from which to recall the Trace+State state file.

A saved state contains all of the settings and data required to return the analyzer as closely as possible to the exact setup it had when the save occurred. This includes the Input/Output settings, even though they are outside of the Mode’s state, because they are needed to restore the complete setup. A Trace+State file also includes trace data from one trace or all traces, which will load in View mode when the Trace+State file is recalled. Recall Trace (+State) will also cause a mode switch if the state being recalled is not for the current active mode.

After the recall completes, the message "File <filename> recalled" or “Recalled Trace Register <register number>” is displayed.

For rapid recalls, the Trace (+State) menu lists 5 registers to choose from to recall. Pressing a Register

key initiates the recall. You can also select a file from which to recall.

The default path for all State Files including .trace files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

Key Path:	Recall
Mode:	SA
Remote Command:	:MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , <filename> :MMEMory:LOAD:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , <integer>
Example:	MMEM:LOAD:TRAC TRACE2,"MyTraceFile.trace" This loads the trace file data (on the default file directory path) into the specified trace; if it is a "single trace" save file, that trace is loaded to trace 2, and is set to be not updating. :MMEM:LOAD:TRAC:REG TRACE1,2 restores the trace data in register 2 to Trace 1
Notes:	<p>When you perform the recall, the recalling Trace function must first verify the file is recallable in this instrument by checking instrument software version and model number, since it includes State. If everything matches, a full recall proceeds by aborting the currently running measurement, and loading the state from the saved state file to as close as possible to the context in which the save occurred. You can open .trace files from any mode that supports them, so recalling a Trace file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file and the saved measurement of the mode becomes the newly active measurement, and the data relevant to the measurement (if there is any) is recalled.</p> <p>Once the state is loaded, the trace data must be loaded. The internal flags are consulted to see which trace to load and the "To Trace" setting to see where to load it. Trace data is always loaded with the specified trace set to View, so that the data is visible and not updating (so as not to erase the recalled data). If the file is an "all trace" file, all traces are loaded with the saved data (to the original trace the data was saved from) and set to View. Traces whose data is not loaded are restored to the update state that existed when they were saved.</p> <p>After the Recall the analyzer exits the Recall menu and returns to the previous menu.</p> <p>Some modes and measurements do not have available all 6 traces. Phase Noise mode command, for example, is: MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3 , <filename></p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3491

Register 1 thru Register 5

Selecting any one of these register keys causes the Traces and State from the specified Register to be recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified.

Trace registers are shared by all modes, so recalling from any one of the 5 registers may cause a mode switch to the mode that was active when the save to the Register occurred.

Key Path:	Recall, Trace
Range:	1-5
Readback:	Date and time with seconds resolution of the last Save is displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3593

To Trace

These menu selections let you choose the Trace where the recalled saved trace will go. Not all modes have the full 6 traces available. The default is the currently selected trace, selected in this menu or in the Trace/Detector, Export Data, Import Data, or Save Trace menus, except if you have chosen All, then it remains chosen until you specifically change it to a single trace.

If the .trace file is an "all trace" file, "To Trace" is ignored and the traces each go back to the trace from which they were saved.

Once selected, the key returns back to the Recall Trace menu and the selected Trace number is annotated on the key. Now you have selected exactly where the trace needs to be recalled. To trigger a recall of the selected Trace, you must select the **Open** key in the Recall Trace menu.

When you select a trace, it makes that trace the current trace, so it displays on top of all of the other traces.

Key Path:	Save, Data, Trace
Mode:	SA
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3492

From File...

When you press "From File", the analyzer brings up a Windows dialog and a menu entitled "**File Open.**" This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

See "[From File...](#)" on page 173 under Save, State for a full description of this dialog and menu.

Key Path:	Recall, Trace
-----------	----------------------

Mode:	SA
Notes:	Brings up Open dialog for recalling a Trace Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3493

Sequences

This menu and all of its submenus are only available in the EXT (E6607A).

These keys allow you to import a Tab separated or .txt file that will automatically setup all the parameters required for building a Sequence. The parameters will automatically be loaded into the Stated Sequencer.

Once selected, in order to import the selected Sequence Type you must select the Open key in the Source Sequence menu.

Key Path:	Recall, Sequences
Mode:	All
Remote Command:	:MMEMory:LOAD:SEQuences: SLIS ALIS SAALIS "MySequence.txt"
Example:	:MMEM:LOAD:SEQ:SLIS "MySequence.txt"
Notes:	Available file types are: CSV (Comma delimited) (*.csv) Text (Tab delimited) (*.txt)
Initial S/W Revision:	A.05.00
Help Map ID:	3630

Source Sequence

The list of parameters, that configure steps, that makes up a sequence for the Source.

The Source sequence is a sequence of flexible configurable steps that can be set anywhere in the instruments frequency range.

Key Path:	Recall, Sequences
Example:	:MMEM:LOAD:SEQ:SLIS "MySequence.txt"
Dependencies:	Only available in XOBT
Initial S/W Revision:	A.05.00
Help Map ID:	3631

Analyzer Sequence

Only Available in: Sequence Analyzer Mode

The list of parameters, that configure steps, that makes up a sequence for the Analyzer.

The Analyzer sequence is a sequence of flexible configurable steps that can be set anywhere in the instruments frequency range for measuring the performance of a transmitters output

Key Path:	Recall,Sequences
Example:	:MMEM:LOAD:SEQ:ALIS "MySequence.txt"
Dependencies:	Only available in XOBT, Sequence Analyzer mode
Initial S/W Revision:	A.05.00
Help Map ID:	3632

Source and Analyzer Sequence

Only Available in: Sequence Analyzer Mode

The list of parameters, that configure steps, that makes up sequences for the Analyzer and the Source.

The Source and Analyzer sequence is completely configurable and can have internal triggers between the source and the analyzer to orchestrate a sequence to completely test an external transmitter and receiver's performance.

Key Path:	Recall,Sequences
Example:	:MMEM:LOAD:SEQ:SAAL "MySequence.txt"
Dependencies:	Only available in XOBT, Sequence Analyzer mode
Initial S/W Revision:	A.05.00
Help Map ID:	3633

Open...

Pressing **File Open** brings up the File Open standard Windows dialog and the File Open key menu. When the user navigates to this selection, they have already determined they are recalling a specific Data Type and now they want to specify which file to open.

When you first enter this dialog, the path is in the Look In: field in this File Open dialog depends on which import data type you navigated here from.

The only files that are visible are those specific to the file type being recalled.

Key Path:	Recall, Sequence
Notes:	The key location is mode-dependent and will vary.
Notes:	Brings up Open dialog for recalling a <sequence> Save Type
Initial S/W Revision:	A.05.00

Help Map ID:	3635
--------------	------

Data (Import)

Importing a data file loads data that was previously saved from the current measurement or from other measurements and/or modes that produce compatible data files. The Import Menu only contains Data Types that are supported by the current measurement.

Since the commonly exported data files are in .csv format, the data can be edited by the user prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Importing Data loads measurement data from the specified file into the specified or default destination, depending on the data type selected. Selecting an Import Data menu key will not actually cause the importing to occur, since the analyzer still needs to know from where to get the data. Pressing the Open key in this menu brings up the Open dialog and Open menu that provides you with the options from where to recall the data. Once a filename has been selected or entered in the Open menu, the recall occurs as soon as the Open button is pressed.

Key Path:	Recall
Mode:	All
Notes:	The menu is built from whatever data types are available for the mode. Some keys will be missing completely, so the key locations in the sub-menu will vary. No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEM:LOAD commands.
Dependencies:	If a file type is not used by a certain measurement, it is grayed out for that measurement. The key for a file type will not show at all if there are no measurements in the Mode that support it.
Preset:	Is not affected by Preset or shutdown, but is reset during Restore Mode Defaults
Readback:	The data type that is currently selected
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2648

Open...

When you press “Open”, the analyzer brings up a Windows dialog and a menu entitled “**File Open.**” This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

See “[From File...](#)” on page 173 in **Recall, State**, for a full description of this dialog and menu.

Key Path:	Recall, Data
-----------	---------------------

System Functions
Recall

Notes:	The key location is mode-dependent and will vary. Brings up Open dialog for recalling a <mode specific> Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2654

Save

The **Save** menu lets you choose what you want to save and where you want to save it. Among the types of files you can save are **States**, **Traces**, and **Screen Images**. In addition, an **Export (Data)** option lets you save a number of data types as CSV files for easy import into Excel and other spreadsheet programs.

Key Path:	Front-panel key
Mode:	All
Notes:	No remote command for this key specifically, but the :MMEM:STORe command is available for specific file types. An example is :MMEM:STOR:STAtE <filename>.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2600

State

The Save State menu lets you choose a register or file for saving the state.

The content of a state file includes all of the settings and data required to return the analyzer as closely as possible to the Mode it was in, with the exact settings which were in place, when the save occurred. The Mode settings in each state file include the settings that are affected by Mode Preset, as well as the additional settings affected by Restore Mode Defaults; all of the Mode's settings. In addition, all of the settings of the **Input/Output** system are included, even though they are outside of the Mode's state, because they are needed to restore the complete setup. Persistent **System** settings (for example, GPIB address) are not affected by either Mode Preset or Restore Mode Defaults, nor are they included in a saved State file.

After the save completes, the message "File <filename> saved" or "State Register <register number> saved" is displayed.

For rapid saving, the State menu lists 16 registers to save to. Pressing a Register key initiates the save. You can also select a file to save to.

The default path for all State Files is:

My Documents\<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).


Key Path:	Save
Mode:	All
Remote Command:	:MMEMory:STORe:STAtE <filename>

System Functions
Save

Example:	MMEM:STOR:STATe "MyStateFile.state" This stores the current instrument state data in the file MyStateFile.state in the default directory.
Notes:	Both single and double quotes are supported for any filename parameter over remote. After saving to a register, that register's menu key is updated with the date the time, unless a custom label has been entered for that key. After saving to a register, you remain in the Save State menu, so that you can see the Register key update. After saving to a file, the analyzer automatically returns to the previous menu and any Save As dialog goes away.
Backwards Compatibility SCPI:	:MMEMory:STORe:STATe 1,<filename> For backwards compatibility, the above syntax is supported. The "1" is simply ignored. The command is sequential.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2601

To File . . .

When you press "To File", the analyzer brings up a Windows dialog and a menu entitled "Save As." This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

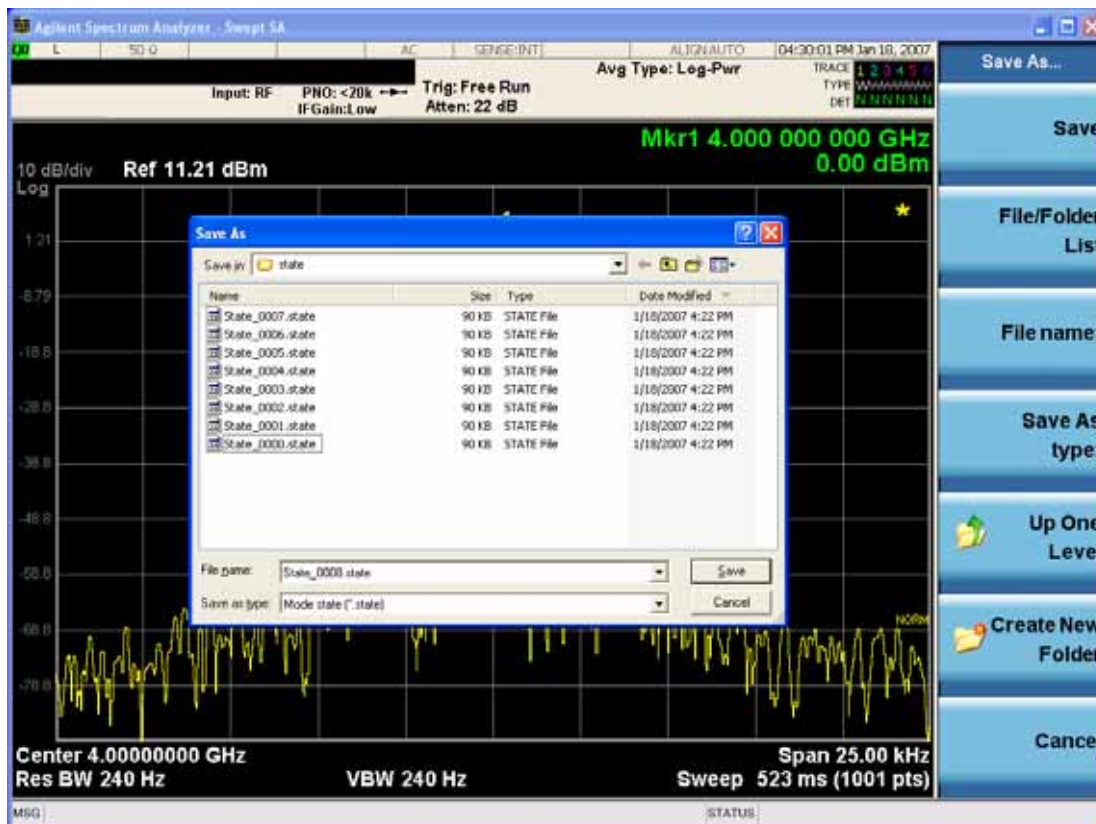

The

Listed below are the functions of the various fields in the dialog, and the corresponding softkeys:

Save

Performs the save to the specified file of the selected type. If the file already exists, a dialog will appear that allows you to replace the existing file by selecting **OK**, or you can Cancel the request. If you select **OK**, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade.

While the save is being performed, the floppy icon appears briefly in the Meas bar.

File/Folder List

Enables you to navigate to the center of the dialog that contains the list of files and folders. Once here you can get information about the file and use the tab keys to navigate to the other fields in the dialog, such as **Save In**.

Save In

The **Save In** field shows the path to which the file will be saved and allows you to change the path using the up and down arrow keys to navigate to other paths; the Enter key to open a directory; and the Backspace key to go back one directory. The **Save In field** defaults to the default path for this type of file and remembers the last path you used to save this type of file. There is no softkey for directly navigating to the **Save In** field but you can use left tab to get here from the **File/Folder List**.

User specified paths are remembered when you leave and return to a Mode and are reset back to the default using **Restore Mode Defaults**.

File Name

The **File Name** field is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the "[Quick Save](#)" on page 168 documentation for more on the automatic file naming algorithm.

When you press the **File Name** key the analyzer displays the Alpha Editor. Use the knob to choose the letter to add and the front-panel Enter key to add the letter to the file name. The BK character moves you back and the FW character moves you forward in the filename. The Select key on the front panel generates a space character. When you are done entering the filename press the **Done** softkey. This returns back to the **File Open** dialog and menu, but does not cause the save to occur.

Save As Type

This field shows the file suffix for the type of file you have selected to save. For example, if you navigated here while saving State, "Mode state (*.state)" is in the field. If you navigated here from saving Trace, "Mode state (*.trace)" is in the field. If you navigated here while exporting a trace data file, "Trace Data (*.csv)" is in the field. For some file types, there is more than one choice in the dropdown, which you can select by using the up and down arrow keys and Enter.

Up One Level

This key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. When pressed, it causes the file and folder list to navigate up one level in the directory structure. The Backspace key does the same thing.

Create New Folder

System Functions

Save

This key corresponds to the icon of a folder with the "*" that is in the tool bar of the dialog. When pressed, a new folder is created in the current directory with the name **New Folder** and you can enter a new folder name using the Alpha Editor.

Cancel

This key corresponds to the **Cancel** selection in the dialog. It causes the current **Save As** request to be cancelled. The ESC key does the same thing.

Key Path:	Save, State
Mode:	All
Notes:	Brings up Save As dialog for saving a State Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2609

Edit Register Names

You may enter a custom name on any of the Register keys, to help you remember what you are using that state to save. To do this, press the **Edit Register Names** key, choose the register whose name you wish to edit, and then enter the desired label using the Alpha Editor or an external PC keyboard.

The maximum number of characters that can be added is 30. In most cases, 30 characters will fit on two lines of the key.

See ["More Information" on page 187](#)

Key Path:	Save, State
Mode:	All
Remote Command:	:MMEMory:REGister:STATe:LABel <reg number>,"label" :MMEMory:REGister:STATe:LABel? <reg number>
Example:	:MMEM:REG:STAT:LAB 1,"my label"
Notes:	<reg number> is an integer from 1 to 16. If the SCPI specifies an invalid register number an error message is generated, -222,"Data out of range;Invalid register label number" "label" is a string from 0 to 30 characters in length. If a label exceeds 30 characters, an error message is generated, -150,"String data error;Label clipped to 30 characters" "label" of length 0 erases the custom label and restores the default (time and date) label. E.g.: :MMEM:REG:STAT:LAB 1,""
Dependencies:	N9060A-7FP or N9060B-2FP license required to edit the register names. When the feature is not licensed, sending this command generates an error, -221,"Settings conflict;Option not available"
Preset:	The names are unaffected by Preset or power cycle but are set to the default label (time and date) on a "Restore System Defaults->Misc"

Initial S/W Revision:	A.11.00
Help Map ID:	50009

More Information

When you edit one of the register names, the time and date field will be replaced by the custom name.

If you delete all the characters in the custom name, it restores the default (time and date).

The register names are stored within the state files, but they are not part of the instrument state; that is, once you have edited a register name, loading a new state will not change that register name. Another consequence of this is that the names will be persistent through a power cycle. Also, if a named state file is transferred to another analyzer, it will bring its custom name along with it.

If you try to edit the name of an empty register, the analyzer will first save the state to have a file to put the name in. If you load a named state file into an analyzer with older firmware it will ignore the metadata.

The *SAV and *RCL commands will not be affected by the custom register names, nor will the MMEM commands.

Register 1 thru Register 16

Selecting any one of these register menu keys causes the State of the currently active mode to be saved to the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can use the **Edit Register Names** key to enter custom names for each register.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17–128 are only available from the SCPI interface, using the *SAV command.

There is one set of 128 state registers in the instrument, not one set for each Mode. When a state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

After the save completes, the corresponding register menu key annotation is updated with the date and time and the message "Register <register number> saved" is displayed.

Key Path:	Save, State
Mode:	All
Example:	*SAV 1
Range:	1–16 from front panel, 1–128 from SCPI

Readback:	Date and time with seconds resolution are displayed on the key OR A custom name of up to 30 characters entered using the Edit Register Names key OR “(empty)” if no prior save operation has been performed to this register.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.11.00
Help Map ID:	2602

Trace (+State)

The **Save Trace (+State)** menu lets you choose a register or file specifying where to save the Trace+State state file.

A saved state contains all of the settings and data required to return the analyzer as closely as possible to the exact setup it had when the save occurred. This includes the Input/Output settings, even though they are outside of the Mode’s state, because they are needed to restore the complete setup. A Trace+State file also includes trace data from one trace or all traces, which will load in View mode when the Trace+State file is recalled.

After the save completes, the message "File <filename> saved" or "Trace Register <register number> saved" is displayed.

For rapid saves, the Trace (+State) menu lists 5 registers to save to. Pressing a Register key initiates the save. You can also select a file to save to.

The default path for all State Files including .trace files is:

My Documents\<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

This key is grayed out for measurements that do not support trace saves. It is blanked for modes that do not support trace saves. Saving **Trace** is identical to saving State except a .trace extension is used on the file instead of .state, and internal flags are set in the file indicating which trace was saved. You may select to save one trace or ALL traces.

Key Path:	Save
Mode:	SA
Remote Command:	:MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL, <filename> > :MMEMory:STORe:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL, <integer>

Example:	<p>:MMEM:STOR:TRAC TRACE1,“myState.trace” saves the file myState.trace on the default path and flags it as a “single trace” file with Trace 1 as the single trace (even though all of the traces are in fact stored).</p> <p>:MMEM:STOR:TRAC ALL,“myState.trace” saves the file myState.trace on the default path and flags it as an “all traces” file</p> <p>:MMEM:STOR:TRAC:REG TRACE1,2 stores trace 1 data in trace register 2</p>
Notes:	<p>This command actually performs a save state, which in the Swept SA measurement includes the trace data. However it flags it (in the file) as a “save trace” file of the specified trace (or all traces).</p> <p>Some modes and measurements do not have available all 6 traces. The Phase Noise mode command, for example, is: MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 ALL,<filename></p> <p>The range for the register parameter is 1–5</p> <p>When you initiate a save, if the file already exists, a dialog will appear that allows you to replace the existing file by selecting OK or you can Cancel the request. If you select OK, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade.</p> <p>Both single and double quotes are supported for any filename parameter over remote.</p> <p>After saving to a register, that register’s menu key is updated with the date and time of the save.</p> <p>After saving to a register, you remain in the Save Trace menu, so that you can see the Register key update. After saving to a file, the analyzer automatically returns to the previous menu and any Save As dialog goes away.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3486

Register 1 thru Register 5

Selecting any one of these register menu keys causes the Trace(s) specified under From Trace, along with the state of the currently active mode, to be saved to the specified Trace Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified.

Key Path:	Save, Trace
Mode:	SA
Range:	1–5
Readback:	Date and time with seconds resolution are displayed on the key, or "(empty)" if no prior save operation performed to this register.
Initial S/W Revision:	Prior to A.02.00

Help Map ID:	3598
--------------	------

From Trace

Accesses a menu that enables you to select the trace to be saved. Once a trace is selected, the key returns to the Save Trace menu and the selected trace number is annotated on the key. The default is the currently selected trace, selected in this menu or in the Trace/Det, Export Data, Import Data or Recall Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace. To save the Trace you must select the **Save As** key in the Save Trace menu.

When you select a trace, it makes that trace the current trace, so it displays on top of all of the other traces.

Key Path:	Save, Trace + State
Mode:	SA
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3505

To File . . .

When you press “To File”, the analyzer brings up a Windows dialog and a menu entitled “**Save As.**” This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

See “[To File . . .](#)” on page 184 in **Save, State** for a full description of this dialog and menu.

Key Path:	Save, Trace (+State)
Mode:	SA
Notes:	Brings up Save As dialog for saving a Trace+State Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3506

Sequences

This menu and all of its submenus are only available in the EXT (E6607A).

These keys allow you to save a Tab separated or CSV file of the setup parameters required to build a Sequence.

In order to save you must select the Save As button and choose a destination folder.

Key Path:	Save, Sequences
Mode:	All
Remote Command:	:MMEM:STOR:SEquences: SLIST ALIST SAAList SSTep "MySequence.txt"

Example:	:MMEM:STOR:SEQ:SLIS "MySequence.txt"
Notes:	Available file types are: CSV (Comma delimited) (*.csv) Text (Tab delimited) (*.txt)
Initial S/W Revision:	A.05.00
Help Map ID:	3636

Source Sequence

The list of parameters, that configure steps, that makes up a sequence for the Source.

The Source sequence is a sequence of flexible configurable steps that can be set anywhere in the instruments frequency range.

Key Path:	Save, Sequences
Example:	:MMEM:STOR:SEQ:SLIS "MySequence.txt"
Dependencies:	Only available in XOBT
Initial S/W Revision:	A.05.00
Help Map ID:	3637

Analyzer Sequence

Only Available in: Sequence Analyzer Mode

The list of parameters, that configure steps, that makes up a sequence for the Analyzer.

The Analyzer sequence is a sequence of flexible configurable steps that can be set anywhere in the instruments frequency range for measuring the performance of a transmitters output

Key Path:	Save, Sequences
Example:	:MMEM:STOR:SEQ:ALIS "MySequence.txt"
Dependencies:	Only available in XOBT, Sequence Analyzer mode
Initial S/W Revision:	A.05.00
Help Map ID:	3638

Source and Analyzer Sequence

Available in: Sequence Analyzer Mode

The list of parameters, that configure steps, that makes up a sequence for the Analyzer and the Source.

The Source and Analyzer sequence is completely configurable and can have internal triggers between the source and the analyzer to orchestrate a sequence to completely test an external transmitter and

System Functions

Save

receiver's performance.

Key Path:	Save, Sequences
Example:	:MMEM:STOR:SEQ:SAAL "MySequence.txt"
Dependencies:	Only available in XOBT, Sequence Analyzer mode
Initial S/W Revision:	A.05.00
Help Map ID:	3639

Save As . . .

This menu lets you select the location where you can save the Sequence. This menu is a standard Windows® dialog with Save As menu keys. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name softkey. See the Quick Save key documentation for more on the automatic file naming algorithm.

The default path for all Sequence Files is:

My Documents\Sequences

Key Path:	Save, Sequences
Mode:	All
Notes:	Brings up Save As dialog for saving a Sequence Save Type
Initial S/W Revision:	A.05.00
Help Map ID:	3641

Data (Export)

Exporting a data file stores data from the current measurement to mass storage files. The Export Menu only contains data types that are supported by the current measurement.

Since the commonly exported data files are in .csv format, the data can be edited by you prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Selecting an Export Data menu key will not actually cause the exporting to occur, since the analyzer still needs to know where you wish to save the data. Pressing the Save As key in this menu brings up the Save As dialog and Save As menu that allows you to specify the destination file and directory. Once a filename has been selected or entered in the Open menu, the export will occur as soon as the Save key is pressed.

Key Path:	Save
Mode:	All

Notes:	The menu is built from whatever data types are available for the mode. So the key locations in the sub menu will vary. No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEM:STORe commands.
Dependencies:	If a file type is not used by a certain measurement, that type is grayed out for that measurement. The key for a file type will not show at all if there are no measurements in the Mode that support it.
Preset:	Is not affected by a Preset or shutdown, but is reset during Restore Mode Defaults
Readback:	The data type that is currently selected
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2611

Save As . . .

When you press “Save As”, the analyzer brings up a Windows dialog and a menu entitled “**Save As.**” This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

See “[To File . . .](#)” on page 184 in **Save, State** for a full description of this dialog and menu.

The default path for saving files is:

For all of the Trace Data Files:

My Documents\<<mode name>\data\traces

For all of the Limit Data Files:

My Documents\<<mode name>\data\limits

For all of the Measurement Results Data Files:

My Documents\<<mode name>\data\<<measurement name>\results

For all of the Capture Buffer Data Files:

My Documents\<<mode name>\data\captureBuffer


Key Path:	Save, Data
Mode:	All
Notes:	The key location is mode-dependent and will vary. Brings up the Save As dialog for saving a <mode specific> Save Type. The save is performed immediately and does not wait until the measurement is complete.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2617

Screen Image

Pressing Screen Image accesses a menu of functions that enable you to specify a format and location for the saved screen image. It brings up a menu that allows you to specify the color scheme of the Screen Image (Themes) or navigate to the Save As dialog to perform the actual save.

Screen Image files contain an exact representation of the analyzer display. They cannot be loaded back onto the analyzer, but they can be loaded into your PC for use in many popular applications.

The image to be saved is actually captured when the **Save** front panel key is pressed, and kept in temporary storage to be used if you ask for a Screen Image save. When the Screen Image key is pressed, a "thumbnail" of the captured image is displayed, as shown below:

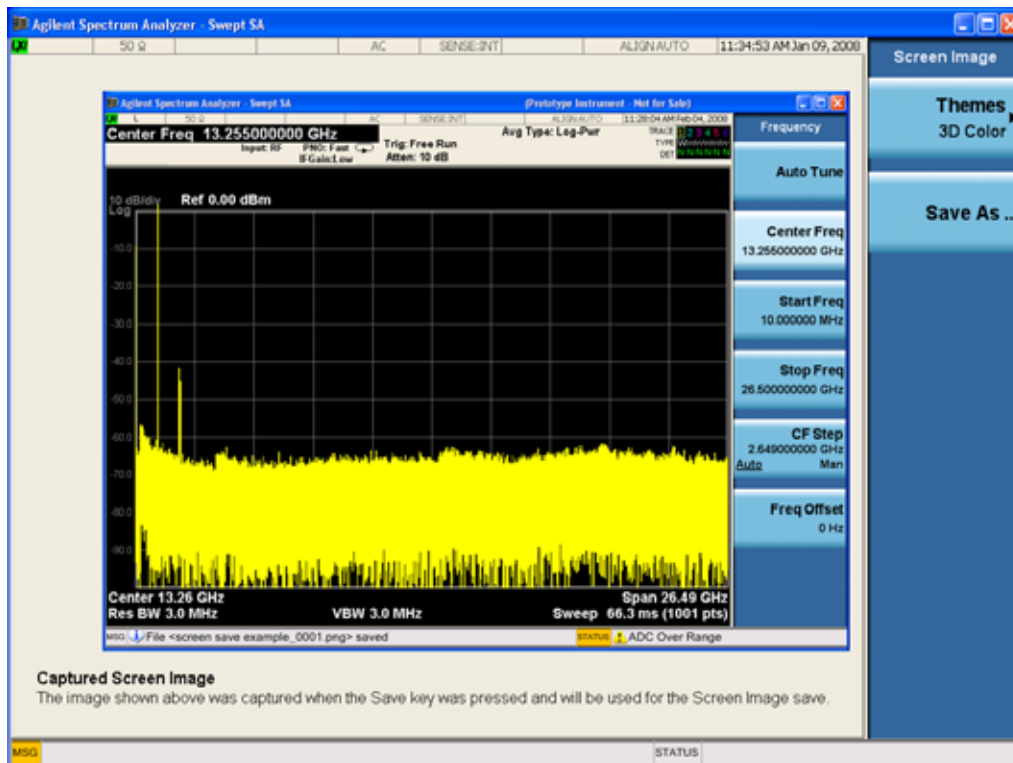

When you continue on into the **Save As** menu and complete the Screen Image save, the image depicted in the thumbnail is the one that gets saved, showing the menus that were on the screen before going into the **Save** menus. The save is performed immediately and does not wait until the measurement is complete.

After you have completed the save, the **Quick Save** front-panel key lets you quickly repeat the last save performed, using an auto-named file, with the current screen data.

NOTE For versions previous to A.01.55, if you initiate a screen image save by navigating through the Save menus, the image that is saved will contain the Save menu softkeys, not the menus and the active function that were on the screen when you first pressed the Save front panel key.

Key Path:	Save
Mode:	All
Remote Command:	:MMEMory:STORe:SCReEn <filename>
Example:	:MMEM:STOR:SCR "myScreen.png" This stores the current screen image in the file MyScreenFile.png in the default directory.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2620

Themes

Accesses a menu of functions that enable you to choose the theme to be used when saving the screen image.

The **Themes** option is the same as the **Themes** option under the **Display** and **Page Setup** dialogs. It allows you to choose between themes to be used when saving the screen image.

Key Path:	Save, Screen Image
Remote Command:	:MMEMory:STORe:SCReEn:THEME TDCoLor TDMonochrome FCoLoR FMONochrome :MMEMory:STORe:SCReEn:THEMe?
Example:	:MMEM:STOR:SCR:THEM TDM
Preset:	3D Color; Is not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes.
Readback:	3D Color 3D Mono Flat Color Flat Mono
Backwards Compatibility Notes:	In ESA and PSA we offer the choice of "Reverse Bitmap" or "Reverse Metafile" when saving screen images. This is much like the "Flat Color" theme available in X-Series. Also, if the user selected Reverse Bitmap AND a black&white screen image, that would be much like "Flat Monochrome". In other words, each of the X-Series themes has a similar screen image type in ESA/PSA. But they are not identical.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2621

3D Color

Selects a standard color theme with each object filled, shaded and colored as designed.

Key Path:	Save, Screen Image, Themes
Example:	MMEM:STOR:SCR:THEM TDC

System Functions

Save

Readback:	3D Color
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2622

3D Monochrome

Selects a format that is like 3D color but shades of gray are used instead of colors.

Key Path:	Save, Screen Image, Themes
Example:	MMEM:STOR:SCR:THEM TDM
Readback:	3D Mono
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2623

Flat Color

Selects a format that is best when the screen is to be printed on an ink printer.

Key Path:	Save, Screen Image, Themes
Example:	MMEM:STOR:SCR:THEM FCOL
Readback:	Flat Color
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2624

Flat Monochrome

Selects a format that is like Flat Color. But only black is used (no colors, not even gray), and no fill.

Key Path:	Save, Screen Image, Themes
Example:	MMEM:STOR:SCR:THEM FMON
Readback:	Flat Mono
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2625

Save As...

When you press “Save As”, the analyzer brings up a Windows dialog and a menu entitled “**Save As.**” This menu allows you to navigate to the various fields in the Windows dialog without using a keyboard or mouse. The **Tab** and **Arrow** keys can also be used for dialog navigation.

See “[To File . . .](#)” on page 184 in **Save, State** for a full description of this dialog and menu.

The default path for Screen Images is

My Documents\<<mode name>\screen.

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

Key Path:	Save, Screen Image
Notes:	Brings up Save As dialog for saving a Screen Image Save Type
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2626

Mass Storage Catalog (Remote Command Only)

Remote Command:	:MMEMory:CATalog? [<directory_name>]
Notes:	<p>The string must be a valid logical path.</p> <p>Queries disk usage information (drive capacity, free space available) and obtains a list of files and directories in a specified directory in the following format:</p> <p><numeric_value>,<numeric_value>,{<file_entry>}</p> <p>It returns two numeric parameters and as many strings as there are files and directories. The first parameter indicates the total amount of storage currently used in bytes. The second parameter indicates the total amount of storage available, also in bytes. The <file_entry> is a string. Each <file_entry> indicates the name, type, and size of one file in the directory list:</p> <p><file_name>,<file_type>,<file_size></p> <p>As the windows file system has an extension that indicates file type, <file_type> is always empty. <file_size> provides the size of the file in bytes. For directories, <file_entry> is surrounded by square brackets and both <file_type> and <file_size> are empty</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Change Directory (Remote Command Only)

Remote Command:	:MMEMory:CDIRectory [<directory_name>] :MMEMory:CDIRectory?
Notes:	<p>The string must be a valid logical path.</p> <p>Changes the default directory for a mass memory file system. The <directory_name> parameter is a string. If no parameter is specified, the directory is set to the *RST value.</p> <p>At *RST, this value is set to the default user data storage area, that is defined as System.Environment.SpecialFolder.Personal.</p> <p>Query returns full path of the default directory.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Copy (Remote Command Only)

Remote Command:	:MMEMory:COPY <string>,<string> [, <string>,<string>]
-----------------	---

Notes:	<p>The string must be a valid logical path.</p> <p>Copies an existing file to a new file or an existing directory to a new directory.</p> <p>Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination.</p> <p>The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists.</p> <p>This command will generate an "access denied" error if the destination is a restricted folder (e.g., C:\Windows) and the current user does not have Power User or Administrator privileges.</p>
Help Map ID:	0

Mass Storage Delete (Remote Command Only)

Remote Command:	:MMEMory:DELeTe <file_name> [, <directory_name>]
Notes:	<p>The string must be a valid logical path.</p> <p>Removes a file from the specified directory. The <file_name> parameter specifies the file name to be removed. This command will generate an "access denied" error if the file is in a restricted folder (e.g., C:\Windows) and the current user does not have Power User or Administrator privileges.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Data (Remote Command Only)

Creates a file containing the specified data OR queries the data from an existing file.

Remote Command:	:MMEMory:DATA <file_name>, <data> :MMEMory:DATA? <file_name>
Notes:	<p>The string must be a valid logical path.</p> <p>The command form is MMEMory:DATA <file_name>,<data>. It loads <data> into the file <file_name>. <data> is in 488.2 block format. <file_name> is string data.</p> <p>The query form is MMEMory:DATA? <file_name> with the response being the associated <data> in block format.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Make Directory (Remote Command Only)

Remote Command:	:MMEMory:MDIRectory <directory_name>
Notes:	<p>The string must be a valid logical path.</p> <p>Creates a new directory. The <directory_name> parameter specifies the name to be created.</p> <p>This command will generate an “access denied” error if the new directory would be in a restricted folder (e.g., C:\Windows) and the current user does not have Power User or Administrator privileges.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Move (Remote Command Only)

Remote Command:	:MMEMory:MOVE <string>, <string> [, <string>, <string>]
Notes:	<p>The string must be a valid logical path.</p> <p>Moves an existing file to a new file or an existing directory to a new directory.</p> <p>Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination.</p> <p>The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists.</p> <p>This command will generate an “access denied” error if the destination is a restricted folder (e.g., C:\Windows) and the current user does not have Power User or Administrator privileges.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mass Storage Remove Directory (Remote Command Only)

Remote Command:	:MEMMory:RDIRectory <directory_name>
Notes:	<p>The string must be a valid logical path.</p> <p>Removes a directory. The <directory_name> parameter specifies the directory name to be removed. All files and directories under the specified directory shall also be removed.</p> <p>This command will generate an “access denied” error if the folder is a restricted folder (e.g., C:\Windows) or is in a restricted folder and the current user does not have Power User or Administrator privileges.</p>

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

System

Opens a menu of keys that access various configuration menus and dialogs.

Key Path:	Front-panel key
Notes:	No remote command for this key specifically.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2400

Show

Accesses a menu of choices that enable you to select the information window you want to view.

Key Path:	System
Mode:	All
Remote Command:	:SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware CAPplication :SYSTem:SHOW?
Example:	:SYST:SHOW SYST
Notes:	This command displays (or exits) the various System information screens.
Preset:	OFF
State Saved:	No
Range:	OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware CAPplication
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2403

Errors

There are two modes for the Errors selection, History and Status.

The list of errors displayed in the Errors screen does not automatically refresh. You must press the Refresh key or leave the screen and return to it to refresh it.

History brings up a screen displaying the event log in chronological order, with the newest event at the top. The history queue can hold up to 100 messages (if a message has a repeat count greater than 1 it only counts once against this number of 100). Note that this count bears no relation to the size of the SCPI queue. If the queue extends onto a second page, a scroll bar appears to allow scrolling with a mouse. Time is displayed to the second.

Status brings up a screen summarizing the status conditions currently in effect. Note that the time is

displayed to the second.

The fields on the Errors display are:

Type (unlabeled) - Displays the icon identifying the event or condition as an error or warning.

ID - Displays the error number.

Message - Displays the message text.

Repeat (RPT) - This field shows the number of consecutive instances of the event, uninterrupted by other events. If an event occurs 5 times with no other intervening event, the value of repeat will be 5.

If the value of Repeat is 1 the field does not display. If the value of Repeat is >1, the time and date shown are those of the most recent occurrence. If the value of repeat reaches 999,999 it stops there.

Time - Shows the most recent time (including the date) at which the event occurred.

Key Path:	System, Show
Mode:	All
Remote Command:	:SYSTem:ERRor [:NEXT] ?
Example:	:SYST:ERR?
Notes:	<p>The return string has the format: “<Error Number>,<Error>” Where <Error Number> and <Error> are those shown on the Show Errors screen</p>

Backwards Compatibility Notes:	<p>In some legacy analyzers, the Repeat field shows the number of times the message has repeated since the last time the error queue was cleared. In the X-Series, the Repeat field shows the number of times the error has repeated since the last intervening error. So the count may very well be different than in the past even for identical signal conditions</p> <p>Unlike previous analyzers, in the X-Series all errors are reported through the Message or Status lines and are logged to the event queue. They never appear as text in the graticule area (as they sometimes do in previous analyzers) and they are never displayed in the settings panel at the top of the screen (as they sometimes do, by changing color, in previous analyzers).</p> <p>As a consequence of the above, the user can only see one status condition (the most recently generated) without looking at the queue. In the past, at least in the Spectrum Analyzer, multiple status conditions might display on the right side of the graticule.</p> <p>In general, there is no backwards compatibility specified or guaranteed between the error numbers in the X-Series and those of earlier products. Error, event, and status processing code in customers' software will probably need to be rewritten to work with X-Series.</p> <p>In the legacy analyzers, some conditions report as errors and others simply turn on status bits. Conditions that report as errors often report over and over as long as the condition exists. In the X-series, all conditions report as start and stop events. Consequently, software that repeatedly queries for a condition error until it stops reporting will have to be rewritten for the X-series.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3487

Next Page

Next Page and Previous Page menu keys move you between pages of the log, if it fills more than one page. These keys are grayed out in some cases:

If on the last page of the log, the Next Page key is grayed-out

If on the first page of the log, the Previous Page key is grayed-out.

If there is only one page, both keys are grayed out.

Key Path:	System, Show, Errors
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2671

Previous Page

See [“Next Page”](#) on page 204.

Key Path:	System, Show, Errors
-----------	-----------------------------

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3629

History

The History and Status keys select the Errors view. The Status key has a second line which shows a number in [square brackets]. This is the number of currently open status items.

Key Path:	System, Show, Errors
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2672

Status

See [“History” on page 205](#).

Verbose SCPI On/Off

When you turn Verbose SCPI on, additional information is returned when you send the :SYSTem:ERRor? query. The additional information consists of the characters that stimulated the error. This can aid you in debugging your test programs by indicating where in the parsing of a SCPI command the instrument encountered an invalid command or query.

Specifically, with Verbose SCPI on, the SYSTem:ERRor? query is expanded to show the SCPI data received, with the indicator <Err> at the point in the stream that the error occurred.

Verbose SCPI has no effect on the Show Errors screen or front panel Message Line; it only changes the response to the :SYST:ERR? query.

See the example below, where the invalid command “SENS:BOGUS” is sent:

Normal response to :SYST:ERR (using the Telnet window):

```
SCPI> SENS:BOGUS
```

```
SCPI> SYST:ERR?
```

```
-113,"Undefined header"
```

Now after turning on Verbose SCPI:

```
SCPI> SYST:BOGUS
```

```
SCPI> SYST:ERR?
```

```
-113,"Undefined header;SYST:BOGUS<Err>"
```

Key Path:	System, Show, Errors
Mode:	All
Remote Command:	:SYSTem:ERRor:VERBoSe OFF ON 0 1 :SYSTem:ERRor:VERBoSe?

Example:	:SYST:ERR:VERB ON
Preset:	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Misc”
State Saved:	No
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2673

Input Overload Enable (Remote Command Only)

Input Overload errors are reported using the Input Overload status bit (bit 12 in the Measurement Integrity status register). Input Overloads (for example, ADC Overload errors) can come and go with great frequency, generating many error events (for example, for signals just on the verge of overload), and so are not put into the SCPI error queue by default. Normally the status bit is the only way for detecting these errors remotely.

It is possible to enable Input Overload reporting to the SCPI queue, by issuing the :SYSTem:ERRor:OVERload ON command. To return to the default state, issue the :SYSTem:ERRor:OVERload OFF command. In either case, Input Overloads always set the status bit.

NOTE For versions of firmware before A.10.01, the Input Overload was only a Warning and so was never available in the SCPI queue, although it did set the status bit. For A.10.01 and later, the Input Overload is an error and can be enabled to the SCPI queue using this command.

Key Path:	SCPI only
Remote Command:	:SYSTem:ERRor:OVERload[:STATe] 0 1 OFF ON
Example:	:SYST:ERR:OVER 1 Enable overload errors
Preset:	Set to OFF by Restore Misc Defaults (no Overload errors go to SCPI)
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.01
Help Map ID:	0

Refresh

When pressed, refreshes the Show Errors display.

Key Path:	System, Show, Errors
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2674

Clear Error Queue

This clears all errors in all error queues.

Note the following:

Clear Error Queue does not affect the current status conditions.

Mode Preset does not clear the error queue.

Restore System Defaults will clear all error queues.

*CLS only clears the queue if it is sent remotely and *RST does not affect any error queue.

Switching modes does not affect any error queues.

Key Path:	System, Show, Errors
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2675

System

The System screen is formatted into three groupings: product descriptive information, options tied to the hardware, and software products:

<Product Name> <Product Description>	
Product Number: N9020A	
Serial Number: US46220924	
Firmware Revision: A.01.01	
Computer Name: <hostname>	
Host ID: N9020A,US44220924	
N9020A-503	Frequency Range to 3.6 GHz
N9020A-PFR	Precision Frequency Reference
N9020A-P03	Preamp 3.6 GHz
N9060A-2FP	Spectrum Analysis Measurement Suite 1.0.0.0
N9073A-1FP	WCDMA 1.0.0.0
N9073A-2FP	WCDMA with HSDPA 1.0.0.0

The Previous Page is grayed-out if the first page of information is presently displayed. The Next Page menu key is grayed-out if the last page is information is presently displayed.

Key Path:	System, Show
Mode:	All
Example:	SYST:SHOW SYST

System Functions

System

Backwards Compatibility Notes:	The hardware statistics that are displayed in the PSA Show System screen have been moved to a dedicated Show Hardware Statistics screen in the Service Menu.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2676

Show System contents (Remote Command Only)

A remote command is available to obtain the contents of the Show System screen (the entire contents, not just the currently displayed page).

Remote Command:	:SYSTem:CONFigure[:SYSTem]?
Example:	:SYST:CONF?
Notes:	The output is an IEEE Block format of the Show System contents. Each line is separated with a new-line character.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Computer System description (Remote Command Only)

A remote command is available to obtain the Computer System description. The Computer System is the operating system and patch level as reported by operating system.

Remote Command:	:SYSTem:CSYSTem?
Example:	:SYST:CSYS?
Notes:	The return value is the Computer System name and service pack level.
Initial S/W Revision:	Prior to A.12.00
Help Map ID:	0

Hardware

The show hardware screen is used to view details of the installed hardware. This information can be used to determine versions of hardware assemblies and field programmable devices, in the advent of future upgrades or potential repair needs.

The screen is formatted into two groupings: product descriptive information and hardware information. The hardware information is listed in a table format:

Hardware Information							
MXA Signal Analyzer							
Product Number: N9020A							
Serial Number: US46220107							
Firmware Revision: A.01.14							
Assembly Name	Part #	Serial #	Mat Rev	Rev	OF Rev	Hw Id	Misc
Analog IF	E441060104	78060200131	003	0	C	15	
YIG Tuned Filter	50877305	11061500550	005	0	A	11	
Digital IF	E441060105	78060100559	003	0	F	14	
Front End Controller	E441060101	78060100147	004	2	A	8	
Low Band Switch	E441060170	78060800346	005	1	A	10	
LO Synthesizer	E441060102	78060100226	003	3	G	2	
Reference	E441060108	78060300420	004	1	C	16	
Front End	E441060154	13062800820	010	2	B	9	

The Previous Page is grayed-out if the first page of information is presently displayed. The Next Page menu key is grayed-out if the last page of information is presently displayed.

Key Path:	System, Show
Mode:	All
Example:	SYST:SHOW HARD
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2677

LXI

This key shows you the product number, serial number, firmware revision, computer name, IP address, Host ID, LXI Class, LXI Version, MAC Address, and the Auto-MDIX Capability.

Key Path:	System, Show
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3499

Power On

Enables you to select how the instrument should power on. The options are: Mode and Input/Output

System Functions

System

Defaults, User Preset and Last State.

Key Path:	System
Mode:	All
Remote Command:	:SYSTem: PON: TYPE MODE USER LAST :SYSTem: PON: TYPE?
Example:	:SYST: PON: TYPE MODE
Preset:	This is unaffected by a Preset but is set to Mode on a “Restore System Defaults->All”
State Saved:	No
Backwards Compatibility SCPI:	:SYSTem: PON: TYPE PRESet the “PRESet” parameter is supported for backward compatibility only and behaves the same as MODE.
Backwards Compatibility Notes:	The Preset Type key in legacy analyzers has been removed, and the Power On toggle key has been replaced by this 1-of-N key in the System menu.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2316

Mode and Input/Output Defaults

When the analyzer is powered on in Mode and Input/Output Defaults, it performs a Restore Mode Defaults to all modes in the instrument and also performs a Restore Input/Output Defaults.

Persistent parameters (such as Amplitude Correction tables or Limit tables) are not affected at power on, even though they are normally cleared by Restore Input/Output Defaults and/or Restore Mode Defaults.

Key Path:	System, Power On
Mode:	All
Example:	SYST: PON: TYPE MODE
Readback Text:	Defaults
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2317

User Preset

Sets **Power On** to **User Preset**. When the analyzer is powered on in User Preset, it will User Preset each mode and switch to the power-on mode. Power On User Preset will not affect any settings beyond what a normal User Preset affects.

NOTE An instrument could never power up for the first time in User Preset.

Key Path:	System, Power On
Mode:	All
Example:	SYST:PON:TYPE USER
Readback Text:	User Preset
Backwards Compatibility Notes:	Power On User Preset will cause the instrument to power up in the power-on mode, not the last mode the instrument was in prior to shut down. Also, Power On User Preset will User Preset all modes. This does not exactly match legacy behavior.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2318

Last State

Sets **Power On** to **Last**. When the analyzer is powered on, it will put all modes in the last state they were in prior to when the analyzer was put into Power Standby and it will wake up in the mode it was last in prior to powering off the instrument. The saving of the active mode prior to shutdown happens behind the scenes when a controlled shutdown is requested by using the front panel power **Standby** key or by using the remote command `SYSTem:PDOWn`. The non-active modes are saved as they are deactivated and recalled by Power On Last State.

NOTE An instrument can never power up for the first time in Last.

If line power to the analyzer is interrupted, for example by pulling the line cord plug or by switching off power to a test rack, Power On Last State may not work properly. For proper operation, Power On Last State depends on you shutting down the instrument using the Standby key or the `SYSTem:PDOWn` SCPI command. This will ensure the last state of each mode is saved and can be recalled during a power up.

Key Path:	System, Power On
Mode:	All
Example:	SYST:PON:TYPE LAST
Notes:	Power on Last State only works if you have done a controlled shutdown prior to powering on in Last. If a controlled shutdown is not done when in Power On Last State, the instrument will power up in the last active mode, but it may not power up in the active mode's last state. If an invalid mode state is detected, a Mode Preset will occur. To control the shutdown under remote control use the <code>:SYSTem:PDOWn</code> command.
Readback Text:	Last State

Backwards Compatibility Notes:	It is no longer possible to power-up the analyzer in the last mode the analyzer was running with that mode in the preset state. (ESA/PSA SYST:PRESET:TYPE MODE with SYST:PON:PRESET) You can power-on the analyzer in the last mode the instrument was running in its last state (SYST:PON:TYPE LAST), or you can specify the mode to power-up in its preset state (SYST:PON:MODE <mode>).
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2319

Power On Application

Accesses a menu that lists the available Modes and lets you select which Mode is to be the power-on application.

This application is used for Power On Type “Mode and Input/Output Defaults” and Restore System Defaults All.

Key Path:	System, Power On
Mode:	All
Remote Command:	: SYSTem: PON: MODE SA BASIC ADEMOD NFIGURE PNOISE CDMA2K TDSCDMA VSA VSA89 601 WCDMA WIMAXOFDMA : SYSTem: PON: MODE?
Example:	SYST:PON:MODE SA
Notes:	The list of possible modes (and remote parameters) to choose from is dependent on which modes are installed in the instrument.
Preset:	This is unaffected by a Preset but is set on a “Restore System Defaults->All” to SA.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2320

Configure Applications

The Configure Applications utility can be used to:

- select applications for preload
- determine how many applications can fit in memory at one time
- specify the order of the Modes in the Mode menu.

This utility consists of a window with instructions, a set of “Select Application” checkboxes, a “fuel bar” style memory gauge, and keys that help you set up your configuration.

For more information, see the following topics:

[“Preloading Applications” on page 213](#)

[“Access to Configure Applications utility” on page 213](#)

[“Virtual memory usage” on page 213](#)

Key Path:	System, Power On
Example:	:SYST:SHOW CAPP Displays the Config Applications screen
Initial S/W Revision:	A.02.00
Help Map ID:	3616

Preloading Applications

During runtime, if a Mode that is not preloaded is selected using the Mode menu or sending SCPI commands, there will be a pause while the Application is loaded. During this pause a message that says “Loading application, please wait ...” is displayed. Once loaded, the application stays loaded, so the next time you select it during a session, there is no delay.

Preloading enables you to “preload” at startup, to eliminate the runtime delay. Preloading an application will cause it to be loaded into the analyzer’s memory when the analyzer program starts up. If you do this, the delay will increase the time it takes to start up the analyzer program, but this may be preferable to having to wait the first time you select an application. Note that, once an application is loaded into memory, it cannot be unloaded without exiting and restarting the analyzer program.

Note that there are more applications available for the X-Series than can fit into Windows Virtual Memory. By allowing you to choose which licensed applications to load at startup, the Configure Applications utility allows you to make optimal use of your memory.

Access to Configure Applications utility

A version of the utility runs the first time you power up the analyzer after purchasing it from Agilent. The utility automatically configures preloads so that as many licensed applications as possible are preloaded while keeping the total estimated virtual memory usage below the limit. This auto-configuration only takes place at the very first run, and after analyzer software upgrades.

You may, at any time, manually call up the Configure Applications utility by pressing System, Power On, Configure Applications, to find a configuration that works best for you, and then restart the analyzer program.

The utility may also be called if, during operation of the analyzer, you attempt to load more applications than can fit in memory at once.

Virtual memory usage

There are more applications available for the X-Series than can fit into memory at any one time, so the Configure Applications utility includes a memory tracker that serves two purposes:

It will not let you preload more applications than will fit into memory at once.

You can determine how many of your favorite applications can reside in memory at one time.

The utility provides a graphical representation of the amount of memory (note that the memory in

System Functions

System

question here is Virtual memory and is a limitation imposed by the operating system, not by the amount of physical memory you have in your analyzer). You select applications to preload by checking the boxes on the left. Checked applications preload at startup. The colored fuel bar indicates the total memory required when all the checked applications are loaded (either preloaded or selected during runtime).

Here is what the fuel bar colors mean:

RED: the applications you have selected cannot all fit into the analyzer's memory. You must deselect applications until the fuel bar turns yellow.

YELLOW: the applications you have selected can all fit into the analyzer's memory, but there is less than 10% of the memory left, probably not enough to load any other applications, either via preload or by selecting a Mode while the analyzer is running..

GREEN: The indicator is green when <90% of the memory limit is consumed. This means the applications you have selected can all fit into the analyzer's memory with room to spare. You will likely be able to load one or more other applications without running out of memory.

Select All

Marks all applications in the selection list. This allows you to enable all applications licensed on the instrument for pre-loading, or is a convenience for selecting all applications in one operation and then letting you deselect individual applications.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Help Map ID:	3617

Deselect All

Clears the marks from all applications in the selection list, except the Power On application. The Power On application cannot be eliminated from the pre-load list.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Help Map ID:	3618

Move Up

The application list is the order that applications appear in the Mode Menu. This key enables you to shift the selected application up in the list, thus moving the selected application earlier in the Mode Menu.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Help Map ID:	3619

Move Down

The application list is the order that applications appear in the Mode Menu. This key enables you to shift the selected application down in the list, thus moving the selected application later in the Mode Menu.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Help Map ID:	3620

Select/Deselect


Toggles the currently highlighted application in the list.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Help Map ID:	3621

Save Changes and Exit

Applies the configuration of the applications list. The marked applications will be pre-loaded in memory the next time the instrument application is started, and the order of the applications in the list will be the order of the applications in the Mode Menu.

After saving your changes, the analyzer asks you if you would like it to restart so that your changes can take effect (see dialog box, below). If you choose not to restart, the changes will not take affect until the next time you shut down and restart the analyzer.

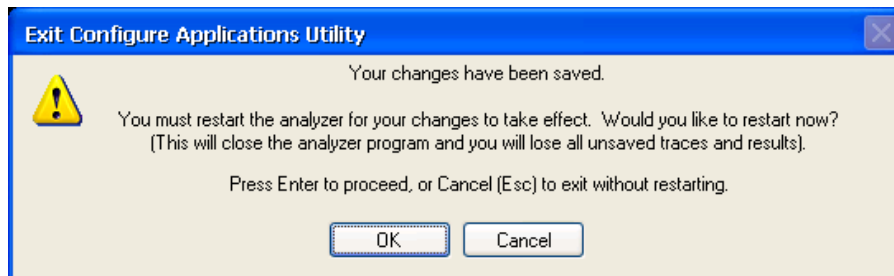

Key Path:	System, Power On, Configure Applications
Remote Command:	:SYSTem:PUP:PROcess
Example:	:SYST:PUP:PROC This is the SCPI command for restarting the analyzer. You must Wait after this command for the instrument application to restart
Notes:	The softkey will be grayed-out when the virtual memory of the selected applications exceeds 100% of the limit.

Notes:	You cannot use *WAI or *OPC? to synchronize operation after a restart. This command stops and restarts the instrument application, thus the SCPI operation is terminated and restarted. A remote program must use fixed wait time to resume sending commands to the instrument. The wait time will be dependent upon which applications are pre-loaded.
Initial S/W Revision:	A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3622

Exit Without Saving

Pressing this key will exit the Configure Applications utility without saving your changes.

Key Path:	System, Power On, Configure Applications
Initial S/W Revision:	A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3623

Configure Applications - Instrument boot-up

At start-up of the analyzer program a dialog box similar to the one under the **System, Power On, Configure Applications** key will be displayed allowing you to choose which licensed applications are to be loaded. This dialog will only be displayed if the memory required to pre-load all of the licensed applications exceeds the Virtual Memory available.

Configure Applications - Windows desktop

The Configure Applications Utility may be run from the Windows Desktop. The utility is launched by



double-clicking the icon on the desktop, which brings-up a dialog box similar to the one under the **System, Power On, Configure Applications** key, allowing you to choose which licensed applications are to be loaded when the analyzer program starts up. This dialog box has mouse buttons on it that do the job the softkeys normally do in the **System, Power On, Configure Applications** menu.

Configure Applications - Remote Commands

The following topics provide details on using remote commands to configure the list of applications you want to load into the instrument memory or query the Virtual Memory utilization for your applications.

[“Configuration list \(Remote Command Only\)” on page 217](#)

[“Configuration Memory Available \(Remote Command Only\)” on page 217](#)

[“Configuration Memory Total \(Remote Command Only\)” on page 217](#)

[“Configuration Memory Used \(Remote Command Only\)” on page 218](#)

[“Configuration Application Memory \(Remote Command Only\)” on page 218](#)

Configuration list (Remote Command Only)

This remote command is used to set or query the list of applications to be loaded in-memory.

Remote Command:	:SYSTem:PON:APPLication:LLIST <string of INSTRument:SElect names> :SYSTem:PON:APPLication:LLIST?
Example:	:SYST:PON:APPL:LLIS "SA,BASIC,WCDMA"
Notes:	<string of INSTRument:SElect names> are from the enums of the :INSTRument:SElect command. The order of the <INSTRument:SElect names> is the order that the applications are loaded into memory, and the order that they appear in the Mode Menu. Error message –225 "Out of Memory" is reported when more applications are listed than can reside in Virtual Memory. When this occurs, the existing applications load list is unchanged.
Preset:	Not affected by Preset
State Saved:	Not saved in instrument state
Initial S/W Revision:	A.02.00
Help Map ID:	0

Configuration Memory Available (Remote Command Only)

This remote command is used to query the amount of Virtual Memory remaining.

Remote Command:	:SYSTem:PON:APPLication:VMEMory[:AVAIlable]?
Example:	:SYST:PON:APPL:VMEM?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00
Help Map ID:	0

Configuration Memory Total (Remote Command Only)

This remote command is used to query the limit of Virtual Memory allowed for applications.

Remote Command:	:SYSTem:PON:APPLication:VMEMory:TOTal?
Example:	:SYST:PON:APPL:VMEM:TOT?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00
Help Map ID:	0

Configuration Memory Used (Remote Command Only)

This remote command is a query of the amount of Virtual Memory used by all measurement applications.

Remote Command:	:SYSTem:PON:APPLication:VMEMory:USED?
Example:	:SYST:PON:APPL:VMEM:USED?
Preset:	Not affected by Preset
Initial S/W Revision:	A.02.00
Help Map ID:	0


Configuration Application Memory (Remote Command Only)

This remote command is used to query the amount of Virtual Memory a particular application consumes.

Remote Command:	:SYSTem:PON:APPLication:VMEMory:USED:NAME? <INSTRument:SElect name>
Example:	:SYST:PON:APPL:VMEM:USED:NAME? CDMA2K
Notes:	<INSTRument:SElect name> is from the enums of the :INSTRument:SElect command Value returned will be 0 (zero) if the name provided is invalid.
Preset:	Not affected by Preset
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Restore Power On Defaults

This selection causes the Power On Type and Power On Application settings to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On key, under the Restore System Defaults menu, causes the same action.

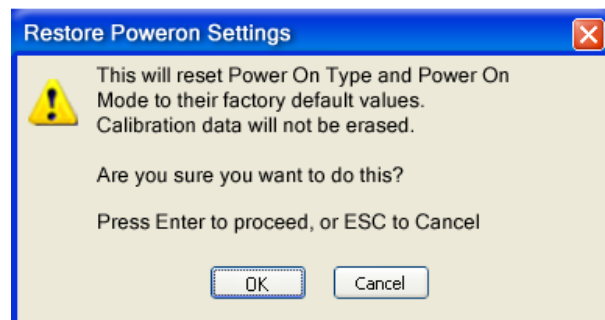

If you press any key other than OK or Enter, it is construed as a Cancel, because the only path that will

actually cause the reset to be executed is through OK or Enter.

Key Path:	System, Power On
Example:	:SYST:DEF PON
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2321

Alignments

The Alignments Menu controls and displays the automatic alignment of the instrument, and provides the ability to restore the default alignment values.

The current setting of the alignment system is displayed in the system Settings Panel along the top of the display, including a warning icon for conditions that may cause specifications to be impacted.



Key Path:	System
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2000

Auto Align

Configures the method for which the automatic background alignment is run.

Automatic background alignments are run periodically between measurement acquisitions. The instrument's software determines when alignments are to be performed to maintain warranted operation. The recommended setting for Auto Align is Normal.

An Auto Align execution cannot be aborted with the Cancel (ESC) key. To interrupt an Auto Align execution, select **Auto Align Off**.

Key Path:	System, Alignments
Mode:	All
Remote Command:	:CALibration:AUTO ON PARTial OFF :CALibration:AUTO?
Example:	:CAL:AUTO ON
Notes:	While Auto Align is executing, bit 0 of Status Operation register is set.
Couplings:	Auto Align is set to Off if Restore Align Data is invoked.
Preset:	This is unaffected by Preset but is set to ON upon a "Restore System Defaults->Align".
State Saved:	No

System Functions
System

Status Bits/OPC dependencies:	When Auto Align is executing, bit 0 in the Status Operational register is set.
Backwards Compatibility SCPI:	:CALibration:AUTO ALERt Parameter ALERt is for backward compatibility only and is mapped to PARTial
Backwards Compatibility Notes:	ESA SCPI for Auto Align is :CALibration:AUTO <Boolean>. The command for X-Series is an enumeration. Thus the parameters of “0” and “1” are not possible in X-Series. Similarly, the ESA SCPI for :CALibration:AUTO? returned the Boolean value 1 or 0, in X-Series it is an Enumeration (string). Thus, queries by customer applications into numeric variables will result in an error In PSA Auto Align OFF was not completely off, it is equivalent to PARTial in X-Series. In X-Series, OFF will be fully OFF. This means users of PSA SCPI who choose OFF may see degraded performance and should migrate their software to use PARTial.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2001

Normal

Auto Align, Normal turns on the automatic alignment of all measurement systems. The Auto Align, Normal selection maintains the instrument in warranted operation across varying temperature and over time.

If the condition “Align Now, All required” is set, transition to Auto Align, Normal will perform the required alignments and clear the “Align Now, All required” condition and then continue with further alignments as required to maintain the instrument adequately aligned for warranted operation.

When **Auto Align, Normal** is selected the Auto Align Off time is set to zero.

When **Auto Align, Normal** is selected the Settings Panel indicates ALIGN AUTO.

Key Path:	System, Alignments, Auto Align
Mode:	All
Example:	:CAL:AUTO ON
Notes:	Alignment processing as a result of the transition to Normal will be executed sequentially. Thus, *OPC? or *WAI following CAL:AUTO ON will return when the alignment processing is complete. The presence of an external signal may interfere with the RF portion of the alignment. If so, the Error Condition message “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, and bit 11 is set in the Status Questionable Calibration register. After the interfering signal is removed, subsequent alignment of the RF will clear the condition, and clear bit 11 in the Status Questionable Calibration register.
Readback Text:	Normal

Status Bits/OPC dependencies:	An interfering user signal may prevent automatic alignment of the RF subsystem. If this occurs, the Error Condition message “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, the Status Questionable Calibration bit 11 is set, and the alignment proceeds. When a subsequent alignment of the RF subsystem succeeds, either by the next cycle of automatic alignment or from an Align Now, RF, the Error Condition and Status Questionable Calibration bit 11 are cleared.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2002

Partial

Auto Align, Partial disables the full automatic alignment and the maintenance of warranted operation for the benefit of improved measurement throughput. Accuracy is retained for the Resolution Bandwidth filters and the IF Passband which is critical to FFT accuracy, demodulation, and many measurement applications. With Auto Align set to Partial, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the Align All, Now operation. Another is to return the Auto Align selection to Normal.

Auto Align, Partial is recommended for measurements where the throughput is so important that a few percent of improvement is more valued than an increase in the accuracy errors of a few tenths of a decibel. One good application of Auto Align, Partial would be an automated environment where the alignments can be called during overhead time when the device-under-test is exchanged.

When **Auto Align, Partial** is selected the elapsed time counter begins for Auto Align Off time.

When **Auto Align, Partial** is selected the Settings Panel indicates ALIGN PARTIAL with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument

Key Path:	System, Alignments, Auto Align
Mode:	All
Example:	:CAL:AUTO PART
Notes:	Auto Align Partial begins the elapsed time counter for Auto Align Off time.
Readback Text:	Partial
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2003

Off

Auto Align, Off disables automatic alignment and the maintenance of warranted operation, for the benefit of maximum measurement throughput. With Auto Align set to Off, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the Align All, Now operation. Another is to return the Auto Align selection to Normal.

System Functions
System

The Auto Align, Off setting is rarely the best choice, because Partial gives almost the same improvement in throughput while maintaining the warranted performance for a much longer time. The choice is intended for unusual circumstances such as the measurement of radar pulses where you might like the revisit time to be as consistent as possible.

When **Auto Align, Off** is selected the Auto Align Off time is initialized and the elapsed time counter begins.

When **Auto Align, Off** is selected the Settings Panel indicates ALIGN OFF with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument:

Key Path:	System, Alignments, Auto Align
Mode:	All
Example:	:CAL:AUTO OFF
Notes:	Auto Align Off begins the elapsed time counter for Auto Align Off time.
Couplings:	Auto Align is set to Off if Restore Align Data is invoked.
Readback Text:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2004

All but RF

Auto Align, All but RF, configures automatic alignment to include or exclude the RF subsystem. (Eliminating the automatic alignment of the RF subsystem prevents the input impedance from changing. The normal input impedance of 50 ohms can change to an open circuit when alignments are being used. Some devices under test do not behave acceptably under such circumstances, for example by showing instability.) When Auto Align, All but RF ON is selected, the operator is responsible for performing an Align Now, RF when RF-related alignments expire. The Auto Align, Alert mechanism will notify the operator to perform an Align Now, All when the combination of time and temperature variation is exceeded.

When Auto Align, All but RF ON is selected the Settings Panel indicates ALIGN AUTO/NO RF with a warning icon (warning icon is intended to inform the operator they are responsible for the maintaining the RF alignment of the instrument):

Key Path:	System, Alignments, Auto Align
Mode:	All
Remote Command:	:CALibration:AUTO:MODE ALL NRF :CALibration:AUTO:MODE?
Example:	:CAL:AUTO:MODE NRF
Preset:	This is unaffected by Preset but is set to ALL on a "Restore System Defaults->Align".

State Saved:	No
Readback Text:	RF or NRF
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2005

Alert

The instrument will signal an Alert when conditions exist such that you will need to perform a full alignment (for example, Align Now, All). The Alert can be configured in one of four settings; Time & Temperature, 24 hours, 7 days, or None. A confirmation is required when a selection other than Time & Temperature is chosen. This prevents accidental deactivation of alerts.

With Auto Align set to Normal, the configuration of Alert is not relevant because the instrument's software maintains the instrument in warranted operation.

Key Path:	System, Alignments, Auto Align
Mode:	All
Remote Command:	:CALibration:AUTO:ALERT TTEMperature DAY WEEK NONE :CALibration:AUTO:ALERT?
Example:	:CAL:AUTO:ALER TTEM
Notes:	The alert that alignment is needed is the setting of bit 14 in the Status Questionable Calibration register.
Preset:	This is unaffected by Preset but is set to TTEMperature on a "Restore System Defaults->Align".
State Saved:	No
Status Bits/OPC dependencies:	The alert is the Error Condition message "Align Now, All required" and bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2006

Time & Temperature

With Auto Align Alert set to Time & Temperature the instrument will signal an alert when alignments expire due to the combination of the passage of time and changes in temperature. The alert is the Error Condition message "Align Now, All required". If this choice for Alert is selected, the absence of an alert means that the analyzer alignment is sufficiently up-to-date to maintain warranted accuracy.

Key Path:	System, Alignments, Auto Align, Alert
Mode:	All
Example:	:CAL:AUTO:ALER TTEM
Readback Text:	Time & Temp


System Functions
System

Status Bits/OPC dependencies:	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2007

24 hours

With Auto Align Alert set to 24 Hours the instrument will signal an alert after a time span of 24 hours since the last successful full alignment (for example, Align Now, All or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a daily basis at a small risk of accuracy errors in excess of the warranted specifications. The alert is the Error Condition message “Align Now, All required”.

For front-panel operation , confirmation is required to transition into this setting of Alert. The confirmation dialog is:

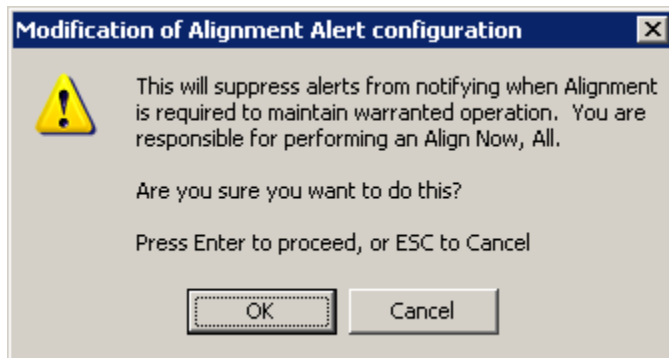


No confirmation is required when Alert is configured through a remote command.

Key Path:	System, Alignments, Auto Align, Alert
Mode:	All
Example:	:CAL:AUTO:ALER DAY
Readback Text:	24 hours
Status Bits/OPC dependencies:	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2008

7 days

With Auto Align Alert is set to 7 days the instrument will signal an alert after a time span of 168 hours since the last successful full alignment (for example, Align Now, All or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a weekly basis, at a modest risk of accuracy degradations in excess of warranted performance. The alert is the Error Condition message “Align Now, All required”.

For front panel operation, confirmation is required for the customer to transition into this setting of Alert. The confirmation dialog is:

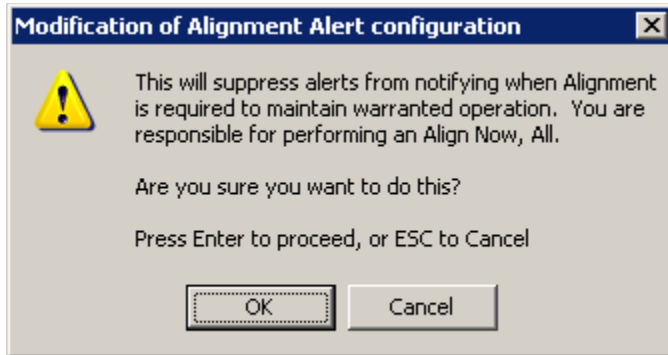


No confirmation is required when Alert is configured through a remote command.

Key Path:	System, Alignments, Auto Align, Alert
Mode:	All
Example:	:CAL:AUTO:ALER WEEK
Readback Text:	7 days
Status Bits/OPC dependencies:	Bit 14 is set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2009

None

With Auto Align Alert set to None the instrument will not signal an alert. This is provided for rare occasions where you are making a long measurement which cannot tolerate Auto Align interruptions, and must have the ability to capture a screen image at the end of the measurement without an alert posted to the display. Agilent does not recommends using this selection in any other circumstances, because of the risk of accuracy performance drifting well beyond expected levels without the operator being informed.

For front panel operation, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

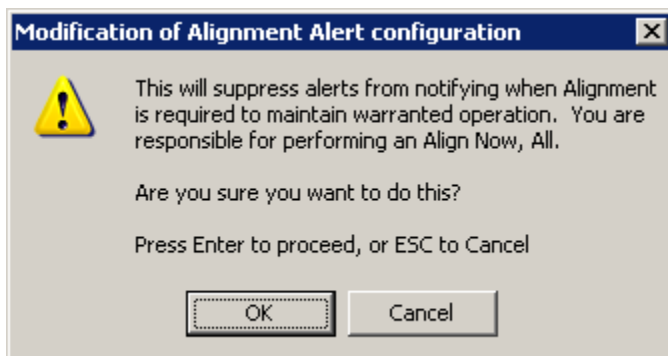

System Functions

System

No confirmation is required when Alert is configured through a remote command.

Key Path:	System, Alignments, Auto Align, Alert
Mode:	All
Example:	:CAL:AUTO:ALER NONE
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2010

Execute Expired Alignments (Remote Command Only)

Alignments can be expired in the situation where Auto Align is in the state of Partial or Off. This feature runs the alignments that have expired. This is different than performing an Align All, Now operation. Align All, Now performs an alignment of all subsystems regardless of whether they are needed or not, with Execute Expired Alignments, only the individual subsystems that have become due are aligned.

Mode:	All
Remote Command:	:CALibration:EXPIred?
Example:	:CAL:EXP?
Notes:	:CALibration:EXPIred? returns 0 if successful :CALibration:EXPIred? returns 1 if failed
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Align Now

Accesses alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

Key Path:	System, Alignments
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2011

All

Immediately executes an alignment of all subsystems. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

If an interfering user signal is present at the RF Input, the alignment is performed on all subsystems except the RF. After completion, the Error Condition message “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is generated. In addition the Error Condition message “Align Now, RF required” is generated, and bits 11 and 12 are set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration[:ALL]? or *CAL?) invokes the alignment of all subsystems and returns a success or failure value. An interfering user signal is not grounds for failure; if the alignment was able to succeed on all portions but unable to align the RF because of an interfering signal, the resultant will be the success value.

Successful completion of **Align Now, All** will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

If the Align RF subsystem succeeded in aligning (no interfering signal present), the elapsed time counter begins for Last Align Now, RF Time, and the temperature is captured for the Last Align Now, RF Temperature. In addition the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4.8 GHz interference” are cleared, the Error Condition “Align Now, RF required” is cleared, and bits 11 and 12 are cleared in the Status Questionable Calibration register

Align Now, All can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition message “Align Now, All required” is generated, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

In many cases, you might find it more convenient to change alignments to Normal, instead of executing Align Now, All. When the Auto Align process transitions to Normal, the analyzer will immediately start to update only the alignments that have expired, thus efficiently restoring the alignment process.

In models with the RF Preselector, such as the N9038A, the Align Now All alignment will immediately execute an alignment of all subsystems in the Spectrum Analyzer and partial subsystems of the RF Preselector. The additional alignments are the System Gain, Mechanical attenuator and Electronic attenuator alignments on the RF Preselector path. The purpose of these alignments is to improve the RF Preselector path amplitude variation compared to the bypass path.

Key Path:	System, Alignments, Align Now
Mode:	All
Remote Command:	:CALibration[:ALL] :CALibration[:ALL]?
Example:	:CAL

System Functions
System

Notes:	<p>:CALibration[:ALL]? returns 0 if successful</p> <p>:CALibration[:ALL]? returns 1 if failed</p> <p>:CALibration[:ALL]? is the same as *CAL?</p> <p>While Align Now, All is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bit 14 in the Status Questionable Calibration register.</p> <p>An interfering user signal is not grounds for failure of Align Now, All. However, bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required.</p> <p>An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed.</p>
Couplings:	<p>Initializes the time for the Last Align Now, All Time.</p> <p>Records the temperature for the Last Align Now, All Temperature.</p> <p>If Align RF component succeeded, initializes the time for the Last Align Now, RF Time.</p> <p>If Align RF component succeeded, records the temperature for the Last Align Now, RF Temperature.</p>
Status Bits/OPC dependencies:	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2012

Mode:	All
Remote Command:	*CAL?
Example:	*CAL?
Notes:	<p>*CAL? returns 0 if successful</p> <p>*CAL? returns 1 if failed</p> <p>:CALibration[:ALL]? is the same as *CAL?</p> <p>See additional remarks described with :CALibration[:ALL]?</p> <p>Everything about :CALibration[:ALL]? is synonymous with *CAL? including all conditions, status register bits, and couplings</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

All but RF

Immediately executes an alignment of all subsystems except the RF subsystem. The instrument will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the Restart key). This can be used to align portions of the instrument that are not impacted by an interfering user input signal.

This operation might be chosen instead of **All** if you do not want the device under test to experience a large change in input impedance, such as a temporary open circuit at the analyzer input.

The query form of the remote commands (:CALibration:NRF?) will invoke the alignment and return a success or failure value.

Successful completion of Align Now, All but RF will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. If “Align Now, All required” was in effect prior to executing the All but RF, the Error Condition message “Align Now, RF required” is generated and bit 12 in the Status Questionable Calibration register is set. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

Align Now, All but RF can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition message “Align Now, All required” is generated, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be used for an individual subsystem, but not a full new set of data for all subsystems.

In models with the RF Preselector, such as the N9038A, the “All but RF” alignment will execute an alignment of all subsystems except the RF subsystem of the Spectrum Analyzer, as well as the system gain of the RF Preselector.

Key Path:	System, Alignments, Align Now
Mode:	All
Remote Command:	:CALibration:NRF :CALibration:NRF?
Example:	:CAL:NRF
Notes:	:CALibration:NRF? returns 0 if successful :CALibration:NRF? returns 1 if failed While Align Now, All but RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bit 14 in the Status Questionable Calibration register and set bit 12 if invoked with “Align Now, All required”.
Couplings:	Initializes the time for the Last Align Now, All Time. Records the temperature for the Last Align Now, All Temperature.

System Functions
System

Status Bits/OPC dependencies:	Bits 12 or 14 may be set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2013

RF

Immediately executes an alignment of the RF subsystem. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

This operation might be desirable if the alignments had been set to not include RF alignments, or if previous RF alignments could not complete because of interference which has since been removed.

If an interfering user signal is present at the RF Input, the alignment will terminate and generate the Error Condition message “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference”, and Error Condition “Align Now, RF required”. In addition, bits 11 and 12 will be set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration:RF?) will invoke the alignment of the RF subsystem and return a success or failure value. An interfering user signal is grounds for failure.

Successful completion of Align Now, RF will begin the elapsed time counter for Last Align Now, RF Time, and capture the Last Align Now, RF Temperature.

Align Now, RF can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs, the Error Condition message “Align Now, RF required” is generated, and bit 12 is set in the Status Questionable Condition register. None of the new alignment data is used.

In models with the RF Preselector, such as the N9038A, the RF alignment will execute an alignment of the RF subsystem of the Spectrum Analyzer, as well as the RF subsystem on RF Preselector path.

Key Path:	System, Alignments, Align Now
Mode:	All
Remote Command:	:CALibration:RF :CALibration:RF?
Example:	:CAL:RF

Notes:	<p>:CALibration:RF? returns 0 if successful</p> <p>:CALibration:RF? returns 1 if failed (including interfering user signal)</p> <p>While Align Now, RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command.</p> <p>Successful completion clears the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4800 MHz interference” and the Error Conditions “Align RF failed” and “Align Now, RF required”, and clears bits 3, 11, and 12 in the Status Questionable Calibration register.</p> <p>A failure encountered during alignment will generate the Error Condition message “Align RF failed” and set bit 3 in the Status Questionable Calibration register.</p> <p>An interfering user signal will result in bits 11 and 12 to be set in the Status Questionable Calibration register to indicate Align Now, RF is required.</p> <p>An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed.</p>
Couplings:	<p>Initializes the time for the Last Align Now, RF Time.</p> <p>Records the temperature for the Last Align Now, RF Temperature.</p>
Status Bits/OPC dependencies:	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2014

External Mixer

Immediately executes an alignment of the External Mixer that is plugged into the USB port. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the Restart key). As this alignment calibrates the LO power to the mixer, this is considered an LO alignment; and failure is classified as an LO alignment failure.

The query form of the remote commands (:CALibration:EMIXer?) will invoke the alignment of the External Mixer and return a success or failure value.

Key Path:	System, Alignments, Align Now
Mode:	All
Remote Command:	:CALibration:EMIXer :CALibration:EMIXer?
Example:	:CAL:EMIX

System Functions
System

Notes:	<p>:CAL:EMIX? returns 0 if successful</p> <p>:CAL:EMIX? returns 1 if failed</p> <p>While Align Now, Ext Mix is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>A failure encountered during alignment will generate the Error Condition message “Align LO failed” and set bit 5 in the Status Questionable Calibration register. Successful completion will clear the “Align LO failed” message and bit 5 in the Status Questionable Calibration register.</p>
Dependencies:	This key does not appear unless option EXM is present and is grayed-out unless a USB mixer is plugged in to the USB.
Status Bits/OPC dependencies:	Bit3 may be set in the Status Questionable Calibration Extended Failure register.
Initial S/W Revision:	A.08.00
Help Map ID:	3672

Source

This menu is only available in the EXT (E6607A).

Accesses source alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

Immediately executes an IQ alignment of the complete source. The instrument stops any sequence of the source, performs the alignment, then restarts the sequence from the beginning.

There is no alert available for the source alignment. The operators have the responsibility to check temperature shift since last Align Now, Source to determine if the source alignment need to be executed.

Key Path:	System, Alignments, Align Now
Mode:	All
Remote Command:	:CALibration:INTernal:SOURce[:ALL] :CALibration:INTernal:SOURce[:ALL]?
Example:	:CAL:INT:SOUR
Notes:	<p>Only available in: XOBT</p> <p>:CAL:SOUR? Initiates an Alignment and returns 0 if successful</p> <p>:CAL:SOUR? Initiates an Alignment and returns 1 if failed</p>
Couplings:	<p>Initializes the time for the Last Align Source Now, All Time.</p> <p>Records the temperature for the Last Align Source Now, All Temperature.</p>


Status Bits/OPC dependencies:	Bits TODO may be set in the Status Questionable Calibration register
Initial S/W Revision:	A.05.00
Help Map ID:	3652

Show Alignment Statistics

Shows alignment information you can use to ensure that the instrument is operating in a specific manner. The Show Alignment Statistics screen is where you can view time and temperature information.

Values which are displayed are only updated when the Show Alignment Statistics screen is invoked, they are not updated while the Show Alignment Statistics screen is being displayed. The remote commands that access this information obtain current values.

An example of the Show Alignment Statistics screen would be similar to:

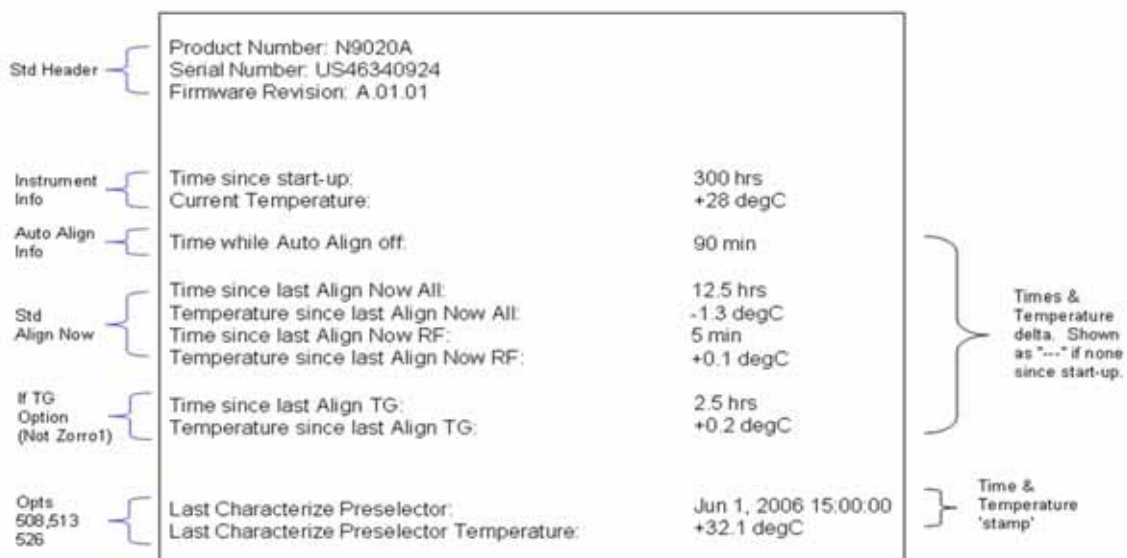

A successful Align Now, RF will set the Last Align RF temperature to the current temperature, and reset the Last Align RF time. A successful Align Now, All or Align Now, All but RF will set the Last Align Now All temperature to the current temperature, and reset the Last Align Now All time. A successful Align Now, All will also reset the Last Align RF items if the RF portion of the Align Now succeeded.

Key Path:	System, Alignments
Mode:	All
Notes:	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2018

System Functions
System

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:SYSTem:PON:TIME?
Example:	:SYST:PON:TIME?
Notes:	Value is the time since the most recent start-up in seconds.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:CURRent?
Example:	:CAL:TEMP:CURR?
Notes:	Value is in degrees Centigrade. Value is invalid if using default alignment data (Align Now, All required)
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:LALL?
Example:	:CAL:TIME:LALL?
Notes:	Value is the elapsed time, in seconds, since the last successful Align Now, All or Align Now, All but RF was executed.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:LALL?
Example:	:CAL:TEMP:LALL?

Notes:	Value is in degrees Centigrade at which the last successful Align Now, All or Align Now, All but RF was executed.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:LRF?
Example:	:CAL:TIME:LRF?
Notes:	Value is the elapsed time, in seconds, since the last successful Align Now, RF was executed, either individually or as a component of Align Now, All.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:LRF?
Example:	:CAL:TEMP:LRF?
Notes:	Value is in degrees Centigrade at which the last successful Align Now, RF was executed, either individually or as a component of Align Now, All.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:SOURce:LALL?
Example:	:CAL:TIME:SOUR:LALL?
Notes:	Value is the date and time of the last successful Align Now, Source was performed on the instrument.
State Saved:	No
Initial S/W Revision:	A.05.00

System Functions
System

Help Map ID:	0
--------------	---

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:SOURce: LALL?
Example:	:CAL:TEMP:SOUR:LALL?
Notes:	Value is in degrees Centigrade at which the last successful Align Now, Source was performed on the instrument.
State Saved:	No
Initial S/W Revision:	A.05.00

Help Map ID:	0
--------------	---

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:LPreselector?
Example:	:CAL:TIME:LPR?
Notes:	Value is the date and time the last successful Characterize Preselector was executed. The date is separated from the time by a space character. Returns "" if no Characterize Preselector has ever been performed on the instrument.
Dependencies:	In models that do not include preselectors, this command is not enabled and any attempt to set or query will yield an error.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00

Help Map ID:	0
--------------	---

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:LPreselector?
Example:	:CAL:TEMP:LPR?
Notes:	Value is in degrees Centigrade at which the last successful Characterize Preselector was executed.
Dependencies:	In models that do not include preselectors, this command is not enabled and any attempt to set or query will yield an error.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00

Help Map ID: 0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:AUTO:TIME:OFF?
Example:	:CAL:AUTO:TIME:OFF?
Notes:	Value is the elapsed time, in seconds, since Auto Align has been set to Off or Off with Alert. The value is 0 if Auto Align is ALL or NORF.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:RFPSselector:LCONducted?
Example:	:CAL:TIME:RFPS:LCON?
Notes:	Values are the date and time the last successful Align Now, 20 Hz – 30 MHz was executed. The date is separated from the time by a semi-colon character.
State Saved:	No
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:RFPSselector:LCONducted?
Example:	:CAL:TEMP:RFPS:LCON?
Notes:	Value is in degrees Centigrade at which the last successful Align Now, 20 Hz – 30 MHz was executed.
State Saved:	No
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TIME:RFPSselector:LRADiated?
Example:	:CAL:TIME:RFPS:LRAD?

System Functions
System

Notes:	Value is the date and time the last successful Align Now, 30 MHz – 3.6 GHz was executed. The date is separated from the time by a semi-colon character.
State Saved:	No
Help Map ID:	0


Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:TEMPerature:RFPSelector:LRADiated?
Example:	:CAL:TEMP:RFPS:LRAD?
Notes:	Value is in degrees Centigrade at which the last successful Align Now, 30 MHz – 3.6 GHz was executed.
State Saved:	No
Help Map ID:	0

Key Path:	Visual annotation in the Show Alignment Statistics screen
Mode:	All
Remote Command:	:CALibration:RFPSelector:SCHeduler:TIME:NEXT? This query returns data using the following format “YYYY/MM/DD; HH:MM:SS”
Example:	:CAL:RFPS:SCH:TIME:NEXT?
Notes:	<p>The next run time will be updated based on the start date/time and recurrence set by the users.</p> <p>“date” is representation of the date the task will run in the form of “YYYY/MM/DD” where:</p> <p>YYYY is the four digit representation of year. (for example, 2009)</p> <p>MM is the two digit representation of month. (for example, 01 to 12)</p> <p>DD is the two digit representation of the day. (for example, 01 to 28, 29, 30 or 31 depending on the month and year)</p> <p>“time” is a representation of the time of day the task will run in the form of “HH:MM:SS” where:</p> <p>HH is the two digit representation of the hour in 24 hour format</p> <p>MM is the two digit representation of minute</p> <p>SS is the two digit representation of seconds</p> <p>For model N9038A only.</p>
State Saved:	No
Help Map ID:	0

Restore Align Defaults

Initializes the alignment user interface settings, not alignment data, to the factory default values. Align Now, All must be executed if the value of the Timebase DAC results in a change.

For front panel operation, you are prompted to confirm action before setting the alignment parameters to factory defaults:

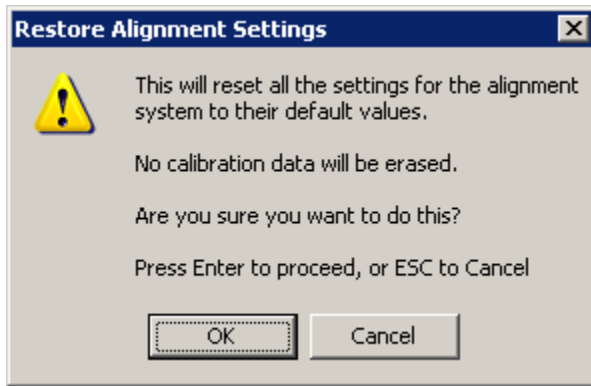

The parameters affected are:

Parameter	Setting
Timebase DAC	Calibrated
Timebase DAC setting	Calibrated value
Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)
Auto Align All but RF	Off
Auto Align Alert	Time & Temperature

Key Path:	System, Alignments
Mode:	All
Example:	:SYST:DEF ALIG
Notes:	Alignment processing that results as the transition to Auto Alignment Normal will be executed sequentially; thus *OPC? or *WAI will wait until the alignment processing is complete.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2022

Backup or Restore Align Data...

Opens the utility for backing-up or restoring the alignment data.

Alignment data for the instrument resides on the hard drive in a database. Agilent uses high quality hard drives; however it is highly recommended the alignment data be backed-up to storage outside of the

System Functions

System

instrument. Additionally, for customers who use multiple CPU Assemblies or multiple disk drives, the alignment that pertains to the instrument must be transferred to the resident hard drive after a CPU or hard drive is replaced. This utility facilitates backing-up and restoring the alignment data.

NOTE This utility allows the operator to navigate to any location of the Windows file system. It is intended that the operator use a USB memory device or Mapped Network Drive to back up the alignment data to storage outside of the instrument.



Key Path:	System, Alignments
Initial S/W Revision:	A.02.00
Help Map ID:	3624

Key Path:	System, Alignments
Mode:	All
Remote Command:	:CALibration:DATA:DEFault
Example:	:CAL:DATA:DEF
Couplings:	Sets Auto Align to Off. Sets bit 14 in the Status Questionable Calibration register. The Error Condition message "Align Now, All required" is generated.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Alignment Data Wizard

The Backup or Restore Alignment Data wizard guides you through the operation of backing-up or restoring the alignment data.

The following dialogue boxes operates without a mouse or external keyboard when you use the default file names.

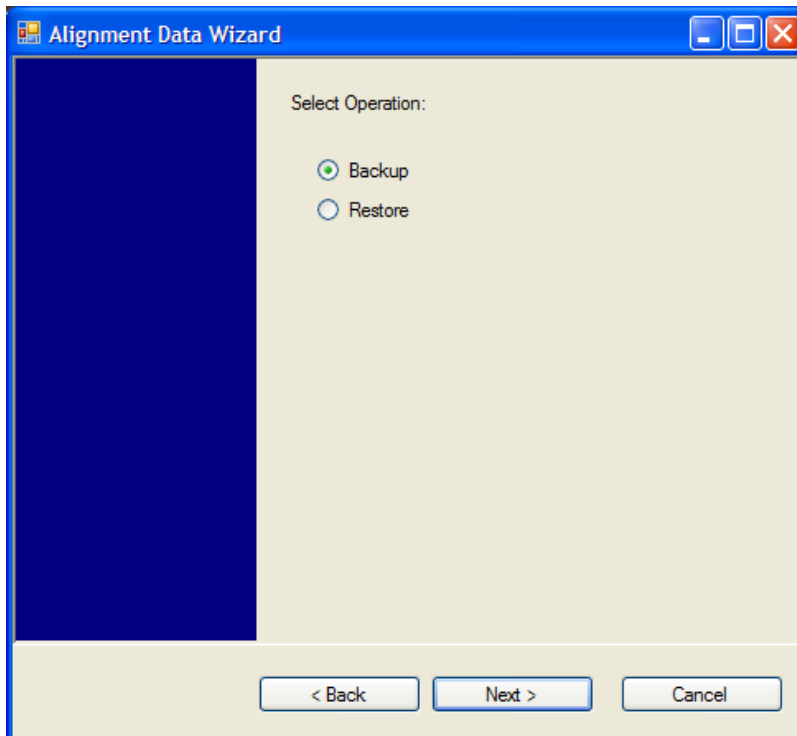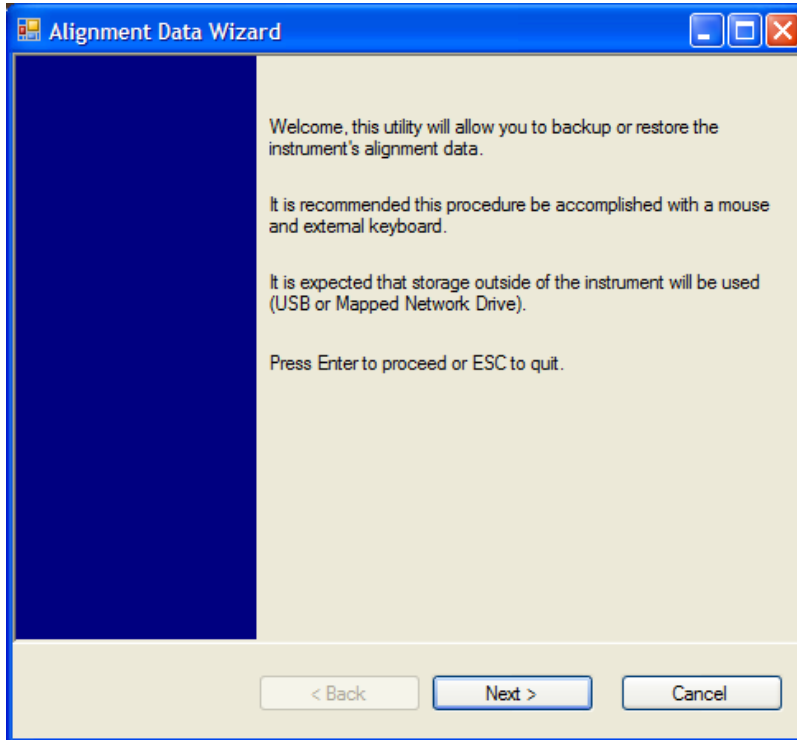


The backup screen indicates the approximate amount of space required to contain the backup file.

The default file name will be AlignDataBackup_<model number>_<serial number>_<date in YYYYMMDDHHMMSS>.bak.



System Functions

System

For the N9030A the default backup location will be the internal F: drive which is a solid-state memory device located internally on the instrument.

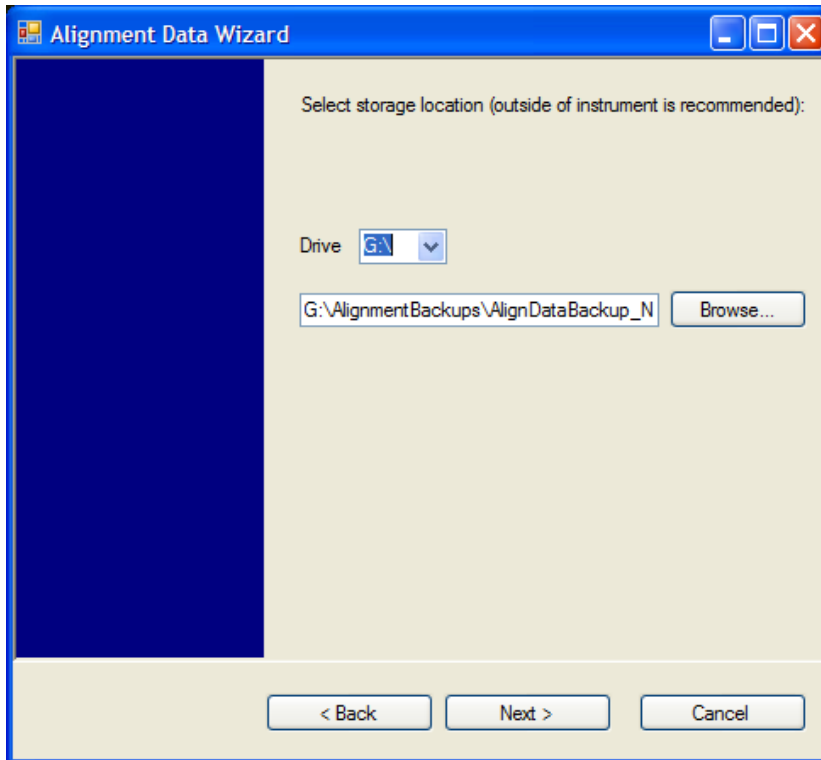

Changing the drive letter will also modify the path displayed in the box below. When this step is first loaded, the drive drop-down menu is populated with connected drives, which provide the user with write access. If there are many unreachable network drives connected to the instrument, this step can take a few seconds. If a USB drive is present, it will be selected by default. The path defaults to the AlignmentBackups folder, and a filename is automatically created in the form of AlignDataBackup_<model>_<serial number>_<date><time>. When the "Next >" button is pressed, you will be prompted to create a new folder if the chosen path does not yet exist.

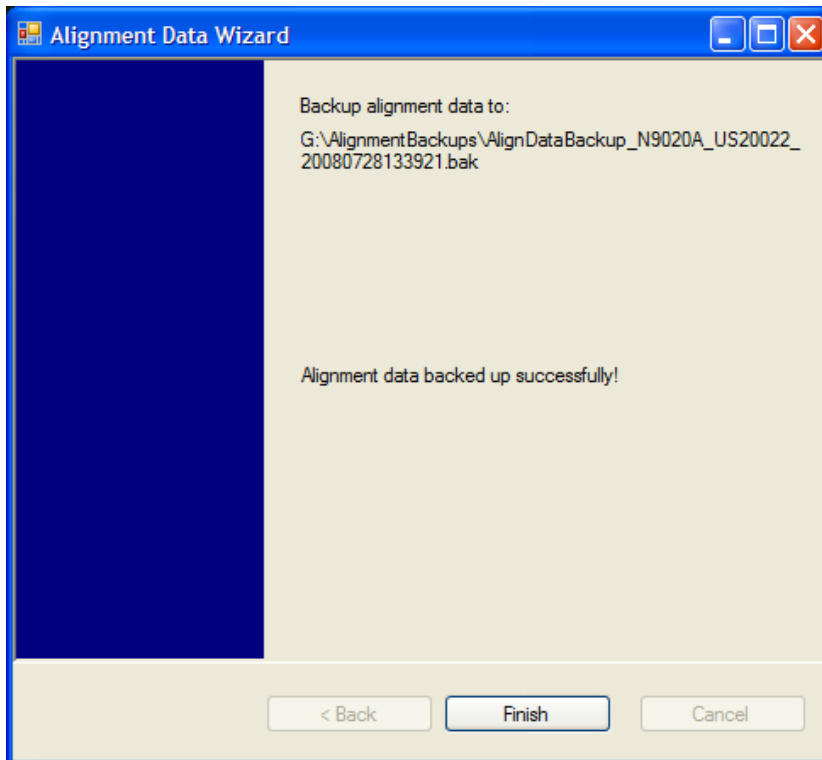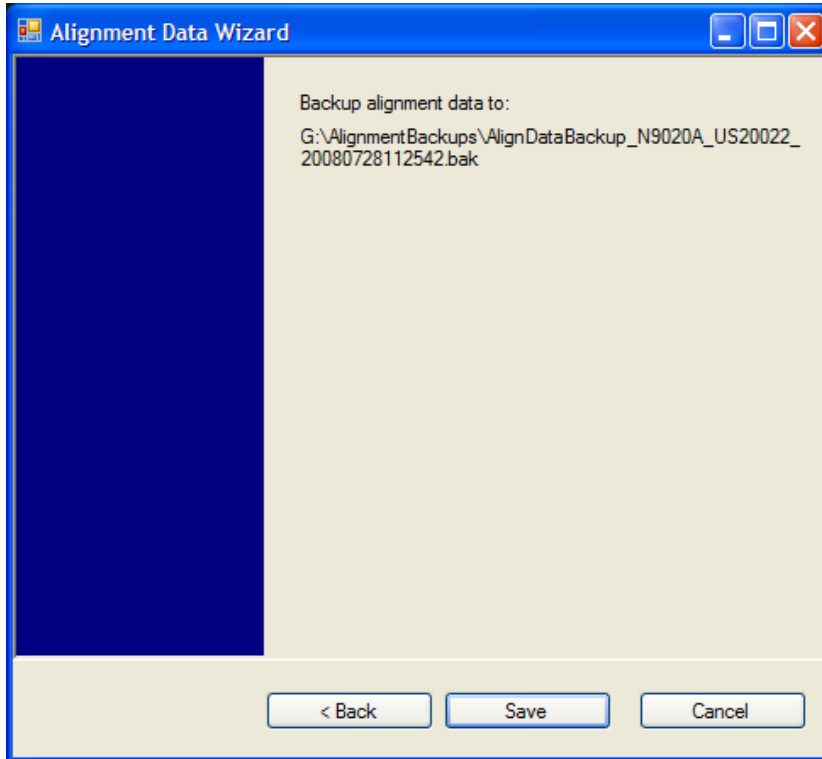



The restore operation checks the validity of the restore file using the database's built-in file validation. If the restore file is corrupt, the existing alignment data will remain in use.

If the serial number information in the backup file being restored is different from that of the instrument,



System Functions

System

the following message appears (the serial number shown are examples):

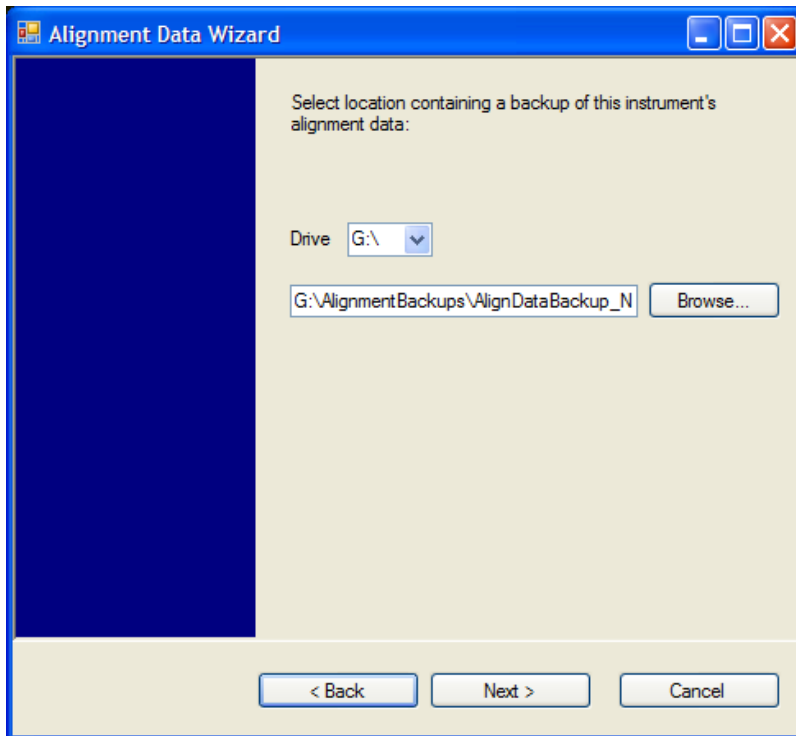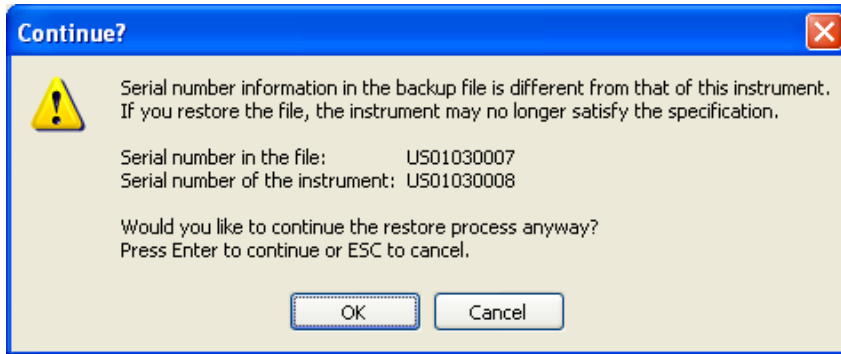

Changing the drive letter also modifies the path displayed in the box below. When this step is first loaded, the drive drop-down menu is populated with connected drives, which provide you with read access. The path defaults to the AlignBackups folder. The most recent *.bak file in the folder will also be selected by default.

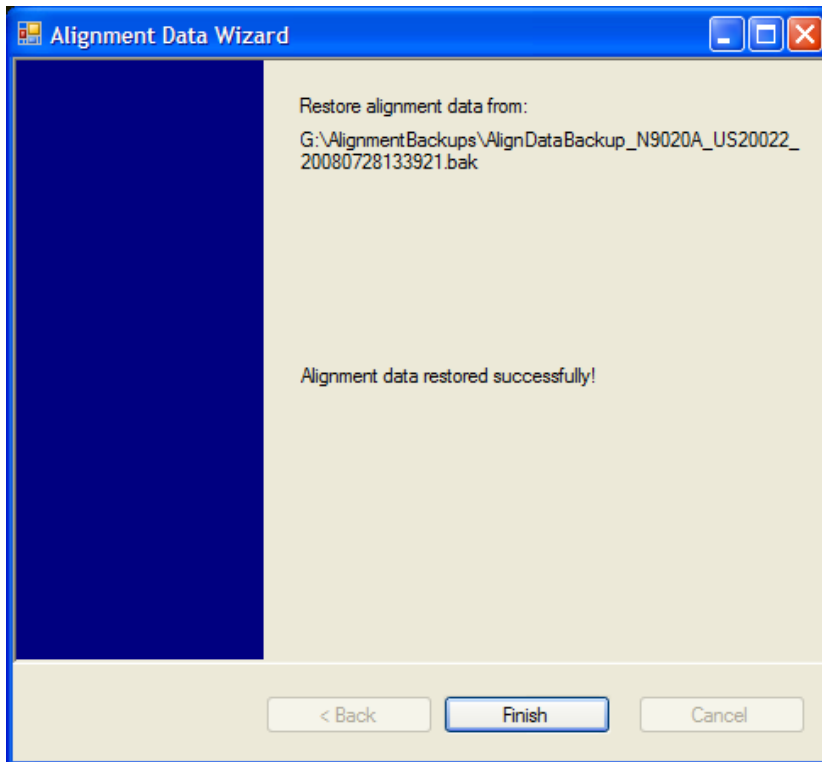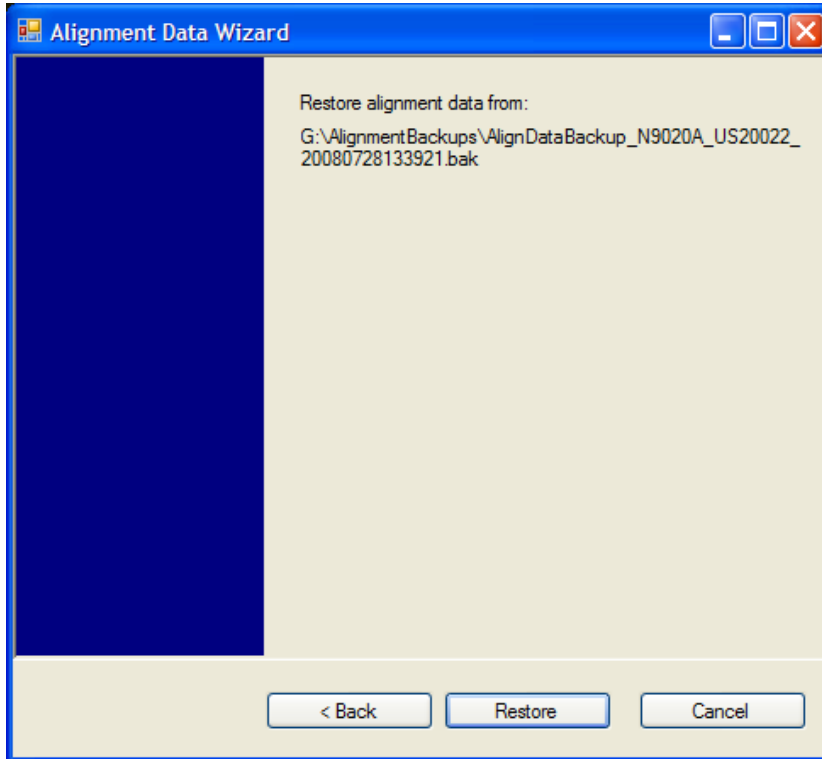

Perform Backup (Remote Command Only)

Invokes an alignment data backup operation to the provided Folder.

NOTE It is recommended that the Folder provided is outside of the instrument (USB or Mapped Network Drive).

Remote Command:	:CALibration:DATA:BACKup <filename>
Example:	:CAL:DATA:BACK "F:\AlignDataBackup_N9020A_US00000001_2008140100.bak"
Initial S/W Revision:	A.02.00
Help Map ID:	0

Perform Restore (Remote Command Only)

Invokes an alignment data restore operation from the provided filename.

Remote Command:	:CALibration:DATA:RESTore <filename>
Example:	:CAL:DATA:REST "F:\ AlignDataBackup_N9020A_US00000001_2008140100.bak "
Initial S/W Revision:	A.02.00
Help Map ID:	0

Advanced

Accesses alignment processes that are immediate action operations that perform operations that run until complete. Advanced alignments are performed on an irregular basis, or require additional operator interaction

Key Path:	System, Alignments
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2015

Characterize Preselector

The Preselector tuning curve drifts over temperature and time. Recognize that the Amplitude, Presel Center function adjusts the preselector for accurate amplitude measurements at an individual frequency. Characterize Preselector improves the amplitude accuracy by ensuring the Preselector is approximately centered at all frequencies without the use of the Amplitude, Presel Center function. Characterize Preselector can be useful in situations where absolute amplitude accuracy is not of utmost importance, and the throughput savings or convenience of not performing a Presel Center is desired. Presel Center is required prior to any measurement for best (and warranted) amplitude accuracy.

Agilent recommends that the Characterize Preselector operation be performed yearly as part of any calibration, but performing this operation every three months can be worthwhile.

Characterize Preselector immediately executes a characterization of the Preselector, which is a

YIG-tuned filter (YTF). The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the Restart key).

The query form of the remote commands (:CALibration:YTF?) will invoke the alignment of the YTF subsystem and return a success or failure value.

A failure encountered during alignment will generate the Error Condition message “Characterize Preselector failure” and set bit 3 in the STATUS:QUESTIONable:CALibration:EXTended:FAILure status register. Successful completion of Characterize Preselector will clear this Condition. It will also begin the elapsed time counter for Last Characterize Preselector Time, and capture the Last Characterize Preselector Temperature.

The last Characterize Preselector Time and Temperature survives across the power cycle as this operation is performed infrequently.


NOTE The Characterize Preselector function can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORT SCPI command. None of the new characterization data is then used. However, since the old characterization data is purged at the beginning of the characterization, you now have an uncharacterized preselector. You should re-execute this function and allow it to finish before making any further preselected measurements.

Key Path:	System, Alignments, Advanced
Mode:	All
Remote Command:	:CALibration:YTF :CALibration:YTF?
Example:	:CAL:YTF
Notes:	:CALibration:YTF? returns 0 if successful :CALibration:YTF? returns 1 if failed (including interfering user signal) While Advanced, Characterize Preselector is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command. Successful completion will clear bit 9 in the Status Questionable Calibration register. A failure encountered during alignment will generate the Error Condition message “Characterize Preselector failed” and set bit 9 in the Status Questionable Calibration register. For Options that support frequencies > 3.6 GHz only.

Dependencies:	This key does not appear in models that do not contain preselectors. In these models the SCPI command is accepted without error but no action is taken.
Couplings:	Initializes the time for the Last Characterize Preselector Time. Records the temperature for the Last Characterize Preselector Temperature.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2016

Characterize Multiport Adapter Preamp

A Multiport Adapter Preamp Characterization should be made when MPA and EXT are first paired, a message window is popped up as below to inform the user to take this action:

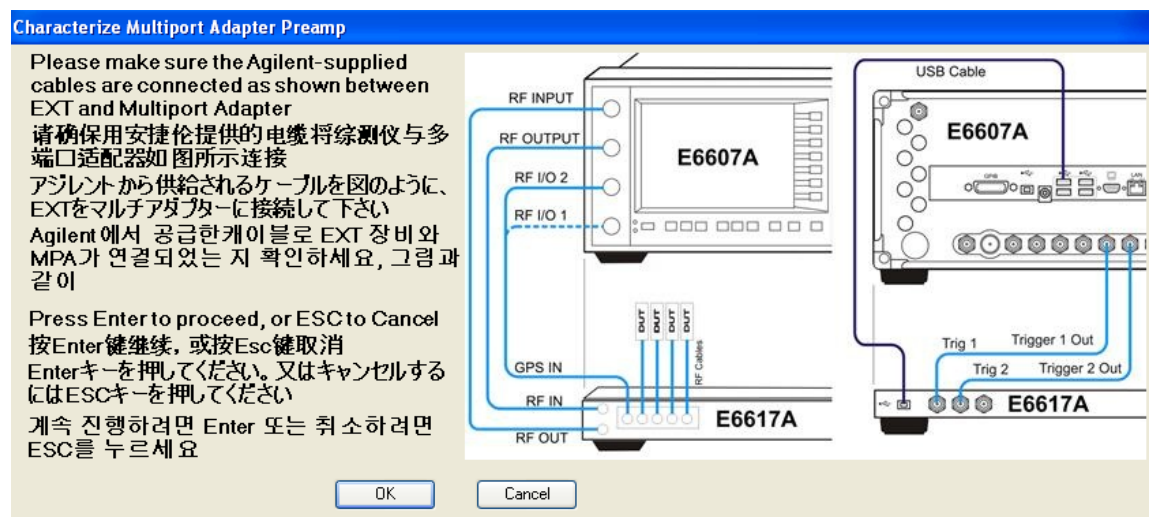

Correspondingly, bit 8 of the STATUS:QUESTIONable:CALibration:EXTended:NEEDED register (error 80) will be set for the “MPA Align required” message. Successful completion of Characterize Multiport Adapter Preamp will clear this Condition.

Users are expected to execute a characterization of the Preamp of Multiport Adapter when it is plugged into the USB port for the first time. The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

The query form of the remote command :CALibration:MPADapter:GAIN? will invoke the characterization of the Preamp of Multiport Adapter and return a success or failure value.

A failure encountered during characterization will generate the Error Condition message “MPA Align failed” and set bit 8 (error 83) in the STATUS:QUESTIONable:CALibration:EXTended:FAILure status register. Successful completion of Characterize Multiport Adapter Preamp will clear this Condition.

NOTE:

NOTE **Characterize Multiport Adapter Preamp** can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the

:ABORt SCPI command.

Key Path:	System, Alignments, Advanced
Mode:	All
Remote Command:	:CALibration:MPADapter:GAIN :CALibration:MPADapter:GAIN?
Example:	:CAL: MPAD:GAIN
Notes:	<p>:CALibration:MPADapter:GAIN? returns 0 if successful</p> <p>:CALibration:MPADapter:GAIN? returns 1 if failed</p> <p>While System, Alignments, Advanced, Characterize Multiport Adapter Preamp is performing the characterization, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential, it must be completed before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bit 8 in the Status Questionable Calibration Extended Failure register.</p> <p>A failure encountered during alignment will generate the Error Condition message “MPAdapter Preamp Charact Failure” and set bit 8 in the Status Questionable Calibration Extended Failure register.</p>
Dependencies:	This key does not appear unless a multiport adapter is plugged in to the USB. Grayout error: -221.1400; Multiport Adapter Not Available
Status Bits/OPC dependencies:	Bit8 may be set in the Status Questionable Calibration Extended Failure register.
Initial S/W Revision:	A.10.00
Help Map ID:	50010

Timebase DAC

Allows control of the internal 10 MHz reference oscillator timebase. This may be used to adjust for minor frequency alignment between the signal and the internal frequency reference. This adjustment has no effect if the instrument is operating with an External Frequency Reference.

If the value of the Timebase DAC changes (by switching to Calibrated from User with User set to a different value, or in User with a new value entered) an alignment may be necessary. The alignment system will take appropriate action; which will either invoke an alignment or cause an Alert.

Key Path:	System, Alignments
Mode:	All

System Functions
System

Remote Command:	:CALibration:FREQuency:REFerence:MODE CALibrated USER :CALibration:FREQuency:REFerence:MODE?
Example:	:CAL:FREQ:REF:MODE CAL
Notes:	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due. If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due.
Preset:	This is unaffected by Preset but is set to CALibrated on a "Restore System Defaults->Align".
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2019

Calibrated

Sets the Timebase DAC to the value established during factory or field calibration. The value displayed on the menu key is the calibrated value.

Key Path:	System, Alignments, Timebase DAC
Mode:	All
Example:	:CAL:FREQ:REF:MODE CAL
Readback Text:	[xxx] < where xxx is the calibrated value
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2020

User

Allows setting the Timebase DAC to a value other than the value established during the factory or field calibration. The value displayed on the menu key is the calibrated value.

Key Path:	System, Alignments, Timebase DAC
Mode:	All
Example:	:CAL:FREQ:REF:MODE USER
Readback Text:	xxx < where xxx is the Timebase DAC setting
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2021

Key Path:	System, Alignments, Timebase DAC
Mode:	All

Remote Command:	:CALibration:FREQuency:REFErence:FINE <integer> :CALibration:FREQuency:REFErence:FINE?
Example:	:CAL:FREQ:REF:FINE 8191
Notes:	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due.
Couplings:	Setting :CAL:FREQ:REF:FINE sets :CAL:FREQ:REF:MODE USER
Preset:	This is unaffected by Preset but is set to the factory setting on a “Restore System Defaults->Align”.
State Saved:	No
Min:	0
Max:	16383
Backwards Compatibility SCPI:	:CALibration:FREQuency:REFErence:COARse ESA hardware contained two DAC controls for the Timebase. In X-Series the command :CALibration:FREQuency:REFErence:FINE is the method for adjusting the timebase. The :COARse command is provided as an alias to :FINE.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	:CALibration:FREQuency:REFErence:COARse <integer> :CALibration:FREQuency:REFErence:COARse?
Example:	:CAL:FREQ:REF:COAR 8191
Notes:	This is an alias for CAL:FREQ:REF:FINE any change to COARse is reflected in FINE and vice-versa. See CAL:FREQ:REF:FINE for description of functionality.
Couplings:	Setting :CAL:FREQ:REF:COAR sets :CAL:FREQ:REF:MODE USER
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

RF Preselector

This menu and all of its submenus are only available in models with the RF Preselector, such as the N9038A.

See [“Align Now, 20 Hz to 30 MHz” on page 252](#)

See [“Align Now, 30 MHz to 3.6 GHz” on page 253](#)

See [“Align Now, 20 Hz to 3.6 GHz” on page 255](#)

See “Alert” on page 256

Key Path:	System, Alignments
Initial S/W Revision:	Prior to A.08..00
Help Map ID:	3694

Align Now, 20 Hz to 30 MHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the Restart key).

The query form of the remote commands (:CALibration:RFPSelector:CONDUCTed?) will invoke the alignment of the RF Preselector on Conducted Band and return a success or failure value. Successful completion will clear the “Align 20 Hz to 30 MHz required” Error Condition, and clear the bit 1 in the Status Questionable Calibration Extended Needed register. The elapsed time counter will begin for Last Align Now, Conducted Time, and the temperature is captured for the Last Align Now, Conducted Temperature. The alignment can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORT SCPI command. When this occurs, the Error Condition “Align 20 Hz to 30 MHz required” is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The “Align 20 Hz to 30 MHz required” Error Condition will appear when this alignment has expired. User is now responsible to perform the Align Now, 20 Hz to 30 MHz in order to keep the receiver in warranted operation. This alignment can only be performed by user as it is not part of the Auto Align process.

Key Path:	System, Alignments, RF Preselector, Align Now
Mode:	All
Remote Command:	:CALibration:RFPSelector:CONDUCTed :CALibration:RFPSelector:CONDUCTed?
Example:	:CAL:RFPS:COND

Notes:	<p>:CALibration:RFPSelector:CONDucted? Return 0 if successful</p> <p>:CALibration:RFPSelector:CONDucted? Return 1 if failed</p> <p>When Align 20 Hz to 30 MHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bit 1 in the Status Questionable Calibration Extended Needed register and bit 0 in Status Questionable Calibration Extended Failure register.</p> <p>A failure encountered during alignment will set the Error Condition “20 Hz to 30 MHz Alignment Failure” and set both bit 1 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register.</p> <p>For model N9038A only.</p>
Dependencies:	This key does not appear in other than N9038A models, setting or querying the SCPI will generate an error.
Couplings:	<p>Initializes the time for the Last Align Conducted Now, Conducted Time.</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature.</p>
Status Bits/OPC Dependencies:	<p>Bit 8 or 9 may be set in the Status Questionable Calibration register.</p> <p>Bit 1 may be set in the Status Questionable Calibration Extended Needed register.</p> <p>Bit 0 may be set in the Status Questionable Calibration Extended Failure register.</p>
Initial S/W Revision:	A.08.00
Help Map ID:	3673

Align Now, 30 MHz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the Restart key).

The query form of the remote commands (:CALibration:RFPSelector:RADiated?) will invoke the alignment of the RF Preselector on Radiated Band and return a success or failure value. Successful completion will clear the “Align 30 MHz to 3.6 GHz required” Error Condition, and clear the bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter will begin for Last Align Now, Radiated Time, and the temperature is captured for the Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs, the Error Condition “Align 30 MHz to 3.6 GHz required” is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

System Functions
System

The “Align 30 MHz to 3.6 GHz required” Error Condition will appear when this alignment has expired. User is now responsible to perform the Align Now, 30 MHz to 3.6 GHz in order to keep the receiver in warranted operation. This alignment can only be performed by user as it is not part of the Auto Align process.

Key Path:	System, Alignments, RF Preselector, Align Now
Mode:	All
Remote Command:	:CALibration:RFPreselector:RADiated :CALibration:RFPreselector:RADiated?
Example:	:CAL:RFPS:RAD
Notes:	:CALibration:RFPreselector:RADiated? Return 0 if successful :CALibration:RFPreselector:RADiated? Return 1 if failed When Align 30 MHz to 3.6 GHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORT command. Successful completion will clear bit 2 in the Status Questionable Calibration Extended Needed register and bit 1 in Status Questionable Calibration Extended Failure register. A failure encountered during alignment will set the Error Condition “30 MHz to 3.6 GHz Alignment Failure” and set both bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register. For model N9038A only.
Dependencies:	This key does not appear in other than N9038A models, setting or querying the SCPI will generate an error.
Couplings:	Initializes the time for the Last Align Radiated Now, Radiated Time. Records the temperature for the Last Align Radiated Now, Radiated Temperature.
Status Bits/OPC Dependencies:	Bit 8 or 9 may be set in the Status Questionable Calibration register. Bit 2 may be set in the Status Questionable Calibration Extended Needed register. Bit 1 may be set in the Status Questionable Calibration Extended Failure register.
Initial S/W Revision:	A.08.00
Help Map ID:	3674

Align Now, 20 Hz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the Restart key).

The query form of the remote commands (:CALibration:RFPSelector:FULL?) will invoke the alignment of the RF Preselector on both Conducted and Radiated Band and return a success or failure value. Successful completion will clear the “Align 20 Hz to 3.6 GHz required” Error Condition, and clear the bit 1 and bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter will begin for Last Align Now, Conducted Time and Last Align Now Radiated Time and the temperature is captured for Last Align Now, Conducted Temperature and Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs, the Error Condition “Align 20 Hz to 3.6 GHz required” is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The “Align 20 Hz to 3.6 GHz required” Error Condition will appear when this alignment has expired. User is now responsible to perform the Align Now, 20 Hz to 3.6 GHz in order to keep the receiver in warranted operation. This alignment can only be performed by user as it is not part of the Auto Align process.

Key Path:	System, Alignments, RF Preselector, Align Now
Mode:	All
Remote Command:	:CALibration:RFPSelector:FULL :CALibration:RFPSelector:FULL?
Example:	:CAL:RFPS:FULL
Notes:	:CALibration:RFPSelector:FULL? Return 0 if successful :CALibration:RFPSelector:FULL? Return 1 if failed When Align 20 Hz to 3.6 GHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bit 1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 0, bit 1 in Status Questionable Calibration Extended Failure register. A failure encountered during alignment will set the Error Condition “20 Hz to 3.6 GHz Alignment Failure” and set bit1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register. For model N9038A only.
Dependencies:	This key does not appear in other than N9038A models, setting or querying the SCPI will generate an error.

System Functions
System

Couplings:	Initializes the time for the Last Align Conducted Now, Conducted Time. Initializes the time for the Last Align Radiated Now, Radiated Time. Records the temperature for the Last Align Conducted Now, Conducted Temperature. Records the temperature for the Last Align Radiated Now, Radiated Temperature.
Status Bits/OPC Dependencies:	Bit 8 or 9 may be set in the Status Questionable Calibration register. Bit 1 and 2 may be set in the Status Questionable Calibration Extended Needed register. Bit 0 and 1 may be set in the Status Questionable Calibration Extended Failure register.
Initial S/W Revision:	A.08.00
Help Map ID:	3675

Alert

Setting Alert to ON/OFF will enable/disable the display of RF Preselector alignment required message on the status line. The instrument will power up with Alert On mode.

Key Path:	System, Alignments, RF Preselector
Mode:	All
Remote Command:	:CALibration:RFPSelector:ALERT ON OFF 0 1 :CALibration:RFPSelector:ALERT?
Example:	:CAL:RFPS:ALER OFF
Notes:	For model N9038A only. Error Condition will be generated when the alert is On and any of the RF Preselector alignments has expired.
Preset:	This is unaffected by Preset, but is set to ON on a “Restore System Defaults->Align”.
State Saved:	No
Initial S/W Revision:	A.08.00
Help Map ID:	3676

Schedule Setup

Enables you to schedule a task to run automatically at the background based on the recurrence and time set in the scheduler. Make sure that the Instrument’s local time is accurate as the Scheduler relies on this information to execute the task.

Key Path:	System, Alignments, RF Preselector
-----------	---

Initial S/W Revision:	A.08.00
Help Map ID:	3677

Task

There are 3 task that can be selected for the scheduler to run.

Task 1 is the 20 Hz to 30 MHz alignment

Task 2 is the 30 MHz to 3.6 GHz alignment

Task 3 is the 20 Hz to 3.6 GHz alignment.

Key Path:	System, Alignments, RF Preselector, Schedule Setup
Mode:	All
Remote Command:	:CALibration:RFPSselector:SCHeduler:TASK T1 T2 T3 :CALibration:RFPSselector:SCHeduler:TASK?
Example:	:CAL:RFPS:SCH:TASK T1
Notes:	Changing the task will not reset the Scheduler time and the alignment is based on the current scheduled configuration to occur. For model N9038A only.
Preset:	This is unaffected by Preset but is set to T3 on a "Restore System Defaults->Align".
State Saved:	No
Range:	Task 1 Task 2 Task 3
Initial S/W Revision:	A.08.00
Help Map ID:	3678

Date/Time

Enables you to configure the scheduler to run a task starting from this date and time. The date and time rely on the instrument's local time to execute a scheduled task. The date is based on the format "YYYY/MM/DD" and the time is based on a 24 hour clock.

Key Path:	System, Alignments, RF Preselector, Schedule Setup
Mode:	All
Remote Command:	:CALibration:RFPSselector:SCHeduler:TIME:START "date", "time" :CALibration:RFPSselector:SCHeduler:TIME:START? This query returns data using the following format "YYYY/MM/DD; HH:MM:SS"
Example:	:CAL:RFPS:SCH:TIME:STAR "2009/8/20","12:00:00"

System Functions
System

Notes:	<p>“date” is representation of the date the task will run in the form of “YYYY/MM/DD” where:</p> <p>YYYY is the four digit representation of year. (for example, 2009)</p> <p>MM is the two digit representation of month. (for example, 01 to 12)</p> <p>DD is the two digit representation of the day. (for example, 01 to 28, 29, 30 or 31 depending on the month and year)</p> <p>“time” is a representation of the time of day the task will run in the form of “HH:MM:SS” where:</p> <p>HH is the two digit representation of the hour in 24 hour format</p> <p>MM is the two digit representation of minute</p> <p>SS is the two digit representation of seconds</p> <p>For model N9038A only.</p>
Preset:	This is unaffected by Preset but is set to Current date and 00:00:00 on a “Restore System Defaults->Align”.
State Saved:	No
Initial S/W Revision:	A.08.00
Help Map ID:	3679

Date

Enables you to configure the date of the scheduled task. The SCPI command to configure the date and time parameters of the scheduler is the same; however, they each have their own front-panel control.

Key Path:	System, Alignments, RF Preselector, Schedule Setup, Date/Time
Notes:	<p>See “Date/Time ” on page 257.</p> <p>For model N9038A only.</p>
Preset:	This is unaffected by Preset but is set to Current date and 00:00:00 on a “Restore System Defaults->Align”.
State Saved:	No
Initial S/W Revision:	A.08.00
Help Map ID:	3680

Time

Enables you to configure the time of the scheduled task. The SCPI command to configure the date and time parameters of the scheduler is the same; however, they each have their own front panel-control.

Key Path:	System, Alignments, RF Preselector, Schedule Setup, Date/Time
Notes:	<p>See “Date/Time ” on page 257 .</p> <p>For model N9038A only.</p>

Preset:	This is unaffected by Preset but is set to Current date and 00:00:00 on a “Restore System Defaults->Align”.
State Saved:	No
Initial S/W Revision:	A.08.00
Help Map ID:	3681

Recurrence

Enables you to configure the scheduler to run the task recurrently on a scheduled date and time. You can schedule it to run daily, weekly or alternate weeks.

Key Path:	System, Alignments, RF Preselector, Schedule Setup
Mode:	All
Remote Command:	:CALibration:RFPSelector:SCHeduler:RECurrence DAY WEEK OFF :CALibration:RFPSelector:SCHeduler:RECurrence?
Example:	:CAL:RFPS:SCH:REC DAY
Notes:	For model N9038A only.
Preset:	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Align”.
State Saved:	No
Range:	DAY WEEK OFF
Initial S/W Revision:	A.08.00
Help Map ID:	3682

Every N Weeks

Enables you to configure the scheduler to run the task on a day in every number of week’s duration.

Key Path:	System, Alignments, RF Preselector, Schedule Setup, Recurrence
Initial S/W Revision:	A.08.00
Help Map ID:	3683

N of Weeks

Enables you to set the number of weeks that the scheduler will wait to trigger a task.

Key Path:	System, Alignments, RF Preselector, Schedule Setup, Recurrence, Every N Weeks
Mode:	All

System Functions
System

Remote Command:	:CALibration:RFPSelector:SCHeuler:RECurrence:WEEK <integer> :CALibration:RFPSelector:SCHeuler:RECurrence:WEEK?
Example:	:CAL:RFPS:SCH:REC:WEEK 2
Notes:	New scheduled date to run the alignment task will get updated when this parameter is changed. For model N9038A only.
Preset:	This is unaffected by Preset but is set to 1 on a “Restore System Defaults->Align”.
State Saved:	No
Range:	1–52
Initial S/W Revision:	A.08.00
Help Map ID:	3684

Day

Enables you to set the Day of the Week the scheduler will run a scheduled task.

Key Path:	System, Alignments, RF Preselector, Schedule Setup, Recurrence, Every N Weeks
Mode:	All
Remote Command:	:CALibration:RFPSelector:SCHeuler:RECurrence:DAY SUN MON TUE WED THU FRI SAT :CALibration:RFPSelector:SCHeuler:RECurrence:DAY?
Example:	:CAL:RFPS:SCH:REC:DAY SUN
Notes:	For model N9038A only.
Preset:	This is unaffected by Preset but is set to SUN on a “Restore System Defaults->Align”.
State Saved:	No
Range:	Sunday Monday Tuesday Wednesday Thursday Friday Saturday
Initial S/W Revision:	A.08.00
Help Map ID:	3685

Scheduler

Setting the Scheduler to ON will trigger the execution of the scheduled task based on the recurrence and time set in the scheduler since the last successful of the specific alignment. A warning condition of “RF Preselector alignment scheduler is ON” will be appeared when the scheduler is set to ON. OFF will turn off the Scheduler from running any scheduled task.

Key Path:	System, Alignments, RF Preselector
-----------	---

Mode:	All
Remote Command:	:CALibration:RFPSelector:SCHeduler:STATe ON OFF 0 1 :CALibration:RFPSelector:SCHeduler:STATe?
Example:	:CAL:RFPS:SCH:STAT OFF
Notes:	For model N9038A only.
Preset:	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Align”.
State Saved:	No
Initial S/W Revision:	A.08.00
Help Map ID:	3686

I/O Config

Activates a menu for identifying and changing the I/O configuration for remote control.

Key Path:	System
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2100

GPIB

Activates a menu for configuring the GPIB I/O port.

Key Path:	System, I/O Config
Initial S/W Revision:	A.02.00
Help Map ID:	3625

GPIB Address

Select the GPIB remote address.

Key Path:	System, I/O Config, GPIB
Mode:	All
Remote Command:	:SYSTem:COMMunicate:GPIB [1] [:SELF] :ADDRess <integer> :SYSTem:COMMunicate:GPIB [1] [:SELF] :ADDRess?
Example:	:SYST:COMM:GPIB:ADDR 17
Notes:	Changing the Address on the GPIB port requires all further communication to use the new address.

Preset:	This is unaffected by Preset but is set to 18 on a “Restore System Defaults->Misc”
State Saved:	No
Range:	0 to 30
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2101

GPIB Controller

Sets the GPIB port into controller or device mode. In the normal state, GPIB controller is disabled, which allows the analyzer to be controlled by a remote computer. When GPIB Controller is enabled, the instrument can run software applications that use the instrument's computer as a GPIB controller; controlling devices connected to the instrument's GPIB port.

NOTE When GPIB Controller is enabled, the analyzer application itself cannot be controlled over GPIB. In this case it can easily be controlled via LAN or USB. The GPIB port cannot be a controller and device at the same time. Only one controller can be active on the GPIB bus at any given time. If the analyzer is the controller, an external PC cannot be a controller.

To control the instrument from the software that is performing GPIB controller operation, you can use an internal TCP/IP connection to the analyzer application. Use the address TCPIP0:localhost:inst0:INSTR to send SCPI commands to the analyzer application.

Key Path:	System, I/O Config, GPIB
Mode:	All
Scope:	Mode Global
Remote Command:	:SYSTem:COMMunicate:GPIB[1] [:SELF] :CONTroller[:ENABLE] ON OFF 0 1 :SYSTem:COMMunicate:GPIB[1] [:SELF] :CONTroller[:ENABLE]?
Example:	:SYST:COMM:GPIB:CONT ON Will set GPIB port to Controller
Notes:	When the instrument becomes the Controller bit 0 in the Standard Event Status Register is set (and when the instrument relinquishes Controller capability bit 0 is cleared in the Standard Event Status Register).
Preset:	This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Misc”
State Saved:	No
Range:	Disabled Enabled
Initial S/W Revision:	A.02.00
Help Map ID:	3626

Disabled

Disables the GPIB Controller capability, this is the default (or normal) setting.

Key Path:	System, I/O Config, GPIB, GPIB Controller
Example:	:SYST:COMM:GPIB:CONT OFF Will set GPIB port to Device
Initial S/W Revision:	A.02.00
Help Map ID:	3627

Enabled

Enables the GPIB Controller capability.

Key Path:	System, I/O Config, GPIB, GPIB Controller
Example:	:SYST:COMM:GPIB:CONT ON Will set GPIB port to Controller
Initial S/W Revision:	A.02.00
Help Map ID:	3628

SCPI LAN

Activates a menu for identifying and changing the SCPI over a LAN configuration. There are a number of different ways to send SCPI remote commands to the instrument over LAN. It can be a problem to have multiple users simultaneously accessing the instrument over the LAN. These keys limit that somewhat by disabling the telnet, socket, and/or SICL capability.

Key Path:	System, I/O Config
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2102

SCPI Telnet

Turns the SCPI LAN telnet capability On or Off allowing you to limit SCPI access over LAN through telnet.

Key Path:	System, I/O Config, SCPI LAN
Mode:	All
Remote Command:	:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle?
Example:	:SYST:COMM:LAN:SCPI:TELN:ENAB OFF
Preset:	This is unaffected by Preset but is set to ON with a "Restore System Defaults->Misc"
State Saved:	No

System Functions
System

Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2103

SCPI Socket

Turns the capability of establishing Socket LAN sessions On or Off. This allows you to limit SCPI access over LAN through socket sessions.

Key Path:	System, I/O Config, SCPI LAN
Mode:	All
Remote Command:	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle?
Example:	:SYST:COMM:LAN:SCPI:SOCK:ENAB OFF
Preset:	This is unaffected by a Preset but is set to ON with a “Restore System Defaults->Misc”
State Saved:	No
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2104

SICL Server

Turns the SICL server capability On or Off, enabling you to limit SCPI access over LAN through the SICL server. (SICL IEEE 488.2 protocol.)

Parameter	Description	Setting
Maximum Connections	The maximum number of connections that can be accessed simultaneously	5
Instrument Name	The name (same as the remote SICL address) of your analyzer	inst0
Instrument Logical Unit	The unique integer assigned to your analyzer when using SICL LAN	8
Emulated GPIB Name	The name (same as the remote SICL address) of the device used when communicating with your analyzer	gpib7
Emulated GPIB Logical Unit	The unique integer assigned to your device when it is being controlled using SICL LAN	8
Emulated GPIB Address	The emulated GPIB address assigned to your transmitter tester when it is a SICL server (the same as your GPIB address)	18

Key Path:	System, I/O Config, SCPI LAN
Mode:	All
Remote Command:	:SYSTem:COMMunicate:LAN:SCPI:SIcL:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SIcL:ENABle?
Example:	:SYST:COMM:LAN:SCPI:SIcL:ENAB OFF
Preset:	This is unaffected by Preset, but is set to ON with a “Restore System Defaults->Misc”
State Saved:	No
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2106

HiSLIP Server

Turns the HiSLIP server capability On or Off, enabling you to limit SCPI access over LAN through the HiSLIP server.

HiSLIP stands for High Speed LAN Instrument Protocol and is part of the IVI-6.1 specification.

Here is an example of a VISA connection string used to connect to the HiSLIP Server on an X-Series Spectrum Analyzer:

TCPIP0::a-n9030a-93016::hislip0::INSTR

In the example above, hislip0 is the HiSLIP device name that VISA users must include in their HiSLIP VISA Address strings. Your HiSLIP device name may be different depending on your VISA settings.

Key Path:	System, I/O Config, SCPI LAN
Mode:	All
Remote Command:	:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle?
Example:	:SYST:COMM:LAN:SCPI:HISL:ENAB OFF
Preset:	This is unaffected by Preset, but is set to ON with a “Restore System Defaults->Misc”
State Saved:	No
Range:	On Off
Initial S/W Revision:	A.11.00
Help Map ID:	50007

SCPI Socket Control Port (Remote Command Only)

Returns the TCP/IP port number of the control socket associated with the SCPI socket session. This

System Functions
System

query enables you to obtain the unique port number to open when a device clear is to be sent to the instrument. Every time a connection is made to the SCPI socket, the instrument creates a peer control socket. The port number for this socket is random. The user must use this command to obtain the port number of the control socket. To force a device clear on this socket, open the port and send the string “DCL ” to the instrument.


If this SCPI command is sent to a non SCPI Socket interface, then 0 is returned.

Mode:	All
Remote Command:	:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTrol?
Example:	:SYST:COMM:LAN:SCPI:SOCK:CONT?
Preset:	This is unaffected by Preset or “Restore System Defaults->Misc”.
State Saved:	No
Range:	0 to 65534
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Reset Web Password

The embedded web server contains certain capability which are password protected; modifying the LAN configuration of the instrument, and access to web pages that can change the settings of the instrument. The default password from the factory is ‘agilent’ (without the quotes). The control provided here is the means to set the web password as the user desires, or to reset the password to the factory default.

Selecting Reset web password brings up a control for resetting the password as the user desires, or to the factory default. A keyboard is required to change the password from the factory default of ‘agilent’ or to set a new password that contains alphabetic characters. The control is:

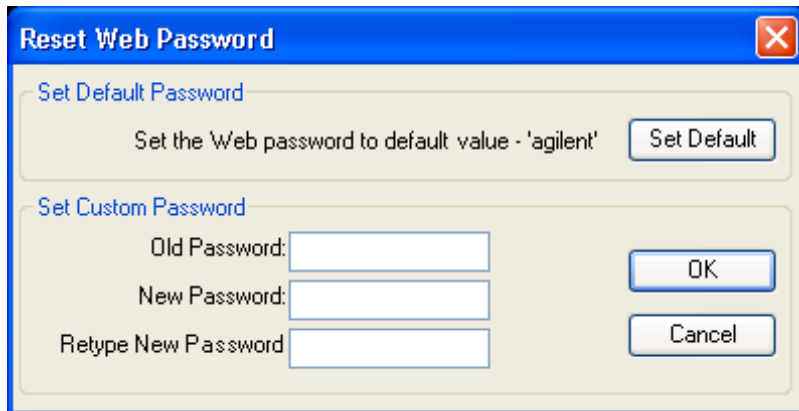

If this control is entered without an external keyboard or mouse connected, you can cancel the control by pressing the Cancel (ESC) front-panel key.

Key Path:	System, I/O Config
Mode:	All

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3600

LXI

Opens a menu that allows you to access the various LXI configuration properties.

Key Path:	System, I/O Config
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3606

LAN Reset

Resets the LAN connection.

Key Path:	System, I/O Config, LXI
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3500

System IDN Response

This key allows you to specify a response to the *IDN? query, or to return the analyzer to the Factory response if you have changed it.

To choose the factory-set response, press the **Factory** key.

To specify your own response, press the **User** key, and enter your desired response.

Key Path:	System, I/O Config
Mode:	All
Remote Command:	:SYSTem:IDN <string> :SYSTem:IDN?
Notes:	This affects the response given in all Modes of the Analyzer, unless the current Mode has also specified a custom response, in which case the current Mode's custom IDN response takes precedence over the System's, but only while that Mode is the current Mode.. It survives shutdown and restart of the software and therefore survives a power cycle Null string as parameter restores the Factory setting
Preset:	This is unaffected by Preset but is set to the original factory setting on a "Restore System Defaults->Misc"
State Saved:	No
Initial S/W Revision:	A.06.00

System Functions

System

Help Map ID:	3667
--------------	------

Factory

This key selects the factory setting, for example:

“Agilent Technologies,N9020A,MY00012345,A.05.01”

where the fields are manufacturer, model number, serial number, firmware revision.

Key Path:	System, I/O Config, IDN Response
Example:	:SYST:IDN "" null string, restores the factory setting
Initial S/W Revision:	A.06.0
Help Map ID:	3665

User

This key allows you to specify your own response to the *IDN? query. You may enter your desired response with the Alpha Editor or a plugin PC keyboard.

When you press this key, the active function becomes the current User string with the cursor at the end. This makes it easy to edit the existing string.

If you enter a null string (for example, by clearing the User String while editing and then pressing **Done**) the analyzer automatically reverts to the Factory setting.

Key Path:	System, I/O Config, IDN Response
Example:	:SYST:IDN “XYZ Corp,Model 12,012345,A.01.01” user specified response
Initial S/W Revision:	A.06.00
Help Map ID:	3666

Query USB Connection (Remote Command Only)

Enables you to determine the speed of the USB connection.

Mode:	All
Remote Command:	:SYSTem:COMMunicate:USB:CONNectioN?
Example:	:SYST:COMM:USB:CONN?

Notes:	<p>NONE – Indicates no USB connection has been made.</p> <p>LSpeed – Indicates a USB low speed connection (1.5 Mbps).</p> <p>This is reserved for future use, the T+M488 protocol is not supported on low speed connections.</p> <p>HSPeed – Indicates that a USB high speed connection (480 Mbps) has been negotiated.</p> <p>FSPEED – Indicates that a USB full speed connection (12 Mbps) has been negotiated.</p>
State Saved:	No
Range:	NONE LSpeed HSPeed FSPEED
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

USB Connection Status (Remote Command Only)

Enables you to determine the current status of the USB connection.

Mode:	All
Remote Command:	:SYSTem:COMMunicate:USB:STATus?
Example:	:SYST:COMM:USB:STAT?
Notes:	<p>SUSPended – Indicates that the USB bus is currently in its suspended state. The bus is in the suspended state when:</p> <p>The bus is not connected to any controller</p> <p>The controller is currently powered off</p> <p>The controller has explicitly placed the USB device into the suspended state.</p> <p>When in the suspended state, no USB activity, including start of frame packets are received.</p> <p>ACTive – Indicates that the USB device is in the active state. When the device is in the active state, it is receiving periodic start of frames but it isn't necessarily receiving or transmitting data.</p>
State Saved:	No
Range:	SUSPended ACTive
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

USB Packet Count (Remote Command Only)

Enables you to determine the number of packets received and transmitted on the USB bus.

Mode:	All
Remote Command:	:SYSTem:COMMunicate:USB:PACKets?
Example:	:SYST:COMM:USB:PACK?
Notes:	Two integers are returned. The first is the number of packets received since application invocation, the second is the number of packets transmitted since application invocation. If no packets have been received or transmitted the response is 0,0. The packet count is initialized to 0,0 when the instrument application is started.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Restore Defaults


Provides incremental initialization of the system setting groups along with supporting a comprehensive reset of the entire instrument back to a factory default state. The menu selections are the groups of system settings and when one is selected, that particular group of system settings is reset back to their default values.

Key Path:	System
Mode:	All
Remote Command:	:SYSTem:DEFault [ALL] ALIGn INPut MISC MODes PON
Example:	SYST:DEF
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2308

Restore Input/Output Defaults

Causes the group of settings and data associated with Input/Output front-panel key to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. .

Confirmation is required to restore the Input/Output setting. The confirmation dialog is:

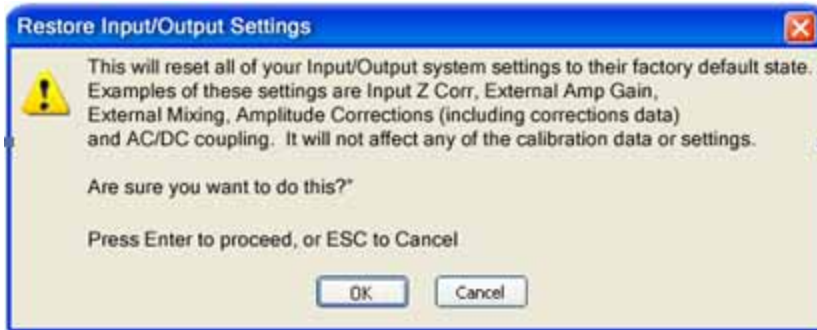


Key Path:	System, Restore System Defaults
Example:	:SYST:DEF INP
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2309

Restore Power On Defaults

This selection causes the Power On settings to be a reset to their default value. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On settings and their default values are Power On Type reset to Mode and Input/Output Defaults and Power On Application reset to whatever the factory set as its default value.

Confirmation is required to restore the factory default values. The confirmation dialog is:

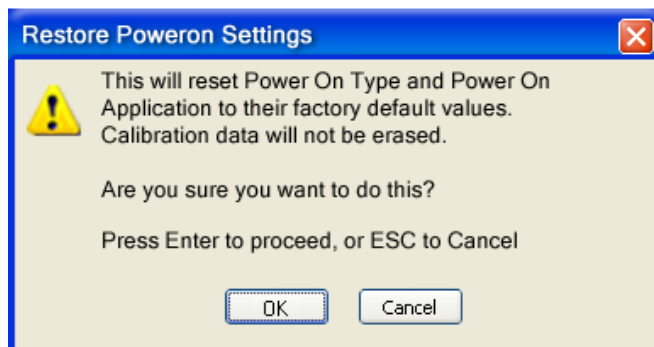

Key Path:	System, Restore System Defaults
Example:	:SYST:DEF PON
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2310

Restore Align Defaults


This selection causes the Alignment system settings to be a reset to their default values. This does not affect any Alignment data stored in the system. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch.

System Functions

System

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

Confirmation is required to restore the factory default values. The confirmation dialog is:

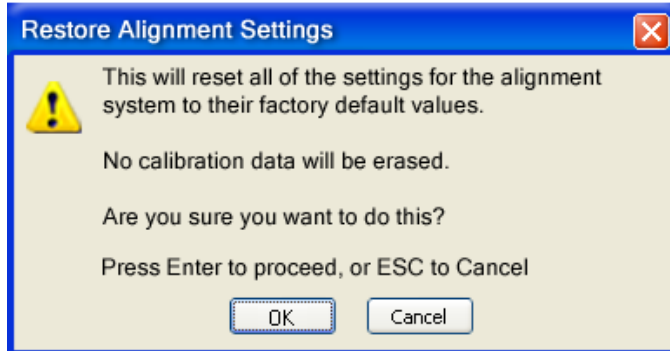

Key Path:	System, Restore System Defaults
Example:	:SYST:DEF ALIG
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2311


Restore Misc Defaults

This selection causes miscellaneous system settings to be reset to their default values. With this reset, you lose the GPIB address and it is reset to 18, so this should be used with caution. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. This miscellaneous group contains the rest of the settings that have not been part of the other Restore System Defaults groups. The following table is a complete list of settings associated with this group:

Miscellaneous Setting	Default Value
Verbose SCPI	Off
GPIB Address	18
Auto File Name Number	000
Save Type	State
State Save To	Register 1
Screen Save To	SCREEN000.png
DISP:ENABle	ON
Full Screen	Off
SCPI Telnet	ON
SCPI Socket	ON

Miscellaneous Setting	Default Value
SICL Server	ON
Display Intensity	100
Display Backlight	ON
Display Theme	TDColor
System Annotation	ON
The SYST:PRES:TYPE	MODE

Confirmation is required to restore the factory default values. The confirmation dialog is:

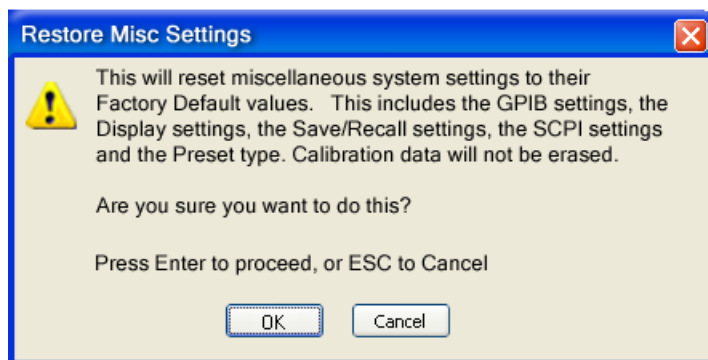


Key Path:	System, Restore System Defaults
Example:	:SYST:DEF MISC
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2312

Restore Mode Defaults (All Modes)

This selection resets all of the modes in the instrument back to their default state just as a Restore Mode Defaults does and it switches the instrument to the power-on mode and causes the default measurement for the power-on mode to be active. This level of Restore System Defaults does not affect any system settings, but it does affect the state of all modes and does cause a mode switch unless the instrument was already in the power-on mode.

Confirmation is required to restore the factory default values. The confirmation dialog is:

System Functions
System

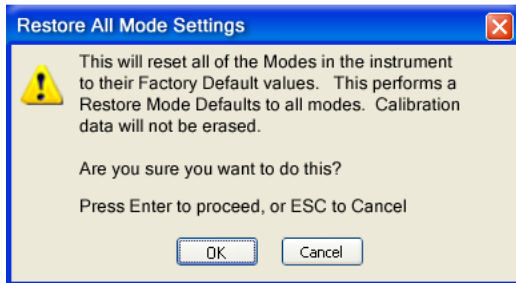


Key Path:	System, Restore System Defaults
Example:	:SYST:DEF MOD
Couplings:	An All Mode will cause the currently running measurement to be aborted, mode switch to the power-on mode and activate the default measurement for the power-on mode.. It gets the mode to a consistent state with all of the default couplings set.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2313

All

This performs a comprehensive reset of ALL analyzer settings to their factory default values. It resets all of the system setting groups, causes a Restore Mode Defaults for all modes in the instrument, and switches back to the power-on mode. It does not affect the User Preset file or any user saved files.

Confirmation is required to restore the factory default values. The confirmation dialog is:

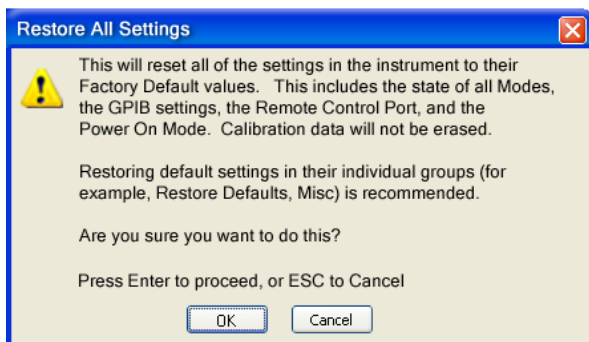


Key Path:	System, Restore System Defaults
Example:	:SYST:DEF ALL
Couplings:	An All will cause the currently running measurement to be aborted and get all modes to a consistent state, so it is unnecessary to couple any settings.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2314


Control Panel...

Opens the Windows Control Panel. The Control Panel is used to configure certain elements of Windows that are not configured through the hardkey/softkey System menus.

The Control Panel is a separate Windows application, so to return to the analyzer once you are in the Control Panel, you may either:

Exit the Control Panel by clicking on the red X in the upper right hand corner, with a mouse

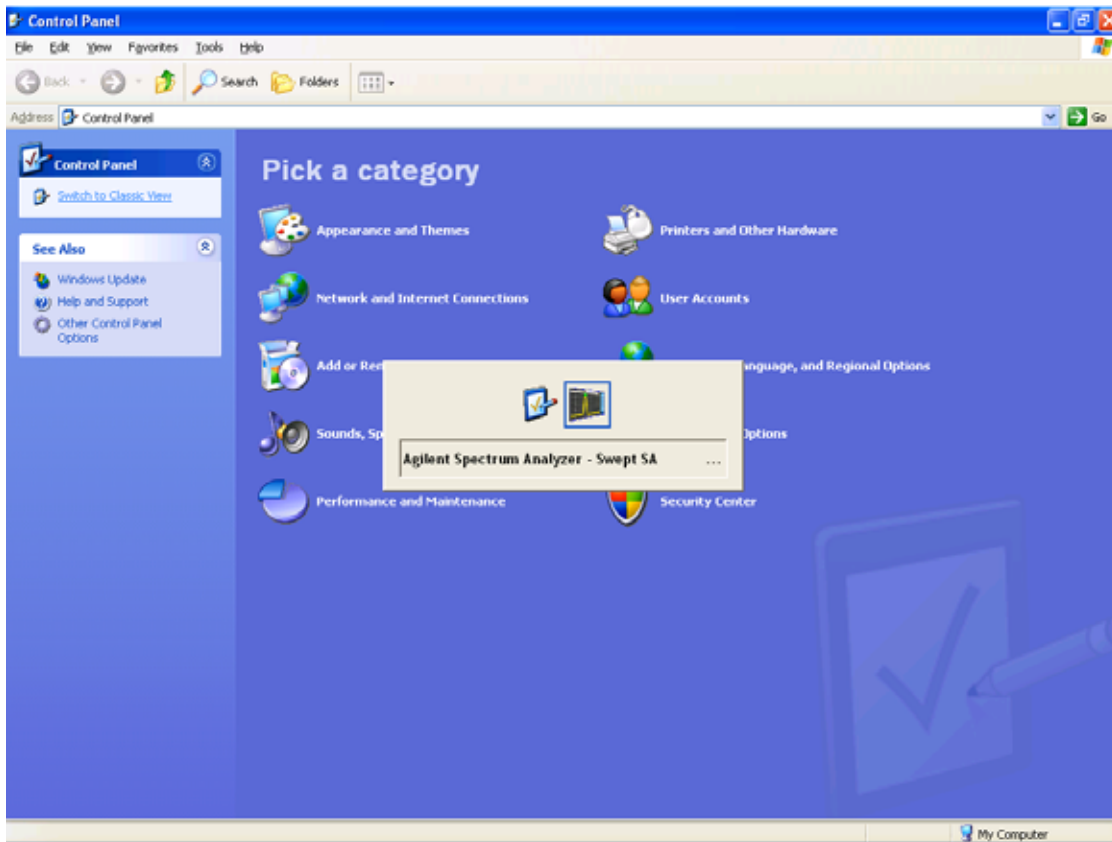

Or use Alt-Tab: press and hold the Alt  key and press and release the Tab key until the Analyzer logo is showing in the window in the center of the screen, as above, then release the Alt key.

Key Path:	System
Notes:	No remote command for this key.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2401

Licensing...

Opens the license explorer.

System Functions
System

For Help on this key, select Help in the menu bar at the top of the license explorer window.

Key Path:	System
Notes:	No equivalent remote command for this key.
Backwards Compatibility Notes:	In ESA the SCPI command for displaying the Show Licenses screen is: :SYSTem:CONFIgure:LKEY:STATe OFF ON 0 1 :SYSTem:CONFIgure:LKEY:STATe? There are no equivalent SCPI commands in the X-Series for displaying the License Explorer.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2402

Remote Command:	:SYSTem:LKEY <"OptionInfo">, <"LicenseInfo">
Example:	SYST:LKEY "N9073A-1FP","027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
Notes:	The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, since the system knows which version is supported for each feature. The <"LicenseInfo"> contains the signature, the expiration date, and serial number for transport if transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the serial number, the system regards it as non-transportable. As a result, this supports reverse compatibility.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	:SYSTem:LKEY:DELeTe <"OptionInfo">, <"LicenseInfo">
Example:	SYST:LKEY:DEL "N9073A-1FP","027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
Notes:	The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, if more than one version is installed. The <"LicenseInfo"> contains the signature, the expiration date, and whether or not be transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the transportability, the system regards it as non-transportable. As a result, this supports reverse compatibility.
Initial S/W Revision:	Prior to A.02.00

Help Map ID:	0
--------------	---

Remote Command:	:SYSTem:LKEY:LIST?
Notes:	<p>Return Value:</p> <p>An <arbitrary block data> of all the installed instrument licenses.</p> <p>The format of each license is as follows.</p> <p><Feature>,<Version>,<Signature>,<Expiration Date>,<Serial Number for Transport></p> <p>Return Value Example:</p> <p>#3136</p> <p>N9073A-1FP,1.000,B043920A51CA</p> <p>N9060A-2FP,1.000,4D1D1164BE64</p> <p>N9020A-508,1.000,389BC042F920</p> <p>N9073A-1F1,1.000,5D71E9BA814C,13-aug-2005</p> <p><arbitrary block data> is:</p> <p>#NMMM<data></p> <p>Where:</p> <p>N is the number of digits that describes the number of MMM characters. For example if the data was 55 bytes, N would be 2.</p> <p>MMM would be the ASCII representation of the number of bytes. In the previous example, N would be 55.</p> <p><data> ASCII contents of the data</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	:SYSTem:LKEY? <"OptionInfo" >
Example:	SYST:LKEY? "N9073A-1FP"
Notes:	<p>The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one.</p> <p>Return Value:</p> <p><"LicenseInfo"> if the license is valid, null otherwise.</p> <p><"LicenseInfo"> contains the signature, the expiration date, and serial number if transportable.</p> <p>Return Value Example:</p> <p>"B043920A51CA"</p>
Initial S/W Revision:	Prior to A.02.00

System Functions

System

Help Map ID:	0
Remote Command:	:SYSTem:HID?
Notes:	Return value is the host ID as a string
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Security

Accesses capabilities for operating the instrument in a security controlled environment.

Key Path:	System
Initial S/W Revision:	A.04.00
Help Map ID:	3661

USB

Read-Write

Selection for allowing full read-write access to the USB ports.

Key Path:	System, Security, USB
Example:	:SYST:SEC:USB:WPR OFF Will set USB ports to Read-Write
Initial S/W Revision:	A.04.00
Help Map ID:	3662

Read only

Selection for disabling write access to the USB ports.

Key Path:	System, Security, USB
Example:	:SYST:SEC:USB:WPR ON Will set USB ports to Read only
Initial S/W Revision:	A.04.00
Help Map ID:	3663

Diagnostics

The Diagnostics key in the System menu gives you access to basic diagnostic capabilities of the instrument.

Key Path:	System
-----------	---------------

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2445

Show Hardware Statistics

Provides a display of various hardware statistics. The statistics include the following:

Mechanical relay cycles

High and Low temperature extremes

Elapsed time that the instrument has been powered-on (odometer)

The display should appear listing the statistics, product number, serial number, and firmware revision.

Hardware Statistical Information	
Agilent MXA Signal Analyzer	
Product Number: N9020A	
Serial Number: US00061145	
Instrument S/W Revision: A.12.00	
Revision Date: 7/11/2012 12:11:10 PM	
Component Name	Value
MechAtten #1 Count Total	457304
Calibrator Switch Cycles	105953
AC/DC Switch Cycles	114240
2 dB #1 Mechanical Atten Cycles	112655
2 dB #2 Mechanical Atten Cycles	124456
MechAtten #2 Count Total	472265
6 dB Mechanical Atten Cycles	115302
10 dB Mechanical Atten Cycles	93602
20 dB Mechanical Atten Cycles	144781
30 dB Mechanical Atten Cycles	118580
Low Noise Path Switch	45668
Preselector Bypass Cycles	31133
High temperature operating extreme	45.75
Low temperature operating extreme	-23.9375
Elapsed Time (On-Time)(hours)	134164

In some CXA models this field is called "Fixed Atten"

Some CXA models omit these fields

Only shown if LNP installed

Only shown if MPB installed

The CXA models in which the AC/DC Switch field is called Fixed Atten and which omit the mech atten fields are the N9000A–503/507 models.

The data will be updated only when the Show Hardware Statistics menu key is pressed, it will not be updated while the screen is displayed.

The tabular data should be directly printable.

Key Path:	System, Diagnostics
Mode:	All

Notes:	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2446

SCPI for Show Hardware Statistics (Remote Commands Only)

Each of the hardware statistic items can be queried via SCPI.

[“Query the Mechanical Relay Cycle Count” on page 280](#)

[“Query the Operating Temperature Extremes” on page 280](#)

[“Query the Elapsed Time since 1st power on” on page 281](#)

Query the Mechanical Relay Cycle Count

Return the count of mechanical relay cycles. For N9038A model, there are additional 2 Mechanical Relays which are <N9038A Input2>, <N9038A Bypass>.

Remote Command:	:SYSTem:MRELAY:COUNT?
Example:	:SYST:MREL:COUN?
Notes:	<p>Query Only</p> <p>The return value is a comma separated list of the individual counts for each mechanical relay.</p> <p>The position of the relays in the list is:</p> <p>“<Cal Signal>,<AC/DC>,<2dB #1 Atten>,<2dB #2 Atten>,<6dB Atten>,<10dB Atten>,<20dB Atten>,<30dB Atten>,<Fixed Atten>,<Low Noise Path Switch>,<Presel Bypass>,<N9038A Input2>, <N9038A Bypass>”</p> <p>Items in the list not pertaining to your particular hardware configuration will return as -999 for those items.</p>
Dependencies:	This SCPI command is NOT supported by the E6607C model.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.08.00
Help Map ID:	0

Query the Operating Temperature Extremes

Returns the low operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

Mode:	All
Remote Command:	:SYSTem:TEMPerature:LEXTreme?
Example:	:SYST:TEMP:LEXT?

Notes:	Value is in degrees Celsius at which the lowest operating temperature has been recorded since 1st power-up.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mode:	All
Remote Command:	:SYSTem:TEMPerature:HEXTreme?
Example:	:SYST:TEMP:HEXT?
Notes:	Value is in degrees Celsius at which the highest operating temperature has been recorded since 1st power-up.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0


Query the Elapsed Time since 1st power on

Returns the elapsed on-time in minutes since 1st power-on.

Remote Command:	:SYSTem:PON:ETIMe?
Example:	:SYST:PON:ETIM?
Notes:	Query Only
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Advanced

Accesses advanced diagnostic capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is “saservice”. The first access to the Advanced Diagnostic Menu after invoking the instrument application will require an authentication, which is to enter the Service Code. Subsequent accesses to the Advanced Diagnostic Menu are unimpeded. The Authentication dialog looks like:

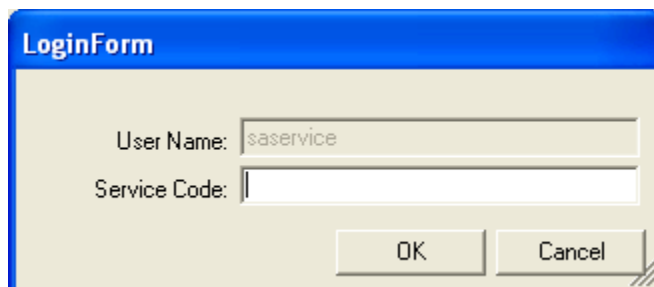

System Functions
System

“OK” is the default key thus the Enter key is used to complete the entry. If invalid Service Code is entered authentication is not granted and you are provided the following dialog:



Key Path:	System, Diagnostics
Notes:	Password is required to access this menu.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3498

Self test

This key gives you access to diagnostic capabilities for self tests of the instrument.

Key Path:	System, Diagnostics
Initial S/W Revision:	Prior to A.10.00
Help Map ID:	50000

All Self Test

This key invokes all the self tests defined in the Diagnostics Self Test section.

Key Path:	System, Diagnostics, Self Test
Remote Command:	:SYSTem:TEST:WCTS:[ALL]
Example:	SYST:TEST:WCTS:[ALL]
Initial S/W Revision:	A.12.50
Help Map ID:	50011

Source Self Test

This key invokes the internal source self test. When operation is complete, the generated test summary file is: E:\Agilent\Instrument\CRFSSelfTestLog.txt. This test summary file can be retrieved from the instrument using the MMEM set of SCPI command, once you have the fully qualified the path and file name.

If the self test fails, the following error message will be generated:

“-330, Self-test failed, see log file E:\Agilent\Instrument\ CRFSSelfTestLog.txt”

If the self test passes, an advisory message “Source self-test completed successfully” is generated.

Key Path:	System, Diagnostics, Self Test
Remote Command:	:SYSTem:TEST:WCTS:SOURce
Example:	SYST:TEST:WCTS:SOURce
Notes:	Access log with command : MMEM:DATA? "E:\Agilent\Instrument\CRFSSelfTestLog.txt" Alias of source self test (:SOURce:SELF:TEST[:ALL])
Initial S/W Revision:	A.10.00
Help Map ID:	50001

RFIO Self Test

This key invokes the RFIO ports self test for embedded MPA, which just are available on E6607C. When operation is completed, the generated test summary information is appended to log file E:\Agilent\Instrument\RFIOTestLog.txt. This test summary file can be retrieved from the instrument using the MMEM set of SCPI command, once you have the fully qualified the path and file name.

If the self test fails, the following error message will be generated:

“-330, Self-test failed, see log file E:\Agilent\Instrument\RFIOTestLog.txt”

If the self test passes, an advisory message “RFIO self-test completed successfully” is generated.

Key Path:	System, Diagnostics, Self Test
Remote Command:	:SYSTem:TEST:WCTS:MPADapter
Example:	SYST:TEST:WCTS:MPAD
Notes:	Access log with command : MMEM:DATA? "E:\Agilent\Instrument\RFIOTestLog.txt"
Initial S/W Revision:	A.12.50
Help Map ID:	50012

NOTE This function is NOT available on EXT E6607A and E6607B models.

FEC Self Test

This key invokes the EXT E6607C froned end control self test. When operation is complete, the generated test summary information is appended to log file E:\Agilent\Instrument\FECTestLog.txt. This test summary file can be retrieved from the instrument using the MMEM set of SCPI command, once you have the fully qualified the path and file name.

If the self test fails, the following error message will be generated:

“-330, Self-test failed, see log file E:\Agilent\Instrument\FECTestLog.txt”

System Functions
System

If the self test passes, an advisory message “FEC self-test completed successfully” is generated.

Key Path:	System, Diagnostics, Self Test
Remote Command:	: SYSTem: TEST: WCTS: FEC
Example:	SYST:TEST:WCTS:FEC
Notes:	Access log with command : MMEM:DATA? "E:\ Agilent\Instrument\FECTestLog.txt"
Initial S/W Revision:	A.12.50
Help Map ID:	50013

NOTE This function is NOT available on EXT E6607A and E6607B models.

Show Result

This key gives you access to show results of the following self tests:

“[Source Self Test Results](#)” on page 284

E6607C embedded MPA self-test results - “[RFIO Self Test REsults](#)” on page 286

E6607C FEC self-test results - “[FEC Self Test REsults](#)” on page 287

Key Path:	System, Diagnostics, Self Test
Initial S/W Revision:	A.12.50
Help Map ID:	50014

Source Self Test Results

Provides a display of last source test results, the display should appear listing model number, serial number and test time at the top of display, and then list test date/time, test name, measured value, valid range and pass/fail of each source test item, the tabular data should be directly printable.

Key Path:	System, Diagnostics, Self Test, Show Results
Remote Command:	: SYSTem: TEST: WCTS: SHOW: RESult SOURce
Example:	SYST:TEST:WCTS:SHOW:RES SOUR
Initial S/W Revision:	A.12.50
Help Map ID:	50015

The example of source self test result display is as follows:

Source Self Test Results					
Produce Number: E6607B					
Serial Number: MY51380425					
Instrument S/W: 11/15/2012 2:51:19 PM					
FpgaVersionTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:56	Analog_FPGA	16.000	>= 16.000	Pass
11/23/2012	16:13:56	Digital_FPGA	50.000	>= 46.000	Pass
11/23/2012	16:13:56	CRFS_FPGA	38.000	>= 38.000	Pass
ModulatorTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:57	LOLevel_vs_DET_LO	-1.108	-2.200 - 2.200	Pass
11/23/2012	16:13:57	LOLevel_vs_LEVEL_DET	1.010	-1.100 - 1.100	Pass
11/23/2012	16:13:57	LOLevel_vs_LEVEL_REF	1.995	0.500 - 2.500	Pass
11/23/2012	16:13:57	QUAD_vs_DET_LO	-0.879	-1.100 - 1.100	Pass
11/23/2012	16:13:57	QUAD_vs_LEVEL_DET	0.000	-1.100 - 1.100	Pass
11/23/2012	16:13:57	QUAD_vs_LEVEL_REF	0.000	-0.300 - 0.300	Pass
11/23/2012	16:13:57	QUAD_vs_QUAD_LOOP	0.885	0.350 - 1.100	Pass
IQModulatorTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:57	VBLO_DAC	0.154	0.000 - 0.500	Pass
11/23/2012	16:13:57	AMP_BIAS1	145.154	132.000 - 185.000	Pass
11/23/2012	16:13:57	AMP_BIAS2	145.740	132.000 - 185.000	Pass
11/23/2012	16:13:57	OFFSET_QN	0.119	0.100 - 0.125	Pass
11/23/2012	16:13:57	OFFSET_QP	0.121	0.100 - 0.125	Pass

Show Source Self Test Results contents (Remote Command Only)

A remote command is available to obtain the contents of the Show Souce Self Test Results screen (the entire contents, not just the currently displayed page).

Remote Command:	:SYSTem:TEST:WCTS:SOURce:RESult?
Example:	SYST:TEST:WCTS:SOUR:RES?

System Functions
System

Notes:	The output is an IEEE Block format of the Show Source Self Test Results contents. Each line is separated with a new-line character.
Initial S/W Revision:	A.12.50
Help Map ID:	0

RFIO Self Test Results

Provides a display of last RFIO test results for embedded MPA of E6607C, the display should appear listing model number, serial number and test time at the top of display, and then list test date/time, test name, measured value, valid range and pass/fail of each RFIO test item, the tabular data should be directly printable.

Key Path:	System, Diagnostics, Self Test, Show Results
Remote Command:	:SYSTem:TEST:WCTS:SHOW:RESult MPADapter
Example:	SYST:TEST:WCTS:SHOW:RES MPAD
Initial S/W Revision:	A.12.50
Help Map ID:	50016

NOTE This function is NOT available on EXT E6607A and E6607B models.

The example of RFIO self test result display is as following:

RFIO Self Test Results					
Produce Number: E6607C					
Serial Number: MY51380437					
Instrument S/W: 11/16/2012 2:51:19 PM					
CarrierClockTest	16:13:56				
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:57	Dig FPGA 100 MHz	1.000	1.000 - 1.000	Pass
11/23/2012	16:13:57	Feldspar CCLK	1.000	1.000 - 1.000	Pass
11/23/2012	16:13:57	Feldspar LVDS	1.000	1.000 - 1.000	Pass
11/23/2012	16:13:57	Dig FPGA LVDS	1.000	1.000 - 1.000	Pass
11/23/2012	16:13:57	Dig FPGA 200 MHz	1.000	1.000 - 1.000	Pass
DetectorTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:57	ABUS_DET_SYNTH	29.879	14.400 - 100.000	Pass
11/23/2012	16:13:57	ABUS_DET_LO	18.136	9.000 - 100.000	Pass
11/23/2012	16:13:57	ABUS_DET_MOD	13.556	6.600 - 100.000	Pass

11/23/2012	16:13:57	ABUS_DET_MOD_FLT	18.000	7.800 - 100.000	Pass
FilterBankTest1					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:57	Bank1_LPF_550MHz	30.357	>= 10.000	Pass
11/23/2012	16:13:57	Bank1_LPF_750MHz	29.358	>= 10.000	Pass
11/23/2012	16:13:57	Bank1_LPF_1020MHz	27.036	>= 10.000	Pass
11/23/2012	16:13:57	Bank1_LPF_1600MHz	27.594	>= 10.000	Pass
11/23/2012	16:13:57	Bank1_LPF_2400MHz	21.490	>= 10.000	Pass
11/23/2012	16:13:57	Bank1_LPF_3000MHz	18.476	>= 10.000	Pass
11/23/2012	16:13:57	OFFSET_QP	0.121	0.100 - 0.125	Pass

Show RFIO Self Test Results contents (Remote Command Only)

A remote command is available to obtain the contents of the Show RFIO Self Test Results screen (the entire contents, not just the currently displayed page).

Remote Command:	:SYSTem:TEST:WCTS:MPADapter:RESult?
Example:	SYST:TEST:WCTS:MPAD:RES?
Notes:	The output is an IEEE Block format of the Show RFIO Self Test Results contents. Each line is separated with a new-line character.
Initial S/W Revision:	A.12.50
Help Map ID:	0

FEC Self Test Results

Provides a display of last FEC test results, the display should appear listing model number, serial number and test time at the top of display, and then list test date/time, test name, measured value, valid range and pass/fail of each FEC test item, the tabular data should be directly printable.

Key Path:	System, Diagnostics, Self Test, Show Results
Remote Command:	:SYSTem:TEST:WCTS:SHOW:RESult FEC
Example:	SYST:TEST:WCTS:SHOW:RES FEC
Initial S/W Revision:	A.12.50
Help Map ID:	50017

This function is NOT available on EXT E6607A and E6607B models.

System Functions
System

The example of FEC self test result display is as follows:

FEC Self Test Results					
Produce Number: E6607C					
Serial Number: MY51380437					
Instrument S/W: 11/16/2012 2:51:19 PM					
FpgaVersionTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:56	Analog_FPGA	16.000	>= 16.000	Pass
11/23/2012	16:13:56	Digital_FPGA	50.000	>= 46.000	Pass
11/23/2012	16:13:56	CRFS_FPGA	38.000	>= 38.000	Pass
PowerSupplyTest					
Date	Time(GMT)	Name	MeasValue	ValidRange	Result
11/23/2012	16:13:56	ABUS_+32CHK	31.904	30.900 - 32.900	Pass
11/23/2012	16:13:56	ABUS_+12CHK	12.296	10.800 - 13.200	Pass
11/23/2012	16:13:56	+10VA	9.935	9.600 - 10.200	Pass
11/23/2012	16:13:56	+5VA	4.995	4.900 - 5.100	Pass
11/23/2012	16:13:56	+3.3VA	3.299	3.200 - 3.400	Pass
11/23/2012	16:13:56	-3.3VA	-3.311	-3.400 - -3.200	Pass
11/23/2012	16:13:56	ACOM	0.00	-0.200 - 0.200	Pass
11/23/2012	16:13:56	-5VA	-5.036	-5.100 - -4.900	Pass
11/23/2012	16:13:56	-6.1VA	-5.880	-6.200 - -5.700	Pass
11/23/2012	16:13:56	-10VA	-10.116	-10.200 - -9.800	Pass
11/23/2012	16:13:56	ABUS_-2.5V_REF	-2.508	-2.520 - -2.470	Pass
11/23/2012	16:13:56	ABUS_+2.5V_REF	2.508	2.480 - 2.520	Pass
11/23/2012	16:13:56	ABUS_-10VPALC	-10.047	-10.200 - -9.800	Pass
11/23/2012	16:13:57	ABUS_DET_MOD_FLT	18.000	7.800 - 100.000	Pass

Show FEC Self Test Results contents (Remote Command Only)

A remote command is available to obtain the contents of the Show FEC Self Test Results screen (the entire contents, not just the currently displayed page).

Remote Command:	:SYSTem:TEST:WCTS:FEC:RESult?
-----------------	-------------------------------

Example:	SYST:TEST:WCTS:FEC:RES?
Notes:	The output is an IEEE Block format of the Show FEC Self Test Results contents. Each line is separated with a new-line character.
Initial S/W Revision:	A.12.50
Help Map ID:	0

Multiport Adapter Cables Test

This key gives you access to diagnostic capabilities for the RF and trigger cable connections between EXT and Multiport Adapter with this instrument, which include:

EXT RF Input <-> Multiport Adapter RF OUT

EXT RF Output <-> Multiport Adapter RF IN

EXT RF IO2 <-> Multiport Adapter GPS IN

EXT Trigger 1<-> Multiport Adapter Trigger 1

EXT Trigger 2 <-> Multiport Adapter Trigger 2

Key Path:	System, Diagnostics
Remote Command:	:CALibration:MPADapter:CABLEs:TEST
Example:	:CAL:MPAD:CABL:TEST
Notes:	If the Multiport Adapter cables are not connected correctly. It will report the proper error, for example: “-330, Self-test failed, MPA’S RF IN or RF OUT not properly connected”.
Dependencies:	This key does not appear unless a multiport adapter is plugged in to the USB. Grayout error: -221.1400; Multiport Adapter Not Available
Initial S/W Revision:	A.10.0
Help Map ID:	50018

Quick Test ...

This key gives you access to launch a Windows program for conducting a confidence check of the Agilent EXT Wireless Communications Test Set and the E6617A Multiport Adapter connected to EXT. The operator must exit Quick Test to return to the instrument application.

Key Path:	System, Diagnostics
Notes:	Operator is responsible for exiting the Quick Test and returning focus to the Instrument Application. The softkey in the menu is only displayed when the instrument is an EXT and the EXTQuickTest.exe file is present in the C:\Program Files\Agilent\EXTQuickTest folder.

System Functions
System

Initial S/W Revision:	A.09.49
Help Map ID:	50019

	Agilent Converged	PSA
IP Address	SYSTem:COMMunicate:LAN:ADDRess <string> SYSTem:COMMunicate:LAN:ADDRess?	:SYSTem:COMMunicate:LAN[:SELF]:IP <string> :SYSTem:COMMunicate:LAN[:SELF]:IP?
Gateway	SYSTem:COMMunicate:LAN:DGATeway <string> SYSTem:COMMunicate:LAN:DGATeway?	:SYSTem:COMMunicate:LAN[:SELF]:GATEway <string> :SYSTem:COMMunicate:LAN[:SELF]:GATEway?
Subnet Mask	SYSTem:COMMunicate:LAN:SMASk <string> SYSTem:COMMunicate:LAN:SMASk?	:SYSTem:COMMunicate:LAN[:SELF]:SUBNetmask <string> :SYSTem:COMMunicate:LAN[:SELF]:SUBNetmask?

Service

Accesses capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is “advanceduser” or “saservice”. The first access to the Service Menu after invoking the instrument application will require an authentication Service Code.

Key Path:	System
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2500

Internet Explorer...

This key launches Microsoft Internet Explorer. A mouse and external keyboard are highly desired for using Internet Explorer. When Internet Explorer is running, close Internet Explorer to return focus to the Instrument Application (or use Alt-Tab).

Key Path:	System
Mode:	All
Notes:	No equivalent remote command for this key.
Initial S/W Revision:	A.05.01
Help Map ID:	3671

System Remote Commands (Remote Commands Only)

The commands in this section have no front-panel key equivalent.

[“System Powerdown \(Remote Command Only\)” on page 291](#)

“List installed Options (Remote Command Only)” on page 291

“Lock the Front-panel keys (Remote Command Only)” on page 291

“List SCPI Commands (Remote Command Only)” on page 292

“SCPI Version Query (Remote Command Only)” on page 292

“Date (Remote Command Only)” on page 293

“Time (Remote Command Only)” on page 293

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

System Powerdown (Remote Command Only)

Remote Command:	:SYSTem:PDOWn [NORMal FORCe]
Notes:	Shuts down the instrument in the normal way (NORMal) or forced way (FORCe). In case there is another application with modified data pending for saving, the application prompt the user. The system waits until the user responds in the normal mode. It will go off after 20 seconds of wait in the force mode and all data will be lost.
Help Map ID:	0

List installed Options (Remote Command Only)

Lists the installed options that pertain to the instrument (signal analyzer). .

Mode:	All
Remote Command:	:SYSTem:OPTions?
Example:	:SYST:OPT?
Notes:	The return string is a comma separated list of the installed options. For example: “503,P03,PFR” :SYSTem:OPTions? and *OPT? are the same.
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Lock the Front-panel keys (Remote Command Only)

Disables the instrument keyboard to prevent local input when the instrument is controlled remotely. Annunciation showing a “K” for ‘Klock’ (keyboard lock) alerts the local user that the keyboard is locked. Klock is similar to the GPIB Local Lockout function; namely that no front-panel keys are active with the exception of the Power Standby key. (The instrument is allowed to be turned-off if Klock is

System Functions
System

ON.) The Klock command is used in remote control situations where Local Lockout cannot be used.

Although primary intent of Klock is to lock-out the front panel, it will lock-out externally connected keyboards through USB. Klock has no effect on externally connected pointing devices (mice).

The front panel 'Local' key (Cancel/Esc) has no effect if Klock is ON.

Mode:	All
Remote Command:	:SYSTem:KLOCK OFF ON 0 1 :SYSTem:KLOCK?
Example:	:SYST:KLOC ON
Notes:	Keyboard lock remains in effect until turned-off or the instrument is power-cycled
Preset:	Initialized to OFF at startup, unaffected by Preset
State Saved:	No
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

List SCPI Commands (Remote Command Only)

Outputs a list of the valid SCPI commands for the currently selected Mode.

Remote Command:	:SYSTem:HELP:HEADers?
Example:	:SYST:HELP:HEAD?
Notes:	The output is an IEEE Block format with each command separated with the New-Line character (hex 0x0A)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

SCPI Version Query (Remote Command Only)

Returns the SCPI version number with which the instrument complies. The SCPI industry standard changes regularly. This command indicates the version used when the instrument SCPI commands were defined.

Remote Command:	:SYSTem:VERSion?
Example:	:SYST:VERS?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Date (Remote Command Only)

The recommended access to the Date, Time, and Time zone of the instrument is through the Windows native control (Control Panel or accessing the Task Bar). You may also access this information remotely, as shown in this command and Time (below).

Sets or queries the date in the instrument.

Mode:	All
Remote Command:	:SYSTem:DATE "<year>, <month>, <day>" :SYSTem:DATE?
Example:	:SYST:DATE "2006,05,26"
Notes:	<year> is the four digit representation of year. (for example, 2006) <month> is the two digit representation of year. (for example. 01 to 12) <day> is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31) depending on the month and year Unless the current account has Power User or Administrator privileges, an error will be generated by this command and no action will be taken.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Time (Remote Command Only)

Sets or queries the time in the instrument.

Mode:	All
Remote Command:	:SYSTem:TIME "<hour>, <minute>, <second>" :SYSTem:TIME?
Example:	:SYST:TIME "13,05,26"
Notes:	<hour> is the two digit representation of the hour in 24 hour format <minute> is the two digit representation of minute <second> is the two digit representation of second Unless the current account has Power User or Administrator privileges, an error will be generated by this command and no action will be taken.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

User Preset

Accesses a menu that gives you the following three choices:

User Preset – recalls a state previously saved using the Save User Preset function.

User Preset All Modes – presets all of the modes in the analyzer

Save User Preset – saves the current state for the current mode

Key Path:	Front-panel key
Backwards Compatibility Notes:	<p>User Preset is actually loading a state, and in legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly it was possible to do a User Preset without affecting the trace data, limit lines or correction data.</p> <p>In the X-Series, “state” always includes all of this data; so whenever state is loaded, or User Preset is executed, all of the traces, limit lines and corrections are affected. Although this differs from previous behavior, it is desirable behavior, and should not cause adverse issues for users.</p> <p>On ESA and PSA, User Preset affected the entire instrument’s state. In the X-Series, User Preset only recalls the state for the active mode. There is a User Preset file for each mode. User Preset can never cause a mode switch as it can in legacy analyzers. If you want to recall all modes to their user preset file state, you will need to do a User Preset after mode switching into each mode.</p> <p>User Preset recalls mode state which can now include data like traces; whereas on ESA and PSA, User Preset did not affect data.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2024

User Preset

User Preset sets the state of the currently active mode back to the state that was previously saved for this mode using the Save User Preset menu key or the SCPI command, `SYST:PRES:USER:SAV`. It not only recalls the Mode Preset settings, but it also recalls all of the mode persistent settings, and the Input/Output system setting that existed at the time Save User Preset was executed.

If a Save User Preset has not been done at any time, User Preset recalls the default user preset file for the currently active mode. The default user preset files are created if, at power-on, a mode detects there is no user preset file. There will never be a scenario when there is no user preset file to restore. For each mode, the default user preset state is the same state that would be saved if a Save User Preset is performed in each mode right after doing a Restore Mode Default and after a Restore Input/Output Defaults.

The User Preset function does the following:

Aborts the currently running measurement.

Sets the mode State to the values defined by Save User Preset.

Makes the saved measurement for the currently running mode the active measurement.

Brings up the saved menu for the power-on mode.

Clears the input and output buffers.

Sets the Status Byte to 0.

Key Path:	User Preset
Remote Command:	:SYSTem:PRESet:USER
Example:	:SYST:PRES:USER:SAVE :SYST:PRES:USER
Notes:	:SYST:PRES:USER:SAVE is used to save the current state as the user preset state. Clears all pending OPC bits. The Status Byte is set to 0. Pressing the User Preset front-panel key while already in the User Preset menu will cause the User Preset to get executed
Couplings:	A user preset will cause the currently running measurement to be aborted and cause the saved measurement to be active. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2302

User Preset All Modes

Recalls all of the User Preset files for each mode, switches to the power-on mode, and activates the saved measurement from the power-on mode User Preset file.

NOTE When the instrument is secured, all of the user preset files are converted back to their default user preset files.

The User Preset function does the following:

Aborts the currently running measurement.

Switches the Mode to the power-on mode.

Restores the User Preset files for each mode.

Makes the saved measurement for the power-on mode the active measurement.

Brings up the saved menu for the power-on mode.

Clears the input and output buffers.

System Functions

User Preset

Sets the Status Byte to 0.

Key Path:	User Preset
Remote Command:	:SYSTem:PRESet:USER:ALL
Example:	:SYST:PRES:USER:SAVE :SYST:PRES:USER:ALL
Notes:	Clears all pending OPC bits. The Status Byte is set to 0. :SYST:PRES:USER:SAVE is used to save the current state as the user preset state.
Couplings:	A user preset will cause the currently running measurement to be aborted, cause a mode switch to the power-on mode, and cause the saved measurement to be active in the power-on mode. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2303

Save User Preset

Saves the currently active mode and its State. You can recall this User Preset file by pressing the User Preset menu key or sending the SYST:PRES:USER remote command. This same state is also saved by the Save State function.

Key Path:	User Preset
Remote Command:	:SYSTem:PRESet:USER:SAVE
Example:	:SYST:PRES:USER:SAVE
Notes:	:SYST:PRES:SAVE creates the same file as if the user requested a *SAV or a MMEM:STOR:STAT, except User Preset Save does not allow the user to specify the filename or the location of the file.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	2304

Power vs. Time measures the mean transmit power during the “useful” part of bursts, and verifies that the power ramp fits within the defined mask. The “useful” part of the normal burst is defined as, the 147 bits centered on the transition from bit 13 to bit 14 (the “TO” time point) of the 26 bit training sequence. The Power vs. Time measurement also lets you view the rise, fall, and “useful” part of the bursts. Using the “Multi-Slot” function, up to eight slots in a frame can be viewed at one time.

This topic contains the following sections:

[“Measurement Commands for EDGE Power vs. Time” on page 297](#)

[“Remote Command Results for EDGE Power vs. Time” on page 297](#)

See also: Section [“Custom Limit Mask \(Remote Commands Only\)” on page 336](#)

Measurement Commands for EDGE Power vs. Time

The following commands are used to retrieve the measurement results:

```
:CONFigure:EPVTime
```

```
:CONFigure:EPVTime:NDEFault
```

```
:INITiate:EPVTime
```

```
:FETCh:EPVTime [n] ?
```

```
:READ:EPVTime [n] ?
```

```
:MEASure:EPVTime [n] ?
```

For more measurement related commands, see the section [Remote Measurement Functions@29978](#).

Remote Command Results for EDGE Power vs. Time

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.
not specified or n = 1	Returns the following comma-separated scalar results: <ol style="list-style-type: none"> 1. Sample time is a floating point number that represents the time between samples when using the trace queries (n=0,2,etc.). 2. Power single burst is the mean power (in dBm) across the useful part of the selected burst in the most recently acquired data, or in the last data acquired at the end of a set of averages. If averaging is on, the power is for the last burst. 3. Power averaged is the power (in dBm) of N averaged bursts, if averaging is on. The power is averaged across the useful part of the burst. Average m is a single burst from the acquired trace. If there are multiple bursts in the acquired trace, only one burst is used for average m. This means that N traces are acquired to make the complete average. If averaging is off, the value of power averaged is the same as the power single burst value.

n	Results Returned
n = 1 (Cont.)	<ol style="list-style-type: none"> 4. Number of samples is the number of data points in the captured signal. This number is useful when performing a query on the signal (i.e. when n=0,2,etc.). 5. Start is the index of the data point at the start of the useful part of the burst 6. Stop is the index of the data point at the end of the useful part of the burst 7. T0 is the index of the data point where t0 occurred 8. Burst width is the width of the burst measured at 0.3 dB below the mean power in the useful part of the burst. 9. Maximum value is the maximum value of the most recently acquired data (in dBm). 10. Minimum value is the minimum value of the most recently acquired data (in dBm). 11. Burst search threshold is the value (in dBm) of the threshold where a valid burst is identified, after the data has been acquired. 12. IQ point delta is the number of data points offset that are internally applied to the useful data in traces n=2,3,4. You must apply this correction value to find the actual location of the Start, Stop, or T0 values. (for example, for n=2, Start (for the IQ trace data) = Start + IQ_point_delta)
2	Returns comma-separated trace points of the Measure Trace data. These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.
3	Returns comma-separated points of the upper mask (in dBm) of the measured slots configured by Meas Time. The measured slots can be seen in Multi Slot view in View/Display.
4	Returns comma-separated points of the lower mask (in dBm) of the measured slots configured by Meas Time. The measured slots can be seen in Multi Slot view in View/Display.
7	Returns power level values for the 8 slots in the current frame (in dBm).
8	<p>Returns comma-separated trace points of the Max Hold Trace data (in dBm) of the measured slots configured by Meas Time. The measured slots can be seen in Multi Slot view in View/Display.</p> <p>There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>This command is available only when the Max Hold Trace State is ON.</p>
9	<p>Returns comma-separated trace points of the Min Hold Trace data (in dBm) of the measured slots configured by Meas Time. The measured slots can be seen in Multi Slot view in View/Display.</p> <p>There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>This command is available only when the Min Hold Trace State is ON.</p>

n	Results Returned
10	<p>Returns the following comma-separated scalar results:</p> <ol style="list-style-type: none"> 1. Sample time is a floating point number that represents the time between samples when using the trace queries (n=0,2,etc.). 2. Power single burst is the mean power (in dBm) across the useful part of the selected burst in the most recently acquired data, or in the last data acquired at the end of a set of averages. If averaging is on, the power is for the last burst. 3. Power averaged is the power (in dBm) of N averaged bursts, if averaging is on. The power is averaged across the useful part of the burst. Average m is a single burst from the acquired trace. If there are multiple bursts in the acquired trace, only one burst is used for average m. This means that N traces are acquired to make the complete average. If averaging is off, the value of power averaged is the same as the power single burst value. 4. Number of samples is the number of data points in the captured signal. This number is useful when performing a query on the signal (i.e. when n=0,2,etc.). 5. Start is the index of the data point at the start of the useful part of the burst 6. Stop is the index of the data point at the end of the useful part of the burst 7. T0 is the index of the data point where t0 occurred 8. Burst width is the width of the burst measured at 0.3 dB below the mean power in the useful part of the burst. 9. Maximum value is the maximum value of the most recently acquired data (in dBm). 10. Minimum value is the minimum value of the most recently acquired data (in dBm). 11. Burst search threshold is the value (in dBm) of the threshold where a valid burst is identified, after the data has been acquired. 12. IQ point delta is the number of data points offset that are internally applied to the useful data in traces n=2,3,4. You must apply this correction value to find the actual location of the Start, Stop, or T0 values. (for example, for n=2, Start (for the IQ trace data) = Start + IQ_point_delta) 13. 1st Error point is the time (in second) which indicates the point on the X Scale where the first failure of a signal was detected. Use a marker to locate this point in order to examine the nature of the failure. If the limit passes, returned data has no meaning.

n	Results Returned
10 (Cont.)	<p>14. Detected TSC is the most recently detected TSC. The returned value is 0~7 (Burst Type: Normal/Higher Symbol Rate (HSR)) if TSC detected. If TSC not detected, the returned value is -999.0. If Amptd or NONE (Power vs. Time only) specified in Sync Type, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF).</p> <p>Note: The returned value in Sync (Synchronization Burst) is. 10 if (BN42, BN43..BN105) = (1,0,1,1,1,0,0,1,0,1,1,0,0,0,1,0,0,0,0,0,0,1,0,0,0,0,0,0,1,1,1,1,0,0,1,0,1,1,0,1,0,0,0,1,0,1,0,1,1,1,0,1,1,0,0,0,0,1,1,0,1,1) 11 if (BN42, BN43..BN105) = (1,1,1,0,1,1,1,0,0,1,1,0,1,0,1,1,0,0,1,0,1,0,0,0,0,0,1,1,1,1,0,1,1,1,1,0,1,0,0,0,1,1,1,1,0,1,0,0,0,1,1,1,0,1,0,0,0,1,0,1,0,1) 12 if (BN42, BN43..BN105) = (1,1,1,0,1,1,0,0,0,0,1,1,0,1,1,1,0,1,0,1,0,0,0,1,0,1,0,1,1,0,1,0,0,1,0,1,0,1,0,0,1,1,1,1,0,0,0,1,1,1,0,1,1,0,0,0,1,0,1,0,1) 13 if (BN42, BN43..BN105) = (1,1,1,0,1,1,0,0,0,0,1,1,0,1,1,1,0,1,0,1,0,0,0,1,0,1,0,1,1,0,1,0,0,1,0,1,0,1,0,0,1,1,1,1,0,0,0,1,1,1,0,1,1,0,0,0,1,0,1,0,1) The returned value in Access (Access Burst) is 20 if (BN8, BN9..BN48) = (0,1,0,0,1,0,1,1,0,1,1,1,1,1,1,1,1,0,0,1,1,0,0,1,1,0,0,1,1,0,1,0,1,0,0,0,1,1,1,1,0,0,0) 21 if (BN8, BN9..BN48) = (0,1,0,1,0,1,0,0,1,1,1,1,1,0,0,0,1,0,0,0,0,1,1,0,0,0,1,0,1,1,1,1,0,0,1,0,0,1,1,0,1) 22 if (BN8, BN9..BN48) = (1,1,1,0,1,1,1,1,0,0,1,0,0,1,1,1,0,1,0,1,0,1,1,0,0,0,0,0,1,1,0,1,1,0,1,1,1,0,1,1,1)</p> <p>15. Detected Mod scheme is the most recently detected modulation scheme. The returned value is as follows. 0 for GMSK, 1 for Normal Burst (NB) 8PSK, 2 for NB 16QAM, 3 for NB 32QAM, 11 for Higher symbol rate Burst (HB) QPSK, 12 for HB 16QAM, 13 for HB 32QAM</p> <p>16. Estimated Carrier Power (ECP) in dBm</p> <p>17. Reserved for future use – the value returned is -999.0 (floating point)</p> <p>18. Reserved for future use – the value returned is -999.0 (floating point)</p> <p>19. Reserved for future use – the value returned is -999.0 (floating point)</p>
12	<p>Returns comma-separated trace points of the Measure Trace data. These data points are floating point numbers representing the power of the signal (in dBm).</p> <p>The slot is identified by the Time Slot if its state is on. Or it is the first measured slot if the Time Slot state is off. This single slot can be seen in Burst view in View/Display</p>
13	<p>Returns comma-separated points of the upper mask (in dBm) of the single slot. The slot is identified by Time Slot if its state is on. Or it is the first measured slot if Time Slot state is off. This single slot can be seen in Burst view in View/Display.</p>
14	<p>Returns comma-separated points of the lower mask (in dBm) of the single slot. The slot is identified by Time Slot if its state is on. Or it is the first measured slot if Time Slot state is off. This single slot can be seen in Burst view in View/Display.</p>
17	<p>Returns Estimated Carrier Power (ECP) level values for the eight slots in the current frame (in dBm)</p>

n	Results Returned
18	<p>Returns comma-separated trace points of the Max Hold Trace data (in dBm) of the single slot. The slot is identified by Time Slot if its state is on. Or it is the first measured slot if Time Slot state is off. This single slot can be seen in Burst view in View/Display.</p> <p>There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>This command is available only when the Max Hold Trace State is ON.</p>
19	<p>Returns comma-separated trace points of the Min Hold Trace data (in dBm) of the single slot. The slot is identified by Time Slot if its state is on. Or it is the first measured slot if Time Slot state is off. This single slot can be seen in Burst view in View/Display.</p> <p>There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>This command is available only when the Min Hold Trace State is ON.</p>

Key Path	Meas
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11504

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control test set settings that affect the vertical axis.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11500

Ref Value

Allows you to set the absolute power reference by Burst, Multi-slot and Rise & Fall views.

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Value (Burst view and Multi-slot view)

Allows you to set the absolute power reference.

Remote Command	:DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:RLEV 5 DISP:EPVT:VIEW:WIND:TRAC:Y:RLEV?
Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Y Auto Scaling automatically changes to Off.
Default Unit	dBm
Key Path	AMPTD Y Scale
Key Path	AMPTD Y Scale
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. SubOpCode: EPVTime:VIEW[1]:WINDow[1]:Burst view RF Envelope window EPVTime:VIEW3:WINDow[1]:Multi-slot view RF Envelope window
Preset	10 dBm 0.00 dBm
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11551

Ref Value (Rise & Fall view)

Allows you to set the absolute power reference.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:RLEV e1 <real> :DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:RLEV e1?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:RLEV 5 DISP:EPVT:VIEW:WIND:TRAC:Y:RLEV?
Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Y Auto Scaling automatically changes to Off.
Default Unit	dBm
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. SubOpCode: EPVTime:VIEW2:WINDow[1]:Rising RF Envelope window EPVTime:VIEW2:WINDow2:Falling RF Envelope window
Preset	0.00 dBm
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0

EDGE Power vs. Time Measurement
AMPTD Y Scale

Instrument S/W Revision	Prior to A.02.00
Help Map ID	11552

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement. See [Attenuation@3003@i](#) under AMPTD Y Scale for more information.

Key Path	AMPTD Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div

Allows you to enter a numeric value to change the vertical display sensitivity by Burst, Multi-slot and Rise & Fall views.

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div (Burst view and Multi-slot view)

Allows you to enter a numeric value to change the vertical display sensitivity.

Remote Command	:DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:PD IVision <rel_ampl> :DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:PD IVision?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:PDIV 10 DISP:EPVT:VIEW:WIND:TRAC:Y:PDIV?
Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When you set this value manually, Y Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Subopcode: VIEW[1]:WINDow[1]:Burst view RF Envelope window VIEW3:WINDow[1]:Multi-slot view RF Envelope window
Preset	10.00
State Saved	Saved in instrument state.
Min	0.1
Max	20.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11553

Scale/Div (Rise & Fall view)

Allows you to enter a numeric value to change the vertical display sensitivity.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:PDIVision <rel_amp1> :DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:PDIVision?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:PDIV 10 DISP:EPVT:VIEW:WIND:TRAC:Y:PDIV?
Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When you set this value manually, Y Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Subopcode: VIEW2:WINDow[1]:Rising RF Envelope window VIEW2:WINDow2:Falling RF Envelope window
Preset	10.00
State Saved	Saved in instrument state.
Min	0.1
Max	20.0

EDGE Power vs. Time Measurement
AMPTD Y Scale

Instrument S/W Revision	Prior to A.02.00
Help Map ID	11554

Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement. See [Internal Preamp@3036@i](#) under the AMPTD Y Scale section for more information.

Key Path	AMPTD Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position

Allows you to set the display reference position to Top, Center, or Bottom by Burst, Multi-slot and Rise & Fall views.

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position (Burst view and Multi-slot view)

Allows you to set the display reference position to Top, Center, or Bottom.

Remote Command	:DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:RPOsition TOP CENTer BOTTom :DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALE]:RPOsition?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:RPOS CENT DISP:EPVT:VIEW:WIND:TRAC:Y:RPOS?
Key Path	AMPTD Y Scale
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SELECT to set the mode. Subopcode: VIEW[1]:WINDow[1]:Burst view RF Envelope window VIEW3:WINDow[1]:Multi-slot view RF Envelope window
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11555

Ref Position (Rise & Fall view)

Allows you to set the display reference position to Top, Center, or Bottom.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:RPOSITION TOP CENTer BOTTom :DISPlay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:RPOSITION?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:RPOS CENT DISP:EPVT:VIEW:WIND:TRAC:Y:RPOS?
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SELECT to set the mode. Subopcode: VIEW2:WINDow[1]:Rising RF Envelope window VIEW2:WINDow2:Falling RF Envelope window
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11556

Auto Scaling

Allows you to toggle Y axis auto scaling function between On and Off by Burst, Multi-slot and Rise &

EDGE Power vs. Time Measurement
AMPTD Y Scale

Fall views.

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Auto Scaling (Burst view and Multi-slot view)

Allows you to toggle Y axis auto scaling function between On and Off.

Remote Command	:DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:Y[:SCALe]:COUPle?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:COUP 0 DISP:EPVT:VIEW:WIND:TRAC:Y:COUP?
Dependencies/Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value either “Ref Value” on page 302 or “Ref Position” on page 306 manually, this parameter is set to ‘Off’ automatically.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Subopcode: VIEW[1]:WINDow[1]:Burst view RF Envelope window VIEW3:WINDow[1]:Multi-slot view RF Envelope window
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1557

Auto Scaling (Rise & Fall view)

Allows you to toggle Y axis auto scaling function between On and Off.

Remote Command	:DISP:ay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON :DISP:ay:EPVTime:VIEW2:WINDow[1] 2:TRACe:Y[:SCALe]:COUPlE?
Example	DISP:EPVT:VIEW:WIND:TRAC:Y:COUP 0 DISP:EPVT:VIEW:WIND:TRAC:Y:COUP?
Dependencies/Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value either “Ref Value” on page 351 or “Ref Position” on page 306 manually, this parameter is set to ‘Off’ automatically.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode. Subopcode: VIEW2:WINDow[1]:Rising RF Envelope window VIEW2:WINDow2:Falling RF Envelope window
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11558

Auto Couple

Operation of this key is identical across several measurements. For details about this key, see [AUTO COUPLE@3041@i.](#)

BW

Accesses a menu that enables you to control the information bandwidth functions of the test set. You can also select the filter type for the measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11505

Info BW

Sets the information bandwidth. This is the bandwidth used for the power measurement. The bandwidth is ideally wide enough to pass all the power of the bursted signal, while not being so wide that it passes noise that reduces the dynamic range and the accuracy of low level measurements.

This is an advanced control that normally does not need to be changed. Setting this to a value other than the factory default may cause invalid measurement results.

Remote Command	[:SENSe] :EPVTime :BANDwidth [:RESolution] <bandwidth> [:SENSe] :EPVTime :BANDwidth [:RESolution] ?
Example	EPVT:BAND 1000 EPVT:BAND?
Key Path	BW
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	510 kHz
State Saved	Saved in instrument state.
Min	1 kHz
Max	Hardware Dependent: No Option = 10 MHz WB (25 MHz or wider) = 25 MHz
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11519

Filter Type

Allows you to select the type of resolution bandwidth filter. Besides the familiar Gaussian filter shape, Flat Top, desirable under certain conditions, is available.

This is an advanced control that normally does not need to be changed. Setting this to a value other than the factory default may cause invalid measurement results.

Remote Command	<code>[:SENSe] :EPVTime :BANDwidth [:RESolution] :TYPE FLATtop GAUSSian [:SENSe] :EPVTime :BANDwidth [:RESolution] :TYPE?</code>
Example	EPVT:BAND:TYPE GAUS EPVT:BAND:TYPE?
Key Path	BW
Mode	GSM
Notes	<p>This chooses the type of filter, either Gaussian or Flat (Flatop). Gaussian is the best choice when looking at the overall burst or the rising and falling edges, as it has excellent pulse response. Even though they have a 5.5% wider noise bandwidth for the same -3 dB bandwidth as a flat top filter, that is only 0.23 dB more noise, and their step response is much cleaner and free of overshooting and ringing. If you want to precisely examine just the useful part of the burst, choose Flat. This is an advanced control that normally does not need to be changed. Setting this to a value other than the factory default, may cause invalid measurement results.</p> <p>FLATtop – a filter with a flat amplitude response, which provides the best amplitude accuracy.</p> <p>GAUSSian – a filter with Gaussian characteristics, which provides the best pulse response.</p>
Preset	GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian Flattop
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11520

Cont (Continuous Measurement/Sweep)

Operation of this key is identical across all measurements. For details about this key, see [Cont \(Continuous Measurement/Sweep\)@3309@i](mailto:Cont(Continuous Measurement/Sweep)@3309@i).

FREQ Channel

Operation of this key is identical across all measurements. For details about this key, see [Front Panel Key@5524@i.](#)

Key Path	Front-panel key
Help Map ID	0

Input/Output

Operation of this key is identical across several measurements. For details about this key, see [Input/Out@3065@i](#).

Key Path	Front-panel key
Help Map ID	0

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1502

Select Marker

Displays 12 markers available for selection.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1515

Marker Type

Sets the marker control mode as described under **Normal**, **Delta** and **Off**, below. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Remote Command	:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELTa OFF :CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE?
Example	CALC:EPVT:MARK:MODE OFF CALC:EPVT:MARK:MODE?
Key Path	Marker
Mode	GSM
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X-axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11535

Marker X-axis Value (Remote Command Only)

Sets the marker X-axis value in the current marker X-axis scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real> :CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ?
Example	CALC:EPVT:MARK3:X 0 CALC:EPVT:MARK3:X?
Dependencies/Couplings	Max value is changed by Meas Time parameter value.
Mode	GSM
Notes	If no suffix is sent, uses the fundamental units for the current marker X-axis scale. If a suffix is sent that does not match the current marker X-axis scale unit, an error “Invalid suffix” is generated. The query returns the marker’s absolute X-axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X-axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	After a preset, all markers are turned OFF, so Marker X-axis Value query returns a not a number (NaN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker X-axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI

EDGE Power vs. Time Measurement
Marker

equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X-axis scale units. The entered value is immediately translated into the current X-axis scale units for setting the value of the marker.

Remote Command	:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <integer> :CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition?
Example	CALC:EPVT:MARK10:X:POS 0 CALC:EPVT:MARK10:X:POS?
Dependencies/Couplings	Max value would be changed by Sweep/Meas Time parameter value.
Mode	GSM
Notes	The query returns the marker's absolute X-axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	After a preset, all markers are turned OFF, so Marker X-axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker Y-axis Value (Remote Command Only)

Returns the marker Y-axis value in the current marker Y-axis unit.

The “result” of a marker is the value which is displayed on the second line of the Marker Result block. To properly interpret the returned value the remote programmer must also know what the test set's Y-Axis Unit is set to as described below.

A marker can have up to two results, only one of which is displayed or returned on a query, as follows:

Absolute result: every marker has an absolute result and it is simply:

For Normal and Delta markers, the Y-axis value of the trace point the marker is currently on.

The absolute result is displayed in the result block or returned on a query unless the marker control mode is **Delta**.

Relative result: if a marker's control mode is **Delta**, the relative result is displayed in the result block or returned on a query. This is the ratio of the Absolute Result of a delta marker to the Absolute Result of its

reference marker.

Remote Command	:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ?
Example	CALC:EPVT:MARK11:Y?
Mode	GSM
Notes	The query returns the marker Y-axis result. If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Properties

Accesses a menu that allows you to set marker properties and to access the marker trace menu.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11539

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

Remote Command	:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R Eference <integer> :CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R Eference?
Example	CALC:EPVT:MARK:REF 2 CALC:EPVT:MARK:REF?
Key Path	Marker, Properties
Mode	GSM

Marker

Notes	<p>A marker cannot be relative to itself so that choice is unavailable, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.”</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.</p> <p>When queried a single value is returned (the specified marker numbers relative marker).</p>
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1540

Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	<pre>:CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe RFENvelope UMASK LMASK MAXRFenvelop MINRFenvelop :CALCulate:EPVTime:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe?</pre>
Example	<pre>CALC:EPVT:MARK:TRAC LMAS CALC:EPVT:MARK:TRAC?</pre>
Dependencies/Couplings	<p>Max Hold RF Envelop is only available when Max Trace is set to On. Min Hold RF Envelop is only available when Min Hold Trace is set to On. Otherwise, the menu keys are unavailable and the commands are unavailable.</p>
Key Path	Marker, Properties
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset	RFENvelope
State Saved	Saved in instrument state.
Range	RF Envelope Upper Mask Lower Mask Max Hold RF Envelope Min Hold RF Envelope
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1541

Couple Markers

When this function is **On**, moving any marker causes an equal X-axis movement of every other marker which is not **Off**. By “equal X-axis movement” we mean that we preserve the difference between each marker’s X-axis value (in the fundamental x-axis units of the trace that marker is on) and the X-axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:EPVTime:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:EPVTime:MARKer:COUPle[:STATe]?
Example	CALC:EPVT:MARK:COUP ON CALC:EPVT:MARK:COUP?
Key Path	Marker
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11542

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:EPVTime:MARKer:AOff
Example	CALC:EPVT:MARK:AOff
Key Path	Marker
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11543

Marker Function

There is no functionality for this Front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	11536

Marker To

There is no functionality for this Front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	11533

Meas

Operation of this key is identical across several measurements. For details about this key, see Meas@4008@i.

Key Path	Front-panel key
Help Map ID	0

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11508

Avg/Hold Num

Sets the number of bursts that are averaged. After the specified number of bursts (average counts), the averaging mode (termination control) setting determines the averaging action.

Remote Command	[:SENSe]:EPVTime:AVERage:COUNT <integer> [:SENSe]:EPVTime:AVERage:COUNT? [:SENSe]:EPVTime:AVERage[:STATe] OFF ON 0 1 [:SENSe]:EPVTime:AVERage[:STATe]?
Example	EPVT:AVER:COUN 3 EPVT:AVER:COUN? EPVT:AVER 1 EPVT:AVER?
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	10000
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11521

Avg Mode

Selects the type of termination control used for the averaging function. This selection only affects the

EDGE Power vs. Time Measurement

Meas Setup

averaging after the number of N averages is reached (set using the Averages, Avg Bursts, or Avg Number key).

Exponential averaging SCPI:EXponential	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals. The weighting factor N is set using the Averages, Avg Bursts key.
Repeat averaging SCPI:REPeat	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart key when the Single measurement finishes.

Remote Command	[:SENSE] :EPVTime :AVERage :TCONtrol EXPonential REPeat [:SENSE] :EPVTime :AVERage :TCONtrol ?
Example	EPVT:AVER:TCON REP EPVT:AVER:TCON?
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	EXPonential
State Saved	Saved in instrument state.
Range	Exp Repeat
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1522

Avg Type

Selects the averaging type, according to the following alternatives:

KEY:Pwr Avg (RMS) SCPI:RMS	True power averaging that is equivalent to taking the RMS value of the voltage. It is the most accurate type of averaging.
KEY:Log-Pwr Avg (Video) SCPI:LOG	Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power.
KEY:None SCPI:MAXimum	Keeps track of the maximum values.
KEY:None SCPI:MINimum	Keeps track of the minimum values.

KEY:None SCPI:MXMinimum	Keeps track of the maximum and minimum values.
----------------------------	--

Remote Command	[:SENSe] :EPVTime :AVERage :TYPE LOG RMS MAXimum MINimum MXMinimum [:SENSe] :EPVTime :AVERage :TYPE?
Example	EPVT:AVER:TYPE RMS EPVT:AVER:TYPE?
Dependencies/Couplings	Selecting MAXimum MINimum MXMinimum shows “Max Hold Trace” on page 359 or and “Min Hold Trace” on page 360. Measure Trace stays in RMS or Video average state.
Key Path	Meas Setup
Mode	GSM
Notes	Maximum Minimum Max&Min can be selected only via SCPI. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	RMS
State Saved	Saved in instrument state.
Range	Pwr Avg (RMS) Log-Pwr Avg (Video)
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11523

Meas Time

Allows you to measure more than one time slot. Enter a value in integer increments of “slots” with a range of 1 to 8. The actual measure time, in μ s, is set somewhat longer than the specified number of slots, to view the complete burst.

Remote Command	[:SENSe] :EPVTime :SWEep :TIME <integer> [:SENSe] :EPVTime :SWEep :TIME?
Example	EPVT:SWE:TIME 8 EPVT:SWE:TIME?
Dependencies/Couplings	Scale/Div of X scale of Multi Slot View varies according to this value. Scale/Div should be adjusted to show set meas time.
Key Path	Meas Setup
Mode	GSM

EDGE Power vs. Time Measurement
Meas Setup

Notes	The actual sweep time may be slightly larger than required Sweep Time due to limited trace point resolution, this is a hardware dependency. You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	1 slot
State Saved	Saved in instrument state.
Min	1
Max	8
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	I1528

Burst Sync

Allows you to choose the source used to synchronize the measurement to the “T0” point of the EDGE burst. The “T0” point is defined as the time point of the transition from bit 13 to bit 14 of the midamble training sequence for a given time slot. The Burst Search Threshold setting (in the Mode Setup keys under Demod menu) applies to both Training Seq and RF Amptd. Pressing the Burst Sync key brings up a menu with some or all of the following choices:

Training Seq (SCPI: TSEquence)

RF Amptd (SCPI: RFBurst)

None (SCPI: NONE)

Remote Command	[:SENSE] :EPVTime:BSYNc:SOURce TSEquence RFBurst NONE [:SENSE] :EPVTime:BSYNc:SOURce?
Example	EPVT:BSYN:SOUR NONE EPVT:BSYN:SOUR?
Dependencies/Couplings	When Burst Type in the Mode Setup menu is set to Mixed, this menu key is unavailable and Training Sequence (TSC) is used for synchronization. The “Training Seq” is shown on Meas Bar. The sync algorithm always runs in Training Sequence (TSC) synchronization mode in case of “Mixed” because Burst Type can be determined by looking at TSC in the signal. Original selection of Burst Sync becomes effective again when Burst Type selection is changed from “Mixed” to another one. If the selected Burst Sync is “NONE”, the key “Timeslot Length” on page 334 becomes active. Otherwise the key is unavailable.
Key Path	Meas Setup
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	TSEquence
State Saved	Saved in instrument state.
Range	Training Seq RF Amptd None
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11524

IF Gain

To take full advantage of the RF dynamic range of the test set, a switched IF amplifier with approximately 10 dB of gain is available. When it can be turned on without an overload, the dynamic range is always better with it on than off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

Key Path	Meas Setup
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11525

IF Gain Auto

Activates the auto rules for IF Gain

Remote Command	[:SENSE] :EPVTime : IF :GAIN :AUTO [:STATe] ON OFF 1 0 [:SENSE] :EPVTime : IF :GAIN :AUTO [:STATe] ?
Example	EPVT:IF:GAIN:AUTO ON EPVT:IF:GAIN:AUTO?
Dependencies/Couplings	When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed as following rule. 'auto' sets IF Gain High under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to Low.
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.

EDGE Power vs. Time Measurement
Meas Setup

Range	Auto Man
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1526

IF Gain State

Selects the range of IF gain.

Remote Command	[:SENSe] :EPVTime:IF:GAIN [:STATe] ON OFF 1 0 [:SENSe] :EPVTime:IF:GAIN [:STATe] ?
Example	EPVT:IF:GAIN ON EPVT:IF:GAIN?
Dependencies/Couplings	Couple to “ IF Gain Auto ” on page 329 force it to Man.
Key Path	Meas Setup, IF Gain
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. where ON = high gain OFF = low gain
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1527

Limit Test

Turns on or off limit pass/fail testing. Does not affect the limit line display.

Remote Command	:CALCulate:EPVTime:LIMit:TEST [:STATe] OFF ON 0 1 :CALCulate:EPVTime:LIMit:TEST [:STATe] ?
Example	CALC:EPVT:LIM:TEST ON CALC:EPVT:LIM:TEST?
Key Path	Meas Setup
Mode	GSM

Notes	<p>If set to On, the measurement results are checked against the PVT Limit parameter to see if they meet the limit requirements.</p> <p>If set to Off, the PASS/FAIL indicator on the Meas Bar goes blank.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	11529

Limit Mask

Allows you to select Limit Mask type, against which the measured data is compared.

For custom, see also:

[“Lower Mask Absolute Amplitude Levels” on page 336](#)

[“Lower Mask Points” on page 337](#)

[“Lower Mask Relative Amplitude Levels” on page 337](#)

[“Lower Mask Time Points” on page 338](#)

[“Upper Mask Absolute Amplitude Levels” on page 338](#)

[“Upper Mask Points” on page 339](#)

[“Upper Mask Relative Amplitude Levels” on page 339](#)

[“Upper Mask Time Points” on page 340](#)

KEYStandard SCPISTANDARD	The measurement algorithm uses standard-defined limit mask.
KEYCustom SCPICUSTOM	The measurement algorithm uses user-defined custom limit mask.

Remote Command	[:SENSE]:EPVTime:MASK:SElect STANDARD CUSTOM [:SENSE]:EPVTime:MASK:SElect?
Example	EPVT:MASK:SEL STAN EPVT:MASK:SEL?
Key Path	Meas Setup

EDGE Power vs. Time Measurement
Meas Setup

Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	STANdard
State Saved	Saved in instrument state.
Range	Std Custm
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	I1530

Advanced

Accesses advanced features. These features are recommended for use only by advanced users.

Key Path	Meas Setup
Instrument S/W Revision	A.02.00
Help Map ID	I1563

Ref Pwr Type

Pressing the Ref Pwr Type key allows you to choose the type of a reference power used for a limit mask. Pressing the Ref Pwr Type key brings up a menu with some or all of the following choices:

Useful Part (SCPI: UPART)

Midamble (SCPI: MAMble)

Estimated (SCPI: ESTimated)

Tailbits (SCPI: TBITs)

Remote Command	[:SENSe] :EPVTime:MASK:RPOWer:TYPE UPART MAMble ESTimated TBITs [:SENSe] :EPVTime:MASK:RPOWer:TYPE?
Example	EPVT:MASK:RPOW:TYPE UPAR EPVT:MASK:RPOW:TYPE?
Dependencies/Couplings	If the Burst Sync is set to “TSEquence”, the soft key “Estimated” becomes enabled. Otherwise the key is unavailable.
Key Path	Meas Setup, Advanced
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Preset	UPARt
State Saved	Saved in instrument state.
Range	Useful Part Midamble Estimated
Instrument S/W Revision	A.02.00
Modified at S/W Revision	A.03.00
Help Map ID	11564

Ref Power

Allows you to manually set the reference power for time mask.

Remote Command	[:SENSE]:EPVTime:MASK:RPOWer <ampl> [:SENSe]:EPVTime:MASK:RPOWer? [:SENSE]:EPVTime:MASK:RPOWer:AUTO[:STATe] OFF ON 0 1 [:SENSE]:EPVTime:MASK:RPOWer:AUTO[:STATe]?
Example	EPVT:MASK:RPOW -20 EPVT:MASK:RPOW? EPVT:MASK:RPOW:AUTO 0 EPVT:MASK:RPOW:AUTO?
Key Path	Meas Setup, Advanced
Mode	GSM
Preset	-10 ON
State Saved	Saved in instrument state.
Min	-200
Max	200
Instrument S/W Revision	A.02.00
Help Map ID	11565

Ref Pwr Offset

Allows you to set the reference power offset for time mask. The upper and lower mask amplitude level is calculated by adding the offset to the reference power for the specified mask reference power type. The offset does not have an impact on the reference power displayed in the numeric results window. This key is only available when the reference power state is set to Auto.

Remote Command	[:SENSE]:EPVTime:MASK:RPOWer:OFFSet <ampl> [:SENSe]:EPVTime:MASK:RPOWer:OFFSet?
-----------------------	--

Meas Setup

Example	EPVT:MASK:RPOW:OFFS 1 EPVT:MASK:RPOW:OFFS?
Key Path	Meas Setup, Advanced
Mode	GSM
Preset	0
State Saved	Saved in instrument state.
Min	-200
Max	200
Instrument S/W Revision	A.03.00
Help Map ID	I1566

Timeslot Length

Allows you to change how the limit mask applies for each slot, when in a multi-slot measurement.

KEYEven SCPIEVEN	The measurement algorithm generates limit mask with the same slot length. For the normal and the higher symbol rate case, all slots have 156.25 and 187.5 symbols respectively.
KEYNot Even SCPIINTEger	For the normal and the higher symbol rate case, the measurement algorithm generates limit mask for 0 and 4 with slot length 157 and 188.4 symbols respectively. For the normal and higher symbol rate case, the measurement algorithm generates limit mask for slot 1, 2, 3, 5, 6, 7 with slot length 156 and 187.2 symbols respectively. Slot 0 here is simply the first slot in the captured data, not the absolute slot determined by training sequence number.

Remote Command	[:SENSe] :EPVTime:BSYNc:SLENgth EVEN INTeger [:SENSe] :EPVTime:BSYNc:SLENgth?
Example	EPVT:BSYN:SLEN INT EPVT:BSYN:SLEN?
Dependencies/Couplings	This parameter is available only if the Burst Sync type is None. Otherwise it is unavailable.
Key Path	Meas Setup, Advanced
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	INTeger

State Saved	Saved in instrument state.
Range	Even Not Even
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	11531

Apply Custom Mask Slot

Allows you to choose whether Custom Mask is applied to the 1st active slot only or to all active slots.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSE] :EPVTime:MASK:CUSTom[:TYPE] FASLot AASLots [:SENSE] :EPVTime:MASK:CUSTom[:TYPE] ?
Example:	EPVT:MASK:CUST AASL EPVT:MASK:CUST?
Preset:	AASLots
State Saved:	Saved in instrument state.
Range:	To First Active Slot Only To All Active Slots
Readback Text:	First Active Slot All Active Slots
Initial S/W Revision:	A.07.00
Help Map ID:	11567

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	:CONFigure:EPVTime
Example	CONF:EPVT
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode
Instrument S/W Revision	Prior to A.02.00

Help Map ID	11532
-------------	-------

Custom Limit Mask (Remote Commands Only)

The following Remote Only commands in this section define the custom limit mask:

“Lower Mask Absolute Amplitude Levels” on page 336

“Lower Mask Points” on page 337

“Lower Mask Relative Amplitude Levels” on page 337

“Lower Mask Time Points” on page 338

“Upper Mask Absolute Amplitude Levels” on page 338

“Upper Mask Points” on page 339

“Upper Mask Relative Amplitude Levels” on page 339

“Upper Mask Time Points” on page 340

Lower Mask Absolute Amplitude Levels

Allows you to enter a power level for any of your mask line segments that require an absolute minimum power limit in addition to its relative limit. Each time a measurement is made, the Ref Level is determined. As the power of the Ref Level changes, all of the relative mask power levels change by the same amount.

Each relative limit is then compared to the Ref Level and an equivalent absolute power level is calculated. This power level is compared to the specified absolute limit for each line segment. If this calculated relative limit is lower than the specified absolute limit, then the value of the absolute limit is used for this segment. Therefore, if the absolute reference limit is set to a very low value, the calculated value of the reference limit is never lower, and the specified relative limit is always used for the segment.

Every time point you defined with EPVT:MASK:LOW:TIME must have a power value defined in the same order.

Remote Command:	<code>[[:SENSe]:EPVTime:MASK:LIST:LOWer:ABSolute <real>, ...</code> <code>[[:SENSe]:EPVTime:MASK:LIST:LOWer:ABSolute?</code>
Example:	<code>EPVT:MASK:LIST:LOW:ABS 0,-10,-60</code> <code>EPVT:MASK:LIST:LOW:ABS?</code>
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Dependencies/Couplings:	Relative Amplitude Levels are also changed when this value has been set.
Preset:	-200,-200
State Saved:	Saved in instrument state.
Min:	-200 dBm
Max:	100 dBm

Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Lower Mask Points

Queries the number of elements in the lower mask. This value is determined by the number of time points entered by EPVT:MASK:LIST:LOW:TIME.

Remote Command:	[:SENSE] :EPVTime:MASK:LIST:LOWer:POINTs?
Example:	EPVT:MASK:LIST:LOW:POIN?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode. Query only.
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Lower Mask Relative Amplitude Levels

Allows you to enter the relative power level for each horizontal line segment in the lower limit mask. There should be a power level for each time point entered using [:SENSE]:EPVTime:MASK:LIST:LOWer:TIME, and they must be entered in the same order. These power levels are all relative to the defined Reference Power Level (the average power in the useful part of the data). When an upper and lower limit mask have been defined, the Reference Power Level is the mid-point between these two limits at time T0.

Any portion of the signal that has no limit line segment defined for it defaults to a very low limit (-100 dB relative to the reference power). This keeps the measurement from indicating a failure for that portion of the data.

Remote Command:	[:SENSE] :EPVTime:MASK:LIST:LOWer:RELative <rel_ampl>, ... [:SENSE] :EPVTime:MASK:LIST:LOWer:RELative?
Example:	EPVT:MASK:LIST:LOW:REL -200,-200 EPVT:MASK:LIST:LOW:REL?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Dependencies/Couplings:	Absolute Amplitude Levels are also changed when this value has been set.
Preset:	-200,-200
State Saved:	Saved in instrument state.
Min:	-200
Max:	200
Help Map ID:	0

EDGE Power vs. Time Measurement
Meas Setup

Instrument S/W Revision:	Prior to A.02.00
--------------------------	------------------

Lower Mask Time Points

Allows you to enter the time points that define the horizontal line segments for the lower limit. A reference point designated “t0” is at the center of the useful data (usually the center of the burst). Each line segment to the right of the t0 reference point is designated as a positive time value and each segment to the left of t0 reference point is a negative time value.

First enter positive values in sequence starting from t0, then negative values in sequence starting from t0.

Remote Command:	[:SENSe] :EPVTime:MASK:LIST:LOWer:TIME <seconds>, ... [:SENSe] :EPVTime:MASK:LIST:LOWer:TIME?
Example:	EPVT:MASK:LIST:LOW:TIME 1,1 EPVT:MASK:LIST:LOW:TIME?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	1,-1
State Saved:	Saved in instrument state.
Min:	-1 s
Max:	1 s
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Upper Mask Absolute Amplitude Levels

Allows you to enter a power level for any of your mask line segments that require an absolute minimum power limit in addition to its relative limit. Each time a measurement is made, the Ref Level is determined (This is the power level of the useful part of the burst, or midway between the upper/lower masks). Remember that, as the power of the Ref Level changes, all of the relative mask power levels changes by the same amount.

Each relative limit is then compared to the Ref Level and an equivalent absolute power level is calculated. This power level is compared to the specified absolute limit for each line segment. If this calculated relative limit is higher than the specified absolute limit, then the value of the absolute limit is used for this segment. Therefore, if the absolute reference limit is set to a very low value (-200 dBm), the calculated value of the reference limit is never lower, and the specified relative limit is always used for the segment.

Every time point you defined with EPVT:MASK:UPP:TIME must have a power value defined in the same order.

Remote Command:	[:SENSe] :EPVTime:MASK:LIST:UPPer:ABSolute <real>, ... [:SENSe] :EPVTime:MASK:LIST:UPPer:ABSolute?
------------------------	---

Example:	EPVT:MASK:LIST:UPP:ABS -200,-200,-58,-200,-200,-200,-200,-58,-200 EPVT:MASK:LIST:UPP:ABS?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Dependencies/Couplings:	Relative Amplitude Levels are also changed when this value has been set.
Preset:	-200,-200
State Saved:	Saved in instrument state.
Min:	-200
Max:	100
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Upper Mask Points

Queries the number of elements in the upper mask. This value is determined by the number of time points entered by EPVT:MASK:LIST:UPP:TIME.

Remote Command:	[:SENSE] :EPVTime:MASK:LIST:UPPer:POINTs?
Example:	EPVT:MASK:LIST:UPP:POIN?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode. Query only.
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Upper Mask Relative Amplitude Levels

Allows you to enter the relative power level for each horizontal line segment in the upper limit mask. There should be a power level for each time point entered using [:SENSE]:EPVTime:MASK:LIST:UPPer:TIME, and they must be entered in the same order. These power levels are all relative to the defined Reference Power Level (the average power in the useful part of the data). When an upper and lower limit mask have been defined, the Reference Power Level is the mid-point between these two limits.

Remote Command:	[:SENSE] :EPVTime:MASK:LIST:UPPer:RELative <rel_ampl>, ... [:SENSE] :EPVTime:MASK:LIST:UPPer:RELative?
Example:	EPVT:MASK:LIST:UPP:REL 4,-32,-48,100,4,7,-25,-43,100 EPVT:MASK:LIST:UPP:REL?

EDGE Power vs. Time Measurement
Meas Setup

Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies/Couplings:	Absolute Amplitude Levels are also changed when this value has been set.
Preset:	100,100
State Saved:	Saved in instrument state.
Min:	-200
Max:	200
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Upper Mask Time Points

Allows you to enter the time points that define the horizontal line segments for the upper limit. A reference point designated “t0” is at the center of the useful data (usually the center of the burst). Each line segment to the right of the t0 reference point is designated as a positive time value and each segment to the left of t0 is a negative time value.

First enter positive values in sequence starting from t0, then the negative values in sequence starting from t0.

We recommend that you select a large time value for your first and last mask points (for example, -1 and +1 second). This guarantees that you have defined a limit for all the measured data.


Remote Command:	[:SENSe] :EPVTime:MASK:LIST:UPPer:TIME <seconds>, ... [:SENSe] :EPVTime:MASK:LIST:UPPer:TIME?
Example:	EPVT:MASK:LIST:UPP:TIME 1,-1 EPVT:MASK:LIST:UPP:TIME?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	1,-1
State Saved:	Saved in instrument state.
Min:	-1 s
Max:	1 s
Help Map ID:	0
Instrument S/W Revision:	Prior to A.02.00

Lower Limit within Useful Part (Remote Commands Only)

Limit Mask Useful Part Lower Normal

According to the Standards, the lower limit within the useful part of normal duration bursts (NB) is seen

as undefined for 16-QAM and 32-QAM. The lower limit (red in the Figure 1) is set to -200 by default. This command allows you to set the lower limit as you like. Only SCPI remote command is supported. Note that the lower limit is shared in the BTS and MS modes.

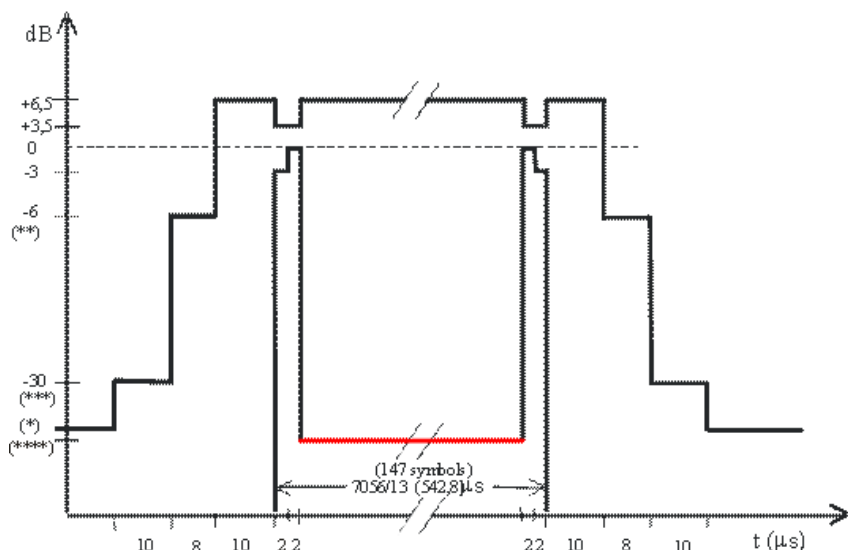


Remote Command	[:SENSE] :EPVTime:MASK [:UPART] :LOWer:NORMal QAM16 QAM32 , <rel_ampl> [:SENSE] :EPVTime:MASK [:UPART] :LOWer:NORMal ? QAM16 QAM32
Example	EPVT:MASK:LOW:NORM QAM16, -40 EPVT:MASK:LOW:NORM? QAM16
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	-200
State Saved	Saved in instrument state.
Min	-200
Max	200
Instrument S/W Revision	A.02.00
Help Map ID	0

Limit Mask Useful Part Lower Higher Symbol Rate

According to the Standards, the lower limit within the useful part for higher symbol rate bursts (HB) is seen as undefined for 16-QAM and 32-QAM. The lower limit (red in the Figure 2) is set to -200 by default. This command allows you to set the lower limit as you like. Only SCPI remote command is supported. Note that the lower limit is shared in the BTS and MS modes and in the narrow and wide pulse shaping filter modes.

EDGE Power vs. Time Measurement Meas Setup

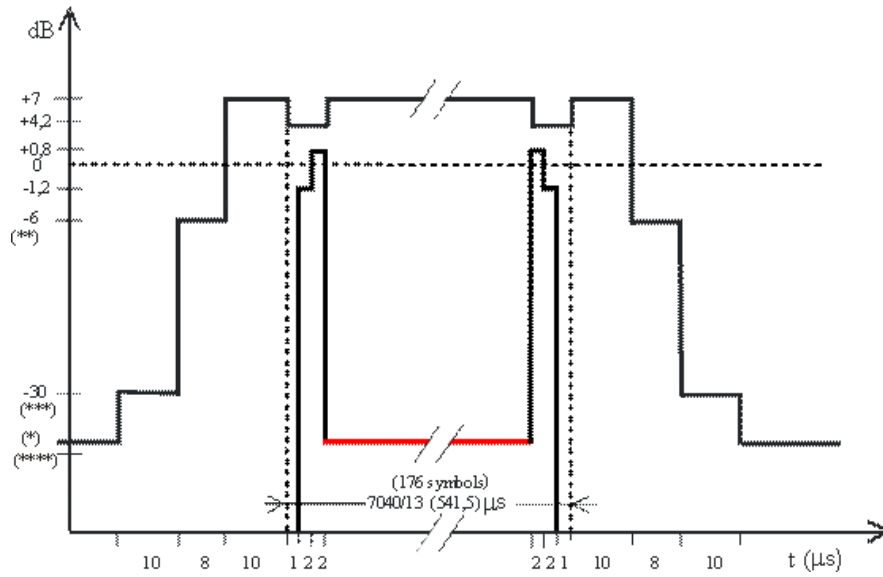

Remote Command	<code>[:SENSe] :EPVTime:MASK[:UPARt]:LOWer:HSRate QAM16 QAM32, <rel_ampl></code> <code>[:SENSe] :EPVTime:MASK[:UPARt]:LOWer:HSRate? QAM16 QAM32</code>
Example	<code>EPVT:MASK:LOW:HSR QAM16, -40</code> <code>EPVT:MASK:LOW:HSR? QAM16</code>
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use <code>INSTRument:SElect</code> to set the mode.
Preset	-200
State Saved	Saved in instrument state.
Min	-200
Max	200
Instrument S/W Revision	A.02.00
Help Map ID	0

Mode

Operation of this key is identical across all measurements. For details about this key, see [Mode@2670@i](#).

Key Path	Front-panel key
Help Map ID	0

Mode Setup

Operation of this key is identical across all measurements in this application. For details, see [Mode Setup@5520@i](mailto:ModeSetup@5520@i).

Key Path	Front-panel key
Help Map ID	0

Peak Search

There is no functionality for this Front-panel key in this measurement. When pressed, this key displays a blank menu.

Remote Command	:CALCulate:EPVTime:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example	CALC:EPVT:MARK2:MAX
Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11544

Recall

Operation of this key is identical across several measurements. For details of this key, see Recall@2637@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Restart

Operation of this key is identical across all measurements. For details about this key, see Restart@3307@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Save

Operation of this key is identical across several measurements. For details about this key, see [Save@2600@i](#).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Single

Operation of this key is identical across several measurements. For details about this key, see [Single \(Single Measurement/Sweep\)@3515@i.](#)

Source (Internal)

Operation of this key is identical across all measurements. For details about this key, see [Source \(Internal\)@35360@i](mailto:Source (Internal)@35360@i).

Key Path	Front-panel key
Help Map ID	0

SPAN X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11501

Ref Value

Allows you to set the display X reference value by Burst, Multi-slot and Rise & Fall views.

Key Path	Span X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Value (Burst view and Multi-slot view)

Allows you to set the display X reference value.

Remote Command	:DISPlay:EPVTime:VIEW [1] 3 :WINDow [1] :TRACe :X [:SCALe] :RL EVe1 <time> :DISPlay:EPVTime:VIEW [1] 3 :WINDow [1] :TRACe :X [:SCALe] :RL EVe1?
Example	DISP:EPVT:VIEW:WIND:TRAC:X:RLEV 1 DISP:EPVT:VIEW:WIND:TRAC:X:RLEV?
Dependencies/Couplings	If the “Auto Scaling” on page 355 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 355 automatically changes to Off.
Key Path	SPAN X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	–65.0 us –67 us
State Saved	Saved in instrument state.
Min	–1.00 s

EDGE Power vs. Time Measurement
SPAN X Scale

Max	1.00 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1537

Ref Value (Rise & Fall view)

Allows you to set the display X reference value.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALE]:RLEV e1 <time> :DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALE]:RLEV e1?
Example	DISP:EPVT:VIEW2:WIND2:TRAC:X:RLEV 1 DISP:EPVT:VIEW2:WIND2:TRAC:X:RLEV?
Dependencies/Couplings	If the “Auto Scaling” on page 355 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 355 automatically changes to Off.
Key Path	SPAN X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0 s 542.8 us
State Saved	Saved in instrument state.
Min	-1.00 s
Max	1.00 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1538

Scale/Div

Allows you to set the display X scale/division value by Burst, Multi-slot and Rise & Fall views.

Key Path	Span X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div (Burst view and Multi-slot view)

Allows you to set the display X scale/division value.

Remote Command	:DISPlay:EPVTime:VIEW [1] 3:WINDow [1] :TRACe:X[:SCALe]:PDIVision <time> :DISPlay:EPVTime:VIEW [1] 3:WINDow [1] :TRACe:X[:SCALe]:PDIVision?
Example	DISP:EPVT:VIEW:WIND:TRAC:X:PDIV 1ms DISP:EPVT:VIEW:WIND:TRAC:X:PDIV?
Dependencies/Couplings	If the “Auto Scaling” on page 355 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 355 automatically changes to Off.
Key Path	Span X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	70.00 us 84.00 us
State Saved	Saved in instrument state.
Min	1.00 ns
Max	1.00 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11545

Scale/Div (Rise & Fall view)

Allows you to set the display X scale/division value.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALe]:PDIVision <time> :DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALe]:PDIVision?
Example	DISP:EPVT:VIEW2:WIND2:TRAC:X:PDIV 1ms DISP:EPVT:VIEW2:WIND2:TRAC:X:PDIV?
Dependencies/Couplings	If the “Auto Scaling” on page 355 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 355 automatically changes to Off.
Key Path	Span X Scale
Mode	GSM

EDGE Power vs. Time Measurement
SPAN X Scale

Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	10.00 us
State Saved	Saved in instrument state.
Min	1.00 ns
Max	1.00 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11546

Ref Position

Allows you to set the display reference position to Left, Center or Right by Burst, Multi-slot and Rise & Fall views.

Key Path	Span X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position (Burst view and Multi-slot view)

Allows you to set the display reference position to Left, Center or Right.

Remote Command	:DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:X[:SCALE]:RPOsition LEFT CENTer RIGHT :DISPlay:EPVTime:VIEW[1] 3:WINDow[1]:TRACe:X[:SCALE]:RPOsition?
Example	DISP:EPVT:VIEW:WIND:TRAC:X:RPOS LEFT DISP:EPVT:VIEW:WIND:TRAC:X:RPOS?
Key Path	SPAN X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11547

Ref Position (Rise & Fall view)

Allows you to set the display reference position to Left, Center or Right.

Remote Command	:DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT :DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALe]:RPOStion?
Example	DISP:EPVT:VIEW2:WIND2:TRAC:X:RPOS LEFT DISP:EPVT:VIEW2:WIND2:TRAC:X:RPOS?
Key Path	SPAN X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	CENTer
State Saved	Saved in instrument state.
Range	Left Ctr Right
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11548

Auto Scaling

Allows you to toggle the scale coupling function between On and Off by Burst, Multi-slot and Rise & Fall views.

Key Path	Span X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Auto Scaling (Burst view and Multi-slot view)

Allows you to toggle the scale coupling function between On and Off.

Remote Command	:DISPlay:EPVTime:VIEW [1] 3:WINDow [1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON :DISPlay:EPVTime:VIEW [1] 3:WINDow [1]:TRACe:X[:SCALe]:COUPle?
Example	DISP:EPVT:VIEW:WIND:TRAC:X:COUP OFF DISP:EPVT:VIEW:WIND:TRAC:X:COUP?

EDGE Power vs. Time Measurement
SPAN X Scale

Dependencies/Couplings	See Notes
Key Path	Span X Scale
Mode	GSM
Notes	<p>Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either “Ref Value” on page 351 or “Scale/Div” on page 352 manually, X Auto Scaling automatically changes to Off.</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.</p>
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I1549

Auto Scaling (Rise & Fall view)

Allows you to toggle the scale coupling function between On and Off.

Remote Command	<pre>:DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALE] :COU ple 0 1 OFF ON :DISPlay:EPVTime:VIEW2:WINDow [1] 2:TRACe:X[:SCALE] :COU ple?</pre>
Example	<pre>DISP:EPVT:VIEW:WIND:TRAC:X:COUP OFF DISP:EPVT:VIEW:WIND:TRAC:X:COUP?</pre>
Dependencies/Couplings	See Notes
Key Path	Span X Scale
Mode	GSM
Notes	<p>Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either “Ref Value” on page 351 or “Scale/Div” on page 352 manually, X Auto Scaling automatically changes to Off.</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.</p>
Preset	ON
State Saved	Saved in instrument state.
Range	On Off

Instrument S/W Revision	Prior to A.02.00
Help Map ID	11550

Sweep/Control

Operation of this key is identical across several measurements. For details about this key, see [Sweep / Control@3273@i](mailto:Sweep/Control@3273@i).

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Trace/Detector

Accesses a menu that enables you to show (On) or hide (Off) the Max Hold Trace and Min Hold Trace. Max/Min Hold Traces are held during the averaging cycle.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11503

Max Hold Trace

This key enables you to show (On) or hide (Off) the Max Hold Trace.

Remote Command	:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe] ON OFF 1 0 :DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]?
Example	DISP:EPVT:VIEW:WIND:TRAC:MAXH ON DISP:EPVT:VIEW:WIND:TRAC:MAXH?
Dependencies/Couplings	Selecting [:SENSe]:EPVTime:AVERAge:TYPE MAXimum MXMinimum forces this parameter to ON.
Key Path	Trace/Detector
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11517

Min Hold Trace

This key enables you to show (On) or hide (Off) the Min Hold Trace.

Remote Command	:DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATE] ON OFF 1 0 :DISPlay:EPVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATE]?
Example	DISP:EPVT:VIEW:WIND:TRAC:MINH ON DISP:EPVT:VIEW:WIND:TRAC:MINH?
Dependencies/Couplings	Selecting [:SENSe]:EPVTime:AVERAge:TYPE MINimum MXMinimum forces this parameter to ON.
Key Path	Trace/Detector
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11518

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. Operation of this key is identical across all measurements. For details about this key, see Trigger@3371@i for more information.

Key Path	Front-panel key
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	11568

View/Display

Accesses a menu of functions that enable you to:

- Set the display parameters for the current measurement
- Select the View

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11562

Display

Accesses a menu of functions that enable you to set the display parameters for the current measurement.

See the section [Display@3440@i](#) for more information.

Key Path	View/Display
Instrument S/W Revision	Prior to A.02.00
Help Map ID	Use 3440

View Selection

Accesses a menu that allows you to select the desired view of the measurement.

For details of Remote Commands associated with the measurement's views, see the following sections:

[“View Selection by name \(Remote Command Only\).” on page 363](#)

[“View Selection by number \(Remote Command Only\)” on page 363](#)

The following view selections are available:

- Burst (SCPI: ALL) – views the entire burst of interest as determined by the current trigger source, burst sync, training sequence, and timeslot settings. To view a different burst of interest you must set these parameters for the selected timeslot. To view multiple slots, use the Multi-Slot key described below. For full details, see [“Burst View” on page 363](#).
- Rise & Fall (SCPI: BOTH) – zooms in on the rising and falling portions of the burst being tested. For full details, see [“Rise & Fall View” on page 367](#).
- Multi-Slot (SCPI: MSLot) – views the entire sweep as specified by the current Meas Time setting. Power levels for each active slot are listed in a table below the timeslot display. For full details, see [“Multi-Slot View” on page 368](#).

View Selection by name (Remote Command Only).

Remote Command	:DISPlay:EPVTime:VIEW[:SElect] ALL BOTH MSLot :DISPlay:EPVTime:VIEW[:SElect]?
Example	DISP:EPVT:VIEW:SEL ALL DISP:EPVT:VIEW:SEL?
Key Path	View/Display
Mode	GSM
Preset	ALL
State Saved	Saved in instrument state.
Range	Burst Rise & Fall Multi-Slot
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11514

View Selection by number (Remote Command Only)

Remote Command	:DISPlay:EPVTime:VIEW:NSElect <integer> :DISPlay:EPVTime:VIEW:NSElect?
Example	DISP:EPVT:VIEW:NSEL 3 DISP:EPVT:VIEW:NSEL?
Mode	GSM
Notes	1: Burst 2: Rise & Fall 3: Multi-Slot You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	3
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Burst View

Shows power vs. time and mask result for the EDGE burst. This view has two windows:


- “RF Envelope Window” on page 364

EDGE Power vs. Time Measurement View/Display

- “Numeric Results Window” on page 365

For details of the associated Remote Commands, see Section “View Selection” on page 362.

The figure below shows an example of the Burst View.

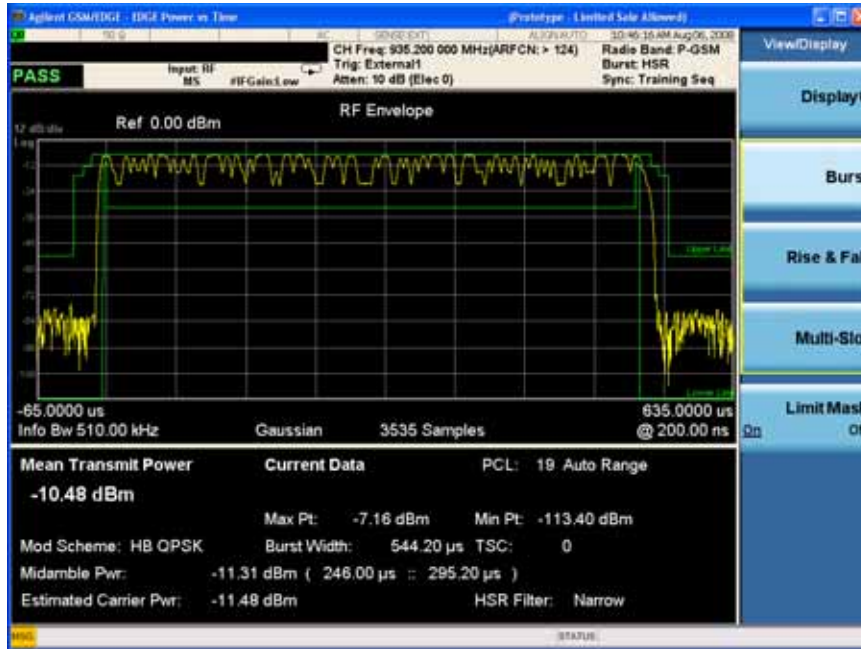

RF Envelope Window

Shows the trace and mask lines. Max Hold Trace and Min Hold Trace are not displayed in this figure.

The following tables provide details of the traces and masks.

Measured Trace

Marker Trace	Yes
Corresponding Trace	n=7
Color	Yellow

Max Hold Trace

Marker Trace	Yes
Corresponding Trace	n=8
Color	Water Blue

Min Hold Trace

Marker Trace	Yes
Corresponding Trace	n=9

Color	Magenta
-------	---------

Upper Mask

Marker Trace	Yes
Corresponding Trace	n=3
Color	Green

Lower Mask

Marker Trace	Yes
Corresponding Trace	n=4
Color	Green

Numeric Results Window

Name	Corresponding Trace	Description	Display Format
Mean Transmit Power	n=1, 3rd	The power of N averaged bursts, if averaging is on. The power is averaged across the useful part of the burst. If there are multiple bursts in the acquired trace, only one burst is used for average. This means that N traces are acquired to make the complete average. If “Avg/Hold Num” on page 325 is off or the number is 1, this number is the power averaged across the useful part of the most recently acquired data	##.## dBm
Mean Transmit Power (Current Data)	n=1, 2nd	The power averaged across the useful part of the most recently acquired data. If “Avg/Hold Num” on page 325 is off or the number is 1, the trace disappears from the window since the number is identical to the Mean Transmit Power above.	##.## dBm
Max Pt (Current Data)	n=1, 9th	The maximum value of the most recently acquired data.	##.## dBm
Min Pt (Current data)	n=1, 10th	The minimum value of the most recently acquired data.	##.## dBm

EDGE Power vs. Time Measurement
View/Display

Name	Corresponding Trace	Description	Display Format
Mod Scheme	N=10,15th	The modulation scheme used for a burst signal of a specified time slot.	“NB GMSK”, “NB 8PSK”, “NB 16QAM”, “NB 32QAM”, “HB QPSK”, “HB 16QAM”, “HB 32QAM”, “ACCESS”, or “SYNC”
Burst Width	n=1, 8th	The width of the burst measured at –3 dB below the mean power in the useful part of the burst.	###.## μ s
Midamble Pwr	None	The (Mask Reference) Power is the average power in dBm of the middle 16 symbols in the midamble. The times displayed are the corresponding start and stop times of the middle 16 symbols.	###.## dBm (###.# μ s:: ###.# μ s)
1st Error Pt	n=1, 13th	The time which indicates the point on the X Scale where the first failure of a signal was detected. Use a marker to locate this point in order to examine the nature of the failure. If the limit passes, disappear from the window.	##.## μ s
PCL	None	Power Control Level that determined by the Mean Transmit Power and used to determine the limit mask. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off.	PCL: ## Auto

Name	Corresponding Trace	Description	Display Format
Detected TSC	None	The most recently detected TSC. The returned value is 0~7 (Burst Type: Normal/Higher Symbol Rate (HSR)) if TSC detected. If TSC not detected, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF). The returned value is 10~12 if Synchronization burst. The returned value is 20~22 if Access burst.	TSC: ##
Estimated Carrier Pwr	N=10, 16th	Estimated Carrier Power calculated from the specified time slot.	###.##dBm
HSR Filter	None	The specified pulse shaping filter used for higher symbol rate modulation	“Narrow” or “Wide”

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11559

Rise & Fall View

This view has three windows:

Rising RF Envelope Window. The parameters of this window are identical to those of the RF Window in the [“Burst View” on page 363](#).


Falling RF Envelope Window. The parameters of this window are identical to those of the RF Window in the [“Burst View” on page 363](#).

Numeric Results Window. The parameters of this window are identical to those of the Numeric Results Window in the [“Burst View” on page 363](#).

For details of the associated Remote Command, see Section [“View Selection” on page 362](#).

The figure below shows an example of the Rise & Fall View.

EDGE Power vs. Time Measurement
View/Display

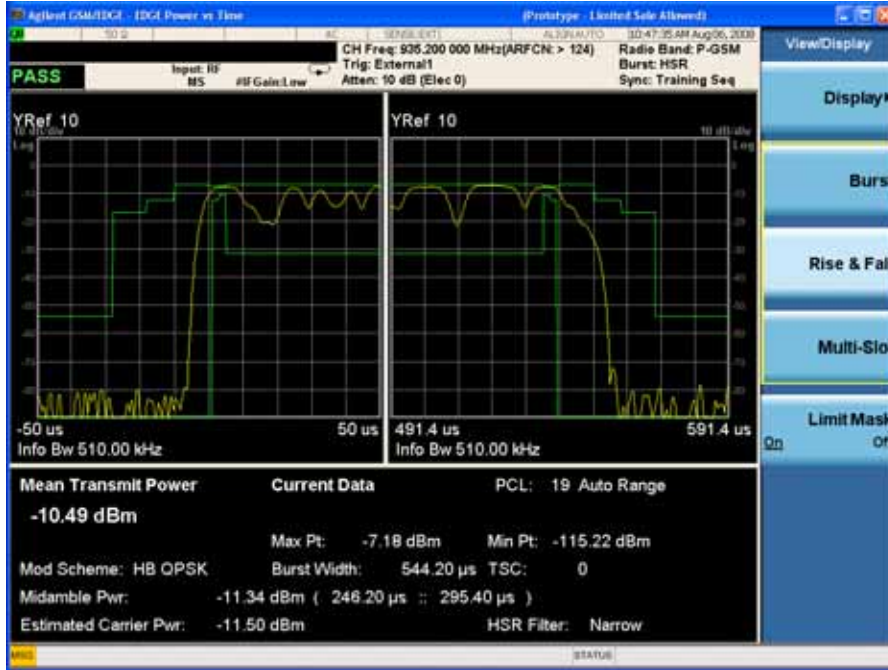

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11560


Multi-Slot View

This view has two windows.

- “RF Envelope Window” on page 369
- “Numeric Results Window” on page 369

For details of the associated Remote Command, see Section “View Selection” on page 362.

The figure below shows an example of the Multi Slot View.

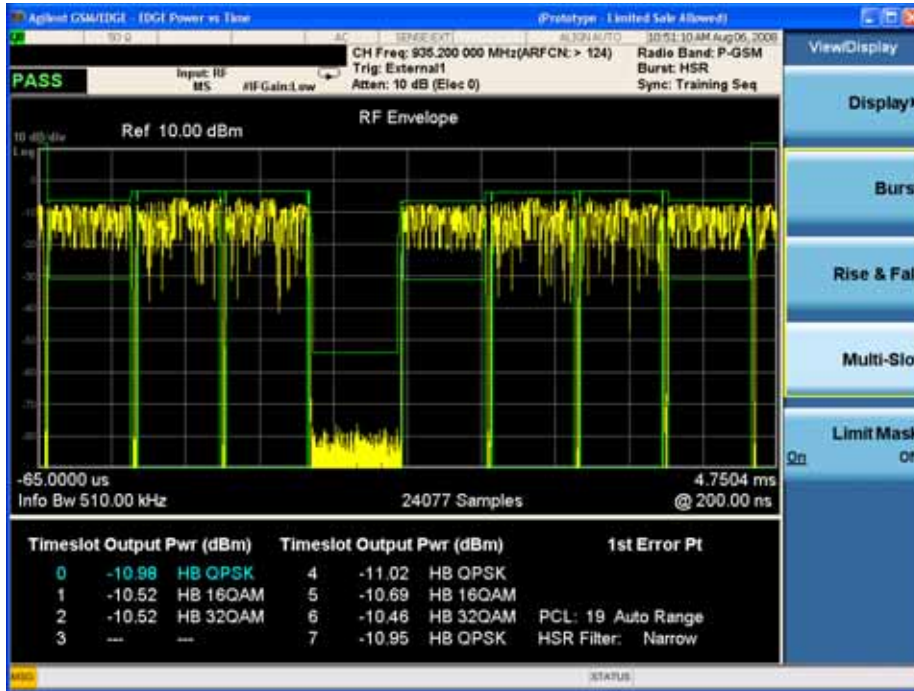

RF Envelope Window

The parameters of this window are identical to those of the RF Window in the “Burst View” on page 363.

Numeric Results Window

The output power of multi slots whose number is defined by Meas Time.

Name	Corresponding Trace	Description	Display Format
1st Error Pt	None	The time which indicates the point on the X Scale where the first failure of a signal was detected. Use a marker to locate this point in order to examine the nature of the failure.	##.## μ s
Timeslot Output Pwr	n=7	Power level values for each slot in the current frame	##.## dBm

EDGE Power vs. Time Measurement
View/Display

Name	Corresponding Trace	Description	Display Format
Mod Scheme	None	The modulation scheme used for a burst signal of each time slot. If burst isn't found at a time slot, the word "---" is displayed.	"NB GMSK", "NB 8PSK", "NB 16QAM", "NB 32QAM", "HB QPSK", "HB 16QAM", "HB 32QAM", "ACCESS", "SYNC", or "---"
PCL	None	Power Control Level that determined by the Mean Transmit Power and used to determine the limit mask. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off.	PCL: ## Auto
HSR Filter	None	The specified pulse shaping filter used for higher symbol rate modulation	"Narrow" or "Wide"

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11561

Limit Mask

This setting is used to show (On) or hide (Off) the limit mask that is displayed on the graticule. It also disables limit checking.

NOTE This does not affect any calculation taking place.

Remote Command	:DISPlay:EPVTime:LIMit:MASK OFF ON 0 1 :DISPlay:EPVTime:LIMit:MASK?
-----------------------	--

Example	DISP:EPVT:LIM:MASK 1 DISP:EPVT:LIM:MASK?
Key Path	View/Display
Mode	GSM
Notes	This parameter only hides or shows the limit mask line on the display. The PASS/FAIL limit check is done if “Limit Test” on page 330 is set to On whether the Limit Mask state is set to On or Off. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	11516

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

EDGE Power vs. Time Measurement
View/Display

EVM (Error Vector Magnitude) is the measure of modulation quality for EDGE. Since EDGE uses PSK/QAM modulations, the transmitter's phase, frequency, and amplitude accuracy are critical to the communications system's performance.

This topic contains the following sections:

[“Measurement Commands for EDGE EVM” on page 373](#)

[“Remote Command Results for EDGE EVM” on page 374](#)

Measurement Commands for EDGE EVM

The following commands can be used to retrieve the measurement results:

:CONFigure:EEVM

:CONFigure:EEVM:NDEFault

:INITiate:EEVM

:FETCh:EEVM[n] ?

:READ:EEVM[n] ?

:MEASure:EEVM[n] ?

For more measurement related commands, see [Remote Measurement Functions@29978](#).

Remote Command Results for EDGE EVM

n	Results Returned
0	<p>Returns unprocessed I/Q trace data, as a data array of comma-separated trace points, in volts.</p> <p>The sample rate is 637.5 kHz with option B40. Otherwise the sample rate is 2.5 MHz.</p>
1 (default)	<p>Returns the following scalar results:</p> <ol style="list-style-type: none"> 1. RMS 95th %ile EVM – a floating point number (in percent) of EVM over 95% of the entire measurement area. 2. Average RMS EVM – a floating point number (in percent) of EVM over the entire measurement area. 3. Maximum RMS EVM – a floating point number (in percent) of highest EVM over the entire measurement area. 4. Average Peak EVM – a floating point number (in percent) of the average of the peak EVMs. Take the peak EVMs from each burst and average them together. 5. Maximum Peak EVM – a floating point number (in percent) of the maximum peak EVM. Take the peak EVMs from each burst and identify the highest peak.
1 (Cont.)	<ol style="list-style-type: none"> 6. Symbol position of the peak EVM – an integer number of the symbol position where the peak EVM error is detected. 7. Average Magnitude error – a floating point number (in percent) of average magnitude error over the entire measurement area. 8. Maximum Magnitude error – a floating point number (in percent) of maximum magnitude error over the entire measurement area. 9. Average Phase error – a floating point number (in degree) of average phase error over the entire measurement area. 10. Maximum Phase error – a floating point number (in degree) of maximum phase error over the entire measurement area. 11. Average Frequency error – a floating point number (in Hz) of the frequency error in the measured signal. 12. Maximum Frequency error – a floating point number (in Hz) of the highest frequency error in the measured signal. 13. I/Q origin offset – a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin. 14. Amplitude Droop Error – a floating point number (in dB) of the amplitude droop measured across the 142 symbol burst. 15. Trigger to T0 - a floating-point number (in sec) of the time interval between the trigger point to T0. T0 means the transition time from symbol 13 to symbol 14 of the midamble training sequence for each time slot.

n	Results Returned
2	Returns series of floating point numbers (in percent) that represent each sample in the EVM vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol.
3	Returns series of floating point numbers (in percent) that represent each sample in the magnitude error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol.
4	Returns series of floating point numbers (in degree) that represent each sample in the phase error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol.
5	<p>Returns series of floating point numbers that alternately represent I and Q pairs of the final corrected measured data for the last slot. The magnitude of each I and Q pair are normalized to 1.0. The first number is the in-phase (I) sample of symbol 0 decision point and the second is the quadrature-phase (Q) sample of symbol 0 decision point. As in the EVM, there is 1 point per symbol, so the series of numbers is:</p> <p>1st number = I of the symbol 0 decision point 2nd number = Q of the symbol 0 decision point ... (2) + 1 (or 3rd) number = I of the symbol 1 decision point (2) + 2 (or 4th) number = Q of the symbol 1 decision point ... (2) x N + 1 number = I of the symbol N decision point (2) x N + 2 number = Q of the symbol N decision point</p>
6	<p>Returns comma-separated scalar values of pass/fail (0.0 = passed, 1.0 = failed) results determined by testing EVM.</p> <p>Test results of RMS EVM Test results of Peak EVM Test results of 95 %ile EVM Test results of I/Q Origin Offset Test results of Frequency Error</p>
7	<p>Returns series of integer values that represent the demoded symbols of the final corrected measured data for the last slot.</p> <p>bit/symbol is represented as a value between</p> <p>0 – 7 (octal): 8PSK 142 symbols 0 – 3 (octal): QPSK 169 symbols 0 – 15 (decimal): 16QAM 169 symbols 0 – 31 (decimal): 32QAM 169 symbols</p>

n	Results Returned
8	<p>Returns the following scalar results:</p> <ol style="list-style-type: none"> 1. RMS 95th %ile EVM – a floating point number (in percent) of EVM over 95% of the entire measurement area. 2. Average RMS EVM – a floating point number (in percent) of EVM over the entire measurement area. 3. Maximum RMS EVM – a floating point number (in percent) of highest EVM over the entire measurement area. 4. Average Peak EVM – a floating point number (in percent) of the average of the peak EVMs. Take the peak EVMs from each burst and average them together. 5. Maximum Peak EVM – a floating point number (in percent) of the maximum peak EVM. Take the peak EVMs from each burst and identify the highest peak. 6. Symbol position of the peak EVM – an integer number of the symbol position where the peak EVM error is detected. 7. Average Magnitude error – a floating point number (in percent) of average magnitude error over the entire measurement area. 8. Maximum Magnitude error – a floating point number (in percent) of maximum magnitude error over the entire measurement area. 9. Average Phase error – a floating point number (in degree) of average phase error over the entire measurement area. 10. Maximum Phase error – a floating point number (in degree) of maximum phase error over the entire measurement area. 11. Average Frequency error – a floating point number (in Hz) of the frequency error in the measured signal. 12. Maximum Frequency error – a floating point number (in Hz) of the highest frequency error in the measured signal. 13. I/Q origin offset – a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin. 14. Amplitude Droop Error – a floating point number (in dB) of the amplitude droop measured across the 142 symbol burst. 15. Trigger to T0 - a floating-point number (in sec) of the time interval between the trigger point to T0. T0 means the transition time from symbol 13 to symbol 14 of the midamble training sequence for each time slot. 16. Timing Offset of AM/PM path - a floating number (in sec) of the time interval between Amplitude Modulation path and Phase Modulation path. 17. Detected TSC is the most recently detected TSC. The returned value is 0~7 (Burst Type: Normal) if TSC detected. If TSC not detected, the returned value is -999.0. If Amptd or NONE (Power vs. Time only) specified in Sync Type, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF).

n	Results Returned
8 (Cont.)	<p>18. Detected Mod Scheme (0:GMSK, 1:NB 8PSK, 2:NB 16QAM, 3:NB 32QAM, 10:NB AQPSK, 11:HB QPAK, 12:HB 16QAM, 13:HB 32QAM) Note that value except for GMSK and 8PSK return only when U9071A-3FP (EDGE Evo license) is installed.</p> <p>19. Reserved for future use (floating point) – the value returned is –999.0.</p> <p>20. Reserved for future use (floating point) – the value returned is –999.0.</p> <p>21. Reserved for future use (floating point) – the value returned is –999.0.</p> <p>22. Reserved for future use (floating point) – the value returned is –999.0.</p>
9	<p>Returns series of floating point numbers that alternately represent I and Q pairs of the final corrected derotated measured data for the last slot. The magnitude of each I and Q pair are normalized to 1.0. The first number is the in-phase (I) sample of symbol 0 decision point and the second is the quadrature-phase (Q) sample of symbol 0 decision point. As in the EVM, there is 1 point per symbol, so the series of numbers is:</p> <p>1st number = I of the symbol 0 decision point 2nd number = Q of the symbol 0 decision point . . . (2) +1 (or 3rd) number = I of the symbol 1 decision point (2) +2 (or 4th) number = Q of the symbol 1 decision point . . . (2) * N + 1 number = I of the symbol N decision point (2) * N + 2 number = Q of the symbol N decision point</p>
10	<p>Returns series of floating point numbers (in percent) that represent each sample in Max Hold of the EVM vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol.</p> <p>This command is available only when the Max Hold Trace State is ON.</p>
11	<p>Returns series of floating point numbers (in percent) that represent each sample in Min Hold of the EVM vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol. This command is available only when the Min Hold Trace State is ON.</p>
12	<p>Returns series of floating point numbers (in percent) that represent each sample in Max Hold of the magnitude error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol. This command is available only when the Max Hold Trace State is ON.</p>
13	<p>Returns series of floating point numbers (in percent) that represent each sample in Min Hold of the magnitude error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol. This command is available only when the Min Hold Trace State is ON.</p>
14	<p>Returns series of floating point numbers (in degree) that represent each sample in Max Hold of the phase error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol. This command is available only when the Max Hold Trace State is ON.</p>

n	Results Returned
15	Returns series of floating point numbers (in degree) that represent each sample in Min Hold of the phase error vector trace for the last slot. The first number is the symbol 0 decision point and there is 1 point per symbol. This command is available only when the Min Hold Trace State is ON.
16	Returns series of integer values that represent the demoded symbols of VAMOS subchannel A of the final corrected measured data for the last slot.
17	Returns series of integer values that represent the demoded symbols of VAMOS subchannel B of the final corrected measured data for the last slot.
18	Reserved for future use
19	Reserved for future use
20	Returns series of integer values that represent the demoded payload symbols of VAMOS subchannel A of the final corrected measured data for the last slot.
21	Returns series of integer values that represent the demoded payload symbols of VAMOS subchannel B of the final corrected measured data for the last slot.
22	Reserved for future use
23	Reserved for future use
24	<p>Returns the following scalar results:</p> <ol style="list-style-type: none"> 1. Detected TSC on VAMOS subchannel A is the most recently detected TSC on VAMOS subchannel A. The returned value is 0~7 if TSC of AQPSK burst detected. If not detected, the returned value is -999.0. If Amptd or NONE (Power vs Time only) is specified in Sync Type, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF). 2. Detected TSC on VAMOS subchannel B is the most recently detected TSC on VAMOS subchannel B. The returned value is 0~7 if TSC of TSC set 1 detected and 200 ~ 207 if TSC of TSC set 2 detected. If not detected, the returned value is -999.0. If Amptd or NONE (Power vs Time only) is specified in Sync Type, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF).

n	Results Returned
25	<p>Returns comma-separated scalar values of pass/fail (0.0 = passed, 1.0 = failed) results determined by testing EVM.</p> <ul style="list-style-type: none"> Test results of RMS EVM Test results of Peak EVM Test results of 95%ile EVM Test results of I/Q Origin Offset Test results of Frequency Error Test results of RMS Phase Error Test results of Peak Phase Error <p>The tests for RMS and Peak Phase Errors are done only when mod scheme of last measured slot is GMSK. When not GMSK, pass value is returned.</p>

EDGE EVM Measurement Description

EDGE receivers rely on the quality of the $3\pi/8$ PSK modulation signal to achieve the expected carrier to noise ratio. A transmitter with high EVM is often still able to support phone calls during a functional test. However, it makes it difficult for mobiles trying to maintain service at the edge of the cell with low signal levels or under difficult fading and Doppler conditions.

Key Path	Meas
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10531

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10565

Ref Value

Allows you to set reference value by error vector magnitude or phase error.

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10504

Ref Value (Mag Error or EVM)

Allows you to set reference value using Error Vector Magnitude.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow [1] 3 :TRACe:Y [:SCALE] :RLEVel <real> :DISPlay:EEVM:VIEW2:WINDow [1] 3 :TRACe:Y [:SCALE] :RLEVel?
Example	DISP:EEVM:VIEW2:WIND:TRAC:Y:RLEV 10 DISP:EEVM:VIEW2:WIND:TRAC:Y:RLEV?
Dependencies/Couplings	When “Auto Scaling” on page 384 is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0
State Saved	No

Min	-500
Max	500
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Value (Phase Error)

Allows you to set reference value using Phase Error.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel?
Example	DISP:EEVM:VIEW2:WIND2:TRAC:Y:RLEV 2 DISP:EEVM:VIEW2:WIND2:TRAC:Y:RLEV?
Dependencies/Couplings	When “Auto Scaling” on page 384 is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	0
State Saved	No
Min	-36000
Max	36000
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement. See [Attenuation@3003@i](#) under AMPTD Y Scale for more information.

This is only available when the selected input is RF.

Key Path	AMPTD/Y Scale
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value.

This is only available when the selected input is IQ. For more details, see [Range@29880](#).

Key Path	AMPTD/Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0532

Scale/Div

Sets the Y scale per division on the display, using percent (EVM) or degrees (Phase Error).

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0507

Scale/Div (Max Error or EVM)

Sets the vertical scale per division in percent.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 3:TRACe:Y[:SCALE]:PDIVisi on <real> :DISPlay:EEVM:VIEW2:WINDow[1] 3:TRACe:Y[:SCALE]:PDIVisi on?
Example	DISP:EEVM:VIEW2:WIND:TRAC:Y:PDIV 2 DISP:EEVM:VIEW2:WIND:TRAC:Y:PDIV?
Dependencies/Couplings	When Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1

State Saved	No
Min	0.1
Max	50.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div (Phase Error)

Sets the vertical scale per division in degrees.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVision <real> :DISPlay:EEVM:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVision?
Example	DISP:EEVM:VIEW2:WIND2:TRAC:Y:PDIV 2 DISP:EEVM:VIEW2:WIND2:TRAC:Y:PDIV?
Dependencies/Couplings	When “ Auto Scaling ” on page 384 is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	1.0
State Saved	No
Min	0.01
Max	3600
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement. See [Internal Preamp@3036@i](#) under AMPTD Y Scale for more information.

EDGE EVM Measurement
AMPTD Y Scale

This is only available when the selected input is RF.

Key Path	AMPTD Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position

Allows you to set the reference position.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:Y [:SCALe] :RPOSi tion TOP CENTer BOTTom :DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:Y [:SCALe] :RPOSi tion?
Example	DISP:EEVM:VIEW2:WIND3:TRAC:Y:RPOS TOP DISP:EEVM:VIEW2:WIND3:TRAC:Y:RPOS?
Key Path	AMPTD Y Scale
Mode	GSM
Notes	Preset\Default is window dependent as follows: View – I/Q Error, Window – Mag Error: Ctr View – I/Q Error, Window – Phase Error: Ctr View – I/Q Error, Window – EVM: Bot You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	CENT CENT BOTT
State Saved	No
Range	Top Ctr Bot
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10509

Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:Y [:SCALe] :COUPL e ON OFF 1 0 :DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:Y [:SCALe] :COUPL e?
-----------------------	--

Example	DISP:EEVM:VIEW2:WIND3:TRAC:Y:COUP ON DISP:EEVM:VIEW2:WIND3:TRAC:Y:COUP?
Dependencies/Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When user sets a value either “Ref Value” on page 380 or “Ref Position” on page 384 manually, this parameter is set to ‘Off’ automatically.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	No
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10510

Auto Couple

Operation of this key is identical across several measurements. For details about this key, see [AUTO COUPLE@3041@i.](#)

BW

There is no functionality for this front-panel key in this measurement. Pressing this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10567

Cont (Continuous Measurement/Sweep)

Operation of this key is identical across all measurements. For details about this key, see [Cont \(Continuous Measurement/Sweep\)@3309@i](#).

FREQ Channel

Operation of this key is identical across all measurements. For details about this key, see [Front Panel Key@5524@i](#).

Key Path	Front-panel key
Help Map ID	0

Input/Output

Operation of this key is identical across all measurements. For details about this key, see Input/Output@3065@i.

Key Path	Front-panel key
Help Map ID	0

Marker

Accesses the Marker menus.

Key Path	Front-panel key
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10508

Select Marker

Displays 12 markers available for selection.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10526

Marker Type

Sets the marker control mode **Normal**, **Delta** and **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE POSITION DELTa OFF :CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE ?
Example	CALC:EEVM:MARK:MODE OFF CALC:EEVM:MARK:MODE?
Key Path	Marker
Mode	GSM
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X-axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. Note that if the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF

State Saved	Saved in instrument state.
Range	Normal Delta Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0553

Marker X-axis Value (Remote Command Only)

Sets the marker X-axis value in the current marker X-axis scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> :CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?
Example	CALC:EEVM:MARK3:X 0 CALC:EEVM:MARK3:X?
Dependencies/Couplings	Max value is changed.
Mode	GSM
Notes	If no suffix is sent, uses the fundamental units for the current marker X-axis scale. If a suffix is sent that does not match the current marker X-axis scale unit, an error “Invalid suffix” is generated. The query returns the marker’s absolute X-axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X-axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	After a preset, all markers are turned OFF, so Marker X-axis Value query returns a Not A Number (NaN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker X-axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X-axis scale units. The entered value is immediately translated into the current X-axis scale units for

setting the value of the marker.

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:PO Sition <integer> :CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:PO Sition?
Example	CALC:EEVM:MARK10:X:POS 0 CALC:EEVM:MARK10:X:POS?
Mode	GSM
Notes	The query returns the marker's absolute X-axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	After a preset, all markers are turned OFF, so Marker X-axis Value query returns a Not A Number (NAN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker Y-axis Value (Remote Command Only)

Returns the marker Y-axis value in the current marker Y-axis unit.

The “result” of a marker is the value which is displayed on the second line of the Marker Result block. To properly interpret the returned value the remote programmer must also know what the test set's Y-Axis Unit is set to as described below.

A marker can have up to two results, only one of which is displayed or returned on a query, as follows:

Absolute result: every marker has an absolute result and it is simply:

For Normal and Delta markers, the Y-axis value of the trace point the marker is currently on.

The absolute result is displayed in the result block or returned on a query unless the marker control mode is **Delta**.

Relative result: if a marker's control mode is **Delta**, the relative result is displayed in the result block or returned on a query. This is the ratio of the Absolute Result of a delta marker to the Absolute Result of its reference marker.

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y?
-----------------------	---

Example	CALC:EEVM:MARK11:Y?
Mode	GSM
Notes	The query returns the marker Y-axis result. If the marker is Off the response is not a number. If 'Polar' is selected for Marker Trace, it returns the values of 'I' and 'Q' at the same time. You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset	0
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Properties

Accesses a menu that allows you to set marker properties and to access the marker trace menu.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10557

Select Marker

Displays 12 markers available for selection.

Key Path	Marker, Properties
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10527

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

Remote Command	:CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: REFERENCE <integer> :CALCulate:EEVM:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: REFERENCE?
Example	CALC:EEVM:MARK:REF 2 CALC:EEVM:MARK:REF?
Key Path	Marker, Properties

Mode	GSM
Notes	A marker cannot be relative to itself so that choice is unavailable, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode. When queried a single value is returned (the specified marker number's relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10558

Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe POLar MERRor PERRor EVM MAXMerror MINMerror MAXPerror MINPerror MAXEvm MINEvm :CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe?
Example	CALC:EEVM:MARK:TRAC PERR CALC:EEVM:MARK:TRAC?
Key Path	Marker, Properties
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	EVM
State Saved	Saved in instrument state.
Range	IQ Polar Mag Error Phase Error EVM Max Hold Mag Error Min Hold Mag Error Max Hold Phase Error Min Hold Phase Error Max Hold EVM Min Hold EVM
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00

History	MAXMerror MINMerror MAXPerror MINPerror MAXEvn MINEvm selections were added at A.02.00.
Help Map ID	I0559

Couple Markers

When this function is **On**, moving any marker causes an equal X-axis movement of every other marker which is not **Off**. By “equal X-axis movement” we mean that we preserve the difference between each marker’s X-axis value (in the fundamental x-axis units of the trace that marker is on) and the X-axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going off screen.

Remote Command	:CALCulate:EEVM:MARKer:COUple[:STATE] ON OFF 1 0 :CALCulate:EEVM:MARKer:COUple[:STATE]?
Example	CALC:EEVM:MARK:COUP ON CALC:EEVM:MARK:COUP?
Key Path	Marker
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0560

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:EEVM:MARKer:AOff
Example	CALC:EEVM:MARK:AOff
Key Path	Marker
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0561

Marker Function

There is no functionality for this front-panel key in this measurement. Pressing this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10530

Marker To

There is no functionality for this front-panel key in this measurement. Pressing this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10528

Meas

Operation of this key is identical across all measurements. For details about this key, see [Meas@4008@i](#).

Key Path	Front-panel key
Help Map ID	0

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0568

Avg /Hold Num

Sets the number of data acquisitions that are averaged. After the specified number of average counts, the average mode (termination control) setting determines the average action.

Remote Command	<pre>[:SENSe] :EEVM:AVERage:COUNT <integer> [:SENSe] :EEVM:AVERage:COUNT? [:SENSe] :EEVM:AVERage [:STATe] OFF ON 0 1 [:SENSe] :EEVM:AVERage [:STATe] ?</pre>
Example	<pre>EEVM:AVER:COUN 3 EEVM:AVER:COUN? EEVM:AVER ON EEVM:AVER?</pre>
Dependencies/Couplings	When this value is changed, Avg State is set to On.
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	10000
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0517

Avg Mode

Selects the type of termination control used to averaging. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

- Exponential averaging – When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals. The weighting factor N is set using the Averages, Avg Bursts key.
- Repeat averaging – When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart key when the Single measurement finishes.

Remote Command	[:SENSe] :EEVM:AVERage:TCONtrol EXPonential REPEAT [:SENSe] :EEVM:AVERage:TCONtrol?
Example	EEVM:AVER:TCON REP EEVM:AVER:TCON?
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	REPEAT
State Saved	Saved in instrument state.
Range	Exp Repeat
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10518

Burst Sync

Select the method of synchronizing the measurement to the bursts.

Training Sequence (TSEquence) – The burst synchronization performs a demodulation of the burst and determines the start and stop of the useful part of the burst based on the midamble training sync sequence.

RFBurst – The burst synchronization approximates the start and stop of the useful part of the burst without demodulation of the burst.

Polar Modulation -The burst synchronization performs a demodulation of the burst and determines the start and stop of the useful part of the burst based on the midamble training sync sequence. (It's same as "Training Seq") The measurement start searching training sequence both on amplitude path and phase path to make synchronization

None – The measurement is performed without searching burst.

Remote Command	[:SENSe] :EEVM:BSYNc :SOURce TSEquence RFBurst PModulation NONE [:SENSe] :EEVM:BSYNc :SOURce?
Example	EEVM:BSYNC:SOUR RFB EEVM:BSYNC:SOUR?
Dependencies/Couplings	None When Burst Type in the Mode Setup menu is set to Mixed, this menu key is unavailable and Training Sequence (TSC) is used for synchronization. “Training Seq” is shown on Meas Bar. The sync algorithm always runs in Training Sequence (TSC) synchronization mode in case of “Mixed” because Burst Type can be determined by looking at TSC in the signal. Original selection of Burst Sync becomes effective again when Burst Type selection is changed from “Mixed” to another one. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Key Path	Meas Setup
Mode	GSM
Preset	TSEquence
State Saved	Saved in instrument state.
Range	Training Seq RF Amptd Polar Modulation None
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	I0519

IF Gain

To take full advantage of the RF dynamic range of the test set, a switched IF amplifier with approximately 10 dB of gain is available. When it can be turned on without an overload, the dynamic range is always better with it on than off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

Key Path	Meas Setup, Advanced,
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0520

IF Gain Auto

Activates the auto rules for IF Gain

Remote Command	[:SENSe] :EEVM:IF:GAIN:AUTO [:STATe] ON OFF 1 0 [:SENSe] :EEVM:IF:GAIN:AUTO [:STATe] ?
Example	EEVM:IF:GAIN:AUTO ON EEVM:IF:GAIN:AUTO?
Dependencies/Couplings	When either the auto attenuation works (for example, with electrical attenuator), or the Optimize Mechanical Attenuator range is requested, the IF Gain setting is changed according to the following rule. 'auto' sets IF Gain High under any of the following conditions: <ul style="list-style-type: none"> • the input attenuator is set to 0 dB, • the preamp is turned on, • the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to Low.
Key Path	Meas Setup, IF Gain
Mode	GSM
Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10521

IF Gain State

Turns the IF Gain state on or off.

Remote Command	[:SENSe] :EEVM:IF:GAIN [:STATe] ON OFF 1 0 [:SENSe] :EEVM:IF:GAIN [:STATe] ?
Example	EEVM:IF:GAIN ON EEVM:IF:GAIN?
Dependencies/Couplings	Couple to "IF Gain Auto" on page 403.
Key Path	Meas Setup, IF Gain
Mode	GSM

Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. where ON = high gain OFF = low gain
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0522

Limits

Accesses a menu that enables you to set the Limit Test to on or off and the Test Condition to a normal or extreme limit table.

Key Path	Meas Setup
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0569

Limit Test

Turns on or off limit pass/fail testing.

Remote Command	:CALCulate:EEVM:LIMit:TEST[:STATe] OFF ON 0 1 :CALCulate:EEVM:LIMit:TEST[:STATe] ?
Example	CALC:EEVM:LIM:TEST ON CALC:EEVM:LIM:TEST?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	If set to Off, PASS/FAIL indicator on the Meas Bar goes blank. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00

Help Map ID	10523
-------------	-------

Test Condition

This measurement could have different limit table for different test environment, Normal and Extreme. This parameter allows user to select which limit table to be modified and used for the judgement.

Remote Command	:CALCulate:EEVM:LIMit:TYPE NORMal EXTReMe :CALCulate:EEVM:LIMit:TYPE?
Example	CALC:EEVM:LIM:TYPE NORM CALC:EEVM:LIM:TYPE?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	NORMal
State Saved	Saved in instrument state.
Range	Norm Extreme
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10524

RMS EVM

Accesses the menu to set the limit for the RMS EVM measurement pass/fail test per burst.

Key Path	Meas Setup, Mode, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	10525

NB 8PSK

Sets the limit of the 8PSK burst for the RMS EVM measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM?
Example	CALC:EEVM:LIM:BTS:NORM:REVM 12 CALC:EEVM:LIM:BTS:NORM:REVM?
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	7.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	10570

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM <real> :CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM?
Example	CALC:EEVM:LIM:BTS:EXTR:REVM 15 CALC:EEVM:LIM:BTS:EXTR:REVM?
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM?
Example	CALC:EEVM:LIM:MS:NORM:REVM 20 CALC:EEVM:LIM:MS:NORM:REVM?
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReMe:REVM <real> :CALCulate:EEVM:LIMit:MS:EXTReMe:REVM?
Example	CALC:EEVM:LIM:MS:EXTR:REVM 15 CALC:EEVM:LIM:MS:EXTR:REVM?
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.</p>
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	0

NB 16QAM

Sets the limit of the normal symbol rate 16QAM burst for the RMS EVM Measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	<pre>:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate QAM16, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? QAM16</pre>
Example	<pre>CALC:EEVM:LIM:BTS:NORM:REVM:NSR QAM16, 12 CALC:EEVM:LIM:BTS:NORM:REVM:NSR? QAM16</pre>
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A-3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.</p>
Preset	7.0
State Saved	Saved in instrument state.

EDGE EVM Measurement
Meas Setup

Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	10571

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate QAM16, <real> :CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? QAM16
Example	CALC:EEVM:LIM:BTS:EXTR:REVM:NSR QAM16, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:NSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate QAM16, <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate? QAM16
Example	CALC:EEVM:LIM:MS:NORM:REVM:NSR QAM16, 20 CALC:EEVM:LIM:MS:NORM:REVM:NSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

EDGE EVM Measurement
Meas Setup

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate QAM16, <real> :CALCulate:EEVM:LIMit:MS:EXTReme:REVM:NSRate? QAM16
Example	CALC:EEVM:LIM:MS:EXTR:REVM:NSR QAM16, 15 CALC:EEVM:LIM:MS:EXTR:REVM:NSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

NB 32QAM

Sets the limit of the normal symbol rate 32QAM burst for the RMS EVM Measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate QAM32, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? QAM32
Example	CALC:EEVM:LIM:BTS:NORM:REVM:NSR QAM32, 12 CALC:EEVM:LIM:BTS:NORM:REVM:NSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	7.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	10572

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate QAM32, <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate? QAM32
Example	CALC:EEVM:LIM:BTS:EXTR:REVM:NSR QAM32, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:NSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate QAM32, <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM:NSRate? QAM32
Example	CALC:EEVM:LIM:MS:NORM:REVM:NSR QAM32, 20 CALC:EEVM:LIM:MS:NORM:REVM:NSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTreme:REVM:NSRate QAM32, <real> :CALCulate:EEVM:LIMit:MS:EXTreme:REVM:NSRate? QAM32
Example	CALC:EEVM:LIM:MS:EXTR:REVM:NSR QAM32, 15 CALC:EEVM:LIM:MS:EXTR:REVM:NSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

HB QPSK

Sets the limit of the QPSK burst for the RMS EVM Measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QPSK, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QPSK
Example	CALC:EEVM:LIM:BTS:NORM:REVM:HSR QPSK, 12 CALC:EEVM:LIM:BTS:NORM:REVM:HSR? QPSK
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	7.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	10573

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM:HSRate QPSK, <real> :CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM:HSRate? QPSK
Example	CALC:EEVM:LIM:BTS:EXTR:REVM:HSR QPSK, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:HSR? QPSK
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QPSK, <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QPSK
Example	CALC:EEVM:LIM:MS:NORM:REVM:HSR QPSK, 20 CALC:EEVM:LIM:MS:NORM:REVM:HSR? QPSK
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate QPSK, <real> :CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate? QPSK
Example	CALC:EEVM:LIM:MS:EXTR:REVM:HSR QPSK, 15 CALC:EEVM:LIM:MS:EXTR:REVM:HSR? QPSK
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

HB 16QAM

Sets the limit of the higher symbol rate 16QAM burst for the RMS EVM Measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QAM16, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QAM16
Example	CALC:EEVM:LIM:BTS:NORM:REVM:HSR QAM16, 12 CALC:EEVM:LIM:BTS:NORM:REVM:HSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	7.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	10574

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:HSRate QAM16, <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:HSRate? QAM16
Example	CALC:EEVM:LIM:BTS:EXTR:REVM:HSR QAM16, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:HSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QAM16, <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QAM16
Example	CALC:EEVM:LIM:MS:NORM:REVM:HSR QAM16, 20 CALC:EEVM:LIM:MS:NORM:REVM:HSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate QAM16, <real> :CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate? QAM16
Example	CALC:EEVM:LIM:MS:EXTR:REVM:HSR QAM16, 15 CALC:EEVM:LIM:MS:EXTR:REVM:HSR? QAM16
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

HB 32QAM

Sets the limit of the higher symbol rate 32QAM burst for the RMS EVM Measurement pass/fail test.

Device is BTS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate QAM32, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:HSRate? QAM32
Example	CALC:EEVM:LIM:BTS:NORM:REVM:HSR QAM32, 12 CALC:EEVM:LIM:BTS:NORM:REVM:HSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	7.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	10575

Device is BTS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM:HSRate QAM32, <real> :CALCulate:EEVM:LIMit:BTS:EXTReMe:REVM:HSRate? QAM32
Example	CALC:EEVM:LIM:BTS:EXTR:REVM:HSR QAM32, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:HSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	8.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Normal

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate QAM32, <real> :CALCulate:EEVM:LIMit:MS:NORMal:REVM:HSRate? QAM32
Example	CALC:EEVM:LIM:MS:NORM:REVM:HSR QAM32, 20 CALC:EEVM:LIM:MS:NORM:REVM:HSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM
Notes	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	9.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

Device is MS, Test Condition is Extreme

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate QAM32, <real> :CALCulate:EEVM:LIMit:MS:EXTreme:REVM:HSRate? QAM32
Example	CALC:EEVM:LIM:MS:EXTR:REVM:HSR QAM32, 15 CALC:EEVM:LIM:MS:EXTR:REVM:HSR? QAM32
Dependencies/Couplings	Blanked when the EDGE Evolution U9071A–3FP license is not installed.
Key Path	Meas Setup, Limits, RMS EVM
Mode	GSM

Notes	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition.</p> <p>But SCPI command can set each test limit without setting the radio device and test condition because it contains the information of radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	10.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	A.02.00
Help Map ID	0

NB AQPSK Low SCPIR

Sets the limit of the normal symbol rate AQPSK burst for the RMS EVM Measurement pass/fail test when the absolute value of Subchannel Power Imbalance Ratio, |SCPIR| is equal to or less than 8.0 dB.

Device is BTS, Test Condition is Normal

Key Path:	Meas Setup, Limits, RMS EVM
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate AQPSK1, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? AQPSK1
Example:	CALC:EEVM:LIM:BTS:NORM:REVM:NSR AQPSK1, 12 CALC:EEVM:LIM:BTS:NORM:REVM:NSR? AQPSK1
Notes:	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. Meanwhile, SCPIa remote command can set each test limit without setting the radio device and test condition because it contains the information of the radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when the EDGE Evolution N/W9071A-3FP license is not installed.
Preset:	7.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Backwards Compatibility SCPI:	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate AQPSK, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? AQPSK
Initial S/W Revision:	A.11.01
Help Map ID:	I0583

Device is BTS, Test Condition is Extreme

Key Path:	Meas Setup, Limits, RMS EVM
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate AQPSK1, <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate? AQPSK1
Example:	CALC:EEVM:LIM:BTS:EXTR:REVM:NSR AQPSK1, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:NSR? AQPSK1

Notes:	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limit that can be set from front panel are those for BTS and Extreme condition.</p> <p>Meanwhile, SCPIa remote command can set each test limit without setting the radio device and test condition because it contains the information of the radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Dependencies:	Blanked when the N/W9071A-3FP license is not installed.
Preset:	8.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Backwards Compatibility SCPI:	:CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate AQPSK, <real> :CALCulate:EEVM:LIMit:BTS:EXTReme:REVM:NSRate? AQPSK
Initial S/W Revision:	A.11.01
Help Map ID:	0

NB AQPSK High SCPIR

Sets the limit of the normal symbol rate AQPSK burst for the RMS EVM Measurement pass/fail test when the absolute value of Subchannel Power Imbalance Ratio, |SCPIR| is greater than 8.0 dB.

Device is BTS, Test Condition is Normal

Key Path:	Meas Setup, Limits, RMS EVM
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate AQPSK2, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:REVM:NSRate? AQPSK2
Example:	CALC:EEVM:LIM:BTS:NORM:REVM:NSR AQPSK2, 12 CALC:EEVM:LIM:BTS:NORM:REVM:NSR? AQPSK2
Notes:	On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limits that can be set from the front panel are those for BTS and Extreme condition. Meanwhile, SCPIa remote command can set each test limit without setting the radio device and test condition because it contains the information of the radio device and test condition. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when the EDGE Evolution N/W9071A-3FP license is not installed.
Preset:	5.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Initial S/W Revision:	A.11.01
Help Map ID:	10586

Device is BTS, Test Condition is Extreme

Key Path:	Meas Setup, Limits, RMS EVM
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate AQPSK2, <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:REVM:NSRate? AQPSK2
Example:	CALC:EEVM:LIM:BTS:EXTR:REVM:NSR AQPSK2, 15 CALC:EEVM:LIM:BTS:EXTR:REVM:NSR? AQPSK2

Notes:	<p>On MUI operation, for example, if the selected device is BTS and Test Condition is Extreme, test limit that can be set from front panel are those for BTS and Extreme condition.</p> <p>Meanwhile, SCPIa remote command can set each test limit without setting the radio device and test condition because it contains the information of the radio device and test condition.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.</p>
Dependencies:	Blanked when the N/W9071A–3FP license is not installed.
Preset:	6.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Initial S/W Revision:	A.11.01
Help Map ID:	0

Peak EVM

Sets the limit for the Peak EVM result. The value can be set for each Radio Device and Test Condition.

Key Path	Meas Setup, Mode, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10529

Peak EVM (Device is BTS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:PEVM <real> :CALCulate:EEVM:LIMit:BTS:NORMal:PEVM?
Example	CALC:EEVM:LIM:BTS:NORM:PEVM 12 CALC:EEVM:LIM:BTS:NORM:PEVM?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	22.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0505

Peak EVM (Device is BTS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTRemE:PEVM <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:PEVM?
Example	CALC:EEVM:LIM:BTS:EXTR:PEVM 15 CALC:EEVM:LIM:BTS:EXTR:PEVM?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	22.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

Peak EVM (Device is MS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:PEVM <real> :CALCulate:EEVM:LIMit:MS:NORMal:PEVM?
Example	CALC:EEVM:LIM:MS:NORM:PEVM 20 CALC:EEVM:LIM:MS:NORM:PEVM?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	30.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Peak EVM (Device is MS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReMe:PEVM <real> :CALCulate:EEVM:LIMit:MS:EXTReMe:PEVM?
Example	CALC:EEVM:LIM:MS:EXTR:PEVM 15 CALC:EEVM:LIM:MS:EXTR:PEVM?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	30.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

95%ile EVM

Sets the limit value for the 95%ile EVM result. The value can be set for each Radio Device and Test Condition.

Key Path	Meas Setup, Mode, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10533

95%ile EVM (Device is BTS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:EVMP95 <real> :CALCulate:EEVM:LIMit:BTS:NORMal:EVMP95?
Example	CALC:EEVM:LIM:BTS:NORM:EVMP95 12 CALC:EEVM:LIM:BTS:NORM:EVMP95?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	11.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

95%ile EVM (Device is BTS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReMe:EVMP95 <real> :CALCulate:EEVM:LIMit:BTS:EXTReMe:EVMP95?
Example	CALC:EEVM:LIM:BTS:EXTR:EVMP95 15 CALC:EEVM:LIM:BTS:EXTR:EVMP95?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	11.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

95%ile EVM (Device is MS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:EVMP95 <real> :CALCulate:EEVM:LIMit:MS:NORMal:EVMP95?
Example	CALC:EEVM:LIM:MS:NORM:EVMP95 20 CALC:EEVM:LIM:MS:NORM:EVMP95?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	15.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

95%ile EVM (Device is MS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReMe:EVMP95 <real> :CALCulate:EEVM:LIMit:MS:EXTReMe:EVMP95?
Example	CALC:EEVM:LIM:MS:EXTR:EVMP95 15 CALC:EEVM:LIM:MS:EXTR:EVMP95?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	15.0
State Saved	Saved in instrument state.
Min	0.0
Max	100.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

I/Q Origin Offset

Sets the limit value for the I/Q Origin Offset result. The value can be set for each Radio Device and Test Condition.

Key Path	Meas Setup, Mode, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10537

I/Q Origin Offset (Device is BTS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:IQOOffset <real> :CALCulate:EEVM:LIMit:BTS:NORMal:IQOOffset?
Example	CALC:EEVM:LIM:BTS:NORM:IQOO -12 CALC:EEVM:LIM:BTS:NORM:IQOO?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	-35
State Saved	Saved in instrument state.
Min	-100.0
Max	0.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

I/Q Origin Offset (Device is BTS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTRemE:IQOOffset <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:IQOOffset?
Example	CALC:EEVM:LIM:BTS:EXTR:IQOO -15 CALC:EEVM:LIM:BTS:EXTR:IQOO?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	-35.0
State Saved	Saved in instrument state.
Min	-100.0
Max	0.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

I/Q Origin Offset (Device is MS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:IQOOffset <real> :CALCulate:EEVM:LIMit:MS:NORMal:IQOOffset?
Example	CALC:EEVM:LIM:MS:NORM:IQOO -20 CALC:EEVM:LIM:MS:NORM:IQOO?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	-30.0
State Saved	Saved in instrument state.
Min	-100.0
Max	0.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

I/Q Origin Offset (Device is MS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReMe:IQOOffset <real> :CALCulate:EEVM:LIMit:MS:EXTReMe:IQOOffset?
Example	CALC:EEVM:LIM:MS:EXTR:IQOO -15 CALC:EEVM:LIM:MS:EXTR:IQOO?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	-30.0
State Saved	Saved in instrument state.
Min	-100.0
Max	0.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

Freq Error

Sets the limit for the Frequency Error measurement pass/fail test. The value can be set for each Radio Device and Test Condition.

Key Path	Meas Setup, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10541

Freq Error (Device is BTS, BTS Type is Normal, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:BTS:NORMal:FERRor <real> :CALCulate:EEVM:LIMit:BTS:NORMal:FERRor?
Example	CALC:EEVM:LIM:BTS:NORM:FERR 0.1 CALC:EEVM:LIM:BTS:NORM:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Normal or Micro and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0.0
Max	50.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is BTS, BTS Type is Normal, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:BTS:EXTReme:FERRor <real> :CALCulate:EEVM:LIMit:BTS:EXTReme:FERRor?
Example	CALC:EEVM:LIM:BTS:EXTR:FERR 0.1 CALC:EEVM:LIM:BTS:EXTR:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Normal or Micro and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0.0
Max	50.0

Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is BTS, BTS Type is Micro, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:MBTS:NORMal:FERRor <real> :CALCulate:EEVM:LIMit:MBTS:NORMal:FERRor?
Example	CALC:EEVM:LIM:MBTS:NORM:FERR 0.1 CALC:EEVM:LIM:MBTS:NORM:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Normal or Micro and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0.0
Max	50.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is BTS, BTS Type is Micro, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:MBTS:EXTReMe:FERRor <real> :CALCulate:EEVM:LIMit:MBTS:EXTReMe:FERRor?
Example	CALC:EEVM:LIM:MBTS:EXTR:FERR 0.1 CALC:EEVM:LIM:MBTS:EXTR:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Normal or Micro and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0.0
Max	50.0

Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is BTS, BTS Type is Pico, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:PBTS:NORMal:FERRor <real> :CALCulate:EEVM:LIMit:PBTS:NORMal:FERRor?
Example	CALC:EEVM:LIM:PBTS:NORM:FERR 0.1 CALC:EEVM:LIM:PBTS:NORM:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Pico and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.0
Max	50.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is BTS, BTS Type is Pico, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:PBTS:EXTReme:FERRor <real> :CALCulate:EEVM:LIMit:PBTS:EXTReme:FERRor?
Example	CALC:EEVM:LIM:PBTS:EXTR:FERR 0.2 CALC:EEVM:LIM:PBTS:EXTR:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “BTS Type” is Pico and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.0
Max	50.0

Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is MS, Test Condition is Normal)

Remote Command	:CALCulate:EEVM:LIMit:MS:NORMal:FERRor <real> :CALCulate:EEVM:LIMit:MS:NORMal:FERRor?
Example	CALC:EEVM:LIM:MS:NORM:FERR 0.1 CALC:EEVM:LIM:MS:NORM:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.0
Max	50.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error (Device is MS, Test Condition is Extreme)

Remote Command	:CALCulate:EEVM:LIMit:MS:EXTReMe:FERRor <real> :CALCulate:EEVM:LIMit:MS:EXTReMe:FERRor?
Example	CALC:EEVM:LIM:MS:EXTR:FERR 0.2 CALC:EEVM:LIM:MS:EXTR:FERR?
Key Path	Meas Setup, Limit
Mode	GSM
Notes	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.1
State Saved	Saved in instrument state.
Min	0.0
Max	50.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

RMS Phase Error GMSK

Sets the limit of the normal symbol rate GMSK burst for the RMS Phase Error Measurement pass/fail test.

RMS Phase Error GMSK (Device is BTS, Test Condition is Normal)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:NORMal:RPERror GMSK, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:RPERror? GMSK
Example:	CALC:EEVM:LIM:BTS:NORM:RPER GMSK, 0.5 CALC:EEVM:LIM:BTS:NORM:RPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	5
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00
Help Map ID:	I0584

RMS Phase Error GMSK (Device is BTS, Test Condition is Extreme)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:EXTRemE:RPERror GMSK, <real> :CALCulate:EEVM:LIMit:BTS:EXTRemE:RPERror? GMSK
Example:	CALC:EEVM:LIM:BTS:EXTR:RPER GMSK, 5 CALC:EEVM:LIM:BTS:EXTR:RPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	5.0
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00

Help Map ID:	0
--------------	---

RMS Phase Error GMSK (Device is MS, Test Condition is Normal)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:MS:NORMal:RPERror GMSK, <real> :CALCulate:EEVM:LIMit:MS:NORMal:RPERror? GMSK
Example:	CALC:EEVM:LIM:MS:NORM:RPER GMSK, 7 CALC:EEVM:LIM:MS:NORM:RPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	5.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Initial S/W Revision:	A.06.00
Help Map ID:	0

RMS Phase Error GMSK (Device is MS, Test Condition is Extreme)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:MS:EXTreme:RPERror GMSK, <real> :CALCulate:EEVM:LIMit:MS:EXTreme:RPERror? GMSK
Example:	CALC:EEVM:LIM:MS:EXTR:RPER GMSK, 5 CALC:EEVM:LIM:MS:EXTR:RPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	5.0
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00

Help Map ID:	0
--------------	---

Peak Phase Error GMSK

Sets the limit of the normal symbol rate GMSK burst for the Peak Phase Error Measurement pass/fail test.

Peak Phase Error GMSK (Device is BTS, Test Condition is Normal)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:NORMal:PPERror GMSK, <real> :CALCulate:EEVM:LIMit:BTS:NORMal:PPERror? GMSK
Example:	CALC:EEVM:LIM:BTS:NORM:PPER GMSK, 20 CALC:EEVM:LIM:BTS:NORM:PPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	20
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00
Help Map ID:	I0585

Peak Phase Error GMSK (Device is BTS, Test Condition is Extreme)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:BTS:EXTReme:PPERror GMSK, <real> :CALCulate:EEVM:LIMit:BTS:EXTReme:PPERror? GMSK
Example:	CALC:EEVM:LIM:BTS:EXTR:PPER GMSK, 20 CALC:EEVM:LIM:BTS:EXTR:PPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is BTS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	20.0
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00

Help Map ID:	0
--------------	---

Peak Phase Error GMSK (Device is MS, Test Condition is Normal)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:MS:NORMal:PPERror GMSK, <real> :CALCulate:EEVM:LIMit:MS:NORMal:PPERror? GMSK
Example:	CALC:EEVM:LIM:MS:NORM:PPER GMSK, 7 CALC:EEVM:LIM:MS:NORM:PPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Normal. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	20.0
State Saved:	Saved in instrument state.
Min:	0.0
Max:	100.0
Initial S/W Revision:	A.06.00
Help Map ID:	0

Peak Phase Error GMSK (Device is MS, Test Condition is Extreme)

Key Path:	Meas Setup, Limits
Mode:	GSM
Remote Command:	:CALCulate:EEVM:LIMit:MS:EXTReme:PPERror GMSK, <real> :CALCulate:EEVM:LIMit:MS:EXTReme:PPERror? GMSK
Example:	CALC:EEVM:LIM:MS:EXTR:PPER GMSK, 5 CALC:EEVM:LIM:MS:EXTR:PPER? GMSK
Notes:	This parameter can only be set using the front-panel “Limits” key if the device selected by the “Device” key is MS and the “Test Condition” is Extreme. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	20.0
State Saved:	Saved in instrument state.
Min:	0
Max:	180
Initial S/W Revision:	A.06.00

Help Map ID:	0
--------------	---

Droop Compensation

Turns Droop Compensation on or off. Droop Compensation corrects amplitude variations across a burst. You may want to turn off this compensation so you can see the changes in the measured magnitude error. Droop can result from signal impairments like a power amplifier problem.

Remote Command	[:SENSe] :EEVM:DROOp OFF ON 0 1 [:SENSe] :EEVM:DROOp?
Example	EEVM:DRO ON EEVM:DRO?
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10549

Freq Error Tolerance Rng

Toggles between Wide and Normal settings for Frequency Error tolerance. To accurately demodulate complex signals which require more stringent tolerance for frequency error, Normal can be selected. For use with signals that are simpler with greater frequency error tolerance, Wide can be selected.

Remote Command	[:SENSe] :EEVM:FERRor:TRANGe WIDE NORMaL [:SENSe] :EEVM:FERRor:TRANGe?
Example	EEVM:FERR:TRAN NORM EEVM:FERR:TRAN?
Key Path	Meas Setup
Mode	GSM
Preset	WIDE
State Saved	Saved in instrument state.
Range	Wide Normal

Instrument S/W Revision	A.02.00
Help Map ID	I0582

Polar Mod Align

Turns On/Off polar modulation alignment.

Remote Command	<code>[:SENSe] :EEVM:BSYNc:PMODulation:ALIGnment OFF ON 0 1</code> <code>[:SENSe] :EEVM:BSYNc:PMODulation:ALIGnment?</code>
Example	EEVM:BSYNC:PMOD:ALIG OFF EEVM:BSYNC:PMOD:ALIG?
Key Path	Meas Setup
Mode	GSM
Notes	Available only when Burst Sync is set to Polar Modulation. You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0550

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFIgure:EEVM</code>
Example	CONF:EEVM
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0551

Mode

Operation of this key is identical across all measurements. For details about this key, see Mode@2670@i.

Key Path	Front-panel key
Help Map ID	0

Mode Setup

Operation of this key is identical across all measurements in this application. For details, see [Mode Setup@5520@i](mailto:ModeSetup@5520@i).

Key Path	Front-panel key
Help Map ID	0

Peak Search

There is no functionality for this front-panel key in this measurement. Pressing this key displays a blank menu.

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum
Example	CALC:EEVM:MARK2:MAX
Key Path	Peak Search
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10562

Min Peak Search (Backward Compatibility/Remote Command Only)

Remote Command	:CALCulate:EEVM:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MINimum
Example	CALC:EEVM:MARK:MIN
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Recall

Operation of this key is identical across several measurements. For details of this key, see Recall@2637@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Restart

Operation of this key is identical across all measurements. For details about this key, see Restart@3307@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Save

Operation of this key is identical across several measurements. For details of this key, see Save@2600@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Single (Single Measurement/Sweep)

Operation of this key is identical across several measurements. For details about this key, see [Single \(Single Measurement/Sweep\)@3515@i](#).

Source (Internal)

Operation of this key is identical across all measurements. For details about this key, see [Source \(Internal\)@35360@i](mailto:Source (Internal)@35360@i).

Key Path	Front-panel key
Help Map ID	0

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10514

Ref Value

Allows you to set X reference value.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :RLEVe 1 <real> :DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :RLEVe 1?
Example	DISP:EEVM:VIEW2:WIND3:TRAC:X:RLEV 1 DISP:EEVM:VIEW2:WIND3:TRAC:X:RLEV?
Dependencies/Couplings	If the “Auto Scaling” on page 473 is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Unit is Symbol(s).
Preset	0.0
State Saved	Saved in instrument state.
Min	0.0
Max	5000000.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10500

Scale/Div

Allows you to change the horizontal scale.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :PDIVi sion <real> :DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :PDIVi sion?
Example	DISP:EEVM:VIEW2:WIND:TRAC:X:PDIV 1.2 DISP:EEVM:VIEW2:WIND:TRAC:X:PDIV?
Dependencies/Couplings	If the X Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Unit is Symbol(s).
Preset	14.10
State Saved	Saved in instrument state.
Range	1.0 to 500000.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10501

Ref Position

Allows you to set the reference position.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :RPOSi tion LEFT CENTer RIGHT :DISPlay:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :RPOSi tion?
Example	DISP:EEVM:VIEW2:WIND3:TRAC:X:RPOS CENT DISP:EEVM:VIEW2:WIND3:TRAC:X:RPOS?
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	LEFT

State Saved	Saved in instrument state.
Range	Left Ctr Right
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10502

Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

Remote Command	:DISP:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :COUPl e ON OFF 1 0 :DISP:EEVM:VIEW2:WINDow[1] 2 3 :TRACe:X[:SCALe] :COUPl e?
Example	DISP:EEVM:VIEW2:WIND:TRAC:X:COUP ON DISP:EEVM:VIEW2:WIND:TRAC:X:COUP?
Dependencies/Couplings	Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either “Ref Value” on page 471 or “Scale/Div” on page 472 manually, X Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10503

Sweep/Control

Operation of this key is identical across all measurements. For details about this key, see [Sweep / Control@3273@i](mailto:Sweep/Control@3273@i).

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Trace/Detector

Accesses a menu that enables you to visible/invisible Max Hold Trace and Min Hold Trace.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10566

Max Hold Trace

This key allows you to show or hide the Max Hold Trace on the Mag Error, Phase Error, or EVM window in the I/Q Error view. Max Hold Traces are held during the averaging cycle.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MAXHold[:STATe] ON OFF 1 0 :DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MAXHold[:STATe]?
Example	DISP:EEVM:VIEW2:WIND:TRAC:MAXH ON DISP:EEVM:VIEW2:WIND:TRAC:MAXH?
Key Path	Trace/Detector
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	A.02.00
Help Map ID	10580

Min Hold Trace

This key allows you to show or hide the Min Hold Trace on the Mag Error, Phase Error, or EVM window in the I/Q Error view. Min Hold Traces are held during the averaging cycle.

Remote Command	:DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MINHold[:STATe] ON OFF 1 0 :DISPlay:EEVM:VIEW2:WINDow[1]:TRACe:MINHold[:STATe]?
-----------------------	---

EDGE EVM Measurement
Trace/Detector

Example	DISP:EEVM:VIEW2:WIND:TRAC:MINH ON DISP:EEVM:VIEW2:WIND:TRAC:MINH?
Key Path	Trace/Detector
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	A.02.00
Help Map ID	I0581

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. Operation of this key is identical across all measurements. For details about this key, see Trigger@3371@i for more information.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10506

View/Display

Accesses a menu of functions that enable you to set the display parameters. See [Display@3440](#) for more information.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0511

Display

Operation of this key is identical across all measurements. For details about this key, see [Display@3440@i](#).

View Selection

You can select desired view of the measurement from the following:

- I/Q Measured Polar Graph (SCPI: POLar) – Provides a view of numeric results and a polar vector graph. For more details of each window, see [“I/Q Measured Polar Graph” on page 480](#).
 - Window 1: Numeric Results
 - Window 2: I/Q Polar Graph
- I/Q Error (SCPI: ERRor) – Provides a combination view including
 - Window 1: Magnitude Error
 - Window 2: Phase Error
 - Window 3: EVM
 - Window 4: Numeric Results
 - For more details of each window, see [“I/Q Error” on page 485](#). Any of these windows can be selected (using the **Next Window** key) and made full size (using the **Zoom** key).
- Data Bits (SCPI: DBITs) – Provides a view of the numeric results and data bits with the sync word (TSC) highlighted.

Remote Command	:DISPlay:EEVM:VIEW[:SElect] POLar ERRor DBITs :DISPlay:EEVM:VIEW[:SElect] ?
Example	DISP:EEVM:VIEW:SEL QUAD DISP:EEVM:VIEW:SEL?

Dependencies/Couplings	View Selection by number must be coupled with this parameter value. Selecting POLar changed DISP:EEVM:VIEW:WIND2:TRAC:POL to VC.
Key Path	View/Display
Mode	GSM
Notes	- POLar: I/Q Measured Polar Graph - ERRor: I/Q Error - DBITs: Data Bits You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	POLar
State Saved	Saved in instrument state.
Range	I/Q Measured Polar Graph I/Q Error Data Bits
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0513

View Selection by number (SCPI only)

You can select desired view with view number.

- 1: I/Q Measured Polar Graph (SCPI: 1) – Provides a view of numeric results and a polar vector graph.
- Window 1: Numeric Results
- Window 2: I/Q Polar Graph
- 2: I/Q Error (SCPI: 2) – Provides a combination view including:
 - Window 1: Magnitude Error
 - Window 2: Phase Error
 - Window 3: EVM
 - Window 4: Numeric Results

Any of these windows can be selected (using the **Next Window** key) and made full size (using the **Zoom** key).

- 3: Data Bits (SCPI: 3) – Provides a view of the numeric results and data bits with the sync word (TSC) highlighted.

Remote Command	:DISPlay:EEVM:VIEW:NSElect <integer> :DISPlay:EEVM:VIEW:NSElect?
Example	DISP:EEVM:VIEW:NSEL 3 DISP:EEVM:VIEW:NSEL?

Dependencies/Couplings	View Selection must be coupled with this parameter value.
Mode	GSM
Notes	1: I/Q Measured Polar Graph 2: IQ Error 3: Data Bits You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	3
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

I/Q Measured Polar Graph


For the Remote Commands, see [“View Selection” on page 478](#) and [“View Selection by number \(SCPI only\)” on page 479](#).

This topic includes the following sections, which provide details of this view’s windows, as shown in the examples below:


[“Graph window” on page 483](#)

[“Metric window” on page 483](#)


Example View with Vector and Constellation Traces

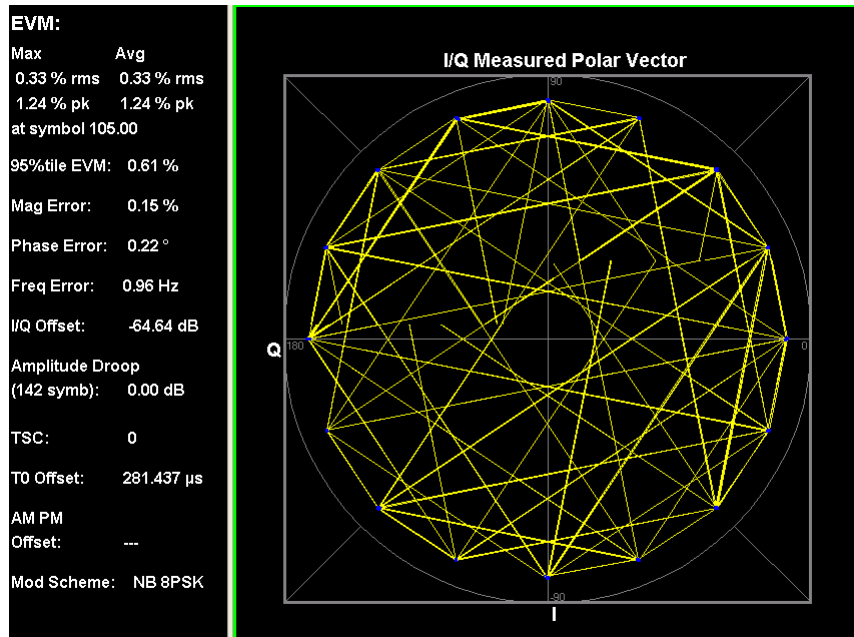


Example View with Vector Trace Only

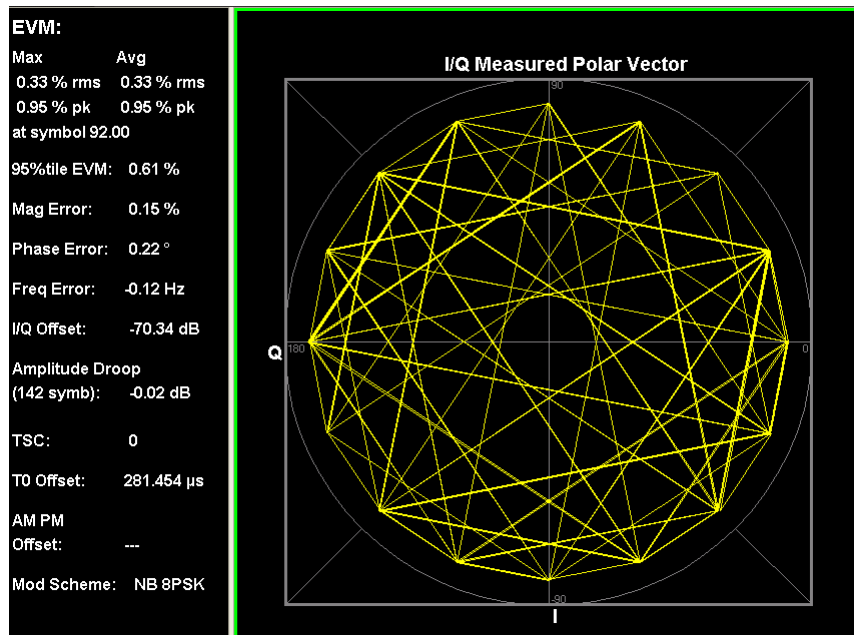

Example View with Constellation Trace Only

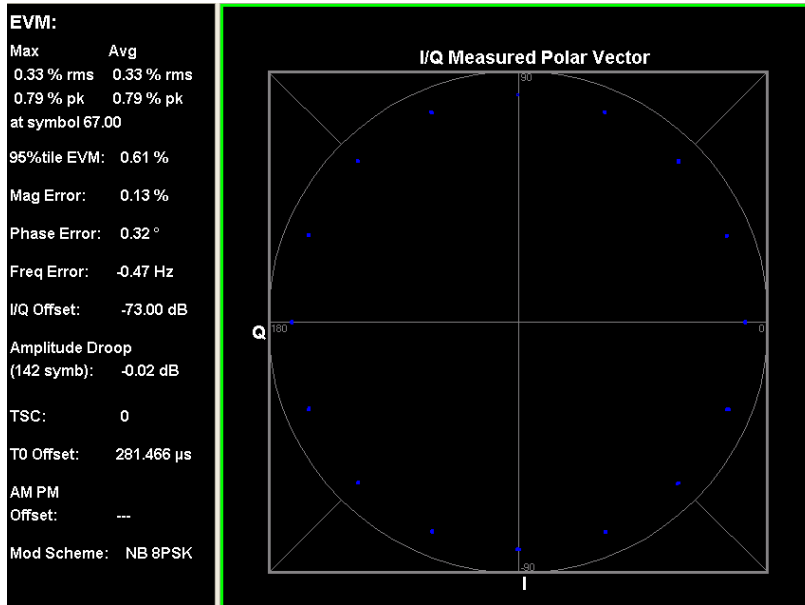

Example View with Vector and Constellation Traces (Symbol Derotated)

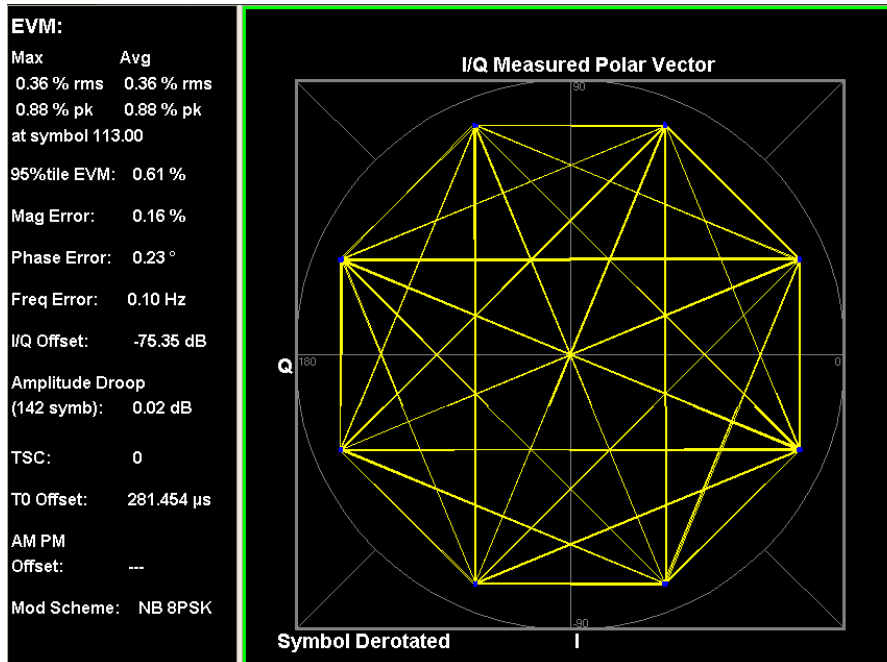

Key Path	View/Display
Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	10576

Graph window

Marker Operation	No
Corresponding Trace	Series of float point numbers that alternately represent I and Q pairs of the final corrected measured data for the last slot. (n=5)

Metric window

Name	Corresponding Results	Display Format
EVM rms (Max)	n=1 3rd Maximum RMS EVM	9.99% rms
EVM rms (Avg)	n=1 2nd RMS EVM	9.99% rms
EVM Pk (Max)	n=1 5th Maximum peak EVM	9.99% pk
EVM Pk (Avg)	n=1 4th Peak EVM	9.99% pk
Symbol position of the peak EVM	n=1 6th Symbol position of Peak EVM.	99
95%ile EVM	n=1 1st RMS 95th %ile EVM	9.99%
Mag Error	n=1 7th Magnitude error	9.99%
Phase Error	n=1 9th Phase error	9.99°
Freq Error	n=1 11th Frequency error	-999.99 Hz
I/Q Offset	n=1 13th I/Q origin offset	-99.99 dB
Amplitude Droop	n=1 14th Amplitude droop error	-99.99 dB
T0 Offset	n=1 15th Trigger to T0	0.000 us 0.000 symbols
AMPM Offset	n=1 16th AMPM Offset	0.000 us 0.0000 symbols

Mod Scheme	n=8 18th Modulation Scheme	NB 8PSK
------------	-------------------------------	---------

NOTE The value of 'T0 Offset' and 'AM PM Offset' is displayed by 'sec' and both 'Symbol' unit. (The figure above does not show this. See the Data Bits figure.)

I/Q Polar Vect/Constln

I/Q Polar Vector/Constellation provides options that allow you to change the format of the polar vector graph. The following display options are available:

- Vector and Constellation (SCPI: VC)
- Vector Only (SCPI: VECTor)
- Constellation Only (SCPI: CONSTln)

Remote Command	:DISPlay:EEVM:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONSTln :DISPlay:EEVM:VIEW[1]:WINDow2:TRACe:POLar?
Example	DISP:EEVM:VIEW:WIND2:TRAC:POL VC DISP:EEVM:VIEW:WIND2:TRAC:POL?
Dependencies/Couplings	DISP:EEVM:VIEW POL changes this parameter to POL. DISP:EEVM:VIEW CONS changes this parameter to CONS.
Key Path	View/Display, I/Q Measured Polar Graph
Mode	GSM
Notes	VC: Vect & Constln VECTor: Vector CONSTln: Constellation You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	VC
State Saved	Saved in instrument state.
Range	Vect & Constln Vector Constellation
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0515

Time Offset Unit

See "Time Offset Unit" on page 489.

I/Q Symbol Derotation

Allows you to derotate I/Q symbols.

- On: Derotate I/Q Symbols.
- Off: No I/Q Symbol derotation.

Remote Command	:DISPlay:EEVM:SDERotation[:STATe] OFF ON 0 1 :DISPlay:EEVM:SDERotation[:STATe]?
Example	DISP:EEVM:SDER ON DISP:EEVM:SDER?
Key Path	View/Display, I/Q Measured Polar Graph
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10577

I/Q Error

For the Remote Commands, see [“View Selection” on page 478](#) and [“View Selection by number \(SCPI only\)” on page 479](#).

This topic includes the following sections, which provide details of this view’s windows, as shown in the examples below:


[“Mag Error window” on page 487](#)

[“Phase Error window” on page 487](#)

[“EVM window” on page 487](#)

[“Metric window” on page 487](#)

Example I/Q Error View

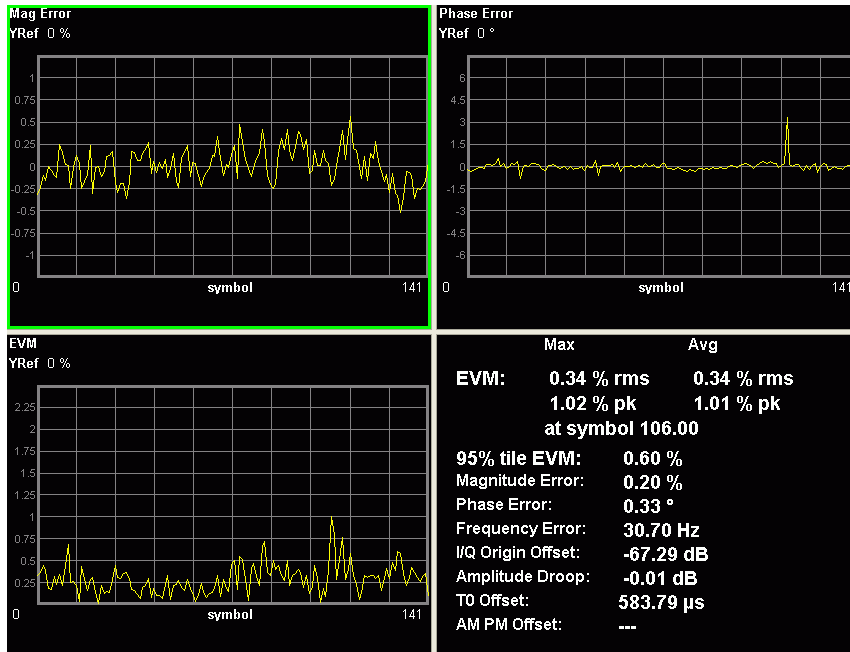

Key Path	View/Display
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0578

Mag Error window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers (in percent) that represent each sample in the magnitude error vector trace for the last slot. (n=3)

Phase Error window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers (in degree) that represent each sample in the phase error vector trace for the last slot. (n=4)

EVM window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers (in percent) that represent each sample in the EVM vector trace for the last slot. (n=2)

Metric window

Name	Corresponding Results	Display Format
EVM [rms] (Max)	n=1 3rd Maximum RMS EVM	9.99% rms
EVM [rms] (Avg)	n=1 2nd RMS EVM	9.99% rms
EVM [pk] (Max)	n=1 5th Maximum peak EVM	9.99% pk
EVM [pk] (Avg)	n=1 4th Peak EVM	9.99% pk
Symbol position of the peak EVM	n=1 6th Symbol position of Peak EVM.	99
95%ile EVM	n=1 1st RMS 95th %ile EVM	9.99%
Magnitude Error	n=1 7th Magnitude error	9.99%
Phase Error	n=1 9th Phase error	9.99°

Frequency Error	n=1 11th Frequency error	-999.99 Hz
I/Q Origin Offset	n=1 13th I/Q origin offset	-99.99 dB
Amplitude Droop	n=1 14th Amplitude droop error	-99.99 dB
T0 Offset	n=1 15th Trigger to T0	0.000 us 0.000 symbols
AMPM Offset	n=1 16th AMPM Offset	0.000 us 0.0000 symbols

NOTE The value of 'T0 Offset' and 'AM PM Offset' is displayed by 'sec' and both 'Symbol' unit. (The figure above does not show this. See the Data Bits figure.)

Symbol Dots

Allows you to toggle the symbol dots between On and Off.

On: turns on blue symbol dots on the trace in 'Mag Error', 'Phase Error' & 'EVM' window.

Off: turns off blue symbol dots on the trace in 'Mag Error', 'Phase Error' & 'EVM' window.

Remote Command	:DISPlay:EEVM:SDOTs[:STATE] OFF ON 0 1 :DISPlay:EEVM:SDOTs[:STATE] ?
Example	DISP:EEVM:SDOT ON DISP:EEVM:SDOT?
Key Path	View/Display
Mode	GSM
Notes	This parameter does not control constellation visible/invisible state on I/Q Measured Polar Graph. You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	I0564

Time Offset Unit

Toggles the unit of Time Offset result between Symbol and Second.

Remote Command	:DISPlay:EEVM:TEXT:TFUNit SECond SYMBol :DISPlay:EEVM:TEXT:TFUNit?
Example	DISP:EEVM:TEXT:TFUN SEC DISP:EEVM:TEXT:TFUN?
Key Path	View/Display, Display
Mode	GSM
Notes	This command only affects the display result. Results returned by remote commands are always expressed in units of "SYMBol".
Preset	SEC
State Saved	Saved in instrument state.
Range	sec symbols
Instrument S/W Revision	Prior to A.02.00
Help Map ID	10516

Data Bits

For the Remote Command, see “[View Selection](#)” on page 478 and “[View Selection by number \(SCPI only\)](#)” on page 479.

Example Data Bits View for EDGE Normal 8PSK Burst

	Max	Avg	
EVM:	0.32 % rms 0.88 % pk at symbol 30.00	0.32 % rms 0.88 % pk	TSC: 0 Mod Scheme: NB 8PSK
95% tile EVM:		0.61 %	
Magnitude Error:	0.14 %	0.14 %	
Phase Error:	0.40 °	0.40 °	
Frequency Error:	-0.75 Hz	-0.75 Hz	
I/Q Origin Offset:		-76.45 dBc	
Amplitude Droop:		0.09 dB	
T0 Offset:	281.463 µs	76.2296 symb	
AM PM Offset:	---	---	
Demodulated Data Training Sequence Highlighted			
0	6673013276 5240245362 7340347223 6565044147 0275546416 7417760377		
60	1771711177 7717771771 7111676134 6202247321 7174661244 3433256114		
120	2100102141 1625303364 67		

Example Data Bits View for EDGE Normal 16QAM Burst

	Max	Avg	
EVM:	7.75 % rms 62.58 % pk at symbol 0.00	7.75 % rms 62.58 % pk	F TSC: 0 F Mod Scheme: NB 16QAM
95% tile EVM:		4.43 %	
Magnitude Error:	5.35 %	5.35 %	
Phase Error:	3.15 °	3.15 °	
Frequency Error:	-1.62 Hz	-1.62 Hz	
I/Q Origin Offset:		-41.63 dBc	
Amplitude Droop:		0.44 dB	
T0 Offset:	284.348 µs	77.0108 symb	
AM PM Offset:	---	---	
Demodulated Data Training Sequence Highlighted			
0	EF83DF1732 094ED1E7CD 8A91C6D5C4 C44021184E 5586F4DC8A 15A7EC92FF		
60	3FF3F333FF FF3FFF3FF3 F333DF9353 3018CA34BF A2C759678F BA0D6DD82D		
120	7D540A5797 7039D27AEA 07		

Example Data Bits View for EDGE Normal 32QAM Burst

	Max	Avg		
EVM:	2.76 % rms 25.67 % pk at symbol 0.00	2.76 % rms 25.67 % pk	F	TSC: 0 Mod Scheme: NB 32QAM
95% tile EVM:		1.44 %		
Magnitude Error:	2.16 %	2.16 %		
Phase Error:	1.07 °	1.07 °		
Frequency Error:	0.35 Hz	0.35 Hz		
I/Q Origin Offset:		-50.60 dBc		
Amplitude Droop:		0.20 dB		
T0 Offset:	284.343 μs	77.0096 symb		
AM PM Offset:	---	---		
Demodulated Data Training Sequence Highlighted				
0	161F011D1E 0519120105 070D03191E 0D110A081C 0D150E0418 1100020206			
30	020E0A1603 0F0917040A 0216131E19 04161F120D 0913000606 0A06120000			
60	1200001200 1212120000 0000120000 0012000012 001212121F 1A05111A19			
90	0C1E071B14 030B0D1B00 16171A1500 0A0A1E0E17 000E0E120F 0B1502080C			
120	1C051D160D 011B180F1F 001E1F021C 1900121316 111C			

Example Data Bits View for EDGE HSR QPSK Burst

	Max	Avg		
EVM:	7.51 % rms 79.07 % pk at symbol 168.00	7.51 % rms 79.07 % pk	F	TSC: 0 Mod Scheme: HB QPSK
95% tile EVM:		3.57 %		
Magnitude Error:	4.25 %	4.25 %		
Phase Error:	6.41 °	6.41 °		
Frequency Error:	-6.29 Hz	-6.29 Hz		
I/Q Origin Offset:		-56.32 dBc		
Amplitude Droop:		-0.14 dB		
T0 Offset:	281.277 μs	76.1791 symb		
AM PM Offset:	---	---		
Demodulated Data Training Sequence Highlighted				
0	3333200331 3301130302 0021103231 0132133031 2022210130 1231113010			
60	3010100000 3003000303 3333330030 3333003330 2010120103 2111120123			
120	3103130202 2011122133 2302102313 3210311030 300012030			

Example Data Bits View for EDGE HSR 16QAM Burst

	Max	Avg	
EVM:	4.60 % rms 50.96 % pk at symbol 168.00	4.60 % rms 50.96 % pk	TSC: 0 F Mod Scheme: HB 16QAM
95% tile EVM:		1.93 %	
Magnitude Error:	2.96 %	2.96 %	
Phase Error:	2.19 °	2.19 °	
Frequency Error:	-4.42 Hz	-4.42 Hz	
I/Q Origin Offset:		-47.82 dBc	
Amplitude Droop:		-0.02 dB	
T0 Offset:	281.278 µs	76.1793 symb	
AM PM Offset:	---	---	
Demodulated Data Training Sequence Highlighted			
0	FF83DF1732 094ED1E7CD 8A91C6D5C4 C44021184E 5586F4DC8A 15A7EC92DF		
60	93533018C3 F33F333F3F FFFFFFF33F3 FFFF33FFF3 A34BFA2C75 9678FBA0D6		
120	DD82D7D540 A57977039D 27AEA24338 5ED9A1DE1F F07BE2E47		

Example Data Bits View for EDGE HSR 32QAM Burst

	Max	Avg	
EVM:	2.46 % rms 24.79 % pk at symbol 0.00	2.46 % rms 24.79 % pk	TSC: 0 F Mod Scheme: HB 32QAM
95% tile EVM:		1.24 %	
Magnitude Error:	1.96 %	1.96 %	
Phase Error:	0.89 °	0.89 °	
Frequency Error:	2.25 Hz	2.25 Hz	
I/Q Origin Offset:		-55.26 dBc	
Amplitude Droop:		0.10 dB	
T0 Offset:	281.272 µs	76.1777 symb	
AM PM Offset:	---	---	
Demodulated Data Training Sequence Highlighted			
0	161F011D1E 0519120105 070D03191E 0D110A081C 0D150E0418 1100020206		
30	020E0A1603 0F0917040A 0216131E19 04161F120D 0913000606 0A06121F1A		
60	05111A190C 1E071B1412 0012120012 1212001200 0000000000 0012120012		
90	0000000012 1200000012 030B0D1B00 16171A1500 0A0A1E0B17 000E0E120F		
120	0B1502080C 1C051D160D 011B180F1F 001E1F021C 1900121316 111C1F0618		
150	15040E061A 17020C0810 0101030107 050B0117		

Metric window

Name	Corresponding Results	Display Format
EVM rms (Max)	n=1 3rd Maximum RMS EVM	9.99%rms
EVM rms (Avg)	n=1 2nd RMS EVM	9.99%rms
EVM Pk (Max)	n=1 5th Maximum peak EVM	9.99%pk
EVM Pk (Avg)	n=1 4th Peak EVM	9.99%pk
Symbol position of the peak EVM	n=1 6th Symbol position of Peak EVM.	99
95%ile EVM	n=1 1st RMS 95th %ile EVM	9.99%
Magnitude Error	n=1 7th Magnitude error	9.99%
Phase Error	n=1 9th Phase error	9.99°
Frequency Error	n=1 11th Frequency error	-999.99 Hz
I/Q Origin Offset	n=1 13th I/Q origin offset	-99.99 dB
Amplitude Droop	n=1 14th Amplitude droop error	-99.99 dB
T0 Offset	n=1 15th Trigger to T0	0.000 us 0.000 symbols
AMPM Offset	n=1 16th AMPM Offset	0.000 us 0.0000 symbols
Mod Scheme	n=8 18th Modulation Scheme	NB 8PSK

Key Path	View/Display
----------	---------------------

EDGE EVM Measurement
View/Display

Instrument S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	10579

The Output RF Spectrum measurement is the GSM version of the adjacent channel power (ACP) measurement.

This topic contains the following sections:

[“Measurement Commands for EDGE Output RF Spectrum” on page 495](#)

[“Remote Command Results for EDGE Output RF Spectrum” on page 495](#)

Measurement Commands for EDGE Output RF Spectrum

The following commands and queries can be used to retrieve the measurement results:

```
:CONFigure:EORFspectr
```

```
:CONFigure:EORFspectr:NDEFault
```

```
:INITiate:EORFspectr
```

```
:FETCh:EORFspectr [n] ?
```

```
:READ:EORFspectr [n] ?
```

```
:MEASure:EORFspectr [n] ?
```

For more measurement related commands, see the section [Remote Measurement Functions@29978](#).

Remote Command Results for EDGE Output RF Spectrum

For the queries listed above, the results returned depend on the value of n, as follows.

Measurement Method	n	Results Returned
	0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.
Single offset	not specified or n = 1	Returns 4 comma-separated results for the specified offset: <ol style="list-style-type: none"> 1. Modulation spectrum power, dB 2. Modulation spectrum power, dBm 3. Switching transient power, dB 4. Switching transient power, dBm

Measurement Method	n	Results Returned
Multi-Offset	not specified or n = 1	<p>Returns a list of comma-separated values for the modulation spectrum at all the offsets (lower and upper). This is followed by the switching transient results at all the offsets (lower and upper). The carrier is considered offset zero (0) and is the first set of results sent. Four values are provided for each of the offsets (including the carrier), in this order:</p> <ol style="list-style-type: none"> 1. Lower offset(a) - power relative to carrier (dB) 2. Lower offset(a) - absolute average power (dBm) 3. Upper offset(a) - power relative to carrier (dB) 4. Upper offset(a) - absolute average power (dBm) <p>Values for all possible offsets are sent. Zeros are sent for offsets that have not been defined. The total number of values sent (120) = (4 results/offset) * (15 offsets) * (2 measurement types - modulation & switching)</p> <p>Carrier – modulation measurement values Offset 1 – modulation measurement values and so on ... Offset 14 – modulation measurement values Carrier – switching transients measurement values Offset 1 – switching transients measurement values ... Offset 14 – switching transients measurement values and so on</p> <p>This measurement defaults to modulation measurements and not switching measurements. If you want to return the switching measurement values, you must change that default condition and use FETCh or READ to return values, rather than MEASure.</p>
Swept	not specified or n = 1	<p>Returns 5 comma-separated results of the closest point to the limit line:</p> <ol style="list-style-type: none"> 1. Frequency 2. Offset frequency from carrier frequency 3. Power in dBm 4. delta from limit (dB) 5. delta from reference (dB)
Single offset	2	<p>Returns floating point numbers (in dBm) of the captured trace data. It contains N data points of the “spectrum due to modulation” signal, where N is the specified number of samples.</p>

Measurement Method	n	Results Returned
Multi-Offset or Swept	2	Nothing returns.
Single offset	3	Returns floating point numbers (in dBm) of the captured trace data. It contains N data points of the “spectrum due to switching transients” signal, where N is the specified number of samples.
Multi-Offset or Swept	3	Nothing returns.
Swept	4	Returns floating point numbers (in dBm) of the sweep spectrum trace.
Multi-Offset or Single Offset	4	Nothing returns.
Swept	5	Returns floating point numbers (in dBm) of the swept limit trace.
Multi-Offset or Single Offset	5	Nothing returns.

Measurement Method	n	Results Returned
Multi-Offset	6	<p>Relative level to the test limit, and test limit itself for both modulation and switching transient measurements.</p> <p>Returns a list of relative level to the test limit, the relative test limit and the absolute test limit for all the offset frequencies. The relative level to the test limit is returned for both lower and upper offsets. Four values are returned for each offset in the following order:</p> <ol style="list-style-type: none"> 1. Relative level to the test limit (dB) at the lower offset frequency 2. Relative level to the test limit (dB) at the upper offset frequency 3. Relative test limit used (dB) 4. Absolute test limit used (dBm) <p>For #3 and #4, the value of the upper offset frequencies are returned when carriers are set to more than 1.</p> <p>Values for all possible offsets are returned.</p> <p>The carrier frequency is considered offset zero (0.0 Hz) and is the first set of values returned.</p> <p>Zeros are returned for offsets that have not been defined.</p> <p>Zeros are returned for the measurement that was not performed. For example, if Meas Type is Modulation, all switching transient measurement results are 0.0.</p> <p>The total number of values returned is:</p> $120 = (4 \text{ results / offset}) * (15 \text{ offset frequencies}) * (2 \text{ measurement types})$ <p>Carrier (Offset A) – modulation measurement results Offset 1 (Offset B) - modulation measurement results ... Offset 14 (Offset O) - modulation measurement results Carrier (Offset A) – switching transients measurement results Offset 1 (Offset B) – switching transient measurement results ... Offset 14 (Offset O) – switching transients measurement results</p>
Single Offset or Swept	6	Returns NULL
All	7	Returns floating point number (in dBm) of Measured Carrier Power Level that determines the PCL.

Measurement Method	n	Results Returned
Multi-Offset	8	<p>Returns a list of relative level to the test limit, test limit itself, and the test limit actually applied for the test (Abs, Rel, or both Abs and Rel) for both modulation and switching transient measurements.</p> <p>Eight values are returned for each offset in the following order.</p> <p><1 ~4: Lower Offset Freq.></p> <ol style="list-style-type: none"> 1. Relative level to the test limit (dB) 2. Relative test limit (dB) 3. Absolute test limit (dBm) 4. Test limit actually applied (1 for Abs, 2 for Rel, 3 for Abs and Rel) <p><5 ~8: Upper Offset Freq.></p> <ol style="list-style-type: none"> 5: Relative level to the test limit (dB) 6: Relative test limit (dB) 7: Absolute test limit (dBm) 8: Test limit actually applied (1 for Abs, 2 for Rel, 3 for Abs and Rel) <p>The total number of values returned:</p> $240 = (8 \text{ values/offset}) * (15 \text{ offset frequencies}) * (2 \text{ Meas Type})$ <p>Values for all possible offsets are returned.</p> <p>The carrier frequency is considered offset zero (0.0 Hz) and is the first set of values returned.</p> <p>Zeros are returned for offsets that have not been defined.</p> <p>Zeros are returned for the measurement that was not performed. For example, if Meas Type is Modulation, all switching transient measurement results are 0.0.</p> <p>When Meas Type is Modulation:</p> <p>Carrier (Offset A) - All values are 0.</p> <p>Offset 1 (Offset B) - limit measurement values</p> <p>...</p> <p>Offset 14 (Offset O) - limit measurement values</p> <p>When Meas Type is Switching:</p> <p>Carrier (Offset A) – All values are 0.</p> <p>Offset 1 (Offset B) –limit measurement values</p> <p>...</p> <p>Offset 14 (Offset O) – limit measurement values</p>

EDGE Output RF Spectrum Measurement

Measurement Method	n	Results Returned
Single Offset or Swept	8	Returns NULL.

Measurement Method	n	Results Returned
All	9	<p>Returns a list of comma-separated values for the Carrier Header Information and the Carrier Power Measurement Results for Modulation and Switching.</p> <p>1. Carrier Header Information for Modulation</p> <p>Nine values are returned in the following order.</p> <ul style="list-style-type: none"> (a) Number of Carriers (b) Reference Carrier (c) VBW/RBW Ratio (d) Modulation Carrier RBW 1 (e) Modulation Carrier RBW 2 (f) Modulation Carrier RBW 3 (g) Power Reference Type (Reference Carrier = 0, Max Power = 1) (h) Actual Reference Carrier (i) Modulation Type for Actual Reference Carrier (GMSK = 0, EDGE = 1) <p>All of the modulation carrier RBW 1, 2, and 3 are valid only when the following conditions are met.</p> <ul style="list-style-type: none"> + The number of carriers is more than 1. + The Meas Type is set to Modulation or Modulation&Switching. + The Carrier RBW is set to Auto. + The Ofst Freq List is set to Standard in the Multi Offset method or the Wideband Noise is set to ON in the Swept method. <p>All are invalid unless the Meas Type is set to Modulation or Modulation&Switching.</p> <p>2. Carrier Power Measurement Results for Modulation</p> <p>Six values are returned for each carrier in the following order.</p> <ul style="list-style-type: none"> (a) Carrier Power (b) Reference Power Measured with Modulation Carrier RBW 1 (c) Reference Power Measured with Modulation Carrier RBW 2 (d) Reference Power Measured with Modulation Carrier RBW 3 (e) Carrier Center Frequency (f) Power Present (No = 0, Yes = 1) <p>The maximum number of carriers is 8, and therefore a total of 48 values are returned.</p> <p>The Carrier Power and the Carrier Center Frequency are invalid when its corresponding Power Present is set to 0.</p> <p>The Reference Power is invalid when its corresponding</p>
		<p>Modulation Carrier RBW is invalid.</p> <p>All are invalid unless the Meas Type is set to Modulation or Modulation&Switching.</p>

Measurement Method	n	Results Returned
Multi-Offset	10	<p>Returns a list of results for both modulation and switching transient measurements in the multi-offset method. Sixteen values are returned for each offset in the following order.</p> <ol style="list-style-type: none"> 1. Offset frequency (Hz) 2. Offset RBW (Hz) <p><3~9: Lower Offset Freq.></p> <ol style="list-style-type: none"> 3. Carrier RBW (Hz) 4. Power relative to carrier (dB) 5. Relative level to the test limit (dB) 6. Absolute average power (dBm) 7. Relative test limit (dB) 8. Absolute test limit (dBm) 9. Test limit actually applied (0 for not applied, 1 for Abs, 2 for Rel, 3 for Abs and Rel) <p><10~16: Upper Offset Freq.></p> <ol style="list-style-type: none"> 10. Carrier RBW (Hz) 11. Power relative to carrier (dB) 12. Relative level to the test limit (dB) 13. Absolute average power (dBm) 14. Relative test limit (dB) 15. Absolute test limit (dBm) 16. Test limit actually applied (0 for not applied, 1 for Abs, 2 for Rel, 3 for Abs and Rel) <p>The total number of values returned: $448 = (16 \text{ values/offset}) * (14 \text{ offset frequencies}) * (2 \text{ Meas Type})$ Values for all possible offsets are returned.</p> <p>Offset 1 – modulation measurement results ... Offset 14 – modulation measurement results Offset 1 – switching transient measurement results ... Offset 14 – switching transient measurement results</p>

Key Path:	Meas
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00, A.07.00
Help Map ID:	I1030

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11056

Ref Value

Allows you to set the absolute power reference.

Key Path:	AMPTD Y Scale
Mode:	GSM
Remote Command:	:DISPlay: EORFspectr:VIEW [1] 2:WINDow [1] :TRACe:Y [:SCALE] :RLEVel <real> :DISPlay: EORFspectr:VIEW [1] 2:WINDow [1] :TRACe:Y [:SCALE] :RLEVel?
Example:	DISP:EORF:VIEW:WIND:TRAC:Y:RLEV -10 DISP:EORF:VIEW:WIND:TRAC:Y:RLEV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELeCt to set the mode. SubOpCode: VIEW[1]:WINDow[1]: RF Envelope window VIEW2:WINDow[1]: Spectrum window
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	When the Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Preset:	0.00 0.00
State Saved:	Saved in instrument state.
Min:	-250.0
Max:	250.0

EDGE Output RF Spectrum Measurement
AMPTD Y Scale

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11006

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement. See [Attenuation@3003@i](#) under AMPTD Y Scale for more information.

Key Path:	AMPTD Y Scale
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Scale/Div

Allows you to enter a numeric value to change the vertical display sensitivity.

Key Path:	AMPTD Y Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe] :PDIVision <rel_ampl> :DISPlay:EORFspectr:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe] :PDIVision?
Example:	DISP:EORF:VIEW:WIND:TRAC:Y:PDIV 2 DISP:EORF:VIEW:WIND:TRAC:Y:PDIV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. SubOpCode: VIEW[1]:WINDow[1]: RF Envelope window VIEW2:WINDow[1]: Spectrum window
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	When the Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Preset:	10.00 10.00
State Saved:	Saved in instrument state.
Min:	0.1

Max:	20.0
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11008

Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement. See [Internal Preamp@3036@j](#) under AMPTD Y Scale for more information, and for details of the keys in this menu.

Key Path:	AMPTD Y Scale
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Ref Position

Allows you to set the display reference position to either 0(Top), 5(Center), or 10(Bottom).

Key Path:	AMPTD Y Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW[1] 2:WINDow[1] :TRACe:Y[:SCALE] :RPOsition TOP CENTer BOTTom :DISPlay:EORFspectr:VIEW[1] 2:WINDow[1] :TRACe:Y[:SCALE] :RPOsition?
Example:	DISP:EORF:VIEW:WIND:TRAC:Y:RPOS TOP DISP:EORF:VIEW:WIND:TRAC:Y:RPOS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode. SubOpCode: VIEW[1]:WINDow[1]: RF Envelope window VIEW2:WINDow[1]: Spectrum window
Dependencies:	Blanked when Meas Method is Multi Offset.
Preset:	TOP TOP
State Saved:	Saved in instrument state.
Range:	Top Ctr Bot
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11009

Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

Key Path:	AMPTD Y Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW [1] 2:WINDow[1] :TRACe:Y[:SCALe] :COUPlE 0 1 OFF ON :DISPlay:EORFspectr:VIEW [1] 2:WINDow[1] :TRACe:Y[:SCALe] :COUPlE?
Example:	DISP:EORF:VIEW:WIND:TRAC:Y:COUP ON DISP:EORF:VIEW:WIND:TRAC:Y:COUP?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. SubOpCode: VIEW[1]:WINDow[1]: RF Envelope window VIEW2:WINDow[1]: Spectrum window
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When user sets a value either Ref Value or Scale/Div manually, this parameter is set to 'Off' automatically.
Preset:	ON
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1010

Auto Couple

Operation of this key is identical across all measurements. For details about this key, see [AUTO COUPLE@3041@i](#).

Key Path:	Front-panel key
Help Map ID:	0

BW

There is no 'BW' functionality supported in EDGE Output RF Spectrum, so this Front-panel key displays a blank menu when pressed.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11018

Cont (Continuous Measurement/Sweep)

Operation of this key is identical across all measurements. For details about this key, see [Cont@3309@i](#).

Key Path:	Front-panel key
Help Map ID:	0

FREQ Channel

Operation of this key is identical across all measurements. For details about this key, see [Front Panel Key@5524@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Input/Output

Operation of this key is identical across all measurements. For details about this key, see [Input/Output@3065@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1054

Select Marker

Displays 12 markers available for selection

Key Path:	Marker
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1020

Marker Type

Sets the marker control mode to **Normal**, **Delta** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Key Path:	Marker
Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE POSITION DELTa OFF :CALCulate:EORFspectr:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE?
Example:	CALC:EORF:MARK:MODE OFF CALC:EORF:MARK:MODE?
Notes:	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.

Preset:	OFF
State Saved:	Saved in instrument state.
Range:	Normal Delta Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11057

Marker X Axis Value (Remote Command Only)

Sets the marker X Axis value, using the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal, Delta** or **Fixed**.

Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> :CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X?
Example:	CALC:EORF:MARK3:X 0 CALC:EORF:MARK3:X?
Notes:	If no suffix is sent , uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated. The query returns the marker’s absolute X Axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Couplings:	Max/Min value is changed by Sweep Time or Frequency Span.
Preset:	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved:	No
Min:	-9.9E37.
Max:	9.9E37
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Marker X Axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI

equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer> :CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?
Example:	CALC:EORFspectr:MARK10:X:POS 0 CALC:EORFspectr:MARK10:X:POS?
Notes:	The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings:	Max/Min value is changed by Sweep Time or Frequency Span.
Preset:	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN).
State Saved:	No
Min:	-9.9E37
Max:	9.9E37
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Marker Y Axis Value (Remote Command Only)

Returns the marker Y Axis value in the current marker Y Axis unit.

The “result” of a marker is the value which is displayed on the second line of the Marker Result block. To properly interpret the returned value, the remote programmer must also know what the analyzer's Y-Axis Unit is set to as described below.

A marker can have up to two results, only one of which is displayed or returned on a query, as follows:

- **Absolute** result: every marker has an absolute result and it is simply:

For Normal and Delta markers, the Y-axis value of the trace point the marker is currently on.

The absolute result is displayed in the result block or returned on a query unless the marker control mode is **Delta**.

- **Relative** result: if a marker's control mode is **Delta**, the relative result is displayed in the result block

or returned on a query. This is the ratio of the Absolute Result of a delta marker.

Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : Y?
Example:	CALC:EORFspectr:MARK11:Y?
Notes:	The query returns the marker Y-axis result. If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset:	0
State Saved:	No
Backwards Compatibility SCPI:	:CALCulate:EORFspectr:MARKer[1] 2 3 4:FUNCTion:RESult?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Properties

Accesses a menu that allow you to set marker properties and to access the marker trace menu.

Key Path:	Marker
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11061

Select Marker

Displays 12 markers available for selection.

Key Path:	Marker, Properties
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

Key Path:	Marker, Properties
Mode:	GSM

EDGE Output RF Spectrum Measurement
Marker

Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> :CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence?
Example:	CALC:EORF:MARK:REF 10 CALC:EORF:MARK:REF?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. When queried a single value is returned (the specified marker numbers relative marker). A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."
Dependencies:	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself."
Preset:	2 3 4 5 6 7 8 9 10 11 12 1
State Saved:	Saved in instrument state.
Min:	1
Max:	12
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1062

Marker Trace

Assigns the specified marker to the designated trace.

Key Path:	Marker, Properties
Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFEMod RFESwitching SPEMod LIMMod :CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?
Example:	CALC:EORF:MARK:TRACE RFES CALC:EORF:MARK:TRACE?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Dependencies:	RF Envelope Modulation and RF Envelop Switching are available only when Meas Method is Single. Swp Spectrum Modulation and Limit Modulation are available when the Meas Method is Swept. Otherwise they are unavailable.
Preset:	RFEMod
State Saved:	Saved in instrument state.
Range:	RF Envelope Modulation RF Envelope Switching Swp Spectrum Modulation Limit Modulation
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11063

Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Key Path:	Marker
Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer:COUPle[:STATE] ON OFF 1 0 :CALCulate:EORFspectr:MARKer:COUPle[:STATE]?
Example:	CALC:EORF:MARK:COUP ON CALC:EORF:MARK:COUP?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	OFF
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11064

All Markers Off

Turns off all markers.

Key Path:	Marker
-----------	---------------

EDGE Output RF Spectrum Measurement
Marker

Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer:AOFF
Example:	CALC:EORFspectr:MARK:AOFF
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1065

Marker State (Backwards Compatibility/Remote Command Only)

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the center of the screen.

Mode:	EDGE GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1 :CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe?
Example:	CALC:EORF:MARK3:STAT ON
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	OFF
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Marker Function

There is no functionality for this Front-panel key in this measurement. Pressing this key displays a blank menu.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11028

Marker To

There is no functionality for this Front-panel key in this measurement. Pressing this key displays a blank menu.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1021

Meas

Operation of this key is identical across all measurements. For details about this key, see [Meas@4008@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1003

Avg/Hold Num

Specifies the number of data acquisitions that are averaged. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

- On – Sets measurement averaging on.
- Off – Sets measurement averaging off.

Key Path:	Meas Setup
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:AVERage:COUNT <integer> [:SENSe] :EORFspectr:AVERage:COUNT? [:SENSe] :EORFspectr:AVERage [:STATe] OFF ON 0 1 [:SENSe] :EORFspectr:AVERage [:STATe] ?
Example:	EORF:AVER:COUN 3 EORF:AVER:COUN? EORF:AVER ON EORF:AVER?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	20 ON
State Saved:	Saved in instrument state.
Range:	1 to 10000
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1022

Meas Type

Selects the measurement type.

Key	SCPI	Type
Mod & Switch	MSWitching	Performs both Modulation and Switching measurements.
Modulation	MODulation	Measures the spectrum due to the 3/8pi shift 8PSK modulation and noise.
Switching	SWITching	Measures the spectrum due to switching transients (burst ramping).
Full Frame Modulation (FAST)	FFModulation	Improves measurement speed by acquiring a full frame of data prior to performing the FFT calculation. This feature can only be used when all slots in the transmitted frame are active.

Key Path:	Meas Setup
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:TYPE MODulation MSWitching SWITching FFModulation [:SENSe] :EORFspectr:TYPE?
Example:	EORF:TYPE MOD EORF:TYPE?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. If a grayed out selection is chosen via SCPI command, it is ignored (no error)
Dependencies:	When “ Meas Method ” on page 529 is set to SWEpt, the Mod & Switch and Full Frame Mod(FAST) selection keys are grayed out. When “ Meas Method ” on page 529 is set to Single Offset, the Full Frame Mod selection key is grayed out.
Preset:	MODulation
State Saved:	Saved in instrument state.
Range:	Mod & Switch Modulation Switching Full Frame Mod (FAST)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11023

Modulation

Opens a menu of keys that allows you to specify parameters for Modulation.

Key Path:	Meas Setup, Meas Type
-----------	------------------------------

EDGE Output RF Spectrum Measurement
Meas Setup

Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1069

Fast Avg

Allows you to change the On/Off state of fast averaging.

Fast average method shortens the measurement speed of spectrum due to modulation when averaging is On. This method halves the actual number of average and measures 10 ~ 90 % of the useful part of the time slot excluding midamble. When this state is set to Off, 50 ~ 90 % of the useful part of the time slot excluding midamble will be measured and actual average number will be the same as the Avg/Hold Num.

Key Path:	Meas Setup, Meas Type, Modulation
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:AVERage:FAST[:STATE] OFF ON 0 1 [:SENSE] :EORFspectr:AVERage:FAST[:STATE] ?
Example:	EORF:AVER:FAST ON EORF:AVER:FAST?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. For EXT, Preset is OFF.
Dependencies:	This parameter is available when: <ul style="list-style-type: none"> • Avg/Hold Num is set to more than 2 and the state is On • Meas Type is set to Modulation • Meas Method is set to Multi Offset or Single Offset.
Preset:	ON
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00, A.06.00
Help Map ID:	I1031

Switching

Opens a menu of keys that allows you to specify parameters for Switching.

Key Path:	Meas Setup, Meas Type
-----------	------------------------------

Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	11070

Fast Peak Det

Allows you to change the On/Off state of fast peak detection.

Fast peak detection method shortens the measurement speed of spectrum due to switching when averaging is On. This method reduces the actual number of average and measures more than 2 slots at one measurement cycle.

Key Path:	Meas Setup, Meas Type, Switching
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:DETEctor:SWITching:FAST [:STATe] ON OFF 1 0 [:SENSe] :EORFspectr:DETEctor:SWITching:FAST [:STATe] ?
Example:	EORF:DET:SWIT:FAST ON EORF:DET:SWIT:FAST?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	This parameter is available when - Avg/Hold Num is set to more than 2 and the state is On - Meas Type is set to Switching - Meas Method is set to Multi Offset or Single Offset.
Preset:	ON
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00, A.06.00
Help Map ID:	11050

Mod Average

Allows you to select the type of averaging method when measuring the spectrum due to modulation.

Pwr Avg (RMS) - True power averaging that is equivalent to taking the RMS value

Log-Pwr Avg (Video) - Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power. (This is known as video averaging.)

EDGE Output RF Spectrum Measurement
Meas Setup

This parameter determines how to average the results of spectrum due to modulation (Avg/Hold Num).

Key	SCPI	Operation
Log-Pwr Avg (Video)	LOG	The log of the power is averaged. (This is also known as video averaging.)
Pwr Avg (RMS)	RMS	The power is averaged, providing the rms of the voltage.

Key Path:	Meas Setup
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:AVErAge:MODulation:TYPE LOG RMS [:SENSe] :EORFspectr:AVErAge:MODulation:TYPE?
Example:	EORF:AVER:MOD:TYPE LOG EORF:AVER:MOD:TYPE?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This parameter is valid when the Meas Type is set to Modulation or Mod/Switch. Otherwise grayed out.
Preset:	LOG
State Saved:	Saved in instrument state.
Range:	Pwr Avg (RMS) Log-Pwr Avg (Video)
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00, A.06.00
Help Map ID:	I1052

Power Ref Carrier

Opens a menu of keys that allows you to specify parameters for power reference carrier.

Key Path:	Meas Setup
Initial S/W Revision:	A.06.00
Help Map ID:	I1071

Power Ref Carrier Type

Allows you to select which carrier power should be used as reference when the Mod Ref Pwr Auto or the

Switch Ref Pwr Auto is set to true.

Key	SCPI	Type
Ref Carrier	REF	Ref Carrier – Uses the power of the carrier indicated by Ref Carrier as reference.
Max Power Carrier	MAX	Max Power Carrier – Uses the power of the carrier with the highest power as reference.

Key Path:	Meas Setup, Power Ref Carrier
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:CARRier:PREFERENCE:TYPE REF MAX [:SENSE] :EORFspectr:CARRier:PREFERENCE:TYPE?
Example:	EORF:CARR:REF:TYPE REF EORF:CARR:REF:TYPE?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELECT to set the mode.
Preset:	MAX
State Saved:	Saved in instrument state.
Range:	Ref Carrier Max Power Carrier
Initial S/W Revision:	A.06.00
Help Map ID:	11072

Mod Ref Power

Allows you to manually set the modulation reference power for each Meas Method

Key Path:	Meas Setup, Power Ref Carrier
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:MODulation:RPOWER <ampl> [:SENSE] :EORFspectr:MODulation:RPOWER? [:SENSE] :EORFspectr:MODulation:RPOWER:AUTO [:STATE] OFF ON 0 1 [:SENSE] :EORFspectr:MODulation:RPOWER:AUTO [:STATE] ?
Example:	EORF:MOD:RPOW -20 EORF:MOD:RPOW? EORF:MOD:RPOW:AUTO 0 EORF:MOD:RPOW:AUTO?

EDGE Output RF Spectrum Measurement
Meas Setup

Preset:	-250 ON
State Saved:	Saved in instrument state.
Min:	-250
Max:	250
Initial S/W Revision:	A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1067

Switching Ref Power

Allows you to manually set the switching reference power for each Meas Method.

Key Path:	Meas Setup, Power Ref Carrier
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:SWITching:RPOWER <ampl> [:SENSe] :EORFspectr:SWITching:RPOWER [:SENSe] :EORFspectr:SWITching:RPOWER:AUTO [:STATe] OFF ON 0 1 [:SENSe] :EORFspectr:SWITching:RPOWER:AUTO [:STATe] ?
Example:	EORF:SWIT:RPOW -20 EORF:SWIT:RPOW? EORF:SWIT:RPOW:AUTO 0 EORF:SWIT:RPOW:AUTO?
Preset:	-250 ON
State Saved:	Saved in instrument state.
Min:	-250
Max:	250
Initial S/W Revision:	A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1068

Meas Method

Selects the measurement method.

Key	SCPI	Method
Multi-Offset	MULTiple	The measurement is done at all offsets in the offset frequency list.
Single Offset (Examine)	SINGle	The measurement is done at only one offset as determined by the offset frequency setting. This allows detailed examination of the time-domain waveform at the specified offset frequency.
Swept	SWEPT	The measurement is done in the frequency domain. For output RF spectrum due to modulation it is done using time-gated spectrum analysis to sweep the analyzer with the gate turned on for the desired portion of the burst only.

Key Path:	Meas Setup
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:MEASure MULTiple SINGle SWEPT [:SENSe] :EORFspectr:MEASure?
Example:	EORF:MEAS SING EORF:MEAS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. If a grayed out selection is chosen via SCPI command, it is ignored (no error). When “Select Modulation Method” is set to DISCcrete, this parameter is forced to MULTiple. When “Select Modulation Method” is set to SWEPT and Meas Type is set to Modulation or Switching, this parameter is forced to SWEPT
Preset:	MULTiple
State Saved:	Saved in instrument state.
Range:	Multi Offset Single Offset (Examine) Swept

Readback Text:	<p>Multi Offset: [xxxxx] where xxxxx is the type of Multi-Offset Freq List: Standard Short Custom</p> <p>Single Offset: (Examine) [xxxxx] where xxxxx is the value of the Single Offset Freq</p> <p>Swept: [WB Noise: xxxxx] where xxxxx is the state ON/OFF of Wideband Noise</p>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1024

Multi Offset

Opens a menu of keys that allows you to specify parameters for Multi Offset measurement method.

Key Path:	Meas Setup, Meas Method
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1073

Offset Frequency List

Frequency list items for Single Carrier

Allows you to select the type of a frequency list used for Multi Offset for Single Carrier. You can select a Standard, Short, or Custom frequency list as shown in the table below.

List	Modulation Offsets (kHz)	Switching Transients Offsets (kHz)
Standard	100, 200, 250, 400, 600, 800, 1000, 1200, 1400, 1600, 1800, 3000, 6000	400, 600, 1200, 1800
Short	200, 250, 400, 600, 1200, 1800	400, 600, 1200, 1800
Custom	User-defined list that specifies: Offset Freq, RES BW, Limit Offsets, Meas Type, Initialized to be the same as the standard list Mod RBW, SW Trans RBW	400, 600, 1200, 1800

Select the list of settings that are used to make the EORFspectr measurement. This specifies standard or customized lists and short lists. The lists contain the offset frequencies (and bandwidths) that are used for the modulation spectrum and transient spectrum parts of the EORFspectr measurement.

- CUSToM – uses the four user-defined lists that specify:
 - Offset frequencies for modulation spectrum measurement
 - Corresponding resolution bandwidths for each of the modulation offset frequencies
 - Offset frequencies for switching transient spectrum measurement
 - Corresponding resolution bandwidths for each of the switching transient offset frequencies
- SHORt - a shortened list of the offset frequencies specified in the GSM Standards. It uses two internal offset frequency lists, one for modulation spectrum and the other for switching transient spectrum. These offset frequencies cannot be changed, but the resolution bandwidths can be changed by other commands in the SENSE:EORFspectr subsystem.
- STANdard - the complete list of the offset frequencies specified in the GSM Standards, except for those offsets greater than 6 MHz. It uses two internal offset frequency lists, one for modulation spectrum and the other for switching transient spectrum. These offset frequencies cannot be changed, but the resolution bandwidths can be changed by other commands in the SENSE:EORFspectr subsystem.

Frequency list items for Multi Carrier

Allows you to select the type of a frequency list used for Multi Offset for Multi Carrier. You can select a Standard, Short, or Custom frequency list as shown in the table below.

List	Modulation Offsets (kHz)	Switching Transients Offsets (kHz)
Standard (Non Contiguous and Inner)	400, 600, 1200, 1800, 2000, 2200, 2400, 2600, and offsets that meet the following conditions. (1) The frequency point is between 2600 kHz (exclusive) above the uppermost carrier in lower group and 2600 kHz (exclusive) below the lowermost carrier in upper group. (2) The frequency point corresponds to the center frequency of one of IM products. (3) The number of offsets is less than 15.	400, 600, 1200, 1800

EDGE Output RF Spectrum Measurement
Meas Setup

List	Modulation Offsets (kHz)	Switching Transients Offsets (kHz)
Standard (Except for the above)	400, 600, 1200, 1800, and offsets that meet the following conditions. (1) The frequency point is between 10 MHz below/above the lower/upper edge of operating band and 1.8 MHz (exclusive) below/above the lowermost/uppermost carrier (2) The frequency point corresponds to the center frequency of one of IM products. (3) The number of offsets is less than 15.	400, 600, 1200, 1800
Short	400, 600, 1200, 1800	400, 600, 1200, 1800
Custom	User-defined list that specifies: Offset Freq, RES BW, Limit Offsets, Meas Type, Initialized to be the same as the standard list Mod RBW, SW Trans RBW	400, 600, 1200, 1800

Select the list of settings that are used to make the EORFspectr measurement. This specifies standard or customized lists and short lists. The lists contain the offset frequencies (and bandwidths) that are used for the modulation spectrum and transient spectrum parts of the EORFspectr measurement.

- CUSTom – uses the four user-defined lists that specify:
 - Offset frequencies for modulation spectrum measurement
 - Corresponding resolution bandwidths for each of the modulation offset frequencies
 - Offset frequencies for switching transient spectrum measurement
 - Corresponding resolution bandwidths for each of the switching transient offset frequencies
- SHORt - a shortened list of the offset frequencies specified in the GSM Standards. It uses two internal offset frequency lists, one for modulation spectrum and the other for switching transient spectrum. These offset frequencies cannot be changed, but the resolution bandwidths can be changed by other commands in the SENSE:EORFspectr subsystem.
- STANdard – a list of the offset frequencies specified in the GSM Standard and the offset frequencies that correspond to IM products. It uses two internal offset frequency lists, one for modulation spectrum and the other for switching transient spectrum. These offset frequencies cannot be changed, but the resolution bandwidths can be changed by other commands in the SENSE:EORFspectr subsystem.

Key Path:	Meas Setup, Meas Method, Multi Offset
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:LIST:SElect CUSTom SHORt STANdard [:SENSE] :EORFspectr:LIST:SElect?

Example:	EORF:LIST:SEL CUST EORF:LIST:SEL?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	SHORT
State Saved:	Saved in instrument state.
Range:	Standard Freq List Short Freq List Custom Freq List
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11025

Min Freq Using Direct Time

Allows you to select the transition frequency (the first offset frequency) where the Direct Time Domain method is used instead of the FFT method. The Direct Time Domain offers a high dynamic range and the measurement speed is faster at a few offset frequencies. The FFT method has a moderate dynamic range (generally sufficient when the RBW = 30 kHz) and the measurement speed is much faster at many offset frequencies. The FFT method uses 5-pole sync-tuned filters, as required by the standards, while the Direct Time method does not. The use of 5-pole sync-tuned filters is critical at close-in offsets, such as 250 kHz and lower, because the measurement standards as written usually test the analyzer filter shape instead of the device under test. At 600 kHz offsets and above, the shape of the filters is unimportant, only their noise bandwidth and impulse bandwidth matter. At 400 kHz offset, the shape matters somewhat; therefore, the best agreement between different pieces of measurement equipment requires that the 400 kHz offset be measured with the FFT method.

Key Path:	Meas Setup, Meas Method, Multi Offset
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:BFRequency <freq> [:SENSe] :EORFspectr:BFRequency?
Example:	EORF:BFR 600e3 EORF:BFR?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Grayed out unless “ Meas Method ” on page 529 is set to MULTiple and “ Meas Type ” on page 523 is set to MSWitching or MODulation.
Preset:	600 kHz
State Saved:	Saved in instrument state.
Min:	0 kHz
Max:	2MHz
Initial S/W Revision:	Prior to A.02.00

EDGE Output RF Spectrum Measurement
Meas Setup

Modified at S/W Revision:	A.06.00
Help Map ID:	I1049

Single Offset

Opens a menu of keys that allows you to specify parameters for Multi Offset measurement method.

Key Path:	Meas Setup, Meas Method
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1074

Single Offset Freq

Allows you to specify a frequency offset from the carrier at which a single offset Output RF Spectrum measurement is performed.

Key Path:	Meas Setup, Meas Method, Single Offset
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:OFrequency <freq> [:SENSE] :EORFspectr:OFrequency?
Example:	EORF:OFR 250kHz EORF:OFR?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	250 kHz
State Saved:	Saved in instrument state.
Min:	-12.0 MHz
Max:	+12.0 MHz
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1026

Ref Pwr Avg

Allows you to specify how many averages you want to execute when measuring the reference power. This parameter is valid when the Meas Method is set to Single. Set to ON to use the same number of averages as specified in the number of bursts averaged command. Set to OFF to use the number specified

in the reference power averages command.

Key Path:	Meas Setup, Meas Method, Single Offset
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:REFerence:AVERage:COUNT <integer> [:SENSe] :EORFspectr:REFerence:AVERage:COUNT? [:SENSe] :EORFspectr:REFerence:AVERage [:AUTO] ON OFF 1 0 [:SENSe] :EORFspectr:REFerence:AVERage [:AUTO] ?
Example:	EORF:REF:AVER:COUN 10 EORF:REF:AVER:COUN? EORF:REF:AVER OFF EORF:REF:AVER?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Dependencies:	This parameter is valid when the Meas Method is set to Single. Otherwise grayed out.
Preset:	10 ON
State Saved:	Saved in instrument state.
Min:	1
Max:	1000
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00, A.06.00
Help Map ID:	11051

Swept

Opens a menu of keys that allows you to specify parameters for Swept measurement method.

Key Path:	Meas Setup, Meas Method
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	11075

Wideband Noise

Allows you to select whether to use the wideband noise function:

- OFF - the analyzer is tuned to the carrier and the sweep is performed as follows.

EDGE Output RF Spectrum Measurement

Meas Setup

— Single Carrier: –1800 kHz to +1800 kHz on either side of the center frequency is swept with the bandwidth of 30 kHz.

— Multi Carrier:

- Non-Contiguous Inner Mode: –400 kHz to +400 kHz from the center frequency of the lowermost and the uppermost carrier is swept with the bandwidth of 30 kHz.
- Other: –1800 kHz to +1800 kHz from the center frequency of the lowermost and the uppermost carrier is swept with the resolution bandwidth of 30 kHz.
- ON - the span is extended until 2 MHz (10 MHz for Multi Carrier) outside the edge of the relevant Tx band. In case of Single Carrier, the power is measured with 100 kHz of resolution bandwidth for frequency offsets beyond 1800 kHz up to 2 MHz outside either side of the Tx band. The limit mask is changed accordingly to exclude –1800 kHz to +1800 kHz on either side of the center frequency. In case of Multi Carrier, the power is measured with 30 kHz, 100 kHz, and 300 kHz of resolution bandwidth for frequency offsets 1800 kHz or less than, beyond 1800 kHz up to 6 MHz, and beyond 6 MHz up to 10 MHz outside either side of the Tx band respectively. ON - the span is extended until 2 MHz (10 MHz for Multi Carrier) outside the edge of the relevant Tx band. For single carrier, the power is measured with the resolution bandwidth of 100 kHz for frequency offsets 1800 kHz up to 2 MHz outside either side of the Tx band. The limit mask is changed accordingly to exclude between –1800 kHz (exclusive) to +1800 kHz (exclusive) on either side of the center frequency. For multi carrier, the power is measured as follows.

For frequency offsets from the centre frequency of the uppermost and lowermost active carrier of more than 6 MHz,

— Within a 600 kHz band centered at the centre frequencies of the intermodulation components, the power is measured with a measurement bandwidth of 300 kHz.

— For offsets outside the 600 kHz bands around the centre frequencies of the intermodulation components, the power is measured with a measurement bandwidth of 100 kHz.

For frequency offsets from the centre frequency of the uppermost and lowermost active carrier of 1.8 MHz up to and including 6 MHz, the power is measured with a measurement bandwidth of 100 kHz.

See [“Limit Test Region for the Swept Method” on page 538](#) for more details.

Key Path:	Meas Setup, Meas Method
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:WBNoise ON OFF 1 0 [:SENSE] :EORFspectr:WBNoise?
Example:	EORF:WBN ON EORF:WBN?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This function is effective only when “Meas Method” on page 529 is Swept and “Meas Type” on page 523 is Modulation. When Wideband Noise is ON, the sweep start/stop frequency is determined by the Radio Band parameter.

Preset:	OFF
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00, A.08.00
Help Map ID:	11027

Non-Contiguous Meas Region

Selects the region to measure for the non-contiguous frequency allocation from either inner or outer.


Key Path:	Meas Setup
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:NCONtiguous:REGion INNER OUTer [:SENSE] :EORFspectr:NCONtiguous:REGion?
Example:	EORF:NCON:REG INN EORF:NCON:REG?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	This function is effective only when the number of active carriers is more than one.
Preset:	INNER
State Saved:	Saved in instrument state.
Range:	Inner Outer
Initial S/W Revision:	A.07.00
Help Map ID:	11080

Offset Frequency

The definition of offset frequency differs depending on the setting of the Non-Contiguous Meas Region. When it is set to Inner, the Lower/Upper offset frequency is defined as frequency offset from the uppermost/lowermost carrier of the lower/upper group, whose value is positive/negative. When it is set to Outer, meanwhile, the Lower/Upper offset frequency is defined as frequency offset from the lowermost/uppermost carrier, whose value is negative/positive.

The figure below shows Lower/Upper Offset Frequency Definition for Non-Contiguous Frequency Allocation.

EDGE Output RF Spectrum Measurement
Meas Setup

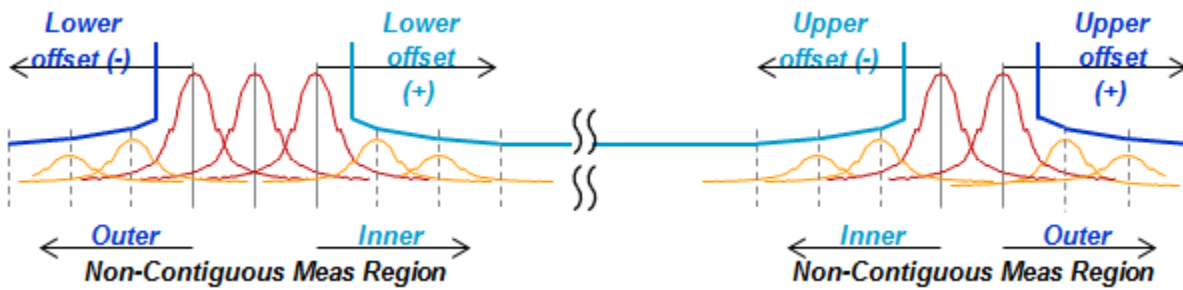


Limit Test Region for the Swept Method

The limit test region for the Swept method differs depending on the settings of both the Non-Contiguous Meas Region and the Wideband Noise.


Wideband Noise	Non-Contiguous Meas Region	Limit Test to be Performed
ON (See "The Limit Test Region for the Wideband Noise ON" on page 538)	Inner	Frequency offsets between 1.8 MHz (inclusive) above the uppermost carrier in lower group and 1.8 MHz (inclusive) below the lowermost carrier in upper group.
	Outer	Frequency offsets between lower/upper edge of operating band $-/+$ 10 MHz and 1.8 MHz (inclusive) below/above the lowermost/uppermost carrier.
OFF (See "The Limit Test Region for the Wideband Noise OFF" on page 539)	Inner	Frequency offsets between 400 kHz and 1.8 MHz (exclusive) above/below the uppermost/lowermost carrier in lower/upper group.
	Outer	Frequency offsets between 400 kHz and 1.8 MHz (exclusive) below/above the lowermost/uppermost carrier.

The figure below shows the Limit Region for the Wideband Noise ON.

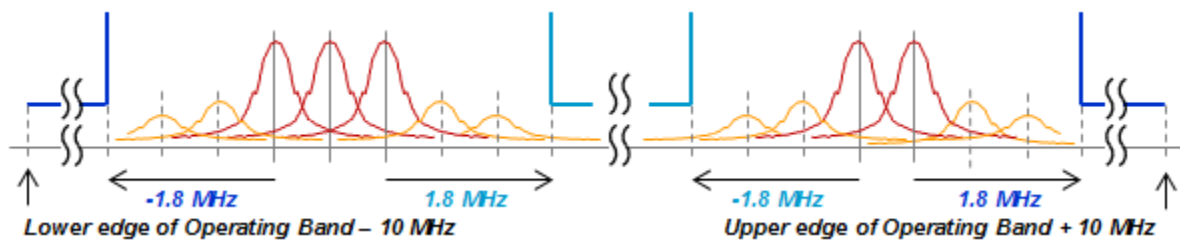

The Limit Test Region for the Wideband Noise ON

The figure below shows the Limit Region for the Wideband Noise OFF.

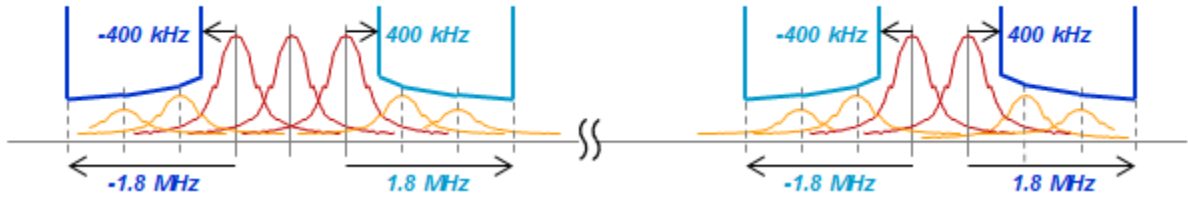

The Limit Test Region for the Wideband Noise OFF

Advanced

Opens a menu of keys that allows you to specify parameters for advanced features that are recommended for use only by advanced users.

Key Path:	Meas Setup
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11032

Modulation Meas BWs

Opens a menu of keys that allows you to specify parameters for bandwidth for the modulation measurement. There are four sections as listed below.

- Carrier RBW (For Modulation Meas BWs)
- ≤ 1800 kHz Offset RBW (for Modulation Meas BWs)
- >1800 kHz Offset RBW (for Modulation Meas BWs)
- >6000 kHz Offset RBW (for Modulation Meas BWs)

This menu key is grayed out when:

- “Meas Type” on page 523 is Switching, or
- Multi-Offset Freq List is Custom, or
- “Meas Method” on page 529 is Swept.

When Carrier is set to 1, the bottom key (i.e. >6000 kHz Offset RBW) is grayed out.

Key Path:	Meas Setup, Advanced
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	11013

Carrier RBW (for Modulation Meas BWs)

Allows you to manually set the bandwidth for measuring the carrier when measuring spectrum due to

EDGE Output RF Spectrum Measurement
Meas Setup

modulation and wideband noise. When you select Auto, the following bandwidth is used.

For frequency offsets less than 1.8 MHz, the bandwidth of 30 kHz is used.

For frequency offsets 1.8 MHz or less, the bandwidth of 30 kHz is used.

For frequency offsets above 1.8 MHz to 6 MHz, the bandwidth of 100 kHz is used.

For frequency offsets more than 6 MHz, the bandwidth of 300 kHz is used.

Allows you to manually set the bandwidth for measuring the carrier when measuring spectrum due to modulation and wideband noise. When you select Auto, the following bandwidth is used.

Frequency Offset	Frequency Point	Bandwidth
<1.8 MHz	-	30 kHz
1.8 MHz ~ 6 MHz	Within 600 kHz band centered at the center frequency of the intermodulation components	100 kHz
	Outside 600 kHz bands around the center frequency of the intermodulation components	30 kHz
> 6 MHz	Within 600 kHz band centered at the center frequency of the intermodulation components	300 kHz
	Outside 600 kHz bands around the center frequency of the intermodulation components	30 kHz

Key Path:	Meas Setup, Advanced, Modulation Meas BWs
Mode:	GSM
Remote Command:	<pre>[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier <freq> [:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier? [:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier:AUTO OFF ON 0 1 [:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:CARRier:AUTO?</pre>
Example:	<pre>EORF:BAND:MOD:CARR 30e3 EORF:BAND:MOD:CARR? EORF:BAND:MOD:CARR:AUTO 0 EORF:BAND:MOD:CARR:AUTO?</pre>
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	30 kHz ON
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[[:SENSe]:EORFspectr:BWIDth[:RESolution]:MODulation:CARRier
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.06.00
Help Map ID:	I1033

< 1800 kHz Offset RBW (for Modulation Meas BWs)

Sets the resolution bandwidth used for the spectrum due to modulation part of the ORFS measurement for offset frequencies less than 1800 kHz.

Key Path:	Meas Setup, Advanced, Modulation Meas BWs
Mode:	GSM
Remote Command:	[[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:CLOSe <freq> [[:SENSe]:EORFspectr:BANDwidth[:RESolution]:MODulation:OFFSet:CLOSe?
Example:	EORF:BAND:MOD:OFFS:CLOS 30 kHz EORF:BAND:MOD:OFFS:CLOS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	30 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[[:SENSe]:EORFspectr:BWIDth[:RESolution]:MODulation:OFFSet:CLOSe
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1034

EDGE Output RF Spectrum Measurement
Meas Setup

>= 1800 kHz Offset RBW (for Modulation Meas BWs)

Sets the resolution bandwidth used for the spectrum due to modulation part of the ORFS measurement for offset frequencies greater than or equal to 1800 kHz.

Key Path:	Meas Setup, Advanced, Modulation Meas BWs
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr: BANDwidth [:RESolution] :MODulation: OFFSet: FAR [1] <freq> [:SENSE] :EORFspectr: BANDwidth [:RESolution] :MODulation: OFFSet: FAR [1] ?
Example:	EORF: BAND: RES: MOD: OFFS: FAR 30 kHz EORF: BAND: RES: MOD: OFFS: FAR ?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT: SELECT to set the mode.
Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	100 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[:SENSE] :EORFspectr: BWIDth [:RESolution] :MODulation: OFFSet: FAR
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1035

> 6000 kHz IM Offset RBW (for Modulation Meas BWs)

Allows you to specify the resolution bandwidth used for the spectrum due to modulation part of the ORFS measurement for offset frequencies greater than 6 MHz.

Key Path:	Meas Setup, Advanced, Modulation Meas BWs
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr: BANDwidth [:RESolution] :MODulation: OFFSet: IM: FAR2 <freq> [:SENSE] :EORFspectr: BANDwidth [:RESolution] :MODulation: OFFSet: IM: FAR2 ?
Example:	EORF: BAND: RES: MOD: OFFS: IM: FAR2 300 kHz EORF: BAND: RES: MOD: OFFS: IM: FAR2 ?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT: SELECT to set the mode.

Dependencies:	This parameter is only used with the “ Offset Frequency List ” on page 530 Standard or Short, and not with Custom. If there is only one carrier, this key will be grayed out.
Preset:	300 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Initial S/W Revision:	A.06.00
Help Map ID:	11079

Switching Meas BWs

Accesses a menu with the following sections:

- Carrier RBW (For Modulation Meas BWs)
- < 1800 kHz Offset RBW (for Modulation Meas BWs)
- >=1800 kHz Offset RBW (for Modulation Meas BWs)
- VBW:3dB RBW (for Switching Meas BWs) – information only. Bandwidth ratio is fixed at 3.

This menu key is grayed out when “[Meas Type](#)” on page 523 is Modulation or Full Frame Mod, or when “[Offset Frequency List](#)” on page 530 is Custom.

Key Path:	Meas Setup, Advanced
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11014

Carrier RBW (for Switching Meas BWs)

Sets the resolution bandwidth for the carrier when measuring spectrum due to switching transients.

Key Path:	Meas Setup, Advanced, Switching Meas BWs
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr: BANDwidth [:RESolution] :SWITching: CARRier <freq> [:SENSE] :EORFspectr: BANDwidth [:RESolution] :SWITching: CARRier?
Example:	EORF: BAND: SWIT: CARR 30e3 EORF: BAND: SWIT: CARR?
Notes:	You must be in the GSM mode to use this command. Use INSTRument: SElect to set the mode.

EDGE Output RF Spectrum Measurement
Meas Setup

Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	300 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[[:SENSE]:EORFspectr:BWIDth[:RESolution]:SWITching:CARRier
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1036

< 1800 kHz Offset RBW (for Switching Meas BWs)

Sets the resolution bandwidth used for the spectrum due to switching transients part of the EORFspectr measurement for offset frequencies less than 1800 kHz.

Key Path:	Meas Setup, Advanced, Switching Meas BWs
Mode:	GSM
Remote Command:	[[:SENSE]:EORFspectr:BWIDth[:RESolution]:SWITching:OFFSet:CLOSe <freq> [[:SENSE]:EORFspectr:BWIDth[:RESolution]:SWITching:OFFSet:CLOSe?
Example:	EORF:BAND:RES:SWIT:OFFS:CLOS 30 kHz EORF:BAND:RES:SWIT:OFFS:CLOS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	30 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[[:SENSE]:EORFspectr:BWIDth[:RESolution]:SWITching:OFFSet:CLOSe
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1037

>= 1800 kHz Offset RBW (for Switching Meas BWs)

Sets the resolution bandwidth used for the spectrum due to switching transients part of the EORFspectr

measurement for offset frequencies greater than or equal to 1800 kHz.

Key Path:	Meas Setup, Advanced, Switching Meas BWs
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr: BANDwidth[:RESolution] :SWITching:OFFSet:FAR <freq> [:SENSE] :EORFspectr: BANDwidth[:RESolution] :SWITching:OFFSet:FAR?
Example:	EORF: BAND: RES: SWIT: OFFS: FAR 30e3 EORF: BAND: RES: SWIT: OFFS: FAR?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT: SELECT to set the mode.
Dependencies:	This parameter is only used with the “Offset Frequency List” on page 530 Standard or Short, and not with Custom.
Preset:	30 kHz
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[:SENSe] :EORFspectr: BWIDth[:RESolution] :SWITching: OFFSet: FAR
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11038

Modulation Custom Offs & Lim

This menu key is available only when the parameters listed below are set to the specified values at the same time. Otherwise it is grayed out.

- Meas Type: Mod & Switch|Modulation|Full Frame Mod
- Meas Method: Multi Offset
- Multi-Offset Freq List: Custom

Key Path:	Meas Setup, Advanced
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11016

Offset

Selects the offset pairs (upper and lower) that affect the menu keys and displays the memory selection menu from A to O. The memory selection menu allows you to store up to 5 sets of parameter values for the offset pairs, such as Offset Freq, Res BW, Rel Limit Level Offset, Abs Limit Level Offset and Apply

EDGE Output RF Spectrum Measurement
Meas Setup

Level Offset. Press Offset until the letter selection at a time is shown on this menu key label.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1017

Offset Freq

This parameter defines a custom set of states that defines whether or not the measurement is made on each defined offset frequency. Note that offset frequencies need to be arranged in ascending order from left to right. Otherwise, the analyzer cannot perform measurements properly.

Key	SCPI	Operation
On	ON 1	The measurement is made on the corresponding frequency in Custom Modulation Offset Freq list.
Off	OFF 0	The measurement is skipped for the corresponding frequency in Custom Modulation Offset Freq list.

Key Path:	Meas Setup, Advanced, Modulation Custom Offset & Limits
Mode:	GSM
Remote Command:	<pre>[:SENSE] :EORFspectr:LIST:MODulation[:FREQUency] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :EORFspectr:LIST:MODulation[:FREQUency] ? [:SENSE] :EORFspectr:LIST:MODulation:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :EORFspectr:LIST:MODulation:STATe?</pre>
Example:	<pre>EORF:LIST:MOD:FREQ 0.0, 1.0e5, 2.0e5 EORF:LIST:MOD:FREQ? EORF:LIST:MOD:STAT ON, ON, ON EORF:LIST:MOD:STAT?</pre>
Notes:	<p>Offset frequencies need to be arranged in ascending order from left to right. Otherwise, the analyzer cannot perform measurements properly.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p> <p>For EXT, BAF Preset is 1,1,1,1,1,1,1,1,1,1,1,0,0,0.</p>

Preset:	0.0, 1.0e5, 2.0e5, 2.5e5, 4.0e5, 6.0e5, 8.0e5, 1.0e6, 1.2e6, 1.4e6, 1.6e6, 1.8e6, 3.0e6, 6.0e6, 0.0 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
State Saved:	Saved in instrument state.
Min:	0.0 Hz
Max:	12.0 MHz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11039

Res BW

Defines the custom set of resolution bandwidths for the modulation spectrum part of the EORFspectr measurement. The first bandwidth specified is for the carrier. Each resolution bandwidth in this list corresponds to an offset frequency in the modulation offset frequency list. The number of items in each list must be the same.

Key Path:	Meas Setup, Advanced, Modulation Custom Offset & Limits
Remote Command:	[:SENSE] :EORFspectr:LIST:MODulation:Bandwidth <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSE] :EORFspectr:LIST:MODulation:Bandwidth?
Example:	EORF:LIST:MOD:BAND 10e3, 20e3, 10e3 EORF:LIST:MOD:BAND?
Notes:	You must be in the GSM, EDGE mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This command is only valid when SENS:EORFspectr:MEAS is set to multiple and the custom list type is selected with SENS:EORFspectr:LISE:SEL CUST.
Preset:	3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,1.000000000E+05,1.000000000E+05,1.000000000E+05,1.000000000E+05
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[:SENSe] :EORFspectr:LIST:MODulation:BWIDth
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11040

Rel Limit Level Offset

Defines the custom set of level offsets for the modulation spectrum part of the EORF measurement. This allows you to modify the standard limits by adding a delta amplitude value to them. The first level offset specified must be 0 dB for the carrier. Each level offset in this list corresponds to an offset frequency in the modulation offset frequency list. The number of items in each of these lists must be the same.

Key Path:	Meas Setup, Advanced, Modulation Custom Offset & Limits
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:LIST:MODulation:LOFFset [:RCARrier] <rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> [:SENSe] :EORFspectr:LIST:MODulation:LOFFset [:RCARrier] ?
Example:	EORF:LIST:MOD:LOFF:RCAR 0.0, -2.0, -5.0 EORF:LIST:MOD:LOFF:RCAR?
Notes:	The first element of the parameters must be zero. Otherwise, the Custom freq list is not used, but Standard freq list is used instead. This command is only valid if SENS:EORF:MEAS is set to multiple, and the custom list type is selected with SENS:EORF:LIST:SEL CUST. You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Preset:	0
State Saved:	Saved in instrument state.
Min:	-200.0
Max:	200.0
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11041

Abs Limit Level Offset

This parameter defines a custom set of absolute limit level offsets for the modulation spectrum part of the EORFspectr measurement. It allows you to modify the standard-defined test limits by adding/subtracting a delta amplitude value to/from them. The single set of the offsets applies to all the cases in terms of all the DUT types and power level classes. It takes an array of float64 numbers. Each element represents absolute level offsets at corresponding Custom Modulation Offset Freq.

Key Path:	Meas Setup, Advanced, Modulation Custom Offset & Limits
Mode:	GSM

Remote Command:	[:SENSe]:EORFspectr:LIST:MODulation:LOFFset:ABSolute <rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> [:SENSe]:EORFspectr:LIST:MODulation:LOFFset:ABSolute?
Example:	EORF:LIST:MOD:LOFF:ABS 0.0, -2.0, -5.0 EORF:LIST:MOD:LOFF:ABS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	0
State Saved:	Saved in instrument state.
Min:	-200.0
Max:	200.0
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11042

Apply Level Offset

Key	SCPI	Operation
Rel	RELative	<p>Only Custom Modulation Relative Limit Level Offsets are applied to standard-defined modulation relative test limit.</p> <p>Standard-defined modulation relative test limit does not change.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>
Both	BOTH	<p>Custom Modulation Relative Limit Level Offsets are applied to standard-defined modulation relative test limit.</p> <p>And, Custom Modulation Absolute Limit Level Offsets are applied to standard-defined modulation absolute test limit.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>
Abs	ABSolute	<p>Only Custom Modulation Absolute Limit Level Offsets are applied to standard-defined modulation absolute test limit.</p> <p>Standard-defined modulation absolute test limit does not change.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>

Key Path:	Meas Setup, Advanced, Modulation Custom Offset & Limits
Mode:	GSM
Remote Command:	<pre>[:SENSe] :EORFspectr:LIST:MODulation:APPLy RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute</pre> <pre>[:SENSe] :EORFspectr:LIST:MODulation:APPLy?</pre>
Example:	<pre>EORF:LIST:MOD:APPL REL, REL, REL EORF:LIST:MOD:APPL?</pre>
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Preset:	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved:	Saved in instrument state.
Range:	Rel Both Abs

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11043

Switching Custom Offs & Lim

This menu key is available only when parameters below are set to the following values at the same time. Otherwise it is grayed out.

- Meas Type: Mod & Switch | Switching
- Meas Method: Multi Offset
- Multi-Offset Freq List: Custom

Key Path:	Meas Setup, Advanced
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11019

Offset

Selects the offset pairs (upper and lower) that affect the menu keys and displays the memory selection menu from A to O. The memory selection menu allows you to store up to 5 sets of parameter values for the offset pairs, such as Offset Freq, Res BW, Rel Limit Level Offset, Abs Limit Level Offset and Apply Level Offset. Press Offset until the letter selection at a time is shown on this menu key label.

Key Path:	Meas Setup, Advanced
Initial S/W Revision:	Prior to A.02.00

Offset Freq

Defines the custom set of offset frequencies at which the switching transient spectrum part of the EORFspectr measurement is made.

The first offset specified must be 0 Hz, for the carrier. For each offset frequency specified, the power is measured at both the lower and upper offsets. Up to 14 offset frequencies, plus the 0 Hz carrier frequency, may be defined.

For the BAF SCPI command:

Key	SCPI	Operation
On	ON 1	The measurement is made on the corresponding frequency in Custom Switching Offset Freq list.
Off	OFF 0	The measurement is skipped for the corresponding frequency in Custom Switching Offset Freq list.

Key Path:	Meas Setup, Advanced, Switching Custom Offsets & Limits
Mode:	GSM

EDGE Output RF Spectrum Measurement
Meas Setup

Remote Command:	<pre>[:SENSe] :EORFspectr:LIST:SWITching[:FREQuency] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :EORFspectr:LIST:SWITching[:FREQuency]? [:SENSe] :EORFspectr:LIST:SWITching:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :EORFspectr:LIST:SWITching:STATe?</pre>
Example:	<pre>EORF:LIST:SWIT:FREQ 0.0, 1.0e5, 2.0e5 EORF:LIST:SWIT:FREQ? EORF:LIST:SWIT:STAT ON, ON, ON EORF:LIST:SWIT:STAT?</pre>
Notes:	<p>This command is only valid if SENS:EORF:MEAS is set to multiple, and the custom list type is selected with SENS:EORF:LIST:SEL CUST.</p> <p>You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.</p> <p>For EXT, BAF Preset is 1,1,1,1,1,0,0,0,0,0,0,0,0,0,0.</p>
Preset:	<pre>0.0, 4.0e5, 6.0e5, 1.2e6, 1.8e6, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</pre>
State Saved:	Saved in instrument state.
Min:	0.0 Hz
Max:	12.0 MHz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1044

Res BW

Defines the custom set of resolution bandwidths for the switching transient spectrum part of the EORFspectr measurement. The first bandwidth specified is for the carrier. Each resolution bandwidth in this list corresponds to an offset frequency in the switching offset frequency list. The number of items in each list must be the same.

Key Path:	Meas Setup, Advanced, Switching Custom Offsets & Limits
Remote Command:	<pre>[:SENSe] :EORFspectr:LIST:SWITching:BANDwidth <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :EORFspectr:LIST:SWITching:BANDwidth?</pre>

Example:	EORF:LIST:SWIT:BAND 1e3, 1e3,1e3 EORF:LIST:SWIT:BAND?
Notes:	This command is only valid if SENS:EORFspectr:MEAS is set to multiple and the custom list type is selected with SENS:EORFspectr:LISE:SEL CUST. You must be in the GSM, EDGE mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	3.000000000E+05,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04,3.000000000E+04
State Saved:	Saved in instrument state.
Min:	1 kHz
Max:	5 MHz
Backwards Compatibility SCPI:	[:SENSe]:EORFspectr:LIST:SWITching:BWIDth
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11045

Rel Limit Level Offset

Defines the custom set of level offsets for the switching transient spectrum part of the EORF measurement. This allows you to modify the standard limits by adding a delta amplitude value to them. The first level offset specified must be 0 dB for the carrier. Each level offset in this list corresponds to an offset frequency in the modulation offset frequency list. The number of items in each of these lists must be the same.

Key Path:	Meas Setup, Advanced, Switching Custom Offsets & Limits
Mode:	GSM
Remote Command:	[:SENSe]:EORFspectr:LIST:SWITching:LOFFset[:RCARrier] <rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> [:SENSe]:EORFspectr:LIST:SWITching:LOFFset[:RCARrier]?
Example:	EORF:LIST:SWIT:LOFF:RCAR 0.0, -2.0, -5.0 EORF:LIST:SWIT:LOFF:RCAR?
Notes:	The first element of the parameters must be zero. Otherwise, the Custom freq list is not used, but Standard freq list is used instead. This command is only valid if SENS:EORF:MEAS is set to multiple, and the custom list type is selected with SENS:EORF:LIST:SEL CUST. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

EDGE Output RF Spectrum Measurement
Meas Setup

Preset:	0
State Saved:	Saved in instrument state.
Min:	-200.0
Max:	200.0
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1046

Abs Limit Level Offset

This parameter defines a custom set of absolute limit level offsets for the Switching spectrum part of the EORFspectr measurement. It allows you to modify the standard-defined test limits by adding/subtracting a delta amplitude value to/from them. The single set of the offsets applies all the cases in terms of all the DUT types and power level classes. It takes an array of float64 numbers. Each element represents absolute level offsets at corresponding Custom Switching Offset Freq.

Key Path:	Meas Setup, Advanced, Switching Custom Offsets & Limits
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:LIST:SWITching:LOFFset:ABSolute <rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>, <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> [:SENSe] :EORFspectr:LIST:SWITching:LOFFset:ABSolute?
Example:	EORF:LIST:SWIT:LOFF:ABS 0.0, -2.0, -5.0 EORF:LIST:SWIT:LOFF:ABS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	0
State Saved:	Saved in instrument state.
Min:	-200.0
Max:	200.0
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1047

Apply Level Offset

Key	SCPI	Operation
Rel	RELative	<p>Only Custom Switching Relative Limit Level Offsets are applied to standard-defined switching relative test limit.</p> <p>Standard-defined switching relative test limit does not change.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>
Both	BOTH	<p>Custom Switching Relative Limit Level Offsets are applied to standard-defined switching relative test limit.</p> <p>And, Custom Switching Absolute Limit Level Offsets are applied to standard-defined switching absolute test limit.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>
Abs	ABSolute	<p>Only Custom Switching Absolute Limit Level Offsets are applied to standard-defined switching absolute test limit.</p> <p>Standard-defined switching absolute test limit does not change.</p> <p>More relaxed test limit between the resulting relative test limit and the resulting absolute test limit is then used for the pass/fail judgment.</p>

Key Path:	Meas Setup, Advanced, Switching Custom Offsets & Limits
Mode:	GSM
Remote Command:	<pre>[:SENSE] :EORFspectr:LIST:SWITching:APPLy RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute, RELative BOTH ABSolute</pre> <p>[:SENSE] :EORFspectr:LIST:SWITching:APPLy?</p>
Example:	<pre>EORF:LIST:SWIT:APPL REL, REL, REL EORF:LIST:SWIT:APPL?</pre>
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH, BOTH
State Saved:	Saved in instrument state.
Range:	Rel Both Abs

EDGE Output RF Spectrum Measurement
Meas Setup

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1048

IM Product Order

Sets the highest order of the intermodulation products to be considered in the measurement. It must be an integer between 3 and 5.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:IMPorder <integer> [:SENSE] :EORFspectr:IMPorder?
Example:	EORF:IMP 5 EORF:IMP?
Preset:	5
State Saved:	Saved in instrument state.
Min:	3
Initial S/W Revision:	A.07.00
Help Map ID:	I1081

Multi Carrier Limit Exception

Selects whether to apply the Multicarrier Limit Exception.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSE] :EORFspectr:MCARrier:LEXception [:STATe] OFF ON 0 1 [:SENSE] :EORFspectr:MCARrier:LEXception [:STATe] ?
Example:	EORF:MCAR:LEXC ON EORF:MCAR:LEXC?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. If set to ON, the exception is applied.
Preset:	OFF
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	A.10.00

Help Map ID:	11076
--------------	-------

Phase Noise Optimization

Selects the type of the LO (local oscillator) phase noise optimization.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:FREQuency:SYNThesis [:STATe] 2 3 [:SENSe] :EORFspectr:FREQuency:SYNThesis [:STATe] ?
Example:	EORF:FREQ:SYNT 2 EORF:FREQ:SYNT?
Notes:	Parameter: 2: optimizes phase noise for wide frequency offsets from the carrier. 3: optimizes LO for tuning speed
Preset:	2
State Saved:	Saved in instrument state.
Range:	Best Wide-Offset Noise Fast Tuning
Initial S/W Revision:	A.10.00
Help Map ID:	11082

Band Extension for Multicarrier

Sets the band extension for multicarrier. The band extension is symmetrically applied on both sides of the relevant transmit band.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:MCARrier:BEXTension <freq> [:SENSe] :EORFspectr:MCARrier:BEXTension?
Example:	EORF:MCAR:BEXT 12e6 EORF:MCAR:BEXT?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset:	10 MHz
State Saved:	Saved in instrument state.
Min:	100 kHz

EDGE Output RF Spectrum Measurement
Meas Setup

Max:	50 MHz
Initial S/W Revision:	A.10.00
Help Map ID:	I1083

Switching Ref Power Type

Selects the type of Switching Reference Power from either Average or Max Hold.

Key Path:	Meas Setup, Advanced
Mode:	GSM
Remote Command:	[:SENSe] :EORFspectr:SWITching:RPOWer:TYPE AVERAge MAXHold [:SENSe] :EORFspectr:SWITching:RPOWer:TYPE?
Example:	EORF:SWIT:RPOW:TYPE AVER EORF:SWIT:RPOW:TYPE?
Preset:	AVERAge
State Saved:	Saved in instrument state.
Range:	Average Max Hold
Initial S/W Revision:	A.11.00
Help Map ID:	I1084

Meas Preset

Restores all the measurement parameters to their default values.

Key Path:	Meas Setup
Mode:	GSM
Remote Command:	:CONFIgure:EORFspectr
Example:	CONF:EORF
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1053

Select Modulation Method (Backwards Compatibility/Remote Command Only)

Mode:	GSM
-------	-----

Remote Command:	[:SENSe] :EORFspectr:TYPE:MODulation [:METHod] DISCcrete SWEep [:SENSe] :EORFspectr:TYPE:MODulation [:METHod] ?
Example:	EORF:TYPE:MOD SWE EORF:TYPE:MOD?
Notes:	The legacy parameter [:SENSe] :EORFspectr:TYPE:MODulation [:METHod] DISCcrete SWEep is aliased to the new command [:SENSe] :EORFspectr:MEASure MULTiple SWEPT. When Meas Method is set to MULTiple, this parameter is forced to DISCcrete. When Meas Method is set to SWEPT, this parameter is forced to SWEep. When this parameter is set to DISCcrete, Meas Method is forced to MULTiple. When this parameter is set to SWEep and “Meas Type” on page 523 is set to MODulation or SWITching., Meas Method is forced to SWEPT.
Dependencies:	This parameter is available only when “Meas Type” on page 523 is set to MODulation or SWITching.
Couplings:	Coupled with “Meas Type” on page 523 and Meas Method. See Notes.
Preset:	DISC
State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mode

Operation of this key is identical across all measurements. For details about this key, see [Mode@2670@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Mode Setup

Operation of this key is identical across all measurements. For details about this key, see [Mode Setup@\(SA\)4001, \(TD-SCDMA\)27031, \(GSM\)5520@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Peak Search

Pressing Peak Search front-panel key performs a peak search and opens this Peak Search menu. Peak Search places the selected marker on the trace point with the maximum y-axis value for that marker's trace.

Key Path:	Front-panel key
Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example:	CALC:EORF:MARK2:MAX
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11066

Min Peak Search (Backwards Compatibility/Remote Command Only)

Mode:	GSM
Remote Command:	:CALCulate:EORFspectr:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum
Example:	CALC:EORF:MARK:MIN
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Recall

Operation of this key is identical across several measurements. For details of this key, see Recall@2637@i.

Key Path:	Front-panel key
Help Map ID:	0

Restart

Operation of this key is identical across all measurements. For details about this key, see Restart@3307@i.

Key Path:	Front-panel key
Help Map ID:	0

Save

Operation of this key is identical across several measurements. For details of this key, see [Save@2600@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Single (Single Measurement/Sweep)

Operation of this key is identical across several measurements. For details about this key, see [Single@3515@i](#).

Key Path:	Front-panel key
Help Map ID:	0

Source (Internal)

Operation of this key is identical across all measurements. For details about this key, see [Source \(Internal\)@35360@i](#).

Key Path:	Front-panel key
Help Map ID:	0

SPAN X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11001

Ref Value

Allows you to set the display X reference value.

Key Path:	Span X Scale
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Ref Value (RF Envelope window)

Allows you to set the display X reference value in the RF Envelope window..

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW [1] :WINDow [1] :TRACe:X[:SCALe]:R LEVel <time> :DISPlay:EORFspectr:VIEW [1] :WINDow [1] :TRACe:X[:SCALe]:R LEVel?
Example:	DISP:EORF:VIEW:WIND:TRAC:X:RLEV 1 DISP:EORF:VIEW:WIND:TRAC:X:RLEV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	If the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually Auto Scaling automatically changes to Off.
Preset:	0.000
State Saved:	Saved in instrument state.

Min:	-1.00 s
Max:	10.00 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11000

Ref Value (Spectrum window)

Allows you to set the display X reference value in the Spectrum window.

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <freq> :DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel?
Example:	DISP:EORF:VIEW2:WIND:TRAC:X:RLEV 0 DISP:EORF:VIEW2:WIND:TRAC:X:RLEV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	If the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off.
Preset:	935.2 MHz
State Saved:	Saved in instrument state.
Min:	Depends on instrument minimum frequency.
Max:	Depends on hardware options and instrument maximum frequency.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11002

Scale/Div

Allows you to set the display X scale/division value.

Key Path:	SPAN X Scale
Mode:	EDGEgSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Scale/Div (RF Envelope window)

Allows you to set the display X scale/division value in the RF Envelope window.

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time> :DISPlay:EORFspectr:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision?
Example:	DISP:EORF:VIEW:WIND:TRAC:X:PDIV 1ms DISP:EORF:VIEW:WIND:TRAC:X:PDIV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	If the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Preset:	57.600 us
State Saved:	Saved in instrument state.
Min:	1.00 ns
Max:	1.00 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1007

Scale/Div (Spectrum window)

Allows you to set the display X scale/division value in the Spectrum window.

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDI Vision <freq> :DISPlay:EORFspectr:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDI Vision?
Example:	DISP:EORF:VIEW2:WIND:TRAC:X:PDIV 1MHz DISP:EORF:VIEW2:WIND:TRAC:X:PDIV?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Dependencies:	Blanked when Meas Method is not Swept
Couplings:	If the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Preset:	360.000 kHz
State Saved:	Saved in instrument state.
Min:	100.000 kHz
Max:	10 MHz
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	11029

Ref Position

Allows you to set the display reference position to Left, Center or Right.

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALE] :RPOsition LEFT CENTer RIGHT :DISPlay:EORFspectr:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALE] :RPOsition?
Example:	DISP:EORF:VIEW:WIND:TRAC:X:RPOS CENT DISP:EORF:VIEW:WIND:TRAC:X:RPOS?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when Meas Method is Multi Offset.
Preset:	LEFT CENTer
State Saved:	No
Range:	Left Ctr Right
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	11004

Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

Key Path:	SPAN X Scale
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW [1] 2:WINDow[1] :TRACe:X[:SCALe] :COUPlE 0 1 OFF ON :DISPlay:EORFspectr:VIEW [1] 2:WINDow[1] :TRACe:X[:SCALe] :COUPlE?
Example:	DISP:EORF:VIEW:WIND:TRAC:X:COUP 1 DISP:EORF:VIEW:WIND:TRAC:X:COUP?
Notes:	Upon pressing the Restart front-panel key or Restart softkey under the Meas Control menu, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either X_Ref_Value_RF Envelope or X_Scale/Div – RF Envelope manually, X Auto Scaling automatically changes to Off You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	Blanked when Meas Method is Multi Offset.
Couplings:	See Notes
Preset:	ON
State Saved:	Saved in instrument state.
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1005

Sweep/Control

Operation of this key is identical across several measurements. For details about this key, see Sweep/Control@3273@i.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Trace/Detector

There is no 'Trace/Detector' functionality supported in EDGE Output RF Spectrum, so this Front-panel key displays a blank menu when pressed.

Key Path:	Front-panel key
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	I1015

Trigger

Operation of this key is identical across several measurements. For details about this key, see [Trigger@3371@i](#).

Key Path:	Front-panel key
Help Map ID:	0

View/Display

Accesses a menu of functions that enable you to:

- Set the display parameters for the current measurement
- Select the View

Key Path:	View/Display
Mode:	EDGE GSM
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	Use 3439

Display

Accesses a menu of functions that enable you to set the display parameters for the current measurement.

See the section [Display@3440@i](#) for more information.

Key Path:	View/Display
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	Use 3440

View Selection

The View/Display key accesses a menu that allows you to select the desired view of the measurement from the following selections.

- ORFS Result Summary (SCPI: RSummary) – views the result summary.
- Carrier Info (SCPI: CINfo) – views the carrier information.

The measurement has several available view types. The displayed view depends on the settings of **Meas Type** (see “[Meas Type](#)” on page 523) and **Meas Method** (see “[Meas Method](#)” on page 529), in the **Meas Setup** menu.

For details of each view, click the link in the View column of the table below. For remote commands, see “[View Selection by Name](#)” on page 577 and “[View Selection by Number \(Remote Command Only\)](#)” on page 578.

Meas Type Setting	Meas Method Setting	View
Modulation or Full Frame Mod (FAST)	Multi Offset	Modulation Power, Multi Offset (See “ Modulation Power ” on page 578)

Meas Type Setting	Meas Method Setting	View
Switching	Multi Offset	Switching Power, Multi Offset (See “Switching Power” on page 586)
Mod & Switch	Multi Offset	Modulation and Switching, Multi Offset (See “Modulation & Switching” on page 591)
Mod & Switch	Single Offset	Modulation and Switching, Single Offset (See “Modulation & Switching” on page 599)
Modulation	Single Offset	Modulation, Single Offset (See “Modulation Power” on page 600)
Switching	Single Offset	Switching, Single Offset (See “Switching Power” on page 603)
Modulation or Switching	Swept	Swept Spectrum (See “Swept Spectrum Views” on page 605 Views)

For any view, if a result fails, a red ‘F’ is displayed beside the result.

View Selection by Name

See also “View Selection by Number (Remote Command Only)” on page 578 Number (Remote Command Only).

Key Path:	View/Display
Mode:	GSM
Remote Command:	:DISPlay:EORFspectr:VIEW[:SElect] RSUMmary CINformation :DISPlay:EORFspectr:VIEW[:SElect] ?
Example:	DISP:EORF:VIEW RSUM DISP:EORF:VIEW?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	RSUMmary
State Saved:	Saved in instrument state.
Range:	ORFS Result Summary Carrier Info
Initial S/W Revision:	A.06.00
Help Map ID:	11011

View Selection by Number (Remote Command Only)

Mode:	GSM
Remote Command:	:DISPlay:EORFSpectr:VIEW:NSElect <integer> :DISPlay:EORFSpectr:VIEW:NSElect?
Example:	DISP:EORF:VIEW:NSEL 5 DISP:EORF:VIEW:NSEL?
Notes:	5: ORFS Result Summary 6: Carrier Info You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset:	5
State Saved:	Saved in instrument state.
Min:	5
Max:	6
Initial S/W Revision:	A.06.00
Help Map ID:	0

Multi Offset Views

The views in this group are displayed when **Meas Method** is set to **Multi Offset**. For details, see [“Meas Method” on page 529](#).

The group includes:

- [“Modulation Power” on page 578](#)
- [“Modulation Carrier Info” on page 584](#)
- [“Switching Power” on page 586](#)
- [“Modulation & Switching” on page 591](#)

Modulation Power

This view is displayed when:

- Meas Type: Modulation
- Meas Method: Multi-Offset
- View/Display: ORFS Result Summary

The view has only one window: the Metrics Window. Details of each element of this window can be found in [“Metrics Window” on page 580](#) and [“Metrics Windows \(for single carrier only\)” on page 583](#).

The following graphic shows an example of this view.

Modulation												
Offset Freq List: Short											VBW/RBW Ratio: 1	
Ref Power: -35.83 dBm / 30 kHz (Carrier 1 at 935.2 MHz)												
				----- Lower -----								----- Upper -----
				----- Limit -----								----- Limit -----
Offset Freq	Res BW	dB	ΔLim(dB)	dBm	Rel dB	Abs dBm	dB	ΔLim(dB)	dBm	Rel dB	Abs dBm	
400 kHz	30 kHz	-63.07	(-57.90)	-98.90	-55.36	-41.00	-63.31	(-58.14)	-99.14	-53.75	-41.00	
600 kHz	30 kHz	-56.21	(-51.04)	-92.04	-58.54	-41.00	-61.04	(-55.87)	-96.87	-56.95	-41.00	
1.2 MHz	30 kHz	-60.28	(-55.11)	-96.11	-60.45	-41.00	-61.97	(-56.80)	-97.80	-59.52	-41.00	
1.8 MHz	30 kHz	-49.57	(-44.40)	-85.40	-61.45	-41.00	-61.43	(-56.26)	-97.26	-61.45	-41.00	

Metrics Window

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Carrier Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	
Offset Freq List	None Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power	n=1 2 Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz] Index of the Power Reference Carrier Center Frequency of the Power Reference Carrier [Hz]	-99.99/99/1/99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	None Offset Frequency to be measured [Hz]	-99.99
Res BW	None Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower	n=8N*8+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower	n=8N*8+2 Relative lower test limit used [dB]	-99.99

Name	Corresponding Results	Display Format
Limit Abs dBm Lower	n=8N*8+3 Absolute lower test limit used [dBm]	-99.99
Abs/Rel Lower Limit Applied	n=8 N*8+4 Which lower test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1
Upper dB	n=1N*4+3 Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper	n=8N*8+5 Relative level to the test limit [dB] at the upper offset(N)	-99.99
Upper dBm	n=1N*4+4 Upper offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Upper	n=8N*8+6 Relative upper test limit used [dB]	-99.99
Limit Abs dBm Upper	n=8 N*8+7 Absolute upper test limit used [dBm]	-99.99
Abs/Rel Upper Limit Applied	n=8 N*8+8 Which upper test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1

The measurement results for an offset frequency are typically displayed in one row in a table. However, there is a possibility that the results are displayed in two rows in a multi-carrier system. The following graphic depicts an example of this. In the figure, the results for an offset frequency of 8.0 MHz are displayed in two rows enclosed by green lines. The results for the lower/upper offset are displayed in the

EDGE Output RF Spectrum Measurement
View/Display

lower/upper row respectively. This is a case where one of the lower and upper offset frequencies corresponds to IM Products and the other doesn't. In such case, the Res BWs are different between the two offset frequencies and therefore, the results are displayed in two separate rows. The results from the query READ/FETCH are retrieved in a format similar to the displayed table. For invalid data indicated by "---", if they are power related data, the results are returned as 9.91E+37 which means NaN (Not a Number). If they indicate the limit applied, Rel or Abs, the results are returned as 0 which means neither of the two is applied.

Modulation													
		Offset Freq List				Standard							
						VBW/RBW Ratio: 1							
		Ref Power:				26.08 dBm / 30 kHz (Carrier 2 at 937.2 MHz)							
						30.05 dBm / 100 kHz (Carrier 2 at 937.2 MHz)							
						32.07 dBm / 300 kHz (Carrier 2 at 937.2 MHz)							
		----- Lower -----				----- Limit -----				----- Upper -----			
Offset Freq	Res BW	dB	ΔLim(dB)	dBm	Rel dB	Abs dBm	dB	ΔLim(dB)	dBm	Rel dB	Abs dBm		
400 kHz	30 kHz	-74.81	(-19.13)	-48.74	-55.69	-36.00	-76.40	(-20.71)	-50.32	-55.69	-36.00		
600 kHz	30 kHz	-77.83	(-17.97)	-51.75	-59.86	-36.00	-78.68	(-18.83)	-52.61	-59.86	-36.00		
1.2 MHz	30 kHz	-78.03	(-15.95)	-51.95	-62.14	-36.00	-79.27	(-17.20)	-53.20	-62.76	-36.00		
1.8 MHz	30 kHz	-77.96	(-15.89)	-51.89	-63.42	-36.00	-78.65	(-16.57)	-52.57	-64.27	-36.00		
2.0 MHz	100 kHz	-48.87	(12.08)	-18.82	-60.96	-36.00	-71.53	(-10.57)	-41.48	-60.96	-36.00		
3.0 MHz	100 kHz	-68.28	(-7.33)	-38.23	-60.96	-36.00	-77.70	(-16.74)	-47.64	-60.96	-36.00		
4.0 MHz	100 kHz	-65.47	(-4.51)	-35.42	-60.96	-36.00	-77.42	(-16.46)	-47.36	-60.96	-36.00		
5.0 MHz	100 kHz	-67.14	(-6.18)	-37.09	-60.96	-36.00	-76.92	(-15.97)	-46.87	-60.96	-36.00		
7.0 MHz	300 kHz	-52.84	(15.23)	-20.77	-70.00	-36.00	-75.05	(-6.99)	-42.99	-70.00	-36.00		
8.0 MHz	300 kHz	-75.08	(-7.01)	-43.01	-70.00	-36.00	---	---	---	---	---		
8.0 MHz	100 kHz	---	---	---	---	---	-74.00	(-11.92)	-47.92	-75.23	-36.00		
9.0 MHz	300 kHz	-69.65	(-1.59)	-37.59	-70.00	-36.00	-75.44	(-7.37)	-43.37	-70.00	-36.00		
10.0 MHz	300 kHz	-75.42	(-7.36)	-43.36	-70.00	-36.00	-75.65	(-7.58)	-43.58	-70.00	-36.00		

Metrics Windows (for single carrier only)

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	PCL: ## AutoRange
Offset Freq List	None Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power	n=1 2 Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99/99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	None Offset Frequency to be measured [Hz]	-99.99
Res BW	None Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower	n=6N*4+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower	n=6N*4+3 Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower	n=6N*4+4 Absolute lower test limit used [dBm]	-99.99

Name	Corresponding Results	Display Format
Upper dB	$n=1N*4+3$ Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper	$n=6N*4+2$ Relative level to the test limit [dB] at the upper offset(N)	-99.99
Upper dBm	$n=1N*4+4$ Upper offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Upper	$n=6N*4+3$ Relative upper test limit used [dB]	-99.99
Limit Abs dBm Upper	$n=6N*4+4$ Absolute upper test limit used [dBm]	-99.99

Modulation Carrier Info

This view is displayed when:

- Meas Type: Modulation
- Meas Method: Multi-Offset
- View/Display: Carrier Info

The view has only one window: the Metrics Window. Details of each element of this window can be found in “[Metrics Window](#)” on page 586.

The following graphic shows an example of this view.

Modulation Carrier Info

VBW/RBW Ratio: 1

	Carr Pwr	Ref Pwr	RBW 30kHz, 100kHz, 300kHz	Offset Freq	Freq	Pwr Present	Pwr Ref
1:	-28.20 dBm	-35.90 dBm	-31.77 dBm -29.60 dBm	0.0000 Hz	935.20 MHz	Yes	Max Pwr
2:	-56.38 dBm	-93.02 dBm	-89.21 dBm -78.05 dBm	600.00 kHz	935.80 MHz	No	
3:	-56.29 dBm	-94.50 dBm	-90.22 dBm -77.66 dBm	1.2000 MHz	936.40 MHz	No	
4:	-28.27 dBm	-36.02 dBm	-31.78 dBm -29.72 dBm	1.8000 MHz	937.00 MHz	Yes	
5:	-28.31 dBm	-36.14 dBm	-31.90 dBm -29.87 dBm	2.4000 MHz	937.60 MHz	Yes	
6:	-28.35 dBm	-36.13 dBm	-31.91 dBm -29.81 dBm	3.0000 MHz	938.20 MHz	Yes	

Metrics Window

Name	Corresponding Results	Display Format
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Carrier Index	None Index of Carrier to be measured	1
Carr Pwr	None Carrier Power for Power Level (Measured with 400kHz RBW)	-99.99
Ref Pwr	None Carrier Power for Reference Power (Measured with the specified RBW. e.g. 30kHz, 100kHz, 300kHz)	-99.99/99
Offset Freq	None Offset Frequency from the Reference Carrier for each Carrier [Hz]	99
Freq	None Center Frequency of each Carrier [Hz]	99
Pwr Present	None Indicates whether the power is present for each carrier	Yes
Pwr Ref	None Indicates the type of the Power Reference if the carrier is the Power Reference Carrier (Ref Carr Max Pwr)	Ref Carr

Switching Power

This view is displayed when:

- Meas Type: Switching
- Meas Method: Multi-Offset

The view has only one window: the Metrics Window. Details of each element of this window can be found in “[Metrics Window](#)” on page 588 and “[Metrics Window \(for single carrier only\)](#)” on page 590 (for single carrier only).

The following graphic shows an example of this view.

Switching

Offset Freq List: Short



VBW/RBW Ratio: 3

Ref Power: -4.30 dBm / 300 kHz

Offset Freq	Res BW	dB	ΔLim(dB)	----- Lower -----				----- Upper -----			
				----- Limit -----		----- Limit -----		----- Limit -----		----- Limit -----	
				dBm	Rel dB	Abs dBm	dB	ΔLim(dB)	dBm	Rel dB	Abs dBm
400 kHz	30 kHz	-65.26	(-33.56)	-69.56	-52.00	-36.00	-64.49	(-32.79)	-68.79	-52.00	-36.00
600 kHz	30 kHz	-65.71	(-34.01)	-70.01	-62.00	-36.00	-65.24	(-33.53)	-69.53	-62.00	-36.00
1.2 MHz	30 kHz	-64.37	(-32.67)	-68.67	-74.00	-36.00	-65.67	(-33.97)	-69.97	-74.00	-36.00
1.8 MHz	30 kHz	-65.84	(-34.14)	-70.14	-74.00	-36.00	-65.88	(-34.18)	-70.18	-74.00	-36.00

Metrics Window

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	PCL: ## AutoRange
Offset Freq List	None Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power	n=1 62 Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	None Offset Frequency to be measured [Hz]	-99.99
Res BW	None Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower	n=8N*8+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower	n=8N*8+2 Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower	n=8N*8+3 Absolute lower test limit used [dBm]	-99.99

Name	Corresponding Results	Display Format
Abs/Rel Lower Limit Applied	$n=8N*8+4$ Which lower test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1
Upper dB	$n=1N*4+3$ Upper offset(N) – power relative to carrier [dB]	–99.99
Delta from Limit dB Upper	$n=8N*8+5$ Relative level to the test limit [dB] at the upper offset(N)	–99.99
Upper dBm	$n=1N*4+4$ Upper offset(N) – absolute average power [dBm]	–99.99
Limit Rel dB Upper	$n=8N*8+6$ Relative test limit used [dB]	–99.99
Limit Abs dBm Upper	$n=8N*8+7$ Absolute test limit used [dBm]	–99.99
Abs/Rel Upper Limit Applied	$n=8(N-1)*8+8$ Which upper test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1

Metrics Window (for single carrier only)

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	PCL: ## AutoRange
Offset Freq List	None Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power	n=1 62 Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	None Offset Frequency to be measured [Hz]	-99.99
Res BW	None Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower	n=6N*4+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower	n=6N*4+3 Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower	n=6N*4+4 Absolute lower test limit used [dBm]	-99.99

Name	Corresponding Results	Display Format
Upper dB	$n=1N*4+3$ Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper	$n=6N*4+2$ Relative level to the test limit [dB] at the upper offset(N)	-99.99
Upper dBm	$n=1N*4+4$ Upper offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Upper	$n=6^N*4+3$ Relative upper test limit used [dB]	-99.99
Limit Abs dBm Upper	$n=6N*4+4$ Absolute upper test limit used [dBm]	-99.99

Modulation & Switching

This view is displayed when:

- Meas Type: Mod & Switch
- Meas Method: Multi-Offset

The view has only one window: the Metrics Window. Details of each element of this window can be found in [“Metrics Window” on page 593](#) and [“Metrics Window \(for single carrier only\)” on page 597](#) (for single carrier only).

The following graphic shows an example of this view.

EDGE Output RF Spectrum Measurement
View/Display

Modulation & Switching				Offset Freq List: Short				VBW/RBW Ratio: 1			
Modulation		Ref Power: -11.22 dBm / 30 kHz									
		----- Lower -----				----- Upper -----					
Offset Freq	Res BW	dB	Δ Lim(dB)	dBm	Rel dB	Abs dBm	dB	Δ Lim(dB)	dBm	Rel dB	Abs dBm
		----- Limit -----				----- Limit -----					
200 kHz	30 kHz	-39.84	(-9.84)	-51.06	-30.00	-65.00	-40.16	(-10.16)	-51.38	-30.00	-65.00
250 kHz	30 kHz	-42.37	(-9.37)	-53.58	-33.00	-65.00	-41.50	(-8.50)	-52.72	-33.00	-65.00
400 kHz	30 kHz	-67.12	(-13.34)	-78.34	-56.00	-65.00	-68.05	(-14.26)	-79.26	-56.00	-65.00
600 kHz	30 kHz	-70.30	(-16.52)	-81.52	-60.00	-65.00	-70.59	(-16.81)	-81.81	-60.00	-65.00
1.2 MHz	30 kHz	-70.66	(-16.87)	-81.87	-63.00	-65.00	-69.88	(-16.10)	-81.10	-63.00	-65.00
1.8 MHz	100 kHz	-65.47	(-11.68)	-76.68	-65.00	-65.00	-65.27	(-11.49)	-76.49	-65.00	-65.00

Switching				Ref Power: -4.28 dBm / 300 kHz				VBW/RBW Ratio: 3			
		----- Lower -----				----- Upper -----					
Offset Freq	Res BW	dB	Δ Lim(dB)	dBm	Rel dB	Abs dBm	dB	Δ Lim(dB)	dBm	Rel dB	Abs dBm
		----- Limit -----				----- Limit -----					
400 kHz	30 kHz	-65.41	(-33.69)	-69.69	-52.00	-36.00	-64.01	(-32.29)	-68.29	-52.00	-36.00
600 kHz	30 kHz	-65.06	(-33.33)	-69.33	-62.00	-36.00	-65.01	(-33.29)	-69.29	-62.00	-36.00
1.2 MHz	30 kHz	-65.64	(-33.92)	-69.92	-74.00	-36.00	-65.64	(-33.92)	-69.92	-74.00	-36.00
1.8 MHz	30 kHz	-65.20	(-33.47)	-69.47	-74.00	-36.00	-65.29	(-33.57)	-69.57	-74.00	-36.00

Metrics Window

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STAtE is set to 0 Off. This is shown for MS only.	PCL: ## AutoRange
Offset Freq List	Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power (Modulation)	n=1 2 Modulation Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99/99
Ref Power (Switching)	n=1 62 Switching Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99/99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	Offset Frequency to be measured [Hz]	-99.99
Res BW	Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB (Modulation)	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower (Modulation)	n=8N*8+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm (Modulation)	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower (Modulation)	n=8N*8+2 Relative lower test limit used [dB]	-99.99

Name	Corresponding Results	Display Format
Limit Abs dBm Lower (Modulation)	$n=8N*8+3$ Absolute lower test limit used [dBm]	-99.99
Abs/Rel Lower Limit Applied (Modulation)	$n=8 N*8+4$ Which lower test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1
Upper dB (Modulation)	$n=1N*4+3$ Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper (Modulation)	$n=8N*8+5$ Relative level to the test limit [dB] at the upper offset(N)	-99.99
Limit Rel dB Upper (Modulation)	$n=8^N*8+6$ Relative test limit used [dB]	-99.99
Limit Abs dBm Upper (Modulation)	$n=8N*8+7$ Absolute test limit used [dBm]	-99.99
Abs/Rel Upper Limit Applied (Modulation)	$n=8 N*8+8$ Which upper test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1
Lower dB (Switching)	$n=1 N*4+61$ Lower offset(N) – power relative to carrier [dB]	-99.99

Name	Corresponding Results	Display Format
Delta from Limit dB Lower (Switching)	n=8 N*8+121 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm (Switching)	n=1 N*4+62 Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower (Switching)	n=8 N*8+122 Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower (Switching)	n=8 N*8+123 Absolute lower test limit used [dBm]	-99.99
Abs/Rel Lower Limit Applied (Switching)	n=8 N*8+124 Which lower test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1
Upper dB (Switching)	n=1 N*4+63 Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper (Switching)	n=8 N*8+125 Relative level to the test limit [dB] at the upper offset(N)	-99.99
Limit Rel dB Upper (Switching)	n=8 N*8+126 Relative test limit used [dB]	-99.99
Limit Abs dBm Upper (Switching)	n=8 N*8+127 Absolute test limit used [dBm]	-99.99

EDGE Output RF Spectrum Measurement
View/Display

Name	Corresponding Results	Display Format
Abs/Rel Upper Limit Applied (Switching)	n=8 N*8+128 Which upper test limit is applied, Abs or Rel (0 1 2 3) “0” indicates neither test limit is applied. “1” indicates Absolute test limit is applied “2” indicates Relative test limit is applied. “3” indicates both test limits are applied. This means Absolute test limit is equal to Relative test limit.	1

Metrics Window (for single carrier only)

Name	Corresponding Results	Display Format
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	PCL: ## AutoRange
Offset Freq List	Offset Frequency list parameter value (Standard Short Custom)	Short
Ref Power (Modulation)	n=1 2 Modulation Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99/99
Ref Power (Switching)	n=1 62 Switching Reference Power for all offsets [dBm] Resolution Bandwidth for reference power measurement [Hz]	-99.99/99
VBW/RBW Ratio	None VBW/RBW Ratio (1 3) [1 = Modulation, 3 = Switching]	1
Offset Freq	Offset Frequency to be measured [Hz]	-99.99
Res BW	Resolution Bandwidth for each offset [Hz]	-99.99
Lower dB (Modulation)	n=1N*4+1 Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower (Modulation)	n=6N*4+1 Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm (Modulation)	n=1N*4+2 Lower offset(N) – absolute average power [dBm]	-99.99

EDGE Output RF Spectrum Measurement
View/Display

Name	Corresponding Results	Display Format
Limit Rel dB Lower (Modulation)	$n=6^N*4+3$ Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower (Modulation)	$n=6N*4+4$ Absolute lower test limit used [dBm]	-99.99
Upper dB (Modulation)	$n=1N*4+3$ Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper (Modulation)	$n=6N*4+2$ Relative level to the test limit [dB] at the upper offset(N)	-99.99
Limit Rel dB Upper (Modulation)	$n=6^N*4+3$ Relative test limit used [dB]	-99.99
Limit Abs dBm Upper (Modulation)	$n=6N*4+4$ Absolute test limit used [dBm]	-99.99
Lower dB (Switching)	$n=1 N*4+61$ Lower offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Lower (Switching)	$n=6 N*4+61$ Relative level to the test limit [dB] at the lower offset(N)	-99.99
Lower dBm (Switching)	$n=1 N*4+62$ Lower offset(N) – absolute average power [dBm]	-99.99
Limit Rel dB Lower (Switching)	$n=6 N*4+63$ Relative lower test limit used [dB]	-99.99
Limit Abs dBm Lower (Switching)	$n=6 N*4+64$ Absolute lower test limit used [dBm]	-99.99
Upper dB (Switching)	$n=1 N*4+63$ Upper offset(N) – power relative to carrier [dB]	-99.99
Delta from Limit dB Upper (Switching)	$n=6 N*4+62$ Relative level to the test limit [dB] at the upper offset(N)	-99.99

Name	Corresponding Results	Display Format
Limit Rel dB Upper (Switching)	n=6 N*4+63 Relative test limit used [dB]	-99.99
Limit Abs dBm Upper (Switching)	n=6 N*4+64 Absolute test limit used [dBm]	-99.99

Single Offset Views

The views in this group are displayed when **Meas Method** is set to **Single Offset**. For details, see [“Meas Method” on page 529](#).

The group includes:

- [“Modulation & Switching” on page 599](#)
- [“Modulation Power” on page 600](#)
- [“Modulation Carrier Info” on page 601](#)

Modulation & Switching


This view is displayed when:

- Meas Type: Mod & Switch
- Meas Method: Single Offset

The following graphic shows an example of this view, in which:

- The blue trace is the Switching data
- The yellow trace is the Modulation data
- The measurement gates are shown as vertical white lines

[“Fast Avg” on page 524](#) is not available for this measurement.

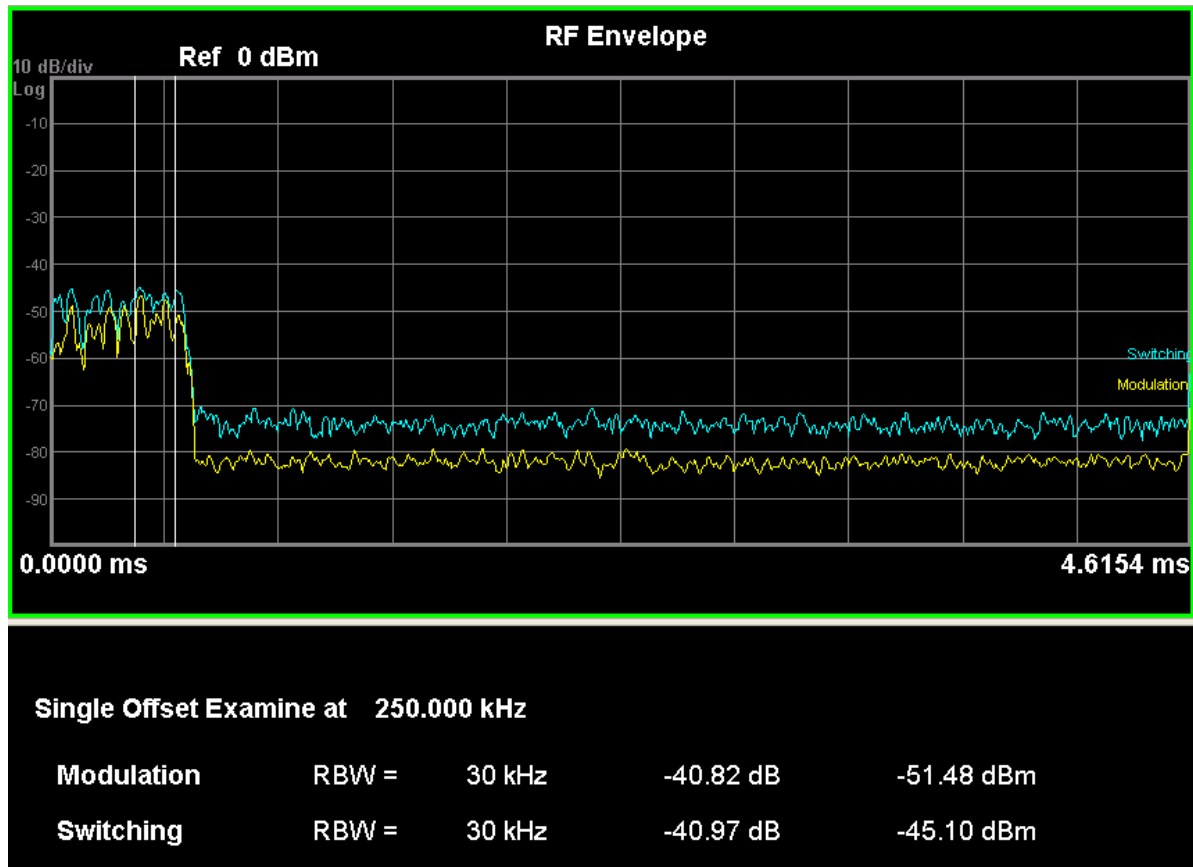

Modulation Power

This view is displayed when:

- Meas Type: Modulation
- Meas Method: Single-Offset
- View/Display: ORFS Result Summary

The view has 2 windows:

- “Graph Window ” on page 601
- “Metrics Window ” on page 601

The following graphic shows an example of this view, in which:

- The white vertical lines represent the modulation section to be measured for modulation measurement.
- The red vertical lines represent the added section to be measured when “Fast Avg” on page 524 is set to ‘On’ (improve measurement speed).

Graph Window

Marker Operation	Yes
Corresponding Trace	Yellow: Series of floating point numbers that represent the “spectrum due to modulation” signal. (n=2)

Metrics Window

Name	Corresponding Results	Display Format
Modulation [dB]	n=1 1 st Modulation spectrum power	-99.99 dB
Modulation [dBm]	n=1 2 nd Modulation spectrum power	-99.99 dBm
Transmit Power	n=7 Transmit Power	-99.99 dBm
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.	PCL: ## Auto

Modulation Carrier Info

This view is displayed when:

- Meas Type: Modulation
- Meas Method: Single-Offset
- View/Display: Carrier Info


The view has 2 windows:

- [“Graph Window ” on page 603](#)
- [“Metrics Window ” on page 603](#)

The following graphic shows an example of this view, in which:

- The white vertical lines represent the modulation section to be measured for modulation measurement.
- The red vertical lines represent the added section to be measured when [“Fast Avg” on page 524](#) is set to ‘On’ (improve measurement speed).

EDGE Output RF Spectrum Measurement
View/Display

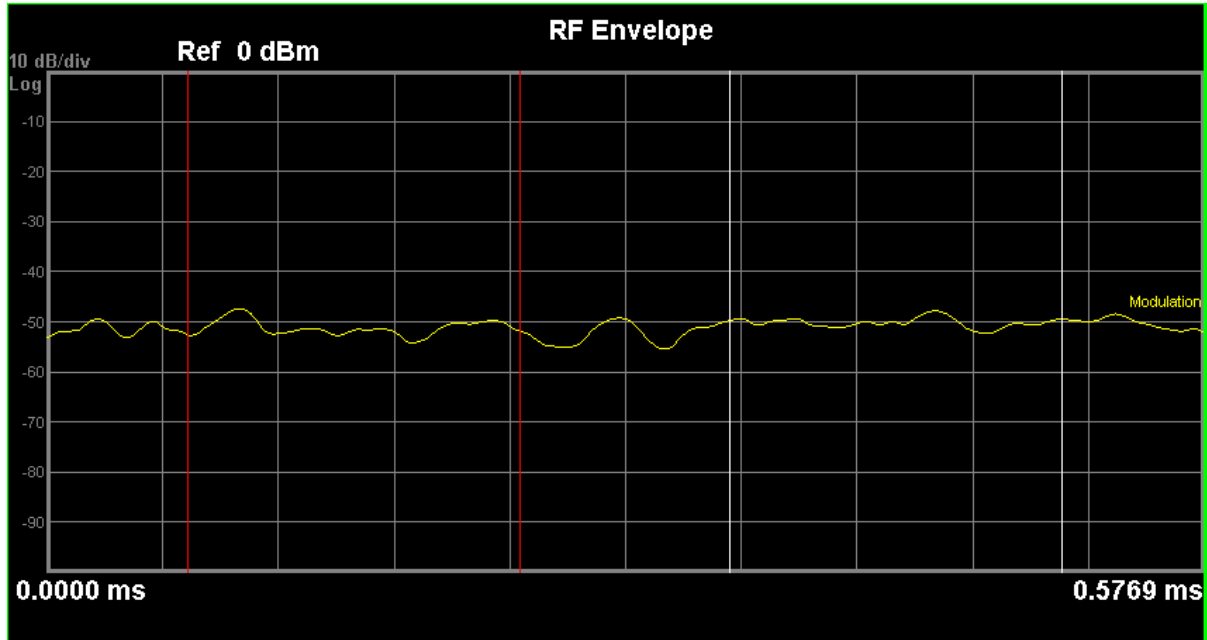

Modulation Carrier Info

Single Offset Examine at 600.000 kHz

	Carr Pwr	Ref Pwr RBW 30kHz	Offset Freq	Freq	Pwr Present	Pwr Ref
1:	17.82 dBm	10.12 dBm	0.0000 Hz	935.20 MHz	Yes	Ref Carr
2:	-10.36 dBm	-47.53 dBm	600.00 kHz	935.80 MHz	No	
3:	-10.23 dBm	-47.73 dBm	1.2000 MHz	936.40 MHz	No	
4:	17.75 dBm	10.00 dBm	1.8000 MHz	937.00 MHz	Yes	

Graph Window

Marker Operation	Yes
Corresponding Trace	Yellow: Series of floating point numbers that represent the “spectrum due to modulation” signal. (n=2)

Metrics Window

Name	Corresponding Results	Display Format
Carrier Index	None Index of Carrier to be measured	1
Carr Pwr	None Carrier Power for Power level (Measured with 400kHz RBW)	-99.99
Ref Pwr	None Carrier Power for Reference Power (Measured with the specified RBW e.g. 30kHz)	-99.99/99
Offset Freq	None Offset Frequency from the Reference Carrier for each Carrier [Hz]	99
Freq	None Center Frequency of each Carrier [Hz]	99
Pwr Present	None Indicates whether the power is present for each carrier	Yes
Pwr Ref	None Indicates the type of the Power Reference if the carrier is the Power Reference Carrier (Ref Carr Max Pwr)	Ref Carr

Switching Power


This view is displayed when:

- Meas Type: Switching
- Meas Method: Single Offset

The view has two windows: the Graph Window and the Metrics Window. Details of each element of these windows can be found in “Graph Window” on page 605 and “Metrics Window” on page 605 respectively.

EDGE Output RF Spectrum Measurement
View/Display

The following graphic shows an example of this view.

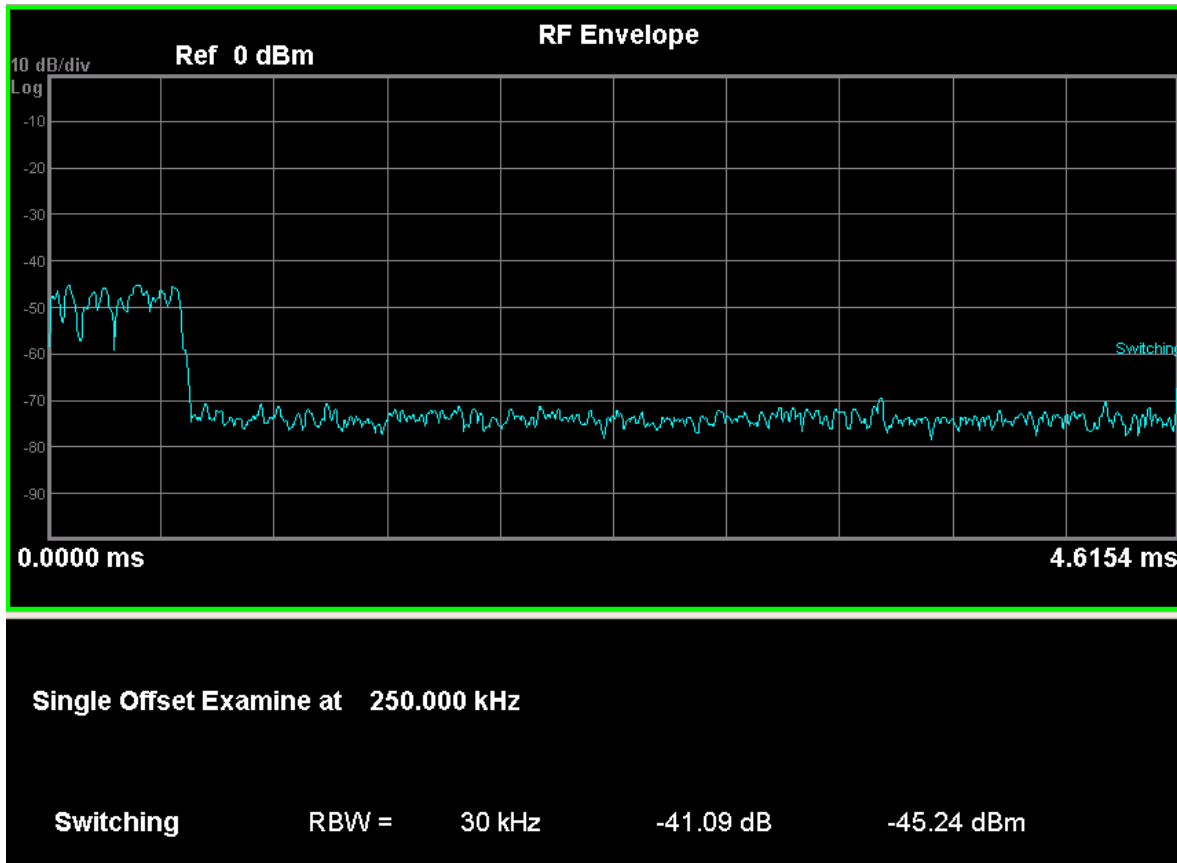

Graph Window

Marker Operation	Yes
Corresponding Trace	<p>Yellow: Series of floating point numbers that represent the “spectrum due to modulation” signal. (n=2)</p> <p>Blue: Series of floating point numbers that represent the “spectrum due to switching transients” signal. (n=3)</p>

Metrics Window

Name	Corresponding Results	Display Format
Modulation [dB]	n=1 1 st Modulation spectrum power	-99.99 dB
Modulation [dBm]	n=1 2 nd Modulation spectrum power	-99.99 dBm
Switching [dB]	n=1 3 rd Switching transient power	-99.99 dB
Switching [dBm]	n=1 4 th Switching transient power	-99.99 dBm
Transmit Power	n=7 Transmit Power	-99.99 dBm
PCL	<p>None.</p> <p>Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality.</p> <p>Auto disappears when [:SENSe]:RADio:PCL:STATe is set to 0 Off. This is shown for MS only.</p>	PCL: ## Auto

Swept Spectrum Views


The views in this group are displayed when Meas Method is set to Swept. For details, see [“Meas Method” on page 529](#).

The group includes:

- [“Modulation Power” on page 606](#)
- [“Modulation Carrier Info” on page 607](#)

Modulation Power

- This view is displayed when:
- Meas Type: Modulation
- Meas Method: Swept
- View/Display: ORFS Result Summary
- The view has two windows: the Graph Window and the Metrics Window. Details of each element of these windows can be found in “Graph Window” on page 607 and “Metrics Window” on page 607 respectively.
- The following graphic shows an example of this view.

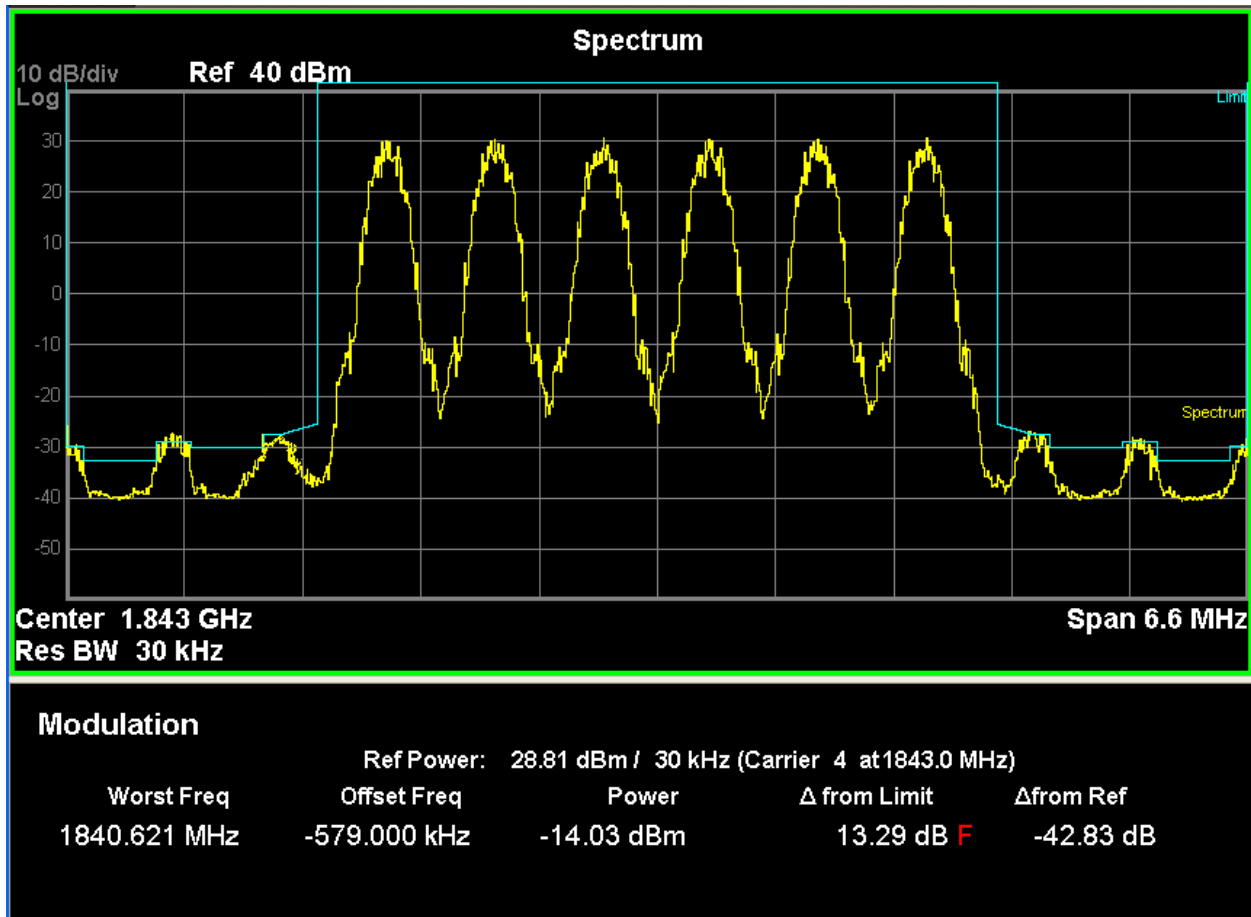

Graph Window

Marker Operation	Yes
Corresponding Trace	Yellow: Series of floating point numbers that represent the “spectrum due to modulation” signal. (n=2)


Metrics Window

Name	Corresponding Results	Display Format
Worst Freq	n=1 1st Frequency	999.999 MHz
Offset Freq	n=1 2nd Offset frequency from carrier frequency	999.999 kHz
Power	n=1 3rd Power in dBm	-99.99 dBm
from Limit	n=1 4th delta from limit	-9.99 dB
from Ref	n=1 5th delta from reference	-99.99 dB
PCL	None. Power Control Level determined by the Transmit Power and used to determine the limits. Since PCL is a Measurement Global parameter, [:SENSe]:RADio:PCL, refer to the section Mode Functionality. Auto disappears when [:SENSe]:RADio:PCL:STAtE is set to 0 Off. This is shown for MS only.	PCL: ## Auto

Modulation Carrier Info

- This view is displayed when:
- Meas Type: Modulation
- Meas Method: Swept
- View/Display: Carrier Info
- The view has two windows: the Graph Window and the Metrics Window. Details of each element of these windows can be found in “[Graph Window](#)” on page 608 and “[Metrics Window](#)” on page 608 respectively.
- The following graphic shows an example of this view.

EDGE Output RF Spectrum Measurement
View/Display

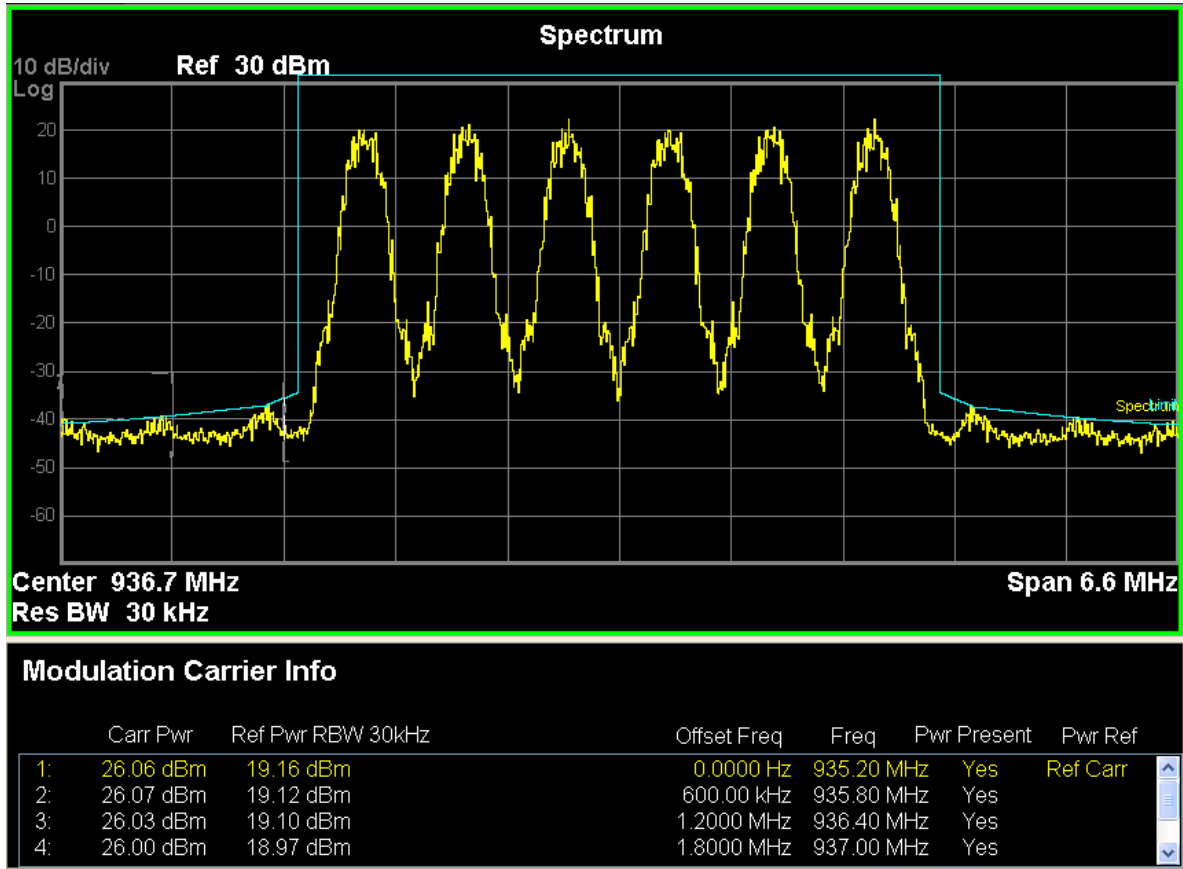

Graph Window

Marker Operation	Yes
Corresponding Trace	Yellow: Series of floating point numbers that represent the “spectrum due to modulation” signal. (n=2)

Metrics Window

Name	Corresponding Results	Display Format
Carrier Index	None Index of Carrier to be measured	1
Carr Pwr	None Carrier Power for Power level (Measured with 400kHz RBW)	-99.99
Ref Pwr	None Carrier Power for Reference Power (Measured with the specified RBW. e.g. 30kHz)	-99.99/99

Name	Corresponding Results	Display Format
Offset Freq	None Offset Frequency from the Reference Carrier for each Carrier [Hz]	99
Freq	None Center Frequency of each Carrier [Hz]	99
Pwr Present	None Indicates whether the power is present for each carrier	Yes
Pwr Ref	None Indicates the type of the Power Reference if the carrier is the Power Reference Carrier (Ref Carr Max Pwr)	Ref Carr

EDGE Output RF Spectrum Measurement
View/Display

GMSK Phase and Frequency Measurement

Phase and frequency error are the measures of modulation quality for GSM systems. Since GSM systems use relative phase to transmit information, the phase and frequency accuracy of the transmitter are critical to the systems' performance and ultimately affect range.

This topic contains the following sections:

[“Measurement Commands for GMSK Phase & Frequency” on page 611](#)

[“Remote Command Results for GMSK Phase & Frequency” on page 611](#)

Measurement Commands for GMSK Phase & Frequency

The following commands are used to retrieve the measurement results:

:CONFigure:PFERror

:CONFigure:PFERror:NDEFault

:INITiate:PFERror

:FETCh:PFERror [n] ?

:READ:PFERror [n] ?

:MEASure:PFERror [n] ?

For more measurement related commands, see [Remote Measurement Functions@29978](#).

Remote Command Results for GMSK Phase & Frequency

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.

n	Results Returned
not specified or n = 1	<p>Returns the following scalar results:</p> <p>The result depends on the Average Type setting (Maximum or Mean) if the average state is ON. The average type is a remote command only parameter.</p> <p>Average type is:</p> <ul style="list-style-type: none"> Maximum (default setting): Detected Maximum value in average cycle Mean: Averaged value in average cycle <ol style="list-style-type: none"> 1. RMS Phase Error is a floating point number (in degrees) of the rms phase error between the measured phase and the ideal phase. The calculation is based on symbol decision points and points halfway between symbol decision points (i.e. 2 points/symbol). 2. Peak Phase Error is a floating point number (in degrees) of the peak phase error of all the individual symbol decision points (prior to the rms averaging process). 3. Peak Phase Error Symbol Position is a floating point number (in symbols) representing the symbol number at which the peak phase error occurred. 4. Frequency Error is a floating point number (in Hz) of the frequency error in the measured signal. This is the difference between the measured phase trajectory and the reference phase trajectory. 5. I/Q Origin Offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin. 6. Trace Phase Sample is a floating point number (in units of bits) representing the time between samples. It is used in querying phase error vector traces. 7. Trace bit 0 Decision Offset is an integer number in units of sample pairs for the sample points in an I/Q vector trace that represents the bit 0 (zero) decision point. The sample pairs in the trace are numbered 0 to N. 8. Trace Sync Start is an integer number in units of bits for the bit number, within the data bits trace, that represents the start of the sync word. 9. Trace Time Sample is a floating point number (in second) of the time between samples. It is used in querying time domain traces. For the n=0 trace, of acquired I/Q pairs, this is the time between pairs. 10. T0 Offset is a floating-point number of the time interval between the trigger point to T0. T0 means the transition time from symbol 13 to symbol 14 of the midamble training sequence for each time slot. Unit is sec.
2	<p>Returns a series of floating point numbers (in degrees) that represent each sample in the phase error trace. The first number is the symbol 0 decision point and there are 10 points per symbol. Therefore, decision points are at 0, 10, 20, et cetera.</p>

n	Results Returned
3	Returns a series of floating point numbers (in degrees) that represent each sample in the phase error with frequency trace. Phase error with frequency is the error vector between the measured phase (that has not had frequency compensation) and the ideal reference phase. The calculation is based on symbol decision points and points halfway between symbol decision points (i.e. 2 points/symbol). The first number is the symbol 0 decision point and there are 10 points per symbol. Therefore, decision points are at 0, 10, 20, et cetera.
4	Returns a series of floating point numbers that represent each sample in the log magnitude trace of the original time record. Each number represents a value (in dBm) of the time record.
5	Returns a series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. The magnitude of each I and Q pair are normalized to 1.0. The first number is the in-phase (I) sample of symbol 0 decision point and the second is the quadrature-phase (Q) sample of symbol 0 decision point. As in the rms phase error, there are ten points per symbol, so that: 1st number = I of the symbol 0 decision point 2nd number = Q of the symbol 0 decision point ... 10th number = Q of the symbol 0 decision point 11th number = I of the symbol 1 decision point 12th number = Q of the symbol 1 decision point ... Nth number = Q of the symbol N decision point
6	Returns a series of logical values (0 or 1) that represent the demodulated bit value of the measured waveform. The first number is the symbol 0 decision point and there are 1 point per symbol. Therefore, decision points are at 0, 1, 2, et cetera.
7	Returns comma-separated scalar values of pass/fail (0.0 = passed, 1.0 = failed) results determined by testing Phase and Frequency Error. The tested results are changed between Maximum and Average. It depends on the Average Type (:PFER:AVER:TYPE) setting. 1. Test results of RMS Phase Error 2. Test results of Peak Phase Error 3. Test results of Frequency Error

n	Results Returned
8	<p>Returns the following scalar results:</p> <ol style="list-style-type: none"> 1. Average RMS Phase Error is a floating point number (in degrees) of the rms phase error between the measured phase and the ideal phase. The calculation is based on symbol decision points and points halfway between symbol decision points (i.e. 2 points/symbol). If averaging is ON, this is the average of the individual rms phase error. 2. Maximum RMS Phase Error is a floating point number (in degrees) of the rms phase error between the measured phase and the ideal phase. The calculation is based on symbol decision points and points halfway between symbol decision points (i.e. 2 points/symbol). If averaging is ON, this is the max hold number of the individual rms phase error. 3. Average Peak Phase Error is a floating point number (in degrees) of the peak phase error of all the individual symbol decision points (prior to the rms averaging process). If averaging is ON, this is the average of the individual peak phase error. 4. Maximum Peak Phase Error is a floating point number (in degrees) of the peak phase error of all the individual symbol decision points (prior to the rms averaging process). If averaging is ON, this is the max hold number of the individual peak phase error. 5. Average Peak Phase Error Symbol Position is a floating point number (in symbols) representing the symbol number at which the peak phase error occurred. If averaging is ON, keeps the position that has the worst phase error. 6. Maximum Peak Phase Error Symbol Position is a floating point number (in symbols) representing the symbol number at which the peak phase error occurred. If averaging is ON, keeps the position that has the worst maximum peak phase error. 7. Average Frequency Error is a floating point number (in Hz) of the frequency error in the measured signal. This is the difference between the measured phase trajectory and the reference phase trajectory. If averaging is ON, this is the average of the individual frequency error. 8. Maximum Frequency Error is a floating point number (in Hz) of the frequency error in the measured signal. This is the difference between the measured phase trajectory and the reference phase trajectory. If averaging is ON, this is the max hold number of the individual frequency error. 9. Average I/Q Origin Offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin. If averaging is ON, this is the average of the individual IQ Offset. 10. Maximum I/Q Origin Offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin. If averaging is ON, this is the max hold number of the individual IQ Offset 11. Average T0 Offset is a floating-point number of the time interval between the trigger point to T0. T0 means the transition time from symbol 13 to symbol 14 of the midamble training sequence for each time slot. Unit is sec. If averaging is ON, this is the average of the T0 offset.

n	Results Returned
n=8 (Cont.)	<p>12. Maximum T0 Offset is a floating-point number of the time interval between the trigger point to T0. T0 means the transition time from symbol 13 to symbol 14 of the midamble training sequence for each time slot. Unit is sec. If averaging is ON, this is the max hold number of the T0 offset.</p> <p>13. Trace Phase Sample is a floating point number (in units of bits) representing the time between samples. It is used in querying phase error vector traces.</p> <p>14. Trace bit 0 Decision Offset is an integer number in units of sample pairs for the sample points in an I/Q vector trace that represents the bit 0 (zero) decision point. The sample pairs in the trace are numbered 0 to N.</p> <p>15. Trace Sync Start is an integer number in units of bits for the bit number, within the data bits trace, that represents the start of the sync word.</p> <p>16. Trace Time Sample is a floating point number (in second) of the time between samples. It is used in querying time domain traces. For the n=0 trace, of acquired I/Q pairs, this is the time between pairs.</p> <p>17. Detected TSC is the most recently detected TSC. The returned value is 0~7 (Burst Type: Normal), 10 (Burst Type: Sync), 20 (Burst Type: Access) if TSC detected. If TSC (Normal), Extended Training Sequence Bits (Sync) or Sync. Sequence Bits (Access) not detected, the returned value is -999.0. If Amptd or NONE (Power vs. Time only) specified in Sync Type, the returned value is -999.0. In multi slot condition, the returned value is the detected TSC of the specified slot (Time Slot ON) or the first evaluated slot (Time Slot OFF).</p> <p>18. Reserved for future use – the value returned is -999.0 (floating point).</p> <p>19. Reserved for future use – the value returned is -999.0 (floating point).</p> <p>20. Reserved for future use – the value returned is -999.0 (floating point).</p> <p>21. Reserved for future use – the value returned is -999.0 (floating point).</p> <p>22. Reserved for future use – the value returned is -999.0 (floating point).</p>

Key Path	Meas
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14501

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14531

Ref Value

Allows you to set the reference value, using absolute degree (Phase Error and Phase Error w/Freq) or absolute power (RF Envelope).

See also:

[“Ref Value \(Phase Error and Phase Error w/Freq window\)” on page 616](#)

[“Ref Value \(RF Envelope window\)” on page 617](#)

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14506

Ref Value (Phase Error and Phase Error w/Freq window)

Allows you to set the absolute degree reference.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:Y[:SCALE]:RLEVel?
Example	DISP:PFER:VIEW:WIND:TRAC:Y:RLEV 5 DISP:PFER:VIEW:WIND:TRAC:Y:RLEV?
Dependencies/Couplings	When “Auto Scaling” on page 621 is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-36000.0
Max	36000.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Value (RF Envelope window)

Allows you to set the absolute power reference.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:RLEVel ?
Example	DISP:PFER:VIEW:WIND3:TRAC:Y:RLEV 4 DISP:PFER:VIEW:WIND3:TRAC:Y:RLEV?
Dependencies/Couplings	When “Auto Scaling” on page 621 is On, this value is automatically determined by the measurement result. When the user sets this value manually, Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement. See [Attenuation@3003@i](#)

GMSK Phase and Frequency Measurement
AMPTD Y Scale

under AMPTD Y Scale for more information.

This key is only available when the selected input is RF.

Key Path	AMPTD/Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. For details, see [Range@29880@i](#).

This key is only available when the selected input is IQ.

Key Path	AMPTD/Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	Use 29880

Scale/Div

Sets the Y scale per division on the display, using absolute degree (Phase Error and Phase Error w/Freq) or absolute power (RF Envelope).

See also:

[“Scale/Div \(Phase Error and Phase Error w/Freq window\)” on page 618](#)

[“Scale/Division \(RF Envelope window\)” on page 619](#)

Key Path	AMPTD Y Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14509

Scale/Div (Phase Error and Phase Error w/Freq window)

Allows you to enter a numeric value to change the vertical display sensitivity.

Remote Command	:DISPlay:PFError:VIEW[1]:WINDow[1] 2:TRACe:Y[:SCALE] :PDIVision <real> :DISPlay:PFError:VIEW[1]:WINDow[1] 2:TRACe:Y[:SCALE] :PDIVision?
Example	DISP:PFER:VIEW:WIND:TRAC:Y:PDIV 10 DISP:PFER:VIEW:WIND:TRAC:Y:PDIV?

Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Y Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	5.00
State Saved	Saved in instrument state.
Min	0.01
Max	360
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Division (RF Envelope window)

Allows you to enter a numeric value to change the vertical display sensitivity.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:PDIVis ion <rel_amp1> :DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:Y[:SCALe]:PDIVis ion?
Example	DISP:PFER:VIEW:WIND3:TRAC:Y:SCAL:PDIV 10 DISP:PFER:VIEW:WIND3:TRAC:Y:SCAL:PDIV?
Dependencies/Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Y Auto Scaling automatically changes to Off.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	10.00
State Saved	Saved in instrument state.
Min	0.1
Max	20.0

Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement. See [Internal Preamp@3036@i](#) under AMPTD Y Scale for more information.

This is only available when the selected input is RF.

Key Path	AMPTD/Y Scale
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position

Allows you to set the reference position.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow[1] 2 3:TRACe:Y[:SCALE]:RPOsition TOP CENTer BOTTom :DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:Y[:SCALE]:RPOsition?
Example	DISP:PFER:VIEW:WIND:TRAC:Y:RPOS TOP DISP:PFER:VIEW:WIND:TRAC:Y:RPOS?
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	CENT CENT TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14511

Auto Scaling

Allows you to toggle the auto scaling function between On and Off.

Remote Command	:DISPlay:PFERror:VIEW [1] :WINDow [1] 2 3 :TRACe:Y[:SCALe] :COUPle ON OFF 1 0 :DISPlay:PFERror:VIEW [1] :WINDow [1] 2 3 :TRACe:Y[:SCALe] :COUPle?
Example	DISP:PFER:VIEW:WIND:TRAC:Y:COUP ON DISP:PFER:VIEW:WIND:TRAC:Y:COUP?
Dependencies/Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When you set either “ Ref Value ” on page 616 manually, this parameter is set to ‘Off’ automatically.
Key Path	AMPTD Y Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14513

Auto Couple

Operation of this key is identical across several measurements. For details about this key, see [AUTO COUPLE@3041@i](#).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

BW

There is no functionality for this front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	14508

Cont (Continuous Measurement/Sweep)

Operation of this key is identical across all measurements. For details about this key, see Input/Output@3065@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

FREQ Channel

Operation of this key is identical across all measurements. For details about this key, see [Front Panel Key@5524@i](#).

Key Path	Front-panel key
Help Map ID	0

Input/Output

Operation of this key is identical across several measurements. For details about this key, see Input/Out@3065@i.

Key Path	Front-panel key
Help Map ID	0

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14533

Select Marker

Displays 12 markers available for selection.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14517

Marker Type

Sets the marker control mode **Normal**, **Delta** and **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

See also:

- [“Marker X-axis Value \(Remote Command Only\)”](#) on page 628
- [“Marker X-axis Position \(Remote Command Only\)”](#) on page 629
- [“Marker Y-axis Value \(Remote Command Only\)”](#) on page 629)

Remote Command	:CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF :CALCulate:PFERror:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE?
Example	CALC:PFER:MARK:MODE OFF CALC:PFER:MARK:MODE?
Key Path	Marker
Mode	GSM

Notes	<p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X-axis Value appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X-axis value entered in the active function area displays the marker value to its full entered precision.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14538

Marker X-axis Value (Remote Command Only)

Sets the marker X-axis value in the current marker X-axis scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X-value if the control mode is **Normal** or **Delta**.

Remote Command	<pre>:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real></pre> <pre>:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ?</pre>
Example	<pre>CALC:PFER:MARK3:X 0</pre> <pre>CALC:PFER:MARK3:X?</pre>
Dependencies/Couplings	Max value would be changed.
Mode	GSM
Notes	<p>If no suffix is sent, uses the fundamental units for the current marker X-axis scale. If a suffix is sent that does not match the current marker X-axis scale unit, an error "Invalid suffix" is generated.</p> <p>The query returns the marker's absolute X-axis value if the control mode is Normal, or the offset from the marker's reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X-axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off, the response is not a number.</p> <p>You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.</p>

Preset	After a preset, all markers are turned OFF, so the Marker X-axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker X-axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** or **Fixed** - except in trace points rather than X-axis scale units. The entered value is immediately translated into the current X-axis scale units for setting the value of the marker.

Remote Command	:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <integer> :CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition?
Example	CALC:PFER:MARK10:X:POS 0 CALC:PFER:MARK10:X:POS?
Mode	GSM
Notes	The query returns the marker's absolute X-axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	After a preset, all markers are turned OFF, so the Marker X-axis Value query returns a not a number (NAN).
State Saved	No
Min	-9.9E37
Max	9.9E37
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Marker Y-axis Value (Remote Command Only)

Returns the marker Y-axis value in the current marker Y-axis unit.

GMSK Phase and Frequency Measurement Marker

The “result” of a marker is the value which is displayed on the second line of the Marker Result block. To properly interpret the returned value, the remote programmer must also know what the test set’s Y-axis unit is set to as described below.

A marker can have up to two results, only one of which is displayed or returned on a query, as follows:

Absolute result: every marker has an absolute result:

For Normal and Delta markers, the Y-axis value of the trace point the marker is currently on.

The absolute result is displayed in the result block or returned on a query unless the marker control mode is **Delta**.

Relative result: if a marker’s control mode is **Delta**, the relative result is displayed in the result block or returned on a query. This is the ratio of the Absolute Result of a delta marker to the Absolute Result of its reference marker.

Remote Command	:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : Y?
Example	CALC:PFERror:MARK11:Y?
Mode	GSM
Notes	The query returns the marker Y-axis result. If the marker is Off the response is not a number. If ‘Polar’ is selected for the Marker Trace, it returns the values of ‘I’ and ‘Q’ at the same time. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Properties

Accesses a menu that allows you to set marker properties and to access the marker trace menu.

Key Path	Marker
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14542

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

Remote Command	:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence <integer> :CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence?
Example	CALC:PFER:MARK:REF 10 CALC:PFER:MARK:REF?
Key Path	Marker, Properties
Mode	GSM
Notes	A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. When queried, a single value is returned (the specified marker number’s relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14543

Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe PERRor PFERror RFENvelope POLar :CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe?
Example	CALC:PFER:MARK:TRAC POL CALC:PFER:MARK:TRAC?
Dependencies/Couplings	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Key Path	Marker, Properties
Mode	GSM

GMSK Phase and Frequency Measurement
Marker

Preset	PERRor
State Saved	Saved in instrument state.
Range	IQ Polar Phase Error Phase Error w/Freq RF Envelope
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14544

Couple Markers

When this function is true, moving any marker causes an equal X-axis movement of every other marker which is not **Off**. By “equal X-axis movement” we mean that we preserve the difference between each marker’s X-axis value (in the fundamental x-axis units of the trace that marker is on) and the X-axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:PFERror:MARKer:COUPle[:STATE] ON OFF 1 0 :CALCulate:PFERror:MARKer:COUPle[:STATE]?
Example	CALC:PFER:MARK:COUP ON CALC:PFER:MARK:COUP?
Key Path	Marker
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14545

All Markers Off

Turns off all markers.

Remote Command	:CALCulate:PFERror:MARKer:AOff
Example	CALC:PFER:MARK:AOff
Key Path	Marker
Mode	GSM

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14546

Marker Function

There is no functionality for this front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	14529

Marker To

There is no functionality for this front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	14522

Meas

Operation of this key is identical across several measurements. For details about this key, see Meas@4008@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14510

Avg/Hold Num

Specifies the number of data acquisitions that are averaged. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

- On – Sets measurement averaging on.
- Off – Sets measurement averaging off.

Remote Command	[:SENSe] :PFERror:AVERage:COUNT <integer> [:SENSe] :PFERror:AVERage:COUNT? [:SENSe] :PFERror:AVERage [:STATe] OFF ON 0 1 [:SENSe] :PFERror:AVERage [:STATe] ?
Example	PFER:AVER:COUN 4 PFER:AVER:COUN? PFER:AVER OFF PFER:AVER?
Dependencies/Couplings	When this value is changed, Avg State is set to On.
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	10 OFF
State Saved	Saved in instrument state.
Min	1
Max	10000
Instrument S/W Revision	Prior to A.02.00

Help Map ID	14520
-------------	-------

Avg Mode

Allows you to choose either exponential or repeat averaging. This selection only effects the averaging after the number of N averages is reached (set using the Averages, Avg Bursts, or Avg Number key).

- Exponential averaging – When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals. The weighting factor N is set using the Averages, Avg Bursts key.
- Repeat averaging – When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart key when the Single measurement finishes.

Remote Command	[:SENSe] :PFERror:AVERage:TCONtrol EXPonential REPeat [:SENSe] :PFERror:AVERage:TCONtrol?
Example	PFER:AVER:TCON REP PFER:AVER:TCON?
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	REPeat
State Saved	Saved in instrument state.
Range	Exp Repeat
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14521

Burst Sync

Allows you to select the method of synchronizing the measurement to the bursts.

RFBurst – The burst synchronization approximates the start and stop of the useful part of the burst without demodulation of the burst.

Training Sequence (TSEQUence) – The burst synchronization performs a demodulation of the burst and determines the start and stop of the useful part of the burst based on the midamble training sync

sequence.

Remote Command	[:SENSE] :PFERror:BSYNc:SOURce RFBurst TSEquence [:SENSE] :PFERror:BSYNc:SOURce?
Example	PFER:BSYN:SOUR RFB PFER:BSYN:SOUR?
Dependencies/Couplings	See Notes
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	TSEquence
State Saved	Saved in instrument state.
Range	Training Seq RF Amptd
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14523

IF Gain

Accesses a menu that controls the setting of the IF Gain function.

This function is an IF amplifier with approximately 10 dB of gain and enables you to take full advantage of the RF dynamic range of the test set. When it is turned on without an overload, the dynamic range is always better than when this function is off. The **IF Gain** key can be used to set the IF Gain function to Auto, On (the extra 10 dB), or Off. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

Key Path	Meas Setup, Advanced,
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14524

IF Gain Auto

Activates the auto rules for IF Gain

Remote Command	[:SENSE] :PFERror:IF:GAIN:AUTO [:STATe] ON OFF 1 0 [:SENSE] :PFERror:IF:GAIN:AUTO [:STATe] ?
Example	PFERror:IF:GAIN:AUTO ON PFERror:IF:GAIN:AUTO?

GMSK Phase and Frequency Measurement
Meas Setup

Dependencies/Couplings	When either the auto attenuation works (for example, with electrical attenuator), or the Optimize Mechanical Attenuator range is requested, the IF Gain setting is changed. 'auto' sets IF Gain High under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to Low.
Key Path	Meas Setup
Mode	GSM
Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	Auto Man
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14525

IF Gain State

Selects the range of IF gain.

Remote Command	[:SENSe] :PFERror:IF:GAIN [:STATe] ON OFF 1 0 [:SENSe] :PFERror:IF:GAIN [:STATe] ?
Example	PFER:IF:GAIN ON PFER:IF:GAIN?
Dependencies/Couplings	Coupled to "IF Gain Auto" on page 639 . Setting IF Gain Auto forces IF Gain State to Man.
Key Path	Meas Setup, IF Gain
Mode	GSM
Notes	IF Gain only applies to the RF input. It does not apply to baseband I/Q input. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. where ON = high gain OFF = low gain
Preset	OFF
State Saved	Saved in instrument state.
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)

Instrument S/W Revision	Prior to A.02.00
Help Map ID	14526

Limits

Accesses a menu that enables you to set the Limit Test.

Key Path	Meas Setup, Mode, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14512

Limit Test

Turns on or off limit pass/fail testing.

Remote Command	:CALCulate:PFERror:LIMit:TEST[:STATe] OFF ON 0 1 :CALCulate:PFERror:LIMit:TEST[:STATe]?
Example	CALC:PFER:LIM:TEST ON CALC:PFER:LIM:TEST?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	If set to Off, PASS/FAIL indicator on the Meas Bar goes blank. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14527

RMS Phase Error

Set the limit value for RMS Phase limit in degree by MS and BTS.

See also:

[“RMS Phase Error Limit for BTS.” on page 642.](#)

GMSK Phase and Frequency Measurement
Meas Setup

“RMS Phase Error Limit for MS.” on page 642.

Key Path	Meas Setup, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14528

RMS Phase Error Limit for BTS.

Remote Command	:CALCulate:PFERror:LIMit:BTS:RPHase <real> :CALCulate:PFERror:LIMit:BTS:RPHase?
Example	CALC:PFER:LIM:BTS:RPH 10 CALC:PFER:LIM:BTS:RPH?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	5
State Saved	Saved in instrument state.
Min	0.0
Max	180.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

RMS Phase Error Limit for MS.

Remote Command	:CALCulate:PFERror:LIMit:MS:RPHase <real> :CALCulate:PFERror:LIMit:MS:RPHase?
Example	CALC:PFER:LIM:MS:RPH 10 CALC:PFER:LIM:MS:RPH?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Preset	5
State Saved	Saved in instrument state.
Min	0.0
Max	180.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Peak Phase Error

Set the limit value for Peak Phase limit in degree by MS and BTS.

See also:

[“Peak Phase Error Limit for BTS” on page 643](#)

[“Peak Phase Error Limit for MS” on page 644](#)

Key Path	Meas Setup, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14530

Peak Phase Error Limit for BTS

Remote Command	:CALCulate:PFERror:LIMit:BTS:PPHase <real> :CALCulate:PFERror:LIMit:BTS:PPHase?
Example	CALC:PFER:LIM:BTS:PPH 10 CALC:PFER:LIM:BTS:PPH?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Unit is Degree(s).
Preset	20
State Saved	Saved in instrument state.
Min	0.0
Max	180.0
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

Peak Phase Error Limit for MS

Remote Command	:CALCulate:PFERror:LIMit:MS:PPHase <real> :CALCulate:PFERror:LIMit:MS:PPHase?
Example	CALC:PFER:LIM:MS:PPH 10 CALC:PFER:LIM:MS:PPH?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	20
State Saved	Saved in instrument state.
Min	0.0
Max	180.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Frequency Error

Sets the limit value for frequency limit in ppm by MS and BTS.

See also:

- [“Freq Error Limit for BTS” on page 645](#)
- [“Freq Error Limit for mBTS” on page 645](#)
- [“Freq Error Limit for pBTS” on page 646](#)
- [“Freq Error Limit for MS” on page 646](#)

Key Path	Meas Setup, Limits
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14532

Freq Error Limit for BTS

Remote Command	:CALCulate:PFERror:LIMit:BTS:FERRor <real> :CALCulate:PFERror:LIMit:BTS:FERRor?
Example	CALC:PFER:LIM:BTS:FERR 10 CALC:PFER:LIM:BTS:FERR?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0
Max	100
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error Limit for mBTS

Remote Command	:CALCulate:PFERror:LIMit:MBTS:FERRor <real> :CALCulate:PFERror:LIMit:MBTS:FERRor?
Example	CALC:PFER:LIM:MBTS:FERR 10 CALC:PFER:LIM:MBTS:FERR?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.05
State Saved	Saved in instrument state.
Min	0
Max	100
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error Limit for pBTS

Remote Command	:CALCulate:PFError:LIMit:PBTS:FERRor <real> :CALCulate:PFError:LIMit:PBTS:FERRor?
Example	CALC:PFER:LIM:PBTS:FERR 10 CALC:PFER:LIM:PBTS:FERR?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. Unit is ppm.
Preset	0.1
State Saved	Saved in instrument state.
Min	0
Max	100
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Freq Error Limit for MS

Remote Command	:CALCulate:PFError:LIMit:MS:FERRor <real> :CALCulate:PFError:LIMit:MS:FERRor?
Example	CALC:PFER:LIM:MS:FERR 10 CALC:PFER:LIM:MS:FERR?
Key Path	Meas Setup, Limits
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0.1
State Saved	Saved in instrument state.
Min	0
Max	100
Instrument S/W Revision	Prior to A.02.00

Help Map ID	0
-------------	---

Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	:CONFigure:PFERror
Example	CONF:PFER
Key Path	Meas Setup
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14536

Mode

Operation of this key is identical across all measurements. For details about this key, see [Mode@2670@i](#).

Key Path	Front-panel key
Help Map ID	0

Mode Setup

Operation of this key is identical across all measurements in this application. For details, see [Mode Setup@5520@i](mailto:ModeSetup@5520@i).

Key Path	Front-panel key
Help Map ID	0

Peak Search

There is no functionality for this front-panel key in this measurement. When pressed, this key displays a blank menu.

Remote Command	:CALCulate:PFERror:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum
Example	CALC:PFER:MARK2:MAX
Key Path	Peak Search
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14547

Recall

Operation of this key is identical across several measurements. For details of this key, see Recall@2637@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Restart

Operation of this key is identical across all measurements. For details about this key, see Restart@3307@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Save

Operation of this key is identical across several measurements. For details about this key, see Save@2600@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Single (Single Measurement/Sweep)

Operation of this key is identical across several measurements. For details about this key, see [Single \(Single Measurement/Sweep\)@3515@i](mailto:Single(Single Measurement/Sweep)@3515@i).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Source (Internal)

Operation of this key is identical across all measurements. For details about this key, see [Source \(Internal\)@35360@i](#).

Key Path	Front-panel key
Help Map ID	0

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14503

Ref Value

Allows you to set reference value by Phase Error and Phase Error w/Freq, and RF Envelope.

See also:

- “[Ref Value \(Phase Error and Phase Error w/Freq window\)](#)” on page 656
- “[Ref Value \(RF Envelope window\)](#)” on page 657

Key Path	SPAN X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14500

Ref Value (Phase Error and Phase Error w/Freq window)

Allows you to set the display X reference value for time axis ‘bit’.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:X[:SCALE]:RLEVel <real> :DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:X[:SCALE]:RLEVel?
Example	DISP:PFER:VIEW:WIND:TRAC:X:RLEV 1.5 DISP:PFER:VIEW:WIND:TRAC:X:RLEV?
Dependencies/Couplings	If the “ Auto Scaling ” on page 660 is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Preset	0.5
State Saved	Saved in instrument state.
Min	0.000
Max	5000000.000
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Value (RF Envelope window)

Allow you to set the display X reference value for time axis 'sec'.

Remote Command	:DISPlay:PFERror:VIEW [1] :WINDow3:TRACe:X[:SCALe] :RLEVel <time> :DISPlay:PFERror:VIEW [1] :WINDow3:TRACe:X[:SCALe] :RLEVel ?
Example	DISP:PFER:VIEW:WIND3:TRAC:X:RLEV 1.5 DISP:PFER:VIEW:WIND3:TRAC:X:RLEV?
Dependencies/Couplings	If the “Auto Scaling” on page 621 is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	-64.4 us
State Saved	Saved in instrument state.
Min	-1.0 s
Max	10.0 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div

Allows you to set the display X scale/division value using bits (Phase Error and Phase Error w/Freq) or time (RF Envelope)

See also:

- “Scale/Div (Phase Error and Phase Error w/Freq window)” on page 658

GMSK Phase and Frequency Measurement
SPAN X Scale

- “Scale/Div (RF Envelope window)” on page 658

Key Path	SPAN X Scale
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14502

Scale/Div (Phase Error and Phase Error w/Freq window)

Allows you to set the display X scale/division value.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:X[:SCALE]:PDIVision <real> :DISPlay:PFERror:VIEW[1]:WINDow[1] 2:TRACe:X[:SCALE]:PDIVision?
Example	DISP:PFER:VIEW:WINDOW:TRAC:X:PDIV 15 DISP:PFER:VIEW:WINDOW:TRAC:X:PDIV?
Dependencies/Couplings	If the “Auto Scaling” on page 621 is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	14.7
State Saved	Saved in instrument state.
Min	1.000
Max	500000.0
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Scale/Div (RF Envelope window)

Allows you to set the display X scale/division value.

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALE]:PDIVision <time> :DISPlay:PFERror:VIEW[1]:WINDow3:TRACe:X[:SCALE]:PDIVision?
----------------	--

Example	DISP:PFEr:VIEW:WINDOW3:TRAC:X:PDIV 1 DISP:PFEr:VIEW:WINDOW3:TRAC:X:PDIV?
Dependencies/Couplings	If the “Auto Scaling” on page 621 is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	532.0 us
State Saved	Saved in instrument state.
Min	1.00 ns
Max	1.00 s
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Ref Position

Allows you to set the display reference position to Left, Center or Right.

Remote Command	:DISPlay:PFEr:VIEW [1] :WINDow [1] 2 3 :TRACe:X [:SCALE] : RPOsition LEFT CENTer RIGHT :DISPlay:PFEr:VIEW [1] :WINDow [1] 2 3 :TRACe:X [:SCALE] : RPOsition?
Example	DISP:PFEr:VIEW:WIND2:TRAC:X:RPOS LEFT DISP:PFEr:VIEW:WIND2:TRAC:X:RPOS?
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14504

Auto Scaling

Allows you to toggle the scale coupling function between On and Off.

Remote Command	:DISPlay:PFError:VIEW[1]:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle ON OFF 1 0 :DISPlay:PFError:VIEW[1]:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle?
Example	DISP:PFER:VIEW:WIND:TRAC:X:COUP ON DISP:PFER:VIEW:WIND:TRAC:X:COUP?
Dependencies/Couplings	Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either “Ref Value” on page 656 or “Scale/Div” on page 657 manually, Auto Scaling automatically changes to Off.
Key Path	SPAN / X Scale
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14505

Sweep/Control

Operation of this key is identical across several measurements. For details about this key, see Sweep/Control@3273@i.

Key Path	Front-panel key
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

Trace/Detector

There is no functionality for this Front-panel key in this measurement. When pressed, this key displays a blank menu.

Key Path	Front-panel key
Mode	GSM
Help Map ID	14507

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement.

See [Trigger@3371@i](#) for more information.

Key Path	Front-panel key
Help Map ID	0

View/Display

Accesses a menu of functions that enable you to set the display parameters for the current measurement and select the View.

Key Path	Front-panel key
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14514

Display

Accesses a menu of functions that enable you to set the display parameters for the current measurement.

See the [Display@3440](#) section for more information.

Key Path	Front-panel key
Instrument S/W Revision	Prior to A.02.00
Help Map ID	15012

View

Accesses a menu that allows you to select the desired view of the measurement.

For remote commands associated with view selection, see “[View Selection by name \(SCPI only\)](#)” on page 666 and “[View Selection by number \(SCPI only\)](#)” on page 666.

The 3 following view selections are available:

1) I/Q Measured Polar Graph (SCPI: POLar) or (SCPI: 1)

Provides a view of numeric results and a polar vector graph. This view has 2 windows:

- Window 1: Numeric Results
- Window 2: I/Q Polar Graph

For full details, see “[I/Q Measured Polar Graph View](#)” on page 667.

2) I/Q Error (SCPI: ERRor|QUAD) or (SCPI: 2)

Provides a combination view, with 4 windows:

- Window 1: Phase Error
- Window 2: Phase Error with Freq
- Window 3: RF Envelope
- Window 4: Numeric Results

You can select each window using the **Next Window** key, and make the selected window full size using

the **Zoom** key.

For full details, see [“I/Q Error” on page 668](#)

3) Data Bits (SCPI: DBITs) or (SCPI: 3)

Provides a view of the numeric results and data bits with the sync word (TSC) highlighted.

[“Burst Sync” on page 638](#)

If a result fails, ‘F’ is displayed beside the result.

For full details of this view, see [“Data Bits” on page 671](#)

View Selection by name (SCPI only)

Remote Command	:DISPlay:PFERror:VIEW[:SElect] POLar ERRor DBITs :DISPlay:PFERror:VIEW[:SElect]?
Example	DISP:PFER:VIEW ERR DISP:PFER:VIEW?
Dependencies/Couplings	View Selection by number must be coupled with this parameter value.
Key Path	View/Display
Mode	GSM
Notes	- POLar: I/Q Measured Polar Graph - ERRor: I/Q Error - DBITs: Data Bits You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	ERRor
State Saved	Saved in instrument state.
Range	I/Q Error I/Q Measured Polar Graph Data Bits
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14516

View Selection by number (SCPI only)

Remote Command	:DISPlay:PFERror:VIEW:NSElect <integer> :DISPlay:PFERror:VIEW:NSElect?
Example	DISP:PFER:VIEW:NSEL 3
Dependencies/Couplings	View Selection must be coupled with this parameter value.
Mode	GSM
Notes	1: I/Q Measured Polar Graph 2: IQ Error 3: Data Bits You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	2
State Saved	Saved in instrument state.
Min	1

Max	3
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0


I/Q Measured Polar Graph View

This view has 2 windows, as detailed in the sections below:

“Graph Window” on page 667

“Metrics Window” on page 667

The figure below shows an example of this view.

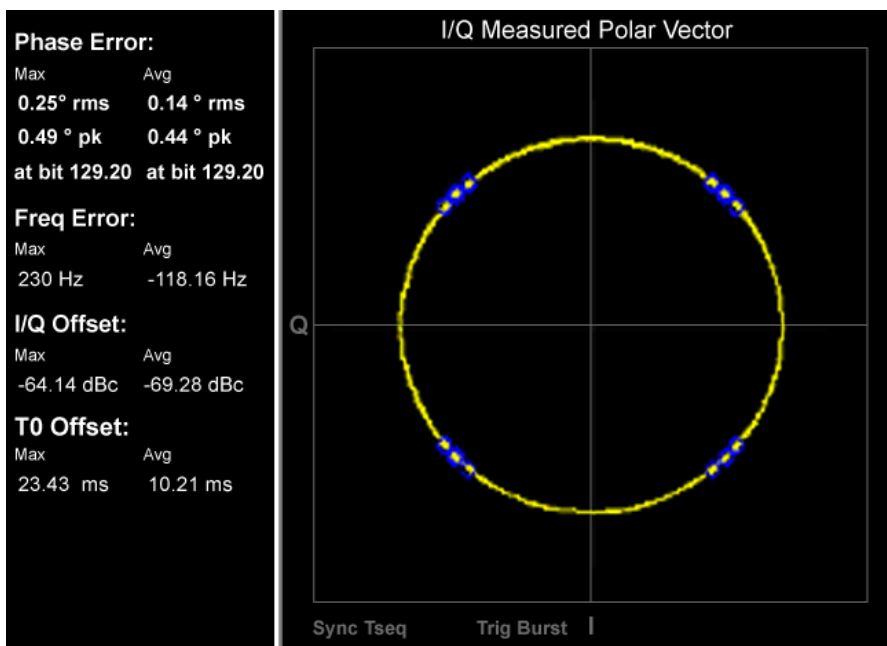

Graph Window

Marker Operation	No
Corresponding Trace	Series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. (n=5)

Metrics Window

The Metrics Window is identical to that of the I/Q Error view. Refer to the section “I/Q Error” on page 668.

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00

Help Map ID	14535
-------------	-------

I/Q Polar Vect/Constln

I/Q Polar Vector/Constellation allows you to change the format of the polar vector graph. The following display options are available:

- Vector and Constellation (SCPI: VC)
- Vector Only (SCPI: VECTor)
- Constellation Only (SCPI: CONSTln)

Remote Command	:DISPlay:PFERror:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONSTln :DISPlay:PFERror:VIEW[1]:WINDow2:TRACe:POLar?
Example	DISP:PFER:VIEW:WIND2:TRAC:POL VC DISP:PFER:VIEW:WIND2:TRAC:POL?
Key Path	View/Display
Mode	GSM
Notes	VC: Vect & Constln VECTor: Vector CONSTln: Constellation You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	VC
State Saved	Saved in instrument state.
Range	Vect & Constln Vector Constellation
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14518

I/Q Error

This view has 4 windows, as detailed in the sections below:


[“Phase Err Window” on page 669](#)

[“Phase Err w/Freq Window” on page 669](#)

[“RF Envelope Window” on page 669](#)

[“Metrics Window” on page 669](#)

The figure below shows an example of this view.

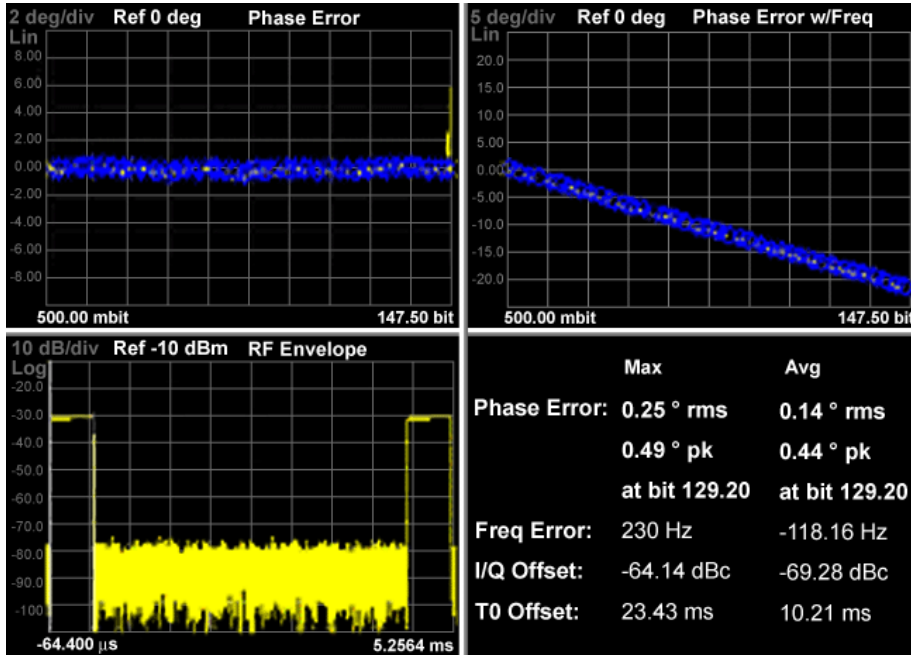

Phase Err Window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers (in degrees) that represent each sample in the phase error trace. (n=2)

Phase Err w/Freq Window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers (in degrees) that represent each sample in the phase error with frequency trace. (n=3)

RF Envelope Window

Marker Operation	Yes
Corresponding Trace	Series of floating point numbers that represent each sample in the log magnitude trace of the original time record. (n=4)

Metrics Window

Name	Corresponding Results	Display Format
Phase Error [rms] (Avg)	n=8 1st Average RMS Phase Error	9.99° rms

GMSK Phase and Frequency Measurement
View/Display

Phase Error [rms] (Max Hold)	n=8 2nd Maximum RMS Phase Error	9.99° rms
Phase Error [pk] (Avg)	n=8 3rd Average Peak Phase Error	9.99° pk
Phase Error [pk] (Max Hold)	n=8 4th Maximum Peak Phase Error	9.99° pk
Phase Error at bit (Avg)	n=8 5th Average Peak Phase Error Symbol Position	at bit 99.99
Phase Error at bit (Max Hold)	n=8 6th Maximum Peak Phase Error Symbol Position	at bit 99.99
Freq Error (Avg)	n=8 7th Average Frequency Error	-999.99 Hz
Freq Error (Max Hold)	n=8 8th Maximum Frequency Error	-999.99 Hz
I/Q Offset (Avg)	n=8 9th Average I/Q Origin Offset	-99.99 dBc
I/Q Offset (Max Hold)	n=8 10th Maximum I/Q Origin Offset	-99.99 dBc
T0 Offset (Avg)	n=8 11th Average T0 Offset	999.999 µs
T0 Offset (Max Hold)	n=8 12th Maximum T0 Offset	999.999 µs

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14537

Bit Dots

Allows you to toggle the bit dots between On and Off.

- On: turns on blue bit dots on the trace in 'Phase Error' & 'Phase Error with Freq' window.


- Off: turns off blue bit dots on the trace in 'Phase Error' & 'Phase Error with Freq' window.

Remote Command	:DISPlay:PFERror:BDOTs[:STATE] ON OFF 1 0 :DISPlay:PFERror:BDOTs[:STATE]?
Example	DISP:PFER:BDOT ON DISP:PFER:BDOT?
Key Path	View/Display
Mode	GSM
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. This SCPI command is included for completeness. But only affects the traces displayed on the screen.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14519

Data Bits

This view has only one window, as detailed in the section [“Metrics Window” on page 672](#).

The figure below shows an example of this view.

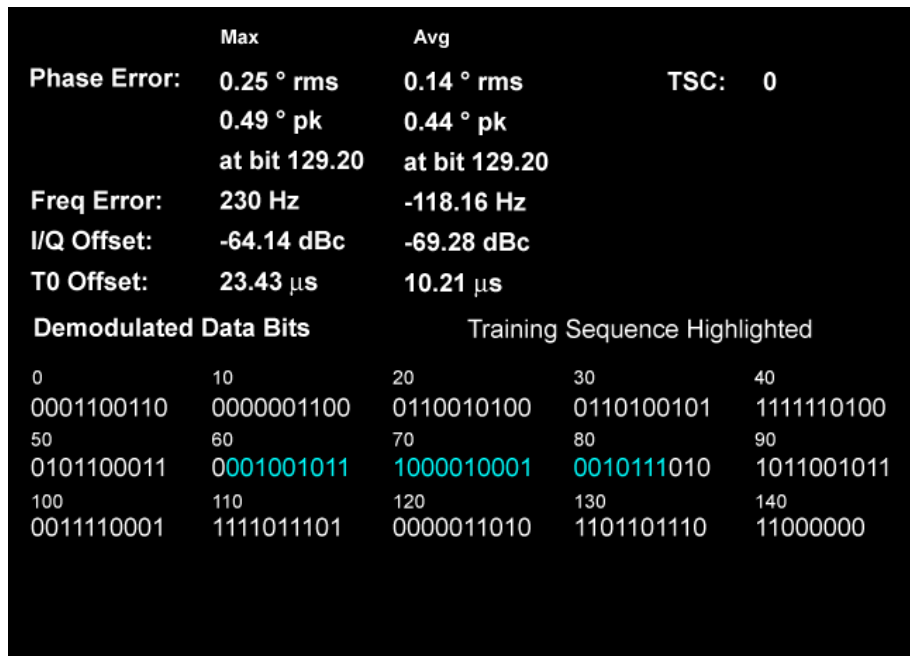

GMSK Phase and Frequency Measurement
View/Display

Metrics Window

Name	Corresponding Results	Display Format
Phase Error [rms] (Avg)	n=8 1st Average RMS Phase Error	9.99° rms
Phase Error [rms] (Max Hold)	n=8 2nd Maximum RMS Phase Error	9.99° rms
Phase Error [pk] (Avg)	n=8 3rd Average Peak Phase Error	9.99° pk
Phase Error [pk] (Max Hold)	n=8 4th Maximum Peak Phase Error	9.99° pk
Phase Error at bit (Avg)	n=8 5th Average Peak Phase Error Symbol Position	at bit 99.99
Phase Error at bit (Max Hold)	n=8 6th Maximum Peak Phase Error Symbol Position	at bit 99.99
Freq Error (Avg)	n=8 7th Average Frequency Error	-999.99 Hz
Freq Error (Max Hold)	n=8 8th Maximum Frequency Error	-999.99 Hz
I/Q Offset (Avg)	n=8 9th Average I/Q Origin Offset	-99.99 dBc
I/Q Offset (Max Hold)	n=8 10th Maximum I/Q Origin Offset	-99.99 dBc
T0 Offset (Avg)	n=8 11th Average T0 Offset	999.999 µs
T0 Offset (Max Hold)	n=8 12th Maximum T0 Offset	999.999 µs
Demodulated Data Bits	n=6	

Key Path	View/Display
Mode	GSM
Instrument S/W Revision	Prior to A.02.00
Help Map ID	14539

The Transmit Power (Burst Power) measurement (at the base transceiver station) is used to determine the power delivered to the antenna system on the radio-frequency channel under test. The Burst Power measurement verifies the accuracy of the mean transmitted RF carrier power. This can be done across the frequency range and at each power step. For more information, see [“Transmit Power \(Burst Power\) Measurement Description” on page 675](#). For measurement results and views, see [“View/Display” on page 722](#).

This topic contains the following sections.

[“Measurement Commands for Transmit Power \(Burst Power\)” on page 673](#)

[“Remote Command Results for Transmit Power \(Burst Power\)” on page 673](#)

Measurement Commands for Transmit Power (Burst Power)

NOTE The BPOWer form of the commands is included for backward compatibility only. They are not recommended for use in new designs. Use the TXPower keyword.

The following commands and queries are used to retrieve the measurement results:

```
:CONFigure:TXPower|BPOWer
:CONFigure:TXPower|BPOWer:NDEFault
:INITiate:TXPower|BPOWer
:FETCh:TXPower|BPOWer [n] ?
:READ:TXPower|BPOWer [n] ?
:MEASure:TXPower|BPOWer [n] ?
```

For more remote command information, see the SENSE:TXPower|BPOWer commands and the section [Remote Measurement Functions@29978](#).

Remote Command Results for Transmit Power (Burst Power)

For the queries listed above, the results returned depend on the value of **n**, as follows.

n	Results Returned
0	Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values.

Transmit Power (Burst Power)

n	Results Returned
not specified or n = 1	<p>Returns the following comma-separated scalar results:</p> <ol style="list-style-type: none"> 1. Sample time is a floating point number representing the time between samples when using the trace queries (n=0, 2, et cetera). 2. Power is the mean power (in dBm) of the power value that calculated by specified method: above the threshold or measured burst width. If averaging is on, the power is for the latest acquisition. 3. Power averaged is the power (in dBm) for N averages, if averaging is on. An average consists of N acquisitions of data which represents the current trace. If averaging is off, the value of Power averaged is the same as the Power value. 4. Number of samples is the number of data points in the captured signal. This number is useful when performing a query on the signal (i.e. when n=0, 2, et cetera). 5. Threshold value is the absolute threshold level (in dBm) above which the power is calculated when Meas Method is set to Above Threshold. 6. Threshold points is the number of points that were above the threshold and were used to calculate Mean Transmit Power when “Meas Method” on page 700 is set to Above Threshold. If Meas Method is set to Measured Burst Width, Measured Pts is returned. 7. Maximum value is the maximum peak level of the most recently acquired trace data (in dBm). 8. Minimum value is the minimum peak level of the most recently acquired trace data (in dBm). 9. Full Burst width is the burst width of this signal regardless of the parameter value set for the current Measured width. The Burst width is determined by the Threshold Lvl when Meas Method is set to Measured Burst Width. If Meas Method is set to Above Threshold Lvl, this value is zero. 10. Measured width is the time length that is used to calculate Mean Transmit Power when “Meas Method” on page 700 is set to Measured Burst Width. If Meas Method is set to Above Threshold, this value is zero. 11. Measured points is the number of points used to calculate Mean Transmit Power when Meas Method is set to Measured Burst Width. If Meas Method is set to Above Threshold, this value is 0.
2	<p>Returns comma-separated trace points of the Measure Trace data.</p> <p>These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p>
3	<p>Returns comma-separated trace points of the Max Hold Trace data.</p> <p>These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>* This is not available in TD-SCDMA.</p>

n	Results Returned
4	<p>Returns comma-separated trace points of the Min Hold Trace data.</p> <p>These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.</p> <p>* This is not available in TD-SCDMA.</p>

Transmit Power (Burst Power) Measurement Description

Mobile stations and base transceiver stations must transmit enough power, with sufficient modulation accuracy, to maintain a call of acceptable quality without leaking power into frequency channels or time slots allocated for others. The Burst Power measurement determines the average power for an RF signal burst at or above a specified threshold value or during the detected burst width. The threshold value may be absolute, or relative to the peak value of the signal. Burst width can be set automatically or manually.

Key Path	Meas
Initial S/W Revision	Prior to A.02.00
Help Map ID	8000

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. Many of the parameter values are measurement dependent. Attenuation values, and the Internal Preamp selection are measurement global, so they are common across all measurements. Functions with operation unique to this measurement are described below. See [AMPTD Y Scale \(Amplitude/Y Scale\)@3001](#) for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8035

Y Ref Value

Sets the absolute power reference.

Key Path	AMPTD Y Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real> :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el?
Example	DISP:TXP:VIEW:WIND:TRAC:Y:RLEV 5dbm DISP:TXP:VIEW:WIND:TRAC:Y:RLEV?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets this value manually, Y Auto Scaling automatically changes to Off.
Preset	10.00
State Saved	Saved in instrument state.
Min	-250.0
Max	250.0
Initial S/W Revision	Prior to A.02.00
Help Map ID	8005

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read

back on the key in square brackets is the current Total (Elec + Mech) attenuation. In "Pre-Adjust for Min Clip" this value can change at the start of every measurement.

See [Attenuation@3003@i](#) for more information.

Key Path	AMPTD Y Scale
Initial S/W Revision	Prior to A.02.00
Help Map ID	8037

Scale/Division

Enables you to enter a numeric value to change the vertical display sensitivity.

Key Path	AMPTD Y Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl> :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision?
Example	DISP:TXP:VIEW:WIND:TRAC:Y:PDIV 10dB DISP:TXP:VIEW:WIND:TRAC:Y:PDIV?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When the Y Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets a value manually, Y Auto Scaling automatically changes to Off.
Preset	10.00 dB
State Saved	Saved in instrument state.
Min	0.1 dB
Max	20.00 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	8006

Internal Preamp

Accesses keys that control the internal preamps. Turning on the preamp gives a better noise figure, but a less desirable TOI to noise floor dynamic range. You can optimize this setting for your particular measurement.

Transmit Power (Burst Power)
AMPTD Y Scale

See Internal_Preamplifier@3036@i for more information.

Key Path	AMPTD Y Scale
Initial S/W Revision	Prior to A.02.00
Help Map ID	8036

Ref Position

Enables you to set the display reference position to either, Top, Center or Bottom.

Key Path	AMPTD Y Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition TOP CENTer BOTTom :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition?
Example	DISP:TXP:VIEW:WIND:TRAC:Y:RPOS CENT DISP:TXP:VIEW:WIND:TRAC:Y:RPOS?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Initial S/W Revision	Prior to A.02.00
Help Map ID	8007

Auto Scaling

Allows you to toggle the Y axis auto scaling function between On and Off.

Key Path	AMPTD Y Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le 0 1 OFF ON :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le?
Example	DISP:TXP:VIEW:WIND:TRAC:Y:COUP 0 DISP:TXP:VIEW:WIND:TRAC:Y:COUP?

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When the user sets a value either “Y Ref Value” on page 676 or “Scale/Division” on page 677 manually, this parameter automatically is set to ‘Off’.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8008

Auto Couple

Operation of this key is identical across several measurements. For details about this key, see [AUTO COUPLE@3041@i](#).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement and set the filter bandwidth.

NOTE If the selected mode is TD-SCDMA, this function is **not** available.

Key Path	Front-panel key
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	8042

Res BW

Sets the resolution bandwidth. This is the bandwidth used for the power measurement. The bandwidth is ideally wide enough to pass all the power of the bursted signal, while not being so wide that it passes noise that reduces dynamic range and the accuracy of low level measurements.

Key Path	BW
Mode	GSM
Remote Command	[:SENSE] :TXPower:BANDwidth[:RESolution] <bandwidth> [:SENSE] :TXPower:BANDwidth[:RESolution] ?
Example	TXP:BAND 1000 TXP:BAND?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	GSM: 510 kHz
State Saved	Saved in instrument state.
Min	1 kHz
Max	Hardware Dependent: No Option = 10 MHz WB (25 MHz or wider) = Hardware Option Limit
Backwards Compatibility SCPI	[:SENSe]:TXPower:BWIDth[:RESolution]
Initial S/W Revision	Prior to A.02.00
Help Map ID	8013

Transmit Power (Burst Power)
BW

Modified at S/W Revision	A.06.00
--------------------------	---------

RBW Control

Accesses a menu that enables you to select the filter bandwidth and type.

Filter Type

Besides the familiar Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions.

Key Path	BW
Mode	GSM
Remote Command	[:SENSe] :TXPower:BAWdwidth:TYPE GAUSSian FLATtop [:SENSe] :TXPower:BAWdwidth:TYPE?
Example	TXP:BAWd:TYPE GAUS TXP:BAWd:TYPE?
Notes	Selects the filter type: either Gaussian or Flat (Flattop). Gaussian is the best choice when looking at the overall burst or the rising and falling edges, as it has excellent pulse response. This measurement does not trade off time domain accuracy vs. noise, just total power accuracy vs. noise level. If you want to precisely examine just the useful part of the burst, choose Flat. This is an advanced control that normally does not need to be changed. Setting this to a value other than the factory default may cause invalid measurement results. FLATtop – a filter with a flat amplitude response, which provides the best amplitude accuracy. GAUSSian – a filter with Gaussian characteristics, which provides the best pulse response. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	GAUSSian
State Saved	Saved in instrument state.
Range	Gaussian (Normal) Flattop
Backwards Compatibility SCPI	[:SENSe]:TXPower:BWIDth:TYPE
Initial S/W Revision	Prior to A.02.00
Help Map ID	8014

Cont (Continuous)

Operation of this key is identical across several measurements. For details about this key, see Cont@3309@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

FREQ/Channel

Operation of this key is identical across several measurements. For details about this key, see [Frequency@\(SA\)3057, \(TD-SCDMA\)27081, \(GSM\)5524@i](#).

Key Path	Front-panel key
Help Map ID	0

Input/Output

Operation of this key is identical across several measurements. For details about this key, see [Input/Out@3065@i](#).

Key Path	Front-panel key
Help Map ID	0

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

For more information, see [Marker@3149@i](#).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8045

Select Marker

Displays 12 markers available for selection.

Key Path	Marker
Initial S/W Revision	Prior to A.02.00
Help Map ID	8054

Marker Type

Sets the marker control mode as described under **Normal**, **Delta**, **Fixed** and **Off**, below. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Key Path	Marker
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELTa OFF :CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE?
Example	CALC:TXP:MARK:MODE OFF CALC:TXP:MARK:MODE?
Notes	If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Preset	OFF
State Saved	Saved in instrument state.
Range	Normal Delta Off
Backwards Compatibility SCPI	:CALCulate:BPOWer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE
Initial S/W Revision	Prior to A.02.00
Help Map ID	8025

Marker X Axis Value

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Key Path	Marker, Normal
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X <real> :CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X ?
Example	CALC:TXP:MARK3:X 0 CALC:TXP:MARK3:X?
Notes	If no suffix is sent, it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” will be generated. The query returns the marker’s absolute X Axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Max value would be changed by Sweep/Meas Time parameter value.
Preset	Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Backwards Compatibility SCPI	:CALCulate:BPOWer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X
Initial S/W Revision	Prior to A.02.00

Help Map ID	8026
-------------	------

Marker X Axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition?
Example	CALC:TXP:MARK10:X:POS 500 CALC:TXP:MARK10:X:POS?
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Max value would be changed by Sweep/Meas Time parameter value.
Preset	Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN).
State Saved	No
Min	-9.9E+37
Max	9.9E+37
Backwards Compatibility SCPI	:CALCulate:BPOWer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition
Initial S/W Revision	Prior to A.02.00
Help Map ID	8027

Marker Y Axis Value (Remote Command Only)

Returns the marker Y Axis value in the current marker Y Axis unit.

The “result” of a marker is the value which is displayed on the second line of the Marker Result block. To properly interpret the returned value the remote programmer must also know what the test set Y-Axis Unit is set to as described below.

A marker can have up to two results, only one of which is displayed or returned on a query, as follows:

Absolute result: every marker has an absolute result and it is simply:

For Normal and Delta markers, the Y Axis value of the trace point the marker is currently on.

The absolute result is displayed in the result block or returned on a query unless the marker control mode is **Delta**.

Relative result: if a marker's control mode is **Delta**, the relative result is displayed in the result block or returned on a query. This is the ratio of the Absolute Result of a delta marker to the Absolute Result of its reference marker. The ratio is expressed in dB.

Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Example	CALC:TXP:MARK11:Y?
Notes	The query returns the marker Y Axis result. If the marker is Off the response is not a number. You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	0
State Saved	No
Backwards Compatibility SCPI	:CALCulate:TXPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:RESult? :CALCulate:BPOWer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNcTion:RESult? :CALCulate:BPOWer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y?
Initial S/W Revision	Prior to A.02.00
Help Map ID	8028

Properties

Accesses a menu that enables you to set marker properties and to access the marker trace menu.

Key Path	Marker
Initial S/W Revision	Prior to A.02.00
Help Map ID	8055

Select Marker

Displays 12 markers available for selection.

Key Path	Marker, Properties
Mode	GSM
Initial S/W Revision	Prior to A.02.00

Transmit Power (Burst Power)
Marker

Help Map ID	8056
-------------	------

Relative To

Selects the marker that the selected marker will be relative to (its reference marker).

Key Path	Marker, Properties
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence?
Example	CALC:TXP:MARK:REF 10 CALC:TXP:MARK:REF?
Notes	A marker cannot be relative to itself, so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. When queried a single value will be returned (the specified marker numbers relative marker).
Preset	2 3 4 5 6 7 8 9 10 11 12 1
State Saved	Saved in instrument state.
Min	1
Max	12
Initial S/W Revision	Prior to A.02.00
Help Map ID	8029

Marker Trace

Assigns the specified marker to the designated trace.

Key Path	Marker, Properties
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe RFENvelope MAXHold MINHold :CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe?
Example	CALC:TXP:MARK:TRAC MAXH CALC:TXP:MARK:TRAC?

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	If Detector/Max Hold Trace is Off, Max Hold is grayed out and MAXHold parameter is not available. If Detector/Min Hold Trace is Off, Min Hold is grayed out and MINHold parameter is not available.
Preset	RFENvelope
State Saved	Saved in instrument state.
Range	RF Envelope Max Hold RF Envelope Min Hold RF Envelope
Backwards Compatibility SCPI	:CALCulate:BPOwer:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe
Initial S/W Revision	Prior to A.02.00
Help Map ID	8030

Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Key Path	Marker
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer:COUple[:STATE] ON OFF 1 0 :CALCulate:TXPower:MARKer:COUple[:STATE]?
Example	CALC:TXP:MARK:COUP ON CALC:TXP:MARK:COUP?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8031

Transmit Power (Burst Power)
Marker

All Markers Off

Turns off all markers.

Key Path	Marker
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer:AOFF
Example	CALC:TXP:MARK:AOFF
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Backwards Compatibility SCPI	:CALCulate:BPOWer:MARKer:AOFF
Initial S/W Revision	Prior to A.02.00
Help Map ID	8032

Marker Function

There is no 'Marker Function' supported in Burst (Tx) Power, so this front-panel key displays a blank menu key when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8048

Marker To

There is no 'Marker To' functionality supported in Burst (Tx) Power, so this front-panel key displays a blank menu key when pressed.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8047

Meas

Operation of this key is identical across several measurements. For details about this key, see [Meas@4008@i](#).

Key Path	Front-panel key
Help Map ID	0

Meas Setup

Displays the setup menu for the currently selected measurement. Many of the lower-level menu keys operate the same in all measurements. Unique functions are described below.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8044

Avg/Hold Num

Specifies the number of data acquisition that will be averaged. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

- On - Sets measurement averaging on.
- Off - Sets measurement averaging off.

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSe]:TXPower:AVERage:COUNT <integer> [:SENSe]:TXPower:AVERage:COUNT? [:SENSe]:TXPower:AVERage[:STATe] OFF ON 0 1 [:SENSe]:TXPower:AVERage[:STATe]?
Example	TXP:AVER:COUN 100 TXP:AVER:COUN? TXP:AVER:0 TXP:AVER?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	50 ON
State Saved	Saved in instrument state.
Min	1
Max	10000
Backwards Compatibility SCPI	[:SENSe]:BPOWer:AVERage:COUNT
Initial S/W Revision	Prior to A.02.00
Help Map ID	8015

Avg Mode

Selects the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

Key	SCPI	Mode
Exponential	EXponential	After the average count is reached, each successive data acquisition is exponentially weighted and combined with the existing average.
Repeat	REPeat	After reaching the average count, the averaging is reset and a new average is started.

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSE] :TXPower:AVERage:TCONtrol EXPonential REPEAT [:SENSe] :TXPower:AVERage:TCONtrol?
Example	TXP:AVER:TCON REP TXP:AVER:TCON?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	EXponential
State Saved	Saved in instrument state.
Range	Exp Repeat
Backwards Compatibility SCPI	[:SENSe] :BPOWer:AVERage:TCONtrol
Initial S/W Revision	Prior to A.02.00
Help Map ID	8016

Avg Type

Specifies the type of trace and result averaging to use.

Key	SCPI	Type
Pwr Avg (RMS)	RMS	True power averaging that is equivalent to taking the RMS value of the voltage. It is the most accurate type of averaging.
Log-Pwr Avg (Video)	LOG	Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power.
None	MAXimum	The maximum values are retained during the averaging cycle.
None	MINimum	The minimum values are retained during the averaging cycle.

Transmit Power (Burst Power)
Meas Setup

GSM Mode

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSE] :TXPower :AVERage :TYPE LOG MAXimum MINimum RMS [:SENSE] :TXPower :AVERage :TYPE?
Example	TXP:AVER:TYPE LOG TXP:AVER:TYPE?
Notes	Maximum Minimum are selected only via SCPI. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Selecting MAXimum MINimum force to visible “Max Hold Trace” on page 719 or and “Min Hold Trace” on page 719 . Measure Trace stays in RMS or Video average state.
Preset	RMS
State Saved	Saved in instrument state.
Range	Pwr Avg (RMS) Log-Pwr Avg(Video) Maximum Minimum
Backwards Compatibility SCPI	[:SENSE] :BPOWer :AVERage :TYPE
Initial S/W Revision	Prior to A.02.00
Help Map ID	8017

TD-SCDMA Mode

Key Path	Meas Setup
Mode	TD-SCDMA
Remote Command	[:SENSE] :TXPower :AVERage :TYPE LOG RMS [:SENSE] :TXPower :AVERage :TYPE?
Example	TXP:AVER:TYPE LOG TXP:AVER:TYPE?
Notes	You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode.
Preset	RMS
State Saved	Saved in instrument state.
Range	Pwr Avg (RMS) Log-Pwr Avg(Video)
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Threshold Lvl

When Meas Method is set to Above Threshold Lvl, the mean carrier power is calculated based on the trace above the threshold level. The threshold level is displayed in dB (relative to the measured carrier) or dBm (absolute).

A green line in the grid is displayed at the y-position associated with the current threshold level value. Its state is controlled by the On/Off state of the 'Display Line' under the View/Display menu.

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSe]:TXPower:THReshold <real> [:SENSe]:TXPower:THReshold? [:SENSe]:TXPower:THReshold:TYPE ABSolute RELative [:SENSe]:TXPower:THReshold:TYPE?
Example	TXP:THR 0 TXP:THR?
Example	TXP:THR:TYPE ABS TXP:THR:TYPE?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. BAF SCPI Command determines whether this command is setting an absolute or a relative power level. Suffix dB and dBm are allowed, but it does not change the state of Threshold Type. Suffix may not be send. If Threshold Type is set to Relative, the positive value of Threshold level was allowed to +100 dB and it treated as a negative value. Now max value of Threshold level is changed to 0 dB. To keep the backward compatibility, the input from SCPI command allows to +100 dB.
Preset	GSM: -20.0 TD-SCDMA: -60.0 RELative
State Saved	Saved in instrument state.
Min	-100
Max	GSM: Relative: 0 dB Absolute: 100 dBm TD-SCDMA: Relative: 0 dB Absolute: 60 dBm

Meas Setup

Backwards Compatibility SCPI	[:SENSe] :BPOWer:THReshold
Initial S/W Revision	Prior to A.02.00
Help Map ID	8018

Meas Method

When the selected mode is GSM, there are two options for this parameter:

- **Above Threshold Level** measurement algorithm is used to capture a time record, and average only those points in the time record that exceed the user-specified threshold level. No attempt is made to position the burst, or to calculate/display burst widths. This can be used to measure continuous signals, or bursted signals where the Measured Burst Width algorithm is too restrictive.
- **Measured Burst Width** measurement algorithm uses the threshold level to calculate the burst center, and average those points that lie within a user-specified burst width that is centered upon the burst. The burst width parameter is described in more detail below.

When the selected mode is TD-SCDMA, there is a third option:

- **Single Time Slot** measurement algorithm is to capture a single time slot record, and calculate the start and stop position of the time slot in terms of the trigger position theoretically. No attempt is made to position the burst, or to calculate/display burst widths. The burst width drawn in the screen is considered to be the theoretical width of the slot. This method is recommended to measure the mean transmit power in a single slot when trigger source is External Front/Rear while the Measured Burst Width algorithm is too restrictive.

GSM mode

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSe] :TXPower:METhod THReshold BWIDth [:SENSe] :TXPower:METhod?
Example	TXP:METh BWID TXP:METh?
Preset	THReshold
State Saved	Saved in instrument state.
Range	Above Threshold Lv Measured Burst Width
Backwards Compatibility SCPI	[:SENSe] :BPOWer:METhod
Initial S/W Revision	Prior to A.02.00
Help Map ID	8019

TD-SCDMA Mode

Key Path	Meas Setup
Mode	TD-SCDMA
Remote Command	[:SENSe] :TXPower:METhod THReshold BWIDth SINGle [:SENSe] :TXPower:METhod?
Example	TXP:METH BWID TXP:METH?
Preset	SINGle
State Saved	Saved in instrument state.
Range	Threshold Lvl Measured Burst Width Single TimeSlot
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Burst Width

When Burst Width Mode is set to manual, the user may enter a fixed-time value in seconds, or alternatively specify the burst width as a percentage of the last measured burst width (result in bottom-left corner of second window).

Key Path	Meas Setup
Mode	GSM
Remote Command	[:SENSe] :TXPower:BURSt:WIDTh <time> [:SENSe] :TXPower:BURSt:WIDTh? [:SENSe] :TXPower:BURSt:AUTO ON OFF 1 0 [:SENSe] :TXPower:BURSt:AUTO?
Example	TXP:BURS:WIDT 10 TXP:BURS:WIDT? TXP:BURS:AUTO 1 TXP:BURS:AUTO?
Example	TXP:BURS:AUTO 0 TXP:BURS:AUTO? TXP:BURS:AUTO 1 TXP:BURS:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Transmit Power (Burst Power)
Meas Setup

Dependencies	Burst Width will be grayed out if “Meas Method” on page 700 is set to ‘Above Threshold Lvl’.
Couplings	GSM: Max value depends on Sweep Time, Res BW and RBW filter type. TD-SCDMA: If the measure method is not “Measured Burst Width”, this key will be grayed out. The default value is depending on the Burst type: If Burst Type = Traffic, Burst Width = 662.5 us If Burst Type = Downlink Pilot, Burst Width = 50 us If Burst Type = Uplink Pilot, Burst Width = 100 us
Preset	GSM: 255.6 us TD-SCDMA: 662.5 us ON
State Saved	Saved in instrument state.
Min	100.0 ns
Max	50 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	8020

IF Gain

The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

If the selected mode is TD-SCDMA, this function is **not** available, and the front-panel key displays a blank menu when pressed.

Key Path	Meas Setup
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	8052

IF Gain Auto

Activates the auto rules for IF Gain.

Key Path	Meas Setup, IF Gain
Mode	GSM

Remote Command	[:SENSE] :TXPower:IF:GAIN:AUTO[:STATe] OFF ON 0 1 [:SENSE] :TXPower:IF:GAIN:AUTO[:STATe] ?
Example	TXP:IF:GAIN:AUTO ON TXP:IF:GAIN:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode.
Dependencies	IF Gain is not available when IQ Input is selected (the menu key is blank).
Couplings	When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed according to the following rule. 'auto' sets IF Gain High under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to Low.
Preset	ON
State Saved	Saved in instrument state.
Range	Auto Man
Initial S/W Revision	Prior to A.02.00
Help Map ID	8021

IF Gain State

Selects the range of the IF Gain.

Key Path	Meas Setup, IF Gain
Mode	GSM
Remote Command	[:SENSe] :TXPower:IF:GAIN[:STATe] ON OFF 1 0 [:SENSe] :TXPower:IF:GAIN[:STATe] ?
Example	TXP:IF:GAIN ON TXP:IF:GAIN?
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SELEct to set the mode. where ON = high gain OFF = low gain
Dependencies	IF Gain is not available when IQ Input is selected (the menu key is blank)
Couplings	Sending this command forces "IF Gain Auto" on page 702 to OFF (Man).
Preset	OFF
State Saved	Saved in instrument state.

Transmit Power (Burst Power)
Meas Setup

Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)
Initial S/W Revision	Prior to A.02.00
Help Map ID	8022

Meas Interval (for TD-SCDMA mode)

Sets the number of slots to be captured for each measurement. Uplink and downlink pilots each count as one slot, so setting the Meas Interval parameter to 9 will display one full subframe.

Key Path	Meas Setup
Mode	TD-SCDMA
Remote Command	[:SENSe] :TXPower:SWEep:TIME <integer> [:SENSe] :TXPower:SWEep:TIME?
Example	TXP:SWE:TIME 4 TXP:SWE:TIME?
Notes	In Single Time Slot method, Meas Interval is set to 1 and the key is disabled automatically. You must be in the TD-SCDMA mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	When device in Radio menu changes: If device is BTS, Trigger Source: External Front, Method: Single Time Slot, Measure: Continuous, Measure Time: disabled (=1); If device is MS, Trigger Source: RF Burst, Method: Measured Burst Width, Measure: Single, Measure Time: enabled.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	18
Initial S/W Revision	Prior to A.02.00
Help Map ID	8053

Meas Preset

Returns parameters for this measurement to those set by the factory.

Key Path	Meas Setup
Mode	GSM
Remote Command	:CONFigure:TXPower
Example	CONF:TXP
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Initial S/W Revision	Prior to A.02.00
Help Map ID	8024

Mode

Operation of this key is identical across all measurements in this application. For details about this key, see [Mode@2670@i](#).

Key Path	Front-panel key
Help Map ID	0

Mode Setup

Operation of this key is identical across all measurements in this application. For details, see [Mode Setup@5520@i](mailto:ModeSetup@5520@i).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace. Pressing Peak Search with the selected marker off causes the selected marker to be set to Normal, then a peak search is immediately performed.

Key Path	Front-panel key
Mode	GSM
Remote Command	:CALCulate:TXPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum
Example	CALC:TXP:MARK2:MAX
Initial S/W Revision	Prior to A.02.00
Help Map ID	8046

Recall

See [Recall@2637@i](#) in the section "Common Measurement Functions" for more information.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Restart

Restart

Operation of this key is identical across all measurements. For details about this key, see Restart@3307@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Save

Operation of this key is identical across several measurements. For details about this key, see [Save@2600@i](#).

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Single

Operation of this key is identical across all measurements. For details about this key, see Single@3515@i.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Source (Internal)

Operation of this key is identical across all measurements. For details about this key, see [Source \(Internal\)@35360@i](#).

Key Path	Front-panel key
Help Map ID	0

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8034

Ref Value

Enables you to set the display X reference value.

Key Path	SPAN X Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:RLEV el <time> :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:RLEV el?
Example	DISP:TXP:VIEW:WIND:TRAC:X:RLEV 1s DISP:TXP:VIEW:WIND:TRAC:X:RLEV?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	If the “Auto Scaling” on page 716 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 716 automatically changes to Off.
Preset	0 s
State Saved	Saved in instrument state.
Min	-10.0 s
Max	10.00 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	8001

Scale/Div

Enables you to set the display X scale/division value.

Key Path	SPAN X Scale
Mode	GSM

Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time> :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:PDIVision?
Example	DISP:TXP:VIEW:WIND:TRAC:X:PDIV 1ms DISP:TXP:VIEW:WIND:TRAC:X:PDIV?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Couplings	If the “Auto Scaling” on page 716 is On, this value is automatically determined by the measurement result. When you set a value manually, “Auto Scaling” on page 716 automatically changes to Off.
Preset	64.0 us
State Saved	Saved in instrument state.
Min	1.00 ns
Max	1.00 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	8002

Ref Position

Enables you to set the display X reference position to Left, Center or Right.

Key Path	SPAN X Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:RPOSition?
Example	DISP:TXP:VIEW:WIND:TRAC:X:RPOS LEFT DISP:TXP:VIEW:WIND:TRAC:X:RPOS?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	LEFT
State Saved	Saved in instrument state.
Range	Left Ctr Right
Initial S/W Revision	Prior to A.02.00
Help Map ID	8003

Auto Scaling

Enables you to toggle the X auto scaling function between On and Off.

Key Path	SPAN X Scale
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPlE?
Example	DISP:TXP:VIEW:WIND:TRAC:X:COUP OFF DISP:TXP:VIEW:WIND:TRAC:X:COUP?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Couplings	Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either X Rel Value or “Key Path” on page 714 manually, X Auto Scaling automatically changes to Off.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8004

Sweep/Control

Accesses a menu of functions that enable you to set up and control the sweep for the current measurement. For details about this key, see [Sweep/Control@3273@i](#).

Key Path	Front-panel key
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	8043

Sweep Time (for GSM mode)

Sets the number of slots which are used in each data acquisition. Each slot is approximately to 600 s.

Key Path	Sweep/Control
Mode	GSM
Remote Command	[:SENSe] :TXPower:SWEep:TIME <integer> [:SENSe] :TXPower:SWEep:TIME?
Example	TXP:SWE:TIME 4 TXP:SWE:TIME?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	50
Initial S/W Revision	Prior to A.02.00
Help Map ID	8051

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement.

For more information, see [Pause@3290@i](#).

Key Path	Sweep/Control
Mode	GSM

Transmit Power (Burst Power)
Sweep/Control

Initial S/W Revision	Prior to A.02.00
Help Map ID	8059

Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	8040

Max Hold Trace

This key enables you to select visible/invisible Max Hold Trace.

Key Path	Trace/Detector
Mode	GSM
Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]] ON OFF 1 0 :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]]?
Example	:DISP:TXP:VIEW:WIND:TRAC:MAXH ON :DISP:TXP:VIEW:WIND:TRAC:MAXH?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Couplings	Selecting [:SENSe]:TXPower:AVERAge:TYPE MAXimum forces this parameter to ON.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8010

Min Hold Trace

This key enables you to select visible/invisible Min Hold Trace.

Key Path	Trace/Detector
Mode	GSM

Transmit Power (Burst Power)
Trace/Detector

Remote Command	:DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATE] ON OFF 1 0 :DISPlay:TXPower:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATE]?
Example	:DISP:TXP:VIEW:WIND:TRAC:MINH ON :DISP:TXP:VIEW:WIND:TRAC:MINH?
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Couplings	Selecting [:SENSe]:TXPower:AVERage:TYPE MINimum forces this parameter to ON.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8011

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. Operation of this key is identical across all measurements. For details about this key, see [Trigger@3371@i](#) for more information.

Key Path	Front-panel key
Help Map ID	0

View/Display

The View/Display key opens up the View menu for the current measurement. The views that are available are specific to the current measurement selected under the **Meas** key. Many of the lower-level menu keys are also the same across all measurements. Unique functions are described below.


This measurement has one view, which consists of two windows.

[“RF Envelope view for TX Power Measurement \(Above Threshold\)” on page 722](#)


[“RF Envelope view with Bar Graph for TX Power Measurement \(Measured Burst Width\)” on page 723](#)

[“RF Envelope view with Bar Graph for TX Power Measurement \(Single TimeSlot\)” on page 724](#)

RF Envelope view for TX Power Measurement (Above Threshold)

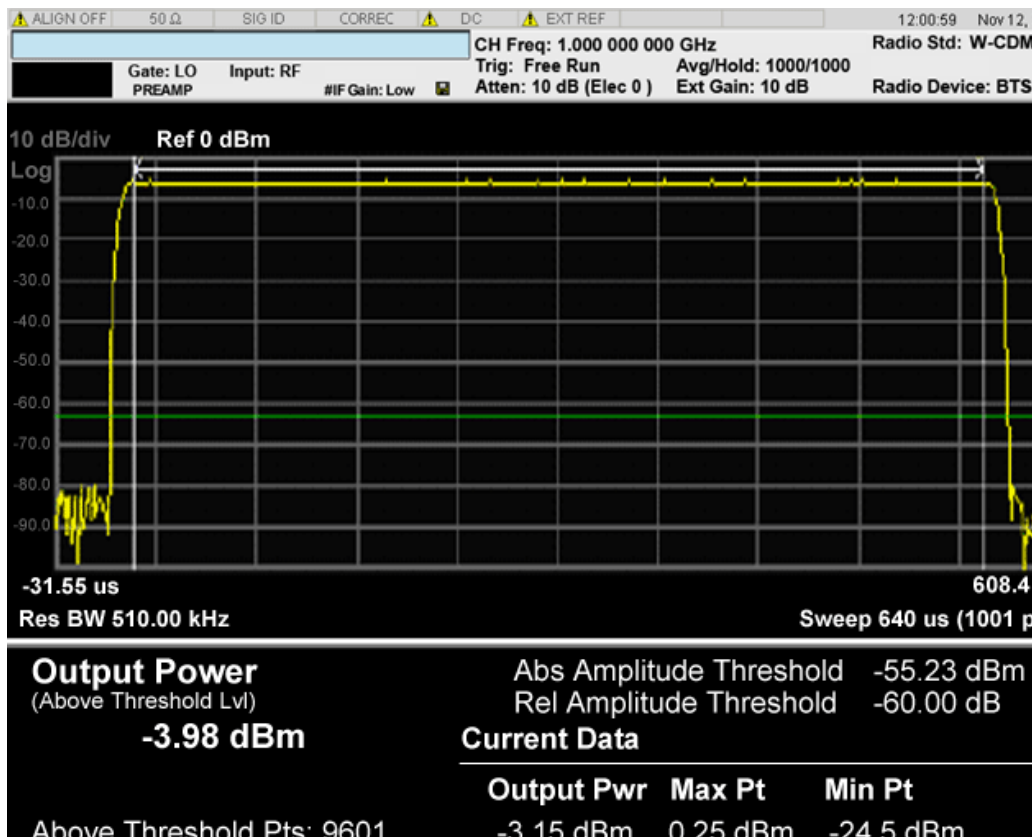


RF Envelope view with Bar Graph for TX Power Measurement (Measured Burst Width)

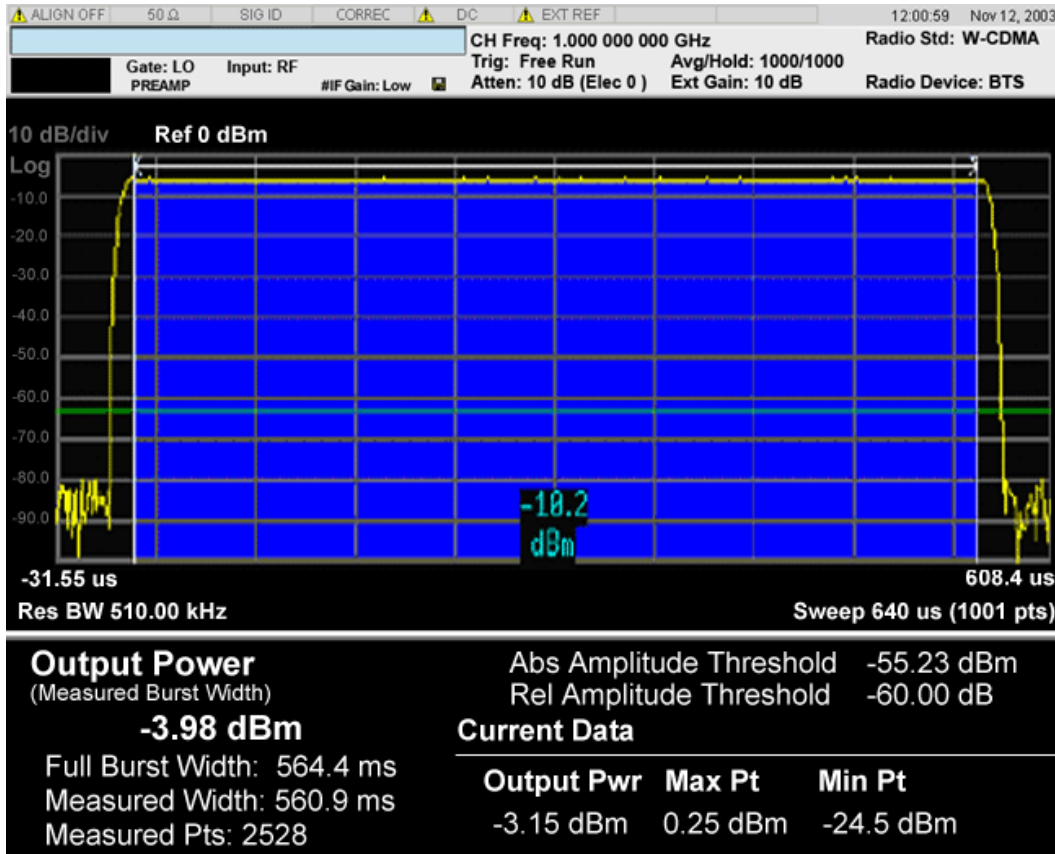

Transmit Power (Burst Power)
View/Display

RF Envelope view with Bar Graph for TX Power Measurement (Single TimeSlot)

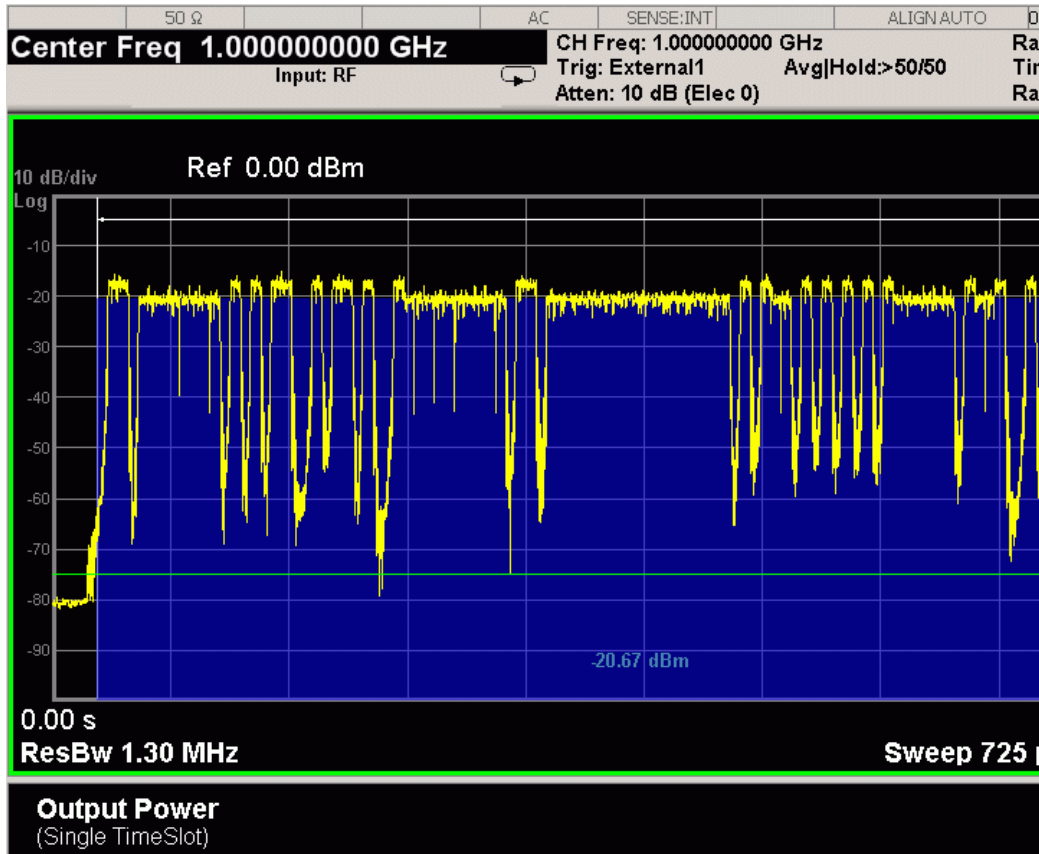

The bar graph represents the measured portion of the trace. It is the blue bar in the second figure. Its state (On/Off) is controlled by the “Bar Graph” on page 726 key under the View/Display key.

RF Envelope window

Marker Operation	Yes
Corresponding Trace	Corrected measured trace (n=2,3,4)

Metrics window

Name	Corresponding Results	Display Format
Mean Transmit Power	n=1 3rd	99.99 dBm
Above Threshold or Measured Burst Width	Power Value above the threshold or measured burst width for N averages, if averaging is on. An average consists of N acquisitions of data which represents the current trace. If averaging is off, the value of power averaged is the same as the Mean Transmit Power of Current Data.	

Name	Corresponding Results	Display Format
Full Burst Width	n=1 9th Burst width that is determined by the “Threshold Lvl” on page 699.	999.9 us
Measured Width	n=1 10th Time length that is used to calculate Mean Transmit Power when “Meas Method” on page 700 is Measured Burst Width. If Meas Method is set to Above Threshold, disappear from the window.	999.9 us
Above Thresh Pts	n=1 6th Number of points that were above the threshold level and were used for the power calculation when “Meas Method” on page 700 is Above Threshold Level.	9999
Thresh Pts	N=1 6th Number of points that were used for the power calculation when Meas Method is Measured Burst Width.	9999
Abs Amplitude Threshold	n=1 5th Threshold value is the threshold (in dBm) above which the power is calculated.	99.99 dBm
Rel Amplitude Threshold	Threshold (in dB) relative to the peak carrier level above which the power is calculated	99.99 dB
Mean Transmit power (Current data)	n=1 2nd Power value above the threshold or measured burst width. If averaging is on, the power is for the latest acquisition.	99.99 dBm
Max Pt	n=1 7th Maximum peak level of the most recently acquired trace data.	99.99 dBm
Min Pt	n=1 8th Minimum peak level of the most recently acquired trace data.	99.99 dBm

Key Path	Front-panel key
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	8038

Display

Invokes the Display menu. All measurements have same Display menu and same functionality for each

Transmit Power (Burst Power)
View/Display

key under Display menu. For details about this key, see [Display@3440@i](#).

Key Path	View/Display
Mode	GSM
Initial S/W Revision	Prior to A.02.00
Help Map ID	8058

Bar Graph

Enables you to select visible/invisible Bar Graph.

Key Path	View/Display
Mode	GSM
Remote Command	:DISPlay:TXPower:BARGraph[:STATE] ON OFF 1 0 :DISPlay:TXPower:BARGraph[:STATE] ?
Example	DISP:TXP:BARG ON DISP:TXP:BARG?
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	8009

The key and command descriptions in this section describe functions that operate the same in multiple measurements and/or modes. This section is a library of functions that is referenced by many measurements and modes

To find the exact description and parameters for functions in a specific measurement, always look in the measurement section of this documentation. Pressing the front-panel key or key and then pressing the green Help key also provides the correct information.

NOTE

If you want to print the documentation, select this section and the measurement of interest to ensure that you have all the information you need. See [“Printing Acrobat Files” on page 98](#) for further instructions about printing.

AMPTD Y Scale

The Amplitude front-panel key activates the Amplitude menu and selects Reference Level or Reference Value (depending on the measurement) as the active function.

Some features in the Amplitude menu apply to multiple measurements; others apply only to specific measurements. Keys that only apply to some measurements are blanked or grayed out in measurements that are not supported.

Key Path:	Front-panel key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3001

Reference Level

The Reference Level specifies the amplitude represented by the topmost graticule line.

Changing the reference level does not restart a measurement, because it is a display function only; instead it vertically ‘pans’ all displayed traces and markers to the new value. If a change to the reference level changes the attenuation value (e.g. through an auto coupling), then the measurement will be restarted.

See [“Amplitude Representations” on page 730](#)


Key Path:	AMPTD Y Scale
Remote Command:	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?
Example:	DISP:WIND:TRAC:Y:RLEV 20 dBm Sets the reference level to 20 dBm, which displays in the current Y axis unit. For example, if the Y axis unit is dBμV, then 126.99 dBμV will be displayed.
Couplings:	If you reduce the attenuation, the analyzer may have to lower the reference level to keep it below its allowed maximum. This allowed maximum level is specified in the “Max” row, below, along with other variables which affect it. When you increase attenuation, the reference level does not change.
Preset:	0 dBm
State Saved:	Saved in instrument state
Min:	RefLevelMin = -170 dBm + RefLevelOffset - ExtGain.

AMPTD Y Scale

Max:	<p>The maximum Ref Level is typically:</p> <p>+30 dBm + RL Offset – External Gain (for MXA and PXA)</p> <p>+23 dBm + RL Offset – External Gain (for EXA and CXA)</p> <p>This maximum value is determined by the maximum power that can be safely applied to the input circuitry. The actual maximum value at any given time may be even less than this, depending on other values including Mech Atten, Int Preamp Gain, Swept IF Gain, FFT IF Gain, Max Mixer Level, and the total attenuation currently available.</p> <p>Note that the maximum reference level is unaffected by the input choice of external mixing.</p>
Default Unit:	Depends on the current selected Y axis unit
Backwards Compatibility Notes:	<ol style="list-style-type: none"> 1. In PSA, there was a restriction on Ref Level Max which was that it could not exceed 0 dBm when the preamp was on. This restriction does not apply to X-Series. 2. Ref Level – Ref Level is a display function, not a measurement control function, so a change in the setting does not start a new sweep (unless attenuation changes). This behavior differs from that of legacy analyzers
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3002

Amplitude Representations

The following is an illustration of the reference level and Y Axis scales under various conditions:

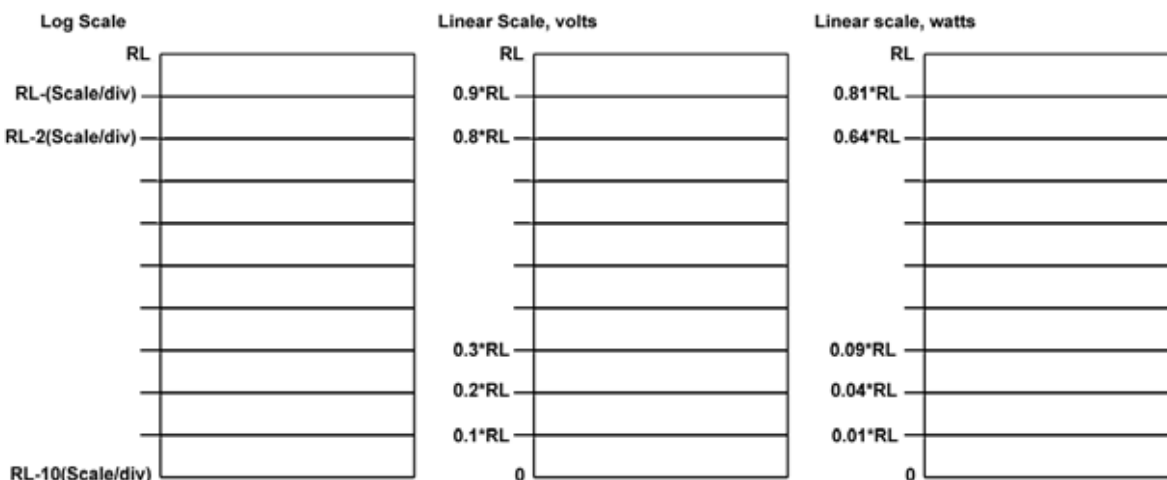

Attenuation

This menu controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a dual attenuator configuration

consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

See “Dual Attenuator Configurations” on page 731.


See “Single Attenuator Configuration:” on page 732

Most Attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

Key Path:	AMPTD Y Scale
Scope:	Meas Global
Dependencies:	In measurements that support the I/Q inputs, this key is unavailable when I/Q is the selected input, and is replaced by the Range key in that case. Attenuator controls and settings are not available on the E6607C. If any attenuator commands are sent to the E6607C the following error will be generated: -241;Hardware missing; not available for this model number
Readback Line:	Contains a summary in [] brackets of the current total attenuation. See the descriptions of the “(Mech) Atten ” on page 732, “Enable Elec Atten” on page 735, and “Elec Atten” on page 738 keys for more detail on the contributors to the total attenuation. Note that when "Pre-Adjust for Min Clip" is on, this value can change at the start of every measurement.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3003


Dual Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

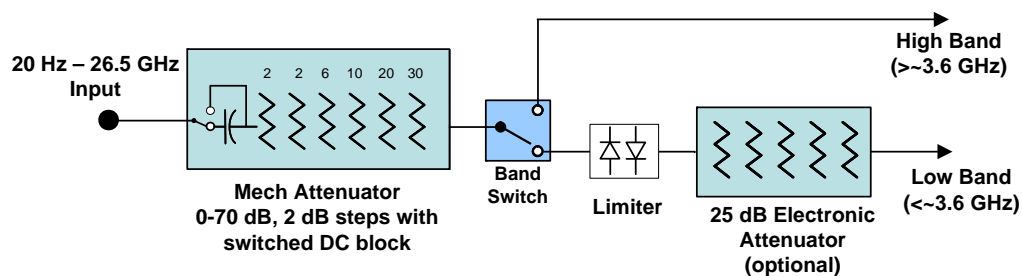


Configuration 2: Mechanical attenuator, no optional electronic attenuator

AMPTD Y Scale

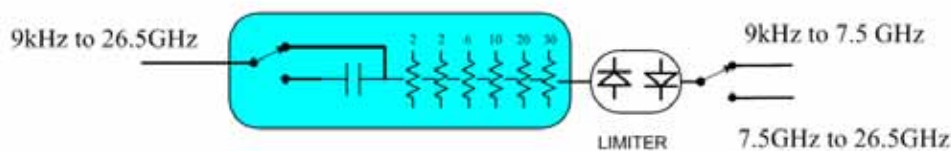


(note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator option EA3, therefore for the sake of this document it is grouped into the “Dual Attenuator” configuration)

Single Attenuator Configuration:

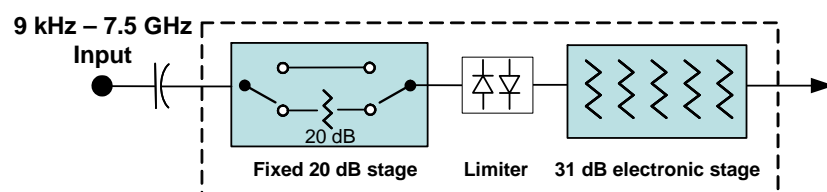

You can tell which attenuator configuration you have by pressing the Attenuation key, which (in most Modes) opens the Attenuation menu. If the first key in the Attenuation menu says **Mech Atten** you have the dual attenuator configuration. If the first key says **Atten** you have the single attenuator configuration.

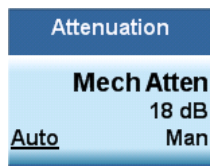

Dual Attenuator



Single Attenuator

In the single attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the dual attenuator configuration, both stages have significant range so you are given separate control of the mechanical and electronic attenuator stages.

When you have the dual attenuator configuration, you may still have only a single attenuator, because unless option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

(Mech) Atten

This key is labeled **Mech Atten** in dual attenuator models and **Atten** in single attenuator models. In the dual attenuator configuration, this key only affects the mechanical attenuator.

This key lets you modify the attenuation applied to the RF input signal path. This value is normally auto coupled to the Ref Level, the Internal Preamp Gain, any External Gain that is entered, and the Max Mixer Level, as described in the table below.

See “Attenuator Configurations and Auto/Man” on page 734

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	<pre>[:SENSe] :POWer [:RF] :ATTenuation <rel_ampl> [:SENSe] :POWer [:RF] :ATTenuation? [:SENSe] :POWer [:RF] :ATTenuation:AUTO OFF ON 0 1 [:SENSe] :POWer [:RF] :ATTenuation:AUTO?</pre>
Example:	<p>POW:ATT 20</p> <p>Dual attenuator configuration: sets the mechanical attenuator to 20 dB</p> <p>Single attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation).</p> <p>If the attenuator was in Auto, it sets it to Manual.</p>
Dependencies:	<p>Some measurements do not support the Auto setting of (Mech) Atten. In these measurements, the Auto/Man selection is not available, and the Auto/Man line on the key disappears.</p> <p>In dual attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting and the Auto/Man line on the key disappears. The state of Auto/Man is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in the “Enable Elec Atten” on page 735 key description.</p> <p>See “Attenuator Configurations and Auto/Man” on page 734 for more information on the Auto/Man functionality of Attenuation.</p>
Couplings:	<p>When (Mech) Atten is in Auto, it uses the following algorithm to determine a value:</p> $\text{Atten} = \text{ReferenceLevel} + \text{PreAmpGain} + \text{ExternalGain} - \text{RefLevelOffset} - \text{MaxMixerLevel} + \text{IF Gain}.$ <p>Limit this value to be between 6 dB and the Max value. No value below 6 dB can ever be chosen by Auto.</p> <p>The resulting value is rounded up to the largest value possible given the attenuation step setting. That is, 50.01 dB would change to 60 dB (for a 10 dB attenuation step).</p> <p>The “IF Gain” term in the equation above is either 0 dB or +10 dB, depending on the settings of FFT IF Gain, Swept IF Gain, max Ref Level and the Auto/Man setting of Mech Atten.</p> <p>In External Mixing and BBIQ, where the Attenuator is not in the signal path, the Attenuator setting changes as described above when (Mech) Atten is in Auto, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input.</p>

AMPTD Y Scale

Preset:	The preset for Mech Attenuation is “Auto.” The Auto value of attenuation is: CXA, EXA, MXA and PXA: 10 dB EXT: 6dB
State Saved:	Saved in instrument state
Min:	0 dB The attenuation set by this key cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased.
Max:	CXA N9000A–503/507: 50 dB CXA N9000A–513/526: 70dB EXA: 60 dB MXA and PXA: 70 dB EXT: 70 dB In the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3004

Attenuator Configurations and Auto/Man

As described in the Attenuation key description, there are two distinct attenuator configurations available in the X-Series, the single attenuator and dual attenuator configurations. In dual attenuator configurations, we have the mechanical attenuation and the electronic attenuation, and the current total attenuation is the sum of the electronic + mechanical attenuation. In single attenuator configurations, we refer to the attenuation set using the **(Mech) Atten** key (or POW:ATT SCPI) as the “main” attenuation; and the attenuation that is set by the SCPI command POW:EATT as the “soft” attenuation (the POW:EATT command is honored even in the single attenuator configuration, for compatibility purposes). Then the current total attenuation is the sum of the main + soft attenuation. See the **Elec Atten** key description for more on “soft” attenuation.

In the dual attenuator configuration, when the electronic attenuator is enabled, there is no Auto/Man functionality for the mechanical attenuator, and the third line of the key label (the Auto/Man line) disappears:

<p>Mech Atten 0 dB <u>Auto</u> Man</p>

<p>Mech Atten 0 dB</p>

<p>Mech Atten when elec atten disabled</p>
--

<p>Mech Atten when elec atten enabled</p>

vsd05

Enable Elec Atten

Enables the Electronic Attenuator.

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See [“Using the Electronic Attenuator: Pros and Cons” on page 737](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the single attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the dual attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See [“Attenuator Configurations and Auto/Man” on page 734](#)

See [“More Information” on page 736](#)

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSe] :POWer [:RF] :EATTenuation:STATe OFF ON 0 1 [:SENSe] :POWer [:RF] :EATTenuation:STATe?
Example:	POW:EATT:STAT ON

Dependencies:	<p>This key only appears in Dual Attenuator models with an Electronic Attenuator installed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the single attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments and set a “soft” attenuation as described in “Attenuator Configurations and Auto/Man” on page 734</p> <p>The electronic attenuator (and the “soft” attenuation function provided in single attenuator configurations) is unavailable above 3.6 GHz. Therefore, if the Stop Frequency of the analyzer is > 3.6 GHz then the Enable Elec Atten key will be OFF and grayed out.</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, the electronic attenuator (and the “soft” attenuation function provided in single attenuator configurations) is unavailable. In this case the Enable Elec Atten key will be OFF and grayed out.</p> <p>If either of the above is true, if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable will be sent.</p> <p>If the electronic/soft Attenuator is enabled, then the Stop Freq of the analyzer is limited to 3.6 GHz and the Internal Preamp is unavailable.</p> <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement.</p>
Couplings:	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in dual attenuator configurations). This is described in more detail below this table.
Preset:	OFF for Swept SA measurement; ON for all other measurements that support the electronic attenuator
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3005

More Information

Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. NOTE that the information below ONLY applies to the dual attenuator configurations, and ONLY when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally

would in manual mode

- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man line on the (Mech) Atten key disappears and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation.

Examples in the dual attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled.
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled.
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled.

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten key is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB.)

Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the analyzer dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the analyzer calibration

AMPTD Y Scale

Elec Atten

Controls the Electronic Attenuator in dual attenuator configurations. This key does not appear in single attenuator configurations, as the control of both the mechanical and electronic stages of the single attenuator is integrated into the single **Atten** key.

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSE] :POWER[:RF] :EATTenuation <rel_ampl> [:SENSE] :POWER[:RF] :EATTenuation?
Notes:	Electronic Attenuation's specification is defined only when Mechanical Attenuation is 6 dB.
Dependencies:	This key only appears in Dual Attenuator models with an Electronic Attenuator installed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no "electronic attenuator" there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the single attenuator configuration, EATT SCPI commands are accepted for compatibility with other X-series instruments and set a "soft" attenuation as described in "Attenuator Configurations and Auto/Man" on page 734 . The "soft" attenuation is treated as an addition to the "main" attenuation value set by the Atten softkey or the POW:ATT SCPI command and affects the total attenuation displayed on the Attenuation key and the Meas Bar. When Enable Elec Atten is off or grayed out, the Elec Atten key is grayed out.
Preset:	0 dB
State Saved:	Saved in instrument state
Min:	0 dB
Max:	Dual attenuator configuration: 24 dB Single attenuator configuration: the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3006

Adjust Atten for Min Clip

Sets the combination of mechanical and electronic attenuation based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer

measurement, Swept SA, does not support this functionality.

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSE] :POWER [:RF] :RANGE:OPTimize IMMEDIATE
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3007

Pre-Adjust for Min Clip

If this function is on, it does the adjustment described under “Adjust Atten for Min Clip” on page 738 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In dual attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSE] :POWER [:RF] :RANGE:OPTimize:ATTenuation OFF ELECTrical COMBined [:SENSE] :POWER [:RF] :RANGE:OPTimize:ATTenuation?
Notes:	The SCPI parameter ELECTrical sets this function to On in single attenuator models. The SCPI parameter COMBined is mapped to ELECTrical in single attenuator models; if you send COMBined, it sets the function to On and returns ELEC to a query.
Dependencies:	This key only appears in Dual Attenuator models with an Electronic Attenuator installed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage). When Enable Elec Atten is off or grayed out, the Pre-Adjust for Min Clip key is grayed out.
Preset:	OFF for Swept SA measurement; ON for all other measurements that support Pre-Adjust for Min Clip
State Saved:	Saved in instrument state
Range:	Dual attenuator models: Off Elec Atten Only Mech + Elec Atten Single attenuator models: Off On

AMPTD Y Scale

Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3008

Remote Command:	<code>[:SENSe] :POWer [:RF] :RANGe:AUTO ON OFF 1 0</code> <code>[:SENSe] :POWer [:RF] :RANGe:AUTO?</code>
Notes:	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) The query :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not "Off"
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Off

Turns **Pre-Adjust for Min Clip** off. This is the default setting.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

Key Path:	AMPTD Y Scale, Attenuation, Pre-Adjust for Min Clip
Example:	<code>:POW:RANGe:OPT:ATT OFF</code>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3010

Elec Atten Only

Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

Key Path:	AMPTD Y Scale, Attenuation, Pre-Adjust for Min Clip
Example:	<code>:POW:RANGe:OPT:ATT ELEC</code>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3011

Mech + Elec Atten

In dual attenuator models, this selects both attenuators participate in the autoranging.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer

measurement, Swept SA, does not support this functionality.

Key Path:	AMPTD Y Scale, Attenuation, Pre-Adjust for Min Clip
Example:	:POW:RANGe:OPT:ATT COMB
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3012

(Mech) Atten Step

This controls the step size used when making adjustments to the input attenuation.

This key is labeled **Mech Atten Step** in dual attenuator models and **Atten Step** in single attenuator models. In the dual attenuator configuration, this key only affects the step size of the mechanical attenuator.

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSe] :POWER [:RF] :ATTenuation:STEP [:INCRement] 10 dB 2 dB [:SENSe] :POWER [:RF] :ATTenuation:STEP [:INCRement] ?
Example:	POW:ATT:STEP 2
Notes:	Note this feature works like a 1-N choice from the front panel, but it takes a specific value (in dB) when used remotely. The only valid values are 2 and 10.
Dependencies:	Blanked in CXA and EXA if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI will yield an error.
Couplings:	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset:	PXA and MXA: 2 dB EXA and CXA: 10 dB (2 dB with option FSA) EXT: 2 dB
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3013

Max Mixer Level

Controls the limitation on the Ref Level for a given attenuation setting, and therefore also interacts with

AMPTD Y Scale

the Auto rules for selecting the attenuation as a coupling from the reference level.

Key Path:	AMPTD Y Scale, Attenuation
Remote Command:	[:SENSe] :POWer [:RF] :MIXer :RANGe [:UPPer] <real> [:SENSe] :POWer [:RF] :MIXer :RANGe [:UPPer] ?
Example:	POW:MIX:RANG -15 dBm
Preset:	-10 dBm
State Saved:	Saved in instrument state
Min:	-50 dBm
Max:	-10 dBm
Default Unit:	Depends on the current selected Y axis unit, see Swept SA discussion of Y Axis Unit
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3014

Range

This key is only available when I/Q is the selected input. It replaces the Attenuation key in that case.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a couple of millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50W)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Key Path:	AMPTD Y Scale
Notes:	Visible only when the selected input is I/Q.
State Saved:	No

Readback Text:	When Range is Auto, "[Auto]" When Range is Man and I & Q are the same, "[<range value>]" When Range is Man and I & Q are different: "[I: <I range value> Q: <Q range value>]" See I Range and Q Range for the <range value> enumeration definition.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29880

Range Auto/Man

The Auto setting for Range causes the range to be set based on the Y Scale settings. When Range is "Auto", the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support Range Auto/Man. If Auto is not supported in the current measurement, this key is grayed out and shows "Man" and MAN is returned to a SCPI query, but this does NOT change the Auto/Man setting for Range. When you go to a measurement that supports Auto, it goes back to Auto if it was previously in Auto mode.

Key Path:	AMPTD Y Scale, Range
Scope:	Meas Global
Remote Command:	[:SENSe] :VOLTage :IQ :RANGe :AUTO OFF ON 0 1 [:SENSe] :VOLTage :IQ :RANGe :AUTO?
Example:	Put the I Range and Q Range in manual. VOLT:IQ:RANG:AUTO OFF
Dependencies:	If Auto is not supported, sending the SCPI command will generate an error.
Couplings:	When in Auto, both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: YMax = max(abs(top), abs(bottom)). The I Range and Q Range are then set to YMax.
Preset:	ON
State Saved:	Saved in instrument state
Range:	Auto Man
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29881

AMPTD Y Scale

Remote Command:	[:SENSE] :POWER:IQ:RANGE:AUTO OFF ON 0 1 [:SENSE] :POWER:IQ:RANGE:AUTO?
Example:	Put the I Range and Q Range in manual. POW:IQ:RANG:AUTO OFF
Notes:	The POW:IQ:RANG:AUTO is an alternate form of the VOLT:IQ:RANG:AUTO command. This is to maintain consistency with I Range and Q Range, which support both the POWER and VOLTage forms of the command.
Preset:	ON
Range:	Auto Man
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

I Range

This is the internal gain range for the I channel when Input Path is I Only or I and I/Q, and it is used for both the I and Q channels when the Input Path is I+jQ. See [“I/Q Gain Ranges” on page 747](#).

Key Path:	AMPTD Y Scale, Range
Remote Command:	[:SENSE] :VOLTage:IQ[:I]:RANGE[:UPPER] <voltage> [:SENSE] :VOLTage:IQ[:I]:RANGE[:UPPER] ?
Example:	Set the I Range to 0.5 V Peak VOLT:IQ:RANG 0.5 V
Notes:	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V.
Couplings:	When Q Same as I is On, the I Range value will be copied to the Q Range. Changing the value will also set Range = Man.
Preset:	1 V Peak
State Saved:	Saved in instrument state
Range:	1 V Peak 0.5 V Peak 0.25 V Peak 0.125 V Peak
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29883

Remote Command:	[:SENSE] :POWER:IQ[:I]:RANGE[:UPPER] <ampl> [:SENSE] :POWER:IQ[:I]:RANGE[:UPPER] ?
------------------------	---

Example:	Set the I Range to 0.5 V Peak when Reference Z is 50Ω, and to 1.0 V Peak when Reference Z is 75Ω POW:IQ:RANG 4 dBm
Notes:	The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command. The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50Ω: 10, 4, -2, -8 75Ω: 8.2, 2.2, -3.8, -9.8 600Ω: -0.8, -6.8, -12.8, -18.9
Preset:	10.0 dBm
Range:	-20 dBm to 10 dBm
Min:	-20 dBm
Max:	10 dBm
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Q Range

Accesses the Q Range menu.

Key Path:	AMPTD Y Scale, Range
Readback Text:	Q Same as I 1 V Peak 0.5 V Peak 0.25 V Peak 0.125 V Peak When Q Same as I is On, the readback is "Q Same as I", otherwise it is the Q Range value.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29884

Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel range to be mirrored from the I channel. That way you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is Off, the I and Q channel setups will be identical.

Key Path:	AMPTD Y Scale, Range, Q Range
Remote Command:	[:SENSE] :VOLTage POWer: IQ: MIRROred OFF ON 0 1 [:SENSE] :VOLTage POWer: IQ: MIRROred?

AMPTD Y Scale

Example:	Turn off the mirroring of I Range to Q Range. VOLT:IQ:MIRR OFF POW:IQ:MIRR OFF
Couplings:	When On, the I Range value is mirrored (copied) to the Q Range.
Preset:	On
State Saved:	Saved in instrument state.
Range:	On Off
Readback Text:	"Q Same as I" when On, otherwise none.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29885

Q Range Value

This is the internal gain range for the Q channel. See [“I/Q Gain Ranges” on page 747](#). The Q Range only applies to Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings.

Key Path:	AMPTD Y Scale, Range
Remote Command:	[:SENSe] :VOLTage :IQ :Q :RANGe [:UPPer] <voltage> [:SENSe] :VOLTage :IQ :Q :RANGe [:UPPer] ?
Example:	Set the Q Range to 0.5 V Peak VOLT:IQ:Q:RANG 0.5 V
Notes:	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V. The Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings.
Couplings:	When Q Same as I is On, the I Range value will be copied to the Q Range and the range value keys are disabled. Changing the value will also set Range = Man.
Preset:	1 V Peak
State Saved:	Saved in instrument state
Range:	1 V Peak 0.5 V Peak 0.25 V Peak 0.125 V Peak
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29886

Remote Command:	[:SENSE] :POWER:IQ:Q:RANGE[:UPPER] <ampl> [:SENSE] :POWER:IQ:Q:RANGE[:UPPER] ?
Example:	Will set the Q Range to 0.5 V Peak when Reference Z is 50Ω, and to 1.0 V Peak when Reference Z is 75Ω POW:IQ:Q:RANG 4 dBm
Notes:	The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command. The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50Ω: 10, 4, -2, -8 75Ω: 8.2, 2.2, -3.8, -9.8 600Ω: -0.8, -6.8, -12.8, -18.9
Preset:	10.0 dBm
Range:	-20 dBm to 10 dBm
Min:	-20 dBm
Max:	10 dBm
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

I/Q Gain Ranges

See the following sections:

1 V Peak

[“0.5 V Peak” on page 748](#)

[“0.25 V Peak” on page 748](#)

[“0.125 V Peak” on page 748](#)

1 V Peak

Set the channel gain state to 1 Volt Peak.

Key Path:	AMPTD Y Scale, I Range Q Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29887

AMPTD Y Scale

0.5 V Peak

Set the channel gain state to 0.5 Volt Peak.

Key Path:	AMPTD Y Scale, I Range Q Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29888

0.25 V Peak

Set the channel gain state to 0.25 Volt Peak.

Key Path:	AMPTD Y Scale, I Range Q Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29889

0.125 V Peak

Set the channel gain state to 0.125 Volt Peak.

Key Path:	AMPTD Y Scale, I Range Q Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29890

Scale / Div

Sets the units per vertical graticule division on the display. This function is only available when Scale Type (Log) is selected and the vertical scale is power. When Scale Type (Lin) is selected, Scale/Div is grayed out.

Key Path:	AMPTD Y Scale
Remote Command:	<code>:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp1></code> <code>:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example:	DISP:WIND:TRAC:Y:PDIV 5 DB
Dependencies:	Scale/Div is grayed out in linear Y scale. Sending the equivalent SCPI command does change the Scale/Div, though it has no affect while in Lin.
Preset:	10.00 dB / Div
State Saved:	Saved in instrument state
Min:	0.10 dB
Max:	20 dB
Initial S/W Revision:	Prior to A.02.00

Help Map ID:

3015

Scale Type

Chooses a linear or logarithmic vertical scale for the display and for remote data readout.

When Scale Type (Log) is selected, the vertical graticule divisions are scaled in logarithmic units. The top line of the graticule is the Reference Level and uses the scaling per division Scale/Div to assign values to the other locations on the graticule.

When Scale Type (Lin) is selected, the vertical graticule divisions are linearly scaled with the reference level value at the top of the display and zero volts at the bottom. Each vertical division of the graticule represents one-tenth of the Reference Level.

NOTE The Y Axis Unit used for each type of display is set by pressing Y Axis Unit. The analyzer remembers separate Y Axis Unit settings for both Log and Lin.

Key Path:	AMPTD Y Scale
Remote Command:	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing LINear LOGarithmic :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:SPACing?
Example:	DISP:WIND:TRAC:Y:SPAC LOG DISP:WIND:TRAC:Y:SPAC?
Dependencies:	If Normalize is on, Scale Type forced to Log and is grayed out.
Couplings:	Changing the Scale Type always sets the Y Axis unit to the last unit specified for the current amplitude scale. In other words, we restore the Y Axis unit setting appropriate per log/lin.
Preset:	LOG
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3016

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when Presel Center is pressed, the analyzer will turn on the selected marker, perform a peak search, and then perform centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the analyzer, the analyzer performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between Start Freq and Stop Freq, the analyzer will first perform a peak search, and then perform centering on the marker's center frequency.

AMPTD Y Scale

The value displayed on the **Presel Adjust** key will change to reflect the new preselector tuning (see **Presel Adjust**).

A number of considerations should be observed to ensure proper operation. See [“Proper Preselector Operation”](#) on page 750.

Key Path:	AMPTD Y Scale
Remote Command:	[:SENSE] :POWER [:RF] :PCENTER
Example:	POW:PCEN
Notes:	Note that the rules outlined above under the key description apply for the remote command as well as the key. The result of the command is dependent on marker position, and so forth. Any message shown by the key press is also shown in response to the remote command.
Dependencies:	<ul style="list-style-type: none"> • Grayed out if the microwave preselector is off.) • If the selected marker’s frequency is below Band 1, advisory message 0.5001 is generated and no action is taken. • Grayed out if entirely in Band 0. • Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0. • Grayed out in the Spectrogram View.
Couplings:	The active marker position determines where the centering will be attempted. If the analyzer is in a measurement such as averaging when centering is initiated, the act of centering the preselector will restart averaging but the first average trace will not be taken until the centering is completed.
Status Bits/OPC dependencies:	<p>When centering the preselector, *OPC will not return true until the process is complete and a subsequent measurement has completed, nor will results be returned to a READ or MEASURE command.</p> <p>The Measuring bit should remain set while this command is operating and should not go false until the subsequent sweep/measurement has completed.</p>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3017

Proper Preselector Operation

A number of considerations should be observed to ensure proper operation:

1. If the selected marker is off, the analyzer will turn on a marker, perform a peak search, and adjust the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on screen in a preselected range for the peak search to find.
2. If the selected marker is already on, the analyzer will attempt the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, therefore if the marker is on a signal below 3.6 GHz, no centering will be attempted and an advisory message generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering will be attempted in that range and a message will be generated.

Preselector Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when [“Presel Center” on page 749](#) is available.

For general purpose signal analysis, using Presel Center is recommended. Centering the filter minimizes the impact of long-term preselector drift. Presel Adjust can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

Key Path:	AMPTD Y Scale
Scope:	Meas Global
Remote Command:	[:SENSE] :POWER [:RF] :PADJust <freq> [:SENSe] :POWER [:RF] :PADJust?
Example:	POW:PADJ 100KHz POW:PADJ?
Notes:	The value on the key reads out to 0.1 MHz resolution.
Dependencies:	<ul style="list-style-type: none"> • Grayed out if microwave preselector is off.) • Grayed out if entirely in Band 0. • Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0. • Grayed out in the Spectrogram View.
Preset:	0 MHz

AMPTD Y Scale

State Saved:	The Presel Adjust value set by Presel Center , or by manually adjusting Presel Adjust , is not saved in instrument state, and does not survive a Preset or power cycle.
Min:	-500 MHz
Max:	500 MHz
Default Unit:	Hz
Backwards Compatibility SCPI:	[:SENSE] :POWER [:RF] :MW :PADJust [:SENSE] :POWER [:RF] :MMW :PADJust PSA had multiple preselectors, but the X-Series has only one. These commands simply alias to [:SENSE]:POWER[:RF]:PADJust
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3020

Remote Command:	[:SENSE] :POWER [:RF] :PADJust :PRESelector MWAVE MMWave EXTernal [:SENSE] :POWER [:RF] :PADJust :PRESelector?
Notes:	PSA had multiple preselectors, and you could select which preselector to adjust. Since the X-Series has only one mm/uW preselector, the preselector selection softkey is no longer available. However, to provide backward compatibility, we accept the legacy remote commands. The command form has no effect, the query always returns MWAVE
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Y Axis Unit

Displays the menu keys that enable you to change the vertical (Y) axis amplitude unit. The analyzer retains the entered Y Axis Unit separately for both Log and Lin amplitude scale types. For example, if Scale Type has been set to Log, and you set Y Axis Unit to dBm, pressing Scale Type (Log) sets the Y Axis Unit to dBm. If Scale Type has been set to Lin and you set Y Axis Unit to V, pressing Scale Type (Lin) sets the Y Axis Unit to V. Pressing Scale Type (Log) again sets the Y axis unit back to dBm.

NOTE

The units of current (A, dBmA, dBuA) are calculated based on 50 ohms input impedance.

All four of the EMI units (dBuA/m, dBuV/m, dBG, dBpT) are treated by the instrument exactly as though they were dBuV. The user must load an appropriate correction factor using Amplitude Corrections for accurate and meaningful results.

If a SCPI command is sent to the analyzer that uses one of the EMI units as a terminator, the analyzer treats it as though DBUV had been sent as the terminator.

Key Path:	AMPTD Y Scale
Mode:	SA
Scope:	Meas Global
Remote Command:	:UNIT:POWer DBM DBMV DBMA V W A DBUV DBUA DBPW DBUVM DBUAM DBPT DBG :UNIT:POWer?
Example:	UNIT:POW dBmV UNIT:POW?
Notes:	The Y axis unit has either logarithmic or linear characteristics. The set of units that is logarithmic consists of dBm, dBmV, dBmA, dB μ V, dB μ A, dB μ V/m, dB μ A/m, dBpT, and dBG. The set of units that are linear consists of V, W, and A. The chosen unit will determine how the reference level and all the amplitude-related outputs like trace data, marker data, etc. read out.
Notes:	The settings of Y Axis Unit and Scale Type, affect how the data is read over the remote interface. When using the remote interface no unit is returned, so you must know what the Y axis unit is to interpret the results: Example 1, set the following: Scale Type (Log) Y Axis Unit, dBm Scale/Div, 1 dB Ref Level, 10 dBm This sets the top line to 10 dBm with each vertical division representing 1 dB. Thus, if a point on trace 1 is on the fifth graticule line from the top, it represents 5 dBm and will read out remotely as 5. Example 2, set the following: Scale Type (Lin) Y Axis Unit, Volts Ref Level, 100 mV (10 mV/div) This sets the top line to 100 mV and the bottom line to 0 V, so each vertical division represents 10 mV. Thus, if a point on trace 1 is on the fifth graticule line from the top, it represents 50 mV and will read out remotely as 50.

AMPTD Y Scale

Dependencies:	<p>If an amplitude correction with an Antenna Unit other than None is applied and enabled, then that antenna unit is forced and the key with that unit is the only Y Axis Unit available. All other Y Axis Unit keys are grayed out.</p> <p>If an amplitude correction with an Antenna Unit other than None is applied and enabled, and you then turn off that correction or set Apply Corrections to No, the Y Axis Unit that existed before the Antenna Unit was applied is restored.</p>
Couplings:	The analyzer retains the entered Y Axis Unit separately for both Log and Lin amplitude scale types
Preset:	dBm for log scale, V for linear. The true 'preset' value is dBm, since at preset the Y Scale type is set to logarithmic.
State Saved:	Saved in instrument state
Readback line:	1-of-N selection
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00, A.04.00, A.11.00
Help Map ID:	3021

dBm

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBm.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW DBM
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dBm
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3022

dBmV

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBmV.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW DBMV
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dBmV
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00

Help Map ID:	3023
--------------	------

dBmA

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBmA.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW DBMA
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dBmA
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3024

W

Sets the amplitude unit for the selected amplitude scale (log/lin) to watt.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW W
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	W
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3025

V

Sets the amplitude unit for the selected amplitude scale (log/lin) to volt.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW V
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	V
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3026

AMPTD Y Scale

A

Sets the amplitude unit for the selected amplitude scale (log/lin) to Ampere.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW A
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	A
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3027

dBmV

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB μ V.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW DBUV
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dB μ V
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3028

dBmA

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB μ A.

NOTE

The unit dBuA can also appear as an Antenna Unit. This will be used by customers using current probes, because current probes are often supplied with conversion tables that provide the transducer factors. When dBuA is used as an Antenna Unit the normal conversion from power to amps for dBuA (based on the analyzer input impedance) is not done, but instead the conversion is based solely on the Correction that contains the transducer factors. This is what distinguishes dBuA as a normal unit from dBuA as an antenna unit. When querying the Y-Axis unit, you can query the Antenna Unit to distinguish between regular dBuA and the dBuA antenna unit. If :CORR:CSET:ANT? returns NOC (for No Conversion), you are using a normal Y Axis dBuA. If it returns UA you are using an Antenna Unit dBuA.

Key Path:	AMPTD Y Scale, Y Axis Unit
-----------	-----------------------------------

Example:	UNIT:POW DBUA
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dB μ A
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3029

dBpW

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBpW.

Key Path:	AMPTD Y Scale, Y Axis Unit
Example:	UNIT:POW DBPW
Dependencies:	Grayed out if an Amplitude Correction with an Antenna Unit is ON.
Readback:	dB μ A
Initial S/W Revision:	A.11.00
Help Map ID:	4044

Antenna Unit

When a Correction is turned on that uses an Antenna Unit, the Y Axis Unit changes to that Antenna Unit. All of the keys in the Y-Axis Unit menu are then greyed out, except the Antenna Unit key. The unit being used is shown on this key and is shown as selected in the submenu.

Key Path:	AMPTD Y Scale, Y Axis Unit
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback line:	Currently selected unit
Initial S/W Revision:	A.11.00
Help Map ID:	4004

dBmV/m

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB μ V/m. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Example:	UNIT:POW DBUVM
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback:	dB μ V/m

AMPTD Y Scale

Initial S/W Revision:	A.02.00
Help Map ID:	3030

dBmA/m

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB μ A/m. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Example:	UNIT:POW DBUAM
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback:	dB μ A/m
Initial S/W Revision:	A.02.00
Help Map ID:	3031

dBmA

Sets the amplitude unit for the selected amplitude scale (log/lin) to dB μ A. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Example:	UNIT:POW DBUAM
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback:	dB μ A
Initial S/W Revision:	A.11.00
Help Map ID:	4045

dBpT

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBpT. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Example:	UNIT:POW DBPT
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback:	dBpT
Initial S/W Revision:	A.02.00

Help Map ID:	3032
--------------	------

dBG

Sets the amplitude unit for the selected amplitude scale (log/lin) to dBG. This is an antenna unit, and this key is grayed out unless a Correction with this Antenna Unit selected is ON. If this is the case, all of the other Antenna Units are grayed out.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Example:	UNIT:POW DBG
Dependencies:	Grayed out if no Amplitude Correction with an Antenna Unit is on.
Readback:	dBG
Initial S/W Revision:	A.02.00
Help Map ID:	3033

None

This is selected if no Antenna Unit is currently on, however you cannot actually set this value, since it is always grayed out. The key is included simply to provide an indication on the Readback line of the Antenna Unit key when there is no Antenna Unit selected.

Key Path:	AMPTD Y Scale, Y Axis Unit, Antenna Unit
Readback:	“None”
Initial S/W Revision:	A.11.00
Help Map ID:	4046

Reference Level Offset

Adds an offset value to the displayed reference level. The reference level is the absolute amplitude represented by the top graticule line on the display.

See [“More Information” on page 760](#)

Key Path:	AMPTD Y Scale
Mode:	SA
Scope:	Meas Global
Remote Command:	:DISPlay:WINDow[1]:TRACe:Y[:SCALE]:RLEVel:OFFSet <rel_ampl> :DISPlay:WINDow[1]:TRACe:Y[:SCALE]:RLEVel:OFFSet?
Example:	DISP:WIND:TRAC:Y:RLEV:OFFS 12.7 Sets the Ref Level Offset to 12.7 dB. The only valid suffix is dB. If no suffix is sent, dB will be assumed.

AMPTD Y Scale

Preset:	0 dBm
State Saved:	Saved in instrument state
Min:	The range for Ref Lvl Offset is variable. It is limited to values that keep the reference level within the range of –327.6 dB to 327.6 dB.
Max:	327.6 dB
Backwards Compatibility Notes:	<ol style="list-style-type: none">1. In pre-X-Series instruments, Ref Level Offset could not be adjusted by the knob or step keys. That is no longer the case.2. In ESA and PSA, Ref Level Offset was applied to the data as it was acquired; thus if the Offset changed the new offset was not applied until new trace data was taken. In X-Series, the offset is applied as the data is displayed/queried, so if you change the offset, it will change the data immediately.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3034

More Information

Offsets are used when gain or loss occurs between a device under test and the analyzer input. Thus, the signal level measured by the analyzer may be thought of as the level at the input of an external amplitude conversion device. Entering an offset does not affect the trace position or attenuation value, just the value of the top line of the display and the values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, and so forth, are all affected by Ref Level Offset.

NOTE Changing the offset causes the analyzer to immediately stop the current sweep and prepare to begin a new sweep, but the data will not change until the trace data updates, because the offset is applied to the data as it is taken. If a trace is exported with a nonzero Ref Level Offset, the exported data will contain the trace data with the offset applied.

The maximum reference level available is dependent on the reference level offset. That is, Ref Level - Ref Level Offset must be in the range –170 to +30 dBm. For example, the reference level value range can be initially set to values from –170 dBm to 30 dBm with no reference level offset. If the reference level is first set to –20 dBm, then the reference level offset can be set to values of –150 to +50 dB.

If the reference level offset is first set to –30 dB, then the reference level can be set to values of –200 dBm to 0 dBm. In this case, the reference level is “clamped” at 0 dBm because the maximum limit of +30 dBm is reached with a reference level setting of 0 dBm with an offset of –30 dB. If instead, the reference level offset is first set to 30 dB, then the reference level can be set to values of –140 to +60 dBm.

μW Path Control

The **μW Path Control** functions include the **μW Preselector Bypass** (Option MPB) and **Low Noise**

Path (Option LNP) controls in the High Band path circuits.

When the μ W Preselector is bypassed, the user has better flatness, but will be subject to spurs from out of band interfering signals. When the Low Noise Path is enabled, the analyzer automatically switches around certain circuitry in the high frequency bands which can contribute to noise, when it is appropriate based on other analyzer settings.

For most applications, the preset state is Standard Path, which gives the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear out in the hardware switches. For applications that utilize the wideband IF paths, the preset state is the μ W Preselector Bypass path, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μ W Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

Users may choose Low Noise Path Enable. It gives a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does the Low Noise Path, however its compression threshold and third-order intercept are much poorer than that of the non-preamp Low Noise Path. There are some applications, typically for signals around 30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range.

Key Path:	AMPTD Y Scale
Mode:	SA, BASIC, PNOISE, VSA , LTE, LTETDD
Scope:	Meas Global
Remote Command:	[:SENSE] :POWER [:RF] :MW:PATH STD LNPath MPBypass FULL [:SENSE] :POWER [:RF] :MW:PATH?
Example:	:POW:MW:PATH LNP Enables the Low Noise path
Notes:	If a Presel Center is performed, the analyzer will momentarily switch to the Standard Path, regardless of the setting of μW Path Control The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is Low Noise Path Enable . In the case where the DC Block is switched in the analyzer is now AC coupled. However, if the user has selected DC coupling, the UI will still behave as though it were DC coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the analyzer could switch out the low noise path at any time and hence go back to being DC coupled. Alignment switching ignores the settings in this menu, and restores them when finished.
Dependencies:	Unavailable in BBIQ and External Mixing

AMPTD Y Scale

Preset:	All modes other than IQ Analyzer mode and VXA: STD IQ Analyzer, VXA and WLAN mode: MPB option present and licensed: MPB MPB option not present and licensed: STD
State Saved:	Save in instrument state
Readback:	Value selected in the submenu
Initial S/W Revision:	A.04.00
Modified at S/W Revision:	A.10.00
Help Map ID:	4027

Standard Path

This path gives the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession.

In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

Key Path:	AMPTD Y Scale, μW Path Control
Example:	:POW:MW:PATH STD
Readback Text:	Standard Path
Initial S/W Revision:	A.04.00
Help Map ID:	4028

Low Noise Path Enable

You may choose Low Noise Path Enable, which gives a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever all of the following are true:

- The analyzer is not in the Low Band, meaning:
 - the start frequency is above 3.5 GHz and
 - the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or (if installed) is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

See “More Information” on page 763

Key Path:	AMPTD Y Scale, μW Path Control
Measurement:	Swept SA
Example:	:POW:MW:PATH LNP
Notes:	<p>For measurements that use IQ acquisition, the low noise path is used when the Center Frequency is in High Band (> 3.6 GHz) and no preamp is in use.</p> <p>In other words, the rules above are modified to use only the center frequency to qualify which path to switch in.</p> <p>This is not the case for FFT's in the Swept SA measurement; they use the same rules as swept measurements.</p>
Dependencies:	<p>Key is blanked if current mode does not support it.</p> <p>Key is grayed out if mode supports it but current measurement does not support it.</p> <p>Unless Option LNP is present and licensed, key is blank and if SCPI command sent, error -241, "Hardware missing; Option not installed" is generated.</p>
Readback Text:	Low Noise Path Enable
Initial S/W Revision:	A.04.00
Help Map ID:	4029

More Information

The user should understand that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


The user should also understand that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path** is enabled, it is possible to cause frequent cycling of this switch by frequently changing analyzer settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the analyzer performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path. There are some applications, typically for signals around 30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an analyzer at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both analyzer

AMPTD Y Scale

noise and analyzer TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

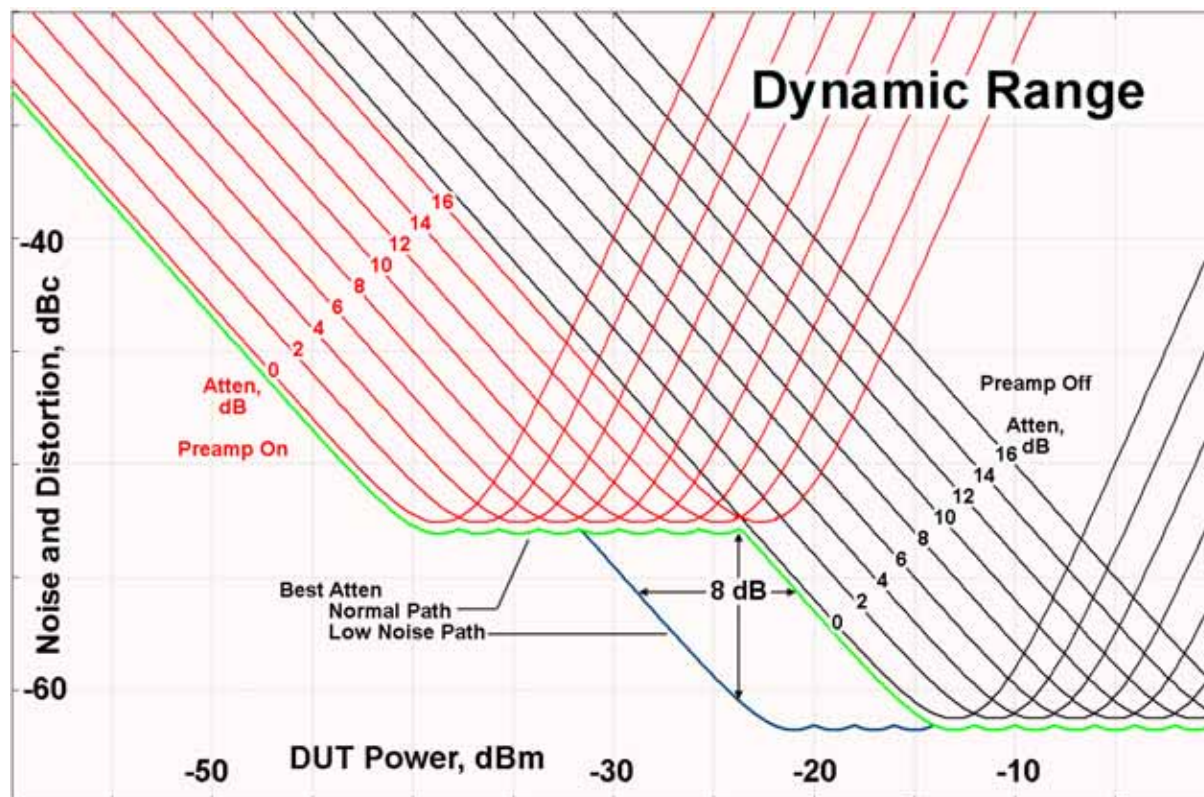

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the analyzer input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

μ W Preselector Bypass

This key toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the analyzer.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and

less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Key Path:	AMPTD Y Scale, μW Path Control
Example:	:POW:MW:PATH MPB
Dependencies:	Key is blanked if current mode does not support it. Key is grayed out if mode supports it but current measurement does not support it. Key is blank unless Option MPB is present and licensed. If SCPI command sent when MPB not present, error -241, "Hardware missing; Option not installed" is generated.
Readback Text:	μ W Preselector Bypass
Initial S/W Revision:	A.04.00
Help Map ID:	4030

Remote Command:	[:SENSE] :POWER [:RF] :MW:PRESelector [:STATE] ON OFF 0 1 [:SENSE] :POWER [:RF] :MW:PRESelector [:STATE] ?
Example:	:POW:MW:PRES OFF Bypasses the microwave preselector
Notes:	The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset:	ON
Help Map ID:	0

Internal Preamp

Accesses a menu of keys that control the internal preamps. Turning on the preamp gives a better noise figure, but a poorer TOI to noise floor dynamic range. You can optimize this setting for your particular measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp the instrument will also account for that. The displayed result will always reflect the correct gain.

Key Path:	AMPTD Y Scale
Scope:	Meas Global
Remote Command:	[:SENSE] :POWER [:RF] :GAIN [:STATE] OFF ON 0 1 [:SENSE] :POWER [:RF] :GAIN [:STATE] ?

AMPTD Y Scale

Dependencies:	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown. The preamp is not available when the electronic/soft attenuator is enabled. Preamp controls and settings are not available on the E6607C. If any preamp commands are sent to the E6607C the following error will be generated: -241;Hardware missing; not available for this model number
Preset:	OFF
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3036

Key Path:	AMPTD Y Scale, Internal Preamp
Scope:	Meas Global
Remote Command:	[:SENSe] :POWer [:RF] :GAIN:BAND LOW FULL [:SENSe] :POWer [:RF] :GAIN:BAND?
Dependencies:	Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown. If a POW:GAIN:BAND FULL command is sent when a low band preamp is available, the preamp band parameter is to LOW instead of FULL, and an "Option not installed" message is generated.
Preset:	LOW
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Off

Turns the internal preamp off

Key Path:	AMPTD Y Scale, Internal Preamp
Example:	:POW:GAIN OFF
Readback:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3038

Low Band

Sets the internal preamp to use only the low band.

The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the

Low Band key label.

Key Path:	AMPTD Y Scale, Internal Preamp
Example:	:POW:GAIN ON :POW:GAIN:BAND LOW
Readback:	Low Band
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3039

Full Range

Sets the internal preamp to use its full range. The low band (0–3.6 GHz or 0–3GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp.

The frequency range of the installed (optional) preamp is displayed in square brackets on the **Full Range** key label. If the high band option is not installed the Full Range key does not appear.

Key Path:	AMPTD Y Scale, Internal Preamp
Example:	:POW:GAIN ON :POW:GAIN:BAND FULL
Readback:	Full Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3040

AMPTD Y Scale

Auto Couple

The Auto Couple feature provides a quick and convenient way to automatically couple multiple instrument settings. This helps ensure accurate measurements and optimum dynamic range. When the Auto Couple feature is activated, either from the front panel or remotely, all parameters of the current measurement that have an Auto/Manual mode are set to Auto mode and all measurement settings dependent on (or coupled to) the Auto/Man parameters are automatically adjusted for optimal performance.

However, the Auto Couple key actions are confined to the current measurement only. It does not affect other measurements in the mode, and it does not affect markers, marker functions, or trace or display attributes.

See [“More Information” on page 769](#)

Key Path:	Front-panel key
Remote Command:	:COUPle ALL NONE
Example:	:COUP ALL
Notes:	:COUPle ALL puts all Auto/Man parameters in Auto mode (equivalent to pressing the Auto Couple key). :COUPLE NONE puts all Auto/Man parameters in manual mode. It decouples all the coupled instrument parameters and is not recommended for making measurements.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3041

More Information

There are two types of functions that have Auto/Manual modes.

Auto/Man Active Function keys

An Auto/Man toggle key controls the binary state associated with an instrument parameter by toggling between **Auto** (where the parameter is automatically coupled to the other parameters it is dependent upon) and **Man** (where the parameter is controlled independent of the other parameters), as well as making the parameter the active function. The current mode is indicated on the softkey with either **Auto** or **Man** underlined as illustrated below.

Sweep Time
66.24 ms
<u>Auto</u> Man


vsd07

Auto/Man 1-of-N keys

An Auto/Man 1-of-N key allows you to manually pick from a list of parameter values, or place the function in Auto, in which case the value is automatically selected (and indicated) as shown below. If in

Auto Couple

Auto, Auto is underlined on the calling key. If in manual operation, manual is indicated on the calling key. But the calling key does not actually toggle the function, it simply opens the menu.

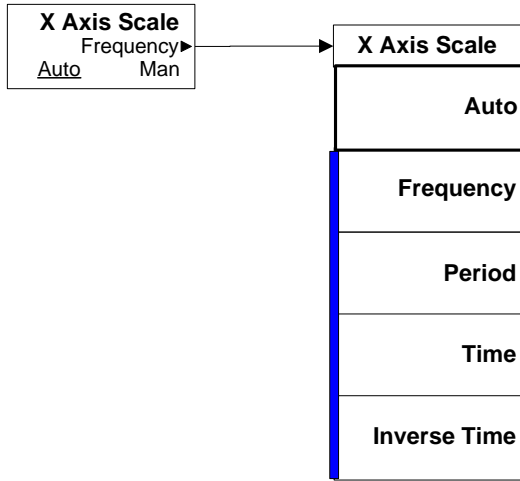

vsd08

BW

The BW key opens the bandwidth menu, which contains keys to control the Resolution Bandwidth and Video Bandwidth functions of the test set.

The Res BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

NOTE The AVERAGE functions are found in the Trace menu and the Meas Setup menu. In the Trace menu, you may turn Trace Averaging on or off for the desired traces (rather than globally as in the past); and in the Meas Setup menu you may configure Averaging, by setting the Average Number and the Average Type.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	3042

Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the test set. Normally, **Res BW** (Auto) selects automatic coupling of the Res BW to **Span** using the ratio set by the Span:3dB RBW key. To decouple the resolution bandwidth, press Res BW until Man is underlined, or simply enter a different value for **Res BW**.

See “[More Information](#)” on page 772

Key Path	BW
Remote Command	[:SENSE]:BANDwidth BWIDth[:RESolution] <freq> [:SENSE]:BANDwidth BWIDth[:RESolution]? [:SENSE]:BANDwidth BWIDth[:RESolution]:AUTO OFF ON 0 1 [:SENSE]:BANDwidth BWIDth[:RESolution]:AUTO?
Example	BAND 1 KHZ BAND? BWID:AUTO ON BWID:AUTO?
Notes	For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered.
Notes	The setting and querying of values depends on the current bandwidth type.

Dependencies	When in Zero Span with no EMI Standard selected, there is no Auto setting for Res BW. The Auto/Man line on the Res BW key disappears in this case, and if the SCPI command [:SENSe]:BWID[:RESolution]:AUTO ON is sent, it generates an error.
Couplings	Res BW is normally coupled to Span; if Res BW is set to Auto, as the Span decreases, so will the Res BW. Normally, in Zero Span, this coupling is turned off and Res BW has no Auto setting. When a CISPR or MIL EMI Standard is in use, the Res BW is coupled to Center Frequency and not to Span, and this is true even in Zero Span. Sweep time is coupled to RBW when in a non-zero span. If Sweep Time is set to Auto, then the sweep time is changed as the RBW changes, to maintain amplitude calibration. Video bandwidth (VBW) is normally coupled to RBW. If VBW is set to Auto, then the VBW is changed as the RBW changes, to maintain the ratio set by VBW:3dB RBW. See the ““ VBW:3dB RBW ” on page 774” key description.
Preset	3 MHz ON
State Saved	Saved in Instrument State
Min	1 Hz
Max	8 MHz is the max equivalent –3 dB RBW, which means that the named RBW (the one shown on the key) can actually exceed 8 MHz if using a filter other than –3 dB Gaussian
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Help Map ID	3043

More Information

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Res BW** key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

When **Res BW** is set to **Auto**, the bandwidth selected depends on the Filter Type (see “Filter Type” below).

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **Filter Type** or the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

The zero-span case deserves some mention, because RBW is coupled to Span when in a swept (non-zero) span and in zero span there is normally no meaningful RBW coupling in Zero Span. However, when a MIL or CISPR EMC Standard is selected, there IS a meaningful coupling for RBW in Zero Span – in fact, it is coupled to Center Frequency, in order to make measurements according to the EMI specifications.

The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this:

-3 dB (Normal) filter BW:Res BW 300 Hz
 -6 dB filter BW: Res BW (-6 dB) 422 Hz
 Noise filter BW: Res BW (Noise) 317 Hz
 Impulse filter BW: Res BW (Impulse) 444 Hz
 CISPR filter BW:Res BW (CISPR) 200 Hz
 MIL filter BW:Res BW (MIL) 1 kHz
 Flattop filter type:Res BW (Flattop) 300 Hz

Video BW

Lets you change the test set post-detection filter (VBW) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz.

Normally, Video BW (Auto) selects automatic coupling of the Video BW filter to the resolution bandwidth filter using the ratio set by the VBW:3dB RBW key. To decouple the video bandwidth, press Video BW until Man is underlined, or simply enter a new value.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Video BW** key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
Remote Command	[:SENSe] :BANDwidth BWIDth:VIDeo <freq> [:SENSe] :BANDwidth BWIDth:VIDeo? [:SENSe] :BANDwidth BWIDth:VIDeo:AUTO OFF ON 0 1 [:SENSe] :BANDwidth BWIDth:VIDeo:AUTO?
Example	BAND:VID 1 KHZ BAND:VID? BWID:VID:AUTO ON BWID:VID:AUTO?
Notes	For numeric entries, the test set chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open”.
Notes	The values shown in this table reflect the conditions after a Mode Preset.

Dependencies	<p>Sometimes the displayed Video BW is not actually used to process the trace data:</p> <ul style="list-style-type: none"> • When the Average Detector is selected and Sweep Type is set to Swept, the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector. • When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector <p>When this is the case, the VBW still acts to change the Sweep Time, if Sweep Time is in Auto, and still affects the data on other traces for which this is not the case.</p>
Preset	3 MHz ON
State Saved	Saved in Instrument State
Min	1 Hz
Max	50 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3044

VBW:3dB RBW

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used for setting VBW when VBW is in Auto.

VBW:3dB RBW (Auto) selects automatic coupling of the VBW:3 dB RBW ratio to **Detector**. See [“Coupling Auto Rules:” on page 775](#) for more information. To decouple the ratio, press VBW:3 dB RBW until Man is underlined, or simply enter a new value.

When the VBW:3dB RBW is manually selected, it may be returned to the coupled state by pressing the VBW:3 dB RBW key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
Remote Command	<pre>[:SENSE] :BANDwidth BWIDth:VIDeo:RATio <real> [:SENSE] :BANDwidth BWIDth:VIDeo:RATio? [:SENSE] :BANDwidth BWIDth:VIDeo:RATio:AUTO OFF ON 0 1 [:SENSE] :BANDwidth BWIDth:VIDeo:RATio:AUTO?</pre>

Example	BAND:VID:RAT 2 BAND:VID:RAT? BAND:VID:RAT:AUTO 0 BAND:VID:RAT:AUTO?
Notes	The values shown in this table reflect the conditions after a Mode Preset.
Couplings	See “Coupling Auto Rules:” on page 775
Preset	1 ON
State Saved	Saved in Instrument State
Min	0.00001
Max	3000000
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3045

Coupling Auto Rules:

The Auto Rules for the **VBW:3dB RBW** function are as follows:

First, we go through the following list and find the lowest numbered detector being used on any active traces (traces for which Update is On):

- Peak
- Normal
- Average
- Sample
- Negative Peak
- EMI Average
- Quasi Peak
- RMS Average

Use that detector to pick the ratio based on the following criteria:

1. If the detector is Peak and the EMC Standard is set to either CISPR or MIL, use 10.0 (we use wide VBWs to capture peak levels accurately).
2. Otherwise, if the detector is **Negative Peak**, use 1.0 (in the Negative Peak case, there are no known significant use models so we use a medium ratio).
3. Otherwise, if the detector is **Normal**, use 1.0.
4. Otherwise, if the detector is **Average**, and the span is nonzero, use 0.1. The use of a small ratio in

BW

Average detection is desirable because of its effect on the sweep time equations. The VBW filter is not actually in-circuit when the average detector is on. If the detector is Average, and the span is zero, use 10.0, which gives optimal behavior for Interval Markers in zero span.

5. Otherwise, if the detector is EMI Average, Quasi Peak or CISPR RMS, use 1.0. In fact this is a “don’t care” since no VBW is used for these detectors, as noted under “Dependencies” for the VBW key.
6. Otherwise, the detector is simply **Peak** or **Sample**. These two detectors can use the same rules. In these cases, if any active trace is in max hold or min hold, use 10.0, because Max and Min Hold operations are usually intended to capture peaks and pits without smoothing from the VBW filter; otherwise, use 1.0 as a compromise, because you have not set the test set in a way that implies that you are measuring noise, pulsed-RF or CW signals.

Note that because the above couplings depend on which traces are active, they are re-examined whenever any trace goes active or inactive, except when this leaves no traces active. Transitioning to the state where no traces are active should not affect the couplings; in that way, the annotation will always reflect the state of the last trace which was active.

Span:3dB RBW

Selects the ratio between span and resolution bandwidth.

Normally, Span:3dB RBW (Auto) selects a Span:3dB RBW ratio of 106:1. If you manually enter the ratio, Man becomes underlined, which enables you to manually select ratios more suitable for certain measurements.

When the Span:3dB RBW is manually selected, it may be returned to the coupled state by pressing the Span:3dB RBW key until **Auto** is underlined. This may also be done by pressing Auto Couple or by performing a **Preset**.

Key Path	BW
Remote Command	<pre>[:SENSe] :FREQuency:SPAN:BANDwidth[:RESolution]:RATio<integer> [:SENSe] :FREQuency:SPAN:BANDwidth[:RESolution]:RATio? [:SENSe] :FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF ON 0 1 [:SENSe] :FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO?</pre>
Example	<pre>FREQ:SPAN:BAND:RAT 200 sets a ratio of 200:1, and turns off the auto coupling. FREQ:SPAN:BAND:RAT:AUTO ON FREQ:SPAN:BAND:RAT?</pre>
Notes	The values shown in this table reflect the conditions after a Mode Preset.

Dependencies	Grayed out when the EMC Standard is set to CISPR or MIL, since RBW is coupled to Center Frequency rather than Span in this case. If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, the command is acted upon, but it doesn't affect the current measurement.
Preset	106 ON
State Saved	Saved in Instrument State
Min	2
Max	10000
Initial S/W Revision	Prior to A.02.00
Help Map ID	3046

RBW Control

Selects the type/shape for the resolution bandwidth filters. Historically, the Res BW filters in Agilent Test Sets were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its –3 dB points 10 MHz apart. In the X-Series you can, using the **Filter BW** key, specify bandwidths other than the –3 dB bandwidth (–6 dB, Noise, Impulse) for the width of the Gaussian filters. Furthermore, the **Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

Key Path	BW
Dependencies]The RBW Control key is grayed out if the EMC Standard is set to CISPR or MIL . In this case the Filter Type is always Gaussian; the Filter BW is chosen as appropriate for the filter and the standard.
Readback line	[<filter type>] or, if Filter Type is Gaussian, [Gaussian,<filter BW>]
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3047

Filter Type

Besides the familiar Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions. The **Filter Type** menu gives you control over these types.

See [“More Information” on page 778](#)

Key Path	BW, RBW Control
Remote Command	[:SENSE] :BANDwidth BWIDth:SHAPE GAUSSian FLATtop [:SENSE] :BANDwidth BWIDth:SHAPE?

Example	BAND:SHAP GAUS
Notes	GAUSSian= Gaussian FLATtop = Flattop
Dependencies	When EMC Standard is set to CISPR or MIL , the Filter Type is always Gaussian
Preset	Auto Couple chooses the preset value
State Saved	Saved in State
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3048

More Information

Gaussian filters

When the Gaussian filter type is chosen, a set of 160 RBW filters are available whose shape is approximately Gaussian. The actual bandwidths used to realize the X-Series’s Gaussian filters are chosen to come as close as possible to a 24 step per decade series, within the limitations of the digital IF.

For Gaussian filters, the annotation at the bottom of the screen shows the filter bandwidth type (unless it is Normal). This is shown parenthetically between the words “Res BW” and the value, for example

Res BW 10.0 Hz (Normal bandwidth)

Res BW (Impulse) 14.8 Hz (Impulse bandwidth)

Flattop filters

When the Flattop filter type is chosen, a new set of 134 RBW hardware settings are available. These settings realize filters that are approximately rectangular in shape. When this shape is chosen the filter bandwidth options are irrelevant and therefore unavailable.

The annotation at the bottom of the screen will show that the Flattop shape is being used, for example:

Res BW (Flattop) 10 Hz

Gaussian

Selects the Gaussian filter type. There are 160 of these RBWs. They are arranged in a 24-per-decade sequence from 1 Hz through 3 MHz, plus the 4, 5, 6 and 8 MHz settings.

Key Path	BW, RBW Control, Filter Type
Example	BAND:SHAP GAUS
Notes	Parameter is GAUSSian. See remote command in section “Filter Type” on page 777 .
Readback	Gaussian

Initial S/W Revision	Prior to A.02.00
Help Map ID	3049

Flattop

Selects the flat top filter type

Key Path	BW, RBW Control, Filter Type
Example	BAND:SHAP FLAT
Readback	Flattop
Initial S/W Revision	Prior to A.02.00
Help Map ID	3050

Filter BW

When using the Gaussian filters for certain types of applications it can be useful to be able to specify the filter width using points other than the -3 dB points. The Filter BW function allows you to pick the filter based on its -3 dB (Normal) bandwidth, its -6 dB bandwidth, its Noise bandwidth, or its Impulse bandwidth. Note that in all four cases the -3 dB bandwidth is the same. The filter does not change, but the way you specify it changes.

BW

See “More Information” on page 780

Key Path	BW, RBW Control
Remote Command	[:SENSe] :BANDwidth BWIDth :TYPE DB3 DB6 IMPulse NOISe [:SENSe] :BANDwidth BWIDth :TYPE?
Example	BAND:TYPE NOIS
Notes	DB3 = -3 dB (Normal) DB6 = -6 dB IMPulse = Impulse NOISe = Noise
Dependencies	Grayed out if the Flattop filter type is selected. When EMC Standard is set to CISPR or MIL , the Filter BW is chosen as appropriate for the filter and the standard.
Preset	Auto Couple chooses the preset value
State Saved	Saved in State
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3052

More Information

The test set provides four ways of specifying the bandwidth of a Gaussian filter:


The -3 dB bandwidth of the filter

The -6 dB bandwidth of the filter

The equivalent Noise bandwidth of the filter, which is defined as the bandwidth of a rectangular filter with the same peak gain which would pass the same power for noise signals.

The equivalent Impulse bandwidth of the filter, which is defined as the bandwidth of a rectangular filter with the same peak gain which would pass the same power for impulsive (narrow pulsed) signals.

The figure below shows the relationships of the various filter bandwidths for filters with the X-Series' shape factor (shape factor is defined as the ratio of the -60 dB bandwidth to the -3 dB bandwidth):

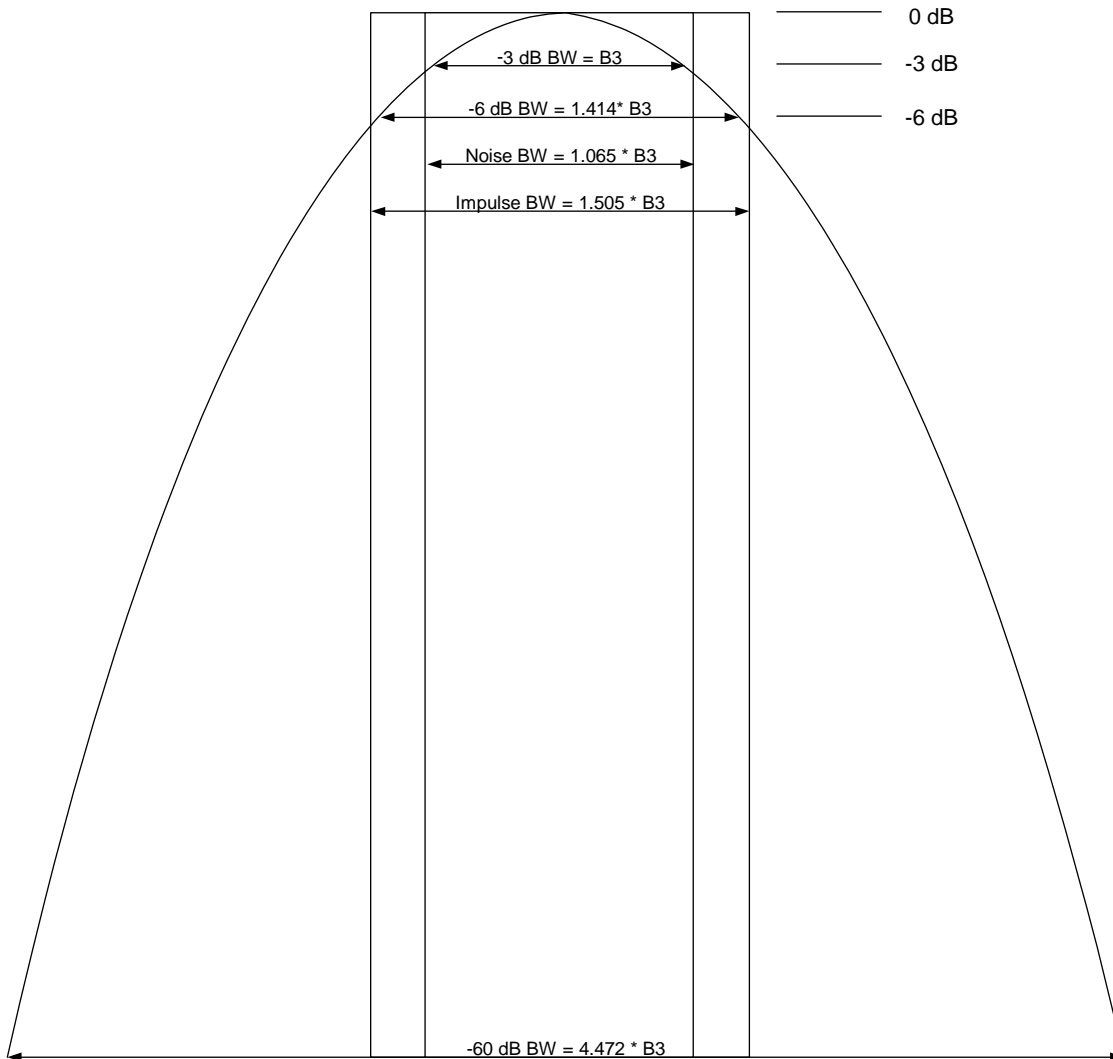

The Filter Type menu lets you choose the filter bandwidth (–3 dB, –6 dB, Noise or Impulse) that is used when specifying the width of the filter. Note that for a given Gaussian filter, changing the filter bandwidth specification does not affect the filter width at all but only the means of specifying it. For example, the filter whose –3 dB bandwidth is 1.0 kHz is the same as the filter whose –6 dB bandwidth is 1.41 kHz, whose Noise bandwidth is 1.06 kHz, and whose Impulse bandwidth is 1.48 kHz. As you cycle through these various filter bandwidths the filter does not change, but the way the filter is annotated and the value which appears in the active function area and on the key does.

–3 dB (Normal)

Selects the normal gaussian-shaped bandwidths that are defined by their –3 dB bandwidths.

Key Path	BW, RBW Control, Filter BW
Example	BAND:TYPE DB3
Readback	–3 dB
Initial S/W Revision	Prior to A.02.00

BW

Help Map ID	3053
-------------	------

-6 dB

Selects the filter bandwidths where the bandwidth is defined at the -6 dB points. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the -6 dB bandwidth instead of the -3 dB bandwidth.

Key Path	BW, RBW Control, Filter BW
Example	BAND:TYPE DB6
Readback	-6 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	3054

Noise

Selects the noise filter bandwidths. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the equivalent noise bandwidth, instead of the -3 dB bandwidth.

Key Path	BW, RBW Control, Filter BW
Example	BAND:TYPE NOIS
Readback	Noise
Initial S/W Revision	Prior to A.02.00
Help Map ID	3055

Impulse

Selects the impulse bandwidths. This uses the normal RBW filters, but the value displayed on the key, active function line and screen annotation changes to reflect the equivalent impulse bandwidth instead of the -3 dB bandwidth.

Key Path	BW, RBW Control, Filter BW
Example	BAND:TYPE IMP
Readback	Impulse
Initial S/W Revision	Prior to A.02.00
Help Map ID	3056

Cont (Continuous Measurement/Sweep)

Sets the test set for Continuous measurement operation. The single/continuous state is Meas Global so the setting will affect all measurements. If you are Paused, pressing **Cont** does a Resume.

Key Path:	Front-panel key
Remote Command:	:INITiate:CONTinuous OFF ON 0 1 :INITiate:CONTinuous?
Example:	:INIT:CONT 0 puts the test set in Single measurement operation. :INIT:CONT 1 puts the test set in Continuous measurement operation
Preset:	ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF)
State Saved:	Saved in instrument state
Backwards Compatibility Notes:	For Spectrum Analysis mode in ESA and PSA, there is no Cont hardkey, instead there is a Sweep Single/Cont key. In these analyzers, switching the Sweep Single/Cont key from Single to Cont restarts averages (displayed average count reset to 1), but does not restart Max Hold and Min Hold . The X-Series has Single and Cont hardkeys in place of the Sweep Single Cont softkey. In the X-Series, if in single measurement, the Cont hardkey (and INIT:CONT ON) switches to continuous measurement, but never restarts a measurement and never resets a sweep.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3309

With **Avg/Hold Num** (in the **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the test set continues to take new sweeps after the current sweep has completed and the trigger condition is again met. However, with **Avg/Hold Num** set to On with a value >1, multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count k equals the number N set for Avg/Hold Num is reached, but the number k stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the test set is in Single measurement, pressing the **Cont** key does not change k and does not cause the sweep to be reset; the only action is to put the test set into Continuous measurement operation.

If it is already in continuous sweep:

the INIT:CONT 1 command has no effect

the INIT:CONT 0 command will place the test set in Single Sweep but will have no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go to the idle

Cont (Continuous Measurement/Sweep)

state.

FREQ/Channel

Accesses a menu of keys that allow you to control the Frequency parameters of the test set.

Key Path	Front-panel key
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5524

ARFCN

Sets the test set to a frequency that corresponds to the ARFCN (Absolute RF Channel Number). Used to enter the channel to be measured for the selected band. If the Center Freq value entered does not exactly correlate with an ARFCN, the key label changes to display the closest ARFCN to the selected frequency, along with a > or < symbol indicating whether the frequency is above or below that ARFCN.

Remote Command	[:SENSe] :CHANnel:ARFCn RFChannel <integer> [:SENSe] :CHANnel:ARFCn RFChannel?
Example	CHAN:ARFC 3 CHAN:ARFC?
Dependencies/Couplings	1. When I/Q Input is selected, this key is not available (blank). Coupled with “ Center Frequency ” on page 786. Setting ARFCN sets Center Freq to the value corresponding to that ARFCN. 1. BMT Freq choice changes this parameter.
Key Path	FREQ Channel
Mode	GSM
Scope	Meas Global
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	1
State Saved	Saved in instrument state.

FREQ/Channel

Range	Different for each BAND as follows: E-GSM: 0 to 124, and 975 to 1023 P-GSM: 1 to 124 R-GSM: 0 to 124 (MS), and 955 to 1023 (BTS) DCS1800: 512 to 885 PCS1900: 512 to 810 GSM450: 259 to 293 GSM480: 306 to 340 GSM700: 438 to 516 GSM850: 128 to 251
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5510

Center Frequency

Sets the center frequency to be measured for the selected band. It is coupled with ARFCN – setting Center Freq sets ARFCN to the channel corresponding to that frequency.

Center Freq also sets the frequency entry mode to Center/Span. In Center/Span mode, the center frequency and span values are displayed below the graticule, and the default active function in the Frequency menu is **Center Freq**.

The **Center Frequency** setting is the same for all measurements within a **Mode**. Some modes are also able to share a global **Center Frequency** value; if this is the case, the **Mode** will have a **Global Settings** key in its **Mode Setup** menu.

If your test set has multiple inputs, the Center Freq function sets (and queries) the Center Frequency for the currently selected input. If you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

See “RF Center Freq” on page 788

See “I/Q Center Freq” on page 789

See “Center Frequency Presets” on page 788

Remote Command	[:SENSe] :FREQuency:CENTer <freq> [:SENSe] :FREQuency:CENTer?
Default Unit	Hz
Dependencies/Couplings	When operating in “swept span”, any value of the Center Frequency or Span that is within the frequency range of the test set is allowed when the value is being set through the front panel numeric key pad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the test set’s frequency range The Center Frequency can be limited by Start or Stop Freq limits, if the Span is so large that Start or Stop hit their limit.
Example	FREQ:CENT 50 MHz FREQ:CENT UP changes the center frequency to 150 MHz if you use FREQ:CENT:STEP 100 MHz to set the center frequency step size to 100 MHz FREQ:CENT?
Key Path	FREQ Channel
Mode	BASIC, GSM, WCDMA
Scope	Meas Global
Notes	This command sets either the RF or I/Q Center Frequency depending on the selected input. For RF input it is equivalent to FREQ:RF:CENT For I/Q input it is equivalent to FREQ:IQ:CENT
Preset	Depends on test set maximum frequency, mode, measurement, and selected input. See REF T_CF_CFPresets \h * MERGEFORMAT - and REF T_RFCF_MoreInformation \h * MERGEFORMAT - and REF T_IQCF_MoreInformation \h * MERGEFORMAT -
State Saved	Saved in State
Min	Depends on test set maximum frequency, mode, measurement, and selected input. See REF T_CF_CFPresets \h * MERGEFORMAT - and REF T_RFCF_MoreInformation \h * MERGEFORMAT - and REF T_IQCF_MoreInformation \h * MERGEFORMAT -

FREQ/Channel

Max	Depends on test set maximum frequency, mode, measurement, and selected input. See REF T_CF_CFPresets \h * MERGEFORMAT - and REF T_RFCF_MoreInformation \h * MERGEFORMAT - and REF T_IQCF_MoreInformation \h * MERGEFORMAT -
Status Bits/OPC Dependencies	non-overlapped
Instrument S/W Revision	Prior to A.02.00
Help Map ID	3059

Center Frequency Presets

The following table provides the Center Frequency Presets for the various modes.

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503	1.805 GHz	3.6 GHz	3.7 GHz
507	3.505 GHz	7.0 GHz	7.1 GHz
508	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526	13.255 GHz	26.5 GHz	27.0 GHz

RF Center Freq

SCPI command for specifying the RF Center Frequency. This will always access the RF value, even when the selected input is not RF. The front panel always uses the Freq Center (Selected Input).

Remote Command	<code>[:SENSe] :FREQuency:RF:CENTer <freq></code> <code>[:SENSe] :FREQuency:RF:CENTer?</code>
Dependencies/Couplings	If the electrical attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be >3.6 GHz results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.
Example	FREQ:RF:CENT 30 MHz
Mode	All
Scope	Meas Global
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode.
Preset	See table above

State Saved	Saved in instrument state.
Min	-79.999995 MHz
Max	See table above. Basically test set maximum frequency – 10 Hz minimum span. If the knob or step keys are being used, depends on the value of the other three interdependent parameters
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

I/Q Center Freq

SCPI command for specifying the I/Q Center Frequency. This will always access the I/Q value, even when the selected input is not I/Q. The front panel always uses the Freq Center (Selected Input).

Remote Command	[:SENSe] :FREQuency:IQ:CENTer <freq> [:SENSe] :FREQuency:IQ:CENTer?
Example	FREQ:IQ:CENT 30 MHz
Mode	BASIC, GSM, WCDMA
Scope	Meas Global
Notes	This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode.
Preset	0 Hz
State Saved	Saved in instrument state.
Min	-39.999995 MHz
Max	39.999995 MHz
Instrument S/W Revision	Prior to A.02.00
Help Map ID	0

BMT Freq

Enables quick selection from a subset of the available ARFCN numbers for the Top, Middle, or Bottom frequency in the selected band.

Dependencies/Coupling	When I/Q Input is selected, this key is not available (blank). BMT choice changes ARFCN and Center Freq. Chosen ARFCN is displayed on each menu key.
Key Path	FREQ Channel
Mode	GSM

FREQ/Channel

Scope	Meas Global
Range	Top Middle Bottom
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5512

BMT Freq Top

Sets the test set to the frequency of the highest ARFCN (Absolute RF Channel Number) of the selected radio band.

Remote Command	[:SENSe] :CHANnel :ARFCn RFCHannel :TOP
Example	CHAN:ARFC:TOP
Dependencies/Couplings	<p>When I/Q Input is selected, this key is not displayed.</p> <p>Change [:SENSe]:CHANnel:ARFCn RFCHannel as follows:</p> <p>E-GSM: 124 P-GSM: 124 R-GSM: 124 DCS1800: 885 PCS1900: 810 GSM450: 293 GSM480: 340 GSM700: 516 GSM850: 251</p> <p>Change B M T ARFCN to BMTFreqTOP.</p> <p>Change [:SENSe]:FREQuency:CENTer as follows:</p> <p>E-GSM: 959.800 MHz P-GSM: 959.800 MHz R-GSM: 959.800 MHz DCS1800: 1879.80 MHz PCS1900: 1989.80 MHz GSM450: 467.400 MHz GSM480: 495.800 MHz GSM700: 792.800 MHz GSM850: 893.800 MHz</p>
Key Path	FREQ Channel, BMT Freq
Mode	GSM

Scope	Meas Global
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5513

BMT Freq Middle

Sets the test set to the frequency of the middle ARFCN (Absolute RF Channel Number) of the selected radio band.

Remote Command	[:SENSE] :CHANnel :ARFCn RFCHannel :MIDDLE
Example	CHAN:ARFC:MIDD
Dependencies/Couplings	<p>When I/Q Input is selected, this key is not displayed.</p> <p>Change [:SENSE]:CHANnel:ARFCn RFCHannel as follows:</p> <p>E-GSM: 38 P-GSM: 63 R-GSM: 28 DSC1800: 699 PCS1900: 661 GSM450: 276 GSM480: 323 GSM700: 477 GSM850: 189</p> <p>Change B M T ARFCN to BMTFreqMIDDLE.</p> <p>Change [:SENSE]:FREQUENCY:CENTer as follows:</p> <p>E-GSM: 942.600 MHz P-GSM: 947.600 MHz R-GSM: 940.600 MHz DCS1800: 1842.60 MHz PCS1900: 1960.00 MHz GSM450: 464.000 MHz GSM480: 492.400 MHz GSM700: 755.000 MHz GSM850: 881.600 MHz</p>
Key Path	FREQ Channel, BMT Freq

FREQ/Channel

Mode	GSM
Scope	Meas Global
Notes	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5514

BMT Freq Bottom

Sets the test set to the frequency of the lowest ARFCN (Absolute RF Channel Number) of the selected radio band.

Remote Command	[:SENSe] :CHANnel :ARFCn RFCHannel :BOTTom
Example	CHAN:ARFC:BOTT
Dependencies/Couplings	<p>When I/Q Input is selected, this key is not displayed.</p> <p>Change [:SENSe]:CHANnel:ARFCn RFCHannel as follows:</p> <p>E-GSM: 975</p> <p>P-GSM: 1</p> <p>R-GSM: 955</p> <p>DCS1800: 512</p> <p>PCS1900: 512</p> <p>GSM450: 259</p> <p>GSM480: 306</p> <p>GSM700: 438</p> <p>GSM850: 128</p> <p>Change B M T ARFCN to BMTFreqBOTTOM.</p> <p>Change [:SENSe]:FREQuency:CENTer as follows:</p> <p>E-GSM: 925.200 MHz</p> <p>P-GSM: 935.200 MHz</p> <p>R-GSM: 921.200 MHz</p> <p>DCS1800: 1805.20 MHz</p> <p>PCS1900: 1930.20 MHz</p> <p>GSM450: 460.600 MHz</p> <p>GSM480: 489.000 MHz</p> <p>GSM700: 747.2 MHz</p> <p>GSM850: 869.2 MHz</p>

Key Path	FREQ Channel, BMT Freq
Mode	GSM
Scope	Meas Global
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
State Saved	No
Instrument S/W Revision	Prior to A.02.00
Help Map ID	5515

Multi Carrier Setup

Allows you to set multi carrier parameters.

Key Path:	FREQ Channel
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Initial S/W Revision:	A.06.00
Help Map ID:	5534

Carriers

Defines the number of carriers.

Key Path:	FREQ Channel, Multi Carrier Setup
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :CHANnel:CARRier:COUNT <integer> [:SENSe] :CHANnel:CARRier:COUNT?
Example:	CHAN:CARR:COUN 3 CHAN:CARR:COUN?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	This can change when the SCPI command of the Carrier Power Present or the Carrier Interval is sent.
Preset:	1

FREQ/Channel

State Saved:	Saved in instrument state.
Min:	1
Max:	16
Initial S/W Revision:	A.06.00
Help Map ID:	5535

Reference Carrier

Defines reference active carrier. The Reference Carrier frequency point is always aligned with the Measurement Global Center Frequency. The minimum value 1 specifies the lowest frequency carrier among the active carriers. The maximum value specifies the highest frequency carrier among the active carriers.

Key Path:	FREQ Channel, Multi Carrier Setup
Mode:	GSM
Scope:	Meas Global
Remote Command:	<code>[:SENSE] :CHANnel :CARRier :RCARrier <integer></code> <code>[:SENSE] :CHANnel :CARRier :RCARrier?</code>
Example:	<code>CHAN:CARR:RCAR 3</code> <code>CHAN:CARR:RCAR?</code>
Notes:	You must be in the GSM mode to use this command. Use <code>INSTRument:SElect</code> to set the mode.
Dependencies:	The maximum value depends on the number of carriers. If you set it to more than the number of carriers, it's clipped to the number of carriers. This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	When you decrease the number of carriers to a value which is less than this value, this is clipped to the value
Preset:	1
State Saved:	Saved in instrument state.
Min:	1
Max:	Number of carriers
Initial S/W Revision:	A.06.00
Help Map ID:	5536

Configure Carriers

Opens a menu of keys that allows you to configure carriers.

Key Path:	FREQ Channel, Multi Carrier Setup
Dependencies:	This key is grayed out when there is only one carrier. This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned.
Initial S/W Revision:	A.06.00
Help Map ID:	5537

Select Carrier

Selects a carrier to configure.

Key Path:	FREQ Channel, Multi Carrier Setup, Configure Carriers
Mode:	GSM
Scope:	Meas Global
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	The maximum value depends on the number of carriers. This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned. This parameter is unavailable when there is only one carrier.
Couplings:	This value can change when you decrease the number of carriers.
Preset:	1
State Saved:	No
Min:	1
Max:	Number of carriers
Initial S/W Revision:	A.06.00
Help Map ID:	5538

Key Path:	FREQ Channel, Multi Carrier Setup, Configure Carriers
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSE] :CHANnel :CARRier :LIST :COUPlE OFF ON 0 1, ... [:SENSE] :CHANnel :CARRier :LIST :COUPlE ?

FREQ/Channel

Example:	CHAN:CARR:LIST:COUP OFF CHAN:CARR:LIST:COUP?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode.
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	When Couple is selected, the carrier settings are coupled to carrier #1. Coupled parameters are Carrier Power Present, Carrier Interval. When a setting is changed, the couple is set to Man automatically. Carrier #1 is always set to couple and cannot be changed. Couple/Man selection on the Carrier key is not displayed when selected carrier number is #1.
Preset:	ON
State Saved:	No
Range:	Couple Man
Initial S/W Revision:	A.06.00
Help Map ID:	0

Carrier Power Present

Specifies whether each of carriers is active or not.

Key Path:	FREQ Channel, Multi Carrier Setup, Configure Carriers
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :CHANnel :CARRier :LIST :PPResent YES NO, ... [:SENSe] :CHANnel :CARRier :LIST :PPResent ?
Example:	CHAN:CARR:LIST:PPR YES CHAN:CARR:LIST:PPR?
Notes:	You must be in the GSM mode to use this command. Use INSTRUMENT:SElect to set the mode. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.
Dependencies:	This parameter is unavailable when there is only one carrier. This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list.

Preset:	YES
State Saved:	Saved in instrument state.
Range:	Yes No
Initial S/W Revision:	A.06.00
Help Map ID:	5539

Carrier Interval

Specifies frequency interval between the Carrier #n and #n+1 center frequencies.

Key Path:	FREQ Channel, Multi Carrier Setup, Configure Carriers
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSE] :CHANnel:CARRier:LIST:INTerval <freq>, ... [:SENSE] :CHANnel:CARRier:LIST:INTerval?
Example:	CHAN:CARR:LIST:INT 600k CHAN:CARR:LIST:INT?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. The key for the last carrier (say, #N) is grayed out.
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned. This parameter is unavailable when there is only one carrier.
Couplings:	Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list. Changing Carrier Interval might affect the Span.
Preset:	600 kHz
State Saved:	Saved in instrument state.
Min:	400 kHz
Max:	100 MHz
Initial S/W Revision:	A.06.00
Help Map ID:	5540

Carr Freq Alloc (Carrier Frequency Allocation)

Specifies carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two groups of frequencies are separated with at least [3.6] MHz carrier separation between the innermost carriers. In case of the non-contiguous frequency allocation, tests will be measured between the uppermost carrier A of the


FREQ/Channel

lower frequency group and the lowermost carrier B of the upper frequency group.

See “An example of non-contiguous frequency allocation” on page 798

Key Path:	FREQ Channel, Multi Carrier Setup
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :CHANnel :CARRier :FALLocation CONTiguous NCONtiguous [:SENSe] :CHANnel :CARRier :FALLocation?
Example:	CHAN:CARR:FALL NCON CHAN:CARR:FALL?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This menu key is available only when the number of carriers is more than one. This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Preset:	CONTiguous
State Saved:	Saved in instrument state.
Range:	Contiguous Non-Contiguous
Readback Text:	CONTiguous NCONtiguous
Initial S/W Revision:	A.06.00
Help Map ID:	5541

An example of non-contiguous frequency allocation

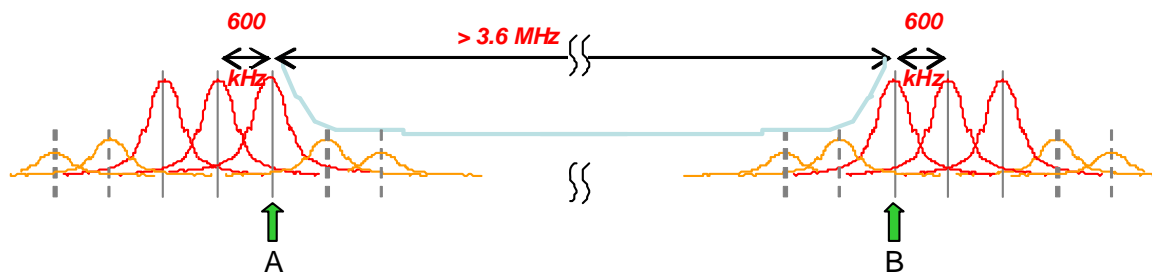

Non-Contiguous

Opens a menu of keys that allows you to set non-contiguous frequency allocation parameters.

Key Path:	FREQ Channel, Multi Carrier Setup, Carr Freq Alloc
Dependencies:	This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Initial S/W Revision:	A.06.00
Help Map ID:	5542

Allocation Break Pt


Specifies an allocation break point that is a sequence (or index) number of the uppermost carrier in the lower frequency group.

See [“An example of allocation break point.” on page 800](#)

Key Path:	FREQ Channel, Multi Carrier Setup, Carr Freq Alloc, Non-Contiguous
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :CHANnel :CARRier :FALLocation :NCONtiguous :ABPoint <integer> [:SENSe] :CHANnel :CARRier :FALLocation :NCONtiguous :ABPoint?
Example:	CHAN:CARR:FALL:NCON:ABP 3 CHAN:CARR:FALL:NCON:ABP?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SELEct to set the mode.
Dependencies:	The maximum value depends on the number of carriers. This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	This value can change when you decrease the number of carriers.
Preset:	1
State Saved:	Saved in instrument state.
Min:	1
Max:	15
Initial S/W Revision:	A.06.00
Help Map ID:	5543

FREQ/Channel

An example of allocation break point.

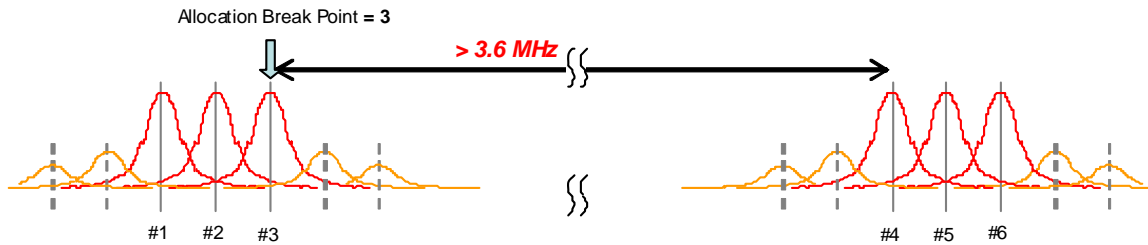


Freq Separation

Specifies frequency separation between the innermost of carriers.

See [“An example of frequency separation” on page 801](#)

Key Path:	FREQ Channel, Multi Carrier Setup, Carr Freq Alloc, Non-Contiguous
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :CHANnel :CARRier :FALLocation :NCONtiguous :FSEParation <freq> [:SENSe] :CHANnel :CARRier :FALLocation :NCONtiguous :FSEParation?
Example:	CHAN:CARR:FALL:NCON:FSEP 5.4M CHAN:CARR:FALL:NCON:FSEP?
Notes:	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	Changing Frequency Separation might affect the Span
Preset:	5.4 MHz
State Saved:	Saved in instrument state.
Min:	3.6 MHz
Max:	100 MHz
Initial S/W Revision:	A.06.00
Help Map ID:	5544

An example of frequency separation

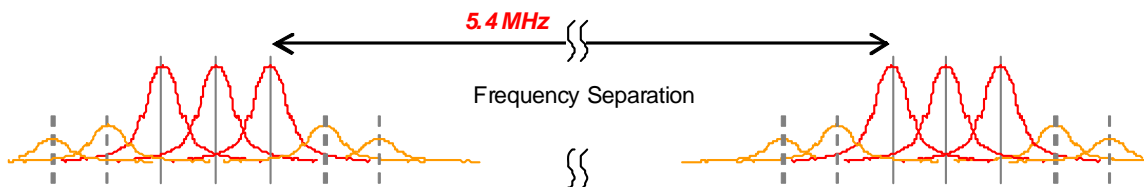

Multi Carrier BTS Class (Remote Command Only)

Selects a multi carrier BTS class.

BTS Class	Definition
1	The average power measured at the centre frequencies of the intermodulation components and at the centre of their adjacent channels, over a timeslot shall not exceed -70 dBc or -36 dBm if maximum output power per carrier exceeds 33 dBm else -41 dBm, whichever is less stringent, for frequency offsets from uppermost and lowermost active carrier between 0.4 MHz and 10 MHz outside the edge of the relevant Tx band.
2	The average power of the measured intermodulation components over a timeslot shall not exceed the values required for multi carrier BTS class 1 except that at the third order intermodulation centre frequencies and at the centre frequencies of their adjacent channels the power of the intermodulation components may increase up to -60 dBc.

Key Path:	SCPI Only
Mode:	GSM
Scope:	Meas Global
Remote Command:	<code>[:SENSE] :CHANnel:CARRier:BASE:CLASs C1 C2</code> <code>[:SENSE] :CHANnel:CARRier:BASE:CLASs?</code>
Example:	<code>CHAN:CARR:BASE:CLAS C1</code> <code>CHAN:CARR:BASE:CLAS?</code>
Notes:	You must be in the GSM mode to use this command. Use <code>INSTrument:SElect</code> to set the mode.
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Preset:	C2
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.06.00
Modified at S/W Revision:	A.10.01

FREQ/Channel

Help Map ID:	5545
--------------	------

Carrier BPF

Allows you to select whether to use the carrier bandpass filter.

Key Path:	FREQ Channel, Multi Carrier Setup Mode Setup, Demod
Mode:	GSM
Remote Command:	[:SENSe] :RADio:CARRier:NUMBer:AUTO ON OFF 1 0 [:SENSe] :RADio:CARRier:NUMBer:AUTO?
Example:	RAD:CARR:NUMB:AUTO 1 RAD:CARR:NUMB:AUTO?
Dependencies:	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Couplings:	ON automatically changes to OFF when Multiple or Single is selected as Carrier BPF Type.
Preset:	ON
State Saved:	Saved in instrument state.
Range:	Auto Man
Initial S/W Revision:	A.06.00
Help Map ID:	5546

Carrier BPF Type

Opens a menu of keys that allows you to select the type of the bandpass filter. When carriers other than the signal of interest are present, especially if they are strong, they can interfere with the measurement, making it difficult to sync and producing artificially high EVM results. When this condition exists, toggle from Single to Multi. A band-limited filter will help reduce the measurement interference.

BPF Type	Description
MULTiple	Enable multi carrier tolerance filter.
SINGLE	Disable multi carrier tolerance filter

This parameter applies only to the following measurements:

- GMSK Phase & Frequency Error measurement
- EDGE EVM measurement

- EDGE Power vs. Time

Key Path:	FREQ Channel, Multi Carrier Setup, Carrier BPF Mode Setup, Demod, Carrier BPF
Mode:	GSM
Scope:	Meas Global
Remote Command:	[:SENSe] :RADio:CARRier:NUMBER SINGLE MULTiple [:SENSe] :RADio:CARRier:NUMBER?
Example:	RAD:CARR:NUMB SING RAD:CARR:NUMB?
Notes:	The “Carrier Bandpass Filter” key is in the Mode Setup menu, but only EDGE EVM and GSM PFER measurements support this feature. In other measurements, this setting is not applicable. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies:	This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error or illegal parameter error is returned
Preset:	SINGLE
State Saved:	Saved in instrument state.
Range:	Single Multi
Initial S/W Revision:	A.06.00
Help Map ID:	0

Timeslot

This functionality is the same as that of the corresponding key in the Demod menu. See [Time Slot@5516@i](#) for details.

Burst Type

This functionality is the same as that of the corresponding key in the Demod menu. See [Burst Type@5517@i](#) for details.

TSC (Std)

This functionality is the same as that of the corresponding key in the Demod menu. See [TSC \(Std\)@5518@i](#) for details.

FREQ/Channel

Input/Output

The Input/Output features are common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Input/Output key accesses the softkeys that control the Input/Output parameters of the instrument. In general, these are functions associated with external connections to the test set, either to the inputs or the outputs. Since these connections tend to be fairly stable within a given setup, in general, the input/output settings do not change when you Preset the test set.

Other functions related to the input/output connections, but which tend to change on a measurement by measurement basis, can be found under the **Trigger** and **AMPTD Y Scale** keys. In addition, some of the digital I/O bus configurations can be found under the **System** key.

NOTE The functions in the Input/Output menu are "global" (common) to all Modes (applications). But individual Input/Output functions only appear in a Mode if they apply to that Mode. Functions that apply to a Mode but not to all measurements in the Mode may be grayed-out in some measurements.

[“Input/Output variables - Preset behavior” on page 807](#)

The Input Port selection is the first menu under the **Input/Output** key:

Key Path:	Front-panel key
Remote Command:	[:SENSe] :FEED RF AIQ EMIXer [:SENSe] :FEED?
Example:	:FEED RF :FEED?
Couplings:	The [:SENSe]:FEED RF command turns the calibrator OFF
Preset:	This setting is unaffected by a Preset or power cycle. It survives a Mode Preset and mode changes. It is set to RF on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state

Input/Output

<p>Backwards Compatibility SCPI:</p>	<p><code>[:SENSe]:FEED AREFERENCE</code></p> <p>In the PSA the calibrator was one of the inputs and selected using the AREF parameter to the same :FEED command that switched the inputs. In the X-Series it is controlled in a separate menu and overrides the input selection. For code compatibility the <code>[:SENSe]:FEED AREFERENCE</code> command is provided, and is aliased to <code>[SENSe]:FEED:AREF REF50</code>, which causes the input to be switched to the 50 MHz calibrator. The <code>[:SENSe]:FEED RF</code> command switches the input back to the RF port and turns the calibrator OFF, thus providing full compatibility with the PSA calibrator function.</p> <p>Note that after sending this, the query <code>[:SENSe]:FEED?</code> will NOT return "AREF" but instead the currently selected input.</p>
<p>Backwards Compatibility SCPI:</p>	<p><code>[:SENSe]:FEED IQ IONLy QONLy</code></p> <p><code>[:SENSe]:FEED?</code></p> <p>The parameters <code>IQ IONLy QONLy</code> are supported for backwards compatibility with the E44406A.</p> <p><code>[:SENSe]:FEED IQ</code> aliases to <code>[:SENSe]:FEED:IQ:TYPE IQ</code></p> <p><code>[:SENSe]:FEED IONLy</code> aliases to <code>[:SENSe]:FEED:IQ:TYPE IONLy</code></p> <p><code>[:SENSe]:FEED QONLy</code> aliases to <code>[:SENSe]:FEED:IQ:TYPE QONLy</code></p> <p>The query <code>[:SENSe]:FEED?</code> will always returns AIQ whatever the type of legacy parameters <code>IQ IONLy QONLy</code> has been used.</p>
<p>Backwards Compatibility Notes:</p>	<p>Most of the settings in the X-Series Input/Output system, including External Gain, Amplitude Corrections settings and data, etc., are shared by all modes and are not changed by a mode switch. Furthermore, most variables in the Input/Output system key are not affected by Mode Preset. Both of these behaviors represent a departure from legacy behavior.</p> <p>In the X-Series. Input/Output settings are reset by using the "Restore Input/Output Defaults" function. They can also be reset to their default values through the System->Restore System Defaults-> In/Out Config key or through the System ->Restore System Defaults -> All key (and corresponding SCPI).</p> <p>While this matches most use cases better, it does create some code compatibility issues. For example, Amplitude Corrections are no longer turned off by a Mode Preset, but instead by using the "Restore Input/Output Defaults" key/SCPI.</p> <p>Although Input/Output settings are not part of each Mode's State, they are saved in the Save State files, so that all of the instrument settings can be recalled with Recall State, as in legacy instruments.</p>
<p>Initial S/W Revision:</p>	<p>Prior to A.02.00</p>
<p>Help Map ID:</p>	<p>3065</p>
<p>Remote Command:</p>	<p><code>:INPut:MIXer EXTernal INTernal</code></p> <p><code>:INPut:MIXer?</code></p>

Example:	INP:MIX INT INP:MIX?
Notes:	<p>1. In legacy analyzers you choose between the Internal mixer or an External Mixer. In the X-Series, the External Mixer is one of the choices for the Input and hence is selected using the FEED command (:SENSe:FEED EXTMixer).</p> <p>For compatibility, the INPut:MIXer EXTernal INTernal legacy command is mapped as follows:</p> <ol style="list-style-type: none"> 1. When INPut:MIXer EXTernal is received, SENSe:FEED EMIXer is executed. 2. When INPut:MIXer INTernal is received, SENSe:FEED RF is executed. 3. When INPut:MIXer? is received, the response will be INT if any input other than the external mixer is selected and EXT if the external mixer is selected
Preset:	INT
Backwards Compatibility Notes:	<p>1. PSA supports the following SCPI Command :</p> <pre>:INPut:MIXer:TYPE PRESelected UNPReselect</pre> <pre>:INPut:MIXer:TYPE?</pre> <p>PXA does not support the :INPut:MIXer:TYPE command.</p>
Initial S/W Revision:	A.08.01
Help Map ID:	0

Input/Output variables - Preset behavior

Virtually all the input/output settings are NOT a part of mode preset. They can be set to their default value by one of the three ways - by using the Restore Input/Output Defaults key on the first page of the input/output menu, by using the System->Restore System Defaults->Input/Output Settings or by using the System -> Restore System Defaults->All. Also, they survive a Preset and a Power cycle.

A very few of the Input/Output settings do respond to a Mode Preset; for example, if the Calibrator is on it turns off on a Preset, and if DC coupling is in effect it switches to AC on a Preset. These exceptions are made in the interest of reliability and usability, which overrides the need for absolute consistency. Exceptions are noted in the SCPI table for the excepted functions.

RF Input

Selects the front-panel RF input port to be the test set signal input. If RF is already selected, pressing this key accesses the RF input setup functions.

Key Path:	Input/Output
Example:	[:SENSe]:FEED RF

Input/Output

Readback:	The RF input port, RF coupling, and current input impedance settings appear on this key as: "XX, YY, ZZ" where XX is RF, RF2, RFIO1, RFIO2, depending on what input is selected (only appears on test sets with multiple RF inputs) YY is AC or DC ZZ is 50 or 75
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3068

Input Z Correction

Sets the input impedance for unit conversions. This affects the results when the y-axis unit is voltage or current units (dBmV, dB μ V, dB μ A, V, A), but not when it is power units (dBm, W). The impedance you select is for computational purposes only, since the actual impedance is set by internal hardware to 50 ohms. Setting the computational input impedance to 75 ohms is useful when using a 75 ohm to 50 ohm adapter to measure a 75 ohm device on an test set with a 50 ohm input impedance.

There are a variety ways to make 50 to 75 ohm transitions, such as impedance transformers or minimum loss pads. The choice of the solution that is best for your measurement situation requires balancing the amount of loss that you can tolerate with the amount of measurement frequency range that you need. If you are using one of these pads/adaptors with the **Input Z Corr** function, you might also want to use the **Ext Gain** key. This function is used to set a correction value to compensate for the gain (loss) through your pad. This correction factor is applied to the displayed measurement values.

Key Path:	Input/Output, RF Input
Remote Command:	[:SENSe] :CORRection:IMPedance [:INPut] [:MAGNitude] 50 75 [:SENSe] :CORRection:IMPedance [:INPut] [:MAGNitude] ?
Example:	CORR:IMP 75 sets the input impedance correction to 75 ohms. CORR:IMP?
Couplings:	When the main RF Input is selected, the Input Z Correction will automatically change to 50 ohms. You may then change it to whatever is desired.
Preset:	This is unaffected by a Preset but is set to 50 ohms on a "Restore Input/Output Defaults" or "Restore System Defaults->All" Some instruments/options may have 75 ohms available.
State Saved:	Saved in instrument state
Readback:	50 Ω or 75 Ω Current setting reads back to the RF key.
Initial S/W Revision:	Prior to A.02.00

Help Map ID:

3069

RF Input Port

Specifies the RF input port used. The RF Input Port key only appears on units with multiple inputs, and lets you switch between the two inputs.

Switching from the RF input port to one of the RFIO ports, on units which have them, changes the receiver performance of the instrument.

Key Path:	Input/Output, RF Input
Remote Command:	[:SENSe] :FEED:RF:PORT [:INPut] RFIN RFIN2 RFIO1 RFIO2 [:SENSe] :FEED:RF:PORT [:INPut] ?
Example:	:FEED:RF:PORT RFIN
Dependencies:	This key only appears in models that support multiple inputs. If the SCPI command is sent with unsupported parameters in any other model, an error is generated, -221.1900, "Settings conflict;option not installed" When any input is selected in a measurement that does not support it, the "No result; Meas invalid with this input" error condition occurs, and the measurement returns invalid data when queried.
Preset:	This is unaffected by Mode Preset but is set to RF on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved:	Saved in State
Readback:	The current RF Input Port selected is read back to this key
Backwards Compatibility SCPI:	INPut<1 2>:TYPE INPUT1 INPUT2 INPut<1 2>:TYPE? included for R&S ESU compatibility. In the MXE, the INPUT1 parameter is aliased to RFIN and the INPUT2 parameter is aliased to RFIN2
Initial S/W Revision:	A.05.01
Help Map ID:	29997

RF Input

Specifies using the main RF port for the current measurement

Key Path:	Input/Output, RF Input, RF Input Port
Example:	:FEED:RF:PORT RFIN
ReadBack:	RF Input
Initial S/W Revision:	A.05.01
Help Map ID:	29998

Input/Output

RFIO1

Specifies using the RFIO 1 port, if supported, for the current measurement

Key Path:	Input/Output, RF Input, RF Input Port
Example:	:FEED:RF:PORT RFIO1
Dependencies:	Only available in EXT. If Multiport Adapter is ON, Select RF Input to RFIO1, an error message is generated: “-221, Settings conflict; RFIO1 or RFIO2 Port unavailable when Multiport Adapter is ON”.
ReadBack:	RFIO 1
Initial S/W Revision:	A.05.01
Help Map ID:	29999

RFIO2

Specifies using the RFIO 2 port, if supported, for the current measurement

Key Path:	Input/Output, RF Input, RF Input Port
Example:	:FEED:RF:PORT RFIO2
Dependencies:	Only available in EXT. If Multiport Adapter is ON, Select RF Input to RFIO1, an error message is generated: “-221, Settings conflict; RFIO1 or RFIO2 Port unavailable when Multiport Adapter is ON”.
ReadBack:	RFIO 2
Initial S/W Revision:	A.05.01
Help Map ID:	30000

RF Calibrator

Lets you choose a calibrator signal to look at or turns the calibrator "off".

Key Path:	Input/Output
Remote Command:	[:SENSE] :FEED:AREFERENCE REF50 REF4800 OFF [:SENSE] :FEED:AREFERENCE?
Example:	FEED:AREF REF50 selects the 50 MHz amplitude reference as the signal input. FEED:AREF REF4800 selects the 4.8 GHz amplitude reference as the signal input FEED:AREF OFF turns the calibrator "off" (switches back to the selected input – RF or I/Q)

Dependencies:	<p>Selecting an input (RF or I/Q) turns the Calibrator OFF. This is true whether the input is selected by the keys or with the [:SENSe]:FEED command.</p> <p>The 4.8 GHz internal reference is only available in some models and frequency range options. If the 4.8 GHz reference is not present, the 4.8 GHz softkey will be blanked, and if the REF4800 parameter is sent, the test set will generate an error.</p>
Couplings:	When one of the calibrator signals is selected, the test set routes that signal (an internal amplitude reference) to the test set, and changes the main input selection to RF so the calibrator signal can be seen. When you turn the calibrator off it does not switch back to the previously selected input.
Preset:	OFF
State Saved:	Saved in instrument state
Readback:	Off, 50 MHz, 4.8 GHz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3086

Remote Command:	<pre>:CALibration:SOURce:STATe OFF ON 0 1 :CALibration:SOURce:STATe?</pre>
Notes:	<p>For ESA backwards compatibility.</p> <p>In the ESA the calibrator was a separate output which you connected to the input and switched on with this command.</p> <p>In the X-Series, the ON parameter is aliased to the [:SENSe]:FEED:AREF REF50 command and the OFF parameter is aliased to [:SENSe]:FEED:AREF OFF.</p> <p>When CALibration:SOURce:STATe? is received, 1 will be returned if any of the references is selected and 0 if the Calibrator is "Off"</p>
Preset:	OFF
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

50 MHz

Selects the 50 MHz internal reference as the input signal.

Key Path:	Input/Output, RF Calibrator
Example:	:FEED:AREF REF50
Readback:	50 MHz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3087

Input/Output

Off

Switches the input back to the selected input (RF or I/Q)

Key Path:	Input/Output, RF Calibrator
Example:	:FEED:AREF OFF
Readback:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3085

External Gain

Compensates for gain or loss in the measurement system outside the test set. The External Gain is subtracted from the amplitude readout (or the loss is added to the amplitude readout). So, the displayed signal level represents the signal level at the output of the device-under-test, which can be the input of an external device that provides gain or loss.

Entering an External Gain value does not affect the Reference Level, therefore the trace position on screen changes, as do all of values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, etc., are all affected by External Gain. Changing the External Gain, even on a trace which is not updating, will immediately change all of the above, without new data needing to be taken.

NOTE Changing the External Gain causes the test set to immediately stop the current sweep and prepare to begin a new sweep. The data will not change until the trace data updates because the offset is applied to the data as it is taken. If a trace is exported with a nonzero External Gain, the exported data will contain the trace data with the offset applied.

Key Path:	Input/Output
Couplings:	The Ext Preamp, MS, and BS keys may be grayed out depending on which measurement is currently selected. If any of the grayed out keys are pressed, or the equivalent SCPI command is sent, an advisory message is generated.
Readback:	1-of-N selection [variable]
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3090

Ext Preamp

This function is similar to the reference level offset function. Both affect the displayed signal level. Ref Lvl Offset is a mathematical offset only, no test set configuration is affected. Ext Preamp gain is used when determining the auto-coupled value of the Attenuator. The External Gain value and the Maximum Mixer Level settings are both part of the automatic setting equation for the RF attenuation setting. (10 dB of Attenuation is added for every 10 dB of External Gain.)

Note that the Ref Lvl Offset and Maximum Mixer Level are described in the Amplitude section. They are reset by the instrument Preset. The External Preamp Gain is reset by the "Restore Input/Output Defaults" or "Restore System Defaults->All functions. . The External Gain is subtracted from the amplitude readout so that the displayed signal level represents the signal level at the output of the device-under-test, which is the input of the external device that is providing gain or loss.

Key Path:	Input/Output, External Gain
Remote Command:	[:SENSe] :CORRection:SA[:RF] :GAIN <rel_amp1> [:SENSe] :CORRection:SA[:RF] :GAIN?
Example:	CORR:SA:GAIN 10 sets the Ext Gain value to 10 dB CORR:SA:GAIN -10 sets the Ext Gain value to -10 dB (that is, an attenuation of 10 dB)
Notes:	Does not auto return.
Dependencies:	The reference level limits are determined in part by the External Gain/Atten, Max Mixer Level, and RF Atten. This key is grayed out in Modes that do not support External Gain
Preset:	This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Min:	-120 dB
Max:	120 dB
Readback:	Preamp Gain, <Ext Gain value> dB
Backwards Compatibility SCPI:	[:SENSe]:CORRection:OFFSet[:MAGNitude] The legacy "Ext Preamp Gain" key is now called "Ext Gain" and the sub-menu has choices of Ext Preamp MS BTS for backwards compatibility.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3091

MS

Sets an external gain/attenuation value for MS (Mobile Station) tests.

Key Path:	Input/Output, External Gain
Remote Command:	[:SENSe] :CORRection:MS[:RF] :GAIN <rel_amp1> [:SENSe] :CORRection:MS[:RF] :GAIN?

Input/Output

Example:	CORR:MS:GAIN 10 sets the Ext Gain value to 10 dB CORR:MS:GAIN -10 sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.)
Notes:	Does not auto return.
Dependencies:	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten This key is grayed out in modes that do not support MS.
Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state.
Min:	-100 dB
Max:	100 dB
Readback:	MS, <Ext Gain value> dB
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3092

Remote Command:	[:SENSE] :CORRection:MS [:RF] :LOSS <rel_ampl> [:SENSE] :CORRection:MS [:RF] :LOSS?
Example:	CORR:MS:LOSS 10 sets the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB CORR:MS:LOSS -10 sets the Ext Gain value to 10 dB, and subsequently querying :LOSS will give -10 dB
Notes:	A positive value of <rel_ampl> in the above command means a loss and a negative value indicates a gain. Anytime :LOSS is set it sets :GAIN to the negative value of the parameter sent. Anytime :LOSS is queried it gives the negative of :GAIN
Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Min:	100 dB
Max:	-100 dB
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

BTS

Sets an external attenuation value for BTS (Base Transceiver Station) tests.

Key Path:	Input/Output, External Gain
Remote Command:	[:SENSe] :CORRection:BTS [:RF] :GAIN <rel_ampl> [:SENSe] :CORRection:BTS [:RF] :GAIN?
Example:	CORR:BTS:GAIN 10 sets the Ext Gain value to 10 dB CORR:BTS:GAIN -10 sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.)
Notes:	Does not auto return.
Dependencies:	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten This key is grayed out in modes that do not support BTS.
Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state.
Min:	-100 dB
Max:	100 dB
Readback:	BTS, <Ext Gain value> dB
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3093

Remote Command:	[:SENSe] :CORRection:BTS [:RF] :LOSS <rel_ampl> [:SENSe] :CORRection:BTS [:RF] :LOSS?
Example:	CORR:BTS:LOSS 10 sets the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB CORR:BTS:LOSS -10 sets the Ext Gain value to 10 dB, and subsequently querying :LOSS will give -10 dB
Notes:	A positive value of <rel_ampl> in the above command means a loss and a negative value indicates a gain. Anytime :LOSS is set it sets :GAIN to the negative value of the parameter sent. Anytime :LOSS is queried it gives the negative of :GAIN
Preset:	This is unaffected by a Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Min:	100 dB

Input/Output

Max:	-100 dB
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Restore Input/Output Defaults

This selection causes the group of settings and data associated with the **Input/Output** key to be a reset to their default values. In addition, when a Source is installed, licensed and selected, Restore Input/Output defaults will initiate a Source Preset.

This level of Restore System Defaults does not affect any other system settings or mode settings and does not cause a mode switch. All the features described in this section are reset using this key, including Input Corrections and Data (described in the Corrections section).

Key Path:	Input/Output
Example:	:SYST:DEF INP presets all the Input/Output variables to their factory default values.
Notes:	Refer to the Utility Functions for information about Restore System Defaults and the complete description of the :SYSTem:DEFault INPut: command.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3094

Data Source

Gives you the choice of either using a hardware input signal as the input or raw data stored in a data storage buffer from an earlier acquisition. You can also share raw data across certain measurements that support this feature. The measurements must be capable of storing raw data. There are three choices under this menu. You can select "Inputs" which is the same as selecting one of the inputs from the input port, for example RF, AREF, I/Q, or IFALign. Selecting "Capture Buffer" allows you to use data that has been stored earlier in the same measurement or from a previous measurement using the "Current Meas -> Capture Buffer" feature. Selecting "Recorded Data" allows you to playback long data capture records stored in the record buffer.

Key Path:	Input/Output
Remote Command:	[:SENSe] :FEED:DATA INPut STORed [:SENSe] :FEED:DATA?
Example:	FEED:DATA STOR FEED:DATA?
Notes:	INPutS = Inputs STORed = Capture Buffer

Dependencies:	Not all inputs are available in all modes. Unavailable keys are grayed out.
Preset:	This is unaffected by Preset but is set to INPut on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Readback:	Variable
Backwards Compatibility SCPI:	[:SENSe]:FEED:SOURce INPut STORed [:SENSe]:FEED:SOURce?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3095

Inputs

Sets the measurement to use the input selections (RF, AREF, I/Q)

Key Path:	Input/Output, Data Source
Example:	FEED:DATA INP causes the measurement to look at the input selection
Notes:	Does not auto return.
Readback:	Inputs
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3096

Capture Buffer

Some WCDMA and demod measurements support this feature. This allows sharing of the raw data across certain measurements. If you want to make another measurement on the same signal, you would store that raw data using the "Current Meas -> Capture Buffer" key. Then the data is available for the next measurement to use. You must have raw data stored in the instrument memory before the Capture Buffer choice is available for use.

Key Path:	Input/Output, Data Source
Example:	FEED:DATA STOR causes stored measurement data to be used with a different measurement that supports this.
Notes:	Does not auto return. This key is grayed out when you switch to a measurement that does not support this feature.
Dependencies:	If you switch to a measurement that does not support this feature, then the instrument switches to use "Inputs" and grays out this key. If the grayed out key is pressed, it generates a message.
Readback:	Stored Data
Initial S/W Revision:	Prior to A.02.00

Input/Output

Help Map ID:	3097
--------------	------

Current Meas -> Capture Buffer

Pressing this key stores the raw data of one measurement in the internal memory of the instrument where it can then be used by a different measurement by pressing "Stored Data". When raw data is stored, then the data source selection switch automatically changes to "Stored Data". Stored raw data cannot be directly accessed by a user. There is no save/recall function to save the raw data in an external media. However if you want to get the stored raw data, you must first perform a measurement using the stored raw data. Now you can access the used raw data, which is the same as stored raw data, using the FETCh or READ commands.

Key Path:	Input/Output, Data Source
Remote Command:	[:SENSE] :FEED:DATA:STORE
Example:	FEED:DATA:STOR stores recorded data
Notes:	This is command only, there is no query
Backwards Compatibility SCPI:	[:SENSE] :FEED:SOURce:STORE
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3099

Corrections

This key accesses the Amplitude Corrections menu.

Amplitude Corrections arrays can be entered, sent over SCPI, or loaded from a file. They allow you to correct the response of the test set for various use cases. The X-series supports four separate Corrections arrays, each of which can contain up to 2000 points. They can be turned on and off individually and any or all can be on at the same time.

Trace data is in absolute units and corrections data is in relative units, but we want to be able to display trace data at the same time as corrections data. Therefore we establish a reference line to be used while building or editing a Corrections table. The reference line is halfway up the display and represents 0 dB of correction. It is labeled "0 dB CORREC". It is drawn in blue.

Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it.

In zero span, where the frequency is always the center frequency of the test set, we apply the (interpolated) correction for the center frequency to all points in the trace. In the event where there are two correction amplitudes at the center frequency, we apply the first one in the table.

Note that the corrections are applied as the data is taken; therefore, a trace in **View** (Update Off) will not be affected by changes made to the corrections table after the trace is put in **View**.

Instruments that have multiple Input/Output RF ports can have different corrections applied to the different ports. There are 4 sets of corrections that can be applied to the RF ports; ports cannot share the same set of corrections but a single port can have multiple corrections applied to it. The correction data

is applied to incoming signals as well as transmitted signals and is in the form of a list of spot frequencies and amplitude correction levels.

Key Path:	Input/Output, Corrections
Mode:	SEQAN, TDSCDMA
Dependencies:	<p>This key will only appear if you have the proper option installed in your instrument.</p> <p>Amplitude correction may not be available in all modes; if a mode does not support amplitude correction, the Corrections key should be blanked while in that mode. If an application supports corrections but the current measurement does not, then the key should be grayed out in that measurement.</p> <p>This menu selection does not have any effect when Input/Output, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state and Input/Output, RF Output & Test Set Config, RF Output is RF Output.</p>
Preset:	Corrections arrays are reset (deleted) by Restore Input/Output Defaults. They survive shutdown and restarting of the test set application, which means they will survive a power cycle.
Initial S/W Revision:	A.02.00
Help Map ID:	3101

Correction On/Off

Turning the Selected Correction on allows the values in it to be applied to the data. This also automatically turns on "Apply Corrections" (sets it to ON), otherwise the correction would not take effect.

A new sweep is initiated if an amplitude correction is switched on or off. Note that changing, sending or loading corrections data does NOT directly initiate a sweep, however in general these operations will turn corrections on, which DOES initiate a sweep.

Key Path:	Input/Output, Corrections
Remote Command:	<pre>[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 [:STATe] ON OFF 1 0 [:SENSe] :CORRection:CSET [1] 2 3 4 5 6 [:STATe] ?</pre>
Example:	SENS:CORR:CSET1 ON

Input/Output

Dependencies:	<p>Turning this on automatically turns on "Apply Corrections"</p> <p>Only the first correction array (Correction 1) supports antenna units. When this array is turned on, and it contains an Antenna Unit other than "None", the Y Axis Unit of the test set is forced to that Antenna Unit. All other Y Axis Unit choices are grayed out.</p> <p>Note that this means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include .ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.</p> <p>This command will generate an "Option not available" error unless you have the proper option installed in your instrument.</p>
Preset:	Not affected by a Preset. Set to OFF by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Backwards Compatibility Notes:	Unlike legacy analyzers, Preset does not turn Corrections off (Restore Input/Output Defaults does).
Initial S/W Revision:	A.02.00
Help Map ID:	3104

Properties

Accesses a menu that lets you set the properties of the selected correction.

Key Path:	Input/Output, Corrections
Initial S/W Revision:	A.02.00
Help Map ID:	3105

Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Key Path:	Input/Output, Corrections, Properties
Notes:	The selected correction is remembered even when not in the correction menu.
Preset:	Set to Correction 1 by Restore Input/Output Defaults.
Readback:	Correction 1 Correction 2 Correction 3 Correction 4 Correction 5 Correction 6
Initial S/W Revision:	A.02.00
Help Map ID:	Use 3557

Frequency Interpolation

This setting controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

See “Interpolation” on page 821

Key Path:	Input/Output, Corrections, Properties
Remote Command:	[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :X:SPACing LINear LOGarithmic [:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :X:SPACing?
Example:	CORR:CSET:X:SPAC LIN
Preset:	Unaffected by a Preset. Set to Linear by Restore Input/Output Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	3108

Interpolation


For each bucket processed by the application, all of the correction factors at the frequency of interest (center frequency of each bucket) are summed and added to the amplitude. All trace operations and post processing treat this post-summation value as the true signal to use.

To effect this correction, the goal, for any particular start and stop frequency, is to build a correction trace, whose number of points matches the current Sweep Points setting of the instrument, which will be used to apply corrections on a bucket by bucket basis to the data traces.


For amplitudes that lie between two user specified frequency points, we interpolate to determine the amplitude value. You may select either linear or logarithmic interpolation between the frequencies.

If we interpolate on a log scale, we assume that the line between the two points is a straight line on the log scale. For example, let’s say the two points are (2,4) and (20,1). A straight line between them on a log scale looks like:


Input/Output

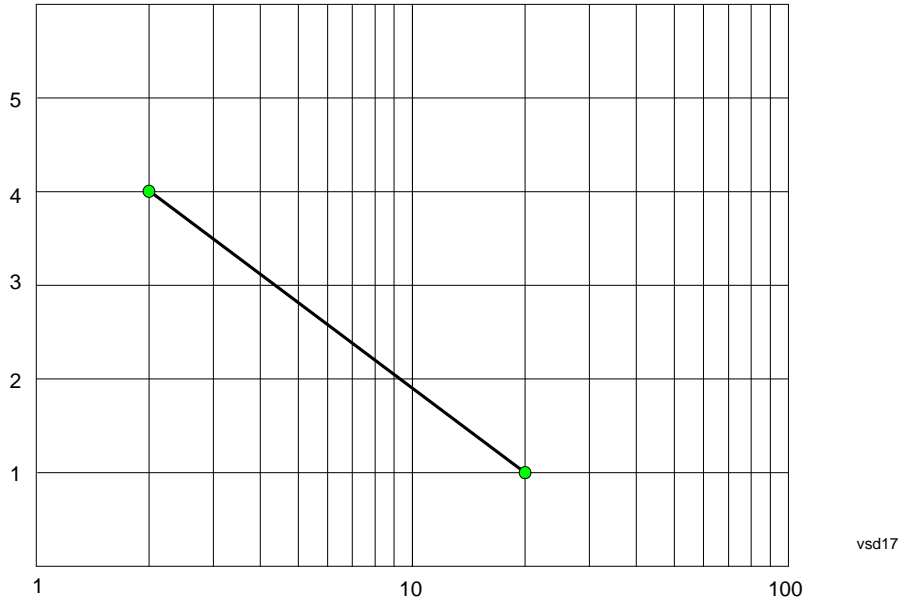

On a linear scale (like that of the test set), this translates to:

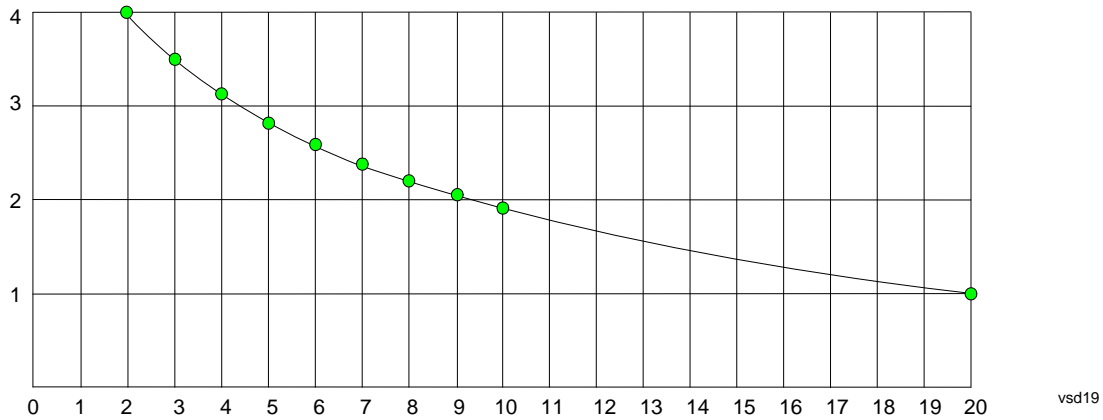

If we interpolate on a linear scale, we assume that the two points are connected by a straight line on the linear scale, as below:

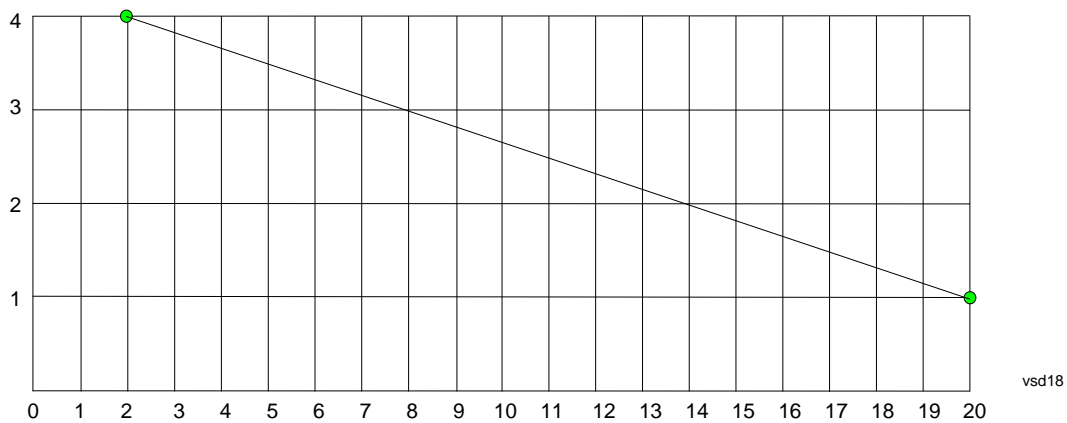

The correction to be used for each bucket is taken from the interpolated correction curve at the center of the bucket.

Description

Sets an ASCII description field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path:	Input/Output, Corrections, Properties
Remote Command:	[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :DESCription "text" [:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :DESCription?
Example:	:CORR:CSET1:DESC "11941A Antenna correction"
Notes:	45 chars max; may not fit on display if max chars used
Preset:	Unaffected by a Preset. Set to empty by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	3106

Comment

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path:	Input/Output, Corrections, Properties
Remote Command:	[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :COMMent "text" [:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :COMMent?
Example:	:CORR:CSET1:COMM "this is a comment"
Notes:	60 chars max; may not fit on display if max chars used
Preset:	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved:	Saved in instrument state
Initial S/W Revision:	A.02.00
Help Map ID:	3107

RF Port

This menu and all of its submenus are only available in the EXT.

Maps one of the sets of corrections to one of the IO ports.

Key Path:	Input/Output, Corrections, Properties
-----------	--

Input/Output

Mode:	SEQAN
Remote Command:	[:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT RFIN RFIO1 RFIO2 RFOut [:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT?
Example:	:CORR:CSET:RF:PORT RFIN
Remote Command Notes:	
Dependencies:	Only available in EXT
Couplings:	
Preset:	Unaffected by Preset. Set to RF by Restore Input/Output Defaults
State Saved:	Saved in State
Initial S/W Revision:	A.05.01
Help Map ID:	30001

RF Input

The port that the current corrections will be applied to.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT RFIN
Dependencies:	Only available in EXT
ReadBack:	RF IN
Initial S/W Revision:	A.05.01
Help Map ID:	30002

RFOut

The port that the current corrections will be applied to.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT RFO
Dependencies:	Only available in EXT
ReadBack:	RFOut
Initial S/W Revision:	A.05.01
Help Map ID:	30003

RFIO1

The port that the current corrections will be applied to. Pressing this key again allows the user access to the menu

for specifying which internal device the corrections for RFIO 1 will be applied to.

Key Path:	Input/Output, Corrections, Properties, RF Port
Remote Command:	[:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT:RFIO1 SOURce ANALyzer BOTH [:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT:RFIO1?
Example:	:CORR:CSET:RF:PORT:RFIO1 BOTH
Preset:	Both
State Saved:	Saved in State
Help Map ID:	30004

Correct Source

Sets the corrections for the RFIO1 port to be applied to the source.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO1 SOUR
Readback:	"Correct Source"
Help Map ID:	30005

Correct Analyzer

Sets the corrections for the RFIO1 port to be applied to the test set.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO1 ANAL
Readback:	"Correct Analyzer"
Help Map ID:	30006

Correct Source and Analyzer

Sets the corrections for the RFIO1 port to be applied to both the source and the test set.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO1 BOTH
Readback:	"Correct Source and Analyzer"
Help Map ID:	30007

Input/Output

RFIO2

The port that the current corrections will be applied to. Pressing this key again allows the user access to the menu for specifying which internal device the corrections for RFIO 2 will be applied to.

Key Path:	Input/Output, Corrections, Properties, RF Port
Remote Command:	[:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT:RFIO2 SOURce ANALyzer BOTH [:SENSe] :CORRection:CSET [1] 2 3 4 5 6 :RF:PORT:RFIO2?
Example:	:CORR:CSET:RF:PORT:RFIO2 BOTH
Preset:	Both
State Saved:	Saved in State
Help Map ID:	30008

Correct Source

Sets the corrections for the RFIO2 port to be applied to the source.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO2 SOUR
Readback:	"Correct Source"
Help Map ID:	30009

Correct Analyzer

Sets the corrections for the RFIO2 port to be applied to the test set.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO2 ANAL
Readback:	"Correct Analyzer"
Help Map ID:	30010

Correct Source and Analyzer

Sets the corrections for the RFIO2 port to be applied to both the source and the test set.

Key Path:	Input/Output, Corrections, Properties, RF Port
Example:	:CORR:CSET:RF:PORT:RFIO2 BOTH
Readback:	"Correct Source and Analyzer"
Help Map ID:	30011

Edit

Invokes the integrated editing facility for this correction set.

When entering the menu, the editor window turns on, the selected correction is turned **On**, **Apply Corrections** is set to **On**, the amplitude scale is set to **Log**, and the Amplitude Correction (“Ampcor”) trace is displayed. The actual, interpolated correction trace is shown in green for the selected correction. Note that since the actual interpolated correction is shown, the correction trace may have some curvature to it. This trace represents only the correction currently being edited, rather than the total, accumulated amplitude correction for all amplitude corrections which are currently on, although the total, accumulated correction for all corrections which are turned on is still applied to the data traces.

Because corrections data is always in dB, but the Y-axis of the test set is in absolute units, it is necessary to establish a reference line for display of the Corrections data. The reference line is halfway up the display and represents 0 dB of correction. It is labeled “0 dB CORREC”. It is drawn in blue.

Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it. By definition all points are connected. If a gap is desired for corrections data, enter 0 dB.

Note that a well-designed Corrections array should start at 0 dB and end at 0 dB. This is because whatever the high end point is will be extended to the top frequency of the instrument, and whatever the low end point is will be extended down to 0 Hz. So for a Corrections array to have no effect outside its range, you should start and end the array at 0 dB.

NOTE The table editor will only operate properly if the test set is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and it will be sluggish during compute-intensive operations like narrow-span FFT sweeps.

When exiting the edit menu (by using the **Return** key or by pressing an instrument front-panel key), the editor window turns off and the Ampcor trace is no longer displayed; however, **Apply Corrections** remains **On**, any correction that was on while in the editor remains on, and the amplitude scale returns to its previous setting.

Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the test set application, which means they will survive a power cycle.

Key Path:	Input/Output, Corrections
Initial S/W Revision:	A.02.00
Help Map ID:	29983

Navigate

Lets you move through the table to edit the desired point.

Key Path:	Input/Output, Corrections, Edit
Notes:	There is no value readback on the key

Input/Output

Min:	1
Max:	2000
Initial S/W Revision:	A.02.00
Help Map ID:	3545

Frequency

Lets you edit the frequency of the current row.

Key Path:	Input/Output, Corrections, Edit
Notes:	There is no value readback on the key.
Min:	0
Max:	1 THz
Initial S/W Revision:	A.02.00
Help Map ID:	3572

Amplitude

Lets you edit the Amplitude of the current row.

Key Path:	Input/Output, Corrections, Edit
Notes:	There is no value readback on the key.
Min:	-1000 dB
Max:	1000 dB
Initial S/W Revision:	A.02.00
Help Map ID:	3574

Insert Point Below

Inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

Key Path:	Input/Output, Corrections, Edit
Initial S/W Revision:	A.02.00
Help Map ID:	3576

Delete Point

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none)

will be selected.

Key Path:	Input/Output, Corrections, Edit
Initial S/W Revision:	A.02.00
Help Map ID:	3581

Delete Correction

Deletes the correction values for this set. When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete correction. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter.

Key Path:	Input/Output, Corrections
Remote Command:	[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :DELete
Example:	CORR:CSET:DEL CORR:CSET1:DEL CORR:CSET4:DEL
Notes:	Pressing this key when no corrections are present is accepted without error.
Initial S/W Revision:	A.02.00
Help Map ID:	3115

Apply Corrections

Applies amplitude corrections which are marked as ON to the measured data. If this is set to OFF, then no amplitude correction sets will be used, regardless of their individual on/off settings. If set to ON, the corrections that are marked as ON (see “[Correction On/Off](#)” on page 819) are used.

Key Path:	Input/Output, Corrections
Remote Command:	[:SENSE] :CORRection:CSET:ALL [:STATe] ON OFF 1 0 [:SENSE] :CORRection:CSET:ALL [:STATe] ?
Example:	SENS:CORR:CSET:ALL OFF This command makes sure that no amplitude corrections are applied, regardless of their individual on/off settings.
Preset:	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	3102

Delete All Corrections

Erases all correction values for all 4 Amplitude Correction sets.

Input/Output

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all corrections. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter.

Key Path:	Input/Output, Corrections
Remote Command:	<code>[:SENSE] :CORRection:CSET:ALL:DELeTe</code>
Example:	<code>CORR:CSET:ALL:DEL</code>
Initial S/W Revision:	A.02.00
Help Map ID:	3119

Remote Correction Data Set Commands

Set (Replace) Data (Remote Command Only)

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command will totally replace all existing correction points in the specified set.

An Ampcor array can contain 2000 points maximum.

Remote Command:	<code>[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :DATA <freq>, <ampl>, . . .</code> <code>[:SENSE] :CORRection:CSET [1] 2 3 4 5 6 :DATA?</code>
Example:	<code>CORR:CSET1:DATA 10000000,-1.0,20000000,1.0</code> This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 1.
Preset:	Empty after Restore Input/Output Defaults. Survives a shutdown or restart of test set application (including a power cycle).
State Saved:	Saved in instrument state.
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.02.00
Help Map ID:	0

Merge Correction Data (Remote Command Only)

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas. The difference between this command and Set Data is that this merges new correction points into an existing set.

Any new point with the same frequency as an existing correction point will replace the existing point's

amplitude with that of the new point.

An Ampcor array can contain 2000 total points, maximum.

Remote Command:	<code>[:SENSe] :CORRection:CSET [1 2 3 4 5 6 :DATA:MERGe <freq>, <ampl>, ...</code>
Example:	<code>CORR:CSET1:DATA:MERGE 15000000,-5.0,25000000,5.0</code> This adds two correction points at (15 MHz, -5.0 dB) and (25 MHz, 5.0 dB) to whatever values already exist in correction set 1.
Preset:	Empty after Restore Input/Output Defaults. Survives shutdown/restart of test set application (including power cycle)
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.02.00
Help Map ID:	0

Freq Ref In

Specifies the frequency reference as being the internal reference, external reference or sensing the presence of an external reference.

When the frequency reference is set to internal, the internal 10 MHz reference is used even if an external reference is connected.

When the frequency reference is set to external, the instrument will use the external reference. However, if there is no external signal present, or it is not within the proper amplitude range, a condition error message is generated. When the external signal becomes valid, the error is cleared.

If Sense is selected, the instrument checks whether a signal is present at the external reference connector and will automatically switch to the external reference when a signal is detected. When no signal is present, it automatically switches to the internal reference. No message is generated as the reference switches between external and internal. The monitoring of the external reference occurs approximately on 1 millisecond intervals, and never occurs in the middle of a measurement acquisition, only at the end of the measurement (end of the request).

If for any reason the instrument's frequency reference is not able to obtain lock, Status bit 2 in the Questionable Frequency register will be true and a condition error message is generated. When lock is regained, Status bit 2 in the Questionable Frequency register will be cleared and the condition error will be cleared.

If an external frequency reference is being used, you must enter the frequency of the external reference if it is not exactly 10 MHz. The External Ref Freq key is provided for this purpose.

Key Path:	Input/Output
-----------	--------------

Input/Output

Remote Command:	<code>[:SENSe] :ROSCillator :SOURce :TYPE</code> <code>INTernal EXTernal SENSe</code> <code>[:SENSe] :ROSCillator :SOURce :TYPE?</code>
Preset:	This is unaffected by a Preset but is set to SENSe on a "Restore Input/Output Defaults" or "Restore System Defaults->All".
State Saved:	Saved in instrument state.
Status Bits/OPC dependencies:	STATus:QUEStionable:FREQuency bit 2 set if unlocked.
Backwards Compatibility Notes:	1. Freq Ref In was not saved in state in the legacy instruments. It is a part of state in the X-Series.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3124

Remote Command:	<code>[:SENSe] :ROSCillator :SOURce?</code>
Notes:	The query <code>[SENSe]:ROSCillator:SOURce?</code> returns the current switch setting. This means: <ol style="list-style-type: none"> 1. If it was set to SENSe but there is no external reference so the instrument is actually using the internal reference, then this query returns INTernal and not SENSe. 2. If it was set to SENSe and there is an external reference present, the query returns EXTernal and not SENSe. 3. If it was set to EXTernal, then the query returns "EXTernal" 4. If it was set to INTernal, then the query returns "INTernal"
Preset:	SENSe
Backwards Compatibility Notes:	The query <code>[:SENSe] :ROSCillator :SOURce?</code> was a query-only command in ESA which always returned whichever reference the instrument was using. The instrument automatically switched to the ext ref if it was present. In PSA (which had no sensing) the command <code>[:SENSe] :ROSCillator :SOURce</code> set the reference (INT or EXT), so again its query returned the actual routing. Thus the query form of this command is 100% backwards compatible with both instruments.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	<code>[:SENSe] :ROSCillator :SOURce INTernal EXTernal</code>
Notes:	For PSA compatibility the command form is provided and is directly mapped to <code>[:SENSe] :ROSCillator :SOURce :TYPE</code>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Sense

The external reference is used if a valid signal is sensed at the Ext Ref input. Otherwise the internal reference is used.

Key Path:	Input/Output, Freq Ref In
Example:	:ROSC:SOUR:TYPE SENS
Readback:	Sense
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3127

Internal

The internal reference is used.

Key Path:	Input/Output, Freq Ref In
Example:	:ROSC:SOUR:TYPE INT
Readback:	Internal
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3128

External

The external reference is used.

Key Path:	Input/Output, Freq Ref In
Example:	:ROSC:SOUR:TYPE EXT
Readback:	External
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3129

Ext Ref Freq

This key tells the test set the frequency of the external reference. When the external reference is in use (either because the reference has been switched to External or because the Reference has been switched to Sense and there is a valid external reference present) this information is used by the test set to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So it is important to get it close, or you risk an unlock condition.

Note that this value only affects the instrument's ability to lock. It does not affect any calculations or measurement results. See "Freq Offset" in the Frequency section for information on how to offset

Input/Output

frequency values.

Key Path:	Input/Output, Freq Ref In
Remote Command:	[:SENSe] :ROSCillator :EXTernal :FREQuency <freq> [:SENSe] :ROSCillator :EXTernal :FREQuency?
Example:	ROSC:EXT:FREQ 20 MHz sets the external reference frequency to 20 MHz, but does not select the external reference. ROSC:SOUR:TYPE EXT selects the external reference.
Notes:	Still available with Internal selected, to allow setup for when External is in use.
Preset:	This is unaffected by a Preset but is set to 10 MHz on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
Min:	CXA: 10 MHz EXA: 10 MHz or 13 MHz, depending on whether N9010A-R13 is licensed MXA: 1 MHz PXA: 1 MHz 1 MHz
Max:	CXA: 10 MHz EXA: 10 MHz MXA: 50 MHz PXA: 50 MHz 50 MHz
Default Unit:	Hz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3130

RF Output & Test Set Config

This menu and all of its submenus are only available in the EXT (E6607A/B/C).

Access the menu to select the front-panel RF output port to be the test set signal output. If RF is already selected, pressing this key accesses the RF output setup functions.

EXT (E6607A/B)

The RF Output & Test Set Config key allows you to set the RF Output Port and multipoint adapter unit which is connected to the EXT by USB for download of calibration data and additional control.

EXT (E6607C)

The RF Output & Test Set Config key allows you to set the RF Output Port and MPA settings.

Key Path:	Input/Output
Dependencies:	Only available in EXT
Preset:	All settings under this key are returned to their default state when Restore Input/Output Defaults is pressed.
State Saved:	Saved in State
Initial S/W Revision:	A.10.00
Help Map ID:	30017

RF Output

Specifies the RF Output Port used.

Switching from the RF Output port to one of the RFIO ports changes the transmitter performance of the instrument.

Key Path:	Input/Output, RF Output & Test Set Config
Remote Command:	[:SENSE] :FEED:RF:PORT:OUTPut RFOut RFIO1 RFIO2 [:SENSE] :FEED:RF:PORT:OUTPut?
Example:	:FEED:RF:PORT:OUTP RFIO1
Dependencies:	Only available in EXT
Preset:	This is unaffected by Mode Preset but is set to RFOut on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved:	Saved in State
Readback Text:	The current RF Output Port selected is read back to this key
Initial S/W Revision:	A.05.01
Help Map ID:	30013

RF Out

The RF port that will be used for the current output

Key Path:	Input/Output, RF Output & Test Set Config, RF Output
Example:	:FEED:RF:PORT:OUTP RFO
Dependencies:	Only available in EXT
ReadBack:	RF Output
Initial S/W Revision:	A.05.01

Input/Output

Help Map ID:	30014
--------------	-------

RFIO1

The RF port that will be used for the current output

Key Path:	Input/Output, RF Output & Test Set Config, RF Output
Example:	:FEED:RF:PORT:OUTP RFIO1
Dependencies:	Only available in EXT.
ReadBack:	RFIO1
Initial S/W Revision:	A.05.01
Help Map ID:	30015

RFIO2

The RF port that will be used for the current output

Key Path:	Input/Output, RF Output & Test Set Config, RF Output
Example:	:FEED:RF:PORT:OUTP RFIO2
Dependencies:	Only available in EXT.
ReadBack:	RFIO2
Initial S/W Revision:	A.05.01
Help Map ID:	30016

Multiport Adapter

The Multiport Adapter key allows you to set the multiport adapter unit which is connected to the EXT by USB for download of calibration data and additional control.

Multiport Adapter is only available in the EXT (E6607A/B/C), and is blanked for other models.

EXT (E6607A/B)

The Multiport Adapter key will not be displayed if the multiport adapter unit is not connected to the EXT by USB.

EXT (E6607C)

The MPA is integrated into the instrument; therefore, the Multiport Adapter key is always displayed.

See [“More Information” on page 837](#)


Key Path:	Input/Output, RF Output & Test Set Config
-----------	--

Dependencies:	Multiport adapter is only available for EXT (E6607A/B) model, and is blanked for other models. Multiport adapter unit is connected to EXT by USB for download of calibration data and additional control.
Preset:	All settings under this key are returned to their default state when Restore Input/Output Defaults is pressed.
State Saved:	All settings under this key, are remembered when you unplugged the multiport adapter unit USB connection, so that when multiport adapter unit USB is connected again, all the multiport adapter functions will retain their previous settings, with the exception of Multiport Adapter which is set to OFF.
Initial S/W Revision:	A.10.00
Help Map ID:	0

More Information

Multiport adapter in the EXT (E6607A/B) supports the Agilent E6617A, which provides a USB connection for download of calibration data and additional control.

The connection diagram for Agilent E6617A switch unit is:

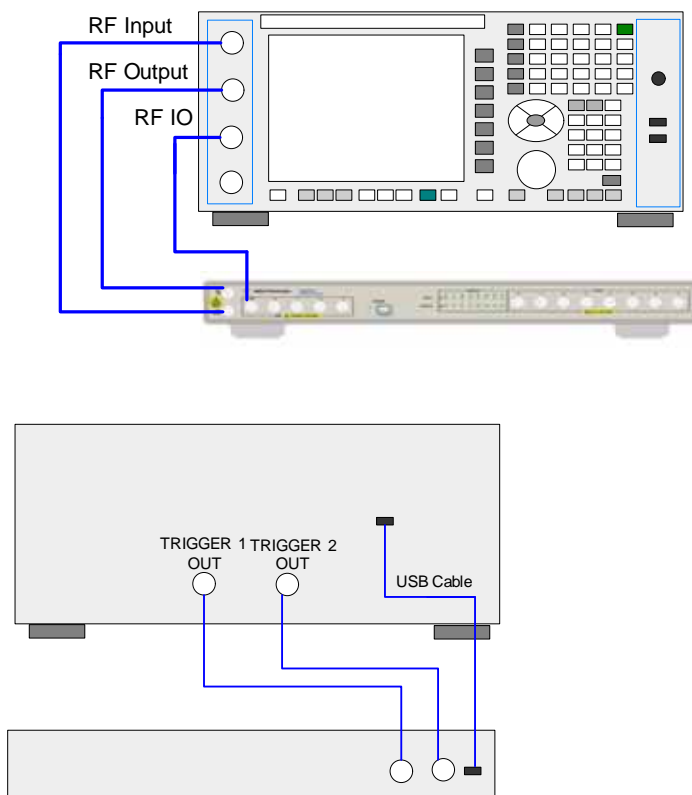

Multiport Adapter On/Off

Turning the Multiport Adapter On means that the multiport adapter unit is connected and it will be used for the measurements or source.

Input/Output

Turning the Multiport Adapter Off means that the multiport adapter unit will not be used for the analyzer or source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter
Remote Command:	[:SENSE] :MPADapter [:STATE] ON OFF 1 0 [:SENSE] :MPADapter [:STATE] ?
Example:	:MPAD ON
Dependencies:	Only when the multiport adapter unit is connected to the EXT by USB, it is appeared. Otherwise, it will not be displayed and set to OFF. If the current RF Input port is not RF Input, turn Multiport Adapter to On , an error message is generated: “-221, Settings conflict; RFIO1 or RFIO2 Port unavailable when Multiport Adapter is ON”.
Preset:	This is unaffected by Mode Preset but is set to OFF on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
Initial S/W Revision:	A.10.00
Help Map ID:	0

Input Port

Specifies the multiport adapter unit input port used.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter
Remote Command:	[:SENSE] :MPADapter :PORT :INPut OFF RFIO0 RFIO1 RFIO2 RFIO3 RFIO4 RFIO5 RFIO6 RFIO7 [:SENSE] :MPADapter :PORT :INPut ?
Example:	:MPAD :PORT :INP RFIO1
Dependencies:	This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter is set to the On state.
Preset:	This is unaffected by Mode Preset but is set to RFIO0 on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved:	Saved in State
Readback Text:	The current Multiport Adapter Input Port selected is read back to this key
Backwards Compatibility SCPI Notes:	The commands above are included for ESU compatibility
Initial S/W Revision:	A.10.00
Help Map ID:	0

OFF

Specifies using the multiport adapter input port OFF.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe] :MPADapter:PORT:INPut OFF
ReadBack:	OFF
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO0

Specifies using the multiport adapter input port RFIO 0.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe] :MPADapter:PORT:INPut RFIO0
ReadBack:	RFIO 0
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO1

Specifies using the multiport adapter input port RFIO 1.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO1
ReadBack:	RFIO 1
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO2

Specifies using the multiport adapter Input port RFIO 2.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO2
ReadBack:	RFIO 2
Initial S/W Revision:	A.10.00
Help Map ID:	0

Input/Output

RFIO3

Specifies using the multiport adapter input port RFIO 3.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO3
ReadBack:	RFIO 3
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO4

Specifies using the multiport adapter input port RFIO 4.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO4
ReadBack:	RFIO 4
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO5

Specifies using the multiport adapter input port RFIO 5.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port, Page 2
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO5
ReadBack:	RFIO 5
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO6

Specifies using the multiport adapter input port RFIO 6.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port, Page 2
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO6
ReadBack:	RFIO 6
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO7

Specifies using the multiport adapter input port RFIO 7.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Input Port, Page 2
Example:	[:SENSe]:MPADapter:PORT:INPut RFIO7
ReadBack:	RFIO 7
Initial S/W Revision:	A.10.00
Help Map ID:	0

Output Port

Specifies the multiport adapter unit output ports used. The Output Port key lets you set eight outputs ON/OFF. See the table below for bitmapping.

Multiport Adapter Output Port	Bit
RFIO0	0
RFIO1	1
RFIO2	2
RFIO3	3
RFIO4	4
RFIO5	5
RFIO6	6
RFIO7	7

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter
Remote Command:	[:SENSe]:MPADapter:PORT:OUTPut:BITMap <integer> [:SENSe]:MPADapter:PORT:OUTPut:BITMap?
Example:	:MPAD:PORT:OUTPut:BITMap 1
Notes:	<p>Each bit is associated with a multiport adapter output port; as shown in the bitmap table above. The value of a bit is '0' if the corresponding multiport adapter output port is not selected, and '1' if it is. (For example, to select multiport adapter RFIO7 output port, set Bit 7 to '1'.)</p> <p>The field requires a decimal entry. For example, if multiport adapter selects the RFIO 7 output port and RFIO 0 output port, the Bit Mask for this combination is 10000001, and the value of this parameter is the decimal number '129'.</p>

Input/Output

Dependencies:	This menu selection does not have any effect unless Input/Output, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state and Input/Output, RF Output & Test Set Config, RF Output is RF Output port. When Input/Output, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state and Input/Output, RF Output & Test Set Config, RF Output is set to RFIO1 or RFIO2 port, the Multiport Adapter GPS Output Port will be used.
Preset:	This is unaffected by Mode Preset but is set to "1" on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved:	Saved in State
Backwards Compatibility SCPI Notes:	The commands above are included for ESU compatibility
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO0

Turn on or off the multiport adapter RFIO0 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
Preset:	Not affected by a Preset. Set to ON pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO1

Turn on or off the multiport adapter RFIO1 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO2

Turn on or off the multiport adapter RFIO2 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
-----------	--

Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO3

Turn on or off the multiport adapter RFIO3 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO4

Turn on or off the multiport adapter RFIO4 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO5

Turn on or off the multiport adapter RFIO5 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

Input/Output

RFIO6

Turn on or off the multiport adapter RFIO6 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port, Page 2
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO7

Turn on or off the multiport adapter RFIO7 output port.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Output Port, Page 2
Preset:	Not affected by a Preset. Set to OFF by pressing System > Restore Defaults > Input/Output Settings or System > Restore Defaults > All.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

Preamp On/Off

Turn on or off the preamplifier of the multiport adapter input path. It will provide one fix gain for the multiport adapter input path.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter
Remote Command:	[:SENSE] :MPADapter:GAIN [:STATE] ON OFF 1 0 [:SENSe] :MPADapter:GAIN [:STATE] ?
Example:	:MPAD:GAIN ON
Dependencies:	This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state.
Preset:	This is unaffected by Mode Preset but is set to OFF on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.0
Help Map ID:	0

Amplitude Corrections

Corrections

Multiport Adapter Amplitude Corrections arrays can be entered by the user, sent over SCPI, or loaded from a file. The Multiport Adapter correction supports 16 separate Corrections arrays, each of which can contain up to 2000 points. They can be turned on and off individually and any or all can be on at the same time. Multiport Adapter has multiple Input/Output RF ports can have different corrections applied to the different ports. The correction data is applied to incoming signals as well as transmitted signals and is in the form of a list of spot frequencies and amplitude correction levels.

See section “[Amplitude Corrections](#)” on page 845 for more information on Corrections.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter
Mode:	Sequence Analyzer, I/Q Analyzer
Dependencies:	<p>This key will only appear if you have the proper option installed in your instrument.</p> <p>Multiport Adapter Amplitude correction may not be available in all modes; if a mode does not support amplitude correction, the Correction On/Off and Apply Corrections On/Off keys should be grayed and un-accessible.</p> <p>This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state.</p>
Preset:	Multiport Adapter Corrections arrays are reset (deleted) by Restore Input/Output Defaults. They survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport adapter, Corrections
Mode:	Sequence Analyzer, I/Q Analyzer
Notes:	The selected correction is remembered even when not in the correction menu
Dependencies:	This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state.
Preset:	Set to Correction 1 by Restore Input/Output Defaults

Input/Output

Readback:	Correction 1 Correction 2 Correction 3 Correction 4 Correction 5 Correction 6 Correction 7 Correction 9 Correction 9 Correction 10 Correction 11 Correction 12
Initial S/W Revision:	A.10.00
Help Map ID:	0

Correction On/Off

Turning the Selected Correction on allows the values in it to be applied to the data. This also automatically turns on "Apply Corrections" (sets it to ON), otherwise the correction would not take effect.

A new sweep is initiated if an amplitude correction is switched on or off. Note that changing, sending or loading corrections data does NOT directly initiate a sweep, however in general these operations will turn corrections on, which DOES initiate a sweep.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 [:STATe] ON OFF 1 0 [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 [:STATe] ?
Example:	SENS:MPAD:CORR:CSET ON
Dependencies:	<p>This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state. This menu selection is hidden if the currently active measurement or mode does not support amplitude correction.</p> <p>Turning this on automatically turns on "Apply Corrections"</p> <p>Only the first correction array (Correction 1) supports antenna units. When this array is turned on, and it contains an Antenna Unit other than "None", the Y Axis Unit of the analyzer is forced to that Antenna Unit. All other Y Axis Unit choices are grayed out.</p> <p>Note that this means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include.ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.</p> <p>This command will generate an "Option not available" error unless you have the proper option installed in your instrument.</p>
Preset:	Not affected by a Preset. Set to OFF by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Properties

Accesses a menu that lets you set the properties of the selected correction.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Dependencies:	This menu selection does not have any effect unless Input/Output, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state. This menu selection is hidden if the currently active measurement or mode does not support amplitude correction.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
Notes:	The selected correction is remembered even when not in the correction menu
Dependencies:	This menu selection does not have any effect unless Input/Output, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state
Preset:	Set to Correction 1 by Restore Input/Output Defaults.
Readback:	Correction 1 Correction 2 Correction 3 Correction 4 Correction 5 Correction 6 Correction 7 Correction 9 Correction 9 Correction 10 Correction 11 Correction 12 Correction 13 Correction 14 Correction 15 Correction 16
Initial S/W Revision:	A.10.00
Help Map ID:	0

Antenna Unit

For devices (like antennae) which make measurements of field strength or flux density, the correction array should contain within its values the appropriate conversion factors such that, when the data on the analyzer is presented in dB μ V, the display is calibrated in the appropriate units. The "Antenna Unit" used for the conversion is contained within the corrections array database. It may be specified by the user or loaded in from an external file or SCPI.

When an array with an Antenna Unit other than "None" is turned on, the Y Axis Unit of the analyzer is forced to that unit. When this array is turned on, and it contains an Antenna Unit other than "None", the Y Axis Unit of the analyzer is forced to that Antenna Unit., and all other Y Axis Unit choices are grayed out.

Antenna Unit does not appear in all Modes that support Corrections. Only the modes listed in the Mode row of the table below support Antenna Units.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
Mode:	SA

Input/Output

Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :ANTenna [:UNIT] GAUSS PTESLa UVM UAM NOConversion [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :ANTenna [:UNIT] ?
Example:	:MPAD:CORR:CSET:ANT GAUS
Dependencies:	Only the first correction array (Correction 1) supports antenna units. Note that this means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include.ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated. Forceful message -250.3004
Preset:	Unaffected by Preset. Set to NOC by Restore Input/Output Defaults
State Saved:	Saved in State
Initial S/W Revision:	A.10.00
Help Map ID:	0

dB μ V/m

Sets the antenna unit to dB μ V/m. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dB μ V/m and all other Y Axis Unit selections will be grayed out.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, Antenna Unit
Example:	:MPAD:CORR:CSET2:ANT UVM
Readback:	"dB μ V/m"
Initial S/W Revision:	A.10.00
Help Map ID:	0

dB μ A/m

Sets the antenna unit to dB μ A/m. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dB μ A/m and all other Y Axis Unit selections will be grayed out.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, Antenna Unit
Example:	:MPAD:CORR:CSET2:ANT UVA
Readback:	" dB μ A/m"
Initial S/W Revision:	A.10.00
Help Map ID:	0

dBpT

Sets the antenna unit to dBpT. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dBpT and all other Y Axis Unit selections will be grayed out.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, Antenna Unit
Example:	:MPAD:CORR:CSET3:ANT PTES
Readback:	"dBpT"
Initial S/W Revision:	A.10.00
Help Map ID:	0

dBG

Sets the antenna unit to dBG. If this correction is turned on, and Apply Corrections is on, the Y Axis Unit will then be forced to dBG and all other Y Axis Unit selections will be grayed out.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, Antenna Unit
Example:	:MPAD:CORR:CSET:ANT GAUS
Readback:	" dBG"
Initial S/W Revision:	A.10.00
Help Map ID:	0

None

Selects no antenna unit for this Correction set. Thus no Y Axis unit will be forced.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, Antenna Unit
Example:	:MPAD:CORR:CSET4:ANT NOC
Readback:	"None"
Initial S/W Revision:	A.10.00
Help Map ID:	0

Frequency Interpolation

This setting controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

See [“Interpolation” on page 850](#)

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
-----------	--

Input/Output

Remote Command:	[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:X:SPACing LINear LOGarithmic [:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:X:SPACing?
Example:	:MPAD:CORR:CSET:X:SPAC LIN
Dependencies:	This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state.
Preset:	Unaffected by a Preset. Set to Linear by Restore Input/Output Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.00
Help Map ID:	0


Interpolation

For each bucket processed by the application, all of the correction factors at the frequency of interest (center frequency of each bucket) are summed and added to the amplitude. All trace operations and post processing treat this post-summation value as the true signal to use.


To effect this correction, the goal, for any particular start and stop frequency, is to build a correction trace, whose number of points matches the current Sweep Points setting of the instrument, which will be used to apply corrections on a bucket by bucket basis to the data traces.

For amplitudes that lie between two user specified frequency points, we interpolate to determine the amplitude value. You may select either linear or logarithmic interpolation between the frequencies.


If we interpolate on a log scale, we assume that the line between the two points is a straight line on the log scale. For example, let's say the two points are (2,4) and (20,1). A straight line between them on a log scale looks like:

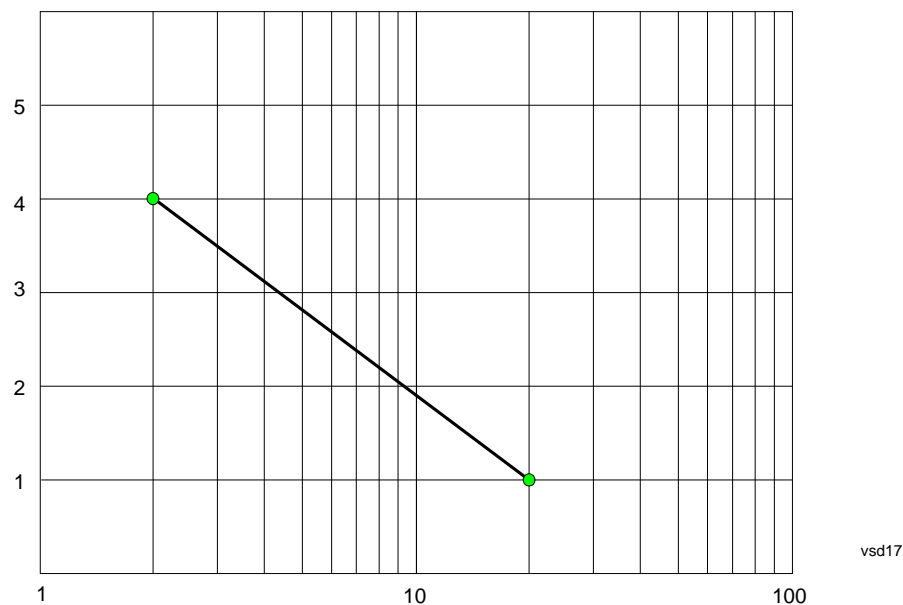

On a linear scale (like that of the spectrum analyzer), this translates to:

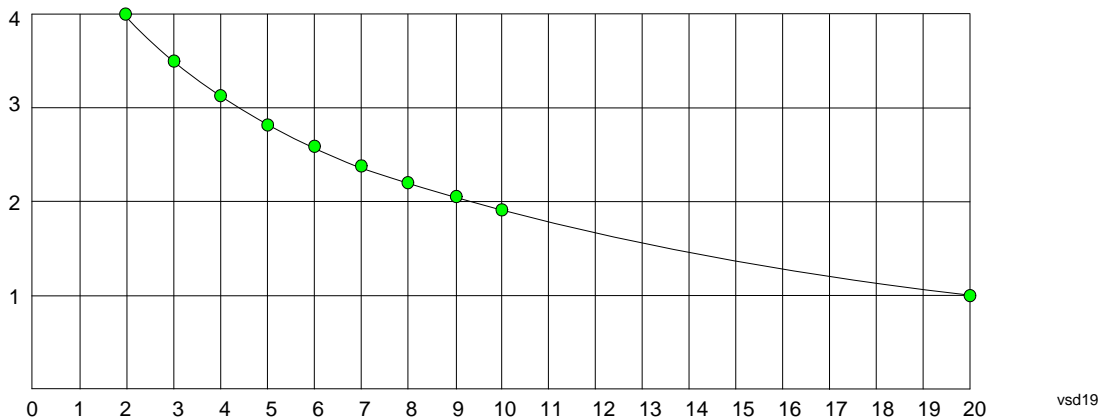

On the other hand, if we interpolate on a linear scale, we assume that the two points are connected by a straight line on the linear scale, as below:

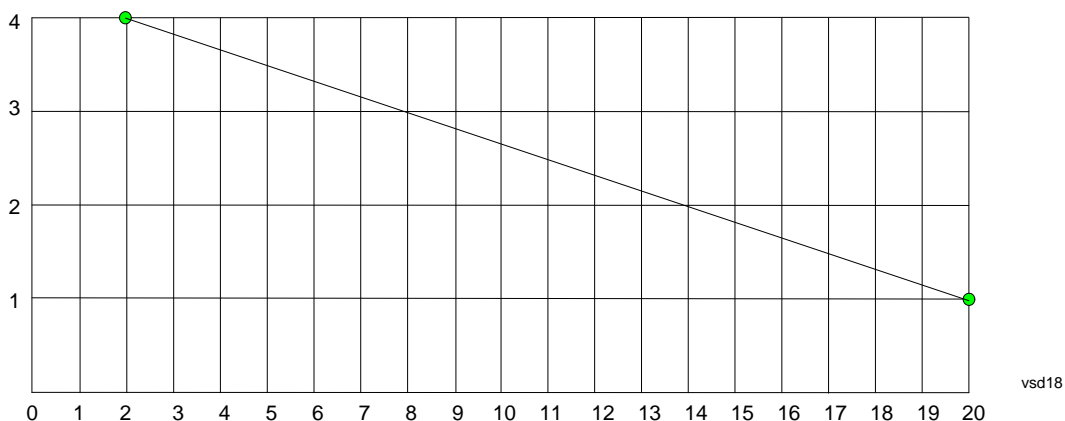

The correction to be used for each bucket is taken from the interpolated correction curve at the center of the bucket.

Description

Sets an ASCII description field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
Remote Command:	[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DESCription "text" [:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DESCription?
Example:	:MPAD:CORR:CSET:DESC "11941A Antenna correction"
Notes:	45 chars max; may not fit on display if max chars used
Dependencies:	This menu selection does not have any effect unless Input/Output, More, RF Output & Test Set Config, Multiport Adapter, Multiport Adapter is set to the On state.

Input/Output

Preset:	Unaffected by a Preset. Set to empty by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Comment

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :COMMENT "text" [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :COMMENT?
Example:	:MPAD:CORR:CSET:COMM "this is a comment"
Notes:	45 chars max; may not fit on display if max chars used
Preset:	Unaffected by Preset. Set to empty by Restore Input/Output Defaults
State Saved:	Saved in instrument state
Initial S/W Revision:	A.10.00
Help Map ID:	0

RF Port

Maps one of the sets of corrections to one of the IO ports.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties
Mode:	SEQAN
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT RFIO RFIO1 RFIO2 RFIO3 RFIO4 RFIO5 RFIO6 RFIO7 [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT?
Example:	:MPAD:CORR:CSET:RF:PORT RFIO0
Notes:	
Dependencies:	Only available in EXT
Couplings:	
Preset:	Unaffected by Preset. Set to RF by Restore Input/Output Defaults

State Saved:	Saved in State
Backwards Compatibility SCPI:	
Initial S/W Revision:	A.10.00
Help Map ID:	0

RFIO0

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 0 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO0 SOURce ANALyzer BOTH [:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO0?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO0 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 0 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 0
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO0 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 0 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 0
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO0 ANAL

Input/Output

Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 0 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 0
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO0 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO1

The port to which the current corrections will be applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 1 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO1 SOURce ANALyzer BOTH [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO1?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO1 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 1 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 1
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO1 SOUR
Readback:	"Correct Source"

Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 1 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 1
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO1 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 1 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 1
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO1 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO2

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 2 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO2 SOURCE ANALyzer BOTH [:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO2?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO2 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0

Input/Output

Help Map ID:	0
--------------	---

Correct Source

Sets the corrections for the multiport adapter RFIO 2 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 2
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO2 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 2 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 2
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO2 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 2 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 2
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO2 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO3

The port to which the current corrections will be applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter

RFIO 3 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO3 SOURce ANALyzer BOTH [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO3?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO3 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 3 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 3
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO3 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 3 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 3
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO3 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Input/Output

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 3 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 3
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO3 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO4

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 4 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO4 SOURce ANALyzer BOTH [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO4?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO4 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 4 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 4
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO4 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 4 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 4
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO4 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 4 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 4
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO4 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO5

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 5 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port
Remote Command:	[:SENSE] :MPADapter:CORREction:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO5 SOURCE ANALyzer BOTH [:SENSE] :MPADapter:CORREction:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO5?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO5 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Input/Output

Correct Source

Sets the corrections for the multiport adapter RFIO 5 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 5
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO5 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 5 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 5
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO5 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 5 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 5
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO5 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO6

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 6 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, Page 2
-----------	---

Remote Command:	[:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO6 SOURce ANALyzer BOTH [:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :RF:PORT:RFIO6?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO6 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 6 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 6
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO6 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 6 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 6
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO6 ANAL
Readback:	"Correct Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 6 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 6
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO6 BOTH

Input/Output

Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

RFIO7

The port to which the current corrections are applied. Pressing this key again allows the user access to the menu for specifying to which internal device and multiport adapter RF path the corrections for multiport adapter RFIO 7 are applied.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, Page 2
Remote Command:	[[:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7 SOURce ANALyzer BOTH [:SENSe]:MPADapter:CORRection:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7?
Example:	:MPAD:CORR:CSET:RF:PORT:RFIO7 BOTH
Preset:	Both
State Saved:	Saved in State
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source

Sets the corrections for the multiport adapter RFIO 7 port to be applied to the source.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 7
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7 SOUR
Readback:	"Correct Source"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Analyzer

Sets the corrections for the multiport adapter RFIO 7 port to be applied to the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 7
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7 ANAL
Readback:	"Correct Analyzer"

Initial S/W Revision:	A.10.0
Help Map ID:	0

Correct Source and Analyzer

Sets the corrections for the multiport adapter RFIO 7 port to be applied to both the source and the analyzer.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Properties, RF Port, RFIO 7
Example:	:MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:RF:PORT:RFIO7 BOTH
Readback:	"Correct Source and Analyzer"
Initial S/W Revision:	A.10.0
Help Map ID:	0

Table Editor

Edit

Invokes the integrated editing facility for this correction set. See description in section [“Table Editor” on page 863](#).

When entering the menu, the editor window turns on, the selected correction is turned **On**, **Apply Corrections** is set to **On**, the amplitude scale is set to **Log**, and the Amplitude Correction (“Ampcor”) trace is displayed. The actual, interpolated correction trace is shown in green for the selected correction. Note that since the actual interpolated correction is shown, the correction trace may have some curvature to it. This trace represents only the correction currently being edited, rather than the total, accumulated amplitude correction for all amplitude corrections which are currently on, although the total, accumulated correction for all corrections which are turned on is still applied to the data traces.

Because corrections data is always in dB, but the Y-axis of the analyzer is in absolute units, it is necessary to establish a reference line for display of the Corrections data. The reference line is halfway up the display and represents 0 dB of correction. It is labeled “0 dB CORREC”. It is drawn in blue. (0,0,255) and is three pixels high. The green correction trace is drawn after all other traces and this reference blue line, so it sits “on top” of them.

Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it. By definition all points are connected. If a gap is desired for corrections data, enter 0 dB.

Note that a well-designed Corrections array should start at 0 dB and end at 0 dB. This is because whatever the high end point is will be extended to the top frequency of the instrument, and whatever the low end point is will be extended down to 0 Hz. So for a Corrections array to have no effect outside its range, you should start and end the array at 0 dB.

NOTE

The table editor will only operate properly if the analyzer is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and it will be sluggish during compute-intensive operations like narrow-span FFT sweeps.

When exiting the edit menu (by using the **Return** key or by pressing an instrument front-panel key), the editor

Input/Output

window turns off and the Ampcor trace is no longer displayed; however, **Apply Corrections** remains **On**, any correction that was on while in the editor remains on, and the amplitude scale returns to its previous setting.

Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the analyzer application, which means they will survive a power cycle.

When editing a correction, the editor remembers which correction and which element in the correction array you were editing, and returns you to that correction and that element when you return to the editor after leaving it.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Initial S/W Revision:	A.10.00
Help Map ID:	0

Navigate

Lets you move through the table to edit the desired point.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
Notes:	There is no value readback on the key
Min:	1
Max:	2000
Initial S/W Revision:	A.10.00
Help Map ID:	0

Frequency

Lets you edit the frequency of the current row.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
Notes:	There is no value readback on the key.
Min:	0
Max:	1 THz
Initial S/W Revision:	A.10.00
Help Map ID:	0

Amplitude

Lets you edit the Amplitude of the current row.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
-----------	--

Notes:	There is no value readback on the key.
Min:	-1000 dB
Max:	1000 dB
Initial S/W Revision:	A.10.00
Help Map ID:	0

Insert Point Below

Inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
Initial S/W Revision:	A.10.00
Help Map ID:	0

Delete Point

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
Initial S/W Revision:	A.10.00
Help Map ID:	0

Scale X Axis

Matches the X Axis to the selected Correction, as well as possible. Sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Correction. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency, so that span exceeds this range by one graticule division on either side. If in zero-span, or there is no data in the Ampcor table, or the frequency range represented by the table is zero, no action is taken. Standard clipping rules apply if the value in the table is outside the allowable range for the X axis.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections, Edit
Dependencies:	If either the first or last point in the array is outside the frequency range of the current input, an error message is generated: “-221. Settings conflict; Start or Stop Freq out of range for current input settings”
Initial S/W Revision:	A.10.00
Help Map ID:	0

Input/Output

Delete Correction

Deletes the correction values for this set. When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete correction. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET [1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :DELete
Example:	MPAD:CORR:CSET:DEL MPAD:CORR:CSET1:DEL MPAD:CORR:CSET4:DEL
Notes:	Pressing this key when no corrections are present is accepted without error.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Correction On/Off

Apply Corrections

Applies amplitude corrections which are marked as ON to the measured data. If this is set to OFF, then no amplitude correction sets will be used, regardless of their individual on/off settings. If set to ON, the corrections that are marked as ON (see “[Correction On/Off](#)” on page 846) are used.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Remote Command:	[:SENSe] :MPADapter:CORRection:CSET:ALL [:STATe] ON OFF 1 0 [:SENSe] :MPADapter:CORRection:CSET:ALL [:STATe] ?
Example:	SENS:MPAD:CORR:CSET:ALL OFF This command makes sure that no amplitude corrections are applied, regardless of their individual on/off settings.
Preset:	Not affected by Preset. Set to OFF by Restore Input/Output Defaults
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.10.00
Help Map ID:	0

Delete All Corrections

Erases all correction values for all 16 Amplitude Correction sets.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all

corrections. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter.

Key Path:	Input/Output, RF Output & Test Set Config, Multiport Adapter, Corrections
Remote Command:	[:SENSE] :MPADapter:CORRection:CSET:ALL:DELeTe
Example:	MPAD:CORR:CSET:ALL:DEL
Initial S/W Revision:	A.10.00
Help Map ID:	0

Set (Replace) Data (Remote Command Only)

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command will totally replace all existing correction points in the specified set.

An Ampcor array can contain 2000 points maximum.

Remote Command:	[:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :DATA <freq>, <ampl>, . . . [:SENSE] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :DATA?
Example:	MPAD:CORR:CSET[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA 10000000,-1.0,20000000,1.0 This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 1.
Preset:	Empty after Restore Input/Output Defaults. Survives a shutdown or restart of analyzer application (including a power cycle).
State Saved:	Saved in instrument state.
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.10.00
Help Map ID:	0

Merge Correction Data (Remote Command Only)

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas. The difference between this command and Set Data is that this merges new correction points into an existing set.

Any new point with the same frequency as an existing correction point will replace the existing point's amplitude with that of the new point.

Input/Output

An Ampcor array can contain 2000 total points, maximum.

Remote Command:	<code>[:SENSe] :MPADapter:CORRection:CSET [1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 :DATA:MERGe <freq>, <ampl>, ...</code>
Example:	MPAD:CORR:CSET[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA:MERGE 15000000,-5.0,25000000,5.0 This adds two correction points at (15 MHz, -5.0 dB) and (25 MHz, 5.0 dB) to whatever values already exist in correction set 1.
Preset:	Empty after Restore Input/Output Defaults. Survives shutdown/restart of analyzer application (including power cycle)
Min:	Freq: 0 Hz Amptd: -1000 dBm
Max:	Freq: 1 THz Amptd: +1000 dBm
Initial S/W Revision:	A.10.00
Help Map ID:	0

Output Config

Accesses keys that configure various output settings, like the frequency reference output, trigger output and analog output.

Key Path:	Input/Output
Backwards Compatibility Notes:	1. In ESA there was not a user interface to enable the Video Output (Analog Output), Trigger Output, or Gate Output. In the X-Series each of these physical connectors requires configuration, thus the user interface has been added for X-Series, along with the potential for an output you think is always on to be switched off.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3133

Trig Out (1 and 2)

Select the type of output signal that will be output from the rear panel Trig 1 Out or Trig 2 Out connectors.

Key Path:	Input/Output, Output Config
Remote Command:	<code>:TRIGger TRIGger1 TRIGger2 [:SEQuence] :OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen SPOint SSweep SETtled S1Marker S2Marker S3Marker S4Marker OFF :TRIGger TRIGger1 TRIGger2 [:SEQuence] :OUTPut?</code>

Example:	TRIG:OUTP HSWP TRIG2:OUTP GATE
Dependencies:	The second Trigger output (Trig 2 Out) does not appear in all models; in models that do not support it, the Trig 2 Out key is blanked, and sending the SCPI command for this output generates an error, "Hardware missing; Not available for this model number" In models that do not support the Trigger 2 output, this error is returned if trying to set Trig 2 Out and a query of Trig 2 Out returns OFF.
Dependencies:	SSweep SSETtled S1Marker S2Marker S3Marker S4Marker are only available for the source in the EXT.
Preset:	Trigger 1: Sweeping (HSWP) Trigger 2: Gate This is unaffected by a Preset but is preset to the above values on a "Restore Input/Output Defaults" or "Restore System Defaults->All"
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3135

Off

Selects no signal to be output to the Trig 1 Out or Trig 2 Out connector.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP OFF
Readback:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3141

Polarity

Sets the output to the Trig 1 Out or Trig 2 Out connector to trigger on either the positive or negative polarity.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Remote Command:	:TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut:POLarity POSitive NEGative :TRIGger TRIGger1 TRIGger2[:SEquence]:OUTPut:POLarity?
Example:	TRIG1:OUTP:POL POS
Preset:	This is unaffected by a Preset but is set to POSitive on a "Restore Input/Output Defaults" or "Restore System Defaults->All"

Input/Output

State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3142

Sweeping (HSWP)

Selects the Sweeping Trigger signal to be output to the Trig 1 Out or Trig 2 Out connector when a measurement is made. This signal has historically been known as "HSWP" (High = Sweeping), and is 5 V TTL level with 50 ohm output impedance."

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP HSWP
Readback:	Sweeping
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3136

Measuring

Selects the Measuring trigger signal to be output to the Trig 1 Out or Trig 2 Out connector. This signal is true while the Measuring status bit is true.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP MEAS
Readback:	Measuring
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3137

Main Trigger

Selects the current instrument trigger signal to be output to the Trig 1 Out or Trig 2 Out connector.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP MAIN
Readback:	Main Trigger
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3200

Gate Trigger

Selects the gate trigger signal to be output to the Trig 1 Out or Trig 2 Out connector. This is the source of

the gate timing, not the actual gate signal.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP GTR
Readback:	Gate Trigger
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3138

Gate

Selects the gate signal to be output to the Trig 1 Out or Trig 2 Out connector. The gate signal has been delayed and its length determined by delay and length settings. When the polarity is positive, a high on the Trig 1 Out or Trig 2 Out represents the time the gate is configured to pass the signal.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP GATE
Readback:	Gate
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3139

Odd/Even Trace Point

Selects either the odd or even trace points as the signal to be output to the Trig 1 Out or Trig 2 Out connector when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the test set is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	TRIG1:OUTP OEV
Readback:	Odd/Even
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3140

Source Point Trigger

Selects the gate signal to be output to the Trig 1 Out or Trig 2 Out connector for use as the Point Trigger when operating an external source in Tracking mode. When Ext Trigger 1 is selected as the Point Trigger under Source, the Source Point Trigger under Trig1 Out automatically gets selected. Similarly, when Ext Trigger 2 is selected as the Point Trigger under Source, the Source Point Trigger key under Trig2 Out automatically gets selected

Key Path:	Input/Output, Output Config, Trig 1/2 Output
-----------	---

Input/Output

Example:	TRIG1:OUTP SPO
Readback:	Source Point
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3178

Source Marker 1

This key is only available in the EXT.

Trigger output at marker 1 in current playing Waveform file.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	:TRIG1:OUTP S1M
ReadBack:	Marker 1
Initial S/W Revision:	A.05.01
Help Map ID:	30019

Source Marker 2

This key is only available in the EXT.

Trigger output at marker 2 in current playing Waveform file.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	:TRIG1:OUTP S2M
ReadBack:	Marker 2
Initial S/W Revision:	A.05.01
Help Map ID:	30020

Source Marker 3

This key is only available in the EXT.

Trigger output at marker 3 in current playing Waveform file.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	:TRIG1:OUTP S3M
ReadBack:	Marker 3
Initial S/W Revision:	A.05.01
Help Map ID:	30021

Source Marker 4

This key is only available in the EXT.

Trigger output at marker 4 in current playing Waveform file.

Key Path:	Input/Output, Output Config, Trig 1/2 Output
Example:	:TRIG1:OUTP S4M
ReadBack:	Marker 4
Initial S/W Revision:	A.05.01
Help Map ID:	30022

Analog Out

This menu lets you control which signal is fed to the “Analog Out” connector on the test set rear panel.

See [“More Information” on page 874](#)

Key Path:	Input/Output, Output Config
Remote Command:	:OUTPut :ANALog OFF SVIDeo LOGVideO LINVideO DAUDio :OUTPut :ANALog?
Example:	OUTP:ANAL SVIDeo ! causes the analog output type to be Screen Video
Preset:	OFF
Preset:	This is unaffected by Preset but is set to DAUDio on a "Restore Input/Output Defaults" or "Restore System Defaults->All
State Saved:	Saved in Input/Output State
Readback line:	1-of-N selection [variable]
Backwards Compatibility Notes:	Prior to A.04.00, OFF was the default functionality except when in the Analog Demod application or with Tune and Listen, in which case it was DAUDio, and there was no selection menu. So for backwards compatibility with earlier X-Series firmware versions, Auto (:OUTP:ANAL:AUTO ON) will duplicate the prior behavior. The DNWB and SANalyzer parameters, which were legal in PSA but perform no function in the X-Series, are accepted without error.
Initial S/W Revision:	A.04.00
Help Map ID:	3143

Input/Output

More Information

The table below gives the range for each output.

Analog Out	Nominal Range exc. (10% overrange)	Scale Factor	Notes
Off	0 V		
Screen Video	0 – 1 V open circuit	10%/division	8566 compatible
Log Video	0 – 1 V terminated	1/(192.66 dB/V)	dB referenced to mixer level, 1V out for –10 dBm at the mixer.
Linear Video	0 – 1 V terminated	100%/V	Linear referenced to Ref Level, 1 V out for RF envelope at the Ref Level.
Demod Audio	(varies with test set setting)		

Auto

Selects the Auto state for the Analog Output menu. In this state, the Analog Output will automatically be set to the most sensible setting for the current mode or measurement.

If you make a selection manually from the Analog Out menu, this selection will remain in force until you change it (or re-select Auto), even if you go to a mode or measurement for which the selected output does not apply.

Key Path:	Input/Output, Output Config, Analog Out
Remote Command:	:OUTPut:ANALog:AUTO OFF ON 0 1 :OUTPut:ANALog:AUTO?
Example:	OUTP:ANAL:AUTO ON
Preset:	ON
State Saved:	Saved in Input/Output State
Initial S/W Revision:	A.04.00
Help Map ID:	29995

Off

Turns off the analog output.

Key Path:	Input/Output, Output Config, Analog Out
Example:	OUTP:ANAL OFF ! causes the analog output to be off
Readback Text:	Off
Initial S/W Revision:	A.04.00
Help Map ID:	3144

Log Video (RF Envelope, Ref=Mixer Level)

Selects the analog output to be the log of the video signal. In this mode, the pre-detector data is output to the Analog Out connector with a Log scaling. The output is referenced to the current level at the mixer, does not depend on display settings like Reference Level or dB per division, and it is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging), but does change with input attenuation.

The output is designed so that full scale (1 V) corresponds to -10 dBm at the mixer. The full range (0–1 V) covers 192.66 dB ; thus, 0 V corresponds to -202.66 dBm at the mixer.

Key Path:	Input/Output, Output Config, Analog Out
Example:	OUTP:ANAL LOGV
Dependencies:	<p>Because the Log Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.</p> <p>Log Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Log Video output.</p> <p>The output holds at its last value during an alignment, during a marker count, and during retrace (after a sweep and before the next sweep starts).</p> <p>This function depends on optional capability. The key will be blanked and the command will generate an “Option not available” error unless you have Option YAV licensed in your instrument.</p>
Couplings:	Log Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Log Video output will look different than it does in swept mode.
Readback Text:	Log Video
Initial S/W Revision:	A.04.00
Help Map ID:	3146

Linear Video (RF Envelope, Ref=Ref Level)

Selects the analog output to be the envelope signal on a linear (voltage) scale. In this mode, the pre-detector data is output to the Analog Out connector with a Linear scaling. The output is based on the current Reference Level, and is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging).

The scaling is set so that 1 V output occurs with an instantaneous video level equal to the reference level, and 0 V occurs at the bottom of the graticule. This scaling gives you the ability to control the gain without having another setup control for the key. But it requires you to control the look of the display (the reference level) in order to control the analog output.

This mode is ideal for looking at Amplitude Modulated signals, as the linear envelope effectively

Input/Output

demodulates the signal.

Key Path:	Input/Output, Output Config, Analog Out
Example:	OUTP:ANAL LINV
Dependencies:	<p>Because the Linear Video output uses one of the two IF processing channels, only one detector is available while Linear Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.</p> <p>Linear Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Linear Video output.</p> <p>The output holds at its last value during an alignment and during a marker count and during retrace (after a sweep and before the next sweep starts).</p> <p>This function depends on optional capability; the key will be blanked and the command will generate an "Option not available" error unless you have Option YAV licensed in your instrument.</p>
Couplings:	Linear Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Linear Video output will look different than it does in swept mode.
Readback Text:	Linear Video
Initial S/W Revision:	A.04.00
Help Map ID:	3147

Demod Audio

Selects the analog output to be the demodulation of the video signal.

When Demod Audio is selected, the demodulated audio signal appears at this output whenever the Analog Demod application is demodulating a signal.

When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode.

If any other Analog Output is manually selected when in the Analog Demod mode, a condition warning message appears.

Key Path:	Input/Output, Output Config, Analog Out
Example:	OUTP:ANAL DAUD

Dependencies:	<p>This key only appears if the Analog Demod application (N9063A), the N6141A or W6141A application, or Option EMC is installed and licensed, otherwise the key will be blanked and the command will generate an “Option not available” error.</p> <p>The output holds at its last value during an alignment and during a marker count. It is not held between sweeps, in order for Tune and Listen to work properly.</p> <p>When Demod Audio is the selected Analog Output:</p> <ul style="list-style-type: none"> • all active traces are forced to use the same detector. • CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable
Readback Text:	Demod Audio
Initial S/W Revision:	Prior to A.02.00 (this was the default functionality, and there was no selection)
Modified at S/W Revision:	A.04.00
Help Map ID:	3148

Digital Bus

This menu allows you to configure the LVDS connector located on the rear panel of the instrument. It is a unidirectional link of real time data at a 90 MSa/s rate. The ADC is sampling a 22.5 MHz IF.

The data that appears on this port is raw, uncorrected ADC samples, unless you have option RTL. With option RTL, you get fully corrected I/Q data.

This connector will only be active when the Narrowband IF Path is currently in use.

Key Path:	Input/Output, Output Config, Digital Out
Initial S/W Revision:	A.04.00
Help Map ID:	3559

Marker

See “Marker Control Mode” on page 879.

See “Setting the Marker X-axis Value” on page 879.

See “Setting the Marker X Position in Trace Points” on page 880.

See “Setting the Marker Y-axis Value” on page 881.

The Marker key accesses the Marker menu. A marker can be placed on a trace to allow the value of the trace at the marker point to be determined precisely. The functions in this menu include a 1-of-N selection of the control mode Normal, Delta, Fixed, or Off for the selected marker. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules.

Markers may also be used in pairs to read the difference (or delta) between two data points. They can be used in Marker Functions to do advanced data processing, or to specify operating points in functions like Signal Track and N dB Points.

The SCPI command in the table below selects the marker and sets the marker control mode as described under **Normal**, **Delta**, **Fixed** and **Off**, below. All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE POSITION DELTA FIXED OFF :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE?
Preset:	OFF (all markers)
State Saved:	The marker control mode is saved in instrument state
Backwards Compatibility SCPI:	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE SPAN BAND These parameters are aliased to POSition if sent. A query does not reflect them.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3149

Marker Control Mode

Setting the Marker X-axis Value

The command below sets the marker X-axis value in the current marker X-axis scale unit. In each case the marker that is addressed becomes the selected marker. It has no effect (other than to cause the marker to become selected) if the control mode is **Off**, **but** it is the SCPI equivalent of entering an X value if the

Marker

control mode is **Normal**, **Delta**, or **Fixed**.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <freq> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X?
Notes:	<p>If no suffix is sent it will use the fundamental units for the current marker X-axis scale. If a suffix is sent that does not match the current marker X-axis scale unit, an invalid suffix error is generated.</p> <p>If the specified marker is Fixed and a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p> <p>The query returns the marker’s absolute X-axis value if the control mode is Normal or Fixed. It returns the offset from the marker’s reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X-axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number.</p>
Preset:	After a preset, if X is queried with no value sent first, the center of screen value is returned.
Min:	- ∞ (minus infinity)
Max:	+ ∞ (plus infinity). X-Series marker values are not limited and do not clip
Default Unit:	Determined by X-axis scale
Backwards Compatibility SCPI:	:CALCulate:MARKer[1] 2 3 4:X:CENTer
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3150

Setting the Marker X Position in Trace Points

The command below sets the marker X position in trace points. It has no effect if the marker control mode is **Off**. But it is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** or **Fixed** – except the setting is in trace points rather than X-axis scale units.

NOTE The entered value in Trace Points is immediately translated into the current X-axis scale units for setting the value of the marker. The marker’s value in X-axis scale Units, NOT trace points, are preserved if a change is made to the X-axis scale settings. Thus, if you use this command to place a marker on bucket 500, which happens at that time to correspond to 13 GHz, and then you change the Start Frequency so that bucket 500 is no longer 13 GHz, the marker will stay at 13 GHz, NOT at bucket 500.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:POSition <real> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:POSition?
Notes:	If the specified marker is Fixed and a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning. The query returns the marker’s absolute X-axis value in trace points if the control mode is Normal or Fixed . It returns the offset from the marker’s reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X-axis scale units to trace points
Preset:	After a preset, if X is queried with no value sent first, the center of screen value is returned. So if per default, the number of Trace points is 1001, the center value is 500.
Min:	0
Max:	Number of trace points – 1
Default Unit:	unitless
Backwards Compatibility SCPI:	:CALCulate:MARKer[1] 2 3 4:X:POSition:CENTer
Backwards Compatibility SCPI:	The legacy command, :CALCulate:MARKer[n]:X:POSition:CENTer <param> was used to control the center point between the Delta and Reference marker in trace points (buckets) in Span Pair mode. In the new system, this is equivalent to simply setting the marker position in trace points. So this command is aliased to the command :CALCulate:MARKer[n]:X:POSition <param> <hr/> NOTE The UP/DOWN parameters will increment/decrement by one bucket. This will require a conversion to buckets and back. <hr/>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3151

Setting the Marker Y-axis Value

The command below selects the marker and sets the marker Y-axis value; the default unit is the current

Marker

Y-axis unit. It has no effect (other than selecting the marker) unless the marker control mode is **Fixed**.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y <real> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y?
Example:	CALC:MARK2:MODE POS turns on marker 2 as a normal marker. CALC:MARK2:X 20 GHZ moves marker 2 to 20 GHz if X-axis scale is Frequency. If X-axis scale is Time, the -131 invalid suffix error is generated.
Preset:	Trace value at center of screen. There is no way to predict what this will be after a preset.
Min:	- ∞ (minus infinity)
Max:	+ ∞ (plus infinity)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3152

Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker is affected by the functions.

Key Path	Marker
Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak.
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3153

Normal

Sets the control mode for the selected marker to **Normal** and turns on the active function for setting its value. If the selected marker was **Off**, it is placed at the center of the screen on the trace specified by the marker’s Trace attribute.

A Normal mode (POSition type) marker can be moved to any point on the X-axis by specifying its X-axis value. Its absolute Y-axis value is then the value of the trace point at that X-axis value.

Key Path	Marker
Example	:CALC:MARK:MODE POS sets Marker 1 to Normal.
Notes	See the description under the “Marker” key, above.

Couplings	<ul style="list-style-type: none"> The marker addressed by this command becomes the selected marker on the front panel.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X-axis value are saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3154

Delta

Sets the control mode for the selected marker to Delta and turns on the active function for setting its delta value. If the selected marker was **Off**, it is placed at the center of the screen on the trace specified by the marker's Trace attribute.

In Delta mode the marker result shows the relative result between the selected (Delta) marker and its reference marker. A delta marker can be moved to any point on the X-axis by specifying its X-axis offset from a reference marker. Its absolute Y-axis value is then the value of the trace point at that X-axis value.

Key Path	Marker
Example	:CALC:MARK:MODE DELT sets marker 1 to Delta.
Notes	See the description under the "Marker" key, above.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X-axis value are saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3155

Fixed

See ["Fixed Marker X-axis Value"](#) on page 884.

See ["Fixed Marker Y-axis Value"](#) on page 884.

Sets the control mode for the selected marker to Fixed. A fixed marker is fixed in the sense that it stays where you place it. It can be directly moved in both X and Y. It can be moved with a Peak Search. It can also be indirectly moved by re-zeroing the delta if it is a relative marker. If it is moved, it again becomes fixed at the X-axis point it moved to and it has a Y-axis result that it took on when it moved there. If a Normal or Delta marker is changed to Fixed it becomes fixed at the X-axis point it was at, and with the Y-axis result it had when it was set to Fixed.

In Fixed mode the marker result shows:

- If no Marker Function is on, the absolute X-axis and Y axis value of the marker
- If a Marker Function is on, the X-axis value and the Y-axis function result the marker had when it became fixed.

Marker

Fixed Marker X-axis Value

Key Path	Marker, Fixed
Example	:CALC:MARK:MODE FIX sets Marker 1 to Fixed.
Notes	See the description under the “Marker” key, above.
Dependencies	<p>You cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. If an attempt is made to actually adjust it while a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.</p> <p>you cannot directly set the Y value of a Fixed marker while Normalize is turned on. If an attempt is made to do so while Normalize is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.</p>
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X and Y-axis values are saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3489

Fixed Marker Y-axis Value

Key Path	Marker, Fixed
Example	:CALC:MARK:MODE FIX sets Marker 1 to Fixed.
Notes	See the description under the Marker key, above.
Dependencies	<p>you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. If an attempt is made to actually adjust it while a Marker Function is on, a message is generated. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning.</p>
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X and Y-axis values are saved in instrument state
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00
Help Map ID	3157

Off

Turns off the selected marker and its marker function setting, if any. However, Off does not affect which

marker is selected.

Key Path	Marker
Example	:CALC:MARK:MODE OFF sets Marker 1 to Off.
Notes	See the description under the “Marker” key, above.
State Saved	The marker control mode (Normal, Delta, Fixed, Off) is saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3158

Properties

Opens a menu used to set certain properties of the selected marker.

Key Path	Marker
Initial S/W Revision	Prior to A.02.00
Help Map ID	3159

Select Marker

Duplicate of the **Select Marker** key under **Marker**. Selecting a marker here causes the same marker to be selected under **Marker**. (That is, there is only one “selected marker”.)

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Key Path	Marker, Properties
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :REFerence <integer> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :REFerence ?
Example	CALC:MARK1:REF 2 sets the marker 1 reference marker to 2 and turns marker 1 on as a delta marker.

Marker

Notes	A marker cannot be relative to itself so that choice is grayed out. If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “–221, Settings conflict” warning. See error –221.2200 in Master Error Messages: X-Series document for exact error text.
Notes	This command causes the marker specified with the subopcode to become selected. Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped.
Couplings	The act of specifying the selected marker’s reference marker makes the selected marker a Delta marker. If the reference marker is off it is turned on in Fixed mode at the delta marker location.
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it’s default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1. Set to the defaults by using Restore Mode Defaults . This is not reset by Marker Off , All Markers Off , or Preset .
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle.
Min	1
Max	12
Status Bits/OPC dependencies	none Default (selected when Restore Mode Defaults is pressed): next higher numbered marker or 1 if marker 12.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3160

X-axis scale (formerly Readout)

Accesses a menu that enables you to affect how the X-axis information for the selected marker is displayed in the marker area (top-right of display) and the active function area of the display, and how the marker is controlled. The available settings for the X-axis scale are Frequency, Period, Time, and Inverse Time.

See “[More Information](#)” on page 887.

Key Path	Marker, Properties
----------	---------------------------

Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:READout FREQUency TIME ITIME PERiod :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:READout ? :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:READout :AUTO ON OFF 1 0 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X:READout :AUTO?
Example	CALC:MARK3:X:READ TIME sets the marker 3 X-axis scale to Time.
Notes	This command causes the specified marker to become selected.
Notes	This command causes the specified marker to become selected.
Preset	AUTO Marker Preset (selected when a marker is turned Off): Auto (see below). In most measurements the Auto settings results in Frequency being the preset readout.
State Saved	Saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3161

More Information

The **X-axis scale** of a marker is the scale of its X-axis value. This affects the units displayed in the Marker Result block and used to specify the marker's X-axis location. The X-axis scale is specified using the **Marker, Properties, X-axis scale** key.

All markers in swept spans have both a time and frequency value. Which of these is used for the result display, and for positioning the marker, depends on the **X-axis scale** setting. The **X-axis scale** setting can be **Frequency** or **Time**, as well as the reciprocal of either (**Period** or **Inverse Time**). There is also an **Auto** setting - when in **Auto**, a marker's **X-axis scale** changes whenever the domain of the trace, upon which it set, changes. All choices for **X-axis scale** are allowed.

Auto

When in Auto, the X-Axis Scale is **Frequency** if the Marker Trace is a frequency domain trace, **Time** if the Marker Trace is a time domain trace. When in Auto, if the marker changes traces, or the domain of the trace the marker is on changes, the auto result is re-evaluated. If the X-axis scale is chosen manually, that Scale is used regardless of the domain of the trace.

Key Path	Marker, Properties, X-axis scale
Example	CALC:MARK2:X:READ:AUTO ON sets the marker 2 X-axis scaling to automatically select the most appropriate units.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3066

Marker

Frequency

Sets the marker X-axis scale to Frequency, displaying the absolute frequency of a normal marker or the frequency of the delta marker relative to the reference marker. Frequency is the auto setting for frequency domain traces.

If Frequency is selected for a time domain trace, all of the points in the trace will show the same value. Attempting to use the knob or step keys to adjust the X-axis value of the marker or entering an X-axis value from the numeric keypad or remotely will have no effect but will generate no error.

Key Path	Marker, Properties, X-axis Scale
Example	CALC:MARK2:X:READ FREQ sets the marker 2 X-axis scale to Frequency.
Notes	1-of-N readback is Frequency
State Saved	The X-axis scale setting is saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3162

Period

Sets the marker X-axis scale to Period, displaying the reciprocal of the frequency of the marker, or the reciprocal of the frequency separation of the two markers in a delta-marker mode. The units are those of time (sec, msec, et cetera). If the markers are at the same frequency in a delta marker mode, the result is the reciprocal of 0, which is infinitely large. The display will show “---” and a SCPI query will return infinity.

If Period is selected for a time domain trace, all of the points in the trace will show the same value. Attempting to use the knob or step keys to adjust the X-axis value of the marker or entering an X-axis value from the numeric keypad or remotely will have no effect but will generate no error.

Key Path	Marker, Properties, X-axis Scale
Example	CALC:MARK2:X:READ PER sets the marker 2 X-axis scale to Period.
Notes	1-of-N readback is Period
State Saved	The X-axis scale setting is saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3163

Time

Sets the marker X-axis scale to Time, displaying the time interval between a normal marker and the start of a sweep or the time of the delta marker relative to the reference marker. Time is the auto setting for time domain traces. In a delta-marker mode it is the (sweep) time interval between the two markers.

Key Path	Marker, Properties, X Axis Scale
Example	CALC:MARK2:X:READ TIME sets the marker 2 X-axis scale to Time.

Notes	1-of-N readback is Time
Couplings	Frequency domain traces taken in FFT mode have no valid time data. Therefore when Time is selected for markers on such traces, the X-axis value is taken as the appropriate percentage of the displayed sweep time, which is a calculated estimate.
State Saved	The X-axis scale setting is saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3164

Inverse Time

Sets the marker X-axis scale to Inverse Time, displaying the reciprocal time. It is useful in a delta mode to show the reciprocal of (sweep) time between two markers. This function is only meaningful when on a time domain trace and in the **Delta** control mode. If the markers are at the same X-axis value, the time between them is 0, so the reciprocal of sweep time is infinitely large. The display will show “---” and a SCPI query will return infinity.

Key Path	Marker, Properties, X Axis Scale
Example	:CALC:MARK2:X:READ ITIM sets the marker 2 X-axis scale to Inverse Time.
Notes	1-of-N readback is Inverse Time
Couplings	Frequency domain traces taken in FFT mode have no valid time data. Therefore when Inverse Time is selected for markers on such traces, the X-axis value is undefined, shows as “---” and returns not a number to a query.
State Saved	The X-axis scale setting is saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3165

Marker Trace

Selects the trace that you want your marker to be placed on. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-axis scale of the marker. All markers have an associated trace, even **Fixed** markers; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal or Delta markers.

See [“Auto Init On” on page 890](#).

See [“Auto Init Rules Flowchart” on page 891](#).

See [“Auto Init OFF” on page 891](#).

Key Path	Marker, Properties
----------	---------------------------

Marker

Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe 1 2 3 4 5 6 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe?
Example	CALC:MARK1:TRAC 2 places marker 1 on trace 2.
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating. An application may register a trace name to be displayed on the key instead of a trace number.
Couplings	The state of Marker Trace is not affected by the Auto Couple key. If a Marker Trace is chosen manually, Auto Init goes to Off for that marker. Sending the remote command causes the addressed marker to become selected.
Preset	Presets on Preset or All Markers Off
State Saved	The Marker Trace and state of Auto Init for each marker is saved in instrument state.
Min	1
Max	6
Readback line	[TraceN, Auto Init] or [TraceN, Manual] where N is the trace number to which the marker is currently assigned.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3166

Auto Init On

When **Auto Init** is true, the marker's trace attribute is re-determined automatically by the test set whenever the marker turns on (Normal, Delta or Fixed) from an Off state. (The trace attribute is also determined for all markers that are on, whenever **Auto Init** is turned on).

When the marker moves between traces the marker's X position in trace points is retained as it moves. For moving between active traces this generally means the x-axis value of the marker will not change. But for moving to or from an inactive trace, the x-axis value will take on that of the new trace at the bucket the marker was on the old trace (and is still on, on the new trace, since the bucket doesn't change).

Note this is true even if the marker is off screen. Thus, a marker that is at the center of the screen on the old trace stays at the center of the screen on the new trace. A marker that is off screen one whole screen to the left on the old trace remains off screen one whole screen to the left on the new trace – even if this means it is at negative time.

Marker Trace is set to 1, and Auto Init is set to On, on a Preset or All Markers Off.

Auto Init Rules Flowchart

Auto Init OFF

This command associates the marker with the specified trace and turns Marker Trace, Auto Init OFF for that marker. If the marker is not **Off** it moves the marker from the trace it was on to the new trace. If the marker is **Off** it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed, even if that marker is in Auto mode.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe:AUTO OFF ON 0 1 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe:AUTO?
Notes:	Turning Marker Trace Auto Init off has no effect on the trace on which the marker is currently placed. The response to the query is 0 if OFF, 1 if ON.
Couplings:	The state of Auto Init is not affected by the Auto Couple key. Auto Init is set to True on a Preset or All Markers Off. If Auto Init is set to On for a marker and that marker is on, that marker's Marker Trace is immediately set according to the above flowchart. Sending the remote command causes the addressed marker to become selected.
Preset:	ON
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3167

Lines

When on, displays a vertical line of graticule height and a horizontal line of graticule width, intersecting at the indicator point of the marker (that is, the center of the X or the bottom tip of the diamond. The lines are blue in color.

If the marker is off screen the lines should be extended from the marker so that they go thru the screen area if possible. This is really useful for off screen Fixed markers as it lets you see their amplitude even though they are off the X-axis.

Key Path	Marker, Properties
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :LINES [:STATe] OFF ON 0 1 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :LINES [:STATe] ?
Example	:CALC:MARK2:LIN:ON turns Lines on for marker 2.

Marker

Couplings	Sending the remote command causes the addressed marker to become selected.
Preset	OFF
State Saved	Saved in State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3168

Marker Table

When set to On the display is split into a measurement window and a marker data display window. For each marker which is on, information is displayed in the data display window, which includes the marker number, control mode, trace number, X axis scale, X axis value, and the Y-axis result. Additional information is shown for markers which have marker functions turned on.

Turning the Marker Table on turns the Peak Table off and vice versa.

Key Path	Marker
Remote Command	:CALCulate:MARKer:TABLE[:STATe] OFF ON 0 1 :CALCulate:MARKer:TABLE[:STATe] ?
Example	CALC:MARK:TABL ON turns on the marker table.
Preset	OFF
State Saved	Whether the marker table is on is saved in instrument state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3169

Marker Count

Accesses the marker count menu.

Key Path	Marker
Readback line	[On] if count on for the selected marker, [Off] if it is off.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3170

Counter On/Off

Turns the marker frequency counter on and off. The selected marker is counted, and if the selected marker is a delta marker and its reference marker is not fixed, the reference marker is counted as well.

See [“Understanding the Marker Counter”](#) on page 894.

See “Query Count Value” on page 894.

Key Path	Marker Function, Marker Count
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt [:S TATe] OFF ON 0 1 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt [:S TATe] ?
Example	CALC:MARK2:FCO ON selects marker 2, turns it on, and turns on the counter CALC:MARK2:FCO:X? returns the counted frequency.
Notes	<p>Fixed markers are not counted, but a Fixed marker will have a count stored in it if it is selected or is the reference marker for the selected marker. The count already in the marker is stored when the marker becomes fixed and if there is none or the marker moves (for example, Pk Search) it is counted and stored after the next sweep.</p> <p>If a Fixed marker has a count stored in it, that count is displayed when the marker is selected, and used as the reference count when that marker is a reference marker.</p> <p>If a Fixed marker has a count stored in it, that count is deleted if the marker X is adjusted.</p> <p>If a Fixed marker has a count stored in it, and a Search function is performed using the Fixed marker, while the counter is on, the count stored in the marker is updated.</p> <p>If a Fixed marker has a count stored in it, and is a reference marker, and the reference is moved to a valid trace point by re-zeroing the delta (by pressing Delta again or sending the DELTA SCPI command), while the counter is on, the count stored in the marker is updated.</p>
Notes	This command causes the specified marker to become selected.
Dependencies	Marker Count is unavailable (grayed out and Off) if the Gate function is on.
Couplings	<p>If the selected marker is Off when the counter is turned on, the selected marker is set to Normal and placed at center of screen on the trace determined by the Marker Trace rules.</p> <p>If a marker which is OFF is selected while the counter is on, the counter remains on, but since the marker is off, the count is undefined. In this case, the test set returns "not a number" to a SCPI count query.</p> <p>The counter is turned OFF when the selected marker is turned OFF.</p>
Preset	OFF
State Saved	The state of the counter (on/off) is saved in instrument state. In the case of Fixed markers, the count stored in the marker is saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3171

Marker

Query Count Value

Queries the frequency count. The query returns the absolute count unless the specified marker is in Delta mode, then it returns the relative count. If the marker is off, or the marker is on but the counter is off, the test set will return "not a number" to a SCPI count query. A marker with no stored count, or a non-**Fixed** marker on a stored trace, will also return not a number to a SCPI count query. Note this result may simply mean that the first sweep after the counter turned on has not yet completed.

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOUNT :X?
Notes:	This query does NOT cause the specified marker to become selected.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Understanding the Marker Counter

See [“Counting Off-screen Markers”](#) on page 894.

See [“Delta Marker”](#) on page 894.

See [“Fixed Markers”](#) on page 895.

See [“More Information on "Counter"”](#) on page 895.

Using the internal counter we can count the frequency of a marker, but we cannot count while we are actually sweeping. So, once we are done with a sweep, we move to the selected marker frequency and count that frequency. Then, if the marker is a Delta marker, the count is also taken for its reference marker. The count is actually performed by moving the LO to the frequency (or frequencies in the case of a delta marker) we wish to count. The count is executed on a marker by marker basis and no further count is taken until after the next sweep (even if the marker moves before another sweep has completed).

The Marker Count is taken by tuning the test set to the frequency of the marker and counting the IF, with the test set not sweeping. The count is adjusted for display by adding or subtracting it (as appropriate) from the LO frequency, so that you see a count that represents the signal frequency. This is true even if External Mixing is on. Since all this happens between sweeps, you never see the test set retuning to do the counts.

If you wish to see the entered frequency of a counted marker it will appear in the active function area when that marker is selected (for Fixed markers, you have to press the Marker, Fixed key to select Fixed markers and then press it a second time to view or adjust the x or y marker values).

Counting Off-screen Markers

If the selected marker is off the X-axis the test set can still be tuned to the marker (unless it is outside the range of the test set), so the count can still be displayed. This means you can see a count for an off-screen marker even though there may be no valid Y-value for the marker. If the marker frequency is outside the range of the test set, the display will show three dashes in the count block (---), and not a number is returned to a SCPI count query.

Delta Marker

When a Delta Marker is selected while Marker Count is on:

If the reference marker is not a fixed marker, the display shows the difference between the count of the selected marker and the count of the reference marker

If the reference marker is a fixed marker and there is a count stored in the marker (because Marker Count was on when the marker became a fixed marker), the display shows the difference between the count at the marker and the count stored in the reference marker.

Marker Count works in zero span as well as in Swept analysis. The test set tunes to the frequency of the selected marker, which, for active zero span traces, is simply the center frequency of the test set.

Fixed Markers

Fixed markers have a count stored in them that is generally kept fixed and not updated. If a fixed marker is selected, or used as a reference, the signal at the marker frequency is not counted; rather the stored count is seen or used as the reference. The count is stored, if Count is on, when the marker becomes fixed or when, while fixed, the marker is moved by re-zeroing the reference (if it is the reference marker) or via a peak search (since both of these, by definition, use valid trace data). The count stored in a Fixed marker is lost if the counter is turned off, if the marker is moved to an inactive trace, or if the marker is moved by adjusting its x-value.

More Information on "Counter"

When the counter is on, the count (or the delta count) for the selected marker is displayed.

The invalid data indicator (*) will turn on until the completion of the first count.

Marker Count frequency readings are corrected using the **Freq Offset** function. Note however that Marker Delta readings are not corrected, as any offset would be applied to both.

In zero span on active traces the counter continues to function, counting any signal near the center frequency of the test set.

NOTE No signal farther from the marker frequency than the Res BW is seen by the counter.

The above command turns on or off the frequency counter. If the specified marker number in the command is not the selected marker, it becomes the selected marker. If the specified marker number is not on, FCount ON sets it to Normal and places it at center of screen on the trace determined by the Marker Trace rules. Once the marker count is on, it is on for any selected marker, not just for the one used in the command. A 1 is returned to the state query only if marker count is on and the specified number is the selected marker. The invalid data indicator (*) will turn on until the completion of the first count but this does not keep a value from being returned.

Gate Time Auto/Man

Controls the length of time during which the frequency counter measures the signal frequency. Longer gate times allow for greater averaging of signals whose frequency is “noisy”, though the measurement takes longer. If the gate time is an integer multiple of the length of a power-line cycle (20 ms for 50 Hz power, 16.67 ms for 60 Hz power), the counter rejects incidental modulation at the power line rate. The shortest gate time that rejects both 50 and 60 Hz modulation is 100 ms, which is the value chosen in Auto, or on Preset or when Auto Couple is pressed.

Marker

The start time of the Gate Time of the counter must be controlled by the same trigger parameters as controls the sweep. Thus, if the Trigger is not in Free Run, the counter gate must not start until after the trigger is received and delayed.

Key Path	Marker Function, Marker Count
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt :GATetime <time> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt :GATetime? :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt :GATetime:AUTO OFF ON 0 1 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FCOunt :GATetime:AUTO?
Example	:CALC:MARK2:FCO:GAT 1e-2 sets the gate time for Marker 2 to $10^{(-2)}$ s = 10 ms.
Notes	When Auto Couple is pressed, Gate Time is set to 100 ms.
Notes	This command causes the specified marker to become selected.
Preset	100 ms ON
State Saved	Saved in instrument state.
Min	1 us
Max	500 ms
Initial S/W Revision	Prior to A.02.00
Help Map ID	3173

Couple Markers

When this function is true, moving any marker causes an equal X-axis movement of every other marker which is not Fixed or Off. By “equal X-axis movement” we mean that we preserve the difference between each marker’s X-axis value (in the fundamental x-axis units of the trace that marker is on) and the X-axis value of the marker being moved (in the same fundamental x-axis units).

Note that Fixed markers do not couple. They stay where they were while all the other markers move. Of course, if a Fixed marker is being moved, all the non-fixed markers do move with it.

This may result in markers going off screen.

Key Path	Marker
Remote Command	:CALCulate:MARKer:COUPle [:STATe] OFF ON 0 1 :CALCulate:MARKer:COUPle [:STATe] ?
Example	:CALC:MARK:COUP ON sets Couple Markers on.

Preset	Off, presets on Mode Preset and All Markers Off
State Saved	Saved in State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3174

All Markers Off

Turns off all markers. See Marker, [“Off” on page 884](#).

Key Path	Marker
Remote Command	:CALCulate:MARKer:AOFF
Example	CALC:MARK:AOFF turns off all markers.
Couplings	sets the selected marker to 1.
Preset	n/a.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3175

Marker

Marker Function

The Marker Function key opens up a menu of softkeys that allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data. Band Functions are Marker Functions that allow you to define a band of frequencies around the marker. The band defines the region of data used for the numerical calculations. These marker functions also allow you to perform mathematical calculations on trace and marker data and report the results of these calculations in place of the normal marker result.

NOTE Unlike regular markers, marker function markers are not placed directly on the trace. They are placed at a location which is relative to the result of the function calculation.

See [“More Information”](#) on page 899.

See [“Fixed marker functions”](#) on page 900.

See [“Interval Markers”](#) on page 900.

Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNCTION NOISE BPOWER BDENSITY OFF :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNCTION?
Notes	Sending this command selects the subcoded marker The marker function result is queried in the same fashion as the Marker Result, as outlined in the Marker section, with the CALC:MARK:Y? command.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker. If a marker function was already on when the marker became Fixed then the selected Band Function is shown but cannot be changed. Therefore, you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. To turn off the function, turn off the marker.
Preset	OFF
State Saved	The band function for each marker is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3180

More Information

The units to be used for displaying Marker Function results in Delta mode vary depending on what is the reference marker and what it is referenced to.

Marker Functions are different from Measurements, which automatically perform complex sequences of

Marker Function

setup, data acquisition, and display operations in order to measure specified signal characteristics. Marker Functions are specified for each individual marker and may be turned on individually for each marker.

The **Marker Fctn** menu controls which marker functions are turned on and allows you to adjust setup parameters for each function. The Marker Functions are **Marker Noise**, **Band/Interval Power**, and **Band/Interval Density**, only one of which can be on for a given marker.

If the selected marker is off, pressing Marker Fctn sets it to Normal and places it at the center of the display on the trace determined by the Marker Trace rules. However, if the selected marker was **Off**, **Marker Function Off** had to be the selected function, and it remains so even after the marker is thus turned on, although you may then change it.

Fixed marker functions

In the case of a fixed marker, it is not possible to turn on or change a band function. This is because a Fixed marker holds the value it had when it became fixed; the trace it was on may keep on changing, so the function value, which depends on trace data, could not be calculated on an ongoing basis.

It is possible to have a Marker Function on for a Fixed marker, in the case where a function was already on when the marker became Fixed. In this case the function value will be retained in the marker. It is also possible to have a Marker Function on for a Fixed marker in the case when the marker was off and was turned on as **Fixed** because **Delta** was pressed to create a reference marker - in which case the marker function, marker function width, Y Axis value and marker function result that the **Delta** marker had when **Delta** was pressed are copied into the Fixed marker. If **Delta** is pressed again, causing the fixed reference marker to move to the delta marker's position, the marker function, marker function width, Y Axis value and marker function result that the **Delta** marker had when **Delta** was pressed are again copied into the fixed reference marker.

If a Marker Function is on for a Fixed marker, the marker's reported value is derived by the function. Therefore you cannot directly set the X or Y value of a Fixed marker which has a marker function turned on. Indirect setting as detailed above or when a Peak Search is performed is allowed, as the Fixed marker is always placed on a trace and can derive its function value from the trace at the moment when it is placed.

Interval Markers

What is an interval marker? The band power marker computes the total power within a span in a nonzero span. The results computation must include the RBW. The interval power marker measures the average power across some time interval in zero span.

Interval Density is defined to be Interval Power divided by Bn. Bn is the noise bandwidth of the RBW filter, as noted and used within the Band Power computation.

Select Marker

See [“Select Marker” on page 882](#).

Marker Noise

Turns on the Marker Noise function for the selected marker, making it a noise marker. If the selected marker is off, it is turned on in **Normal** mode and located at the center of the screen.

When **Marker Noise** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

When **Marker Noise** is on, the marker's Y Axis Result is the average noise level, normalized to a 1 Hz noise power bandwidth, in the band specified under the **Band Adjust** key.

See [“More Information” on page 901](#).

See [“Off-trace Markers” on page 901](#).

Key Path	Marker Function
Example	<p>CALC:MARK:FUNC NOIS turns on marker 1 as a noise marker.</p> <p>CALC:MARK:FUNC? returns the current marker function for the marker specified. In this case it returns the string: NOIS.</p> <p>CALC:MARK:Y? returns the y-axis value of the Marker Noise function for marker 1 (if Marker Noise is ON for marker 1). Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be $0.2^2 = 0.04$. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	See the description under the ““Marker Function” on page 899” key.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>Average detector and Power Averaging auto selected when Marker Noise on</p> <p>If the selected (specified) marker is off, selecting Marker Noise via front panel or SCPI will turn the marker on.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3181

More Information

To guarantee accurate data for noise-like signals, a correction for equivalent noise bandwidth is made by the test set. The **Marker Noise** function accuracy is best when the detector is set to Average or Sample, because neither of these detectors will peak-bias the noise. The trade off between sweep time and variance of the result is best when Average Type is set to Power Averaging. Therefore, Auto coupling chooses the Average detector and Power Averaging when Marker Noise is on. Though the Marker Noise function works with all settings of detector and Average Type, using the positive or negative peak detector gives less accurate measurement results.

Off-trace Markers

If a **Normal** or **Delta** noise marker is so near to the left or right edge of the trace that some of the band is off the trace, then it uses only that subset of the Band Width that is on-trace. If the marker itself is off-trace, its value becomes undefined.

Neither band/interval power nor band/interval density markers are defined if any part of the band is

Marker Function

off-trace (unless they are Fixed with a stored function value in them), except that when the edges of the bandwidth are trivially off-screen, due to mathematical limitations in the test set or in the controlling computer, the result will still be considered valid.

Band/Interval Power

Turns on the Band/Interval Power function for the selected marker. If the selected marker is off it is turned on in **Normal** marker and located at the center of the screen.

When **Band/Interval Power** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

If the detector mode for the detector on the marker's trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected. Other choices for the detector or Average type will usually cause measurement inaccuracy.

Key Path	Marker Function
Example	<p>CALC:MARK:FUNC BPOW turns on marker 1 as a band power marker.</p> <p>CALC:MARK2:FUNC? returns the current setting of marker function for marker 2. In this case it returns the string: BPOW.</p> <p>CALC:MARK:Y? returns the y-axis value of the Band Power function for marker 1. Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be $0.2^2 = 0.04$. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	See the description under the ““Marker Function” on page 899” key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>If the detector mode for the detector on the marker's trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected.</p> <p>If the selected (specified) marker is off, selecting Band Power via front panel or SCPI will turn the marker on.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3182

Band/Interval Density

Turns on the Band/Interval Density function for the selected marker. If the selected marker is off it is turned on in **Normal** marker mode and located at the center of the screen.

When **Band/Interval Density** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

See [“More Information” on page 903](#).

See “What is band/interval density?” on page 903

Key Path	Marker Function
Example	<p>CALC:MARK:FUNC BDEN turns on marker 1 as a band density marker.</p> <p>CALC:MARK:FUNC? returns the current setting of band function for the marker specified. In this case it returns the string: BDEN.</p> <p>CALC:MARK:Y? returns the y-axis value of the Band Density function for marker 1. Note that the delta value when the Y axis unit is Watt is the square of the delta value when the Y axis unit is Volt. For example, when the percent ratio with Y axis unit in Volt is 0.2, the percent ratio with Y axis unit in Watt will be $0.2^2 = 0.04$. When you read the value out remotely you have to know whether your Y Axis Unit is log (dB), linear (V or A), or power (W).</p>
Notes	<p>The zero-width case is treated as one bucket wide although it shows a width of 0.</p> <p>When the trace the marker is on crosses domains, the width crosses domains as well, to remain the same percentage of the trace</p>
Notes	See the description under the ““Marker Function” on page 899” key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker.
Couplings	<p>If the detector mode for the detector on the marker’s trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected.</p> <p>If the selected (specified) marker is off, selecting Band Density via front panel or SCPI will turn the marker on.</p>
State Saved	n/a.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3183

More Information

It may seem like the band density marker function is exactly like a function of a noise marker with variable width. But they are somewhat different. The Noise markers assume that the signal to be measured is noise-like. Based on this assumption, we can actually make reasonable measurements under very nonideal conditions: any detector may be used, any averaging type, any VBW. In contrast, the Band Power and Band Density markers make no assumption about the statistics of the signal.

If the detector mode for the detector on the marker’s trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected. Other choices for the detector or Average type will usually cause measurement inaccuracy.

What is band/interval density?

On frequency domain traces, the average density across a band is the total band power divided by the bandwidth over which it is measured.

Marker Function

On time domain traces, interval density is the average power in the interval divided by the noise bandwidth of the RBW of the trace.

Marker Function Off

Turns off band functions for the selected marker.

Key Path	Marker Function
Example	:CALC:MARK:FUNC OFF turns off marker functions for marker 1
Notes	See the description under the “Marker” on page 879 key, above.
Dependencies	Fixed markers: It is not possible to change the Band Function for a Fixed marker; so all of the Band Function keys are grayed out for a Fixed marker, including Off
Couplings	Turning off the marker function has no effect on the band span nor does it turn the marker off.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3184

Band Adjust

Opens a menu that lets you set the width or left or right edges of the band.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

Key Path	Marker Function
Dependencies	If the marker is Fixed, Band Adjust is grayed out. If the marker function is Off, Band Adjust is grayed out.
Couplings	If any of the Band Adjust functions are the active function, the wings and arms of the selected marker display in green; otherwise they display in white.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3185

Band/Interval Span

Sets the width of the span for the selected marker.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

In the table below, $\text{sweep_width} = \max(1, \text{sweep_points} - 1)$ and sweep_points is the number of sweep points, set in the **Sweep** menu.

Key Path	Marker Function, Band Adjust
----------	-------------------------------------

Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:SPAN <freq> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:SPAN?
Example	:CALC:MARK12:FUNC:BAND:SPAN 20 MHz sets the band span of marker 12 to 20 MHz :CALC:MARK:FUNC:BAND:SPAN? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain.
Notes	<p>Sending this command selects the subcoded marker</p> <p>The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces).</p> <p>Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.</p>
Couplings	<p>Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values</p> <p>Band/Interval Span is set to 0 when the marker is turned off</p> <p>Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time</p>
Preset	If 0, set to 5% of span, when a marker function is turned on
State Saved	Saved in Instrument State
Min	0 Hz
Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:SPAN
Initial S/W Revision	Prior to A.02.00
Help Map ID	3186

Band/Interval Left

Sets the left edge frequency or time for the band of the selected marker. The right edge is unaffected.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

In the table below, sweep_width = max(1,sweep_points-1) and sweep_points is the number of sweep

Marker Function

points, set in the **Sweep** menu.

Key Path	Marker Function, Band Adjust
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:LEFT <freq> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:LEFT?
Example	:CALC:MARK12:FUNC:BAND:LEFT 20 GHz sets the left edge of the band span of marker 12 to 20 GHz :CALC:MARK:FUNC:BAND:LEFT? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain. When the left edge is moved, the right edge stays anchored; thus, the marker's frequency will change.
Notes	Sending this command selects the subcoded marker The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces). Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.
Couplings	Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Center values Band/Interval Span is set to 0 when the marker is turned off so that means Band/Interval Left is set to the center value at this time Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time
Preset	If 0, Band/Interval Span is set to 5% of span, when a marker function is turned on, which affects Band/Interval Left
State Saved	Saved in Instrument State
Min	0 Hz
Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:STARt (This legacy command was used to control the Reference marker in Delta Pair/Band Pair mode, and is aliased to the new command.)
Initial S/W Revision	Prior to A.02.00

Help Map ID

3188

Band/Interval Right

Sets the right edge frequency or time for the band of the selected marker. The left edge is unaffected

In the table below, $\text{sweep_width} = \max(1, \text{sweep_points} - 1)$ and sweep_points is the number of sweep points, set in the **Sweep** menu.

It is legal to change the width of the band even if there is no marker function on. Generally this can only happen by sending the SCPI command since access to the menu is restricted if no marker function is on.

Key Path	Marker Function, Band Adjust
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:RIGHT <freq> :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :FUNction: BAND:RIGHT?
Example	:CALC:MARK12:FUNC:BAND:RIGHT 20 GHz sets the right edge of the band span of marker 12 to 20 GHz :CALC:MARK:FUNC:BAND:RIGHT? queries the band span of Marker 1
Notes	Units are those of the trace's domain, Hz for frequency domain, s for time domain. When the right edge is moved, the left edge stays anchored; thus, the marker's frequency will change.
Notes	Sending this command selects the subcoded marker The unit of the parameter must match the current domain of the trace the selected marker is on, or an invalid suffix error will be generated. If no unit is sent the fundamental unit for the trace domain will be used (Hz for freq domain traces, s for time domain traces). Note that all the values provided in this table are only valid for frequency domain traces. If the current domain of the trace is time domain, values and unit will be different. In frequency domain, the Preset value is dependant on the frequency range of the instrument. The default value 1.3245 GHz is appropriate only if the instrument is a 26.5 GHz instrument (Option 526). In a 26.5 GHz Instrument, the default span is 26.49 GHz, so 5% of the span corresponds to 1.3245 GHz.
Couplings	Changing the Band/Interval Right necessarily changes the Band/Interval Span and Band/Interval Center values Band/Interval Span is set to 5% of span when any marker function is turned on if and only if it is zero at that time
Preset	If 0, Band/Interval Span is set to 5% of span, when a marker function is turned on, which affects Band/Interval Right
State Saved	Saved in Instrument State
Min	0 Hz

Marker Function

Max	Infinity. Unlike legacy analyzers, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4:X:STOP (This legacy command was used to control the Delta marker in Delta Pair/Band Pair mode, and is aliased to the new command. For compatibility. Note that if you were using the old command for Band Power measurements it will work just fine.)
Initial S/W Revision	Prior to A.02.00
Help Map ID	3190

Measure at Marker

This key and all the keys in this menu only appear with the N6141A or W6141A application or Option EMC installed and licensed.

Key Path	Marker Function
Dependencies	The Measure at Marker menu is not available in Spectrogram.
Initial S/W Revision	A.02.00
Help Map ID	3816

Measure at Marker

When this key is pressed, the test set executes one Measure at Marker function and then returns. Measure at Marker goes to the frequency of the selected marker and takes a reading with each of the three detectors selected in the Detectors menu, using the dwell times specified there, then displays the readings in a window on the display, using the current Y-Axis Unit.


When the Measure at Marker is complete, the test set restores all settings to their pre-Measure-at-Marker values and normal sweeps resume.

Key Path	Marker Function, Measure at Marker
Remote Command	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTION:MAMarker?
Example	:CALC:MARK2:FUNC:MAM? Performs a Measure at Marker function at Marker 2's current frequency and, when completed, returns the results of the measure at marker window in a query

Notes	<p>This query command returns comma separated values for the 3 specified detectors and the frequency value of the marker. If a Detector is off or if no measurement has yet completed, -999.0 will be returned. This can happen, for example, if you are operating with too large a value of (span/sweep points) and the Measure at Marker function does not execute but instead puts up the advisory message, “Span per point too large, narrow span or increase RBW or number of points” (see below).</p> <p>The size of the return data array is fixed at 4. The elements are:</p> <ol style="list-style-type: none"> 1. Detector 1 value (if off, -999.0 for backwards compatibility) 2. Detector 2 value (if off, -999.0 for backwards compatibility) 3. Detector 3 value (if off, -999.0 for backwards compatibility) 4. Frequency of Marker <p>If a sweep is in process when this function executes it aborts, and restarts after the function is complete.</p> <p>This command is not backwards compatible with the E7400 and PSA option 239 so the Backwards Compatibility command is included.</p>
Dependencies	<p>If BW & Avg Type is in Autocoupled state, the (up to three) measurements taken by Measure at Marker are taken with Auto Coupled settings for the functions in the BW menu, even if those functions are in manual.</p>
Couplings	<p>If the specified Marker is not on, the test set turns it on at center of screen and does a peak search before performing the function.</p>
Status Bits/OPC dependencies	<p>OPC goes true when the measurement is complete</p>
Backwards Compatibility SCPI	<p>:MEASure:EMI:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12?</p> <p>(Performs a Measure at Marker function at specified marker’s current frequency and returns the results)</p>
Initial S/W Revision	<p>A.02.00</p>
Help Map ID	<p>3817</p>

Measure at Marker presents its information in a separate window which normally appears in the upper right of the display but can be repositioned to the upper left.

Marker Function

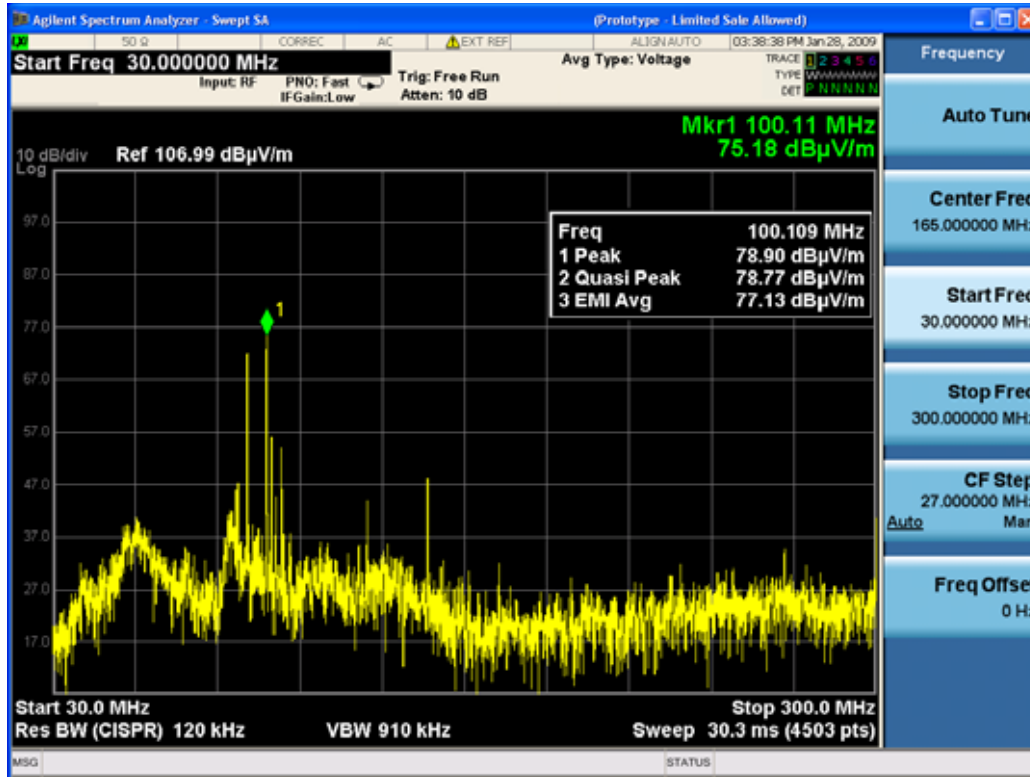

The Measure at Marker box shows the detector name for the selected detectors and “Off” for those not selected. The names used are:

Name	Detector
Normal	Normal
Peak	Peak
Sample	Sample
Neg Peak	Negative Peak
RMS	Average detector with Power Average (RMS)
Log Avg	Average detector with Log-Pwr Average
VoltageAvg	Average detector with Voltage Average
Quasi Peak	Quasi Peak
EMI Avg	EMI Average
RMS Avg	RMS Average

The marker frequency is shown in the “Freq” field. The measured value is shown for all detectors except those that are “Off.” For these, --- is displayed. The current Y-Axis unit is used, and the precision that is used for the detector value displays is exactly the same as for the Marker. The precision used for the Frequency display is six significant digits.

The sequence of steps in the measurement is as follows:

- Any sweep in progress is aborted.
- If in Zero Span, the Center Frequency is used as the frequency at which to take the reading, since in Zero Span, all markers are by definition at the Center Frequency
- If not in Zero Span:
 - If the selected marker is Off, it is first turned on in the center of the screen and a peak search performed.
 - If the selected marker is on, but offscreen, it is first moved to the center of the screen and a peak search performed.
 - A frequency “zoom” function is performed to determine the frequency of the selected marker to the required precision. If you are operating with too large a value of (span/sweep points) then the Measure at Marker window will not display, but instead an advisory message, “Span per point too large, narrow span or increase RBW or number of points”. This means you have chosen a combination of RBW, span and sweep points that makes each trace point much wider than the RBW, so that the trace point in which the signal appears is an inadequately precise measure of its frequency—for example, with a 30 MHz to 1000 MHz span, 601 trace points and 120 kHz RBW, each trace point is 13 times as wide as the RBW. In this case, a SCPI query of the results will yield -999 dBm for each detector.
 - If the zoom is successful, the test set goes to zero span at this frequency
- Each detector is then read in successive single-point zero span sweeps, using a sweep time equal to the specified dwell time. The value displayed by Measure at Marker represents the maximum value output by the detector during the dwell time Autocoupled bandwidth and average type settings are used for each detector unless the **BW & Avg Type** key is set to **As Set**, in which case the current bandwidth and average type settings are used.
- Each result is then displayed in the measure at marker window as it becomes available.
- The test set returns to its pre-Measure at Marker span and settings after executing a Measure at Marker function, including Bandwidth, Avg Type, and EMC Std - regardless of the setting of **BW & Avg Type**
- Finally, if the sweep had to be aborted, the aborted sweep is restarted.

While the function is executing, all the fields except Freq show --- for their values until the measurement is complete for that detector. As each detector is read, an informational message is displayed in the status line, for example,

Measuring with detector 1 (Peak) with RBW=120 kHz

After the last detector, the status line is cleared.

Meas at Marker Window

This key opens a menu which controls the Measure at Marker window.

Key Path	Marker Function, Measure at Marker
----------	---

Marker Function

Readback	In square brackets, the state of the window then the window position, separated by commas, as [On, Left]
Initial S/W Revision	A.02.00
Help Map ID	3818

Window

This key turns the Measure at Marker window on and off. It turns on automatically when Measure at Marker is initiated and turns off on a Preset. If the Window is turned on without a Measure at Marker result, --- is displayed for each result for which the detector is not “Off”.

Key Path	Marker Function, Measure at Marker, Meas at Marker Window
Remote Command	:DISPlay:WINDow:MAMarker[:STATE] ON OFF 1 0 :DISPlay:WINDow:MAMarker[:STATE]?
Example	:DISP:WIND:MAM ON
Couplings	The window turns on automatically when Measure at Marker is initiated and turns off on a Preset.
Preset	Off
State Saved	Saved in instrument state
Readback Text	On Off
Initial S/W Revision	A.02.00
Help Map ID	3819

Position

This key controls the placement of the Measure at Marker window on the display.

Key Path	Marker Function, Measure at Marker, Meas at Marker Window
Remote Command	:DISPlay:WINDow:MAMarker:POSition LEFT RIGHT :DISPlay:WINDow:MAMarker:POSition?
Example	:DISP:WIND:MAM:POS RIGH
Preset	Right
State Saved	Saved in instrument state
Readback Text	Left Right
Initial S/W Revision	A.02.00
Help Map ID	3820

Detectors

This key opens up a menu that allows you to configure the detectors to be used for the Measure at Marker reading. Any of the test set detectors can be used for each of the three detectors, or any of the three can be turned off. The dwell time for each detector is also settable.

When performing a Meas at Marker, the dwell time settings that you select will depend on the characteristics of the emission you are measuring. The default dwell time (200 ms) should work well for typical EUT emissions, but sometimes you will encounter emissions for which the defaults are not optimal. This is especially the case for emissions that vary slowly over time or have a slow repetition rate. By lengthening the dwell times you can increase the likelihood of accurately measuring these low repetition rate signals.

When Measure at marker is activated, the receiver makes a zero span measurement for each of the (up to) three detectors selected, using the Dwell Time set for each detector. If the signal's repetition period is greater than 200 ms (the default setting), the dwell time should be increased to capture at least two and preferably more repetitions of the signal. Additionally, if you do not need or do not wish to use a detector to make a measurement, that specific detector may be turned off.

If the Measure at Marker window is being displayed, and one of the detectors is changed, any value being displayed for that detector changes to “---“ until the next successful reading from that detector.

Key Path	Marker Function, Measure at Marker,
Remote Command	:CALCulate:MAMarker:DETECTOR[1] 2 3 OFF NORMAl AVERAge POSitive SAMPlE NEGative QPEak EAVERage RAVERage :CALCulate:MAMarker:DETECTOR[1] 2 3?
Example	:CALC:MAM:DET2 QPE Sets the detector for measure at marker detector 2 to Quasi peak :CALC:MAM:DET OFF Sets the detector for measure at marker detector 1 to Off
State Saved	Saved in instrument state
Initial S/W Revision	A.02.00
Help Map ID	3821

Key Path	Marker Function, Measure at Marker,
Remote Command	:CALCulate:MAMarker:DETECTOR[1] 2 3:DWELl <dwell time> :CALCulate:MAMarker:DETECTOR[1] 2 3:DWELl?
Example	:CALC:MAM:DET2:DWEL 500 ms Sets the detector for measure at marker detector 2 to dwell for 500 ms
State Saved	Saved in instrument state

Marker Function

Backwards Compatibility SCPI	[:SENSE]:EMI:MEASure:DETEctor:DWELl <dwel time> Sets all of the detectors dwell time to the specified amount
Initial S/W Revision	A.02.00
Help Map ID	0

Detector 1

This menu lets you select the detector to be used for Detector 1, or turn Detector 1 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET QPE Sets the detector for measure at marker detector 1 to Quasi peak :CALC:MAM:DET OFF Sets the detector for measure at marker detector 1 to Off
Preset	Peak
State Saved	Saved in instrument state
Readback Text	Detector name
Initial S/W Revision	A.02.00
Help Map ID	3822

Detector 2

This menu lets you select the detector to be used for Detector 2, or turn Detector 2 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET2 QPE Sets the detector for measure at marker detector 2 to Quasi peak :CALC:MAM:DET2 OFF Sets the detector for measure at marker detector 2 to Off
Preset	Quasi Peak
State Saved	Saved in instrument state
Readback Text	Detector name

Backwards Compatibility SCPI	[:SENSe]:EMI:MEASure:DETEctor:QPEak[:STATe] OFF ON 0 1 If sent with On as a parameter, sets detector 2 to Quasi Peak If sent with Off as a parameter, sets detector 2 to Off
Initial S/W Revision	A.02.00
Help Map ID	3823

Detector 3

This menu lets you select the detector to be used for Detector 3, or turn Detector 3 off. This is a 1-of-N menu that shows the normal list of detectors, but with the “Auto” key replaced by “Off”.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET3 QPE Sets the detector for measure at marker detector 1 to Quasi peak :CALC:MAM:DET3 OFF Sets the detector for measure at marker detector 1 to Off
Preset	EMI Average
State Saved	Saved in instrument state
Readback Text	Detector name
Backwards Compatibility SCPI	[:SENSe]:EMI:MEASure:DETEctor:AVERage[:STATe] OFF ON 0 1 If sent with On as a parameter, sets detector 3 to EMI Average If sent with Off as a parameter, sets detector 3 to Off
Initial S/W Revision	A.02.00
Help Map ID	3824

Detector 1 Dwell Time

This is the time specified by the user to dwell while taking the measurement for detector 1. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 1, this key is grayed out and shows 200 ms.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET:DWEL 400 ms Sets the dwell time for detector 1 to 400 ms
Preset	200 ms
State Saved	Saved in instrument state

Marker Function

Min	1 ms
Max	60 s
Initial S/W Revision	A.02.00
Default Unit	s
Help Map ID	3825

Detector 2 Dwell Time

This is the time specified by the user to dwell while taking the measurement for detector 2. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 2, this key is grayed out and shows 200 ms.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET2:DWEL 400 ms Sets the dwell time for detector 2 to 400 ms
Preset	200 ms
State Saved	Saved in instrument state
Min	1 ms
Max	60 s
Initial S/W Revision	A.02.00
Default Unit	s
Help Map ID	3826

Detector 3 Dwell Time

This is the time specified by the user to dwell while taking the measurement for detector 3. The minimum allowed dwell time is based on the current detector. If “Off” is selected for detector 3, this key is grayed out and shows 200 ms.

Key Path	Marker Function, Measure at Marker, Detectors
Remote Command	See “ Detectors ” on page 913.
Example	:CALC:MAM:DET3:DWEL 400 ms Sets the dwell time for detector 1 to 400 ms
Preset	200 ms
State Saved	Saved in instrument state
Min	1 ms
Max	60 s

Initial S/W Revision	A.02.00
Default Unit	s
Help Map ID	3827

BW & Avg Type

This key controls the type of bandwidth and average type coupling used in Measure at Marker.

If set to “Autocoupled”, then the RBW and Average Type are selected by the instrument during the Measure at Marker function, according to the normal Autocouple rules, regardless of whether RBW and Average Type are currently in Auto. If set to “As Set”, then the current value for RBW and Average Type are used (which of course, could also be “Auto”).

Here are the details of the two modes:

If **BW & Avg Type** is set to **Autocoupled**, **Measure at Marker** behaves as follows:

1. The **EMC Std** changes to CISPR if any of the CISPR detectors (EMI Avg, RMS Avg, QPD) becomes selected; for all other detectors, the value of **EMC Std** that existed before Measure at Marker is used.
2. **RBW** autocouples throughout Measure at Marker, even if **RBW** is set to **Manual**. The autocouple rules are based on whatever the instantaneous setting of EMC Std, Span, and Center Freq are.

If **BW & Avg Type** is set to **As Set**, **Measure at Marker** behaves as follows:

1. The **EMC Std** never changes; so if it is set to **None** it stays at **None** throughout, even if one of the CISPR detectors is selected.
2. If **RBW** is set to **Auto**, then **RBW** autocouples throughout Measure at Marker. The autocouple rules are based on whatever the setting of EMC Std, Span, and Center Freq are.
3. If **RBW** is set to **Manual**, the RBW never changes at all throughout Measure at Marker, it stays at the value to which it was set before Measure at Marker began.

The test set returns to its pre-Measure at Marker span and settings after executing a Measure at Marker function, including Bandwidth, Avg Type, and EMC Std.

It is important to note that, when RBW is coupled to Frequency, as it is when **EMC Std** is anything but “None”, for all EMI measurements, the frequency it is coupled to for Measure at Marker is the MARKER frequency, not the Center Frequency.

Key Path	Marker Function, Measure at Marker
Remote Command	:CALCulate:MAMarker:COUpling ON OFF 1 0 :CALCulate:MAMarker:COUpling?
Example	:CALC:MAM:COUP ON
Preset	Autocoupled
State Saved	Saved in instrument state
Readback Text	Autocoupled As Set
Initial S/W Revision	A.02.00

Marker Function

Help Map ID	3828
-------------	------

Center Presel On/Off

This key controls the automatic centering of the preselector for the Measure at Marker function.

When Center Presel is On, the first step in performing the Measure at Marker function is to perform a Presel Center. This is not performed if the microwave preselector is off, or the selected marker's frequency is below Band 1. If the function is not performed, no message is generated.

Key Path	Marker Function, Measure at Marker
Remote Command	:CALCulate:MAMarker:PCENter ON OFF 1 0 :CALCulate:MAMarker:PCENter?
Example	:CALC:MAM:PCEN ON
Dependencies	Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it is accepted without error, and the query always returns 0.
Preset	On
Backwards Compatibility SCPI	[:SENSe]:EMI:MEASure:PCENter[:STATe] OFF ON 0 1 [:SENSe]:EMI:MEASure:PCENter[:STATe]?
Initial S/W Revision	A.02.00
Help Map ID	3829

Marker To

The Marker -> key accesses menu keys that can copy the current marker value into other test set parameters (for example, Center Freq). The currently selected marker is made the active function on entry to this menu (if the currently selected marker is not on when you press this front-panel key, it is turned on at the center of the screen as a normal type marker and then made the active function).

The **Marker ->** (or Marker To) feature is used to quickly assign a marker's x- or y-axis value to another parameter. For example, if a marker's x-axis value is 500 MHz and y-axis value is -20 dBm, pressing **Mkr -> CF** would assign 500 MHz to **Center Freq** and pressing **Mkr ->Ref Lvl** would assign -20 dBm to **Ref Level**.

Notes	All Marker To functions executed from the front panel use the selected marker's values, while all Marker To remote commands specify in the command which marker's value to use. Consistent with other remote marker commands, sending a Marker To remote command will never change which marker is selected.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3192

Mkr->CF

Sets the center frequency of the test set to the frequency of the selected marker. The marker stays at this frequency, so it moves to the center of the display. In delta marker mode, this function sets the center frequency to the x-axis value of the delta marker. When the frequency scale is in log mode, the center frequency is not at the center of the display.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :CENTer
Example	CALC:MARK2:CENT sets the CF of the test set to the value of marker 2.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Center Frequency apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00

Marker To

Help Map ID	3193
-------------	------

Mkr->CF Step

Sets the center frequency (CF) step size of the test set to the marker frequency, or in a delta-marker mode, to the frequency difference between the delta and reference markers.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :STEP
Example	CALC:MARK1:STEP sets the CF step to the value (or delta value) of marker 1.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting CF Step apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00
Help Map ID	3194

Mkr->Start

Changes the start frequency to the frequency of the selected marker. The marker stays at this frequency, so it moves to the left edge of the display. In delta marker mode, this function sets the start frequency to the x-axis value of the delta marker.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :START
Example	CALC:MARK1:STAR sets the start frequency to the value (or delta value) of marker 1.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.

Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Start Frequency apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00
Help Map ID	3195

Mkr->Stop

Changes the stop frequency to the frequency of the selected marker. The marker stays at this frequency, so it moves to the right edge of the display. In delta marker mode, this function sets the stop frequency to the x-axis value of the delta marker.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :STOP
Example	CALC:MARK3:STOP sets the stop frequency to the value (or delta value) of marker 3.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Dependencies	This function is not available (key is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Stop Frequency apply (see the Frequency Section).
Initial S/W Revision	Prior to A.02.00
Help Map ID	3196

MkrΔ->Span

Sets the start and stop frequencies to the values of the delta markers. That is, it moves the lower of the two marker frequencies to the start frequency and the higher of the two marker frequencies to the stop frequency. The marker mode is unchanged and the two markers (delta and reference) end up on opposite edges of the display.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :DEL Ta:SPAN

Marker To

Example	CALC:MARK2:DELT:SPAN sets the start and stop frequencies to the values of marker 2 and its reference marker.
Notes	Sending this command selects the subcoded marker
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the key is grayed out. In addition, this function is not available when x-axis is the time domain
Couplings	All the usual couplings associated with setting Span apply (see the Section ““Span” on page 1195”).
Backwards Compatibility SCPI	:CALCulate:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:SPAN
Initial S/W Revision	Prior to A.02.00
Help Map ID	3197

MkrΔ->CF

Sets the center frequency to the frequency difference between the selected marker and its reference marker. The marker is then changed to a Normal marker and placed at the center of span.

Key Path	Marker ->
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :DEL Ta:CENTer
Example	CALC:MARK2:CENT sets the CF of the test set to the value of marker 2.
Notes	Sending this command selects the subcoded marker
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the key is grayed out. In addition, this function is not available when x-axis is the time domain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3198

Mkr->Ref Lvl

Sets the reference level to the amplitude value of the selected marker, moving the marked point to the reference level (top line of the graticule). The marker’s mode (Normal, Delta, Fixed) doesn’t matter in this case. For example, given a delta marker, if the delta marker is the selected marker, its amplitude is applied to the reference level. If the reference marker is selected, its amplitude is applied to the reference level.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker, and its amplitude applied to the reference level.

Key Path	Marker ->
----------	---------------------

Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :RLE Vel
Example	CALC:MARK2:RLEV sets the reference level of the test set to the amplitude of marker 2.
Notes	Sending this command selects the subopcoded marker If specified marker is off, this command will turn it on at the center of the screen as a normal type marker.
Couplings	All the usual couplings associated with setting Reference Level apply.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3199

Marker To

Meas

The information in this section is common to all measurements. For key and remote command information for a specific measurement, refer to the section that describes the measurement of interest.

Measurements available under the Meas key are specific to the current Mode.

When viewing Help for measurements, note the following:

NOTE Operation for some keys differs between measurements. The information displayed in Help pertains to the current measurement. To see how a key operates in a different measurement, exit Help (press the Cancel Esc key), select the measurement, then reenter Help (press the Help key) and press that key.

Key Path:	Front-panel key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	4008

Remote Measurement Functions

This section contains the following topics:

[“Measurement Group of Commands” on page 926](#)

[“Current Measurement Query \(Remote Command Only\)” on page 930](#)

[“Limit Test Current Results \(Remote Command Only\)” on page 930](#)

[“Data Query \(Remote Command Only\)” on page 930](#)

[“Calculate/Compress Trace Data Query \(Remote Command Only\)” on page 930](#)

[“Calculate Peaks of Trace Data \(Remote Command Only\)” on page 935](#)


[“Format Data: Numeric Data \(Remote Command Only\)” on page 937](#)

[“Format Data: Byte Order \(Remote Command Only\)” on page 939](#)

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29978

Meas

Measurement Group of Commands

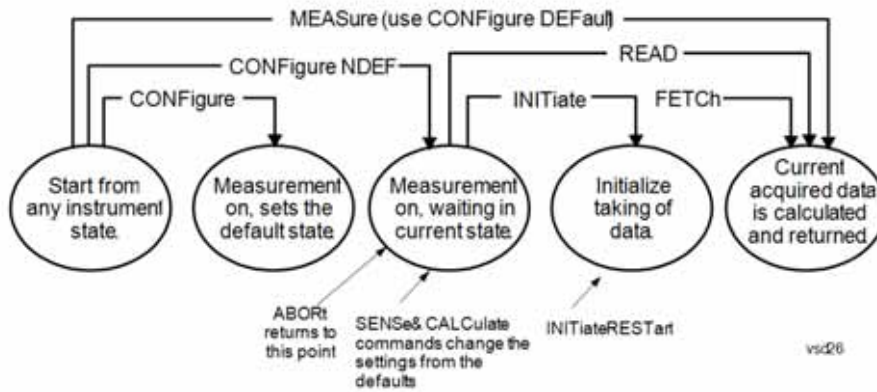

Measure Commands:**:MEASure:<measurement>[n]?**

This is a fast single-command way to make a measurement using the factory default instrument settings. These are the settings and units that conform to the Mode Setup settings (e.g. radio standard) that you have currently selected.

- Stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory defaults
- Initiates the data acquisition for the measurement
- Blocks other SCPI communication, waiting until the measurement is complete before returning results.
- If the function does averaging, it is turned on and the number of averages is set to 10.
- After the data is valid it returns the scalar results, or the trace data, for the specified measurement. The type of data returned may be defined by an [n] value that is sent with the command.

The scalar measurement results will be returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available.

ASCII is the default format for the data output. (Older versions of Spectrum Analysis and Phase Noise mode measurements only use ASCII.) The binary data formats should be used for handling large blocks of data since they are smaller and faster than the ASCII format. Refer to the FORMat:DATA command for more information.

If you need to change some of the measurement parameters from the factory default settings you can set up the measurement with the CONFigure command. Use the commands in the SENSE:<measurement> and CALCulate:<measurement> subsystems to change the settings. Then you can use the READ? command to initiate the measurement and query the results.

If you need to repeatedly make a given measurement with settings other than the factory defaults, you can use the commands in the SENSE:<measurement> and CALCulate:<measurement> subsystems to set up the measurement. Then use the READ? command to initiate the measurement and query results.

Measurement settings persist if you initiate a different measurement and then return to a previous one. Use READ:<measurement>? if you want to use those persistent settings. If you want to go back to the default settings, use MEASure:<measurement>?.

Configure Commands:**:CONFigure:<measurement>**

This command stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory default instrument settings. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON. If you change any measurement settings after using the CONFigure command, the READ command can be used to initiate a measurement without changing the settings back to their defaults.

:CONFigure:NDEFault<measurement> stops the current measurement and changes to the specified measurement. It does not change the settings to the defaults. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON.

The **CONFigure?** query returns the current measurement name.

The **CONFigure:CATalog?** query returns a quoted string of all licensed measurement names in the current mode. For example, "SAN, CHP, OBW, ACP, PST, TXP, SPUR, SEM, LIST".

Fetch Commands:**:FETCh:<measurement>[n]?**

This command puts selected data from the most recent measurement into the output buffer. Use FETCh if you have already made a good measurement and you want to return several types of data (different [n] values, for example, both scalars and trace data) from a single measurement. FETCh saves you the time of re-making the measurement. You can only FETCh results from the measurement that is currently active, it will not change to a different measurement. An error message is reported if a measurement other than the current one is specified.

If you need to get new measurement data, use the READ command, which is equivalent to an INITiate followed by a FETCh.

The scalar measurement results will be returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. (FORMat:DATA)

FETCh may be used to return results other than those specified with the original READ or MEASure command that you sent.

INITiate Commands:**:INITiate:<measurement>**

This command is not available for measurements in all the instrument modes:

- Initiates a trigger cycle for the specified measurement, but does not output any data. You must then use the FETCh<meas> command to return data. If a measurement other than the current one is specified, the instrument will switch to that measurement and then initiate it.
- For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. If you send INIT:ACP? it will change from channel power to ACP and will initiate an ACP measurement.
- Does not change any of the measurement settings. For example, if you have previously started the ACP measurement and you send INIT:ACP? it will initiate a new ACP measurement using the same instrument settings as the last time ACP was run.
- If your selected measurement is currently active (in the idle state) it triggers the measurement, assuming the trigger conditions are met. Then it completes one trigger cycle. Depending upon the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events, for one full trigger cycle. It also holds off additional commands on GPIB until the acquisition is complete.

READ Commands:**:READ:<measurement>[n]?**

- Does not preset the measurement to the factory default settings. For example, if you have previously initiated the ACP measurement and you send READ:ACP? it will initiate a new measurement using the same instrument settings.
- Initiates the measurement and puts valid data into the output buffer. If a measurement other than the current one is specified, the instrument will switch to that measurement before it initiates the measurement and returns results.

For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. Then you send READ:ACP? It will change from channel power back to ACP and, using the previous ACP settings, will initiate the measurement and return results.

- Blocks other SCPI communication, waiting until the measurement is complete before returning the results

If the optional [n] value is not included, or is set to 1, the scalar measurement results will be returned. If the [n] value is set to a value other than 1, the selected trace data results will be returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used when handling large blocks of data since they are smaller and faster than the ASCII format.
(FORMat:DATA)

Initial S/W Revision:

Prior to A.02.00

Help Map ID:

0

Meas

Current Measurement Query (Remote Command Only)

This command returns the name of the measurement that is currently running.

Remote Command:	:CONFIgure?
Example:	CONF?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Limit Test Current Results (Remote Command Only)

Queries the status of the current measurement limit testing. It returns a 0 if the measured results pass when compared with the current limits. It returns a 1 if the measured results fail any limit tests.

Remote Command:	:CALCulate:CLIMits:FAIL?
Example:	CALC:CLIM:FAIL? queries the current measurement to see if it fails the defined limits. Returns a 0 or 1: 0 it passes, 1 it fails.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Data Query (Remote Command Only)

Returns the designated measurement data for the currently selected measurement and subopcode.

n = any valid subopcode for the current measurement. See the measurement command results table for your current measurement, for information about what data is returned for the subopcodes.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. (See the format command descriptions under Input/Output in the Analyzer Setup section.)

Remote Command:	:CALCulate:DATA [n] ?
Notes:	The return trace depends on the measurement. In CALCulate:<meas>:DATA[n], n is any valid subopcode for the current measurement. It returns the same data as the FETCh:<measurement>? query where <measurement> is the current measurement.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Calculate/Compress Trace Data Query (Remote Command Only)

Returns compressed data for the currently selected measurement and sub-opcode [n].

n = any valid sub-opcode for that measurement. See the MEASure:<measurement>? command description of your specific measurement for information on the data that can be returned.

The data is returned in the current Y Axis Unit of the test set. The command is used with a sub-opcode <n> (default=1) to specify the trace. With trace queries, it is best if the test set is not sweeping during the query. Therefore, it is generally advisable to be in Single Sweep, or Update=Off.

This command is used to compress or decimate a long trace to extract and return only the desired data. A typical example would be to acquire N frames of GSM data and return the mean power of the first burst in each frame. The command can also be used to identify the best curve fit for the data.

Remote Command:	:CALCulate:DATA<n>:COMPRESS? BLOCK CFIT MAXimum MINimum MEAN DMEan RMS RMSCubed SAMPLE SDEVIation PPHase [,<soffset>[,<length>[,<roffset>[,<rlimit>]]]]
Example:	To query the mean power of a set of GSM bursts: Supply a signal that is a set of GSM bursts. Select the IQ Waveform measurement (in IQ Analyzer Mode). Set the sweep time to acquire at least one burst. Set the triggers such that acquisition happens at a known position relative to a burst. Then query the mean burst levels using, CALC:DATA2:COMP? MEAN,24e-6,526e-6 (These parameter values correspond to GSM signals, where 526e-6 is the length of the burst in the slot and you just want 1 burst.)
Notes:	The command supports 5 parameters. Note that the last 4 (<soffset>,<length>,<roffset>,<rlimit>) are optional. But these optional parameters must be entered in the specified order. For example, if you want to specify <length>, then you must also specify <soffset>. See details below for a definition of each of these parameters. This command uses the data in the format specified by FORMat:DATA, returning either binary or ASCII data.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

- BLOCk or block data - returns all the data points from the region of the trace data that you specify. For example, it could be used to return the data points of an input signal over several timeslots, excluding the portions of the trace data that you do not want. (This is x,y pairs for trace data and I,Q pairs for complex data.)
- CFIT or curve fit - applies curve fitting routines to the data. <soffset> and <length> are required to define the data that you want. <roffset> is an optional parameter for the desired order of the curve equation. The query will return the following values: the x-offset (in seconds) and the curve coefficients ((order + 1) values).

MIN, MAX, MEAN, DME, RMS, RMSC, SAMP, SDEV and PPH return one data value for each specified region (or <length>) of trace data, for as many regions as possible until you run out of trace data (using <roffset> to specify regions). Or they return the number of regions you specify (using <rlimit>) ignoring any data beyond that.

- MINimum - returns the minimum data point (y value) for the specified region(s) of trace data. For I/Q

Meas

trace data, the minimum magnitude of the I/Q pairs is returned.

- **MAXimum** - returns the maximum data point (y value) for the specified region(s) of trace data. For I/Q trace data, the maximum magnitude of the I/Q pairs is returned.
- **MEAN** - returns a single value that is the arithmetic mean of the data point values (in dB/ dBm) for the specified region(s) of trace data. For I/Q trace data, the mean of the magnitudes of the I/Q pairs is returned. See the following equations.

NOTE If the original trace data is in dB, this function returns the arithmetic mean of those log values, not log of the mean power which is a more useful value. The mean of the log is the better measurement technique when measuring CW signals in the presence of noise. The mean of the power, expressed in dB, is useful in power measurements such as Channel Power. To achieve the mean of the power, use the RMS option.

Equation 1 Mean Value of Data Points for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i \quad \text{vsd27-1}$$

where X_i is a data point value, and n is the number of data points in the specified region(s).

Equation 2 Mean Value of I/Q Data Pairs for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} |X_i| \quad \text{vsd27-2}$$

where $|X_i|$ is the magnitude of an I/Q pair, and n is the number of I/Q pairs in the specified region(s).

- **DMEan** - returns a single value that is the mean power (in dB/ dBm) of the data point values for the specified region(s) of trace data. See the following equation:

Equation 3 DMEan Value of Data Points for Specified Region(s)

$$\text{DME} = 10 \times \log_{10} \left(\frac{1}{n} \sum_{X_i \in \text{region}(s)} 10^{\frac{X_i}{10}} \right) \quad \text{vsd27-3}$$

- **RMS** - returns a single value that is the average power on a root-mean-squared voltage scale (arithmetic rms) of the data point values for the specified region(s) of trace data. See the following equation.

NOTE For I/Q trace data, the rms of the magnitudes of the I/Q pairs is returned. See the following equation.

This function is very useful for I/Q trace data. However, if the original trace data is in dB, this function returns the rms of the log values which is not usually needed.

Equation 4
RMS Value of Data Points for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i^2} \quad \text{vsd27-4}$$

where X_i is a data point value, and n is the number of data points in the specified region(s).

Equation 5
RMS Value of I/Q Data Pairs for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i X_i^*} \quad \text{vsd27-5}$$

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region(s).

Once you have the rms value for a region of trace data (linear or I/Q), you may want to calculate the mean power. You must convert this rms value (peak volts) to power in dBm:

$$10 \times \log[10 \times (\text{rms value})^2]$$

- **SAMPLE** - returns the first data value (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the first I/Q pair is returned.
- **SDEViation** - returns a single value that is the arithmetic standard deviation for the data point values for the specified region(s) of trace data. See the following equation.

For I/Q trace data, the standard deviation of the magnitudes of the I/Q pairs is returned. See the following equation.

Equation 6
Standard Deviation of Data Point Values for Specified Region(s)

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (X_i - \bar{X})^2} \quad \text{vsd27-7}$$

where X_i is a data point value, \bar{X} is the arithmetic mean of the data point values for the specified region(s), and n is the number of data points in the specified region(s).

Meas

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (|X_i| - \bar{X})^2}$$

vsd27-8

where $|X_i|$ is the magnitude of an I/Q pair, \bar{X} is the mean of the magnitudes for the specified region(s), and n is the number of data points in the specified region(s).

- PPHase - returns the x,y pairs of both rms power (dBm) and arithmetic mean phase (radian) for every specified region and frequency offset (Hz). The number of pairs is defined by the specified number of regions. This parameter can be used for I/Q vector ($n=0$) in Waveform (time domain) measurement and all parameters are specified by data point in PPHase.

The rms power of the specified region may be expressed as:

$$\text{Power} = 10 \times \log [10 \times (\text{RMS I/Q value})] + 10.$$

The RMS I/Q value (peak volts) is:

$$\sqrt{\frac{1}{n} \sum_{X_i \in \text{region}} X_i X_i^*}$$

vsd27-9

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region.

The arithmetic mean phase of the specified region may be expressed as:

$$\frac{1}{n} \sum_{Y_i \in \text{region}} Y_i$$


vsd27-10

where Y_i is the unwrapped phase of I/Q pair with applying frequency correction and n is the number of I/Q pairs in the specified region.

The frequency correction is made by the frequency offset calculated by the arithmetic mean of every specified region's frequency offset. Each frequency offset is calculated by the least square method against the unwrapped phase of I/Q pair.


Sample Trace Data - Constant Envelope

(See below for explanation of variables.)

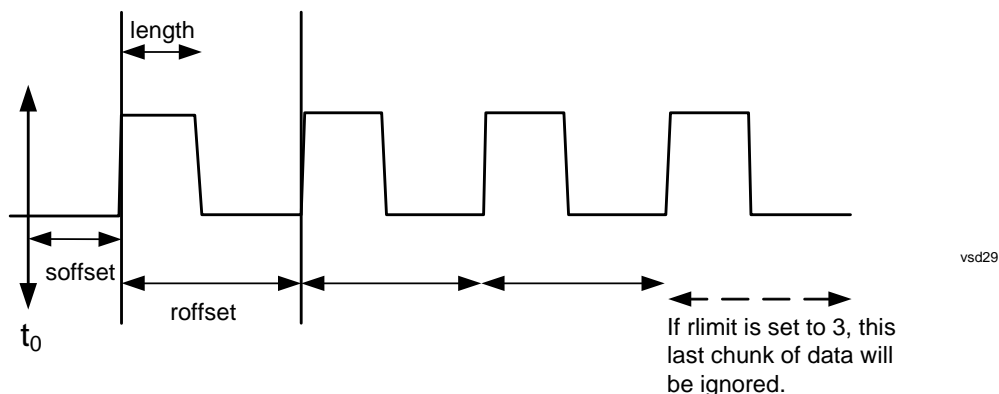

Sample Trace Data - Not Constant Envelope

(See below for explanation of variables.)

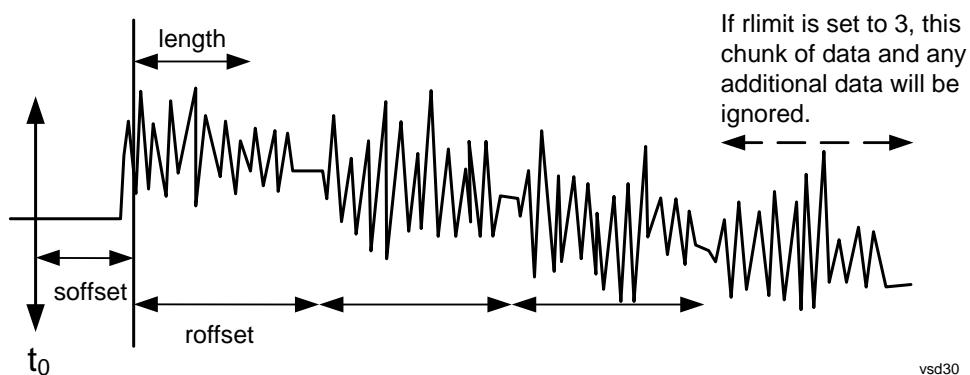

`<soffset>` - start offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to $N_{\text{points}} - 1$, for frequency-domain traces). It specifies the amount of data at the beginning of the trace that will be ignored before the decimation process starts. It is the time or frequency change from the start of the trace to the point where you want to start using the data. The default value is zero.

`<length>` - is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to $N_{\text{points}} - 1$, for frequency-domain traces). It defines how much data will be compressed into one value. This parameter has a default value equal to the current trace length.

`<roffset>` - repeat offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to $N_{\text{points}} - 1$, for frequency-domain traces). It defines the beginning of the next field of trace elements to be compressed. This is relative to the beginning of the previous field. This parameter has a default value equal to the `<length>` variable. Note that this parameter is used for a completely different purpose when curve fitting (see CFIT above).

`<rlimit>` - repeat limit is an optional integer. It specifies the number of data items that you want returned. It will ignore any additional items beyond that number. You can use the Start offset and the Repeat limit to pick out exactly what part of the data you want to use. The default value is all the data.

Calculate Peaks of Trace Data (Remote Command Only)

Returns a list of all the peaks for the currently selected measurement and sub-opcode [n]. The peaks must

Meas

meet the requirements of the peak threshold and excursion values.

n = any valid sub-opcode for the current measurement. See the MEASure:<measurement> command description of your specific measurement for information on the data that can be returned.

The command can only be used with specific sub-opcodes with measurement results that are trace data. Both real and complex traces can be searched, but complex traces are converted to magnitude in dBm. In many measurements the sub-opcode n=0, is the raw trace data which cannot be searched for peaks. And Sub-opcode n=1, is often calculated results values which also cannot be searched for peaks.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. If the format is set to INT,32, it returns REAL,32 data.

The command has four types of parameters:

- Threshold (in dBm)
- Excursion (in dB)
- Sorting order (amplitude, frequency, time)
- Optional in some measurements: Display line use (all, > display line, < display line)

Remote Command:	<code>:CALCulate:DATA[1] 2 3 4 5 6 :PEAKs?</code> <code><threshold>, <excursion> [, AMPLitude FREQuency TIME]</code>
Example:	<p><code>CALC:DATA4:PEAK? -40,10,FREQ,GTDL</code> This will identify the peaks of trace 4 that are above -40 dBm, with excursions of at least 10 dB. The peaks are returned in order of increasing frequency, starting with the lowest frequency. Only the peaks that are above the display line are returned.</p> <p>Query Results 1:</p> <p>With FORMat:DATA REAL,32 selected, it returns a list of floating-point numbers. The first value in the list is the number of peak points that are in the following list. A peak point consists of two values: a peak amplitude followed by its corresponding frequency (or time).</p> <p>If no peaks are found the peak list will consist of only the number of peaks, (0).</p>

Notes:	<p><n> - is the trace that will be used</p> <p><threshold> - is the level below which trace data peaks are ignored. Note that the threshold value is required and is always used as a peak criterion. To effectively disable the threshold criterion for this command, provide a substantially low threshold value such as -200 dBm. Also note that the threshold value used in this command is independent of and has no effect on the threshold value stored under the Peak Criteria menu.</p> <p><excursion> - is the minimum amplitude variation (rise and fall) required for a signal to be identified as peak. Note that the excursion value is required and is always used as a peak criterion. To effectively disable the excursion criterion for this command, provide the minimum value of 0.0 dB. Also note that the excursion value used in this command is independent of and has no effect on the excursion value stored under the Peak Criteria menu.</p> <p>Values must be provided for threshold and excursion. The sorting and display line parameters are optional (defaults are AMPLitude and ALL).</p> <p>Note that there is always a Y-axis value for the display line, regardless of whether the display line state is on or off. It is the current Y-axis value of the display line which is used by this command to determine whether a peak should be reported</p> <p>Sorting order:</p> <p>AMPLitude - lists the peaks in order of descending amplitude, with the highest peak first (default if optional parameter not sent)</p> <p>FREQuency - lists the peaks in order of occurrence, left to right across the x-axis.</p> <p>TIME - lists the peaks in order of occurrence, left to right across the x-axis.</p> <p>Peaks vs. Display Line:</p> <p>ALL - lists all of the peaks found (default if optional parameter not sent).</p> <p>GTDLine (greater than display line) - lists all of the peaks found above the display line.</p> <p>LTDLine (less than display line) - lists all of the peaks found below the display line.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Format Data: Numeric Data (Remote Command Only)

This command specifies the format of the trace data input and output. It specifies the formats used for trace data during data transfer across any remote port. It affects only the data format for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]?, :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

Remote Command:	<pre>:FORMat [:TRACe] [:DATA] ASCii INTEger, 32 REAL, 32 REAL, 64 :FORMat [:TRACe] [:DATA] ?</pre>
------------------------	--

Meas

Notes:	<p>The query response is:</p> <p>ASCii: ASC,8</p> <p>REAL,32: REAL,32</p> <p>REAL,64: REAL,64</p> <p>INTeger,32: INT,32</p> <p>When the numeric data format is REAL or ASCii, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm).</p> <p>The INT,32 format returns binary 32-bit integer values in internal units (m dBm), in a definite length block.</p>
Dependencies:	<p>Sending a data format spec with an invalid number (for example, INT,48) generates no error. The test set simply uses the default (8 for ASCii, 32 for INTeger, 32 for REAL).</p> <p>Sending data to the test set which does not conform to the current FORMat specified, results in an error. Sending ASCII data when a definite block is expected generates message -161 "Invalid Block Data" and sending a definite block when ASCII data is expected generates message -121 "Invalid Character in Number".</p>
Preset:	ASCii
Backwards Compatibility Notes:	Note that the INT,32 format is only applicable to the command, TRACe:DATA. For all other commands/queries which honor FORMat:DATA, if INT,32 is sent the analyzer will behave as though it were set to REAL,32.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

The specs for each output type follow:

ASCii - Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form:

SX.YYYYYEsZZ

Where:

S = sign (+ or -)

X = one digit to left of decimal point

Y = 5 digits to right of decimal point

E = E, exponent header

s = sign of exponent (+ or -)

ZZ = two digit exponent

REAL,32 - Binary 32-bit real values in the current Y Axis Unit, in a definite length block.

REAL,64 - Binary 64-bit real values in the current Y Axis Unit, in a definite length block.

Format Data: Byte Order (Remote Command Only)

This command selects the binary data byte order for data transfer and other queries. It controls whether binary data is transferred in normal or swapped mode. This command affects only the byte order for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]? , :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

By definition any command that says it uses FORMat:DATA uses any format supported by FORMat:DATA.

The NORMal order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4. SWAPped order is when the byte sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1.

Remote Command:	:FORMat:BORDER NORMAL SWAPped :FORMat:BORDER?
Preset:	NORMal
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Meas

Meas Setup

The Meas Setup key opens up a menu of keys that allow you to control the most important parameters for the current measurement.

NOTE In the Meas Setup menu you may configure Averaging, by setting the Average Number and the Average Type.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	3202

Average/Hold Number

Sets the terminal count number N for **Average**, **Max Hold** and **Min Hold** trace types. This number is an integral part of how the average trace is calculated. Basically, increasing N results in a smoother average trace.

See [“More Information” on page 942](#).

See [“AVER:CLE command” on page 942](#).

Key Path	Meas Setup
Remote Command	[:SENSe] :AVERage:COUNT <integer> [:SENSe] :AVERage:COUNT?
Couplings	Restarting any of these functions (Average , Max Hold or Min Hold) restarts all of them, as there is only one count.
Preset	100
State Saved	Saved in Instrument State
Min	1
Max	10000
Status Bits/OPC dependencies	See the Section Sweep/Control@3273 for a discussion of the Sweeping, Measuring, Settling and OPC bits, and the Hi Sweep line. All are affected when a sequence is reset.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3203

Meas Setup

More Information

AVER:CLE command

The AVER:CLE command (below) resets the average/hold count and does an INIT:IMM, which begins another set of sweeps when trigger conditions are satisfied. It only does this if an active trace is in Average or Hold type.

Remote Command:	[:SENSe] :AVERage :CLEar
Example:	AVER:COUN 100 AVER:CLE sets the current count (k and K) to 1 and restarts the averaging process.
Notes:	When the test set receives this command it performs an INIT:IMM, if and only if there is an active trace in Max Hold, Min Hold, or Average type.
Default Unit:	Enter
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3204

Average Type

Lets you control the way averaging is done by choosing one of the following averaging scales: log-power (video), power (RMS), or voltage averaging. Also lets you choose Auto Average Type (default).

When performing Trace Averaging, the equation that is used to calculate the averaged trace depends on the average type. See the descriptions for the keys which select each Average Type (“[Log-Pwr Avg \(Video\)](#)” on page 944 (Video), “[Pwr Avg \(RMS\)](#)” on page 944 (RMS), or “[Voltage Avg](#)” on page 945) for details on these equations.

See “[More Information](#)” on page 943.

Key Path	Meas Setup
Remote Command	[:SENSe] :AVERage :TYPE :AUTO OFF ON 0 1 [:SENSe] :AVERage :TYPE :AUTO?
Preset	ON
State Saved	Saved in Instrument State
Readback line	1-of-N selection as Log-Pwr (Video) for Log-Pwr (Video) Avg Pwr (RMS) for Power Avg Voltagefor Voltage
Initial S/W Revision	Prior to A.02.00
Help Map ID	3205

Remote Command:	[:SENSe] :AVERAge:TYPE RMS LOG SCALAr [:SENSe] :AVERAge:TYPE?
Notes:	Parameters map to avg types as: RMS = Pwr (RMS) Avg LOG = Log-Pwr (Video) Avg SCALAr = Voltage Avg
Preset:	LOG
Backwards Compatibility SCPI:	[:SENSe]:AVERAge:TYPE LINear sets Scalar averaging [:SENSe]:AVERAge:TYPE VOLTage sets Scalar averaging [:SENSe]:AVERAge:TYPE VIDEo sets Log-Power averaging [:SENSe]:AVERAge:TYPE LPOWer sets Log-Power averaging [:SENSe]:AVERAge:TYPE POWEr sets RMS averaging
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3206

More Information

When you select log-power averaging, the measurement results are the average of the signal level in logarithmic units (decibels). When you select power average (RMS), all measured results are converted into power units before averaging and filtering operations, and converted back to decibels for displaying. Remember: there can be significant differences between the average of the log of power and the log of the average power.

These are the averaging processes within the test set and all of them are affected by this setting:

Trace averaging (see Section [“Trace Average” on page 1236](#)) averages signal amplitudes on a trace-to-trace basis. The average type applies to all traces in Trace Average (it is not set on a trace-by-trace basis).

Average detector (see Section [“Detector” on page 1242](#)) averages signal amplitudes during the time or frequency interval represented by a particular measurement point.

VBW filtering (see Section [“BW” on page 771](#)) adds video filtering which is a form of averaging of the video signal.

When **Auto** is selected, the test set chooses the type of averaging (see below). When one of the average types is selected manually, the test set uses that type regardless of other test set settings, and shows Man on the **Average Type** key.

Auto

Chooses the optimum type of averaging for the current test set measurement settings.

Key Path	Meas setup, Average Type
Example	AVER:TYPE:AUTO ON

Meas Setup

Notes	See Average Type , above
Couplings	Here are the auto-select rules for Average Type : Auto selects Voltage Averaging if the Detector for any active trace is EMI Average or QPD or RMS Average ; otherwise it selects Power (RMS) Averaging if a Marker Function (Marker Noise, Band/Intvl Power) is on, or Detector is set to Man and Average ; otherwise if Amplitude, Scale Type is set to Lin it selects Voltage Averaging ; otherwise, if the EMC Standard is set to CISPR, it selects Voltage; otherwise Auto selects Log-Power Average . Note that these rules are only applied to active traces. Traces which are not updating do not impact the auto-selection of Average Type.
State Saved	Saved in Instrument State
Readback	The type auto-selected is displayed in the readback line on the Average Type key
Initial S/W Revision	Prior to A.02.00
Help Map ID	3207

Log-Pwr Avg (Video)

Selects the logarithmic (decibel) scale for all filtering and averaging processes. This scale is sometimes called “Video” because it is the most common display and analysis scale for the video signal within the test set. This scale is excellent for finding CW signals near noise, but its response to noise-like signals is 2.506 dB lower than the average power of those noise signals. This is compensated for in the Marker Noise function.

The equation for trace averaging on the log-pwr scale is shown below, where K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value, providing a continuous running average.)

$$\text{New avg} = ((K-1)\text{Old avg} + \text{New data})/K$$

Assumes all values in decibel scale.

Key Path	Meas setup, Average Type
Example	AVER:TYPE LOG
Notes	See ““Average Type” on page 942”
Couplings	See ““Auto” on page 943”
Readback	Log-Pwr (Video)
Initial S/W Revision	Prior to A.02.00
Help Map ID	3208

Pwr Avg (RMS)

In this average type, all filtering and averaging processes work on the power (the square of the magnitude) of the signal, instead of its log or envelope voltage. This scale is best for measuring the true

time average power of complex signals. This scale is sometimes called RMS because the resulting voltage is proportional to the square root of the mean of the square of the voltage.

In the equation for averaging on this scale (below), K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value, providing a running average.)

$$\text{New avg} = 10 \log \left(\frac{1}{K} \left((K-1)(10\text{Old avg}/10) + 10\text{New data}/10 \right) \right)$$

Equation assumes all values are in the decibel scale.

Key Path	Meas setup, Average Type
Example	AVER:TYPE RMS
Notes	See “Average Type” on page 942
Couplings	See “Auto” on page 943
Readback	Pwr (RMS)
Initial S/W Revision	Prior to A.02.00
Help Map ID	3209

Voltage Avg

In this Average type, all filtering and averaging processes work on the voltage of the envelope of the signal. This scale is good for observing rise and fall behavior of AM or pulse-modulated signals such as radar and TDMA transmitters, but its response to noise-like signals is 1.049 dB lower than the average power of those noise signals. This is compensated for in the **Marker Noise** function.

In the equation for averaging on this scale (below), K is the number of averages accumulated. (In continuous sweep mode, once K has reached the Average/Hold Number, K stays at that value.)

$$\text{New avg} = 20 \log \left(\frac{1}{K} \left((K-1)(10\text{Old avg}/20) + 10\text{New data}/20 \right) \right)$$

Equation assumes all values are in the decibel scale.

Key Path	Meas setup, Average Type
Example	AVER:TYPE SCAL
Notes	See “Average Type” on page 942
Couplings	See “Auto” on page 943
Readback	Pwr (RMS)
Initial S/W Revision	Prior to A.02.00
Help Map ID	3210

Limits

The limits key opens up a menu of keys to control the limits for the current measurement. Limits arrays

Meas Setup

can be entered by the user, sent over SCPI, or loaded from a file.

Initial S/W Revision	A.02.00
Key Path	Meas Setup
Dependencies	This key will only appear if you have the proper option installed in your test set.
Preset	Limits are turned off by a Preset, but the Limits arrays (data) are only reset (deleted) by Restore Mode Defaults. They survive shutdown and restarting of the test set application, which means they will survive a power cycle.
Help Map ID	3832

Select Limit

Specifies the selected limit. The term “selected limit” is used throughout this document to specify which limit is affected by the functions.

Key Path	Meas Setup, Limits
Notes	The selected limit is remembered even when not in the Limit Menu.
Preset	Limit 1, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Initial S/W Revision	A.02.00
Help Map ID	3833

Limit On/Off

Selects whether the limit and margin are displayed. If Test Limits is on, this also determines whether the test trace (see “[Test Trace](#)” on page 948) is tested against the limit. If **Limit On/Off** is **On**, the following occurs:

- The limit line is displayed, in the same color as the limited trace, but paler. Portions of traces which fail the limits are displayed in red.
- The margin line is displayed if Margin is on and the Margin Value is non-zero (see “[Margin](#)” on page 953). The margin line is displayed in the same color as the limit line, but paler still and dashed. Portions of traces which pass the limits but fail the margin is displayed in amber.
- The trace is tested for the purpose of the “Trace Pass/Fail” indication in the graticule if, in addition to **Limit On/Off** being **On**, the trace is displayed and **Test Limits (All Limits)** is on (see “[Test Limits](#)” on page 959). If the trace is not tested, no report of the trace passing or failing is seen on the graticule. Note that the SCPI queries of Limit Pass/Fail are independent of these conditions; the test is always performed when queried over SCPI.

The PASS/FAIL box in the corner of the Meas Bar is only displayed if there is at least one “Trace Pass/Fail” indication displayed in the graticule.

Note that the red and amber coloring of traces which fail the limits and/or margins only applies to traces whose X-axis corresponds to the current test set X-axis. Traces which are not updating (in View, for

example) will not change color if the test set X-axis settings (for example, start and stop frequency) do not match those of the trace, for example if they have been changed since the trace stopped updating. In this case, the Invalid Data indicator (*) will appear in the upper right hand corner.

When the limits are frequency limits but the trace is a zero-span trace, the limit trace is drawn at the limit amplitude of the center frequency. When the limits are time limits but the trace is a frequency domain trace, the limit trace is drawn according to the current time axis, with the left of the screen being 0 and the right being equal to sweep time.

Key Path	Meas Setup, Limits
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :DISPlay OFF ON 0 1 :CALCulate:LLINe [1] 2 3 4 5 6 :DISPlay?
Example	:CALC:LLIN2:DISP ON turns on the display for limit line 2.
Dependencies	This command will generate an “Option not available” error unless you have the proper option installed in your test set.
Couplings	Limit display ON selects the limit. Testing is done on all displayed limits if Test Limits (All Limits) is ON. Entering the limit menu from the GUI turns on the selected limit.
Preset	OFF
State Saved	Saved in State.
Backwards Compatibility SCPI	:CALCulate:LLINe[1] 2:STATe OFF ON 0 1 (In the past you had to send the DISP command as well as the STATe command in order to get a limit on and testing. Now, the DISP command is sufficient, but we accept the state command and do nothing with it)
Initial S/W Revision	A.02.00
Help Map ID	3834

Properties

Accesses a menu which lets you set the properties of the selected limit.

Key Path	Meas Setup, Limits
Initial S/W Revision	A.02.00
Help Map ID	3835

Select Limit

Specifies the selected limit. The term “selected limit” is used throughout this document to specify which limit is affected by the functions.

Key Path	Meas Setup, Limits, Properties
----------	--------------------------------

Meas Setup

Notes	The selected limit is remembered even when not in the Limit Menu.
Preset	Limit 1, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Initial S/W Revision	A.02.00
Help Map ID	3836

Test Trace

Selects the trace you want the limit to test. A limit is applied to one and only one trace; each trace can have both an upper and a lower limit. When executing Limit Test, the limit is applied only to the specified trace.

A trace can have multiple limit lines simultaneously; in that case, only one upper and one lower limit line will affect the color of the trace. Other limit lines are displayed, and affect the pass/fail status, but the trace does not turn red if it crosses a secondary limit line.

Key Path	Meas Setup, Limits, Properties
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :TRACe 1 2 3 4 5 6 :CALCulate:LLINe [1] 2 3 4 5 6 :TRACe?
Example	:CALC:LLIN3:TRAC 2 applies limit 3 to trace 2.
Notes	When the trace display is off, the trace is not tested. The trace is tested only when the trace display is on and Test Limits (see “Test Limits” on page 959) is on.
Couplings	This matters when testing a trace or limit line for failure, via :CALC:LLIN3:FAIL? or :CALC:TRAC2:FAIL?
Preset	Limits 1 and 2 preset to 1, Limits 3 and 4 preset to 2, Limits 5 and 6 preset to 3 Not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Min	1
Max	6
Readback	Trace 1 2 3 4 5 6
Initial S/W Revision	A.02.00
Help Map ID	3837

Type

Selects whether the limit you are editing is an upper or lower limit. An upper limit fails if the trace exceeds the limit. A lower limit fails if the trace falls below the limit.

Key Path	Meas Setup, Limits, Properties
----------	---------------------------------------

Remote Command	:CALCulate:LLINE [1] 2 3 4 5 6 :TYPE UPPER LOWER :CALCulate:LLINE [1] 2 3 4 5 6 :TYPE?
Example	:CALC:LLIN2:TYPE LOW sets limit line 2 to act as a lower limit.
Couplings	If a margin has already been set for this limit line, and this key is used to change the limit type, then the margin value will reverse sign.
Preset	Upper for Line 1, 3, and 5; Lower for Line 2, 4, 6. Not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in State.
Initial S/W Revision	A.02.00
Help Map ID	3838

Interpolation

Accesses a menu which lets you set the frequency and amplitude interpolation of the selected limit.

Key Path	Meas Setup, Limits, Properties
Readback	[Lin Log Frequency, Lin Log Amplitude]
Initial S/W Revision	A.02.00
Help Map ID	3839

Frequency Interpolation

This key is grayed out if Time is the selected X-axis units. Sets the interpolation between frequency points, allowing you to determine how limit trace values are computed between points in a limit table. The available interpolation modes are linear and logarithmic. If frequency interpolation is logarithmic (Log), frequency values between limit points are computed by first taking the logarithm of both the table values and the intermediate value. A linear interpolation is then performed in this logarithmic frequency space. An exactly analogous manipulation is done for logarithmic amplitude interpolation.

Note that the native representation of amplitude is in dB.

For linear amplitude interpolation and linear frequency interpolation, the interpolation is computed as:

$$y = 20 \log \left(\frac{10^{\frac{y_{i+1}}{20}} - 10^{\frac{y_i}{20}}}{f_{i+1} - f_i} (f - f_i) + 10^{\frac{y_i}{20}} \right)$$

For linear amplitude interpolation and log frequency interpolation, the interpolation is computed as:

$$y = 20 \log \left(\frac{10^{\frac{y_{i+1}}{20}} - 10^{\frac{y_i}{20}}}{\log f_{i+1} - \log f_i} (\log f - \log f_i) + 10^{\frac{y_i}{20}} \right)$$

For log amplitude interpolation and linear frequency interpolation, the interpolation is computed as:

Meas Setup

$$y = \frac{y_{i+1} - y_i}{f_{i+1} - f_i} (f - f_i) + y_i$$

For log amplitude interpolation and log frequency interpolation, the interpolation is computed as:

$$y = \frac{y_{i+1} - y_i}{\log f_{i+1} - \log f_i} (\log f - \log f_i) + y_i$$

NOTE Interpolation modes determine how limit values are computed between points in the limit table. The appearance of a limit trace is also affected by the amplitude scale, which may be linear or logarithmic.

Key Path	Meas Setup, Limits, Properties, Interpolation
Remote Command	:CALCulate:LLINE [1] 2 3 4 5 6 :CONTRol:INTerpolate:TYPE LOGarithmic LINear :CALCulate:LLINE [1] 2 3 4 5 6 :CONTRol:INTerpolate:TYPE?
Example	:CALC:LLIN:CONT:INT:TYPE LIN sets limit line 1 frequency interpolation to linear.
Preset	Linear, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3840

Amplitude Interpolation

Sets the interpolation to linear or logarithmic for the specified limiting points set, allowing you to determine how limit trace values are computed between points in a limit table. See Frequency Interpolation for the equations used to calculate limit values between points.

Key Path	Meas Setup, Limits, Properties, Interpolation
Remote Command	:CALCulate:LLINE [1] 2 3 4 5 6 :AMPLitude:INTerpolate:TYPE LOGarithmic LINear :CALCulate:LLINE [1] 2 3 4 5 6 :AMPLitude:INTerpolate:TYPE?
Example	:CALC:LLIN:AMPL:INT:TYPE LIN sets limit line 1 amplitude interpolation to linear.
Preset	Logarithmic, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3841

Fixed / Relative

Opens a menu which will allow you to specify that the selected limit is relative to either Center Frequency or Reference level.

Key Path	Meas Setup, Limits, Properties
Readback	Fixed Rel to CF Rel to RL Rel to CF + RL (square brackets)
Initial S/W Revision	A.02.00
Help Map ID	3842

Relative to CF

Chooses whether the limit line frequency points are coupled to the test set center frequency, and whether the frequency points are expressed as an offset from the test set center frequency. If the limit lines are specified with time, this has no effect. The limit table must in this case support negative frequencies.

For example, assume you have a frequency limit line, and the test set center frequency is at 1 GHz. If Relative to CF is “Off”, entering a limit line segment with a frequency coordinate of 300 MHz displays the limit line segment at 300 MHz, and the limit line segment will not change frequency if the center frequency changes. If Relative to CF is “On”, entering a limit line segment with a frequency coordinate of 300 MHz displays the limit line segment at CF + 300 MHz, or 1.3 GHz. Furthermore, if the center frequency changes to 2 GHz, the limit line segment is displayed at CF + 300 MHz, or 2.3 GHz.

It is possible to change this setting after a limit line has been entered. When changing from On to Off or vice-versa, the frequency values in the limit line table change so that the limit line remains in the same position for the current frequency settings of the test set.

Pressing this button makes Center Frequency the active function.

Key Path	Meas Setup, Limits, Properties, Fixed/Relative
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :FREQUENCY:CMODE:RELative ON OFF 1 0 :CALCulate:LLINe [1] 2 3 4 5 6 :FREQUENCY:CMODE:RELative?
Example	:CALC:LLIN:FREQ:CMOD:REL ON makes limit line 1 relative to the center frequency.
Notes	If the Trace Domain is changed to Time (:CALCulate:LLINe:CONTRol:DOMain TIME), the SCPI command :CALCulate:LLINe[1] 2 3 4 5 6:FREQUENCY:CMODE:RELative ON OFF 1 0 will have no effect.
Couplings	Pressing this button makes Center Frequency the active function.
Preset	Off, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3843

Meas Setup

Relative to RL

Chooses whether the limit line amplitude points are coupled to the test set reference level, and whether the amplitude points are expressed as an offset from the test set reference level.

For example, assume you have a limit line, and the reference level at -10 dBm. If Relative to RL is “Off”, entering a limit line segment with an amplitude coordinate of -20 dB displays the limit line segment at -20 dBm, and the limit line segment will not change amplitude if the reference level amplitude changes. If Relative to RL is “On”, entering a limit line segment with an amplitude coordinate of -20 dB displays the limit line segment at $RL - 20$ dB, or -30 dBm. Furthermore, if the reference level amplitude changes to -30 dBm, the limit line segment is displayed at $RL - 20$ dB, or -50 dBm.

It is possible to change this setting after a limit line has been entered. When changing from On to Off or vice-versa, the amplitude values in the limit line table change so that the limit line remains in the same position for the current reference level settings of the test set.

Key Path	Meas Setup, Limits, Properties, Fixed/Relative
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :AMPLitude:CMODE:RELative ON OFF 1 0 :CALCulate:LLINe [1] 2 3 4 5 6 :AMPLitude:CMODE:RELative?
Example	:CALC:LLIN:AMPL:CMOD:REL ON makes limit line 1 relative to the reference level amplitude.
Couplings	Pressing this button makes Reference level the active function.
Preset	Off, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3844

Description

Provides a description of up to 60 characters by which the operator can easily identify the limit. It is stored in the exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump.

Key Path	Meas Setup, Limits, Properties
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :DESCription "Description" :CALCulate:LLINe [1] 2 3 4 5 6 :DESCription?
Example	:CALC:LLIN:DESC "European Emissions"
Preset	"" (null String), not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state
Readback	As much of the description will fit on one line of the key, followed by “...” if some of the description will not fit on one line of the key.
Initial S/W Revision	A.02.00

Help Map ID	3845
-------------	------

Comment

Sets an ASCII comment field which is stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to be in a screen dump. The Limits .csv file supports this field.

Key Path	Meas Setup, Limits, Properties
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :COMMeNt "text" :CALCulate:LLINe [1] 2 3 4 5 6 :COMMeNt?
Example	:CALC:LLIN1:COMM "this is a comment"
Preset	"" (null String), not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Readback	As much of the description will fit on one line of the key, followed by "..." if some of the description will not fit on one line of the key.
Initial S/W Revision	A.02.00
Help Map ID	3846

Margin

Selects a margin for this limit, which will cause a trace to Fail Margin when the trace is between the limit line and the margin line. Portions of the traces which pass the limit but fail the margin are displayed in an amber color.

A margin is always specified in dB relative to a limit – an upper limit always has a negative margin, and a lower limit always has a positive margin. If a value is entered with the incorrect sign, the system automatically takes the negative of the entered value.

If the limit type is switched from lower to upper while margin is present, the margin reverses sign.

When the Margin is selected, it may be turned off by pressing the Margin key until Off is underlined. This may also be done by performing a preset. Margin is the default active function whenever the margin is on, and it is not the active function whenever the margin is off.

The margin lines are displayed in the same color as limit lines, but paler. If the limited trace is blanked then the limit line and the margin line is blanked as well.

Key Path	Meas Setup, Limits
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :MARGIn <rel_amp1> :CALCulate:LLINe [1] 2 3 4 5 6 :MARGIn? :CALCulate:LLINe [1] 2 3 4 5 6 :MARGIn:STATe OFF ON 0 1 :CALCulate:LLINe [1] 2 3 4 5 6 :MARGIn:STATe?

Meas Setup

Example	<p>:CALC:LLIN1:MARG -2dB sets limit line 1's margin to -2 dB (Limit Line 1 is by default an upper limit).</p> <p>:CALC:LLIN2:MARG 1dB sets limit line 2's margin to 1 dB (Limit Line 2 is by default a lower limit).</p> <p>:CALC:LLIN2:MARG:STAT OFF turns off the margin for limit line 2 and removes any tests associated with that margin line.</p>
Notes	The queries "Limit Line Fail?" (:CALCulate:LLINe[1] 2 3 4 5 6:FAIL?) and "Trace Fail?" (:CALCulate:TRACe[1] 2 3 4 5 6:FAIL?) will return 1 if the margin fails.
Couplings	This will affect :CALC:LLIN3:FAIL or :CALC:TRAC2:FAIL?
Preset	not affected by Mode Preset, set to 0 dB for all Limits by Restore Mode Defaults.
State Saved	Saved in instrument state.
Min	-40 dB (Upper); 0 dB (Lower)
Max	0 dB (Upper); 40 dB (Lower);
Default Unit	dB
Initial S/W Revision	A.02.00
Help Map ID	3847

Edit

Opens the Table Editor for the selected limit line.

When entering the menu, the editor window (with the limit table) turns on, the selected Limit is turned **On** and the amplitude scale is set to **Log**. The display of the trace to which the selected limit applies is turned on (thus, traces in Blank are set to View and traces in Background are set to On). Turning on the Limit means it's display is on, and it's testing mode is on as well; you should turn off any other limits that are on if they interfere with the editing of the selected limit.

NOTE The table editor will only operate properly if the test set is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and it will be slow during computer-intensive operations like narrow-span FFT sweeps.

When exiting the edit menu (by using the Return key or by pressing a test set front panel key), the editor window turns off, however the Limit is still on and displayed, and the amplitude scale remains **Log**.

Limits are turned off by a Preset, but the Limits arrays (data) are only reset (deleted) by Restore Mode Defaults. They survive shutdown and restarting of the test set application, which means they will survive a power cycle.

Key Path	Meas Setup, Limits
----------	---------------------------

Couplings	Turns the Limit Peaks table off. A remote user can enter or access limit line data via :CALCulate:LLINe[1] 2 3 4 5 6:DATA
Initial S/W Revision	A.02.00
Help Map ID	3848

Navigate

Lets you move through the table to edit the desired point

Key Path	Meas Setup, Limits, Edit
Notes	There is no value readback on the key
Initial S/W Revision	A.02.00
Help Map ID	3849

Frequency

Lets you edit the frequency of the current row.

Key Path	Meas Setup, Limits, Edit
Notes	There is no value readback on the key
Initial S/W Revision	A.02.00
Help Map ID	3850

Amplitude

Lets you edit the Amplitude of the current row.

Key Path	Meas Setup, Limits, Edit
Notes	There is no value readback on the key
Min	-1000 dBm
Max	1000 dBm
Initial S/W Revision	A.02.00
Help Map ID	3851

Insert Point Below

Pressing this key inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

Key Path	Meas Setup, Limits, Edit
----------	---------------------------------

Meas Setup

Initial S/W Revision	A.02.00
Help Map ID	3852

Delete Point

This is an immediate action key. It will immediately delete the currently-selected point, whether or not that point is being edited, and select Navigate. The point following the currently-selected point (or the point preceding if there is none) is selected.

Key Path	Meas Setup, Limits, Edit
Initial S/W Revision	A.02.00
Help Map ID	3853

Copy from Limit

Copies an existing limit into the current limit, including all secondary parameters (Description, Associated Trace, Type, Margin, Interpolation, Relative to CF/RL).

Remote Command:	:CALCulate:LLINE [1] 2 3 4 5 6 :COPY LLINE1 LLINE2 LLINE3 LLINE4 LLINE5 LLINE6
Example:	:CALC:LLINE2:COPY LLINE1 copies the data from line 1 into line 2.
Notes:	Auto return to the Edit menu.
Initial S/W Revision:	A.02.00
Help Map ID:	3874

Build from Trace

Builds a limit using an existing trace. This command will overwrite all data in the limit. Since a straight copy would typically have hundreds or thousands of segments, the data is approximated to better represent a limit line; small excursions whose width is less than 10 trace buckets will sometimes not be captured. Secondary parameters which are not associated with traces (Description, Associated Trace, Type, Margin, Interpolation, Relative to CF/RL) are unchanged.

When taking a trace in order to build a limit, it will often work well to take the trace with a resolution bandwidth wider than the expected measurement, a video bandwidth lower than the expected measurement, and with the detector set to Max Hold or Min Hold.

Note that an upper limit is built above the trace, while a lower limit is built below the trace. If the trace is constant, the limit should pass after being built.

Remote Command:	:CALCulate:LLINE [1] 2 3 4 5 6 :BUILd TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6
Example:	:CALC:LLIN2:BUIL TRACE1 builds limit line 2 based on the data in trace 1. This will overwrite the data in the table editor.
Notes:	Auto return to Edit menu.

Initial S/W Revision:	A.02.00
Help Map ID:	3873

Offset

Enters a menu which allows you to offset the limit trace by a specified frequency, time, or amplitude. The offsets are immediately applied to the limit trace for display and failure calculation; the offset can also be applied to the points in the limit line.

Key Path	Meas Setup, Limits, Edit
Initial S/W Revision	A.02.00
Help Map ID	3870

X Offset

Offsets the limit trace by some specified frequency (for Frequency-based limit lines) or a time (for time-based limit lines).

Key Path	Meas Setup, Limits, Edit, Offset
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :OFFSet:X <value> :CALCulate:LLINe [1] 2 3 4 5 6 :OFFSet:X? <value> = <freq> if Limit X-Axis Unit is Frequency, <value> = <time> if Limit X-Axis Unit is Time
Example	:CALC:LLIN:OFFS:X -50MHZ sets the X axis offset to -50 MHz. :CALC:LLIN:OFFS:UPD will apply the X axis offset to all points in the limit line, then reset the X axis offset to zero.
Preset	0 Hz if Limit X-Axis Unit is Frequency 0 S if Limit X-Axis Unit is Time
State Saved	Saved in State, survives Preset
Min	-500 GHz
Max	500 GHz
Default Unit	Determined by X axis scale.
Initial S/W Revision	A.02.00
Help Map ID	3871

Y Offset

Offsets all segments in the limit line by some specified amplitude.

Key Path	Meas Setup, Limits, Edit, Offset
----------	---

Meas Setup

Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :OFFSet:Y <rel ampl> :CALCulate:LLINe [1] 2 3 4 5 6 :OFFSet:Y?
Example	:CALC:LLIN:OFFS:Y -3 dB sets the Y axis offset to -3 dB. :CALC:LLIN:OFFSet:UPD will apply the Y axis offset to all points in the limit line, then reset the Y axis offset to zero.
Preset	0 dB
State Saved	Saved in instrument state.
Min	-Infinity
Max	+Infinity
Default Unit	dB
Initial S/W Revision	A.02.00
Help Map ID	3872

Apply Offsets to Limit Table

Adds the X and Y offsets to each point in the limit table, then resets the X and Y offset values to zero. This has no effect on the position of the limit trace.

For example, if the X offset is -10 MHz and the Y offset is 1 dB, the values in the limit table are updated as follows: 10 MHz is subtracted from each X value, 1 dB is added to each Y value. The offset values are then reset to zero. The limit trace is not moved and the limit table is updated to accurately reflect the currently-displayed limit trace.

Key Path	Meas Setup, Limits, Edit, Offset
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :OFFSet:UPDate
Example	:CALC:LLIN:OFFS:UPD sets updates the limit table to reflect the X and Y offsets, then resets the offsets to zero.
State Saved	No state
Initial S/W Revision	A.02.00
Help Map ID	3866

Scale X Axis

Matches the X-axis to the selected Limit, as well as possible.

For frequency limits and a frequency-domain X-axis, sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Limit. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency so that span exceeds this range by one graticule division on either side.

For time limits and a time-domain X-axis, sets the sweep time to match the maximum Time of the selected Limit.

If the domain of the selected limit does not match the domain of the X-axis, no action is taken. Standard

clipping rules apply, if the value in the table is outside the allowable range for the X axis.

Key Path	Meas Setup, Limits, Edit
Initial S/W Revision	A.02.00
Help Map ID	3867

Delete Limit

Deletes the currently selected limit line. Pressing Delete Limit purges the data from the limit line tables.

Limit data – including secondary parameters such as description, margin value, et cetera - are cleared and returned to factory preset settings.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete limit. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “Limit deleted” appears in the MSG line.

Key Path	Meas Setup, Limits
Remote Command	:CALCulate:LLINe [1] 2 3 4 5 6 :DELeTe
Example	:CALC:LLIN2:DEL deletes all data for limit line 2.
Initial S/W Revision	A.02.00
Help Map ID	3854

Test Limits

Selects whether displayed traces are tested against displayed limits (i.e. those for which Limit On/Off is set to On).

For each displayed trace for which a Limit is turned on, a message is displayed in the upper-left corner of the graticule to notify whether the trace passes or fails the limits.

If the trace is at or within the bounds of all applicable limits and margins, the text “Trace x Pass” is displayed in green, where x is the trace number. A separate line is used for each reported trace.

If the trace is at or within the bounds of all applicable limits, but outside the bounds of some applicable margin, the text “Trace x Fail Margin” is displayed in amber, where x is the trace number. A separate line is used for each reported trace.

If the trace is outside the bounds of some applicable limits, the text “Trace x Fail” is displayed in red, where x is the trace number. A separate line is used for each reported trace.

If the trace has no enabled limits, or the trace itself is not displayed, no message is displayed for that trace.

The PASS/FAIL box in the corner of the Meas Bar is only displayed if there is at least one “Trace Pass/Fail” indication displayed in the graticule.

If two amplitude values are entered for the same frequency, a single vertical line is the result. In this case, if an upper line is chosen, the lesser amplitude is tested. If a lower line is chosen, the greater amplitude is tested.

Meas Setup

This command only affects the display, and has no impact on remote behavior. Limit queries over SCPI test the trace against the limit regardless of whether the trace or the limit is turned on (exception: the query `:CALCulate:TRACe[1]|2|3|4|5|6:FAIL?` tests only the limits that are turned on for that trace).

Key Path	Meas Setup, Limits
Remote Command	<code>:CALCulate:LLINe:TEST OFF ON 0 1</code> <code>:CALCulate:LLINe:TEST?</code>
Example	<code>:CALC:LLIN:TEST ON</code> turns on testing, and displays the results in the upper left corner.
Preset	On, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3855

X-Axis Unit

Selects how the limit-line segments are defined. Pressing X-axis unit selects whether the limit lines are entered using frequency (Freq) or sweep time (Time) to define the segments. They can be specified as a table of limit-line segments of amplitude versus frequency, or of amplitude versus time. When the X-Axis Unit is set to Time, a time value of zero corresponds to the start of the sweep, which is at the left edge of the graticule, and the column and key in the Limit Table Editor will read Time instead of Frequency

Switching the limit-line definition between Freq and Time will erase all of the current limit lines. When you do this from the front panel, a warning dialog will pop up letting you know that you are about to erase all the limit lines, and prompting you to hit “OK” if you are sure.

Changing the X-axis unit will erase all your limit lines. Are you sure you want to do this? Press **Enter** or **OK** to proceed, or **Cancel (Esc)** to cancel.

Key Path	Meas Setup, Limits
Remote Command	<code>:CALCulate:LLINe:CONTRol:DOMain FREQuency TIME</code> <code>:CALCulate:LLINe:CONTRol:DOMain?</code>
Example	<code>:CALC:LLIN:CONT:DOM FREQ</code> deletes all currently existing limit lines, then sets all limit lines to be specified in terms of frequency.
Couplings	This affects all limit lines simultaneously, and resets all limit line data except the .wav file and email address stored in the Actions.
Preset	Freq, not affected by Mode Preset, preset by Restore Mode Defaults.
State Saved	Saved in instrument state.
Initial S/W Revision	A.02.00
Help Map ID	3856

Delete All Limits

Deletes all limit lines. Pressing Delete All Limits purges the data from all limit line tables.

All limit data are cleared and returned to factory preset settings.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all limits. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press OK or Enter; if so, after the deletion, the informational message “All Limits deleted” appears in the MSG line.

Key Path	Meas Setup, Limits
Remote Command	:CALCulate:LLINe:ALL:DELeTe
Example	:CALC:LLIN:ALL:DEL deletes all data for all limit lines.
Initial S/W Revision	A.02.00
Help Map ID	3857

Limit Line Data (Remote Command Only, Backwards Compatibility)

Defines the limit line values, and destroys all existing data. Up to 200 points may be defined for each limit using the following parameters.

<x>Frequency or time values as specified by :Calculate:LLINe:CONTrol:DOMain. Units default to Hz (for frequency) and seconds (for time).

Range: –30 Gs to +30 Gs for time limits, –3 kHz to +350 GHz for frequency limits.

<ampl>Amplitude values units default to dBm. Up to two amplitude values can be provided for each x-axis value, by repeating <x-axis> in the data list.

Range: –1000 dBm to +1000 dBm

<connect> connect values are either "0" or "1." A "1" means this point is connected to the previously defined point to define the limit line. A "0" means that it is a point of discontinuity and is not connected to the preceding point. The connect value is ignored for the first point.

Remote Command:	:CALCulate:LLINe [1] 2 3 4 5 6 :DATA <x>, <ampl>, <connect> :CALCulate:LLINe [1] 2 3 4 5 6 :DATA?
Example:	:CALC:LLIN3:DATA 1E9,-20,0,2E9,-20,1,2E9,-10,1,3E9,-10,1 describes a stair-stepped limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults. However, it survives shutdown/restart of the test set application (including power cycle)
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00

Meas Setup

Help Map ID:	0
--------------	---

Limit Line Fail? (Remote Command Only)

Tests a limit line against its associated trace. Returns a 0 if the trace is within the limit and margin, a 1 if the trace exceeds either the limit or the margin.

Note that this command only tests one limit line – other limit lines are not tested when executing this command. To see whether a trace passed all limits, use :CALCulate:TRACe:FAIL?.

Note this command performs the test regardless of whether the trace or the limit is turned on on the display.

Remote Command:	:CALCulate:LLINe [1] 2 3 4 5 6 :FAIL?
Example:	:CALC:LLIN:FAIL? returns a zero if limit line 1's associated trace has no failure, 1 if there is a margin or limit failure.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Limit State (Remote Command Only, SCPI standard compatibility)

Sets or queries whether the limit line is tested. This command is identical to :CALC:LLIN[1]|2|3|4|5|6:DISP.

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :STATe ON OFF 0 1 :CALCulate:LIMit [1] 2 3 4 5 6 :STATe?
Example:	:CALC:LIM:STAT ON turns on limit line 1
Couplings:	This command is identical to :CALC:LLIN:DISP Testing is done on all displayed limits if "Test All Limits" is ON.
Preset:	Off (all limits)
State Saved:	Saved in State.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Limit Line Control (Remote Command Only, SCPI standard compatibility)

Defines a list of limit line control (frequency or time) values for a given limit line. Up to 2000 points may be defined for each limit using the following parameters.

<x>Frequency or time values as specified by :Calculate:LLINe:CONTrol:DOMain. Units default to Hz (for frequency) and seconds (for time).

Range: -30 Gs to +30 Gs for time limits, -3 kHz to +1200 GHz for frequency limits.

Note that X values may be repeated if a vertical step in the limit line is desired.

The points query returns the number of points in the control. It should match the number of points in the amplitude, that is, the number of values for the CONTROL axis and for the corresponding UPPER and/or LOWER limit lines must be identical. If one array is larger than the other, the limit trace is built using only as much data as is contained in the smaller array.

An empty array returns not a number (9.91e+37 to a data query), 0 to a POINTs query.

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :CONTrol [:DATA] <x>, <x>, ... :CALCulate:LIMit [1] 2 3 4 5 6 :CONTrol [:DATA] ?
Example:	:CALC:LIM:CONT 1GHz,2GHz,2GHz,3GHz describes the X values of a stair-stepped limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :CONTrol :POINTs?
Example:	:CALC:LIM:CONT:POIN? returns the number of points in the limit line.
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Limit Line Upper / Lower (Remote Command Only, SCPI standard compatibility)

Defines a list of amplitude values for a given limit line. Changing the number of elements in the list spectrum will automatically turn the limit line off. Using the “UPP” syntax defines an upper limit line, using the “LOW” syntax defines a lower limit line. Note that a line may not be simultaneously both upper and lower; the type of the limit line will automatically be changed as appropriate. Up to 200 points may be defined for each limit using the following parameters.

<ampl>Amplitude values units default to dBm.

Range: -200 dBm to +100 dBm

The points query returns the number of points in the amplitude list. It will not be possible to turn on the limit line unless the number of points in the control matches the number of points in the amplitude.

The points query returns the number of points in the amplitude list. It should match the number of points in the control, that is, the number of values for the CONTROL axis and for the corresponding UPPER and/or LOWER limit lines must be identical. If one array is larger than the other, the limit trace is built using only as much data as is contained in the smaller array.

Meas Setup

An empty array returns the system error “list is empty” to a data query, 0 to a POINTs query.

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :UPPer [:DATA] <ampl>, <ampl>, ... :CALCulate:LIMit [1] 2 3 4 5 6 :UPPer [:DATA] ?
Example:	:CALC:LIM:UPP -10, -10, -20, -20 describes the amplitude values of an upper limit line
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :UPPer :POINTs?
Example:	:CALC:LIM:UPP:POIN? returns the number of points in the upper limit line.
Preset:	Upper Limit line data/points is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :LOWer [:DATA] <ampl>, ... :CALCulate:LIMit [1] 2 3 4 5 6 :LOWer [:DATA] ?
Example:	:CALC:LIM:LOW -10, -10, -20, -20 describes the amplitude values of an lower limit line
Preset:	Limit line data is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 :LOWer :POINTs?
Example:	:CALC:LIM:UPP:POIN? returns the number of points in the lower limit line.
Preset:	Limit line data/points is cleared by Restore Mode Defaults.
State Saved:	Saved in instrument state.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Limit Fail? (Remote Command Only, SCPI standard Compatibility)

Tests a limit line against its associated trace. Returns a 0 if the trace is within the limit and margin, a 1 if the trace exceeds either the limit or the margin. This command is identical to “:CALC:LLIN:FAIL?”

Note that this command only tests one limit line – other limit lines are not tested when executing this command. To see whether a trace passed all limits, use :CALCulate:TRACe:FAIL?.

Note this command performs the test regardless of whether the trace or the limit is turned on on the display.

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 : FAIL?
Example:	:CALC:LIM:FAIL? returns a zero if limit line 1’s associated trace has no failure, 1 if there is a margin or limit failure.
Couplings:	This command is identical to :CALC:LLIN:FAIL?
Initial S/W Revision:	A.02.00
Help Map ID:	0

Limit Clear (Remote Command Only, SCPI standard Compatibility)

Clears a limit line, and all associated data. This command is identical to “:CALC:LLIN:DEL”

Remote Command:	:CALCulate:LIMit [1] 2 3 4 5 6 : CLear
Example:	:CALC:LIM2:CLE deletes all data for limit line 2.
Couplings:	This command is identical to :CALC:LLIN:DEL
Initial S/W Revision:	A.02.00
Help Map ID:	0

Trace Fail? (Remote Command Only)

Tests a trace against all associated limit lines. Returns a 0 if the trace is within all limits and margins, a 1 if the trace exceed either the limit or the margin. If no limits apply to the selected trace, this will automatically return a 0.

Only applies to limits that are turned on, if a Limit is off it will not be tested. If a Trace is not displaying it will still be tested, and if **Test Limits (All Limits)** is off the Trace will still be tested.

This command ignores limit lines that are assigned to other traces.

Remote Command:	:CALCulate:TRACe [1] 2 3 4 5 6 : FAIL?
Example:	:CALC:TRAC3:FAIL? returns a zero if there is no failure, 1 if the trace exceeds either the limit or the margin.
Initial S/W Revision:	A.02.00
Help Map ID:	0

Meas Setup

Fixed / Relative Limit (Remote Command Only, Backwards Compatibility)

This command sets both Relative to CF and Relative to RL simultaneously for all limits. If queried, it returns whether Limit Line 1 is set Relative to CF, and ignores all other fixed/relative data.

Remote Command:	:CALCulate:LLINe:CMODE FIXed RELative :CALCulate:LLINe:CMODE?
Example:	:CALC:LLIN:CMOD REL makes all limit lines relative to the center frequency and reference level.
Notes:	<p>This SCPI command is only supported for Backwards Compatibility.</p> <p>On the X-Series, this functionality is provided by a key which is specific to each limit line, and which provides a sub-menu with 2 keys (Relative to CF / Relative to RL).</p> <p>In order to be consistent with the implementation of the following new commands:</p> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:FREQuency:CMODE:RELative ON OFF 1 0</pre> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:FREQuency:CMODE:RELative?</pre> <p>and</p> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative ON OFF 1 0</pre> <pre>:CALCulate:LLINe[1] 2 3 4 5 6:AMPLitude:CMODE:RELative?</pre> <p>The :CALCulate:LLINe:CMODE? Query will returns 1 if Limit Line 1 is set Relative to CF, and returns 0 otherwise.</p>
Preset:	Fixed
Initial S/W Revision:	A.02.00
Help Map ID:	0

Merge Limit Line Data

Adds the points with the specified values to the current limit line, allowing you to merge limit line data. Up to two amplitude values are allowed for each X value. If more than 200 points are entered to be merged, the first 200 points are merged, then an error ‘too many DATA entries’ is reported.

Remote Command:	:CALCulate:LLINe [1] 2 3 4 5 6 :DATA:MERGe <x-axis>, <ampl>, <connected>
Example:	:CALC:LLIN1:DATA:MERG 1000000000,-20,0,2000000000,-30,1 merges the 10 GHz segment and the 20 GHz segment into limit line 1. Note that the 20 GHz segment is connected to the next lower point, which may or may not be the 10 GHz point.
Notes:	This SCPI command is only supported for Backwards Compatibility.
Preset:	Fixed
Initial S/W Revision:	A.02.00

Help Map ID:

0

N dB Points

Turns N dB points on and off and allows you to set the N dB value. N dB uses the selected marker. If the selected marker is not on when N dB is turned on, the selected marker turns on, as a Normal marker, at center screen, and is used by N dB.

See “N dB Points Results Query” on page 968.

See “More Information” on page 968.

Key Path	Meas Setup
Remote Command	:CALCulate:BWIDth BANDwidth:NDB <rel_ampl> :CALCulate:BWIDth BANDwidth:NDB? :CALCulate:BWIDth BANDwidth[:STATE] OFF ON 0 1 :CALCulate:BWIDth BANDwidth[:STATE]?
Notes	If the selected marker is turned Off it turns off N dB Points. N DB Points is unaffected by Auto Couple
Preset	Off, 3.01 dB OFF
Preset	Off, 3.01 dB OFF
State Saved	The on/off status and the offset value are both saved in instrument state.
Min	-140 dB
Max	-0.01 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	3211

Meas Setup


N dB Points Results Query

Remote Command:	:CALCulate:BWIDth BANDwidth:RESult?
Example:	:CALC:MARK:AOFF set selected marker to 1 :CALC:MARK:MAX put marker 1 on peak :CALC:BWID ON turn on N dB for the selected marker (1) :CALC:BWID:NDB-3.01 set the offset to -3.01 dB :CALC:BWID:RES? Query the result
Notes:	-100 returned if invalid reading
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3212

More Information

A marker should be placed on the peak of interest before turning on N dB points. The N dB points function looks for the two points on the marker's trace closest to the marker's X-axis value that are N dB below the marker's amplitude, one above and the other below the marker's X-axis value. (That is, one point is to the right and one is to the left of the selected marker.) The selected N dB value is called the offset. The function reports the frequency difference (for frequency domain traces) or time difference (for time domain traces) between those two points.

Each point is identified by a horizontal arrow pointing towards the marker, next to the trace. The arrows used by the N dB Points function is as shown in the figure below (where each square represents one pixel). They point in, horizontally, at the trace below a peak, on either side of its skirts. There is one pixel between the arrow and the trace

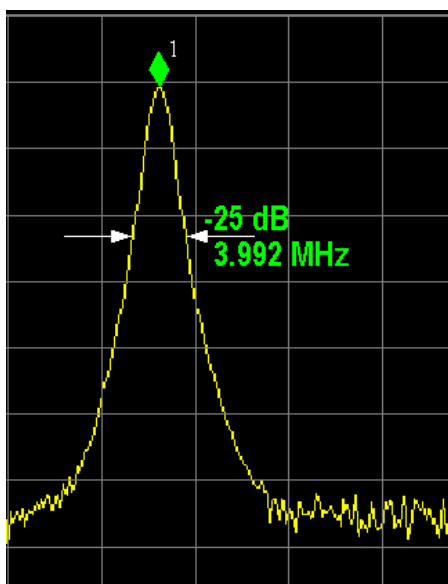


N dB Points can be used to measure the bandwidth of a signal; it is commonly used in conjunction with a tracking generator to measure filter bandwidths.

In one of the common use cases, the marker is placed on a peak, and the arrows are displayed N dB down the skirt from the marker on either side of the peak. The N dB value and the frequency difference between the two arrows is displayed around the arrow as shown in the figure above. Normally this displays on the right hand arrow, but if this would place any part of the text off screen to the right then it displays on the left arrow.


If the test set is unable to find data that is N dB below the marker on either side of the marker, the arrows are displayed at the indicator point of the marker, no value (---) is displayed as the result and -100 Hz returned remotely (see figure below):



Some sample N dB scenarios are shown below, to illustrate how the function works in various cases. In each case, the two-headed blue arrow represents N dB of amplitude.

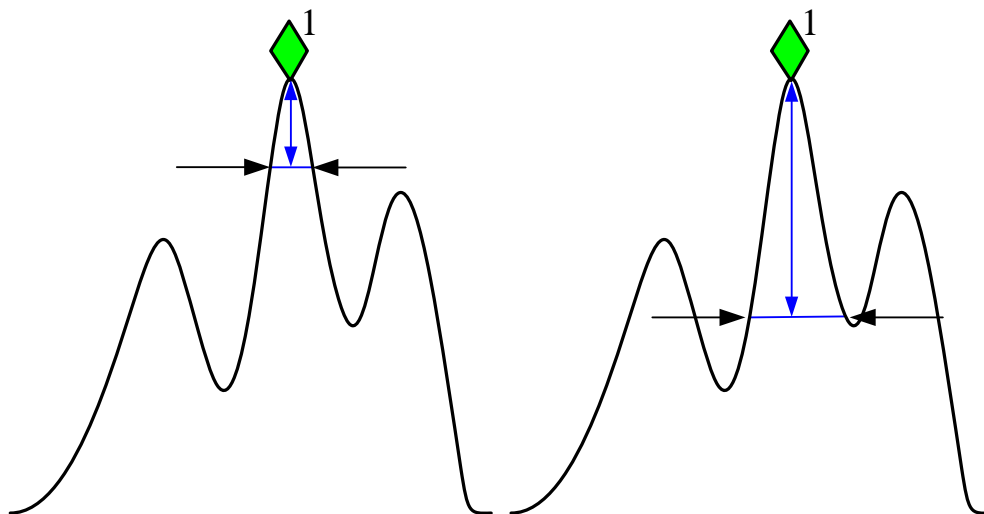

Meas Setup

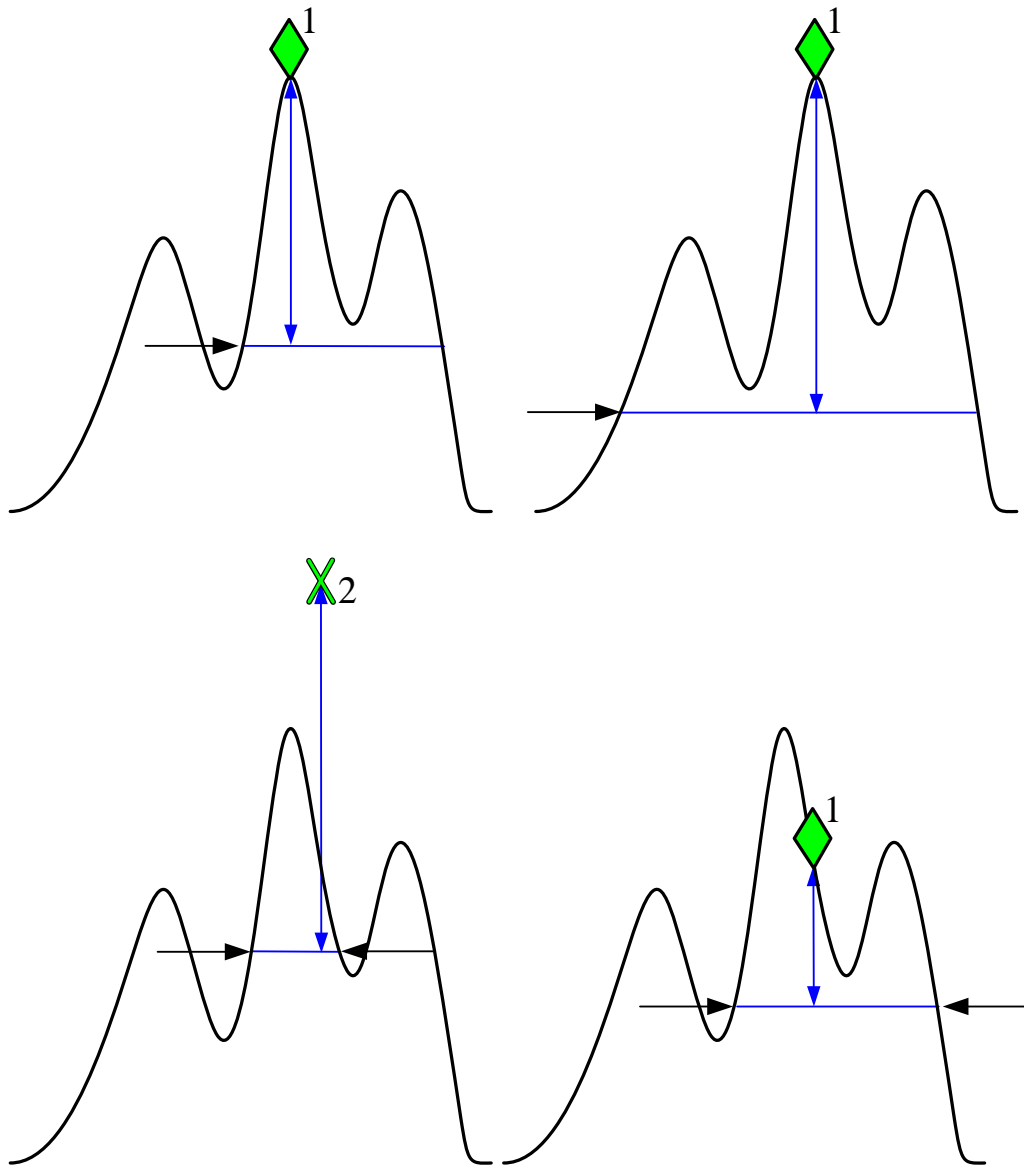

PhNoise Opt

Selects the LO (local oscillator) phase noise behavior for various desired operating conditions.

Remote Command:	<code>[:SENSe] :FREQuency:SYNTHeSis [:STATe] 1 2 3</code> <code>[:SENSe] :FREQuency:SYNTHeSis [:STATe] ?</code>
Example:	<code>FREQ:SYNT 2</code> selects optimization for best wide offset phase noise

Notes:	Parameter: 1 - optimizes phase noise for small frequency offsets from the carrier. 2 - optimizes phase noise for wide frequency offsets from the carrier. 3 - optimizes LO for tuning speed
Preset:	Because this function is in Auto after preset, and because Span after preset > 314.16 kHz (see Auto rules, next section) the state of this function after Preset is 2.
Dependencies:	Does not appear in all models. The key is blank in those models, but the SCPI command is accepted for compatibility (although no action is taken).
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3213

Auto

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various test set operating conditions.

The X-Series has two grades of LO; a high performance LO that gives the best phase noise performance; and a medium-performance LO that gives excellent performance.

In models with the high performance LO, Auto will choose:

Fast Tuning whenever Span > 44.44 MHz or RBW > 1.9 MHz

otherwise, if center frequency is < 195 kHz OR ALL of the following are true:

CF 1 MHz AND Span 1.3 MHz AND RBW 75 kHz

then Best Close in Phase Noise;

otherwise, Best Wide-offset Phase Noise

In models with the medium-performance LO, Auto will choose:

Fast Tuning whenever Span > 12.34 MHz or RBW > 250 kHz

otherwise, if center frequency is < 25 kHz OR ALL of the following are true:

CF >= 1 MHz AND Span <= 141.4 kHz AND RBW <= 5 kHz

then **Best Close in Phase Noise**;

otherwise, **Best Wide-offset Phase Noise**

In units whose hardware does not provide for an extra-fast tuning option, the settings for Fast Tuning are the same as Best Close-in, so in those models you will see no difference between these settings.

These rules apply whether in swept spans, zero span, or FFT spans.

Key Path	Meas Setup, PhNoise Opt
----------	-------------------------

Meas Setup

Remote Command	<code>[:SENSe] :FREQuency:SYNTHeSis:AUTO [:STATe] OFF ON 0 1</code> <code>[:SENSe] :FREQuency:SYNTHeSis:AUTO [:STATe] ?</code>
Example	FREQ:SYNT:AUTO ON
Preset	ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3215

Best Close-in P Noise

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

Key Path	Meas Setup, PhNoise Opt
Example	FREQ:SYNT 1
Couplings	offset <20 kHz
Readback	Close-in. If manually selected the “Man” is underlined. The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some test sets this annotation appears as [offset <20 kHz]
Initial S/W Revision	Prior to A.02.00
Help Map ID	3216

Best Wide-offset Noise

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

Key Path	Meas Setup, PhNoise Opt
Example	FREQ:SYNT 2
Couplings	offset >30 kHz
Readback	Wide-offset. If manually selected the “Man” is underlined. The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some test sets this annotation appears as [offset >30 kHz]
Initial S/W Revision	Prior to A.02.00
Help Map ID	3217

Fast Tuning

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term “fast tuning” refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

Key Path	Meas Setup, PhNoise Opt
Example	FREQ:SYNT 3
State Saved	Saved in instrument state.
Readback	Fast Tuning. Also, the “Man” must be underlined.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3218

ADC Dither

Accesses the menu to control the ADC Dither function. The dither function enhances linearity for low level signals at the expense of reduced clipping-to-noise ratio. The reduced clipping-to-noise ratio results in higher noise, because we work to ensure that the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither, and this results in reduced ADC dynamic range. So making measurements with ADC dither gives you better amplitude linearity, but turning ADC dither off gives you a lower noise floor (better sensitivity).

With dither on, the third-order distortions are usually invisible for mixer levels below -35 dBm. With dither off, these distortions can be visible, with typical power levels of -110 dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around -70 dBm and lower, while the specified nonlinearity is many times smaller with dither on.

When ADC Dither is on, the linearity of low-level signals is improved. The enhanced linearity is mostly improved scale fidelity. The linearity improvements of dither are most significant for RBWs of 3.9 kHz and less in swept mode, and FFT widths of 4 kHz and less in FFT mode.

The increased noise due to turning dither on is most significant in low band (0 to 3.6 GHz) with IF Gain set to Low, where it can be about 0.2 dB.

Key Path	Meas Setup
Example	ADC:DITH:HIGH Sets the ADC dither setting to High ADC:DITH ON Sets the ADC dither setting to Medium
Remote Command	[:SENSE] :ADC:DITHer [:STATE] OFF ON HIGH [:SENSE] :ADC:DITHer [:STATE] ?
Dependencies	
Preset	AUTO

Meas Setup

Backwards Compatibility SCPI	The old command [:SENSe]:ADC:DITHer AUTO is aliased to [:SENSe]:ADC:DITHer:AUTO[:STATe] ON; because of this, the [:SENSe]:ADC:DITHer function cannot be a true Boolean, so the query, [:SENSe]:ADC:DITHer? returns OFF or ON (not 1 or 0 like a true Boolean)
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3219

Auto

Sets the ADC dither to automatic. The test set then chooses the dither level according to which is most likely to be the best selection, based on other settings within the digital IF.

When in Auto, the test set sets the dither to Medium whenever the effective IF Gain is Low by this definition of IF Gain = Low:

- When Sweep Type = Swept, IF Gain = Low whenever Swept IF Gain is set to Low Gain, whether by auto coupling or manual selection.
- When Sweep Type = FFT, IF Gain = Low whenever FFT IF Gain is set to "Low Gain," which cannot happen by auto coupling.

Whenever the IF Gain is not low by this definition, Auto sets the dither to Off.

Key Path	Meas Setup, ADC Dither
Remote Command	[:SENSe]:ADC:DITHer:AUTO[:STATe] OFF ON 0 1 [:SENSe]:ADC:DITHer:AUTO[:STATe]?
Example	ADC:DITH:AUTO ON
Preset	ON
State Saved	Saved in instrument state
Readback	The "Auto" is underlined, and the readback value is whatever setting is auto-selected
Initial S/W Revision	Prior to A.02.00
Help Map ID	3220

High (Best Log Accy)

When ADC dither is set to High, the scale fidelity is especially good, most notably the relative scale fidelity. The trade off is that there is a modest loss of noise floor performance, up to about a decibel.

Key Path	Meas setup, ADC Dither
Example	ADC:DITH:HIGH
Readback	If manually selected, the readback is High, with the "Man" underlined

Initial S/W Revision	A.02.00
Help Map ID	3869

Medium (Log Accy)

The Medium setting of ADC Dither (known as “On” in earlier versions of the test set software) improves the linearity of low-level signals at the expense of some noise degradation.

Key Path	Meas setup, ADC Dither
Example	ADC:DITH:ON
Readback	If manually selected, the readback is Medium, with the “Man” underlined
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3221

Off (Best Noise)

When ADC Dither is Off, the test set noise floor is improved, because without the need to make room for the dither, you get a lower noise floor and better sensitivity.

Key Path	Meas setup, ADC Dither
Example	ADC:DITH:OFF
Readback	If manually selected, the readback is Off, with the “Man” underlined.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3222

Swept IF Gain

To take full advantage of the RF dynamic range of the test set, there is an added switched IF amplifier with approximately 10 dB of gain. When you can turn it on without overloading the test set, the dynamic range is always better with it on than off. The **Swept IF Gain** key can be used to set the IF Gain function to Auto, or to High Gain (the extra 10 dB), or to Low Gain. These settings affect sensitivity and IF overloads.

This function is only active when in Swept sweeps. In FFT sweeps, the FFT IF Gain function is used instead.

Key Path	Meas Setup
Remote Command	[:SENSe] : IF:GAIN:SWEPT [:STATe] OFF ON 0 1 [:SENSe] : IF:GAIN:SWEPT [:STATe] ?
Example	IF:GAIN:SWEP ON

Meas Setup

Notes	where ON = high gain OFF = low gain
Couplings	<p>The 'auto' rules for Swept IF Gain depend on attenuation, preamp state, start and stop frequency and the setting of FFT IF Gain. Set the Swept IF Gain to High (On) when the total input attenuation is 0 dB, the preamp is off, the start frequency is 10 MHz or more, and the FFT IF Gain is auto coupled, or manually set to Autorange, or manually set to High. Also set the Swept IF Gain to High (On) when the total input attenuation is 2 dB or less, the preamp is on, the start frequency is 10 MHz or more, and the stop frequency is 3.6 GHz or less and the FFT IF Gain is auto coupled, or manually set to Uttering, or manually set to High. Under all other circumstances, set the Swept IF Gain to Low (Off).</p> <p>If the sweep type is Swept, the start frequency of the test set is less than 10 MHz, and you put Swept IF Gain in Manual On, a warning condition is generated and remains in effect as long as this condition exists. The warning message is about a possible IF overload.</p> <p>As with most parameters with an AUTO state, AUTO COUPLE sets it to Auto, and setting any specific value (for example on or off) will set the AUTO state to false.</p>
Preset	Auto after a Preset which yields Off unless the Preamp is on. Auto and Off after Meas Preset.
State Saved	Saved in instrument state.
Readback Line	High Gain or Low Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3223

Auto

Activates the auto rules for Swept IF Gain

Key Path	Meas setup
Remote Command	[:SENSe] : IF : GAIN : SWEpt : AUTO [: STATE] OFF ON 0 1 [:SENSe] : IF : GAIN : SWEpt : AUTO [: STATE] ?
Example	IF:GAIN:SWEP:AUTO ON
Preset	ON
Initial S/W Revision	Prior to A.02.00
Help Map ID	3224

Low Gain (Best for Large Signals)

Forces Swept IF Gain to be off.

Key Path	Meas setup, ADC Ranging
Example	IF:GAIN:SWEP OFF
State Saved	Saved in instrument state.
Readback	Low Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3225

High Gain (Best Noise Level)

Forces Swept IF Gain to be on.

Key Path	Meas setup, ADC Ranging
Example	IF:GAIN:SWEP ON
Dependencies	The High setting for Swept IF Gain is grayed out when FFT IF Gain is manually set to Low (not when Low is chosen by the auto-rules).
State Saved	Saved in instrument state.
Readback	High Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3226

FFT IF Gain

Accesses the keys to set the ranging in the digital IF when doing FFT sweeps. When in Autorange mode, the IF checks its range once for every FFT chunk, to provide the best signal to noise ratio. You can specify the range for the best FFT speed, and optimize for noise or for large signals.

When the sweep type is FFT and this function is in Autorange, the IF Gain is set ON initially for each chunk of data. The data is then acquired. If the IF overloads, then the IF Gain is set OFF and the data is re-acquired. Because of this operation, the Auto setting uses more measurement time as the test set checks/resets its range. You can get faster measurement speed by forcing the range to either the high or low gain setting. But you must know that your measurement conditions will not overload the IF (in the high gain range) and that your signals are well above the noise floor (for the low gain range), and that the signals are not changing.

Key Path	Meas Setup
Remote Command	[:SENSe] : IF:GAIN:FFT [:STATe] AUTOrange LOW HIGH [:SENSe] : IF:GAIN:FFT [:STATe] ?

Meas Setup

Couplings	As with most parameters with an AUTO state, AUTO COUPLE sets it to Auto, which then picks Autorange, and setting any specific value (AUTOrange, LOW or HIGH) will set the AUTO state to false.
Preset	AUTOrange
State Saved	Saved in instrument state.
Readback Line	Autorange, High Gain or Low Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3227

Auto

Allows the test set to pick the FFT IF Gain method as appropriate. This “Auto” state is set by the Auto Couple key, and it puts it in Autorange.

Key Path	Meas setup
Remote Command	[:SENSE] : IF : GAIN : FFT : AUTO [: STATE] OFF ON 0 1 [:SENSE] : IF : GAIN : FFT : AUTO [: STATE] ?
Example	IF:GAIN:FFT:AUTO ON
Preset	ON
State Saved	Saved in instrument state.
Backwards Compatibility SCPI	DISPlay:WINDow[1]:TRACe:Y[:SCALe]:LOG:RANGe:AUTO
Initial S/W Revision	Prior to A.02.00
Help Map ID	3228

Autorange (Slower – Follows Signals)

Turns the ADC ranging to automatic which provides the best signal to noise ratio. Autorange is usually preferred over the manual range choices.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT AUTOrange
State Saved	Saved in instrument state.
Readback	Autorange
Initial S/W Revision	Prior to A.02.00
Help Map ID	3229

Low Gain (Best for Large Signals)

Forces FFT IF Gain to be off.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT LOW
State Saved	Saved in instrument state.
Readback	Low Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3230

High Gain (Best Noise Level)

Forces FFT IF Gain to be on.

Key Path	Meas setup, FFT IF Gain
Example	IF:GAIN:FFT HIGH
Dependencies	The High setting for FFT IF Gain is grayed out when Swept IF Gain is manually set to Low (not when Low is chosen by the auto-rules).
State Saved	Saved in instrument state.
Readback	High Gain
Initial S/W Revision	Prior to A.02.00
Help Map ID	3231

Analog Demod Tune & Listen

The Analog Demod Tune & Listen key opens the Analog Demod menu which contains keys to turn the demod function on and off and select modulation type. This key only appears if the U9063A Analog Demod personality is installed and licensed.

When the function is on (set to AM, FM, or PM), the demodulated signal is fed to the test set's speaker. Muting and volume control functions are done through the standard Windows speaker volume control interface.

Key Path	Meas Setup
Remote Command	[:SENSe] :DEMod AM FM PM OFF [:SENSe] :DEMod?
Example	DEM AM turns amplitude demodulation function ON

Meas Setup

Dependencies	When Tune & Listen is turned on, all active traces are forced to use the same detector. CISPR detectors (QPD, EMI Avg, RMS Avg) and Tune & Listen are mutually exclusive. No sound output is heard if one of these detectors is selected.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3800

AM

Pressing this key, when it is not selected, selects and activates the AM demodulation function. Pressing it a second time branches to the AM Demod menu where AM demodulation settings can be adjusted.

Key Path	Meas Setup, Analog Demod Tune&Listen
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3801

Channel BW (AM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the test set's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the test set. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the test set. Upon leaving zero span, the non-zero-span setting of Channel BW is restored as well as the flattop filter type.

Key Path	Meas Setup, Analog Demod Tune&Listen, AM
Remote Command	[:SENSe] :DEMod:AM:BANDwidth:CHANnel <freq> [:SENSe] :DEMod:AM:BANDwidth:CHANnel?
Example	DEM:AM:BAND:CHAN 200 kHz
Notes	This key/command is grayed out in zero span.
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the test set's current RBW value and it displays that value on the key, but the key is grayed out.

Preset	30 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Help Map ID	3802

FM

Pressing this key, when it is not selected, selects and activates the FM demodulation function. Pressing it a second time branches to the FM Demod menu where FM demodulation settings can be adjusted.

Key Path	Meas Setup, Analog Demod Tune&Listen
Example	DEM FM turns frequency demodulation function ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3803

Channel BW (FM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the test set's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the test set. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the test set. Upon leaving zero span, the previous setting of Channel BW and the flattop filter type are restored.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM
Remote Command	[:SENSE] :DEMod:FM:BANDwidth:CHANnel <freq> [:SENSE] :DEMod:FM:BANDwidth:CHANnel?
Example	DEM:FM:BAND:CHAN 200 MHz
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the test set's current RBW value and it displays that value on the key, but the key is grayed out.

Meas Setup

Preset	150 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Help Map ID	3804

De-emphasis (FM Demod only)

The De-emphasis setting controls a single-pole filter (6 dB/octave roll off), usually to counter intentional pre-emphasis in the transmitter. When De-emphasis state is OFF the hardware digital filter is bypassed, otherwise the setting is applied

The De-emphasis key is only available when FM is the demod selected. It is grayed out for AM and PM.

Key Path	Meas Setup, Analog Demod Tune & Listen, FM
Remote Command	[:SENSE] :DEMod:FM:DEEMphasis OFF US25 US50 US75 US750 [:SENSE] :DEMod:FM:DEEMphasis?
Example	DEM:FM:DEEM US75 DEM:FM:DEEM?
Dependencies	Only available in FM. Grayed out for AM and PM.
Preset	US75 (recommended for US commercial FM 75 μ s pre-emphasis)
State Saved	Saved in instrument state.
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Help Map ID	3805

Off

This setting bypasses the De-emphasis filter.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM, De-emphasis
Example	DEM:FM:DEEM OFF
Readback	Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	3858

25 μ s

Sets the De-emphasis time constant to 25 μ s.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM, De-emphasis
Example	DEM:FM:DEEM US25
Readback	25 μ s
Initial S/W Revision	Prior to A.02.00
Help Map ID	3859

50 μ s

Sets the De-emphasis time constant to 50 μ s.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM, De-emphasis
Example	DEM:FM:DEEM US50
Readback	50 μ s
Initial S/W Revision	Prior to A.02.00
Help Map ID	3860

75 μ s

Sets the De-emphasis time constant to 75 μ s.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM, De-emphasis
Example	DEM:FM:DEEM US75
Readback	75 μ s
Initial S/W Revision	Prior to A.02.00
Help Map ID	3861

750 μ s

Sets the De-emphasis time constant to 750 μ sec.

Key Path	Meas Setup, Analog Demod Tune&Listen, FM, De-emphasis
Example	DEM:FM:DEEM US750
Readback	750 μ s
Initial S/W Revision	Prior to A.02.00
Help Map ID	3862

Meas Setup

PM

Pressing this key, when it is not selected, selects and activates the PM demodulation function. Pressing it a second time branches to the PM Demod menu where PM demodulation settings can be adjusted.

Key Path	Meas Setup, Analog Demod Tune&Listen
Example	DEM PM turns Phase demodulation function ON
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3806

Channel BW (PM Demod)

Sets the RBW setting used by the hardware during the demodulation period in nonzero spans. Note that this is a separate parameter only for the demodulation function and does not affect the RBW setting in the BW menu which is used during the normal sweep. The flat top filter type must be used during the demodulation period. A 5 kHz Video Bandwidth filter is used.

In Zero Span, the test set's RBW & VBW filters are used for the demodulation; thus, the Channel BW (and RBW filter type) will match those of the test set. This allows gap-free listening. The Channel BW key is grayed out and the value displayed on the key matches the current RBW of the test set. Upon leaving zero span, the previous setting of Channel BW and the flattop filter type are restored.

Key Path	Meas Setup, Analog Demod Tune&Listen, M
Remote Command	[:SENSE] :DEMod:PM:BA NDwidth:CHANnel <freq> [:SENSE] :DEMod:PM:BA NDwidth:CHANnel?
Example	DEM:PM:BA ND:CHAN 200 MHz
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Couplings	In zero span only, the value is set equal to the test set's current RBW value and it displays that value on the key, but the key is grayed out.
Preset	100 kHz
State Saved	Saved in instrument state.
Min	390 Hz
Max	8 MHz
Default Unit	Hz
Initial S/W Revision	Prior to A.02.00
Help Map ID	3807

Off

Pressing this key, turns the demodulation function off.

Key Path	Meas Setup, Analog Demod Tune&Listen
Example	DEM OFF turns the demodulation function OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3808

Demod Time

Sets the amount of time the test set demodulates the signal after each sweep. The demodulated signal can be heard through the speaker during demodulation. In zero span, demodulation can be performed continuously, making this parameter not applicable, hence it is grayed out in zero span.

Key Path	Meas Setup, Analog Demod Tune&Listen
Remote Command	[:SENSe] :DEMod:TIME <time> [:SENSe] :DEMod:TIME?
Example	DEM:TIME 500 ms DEM:TIME?
Notes	This key / command is grayed out in zero span
Dependencies	Unavailable in zero span.
Preset	500 ms
State Saved	Saved in instrument state.
Min	2 ms
Max	100 s
Initial S/W Revision	Prior to A.02.00
Help Map ID	3809

Demod State (Remote Command Only)

Sets or queries the state of the Analog Demod Tune and Listen function. Setting the state to ON with this command will select AM demodulation by default and activate it (turn it on).

The response to the query is determined by the current setting of [:SENSe] :DEMod AM|FM|PM|OFF. The response is 1 if AM, FM, PM are selected, or 0 if OFF is selected.

Remote Command:	[:SENSe] :DEMod:STATe OFF ON 0 1 [:SENSe] :DEMod:STATe?
------------------------	--

Meas Setup

Preset:	OFF
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Mode

The Mode key allows you to select the available measurement applications or “Modes”. Modes are a collection of measurement capabilities packaged together to provide an instrument personality that is specific to your measurement needs. Each application software product is ordered separately by Model Number and must be licensed to be available. Once an instrument mode is selected, only the commands that are valid for that mode can be executed.

NOTE Key operation can be different between modes. The information displayed in Help is about the current mode.

To access Help for a different Mode you must first exit Help (by pressing the Cancel (Esc) key). Then select the desired mode and re-access Help.

For more information on Modes, preloading Modes, and memory requirements for Modes, see [“More Information” on page 988](#)

Key Path:	Front-panel key
Remote Command:	:INSTrument [:SElect] SEQAN BASIC WCDMA EDGEgSM WIMAXOFDMA ADEMOD BT00th TDSC DMA CDMA2K CDMA1XEV LTE LTETDD :INSTrument [:SElect] ?
Example:	INST SEQAN
Notes:	The available parameters are dependent upon installed and licensed applications resident in the instrument. Parameters given here are an example, specific parameters are in the individual Application. A list of the valid mode choices is returned with the INST:CAT? Query.
Preset:	Not affected by Preset. In the EXT, the mode set by Restore System Defaults is the Sequence Analyzer mode.
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:INSTrument[:SElect] GSM provided for backwards compatibility. Mapped to EDGEgSM.
Backwards Compatibility SCPI:	:INSTrument[:SElect] SANalyzer provided for ESU compatibility. When this command is received, the analyzer aliases it to the following: INST:SEL SCPI LC This results in the analyzer being placed in SCPI Language Compatibility Mode, in order to emulate the ESU Spectrum Analyzer Mode.

Mode

Backwards Compatibility SCPI:	:INSTrument[:SElect] RECEiver provided for ESU compatibility. When this command is received, the analyzer aliases it to the following: :INST:SEL EMI :CONF FSC This results in the analyzer being placed in the EMI Receiver Mode, running the Frequency Scan measurement, in order to emulate the ESU Receiver Mode.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.10.01
Help Map ID:	2670

Example:	INST 'SEQAN'?
Notes:	The query is not a quoted string. It is an enumeration as indicated in the Instrument Select table above. The command must be sequential: i.e. continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available.
Backwards Compatibility SCPI:	:INSTrument[:SElect] 'GSM' 'BASIC'
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

More Information

It is possible to specify the order in which the Modes appear in the Mode menu, using the Configure Applications utility (**System, Power On, Configure Applications**). It is also possible, using the same utility, to specify a subset of the available applications to load into memory at startup time, which can significantly decrease the startup time of the test set. During runtime, if an application that is not loaded into memory is selected (by either pressing that applications Mode key or sending that applications :INST:SEL command over SCPI), there will be a pause while the Application is loaded. During this pause a message box that says "Loading application, please wait..." is displayed.

Each application (Mode) that runs in the X-Series test set consumes virtual memory. The various applications consume varying amounts of virtual memory, and as more applications run, the memory consumption increases. Once an application is run, some of its memory remains allocated even when it is not running, and is not released until the test set program (xSA.exe) is shut down.

Agilent characterizes each Mode and assigns a memory usage quantity based on a conservative estimate. There is a limited amount of virtual memory available to applications (note that this is virtual memory and is independent of how much physical RAM is in the instrument). The instrument keeps track of how much memory is being used by all loaded applications – which includes those that preloaded at startup, and all of those that have been run since startup.

When you request a Mode that is not currently loaded, the instrument looks up the memory estimate for that Mode, and adds it to the residual total for all currently loaded Modes. If there is not enough virtual

memory to load the Mode, a dialog box and menu will appear that gives you four options:

Close and restart the test set program without changing your configured preloads. This may free up enough memory to load the requested Mode, depending on your configured preloads

Clear out all preloads and close and restart the test set program with only the requested application preloaded, and with that application running. This choice is guaranteed to allow you to run the requested application; but you will lose your previously configured preloads. In addition, there may be little or no room for other applications, depending on the size of the requested application.

Bring up the Configure Applications utility in order to reconfigure the preloaded apps to make room for the applications you want to run (this will then require restarting the test set program with your new configuration). This is the recommended choice because it gives you full flexibility to select exactly what you want.

Exit the dialog box without doing anything, which means you will be unable to load the application you requested.

In each case except 4, this will cause the test set software to close, and you will lose all unsaved traces and results.

If you attempt to load a mode via SCPI that will exceed memory capacity, the Mode does not load and an error message is returned:

```
-225, "Out of memory;Insufficient resources to load Mode (mode name) "
```

where “mode name” is the SCPI parameter for the Mode in question, for example, BASIC for IQ Analyzer Mode.

Application Mode Number Selection (Remote Command Only)

Select the measurement mode by its mode number. The actual available choices depend upon which applications are installed in your instrument. The modes appear in this table in the same order they appear in the Mode menu (if the order is not changed by the Configure Applications utility found in the **System, Power On** menu). See [“Detailed List of Modes” on page 994](#) for Mode details.

The Mode Number is the parameter for use with the :INSTrument:NSElect command. The Mode Parameter is the parameter for use with the :INSTrument[:SElect] command.

Mode	Mode Number	Mode Parameter
Sequence Analyzer	400	SEQAN
I/Q Analyzer (Basic)	8	BASIC
WCDMA with HSPA+	9	WCDMA
GSM/EDGE/EDGE Evo	13	EDGE GSM
802.16 OFDMA (WiMAX/WiBro)	75	WIMAXOFDMA
Analog Demod	234	ADEMOD
Bluetooth	228	BTtooth

Mode

Mode	Mode Number	Mode Parameter
TD-SCDMA with HSPA/8PSK	211	TDSCDMA
cdma2000	10	CDMA2K
1xEV-DO	15	CDMA1XEV
LTE	102	LTE
LTE TDD	105	LTETDD

Remote Command:	:INSTRument:NSElect <integer> :INSTRument:NSElect?
Example:	:INST:NSEL 1
Notes:	The command must be sequential: i.e. continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available.
Preset:	Not affected by Preset. Set to default mode following Restore System Defaults.
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Application Mode Catalog Query (Remote Command Only)

Returns a string containing a comma separated list of names of all the installed and licensed measurement modes (applications). These names can only be used with the :INSTRument[:SElect] command.

Remote Command:	:INSTRument:CATalog?
Example:	:INST:CAT?
Notes:	Query returns a quoted string of the installed and licensed modes separated with a comma. Example: "BASIC,EDGE GSM,CDMA"
Backwards Compatibility Notes:	VSA (E4406A) :INSTRument:CATalog? returned a list of installed INSTRument:SELECT items as a comma separated list of string values: "BASIC","GSM","EDGE GSM","CDMA","NADC","PDC","WCDMA","CDMA2K","CDMA1XEV","IDEN","WIDEN","WLAN","SERVICE" X-Series uses the ESA/PSA compatible query of a string contain comma separated values: "BASIC,CDMA,CDMA2K,WCDMA,CDMA1XEV,EDGE GSM,GSM,TDS CDMA,DMODULATION,WLAN"

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Application Identification (Remote Commands Only)

Each entry in the Mode Menu will have a Model Number and associated information: Version, and Options.

This information is displayed in the Show System screen. The corresponding SCPI remote commands are defined here.

[“Current Application Model ” on page 991](#)

[“Current Application Revision” on page 991](#)

[“Current Application Options” on page 992](#)

Current Application Model

Returns a string that is the Model Number of the currently selected application (mode).

Remote Command:	:SYSTem:APPLication[:CURRent] [:NAME] ?
Example:	:SYST:APPL?
Notes:	Query returns a quoted string that is the Model Number of the currently selected application (Mode). Example: "N9060A" String length is 6 characters.
Preset:	Not affected by Preset
State Saved:	Not saved in state, the value will be the selected application when a Save is done.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Current Application Revision

Returns a string that is the Revision of the currently selected application (mode).

Remote Command:	:SYSTem:APPLication[:CURRent] :REVersion?
Example:	:SYST:APPL:REV?
Notes:	Query returns a quoted string that is the Revision of the currently selected application (Mode). Example: "1.0.0.0" String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points)

Mode

Preset:	Not affected by a Preset
State Saved:	Not saved in state, the value will be the selected application when a Save is done.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Current Application Options

Returns a string that is the Options list of the currently selected application (Mode).

Remote Command:	:SYSTem:APPLication[:CURRent]:OPTion?
Example:	:SYST:APPL:OPT?
Notes:	Query returns a quoted string that is the Option list of the currently selected application (Mode). The format is the name as the *OPT? or SYSTem:OPTion command: a comma separated list of option identifiers. Example: "1FP,2FP" String length is a maximum of 255 characters.
Preset:	Not affected by a Preset
State Saved:	Not saved in state per se, the value will be the selected application when a Save is invoked.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Application Identification Catalog (Remote Commands Only)

A catalog of the installed and licensed applications (Modes) can be queried for their identification.

[“Application Catalog Number of Entries” on page 992](#)

[“Application Catalog Revision” on page 993](#)

[“Application Catalog Options” on page 993](#)

Application Catalog Number of Entries

Returns the number of installed and licensed applications (Modes).

Remote Command:	:SYSTem:APPLication:CATalog[:NAME]:COUNt?
Example:	:SYST:APPL:CAT:COUN?
Preset:	Not affected by Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00

Help Map ID:	0
--------------	---

Application Catalog Model Numbers

Returns a list of Model Numbers for the installed and licensed applications (Modes).

Remote Command:	:SYSTem:APPLication:CATalog[:NAME]?
Example:	:SYST:APPL:CAT?
Notes:	Returned value is a quoted string of a comma separated list of Model Numbers. Example, if SAMS and Phase Noise are installed and licensed: "N9060A,N9068A" String length is COUNT * 7 - 1. (7 = Model Number length + 1 for comma. -1 = no comma for the 1st entry.)
Preset:	Not affected by a Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Application Catalog Revision

Returns the Revision of the provided Model Number.

Remote Command:	:SYSTem:APPLication:CATalog:REVision? <model>
Example:	:SYST:APPL:CAT:REV? 'N9060A'
Notes:	Returned value is a quoted string of revision for the provided Model Number. The revision will be a null-string ("") if the provided Model Number is not installed and licensed. Example, if SAMS is installed and licensed: "1.0.0.0"
Preset:	Not affected by a Preset.
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Application Catalog Options

Returns a list of Options for the provided Model Number

Remote Command:	:SYSTem:APPLication:CATalog:OPTion? <model>
Example:	:SYST:APPL:CAT:OPT? 'N9060A'

Mode

Notes:	Returned value is a quoted string of a comma separated list of Options, in the same format as *OPT? or :SYSTem:OPTion?. If the provided Model Number is not installed and licensed a null-string ("") will be returned. Example, if SAMS is installed and licensed: "2FP" String length is a maximum of 255 characters.
Preset:	Not affected by a Preset
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Detailed List of Modes

This section contains an alphabetical list of Modes available in the X-Series, along with a brief description of each Mode.

Note that with the exception of the 89601 VSA, only licensed applications appear in the Mode menu. The 89601 will always appear, because it's licensing is handled differently.

1xEV-DO

Selects the 1xEV-DO mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL CDMA1XEV INST:NSEL 15
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3566

802.16 OFDMA (WiMAX/WiBro)

Selects the OFDMA mode for general purpose measurements of WiMAX signals. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL WIMAXOFDMA INST:NSEL 75

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3531

Analog Demod

Selects the Analog Demod mode for making measurements of AM, FM and phase modulated signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL ADEMOM INST:NSEL 234
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3529

Bluetooth

Selects the Bluetooth mode for Bluetooth specific measurements. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL BT INST:NSEL 228
Initial S/W Revision:	A.06.01
Help Map ID:	30035

cdma2000

Selects the cdma2000 mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL CDMA2K INST:NSEL 10
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3533

Mode

GSM/EDGE/EDGE Evo

Selects the GSM with EDGE mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL EDGEGSM INST:NSEL 13
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3532

IQ Analyzer (Basic)

The IQ Analyzer Mode makes general purpose frequency domain and time domain measurements. These measurements often use alternate hardware signal paths. These frequency domain and time domain measurements can be used to output I/Q data results when measuring complex modulated digital signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL BASIC INST:NSEL 8
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3526

LTE

Selects the LTE mode for general purpose measurements of signals following the LTE FDD standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL LTE INST:NSEL 102
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3586

LTE TDD

Selects the LTE TDD mode for general purpose measurements of signals following the LTE TDD standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL LTETDD INST:NSEL 105
Initial S/W Revision:	A.03.00
Help Map ID:	44220

Sequence Analyzer

Selects the Sequence Analyzer mode for sequenced measurements. Depending on licensed applications there may be a number of different measurements available in this mode. These measurements are all done on IQ captured data and can be set up to calculated on any part of the capture.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL SEQAN INST:NSEL 400
Initial S/W Revision:	A.05.01
Help Map ID:	30033

TD-SCDMA with HSPA/8PSK

Selects the TD-SCDMA mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL TDSCDMA INST:NSEL 211
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3534

Mode

W-CDMA with HSPA+

Selects the W-CDMA with HSPA+ mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

Key Path:	Mode
Example:	INST:SEL WCDMA INST:NSEL 9
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3530

Global Settings

Opens up a menu that allows you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. No matter what Mode you are in when you set the “Global Center Frequency” switch to on, it applies to all Modes that support Global Settings.

Key Path:	Front Panel Key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	4003

Global Center Freq

The software maintains a Mode Global value called “Global Center Freq”.

When the **Global Center Freq** key is switched to **On** in any mode, the current mode’s center frequency is copied into the Global Center Frequency, and from then on all modes which support global settings use the Global Center Frequency. So you can switch between any of these modes and the Center Freq will remain unchanged.

Adjusting the Center Freq of any mode which supports Global Settings, while **Global Center Freq** is **On**, will modify the Global Center Frequency.

When **Global Center Freq** is turned **Off**, the Center Freq of the current mode is unchanged, but now the Center Freq of each mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **On**, the Global Center Freq is preset to the preset Center Freq of the current mode.

This function is reset to Off when the Restore Defaults key is pressed in the Global Settings menu, or when **System, Restore Defaults, All Modes** is pressed.

Key Path:	Mode Setup, Global Settings
Scope:	Mode Global

Remote Command:	: INStRument : COUPle : FREQuency : CENTer ALL NONE : INStRument : COUPle : FREQuency : CENTer?
Example:	INST:COUP:FREQ:CENT ALL INST:COUP:FREQ:CENT?
Preset:	Set to Off on Global Settings, Restore Defaults and System, Restore Defaults, All Modes
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	4009

Remote Command:	: GLOBal : FREQuency : CENTer [: STATe] 1 0 ON OFF : GLOBal : FREQuency : CENTer [: STATe] ?
Preset:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Restore Defaults

This key resets all of the functions in the Global Settings menu to Off. This also occurs when **System, Restore Defaults, All Modes** is pressed.

Key Path:	Mode Setup, Global Settings
Remote Command:	: INStRument : COUPle : DEFault
Example:	INST:COUP:DEF
Backwards Compatibility SCPI:	: GLOBal : DEFault
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	4010

Mode

Mode Setup

Opens a menu of keys that allows you to specify parameters of the mode.

Key Path	Front-panel key
Initial S/W Revision	Prior to A.02.00
Help Map ID	5520

Radio

Accesses the Radio setup menu.

Key Path	Mode Setup
Initial S/W Revision	Prior to A.02.00
Help Map ID	5521

Band

Selects the standard variant that applies to the radio to be tested.

Key	SCPI	Band
P-GSM	PGSM	Primary GSM in the 900 MHz band
E-GSM	EGSM	Extended GSM in the 900 MHz band
R-GSM	RGSM	Railway GSM in the 900 MHz band
DCS 1800	DCS1800	DSC1800 band; also known as GSM–1800
PCS 1900	PCS1900	PCS1900 band; also known as GSM–1900
GSM 450	GSM450	GSM450 band
GSM 480	GSM480	GSM480 band
GSM 700	GSM700	GSM700 band
T-GSM 810	TGSM810	T-GSM 810 band

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global

Mode Setup

Remote Command	[:SENSE] :RADio:STANdard:BAND PGSM EGSM RGSM DCS1800 PCS1900 GSM450 GSM480 GSM700 GSM850 TGSM810 [:SENSE] :RADio:STANdard:BAND?
Example	RAD:STAN:BAND PGSM RAD:STAN:BAND?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	PGSM
State Saved	Saved in instrument state.
Range	P-GSM E-GSM R-GSM DCS 1800 PCS 1900 GSM 450 GSM 480 GSM 700 GSM 850 T-GSM 810
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.07.00
Help Map ID	5500

Device

Selects the type of radio device to be tested.

- BTS - Base station transmitter test
- MS - Mobile station transmitter test

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :RADio:DEvIce BTS MS [:SENSE] :RADio:DEvIce?
Example	RAD:DEV BTS RAD:DEV?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	BTS
State Saved	Saved in instrument state.
Range	BTS MS
Initial S/W Revision	Prior to A.02.00
Help Map ID	5501

BTS Type

Selects the type of base station to be tested.

Key	SCPI	Type
Normal	NORMAl	Normal BTS.
Micro1	MICR1 MICRo	Micro 1 BTS. SCPI enumeration 'MICRo' is kept for backward compatibility. It is equivalent to 'MICR1'.
Micro2	MICR2	Micro 2 BTS.
Micro3	MICR3	Micro 3 BTS.
Pico1	PICO1 PICO	Pico 1 BTS. SCPI enumeration 'PICO' is kept for backward compatibility. It's equivalent to 'PICO1'.

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :RADio:DEvIce:BASE[:TYPE] NORMAl MICRo MICR1 MICR2 MICR3 PICO PICO1 [:SENSe] :RADio:DEvIce:BASE[:TYPE] ?
Example	RAD:DEV:BASE PICO1 RAD:DEV:BASE?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	NORMAl
State Saved	Saved in instrument state.
Range	Normal Micro1 Micro2 Micro3 Pico1
Initial S/W Revision	Prior to A.02.00
Help Map ID	5502

Freq Hopping

Turns the carrier hopping mode on and off. If frequency hopping is turned on, the instrument ignores the bursts when the frequency is hopped off the selected channel frequency. Thus only valid data is included in the results.

This parameter applies only to the following measurements:

- GMSK/EDGE Transmit Power measurement

Mode Setup

- GSMK/EDGE Power vs. Time measurement
- GSMK/EDGE Output RF Spectrum measurement
- GSMK Phase & Frequency Error measurement
- EDGE EVM measurement

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :RADio:CARRier:HOP OFF ON 0 1 [:SENSe] :RADio:CARRier:HOP?
Example	RAD:CARR:HOP ON RAD:CARR:HOP?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	OFF
State Saved	Saved in instrument state.
Range	On Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	5503

Carrier

Selects the type of RF carrier on the device to be tested. You need to select 'Cont' if all 8 slots are active in the frame and the carrier has no gaps between the slots.

Key	SCPI	Carrier Selection
Burst	BURSt	For single or multi slotted burst carrier signal.
Cont	CONTinuous	For continuous multi slot carrier signal.

This parameter is applies only to the following measurements:

- GSMK/EDGE Power vs. Time measurement
- GSMK Phase & Frequency Error measurement
- EDGE EVM measurement

The GSMK/EDGE Power vs. Time measurement does not support full continuous multi-slot signals (no gap between two adjacent slots).

EDGE EVM will skip burst search for Multi-Slot signals.

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :RADio:CARRier[:TYPE] BURSt CONTInuous [:SENSE] :RADio:CARRier[:TYPE] ?
Example	RAD:CARR BURS RAD:CARR?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	BURSt
State Saved	Saved in instrument state.
Range	Burst Cont
Initial S/W Revision	Prior to A.02.00
Help Map ID	5504

Pwr Ctrl Lvl (PCL)

Allows you to choose the power control level (PCL) of the transmitter.

Selection	SCPI	Description
AutoRange	ON 1	PCL is determined by the measured carrier power level, and is used to determine the test limits. Since PCL is an integer number, the value is determined by the nearest Target Carrier Power level. For example, if the measured carrier power level is +35.9 dBm in a GSM 400 system, the nearest Target Carrier Power is 35 dBm, so the PCL will be set to 4. If the measured carrier power level is just the center between Target Carrier Power like 34.0 dBm, the PCL will be determined by the higher Target Carrier Power (in this case, 35 dBm, PCL:4).
Man	OFF 0	User defined PCL is used to determine the test limits.

This parameter applies only to the following measurements:

- GMSK/EDGE Power vs. Time measurement
- GMSK/EDGE Output RF Spectrum measurement

Mode Setup

This parameter applies only when the selected “Device” on page 1002 is MS.

Table 11-1 Power Control Level for GSM 400, GSM 900, GSM 850 and GSM 700

Target Carrier Power [dBm]	Power Control Level
39	2
37	3
35	4
33	5
31	6
29	7
27	8
25	9
23	10
21	11
19	12
17	13
15	14
13	15
11	16
9	17
7	18
5	19

Table 11-2 Power Control Level for DCS 1800

Target Carrier Power [dBm]	Power Control Level
36	29
34	30
32	31
30	0
28	1
26	2
24	3
22	4

Table 11-2 Power Control Level for DCS 1800

Target Carrier Power [dBm]	Power Control Level
20	5
18	6
16	7
14	8
12	9
10	10
8	11
6	12
4	13
2	14
0	15

Table 11-3 Power Control Level for PCS 1900

Target Carrier Power [dBm]	Power Control Level
33	30
32	31
30	0
28	1
26	2
24	3
22	4
20	5
18	6
16	7
14	8
12	9
10	10
8	11
6	12
4	13

Mode Setup

Table 11-3 Power Control Level for PCS 1900

Target Carrier Power [dBm]	Power Control Level
2	14
0	15

Key Path	Mode Setup, Radio
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE]:RADio:PCLevel <integer> [:SENSE]:RADio:PCLevel? [:SENSE]:RADio:PCLevel:AUTO 0 1 OFF ON [:SENSE]:RADio:PCLevel:AUTO?
Example	RAD:PCL 3 RAD:PCL? RAD:PCL:AUTO ON RAD:PCL:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	Applicable only for Power vs. Time and Output RF Spectrum measurements. Unavailable unless selected “ Device ” on page 1002 is MS.
Preset	1 ON
State Saved	Saved in instrument state.
Min	0
Max	40
Backwards Compatibility SCPI	[:SENSE]:EPVTime:PCLevel [:SENSE]:PVTime:PCLevel
Initial S/W Revision	Prior to A.02.00
Help Map ID	5505

Demod

Accesses the Demod setup menu.

Key Path	Front-panel key

Initial S/W Revision	Prior to A.02.00
Help Map ID	5522

Time Slot

Selects On or Off for slot searching. Generally, this feature is only valid in external and periodic timer trigger source modes that triggers every frame since another trigger source does not have the information that identifies the head of the frame. When Timeslot is set to On, the demodulation measurement is made on the nth timeslot specified by the trigger point + n timeslots, where n is the selected timeslot value 0 to 7.

This functionality is the same as Time Slot under Freq/Channel menu.

Key Path	Mode Setup, Demod FREQ Channel
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :CHANnel :SLOT <integer> [:SENSe] :CHANnel :SLOT? [:SENSe] :CHANnel :SLOT :AUTO OFF ON 0 1 [:SENSe] :CHANnel :SLOT :AUTO?
Example	CHAN:SLOT 0 CHAN:SLOT? CHAN:SLOT:AUTO OFF CHAN:SLOT:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	0 OFF
State Saved	Saved in instrument state.
Min	0
Max	7
Initial S/W Revision	Prior to A.02.00
Help Map ID	5516

Burst Type

Sets the burst type that the test set will search for and to which it will synchronize.

Mode Setup

This functionality is the same as Burst Type under FREQ Channel menu.

Key	SCPI	Type
Sync (SCH)	SYNC	Burst length = 142 symbols Extended training sequences for CTS and COMPACT synchronization bursts are not supported.
Access (RACH)	ACcEss	Burst length = 88 symbols Alternative training (synchronization) sequence “TS1” and “TS2” are supported only in GSMK Power vs. Time.
Normal - NB (TCH & CCH)	NORMal	Burst length = 142 symbols key label will be changed to ‘Normal – NB’ form ‘Normal’
Higher Symbol Rate - HB (TCH & CCH)	HSRate	Burst length = 169 symbols This selection key is only shown when the U9071A–3FP license is installed.
Mixed (NB/HB for TSC sync)	MIXed	Enables auto detection between Normal (NB) and HSR (HB) TCH & CCH EDGE Burst. This selection key is only shown when the U9071A–3FP license is installed.

Measurement synchronization capability (Burst Sync = Training Seq)

	Sync	Access	Normal		HSR	Mixed
			GMSK	8PSK 16QAM 32QAM AQPSK		
GMSK Phase & Freq Error measurement	Yes	Yes	Yes	No	N/A	
GMSK Power vs. Time measurement	Yes	Yes	Yes	No	(measures as Normal GMSK when selected)	
GMSK Output RF Spectrum measurement (when Trigger Source is Periodic Timer and Sync Source is Off)	No	No	Yes	No		
EDGE EVM measurement	No	No	No	Yes	Yes	Yes

	Sync	Access	Normal		HSR	Mixed
			GMSK	8PSK 16QAM 32QAM AQPSK		
EDGE Power vs. Time measurement	Yes	Yes	Yes	Yes	Yes	Yes
EDGE Output RF Spectrum measurement (when Trigger Source is Periodic Timer and Sync Source is Off.)	No	No	Yes	Yes	Yes	Yes

Key Path	Mode Setup, Demod FREQ Channel
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :CHANnel :BURSt NORMal SYNC ACCess HSRate MIXed [:SENSe] :CHANnel :BURSt?
Example	CHAN:BURS NORM CHAN:BURS?
Notes	Higher Symbol Rate and Mixed selections are only available when the U9071A-3FP license is installed. Otherwise these menu keys are blank. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	Higher Symbol Rate and Mixed selection keys are not shown unless U9071A-3FP is installed. When unlicensed and SCPI is sent, an undefined header error is returned. When “Mixed” is selected, the Burst Sync menu key under Meas Setup menu will be grayed out and Training Sequence (TSC) will be used for synchronization. The sync algorithm always runs in Training Sequence (TSC) synchronization because Burst Type can be determined by looking at TSC in the signal. Original selection of Burst Sync will become effective again when the Burst Type selection is changed from “Mixed” to another one.
Preset	NORMal
State Saved	Saved in instrument state.
Range	Sync (SCH) Access (RACH) Normal - NB (TCH & CCH) Higher Symbol Rate - HB (TCH & CCH) Mixed (NB/HB for TSC sync)

Mode Setup

Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.06.00
Help Map ID	5517

TSC (Std)

Allows you to select the Training Sequence Code that determines which burst is to be measured. Applicable only when Burst Sync is set to Training Sequence in the measurement. In the case of AQPSK, this parameter specifies TSC number of VAMOS sub-channel A. TSC of VAMOS sub-channel B is ignored.

This functionality is the same as TSC under FREQ Channel menu.

This parameter applies only to the following measurements:

- GMSK/EDGE Power vs. Time measurement
- GMSK Phase & Frequency Error measurement
- EDGE EVM measurement

Selection	SCPI	Description
AutoDet	ON 1	The measurement is made on the first burst found to have any one of the valid TSCs in the range of 0 to 7. The measurement may be made on various timeslots if more than one timeslot has one of the 8 valid TSCs.
Man	OFF 0	The measurement is made on the first burst found to have the selected TSC. TSC numbers in the range of 0 to 7 can be selected. The measurement may be made on various timeslots if more than one timeslot has this same TSC.

Key Path	Mode Setup, Demod FREQ Channel
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE]:CHANnel:TSCode <integer> [:SENSE]:CHANnel:TSCode? [:SENSE]:CHANnel:TSCode:AUTO OFF ON 0 1 [:SENSE]:CHANnel:TSCode:AUTO?
Example	CHAN:TSC 3 CHAN:TSC? CHAN:TSC:AUTO 1 CHAN:TSC:AUTO?

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode. When Sync or Access is selected as Burst Type, TSC is grayed out.
Preset	0 ON
State Saved	Saved in instrument state.
Min	0
Max	7
Initial S/W Revision	Prior to A.02.00
Help Map ID	5518

Mod Scheme

This functionality applies only to the following measurements.

- EDGE EVM measurement
- EDGE Power vs. Time measurement
- GMSK/EDGE Output RF Spectrum measurement

When Mod Scheme is “Auto”, the measurements automatically determines which Modulation Scheme the input signal is using.

Key Path	Mode Setup, Demod
Initial S/W Revision	A.02.00
Help Map ID	5525

Normal - NB

Selects the Modulation Scheme (modulation type) for Normal Burst that the test set will search for when Auto mode is selected. In manual mode, you may select the desired modulation type from the list.

Key Path	Mode Setup, Demod, Mod Scheme
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :SYNC:NORMal:MODulation:AUTO ON OFF 1 0 [:SENSe] :SYNC:NORMal:MODulation:AUTO?
Example	SYNC:NORM:MOD:AUTO 1 SYNC:NORM:MOD:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.

Mode Setup

Couplings	ON automatically changes to OFF when GMSK, 8PSK, 16QAM, 32QAM or AQPSK is selected.
Preset	ON
State Saved	Saved in instrument state.
Readback Text	EDGE NB: AutoDet
Initial S/W Revision	A.02.00
Modified at S/W Revision	A.06.00
Help Map ID	5526

Key Path	Mode Setup, Demod, Mod Scheme, Normal - NB
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :SYNC:NORMAl:MODulation GMSK EPSK QAM16 QAM32 AQPSK [:SENSe] :SYNC:NORMAl:MODulation?
Example	SYNC:NORM:MOD GMSK SYNC:NORM:MOD?
Notes	You must be in the GSM mode to use this command. Use :INSTrument:SElect to set the mode.
Dependencies	16QAM, 32QAM and AQPSK are available only when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, illegal parameter value error is returned.
Preset	EPSK
State Saved	Saved in instrument state.
Range	GMSK 8PSK 16QAM 32QAM AQPSK
Initial S/W Revision	A.02.00
Modified at S/W Revision	A.06.00
Help Map ID	0

HSR - HB

Selects the Modulation Scheme (modulation type) for HSR Burst that the test set will search for when Auto mode is selected. In manual mode, you may select the desired modulation type from the list.

Key Path	Mode Setup, Demod, Mod Scheme
Mode	GSM
Scope	Meas Global

Remote Command	[:SENSe] :SYNC:HSRate:MODulation:AUTO ON OFF 1 0 [:SENSe] :SYNC:HSRate:MODulation:AUTO?
Example	SYNC:HSR:MOD:AUTO 1 SYNC:HSR:MOD:AUTO?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error is returned.
Couplings	ON automatically changes to OFF when QPSK, 16QAM or 32QAM is selected.
Preset	ON
State Saved	Saved in instrument state.
Range	On Off
Readback Text	EDGE HB: AutoDet
Initial S/W Revision	A.02.00
Help Map ID	5528

Key Path	Mode Setup, Demod, Mod Scheme, HSR - HB
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :SYNC:HSRate:MODulation QPSK QAM16 QAM32 [:SENSe] :SYNC:HSRate:MODulation?
Example	SYNC:HSR:MOD QAM32 SYNC:HSR:MOD?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This key is only shown when the U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error is returned.
Preset	QAM16
State Saved	Saved in instrument state.
Range	QPSK 16QAM 32QAM
Initial S/W Revision	A.02.00
Help Map ID	0

Mode Setup

Config Manual Sync Method

Selects the behavior type of synchronization and measurement for the Mod Scheme selected in NB or HB. This method is applicable in EDGE EVM and EDGE Power vs. Time when Burst Sync is set to Training Sequence (by default)

Force Selected Method on All Slots: In EDGE Power vs. Time, the selected Mod Scheme is forced to use the synchronization method regardless of the input signal format. In EDGE EVM, the Mod Scheme is forced to use the demodulation method in addition to (as well as) the synchronization method. When the selected Mod Scheme does not match the input signal format (for example, if the selected Mode Scheme is 8PSK and the input signal format is 16QAM), a large EVM number or sync error may be observed.

Discard Non-Matching Slots: Performs auto synchronization and picks up the value when the detected Mod Scheme matches the manually selected Mod Scheme. For example, if a signal which contains 8PSK, 16QAM, and 32QAM formats is fed and the selected Mod Scheme is 16QAM, the test set will report measurement results of 16QAM only.

Key Path	Mode Setup, Demod, Mod Scheme
Mode	GSM
Remote Command	[:SENSE] :SYNC:CONFigure:METhod FORCe DISCard [:SENSE] :SYNC:CONFigure:METhod?
Example	SYNC:CONF:METH FORC SYNC:CONF:METH?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error is returned. Grayed out when the license is installed and both of Mod Scheme Normal and HSR are set to AutoDet.
Preset	DISC
State Saved	Saved in instrument state.
Range	Force Selected Method on All Slots Discard Non-Matching Slots
Readback Text	Force Method Discard Mismatch
Initial S/W Revision	A.02.00
Help Map ID	5530

AQPSK AutoDet

Selects whether to include auto modulation scheme detection of AQPSK or not. When Include, AQPSK is detectable when Burst Type is either Normal or Mixed and when EDGE Modulation Scheme Auto Detection for Normal Burst is enabled.

Auto detection of AQPSK requires some calculation time and excluding it may speed up EDGE EVM and PVT measurements. When Alpha of AQPSK is close to 0 or 90 degree, it is like normal burst

GMSK. In this case, the auto mod scheme detection algorithm may not work very well and AQPSK could be identified as GMSK or 8PSK.

Key	SCPI	Description
Include	ON	Include AQPSK in auto detectable mod schemes of normal bursts.
Exclude	OFF	Exclude AQPSK in auto detectable mod schemes of normal bursts.

This parameter applies only to the following measurements:

- EDGE EVM measurement
- EDGE Power vs. Time measurement

Key Path	Mode Setup, Demod
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :SYNC:NORMal:MODulation:AUTO:AQPSk INCLude EXCLude [:SENSe] :SYNC:NORMal:MODulation:AUTO:AQPSk?
Example	SYNC:NORM:MOD:AUTO:AQPS INCL SYNC:NORM:MOD:AUTO:AQPS?
Notes	This key appears only when U9071A–3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error is returned. The “AQPSK AutoDet” key is in the Mode Setup menu, but only EDGE EVM and EDGE PvT measurements support this feature. In other measurements, this setting is not applicable. You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	Unavailable when Modulation Scheme Auto Detection for Normal Burst is off and Modulation Scheme for Normal Burst is set to AQPSK.
Preset	EXCLude
State Saved	Saved in instrument state.
Range	Include Exclude
Initial S/W Revision	A.06.00
Help Map ID	5532


AQPSK SCPIR

Allows you to set Subchannel Power Imbalance Ratio (SCPIR) of AQPSK. SCPIR is defined in 3GPP TS 45.004 as

Mode Setup

$$SCPIR = 20 \times \log_{10}(\tan(\alpha)) \text{ dB}$$

Symbol state IQ points of AQPSK is determined by α in the equation above as depicted in the following figure.

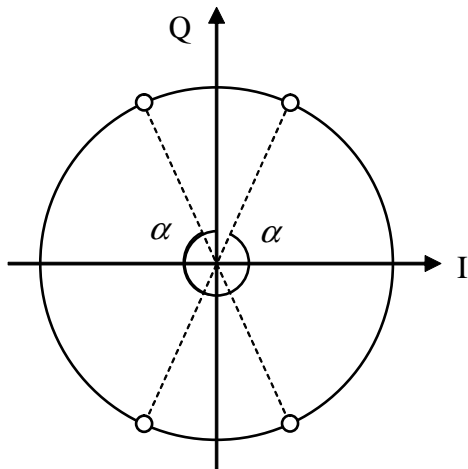

Key Path	Mode Setup, Demod, Mod Scheme
Mode	GSM
Scope	Meas Global
Remote Command	<code>[[:SENSE]:SYNC:NORMAL:MODulation:AQPSk:ALPHa:SCPIr <real></code> <code>[[:SENSE]:SYNC:NORMAL:MODulation:AQPSk:ALPHa:SCPIr?</code>
Example	<code>SYNC:NORM:MOD:AQPS:ALPH:SCP 10.0</code> <code>SYNC:NORM:MOD:AQPS:ALPH:SCP?</code>
Notes	This key appears only when the EDGE Evolution U9071A-3FP license is installed. When it is unlicensed and this SCPI command is sent, a setting conflict error is returned.
Couplings	Change <code>[[:SENSE]:SYNC:NORMAL:MODulation:AQPSk:ALPHa:ARCTan</code> to $10^{SCPIR/20}$.
Preset	0.0
State Saved	Saved in instrument state.
Min	-10.0
Max	10.0
Initial S/W Revision	A.07.00
Default Unit	dB
Help Map ID	5533

AQPSK Alpha SCPI for Backward Compatibility

Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :SYNC:NORMAL:MODulation:AQPSk:ALPHA:ARCTan <real> [:SENSE] :SYNC:NORMAL:MODulation:AQPSk:ALPHA:ARCTan?
Example	SYNC:NORM:MOD:AQPS:ALPH:ARCT 3.0 SYNC:NORM:MOD:AQPS:ALPH:ARCT?
Notes	This key is obsolete since AQPSK Alpha is set by SCPIR. This SCPI command is available only when the EDGE Evolution U9071A-3FP license is installed. When it is unlicensed and this SCPI command is sent, a setting conflict error is returned.
Couplings	Change [:SENSE] :SYNC:NORMAL:MODulation:AQPSk:ALPHA:SCPIr to $20\log_{10}(\tan(\alpha))$.
Preset	1.0
State Saved	Saved in instrument state.
Min	0.316227766 $= 10^{-10/20}$
Max	3.162277660 $= 10^{10/20}$
Initial S/W Revision	A.06.00
Modified at S/W Revision	A.07.00
Help Map ID	0

Burst Search Threshold

Sets the relative power threshold from the peak power, which is used by the burst alignment algorithm to determine the burst rising edge and falling edge.

Key Path	Mode Setup, Demod
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :SYNC:BURSt:STHReshold <rel_ampl> [:SENSE] :SYNC:BURSt:STHReshold?
Example	SYNC:BURS:STHR -20 SYNC:BURS:STHR?

Mode Setup

Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	-30
State Saved	Saved in instrument state.
Min	-200
Max	-0.01
Initial S/W Revision	Prior to A.02.00
Help Map ID	5509

HSR Pulse Shaping Filter

Selects the pulse shaping filter for higher symbol rate (HSR) signals. This menu key is available only when the U9071A-3FP license is installed.

This functionality applies only to the following measurements:

- EDGE EVM measurement
- EDGE Power vs. Time measurement
- GMSK/EDGE Output RF Spectrum measurement

Key	SCPI	Description
Narrow	NARROW	Use the Spectrally Narrow Pulse Shaping Filter.
Wide	WIDE	Use the Spectrally Wide Pulse Shaping Filter.

Key Path	Mode Setup, Demod
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :RADio:PSHape NARROW WIDE [:SENSE] :RADio:PSHape?
Example	RAD:PSH WIDE RAD:PSH?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Dependencies	This key is only shown when the U9071A-3FP license is installed. When it is unlicensed and SCPI is sent, an undefined header error is returned.
Preset	NARROW
State Saved	Saved in instrument state.
Range	Narrow Wide

Initial S/W Revision	A.02.00
Help Map ID	5531

Burst Align

Selects the sync alignment to be either to the GSM standard or the standard offset by 1/2 bit behind.

Key	SCPI	Description
GSM	GSM	Uses the burst alignment as defined in the GSM specifications.
1/2 Bit Offset	HBIT	Shifts the burst alignment by 1/2 bit, which corresponds to an earlier interpretation of the GSM standard. This selection applies to the Power vs. Time and the Phase and Frequency Error measurements.

Key Path	Mode Setup, Demod
Mode	GSM
Scope	Meas Global
Remote Command	[:SENSe] :SYNC:ALIGnment GSM HBIT [:SENSe] :SYNC:ALIGnment?
Example	SYNC:ALIG HBIT SYNC:ALIG?
Notes	You must be in the GSM mode to use this command. Use INSTRument:SElect to set the mode.
Preset	GSM
State Saved	Saved in instrument state.
Range	GSM 1/2 Bit Offset
Initial S/W Revision	Prior to A.02.00
Help Map ID	5506

Carrier BPF

This functionality is the same as the Carrier BPF key in the FREQ/Channel menu. See [Carrier BPF@5546@i](#) for details.

RF Sync Delay

Adjusts the “T0” point which has been measured in each measurement. This adjustment does not apply if the Burst Sync key (in each measurement’s Meas Setup menu) is set to None.

This parameter applies only to the GMSK/EDGE Power vs. Time measurement.

Key Path	Mode Setup, Demod
----------	--------------------------

Mode Setup

Mode	GSM
Scope	Meas Global
Remote Command	[:SENSE] :SYNC:BURSt:RFAMplitude:DELay <time> [:SENSE] :SYNC:BURSt:RFAMplitude:DELay?
Example	SYNC:BURS:RFAM:DEL -10us SYNC:BURS:RFAM:DEL?
Preset	0
State Saved	Saved in instrument state.
Min	-5 ms
Max	5 ms
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.06.00
Default Unit	ms
Help Map ID	5508

Noise Reduction

Noise Reduction accesses a menu for configuring the noise compensation of the instrument. This menu only appears in models that support Noise Reduction.

Key Path	Mode Setup
Initial S/W Revision	A.04.00
Help Map ID	4032

Noise Floor Extension

Turns on the **Noise Floor Extension** function. When this function is On, the expected noise power of the test set (derived from a factory calibration) is subtracted from the trace data. When **Noise Floor Extension** is On, it will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

Noise Floor Extension works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing. It works best with the average detector, with the Average Type set to Power.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages.

When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

See [“More Information” on page 1023](#)

Key Path	Mode Setup, Noise Reduction
Scope	Meas Global
Remote Command	[:SENSe] :CORRection:NOISe:FLOor ON OFF 1 0 [:SENSe] :CORRection:NOISe:FLOor?
Example	CORR:NOIS:FLO ON
Dependencies	In models that do not support Noise Floor Extension, the SCPI command will be accepted without error but will have no effect.
Preset	Unaffected by Mode Preset. Turned off by Restore Mode Defaults.
State Saved	No
Initial S/W Revision	A.04.00
Help Map ID	4033

More Information

The test set is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, et cetera.

In most band/path combinations, the noise can be well characterized based on just two parameters and the test set frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, et cetera are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus test set noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the test set noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

Mode Setup

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

Restore Mode Defaults

Restore Mode Defaults resets the state for the currently active mode by resetting the mode persistent settings to their factory default values, clearing mode data and by performing a Mode Preset

For more information, see the section under the key [Restore Mode Defaults@2307](#), in the System Functions section.

Key Path	Mode Setup
Initial S/W Revision	Prior to A.02.00
Help Map ID	Use 2307

Peak Search

Pressing the Peak Search key displays the Peak Search menu and places the selected marker on the trace point with the maximum y-axis value for that marker's trace. The Peak Search features allow you to define specific search criteria to determine which signals can be considered peaks, excluding unwanted signals from the search.

See [“More Information” on page 1025](#).

Remote Command:	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum
Example:	CALC:MARK2:MAX performs a peak search using marker 2. CALC:MARK2:Y? queries the marker amplitude (Y-axis) value for marker 2. CALC:MARK2:X? queries the marker frequency or time (X-axis) value for marker 2. SYST:ERR? can be used to query the errors to determine if a peak is found. The error -200 is returned after an unsuccessful search.
Notes:	Sending this command selects the subcoded marker.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3233

More Information

If **Same as “Next Peak” Criteria** is selected, and either **Pk Excursion** or **Pk Threshold** are on, a signal must meet those criteria. If no valid peak is found, a message is generated. And then the marker is not moved. When **Highest Peak** is on, or both **Pk Excursion** and **Pk Threshold** are off, the marker is always placed at the point on the trace with the maximum y-axis value, even if that point is on the very edge of the trace (exception: negative frequencies and signals close to the LO are not searched at all).

Pressing Peak Search with the selected marker off causes the selected marker to be set to **Normal** at the center of the screen, then a peak search is immediately performed.

Pressing the front panel Peak Search key always does a peak search. Occasionally, you may need to get to the Peak Search menu key functions without doing a peak search. You can do this by first accessing the Peak Search menu. Then go to the other menus that you need to access. Finally, you can get back to the Peak Search key menu by using the front panel Return key and pressing it as many times as required to navigate back through the previously accessed menus until you get back to the Peak Search menu.

Next Peak

Pressing Next Peak moves the selected marker to the peak that has the next highest amplitude less than the marker's current value. Only peaks which meet all enabled peak criteria are considered. If there is no valid peak lower than the current marker position, an error is generated and the marker is not moved.

Peak Search

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:NEXT
Example	CALC:MARK2:MAX:NEXT Selects marker 2 and moves it to the peak that is closest in amplitude to the current peak, but the next lower value.
Notes	Sending this command selects the subcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3234

Next Pk Right

Pressing Next Pk Right moves the selected marker to the nearest peak right of the current marker which meets all enabled peak criteria. If there is no valid peak to the right of the current marker position, an error is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:RIGHT
Example	CALC:MARK2:MAX:RIGHT Selects marker 2 and moves it to the next peak to the right of the current marker position.
Notes	Sending this command selects the subcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3235

Next Pk Left

Pressing Next Pk Left moves the selected marker to the nearest peak left of the current marker which meets all enabled peak criteria. If there is no valid peak to the left of the current marker position, an error is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:LEFT

Example	CALC:MARK2:MAX:LEFT selects marker 2 and moves it to the next peak to the left of the current marker position.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3236

Marker Delta

Performs the same function as the Delta 1-of-N selection key in the Marker menu. Basically this sets the control mode for the selected marker to Delta mode. See the “[Marker](#)” on page 879 for the complete description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the marker’s control mode to Delta without having to access two separate menus.

Initial S/W Revision	Prior to A.02.00
Key Path	Peak Search or Marker
Notes	Whenever the selected marker is in Delta mode and you are in the Peak Search menu, the Marker Delta key should be highlighted and the active function for setting its delta value turned on.
Help Map ID	3237

Mkr->CF

Assigns the selected marker’s frequency to the Center Frequency setting. See “[Marker To](#)” on page 919 for the description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to CF without having to access two separate menus.

Key Path	Peak Search or Marker->
Dependencies	Same as specified under Marker To
Initial S/W Revision	Prior to A.02.00
Help Map ID	3238

Mkr->Ref Lvl

Assigns the selected marker’s level to the Reference Level setting. See “[Marker To](#)” on page 919 for the description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to RL without having to access two separate menus.

Key Path	Peak Search or Marker ->
Dependencies	Same as specified under Marker To
Initial S/W Revision	Prior to A.02.00

Peak Search

Help Map ID	3239
-------------	------

Peak Criteria

Pressing this key opens the Peak Criteria menu and allows you to adjust the Pk Threshold and Pk Excursion parameters used for peak search functions.

For a signal to be identified as a peak it must meet certain criteria. Signals in the negative frequency range and signals very close to 0 Hz are ignored. If either the peak excursion or peak threshold functions are on, then the signal must satisfy those criteria before being identified as a peak.

When peak excursion and peak threshold are both off:

Peak Search, **Continuous Peak Search**, and maximum part of **Pk-Pk Search** will search the trace for the point with the highest y-axis value which does not violate the LO feed through rules. A rising and falling slope are not required for these three peak search functions.

The remaining search functions **Next Peak**, **Next Pk Right**, et cetera will only consider trace points which have a rising and falling slope on the left and right respectively.

Key Path	Peak Search
Initial S/W Revision	Prior to A.02.00
Help Map ID	3240

“Peak Search” Criteria

This menu lets you decide what kind of search you want to do when the Peak Search key is pressed (or the equivalent SCPI command sent).

Note that there are two “types” of peak search functions. One type is the “Peak Search” type, the other type is the “Next Peak” type. “Next Peak” searches (for example, Next Peak, Next Pk Left, Next Pk Right) are always checked using the Excursion and Threshold criteria as long as these criteria are On. The “Peak Search” type of search, simply finds the highest point on the trace. However you can change the “Peak Search” type of search so that it also uses the Excursion and Threshold criteria. This allows you to find the Maximum point on the trace that also obeys the Excursion and/or Threshold criteria.

When **Highest Peak** is selected, pressing **Peak Search** simply finds the highest peak on the marker’s trace. If **Same as “Next Peak” Criteria** is selected, then the search is also forced to consider the Excursion and Threshold found under the **“Next Peak” Criteria** menu.

Key Path	Peak Search, Peak Criteria
Remote Command	:CALCulate:MARKer:PEAK:SEARch:MODE MAXimum PARAMeter :CALCulate:MARKer:PEAK:SEARch:MODE?
Notes	MAXimum corresponds to the Highest Peak setting PARAMeter corresponds to the Same as “Next Peak” Criteria setting
Preset	MAXimum

State Saved	Saved in instrument state.
Readback line	Current state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3241

Highest Peak

When this key is selected, pressing the Peak Search key or issuing the equivalent SCPI command finds the maximum point on the trace, subject to the peak-search qualifications. This also affects the Peak Search half of Pk-Pk search and the Continuous Peak Search.

Key Path	Peak Search, Peak Criteria, “Peak Search” Criteria
Example	CALC:MARK:PEAK:SEAR:MODE MAX
Readback	Highest Peak
Initial S/W Revision	Prior to A.02.00
Help Map ID	3242

Same as “Next Peak” Criteria

When this key is selected, pressing the Peak Search key or issuing the equivalent SCPI command finds the maximum point on the trace, but subject to the Excursion and Threshold set under the Next Peak Criteria menu. The search is, of course, also subject to the peak-search qualifications. This also affects the Peak Search half of Pk-Pk search and the Continuous Peak Search.

Key Path	Peak Search, Peak Criteria, “Peak Search” Criteria
Example	CALC:MARK:PEAK:SEAR:MODE PAR
Readback	Use Excurs & Thr
Initial S/W Revision	Prior to A.02.00
Help Map ID	3243

“Next Peak” Criteria

This key opens up a menu which allows you to independently set the Peak Excursion and Peak Threshold and turn them on and off.

Key Path	Peak Search, Peak Criteria
Initial S/W Revision	Prior to A.02.00
Help Map ID	3244

Pk Excursion On/Off

Turns the peak excursion requirement on/off and sets the excursion value. The value defines the

Peak Search

minimum amplitude variation (rise and fall) required for a signal to be identified as peak. For example, if a value of 6 dB is selected, peak search functions like the marker Next Pk Right function move only to peaks that rise and fall 6 dB or more.

When both Pk Excursion and Pk Threshold are on, a signal must rise above the Pk Threshold value by at least the **Peak Excursion** value and then fall back from its local maximum by at least the **Peak Excursion** value to be considered a peak.

NOTE In the event that a sequence of trace points with precisely the same values represents the maximum, the leftmost point is found.

See “[More Information](#)” on page 1030.

Key Path	Peak Search, Peak Criteria, “Next Peak” Criteria
Remote Command	:CALCulate:MARKer:PEAK:EXCursion <rel_ampl> :CALCulate:MARKer:PEAK:EXCursion? :CALCulate:MARKer:PEAK:EXCursion:STATE OFF ON 0 1 :CALCulate:MARKer:PEAK:EXCursion:STATE?
Example	:CALC:MARK:PEAK:EXC:STAT ON :CALC:MARK:PEAK:EXC 30 DB sets the minimum peak excursion requirement to 30 dB
Dependencies	Available only when Y axis unit is amplitude units, otherwise grayed out.
Couplings	Whenever you adjust the value of Pk Excursion (with the knob, step keys, or by completing a numeric entry), and Peak Threshold is turned ON, the Peak Threshold Line and the Peak Excursion Region are displayed.
Preset	6.0 dB ON
Preset	6.0 dB ON
State Saved	Saved in State
Min	0.0 dB
Max	100.0 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	3245

More Information

If two signals are very close together and the peak excursion and threshold criteria are met at the outside edges of the combined signals, this function finds the highest of these two signals as a peak (or next peak). However, if a signal appears near the edge of the screen such that the full extent of either the

rising or falling edge cannot be determined, and the portion that is on screen does not meet the excursion criteria, then the signal cannot be identified as a peak.

When measuring signals near the noise floor, you can reduce the excursion value even further to make these signals recognizable. To prevent the marker from identifying noise as signals, reduce the noise floor variations to a value less than the peak-excursion value by reducing the video bandwidth or by using trace averaging.

Pk Threshold On/Off

Turns the peak threshold requirement on/off and sets the threshold value. The peak threshold value defines the minimum signal level (or min threshold) that the peak identification algorithm uses to recognize a peak.

When both Pk Excursion and Pk Threshold are on, a signal must rise above the Pk Threshold value by at least the **Peak Excursion** value and then fall back from its local maximum by at least the **Peak Excursion** value to be considered a peak.

For example, if a threshold value of -90 dBm is selected, the peak search algorithm will only consider signals with amplitude greater than the -90 dBm threshold. If a threshold value of -90 dBm is selected, and **Peak Excursion** is **On** and set to 6 dB, the peak search algorithm will only consider signals with amplitude greater than the -90 dBm threshold which rise 6 dB above the threshold and then fall back to the threshold.

Key Path	Peak Search, Peak Criteria, "Next Peak Criteria"
Remote Command	:CALCulate:MARKer:PEAK:THReshold <ampl> :CALCulate:MARKer:PEAK:THReshold? :CALCulate:MARKer:PEAK:THReshold:STATe OFF ON 0 1 :CALCulate:MARKer:PEAK:THReshold:STATe?
Example	CALC:MARK:PEAK:THR:STAT ON turns on the threshold criterion. CALC:MARK:PEAK:THR -60 dBm sets the threshold to -60 dBm.
Dependencies	When Ref Level Offset changes, Peak Threshold must change by the same amount.
Preset	-90.0 dBm ON
State Saved	Saved in instrument state.
Min	The current displayed Ref Level $- 200$ dB. The current displayed Ref Level is the current Ref Level, offset by the Ref Level Offset.
Max	The current displayed Ref Level. This means the current Ref Level, offset by the Ref Level Offset.
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00
Help Map ID	3246

Peak Search

Pk Threshold Line On/Off


Turns the peak threshold line on or off. Preset state is off. No equivalent SCPI command.

See “More Information” on page 1032.

Dependencies	If Peak Threshold is Off and the Peak Threshold line is turned on, it should turn on Peak Threshold.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3814

More Information

The Peak Threshold line is green and has the value of the peak threshold (for example, “-20.3 dBm”) written above its right side, above the line itself. If Peak Excursion is ON it shows on the left side as a region above the Peak Threshold line. As with all such lines (Display Line, Trigger Level line, et cetera) it is drawn on top of all traces.

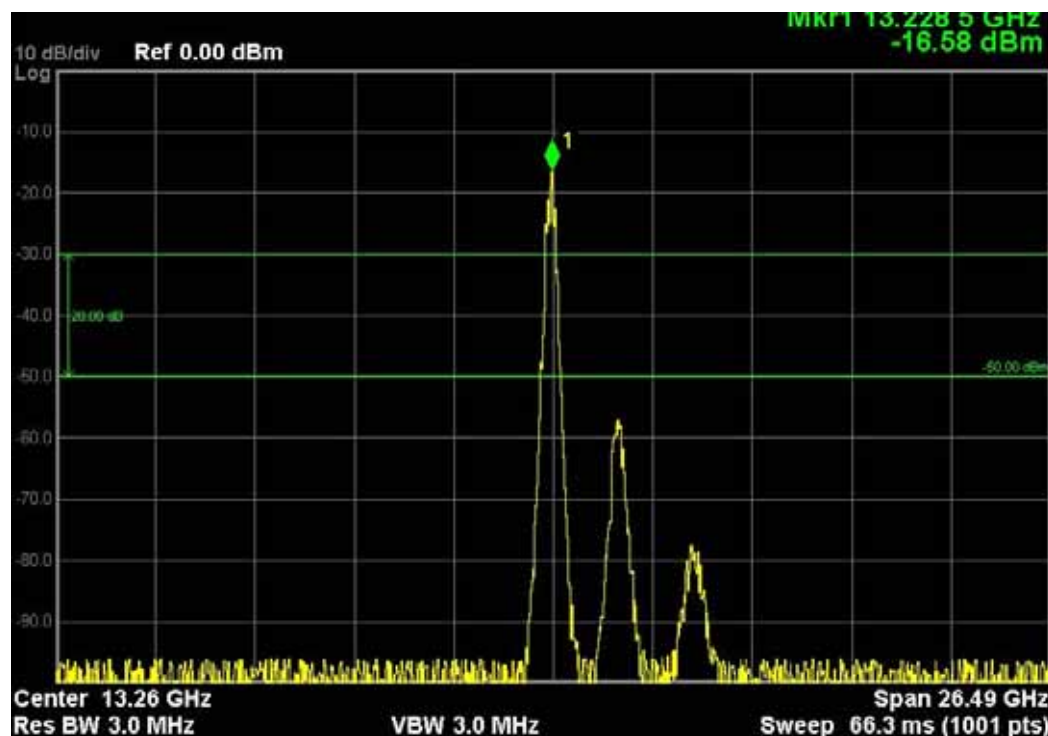

This function is automatically set to ON (thus turning on the Peak Threshold line) whenever the value of Peak Threshold or Peak Excursion becomes the active function, unless Peak Threshold is OFF. It is automatically set to OFF whenever Peak Threshold is set to OFF. Manually turning it ON automatically turns on Pk Threshold.

The Peak Excursion part is on whenever the Pk Threshold part is on, unless Peak Excursion is OFF.

Peak Table

Opens the Peak Table menu.

The Peak Table provides a displayed list of up to 20 signal peaks from the selected trace. If more than one trace window is displayed, the selected trace in the selected window is used. If there are more than 20 signals which meet the peak search criteria, only the 20 highest peaks are listed.

The Peak Table is updated after each sweep. The list of peaks in the Peak Table can be ordered either by ascending frequency or by descending amplitude. In either case, the entire trace is first evaluated and the 20 highest peaks are selected for inclusion in the list. After the peaks are selected, they are then sorted and displayed according to the Peak Sort setting.

Key Path	Peak Search
Initial S/W Revision	Prior to A.02.00
Help Map ID	3247

Peak Table On/Off

Turns Peak Table on/off. When turned on, the display is split into a measurement window and a peak table display window.

Turning the Peak Table on turns the Marker Table off and vice versa.

Key Path	Peak Search, Peak Table
Remote Command	:CALCulate:MARKer:PEAK:TABLE:STATE OFF ON 0 1 :CALCulate:MARKer:PEAK:TABLE:STATE?
Example	CALC:MARK:PEAK:TABL:STAT ON Turns on and displays the peak table.
Dependencies	When the Peak Table turns on, if Peak Threshold is On then it becomes the active function.
Preset	OFF
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3248

Peak Sort

Sets the peak table sorting routine to list the peaks in order of descending amplitude or ascending frequency. The remote command can also be used to sort the peaks found using the :CALCulate:DATA:PEAKs command.

Key Path	Peak Search, Peak Table
Remote Command	:CALCulate:MARKer:PEAK:SORT FREQuency AMPLitude :CALCulate:MARKer:PEAK:SORT?
Example	CALC:MARK:PEAK:SORT AMPL Sets sorting routine to list peaks in order of descending amplitude. CALC:MARK:PEAK:SORT?

Peak Search

Preset	AMPLitude
Preset	AMPLitude
State Saved	Saved in instrument state.
Backwards Compatibility SCPI	:TRACe:MATH:PEAK:SORT
Backwards Compatibility SCPI	The old TRAC:MATH:PEAK:SORT command/query used in ESA is still supported for backward compatibility.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3249

Peak Readout

Shows up to twenty signal peaks as defined by the setting:

All (ALL) - lists all the peaks defined by the peak criteria, in the current sort setting.

Above Display Line (GTDLine) - lists the peaks that are greater than the defined display line, and that meet the peak criteria. They are listed in the current sort order.

Below Display Line (LTDLine) - lists the peaks that are less than the defined display line, and that meet the peak criteria. They are listed in the current sort order.

If the peak threshold is defined and turned on, then the peaks must meet this peak criteria in addition to the display line requirements.

See [“More Information” on page 1034](#).

Key Path	Peak Search, Peak Table
Remote Command	:CALCulate:MARKer:PEAK:TABLE:READout ALL GTDLine LTDLine :CALCulate:MARKer:PEAK:TABLE:READout?
Example	CALC:MARK:PEAK:TABL:READ GTDL
Dependencies	Turning Display Line off forces Readout to ALL
Preset	All
Preset	All
State Saved	Saved in instrument state.
Readback line	1-of-N selection
Initial S/W Revision	Prior to A.02.00
Help Map ID	3250

More Information

If the Display Line (see the Section “View/Display”) is turned on, the Peak Table can be selected to include all peaks, only those above the Display Line, or only those below the Display Line. See Figures

1-2 and 1-3 to understand what happens if both Display Line and Pk Threshold are turned on.

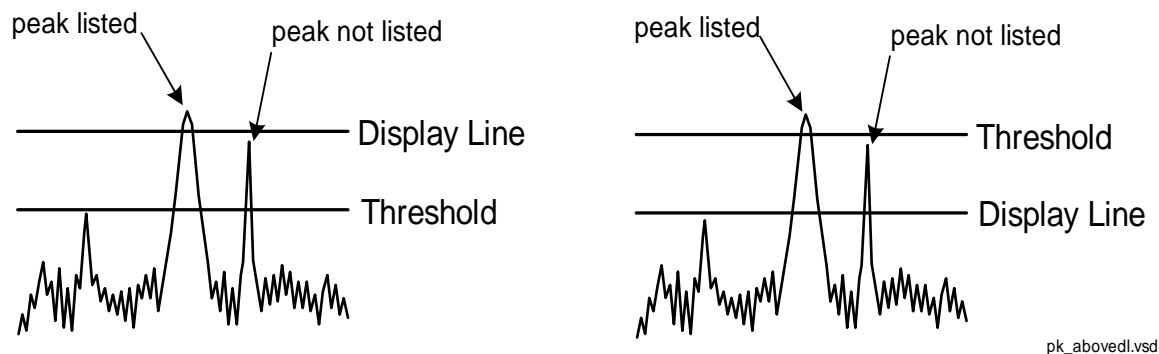


Figure 1- 2Above Display Line Peak Identification

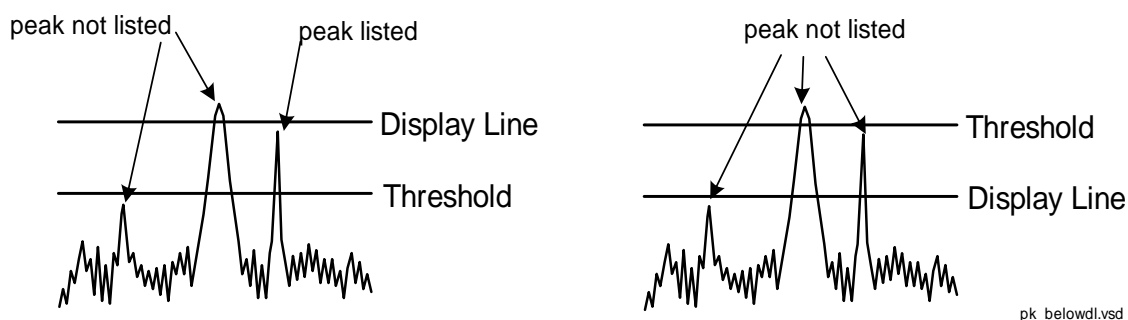


Figure 1- 3Below Display Line Peak Identification

All

Sets the peak table to display the 20 highest peaks in the order specified by the current Peak Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined Pk Excursion and Pk Threshold values are found.

Key Path	Peak Search, Peak Table, Peak Readout
Example	CALC:MARK:PEAK:TABL:READ ALL
Notes	Auto return after pressed
Readback	All
Initial S/W Revision	Prior to A.02.00
Help Map ID	3251

Above Display Line

Sets the peak table to display only the 20 highest peaks above the display line in the order specified by the current Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined criteria are found. If the display line is not already on, it is turned on (it has to be on or it cannot be used to

Peak Search

exclude peaks).

Key Path	Peak Search, Peak Table, Peak Readout
Example	CALC:MARK:PEAK:TABL:READ GTDL
Notes	Auto return after pressed
Dependencies	When Above Display Line is selected, Display Line is turned on and becomes the active function.
Readback	Above DL
Initial S/W Revision	Prior to A.02.00
Help Map ID	3252

Below Display Line

Sets the peak table to display only the 20 highest peaks below the display line as defined by the peak in the order specified by the current Sort setting. If the Peak Criteria are turned on, then only peaks that meet the defined criteria are found. If the display line is not already on, it is turned on (it has to be on or it cannot be used to exclude peaks).

Key Path	Peak Search, Peak Table, Peak Readout
Example	CALC:MARK:PEAK:TABL:READ LTDL
Notes	Auto return after pressed
Dependencies	When Below Display Line is selected, Display Line is turned on and becomes the active function.
Readback	Below DL
Initial S/W Revision	Prior to A.02.00
Help Map ID	3253

Continuous Peak Search On/Off

Turns Continuous Peak Search on or off. When Continuous Peak Search is on, a peak search is automatically performed for the selected marker after each sweep. The rules for finding the peak are exactly the same as for **Peak Search**, including the use of the peak criteria rules. If no valid peak is found, a warning is generated after each sweep.

See “[More Information](#)” on page 1037.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : CPSearch [: STATE] ON OFF 1 0 :CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : CPSearch [: STATE] ?

Example	CALC:MARK:CPS ON Turns on Continuous Peak Search.
Notes	Sending this command selects the subcoded marker
Couplings	The Continuous Peak Search key is grayed out when the selected marker is a Fixed marker. Also, if Continuous Peak Search is on and the selected marker becomes a fixed marker, then Continuous Peak Search is turned off and the key grayed out. Signal Track and Continuous Peak Search are mutually exclusive so if Signal Track is on, Continuous Peak Search is grayed out and vice versa.
Preset	Mode Preset
State Saved	Saved in instrument state.
Status Bits/OPC dependencies	The Measuring bit should remain set while this command is operating and should not go false until the marker position has been updated.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3254

More Information

When Continuous Peak Search is turned on a peak search is immediately performed and then is repeated after each sweep. If Continuous Peak Search is turned on with the selected marker off, the selected marker is set to **Normal** at the center of the screen, and then a peak search is immediately performed and subsequently repeated after each sweep.

When in Continuous Peak Search, *OPC will not return true, nor will READ or MEASURE return any data, until the sweep is complete and the marker has been re-peaked. Note further that if the test set is in a measurement such as averaging, and Continuous Peak Search is on, the entire measurement is allowed to complete (i.e., all the averages taken up to the average number) before the repeak takes place, and only THEN will *OPC go true and READ or MEASURE return data.

When Continuous Peak Search is turned on for a marker, a little “hat” is placed above the marker.

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value. It places the selected marker on the minimum value on its selected trace. And it places that marker’s reference marker on the peak of its selected trace. This function turns on the reference marker and sets its mode to **Fixed** if it is not already on. (These markers may be on two different traces.)

The rules for finding the maximum peak are exactly the same as for **Peak Search**, including the use of the peak criteria rules. However, the minimum trace value is not required to meet any criteria other than being the minimum y-axis value in the trace.

When Pk-Pk Search is successful, a message is displayed on the message line.

If the selected marker is off, a delta type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a delta marker, then it is changed to delta which turns on the reference

Peak Search

marker if needed, and then it performs the peak-to-peak function.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :PTPeak
Example	CALC:MARK:PTP CALC:MARK:Y? queries the delta amplitude value for marker 1.
Notes	Turns on the Marker Δ active function.
Notes	Sending this command selects the subopcoded marker.
Dependencies	Pk-Pk Search is grayed out when Coupled Markers is on.
Couplings	The selected marker becomes a delta marker if not already in delta mode.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3255

Min Search

Moves the selected marker to the minimum y-axis value on the current trace. Minimum (negative) peak searches do not have to meet the peak search criteria. It just looks for the lowest y-axis value. If the selected marker is Off, it is turned on before the minimum search is performed.

Key Path	Peak Search
Remote Command	:CALCulate:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MINimum
Example	CALC:MARK:MIN selects marker 1 and moves it to the minimum amplitude value.
Notes	Sending this command selects the subopcoded marker.
State Saved	Not part of saved state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3256

Recall

Most of the functions under this key work the same way in many measurements, so they are documented in Recall@2637@i.

The Amplitude Correction Import Data function under Recall is documented here.

Amplitude Correction

This key selects the Amplitude Corrections as the data type to be imported. When pressed a second time, it brings up the Select Menu, which lets you select the Correction into which the data will be imported.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, under the Corrections softkey.

A set of preloaded Corrections files can be found in the directory

/My Documents/ EMC Limits and Ampcor.

Under this directory, the directory called Ampcor (Legacy Naming) contains a set of legacy corrections files, generally the same files that were supplied with older Agilent EMI analyzers, that use the legacy suffixes .ant, .oth, .usr, and .cbl, and the old 8-character file names. In the directory called Ampcor, the same files can be found, with the same suffixes, but with longer, more descriptive filenames.

When the Amplitude Correction is an Antenna correction and the Antenna Unit in the file is not **None**, the Y Axis Unit setting will change to match the Antenna Unit in the file.

Key Path:	Recall
Mode:	EDGE GSM
Remote Command:	:MMEMory:LOAD:CORRection 1 2 3 4 5 6, <filename>
Example:	:MMEM:LOAD:CORR 2 "myAmpcor.csv" recalls the Amplitude Correction data from the file myAmpcor.csv in the current directory to the 2nd Amplitude Correction table, and turns on Correction 2. The default path is My Documents\amplitudeCorrections.

Recall

Dependencies:	<p>Only the first correction array (Correction 1) supports antenna units. This means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include .ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.</p> <p>Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key will be grayed out in measurements that do not. The key will not show at all if no measurements in the Mode support it.</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type. If any of these occur during manual operation, the test set returns to the Import Data menu and the File Open dialog goes away.</p> <p>This key does not appear unless you have the proper option installed in your instrument.</p> <p>This command will generate an “Option not available” error unless you have the proper option installed in your instrument.</p>
Couplings:	When a correction file is loaded from mass storage, it is automatically turned on (Correction ON) and Apply Corrections is set to On. This allows the user to see its effect, thus confirming the load.
Readback:	selected Correction
Backwards Compatibility SCPI:	<p>:MMEMory:LOAD:CORRection ANTenna CABLe OTHer USER, <filename></p> <p>For backwards compatibility, ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4</p>
Initial S/W Revision:	A.02.00
Help Map ID:	2649

Amplitude Correction

These keys let you select which Correction to import the data into. Once selected, the key returns back to the Import Data menu and the selected Correction number is annotated on the key. The next step is to select the Open key in the Import Data menu.

Antenna corrections are a particular kind of Amplitude Corrections – they are distinguished in the corrections file by having the Antenna Unit set to a value other than None. Only Correction 1 supports Antenna Units.

Key Path:	Recall, Data, Amplitude Correction
Notes:	auto return
Dependencies:	Only Correction 1 may be used to load a Correction that contains an Antenna Unit other than None
Preset:	Not part of Preset, but is reset to Correction 1 by Restore Input/Output Defaults; survives shutdown.

State Saved:	The current Correction number is saved in instrument state
Initial S/W Revision:	A.02.00
Help Map ID:	2650

Multiport Adapter Amplitude Correction

This key selects the Multiport Adapter Amplitude Corrections as the data type to be imported. When pressed a second time, it brings up the Select Menu, which lets you select the Correction into which the data will be imported.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, under the Corrections softkey.

A set of preloaded Corrections files can be found in the directory

/My Documents/ EMC Limits and Ampcor.

Under this directory, the directory called Ampcor (Legacy Naming) contains a set of legacy corrections files, generally the same files that were supplied with older Agilent EMI analyzers, that use the legacy suffixes .ant, .oth, .usr, and .cbl, and the old 8-character file names. In the directory called Ampcor, the same files can be found, with the same suffixes, but with longer, more descriptive filenames.

When the Amplitude Correction is an Antenna correction and the Antenna Unit in the file is not **None**, the Y Axis Unit setting will change to match the Antenna Unit in the file.

Key Path:	Recall, Data, Amplitude Correction
Mode:	SA EDGE GSM PN
Remote Command:	:MMEMory:LOAD:MPADapter:CORRection 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16, <filename>.
Example:	:MMEM:LOAD:MPAD:CORR 2 "myAmpcor.csv" recalls the Multiport Adapter Amplitude Correction data from the file myAmpcor.csv in the current directory to the 2nd Multiport Adapter Amplitude Correction table, and turns on MPA Correction 2. The default path is My Documents\amplitudeCorrections.

Recall

Dependencies:	<p>Only the first correction array (Correction 1) supports antenna units. This means that a correction file with an Antenna Unit can only be loaded into the Corrections 1 register. Consequently only for Correction 1 does the dropdown in the Recall dialog include.ant, and if an attempt is made to load a correction file into any other Correction register which DOES contain an antenna unit, a Mass Storage error is generated.</p> <p>Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key will be grayed out in measurements that do not. The key will not show at all if no measurements in the Mode support it.</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type. If any of these occur during manual operation, the analyzer returns to the Import Data menu and the File Open dialog goes away.</p> <p>This key does not appear unless you have the proper option installed in your instrument.</p> <p>This command will generate an “Option not available” error unless you have the proper option installed in your instrument.</p> <p>If the file is empty, message –250.3005 is reported. If the file does not exist message –256 is reported. If there is a mismatch between the file and the destination data type, an message is reported. –250.3003. See error list in the X-series Messaging document for the exact error text.</p>
Couplings:	When a correction file is loaded from mass storage, it is automatically turned on (Correction ON) and Apply Corrections is set to On. This allows the user to see its effect, thus confirming the load.
Readback:	selected Correction
Backwards Compatibility SCPI:	<p>For backwards compatibility, the following parameters syntax is supported:</p> <pre>:MMEMory:LOAD:MPADapter:CORRection ANTenna CABLe OTHer USER, <filename></pre> <p>ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4</p>
Initial S/W Revision:	A.10.00
Help Map ID:	0

Multiport Adapter Amplitude Correction 1,2,3,4,5,6,7,8,9,10,11,~,15,16

These keys let you select which Correction to import the data into. Once selected, the key returns back to the Import Data menu and the selected Correction number is annotated on the key. The next step is to select the Open key in the Import Data menu.

Antenna corrections are a particular kind of Multiport Adapter Amplitude Corrections – they are distinguished in the corrections file by having the Antenna Unit set to a value other than None. Only Correction 1 supports Antenna Units.

Key Path:	Recall, Data, Amplitude Correction, Multiport Adptr Correction
Notes:	auto return

Dependencies:	Only Multiport Adapter Correction 1 may be used to load a Correction that contains an Antenna Unit other than None
Preset:	not part of Preset, but is reset to Correction 1 by Restore Input/Output Defaults; survives shutdown
State Saved:	The current Correction number is saved in instrument state
Initial S/W Revision:	A.10.00
Help Map ID:	0

Recall

Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The Restart function is accessed in several ways:

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

Key Path:	Front-panel key
Remote Command:	:INITiate[:IMMEDIATE] :INITiate:RESTART
Example:	:INIT:IMM :INIT:REST
Notes:	:INITiate:RESTART and :INITiate:IMMEDIATE perform exactly the same function.
Couplings:	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement.
Status Bits/OPC dependencies:	This is an Overlapped command. The STATUS:OPERation register bits 0 through 8 are cleared. The STATUS:QUESTionable register bit 9 (INTEgrity sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set.
Backwards Compatibility Notes:	For Spectrum Analysis mode in ESA and PSA, the Restart hardkey and the INITiate:RESTART command restart trace averages (displayed average count reset to 1) for a trace in Clear Write , but did not restart Max Hold and Min Hold . In the X-Series, the Restart hardkey and the INITiate:RESTART command restart not only Trace Average , but Max Hold and Min Hold traces as well. For wireless comms modes in ESA and PSA, the Restart hardkey and the INITiate:RESTART command restart every measurement, which includes all traces and numeric results. There is no change to this operation.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3307

The **Restart** function first aborts the current sweep/measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with

Restart

a new data acquisition (sweep) taken once the trigger condition is met.

If the test set is in the process of aligning when **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that **Restart** "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement
- depending on the current settings.

With **Average/Hold Number** (in **Meas Setup** menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the test set stops sweeping once that sweep has completed. However, with **Average/Hold Number** >1 and at least one trace set to **Trace Average, Max Hold, or Averaging on (most other measurements)**, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Number**. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the test set will go to idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while **Average/Hold Number** is the active function, or sending the remote command `CALC: AVER: TCON UP`.

Save

Most of the functions under this key work the same way in many measurements, so they are documented in [Save@2600@i](#).

The Amplitude Correction function under Save is documented here.

Amplitude Correction

Pressing this key selects **Amplitude Corrections** as the data type to be exported. Pressing this key again brings up the Select Menu, which allows the user to select which **Amplitude Correction** to save.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, under the Corrections softkey.

Key Path:	Save
Remote Command:	:MMEMory:STORe:CORRection 1 2 3 4 5 6, <filename>
Example:	:MMEM:STOR:CORR 2 "myAmpcor.csv" saves Correction 2 to the file myAmpcor.csv on the current path. The default path is My Documents\amplitudeCorrections.
Notes:	If the save is initiated via SCPI, and the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade. Both single and double quotes are supported for any filename parameter over SCPI.
Dependencies:	Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key will be grayed out in measurements that do not. The key will not show at all if no measurements in the Mode support it. This key will not appear unless you have the proper option installed in your instrument.
Readback:	Selected Correction
Backwards Compatibility SCPI:	:MMEMory:STORe:CORRection ANTenna CABLe OTHer USER, <filename> For backwards compatibility, ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4
Initial S/W Revision:	A.02.00
Help Map ID:	2612

Correction Data File

A Corrections Data File contains a copy of one of the test set correction tables. Corrections provide a

Save

way to adjust the trace display for predetermined gain curves (such as for cable loss).

Corrections files are text files in .csv (comma separated values) form, to make them importable into Excel or other spreadsheet programs. The format for Corrections files is as follows.

Line #	Type of field	Example	Notes
1	File type, must be "Amplitude Correction"	Amplitude Correction	May not be omitted
2	File Description (in quotes)	"Correction Factors for 11966E"	60 characters max; may be empty but may not be omitted. If exceeds 60 characters, error -233 Too much data reported
3	Comment (in quotes)	"Class B Radiated"	60 characters max; may be empty but may not be omitted. . If exceeds 60 characters, error -233 Too much data reported
4	Instrument Version, Model #	A.02.06,N9020A	May be empty but may not be omitted
5	Option List, File Format Version	K03 LFE EXM ,01	May be empty but may not be omitted
6	Freq Unit to be used for all frequency values in the file	Frequency Unit,MHz	assumed to be Hz if omitted
7	Antenna Unit	Antenna Unit,None	If omitted leaves the Antenna unit unchanged. The amplitude unit in the Antenna Unit field is a conversion factor that is used to adjust the Y Axis Units of the current mode, if the mode supports Antenna Units. For more details on antenna correction data, refer to the Input/Output,Corrections key description. Allowable values: dBuv/m, dBuA/m, dBG, dBpT, None
8	Freq Interpolation	Frequency Interpolation,Linear	if omitted leaves the Freq Interpolation unchanged. Allowable values: Linear, Logarithmic
9	Bias value in mA	Bias,0.00	If omitted leaves the Bias value unchanged (added as of A.08.50)
10	Bias State	Bias State,On	If omitted leaves the Bias State unchanged. Allowable values: On, Off (added as of A.08.50)
11	Overlap, two values, Freq1 and Freq2, separated by commas.	Overlap,33500,40000	Uses Freq Unit from line 6. Thus, in this example Freq1=33.5 GHz, Freq2=40.0 GHz (see note below). If omitted leaves the overlap unchanged (added as of A.08.50)

Line #	Type of field	Example	Notes
12	DATA marker	DATA	Corrections data begins in the next line

Lines 2 through 5 can be empty but must appear in the file. Lines 6 through 11 are optional, the lines can be left out of the file altogether.

The Overlap row and the two Bias rows apply only to external mixing. Both are read-only, they are never written by the test set. The only way to insert or modify these rows is to edit the file with a text editor or a spreadsheet editor. These rows are intended for use by mixer manufacturers, as they allow the manufacturer to insert data about how the mixer corrections were generated and how they should be applied. The Bias rows allow you to specify whether to turn Bias on or off when the Correction is turned on and to specify a Bias value (turning off the Correction does not change the Bias, but turning it back on again sets it to the value specified in the file). The Overlap row allows you to specify an overlap region in which two different corrections may be applied. It is expected that in the corrections data itself, there will be TWO corrections values exactly at Max Freq, otherwise Overlap is ignored. The way the overlap is processed is as follows: if at any given time the current test set Start Freq is greater than Freq 1 and lower than Freq 2, and the current Stop Freq is greater than Freq 2, extend the first correction point at or above Freq 2 down to Freq 1, rather than using the correction data between Freq1 and Freq2.

The Antenna Unit row can only be used in Correction register 1, because there can only be one setting for Antenna Unit at any given time. If a Correction whose Antenna Unit is set to anything but None is loaded into any Correction register but 1, an error is generated (Mass storage error; Can only load an Antenna Unit into Correction 1). When a correction file is saved from any Correction register but 1, Antenna Unit is always written as None.

Similarly, the Bias rows can only be used in Correction register 1, because there can only be one setting for Bias at any given time. If a Correction file with a Bias or Bias State row is loaded into any Correction register but 1, an error is generated: Mass storage error; Can only load Bias Settings into Correction 1

The data follows the DATA row, as comma separated X, Y pairs; one pair per line.

For example, suppose you have an Antenna to correct for on an N9020A version A.02.06 and the correction data is:

- 0 dB at 200 MHz
- 17 dB at 210 MHz
- 14.8 dB at 225 MHz

Then the file will look like:

- Amplitude Correction
- "Correction Factors for 11966E"
- "Class B Radiated"
- A.02.06,N9020A
- P13 EA3 UK6,01
- Frequency Unit,MHz
- Antenna Unit,dBuV/m

Save

- Frequency Interpolation,Linear
- DATA
- 200.000000,0.00
- 210.000000,17.00
- 225.000000,14.80

The choices for the 1 of N fields in the metadata are as follows:

- Frequency Unit: Hz, kHz, MHz, GHz
- Antenna Unit: dBuv/m, dBuA/m, dBG, dBpT, None
- Frequency Interpolation: Logarithmic, Linear

Multiport Adapter Amplitude Correction

Pressing this key selects **Multiport Adapter Amplitude Corrections** as the data type to be exported. Pressing this key again brings up the Select Menu, which allows the user to select which **Multiport Adapter Amplitude Correction** to save.

Amplitude Corrections are fully discussed in the documentation of the Input/Output key, under the Corrections softkey.

Key Path:	Save, Data, Amplitude Correction
Remote Command:	:MMEMory:STORe:MPADapter:CORRection 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16, <filename>
Example:	:MMEM:STOR:MPAD:CORR 2 "myAmpcor.csv" saves Multiport Adapter Correction 2 to the file myAmpcor.csv on the current path. The default path is My Documents\amplitudeCorrections.
Notes:	If the save is initiated via SCPI, and the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade. Both single and double quotes are supported for any filename parameter over SCPI.
Dependencies:	Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key will be grayed out in measurements that do not. The key will not show at all if no measurements in the Mode support it. This key will not appear unless you have the proper option installed in your instrument.
Readback:	Selected Correction

Backwards Compatibility SCPI:	For backwards compatibility only, the following parameters syntax is supported: :MMEMory:STORe:MPADapter:CORRection ANTenna CABLe OTHer USER, <filename> ANTenna maps to 1, CABLe maps to 2, OTHer maps to 3 and USER maps to 4
Initial S/W Revision:	A.10.00
Help Map ID:	0

Correction Data File

A Corrections Data File contains a copy of one of the analyzer correction tables. Corrections provide a way to adjust the trace display for predetermined gain curves (such as for cable loss).

Corrections files are text files in .csv (comma separated values) form, to make them importable into Excel or other spreadsheet programs. The format for Corrections files is as follows.

Line #	Type of field	Example	Notes
1	File type, must be "Amplitude Correction"	Amplitude Correction	May not be omitted
2	File Description (in quotes)	"Correction Factors for 11966E"	45 characters max; may be empty but may not be omitted. If exceeds 45 characters, error -233 Too much data reported
3	Comment (in quotes)	"Class B Radiated"	45 characters max; may be empty but may not be omitted. . If exceeds 45 characters, error -233 Too much data reported
4	Instrument Version, Model #	A.02.06,N9020A	May be empty but may not be omitted
5	Option List, File Format Version	K03 LFE EXM ,01	May be empty but may not be omitted
6	Freq Unit to be used for all frequency values in the file	Frequency Unit,MHz	assumed to be Hz if omitted
7	Antenna Unit,	Antenna Unit,None	If omitted leaves the Antenna unit unchanged. The amplitude unit in the Antenna Unit field is a conversion factor that is used to adjust the Y Axis Units of the current mode, if the mode supports Antenna Units. For more details on antenna correction data, refer to the Input/Output,Corrections key description. Allowable values: dBuV/m, dBuA/m, dBG, dBpT, None

Save

8	Freq Interpolation	Frequency Interpolation,Linear	if omitted leaves the Freq Interpolation unchanged. Allowable values: Linear, Logarithmic
9	Bias value in mA	Bias,0.00	If omitted leaves the Bias value unchanged (added as of A.08.50)
10	Bias State	Bias State,On	If omitted leaves the Bias State unchanged. Allowable values: On, Off (added as of A.08.50)
11	Overlap, two values, Freq1 and Freq2, separated by commas.	Overlap,33500,40000	Uses Freq Unit from line 6. Thus, in this example Freq1=33.5 GHz, Freq2=40.0 GHz (see note below). If omitted leaves the overlap unchanged (added as of A.08.50)
12	DATA marker	DATA	Corrections data begins in the next line

Lines 2 through 5 can be empty but must appear in the file. Lines 6 through 11 are optional, the lines can be left out of the file altogether.

The Overlap row and the two Bias rows apply only to external mixing. Both are read-only, they are never written by the analyzer. The only way to insert or modify these rows is to edit the file with a text editor or a spreadsheet editor. These rows are intended for use by mixer manufacturers, as they allow the manufacturer to insert data about how the mixer corrections were generated and how they should be applied. The Bias rows allow you to specify whether to turn Bias on or off when the Correction is turned on and to specify a Bias value (turning off the Correction does not change the Bias, but turning it back on again sets it to the value specified in the file). The Overlap row allows you to specify an overlap region in which two different corrections may be applied. It is expected that in the corrections data itself, there will be TWO corrections values exactly at Max Freq, otherwise Overlap is ignored. The way the overlap is processed is as follows: if at any given time the current analyzer Start Freq is greater than Freq 1 and lower than Freq 2, and the current Stop Freq is greater than Freq 2, extend the first correction point at or above Freq 2 down to Freq 1, rather than using the correction data between Freq1 and Freq2.

The Antenna Unit row can only be used in Correction register 1, because there can only be one setting for Antenna Unit at any given time. If a Correction whose Antenna Unit is set to anything but None is loaded into any Correction register but 1, an error is generated (Mass storage error; Can only load an Antenna Unit into Correction 1). When a correction file is saved from any Correction register but 1, Antenna Unit is always written as None.

Similarly, the Bias rows can only be used in Correction register 1, because there can only be one setting for Bias at any given time. If a Correction file with a Bias or Bias State row is loaded into any Correction register but 1, an error is generated: Mass storage error; Can only load Bias Settings into Correction 1

The data follows the DATA row, as comma separated X, Y pairs; one pair per line.

For example, suppose you have an Antenna to correct for on an N9020A version A.02.06 and the correction data is:

- 0 dB at 200 MHz
- 17 dB at 210 MHz
- 14.8 dB at 225 MHz

Then the file will look like:

- Amplitude Correction
- "Correction Factors for 11966E"
- "Class B Radiated"
- A.02.06,N9020A
- P13 EA3 UK6,01
- Frequency Unit,MHz
- Antenna Unit,dBuV/m
- Frequency Interpolation,Linear
- DATA
- 200.000000,0.00
- 210.000000,17.00
- 225.000000,14.80

The choices for the 1 of N fields in the metadata are as follows:

- Frequency Unit: Hz, kHz, MHz, GHz
- Antenna Unit: dBuv/m, dBuA/m, dBG, dBpT, None
- Frequency Interpolation: Logarithmic, Linear

Multiport Adapter Amplitude Correction 1,2,3,4,5,6,7,8,9,10,11,~,15,16

These keys let you pick which Correction to save. Once selected, the key returns back to the Export Data menu and the selected Correction number is annotated on the key.

The next step in the Save process is to select the Save As key in the Export Data menu.

Key Path:	Save, Data, Amplitude Correction, Multiport Adptr Correction
Preset:	Not part of a Preset, but is reset to Correction 1 by Restore Input/Output Defaults. Survives a shutdown.
Readback:	1
Initial S/W Revision:	A.10.00
Help Map ID:	0

Save

Single (Single Measurement/Sweep)

Sets the test set for Single measurement operation. The single/continuous state is Meas Global, so the setting will affect all the measurements. If you are Paused, pressing **Single** does a Resume.

Key Path:	Front-panel key
Example:	:INIT:CONT OFF
Notes:	See Cont key description.
Backwards Compatibility Notes:	<p>For Spectrum Analysis mode in ESA and PSA, the Single hardkey and the INITiate:IMM switched from continuous measurement to single measurement and restarted sweeps and averages (displayed average count reset to 1), but did not restart Max Hold and Min Hold. In the X-Series, the Single hardkey and the INITiate:IMM command initiate a sweep/ measurement/ average sequence/hold sequence including Max Hold and Min Hold.</p> <p>For Spectrum Analysis mode in ESA and PSA, the Single hardkey restarted the sweep regardless of whether or not you were in an active sweep or sweep sequence. In the X-Series, Restart does this but Single only restarts the sweep or sweep sequence if you are in the idle state.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3515

Single (Single Measurement/Sweep)

Source (Internal)

Opens a menu of keys that access various source configuration menus and settings. In the test set, pressing this key also causes the central view area to change and display the Source Control Main view.

Key Path:	Front-panel key
Help Map ID:	35360

RF Output

This parameter sets the source RF power output state.

Key Path:	Source
Remote Command:	:OUTPut [:EXTErnal] [:STATe] ON OFF 1 0 :OUTPut [:EXTErnal] [:STATe] ?
Example:	OUTP OFF OUTP?
Notes:	This setting is for the independent mode and has no effect on the “List Sequencer” on page 1145 . If the “Sequencer” on page 1146 is set to ON, the list sequencer controls the source output and this key will be grayed-out. And this setting will be none-forceful grey out on front panel to indicate out-of-scope. Non-forceful means user still can change this setting by SCPI but cannot change on front panel. When set to OFF will make source leave list sequencer and this setting will be black out and take effect immediately. When the RF Output is ON, an “RF” annunciator is displayed in the system settings panel. When the RF Output is turned Off, the RF annunciator is cleared. If the “Sequencer” on page 1146 is set to ON, the “RF” annunciator will be replaced by “SEQ” in the system settings panel, indicating that the output is controlled by the list sequencer.
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35361

Amplitude

Allows you to access the Amplitude sub-menu.

Key Path:	Source
-----------	---------------

Source (Internal)

Notes:	The sub-menu under this button is for independent mode and has no effect on “List Sequencer” on page 1145. If the “Sequencer” on page 1146 is set to ON, the list sequencer controls the source output and this key will be grayed-out on front panel to indicate out-of-scope. When you set “Sequencer” on page 1146 to Off will make source leave list sequencer and this button will be black out.
Initial S/W Revision:	A.05.00
Help Map ID:	35362

RF Power

Allows you to adjust the power level of the source using the numeric keypad, step keys, or RPG. Pressing any digit, 0 through 9, on the numeric keypad brings up the unit terminator.

Please refer to the “RF Power Range ” on page 1059 table below for the valid ranges.

Key Path:	Source, Amplitude
Remote Command:	:SOURce:POWer[:LEVel] [:IMMediate] [:AMPLitude] <ampl> :SOURce:POWer[:LEVel] [:IMMediate] [:AMPLitude] ?
Example:	SOUR:POW -100 dBm
Notes:	<p>Amplitude corrections can be specified for use with the source. In the event of amplitude corrections being applied, the valid ranges for the RF power do not change dependant on the current amplitude correction setting. If the combination of RF power + amplitude correction is higher or lower than the source output range, the Source Unleveled bit is set and the “Source Unleveled” indicator will appear on status panel to indicate that the source cannot maintain the output power that has been requested.</p> <p>When signal generator is unable to maintain the requested output level, the “Source Unleveled” indicator will appear on status panel. When the source output setting is restored to the normal range, the “Source Unleveled” is removed from status panel.</p> <p>Internal source has list sequence mode, which comprises of several steps which contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and user can use this command to change the list sequence last step’s output power.</p> <p>The multiport adapter RFIO TX ports and GPS ports cannot ensure power accuracy when power setting is lower than -130dBm, this power setting value is defined by the sum of RF Power setting and related amplitude correction value. But user settable value could be lower than this limit. When application detected there exists power setting lower than -130dBm on MPA RFIO TX ports, then popup warning message. When application detected there exists power setting lower than -130dBm on MPA GPS ports, then popup warning message. This is only warning message, and check is performed when RF is ON.</p>
Dependencies:	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values.

Preset:	-100 dBm
Min:	The range of values depends on the current frequency and selected RF output port. Please refer to the “RF Power Range ” on page 1059 table below for the valid ranges.
Max:	The range of values depends on the current frequency and selected RF output port. Please refer to the “RF Power Range ” on page 1059 table below for the valid ranges.
Initial S/W Revision:	A.05.00
Help Map ID:	35363

RF Power Range

RF Output Port	Frequency Range	Min Output Power	Max Output Power
High Power RF Out	10 MHz ≤ f ≤ 6 GHz	-130 dBm	20 dBm
RFIO 1 & RFIO 2	10 MHz ≤ f ≤ 6 GHz	-130 dBm	0 dBm

Set Reference Power

This key allows you to set the power reference. Pressing this key turns the power reference state to ON, sets the reference power value to the current RF output power, maintains this power at the RF output, and sets the displayed power to 0.00 dB. All subsequent RF power values entered under Source>Amplitude>RF Power are interpreted as being relative to this reference power.

When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under Source>Amplitude>RF Power as follows:

Output power = reference power entered power

Where:

reference power equals the original RF Power entered under Source>Amplitude>RF Power and set as the reference power

entered power equals a new value entered under Source>Amplitude>Amptd Offset

In addition, the displayed power value is the same as a new value entered under Source>Amplitude>RF Power.

NOTE

If Power Ref is set to ON with a reference value set, entering a value under Source>Amplitude>RF Power and pressing Set Reference Power will add that value to the existing Power Ref value.

If you wish to change the reference power value to a new value entered under Source>Amplitude>RF Power, first you must set Power Ref to OFF and then press Set Reference Power.

Source (Internal)

Key Path:	Source, Amplitude
Dependencies:	This key is unavailable, and is grayed out when the “List Sequencer” on page 1145 is turned ON.
Initial S/W Revision:	A.05.00
Help Map ID:	35364

Power Ref

This key allows you to toggle the state of the power reference.

When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under Source>Amplitude>RF Power as follows:

Output power = reference power + entered power

Where:

reference power equals the original RF Power entered under Source>Amplitude>RF Power and set as the reference power

entered power equals a new value entered under Source>Amplitude>Amptd Offset

For more information on Reference Frequency refer to “Set Reference Power ” on [page 1059](#)

Key Path:	Source, Amplitude
Remote Command:	:SOURce:POWer:REFerence <ampl> :SOURce:POWer:REFerence? :SOURce:POWer:REFerence:STATe OFF ON 0 1 :SOURce:POWer:REFerence:STATe?
Example:	SOUR:POW:REF 0.00 dBm SOUR:POW:REF:STATe ON
Dependencies:	This setting is unavailable and is grayed out when the “List Sequencer” on page 1145 is turned ON.
Couplings:	This value is coupled to the “Set Reference Power ” on page 1059 key such that pressing the Set Reference Power key updates the reference power with the current output power.
Preset:	0.00 dBm OFF
Min:	-125.00 dBm
Max:	10.00 dBm
Initial S/W Revision:	A.05.00

Help Map ID:

35365

Amptd Offset

Allows you to specify the RF output power offset value.

When the amplitude offset is set to zero (0) and you set a new offset value (positive or negative), the displayed amplitude value will change as follows and the RF output power will not change:

Displayed value = output power + offset value

Where:

output power equals the original RF Power entered under Source>Amplitude>RF Power

offset value equals the value entered under Source>Amplitude>Amptd Offset

When the amplitude offset is set to a value other than zero (0) and you enter a new RF power value under Source>Amplitude>RF Power, the displayed power will be the same as the value entered and the RF output power will be equal to the value entered minus the offset value as follows:

Output power = entered power – offset power

Displayed Power = output power + offset power

Displayed power = entered power

Where:

entered power equals the amplitude entered under Source>Amplitude>RF Power

offset power equals the value previously entered and set under Source>Amplitude>Amptd Offset

Key Path:	Source, Amplitude
Remote Command:	:SOURce:POWer[:LEVel][:IMMediate]:OFFSet <rel_ampl> :SOURce:POWer[:LEVel][:IMMediate]:OFFSet?
Example:	SOUR:POW:OFFS 0.00 dB
Dependencies:	This setting is unavailable, and is grayed out when the List Sequencer is turned ON.
Preset:	0.00 dB
Min:	-200.00 dB
Max:	200.00 dB
Initial S/W Revision:	A.05.00
Help Map ID:	35366

ALC

Allows you to enable or disable the automatic leveling control (ALC) circuit.

The purpose of the ALC circuit is to hold output power at a desired level by adjusting the source's power

Source (Internal)

circuits to compensate for power drift. Power drift occurs over time and changes in temperature.

Turning the ALC off disables the ALC circuitry, enabling you to measure the output at a specific point in a test setup and adjust as required for the desired power level at that point. Turning the ALC off is useful when the modulation consists of very narrow pulses that are below the pulse width specification of the ALC, or when the modulation consists of slow amplitude variations that the automatic leveling would remove.

Key Path:	Source, Amplitude
Remote Command:	:SOURce:POWer:ALC[:STATe] ON OFF 1 0 :SOURce:POWer:ALC[:STATe] ?
Example:	SOUR:POW:ALC OFF SOUR:POW:ALC?
Preset:	On
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35367

Modulation

Allows you to toggle the state of the modulation.

Key Path:	Source
Remote Command:	:OUTPut:MODulation[:STATe] ON OFF 1 0 :OUTPut:MODulation[:STATe] ?
Example:	:OUTP:MOD OFF
Notes:	This setting is for independent mode and has no effect on “List Sequencer” on page 1145 . If the “Sequencer” on page 1146 is set to ON, the list sequencer controls the source output and this key will be grayed-out. And this setting will be none-forceful grey out on front panel to indicate out-of-scope. Non-forceful means user still can change this setting by SCPI but cannot change manually on front panel. When set to Off will make source leave list sequencer and this setting will be black out and take effect immediately. When the Modulation is ON, the “MOD” annunciator is displayed in the system settings panel. When the Modulation is turned Off, the “MOD” annunciator is cleared. If the “Sequencer” on page 1146 is set to ON, the “MOD” annunciator will be replaced by “SEQ” in the system settings panel indicating that the output is controlled by list sequencer.
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00

Help Map ID:	35373
--------------	-------

Frequency

Allows you to access the Frequency sub-menu.

Key Path:	Source
Notes:	The sub-menu under this button is for independent mode and has no effect on “List Sequencer” on page 1145. If the “Sequencer” on page 1146 is set to ON, the list sequencer controls the source output and this key will be grayed-out. And this button will be grey out on front panel to indicate out-of-scope. When set to Off will make source leave list sequencer and this button will be black out.
Initial S/W Revision:	A.05.00
Help Map ID:	35374

Frequency

Allows you to set the RF Output Frequency. You can adjust the frequency of the source using the numeric keypad, step keys, or RPG. Pressing any digit, 0 through 9, on the numeric keypad brings up the unit terminator.

Key Path:	Source, Frequency
Remote Command:	:SOURce:FREQuency [:CW] <freq> :SOURce:FREQuency [:CW] ?
Example:	SOUR:FREQ 1.00 GHz
Notes:	Internal source has list sequence mode, which comprises of several steps which contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and user can use this command to change the list sequence last step’s output frequency.
Couplings:	The frequency value is coupled to the current channel band and number, such that updates to the band and number will update the frequency value to the corresponding absolute frequency.
Preset:	1.00 GHz
Min:	10.00 MHz
Max:	Hardware Dependant: Option 503 = 3.6 GHz Option 504 = 3.8 GHz
Initial S/W Revision:	A.05.00
Help Map ID:	35375

Source (Internal)

Channel

The frequency of the source can be specified by a channel number of a given frequency band. This key allows you to specify the current channel number. For the appropriate range of channel numbers for a given frequency band, refer to the following tables: “[GSM/EDGE Channel Number Ranges](#)” on page 1065, “[W-CDMA Channel Number Ranges](#)” on page 1065, “[CDMA 2000 / 1xEVDO Channel Number Ranges](#)” on page 1068, “[LTE FDD Channel Number Ranges](#)” on page 1070, “[LTE TDD Channel Number Ranges](#)” on page 1071, and “[TDSCDMA Channel Number Ranges](#)” on page 1072.

Key Path:	Source, Frequency
Remote Command:	:SOURce:FREQuency:CHANnels:NUMBer <int> :SOURce:FREQuency:CHANnels:NUMBer?
Example:	SOUR:FREQ:CHAN:NUMB 1
Notes:	This key is grayed out when the “ Radio Standard ” on page 1073 is set to NONE.
Dependencies:	This key is grayed out when the “ Radio Standard ” on page 1073 is set to NONE.
Couplings:	The channel number is coupled to the frequency value when the “ Radio Standard ” on page 1073 is not set to NONE. When the frequency value is changed, the channel number will increase or decrease to match the new frequency. If the frequency is not at an exact match for a channel number, the nearest channel number is displayed along with a greater than or less than sign to indicate the frequency is above or below the channel number.
Preset:	1
Min:	Please refer to the tables below for the valid ranges.
Max:	Please refer to the tables below for the valid ranges.
Initial S/W Revision:	A.05.00
Help Map ID:	35376

GSM/EDGE Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
P-GSM	Uplink (MS)	$1 \leq n \leq 124$	$890.0 + 0.2*n$
	Downlink (BS)	$1 \leq n \leq 124$	$935.0 + 0.2*n$
E-GSM	Uplink (MS)	$0 \leq n \leq 124$	$890.0 + 0.2*n$
		$975 \leq n \leq 1023$	$890.0 + 0.2*(n-1024)$
	Downlink (BS)	$0 \leq n \leq 124$	$935.0 + 0.2*n$
		$975 \leq n \leq 1023$	$935.0 + 0.2*(n-1024)$
DCS 1800	Uplink (MS)	$512 \leq n \leq 885$	$1710.200 + 0.20*(n-512)$
	Downlink (BS)	$512 \leq n \leq 885$	$1805.200 + 0.20*(n-512)$
PCS 1900	Uplink (MS)	$512 \leq n \leq 810$	$1850.200 + 0.2*(n-512)$
	Downlink (BS)	$512 \leq n \leq 810$	$1930.200 + 0.2*(n-512)$
R-GSM	Uplink (MS)	$0 \leq n \leq 124$	$890.0 + 0.2*n$
		$955 \leq n \leq 1023$	$890.0 + 0.2*(n-1024)$
	Downlink (BS)	$0 \leq n \leq 124$	$935.0 + 0.2*n$
		$955 \leq n \leq 1023$	$935.0 + 0.2*(n-1024)$
GSM 450	Uplink (MS)	$256 \leq n \leq 293$	$450.6 + 0.2*(n-259)$
	Downlink (BS)	$256 \leq n \leq 293$	$460.6 + 0.2*(n-259)$
GSM 480	Uplink (MS)	$306 \leq n \leq 340$	$479.000 + 0.20*(n-306)$
	Downlink (BS)	$306 \leq n \leq 340$	$489.000 + 0.20*(n-306)$
GSM 850	Uplink (MS)	$128 \leq n \leq 251$	$824.200 + 0.20*(n-128)$
	Downlink (BS)	$128 \leq n \leq 251$	$869.200 + 0.20*(n-128)$
GSM 700	Uplink (MS)	$438 \leq n \leq 516$	$777.200 + 0.20*(n-438)$
	Downlink (BS)	$438 \leq n \leq 516$	$747.200 + 0.20*(n-438)$
T-GSM810	Uplink (MS)	$350 \leq n \leq 425$	$806.0 + 0.20*(n-350)$
	Downlink (BS)	$350 \leq n \leq 425$	$851.0 + 0.20*(n-350)$

W-CDMA Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
Band I	Downlink	$10562 \leq n \leq 10838$	$n \div 5$
	Uplink	$9612 \leq n \leq 9888$	$n \div 5$

Source (Internal)

Band	Link (Device)	Range	Frequency (MHz)
Band II	Downlink	$412 \leq n \leq 687$ $9662 \leq n \leq 9938$	$n+5 + 1850.1$ $n+5$
	Uplink	$12 \leq n \leq 287$ $350 \leq n \leq 425$	$n+5 + 1850.1$ $n+5$
Band III	Downlink	$1162 \leq n \leq 1513$	$n+5 + 1575$
	Uplink	$937 \leq n \leq 1288$	$n+5 + 1525$
Band IV	Downlink	$537 \leq n \leq 1738$ $1887 \leq n \leq 2087$	$n+5 + 1805$ $n+5 + 1735.1$
	Uplink	$1312 \leq n \leq 1513$ $1662 \leq n \leq 1862$	$n+5 + 1450$ $n+5 + 1380.1$
Band V	Downlink	$1007 \leq n \leq 1087$ $4357 \leq n \leq 4458$	$n+5 + 670.1$ $n+5$
	Uplink	$782 \leq n \leq 862$ $4132 \leq n \leq 4233$	$n+5 + 670.1$ $n+5$
Band VI	Downlink	$1037 \leq n \leq 1062$ $4387 \leq n \leq 4413$	$n+5 + 670.1$ $n+5$
	Uplink	$812 \leq n \leq 837$ $4162 \leq n \leq 4188$	$n+5 + 670.1$ $n+5$
Band VII	Downlink	$2237 \leq n \leq 2563$ $2587 \leq n \leq 2912$	$n+5 + 2175$ $n+5 + 2105.1$
	Uplink	$2012 \leq n \leq 2338$ $2362 \leq n \leq 2687$	$n+5 + 2100$ $n+5 + 2030.1$
Band VIII	Downlink	$2937 \leq n \leq 3088$	$n+5 + 340$
	Uplink	$2712 \leq n \leq 2863$	$n+5 + 340$
Band IX	Downlink	$9237 \leq n \leq 9387$	$n+5$
	Uplink	$8762 \leq n \leq 8912$	$n+5$
Band X	Downlink	$3112 \leq n \leq 3388$ $3412 \leq n \leq 3687$	$n+5 + 1490$ $n+5 + 1430.1$
	Uplink	$2887 \leq n \leq 3163$ $3187 \leq n \leq 3462$	$n+5 + 1135$ $n+5 + 1075.1$

Band	Link (Device)	Range	Frequency (MHz)
Band XI	Downlink	$3712 \leq n \leq 3812$	$n+5 + 736$
	Uplink	$3487 \leq n \leq 3587$	$n+5 + 733$
Band XII	Downlink	$3837 \leq n \leq 3903$	$n+5 - 37$
		$3927 \leq n \leq 3992$	$n+5 - 54.9$
	Uplink	$3612 \leq n \leq 3678$	$n+5 - 22$
		$3702 \leq n \leq 3767$	$n+5 - 39.9$
Band XIII	Downlink	$4017 \leq n \leq 4043$	$n+5 - 55$
		$4067 \leq n \leq 4092$	$n+5 - 64.9$
	Uplink	$3792 \leq n \leq 3818$	$n+5 + 21$
		$3702 \leq n \leq 3767$	$n+5 - 39.9$
Band XIV	Downlink	$4117 \leq n \leq 4143$	$n+5 - 63$
		$4167 \leq n \leq 4192$	$n+5 - 72.9$
	Uplink	$3892 \leq n \leq 3918$	$n+5 + 12$
		$3942 \leq n \leq 3967$	$n+5 + 2.1$

CDMA 2000 / 1xEVDO Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
US Cellular	Uplink (MS, reverse link)	$1 \leq N \leq 799$	$0.030 \times N + 825.000$
		$991 \leq N \leq 1023$	$0.030 \times (N - 1023) + 825.000$
		$1024 \leq N \leq 1323$	$0.030 \times (N - 1024) + 815.040$
	Downlink (BS, forward link)	$1 \leq N \leq 799$	$0.030 \times N + 870.000$
US PCS	Downlink (BS, forward link)	$991 \leq N \leq 1023$	$0.030 \times (N - 1023) + 870.000$
		$1024 \leq N \leq 1323$	$0.030 \times (N - 1024) + 860.040$
US PCS	Uplink (MS, reverse link)	$0 \leq N \leq 1199$	$1850.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 1199$	$1930.000 + 0.050 \times N$
Japan Cellular Band	Uplink (MS, reverse link)	$1 \leq N \leq 799$	$0.0125 \times (N + 915.000)$
		$801 \leq N \leq 1039$	$0.0125 \times (N - 800) + 898.000$
		$1041 \leq N \leq 1199$	$0.0125 \times (N - 1040) + 887.000$
		$1201 \leq N \leq 1600$	$0.0125 \times (N - 1200) + 893.000$
	Downlink (BS, forward link)	$1 \leq N \leq 799$	$0.0125 \times (N + 860.000)$
		$801 \leq N \leq 1039$	$0.0125 \times (N - 800) + 843.000$
		$1041 \leq N \leq 1199$	$0.0125 \times (N - 1040) + 832.000$
		$1201 \leq N \leq 1600$	$0.0125 \times (N - 1200) + 838.000$
Korean PCS Band	Uplink (MS, reverse link)	$0 \leq N \leq 599$	$0.050 \times N + 1750.000$
	Downlink (BS, forward link)	$0 \leq N \leq 599$	$0.050 \times N + 1840.000$
NMT-450 Band	Uplink (MS, reverse link)	$1 \leq N \leq 400$	$0.025 \times (N - 1) + 450.000$
		$472 \leq N \leq 871$	$0.025 \times (N - 472) + 410.000$
		$1039 \leq N \leq 1473$	$0.020 \times (N - 1024) + 451.010$
		$1536 \leq N \leq 1715$	$0.025 \times (N - 1536) + 479.000$
		$1792 \leq N \leq 2016$	$0.020 \times (N - 1792) + 479.000$
	Downlink (BS, forward link)	$1 \leq N \leq 400$	$0.025 \times (N - 1) + 460.000$
		$472 \leq N \leq 871$	$0.025 \times (N - 472) + 420.000$
		$1039 \leq N \leq 1473$	$0.020 \times (N - 1024) + 461.010$
		$1536 \leq N \leq 1715$	$0.025 \times (N - 1536) + 489.000$
		$1792 \leq N \leq 2016$	$0.020 \times (N - 1792) + 489.000$

Band	Link (Device)	Range	Frequency (MHz)
IMT-2000 Band	Uplink (MS, reverse link)	$0 \leq N \leq 1199$	$1920.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 1199$	$2100.000 + 0.050 \times N$
Upper 700 MHz Band	Uplink (MS, reverse link)	$0 \leq N \leq 240$	$776.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 240$	$746.000 + 0.050 \times N$
Secondary 800 MHz Band	Uplink (MS, reverse link)	$0 \leq N \leq 719$ $720 \leq N \leq 919$	$0.025 \times N + 806.000$ $0.025 \times (N - 720) + 896.000$
	Downlink (BS, forward link)	$0 \leq N \leq 719$ $720 \leq N \leq 919$	$0.025 \times N + 851.000$ $0.025 \times (N - 720) + 935.000$
2.5 GHz IMT Extension	Uplink (MS, reverse link)	$0 \leq N \leq 1399$	$2500.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 1399$	$2620.000 + 0.050 \times N$
US PCS 1.9 GHz	Uplink (MS, reverse link)	$0 \leq N \leq 1299$	$1850.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 1299$	$1930.000 + 0.050 \times N$
AWS	Uplink (MS, reverse link)	$0 \leq N \leq 899$	$1710.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 899$	$2100.000 + 0.050 \times N$
US 2.5 GHz	Uplink (MS, reverse link)	$140 \leq N \leq 1459$	$2495.000 + 0.050 \times N$
	Downlink (BS, forward link)	$140 \leq N \leq 1459$	$2617.000 + 0.050 \times N$
700 Public Safety	Uplink (MS, reverse link)	$0 \leq N \leq 240$	$787.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 240$	$757.000 + 0.050 \times N$
C2K Lower 700	Uplink (MS, reverse link)	$0 \leq N \leq 360$	$698.000 + 0.050 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 360$	$728.000 + 0.050 \times N$

Source (Internal)

Band	Link (Device)	Range	Frequency (MHz)
400 Euro PAMR	Uplink (MS, reverse link)	$1 \leq N \leq 400$	$0.025 \times (N-1) + 450.000$
		$472 \leq N \leq 871$	$0.025 \times (N-472) + 410.000$
		$1536 \leq N \leq 1715$	$0.025 \times (N-1536) + 479.000$
	Downlink (BS, forward link)	$1 \leq N \leq 400$	$0.025 \times (N-1) + 460.000$
		$472 \leq N \leq 871$	$0.025 \times (N-472) + 420.000$
		$1536 \leq N \leq 1715$	$0.025 \times (N-1536) + 489.000$
800 PAMR	Uplink (MS, reverse link)	$0 \leq N \leq 239$	$870.0125 + 0.025 \times N$
	Downlink (BS, forward link)	$0 \leq N \leq 239$	$915.0125 + 0.025 \times N$

LTE FDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 – 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where F_{DL_low} and $N_{Offs-DL}$ are given in table 5.4.4–1 and N_{DL} is the downlink EARFCN.

$$F_{DL} = F_{DL_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where F_{UL_low} and $N_{Offs-UL}$ are given in table 5.4.4–1 and N_{UL} is the uplink EARFCN.

$$F_{UL} = F_{UL_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	F_{DL_low} (MHz)	$N_{Offs-DL}$	Range of N_{DL}	F_{UL_low} (MHz)	$N_{Offs-UL}$	Range of N_{UL}
1	2110	0	0 – 599	1920	18000	18000 – 18599
2	1930	600	600 - 1199	1850	18600	18600 – 19199
3	1805	1200	1200 – 1949	1710	19200	19200 – 19949
4	2110	1950	1950 – 2399	1710	19950	19950 – 20399
5	869	2400	2400 – 2649	824	20400	20400 – 20649
6	875	2650	2650 – 2749	830	20650	20650 – 20749

7	2620	2750	2750 – 3449	2500	20750	20750 – 20449
8	925	3450	3450 – 3799	880	21450	21450 – 21799
9	1844.9	3800	3800 – 4149	1749.9	21800	21800 – 22149
10	2110	4150	4150 – 4749	1710	22150	22150 – 22749
11	1475.9	4750	4750 – 4949	1427.9	22750	22750 – 22949
12	729	5010	5010 – 5179	699	23010	23010 – 23179
13	746	5180	5180 – 5279	777	23180	23180 – 23279
14	758	5280	5280 – 5379	788	23280	23280 – 23379
...						
17	734	5730	5730 – 5849	704	23730	23730 – 23849
18	860	5850	5850 – 5999	815	23850	23850 – 23999
19	875	6000	6000 – 6149	830	24000	24000 – 24149
20	791	6150	6150 – 6449	832	24150	24150 – 24449
21	1495.9	6450	6450 – 6599	1447.9	24450	24450 – 24599
...						
24	1525	7700	7700 – 8039	1626.5	25700	25700 – 26039
25	1930	8040	8040 – 8689	1850	26040	26040 – 26689
...						

Note: The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

LTE TDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 – 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where F_{DL_low} and $N_{Offs-DL}$ are given in table 5.4.4–1 and N_{DL} is the downlink EARFCN.

$$F_{DL} = F_{DL_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where F_{UL_low} and $N_{Offs-UL}$ are given in table 5.4.4–1 and N_{UL} is the uplink EARFCN.

Source (Internal)

$$F_{UL} = F_{UL_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	F _{DL_low} (MHz)	N _{Offs-DL}	Range of N _{DL}	F _{UL_low} (MHz)	N _{Offs-UL}	Range of N _{UL}
33	1900	36000	36000 – 36199	1900	36000	36000 – 36199
34	2010	36200	36200 – 36349	2010	36200	36200 – 36349
35	1850	36350	36350 – 36949	1850	36350	36350 – 36949
36	1930	36950	36950 – 37549	1930	36950	36950 – 37549
37	1910	37550	37550 – 37749	1910	37550	37550 – 37749
38	2570	37750	37750 – 38249	2570	37750	37750 – 38249
39	1880	38250	38250 – 38649	1880	38250	38250 – 38649
40	2300	38650	38650 – 39649	2300	38650	38650 – 39649
41	2496	39650	39650 – 41589	2496	39650	39650 – 41589
42	3400	41590	41590 – 43589	3400	41590	41590 – 43589
43	3600	43590	43590 – 45589	3600	43590	43590 – 45589

Note: The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

TDSCDMA Channel Number Ranges

1.28 Mcps TDD Option

No TX-RX frequency separation is required as Time Division Duplex (TDD) is employed. Each subframe consists of 7 main timeslots where all main timeslots (at least the first one) before the single switching point are allocated DL and all main timeslots (at least the last one) after the single switching point are allocated UL.

The nominal channel spacing is 1.6 MHz, but this can be adjusted to optimise performance in a particular deployment scenario.

The carrier frequency is designated by the UTRA absolute radio frequency channel number (UARFCN). The value of the UARFCN in the IMT2000 band is defined in the general case as follows:

$$N_t = 5 * F \quad 0.0 \text{ MHz} \leq F \leq 3276.6 \text{ MHz}$$

where F is the carrier frequency in MHz

Additional channels applicable to operation in the frequency band defined in sub-clause 5.2(d) are defined via the following UARFCN definition:

$$N_t = 5 * (F - 2150.1 \text{ MHz}) \quad 2572.5 \text{ MHz} \leq F \leq 2617.5 \text{ MHz}$$

UARFCN

1.28 Mcps TDD Option

The following UARFCN range shall be supported for each band:

Table: UTRA Absolute Radio Frequency Channel Number 1.28 Mcps TDD Option

Frequency Band	Frequency Range	UARFCN Uplink and Downlink transmission
For operation in frequency band as defined in subclause 5.2 (a)	1900–1920 MHz	9504 to 9596
	2010–2025 MHz	10054 to 10121
For operation in frequency band as defined in subclause 5.2 (b)	1850–1910 MHz	9254 to 9546
	1930–1990 MHz	9654 to 9946
For operation in frequency band as defined in subclause 5.2 (c)	1910–1930 MHz	9554 to 9646
For operation in frequency band as defined in subclause 5.2 (d)	2570–2620 MHz	12854 to 13096
For operation in frequency band as defined in subclause 5.2 (e)	2300–2400 MHz	11504 to 11996
For operation in frequency band as defined in subclause 5.2 (f)	1880–1920 MHz	9404 to 9596

Radio Setup

Allows access to the sub-menus for selecting the radio standard and associated radio band. You can also set a frequency reference and offset.

Key Path:	Source, Frequency
Initial S/W Revision:	A.05.00
Help Map ID:	35377

Radio Standard

Allows access to the channel band sub-menus to select the desired radio standard. When you have selected the radio standard, you can then set an active channel band. The radio standard and the active channel band allow you to use channel numbers to set frequency automatically.

Key Path:	Source, Frequency, Radio Setup
-----------	---------------------------------------

Source (Internal)

Remote Command:	:SOURce:FREQuency:CHANnels:BAND NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BAND4 BANDB BANDC BANDD BANDE BANDF :SOURce:FREQuency:CHANnels:BAND?
Example:	SOUR:FREQ:CHAN:BAND PGSM
Notes:	Set this setting to "NONE" will grey out "Channel" on page 1064 Channel
Initial S/W Revision:	A.05.00
Help Map ID:	35378

None

Selects no radio standard for use. When you have selected the radio standard to NONE, you cannot use channel numbers to set frequency automatically. You will need to set the frequency manually.

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35678

GSM/EDGE

Sets GSM/EDGE as the radio standard for use and accesses the GSM/EDGE specific channel band sub-menus.

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35379

P-GSM

Selects P-GSM as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND PGSM
Initial S/W Revision:	A.05.00
Help Map ID:	35380

E-GSM

Selects E-GSM as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND EGSM
Initial S/W Revision:	A.05.00
Help Map ID:	35381

R-GSM

Selects R-GSM as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND RGSM
Initial S/W Revision:	A.05.00
Help Map ID:	35382

DCS 1800

Selects DCS 1800 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND DCS1800
Initial S/W Revision:	A.05.00
Help Map ID:	35383

PCS 1900

Selects PCS 1900 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND PCS1900
Initial S/W Revision:	A.05.00
Help Map ID:	35384

GSM 450

Selects GSM 450 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND GSM450
Initial S/W Revision:	A.05.00

Source (Internal)

Help Map ID:	35386
--------------	-------

GSM 480

Selects GSM 480 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND GSM480
Initial S/W Revision:	A.05.00
Help Map ID:	35387

GSM 850

Selects GSM 850 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND GSM850
Initial S/W Revision:	A.05.00
Help Map ID:	35389

GSM 700

Selects GSM 700 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND GSM700
Initial S/W Revision:	A.05.00
Help Map ID:	35388

T-GSM 810

Selects T-GSM 810 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, GSM/EDGE
Example:	SOUR:FREQ:CHAN:BAND T-GSM810
Initial S/W Revision:	A.05.00
Help Map ID:	35385

WCDMA

Sets WCDMA as the radio standard for use and accesses the W-CDMA specific channel band sub-menus.

Key Path:	Source, Frequency, Radio Setup, Radio Standard
-----------	---

Initial S/W Revision:	A.05.00
Help Map ID:	35390

Band I

Selects Band I as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDI
Initial S/W Revision:	A.05.00
Help Map ID:	35391

Band II

Selects Band II as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDII
Initial S/W Revision:	A.05.00
Help Map ID:	35392

Band III

Selects Band III as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDIII
Initial S/W Revision:	A.05.00
Help Map ID:	35393

Band IV

Selects Band IV as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDIV
Initial S/W Revision:	A.05.00
Help Map ID:	35394

Source (Internal)

Band V

Selects Band V as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDV
Initial S/W Revision:	A.05.00
Help Map ID:	35395

Band VI

Selects Band VI as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDVI
Initial S/W Revision:	A.05.00
Help Map ID:	35396

Band VII

Selects Band VII as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDVII
Initial S/W Revision:	A.05.00
Help Map ID:	35397

Band VIII

Selects Band VIII as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDVIII
Initial S/W Revision:	A.05.00
Help Map ID:	35398

Band IX

Selects Band IX as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDIX
Initial S/W Revision:	A.05.00

Help Map ID:	35399
--------------	-------

Band X

Selects Band X as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDX
Initial S/W Revision:	A.05.00
Help Map ID:	35400

Band XI

Selects Band XI as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDXI
Initial S/W Revision:	A.05.00
Help Map ID:	35401

Band XII

Selects Band XII as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDXII
Initial S/W Revision:	A.05.00
Help Map ID:	35402

Band XIII

Selects band XIII as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDXIII
Initial S/W Revision:	A.05.00
Help Map ID:	35403

Band XIV

Selects Band XIV as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, WCDMA
-----------	--

Source (Internal)

Example:	SOUR:FREQ:CHAN:BAND BANDXIV
Initial S/W Revision:	A.05.00
Help Map ID:	35404

CDMA 2000 / 1xEVDO

Sets CDMA 2000 / 1XEVDO as the radio standard for use and accesses the CDMA 2000/1xEVDO specific channel band sub-menus.

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35405

US CELL

Selects US Cell as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND USCELL
Initial S/W Revision:	A.05.00
Help Map ID:	35406

US PCS

Selects US PCS as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND PCS
Initial S/W Revision:	A.05.00
Help Map ID:	35407

Japan Cell

Selects Japan Cell as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND JAPAN
Initial S/W Revision:	A.05.00
Help Map ID:	35408

Korean PCS

Selects Korean PCS as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND KOREAN
Initial S/W Revision:	A.05.00
Help Map ID:	35409

NMT 450

Selects NMT 450 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND NMT
Initial S/W Revision:	A.05.00
Help Map ID:	35410

IMT 2000

Selects IMT 2000 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND IMT2K
Initial S/W Revision:	A.05.00
Help Map ID:	35411

Upper 700

Selects Upper 700 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND UPPER
Initial S/W Revision:	A.05.00
Help Map ID:	35412

Secondary 800

Selects Secondary 800 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND SECOND
Initial S/W Revision:	A.05.00

Source (Internal)

Help Map ID:	35413
--------------	-------

400 Euro PAMR

Selects 400 Euro PAMR as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND PAMR400
Initial S/W Revision:	A.05.00
Help Map ID:	35414

800 PAMR

Selects 800 PAMR as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND PAMR800
Initial S/W Revision:	A.05.00
Help Map ID:	35415

2.5GHz IMT EXT

Selects 2.5 GHz IMT EXT as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND IMTEXT
Initial S/W Revision:	A.05.00
Help Map ID:	35416

US PCS 1.9GHz

Selects US PCS 1.9 GHz as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND PCS1DOT9G
Initial S/W Revision:	A.05.00
Help Map ID:	35417

AWS

Selects AWS as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
-----------	---

Example:	SOUR:FREQ:CHAN:BAND AWS
Initial S/W Revision:	A.05.00
Help Map ID:	35418

US 2.5GHz

Selects US 2.5 GHz as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND US2DOT5G
Initial S/W Revision:	A.05.00
Help Map ID:	35419

700 Public Safety

Selects 700 Public Safety as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND PUBLIC
Initial S/W Revision:	A.05.00
Help Map ID:	35420

C2K Lower 700

Selects C2K Lower 700 as the active channel band.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Example:	SOUR:FREQ:CHAN:BAND LOWER
Initial S/W Revision:	A.05.00
Help Map ID:	35421

LTE

Sets LTE FDD as the radio standard for use and accesses the LTE FDD specific channel band sub-menus..

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.09.50
Help Map ID:	35701

Source (Internal)

BAND 1

Selects BAND 1 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND1
Initial S/W Revision:	A.09.50
Help Map ID:	35702

BAND 2

Selects BAND 2 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND2
Initial S/W Revision:	A.09.50
Help Map ID:	35703

BAND 3

Selects BAND 3 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND3
Initial S/W Revision:	A.09.50
Help Map ID:	35704

BAND 4

Selects BAND 4 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND4
Initial S/W Revision:	A.09.50
Help Map ID:	35705

BAND 5

Selects BAND 5 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND5
Initial S/W Revision:	A.09.50

Help Map ID:	35706
--------------	-------

BAND 6

Selects BAND 6 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND6
Initial S/W Revision:	A.09.50
Help Map ID:	35707

BAND 7

Selects BAND 7 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND7
Initial S/W Revision:	A.09.50
Help Map ID:	35708

BAND 8

Selects BAND 8 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND8
Initial S/W Revision:	A.09.50
Help Map ID:	35709

BAND 9

Selects BAND 9 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND9
Initial S/W Revision:	A.09.50
Help Map ID:	35710

BAND 10

Selects BAND 10 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
-----------	--

Source (Internal)

Example:	SOUR:FREQ:CHAN:BAND BAND10
Initial S/W Revision:	A.09.50
Help Map ID:	35711

BAND 11

Selects BAND 11 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND11
Initial S/W Revision:	A.09.50
Help Map ID:	35712

BAND 12

Selects BAND 12 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND12
Initial S/W Revision:	A.09.50
Help Map ID:	35713

BAND 13

Selects BAND 13 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND13
Initial S/W Revision:	A.09.50
Help Map ID:	35714

BAND 14

Selects BAND 14 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND14
Initial S/W Revision:	A.09.50
Help Map ID:	35715

BAND 17

Selects BAND 17 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND17
Initial S/W Revision:	A.09.50
Help Map ID:	35716

BAND 18

Selects BAND 18 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND18
Initial S/W Revision:	A.09.50
Help Map ID:	35717

BAND 19

Selects BAND 19 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND19
Initial S/W Revision:	A.09.50
Help Map ID:	35718

BAND 20

Selects BAND 20 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND20
Initial S/W Revision:	A.09.50
Help Map ID:	35719

BAND 21

Selects BAND 21 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND21
Initial S/W Revision:	A.09.50

Source (Internal)

Help Map ID:	35720
--------------	-------

BAND 24

Selects BAND 24 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND24
Initial S/W Revision:	A.09.50
Help Map ID:	35721

BAND 25

Selects BAND 25 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE
Example:	SOUR:FREQ:CHAN:BAND BAND25
Initial S/W Revision:	A.09.50
Help Map ID:	35722

LTE TDD

Sets LTE TDD as the radio standard for use and accesses the LTE TDD specific channel band sub-menus..

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.11.50
Help Map ID:	35766

BAND 33

Selects BAND 33 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND33
Initial S/W Revision:	A.11.50
Help Map ID:	35767

BAND 34

Selects BAND 34 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND34

Initial S/W Revision:	A.11.50
Help Map ID:	35768

BAND 35

Selects BAND 35 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND35
Initial S/W Revision:	A.11.50
Help Map ID:	35769

BAND 36

Selects BAND 36 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND36
Initial S/W Revision:	A.11.50
Help Map ID:	35770

BAND 37

Selects BAND 37 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND37
Initial S/W Revision:	A.11.50
Help Map ID:	35771

BAND 38

Selects BAND 38 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND38
Initial S/W Revision:	A.11.50
Help Map ID:	35772

Source (Internal)

BAND 39

Selects BAND 39 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND39
Initial S/W Revision:	A.11.50
Help Map ID:	35773

BAND 40

Selects BAND 40 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND40
Initial S/W Revision:	A.11.50
Help Map ID:	35774

BAND 41

Selects BAND 41 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND41
Initial S/W Revision:	A.11.50
Help Map ID:	35775

BAND 42

Selects BAND 42 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND42
Initial S/W Revision:	A.11.50
Help Map ID:	35776

BAND 43

Selects BAND 43 as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, LTE TDD
Example:	SOUR:FREQ:CHAN:BAND BAND43
Initial S/W Revision:	A.11.50

Help Map ID:	35777
--------------	-------

TDSCDMA

Sets TDSCDMA as the radio standard for use and accesses the TDSCDMA specific channel band sub-menus..

Key Path:	Source, Frequency, Radio Setup, Radio Standard
Initial S/W Revision:	A.11.50
Help Map ID:	35778

BAND A

Selects BAND A as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDA
Initial S/W Revision:	A.11.50
Help Map ID:	35779

BAND B

Selects BAND B as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDB
Initial S/W Revision:	A.11.50
Help Map ID:	35780

BAND C

Selects BAND C as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDC
Initial S/W Revision:	A.11.50
Help Map ID:	35781

BAND D

Selects BAND D as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDD

Source (Internal)

Initial S/W Revision:	A.11.50
Help Map ID:	35782

BAND E

Selects BAND E as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDE
Initial S/W Revision:	A.11.50
Help Map ID:	35783

BAND F

Selects BAND F as the band for the current step.

Key Path:	Source, Frequency, Radio Setup, Radio Standard, TDSCDMA
Example:	SOUR:FREQ:CHAN:BAND BANDF
Initial S/W Revision:	A.11.50
Help Map ID:	35784

Radio Band Link

Allows you to specify the channel band type as either uplink or downlink link direction. This value is used in conjunction with the channel band and channel number to determine the absolute frequency output by the source. When set to “Uplink”, the source will calculate the uplink frequency using an uplink formula together with the selected channel band and channel number . When set to “Downlink”, the source will calculate the downlink frequency using a downlink formula together with the selected channel band and channel number.

Key Path:	Source, Frequency, Radio Setup
Remote Command:	:SOURce:RADio:BAND:LINK DOWN UP :SOURce:RADio:BAND:LINK?
Example:	SOUR:RAD:BAND:LINK UP
Preset:	DOWN
Range:	DOWN UP
Backwards Compatibility SCPI:	:SOURce:RADio:DEVice BTS MS :SOURce:RADio:DEVice?
Backwards Compatibility Notes:	BTS maps to the Downlink frequency MS maps to the Uplink frequency
Initial S/W Revision:	A.05.00

Help Map ID:

35422

Set Reference Frequency

This key allows you to set the frequency reference. Pressing this key turns the frequency reference state to ON, sets the reference frequency value to the current frequency, maintains this frequency at the RF output, and sets the displayed frequency to 0.00 Hz. All subsequent frequencies entered under Source>Frequency>Frequency are interpreted as being relative to this reference frequency.

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under Source>Frequency>Frequency as follows:

Output frequency = reference frequency - entered frequency

Where:

reference frequency equals the original RF frequency entered under Source>Frequency>Frequency and set as the reference frequency

entered frequency equals a new value entered under Source>Frequency>Frequency

In addition, the displayed frequency value will be the same as the value entered under Source>Frequency>Frequency.

NOTE

If Freq Reference is set to ON with a reference value set, entering a value under Source>Frequency>Frequency and pressing Set Frequency Reference will add that value to the existing Freq Reference value.

If you wish to change the reference frequency value to the new value entered under Source>Frequency>Frequency, first you must set Freq Reference to OFF and then press Set Frequency Reference.

Key Path:	Source, Frequency
Remote Command:	:SOURce:FREQuency:REFeRence:SET
Example:	SOUR:FREQ:REF:SET
Dependencies:	This setting is unavailable, and is grayed out when the List Sequencer is turned ON.
Initial S/W Revision:	A.05.00
Help Map ID:	35423

Freq Reference

This key allows you to toggle the state of the frequency reference. When the frequency reference state is ON, an annunciator is displayed on the main source view to indicate this state to the user.

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under Source>Frequency>Frequency as follows:

Source (Internal)

Output frequency = reference frequency + entered frequency

Where:

reference frequency equals the original RF frequency entered under Source>Frequency>Frequency and set as the reference frequency

entered frequency equals a new value entered under Source>Frequency>Frequency

For more information on Reference Frequency refer to [“Set Reference Frequency” on page 1093](#)

Key Path:	Source, Frequency
Remote Command:	:SOURce:FREQuency:REFerence <freq> :SOURce:FREQuency:REFerence? :SOURce:FREQuency:REFerence:STATe OFF ON 0 1 :SOURce:FREQuency:REFerence:STATe?
Example:	SOUR:FREQ:REF 0.00 Hz SOUR:FREQ:REF:STATe ON
Dependencies:	This setting is unavailable, and is grayed out when the List Sequencer is turned ON.
Couplings:	The frequency reference state is coupled to the frequency reference set immediate action. When the reference set immediate action key is pressed, or the SCPI command issued, it turns the frequency reference state ON.
Preset:	0.00 Hz OFF
Min:	0.00 Hz
Max:	Hardware Dependant: Option 503 = 3.6 GHz Option 504 = 3.8 GHz
Initial S/W Revision:	A.05.00
Help Map ID:	35424

Freq Offset

Allows you to specify the frequency offset value. When the frequency offset state is ON, an annunciator is displayed on the main source view to indicate this state to the user.

When the frequency offset is set to zero (0) and you set a new offset value, the displayed frequency value will change as follows and the RF output frequency will not change:

Displayed value = output frequency + offset value

Where:

output frequency equals the original frequency entered under Source>Frequency>Frequency

offset value equals the value entered under Source>Frequency>Freq Offset

When the frequency offset is set to a value other than zero (0) and you enter a new frequency value under Source>Frequency>Frequency, the displayed frequency will be the same as the value entered and the RF output frequency will be equal to the value entered minus the offset value as follows:

Output frequency = entered frequency – offset frequency

Displayed frequency = output frequency + offset frequency

Displayed frequency = entered frequency

Where:

entered frequency equals the frequency entered under Source>Frequency>Frequency

offset frequency equals the value previously entered and set under Source>Frequency>Freq Offset

Key Path:	Source, Frequency
Remote Command:	:SOURce:FREQuency:OFFSet <freq> :SOURce:FREQuency:OFFSet?
Example:	SOUR:FREQ:OFFS 0 Hz
Dependencies:	This setting is unavailable, and is grayed out when the List Sequencer is turned ON.
Preset:	0 Hz
Min:	-100.00 GHz
Max:	100.00 GHz
Initial S/W Revision:	A.05.00
Help Map ID:	35425

Modulation Setup

Allows access to the menus for setting up the available modulation types: [“ARB” on page 1095](#), [“AM” on page 1141](#), [“FM” on page 1142](#), and [“PM” on page 1143](#).

Key Path:	Source
Initial S/W Revision:	A.05.00
Help Map ID:	35428

ARB

Allows you access to the ARB sub-menus.

Key Path:	Source, Modulation Setup
Initial S/W Revision:	A.05.00

Source (Internal)

Help Map ID:	35429
--------------	-------

ARB

Allows you to toggle the state of the ARB function. When the ARB is On, a “MOD” annunciator is displayed in the system settings panel. When the ARB is turned Off, the MOD annunciator is cleared

Key Path:	Source, Modulation Setup, ARB
Remote Command:	:SOURCE:RADio:ARB[:STATE] ON OFF 1 0 :SOURCE:RADio:ARB[:STATE] ?
Example:	SOUR:RAD:ARB OFF SOUR:RAD:ARB?
Notes:	If the ARB is ON, a user then loads or deletes another file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.
Dependencies:	This setting is for independent mode and has no effect on 3.3.8 list sequencer mode. Setting 7.1Sequencer to On will put source enter list sequencer mode, and even if ARB state is On, the ARB file will not be played. Setting 7.1Sequencer to Off will make source leave list sequencer mode, and this setting will take effect immediately. The ARB can only be turned on when there is a waveform file selected for playback. On the GUI If no waveform is selected, this key is grayed out. If you send the SCPI command to turn the ARB on with no waveform selected for playback, the ARB state remains OFF and an error is generated. “- When you try to recall a certain set of states in which the selected waveform is not in ARB memory and the ARB state is On, errors are reported
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35430

Select Waveform

Allows you to access to the waveform selection sub-menus.

Pressing this key changes the central view area to show the Waveform File Selection view.

Key Path:	Source, Modulation Setup, ARB
Initial S/W Revision:	A.05.00
Help Map ID:	35431

Select Waveform

Allows you to select a waveform sequence or segment for the dual ARB to play.

Key Path:	Source, Modulation Setup, ARB, Select Waveform
Remote Command:	:SOURCE:RADio:ARB:WAVEform <string> :SOURCE:RADio:ARB:WAVEform?
Example:	SOUR:RAD:ARB:WAV "test_waveform.bin"
Notes:	<p><string> - specifies the name of the waveform segment or waveform sequence to be played by the ARB.</p> <p>When in Sequence Analyzer mode, and Include Source is Yes, if the you attempt to play a waveform sequence but not all the required waveform segments are in the ARB playback memory, the application will reject the loading operation with an error is generated .</p> <p>When Include Source is No, if you attempt to play a waveform sequence but not all the required waveform segments are contained in the ARB playback memory, the application will attempt to load the required segments from either the default directory of the current directory. If the ARB memory does not have enough space for all the waveform segments to be loaded, an error is generated and none of the waveform segments is loaded.</p> <p>If the ARB is ON, and you attampt to play a waveform sequence but not all the waveform segments within the sequence could be found to be loaded into ARB memory, an error is generated. The selected waveform keeps the previous value and ARB state remains On.</p> <p>If you specify a waveform segment over SCPI but the waveform segment is not present within ARB playback memory and cannot be found for auto loading within the current directory or the default directory, an error is generatedand the file selection remains unchanged.</p> <p>If you select a waveform for playback and the waveform requires a license that is not installed on the instrument, an error is generated.error is generated.</p> <p>If the ARB is ON and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.</p>
Initial S/W Revision:	A.05.00
Help Map ID:	35432

Segments on Hard Disk

Allows you access to the sub-menus for loading waveform segments from the hard disk into ARB memory. The default directory is: D:\nvarb.

Pressing this key changes the current view to the Waveform Management View.

Key Path:	Source, Modulation Setup, ARB, Select Waveform
Initial S/W Revision:	A.05.00

Help Map ID:

35433

Load Segment To ARB Memory

Allows you to load the selected file into ARB memory. On the front panel you select the file for loading to the ARB memory by highlighting the desired file in the list. Using the SCPI command, you specify the file name on the HDD.

“NVWFM” (non-volatile storage) MSUS (Mass Storage Unit Specifier) is supported in the memory subsystem because the ARB memory cannot be accessed directly. Therefore, files must be downloaded to the instrument hard disk and then loaded into the ARB memory. “NVWFM” MSUS will be mapped to the default directory D:\NVARB. The SCPI command supports using either “NVWFM” MSUS or specifying a full path. For more information, see [“Memory Subsystem \(Remote Command Only\)” on page 1191](#).

If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, you can either use Windows File Explorer, or the :MMEMory:COPI command.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments on Hard Disk
Remote Command:	:SOURce:RADio:ARB:LOAD <string>
Example:	SOUR:RAD:ARB:LOAD “D:\NVARB\testwaveform.bin” or SOUR:RAD:ARB:LOAD “NVWFM:testwaveform.bin”
Notes:	<p><string> - specifies the path name of the file to load from the HDD into ARB memory. It could be a <full path + filename>, or <“NVWFM” MSUS + colon + filename>.</p> <p>When in Sequence Analyzer mode, and Include Source is Yes, an attempt to load a file to ARB memory will be rejected with an error.</p> <p>When Include Source is No and if there is insufficient free ARB memory to load the selected waveform, an error is generated. .</p> <p>If you specify a file over SCPI, but the file is not at the specified location, an error is generated.</p> <p>If you try to load a waveform file but the file contains less than 500 IQ samples, an error is generated.</p> <p>If you try to load a Signal Studio waveform “*.wfm” which contains invalid waveform header, an error is generated.</p> <p>If the ARB is ON when you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.</p> <p>ARB can be loaded into ARB memory even required licenses do not present on the instrument. In this case, a GUI only warning message –800, “Operation complete; Loaded <filename> successfully, but no license <required licenses> installed”. User can install required licenses according to <required licenses> string to license it, or multi-pack license it.</p>

Initial S/W Revision:	A.05.00
Help Map ID:	35434

Load All To ARB Memory

Allows you to load all the segment files within the currently selected directory into ARB memory. If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, you can either use Windows File Explorer, or the :MEMory:COPI command.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments on Hard Disk
Remote Command:	:SOURce:RADio:ARB:LOAD:ALL <string>
Example:	SOUR:RAD:ARB:LOAD:ALL "D:\nvarb"
Notes:	<p><string> - specifies the directory on the HDD to load the files into ARB memory from.</p> <p>When in Sequence Analyzer mode, and Include Source is Yes, an attempt to load all files from a directory to ARB memory is rejected with an error.</p> <p>When Include Source is No and there is insufficient free ARB memory to load all the waveforms, when the ARB memory is full, the copy ceases, and an error is generated.</p> <p>If you specify a directory over SCPI, but the directory does not exist, an error is generated.</p> <p>If the ARB is ON, a user then loads or deletes file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.</p>
Initial S/W Revision:	A.05.00
Help Map ID:	35435

Change Directory...

Allows you to change the currently selected directory on the hard disk. Pressing this key opens a standard windows change directory dialog allowing you to select the new directory of interest.

The current directory is used for manually loading waveform segments into ARB memory for playback, and as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence or a list sequence.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments on Hard Disk
Notes:	No remote command, SCPIfront panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35436

Source (Internal)

Default Directory...

Allows you to change the default directory. It is used as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence, and as a search location for selecting waveforms using SCPI.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments on Hard Disk
Remote Command:	:SOURce:RADio:ARB:DEFault:DIRectory <string> :SOURce:RADio:ARB: DEFault:DIRectory?
Example:	SOUR:RAD:ARB:DEF:DIR "D:\ArbFiles" SOUR:RAD:ARB:DEF:DIR?
State Saved:	Persistent, survives a power cycle and a preset but not saved in the instrument state
Initial S/W Revision:	A.05.00
Help Map ID:	35437

Segments in ARB Memory

Allows you access to the sub-menus for managing the files within ARB memory.

Key Path:	Source, Modulation Setup, ARB, Select Waveform
Initial S/W Revision:	A.05.00
Help Map ID:	35438

Delete Segment From ARB Mem

Allows you to remove a segment from ARB playback memory.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments in ARB Memory
Remote Command:	:SOURce:RADio:ARB:DELete <string>
Example:	SOUR:RAD:ARB:DEL "testwaveform.bin"

Notes:	<p><string> - specifies the waveform to be deleted from the ARB playback memory.</p> <p>When in Sequence Analyzer mode and Include Source is Yes, an attempt to delete a file from ARB memory is rejected with an error.</p> <p>When Include Source is No and you specify a file that does not exist within ARB memory, an error is generated.</p> <p>It is possible to delete files from within the ARB memory when the ARB is ON. However, if you attempt to delete the file that is currently playing an error is generated.</p> <p>It is possible to delete a file from within the ARB memory when the sequencer state is ON and the file is not being used by the List Sequencer. If you attempt to delete a file which is being used by the list sequencer, an error is generated.</p> <p>When sequencer state is On, even if ARB state is On, the selected waveform will not be played. In this case, if the selected waveform is not used in List Sequence, it can be deleted and the ARB state is turned Off.</p> <p>If the ARB is ON and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.</p>
Initial S/W Revision:	A.05.00
Help Map ID:	35439

Delete All From ARB Memory

Allows you to remove all segments from ARB playback memory.

Key Path:	Source, Modulation Setup, ARB, Select Waveform, Segments in ARB Memory
Remote Command:	:SOURce:RADio:ARB:DELeTe:ALL
Example:	SOUR:RAD:ARB:DELeTe:ALL
Notes:	<p>When in Sequence Analyzer mode and Include Source is Yes, an attempt to delete all files from ARB memory is rejected with an error.</p> <p>When Include Source is No and you attempt to delete all files from ARB memory when the ARB is currently playing a file, all files except the one playing are deleted and an error is generated.</p> <p>If you attempt to delete all files from ARB memory when there are waveform files used in “List Sequencer” on page 1145 and “Sequencer” on page 1146 state is ON, all files except the files currently being used in list sequencer are deleted, and an error is generated.</p> <p>If the ARB is ON and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished.</p>
Initial S/W Revision:	A.05.00

Source (Internal)

Help Map ID:	35440
--------------	-------

Query ARB Memory File List (Remote Command Only)

Queries the test set for the list of waveform segments in the ARB memory.

NOTE This command returns a string for waveform segment names in ARB memory. If you want a string list of waveform segments in the ARB memory, use [“Query ARB Memory Full File List \(Remote Command Only\)”](#) on page 1102.

Remote Command:	:SOURce:RADio:ARB:CATalog?
Example:	SOUR:RAD:ARB:CATalog?
Notes:	The return data is in the following format: <integer> - memory used <integer> - memory free <string> ... - comma separated list of waveform segments within ARB memory
Initial S/W Revision:	A.05.00
Help Map ID:	35686

Query ARB Memory Full File List (Remote Command Only)

Queries the test set for the string list of waveform segments in the ARB memory. It returns a string list for waveform segment names in the ARB memory.

Remote Command:	:SOURce:RADio:ARB:FCATalog?
Example:	SOUR:RAD:ARB:FCATalog?
Notes:	The return data is in the following format: <integer> - memory used <integer> - memory free <integer> - file count in ARB memory <string>,<string>, ... <string> - comma separated string list of waveform segments within ARB memory Example: SOUR:RAD:ARB:FCAT? EXT returns: 27499,2069653,3,"c2k.wfm","gsm.wfm","wcdma.wfm"
Initial S/W Revision:	A.09.00
Help Map ID:	0

ARB Setup

Allows access to the ARB setup sub-menus.

Key Path:	Source, Modulation Setup, ARB
Initial S/W Revision:	A.05.00
Help Map ID:	35441

Sample Rate

Allows you to set the ARB waveform playback sample rate.

Key Path:	Source, Modulation Setup, ARB, ARB Setup
Remote Command:	:SOURce:RADio:ARB:SCLock:RATE <freq> :SOURce:RADio:ARB:SCLock:RATE?
Example:	SOUR:RAD:ARB:SCL:RATE 48.00 MHz
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The sample rate is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the sample rate is updated with the value from the header file. The sample rate will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	125.00 MHz
Min:	1.00 kHz
Max:	125.00 MHz
Initial S/W Revision:	A.05.00
Help Map ID:	35442

Run-Time Scaling

Allows you to adjust the run-time scaling value. The run-time scaling value is applied in real-time while the waveform is playing.

Key Path:	Source, Modulation Setup, ARB, ARB Setup
Remote Command:	:SOURce:RADio:ARB:RSCaling <real> :SOURce:RADio:ARB:RSCaling?
Example:	SOUR:RAD:ARB:RSC 100.00

Source (Internal)

Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The run-time scaling is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the run-time scaling is updated with the value from the header file. The run-time scaling will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	70.00 %
Min:	1.00 %
Max:	100.00 %
Initial S/W Revision:	A.05.00
Help Map ID:	35443

Baseband Freq Offset

Allows you to adjust the value by which the baseband frequency is offset relative to the carrier.

Key Path:	Source, Modulation Setup, ARB, ARB Setup
Remote Command:	:SOURce:RADio:ARB:BASeband:FREQUency:OFFSet <freq> :SOURce:RADio:ARB:BASeband:FREQUency:OFFSet?
Example:	SOUR:RAD:ARB:BAS:FREQ:OFFS 0.00 Hz
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The baseband frequency offset is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the baseband frequency offset is updated with the value from the header file. The baseband frequency offset will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	0.00 Hz
Min:	-50.00 MHz
Max:	50.00 MHz
Initial S/W Revision:	A.05.00
Help Map ID:	35444

Trigger Type

Allows access to the trigger type sub-menus. The setting for trigger type determines the behavior of the waveform when it plays.

Key Path:	Source, Modulation Setup, ARB
-----------	--------------------------------------

Remote Command:	:SOURce:RADio:ARB:TRIGger:TYPE CONTInuous SINGle SADVance GATE :SOURce:RADio:ARB:TRIGger:TYPE?
Example:	SOUR:RAD:ARB:TRIG:TYPE CONT SOUR:RAD:ARB:TRIG:TYPE?
Notes:	Gated trigger type will be implemented at a later release
Preset:	CONTInuous
Range:	Continuous Single Seg Adv Gated
Initial S/W Revision:	A.05.00
Help Map ID:	35454

Continuous

Sets the active trigger type to Continuous. If Continuous is already selected as the active trigger type, pressing this key allows access to the continuous trigger type setup menu. In Continuous trigger mode, the waveform repeats continuously.

Key Path:	Source, Modulation Setup, ARB, Trigger Type
Remote Command:	:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous [:TYPE] FREE TRIGger RESet :SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous [:TYPE] ?
Example:	SOUR:RAD:ARB:TRIG:TYPE:CONT FREE
Preset:	FREE
Range:	Free Run Trigger + Run Reset + Run
Initial S/W Revision:	A.05.00
Help Map ID:	35455

Free Run

Selects Free Run as the trigger response for the continuous trigger type. Free Run sets the waveform generator to play a waveform sequence or segment continuously, without waiting for a trigger. In this mode, the waveform generator does not respond to triggers.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Continuous
Example:	SOUR:RAD:ARB:TRIG:TYPE:CONT FREE
Initial S/W Revision:	A.05.00
Help Map ID:	35456

Trigger + Run

Sets Trigger and Run as the trigger response for the continuous trigger type. Trigger and Run sets the waveform

Source (Internal)

generator to play a waveform sequence or segment continuously when the first trigger is received, and to ignore any subsequent triggers.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Continuous
Example:	SOUR:RAD:ARB:TRIG:TYPE:CONT TRIG
Initial S/W Revision:	A.05.00
Help Map ID:	35457

Reset + Run

Sets Reset and Run as the trigger response for the continuous trigger type. Reset and Run sets the waveform generator to play a waveform sequence or segment continuously when the first trigger is received. Subsequent triggers reset the waveform sequence or segment to the start, and then play it continuously.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Continuous
Example:	SOUR:RAD:ARB:TRIG:TYPE:CONT RES
Initial S/W Revision:	A.05.00
Help Map ID:	35458

Single

Sets the active trigger type to Single. If Single is already selected as the active trigger type, pressing this key allows access to the single trigger type setup menu. In Single trigger mode, the waveform plays once.

Key Path:	Source, Modulation Setup, ARB, Trigger Type
Remote Command:	:SOURce:RADio:ARB:RETRigger ON OFF IMMediate :SOURce:RADio:ARB:RETRigger?
Example:	SOUR:RAD:ARB:RETR OFF
Notes:	ON: Buffered Trigger OFF: No Retrigger Immediate: Restart on Trigger This is defined as an enumerated SCPI command, with ON OFF being considered as enumerated types rather than Boolean. This means the query will return OFF instead of 0, and ON instead of 1.
Preset:	ON
Range:	No Retrigger Buffered Trigger Restart on Trigger
Initial S/W Revision:	A.05.00
Help Map ID:	35459

No Retrigger

Selects No Retrigger as the trigger response for single trigger type. No Retrigger sets the waveform generator to

play a waveform sequence or segment once when a trigger is received. Any triggers then received during playback are ignored.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Single
Example:	SOUR:RAD:ARB:RETR OFF
Initial S/W Revision:	A.05.00
Help Map ID:	35460

Buffered Trigger

Selects Buffered Trigger as the trigger response for single trigger type. Buffered Trigger sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator plays the sequence or segment to the end, then plays the sequence or segment once more.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Single
Example:	SOUR:RAD:ARB:RETR ON
Initial S/W Revision:	A.05.00
Help Map ID:	35461

Restart on Trigger

Selects Restart on Trigger as the trigger response for single trigger type. Restart on Trigger sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator resets and plays the sequence or segment from the start.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Single
Example:	SOUR:RAD:ARB:RETR IMM
Initial S/W Revision:	A.05.00
Help Map ID:	35462

Segment Advance

Sets the active trigger type to Segment Advance. If Segment Advance is already selected as the active trigger type, pressing this key allows access to the segment advance trigger type setup menu.

Segment Advance triggering allows you to control the playback of waveform segments within a waveform sequence. When a trigger is received the ARB advances to the next waveform segment within the waveform sequence. This type of triggering ignores the repetition count for the waveform segment within the waveform sequence. For example, if a waveform segment has a repetition count of 10 and you select single segment advance triggering mode, the waveform segment will only play once.

Segment Advance triggering can also be used for waveform segments only. In this situation the same waveform segment is played again when a trigger is received.

Key Path:	Source, Modulation Setup, ARB, Trigger Type
-----------	--

Source (Internal)

Remote Command:	:SOURce:RADio:ARB:TRIGger:TYPE:SADVance [:TYPE] SINGLE CONTinuous :SOURce:RADio:ARB:TRIGger:TYPE:SADVance [:TYPE] ?
Example:	SOUR:RAD:ARB:TRIG:TYPE:SADV SING
Preset:	CONTinuous
Range:	Single Continuous
Initial S/W Revision:	A.05.00
Help Map ID:	35463

Single

Selects Single as the trigger response for Segment Advance trigger type. With single selected, once a trigger is received a segment is played once. If a trigger is received during playback of a segment, the segment plays to completion and the next segment is played once.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Segment Advance
Example:	SOUR:RAD:ARB:TRIG:TYPE:SADV SING
Initial S/W Revision:	A.05.00
Help Map ID:	35464

Continuous

Selects Continuous as the trigger response for Segment Advance trigger type. With continuous selected, once a trigger is received a segment is played continuously. When subsequent triggers are received, the currently playing segment plays to completion and then the next segment is played continuously.

Key Path:	Source, Modulation Setup, ARB, Trigger Type, Segment Advance
Example:	SOUR:RAD:ARB:TRIG:TYPE:SADV CONT
Initial S/W Revision:	A.05.00
Help Map ID:	35465

Trigger Source

Allows access to the trigger source sub-menus. The trigger source setting determines how the source receives the trigger that starts the waveform playing. Therefore, this key is grayed out if the trigger type is free run, since free run triggers immediately with no trigger source required.

Key Path:	Source, Modulation Setup, ARB
Remote Command:	:SOURce:RADio:ARB:TRIGger [:SOURce] KEY BUS EXTErnal2 :SOURce:RADio:ARB:TRIGger [:SOURce] ?
Example:	SOUR:RAD:ARB:TRIGger KEY

Dependencies:	This key is grayed out if the current trigger type is Continuous, Free Run.
Preset:	EXTERNAL2
Range:	Trigger Key Bus External 2
Initial S/W Revision:	A.05.00
Help Map ID:	35469

Trigger Key

Sets the current trigger source to the front panel Trigger key. When Trigger Key is selected, the waveform is triggered when you press the front panel Trigger key.

Key Path:	Source, Modulation Setup, ARB, Trigger Source
Example:	SOUR:RAD:ARB:TRIGGER KEY
Initial S/W Revision:	A.05.00
Help Map ID:	35470

Bus

Sets the current trigger source to Bus. Selecting Bus trigger source enables triggering over GPIB, LAN, or USB using the :SOURCE:RADIO:ARB:TRIGGER:INITIATE command.

Key Path:	Source, Modulation Setup, ARB, Trigger Source
Example:	SOUR:RAD:ARB:TRIGGER BUS
Initial S/W Revision:	A.05.00
Help Map ID:	35471

External 2

Sets the current trigger source to External 2. Selecting External 2 enables triggering a waveform by an externally applied signal.

Key Path:	Source, Modulation Setup, ARB, Trigger Source
Example:	SOUR:RAD:ARB:TRIGGER EXT2
Initial S/W Revision:	A.05.00
Help Map ID:	35472

Trigger Initiate

Used to initiate an immediate trigger event if the trigger source is set to Trigger Key.

Key Path:	Source, Modulation Setup, ARB
Notes:	No remote command, SCPI front panel only.

Source (Internal)

Initial S/W Revision:	A.05.00
Help Map ID:	35475

Waveform Sequences

Allows access to the waveform sequence sub-menus. Pressing this key changes the central view area to display the Waveform Sequence List view.

Key Path:	Source, Modulation Setup, ARB
Notes:	No remote command, SCPI front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35476

Build New Sequence

Allows access to the sub-menus for creating a new waveform sequence. Pressing this key changes the central view area to display the Waveform Sequence Creation and Editing view.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences
Notes:	No remote command, SCPI front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35477

Current Segment

Specifies the selected sequence segment that will be affected by the menu functions.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence
Notes:	No remote command, SCPI front panel only. This key is grayed out and unavailable if the sequence is currently empty.
Initial S/W Revision:	A.05.00
Help Map ID:	35478

Insert New Waveform

Allows you access to the sub-menu for inserting a new waveform segment or sequence. Pressing this key also changes the central display to show the Waveform File Selection View.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence
-----------	--

Notes:	No remote command, SCPIfront panel only. Waveform segment name string length upper limit is 128 chars. Please do NOT insert waveform which name string exceeds 128 chars.
Initial S/W Revision:	A.05.00
Help Map ID:	35479

Insert Waveform

Inserts the currently highlighted waveform to the end of the waveform sequence. Pressing this key also returns you to the menus for creating or editing a sequence, and returns the central view to the sequence creation view.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform
Notes:	No remote command, SCPIfront panel only. Waveform segment NAME string length upper limit is 128 chars. Please do NOT insert waveform which name string exceeds 128 chars.
Initial S/W Revision:	A.05.00
Help Map ID:	35480

Segments on Hard Disk

This key functions the same as [Segments on Hard Disk@35433](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load Segment To ARB Memory

This key functions the same as [Load Segment To ARB Memory@35434](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load All To ARB Memory

This key functions the same as [Load All To ARB Memory@35435](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00

Source (Internal)

Help Map ID:	0
--------------	---

Change Directory ...

This key functions the same as [Change Directory...@35436](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Default Directory ...

This key functions the same as [Default Directory...@35437](#)

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Segments in ARB Memory

This key functions the same as [Segments in ARB Memory@35438](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete Segment From ARB Memory

This key functions the same as [Delete Segment From ARB Mem@35439](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete All From ARB Memory

This key functions the same as [Delete All From ARB Memory@35440](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Insert New Waveform, Segment in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Query ARB Memory File List (Remote Command Only)

This command functions the same as [Query ARB Memory File List \(Remote Command Only\)@35686](#).

Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Edit Selected Waveform

Allows access to the sub-menus for editing the details of the currently selected waveform segment.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35481

Repetitions

Allows you to specify the number of times the currently selected waveform is played within the sequence.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Edit Selected Waveform
Notes:	No remote command, SCPIfront panel only.
Preset:	1
Min:	1
Max:	65535
Initial S/W Revision:	A.05.00
Help Map ID:	35482

Marker 1

Allows you to enable or disable marker 1 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35483

Source (Internal)

Marker 2

Allows you to enable or disable marker 2 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35484

Marker 3

Allows you to enable or disable marker 3 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35485

Marker 4

Allows you to enable or disable marker 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35486

Delete Segment

Allows you to delete the selected segment from the waveform sequence.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35487

Save Sequence...

Pressing this key displays the “Save As” dialog. The sequence name is passed to the save as dialog to use as the filename for saving, and the directory the save as dialog will open into is the default waveform directory.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Build New Sequence
Initial S/W Revision:	A.05.00
Help Map ID:	35488

Build New Sequence (Remote Command Only)

This command is the SCPI equivalent of the waveform sequence creation features described in [“Build New Sequence” on page 1110](#).

This command writes a waveform sequence file to the hard disk. You must specify the waveform sequence file path and filename which will be saved on the hard disk, and the waveform segment file path and name which will be nested into the waveform sequence file. You can utilize mass storage unit specifier (MSUS) “NVWFM” or use a real full path representation. See the example below. MSUS “NVWFM” is mapped to D:\NVARB directory on test set hard disk.

Any number of segments, up to a segment count limit of 64, can be used to create a sequence. Repeated segments are included in the count limit.

Each waveform segment name string length upper limit is 128 chars. Please do NOT insert waveform which name string exceeds 128 chars.

The internal source does not support nesting one waveform sequence file into another waveform sequence file.

Remote Command:	<pre>:SOURce:RADio:ARB:SEQuence[:MWAVeform] <filename>, <waveform1>, <reps>, NONE M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M 1M2M4 M1M3M4 M2M3M4 M1M2M3M4 ALL, {<waveform2>, <reps>, NONE M1 M2 M3 M4 M1M2 M1M3 M1M4 M2M3 M2M4 M3M4 M1M2M3 M 1M2M4 M1M3M4 M2M3M4 M1M2M3M4 ALL, } ...</pre> <p>(For additional description of each item, see Notes below “For Setup SCPI” on page 1117“For Setup SCPI”.)</p> <pre>:SOURce:RADio:ARB:SEQuence[:MWAVeform]? <filename></pre> <p>(For additional description of each item, see Notes “For Query SCPI” on page 1118 below.)</p>
------------------------	--

Source (Internal)

Example:	<p>For setup:</p> <p>SOUR:RAD:ARB:SEQ "NVWFM:testSeq1.seq", "NVWFM:wfmSegment1.wfm",10, M2M3M4, "NVWFM:wfmSegment2.wfm", 20, M1M3</p> <p>Or</p> <p>SOUR:RAD:ARB:SEQ "D:\NVARB\testSeq1.seq", " D:\NVARB\wfmSegment1.wfm",10, M2M3M4, " D:\NVARB\wfmSegment2.wfm", 20, M1M3</p> <p>For query, must specify which waveform sequence file to query.</p> <p>SOUR:RAD:ARB:SEQ? "NVWFM:testSeq1.seq"</p> <p>Or</p> <p>SOUR:RAD:ARB:SEQ? "D:\NVARB\testSeq1.seq",</p>
----------	--

Notes:	<p>For Setup SCPI</p> <p>For the Setup SCPI command, the parameters are:</p> <p><filename> - String Type</p> <p>This variable specifies the path and name for the waveform sequence file. The path supports MSUS (NVWFM) or a real full path representation. See example.</p> <p><waveform1> - String Type</p> <p>This variable specifies the path and name of the first existing waveform segment. The path supports MSUS (NVWFM) or a real full path representation. See example.</p> <p>The segment file must reside within ARB playback memory before it can be played by the ARB player.</p> <p><reps> - Integer Type</p> <p>This variable specifies the number of times a segment or sequence plays before moving on to the next segment or sequence.</p> <p><marker> - Enum Type</p> <p>NONE – This choice disables all four markers for the waveform. Disabling markers means that the waveform sequence ignores the segments or sequence marker settings.</p> <p>M1, M2, M3, M4 – these choices, either individually or a combination of them, enable the markers for the waveform segment or sequence. Markers not specified are ignored for that segment or sequence.</p> <p>ALL – This choice enables all four markers in the waveform segment or sequence.</p> <p><waveform2> - String type.</p> <p>This variable specifies the name of a second existing waveform segment. The path supports MSUS (NVWFM) and real full path representation both. See example.</p> <p>The segment file must reside within ARB playback memory before it can be played by the ARB player.</p> <p><reps> same as above, for the 2nd waveform segment.</p> <p><marker> same as above, for the 2nd waveform segment.</p> <p>You can insert several waveform segments into a waveform sequence file. Just repeat inserting waveform segments as described above.</p> <p>Error Checks for Setup SCPI command:</p> <p>If you do not specify a filename, or you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform sequence file path, an error is generated.</p>
--------	--

Source (Internal)

Notes:	<p>Error Checks for Query SCPI command: (Continued)</p> <p>If the specified waveform sequence file name suffix is not “.seq”, error is generated.</p> <p>If you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform segment file path, an error is generated.</p> <p>If the first specified waveform file cannot be found, an error is generated.</p> <p>If you nest one waveform sequence file into another waveform sequence file, an error is generated.</p> <p>If the specified repetition value is larger than 65535 or smaller than 1, an error is generated.</p> <p>If the specified marker type is unrecognized, an error is generated.</p> <p>For Query SCPI</p> <p>For the Query the parameters are:</p> <p><filename> - String type.</p> <p>This variable specifies the path and name of the waveform sequence file being queried. The path supports MSUS (NVWFM) or a real full path representation. See example.</p> <p>The return value is a <string>, which includes each waveform segment file name, repetitions, and marker type. For example:</p> <p>SOUR:RAD:ARB:SEQ? “NVWFM:testSeq1.seq”,</p> <p><“wfmSegment1. wfm, 10, ALL, wfmSegment2.wfm, 20, M1M3”></p> <p>Error Checks for Query SCPI command:</p> <p>If you do not specify a filename, an error is generated.</p> <p>If the waveform sequence file name is empty, an error is generated.</p> <p>If the specified waveform sequence file cannot be found, an error is generated.</p>
Initial S/W Revision:	A.05.00
Help Map ID:	35687

Edit Selected Sequence

Allows access to the sub-menus for editing the sequence currently selected within the Waveform Sequence List view. Pressing this key changes the central view area to display the Waveform Sequence Creation and Editing view.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35489

Current Segment

Specifies the selected sequence segment that will be affected by the menu functions.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence
Notes:	No remote command, front panel only. This key is grayed out and unavailable if the sequence is currently empty.
Initial S/W Revision:	A.05.00
Help Map ID:	35490

Insert New Waveform

Allows you access to the sub-menu for inserting a new waveform segment or sequence. Pressing this key also changes the central display to show the Waveform File Selection View.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35491

Insert Waveform

Inserts the currently highlighted waveform to the end of the waveform sequence. Pressing this key also returns you to the menus for creating or editing a sequence, and returns the central view to the sequence creation view.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35492

Segments on Hard Disk

This key functions the same as section [Segments on Hard Disk@35433@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Source (Internal)

Load Segment To ARB Memory

This key functions the same as section [Load Segment To ARB Memory@35434@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments on Hard Disk
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load All To ARB Memory

This key functions the same as section [Load All To ARB Memory@35435@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments on Hard Disk
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Change Directory ...

This key functions the same as section [Change Directory...@35436@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments on Hard Disk
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Default Directory ...

This key functions the same as section [Default Directory...@35437@i](#)

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments on Hard Disk
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Segments in ARB Memory

This key functions the same as section [Segments in ARB Memory@35438@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete Segment From ARB Memory

This key functions the same as section [Delete Segment From ARB Mem@35439@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete All From ARB Memory

This key functions the same as section [Delete All From ARB Memory@35440@i](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Query ARB Memory File List (Remote Command Only)

This key functions the same as section Query [ARB Memory File List \(Remote Command Only\)@35686@i](#)

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Insert New Waveform, Segments in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Edit Selected Waveform

Allows access to the sub-menus for editing the details of the currently selected waveform segment.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35493

Repetitions

Allows you to specify the number of times the currently selected waveform is played within the sequence.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	1

Source (Internal)

Min:	1
Max:	TBD
Initial S/W Revision:	A.05.00
Help Map ID:	35494

Marker 1

Allows you to enable or disable marker 1 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35495

Marker 2

Allows you to enable or disable marker 2 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35496

Marker 3

Allows you to enable or disable marker 3 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled

Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35497

Marker 4

Allows you to enable or disable marker 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence but not for others.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence, Edit Selected Waveform
Notes:	No remote command, front panel only.
Preset:	Enabled
Range:	Enabled Disabled
Initial S/W Revision:	A.05.00
Help Map ID:	35498

Delete Segment

Allows you to delete the current segment from the waveform sequence.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35499

Save Sequence...

Pressing this key displays the “Save As” dialog box. The sequence name is passed to the save as dialog to use as the filename for saving, and the directory the save as dialog opens into is the default waveform directory.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences, Edit Selected Sequence
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35500

Current Directory...

Allows you to change the currently selected directory on the hard disk. Pressing this key opens a standard windows

Source (Internal)

change directory dialog and allows you to select the new directory of interest.

Key Path:	Source, Modulation Setup, ARB, Waveform Sequences
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35501

Waveform Utilities

Allows you access to the waveform utilities sub-menus.

Key Path:	Source, Modulation Setup, ARB
Initial S/W Revision:	A.05.00
Help Map ID:	35502

Multi-Pack Licenses

Allows you access to the Multi - Pack License sub-menus. Pressing this key also changes the central view area to display the Multi -Pack License Management view.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities
Dependencies:	This key is only available if there is at least one Multi-pack license installed on the instrument.
Initial S/W Revision:	A.05.00
Help Map ID:	35503

Add Waveform

Pressing this key accesses the Add Waveform sub-menu. It also changes the central display area to display the Multi-Pack License Waveform Add view.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses
Dependencies:	This key is only available if there is at least one slot available within at least one multi-pack license.
Initial S/W Revision:	A.05.00
Help Map ID:	35504

Add Waveform

Allows you to add the currently selected waveform segment to a multi-pack license. The new waveform is added to the next available slot regardless of which slot was selected on the Multi-Pack License Management view.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform
-----------	---

Remote Command:	:SYSTem:LKEY:WAVEform:ADD <string> or :SYSTem:LIcense[:FPACK]:WAVEform:ADD <string>
Example:	SYST:LKEY:WAV:ADD "mywaveform.wfm" or SYST:LIC:WAV:ADD "mywaveform.wfm"
Notes:	The second SCPI :SYSTem:LIcense[:FPACK]:WAVEform:ADD is provided to be consistent with the style of Agilent signal sources. You can use either one of them. Since adding a waveform segment to a Multi-Pack license causes the license slot to enter the trial period of only 48 hours, pressing this key causes a confirmation dialog to be displayed to ensure you do want to add the waveform segment to the Multi-Pack. If you attempt to license a waveform that is already licensed using another slot an error is generated.
Dependencies:	This key is only available if the currently selected file is a secure waveform requiring a license, and there is at least one slot available within at least one multi-pack license. If the waveform highlighted is a secure waveform, but is already licensed, this key will be unavailable.
Initial S/W Revision:	A.05.00
Help Map ID:	35659

Segments on Hard Disk

This key functions the same as [Segments on Hard Disk@35433](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load Segment To ARB Memory

This key functions the same as [Load Segment To ARB Memory@35434](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Source (Internal)

Load All To ARB Memory

This key functions the same as [Load All To ARB Memory@35435](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Change Directory ...

This key functions the same as [Change Directory...@35436](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Default Directory ...

This key functions the same as [Default Directory...@35437](#)

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Add Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Replace Waveform

Pressing this key accesses the Replace Waveform submenu. It also changes the central display area to display the Multi-Pack License Waveform Add view.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses
Dependencies:	This key is only available if the currently selected slot is in the trial state.
Initial S/W Revision:	A.05.00
Help Map ID:	35661

Replace Waveform

Allows you to replace the waveform in the currently selected slot with the waveform currently selected in the Multi-Pack License Waveform Add view.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform
-----------	---

Remote Command:	:SYSTem:LKEY:WAVEform:REPLace <int>, <string> or :SYSTem:LICense[:FPACK]:WAVEform:REPLace <int>,<string>
Example:	SYST:LKEY:WAV:REPL 1, "myotherwaveform.wfm" or :SYST:LIC:WAV:REPL 1, "myotherwaveform.wfm"
Notes:	The second SCPI :SYSTem:LICense[:FPACK]:WAVEform:REPLace is provided to be consistent with the style of Agilent signal sources. You can use either one of them. If you attempt to license a waveform that is already licensed using another slot an error is generated. Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive"
Initial S/W Revision:	A.05.00
Help Map ID:	35662

Segments on Hard Disk

This key functions the same as [Segments on Hard Disk@35433](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load Segment To ARB Memory

This key functions the same as [Load Segment To ARB Memory@35434](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load All To ARB Memory

This key functions the same as [Load All To ARB Memory@35435](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00

Source (Internal)

Help Map ID:	0
--------------	---

Change Directory ...

This key functions the same as [Change Directory...@35436](#).

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Default Directory ...

This key functions the same as [Default Directory...@35437](#)

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses, Replace Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Clear Waveform from Slot

Allows you to clear the waveform from the selected slot.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses
Remote Command:	:SYSTem:LKEY:WAVEform:CLEar <int> or :SYSTem:LIcense[:FPACK]:WAVEform:CLEar <int>
Example:	SYST:LKEY:WAV:CLE 1 or :SYST:LIC:WAV:CLE 1
Notes:	The second SCPI :SYSTem:LIcense[:FPACK]:WAVEform:CLEar is provided to be consistent with the style of Agilent signal sources. You can use either one of them. Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive"
Dependencies:	This key is only available if the currently selected slot is in the trial state.
Initial S/W Revision:	A.05.00
Help Map ID:	35664

Lock Waveform in Slot

If the selected slot is in the trial state or the lock required state, the waveform that occupies the slot is locked and

permanently licensed.

Key Path:	Source, Modulation Setup, ARB, Waveform Utilities, Multi-Pack Licenses
Remote Command:	:SYSTem:LKEY:WAVeform:LOCK <int> or :SYSTem:LICense[:FPACK]:WAVeform:LOCK <int>
Example:	SYST:LKEY:WAV:LOCK 1 or SYST:LIC:WAV:LOCK 1
Notes:	The second SCPI :SYSTem:LICense[:FPACK]:WAVeform:LOCK is provided to be consistent with the style of Agilent signal sources. You can use either one of them. Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive"
Dependencies:	This key is only available if the currently selected slot is in the trial state or the lock required state.
Initial S/W Revision:	A.05.00
Help Map ID:	35665

Slot Status Query (Remote Command Only)

Returns the status of the specified slot.

Remote Command:	:SYSTem:LKEY:WAVeform:STATus? <int> or :SYSTem:LICense[:FPACK]:WAVeform:STATus? <int>
Example:	:SYST:LKEY:WAV:STAT? 1 <"Locked" or :SYST:LIC:WAV:STAT? 1 <"Locked"
Notes:	The second SCPI :SYSTem:LICense[:FPACK]:WAVeform:STATus is provided to be consistent with the style of Agilent signal sources. You can use either one of them. Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive" Result type is string. If input slot number exceeds total available slot number, "Nonexistent" is returned.

Source (Internal)

Range:	"Locked" "Available" "Trail" "LockRequired" "Nonexistent"
Initial S/W Revision:	A.05.00
Help Map ID:	35688

Slots Free Query (Remote Command Only)

Returns the number of license slots free.

Remote Command:	:SYSTem:LKEY:WAVeform:FREE? or :SYSTem:LIcense[:FPACK]:WAVeform:FREE?
Example:	:SYST:LKEY:WAV:FREE? or :SYST:LIC:WAV:FREE?
Notes:	The second SCPI :SYSTem:LIcense[:FPACK]:WAVeform:FREE is provided to be consistent with the style of Agilent signal sources. You can use either one of them.
Initial S/W Revision:	A.05.00
Help Map ID:	35689

Slot Used Query (Remote Command Only)

Returns the number of license slots used.

Remote Command:	:SYSTem:LKEY:WAVeform:USED? or :SYSTem:LIcense[:FPACK]:WAVeform:USED?
Example:	:SYST:LKEY:WAV:USED? or :SYST:LIC:WAV:USED?
Notes:	The second SCPI :SYSTem:LIcense[:FPACK]:WAVeform:USED is provided to be consistent with the style of Agilent signal sources. You can use either one of them.
Initial S/W Revision:	A.05.00
Help Map ID:	35690

Slot Waveform Name Query (Remote Command Only)

Returns the waveform name of the specified slot

Remote Command:	:SYSTem:LKEY:WAVeform:NAME? <int> or :SYSTem:LIcense[:FPACK]:WAVeform:NAME? <int>
Example:	:SYST:LKEY:WAV:NAME? 1 <"CDMA2K_22.wfm" or :SYST:LIC:WAV:NAME? 1 <"CDMA2K_22.wfm"
Notes:	Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive". Result type is string. If input slot number exceeds total available slot number, "Nonexistent" is returned. If no waveform stored in the specified slot, then empty string is returned.
Initial S/W Revision:	A.12.00
Help Map ID:	0

Slot Waveform Unique ID Query (Remote Command Only)

Returns the waveform unique ID of the specified slot.

Remote Command:	:SYSTem:LKEY:WAVeform:UID? <int> or :SYSTem:LIcense[:FPACK]:WAVeform:UID? <int>
Example:	:SYST:LKEY:WAV:UID? 2 <"1346752140" or :SYST:LIC:WAV:UID? 2 <"1346752140"
Notes:	Waveform slot number <int> is positive. If you attempt to input a slot number less than or equals 0, an error is generated. "-220 Parameter error; License slot <n> is illegal, slot number must be positive". Result type is string. If input slot number exceeds total available slot number, "Nonexistent" is returned. Only Signal Studio waveform has unique ID, which is a positive number. (User generated waveform has no unique ID). If no waveform stored in the specified slot, then "0" is returned

Source (Internal)

Initial S/W Revision:	A.12.00
Help Map ID:	0

Locked Waveform Name List Query (Remote Command Only)

Returns the waveform name list of locked.

Remote Command:	:SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?
Example:	SOUR:RAD:ARB:MPL:NAME:LOCKed? <"CDMA2K_27.wfm","GSM_MCS1.WFM","c2kWfm.wfm"
Initial S/W Revision:	A.11.00
Help Map ID:	0

Locked Waveform Unique ID List Query (Remote Command Only)

Returns the waveform unique id list of locked.

Remote Command:	:SOURce:RADio:ARB:MPLicensed:UID:LOCKed?
Example:	SOUR:RAD:ARB:MPL:UID:LOCKed? <"2996927136","3812603511","3710986266"
Notes:	Each Signal Studio waveform has a unique id recorded in header. So if the unique ids are same, that means they are same one waveform. So besides SCPI to query locked waveform name list, also provide a SCPI to query locked waveform unique id list
Initial S/W Revision:	A.11.00
Help Map ID:	0

Marker Utilities

Allows access to the marker utilities sub-menus.

Key Path:	Source, Modulation Setup, ARB
Initial S/W Revision:	A.05.00
Help Map ID:	35505

Marker Polarity

Allows access to the marker polarity sub-menu, which allows you to specify the polarity for the four markers. For a positive polarity, the marker signal is high during the marker points. For a negative marker polarity, the marker signal is high during the period of no marker points.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities
Initial S/W Revision:	A.05.00

Help Map ID:	35506
--------------	-------

Mkr 1 Polarity

Allows you to set the polarity of marker 1.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Polarity
Remote Command:	:SOURce:RADio:ARB:MPOLarity:MARKer1 POSitive NEGative :SOURce:RADio:ARB:MPOLarity:MARKer1?
Example:	SOUR:RAD:ARB:MPOL:MARK1 NEG
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	Pos
Range:	Neg Pos
Initial S/W Revision:	A.05.00
Help Map ID:	35507

Mkr 2 Polarity

Allows you to set the polarity of marker 2.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Polarity
Remote Command:	:SOURce:RADio:ARB:MPOLarity:MARKer2 POSitive NEGative :SOURce:RADio:ARB:MPOLarity:MARKer2?
Example:	SOUR:RAD:ARB:MPOL:MARK2 NEG
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	Pos
Range:	Neg Pos
Initial S/W Revision:	A.05.00
Help Map ID:	35508

Source (Internal)

Mkr 3 Polarity

Allows you to set the polarity of marker 3.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Polarity
Remote Command:	:SOURce:RADio:ARB:MPOLarity:MARKer3 POSitive NEGative :SOURce:RADio:ARB:MPOLarity:MARKer3?
Example:	SOUR:RAD:ARB:MPOL:MARK3 NEG
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	Pos
Range:	Neg Pos
Initial S/W Revision:	A.05.00
Help Map ID:	35509

Mkr 4 Polarity

Allows you to set the polarity of marker 4.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Polarity
Remote Command:	:SOURce:RADio:ARB:MPOLarity:MARKer4 POSitive NEGative :SOURce:RADio:ARB:MPOLarity:MARKer4?
Example:	SOUR:RAD:ARB:MPOL:MARK4 NEG
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file.
Preset:	Pos
Range:	Neg Pos
Initial S/W Revision:	A.05.00
Help Map ID:	35510

Marker Routing

Allows access to the marker routing sub-menus, which allow you to specify where the marker events are routed. It

should be noted that the markers can also be routed to Trigger 1 Out and Trigger 2 Out, however this must be set up using the menus accessed by pressing the “Trigger” hard key.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities
Initial S/W Revision:	A.05.00
Help Map ID:	35511

Pulse/RF Blank

Allows you to select which marker is used for the pulse/RF blanking function. The pulse/RF blanking function blanks the RF when the marker signal goes low. The marker polarity determines when the marker signal is high. For a positive polarity, this is during the marker points. For a negative polarity, this is when there are no marker points.

Marker points should be set before using this function. Enabling this function without setting maker points may create a continuous low or high signal, dependant on the marker polarity. This causes either no RF output, or a continuous RF output.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing
Remote Command:	:SOURce:RADio:ARB:MDEStination:PULSe NONE M1 M2 M3 M4 :SOURce:RADio:ARB:MDEStination:PULSe?
Example:	SOUR:RAD:ARB:MDES:PULS NONE
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The pulse/RF blanking setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the pulse/RF blanking setting is updated with the value from the header file. The pulse/RF blanking setting will remain unchanged if the newly selected waveform does not have an associated header file.
Range:	None M1 M2 M3 M4
Initial S/W Revision:	A.05.00
Help Map ID:	35512

None

Sets no marker to be used for the pulse/RF blanking function, essentially turning the RF blanking function off.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, Pulse/RF Blank
Example:	SOUR:RAD:ARB:MDES:PULS NONE
Initial S/W Revision:	A.05.00
Help Map ID:	35513

Source (Internal)

Marker 1

Sets marker 1 to be used for the pulse/RF blanking function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, Pulse/RF Blank
Example:	SOUR:RAD:ARB:MDES:PULS M1
Initial S/W Revision:	A.05.00
Help Map ID:	35514

Marker 2

Sets marker 2 to be used for the pulse/RF blanking function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, Pulse/RF Blank
Example:	SOUR:RAD:ARB:MDES:PULS M2
Initial S/W Revision:	A.05.00
Help Map ID:	35515

Marker 3

Sets marker 3 to be used for the pulse/RF blanking function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, Pulse/RF Blank
Example:	SOUR:RAD:ARB:MDES:PULS M3
Initial S/W Revision:	A.05.00
Help Map ID:	35516

Marker 4

Sets marker 4 to be used for the pulse/RF blanking function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, Pulse/RF Blank
Example:	SOUR:RAD:ARB:MDES:PULS M4
Initial S/W Revision:	A.05.00
Help Map ID:	35517

ALC Hold

Allows you to specify which marker is routed for use within the ALC hold function. The ALC hold marker function holds the ALC circuitry at the average value of the sample points set by the marker.

The ALC hold function operates during the low periods of the marker signal. The marker polarity determines when

the marker signal is high. For positive polarity, this is during the marker points. For a negative polarity, this is when there are no marker points.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing
Remote Command:	:SOURCE:RADio:ARB:MDEStination:ALCHold NONE M1 M2 M3 M4 :SOURCE:RADio:ARB:MDEStination:ALCHold?
Example:	SOUR:RAD:ARB:MDES:ALCH NONE
Dependencies:	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The ALC hold setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the ALC hold setting is updated with the value from the header file. The ALC hold setting will remain unchanged if the newly selected waveform does not have an associated header file.
Range:	None M1 M2 M3 M4
Initial S/W Revision:	A.05.00
Help Map ID:	35518

None

Sets no marker to be used for the ALC hold function, essentially turning the ALC hold function off.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, ALC Hold
Example:	SOUR:RAD:ARB:MDES:PULS NONE
Initial S/W Revision:	A.05.00
Help Map ID:	35519

Marker 1

Sets marker 1 to be used for the ALC hold function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, ALC Hold
Example:	SOUR:RAD:ARB:MDES:PULS M1
Initial S/W Revision:	A.05.00
Help Map ID:	35520

Marker 2

Sets marker 2 to be used for the ALC hold function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, ALC Hold
-----------	--

Source (Internal)

Example:	SOUR:RAD:ARB:MDES:PULS M2
Initial S/W Revision:	A.05.00
Help Map ID:	35521

Marker 3

Sets marker 3 to be used for the ALC hold function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, ALC Hold
Example:	SOUR:RAD:ARB:MDES:PULS M3
Initial S/W Revision:	A.05.00
Help Map ID:	35522

Marker 4

Sets marker 4 to be used for the ALC hold function.

Key Path:	Source, Modulation Setup, ARB, Marker Utilities, Marker Routing, ALC Hold
Example:	SOUR:RAD:ARB:MDES:PULS M4
Initial S/W Revision:	A.05.00
Help Map ID:	35523

Header Utilities

Allows access to the header utilities sub-menu. Pressing this key also causes the central display area to change to display the File Header Information view.

Key Path:	Source, Modulation Setup, ARB
Dependencies:	This key is only available if there is currently a waveform selected for playback. If no waveform is selected, the key is grayed out.
Initial S/W Revision:	A.05.00
Help Map ID:	35536

Clear Header

Allows you to clear the header information from the file header associated with the currently selected waveform.

Key Path:	Source, Modulation Setup, ARB, Header Utilities
Remote Command:	:SOURce:RADio:ARB:HEADer:CLEar
Example:	SOUR:RAD:ARB:HEAD:CLE

Notes:	Attempting to clear the header details via SCPI when no waveform was selected for playback will generate an error.
Initial S/W Revision:	A.05.00
Help Map ID:	35537

Save Setup To Header

Allows you to save new file header information details to the file.

Key Path:	Source, Modulation Setup, ARB, Header Utilities
Remote Command:	:SOURce:RADio:ARB:HEADer:SAVE
Example:	SOUR:RAD:ARB:HEAD:SAVE
Notes:	Attempting to save the header details via SCPI when no waveform was selected for playback will generate an error.
Initial S/W Revision:	A.05.00
Help Map ID:	35538

Query Waveform Unique ID (Remote Command Only)

Each Signal Studio waveform contains a unique waveform ID, which recorded in the header. This command allows you to query the unique waveform ID from the header. This is a SCPI only command.

Remote Command:	:MMEMory:HEADer:ID? "<file name>"
Example:	:MMEM:HEAD:ID? "test.wfm" (query the waveform already loaded into the ARB memory) :MMEM:HEAD:ID? "D:\NVARB\test.wfm" (query the waveform on the hard disk by absolute path) :MMEM:HEAD:ID? "NVWFM:test.wfm" (query the waveform on the hard disk by MSUS)
Notes:	SCPI query only. The queried waveform file can be in ARB memory, or on hard disk. If want to query ARB in ARB memory, then give out the file name directly. If want to query ARB on the hard disk, then absolute file path or MSUS should be given along with the file name. The valid MSUS is "NVWFM" which is mapped to D:\NVARB on hard disk. If the file cannot be found in ARB memory or on hard disk, an error is generated and value -1 is returned
Initial S/W Revision:	A.09.00
Help Map ID:	0

Source (Internal)

Query Selected Waveform Header info (Remote Command Only)

This query provides a listing of the current selected ARB header info. If no ARB selected, then empty string is returned..

Remote Command:	:SOURce:RADio:ARB:HEADer:INFormation?
Example:	SOUR:RAD:ARB:HEAD:INF?
Notes:	<p>Query only</p> <p>After each colon of field title string, related header info string will be appended.</p> <p>The field title string in "Range" part cannot change, for Sequence Studio needs to accurately match those string character to know which header info field it is.</p> <p>Below are related abbreviation description:</p> <p>"DESC" - Description</p> <p>"SR" - Sample Rate</p> <p>"RTS" - Run Time Scaling</p> <p>"RMS" - Root Mean Square</p> <p>"M1P" - Marker 1 Polarity</p> <p>"M2P" - Marker 2 Polarity</p> <p>"M3P" - Marker 3 Polarity</p> <p>"M4P" - Marker 4 Polarity</p> <p>"ALCHR" - ALC Hold Routing</p> <p>"RFBR" - RF Blank Routing</p> <p>"FOFF" - Frequency Offset</p> <p>"AWGNST" - AWGN State</p> <p>"AWGNCN" - AWGN C/N Ratio</p> <p>"AWGNCBW" - AWGN Carrier Bandwidth</p> <p>"AWGNNBW" - AWGN Noise Bandwidth</p> <p>"AWGNCRMS" - AWGN Carrier RMS</p> <p>"ORP" - DAC Over Range Protection</p> <p>"UID" - Unique ID</p> <p>"LICSTS" - License Status</p>
Range:	"DESC:", "SR:", "RTS:", "RMS:", "M1P:", "M2P:", "M3P:", "M4P:", "ALCHR:", "RFBR:", "FOFF:", "AWGNST:", "AWGNCN:", "AWGNCBW:", "AWGNNBW:", "AWGNCRMS:", "ORP:", "UID:", "LICSTS"
Initial S/W Revision:	A.12.00

Help Map ID:	0
--------------	---

Bus Trigger Command (Remote Command Only)

Used to initiate an immediate trigger event if the trigger source is set to Bus.

Remote Command:	:SOURce:RADio:ARB:TRIGger:INITiate
Example:	SOUR:RAD:ARB:TRIG:INIT
Initial S/W Revision:	A.05.00
Help Map ID:	35691

AM

Allows access to the menu for configuring the Amplitude Modulation.

Key Path:	Source, Modulation Setup
Initial S/W Revision:	A.05.00
Help Map ID:	35539

AM

Enables or disables the amplitude modulation.

Turning AM on when another modulation format is already on results in the previous modulation format being turned off and the generation of an error.

Key Path:	Source, Modulation Setup, AM
Remote Command:	:SOURce:AM:STATe :SOURce:AM:STATe?
Example:	SOUR:AM:STAT OFF
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35540

AM Depth

Allows you to set the amplitude modulation depth in percent.

Key Path:	Source, Modulation Setup, AM
Remote Command:	:SOURce:AM[:DEPTh] [:LINear] :SOURce:AM[:DEPTh] [:LINear] ?

Source (Internal)

Example:	SOUR:AM 0.1
Preset:	0.1 %
Min:	0.1 %
Max:	95.0 %
Initial S/W Revision:	A.05.00
Help Map ID:	35541

AM Rate

Allows you to set the internal amplitude modulation rate.

Key Path:	Source, Modulation Setup, AM
Remote Command:	:SOURce:AM:INTernal:FREQuency :SOURce:AM:INTernal:FREQuency?
Example:	SOUR:AM:INT:FREQ 40.0 Hz
Preset:	400.0 Hz
Min:	10 Hz
Max:	40 kHz
Initial S/W Revision:	A.05.00
Help Map ID:	35542

FM

Allows access to the menu for configuring the frequency modulation.

Key Path:	Source, Modulation Setup
Initial S/W Revision:	A.05.00
Help Map ID:	35543

FM

Enables or disables the frequency modulation.

Turning FM on when another modulation format is already on results in the previous modulation format being turned off and the generation of an error.

Key Path:	Source, Modulation Setup, FM
Remote Command:	:SOURce:FM:STATe :SOURce:FM:STATe?
Example:	SOUR:FM:STAT OFF

Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35544

FM Deviation

Allows you to set the frequency modulation deviation.

Key Path:	Source, Modulation Setup, FM
Remote Command:	:SOURce:FM[:DEVIation] :SOURce:FM[:DEVIation]?
Example:	SOUR:FM 1.00 kHz
Preset:	1.00 Hz
Min:	1.00 Hz
Max:	100.00 kHz
Initial S/W Revision:	A.05.00
Help Map ID:	35545

FM Rate

Allows you to set the internal frequency modulation rate.

Key Path:	Source, Modulation Setup, FM
Remote Command:	:SOURce:FM:INTernal:FREQuency :SOURce:FM:INTernal:FREQuency?
Example:	SOUR:FM:INT:FREQ 40.0 Hz
Preset:	400.0 Hz
Min:	10 Hz
Max:	40 kHz
Initial S/W Revision:	A.05.00
Help Map ID:	35546

PM

Allows access to the menu for configuring the phase modulation.

Key Path:	Source, Modulation Setup
-----------	---------------------------------

Source (Internal)

Initial S/W Revision:	A.05.00
Help Map ID:	35547

PM

Enables or disables the phase modulation.

Turning PM on when another modulation format is already on results in the previous modulation format being turned off and the generation of an error.

Key Path:	Source, Modulation Setup, PM
Remote Command:	:SOURce:PM:STATe :SOURce:PM:STATe?
Example:	SOUR:PM:STAT OFF
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35548

PM Deviation

Allows you to set the phase modulation deviation.

Key Path:	Source, Modulation Setup, PM
Remote Command:	:SOURce:PM[:DEVIation] :SOURce:PM[:DEVIation]?
Example:	SOUR:PM 1.00 rad
Preset:	0.1 rad
Min:	0.1 rad
Max:	20.0 rad
Initial S/W Revision:	A.05.00
Help Map ID:	35549

PM Rate

Allows you to set the internal phase modulation rate.

Key Path:	Source, Modulation Setup, PM
Remote Command:	:SOURce:PM:INTernal:FREQuency :SOURce:PM:INTernal:FREQuency?

Example:	SOUR:PM:INT:FREQ 40.0 Hz
Preset:	400.0 Hz
Min:	10 Hz
Max:	40 kHz
Initial S/W Revision:	A.05.00
Help Map ID:	35550

Multiport Adapter Output Port Amplitude Correction Configuration Validation (Remote Command Only)

This command is used to validate MPA TX port amplitude correction for Source MXG Mode.

Key Path:	Remote Command Only
Remote Command:	:SOURce:RADio:MPADapter:CORRection:ERRor?
Example:	SOUR:RAD:MPAD:CORR:ERR?
Note	<p>Query Only SCPI</p> <p>Remote command only</p> <p>If detected invalid configuration, popup error message</p> <p>"-221 Settings conflict; MPA TX port<n> amplitude correction value <n>dB is out of range. The valid range is <n> ~ <n>dB"</p> <p>Or</p> <p>"-221 Settings conflict; MPA TX port<n> amplitude correction delta exceeds <n>dB between port<n> and port<n>"</p> <p>to report the first detected conflict.</p>
Range:	"No error" Error info of the first found conflic
Initial S/W Revision:	A.12.00
Help Map ID:	0

List Sequencer

Allows you access to the sub-menus for configuring the list sequencer.

List sequences allows you to enter frequencies and amplitudes at unequal intervals in nonlinear ascending, descending or random order. Each step within the list can also include its own waveform file for playback, step duration, trigger event and trigger output.

The complexities involved in configuring the list sequencer do not lend itself to manual configuration; hence the manual configuration for this feature is limited. For easier configuration of the list sequencer, it is recommended that you use either SCPI or load a tab delimited file containing the setup parameters in a tabular form. The details of the SCPI for configuring the list sequencer can be found in ["Step](#)

Source (Internal)

Configuration (Remote Command Only)” on page 1179.

Once the List Sequencer has been configured using the front panel, SCPI, or loading in a tab delimited file, the sequence must be initiated using the front panel Initiate Sequence key or the corresponding SCPI command.

Key Path:	Source
Initial S/W Revision:	A.05.00
Help Map ID:	35551

Sequencer

Allows you to set the state of the list sequencer. When the list sequencer is on, the source is outputting the sequence defined by the sequencer. When the list sequencer is off, the source outputs a single waveform segment or sequence (independent mode) at a single frequency and amplitude.

Key Path:	Source, List Sequencer
Remote Command:	:SOURce:LIST[:STATe] ON OFF 1 0 :SOURce:LIST[:STATe] ?
Example:	SOUR:LIST OFF
Notes:	When the sequencer is set to ON, the list sequencer controls the output of the source.
Couplings:	When in Sequence Analyzer mode and the list sequencer state is Off, Include Source is forced to No, and the Include Source key is grayed out. When in Sequence Analyzer mode and the list sequencer state is On, Include Source is available to set. And, an ARB memory related operation, like load or delete will be rejected.
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35552

Initiate Sequence

Pressing this key arms the sequence for single execution. Once the sequence is armed the source begins the sequence as soon as the trigger is received. If the trigger is set to Free Run, the sequence starts immediately.

Key Path:	Source, List Sequencer
Remote Command:	:SOURce:LIST:TRIGger[:IMMediate]
Example:	SOUR:LIST:TRIG

Notes:	<p>When in Sequence Analyzer mode and Include Source is Yes, the Initiate list sequencer operation is rejected, and the key is grayed out, since source list sequence request is sent to physics via Parallel batch by sequence analyzer.</p> <p>If the file needed by the sequencer is not already in ARB memory, the sequence cannot be initiated and an error will be generated.</p> <p>There is a blocking SCPI query which can be used to query if source list sequence being initiated successfully or not. (see “Query List Sequence Initiation Armed Status (Remote Command Only)” on page 1189 Query Source List Sequence Armed Status)</p>
Dependencies:	Under the Sequence Analyzer Mode, if Meas Setup->Include Source is set to YES, Source->List Sequencer->Initiate Sequence is disabled.
Initial S/W Revision:	A.05.00
Help Map ID:	35554

Remote Software Trigger (Remote command Only)

During execution of a list sequence, the sequence will halt and wait at any step that has Step Trigger set to “Bus”. Sending this command will trigger the step and continue the sequence.

Remote Command:	:SOURce:LIST:TRIGger:INITiate[:IMMediate]
Example:	SOUR:LIST:TRIG:INIT
Initial S/W Revision:	A.05.00
Help Map ID:	35679

List Sequencer Setup

Allows you access to the list sequencer setup menus.

Key Path:	Source, List Sequencer
Help Map ID:	35555

Number of Steps

Allows you to specify the number of steps within the list sequence.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURce:LIST:NUMBer:STEPs <integer> :SOURce:LIST:NUMBer:STEPs?
Example:	SOUR:LIST:NUMB:STEP 1

Source (Internal)

Notes:	Increasing the number of steps creates additional steps at the end of the list, with all the settings within the steps set to their default values. Decreasing the number of steps removes steps from the end of the list. The settings within the removed steps are not reset. This means that increasing the number of steps again would allow you to retrieve these steps.
Dependencies:	The Step Count parameter is increased or decreased when you insert or delete a point from within the GUI interface to the sequencer.
Preset:	1
Min:	1
Max:	1000
Initial S/W Revision:	A.05.00
Help Map ID:	35556

Current Step

Allows you to select the step number you wish to view or edit.

Key Path:	Source, List Sequencer, List Sequencer Setup
Notes:	No remote command, front panel only.
Preset:	1
Min:	1
Max:	Step Count
Initial S/W Revision:	A.05.00
Help Map ID:	35557

Insert Step Before

Allows you to insert a new step, containing default values, before the currently selected step. Inserting a step will automatically increase the Step Count parameter by 1. If sequence already reaches upper limit of 1000 steps, then insert more step will be rejected and popup error –221, “Setting Conflict; Cannot insert more steps, maximum number of steps reached”

Key Path:	Source, List Sequencer, List Sequencer Setup
Notes:	No remote command, front panel only. If the list already contains the maximum limit of 1000 steps, no operation will be made after pressing this key.
Initial S/W Revision:	A.05.00
Help Map ID:	35558

Delete Step

Allows you to delete the current step. Deleting a step will automatically decrease the Step Count parameter by 1. If sequence only has one step left, delete step will be rejected and popup error –221, “Setting conflict; Cannot delete current step, minimum number of steps reached”

Key Path:	Source, List Sequencer, List Sequencer Setup
Notes:	No remote command, Front Panel key only. If the list already contains the minimum limit of 1 step, no operation will be made after pressing this key
Initial S/W Revision:	A.05.00
Help Map ID:	35559

Clear List

Allows you to clear the list. Clearing the list sets the number of steps to the default value of 1 and sets the parameters for the only step to their default values.

Key Path:	Source, List Sequencer, List Sequencer Setup
Initial S/W Revision:	A.05.00
Help Map ID:	35560

Step Trigger

Allows access to the sub-menu for selecting the trigger input for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:INPut:TRIGger IMMediate INTernal EXTernal2 KEY BUS :SOURce:LIST:STEP [1] 2 3...1000:SETup:INPut:TRIGger?
Example:	SOUR:LIST:STEP2:SET:INP:TRIG BUS SOUR:LIST:STEP2:SET:INP:TRIG?
Notes:	SCPI is supported after A.09.40
Preset:	Free Run
Range:	Free Run Internal Manual (Trigger Key) Bus External 2
Initial S/W Revision:	A.05.00
Help Map ID:	35561

Source (Internal)

Free Run

Sets the trigger input for the current step to Free Run.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Trigger
Example:	SOUR:LIST:STEP2:SET:INP:TRIG IMM
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35562

Internal

Sets the trigger input for the current step to Internal.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Trigger
Example:	SOUR:LIST:STEP2:SET:INP:TRIG INT
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35563

Manual (Trigger Key)

Sets the trigger input for the current step to Manual (Trigger Key). Any step in the sequence set to Manual will cause the sequence execution to stop until the manual trigger key is pressed. Sending the Bus Trigger SCPI command will have no effect. At any point in the sequence where the list sequencer is paused waiting for a software trigger, a pop up dialog is displayed until the trigger event occurs.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Trigger
Example:	SOUR:LIST:STEP2:SET:INP:TRIG KEY
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35680

Bus

Sets the trigger input for the current step to Bus. Any step in the sequence set to Bus will cause the sequence execution to stop until the Bus Trigger SCPI command is sent. Pressing the manual trigger key has no effect. At any point in the sequence where the list sequencer is paused waiting for a software trigger, a pop up dialog is displayed until the trigger event occurs.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Trigger
Example:	SOUR:LIST:STEP2:SET:INP:TRIG BUS
Notes:	SCPI is supported after A.09.40

Initial S/W Revision:	A.05.00
Help Map ID:	35681

External 2

Sets the trigger input for the current step to External 2.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Trigger
Example:	SOUR:LIST:STEP2:SET:INP:TRIG EXT2
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35564

Transition Time

Allows you to specify the transition time for the current step.

The transition time is the amount of time allowed for the source to settle at the current frequency or amplitude value.

Transition Time should not be taken as additional time before or inside the Step Duration. You can set a value for the settling time to allow the source output frequency or amplitude to become stable. Make sure that during this period of time, you do not use the source output signal.

The following table lists recommended values for appropriate settling times to allow for changes within the source.

Value Changed	Recommended Transition Time
Frequency	Switching within same frequency band: 300 μ s Switching across frequency bands: 1 ms The band ranges are: Frequency Band 1: -0.08 GHz to 0.6075 GHz Frequency Band 2: 0.5075 GHz to 2.1775 GHz Frequency Band 3: 2.0775 GHz to 3.6 GHz
Amplitude	500 μ s

If the Transition Time value is shorter than the time necessary for the hardware to settle and a List Sequence is initiated, a **warning** is generated.

If the Transition Time value is longer than the Step Duration, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length. If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Key Path:	Source, List Sequencer, List Sequencer Setup
-----------	---

Source (Internal)

Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:TRANSition:TIME <time> :SOURce:LIST:STEP [1] 2 3...1000:SETup:TRANSition:TIME?
Example:	SOUR:LIST:STEP2:SET:TRAN:TIME 1ms SOUR:LIST:STEP2:SET:TRAN:TIME?
Notes:	SCPI is supported after A.09.40
Preset:	1.0 ms
Min:	0.0 ms
Max:	4.0 ks
Initial S/W Revision:	A.05.00
Help Map ID:	35571

Radio Setup

Allows you access to the sub-menus for setting up the radio standard, band, and radio band link direction for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup
Notes:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35572

Radio Standard

Allows access to the sub-menus for selecting the radio standard and the associated radio band for use in the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup
Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:RADio:BAND NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BAND I BAND II BAND III BAND IV BAND V BAND VI BAND VII BAND VIII BAND IX BAND X BAND XI BAND XII BAND XIII BAND XIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER NONE BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND43 BANDA BANDB BANDC BANDD BANDE BANDF :SOURce:LIST:STEP [1] 2 3...1000:SETup: RADio:BAND?
Example:	SOUR:LIST:STEP2:SET:RAD:BAND PGSM SOUR:LIST:STEP2:SET:RAD:BAND?

Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35573

None

Selects no radio standard for use on the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Example:	SOUR:LIST:STEP2:SET:RAD:BAND NONE
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35574

GSM/EDGE

Pressing this key once selects GSM/EDGE as the radio standard and the current GSM/EDGE band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different GSM/EDGE band.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35575

P-GSM

Selects P-GSM as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35576

E-GSM

Selects E-GSM as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35577

Source (Internal)

R-GSM

Selects R-GSM as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35578

DCS 1800

Selects DCS 1800 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35579

PCS 1900

Selects PCS 1900 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35580

GSM 450

Selects GSM 450 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35582

GSM 480

Selects GSM 480 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35583

GSM 850

Selects GSM 850 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35585

GSM 700

Selects GSM 700 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35584

T-GSM 810

Selects T-GSM 810 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, GSM/EDGE
Initial S/W Revision:	A.05.00
Help Map ID:	35581

WCDMA

Pressing this key once selects WCDMA as the radio standard and the current WCDMA band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different WCDMA band.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35586

Band I

Selects Band I as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35587

Source (Internal)

Band II

Selects Band II as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35588

Band III

Selects Band III as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35589

Band IV

Selects Band IV as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35590

Band V

Selects Band V as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35591

Band VI

Selects Band VI as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35592

Band VII

Selects Band VII as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35593

Band VIII

Selects Band VIII as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35594

Band IX

Selects Band IX as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35595

Band X

Selects Band X as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35596

Band XI

Selects Band XI as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35597

Source (Internal)

Band XII

Selects Band XII as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35598

Band XIII

Selects Band XIII as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35599

Band XIV

Selects Band XIV as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, WCDMA
Initial S/W Revision:	A.05.00
Help Map ID:	35600

CDMA 2000 / 1xEVDO

Pressing this key once selects CDMA 2000/1xEVDO as the radio standard and the current CDMA 2000/1xEVDO band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different CDMA 2000/1xEVDO band.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.05.00
Help Map ID:	35601

US CELL

Selects US Cell as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35602

US PCS

Selects US PCS as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35603

Japan Cell

Selects Japan Cell as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35604

Korean PCS

Selects Korean PCS as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35605

NMT 450

Selects NMT 450 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35606

IMT 2000

Selects IMT 2000 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35607

Source (Internal)

Upper 700

Selects Upper 700 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35608

Secondary 800

Selects Secondary 800 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35609

400 Euro PAMR

Selects 400 Euro PAMR as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35610

800 PAMR

Selects 800 PAMR as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35611

2.5GHz IMT EXT

Selects 2.5 GHz IMT EXT as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35612

US PCS 1.9GHz

Selects US PCS 1.9 GHz as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35613

AWS

Selects AWS as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35614

US 2.5GHz

Selects US 2.5 GHz as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35615

700 Public Safety

Selects 700 Public Safety as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35616

C2K Lower 700

Selects C2K Lower 700 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, CDMA 2000 / 1xEVDO
Initial S/W Revision:	A.05.00
Help Map ID:	35617

Source (Internal)

LTE

Pressing this key once selects LTE FDD as the radio standard and the current LTE FDD band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different LTE FDD band.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.09.50
Help Map ID:	35723

BAND 1

Selects BAND 1 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35724

BAND 2

Selects BAND 2 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35725

BAND 3

Selects BAND 3 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35726

BAND 4

Selects BAND 4 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35727

BAND 5

Selects BAND 5 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35728

BAND 6

Selects BAND 6 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35729

BAND 7

Selects BAND 7 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35730

BAND 8

Selects BAND 8 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35731

BAND 9

Selects BAND 9 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35732

Source (Internal)

BAND 10

Selects BAND 10 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35733

BAND 11

Selects BAND 11 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35734

BAND 12

Selects BAND 12 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35735

BAND 13

Selects BAND 13 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35736

BAND 14

Selects BAND 14 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35737

BAND 17

Selects BAND 17 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35738

BAND 18

Selects BAND 18 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35739

BAND 19

Selects BAND 19 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35740

BAND 20

Selects BAND 20 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35741

BAND 21

Selects BAND 21 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35742

Source (Internal)

BAND 24

Selects BAND 24 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35743

BAND 25

Selects BAND 25 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE
Initial S/W Revision:	A.09.50
Help Map ID:	35744

LTE TDD

Pressing this key once selects LTE TDD as the radio standard and the current LTE TDD band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different LTE TDD band

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.11.50
Help Map ID:	35785

BAND 33

Selects BAND 33 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35786

BAND 34

Selects BAND 34 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35787

BAND 35

Selects BAND 35 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35788

BAND 36

Selects BAND 36 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35789

BAND 37

Selects BAND 37 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35790

BAND 38

Selects BAND 38 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35791

BAND 39

Selects BAND 39 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35792

Source (Internal)

BAND 40

Selects BAND 40 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35793

BAND 41

Selects BAND 41 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35794

BAND 42

Selects BAND 42 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35795

BAND 43

Selects BAND 43 as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, LTE TDD
Initial S/W Revision:	A.11.50
Help Map ID:	35796

TDSCDMA

Pressing this key once selects TDSCDMA as the radio standard and the current TDSCDMA band as the active channel band. Pressing this key again allows access to the sub-menus for selecting a different TDSCDMA band

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard
Initial S/W Revision:	A.11.50
Help Map ID:	35797

BAND A

Selects BAND A as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35798

BAND B

Selects BAND B as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35799

BAND C

Selects BAND C as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35800

BAND D

Selects BAND D as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35801

BAND E

Selects BAND E as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35802

Source (Internal)

BAND F

Selects BAND F as the band for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup, Radio Standard, TDSCDMA
Initial S/W Revision:	A.11.50
Help Map ID:	35803

Radio Band Link

Allows you to specify the radio band link direction for the steps within the list sequence. The link is used in conjunction with the channel band and channel number to determine the output frequency.

When set to “Uplink”, the source will calculate the uplink frequency according to an uplink formula together with selected channel band and channel number. When set to “Downlink”, the source will calculate the downlink frequency according to a downlink formula together with selected channel band and channel number.

Key Path:	Source, List Sequencer, List Sequencer Setup, Radio Setup
Remote Command:	:SOURCE:LIST:STEP[1] 2 3...1000:SETup:RADio:BAND:LINK DOWN UP :SOURCE:LIST:STEP[1] 2 3...1000:SETup:RADio:BAND:LINK?
Example:	SOUR:LIST:STEP2:SET:RAD:BAND:LINK UP SOUR:LIST:STEP2:SET:RAD:BAND:LINK?
Notes:	SCPI is supported after A.09.40
Preset:	DOWN
Range:	DOWN UP
Initial S/W Revision:	A.05.00
Help Map ID:	35685

Channel

Allows you to specify the frequency of the current step via a channel number.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURCE:LIST:STEP[1] 2 3...1000:SETup:CNFfrequency <double> :SOURCE:LIST:STEP[1] 2 3...1000:SETup:CNFfrequency?
Example:	SOUR:LIST:STEP2:SET:CNFR 124 SOUR:LIST:STEP2:SET:CNFR?

Notes:	SCPI is supported after A.09.40. This SCPI is used to setup channel number or frequency setting, according to current Radio Band setting. If Radio Band is “NONE”, then it’s frequency. If Radio Band is not “NONE”, then it’s channel number.
Couplings:	The channel number is coupled to the step frequency value. When the step frequency value is changed, the channel number will increase or decrease to match the new step frequency. If the step frequency is not at an exact match for a channel number, the nearest channel number is displayed, along with a greater than, or less than sign to indicate the frequency is above or below the channel number.
Preset:	1
Min:	0 (Please refer to for valid ranges.)
Max:	10838 (Please refer to for valid ranges.)
Initial S/W Revision:	A.05.00
Help Map ID:	35619

Frequency

Allows you to specify a frequency value for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:CNFRfrequency <double> :SOURce:LIST:STEP [1] 2 3...1000:SETup:CNFRfrequency?
Example:	SOUR:LIST:STEP2:SET:CNFR 1GHz SOUR:LIST:STEP2:SET:CNFR?
Notes:	SCPI is supported after A.09.40. This SCPI is used to setup channel number or frequency setting, according to current Radio Band setting. If Radio Band is “NONE”, then it’s frequency. If Radio Band is not “NONE”, then it’s channel number.
Couplings:	The frequency value is coupled to the channel band and number for the step, such that updates to the radio band and channel number will update the frequency value to the corresponding absolute frequency. The reverse is also true, changing the frequency value causes the value of the channel number to be updated.
Preset:	1.00 GHz
Min:	10.00 MHz
Max:	Hardware Dependant: Option 503 = 3.6 GHz Option 504 = 3.8 GHz

Source (Internal)

Initial S/W Revision:	A.05.00
Help Map ID:	35620

Power

Allows you to specify a power value for the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:AMPLitude <double> :SOURce:LIST:STEP [1] 2 3...1000:SETup:AMPLitude?
Example:	SOUR:LIST:STEP2:SET:AMPL -50dBm SOUR:LIST:STEP2:SET:AMPL?
Notes:	SCPI is supported after A.09.40
Notes:	Amplitude corrections can be specified for use with the source. In the event of amplitude corrections being applied, the valid ranges for the RF power do not change dependant on the current amplitude correction setting. Instead, if the combination of RF power + amplitude correction is higher or lower than the source output range, the Source Unleveled bit is set and the “Source Unleveled” indicator will appear on status panel to indicate that the source cannot maintain the output power that has been requested.
Notes:	The Min and Max value here defined UI settable amplitude range. This range is larger than actual amplitude range with level accuracy defined in spec.
Dependencies:	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values.
Preset:	-100 dBm
Min:	The range of values depends on the current frequency and selected RF output port. Please refer to “RF Power” on page 1058 and the table RF Power Range for the valid ranges.
Max:	The range of values depends on the current frequency and selected RF output port. Please refer to “RF Power” on page 1058 and the table RF Power Range for the valid ranges.
Initial S/W Revision:	A.05.00
Help Map ID:	35621

Waveform

Allows you access to the sub-menus for selecting the waveform to be played back during the current step. Pressing this key also changes the central display area to show the Waveform File Selection view.

Key Path:	Source, List Sequencer, List Sequencer Setup
-----------	---

Remote Command:	:SOURCE:LIST:STEP [1] 2 3...1000:SETup:WAVEform <string> :SOURCE:LIST:STEP [1] 2 3...1000:SETup:WAVEform?
Example:	SOUR:LIST:STEP2:SET:WAV "CW" SOUR:LIST:STEP2:SET:WAV?
Notes:	SCPI is supported after A.09.40
Remote Command Notes:	String type, takes "Off" "CW" "Cont" "waveform name"
Preset:	CW
Range:	Waveform Continue Previous CW Off
Initial S/W Revision:	A.05.00
Help Map ID:	35622

CW

Sets the current step to output a CW tone.

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform
Example:	SOUR:LIST:STEP2:SET:WAV "CW"
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35625

Selected Waveform

Inserts the currently selected waveform in the waveform selection view as the waveform for playback during the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform
Example:	SOUR:LIST:STEP2:SET:WAV "waveform name"
Notes:	SCPI is supported after A.09.40 If the selected waveform contains header (which contains ARB play parameters), source list sequence will automatically apply header settings of the selected waveform in that step.
Initial S/W Revision:	A.05.00
Help Map ID:	35623

Continue Previous

Sets the current step to continue with playback of the waveform from the previous step. When continuing the previous waveform, the ARB playback will not pause while the source retunes to the new frequency or amplitude

Source (Internal)

that may be defined for the new step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform
Example:	SOUR:LIST:STEP2:SET:WAV "Cont"
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35624

Off

Disable RF output of the current step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform
Example:	SOUR:LIST:STEP2:SET:WAV "Off"
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35683

Segments on Hard Disk

This key functions the same as [Segments on Hard Disk@35433](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load Segment To ARB Memory

This key functions the same as [Load Segment To ARB Memory@35434](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Load All To ARB Memory

This key functions the same as [Load All To ARB Memory@35435](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Change Directory ...

This key functions the same as [Change Directory...@35436](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Default Directory ...

This key functions the same as [Default Directory...@35437](#)

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segment on Hard Drive
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Segments in ARB Memory

This key functions the same as [Segments in ARB Memory@35438](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segments in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete Segment From ARB Memory

This key functions the same as [Delete Segment From ARB Mem@35439](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segments in ARB Memory, Segment in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Delete All From ARB Memory

This key functions the same as [Delete All From ARB Memory@35440](#).

Key Path:	Source, List Sequencer, List Sequencer Setup, Waveform, Segments in ARB Memory, Segment in ARB Memory
Initial S/W Revision:	Prior to A.09.00
Help Map ID:	0

Source (Internal)

Step Duration

Allows access to the sub-menus for setting up the duration of play for the current step.

The duration can be set to be either the number of times for the ARB file associated with the sequence to play, or a specific time value, or continuous. If the step is set to play a CW tone, the step duration cannot be set to a play count.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURCE:LIST:STEP[1] 2 3...1000:SETup:DURation:TYPE TIME COUNT CONTinuous :SOURCE:LIST:STEP[1] 2 3...1000:SETup:DURation:TYPE?
Example:	SOUR:LIST:STEP2:SET:DUR:TYPE TIME SOUR:LIST:STEP2:SET:DUR:TYPE?
Notes:	SCPI is supported after A.09.40
Notes:	If “Step Duration” is set to “Time” or “Play Count” for the last step, the last step of ARB keeps playing as if set to “Continuous”, until the set “Time” has expired or until the “Play Count” setting is reached.
Range:	Time Play Count Continuous
Initial S/W Revision:	A.05.00
Help Map ID:	35626

Time

Sets the duration of the current step to be a time value for the length of time the step will play. Pressing this key again opens another menu which allows you to set the time value for the step duration.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Duration
Example:	SOUR:LIST:STEP2:SET:DUR:TYPE TIME
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35627

Duration Time

Allows you to specify the length of time the current step will play.

If the Transition Time value is longer than the Step Duration Time, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length. If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Duration, Time
-----------	--

Remote Command:	:SOURce:LIST:STEP [1] 2 3...1000:SETup:DURation:TCOUNT <double> :SOURce:LIST:STEP [1] 2 3...1000:SETup:DURation:TCOUNT?
Example:	SOUR:LIST:STEP2:SET:DUR:TCO 1s SOUR:LIST:STEP2:SET:DUR:TCO?
Notes:	SCPI is supported after A.09.40 This SCPI is reused by “Play Count” and “Duration Time” according to current Duration Type setting if “Play Count” or “Duration Time”. If current “Duration Type” is “Continuous”, then popup error –221, "Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #"
Notes:	If “Duration Time” is set for the last step, the last step of ARB keeps playing as if set to “Continuous” after set time expires. However, you can query Source Sweeping Condition Message (:STAT:OPER:COND?) to find out if the current list sequence is complete or not.
Preset:	1.00 ms
Min:	100 μ s
Max:	1800 s
Initial S/W Revision:	A.05.00
Help Map ID:	35628

Play Count

Sets the duration of the current step to be an integer value for the number of times (play count) the ARB file is selected for playback during this step. For example, a 5 second ARB will be set to play 5 times during the step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Duration
Example:	SOUR:LIST:STEP2:SET:DUR:TYPE COUN
Notes:	SCPI is supported after A.09.40 This key is unavailable and is grayed out if the current step is configured to CW tone rather than an ARB waveform.
Initial S/W Revision:	A.05.00
Help Map ID:	35684

Play Count

Allows you to specify the number of times the current ARB waveform file will play during a step.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Duration, Time, Play Count
-----------	--

Source (Internal)

Remote Command:	:SOURCE:LIST:STEP [1] 2 3...1000:SETup:DURation:TCOUNT <double> :SOURCE:LIST:STEP [1] 2 3...1000:SETup:DURation:TCOUNT?
Example:	SOUR:LIST:STEP2:SET:DUR:TCO 10 SOUR:LIST:STEP2:SET:DUR:TCO?
Notes:	SCPI is supported after A.09.40 This SCPI is reused by “Play Count” and “Duration Time” according to current Duration Type setting if “Play Count” or “Duration Time”. If current “Duration Type” is “Continuous”, then popup error -221, “Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #”
Notes:	If “Play Count” is set for the last step, the last step of ARB keeps playing as if set to “Continuous” after play count setting is reached.
Preset:	1
Min:	1
Max:	65536
Initial S/W Revision:	A.05.00
Help Map ID:	35629

Continuous

Sets the current step to be played continuously until the next step starts.

Key Path:	Source, List Sequencer, List Sequencer Setup, Step Duration
Example:	SOUR:LIST:STEP2:SET:DUR:TYPE CONT
Notes:	SCPI is supported after A.09.40
Initial S/W Revision:	A.05.00
Help Map ID:	35630

Output Trigger

Allows you to specify the trigger output for the current step. The trigger output signal is sent at the start of the step.

When select “On”, trigger event will occur on both Internal and External2 paths. Select “Off” will turn off trigger output.

Key Path:	Source, List Sequencer, List Sequencer Setup
Remote Command:	:SOURCE:LIST:STEP [1] 2 3...1000:SETup:OUTPut:TRIGger ON OFF 1 0 :SOURCE:LIST:STEP [1] 2 3...1000:SETup:OUTPut:TRIGger

Example:	SOUR:LIST:STEP2:SET:OUTP:TRIG ON SOUR:LIST:STEP2:SET:OUTP:TRIG?
Notes:	SCPI is supported after A.09.40
Preset:	Off
Range:	On Off
Initial S/W Revision:	A.05.00
Help Map ID:	35633

Step Configuration (Remote Command Only)

This SCPI command is used to configure the List Sequencer and is detailed in the table below. The command is defined such that you send one command per step, with the step number being specified as a subopcode of the SCPI command. Each command includes all the parameter settings for the step. As a step is setup, the values entered are run through several levels of validation.

Remote Command:	:SOURce:LIST:STEP [1] 2 3 4 . . 1000 :SETup IMMediate INTernal KEY BUS EXTernal2, <time>, NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM4 80 GSM700 GSM850 BANDI BANDII BANDIII BANDIV BANDV BAND VI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXII I BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SEC OND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLI C LOWER NONE BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25 BAND33 BAND34 BAND35 BAND36 BAND37 BAND38 BAND39 BAND40 BAND41 BAND42 BAND4 3 BANDA BANDB BANDC BANDD BANDE BANDF, DOWN UP, <freq>, <ampl>, <string>, TIME COUNT CONTinuous, <time>, ON OFF 1 0, [<int>], :SOURce:LIST:STEP [1] 2 3 4 . . 1000 :SETup?
Example:	SOUR:LIST:STEP1:SET INT, 1ms, PGSM, DOWN, 10, -25 dBm, "GSM_Test1.bin", TIME, 10ms, OFF, 255

Notes:	<p>The parameters are: (There is a total of 11 items in each step, the following is a list of the items in the order they must appear in the remote command.)</p> <ol style="list-style-type: none"> 1. Step Trigger <enum> - specifies the input trigger for the step. For details of the valid types of step trigger see “Step Trigger” on page 1149. 2. Transition Time <time> - specifies the transition time for the step in seconds. For details of the valid ranges for the transition time see “Transition Time” on page 1151. 3. Radio Band <enum> - specifies the radio band for the step. For details of the valid radio bands see “Radio Setup” on page 1152. 4. Radio Band Link <enum> - specifies the radio band link direction for the step. For details of the valid link types, see “Radio Band Link” on page 1170. 5. Frequency/Channel Number <freq>/<chan num> - specifies the frequency in Hz or the channel number for the step. The channel number and frequency are combined as one parameter that represents the frequency or channel number depending on the radio band setting. If the radio band is set to NONE, this value is interpreted as a frequency value in Hz. If the radio band is set to a valid band, this value is interpreted as a channel number. For details of the valid ranges for frequency and channel numbers, see “Channel” on page 1170 and “Frequency” on page 1171. 6. Power <ampl> - specifies the output power for the step in dBm. For details of the valid ranges see “Power” on page 1172. 7. Waveform <string> - specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are: <filename> - plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated. CONT – continues playback of the ARB file from the previous step CW – outputs a CW tone OFF – disable RF output 8. Step Duration <enum> - specifies the duration of the step. The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to “CW”, this value cannot be set to Play Count and an error will be generated. If continuous is selected, the following Time or Count value is ignored. For further details of this setting, see “Step Duration” on page 1176. 9. Time or Count <time/int> - specifies time duration in seconds or play count of the ARB file associated with the step. For further details of this setting, including the valid ranges for the time or play count setting, “Time” on page 1176 and “Play Count” on page 1177. 10. Output Trigger <Boolean> - specifies the output trigger for the step. For details of the ranges for this setting see “Output Trigger” on page 1178.
--------	---

Dependencies:	The range of subopcode values is 1 to 1000 and the value you enter is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 . If you attempt to remotely set or query a subopcode that is out of range, an error is generated.
Initial S/W Revision:	A.05.00
Help Map ID:	35692

Step Configuration of Step Trigger parameter list (Remote Command Only)

This SCPI command is to configure “Step Trigger” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in [“Number of Steps” on page 1147](#) Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURCE:LIST:SETup:INPut:TRIGger <enum>, <enum>, <enum>, ... :SOURCE:LIST:SETup:INPut:TRIGger?
Example:	SOUR:LIST:SET:INP:TRIG IMM,INT,EXT2 SOUR:LIST:SET:INP:TRIG?
Notes:	The command is to setup below parameter array of whole list sequence. Step Trigger <enum> - specifies the input trigger for the step. For details of the valid types of step trigger see “Step Trigger” on page 1149 . If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.
Remote Command Notes:	IMMediate INTErnal KEY BUS EXTernal2
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 .
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Transition Time parameter list (Remote Command Only)

This SCPI command is to configure “Transition Time” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in [“Number of Steps” on page 1147](#) Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURCE:LIST:SETup:TRANSition:TIME <time>, <time>, <time>, ... :SOURCE:LIST:SETup:TRANSition:TIME?
Example:	SOUR:LIST:SET:TRAN:TIME 1ms,1ms,1ms SOUR:LIST:SET:TRAN:TIME?

Source (Internal)

Notes:	The command is to setup below parameter array of whole list sequence. Transition Time <time> - specifies the transition time for the step in seconds. For details of the valid ranges for the transition time see “Transition Time” on page 1151 If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 .
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Radio Band parameter list (Remote Command Only)

This SCPI command is to configure “Radio Band” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in [“Number of Steps” on page 1147](#) Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURce:LIST:SETup:RADio:BAND <enum>, <enum>, <enum>, ... :SOURce:LIST:SETup:RADio:BAND?
Example:	SOUR:LIST:SET:RAD:BAND PGSM, EGSM, RGSM SOUR:LIST:SET:RAD:BAND?
Notes:	The command is to setup below parameter array of whole list sequence. Radio Band <enum> - specifies the radio band for the step. For details of the valid radio bands see “Radio Setup” on page 1152 . If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.
Remote Command Notes:	NONE PGSM EGSM RGSM DCS1800 PCS1900 TGSM810 GSM450 GSM480 GSM700 GSM850 BANDI BANDII BANDIII BANDIV BANDV BANDVI BANDVII BANDVIII BANDIX BANDX BANDXI BANDXII BANDXIII BANDXIV USCELL USPCS JAPAN KOREAN NMT IMT2K UPPER SECOND PAMR400 PAMR800 IMTEXT PCS1DOT9G AWS US2DOT5G PUBLIC LOWER NONE BAND1 BAND2 BAND3 BAND4 BAND5 BAND6 BAND7 BAND8 BAND10 BAND11 BAND12 BAND13 BAND14 BAND17 BAND18 BAND19 BAND20 BAND21 BAND24 BAND25
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 .
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Radio Band Link parameter list (Remote Command Only)

This SCPI command is to configure “Radio Band Link” parameter array of the whole List Sequencer at one time.

The number of array is same as step number defined in “Number of Steps” on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURce:LIST:SETup:RADio:BAND:LINK <enum>, <enum>, <enum>, ... :SOURce:LIST:SETup:RADio:BAND:LINK?
Example:	SOUR:LIST:SET:RAD:BAND:LINK DOWN,UP,UP SOUR:LIST:SET:RAD:BAND:LINK?
Notes:	The command is to setup below parameter array of whole list sequence. Radio Band Link <enum> - specifies the radio band link direction for the step. For details of the valid link types, see “Radio Band Link” on page 1170. If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.
Remote Command Notes:	DOWN UP
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147.
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Frequency/Channel Number parameter list (Remote Command Only)

This SCPI command is to configure “Frequency” or “Channel Number” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in “Number of Steps” on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURce:LIST:SETup:CNFRrequency <double>, <double>, <double>, ... :SOURce:LIST:SETup:CNFRrequency?
Example:	SOUR:LIST:SET:CNFR 1GHz,100MHz,100MHz SOUR:LIST:SET:CNFR? SOUR:LIST:SET:CNFR 124,124,124 SOUR:LIST:SET:CNFR?

Source (Internal)

Notes:	<p>The command is to setup below parameter array of whole list sequence.</p> <p>Frequency/Channel Number <freq>/<chan num> - specifies the frequency in Hz or the channel number for the step. The channel number and frequency are combined as one parameter that represents the frequency or channel number depending on the radio band setting. If the radio band is set to NONE, this value is interpreted as a frequency value in Hz. If the radio band is set to a valid band, this value is interpreted as a channel number. For details of the valid ranges for frequency and channel numbers, see “Channel” on page 1170 and “Frequency” on page 1171</p> <p>This SCPI is used to setup/query channel number or frequency setting, according to current Radio Band setting of that step. If Radio Band is “NONE”, then it’s frequency. If Radio Band is not “NONE”, then it’s channel number</p> <p>If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in legal step number will be updated.</p>
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 .
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Power parameter list (Remote Command Only)

This SCPI command is to configure “Power”parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in [“Number of Steps” on page 1147](#) Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	<pre>:SOURCE:LIST:SETup:AMPLitude <ampl>, <ampl>, <ampl>, ... :SOURCE:LIST:SETup:AMPLitude?</pre>
Example:	<pre>SOUR:LIST:SET:AMPL -50dBm,-40dBm,-30dBm SOUR:LIST:SET:AMPL?</pre>
Notes:	<p>The command is to setup below parameter array of whole list sequence.</p> <p>Power <ampl> - specifies the output power for the step in dBm. For details of the valid ranges see “Power” on page 1172.</p> <p>If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in legal step number will be updated.</p>
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “Number of Steps” on page 1147 .
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Waveform parameter list (Remote Command Only)

This SCPI command is to configure “Waveform” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in “[Number of Steps](#)” on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURCE:LIST:SETup:WAVEform <string>, <string>, <string>, ... :SOURCE:LIST:SETup:WAVEform?
Example:	SOUR:LIST:SET:WAV “CW”,”Off”,”CONT” SOUR:LIST:SET:WAV?
Notes:	The command is to setup below parameter array of whole list sequence. Waveform <string> - specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are: <filename> - plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it is does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated. CONT – continues playback of the ARB file from the previous step CW – outputs a CW tone OFF – disable RF output If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “ Number of Steps ” on page 1147.
Range:	”filename” “CW” “Off” “CONT”
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Step Duration parameter list (Remote Command Only)

This SCPI command is to configure “Step Duration” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in “[Number of Steps](#)” on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURCE:LIST:SETup:DURation:TYPE <enum>, <enum>, <enum>, ... :SOURCE:LIST:SETup:DURation:TYPE?
Example:	SOUR:LIST:SET:DUR:TYPE COUN,TIME,CONT SOUR:LIST:SET:DUR:TYPE?

Source (Internal)

Notes:	<p>The command is to setup below parameter array of whole list sequence.</p> <p>Step Duration <enum> - specifies the duration of the step. The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to "CW", this value cannot be set to Play Count and an error will be generated. If continuous is selected, the following Time or Count value is ignored. For further details of this setting, see "Step Duration" on page 1176.</p> <p>If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.</p>
Remote Command Notes:	TIME COUNT CONTInuous
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see "Number of Steps" on page 1147.
Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Duration Time or Play Count parameter list (Remote Command Only)

This SCPI command is to configure "Duration Time" or "Play Count" parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in "Number of Steps" on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	<pre>:SOURce:LIST:SETup:TOCount <time/int>, <time/int>, <time/int>, ... :SOURce:LIST:SETup:TOCount?</pre>
Example:	<pre>SOUR:LIST:SET:TOC 1s,2s,3s SOUR:LIST:SET:TOC? SOUR:LIST:SET:TOC 5,6,7 SOUR:LIST:SET:TOC?</pre>
Notes:	<p>The command is to setup below parameter array of whole list sequence.</p> <p>Time or Count <time/int> - specifies time duration in seconds or play count of the ARB file associated with the step. For further details of this setting, including the valid ranges for the time or play count setting, "Time" on page 1176 and "Play Count" on page 1177.</p> <p>If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in number of steps will be updated.</p> <p>If current "Step Duration" on page 1176 is "Continuous", then generate error -221,"Settings conflict;Cannot accept time or count input when step duration type is Continuous on step #"</p>
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see "Number of Steps" on page 1147.

Initial S/W Revision:	A.09.40
Help Map ID:	0

Step Configuration of Output Trigger parameter list (Remote Command Only)

This SCPI command is to configure “Output Trigger” parameter array of the whole List Sequencer at one time. The number of array is same as step number defined in “[Number of Steps](#)” on page 1147 Number of Steps. As a step is setup, the value entered run through several levels of validation.

Remote Command:	:SOURce:LIST:SETup:OUTPut:TRIGger <bool>, <bool>, <bool>, ... :SOURce:LIST:SETup:OUTPut:TRIGger ?
Example:	SOUR:LIST:SET:OUTP:TRIG ON,OFF,ON SOUR:LIST:SET:OUTP:TRIG?
Notes:	The command is to setup below parameter array of whole list sequence. Output Trigger <Boolean> - specifies the output trigger for the step. For details of the ranges for this setting see “ Output Trigger ” on page 1178. If input parameter number exceeds the step number defined by Number of Steps then generate error ", and only those parametes whose index number falls in legal step number will be updated.
Remote Command Notes:	ON OFF 1 0
Dependencies:	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see “ Number of Steps ” on page 1147.
Initial S/W Revision:	A.09.40
Help Map ID:	0

Clear List (Remote Command Only)

This command is the SCPI equivalent of the Clear List UI feature described in.

Remote Command:	:SOURce:LIST:SETup:CLEar
Example:	SOUR:LIST:SETup:CLE
Initial S/W Revision:	A.05.00
Help Map ID:	35693

Multiport Adapter Output Port Bitmap Mode

When this setting is set to LIST, it will allow you to select the multiport adapter output path of each step. When this setting is set to FIXEd, source list sequence multiport adapter output path on each step is controlled by global multiport adapter output port bitmap setting (same as source independent mode). Under this situation, source list sequence will ignore local multiport adapter output port bitmap setting

Source (Internal)

defined in each step, they are still there and can be queried out, but take no effect.

Key Path:	Source, List Sequencer
Remote Command:	:SOURce:LIST:MPADapter:PORT:OUTPut:BITMap:MODE LIST FIXed :SOURce:LIST:MPADapter:PORT:OUTPut:BITMap:MODE?
Example:	SOUR:LIST:MPAD:PORT:OUTP:BITM:MODE LIST SOUR:LIST:MPAD:PORT:OUTP:BITM:MODE?
Preset:	FIXed
Range:	LIST FIXed
State Saved:	Yes
Initial S/W Revision:	A.09.40
Help Map ID:	35760

Multiport Adapter Output Port Amplitude Correction Configuration Validation for List Sequencer (Remote Command Only)

This command is used to validate MPA TX port amplitude correction for Source List Sequencer.

Key Path:	Source, List Sequencer
Remote Command:	:SOURce:LIST:MPADapter:CORRection:ERRor?
Example:	SOUR:LIST:MPAD:CORR:ERR?
Notes:	Query Only SCPI Remote command only If detected invalid configuration, popup error message: "-221 Settings conflict; Source List Step<n> MPA TX port<n> amplitude correction value <n>dB is out of range. The valid range is <n> ~ <n>dB" Or "-221 Settings conflict; Source List Step<n> MPA TX port<n> amplitude correction delta exceeds <n>dB between port<n> and port<n>" to report the first detected conflict.
Range:	"No error" Error info of the first found conflict
State Saved:	Yes
Initial S/W Revision:	A.12.00
Help Map ID:	0

Manual Trigger Now

Pressing this key provides a software trigger event to the list sequencer. During execution of sequence, if the sequencer is halted on any step that has been configured with a “Manual” step trigger, then this key press will cause the sequencer to continue and execute the step.

Key Path:	Source, List Sequencer
Remote Command:	No remote command, front panel only.
Initial S/W Revision:	A.05.00
Help Map ID:	35682

Query List Sequence Initiation Armed Status (Remote Command Only)

This is a blocking SCPI query to determine if source list sequence being initiated successfully or not.

Remote Command:	:SOURce:LIST:INITiation:ARMed?
Example:	SOUR:LIST:INIT:ARMed?
Notes:	The return data is in the following format: Integer
Notes:	Query only SCPI. Returning “1” if list sequence has been initiated successfully, returning “0” if not. Once get “0”, you can use :SYST:ERR? to query what error happened. Just like “*OPC?”, this command can be blocked until event/status “IsSourceSweeping” happens, and then returns. Doing so can help user’s script query armed status only once during the time interval of the initiation. As an ancillary SCPI of existing SCPI “:SOUR:LIST:TRIGger[:IMMediate]” (see “Initiate Sequence” on page 1146 Initiate Sequence), the right usage of this command is to use it after “:SOUR:LIST:TRIG”. If not, this command will return “1” immediately.
Notes:	There is an alias SCPI “:SOURce:LIST:TRIGger:INITiation:ARMed?”.
Initial S/W Revision:	A.09.40
Help Map ID:	35761

Source Preset

Allows you to preset the source settings to their default values.

Key Path:	Source
Remote Command:	:SOURce:PRESet
Example:	SOUR:PRES
Help Map ID:	35656

Source (Internal)

Source Self Test

Internal Source

This key in the System, Diagnostics menu gives you access to diagnostic capabilities of Internal Source of the instrument.

Key Path:	System, Diagnostics
Initial S/W Revision:	Prior to A.09.20
Help Map ID:	35762

Source Self Test

This key invokes internal source self test. When operation is complete, the generated test summary file is: E:\Agilent\Instrument\CRFSSelfTestLog.txt. This test summary file can be retrieved from the instrument using the MMEM set of SCPI command, once you have the fully qualified path and file name.

If self test fails, error message “-330, Self-test failed, see log file E:\Agilent\Instrument\CRFSSelfTestLog.txt” is generated. If self test passes, an advisory message “Source self-test completed successfully” is generated.

Key Path:	System, Diagnostics, Internal Source, Self Test
Remote Command:	: SOURce : SELF : TEST [: ALL]
Example:	SOUR:SELF:TEST
Notes:	MMEM:DATA? "E:\ Agilent\Instrument\CRFSSelfTestLog.txt"
Initial S/W Revision:	A.09.20
Help Map ID:	35763

Recall

Most of the functions under this key work the same way in many measurements, so they are documented in the System Functions section. For details about this key, see [Recall@2637@i.](#)

Save

Most of the functions under this key work the same way in many measurements, so they are documented in the Utility Functions section. For details about this key, see [Save@2600@i.](#)

Signal Studio Commands

Overview

EXT supports connectivity with Signal Studio. To achieve this, the SCPI commands described in this chapter enable you to connect Signal Studio to the EXT test set and to download waveform into the hard

disk. They are SCPI only, no menu

Initial S/W Revision:	A.05.00
Help Map ID:	35694

Query License List (Remote Command Only)

This query provides a listing of the current licenses for external software installed for the test set internal source.

Remote Command:	:SYSTem:LiCense:EXTeRnal:LIST?
Example:	SYST:LIC:EXT:LIST?
Notes:	Query only.
Initial S/W Revision:	A.05.00
Help Map ID:	35695

Query License List Detail (Remote Command Only)

This is an obsolete command for Signal Studio. However, it has not been removed from Signal Studio to prevent a Signal Studio connectivity time out. Using this command returns a null string and does not affect Signal Studio.

Remote Command:	:SYSTem:LiCense:LIST:DETAil?
Example:	SYST:LIC:LIST:DET?
Notes:	Query only. Always returns a null string "".
Initial S/W Revision:	A.05.00
Help Map ID:	35696

Memory Subsystem (Remote Command Only)

To be compatible with other Signal Generator products, the EXT test set internal source provides a memory subsystem for Signal Studio to download waveform file into the instrument.

“NVWFM” (none-volatile storage) MSUS (Mass Storage Unit Specifier) is supported in the memory subsystem because the ARB memory cannot be accessed directly. Therefore, files must be downloaded to the instrument hard disk and then loaded into the ARB memory. “NVWFM” MSUS will be mapped to the default directory D:\NVARB.

In addition, you can load a waveform file from the hard disk to the ARB memory, using the [“Load Segment To ARB Memory” on page 1098](#) remote command :SOURce:RADio:ARB:LOAD, which also supports using either “NVWFM” MSUS or specifying a full path.

Remote Command:	:MEMory [:SOURce]
------------------------	-------------------

Source (Internal)

Example:	MEM
Initial S/W Revision:	A.05.00
Help Map ID:	35697

:DATA (Remote Command Only)

This command loads data into the EXT test set hard disk using the <data> parameter and saves the data to a file designated by the <file_name> variable. For downloads to non-volatile waveform memory, use the path “NVWFM:<file_name>”.

Remote Command:	:MEMory[:SOURce]:DATA <file_name>, <data>
Example:	MEM:DATA “NVWFM:test.wfm”, #1212 or MEM:DATA “D:\NVARB\test.wfm”, #1212
Notes:	Data is in 488.2 block format. If a file already exists with same name, the file will be overwritten without warning.
Initial S/W Revision:	A.05.00
Help Map ID:	35698

:DATA:APPend (Remote Command Only)

This command appends data to an existing file stored in hard disk using the <data> parameter and saves the data to a file designated by the <file_name> variable. For downloads to non-volatile waveform memory, use the path “NVWFM:<file_name>”.

Remote Command:	:MEMory[:SOURce]:DATA:APPend <file_name>, <data>
Example:	MEM:DATA:APP “NVWFM:test.wfm”, #14Y9oL or MEM:DATA:APP “D:\NVARB\test.wfm”, #14Y9oL
Notes:	Data is in 488.2 block format. If no file exists with the name designated in the command, a file will be created the first time this command is used with that designated name.
Initial S/W Revision:	A.05.00
Help Map ID:	35699

Sequence Studio Commands

Overview

EXT supports connectivity with Sequence Studio. The SCPI commands described in this chapter are

used to support connectivity from Sequence Studio to the EXT test set. These are only intended for Sequence Studio, so provided as service commands, and SCPI only, no menu

Initial S/W Revision	A.12.00
Help Map ID	0

Query Supportable System Information Query SCPI List (Remote Command Only)

This query provides a listing of the current EXT supportable list of query SCPI which is used to query EXT HW/SW information. It returns string result and parsed by Sequence Studio.

Sequence Studio needs to query some EXT system information like capability etc. when connecting. With more and more new SCPIs added in EXT FW, each time when Sequence Studio try to connect to an old version FW without those new SCPI commands, VISA timeout in Sequence Studio will occur and just make Sequence Studio looks dead. To avoid that, this SCPI is provided to give a list of current supportable information-query SCPI list.

Remote Command	:SERvice[:PRODUCTION]:SIQuery:SCPI:LIST?
Example	SERV:SIQ:SCPI:LIST?
Notes	<p>Query only</p> <p>The string in “Range” part cannot change, for Sequence Studio needs to accurately match those string character.</p> <p>If “SEQ Ver Info” string presents, then means “:SERvice[:PRODUCTION]:LSEQuencer:ANALyzer:FILE:VERSion?” and “:SERvice[:PRODUCTION]:LSEQuencer:SOURce:FILE:VERSion?” query SCPIs are supported in current version.</p> <p>If “ARB Header Info” string presents, that means “Query Selected Waveform Header info (Remote Command Only)” on page 1140 query SCPI is supported in current version.</p>
Range	“HW Capability Info”, “SEQ Ver Info”, “ARB Header Info”
Initial S/W Revision	A.12.00
Help Map ID	0

Source (Internal)

Span

Activates the Span function and displays a menu of span functions.

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3260

Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting the Span the Center Frequency is held constant, which means that both Start Frequency and Stop Frequency will change.

Span also sets the frequency entry mode to Center/Span. In Center/Span mode, the center frequency and span values are displayed below the graticule, and the default active function in the Frequency menu is **Center Freq**.

While discussing the Span function we make the distinction between “swept spans” and “zero span”. We use the term “swept spans” to mean spans other than zero; recognizing that, because of this terminology, the user can be in what we call a “swept span” even while performing an FFT “sweep”.

While in swept spans, setting the span to 0 Hz through SCPI or the front panel numeric key pad puts the test set into zero span. However, using the Step keys and the RPG in swept spans, the Span can only go as far down as 10 Hz and cannot be set to zero.

While in zero span, setting the Span to a non-zero value through SCPI or the front panel puts the test set in swept spans.

If the Span is set to a value greater than the maximum allowable span of the test set, an error is generated indicating the data is out of range and was clipped to upper limit.

Key Path	SPAN X Scale
Remote Command	[:SENSe] :FREQuency:SPAN <freq> [:SENSe] :FREQuency:SPAN?
Example	FREQ:SPAN 2GHz sets the span to 2 GHz FREQ:SPAN 0 Hz sets the span to 0 Hz and puts the test set in Zero Span
Notes	Preset and Max values depend on the Hardware Options
Dependencies	If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error. If the key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.

Span

Couplings	Span affects RBW, sweep time, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings.) When operating in “swept span”: <ul style="list-style-type: none"> Any value of the Center Frequency or Span that is within the frequency range of the test set is allowed when the value is being set through the front panel numeric key pad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the test set’s frequency range When using the knob or the step up/down keys or the UP DOWN keywords in SCPI, the value that is being changed i.e. the Center Frequency or Span, is limited so that the other parameter is not forced to a new value The Span cannot be set to Zero by setting Start Frequency = Stop Frequency. The value of the last setting is changed to maintain a minimum value of 10 Hz for the difference between start and stop frequencies.
Preset	Depends on test set maximum frequency: Option 503 (3.6 GHz models): 3.59 GHz Option 504 (3.8 GHz models): 3.8 GHz
State Saved	Saved in State
Min	10 Hz unless entered directly, then 0 Hz is allowed, but nothing between 0 and 10 is ever allowed.
Max	Option 503 (3.6 GHz models): 3.7 GHz Option 504 (3.8 GHz models): 3.9 GHz If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency
Default Unit	Hz
Status Bits/OPC dependencies	Overlapped if Signal Track is on (OPC shouldn’t return or clear until the zooming has completed for the new span)
Initial S/W Revision	Prior to A.02.00
Help Map ID	3261

Full Span

Changes the frequency span of the test set to the Preset frequency span of the test set and sets the Frequency entry mode to Center/Span.

The span is dependent on the currently selected Input (see the Section “Input/Output”).

Pressing this key while in zero span puts the test set back in swept span.

Key Path	SPAN X Scale
----------	---------------------

Remote Command	[:SENSe] :FREQuency:SPAN:FULL
Example	FREQ:SPAN:FULL sets the span to full frequency range of the test set
Notes	n /a
Couplings	Turns off signal tracking (span zoom). It does NOT turn off the markers, nor the current active function.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3263

Zero Span

Changes the displayed frequency span to 0 Hz. The horizontal axis changes to time rather than frequency. The amplitude displayed is the input signal level at the current center frequency. This is a time-domain mode that changes several measurement functions and couplings. The test set behavior is similar to an oscilloscope with a frequency selective detector installed in front of the oscilloscope. See Application Note 150 for more information on how to use zero span.

You can enter Zero Span in several ways:

Press the Zero Span key in Span

Set Span = 0 Hz

Press last Span if the last span was 0

You cannot go to Zero Span by setting start freq = stop freq, or rolling span down with the RPG, that will limit you to 10 Hz

You can go back to Swept Span by setting Span to a nonzero value or pressing Last Span, assuming the last span was not also zero span.

Pressing Zero Span places the test set in Center/Span frequency entry mode.

The following table summarizes the differences between Zero Span and Swept Spans:

Zero Span	Swept Spans
X axis is time	X axis is frequency
There is no auto-RBW selection unless the EMC Standard is CISPR or MIL	RBW coupled to Span when RBW in auto
There is no auto sweep time	Sweep time coupled to RBW when sweep time in auto
Interval Power calculated in Mkr Function	Band Power calculated in Mkr Function
Can only define time limits when in zero span	Can only define frequency limits when in swept spectrum analysis
Marker Count counts at the center frequency	Marker Count counts at the marker frequency
CF Step Size set to RBW value	CF Step auto couples to 10% of Span

Span

Some “Marker ->” commands not available.	Other “Marker ->” commands not available
Freq entry mode always Center/Span	Freq entry mode can be Center/Span or Start/Stop
N dB points reports a time difference.	N dB points reports a frequency difference.

Key Path	SPAN X Scale
Example	FREQ:SPAN 0 Hz sets the span to zero, switches to Zero Span Sending FREQ:SPAN 1 MHz while in Zero Span, switches to Swept span
Notes	Setting the Span to 0 Hz will change to Zero Span and setting the span to a non-zero value will select a swept span
Notes	n /a
Dependencies	Zero Span key is unavailable (grayed out) if the following is true: Frequency scale type is LOG (for example, Log Sweep is On)
Couplings	Pressing Zero Span key (switching to Zero Span): Turns off signal track function (span zoom). Turns off the auto-coupling of RBW and sweep time.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3264

Last Span

Changes the displayed frequency span to the previous span setting. If it is pressed immediately after Signal Track is turned off, then the span setting returns to the span that was in effect before Signal Track was turned on.

If this key is pressed while in a nonzero span, and the previous value of span was 0, it will put the test set back in Zero Span. And if it is pressed while in zero span, it will set the test set back to its last nonzero span.

Pressing Last Span places the test set in Center/Span frequency entry mode.

Key Path	SPAN X Scale
Remote Command	[:SENSE] :FREQuency:SPAN:PREVious
Example	FREQ:SPAN:PREV sets the span to the previous value
Notes	n /a
Initial S/W Revision	Prior to A.02.00
Help Map ID	3265

Sweep/Control

Accesses a menu that enables you to configure the Sweep and Control functions of the analyzer, such as Sweep Time and Gating.

Key Path:	Front-panel key
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3273

Sweep Time

Controls the time the analyzer takes to sweep the current frequency span when the Sweep Type is Swept, and displays the equivalent Sweep Time when the Sweep Type is FFT.

When Sweep Time is in Auto, the analyzer computes a sweep time which will give accurate measurements based on other settings of the analyzer, such as RBW and VBW.

NOTE

Significantly faster sweep times are available for the Swept SA measurement with Option FS1.

The Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the manual sweep time entered is faster than the sweep time computed by the analyzer's sweep time equations, that is, the Auto Sweep Time. The analyzer's computed sweep time will give accurate measurements; if you sweep faster than this your measurements may be inaccurate. A Meas Uncal condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW

On occasion other factors such as the Tracking Generator's maximum sweep rate, the YTF sweep rate (in high band) or the LO's capability (in low band) can cause a Meas Uncal condition. The most reliable way to correct it is to return the Sweep Time to Auto.

If the analyzer calculates that the Auto Sweep Time would be greater than 4000s (which is beyond its range), the warning message "Settings Alert;Sweep Rate Unavailable" is displayed. In this case increase the RBW or reduce the span.

If the analyzer's estimated sweep time in an FFT sweep is greater than 4000s, the warning message "Settings Alert;Span:RBW Ratio too big" is displayed. In this case reduce the span or increase the RBW and/or FFT Width.

When Sweep Type is FFT, you cannot control the sweep time, it is simply reported by the analyzer to give you an idea of how long the measurement is taking.

Note that although some overhead time is required by the analyzer to complete a sweep cycle, the sweep time reported when Sweep Type is Swept does not include the overhead time, just the time to sweep the LO over the current Span. When Sweep Type is FFT, however, the reported Sweep Time takes into

Sweep/Control

account both the data acquisition time and the processing time, in order to report an equivalent Sweep Time for a meaningful comparison to the Swept case.

Because there is no “Auto Sweep Time” when in zero span, the Auto/Man line on this key disappears when in Zero Span. The Auto/Man line also disappears when in an FFT sweep. In this case the key is grayed out as shown below.



NOTE When using a Tracking Source (**Source, Source Mode** set to “**Tracking**”), the sweep time shown includes an estimate of the source’s settling time. This estimate may contain inaccuracies, particularly when software triggering is used for the source. This can result in the reported sweep time being shorter than the actual sweep time.

Key Path:	Sweep/Control
Remote Command:	<pre>[:SENSE] :SWEep:TIME <time> [:SENSE] :SWEep:TIME? [:SENSE] :SWEep:TIME:AUTO OFF ON 0 1 [:SENSE] :SWEep:TIME:AUTO?</pre>
Example:	<pre>SWE:TIME 500 ms SWE:TIME:AUTO OFF</pre>
Notes:	The values shown in this table reflect the “swept spans” conditions which are the default settings after a preset. See “Couplings” for values in the zero span domain.
Dependencies:	<p>The third line of the softkey (Auto/Man) disappears in Zero Span. The SCPI command SWEep:TIME:AUTO ON if sent in Zero Span generates an error message.</p> <p>Softkey grayed out and third line of the softkey (Auto/Man) disappears in FFT sweeps. Pressing the key or sending the SCPI for sweep time while the instrument is in FFT sweep generates a -221, “Settings Conflict;” error. F</p> <p>The SCPI command :SWEep:TIME:AUTO ON if sent in FFT sweeps generates an error.</p> <p>Grayed out while in Gate View, to avoid confusing those who want to set GATE VIEW Sweep Time.</p> <p>Key is grayed out in Measurements that do not support swept mode.</p> <p>Key is blanked in Modes that do not support swept mode.</p> <p>Set to Auto when Auto Couple is pressed or sent remotely</p>

Couplings:	<p>Sweep Time is coupled primarily to Span and RBW. Center Frequency, VBW, and the number of sweep points also can have an effect. So changing these parameters may change the sweep time.</p> <p>The Sweep Time used upon entry to Zero Span is the same as the Sweep Time that was in effect before entering Zero Span. The Sweep Time can be changed while in Zero Span. Upon leaving Zero Span, the Auto/Man state of Sweep Time that existed before entering Zero Span is restored.</p> <p>If Sweep Time was in Auto before entering Zero Span, or if it is set to Auto while in zero span (which can happen via remote command or if Auto Couple is pressed) it returns to Auto and recouples when returning to non-zero spans.</p> <p>If Sweep Time was in Man before entering Zero Span, it returns to Man when returning to non-zero spans, and any changes to Sweep Time that were made while in Zero Span are retained in the non-zero span (except where constrained by minimum limits, which are different in and out of zero span).</p>
Preset:	The preset Sweep Time value is hardware dependent since Sweep Time presets to “Auto”.
State Saved:	Saved in instrument state
Min:	<p>in zero span: 1 μs</p> <p>in swept spans: 1 ms</p> <p>in Stepped Tracking (as with option ESC): same as auto sweep time</p> <p>(in Swept Tracking, with Tracking Generator option T03 or T06, the minimum sweep time is 1 ms, but the Meas Uncal indicator is turned on for sweep times faster than 50 ms)</p>
Max:	<p>in zero span: 6000 s</p> <p>in swept spans: 4000 s</p>
Status Bits/OPC dependencies:	Meas Uncal is Bit 0 in the STATUS:QUESTionable:INTEgrity:UNCalibrated register
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3274

Sweep Setup

Lets you set the sweep functions that control features such as sweep type and time.

Key Path:	Sweep/Control
Dependencies:	<p>The whole Sweep Setup menu is grayed out in Zero Span, however, the settings in the menus under Sweep Setup can be changed remotely with no error indication.</p> <p>Grayed out in measurements that do not support swept mode.</p> <p>Blanked in modes that do not support swept mode</p>
Initial S/W Revision:	Prior to A.02.00

Help Map ID:

3275

Sweep Time Rules

Allows the choice of three distinct sets of sweep time rules. These are the rules that are used to set the sweep time when **Sweep Time** is in Auto mode. Note that these rules only apply when in the Swept **Sweep Type** (either manually or automatically chosen) and not when in FFT sweeps.

See [“More Information” on page 1203](#).

Key Path:	Sweep/Control, Sweep Setup
Remote Command:	[:SENSE] :SWEep:TIME:AUTO:RULEs NORMAl ACCuracy SRESponse [:SENSE] :SWEep:TIME:AUTO:RULEs?
Example:	SWE:TIME:AUTO:RUL ACC
Dependencies:	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication. Grayed out in FFT sweeps. Pressing the key while the instrument is in FFT sweep generates an advisory message. The SCPI is acted upon if sent, but has no effect other than to change the readout on the key, as long as the analyzer is in an FFT sweep.
Couplings:	Set to Auto on Auto Couple
Preset:	AUTO
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:SWEep:TIME:AUTO:MODE SRESponse This legacy command is aliased to :SWEep:TIME:AUTO:RULEs SRESponse
Backwards Compatibility SCPI:	:SWEep:TIME:AUTO:MODE SANalyzer This legacy command is aliased to :SWEep:TIME:AUTO:RULEs NORMAl
Backwards Compatibility SCPI:	:SWEep:TIME:AUTO:MODE? This legacy query is aliased to :SWEep:TIME:RULEs?, so it will match for SRESponse but not for SANalyzer
Backwards Compatibility Notes:	The old Auto Sweep Time command was the same [:SENSE]:SWEep:TIME:AUTO:RULEs NORMAl ACCuracy so it still works although it now has a third parameter (SRESponse). The old Sweep Coupling command was [:SENSE]:SWEep:TIME:AUTO:MODE SRESponse SANalyzer and it is aliased as below:
Initial S/W Revision:	Prior to A.02.00

Help Map ID:

3276

More Information

The first set of rules is called **SA – Normal. Sweep Time Rules** is set to **SA-Normal** on a **Preset** or **Auto Couple**. These rules give optimal sweep times at a loss of accuracy. Note that this means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

Setting **Sweep Time Rules** to **SA-Accuracy** will result in slower sweep times than **SA-Normal**, usually about three times as long, but with better amplitude accuracy for CW signals. The instrument absolute amplitude accuracy specifications only apply when **Sweep Time** is set to **Auto**, and **Sweep Time Rules** are set to **SA-Accuracy**. Additional amplitude errors which occur when **Sweep Time Rules** are set to **SA-Normal** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **SA-Normal** is the preferred setting of **Sweep Time Rules**.

The third set of sweep time rules is called **Stimulus/Response** and is automatically selected when an integrated source is turned on, such as a Tracking Generator or a synchronized external source. The sweep times for this set of rules are usually much faster for swept-response measurements. Stimulus-response auto-coupled sweep times are typically valid in stimulus-response measurements when the system's frequency span is less than 20 times the bandwidth of the device under test. You can select these rules manually (even if not making Stimulus-Response measurements) which will allow you to sweep faster before the "Meas Uncal" warning comes on, but you are then not protected from the over-sweep condition and may end up with uncalibrated results. However, it is commonplace in measuring non-CW signals such as noise to be able to get excellent measurement accuracy at sweep rates higher than those required for CW signal accuracy, so this is a valid measurement technique.

Auto

Sets the analyzer to automatically choose the Sweep Time Rules for the measurement.

Key Path:	Sweep/Control, Sweep Setup, Sweep Time Rules
Remote Command:	[:SENSE] :SWEep:TIME:AUTO:RULEs:AUTO[:STATE] ON OFF 1 0 [:SENSE] :SWEep:TIME:AUTO:RULEs:AUTO[:STATE] ?
Example:	:SWE:TIME:AUTO:RUL:AUTO ON
Couplings:	Set on Preset or Auto Couple
Preset:	ON
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3277

SA - Normal

Chooses Sweep Time Auto Rules for optimal speed and generally sufficient accuracy.

Key Path:	Sweep/Control, Sweep Setup, Sweep Time Rules
Example:	:SWE:TIME:AUTO:RUL NORM

Sweep/Control

Dependencies:	Not available (grayed out) when Source Mode=Tracking.
Couplings:	Automatically selected unless Source is on If directly selected, sets AUTO to Off
Readback:	SA - Normal
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3278

SA - Accuracy

Chooses Sweep Time Auto Rules for specified absolute amplitude accuracy.

NOTE For specified accuracy, do not allow sweep time to fall below 20 ms when in SA - Accuracy

Key Path:	Sweep/Control, Sweep Setup, Sweep Time Rules
Example:	:SWE:TIME:AUTO:RUL ACC
Dependencies:	Not available (grayed out) when Source Mode=Tracking.
Couplings:	If directly selected, sets AUTO to Off
Readback:	SA - Accuracy
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3279

Stimulus/Response

The Stimulus-Response setting for sweep time rules provides different sweep time settings, for the case where the analyzer is sweeping in concert with a source. These modified rules take two forms:

1. Sweeping along with a swept source, which allows faster sweeps than the normal case because the RBW and VBW filters do not directly interact with the Span. We call this “Swept Tracking”
2. Sweeping along with a stepped source, which usually slows the sweep down because it is necessary to wait for the stepped source and the analyzer to settle at each point. We call this “Stepped Tracking”

The analyzer chooses one of these methods based on what kind of a source is connected or installed; it picks Swept Tracking if there is no source in use.

As always, when the X-series analyzer is in Auto Sweep Time, the sweep time is estimated and displayed in the Sweep/Control menu as well as in the annotation at the bottom of the displayed measurement; of course, since this can be dependent on variables outside the analyzer’s control, the actual sweep time may vary slightly from this estimate.

You can always choose a shorter sweep time to improve the measurement throughput, (with some potential unspecified accuracy reduction), but the Meas Uncal indicator will come on if the sweep time

you set is less than the calculated Auto Sweep time. You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters. The number of measurement points can also be reduced to speed the measurement (at the expense of frequency resolution).

Key Path:	Sweep/Control, Sweep Setup, Sweep Time Rules
Example:	:SWE:TIME:AUTO:RUL SRES
Couplings:	Automatically selected when the Source is on (Source Mode not set to OFF). If directly selected sets AUTO to Off
Readback:	SR
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3280

Sweep Type

Chooses between the FFT and Sweep types of sweep.

Sweep Type refers to whether or not the instrument is in Swept or FFT analysis. When in Auto, the selection of sweep type is governed by two different sets of rules, depending on whether you want to optimize for dynamic range or for speed.

FFT “sweeps” should not be used when making EMI measurements; therefore, when a CISPR detector (Quasi Peak, EMI Average, RMS Average) is selected for any active trace (one for which Update is on), the FFT key in the Sweep Type menu is grayed out, and the Auto Rules only choose Swept. If Sweep Type is manually selected to be FFT, the CISPR detectors are all grayed out.

FFT sweeps will never be auto-selected when Screen Video, Log Video or Linear Video are the selected Analog Output.

Key Path:	Sweep/Control, Sweep Setup
Remote Command:	[:SENSe] :SWEep:TYPE FFT SWEep [:SENSe] :SWEep:TYPE?
Dependencies:	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication. When Gate is on, Gate Method selection affects Sweep Type: Method FFT&Sweep menu FFT - Swept grayed out and rules choose FFT Video - FFT grayed out and rules choose Swept LO - FFT grayed out and rules choose Swept
Preset:	AUTO

Sweep/Control

Backwards Compatibility SCPI:	[:SENSe]:SWEep:TYPE AUTO sets sweep type Auto to On but the query will return either FFT or SWE depending on the auto setting. [:SENSe]:SWEep:TYPE SWP selects sweep type Swept but will return SWE on a query
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3281

Auto

When in Auto, the selection of sweep type is governed by two different sets of rules, depending on whether you want to optimize for dynamic range or for speed. These rules are chosen under the **Sweep Type Rules** key.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type
Remote Command:	[:SENSe] :SWEep:TYPE: AUTO OFF ON 0 1 [:SENSe] :SWEep:TYPE: AUTO?
Example:	:SWE:TYPE:AUTO ON
Couplings:	Pressing Auto Couple always sets Sweep Type to Auto. Swept is always chosen whenever any form of Signal ID is on, or the Source Mode is set to Tracking, or any EMI detector is selected, or the RF Preselector is ON.
Preset:	ON
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3282

Swept

Manually selects swept analysis, so it cannot change automatically to FFT.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type
Example:	SWE:TYPE SWE
Dependencies:	Grayed out while in Gated FFT (meaning Gate is ON and Gate Method is FFT). If this key is selected, the gate method Gated FFT is grayed out.
Couplings:	This selection is chosen automatically if any of the CISPR detectors is chosen for any active trace, in which case the FFT Sweep Type selection is also grayed out.
State Saved:	Saved in instrument state

Readback:	Swept
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3283

FFT

Manually selects FFT analysis, so it cannot change automatically to Swept.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type
Example:	SWE:TYPE FFT
Dependencies:	<p>When a CISPR detector (Quasi Peak, EMI Average, RMS Average) is selected for any active trace, the FFT key is grayed out.</p> <p>When the RF Preselector is on, the FFT key is grayed out.</p> <p>When Source Mode is set to Tracking, Manual FFT is grayed out.</p> <p>When Signal ID is on, Manual FFT is grayed out.</p> <p>Grayed out while in Gated LO (meaning Gate is ON and Gate Method is LO).</p> <p>Grayed out while in Gated Video (meaning Gate is ON and Gate Method is Video).</p>
State Saved:	Saved in instrument state
Readback:	FFT
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3284

Sweep Type Rules

Selects which set of rules will be used for automatically choosing the Sweep Type when Sweep Type is in Auto.

Key Path:	Sweep/Control, Sweep Setup
Remote Command:	<pre>[:SENSe] :SWEep:TYPE:AUTO:RULEs SPEed DRANge [:SENSe] :SWEep:TYPE:AUTO:RULEs?</pre>
Dependencies:	In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication.
Preset:	DRANge
State Saved:	Saved in instrument state
Backwards Compatibility Notes:	The legacy parameter DYNamicrange is unsupported
Initial S/W Revision:	Prior to A.02.00

Sweep/Control

Help Map ID:	3285
--------------	------

Auto

This selection is automatically chosen when Auto Couple is pressed. When in Auto, the Sweep Type Rules are set to Best Dynamic Range. It seems like a very simple Auto function but the use of this construct allows a consistent statement about what the Auto Couple key does.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type Rules
Remote Command:	[:SENSe] :SWEp:TYPE:AUTO:RULes:AUTO[:STATe] OFF ON 0 1 [:SENSe] :SWEp:TYPE:AUTO:RULes:AUTO[:STATe] ?
Example:	:SWE:TYPE:AUTO:RUL:AUTO ON
Couplings:	Pressing Auto Couple always sets Sweep Type Rules to Auto.
Preset:	ON
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3286

Best Dynamic Range

This selection tells the analyzer to choose between swept and FFT analysis with the primary goal of optimizing dynamic range. If the dynamic range is very close between swept and FFT, then it chooses the faster one. This auto selection also depends on RBW Type.

In determining the Swept or FFT setting, the auto rules use the following approach:

- If the RBW Filter Type is Gaussian use the RBW for the Normal Filter BW and if that RBW > 210 Hz, use swept; for RBW ≤ 210 Hz, use FFT
- If the RBW Filter Type is Flat Top, use the same algorithm but use 420 Hz instead of 210 Hz for the transition point between Swept and FFT
- If any of the CISPR detectors is chosen for any active trace, always use Swept.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type Rules
Example:	SWE:TYPE:AUTO:RUL DRAN sets the auto rules to dynamic range.
Couplings:	Directly selecting this setting sets AUTO to OFF.
Readback:	Dynamic Range
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3287

Best Speed

This selection tells the analyzer to choose between FFT or swept analysis based on the fastest analyzer

speed.

Key Path:	Sweep/Control, Sweep Setup, Sweep Type Rules
Example:	SWE:TYPE:AUTO:RUL SPE sets the rules for the auto mode to speed
Couplings:	Directly selecting this setting sets AUTO to OFF.
Readback:	Speed.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3288

FFT Width

This menu displays and controls the width of the FFT's performed while in FFT mode. The "FFT width" is the range of frequencies being looked at by the FFT, sometimes referred to as the "chunk width" -- it is not the resolution bandwidth used when performing the FFT.

It is important to understand that this function does not directly set the FFT width, it sets the limit on the FFT Width. The actual FFT width used is determined by several other factors including the Span you have set. Usually the instrument picks the optimal FFT Width based on the current setup; but on occasion you may wish to limit the FFT Width to be narrower than that which the instrument would have set.

NOTE This function does not allow you to widen the FFT Width beyond that which the instrument might have set; it only allows you to narrow it. You might do this to improve the dynamic range of the measurement or eliminate nearby spurs from your measurement.

Note that the **FFT Width** setting will have no effect unless in an FFT sweep.

See "[More Information](#)" on page 1211

Key Path:	Sweep/Control, Sweep Setup
Remote Command:	[:SENSe] :SWEep:FFT:WIDTh <real> [:SENSe] :SWEep:FFT:WIDTh?
Example:	SWE:FFT:WIDTh 167 kHz sets this function to "<167.4 kHz"
Notes:	The parameter is in units of frequency. For values sent from SCPI, the analyzer chooses the smallest value that is at least as great as the requested value. Examples: Parameter 3.99 kHz is sent over SCPI. Analyzer chooses 4.01 kHz Parameter 4.02 kHz is sent over SCPI. Analyzer chooses 28.81 kHz Parameter 8 MHz is sent over SCPI. Analyzer chooses 10 MHz

Sweep/Control

Dependencies:	<p>In some models, the analog prefilters are not provided. In these models the FFT Width function is always in Auto. The FFT Width key is blanked in these models, and the SCPI commands are accepted without error but have no effect.</p> <p>In Zero Span, this key is irrelevant and cannot be accessed (because the whole Sweep Setup menu is grayed out in Zero Span). However, its settings can be changed remotely with no error indication.</p>
Couplings:	The FFT Width affects the ADC Dither function (see Meas Setup key) and the point at which the instrument switches from Swept to FFT acquisition.
Preset:	The Preset is Auto, but Preset will also pick Best Dynamic Range and hence this function will be set to ~Maximum
State Saved:	Saved in instrument state
Min:	4.01 kHz
Max:	<p>The maximum available FFT width is dependent on the IF Bandwidth option. The maximum available width is:</p> <p>Option B10, 10 MHz;</p> <p>Option B25, 25 MHz,</p> <p>Option B40, 40 MHz.</p>
Backwards Compatibility SCPI:	<p>[:SENSe] :SWEEp :FFT :SPAN :RATio <integer></p> <p>[:SENSe] :SWEEp :FFT :SPAN :RATio?</p> <p>This is the legacy “FFTs per Span” command, because in the PSA, this is what you set rather than the FFT Width. The behavior of the analyzer when it receives this command is to compute the “intended segment width” by dividing the Span by the FFTs/Span parameter, then converting this intended width to an actual width by using the largest available FFT Width that is still less than the intended segment width. The “Span” used in this computation is whatever the Span is currently set to, whether a sweep has been taken at that Span or not.</p>
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3289

Key Path:	Sweep/Control, Sweep Setup
Remote Command:	<p>[:SENSe] :SWEEp :FFT :WIDTh :AUTO OFF ON 0 1</p> <p>[:SENSe] :SWEEp :FFT :WIDTh :AUTO?</p>
Example:	:SWE:FFT:WIDT:AUTO ON
Couplings:	Pressing Auto Couple always sets FFT Width to Auto.
Preset:	ON
State Saved:	Saved in instrument state

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

More Information

An FFT measurement can only be performed over a limited span known as the “FFT segment”. Several segments may need to be combined to measure the entire span. For advanced FFT control in the X-Series, you have direct control over the segment width using the **FFT Width** control. Generally, in automatic operation, the X-Series sets the segment width to be as wide as possible, as this results in the fastest measurements.

However, in order to increase dynamic range, most X-series models provide a set of analog prefilters that precede the ADC. Unlike swept measurements, which pass the signal through a bandpass before the ADC, FFT measurements present the full signal bandwidth to the ADC, making them more susceptible to overload, and requiring a lower signal level. The prefilters act to alleviate this phenomenon - they allow the signal level at the ADC to be higher while still avoiding an ADC overload, by eliminating signal power outside the bandwidth of interest, which in turn improves dynamic range.


Although narrowing the segment width can allow higher dynamic ranges some cases, this comes at the expense of losing some of the speed advantages of the FFT, because narrower segments require more acquisitions and proportionately more processing overhead.

However, the advantages of narrow segments can be significant. For example, in pulsed-RF measurements such as radar, it is often possible to make high dynamic range measurements with signal levels approaching the compression threshold of the analyzer in swept spans (well over 0 dBm), while resolving the spectral components to levels below the maximum IF drive level (about -8 dBm at the input mixer). But FFT processing experiences overloads at the maximum IF drive level even if the RBW is small enough that no single spectral component exceeds the maximum IF drive level. If you reduce the width of an FFT, an analog filter is placed before the ADC that is about 1.3 times as wide as the FFT segment width. This spreads out the pulsed RF in time and reduces the maximum signal level seen by the ADC. Therefore, the input attenuation can be reduced and the dynamic range increased without overloading the ADC.

Further improvement in dynamic range is possible by changing the **FFT IF Gain** (in the **Meas Setup** menu of many measurements). If the segments are reduced in width, **FFT IF Gain** can be set to High, improving dynamic range.

Depending on what IF Bandwidth option you have ordered, there can be up to three different IF paths available in FFT sweeps, as seen in the diagram below:

Sweep/Control

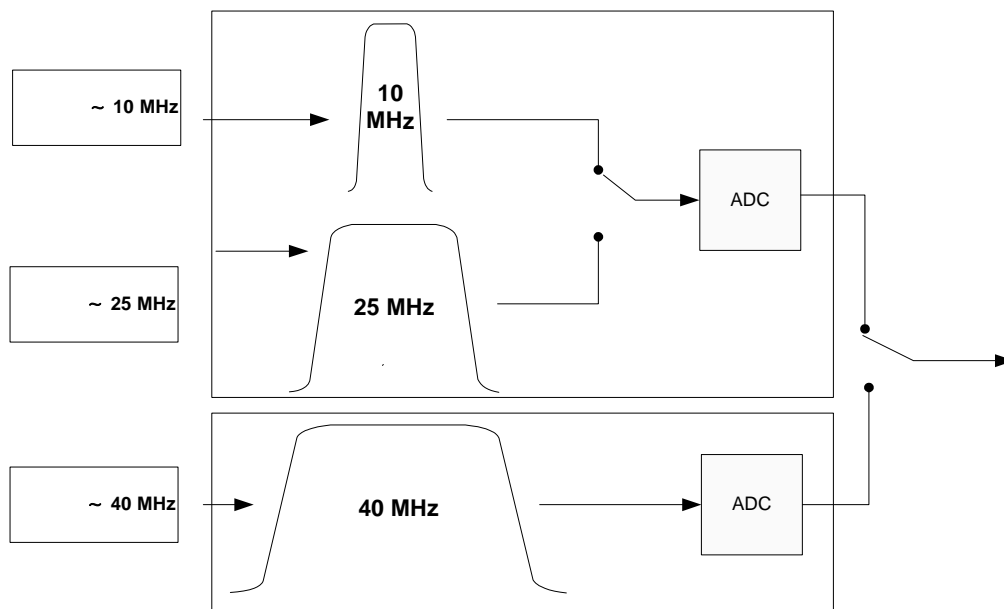

The 10 MHz path is always used for Swept sweeps. It is always used for FFT sweeps as well, unless the user specifies ~25 MHz in which case the 25 MHz path will be used for FFT sweeps, or ~40 MHz, in which case the 40 MHz path will be used for FFT sweeps. Note that, although each of these keys picks the specified path, the analyzer may choose an FFT width less than the full IF width, in order to optimize speed, trading off acquisition time versus processing time.

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement.

When you are Paused, pressing **Restart**, **Single** or **Cont** does a Resume.

Key Path:	Sweep/Control
Remote Command:	:INITiate:PAUSE
Dependencies:	Grayed out in Measurements that do not support Pausing. Blanked in Modes that do not support Pausing.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3290

Key Path:	Sweep/Control
Remote Command:	:INITiate:RESume
Dependencies:	Grayed out in Measurements that do not support Pausing. Blanked in Modes that do not support Pausing.

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Gate

Accesses a menu that enables you to control the gating function. The Gate functionality is used to view signals best viewed by qualifying them with other events.

Gate setup parameters are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

Note that Sweep Time autocoupling rules and annotation are changed by Gate being on.

Key Path:	Sweep/Control
Scope:	Meas Global
Readback:	The state and method of Gate, as [Off, LO] or [On, Video]. Note that for measurements that only support gated LO, the method is nonetheless read back, but always as LO.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3292

Gate On/Off

Turns the gate function on and off.

When the Gate Function is on, the selected Gate Method is used along with the gate settings and the signal at the gate source to control the sweep and video system with the gate signal. Not all measurements allow every type of Gate Methods.

When Gate is on, the annunciation in the measurement bar reflects that it is on and what method is used, as seen in the following "Gate: LO" annunciator graphic.



Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSe] :SWEep:EGATe [:STATe] OFF ON 0 1 [:SENSe] :SWEep:EGATe [:STATe] ?
Example:	SWE:EGAT ON SWE:EGAT?

Sweep/Control

Dependencies:	<p>The function is unavailable (grayed out) and Off when:</p> <ul style="list-style-type: none"> • Gate Method is LO or Video and FFT Sweep Type is manually selected. • Gate Method is FFT and Swept Sweep Type is manually selected. • Marker Count is ON. <p>The following are unavailable whenever Gate is on:</p> <ul style="list-style-type: none"> • FFT under Sweep Type when Method=LO or Video or Swept under Sweep Type when Method=FFT • Marker Count <p>While Gate is on, the Auto Rules for Sweep Type are modified so that the choice agrees with the Gate Method: i.e., FFT for Method = FFT and Swept for Method = LO or Video.</p> <p>The Gate softkey and all SCPI under the [:SENSE]:SWEep:EGATe SCPI node are grayed out when Source Mode is Tracking with an external source. This is because the Gate circuitry is used to sync the external source. If the Tracking Source is turned on, the Gate is turned off.</p> <p>When in the ACP measurement:</p> <ul style="list-style-type: none"> • When Meas Method is RBW or FAST, this function is unavailable and the key is grayed out. • Whenever Gate is on, Meas Method, RBW or FAST is unavailable and keys for those are grayed out. • When Gate is on, Offset Res BW and Offset Video BW are ignored (if you set these values) and the measurement works as if all Offset Res BW and all Offset Video BW are coupled with the Res BW and the Video BW under the BW menu. When Gate is on, the Offset BW key in the Offset/Limit menu is grayed out.
Preset:	Off
State Saved:	Saved in instrument state
Range:	On Off
Backwards Compatibility SCPI:	[:SENSE]:SWEep:TIME:GATE[:STATe] ESA compatibility
Backwards Compatibility Notes:	In ESA, Trig Delay (On) and Gate (On) could not be active at the same time.. This dependency does not exist in PSA or in the X-Series.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3293

Gate View On/Off

Turning on Gate View in the Swept SA measurement provides a single-window gate view display..

Turning on Gate View in other measurements shows the split-screen Gate View. In these measurements, when the Gate View is on, the regular view of the current measurement traces and results are reduced vertically to about 70% of the regular height. The Zero Span window, showing the positions of the Gate, is shown between the Measurement Bar and the reduced measurement window. By reducing the height

of the measurement window, some of the annotation on the Data Display may not fit and is not shown.

Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSe] :SWEep:EGATe:VIEW ON OFF 1 0 [:SENSe] :SWEep:EGATe:VIEW?
Example:	SWE:EGAT:VIEW ON turns on the gate view.
Dependencies:	In the Swept SA measurement: In Gate View, the regular Sweep Time key is grayed out . When pressed, the grayed out key puts up the informational message "Use Gate View Sweep Time in the Gate menu." In the other measurements: When you turn Gate View on, the lower window takes on the current state of the instrument. Upon leaving Gate View, the instrument takes on the state of the lower window. When you turn Gate View on, the upper window Sweep Time is set to the gate view sweep time.
Couplings:	These couplings apply to the Swept SA measurement: <ul style="list-style-type: none"> • When Gate View is turned on, the instrument is set to Zero Span. • Gate View automatically turns off whenever a Span other than Zero is selected. • Gate View automatically turns off if you press the Last Span key while in Gate View, and the instrument returns to the Span it was in before entering Gate View (even if that is Zero Span). • When Gate View is turned on, the sweep time used is the gate view sweep time. This is set according to the rules in section "Gate View Setup" on page 1217 • When Gate View is turned off, Sweep Time is set to the normal Swept SA measurement sweep time. • If Gate View is on and Gate is off, then turning on Gate turns off Gate View.
Preset:	OFF
State Saved:	Saved in instrument state
Range:	On Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3810

A sample of the Gate View screen in the Swept SA measurement is shown in the following graphic :

Sweep/Control



A sample of the Gate View screen in other measurements is shown in the following graphic . This example is for the ACP measurement:



Turning Gate View off returns the analyzer to the Normal measurement view.

In the Swept SA, the normal measurement view is the single-window Swept SA view. When returning to this view, the Swept SA measurement returns to the Span it was in before entering **Gate View** (even if that is Zero Span).

The **Gate View** window is triggered from the Gate Source, with zero trigger delay. Also, when updating the **Gate View** window, the Gate itself must not operate. So it is internally shut off while the gate view window is being updated. For the Swept SA measurement, this means that the Gate is internally shut off whenever the gate view window is displayed. The measurement bar and softkeys continue to show the Trigger source for the main sweep window and give no indication that the Gate is shut off or that the Gate View window is triggered from the Gate Source.

When in **Gate View**, vertical lines are displayed in the Gate View window as follows:

- Green lines are displayed at the gate edges as follows: in Edge Gate, a line is shown for Delay and one for the end of the Gate period (defined by Length, even in FFT. In Level Gate a line is shown only for Delay. You can adjust the position of the green lines by adjusting the gate length and the gate delay. These lines update in the Gate View window as the active function changes, even if the window is not being updated. In Gated LO and Gated Video, these lines are positioned relative to the delay reference line (not relative to 0 time). In Gated FFT, their location is relative to the left edge of the screen.
- A blue line is displayed showing the delay reference, that is, the reference point for the Gate Delay within the Zero Span window. The blue line represents where (in time) the effective location of the gate start would be if the gate were programmed to zero delay.
- The second blue line is labeled "MIN FAST" as shown in the figure above because it represents the minimum Gate Delay for fast Gated LO operation. This line is only displayed in Gated LO. You cannot scroll (knob) or decrement (down key) the Gate Delay to less than that represented by the position of this line, it can only be set below this position manually, although once there it can be moved freely with the knob while below the line.
- A yellow line in the Gated Video case only, is displayed at B_{length} , where B_{length} is the display point (bucket) length for the swept trace, which is given by the sweep time for that trace divided by number of Points – 1. So it is referenced to 0 time, not to the delay reference. This line is labeled NEXT PT (it is not shown in the figure above because the figure above is for Gated LO). The yellow line represents the edge of a display point (bucket). Normally in Gated Video, the bucket length must be selected so that it exceeds the off time of the burst. There is another way to use the analyzer in Gated Video measurements, and that is to set the bucket width much shorter than the off time of the burst. Then use the Max Hold trace function to fill in "missing" buckets more slowly. This allows you to see some of the patterns of the Gated Video results earlier, though seeing a completely filled-in spectrum later.

Gate View Setup

Accesses a menu that enables you to setup parameters relevant to the Gate View

Key Path:	Sweep/Control, Gate
Scope:	Meas Global
Initial S/W Revision:	A.10.00

Sweep/Control

Help Map ID: 4038

Gate View Sweep Time

Controls the sweep time in the Gate View window. To provide an optimal view of the gate signal, the analyzer initializes Gate View Sweep Time based on the current settings of Gate Delay and Gate Length.

Key Path:	Sweep/Control, Gate, Gate View Setup
Remote Command:	[:SENSE] :SWEep:EGATe:TIME <time> [:SENSE] :SWEep:EGATe:TIME?
Example:	SWE:EGAT:TIME 500 ms
Dependencies:	Gate View Sweep Time is initialized: <ul style="list-style-type: none">• On Preset (after initializing delay and length).• Every time the Gate Method is set/changed. Additionally, in the Swept SA measurement, whenever you do a Preset, or leave Gate View, the analyzer remembers the Gate Delay and Gate Length settings. Then, when returning to Gate View, if the current Gate Delay and/or Gate Length do not match the remembered values Gate View Sweep Time is re-initialized. <ol style="list-style-type: none">1. Compute the location of the "gate stop" line, which you know is at time $t = t_{\min} + \text{GateDelay} + \text{GateLength}$.
Preset:	519.3 μ s WiMAX OFDMA: 5 ms GSM/EDGE: 1 ms
State Saved:	Saved in instrument state
Min:	1 μ s
Max:	6000 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3305

Gate View Start Time

Controls the time at the left edge of the Gate View.

Key Path:	Sweep/Control, Gate, Gate View Setup
Remote Command:	[:SENSE] :SWEep:EGATe:VIEW:STARt <time> [:SENSE] :SWEep:EGATe:VIEW:STARt?
Example:	SWE:EGAT:VIEW:STAR 10ms

Notes:	Units of time are required or no units; otherwise an invalid suffix error message will be generated. See error –131.
Preset:	0 ms
State Saved:	Saved in instrument state
Min:	0
Max:	500 ms
Initial S/W Revision:	A.10.00
Help Map ID:	4039

Gate Delay

Controls the length of time from the time the gate condition goes True until the gate is turned on.

Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSE] :SWEep:EGATe:DELay <time> [:SENSE] :SWEep:EGATe:DELay?
Example:	SWE:EGAT:DELay 500ms SWE:EGAT:DELay?
Notes:	Units of time are required or no units; otherwise an invalid suffix error message will be generated.
Preset:	57.7 us WiMAX OFDMA: 71 us GSM/EDGE: 600 us
State Saved:	Saved in instrument state
Min:	0.0 us
Max:	100 s
Backwards Compatibility SCPI:	[:SENSe] :SWEep:TIME:GATE:DELay ESA compatibility
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3298

Gate Length

Controls the length of time that the gate is on after it opens.

Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSE] :SWEep:EGATe:LENGth <time> [:SENSE] :SWEep:EGATe:LENGth?

Sweep/Control

Example:	SWE:EGAT:LENG 1 SWE:EGAT:LENG?
Notes:	Units of time are required or no units; otherwise an invalid suffix error message will be generated.
Dependencies:	<p>Grayed out when Gate Method is set to FFT in which case the label changes to that shown below.</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p>Gate Length (=1.83/RBW) 2.8 ms</p> </div> <p style="margin-left: 20px;">vsd 39-1</p> <p>The key is also grayed out if Gate Control = Level.</p>
Preset:	461.6 us WiMAX OFDMA: 50 us GSM/EDGE: 200 us
State Saved:	Saved in instrument state
Min:	100 ns
Max:	5 s
Backwards Compatibility SCPI:	[:SENSe]:SWEep:TIME:GATE:LENGth ESA compatibility
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3299

Method

This lets you choose one of the three different types of gating.

Not all types of gating are available for all measurements.

Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSe]:SWEep:EGATe:MEthod LO VIDeo FFT [:SENSe]:SWEep:EGATe:MEthod?
Example:	SWE:EGAT:METH FFT
Preset:	LO
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3300

LO

When Gate is set to On, the LO sweeps whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating is more sophisticated, and results in faster measurements. With Gated LO, the analyzer only sweeps while the gate conditions are satisfied. This means that a sweep could take place over several gate events. It would start when the gate signal goes true and stop when it goes false, and then continue when it goes true again. But since the LO is sweeping as long as the gate conditions are satisfied, the sweep typically finishes much more quickly than with Gated Video.

When in zero span, there is no actual sweep performed. But data is only taken while the gate conditions are satisfied. So even though there is no sweep, the gate settings will impact when data is acquired.

Key Path:	Sweep/Control, Gate, Method
Dependencies:	Key is unavailable when Gate is On and FFT Sweep Type manually selected. When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out.
Readback:	LO
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3301

Video

When Gate is set to On, the video signal is allowed to pass through whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating may be thought of as a simple switch, which connects the signal to the input of the spectrum analyzer. When the gate conditions are satisfied, the switch is closed, and when the gate conditions are not satisfied, the switch is open. So we only look at the signal while the gate conditions are satisfied.

With this type of gating, you usually set the analyzer to sweep very slowly. In fact, a general rule is to sweep slowly enough that the gate is guaranteed to be closed at least once per data measurement interval (bucket). Then if the peak detector is used, each bucket will represent the peak signal as it looks with the gate closed.

Key Path:	Sweep/Control, Gate, Method
Dependencies:	Key is unavailable when Gate is On and FFT Sweep Type manually selected. When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out
Readback:	Video
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3302

FFT

When Gate is set to On, an FFT is performed whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source. This is an FFT measurement which begins when the gate conditions are satisfied. Since the time period of an FFT is approximately $1.83/\text{RBW}$, you get a measurement that starts under predefined conditions and takes place over a predefined period. So, in

Sweep/Control

essence, this is a gated measurement. You have limited control over the gate length but it works in FFT sweeps, which the other two methods do not.

Gated FFT cannot be done in zero span since the instrument is not sweeping. So in zero span the Gated LO method is used. Data is still only taken while the gate conditions are satisfied, so the gate settings do impact when data is acquired.

The Gate Length will be $1.83/\text{RBW}$.

This is a convenient way to make a triggered FFT measurement under control of an external gating signal.

Key Path:	Sweep/Control, Gate
Dependencies:	Key is unavailable when Gate is On and Swept Sweep Type is manually selected. Key is unavailable when gate Control is set to Level. When selected, Sweep Type is forced to FFT and the Swept key in Sweep Type is grayed out Forces Gate Length to $1.83/\text{RBW}$
Readback:	FFT
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3303

Gate Source

The menus under the **Gate Source** key are the same as those under the **Trigger key**, with the exception that neither **Free Run** nor **Video** are available as Gate Source selections. However, a different SCPI command is used to select the Gate Source (see table below) because you may independently set the Gate Source and the Trigger Source.

Any changes to the settings in the setup menus under each **Gate Source** selection key (for example: **Trigger Level, Trigger Delay, etc**) also affect the corresponding settings under the **Trigger** menu keys. The SCPI commands used for these are the same for Trigger and Gate, since there is only one setting which affects both Gate and Trigger. Example: to set the Trigger Level for External 1 you use the command `:TRIG:EXT1:LEV` regardless of whether you are using External 1 as a Trigger Source or a Gate Source.

Key Path:	Sweep/Control, Gate
Remote Command:	<code>[:SENSE] :SWEep:EGATE:SOURce EXTernal1 EXTernal2 LINE FRAME RFBurst [:SENSE] :SWEep:EGATE:SOURce?</code>
Dependencies:	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a "Hardware missing; Not available for this model number" error.

Preset:	EXTernal 1 GSM/EDGE: FRAME
Backwards Compatibility Notes:	In ESA, there is a single Gate input port. In PSA, the Gate Source may be taken from one of two specified input ports. In the X-Series, any Trigger Source can be a Gate Source.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3304

Control Edge/Level

Sets the method of controlling the gating function from the gating signal.

Edge

In Edge triggering, the gate opens (after the Delay) on the selected edge (for example, positive) of the gate signal and closes on the alternate edge (for example, negative).

Level

In Level triggering, the gate opens (after the Delay) when the gate signal has achieved a certain level and stays open as long as that level is maintained.

Key Path:	Sweep/Control, Gate
Remote Command:	[:SENSe] :SWEep:EGATe:CONTRol EDGE LEVEl [:SENSe] :SWEep:EGATe:CONTRol?
Example:	SWE:EGAT:CONT EDGE
Dependencies:	If the Gate Method is FFT the Control key is grayed out and Edge is selected. If the Gate Source is TV, Frame or Line, the Control key is grayed out and Edge is selected.
Preset:	EDGE
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	[:SENSe]:SWEep:TIME:GATE:TYPE ESA Compatibility
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3295


Gate Holdoff

Lets you increase or decrease the wait time after a gate event ends before the analyzer will respond to the next gate signal.

After any Gate event finishes, the analyzer must wait for the sweep system to settle before it can respond to another Gate signal. The analyzer calculates a "wait time," taking into account a number of factors, including RBW and Phase Noise Optimization settings. The goal is to achieve the same accuracy when

Sweep/Control

gated as in ungated operation. The figure below illustrates this concept:

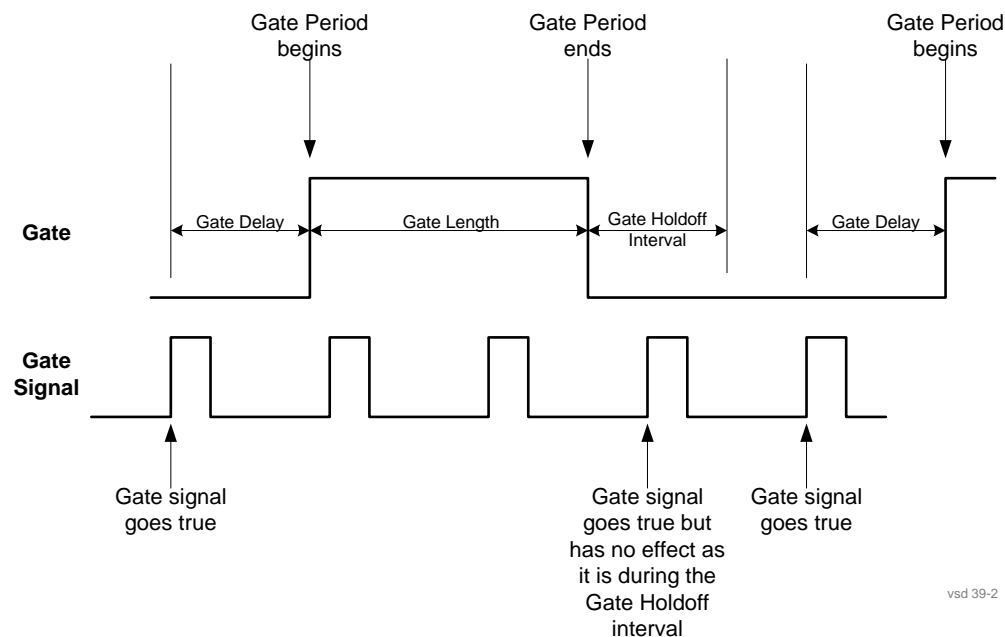

When Gate Holdoff is in Auto, the wait time calculated by the analyzer is used. When Gate Time is in Manual, the user may adjust the wait time, usually decreasing it in order to achieve greater speed, but at the risk of decreasing accuracy.

When the **Method** key is set to **Video** or **FFT**, the **Gate Holdoff** function has no effect.

In measurements that do not support Auto, the value shown when Auto is selected is “---” and the manually set holdoff is returned to a query.

Key Path:	Sweep/Control, Gate
Remote Command:	<pre>[:SENSe] :SWEep:EGATe:HOLDoff <time> [:SENSe] :SWEep:EGATe:HOLDoff? [:SENSe] :SWEep:EGATe:HOLDoff:AUTO OFF ON 0 1 [:SENSe] :SWEep:EGATe:HOLDoff:AUTO?</pre>
Example:	<pre>SWE:EGAT:HOLD 0.0002 SWE:EGAT:HOLD? SWE:EGAT:HOLD:AUTO ON SWE:EGAT:HOLD:AUTO?</pre>

Couplings:	<p>When Gate Holdoff is Auto, the Gate Holdoff key shows the value calculated by the analyzer for the wait time.</p> <p>Pressing the Gate Holdoff key while it is in Auto and not selected, causes the key to become selected and allows the user to adjust the value. If the value is adjusted, the setting changes to Man.</p> <p>Pressing the Gate Holdoff key, while it is in Auto and selected, does not change the value of Gate Holdoff, but causes the setting to change to Man. Now the user can adjust the value.</p> <p>Pressing the key while it is in Man and selected, cause the value to change back to Auto.</p> <p>Pressing the key while it is in Man and not selected, causes the key to become selected and allows the user to adjust the value.</p> <p>When Method is set to Video or FFT, the Gate Holdoff function has no effect.</p>
Preset:	Auto Auto/On
State Saved:	Saved in instrument state
Min:	1 μ sec
Max:	1 sec
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3567

Gate Delay Compensation

This function allows you to select an RBW-dependent value by which to adjust the gate delay, to compensate for changes in the delay caused by RBW effects.

You can select between uncompensated operation and two types of compensation, **Delay Until RBW Settled** and **Compensate for RBW Group Delay**.

See [“More Information” on page 1226](#)

Key Path:	Sweep/Control, Gate
Scope:	Meas Global
Remote Command:	[:SENSE]:SWEep:EGATe:DElay:COMPensation:TYPE OFF SETTled GDElay [:SENSE]:SWEep:EGATe:DElay:COMPensation:TYPE?
Example:	SWE:EGAT:DEL:COMP:TYPE SETT SWE:EGAT:DEL:COMP:TYPE?

Sweep/Control

Notes:	<p>Although this function is Meas Global, there are some measurements that do not support this function. In those measurements the operation will be Uncompensated. Going into one of those measurements will not change the Meas Global selection; it will simply display the grayed-out menu key with “Uncompensated” showing as the selection. This is a non-forceful grayout, so the SCPI command is still accepted.</p> <p>If Gate Delay Compensation is not supported at all within a particular mode, the key is not displayed, and if the SCPI command is sent while in a measurement within that mode, an “Undefined Header” message is generated.</p> <p>Measurements that do not support this function include:</p> <p>Swept SA</p>
Preset:	<p>TD-SCDMA mode: Compensate for RBW Group Delay</p> <p>All other modes: Delay Until RBW Settled</p>
State Saved:	Saved in instrument state
Range:	Uncompensated Delay Until RBW Settled Compensate for RBW Group Delay
Readback text:	Uncompensated Settled Group Delay
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.11.0
Help Map ID:	29882

More Information

Selecting **Uncompensated** means that the actual gate delay is as you sets it.

Selecting **Delay Until RBW Settled** causes the gate delay to be increased above the user setting by an amount equal to $3.06/\text{RBW}$. This compensated delay causes the GATE START and GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change.

Delay Until RBW Settled allows excellent measurements of gated signals, by allowing the IF to settle following any transient that affects the burst. Excellent measurements also require that the analysis region not extend into the region affected by the falling edge of the burst. Thus, excellent measurements can only be made over a width that declines with narrowing RBWs, which is achieved by decreasing the gate length below the user setting by an amount equal to $2.53/\text{RBW}$. Therefore, for general purpose compensation, you will still want to change the gate length with changes in RBW even if the gate delay is compensated. The compensated Gate Length is limited by the analyzer so that it will never go below 10% of the value shown on the Gate Length key, as otherwise the sweep times could get very long. Anytime the **Gate Length and RBW** values combine in such a way that this limiting takes place, a warning is displayed . For measurements which contain multiple sweeps with different RBW like SEM and SPUR, the smallest RBW is used for this limiting.

Selecting **Compensate for RBW Group Delay** causes the gate delay to be increased above the user

setting by an amount equal to $1.81/\text{RBW}$. This compensated delay causes the GATE START, GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change. **Compensate for RBW Group Delay** also includes gate length compensation; the gate length itself is adjusted as necessary to attempt to compensate for delay effects imposed by the RBW.

Compensate for RBW Group Delay is similar to **Delay Until RBW Settled**, but compensates for the group delay of the RBW filter, rather than the filter settling time. As the RBW gets narrow, this can allow the settling tail of the RBW to affect the beginning part of the gated measurement, and allow the beginning of the RBW settling transient to affect the end of the gated measurement. These two effects are symmetric because the RBW response is symmetric. Because the gate length is not automatically compensated, some users might find this compensation to be more intuitive than compensation for RBW settling.

Min Fast Position Query (Remote Command Only)

This command queries the position of the MIN FAST line, relative to the delay reference (REF) line. See section “[Gate View On/Off](#)” on page 1214. If this query is sent while not in gate view, the MinFast calculation is performed based on the current values of the appropriate parameters and the result is returned. Knowing this value lets you set an optimal gate delay value for the current measurement setup.

Remote Command:	[:SENSE] :SWEep:EGATe:MINFast?
Example:	SWE:EGAT:MIN?
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Gate Preset (Remote Command Only)

Presets the time-gated spectrum analysis capability.

This command sets gate parameter values to the ESA preset values, as follows:

Gate trigger type = edge

Gate polarity = positive

Gate delay = 1 us

Gate length = 1 us

Remote Command:	[:SENSE]:SWEep:TIME:GATE:PRESet ESA Compatibility
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Gate Level (Remote Command Only)

Sets the gate input transition point level for the external TRIGGER inputs on the front and rear panel. This is a legacy command for PSA compatibility. It is simply an alias to the equivalent trigger level

Sweep/Control

command.

Remote Command:	<code>[:SENSe] :SWEep:EGATe:EXTeRnal [1] 2:LEVe1 <voltage></code> <code>[:SENSe] :SWEep:EGATe:EXTeRnal [1] 2:LEVe1?</code>
Notes:	This command is simply an alias to <code>:TRIGger[:SEQuence]:EXTeRnal[1] 2:LEVe1</code> For details refer
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Gate Polarity (Remote Command Only)

Sets the polarity for the gate signal. This setup is now done using the gate trigger's slope setting.

When Positive (Pos) is selected, a positive-going edge (Edge) or a high voltage (Level) will satisfy the gate condition, after the delay set with the Gate Delay key. When Negative (Neg) is selected, a negative-going edge (Edge) or a low voltage (Level) will satisfy the gate condition after the delay.

Remote Command:	<code>[:SENSe] :SWEep:EGATe:POLarity NEGative POSitive</code> <code>[:SENSe] :SWEep:EGATe:POLarity?</code>
Example:	<code>SWE:EGAT:POL NEG</code> <code>SWE:EGAT:POL?</code>
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	<code>[:SENSe] :SWEep:TIME:GATE:POLarity</code> ESA compatibility
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	<code>[:SENSe] :SWEep:TIME:GATE:LEVe1 HIGH LOW</code> <code>[:SENSe] :SWEep:TIME:GATE:LEVe1?</code> ESA compatibility
Preset:	HIGH
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more

points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time; however, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the analyzer. The sweep time resolution will change. Trace data for all the traces will be cleared and, if Sweep is in Cont, a new trace taken. If any trace is in average or hold, the averaging starts over.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message is displayed, "Sweep points changed, all traces cleared."

Key Path:	Sweep/Control
Remote Command:	[:SENSe] :SWEep:POINts <integer> [:SENSe] :SWEep:POINts?
Example:	SWE:POIN 5001 SWE:POIN?
Dependencies:	<ul style="list-style-type: none"> • This function is not available when signal identification is set to On in External Mixing • Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given. • Clipped to 1001 whenever you are in the Spectrogram View in all models but MXE, clipped to 20001 whenever you are in the Spectrogram View in MXE • Grayed out in measurements that do not support swept. Forceful message -221.3200 • Blanked in modes that do not support Swept • Grayed out if Normalize is on; you can't change the number of sweep points with Normalize on, as it will erase the reference trace.

Sweep/Control

Couplings:	<ul style="list-style-type: none">When Source Mode is set to Tracking, and Stepped Tracking is used (as with option ESC), 201 source steps are used to achieve optimal speed. The number of sweep points in the analyzer is then set to match the number of steps in the source. When Source Mode is set to Off, the previous number of points (the value that existed when Source Mode was Off previously) is restored, even if the user has changed the Points value while the Source Mode was set to Tracking.Whenever the number of sweep points change:<ul style="list-style-type: none">All trace data is erasedAny traces with Update Off will also go to Display Off (like going from View to Blank in the older analyzers)Sweep time is re-quantizedAny limit lines that are on will be updatedIf averaging/hold is on, averaging/hold starts over
Preset:	1001
State Saved:	Saved in instrument state
Min:	Normally the minimum is 1, but in Tracking Source Mode, the minimum value of Points is 101. If you go into Tracking Source Mode with fewer points than 101, it sets Points to 101.
Max:	40001 when not in Tracking Source mode In Tracking Source mode: <ul style="list-style-type: none">in Stepped Tracking (e.g., External Source), 1601 or the maximum number of points supported by the source, whichever is lessin Swept Tracking (e.g., Tracking Generator), 10000
Backwards Compatibility Notes:	<ol style="list-style-type: none">In ESA and PSA, Sweep Points was adjustable with the knob and step keys. This caused the sweep time to increase whenever Points was adjusted (either up or down), due to excessive application of the quantization rules. In the X-Series the value of Sweep Points must be entered manually, which avoids this anomalyIn ESA the preset value of Sweep Points is 401, in PSA it is 601. In X-Series it is 1001.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.11.00
Help Map ID:	3306

Zoom Points

In the Trace Zoom View of the Swept SA measurement, the Points key changes to Zoom Points whenever the focus (thick green border) is on the bottom window. Zoom Points controls how many

points are displayed in the Zoom Window and hence indirectly controls the Zoom Span.

Key Path:	Sweep/Control
Remote Command:	[:SENSE] :SWEep:TZOom:POINTs <integer> [:SENSe] :SWEep:TZOom:POINTs?
Example:	SWE:TZO:POIN 5001
Dependencies:	Only appears in the Trace Zoom View of the Swept SA measurement. If the SCPI command is sent in other Views, gives an error.
Couplings:	Zoom Points is coupled to Zoom Span and Sweep Points; if Zoom Span changes, Zoom Points will change but Sweep Points will not; if Sweep Points changes, Zoom Points will change but Zoom Span will not. Zoom Span is directly coupled to Zoom Points; if Zoom Points changes, Zoom Span will change but Sweep Points will not.
Preset:	On entry to Trace Zoom, 10% of the number of points in the upper window.
State Saved:	Saved in instrument state
Min:	1
Max:	Number of points in top window
Initial S/W Revision:	A.07.01
Help Map ID:	4035

Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning when ABORt is sent, the alignment finishes before the abort function is performed. So ABORt does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command:	:ABORt
Example:	:ABOR
Notes:	If :INITiate:CONTinuous is ON, then a new continuous measurement will start immediately; with sweep (data acquisition) occurring once the trigger condition has been met. If :INITiate:CONTinuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement; with sweep (data acquisition) occurring once the trigger condition has been met.

Sweep/Control

Dependencies:	For continuous measurement, ABORt is equivalent to the Restart key. Not all measurements support the abort command.
Status Bits/OPC dependencies:	The STATus:OPERation register bits 0 through 8 are cleared. The STATus:QUEStionable register bit 9 (INTegrity sum) is cleared. Since all the bits that feed into OPC are cleared by the ABORt, the ABORt will cause the *OPC query to return true.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Trace/Detector

The **Trace/Detector** menu lets you control the acquisition, display, storage, detection and manipulation of trace data for the six available traces. The first page of this menu contains a selection of the trace type (**Clear Write, Trace Average, Max Hold, Min Hold**) for the selected trace. Those choices are described here.

A trace is a series of data points, each having an x and a y value. The x value is usually frequency (or time) and the y value is amplitude. Each data point is referred to as a trace point. In any given trace, trace point 0 is the first point, and trace point (sweep_points – 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is bucket. A bucket is the frequency span before and after the trace point equal to the point spacing. The y value is measured across (during) this bucket.

For more information see:

[“Trace Update Indicator” on page 1234](#)

[“Trace Annotation” on page 1235](#)

Key Path	Trace/Detector
Remote Command	:TRACe [1] 2 3 4 5 6 :TYPE WRITE AVERAge MAXHold MINHold :TRACe [1] 2 3 4 5 6 :TYPE?
Notes	WRITE = Clear Write AVERAge = Trace Average MAXHold = Maximum Hold MINHold = Minimum Hold
Couplings	Sending a trace command does not cause the specified trace to become selected. Selecting a trace type (pressing any of the four keys or sending a TRAC :TYPE command) puts Update in On and Display in On , even if that trace type was already selected.
Preset	Write. During normal operation of the instrument (that is, other than at power up), after a mode preset is performed, all active traces are cleared. This is so their domains and initial x values will match the current X-axis of the test set. Inactive traces are not cleared after a preset, so a trace which is in Update = On before a preset, and in Update = Off after the preset, will still have the data that it had before the preset.
State Saved	The type of each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3311

Trace/Detector


Trace Update Indicator

Trace updates can take one of two forms:

The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace.

The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This is the case for slow sweeps, multi-chunk FFT's, et cetera.

In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written, a green "caret" or ^ symbol, which moves across the bottom of the graticule showing the current trace point.

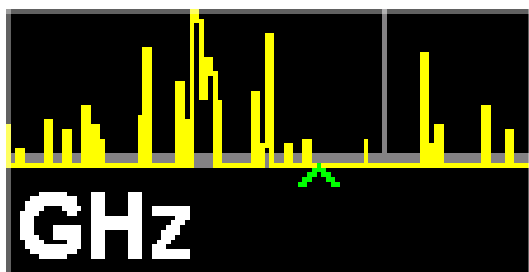

Trace Annunciator Panel

The trace annunciator panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel:



On the line labeled "TRACE", each trace number is shown, in the trace color. A green box is drawn around the currently selected trace

Below each trace number, on the line labeled "TYPE", is a letter signifying the trace type for that trace number, where

- W = Clear Write
- A = Trace Average
- M = Max Hold
- m = Min Hold

If the letter is white it means the trace is being updated (**Update = On**); if the letter is dimmed, it means the trace is not being updated (**Update = Off**). A strike through (for example, ~~W~~) indicates that the trace is blanked (**Display = Off**). Note that it is possible for a trace to be updating and blanked, which is useful if the trace is a trace math component.

The third line, labeled "DET", shows the detector type for each trace, or, if trace math is on for that trace,

it shows an “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the test set hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are:

N = Normal
A = Average
P = peak
p = negative peak
S = Sample
Q = Quasi Peak
E = EMI Average
R = RMS Average
f = math function

If the DET letter is green it means the detector is in Auto; if it is white it means the detector has been manually selected.

Trace Annotation

When Trace Annotation (see View/Display menu) is On, each non-blanked trace is labeled on the trace with the detector used to take it, unless a trace math function is on for that trace, in which case it is labeled with the math function.

The detector labels are:

NORM = Normal
PEAK = Peak
SAMP = Sample
NPEAK = Negative Peak
RMS = Average detector with Power Average (RMS)
LG AVG = Average detector with Log-Pwr Average
VAVG = Average detector with Voltage Average
QPEAK = Quasi Peak
EMI AVG = EMI Average
RMS AVG = RMS Average

The trace math labels are:

PDIF = Power Difference
PSUM = Power Sum
LOFF = Log Offset
LDIF = Log Difference

Select Trace

Determines which trace the type control keys will affect. Press **Trace** until the number of the desired

Trace/Detector

trace is underlined.

Key Path	Trace
Preset	Trace 1
State Saved	The number of the selected trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3314

Clear Write

In **Clear Write** type each trace update replaces the old data in the trace with new data. Pressing the **Clear Write** key for the selected trace, or sending the TRAC:TYPE WRIT command for the specified trace, sets the trace type to **Clear Write** and causes the trace to be cleared. Then a new sweep is initiated.

Because pressing **Clear Write** stops the current sweep and initiates a new one, **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep, and may not accurately reflect the displayed count. Therefore, when **Clear Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear Write**, if a measurement-related instrument setting is changed, a new sweep is initiated but the trace is not cleared.

Key Path	Trace/Detector
Example	TRAC:TYPE WRIT
Notes	See “Trace/Detector” on page 1233 .
Couplings	Whenever you press Clear Write or send the equivalent SCPI command, Update is set to On and Display is set to On . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections
Preset	After a Preset, any trace that is in Clear Write is cleared (all trace points set to mintracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3315

Trace Average

In **Trace Average** type the test set maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data. Details of the averaging calculations may be found under [“Average/Hold Number” on page 941](#) and [“Average Type” on page 942](#) in the Meas Setup Section.

See “Trace Averaging: More Information” on page 1237.

Key Path	Trace/Detector
Example	TRAC2:TYPE AVER
Notes	See “Trace/Detector” on page 1233.
Couplings	Affected by Average Type and Average/Hold Number Whenever you press Trace Average or send the equivalent SCPI command, Update is set to On and Display is set to On . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	after a Preset, any trace that is in Trace Average is cleared (all trace points set to mintracevalue).
State Saved	the type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3316

Trace Averaging: More Information

Pressing the **Trace Average** key (for the selected trace), or sending the TRAC:TYPE AVER command (for the specified trace), sets the trace type to **Trace Average** and causes the average to be restarted.

When in **Trace Average**, if a measurement-related instrument setting is changed, the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

The average/hold count k is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data

A new sweep is initiated.

Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

Max Hold

In **Max Hold** type the test set maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data.

Pressing the **Max Hold** key for the selected trace, or sending the :TRAC:TYPE MAXH command for the specified trace, sets the trace type to **Max Hold**, causes the trace to be cleared, and causes the **Max Hold** sequence to be restarted.

When in **Max Hold**, if a measurement-related instrument setting is changed, the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Trace/Detector

Restarting the **Max Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

Key Path	Trace/Detector
Example	TRAC4:TYPE MAXH
Notes	See “Trace/Detector” on page 1233 .
Couplings	Affected by Average Type and Average/Hold Number Whenever you press Max Hold or send the equivalent SCPI command, Update is set to On and Display is set to On . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	After a Preset, any trace that is in Max Hold is cleared (all trace points set to mintracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3317

Min Hold

In **Min Hold** type the test set maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under [“Average/Hold Number” on page 941](#) in the Meas Setup Section.

Pressing the **Min Hold** key for the selected trace, or sending the TRAC:TYPE MINH command for the specified trace, sets the trace type to **Min Hold**, causes the trace to be cleared, and causes the **Min Hold** sequence to be restarted.

When in **Min Hold**, if a measurement-related instrument setting is changed, the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, as there is only one count for Trace Average and Hold.

Key Path	Trace/Detector
----------	-----------------------

Example	TRAC3:TYPE MINH
Notes	See “Trace/Detector” on page 1233 ”.
Couplings	Affected by Average Type and Average/Hold Number . Whenever you press Min Hold or send the equivalent SCPI command, Update is set to On and Display is set to On . Automatic detector selection and the VBW:RBW ratio auto rules both depend on the trace type selections.
Preset	After a Preset, any trace that is in Min Hold is cleared (all trace points set to maxtracevalue).
State Saved	The type for each trace is saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	3318

View/Blank

This key lets you set the state of the two trace variables, Update and Display. The four choices available in this 1-of-N menu are:


Trace On: Update and Display both On

View: Update Off and Display On

Blank: Update Off and Display Off

Background: Update On, Display Off (this allows a trace to be blanked and continue to update “in the background”, which was not possible in the past)

A trace with Display Off is indicated by a strikethrough thru the type letter in the trace annotation panel in the Measurement bar. A trace with Update Off is indicated by dimming the type letter in the trace annotation panel in the Measurement bar. So in the example below, Traces 3, 4, 5 and 6 have Update Off and Traces 4 and 6 have Display Off.

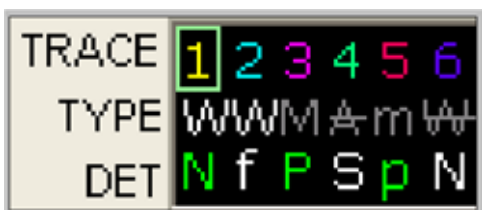

See [“Trace Update State On/Off” on page 1241](#).

See [“Trace Display State On/Off” on page 1241](#).

See [“More Information” on page 1241](#).

Key Path	Trace/Detector
----------	----------------

Trace/Detector

Notes	<p>The four states of this 1-of-N actually set two variables, Update and Display, to their four possible combinations:</p> <p>Trace On: Update and Display both On</p> <p>View: Update Off and Display On</p> <p>Blank: Update Off and Display Off</p> <p>Background: Update On, Display Off</p> <p>See tables below for detail on the SCPI to control these two variables.</p>
Couplings	<p>Selecting a trace type (Clear Write, Trace Average, Max Hold, Min Hold) for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in Trace On (Update On and Display On), even if that trace type was already selected.</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts the trace in Trace On (Update On and Display On), even if that detector was already selected.</p> <p>Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in Trace On (Update On and Display On), even if that math mode was already selected.</p> <p>Loading a trace from a file puts that trace in View regardless of the state it was in when it was saved; as does being the target of a Copy or a participant in an Exchange.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3319

Trace Update State On/Off

Key Path	Trace/Detector
Remote Command	:TRACe [1] 2 3 4 5 6 :UPDate [:STATe] ON OFF 0 1 :TRACe [1] 2 3 4 5 6 :UPDate [:STATe] ?
Example	TRAC2:UPD 0 Makes trace 2 inactive (stops updating)
Couplings	Whenever you set Update to On for any trace, the Display is set to On for that trace.
Preset	1 0 0 0 0 0 (On for Trace 1; Off for 2–6)
State Saved	Saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

Trace Display State On/Off

Key Path	Trace/Detector
Remote Command	:TRACe [1] 2 3 4 5 6 :DISPlay [:STATe] ON OFF 0 1 :TRACe [1] 2 3 4 5 6 :DISPlay [:STATe] ?
Example	TRAC2:DISP,1 Makes trace 2 visible TRAC3:DISP,0 Blanks trace 3
Couplings	Whenever you set Update to On for any trace, the Display is set to On for that trace.
Preset	1 0 0 0 0 0 (On for Trace 1; Off for 2–6)
State Saved	Saved in Instrument State
Initial S/W Revision	Prior to A.02.00
Help Map ID	0

More Information

When a trace becomes inactive, the following things happen:

Any update from the SENSE system (detectors) immediately stops (does not wait for end of sweep)

the trace is displayed at half intensity (as long as it stays inactive)

Inactive traces display across the entire X-axis of the instrument. Their horizontal placement does not change even if X-axis settings subsequently are changed, although Y-axis settings will affect the vertical placement of data.

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

Trace/Detector

if data is written to that trace from remote

if trace data is loaded from mass storage

if the trace is the target of a Copy or participant in an Exchange

if the trace is cleared using the Clear Trace function (below)

When a trace becomes active (Update = On), the trace is cleared, the average count is reset, and a new sweep is initiated.

Traces which are blanked (Display = off) do not display nor appear on printouts but are otherwise unaffected. They may be queried and markers may be placed on them.

Note that the action of putting a trace in Display = Off and/or Update = Off does not restart the sweep and does not restart Averaging or Hold functions for any traces.

Note also that whenever you set **Update** to **On** for any trace, **Display** is set to **On** for that trace.

Detector

Selects a detector. The detector selected is then applied to the selected trace.

For the SCPI UI, two commands are provided. One is a legacy command, which affects all traces. There is also a command which is new for the X-Series, which uses a subopcode to specify to which trace the specified detector is to be applied.

The three detectors on the second page of the Detector menu, Quasi Peak, EMI Average, and RMS Average, are referred to collectively as the “CISPR detectors” because their behaviors are specified by the CISPR 16–1–1 specification.

See [“More Information” on page 1244](#)

Key Path	Trace/Detector, Detector
Remote Command	<code>[:SENSe] :DETECTOR:TRACe [1] 2 3 4 5 6 AVERage NEGative NORMal POSitive SAMPlE QPEak EAverage RAverage [:SENSe] :DETECTOR:TRACe [1] 2 3 4 5 6?</code>
Example	<code>DET:TRAC AVER -- Sets trace 1's detector to average DET:TRAC1 AVER -- Sets trace 1's detector to average DET:TRAC2 SAMP -- Sets trace 2's detector to sample</code>
Notes	When a detector selection is made, the menu returns to the previous menu. Selecting any CISPR detector on any active trace sets the EMI Standard to CISPR.

Notes	<p>The query returns a name that corresponds to the detector type as shown below, and indicates the setting for Trace 1.</p> <p>String ReturnedDefinition</p> <p>NORM = Normal</p> <p>AVER = Average / RMS</p> <p>POS = Positive peak</p> <p>SAMP = Sample</p> <p>NEG = Negative peak</p> <p>QPE = Quasi Peak</p> <p>EAV = EMI Average</p> <p>RAV = RMS Average</p>
Dependencies	<p>When Tune & Listen is turned on, or Demod Audio is the selected Analog Output:</p> <ul style="list-style-type: none"> all active traces are forced to use the same detector. CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable <p>CISPR detectors are grayed out when you have manually selected FFT sweep. Conversely, if any CISPR detector is selected on an active trace, the auto rules for sweep type will never select FFT, and manual FFT selection is grayed out.</p> <p>If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.</p>
Couplings	<p>The auto detector rules depend upon marker type, averaging state and type, trace state writing mode, and trace active state.</p> <p>If the Avg Type is in Auto, and any of the CISPR detectors is selected on any active trace, the Voltage Averaging type is auto-selected.</p>
Preset	Preset returns all traces to “auto”, which will result in Normal (Rosenfell) detection for all traces.
State Saved	Saved in State
Initial S/W Revision	Prior to A.02.00
Modified at S/W Revision	A.02.00
Help Map ID	3321
Remote Command:	<pre>[:SENSE] :DETector [:FUNCTION] NORMAL AVERAGE POSitive SAMPLE NEGative QPEak EAverage EPOSitive MPOSitive RMS [:SENSE] :DETector [:FUNCTION] ?</pre>
Example:	<p>DET AVER Sets detector to average for all traces</p> <p>DET:FUNC? Returns trace 1’s detector setting</p>

Trace/Detector

Notes:	<p>This is a SCPI only legacy command to preserve the classic functionality wherein all traces are affected when a detector is selected.</p> <p>The query returns a name that corresponds to the detector type as shown below, and indicates the setting for Trace 1.</p> <p>The RMS selection sets the detector type to AVERage and the Average Type to RMS. Therefore if RMS has been selected, the query will return the "AVER" string.</p> <p>The EPOS selection sets the detector type to Peak and the EMI Standard to CISPR. A query will then return POS</p> <p>The MPOS selection sets the detector type to Peak and the EMI Standard to MIL Impulse. A query will then return POS</p> <p>The RAV parameter is not included in the command because this is not a legacy detector; nonetheless, if it happens to be the detector on Trace 1 then RAV is returned.</p> <p>String ReturnedDefinition</p> <p>NORM Normal</p> <p>AVER Average / RMS</p> <p>POS Positive peak</p> <p>SAMP Sample</p> <p>NEG Negative peak</p> <p>QPE Quasi Peak</p> <p>EAV EMI Average</p> <p>RAV RMS Average</p>
Preset:	NORMal
State Saved:	Saved in State
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00
Help Map ID:	3322

More Information

The available detectors are:

The Sample detector indicates the instantaneous level of the signal at the center of the bucket represented by each display point.

The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.

The Average detector determines the average of the signal within the bucket. The averaging method depends upon Average Type selection (voltage, power or log scales).

The Peak detector determines the maximum of the signal within the bucket.

The Negative Peak detector determines the minimum of the signal within the bucket.

The Quasi-Peak detector is a fast-rise, slow-fall detector used in making CISPR compliant EMI measurements.

The EMI-Average detector provides a standard means to “smooth” the signal while still providing compliance to CISPR pulse response standards. It displays the average value of the amplitude envelope, rather than the average value of sample-detected amplitude, and uses an advanced algorithm to realize a lowpass filter that conforms to the latest CISPR standard.

The RMS Average detector is a frequency dependent RMS or Averaging filter, used in making CISPR compliant EMI measurements, which performs one averaging process (in the VBW hardware) on the "power" (a.k.a. RMS) scale, and another process on the voltage scale using a "meter movement simulator". This filter conforms to the 2007 revision of the CISPR 16–1–1 standard.

Because they may not find a spectral component's true peak, neither average nor sample detectors measure amplitudes of CW signals as accurately as peak or normal, but they do measure noise without the biases of peak detection.

When the Detector choice is Auto, the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

When you manually select a detector (instead of selecting Auto), that detector is used regardless of other test set settings.

Multiple Detectors

The test set always provides the requested detector on the specified trace. Depending on the detectors requested the test set can provide up to three different detectors simultaneously, within the constraints of its digital processing algorithms. Some detectors utilize more resources; the Quasi-Peak detector, for example, utilizes most of the digital IF's resources, and the hardware in some test sets is incapable of providing another detector when Quasi-Peak is on. If the limit of system resources is exceeded, detectors on some existing traces may be forced to change. When this happens, they change to match the detector just requested, and a message is generated: “Detector <X> changed due to physical constraints”, where X might contain multiple values.

Example: User has traces 1, 2, and 3 with Peak, Average, and Negative Peak. User specifies QPD for trace 1. Traces 2 and 3 also change to QPD and we generate the message “Detector 2,3 changed due to physical constraints”. Now all three traces have the QPD.

Auto

This sets the detector for the currently selected trace to Auto. (For SCPI, the trace number is specified as a subopcode.) This will immediately apply the auto rules to determine a new detector value.

Key Path	Trace/Det, Detector
Remote Command	[:SENSE] :DETector:TRACe [1 2 3 4 5 6 :AUTO ON OFF 1 0 [:SENSE] :DETector:TRACe [1 2 3 4 5 6 :AUTO?
Example	DET:TRACE2:AUTO ON sets trace 2 detection to automatic.

Trace/Detector

Dependencies	The auto detector rules depend upon marker type, averaging state and type, trace state writing mode, and trace active state.
Couplings	Selecting AUTO, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.
Preset	Auto (On) for all detectors.
State Saved	Saved in state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3323

Remote Command:	[:SENSe] :DETEctor:AUTO ON OFF 1 0 [:SENSe] :DETEctor:AUTO?
Example:	DET:AUTO ON
Notes:	SCPI only. Turns AUTO on or off for ALL detectors. This is a legacy command to preserve the classic functionality wherein all traces are affected when a detector is addressed
Notes:	The query returns the Auto state of Trace 1.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Normal

This sets the detector for the current selected trace to Normal (Rosenfell).

When the signal is CW-like, it displays the peak-detected level in the interval (bucket) being displayed. If the signal is noise-like (within a bucket the signal both rose and fell), it alternates displaying the max/min values. That is, an even bucket shows the peak (maximum) within a two-bucket wide interval centered on the even bucket. And an odd bucket will show the negative peak (minimum) within a two-bucket wide interval. For example, for an even bucket the two-bucket wide interval is a combination of one-half bucket to the left of the even bucket, the even bucket itself, and one-half bucket to the right of the even bucket, so the peak found is displayed in the correct relative location on screen. The odd buckets are similar.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 NORM sets the detector to normal for trace 3.
Dependencies	Selecting any detector (even the currently selected detector) for a given trace turns Update and Display on for that trace. Normal detector is grayed out when the X scale is Log.

Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts Update On and Display On for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3324

Average (Log/RMS/V)

For each bucket (interval) in the trace, Average detection displays the average of the amplitude within the bucket using one of the following averaging methods:

Log power (also known as video)

Power (also known as RMS)

Voltage envelope

To explicitly set the averaging method, use the **Meas Setup, Average Type** key. When you are using average detection with the Power method is equivalent to what is sometimes referred to as “RMS detection”. The detailed information about the different types of averaging is found in **Average Type** in the **Meas Setup** key menu.

Key Path	Trace/Det, Detector
Example	DET:TRAC3 AVER sets the detector to average for trace 3.
Notes	<p>For the specific case of a customer wanting RMS detection, they need to set the averaging type to RMS, and also select average detection for the trace:</p> <pre>AVER:TYPE RMS DET:TRAC AVER</pre>
Dependencies	Selecting any detector (even the currently selected detector) for a given trace turns Update and Display on for that trace.

Trace/Detector

Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts Update On and Display On for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p> <p>The VBW filter is not used for this detector, so varying the VBW will have no effect for any traces for which this detector is selected (other than to slow down the sweep, because of the coupling to Sweep Time of VBW). If the only traces which are active are traces for which VBW does not apply (traces with Average, EMI Average, RMS Average or Quasi Peak detectors), then the VBW annotation shows “---” on the front panel, although still returns the current value of VBW to a SCPI query.</p> <p>Use of the Average detector affects the VBW setting because of its effect on the VBW/RBW coupling. See the BW section under the key ““Video BW” on page 773”.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3325

Peak

For each bucket (interval) in the trace, Peak detection displays the highest amplitude within the bucket.

Peak detection is used for CW measurements and some pulsed-RF measurements. For FFT analysis, the highest amplitude across the frequency width of a bucket is displayed, even if that peak amplitude falls between samples of the spectrum computed in the FFT process.

Key Path	Trace/Det, Detector
Example	DET:TRAC2 POS sets the detector to peak for trace 2.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts Update On and Display On for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3326

Sample

The sample detector displays the instantaneous level of the signal at the center of the bucket (interval) represented by each trace point.

Sample detection is good for displaying noise or noise-like signals.

Sample detection is not the best for making amplitude measurements of CW-like signals for two reasons. First, the peak response to a signal can occur between samples. So unless the Span to RBW ratio is lower than usual, then the highest sample can be well below the peak signal amplitude. Second, for the high sweep rates normally used, the peak response of the RBW filters is up to -0.5 dB. This sweeping error is compensated when using the peak and normal detectors by changing the overall gain. But the gain is not changed when in the sample detector, because doing so would cause errors in the response to noise. Instead, the auto-couple rules for sweep time are modified to give slower sweeps.

Key Path	Trace/Det, Detector
Example	DET:TRAC SAMP selects the Sample detector for trace 1.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts Update On and Display On for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3327

Negative Peak

For each bucket (interval) in the trace, Negative Peak detection displays the lowest sample within the bucket. Negative peak detection is similar to peak detection, but selects the minimum video signal.

Key Path	Trace/Det, Detector
Example	DET:TRAC2 NEG selects the negative peak detector for trace 2.
Couplings	<p>Selecting a specific detector type turns “Auto” to false for this trace (manual).</p> <p>Selecting a detector for a trace (pressing the key or sending a [:SENS]:DET:TRAC command) puts Update On and Display On for that trace, even if that detector was already selected. Note that the legacy command [:SENS]:DET[:FUNC] does NOT exhibit this behavior.</p> <p>Selecting a detector, whether by pressing the key or sending the equivalent SCPI command, will turn trace math to Off for the selected/specified trace.</p>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3328

Preset Detectors

The keys in this menu provide a quick way of setting a number of traces to convenient common detector settings. It is important to point out that these are not toggles or ‘modes’, and do not keep any detectors in a particular configuration. The effect is identical to just setting the traces’ detectors individually.

Trace/Detector

These are simply one-time settings that are quicker than making many individual changes.

Dependencies	When you have manually selected FFT sweep, the Detector Preset choices that contain any CISPR detectors, are grayed out. If the grayed out key is pressed, an advisory message is generated. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning.
Preset	No interaction with preset
State Saved	Not saved in state
Initial S/W Revision	Prior to A.02.00
Help Map ID	3333

All Traces Auto

This is designed to quickly return the selected set of detectors to the “preset” state, which is auto-selected.

Couplings	Sets all traces’ Detector Auto to true.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3334

Peak / Average / NPeak

This is a setting for making a measurement of the average power and the signal envelope.

Couplings	Trace 1: Set to peak detection, and Clear-Write. Trace 2: Set to average detection, and Clear-Write. Trace 3: Set to negative peak detection, and Clear-Write.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3335

Peak / Sample / NPeak

This is a setting for making a measurement that displays a power sample and the signal envelope.

Couplings	Trace 1: Set to peak detection, and Clear-Write. Trace 2: Set to sample detection, and Clear-Write. Trace 3: Set to negative peak detection, and Clear-Write.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3336

Clear Trace

Clears the selected trace (from the front panel) or the specified trace (from SCPI). Does not affect the state of any function or variable in the instrument. Loads mintracevalue into all of the points in the selected trace, unless the trace is in Min Hold in which case it loads maxtracevalue. It does this even if Update = Off.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
Remote Command	:TRACe:CLEAr TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6
Example	TRAC:CLE TRACE1 clears trace 1
Initial S/W Revision	Prior to A.02.00
Help Map ID	3339

Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads mintracevalue into all of the points all traces, except traces in Min Hold in which case it loads maxtracevalue. Does so even if Update = Off.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
Remote Command	:TRACe:CLEAr:ALL
Example	TRAC:CLE:ALL clears all traces
Initial S/W Revision	Prior to A.02.00
Help Map ID	3340

Math

This menu lets you turn on trace math functions. Trace math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a trace math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the **Trace Operands** key.

See [“Math: More Information” on page 1253](#).

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
----------	-----------------------

Trace/Detector

Remote Command	<pre> :CALCulate:MATH TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , PDifference PSUM LOFFset LDifference OFF , TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , <real> , <real> :CALCulate:MATH? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 </pre>
Notes	<p>The lower level menu, which contains an embedded 1-of-N, does not auto-return when a selection is made.</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> - Set 1 defines the “result trace”: TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 -Set 2 defines the “function”: PDifference PSUM LOFFset LDifference OFF - Set 3 is a “trace operand” (1): TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 - Set 4 is a “trace operand” (2): TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 - Set 5 defines the “Log Offset” (in dB). - Set 6 defines the “Log Difference Reference” (in dBm). <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace it turns off any math function that is on for that trace and sets the new math function.</p> <p>The parameters sent in the command are reflected in the values in the key menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter error.</p> <p>Note that for some of the math modes some of the parameters are not relevant. For those modes, the parameters are ignored, and sending “,” is sufficient for those parameters.</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas. The return value of irrelevant parameters is undefined; empty fields (“,”) would be desirable.</p> <p>Remote command examples are included in each section below.</p>
Dependencies	<p>Trace Math is not available if Normalize is on.</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands a warning is generated and the function does not turn on.</p>
Couplings	<p>Whenever a math function is turned on for a trace, that trace is set to Display = On and Update = On.</p>

Preset	OFF,TRACE5,TRACE6,0,0 OFF,TRACE6,TRACE1,0,0 OFF,TRACE1,TRACE2,0,0 OFF,TRACE2,TRACE3,0,0 OFF,TRACE3,TRACE4,0,0 OFF,TRACE4,TRACE5,0,0
State Saved	The trace math function for each trace is saved in Instrument State.
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep
Initial S/W Revision	Prior to A.02.00
Help Map ID	3341

Math: More Information

IMPORTANT: to generate a trace math result, you must take a sweep. The trace math engine, described below, operates in concert with the sweep engine in the test set. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated. Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

A trace clear taking place

A trace being loaded from the file system

Trace data being sent in from the remote interface


A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

How trace math is processed:

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and average/hold functions, and presenting it to the user as trace data, consists of several functional blocks, as shown below:

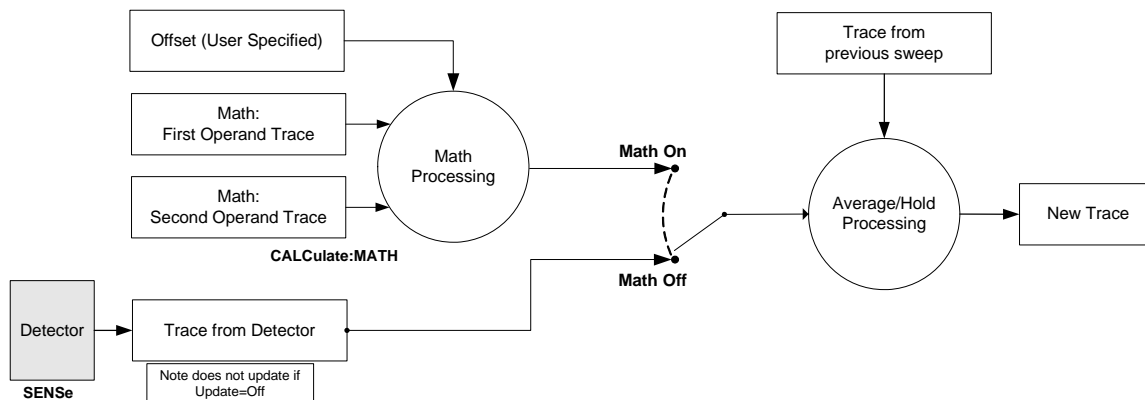

For each active trace, the current trace point is processed for Trace 1, then Trace 2, then Trace 3, et

Trace/Detector

cetera. Trace data is taken from either the detector for that trace, or from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is Average, Max Hold, or Min Hold) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for Trace 1, Trace 2 is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is on for Trace 4, and its operand traces are Trace 2 and Trace 3, all detector, math, average and hold processing for traces 2 and 3 is complete before the math is performed for trace 4. When the current trace point is completed for all traces, the test set moves on to the next trace point.

Power Diff (Op1-Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in FirstTrace is equal to maxtracevalue, the resultant point is also maxtracevalue.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is mintracevalue.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,PDIF,TRACE4,TRACE5,, sets Trace 1 to Power Diff trace math function, and sets the First Trace operand (for Trace 1) to Trace 4 and the Second Trace operand (for Trace 1) to Trace 5.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View (Update On and Display On), even if that math mode was already selected.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3342

Power Sum (Op1+Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.:

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to maxtracevalue, the resultant point is also maxtracevalue.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1, PSUM, TRACE4, TRACE5, , sets Trace 1 to Power Sum trace math function and sets the First Trace operand (for Trace 1) to Trace 4 and the Second Trace operand (for Trace 1) to Trace 5.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View (Update On and Display On), even if that math mode was already selected.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3343

Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older test sets. The offset is entered as the active function. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.:

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to maxtracevalue, the resultant point is also maxtracevalue.

If a point in the trace operand is equal to mintracevalue, the resultant point is also mintracevalue.

Example: If offset is 25 dB, then our destination trace is higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1, LOFF, TRACE4, , -6.00, sets Trace 1 to Log Offset trace math function, sets the First Trace operand (for Trace 1) to Trace 4, leaves the Second Trace operand (for Trace 1) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 1) to -6 dB.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View (Update On and Display On), even if that math mode was already selected.
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

Trace/Detector

Initial S/W Revision	Prior to A.02.00
Help Map ID	3344

Log Diff (Op1-Op2+Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older test sets. The reference is entered as the active function. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

Example: If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace is -15 dBm.

Example: If the first operand trace1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace is 45 dBuV.

See “[More Information](#)” on page 1256.

Key Path	Trace/Detector, Math
Example	:CALC:MATH TRACE1,LDIF,TRACE4,TRACE5,,-6.00 sets Trace 1 to Log Diff trace math function, sets the First Trace operand (for Trace 1) to Trace 4, sets the Second Trace operand (for Trace 1) to Trace 5, and sets the Log Difference reference for Trace 1 to -6 dBm.
Couplings	Selecting a math mode other than Off for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in View (Update On and Display On), even if that math mode was already selected.
State Saved	The Log Difference reference value for each trace is saved in Instrument State
Min	Same as reference level
Max	Same as reference level
Default Unit	depends on the current selected Y axis unit
Initial S/W Revision	Prior to A.02.00
Help Map ID	3345

More Information

If a point in FirstTrace is equal to maxtracevalue, the resultant point is also maxtracevalue.

If a point in FirstTrace is equal to mintracevalue, the resultant point is also mintracevalue.

If neither of the above is true for a given point, then:

If that point in SecondTrace is equal to maxtracevalue, the resultant point is mintracevalue.

If that point in SecondTrace is equal to mintracevalue, the resultant point is maxtracevalue.

Off

Turns off Trace Math.

Key Path	Trace/Detector, Math
Example	CALC:MATH TRACE1 OFF turns off trace math for trace 1.
Notes	See Trace "Math".
State Saved	The current trace math function is saved in Instrument State
Readback	Off
Initial S/W Revision	Prior to A.02.00
Help Map ID	3346

Operands

Selects the trace operand(s) to be used for the trace math functions for the destination trace.

Key Path	Trace, Math
Notes	The operands of the trace math commands specify the trace operands. Since the operands are common to all math functions for a given trace, the most recently sent math function command sets the operands for each trace and are reflected on the trace operand keys.
Dependencies	The destination trace cannot be an operand.
Readback line	In square brackets, the First Trace operand, new line, and the second trace operand, as: [Op1 = Trace 1, Op2 = Trace2] where Trace 1 is operand 1 and Trace 2 is operand 2.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3347

Operand 1

Selects the first trace operand to be used for the trace math functions for the destination trace.

Key Path	Trace, Math, Trace Operands
Dependencies	The First Trace cannot be the same as the destination trace. The destination trace number is gray on the key, and the underline skips that number when selecting the trace.

Trace/Detector

Preset	Trace number – 2 (wraps at 1). For example, for Trace 1, the First Trace presets to Trace 5; for Trace 6, it presets to Trace 4.
State Saved	The First Trace operand for each trace is stored in instrument state.
Readback	Trace <trace number>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3348

Operand 2

Selects the second trace operand to be used for the trace math functions for the destination trace.

Key Path	Trace, Math, Trace Operands
Dependencies	The Second Trace cannot be the same as the destination trace. The destination trace number is gray on the key, and the underline skips that number when selecting the trace.
Preset	Trace number – 1 (wraps at 1). For example, for Trace 1, the Second Trace presets to Trace 6; for Trace 6, it presets to Trace 5.
State Saved	The Second Trace operand for each trace is stored in instrument state
Readback	Trace <trace number>
Initial S/W Revision	Prior to A.02.00
Help Map ID	3349

Normalize

Displays menu keys that let you normalize trace data.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

Key Path	Trace/Detector
Readback	[On] or [Off]
Initial S/W Revision	Prior to A.02.00
Help Map ID	3350

Normalize On/Off

Normalize (On) activates the normalize function. On each sweep, the normalized trace (Trace 3) is subtracted from Trace 1 and the result is added to the normalized reference level. This arithmetic assumes all values are in decibel units, so we are actually taking a ratio.

This key only appears in the Normal View. It does not appear when in the Spectrogram View.

See “[More Information](#)” on page 1259.

See “Normalize Block Diagram” on page 1260.

Key Path	Trace/Detector, Normalize
Remote Command	:CALCulate:NTData[:STATe] OFF ON 0 1 :CALCulate:NTData[:STATe]?
Example	CALC:NTD ON CALC:NTD?
Dependencies	<ul style="list-style-type: none"> If Normalize (On) is pressed before Store Ref (1 3), an error message is generated. Normalize remains off in this case. Normalize is not available (grayed out) if any Trace Math function is on.
Couplings	When Normalize is turned on, Trace 1 is placed in Clear/Write with Update = On and Display = On.
Preset	OFF
State Saved	Saved in Instrument State.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3351

More Information

First the following calculation is performed:

$$\text{Trace 1} = (\text{Trace 1D} - \text{Normalized Trace})$$

Where:

Trace 1D is the measured value of trace 1, as it comes from the SENSE subsystem.

Normalized Trace is Trace 3, in which you have previously stored a reference trace

All values are in decibel units.

This Trace 1 contains the values that are returned from a trace query, or if the marker is placed on the trace.

For example, let's say bucket 1 on Trace 1 is at 0 dBm, and bucket 1 on Trace 3 is at 10 dBm. The resultant bucket is at $0 \text{ dBm} - 10 \text{ dBm} = -10 \text{ dB}$ (just like with a delta marker).

You are also given the ability to define what (dB) value to use for Ref Level, and to define where on the screen the Ref Lvl line will appear using Normalized Reference Position. This flexibility in displaying the result allows a wide range of devices, including amplifiers, to be tested using Normalize.

In the example above, bucket 1 has the value of -10 dB . Let us assume you have set Norm Ref Lvl to 5 dB. Thus bucket 1 will display 1.5 divisions below the Reference Level line (assuming 10 dB per division).

The Reference Level line is normally the top line of the graticule. If Norm Ref Posn is set to 10, this is the case. If it is set to 9, it is the next line down. If it is set to 5, it is the middle line of the graticule. If set to 0 it is the bottom line.

Trace/Detector

So in the example above, if Norm Ref Posn is set to 9, then bucket 1 will display 2.5 divisions below the top line of the graticule.

None of the manipulations of Norm Ref Posn and Norm Ref Lvl affect the data in the trace.


As Normalize displays a ratio between two traces (a difference, in dB) the Y-Axis Unit while in Normalize is dB in Log Amplitude and dimensionless in Linear. The Y-axis unit chosen in the Y-axis unit menu is unaffected by Normalize. When you leave Normalize the Y-axis unit returns to the value set in the Y-axis unit menu. While in Normalize, all amplitude functions, such as Marker Y and the values in other traces, should be always in db unit, and so should the returned trace query results. In other words, both trace query result and marker Y become independent of the Y-axis unit chosen in the Y-axis unit menu when normalize is on.

(In Linear, the equivalent calculation is performed but it yields a dimensionless ratio, so the normalized reference level is unitless, presetting to 1, just as in Log it presets to 0 dB).

Y-axis annotation is blanked while in Normalize. Any other traces on the display are plotted in dB, where the dB value used is equivalent to the dBm value of the trace. For example, if bucket 1 in trace 2 is at -40 dBm, that bucket is plotted at -40 dB. All traces use Norm Ref Lvl and Norm Ref Posn for positioning on the display. When Normalize exits, the normal Ref Lvl is restored. This normal Ref Level is unaffected by Normalize.

Normalize Block Diagram

A block diagram showing how Normalize works is presented below:

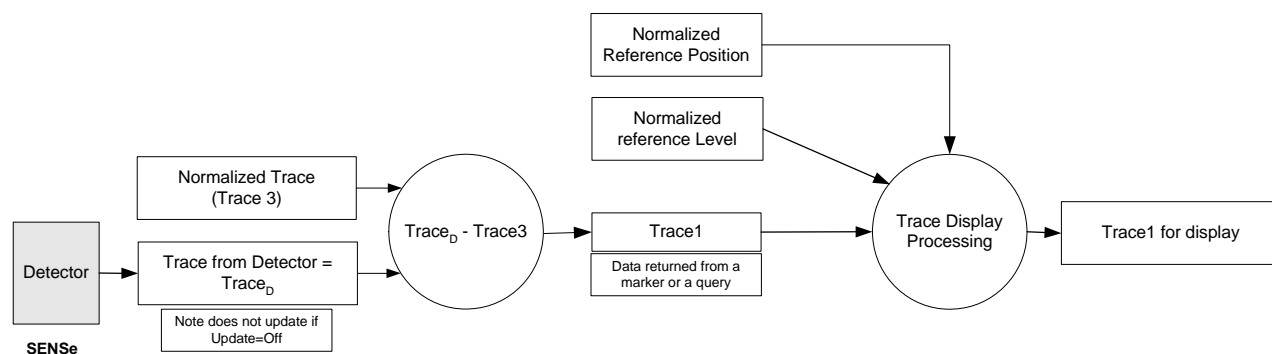

The normalize function is most useful for applying correction data to a trace while making a stimulus-response measurement with a tracking generator (or synchronized source). For example, connect the cables and a through line, in place of the device to be measured, between the tracking generator and the test set input. Notice that the frequency response is not perfectly flat, showing the response of the cables, as well as the flatness of both the tracking generator and the test set. Now press Store Ref (1 3), Normalize On. Notice that the displayed trace is now flat, or normalized. The position of the normalized trace can now be moved to a different position on the display by changing the normalized reference position. This may be useful if the device to be tested has positive gain, such as an amplifier. Now replace the through line with the device under test, and an accurate measurement of the gain or loss can be made.

Store Ref (1 -> 3)

Copies trace 1 into trace 3. Store Ref (1 3) must be pressed before pressing Normalize (On). Note that

this puts Trace 3 in Update = Off (not updating) and Display = On (visible).

Key Path	Trace/Detector, Normalize
Notes	There is no remote command for this function, however the trace copy command can be used for this purpose.
Dependencies	<ul style="list-style-type: none"> If Normalize (On) is pressed before Store Ref (1 3), an error message is generated. Normalize remains off in this case.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3352

Show Ref Trace (Trace 3)

Views or blanks the reference trace on the display. The reference trace is trace 3, so this is the same as setting Trace 3's "Display" attribute.

Key Path	Trace/Detector, Normalize
Example	TRAC3:DISP 1 shows the reference trace.
Notes	Use the TRAC3:DISP command to show or blank the reference trace Trace 3 is always the reference trace by definition.
State Saved	Saved in instrument state.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3353

Norm Ref Lvl


Sets the level (in dB) of the normalized reference.

Key Path	Trace/Detector, Normalize
Remote Command	:DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel <rel_amp1> :DISPlay:WINDow[1]:TRACe:Y[:SCALe]:NRLevel?
Example	DISP:WIND:TRAC:Y:NRL .10 dB DISP:WIND:TRAC:Y:NRL?
Preset	0 dB
State Saved	Saved in instrument state.
Min	-327.6 dB
Max	327.6 dB
Initial S/W Revision	Prior to A.02.00
Help Map ID	3354

Trace/Detector

Norm Ref Posn

Offsets the displayed trace without affecting the instrument gain or attenuation settings. This allows the displayed trace to be moved without decreasing measurement accuracy. The normalized reference position is indicated with a right arrow on the left side of the display and a left arrow on the right side of the display, just inside the graticule. See picture below:

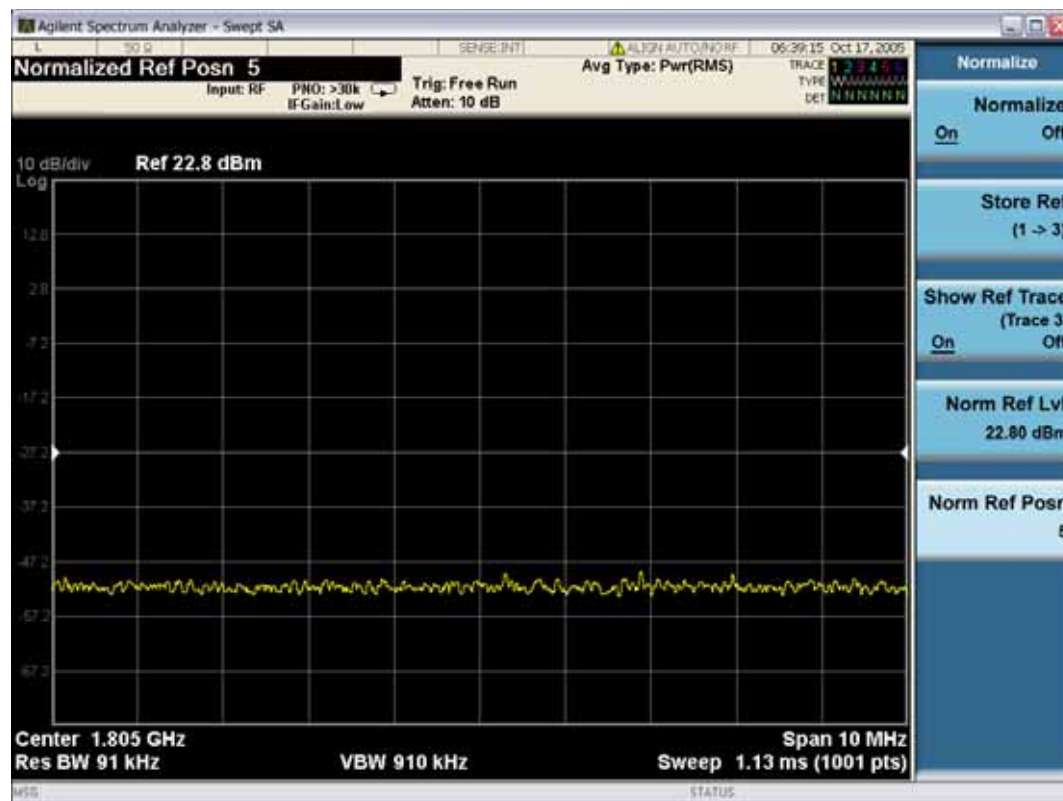

Key Path	Trace/Detector, Normalize
Remote Command	:DISPlay:WINDow[1]:TRACe:Y[:SCALE]:NRPosition <integer> :DISPlay:WINDow[1]:TRACe:Y[:SCALE]:NRPosition?
Example	DISP:WIND:TRAC:Y:NRP 5 DISP:WIND:TRAC:Y:NRP?
Notes	The top and bottom graticule lines correspond to 10 and 0, respectively.
Preset	10
State Saved	Saved in Instrument State.
Min	0
Max	10
Initial S/W Revision	Prior to A.2.00
Help Map ID	3355

Copy/Exchange

This menu lets you copy any trace to any other trace, or exchange any trace with any other trace. The action is performed once, it is not an “every sweep” type of thing.

The X-axis settings and domain of a trace go with it when it is copied or exchanged.

Key Path	Trace/Detector
Remote Command	:TRACe:COPIY TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 :TRACe:COPIY?
Example	TRAC:COPIY TRACE1,TRACE3 copies Trace 1 to Trace 3 and puts Trace 3 in Update = Off, Display = On
Notes	The TRACe:COPIY command is of the form: :TRACe:COPIY <source_trace>,<dest_trace>
Notes	In the case of a Copy , the destination trace is put in Update = Off, Display = On after the copy. In the case of an Exchange , both traces are put into Update = Off, Display = On after the exchange.
Preset	TRACE1, TRACE2
Initial S/W Revision	Prior to A.02.00
Help Map ID	3356

Remote Command:	:TRACe:EXCHange TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 :TRACe:EXCHange?
Example:	TRAC:EXCH TRACE1,TRACE2 exchanges Trace 1 and Trace 2 and puts both traces in Update = Off, Display = On .
Notes:	The TRACe:EXCHange command is of the form: :TRACe:EXCHange <trace_1>,<trace_2>
Preset:	TRACE1, TRACE2
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3357

From Trace

Selects the trace to be copied to or exchanged with the **To Trace**

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.

Trace/Detector

Preset	1
Initial S/W Revision	Prior to A.02.00
Help Map ID	3358

To Trace

Selects the trace to be copied from or exchanged with the **From Trace**

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Preset	2
Initial S/W Revision	Prior to A.02.00
Help Map ID	3359

Copy Now

Executes the Copy operation and puts the destination trace in **Update = Off, Display = On**.

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3360

Exchange Now

Executes the Exchange operation and puts both traces in **Update = Off, Display = On**.

Key Path	Trace/Detector, Copy/Exchange
Notes	See “Copy/Exchange”.
Initial S/W Revision	Prior to A.02.00
Help Map ID	3361

Send/Query Trace Data (Remote Command Only)

This command allows trace data to be sent to the test set or queried from the test set. The response to the query is a list of the amplitude points which comprise the requested trace in the current Y-axis unit of the test set. The X-axis unit is that of the destination trace (for send) or the source trace (for query).

See [“Query Trace Data” on page 1265](#).

See “More Information” on page 1265.

Remote Command:	:TRACe[:DATA] TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, <data>
Notes:	The TRACe[:DATA] command is of the form: :TRACe:DATA <trace>, <data> where <trace> can be one of the following parameters: TRACE1, TRACE2, TRACE3, TRACE4, TRACE5, TRACE6 and where <data> can be - ASCII data, which consists of a string of values separated by comma or - REAL or INTeger sent as a definite length block, with a header describing the data to follow.
Couplings:	Sweep points will affect the amount of data The FORMat:DATA command describes the different types of data formats that can be used with trace data. Use the FORMat:BORDER command to set the byte order.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3362

Query Trace Data

Remote Command:	:TRACe[:DATA]? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6
Example:	TRAC TRACE1,-1,-2,-3,-4,-5 sends five points to Trace 1. Assuming that FORMat:DATA is set to ASCII, Y-axis unit is set to dBm, and sweep points is set to 5, this will result in Trace 1 consisting of the five points -1 dBm, -2 dBm, -3 dBm, -4 dBm, and -5 dBm. TRAC? TRACE2 queries the test set for the contents of trace 2.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3363

More Information

The format and byte-ordering of the sent or received data is dependent on the FORMat :DATA and FORMat :BORDER commands. ASCII data consists of a string of comma separated values. REAL or INTeger data is sent as a definite length block, with a header describing the data to follow.

For example, a four point trace might look like this if in ASCII (FORMat :DATA ASCII):

-5.87350E+01, -5.89110E+01, -5.87205E+01, -5.12345E+01<NL><END>

and like this if in INTeger with 4 bytes per point (FORMat :DATA INT, 32):

Trace/Detector

#216<16 bytes of data><NL><END>

where the 2 in the #216 means “2 digits of numeric data to follow”, and the 16 is the 2 digits and means “16 binary bytes to follow” (this is the definite length block format).

Note that the data is terminated with <NL><END>. (For GPIB this is newline, or linefeed, followed by EOI set true. For LAN, this is newline only.)

The data format set by FORMat :DATA and FORMat :BORDER is used both for sending data to the instrument and receiving data from the instrument.

When sending data to the instrument, the data block must contain exactly the number of points currently specified in **Sweep, Points** or error is generated and there is no change to the target trace.

No units terminator (for example, dB or V) is used when sending data; the data is taken as being in the current Y-axis unit of the test set.

When a trace is sent to the instrument, it immediately overwrites all of the data in the target trace, even if that trace is inactive, or even if it is active and in the middle of a sweep. If in the middle of a set of **Trace Average** or **Max/Min Hold** operations, it can totally mess up the result, so you must be careful. Similarly, when querying trace data, it is best if the test set is not sweeping during the query. Therefore, it is generally advisable to be in **Single Sweep, or Update = Off** when sending trace data to the test set or querying trace data from the test set.

Format Data: Numeric Data (Remote Command Only)

This command specifies the format of the trace data input and output. It specifies the formats used for trace data during data transfer across any remote port. It affects only the data format for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]?, :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

Remote Command:	:FORMat [:TRACe] [:DATA] ASCii INTeger, 32 REAL, 32 REAL, 64 :FORMat [:TRACe] [:DATA] ?
Notes:	The query response is: ASCii: ASC,8 REAL,32: REAL,32 REAL,64: REAL,64 INTeger,32: INT,32 When the numeric data format is REAL or ASCii, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm). The INT,32 format returns binary 32-bit integer values in internal units (m dBm), in a definite length block.

Dependencies:	<p>Sending a data format spec with an invalid number (for example, INT,48) generates no error. The analyzer simply uses the default (8 for ASCii, 32 for INTeger, 32 for REAL).</p> <p>Sending data to the analyzer which does not conform to the current FORMat specified, results in an error. Sending ASCII data when a definite block is expected generates message -161 "Invalid Block Data" and sending a definite block when ASCII data is expected generates message -121 "Invalid Character in Number".</p>
Preset:	ASCii
Backwards Compatibility Notes:	Note that the INT,32 format is only applicable to the command, TRACe:DATA. This preserves backwards compatibility for the Swept SA measurement. For all other commands/queries which honor FORMat:DATA, if INT,32 is sent the analyzer will behave as though it were set to REAL,32.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

The specs for each output type follow:

ASCii - Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form:

SX.YYYYYEsZZ

Where:

S = sign (+ or -)

X = one digit to left of decimal point

Y = 5 digits to right of decimal point

E = E, exponent header

s = sign of exponent (+ or -)

ZZ = two digit exponent

REAL,32 - Binary 32-bit real values in the current Y Axis Unit, in a definite length block.

REAL,64 - Binary 64-bit real values in the current Y Axis Unit, in a definite length block.

Format Data: Byte Order (Remote Command Only)

This command selects the binary data byte order for data transfer and other queries. It controls whether binary data is transferred in normal or swapped mode. This command affects only the byte order for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]? , :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

By definition any command that says it uses FORMat:DATA uses any format supported by FORMat:DATA.

The NORMAl order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4. SWAPped order is when the byte

Trace/Detector

sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1.

Remote Command:	:FORMat:BORDER NORMAl SWAPped :FORMat:BORDER?
Preset:	NORMAl
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Smooth Trace Data (Remote Command Only)

Not recommended for new designs. Use the CALCulate:DATA:COMPRESS command instead.

Smooths the trace according to the number of points specified in :TRACe:MATH:SMOoth:POINts. There is no equivalent front panel function.

The purpose of this function is to perform a spatial video averaging, as compared to the temporal version supplied by the video-average command [:SENSe]:AVERage:TYPE VIDEo. The functions of TRACe:MATH:SMOoth <trace> and [:SENSe]:AVERage:TYPE VIDEo|POWER are not interchangeable.

Remote Command:	:TRACe:MATH:SMOoth TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3367

Number of Points for Smoothing (Remote Command Only)

Not recommended for new designs. (Will not be supported in future designs.) Use the CALCulate:DATA:COMPRESS command instead.

Specifies the number of points that are smoothed. Increasing the number of points increases smoothing at the cost of decreasing resolution. If the number of points is an even number, then the number of points is increased by one. If the number of points is larger than the number of sweep points, then the number of sweep points is used, unless the number of sweep points is even, in which case the number of points is the sweep points minus one. The number of points smoothed is always an odd number.

Remote Command:	:TRACe:MATH:SMOoth:POINts <integer> :TRACe:MATH:SMOoth:POINts?
Example:	TRAC:MATH:SMO:POIN 501
Notes:	Only odd values allowed; if <integer> even, add 1 unless <integer> = number of sweep points, in which case subtract 1 Used with the TRACe:MATH:SMOoth command.
Preset:	11

Min:	3
Max:	Number of sweep points
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3368

Mean Trace Data (Remote Command Only)

Not recommended for new designs. Use the CALCulate:DATA:COMPRESS command instead.

Returns the mean of the amplitudes of the trace amplitude elements in measurement units.

Remote Command:	: TRACe : MATH : MEAN? TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6
Example:	TRAC:MATH:MEAN? TRACE2
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3369

Trigger

Accesses a menu of keys to control the selection of the trigger source and the setup of each of the trigger sources. The analyzer is designed to allow triggering from a number of different sources, for example, Free Run, Video, External, RF Burst, and so forth.

The TRIG:SOURCe command (below) will specify the trigger source for the currently selected input (RF or I/Q). If you change inputs, the new input remembers the trigger source it was last programmed to for the current measurement, and uses that trigger source. You can directly set the trigger source for each input using the TRIGger:RF:SOURce and TRIGger:IQ:SOURce commands (later in this section). When in External Mixing, the analyzer uses the RF trigger source.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

See [“Trigger Source Presets” on page 1273](#)

See [“RF Trigger Source” on page 1276](#)

See [“I/Q Trigger Source” on page 1277](#)

See [“More Information” on page 1278](#)

Key Path:	Front-panel key
Remote Command:	<pre>:TRIGger:<measurement>[:SEquence]:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAMe RFBurst VIDeo IF ALARm LAN IQMag IDEMod QDEMod IINPut QINPut AIQMag T V :TRIGger:<measurement>[:SEquence]:SOURce?</pre> <p>where <measurement> is the measurement for which you wish to set the Source (blank for the Swept SA measurement)</p>
Example:	<pre>TRIG:ACP:SOUR EXT1</pre> <p>Selects the external 1 trigger input for the ACP measurement and the selected input</p> <pre>TRIG:SOUR VID</pre> <p>Selects video triggering for the Swept SA (SANalyzer) measurement in the Spectrum Analyzer mode. For SAN, do not use the <measurement> keyword. Only send this form in the Spectrum Analyzer mode or you will get an Undefined Header error</p>

Trigger

Notes:	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. See the “RF Trigger Source” on page 1276 and “I/Q Trigger Source” on page 1277 commands for detailed information on which trigger sources are available for each input.</p> <p>Other trigger-related commands are found in the INITiate and ABORt SCPI command subsystems.</p> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges and presets can vary from mode to mode.</p>
Dependencies:	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTernal2 parameter will generate a “Hardware missing; Not available for this model number” message.
Preset:	See table below
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:SOURCe EXTernal For backward compatibility, the parameter EXTernal is mapped to EXTernal1
Backwards Compatibility SCPI:	[:SENSe] : <measurement> : TRIGger : SOURce This backwards compatibility alias command is provided for ESA/PSA compatibility This backwards compatibility command does not apply to the Swept SA measurement, for that just use :TRIGger:SOURCe This backwards compatibility command does not apply to the monitor spectrum, log plot and spot frequency measurements
Backwards Compatibility SCPI:	[:SENSe] : <measurement> : TRIGger : SOURce IF In earlier instruments, the parameter IF was used by apps for the video trigger, so using the IF parameter selects VIDEo triggering. Sending IF in the command causes VID to be returned to a query.
Backwards Compatibility SCPI:	[:SENSe] : ACPR : TRIGger : SOURce This backwards Compatibility SCPI command is provided to support the same functionality as [:SENSe] : ACPr : TRIGger : SOURce (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to the fact that the ACPr node conflicts with the ACPower node.
Initial S/W Revision:	Prior to A.02.00

Modified at S/W Revision:	A.03.00
Help Map ID:	3371

Trigger Source Presets

Here are the Trigger Source Presets for the various measurements:

Meas	Mode	Preset for RF	Preset for IQ	Notes
Swept SA	SA	IMM	IQ not supported	
CHP	SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD, CMMB, ISDB-T, Digital Cable TV, MSR	IMM	IQ not supported	
OBW	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, LTE, LTETDD, CMMB, ISDB-T, MSR	1xEVDO: EXT1 others: IMM	IQ not supported	For 1xEVDO mode, the trigger source is coupled with the gate state, as well as the gate source. When the trigger source changes to RFBurst, External1 or External2, the gate state is set to on, and the gate source is set identically with the trigger source. When the trigger source changes to IMMEDIATE, VIDEO, LINE, FRAME or IF, the gate state is set to off.
CCDF	SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB, LTE, LTETDD, CMMB, ISDB-T, Digital Cable TV, MSR	WIMAXOFDMA : RFBurst LTETDD: BTS: External 1 MS: Periodic Timer TD-SCDMA and 1xEV-DO: BTS: External 1 MS: RFBurst SA, WCDMA, C2K, LTE, CMMB, ISDB-T, DVB-T/H, DTMB, Digital Cable TV, MSR: IMMEDIATE	TD-SCDMA and 1xEV-DO: BTS: External 1 MS: IQMag LTETDD: BTS: External 1 MS: Periodic Timer Others: IMM	For TD-SCDMA: Trigger source is coupled with radio device. When radio device changes to BTS, trigger source will be changed to EXTERNAL1. When radio device changes to MS, trigger source will be set as RFBurst for RF or IQ Mag for BBIQ. When TriggerSource is RFBurst or IQ Mag, Measure Interval is grayed out.

Trigger

Meas	Mode	Preset for RF	Preset for IQ	Notes
ACP	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD, CMMB, ISDB-T, Digital Cable TV, MSR	IMM	IQ not supported	
Tx Power	SA, GSM, TD-SCDMA	SA, GSM: RFBurst TD-SCDMA: EXternal	IMM	TD-SCDMA doesn't support the Line and Periodic Timer parameters. When the mode is TD-SCDMA, if the Radio Device is switched to BTS, the value will be changed to External 1 and if the Radio device is switched to MS, the value will be changed to RFBurst
SPUR	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, LTE, LTETDD, MSR	IMM	IQ not supported	
SEM	SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB, LTE, LTETDD, CMMB, ISDB-T, Digital Cable TV, MSR	1xEVDO(BTS): EXternal1 All others: IMMEDIATE	IQ not supported	
CDP	WCDMA	IMM	IMM	
RHO	WCDMA	IMM	IMM	
PCON	WCDMA	IMM	IMM	
QPSK	WCDMA, C2K, 1xEVDO	All except CDMA1xEVDO: IMMEDIATE CDMA1xEVDO: EXT1	IMM	

Meas	Mode	Preset for RF	Preset for IQ	Notes
MON	All except SA and BASIC	IMM	IQ not supported	
WAV		LTETDD: BTS: External 1 MS: Periodic Timer GSM/EDGE: RFBurst All others: IMMediate	LTETDD: BTS: External 1 MS: Periodic Timer GSM/EDGE: IQMag All others: IMMMediate	
PVT	WIMAXOFDMA	RFB	IMM	
EVM	WIMAXOFDMA , DVB-T/H, DTMB, LTE, LTETDD, CMMB, ISDB-T, Digital Cable TV	All but CMMB: IMM CMMB: Periodic Timer	All but CMMB: IMM CMMB: External 1	LTE, LTETDD supports Free Run, Video and External 1 only.
SPEC	BASIC	IMM	IMM	
LOG Plot	PN	IMM	IQ not supported	
Spot Freq	PN	IMM	IQ not supported	
GMSK PVT	EDGE/GSM	RFB	IMM	
GMSK PFER	EDGE/GSM	RFB	IQMag	
GMSK ORFS	EDGE/GSM	RF Burst	IQ not supported	
EDGE PVT	EDGE/GSM	RFB	IMM	
EDGE EVM	EDGE/GSM	RFB	IQMag	
EDGE ORFS	EDGE/GSM	Periodic Timer	IQ not supported	
Combined WCDMA	WCDMA	IMM	IQ not supported	
Combined GSM	EDGE/GSM	RFB	IQ not supported	

Trigger

Meas	Mode	Preset for RF	Preset for IQ	Notes
List Power Step	WCDMA, EDGE/GSM	IMM	IQ not supported	
Transmit On/Off Power	LTETDD	LTETDD: BTS: External 1 MS: Periodic Timer	LTETDD: BTS: External 1 MS: Periodic Timer	
Transmit Analysis	BLUETOOTH	RFB	IQ not supported	
Adjacent Channel Power	BLUETOOTH	IMM	IQ not supported	
LE In-band Emissions	BLUETOOTH	IMM	IQ not supported	
EDR In-band Spurious Emissions	BLUETOOTH	Periodic Timer	IQ not supported	
Conformance EVM	LTE, LTETDD, MSR	IMM	IMM	

RF Trigger Source

The **RF Trigger Source** command selects the trigger to be used for the specified measurement when RF is the selected input. The RF trigger source can be queried and changed even while another input is selected, but it is inactive until RF becomes the selected input.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

Remote Command:	:TRIGger:<measurement>[:SEQuence]:RF:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAMe RFBurst VIDeo IF ALARm LAN TV :TRIGger:<measurement>[:SEQuence]:RF:SOURce?
Example:	TRIG:ACP:RF:SOUR EXT1 Selects the external 1 trigger input for the ACP measurement and the RF input TRIG:RF:SOUR VID Selects video triggering for the SANalyzer measurement and the RF input. For SAN, do not use the <measurement> keyword.

Notes:	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. For the RF Trigger Source, the following trigger sources are available:</p> <ul style="list-style-type: none"> — IMMEDIATE - free run triggering — VIDEO - triggers on the video signal level — LINE - triggers on the power line signal — EXTERNAL1 (or EXTERNAL) - triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel — EXTERNAL2 - triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel. In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTERNAL2 parameter will generate a "Hardware missing; Not available for this model number" message — RFBURST - triggers on the bursted frame — FRAME - triggers on the periodic timer — IF (video) - same as video, for backwards compatibility only <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges, and presets can vary from mode to mode.</p>
Status Bits/OPC dependencies:	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.</p>
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

I/Q Trigger Source

This command selects the trigger to be used for the specified measurement when I/Q (which requires option BBA) is the selected input. The I/Q trigger source can be queried and changed even while another input is selected, but it is inactive until I/Q becomes the selected input.

Remote Command:	<pre>:TRIGger:<measurement>[:SEquence]:IQ:SOURce EXTERNAL1 EXTERNAL2 IMMEDIATE IQMag IDEMod QDEMod IINPut QINPut AIQMag :TRIGger:<measurement>[:SEquence]:IQ:SOURce?</pre>
------------------------	--

Trigger

Example:	TRIG:WAVeform:SOUR IQM Selects I/Q magnitude triggering for the IQ Waveform measurement and the I/Q input
Notes:	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. For the I/Q Trigger Source, the following trigger sources are available:</p> <ul style="list-style-type: none"> — IMMEDIATE - free run triggering — EXTERNAL1 (or EXTERNAL) - triggers on an externally connected trigger source on the rear panel — EXTERNAL2 - triggers on an externally connected trigger source on the front panel — IQMAG - triggers on the magnitude of the I/Q signal — IDEMOD - triggers on the I/Q signal's demodulated I voltage — QDEMOD - triggers on the I/Q signal's demodulated Q voltage — IINPUT - triggers on the I channel's ADC voltage — QINPUT - triggers on the Q channel's ADC voltage — AIQMAG - triggers on the magnitude of the auxiliary receiver channel I/Q signal <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges, and from mode to mode presets can vary</p>
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

More Information

The trigger menus let you select the trigger source and trigger settings for a sweep or measurement. In triggered operation (basically, any trigger source other than Free Run), the analyzer will begin a sweep or measurement only with the selected trigger conditions are met, generally when your trigger source signal meets the specified trigger level and polarity requirements. (In FFT measurements, the trigger controls when the data acquisition begins for FFT conversion.)

For each of the trigger sources, you may define a set of operational parameters or settings which will be applied when that source is selected as the current trigger source. Examples of these settings are Trigger

Trigger

immediately after the sweep/measurement is initiated.

Key Path:	Trigger
Example:	TRIG:SOUR IMM Swept SA measurement TRIG:<meas>:SOUR IMM Measurements other than Swept SA
State Saved:	Saved in instrument state
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3373

Video (IF Envelope)

Pressing this key, when it is not selected, selects the video signal as the trigger. The Video trigger condition is met when the video signal (the filtered and detected version of the input signal, including both RBW and VBW filtering) crosses the video trigger level.

NOTE When the detector selected for all active traces is the average detector, the video signal for triggering does not include any VBW filtering.

The video trigger level is shown as a labeled line on the display. The line is displayed as long as video is the selected trigger source.

Pressing this key, when it is already selected, accesses the video trigger setup functions.

Key Path:	Trigger
Example:	TRIG:SOUR VID Swept SA measurement TRIG:<meas>:SOUR VID Measurements other than Swept SA
Notes:	Log Plot and Spot Frequency measurements do not support Video Trigger
Dependencies:	Video trigger is allowed in average detector mode.
State Saved:	Saved in instrument state
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.

Backwards Compatibility Notes:	1. In the past, the Average detector was not available when Video triggering was on, and consequently, functions that set the detector to average (such as Marker Noise or Band/Intvl Power) were not available when the video trigger was on. Similarly, Video triggering was not available when the detector was Average. In the X-Series, these restrictions are removed.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3374

Trigger Level

Sets a level for the video signal trigger. When the video signal crosses this level, with the chosen slope, the trigger occurs. This level is displayed with a horizontal line only if **Video** is the selected trigger source.

Key Path:	Trigger, Video
Remote Command:	:TRIGger[:SEquence]:VIDeo:LEVel <ampl> :TRIGger[:SEquence]:VIDeo:LEVel?
Example:	TRIG:VID:LEV -40 dBm
Notes:	<p>When sweep type = FFT, the video trigger uses the amplitude envelope in a bandwidth wider than the FFT width as a trigger source. This might often be useful, but does not have the same relationship between the displayed trace and the trigger level as in swept triggering.</p> <p>Amplitude Corrections are not taken into account by the Video Trig Level. For example, if you have given yourself effective gain with an amplitude correction factor, the Video Trigger will not fire until you have dropped the trigger line that far below the displayed signal level, rather than simply dropping it down to the displayed signal level.</p> <p>Note that other corrections, specifically External Gain and Ref Level Offset, modify the actual trace data as it is taken and therefore ARE taken into account by Trig Level.</p>
Couplings:	This same level is used for the Video trigger source in the Trigger menu and for the Video selection in the Gate Source menu.
Preset:	Set the Video Trigger Level -25 dBm on Preset. When the Video Trigger Level becomes the active function, if the value is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was.
State Saved:	Saved in instrument state
Min:	-170 dBm
Max:	+30 dBm
Default Unit:	Depends on the current selected Y axis unit
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:IF:LEVel :TRIGger[:SEquence]:IF:LEVel?

Trigger

Backwards Compatibility Notes:	This alias is provided for backward compatibility with VSA/PSA comms apps.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3375

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Video
Remote Command:	:TRIGger[:SEquence]:VIDeo:SLOPe POSitive NEGative :TRIGger[:SEquence]:VIDeo:SLOPe?
Example:	TRIG:VID:SLOP NEG
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:IF:SLOPe NEGative POSitive :TRIGger[:SEquence]:IF:SLOPe? For backward compatibility with VSA/PSA comms apps
Backwards Compatibility Notes:	The legacy :TRIGger[:SEquence]:SLOPe command affects the slopes for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3377

Remote Command:	:TRIGger[:SEquence]:SLOPe POSitive NEGative :TRIGger[:SEquence]:SLOPe?
Example:	TRIG:SLOP NEG
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility Notes:	In ESA/PSA, the Trigger Slope was global to all triggers. In the X-Series, the slope can be set individually for each Trigger Source. For backward compatibility, the global SLOPe command updates all instances of trigger slope (VID, LINE, EXT1, EXT2, TV, RFB). The query returns the trigger slope setting of the currently selected trigger source.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Trig Delay

Controls a time delay during that the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in the time domain or FFT, but not in swept spans.

Key Path:	Trigger, Video
Remote Command:	:TRIGger[:SEQuence]:VIDeo:DELAy <time> :TRIGger[:SEQuence]:VIDeo:DELAy? :TRIGger[:SEQuence]:VIDeo:DELAy:STATe OFF ON 0 1 :TRIGger[:SEQuence]:VIDeo:DELAy:STATe?
Example:	TRIG:VID:DEL:STAT ON TRIG:VID:DEL 100 ms
Notes:	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset:	Off, 1 us
State Saved:	Saved in instrument state
Min:	-150 ms
Max:	+500 ms
Default Unit:	s
Backwards Compatibility Notes:	! For backward compatibility with VSA/PSA comms apps :TRIGger[:SEQuence]:IF:DELAy :TRIGger[:SEQuence]:DELAy The legacy :TRIGger[:SEQuence]:DELAy command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3378

Remote Command:	:TRIGger[:SEQuence]:DELAy <time> :TRIGger[:SEQuence]:DELAy? :TRIGger[:SEQuence]:DELAy:STATe OFF ON 0 1 :TRIGger[:SEQuence]:DELAy:STATe?
Example:	TRIG:DEL 1 ms

Trigger

Preset:	1 us
State Saved:	Saved in instrument state
Backwards Compatibility Notes:	In ESA/PSA, the Trigger Delay was global to all triggers. In the X-Series, the delay can be set individually for each Trigger Source. For backward compatibility, the global DELAY command updates all instances of trigger slope (VID, LINE, EXT1, EXT2) except TV and RFBurst. The query returns the trigger delay setting of the currently selected trigger source.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Remote Command:	:TRIGger[:SEquence]:OFFSet <time> :TRIGger[:SEquence]:OFFSet? :TRIGger[:SEquence]:OFFSet:STATe OFF ON 0 1 :TRIGger[:SEquence]:OFFSet:STATe?
Example:	TRIG:OFFS ON TRIG:OFFS -100 ms
Notes:	These are ESA commands for trigger offset that allowed you to use a positive or negative delay when in zero span and in a Res BW \geq 1 kHz. For ESA compatibility, X-series analyzers keep track of this offset and adds it to the Trigger Delay for VIDEO, LINE, EXTERNAL1 or EXTERNAL2 whenever the value is sent to the hardware, if in Zero Span and RBW \geq 1 kHz.
Preset:	Off, 0 s
State Saved:	Saved in instrument state
Min:	-11 s
Max:	+11 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Line

Pressing this key, when it is not selected, selects the line signal as the trigger. A new sweep/measurement will start synchronized with the next cycle of the line voltage. Pressing this key, when it is already selected, access the line trigger setup menu.

Key Path:	Trigger
Example:	TRIG:SOUR LINE Swept SA measurement TRIG:<meas>:SOUR LINE Measurements other than Swept SA

Dependencies:	Line trigger is not available when operating from a "dc power source", for example, when the instrument is powered from batteries.
State Saved:	Saved in instrument state
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3379

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Line
Remote Command:	:TRIGger[:SEQuence]:LINE:SLOPe POSitive NEGative :TRIGger[:SEQuence]:LINE:SLOPe?
Example:	TRIG:LINE:SLOP NEG
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:SLOPe command affects the slopes for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3380

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path:	Trigger, Line
-----------	----------------------

Trigger

Remote Command:	:TRIGger[:SEQuence]:LINE:DELay <time> :TRIGger[:SEQuence]:LINE:DELay? :TRIGger[:SEQuence]:LINE:DELay:STATe OFF ON 0 1 :TRIGger[:SEQuence]:LINE:DELay:STATe?
Example:	TRIG:LINE:DEL:STAT ON TRIG:LINE:DEL 100 ms
Notes:	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset:	Off, 1.000 us
State Saved:	Saved in instrument state
Min:	-150 ms
Max:	500 ms
Default Unit:	S
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:DELay command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers. The legacy :TRIGger[:SEQuence]:OFFSet command is supported for the VIDEo, LINE, EXT1, and EXT2 triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3381

External 1

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 1 input connector on the rear panel.

Pressing this key, when it is already selected, accesses the external 1 trigger setup menu.

Key Path:	Trigger
Example:	TRIG:SOUR EXT1 Swept SA measurement TRIG:<meas>:SOUR EXT1 Measurements other than Swept SA
Dependencies:	Grayed out if in use by Point Trigger in the Source Setup menu. Forced to Free Run if already selected and Point Trigger is set to External 1.
State Saved:	Saved in instrument state

Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3382

Trigger Level

Sets the value where the external 1 trigger input will trigger a new sweep/measurement.

Key Path:	Trigger, External 1
Remote Command:	:TRIGger[:SEquence]:EXTernal1:LEVel <level> :TRIGger[:SEquence]:EXTernal1:LEVel?
Example:	TRIG:EXT1:LEV 0.4 V
Couplings:	This same level is used for the Ext1 trigger source in the Trigger menu, for the Ext1 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext1 selection in the Gate Source menu.
Preset:	1.2 V
State Saved:	Saved in instrument state
Min:	-5 V
Max:	5 V
Default Unit:	V
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:EXTernal:LEVel For backward compatibility, the parameter EXTernal is mapped to EXTernal1
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:FRAME:EXTernal1:LEVel
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3383

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, External 1
Remote Command:	:TRIGger[:SEquence]:EXTernal1:SLOPe POSitive NEGative :TRIGger[:SEquence]:EXTernal1:SLOPe?

Trigger

Example:	TRIG:EXT1:SLOP NEG
Couplings:	This same slope is used in the Ext1 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:EXTernal:SLOPe For backward compatibility, the parameter EXTernal is mapped to EXTernal1
Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:FRAMe:EXTernal1:SLOPe
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:SLOPe command affects the slopes for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3384

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path:	Trigger, External 1
Remote Command:	:TRIGger[:SEQuence]:EXTernal1:DELAy <time> :TRIGger[:SEQuence]:EXTernal1:DELAy? :TRIGger[:SEQuence]:EXTernal1:DELAy:STATe OFF ON 0 1 :TRIGger[:SEQuence]:EXTernal1:DELAy:STATe?
Example:	TRIG:EXT1:DEL:STAT ON TRIG:EXT1:DEL 100 ms
Notes:	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset:	Off, 1.000 us
State Saved:	Saved in instrument state
Min:	-150 ms
Max:	+500 ms
Default Unit:	s

Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:EXTernal:DELay For backward compatibility, the parameter EXTernal is mapped to EXTernal1
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:DELay command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers. The legacy :TRIGger[:SEQuence]:OFFSet command is supported for the VIDEo, LINE, EXT1, and EXT2 triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3385

Zero Span Delay Comp On/Off

In zero span, there is a natural delay in the signal path, which comes from the RBW filter. This is usually desirable, as it allows you to trigger on events and also see those events, because the signal is delayed from the trigger event. However, in some cases it is desirable to eliminate this delay, so that trigger events line up exactly with the zero time point in zero span. You can use the **Zero Span Delay Comp On/Off** feature to enable or disable zero span delay compensation.

Key Path:	Trigger, External 1
Remote Command:	:TRIGger[:SEQuence]:EXTernal1:DELay:COMPensation OFF ON 0 1 :TRIGger[:SEQuence]:EXTernal1:DELay:COMPensation?
Example:	TRIG:EXT1:DEL:COMP ON
Dependencies:	No effect except in zero-span, but not locked out in nonzero spans. Blanked in modes that do not support zero-span measurements. If the SCPI command is sent when the key is blanked, an error is returned: -221, “Settings conflict; Feature not supported for this measurement” In analyzers shipping N9060A, this feature requires N9060A-7FP.
Preset:	OFF
State Saved:	Saved in instrument state
Initial S/W Revision:	A.11.00
Help Map ID:	4041

External 2

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 2 input connector. The external trigger 2 input connector is on the rear panel.

Pressing this key, when it is already selected, accesses the external 2 trigger setup menu.

Key Path:	Trigger
-----------	----------------

Trigger

Example:	TRIG:SOUR EXT2 Swept SA measurement TRIG:<meas>:SOUR EXT2 Measurements other than Swept SA
Dependencies:	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXternal2 parameter will generate a "Hardware missing; Not available for this model number" message. Grayed out if in use by Point Trigger in the Source Setup menu. Forced to Free Run if already selected and Point Trigger is set to External 2.
State Saved:	Saved in instrument state
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3386

Trigger Level

Sets the value where the external 2 trigger input will trigger a new sweep/measurement.

Key Path:	Trigger, External 2
Remote Command:	:TRIGger[:SEquence]:EXTernal2:LEVel :TRIGger[:SEquence]:EXTernal2:LEVel?
Example:	TRIG:EXT2:LEV 1.1 V
Couplings:	This same level is used for the Ext2 trigger source in the Trigger menu, for the Ext2 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext2 selection in the Gate Source menu.
Preset:	1.2 V
State Saved:	Saved in instrument state
Min:	-5 V
Max:	5 V
Default Unit:	V
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:FRAME:EXTernal2:LEVel
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3387

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, External 2
Remote Command:	:TRIGger[:SEquence]:EXTErnal2:SLOPe POSitive NEGative :TRIGger[:SEquence]:EXTErnal2:SLOPe?
Example:	TRIG:EXT2:SLOP NEG
Couplings:	This same slope is used in the Ext2 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:TRIGger[:SEquence]:FRAME:EXTErnal2:SLOPe
Backwards Compatibility Notes:	The legacy :TRIGger[:SEquence]:SLOPe command affects the slopes for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3388

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path:	Trigger, External 2
Remote Command:	:TRIGger[:SEquence]:EXTErnal2:DELAy <time> :TRIGger[:SEquence]:EXTErnal2:DELAy? :TRIGger[:SEquence]:EXTErnal2:DELAy:STATe OFF ON 0 1 :TRIGger[:SEquence]:EXTErnal2:DELAy:STATe?
Example:	TRIG:EXT2:DEL:STAT ON TRIG:EXT2:DEL 100 ms
Notes:	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset:	Off, 1.000 us

Trigger

State Saved:	Saved in instrument state
Min:	-150 ms
Max:	500 ms
Default Unit:	s
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:DELay command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers. The legacy :TRIGger[:SEQuence]:OFFSet command is supported for the VIDEo, LINE, EXT1, and EXT2 triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3389

Zero Span Delay Comp On/Off

In zero span, there is a natural delay in the signal path, which comes from the RBW filter. This is usually desirable, as it allows you to trigger on events and also see those events, because the signal is delayed from the trigger event. However, in some cases it is desirable to eliminate this delay, so that trigger events line up exactly with the zero time point in zero span. You can use the **Zero Span Delay Comp On/Off** feature to enable or disable zero span delay compensation.

Key Path:	Trigger, External 2
Remote Command:	:TRIGger[:SEQuence]:EXTernal2:DELay:COMPensation OFF ON 0 1 :TRIGger[:SEQuence]:EXTernal2:DELay:COMPensation?
Example:	TRIG:EXT2:DEL:COMP ON
Dependencies:	No effect except in zero-span, but not locked out in nonzero spans. Blanked in modes that do not support zero-span measurements. If the SCPI command is sent when the key is blanked, an error is returned: -221, "Settings conflict; Feature not supported for this measurement" In analyzers shipping N9060A, this feature requires N9060A-7FP.
Preset:	OFF
State Saved:	Saved in instrument state
Initial S/W Revision:	A.11.00
Help Map ID:	4042

RF Burst

Pressing this key, when it is not selected, selects the RF Burst as the trigger. A new sweep/measurement will start when an RF burst envelope signal is identified from the signal at the RF Input connector. Pressing this key, when it is already selected, accesses the RF Burst trigger setup menu.

In some models, a variety of burst trigger circuitry is available, resulting in various available burst

trigger bandwidths. The analyzer automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the analyzer.

Key Path:	Trigger
Example:	TRIG:SOUR RFB Swept SA measurement TRIG:<meas>:SOUR RFB Measurements other than Swept SA
State Saved:	Saved in instrument state
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Backwards Compatibility Notes:	The legacy command: :TRIGger[:SEquence]:RFBurst:FSElectivity[:STATE] OFF ON 0 1 is not supported in the X-Series, as the hardware to do Frequency Selective burst triggers does not exist in X-Series.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3390

Absolute Trigger Level

Sets the absolute trigger level for the RF burst envelope.

NOTE When using the External Mixing path, the Absolute Trigger Level is uncalibrated because the factory default was set to accommodate the expected IF levels for the RF path.

Key Path:	Trigger, RF Burst
Scope:	Meas Global
Remote Command:	:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute <ampl> :TRIGger[:SEquence]:RFBurst:LEVel:ABSolute?
Example:	TRIG:RFB:LEV:ABS 10 dBm sets the trigger level of the RF burst envelope signal to the absolute level of 10 dBm

Trigger

Notes:	<p>Sending this command does not switch the setting from relative to absolute; to switch it you need to send the :TRIGger[:SEQuence]:RFBurst:LEVel:TYPE command, below.</p> <p>Amplitude Corrections are not taken into account by the Absolute Trigger Level. For example, if you have given yourself effective gain with an amplitude correction factor, the Absolute Trigger will not fire until you have set the trigger level that far below the displayed signal level, rather than simply to the displayed signal level. This is only true for Amplitude Corrections, not External Gain or Ref Level Offset functions.</p> <p>If mode is Bluetooth, the default value is -50 dBm.</p>
Couplings:	This same level is used for the RF Burst trigger source in the Trigger menu, for the RF Burst selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the RF Burst selection in the Gate Source menu
Preset:	-20 dBm
State Saved:	Saved in instrument state
Min:	-200 dBm
Max:	100 dBm
Default Unit:	depends on the current selected Y-Axis unit
Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:FRAME:RFBurst:LEVel:ABSolute
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	3391

Key Path:	Trigger, RF Burst
Remote Command:	:TRIGger[:SEQuence]:RFBurst:LEVel:TYPE ABSolute RELative :TRIGger[:SEQuence]:RFBurst:LEVel:TYPE?
Example:	TRIG:RFB:LEV:TYPE REL sets the trigger level type of the RF burst trigger to Relative.
Preset:	ABSolute
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	0

Relative Trigger Level

Sets the relative trigger level for the RF burst envelope.

In some models, the relative burst trigger function is implemented in hardware. In other models, without the advanced triggering hardware required, the relative burst trigger function is implemented in software in some measurements, and is unavailable in other measurements.

When implemented in software, the relative RF Burst trigger function is implemented as follows:

1. The measurement starts with the absolute RF Burst trigger setting. If it cannot get a trigger with that level, auto trigger fires and the acquisition starts anyway. After the acquisition, the measurement searches for the peak in the acquired waveform and saves it.
2. Now, in the next cycle of the measurement, the measurement determines a new absolute RF Burst level based on the peak value from the first measurement and the Relative RF Burst Trigger Level (always 0 or negative dB) set by the user. The following formula is used:

$$\text{absolute RF Burst level} = \text{peak level of the previous acquisition} + \text{relative RF Burst level}$$

3. If the new absolute RF Burst level differs from the previous by more than 0.5 dB, the new level is sent to the hardware; otherwise it is not updated (to avoid slowing down the acquisition)

Steps 2 and 3 repeat for subsequent measurements.

Key Path:	Trigger, RF Burst
Scope:	Meas Global
Remote Command:	:TRIGger[:SEquence]:RFBurst:LEVel:RELative <rel_amp1> :TRIGger[:SEquence]:RFBurst:LEVel:RELative?
Example:	TRIG:RFB:LEV:REL -10 dB sets the trigger level of the RF burst envelope signal to the relative level of -10 dB
Notes:	Sending this command does not switch the setting from absolute to relative; to switch it you need to send the :TRIGger[:SEquence]:RFBurst:LEVel:TYPE command, above. The relative trigger level is not available in some measurements. In those measurements the RELative parameter, and the :TRIGger[:SEquence]:RFBurst:LEVel:TYPE command (above), will generate an error if sent.
Dependencies:	This key is grayed out and Absolute Trigger Level selected if the required hardware is not present in your analyzer and the current measurement does not support Relative triggering.
Preset:	-6 dB GSM: -25 dB
State Saved:	Saved in instrument state
Min:	-45 dB
Max:	0 dB
Default Unit:	dB or dBc

Trigger

Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:RFBurst:LEVel This legacy command is aliased to :TRIGger[:SEQuence]:RFBurst:LEVel:RELative because the PSA had ONLY relative burst triggering
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.04.00
Help Map ID:	4034

Trigger Slope

It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, RF Burst
Remote Command:	:TRIGger[:SEQuence]:RFBurst:SLOPe POSitive NEGative :TRIGger[:SEQuence]:RFBurst:SLOPe?
Example:	TRIG:RFB:SLOP NEG
Couplings:	This same slope is used in the RF Burst selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).
Preset:	POSitive
State Saved:	Saved in instrument state
Backwards Compatibility SCPI:	:TRIGger[:SEQuence]:FRAME:RFBurst:SLOPe
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:SLOPe command affects the slopes for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3394

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Key Path:	Trigger, RF Burst
Remote Command:	:TRIGger[:SEQuence]:RFBurst:DELay <time> :TRIGger[:SEQuence]:RFBurst:DELay? :TRIGger[:SEQuence]:RFBurst:DELay:STATE OFF ON 0 1 :TRIGger[:SEQuence]:RFBurst:DELay:STATE?

Example:	TRIG:RFB:DEL:STAT ON TRIG:RFB:DEL 100 ms
Notes:	Video trigger delay may be set to negative values, in time domain, FFT and even swept. It makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. In swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.
Preset:	Off, 1.000 us
State Saved:	Saved in instrument state
Min:	-150 ms
Max:	500 ms
Default Unit:	s
Backwards Compatibility Notes:	The legacy :TRIGger[:SEQuence]:DELay command affects the delay for the VID, LINE, EXT1, EXT2, and RFB triggers.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3395

Zero Span Delay Comp On/Off

In zero span, there is a natural delay in the signal path, which comes from the RBW filter. This is usually desirable, as it allows you to trigger on events and also see those events, because the signal is delayed from the trigger event. However, in some cases it is desirable to eliminate this delay, so that trigger events line up exactly with the zero time point in zero span. You can use the **Zero Span Delay Comp On/Off** feature to enable or disable zero span delay compensation.

Key Path:	Trigger, RF Burst
Remote Command:	:TRIGger[:SEQuence]:RFBurst:DELay:COMPensation OFF ON 0 1 :TRIGger[:SEQuence]:RFBurst:DELay:COMPensation?
Example:	TRIG:RFB:DEL:COMP ON
Dependencies:	No effect except in zero-span, but not locked out in nonzero spans. Blanked in modes that do not support zero-span measurements. If the SCPI command is sent when the key is blanked, an error is returned: -221, "Settings conflict; Feature not supported for this measurement" In analyzers shipping N9060A, this feature requires N9060A-7FP.
Preset:	OFF
State Saved:	Saved in instrument state
Initial S/W Revision:	A.11.00

Trigger

Help Map ID:	4043
--------------	------

Periodic Timer (Frame Trigger)

Pressing this key, when it is not selected, selects the internal periodic timer signal as the trigger. Triggering occurrences are set by the **Period** parameter, which is modified by the **Sync Source** and **Offset**. Pressing this key, when it is already selected, accesses the periodic timer trigger setup functions.

If you do not have a sync source selected (it is Off), then the internal timer will not be synchronized with any external timing events.

Key Path:	Trigger
Example:	TRIG:SOUR FRAM Swept SA measurement TRIG:<meas>:SOUR FRAM Measurements other than Swept SA
State Saved:	Saved in instrument state
Readback:	[Sync: <value of Sync Source>], for example, [Sync: External 1]
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3397

Periodic Timer Triggering:

This feature selects the internal periodic timer signal as the trigger. Trigger occurrences are set by the **Periodic Timer** parameter, which is modified by the **Sync Source** and **Offset**.

The figure below shows the action of the periodic timer trigger. Before reviewing the figure, we'll explain some uses for the periodic trigger.


A common application is measuring periodic burst RF signals for which a trigger signal is not easily available. For example, we might be measuring a TDMA radio which bursts every 20 ms. Let's assume that the 20 ms period is very consistent. Let's also assume that we do not have an external trigger source available that is synchronized with the period, and that the signal-to-noise ratio of the signal is not high enough to provide a clean RF burst trigger at all of the analysis frequencies. For example, we might want to measure spurious transmissions at an offset from the carrier that is larger than the bandwidth of the RF burst trigger. In this application, we can set the Periodic Timer to a 20.00 ms period and adjust the offset from that timer to position our trigger just where we want it. If we find that the 20.00 ms is not exactly right, we can adjust the period slightly to minimize the drift between the period timer and the signal to be measured.

A second way to use this feature would be to use **Sync Source** temporarily, instead of **Offset**. In this case, we might tune to the signal in a narrow span and use the RF Burst trigger to synchronize the periodic timer. Then we would turn the sync source off so that it would not mis-trigger. Mis-triggering

can occur when we are tuned so far away from the RF burst trigger that it is no longer reliable.

A third example would be to synchronize to a signal that has a reference time element of much longer period than the period of interest. In some CDMA applications, it is useful to look at signals with a short periodicity, by synchronizing that periodicity to the "even-second clock" edge that happens every two seconds. Thus, we could connect the even-second clock trigger to Ext1 and use then Ext1 as the sync source for the periodic timer.

The figure below illustrates this third example. The top trace represents the even-second clock. It causes the periodic timer to synchronize with the leading edge shown. The analyzer trigger occurs at a time delayed by the accumulated offset from the period trigger event. The periodic timer continues to run, and triggers continue to occur, with a periodicity determined by the analyzer time base. The timer output (labeled "late event") will drift away from its ideal time due to imperfect matching between the time base of the signal being measured and the time base of the analyzer, and also because of imperfect setting of the period parameter. But the synchronization is restored on the next even-second clock event. ("Accumulated offset" is described in the in the **Offset** function section.)

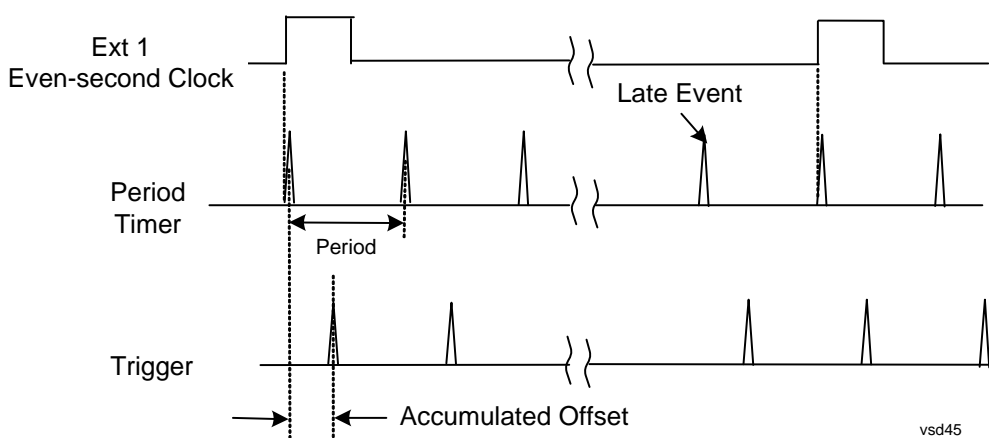

Period

Sets the period of the internal periodic timer clock. For digital communications signals, this is usually set to the frame period of your current input signal. In the case that sync source is not set to OFF, and the external sync source rate is changed for some reason, the periodic timer is synchronized at the every external synchronization pulse by resetting the internal state of the timer circuit.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger[:SEquence]:FRAM:PERiod <time> :TRIGger[:SEquence]:FRAM:PERiod?
Example:	TRIG:FRAM:PER 100 ms
Dependencies:	The invalid data indicator turns on when the period is changed, until the next sweep/measurement completes.
Couplings:	The same period is used in the Gate Source selection of the period timer.
Preset:	20 ms GSM: 4.615383

Trigger

State Saved:	Saved in instrument state
Min:	100.000 ns
Max:	559.0000 ms
Default Unit:	S
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3398

Offset

Adjusts the accumulated offset between the periodic timer events and the trigger event. Adjusting the accumulated offset is different than setting an offset, and requires explanation.

The periodic timer is usually not synchronized with any external events, so the timing of its output events has no absolute meaning. Since the timing relative to external events (RF signals) is important, you need to be able to adjust (offset) it. However, you have no direct way to see when the periodic timer events occur. All that you can see is the trigger timing. When you want to adjust the trigger timing, you will be changing the internal offset between the periodic timer events and the trigger event. Because the absolute value of that internal offset is unknown, we will just call that the accumulated offset. Whenever the Offset parameter is changed, you are changing that accumulated offset. You can reset the displayed offset using Reset Offset Display. Changing the display does not change the value of the accumulated offset, and you can still make additional changes to accumulated offset.

To avoid ambiguity, we define that an increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger[:SEquence]:FRAMe:OFFSet <time> :TRIGger[:SEquence]:FRAMe:OFFSet?
Example:	TRIG:FRAM:OFFS 1.2 ms
Notes:	<p>The front panel interface (for example, the knob), and this command, adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware each time the offset is updated is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. Note that the accumulated offset value is essentially arbitrary; it represents the accumulated offset from the last time the offset was zeroed (with the Reset Offset Display key).</p> <p>Note that this command does not change the period of the trigger waveform. Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section “Trig Delay” on page 1305.</p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.</p>

Notes:	When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated with the new value. However, the actual amount sent to the hardware is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. The SCPI query simply returns the value currently showing on the key.
Dependencies:	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes.
Couplings:	The same offset is used in the Gate Source selection of the period timer.
Preset:	0 s
State Saved:	Saved in instrument state
Min:	-10.000 s
Max:	10.000 s
Default Unit:	S
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3399

Offset Adjust (Remote Command Only)

This remote command does not work at all like the related front panel keys. This command lets you advance the phase of the frame trigger by the amount you specify.

It does not change the period of the trigger waveform. If the command is sent multiple times, it advances the phase of the frame trigger an additional amount each time it is sent. Negative numbers are permitted.

Remote Command:	:TRIGger[:SEquence]:FRAMe:ADJust <time>
Example:	TRIG:FRAM:ADJ 1.2 ms
Notes:	Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section “ Trig Delay ” on page 1305 An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.
Notes:	The front panel interface (for example, the knob) and the :TRIG:FRAM:OFFS command adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware is the delta value, that is, the current offset value minus the previous offset value. When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated by increasing it (or decreasing it if the value sent is negative) by the amount specified in the SCPI command. This is a "command only" SCPI command, with no query.
Dependencies:	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes.

Trigger

Couplings:	The same offset is used in the Gate Source selection of the period timer.
Preset:	0 s
State Saved:	Saved in instrument state
Min:	-10.000 s
Max:	10.000 s
Default Unit:	S
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0

Reset Offset Display

Resets the value of the periodic trigger offset display setting to 0.0 seconds. The current displayed trigger location may include an offset value defined with the **Offset** key. Pressing this key redefines the currently displayed trigger location as the new trigger point that is 0.0 s offset. The **Offset** key can then be used to add offset relative to this new timing.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet
Example:	TRIG:FRAM:OFFS:DISP:RES
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3400

Sync Source

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you are triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

For convenience you may adjust the level and slope of the selected sync source in a conditional branch setup menu accessed from the Sync Source menu. Note that these settings match those in the **Trigger** and **Gate Source** menus; that is, each trigger source has only one value of level and slope, regardless of which menu it is accessed from.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger[:SEquence]:FRAMe:SYNC EXTernal1 EXTernal2 RFBurst OFF :TRIGger[:SEquence]:FRAMe:SYNC?
Example:	TRIG:FRAM:SYNC EXT2

Dependencies:	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXTERNAL2 parameter will generate a “Hardware missing; Not available for this model number” message.
Preset:	Off GSM/EDGE: RFBurst
State Saved:	Saved in instrument state
Readback:	The current setting is read back to this key and it is also Readback to the previous Periodic Timer trigger key.
Backwards Compatibility SCPI:	:TRIGger[:SEQUENCE]:FRAME:SYNC EXTERNAL For backward compatibility, the parameter EXTERNAL is mapped to EXTERNAL1
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3402

Off

Turns off the sync source for your periodic trigger. With the sync source off, the timing will drift unless the signal source frequency is locked to the analyzer frequency reference.

Key Path:	Trigger, Periodic Timer, Sync Source
Example:	TRIG:FRAM:SYNC OFF
Readback:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3403

External 1

Pressing this key, when it is not selected, selects the external input port that you will use for the periodic trigger synchronization. Pressing this key, when it is already selected, accesses the external 1 sync source setup menu.

Key Path:	Trigger, Periodic Timer, Sync Source
Example:	TRIG:FRAM:SYNC EXT
Couplings:	Same as External 1 trigger source.
Readback:	External 1
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3404

Trigger

Trigger Level

Sets the value where the signal at the external 1 trigger input will synchronize with the periodic timer trigger. This same level is used in the Ext1 trigger source in the Trigger menu. See section [“Trigger Level ” on page 1287](#) for information on this key and the SCPI command.

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the Ext1 trigger source in the Trigger menu. See section [“Trig Slope ” on page 1287](#) for information on this key and the SCPI command

External 2

Pressing this key, when it is not selected, selects the external input port that you will use for the periodic frame trigger synchronization.

Pressing this key, when it is already selected, accesses the external 2 sync source setup menu.

Key Path:	Trigger, Periodic Timer, Sync Source
Example:	TRIG:FRAM:SYNC EXT2
Dependencies:	In some models, there is no second External input. In these models, the External 2 key is blanked and the EXternal2 parameter will generate a “Hardware missing; Not available for this model number” message.
Couplings:	Same as External 2 trigger source.
Readback:	External 2
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.03.00
Help Map ID:	3407

Trigger Level

Sets the value where the signal at the external 2 trigger input will synchronize with the periodic timer trigger. This same level is used in the Ext2 trigger source in the Trigger menu. See section [“Trigger Level ” on page 1290](#) for information on this key and the SCPI command.

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the Ext2 trigger source in the Trigger menu. See section [“Trig Slope ” on page 1291](#) for information on this key and the SCPI command

RF Burst

Pressing the key once selects the RF burst envelope signal to be used for the periodic timer trigger synchronization.

Press the key a second time to access the RF burst sync source setup menu.

Key Path:	Trigger, Periodic Timer, Sync Source
-----------	---

Example:	TRIG:FRAM:SYNC RFB
Couplings:	Same as RF Burst trigger source.
Readback:	RF Burst
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3410

Trigger Level

Sets the trigger level to be used for the RF Burst trigger. This same level is used in the RF Burst trigger source in the Trigger menu. See section “[Absolute Trigger Level](#)” on page 1293 for information on this key and the SCPI command.

Trig Slope

Controls the RF Burst trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge. This same value is used in the RF Burst trigger source in the Trigger menu. See section “[Trigger Slope](#)” on page 1296 for information on this key and the SCPI command

Trig Delay

This setting delays the measurement timing relative to the Periodic Timer.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger[:SEQuence]:FRAMe:DELay <time> :TRIGger[:SEQuence]:FRAMe:DELay? :TRIGger[:SEQuence]:FRAMe:DELay:STATe OFF ON 0 1 :TRIGger[:SEQuence]:FRAMe:DELay:STATe?
Notes:	Note that delay is used when the sync source is not set to OFF. If the sync source is set to OFF, offset is used.
Preset:	Off, 1.000 us
State Saved:	Saved in instrument state
Min:	-150 ms
Max:	+500 ms
Default Unit:	s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3401

Sync Holdoff

Sync Holdoff specifies the duration that the sync source signal must be kept false before the transition to true to be recognized as the sync timing. The periodic timer phase is aligned when the sync source signal becomes true, after the Holdoff time is satisfied.

Trigger

A holdoff of 2 ms will work with most WiMAX signals, but there may be cases where the burst off duration is less than 1 ms and this value will need to be changed.

Key Path:	Trigger, Periodic Timer
Remote Command:	:TRIGger [:SEQuence] :FRAMe:SYNC:HOLDoff <time> :TRIGger [:SEQuence] :FRAMe:SYNC:HOLDoff? :TRIGger [:SEQuence] :FRAMe:SYNC:HOLDoff:STATe OFF ON 0 1 :TRIGger [:SEQuence] :FRAMe:SYNC:HOLDoff:STATe?
Preset:	On, 1.000 ms
State Saved:	Saved in instrument state
Min:	0 ms
Max:	+500 ms
Default Unit:	s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3518

Baseband I/Q

Pressing this key when it is not selected selects Baseband I/Q as the trigger. Pressing the key when it is already selected accesses the Baseband I/Q trigger type selection menu. The key is annotated to display which of the Baseband I/Q trigger types is currently selected.

Key Path:	Trigger
State Saved:	Saved in instrument state
Readback:	The Baseband I/Q trigger source that becomes active when this key is selected is displayed. The possible values are "I/Q Mag", "I", "Q", "Input I", "Input Q", and "Aux I/Q Mag".
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29986

I/Q Mag

Pressing this key, when it is not selected, selects the I/Q magnitude signal as the trigger. The I/Q Magnitude trigger condition is met when the I/Q magnitude crosses the I/Q magnitude trigger level. The magnitude is measured at the output of the main I/Q digital receiver.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR IQM
Readback Text:	I/Q Mag

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29952

Trigger Level

Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path:	Trigger, Baseband I/Q, I/Q Mag
Remote Command:	:TRIGger[:SEquence]:IQMag:LEVel <ampl > :TRIGger[:SEquence]:IQMag:LEVel?
Example:	TRIG:IQM:LEV -30 dBm
Notes:	The I/Q reference impedance is used for converting between power and voltage.
Preset:	-25 dBm
State Saved:	Saved in instrument state
Range:	-200 dBm to 100 dBm
Readback Text:	<level> dBm
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29953

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Baseband I/Q, I/Q Mag
Remote Command:	:TRIGger[:SEquence]:IQMag:SLOPe POSitive NEGative :TRIGger[:SEquence]:IQMag:SLOPe?
Example:	TRIG:IQM:SLOP POS
Preset:	POSitive
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29954

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger

Trigger

criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, I/Q Mag
Remote Command:	:TRIGger[:SEquence]:IQMag:DElay <time> :TRIGger[:SEquence]:IQMag:DElay? :TRIGger[:SEquence]:IQMag:DElay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IQMag:DElay:STATe?
Example:	TRIG:IQM:DEL 10 ms TRIG:IQM:DEL:STAT ON
Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29955

I (Demodulated)

Pressing this key, when it is not selected, selects the main receiver's output I voltage as the trigger. The I (Demodulated) trigger condition is met when the I voltage crosses the I voltage trigger level.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR IDEM
Readback Text:	I
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29956

Trigger Level

Sets a level for the I (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path:	Trigger, Baseband I/Q, I (Demodulated)
Remote Command:	:TRIGger[:SEquence]:IDEMod:LEVel <voltage> :TRIGger[:SEquence]:IDEMod:LEVel?
Example:	TRIG:IDEM:LEV 0.5 V
Preset:	0.25 V

State Saved:	Saved in instrument state
Range:	-1 to 1 V
Readback Text:	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29957

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Baseband I/Q, I (Demodulated)
Remote Command:	:TRIGger[:SEquence]:IDEMod:SLOPe POSitive NEGative :TRIGger[:SEquence]:IDEMod:SLOPe?
Example:	TRIG:IDEM:SLOP POS
Preset:	POSitive
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29958

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, I (Demodulated)
Remote Command:	:TRIGger[:SEquence]:IDEMod:DELay <time> :TRIGger[:SEquence]:IDEMod:DELay? :TRIGger[:SEquence]:IDEMod:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IDEMod:DELay:STATe?
Example:	TRIG:IDEM:DEL 10 ms TRIG:IDEM:DEL:STAT ON
Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00

Trigger

Help Map ID:	29959
--------------	-------

Q (Demodulated)

Pressing this key, when it is not selected, selects the main receiver's output Q voltage as the trigger. The Q (Demodulated) trigger condition is met when the Q voltage crosses the Q voltage trigger level.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR QDEM
Readback Text:	Q
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29987

Trigger Level

Sets a level for the Q (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path:	Trigger, Baseband I/Q, Q (Demodulated)
Remote Command:	:TRIGger[:SEquence]:QDEMod:LEVel <voltage> :TRIGger[:SEquence]:QDEMod:LEVel?
Example:	TRIG:QDEM:LEV 0.5 V
Preset:	0.25 V
State Saved:	Saved in instrument state
Range:	-1 to 1 V
Readback Text:	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29960

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Baseband I/Q, Q (Demodulated)
Remote Command:	:TRIGger[:SEquence]:QDEMod:SLOPe POSitive NEGative :TRIGger[:SEquence]:QDEMod:SLOPe?
Example:	TRIG:QDEM:SLOP POS
Preset:	POSitive

State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29961

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, Q (Demodulated)
Remote Command:	:TRIGger [:SEquence] :QDEMod:DELay <time> :TRIGger [:SEquence] :QDEMod:DELay? :TRIGger [:SEquence] :QDEMod:DELay:STATe OFF ON 0 1 :TRIGger [:SEquence] :QDEMod:DELay:STATe?
Example:	TRIG:QDEM:DEL 10 ms TRIG:QDEM:DEL:STAT ON
Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29962

Input I

Pressing this key, when it is not selected, selects the I channel's ADC voltage as the trigger. The Input I trigger condition is met when the voltage crosses the trigger level.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR IINP
Readback Text:	Input I
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29963

Trigger Level

Sets a level for the Input I trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path:	Trigger, Baseband I/Q, Input I
-----------	---------------------------------------

Trigger

Remote Command:	:TRIGger[:SEQuence]:IINPut:LEVel <voltage> :TRIGger[:SEQuence]:IINPut:LEVel?
Example:	TRIG:IINP:LEV 0.5 V
Preset:	0.25 V
State Saved:	Saved in instrument state
Range:	-1 to 1 V
Readback Text:	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29964

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Baseband I/Q, Input I
Remote Command:	:TRIGger[:SEQuence]:IINPut:SLOPe POSitive NEGative :TRIGger[:SEQuence]:IINPut:SLOPe?
Example:	TRIG:IINP:SLOP POS
Preset:	POSitive
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29965

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, Input I
Remote Command:	:TRIGger[:SEQuence]:IINPut:DELay <time> :TRIGger[:SEQuence]:IINPut:DELay? :TRIGger[:SEQuence]:IINPut:DELay:STATe OFF ON 0 1 :TRIGger[:SEQuence]:IINPut:DELay:STATe?
Example:	TRIG:IINP:DEL 10 ms TRIG:IINP:DEL:STAT ON

Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29966

Input Q

Pressing this key, when it is not selected, selects the Q channel's ADC voltage as the trigger. The Input Q trigger condition is met when the voltage crosses the trigger level.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR QINP
Readback Text:	Input Q
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29967

Trigger Level

Sets a level for the Input Q trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path:	Trigger, Baseband I/Q, Input Q
Remote Command:	:TRIGger [:SEquence] :QINPut:LEVel <voltage> :TRIGger [:SEquence] :QINPut:LEVel?
Example:	TRIG:QINP:LEV 0.5 V
Preset:	0.25 V
State Saved:	Saved in instrument state
Range:	-1 to 1 V
Readback Text:	0.1 of displayed unit (V, mV, etc.)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29968

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a

Trigger

falling edge.

Key Path:	Trigger, Baseband I/Q, Input Q
Remote Command:	:TRIGger[:SEquence]:QINPut:SLOPe POSitive NEGative :TRIGger[:SEquence]:QINPut:SLOPe?
Example:	TRIG:QINP:SLOP POS
Preset:	POSitive
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29969

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, Input Q
Remote Command:	:TRIGger[:SEquence]:QINPut:DELay <time> :TRIGger[:SEquence]:QINPut:DELay? :TRIGger[:SEquence]:QINPut:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:QINPut:DELay:STATe?
Example:	TRIG:QINP:DEL 10 ms TRIG:QINP:DEL:STAT ON
Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29970

Auxiliary Channel I/Q Mag

Pressing this key, when it is not selected, selects the Auxiliary Channel I/Q magnitude signal as the trigger. The Auxiliary Channel I/Q Magnitude trigger condition is met when the auxiliary receiver's I/Q magnitude output crosses the Auxiliary I/Q magnitude trigger level.

Key Path:	Trigger, Baseband I/Q
Example:	TRIG:<meas>:SOUR AIQM

Readback Text:	Aux I/Q Mag
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29971

Trigger Level

Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path:	Trigger, Baseband I/Q, Aux Channel I/Q Mag
Remote Command:	:TRIGger[:SEquence]:AIQMag:LEVel <ampl > :TRIGger[:SEquence]:AIQMag:LEVel?
Example:	TRIG:AIQM:LEV -30 dBm
Notes:	The I/Q reference impedance is used for converting between power and voltage.
Preset:	-25 dBm
State Saved:	Saved in instrument state
Range:	-200 dBm to 100 dBm
Readback Text:	<level> dBm
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29972

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path:	Trigger, Baseband I/Q, Aux Channel I/Q Mag
Remote Command:	:TRIGger[:SEquence]:AIQMag:SLOPe POSitive NEGative :TRIGger[:SEquence]:AIQMag:SLOPe?
Example:	TRIG:AIQM:SLOP POS
Preset:	POSitive
State Saved:	Saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29973

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger

Trigger

criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path:	Trigger, Baseband I/Q, Aux Channel I/Q Mag
Remote Command:	:TRIGger [:SEquence] :AIQMag:DELay <time> :TRIGger [:SEquence] :AIQMag:DELay? :TRIGger [:SEquence] :AIQMag:DELay:STATe OFF ON 0 1 :TRIGger [:SEquence] :AIQMag:DELay:STATe?
Example:	TRIG:AIQM:DEL 10 ms TRIG:AIQM:DEL:STAT ON
Preset:	1 us OFF
State Saved:	Saved in instrument state
Range:	-2.5 s to +10 s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29974

Trigger Center Frequency

This key sets the center frequency to be used by the auxiliary receiver.

Key Path:	Trigger, Baseband I/Q, Aux Channel I/Q Mag
Remote Command:	:TRIGger [:SEquence] :AIQMag:CENTer <freq> :TRIGger [:SEquence] :AIQMag:CENTer?
Example:	:TRIG:AIQM:CENT 10 MHz
Notes:	Trigger CF + 1/2 Trigger BW < Max Trigger CF - 1/2 Trigger BW > Min
Preset:	0 Hz
State Saved:	Saved in instrument state
Range:	-40 MHz to 40 MHz
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29975

Trigger Bandwidth

This key sets the information bandwidth used by the auxiliary receiver for the Auxiliary Channel I/Q Magnitude trigger.

Key Path:	Trigger, Baseband I/Q, Aux Channel I/Q Mag
-----------	---

Remote Command:	:TRIGger[:SEquence]:AIQMag:BANDwidth <freq> :TRIGger[:SEquence]:AIQMag:BANDwidth?
Example:	:TRIG:AIQM:BAND 8 MHz
Notes:	The combined sample rate for the main and auxiliary receivers cannot exceed 100 MSa/sec. The bandwidth available to the Trigger BW is limited to what is available after the main receiver's bandwidth (Info BW, sometimes pre-FFT BW) is set. Because of this limitation, the Max is not always achievable. The combination of Trigger Center Freq and Trigger BW is also limited: Trigger CF + 1/2 Trigger BW < Max Trigger CF – 1/2 Trigger BW > Min
Preset:	Bandwidth option dependent: No Opt: 10 MHz Opt B25: 25 MHz Opt S40: 40 MHz
State Saved:	Saved in instrument state
Range:	10 Hz to Maximum
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	29976

TV

Pressing this key, when it is not selected, selects the TV input signal as the trigger. A new sweep/measurement will start synchronized with the next occurrence of the synchronizing pulse of the selected TV line number.

Pressing this key, when it is already selected, opens a menu of TV Trigger setup functions. The default active function in this menu is the TV line number on which you want to trigger.

The Frame and Field options enable you to determine how the fields of the TV picture signal will be affected by the trigger system. One complete TV image consists of one frame of 525 or 625 horizontal lines depending on the TV standard being used. Each frame is composed of two fields of interlacing lines, each consisting of 262 1/2 lines (or 312 1/2 lines). The fields are called Field One and Field Two. Field One is viewed as having 263 lines (or 313 lines) and Field Two is viewed as having 262 lines (or 312 lines).

For the 525 line NTSC video standard, we refer to TV lines as follows (these are the Field Modes):

Entire Frame, lines 1 to 525

Field One, lines 1 to 263

Field Two, lines 1 to 262 (note that this really refers to "actual" lines 264 to 525)

For the 625 line PAL and SECAM video standards, we refer to TV lines as follows:

Entire Frame, lines 1 to 625

Trigger

Field One, lines 1 to 313

Field Two, lines 314 to 625

As the Field is changed, the appropriate value for Line is chosen to keep triggering on the same line as before, or if this is not possible, the corresponding line in the new Field. For example, suppose line 264 is selected while in the NTSC-M standard and the Entire Frame mode. This is the first line in Field Two. If Field Two is then selected, the Line number changes to Line 1, the same actual line in the TV signal. If Field One is then selected, the line number stays at 1, but now we are triggering in the first line in Field One. The only exception to this is if we are on the last line of Field One and change to Field Two. In this case, we go to the last line in Field Two.

Key Path:	Trigger
Example:	TRIG:SOUR TV Swept SA measurement TRIG:<meas>:SOUR TV Measurements other than Swept SA
Dependencies:	This key only appears in Modes which support TV Trigger, otherwise the key is blanked. If the SCPI command is sent while the key is blanked, an error is returned.
Readback:	This key displays the value read back from TV Line
Status Bits/OPC dependencies:	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3416

TV Line

Selects the TV line number to trigger on. Line number range is dependent on the settings of the **Standard** and **Field** menus within the TV trigger setup functions. When the line number is incremented beyond the upper limit, the value will change to the lower limit and continue incrementing from there. When the line number is decremented below the lower limit, the value will change to the upper limit and continue decrementing from there.

Key Path:	Trigger, TV
Remote Command:	:TRIGger[:SEquence]:TV:LINE <integer> :TRIGger[:SEquence]:TV:LINE?
Example:	TRIG:TV:LINE 20 TRIG:TV:LINE?
Notes:	The range of the TV line number is dependent on the settings of the Standard and Field menus within the TV trigger setup functions.
Preset:	17

State Saved:	Saved in instrument state
Min:	The minimum value is the minimum line, and rolls over to the maximum value. The minimum line number depends on which Field and standard are selected.
Max:	The maximum value is the maximum line, and rolls over to the minimum value. The maximum line number depends on which Field and standard are selected.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3417

Field

Accesses the menu to select the field.

Key Path:	Trigger, TV
Remote Command:	:TRIGger[:SEquence]:TV:FMODE ENTire ODD EVEN :TRIGger[:SEquence]:TV:FMODE?
Example:	TRIG:TV:FMODE EVEN
Notes:	ODD is Field 1 EVEN is Field 2
Dependencies:	This command is available only when Option B7B (TV trigger) is installed.
Preset:	ENTire
Readback:	Displays the Readback value
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3418

Entire Frame

When you select Entire Frame it causes the selected line number to be viewed as an offset into the entire frame starting with line 1, the first line in Field One.

Key Path:	Trigger, TV, Field
Example:	TRIG:TV:FMODE ENT
Min:	1, for all formats.
Max:	525, for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 625, for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L.
Readback:	Entire Frame
Initial S/W Revision:	Prior to A.02.00

Trigger

Help Map ID:	3419
--------------	------

Field One

When you select Field One it causes the selected line number to be viewed as an offset into the first field starting with Line 1, the first line in Field One.

Key Path:	Trigger, TV, Field
Example:	TRIG:TV:FMODE ODD
Min:	Field 1 (ODD) The minimum line is 1
Max:	Field 1 (ODD) Maximum line is 263 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 Maximum line is 313 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L.
Readback:	Field 1
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3420

Field Two

When you select Field Two it causes the selected line number to be viewed as an offset into the second field. If Line 1 is selected, it is the 264th line of the frame (NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M, PAL-60) or the 314th line of the frame (PAL-B,D,G,H,I, PAL-N, PAL-N-Combin, SECAM-L).

Key Path:	Trigger, TV, Field
Example:	TRIG:TV:FMODE EVEN
Min:	Field 2 (EVEN) The minimum line is 1
Max:	Field 2 (EVEN) The maximum line 262 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60 The maximum line is 312 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L
Readback:	Field 2
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3421

Standard

Accesses the Standard menu keys which select from the following TV standards: **NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M, PAL-B,D,G,H,I , PAL-N, PAL-N-Combin, PAL-60, SECAM-L.**

As the TV standard is changed, the current line value is clipped as necessary to keep it valid for the chosen standard and field mode. For example, line 600 is selected in Entire Frame mode in PAL-N; if NTSC-M is selected, the line number is clipped to 525. Or, if line 313 is selected in Field 1 mode in PAL-N and NTSC-M is selected, the line number is clipped to 263. Changing back to the PAL-N standard will leave the line number at 263.

Key Path:	Trigger, TV
Remote Command:	:TRIGger [:SEquence] :TV:STANdard MNTSc JNTSc NTSC443 MPAL BPAL NPAL CPAL PAL60 LSEC :TRIGger [:SEquence] :TV:STANdard?
Example:	TRIG:TV:STAN MPAL TRIG:TV:STAN?
Preset:	MNTS
State Saved:	Saved in instrument state
Readback:	Displays Readback value
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3423

NTSC-M

Sets the TV standard to **NTSC-M**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN MNTS
Readback:	NTSC-M
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3424

NTSC-Japan

Sets the TV standard to **NTSC-Japan**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN JNTS
Readback:	NTSC-Japan

Trigger

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3425

NTSC-4.43

Sets the TV standard to **NTSC-4.43**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN NTSC443
Readback:	NTSC-Japan
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3426

PAL-M

Sets the TV standard to **PAL-M**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN MPAL
Readback:	PAL-M
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3427

PAL-N

Sets the TV standard to **PAL-N**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN NPAL
Readback:	PAL-N
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3428

PAL-N-Combin

Sets the TV standard to **PAL-N-Combin**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN CPAL
Readback:	PAL-N-C

Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3429

PAL-B,D,G,H,I

Sets the TV standard to **PAL-B,D,G,H,I**

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN BPAL
Readback:	PAL-B
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3430

PAL-60

Sets the TV standard to **PAL-60**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN PAL60
Readback:	PAL-N
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3431

SECAM-L

Sets the TV standard to **SECAM-L**.

Key Path:	Trigger, TV, Standard
Example:	TRIG:TV:STAN LSEC
Readback:	SECAM-L
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3432

Auto/Holdoff

Opens up a menu that lets you adjust Auto Trigger and Trigger Holdoff parameters

Key Path:	Trigger
-----------	----------------

Trigger

Readback line:	Displays a summary of the Auto Trig and Holdoff settings, in square brackets First line: Auto Off or Auto On Second Line: "Hldf" followed by: <ul style="list-style-type: none"> • If Holdoff is Off, readback Off • If Holdoff On and Type = Normal, readback value • If Holdoff On and Type = Above, readback value followed by AL • If Holdoff On and Type = Below, readback value followed by BL • If Holdoff Type selection is not supported by the current measurement, Holdoff Type is always Normal
Initial S/W Revision:	A.02.00
Help Map ID:	29989

Auto Trig

Sets the time that the analyzer will wait for the trigger conditions to be met. If they are not met after that much time, then the analyzer is triggered anyway.

Key Path:	Trigger, Auto/Holdoff
Remote Command:	:TRIGger[:SEQuence]:ATRigger <time> :TRIGger[:SEQuence]:ATRigger? :TRIGger[:SEQuence]:ATRigger:STATe OFF ON 0 1 :TRIGger[:SEQuence]:ATRigger:STATe?
Example:	TRIG:ATR:STAT ON TRIG:ATR 100 ms
Notes:	The "time that the analyzer will wait" starts when the analyzer is ready for a trigger, which may be hundreds of ms after the data acquisition for a sweep is done. The "time" ends when the trigger condition is satisfied, not when the delay ends.
Preset:	Off, 100 ms
State Saved:	Saved in instrument state
Min:	1 ms
Max:	100 s
Default Unit:	s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3436

Trig Holdoff

Sets the holdoff time between triggers. When the trigger condition is satisfied, the trigger occurs, the delay begins, and the holdoff time begins. New trigger conditions will be ignored until the holdoff time expires. For a free-running trigger, the holdoff value is the minimum time between triggers.

Key Path:	Trigger, Auto/Holdoff
Remote Command:	:TRIGger [:SEQuence] :HOLDoff <time> :TRIGger [:SEQuence] :HOLDoff? :TRIGger [:SEQuence] :HOLDoff:STATe OFF ON 0 1 :TRIGger [:SEQuence] :HOLDoff:STATe?
Example:	TRIG:HOLD:STAT ON TRIG:HOLD 100 ms
Dependencies:	Unavailable if the selected Input is BBIQ. If this is the case, the key is grayed out if it is pressed the informational message “Feature not supported for this Input” is displayed. If the SCPI command is sent, the error “Settings conflict; Feature not supported for this Input” is generated.
Preset:	Off, 100 ms
State Saved:	Saved in instrument state
Min:	0 s
Max:	0.5 s
Default Unit:	s
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3437

Holdoff Type

Lets you set the Trigger Holdoff Type.

NOTE Holdoff Type is not supported by all measurements. If the current measurement does not support it, this key will be blank and the Holdoff Type will be Normal. If the Holdoff Type SCPI is sent while in such a measurement, the SCPI will be accepted and the setting remembered, but it will have no effect until a measurement is in force that supports Holdoff Type.

Trigger Holdoff Type functionality:

- **NORMal**
This is the “oscilloscope” type of trigger holdoff, and is the setting when the Holdoff Type key does not appear. In this type of holdoff, no new trigger will be accepted until the holdoff interval has expired after the previous trigger.
- **ABOVe**

Trigger

If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) and then remains above the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) after having been above the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed.

- **BELow**

If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) after having been below the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) and then remains below the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed.

Key Path:	Trigger, Auto/Holdoff
Remote Command:	:TRIGger [:SEQuence] :HOLDoff :TYPE NORMal ABovE BELow :TRIGger [:SEQuence] :HOLDoff :TYPE?
Example:	TRIG:HOLD:TYPE NORM
Preset:	All modes but GSM/EDGE: Normal GSM/EDGE: Below
State Saved:	Saved in instrument state
Initial S/W Revision:	A.02.00
Help Map ID:	29990

View/Display

This section describes the Display key, which is the key in the View/Display menu that is common to multiple Modes and Measurements. See the Measurement descriptions for information on the View functions of each measurement.

Display

The **Display** menu is common to most measurements, and is used for configuring items on the display. Some **Display** menu settings apply to all the measurements in a mode, and some only to the current measurement. Those under the **System Display Settings** key apply to all measurements in all modes.

Key Path:	Display
Key Path:	View/Display
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3440


Annotation

Turns on and off various parts of the display annotation. The annotation is divided up into four categories:

1. **Meas Bar:** This is the measurement bar at the top of the screen. It does not include the settings panel or the Active Function. Turning off the Meas Bar turns off the settings panel and the Active Function. When the Meas Bar is off, the graticule area expands to fill the area formerly occupied by the Meas Bar.
2. **Screen Annotation:** this is the annotation and annunciation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) This does NOT include the marker number or the N dB result. When off, the graticule expands to fill the entire graticule area.
3. **Trace annotation:** these are the labels on the traces, showing their detector (or their math mode).
4. **Active Function annotation:** this is the active function display in the meas bar, and all of the active function values displayed on softkeys.

See the figure below. Each type of annotation can be turned on and off individually.

View/Display

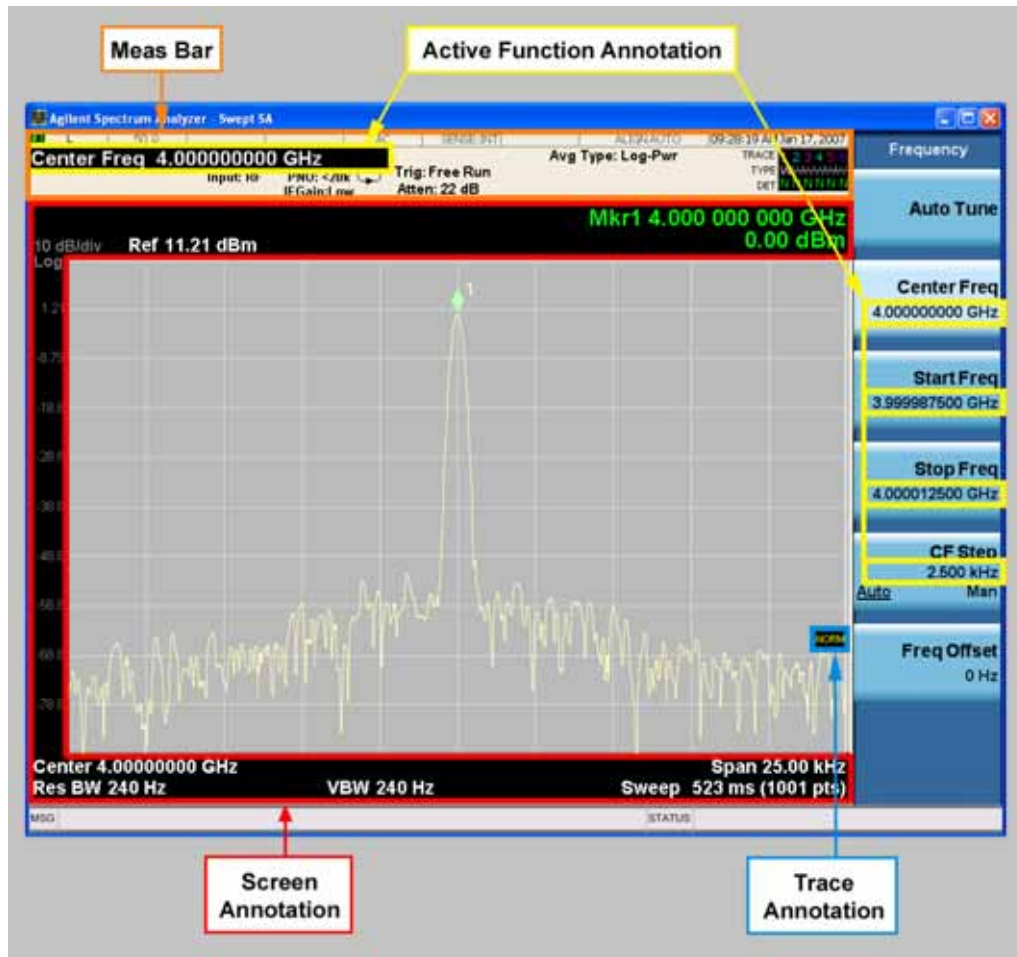

Key Path:	View/Display, Display
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3441

Meas Bar On/Off

This function turns the Measurement Bar on and off, including the settings panel. When off, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Key Path:	View/Display, Display, Annotation
Remote Command:	:DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1 :DISPlay:ANNotation:MBAR[:STATe]?
Example:	DISP:ANN:MBAR OFF
Dependencies:	Grayed out and forced to OFF when System Display Settings, Annotation is set to Off.

Preset:	On This should remain Off through a Preset when System Display Settings, Annotation is set to Off.
State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3443

Screen

This controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the y-axis annotation. This does NOT include marker annotation (or the N dB result). When off, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule as described in the Trace/Detector chapter.

Key Path:	View/Display, Display, Annotation
Remote Command:	:DISPlay:ANNOtation:SCReen[:STATe] OFF ON 0 1 :DISPlay:ANNOtation:SCReen[:STATe] ?
Example:	DISP:ANN:SCR OFF
Dependencies:	Grayed-out and forced to OFF when System Display Settings, Annotation is set to Off.
Preset:	On This should remain Off through a Preset when System Display Settings, Annotation is set to Off
State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3442

Trace

Turns on and off the labels on the traces, showing their detector (or their math mode) as described in the Trace/Detector section.

If trace math is being performed with a trace, then the trace math annotation will replace the detector annotation.

Key Path:	View/Display, Display, Annotation
Remote Command:	:DISPlay:ANNOtation:TRACe[:STATe] ON OFF 1 0 :DISPlay:ANNOtation:TRACe[:STATe] ?
Example:	DISP:ANN:TRAC OFF
Preset:	Off


View/Display

State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3444

Active Function Values On/Off

Turns on and off the active function display in the Meas Bar, and all of the active function values displayed on the softkeys.

Note that all of the softkeys that have active functions have these numeric values blanked when this function is on. This is a security feature..

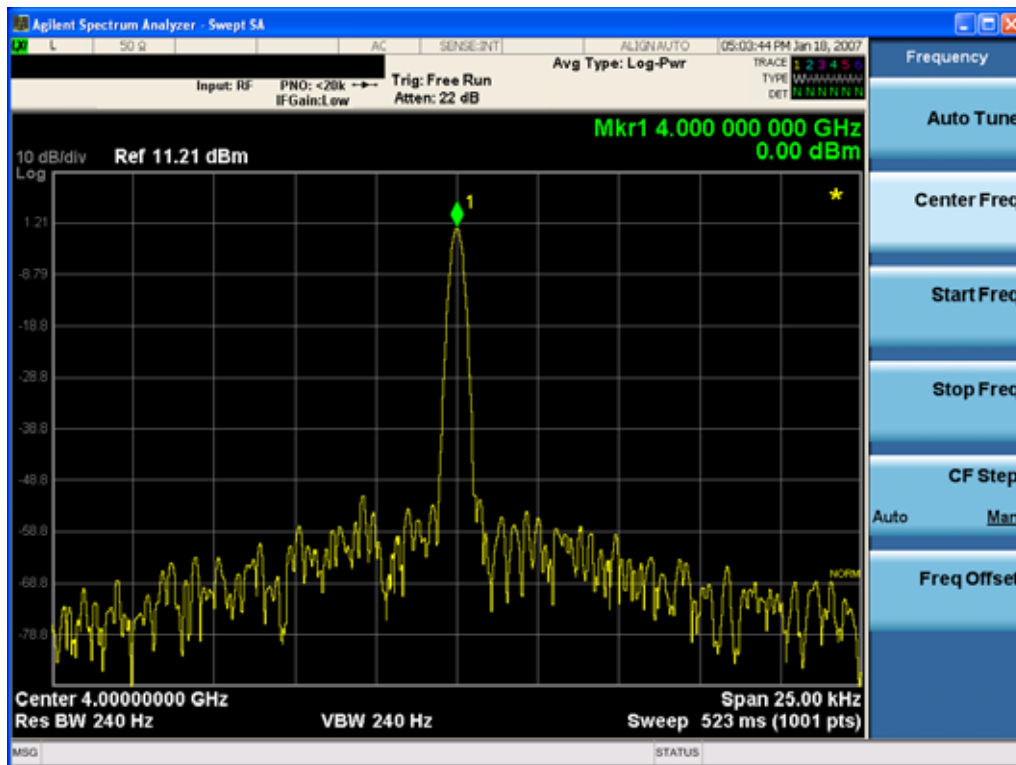

Key Path:	View/Display, Display, Annotation
Remote Command:	:DISPlay:ACTivefunc[:STATE] ON OFF 1 0 :DISPlay:ACTivefunc[:STATE]?
Example:	DISP:ACT OFF
Dependencies:	Grayed out and forced to OFF when System Display Settings, Annotation is set to Off.
Preset:	On This should remain Off through a Preset when System Display Settings, Annotation is set to Off

State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3445

Title

Displays menu keys that enable you to change or clear a title on your display.

Key Path:	View/Display, Display
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3446

Change Title

Writes a title into the "measurement name" field in the banner, for example, "Channel Power".

Press **Change Title** to enter a new title through the alpha editor. Press **Enter** or **Return** to complete the entry. Press **Cancel (Esc)** to cancel the entry and preserve your existing title.

The display title will replace the measurement name. It remains for this measurement until you press **Change Title** again, or you recall a state, or a Preset is performed. A title can also be cleared by pressing **Title, Clear Title**.

NOTE Notice the inclusion of the <measurement> parameter in the command below. Because each measurement remembers the Display Title, the command must be qualified with the measurement name.

Key Path:	View/Display, Display, Title
Mode:	All
Remote Command:	:DISPlay:<measurement>:ANNotation:TITLe:DATA <string> :DISPlay:<measurement>:ANNotation:TITLe:DATA?
Example:	DISP:ACP:ANN:TITL:DATA "This Is My Title" This example sets the title to: This Is My Title
Notes:	Pressing this key cancels any active function. When a title is edited the previous title remains intact (it is not cleared) and the cursor goes at the end so that characters can be added or BKSP can be used to go back over previous characters.
Preset:	No title (measurement name instead)
State Saved:	Saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Modified at S/W Revision:	A.02.00, A.03.00

View/Display

Help Map ID:	3447
--------------	------

Clear Title

Clears a title from the front-panel display. Once cleared, the title cannot be retrieved. After the title is cleared, the current Measurement Name replaces it in the title bar.

Key Path:	View/Display, Display, Title
Example:	The following commands clear the title and restore the measurement's original title: DISP:ACP:ANN:TITL:DATA "" This example is for ACP; the measurement name is required.
Notes:	Uses the :DISPlay:<measurement>:ANNotation:TITLe:DATA <string> command with an empty string.
Preset:	Performed on Preset.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3448

Graticule

Pressing Graticule turns the display graticule On or Off. It also turns the graticule y-axis annotation on and off.

Key Path:	View/Display, Display
Remote Command:	:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1 :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?
Example:	DISP:WIND:TRAC:GRAT:GRID OFF
Notes:	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the x-axis and y-axis.
Preset:	On
State Saved:	saved in instrument state
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3449

Display Line

Activates an adjustable horizontal line that is used as a visual reference line. The line's vertical position corresponds to its amplitude value. The value of the display line (for example, "-20.3 dBm") appears above the line itself on the right side of the display in the appropriate font.

The display line can be adjusted using the step keys, knob, or numeric keypad. The unit of the Display

Line is determined by the **Y axis unit** setting under **Amplitude**. If more than one window has a display line, the display line of the selected window is controlled.

If the display line is off the screen, it shows as a line at the top/bottom of the screen with an arrow pointing up or down. As with all such lines (Pk Thresh, Trigger Level, etc.) it is drawn on top of all traces.

The display line is unaffected by Auto Couple.

Key Path:	View/Display, Display
Remote Command:	:DISPlay:WINDow [1] :TRACe:Y:DLINe <ampl> :DISPlay:WINDow [1] :TRACe:Y:DLINe? :DISPlay:WINDow [1] :TRACe:Y:DLINe:STATe OFF ON 0 1 :DISPlay:WINDow [1] :TRACe:Y:DLINe:STATe?
Example:	DISP:WIND:TRAC:Y:DLIN:STAT ON DISP:WIND:TRAC:Y:DLIN:STAT -32 dBm
Preset:	Set the Display Line to Off and -25 dBm on Preset. When the Display Line goes from Off to On, if it is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was. The Display Line's value does not change when it is turned off.
State Saved:	Saved in instrument state.
Min:	-∞ (minus infinity) in current units
Max:	+∞ (plus infinity) in current units
Default Unit:	Depends on the current selected Y axis unit
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3450

System Display Settings

These settings are "Mode Global" – they affect all modes and measurements and are reset only by **Restore Misc Defaults** or **Restore System Defaults** under System.

Key Path:	View/Display, Display
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3488

Annotation Local Settings

This is a Mode Global override of the meas local annotation settings. When it is **All Off**, it forces **Screen Annotation, Meas Bar, Trace, and Active Function Values** settings to be **OFF** for all measurements in all modes. This provides the security based "annotation off" function of previous test sets; hence it uses the legacy SCPI command.

View/Display

When it is **All Off**, the **Screen, Meas Bar, Trace, and Active Function Values** keys under the **Display, Annotation** menu are grayed out and forced to **Off**. When **Local Settings** is selected, you are able to set the local annotation settings on a measurement by measurement basis.

Key Path:	View/Display, Display, System Display Settings
Remote Command:	:DISPlay:WINDow[1]:ANNotation[:ALL] OFF ON 0 1 :DISPlay:WINDow[1]:ANNotation[:ALL]?
Example:	:DISP:WIND:ANN OFF
Preset:	On (Set by Restore Misc Defaults)
State Saved:	Not saved in instrument state.
Backwards Compatibility Notes:	The WINDow parameter and optional subopcode is included for backwards compatibility but ignored – all windows are equally affected.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3451

Theme

This key allows you to change the Display theme. This is similar to the Themes selection under Page Setup and Save Screen Image. The four themes are detailed below.

Key Path:	View/Display, Display, System Display Settings
Remote Command:	:DISPlay:THEMe TDColor TDMonochrome FCOLor FMONochrome :DISPlay:THEMe?
Example:	DISP:THEM TDM sets the display theme to 3D Monochrome.
Notes:	TDColor – 3D is the standard color theme with filling and shading TDMonochrome – is similar to 3D color, but only black is used FCOLor – flat color is intended for inkjet printers to conserve ink. It uses a white background instead of black. FMONochrome – is like flat color, but only black is used
Preset:	TDColor (Set by Restore Misc Defaults)
State Saved:	Not saved in instrument state.
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3452

Backlight

Accesses the display backlight on/off keys. This setting may interact with settings under the Windows "Power" menu.

When the backlight is off, pressing ESC, TAB, SPACE, ENTER, UP, DOWN, LEFT, RIGHT, DEL,

BKSP, CTRL, or ALT turns the backlight on without affecting the application. Pressing any other key will turn backlight on and could potentially perform the action as well.

Key Path:	View/Display, Display, System Display Settings
Remote Command:	:DISPlay:BACKlight ON OFF :DISPlay:BACKlight?
Preset:	ON (Set by Restore Misc Defaults)
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3453

On

Turns the display backlight on.

Key Path:	View/Display, Display, System Display Settings, Backlight
Example:	DISP:BACK ON
Readback:	On
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3516

Off

Turns the display backlight off.

Key Path:	View/Display, Display, System Display Settings, Backlight
Example:	DISP:BACK OFF
Readback:	Off
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3517

Backlight Intensity

An active function used to set the backlight intensity. It goes from 0 to 100 where 100 is full on and 0 is off. This value is independent of the values set under the Backlight on/off key.

Key Path:	View/Display, Display, System Display Settings
Remote Command:	:DISPlay:BACKlight:INTensity <integer> :DISPlay:BACKlight:INTensity?
Example:	DISP:BACK:INT 50
Preset:	100 (Set by Restore Misc Defaults)

View/Display

Min:	0
Max:	100
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3454

Full Screen

When **Full Screen** is pressed the measurement window expands horizontally over the entire instrument display. The screen graticule area expands to fill the available display area.

It turns off the display of the softkey labels, however the menus and active functions still work. (Though it would obviously be very hard to navigate without the key labels displayed.) Pressing **Full Screen** again while Full Screen is in effect cancels Full Screen.

Note that the banner and status lines are unaffected. You can get even more screen area for your data display by turning off the Meas Bar (in the Display menu) which also turns off the settings panel.

Full Screen is a Meas Global function. Therefore it is cancelled by the **Preset** key.

Key Path:	Display
Remote Command:	:DISPlay:FSCreen[:STATe] OFF ON 0 1 :DISPlay:FSCreen[:STATe] ?
Preset:	Off
State Saved:	Not saved in instrument state.
Backwards Compatibility SCPI:	:DISPlay:MENU[:STATe] OFF ON 0 1 This emulates ESA full screen functionality, which is the same as the FSCreen command in PSA except that the sense of on/off is reversed (that is, OFF means the menus are OFF, so Fullscreen is ON) and the default is ON (meaning Fullscreen is OFF).
Backwards Compatibility Notes:	1. In ESA/PSA, Full Screen was turned on with a softkey, so pressing any other key turned Full Screen off. In the X-Series, because a hardkey is provided to turn this function on and off, pressing any other key no longer turns off Full Screen
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	3464

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit so you can tell that the instrument is on. The display enable setting is mode global. The reasons for turning the display off are three:

- To increase speed as much as possible by freeing the instrument from having to update the display

- To reduce emissions from the display, drive circuitry
- For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending the SYSTem:DEFaults MISC command or the DISPlay:ENABle ON (neither *RST nor SYSTem:PRESet enable the display.)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys or by sending the SYSTem:DEFaults MISC command or the DISPlay:ENABle ON (neither *RST nor SYSTem:PRESet enable the display.)

and you are using either the SYSTem:KLOCK command or GPIB local lockout, then no front-panel key press will turn the display back on. You must turn it back on remotely.

Remote Command:	:DISPlay:ENABle OFF ON 0 1 :DISPlay:ENABle?
Example:	DISP:ENAB OFF
Couplings:	DISP:ENAB OFF turns Backlight OFF and DISP:ENAB ON turns Backlight ON. However, settings of Backlight do not change the state of DISP:ENAB
Preset:	On Set by SYST:DEF MISC, but Not affected by *RST or SYSTem:PRESet.
State Saved:	Not saved in instrument state.
Backwards Compatibility Notes:	1. SYST:PRES no longer turns on DISPlay:ENABle as it did in legacy analyzers
Initial S/W Revision:	Prior to A.02.00
Help Map ID:	0