


77303 30F

Interface PC Board Assembly
(7010-7730-300-D1)

ADDRESS	S T A T U S	DATA BITS							
		7	6	5	4	3	2	1	0
000	W	DUPLEX GENERATOR	DUPLEX CLOCK	DUPLEX DATA	DUPLEX LATCH	RF: 800 M	RF: 400 M	RF: 200 M	RF: 100 M
001	W	RF: 80 M	RF: 40 M	RF: 20 M	RF: 10 M	RF: 8 M	RF: 4 M	RF: 2 M	RF: 1 M
002	W	RF: 800 K	RF: 400 K	RF: 200 K	RF: 100 K	RF: 80 K	RF: 40 K	RF: 20 K	RF: 10 K
	R	FREQ METER SWITCH A	FREQ METER SWITCH B	FREQ METER SWITCH C	FREQ METER SWITCH D	DCS NEG DEV	DCS POS DEV	SPARE	SPARE
003	W	RF: 8 K	RF: 4 K	RF: 2 K	RF: 1 K	RF: 800 Hz	RF: 400 Hz	RF: 200 Hz	RF: 100 Hz
	R	MOD METER SWITCH A	MOD METER SWITCH B	MOD METER SWITCH C	MOD METER SWITCH D	+12V ON RCV	SQUELCH GATE	MODE SWITCH A	MODE SWITCH B
004	W	TONE GEN 52424.8 Hz	TONE GEN 26212.4 Hz	TONE GEN 13106.2 Hz	TONE GEN 6553.6 Hz	TONE GEN 3276.8 Hz	TONE GEN 1638.4 Hz	TONE GEN 819.2 Hz	TONE GEN 409.6 Hz
005	W	TONE GEN 204.8 Hz	TONE GEN 102.4 Hz	TONE GEN 51.2 Hz	TONE GEN 25.6 Hz	TONE GEN 12.8 Hz	TONE GEN 6.4 Hz	TONE GEN 3.2 Hz	TONE GEN 1.6 Hz
006	W	TONE GEN 0.8 Hz	TONE GEN 0.4 Hz	TONE GEN 0.2 Hz	TONE GEN 0.1 Hz	TONE GEN CTL 3	TONE GEN CTL 2	TONE GEN CTL 1	TONE GEN CTL 0
007	W	MOD METER A	MOD METER B	MOD METER C	MOD METER D	MOD METER AVG/PEAK	MOD METER 2ND FREQ	REC (1) GEN (0)	DUP ENABLE (0)
008	W	SPARE	SPARE	FREQ ERROR XTB	FREQ ERROR X1/X3	FREQ ERROR YTB	FREQ ERROR AUDIO/RF	TONE CTL 4	SPARE
010	W	MODULATION 6 K	MODULATION 15 K	MODULATION 200 K	MODULATION FM WIDE	MODULATION SSB	MODULATION AM		METER SELECT
	R		METERS STATUS	METERS POLARITY	METERS OVERRANGE	METERS B12	METERS B11	METERS B10	METERS B9
011	R	METERS B8	METERS B7	METERS B6	METERS B5	METERS B4	METERS B3	METERS B2	METERS B1
012	R			MODULATION 6 K	MODULATION 15 K	MODULATION 200 K	MODULATION FM WIDE	MODULATION SSB	MODULATION AM
013	W	DTMF RESET					WRITE - DTMF LATCH		
	R	DTMF READY	DTMF INSTALLED						

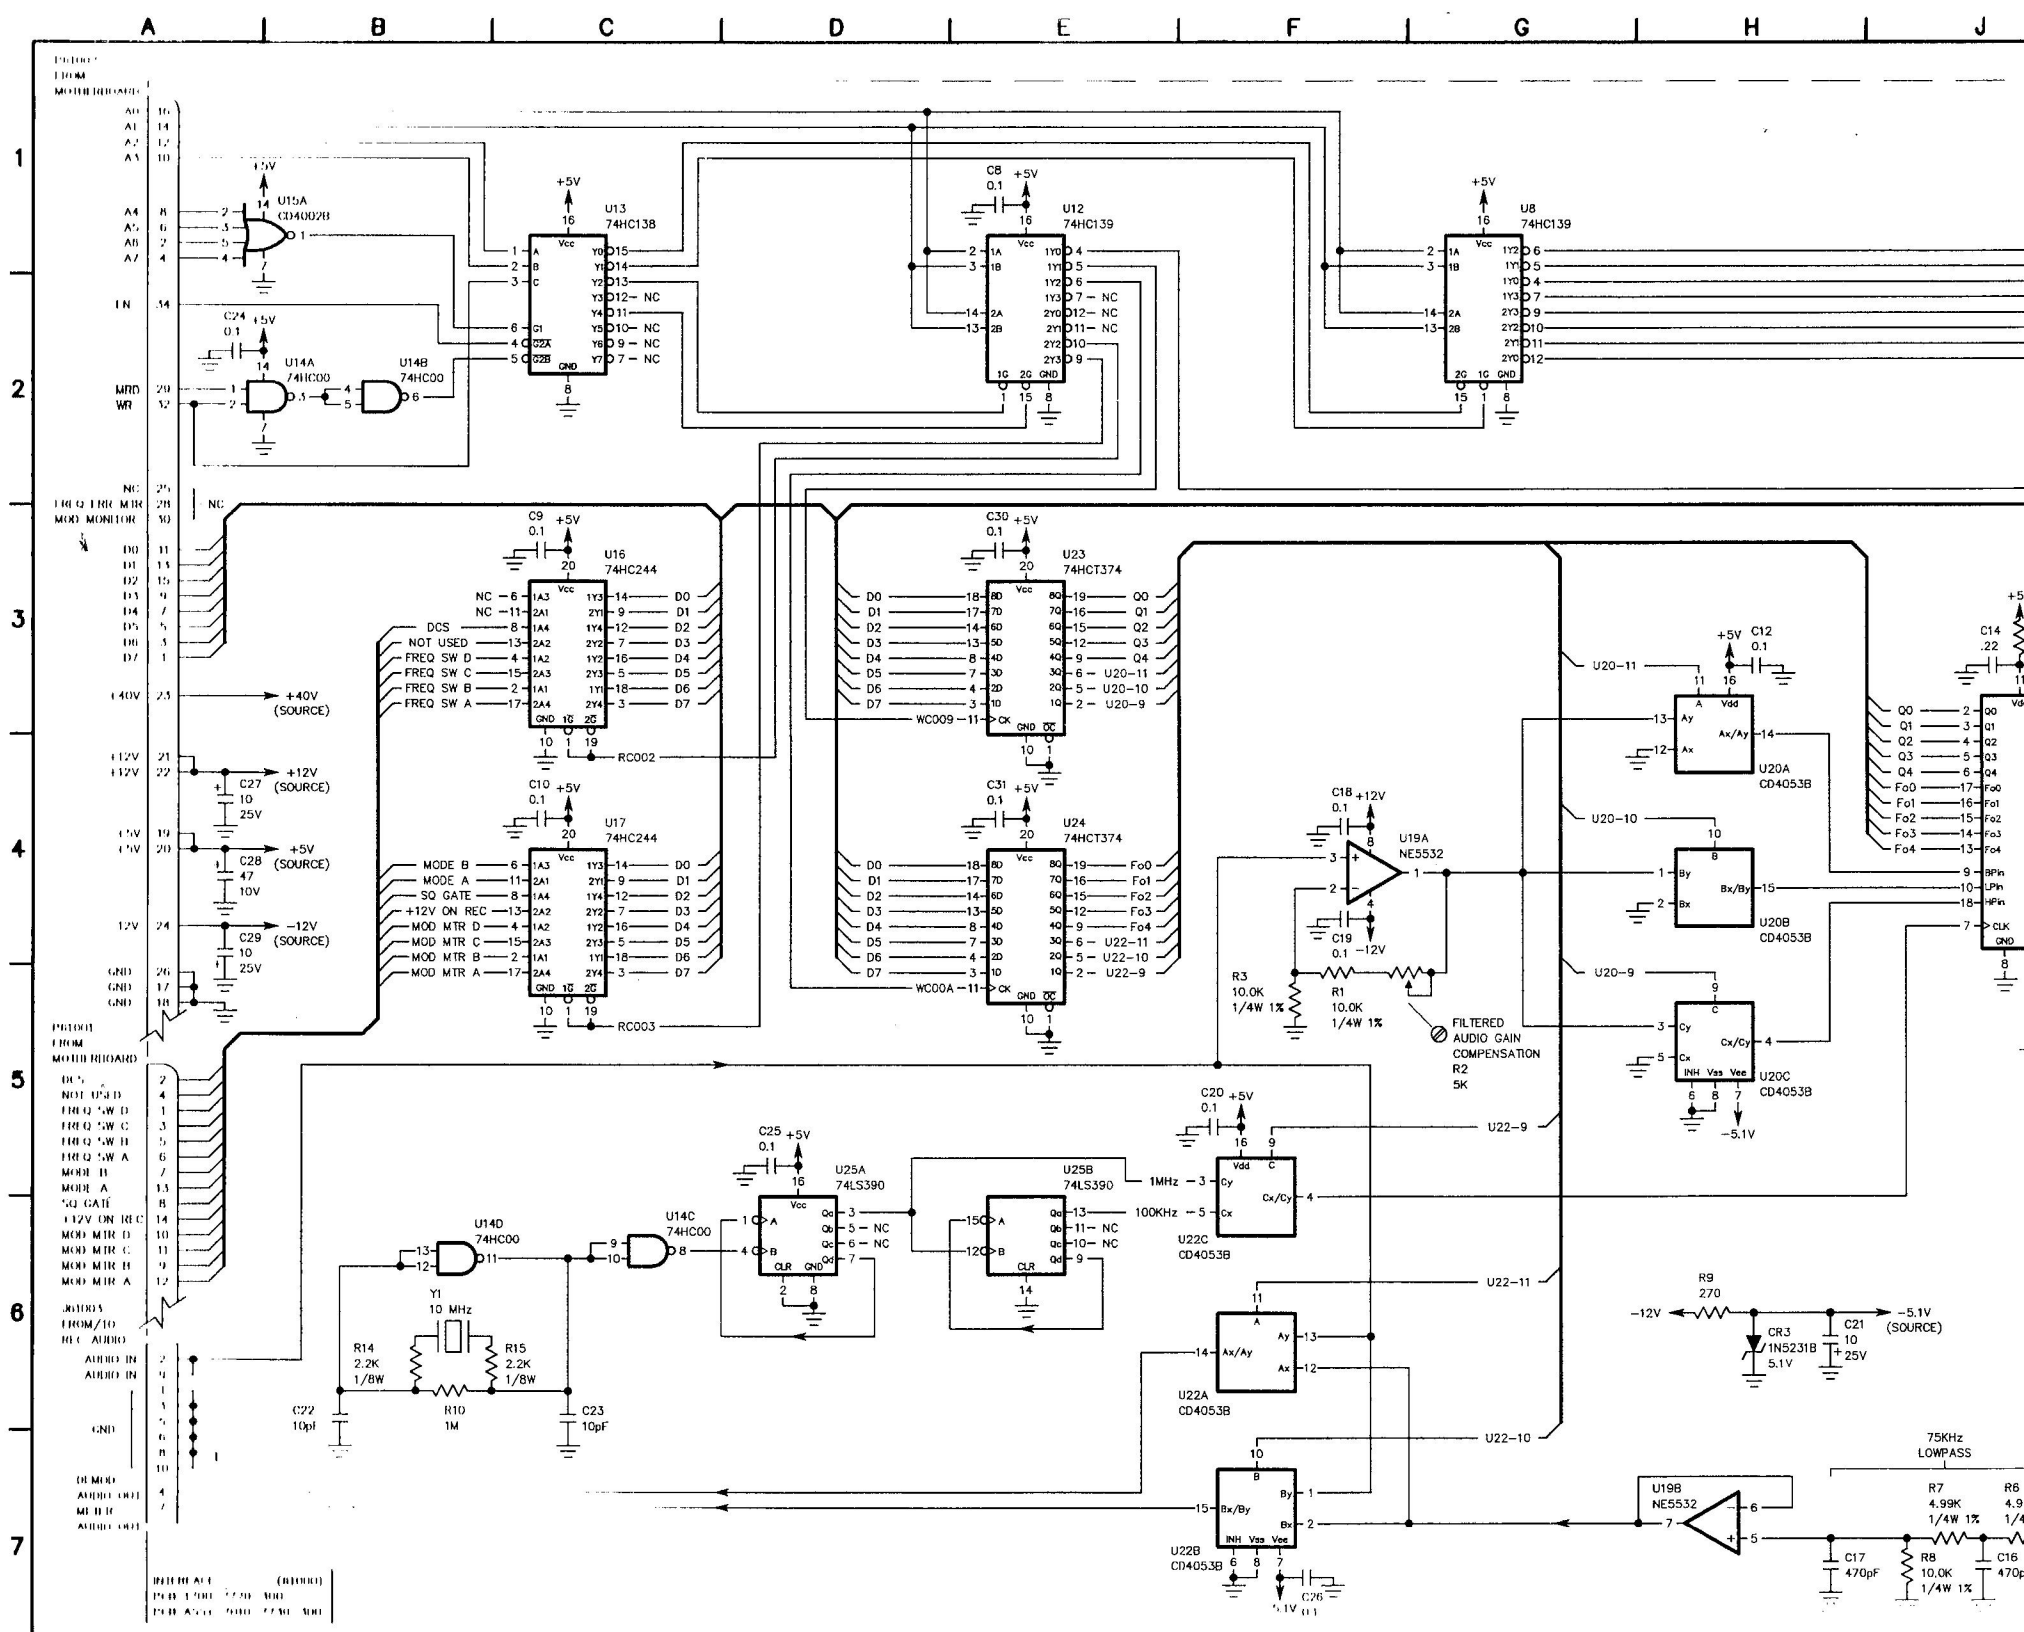

REF: ALL (0000)
 PCB 1.00 1.50 0.00
 PCB 5.00 0.00 2.00 0.00

