



Table of Contents

Overview

Description 1-1
Applications 1-1
Conventions used in this Manual 1-2

Safety Information

Operator Safety 2-1

Operation

Connecting the Probe to the Test Instrument 3-1
Connecting the Probe to the Test Circuit 3-1
Probe Input Loading 3-4
Grounding the Probe 3-4
Selecting the Proper Range 3-6
Operation with LeCroy Oscilloscopes 3-7
AP034 Use with the ADPPS Power Supply..... 3-8
Adding Offset 3-10
Autobalance 3-11
Designing Test Fixtures for the AP033 Probe 3-12

Reference Information

Differential Mode and Common Mode 4-1
Differential Mode Range and Common Mode Range 4-1
Common Mode Rejection Ratio 4-2

Care and Maintenance

Cleaning 5-1
Calibration Interval 5-1
Service Strategy 5-1
Troubleshooting 5-1
 Trace Off Scale 5-1



Incorrect Frequency Response	5-2
DC Errors	5-3
Poor Common Mode Rejection	5-3
Returning a Defective Probe	5-4
Replacement Parts	5-5
Matching Procedure for ± 10 Plug-On External Attenuator	5-8
Equipment Required	5-8
Procedure.....	5-9

Performance Verification

Test Equipment Required	6-1
Preliminary Procedure.....	6-3
Procedure.....	6-3
Check Gain Accuracy.....	6-4
Check High Frequency CMRR.....	6-5
Check Low Frequency CMRR.....	6-8
Performance Verification Test Record	6-11

Adjustment Procedure

Introduction	7-1
Test Equipment Required	7-2
Preliminary Procedure.....	7-4
Procedure.....	7-7
Adjust Coarse DC Balance (R226)	7-7
Adjust Fine DC Balance (R304)	7-8
Adjust Low Frequency CMRR (R7).....	7-9
Adjust Offset (R330)	7-11
Adjust Gain (R322C)	7-13
Adjust Final Attenuator Compensation (C17)	7-14
Adjust Final Attenuator CMRR (C18A).....	7-15
Assemble Probe and Amplifier.....	7-16
Attenuator Matching and Final Check.....	7-17

Specifications

Nominal Characteristics 8-1
Warranted Electrical Characteristics 8-2
Typical Electrical Characteristics 8-3
General Characteristics 8-5
Compliance and Certifications 8-6
Operator Safety 8-6
Standard Accessories 8-7
Optional Accessories 8-7
Oscilloscope Software Compatibility 8-7

#



BLANK PAGE