

INSTRUCTION MANUAL

PT8100

VHF/UHF MOBILE RADIO

INSTRUCTION MANUAL

VHF/UHF MOBILE RADIO

MANDATORY SAFETY INSTRUCTIONS TO INSTALLERS AND USERS

Use Only manufacturer or dealer supplied antennas.

Antenna minimum safe distance: 108 cm.

Antennas used for this transmitter must not exceed an antenna gain of 3 dB.

The FCC (Federal Communications Commission) has adopted a safety standard for human exposure to RF energy which is below the OSHA (Occupational Safety and Health Act) limits.

Antenna mounting: The antenna supplied by the manufacturer or radio dealer must not be mounted at a location such that during radio transmission, any person can come closer than the above indicated minimum safe distance to the antenna (i.e. 108cm).

To comply with current FCC RF Exposure limitations, the antenna must be installed at or exceeding the minimum safe distance indicated above, and in accordance with the requirements to the antenna manufacturer or supplier.

Vehicle installation: The antenna can be mounted at the center of a vehicle metal roof or trunk lid if the minimum safe distance is observed.

Antenna substitution: Don't substitute any antenna for the one supplied or recommended by the manufacturer or radio dealer. You may be exposing person(s) to excessive radio frequency radiation. You may contact your radio dealer or the manufacturer for further instructions.

Maintain a separation distance from the antenna to person(s) at least 108cm.

This transmitter is authorized to operate with a maximum duty factor of 50%, in a typical push-to-talk mode, for satisfying FCC RF exposure compliance requirements.

Warning

Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Operating Instruction of PT8200

Contents

1. Package-opened Inspection and Installing.....	2
2. Radio Overview.....	3
3. Basic Operation.....	5
4. Programmable Button Function.....	5
5. Radio Call.....	6
6. Select Zone.....	7
7. Talkaround.....	7
8. Utilities.....	7
9. Scan.....	8

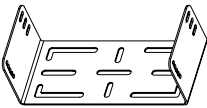
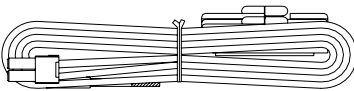
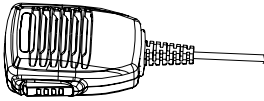
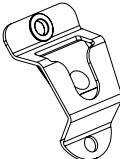

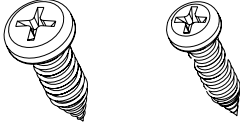
9.1 Start/End Scan Function	8
9.2 Nuisance Delete.....	8
9.3 Edit Scan List	8
9.4 Add or Delete the Channels in the Scan List.....	8
9.5 Set Priority Channel	8
10. FCS scan.....	9
10.1 Enable FCS Scan function.....	9
10.2 Edit FCS scan list.....	9
11. OST.....	10
12. Channel edit (Manual modulation).....	10
13. Wired Clone Mode	11
14. Trouble Shooting Guide.....	11
15. Major Specifications	12

1. Package-opened Inspection and Installing

Please check the host in the package and the supplied accessories in the following table before using. Any articles are found lost or damaged, please contact the distributor without delay.

1.1 Supplied Accessories

No.	Accessories	Quantity
01	Fixed bracket	1
02	Power Cable	1
03	Hand Microphone	1
04	Microphone Hanger	1
05	M4*10 Combination Screw	4
06	M4*16 Self-tapping Screw	2
07	M5*16 Self-tapping Screw	4
08	Instruction Manual	1
09	Warranty Card	1

 Fixed bracket	 Power Cable	 Hand Microphone
 Microphone Hanger	 M4*10 Combination Screw	 M5*16 / M4*16 Self-tapping Screw

1.2 Preparation

1.2.1 Connection of Power Cable

First of all, please check whether there is a hole for the power cable on the insulating board. If no, please bore the board with the suitable drill bit and fix a rubber grommet on it.

Afterwards, please have the cable pass through the insulating board and lead from the car into the car engine. Connect the red conductor to the positive terminal of the accumulator and the black conductor to the negative terminal.

At last, ring the remained conductor and fix it.

Note: Please maintain the sufficient relaxation of the power cable to make it convenient to dismantle the radio in the state of power connection.

1.22 Radio Installing

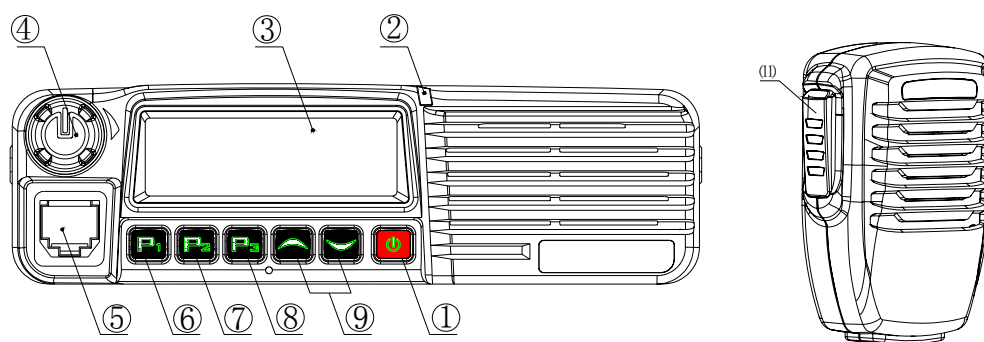 
Warning: For passengers' safety, please fix the radio firmly on the fixed bracket so that the radio will not be loosened in case of collision.

- 1) The fixed bracket is taken as an example. Draw the position and drill a hole on the instrument panel first, and then install the fixed bracket with 4 M5*16 self-tapping screws. (Note: please fix the radio at the position convenient for operation and control, and leave an enough space for fixation and connection of the cable.)
- 2) Slide the radio into the fixed bracket and fix it with 4 M4*10 combination screws (plus plain washer and spring washer). (Different combinations of fixing holes are selectable to adjust the radio to the proper height and visual angle.)
- 3) Connect the antenna and the power cable to the radio.
- 4) Install the microphone hanger at the position easy to use, with 2 M4*16 self-tapping screws. (The microphone and its cable should be fixed at the position not affecting safe driving.)
- 5) Connect the microphone to the microphone jack on the front panel of the radio and put it on the hanger.

Note: When replacing the protective tube for the power cable, please use the one of the same specification without fail. It is not allowed to change it into the tube of higher capacity.

2. Radio Overview

2.1 Description of External View



- (1)  power button

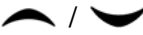
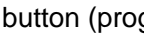
Press this button for a long time (more than 1.5 seconds) to switch the radio on/off.

- (2) LED indicator

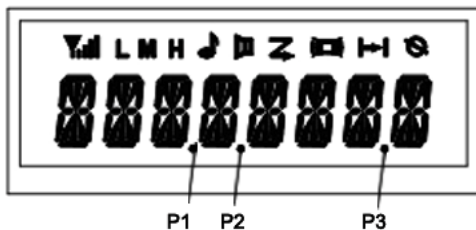 
The red indicator will light while transmitting; the green indicator will light when it receives the carrier.





 
The led flashes orange on received correct DTMF/2Tone signaling.

The red indicator flashes in the scanning process.

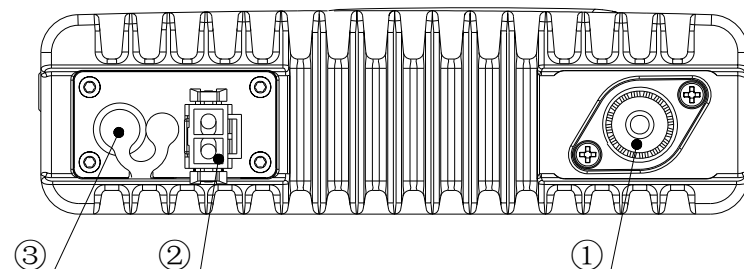 
- (3) LCD display screen
For details, see “LCD Display”.
- (4) Volume Control knob
To be used to adjust volume.
- (5) Microphone/Programming Interface
- (6) **P1** button (programmable button)
- (7) **P2** button (programmable button)
- (8) **P3** button (programmable button)
- (9)  /  button (programmable button)
- (10) PTT button (on the hand microphone)
Press the PTT button first, and then speak to the microphone to transmit the voice to the other. Release to receive.

2.2 LCD 显示



Display	Description
	It means the receiving signal strength. 4 lines means the strongest signal.
LMH	Transmission power level “L” means the transmission of signal for the radio at the lower power; “M” means the transmission of signal for the radio at the medium power; “H” means the transmission of signal for the radio at the high power;
	Call Received indicator. The radio receives a selective call/call alert.
	Monitor State Indicator.
	Scan Indicator.
	Talkaround Indicator.
P2	OST Indicator.

2.3 Rear Panel



- (1) Antenna Interface
- (2) Power Interface
- (3) External Speaker Interface

3. Basic Operation

1. Startup:

Press the red POWER button for a long time (programmable, default set 2 seconds) to switch the radio on/off

2. Volume

Press the “MONITOR” or “Squelch” button to listen to the background noise first, and then adjust the volume by turning the volume control knob.

3. Channel

The radio can provide 256 conventional channels (16 Zones can be programmed, from 1 zone to 16 zone, 16 channels is in each zone at most; Zone 0, which cannot be programmed, includes all the valid channels.). Press the “CHANNEL UP” or “CHANNEL DOWN” button to select the channel. Press the “ZONE UP” or “ZONE DOWN” button to select the group you require.



 

4. Transmission



To send a call, press the PTT button and speak to the microphone in the normal voice. Please keep the microphone about 3 or 4 cm far from your mouth. After speaking, please loosen the PTT button.


5. Receive

The radio will return to the receiving state after you loosen the PTT button. The distributor may have set the CTCSS/DCS signaling in the programmed radio of your radio. On the channels with CTCSS/DCS are set, you can only hear the call from other radio with the same CTCSS/DCS.

4. Programmable Button Function

 / , , **(P2, P3)**,  can be programmed as one of the auxiliary functions.

Buttons	Function Description
0. None	No function
1. Channel Up	Select the next channel
2. Channel Down	Select the previous channel
3. Zone Up	Select the next zone
4. Zone Down	Select the previous zone
5. Display Channel Frequency	Press this button and the LCD will show the frequency of the current channel.
6. Display Channel Name	Press this button and the LCD will show the name of the current channel.
7. Display Mode Switch	Press this button and the LCD will show “Channel Number”, “Channel Name”, “Zone Number, Zone Name” and “Channel Frequency” alternately.
8. OST	Change the setup of preset CTCSS/DCS for the current channel.
9. Power level Selection	Press this button to make selection among the high, medium and low transmission power, and “H”, “M” and “L” will be shown on the LCD to represent the current transmission power.
10. Squelch Level Selection	Press this button to enter the “Squelch Level Adjustment Mode” first, and then press the  /  button to adjust the level. Press the P3 button to save the selected squelch level and quit this mode.
11. Key lock	To toggle between locking/unlocking your radio's keypad.
12. Scan	Start/close the scanning function of system.
13. Nuisance Delete	When one channel continually generated unwanted noise. This allows you

	temporary remove the channel from the current active scan.
14. Public Address	Start/end the public address function. Press this button and the function will be active. Press the PTT button and speak to the microphone so that you can hear your voice through the external speaker. Press this button once again and return to the normal user mode.
15. Home Channel	Changes to the home channels.
16. Talkaround	Switch the radio between talkaround and repeater mode.
17. Monitor momentary/ Call Cancel	Press this button, CTCSS, DCS, 2Tone/DTMF signaling is closed as setting, release it and return the normal operation.
18. Monitor/Call Cancel	Press this button to trigger this function and the CTCSS, DCS, and 2Tone/DTMF signaling will be closed, so you can receive the signal that can't be heard in the normal operation. Press this button again to return to the normal operation. Press this button in the selective call state to quit such a state.
19. Squelch off momentary/ Call Cancel	Hold this button to open the squelch. Loosen this button to return to the normal operation. Press this button in the selective call state to quit such a state.
20. Squelch off/Call Cancel	Press this button to open squelch, press it again to return to normal operation. Press the button in the selective call state to quit such a state
21. Emergency Alarm	Press the top button which programmed as Emergency Alarm, the emergency tone could be sent as the set in program software, and the identity and background sound could also be sent to your partners and system.
22. Call Button 1	Sends the DTMF/2Tone code assigned to call 1 key.
23. Call Button 2	Sends the DTMF/2Tone code assigned to call 2 key.
24. Call Button 3	Sends the DTMF/2Tone code assigned to call 3 key.
25. Call Button 4	Sends the DTMF/2Tone code assigned to call 4 key.
26. Menu Select /Enter	To enter the menu mode or make menu selections.
27. Lone worker	Enables Lone worker function
28. Scan List Edit	Press this button and the radio will enter the fast menu mode for scan list edit. For details, see "Menu Operation".
29. Backlight Select	Press the button, the backlight could be chosen among light for long time, dark for long time, and light automatically.
30. FCS	Enable system FCS scan function.
31. Zone 0 Scan	Press the button to add the present channel into the zone 0 scan list. If icon  is displayed on the screen, it means that that channel has been added. Press the button again to delete the present channel.



 


Long time button: when the time to press the button is shorter than this time, enable the short button function, when longer than this time, enable the long button function.

ON/OFF button press time: time to be set to turn on the radio.

Monitor/ Hook Detection: select the Hook or Desk Mic Monitor function.


5. Radio Call

5.1 Send Selective Call

- A. Press "Menu Select/Enter" button to enter the menu mode.
- B. Press  /  button until "RADIOCAL".
- C. Press  button to select "SEL CALL".
- D. Press  /  button until the required call list appears.
- E. Press "PTT" button to send the selective call.

- F. Press “PTT” button and speak to the microphone in normal voice. Please keep the microphone about 3 to 4 cm far from your mouth. After speaking, please loosen the “PTT”.
- G. Press **P3**) button to return to the previous operation.


5.2 Receive Selective Call

Receiving a selective call, you will hear the alert tone and the LED indicator will blink orange. 





Icon flashes and the caller’s ID or name displays.

Press PPT button for callback.

5.3 Call Alert

After the radio receives the call alert, the alert tone will sound and the orange indicator flicker.  icon flashes and the caller’s ID code or name shows until someone answers.

Press the “PTT” button for callback or other buttons for cancellation.

- A. Press “Menu Selection/Enter” button to enter the menu mode.
- B. Press  /  button until “RADIOCAL”.
- C. Press **P3**) button to select “CALL ALT”.
- D. Press  /  button until the required call list is showed.
- E. Press “PTT” button to send the call.
- F. After calling, press **P1** button to return the previous operation.

6. Select Zone



According to the setup of the communication network, the radio can be distributed to different zones. Select the proper zone to realize communicating with the radio from a different zone.

1. Select the zone through menu.

A Press the “Menu Selection/Enter” button to enter the menu mode.

B Press  /  button until “ZONE”.


C Press **P3**) button for selection.

D Press  /  button until the group name you require is appeared.

E Press **P3**) button for selection.



2. Select the group through “ZONE UP” or “ZONE DOWN” button.

7. Talkaround



In the communication network, you can expand communication range through the repeater, but when the mobile radio is out of the communication range, you can connect with other radio in the talkaround method. The talkaround function can be showed by .

1. Select the talk around by menu.

A. Press the “Menu Selection/Enter” button to enter the menu mode.

B. Press  /  button until “RPTRTALK”.

C. Press **P3**) button for selection.

D. Press  /  button until “REPEATE” or “TALKRND”.

E. Press **P3**) button for confirmation.


 

 

 
2. Switch the talkaround or repeater mode through “talkaround” button.

8. Utilities

The item can help you customize some setups of the radio.

The operating steps go as follows:

- A. Press the “Menu Selection/Enter” button to enter the menu mode.

- B. Press  /  button until "UTILITY".
- C. Press **P3** button for selection.
- D. Press  /  button until the items you require are showed.
- E. Press **P3** button for select. The radio will show the current setup.
- F. Press  /  button to show all items that can be set with this item.
- G. Press **P3** button to select this setup
- H. Press **P1** button to return to the previous operation.

Change the setup items in the following table as per the previous steps.





Items	Selectable Setups	Functions
Squelch Level "SQL LEV "	SQL 0 ~ 9	Change the squelch level of the radio.
Transmission Power "PWR LEV "	"PWR LOW " "PWR MID ", "PWR HI "	Select transmission power among high, medium and low levels.
Backlight "BACK LED"	"BLED OFF" "BLED ON " "BL AUTO "	Select among such modes of backlight as "turnoff", "normal turn-on" or "auto".
MCU software version display "SOFT VER" Eg. "R01.00"	Show the software version.

9. Scan

In order to receive the calls from many channels, the radio can be programmed to scan these channels. At most there are 32 channels in each scan list. Each channel can use a scan list together with others or alone. (Zone 0 is the special list, which can have 256 channels.)

9.1 Start/End Scan Function

You can press "SCAN" button directly or enable the scan through the menu. When the scan function is started, if the revert channel function is not chosen in the parameter setting, "SCAN" icon will display, or otherwise revert channel will display.

1. Enter the scan state through menu mode.
 - A. Press the "Menu Selection/Enter" button to enter the menu mode.
 - B. Press  /  button until "SYS SCAN".
 - C. Press **P3** button for selection.
 - D. Press  /  button until "SCAN ON?" or "SCAN OF?"
 - E. Press **P3** button for select.
2. Use the scan button.
 - A. Press "SCAN" button to activate the scan function.
 - B. Press "SCAN" button again to disable the scan function.



9.2 Nuisance Delete






If a channel continuously generates noise or interference, press the button to remove this channel from the scan list temporarily.

Note: the priority channel can't be removed and the last one in the scan list, either.

9.3 Edit Scan List










9.4 Add or Delete the Channels in the Scan List

- A. Press the "Menu Selection/Enter" button to enter the menu mode.
- B. Press  /  button until "PROG LST".

- C. Press **P3**) button to select "SCAN LIST".
- D. Press  /  button until "ADD LST?" or DEL LST?".
- E. Press **P3**) button for selection.
- F. Press  /  button until the channel you want to add or delete.
- G. Press **P3**) button to complete operation you will see "CHNSAVE" (If you added a channel) or "CHN DEL".
- H. Press  button to return to the previous operation.

Note: When there is only one channel in the scan list, this channel is not allowed to be deleted.

9.5 Set Priority Channel

1. Press the "Menu Selection/Enter" button to enter the menu mode.
2. Press  /  button until "PROG LST".
3. Press **P3**) button to select "SCAN LIST".
4. Press  /  button until "ED PRIO?".
5. Press **P3**) button for selection.
6. Press  /  button until "PRIO#1?" or "PRIO#2?".
7. Press **P3**) button to select the type of the required priority channel.
For example, in Step 7, the type of priority channel is "DES?".
Press  /  button to select the required priority channel.
8. Press **P3**) button to complete operation.
9. Press  button to return to the previous operation.

10. FCS scan

In order to search for an applicable channel on the multi-channel repeater, the mobile station should be programmable to scan these channels. Each scan list should have at most 32 channels. And each channel can share the scan list with others or use it alone.

10.1 Enable FCS Scan function

Before enabling FCS scan function, ensure that mobile station is in the normal scan status. You can direct press "FCS" Button to activate scan function. And if you have chosen the option of "PTT to enable FCS function", press PTT to enable scan function. When FCS scan function is enabled, "FCS" icon will display on the screen.








 

- 1) Enable FCS scan by pressing PTT Button

If chosen the option of "PTT to enable FCS function", and scan does not work, press PTT to enable it.

- 2) By pressing FCS Button

In scan status, press FCS Button to enable FCS scan function.



10.2 Edit FCS scan list

- A. Press "Menu Selection/Enter" to enter the menu mode;
- B. Press  /  button until "PROG LST";
- C. Press **P3**) button to select "PROG LST";
- D. Press  /  button until "FCS LST";
- E. Press **P3**) button to select "FCS LST";
- F. Press  /  button until "ADD LST" (add scan channel) or "DEL LST" (delete scan channel);
- G. Press **P3**) button to select;
- H. Press  /  button until the channel you want to add or delete is displayed;
- I. Press **P3**) button to complete operation, and "CHN SAVE" or "CHN DEL" is displayed;
- J. Press  button to return to the previous operation.

11. OST

In a certain specific channel, you can revise the CTCSS/DCS encode/decode setup of current channel.

The operating steps go as follows:











- A. Press the “OST” button to enter the OST menu mode.
- B. Press  /  button until the CTCSS/DCS encode/decode you want.
- C. Press **P3** button to select.

Note:

- When the OST backup function is enabled, the radio retains the OST code of each channel even if the channel is changed or the radio is shut down
- In the OST state, “P2” icon will display.
- Press “OST” button again to return to normal operation.

12. Channel edit (Manual modulation)

If “edit channel” function is enabled, you can add the channel and edit the basic parameters through the buttons on the radio. The steps of manual channel edit are as follows:

- A. Press “Menu Selection/Enter” to enter the selection mode;
- B. Press  /  button until “CH EDIT”;
- C. Press [P3] button to enter into the submenu;
- D. If channel edit password is enabled, press  /  button and [P2] button to input the password;
- E. The default set will load the present channel number. If you want to edit other channels, press  /  button and [P2] button to input the channel you want to edit;
- F. Press [P3] button to confirm it;
- G. Press  /  button until the channel parameter you want to edit are displayed;
- H. Press [P3] button to confirm it;
- I. Press  /  button and [P2]/ [P1] button to input the channel parameter or change the parameter option;
- J. Press [P3] to confirm and save it;
- K. Press [P1] to return to the previous menu. If the radio is in the parameter edit status, return to the previous menu and need not to save the present parameter setting.

The parameter options selected in the channel edit menu are as follows:

No.	Selectable Parameters	Parameter setting
1	Rx frequency (required)	within the limit of frequency range
2	Tx frequency (required)	within the limit of the frequency range
3	Rx CTCSS (optional)	refer to PC software setting
4	Tx CTCSS (optional)	refer to PC software setting
5	Tx power (optional)	high/medium/low, default setting is high
6	Bandwidth (optional)	wide/narrow, default setting is wide
7	Channel naming (required)	digits, letters or parts of the special symbols

13. Wired Clone Mode

If the wired clone function is enabled, the radio will not quit after entering the wired clone mode. To return to normal user mode, the user needs to restart the machine.

The operating steps go as follows:

- 1 Press [P1] and [P2] buttons for power-on until show "CLONE" (for two seconds) and enter the clone mode. If the function is disabled, it will enter the user mode.
- 2 Connect the slave radio with the wired clone cable first, and then turn on.
- 3 Press the master radio's [P3] for starting clone. During transmitting the data, the master radio lights red, and the slave radio lights green.
- 4 Press the [P3] button and the master will return to the clone mode. Continuous clone will start from Step 3.

Note: The master displays "success" and the slave automatically restart upon successfully receipt of all data.

14. Trouble Shooting Guide

No.	Problem	Solution
1	Power on Failure	A The power cable is not connected with the accumulator or the host reliably. Please connect the power cable reliably. B The protective tube of power cable is burnt out. Please replace it. C The power button is of poor contact. Please change the silica gel button or PCB button. D. The accumulator is out of power, please replace it. E The CPU is broken, please replace it.
2	Phase lock loop unlocked (Beeping)	A. The crystal X1 of phase lock loop is broken, please replace it. B. The oscillator tube is broken, please replace it. C. The IC 3 of phase lock loop is broken, please replace it.
3	No talkback	A. The frequency is not right. Please reselect the channel of the same frequency. B. The CTCSS/DCS code is not the same. Please reset it. C. Please check the TX/RX signaling system of both. D. It is out of the effective communication range.
4	No receiving signal	A. The antenna is not in good contact. Please fasten the antenna head. B. The high-frequency amplifying tube Q18 is broken, please replace it. C. The squelch level is set to high, please reset the squelch level. D. The mixed tube Q19 is broken, please replace it. E. The FM IC 6 is broken, please replace it.
5	The red transmission Indicator lights but no sound is heard.	A. Power amplifier IC1 is broken, and no power is output, please replace it. B. The microphone is broken, please replace it.
6	The green	A. The speaker is broken. Please replace it.

	receiving dictator lights but no sound is heard.	B. The audio power amplifier TDA1519C is broken. Please replace IC.
--	--	---

15. Major Specifications

Frequency Range: 136MHz—174MHz 400MHz--450MHz
438MHz--490MHz 470MHz--512MHz

Channel Number: 256 (divided into 16 zones and
at most 16 channels per zone)

Channel Spacing: 25 kHz (wide band)/ 20 kHz (medium band)
/12.5 kHz (narrow band)

Operating Voltage: 13.6V DC±10%

Operating Temperature: -30°C-+55°C

External Dimension: machine only: 150mm*43mm*131mm
plus fixed bracket: 165mm*75mm*131mm

Weight: machine only: 1070g; plus fixed bracket: 1350g