


**Upper film advance unit**

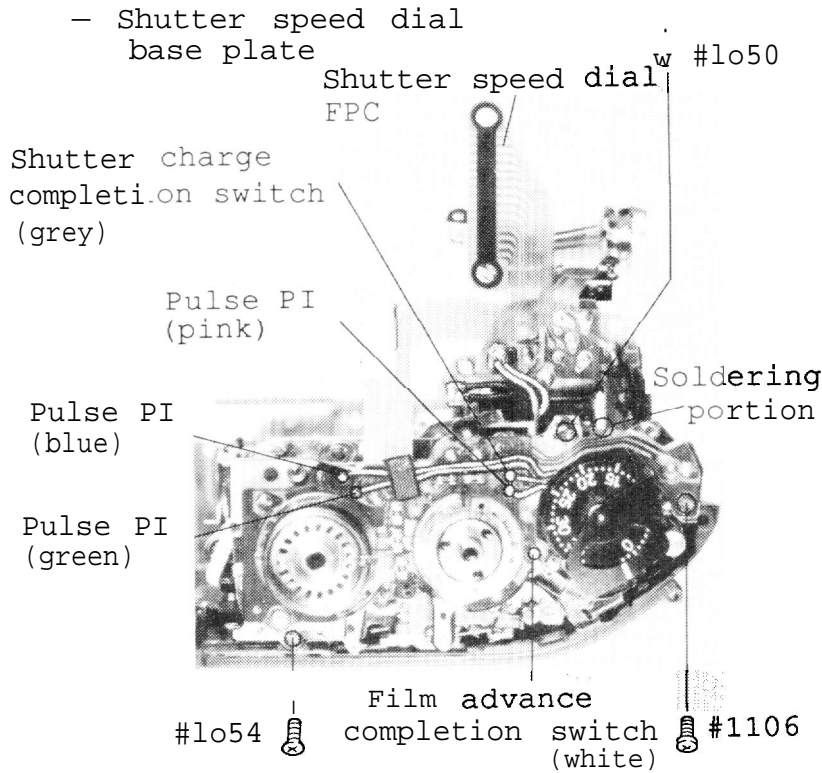


Press contact  
(See page D6)  
Remove shutter speed dial FPC

Remove cables and soldered portion  
(See figure at left)

Shutter speed dial base plate #1050 #1054 #1106

- Film rewind base plate (frame counter unit)

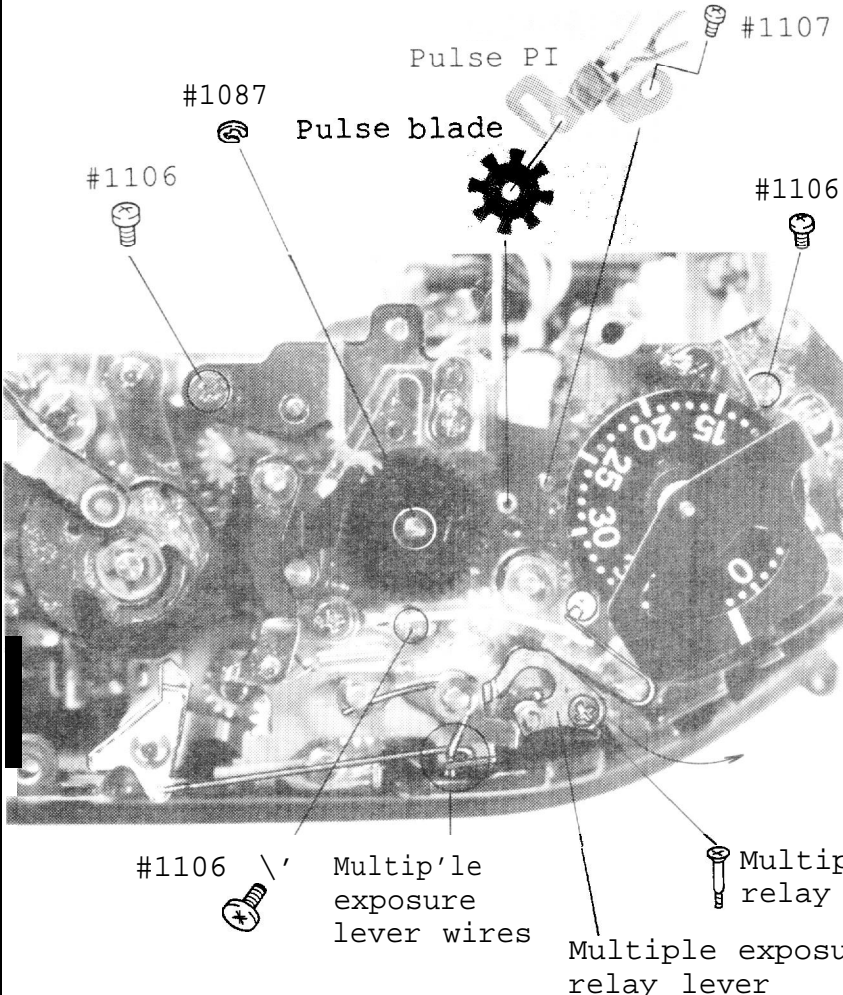

Pulse PI #1107

Pulse blade

E ring (#1087)

Remove multiple exposure lever wires


Multiple exposure relay lever shaft

Upper film advance unit base plate #1106 x 3

Remove the film advance unit base plate by moving the multiple exposure relay lever shaft in the direction as indicated by an arrow.

- Film advance base plate

#1074 x 2

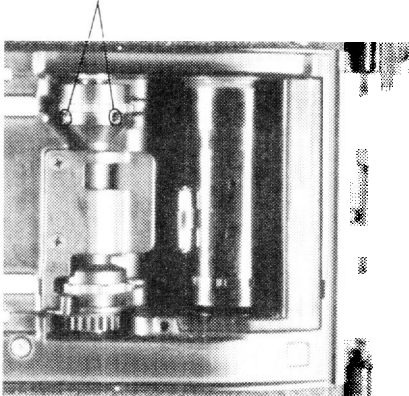

\*Release shutter before disassembling the film advance base plate (Refer to page D6)


Unfasten film sprocket screws  
#1074 x 2

Power supply base plate mounting screw #1021

Bottom body FPC mounting screw #1026

Insulating tape  
Film advance mode base plate  
Power supply base plate

Remove cables (See the figure at left)

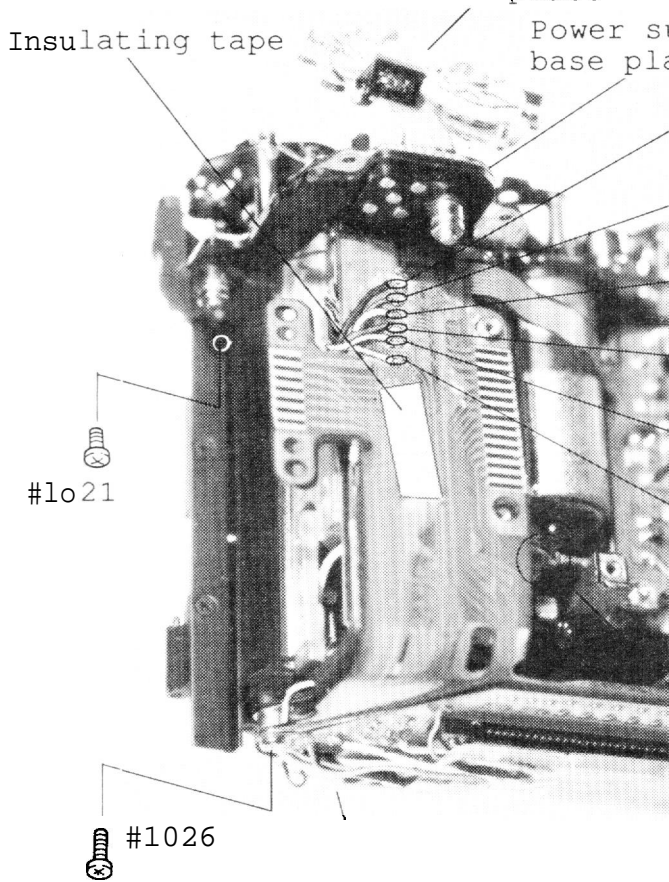

GND (black)  
Vcc1 (red)  
Vcc1 (grey)  
+5.5V (brown)  
+12V (orange)  
CONTR (yellow)

#1021

#1026




Lever under the shutter release through shaft

#1019

Lever under the shutter release through shaft  
#1019


○ Bottom body FPC

Mechanical charge motor (MM)

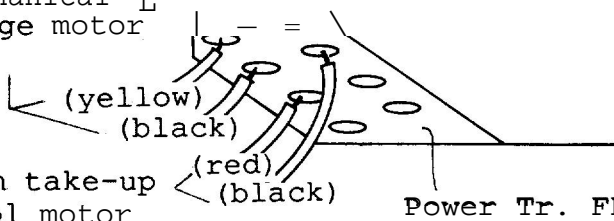

Film take-up spool motor (FM)

Power Tr. FPC

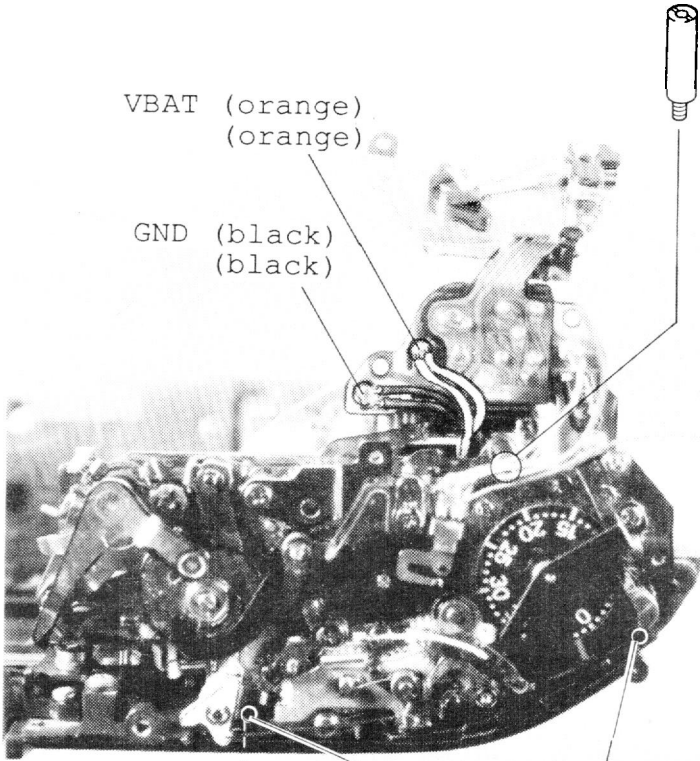


VBAT (orange)  
(orange)

GND (black)  
(black)

#774

Remove cables  
(See the figure at  
left)

Film advance base  
plate mounting screw  
#774, #1049 x 2

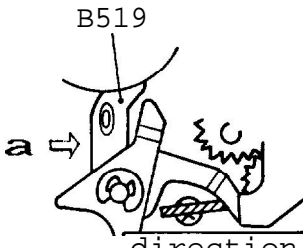


B519

As shown in the figure  
at left, if you can not  
unfasten the screw (#1049)  
due to the lever, push  
the lever (# B519) in the  
-direction indicated by the arrow  
(a) to move back the lever.  
Then you can remove the screw.

Remove the film advance  
side main FPC as shown in  
the figure below.

Power Tr. FPC unit  
#1044 x 2  
Move aside the power Tr.  
FPC in the direction of  
arrow b.

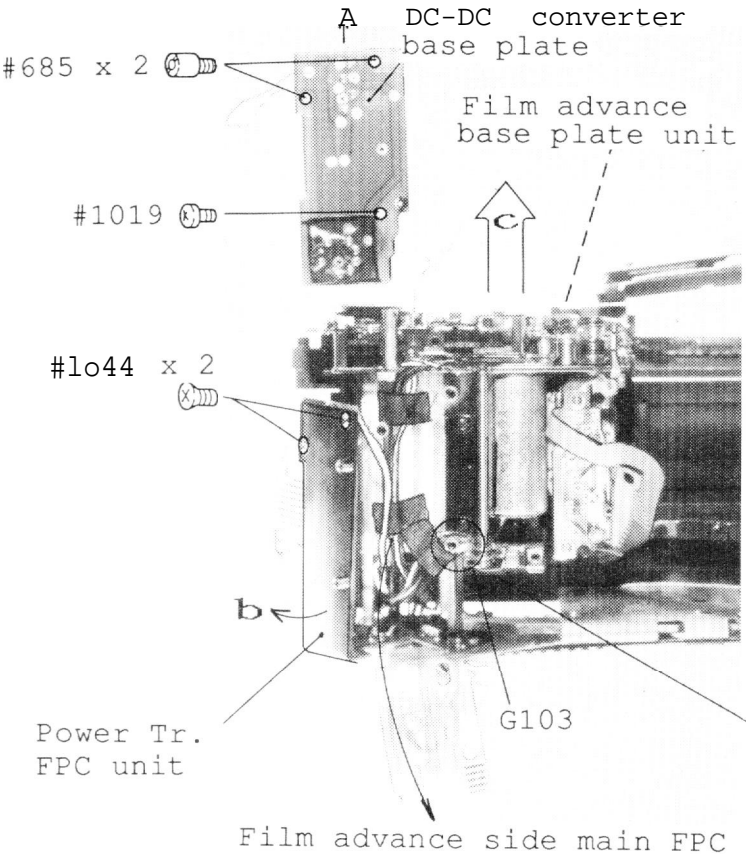

DC-DC converter  
base plate

#685 x 2

Film advance  
base plate unit

#1019

DC-DC converter base  
plate  
#685 X 2, #1019

#1044 x 2

Film advance base plate  
unit  
Peel adhesive of cables  
for shutter charge (MM)  
motor.

Power Tr.  
FPC unit


G103

#616

Film advance side main FPC


Set up the film advance  
base plate in the  
direction indicated by  
the arrow (c) .

Main FPC (0: junction cable)

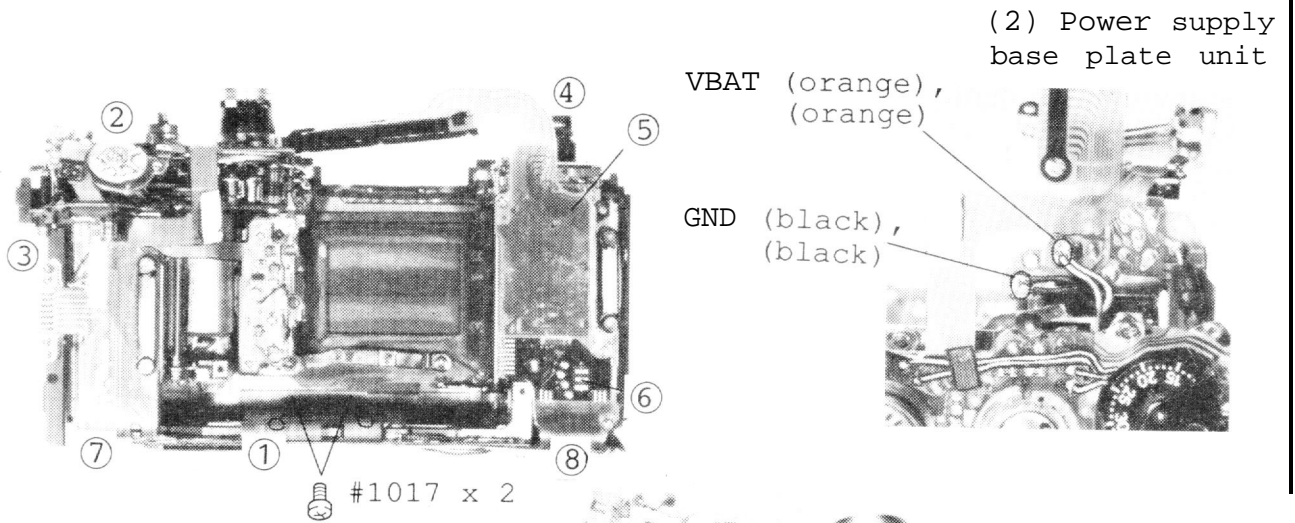


(3) Film advance side FPC unit


\*: From DC-DC converter base plate

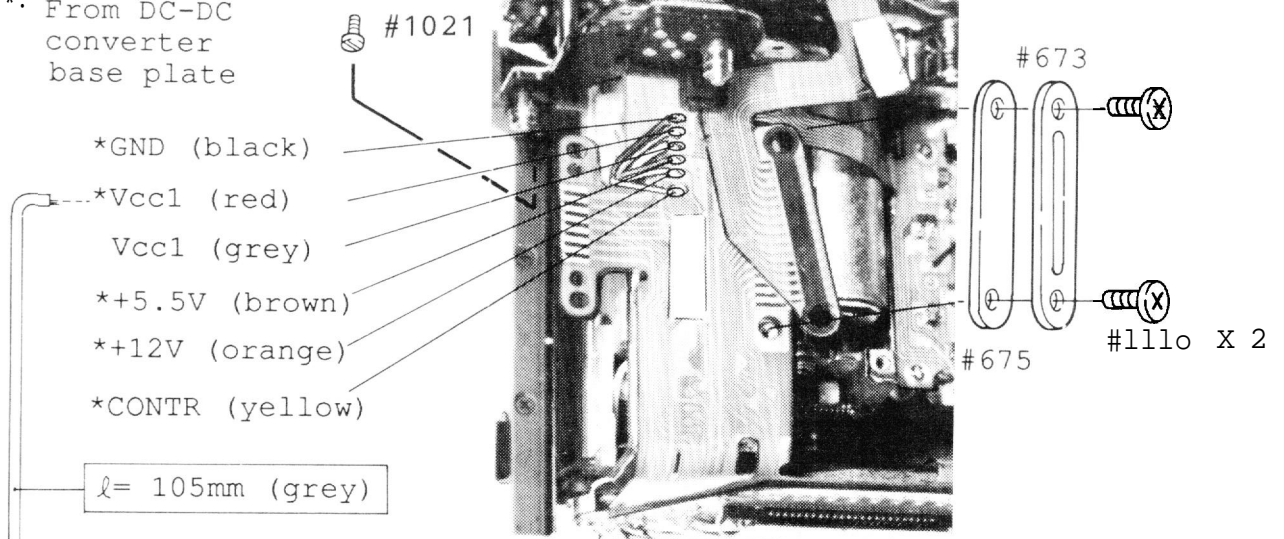


(7) Bottom body film advance side FPC

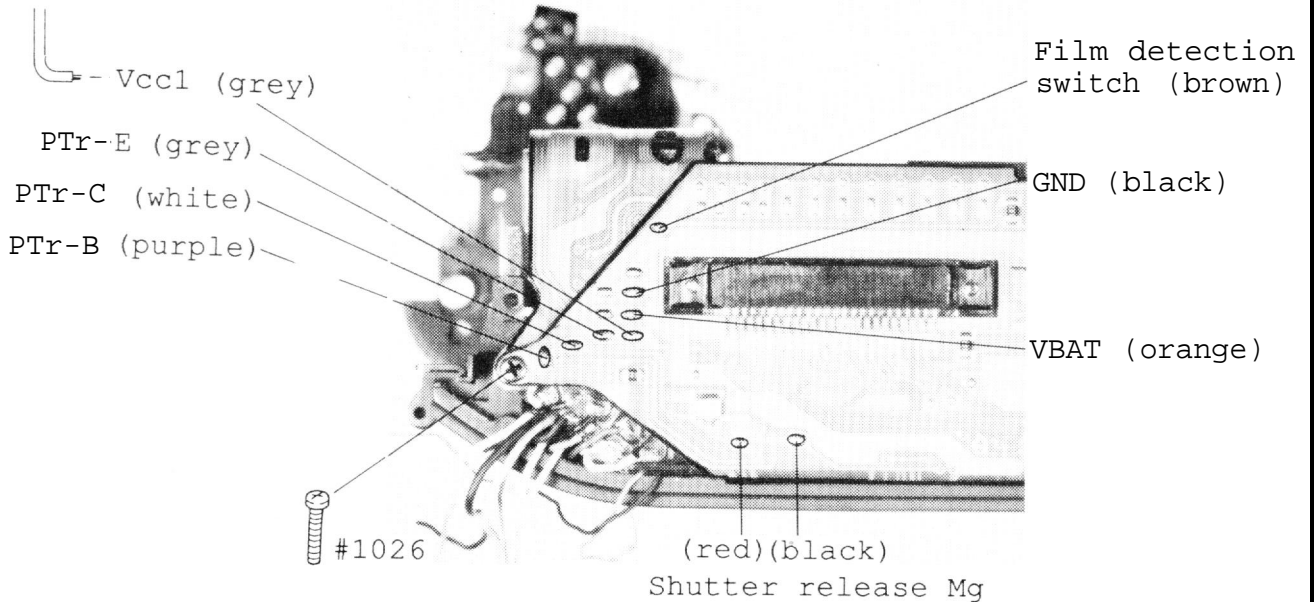


(4) 1S0 film speed base plate unit

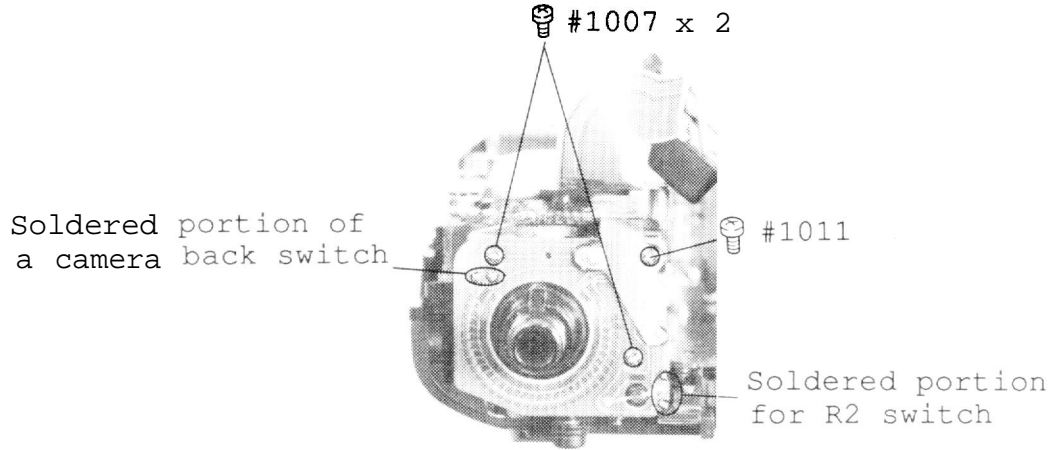


(5) Display FPC unit

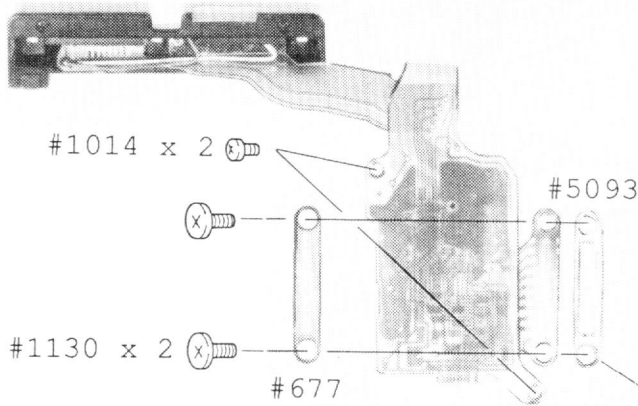

(6) Film rewind side FPC unit

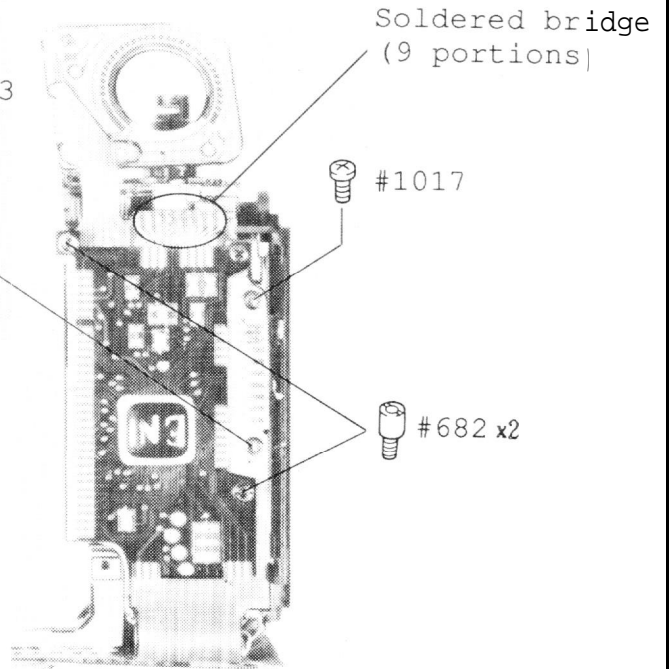

(8) Bottom body film rewind side FPC

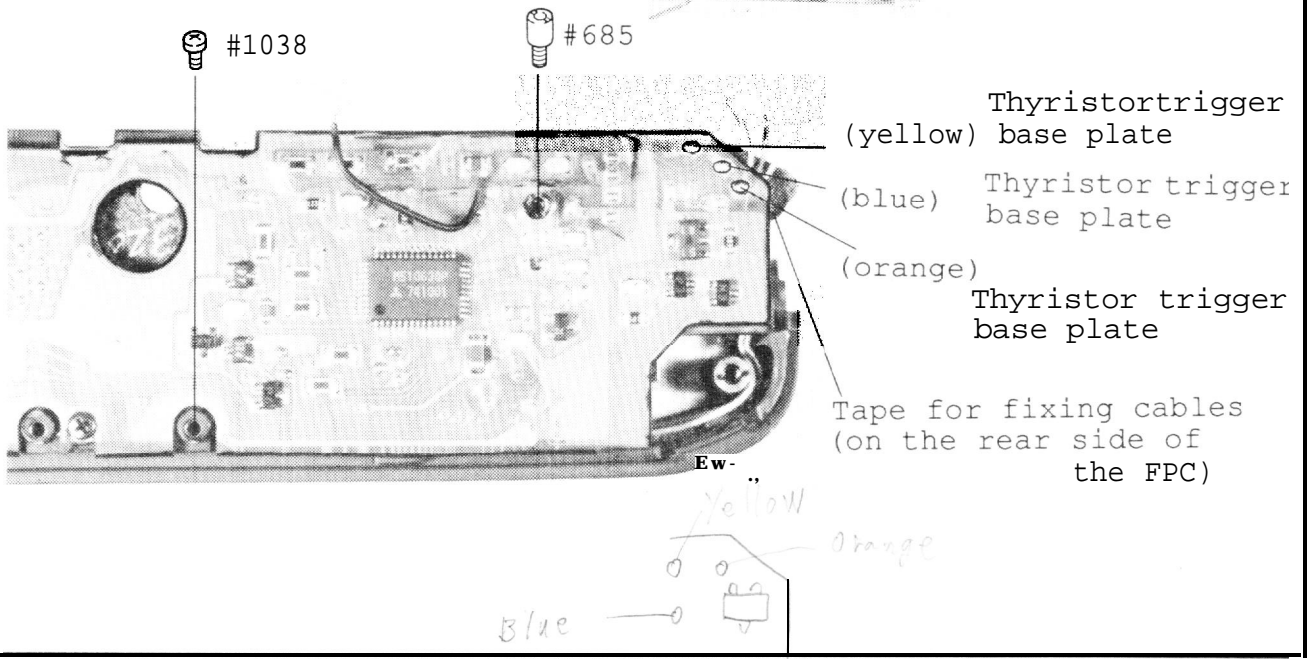

Film rewind unit

(It is possible to disassemble the film rewind unit by removing the display block instead of removing the front body. )

