

SNA-20/-23
Spectrum Analyzer

BN 2101/20, 2101/23
Series A ...

Service Manual

Wandel & Goltermann
Electronic Measurement Technology



Please direct all enquiries to your local Wandel & Goltermann sales company. The addresses are given at the end of this handbook.

Wandel & Goltermann GmbH & Co.
Electronic Measurement Technology
Mühleweg 5, D-72800 Eningen u. A.
© 1995

Author: MDS/mic/bbr
Translator: John Nutley

Order no.: 2101/98.83
Edition: 03/95.12, A ...

Previous editions:
02/95.06, A ...
01/94.05, A ...

Printed in Germany

Contents

1 General Notes

1.1	Test Equipment	1-1
1.1.1	Test Equipment for Repairs and Adjustments (see chapters 4 to 7)	1-1
1.1.2	Test Equipment for Verifying the Specifications (see chapter 8)	1-1
1.1.3	Accessories / Adapters	1-2
1.1.4	Service Disk	1-2
1.2	Service Scope and Test Equipment Requirements.	1-3
1.2.1	Servicing the Input Section Subassemblies	1-3
1.2.2	Servicing the Synthesizer Subassemblies	1-4
1.2.3	Servicing the 422 MHz/10 kHz Converter and the IF Measurement Section Subassemblies.	1-5
1.2.4	Servicing the Controller Subassemblies	1-6
1.2.5	Servicing the Power Supply Unit Subassemblies	1-7

2 Important Notes

2.1	Safety Instructions.	2-1
2.1.1	Preventing Electrical Accidents.	2-1
2.2	Anti-static Measures	2-3
2.3	Handling Microwave Subassemblies.	2-4
2.4	Repair of Circuit Boards Fitted with SMD Components	2-5
2.4.1	Introduction	2-5
2.4.2	Test Techniques for SMD Boards	2-5
2.4.3	Repair Guidelines for Boards with SMDs	2-6
2.4.4	SMT Soldering and Repair Procedures.	2-6
2.5	Cleaning the Front Panel and Casing	2-9

3 Mechanical Construction

3.1	Instrument Codes	3-1
3.1.1	Determining the Hardware and Software Status.	3-1
3.2	Assembly/Disassembly Instructions	3-3
3.2.1	Disassembling the Instrument Chassis.	3-3
3.2.2	Opening the Fold-Out Chassis	3-3
3.2.3	Positions of the Subassemblies	3-5

3.2.4	Removing Circuit Boards and Subassemblies	3-14
3.2.4.1	Removing Microwave Subassemblies and Modules.	3-14
3.2.4.2	Removing the AT-CPU and Memory Boards	3-14
3.2.4.3	Removing the Interface Board and Display Control Board.	3-14
3.2.4.4	Removing the Power Supply Unit and Voltage Distribution Board	3-14
3.2.4.5	Removing the Synthesizer	3-15
3.2.5	Fitting/Removing the Screening Can Covers and Hoods	3-18
3.2.6	Replacing the A.C. Line Fuse	3-18
3.2.7	Replacing the Memory Buffer Battery	3-19

4 Power-On Test, Error Messages, Software Configuration

4.1	Normal SNA Boot-Up Behavior (Series A to E)	4-1
4.2	BIOS-Test (Power-On Test) Error Messages [Series A to E].	4-3
4.3	Error Messages / Faulty Behavior After Successful BIOS Test (Series A to E)	4-5
4.4	Error messages during measurements.	4-7
4.4.1	2101 Debug Output.	4-7
4.5	AT CPU CMOS Setup (Series A to E)	4-9
4.5.1	Introduction	4-9
4.5.2	Invoking the CMOS Setup Program	4-9
4.5.3	Using the CMOS Setup Program	4-11
4.5.4	SNA-20/23 CMOS Setup Settings	4-12
4.5.5	Ending the Setup Program	4-13
4.6	Installing the Instrument Software / Updating Software	4-14
4.7	Installing the Compensation Data	4-15
4.8	Saving User Setups on Floppy Disk	4-15
4.9	Making a Back-Up Copy of RAM Disk B:\.	4-16
4.10	Connecting an External Keyboard to the SNA	4-17
4.10.1	Loading a Country-Specific Keyboard Driver	4-17
4.11	Switching from Instrument Software to DOS Mode and Vice-Versa.	4-19

5 Fault Localization to Subassembly Level

5.1	Initial Fault Localization when a Measurement Error Occurs	5-1
5.2	Checking the Power Supply Output Voltages	5-1
5.3	Fault Localization in the Frequency Converter (Input Section)	5-2
5.3.1	Checking the Attenuator (ATTN) Settings	5-2
5.3.2	Checking the Level in all Receive Bands	5-3
5.3.3	Further Fault Localization Using the Level Diagram	5-4
5.4	Fault Localization in the IF Measurement Unit	5-7
5.4.1	Manual Check of the IF Measurement Unit	5-7
5.5	Checking Internal and External Calibration Sources	5-9
5.6	Fault Localization in the Synthesizer	5-10
5.6.1	General Information	5-10
5.6.2	Checking the 10 MHz Reference Frequency	5-10
5.6.3	Checking the 1st LO Frequency	5-10
5.7	Fault Localization in the Controller	5-12
5.7.1	Procedure when a Fault is Suspected in the Controller	5-12

6 Fault Localization to Component Level

6.1	Fault Localization in the Frequency Converter	6-1
6.1.1	Information on the Frequency Response Correction for Bands 0, 1, 2 and 3	6-1
6.1.2	Integration Band 0 Control [2101-CF]	6-1
6.1.3	YIG Filter 3FL1 and YIG Filter Control	6-2
6.1.3.1	YIG Filter Control [2101-AS1]	6-3
6.1.3.2	Checking the YIG Filter	6-5
6.1.4	Fundamental Mixer Controller [2101-AV1]	6-6
6.1.5	IF Switch [2101-AQ1]	6-7
6.1.6	Input Section Control [2101-AR]	6-9
6.1.7	Interdigital Filter (6IF1)	6-12
6.1.8	422 MHz/22 MHz Converter [2101-X]	6-13
6.2	Troubleshooting the IF measurement section	6-18
6.2.1	IF selection [2101-L]	6-18
6.2.2	Logarithmizer [2101-M]	6-21
6.2.2.1	Operating and bias voltages	6-21
6.2.2.2	Troubleshooting the logarithmizer signal path	6-22

6.2.3	IF converter [2101-O] (series A +B)	6-25
6.2.4	IF converter [2101-O] (series C onwards).	6-27
6.2.5	Calibration generator [2101-N]	6-27
6.3	Troubleshooting the controller	6-30
6.3.1	AT CPU.	6-30
6.3.2	Memory [2101-AF] (series A - E).	6-30
6.3.3	Keyboard [2101-AJ]	6-33
6.3.4	Keyboard controller [2101-AL]	6-34
6.4	Troubleshooting the synthesizer OD-11	6-35
6.4.1	Standard frequency oscillator	6-35
6.4.2	YIG oscillator.	6-35
6.4.3	Timebase/YTO driver [2101-B].	6-36
6.4.3.1	Power supply	6-36
6.4.3.2	Timebase 1 (10 MHz external synchronization control circuit)	6-37
6.4.3.3	Timebase 2 (400 MHz PLL)	6-37
6.4.4	400 MHz oscillator [2101-F]	6-37
6.4.4.1	Regulator/YTO driver	6-38
6.4.5	Synchronous divider/Phase meter [2101-K]	6-39
6.4.6	Synthesizer controller [2101-A].	6-39
6.4.6.1	Controller filters.	6-39
6.4.6.2	Control	6-39
6.4.7	SHF pre-divider module	6-40

7 Adjustment instructions

7.1	Introduction	7-1
7.2	List of all adjustment controls	7-2
7.3	List of adjustments required after replacing circuit boards or modules	7-4
7.4	Special instructions for replacing circuit boards and modules	7-6
7.4.1	Circuit boards with different hardware status	7-6
7.4.2	YIG filter control (3) and YIG filter (3) FL 1	7-8
7.4.2.1	YIG filter control (3).	7-8
7.4.2.2	YIG filter (3) FL 1	7-8
7.4.3	Input section controller (5) [2101-AR, 2101-AR1].	7-9
7.4.4	Logarithmizer (8) [2101-M]	7-10
7.4.5	Interface board (16)	7-10

7.4.6	Memory (17)	7-11
7.4.7	AT CPU (18)	7-12
7.4.8	Keyboard controller (19)	7-12
7.4.9	Display control board (92)	7-12
7.5	Recording correction data	7-13
7.5.1	Frequency response adjustment, bands 0, 1,2 and 3	7-13
7.5.2	Logarithmizer characteristic	7-14
7.5.3	YIG filter (3) characteristic	7-14
7.6	Frequency converter adjustments	7-15
7.6.1	Input section controller (5) [2101-AR]	7-15
7.6.2	“Band 0 frequency conversion control” (2) [2101-CF]	7-15
7.6.3	422 MHz/22 MHz converter (6) [2101-X]	7-16
7.6.4	422 MHz/10 kHz converter (6) [2101-Y]	7-16
7.7	IF measurement section adjustments	7-19
7.7.1	IF selection (7) [2101-L]	7-19
7.7.2	Logarithmizer (8) [2101-M]	7-23
7.7.3	IF converter (9) [2101-O]	7-27
7.7.4	Calibration generator (11)[2101-N]	7-28
7.7.4.1	Adjusting internal and external calibration levels	7-28
7.7.4.2	FM demodulator center frequency	7-30
7.8	Synthesizer adjustments	7-31
7.8.1	10 MHz standard frequency adjustment	7-31
7.8.2	Upper YTO frequency limit (maximum frequency)	7-32
7.8.3	Lower YTO frequency limit (minimum frequency)	7-32
7.8.4	400 MHz oscillator adjustment (400 MHZ_RESONATOR)	7-32
7.9	Controller adjustments	7-33
7.9.1	Rotary control (21) [2101 AK]	7-33
7.10	Power supply unit adjustments	7-34
7.10.1	PSU CG44 (1) [Gossen]	7-34
7.10.2	Voltage distribution (1) [2101-BD]	7-34

8 Checking the Specifications

8.1	Introduction	8-1
8.2	Measuring Equipment	8-2
8.3	Frequency Accuracy	8-4
8.4	External CAL Output Level Accuracy	8-5

8.5	Scaling Error	8-7
8.6	Attenuator Error	8-9
8.7	Frequency Response	8-10
8.8	Resolution Bandwidths (RBW)	8-12
8.9	Intrinsic Spurious Signals without Input Signal	8-14
8.9.1	Intrinsic Noise	8-14
8.9.2	Discrete Spurious Signals	8-15
8.10	Additional Tests	8-16
8.10.1	Intrinsic Spurious Signals with Input Signal	8-16
8.10.1.1	Harmonic Attenuation	8-16
8.10.1.2	Sideband Noise Power Level	8-18
8.10.1.3	Intermodulation Attenuation	8-19
8.10.2	Checking the Return Loss	8-23

9 Function and circuit description, SNA-20/-23

9.1	Description of complete instrument function	9-1
9.2	Frequency converter, input section BN 2101 (2), (3), (4), (5), (6)	9-1
9.2.1	Input section controller (5) [2101-AR]	9-2
9.2.2	Frequency converter band 0 (2) [2101-ZA] (Integration Band 0)	9-3
9.2.2.1	Integration Band 0 controller (2) [2101-CF]	9-4
9.2.3	YIG filter control (3) [2101-AS1]	9-5
9.2.4	Fundamental mixer (4) [2101-ZC]	9-9
9.2.4.1	Fundamental mixer controller (4) [2101-AV1]	9-9
9.2.5	422 MHz IF switch (2) [2101-AQ1]	9-10
9.2.6	422 MHz/22 MHz converter (6) [2101-X]	9-11
9.3	IF measurement section (7), (8), (9), (10), (11)	9-12
9.3.1	IF selection (7) [2101-L]	9-13
9.3.2	Logarithmizer (8) [2101-M]	9-15
9.3.3	IF converter (9) [2101-O]	9-19
9.3.4	Calibration generator (11)[2101-N]	9-20
9.3.4.1	Calibration synthesizer with level regulation	9-20
9.3.4.2	Demodulators and output amplifier	9-22
9.3.5	Measurement section controller (10) [2101-P]	9-23
9.4	Synthesizer BN 2101 (OD-11)	9-24
9.4.1	Standard frequency oscillator, NFO adapter (50) [2101-C]	9-24

9.4.2	YIG oscillator OS1 (50), YTO	9-24
9.4.3	Timebase/YTO driver [2101-B]	9-24
9.4.3.1	Central filter (DC-PREFILTER)	9-24
9.4.3.2	Timebase.	9-25
9.4.3.3	Controller/YTO driver	9-26
9.4.4	400 MHz oscillator ([2101-F]	9-27
9.4.5	Synchronous divider/phase meter (52), [2101-K]	9-27
9.4.5.1	Synchronous divider	9-27
9.4.5.2	Phase meter	9-27
9.4.6	Synthesizer controller (51), [2101-A]	9-28
9.4.7	SHF pre-divider module (53) [2101-ZG]	9-29
9.5	Controller (16), (17), (18), (19), (20), (21), (92)	9-30
9.5.1	AT CPU (18)[] series A through E (3011.9305.006)	9-30
9.5.2	Memory (17) [2101-AF] (series A through E only)	9-30
9.5.3	Interface board (16) [2101-AG]	9-33
9.5.4	Display control board (92) [4111-A] (series A through E only)	9-34
9.5.5	Keyboard (20) [2101-AJ]	9-35
9.5.6	Rotary control (21) [2101 AK]	9-35
9.5.7	Keyboard controller (19) [2101-AL]	9-38
9.6	Power supply unit	9-40
9.6.1	Voltage distribution (1) [2101-BD]	9-40
9.6.2	24/12 V switching regulator	9-41

