

Table of Contents

CTS 850 SDH/PDH Test Set

General Safety Summary **xxv**

Preface **xxix**

Getting Started

Product Description	1	1
Accessories	1	2
Standard Accessories	1	2
Optional Accessories	1	3
Navigation through Manual	1	4
First Time Operation	1	7
Installing the Accessory Pouch	1	7
Setting Up the CTS 850	1	11
Turning On the CTS 850	1	13
Turning Off the CTS 850	1	14

Operating Basics

Functional Overview	2	1
Front-Panel Controls, Indicators, and Connectors	2	2
Rear-Panel Controls and Connectors	2	4
Front-Panel Status Lights	2	4
Reading the Display	2	6
The Basic Menu Structure	2	9
What is a Menu?	2	10
Selecting Menus	2	12
Selecting Pages	2	13
Displaying Help	2	14
Connecting Signals	2	15
Connecting Optical Signals	2	15
Connecting SDH Electrical Signals	2	16
Connecting PDH Electrical Signals	2	16
Initiating Autoscan	2	16
Changing Parameters	2	17

Selecting Parameters	2 17
Selecting from Lists	2 18
Changing Decimal Numbers	2 19
Changing Binary Numbers	2 21
Entering Text	2 22
Working with the Disk Drive	2 25
Reading Files on Disk	2 26
Synchronous, Plesiochronous, Asynchronous	2 27
Plesiochronous Digital Hierarchy (PDH)	2 28
Anomaly, Defect, Failure, Alarm	2 29
SDH Multiplexing Principles	2 29
Difference in Telecommunications Terms	2 32
45 Mbit/s Map/Demap Implementation	2 33
Tutorial	2 35
Before Turning On the CTS 850	2 36
Setting Transmit Parameters	2 37
Setting Receive Parameters	2 38
Setting the Test Time	2 39
Where Test Results Are Displayed	2 39
Begin the Test	2 41
Inserting Errors	2 42
Adjusting Pointers	2 44
Viewing Section Overhead	2 49
Editing the Section Overhead	2 50
Viewing Test Results	2 52

Reference

Basic Test Procedures	3 1
Setting Up the CTS 850	3 1
Network Continuity Checking	3 2
Transmission Signal Quality Testing	3 3
Measuring Bit Error Rate	3 3
Testing Mapping and Demapping	3 6
Fault Tolerance Checking	3 9
Response to Errors and Alarms	3 9
Response to Pointer Movements	3 14
Response to Line Frequency Offset	3 17
Performance Monitoring	3 19

Jitter/Wander Testing	3	23
Testing Jitter Tolerance	3	23
Testing Clock-to-Line Jitter Transfer	3	28
Video Timing Quality Testing	3	31
<i>Material below this line appears only in reference manual on CD</i>		
Setting Test Control Parameters	3	33
Setting the Test Time Duration	3	33
Setting a Unique Test Time Duration	3	34
Setting the History Resolution	3	36
Starting and Stopping a Test	3	37
Making Changes While Running a Test	3	38
Actions You Cannot Perform While Running a Test	3	38
Working with Test Setups	3	41
Saving and Recalling Instrument Setups	3	41
Saving Instrument Setups	3	42
Recalling Instrument Setups	3	44
Recalling the Default Factory Setup	3	45
Deleting Instrument Setups from Disk	3	46
Pass/Fail Tests	3	47
Parameters of a Pass/Fail Test	3	47
Fail If Conditions	3	48
Creating a Pass/Fail Test	3	52
Running a Pass/Fail Test	3	57
Changing an Existing Pass/Fail Test	3	59
Deleting a Pass/Fail Test from Disk	3	60
Checking Signal Status	3	63
Viewing Signal Structure	3	63
Viewing the Payload	3	64
Determining the Payload Pattern and Framing	3	65
Printing the AutoScan Dialog Box	3	66
Viewing the Signal State	3	66
Extended Status	3	69
Setting the Beeper	3	69
Setting SDH Transmit Parameters	3	71
Steps for Setting Parameters	3	72
Setting the Transmit Rate	3	72

Independent Transmit and Receive Settings	3	73
Coupling Transmit and Receive Settings	3	73
Through Mode	3	75
Setting the Transmit Clock	3	77
Setting the Line Clock Offset	3	78
Setting the Transmit Level	3	78
Specifying the AU to Test	3	79
Setting the SDH Structure	3	80
TU Under Test	3	82
Setting TU Background Fill	3	82
Setting SDH Output	3	83
Setting Payload Structure	3	84
Setting Test Pattern	3	85
Setting the Tx/Rx Setup	3	87
Mapping a PDH Signal	3	87
Setting the Test Pattern (User selectable)	3	90
Setting Overhead Bytes	3	91
How to Edit an Overhead Byte	3	91
Editing the VC4, VC3, and VC12 Overhead Bytes	3	94
Bytes You Cannot Edit	3	95
Editing the J1 Path Trace Byte	3	97
Adding DCC and User Channel Overhead Bytes	3	99
Trace Settings	3	102
Signal Labels	3	104
Overhead PRBS Test	3	105
Setting PDH Transmit Parameters	3	107
Steps for Setting Parameters	3	107
Selecting 64k Tx Settings	3	108
Setting the Transmit Rate	3	109
Independent Transmit and Receive Settings	3	109
Coupling Transmit and Receive Settings	3	110
Viewing the Transmit Line Code	3	112
Setting the Transmit Clock	3	112
Setting the Line Clock Offset	3	113
Specifying Payload and Payload Framing	3	114
Specifying the Test Pattern	3	116
Setting Jitter or Wander Generation	3	118
Setting SDH Receive Parameters	3	119
Steps for Setting Parameters	3	119
Setting the Receive Rate	3	120

Independent Receive and Transmit Settings	3	121
Coupling Receive and Transmit Settings	3	121
Specifying the AU to Test	3	123
Setting the SDH Structure	3	124
TU Under Test	3	125
Setting the Payload	3	126
Setting the Test Pattern	3	127
Selecting Active Channel Selection	3	128
Selecting the Payload Drop	3	128
Selecting Tx/Rx Setup	3	129
Selecting Signal Status	3	130
Checking Received Optical Power or Received Peak Voltage . .	3	132
Selecting Analysis Configuration	3	133
Demapping a PDH Signal	3	135
Dropping a PDH Signal	3	138
Viewing Overhead Bytes	3	139
Viewing Section Overhead Bytes	3	139
Viewing Path Overhead Bytes	3	140
Displaying the J1 Path Trace Message	3	140
Displaying the J2 Path Trace Message	3	141
Displaying the V5 Byte	3	141
Dropping DCC and User Channel Overhead Bytes	3	142
Controlling the Display Update	3	145
Setting PDH Receive Parameters	3	147
Steps for Setting Parameters	3	147
Selecting 64k Rx Settings	3	148
Setting the Receive Rate	3	149
Independent Receive and Transmit Settings	3	150
Coupling Receive and Transmit Settings	3	150
Setting the Receive Level	3	152
Setting Payload and Payload Framing	3	152
Specifying the Test Pattern	3	153
Specifying the Payload Drop	3	155
Selecting Rx CAS and Voice	3	156
Setting Jitter Receive Parameters	3	157
Setting Jitter/Wander Parameters	3	159
Jitter/Wander Working with Test Setups	3	159

Setting Up a Jitter Test	3	160
Saving and Recalling Results	3	169
Printing Results	3	169
Exporting Results into a Document	3	169
Setting Jitter or Wander Generation	3	170
Turning on Jitter or Wander Generation	3	171
Selecting the Jitter Output	3	172
Setting the Jitter Frequency and Amplitude	3	173
Measure Wander on 2 MHz clock input from NE	3	174
Setting Jitter Receive Parameters	3	175
Selecting the Jitter Mode	3	176
Selecting the Input Source	3	176
Selecting the Jitter Range	3	177
Selecting the Jitter Input Filter	3	177
Setting the Jitter Hit Threshold	3	179
Setting the Pointer Hit Threshold	3	180
Examples of Jitter Measurements	3	181
Examples of Wander Measurements	3	182
Calibrating Jitter Systems	3	183
Executing Jitter Calibration	3	184
Setting Alarms and Inserting Errors	3	185
Simulating Error Conditions	3	186
Specifying the Error to Insert	3	187
Inserting Errors	3	187
Setting Alarms	3	190
Simulating Transmit Failures	3	191
PDH Defect and Anomaly Insertion	3	192
Setting Pointers and Changing Timing	3	195
Setting Pointers	3	195
Manual Pointer Control	3	196
Continuous Pointer Movement	3	201
Changing Timing	3	203
Generating Pointer Sequences	3	206
Starting Pointer Sequences	3	212
Starting Pointer Sequences with Tributary Offset	3	216
Testing Automatic Protection Switching	3	217
Setting the APS Mode	3	217
Setting the K1 Byte	3	218
Setting the K2 Byte	3	222
Transmitting the K1 and K2 Bytes	3	227

Viewing the Network Response to APS Commands	3	228
Viewing Results	3	229
G.826, M.2101.1, M.2100 and G.821 Analysis	3	229
Viewing a Summary of Results	3	230
Viewing Detailed Results	3	231
Displaying an Analysis of Test Results	3	237
Viewing Measurement Histories	3	243
Types of Graphs	3	243
Elements of the History Graph Display	3	248
Graph Name	3	248
History Resolution	3	248
Power Out Indicator	3	248
Measurement Results at Cursor Position	3	249
Zooming History Graphs	3	250
Panning History Graphs	3	251
Changing the Displayed History Graph	3	252
Displaying Mini-Graphs	3	252
Saving and Recalling Results	3	253
Saving Test Results to Disk	3	253
Recalling Test Results from Disk	3	256
Deleting Test Results from Disk	3	257
Recalling Test Results from Memory	3	258
Printing Results	3	258
Printing Main Results or Error Analysis	3	258
Printing History Graphs	3	260
Changing Instrument Settings	3	261
Viewing the Instrument Configuration	3	261
Setting the Display Brightness	3	262
Turning the Beeper On and Off	3	263
Setting the Date	3	264
Setting the Time	3	264
Changing the Printer Setup	3	265
Specifying the Printer or File Type	3	266
Setting RS-232 Parameters	3	266
Setting the Print User & Company Text	3	268
Setting Remote Control Parameters	3	268
Setting the GPIB Address	3	269
Setting RS-232 Parameters	3	270
Running Instrument Self Tests	3	272

Appendices

Appendix A: Menu Maps	A 1
Appendix B: Status and Error Messages	B 1
Appendix C: Default Factory Settings	C 1
Appendix D: Specifications	D 1
Appendix E: Incoming Inspection Test	E 1
Appendix F: Example Disk Contents	F 1
Appendix G: Rear-Panel Connectors	G 1
VGA Video Output	G 2
GPiB Port	G 3
RS-232 Port	G 3
Calibration Signal Output	G 4
Overhead Add/Drop Port	G 4
External Clock Input (2 Mb/s or 2 MHz)	G 7
Handset Interface	G 8
Jitter Inputs and Outputs	G 9
BITS OUT	G 9
J/CLK IN	G 9
J/CLK OUT	G 9
ANALOG OUT	G 10
Appendix H: Changing Optical Port Connectors	H 1
Appendix I: Packing for Shipment	I 1
Appendix J: Telecommunications Technology	J 1
Basic SDH Signal	J 1
PDH Basics	J 2
Asynchronous Multiplexing	J 6
PDH Multiplexing	J 9
G.826, M.2101.1, M.2100 and G.821 Analysis	J 10
Jitter & Wander Tutorial	J 16
Principles & Metrics of Jitter & Wander	J 20
Appendix K: Cleaning Instructions	K 1

Glossary and ITU T Standards

Index

List of Figures

Figure 1 1: Installing the Accessory Pouch	1 8
Figure 1 2: Inserting the Pouch Under the Front Panel Trim	1 9
Figure 1 3: Location of the D-Ring on the Accessory Pouch	1 10
Figure 1 4: Rear-Panel Controls and Connectors Used in Setup	1 12
Figure 1 5: ON/STBY Button	1 14
Figure 2 1: Controls Located Around the Display	2 2
Figure 2 2: Front-Panel Controls, Indicators, and Connectors	2 3
Figure 2 3: Rear-Panel Controls and Connectors	2 4
Figure 2 4: Status Lights	2 5
Figure 2 5: Major Areas of the Display	2 6
Figure 2 6: Specific Elements of the Display	2 7
Figure 2 7: The Five Menus	2 9
Figure 2 8: Menus and Pages	2 11
Figure 2 9: Menu Select Buttons	2 12
Figure 2 10: How to Display a Page	2 13
Figure 2 11: Help Dialog Box	2 14
Figure 2 12: Selecting a Parameter	2 17
Figure 2 13: Selecting Choices From a List	2 18
Figure 2 14: Selecting USER DEFINED	2 19
Figure 2 15: Entering a Numeric Value	2 20
Figure 2 16: Selecting a Byte for Editing	2 21
Figure 2 17: Editing a Byte	2 22
Figure 2 18: Selecting a Text String for Editing	2 23
Figure 2 19: Editing a Text String	2 24

Figure 2 20: PDH multiplexing by steps	2 28
Figure 2 21: SDH multiplexing hierarchy	2 31
Figure 2 22: Setup for the Tutorial	2 36
Figure 2 23: The TRANSMIT SETTINGS Page of the TRANSMIT Menu	2 37
Figure 2 24: The TEST CONTROL Page of the UTILITY Menu	2 39
Figure 2 25: The TEST SUMMARY Page of the RESULTS Menu	2 40
Figure 2 26: The MAIN RESULTS Page of the RESULTS Menu	2 41
Figure 2 27: The Message Line and Test Status Indicator ..	2 42
Figure 2 28: The Defects & Anomalies Page of the TRANSMIT Menu	2 43
Figure 2 29: Example of POINTERS & TIMING Page of the TRANSMIT Menu	2 45
Figure 2 30: Adjusting Frequency Offset Using the Knob ..	2 48
Figure 2 31: The SECTION OVERHEAD Page of the TRANSMIT Menu	2 49
Figure 2 32: The Display in Edit Mode	2 51
Figure 2 33: The TEST SUMMARY Page of the RESULTS Menu	2 53
Figure 2 34: The MAIN RESULTS Page of the RESULTS Menu	2 54
Figure 3 1: Setup to Check Network Continuity	3 2
Figure 3 2: Setup to Check a Transmission Link	3 4
Figure 3 3: Setup to Test Mapping and Demapping	3 7
Figure 3 4: Setup to Check Error and Alarm Response ...	3 10
Figure 3 5: Setup to Check Pointer Movements	3 15
Figure 3 6: Setup to Check Line Frequency Offset Response	3 17
Figure 3 7: Setup to Monitor Performance	3 20

Figure 3 8: Setup to Check Onset-of-Errors Jitter Tolerance	3 24
Figure 3 9: Setup to Check 1 dB Power Penalty Jitter Tolerance	3 26
Figure 3 10: Setup to Check Clock-to-Line Jitter Transfer	3 29
Figure 3 11: Setup to Check Video Timing Quality	3 31
<i>Material below this line appears only in reference manual on CD</i>	
Figure 3 12: The Test Control Page	3 34
Figure 3 13: Setting a USER DEFINED Test Duration	3 35
Figure 3 14: Elapsed Time and Bar Graph Indicators	3 38
Figure 3 15: The SAVE INSTRUMENT SETUPS Page	3 43
Figure 3 16: The RECALL INSTRUMENT SETUPS Page	3 45
Figure 3 17: Selecting a Disk File for Deleting	3 46
Figure 3 18: The SAVE PASS/FAIL TESTS Page	3 47
Figure 3 19: Entering Fail If Conditions	3 55
Figure 3 20: The TEST BEGIN Dialog Box	3 58
Figure 3 21: Selecting a Pass/Fail Test for Deleting	3 61
Figure 3 22: The AUTOSCAN Dialog Box Showing Signal Structure	3 64
Figure 3 23: Viewing Tributary Signal Structure	3 65
Figure 3 24: The Meaning of the Icons in the Autoscan Dialog Box	3 66
Figure 3 25: Front-Panel Status Lights	3 67
Figure 3 26: Transmit Settings Menu	3 71
Figure 3 27: Sequence for Setting SDH Signal Parameters	3 72
Figure 3 28: Sequence for Setting SDH Signal Parameters When Mapping a PDH Signal	3 72
Figure 3 29: SDH Transmit Rates	3 74
Figure 3 30: CTS 850 in Through Mode	3 76

Figure 3 31: Choosing TU Under Test from SDH Structure 3 80

Figure 3 32: Choosing VC 4c from SDH Structure 3 81

Figure 3 33: Choosing SDH Output 3 83

Figure 3 34: Mapping a Tributary Signal 3 87

Figure 3 35: Editing the User Word Byte 3 91

Figure 3 36: Editing the S1 Section Overhead Byte 3 93

Figure 3 37: Editing an Overhead Byte 3 94

Figure 3 38: Editing the J1 Path Trace Byte 3 99

Figure 3 39: Adding Data into the DCC 3 101

Figure 3 40: Adding Data into the User Channel 3 102

Figure 3 41: Choosing Trace Settings 3 103

Figure 3 42: Choosing Signals Labels 3 104

Figure 3 43: Choosing Overhead PRBS Test 3 105

**Figure 3 44: Sequence for Setting PDH Signal
Parameters 3 107**

**Figure 3 45: Sequence for Setting PDH Signal Parameters
when mapping a PDH Signal 3 107**

Figure 3 46: TX Settings from Transmit Setting Menu 3 108

Figure 3 47: PDH Transmit Rates 3 110

Figure 3 48: Editing the User Word 3 117

**Figure 3 49: Sequence for Setting SDH Signal
Parameters 3 120**

**Figure 3 50: Sequence for Setting SDH Signal
Parameters When Demapping a PDH Signal 3 120**

Figure 3 51: SDH Receive Rates 3 121

Figure 3 52: Example of SDH Structure 3 124

Figure 3 53: Signal Status, Payload Frequency menu 3 130

Figure 3 54: Analysis Config, Round Trip Delay Offset 3 131

Figure 3 55: RX CAS & Voice, Receive Settings Menu 3 133

Figure 3 56: Setting PDH Mapping 3 135

Figure 3 57: J1 Path Trace Message Received by the CTS 850	3 142
Figure 3 58: Dropping Data from the DCC	3 143
Figure 3 59: Dropping the User Channel Data Byte	3 144
Figure 3 60: Sequence for Setting PDH Signal Parameters (non demuxed)	3 147
Figure 3 61: Sequence for Setting PDH Signal Parameters when demultiplexing a PDH Signal (demuxed)	3 147
Figure 3 62: 64k RX Settings	3 148
Figure 3 63: PDH Signal Receive Rates	3 150
Figure 3 64: RX CAS & Voice	3 156
Figure 3 65: Example of TEST SETUP Jitter & Wander	3 160
Figure 3 66: Example of TEST SETUP, BER Method	3 164
Figure 3 67: Example of TRANSMIT, Jitter menu	3 170
Figure 3 68: RECEIVE, Setting Jitter Mode, Peak to Peak	3 175
Figure 3 69: Jitter High Pass Filters	3 178
Figure 3 70: RESULTS, Jitter and Timing Quality	3 181
Figure 3 71: RESULTS, Wander and Line Frequency	3 182
Figure 3 72: Example of UTILITY, Calibration	3 183
Figure 3 73: Example of Transmit, Defects & Anomalies	3 186
Figure 3 74: Set Anomaly, Defect, Failure layer in the Mux chain	3 193
Figure 3 75: Manual Pointer Control Choices	3 196
Figure 3 76: Alternating Burst Pointer Movement	3 198
Figure 3 77: Incrementing Pointer Location Once Every Two Milliseconds	3 203
Figure 3 78: Offsetting the Transmit Rate by +4.6 ppm	3 205
Figure 3 79: The Three Periods of a Pointer Sequence	3 206
Figure 3 80: An Example of a Pointer Sequence	3 207
Figure 3 81: Status Display While Pointer Sequences are Running	3 215

Figure 3 82: Example, Pointer Sequence (Trib Offset) 3 216

Figure 3 83: The APS COMMANDS Page 3 218

**Figure 3 84: The RECEIVE Column on the APS
COMMANDS Page 3 228**

Figure 3 85: The Test Summary Page 3 231

Figure 3 86: Results, SDH Path Defects 3 233

Figure 3 87: Results, PDH Anomalies 3 233

Figure 3 88: Results, SDH Pointers 3 234

Figure 3 89: Results, SDH G.826 Analysis 3 234

Figure 3 90: Results, PDH G.826 Analysis 3 235

Figure 3 91: Results, SDH M.2101.1 Analysis 3 235

Figure 3 92: Results, PDH M.2100 Analysis 3 236

Figure 3 93: Results, G.821 Pattern Bit Analysis 3 236

**Figure 3 94: Bar Graphs Showing Code Violations
and Errored Seconds 3 244**

Figure 3 95: Line Graph Showing Pointer Value 3 245

**Figure 3 96: On/Off Graphs Showing Failures
and Alarms 3 246**

Figure 3 97: Elements of a History Graph 3 249

Figure 3 98: Changing the Displayed History Graph 3 253

Figure 3 99: The SAVE RESULTS Page 3 255

Figure 3 100: The RECALL RESULTS Page 3 257

Figure 3 101: The PRINT CONTROL Dialog Box 3 259

Figure 3 102: The MISC SETTINGS Page 3 263

Figure 3 103: The PRINTER SETUP Page 3 265

Figure 3 104: The REMOTE CONTROL Page 3 270

Figure E 1: Front-Panel Status Lights E 1

Figure G 1: CTS 850 Rear Panel Connectors G 1

Figure G 2: The VGA Video Output Connector G 2

Figure G 3: The RS-232 Port G 3

Figure G 4: The Overhead Add/Drop Port	G 5
Figure H 1: Removing the Optical Bulkhead Connector ...	H 2
Figure H 2: FC Optical Bulkhead Assembly	H 3
Figure H 3: ST Optical Bulkhead Assembly	H 3
Figure H 4: DIN 47256 Optical Bulkhead Assembly	H 4
Figure H 5: SC Optical Bulkhead Assembly	H 4
Figure J 1: Pulse Code Modulation	J 3
Figure J 2: Time Division Multiplexing	J 4
Figure J 3: Bit & Byte Interleaving	J 5
Figure J 4: Higher Order Multiplexing Hierarchy	J 6
Figure J 5: Multiplexing and Digital Transmission	J 7
Figure J 6: Asynchronous Multiplexing	J 8
Figure J 7: PDH Multiplexing by steps	J 9
Figure J 8: Guaranteeing G.821 Service Quality	J 13
Figure J 9: Simple SDH/PDH network model	J 17
Figure J 10: Jitter as viewed on an oscilloscope	J 20
Figure J 11: Phase variation between two signals	J 21
Figure J 12: Frequency ranges of jitter and wander	J 21
Figure J 13: Example of TIE wander measurement	J 23
Figure J 14: Functional definition of MTIE	J 24
Figure J 15: Example of MTIE wander measurement	J 25
Figure J 16: Functional definition of TDEV	J 25
Figure J 17: Example of TDEV wander measurement	J 26

List of Tables

Table 1 1: Where to find Information	1	4
Table 1 2: Fuse and Fuse Cap Part Numbers	1	12
Table 1 3: Power Requirements	1	13
Table 2 1: Icons that Appear in the Display	2	8
Table 2 2: CTS 850 Disk File Types	2	25
Table 2 3: SDH Multiplexing Structure	2	31
Table 3 1: LTE Responses to Errors and Alarms	3	10
<i>Material below this line appears only in reference manual on CD</i>		
Table 3 2: Test Duration Limits	3	36
Table 3 3: Actions You Cannot Perform While a Test is Running	3	39
Table 3 4: Fail If Conditions of a Pass/Fail Test	3	50
Table 3 5: Green Status Lights	3	67
Table 3 6: Red and Yellow Status Lights	3	68
Table 3 7: TX Rates and Structures	3	84
Table 3 8: Payload Framing/ Source	3	84
Table 3 9: Test Patterns, Background Pattern	3	85
Table 3 10: Choices for Bits 5, 6, and 7 of the V5 Byte	3	95
Table 3 11: Overhead Bytes That Cannot Be Edited	3	95
Table 3 12: Bytes You Cannot Edit Due to Parameter Settings	3	96
Table 3 13: Transmit Trace Settings Choices	3	102
Table 3 14: Transmit Overhead Testing Choices	3	105
Table 3 15: 64k TX Setting Choices	3	108
Table 3 16: PDH Rate Line Codes	3	112
Table 3 17: RX Rates and Structures	3	126

Table 3 18: Payload Framing/ Source	3 127
Table 3 19: Test Patterns	3 127
Table 3 20: Signal Status Choices	3 131
Table 3 21: Analysis Config Choices	3 133
Table 3 22: 64k RX Settings choices	3 148
Table 3 23: RX CAS & Voice Choices	3 157
Table 3 24: Maximum Error Rates for SDH Signals	3 188
Table 3 25: Maximum Error Rates for TU Mappings and PDH signals	3 189
Table 3 26: Anomaly, Defect, Transmit Failure options	3 193
Table 3 27: Pointer Sequences Generated	3 207
Table 3 28: Availability of Pointer Sequences	3 211
Table 3 29: Status Lines for Pointer Sequences	3 215
Table 3 30: Choices for Bits 1 4 of the K1 Byte When Mode is Set to Ring	3 219
Table 3 31: Choices for Bits 1 4 of the K1 Byte When Mode is Set to Span	3 220
Table 3 32: Choices for Bits 5 8 of the K1 Byte	3 222
Table 3 33: Choices for Bits 1 4 of the K2 Byte	3 224
Table 3 34: Choices for Bit 5 of the K2 Byte When Mode is Set to Span	3 225
Table 3 35: Choices for Bit 5 of the K2 Byte When Mode is Set to Ring	3 225
Table 3 36: Choices for Bits 6 8 of the K2 Byte	3 226
Table 3 37: Results Displayed on MAIN RESULTS Page	3 232
Table 3 38: SDH Results	3 237
Table 3 39: PDH Results	3 238
Table 3 40: Results Displayed on Jitter & Wander RESULTS Page	3 239
Table 3 41: Error Analysis	3 240
Table 3 42: Performance Analysis	3 242
Table 3 43: Measurements Displayed as Bar Graphs	3 244

Table 3 44: Measurements Displayed as a Line Graph 3 246

**Table 3 45: Measurements Displayed as On/Off
Graphs for SDH Rates 3 247**

**Table 3 46: Measurements Displayed as On/Off
Graphs for PDH Rates 3 247**

**Table 3 47: Time Represented by Bars on
History Graph 3 250**

Table 3 48: Lines of Instrument Configuration Page 3 261

Table C 1: Default Factory Settings C 1

Table D 1: General CTS 850 Specifications D 1

**Table D 2: 2 Mb/s, 34 Mb/s, 140 Mb/s,
TU12, TU3 Capabilities D 13**

Table D 3: Jitter and Wander D 24

Table D 4: Environmental Specifications D 32

Table D 5: Physical Characteristics D 34

Table D 6: Certifications and compliances D 36

Table E 1: Required Equipment E 2

**Table G 1: VGA Video Output Connector
Pin Assignment G 2**

**Table G 2: RS-232 Rear Panel Connector
Pin Assignment G 2**

Table G 3: Overhead Channels Added G 5

Table G 4: Overhead Channels Dropped G 5

**Table G 5: Overhead Add/Drop Port Data Signal
Pin Assignments G 6**

**Table G 6: Overhead Add/Drop Port Additional
Pin Assignments G 6**

**Table G 7: Overhead Add/Drop Additional
Pin Assignments G 7**

Table G 8: Handset Interace Specifications G 8

Table J 1: Non Synchronous Hierarchy J 1
Table J 2: Synchronous Hierarchy J 2

