


To modify the wiring of the connector for the TPMxxx pressure modules to use the module with the adapter interface box, a wire must be removed from one pin of the connector to another.

The standard connection is that both the Blue and White leads are connected to the same PIN (Pin 2)

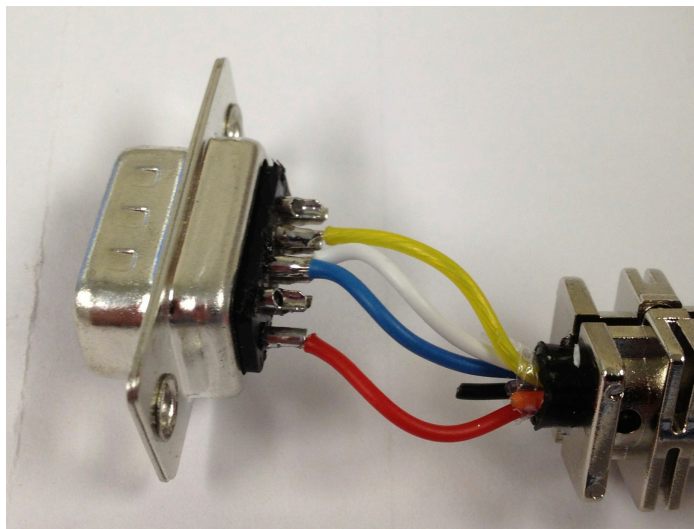

The wiring should be modified to the following :

Red Wire (+ve Supply) – Pin 1  
Yellow Wire (+ve Output) – Pin 8  
Blue Wire (-ve Output) – Pin 7  
White Wire (-ve Supply) – Pin 2

Please note that the pressure module should then always be used with the adapter interface box plugged in between the pressure transducer and the calibrator