

Step 1 : Press the right hand blue soft key until 'Calibrate' is displayed on the screen

Step 2 : Press the left hand soft key under 'Calibrate'

Step 3 : When prompted enter the code '0324' (default calibration password) using the number keys

Step 4 : The display will show 'Password OK'

Step 5 : Press 'Calibrate' – the calibration menu will appear

Step 6 : Using the arrow keys or the digital control, select the function you wish to adjust

Step 7 : Using the Range UP and Range DOWN keys, select the adjustment point to adjust

Step 8 : Adjust the calibrator by either typing in the measured value (without units) or using the cursor to deviate the output of the calibrator

Step 9 : Press 'Store' – this stores the calibration factor in long term memory

Step 10 : To change range / function, press the range key. This will take you to the calibration menu

Step 11 : To exit calibration mode, press the exit key