



## 3000 Series DC Voltage Commands

Function	Range	Command
DC Voltage	200mV	R1

Standby Mode	
Standby ON	S1
Standby OFF	S0

Output	
Set Output	O (not zero)

## Example Commands

To set the calibrator to output 123mV send :

**R1/O123/S0<CR>**

R1 = 200mV Range (as detailed in the table above)

O123 = 2V Output

S0 = Standby OFF (i.e. output switched ON)

<CR> = Carriage Return (ASCII character 13)