

Changing the address of the GPIB Interface

- 1) From the GPIB Measurement & Automation Explorer.
- 2) Click the '+' symbol next to 'Devices and Interfaces'.
- 3) Right Click on 'GPIB (GPIB-USB-A)' and select 'Scan For Instruments'.
- 4) 'Transmille 3000 Series Calibrator' should appear in the right hand window along with it's primary address (default address from new is 22).
- 5) Right Click on 'Instrument' under the 'Name' column and select 'Communicate with Instrument'.
- 6) Click in the 'Send String' box. And send the following text.
IEEEADD xx; where xx is the new address to use - xx must be in the range of 1 to 30.

Examples:

IEEEADD 1; or
IEEEADD 01; both set the new address to 1.
IEEEADD 23; sets the new address to 23.

It is important to add the semicolon to the end of the line otherwise the command will not be recognised.

7. Now Re-Scan as in step 3 for the new address to take effect.