



MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

General Description

The MAX19705–MAX19708 evaluation systems (EV systems) consist of a MAX19705–MAX19708 evaluation kits (EV kits), a companion Maxim command module (CMOD232 or CMODUSB) interface board, and software. Order the complete EV system (see the *Ordering Information*) for comprehensive evaluation of the MAX19705–MAX19708 using a personal computer. Order the EV kit if the command module has already been purchased with a previous Maxim EV system, or for custom use in other microcontroller-based (μC) systems.

The MAX19705–MAX19708 EV kits are fully assembled and tested circuit boards that contain all the components necessary to evaluate the performance of the MAX19705–MAX19708 analog front-ends (AFEs). The MAX19705–MAX19708 integrate a dual-receive analog-to-digital converter (Rx ADC), a dual-transmit digital-to-analog converter (Tx DAC), a 1.024V internal voltage reference, three low-speed serial DACs, and one low-speed serial ADC. The EV kit boards accept AC- or DC-coupled, differential or single-ended analog inputs for the Rx ADC and include circuitry that converts the Tx DAC differential output signals to single-ended analog outputs. The EV kits include circuitry that generates a clock signal from an AC sine-wave input signal. The EV kits operate from a +3.0V analog power supply, a +1.8V digital power supply, a +3.0V clock power supply, and ±5V bipolar power supplies.

The Maxim command module interface board (CMOD232 or CMODUSB) allows a PC to use its serial or USB port to emulate an SPI™ 3-wire interface. Windows® 98/2000/XP-compatible software, which can be downloaded from www.maxim-ic.com, provides a user-friendly interface to exercise the features of the MAX19705–MAX19708. The program is menu driven and offers a graphical user interface (GUI) with control buttons and a status display.

SPI is a trademark of Motorola, Inc.

Windows is a registered trademark of Microsoft Corp.

Part Selection Table

PART	SPEED (Msps)	DAC TRANSMIT FILTER
MAX19705EVKIT	7.5	Disabled
MAX19706EVKIT	22	Disabled
MAX19707EVKIT	45	Disabled
MAX19708EVKIT	11	Enabled

Features

- ◆ ADC/DAC Sampling Rates from 7.5Msps to 45Msps
- ◆ Low Voltage and Power Operation
- ◆ Adjustable-Gain, Low-Speed DAC Buffers
- ◆ On-Board Clock-Shaping Circuitry
- ◆ On-Board Level-Translating I/O Drivers
- ◆ Assembled and Tested
- ◆ Windows 98/2000/XP-Compatible Software Included

Ordering Information

PART	TEMP RANGE	IC PACKAGE	I ² C INTERFACE TYPE
MAX19705EVKIT	0°C to +70°C	48 TQFN	Not included
MAX19705EVCMOD2	0°C to +70°C	48 TQFN	CMOD232
MAX19705EVCMODU	0°C to +70°C	48 TQFN	CMODUSB
MAX19706EVKIT	0°C to +70°C	48 TQFN	Not included
MAX19706EVCMOD2	0°C to +70°C	48 TQFN	CMOD232
MAX19706EVCMODU	0°C to +70°C	48 TQFN	CMODUSB
MAX19707EVKIT	0°C to +70°C	48 TQFN	Not included
MAX19707EVCMOD2	0°C to +70°C	48 TQFN	CMOD232
MAX19707EVCMODU	0°C to +70°C	48 TQFN	CMODUSB
MAX19708EVKIT	0°C to +70°C	48 TQFN	Not included
MAX19708EVCMOD2	0°C to +70°C	48 TQFN	CMOD232
MAX19708EVCMODU	0°C to +70°C	48 TQFN	CMODUSB

Note: The MAX19705–MAX19708 EV kit software is provided with the MAX19705EVKIT–MAX19708EVKIT; however, the CMOD232/CMODUSB board is required to interface the EV kit to the computer when using the included software.

MAX19705–MAX19708 EV Kit Files

PROGRAM	DESCRIPTION
INSTALL.EXE	Installs the EV kit software
MAX19705.EXE	Application program
HELPFILE.HTM	MAX19705–MAX19708 EV kit help file
UNINST.INI	Uninstalls the EV kit software



Maxim Integrated Products 1

For pricing, delivery, and ordering information, please contact Maxim/Dallas Direct! at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Common Component List

DESIGNATION	QTY	DESCRIPTION
C1-C6, C17, C21, C23, C25, C28, C29, C37-C40, C45-C48, C73-C76, C78, C80, C81, C84, C85	29	0.1µF ±20%, 10V X5R ceramic capacitors (0402) TDK C1005X5R1A104M
C7-C10	4	22pF ±5%, 50V C0G ceramic capacitors (0402) TDK C1005C0G1H220J
C11, C31-C36	0	Not installed (0402)
C12	0	Not installed (0603)
C13, C14, C82	3	1000pF ±5%, 50V C0G ceramic capacitors (0603) TDK C1608C0G1H102J
C15, C16	2	0.47µF ±20%, 10V X5R ceramic capacitors (0603) TDK C1608X5R1A474M
C18, C19, C20, C67-C72	9	1.0µF ±20%, 6.3V X5R ceramic capacitors (0402) TDK C1005X5R0J105M
C22, C24, C26, C27	4	0.1µF ±20%, 6.3V X5R ceramic capacitors (0201) TDK C0603X5R0J104M
C30, C41-C44, C77, C86	7	2.2µF ±20%, 6.3V X5R ceramic capacitors (0603) TDK C1608X5R0J225M
C49-C60	12	220µF ±20%, 6.3V tantalum capacitors (C-case) AVX TPSC227M006R0250
C61-C66	6	10µF ±20%, 10V X5R ceramic capacitors (1210) TDK C3225X5R1A106M
C79	1	0.01µF ±5%, 25V C0G ceramic capacitor (0603) TDK C1608C0G1E103J
C83	1	0.47µF ±20%, 6.3V X5R ceramic capacitor (0402) TDK C1005X5R0J474K
D1	1	Dual Schottky diode (SOT23) Central Semiconductor CMPD6263S Vishay BAS70-04 Diodes Inc BAS70-04
J1	1	2 x 20 right-angle female connector
J2, J3, J5, J6, J8, J9, J10, J12, J13	9	SMA PC mount connectors
J4, J7	2	2-pin headers
J11	1	Dual-row, 40-pin header

DESIGNATION	QTY	DESCRIPTION
JU1	1	Jumper, dual-row, 8-pin header
JU2, JU3, JU5	3	Jumpers, 3-pin headers
JU4	1	2-pin header
JU6	0	Not installed
R1-R4, R55, R56, R61	7	49.9Ω ±1% resistors (0603)
R5-R16, R37-R42, R64, R65	0	Not installed (0402)
R17-R20	4	24.9Ω ±1% resistors (0402)
R21-R36, R43-R46, R62, R66	0	Not installed (0603)
R47-R54	8	10kΩ ±1% resistors (0603)
R57, R58	2	4.02kΩ ±1% resistors (0603)
R59	1	6.04kΩ ±1% resistor (0603)
R60	1	2.0kΩ ±1% resistor (0603)
R63	1	5kΩ potentiometer, 19-turn, 3/8in Vishay T93YB-5K-10-D06
RA1, RA2	2	100Ω ±5% resistor arrays (1206-16L) Panasonic EXB-2HV-101J
RA3, RA4	2	51Ω ±5% resistor arrays (1206-16L) Panasonic EXB-2HV-510J
RA5, RA6	2	Not installed (1206-16L)
T1, T2	2	1:1 RF transformers Coilcraft TTWB3010-1
TP1-TP5	5	Test points (black)
U1	1	Note: See the EV Kit Specific Component List
U2	1	20-bit, dual-supply bus transceiver (56-pin TSSOP) Texas Instruments SN74AVCH20T245GR
U3	1	Maxim MAX9113ESA (8-pin SO)
U4, U5	2	Maxim MAX4108ESA (8-pin SO)
U6	1	Maxim MAX4478AUD (14-pin TSSOP)
U7	1	Maxim MAX3023EUD (14-pin TSSOP)
U8	1	Dual-supply, 5-bit signal translator (14-pin DQFN) Fairchild FXL5T244
—	8	Shunts
—	1	MAX19705–MAX19708 PC board

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Component Suppliers

SUPPLIER	PHONE	FAX	WEBSITE
AVX	843-946-0238	843-626-3123	www.avxcorp.com
Central Semiconductor	631-435-1110	631-435-1824	www.centralsemi.com
Coilcraft	847-639-6400	847-639-1469	www.coilcraft.com
Diodes Inc.	805-446-4800	805-446-4850	www.diodes.com
Fairchild	888-522-5372	—	www.fairchildsemi.com
Panasonic	714-373-7366	714-737-7323	www.panasonic.com
TDK	847-803-6100	847-390-4405	www.component.tdk.com
Texas Instruments	972-644-5580	214-480-7800	www.ti.com
Vishay/Vitramon	203-268-6261	203-452-5670	www.vishay.com

Note: Indicate that you are using the MAX19705–MAX19708 when contacting these component suppliers.

EV Kit Specific Component List

EV KIT PART NUMBER	DESIGNATION	DESCRIPTION
MAX19708EVKIT	U1	Maxim MAX19708ETM (48-pin thin QFN, 7mm x 7mm)
MAX19707EVKIT		Maxim MAX19707ETM (48-pin thin QFN, 7mm x 7mm)
MAX19706EVKIT		Maxim MAX19706ETM (48-pin thin QFN, 7mm x 7mm)
MAX19705EVKIT		Maxim MAX19705ETM (48-pin thin QFN, 7mm x 7mm)

Quick Start

Recommended Equipment

- DC power supplies:

Analog (VDD)	3.0V, 100mA
Clock (CVDD)	3.0V, 100mA
Digital (OVDD)	1.8V, 100mA
Buffers (BVCC)	3.3V, 100mA
Op-amp positive (VOP)	5.0V, 250mA
Op-amp negative (VON)	-5.0V, 250mA
- Signal generator with low phase noise and low jitter for clock input signal (e.g., HP/Agilent 8662A, HP/Agilent 8644B)
- Two signal generators with low phase noise for analog signal inputs (e.g., HP/Agilent 8662A, HP/Agilent 8644B)
- Logic analyzer or data-acquisition system (e.g., HP/Agilent 16500C, TLA621)
- Analog bandpass filters (e.g., Allen Avionics, K&L Microwave) for input and clock signal
- Two spectrum analyzers (e.g., HP/Agilent 8560E)

- One 10-bit digital pattern generator (e.g., Tektronix DG2020A)

Procedure

The MAX19705–MAX19708 EV kit is a fully assembled and tested surface-mount board. Follow the steps below to verify board operation. **Do not turn on power supplies or enable signal/data generators until all connections are completed.**

Command Module Setup (CMOD232)

- If you are using the CMODUSB board skip to step 6.
- Set both switches at SW1 to the OFF position to disable the SDA/SCL pullup resistors.
- Place a shunt across pins 1-2 of the VDD select jumper (command module working voltage set to 3.3V).
- Connect a cable from the computer's serial port to the command module (CMOD232) interface board. Use a **straight-through** 9-pin male-to-female cable. To avoid damaging the EV kit or your computer, do not use a 9-pin null-modem cable or any other proprietary interface cable that is physically similar to the straight-through cable.
- Connect the provided wall-cube power supply to the CMOD232 board.

Command Module Setup (CMODUSB)

- If you are using the CMOD232 board skip to step 11.
- Set both switches at SW1 to the OFF position to disable the SDA/SCL pullup resistors.
- Place a shunt across pins 1-2 of the VDD select jumper (command module working voltage set to 3.3V).
- Connect a cable from the computer's USB port to the command module (CMODUSB) interface board. Use a standard USB A-B cable.
- Connect the provided wall-cube power supply to the CMODUSB board.

Evaluate: MAX19705–MAX19708

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

EV Kit Software Setup

11) The MAX19707.EXE software program can be run from the CD-ROM or hard drive. Use the INSTALL.EXE program to copy the files and create icons in the Windows 98/2000/XP **Start** menu.

EV Kit Setup

12) Verify that shunts are installed in the following locations:

JU1 (1-2) → CS connected

JU1 (3-4) → SCLK connected

JU1 (5-6) → DIN connected

JU1 (7-8) → DOUT connected

JU2 (1-2) → MAX19707 enabled

JU4 (INSTALLED) → Internal reference enabled

JU5 (1-2) → Digital bus level-shifting enabled

13) Connect a 3.0V, 100mA power supply to VDD. Connect the ground terminal of this supply to GND.

14) Connect a 3.0V, 100mA power supply to CVDD. Connect the ground terminal of this supply to GND.

15) Connect a 1.8V, 100mA power supply to OVDD. Connect the ground terminal of this supply to DGND.

16) Connect a 3.3V, 100mA power supply to BVCC. Connect the ground terminal of this supply to DGND.

17) Connect a 5V, 250mA power supply to VOP. Connect the ground terminal of this supply to GND.

18) Connect a -5V, 250mA power supply to VON. Connect the ground terminal of this supply to GND.

19) Carefully align the 40-pin connector of the MAX19705–MAX19708 EV kits (J1) with the 40-pin header of the CMOD232/CMODUSB interface board (P4). Gently press them together.

20) The MAX19705–MAX19708 EV kits support three modes of operation:

- To connect a logic analyzer to the EV kit and test the Rx ADCs, skip to step 21.
- To connect a spectrum analyzer to the EV kit and test the Tx DACs, skip to step 43.
- To connect an ASIC or FPGA to the EV kit, see the *Configuring for ASIC/FPGA Connection* section.

Rx ADC Setup

21) Ensure that a shunt is placed across pins 2 and 3 of jumper JU3.

22) Connect the clock signal generator to the input of the clock bandpass filter.

- Connect the output of the clock bandpass filter to the EV kit SMA connector labeled J10.
- Connect the first analog signal generator to the input of the desired bandpass filter.
- Connect the output of the bandpass filter to the EV kit SMA connector labeled J3 (I channel).
- Connect the second analog signal generator to the input of the desired bandpass filter.
- Connect the output of the bandpass filter to the EV kit SMA connector labeled J6 (Q channel).
- Ensure that all signal generators are phase-locked to a common reference frequency.
- Connect the logic analyzer to J11. See the *Digital Data Bit Locations* section for header connections.
- Set the logic analyzer to capture 10-bit CMOS data on the falling edge for the I channel (J3) or the rising edge for the Q channel (J6).
- Turn on the -5V power supply.
- Turn on all remaining power supplies.
- Plug the CMOD232/CMODUSB wall cube into an electrical outlet.
- Enable the signal generators.
- Set the clock signal generator to output the desired clock frequency. The amplitude of the generator should be sufficient to produce a 13.8dBm signal at the SMA input of the EV kit. Insertion losses due to the series-connected filter (step 22) and the interconnecting cables decrease the amount of power seen at the EV kit input. Account for these losses when setting the signal generator amplitude.
- Set the analog input signal generators to output the desired frequency. The amplitude of the generator should produce a signal that is no larger than 4.5dBm as measured at the SMA input of the EV kit. Insertion losses due to the series-connected filter (steps 24 and 26) and the interconnecting cables decrease the amount of power seen at the EV kit input. Account for these losses when setting the signal generator amplitude.
- Start the MAX19705–MAX19708 program by opening its icon in the **Start** menu.
- Select the device that you are using in the **Device** drop-down box.
- Normal device operation can be verified by the “Status: Interface Board Operational” text in the **Interface** box.
- Click the **POR Reset** button on the MAX19705–MAX19708 EV kit software GUI.
- Enable the logic analyzer.
- Capture data using the logic analyzer.

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Tx DAC Setup

- 43) Ensure that a shunt is placed across pins 1 and 2 of jumper JU3.
- 44) Connect the clock signal generator to the input of the clock bandpass filter.
- 45) Connect the output of the clock bandpass filter to the EV kit SMA connector labeled J10.
- 46) Connect the output of the clock signal generator to the data generator synchronization input.
- 47) Connect the first spectrum analyzer to the EV kit SMA connector labeled J8 (Q channel).
- 48) Connect the second spectrum analyzer to the EV kit SMA connector labeled J9 (I channel).
- 49) Connect the data generator to J11. See the *Digital Data Bit Locations* section for header connections.
- 50) Turn on the -5V power supply.
- 51) Turn on all remaining power supplies.
- 52) Plug the CMOD232/CMODUSB wall cube into an electrical outlet.
- 53) Enable the signal generator.
- 54) Set the clock signal generator to output the desired clock frequency. The amplitude of the generator should be sufficient to produce a 13.8dBm signal at the SMA input of the EV kit. Insertion losses due to the series-connected filter (step 43) and the interconnecting cables decrease the amount of power seen at the EV kit input. Account for these losses when setting the signal generator amplitude.
- 55) Load the desired test pattern into the data generator. Data clocked on the rising edge of the clock is transmitted to the Q channel. Data clocked on the falling edge of the clock is transmitted to the I channel.
- 56) Start the MAX19705–MAX19708 EV kits program by opening the icon in the **Start** menu.
- 57) Select the device that you are using in the **Device** drop-down box.
- 58) Normal device operation can be verified by the “Status: **Interface** Board Operational” text in the box.
- 59) Click the **POR Reset** button on the MAX19705–MAX19708 EV kit software GUI.
- 60) Enable the data generator.
- 61) Enable the spectrum analyzers.
- 62) Analyze the data on the EV kit outputs (J8 and J9) with the spectrum analyzers.

Detailed Description of Software

User-Interface Panel

The user interface (Figure 1) is easy to operate; use the mouse, or a combination of the Tab and arrow keys to manipulate the software. Each of the buttons corresponds to bits in the command and configuration bytes. By clicking on them, the correct SPI write operation is generated to update the internal registers of the MAX19705–MAX19708. Words in **bold** represent visible items on the GUI.

The software divides EV kit functions into logical blocks. The **Interface** box indicates the current **Device**, the **Register Address Sent**, and the **Data Sent/Received** for the last write operation. This data is used to confirm proper device operation. Adjust the **SPI Clock Frequency** through the pulldown box.

The controls for the **Tx DAC**, **Auxiliary DACs**, and **Auxiliary ADC** are accessed through tab sheets. **Device Control** is accessed at the right-hand side of the main window. Return the EV kit to its power-on-reset state by clicking the **POR Reset** button.

The MAX19707 EV kit software features additional functions to simplify operation. **Automatic Diagnostics** probes the command module board to make sure that a connection exists between the PC and the command module.

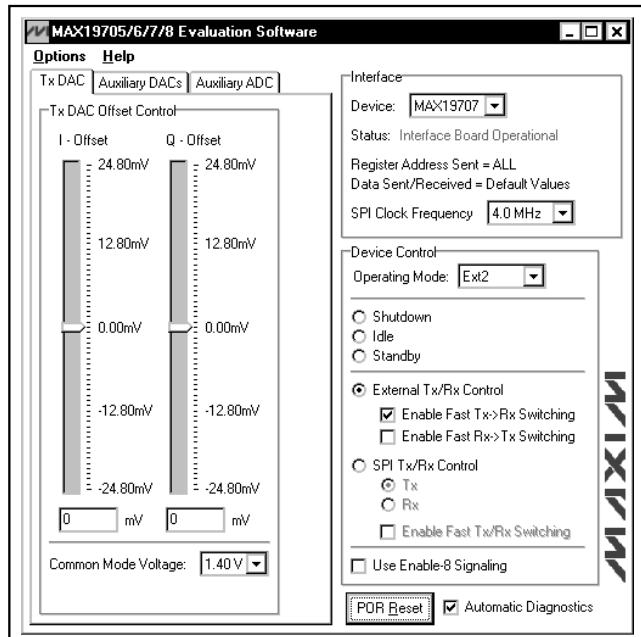


Figure 1. MAX19705–MAX19708 EV Kit Software Main Window

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Device Control

Configure the operating mode of the device through the intuitive controls in the **Device Control** box. Select a mode as outlined in the MAX19705–MAX19708 data sheet using the **Operating Mode** control. For a detailed description of the MAX19705–MAX19708 operating modes and their specific names, refer to the *Power-Management Modes* table in the MAX19705, MAX19706, MAX19707, or MAX19708 data sheets.

The MAX19705–MAX19708 feature an 8-bit SPI signaling mode to increase communications speed. Check the **Use Enable-8 Signaling** box to use this mode. Refer to the MAX19705, MAX19706, MAX19707, or MAX19708 data sheets for more details on Enable-8 signaling.

When using the **SPI Tx/Rx Control**, ensure that jumper JU3 is set appropriately. See the *Digital Data Direction* section for details regarding JU3.

Tx DAC Control

Adjust the **Common Mode Voltage** and the **DAC Full Scale** voltage by selecting the desired option from the pulldown box. The **Common Mode Voltage** control is only available when using the MAX19708. The com-

mon-mode voltage of the MAX19705, MAX19706, MAX19707 is fixed. Refer to the respective data sheet for more details.

The DAC **I-Offset** and **Q-Offset** voltages can be adjusted in $801.5\mu V/977.5\mu V$ increments by adjusting the appropriate slider in the **Tx DAC Offset Control** box. The increment value is dependent on the **DAC Full Scale** range. A full-scale range of $820mV_{P-P}$ yields an $801.5\mu V$ increment. A full-scale range of $1V_{P-P}$ yields a $977.5\mu V$ increment. Alternatively, a number (specified in millivolts) can be entered in the boxes below each slider. If a number not divisible by $0.8015/0.9775$ is entered, the software automatically rounds the number to the nearest $801.5\mu V/977.5\mu V$ increment and sends the appropriate data to the MAX19705–MAX19708.

Auxiliary DAC Control

Access the MAX19705–MAX19708 auxiliary DACs through the **Auxiliary DACs** tab of the MAX19707 EV kit software (Figure 2). Set the output voltage of the desired auxiliary DAC by adjusting the **Aux-DAC 1**, **Aux-DAC 2**, or **Aux-DAC 3** sliders. Enter a number in the edit box below the slider for precise adjustments. **Enable** each DAC by setting the checkbox below the slider.

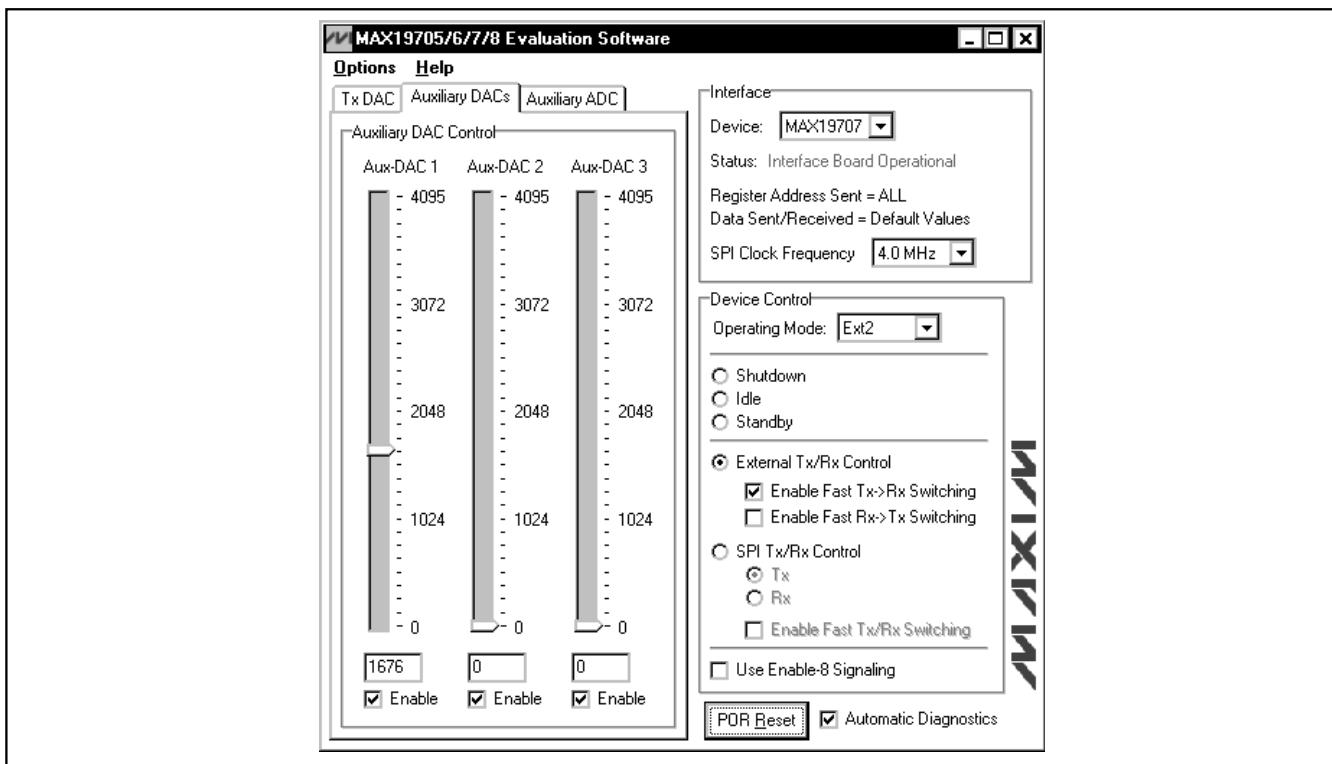


Figure 2. MAX19705–MAX19708 EV Kit Software Auxiliary DAC Control

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Auxiliary ADC Controls

Access the MAX19705–MAX19708 auxiliary ADC through the **Auxiliary ADC** tab of the MAX19705–MAX19708 EV kit software. Although the MAX19705–MAX19708 feature only one 10-bit, low-speed ADC, they can multiplex four voltages onto their input. Select the desired **ADC Input Source** in the **ADC Conversion** box. Read the **CODE** and **VOLTAGE** of the **ADC** by clicking the **Start Conversion and Read ADC Value** button.

Other ADC features such as **ADC Averaging** and **Conversion Clock Divide Ratio** are accessed through the **ADC Control** box. Disable the auxiliary ADC by checking the **Shutdown Auxiliary ADC** checkbox. The MAX19705–MAX19708 can use either an **Internal 2.048V** reference or **VDD (Internal VDD)** for the auxiliary ADC reference. If **VDD** is used for the reference voltage, enter the value of **VDD** in the box beside the **Internal VDD** checkbox.

Simple SPI Commands

There are two methods for communicating with the MAX19705–MAX19708: through the normal user-interface panel or through the SPI commands available by selecting the **3-Wire Interface Diagnostic** item from the **Options** pulldown menu. A window is displayed that executes an SPI read/write operation.

The SPI (**3-Wire Interface**) dialog box accepts numeric data in hexadecimal format. Hexadecimal numbers

should be prefixed by a \$ or 0x. Data entered in the **Data bytes to be written:** edit box will be sent to the device. Eight-bit hexadecimal numbers should be comma delimited. Data appearing in the **Data bytes received:** box is data read from the device.

Clicking the **Send Now** button in Figure 4 transmits the hexadecimal numbers 0x4A and 0xC1. 0x00 and 0x00 are the received values from the device. For a detailed description of SPI communications with the MAX19705–MAX19708, refer to the MAX19705, MAX19706, MAX19707, and MAX19708 data sheets.

Detailed Description of Hardware

The MAX19705–MAX19708 EV kits are fully assembled and tested circuit boards that contain all the components necessary to evaluate the performance of the MAX19705, MAX19706, MAX19707, or MAX19708 analog front-end (AFE) ICs.

The MAX19705–MAX19708 receive ADCs (Rx ADCs) accept differential input signals; however, on-board transformers (T1, T2) convert a readily available single-ended source output to the required differential signal. The input signals of the MAX19705–MAX19708 can be measured using a differential oscilloscope probe at headers J4 and J7.

The MAX19705–MAX19708 transmit DACs (Tx DACs) are buffered with on-board ultra-low-distortion split-supply operational amplifiers.

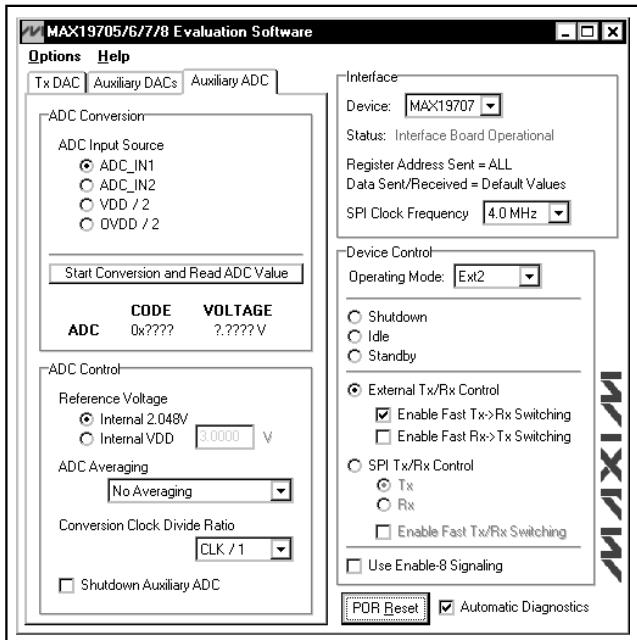


Figure 3. MAX19705–MAX19708 EV Kit Software Auxiliary ADC Control

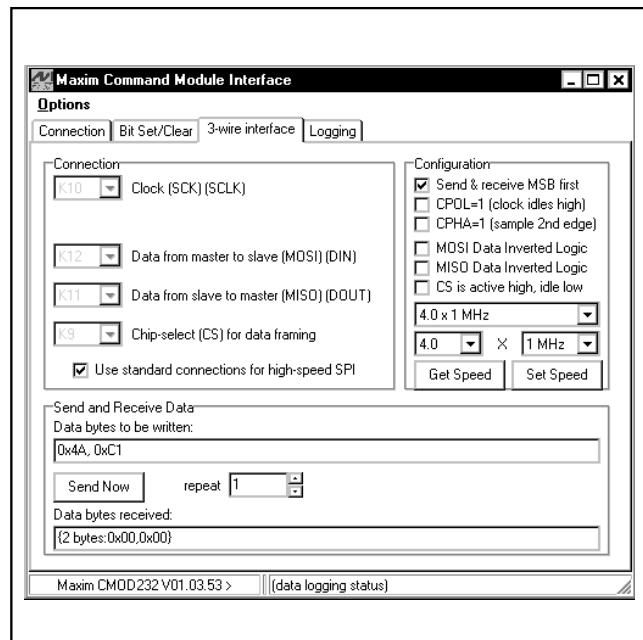


Figure 4. MAX19705–MAX19708 EV Kit Software 3-Wire Interface Diagnostics

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

A bidirectional driver (U2) buffers and level-translates the parallel data bus signals of the MAX19705–MAX19708. The parallel data bus of the MAX19705–MAX19708 EV kits is accessible at header J11.

The EV kits are designed as four-layer PC boards to optimize the performance of the MAX19705–MAX19708. Separate analog, digital, clock, and buffer power planes minimize noise coupling between analog and digital signals. 100Ω differential microstrip transmission lines are used for analog ADC inputs and analog DAC outputs. 50Ω microstrip transmission lines are used for all digital outputs and the clock input. The trace lengths of the ADC input and DAC output paths are well matched to minimize layout-dependent signal skew.

Power Supplies

For optimal performance, the MAX19705–MAX19708 EV kits require separate analog, digital, clock, and buffer power supplies. +3.0V and +1.8V power supplies are recommended to power the analog (VDD) and digital (OVDD) portions of the MAX19705–MAX19708, respectively. A separate +3.3V power supply (BVCC) is used to power the I/O level-translating buffer (U2). The clock circuitry (CVDD) is powered by a +3.0V power supply. The DAC outputs of the MAX19707 are buffered by split-supply op amps. Power the positive rail (VOP) with a +5V supply. Power the negative rail (VON) with a -5V supply.

MAX19705–MAX19708 Power-Down

The MAX19705–MAX19708 feature a global device power-down pin. Jumper JU2 controls this feature. See Table 1 for jumper configuration.

Table 1. Power-Down Shunt Settings (JU2)

SHUNT POSITION	PD PIN	DESCRIPTION
1-2*	OVDD	Normal operation.
2-3	DGND	MAX19705–MAX19708 powered down.

*Default configuration: JU2 (1-2).

Measuring the OVDD Supply Current

The level-translating buffer (U2) requires a voltage supply on each side of the device. By default the MAX19705–MAX19708 side of the device is connected to OVDD. If the OVDD current is measured at the OVDD and GND pads of the EV kit, a measurement error occurs due to the extra current flowing into U2. To accurately measure OVDD current, connect the MAX19705–MAX19708 side of U2 to BVCC by configuring jumper JU5. See Table 2 for jumper configuration. Ensure that BVCC is equal to OVDD, when operating in this mode.

Table 2. OVDD Supply Connections (JU5)

SHUNT POSITION	DESCRIPTION
1-2*	Normal operation.
2-3	OVDD measurement mode. (Note: BVCC must equal OVDD.)

*Default configuration: JU2 (1-2).

Clock

An on-board clock-shaping circuit generates a clock signal from an AC sine-wave signal applied to the CLOCK SMA connector. The input signal should not exceed a magnitude of 2.6Vp-p. The frequency of the signal should not exceed 45MHz for the MAX19707 (see the *Part Selection Table* for the maximum sampling rate of other devices). The frequency of the sinusoidal input signal determines the sampling frequency (f_{CLK}) of the MAX19705–MAX19708. A differential line receiver (U3) processes the input signal to generate the CMOS clock signal. The signal's duty cycle can be adjusted with potentiometer R63. A clock signal with a 50% duty cycle (recommended) can be achieved by adjusting R63 until 1.32V is produced across test points TP3 and TP4 when the clock voltage supply (CVDD) is set to 3.0V. The clock signal is available at J11-1 (CLK), which can be used to synchronize the output signal to the logic analyzer. Measure the clock signal with an oscilloscope at TP5.

Rx ADC Inputs

Although the MAX19705–MAX19708 accept differential analog input signals, the EV kits only require a single-ended analog input signal, with an amplitude of less than 4.5dBm provided by the user. Connect the single-ended sources to J3 (I channel) and J6 (Q channel). Insertion losses due to series-connected filters and the interconnecting cables decrease the amount of power seen at the EV kit input. Account for these losses when setting the signal generator amplitude. On-board transformers(T1, T2) convert the single-ended analog input signals and generate differential analog signals at the ADC's differential input pins. The MAX19705–MAX19708 also accept single-ended input signals. See the *Configuring for Single-Ended ADC Operation* section for details on how to modify the MAX19705–MAX19708 EV kits to support this mode of operation.

Configuring for Single-Ended ADC Operation

The MAX19705–MAX19708 can be configured to accept AC-coupled single-ended signals presented at the input. Configure the EV kit to support this mode of operation by completing these steps:

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

- 1) Cut the trace at locations R11, R12, R13, and R14.
- 2) Install 0Ω resistors at locations R7, R8, R9, R10, R15, and R16.
- 3) Install $2k\Omega \pm 1\%$ resistors at locations R21, R22, R23, and R24.
- 4) Connect the single-ended sources to J2 (I channel) and J5 (Q channel).

Configure the EV kit for DC-coupled single-ended signals by removing capacitors C1, C2, removing resistors R9, R10, and installing 0Ω resistors at locations R5 and R6.

Tx DAC Outputs

By default, on-board ultra-low-distortion op amps (U4 and U5) buffer the DAC outputs on the MAX19705–MAX19708 EV kits. The op amps convert the differential signal from the MAX19705–MAX19708 to a single-ended 50Ω signal. Measure the buffered output signals at J8 (Q channel) and J9 (I channel).

Measure the differential output of the MAX19705–MAX19708 at the IDN/IDP and QDN/QDP pads. Full-scale output, offset voltage, and common-mode voltage functions are controlled through the MAX19705–MAX19708 EV kit software.

Reference

The MAX19705–MAX19708 feature two reference operation modes. The EV kits can be configured to use either the MAX19705–MAX19708 internal (1.024V) reference or an external user-supplied reference applied at the REFIN pad. The MAX19705–MAX19708 generate the REFP and REFN voltages from the selected reference voltage (refer to the MAX19705, MAX19706, MAX19707, and MAX19708 data sheets for more details). Measure the REFP and REFN voltages at TP1 and TP2, respectively. Jumper JU4 controls the reference mode. See Table 3 for jumper configuration.

Table 3. Reference Shunt Settings (JU4)

SHUNT POSITION	DESCRIPTION
Installed*	Internal reference mode.
Not Installed	External reference mode. Apply an external reference voltage to the REFIN pad.

*Default configuration: JU4 (installed).

Digital Data Header

The MAX19705–MAX19708 feature a single 10-bit parallel, bidirectional data bus that transmits/receives the converted analog signals. Refer to the MAX19705, MAX19706, MAX19707, MAX19708 data sheets for more details.

Digital Data Direction

The MAX19705–MAX19708 EV kits feature an on-board bidirectional level-translating buffer in the parallel digital data path. Jumper JU3 controls the direction of the data bus. See Table 4 for jumper configuration.

Table 4. Output Format Shunt Settings (JU3)

SHUNT POSITION	DESCRIPTION
1-2	Transmit path enabled. D0–D9 are inputs.
2-3*	Receive path enabled. D0–D9 are outputs.

*Default configuration: JU3 (2-3).

Digital Data Bit Locations

A driver (U2) buffers the digital I/Os of the MAX19705–MAX19708. This driver is able to drive large capacitive loads, which may be present at the logic analyzer connection. The outputs of the buffer are connected to a 40-pin header (J11). See Table 5 for bit locations on header J11.

Table 5. Digital Data Bit Locations

SIGNAL	LOCATION	TYPE	DESCRIPTION
D0	J11-37	I/O	Data Bit 0 (LSB)
D1	J11-35	I/O	Data Bit 1
D2	J11-33	I/O	Data Bit 2
D3	J11-31	I/O	Data Bit 3
D4	J11-29	I/O	Data Bit 4
D5	J11-27	I/O	Data Bit 5
D6	J11-25	I/O	Data Bit 6
D7	J11-23	I/O	Data Bit 7
D8	J11-21	I/O	Data Bit 8
D9	J11-19	I/O	Data Bit 9 (MSB)
SHDN	J11-13	I/O*	Shutdown Status*
Tx/Rx	J11-9	I/O*	Transmit/Receive Status*
CLK	J11-3	Output	Incoming Clock Signal
CLK	J11-1	Output	Incoming Clock Signal

*SHDN and Tx/Rx default to outputs, but can be configured to inputs. See the Configuring for ASIC/FPGA Connection section.

Note: All signal directions are with respect to the EV kit. Pins 5, 7, 11, 15, 17, 39, and 40 of J11 are open. All other pins are connected to DGND.

Configuring for ASIC/FPGA Connection

The MAX19705–MAX19708 EV kits are designed to be connected to an ASIC or FPGA. To complete this connection, follow the list of instructions:

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

- 1) Remove the shunt from jumper JU2.
- 2) Remove the shunt from jumper JU3.
- 3) Connect an ASIC/FPGA to header J11 (see the *Digital Data Bit Locations* section for header connections).
- 4) Ensure that the voltage at BVCC matches the ASIC/FPGA I/O voltage.

The ASIC/FPGA must control all signals connected to the MAX19705–MAX19708, including SHDN and Tx/Rx.

Configuring the Low-Speed DAC Buffers

The MAX19705–MAX19708 EV kits feature on-board configurable buffers. By default these buffers are configured for unity gain. Measure the buffered voltage at the BDAC1, BDAC2, and BDAC3 pads. Measure the unbuffered voltage at the DAC1, DAC2, and DAC3 pads.

Configure the on-board buffers for a positive (noninverting) gain by performing the following steps:

- 1) Cut the trace at locations R31, R33, and R35.
- 2) Select a value of $10\text{k}\Omega$ for resistors R32, R34, and R36.
- 3) Calculate resistors R31, R33, and R35 using the equations below.
- 4) Install R31, R33, and R35 in their respective locations.

$$R_{31} = R_{32} \times \left[\frac{BDAC1}{DAC1} - 1 \right]$$

$$R_{33} = R_{34} \times \left[\frac{BDAC2}{DAC2} - 1 \right]$$

$$R_{35} = R_{36} \times \left[\frac{BDAC3}{DAC3} - 1 \right]$$

where:

$$\frac{BDAC_-}{DAC_-} = \text{Desired noninverting gain of buffer}$$

$$R_{32} = R_{34} = R_{36} = 10\text{k}\Omega$$

Driving Unbuffered Loads

The low-speed buffers (U6) on the MAX19705–MAX19708 EV kits are optional and, if desired, can be disconnected from the DAC outputs of the MAX19705–MAX19708.

Disconnect the buffers from the MAX19705–MAX19708 by cutting the trace at locations R28, R29, and R30. Connect the low-speed DAC loads to the DAC1, DAC2, and DAC3 pads on the EV kit. If the load capacitance is between 5pF and 15pF , cut the trace and install $10\text{k}\Omega$ resistors at locations R25, R26, and R27. Resistors are not required if the capacitive load is less than 5pF .

Using an Alternative SPI Interface

The MAX19705–MAX19708 EV kits provide pads and jumpers that allow an alternative SPI interface to be used. Connect the interface to the CS, SCLK, DIN, and GND pads. Ensure that the SPI voltages are compatible with the MAX19705–MAX19708 working voltages. Refer to the MAX19705, MAX19706, MAX19707, and MAX19708 data sheets for suitable SPI interface voltages. Remove the shunts from jumper JU1. See Table 6 for jumper configuration.

Table 6. Alternative SPI Interface (JU1)

SHUNT POSITION	DESCRIPTION
1-2*	Normal Operation. Three shunts are installed across pins 1-2, 3-4, 5-6, 7-8.
3-4*	
5-6*	
7-8*	
Not Installed	Alternative SPI Interface. No shunts are installed on JU1, connect the SPI signals to the CS, SCLK, DIN, DOUT, and GND pads.

*Default configuration: JU1 (1-2, 3-4, 5-6, 7-8).

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

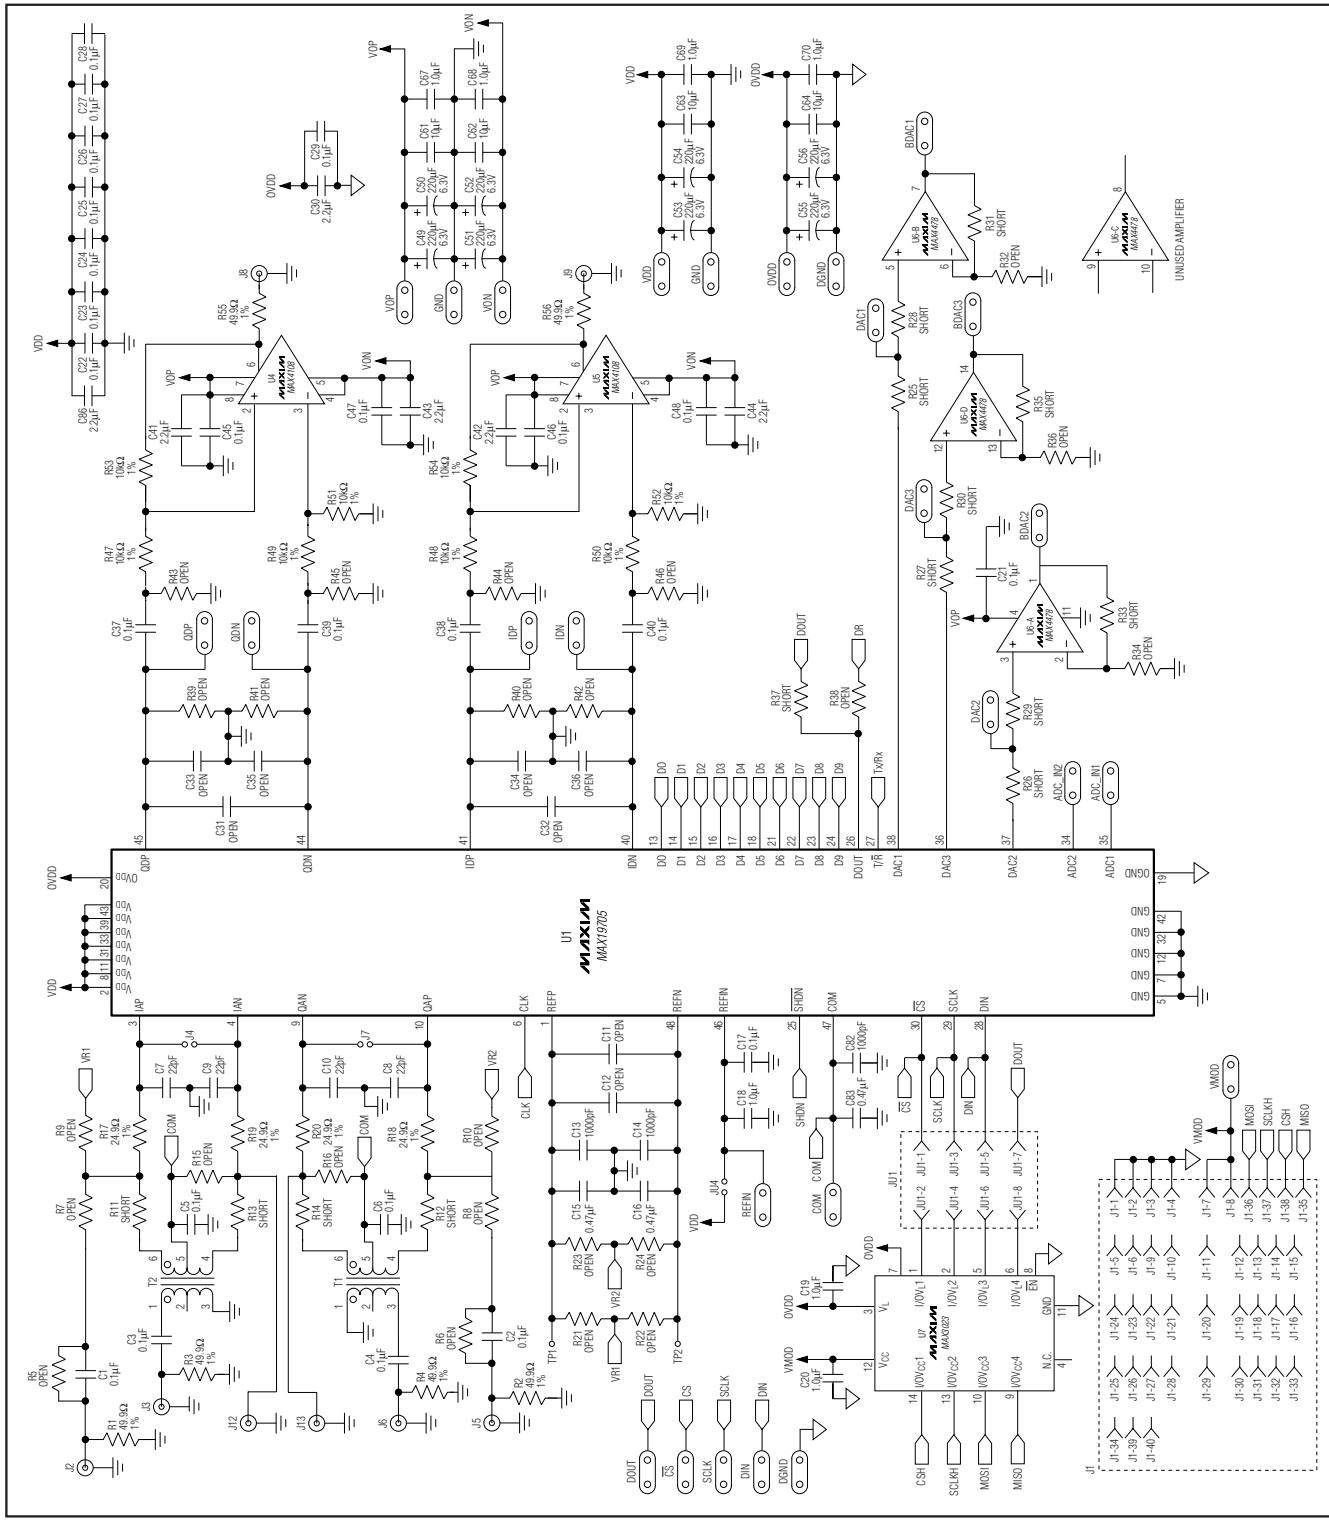


Figure 5a. MAX19705 EV Kit Schematic (Sheet 1 of 2)

MAXIM

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

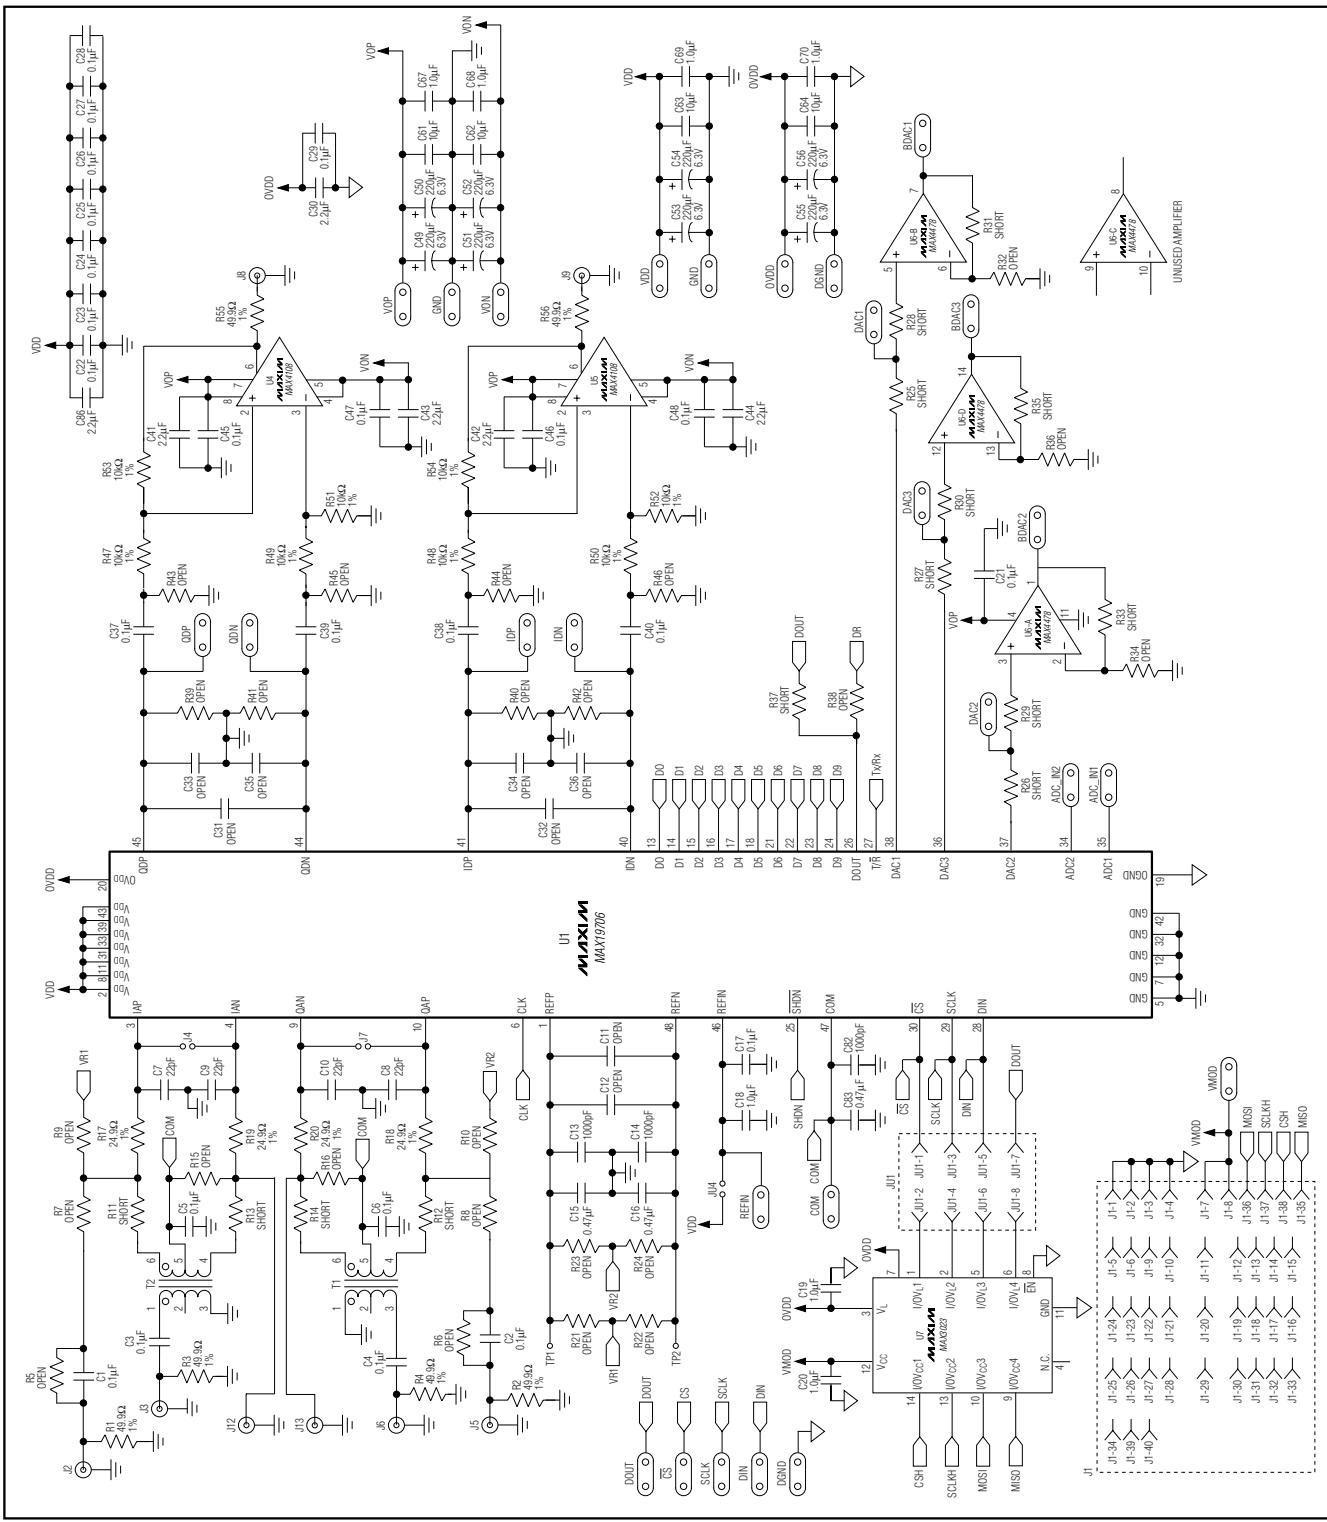


Figure 5b. MAX19706 EV Kit Schematic (Sheet 1 of 2)

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

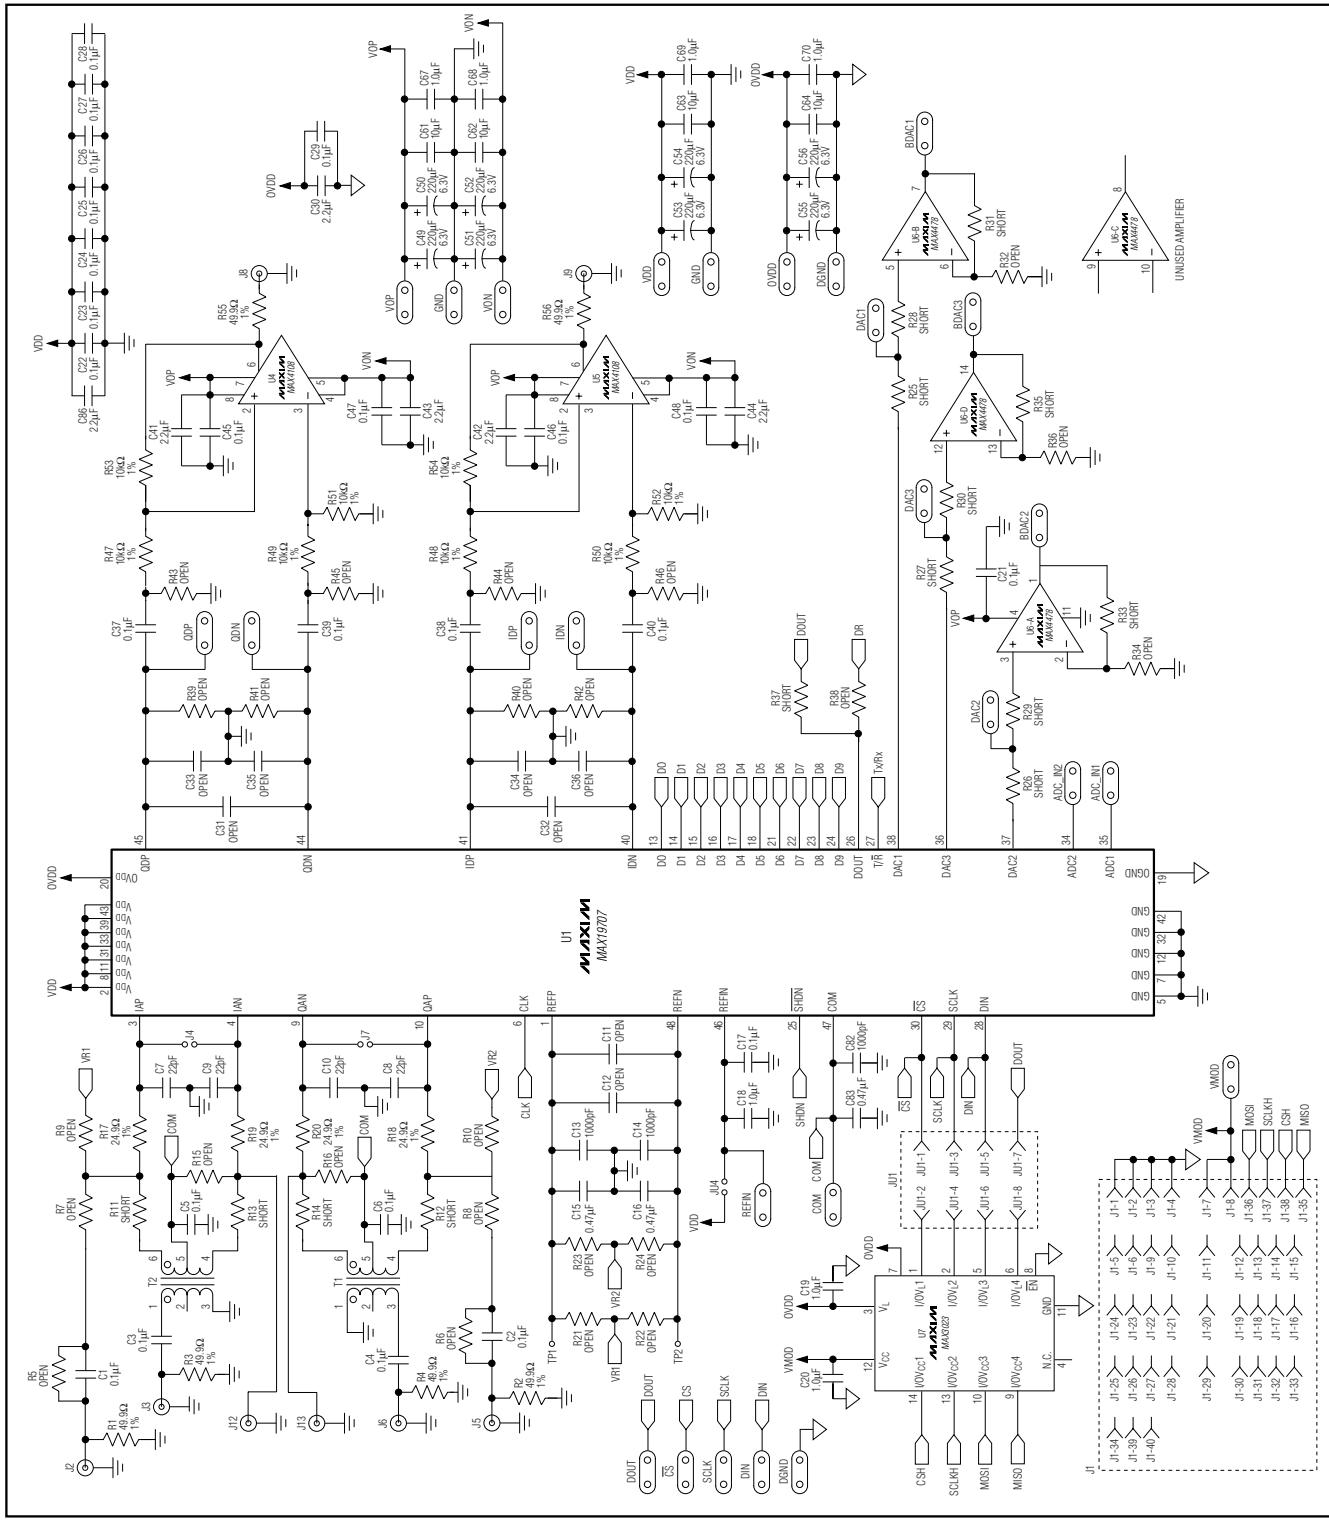


Figure 5c. MAX19707 EV Kit Schematic (Sheet 1 of 2)

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

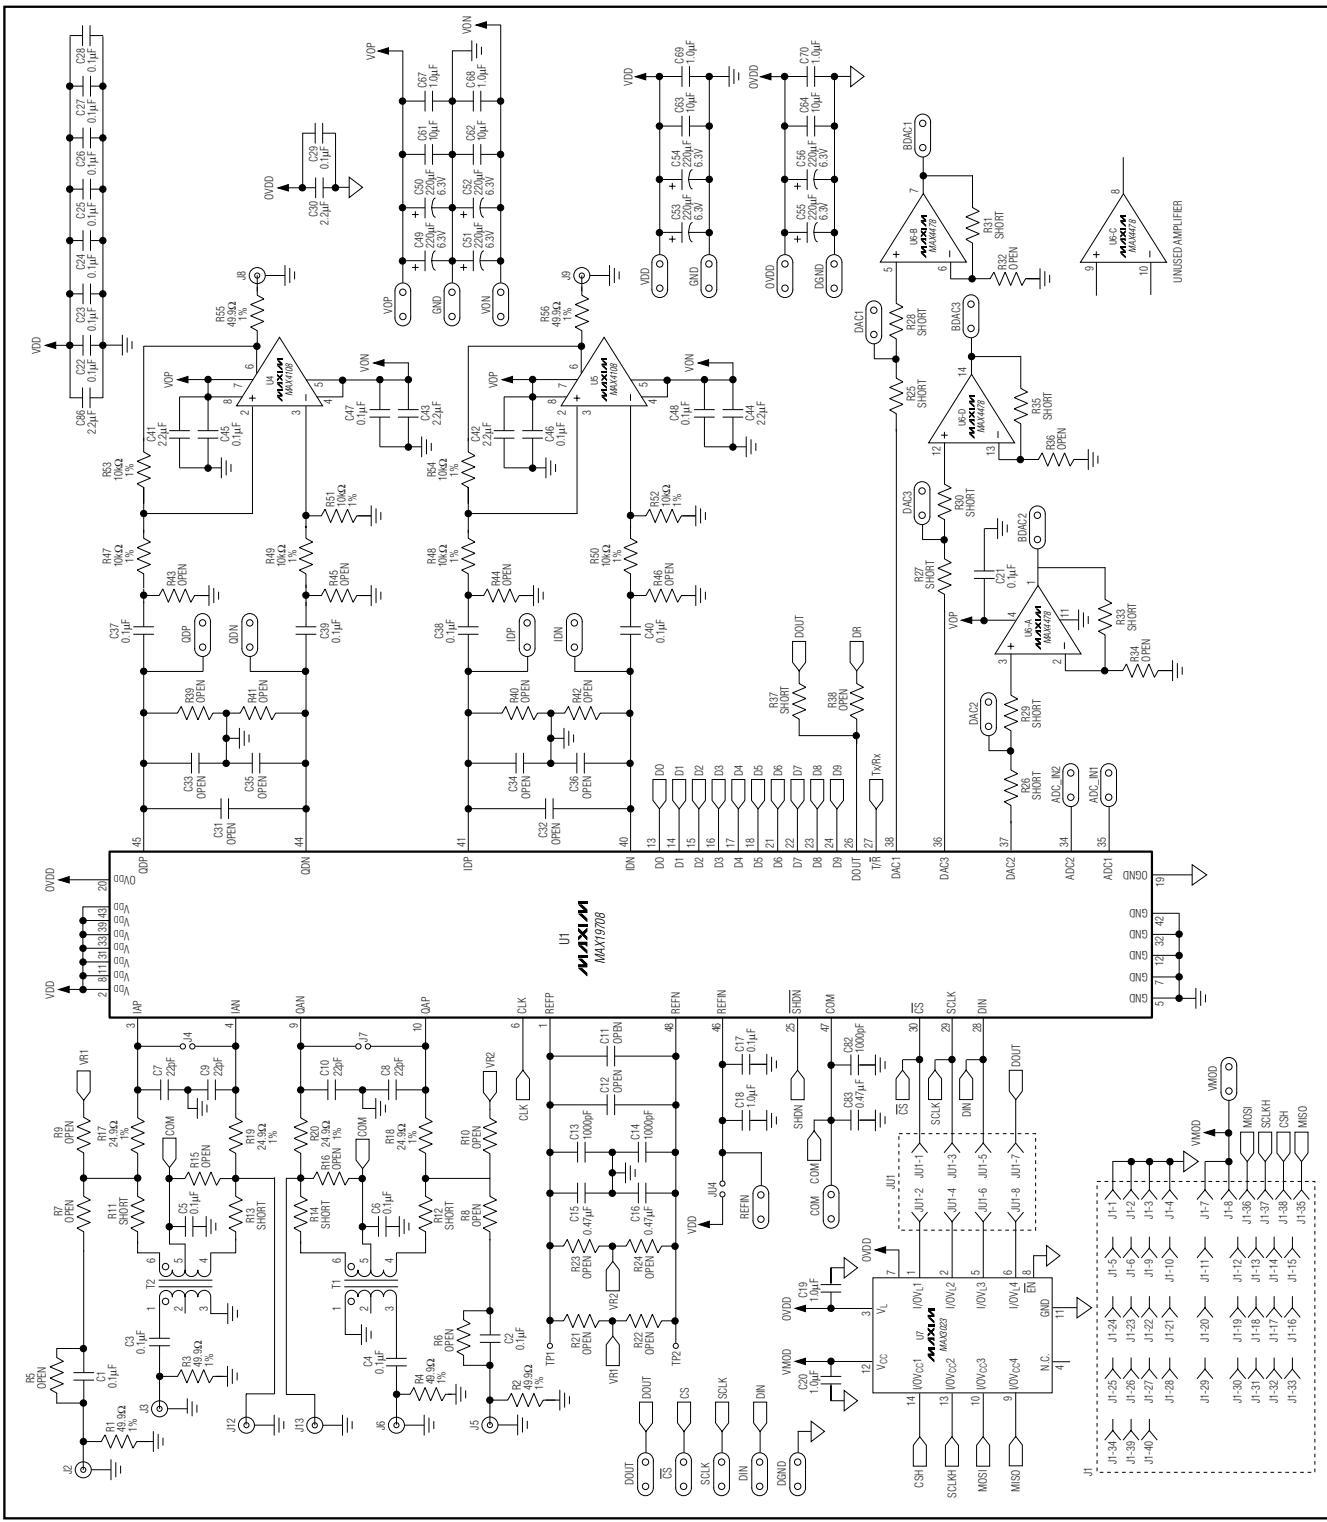


Figure 5d. MAX19708 EV Kit Schematic (Sheet 1 of 2)

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

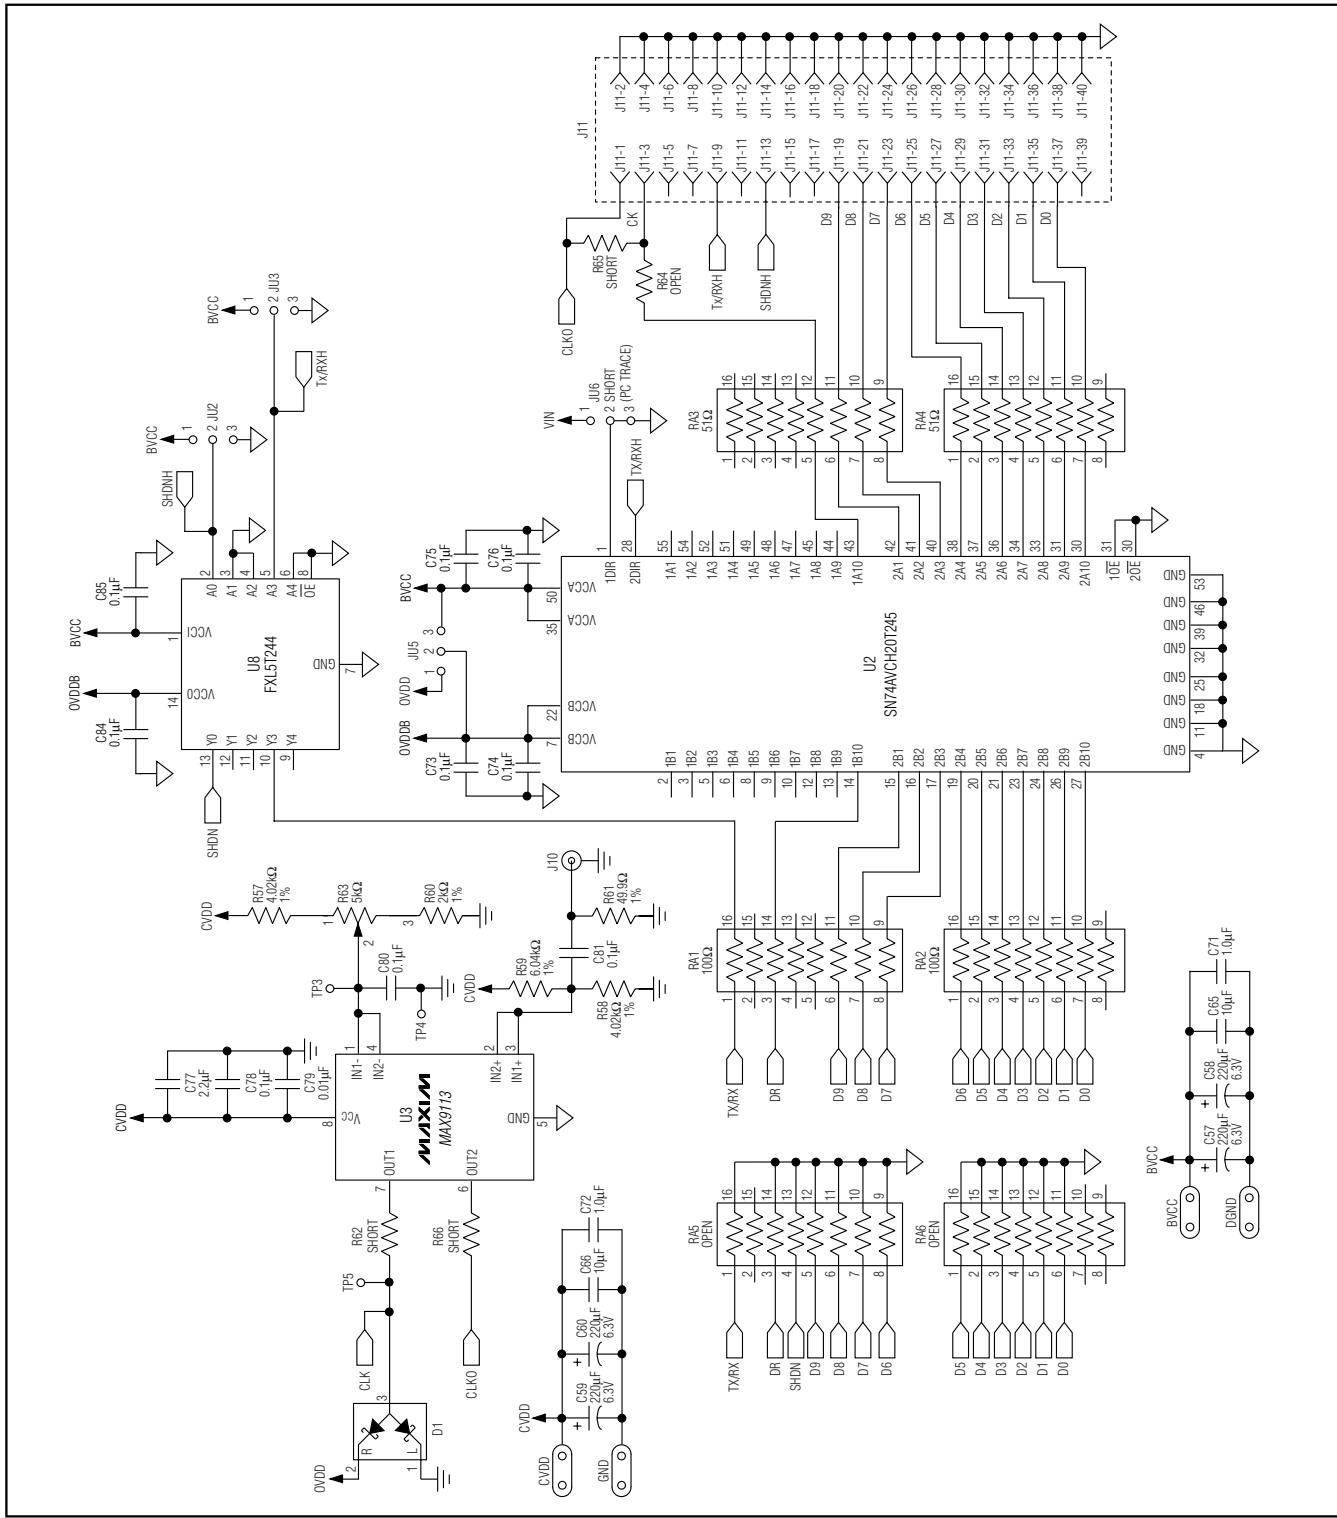


Figure 5e. MAX19705–MAX19708 EV Kit Schematic (Sheet 2 of 2)

Evaluate: MAX19705–MAX19708

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

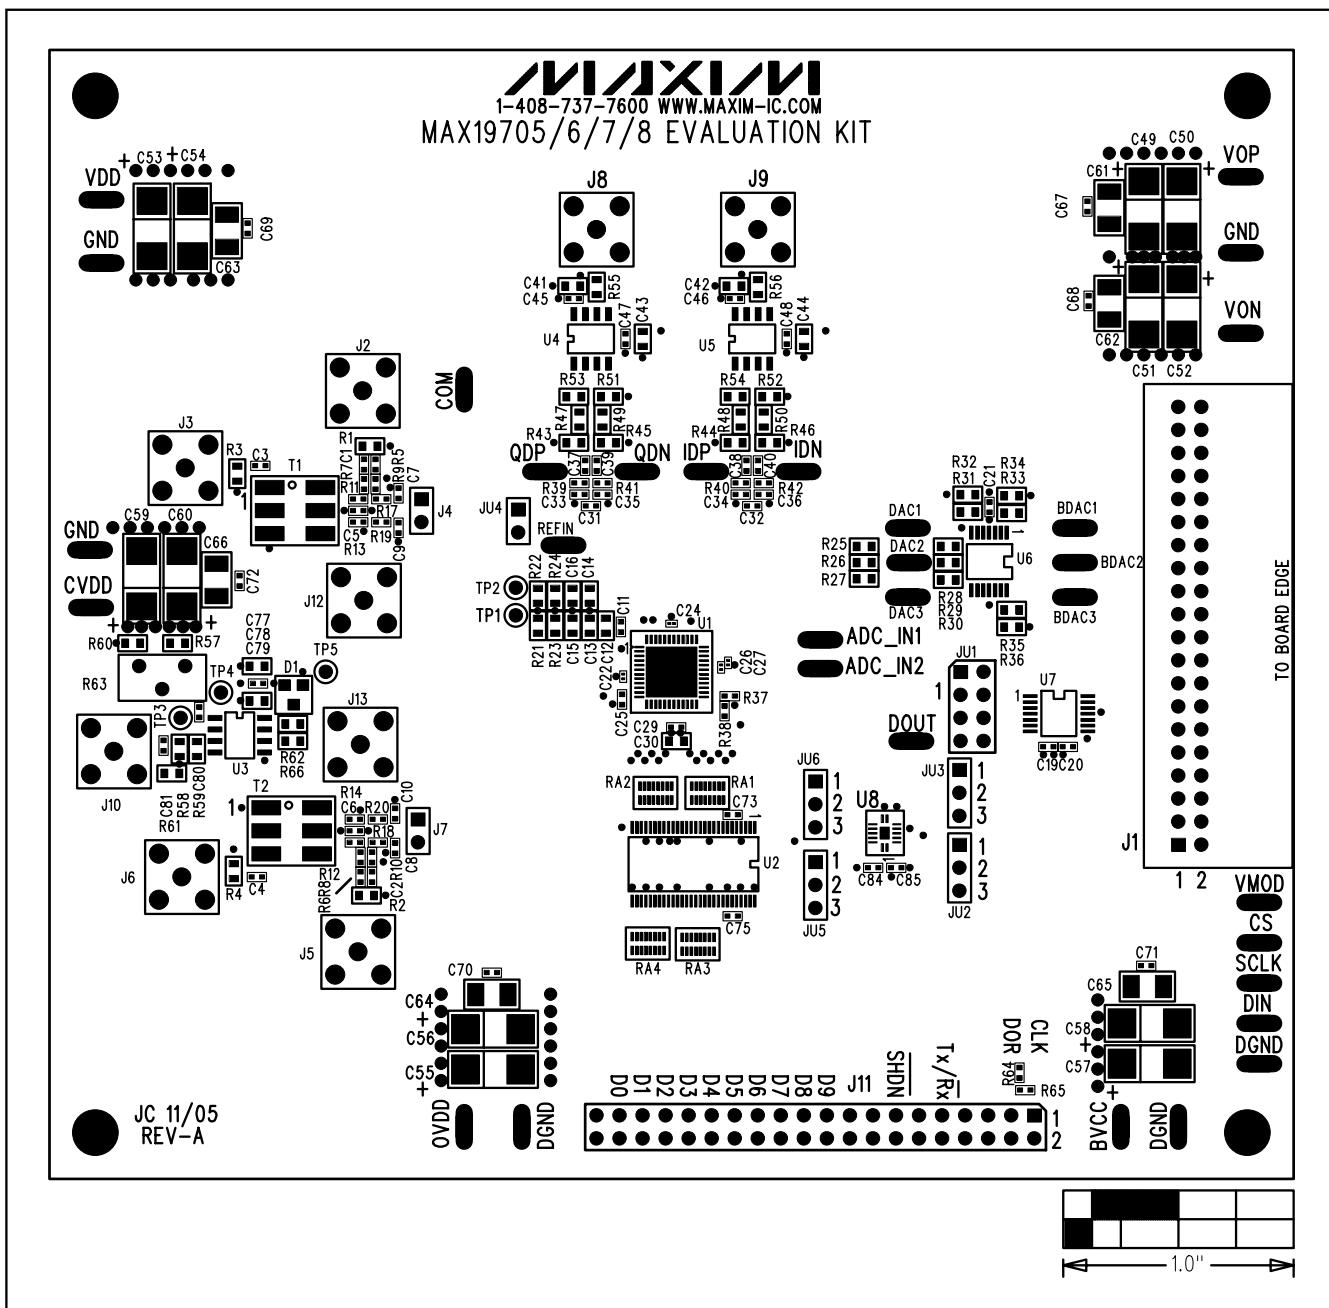


Figure 6. MAX19705–MAX19708 EV Kit Component Placement Guide—Component Side

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

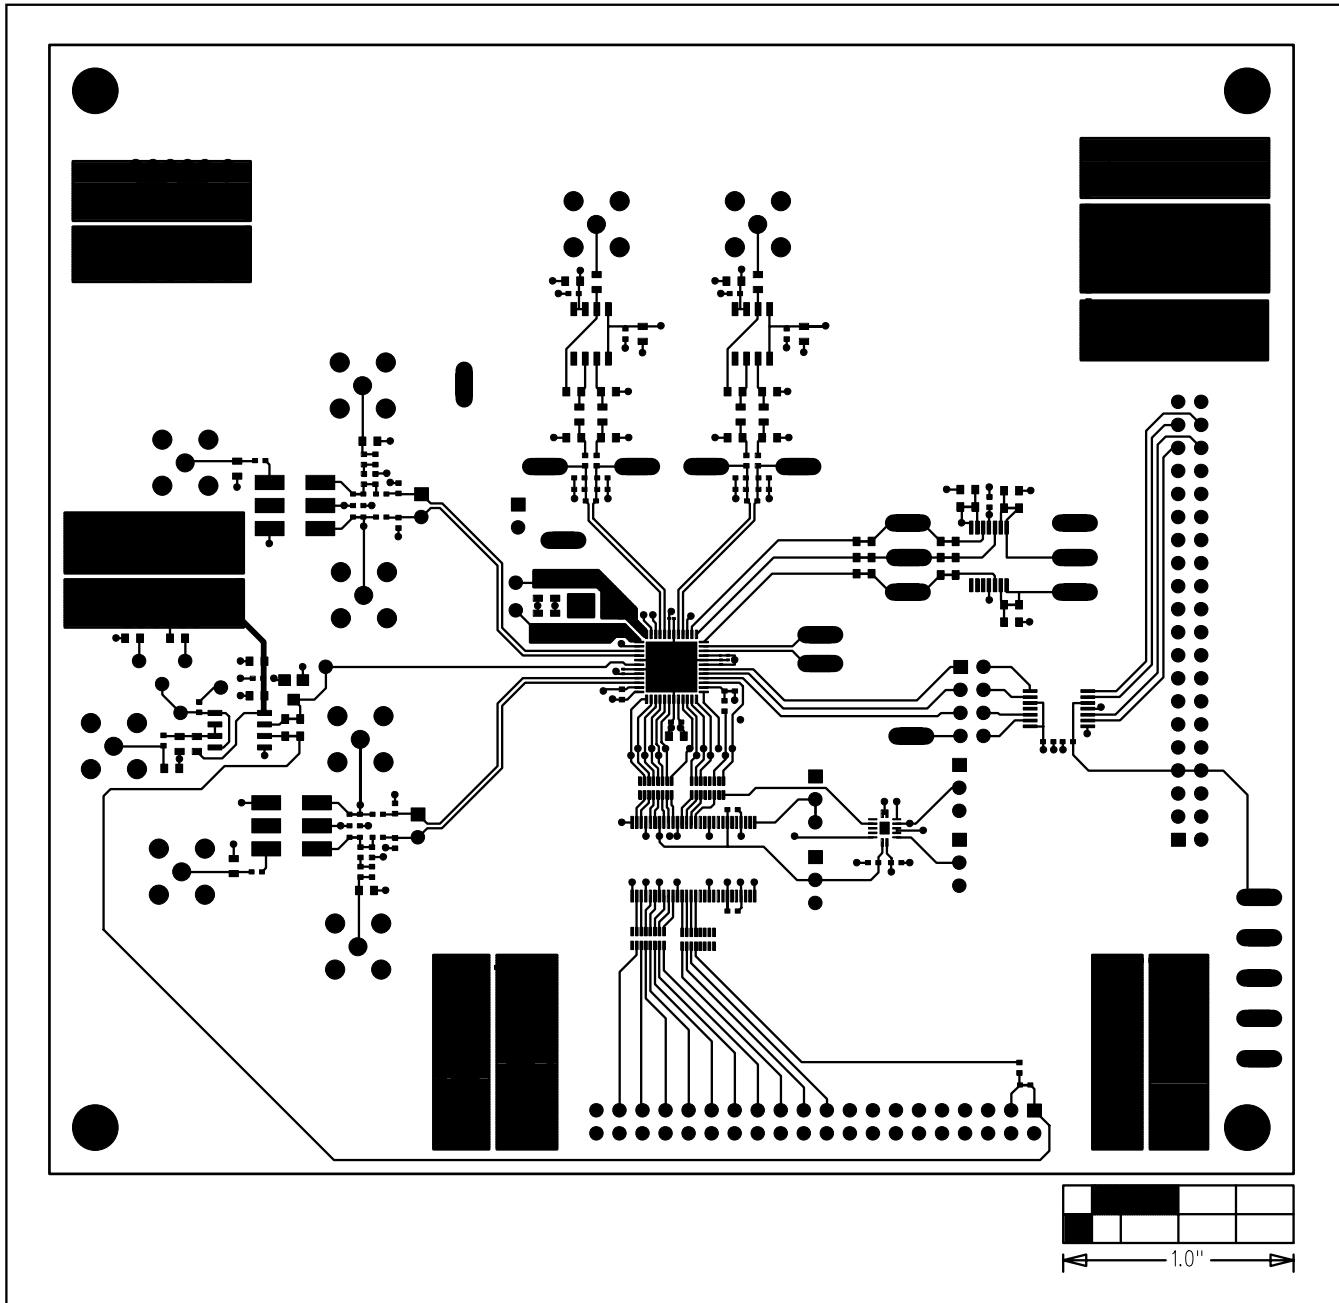


Figure 7. MAX19705–MAX19708 EV Kit PC Board Layout—Component Side

Evaluate: MAX19705–MAX19708

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

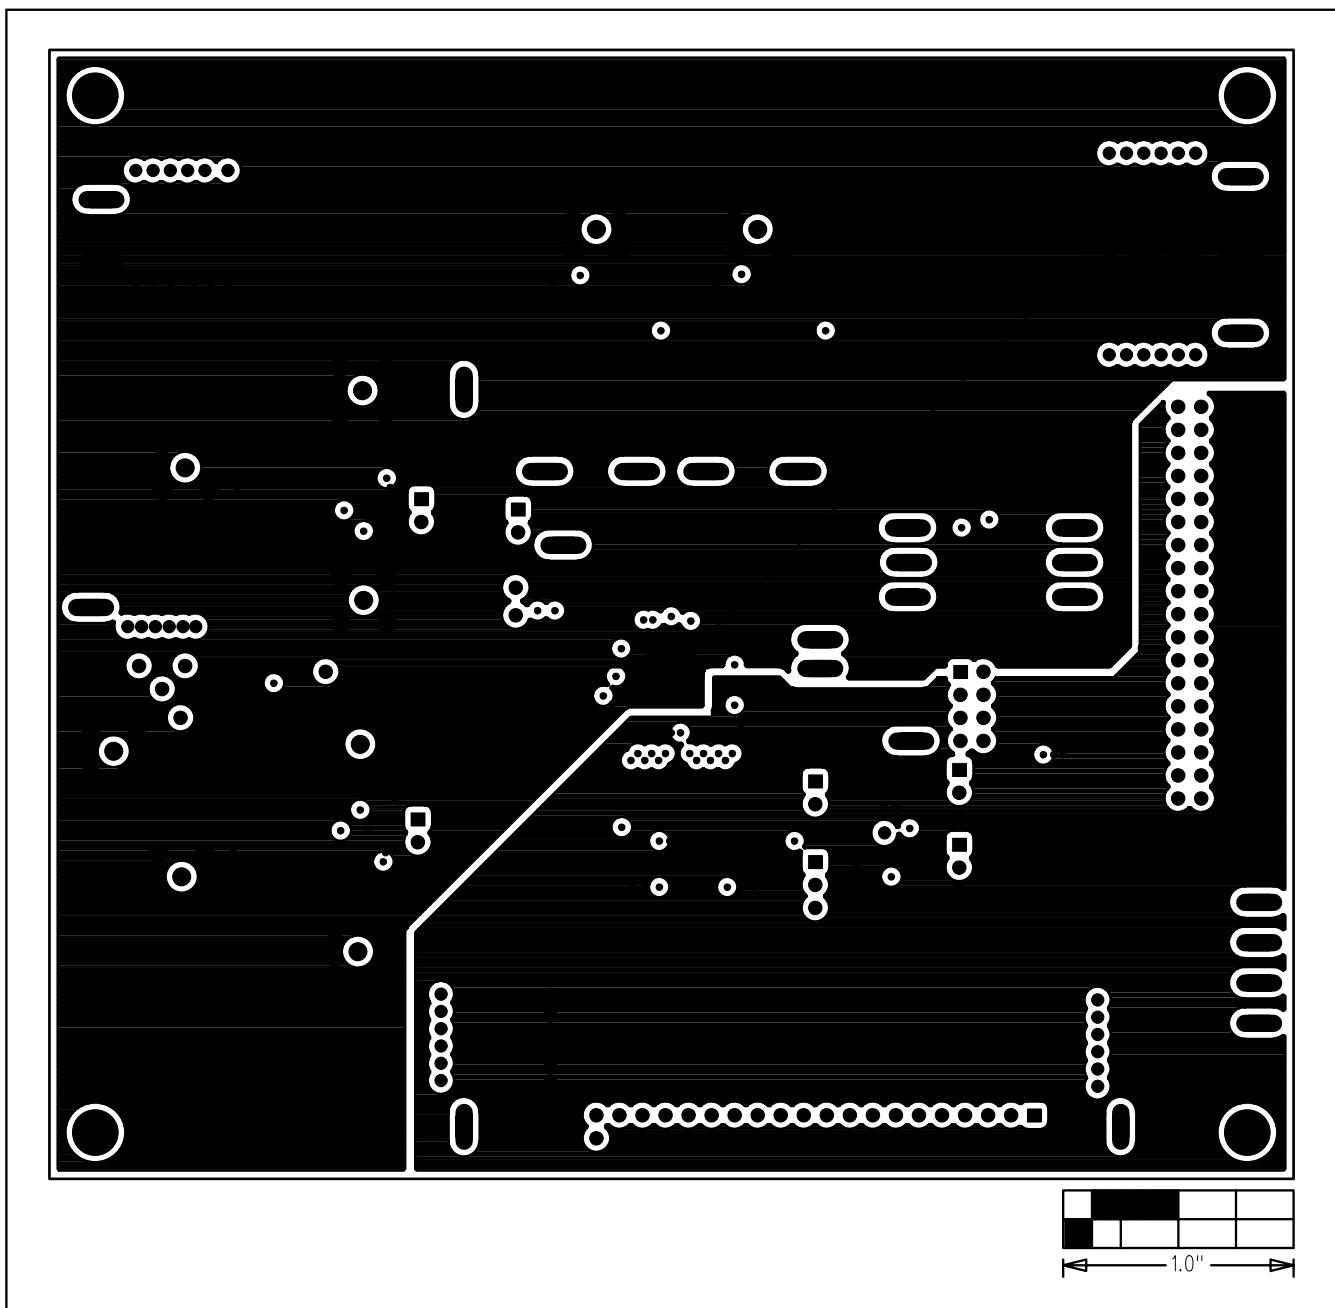


Figure 8. MAX19705–MAX19708 EV Kit PC Board Layout (Inner Layer 2)—Ground Planes

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

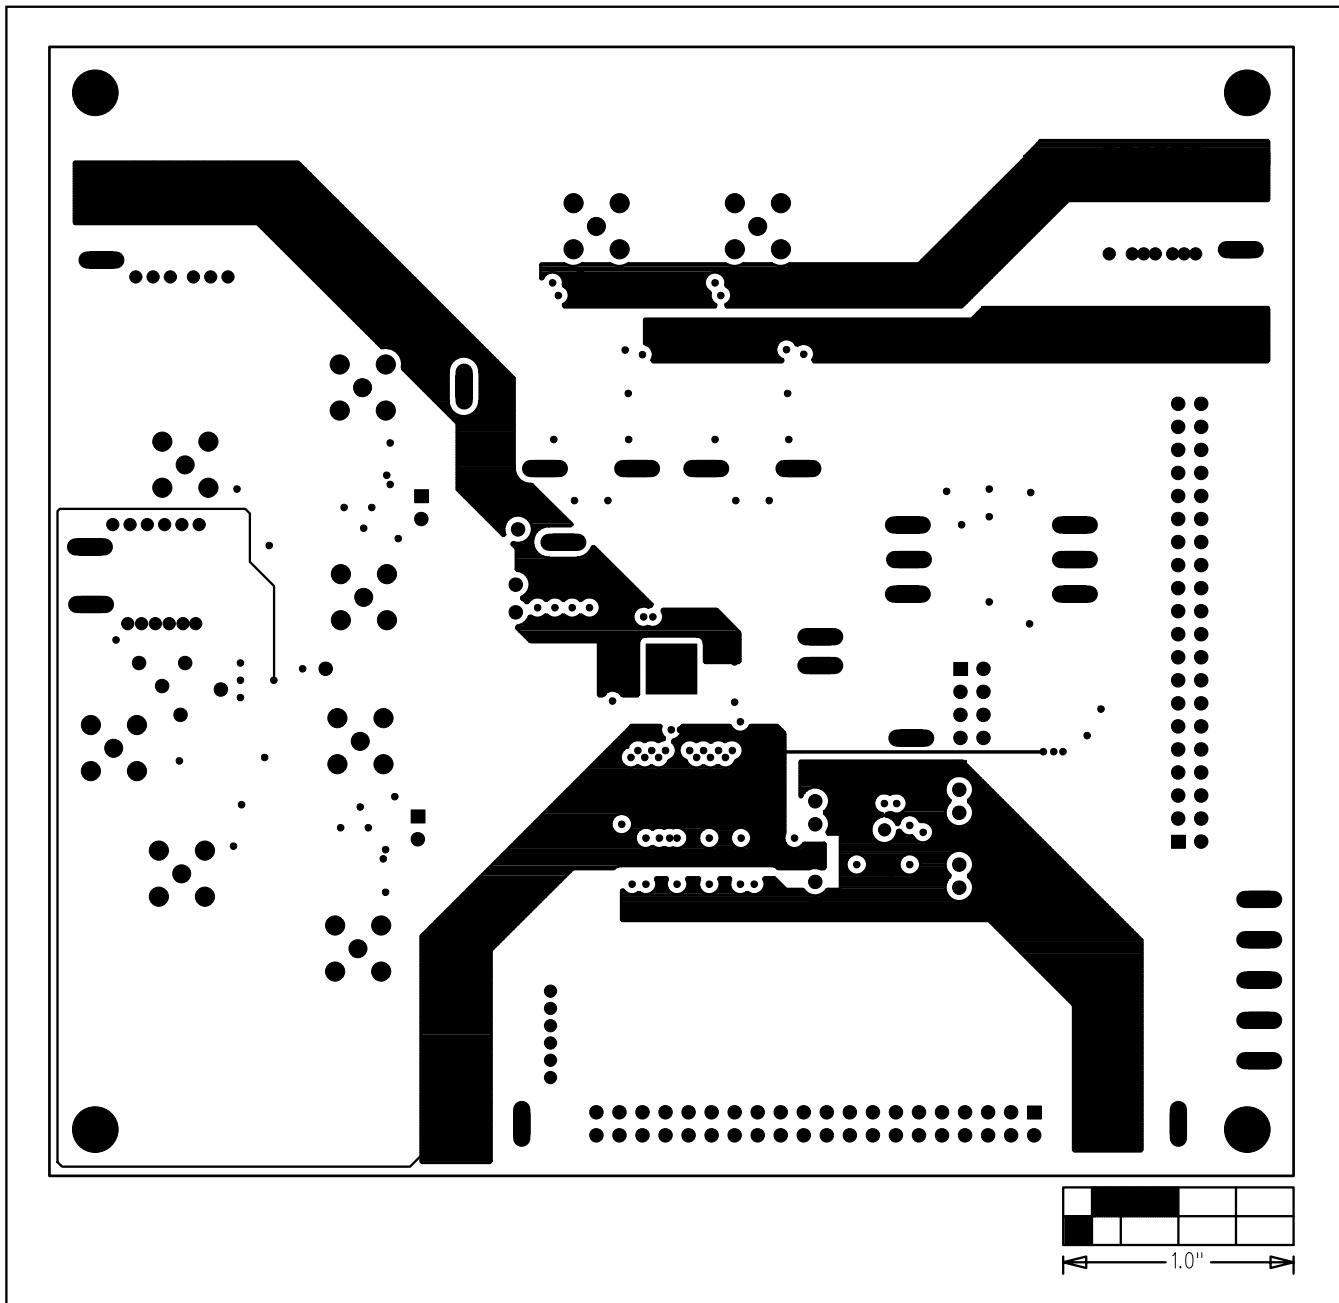


Figure 9. MAX19705–MAX19708 EV Kit PC Board Layout (Inner Layer 3)—Power Planes

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

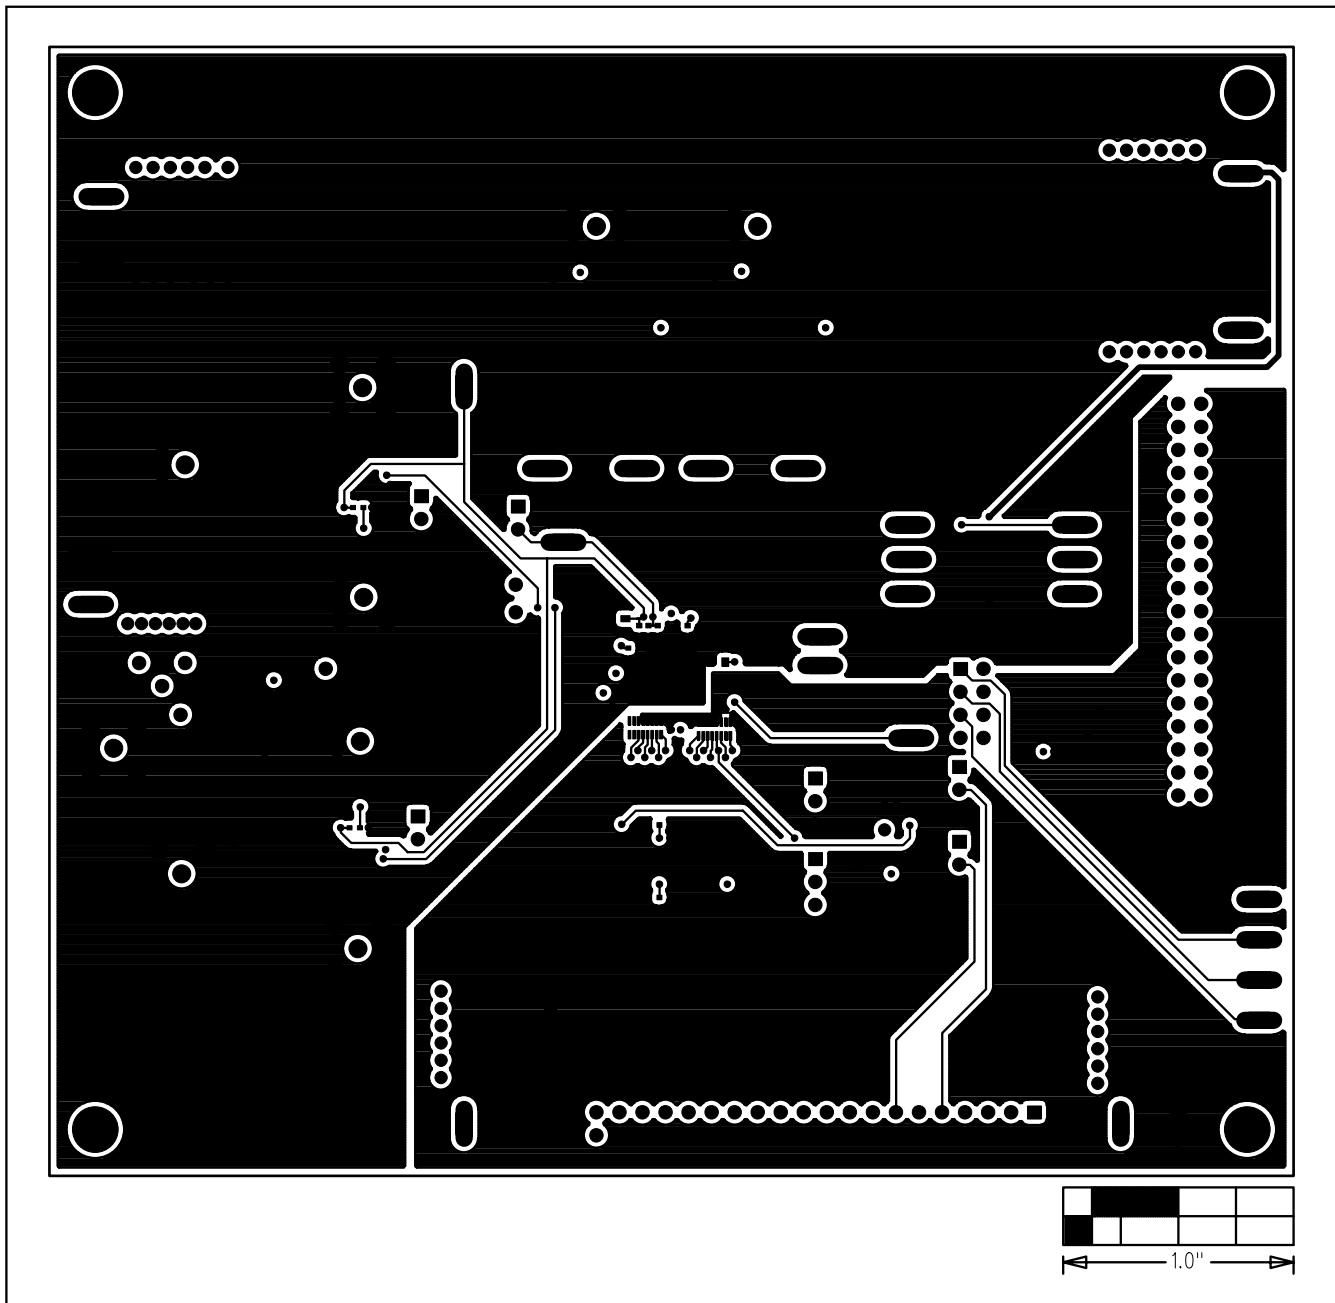


Figure 10. MAX19705–MAX19708 EV Kit PC Board Layout—Solder Side

MAX19705–MAX19708 Evaluation Kits/Evaluation Systems

Evaluate: MAX19705–MAX19708

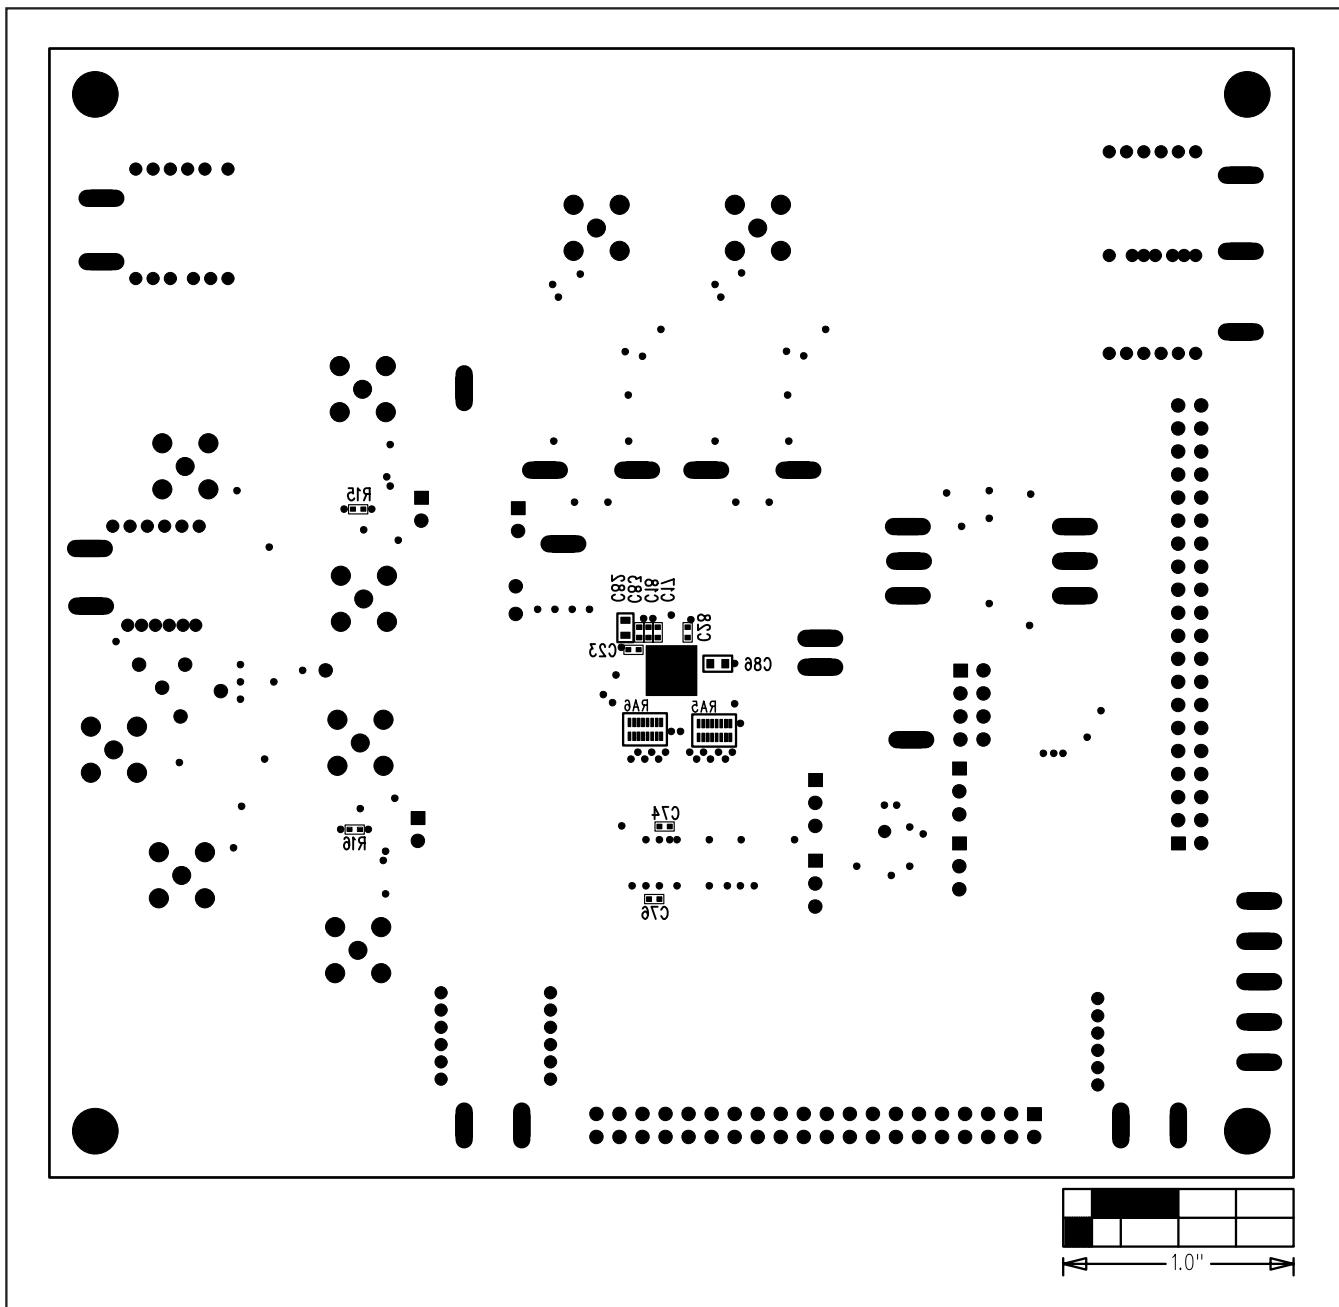


Figure 11. MAX19705–MAX19708 EV Kit Component Placement Guide—Solder Side

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

21