Keysight Technologies

Keysight B2980A Series

Femto/Picoammeter Electrometer/High Resistance Meter

Configuration Guide

The world's only graphical Picoammeter/Electrometer that can confidently measure down to 0.01 fA and up to 10 $P\Omega$





Table of Contents

Configure Your Keysight B2980A Series Femto/Picoammeter & Electrometer	03
Step 1. Select a B2980A Series model	03
Step 2. Add optional localized User's Guide	05
Step 3. Add optional productivity tools	05
Step 4. Choose optional accessories	06
Step 4. Choose optional accessories	07
Step 5. Choose calibration plan	10
Related Literature	10

Configure Your Keysight B2980A Series Femto/Picoammeter & Electrometer

Keysight B2980A Series consists of the following four models.

- B2981A Femto/Picoammeter, 0.01fA
- B2983A Femto/Picoammeter, 0.01fA, Battery
- B2985A Electrometer/High Resistance Meter, 0.01 fA, 1000V
- B2987A Electrometer/High Resistance Meter, 0.01 fA, 1000V, Battery

This configuration guide contains a step-by-step process to help you configure your Femto/Picoammeter & Electrometer and related accessories to meet your specific test requirements. For detailed specifications, refer to the B2980A Series Femto/Picoammeter & Electrometer data sheet (literature number 5991-4878EN).


Step 1. Select a B2980A Series model

First, you'll need to decide on either a picoammeter or an electrometer based on your required measurement parameters and either a battery model or not based on your requirement for realizing low noise measurement. This will then determine which B2980A model is best for you. Please note that the B2980A Series are not upgradable later on.

			Measurement	Parameters		Voltage	Battery
		Current	Voltage	Resistance	Charge	Source	Operation
Femto/	B2981A	√					
Picoammeter	B2983A	√					1
Electrometer	B2985A	√	√		√	√	
	B2987A	√	V	$\sqrt{}$	√	√	1
Additional infor	mation	0.01 fA to 20 mA	1 μV to 20 V	< 10 PΩ	1 fC to 2 μC	Up to ±1,000 V	

The following items are supplied as standard with each B2980A Series model:

	Standard furnished items			Number	of pieces	
	Description	Orderable parts number	B2981A	B2983A	B2985A	B2987A
1.	Quick startup poster/Quick reference	NA	1ea	1ea	1ea	1ea
2.	Product reference (manuals) CD-ROM	NA	1ea	1ea	1ea	1ea
3.	Keysight IO Libraries CD-ROM	NA	1ea	1ea	1ea	1ea
4.	Power cord	NA	1ea	1ea	1ea	1ea
5.	Earthing wire (2 m)	NA		1ea		1ea
6.	USB cable	8121-1696	1ea	1ea	1ea	1ea
7.	Ground connection cable, Banana to Screw-lug	B2981-61715	1ea	1ea	1ea	1ea
8.	Triax cable (1.5 m, 200 V)	16494A-001	1ea	1ea	1ea	1ea
9.	Open cap for Triax connector	N1417A	1ea	1ea	2ea	2ea
10.	Alligator clips (black & red)	U3606-60030			1ea	1ea
11.	High voltage test leads (black & red, 1000 V)	U8201-60001			1ea	1ea
12.	Thermocouple for B2985/B2987	N1423A			1ea	1ea
13.	Interlock connector head	NA			1ea	1ea
14.	Humidity probe connector head	NA			1ea	1ea

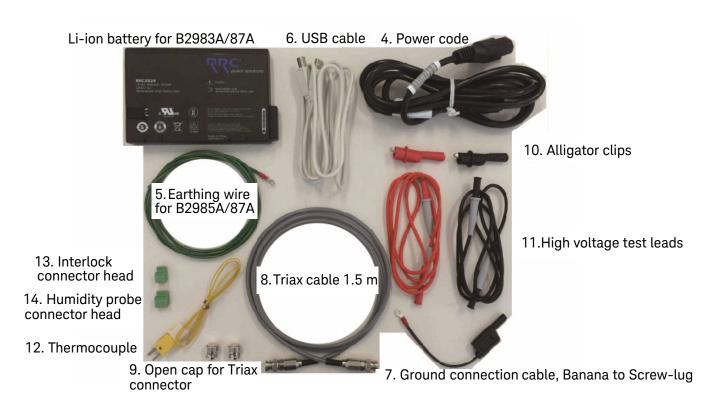

Step 2. Add optional localized User's Guide

The B2980A manuals (User's Guide etc.) are included in the CD-ROM shipped with the B2980A as PDF files. Printed manuals are not furnished. Order the following product number if required.

Description	Product Number	Additional Information
User Guide English for B2980 Series	N1403A-ABA	Printed copy
User Guide Japanese for B2980 Series	N1403A-ABJ	Printed copy

Step 3. Add optional productivity tools

There are several productivity tools that can help you startup your measurement quickly and maintain measurement integrity for your challenging sensitive measurements.

				Applicab	le Model	
Description	Product Number	Additional Information	B2981A	B2983A	B2985A	B2987A
Starter kit for B2985/ B2987	N1410A	The following items are included: N1415A Triax to alligator clip cable, 1ea N1414A High resistance measurement universal adapter, 1ea			J	J
Setup integrity checker for B2980 series, fixed perpetual license	N1420A	The Setup integrity checker measures and records the measurement setup's noise level, which enables you to isolate the cause of noise related to test setup elements including cables, adapters, shields, chambers, etc. Customer installable software license key	J	J	J	J
Evaluation kit for B2981/83/85/87A	N1299A-301	The following items are included: N1422A High value resistor box (100 GΩ),1ea N1415A Triax to alligator clip cable, 1ea N1411A Interlock cable, 4 pin terminal plug to 6 pin circular plug, 1.5 m, 1ea 16493B-001 Coaxial cable, 1.5 m, 1 ea N1254A-104 Triax (m) to BNC (f) adapter, outer shield open, 1 ea Carrying case, 1 ea Demonstration guide, 1 ea	J	J	J	J

Step 4. Choose optional accessories

Step 4-1. Choose a rack mount kit (optional)

			Applicable Model			
Description	Product Number	Additional Information	B2981A	B2983A	B2985A	B2987A
Rack Mount Kit	B2980A-1CM	Includes a rack mount flange and front handle kit. Fits standard 19-inch rack and occupies two units of rack space.	J	J	V	1

Step 4-2. Choose additional accessories for current measurements (optional)

You can add the following accessories based on your measurement requirements.

	Recommended	Connection	Simple Connection ¹			
Typical connection example	Current measur	ement connection, Grounded	Current measurement connection, Grounded			
	Shield	N1416A/B Triax bulkhead connector Banana-to-lug cable (furnished)	Shield	N1415A Triax to alligator Banana-to-lug cable (furnished)		
Recommended accessories	16494A-001	Low leakage Triax cable (200 V, 1.5 m, Furnished)	N1415A	Triax to alligator cable		
	16494A-002	Low leakage Triax cable (200 V, 3.0 m)	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)		
	16494A-004	Low leakage Triax cable (200 V, 4.0 m)				
	N1412A/B/C	Low leakage Triax cable (500 V, 1.5 m/3 m/6 m)				
	N1416A/B	Triax bulkhead connector (200 V/500 V)				
	B2981-61715	Ground connection cable, Banana to Screwlug (Furnished)	-			

^{1.} The "Recommended Connection" is preferred over the "Easy Connection" when making sensitive low-level measurements

Step 4. Choose optional accessories

Step 4-3. Choose additional accessories for resistance measurements (optional)

You can add the following accessories based on your measurement requirements.

Also, you can add the optional N1414A High resistance measurement universal adapter which enables you to simplify the cabling and monitor source voltage at high resistance measurements.

	Recommended Connec	ction		Simple Connection ¹
Typical connection example	Floating device mea	asurement	Floating device	measurement
ехапріє	Shield Rx N1416A/B Triax bulkhead connector	U8201-60001 High voltage test lead (furnished) 16494A, N1412A/B/C Triax cable Banana-to-lug cable (furnished)		U8201-60001 High voltage test lead (furnished) 415A ax to alligator Banana-to-lug cable (furnished)
Recommended accessories	16494A-001	Low leakage Triax cable (200 V, 1.5 m, Furnished)	N1415A	Triax to alligator cable
	16494A-002	Low leakage Triax cable (200 V, 3.0 m)	U8201-60001	High voltage test lead (Furnished)
	16494A-004	Low leakage Triax cable (200 V, 4.0 m)	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)
	N1412A/B/C	Low leakage Triax cable (500 V, 1.5 m/ 3 m/6 m)		
	N1416A/B	Triax bulkhead connector (200 V/500 V)		
	U8201-60001	High voltage test lead (Furnished)		
	N1414A	High resistance measurement universal adapter (Optional)		
	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)		

^{1.} The "Recommended Connection" is preferred over the "Easy Connection" when making sensitive low-level measurements

The B2985A/87A supports the Keysight's accessories for high resistance measurement. The N1413A High resistance meter fixture adapter is needed to use those accessories which you have. (Now the 16008B, 16117B/C, and 16339A are obsoleted.).

Description	Product Number	Additional Information
High resistance meter fixture adapter	N1413A	
Resistivity Cell	16008B	The N1413A High resistance meter fixture adapter is required to use
Low noise test lead, clip end	16117B	these accessories.
Low noise test lead, connector end, with bulkhead	16117C	N1413A High resistance meter fixture adapter
Component Test Fixture	16339A	To: 16008B 16117B/C 16339A To: interlock connector

Step 4. Choose optional accessories (continued)

Step 4-4. Choose additional accessories for voltage measurements (optional)

You can add the following accessories based on your measurement requirements.

	Recommended Co	onnection		Simple Connection ¹
Typical connection	Guarded measure	ment connection	Guarded measur	rement connection
Typical connection example Recommended accessories	N1416A/B Triax bulkhead cont Shield Vs Guard shield	N1412A/B/C Triax cable Banana-to-lug cable (furnished) High voltage test lead (furnished)	Shield Vs Guard shield	N1415A Triax to alligator Banana-to-lug cable (furnished) High voltage test lead (furnished)
	16494A-001	Low leakage Triax cable (200 V, 1.5 m, Furnished)	N1415A	Triax to alligator cable
	16494A-002	Low leakage Triax cable (200 V, 3.0 m)	U8201-60001	High voltage test lead (Furnished)
	16494A-004	Low leakage Triax cable (200 V, 4.0 m)	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)
	N1412A/B/C	Low leakage Triax cable (500 V, 1.5 m/3 m/6 m)		
	N1416A/B	Triax bulkhead connector (200 V/500 V)		
	U8201-60001	High voltage test lead (Furnished)		
	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)		

^{1.} The "Recommended Connection" is preferred over the "Easy Connection" when making sensitive low-level measurements.

Step 4-5. Choose additional accessories for charge measurements (optional)

You can add the following accessories based on your measurement requirements.

	Recommended Connection			Simple Connection ¹
Typical connection example	Guarded measure	ment connection	Guarded measure	ement connection
	Tri	16494A, N1412A/B/C Triax cable 1416A/B iax bulkhead onnector Banana-to-lug cable (furnished)	Shield	N1415A Triax to alligator Banana-to-lug cable (furnished)
Recommended accessories	16494A-001	Low leakage Triax cable (200 V, 1.5 m, Furnished)	N1415A	Triax to alligator cable
	16494A-002	Low leakage Triax cable (200 V, 3.0 m)	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)
	16494A-004	Low leakage Triax cable (200 V, 4.0 m)		
	N1412A/B/C	Low leakage Triax cable (500 V, 1.5 m/3 m/6 m)		
	N1416A/B	Triax bulkhead connector (200 V/500 V)		
	B2981-61715	Ground connection cable, Banana to Screw-lug (Furnished)		

^{1.} The "Recommended Connection" is preferred over the "Easy Connection" when making sensitive low-level measurements.

Step 4. Choose optional accessories (continued)

Step 4-6. Choose additional accessories (optional)

You can add the following optional accessories to meet your system requirement.

	Product			Applicab	le Model	
Description	Number	Additional Information	B2981A	B2983A	B2985A	B2987A
High value resistor box for N1299A-301 evaluation kit	N1422A		$\sqrt{}$	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$
Low leakage Triax cable, 200 V, 1.5 m	16494A-001		$\sqrt{}$	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$
Low leakage Triax cable, 200 V, 3.0 m	16494A-002	- - The B2981A/83A/85A/87A is furnished		√	√	√
Low leakage Triax cable, 200 V, 0.8 m	16494A-003	_ with one 16494A-001 cable.		√	√	√
Low leakage Triax cable, 200 V, 0.4 m	16494A-004	16494A triax cable supports up to 200 V		√	√	√
Low leakage Triax cable, 200 V, 4.0 m	16494A-005	and 1 A.		√	√	√
Low leakage Triax cable, 500 V, 1.5 m	N1412A	N1412A/B/C triax cable		√	√	√
Low leakage Triax cable, 500 V, 3.0 m	N1412B	supports up to 500 V and 1 A		√	√	√
Low leakage Triax cable, 500 V, 6.0 m	N1412C			√	√	√
Coax cable, 1.5 m	16493B-001	16493B coax cable supports up to 40 V	√	√	√	√
Coax cable, 3.0 m	16493B-002	and 200 mA.		√	1	√
BNC cable, 1.2 m	U2921A-100		√	√	1	√
Combo Test Lead Kit	U8201A		√	√	√	√
Triax bulkhead connector 200 V	N1416A		√	√	1	1
Triax bulkhead connector 500 V	N1416B		1	√	1	1
Open cap for triaxial connector	N1417A	The B2981A/83A is furnished with one N1417A open cap and the B2985A/87A is furnished with two N1417A open caps.	1	√	√ √	1
Triax (t) to BNC (m) adapter	N1254A-102	For current measurement, Floating DUT/sample	J	J	J	J
Triax (t) to BNC (m) adapter	N1254A-104	For current measurement, Grounded DUT/sample	J	J	J	J
Triax (t) to BNC (m) adapter	N1254A-105	For voltage measurement			J	J
Triaxial (f) to Triaxial (f) adapter, feedthrough	1250-2618		J	J	J	J

Step 4. Choose optional accessories (continued)

	Product		Applicable Model			
Description	Number	Additional Information	B2981A	B2983A	B2985A	B2987A
Interlock cable, 4 pin terminal plug to 6 pin circular plug, 1.5 m	N1411A	The B2985A/87A is furnished with one 4 pin			$\sqrt{}$	$\sqrt{}$
Interlock cable, 4 pin terminal plug to 6 pin circular plug, 3.0 m	N1411B	plug interlock connector head.			V	V
Lithium-ion battery pack for B2983/ B2987	N1418A	B2983A/87A is furnished with one N1418A battery.		1		V
Benchtop battery charger for N1418A	N1419A			√		
Thermocouple for B2985/B2987	N1423A	The B2985A/87A is furnished with one N1423A thermocouple.			$\sqrt{}$	$\sqrt{}$
RS-232 cable kit for Digital I/O connector	34398A		V	V	V	V

Step 5. Choose calibration plan

Step 5-1. Choose calibration length (optional)

Keysight factory calibration is provided as standard and free of additional charges.

Description	Product number	Additional Information
ANSI Z540-1-1994 Calibration	B2981A-A6J	Calibration certificate with measurement results available only at time
	B2983A-A6J	of purchase
	B2985A-A6J	
	B2987A-A6J	
Commercial Calibration Certificate with	B2981A-UK6	Calibration certificate with measurement results available only at time
Test Data	B2983A-UK6	of purchase
	B2985A-UK6	
	B2987A-UK6	
Calibration Assurance Plan -	R-50C-011-3	
Return to Service Center - 3 years		
Calibration Assurance Plan -	R-50C-011-5	
Return to Service Center - 5 years		

Related Literature

Publication Number	Publication Title
5991-4978EN	Keysight B2980A Series Femto/Picoammeter & Electrometer, Datasheet
5991-3878EN	Accessories for the Keysight B2900 Precision Instrument Family

Evolving Since 1939

Our unique combination of hardware, software, services, and people can help you reach your next breakthrough. We are unlocking the future of technology. From Hewlett-Packard to Agilent to Keysight.







myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

http://www.keysight.com/find/emt_product_registration

Register your products to get up-to-date product information and find warranty information.

KEYSIGHT SERVICES Accelerate Technology Adoption. Lower costs.

Keysight Services

www.keysight.com/find/service

Keysight Services can help from acquisition to renewal across your instrument's lifecycle. Our comprehensive service offerings—onestop calibration, repair, asset management, technology refresh, consulting, training and more—helps you improve product quality and lower costs.



Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to ten years of protection and no budgetary surprises to ensure your instruments are operating to specification, so you can rely on accurate measurements.

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

www.keysight.com/find/b2980a

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada (877) 894 4414 Brazil 55 11 3351 7010 Mexico 001 800 254 2440 United States (800) 829 4444

Asia Pacific

Australia 1 800 629 485 China 800 810 0189 800 938 693 Hong Kong 1 800 11 2626 India Japan 0120 (421) 345 080 769 0800 Korea Malaysia 1 800 888 848 Singapore 1 800 375 8100 0800 047 866 Taiwan Other AP Countries (65) 6375 8100

Europe & Middle East

For other unlisted countries: www.keysight.com/find/contactus (BP-9-7-17)

Opt. 3 (IT)

0800 0260637



United Kingdom

www.keysight.com/go/quality

Keysight Technologies, Inc. DEKRA Certified ISO 9001:2015 Quality Management System

