



Конт.	Цепь
17	0A - 10V
16	3A - 35V
15	11A - 35V
14	35 - 10V
13	14A - 8V
12	14B - 4V
11	15A - 2V
10	15A - 1V
9	135 - 0.8V
8	10A - 0.4V
7	6A - 0.2V
6	5.6 - 0.1V
5	4A - 0.08V
4	4.6 - 0.04V
3	3A - 0.02V
2	2A - 0.01V
1	12A - 27V

26 Корпус