

Keysight 3458A Multimeter

This product is a RoHS Compliance

(Applicable to serial number MY59350000/SG59350100 and above)

Assembly-Level
Repair Manual

Notices

Copyright Notice

© Keysight Technologies 2019-2020
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

03458-90018

Edition

Edition 1, March 2020

Printed in:

Printed in Malaysia

Published by:

Keysight Technologies
Bayan Lepas Free Industrial Zone,
11900 Penang, Malaysia

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

U.S. Government Rights

The Software is “commercial computer software,” as defined by Federal Acquisition Regulation (“FAR”) 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement (“DFARS”) 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS,” AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

KEYSIGHT TECHNOLOGIES WARRANTY STATEMENT

KEYSIGHT PRODUCT: 3458A multimeter

DURATION OF WARRANTY: 1 year

- 1** Keysight Technologies warrants Keysight hardware, accessories and supplies against defects in materials and workmanship for the period specified above. If Keysight receives notice of such defects during the warranty period, Keysight will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.
- 2** Keysight warrants that Keysight software will not fail to execute its programming instructions, for the period specified above, due to defects in material and workmanship when properly installed and used. If Keysight receives notice of such defects during the warranty period, Keysight will replace software media which does not execute its programming instructions due to such defects.
- 3** Keysight does not warrant that the operation of Keysight products will be interrupted or error free. If Keysight is unable, within a reasonable time, to repair or replace any product to a condition as warranted, customer will be entitled to a refund of the purchase price upon prompt return of the product.
- 4** Keysight products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
- 5** The warranty period begins on the date of delivery or on the date of installation if installed by Keysight. If customer schedules or delays Keysight installation more than 30 days after delivery, warranty begins on the 31st day from delivery.
- 6** Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by Keysight, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.
- 7** TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND KEYSIGHT SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.







- 8** Keysight will be liable for damage to tangible property per incident up to the greater of \$300,000 or the actual amount paid for the product that is the subject of the claim, and for damages for bodily injury or death, to the extent that all such damages are determined by a court of competent jurisdiction to have been directly caused by a defective Keysight product.
- 9** TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL KEYSIGHT OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND: THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

U.S. Government Restricted Rights

The Software and Documentation have been developed entirely at private expense. They are delivered and licensed as “commercial computer software” as defined in DFARS 252.227- 7013 (Oct 1988), DFARS 252.211-7015 (May 1991) or DFARS 252.227-7014 (Jun 1995), as a “commercial item” as defined in FAR 2.101(a), or as “Restricted computer software” as defined in FAR 52.227-19 (Jun 1987)(or any equivalent agency regulation or contract clause), whichever is applicable. You have only those rights provided for such Software and Documentation by the applicable FAR or DFARS clause or the Keysight standard software agreement for the product involved.

Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

| | | | |
|---|------------------------------------|---|--|
|  | Direct current (DC) |  | Alternating current (AC) |
|  | Caution, risk of electric shock |  | Caution, risk of danger (refer to this manual for specific Warning or Caution information) |
|  | Protective earth (ground) terminal |  | Frame or chassis (ground) terminal |

Safety Considerations

Read the information below before using this instrument.

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards for design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

WARNING

- **Ground the equipment:** For Safety Class 1 equipment (equipment having a protective earth terminal), an uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.
 - **DO NOT** operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.
 - **For continued protection** against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. **DO NOT** use repaired fuses or short-circuited fuse holders.
 - **Keep away from live circuits:** Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, **DO NOT** perform procedures involving cover or shield removal unless you are qualified to do so.
 - **DO NOT operate damaged equipment:** Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, **REMOVE POWER** and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to Keysight for service and repair to ensure that safety features are maintained.
-

WARNING

- **DO NOT service or adjust alone:** Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
 - **DO NOT substitute parts or modify equipment:** Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to Keysight for service and repair to ensure that safety features are maintained.
 - **Measuring high voltages is always hazardous:** ALL multimeter input terminals (both front and rear) must be considered hazardous whenever inputs greater than 42V (dc or peak) are connected to ANY input terminal.
 - **Permanent wiring of hazardous voltage** or sources capable of delivering greater than 150 VA should be labeled, fused, or in some other way protected against accidental bridging or equipment failure.
 - **DO NOT** leave measurement terminals energized when not in use.
 - **DO NOT** use the front/rear switch to multiplex hazardous signals between the front and rear terminals of the multimeter.
-

CAUTION

This is a sensitive measurement product by design. When subjected to continuously present electromagnetic phenomena, some degradation performance may occur.

Waste Electrical and Electronic Equipment (WEEE) Directive

This instrument complies with the WEEE Directive marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product category

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- www.keysight.com/find/3458A
(product-specific information and support, software and documentation updates)
- www.keysight.com/find/assist
(worldwide contact information for repair and service)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

Table of Contents

| | |
|--|----|
| Keysight Technologies WARRANTY STATEMENT | 3 |
| U.S. Government Restricted Rights | 5 |
| Safety Symbols | 6 |
| Safety Considerations | 7 |
| Waste Electrical and Electronic Equipment (WEEE) Directive | 9 |
| Product category | 9 |
| Sales and Technical Support | 9 |
| 1 General Information | |
| Introduction | 20 |
| Manual Description | 21 |
| Instrument Description | 22 |
| Safety Considerations | 23 |
| Instrument Identification | 24 |
| Tools and Equipment Required | 25 |
| Tools required | 25 |
| Test equipment required | 25 |
| 2 Operating Information | |
| Introduction | 28 |
| Before Applying Power | 29 |
| Applying Power | 31 |
| Power-on self-test | 31 |
| Power-on state | 31 |
| The display | 33 |
| Operating from the Front Panel | 35 |
| Making a measurement | 35 |
| Changing the measurement function | 36 |
| Autorange and manual ranging | 38 |
| Self-test | 39 |

| | |
|----------------------------------|----|
| Reading the error register | 40 |
| Resetting the multimeter | 41 |
| Using the configuration keys | 42 |
| Using the MENU keys | 47 |
| Query commands | 48 |
| Display control | 50 |
| Digits displayed | 52 |
| Recall | 53 |
| Operating from Remote | 54 |
| Input/Output statements | 54 |
| Reading the GPIB address | 54 |
| Changing the GPIB address | 55 |
| Sending a remote command | 55 |
| Getting data from the multimeter | 55 |
| The Local key | 56 |

3 Disassembly/Assembly Procedures and Parts List

| | |
|---|----|
| Introduction | 58 |
| Static Handling | 59 |
| Clean Handling | 60 |
| Printed Circuit Assembly Identification | 61 |
| Board part number | 61 |
| Engineering revision code | 61 |
| Covers Removal/Installation Procedures | 63 |
| Tools required | 63 |
| Covers removal procedure | 63 |
| Covers installation procedure | 68 |
| Assemblies Removal/Installation Procedures | 71 |
| Tools required | 71 |
| DC circuitry assembly removal/installation procedures | 72 |
| DC reference assembly removal/installation procedures | 77 |
| AC converter assembly removal/installation procedures | 80 |
| A/D converter assembly removal/installation procedures | 81 |
| Inguard power supply assembly removal/installation procedures | 84 |

| | |
|--|-----|
| Outguard controller assembly removal/installation procedures | 87 |
| Outguard power supply assembly removal/installation procedures | 88 |
| Display logic assembly removal/installation procedures | 93 |
| Front/Rear terminals switch removal/installation procedures | 101 |
| Replaceable Parts | 103 |
| Ordering information | 103 |
| Direct mail ordering | 103 |
| Telephone ordering | 103 |
| Replaceable parts list | 103 |
| 4 Assembly Level Troubleshooting | |
| Introduction | 110 |
| Test Equipment Required | 111 |
| 3458A Adjustments/Calibration | 112 |
| Assemblies Removal/Installation Procedures | 113 |
| 3458A Technical Description | 114 |
| General description | 114 |
| Technical description | 114 |
| Outguard section | 116 |
| Inguard section | 117 |
| Assembly Level Troubleshooting | 120 |
| 3458A failures | 120 |
| Power Supplies Troubleshooting | 133 |
| Outguard power supplies troubleshooting | 134 |
| Inguard power supplies troubleshooting | 135 |

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Figures

| | | |
|-------------|---|-----|
| Figure 2-1 | AC line voltage switch positions | 29 |
| Figure 2-2 | Power cords | 30 |
| Figure 2-3 | Front panel | 35 |
| Figure 2-4 | Standard 2-wire (plus guard) measurements | 36 |
| Figure 2-5 | Display test | 42 |
| Figure 3-1 | Right side handle removal/installation | 62 |
| Figure 3-2 | Remove/Install left side handle | 64 |
| Figure 3-3 | Remove/Install cover ground screws | 65 |
| Figure 3-4 | Remove/Install rear bezel | 66 |
| Figure 3-5 | Remove/Install bottom shield screw | 67 |
| Figure 3-6 | Remove/Install top shield screw | 69 |
| Figure 3-7 | Assembly locations (top of instrument) | 72 |
| Figure 3-8 | Assembly locations (bottom of instrument) | 73 |
| Figure 3-9 | DC circuitry assembly removal/installation | 76 |
| Figure 3-10 | AC converter assembly removal/installation | 79 |
| Figure 3-11 | A/D converter and inguard logic assembly | 82 |
| Figure 3-12 | Remove/Install transformer cable on inguard power supply | 83 |
| Figure 3-13 | Inguard power supply assembly removal/installation | 84 |
| Figure 3-14 | Outguard controller assembly removal/installation | 86 |
| Figure 3-15 | Outguard power supply assembly removal/installation | 90 |
| Figure 3-16 | Guard and power pushrods, and display cable locations | 92 |
| Figure 3-17 | Top trim and front/rear pushrod locations, and unlock panel | 94 |
| Figure 3-18 | Remove front panel assembly | 95 |
| Figure 3-19 | Remove/Install screws on front terminals | 97 |
| Figure 3-20 | Remove/Install display screw | 98 |
| Figure 3-21 | Front/Rear terminals switch assembly removal/installation | 100 |
| Figure 3-22 | Wire/Cable locations on front/rear terminals switch | 101 |
| Figure 4-1 | 3458A simplified block diagram | 115 |
| Figure 4-2 | Outguard power supply | 133 |

Figure 4-3 Inguard power supply 136

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Tables

| | | |
|-----------|--|-----|
| Table 2-1 | Line voltage limits | 29 |
| Table 2-2 | Power-on state | 31 |
| Table 2-3 | Display annunciators | 33 |
| Table 2-4 | Function keys | 37 |
| Table 2-5 | Configuration key functions | 43 |
| Table 3-1 | 3458A assemblies locations | 71 |
| Table 3-2 | 3458A replaceable parts | 104 |
| Table 4-1 | Adjustments/Calibration needed after assembly replacement | 112 |
| Table 4-2 | Self-test error messages and probable causes | 126 |

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

1 General Information

| | |
|------------------------------|----|
| Introduction | 20 |
| Manual Description | 21 |
| Instrument Description | 22 |
| Safety Considerations | 23 |
| Instrument Identification | 24 |
| Tools and Equipment Required | 24 |

Introduction

This manual has information to perform assembly level troubleshooting of the 3458A multimeter. Included are the removal/installation procedures of the instrument's printed circuit board assemblies, and a parts list. This manual is intended for use by service-trained personnel only. Operating and programming personnel should refer to the *3458A Multimeter User's Guide*.

Detailed operating and programming information is excluded from this manual. Only sufficient information for service purposes is included. For more detailed operating and programming information, refer to the *3458A Multimeter User's Guide*.

WARNING

The information in this manual is for the use of Service Trained Personnel only. To avoid electrical shock, do not perform any procedures in this manual or do any servicing to the 3458A, unless you are qualified to do so.

Manual Description

This manual is separated into the four following chapters.

Chapter 1 - General Information

Contains a brief description of the instrument and other general information.

Chapter 2 - Operating Information

Summarizes instrument operation geared for service-trained personnel. Only service related commands are summarized. For more operating information, refer to the *3458A Multimeter User's Guide*.

Chapter 3 - Disassembly/Assembly Procedures and Parts List

Contains the disassembly/assembly procedures for the 3458A Printed Circuit Board Assemblies. The section also has a mechanical parts list.

Chapter 4 - Assembly Level Troubleshooting

Contains a block diagram theory of operation and assembly level troubleshooting information.

Instrument Description

The 3458A is a high precision digital multimeter that can measure AC and DC volts, AC and DC current, AC+DC volts, AC+DC current, resistance, period, and frequency. It can also perform complex math calculations.

The multimeter has a maximum reading rate of 100,000 readings/sec. The maximum input voltage is 1000 V peak and the resolution is from 4 1/2 to 8 1/2 digits.

The 3458A has a digitizing function that converts continuous analog signals into discrete samples.

All instrument functions are selectable from the front panel or remotely over the General Purpose Interface Bus (GPIB).

Safety Considerations

The 3458A is a safety class 1 instrument provided with a protective earth terminal. The instrument and manuals should be reviewed for safety markings and instructions before operation. Refer to the Safety Summary preceding this section for appropriate safety instructions and markings covering the instrument.

Tools and Equipment Required

Tools required

You need the following tools for instrument covers removal and installation.

- 1** #1 Pozidriv screwdriver.
- 2** #TX15 Torx driver.
- 3** #TX10 Torx driver.

You need the following tools for the printed circuit board assemblies removal/installation procedures.

- 1** #1 Pozidriv screwdriver.
- 2** TX10 Torx driver.
- 3** 6 millimeter nut driver (for A/D Converter assembly only).
- 4** 7 millimeter nut driver (for Outguard Controller assembly only)
- 5** Small flat bladed screwdriver (for Display Logic assembly only)
- 6** Large screwdriver (e.g., #2 Pozidriv; for Display Logic assembly only)

Test equipment required

You need the following to troubleshoot the 3458A.

- 1** 4 1/2 digit digital multimeter that can measure +5 V, +18 V, and -18 V DC.
- 2** Computer with GPIB capability (for GPIB failures only).
- 3** Logic Probe or Oscilloscope than can measure a 1 μ S 5 V pulse (for Ext Out failures only).

2 Operating Information

| | |
|--------------------------------|----|
| Introduction | 26 |
| Before Applying Power | 27 |
| Applying Power | 29 |
| Operating from the Front Panel | 33 |
| Operating from Remote | 52 |

Introduction

This section summarizes the 3458A operating information. The *3458A Multimeter User's Guide* has the complete operating information.


Before Applying Power

- Make sure the line voltage selection switches on the multimeter's rear panel are set to match the local line voltage.
- Make sure the proper line fuse is installed.

If you have any questions concerning installation or power requirements, refer to [Chapter 1](#).


Table 2-1 Line voltage limits

| Nominal value (RMS) | Allowable limits (RMS) | Fuse | Fuse part # |
|---------------------|------------------------|---------------------|-------------|
| 100 VAC | 90 VAC to 110 VAC | 1.5A 250V NTD FE UL | 2110-0043 |
| 120 VAC | 108 VAC to 132 VAC | 1.5A 250V NTD FE UL | 2110-0043 |
| 220 VAC | 198 VAC to 242 VAC | 0.5A 250V TD FE UL | 2110-0202 |
| 240 VAC | 216 VAC to 250 VAC | 0.5A 250V TD FE UL | 2110-0202 |

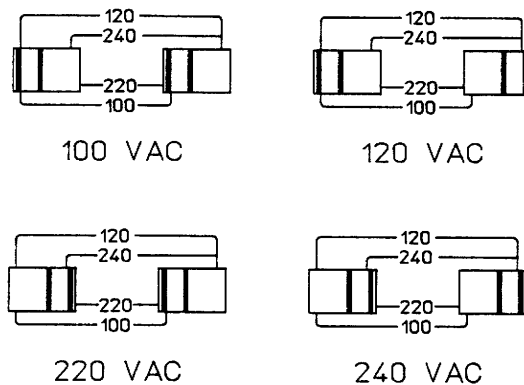

0ME10134580PDF.1.2

Figure 2-1 AC line voltage switch positions

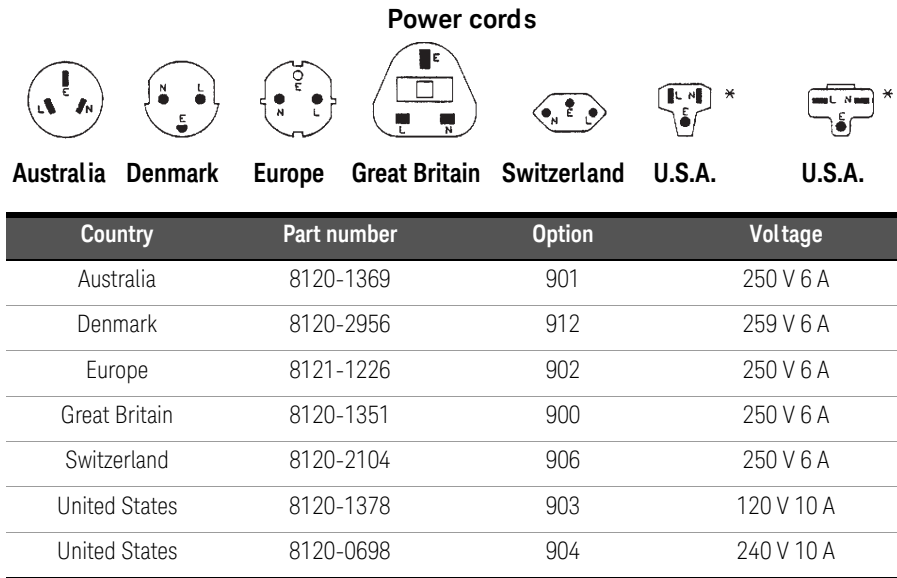

Power cords supplied by Keysight have polarities matched to the power input socket on the instrument.

NOTE: Plugs are viewed from connector and shape of molded plug may vary within country.

*CSA certification includes only these power cords.

Figure 2-2 Power cords

Applying Power

To turn on the multimeter, depress the front panel **Power** switch. If the multimeter does not appear to turn on, verify that the multimeter is connected to line power. If line power is not the problem, remove the power cord and check the line power fuse and the line voltage selection switch settings.

Power-on self-test

When power is applied, the multimeter performs a limited power-on self-test. This test verifies that the multimeter is operating but does not necessarily verify that measurements will be accurate.

Power-on state

When the power-on self-test is finished, the multimeter beeps once, automatically triggers, automatically selects the range, and performs DC voltage measurements. Also, the multimeter has set many of its commands to predefined power-on values as shown in [Table 2-2](#). This is called the power-on state.

Table 2-2 Power-on state

| Command | Description |
|-------------------|--|
| ACBAND 20, 2E6 | AC bandwidth 20 Hz - 2 MHz |
| AZERO ON | Autozero enabled |
| DCV AUTO | DC voltage, autorange |
| DEFEAT OFF | Defeat disabled |
| DELAY -1 | Default delay |
| DISP ON | Display enabled |
| EMASK 32767 | Enable all error conditions |
| END OFF | Disable GPIB EOI function |
| EXTOUT ICOMP, NEG | Input complete EXTOUT signal, negative pulse |
| FIXEDZ OFF | Disable fixed input resistance |
| FSOURCE ACV | Frequency and period source is AC voltage |

Table 2-2 Power-on state (continued)

| Command | Description |
|-------------------|---|
| INBUF OFF | Disable input buffer |
| LEVEL 0, AC | Level trigger at 0%, AC-coupled |
| LFILTER OFF | Level filter disabled |
| LFREQ 50 or 60 | Measured line frequency rounded to 50 or 60 Hz |
| LOCK OFF | Keyboard enabled |
| MATH OFF | Disable real-time math |
| MEM OFF | Disable reading memory (last memory operation = FIFO) |
| MFORMAT SREAL | Single real reading memory format |
| MMATH OFF | Disable post-process math |
| NDIG 7 | Display 7.5 digits |
| NPLC 10 | 10 power line cycles of integration time |
| NRDGS 1, AUTO | 1 reading per trigger, auto sample event |
| OCOMP OFF | Disable offset compensated resistance |
| OFORMAT ASCII | ASCII output format |
| QFORMAT NORM | Normal query format |
| RATIO OFF | Disable ratio measurements |
| RQS 0 (or 8) | 0 disables status register conditions (if power-on SRQ was on when power was removed, value = 8). |
| SETACV ANA | Analog AC voltage mode |
| SLOPE POS | Positive slope for level triggering |
| SSRC LEVEL, AUTO | Level sync source event, auto synchronous AC voltage |
| SWEEP IOOE-9,1024 | Sample interval 100 nanoseconds, 1024 samples |
| TARM AUTO | Auto trigger arm event |
| TBUFF OFF | Disable external trigger buffering |
| TIMER 1 | 1 second timer interval |
| TRIG AUTO | Auto trigger event |

Table 2-2 Power-on state (continued)

| Command | Description |
|---|-------------|
| All math registers set to 0 except: | |
| DEGREE = 20 REF = 1 SCALE = 1 RES = 50 PERC = 1 | |

The display

In the power-on state, the display is continuously updated with each new DC voltage reading. Along the bottom of the display are a series of annunciators. These annunciators alert you to a variety of conditions. For example, the **SMPL** annunciator flashes whenever the multimeter has completed a reading. [Table 2-3](#) describes the meaning of each display annunciator.

Table 2-3 Display annunciators

| Display annunciator | Description |
|---------------------|--|
| SMPL | Flashes whenever a reading is completed |
| REM | The multimeter is in the GPIB remote mode |
| SRQ | The multimeter has generated a GPIB service request |
| TALK | The multimeter is addressed to talk on GPIB |
| LSTN | The multimeter is addressed to listen on GPIB |
| AZERO OFF | Autozero is disabled |
| MRNG | Autorange is disabled (the multimeter is using a fixed range) |
| MATH | One or two real-time or post-process math operations enabled |
| ERR | An error has been detected |
| SHIFT | The shift key has been pressed |
| MOREINFO | More information concerning the present configuration is available (use the right arrow key to view the information) |

NOTE

If the **ERR** annunciator is illuminated at this point, an error was detected during or after the power-on self-test. You will learn how to determine the error later in this chapter in [Reading the error register](#).

Operating from the Front Panel

This section shows you how to make a simple DC voltage measurement, how to use the various front panel keys, and describes the multimeter functions important to front panel operation. [Figure 2-3](#) shows the multimeter's front panel features.

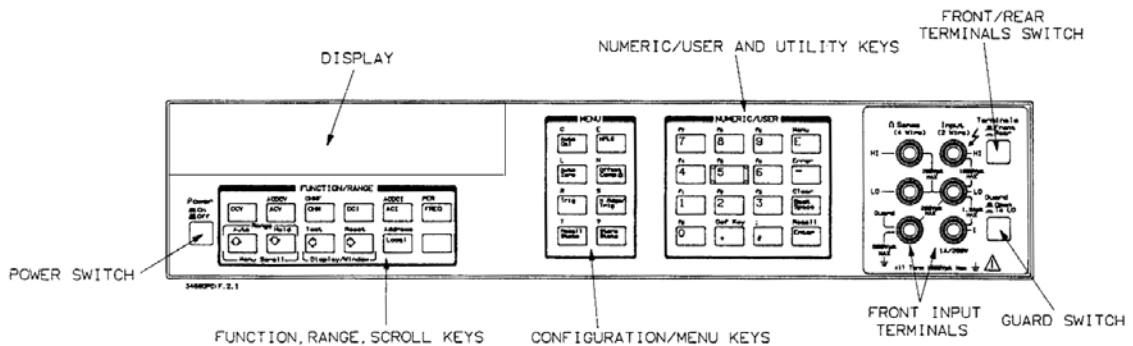


Figure 2-3 Front panel

Making a measurement

In the power-on state, DC voltage measurements are selected and the multimeter automatically triggers and selects the range. In the power-on state, you can make DC voltage measurements simply by connecting a DC voltage to the input terminals as shown in [Figure 2-4](#). The connections shown in [Figure 2-4](#) also apply for AC voltage, 2-wire resistance, AC+DC voltage, digitizing, and frequency or period measurements from a voltage input source. Refer to [Chapter 3](#) for a CAUTION concerning the multimeter's maximum input voltage and current.

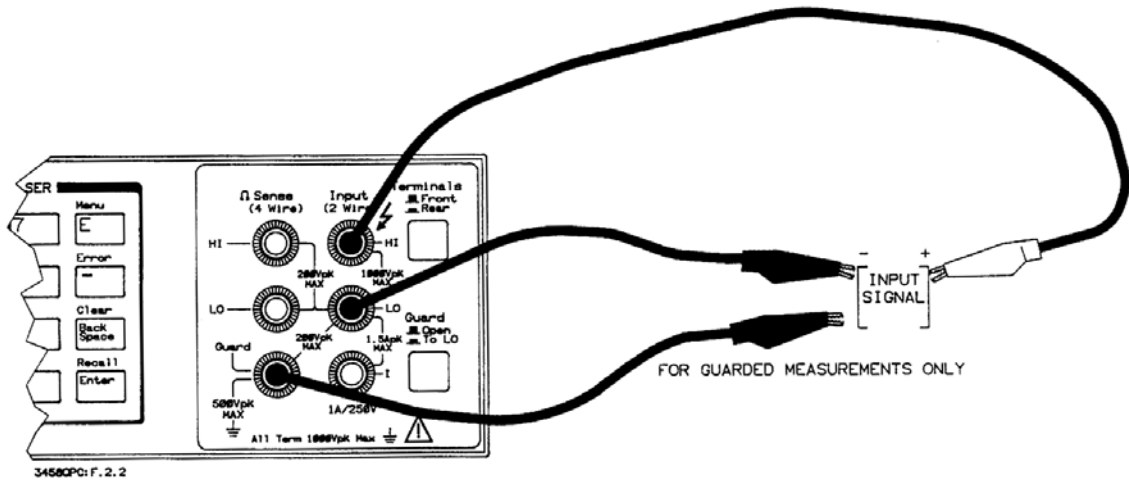
















Figure 2-4 Standard 2-wire (plus guard) measurements

Changing the measurement function

The row of keys located directly under the display (**FUNCTION** keys) select the multimeter's standard measurement functions. [Table 2-4](#) shows the **FUNCTION** keys and the measurement function selected by each.

Table 2-4 Function keys

| Key | Description |
|---|--------------------------------|
|  | DC voltage measurements |
|  | AC voltage measurements |
|  | 2-wire resistance measurements |
|  | DC current measurements |
|  | AC current measurements |
|  | Frequency measurements |
|   | AC+DC voltage measurements |
|   | 4-wire resistance measurements |
|   | AC+DC current measurements |
|   | Period measurements |

In addition to the functions selected by the **FUNCTION** keys, the multimeter can perform direct-sampled or sub-sampled digitizing, ratio measurements, and AC or AC+DC voltage measurements using the synchronous or random measurement methods. These functions can be selected from the front panel by accessing the appropriate command(s) using the alphabetic menu keys (these keys are discussed later in this section under [Using the MENU keys](#)).

Autorange and manual ranging

In the power-on state, the multimeter automatically selects the appropriate measurement range. This is called autorange. In many cases, you will probably want to continue using autorange. However, you have two other ranging choices: hold and manual ranging.

Hold

This choice allows you to shut off autoranging. To do this, let autorange choose a range and then
Press:



NOTE

When you press the blue shift key, the display's **SHIFT** annunciator illuminates. The shifted keyboard functions are printed in blue above the keys.

Notice the display's **MRNG** (manual range) annunciator is on. This annunciator is on whenever you are not using autorange.

Manual ranging

The second choice lets you manually select the range. When the multimeter is in the measurement mode (that is, the multimeter is making and displaying measurements or the display is showing OVL) you can change the range by pressing the up or down arrow keys. To go to a higher range.
Press:




By repeatedly pressing the up arrow key, you can increment up to the highest range. When you reach the highest range, pressing the up arrow key no longer changes the range. To go to a lower range.

Press:



By repeatedly pressing the down arrow key, you can decrement down to the lowest range. When you reach the lowest range, pressing the down arrow key no longer changes the range. To return to autoranging.

Press:



Self-test

When you applied power to the multimeter, it automatically performed a limited power-on self-test. Before you start making measurements, however, you may want to have more confidence that the multimeter is fully operational. This is the job of the self-test. The self-test performs a series of tests that check the multimeter's operability and accuracy.

NOTE

Always disconnect any input signals before you run self-test. If you leave an input signal connected to the multimeter, it cause a self-test failure.

The self-test takes over 50 seconds. To run self-test.

Press:



If the self-test passed, the display shows:

SELFTEST PASSED

When self-test passes, you have a high confidence that the multimeter is operational and, assuming proper calibration and autocalibration, that measurements will be accurate.

If any of the tests failed, the **ERR** annunciator illuminates and the display shows:

SELFTEST FAILED

If the self-test failed, one or more error conditions have been detected. Refer to the next section [Reading the error register](#).

Reading the error register

Whenever the display's **ERR** annunciator is illuminated, one or more errors have been detected. A record of hardware errors is stored in the auxiliary error register. A record of programming and syntax errors is stored in the error register. To read the error record(s).

Press:



The lowest numbered error and a description of the error is displayed. For example, a possible error message is:

**209, "HARDWARE FAILURE—
INTERNAL OVERLOAD: 101"**

Use the right arrow key to view the entire message. When the error message has a 100-series numeric prefix (e.g., 105), it indicates a programming or syntax error. A 200-series prefix (e.g., 209) indicates a hardware error.

NOTE

When you get a hardware error (200-series prefix), run the self-test again. If you repeatedly get the error, the multimeter may need repair.

If the **ERR** annunciator is still illuminated, more errors have been recorded. Repeat the above key sequence until all errors have been read and the **ERR** annunciator is

no longer illuminated. When you have read all the errors, the error annunciator goes off. If you try to read another error, the display shows:

0, "NO ERROR"

You do not have to run self-test to get an error. The multimeter detects errors that occur while entering data, when changing functions or ranges, and so on. The multimeter beeps whenever it detects an error.

Whenever you want to clear information (such as an error description) from the display and return it to displaying measurements.

Press:



NOTE

You can also clear the display by repeatedly pressing the **Back Space** key (unshifted).

Resetting the multimeter

Many times during operation, you may wish to return to the power-on state. The front panel **Reset** key returns you to the power-on state without having to cycle the multimeter's power. To reset the multimeter.

Press:



The multimeter begins the reset process with a display test which illuminates all display elements including the annunciators as shown in [Figure 2-5](#). (By holding down the **Reset** key, the multimeter continuously performs its display test).

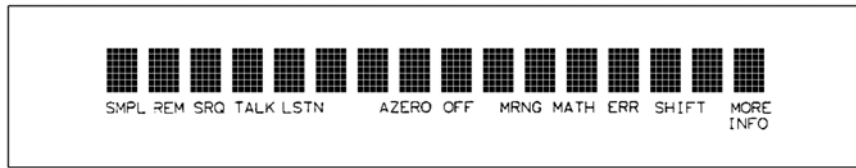


Figure 2-5 Display test









CAUTION

Pressing the shifted front panel **Reset** key performs the power-on sequence which has the same effect as cycling the multimeter's power. This destroys any stored reading and compressed subprograms, sets the power-on SRQ bit in the status register (these functions are discussed later in this manual), resets the A/D Converter reference frequency and performs the power-on self test. Executing the RESET command from the alphabetic command menu (**MENU** keys) returns the multimeter to the power-on state but does not perform the power-on sequence. The **MENU** keys are discussed later in this chapter.

Using the configuration keys

The configuration keys (unshifted **MENU** keys) let you rapidly access the most frequently used multimeter features. [Table 2-5](#) shows each key, the corresponding multimeter command, and the function of each. (These functions are discussed in detail in [Chapter 3](#) and [Chapter 4](#).)

Table 2-5 Configuration key functions

| Key | Command | Description |
|---|---------|---|
|  | ACAL | Performs one or all autocal routines (It takes over 11 minutes to run all of the autocal routines. Never reset the multimeter to abort an autocal. Once you start an autocal you must complete it). |
|  | NPLC | Sets integration time in terms of power line cycles |
|  | AZERO | Enables or disables the autozero function |
|  | OCOMP | Enables or disables offset compensation for 2- or 4-wire resistance measurements |
|  | TRIG | Specifies the trigger event |
|  | NRDGS | Selects the number of readings per trigger event and the sample event |
|  | RSTATE | Recalls a previously stored state from memory |
|  | SSTATE | Stores the multimeter's present state in memory |

We will use the **Trig** key to demonstrate how to use the configuration keys.
Press:



The display shows:

TRIG 

This is the command header for the trigger command. Notice the multimeter automatically placed a space after the command header.

Selecting a parameter

For parameters that have a list of choices (non-numeric parameters), you can use the up and down arrow keys to review the choices.

Press:



The display shows:

TRIG LEVEL ■■

Press:



The display shows:

TRIG AUTO ■■

When using the up or down arrow keys, if you step past the last parameter choice, a wraparound occurs to the other end of the menu. Suppose you want to suspend triggering. Press the up or down arrow key until the display shows:

TRIG HOLD ■■

Press:



You have now changed the trigger event from auto (power-on state) to HOLD which causes the multimeter to stop taking readings. (Triggering is discussed in detail in [Chapter 4](#).)

Default values

Most parameters have a default value. A default value is the value selected when you execute a command but do not specify a value. For example, the default value for the trigger parameter is SGL.

Press:

Trig

TRIG ■■

Press:

Enter

Notice that the multimeter takes one reading and then stops (after the single trigger, the trigger event becomes HOLD regardless of the previously specified trigger event). You can also enter -1 to select the default value.

Press:

Enter - 1 Enter

The multimeter again takes a single reading and then stops.

Numeric parameters

Some commands use numeric parameters. A numeric parameter is the actual value used by the multimeter. We will use the **NPLC** configuration key to demonstrate numeric parameters.

Press:

NPLC

This display shows:

NPLC ■■

Notice that if you press the up or down arrow key, no parameter choice is displayed. This means there is no menu and you must enter a number. For example.

Press:



You have now selected 1 power line cycle of integration time for the A/D Converter. Integration time is the actual time that the A/D Converter measures the input signal. (Integration time is discussed in detail in [Chapter 3](#).)

Exponential parameters

You can also enter numeric parameters using exponential notation. For example. Press:



You have now selected 0.1 power line cycles of integration time. At this point, you should reset the multimeter to return the number of power line cycles to 10 by pressing:



Multiple parameters

Many commands have more than one parameter. (Multiple parameters are separated by commas.) We will use the NRDGS command, which has two parameters, as an example of a command with multiple parameters.

Press:




The display shows:



The first parameter in the NRDGS command is a numeric parameter that specifies the number of readings made per trigger event. For example, to specify 5 readings per trigger event.

Press:



The display shows:

NRDGS 5, ■■

The second parameter of the NRDGS command specifies the event that initiates each reading. Since this is not a numeric parameter, a menu is available for this parameter. Use the up or down arrow keys to cycle through the list of choices.

When the display shows:

NRDGS 5, AUTO ■■


Execute the command by pressing:



You have now selected five readings per trigger event. If you execute the TRIG SGL command, for example, the multimeter will take five readings and then stop. (The NRDGS command is discussed in detail in [Chapter 4](#).)

Using the MENU keys

In addition to the configuration keys, the multimeter has an alphabetic command menu that can be accessed using the shifted **MENU** keys labeled **C**, **E**, **L**, **N**, **R**, **S**, and **T**. Each of these letters corresponds to the area you will enter into the command menu. For example, to enter the menu with commands starting with T. Press:



The display shows:

TARM ■■■

You can now use the **Menu Scroll** keys (up or down arrow keys) to step through the menu in alphabetical order (down arrow key) or in reverse alphabetical order (up arrow key). For example, starting with the TARM display shown above, by pressing the down arrow key once, the display shows the next command in alphabetical order (TBUFF). (You can also press and hold the up or down arrow key to rapidly step through the menu.) Once you have found the desired command, you can press the **Enter** key to execute it immediately (using default parameter values if applicable). If you need to specify command parameter(s), with the command displayed, press the right arrow key or the comma key (or, if the first parameter is numeric, a numeric key). This selects the command and allows you to specify or select parameter(s) using the procedures described earlier in this section.

There are two alphabetic menus available: FULL and SHORT. You can select between these menus using the shifted **Menu** key. The specified menu choice is stored in continuous memory (not lost when power is removed). The FULL menu contains all commands except query commands that can be constructed by appending a question mark to a command (e.g., BEEP, BEEP?). (Query commands are discussed next.) The SHORT menu eliminates the GPIB bus-related commands, commands that are seldom used from the front panel, and any commands that have dedicated front panel keys (e.g., the **NPLC** key or the **Trig** key).

Query commands

There are a number of commands in the alphabetic command directory that end with a question mark. These commands are called query commands since each returns a response to a particular question. For example, access the LINE? query command from the command menu and press the **Enter** key. The multimeter responds to this query command by measuring and displaying the power line frequency. (Use the right arrow key to view the entire response.) As another example, access the TEMP? command from the command menu and press **Enter**. This command returns the multimeter's internal temperature in degrees Centigrade.

Standard queries

The FULL command menu contains the following standard query commands:

| | |
|---------|---------|
| AUXERR? | MCOUNT? |
| CAL? | MSIZE? |
| CALNUM? | OPT? |
| ERR? | REV? |
| ERRSTR? | SSPARM? |
| ID? | STB? |
| ISCALE? | TEMP? |
| LINE? | |

Additional queries

In addition to the queries listed above, you can create others by appending a question mark to any command that can be used to program the multimeter. For example, the AZERO command (**Auto Zero** configuration key) enables or disables the autozero function. You can determine the present autozero mode by appending a question mark to the AZERO command. To do this, Press:



The multimeter responds by displaying the present autozero mode (power-on mode = ON). (Notice that this command is immediately executed; you do not have to press the **Enter** key.)

NOTE

The QFORMAT command can be used to specify whether query responses will be numeric, alpha, or a combination of alpha and numeric. Refer to the QFORMAT command, in Chapter 6 of the *3458A User's Guide*, for more information.


Display control

The shifted **Clear** key, the **Back Space** key, and the **Display/Window** keys (left and right arrow keys) allow you to control the display.

Clearing the display


Whenever you want to clear information (such as a query response) from the display.

Press:



Display editing

The **Back Space** key allows you to edit parts of a command string while entering the string or when the string is recalled (discussed later). For alpha parameters or command headers, pressing the **Back Space** key once erases the entire parameter or header. For commas, spaces, and numeric parameters, only one character is erased each time you press **Back Space**. For example, Press:



The display shows:

NRDGS 10, LINE ■■

By pressing the **Back Space** key once, the entire second parameter (LINE) is erased. The display shows:


NRDGS 10, ■■

Now by pressing **Back Space** once, the comma is erased. Pressing **Back Space** two more times erases both numeric characters (10). At this point, you can reenter the first parameter using the numeric keypad and the second parameter using the **Menu Scroll** keys. Press the **Enter** key to execute the edited command.

Viewing long displays

When entering commands containing more than 16 characters, the previously entered characters are scrolled off the left side of the display to make room for those being entered. The **Display/Window** keys (left and right arrow keys) allow you to view the entire line by scrolling it left or right. The **Display/Window** keys can also be used to view long strings such as error messages, the calibration string (CALSTR? command), and user-defined key definitions (discussed later). For example.

Press:



The display shows:



By pressing the left arrow key, you can view the first part of the command while scrolling the last part off the right side of the display. Now, by pressing the right arrow key, you can view the last part of the command and scroll the first part off the left side of the display.

NOTE

Think of the display as a window you can move to the left or right using the arrow keys.

MORE INFO display

In addition to scrolling the display left and right, the **Display/Window** keys allow you to view additional display information when the display's **MORE INFO** annunciator is illuminated. For example, access and execute the SETACV RNDM command from the alphabetic command menu. Now press the front panel **ACV** key. Notice that the multimeter's **MORE INFO** annunciator is illuminated. This means there is more information available than is being displayed.

Press:




The present AC voltage measurement method (SETACV RNDM) is displayed. At this point, reset the multimeter to return it to the power-on state by pressing:



Digits displayed

When the multimeter is displaying readings, you can vary the number of digits it displays. In the power-on state, the display is showing 7.5 digits although the multimeter is resolving 8.5 digits. To display all 8.5 digits.

Press:



NOTE

The display's leftmost digit (referred to as a 1/2 digit) is implied when you are specifying display digits.

The NDIG command only masks digits from the display. It does not affect readings sent to reading memory or transferred over the GPIB bus. Also, you cannot view more digits than are being resolved by the multimeter.

Recall

You can easily recall the last executed command without repeating the command entry process.

Press:



The display will show the last command executed. (You cannot recall commands that are executed immediately such as **Reset** or **DCV**, or any command that contained the calibration security code.) By repeating the above keystrokes, you can recall previously executed commands. After recalling the desired command, you can modify it (see [Display editing](#) earlier in this section) and execute it by pressing **Enter**.

Operating from Remote

This section shows you the fundamentals of operating the multimeter from remote. This includes reading and changing the GPIB address, sending a command to the multimeter, and retrieving data from the multimeter.

Input/Output statements

The statements used to operate the multimeter from remote depend on the computer and its language. In particular, you need to know the statements the computer uses to input and output information. For example, the input statements for the Hewlett-Packard Series 200/300 BASIC language are:

ENTER or **TRANSFER**

The output statement is:

OUTPUT

Read your computer manuals to find out which statements you need to use. The examples in this manual use Hewlett-Packard Series 200/300 BASIC language.

Reading the GPIB address

Before you can operate the multimeter from remote, you need to know its GPIB address (factory setting = 22). To check the address.

Press:



A typical display is:

ADDRESS 22 ■■■


The displayed response is the device address. When sending a remote command, you append this address to the GPIB interface's select code (normally 7). For example, if the select code is 7 and the device address is 22, the combination is 722.

Changing the GPIB address

Every device on the GPIB bus must have a unique address. If you need to change the multimeter's address, access the ADDRESS command from the command menu (**MENU** keys), with the display showing:

ADDRESS 

You can enter the new address. For example.
Press:



You have now changed the address to 15. If you want to change the address back to 22, repeat the above procedure (or use the **Recall** key) and specify 22 instead of 15.

Sending a remote command

To send the multimeter a remote command, combine the computer's output statement with the GPIB select code, the device address, and finally, the multimeter command. For example, to make the multimeter beep, send:

OUTPUT 722; "BEEP"

Notice the display's **REM** and **LSTN** annunciators are illuminated. This means the multimeter is in the remote mode and has been addressed to listen (receive a command).

Getting data from the multimeter

The multimeter is capable of outputting readings and responses to query commands. As an example, have the multimeter generate a response to a query command by sending:

OUTPUT 722;"ID?"

When you send a query from remote, the multimeter does not display the response as it did when you executed the command from its front panel. Instead, the multimeter sends the response to its output buffer. The output buffer is a

register that holds a query response or a single reading until it is read by the computer or replaced by new information. Use the computer's input statement to get the response from the output buffer. For example, the following program reads the response (3458A) and prints it.

```
10 ENTER 722;A$
20 PRINT A$
30 END
```

The same technique allows you to get readings from the multimeter. Whenever the multimeter is making measurements and you have not enabled reading memory (reading memory is discussed in [Chapter 4](#)), you can get a reading by running the following program.

```
10 ENTER 722;A
20 PRINT A
30 END
```

The Local key

When you press a key on the multimeter's keyboard while operating from remote, the multimeter does not respond. This is because the multimeter is in the remote mode (as indicated by the display's **REM** annunciator) and is ignoring all but the **Local** key. To return the multimeter to local mode. Press:



3 Disassembly/Assembly Procedures and Parts List

| | |
|--|-----|
| Introduction | 56 |
| Static Handling | 57 |
| Clean Handling | 58 |
| Printed Circuit Assembly Identification | 59 |
| Covers Removal/Installation Procedures | 61 |
| Assemblies Removal/Installation Procedures | 69 |
| Replaceable Parts | 101 |

Introduction

This section contains the 3458A Covers and Printed Circuit Assemblies Disassembly/Assembly procedures. Also included is the 3458A Parts Lists and listings of printed circuit board assemblies.

WARNING

Only personnel with knowledge of electronic circuitry and an awareness with the hazards involved should remove and install any printed circuit board assemblies.

CAUTION

To prevent equipment circuit damage, always remove the ac line power cord before removing or replacing any assembly. To prevent electrostatic discharge (ESD) damage to ICs, always observe anti-static techniques when assemblies are handled or serviced.

Static Handling

Static electricity is a familiar phenomenon which, except for an occasional shock, doesn't seem very serious. However, it has been proven that in the electronics industry electrostatic discharge (ESD) is a major cause of component failure. In many cases, the component damaged may not immediately fail, causing low instrument reliability and future repairs. ESD damage can occur at static levels below human perception. It has also been shown that ESD can affect both passive and active devices.

The following guidelines are the minimum requirements for a static safe service environment.

- The work bench should be equipped with a conductive table mat. The mat should be grounded to earth ground through a 1 M ohm resistor. The mat should be equipped with at least one swivel connector for connecting wrist straps.
- All service and handling personnel should wear a conductive wrist strap in contact with bare skin. This strap should be connected to the swivel connector on the conductive table mat through a 1 M ohm resistor.
- All metal equipment at a workstation must be grounded. This includes soldering irons, solder removers, shelving, and equipment stands.
- Only one common ground should be provided at the workstation.
- The workstation should be kept free of nonconductors. No common plastics, polybags, cardboard, cigarette or candy wrappers should be allowed. There should not be rugs or carpet on the floor, shelving, or bench top.
- Only proper containers should be used for shipping, storing or transporting assemblies. This is required on any assembly shipped to Keysight Technologies for repair or replacement.

Clean Handling

Due to the accuracy of the 3458A, use the following clean handling techniques when removing/installing printed circuit board assemblies.

- Handle the assemblies only by their edges.
- Be sure to place them on a clean workbench away from dirty or dusty conditions.

Printed Circuit Assembly Identification

The printed circuit assemblies within the 3458A multimeter are identified by the part number of the printed circuit board and the engineering revision code (ERC). These two sequences of numbers are used to exactly identify the electrical characteristics of the printed circuit board. In any correspondence concerning a particular printed circuit board, it is important to accurately identify the board configuration. This is done by using the board part number, followed by the engineering revision code (ERC) on the board. For example:

03458-66505-2825

would identify a particular printed circuit board in the 3458A. The board part number is 03458-66505 and the ERC is 2825.

Board part number

The Keysight Technologies part number of a printed circuit board is etched on the board. This is a ten-digit number, separated by a hyphen into two groups of five digits. The first five digits identify the model number or accessory number of which the printed circuit board is a part. The last five digits are a unique part number identifying the printed circuit board.

Engineering revision code

On the Engineering Revision Code (ERC) label, the four-digit code is in the form of YYWW, where YY represents the last two digits of the year minus 60 and WW is the week code. For example, an Engineering Revision Code of 2825 would identify a change made in the 25th week of 1988.

The ERC number is updated whenever a change is made to the assembly. This change may be a printed circuit board revision, a component change, or a revised test and assembly procedure. The ERC should be checked against schematics, component locator diagrams, and parts lists to ensure compatibility. ERCs with values lower than those noted on the schematics, component locator diagrams, and parts lists are described in a backdating section. ERCs with a value higher than those noted will be covered by a manual change sheet, manual update, or manual revisions.

NOTE

The label numbers in Figure 3-1 to Figure 3-6 show the order of cover removal. Use reverse order for installation.

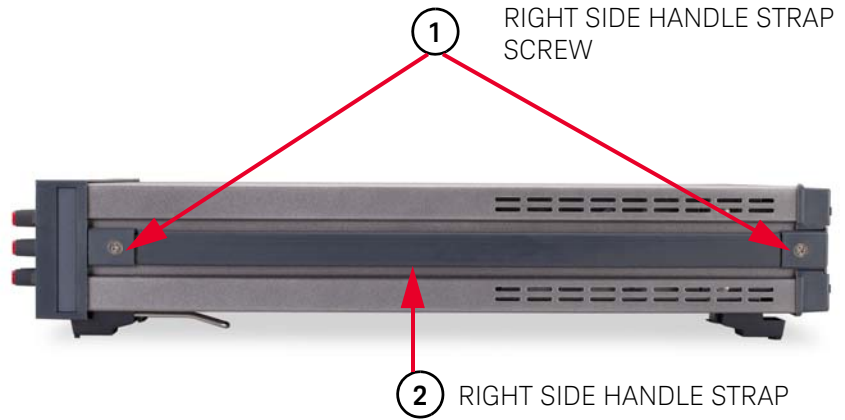


Figure 3-1 Right side handle removal/installation

Covers Removal/Installation Procedures

The following procedures show how to remove the top/bottom covers and shields on the 3458A. Removal of the covers and shields are required to replace the printed circuit board assemblies.

Tools required

You need:

- 1 #1 Pozidriv screwdriver
- 2 #TX15 Torx driver
- 3 #TX10 Torx driver

Covers removal procedure

Do the following:

- 1 Remove all connections to the 3458A.
- 2 Remove ac power from the 3458A.
- 3 Refer to [Figure 3-1](#). Turn the instrument so its right side (as seen from the front) faces you.
- 4 Use the #1 Pozidriv to remove the right side handle strap screws. Then remove the strap.
- 5 Refer to [Figure 3-2](#). Turn the instrument so its left side faces you.

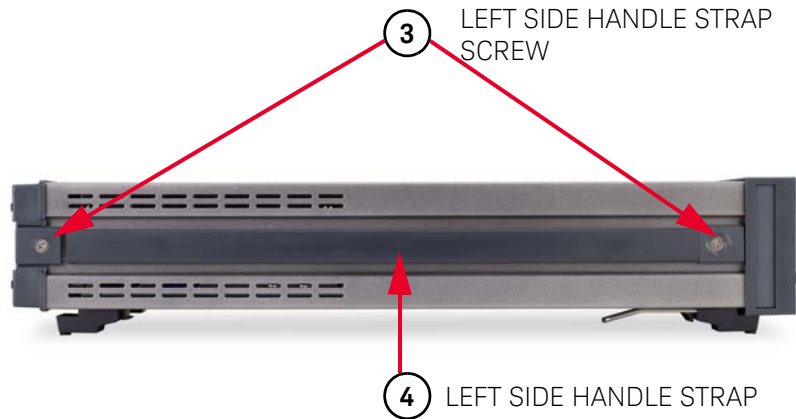


Figure 3-2 Remove/Install left side handle

- 6** Use the #1 Pozidriv to remove the left side handle strap screws. Then remove the strap.
- 7** Refer to [Figure 3-3](#). Use the #TX10 Torx driver to remove both or either the top and bottom cover ground screws, depending on which cover is to be removed.
- 8** Refer to [Figure 3-4](#). Turn the instrument so its rear faces you.
- 9** Use the #TX15 Torx driver to remove the four rear bezel screws. Then remove the rear bezel.
- 10** If you do not wish to remove the top cover, continue with step 12.
- 11** To remove the top cover, pull the cover toward the rear until it clears the front panel. Then slide it forward and away from the instrument.
- 12** If you do not wish to remove the bottom cover, continue with step 14.
- 13** Turn the 3458A over so its top sits on your workbench. To remove the bottom cover, pull the cover toward the rear until it clears the front panel. Then slide it forward and away from the instrument. Leave the instrument in its present position.
- 14** If you do not wish to remove the bottom shield, continue with step 16.

- 15** Refer to [Figure 3-5](#). Use the #TX10 Torx driver to remove the bottom shield screw. Then remove the shield. Pull the shield toward the rear of the instrument until the shield retainers line up with the slots in the shield. Lift the shield off.
- 16** If you do not wish to remove the top shield, continue with step 19.

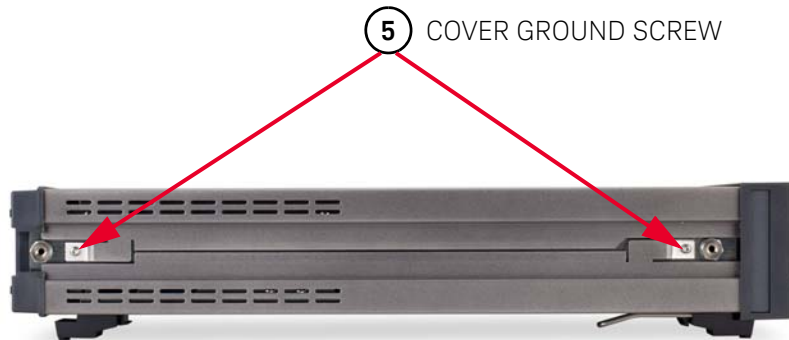


Figure 3-3 Remove/Install cover ground screws

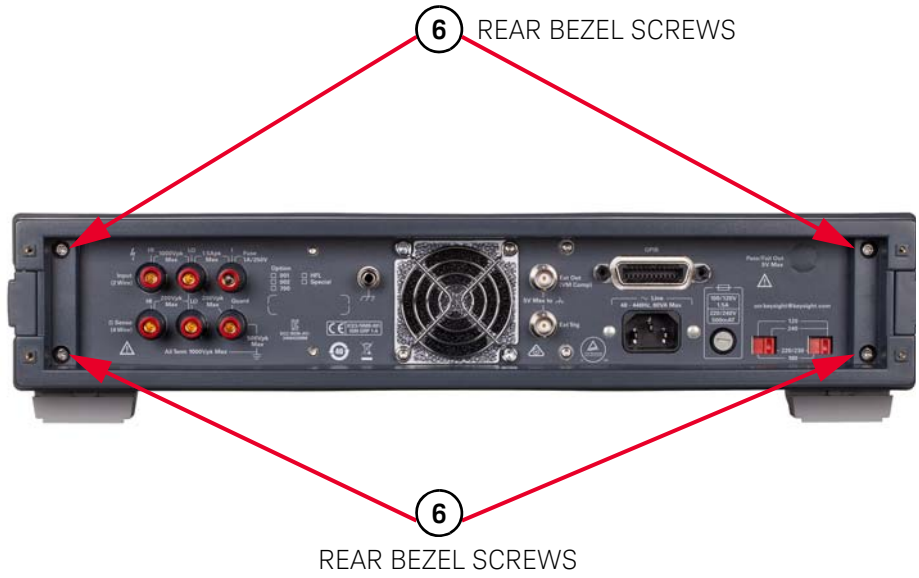


Figure 3-4 Remove/Install rear bezel

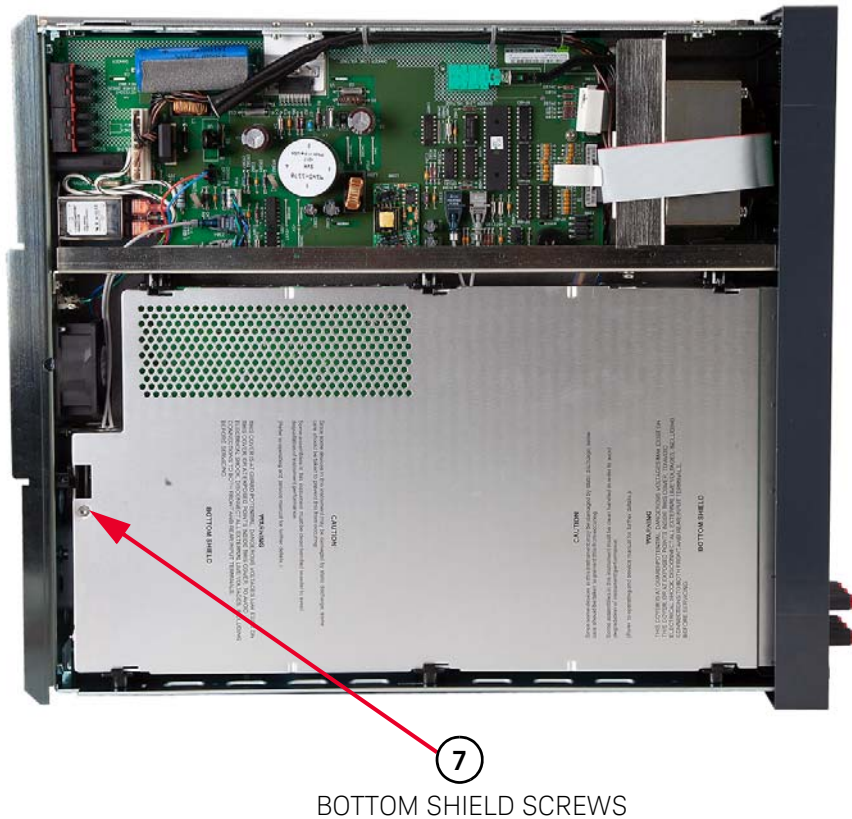


Figure 3-5 Remove/Install bottom shield screw

- 17** Refer to [Figure 3-6](#). Turn the instrument over so its bottom sits on your workbench.
- 18** Use the #TX10 Torx driver to remove the top shield screw. Then remove the shield. Pull the shield toward the rear of the instrument until the shield retainers line up with the slots in the shield. Lift the shield off.
- 19** Refer to the appropriate procedures in this section to remove the printed circuit board assembly.

Covers installation procedure

Do the following:

- 1** Remove all connections to the 3458A.
- 2** If installing the top shield is not required, continue with step 6.
- 3** Refer to **Figure 3-6**. Turn the instrument over so its bottom sits on your workbench.
- 4** Line up the slots on the top shield with the shield retainers. Then push the shield toward the front of the instrument until the shield screw hole lines up with the hole in the chassis. Use the #TX10 Torx driver to reinstall the shield screw.
- 5** If installing the bottom shield is not required, continue with step 9.
- 6** Refer to **Figure 3-5**. Turn the instrument over so its top sits on your workbench.

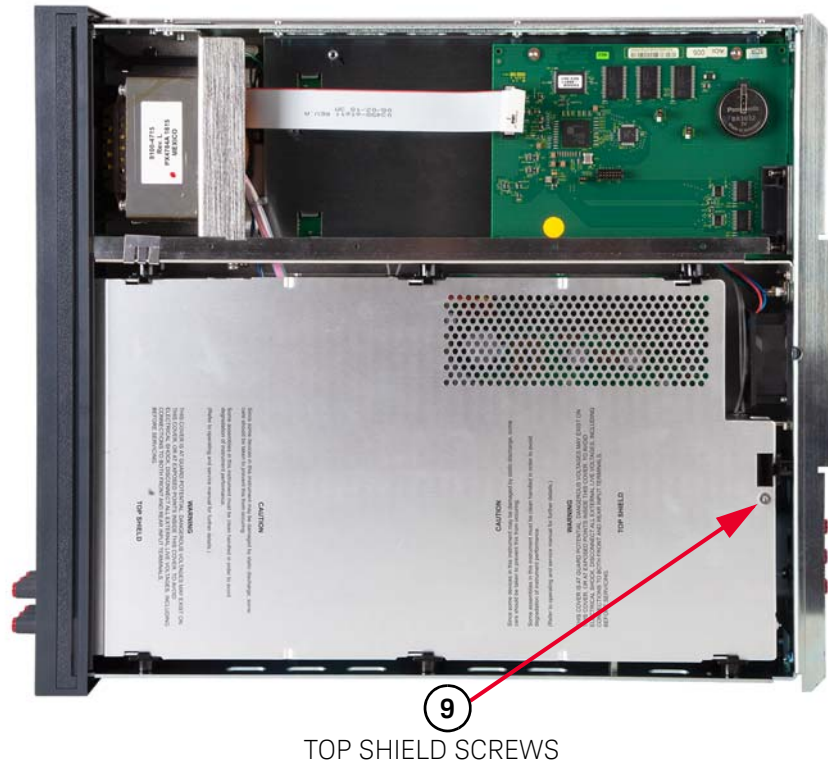


Figure 3-6 Remove/Install top shield screw

- 7 Remove ac power from the 3458A.
- 8 Line up the slots on the bottom shield with the shield retainers. Then push the shield toward the front of the instrument until the shield screw hole lines up with the screw hole in the chassis. Use the #TX10 Torx driver to reinstall the shield screw.
- 9 If installing the bottom cover is not required, continue with step 11.
- 10 Install the bottom cover by placing it over the chassis with the front of the cover just clearing the front panel. Then push the cover toward the front of the instrument into the front panel bezel.
- 11 If installing the top cover is not required, continue with step 14.

- 12 Turn the 3458A over so the bottom sits on your workbench.
- 13 Install the top cover by placing it over the chassis with the front of the cover just clearing the front panel. Then push the cover toward the front of the instrument into the front panel bezel.
- 14 Refer to [Figure 3-4](#). Turn the instrument so its rear faces you.
- 15 Reinstall the rear bezel. Use the #TX15 Torx driver to reinstall the four rear bezel screws.
- 16 Refer to [Figure 3-3](#). Turn the instrument so its left side faces you. Use the #TX10 Torx driver to reinstall the top and/or bottom cover ground screws.

WARNING

For safety purposes and proper operation, it is imperative that the cover grounding screws be reinstalled.

- 17 Refer to [Figure 3-2](#). Reinstall the left side handle strap. Use the #1 Pozidriv to reinstall the side handle strap screws.
- 18 Refer to [Figure 3-1](#). Turn the instrument so its right side faces you.
- 19 Reinstall the right side handle strap. Use the #1 Pozidriv to reinstall side handle strap screws.
- 20 Your instrument is now ready for use. Keysight Technologies suggests that after you apply power that you perform an automatic calibration on the instrument. To do this, use the “ACAL ALL” command.

Assemblies Removal/Installation Procedures

Table 3-1 lists all 3458A printed circuit board assemblies and assembly locations in the instrument. The assembly locations are also shown in installation procedure **Figure 3-7** and **Figure 3-8**.

Table 3-1 3458A assemblies locations

| Ref desig | Part number (RoHS) | Assembly description | Location in instrument |
|-----------|---------------------|---------------------------------|------------------------|
| A1 | 03458-66511 | DC Circuitry | Inguard/Top |
| A2 | 03458-66522 | AC Circuitry | Inguard/Bottom |
| A3 | 03458-66533 | A/D Converter and Inguard Logic | Inguard/Bottom |
| A4 | 03458-66514 | Inguard Power Supply | Inguard/Bottom |
| A5 | 03458-66675 | Outguard Controller | Outguard/Top |
| A6 | 03458-66526 | Outguard Power Supply | Outguard/Bottom |
| A7 | 03458-66537 | Display Logic | Front Panel |
| A9 | 03458-66559 | DC Reference | Inguard/Top |
| A9 | 03458-80009 | DC Reference (Opt 002) | Inguard/Top |
| A10 | 03458-66520 | Front/Rear Switch | Inguard/Top |

Tools required

You need:

- 1** #1 Pozidriv screwdriver
- 2** #TX15 Torx driver
- 3** #TX10 Torx driver
- 4** 7 millimeter nut driver (for Outguard Controller assembly only)
- 5** Small flat bladed screwdriver (for Display Logic assembly only)
- 6** Large screwdriver (e.g., #2 Pozidriv; for Display Logic assembly only)

DC circuitry assembly removal/installation procedures

The following procedures show how to remove and install the DC Circuitry Printed Circuit Board Assembly.

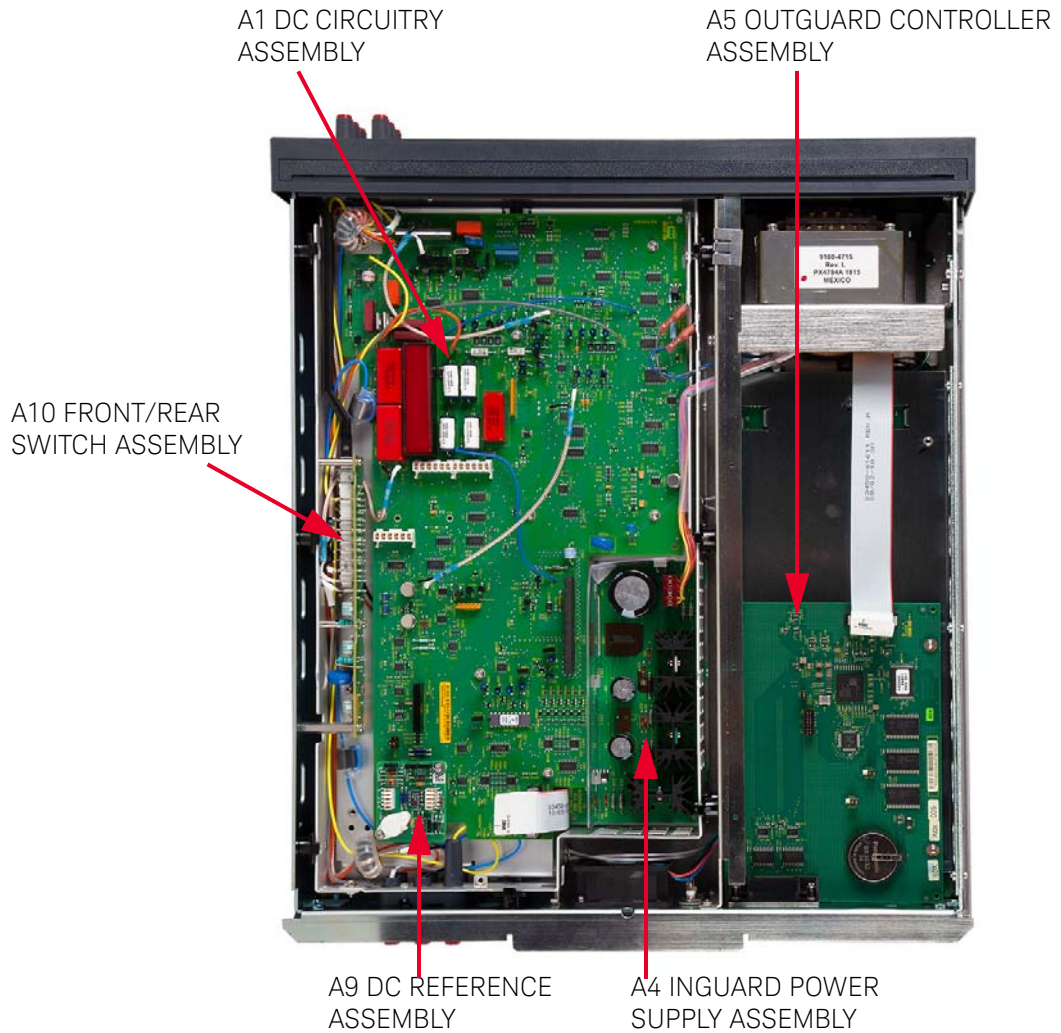


Figure 3-7 Assembly locations (top of instrument)

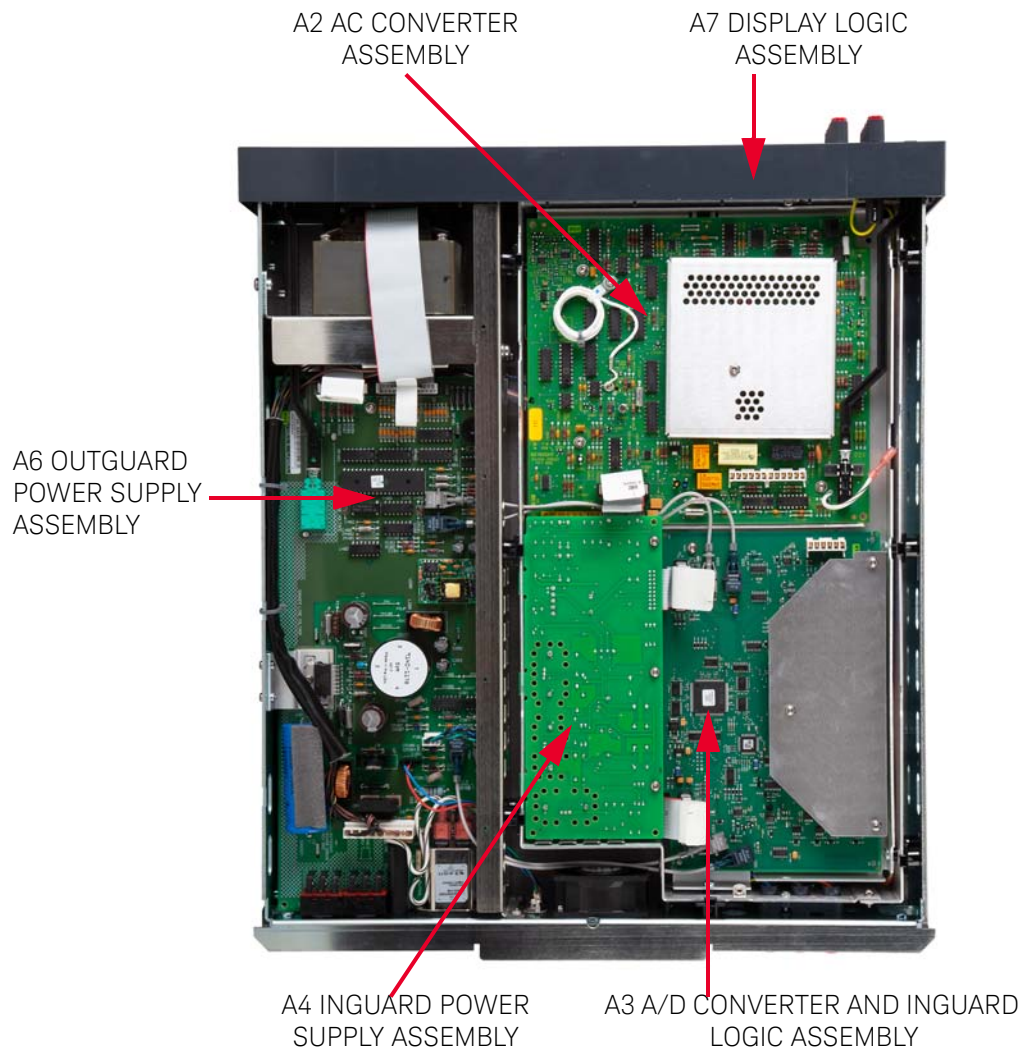


Figure 3-8 Assembly locations (bottom of instrument)

Refer to [Figure 3-9](#) for the following procedures.

Removal procedure

- 1** Use the **Covers removal procedure** in this section of the manual to remove the 3458A top cover and top shield. It is not necessary to remove the bottom cover and bottom shield.
- 2** Set the 3458A on your workbench with the top facing you.
- 3** Unplug the following wires and cables. Unless otherwise noted, all wires and cables are unplugged from the DC Circuitry assembly.
 - a** Blue wire from the metal Inguard shield. This wire is not plugged into the DC Circuitry assembly, but must be unplugged to remove the assembly. Move the wire out of the way.
 - b** Gray wire from the metal Inguard circuit ground. This wire is not plugged into the DC Circuitry assembly, but must be unplugged to remove the assembly. Move the wire out of the way.
 - c** Yellow wire from P202. Move the wire out of the way.
 - d** Orange wire from P7. Move the wire out of the way.
 - e** Gray wire from P6. Move the wire out of the way.
 - f** Black and white wires from P8 and P9, respectively. The black and white wires form a white cable. Move the cable out of the way.
 - g** Gray 20 pin cable from P3. Move the cable out of the way.
- 4** Use the #TX 10 Torx driver to remove the two screws from the DC Reference assembly.
- 5** Use the #TX10 Torx driver to remove the eight screws from the DC Circuitry assembly.
- 6** Use the plastic board extractor on the DC Circuitry board to unplug the board from the inguard chassis. Then completely remove the board.

Installation procedure

- 1** Line up the DC Circuitry board with the connector in the inguard chassis. Plug the board into the connector.
- 2** Use the #TX10 Torx driver to install the eight screws on the DC Circuitry assembly.
- 3** Use the #TX10 Torx driver to install the two screws on the DC Reference assembly.
- 4** Plug in the following wires and cables:
 - a** Locate the blue wire connected to the power transformer. Plug the wire into the metal Inguard shield.
 - b** Locate the gray wire connected to the power transformer. Plug the wire into the metal inguard circuit ground.

NOTE:

The label numbers show the order of assembly removal. Use reverse order for installation.

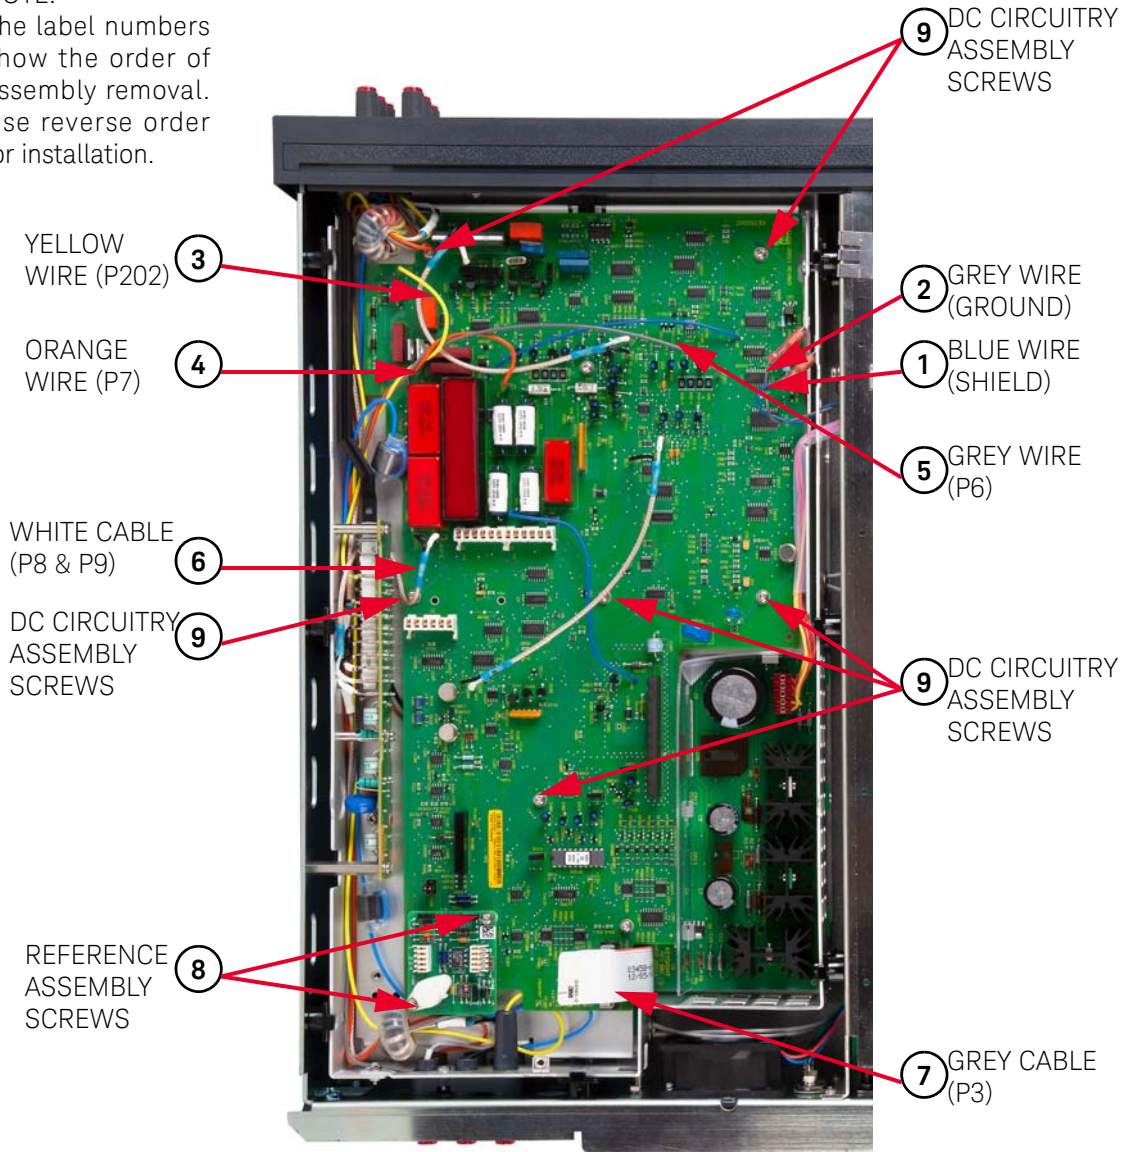


Figure 3-9 DC circuitry assembly removal/installation

- c** Locate the yellow wire connected to the Front/Rear Switch assembly. Plug it into P202 on the DC Circuitry assembly.
 - d** Locate the orange wire connected to the Front/Rear Switch assembly. Plug it into P7 on the DC Circuitry assembly.
 - e** Locate the gray wire connected to the Front/Rear Switch assembly. Plug it into P6 on the DC Circuitry assembly.
 - f** Locate the white cable with the white and black wires connected to the Front/Rear Switch assembly. Plug the white and black wires into P8 and P9, respectively. P8 and P9 are on the DC Circuitry assembly.
 - g** Locate the gray 20-pin cable connected to the A/D Converter and Inguard Logic assembly. Line up the cable plug with socket P3 on the DC Circuitry assembly. Then plug the cable all the way in.
- 5** Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top cover and top shield.

DC reference assembly removal/installation procedures

The following procedures show how to remove and install the DC Reference Printed Circuit Board Assembly.

Refer to [Figure 3-9](#) for the following procedures.

Removal procedure

- 1** Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A top cover and top shield. It is not necessary to remove the bottom cover and bottom shield.
- 2** Set the 3458A on your workbench with the top facing you.
- 3** Use the #TX10 Torx driver to remove the two screws from the DC Reference assembly.
- 4** Unplug and remove the board from the DC Circuitry assembly.

Installation procedure

- 1** A top and bottom cover needs to be installed over the reference device located on the DC Reference assembly. To install the covers, place one cover over the top of the device and another on the bottom side of the DC Reference assembly printed circuit board. Use your fingers to hold the covers in place. Then line up the screw holes in the covers with the screw holes on the printed circuit board. The covers should now completely enclose the reference device.
- 2** Line up the DC Reference board with the connectors on the DC Circuitry assembly. Hold the covers over the reference device in place while installing the DC Reference assembly. Then plug the board all the way into the connectors.
- 3** Use the #TX10 Torx driver to install the two screws on the DC Reference assembly.
- 4** Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top cover and top shield.

NOTE:
The label numbers show the order assembly removal. Us reverse order for installation.

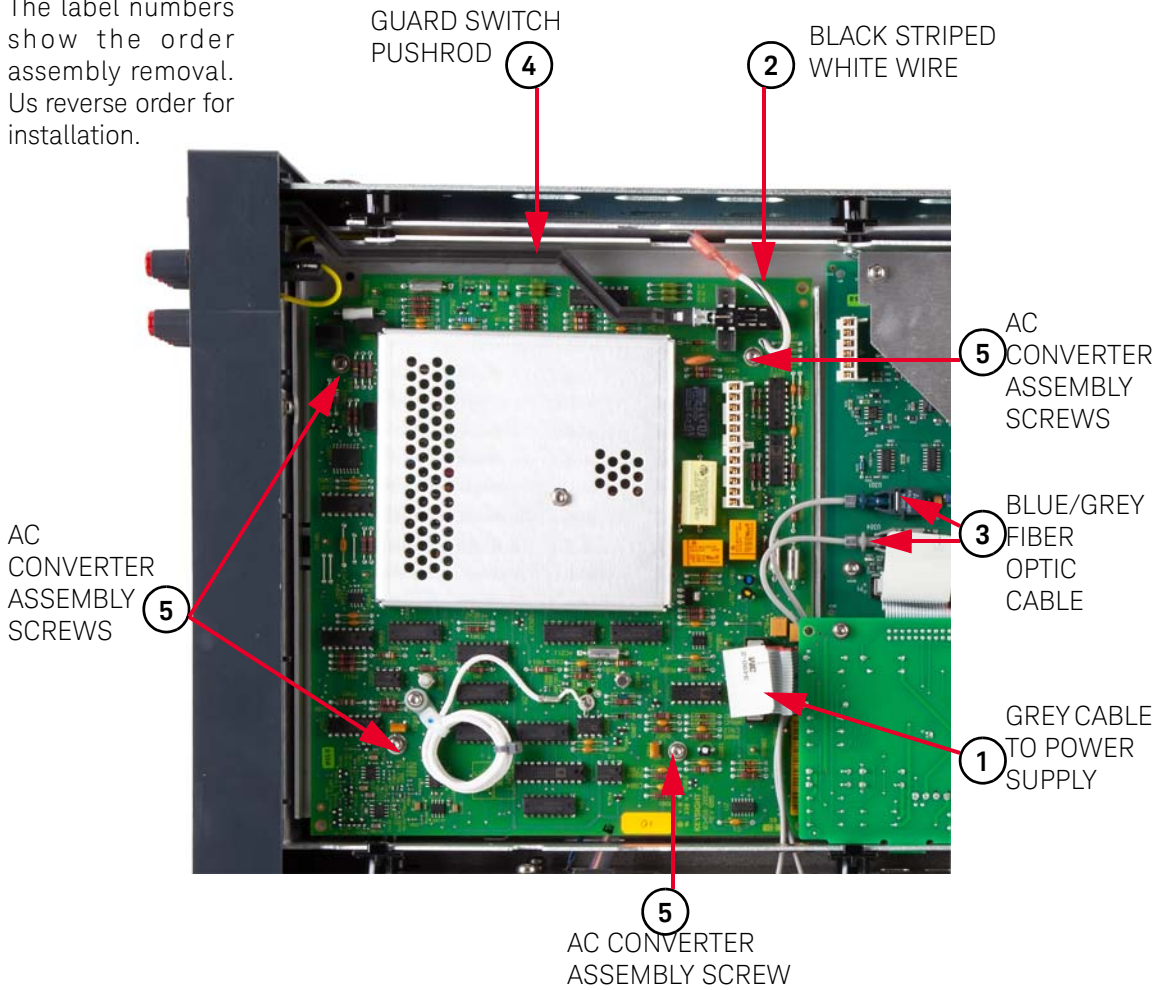


Figure 3-10 AC converter assembly removal/installation

AC converter assembly removal/installation procedures

The following procedures show how to remove and install the AC Converter Printed Circuit Board Assembly.

Refer to [Figure 3-10](#) for the following procedures.

Removal procedure

- 1 Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A bottom cover and bottom shield. It is not necessary to remove the top cover and top shield.
- 2 Set the 3458A on your workbench with the bottom facing you.
- 3 Unplug the gray 20-pin cable from the AC Converter assembly.
- 4 Unplug the black striped white wire from the metal inguard chassis.
- 5 For easier removal of the AC Converter assembly, you may wish to unplug and lay aside both the blue and gray fiber optic cables connecting the A/D Converter and Inguard Logic assembly to the outguard.
- 6 Remove the pushrod from the Guard switch. You may need to pry the pushrod loose with a small flat blade screwdriver. Then completely remove it from the rear of the front panel.
- 7 Use the #TX10 Torx driver to remove the four screws from the AC Converter assembly.
- 8 Unplug and remove the AC Converter board from the inguard chassis.

Installation procedure

- 1 Line up the AC Converter board with the connector in the inguard chassis. Then plug the board all the way into the connector.
- 2 Use the #TX 10 Torx driver to install the four screws on the AC Converter assembly.
- 3 Locate the gray 20-pin cable connected to the Inguard Power Supply assembly. Line up the cable plug with the socket on the AC Converter assembly. Then plug the cable all the way in.
- 4 Plug the black striped white wire from the AC Converter into the metal inguard chassis.

- 5 Plug in both the blue and gray fiber optic cables into the A/D Converter and Inguard Logic assembly, if previously unplugged.
- 6 Guide the Guard switch pushrod through the rear of the front panel's access hole. Then align the pushrod with the Guard switch shaft and push it all the way onto the shaft.
- 7 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A bottom cover and bottom shield.

A/D converter assembly removal/installation procedures

The following procedures show how to remove and install the A/D Converter and Inguard Logic Printed Circuit Board Assembly.

Refer to [Figure 3-11](#) for the following procedures.

Removal procedure

- 1 Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A bottom cover and bottom shield. It is not necessary to remove the top cover and top shield.
- 2 Set the 3458A on your workbench with the bottom facing you.
- 3 Locate the gray 20-pin cable that connects the A/D Converter and Inguard Logic assembly to the Inguard Power Supply assembly. Unplug this cable at the A/D Converter and Inguard Logic assembly.
- 4 Locate the gray 20-pin cable that connects the A/D Converter and Inguard Logic assembly to the DC Circuitry assembly. Unplug this cable at the A/D Converter and Inguard Logic assembly.
- 5 Unplug both sets (four cables) of the blue and gray fiber optic cables that connect the A/D Converter and Inguard Logic assembly to the Outguard Power Supply assembly.

NOTE:

The label numbers show the order of assembly removal. Use reverse order for installation.

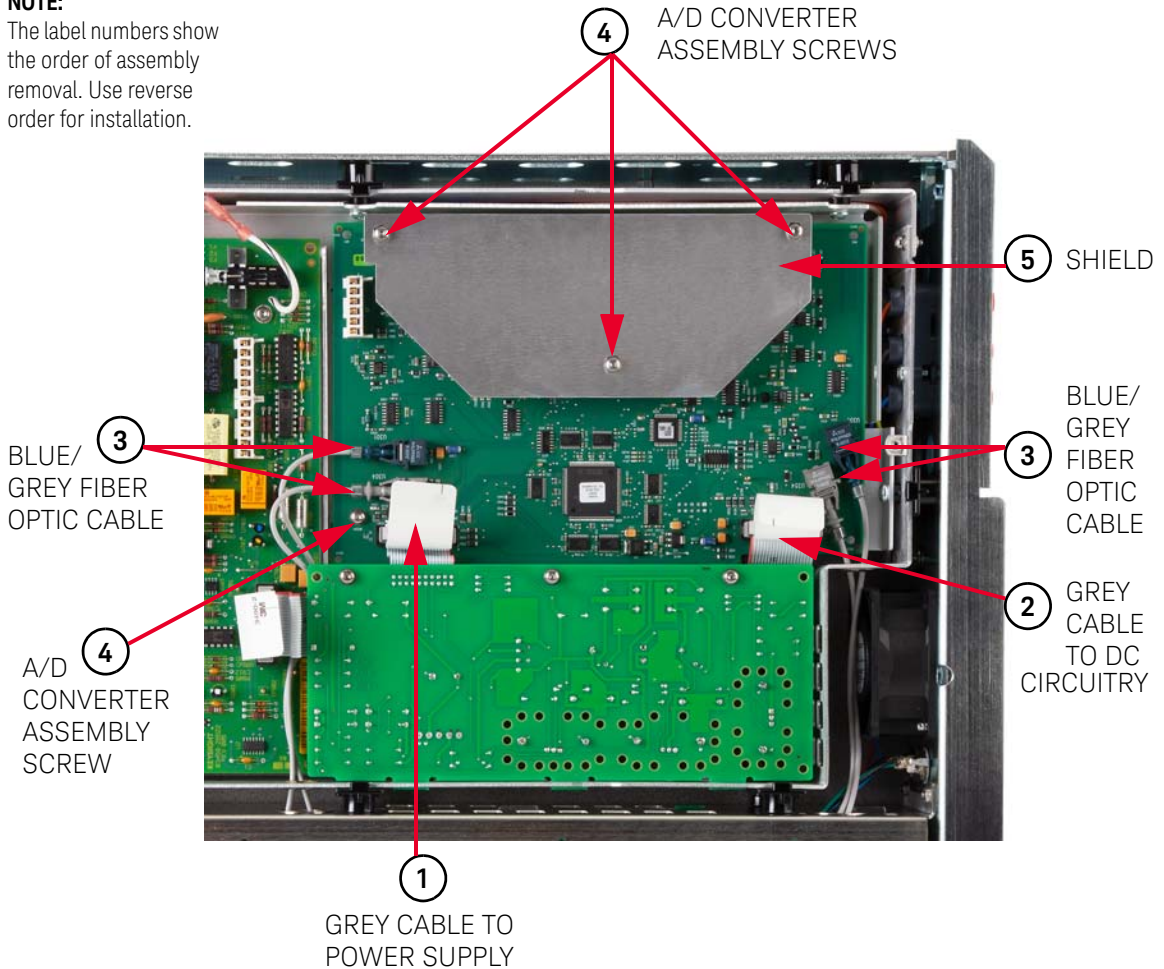


Figure 3-11 A/D converter and guard logic assembly

- 6 Use the #TX10 Torx driver to remove the three screws on the shield and the two screws on the A/D Converter and Inguard Logic assembly. Then remove the shield.
- 7 Unplug and remove the A/D Converter and Inguard Logic board from the inguard chassis.

Installation procedure

- 1 Line up the A/D Converter and Inguard Logic board with the connector in the inguard chassis. Then plug the board all the way into the connector.
- 2 Place the A/D Converter and Inguard Logic shield on the board. Then use the #TX10 Torx driver to install the three screws on the shield.
- 3 Locate the gray 20-pin cable connected to the Inguard Power Supply assembly. Line up the cable plug with the corresponding socket on the A/D Converter and Inguard Logic assembly. Then plug the cable all the way in.

NOTE

The label numbers in [Figure 3-11](#) and [Figure 3-12](#) show the order assembly removal. Use reverse order for installation.

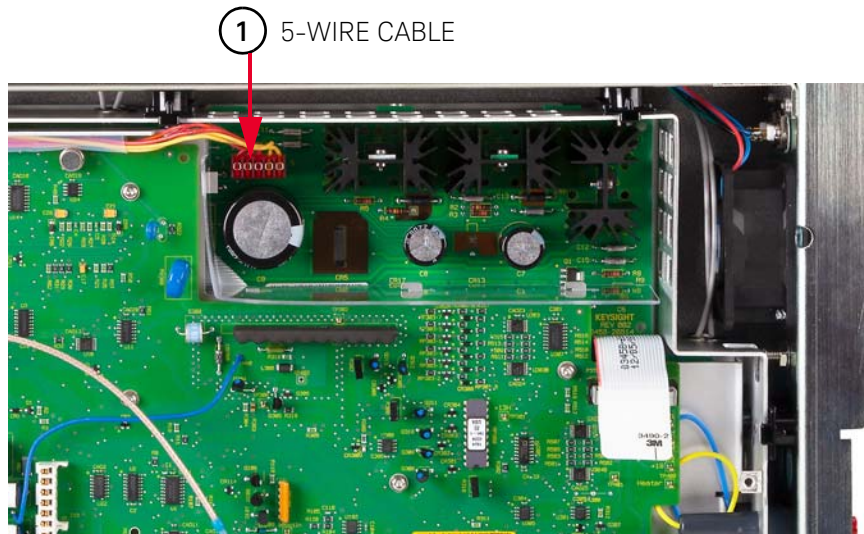


Figure 3-12 Remove/Install transformer cable on inguard power supply

- 4 Locate the gray 20-pin cable connected to the DC Circuitry assembly. Line up the cable plug with the corresponding socket on the A/D Converter and Inguard Logic assembly. Then plug the cable all the way in.
- 5 Plug in both sets of the blue and gray fiber optic cables into the corresponding sockets on the A/D Converter and Inguard Logic assembly.
- 6 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A bottom cover and bottom shield.

Inguard power supply assembly removal/installation procedures

The following procedures show how to remove and install the Inguard Power Supply Printed Circuit Board Assembly.

Removal procedure

- 1 Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A top/bottom covers and top/bottom shields.
- 2 Set the 3458A on your workbench with the top facing you.
- 3 Refer to [Figure 3-12](#). Unplug the 5-wire cable from the Inguard Power Supply assembly. This cable is connected to the power transformer.
- 4 Refer to [Figure 3-13](#) for the rest of this procedure.
- 5 Set the 3458A on your workbench with the bottom facing you.

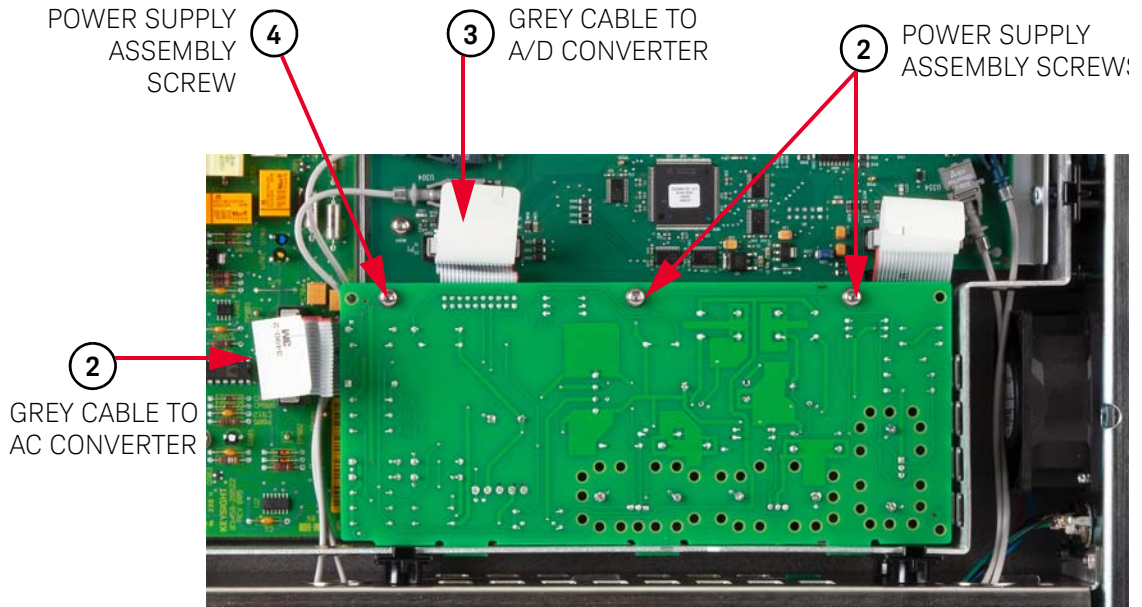


Figure 3-13 Inguard power supply assembly removal/installation

- 6 Locate the gray 20-pin cable that connects between the A/C Converter assembly and Inguard Power Supply assembly. Unplug the cable at the power supply assembly.
- 7 Locate the gray 20-pin cable that connects between the A/D Converter assembly and Inguard Power Supply assembly. Unplug the cable at the power supply assembly, and Inguard Logic assembly.
- 8 Use the #TX 10 Torx driver to remove the three screws on the Inguard Power Supply assembly.
- 9 Push the Inguard Power Supply assembly toward the left, of the instrument (as seen from the front) until it clears the slot in the chassis. Then remove the board from the instrument.

Installation procedure

- 1 Set the 3458A on your workbench with the bottom facing you.
- 2 Refer to [Figure 3-13](#). Line up the Inguard Power Supply assembly with the slots in the chassis. Then push the board in.
- 3 Use the #TX10 Torx driver to install the three screws on the Inguard Power Supply board.
- 4 Locate the gray 20-pin cable connected to the AC Converter assembly. Line up the cable plug with the socket on the AC Converter assembly. Then plug the cable all the way in.
- 5 Locate the gray 20-pin cable connected to the A/D Converter and Inguard Logic assembly. Line up the cable plug with the socket on the A/D Converter and Inguard Logic assembly. Then plug the cable all the way in.

NOTE:

The label numbers show the order of assembly removal. Use reverse order for installation.

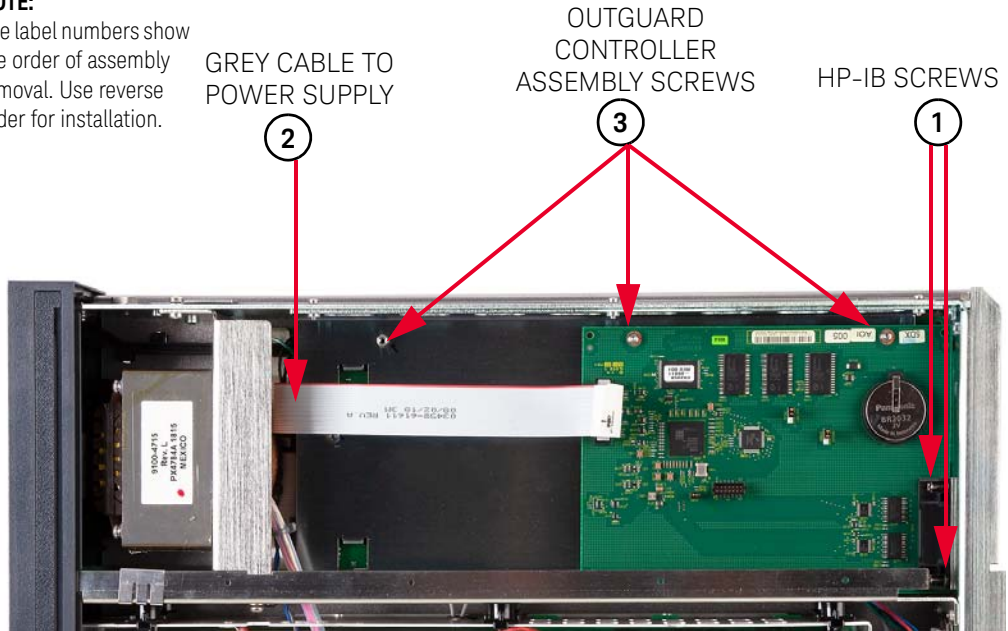


Figure 3-14 Outguard controller assembly removal/installation

- 6 Set the 3458A on your workbench with the top facing you.
- 7 Refer to [Figure 3-12](#). Locate the cable connected to the power transformer. Line up the cable plug with the socket on the Inguard Power Supply assembly. Then plug the cable in.
- 8 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top/bottom covers and top/bottom shields.

Outguard controller assembly removal/installation procedures

The following procedures show how to remove and install the Outguard Controller Printed Circuit Board Assembly.

Refer to [Figure 3-14](#) for the following procedures.

Removal procedure

- 1** Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A top cover. It is not necessary to remove the bottom covers and the top/bottom shields.
- 2** Set the 3458A on your workbench with the top facing you.
- 3** Use a 7-millimeter nut driver to remove the two hex standoffs on the rear panel GPIB connector.
- 4** Locate the gray 20-pin cable that connects between the Outguard Controller assembly and Outguard Power Supply assembly. Unplug the cable at the controller assembly.
- 5** Use the #TX10 Torx driver to remove the three screws on the Outguard Controller assembly.
- 6** Push the board toward the front of the instrument, as far it will go, while the board is still laying down flat in the chassis.
- 7** Pull the outside edge of the board up. Do this until the inside edge of the board can be removed from the slots in the instrument chassis. Then pull the board completely out of the instrument.

Installation procedure

- 1 Insert the Outguard Controller board into the slots in the chassis. Make sure the board is as far as possible toward the front of the instrument.
- 2 Place the rest of the board into the instrument until it lays down flat in the chassis. Then slide the board toward the rear of the instrument.
- 3 Use the #TX10 Torx driver to install the three screws on the Outguard Controller assembly.
- 4 Locate the gray 20-pin cable connected to the Outguard Power Supply assembly. Line up the cable plug with the socket on the Outguard Controller assembly. Then plug the cable in.
- 5 Use the 7-millimeter nut driver to install the two hex standoffs on the rear panel GPIB connector.
- 6 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top cover.

Outguard power supply assembly removal/installation procedures

The following procedures show how to remove and install the Outguard Power Supply Printed Circuit Board Assembly.

Refer to [Figure 3-15](#) for the following procedures.

Removal procedure

- 1 Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A bottom cover. It is not necessary to remove the top cover and the top/bottom shields.
- 2 Set the 3458A on your workbench with the top facing you.
- 3 Pull the power switch pushrod off the ac power switch. You may need to pry the pushrod loose with a small screwdriver. Then remove the pushrod by pulling it out of the front panel from the rear.
- 4 Locate the gray 20-pin cable that connects the Outguard Power Supply assembly to the Main Controller assembly. Unplug this cable at the Outguard Power Supply assembly.

- 5** Locate the gray 26-pin cable that connects the Outguard Power Supply assembly to the Display assembly. Unplug this cable at the Outguard Power Supply assembly.
- 6** Locate the 8-pin cable that connects the Outguard Power Supply assembly to the power transformer. Unplug the cable from the power supply assembly. Move the cable so it lays on the outside of the outguard chassis.

NOTE:

The label numbers show the order of assembly removal. Use reverse order for installation.

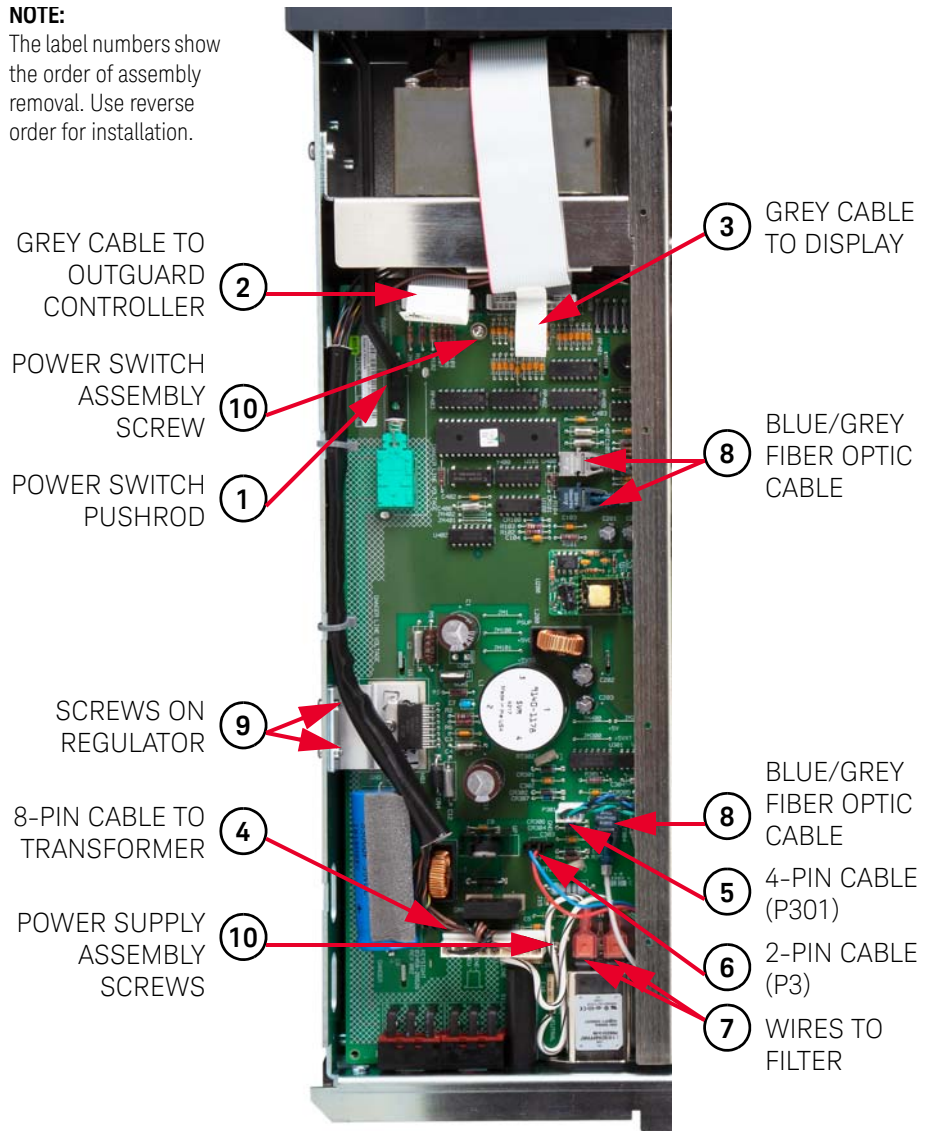


Figure 3-15 Outguard power supply assembly removal/installation

- 7** Unplug the 4-pin cable from socket P301. This cable is connected to the Ext Out and Ext Trig connectors on the rear panel. Move the cable out of the way.
- 8** Unplug the 2-pin cable from socket P3. This cable is connected to the fan. Move the cable out of the way.
- 9** Unplug the two black striped white wires from the AC power filter on the rear panel. Move the wires out of the way.
- 10** Unplug both sets (four cables) of the blue and gray fiber optic cables from the Outguard Power Supply Assembly. These cables connect the A/D Converter and Inguard Logic assembly to the Outguard Power Supply assembly. Move the cables out of the way.
- 11** Use the #TX10 Torx driver to remove the two screws on the power supply regulator heat sink.
- 12** Use the #TX10 Torx driver to remove the two screws on the Outguard Power Supply assembly.
- 13** Push the Outguard Power Supply board toward the front of the instrument, as far it will go. Then lift it up and away from the instrument.

Installation procedure

- 1** Line up the slots on the Outguard Power Supply board with the sheet metal hook tabs on the chassis. Make sure the board is as far as possible toward the front of the instrument.
- 2** Place the board on top of the chassis. Then push it all the way to the rear of the instrument.
- 3** Use the #TX10 Torx driver to install the two screws on the power supply regulator heat sink.
- 4** Use the #TX10 Torx driver to install the two screws on the Outguard Power Supply assembly.
- 5** Plug in both sets of the blue and gray fiber optic cables into the corresponding sockets on the Outguard Power Supply assembly.
- 6** Locate the two black striped white wires. Connect the wire from "LINE" to the left terminal (as seen from the instrument's front) of the filter. Connect the "NEUTRAL" to the right terminal on the filter. These connections are also shown on a drawing on the Outguard Power Supply assembly. The drawing is located toward the rear of the board near ac line select switches.

- 7 Locate the 2-pin cable connected to the fan. Plug the cable into socket P3.
- 8 Locate the 4-pin cable connected to the Ext Out and Ext Trig connectors on the rear panel. Plug the cable into socket P301.
- 9 Locate the 8-pin cable connected to the power transformer. Move the cable so it lays on top of the Outguard Power Supply assembly. Then plug the cable into socket P3.
- 10 Locate the gray 20-pin cable connected to the Outguard Controller assembly. Line up the cable plug with the socket on the Outguard Power Supply assembly. Then plug it all the way in.
- 11 Guide the power switch pushrod through the rear of the transformer shield's access hole. Then guide the pushrod through the rear of the front panel's access hole. Align the pushrod with the ac power switch shaft and push it onto the shaft.

NOTE

The label numbers in Figure 3-15 and Figure 3-19 show the order of assembly removal. Use reverse order for installation.

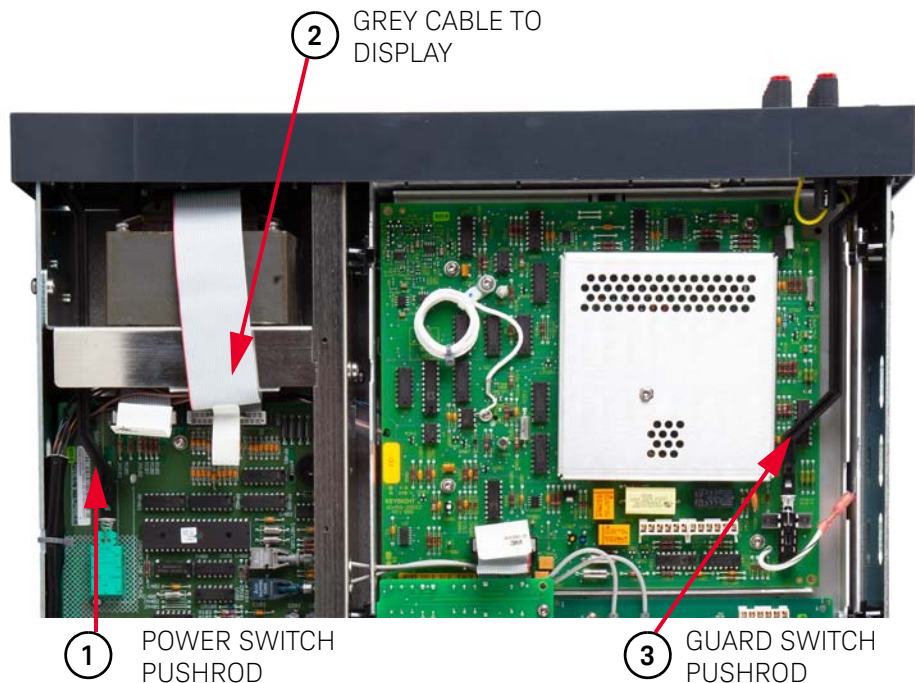


Figure 3-16 Guard and power pushrods, and display cable locations

- 12 Use the **Covers installation procedure** in this section of the manual to install the 3458A bottom cover.

Display logic assembly removal/installation procedures

The following procedures show how to remove and install the Display Logic Board Assembly.

Removal procedure

- 1 Use the **Covers removal procedure** in this section of the manual to remove the 3458A top/bottom covers and top/bottom shields.
- 2 Set the 3458A on your workbench with the bottom facing you.
- 3 Refer to **Figure 3-16**. Do the following:
 - a Locate and pull the power switch pushrod off the power switch. You may need to pry the pushrod loose with a small screwdriver. Then remove the pushrod by pulling it out of the front panel from the rear.

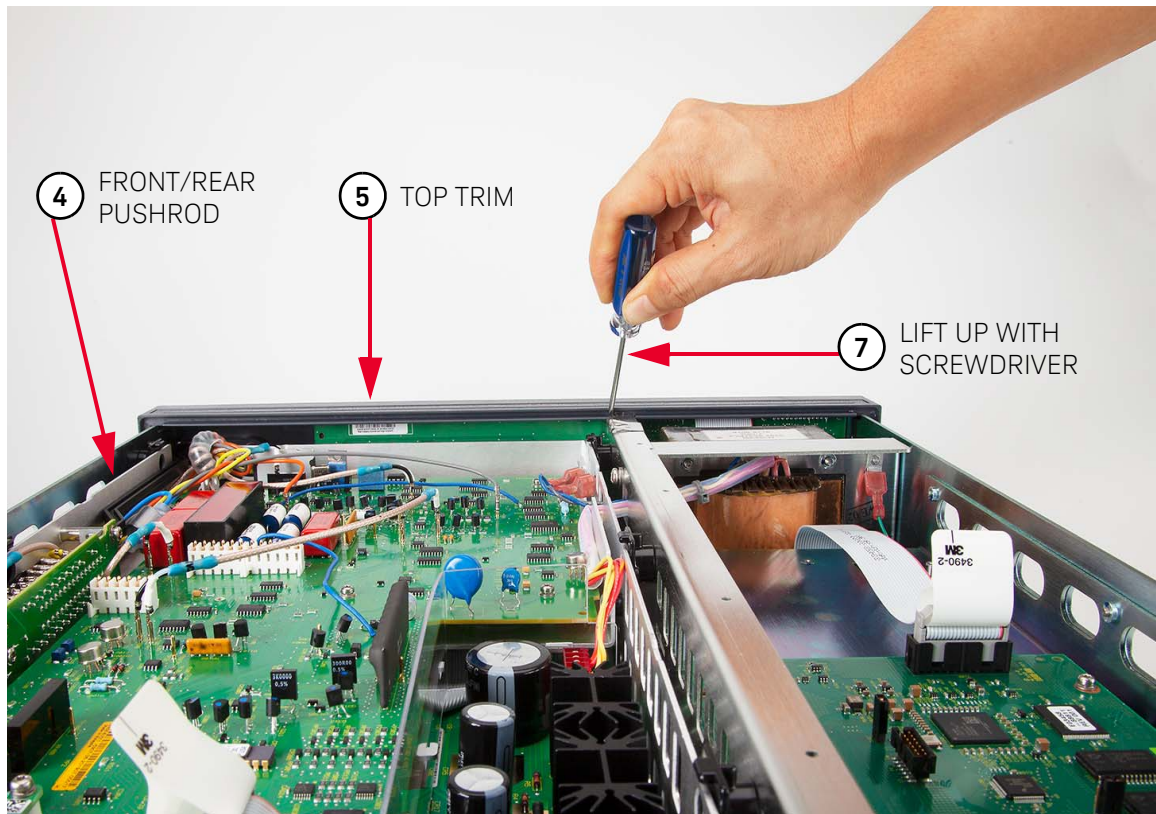


Figure 3-17 Top trim and front/rear pushrod locations, and unlock panel

- b** Locate the gray 26-pin cable that connects the Outguard Power Supply assembly to the Display assembly. Unplug this cable at the Outguard Power Supply assembly.
- c** Locate and pull the Guard switch pushrod off the Guard switch. You may need to pry the pushrod loose with a small screwdriver. Then remove the pushrod by pulling it out of the front panel from the rear.
- 4** Set the 3458A on your workbench with the top facing you.

- 5 Refer to [Figure 3-17](#). Do the following:
 - a Locate and pull the Front/Rear switch pushrod off the Front/Rear Terminals switch. You may need to pry the pushrod loose with a small screwdriver. Then remove the pushrod by pulling it out of the front panel from the rear.
 - b With a small flat bladed screwdriver, pry the top trim loose and remove from the Front Panel assembly.
- 6 Set the 3458A on your workbench with the left side facing you.
- 7 Refer to [Figure 3-18](#). Insert a large screwdriver between the Front Panel assembly and the chassis, as shown in the figure. With the screwdriver, carefully pry the left side of the Front Panel assembly loose. Move the front panel out of the chassis until it unlocks from the chassis. Do not move it any more, or it may break.

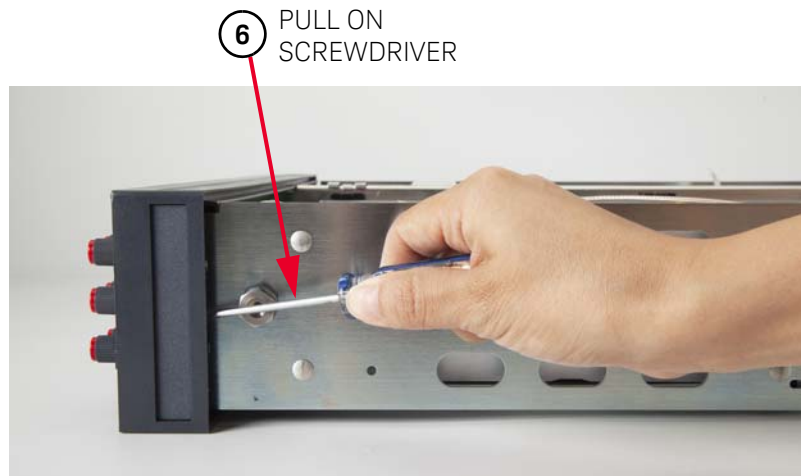


Figure 3-18 Remove front panel assembly

- 8** Refer to [Figure 3-17](#). With a small flat bladed screwdriver, lift up the Front Panel assembly and unlock it from the chassis. Carefully move some more of the Front Panel assembly's left side (as seen from the front of the instrument) until free from the chassis. Then move the rest of the Front Panel assembly out and away from the instrument as far as it can go. Note that the assembly can only be moved a short distance, since the front terminals are still internally connected to the instrument.
- 9** Turn the instrument so the front panel faces you.
- 10** Locate and unscrew (rotate counterclockwise) the current terminal binding post until it stops. Push in on the terminal and rotate it clockwise. Then remove the current terminal/fuse assembly.
- 11** Refer to [Figure 3-19](#). Use the #TX10 Torx driver to remove the two Torx screws from the front terminals. Then use a #1 Pozidriv screwdriver to remove the two Pozidriv screws from the front terminals. This removes the front terminals from the Front Panel assembly.
- 12** Completely remove the Front Panel assembly from the instrument.
- 13** Place the Front Panel assembly face down on a soft anti-static mat.
- 14** Refer to [Figure 3-20](#). Use the #TX10 Torx driver to remove the single Torx screw from the Display assembly.
- 15** Push the Display board toward the left (with input terminals at your right side) as far as it can go. Then pull its bottom up and lift it out from the Front Panel assembly.

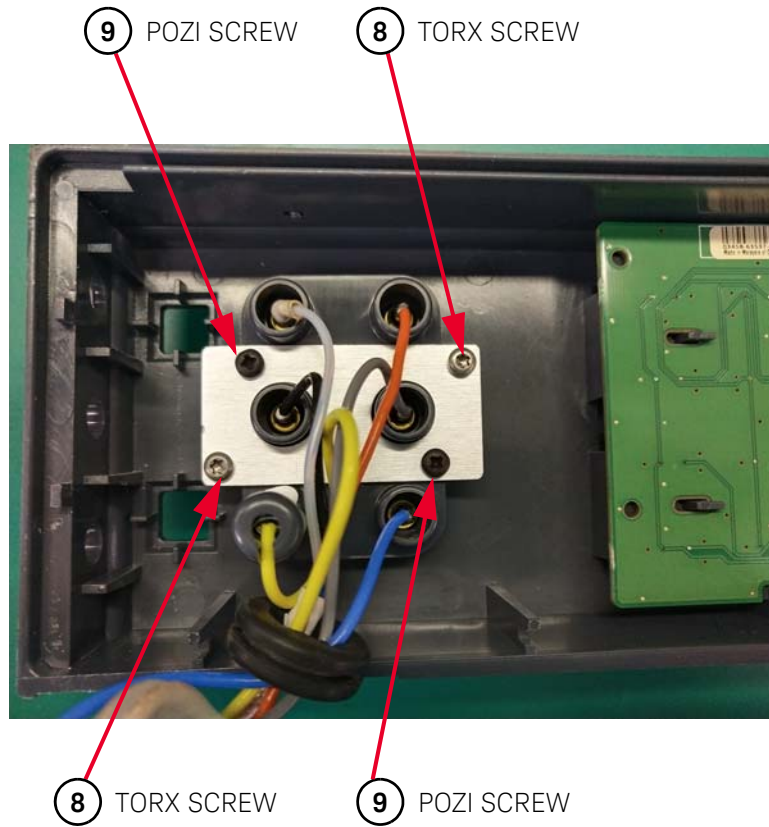


Figure 3-19 Remove/Install screws on front terminals

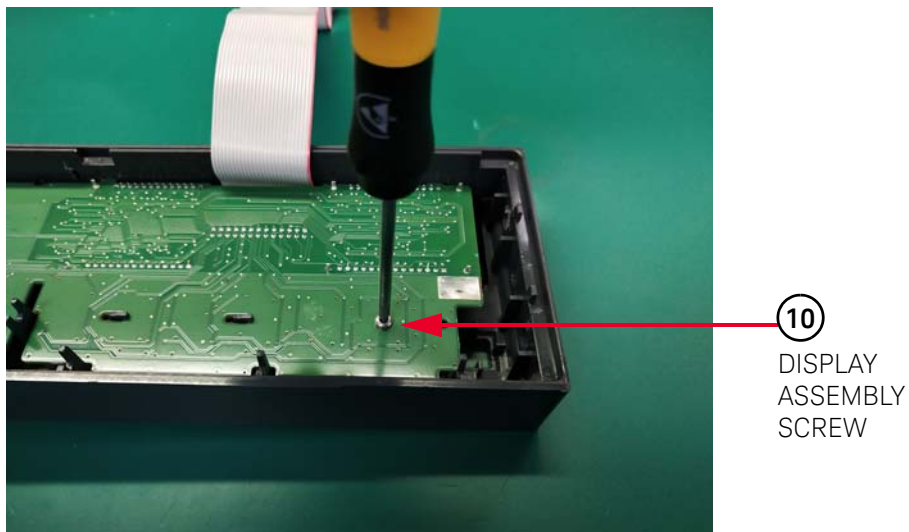


Figure 3-20 Remove/Install display screw

Installation procedure

- 1 Align the slots in the Display assembly with the hook tabs on the Front Panel assembly. Be sure the board is as close to the left side of the Front Panel assembly as possible. Then push the board down until it locks in place.
- 2 Push the board as far as possible toward the right side of the Front Panel assembly.
- 3 Refer to [Figure 3-20](#). Use the #TX10 Torx driver to install the screw on the Display assembly.
- 4 Set the 3458A on your workbench with the right side facing you.
- 5 Carefully place the front terminals into the appropriate holes in the front panel.
- 6 Refer to [Figure 3-19](#). Use the #TX10 Torx driver to install the two Torx screws on the front terminals. Then use a #1 Pozidriv screwdriver to install the two Pozidriv screws on the front terminals.
- 7 Set the 3458A on your workbench with the front facing you.
- 8 Place the Front Panel assembly in front of the chassis. Place the cable from the display below the power transformer.

- 9 Align the Front Panel assembly with the instrument chassis. Be sure the extension on the center portion of the instrument chassis is aligned with the slot in the display board.
- 10 Place the right side of the Front Panel assembly over the standoffs on the chassis, then push the left side of the Front Panel assembly over the chassis standoffs until it locks in place.
- 11 Install the top trim into the channel on top of the Front Panel assembly. Lock it in place (see [Figure 3-17](#)).
- 12 Install the current terminal/fuse assembly into the binding post. Push the assembly in and turn counterclockwise until it locks in place.
- 13 Refer to [Figure 3-17](#). Guide the Front/Rear Terminals switch pushrod through the rear of the front panel's access hole. Then align the pushrod with the Front/Rear Terminals switch shaft and push it all the way onto the shaft.
- 14 Set the 3458A on your workbench with the bottom facing you.
- 15 Refer to [Figure 3-16](#). Do the following:
 - a Guide the Guard switch pushrod through the rear of the front panel's access hole. Then align the pushrod with the Guard switch shaft and push it all the way onto the shaft.
 - b Guide the power switch pushrod through the rear of the transformer shield's access hole. Then guide the pushrod through the rear of the front panel's access hole. Align the pushrod with the ac power switch shaft and push it into the onto the shaft.
 - c Locate the gray 26-pin cable connected to the Display Logic assembly. Line up the cable plug with the socket on the Outguard Power Supply assembly connector. Then plug the cable all the way in.

NOTE

The label numbers show the order of assembly removal. Use reverse order for installation.

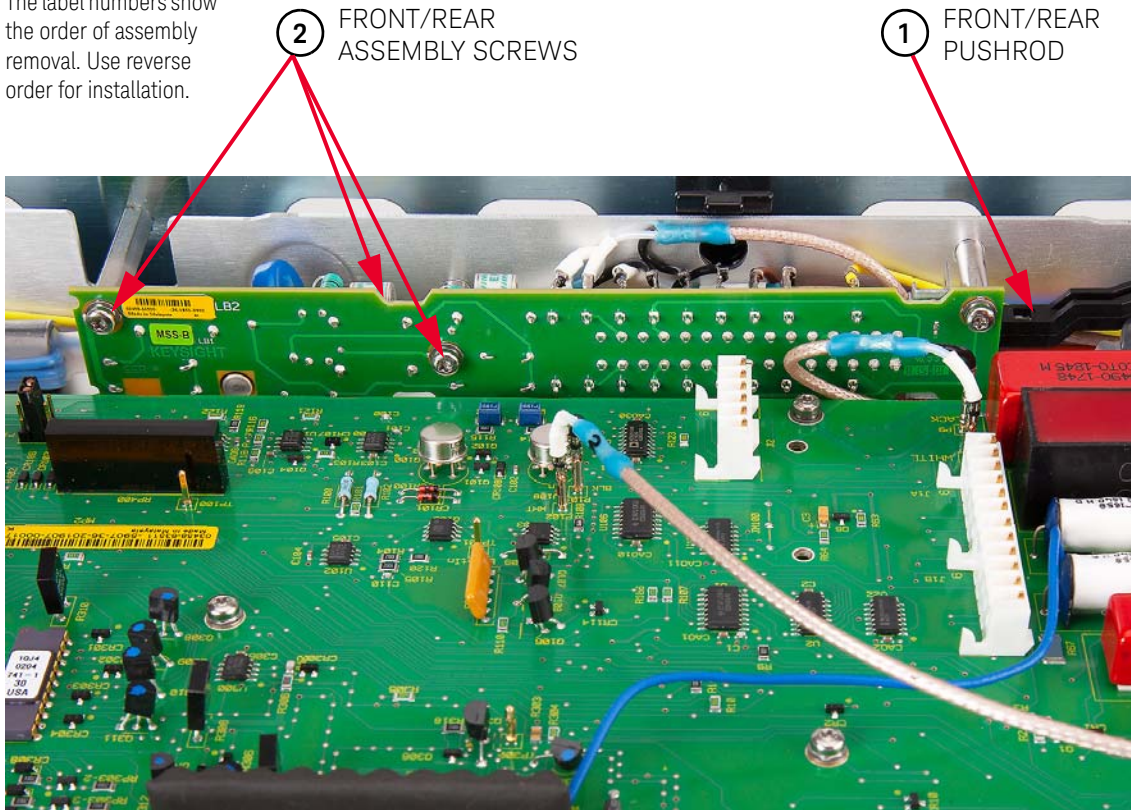


Figure 3-21 Front/Rear terminals switch assembly removal/installation

16 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top/bottom covers and top/bottom shields.

Front/Rear terminals switch removal/installation procedures

The following procedures show how to remove and install the Front/Rear Terminals Switch Assembly.

Refer to [Figure 3-21](#) for the following procedures.

Removal procedure

- 1 Use the [Covers removal procedure](#) in this section of the manual to remove the 3458A top cover and top shield. It is not necessary to remove the bottom cover and bottom shield.
- 2 Set the 3458A on your workbench with the top facing you.
- 3 Pull the Front/Rear Terminals switch pushrod off the Front/Rear Terminals switch. You may need to pry the pushrod loose with a small screwdriver. Then remove the pushrod by pulling it out of the front panel from the rear.

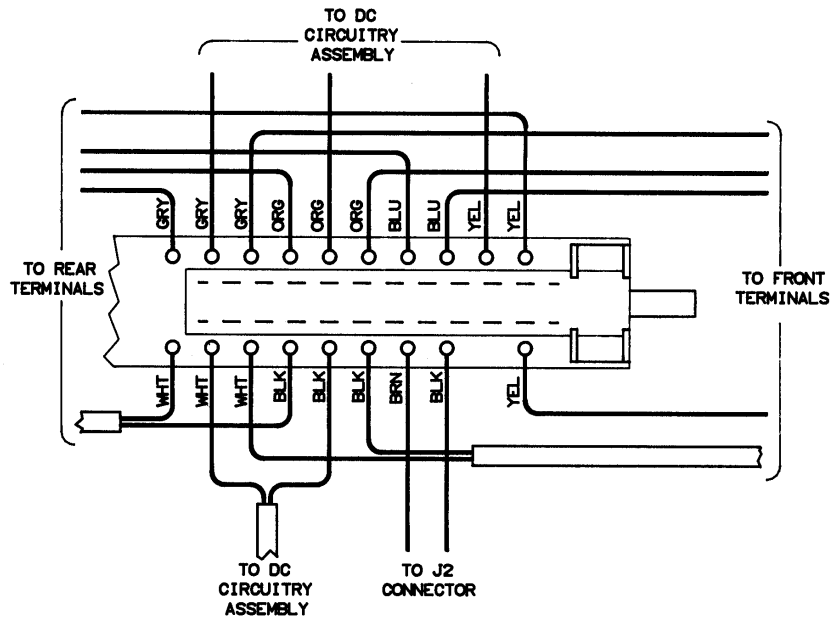


Figure 3-22 Wire/Cable locations on front/rear terminals switch

- 4 Use the #TX10 Torx driver to remove the four screws from the Front/Rear Terminals switch assembly.
- 5 On the Front/Rear Terminals switch assembly, note for future reference the location of the wires connected to the assembly. These locations are also shown in [Figure 3-22](#). Then unplug and lay aside all wires from the assembly.

Installation procedure

- 1 Refer to [Figure 3-22](#). Plug in all wires to the Front/Rear Terminals switch assembly. Use the wire locations noted in the previous procedure.
- 2 Line up the mounting holes of the assembly with the standoffs on the inguard chassis. Use the #TX10 Torx driver to install the four screws on the assembly.
- 3 Guide the Front/Rear Terminals switch pushrod through the rear of the front panel's access hole. Then align the pushrod with the Front/Rear Terminals switch shaft and push it all the way onto the shaft.
- 4 Use the [Covers installation procedure](#) in this section of the manual to install the 3458A top cover and top shield.

Replaceable Parts

Ordering information

To order a part in the replaceable parts table, quote the Keysight part number, the check digit (abbreviated CD), and the quantity desired. Address the order to the nearest Keysight Technologies Sales Office.

Direct mail ordering

Within the U.S.A., Keysight Technologies can supply parts to your location through a direct mail order system. Mail order forms and specific ordering information are available through your local Keysight Technologies Sales Office.

Telephone ordering

Within the U.S.A., Keysight Technologies can supply parts to your location by calling the following telephone number: 1-800-227-8164. The calling times are from 6 am to 5 pm, Pacific Time, Monday through Friday. After hours and holidays, call (415) 968-2347. Be sure you have the correct part number available before calling. Visa and MasterCard are accepted.

A hotline service is available by calling the above telephone numbers. The service is available 24 hours a day, 365 days/year. This allows you to receive a replacement part the next business day. To cover the cost of freight and special handling, there will be a hotline charge of \$100.00 per order (three items maximum).

Replaceable parts list

The 3458A replaceable parts are listed in [Table 3-2](#). Also listed are the 3458A printed circuit board assemblies. The column for “New case colors” applies to instrument serial numbers greater than 2823A21100.

Table 3-2 3458A replaceable parts

| Ref desig. | Part number (RoHS) | CD | Qty | Description | Mfr code | Mfr part number |
|------------|-----------------------|----|-----|--|----------|----------------------|
| A1 | 03458-66511 | 8 | 1 | PC assy-DC circuitry | 28480 | 03458-66511 |
| | 0515-0372 | 2 | 8 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| | 03458-43701 | 2 | 1 | Push rod 186.2 LG | 28480 | 03458-43701 |
| | 03458-40225 | | 2 | Key cap Phantom Gray | 28480 | |
| | 03458-40224 | | 1 | Key cap Carbon Black | 28480 | |
| A2 | 03458-66522 | 9 | 1 | PC assy-AC Converter | 28480 | 03458-66522 |
| | 0515-0372 | 2 | 4 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| | 03458-00603 | 3 | 1 | Shield-AC Converter | 28480 | 03458-00603 |
| | 0515-1410 | 1 | 1 | Screw-machine assembly M3 x 0.5 20MM-LG | 83486 | Order by description |
| | 03458-43702 | 3 | 1 | Push rod 177.6 LG | 28480 | 03458-43702 |
| A3 | 03458-66533 | 0 | 1 | PC assy-A/D Converter and Inguard Logic | 28480 | 03458-66533 |
| | 0515-0372 | 2 | 5 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| | 03458-00607 | 7 | 1 | Shield-A/D Converter | 28480 | 03458-00607 |
| | 0515-1410 | 1 | 3 | Screw-machine assembly M3 x 0.5 20MM-LG | 83486 | Order by description |
| A4 | 03458-66514 | 1 | 1 | PC assy-inguard power supply | 28480 | 03458-66514 |
| | 0515-0372 | 2 | 3 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| A5 | 03458-66675 | 2 | 1 | PC assy-outguard controller | 28480 | 03458-66675 |
| | 0515-0372 | 2 | 3 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| A6 | 03458-66526 | 3 | 1 | PC assy-outguard power supply | 28480 | 03458-66526 |

Table 3-2 3458A replaceable parts (continued)

| Ref desig. | Part number (RoHS) | CD | Qty | Description | Mfr code | Mfr part number |
|------------|-----------------------|----|-----|---|----------|--------------------------------|
| | 0515-0372 | 2 | 4 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| | 03458-43701 | 2 | 1 | Push rod- 186.2 LG | 28480 | 03458-43701 |
| | 03458-44123 | | 1 | Locking Cap | 28480 | |
| A7 | 03458-66537 | 4 | 1 | PC assy-display logic | 28480 | 03458-66537 |
| | 0624-0681 | 7 | 1 | Screw-TPG 4-20 .25-IN-LG PAN-HD-TORX T10 | 93907 | 225-05813-890BE112TXPNPL OZ |
| A9 | 03458-66559 | 6 | 1 | PC assy-DC reference | 28480 | 03458-66559 |
| A9 | 03458-80009 | 8 | 1 | PC assy-DC reference (OPT 002) | 28480 | 03458-80009 |
| | 0515-1410 | 1 | 2 | Screw-machine assembly M3 x 0.5 20MM-LG | 83486 | Order by description |
| A10 | 03458-66520 | 9 | 1 | PC assy-front/rear switch | 28480 | 03458-66520 |
| | 0515-0372 | 2 | 4 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| T1 | 9100-4715 | 5 | 1 | Transformer-power | 05216 | Order by description |
| | 0515-1404 | 3 | 4 | Screw-mach M4 x 0.7 55MM-LG PAN-HD | 93907 | Order by description |
| MP1 | 03458-60221 | | 1 | Assembly-front panel | 28480 | |
| | 03458-40222 | | 1 | Panel (front) | 28480 | |
| | 03458-49341 | | 1 | Window | 28480 | |
| | 03458-81922 | | 1 | Keypad | 28480 | |
| MP2 | 5042-8439 | | 1 | Trim (top front bezel) | 28480 | |
| MP3 | 03458-04131 | | 1 | Cover-top | 28480 | |
| MP4 | 0515-0372 | 2 | 1 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| MP5 | 5042-8425 | | 2 | Trim strip | 28480 | |

Table 3-2 3458A replaceable parts (continued)

| Ref desig. | Part number (RoHS) | CD | Qty | Description | Mfr code | Mfr part number |
|------------|------------------------|----|-----|---|----------|----------------------|
| MP6 | 5063-1544 | | 2 | Strap-handle | 28480 | |
| MP7 | 5042-6813 | | 2 | Cap, strap handle (front) | 28480 | |
| MP8 | 5042-6814 | | 2 | Cap, strap handle (rear) | 28480 | |
| MP9 | 0515-1132 | 4 | 4 | Screw-mach M5 x 0.8 10MM-LG | N/A | Order by description |
| MP10 | 03458-00601 | 1 | 1 | Shield-top | 28480 | 03458-00601 |
| MP11 | 0515-1604 | 5 | 2 | Screw-mach M3.5 x 0.6 6MM-LG | 93907 | Order by description |
| MP12 | 03458-60100 | 1 | 1 | Chassis-mainframe | 28480 | 03458-60100 |
| MP13 | 03458-47921 | | 1 | Bezel-rear | 28480 | |
| B1 | 03458-68501 | 2 | 1 | Assembly-fan | 28480 | 03458-68501 |
| MP15 | 0624-1053 | 5 | 2 | Screw-TPG 8-16 .375-IN-L6 PAN-HD-TORX | 93907 | Order by description |
| MP16 | 3160-4115 | 5 | 1 | Filter-air nylon 2.3-IN-OD .75-IN-LG | N/A | Order by description |
| MP17 | 0515-0372 | 2 | 2 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| MP18 | 03458-00602 | 2 | 1 | Shield-bottom | 28480 | 03458-00602 |
| MP19 | 0515-1604 | 5 | 2 | Screw-mach M3.5 x 0.6 6MM-LG | 93907 | Order by description |
| MP20 | 03458-04132 | | 1 | Cover-bottom | 28480 | |
| MP21 | 0515-0372 | 2 | 1 | Screw-machine assembly M3 x 0.5 8MM-LG | 93907 | Order by description |
| MP22 | 5041-7906 | | 4 | Foot | 28480 | |
| MP23 | 1460-1345 | 5 | 2 | Tilt-stand SST | N/A | Order by description |
| | 03458-84332 | | 1 | Label (rear panel) | 28480 | |
| | 03458-84323 | | 1 | Label (front panel) | 28480 | |

Table 3-2 3458A replaceable parts (continued)

| Ref desig. | Part number (RoHS) | CD | Qty | Description | Mfr code | Mfr part number |
|------------|------------------------|----|-----|--|----------|-----------------|
| | 03458-67922 | | 2 | Fuseholder (current trmnl) | 28480 | |
| | 03458-62121 | | 2 | Terminal block assy | 28480 | |
| | 03458-44125 | | 2 | Terminal block assy insulator cover | 28480 | |
| XJ1 | | | 1 | Battery-Li Coin Poly-carbon fluoride 3V 0.5A-HR 30mm-DIA 3.2mm-HT 5.5g | 28480 | |

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

4 Assembly Level Troubleshooting

| | |
|--|-----|
| Introduction | 108 |
| Test Equipment Required | 109 |
| 3458A Adjustments/Calibration | 110 |
| Assemblies Removal/Installation Procedures | 111 |
| 3458A Technical Description | 112 |
| Assembly Level Troubleshooting | 118 |
| Power Supplies Troubleshooting | 131 |

Introduction

This section provides a technical description and assembly level troubleshooting procedures for the 3458A multimeter.

WARNING

Only personnel with knowledge of electronic circuitry and an awareness with the hazards involved should test and troubleshoot the instrument.

CAUTION

To prevent electrostatic discharge (ESD) damage to ICs, always observe anti-static techniques when assemblies are handled or serviced. Refer to [Chapter 3](#) of this manual for more information on ESD.

Test Equipment Required

You need the following equipment:

- 1** A 4 1/2 digit digital multimeter that can measure +5 V, +18 V, and -18 V DC. This is only used to check and troubleshoot the power supplies.
- 2** A computer with GPIB capability to check the 3458A's GPIB operation. This is only required for an GPIB failure.
- 3** An oscilloscope or logic probe. This is only required for an Ext Out failure.

3458A Adjustments/Calibration

Instrument adjustments/calibration must be performed whenever a printed circuit board assembly has been replaced or removed from the instrument. Removal or replacement of some assemblies only requires internal calibration (by executing the “ACAL ALL” command). Others need complete adjustments (for example, Offset, DC Gain, etc.). It is also good practice to execute the “ACAL ALL” command after the covers have been removed and replaced on the instrument.

Table 4-1 lists the 3458A assemblies and the required adjustments/calibration after assembly replacement. For information on how to adjust/calibrate the 3458A, refer to the 3458A Calibration Manual.

Table 4-1 Adjustments/Calibration needed after assembly replacement

| Ref desig. | Keysight part number (RoHS) | Assembly description | Adjustments needed |
|------------|-----------------------------|---------------------------------|---|
| A1 | 03458-66511 | DC circuitry | Offset, DC Gain, Resistance, and DC Current Adjustments |
| A2 | 03458-66522 | AC converter | AC Adjustment |
| A3 | 03458-66533 | A/D converter and inguard logic | Offset, DC Gain, Resistance, DC Current, and AC Adjustments |
| A4 | 03458-66514 | Inguard power supply | ACAL ALL |
| A5 | 03458-66675 | Outguard controller | Offset, DC Gain, Resistance, DC Current, and AC Adjustments |
| A6 | 03458-66526 | Outguard power supply | ACAL ALL |
| A7 | 03458-66537 | Display logic | ACAL ALL |
| A9 | 03458-66559 | DC reference | Offset, DC Gain, Resistance, and DC Current Adjustments |
| A9 | 03458-80009 | DC reference (Opt 002) | Offset, DC Gain, Resistance, and DC Current Adjustments |
| A10 | 03458-66520 | Front/rear switch | Offset Adjustments, ACAL ALL |

Assemblies Removal/Installation Procedures

The procedures to replace the 3458A printed circuit board assemblies are found in [Chapter 3](#) of this manual.

3458A Technical Description

General description

The 3458A is a very high precision digital multimeter that can measure AC or DC volts, AC or DC current, AC+DC volts, AC+DC current, resistance, period, and frequency.

The 3458A can also perform complex math calculations. Its maximum reading rate is 100,000 readings/sec. The maximum input voltage is 1000 V peak with 4 1/2 to 8 1/2 digit resolution.

The multimeter has a digitizing function that converts continuous analog signals into discrete samples.

Technical description

Refer to [Figure 4-1](#) for the following description.

The 3458A is composed of two major sections: Inguard and Outguard. The outguard controls instrument operation. The inguard does the actual measurements and also controls the measurement process.

Both the outguard and inguard sections have their own power supplies. The outguard section is referenced to chassis ground. The inguard section is referenced to its own common which is isolated from the outguard section and chassis ground. Communication between the two sections is provided through the Isolation Logic Circuitry.

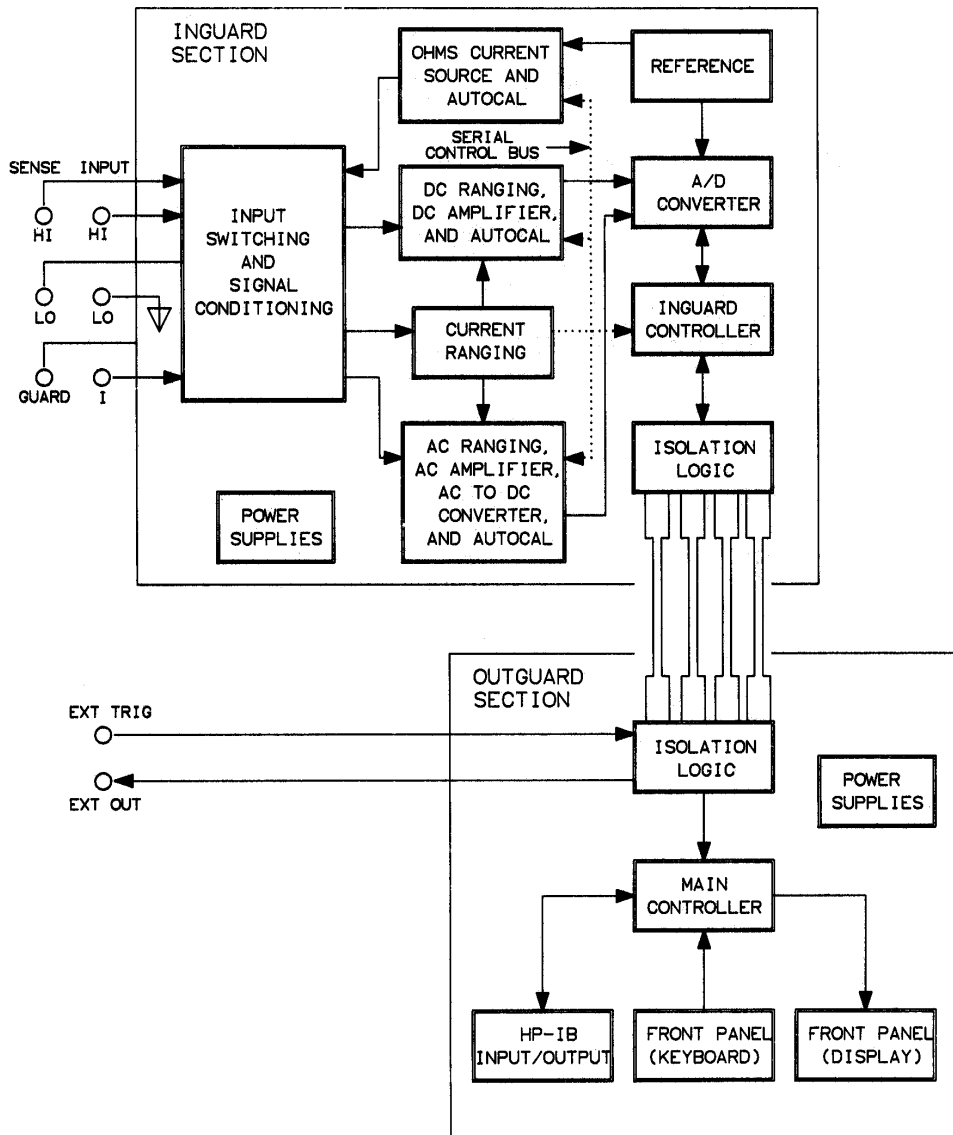


Figure 4-1 3458A simplified block diagram

Outguard section

The outguard circuitry consists of the main controller, GPIB circuitry, front panel circuitry (keyboard and display), isolation circuitry, and power supply. The outguard section controls the instrument through the isolation logic, provides the interface between the keyboard and display in the front panel, and communicates with instruments and controllers connected to the General Purpose Interface Bus (GPIB). The outguard circuitry is explained as follows.

Main controller

The Main Controller consists of a microprocessor, program ROMs, storage RAMs, calibration RAMs, and other associated circuitry. It controls the measurement operation of the instrument, communicates with the front panel (keyboard and display) and GPIB circuitry, performs the math operations, and calculates for the correct measurements. The correct measurements are calculated using the calibration constants in the calibration RAM which were stored during instrument adjustment.

GPIB circuitry

The GPIB circuitry provides communication between the 3458A and other instruments and controllers connected to the GPIB. Instrument control commands are transferred to the main controller and measurement data is transferred from the main controller through the GPIB circuitry.

Front panel circuitry

The front panel circuitry consists of keyboard and display circuitry. The main controller sends display data to the display circuitry to be displayed on the front panel. The keyboard circuitry interrupts the main controller when a key is pressed. The keyboard circuitry also sends data to the main controller that determines which key is pressed to perform the appropriate action.

Isolation logic

Since both the outguard and inguard circuitry are referenced to two different circuit grounds, they must be isolated from each other. To maintain this isolation, direct connections for communications cannot be used. The isolation logic is used to provide communication between the two circuits, while keeping them isolated from each other. The isolation logic uses fiber optic cables to transfer data between the inguard and outguard.

Inguard section

The inguard circuitry consists of all the analog, measurement circuitry (DC circuitry, AC converter, etc.), analog-to-digital (A/D) converter, inguard controller, and power supply. The inguard circuitry performs all instrument measurements and converts the analog measurement data into digital measurement data. This digital measurement data is transferred to the outguard circuitry through the isolation logic. The inguard circuitry is explained as follows.

Input switching and signal conditioning

This circuitry connects the signal path from the front/rear input terminals to the appropriate DC, AC, or Ohms circuitry. The circuitry also provides the means for an Autozero measurement. In an Autozero measurement, the input of the DC and AC amplifiers is connected to ground for an offset measurement. This measurement is stored in memory and subtracted from the subsequent measurement taken at the front/rear terminals.

DC ranging, DC amplifier, and autocal

The A/D converter requires the same full-scale input voltage for full-scale inputs on all ranges. For example, a 10 V full scale input is required for all full scale inputs on the 0.1 V, 1 V, 100 V, and 1000 V ranges. This requirement is met by the DC circuitry (DC amplifier in conjunction with the DC ranging circuitry). For the lower 1 V and 0.1 V ranges, the circuitry amplifies the input voltage by a gain of X10 and X100, respectively. For the 10 V range, the gain is 1. For the higher 100 V and 1000 V ranges, the circuitry attenuates the inputs by 100. This results in full-scale voltages of 1 V and 10 V for the 100 V and 1000 V ranges, respectively. The 1 V and 10 V amplifier gains will then be used for these ranges.

The DC autocal constants are also generated by the Autocal circuitry in conjunction with the DC ranging and DC amplifier circuitry.

AC ranging, AC amplifier, AC to DC converter, and autocal

The A/D converter also requires the same full-scale input voltage for full-scale inputs on all AC volts and AC + DC volts ranges. In addition, the inputs to the A/D converter must be DC volts and not AC volts. Both of these requirements are met using the AC circuitry (AC ranging, AC amplifier, and AC to DC converter). The AC and AC + DC volts to DC volts conversion method used is True RMS. This method is used since the converter must convert both DC and AC voltages.

The AC autocal constants are also generated by the Autocal circuitry in conjunction with the AC ranging, AC amplifier, and AC to DC converter circuitry.

The AC circuitry is also used for track/hold measurements. Although these measurements are DC volts measurements, the AC circuitry is used due to its higher bandwidth. Track/hold requires a higher bandwidth than the DC circuitry provides.

Current ranging

The 3458A measures current by measuring the voltage across a shunt resistor. This voltage and the shunt resistor value are then used to calculate the current. The outguard circuitry calculates the correct current value.

The current ranging circuitry is composed of the shunt resistors for the different current ranges and the switches to select the ranges. Depending on the type of current measured (AC or DC current), the circuit is also used to apply the measured voltage to the appropriate circuitry (AC or DC circuitry).

Ohms current source and autocal

Resistance measurements are made by applying a known current to the unknown resistor and then measuring the voltage drop across it. From this the correct resistance is then calculated by the outguard.

The ohms current source circuitry generates the different currents for resistance measurement ranges. The DC voltage measurement across the unknown resistance is made by the DC ranging and DC amplifier circuitry.

The ohms autocal constants are also generated by the Autocal circuitry in conjunction with the ohms current source.

Reference

The reference circuit serves two functions. It provides a very stable reference voltage for the A/D converter and the Ohms current source. This voltage is necessary for accurate analog-to-digital conversion and to generate accurate currents for resistance measurements. The reference voltage is generated by a diode selected at the factory for excellent long-term stability.

Analog-to-digital (A/D) converter

The A/D converter converts the applied DC voltage to digital data. It uses a multi-slope conversion process to convert analog voltages to digital data. The digital data is sent to the outguard through the isolation logic circuitry.

Inguard controller

The inguard controller controls the measurement process. It receives function and range data from the outguard and then sets the appropriate switches in the inguard. The inguard controller also controls the operation of the A/D converter.

Assembly Level Troubleshooting

3458A failures

To troubleshoot the 3458A, first determine what the failure is. Then use the information in the following paragraphs to determine the defective assembly.

Failures can show up in a variety of ways. Some failures are obvious, like a completely inoperative instrument or a self-test failure. Other failures may only show up during the performance tests. Others yet will only show up under certain conditions, like the instrument working from the front panel but not from remote. In most cases, the 3458A failures can be separated into the following major categories.

- 1** Turn-On Failures - these failures are as follows:
 - a** 3458A Inoperative with Blank Display
 - b** 3458A Inoperative with Unintelligible Messages in Display
 - c** Isolator Failure
 - d** RAM Failure
- 2** Self-Test Failures - these are detected during the 3458A's self-test.
- 3** Performance Tests Failures - these are detected during the 3458A's performance test,
- 4** Miscellaneous Failures - these failures are as follows:
 - a** GPIB Failure (Self-Test passes)
 - b** Ext Out Failure
 - c** Ext Trig Failure
 - d** Fan Inoperative
 - e** Long Term Stability Failure

Turn-on failures

These failures normally show up when the instrument is first turned on and it attempts to go through its power-on self-test. The following paragraphs explain these failures and how to troubleshoot them.

3458A inoperative with blank display

A blank display can indicate two things: either the instrument is completely inoperative or the display is defective. Do the following:

- 1 Turn the instrument on. The instrument should beep once and then go through its power-on self-test. During this time, you should hear some relays switching. When completed, the instrument will beep once again. This indicates that the instrument has completed its power-on self-test.
- 2 If the above power-on self-test sequence takes place (i.e., a beep is output and the relays switch), the Display Logic (A7) assembly is most likely defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Display Logic (A7) assembly.
- 3 If the power-on self-test sequence does not take place, first check for a defective outguard power supply. Go to the Power Supplies troubleshooting procedures in this chapter of the manual to check the supplies.
- 4 If the outguard power supplies are defective, go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Outguard Power Supply (A6) assembly.
- 5 If the outguard power supplies check good, the Outguard Controller (A5) assembly may be defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Outguard Controller (A5) assembly.
- 6 If after replacement of the Outguard Controller (A5) assembly the instrument is still inoperative, the logic circuitry on the Outguard Power Supply (A6) assembly may be causing the failure. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Outguard Power Supply (A6) assembly.

3458A inoperative with unintelligible messages in display

This normally indicates that the Display Logic is probably working but that the Outguard Logic may be inoperative. Do the following:

- 1 First check for a defective outguard power supply. Go to the Power Supplies troubleshooting procedures in this section of the manual to check the supplies.
- 2 If the outguard power supplies check good, the Outguard Controller (A5) assembly may be defective. Go to the [Assemblies Removal/Installation](#)

Procedures in **Chapter 3** of this manual to replace the (A5) Outguard Controller assembly.

- 3** If after replacement of the (A5) Outguard Controller assembly the instrument is still inoperative, the logic circuitry on the Outguard Power Supply (A6) assembly may be causing the failure. Go to the **Assemblies Removal/Installation Procedures** in **Chapter 3** of this manual to replace the Outguard Power Supply (A6) assembly.

Isolator failure

For isolation logic failures, the message "ISOLATOR FAILURE" will be displayed after the power-on self-test is completed. The instrument then locks up and no front panel/remote control is possible. Either the inguard or outguard isolation logic can cause the failure. Do the following:

- 1** Use the Covers Removal/Installation procedures in **Chapter 3** of this manual to remove the instrument's bottom cover and bottom shield.
- 2** Turn the instrument on. Go to the Power Supplies troubleshooting procedures in this chapter of the manual to check both the inguard and outguard power supplies.
- 3** If the power supplies check good, the failure can either be on the Outguard Power Supply (A6) assembly or the A/D Converter and Inguard Logic (A3) assembly. These assemblies can cause the failure since the isolation logic circuitry is on both assemblies and the self-test is unable to differentiate between the failures on the two assemblies. In addition to these, the (A5) Outguard Controller assembly could also cause the failure. However, most failures will most be caused by the A3 or A6 assemblies.
- 4** Try replacing the Outguard Power Supply (A6) assembly first. Go to the **Assemblies Removal/Installation Procedures** in **Chapter 3** of this manual to replace the assembly.
- 5** If after replacing the Outguard Power Supply (A6) assembly the test still fails, try replacing the A/D Converter and Inguard Logic (A3) assembly. Go to the **Assemblies Removal/Installation Procedures** in **Chapter 3** of this manual to replace the assembly.
- 6** If after replacing the Outguard Power Supply (A6) assembly the test still fails, try replacing the (A5) Outguard Controller assembly. Go to the **Assemblies Removal/Installation Procedures** in **Chapter 3** of this manual to replace the assembly.

RAM failures

These failures show up when the checksum of either the RAM or the Calibration RAM is incorrect. If a failure occurs, a message indicating that the checksum is incorrect will be displayed. Since both RAMs are located on the Outguard Controller (A5) assembly, replace that assembly for any RAM failure. Use the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.

Self-test failures

General

The 3458A self-tests perform very extensive tests on the instrument circuitry so that most hardware or calibration self-test failures will be detected by these tests.

Self-test failures can show up either during the power-on self-test or during the front panel selectable self-test. The power-on self-test is automatically performed after the instrument is turned on. The complete self-test must be selected from the front panel. To select this test, press the blue “SHIFT” key and then the 'Test" (left arrow) key.

Self-test failure indication

The power-on and selectable self-tests use two different ways to indicate failures. With the power-on test, the “ERR” annunciator in the display normally turns on to indicate that a test has failed. In addition to the “ERR” annunciator, the message 'SELF TEST FAILED' will also be displayed.

Self-test error messages

Any time the 3458A detects a self-test failure; a corresponding error message is stored into the auxiliary error registers. To determine what failed, this error message must be retrieved from the registers and displayed. To display the message, press the blue “SHIFT” key and then the “Error” key (on the NUMERIC/USER keyboard). Once the message is displayed, it is then erased from the registers. Because of this, make sure you note the complete message before continuing. Use the right arrow key to view the complete message.

An error message is composed of two different parts, a number and a corresponding message that explains the failure. For example, the error message for an AC board failure looks like the following:

202, "HARDWARE FAILURE -- SLAVE TEST: AC BOARD"

NOTE

Remember, you need to use the left and right arrow keys to view the complete message.

The first number (2) in the message shows that this is a "200" series message. All hardware errors are stored as "200" series numbers. The other two numbers (02) show in what auxiliary error register the message is located. In the example, this is auxiliary register 2 (as in number 02).

This number also determines in which order the error messages are to be stored and displayed. This is done since more than one error message can be detected and stored into the registers. The lowest number is always stored and displayed first. Once it is displayed, the next lowest number can then be displayed, and so on. Use the blue "SHIFT" and "Error" keys combination to display the other messages.

Self-test failure troubleshooting

Before doing any self-test failure troubleshooting, go to the Power Supplies Troubleshooting procedures in this chapter of the manual to check the Outguard and Inguard Power Supplies.

If the power supplies check good, use the procedure in the previous paragraph to display the error messages. Then refer to [Table 4-2](#) to determine the most likely cause of the self-test failure. Do this for all error messages recorded in the error registers. Refer to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace a defective assembly.

“TEST VALUE OUT OF RANGE” error message

This error message indicates that a test did not meet certain pre-defined limits. The number displayed next to the message indicates the test limit that was exceeded during the test.

The number can be used to determine the assembly that caused the test to fail. Numbers from 62 through 189 indicate a failure on the DC Circuitry (A1) assembly. Numbers from 190 and above indicate a failure on the AC Converter (A2) assembly. Refer to the [Assemblies Removal/Installation Procedures in Chapter 3](#) of this manual to replace a defective assembly.

Performance test failures

Performance test failures are failures that may not be detected during the self-test but are detected during the performance tests. These failures may not be detected by the self-test due to the high accuracy of the 3458A.

Before assuming that a performance test has failed, you must make sure your test equipment and performance test methods have sufficient accuracy to check the 3458A. The 3458A is very accurate and needs very accurate standards to determine if a performance test has failed or not. Be sure to read the accuracy requirements in the 3458A Calibration Manual before troubleshooting performance test failures.

If you are sure that the 3458A fails a performance test, determine what function is inaccurate and then replace the appropriate assembly. The following lists the functions and probable corresponding assemblies.

- 1 DC Volts Function Failure -- DC Circuitry (A1) assembly.
- 2 DC Current Function Failure -- DC Circuitry (A1) assembly.
- 3 OHMS Function Failure -- DC Circuitry (A1) assembly.
- 4 AC Volts Function Failure -- AC Converter (A2) assembly.
- 5 AC Current Function Failure -- AC Converter (A2) assembly.

Table 4-2 Self-test error messages and probable causes

| Error number | Error message | Probable cause | Ref desig. | Assembly part number (RoHS) |
|--------------|----------------------------------|---------------------------------|------------|-----------------------------|
| 200 | Isolator (Recovered) | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| | | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 200 | Isolator Does Not Respond | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| | | Outguard Logic | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 200 | Unexpected Slave Processor Reset | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 201 | Nonvolatile RAM DTACK | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 201 | HPIB DTACK | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 201 | Timer DTACK | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 201 | Isolator DTACK | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 202 | Slave Self Test | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 202 | Slave Test: Isolator Date | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 202 | Slave Test: Intr Data | AC Converter | A2 | 03458-66522 |
| 202 | Slave Test: DC Board | DC Circuitry | A1 | 03458-66511 |
| 202 | Slave Test: AC Board | AC Converter | A2 | 03458-66522 |
| 202 | Slave Test: Overload | DC Circuitry | A1 | 03458-66511 |
| | | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 202 | Slave Test: Gate Array | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 202 | Slave Test: Convergence | DC Circuitry | A1 | 03458-66511 |
| | | A/D Converter and Inguard Logic | A3 | 03458-66533 |

Table 4-2 Self-test error messages and probable causes (continued)

| Error number | Error message | Probable cause | Ref desig. | Assembly part number (RoHS) |
|--------------|--------------------------------|---------------------------------|------------|-----------------------------|
| 202 | Slave Test: Interpolator | DC Circuitry | A1 | 03458-66511 |
| | | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 204 | DC VOS DAC Convergence | DC Circuitry | A1 | 03458-66511 |
| 204 | Precharge DAC Convergence | DC Circuitry | A1 | 03458-66511 |
| 204 | MC DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | Flatness DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | Level DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | AC VOS DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | Atten HF DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | AC AMP HF DAC Convergence | AC Converter | A2 | 03458-66522 |
| 204 | Interpolator Level Seek | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 204 | Interpolator DAC Convergence | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 204 | Reference Control Loop Failure | A/D Converter and Inguard Logic | A3 | 03458-66533 |
| 205 | Test Value Out of Range | See text | | |
| 206 | HPIB | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 206 | HPIB ASM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 207 | UART | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 207 | UART INTR | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 208 | Timer | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 208 | Timer INTR | Outguard Controller | A5 | 03458-66675 |

Table 4-2 Self-test error messages and probable causes (continued)

| Error number | Error message | Probable cause | Ref desig. | Assembly part number (RoHS) |
|--------------|----------------------|---------------------|------------|-----------------------------|
| | | | A5 | 03458-66675 |
| 210 | ROM 0 LOW CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 210 | ROM 1 LOW CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 210 | ROM 2 LOW CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 211 | ROM 0 HIGH CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 211 | ROM 1 HIGH CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 211 | ROM 2 HIGH CHECKSUM | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 212 | NONVOLATILE RAM HIGH | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 212 | NONVOLATILE RAM LOW | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 213 | Optional RAM 0 High | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 214 | Optional RAM 0 Low | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 214 | Optional RAM 1 High | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |
| 214 | Optional RAM 1 Low | Outguard Controller | A5 | 03458-66675 |
| | | | A5 | 03458-66675 |

Refer to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace a defective assembly.

Miscellaneous failures

The following failures are those that are not detected by either the self-tests or the performance tests.

GPIB failure (Self-test passes)

This failure is normally caused by a defective GPIB Connector. Try cleaning the connector. If still inoperative, try replacing the Outguard Controller (A5) assembly. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.

Ext out failure

This failure can be caused by a defective cable or an inoperative isolation logic circuitry. Note that the Ext Out function can be disabled by the "EXTOUT 0" command. Be sure the function is enabled before troubleshooting the failure. To enable the function, reset the instrument.

To troubleshoot an Ext Out failure, do the following:

- 1** Use the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's bottom cover.
- 2** Refer to [Figure 4-2](#) to locate the Ext Out/Ext Trig cable plugged in on the Outguard Power Supply (A6) assembly. Unplug the cable from socket P301.
- 3** Connect an oscilloscope (a logic probe can also be used) to the Ext Out connection on the Ext Out/Ext Trig connector (P301). The Ext Out connection is on the connector's outside pin facing the inguard.
- 4** Turn the instrument on and wait until it completes its self-test. When the instrument starts to trigger, a 1 μ S negative going pulse should be detected by the oscilloscope (or logic probe) at each trigger.
- 5** If a pulse is detected, check the cable going to the Ext Out connector on the rear panel.
- 6** If no pulse is detected, the isolation logic circuitry or the A/D Converter and Inguard Logic (A3) assembly may be defective. Try replacing the A/D Converter and Inguard Logic (A3) assembly first, then, if still inoperative, try replacing the Outguard Power Supply (A6) assembly. Refer to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assemblies.

Ext trig failure

These failures can be caused by a defective cable or an inoperative isolation logic circuitry.

To troubleshoot an Ext Trig failure, do the following:

- 1** Use the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's bottom cover.
- 2** Refer to [Figure 4-2](#) to locate the Ext Out/Ext Trig cable plugged in on the Outguard Power Supply (A6) assembly. Unplug the cable from socket P301.
- 3** Turn the instrument on and wait until it completes its self-test. Then select the EXT TRIG mode by executing the following:
 - a** Press the “Trig” key on the MENU keyboard. “TRIG” should now be displayed with a flashing cursor next to it.
 - b** Press the “UP ARROW” key on the FUNCTION/RANGE keyboard three times. “TRIG EXT” should now be displayed.

- c Press the “Enter” key on the NUMERIC/USER keyboard. The instrument should now be in the external trigger mode.
- 4 While viewing the 3458A display, temporarily connect a cliplead between chassis ground and the Ext Trig connection on the Ext Out/Ext Trig connector (P301). The Ext Trig connection is on the connector's outside pin facing the instrument's outside edge.
- 5 The instrument should now trigger each time the pin is connected to ground.
- 6 If triggering occurs, check the cable going to the Ext Trig connector on the rear panel.
- 7 If no triggering occurs, the isolation logic circuitry or the A/D Converter and Inguard Logic (A3) assembly may be defective. Try replacing the A/D Converter and Inguard Logic (A3) assembly first, then if still inoperative, try replacing the Outguard Power Supply (A6) assembly. Refer to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assemblies.

Fan inoperative

This failure can be caused by the fan power supply, the fan cable, or by the fan itself. The fan uses a +15 V power supply to operate. This power supply is on the Outguard Power Supply (A6) assembly. Do the following:

- 1 Use to the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's bottom cover.
- 2 Refer to [Figure 4-2](#). Unplug the 2-pin cable from socket P3. The cable is connected to the fan.
- 3 Turn the instrument on. Use a digital multimeter to measure for approximately +15 V at socket P3, as shown in [Figure 4-2](#).
- 4 If the voltage is good, the fan or fan cable may be defective. Since the fan and cable are considered one assembly, replace the complete fan assembly.
- 5 If the voltage is wrong, go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Outguard Power Supply (A6) assembly.

Long term stability failure

A Long Term Stability failure is normally detected during a DC voltage performance test. If for instance, the instrument fails the DC performance test before the completion of the calibration period (for example, 24 hours to 2 years) corresponding to the test limits against which the instrument is tested. This failure may be because of the 3458A's long-term stability. A defective DC Reference (A9) assembly causes this failure. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.

Power Supplies Troubleshooting

Before troubleshooting the power supplies, do the following:

- 1 Make sure the power line voltage select switches are in the correct position. Also make sure the correct power fuse is installed and that the fuse is good. Refer to [Chapter 2, Table 2-1](#) for the correct switch positions and fuses.

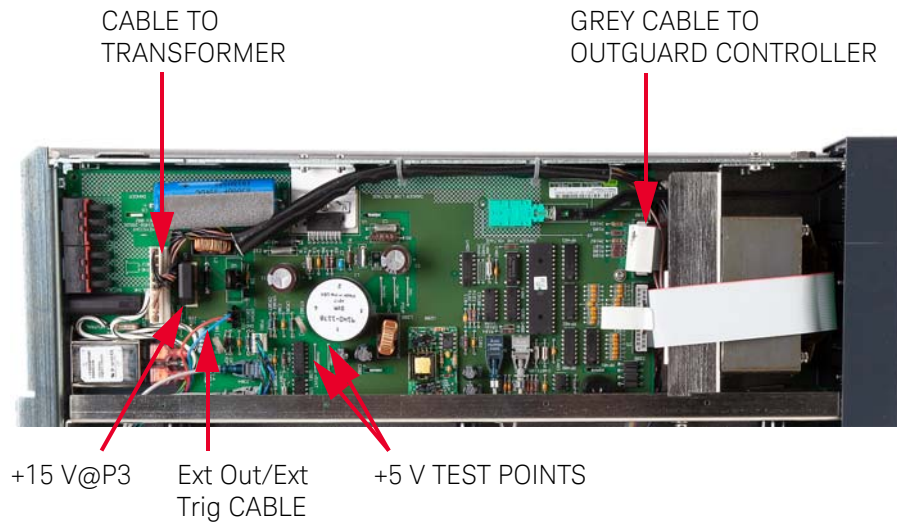


Figure 4-2 Outguard power supply

- 2 If the switch positions are correct and the fuse is good, go to the appropriate procedures to troubleshoot the suspect power supply.
- 3 If the ac power fuse is blown, try replacing the fuse first. If the fuse still blows, do the following:
 - a Use the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's top/bottom cover and bottom shield.
 - b Refer to [Figure 4-2](#) to locate the 8-pin cable that connects the Outguard Power Supply (A6) assembly to the power transformer. Unplug the cable at the power supply assembly.

- c** Locate the 5-pin cable that connects the Inguard Power Supply (A4) assembly to the power transformer. Unplug the cable at the power supply assembly.
- d** Replace the ac power fuse with a new one. Apply AC power to the 3458A and turn it on.
- e** If the fuse still blows, replace the power transformer.
- f** If the fuse remains good, either the Outguard Power Supply (A6) or the Inguard Power Supply (A4) is defective. Continue with the next step.
- g** Turn the instrument off. Locate the 5-pin cable connected to the power transformer. Line up the cable with the socket on the Inguard Power Supply (A4) assembly. Then plug it in.
- h** Turn the instrument on.
- i** If the fuse blows again, use the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Inguard Power Supply (A4) assembly.
- j** If the fuse is good, use the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the Outguard Power Supply (A6) assembly.

Outguard power supplies troubleshooting

Do the following:

- 1** Use the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's bottom cover, if not previously removed.
- 2** Refer to [Figure 4-2](#). With the test digital multimeter, check for +5 V (± 0.25 V) at the test points shown in the figure.
- 3** If the voltages are good, the Outguard Power Supply assembly is good.
- 4** If a voltage is high, the Outguard Power Supply (A6) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.
- 5** If any voltage is low, the Outguard Controller (A5) assembly may be loading down the power supply. Continue with the next step.
- 6** Refer to [Figure 4-2](#). Unplug the gray 20 pin cable connected to the Outguard Controller (A5) assembly.

- 7 If the power supply voltages are now good, the Outguard Controller (A5) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.
- 8 If the voltage is still low, the Outguard Power Supply (A6) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.

Inguard power supplies troubleshooting

Do the following:

- 1 Use the [Covers Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to remove the instrument's bottom cover and bottom shield, if not previously removed.
- 2 Refer to [Figure 4-3](#). With the test digital multimeter, check for +5 V (± 0.13 V), +18 V (± 1.8 V), and - 18 V (± 1.8 V) at the test points shown in the figure.
- 3 If all voltages are good, the power supply assembly is good.
- 4 If a voltage is high, the Inguard Power Supply (A4) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.
- 5 If a voltage is low, other assemblies in the inguard may be loading down the power supply. Continue with the next step.
- 6 Refer to [Figure 4-3](#) to locate the gray 20-pin cable that connects the Inguard Power Supply (A4) assembly to the DC Circuitry (A1) assembly. Unplug the cable at the power supply assembly.
- 7 If the power supply voltage that was low is now good, the DC Circuitry (A1) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.

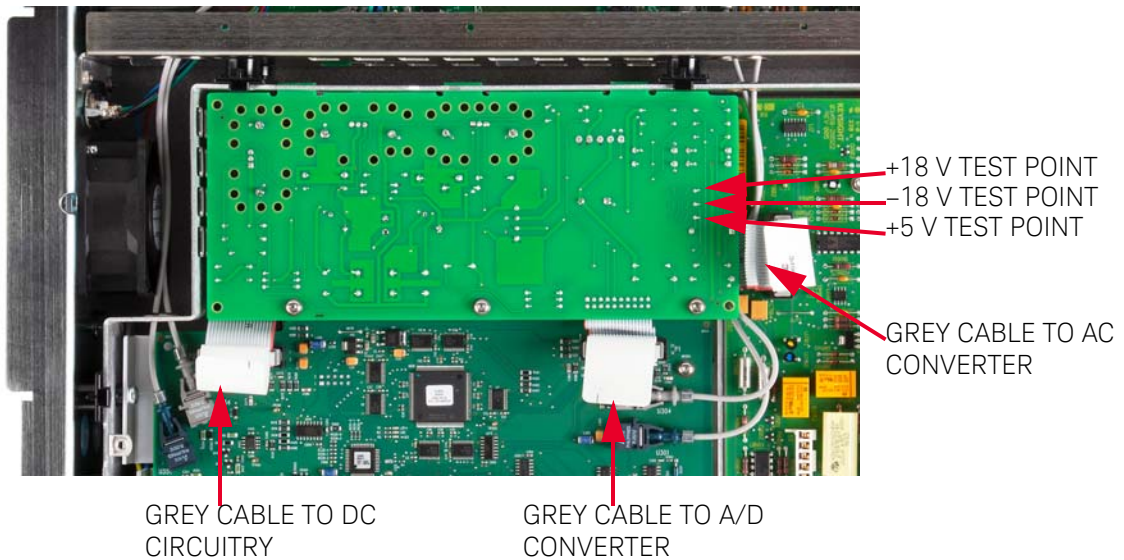


Figure 4-3 Inguard power supply

- 8** If the power supply voltage is still low, locate the gray 20-pin cable that connects the Inguard power Supply (A4) assembly to the AC Converter (A2) assembly. Unplug the cable at the power supply assembly.
- 9** If the power supply voltage is now good, the AC Converter (A2) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.
- 10** If the power supply voltage is still low, locate the gray 20 pin cable that connects the Inguard Power Supply (A4) assembly to the A/D Converter and Inguard Logic (A3) assembly. Unplug the cable at the power supply assembly.
- 11** If the power supply voltage is now good, the A/D Converter and Inguard Logic (A3) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.
- 12** If the power supply voltage is still low, the Inguard Power Supply (A4) assembly is defective. Go to the [Assemblies Removal/Installation Procedures](#) in [Chapter 3](#) of this manual to replace the assembly.



This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2019-2020
Edition 1, March 2020

Printed in Malaysia



03458-90018

www.keysight.com