

HP 85082A
50 ohm Input Module (300kHz to 2GHz)
Operating and Service Manual Insert

PLEASE READ THIS FIRST

INTRODUCTION

This package is designed to be used with the HP 8508A Vector Voltmeter mainframe Operating and Service Manual (HP part number 08508-90000) and the HP 70138A MMS Vector Voltmeter Service Manual (HP part number 70138-90002). The HP Model 85082A 50ohm Input Probe cannot be used independently of the HP 8508A or HP 70138A Vector Voltmeters.

INSTALLING THIS PACKAGE


Remove the skin-packing material from this package. Insert the package at the rear of the HP 8508A Vector Voltmeter Operating and Service Manual binder or at the rear of the HP 70138A MMS Vector Voltmeter binder. This package has different coloured tabbing from the mainframe content, for ease of identification.

HP 85082A 50ohm Input Module Insert (HP part number 85082-90000)

OPERATING AND SERVICE MANUAL INSERT

HP 85082A

**50 ohm
INPUT MODULE
(300kHz to 2GHz)**

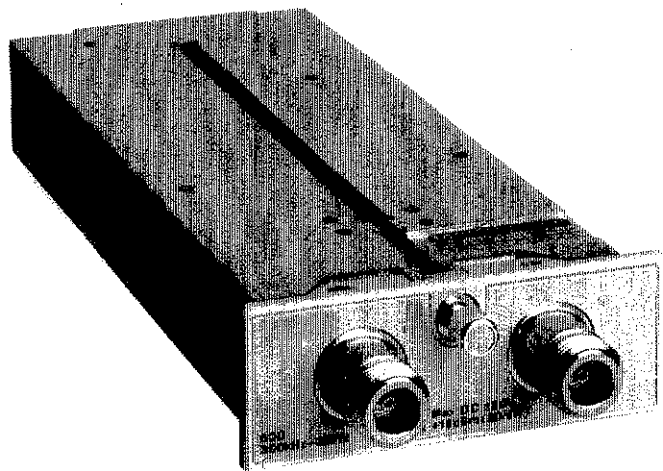

**HEWLETT
PACKARD**

HP 85082A 50 ohm INPUT MODULE

Operating and Service Manual Insert

First Edition

Copyright ©HEWLETT-PACKARD LIMITED
SOUTH QUEENSFERRY, WEST LOTHIAN, SCOTLAND EH30 9TG

Operating and Service Manual Insert HP Part 85082-90000

Microfiche Operating and Service Manual Insert HP Part 85082-90001

Printed in U.K. : March 1989



CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to the Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided in this manual.

Contents

SECTION 1 - GENERAL INFORMATION

Introduction	1-1
Specifications	1-1
Anti-static Precautions	1-1
Instruments Covered by Manual	1-2
Description	1-2
Recommended Test Equipment	1-2

SECTION 2 - INSTALLATION

Introduction	2-1
Initial Inspection	2-1
Installing the Module	2-1
Power Requirements	2-1
Operating Environment	2-2
Storage and Shipment	2-2
Environment	2-2
Packaging	2-2

SECTION 3 - OPERATION

Introduction	3-1
--------------	-----

SECTION 4 - PERFORMANCE TESTS

Introduction	4-1
Test Equipment Required	4-1
Test Records	4-2
Calibration Cycle	4-2
Performance Tests	4-2
Warm-up Time	4-3
Isolation Between Channels (Input Crosstalk)	4-4
Reference Channel Lock Level and Channel B Noise Floor	4-6
Phase Accuracy vs Frequency	4-8
Phase Offset Accuracy	4-11
Phase Accuracy vs Level	4-13
Amplitude Accuracy vs Frequency	4-16
Amplitude Accuracy vs Input Level (and rear panel output check)	4-19
Voltage Ratio Accuracy vs Level	4-21
SWR Measurement	4-23
Performance Test Records	4-24

SECTION 5 - ADJUSTMENTS

Introduction	5-1
Warm-up Time	5-1
Safety Considerations	5-1
Equipment Required	5-2

Contents

Post Repair Adjustments	5-2
Related Adjustments	5-2
Adjustable Components	5-3
Set up the SRD Bias, Channel A and B Bias, and the Delay Line Adjustments	5-4
Set up the Symmetry Adjustment for Channels A and B	5-10
Adjustment of the Gain of Channels A and B	5-12
Set up the Module Phase and Impedance	5-14

SECTION 6 - REPLACEABLE PARTS

Introduction	6-1
Abbreviations	6-1
Replaceable Parts List	6-1
Ordering Information	6-2
Direct Mail Order System	6-2

SECTION 7 - MANUAL CHANGES

Introduction	7-1
--------------	-----

SECTION 8 - SERVICE

Introduction	8-1
Anti-Static Precautions	8-1
Recommended Test Equipment	8-1
Troubleshooting	8-2
General Description	8-2
Servicing the Input Module	8-2
Troubleshooting Procedure	8-3

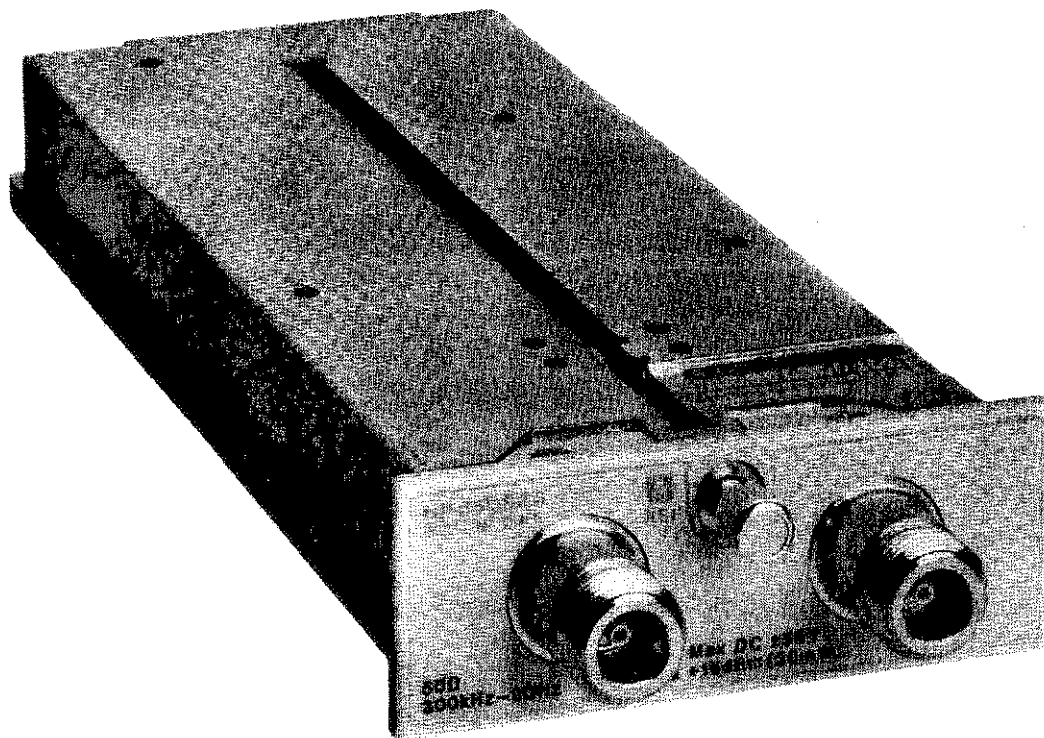


Figure 1-1. The HP 85082A 50 ohm Input Module

General Information

Section 1

1-1 INTRODUCTION

This service manual contains information required to install, test, adjust and service the Hewlett-Packard Model 85082A 50 ohm Input Probe. The HP 85082A 50 ohm Input Probe is shown in Figure 1-1.

On the title page of this manual is a Microfiche Part Number. This number can be used to order 4 x 6 inch microfilm transparencies of the manual. Each microfiche contains up to 96 photo duplicates of the manual pages.

1-2 SPECIFICATIONS

Instrument specifications are listed in Table 1-2. These specifications are the performance standards or limits against which the instrument is tested. The specifications listed apply when the HP 85082A is installed in either an HP 8508A Vector Voltmeter mainframe, or an HP 70138A MMS Vector Voltmeter Module.

1-3 ANTI-STATIC PRECAUTIONS

The printed circuit board contained in this instrument and the probes have components that are susceptible to damage by electrostatic discharge (ESD). To minimize the risks of damaging or decreasing the reliability of the instrument, the following procedures and cautions should be observed.

Static-free Workstation: All unpackaging and servicing should be carried out at a static-free workstation whenever practical.

De-soldering: When de-soldering components, ensure that the soldering iron is earthed. Always use a metalized solder remover.

Anti-Static Freezer Spray: When attempting to locate a temperature-related fault, use only an approved anti-static freezer spray.

Anti-Static Products: Table 1-1 contains details of anti-static products which are available from Hewlett-Packard.

Table 1-1. Anti-Static Products

Product	HP Part Number
Anti-static workstation kit	9300-0792
Metalized Solder Remover	8690-0227
Wrist-strap	9300-0970

1-4 INSTRUMENTS COVERED BY MANUAL

DATE CODE

The year and week of manufacture are stamped on the circuit board and also on the outer casing of the module. Example: "8-18" would indicate week 18 of 1988. There is no serial number.

SERIES CODE

A four-digit series number is contained on a serial number plate. This number should match the series number on the title page of this manual. An instrument manufactured after the printing of this manual may have a series number that is not listed on the title page. The unlisted series number indicates that the instrument is different from those described in this manual. The manual for this new instrument may be accompanied by a Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the new instrument.

In addition to change information, the supplement may also contain information for correcting errors in the manual. To keep this manual as current and as accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified by the manual print date and part number (both of which appear on the manual title page). Complimentary copies of the supplement are available from Hewlett-Packard. For information concerning a series number that is not listed on the page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

1-5 DESCRIPTION

The Hewlett-Packard Model 85082A 50 ohm Input Probe is a plug-in module for the HP 8508A Vector Voltmeter and the HP 70138A MMS Vector Voltmeter Module. The HP 85082A can measure signals in the frequency range 300kHz to 2GHz and at levels from -47dBm to 13dBm.

1-6 RECOMMENDED TEST EQUIPMENT

Table 1-1 in the HP 8508A Vector Voltmeter manual lists the test equipment required for testing, adjusting and servicing the HP 8508A Vector Voltmeter and the HP 85082A 50ohm Input Probe. Table 1-1 in the HP 70138A MMS Vector Voltmeter Service Manual lists the equipment required for testing and adjusting the HP 70138A MMS Vector Voltmeter and the HP 85082A 50ohm Input Probe. The Critical Specifications column describes the essential requirements for each piece of test equipment. Other equipment can be substituted if it meets or exceeds the critical specifications.

Table 1-2. Specifications

Specifications describe the instrument's warranted performance over the temperature range 0 to 55 deg C unless otherwise stated. Typical values describe typical, but non-warranted, performance. Nominal values are given as a guide to expected performance.

Measurement conditions: All specifications apply to measurements in a 50 ohm system and with frequency autoranging off, unless otherwise stated.


Frequency Range	300kHz-2GHz	
Maximum Input	16dBm, \pm 50Vdc	
Measurement Range		
A and B Channel maximum	Magnitude measurements	3dBm, 300kHz-1MHz, 1GHz-2GHz 13dBm, 1MHz-1GHz
A (Ref) Channel minimum	Phase measurements	3dBm, 300kHz-2GHz -47dBm, 300kHz-3MHz -57dBm, 3MHz-2GHz
B (Meas) Channel noise floor		-87dBm, 300kHz-2GHz
Measurement bandwidth	1kHz (nominal)	
Input Crosstalk	>100dB, 300kHz-500MHz >80dB, 500MHz-1GHz >70dB, 1GHz-2GHz	
Impedance	SWR<1.2, 300kHz-1.5GHz SWR<1.5, 1.5GHz-2GHz	
Magnitude Characteristics		
Resolution:	3 1/2 digits	
Accuracy:	Amplitude accuracy is specified for both ratio and absolute measurements. Each case has two components - accuracy vs level and accuracy vs frequency. Add either the ratio or the absolute uncertainty components from the following graphs, using the information on each graph to decide if the uncertainty applies to the particular measurement.	

General Information

Ratio Accuracy vs Level (1) (3)


Add this term when making:
Ratio measurements at any single frequency.

(Accuracy vs level is normally determined by the lower level signal. Noise (<320uV) and compression (>100mV) effects cause additional errors.)

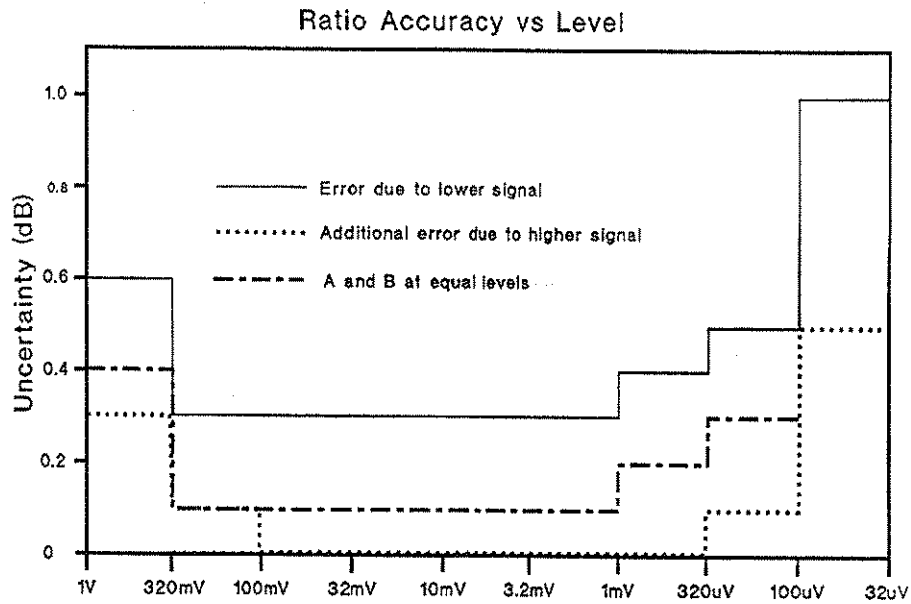

Absolute Accuracy vs Level (1) (2) (3)


Add this term when making:
Absolute measurements.

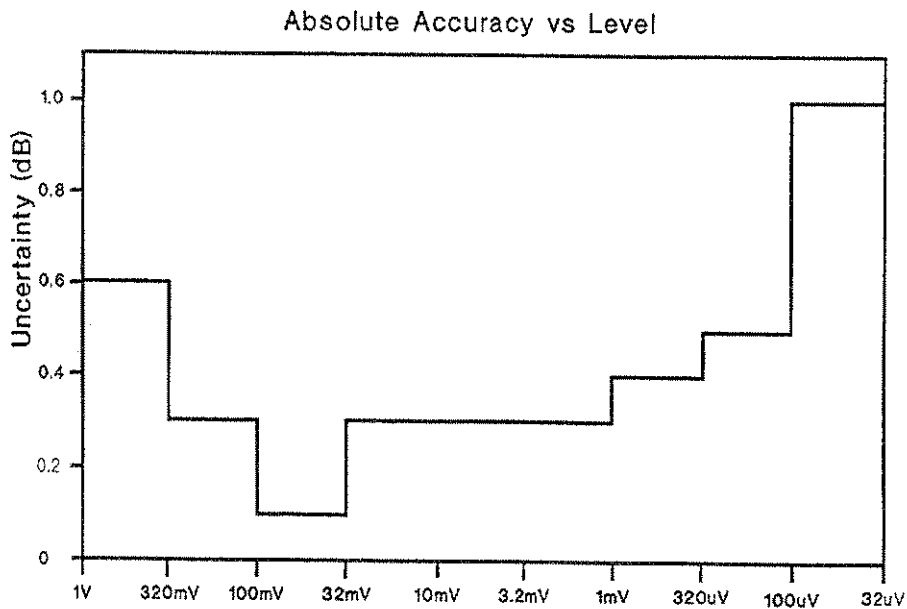

Amplitude Accuracy vs Frequency(1) (4)
 (A and B 100mV nominal)

Add this term when making:
 Absolute measurements.
 Ratio measurements over a frequency range.

Ignore this term when making:
 Ratio measurements where the measurement is normalized to a reference at each new frequency.

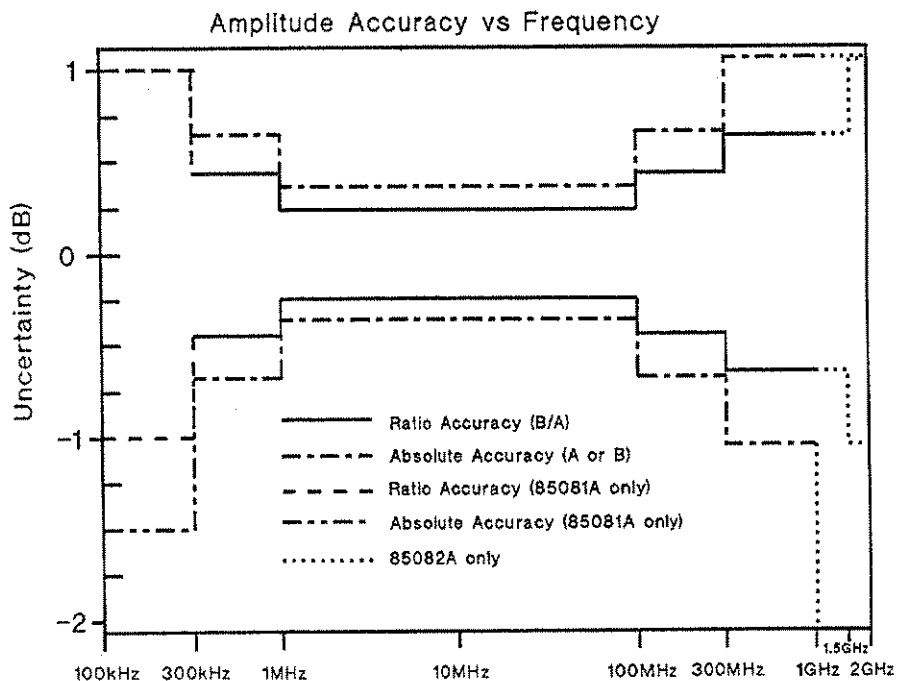

Phase Characteristics

Display Range: -179.9 to +180.0 degrees


Display Resolution: 0.1 degrees

Accuracy: Phase accuracy has two components - phase accuracy vs level and phase accuracy vs frequency. Add the uncertainty components from the following graphs using the information on each graph to decide if the uncertainty applies to the particular measurement.

General Information

Phase Accuracy vs Level (5) (6) (7)


Add this term when making:
Phase measurements at any single frequency.

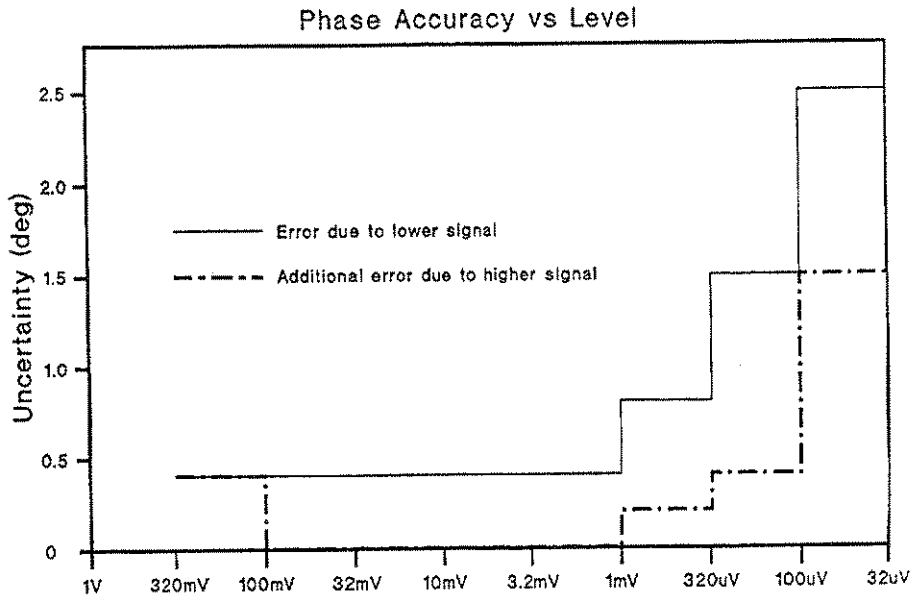

Phase Accuracy vs Frequency (5) (6)
(A and B 100mV nominal)

Add this term when making:
Phase measurements over a frequency range.

Ignore this term when making:
Phase measurements where the measurement is normalized to a reference at each new frequency.

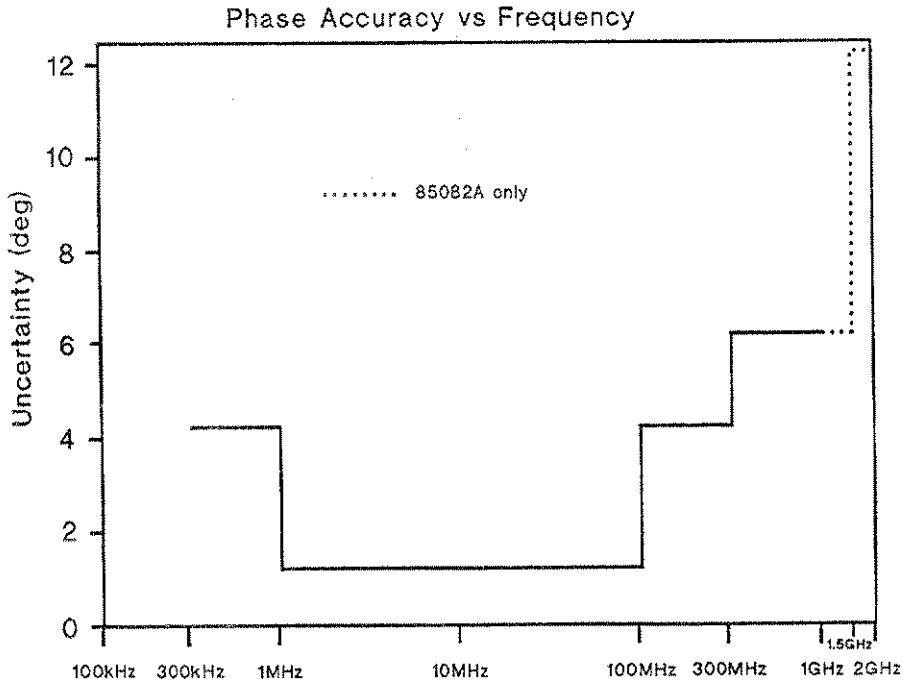

Footnotes

- (1) 15 to 30 degrees C. Add ± 0.1 dB per 5 deg C outside this range.
- (2) A minimum input level depends on frequency. See Measurement Range.
- (3) Add ± 0.5 dB for signals above 100mV at frequencies greater than 500MHz.
- (4) A and B absolute value includes ± 0.15 dB source traceability error.
- (5) 15 to 30 degrees C. Add 1 deg per 5 deg C outside this range.
- (6) Add ± 3 deg for signals above 100mV at frequencies greater than 500MHz.
- (7) Add ± 0.4 deg phase non-linearity for measurements other than 0 deg.

General

Search and lock time

Automatic tuning starts from lowest frequency and searches consecutive bands. Total search and lock time depends on the number of bands to be scanned and the lockup time within the selected band.

Process start time:	50ms after lock is lost.
Lockup (within 1 range):	40ms, frequencies up to 3MHz 20ms, frequencies greater than 3MHz
Ranges (MHz):	0.1-0.2, 0.2-0.6, 0.6-1, 1-3, 3-5, 5-8, 8-15, 15-25, 25-50, 50-80, 80-150, 150-250, 250-500, 500-1000, 1000-2000

Rear Panel Outputs:

Normal Operation: Provides an analog representation of the digital display values, including internal instrument correction factors.

OUTPUT 1 corresponds to DISPLAY 1, OUTPUT 2 corresponds to DISPLAY 2.

Range: 0 to ± 1999 display counts.

Sensitivity: 1mV represents 1 display count (nominal).

For readings greater than ± 1999 counts, the rear panel output voltage will remain fixed at ± 2.0 Volts.

Display resolution can be controlled by manual ranging.

Update rate: Approximately 3 readings per second.

Direct Analog Output: Provides continuous direct output from the internal magnitude and phase detectors through 800Hz low-pass filters. No internal correction is applied.

OUTPUT 1 corresponds to linear magnitude (A or B selected by front panel control).

Sensitivity: 1V equals displayed full scale deflection (nominal). Can be controlled by manual ranging.

OUTPUT 2 corresponds to B-A phase.

Sensitivity: 10mV per degree (nominal).

Phase Jitter: < 3 deg rms (typical, A=100mV, B=100uV)

HP-IB Capability

Interface functions:

SH1 AH1 T6 TEO L4 LEO SR1 RL1 PPO DC1 DT1 C0

Transfer Rate:

Normal Operation: Approximately 12 readings per second.

Measurement Conditions: Triggered measurement, default averaging.

Maximum Rate: Approximately 1 reading per 18ms.

Measurement conditions: Continuous output, averaging count 0, system format FP64, display rate off, equal steady state signals at A and B inputs, single output of phase or linear A or B voltage.

General Information

Probe Power Supply

Supplies: +12 and -12 volts and ground
This supply is sufficient to operate 1 HP 85024A High Impedance Probe.

Environment

Temperature: 0 to 55 deg C (operating), -40 to 70 deg C (storage)
Humidity: 0 to 95%, non-condensing
Altitude: 0 to 4500m (operating), 0 to 15000m (storage)

RFI: Conducted and radiated interference is within the requirements of
Messemphaenger-Postverfuegung 526/527/79.

Power: 100, 120, 220 or 240V +5/-10%, 48 to 440 Hz, 40VA

Size: Std: 133mm (5.25in) H x 425.5mm (16.75in) W x 473.3mm (18.65in) D

Weight: Std: 8.1kg (net) 11kg (shipping)

Installation

Section 2

2-1 INTRODUCTION

This section provides installation instructions for the Hewlett-Packard Model 85082A 50 ohm Input Module. This section also includes information about initial inspection and damage claims, preparation for use, packaging, storage and shipment.

2-2 INITIAL INSPECTION

WARNING

IF THERE IS ANY SIGN OF SHIPPING DAMAGE TO THE INSTRUMENT, DO NOT INSTALL IN THE HP 8508A MAINFRAME, OR THE HP 70138A MMS MODULE. RETURN THE INSTRUMENT TO THE NEAREST HEWLETT-PACKARD OFFICE FOR CHECKING.

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The Performance Tests check the complete specification of the instrument.

If the contents of the shipment are incomplete, if there is mechanical damage or defect, or if the instrument performance fails to meet specification, notify the nearest Hewlett-Packard office. If the shipping container is damaged or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping material for the carrier's inspection. The Hewlett-Packard office will arrange for repair or replacement at Hewlett-Packard's option without waiting for a claims settlement, providing that Hewlett-Packard and/or the carrier are notified within 12 days of shipment.

2-3 INSTALLING THE MODULE

The HP 85082A is installed in the opening on the front panel of the HP 8508A Vector Voltmeter or the HP 70138A MMS Vector Voltmeter. The HP 85082A should be carefully slid into the guides and pushed firmly to ensure the connectors are mated. The module should now be locked in place by turning the knob of the locking mechanism clockwise.

2-4 POWER REQUIREMENTS

The HP 85082A derives its power directly from the HP 8508A Vector Voltmeter mainframe or the HP 70138A MMS Vector Voltmeter.

2-5 OPERATING ENVIRONMENT

- Temperature:** The instrument may be operated in temperatures from 0° Centigrade to +50° Centigrade. (Refer to the specifications for limitations.)
- Humidity:** The instrument may be operated with humidity up to 90% up to 40° Centigrade. However, the instrument should also be protected from temperature extremes which may cause condensation within the instrument.
- Altitude:** The instrument may be operated at altitudes up to 4600m (15000ft).

2-6 STORAGE AND SHIPMENT

Environment

The instrument may be stored or shipped in environments within the following limits:

- Temperature:** -40° Centigrade to +75° Centigrade.
Humidity: up to 90% at 65° Centigrade.
Altitude: 15300m (50000ft).

The instrument should also be protected from temperature extremes which may cause condensation within the instrument.

Packaging

- Tagging for Service:** If the instrument is being returned to Hewlett-Packard for service, please complete one of the blue repair tags located at the front of this manual and attach it to the instrument.
- Original Packaging:** Containers and material identical to those used in the factory packing are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, model number and full serial number. Also mark the container "FRAGILE" to ensure careful handling.
- Other Packaging:** The following general instructions should be used for re-packaging with commercially available materials.
- (a) Wrap the instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service centre, attach a tag indicating the type of service required, return address, model number and full serial number.)
 - (b) Use a strong shipping container. A double-walled carton of 350-pound test material is adequate.
 - (c) Use a layer of shock absorbing material 70mm to 100mm (3 to 4 inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside the container. Protect the control panel with cardboard.
 - (d) Securely seal the shipping container.
 - (e) Mark the shipping container "FRAGILE" to ensure careful handling.
 - (f) In any correspondence, refer to the instrument by model number and date code.

Operation

Section 3

3-1 INTRODUCTION

This information is contained in the HP 8508A Vector Voltmeter mainframe and HP 70138A MMS Vector Voltmeter manuals.

Performance Tests

Section 4

4-1 INTRODUCTION

The Performance Test procedures in this section of the manual test the instruments electrical performance using the specifications listed in Table 1-2 of this manual as the performance standard. These specifications apply equally when the HP 85082A is used in either the HP 8508A or the HP 70138A Vector Voltmeter.

In the event of failure, refer to the Troubleshooting information in section 8 of this manual, except where specific reference is made to the Adjustment Procedures in section 5.

Power-on Checks

The Power-on Checks are performed automatically at switch-on. These checks test the operation of the mainframe processor, the functionality of the measurement modes and the presence of the HP 85082A Input Module. The Power-on Checks are part of the self-test routine used for operational verification.

Failure of these tests results in an Error Code number being displayed. Errors relating to the HP 85082A are in the 600 Series.

Performance Tests

The Performance Tests verify that the instrument is operating within the limits of the full specification. It should be noted, however, that the specifications apply to measurements in a 50 ohm system with the autoranging off.

In the event of a performance test failure, the test should be repeated with manual range selection and a check made of Adjustment Procedures and, if necessary, the Troubleshooting section.

4-2 TEST EQUIPMENT REQUIRED

Equipment required for the Performance Tests is listed in Table 1-1 in the HP 8508A or HP 70138A Vector Voltmeter manual. Any equipment which meets or exceeds the critical specifications may be substituted for the recommended model.

4-3 TEST RECORDS

The results of the Performance Tests may be recorded in Tables 4-2 to 4-10. The Test Records list all of the tested specifications and their acceptable limits. The results recorded at incoming inspection can be used for comparison in periodic maintenance and troubleshooting after repair or calibration.

4-4 CALIBRATION CYCLE

This instrument requires periodic verification of performance. Depending upon the use and environmental conditions, the instrument should be checked using the Performance Tests at yearly intervals.

4-5 PERFORMANCE TESTS

The Performance Test procedures provide a complete check of the instrument's electrical performance using the specifications listed in Table 1-2 as the performance standard. Table 4-1 gives a complete list of the Performance Tests. If any of the Performance Tests are out of specification, refer to section 5 of this manual and the appropriate Vector Voltmeter manual. If, after adjustment, the Specifications still cannot be met, refer to section 8 of this manual.

Table 4-1. Performance Tests

Test Title	Paragraph Number
Isolation between Channels (Input Crosstalk)	4-7
Reference Channel Lock Level and Channel B Noise Floor	4-8
Phase Accuracy vs Frequency	4-9
Phase Offset Accuracy	4-10
Phase Accuracy vs Level	4-11
Absolute Accuracy vs Frequency	4-12
Amplitude Accuracy vs Input Level (and rear panel output check)	4-13
Voltage Ratio Accuracy vs Level	4-14
SWR Measurement	4-15

4-6 WARM-UP TIME

The instrument must be switched on for a minimum of 30 minutes before carrying out any tests. Once the instrument's operating temperature has stabilized, perform an automatic internal instrument calibration by selecting [SHIFT] [CAL TEST] on the HP8508A or [Misc] [CAL] on the HP 70138A MMS system.

4-7 ISOLATION BETWEEN CHANNELS (INPUT CROSSTALK)

SPECIFICATIONS:

Input Crosstalk:	1 MHz - 500 MHz	> 100 dB
	500 MHz - 1 GHz	> 80 dB
	1GHz - 2GHz	> 70dB

DESCRIPTION:

Crosstalk is defined as the leakage interference between the instrument input channels. Crosstalk is tested by observing the signal level on a terminated input while applying a signal to the other input.

In this procedure, a maximum level signal of 1Vrms is applied to the Channel A input of the HP 85082A Input Module while the Channel B input is terminated in 50 ohms.

The crosstalk from Channel A to Channel B is indicated by an amplitude ratio measurement in DISPLAY 1.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Frequency Range Amplitude	1.0 -2000 MHz 1.0 V rms HP 8642B
50 Ohm Termination N(m)-N(m) Cable		HP 909C HP 11500A

PROCEDURE:

1. Configure the equipment as shown in Figure 4-1.

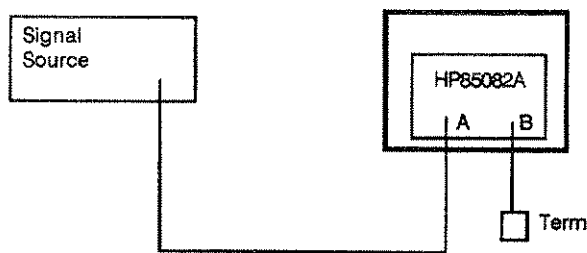


Figure 4-1. Channel Isolation Test Setup

2. Signal source setup:

Frequency: 1.0 MHz
 Amplitude: 1.0 V rms

3.	HP 8508A setup	HP 70138A Setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B/A MAG] [DISPLAY] dB	[Mag/Ph] [B/A MAG] [Format Functn] [dB]	B/A ratio measurement in dB, in DISPLAY 1.
	[LOCK RANGE] [SHIFT] [VIEW RANGE] "up"/"down" arrow keys to select 1-3MHz	[Lock Range] [1.0-3.0MHz]	Set frequency range.
	[LOCK RANGE]	[Lock Range] [AUTO LOCK]	Unlock frequency range.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration

4. Note the value obtained for the Input Isolation in DISPLAY 1 and record this value in the Performance Test Record (which is located at the end of the Performance Tests section).

5. Repeat this procedure for each frequency noted in the Performance Test Record.

Should the results in any particular frequency range fall outwith the specification limits, the test should be repeated with the instrument locked in the appropriate frequency range. The process for locking the frequency range is shown below.

The instrument can be locked into a particular frequency range as follows:

HP 8508A	HP 70138A
[LOCK RANGE]	[Lock Range] [<i>required frequency range</i>]
[SHIFT] [VIEW RANGE] "up"/"down" keys to select frequency range	
[LOCK RANGE]	[Lock Range] [AUTO LOCK]

Note: The frequency points in the Performance Test Record are a minimum requirement as they have been selected to coincide with the specification needs and ranges of the instrument.

4-8 REFERENCE CHANNEL LOCK LEVEL AND CHANNEL B NOISE FLOOR

SPECIFICATIONS:

Reference Channel Lock Level:	-47dBm, 300kHz - 3.0 MHz. -57dBm, 3.0 MHz - 2.0 GHz.
Channel B Noise Floor:	-87dBm, 300kHz - 2.0GHz.

DESCRIPTION:

In this procedure, Channel B is terminated in 50 ohms and the minimum signal amplitude (appropriate to the frequency), is applied to the reference channel (Channel A). The channel should then be locked onto this signal.

The noise floor is defined with the minimum signal applied to Channel A while Channel B is terminated in 50 ohms.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Frequency Range Amplitude	0.3 - 2000MHz 1mV
50 Ohm Termination N(m) - N(m) Cable		HP 909C HP 11500A

PROCEDURE:

1. Configure the test equipment as in Figure 4-2.

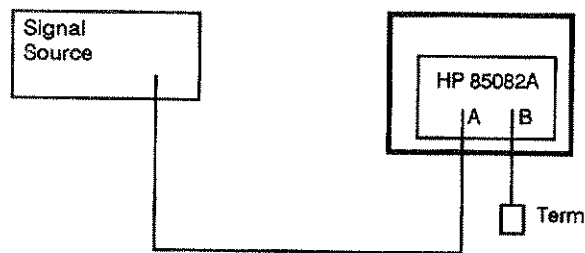


Figure 4-2. Test Setup for Reference Channel Lock Level and Channel B Noise Floor

2. Signal source setup:

Frequency: 300 kHz
Amplitude: -47dBm

3.	HP 8508A setup	HP 70138A setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B]	[Mag/Ph Measure] [DISPLAY 2] [B]	'A' voltage in DISPLAY 1 'B' voltage in DISPLAY 2
	[POWER MEAS]	[Format Functn] [dB]	Display readings in dBm.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration.

4. Disconnect and reconnect Channel A and check that Channel A relocks (indicated by a reading on DISPLAY 1).

5. Note the noise floor readings and enter them in the Performance Test Record (which is located at the end of the Performance Tests section.)

6. Repeat this procedure for each frequency defined in the Performance Test Record. At each point, check that Channel A is locked and note the Channel B noise floor level, as appropriate, at the different points.

Should the results in any particular range fall outwith the specification limits, the test should be repeated with the instrument locked in the appropriate frequency range.


The instrument can be locked into a particular frequency range as follows:

HP 8508A	HP 70138A
[LOCK RANGE]	[Lock Range] [<i>required frequency range</i>]
[SHIFT] [VIEW RANGE] "up"/"down" keys to select frequency range	
[LOCK RANGE]	[Lock Range] [AUTO LOCK]

Note: The frequency points in the Performance Test Record are a minimum requirement as they have been selected to coincide with the Specification needs and frequency ranges of the instrument.

4-9 PHASE ACCURACY vs FREQUENCY

SPECIFICATIONS:

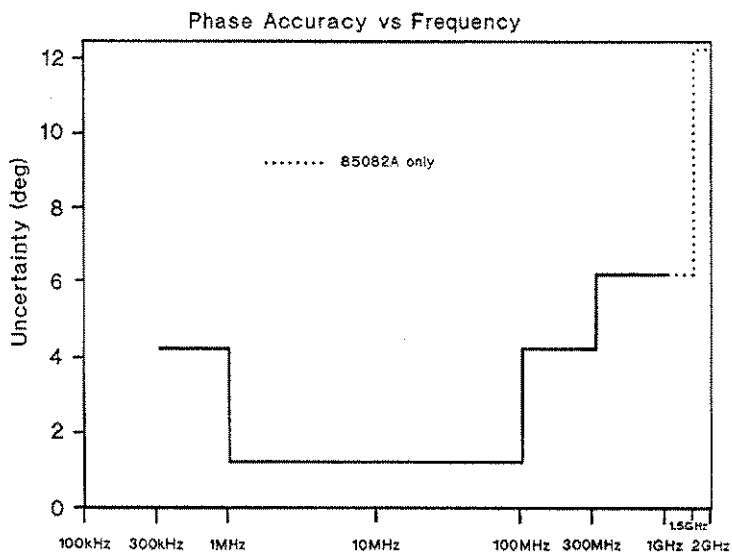

DESCRIPTION:

In this test, the Phase Uncertainty is tested through the frequency range of the instrument, from 300kHz to 2GHz, at a reference level of 100mV and zero phase difference between the channel inputs.

The test looks at the phase difference in the phase tracking of the two channels.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Frequency Range Amplitude	0.3 - 2000MHz 200 mV HP 8642B
Power Divider		HP 11636A
50 Ohm Termination		HP 909C
Phase Matched Cables		HP 11851B

PROCEDURE:

1. Configure the equipment as shown in Figure 4-3, connecting the probe divider outputs to the HP 85082A inputs with the phase matched cables.

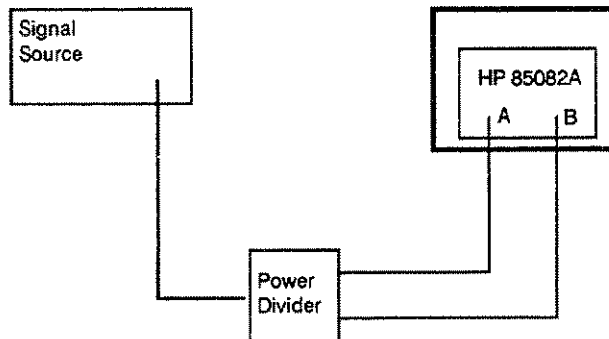


Figure 4-3. Phase Accuracy vs Frequency Test Setup

2. Signal source setup:

Frequency: 1.0 MHz
 Amplitude: 200mV (to produce a nominal output level of 100mV at the output of the power divider).

3:	HP 8508A setup	HP 70138A Setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B-A PHASE]	[Mag/Ph Measure] [DISPLAY 2] [B-A PHASE]	'A' voltage in DISPLAY 1 Phase in DISPLAY 2
	[LOCK RANGE] [SHIFT] [VIEW RANGE] "up"/"down" keys to select 1-3MHz	[Lock Range] [1.0-3.0MHz]	Set frequency range.
	[LOCK RANGE]	[Lock Range] [AUTO LOCK]	Unlock frequency range.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration

4. With the source output level maintained, at 200mV, vary the frequency in the sequence shown in the Performance Test Record and record the phase reading at each step. The Performance Test Record is located at the end of the Performance Test section.

Performance Tests

NOTE: For this measurement, it is critical that the differences in electrical path lengths and phase tracking of the power divider are removed from the measurement to minimize phase measurement errors. For any frequency point that may be outwith the specification limits, this source of error should be balanced out by using manual frequency range selection in conjunction with the following notes.

- a) Repeat the measurement as previously detailed and make a note of the phase lag or lead.
- b) Press [LOCK RANGE] on the HP 8508A, or [Lock Range] [AUTO LOCK] on the HP 70138A, to ensure that the instrument stays on the same range for both measurements.
- c) Interchange the two cables at the input of the HP 85082A, without disturbing the rest of the test setup.
- d) Make a note of this new value of phase lag or lead.
- e) These two measurements should be summed and the result divided by two. This result is the phase error due to the HP 85082A. The rest is due to phase unbalance.
- e) Repeat this process for any frequency noted as being out of specification.

4-10 PHASE OFFSET ACCURACY

SPECIFICATIONS:

Non-linearity of phase from 0 degrees is ± 0.4 degrees.

DESCRIPTION:

In this test, the channels are set up for a nominal level of 100mV, at a frequency of 1.0MHz. The phase between the two channels is then varied.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Dual Channel Synthesizer Frequency Range dc-13 MHz Amplitude 100mV	HP 3326A
Phase Matched Cables Adaptor N(f) to BNC (m) (2)		HP 11850B HP 1250-0077

PROCEDURE:

1. Configure the equipment as shown in Figure 4-4.

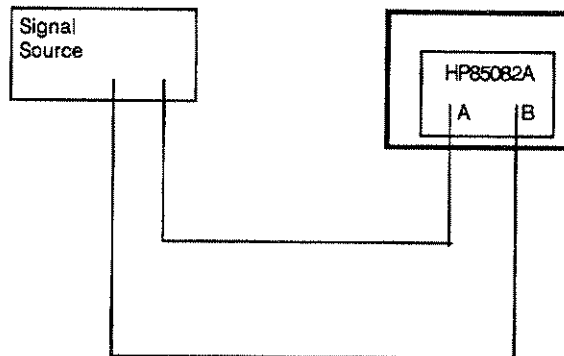


Figure 4-4. Phase Offset Accuracy Setup

Performance Tests

2. Signal source Setup:


Frequency: 1.0 MHz on both channels.
 Amplitude: 100mV rms on both Channels.
 Phase Offset: Zero.

3.	HP 8508A Setup	HP 70138A Setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B-A PHASE]	[Mag/Ph Measure] [DISPLAY 2] [B-A PHASE]	Amplitude in DISPLAY 1 Phase in DISPLAY 2
	[LOCK RANGE] [SHIFT] [VIEW RANGE] "up"/"down" arrow keys to select 1-3MHz	[Lock Range] [1.0-3.0MHz]	Set frequency range.
	[LOCK RANGE]	[Lock Range] [AUTO LOCK]	Unlock frequency range.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration
	[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalize system

4. With the frequency and level unchanged, vary the signal source phase offset between the channels as defined in the Performance Test Record and note the instrument reading at each step. The Performance Test Record is located at the end of the Performance Test section.

4-11 PHASE ACCURACY vs LEVEL

SPECIFICATIONS:

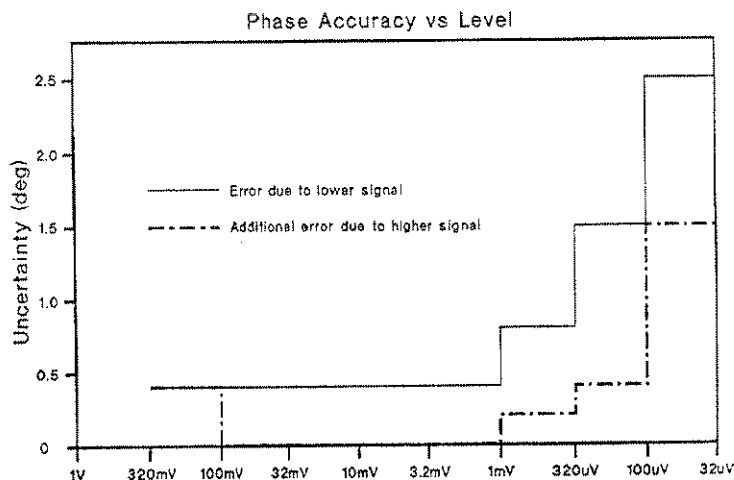

DESCRIPTION:

This test is a measure of the instrument's ability to measure phase as the signal level is varied. This is a function of the IF performance. This test can be repeated for other frequencies as required.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Frequency Range Amplitude	0.3 - 13MHz 19dBm
Power Divider	dc - 4 GHz Ins Loss O/P Tracking Phase Tracking	HP 11636A 6 dB < = 0.4 dB 2deg or better
Attenuator (2)	0-110 dB in 10 dB steps	HP 8496A/G Opt 890*
Attenuator Driver	Required for HP 8496G	HP 11713A**
Phase Matched Cables		HP 11851B

*Calibration required.

NOTE: The construction of the HP 8496 attenuator series is such that the change in electrical length (phase response) as attenuator sections are switched in and out is substantially less than the HP 85082A specifications. This may not be the case if different attenuators are substituted.

** Required if HP 8496G programmable attenuator is used.

PROCEDURE:

1. Configure the Test Equipment as shown in Figure 4-5.

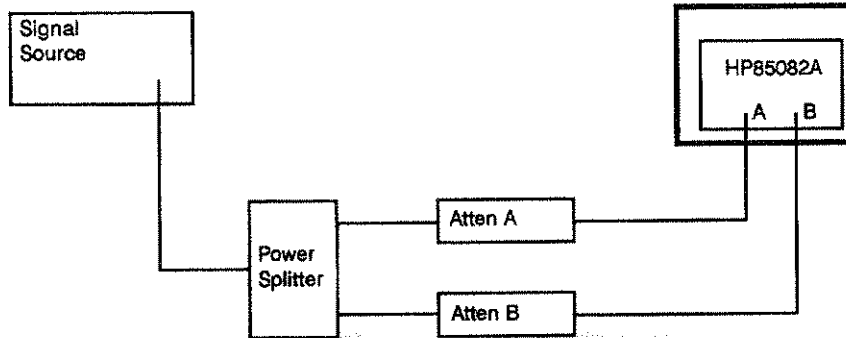


Figure 4-5. Phase Accuracy vs Level Test Setup

2. Set both attenuators to 20 dB.

3. Signal source setup:

Frequency: 1 MHz
 Amplitude: +19dBm


4.	HP 8508A setup	HP 70138A Setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B-A PHASE]	[Mag/Ph Measure] [DISPLAY 2] [B-A PHASE]	Amplitude in DISPLAY 1 Phase in DISPLAY 2
	[LOCK RANGE] [SHIFT] [VIEW RANGE] "up"/"down" arrow keys to select 1-3MHz	[Lock Range] [1.0-3.0MHz]	Select frequency range
	[LOCK RANGE]	[Lock Range] [AUTO LOCK]	Unlock frequency range.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration
	[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalize system

5. Note the Phase reading in DISPLAY 2 and record this in the Performance Test Table which is located at the end of the Performance Tests section.

6. Repeat this process for the attenuator settings defined in the Performance Test Record and note the phase reading at each step.

4-12 AMPLITUDE ACCURACY vs FREQUENCY

SPECIFICATION:

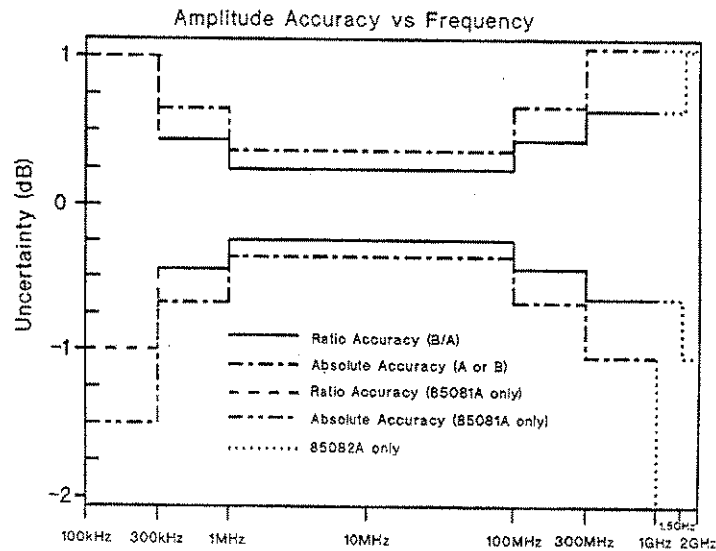

DESCRIPTION:

The voltage amplitude accuracy is measured with the channel input level set to $-7.00\text{dBm} \pm 0.1\text{dBm}$ at each frequency point being checked.

The signal level is checked with the power meter. Care must be taken to ensure that the power meter calibration factor is corrected for the frequency being used.

To allow measurement of Channel B, a power splitter is used to divide the signal and provide a lock reference to Channel A.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal source	Frequency Range 300kHz to 2GHz Amplitude 200mV	HP 8642B
Power Divider		HP 11636A
Phase Matched Cables		HP 11851B
RF Power Meter	Accuracy $\pm 0.02\text{dB}$ Power Ref 50MHz 1.00mW NBS Traceable.	HP 436A/HP 438A
Power Sensor		HP 8482A
Adaptor N(f)-N(f)		HP 1250-1472

PROCEDURE:

1. Configure the equipment as shown in Figure 4-6 step (a), with the power meter connected to port 2 of the power splitter and Channel B of the HP 85082A connected to port 3 of the power splitter.

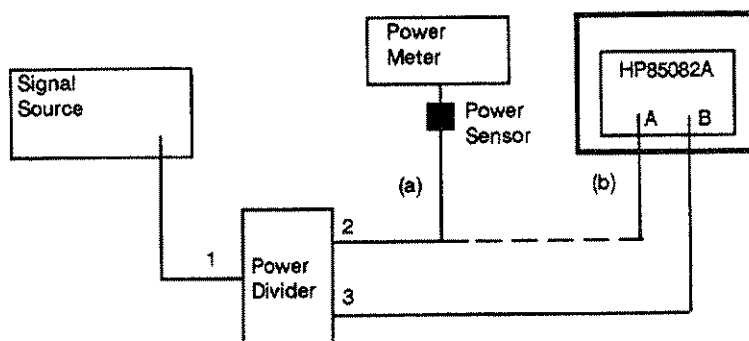


Figure 4-6. Voltage Accuracy Equipment Setup

2. Signal source setup:

FREQUENCY: 1.0 MHz.
 AMPLITUDE: -1 dBm. To produce a power meter reading of -7.0 dBm, ± 0.1 dB.

3. Record the power meter reading in the Performance Tests Results table at the rear of this section.
4. Reconfigure the equipment as shown in Figure 4-6 step (b), with Channel A of the HP 85082A connected to port 2 of the power splitter.

5.	HP 8508A setup	HP 70138A setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B]	[Mag/Ph Measure] [DISPLAY 2] [B]	'A' voltage in DISPLAY 1. 'B' voltage in DISPLAY 2.
	[POWER MEAS] [DISPLAY] dB	[Format Functn] [dB]	dBm display
	[LOCK RANGE] [SHIFT] [VIEW RANGE] "up"/"down" arrow keys to select 1-3MHz	[Lock Range] [1.0-3.0MHz]	Set frequency range.
	[SHIFT] [CAL]	[Misc] [CAL]	Self calibration


Performance Tests

6. Record the DISPLAY 1 reading in the Performance Tests Results table.
7. Interchange the connections at the Channel A and B inputs of the HP 85082A and record the value of the reading in DISPLAY 2 in the Performance Tests Results table.
8. Repeat the entire test for each frequency point required.

NOTE: Ensure that you set the power meter calibration factors to the value appropriate to the frequency being used.

4-13 AMPLITUDE ACCURACY vs INPUT LEVEL (and rear panel output check)

SPECIFICATIONS:

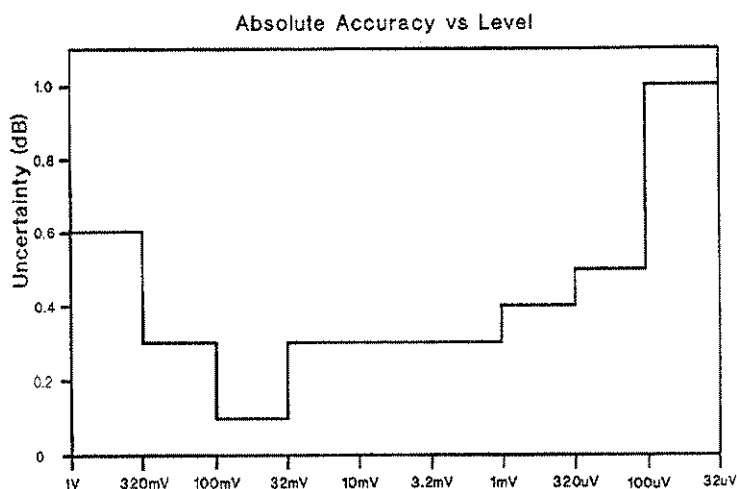

DESCRIPTION:

The amplitude accuracy is tested by applying known signal levels and comparing these with the results displayed by the Vector Voltmeter.

Rear panel output signals are checked for a nominal sensitivity of 1mV per display count.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Dual Channel (+13dBm per channel)	HP 3326A
Attenuator (2)	0 to 110dB in 10dB steps	HP 8496A/G Opt890*
Attenuator Driver	Required for HP 8496G	HP 11713A **
Phase Matched Cables		HP 11851B
Adaptor N(m)-BNC(m)		HP 1250-0082
Power Meter	Accuracy ± 0.02 dB Ref Output 50MHz, 0.0dBm Traceable to NBS	HP 436A/HP 438A
Power Sensor		HP 8482A
DVM		HP 3456A

* Calibration data required.

** Required if HP 8496G programmable attenuator is used.

PROCEDURE:

1. Configure the equipment as shown in Figure 4-7.

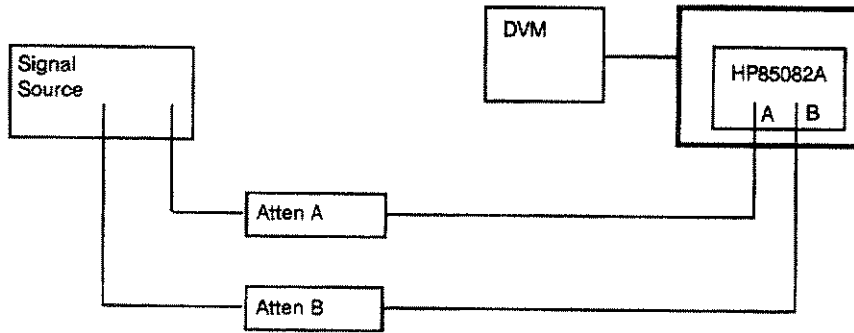


Figure 4-7. Amplitude Accuracy vs Input Level (and rear panel output check) Test Setup

2. Set both attenuators to 20dB.
3. Set both channels of the signal source as follows:

Frequency:	10MHz
Amplitude:	+13dBm

4. Measure the signal source output level with the power meter to verify an output level of +13dBm \pm 0.1dBm on each channel. Adjust the source output level as necessary to achieve this result.

5.	HP 8508A setup	HP 70138A setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B] [POWER MEAS] [DISPLAY] dB	[Mag/Ph Measure] [Format Functn] [dB]	Set up for dBm in both displays.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration
	[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalize system


6. Vary the attenuator settings as shown in the Performance Test Table and note the channel readings at each step. Check that these are within the permitted tolerance.

Note the value of the appropriate rear panel output. This has a nominal sensitivity of 1mV per display count.

7. Repeat step 6 for Channel B.

4-14 VOLTAGE RATIO ACCURACY vs LEVEL

SPECIFICATIONS:

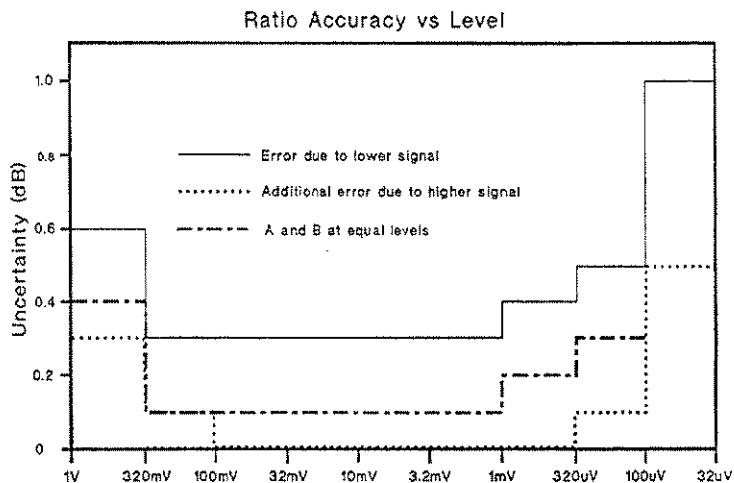

DESCRIPTION:

The voltage ratio accuracy is tested by applying known signal levels and comparing these with the results displayed by the Vector Voltmeter.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Signal Source	Dual Channel (+13dBm per channel)	HP 3326A
Attenuator (2)	0 to 110dB in 10dB steps	HP 8496A/G Opt890*
Attenuator Driver	Required for HP 8496G	HP 11713A **
Phase Matched Cables		HP 11851B
Adaptor N(m)-BNC(m)		HP 1250-0082
Power Meter	Accuracy ± 0.02 dB Ref Output 50MHz, 0.0dBm Traceable to NBS	HP 436A/HP 438A
Power Sensor		HP 8482A
DVM		HP 3456A

* Calibration data required.

** Required if HP 8496G programmable attenuator is used.

PROCEDURE:

1. Configure the equipment as shown in Figure 4-8.

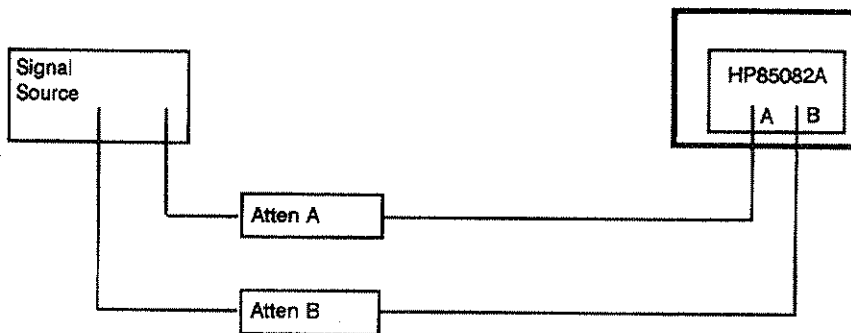


Figure 4-8. Voltage Ratio Accuracy vs Level Test Setup

2. Set both attenuators to 20dB.
3. Set both channels of the signal source as follows:

Frequency:	1.0MHz
Amplitude:	+13dBm

4. Measure the signal source output level with the power meter to verify an output level of +13dBm ±0.1dBm. Adjust the level as necessary to achieve this result.

5.	HP 8508A setup	HP 70138A setup	Function
	[PRESET]	[I-P]	Instrument preset
	[B/A MAG] [DISPLAY] dB	[Mag/Ph Measure] [B/A MAG] [Format Functn] [dB]	B/A ratio measurement, in dB, in DISPLAY 1.
	[SHIFT] [CAL/TEST]	[Misc] [CAL]	Self calibration

6. Enter the corrected attenuator figures in the Performance Test Record (which is contained at the end of the Performance Tests section).
7. Vary the attenuator settings as shown in the Performance Test Table and note the channel readings at each step.
8. Calculate the actual errors and check for compliance with the instrument specification.

4-15 SWR MEASUREMENT

SPECIFICATIONS:

SWR <1.2	300kHz to 1.5GHz	(Return loss = -21dB)
SWR <1.9	1.5GHz to 2.0GHz	(Return loss = -14dB)

DESCRIPTION:

The SWR of each input is measured over the operating frequency range of 300kHz to 2GHz.

EQUIPMENT:

Instrument	Critical Specification	Recommended Model
Network Analyzer		HP 8753A
S Parameter Test Set		HP 85046A
Cables (N)m-(N)m (2)		HP 11500A

PROCEDURE:

1. Connect the equipment as shown in Figure 4-9.

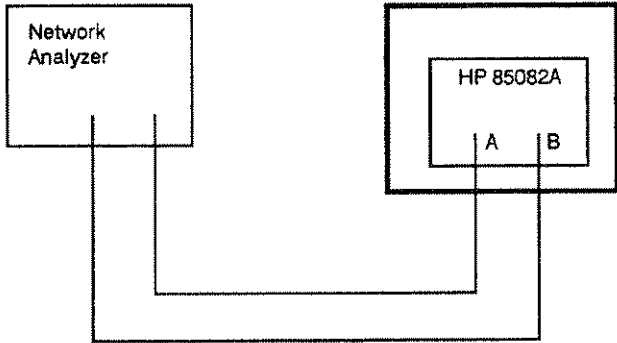


Figure 4-9. SWR Measurement Setup

2. Set up the Network Analyzer for SWR measurement.
3. Measure the SWR over the frequency range 300kHz to 2GHz and record the results in the Performance Test Record (which is contained at the end of the Performance Tests section).

Table 4-2. Performance Test Record (1 of 9)

Paragraph 4-7

ISOLATION BETWEEN CHANNELS (INPUT CROSSTALK)			
Frequency Range (MHz)	Frequency (MHz)	Isolation (dB in A)	Specification
1.0-3.0	1.0	_____	> -100 dB
3.0-5.0	4.0	_____	> -100 dB
5.0-8.0	6.5	_____	> -100 dB
8.0-15.0	11.5	_____	> -100 dB
15.0-25.0	20.0	_____	> -100 dB
25.0-50.0	35.0	_____	> -100 dB
50.0-80.0	65.0	_____	> -100 dB
80.0-150.0	100.0	_____	> -100 dB
150.0-250.0	200.0	_____	> -100 dB
250.0-500.0	400.0	_____	> -100 dB
500.0-1000.0	750.0	_____	> -80 dB
500.0-1000.0	1000.0	_____	> -80 dB
1000.0-2000.0	1200.0	_____	> -70 dB
1000.0-2000.0	1500.0	_____	> -70 dB
1000.0-2000.0	2000.0	_____	> -70 dB

Table 4-3. Performance Test Record (2 of 9)

Paragraph 4-8

REFERENCE CHANNEL LOCK LEVEL AND CHANNEL B NOISE FLOOR					
Frequency Range (MHz)	Frequency (MHz)	Channel A Input Level (dBm)	Lock OK?	Noise Floor Measured	Maximum
0.2-0.6	0.3	-47.0	—	—	-87 dBm
0.6-1.0	0.8	-47.0	—	—	-87 dBm
1.0-3.0	1.0	-47.0	—	—	-87 dBm
3.0-5.0	4.0	-57.0	—	—	-87 dBm
5.0-8.0	6.5	-57.0	—	—	-87 dBm
8.0-15.0	11.5	-57.0	—	—	-87 dBm
15.0-25.0	20.0	-57.0	—	—	-87 dBm
25.0-50.0	35.0	-57.0	—	—	-87 dBm
50.0-80.0	50.0	-57.0	—	—	-87 dBm
50.0-80.0	65.0	-57.0	—	—	-87 dBm
80.0-150.0	115.0	-57.0	—	—	-87 dBm
150.0-250.0	200.0	-57.0	—	—	-87 dBm
250.0-500.0	400.0	-57.0	—	—	-87 dBm
500.0-1000.0	750.0	-57.0	—	—	-87 dBm
500.0-1000.0	1000.0	-57.0	—	—	-87 dBm
1000.0-2000.0	1200.0	-57.0	—	—	-87 dBm
1000.0-2000.0	1500.0	-57.0	—	—	-87 dBm
1000.0-2000.0	2000.0	-57.0	—	—	-87 dBm

Table 4-4. Performance Test Record (3 of 9)

Paragraph 4-9

PHASE ACCURACY vs FREQUENCY at Reference Level			
Frequency Range (MHz)	Frequency (MHz)	Phase Reading (DISPLAY 2)	Tolerance
0.2-0.6	0.3	_____	± 4.2 Deg
0.6-1.0	0.8	_____	± 4.2 Deg
1.0-3.0	1.0	_____	± 1.2 Deg
3.0-5.0	4.0	_____	± 1.2 Deg
5.0-8.0	6.5	_____	± 1.2 Deg
8.0-15.0	11.5	_____	± 1.2 Deg
15.0-25.0	20.0	_____	± 1.2 Deg
25.0-50.0	35.0	_____	± 1.2 Deg
50.0-80.0	50.0	_____	± 1.2 Deg
50.0-80.0	65.0	_____	± 1.2 Deg
80.0-150.0	115.0	_____	± 4.2 Deg
150.0-250.0	200.0	_____	± 4.2 Deg
250.0-500.0	400.0	_____	± 6.2 Deg
500.0-1000.0	750.0	_____	± 6.2 Deg
500.0-1000.0	1000.0	_____	± 6.2 Deg
1000.0-2000.0	1200.0	_____	± 6.2 Deg
1000.0-2000.0	1500.0	_____	± 6.2 Deg
1000.0-2000.0	2000.0	_____	± 12.2 Deg

Table 4-5. Performance Test Record (4 of 9)

Paragraph 4-10

PHASE OFFSET ACCURACY			
Signal Source Phase Offset (Deg)	Vector Voltmeter Phase Reading (DISPLAY 2)	Display Error	Tolerance (Degrees)
+ 180	_____	_____	±0.4
+ 150	_____	_____	±0.4
+ 120	_____	_____	±0.4
+ 90	_____	_____	±0.4
+ 30	_____	_____	±0.4
000	_____	_____	±0.00
- 30	_____	_____	±0.4
- 90	_____	_____	±0.4
- 120	_____	_____	±0.4
- 150	_____	_____	±0.4
- 180	_____	_____	±0.4

Table 4-6. Performance Test Record (5 of 9)

Paragraph 4-11

PHASE ACCURACY vs SIGNAL LEVEL					
Attenuator A Setting	Attenuator B Setting	Channel A Input Level	Channel B Input Level	Phase Reading	Tolerance (Degrees)
20 dB	20 dB	100mV	100mV	_____	0
20 dB	10 dB	100mV	320mV	_____	±0.4
20 dB	30 dB	100mV	32mV	_____	±0.4
20 dB	40 dB	100mV	10mV	_____	±0.4
20 dB	50 dB	100mV	3.2mV	_____	±0.4
20 dB	60 dB	100mV	1.0mV	_____	±0.4
20 dB	70 dB	100mV	320uV	_____	±0.8
10dB	20dB	320mV	100mV	_____	±0.4
30dB	20dB	32mV	100mV	_____	±0.4
40dB	20dB	10mV	100mV	_____	±0.4
50dB	20dB	3.2mV	100mV	_____	±0.4
60dB	20dB	1.0mV	100mV	_____	±0.4
70dB	20dB	320uV	100mV	_____	±0.8

Table 4-7. Performance Test Record (6 of 9)

Paragraph 4-12

AMPLITUDE ACCURACY vs FREQUENCY						
Frequency (MHz)	Power Meter Reading (M) (dBm)	Display Reading		Errors		Limits
		1	2	Channel A (M-1)	Channel B (M-2)	
0.300	_____	_____	_____	_____	_____	±0.65
1.000	_____	_____	_____	_____	_____	±0.35
10.000	_____	_____	_____	_____	_____	±0.35
50.000	_____	_____	_____	_____	_____	±0.35
100.000	_____	_____	_____	_____	_____	±0.35
300.000	_____	_____	_____	_____	_____	±0.65
700.000	_____	_____	_____	_____	_____	±1.0
1000.000	_____	_____	_____	_____	_____	±1.0
1500.000	_____	_____	_____	_____	_____	+1.20
2000.00	_____	_____	_____	_____	_____	-2.00
		_____	_____	_____	_____	+1.20
		_____	_____	_____	_____	-2.0

Table 4-8. Performance Test Record (7 of 9)

Paragraph 4-13

AMPLITUDE ACCURACY - CHANNEL A (Source Output +13dBm, ±0.1dBm)						
Attenuator A Setting	Attenuator 'A' Cal Data (A)*	Channel A Input Level (L) = (13-A)	Display 1 Reading (D)	Measurement Error (E) = (L-D)	Limits	Rear Panel Output 1
20dB	_____	_____	_____	_____	±0.0	_____
10dB	_____	_____	_____	_____	±0.3	_____
0dB	_____	_____	_____	_____	±0.6	_____
30dB	_____	_____	_____	_____	±0.1	_____
40dB	_____	_____	_____	_____	±0.3	_____
50dB	_____	_____	_____	_____	±0.3	_____
60dB	_____	_____	_____	_____	±0.3	_____
70dB	_____	_____	_____	_____	±0.4	_____

* Data from Calibration Certificate.

AMPLITUDE ACCURACY - CHANNEL B (Source Output +13dBm, ±0.1dBm)						
Attenuator B Setting	Attenuator 'B' Cal Data (B)*	Channel B Input Level (L) = (13-B)	Display 2 Reading (D)	Measurement Error (E) = (L-D)	Limits	Rear Panel Output 2
20dB	_____	_____	_____	_____	±0.0	_____
10dB	_____	_____	_____	_____	±0.3	_____
0dB	_____	_____	_____	_____	±0.6	_____
30dB	_____	_____	_____	_____	±0.1	_____
40dB	_____	_____	_____	_____	±0.3	_____
50dB	_____	_____	_____	_____	±0.3	_____
60dB	_____	_____	_____	_____	±0.3	_____
70dB	_____	_____	_____	_____	±0.4	_____
80dB	_____	_____	_____	_____	±0.5	_____
90dB	_____	_____	_____	_____	±1.0	_____

* Data from Calibration Certificate.

Table 4-9. Performance Test Record (8 of 9)

Paragraph 4-14

VOLTAGE RATIO ACCURACY vs LEVEL (for Level A = Level B up to 300MHz)								
Nominal I/P Level	Atten A Setting (dB)	Atten B Setting (dB)	Atten A Actual * A	Atten B Actual * B	(B-A) Actual (R)	Display Reading (D)	Error (D-R)	Spec (dB)
100mV	20	20	_____	_____	_____	_____	_____	±0.1
320mV	10	10	_____	_____	_____	_____	_____	±0.1
1000mV	0	0	_____	_____	_____	_____	_____	±0.6
32mV	30	30	_____	_____	_____	_____	_____	±0.1
10mV	40	40	_____	_____	_____	_____	_____	±0.1
3.2mV	50	50	_____	_____	_____	_____	_____	±0.1
1.0mV	60	60	_____	_____	_____	_____	_____	±0.1
320uV	70	70	_____	_____	_____	_____	_____	±0.2

* Data from Calibration Certificate.

B/A RATIO ACCURACY vs LEVEL (where A and B vary)								
Nominal I/P Level A B	Atten A Setting (dB)	Atten B Setting (dB)	Atten A Actual * A	Atten B Actual * B	(B-A) Actual (R)	Display Reading (D)	Error (D-R)	Spec (dB)
100mV	100mV	20	20	_____	_____	_____	_____	±0.1
100mV	32mV	20	30	_____	_____	_____	_____	±0.3
100mV	10mV	20	40	_____	_____	_____	_____	±0.3
100mV	3.2mV	20	50	_____	_____	_____	_____	±0.3
100mV	1.0mV	20	60	_____	_____	_____	_____	±0.3
100mV	320uV	20	70	_____	_____	_____	_____	±0.4
100mV	100uV	20	80	_____	_____	_____	_____	±0.5
100mV	32uV	20	90	_____	_____	_____	_____	±1.0
100mV	320mV	20	10	_____	_____	_____	_____	±0.6
100mV	1000mV	20	0	_____	_____	_____	_____	±0.6

* Data from Calibration Certificate.

Table 4-10. Performance Test Record (9 of 9)

Paragraph 4-15

SWR MEASUREMENT		
Frequency Range	Measured SWR	Specification
300kHz - 1.5GHz	_____	< 1.2
1.5GHz - 2.0GHz	_____	< 1.5

Adjustments

Section 5

5-1 INTRODUCTION

This section describes the adjustment procedures required to enable the HP 8508A Vector Voltmeter mainframe or the HP 70138A MMS Vector Voltmeter module with the HP 85082A 50 ohm Input Module to meet the specifications listed in Table 1-2 of this manual. Adjustments should only be made after determining that the instrument is out of calibration or if a repair has been carried out.

5-2 WARM-UP TIME

The HP 8508A or HP 70138A Vector Voltmeter with HP 85082A must be switched on for a minimum of 30 minutes before carrying out any adjustments. This allows the instrument to reach a stable operating temperature.

5-3 SAFETY CONSIDERATIONS

WARNING

PROCEDURES DESCRIBED IN THIS SECTION ARE PERFORMED WITH THE MAINFRAME PROTECTIVE COVERS REMOVED AND POWER SUPPLIED TO THE INSTRUMENT. SERVICING SHOULD ONLY BE PERFORMED BY TRAINED PERSONNEL WHO ARE AWARE OF THE HAZARDS INVOLVED.

Anti-Static Precautions

The printed circuit board contained in this instrument has components and devices which are susceptible to damage by electrostatic discharge (ESD). To minimize the risks of damaging or decreasing the reliability of the instrument, the following procedures and cautions should be observed when servicing the instrument.

Static-free Workstation

All servicing should be carried out at a static-free workstation whenever practical.

De-soldering

When de-soldering components, ensure that the soldering iron is grounded. Always use a metalized solder remover.

Adjustments

Anti-Static Freezer Spray

When attempting to locate a temperature related fault, use only an approved anti-static freezer spray.

Anti-Static Products

Table 5-1 contains details of anti-static products which are available from Hewlett-Packard.

Table 5-1. Anti-Static Products

Product	HP Part Number
Anti-static workstation kit	9300-0792
Metalized Solder Remover	8690-0227
Wrist-strap and cord	9300-0970

5-4 EQUIPMENT REQUIRED

All adjustment procedures contain a list of required test equipment. The test equipment is also identified by callouts in the test setup diagrams, where included. If substitutions must be made for the specified test equipment, refer to the Recommended Test Equipment table in the HP 8508A Vector Voltmeter mainframe manual or the HP 70138A MMS Vector Voltmeter module manual for the minimum specifications. It is important that the test equipment meet the critical specifications listed in the table if the Vector Voltmeter and the 50 ohm Input Module are to meet their performance requirements.

Note: Use a non-metallic tool whenever possible (HP Part Number 8830-0024).

When performing the adjustments to an HP 85082A which is contained in an HP 70138A MMS Vector Voltmeter, a module extender (HP Part Number 08508-60032) is required. Access to the delay adjustment can then be made from the underside of the HP 85082A.

5-5 POST REPAIR ADJUSTMENTS

In the event of a module repair, it will be necessary to carry out all the adjustments as listed in Table 5-2.

5-6 RELATED ADJUSTMENTS

Several of the HP 85082A adjustments are interdependent and isolated adjustments should not be attempted. Because of their interactive nature, the adjustments for SRD Bias, Channel Bias, and Delay should be checked at least twice.

5-7 ADJUSTABLE COMPONENTS

Table 5-2 lists all adjustable components in the HP 85082A 50 ohm Input Module.

Table 5-2. Adjustable Components

Reference Designator	Adjustment Name	Adjustment Paragraph
A6R32	SRD Bias	5-8
A6R15/R115	Channel A and B Bias	5-8
A6DD 01	Delay Line	5-8
A6R10/R110	Channel A and B Symmetry	5-9
A6R3/R103	Channel A and B Gain	5-10
A6R38	LF Phase	5-11

5- 8 Set up the SRD Bias, Channel A and B Bias, and the Delay Line Adjustments

DESCRIPTION

The bias level of the SRD is adjusted for a maximum reading in the UHF amplitude response. The Channel Bias is set for optimum flatness of the high frequency amplitude, and the Delay Line is adjusted to compensate for the differences in electrical length within the HP 85082A.

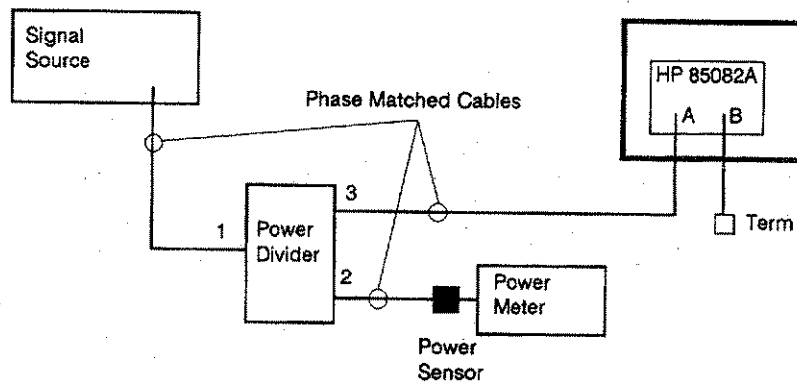


Figure 5-1. SRD Bias Adjust Setup

EQUIPMENT

Instrument	Recommended Model
Signal Source	HP 8642B
Power Divider	HP 11636A
Power Meter	HP 436A/437A/438A
Power Sensor	HP 8482A
Phase Matched Cables	HP 11851B
50ohm Termination	HP 909C
Adaptor N(f)-N(f)	HP 1250-0777

PROCEDURE

This procedure is in three interdependent parts. Perform all three parts in sequence at least twice to ensure correct adjustment.

A. SRD Bias Adjustment

1. Configure the equipment as shown in Figure 5-1.
2. Switch on the equipment and allow to warm up for 30 minutes.
3. On the signal generator:

Frequency	390kHz
Level	-1.0dBm. Adjust for a power meter reading of -7.0dBm \pm 0.1dBm.

4.

HP 8508A Setup [PRESET]	HP 70138A Setup [I-P]	Function: DISPLAY 1 reads Channel A.
----------------------------	----------------------------	---

5. Adjust A6R32 to obtain a maximum reading on DISPLAY 1.
NOTE: Adjustment of A6R32 changes the calibration settings for the entire HP 85082A.

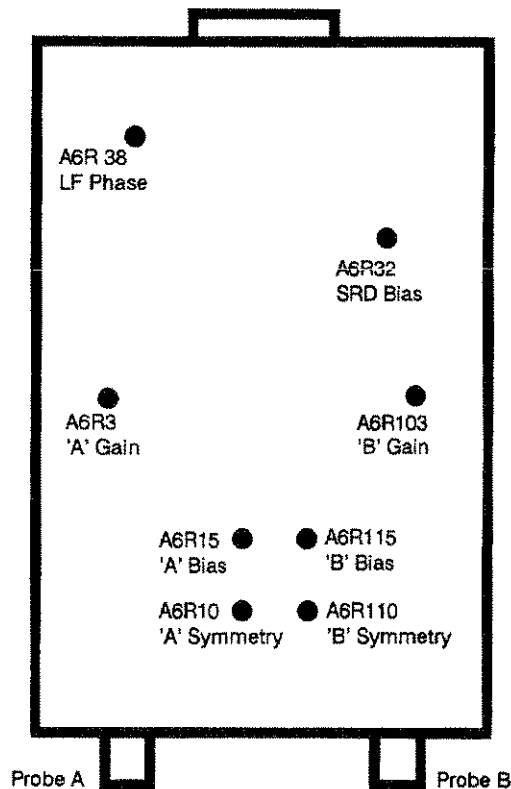


Figure 5-2. Input Module Adjustment Locations

B. Channels A and B Bias Adjustment (Amplitude vs Frequency)**DESCRIPTION**

The bias level is adjusted for optimum flatness of the high frequency amplitude.

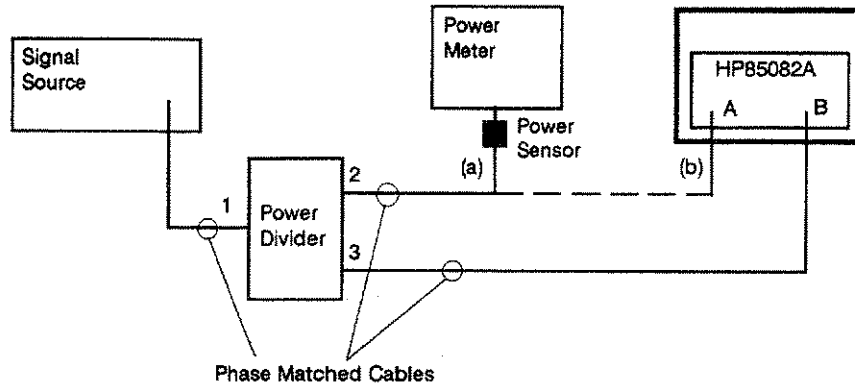


Figure 5-3 . Bias Adjustment Setup

PROCEDURE

1. Configure the equipment as shown in Figure 5-3 step (a). Connect the power meter to port 2 of the power divider and Channel B of the HP 85082A to port 3, using the phase matched cables.

2. On the signal generator:

Frequency	50MHz
Level	-1.0dBm. Adjust for a power meter reading of -7.0dBm \pm 0.1dBm.

3. Normalize the power meter reading. The power meter should now read "0".

4. Reconfigure the equipment as shown in Figure 5-3 step (b). Connecting Channel A of the HP 85082A to port 2 of the power divider and Channel B of the HP 85082A to port 3, using the phase matched cables.

HP 8508A Setup	HP 70138A Setup	Function
[PRESET]	[I-P]	Preset status
[B]	[Mag/Ph Measure]	
[POWER MEAS]	[DISPLAY 2] [B]	
[DISPLAY] dB	[Format Functn] [dB]	
[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalize displays

6. Reconfigure the equipment as in Figure 5-3 step (a).

7. Readjust the signal generator as follows, and change the power meter calibration factor to accommodate the change of frequency.

Frequency	1.5GHz
Output level	Adjust for a power meter reading of "0".

8. Reconfigure the equipment as shown in Figure 5-3 step (b).

9. Adjust A6R15 (Channel A Bias adjustment) for a reading of 0.6dB in DISPLAY 1.

The process is now repeated for the Channel B adjustment.

10. Reconfigure the equipment as shown in Figure 5-3 step (a).

11. Readjust the signal generator as follows, and change the power meter calibration factor to accommodate the change of frequency.

Frequency	50MHz
Output level	Adjust for a power meter reading of "0".

12. Reconfigure the equipment as shown in Figure 5-3 step (b).

13.	HP 8508A Setup	HP 70138A Setup	Function
	[PRESET]	[I-P]	Preset status
	[B]	[Mag/Ph Measure]	
	[POWER MEAS]	[DISPLAY 2] [B]	
	[DISPLAY] dB	[Format Functn] [dB]	
	[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalize Displays

14. Reconfigure the equipment as shown in Figure 5-3 step (a).

15. Readjust the signal generator as follows, and change the power meter calibration factor to accommodate the change of frequency.

Frequency	1.5GHz
Output level	Adjust for a power meter reading of "0".

16. Reconfigure the equipment as shown in Figure 5-3 step (b).

17. Adjust A6R115 (Channel B Bias adjustment) for a reading of 0.6dB in DISPLAY 2.

18. Cancel the normalization of the power meter.

C. DELAY LINE Adjustment (Phase vs Frequency)

DESCRIPTION

This adjustment compensates for the differences in electrical length of the probes and cables.

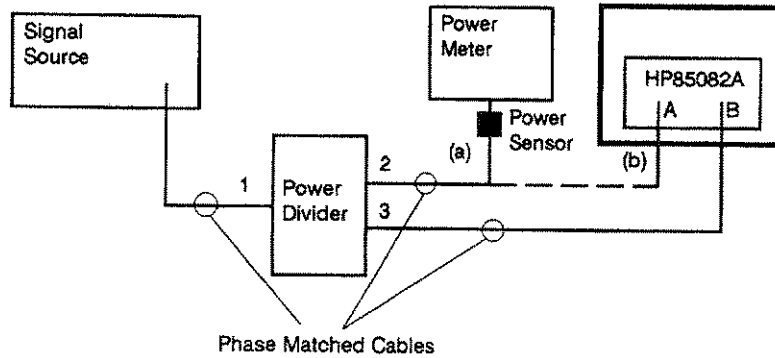


Figure 5-4. Delay Line Adjust Setup

PROCEDURE

1. Configure the equipment as shown in Figure 5-4 step (a). Connect the power meter to port 2 of the power divider and Channel B of the HP 85082A to port 3, using the phase matched cables.

2. On the signal generator:

Frequency	50 MHz
Output level	-1.0dBm

3. Adjust the signal generator output level to produce a power meter reading of $-7.00\text{dBm} \pm 0.1\text{dBm}$.

4. Normalize the power meter reading which should now read "0".

5. Reconfigure the equipment as shown in Figure 5-4 step (b). Connecting Channel A of the HP 85082A to port 2 of the power divider and Channel B of the HP 85082A to port 3, using the phase matched cables.

HP 8508A Setup	HP 70138A Setup	Function
[PRESET]	[I-P]	Preset Status
[B-A PHASE]	[Mag/Ph Measure] [DISPLAY 2] [B-A PHASE]	DISPLAY 1 - Magnitude DISPLAY 2 - Phase
[SHIFT] [CAL TEST]	[Misc] [CAL]	Instrument Calibration
[SHIFT] [SAVE REF]	[Ref] [SAVE REF]	Normalizes Instrument

7. Reconfigure the equipment as shown in Figure 5-4 step (a).

8. Readjust the signal generator as follows and change the power meter calibration factor to accommodate the change of frequency.

Frequency	1.5GHz
Signal level	Adjust for a power meter reading of "0".

9. Disconnect the power meter and reconfigure the equipment as shown in Figure 5-4 step (b).

10. Note the phase reading in DISPLAY 2. If this is within the range ± 2.0 deg, it will not be necessary to make any delay adjustment. However, if the reading is greater than ± 2.0 deg, then continue with the procedure.

NOTE: Twists in the probe cables or loose cable connections could affect this reading.

11. The delay adjuster should be set to give a reading of 0 in DISPLAY 2.

The delay adjustment is on the underside of the HP 85082A and access to this is dependent upon the mainframe being used.

HP 8508A: In this case, the bottom cover should be removed from the HP 8508A Vector Voltmeter mainframe and the instrument turned onto its right side. With the HP 85082A Input Module installed in the HP 8508A, the delay adjustment can be accessed through a hole in the bottom panel of the HP 8508A.

In some early instruments, this hole may not have been provided. However, information is given in Section 7 of the HP 8508A Service Manual as to how this hole can be added.

The alternative process is to extend the HP 85082A Input Module from the HP 8508A Vector Voltmeter mainframe using a module extender (HP Part Number 08508-60032). Access to this adjustment can then be made from the underside of the HP 85082A.

HP 70138A: In this case, the HP 85082A Input Module should be used with the module extender (HP Part Number 08508-60032). Access to the delay adjustment can then be made from the underside of the HP 85082A.

12. Interchange the connections at the input of the HP 85082A and note the phase reading obtained in DISPLAY 2.

13. The delay adjuster should now be adjusted for a reading equivalent to half the value obtained in step 12.

14. Cancel the normalization of the power meter.

NOTE: After completing this adjustment, repeat the SRD Bias, Channel Bias, and Delay adjustments at least once more until the results are stable. When the results are stable, you can continue with the other adjustment procedures.

5-9 Set up the SYMMETRY Adjustment for Channels A and B

DESCRIPTION

Minimizes the residual signal at the sampler inputs.

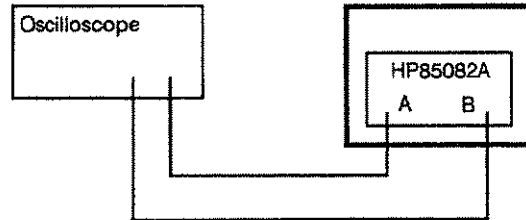


Figure 5- 5. Symmetry Adjust Setup

EQUIPMENT

Instrument
 Oscilloscope 275MHz
 Phase Matched Cables
 Adaptors N(f)-BNC(m)

Recommended Model
 HP 54100D
 HP 11851B
 HP 1250-0077

PROCEDURE

1. Configure the equipment as shown in Figure 5-5.
2. Switch on the equipment and allow to warm up for 30 minutes.
3. On the oscilloscope:

Display	Alt
Sweep Speed	1us/div
Sensitivity	10uV/div
Input Coupling	50ohm
Triggering	As required.

- | | | | |
|----|--|-------------------------|--------------------------------|
| 4. | HP 8508A Setup: | HP 70138A Setup: | Function: |
| | [PRESET] | [I-P] | Instrument Preset |
| | [LOCK RANGE]
[SHIFT] [VIEW RANGE]
'up'/'down' arrow keys to
select 1000-2000MHz | [Lock Range] [1-2GHz] | Select 1-2 GHz frequency range |

5. Adjust A6R10 (Channel A Symmetry) and A6R110 (Channel B Symmetry) in turn so that the sampler pulses displayed on the oscilloscope traces are symmetrical about the baseline.

The pulse leakage display is typically spikes in the order of 10mV in amplitude and they should be symmetrical about the baseline.

NOTE: If this result cannot be achieved, sampler damage is indicated.

6. Cancel the [LOCK RANGE] or [AUTO LOCK] as appropriate.

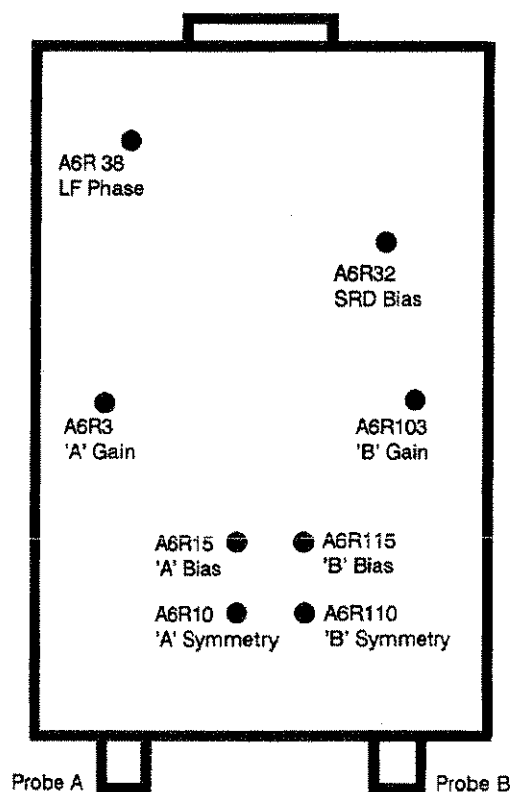


Figure 5-6. Input Module Adjustment Locations

5-10 Adjustment of the Gain of Channels A and B

DESCRIPTION

These adjustments set up the overall absolute gain of the HP 85082A Input Module. Note that this adjustment changes the gain at all frequencies.

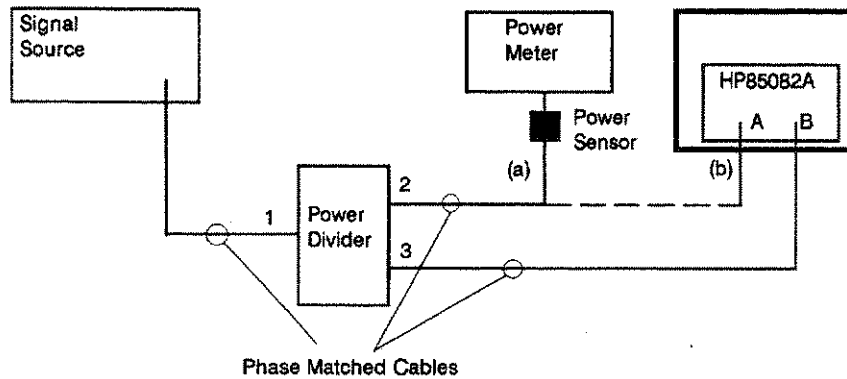


Figure 5-7. Channel Gain Setup

EQUIPMENT

Instrument	Recommended Model
Signal Source	HP 8642A
Power Divider	HP 11636A
Power Meter	HP 436A/437A/438A
Power Sensor	HP 8482A
Phase Matched Cables	HP 11851B
Adaptor N(f)-N(f)	HP 1250-0777

PROCEDURE

1. Configure the equipment as shown in Figure 5-7 step (a), using the phase matched cables to connect the power divider to the signal source, power meter, and HP 85082A.
2. Switch on the equipment and allow to warm up for 30 minutes.
3. On the signal generator:

Frequency	50 MHz
Level	-1.0 dBm

4. Adjust the signal generator output as necessary for a power meter reading of $-7.0\text{dBm} \pm 0.1\text{dBm}$. Record the value of the power meter reading.
5. Interchange the cable connections so that port 2 of the power divider is connected to Channel A of the HP 85082A and port 3 is connected to the power meter. Record the value of the power meter reading.

6. Reconfigure the equipment as in Figure 5-7 step (b).

HP 8508A Setup	HP 70138A Setup	Function
[PRESET]	[I-P]	Instrument preset
[POWER MEAS] [DISPLAY] dB	[Mag/Ph Measure] [DISPLAY 2] [B] [Format Functn] [dB]	dBm magnitude in both displays
[SHIFT] [CAL/TEST]	[Misc] [CAL]	Instrument calibration

8. Adjust A6R3 (Channel A Gain) until the reading in DISPLAY 1 is the same as the power meter reading obtained in step 4.

9. Adjust A6R103 (Channel B Gain) until the reading in DISPLAY 2 is the same as the power meter reading obtained in step 5.

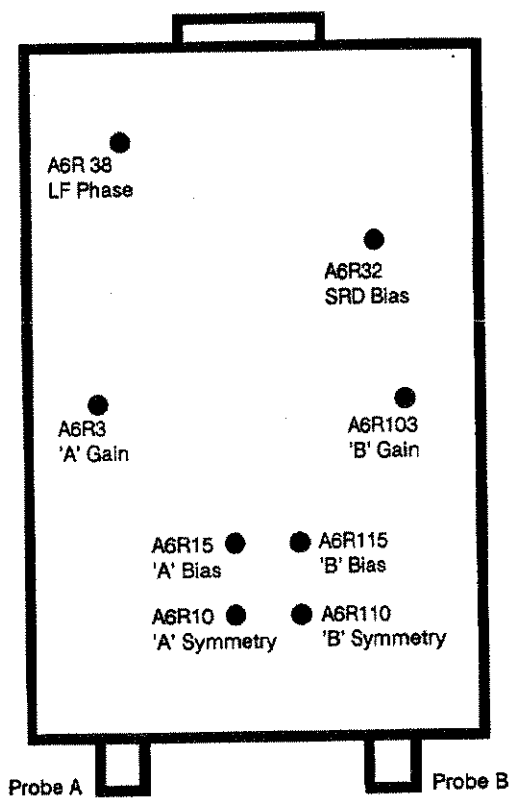


Figure 5-8. Input Module Adjustment Locations

5-11 Set up the Module Phase and Impedance

DESCRIPTION

This adjustment is controlled by an internal test routine which will affect the phase readings at all frequencies.

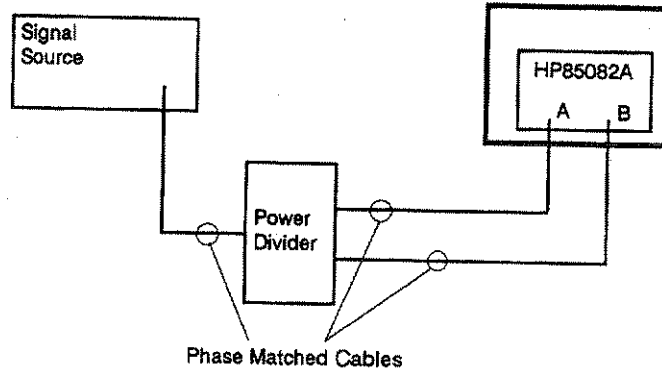


Figure 5-9. LF Phase Adjust Setup

EQUIPMENT

Instrument	Recommended Model
Signal Source	HP 8642B
Power Divider	HP 11636A
Phase Matched Cables	HP 11851B

PROCEDURE

1. Configure the equipment as shown in Figure 5-9.
2. Switch on the equipment and allow to warm up for 30 minutes.
3. On the signal generator

Frequency	50 MHz
Level	200mV

HP 8508A Setup	HP 70138A Setup	Function
[PRESET]	[I-P]	Instrument preset
[SHIFT] [POWER MEAS]	[MISC] [7] [0] [1] [3] [8] [MISC] [SELF TEST MENU]	Instrument into self-test setup mode.
'up'/'down' keys for test "6"	'up'/'down' keys for test "6"	Setup code for test 6.
[HOLD VALUE] check that indicator is on	[Misc] [TEST ON]	Runs test.

5. **HP 8508A:** DISPLAY 1 should show the characters 50 (this is the identification for the HP 85082A 50ohm Input Module). If other characters are displayed, adjust A6R38 until the display shows the characters 50 in DISPLAY 1.

HP 70138A: At the right hand of the MMS screen, the lower display should show the characters 50 (this is the identification for the HP 85082A 50ohm Input Module). If other characters are displayed, adjust A6R38 until the characters 50 appears.

6. **HP 8508A:** Adjust A6R38 for a reading of 0.0 in DISPLAY 2, and 50 in DISPLAY 1. Select [HOLD VALUE] to cancel the test.

HP 70138A: Adjust A6R38 for a reading of 0.0 in the upper display at the right-hand side of the MMS screen, and a reading of 50 in the lower display. Select [Misc] [TEST OFF].

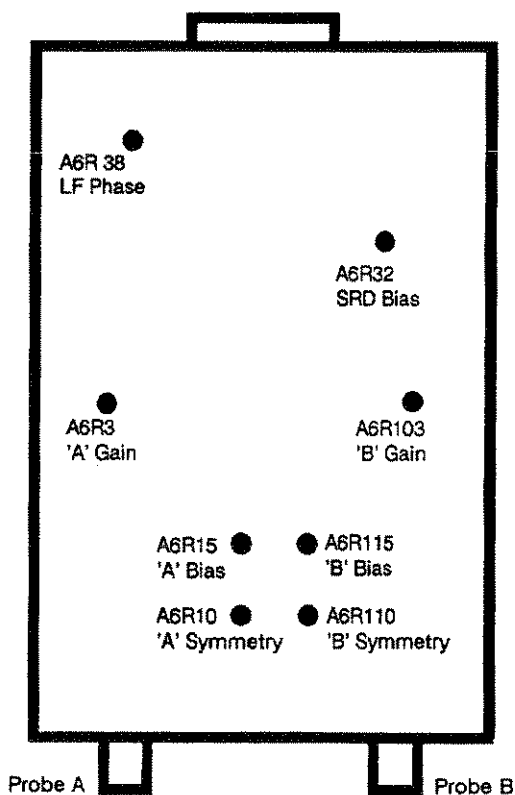


Figure 5-10. Input Module Adjustment Locations

Replaceable Parts

Section 6

6-1 INTRODUCTION

This section contains information for ordering parts. Table 6-2 lists the abbreviations used in the parts list and throughout the manual. Table 6-3 lists all replaceable parts in reference designator order and Table 6-4 lists the names and addresses that correspond to the manufacturer's code number used in the parts list.

6-2 ABBREVIATIONS

Table 6-2 lists all the abbreviations used in the parts lists and throughout the manual. In some cases, two forms of an abbreviation are given, one in all capital letters and the other in partial or no capital letters. This is because the abbreviations used in the parts list are always all capitals; however, in other parts of the manual, abbreviations are used in partial or no capital letters.

6-3 REPLACEABLE PARTS LIST

Table 6-3 is organized as follows:

- (a) Electrical assemblies and their components in alpha-numeric order followed by reference designation.
- (b) Chassis-mounted parts in alpha-numeric order by reference designation.
- (c) Miscellaneous parts.

The information given for each part consists of the following:

- (a) The Hewlett-Packard part number.
- (b) Part number check digit (CD).
- (c) The total quantity (QTY) in the instrument.
- (d) The description of the part.
- (e) A typical manufacturer of the part (in a five-digit code).
- (f) The manufacturer's part number for that part.

The total quantity for each part is given only once - at the first appearance of the part in the list.

6-4 ORDERING INFORMATION

To order a part listed in the replaceable parts list table, quote the Hewlett-Packard part number (with the check digit), indicate the quantity required, and address the order to the nearest Hewlett-Packard office. The check digit will ensure accurate and timely processing of your order.

To order a part that is not listed in the Replaceable Parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

6-5 DIRECT MAIL ORDER SYSTEM

Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are as follows:

- (a) Direct ordering and shipment from the HP Parts Centre in Roseville, California.
- (b) No maximum or minimum order value on any mail order (there is a minimum order amount for parts ordered through a local HP office when the orders require billing and invoicing).
- (c) Prepaid transportation (there is a small handling charge for each order).
- (d) No invoices - to provide these advantages, a cheque or money order must accompany each order.

Mail order forms and specific ordering information are available through your local HP office. Addresses and phone numbers are located at the back of this manual.

Table 6-1. Reference Designations

REFERENCE DESIGNATIONS			
A	assembly	E	miscellaneous electrical part
AT	attenuator; isolator; termination	F	fuse
B	fan; motor	FL	filter
BT	battery	H	hardware
C	capacitor	HY	circulator
CP	coupler	J	electrical connector (stationary portion); jack
CR	diode; diode thyristor; varactor	K	relay
DC	directional coupler	L	coil; inductor
DL	delay line	M	meter
DS	annunciator; signaling device (audible or visual); lamp; LED	MP	miscellaneous mechanical part
		P	electrical connector (movable portion); plug
		Q	transistor; SCR; triode thyristor; FET
		R	resistor
		RT	thermistor
		S	switch
		T	transformer
		TB	terminal board
		TC	thermocouple
		TP	test point
		U	integrated circuit; microcircuit
		V	electron tube
		VR	voltage regulator; breakdown diode
		W	cable; transmission path; wire
		X	socket
		Y	crystal unit (piezo-electric or quartz)
		Z	tuned cavity; tuned circuit

Table 6-2. Abbreviations (1 of 2)

ABBREVIATIONS			
A	ampere	COEF	coefficient
ac	alternating current	COM	common
ACCESS	accessory	COMP	composition
ADJ	adjustment	COMPL	complete
A/D	analog-to-digital	CONN	connector
AF	audio frequency	CP	cadmium plate
AFC	automatic frequency control	CRT	cathode-ray tube
AGC	automatic gain control	CTL	complementary transistor logic
AL	aluminum	CW	continuous wave
ALC	automatic level control	cw	clockwise
AM	amplitude modulation	cm	centimeter
AMPL	amplifier	D/A	digital-to-analog
APC	automatic phase control	dB	decibel
ASSY	assembly	dBm	decibel referred to 1 mW
AUX	auxiliary	dc	direct current
avg	average	deg	degree (temperature interval or difference)
AWG	American wire gauge	°	degree (plane angle)
BAL	balance	°C	degree Celsius (centigrade)
BCD	binary coded decimal	°F	degree Fahrenheit
BD	board	°K	degree Kelvin
BECU	beryllium copper	DEPC	deposited carbon
BFO	beat frequency oscillator	DET	detector
BH	binder head	diam	diameter
BKDN	breakdown	DIA	diameter (used in parts list)
BP	bandpass	DIFF AMPL	differential amplifier
BPF	bandpass filter	div	division
BRS	brass	DPDT	double-pole, double-throw
BWO	backward-wave oscillator	DR	drive
CAL	calibrate	DSB	double sideband
ccw	counter-clockwise	DTL	diode transistor logic
CER	ceramic	DVM	digital voltmeter
CHAN	channel	ECL	emitter coupled logic
cm	centimeter	EMF	electromotive force
CMO	cabinet mount only		
COAX	coaxial		
		EDP	electronic data processing
		ELECT	electrolytic
		ENCAP	encapsulated
		EXT	external
		F	farad
		FET	field-effect transistor
		F/F	flip-flop
		FH	flat head
		FIL H	fillister head
		FM	frequency modulation
		FP	front panel
		FREQ	frequency
		FXD	fixed
		g	gram
		GE	germanium
		GHz	gigahertz
		GL	glass
		GRD	ground(ed)
		H	henry
		h	hour
		HET	heterodyne
		HEX	hexagonal
		HD	head
		HDW	hardware
		HF	high frequency
		HG	mercury
		HI	high
		HP	Hewlett-Packard
		HPF	high pass filter
		HR	hour (used in parts list)
		HV	high voltage
		Hz	Hertz
		IC	integrated circuit
		ID	inside diameter
		IF	intermediate frequency
		IMPG	impregnated
		in	incandescent
		INCL	include(s)
		INP	input
		INS	insulation
		INT	internal
		kg	kilogram
		kHz	kilohertz
		k	kilohm
		kV	kilovolt
		lb	pound
		LC	inductance-capacitance
		LED	light-emitting diode
		LF	low frequency
		LG	long
		LH	left hand
		LIM	limit
		LIN	linear taper (used in parts list)
		LK WASH	lock washer
		LO	low; local oscillator
		LOG	logarithmic taper (used in parts list)
		log	logarithm(ic)
		LPF	low pass filter
		LV	low voltage
		m	meter (distance)
		mA	milliampere
		MAX	maximum
		M	megohm
		MEG	meg (10 ⁶) (used in parts list)
		MET FLM	metal film
		MET OX	metallic oxide
		MF	medium frequency; microfarad (used in parts list)
		MFR	manufacturer
		mg	milligram
		MHz	megahertz
		mH	millihenry
		mho	mho
		min	minute (time)
		...	minute (plane angle)
		MINAT	miniature
		mm	millimeter

NOTE

All abbreviations in the parts list will be in upper-case.

Table 6-2. Abbreviations (2 of 2)

MOD modulator	OD outside diameter	PWV peak working voltage	TD time delay
MOM momentary	OH oval head	RC resistance-capacitance	TERM terminal
MOS metal-oxide semiconductor	OP AMPL operational amplifier	RECT rectifier	TFT thin-film transistor
ms millisecond	OPT option	REF reference	TGL toggle
MTG mounting	OSC oscillator	REG regulated	THD thread
MTR meter (indicating device)	OX oxide	REPL replaceable	THRU through
mV millivolt	oz ounce	RF radio frequency	TI titanium
mVac millivolt, ac	Ω ohm	RFI radio frequency interference	TOL tolerance
mVdc millivolt, dc	P peak (used in parts list)	RH round head; right hand	TRIM trimmer
mVpk millivolt, peak	PAM pulse-amplitude modulation	RLC resistance-inductance-capacitance	TSTR transistor
mVp-p millivolt, peak-to-peak	PC printed circuit	RMO rack mount only	TTL transistor-transistor logic
mVrms millivolt, rms	PCM pulse-code modulation; pulse-count modulation	rms root-mean-square	TV television
mW milliwatt	PDM pulse-duration modulation	RND round	TVI television interference
MUX multiplex	pF picofarad	ROM read-only memory	TWT traveling wave tube
MY mylar	PH BRZ phosphor bronze	R&P rack and panel	U micro (10 ⁻⁶) (used in parts list)
μA microampere	PHL Phillips	RWV reverse working voltage	UF microfarad (used in parts list)
μF microfarad	PIN positive-intrinsic-negative	S scattering parameter	UFH ultrahigh frequency
μH microhenry	PIV peak inverse voltage	s second (time)	UNDEF undefined
μmho micromho	pk peak second (plane angle)	UNREG unregulated
μs microsecond	PL phase lock	S-B slow-blow (fuse) (used in parts list)	V volt
μV microvolt	PLO phase lock oscillator	SCR silicon controlled rectifier; screw	VA voltampere
μVac microvolt, ac	PM phase modulation	SE selenium	Vac volts, ac
μVdc microvolt, dc	PNP positive-negative-positive	SECT sections	VAR variable
μVpk microvolt, peak	P/O part of	SEMICON semiconductor	VCO voltage-controlled oscillator
μVp-p microvolt, peak-to-peak	POLY polystyrene	SHF superhigh frequency	Vdc volts, dc
μVrms microvolt, rms	PORC porcelain	SI silicon	VDCW volts, dc, working (used in parts list)
μW microwatt	POS positive; position(s) (used in parts list)	SIL silver	V(F) volts, filtered
nA nanoampere	POSN position	SL slide	VFO variable-frequency oscillator
NC no connection	POT potentiometer	SNR signal-to-noise ratio	VHF very-high frequency
N/C normally closed	p-p peak-to-peak	SPDT single-pole, double-throw	Vpk volts, peak
NE neon	PP peak-to-peak (used in parts list)	SPG spring	Vp-p volts, peak-to-peak
NEG negative	PPM pulse-position modulation	SR split ring	Vrms volts, rms
nF nanofarad	PREAMPL preamplifier	SPST single-pole, single-throw	VSWR voltage standing wave ratio
NI PL nickel plate	PRF pulse-repetition frequency	SS Service Sheet	VTO voltage-tune oscillator
N/O normally open	PRR pulse repetition rate	SSB single sideband	VTVM vacuum-tube voltmeter
NOM nominal	ps picosecond	SST stainless steel	V(X) volts, switched
NORM normal	PT point	STL steel	W watt
NPN negative-positive-negative	PTM pulse-time modulation	SQ square	W/ with
NPO negative-positive zero (zero temperature coefficient)	PWM pulse-width modulation	SWR standing-wave ratio	WIV working inverse voltage
NRFR not recommended for field replacement		SYNC synchronize	WW wirewound
NSR not separately replaceable		T timed (slow-blow fuse)	W/O without
ns nanosecond		TA tantalum	YIG yttrium-iron-garnet
nW nanowatt		TC temperature compensating	Z ₀ characteristic impedance
OBD order by description			

NOTE

All abbreviations in the parts list will be in upper-case.

MULTIPLIERS

Abbreviation	Prefix	Multiple
T	tera	10 ¹²
G	giga	10 ⁹
M	mega	10 ⁶
k	kilo	10 ³
da	deka	10
d	deci	10 ⁻¹
c	centi	10 ⁻²
m	milli	10 ⁻³
μ	micro	10 ⁻⁶
n	nano	10 ⁻⁹
p	pico	10 ⁻¹²
f	femto	10 ⁻¹⁵
a	atto	10 ⁻¹⁸

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code
	85082-69100	7	1	Rebuilt 50 ohm Input Module	
	85081-20105	9	1	Rod, Module Locking	
	85081-20107	1	1	Knob, Module Locking	
	0510-0070	7	2	Retainer, Crsnt.Ext Ring Retaining	
	85082-00001	3	1	Label - Horizontal (HP 8508A System)	
	85082-00005	7	1	Label - Vertical (HP 70138A System)	

Replaceable Parts

Mfr Code	Manufacturer Name	Address	Zip Code
08792	PAPST-MOTOPEN KG	SCHNAPZVALD GM	7742
09188	YIN A/S	GLOSTRUP DK	2080
H9027	SCHUPFER AG	LUZERN SW	CH-80
50167	FUJITSU MICROELECTRONICS INC	SANTA CLARA CA US	95054
54013	HITACHI AMERICA LTD	SUNNYVALE CA US	94086
00779	AMP INC	HARRISBURG PA US	17111
01121	ALLEN-BRADLEY CO INC	EL PASO TX US	79935
01295	TEXAS INSTRUMENTS INC	DALLAS TX US	75265
02111	SPECTROL ELECTRONICS CORP	CITY OF IND CA	91745
03508	GE CO SEMICONDUCTOR PROD DEPT	AUBURN NY US	13201
03888	K D I PYROFILM CORP	WHIPPANY NJ	07981
04713	MOTOROLA INC SEMI-COND PROD	PHOENIX AZ US	85008
07263	FAIRCHILD CORP	MOUNTAIN VIEW CA US	94042
07933	RAYTHEON CO SEMICONDUCTOR DIV HQ	MOUNTAIN VIEW CA	94040
09353	C & K COMPONENTS INC	NEWTON MA US	02158
10562	CTS CORP ASHEVILLE DIV	SKYLAND NC US	28776
10899	EASTERN AIP DEVICES INC	GREAT NECK NY	11021
11236	CTS CORP BERNE DIV	BERNE IN US	46711
14433	ITT SEMICONDUCTORS DIV	TUSTIN CA US	92680
14936	GENERAL INSTRUMENT CORP (DIODE)	HICKSVILLE NY US	11802
15818	TELEDYNE SEMICONDUCTOR	MOUNTAIN VIEW CA	94043
17856	SILICONIX INC	SANTA CLARA CA	95054
18324	SIGNETICS CORP	SUNNYVALE CA US	94086
19701	MEPCO/CENTRALAB INC	WEST PALM BEACH FL US	33407
21627	POHM CORP	IRVINE CA US	92716
24355	ANALOG DEVICES INC	NORWOOD MA US	02062
24546	CORNING ELECTRONICS	SANTA CLARA CA US	95050
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA US	95052
27167	CORNING GLASS WORKS (WILMINGTON)	WILMINGTON NC	28401
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
3L585	RCA CORP SOLID STATE DIV	SOMERVILLE NJ	
3L680	BEMAN MFG INC	ETTERS PA	17319
32293	INTERSIL INC	CUPERTINO CA CA	95014
34849	INTEL CORP	SANTA CLARA CA US	95054
51642	CENTRE ENGINEERING INC	STATE COLLEGE PA	16801
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
71468	ITT CORP CANNON ELECTRIC DIV	SANTA ANA CA US	92702
72136	ELECTRO MOTIVE CORP	FLORENCE SC	06226
73899	J F D ELECTRONICS CORP	BROOKLYN NY	11219
75042	TRU INC PHILADELPHIA DIV	PHILADELPHIA PA	19108
9H171	UNITRODE CORP	LEXINGTON MA US	02173
9N283	WORKSAFE INC	NEW YORK NY	10001
91637	DALE ELECTRONICS INC	EL PASO TX US	79936

Manual Changes

Section 7

7-1 INTRODUCTION

This section normally contains information for adapting this manual to instruments for which the content does not directly apply. Since this manual does directly apply to instruments having the series code listed on the title page, no change information is given here. Refer to INSTRUMENTS COVERED BY MANUAL in Section 1 for additional important information about date code and series code coverage.

Service

Section 8

8-1 INTRODUCTION

The HP 85082A is not repairable to component level. Should a unit prove to be defective, it should be replaced with a rebuilt assembly (exchange unit) obtainable through your local HP Service Office.

8-2 ANTI-STATIC PRECAUTIONS

The printed circuit board of this instrument is susceptible to damage by electrostatic discharge (ESD). To minimize the risks of damaging or decreasing the reliability of the instrument, the following procedures and cautions should be observed when servicing the instrument.

Static-free Workstation

All servicing should be carried out at a static-free workstation.

De-soldering

When desoldering, ensure that the soldering iron is earthed. Always use a metalized solder remover.

Anti-static freezer spray

When attempting to locate a temperature related fault, use only an approved anti-static freezer spray.

Anti-static Products

Table 8-1 contains details of anti-static products which are available from Hewlett-Packard.

Table 8-1. Anti-Static Products

Product	HP Part No.
Anti-static workstation kit	9300-0792
Metalized Solder Remover	8690-0227
Wrist-strap and cord	9300-0970

8-3 RECOMMENDED TEST EQUIPMENT

Equipment required to troubleshoot the HP 85082A is listed in Table 1-2. Other equipment may be substituted if it meets or exceeds the critical specifications listed in the table.

8-4 TROUBLESHOOTING

GENERAL DESCRIPTION

The HP 85082A is a two-channel RF to IF convertor plug-in module with a 50ohm input impedance, that operates in the 300kHz to 2GHz frequency range. The module reconstructs two RF signals (having the same fundamental frequency) into two IF signals at a frequency of 20kHz. These re-constructed signals have the same amplitude and phase relationships of the original RF signal.

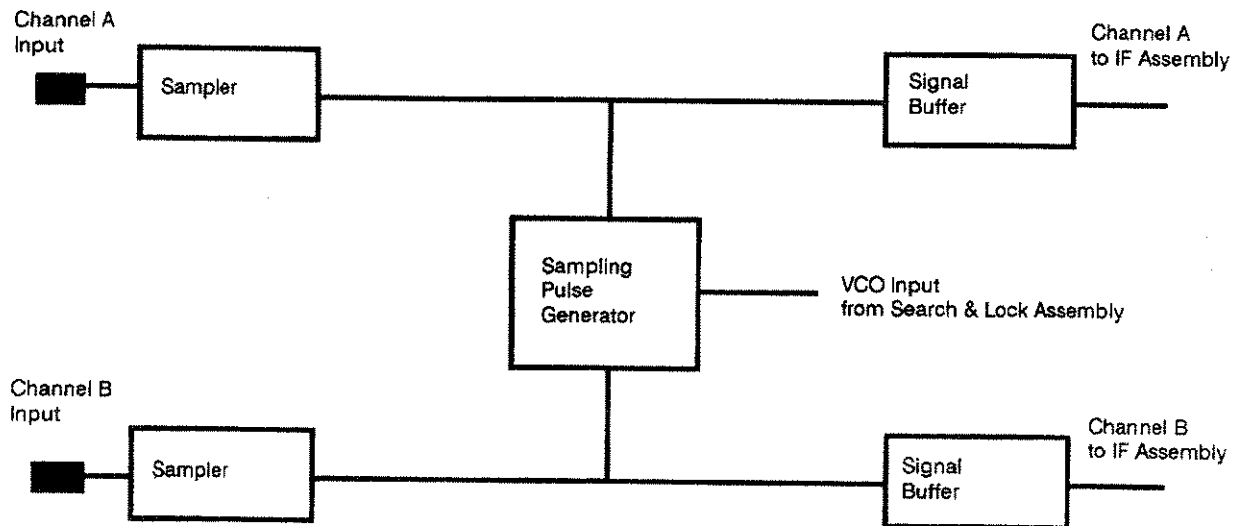


Figure 8-1. Simplified Block Diagram

The Input Module forms a dual-channel sampling system. The main elements of which are a Pulse Generator, two Sampling Bridges and two Signal Buffers.

SERVICING THE INPUT MODULE

The Input Module must be installed in either an HP 8508A mainframe or an HP 70138A MMS Vector Voltmeter before it can be tested. Should the Self Test process detect a failure in the Input Module, an appropriate Error Code in the 600 Series will be shown in DISPLAY 2 of the instrument.

TROUBLESHOOTING PROCEDURE

An HP 85082A failure will be indicated in one of two ways. Either the HP 8508A or the MMS System will display an error code in the 600 Series, or no digits will be shown in the displays.

1. Check that the HP 85082A is properly installed in the HP 8508A Vector Voltmeter mainframe or the HP 70138A MMS Vector Voltmeter Module.
2. Cycle the instrument power.
3. If a 600 Series error code persists, the HP 85082A should be replaced with a rebuilt (exchange) unit.
4. If no digits are shown on the displays, the HP 85082A adjustments should be checked with the procedures given in Section 5 of this manual.
5. If the HP 85082A adjustments are completed successfully, then this indicates that the problem is in either the HP 8508A Vector Voltmeter mainframe, or the HP 70138A MMS Vector Voltmeter module.

Failure of the HP 85082A adjustments indicates that the HP 85082A should be replaced.

The replacement module is already calibrated and no adjustments should be necessary when this is installed.

SALES OFFICES

Arranged alphabetically by country

1

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

ASIA

Hewlett-Packard Asia Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
G.P.O. Box 863, Hong Kong
Tel: 5-8487777
Telex: 76793 HPA HX
Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 678-9421

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Liebiggasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2500
Telex: 13 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
V. D. Hooplaan 241
P.O. Box 999
NL-118 LN 15 AMSTELVEEN
The Netherlands
Tel: 20 5479999
Telex: 18919 hpner

SOUTH EAST EUROPE

Hewlett-Packard S.A.
World Trade Center
110 Avenue Louis-Casal
1215 Cointrin, **GENEVA**, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser
Mail Address:
P.O. Box
CH-1217 Meyrin 1
GENEVA
Switzerland

MIDDLE EAST AND CENTRAL AFRICA

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
7, rue du Bois-du-Lan
P.O. Box 364
CH-1217 Meyrin 1
GENEVA
Switzerland
Tel: (41/22) 780 7111
Fax: 783 7535

European Operations
Hewlett-Packard S.A.
150, Route du Nant d'Avril
1217 Meyrin 2
GENEVA, Switzerland
Tel: (41/22) 780 8111
Fax: (41/22) 780 8542

UNITED KINGDOM

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG113LL
Tel: 0344 773100
Fax: (44/344) 763526

UNITED STATES OF AMERICA

Customer Information Center
(800) 752-0900
6:00 AM to 5:00 PM Pacific Time

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 670-4300

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-5027
Telex: 034-8300
Cable: HEWPACK

Hewlett-Packard Trading S.A.
Bureau de Liaison/Bureau de Support
Villa des Lions
9, Hai Galloui
DZ-BORDJ EL BAHRI
Tel: 76 02 07
Fax: 281 0387

ANGOLA

Telectra Angola LDA
Empresa Técnica de Equipamentos
16 rue Cons. Julio de Vilhema
LUANDA
Tel: 35515,35516
Telex: 3134

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1425 **BUENOS AIRES**
Tel: (54/1) 781 4059
(54/1) 781-4090

Laboratorio Rodriguez
Corswant S.R.L.
Misiones, 1156 - 1876
Bernal, Oeste
BUENOS AIRES
Tel: 252-3958, 252-4991
Argentina Esanco S.R.L.
A/ASCO 2328
1416 **BUENOS AIRES**
Tel: 541-58-1981, 541-59-2767
Telex: 22796 HEW PAC-AR

AUSTRALIA

Customer Information Centre
Tel: (008) 033821

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
PARKSIDE, S.A. 5063
153 Greenhill Road
ADELAIDE (Parkside) Sales
Tel: (61-8-) 272-5911
Fax: (61/8) 373-1398

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 61-7-300-4133
Telex: 42133
Cable: HEWPARD Brisbane

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
BRUCE, A.C.T. 2817
P.O. Box 257,
JAMISON, A.C.T. 2614
Tel: 61-62-51-8999
Telex: 62650
Cable: HEWPARD Canberra

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
P.O. Box 221
BLACKBURN, Victoria 3130
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Cable: HEWPARD Melbourne

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
Herdsman Business Park
Cnr. Hasler & Gould Strs.
Osborne Park
CLAREMONT, W.A. 6017
Tel: (61/9) 242 1414
Fax: (61/9) 242-1682
Cable: HEWPARD Perth

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH HYDE, N.S.W. 2113
Sydney, Australia
Tel: (61/2) 888-4444
Fax: (61/2) 888-9072
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard GmbH
Verkaufsbuero Graz
Grottenhofstrasse 94
A-8052 **GRAZ**
Tel: 43-316-291-5660
Telex: 312375

Hewlett-Packard GmbH
Liebiggasse 1
P.O. Box 72
A-1222 **VIENNA**
Tel: (43/222) 2500
Fax: (48/222) 2500 Ext 444

BAHRAIN

Modern Electronic
Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH 11495
SAUDI ARABIA
Tel: (966/1) 4763030
Telex: 595 (0495) 202049

Wael Pharmacy
P.O. Box 648
MANAMA
Tel: 256123
Telex: 8550 WAEL BN

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Bvd de la Woluwe, 100
Woluwedal
1200 **BRUSSELS**
Tel: (32/2) 761.31.11
Fax: (32/2) 763.06.13

BENIN

S.I.T.E.L.
Immeuble le General
Av. General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

BERMUDA

Applied Computer Technologies
Atlantic House Building
P.O. Box HM 2091
Par-La-Ville Road
HAMILTON 5
Tel: 295-1616
Telex: 380 3589/ACT BA

BOLIVIA

Arrellano Ltda
Av. 20 de Octubre #2125
Casilla 1383
LA PAZ
Tel: 368541

Siser Ltda. (Sistemas de
Importacion y Servicios Ltda.)
Gabriel Gozalvez 221
Casilla 4084
LA PAZ
Tel: (591/2) 340962/
363365/343245
Fax: 35-9268

BRAZIL

Hewlett-Packard do Brasil S.A.
Praia de Botafogo 228-A-614
6. AND.-CONJ. 601
Edificio Argentina - Ala A
22250 **RIO DE JANEIRO, RJ**
Tel: (55/21) 552-6422
Telex: 21905 HPBR BR
Cable: HEWPACK Rio de Janeiro

BRUNEI

Komputer Wisman Sdn Bhd
G6, Chandrasekhar Cmplx.
Jalan Tutong
P.O. Box 1297,
BANDAR SERI BEGAWAN
NEGARA BRUNI DARUSSALAM
Tel: 673-2-2000-70/26711

BURKINA FASSO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

CAMEROON

R.T.I.
175 Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 0905
Telex: 203376
Fax: (1) 45 31 09 18

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (1/403) 235-3100
Fax: (1/403) 272-2299

Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (1/403) 486-6666
Fax: (1/403) 489-8764

SALES OFFICES

Arranged alphabetically by country (cont'd)

CANADA (Cont'd)

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shelbridge Way
RICHMOND,
British Columbia V6X 2W8
Tel: (1/604) 270-2277
Fax: (1/604) 270-0859

Manitoba

Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R2X 1R3
Tel: (204) 694-2777

New Brunswick

Hewlett-Packard (Canada) Ltd.
814 Main Street
MONCTON, New Brunswick E1C 1E6
Tel: (506) 855-2841

Nova Scotia

Hewlett-Packard (Canada) Ltd.
201 Brownlow Avenue
DARTMOUTH, Nova Scotia B3B 1W2
Tel: (1/902) 469-7820
Fax: (1/902) 468-2817

Hewlett-Packard
(Canada) Ltd.
475 Hood Rd., Unit #2
MARKHAM, L3R 8H1
Tel: (416) 479-1770

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (1/519) 686-9181
Fax: (1/519) 686-9145

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (1/416) 678-9430
Fax: (1/416) 673-7253

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (1/613) 820-6483
Fax: (1/613) 820-0377

Hewlett-Packard (Canada) Ltd.
3790 Victoria Park Ave.
WILLOWDALE, Ontario M2H 3H7
Tel: (1/416) 499-2550

Quebec

Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (1/514) 697-4232
Fax: (1/514) 697-6941

Saskatchewan

Hewlett-Packard (Canada) Ltd.
#1, 2175 Airport Rd.
SASKATOON, Saskatchewan S7L 7E1
Tel: (306) 242-3702

CHILE

Ricardo Borzutzky
Avanzados Sistemas de
Conocimientos S. A.
Austria 2041
SANTIAGO
America del Sur
Tel: (562) 223-5946/6148

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
Tel: (852/5) 8487777
Fax: (852/5) 868 4997

China Hewlett-Packard Co., Ltd.
P.O. Box 9610, Beijing
38 Bei San Huan X1 Road
Shuang Yu Shu, Hai Dian District
BEIJING
Tel: 256-6888
Fax: 256-3207

China Hewlett-Packard Co., Ltd.
23/F Shanghai Union Building
100 Yan An Road
SHANG-HAI
Tel: 203-240
Fax: 202-149

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota

CONGO

Sema-Metra
16-18 Rue Barbes
92126 Montrouge Cedex
FRANCE
Tel: (1) 657/300
Telex: 200601 Semetra
Fax: (1) 46 56 96 53

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 9-011-506-243-820
Telex: 3032367 GALGUR CR

Continex S.A.
Avenida 10C
Apartado 746-1090
34-36 SAN JOSE
Tel: (506) 33-0933
Telex: 2310 Continex CR
Fax: 21-6905

O. Fischer R. Y. Cia. S.A.
Apartados 434-10174
SAN JOSE
Tel: 23-72-44
Telex: 2379
Cable: OFIR

CYPRUS

Hellamco - M. Coroyannis
2, Sikelianou St. & Kifissias Av.
P.O. Box 65074
N. Pnyhko 15410
ATHENS
Greece
Tel: 647 79 426, 647 79 427
Telex: 224903

Telereka Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
NICOSIA
Tel: 45 628, 62 698
Telex: 5845 tirx cy

DEMSTAR Ltd.
P.O. Box 2260
NICOSIA
Cyprus
Tel: 44 10 64
Telex: 3085
Fax: 46 48 35

DENMARK

Hewlett-Packard A/S
Kongevejen 25
3460 BIRKEROD
Tel: (45/42) 816640
Fax: (45/42) 815610

Hewlett-Packard A/S
Røllighedsvej 32
DK-8240 RISIKOV, Aarhus
Tel: 45-06-17-6000
Telex: 37409 hpas dk

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-8268
Telex: 4510 ARENTA DR (RCA)

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 9-011-593-2-450975
Telex: 39322548 CYEDE ED

EGYPT

International Engineering Associates
6 El Gamea Street
Agozza
CAIRO
Tel: 71-21-681 348 0904
Telex: 93830 IEA UN
Cable: INTEGASSO

EL SALVADOR

IPEGA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 9-011-503-266-858
Telex: 301 20539 IPESA SAL

ETHIOPIA

R.T.I.
175 rue Biomet
75016 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

FINLAND

Hewlett-Packard Finland
Field Oy
Niitylanpolku IO
00620 HELSINKI
Tel: (90) 757-1011
Telex: 122022 Field SF

Hewlett-Packard Oy
Pispankalliontie 17
02200 ESPOO
Tel: (358/0) 88721
Fax: (358/0) 887 2777

Hewlett-Packard Oy
Vainonkatu 9 C
40100 JYVASKYLÄ
Tel: (358/41) 21 85 11

Hewlett-Packard Oy
Valtatie 57
90500 OULU
Tel: (358/81) 340 144

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 33-42-59-41-02
Telex: 410770F

Hewlett-Packard France
ZA Kergaradec
Rue Fernand Forest
29239 GOUESNOU (Brest)
Tel: (98) 41-87-90

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69131 ECULLY Cedex (Lyon)
Tel: (33) 72-29-32-93
Telex: 310617F

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 LES MILLES Cédex
Aix-en-Provence
Tel: (33/42) 59-41-02
Telex: 410770
Fax: 594872

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67361 LINGOLSHEIM (Strasbourg)
Tel: (88) 76-15-00
Telex: 890141F

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 MÉRIGNAC (Bordeaux)
Tel: (33) 56-34-00-84
Telex: 550105F

Hewlett-Packard France
Miniparc-ZIRST
Chemin du Vieux Chêne
38240 MEYLAN (Grenoble)
Tel: (76) 90-38-40

Hewlett-Packard France
Ru de l'Hôtelierie
Le Petit Bel Air
44470 CARQUEFOU (Nantes)
Tel: 40-30-38-38
Telex: 711085F

Hewlett-Packard France
Parc Tertiaire Hélioipolis
Route de Micy
45360 LA CHAPELLE ST MESMIN
(Orléans)
Tel: 38-43-93-56
Telex: 783 497F

Hewlett-Packard France
Zone Industrielle de Courtabœuf
1, av. du Canada
91947 LES ULIS Cedex (Orsay)
Tel: 69-82-60-60
Telex: 600948F

R.T.I. (Realisations
Télématiques Internationales)
175, rue Biomet
F-75015 PARIS
Tel: (33/1) 45310906
Telex: 42/203376

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautet-Botmel
35000 RENNES
Tel: 99-51-42-44
Telex: 740912F

Hewlett-Packard France
45, rue des 3 Soeurs
Centre d'Affaires Paris Nord II
F-93420 Villepinte
B.P. 60020
F-95971 NOISSY
CHARLES DE GAULLE Cédex
Tel: (33/48) 91-68-00
Telex: 232366
Fax: 632183

Hewlett-Packard France
P.A.T. Lavatine
3, rue Jacques Monod
BP 185
76136 MONT-ST-AIGNAN (Rouen)
Tel: 35-59-19-20
Telex: 770035F

Hewlett-Packard France
Innoparc
BP 167 - Voie n°7
31328 LABEGE Cedex (Toulouse)
Tel: 61-39-11-40
Telex: 531639F

Hewlett-Packard France
Les Cardoulines
Batiment B2
Route des Dollines
Parc d'activité de Vaibonne
Sophia Antipolis
06560 VALBONNE (Nice)
Tel: 93-65-39-40

Hewlett-Packard France
Parc d'activité des Prés
1, Rue Papin Cedex
59658 VILLENEUVE D'ASCQ
Tel: 20-91-41-25
Telex: 160124F

FRENCH WEST INDIES (Antilles)

R.T.I.
175, Rue Blomet
75015 PARIS
FRANCE
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GABON

R.T.I. Cameroon
Distribution/Services
B.P. 3899
DOULA, CAMEROON
(Please contact R.T.I. France.)
Tel: (237) 423291
Telex: 970/5385

R.T.I.
175, rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Deutschland
Hewlett-Packard-Strasse
Postfach 1641
D-8380 BAD HOMBURG v.d.H
Tel: (06172) 400-0
Telex: 410 844 hpbhg

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbld

Hewlett-Packard GmbH
Verbindungsstelle Bonn
Friedrich-Ebert-Allee 26
5300 BONN
Tel: (0228) 234001
Telex: 8669421

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BÖBLINGEN
Postfach 1427
Tel: (49/7031) 645
Fax: (49/7031) 645-429

Hewlett-Packard GmbH
Generalbereich Mktg
Herrenberger Strasse 130
D-7030 BÖBLINGEN
Tel: (49/7031) 14-0
Fax: (49/7031) 14-2999

Hewlett-Packard GmbH
Geschäftsstelle
Schloßstr. 28a
D-4600 DORTMUND-41
Tel: (0231) 45001
Telex: 822858 hpdod

Hewlett-Packard GmbH
Reparaturzentrum Frankfurt
Bernier Strasse 117
8000 FRANKFURT/MAIN 60
Tel: (069) 500001-0
Telex: 413249 hpffm

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadtring 5
D-2000 HAMBURG 60
Tel: 49-40-63-804-0
Telex: 021 63 032 hphh d

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (49/511) 5706-0
Fax: (49/511) 5706-126

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: 49-0621-70-05-0
Telex: 0462105 hpmhm

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 49-0731-70-73-0
Telex: 0712616 HP ULM-D

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg

Hewlett-Packard GmbH
Vertriebszentrum Ratingen
Berliner Strasse 111
D-4030 RATINGEN
Postfach 31 12
Tel: (02102) 494-0
Telex: 589 070 hprad

Hewlett-Packard GmbH
Vertriebszentrum München
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: 49-89-81-2070
Telex: 0524985 hpmch

Hewlett-Packard GmbH
Geschäftsstelle
Ermisallee
7517 WALDBRONN 2
Postfach 1251
Tel: (07243) 602-0
Telex: 782 838 hepik

GREAT BRITAIN

See United Kingdom

GREECE

Hewlett-Packard Hellas
32, Kiffissias Avenue
15125 Amaroussion
ATHENS
Greece
Tel: 6828811
Telex: 216588 hpat gr
Fax: 6832978

GUATEMALA

IPESA DE GUATEMALA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 317853, 66471/5
9-011-502-2-316627
Telex: 3055765 IPESA GU

GUINEA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

HONG KONG

Hewlett-Packard Asia, Ltd.
22/F, West Tower Bond Centre
89 Queensway Central
HONG KONG
Tel: (852/5) 848-7777
Fax: (85215) 868-4997
Cable: HEWPACK HONG KONG

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
112 REYKJAVIK
Tel: 354-1-87-1000
Telex: 37409
Fax: 354-1-673031

INDIA

Computer products are sold through Blue Star Ltd. All computer repairs and maintenance service is done through Computer Maintenance Corp.

Blue Star Ltd.
B. D. Patel House
Near Sardar Patel Colony
AHMEDABAD 380 014
Tel: 403531, 403532
Telex: 0121-234
Cable: BLUE FROST

Blue Star Ltd.
40/4 Lavelle Road
BANGALORE 560 001
Tel: 57881, 867780
Telex: 0845-430 BSLBIN
Cable: BLUESTAR

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BARODA, 390 005
Tel: 65235, 65236
Cable: BLUE STAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 031-61120 BSNF IN
Cable: BLUESTAR

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 682547
Telex: 031-2463
Cable: BLUEFROST

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155-459
Cable: BLUEFROST

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0684-259
Cable: BLUESTAR

Hewlett-Packard India
Meridian Commercial Complex
6th Floor
8 Windsor Place
Janpath
NEW DELHI 110 001
Tel: 91-11384911
Telex: 31-4935 HPNDIN

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA

BERCA Indonesia P.T.
P.O.Box 2497/Jkt
Antara Bldg., 12th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-340417
Telex: 46748 BERSAL IA

BERCA Indonesia P.T.
Jalan Kutai 24
SURABAYA
Tel: 67118
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansour City 609/10/7
BAGHDAD
Tel: 551-40-73
Telex: 212-455 HEPAIRAQ IK

IRELAND

Hewlett-Packard Ireland Ltd.
Temple House, Temple Road
Blackrock, Co. DUBLIN
Tel: (353/1) 883399
Telex: 30439

Hewlett-Packard Ltd.
75 Belfast Rd., Carrickfergus
Belfast BT38 8PH
NORTHERN IRELAND
Tel: 09603-67333
Telex: 747625

ISRAEL

Eidan Electronic Instrument Ltd.
P.O. Box 1270
JERUSALEM 91000
16, Ohalliv St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL

Computation and Measurement
Systems (CMS) Ltd.
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motil IL

ITALY

Hewlett-Packard Italiana Spa
Via G. di Vittorio 10
20094 CORSICO (MI)
Tel: 02/4408351
Fax: 02/4409964

Hewlett-Packard Italiana Spa
Via Nuova Rivoletta 95
20090 LIMBITO (MI)
Tel: 02/75761
Fax: 02/7576230

Hewlett-Packard Italiana Spa
Via Emilia 51/C
40011 ANZOLA
DELL'EMILIA (BO)
Tel: 051/731061

Hewlett-Packard Italiana Spa
Via M. Ricci 17 - Palombina Nuova
60100 ANCONA
Tel: 071/863782

Hewlett-Packard Italiana Spa
Traversa 99C Giulio Petroni 19
70124 BARI
Tel: 080/410744
Fax: 080/417891

Hewlett-Packard Italiana Spa
Via Principe Nicola 43G/C
95126 CATANIA
Tel: 095/371087
Fax: 095/388569

Hewlett-Packard Italiana Spa
Via G. Di Vittorio 9
20063 CERNUSCO S/N (MI)
Tel: 02/923691
Fax: 02/9237746

Hewlett-Packard Italiana Spa
Via Sacco e Vanzetti 1/A
50145 FIRENZE
Tel: 055/318533
Fax: 055/373965

Hewlett-Packard Italiana Spa
Viale Brigata Bisagno 2
16129 GENOVA
Tel: 010/541141
Fax: 010/591733

Hewlett-Packard Italiana Spa
Via Orazio 16
80122 NAPOLI
Tel: 081/7611444
Fax: 081/680164

Hewlett-Packard Italiana Spa
Via Pellizzo 15
35128 PADOVA
Tel: 049/8070166
Fax: 049/773097

Hewlett-Packard Italiana Spa
Via Dei Tintoretto 200
00144 ROMA
Tel: 06/54831
Fax: 06/5408710

SALES OFFICES

Arranged alphabetically by country (cont'd)

ITALY (Cont'd)

Hewlett-Packard Italiana Spa
Corso Svizzera 185
10149 **TORINO**
Tel: 011/744044
Fax: 011/77 10815

IVORY COAST

Site Ivoirienne des Techniques
de l'Informatique
Immeuble C.N.A. - 5e etage
Avenue General de Gaulle
P.O. Box 161

ABIDJAN 01

Tel: 32 12 27
Telex: 22149

Engineering Business Concept (E.B.C.)
Angle Avenue J. Anoma et Bd.
République

08 B.P. 323 **ABIDJAN 08**
Tel: 32 50 24, 41 48 70
Fax: 35 37 90

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nihon-Seimei Akita
Chuo-Dori Bldg.
4-2-7 Naka-dori
AKITA, 010
Tel: (81/188) 36-5021

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (81/462) 25-0031
Fax: (81/462) 25-0064

Yokogawa-Hewlett-Packard Ltd.
3-1 Motochiba-Cho
CHIBA, 280
Tel: (81/472) 25-7701
Fax: (81/472) 21-0382

Yokogawa-Hewlett-Packard Ltd.
Dai-3 Hakata-Kaisei Bldg.
1-3-6 Hakata-eki Minami
Hakata-Ku, **FUKUOKA 812**
Tel: (81/92) 472-8731

Yokogawa-Hewlett-Packard Ltd.
Nihon-Dantai-Seimei-
Koriyama Bldg.
21-10 Toramaru-Cho,
Koriyama **FUKUSHIMA, 963**
Tel: (81/249) 39-7111

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: (81/82) 241-0611
Fax: (81/82) 241-0619

Yokogawa-Hewlett-Packard Ltd.
Issei Bldg.
2-3-17 Takezono, Tsukuba
IBARAGI, 305

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-maru
Mito, **IBARAKI 310**
Tel: (81/292) 25-7470

Yokogawa-Hewlett-Packard Ltd.
Towa Building 2-2-3
Kaigan-dori, Chuo-ku
KOBE, 650
Tel: (81/78) 392-4791
Fax: (81/78) 392-4839

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg.
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (81/485) 24-6563
Fax: (81/485) 24-9050

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614 Higashi-Shiokoji-cho
Karasuma-Nishi-iru, Shiokoji-Dori
Shimogyo-Ku, **KYOTO, 600**
Tel: (81/75) 343-0921
Fax: (81/75) 343-4356

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-Maru
MITO, Ibaraki 310
Tel: (81/292) 25-7470
Fax: (81/292) 31-6589

Yokogawa-Hewlett-Packard Ltd.
Nagano-Tokyokaiji Bldg.
1081, Minamiagata-Machi
Nagano-Shi, **NAGANO, 380**
Tel: (81/262) 24-8012
Fax: (81/262) 24-8016

Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Building
1-47-1, Nagono, Nakamura-ku
NAGOYA, AICHI 450
Tel: (81/52) 571-5171
Fax: (81/52) 565-0896

Yokogawa-Hewlett-Packard Ltd.
Sai-Kyo-Ren Building
1-2 Dote-cho
OOIYA-SHI SAITAMA 330
Tel: (0486) 45-8031

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 5-4-20 Nishi-Nakajima
4-20 Nishinakajima, 5 Chome,
Yodogawa-ku
OSAKA, 532
Tel: (81/6) 304-6021
Fax: (81/6) 304-0216

Yokogawa-Hewlett-Packard Ltd.
1-27-15, Yabe
SAGAMIHARA Kanagawa, 229
Tel: (81/427) 59-1311

Yokogawa-Hewlett-Packard Ltd.
Hamamatsu Motoshiro-Cho Daichi
Seimei Bldg 219-21, Motoshiro-Cho
Hamamatsu-shi
SHIZUOKA, 430
Tel: (81/534) 56-1771
Fax: (81/534) 552371

Yokogawa-Hewlett-Packard Ltd.
Shinjuku Daichi Seimei Bldg.
Nishi Shinjuku 2-7-1,
Shinjuku-ku, **TOKYO 163**
Tel: (81/3) 348-4611
Fax: (81/3) 348-7969

Yokogawa-Hewlett-Packard Ltd.
9-1, Takakura-cho
Hachioji-shi, **TOKYO, 192**
Tel: 81-426-42-1231

Yokogawa-Hewlett-Packard Ltd.
Tokyo-Nissam-Minato Bldg.
1-6-34 Konan, Minato-Ku
TOKYO 108
Tel: (81/3) 458-5411

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3-chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-8111
Telex: 232-2024 YHPTOK

Yokogawa-Hokushin Electric Corp.
(YEW)
Shinjuku-NS Bldg. 10F
9-32 Nokacho 2 Chome
Shinjuku-ku
TOKYO, 163
Tel: (03) 349-1859
Telex: J27584

Yokogawa-Hewlett-Packard Ltd.
Toyota-Tokyo-Kaijo Bldg.
1-179 Miyuki-Hon-Cho
TOYODA 473
Tel: (81/565) 27-5611

Yokogawa-Hewlett-Packard Ltd.
Chiyodaseimei-Utsunomiya Bldg.
2-3-1, Ohdori, **UTSUNOMIYA**, Tochigi-
Shi 320
Tel: (81/286) 33-1153
Fax: (81/286) 33-1175

Yokogawa-Hewlett-Packard Ltd.
No. 2 Yasuda Bldg.
2-32-12, Tsuruyo-cho
Kanagawa-ku, **YOKOHAMA 221**
Tel: (81/45) 312-1252
Fax: (81/45) 311-8328

KENYA

ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331955
Telex: 22639

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeouido Building
36-1 Yeoeui Do-Dong
Youngdeungpo-Ku
SEOUL, 150
Tel: (82/2) 784-4666, 784-2666
Fax: (82/2) 784-7084
Telex: 25166 SAMSAN K

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT 13009
Tel: 242 49 10, 241 17 26
Telex: 22481 AREEG KT
Cable: VISCOUNT

LEBANON

Computer Information Systems S.A.L.
Chammas Building
P.O. Box 11-6274
DORA BEIRUT
Tel: 89 31 13, 58 18 35
Telex: 42309 chasis le
Fax: 58 18 34

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 **BRUSSELS**
Tel: (32/2) 761-3111
Telex: 23-494 paloben br

MADAGASCAR

R.T.I.
175, Rue Biomet
75015 Paris
FRANCE
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MALAWI

Systron (Private) Ltd.
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Zimbabwe
Tel: 739881/739885
Telex: 4122
Fax: 70 20 08

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khaiw Bank Building
46, Jalan Raja Laut
50350 **KUALA LUMPUR, MALAYSIA**
Tel: (60/3) 298-6555
Fax: (60/3) 291-5495

Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, **SARAWAK**
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG

MALTA

R.T.I.
175, Rue Biomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MAURITANIA

R.T.I.
175, Rue Biomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MAURITIUS

R.T.I.
175, Rue Biomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MEXICO

Hewlett-Packard de Mexico,
S.A. de C.V.
Rio Nio No. 4049 Deep. 12
Fracc. Gordoba
JUAREZ, Mexico
Tel: 161-3-15-62

Hewlett-Packard de Mexico,
S.A. de C.V.
Condominio Kadereyta
Circuito del Mezon No. 186 Desp. 6
Col. Del Prado - 76030
QRO, Mexico
Tel: 463-6-02-71

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Morelos No. 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: (52/36) 31 46 00
Telex: 0884 186 ECOMEX

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 **MEXICO, D.F.**
Tel: (52/5) 596 79 33
Fax: (52/5) 596 42 08 (Ext 3231)

Hewlett-Packard de Mexico,
S.A. de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonia del Valle
Municipio de Garcia
66220 **NUEVO LEON**
Tel: 83-78-42-40
Telex: 382410 HPMY

Hewlett-Packard Co.
Latin America Region
Customer Support Center
7208 N.W. 31st St.
MIAMI, FL 33122
United States
Tel: (305) 599-0465
Telex: 441603 HPMIAMI
Fax: 599-0277

Hewlett-Packard de Mexico,
S.A. de C.V.
Blvd. Independencia No. 2000 Ote.
Ote Zerpiso
Co 1 Estrella
27010 **TORREON, COA.**
Tel: (52/171) 8 22 01

MOROCCO

Sicotel
Complexe des Habous
Tour C, avenue des Far
CASABLANCA 01
Tel: 31 22 70
Telex: 27804

R.T.I.
175, Rue Biomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

Socofren Maroc
164, Boulevard D' Anfa
CASABLANCA
Tel: 36 08 84, 36 01 77
Telex: 23940

NETHERLANDS

Hewlett-Packard Nederland
Startbaan 16
1187 XR **AMSTELVEEN**
Tel: (31/20) 5476911
Telex: 13 216 HEPA NL
Fax: (31/20) 471825

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2900AA **CAPELLE A/D IJSEL**
Tel: 31-20-51-6444
Telex: 21261 HEPAC NL

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
P.O. Box 2342
NL 5600 CH **EINDHOVEN**
Tel: 31-40-32-69 11
Telex: 51484 hepae nl
Fax: (31/40) 446546

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, **AUCKLAND**
Tel: (64/9) 605-65 1
Fax: (64/9) 600-507

Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
P.O. Box 9443
WELLINGTON
Tel: (64/4) 820-400
Fax: (64/4) 843-380

NIGER

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
PO Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

NIGERIA

Management Information Systems Ltd.
3 Gerrard Road, Ikoyi
LAGOS
Tel: 68 08 87
Telex: 23582
Fax: 68 54 87

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norway A/S
Oesterndalen 16-18
P.O. Box 34
N-1345 **OSLØYRAAS**
Tel: (47/2) 24-8090
Telex: 76621 HPNAS N

Hewlett-Packard Norway A/S
Boemergt. 42
Box 2470
N-5037 **BOLHEIMSVIK**
Tel: (5/29) 10 72

OMAN

Suhail & Saud Bahwan
P.O. Box 169
MUSCAT/SULTANATE OF OMAN
Tel: 79 37 41
Telex: 3585 mb
Fax: 79 61 58

Imtac LLC
P.O. Box 9196
MINA AL FAHAL/SULTANATE OF OMAN
Tel: 70-77-27, 70-77-23
Telex: 3865 Tawoos On

PAKISTAN

Mushko & Company Ltd.
House No. 16, Street No. 16
Sector F-5/3
ISLAMABAD
Tel: 824545

Telex: 54001 Muski Pk
Cable: FEMUS Islamabad
Mushko & Company Ltd.
Oasman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132

Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi

PANAMA

Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA CITY
Tel: 9-011-507-636613

Telex: 368 3483 ELECTRON PG

PERU

Cla Electro Médica S.A. (ERMED)
Los Flamencos 145, Ofc. 301/2
San Isidro
Casilla 1030
LIMA 1 Peru
Tel: 9-011-511-4-4-14325, 41-3705
Telex: 39425257 PE PB SIS

PHILIPPINES

The Online Advanced Systems Corp.
2nd Floor, Electra House
115-117 Esteban Street
P.O. Box 1510
Legaspi Village, Makati
Metro **MANILA**
Tel: 815-38-10 (up to 16)
Telex: 63274 ONLINE PN

PORTUGAL

Mundinter Intercambio
Mundial de Comercio
Avenida Antonio 2761
LISBON
Tel: 53 21 31, 53 21 37
Telex: 16691

CPC Instrumentacao
Torre de Santo Antonio
rue Gregorio Lopes, Lote
Resteio
1400 LISBON
Tel: 617343/44/45/46
Telex: 27432/26054
Fax: 617345

C.P.C.S.I.
Rua de Costa Cabral 575
4200 PORTO
Tel: 493122
Telex: 26054, 27432
Fax: 48 87 21

PUERTO RICO

Hewlett-Packard Puerto Rico
Box 4048
Aguadilla, PR 00605
Tel: (809) 891-5235

Hewlett-Packard Puerto Rico
101 Munoz Rivera Avenue
Esu. Calle Ochoa
HATO REY, 00918
Tel: (809) 754-7800

QATAR

Qatar Datamation Systems
P.O. Box 350
DOHA
Tel: 41 32 82
Tlx: 4833
Fax: 42 63 78

REUNION ISLAND

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376

RWANDA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376
Fax: (1) 45 31 09 18

SAUDI ARABIA

Modern Electronics Establishment
P.O. Box 281
Thuobah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR

Modern Electronics Establishment
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

Modern Electronics Establishment
P.O. Box 22015
RIYADH 11495
Tel: 4763030
Telex: 402040 MEERYD SJ

SCOTLAND

See United Kingdom

SENEGAL

25C
10, rue Tolbiac
B.P. 3716
DAKAR R.P.
(Please contact R.T.I. France.)
Tel: (221) 222248
Telex: 906/671

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: 45310906
Telex: 203376
Fax: (1) 45 31 09 18

SINGAPORE

Hewlett-Packard Singapore Ltd.
1150 Depot Road
SINGAPORE, 0410
Tel: (65) 273 7388
Fax: (65) 278 8990

SOUTH AFRICA

Hi Performance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
CAPE TOWN 7450
Tel: (27/21) 53-7954
Fax: (27/21) 53-5119

Hi Performance Systems (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: (27/11) 802-5111
Fax: (27/11) 802-6332

SPAIN

Hewlett-Packard Española, S.A.
Avda. Diagonal, 605
08028-BARCELONA
Tel: (34/3) 401 91 00
Telex: 52603 hpbee

Bilbao (Vizcaya) Sales
Hewlett-Packard Español, S.A.
Avda. Zugazarte, 8
48930 - Las Arenas - **VIZCAYA**

Hewlett-Packard Española, S.A.
Ctra. N-VI, Km. 16, 500
Las Rozas
E-MADRID
Tel: (34/1) 6370011
Telex: 23615 HPE

Hewlett-Packard Española, S.A.
Avda. S. Francisco Javier, S/N
Planta 10. Edificio Sevilla 2
E-SEVILLA 5, SPAIN
Tel: (34/54/64) 4454
Telex: 72933

Hewlett-Packard Española, S.A.
Isabel La Católica, 8
46004 **VALENCIA**
Tel: (34/6) 351 59 44
Telex: 63435
Fax: (34/6) 35 1 59 44

Hewlett-Packard Española, S.A.
Avda. de Zugazarte, 8
48930 - Las Arenas
VIZCAYA
Tel: (34/4) 464 32 55
Telex: 33032

SUDAN

Mediterranean Engineering &
Trading Co., Ltd.
P.O. Box 1025
KHARTOUM
Tel: (249) 41184
Telex: 24052

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

SWEDEN

Hewlett-Packard Sverige AB
Östra Tulngatan 3
20011 MALMÖ
Box 6132
Tel: (46/40) 702 70
Telex: (854) 17886 (via Spånga office)
Fax: (46/40) 97 74 18

Hewlett-Packard Sverige AB
Elementvagen 16
S-7022 7 ÖREBRO
Tel: (49/19) 10 48 80
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Skalhottsgatan 9, Kista
P.O. Box 19
S-16493 KISTA
Tel: 46/8/750-200
Telex: (854) 17886
Telefax: (08) 7527781

Hewlett-Packard Sverige AB
Box 266
Topasgatan 1A
S-42123 VÄSTRA-FRÖLUNDA
(Gothenburg)
Tel: (031) 891000
Telex: (854) 17886 (via Spånga office)

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (41/61) 681 59 20
Fax: (41/61) 681 98 59

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365-1366
CH-1217 MEYRIN 1
Tel: (41/22) 7804111
Telex: 27333 HPAG CH

Hewlett-Packard (Schweiz) AG
Allmend
CH-8967 WIDEN
Tel: (41/57) 321 111
Telex: 53933 HPAG CH
Fax: (41/57) 321 475

SYRIA

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 45 92
Telex: 411 771 Meesy

TAIWAN

Hewlett-Packard Taiwan Ltd.
Taipei Office
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

Hewlett-Packard Taiwan Ltd.
THM Office
2, Huan Nan Road
CHUNG LI, Taoyuan
Tel: (034) 929-666

SALES OFFICES

Arranged alphabetically by country (cont'd)

TAIWAN (Cont'd)

Hewlett-Packard Taiwan Ltd.
Taichung Office
5FL, 67, Sec. 3,
Wen-Hsin Road,
TAICHUNG
Tel: (04) 254-1201

Hewlett-Packard Taiwan Ltd.
Kaohsiung Office
11/F, 456, Chung Hsiao 1st Road
KAOHSIUNG
Tel: (07) 2412318

TANZANIA

Adcom Ltd, Inc. Kenya
P.O. Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

THAILAND

Unimesa Co. Ltd.
2540 Sukumvit Avenue
Bangna
BANGKOK 10260
Tel: 662-398-8953
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok

TOGO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22 149

Societe Africaine De Promotion
Immeuble Sageb
Rue d'Atakpame
P.O. Box 4150
LOME
Tel: 21-62-88
Telex: 5357

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAllister Street &
Eastern Main Road, Laventille
P.O. Box 732
PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN

Computer and Controls Ltd.
P.O. Box 51
1 Taylor Street
PORT-OF-SPAIN
Tel: (809) 622-7719/622-7985
Telex: 38722768 COMCON WG
LOGO AGENCY 1264

TUNISIA

Precision Electronique
5, rue de Chypre
Mutuelleville
1002 TUNIS BELVEDERE
Tunisia
Tel: 78 50 37
Tlx: 13238

TURKEY

E.M.A.
Mediha Eldem Sokak No. 41/6
Yenisehir
ANKARA
Tel: 131 4695, 131 9175
Telex: 46912n emselr
Cable: EMATRADE ANKARA

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S. (Headquarter)
Mesrutiyet Mah. 19 Mayıs Cad.
Nova-Baran Plaza Kat: 11-12
ESLI / ISTANBUL
Tel: 175 29 70
Telex: 39150
Fax: 175 29 92

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S.
Paris Caddesi No 3
Diare 9
06670 **ANKARA**
Tel: 125 83 13
Telex: 46180
Fax: 125 47 45

UGANDA

Adcom Ltd, Inc. Kenya
P O Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

UNITED ARAB EMIRATES

Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 591181
Telex: 48710 EMITAC EM
Cable: EMITAC SHARJAH

Emitac Ltd.
P.O. Box 2711
ABU DHABI
Tel: 820419-20
Cable: EMITACH ABUDHABI

Emitac Ltd.
P.O. Box 8391
DUBAI
Tel: 377591

Emitac Ltd.
P.O. Box 473
RAS AL KHAIMAH
Tel: 28133, 21270

UNITED KINGDOM

ENGLAND

Hewlett-Packard Ltd.
Customer Information Centre
King St. Lane
Winnersh, Wokingham
GB-BERKSHIRE RG11 5AR
Tel: (44/734) 784774
Telex: 847178
Fax: 777285

Hewlett-Packard Ltd.
Miller House
The Ring, **BRACKNELL**
Berkshire RG12 1XN
Tel: (44/344) 424-898
Fax: (44/344) 860015, Ext 56023

Hewlett-Packard Ltd.
Customer Sales & Support
Building 1, Filton Road
Stoke Gifford
BRISTOL, BS12 6QZ
Tel: (44/272) 236000

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 44-272-736 806
Telex: 444302

Hewlett-Packard Ltd.
9 Bridewell Place
LONDON EC4V 6BS
Tel: (44/583) 6565
Fax: (44/583) 6565, Ext 4713

Hewlett-Packard Ltd.
Heathside Park Rd.
Cheadle Heath, Stockport
GB-MANCHESTER SK3 ORB
Tel: (44/61) 428-0828
Telex: 668068
Fax: 4955009

Hewlett-Packard Ltd.
Harman House
No. 1 George St
Uxbridge,
GB-MIDDLESEX UB8 1YH
Tel: (44/895) 72020
Telex: 893135
Fax: 73684

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON,
West Yorkshire WF6 1RN
Tel: (44/924) 895-566
Fax: (44/924) 896-691
Telex: 557355

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 44-737-886-55
Telex: 947234

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, **SOLIHULL**, West Midlands
B90 4BL
Tel: 44-21-745-8800
Telex: 338105

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath, Stockport
Cheshire SK3 ORB
Tel: (44/61) 428-0828
Fax: (44/61) 495-5009
Telex: 668068

Hewlett-Packard Ltd.
Harman House
No. 1 George Street
UXBRIDGE, Middlesex UB8 1YH
Tel: (44/895) 72020
Fax: (44/895) 73684

Hewlett-Packard Ltd.
King Street Lane
Winnersh, **WOKINGHAM**
Berkshire RG11 5AR
Tel: (44/734) 784774
Fax: (44/734) 777285 Ext 52285

NORTHERN IRELAND

Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, Carrickfergus
CO. ANTRIM BT38 8PM
Tel: 09603 67333

Unit 5
Bridgewood House
Newforge Lane
Malone Road
BELFAST BT95 NW
Tel: (353/232) 664-851
Fax: (353/232) 665-619

SCOTLAND

Hewlett-Packard Ltd.
1/3 Springburn Place
College Milton North
EAST KILBRIDE, G74 5NU
Tel: 035-52-49251
Fax: 03552-35929
Telex: 779615

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031-331-1188
Fax: 031-331-7412

UNITED STATES

Hewlett-Packard Co.
Customer Information Center
Tel: (800) 752-0900
Hours: 6:00 AM to 5:00 PM
Pacific Time

Alabama

Hewlett-Packard Co.
2100 Riverchase Center
Building 100 - Suite 118
BIRMINGHAM, AL 35244
Tel: (205) 988-0547
Fax: (205) 988-5308

Hewlett-Packard Co.
620 Discovery Dr.
HUNTSVILLE, AL 35806
Tel: (205) 830-2000
Fax: (205) 830-1427

Alaska

Hewlett-Packard Co.
4000 Old Seward Highway
Suite 101
ANCHORAGE, AK 99503
Tel: (907) 563-8855
Fax: (907) 561-7409

Arizona

Hewlett-Packard Co.
8060 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
Fax: (602) 273-8080

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
Fax: (602) 573-7429

Arkansas

Hewlett-Packard Co.
10816 Executive Center Dr
Conway Bldg. Suite 116
LITTLE ROCK, AR 72211
Tel: (501) 225-7178
Fax: (501) 221-3614

California

Hewlett-Packard Co.
26701 W. Argoura Rd.
CALABASAS, CA 91302
Tel: (818) 880-3400
Fax: (818) 880-3437

Hewlett-Packard Co.
353 Lakeside Dr
FOSTER CITY, CA 94404
Tel: (415) 378-8400
Fax: (415) 378-8405

Hewlett-Packard Co.
1907 North Gateway Blvd.
FRESNO, CA 93727
Tel: (209) 252-9652
Fax: (209) 456-9302

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700
Fax: (714) 778-3033

Hewlett-Packard Co.
7408 Hollister Ave. #A
GOLETA, CA 93117
Tel: (805) 685-6100
Fax: (805) 685-6163

Hewlett-Packard Co.
9800 Murrlando Ave.
IRVINE, CA 92718
Tel: (714) 472-3000
Fax: (714) 581-3807 (Direct Dial only)

Hewlett-Packard Co.
2525 Grand Avenue
LONG BEACH, CA 90815
Tel: (213) 498-1111
Fax: (213) 494-1986

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Fax: (213) 337-8338

Hewlett-Packard Co.
321 E. Evelyn Ave.
Bldg. 330
MOUNTAIN VIEW, CA 94039
Tel: (415) 694-2000
Fax: (415) 694-0800

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600
Fax: (818) 505-5875

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
Fax: (415) 460-0713

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
Fax: (916) 927-7152

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
Fax: (619) 268-8487

Hewlett-Packard Co.
50 Fremont St. Suite 200
SAN FRANCISCO, CA 94105
Tel: (415) 882-6800
Fax: (415) 882-6805

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Fax: (408) 988-7103

Hewlett-Packard Co.
5280 Valentine Rd. Suite 205
VENTURA, CA 93003
Tel: (805) 658-6898
Fax: (805) 650-0721

Colorado
Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 938-3065
Fax: (303) 938-3025

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
Fax: (303) 649-5767

Connecticut
Hewlett-Packard Co.
3 Parkland Dr.
DARIEN, CT 06820
Tel: (203) 656-0040
Fax: (203) 656-5563

Hewlett-Packard Co.
115 Glastonbury Blvd
GLASTONBURY, CT 06033
Tel: (203) 633-8100
Fax: (203) 659-8087

Florida
Hewlett-Packard Co.
5900 N. Andrews, Suite 100
FORT LAUDERDALE, FL 33309
Tel: (305) 938-9800
Fax: (305) 938-2293

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 638-9955
Fax: (904) 636-9955

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (407) 729-0704
Fax: (407) 723-4557

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32808
Tel: (407) 859-2900
Fax: (407) 826-9309

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
Fax: (904) 476-4116

Hewlett-Packard Co.
5550 Idlewild, #150
TAMPA, FL 33634
Tel: (813) 884-3282
Fax: (813) 889-4445

Georgia
Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Fax: (404) 980-7669

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
Fax: (404) 246-5206

Hawaii
Hewlett-Packard Co.
Pacific Tower
1001 Bishop St.
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
Fax: (808) 538-7873

Idaho
Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83714
Tel: (208) 323-2700
Fax: (208) 323-2528

Illinois
Hewlett-Packard Co.
2205 E. Empire St.
BLOOMINGTON, IL 61704
Tel: (309) 662-9411
Fax: (309) 662-0351

Hewlett-Packard Co.
525 W. Monroe St., Suite 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
Fax: (312) 930-0986

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
Fax: (312) 357-9896

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Fax: (312) 259-5878

Indiana
Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
Fax: (317) 843-1291

Hewlett-Packard Co.
111 E. Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
Fax: (219) 482-9907

Iowa
Hewlett-Packard Co.
4050 River Center Court
CEDAR RAPIDS, IA 52402
Tel: (319) 393-0606
Fax: (319) 378-1024

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
Fax: (515) 224-1870

Kansas
Hewlett-Packard Co.
North Rock Business Park
3450 N. Rock Rd.
Suite 300
WICHITA, KS 67226
Tel: (316) 636-4040
Fax: (316) 636-4504

Kentucky
Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40222
Tel: (502) 426-0100
Fax: (502) 426-0322

Louisiana
Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
Fax: (504) 467-4100 x 291

Maryland
Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Fax: (301) 362-7650

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
Fax: (301) 948-5986

Massachusetts
Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (508) 682-1500
Fax: (508) 794-2619

Hewlett-Packard Co.
29 Burlington Mall Rd.
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
Fax: (617) 221-5240

Michigan
Hewlett-Packard Co.
3033 Orchard Vista S.E.
GRAND RAPIDS, MI 49546
Tel: (616) 957-1970
Fax: (616) 956-9022

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
Fax: (313) 349-9240

Hewlett-Packard Co.
560 Kirks Rd.
Suite 101
TROY, MI 48064
Tel: (313) 362-5180
Fax: (313) 362-3028

Minnesota
Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
Fax: (612) 641-9787

Mississippi
Hewlett-Packard Co.
800 Woodland Parkway, Suite 101
RIDGELAND, MS 39157
Tel: (601) 957-0730
Fax: (601) 957-2515

Missouri
Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Hewlett-Packard Co.
8601 Winchester Ave.
KANSAS CITY, MO 64133
Tel: (816) 737-0071
Fax: (816) 737-4690

Montana
Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MT 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Nebraska
Hewlett-Packard
11826 Nicholas St.
OMAHA, NE 68154
Tel: (402) 493-0300
Fax: (402) 493-4334

New Jersey
Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 599-5000
Fax: (201) 599-5382

Hewlett-Packard Co.
10 Sylvan Way
PARBIPPANY, NJ 07054
Tel: (201) 682-4000
Fax: (201) 682-4031

Hewlett-Packard Co.
20 New England Av.
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
Fax: (201) 562-6246

New Mexico
Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
Fax: (505) 823-1243

Hewlett-Packard Co.
1362-C Trinity Dr.
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
Fax: (505) 662-4312

New York
Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Fax: (518) 458-1550 x 0393

Hewlett-Packard Co.
130 John Muir Dr.
AMHERST, NY 14228
Tel: (716) 689-3003
Fax: (716) 636-7034

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
Fax: (716) 223-6331

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
Fax: (315) 451-1820 x 255

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
Fax: (212) 330-6967

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
Fax: (914) 935-6497

Hewlett-Packard Co.
Executive Square Office Bldg.
66 Middlebush Rd.
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
Fax: (914) 298-9154

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800
Fax: (516) 682-7806 (2)

North Carolina
Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6800
Fax: (919) 460-2296
(919) 460-2297

Hewlett-Packard Co.
P.O. Box 240318
CHARLOTTE, NC 28224
Tel: (704) 527-8780
Fax: (704) 523-7857

Hewlett-Packard Co.
7029 Albert Pick Rd. #100
GREENSBORO, NC 27409
Tel: (919) 665-1800
Fax: (919) 668-1797
Mailing Address
PO Box 26500
Greensboro, NC 27425

Ohio
Hewlett-Packard Co.
2717 S. Arlington Rd.
AKRON 44312
Tel: (216) 644-2270
Fax: (216) 644-7415

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
Fax: (513) 891-0033

SALES OFFICES

Arranged alphabetically by country (cont'd)

UNITED STATES (Cont'd)

Hewlett-Packard Co.
Moutroffe West Ave.
COPLEY, OH 44321
Tel: (216) 666-7711
Fax: (216) 666-6054

Hewlett-Packard Co.
7887 Washington Village Dr.
DAYTON, OH 45459
Tel: (513) 433-2223
Fax: (513) 433-8633

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG 45342
Tel: (513) 433-2223
Fax: (513) 433-3633

Hewlett-Packard Co.
15885 Sprague Road
STRONGSVILLE, OH 44136
Tel: (216) 243-7300
Fax: (216) 234-7230

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
Fax: (419) 241-7655

Hewlett-Packard Co.
675 Brookside Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
Fax: (614) 891-1476

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
Fax: (405) 942-2127

Hewlett-Packard Co.
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-8700
Fax: (918) 481-2250

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
Fax: (503) 682-8155

Pennsylvania

Hewlett-Packard Co.
Heatherwood Industrial Park
50 Dorchester Rd.
P.O. Box 8080
HARRISBURG, PA 17112
Tel: (717) 657-5900
Fax: (717) 657-5946

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
Fax: (412) 963-1300

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
Fax: (215) 666-2034

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
Fax: (803) 732-4567

Hewlett-Packard Co.
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
Fax: (803) 232-8739

Tennessee

Hewlett-Packard Co.
One Enargy Center Suite 200
Pelissippi Pkwy.
KNOXVILLE, TN 37932
Tel: (615) 966-4747
Fax: (615) 966-8147

Hewlett-Packard Co.
889 Ridge Lake Blvd.,
Suite 100
MEMPHIS, TN 38119
Tel: (901) 763-4747
Fax: (901) 762-8723

Hewlett-Packard Co.
44 Vantage Way,
Suite 160
NASHVILLE, TN 37228
Tel: (615) 255-1271
Fax: (615) 726-2310

Texas

Hewlett-Packard Co.
9050 Capital of Texas Highway, North
#290
AUSTIN, TX 78759
Tel: (512) 346-3855
Fax: (512) 338-7201

Mailing Address
PO Box 9431
Austin, TX 78766-9430

Hewlett-Packard Co.
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
Fax: (915) 581-8097

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
Fax: (713) 776-6495

Hewlett-Packard Co.
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
Fax: (214) 830-8951

Hewlett-Packard Co.
109 E. Toronto, Suite 100
MCALLEN, TX 78503
Tel: (512) 630-3030
Fax: (512) 630-1355

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
Fax: (214) 699-4337

Hewlett-Packard Co.
14100 San Pedro Ave., Suite 100
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
Fax: (512) 491-1299

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
Fax: (801) 974-1780

Virginia

Hewlett-Packard Co.
840 Greenbriar Circle
Suite 101
CHEESAPEAKE, VA 23320
Tel: (804) 424-7105
Fax: (804) 424-1494

Hewlett-Packard Co.
4401 Water Front Dr.
GLEN ALLEN, VA 23050
Tel: (804) 747-7750
Fax: (804) 985-9297

Hewlett-Packard Co.
2800 Electric Road Suite 100
ROANOKE, VA 24018
Tel: (703) 774-3444
Fax: (703) 989-8049

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
Fax: (206) 643-8748

Hewlett-Packard Co.
N. 1225 Argonne Rd
SPOKANE, WA 99212-2657
Tel: (509) 922-7000
Fax: (509) 927-4236

West Virginia

Hewlett-Packard Co.
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
Fax: (304) 925-1910

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 792-8800
Fax: (414) 792-0218

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 59-82-802-586
Telex: 398802586

Olympia de Uruguay S.A.
Maquinas de Oficina
Avda. del Libertador 1997
Casilla de Correos 6644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY

VENEZUELA

Analytical Supplies, CA
Quinta #103 Impermes
Av El Centro
Los Chorrros
Apartado 75472
CARACAS
Tel: 364904, 2394047
Telex: 26274 CABIC

Hewlett-Packard de Venezuela C.A.
Residencias Tia Betty Local 1
Avenida 3 Y con Calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: 586175869
Telex: 62464 HPMAR

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433

Do Hermes
Celovska 73
YU-61000 LJUBLJANA
Tel: (061) 553 170
Telex: 31583

ZAIRE

C.I.E.
Computer & Industrial Engineering
25 Ave. de la Justice Gombe
Boite Postale 10976
KINSHASA
Tel: 32 063, 32 633, 28 251
Telex: 21552
Fax: 22 850

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: 21 55 80
Telex: 40128

ZIMBABWE

Field Consolidated (Private) Ltd.
Systrom Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Tel: 73 98 81
Telex: 26241
Fax: 70 20 08

Please send directory corrections to:
Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

September 1989