


L3 INSTALLATION FOR "-D"

NOTES: UNLESS OTHERWISE SPECIFIED

1. WORKMANSHIP SHALL BE IN ACCORDANCE WITH IPC-A-610.
3. PARTS TO OMIT WILL BE SPECIFIED ON THE BILLS OF MATERIAL. LOCATIONS OF OMITTED PARTS SHALL BE FREE OF SOLDER. MASK THE SOLDER STENCIL WHERE SMT PARTS ARE OMITTED.
4. DEPANELIZE BOARDS AFTER ASSEMBLY AND ROUTE-OUT THE BREAKOUT TABS ON FOUR SIDES OF THE BOARD EDGE.
6. INSTALL 4 RUBBER FEET (BUMPON SJ-5303) AT 4 CORNERS AS SHOWN BELOW:

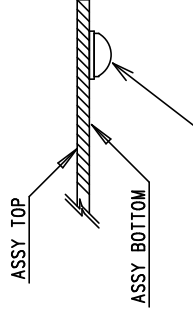

INSTALLATION 0 OHM RESISTOR HERE FOR Q9 IN "-A, -E".

C4 INSTALLATION FOR "-B"

C6 INSTALLATION FOR "-B, -C, -D, -G"

D1 INSTALLATION: FOR "-C, -B, -D, -F, -G",





R29 INSTALLATION FOR "-B, -C, -D, -F, -G, -H"



Q13 INSTALLATION

FOR -A, -B, -C, -D, -E

FOR -F, -G



BOTTOM VIEW

