


1. WORKMANSHIP SHALL BE IN ACCORDANCE WITH IPC-A-610.
2. INSTALL SHUNT'S APPROXIMATELY WHERE SHOWN.
3. DO NOT APPLY ANY KIND OF ASSEMBLY STAMP OR QA STAMP.

4	INSTALL TURRETS AS SHOWN.
5	INSTALL 4 STANDOFFS AT 4 CORNERS AS SHOWN.

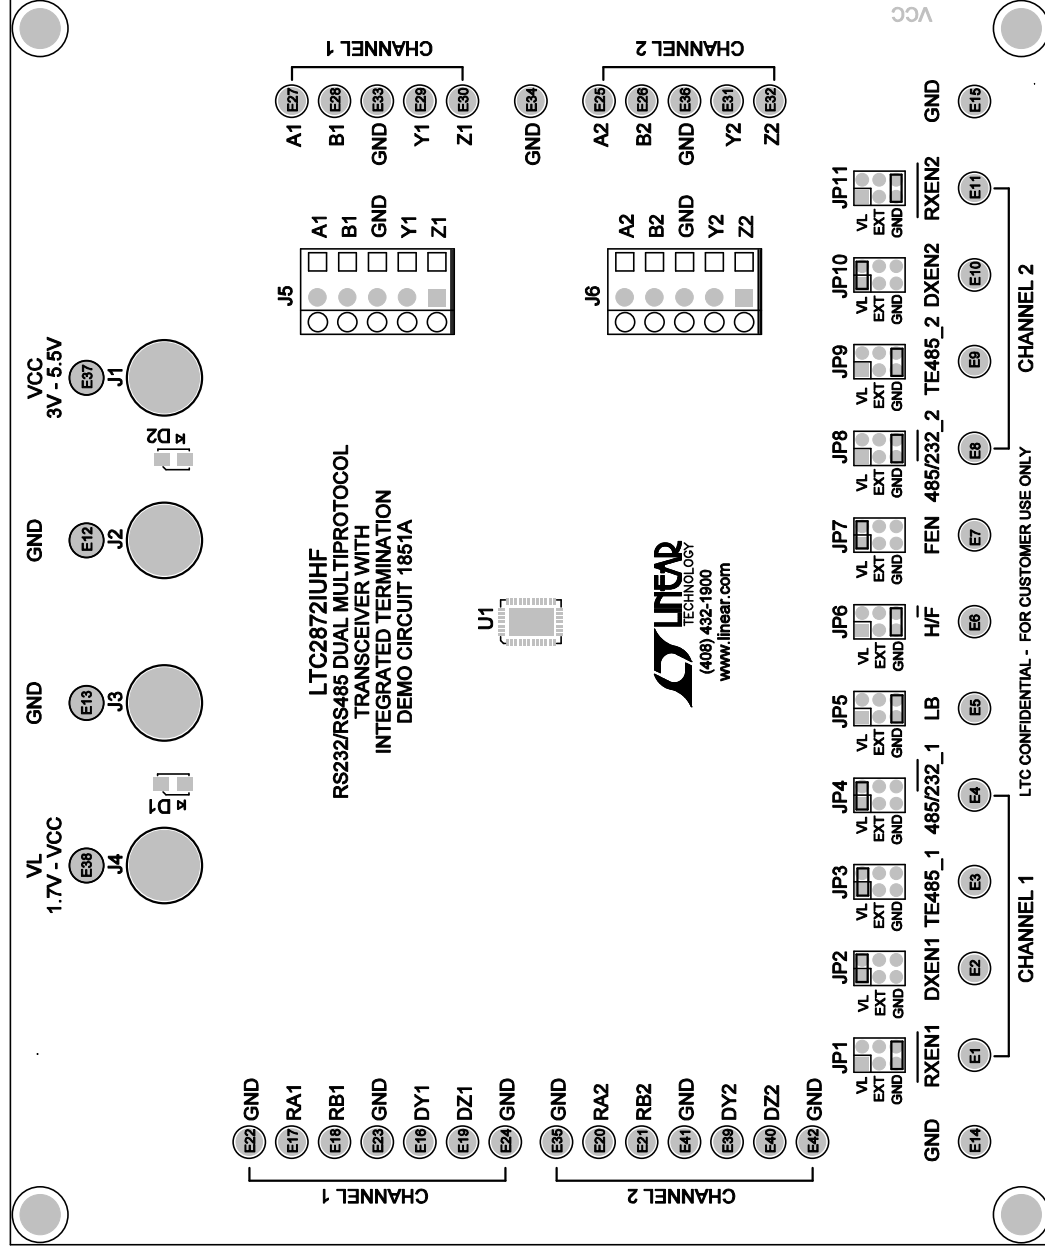

4 38X

