

SMT Guidelines for Stacked Inductor on Voltage Regulator IC

Sammy Wong

ABSTRACT

In today's *Cloud Infrastructure* systems, board space and power density are challenging particularly in power supply designs where several high-current point-of-load rails are present. End equipment such as enterprise servers and switches, workstations, base stations, network attached storage, FPGA testers, network testers, and other test and measurement equipment employ several high-current CPUs, ASICs, FPGAs, and DDR memory – all of which need high power, while the available board area is steadily decreasing. As long as 11.5-mm height is acceptable, a great opportunity today is stacking the inductor on top of the IC, thus saving PCB area. The following guideline is a step-by-step guide on assembling TI voltage regulator ICs and inductors on top of the IC in a high-volume manufacturing environment where SMT processes are used.

Although this guideline can be applied to many TI voltage regulator ICs, the following ICs are a typical offering for both single- and multi-phase voltage regulators for point-of-load (POL) solutions where inductors on top can be used to reduce the X-Y PCB area on the board.

This guideline is applicable to the following TI devices:

iFET Converters: TPS54020, TPS54020, TPS544C20/B20, TPS546C20, TPS53513/515/915, TPS548A20/9A20, TPS53318/19/53/55, TPS544B25/C25, TPS548D22

Controllers: TPS53647, TPS40425/8, TPS40422, TPS53631/41/61, TPS40400, TPS53819A, TPS53219A, TPS40303/4/5, TPS40322

Table 1. Assembly Quick Start Checklist

| Operation | Assembly Quick Start Checklist |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Solder Paste | TI recommends the use of type 3 or finer solder paste when mounting the devices |
| Reflow Profile | Measure the peak reflow temperature by placing a fine gauge thermocouple (Type K) on top of the package body center. |
| | Ensure that the peak reflow temperature does not exceed 260C max. (260°C +/- 5°C) Exceeding the max temperature may damage the part. |
| | Reflow time within 5°C Peak Temp must not exceed 20 seconds and the reflow time above liquidus must not exceed 60 seconds. |
| | Minimizing the number of reflow cycles seen by devices is recommended. |
| Moisture Handling | Depending on the products, the MSL level can be 1, 2, or 3. Refer to the data sheet of the individual product for its MSL level (links to the data sheets are available in Section 8). MSL2 devices have a maximum floor life of 1 year after the devices are removed from the sealed package. MSL3 devices have a maximum floor life of 1 week after the devices are removed from the sealed package. |
| | See IPC/JEDEC J-STD-020 for additional details. |

TDK is a trademark of TDK Corporation.
 All other trademarks are the property of their respective owners.

1 PCB Design Guideline

Figure 1 illustrates the example TPS544C20 layout and Table 2 lists the layout parameters.

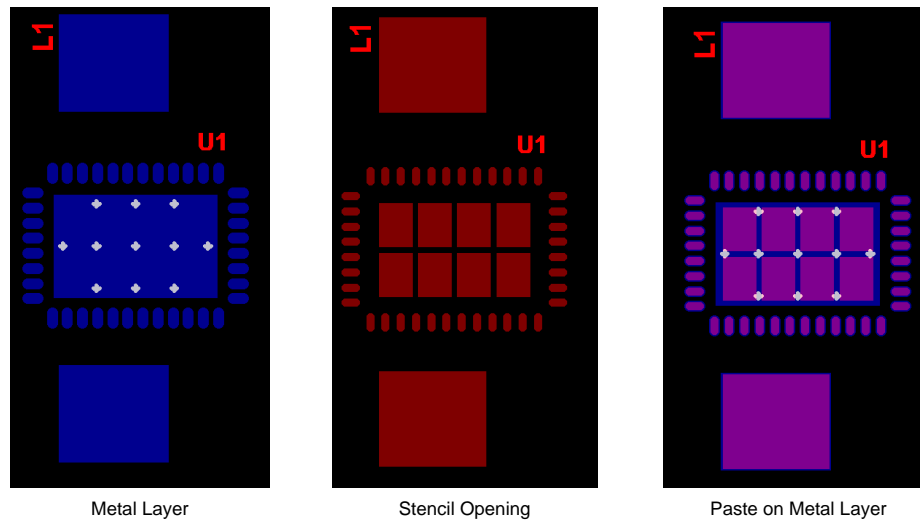


Figure 1. Example TPS544C20 PCB Layout

Table 2. TPS544C20 PCB Layout Parameters

| | U1 | | L1 |
|---------|-------------------|----------------------|-------------------|
| | IO | DAP | |
| Metal | 0.24 mm × 0.60 mm | 5.30 mm × 3.30 mm | 3.50 mm × 3.10 mm |
| Mask | 0.34 mm × 0.70 mm | 5.40 mm × 3.40 mm | 3.60 mm × 3.20 mm |
| Stencil | 0.24 mm × 0.60 mm | 8x 1.08 mm × 1.43 mm | 3.50 mm × 3.10 mm |

This PCB layout recommendation applies only to the TPS544C20 device. For other device PCB layout recommendations, refer to the individual application note.

Recommended stencil thickness: 0.1 mm.

TI recommends stencil manufacturing by either laser cut, electro polished, or electroform with tapered aperture walls and a 5-degree taper to facilitate paste release.

2 Inductor Selection

Two inductors are custom made for this board assembly. TI recommends using one of the inductors listed in Table 3 for this application.

Table 3. Electrical Specification

| TDK™ Identification | Inductance | | Test Frequency (kHz) | DC Resistance | | Rated DC I_{DC} 1 ⁽¹⁾ (A Typ.) | Current I_{DC} 2 ⁽²⁾ (A Typ.) |
|---------------------|------------------|----------|----------------------|---------------|----------|---------------------------------------------|--------------------------------------------|
| | at 0 A (µH Typ.) | Tol. (%) | | Spec. (mΩ) | Tol. (%) | | |
| VLB10090HT-R10M-B2 | 0.10 | ±20% | 100 | 0.33 | ±10% | 100.0 | 32.8 |
| VLB10090HT-R33K-B2 | 0.33 | ±10% | 100 | 0.33 | ±10% | 45.0 | 32.8 |

⁽¹⁾ I_{DC} 1: Based on the inductance change (drop 30% typ. from L_0)

⁽²⁾ I_{DC} 2: Based on the self temperature rise. (+40° C typ.)

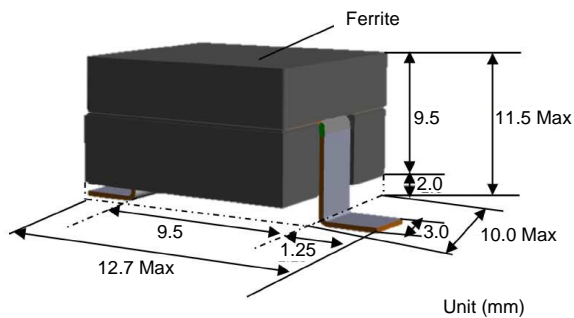


Figure 2. Inductor Dimensions

TDK Corporation of America
Magnetics Business group
 Contact information
 475 Half Day Road,
 Lincolnshire, IL 60069-2934
 Phone: (847) 699-2299
<http://www.tdk.com/contact.php>

3 Solder Paste

TI recommends using type 4 or finer solder paste. Using paste provides the following advantages:


- Paste acts as a flux to aid in wetting the solder ball to the PCB land
- The adhesive properties of the paste hold the component in place during reflow
- Paste contributes to the final volume of solder in the joint, allowing this volume to be varied and providing an optimal joint
- Paste selection is normally driven by overall system assembly requirements. In general, the *no clean* compositions are preferred, due to the difficulty in cleaning under the mounted components.

4 Component Placement


Components are placed by programming the component thickness or by controlling the mounting force. If placement is by programming the component thickness, add 0.05 mm to the actual component thickness so that package is sitting halfway into paste. If placement is by force feedback, utilize minimum force while not exceeding 5 Newton's of force. This control avoids forcing out solder paste or package free fall resulting in solder balling.

5 Board Assembly Flow


Figure 3 illustrates the assembly flow of the board.

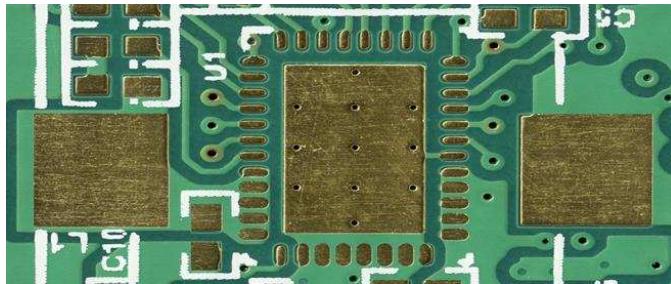

Bare Board Showing U1 and L1

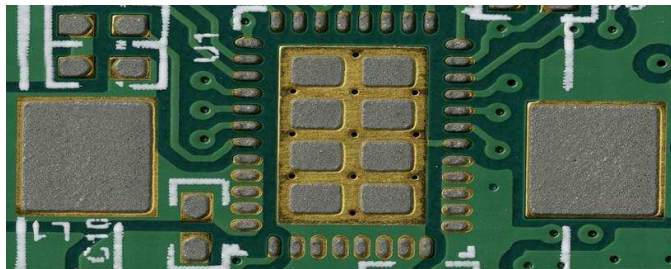


Print Solder Paste

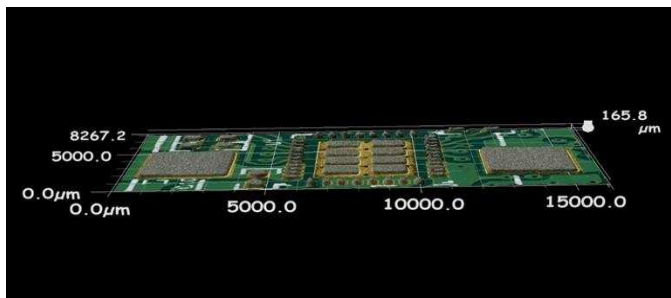

Inspect Solder Paste



Place Component

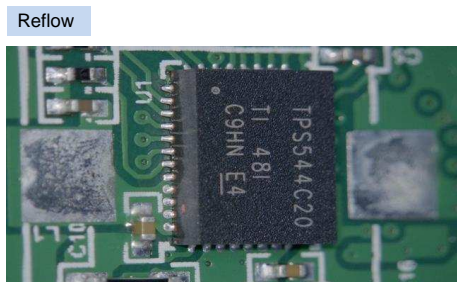

Reflow

Add Inductor

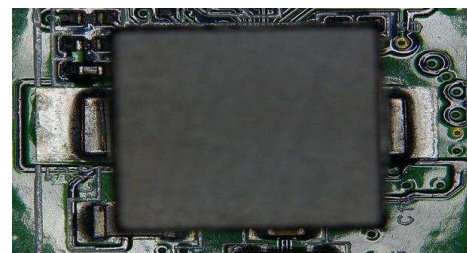


Figure 3. Board Assembly Flow

6 Component Rework Guideline

Repair Procedure

- A package repair/rework station is strongly recommended for this process (that is, Air-Vac Engineering, Metcal, or Den-On Inst.)

Package Replacement Procedure

- Board preheat (package bake recommended)
- Reflow of component solder
- Vacuum removal of component
- Cleaning and preparation of PWB lands
- Screening of solder paste (a mini stencil is recommended)
- Placement and reflow of new component
- Inspection of solder joints

Repair Procedure Notes

- Prior to any rework process, TI recommends baking the board 4 hours at 125°C to remove any moisture that might cause delamination or cracking
- Reusing a removed package is not recommended
- Use a new package for the repair process. The new package should be kept dry and should not exceed the stated floor life. Only rebake a package a maximum of 3 times.

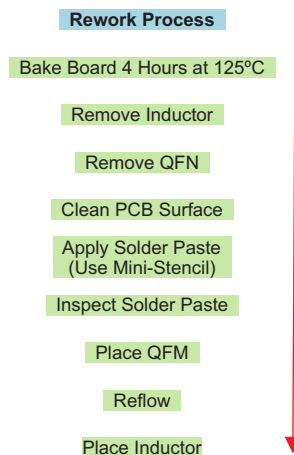



Figure 4. Rework Process

7 Reflow Profile

This reflow profile serves as an example only. The actual profile depends on the various factors such as board size, board thickness, component density, solder paste, and so forth.

Consider the solder paste manufacturer-recommended reflow profile as the optimal source for your specific application.

| | JEDEC Pb-Free Profile Example |
|-----------------------------------------|-------------------------------|
| Ramp Rate | 3°C/second maximum |
| Preheat | 150°C to 180°C |
| | 60 to 120 seconds |
| Time Above Liquidus | 220°C |
| | 30 to 90 seconds |
| Peak Temperature | 260°C +0/-5°C |
| Time Within 5°C Peak Temperature | 10 to 20 seconds |
| Rampdown Rate | 6°C/seconds maximum |

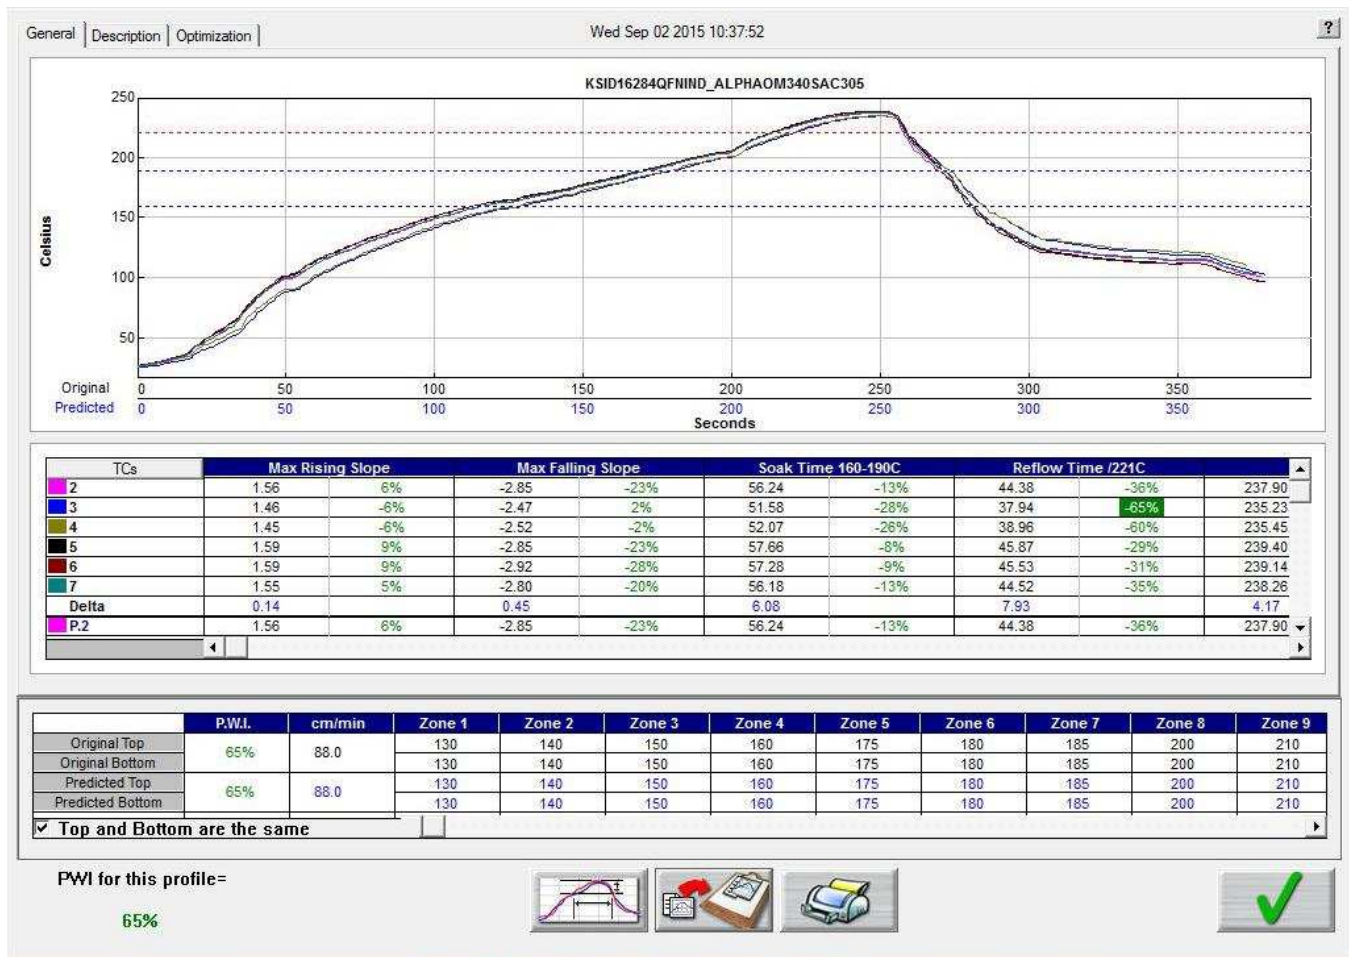

Temperature profile is JEDEC Pb-free reflow compliant and shown as an example only.

Figure 5. Reflow Profile Example

8 References

1. QFN/SON PCB Attachment Application Report ([SLUA271](#))
2. Moisture Reflow Sensitivity Classification for Nonhermetic Solid State SMD ([J-STD-020](#))
3. Handling, Packing, Shipping and Use of Moisture Reflow Sensitive SMD ([J-STD-033](#))
4. Design and Assembly Process Implementation for Bottom Termination Components ([IPC-7093](#))

Data Sheets

1. TPS54020 Small, 10-A, 4.5-V to 17-V Input, SWIFT™ Synchronous Step-Down Converter With Light-Load Efficiency ([SLVSB10](#))
2. TPS544x20 4.5-V to 18-V, 20-A, and 30-A SWIFT™ Synchronous Buck Converters with PMBus™ ([SLUSB69](#)) – TPS544B20 and TPS544C20
3. TPS53513 1.5-V to 18-V (4.5-V to 25-V Bias) Input, 8-A Single Synchronous Step-Down SWIFT™ Converter ([SLUSBP9](#))
4. TPS53515 1.5-V to 18-V (4.5-V to 25-V Bias) Input, 12-A Single Synchronous Step-Down SWIFT™ Converter ([SLUSBN5](#))
5. TPS53915 1.5 to 18-V (4.5 to 25-V Bias) Input, 12-A Synchronous Step-Down SWIFT™ Converter With PMBus™ ([SLUSAS9](#))
6. TPS548A20 1.5-V to 20-V (4.5-V to 25-V Bias) Input, 15-A Synchronous Step-Down SWIFT™ Converter ([SLUSC78](#))
7. TPS549A20 1.5-V to 20-V (4.5-V to 25-V Bias) Input, 15-A Synchronous Step-Down SWIFT™ Converter With PMBus™ ([SLUSC79](#))
8. TPS5331x High-Efficiency, 8-A or 14-A, Synchronous Buck Converter with Eco-mode Control ([SLUSAY8](#)) – TPS53318 and TPS53319
9. TPS53353 High-Efficiency 20-A Synchronous Buck Converter With Eco-mode™ ([SLUSAK2](#))
10. TPS53355 High-Efficiency 30-A Synchronous Buck Converter With Eco-mode™ ([SLUSAE5](#))
11. TPS544x25 4.5-V to 18-V, 20-A and 30-A SWIFT™ Synchronous Buck Converters with PMBus™ and Frequency Synchronization ([SLUSC81](#)) – TPS544B25 and TPS544C25
12. TPS53647 4-Phase, D-CAP+, Step-Down, Buck Controller with NVM and PMBus Interface for ASIC Power and High-Current Point-of-Load ([SLUSC39](#))
13. TPS40425 Dual Output, 2-Phase, Stackable PMBus™ Synchronous Buck Driverless Controller with Adaptive Voltage Scaling (AVS) Bus ([SLUSBO6](#))
14. TPS40428 Dual Output, 2-Phase, Stackable PMBus™ Synchronous Buck Driverless Controller with Adaptive Voltage Scaling (AVS) Bus ([SLUSBV0](#))
15. TPS40422 Dual-Output or Two-Phase Synchronous Buck Controller with PMBus™ Interface ([SLUSAQ4](#))
16. TPS40400 3-V to 20-V PMBus Synchronous Buck Controller ([SLUS930](#))
17. TPS53819A High-Performance, Eco-mode™, Single Synchronous Step-Down Controller with PMBus™ ([SLUSB56](#))
18. TPS53219A Wide Input Voltage, Eco-Mode™, Single Synchronous Step-Down Controller ([SLUSAU4](#))
19. TPS4030x 3-V to 20-V Input Synchronous Buck Controller ([SLUS964](#)) – TPS40303, TPS40304, and TPS40305
20. TPS40322 Dual Output or Two-Phase Synchronous Buck Controller ([SLUSAF8](#))

Inductor on Top – TI Designs

1. Complete PMBus Power System for Enterprise Ethernet Switches Reference Design ([PMP10896](#))
2. High Density 30W DC-DC PMBus Buck Converter with Inductor Mounted Over the Converter to Save Space ([PMP10364](#))
3. High Power Density 12Vin, 100W Synchronous DC/DC Step-Down Buck Converter with Inductor-On-Top ([TIDA-00510](#))
4. TPS53355 12.8W Buck Inductor On Top Design ([TIDA-00471](#))
5. TPS53515 11.8W Buck Inductor On Top Design ([TIDA-00595](#))

9 Questions and Answers

Q. Is package rework possible? Are tools available?

A. Yes, rework is possible, and there are several semi-automatic SMT rework machines and profiles available. However, TI does not guarantee the reliability of reused packages. It is best to discard and replace any package that fails test. Refer to the [Component Rework Guideline](#) section of this document for more details.

Q. What size land diameter for these packages should I design on my board?

A. Land size is the key to board-level reliability and Texas Instruments strongly recommends following the design rules included within this summary.

Q. Is a special inspection machine required to X-Ray the IC package leads (optical inspection)?

A. Yes, Nordson Dage X-Plane technology (orbital X-Ray, CT scanner-like)
<http://www.nordson.com/en/divisions/dage/products/x-ray-inspection-systems/computerized-tomography-option>

Q. Is this inductor-on-top solution in high-volume production currently?

A. Yes, by several Tier-1 cloud infrastructure customers.

Q. Any EMI concerns for traces under the package and how can customers design their board to minimize EMI?

A. EMI is controlled by minimizing any complex current loops on the PCB trace. Helpful hints include:

- Solid ground and power planes can be used in the design. Partitioned ground and power planes must be avoided. These ground and power partitions may create complex current loops, increasing radiation.
- Avoid right angles or "T" crosses on the trace. Right angles can cause impedance mismatch and increase trace capacitance causing signal degradation.
- Minimize power supply loops by keeping power and ground traces parallel and adjacent to each other.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

| | |
|------------------------------|--------------------------------------------------------------------------------------|
| Audio | www.ti.com/audio |
| Amplifiers | amplifier.ti.com |
| Data Converters | dataconverter.ti.com |
| DLP® Products | www.dlp.com |
| DSP | dsp.ti.com |
| Clocks and Timers | www.ti.com/clocks |
| Interface | interface.ti.com |
| Logic | logic.ti.com |
| Power Mgmt | power.ti.com |
| Microcontrollers | microcontroller.ti.com |
| RFID | www.ti-rfid.com |
| OMAP Applications Processors | www.ti.com/omap |
| Wireless Connectivity | www.ti.com/wirelessconnectivity |

Applications

| | |
|-------------------------------|------------------------------------------------------------------------------------------|
| Automotive and Transportation | www.ti.com/automotive |
| Communications and Telecom | www.ti.com/communications |
| Computers and Peripherals | www.ti.com/computers |
| Consumer Electronics | www.ti.com/consumer-apps |
| Energy and Lighting | www.ti.com/energy |
| Industrial | www.ti.com/industrial |
| Medical | www.ti.com/medical |
| Security | www.ti.com/security |
| Space, Avionics and Defense | www.ti.com/space-avionics-defense |
| Video and Imaging | www.ti.com/video |

TI E2E Community

e2e.ti.com