Model 7999-2 Multiplexer Card Instruction Manual

Contains Operating and Servicing Information



WARRANTY

Keithley Instruments, Inc. warrants this product to be free from defects in material and workmanship for a period of 1 year from date of shipment.

Keithley Instruments, Inc. warrants the following items for 90 days from the date of shipment: probes, cables, rechargeable batteries, diskettes, and documentation.

During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, write or call your local Keithley representative, or contact Keithley headquarters in Cleveland, Ohio. You will be given prompt assistance and return instructions. Send the product, transportation prepaid, to the indicated service facility. Repairs will be made and the product returned, transportation prepaid. Repaired or replaced products are warranted for the balance of the original warranty period, or at least 90 days.

LIMITATION OF WARRANTY

This warranty does not apply to defects resulting from product modification without Keithley's express written consent, or misuse of any product or part. This warranty also does not apply to fuses, software, non-rechargeable batteries, damage from battery leakage, or problems arising from normal wear or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES.

NEITHER KEITHLEY INSTRUMENTS, INC. NOR ANY OF ITS EMPLOYEES SHALL BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF ITS INSTRU-MENTS AND SOFTWARE EVEN IF KEITHLEY INSTRUMENTS, INC., HAS BEEN ADVISED IN ADVANCE OF THE POS-SIBILITY OF SUCH DAMAGES. SUCH EXCLUDED DAMAGES SHALL INCLUDE, BUT ARE NOT LIMITED TO: COSTS OF REMOVAL AND INSTALLATION, LOSSES SUSTAINED AS THE RESULT OF INJURY TO ANY PERSON, OR DAM-AGE TO PROPERTY.



Keithley Instruments, Inc. • 28775 Aurora Road • Cleveland, OH 44139 • 440-248-0400 • Fax: 440-248-6168 • http://www.keithley.com

BELGIUM: Keithley Instruments B.V. CHINA: Keithley Instruments China FRANCE: Keithley Instruments Sarl GERMANY: Keithley Instruments GmbH GREAT BRITAIN: Keithley Instruments Ltd Keithley Instruments GmbH INDIA: Keithley Instruments s.r.l. ITALY: NETHERLANDS: Keithley Instruments B.V. SWITZERLAND: Keithley Instruments SA TAIWAN: Keithley Instruments Taiwan

Bergensesteenweg 709 • B-1600 Sint-Pieters-Leeuw • 02/363 00 40 • Fax: 02/363 00 64 Yuan Chen Xin Building, Room 705 • 12 Yumin Road, Dewai, Madian • Beijing 100029 • 8610-62022886 • Fax: 8610-62022892 B.P. 60 • 3, allée des Garays • 91122 Palaiseau Cédex • 01 64 53 20 20 • Fax: 01 60 11 77 26

Landsberger Strasse 65 • D-82110 Germering • 089/84 93 07-40 • Fax: 089/84 93 07-34

The Minster • 58 Portman Road • Reading, Berkshire RG30 1EA • 0118-9 57 56 66 • Fax: 0118-9 59 64 69 Flat 2B, WILOCRISSA • 14, Rest House Crescent • Bangalore 560 001 • 91-80-509-1320/21 • Fax: 91-80-509-1322

Viale S. Gimignano, 38 • 20146 Milano • 02/48 30 30 08 • Fax: 02/48 30 22 74 Postbus 559 • 4200 AN Gorinchem • 0183-635333 • Fax: 0183-630821

Kriesbachstrasse 4 • 8600 Dübendorf • 01-821 94 44 • Fax: 01-820 30 81

1 Fl. 85 Po Ai Street • Hsinchu, Taiwan, R.O.C. • 886-3572-9077• Fax: 886-3572-9031

Model 7999-2 Three-Pole Multiplexer Card Instruction Manual

©1999, Keithley Instruments, Inc. All rights reserved. Cleveland, Ohio, U.S.A. First Printing, September 1999 Document Number: 7999-2-901-01 Rev. A

Manual Print History

The print history shown below lists the printing dates of all Revisions and Addenda created for this manual. The Revision Level letter increases alphabetically as the manual undergoes subsequent updates. Addenda, which are released between Revisions, contain important change information that the user should incorporate immediately into the manual. Addenda are numbered sequentially. When a new Revision is created, all Addenda associated with the previous Revision of the manual are incorporated into the new Revision of the manual. Each new Revision includes a revised copy of this print history page.

All Keithley product names are trademarks or registered trademarks of Keithley Instruments, Inc. Other brand names are trademarks or registered trademarks of their respective holders.

Safety Precautions

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with non-hazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read the operating information carefully before using the product.

The types of product users are:

Responsible body is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the manual. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, and perform safe installations and repairs of products. Only properly trained service personnel may perform installation and service procedures.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V RMS, 42.4V peak, or 60VDC are present. A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.

Users of this product must be protected from electric shock at all times. The responsible body must ensure that users are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product users in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 volts, **no conductive part of the circuit may be exposed.**

As described in the International Electrotechnical Commission (IEC) Standard IEC 664, digital multimeter measuring circuits (e.g., Keithley Models 175A, 199, 2000, 2001, 2002, and 2010) are Installation Category II. All other instruments' signal terminals are Installation Category I and must not be connected to mains.

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, make sure the line cord is connected to a properly grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.

The instrument and accessories must be used in accordance with its specifications and operating instructions or the safety of the equipment may be impaired.

Do not exceed the maximum signal levels of the instruments and accessories, as defined in the specifications and operating information, and as shown on the instrument or test fixture panels, or switching card.

When fuses are used in a product, replace with same type and rating for continued protection against fire hazard.

Chassis connections must only be used as shield connections for measuring circuits, NOT as safety earth ground connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.

If a screw is present, connect it to safety earth ground using the wire recommended in the user documentation.

The \(\frac{1}{2} \) symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

The symbol on an instrument shows that it can source or measure 1000 volts or more, including the combined effect of normal and common mode voltages. Use standard safety precautions to avoid personal contact with these voltages.

The **WARNING** heading in a manual explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading in a manual explains hazards that could damage the instrument. Such damage may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.

Before performing any maintenance, disconnect the line cord and all test cables.

To maintain protection from electric shock and fire, replacement components in mains circuits, including the power transformer, test leads, and input jacks, must be purchased from Keithley Instruments. Standard fuses, with applicable national safety approvals, may be used if the rating and type are the same. Other components that are not safety related may be purchased from other suppliers as long as they are equivalent to the original component. (Note that selected parts should be purchased only through Keithley Instruments to maintain accuracy and functionality of the product.) If you are unsure about the applicability of a replacement component, call a Keithley Instruments office for information.

To clean an instrument, use a damp cloth or mild, water based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing.

7999-2 Three-Pole Multiplexer Card

RELAY SWITCH CONFIGURATION:

1 bank of 3:1 mux 3-pole switching. 1 bank of 4:1 mux 3-pole switching.

CONTACT CONFIGURATION: 3-pole Form A.

CONNECTOR TYPE:

Mux Common Connector (1): 6-pin LEMO. Mux Input/Output Connectors (7): 3-pin LEMO. Control Connectors (1): 15-pin male D-sub.

MAXIMUM SIGNAL: 30V DC, 42V peak between any two inputs or chassis, 1A switched, CAT I.

CONTACT LIFE: Cold Switching: 10×10^6 closures. At Maximum Signal Levels: $2\times 10^{\scriptscriptstyle 5}$ closures.

CHANNEL RESISTANCE (per conductor): $<1\Omega$. CONTACT POTENTIAL: $<10\mu V$ per contact.

ACTUATION TIME: 3ms.

ISOLATION: Channel to Channel: $>10^9\Omega$, <80pF.

 $>10^{9}\Omega$, <150pF. Common Mode:


CROSSTALK (1MHz, 50Ω load): <-40dB.

INSERTION LOSS (50Ω source, 50Ω load): <0.1dB ≤20kHz, >25dB @ 2GHz.

RELAY DRIVE CURRENT (per relay): 8.5mA @ 24V (user supplied).

USER SUPPLIED VOLTAGE: 24V \pm 4V DC, 175mA max. RELAY CONTROL INPUT: Relay Closed: <2.0V. Relay Open: User supplied voltage.

RELAY DRIVE CONFIGURATION:

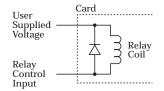

GENERAL

ENVIRONMENT: Operating: 0° to 50°C, up to 35°C <80% RH. -25° to 65°C. Storage:

EMC: Conforms with European Union Directive 89/336/EEC, EN 55011, EN 50082-1, EN 61000-3-2 and 61000-3-3, FCC part 15

SAFETY: Conforms with European Union Directive 73/23/EEC, EN 61010-1.

DIMENSIONS: 152mm long \times 102mm wide \times 13mm deep (6" \times 4"

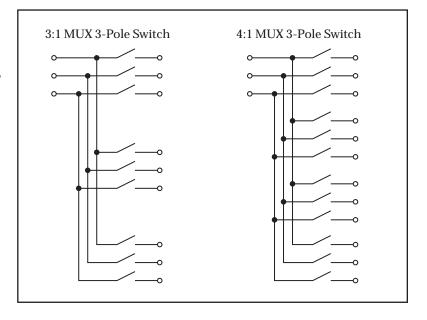


Table of Contents

1	General Information	
	Introduction	1-2
	Feature overview	
	Warranty information	
	Manual addenda	1-2
	Safety symbols and terms	1-3
	Specifications	1-3
	Unpacking and Inspection	1-3
	Inspection for damage	1-3
	Handling precautions	
	Shipment contents	1-4
	Instruction manual	
	Repacking for shipment	
	Recommended connectors	1-4
2	Connections	
	Introduction	2-2
	Handling precautions	
	Card configuration	
	Card layout	
	Simplified schematic	
	Card connections	2-5
	Input/output connectors	2-5
	AUDIO IN and AUDIO OUT connector	2-6
	CONTROL/MEASURE/POWER connector	2-7
	Relay power and control	2-7
3	Operating Considerations	
	Introduction	3-2
	Maximum signal considerations	3-2
	Relay power and control	
	Switching considerations	3-2
	Keeping connectors clean	3-2
	Path isolation	3-3
	Insertion loss	3-4
	Crosstalk	
	RFI/EMI	
	Ground loops	3-5

4	Service Information
	Introduction
	Handling and cleaning precautions4-2
	Handling precautions
	Card cleaning
	Performance verification
	Environmental conditions
	Recommended equipment4-3
	Multiplexer card connections 4-4
	Channel resistance tests
	Contact potential tests
	Channel-to-channel isolation tests
	Common-mode isolation tests
	Replacing components
	Replacement parts
	Replacement precautions
	Soldering considerations
	Disassembly 4-8
5	Replaceable Parts
	Introduction
	Parts list
	Ordering information
	Factory service5-2
	Component layout and schematic diagram 5-3

List of Illustrations

2	Connections
Figure 2-1	Card configuration2-3
Figure 2-2	Simplified schematic
Figure 2-3	Input/output connector terminal designations 2-5
Figure 2-4	AUDIO IN AUDIO OUT connector terminals 2-0
Figure 2-5	CONTROL/MEASURE/POWER connector terminals 2-7
3	Operating Considerations
Figure 3-1	Path isolation resistance
Figure 3-2	Voltage attenuation by path isolation resistance 3-4
Figure 3-3	Ground loops
Figure 3-4	Eliminating ground loops
4	Service Information
Figure 4-1	Channel resistance test connections 4
Figure 4-2	Contact potential connections
Figure 4-3	Channel-to-channel isolation connections 4-6
Figure 4-4	Common-mode isolation connections 4-7

List of Tables

2	Connections
Table 2-1	Input/output connector terminals
Table 2-2	AUDIO IN AUDIO OUT connector terminals
Table 2-3	CONTROL/MEASURE/POWER connector terminals 2-7
4	Service Information
Table 4-1	Recommended verification equipment 4-3
5	Replaceable Parts
Table 5-1	Parts list5-3

General Information

Introduction

This section contains general information about the Model 7999-2 Three-Pole Multiplexer Card. The information is organized as follows:

- · Feature overview
- Warranty information
- · Manual addenda
- Safety symbols and terms
- · Specifications
- · Unpacking and inspection
- · Recommended mating connectors

If you have any questions after reviewing this information, please contact your local Keithley representative or call a Keithley Applications Engineer at 1-800-348-3735 (U.S. and Canada only). Worldwide phone numbers are listed at the front of this manual.

Feature overview

The Model 7999-2 is a three-pole multiplexer card with the following features:

- One bank of 3:1 multiplexer 3-pole switching
- One bank of 4:1 multiplexer 3-pole switching
- External relay control and +24V DC power connections
- · Lemo style connectors for multiplexer input/output and common connections
- Low insertion loss for audio frequencies (<0.1dB up to 20kHz)

Warranty information

Warranty information is located at the front of this instruction manual. Should your Model 7999-2 require warranty service, contact a Keithley representative or an authorized repair facility in your area for further information. When returning the card for repair, be sure to fill out and include the service form at the back of this manual to provide the repair facility with the necessary information.

Manual addenda

Any improvements or changes concerning the multiplexer card or manual will be explained in an addendum included with the manual. Be sure to note these changes and incorporate them into the manual.

Safety symbols and terms

The following symbols and terms may be found on the multiplexer card or used in this manual.

The \triangle symbol indicates that the user should refer to the operating instructions located in the manual

The symbol shows that high voltage may be present on the terminal(s). Use standard safety precautions to avoid personal contact with these voltages.

The **WARNING** heading used in this manual explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading used in this manual explains hazards that could damage the multiplexer card. Such damage may invalidate the warranty.

Specifications

Full Model 7999-2 specifications are included at the front of this manual.

Unpacking and Inspection

Inspection for damage

The Model 7999-2 is packaged in a re-sealable, anti-static bag to protect it from damage due to static discharge and from contamination that could degrade its performance. Before removing the card from the bag, observe the precautions on handling discussed below.

Handling precautions

- Always grasp the card by the covers. Do not touch board surfaces or components.
- After removing the card from its anti-static bag, inspect it for any obvious signs of physical damage. Report any such damage to the shipping agent immediately.
- When the card is not installed and connected, keep the card in its anti-static bag, and store it in the original packing carton.

Shipment contents

The following items are included with every Model 7999-2 order:

- Model 7999-2 Three-Pole Multiplexer Card
- Model 7999-2 Instruction Manual
- · Additional accessories as ordered

Instruction manual

If an additional Model 7999-2 Instruction Manual is required, order the manual package, Keithley part number 7999-2-901-00. The manual package includes an instruction manual and any pertinent addenda.

Repacking for shipment

Should it become necessary to return the Model 7999-2 for repair, carefully pack the unit in its original packing carton or the equivalent, and perform the following:

- Call the Repair Department at 1-800-552-1115 for a Return Material Authorization (RMA) number.
- Advise as to the warranty status of the card.
- Write ATTENTION REPAIR DEPARTMENT and the RMA number on the shipping label.
- Fill out and include the service form located at the back of this manual.

Recommended connectors

The following mating connectors and receptacles are recommended for use with Model 7999-2 jacks:

- For 3-pin Lemo jack: Lemo FGG.0B.303 series mating plug
- For 6-pin Lemo jack: Lemo FGG.2K.306 series mating plug
- For 15-pin D-sub: AMP 747303-3 series mating receptacle

2 Connections

Introduction

This section contains information about overall card configuration and connections and is organized as follows:

- · Handling precautions
- · Card configuration
- Connections

WARNING

The procedures in this section are intended only for qualified service personnel. Do not perform these procedures unless you are qualified to do so. Failure to recognize and observe normal safety precautions could result in personal injury or death.

Handling precautions

To maintain high-impedance isolation between channels, care should be taken when handling the card to avoid contamination from such foreign materials as body oils. Such contamination can reduce isolation resistance. To avoid possible contamination:


- Always grasp the card by the case.
- · Do not touch connector insulators.
- Operate the card in a clean environment. If the card becomes contaminated, it should be thoroughly cleaned as explained in Section 4.

Card configuration

Card layout

Figure 2-1 shows the general layout of the Model 7999-2. Connectors include:

- Input/output connectors A 3-pin Lemo connector is provided for each of the seven multiplexer input/output channels (XEAR, BUZZ_MIC, EAR_MIC, LEVELING_MIC, XMIC, LSP, SPECIAL_AUDIO).
- AUDIO_IN AUDIO_OUT A 6-pin Lemo connector provides audio input/output terminals.
- CONTROL/MEASURE/POWER This DB-15 connector provides terminals for relay control, DVM measurement connections, and +24V DC power connections.

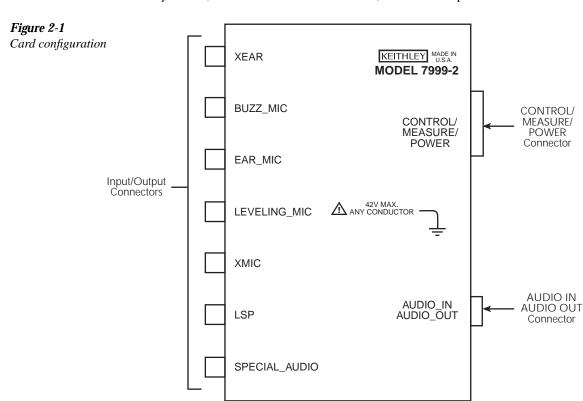


Simplified schematic

Figure 2-2 shows a simplified schematic diagram of the Model 7999-2. The card is arranged into two multiplexer banks:

- One bank of 3:1 3-pole switching
- One bank of 4:1 switching

NOTE Single pole switching is shown in Figure 2-2 for simplicity. H, L, and G indicates separate HI, LOW, and GND signal switching. + and - switched to HI and LOW where applicable. See the schematic diagram at the end of Section 5 for details.

Figure 2-2 Simplified schematic

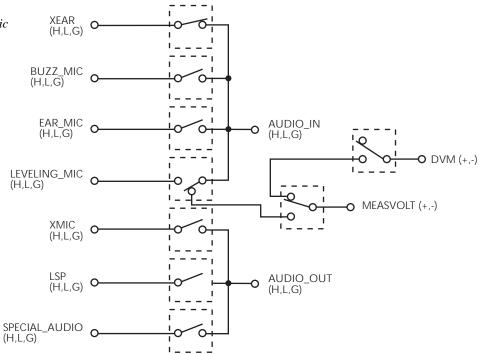

NOTE: Single-pole switching shown for simplicity. H, L, G indicate separate HI, LOW, and GND signals. + and - switched to HI and LOW where applicable.

Card connections

Input/output connectors


Figure 2-3 provides the terminal configuration for the input/output connectors (XEAR, BUZZ_MIC, EAR_MIC, LEVELING_MIC, XMIC, LSP, SPECIAL_AUDIO), while Table 2-1 summarizes signals.

 Table 2-1

 Input/output connector terminals

	Connector pin	Signal
I	1	HI
	2	LOW
	3	GND
-		

Figure 2-3
Input/output connector terminal designations

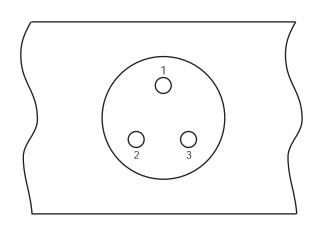

AUDIO IN and AUDIO OUT connector


Figure 2-4 shows the terminal configuration for the AUDIO IN AUDIO OUT connector, and Table 2-2 summarizes signals.

 Table 2-2

 AUDIO IN AUDIO OUT connector terminals

Connector pin	Signal
1	AUDIO OUT HI
2	AUDIO OUT LO
3	AUDIO OUT GND
4	AUDIO IN HI
5	AUDIO IN LO
6	AUDIO IN GND

Figure 2-4 AUDIO IN AUDIO OUT connector terminals

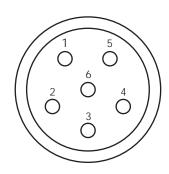

CONTROL/MEASURE/POWER connector


Figure 2-5 shows the terminal configuration for the CONTROL/MEASURE/POWER connector, and Table 2-3 summarizes terminal designations along with switched signals.

 Table 2-3

 CONTROL/MEASURE/POWER connector terminals

Terminal	Description	Switched signal(s)
1	DVM+	
2	CONTROL 6	EAR_MIC
3	DVM-	
4	CONTROL 7	MEASVOLT, LEVELING_MIC
5	+24V	
6	CONTROL 8	XMIC
7	CONTROL 1	XMIC
8	CONTROL 9	XEAR
9	CONTROL 2	AUDIO_OUT
10	MEASVOLT+	
11	CONTROL 3	SPECIAL_AUDIO
12	MEASVOLT-	
13	CONTROL 4	XEAR
14	NO CONNECTION	
15	CONTROL 5	AUDIO_IN

Figure 2-5
CONTROL/MEASURE/
POWER connector terminals

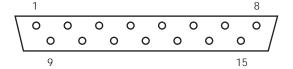

Relay power and control

To control relays, +24V DC must be applied to pin 5 of the CONTROL/MEASURE/ POWER connector. A relay channel can be closed by setting the associated CONTROL line listed in Table 2-3 low.

Operating Considerations

Introduction

This section contains information about operating considerations for the Model 7999-2 Three-Pole Multiplexer Card. The information is organized as follows:

- · Maximum signal considerations
- · Relay power and control
- Switching considerations

Maximum signal considerations

WARNING Maximum voltage between any conductor and ground is 42V.

CAUTION To prevent damage to the Model 7999-2, do not exceed the following maximum signal level specifications of the card:

Maximum voltage: 30V DC, 42V peak
 Maximum current: 1A DC, switched

Relay power and control

To control relays, an external +24V DC voltage source must be connected to pin 5 of the CONTROL/MEASURE/POWER connector. A channel is closed by setting the corresponding control signal low. See Section 2 for complete connection information. Table 2-3 in Section 2 lists switched signals.

Switching considerations

Signals switched by the Model 7999-2 may be subject to various effects that can seriously affect their integrity. The following paragraphs discuss these effects and ways to minimize them.

Keeping connectors clean

As is the case with any high-resistance device, the integrity of connectors can be damaged if they are not handled properly. If connector insulation becomes contaminated, the insulation resistance will be substantially reduced, affecting high-impedance measurement paths.

Oils and salts from the skin can contaminate connector insulators, reducing their resistance. Also, contaminants present in the air can be deposited on the insulator surface. To avoid these

problems, never touch the connector insulating material. In addition, the multiplexer card should be used only in clean, dry environments to avoid contamination.


If the connector insulators should become contaminated, either by inadvertent touching, or from air-borne deposits, they can be cleaned with a cotton swab dipped in clean methanol. After thoroughly cleaning, they should be allowed to dry for several hours in a low-humidity environment before use, or they can be dried more quickly using dry nitrogen.

Path isolation

The path isolation is simply the equivalent impedance between any two test paths in a measurement system. Ideally, the path isolation should be infinite, but the actual resistance and distributed capacitance of cables and connectors results in less than infinite path isolation values for these devices.

Path isolation resistance forms a signal path that is in parallel with the equivalent resistance of the DUT, as shown in Figure 3-1. For low-to-medium device resistance values, path isolation resistance is seldom a consideration; however, it can seriously degrade measurement accuracy when testing high-impedance devices. The voltage measured across such a device, for example, can be substantially attenuated by the voltage divider action of the device source resistance and path isolation resistance, as shown in Figure 3-2. Also, leakage currents can be generated through these resistances by voltage sources in the system.

Figure 3-1
Path isolation
resistance

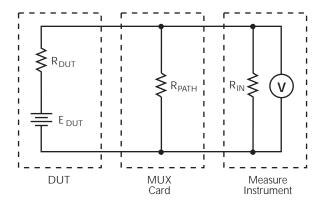


R_{DUT}= Source Resistance of DUT

E_{DUT} = Source EMF of DUT

R_{PATH} = Path Isolation Resistance

 R_{IN} = Input Resistance of Measuring Instrument

Figure 3-2 Voltage attenuation by path isolation resistance

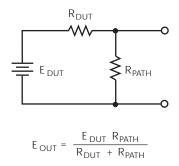

Insertion loss

Insertion loss indicates signal lost while passing through the card. This loss occurs in the various signal path components through the card (connectors, PC board traces, and relays). The Model 7999-2 has an insertion loss figure of <0.1dB at audio frequencies up to 20 kHz (50Ω source and load impedances), which should not be a consideration in most cases.

Crosstalk

The crosstalk figure indicates the amount of signal leakage between channels on the card. With similar power levels applied to the various channels, crosstalk will be of little consequence. With widely different power levels, however, crosstalk may result in undesired results. Note that the Model 7999-2 has crosstalk figure of <-40db @ 1MHz (50Ω load).

RFI/EMI

RFI (Radio Frequency Interference) and EMI (Electromagnetic Interference) are general terms used to describe electromagnetic interference over a wide range of frequencies across the spectrum. Such interference can be particularly troublesome at low signal levels, but is can also affect measurements at high levels if the problem is of sufficient severity.

EMI can be caused by steady-state sources such as radio or TV broadcast signals, or some types of electronic equipment (microprocessors, high speed digital circuits, etc.), or it can result from impulse sources, as in the case of arcing in high-voltage environments. In either case, the effect on the desired signal can be considerable if enough of the unwanted signal is present.

EMI can be minimized in several ways. The most obvious method is to keep the equipment and signal leads as far away from the RFI source as possible. Shielding the switching card, signal leads, sources, and measuring instruments will often reduce RFI to an acceptable level. In extreme cases, a specially constructed screen room may be required to sufficiently attenuate the troublesome signal.

Ground loops

When two or more devices are connected together, care must be taken to avoid unwanted signals caused by ground loops. Ground loops usually occur when devices are connected with more than one signal return path such as power line ground. As shown in Figure 3-3, the resulting ground loop causes current to flow through LO signal leads and then back through power line ground. This circulating current develops a small but undesirable voltage between the LO terminals of the two devices. This voltage will be induced into the desired signal affecting its integrity.

Figure 3-3
Ground loops


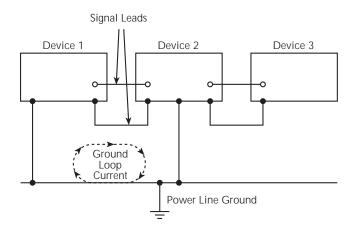


Figure 3-4 shows how to connect several devices together to eliminate this type of ground loop problem. Here, only one device is connected to power line ground.

Ground loops are not normally a problem with isolated LO terminals. However, all devices in the test setup may not be designed in this manner. When in doubt, consult the manual for all instrumentation in the test setup.

Figure 3-4
Eliminating
ground loops

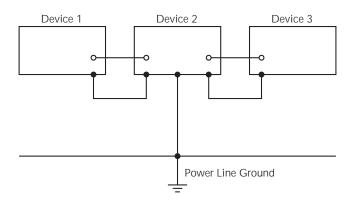

Service Information

Introduction

This section contains service information for the Model 7999-2. The information is organized as follows:

- · Handling and cleaning precautions
- Performance verification
- · Component replacement

WARNING

The information in this section is intended only for qualified service personnel. Some of the procedures may expose you to hazardous voltages that could result in personal injury or death. Do not perform these procedures unless you are qualified to do so.

Handling and cleaning precautions

Because of the high-impedance areas on the Model 7999-2, care should be taken when handling or servicing the card to prevent possible contamination. The following precautions should be observed when servicing the card.

Handling precautions

Observe the following precautions when handling the multiplexer card:

- Handle the card only by the edges and cover.
- Do not touch connector insulators.
- Do not touch any board surfaces or components not associated with the repair.
- Do not touch areas adjacent to electrical contacts.
- When servicing the card, wear clean cotton gloves.
- Do not store or operate the card in an environment where dust could settle on the circuit board.

Card cleaning

- Use dry nitrogen gas to clean any dust off the circuit board and components.
- Clean the contaminated area with methanol, then blow dry the entire board with dry nitrogen gas.
- After cleaning, allow the card to dry in a 50°C low-humidity environment for several hours before use.

Performance verification

The following paragraphs discuss performance verification procedures for the Model 7999-2, including channel resistance, contact potential, and channel-to-channel and common-mode isolation.

CAUTION

Contamination will degrade the performance of the card. To avoid contamination, always grasp the card by the cover; do not touch the connectors.

NOTE

Failure of any performance verification test may indicate that the multiplexer card is contaminated. See "Handling and cleaning precautions" earlier in this section for information on cleaning the card.

Environmental conditions

All verification measurements should be made at an ambient temperature between 18° and 28° C, and at a relative humidity of less than 70%.

Recommended equipment

Table 4-1 summarizes the equipment necessary for performance verification, along with an application for each unit.

 Table 4-1

 Recommended verification equipment

Description	Manufacturer/Model	Specifications	Test
Digital Multimeter	Keithley 2010	10Ω range, 60ppm	Channel resistance
Nanovoltmeter	Keithley 2182	10mV range, 50ppm	Contact potential
Electrometer	Keithley 6517A	2GΩ range, 0.225%	Isolation
Test Lead Sets (2)	Keithley 1681	Banana plug/clips	Channel resistance
Low Thermal Cable	Keithley 2107-4	Low thermal/lugs	Contact potential
Triax Cable	Keithley 237-ALG-2	Triax/clips	Isolation

Multiplexer card connections


Test equipment connection diagrams in this section are generic in nature and are intended only to show basic connections on how to connect test equipment to the relay contact(s) under test. See Section 2 for complete details on card connections and terminal designations.

Channel resistance tests

Perform the following steps to verify that each contact of every relay is closing properly and that the channel resistance is within specification.

- 1. Turn on the Model 2010 DMM, and allow it to warm up for one hour before making measurements.
- 2. Set the Model 2010 to the 10Ω range, and connect the four test leads to the INPUT and SENSE Ω 4 WIRE jacks.
- 3. Short the free ends of the four test leads together, and enable REL on the Model 2010 to null out residual resistance. Leave REL enabled for the entire test.
- 4. Connect the Model 2010 INPUT and SENSE Ω 4 WIRE jacks to the relay contact to be tested, as shown in Figure 4-1. Note that 4-wire connections to the card terminals are used.
- 5. Close the relay being tested.
- 6. Note the resistance reading on the Model 2010, and verify that it is $<1\Omega$.
- 7. Open the relay being tested.
- 8. Repeat steps 4 through 7 for every relay contact on the card.

Figure 4-1
Channel resistance test connections

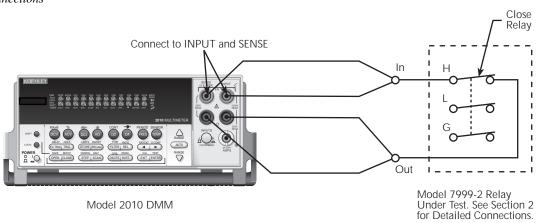


Contact potential tests

Perform the following procedure to check contact potential of each relay contact:

- 1. Connect the low-thermal cable to the Model 2182 Nanovoltmeter INPUT jack.
- 2. Turn on the Model 2182, and allow the unit to warm up for one hour to achieve rated accuracy.
- 3. Select the Model 2182 10mV range.
- 4. Temporarily short the Channel 1 HI and LO leads of the low-thermal cable.
- 5. Enable REL on the Model 2182.
- 6. Connect the Model 2182 to the relay contact being tested, as shown in Figure 4-2. Be sure to make connections to the Channel 1 input terminals, and use that channel for measurements.
- 7. Close the relay being tested.
- 8. Verify that the Model 2182 reading is $<10\mu V$.
- 9. Open the relay being tested.
- 10. Repeat steps 6 through 9 for all relays on the card.

Figure 4-2
Contact potential
connections

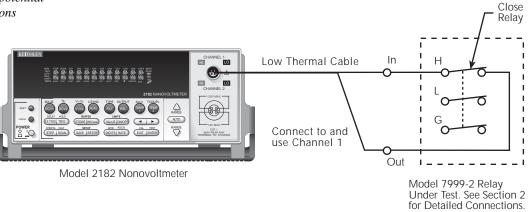

Channel-to-channel isolation tests

CAUTION

The following procedure uses the Model 6517A voltage source to measure resistance. To avoid damage to the Model 7999-2, use the Model 6517A manual ohms mode to limit the test voltage to 30V as outlined in the procedure.

Perform the following steps to check channel-to-channel isolation:

- 1. Turn on the Model 6517A Electrometer, and allow the unit to warm up for one hour before testing.
- 2. Select the Model 6517A ohms function and $2G\Omega$ range, and enable zero check. Make sure the voltage source is in standby.
- 3. Connect the electrometer to the two Model 7999-2 channels being tested, as shown in Figure 4-3. Note that electrometer INPUT HI is connected to one channel, while VOLTAGE SOURCE HI is connected to the other channel.
- 4. Put the Model 6517A in the manual ohms mode, and set the voltage source to +30V.
- 5. Place the Model 6517A voltage source in operate, and disable zero check.
- 6. Allow the reading to settle, then verify that the resistance reading is >1G Ω .
- 7. Enable zero check, and place the Model 6517A voltage source in standby.
- 8. Repeat steps 3 through 7 for all other two-channel combinations on the card.

Figure 4-3 Close Channel-to-channel Relay isolation connections In Connect INPUT HI to First Relay Voltage Source HI INPLIT Out Close Relay In Model 6517A Electrometer Connect Voltage Source HI to Second Relay Out Model 7999-2 Relays Under Test. See Section 2 for Detailed Connections.

Common-mode isolation tests


CAUTION

The following procedure uses the Model 6517A voltage source to measure resistance. To avoid damage to the Model 7999-2, use the Model 6517A manual ohms mode to limit the test voltage to 30V as outlined in the procedure.

Perform the following steps to check common-mode isolation:

- 1. Turn on the Model 6517A Electrometer, and allow the unit to warm up for one hour before testing.
- 2. Select the Model 6517A ohms function and $2G\Omega$ range, and enable zero check. Make sure the voltage source is in standby.
- 3. Connect the electrometer to the Model 7999-2 channel being tested, as shown in Figure 4-4. Note that electrometer INPUT HI is connected to the tested channel, while VOLT-AGE SOURCE HI is connected to system ground.
- 4. Put the Model 6517A in the manual ohms mode, and set the voltage source to +30V.
- 5. Place the Model 6517A voltage source in operate, and disable zero check.
- 6. Allow the reading to settle, then verify that the resistance reading is >1G Ω .
- 7. Enable zero check, and place the Model 6517A voltage source in standby.
- 8. Repeat steps 3 through 7 for all other channels on the card.

Figure 4-4
Common-mode
isolation connections

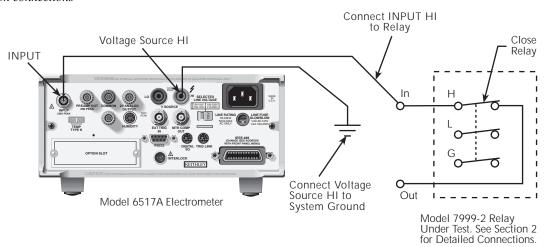

Replacing components

Replacement parts

Replacement parts can be obtained directly from Keithley Instruments, Inc. See the parts list in Section 5 for part numbers.

Replacement precautions

CAUTION

Observe the following precautions when replacing components:

- To avoid contamination, which could degrade card performance, always handle the card only by the covers and side edges. Do not touch the connector, board surfaces, or components on the card.
- Use care when removing relays from the PC board to avoid pulling traces away from the circuit board. Before attempting to remove a relay, use an appropriate de-soldering tool, to clear each mounting hole completely free of solder. Each relay pin must be free to move in its mounting hole before removal. Also, make certain that no burrs are present on the ends of the relay pins.

Soldering considerations

When using solder on the circuit board, observe the following precautions:

- Use an OA-based (organic activated) flux, and take care not to spread the flux to other areas of the circuit board.
- Remove the flux from the work areas when the repair has been completed. Use pure
 water along with clean cotton swabs or a clean soft brush to remove the flux.
- Once the flux has been removed, swab only the repaired area with methanol, then blow dry the board with dry nitrogen gas.
- After cleaning, allow the card to dry in a 50°C low-humidity environment for several hours before use.

Disassembly

Perform the following steps to disassemble the Model 7999-2 to gain access to parts on the circuit board:

- 1. Remove the six screws that hold the case together.
- 2. Remove the nuts that secure the seven input/output connectors to the case.
- 3. Separate the two halves of the case.
- 4. Unplug the connectors from the PC board.
- 5. Remove the screws that secure the PC board to the case, then remove the board.

Replaceable Parts

Introduction

This section contains replacement parts information and component layout and schematic drawings for the Model 7999-2.

Parts list

The parts list for the Model 7999-2 is shown in Table 5-1.

Ordering information

To place an order, or to obtain information concerning replacement parts, contact your Keithley representative or the factory (see inside front cover for addresses). When ordering parts, be sure to include the following information:

- Card model number (Model 7999-2)
- Serial number
- · Part description
- Component designation (if applicable)
- Keithley part number

Factory service

If the card is to be returned to Keithley Instruments for repair, perform the following:

- Call the Repair Department at 1-800-552-1115 for a Return Material Authorization (RMA) number.
- Complete the service form at the back of this manual, and include it with the instrument.
- Carefully pack the instrument in the original packing carton.
- Write ATTENTION REPAIR DEPARTMENT and the RMA number on the shipping label.

Component layout and schematic diagram


The following component layout and schematic diagram drawings are provided on the following pages:


• Component layout drawing: 7999-2-100


• Schematic diagram: 7999-2-106


Table 5-1Parts list

Circuit designation	Description	Keithley part no.
C1-C40	CAP, 22PF, 10%, 100V, CERAMIC	C-451-22P
CR1-CR16	DIODE, SWITCHING, 250MA, BAV103	RF-89
J1,J2,J3,J4,J5,J6,J7	CONN RT ANGLE RECEPTACLE	CS-1064
J8,J9	LATCHING HEADER, FRICTON, SGL ROW	CS-724-3
J10	CONN, HEADER STRAIGHT SOLDER PIN	CS-368-16
K1-K16	NON-LATCHING RELAY	RL-233
L1-L41	FERRITE BEAD	CH-91
	CONN, FIXED RECEPTACLE	CS-1063
	CONNECTOR	CS-236
	CONNECTOR, HOUSING	CS-638-3
	TOP COVER	7999-2-301A
	BOTTOM COVER	7999-2-302A

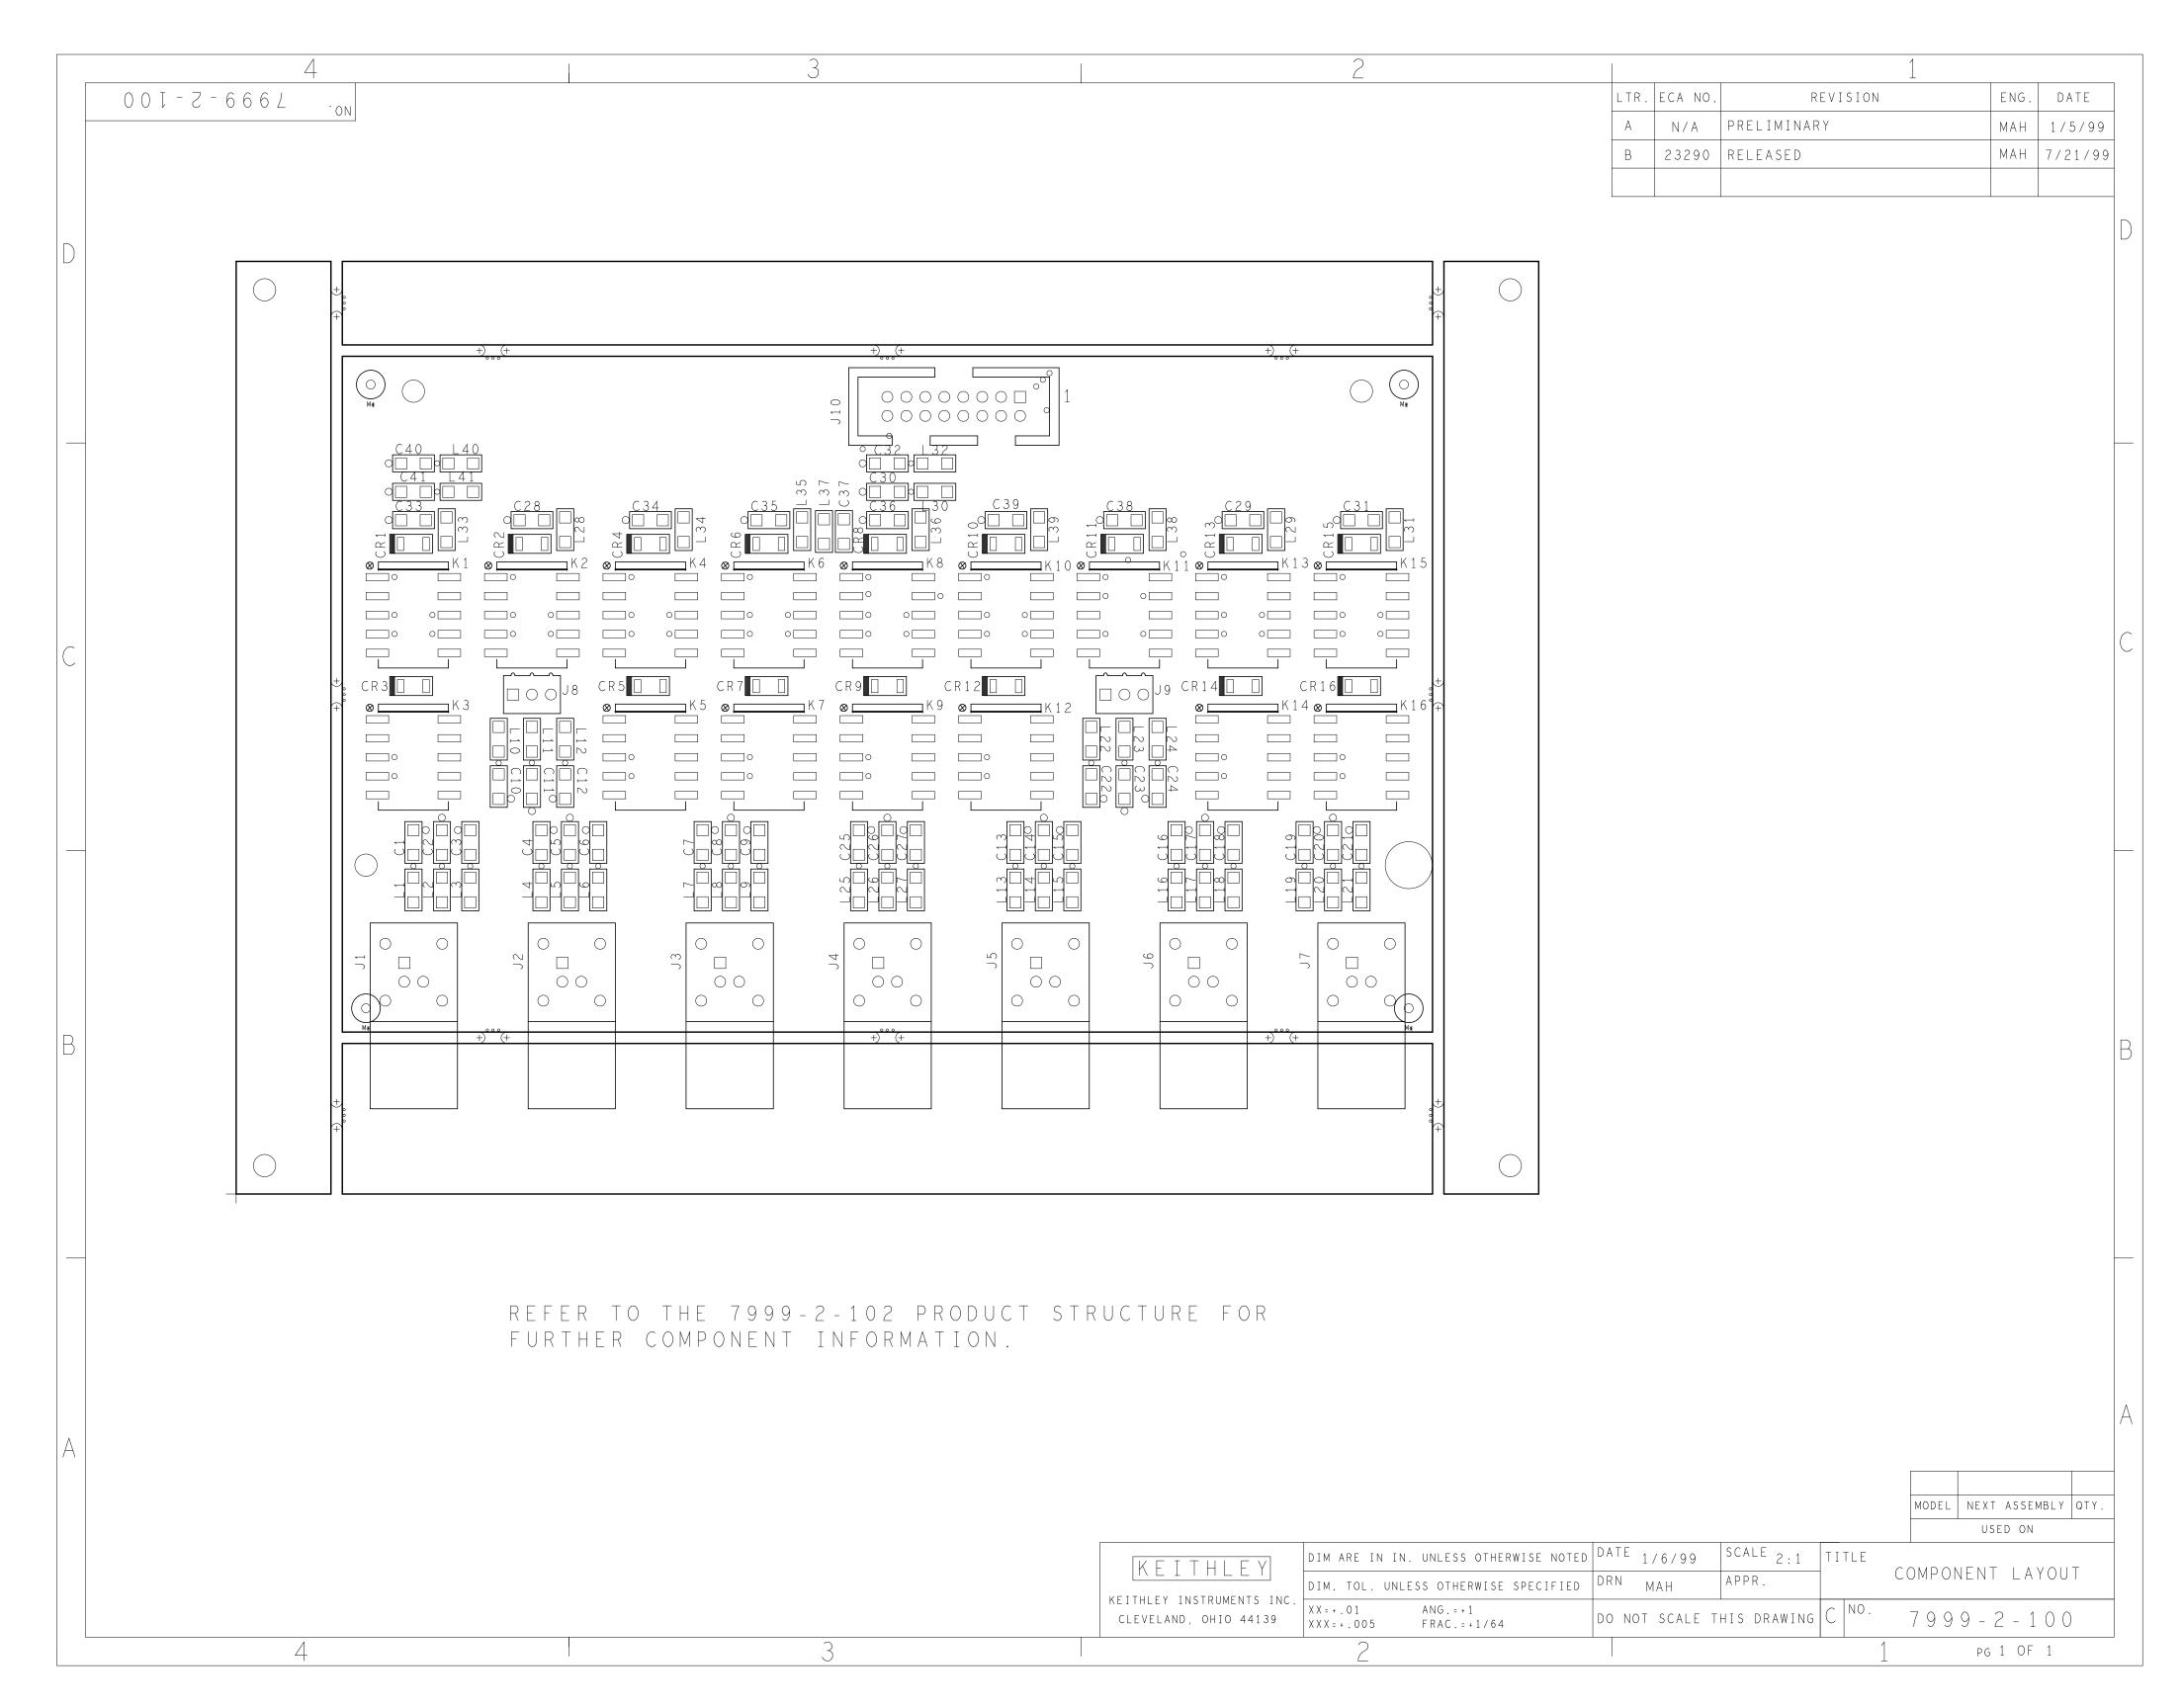

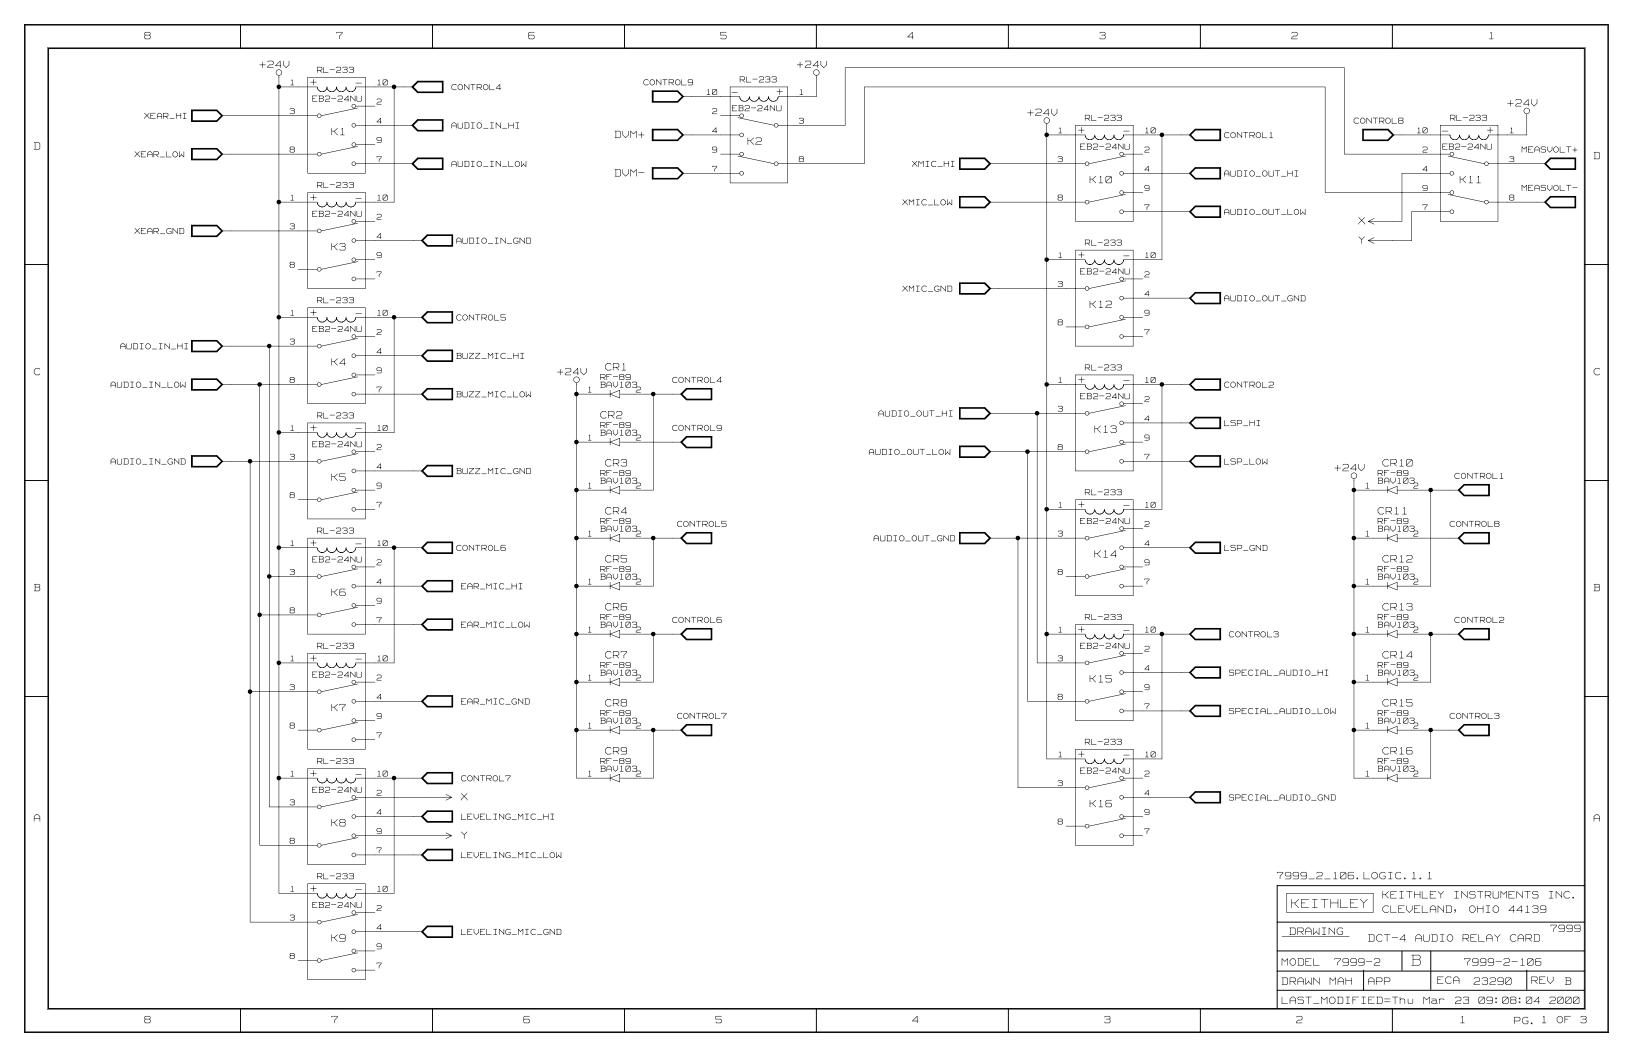

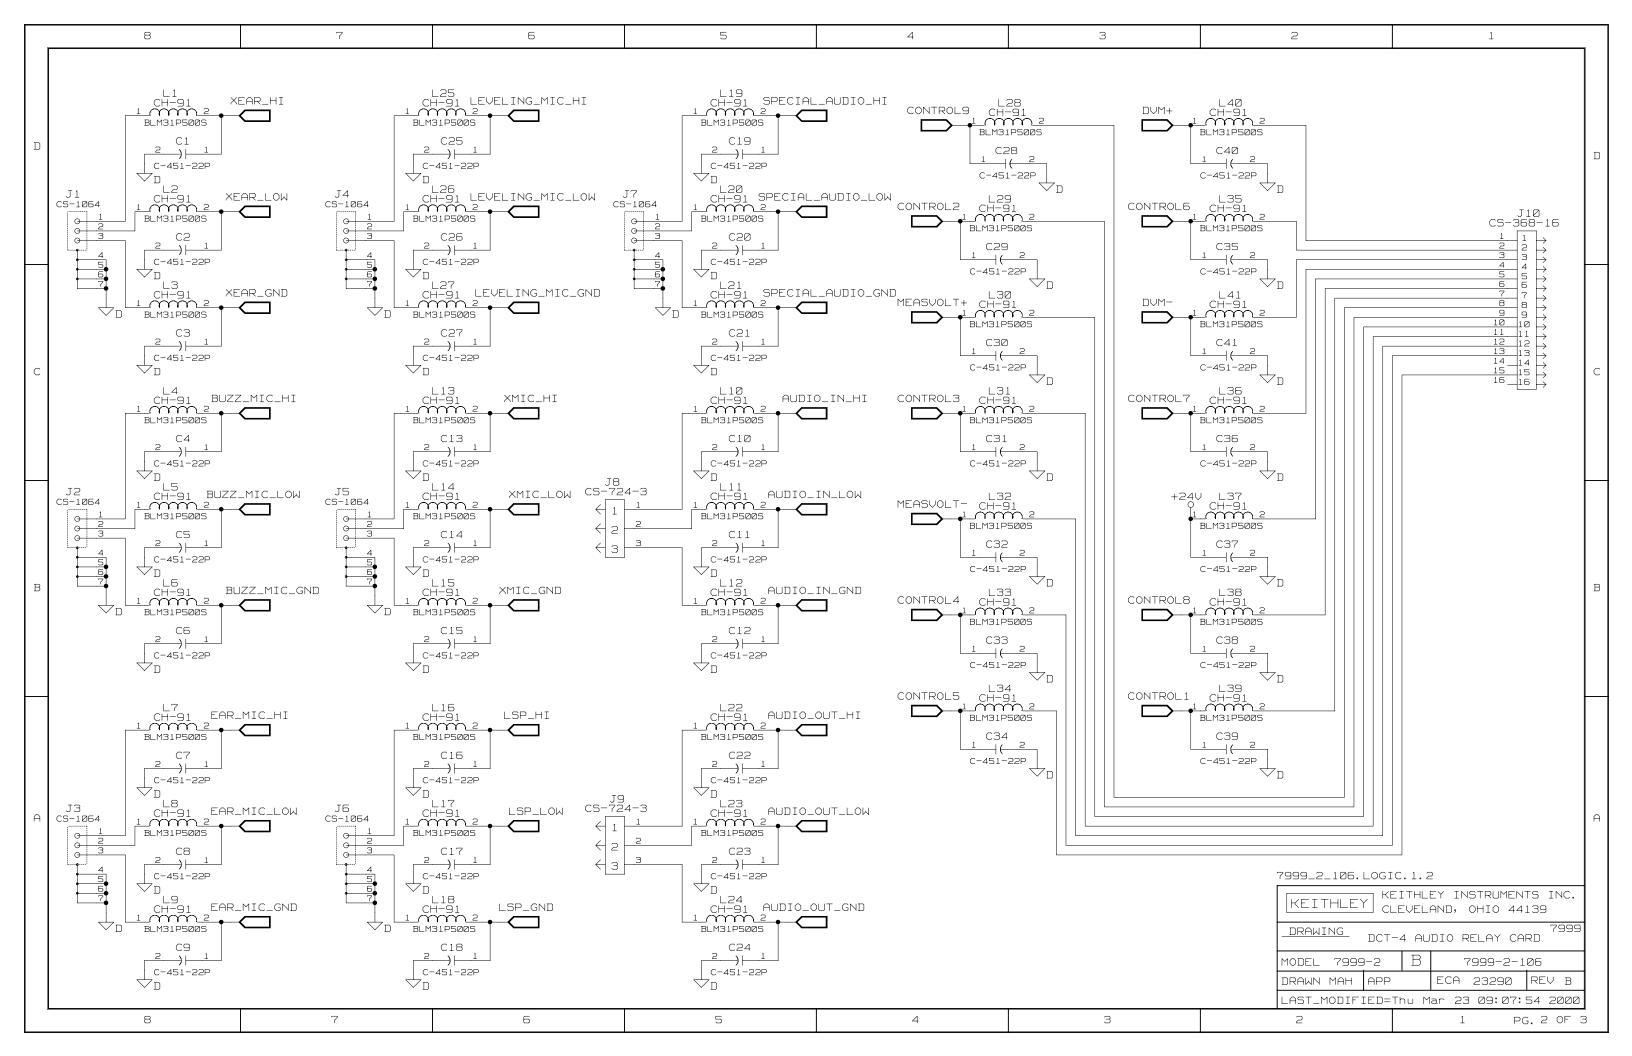

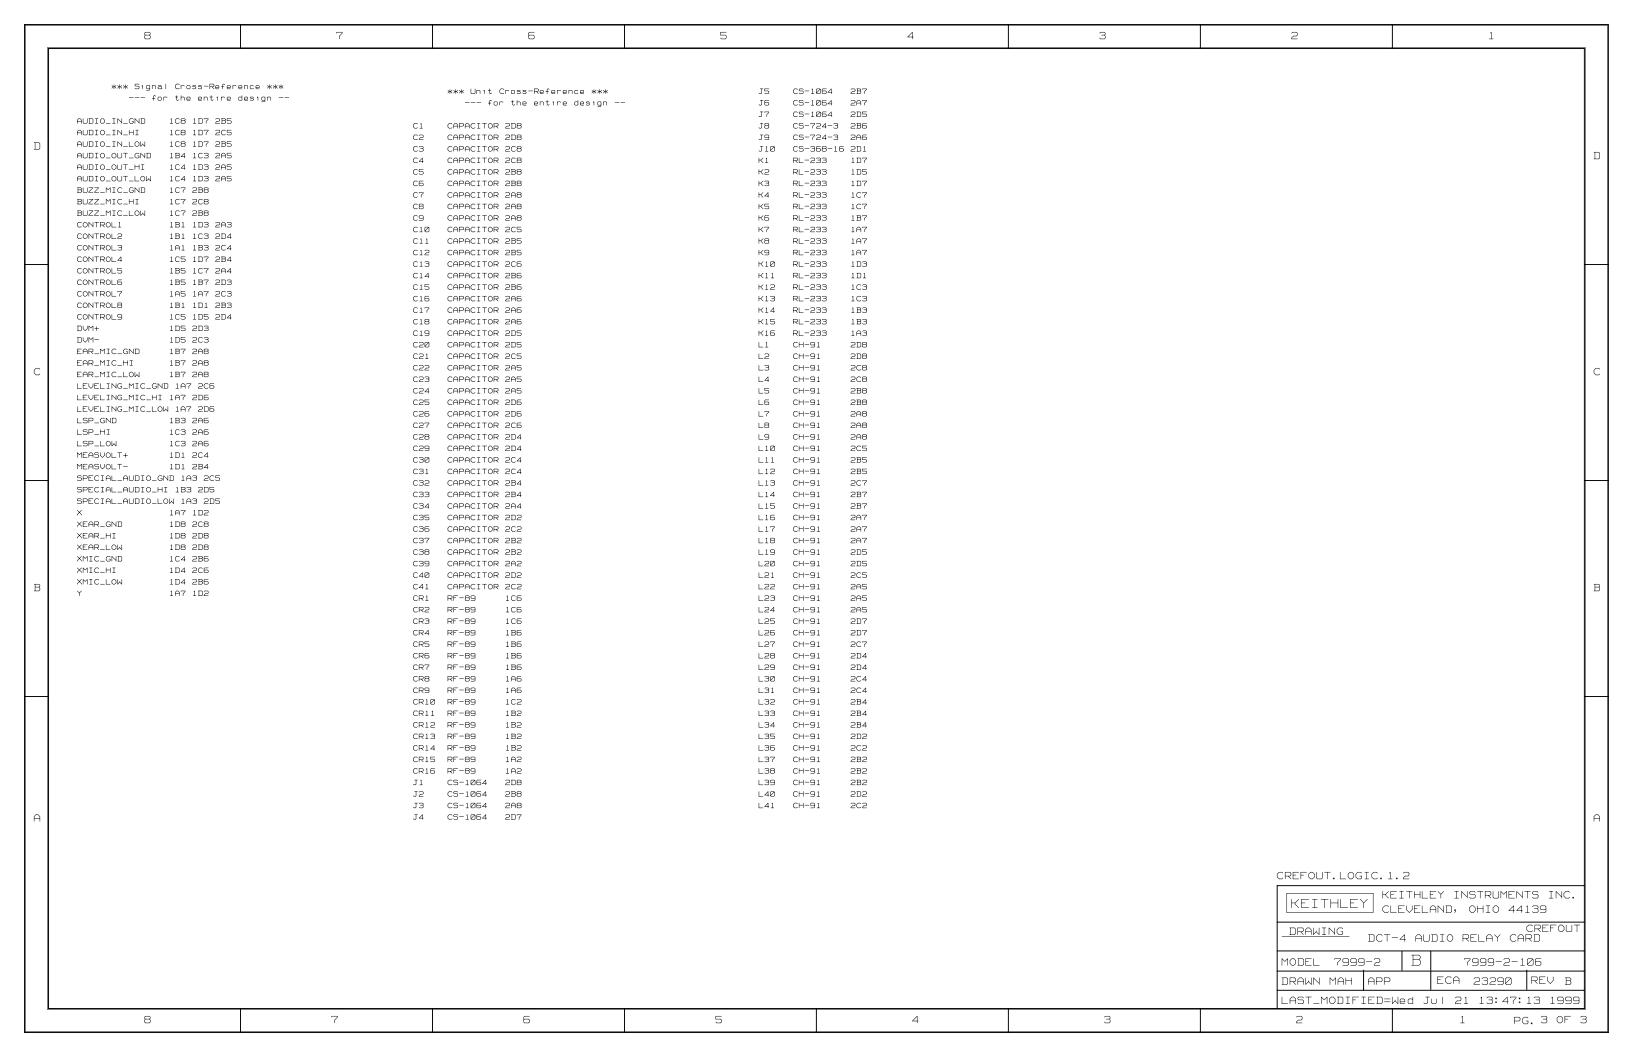

Index		K	Keeping connectors clean 3-2
A	AUDIO IN and AUDIO OUT connector 2-6	M	Manual addenda 1-2 Maximum signal considerations 3-2
С	Card cleaning 4-2 Card configuration 2-3 Card connections 2-5 Card layout 2-3 Channel resistance tests 4-4 Channel-to-channel isolation tests 4-6	0	Multiplexer card connections 4-4 Operating considerations 3-1 Ordering information 5-2
	Common-mode isolation tests 4-7 Component layout and schematic diagram 5-3 Connections 2-1 Contact potential tests 4-5 CONTROL/MEASURE/POWER	Р	Parts list 5-2 Path isolation 3-3 Performance verification 4-3
	connector 2-7 Crosstalk 3-4	R	Recommended connectors 1-4 Recommended equipment 4-3
D E	Disassembly 4-8 Environmental conditions 4-3		Relay power and control 2-7, 3-2 Repacking for shipment 1-4 Replaceable parts 5-1 Replacement parts 4-8 Replacement precautions 4-8
F			Replacing components 4-8 RFI/EMI 3-4
G	Factory service 5-2 Feature overview 1-2 General Information 1-1	S	Safety symbols and terms 1-3 Service information 4-1 Shipment contents 1-4 Simplified schematic 2-4
Н	Ground loops 3-5		Soldering considerations 4-8 Specifications 1-3 Switching considerations 3-2
	Handling and cleaning precautions 4-2 Handling precautions 1-3, 2-2, 4-2	U	Unpacking and Inspection 1-3
I	Input/output connectors 2-5 Insertion loss 3-4 Inspection for damage 1-3 Instruction manual 1-4	W	Warranty information 1-2

Introduction 1-2, 2-2, 3-2, 4-2, 5-2



Keithley Instruments, Inc. 28775 Aurora Road Cleveland, Ohio 44139 Printed in the U.S.A.