

Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

# Products contained in this shipment may be subject to ITAR regulations.

## Warning:

The export of these commodity(ies), technology, or software are subject either to the U.S. Commerce Department Export Administration Regulations (E.A.R.), or to the U.S. State Department International Traffic In Arms Regulations (I.T.A.R.). Diversion, the shipment to unauthorized locations or entities, or the disclosure of related technical data or software to unauthorized foreign nationals is contrary to U.S. law and is prohibited. If export is authorized to a specific country or end-users, compliance with the U.S. export laws is required prior to transfer, transshipment on a non-continuous voyage, or disposal in any other country, or to any other end-user of these commodities, either in their original form or after being incorporated into other end-items.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## Radiation Lot Acceptance Testing (RLAT) of the RH1009MH 2.5V Voltage Reference for Linear Technology

Customer: Linear Technology, PO# 63138L

RAD Job Number: 12-606

Part Type Tested: RH1009MH 2.5V Voltage Reference.

**Traceability Information:** Fab Lot Number: W10737659.1, Wafer Number: 24, Assembly Lot Numbers: 659798.1 and 659798.2, Date Code: 1207A. See photograph of unit under test in Appendix A.

**Quantity of Units:** 18 units received, 10 units for biased irradiation, 5 units for unbiased irradiation and 3 units for control. Serial numbers 69, 70, 72, 75, 81, 84, 88, 89, 90 and 92 were biased during irradiation, serial numbers 836, 837, 838, 840 and 841 were unbiased during irradiation and serial numbers 73, 87 and 842 were used as control. See Appendix B for the radiation bias connection table.

**Radiation and Electrical Test Increments:** 50-300rad(Si)/s ionizing radiation with electrical test increments: pre-irradiation, 20krad(Si), 50krad(Si), 100krad(Si) and 200krad(Si).

**Pre-Irradiation Burn-In:** Burn-In performed by Linear Technology prior to receipt by RAD

Overtest and Post-Irradiation Anneal: No overtest. No anneal.

Radiation Test Standard: MIL-STD-750E TM1019 and/or MIL-STD-883H TM1019 Condition A.

**Test Hardware and Software:** HP3457A Multimeter, Entity ID MM01, Calibration Date: 6/18/2012, Calibration Due: 6/18/2013. LTS2020 Automated Tester, Entity ID TS03, Calibration Date: 4/26/2012, Calibration Due: 4/26/2013. LTS2302 Family Board, Entity ID FB04. LTS0602 Test Fixture, Entity ID TF02. BGSS-000328 RH1009W DUT Board. Test Program: RH1009G.SRC

**Facility and Radiation Source:** Aeroflex RAD's Longmire Laboratories, Colorado Springs, CO. Gamma rays provided by JLSA 81-24 Co60 source. Dosimetry performed by Air Ionization Chamber (AIC) traceable to NIST. Aeroflex RAD's dosimetry has been audited by DSCC and Aeroflex RAD has been awarded Laboratory Suitability for MIL-STD-750 and MIL-STD-883 TM 1019.

**Irradiation and Test Temperature:** Room temperature controlled to 24°C±6°C per MIL-STD-883 and MIL-STD-750.

#### RLAT Result: PASSED the total ionizing dose test to the maximum tested dose level of 200krad(Si) with all parameters remaining within their datasheet specifications.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## 1.0. Overview and Background

It is well known that total dose ionizing radiation can cause parametric degradation and ultimately functional failure in electronic devices. The damage occurs via electron-hole pair production, transport and trapping in the dielectric and interface regions. In discrete devices the bulk of the damage is frequently manifested as a reduction in the gain and/or breakdown voltage of the device. The damage will usually anneal with time following the end of the radiation exposure. Due to this annealing, and to ensure a worst-case test condition MIL-STD-883 TM1019.8 calls out a dose rate of 50 to 300rad(Si)/s as Condition A and further specifies that the time from the end of an incremental radiation exposure and electrical testing shall be 1-hour or less and the total time from the end of one incremental irradiation to the beginning of the next incremental radiation step should be 2-hours or less. The work described in this report was performed to meet MIL-STD-883 TM1019.8 Condition A.

## 2.0. Radiation Test Apparatus

The total ionizing dose testing described in this final report was performed using the facilities at Aeroflex RAD's Longmire Laboratories in Colorado Springs, CO. The high dose rate total ionizing dose (TID) source is a JLSA 81-24 irradiator modified to provide a panoramic exposure. The Co-60 rods are held in the base of the irradiator heavily shielded by lead. During the radiation exposures the rod is raised by an electronic timer/controller and the exposure is performed in air. The dose rate for this irradiator in this configuration ranges from <1rad(Si)/s to a maximum of approximately 300rad(Si)/s, determined by the distance from the source. For high-dose rate experiments the bias boards are placed in a radial fashion equidistant from the raised Co-60 rods with the distance adjusted to provide the required dose rate. The irradiator calibration is maintained by Aeroflex RAD Longmire Laboratories using air ionization chamber (AIC) equipment calibrated with traceability to the National Institute of Standards and Technology (NIST). Figure 2.1 shows a photograph of the JLSA 81-24 Co-60 irradiator at Aeroflex RAD's Longmire Laboratory facility.

Aeroflex RAD is currently certified by the Defense Supply Center Columbus (DSCC) for Laboratory Suitability under MIL STD 750 and MIL-STD-883. Additional details regarding Aeroflex RAD dosimetry for TM1019 Condition A testing are available in Aeroflex RAD's report to DSCC entitled: "Dose Rate Mapping of the J.L. Shepherd and Associates Model 81 Irradiator Installed by Radiation Assured Devices".



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

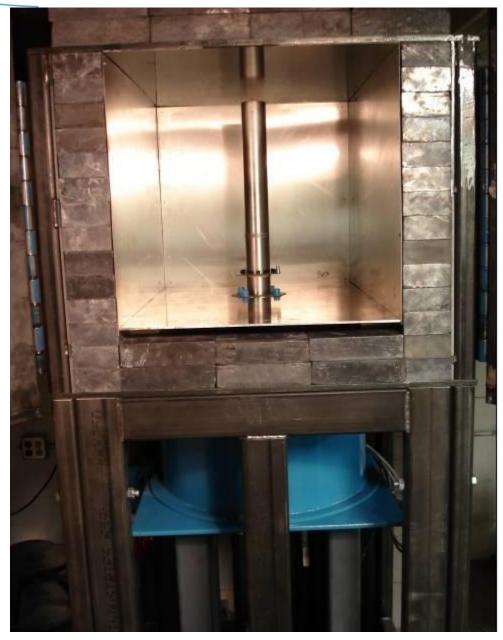


Figure 2.1. Aeroflex RAD's high dose rate Co-60 irradiator. The dose rate is obtained by positioning the deviceunder-test at a fixed distance from the gamma cell. The dose rate for this irradiator varies from approximately 300rad(Si)/s close to the rods down to 1rad(Si)/s at a distance of approximately 2-feet.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## 3.0. Radiation Test Conditions

The RH1009MH 2.5V Voltage Reference described in this final report were irradiated under two different bias conditions, one when biased with a single-sided 15V supply, and one when unbiased with all pins tied to ground. See the TID Bias Table in Appendix B for the full bias circuits. In our opinion, this bias circuit satisfies the requirements of MIL-STD-883H TM1019.8 Section 3.9.3 Bias and Loading Conditions which states "The bias applied to the test devices shall be selected to produce the greatest radiation induced damage or the worst-case damage for the intended application, if known. While maximum voltage is often worst case some bipolar linear device parameters (e.g. input bias current or maximum output load current) exhibit more degradation with 0 V bias."

The devices were irradiated to a maximum total ionizing dose level of 200krad(Si) with incremental readings at 20krad(Si), 50krad(Si) and 100krad(Si). Electrical testing occurred within one hour following the end of each irradiation segment. For intermediate irradiations, the parts were tested and returned to total dose exposure within two hours from the end of the previous radiation increment.

The TID bias board was positioned in the Co-60 cell to provide the required minimum of 50rad(Si)/s and was located inside a lead-aluminum enclosure. The lead-aluminum enclosure is required under MIL-STD-883H TM1019.8 Section 3.4 that reads as follows: "Lead/Aluminum (Pb/Al) container. Test specimens shall be enclosed in a Pb/Al container to minimize dose enhancement effects caused by low-energy, scattered radiation. A minimum of 1.5 mm Pb, surrounding an inner shield of at least 0.7 mm Al, is required. This Pb/Al container produces an approximate charged particle equilibrium for Si and for TLDs such as CaF2. The radiation field intensity shall be measured inside the Pb/Al container (1) initially, (2) when the source is changed, or (3) when the orientation or configuration of the source, container, or test-fixture is changed. This measurement shall be performed by placing a dosimeter (e.g., a TLD) in the device-irradiation container at the approximate test-device position. If it can be demonstrated that low energy scattered radiation is small enough that it will not cause dosimetry errors due to dose enhancement, the Pb/Al container may be omitted."

The final dose rate within the high dose rate lead-aluminum enclosure was determined using calibration calculations based on air ionization chamber (AIC) dosimetry performed just prior to beginning the total dose irradiations. The final dose rate for this work was 175.57rad(Si)/s with a precision of  $\pm 5\%$ .



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## 4.0. Tested Parameters

During the total ionizing dose characterization testing the following electrical parameters were measured pre- and post-irradiation:

- 1. Reverse Breakdown Voltage (V) @ IR=1mA
- 2. Reverse Breakdown Voltage Change with Current (V) @ IR= 400µA to 10mA
- 3. Reverse Dynamic Impedance ( $\Omega$ ) @ IR=1mA

Appendix C details the measured parameters, test conditions, pre-irradiation specification and measurement resolution for each of the measurements.

The parametric data was obtained as "read and record" and all the raw data plus an attributes summary are contained in this report as well as in a separate Excel file. The attributes data contains the average, standard deviation and the average with the KTL values applied. The KTL value used in this work is 2.065/2.742 per MIL-HDBK-814 using one sided tolerance limits of 90/90 and a 10-/5-piece sample size. The 90/90 KTL values were selected to match the statistical levels specified in the MIL-PRF-38535 sampling plan for the qualification of a radiation hardness assured (RHA) component. Note that the following criteria must be met for a device to pass the total ionizing dose test: following the radiation exposure each of the 10 pieces irradiated under electrical bias shall pass the specification value. The units irradiated without electrical bias and the KTL statistics are included in this report for reference only. If any of the 5 pieces irradiated under electrical bias exceed the device post radiation data sheet specification limits, then the lot could be logged as a failure.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## 5.0. Total Ionizing Dose Test Results

Based on this criterion the RH1009MH 2.5V Voltage Reference (from the lot traceability information provided on the first page of this test report) PASSED the total ionizing dose test to the maximum tested dose level of 200krad(Si) with all parameters remaining within their datasheet specifications.

Figures 5.1 through 5.3 show plots of all the measured parameters versus total ionizing dose while Tables 5.1 - 5.3 show the corresponding raw data for each of these parameters. In the data plots the solid diamonds are the average of the measured data points for the sample irradiated under electrical bias while the shaded diamonds are the average of the measured data points for the units irradiated with all pins tied to ground. The black lines (solid or dashed) are the average of the data points after application of the KTL statistics on the sample irradiated in the biased condition while the shaded lines (solid or dashed) are the average of the sample irradiated in the unbiased condition. The red dotted line(s) are the pre- and/or post-irradiation minimum and/or maximum specification value as defined in the datasheet and/or test plan.

The control units, as expected, show no significant changes to any of the parameters. Therefore we can conclude that the electrical testing remained in control throughout the duration of the tests and the observed degradation was due to the radiation exposure. Appendix D lists the figures used in this section to facilitate the location of a particular parameter.

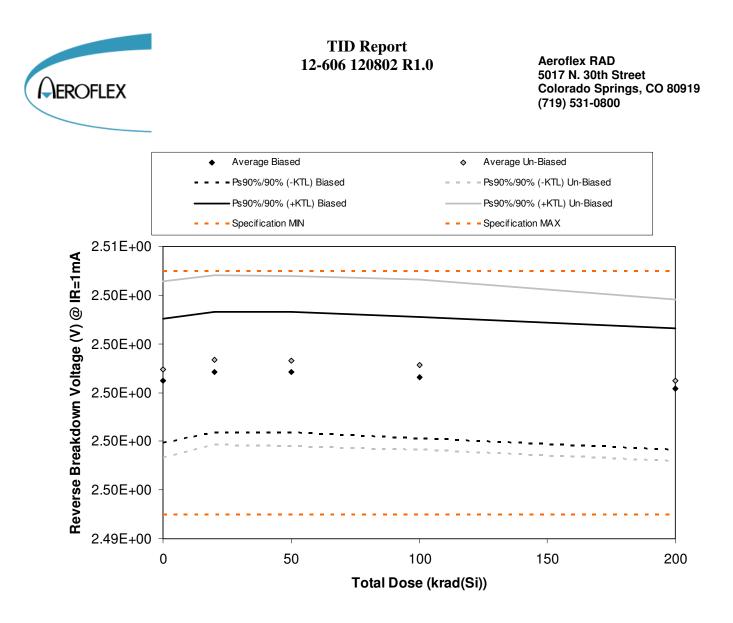


Figure 5.1. Plot of Reverse Breakdown Voltage (V) @ IR=1mA versus total dose. The solid diamonds are the average of the measured data points for the samples irradiated under electrical bias while the shaded diamonds are the average of the measured data points for the samples irradiated with all pins tied to ground. The black lines (solid and/or dashed) are the average of the data points after application of the KTL statistics on the samples irradiated in the unbiased condition. The red dotted line(s) are the pre- and/or post-irradiation minimum and/or maximum specification value as defined in the datasheet and/or test plan.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

Table 5.1. Raw data for Reverse Breakdown Voltage (V) @ IR=1mA versus total dose, including the statistical analysis, specification and the status of the testing (pass/fail).

Reverse Breakdown Voltage (V)						
@ IR=1mA	Total Dose (krad(Si))					
Device	0	20	50	100	200	
69	2.500E+00	2.500E+00	2.500E+00	2.500E+00	2.499E+00	
70	2.502E+00	2.502E+00	2.502E+00	2.502E+00	2.502E+00	
72	2.499E+00	2.500E+00	2.500E+00	2.499E+00	2.499E+00	
75	2.501E+00	2.501E+00	2.501E+00	2.501E+00	2.500E+00	
81	2.500E+00	2.500E+00	2.500E+00	2.500E+00	2.500E+00	
84	2.499E+00	2.500E+00	2.500E+00	2.499E+00	2.499E+00	
88	2.499E+00	2.500E+00	2.500E+00	2.499E+00	2.499E+00	
89	2.501E+00	2.501E+00	2.501E+00	2.501E+00	2.501E+00	
90	2.501E+00	2.502E+00	2.502E+00	2.501E+00	2.501E+00	
92	2.503E+00	2.503E+00	2.503E+00	2.503E+00	2.502E+00	
836	2.502E+00	2.503E+00	2.503E+00	2.503E+00	2.502E+00	
837	2.500E+00			2.501E+00		
838	2.499E+00	2.500E+00	2.500E+00	2.499E+00	2.499E+00	
840	2.502E+00	2.502E+00	2.502E+00	2.502E+00	2.501E+00	
841	2.501E+00	2.502E+00	2.502E+00	2.502E+00	2.501E+00	
73			2.498E+00		2.498E+00	
87	2.497E+00					
842	2.498E+00	2.498E+00	2.498E+00	2.498E+00	2.498E+00	
Biased Statistics						
Average Biased	2.50E+00	2.50E+00	2.50E+00		2.50E+00	
Std Dev Biased	1.23E-03	1.19E-03	1.19E-03		1.20E-03	
Ps90%/90% (+KTL) Biased	2.50E+00	2.50E+00	2.50E+00		2.50E+00	
Ps90%/90% (-KTL) Biased	2.50E+00	2.50E+00	2.50E+00	2.50E+00	2.50E+00	
Un-Biased Statistics						
Average Un-Biased	2.50E+00	2.50E+00	2.50E+00		2.50E+00	
Std Dev Un-Biased	1.32E-03	1.27E-03			1.21E-03	
Ps90%/90% (+KTL) Un-Biased	2.50E+00					
Ps90%/90% (-KTL) Un-Biased	2.50E+00	2.50E+00	2.50E+00		2.50E+00	
Specification MIN	2.495E+00	2.495E+00	2.495E+00	2.495E+00	2.495E+00	
Status	PASS	PASS	PASS	PASS	PASS	
Specification MAX	2.505E+00		2.505E+00			
Status	PASS	PASS	PASS	PASS	PASS	

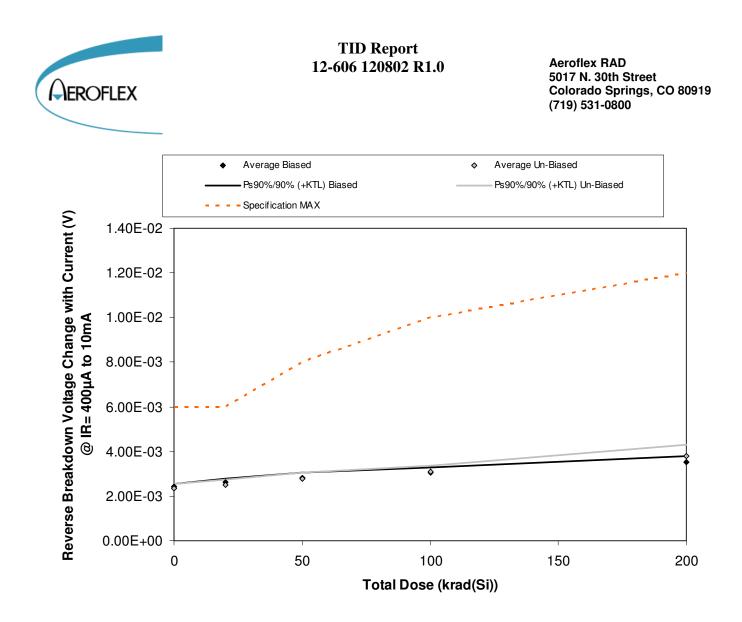


Figure 5.2. Plot of Reverse Breakdown Voltage Change with Current (V) @ IR= 400 $\mu$ A to 10mA versus total dose. The solid diamonds are the average of the measured data points for the samples irradiated under electrical bias while the shaded diamonds are the average of the measured data points for the samples irradiated with all pins tied to ground. The black lines (solid and/or dashed) are the average of the data points after application of the KTL statistics on the samples irradiated under electrical bias while the gray lines (solid and/or dashed) are the average of the data points after application of the KTL statistics on the samples irradiated in the unbiased condition. The red dotted line(s) are the pre- and/or post-irradiation minimum and/or maximum specification value as defined in the datasheet and/or test plan.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

Table 5.2. Raw data for Reverse Breakdown Voltage Change with Current (V) @  $IR=400\mu A$  to 10mA versus total dose, including the statistical analysis, specification and the status of the testing (pass/fail).

Reverse Breakdown Voltage Change with Current (V)					
@ IR= 400μA to 10mA	Total Dose (krad(Si))				
Device	0			100	200
69	2.46E-03		2.84E-03	3.06E-03	3.51E-03
70	2.42E-03		2.84E-03	3.08E-03	3.47E-03
72	2.35E-03	2.50E-03	2.69E-03	2.97E-03	3.38E-03
75	2.44E-03	2.59E-03	2.85E-03	3.10E-03	3.55E-03
81	2.40E-03	2.55E-03	2.72E-03	3.02E-03	3.46E-03
84	2.53E-03	2.77E-03	2.97E-03	3.26E-03	3.72E-03
88	2.43E-03	2.60E-03	2.80E-03	3.04E-03	3.47E-03
89	2.49E-03	2.73E-03	2.98E-03	3.24E-03	3.74E-03
90	2.35E-03			2.90E-03	3.31E-03
92	2.40E-03		2.74E-03	3.01E-03	3.41E-03
836	2.25E-03	2.46E-03	2.72E-03	3.06E-03	3.74E-03
837	2.34E-03	2.53E-03	2.79E-03	3.11E-03	3.85E-03
838	2.42E-03	2.62E-03	2.92E-03	3.23E-03	4.02E-03
840	2.34E-03				3.52E-03
841	2.39E-03	2.56E-03	2.80E-03	3.12E-03	3.82E-03
73	2.43E-03	2.42E-03	2.42E-03	2.41E-03	2.42E-03
87	2.42E-03	2.45E-03	2.42E-03	2.44E-03	2.44E-03
842	2.42E-03	2.42E-03	2.44E-03	2.40E-03	2.45E-03
Biased Statistics					
Average Biased	2.43E-03				
Std Dev Biased	5.70E-05			1.12E-04	
Ps90%/90% (+KTL) Biased	2.54E-03	2.78E-03	3.03E-03	3.30E-03	3.79E-03
Ps90%/90% (-KTL) Biased	2.31E-03	2.43E-03	2.59E-03	2.84E-03	3.22E-03
Un-Biased Statistics					
Average Un-Biased	2.35E-03			3.09E-03	3.79E-03
Std Dev Un-Biased	6.46E-05		9.46E-05	1.05E-04	1.82E-04
Ps90%/90% (+KTL) Un-Biased	2.53E-03				4.29E-03
Ps90%/90% (-KTL) Un-Biased	2.17E-03	2.31E-03	2.52E-03	2.80E-03	3.29E-03
Specification MAX	6.00E-03		8.00E-03	1.00E-02	
Status	PASS	PASS	PASS	PASS	PASS

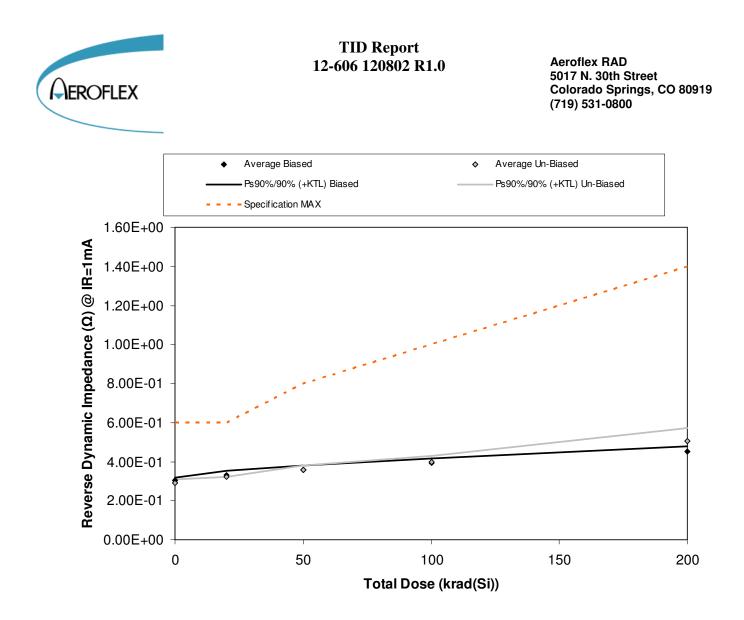


Figure 5.3. Plot of Reverse Dynamic Impedance ( $\Omega$ ) @ IR=1mA versus total dose. The solid diamonds are the average of the measured data points for the samples irradiated under electrical bias while the shaded diamonds are the average of the measured data points for the samples irradiated with all pins tied to ground. The black lines (solid and/or dashed) are the average of the data points after application of the KTL statistics on the samples irradiated in the unbiased condition. The red dotted line(s) are the pre- and/or post-irradiation minimum and/or maximum specification value as defined in the datasheet and/or test plan.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

Table 5.3. Raw data for Reverse Dynamic Impedance ( $\Omega$ ) @ IR=1mA versus total dose, including the statistical analysis, specification and the status of the testing (pass/fail).

Reverse Dynamic Impedance (Ω)						
@ IR=1mA	Total Dose (krad(Si))					
Device	0	20	50		200	
69	3.10E-01	3.40E-01	3.50E-01	3.90E-01	4.60E-01	
70	3.10E-01	3.40E-01	3.60E-01	3.90E-01	4.50E-01	
72	3.10E-01	3.30E-01	3.50E-01	3.90E-01	4.30E-01	
75	3.00E-01	3.30E-01	3.60E-01	4.00E-01	4.60E-01	
81	3.00E-01	3.20E-01	3.50E-01	3.90E-01	4.60E-01	
84	3.10E-01	3.50E-01	3.70E-01	4.10E-01	4.60E-01	
88	3.00E-01	3.30E-01	3.50E-01	3.80E-01	4.50E-01	
89	3.10E-01	3.40E-01	3.80E-01	4.10E-01	4.70E-01	
90	3.00E-01	3.20E-01	3.40E-01	3.80E-01	4.30E-01	
92	3.00E-01	3.20E-01	3.50E-01	3.80E-01	4.40E-01	
836	2.80E-01	3.20E-01	3.60E-01	4.00E-01	4.90E-01	
837	2.90E-01	3.20E-01	3.50E-01	4.00E-01	5.20E-01	
838	3.00E-01	3.20E-01	3.70E-01	4.10E-01	5.30E-01	
840	2.90E-01	3.20E-01	3.50E-01	3.80E-01	4.70E-01	
841	2.90E-01	3.20E-01	3.60E-01	4.00E-01	5.10E-01	
73	3.00E-01	3.20E-01	3.00E-01	3.10E-01	3.60E-01	
87	2.90E-01	3.00E-01	3.00E-01	3.10E-01	3.20E-01	
842	3.00E-01	3.00E-01	3.00E-01	3.10E-01	3.00E-01	
Biased Statistics						
Average Biased	3.05E-01	3.32E-01	3.56E-01	3.92E-01	4.51E-01	
Std Dev Biased	5.27E-03	1.03E-02	1.17E-02	1.14E-02	1.37E-02	
Ps90%/90% (+KTL) Biased	3.16E-01	3.53E-01	3.80E-01	4.15E-01	4.79E-01	
Ps90%/90% (-KTL) Biased	2.94E-01	3.11E-01	3.32E-01	3.69E-01	4.23E-01	
Un-Biased Statistics						
Average Un-Biased	2.90E-01	3.20E-01	3.58E-01	3.98E-01	5.04E-01	
Std Dev Un-Biased	7.07E-03	0.00E+00	8.37E-03	1.10E-02	2.41E-02	
Ps90%/90% (+KTL) Un-Biased	3.09E-01	3.20E-01	3.81E-01	4.28E-01	5.70E-01	
Ps90%/90% (-KTL) Un-Biased	2.71E-01	3.20E-01	3.35E-01	3.68E-01	4.38E-01	
Specification MAX	6.00E-01	6.00E-01	8.00E-01	1.00E+00	1.40E+00	
Status	PASS	PASS	PASS	PASS	PASS	



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

### 6.0. Summary / Conclusions

The total ionizing dose testing described in this final report was performed using the facilities at Aeroflex RAD's Longmire Laboratories in Colorado Springs, CO. The high dose rate total ionizing dose (TID) source is a JLSA 81-24 irradiator modified to provide a panoramic exposure. The Co-60 rods are held in the base of the irradiator heavily shielded by lead, during the radiation exposures the rod is raised by an electronic timer/controller and the exposure is performed in air. The dose rate for this irradiator in this configuration ranges from <1rad(Si)/s to a maximum of approximately 300rad(Si)/s, determined by the distance from the source.

The parametric data was obtained as "read and record" and all the raw data plus an attributes summary are contained in this report as well as in a separate Excel file. The attributes data contains the average, standard deviation and the average with the KTL values applied. The KTL value used in this work is 2.065/2.742 per MIL-HDBK-814 using one sided tolerance limits of 90/90 and a 10-/5-piece sample size. The 90/90 KTL values were selected to match the statistical levels specified in the MIL-PRF-38535 sampling plan for the qualification of a radiation hardness assured (RHA) component. Note that the following criteria must be met for a device to pass the total ionizing dose test: following the radiation exposure each of the 10 pieces irradiated under electrical bias shall pass the specification value. The units irradiated without electrical bias and the KTL statistics are included in this report for reference only. If any of the 5 pieces irradiated under electrical bias exceed the device post radiation data sheet specification limits, then the lot could be logged as a failure.

Based on this criterion the RH1009MH 2.5V Voltage Reference (from the lot date code identified on the first page of this test report) PASSED the total ionizing dose test to the maximum tested dose level of 200krad(Si) with all parameters remaining within their datasheet specifications.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

Appendix A: Photograph of Packing Label and a Sample Unit-Under-Test to Show Part Traceability





Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## Appendix B: Radiation Bias Connections and Absolute Maximum Ratings

TID Radiation Biased Conditions: Extracted from Linear Technology RH1009 Datasheet.

Pin	Function	Connection / Bias
1	V+	To +15V via 12.4k $\Omega$ Resistor
2	ADJ	N/C
3	V-	GND

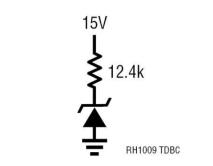


Figure B.1. Irradiation bias circuit for the units to be irradiated under electrical bias. This figure was extracted from Linear Technology RH1009 Datasheet.

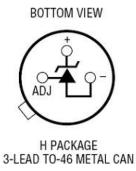


Figure B.2. H package drawing (for reference only). This figure was extracted from Linear Technology RH1009 Datasheet.

## Absolute Maximum Ratings:

Parameter	Max Rating
Reverse Breakdown Current	20mA
Forward Current	10mA



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## Appendix C: Electrical Test Parameters and Conditions

The expected ranges of values as well as the measurement conditions are taken from Linear Technology RH1009 Datasheet. All electrical tests for this device are performed on one of Aeroflex RAD's LTS2020 Test Systems. The LTS2020 Test System is a programmable parametric tester that provides parameter measurements for a variety of digital, analog and mixed signal products including voltage regulators, voltage comparators, D to A and A to D converters. The LTS2020 Test System achieves accuracy and sensitivity through the use of software self-calibration and an internal relay matrix with separate family boards and custom personality adapter boards. The tester uses this relay matrix to connect the required test circuits, select the appropriate voltage / current sources and establish the needed measurement loops for all the tests performed. The measured parameters and test conditions are shown in Table C.1.

A listing of the measurement precision/resolution for each parameter is shown in Table C.2. The precision/resolution values were obtained from test data or from the DAC resolution of the LTS-2020 for the particular test shown, whichever is greater. To generate the precision/resolution shown in Table C.2, one of the units-under-test was tested repetitively (a total of 10-times with re-insertion between tests) to obtain the average test value and standard deviation. Using this test data MIL-HDBK-814 90/90 KTL statistics were applied to the measured standard deviation to generate the final measurement range. This value encompasses the precision/resolution of all aspects of the test system, including the LTS2020 mainframe, family board, socket assembly and DUT board as well as insertion error. In some cases, the measurement resolution is limited by the internal DACs, which results in a measured standard deviation of zero. In these instances the precision/resolution were reported back as the LSB of the DAC.

Note that the testing and statistics used in this document are based on an "analysis of variables" technique, which relies on small sample sizes to qualify much larger lot sizes (see MIL-HDBK-814, p. 91 for a discussion of statistical treatments). Not all measured parameters are well suited to this approach due to inherent large variations. If necessary, larger samples sizes could be used to qualify these parameters using an "attributes" approach.



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

Table C.1. Measured parameters and test conditions for the RH1009MH 2.5V Voltage Reference.

Parameter	Symbol	Test Conditions
Reverse Breakdown Voltage (V)	Vz	IR=1mA
Reverse Breakdown Voltage Change with Current (V)	delta Vz_delta IR	IR= $400\mu$ A to $10$ mA
Reverse Dynamic Impedance ( $\Omega$ )	rz	IR=1mA

Table C.2. Measured parameters, pre-irradiation specifications and measurement precision for the RH1009MH 2.5V Voltage Reference.

Parameter	Pre-Irradiation Specification		Measurement	
	MIN	MAX	Precision/Resolution	
Reverse Breakdown Voltage (V)	2.495E+00	2.505E+00	±1.81E-04	
Reverse Breakdown Voltage Change with Current (V)		6.00E-03	±4.22E-05	
Reverse Dynamic Impedance ( $\Omega$ )		6.00E-01	±1.00E-02	



Aeroflex RAD 5017 N. 30th Street Colorado Springs, CO 80919 (719) 531-0800

## Appendix D: List of Figures Used in the Results Section (Section 5)

- 5.1. Reverse Breakdown Voltage (V) @ IR=1mA
- 5.2. Reverse Breakdown Voltage Change with Current (V) @ IR= 400µA to 10mA
- 5.3. Reverse Dynamic Impedance ( $\Omega$ ) @ IR=1mA