

**FLUKE®**

# **Fluke 192/196/199**

ScopeMeter

**Service Manual**

PN 4822 872 05376

September 1999, Rev.2, March 2000

© 1999 Fluke Corporation, All rights reserved. Printed in U.S.A.  
All product names are trademarks of their respective companies.



( )

( )

( )

# Table of Contents

Chapter	Title	Page
<b>1</b>	<b>Safety Instructions .....</b>	<b>1-1</b>
	1.1 Introduction.....	1-3
	1.2 Safety Precautions.....	1-3
	1.3 Caution and Warning Statements.....	1-3
	1.4 Symbols.....	1-3
	1.5 Impaired Safety .....	1-4
	1.6 General Safety Information.....	1-4
<b>2</b>	<b>Characteristics .....</b>	<b>2-1</b>
	2.1 Introduction.....	2-3
	2.2 Dual Input Oscilloscope.....	2-3
	2.2.1 Isolated Inputs A and B (Vertical).....	2-3
	2.2.2 Horizontal .....	2-4
	2.2.3 Trigger and Delay .....	2-4
	2.2.4 Automatic Connect&View Trigger .....	2-4
	2.2.5 Edge Trigger .....	2-5
	2.2.6 Isolated External Trigger .....	2-5
	2.2.7 Video Trigger.....	2-5
	2.2.8 Pulse Width Trigger.....	2-5
	2.2.9 Continuous Auto Set.....	2-5
	2.2.10 Automatic Capturing Scope Screens .....	2-6
	2.3 Automatic Scope Measurements.....	2-6
	2.3.1 General.....	2-6
	2.3.2 DC Voltage (VDC) .....	2-6
	2.3.3 AC Voltage (VAC) .....	2-6
	2.3.4 AC+DC Voltage (True RMS).....	2-7
	2.3.5 Amperes (AMP).....	2-7
	2.3.6 Peak.....	2-7
	2.3.7 Frequency (Hz) .....	2-8
	2.3.8 Duty Cycle (DUTY) .....	2-8
	2.3.9 Pulse Width (PULSE).....	2-8
	2.3.10 Power .....	2-8
	2.3.11 Phase .....	2-8

2.3.12 Temperature (TEMP) .....	2-9
2.3.13 Decibel (dB).....	2-9
2.4 Meter .....	2-9
2.4.1 Meter Input .....	2-9
2.4.2 Meter Functions .....	2-9
2.5 DMM Measurements on Meter Inputs.....	2-9
2.5.1 General.....	2-9
2.5.2 Ohms ( $\Omega$ ).....	2-10
2.5.3 Continuity (CONT).....	2-10
2.5.4 Diode.....	2-10
2.5.5 Temperature (TEMP) .....	2-10
2.5.6 DC Voltage (VDC).....	2-10
2.5.7 AC Voltage (VAC).....	2-11
2.5.8 AC+DC Voltage (True RMS).....	2-11
2.5.9 Amperes (AMP).....	2-11
2.6 Recorder .....	2-11
2.6.1 TrendPlot (Meter or Scope).....	2-11
2.6.2 Scope Record.....	2-12
2.7 Zoom, Replay and Cursors.....	2-12
2.7.1 Zoom.....	2-12
2.7.2 Replay .....	2-12
2.7.3 Cursor Measurements .....	2-12
2.8 Miscellaneous .....	2-13
2.8.1 Display .....	2-13
2.8.2  Power .....	2-13
2.8.3 Probe Calibration.....	2-13
2.8.4 Memory.....	2-13
2.8.5 Mechanical.....	2-13
2.8.6 Optical Interface Port.....	2-14
2.9 Environmental .....	2-14
2.10  Safety.....	2-14
2.11 10:1 probe .....	2-16
2.11.1 Safety .....	2-16
2.11.2 Electrical specifications.....	2-16
2.11.3 Environmental.....	2-16
2.12 Electromagnetic Immunity.....	2-17
<b>3 Circuit Description .....</b>	<b>3-1</b>
3.1 Introduction.....	3-3
3.2 Block Diagram .....	3-3
3.3 Start-up Sequence, Operating Modes.....	3-7
3.4 Detailed Circuit Descriptions.....	3-9
3.4.1 Scope Channel A - Scope Channel B .....	3-9
3.4.2 Meter/Ext Trigger Channel.....	3-12
3.4.3 Sampling&Triggering (S-ASIC).....	3-14
3.4.4 S-ASIC supply .....	3-19
3.4.5 ADC's .....	3-19
3.4.6 Digital Control.....	3-19
3.4.7 Power .....	3-24
3.4.8 Slow ADC, RS232 Serial Interface, Backlight, Buzzer .....	3-28
<b>4 Performance Verification .....</b>	<b>4-1</b>
4.1 Introduction.....	4-3
4.2 Equipment Required For Verification .....	4-3

4.3	General Instructions .....	4-3
4.4	Operating Instructions.....	4-4
4.4.1	Resetting the test tool .....	4-4
4.4.2	Navigating through menu's .....	4-4
4.4.3	Creating Test Tool Setup1 .....	4-5
4.5	Display and Backlight Test .....	4-5
4.6	Scope Input A&B Tests .....	4-7
4.6.1	Input A&B Vertical Accuracy Test .....	4-7
4.6.2	Input A&B DC Voltage Accuracy Test .....	4-9
4.6.3	Input A&B AC Voltage Accuracy Test (LF).....	4-11
4.6.4	Input A & B AC Coupled Lower Frequency Test.....	4-12
4.6.5	Input A and B Peak Measurements Test.....	4-13
4.6.6	Input A&B Frequency Measurement Accuracy Test .....	4-14
4.6.7	Input A&B Phase Measurements Test.....	4-15
4.6.8	Time Base Test .....	4-16
4.6.9	Input A Trigger Sensitivity Test.....	4-18
4.6.10	Input A AC Voltage Accuracy (HF) & Bandwidth Test .....	4-19
4.6.11	Input B Trigger Sensitivity Test .....	4-20
4.6.12	Input B AC Voltage Accuracy (HF) & Bandwidth Test .....	4-21
4.6.13	Video test.....	4-22
4.7	External Trigger Level Test .....	4-26
4.8	Meter (DMM) Tests .....	4-27
4.8.1	Meter DC Voltage Accuracy Test .....	4-27
4.8.2	Meter AC Voltage Accuracy & Frequency Response Test.....	4-28
4.8.3	Continuity Function Test.....	4-29
4.8.4	Diode Test Function Test .....	4-29
4.8.5	Ohms Measurements Test.....	4-29
4.9	Probe Calibration Generator Test .....	4-31
<b>5</b>	<b>Calibration Adjustment .....</b>	<b>5-1</b>
5.1	General.....	5-3
5.1.1	Introduction.....	5-3
5.1.2	Calibration number and date.....	5-3
5.1.3	General Instructions.....	5-3
5.1.4	Equipment Required For Calibration .....	5-4
5.2	Calibration Procedure Steps.....	5-4
5.3	Starting the Calibration.....	5-4
5.4	Contrast Calibration Adjustment .....	5-6
5.5	Warming Up & Pre-Calibration.....	5-7
5.6	Final Calibration .....	5-8
5.6.1	Input A LF-HF Gain .....	5-8
5.6.2	Input B LF-HF Gain.....	5-9
5.6.3	Input A&B LF-HF Gain.....	5-11
5.6.4	Input A&B Position .....	5-12
5.6.5	Input A&B Volt Gain .....	5-12
5.6.6	DMM Volt Gain .....	5-14
5.6.7	Input A & B, and DMM Zero .....	5-15
5.6.8	DMM Ohm Gain.....	5-15
5.6.9	Calculate Gain.....	5-16
5.7	Save Calibration Data and Exit.....	5-17
5.8	Probe Calibration .....	5-18
<b>6</b>	<b>Disassembling the Test Tool .....</b>	<b>6-1</b>
6.1	Introduction.....	6-3

6.2. Disassembly & Reassembly Procedures .....	6-3
6.2.1 Required Tools .....	6-3
6.2.2 Removing the Tilt Stand & Hang Strap.....	6-3
6.2.3 Replacing the Side-Strap, Changing the Side-Strap Position.....	6-3
6.2.4 Opening the Test Tool, Removing the Battery.....	6-3
6.2.5 Removing the Main PCA Unit.....	6-5
6.2.6 Removing the Display Assembly.....	6-6
6.2.7 Removing the Keypad and Keypad Foil.....	6-6
6.2.8 Disassembling the Main PCA Unit.....	6-7
6.2.9 Reassembling the Main PCA Unit.....	6-8
6.2.10 Reassembling the Test Tool .....	6-8
<b>7 Corrective Maintenance .....</b>	<b>7-1</b>
7.1 Introduction.....	7-3
7.2 Starting Fault Finding.....	7-4
7.3 Charger Circuit.....	7-5
7.4 Starting with a Dead Test Tool .....	7-6
7.4.1 Test Tool Completely Dead.....	7-7
7.4.2 Test Tool Software Does not Run.....	7-7
7.4.3 Software Runs, Test Tool not Operative .....	7-8
7.5 Miscellaneous Functions.....	7-8
7.5.1 Display and Back Light .....	7-8
7.5.2 Fly Back Converter.....	7-9
7.5.3 Slow ADC, +3V3SADC.....	7-10
7.5.4 Keyboard.....	7-11
7.5.5 Optical Port (Serial RS232 Interface).....	7-12
7.5.6 Channel A, Channel B Measurements.....	7-12
7.5.7 Meter Channel (Ext Trigger, Probe Cal) .....	7-13
7.5.8 Input Signal Acquisition.....	7-16
7.5.9 ADC's.....	7-18
7.5.10 Digital Control & Memory .....	7-19
7.5.11 Buzzer Circuit.....	7-20
7.5.12 RAM Test .....	7-20
7.5.13 Power ON/OFF .....	7-21
7.6 Loading Software.....	7-21
<b>8 List of Replaceable Parts .....</b>	<b>8-1</b>
8.1 Introduction.....	8-3
8.2 How to Obtain Parts.....	8-3
8.3 Service Centers .....	8-3
8.4 Final Assembly Parts .....	8-4
8.5 Main PCA Unit Parts .....	8-6
8.6 Main PCA Parts .....	8-8
8.7 Accessories.....	8-26
<b>9 Circuit Diagrams.....</b>	<b>9-1</b>
9.1 Introduction.....	9-3
9.2 Tracing signals in circuit diagrams.....	9-3
9.3 Locating Parts & Test Points .....	9-3
9.4 Diagrams .....	9-10
<b>10 Modifications .....</b>	<b>10-1</b>
10.1 Software modifications .....	10-3

10.2 Hardware modifications ..... 10-3





# **List of Tables**

<b>Table</b>	<b>Title</b>	<b>Page</b>
2-1.	Scope No Visible Disturbance at E=3 V/m.....	2-17
2-2.	Scope Disturbance <10% at E=3 V/m.....	2-17
2-3.	Meter Disturbance <1% at 3 V/m .....	2-17
3-1.	Fluke196-199 Main Functional Blocks .....	3-3
3-2.	Fluke 192-196-199 Operating Modes.....	3-8
3-3.	D-ASIC PWM Signals.....	3-22
4-1.	Vertical Accuracy Verification Points .....	4-8
4-2.	Volts DC Measurement Verification Points .....	4-10
4-4.	Input A&B AC Input Coupling Verification Points.....	4-13
4-5.	Volts Peak Measurement Verification Points .....	4-14
4-6.	Input A&B Frequency Measurement Accuracy Test .....	4-15
4-7.	Phase Measurement Verification Points .....	4-16
4-8.	Input A Trigger Sensitivity Test Points.....	4-18
4-9.	HF AC Voltage Verification Points .....	4-19
4-11.	HF AC Voltage Verification Points .....	4-22
4-12.	Meter Volts dc Measurement Verification Points.....	4-27
4-13.	Meter Volts AC Measurement Verification Points .....	4-28
4-14.	Resistance Measurement Verification Points.....	4-30
5-1.	Input A HF-LF Gain Calibration Points .....	5-9
5-2.	Input B LF-HF Gain Calibration Points .....	5-10
5-3.	Input A&B Gain Calibration Points .....	5-12
5-4.	Input A&B Gain Calibration Points .....	5-13
5-5.	DMM Gain Calibration Points .....	5-15
5-6.	Ohm Gain Calibration Points .....	5-16
7-1.	Starting Fault Finding.....	7-4
7-2.	Test Tool Key Matrix .....	7-11
7-3.	Meter Channel Control Line Status.....	7-14
7-4.	D-ASIC D3500 Signals .....	7-19
8-1.	Final Assembly Parts.....	8-4
8-2.	Main PCA Unit Parts.....	8-6
8-3.	Main PCA Parts.....	8-8
8-4.	Standard Accessories.....	8-26
8-6.	Users Manuals .....	8-27
8-7.	Optional Accessories .....	8-27
9-1.	Source & Destination of Signals .....	9-4

9-2.	Location of Parts on the PCA.....	9-5
9-3.	Location of Test Points on PCA Top Side.....	9-9
9-4.	Keyboard Layout.....	9-18

# **List of Figures**

<b>Figure</b>	<b>Title</b>	<b>Page</b>
2-1.	Max. Input Voltage v.s. Frequency .....	2-15
2-2.	Safe Handling: Max. Input Voltage Between Scope References, and Between Scope References and Meter Reference .....	2-15
2-3.	Max Voltage from Probe Tip to Ground and from Probe Tip to Reference .....	2-16
2-4.	Safe Handling: Max. Voltage from Probe Reference to Ground .....	2-16
3-1.	Fluke192-196-199 Block Diagram .....	3-2
3-2.	Fluke 192-196-199 Start-up Sequence, Operating Modes .....	3-8
3-3.	C-ASIC OQ0260 Block Diagram .....	3-9
3-4.	LF Floating to Non-Floating .....	3-10
3-5.	C-ASIC Control Circuit.....	3-11
3-6.	Meter/Ext Channel Block Diagram.....	3-12
3-7.	S-ASIC signal path block diagram .....	3-15
3-8.	S-ASIC Input Circuit .....	3-15
3-9.	Trigger Circuit.....	3-17
3-10.	LCD Control.....	3-21
3-11.	Keyboard Control Signals .....	3-22
3-12.	Power Supply Block Diagram .....	3-24
3-13.	CHAGATE Control Voltage .....	3-27
3-14.	REFPWM2 circuit.....	3-27
3-15.	Fly-Back Converter Current and Control Voltage .....	3-28
3-16.	Back Light Converter Voltages .....	3-30
4-1.	Menu item selection .....	4-4
4-3.	Test Tool Input A&B to 5500 Normal Output .....	4-7
4-4.	5500 Scope Output to Test Tool Input A&B .....	4-14
4-5.	5500A Scope Output to Test Tool Input A .....	4-16
4-7.	5500A Scope Output to Test Tool Input B.....	4-20
4-8.	Test Tool Input A to TV Signal Generator .....	4-22
4-9.	Trace for PAL/SECAM line 622.....	4-23
4-10.	Trace for NTSC line 525.....	4-23
4-11.	Trace for PAL/SECAM line 310.....	4-24
4-12.	Trace for NTSC line 262.....	4-24
4-13.	Test Tool Input A to TV Signal Generator Inverted .....	4-24
4-14.	Trace for PAL/SECAM line 310 Negative Video.....	4-25
4-15.	Trace for NTSC line 262 Negative Video.....	4-25
4-16.	Test Tool Meter/Ext Input to 5500A Normal Output .....	4-26

4-17.	Test Tool Input A to 5500A Normal Output 4-Wire.....	4-30
5-1.	Version & Calibration Screen .....	5-3
5-2.	Display Test Pattern .....	5-7
5-3.	5500A SCOPE Output to Test Tool Input A.....	5-8
5-4.	5500A SCOPE Output to Test Tool Input B.....	5-10
5-5.	Test tool Input A&B to 5500 Scope Output.....	5-11
5-6.	Test tool Input A&B to 5500 Normal Output .....	5-13
5-7.	5500A NORMAL Output to Test Tool Banana Input.....	5-14
5-8.	Four-wire Ohms calibration connections .....	5-16
5-9.	10:1 Probe Calibration Connection.....	5-18
5-10.	10:1 Probe Calibration .....	5-18
6-1.	Loosen 2 Input Cover Screws.....	6-4
6-2.	Loosen 2 Bottom Holster Screws .....	6-4
6-3.	Opening the Test Tool.....	6-4
6-4.	Removing the Battery Pack .....	6-4
6-5.	Final Assembly Details .....	6-5
6-6.	Flex Cable Connectors .....	6-6
6-7.	PCA Unit Assembly .....	6-7
7-1.	Operative Test Tool without Case.....	7-4
8-1.	Final Assembly Details .....	8-5
8-2.	Main PCA Unit.....	8-7
9-1.	Scope Channel A .....	9-11
9-2.	Scope Channel B .....	9-12
9-3.	Meter/External TriggerChannel .....	9-13
9-4.	S-ASIC Circuit .....	9-14
9-5.	S-ASIC Supply .....	9-15
9-6.	ADC's.....	9-16
9-7.	Digital Control.....	9-17
9-8.	Power Circuit.....	9-19
9-9.	Backlight, Slow ADC, Buzzer,Serial Interface .....	9-20
9-10.	Main PCA Top View Test Spots PCB Version 5.....	9-21
9-11.	Main PCA Top View PCB Version 5 .....	9-22
9-12.	Main PCA Bottom View PCB Version 5.....	9-23
9-13.	Main PCA Top View Test Spots PCB Version 6.....	9-24
9-14.	Main PCA Top View PCBVersion 6 and 7.....	9-25
9-15.	Main PCA Bottom View PCB Version 6 .....	9-26
10-1.	PCA revision number sticker.....	10-3
10-2.	R3503 for Intel FlashROM.....	10-4

# **Chapter 1**

## **Safety Instructions**

<b>Title</b>	<b>Page</b>
1.1 Introduction.....	1-3
1.2 Safety Precautions.....	1-3
1.3 Caution and Warning Statements.....	1-3
1.4 Symbols.....	1-3
1.5 Impaired Safety .....	1-4
1.6 General Safety Information.....	1-4



## 1.1 Introduction

Read these pages carefully before beginning to install and use the test tool.

The following paragraphs contain information, cautions and warnings which must be followed to ensure safe operation and to keep the test tool in a safe condition.

### Warning

**Servicing described in this manual is to be done only by qualified service personnel. To avoid electrical shock, do not service the test tool unless you are qualified to do so.**

## 1.2 Safety Precautions

For the correct and safe use of this test tool it is essential that both operating and service personnel follow generally accepted safety procedures in addition to the safety precautions specified in this manual. Specific warning and caution statements, where they apply, will be found throughout the manual. Where necessary, the warning and caution statements and/or symbols are marked on the test tool.

## 1.3 Caution and Warning Statements

### Caution











**Used to indicate correct operating or maintenance procedures to prevent damage to or destruction of the equipment or other property.**

### Warning

**Calls attention to a potential danger that requires correct procedures or practices to prevent personal injury.**

## 1.4 Symbols

The following symbols are used on the test tool, in the Users Manual, in this Service Manual, or on spare parts for this test tool.

	See explanation in Users Manual		DOUBLE INSULATION (Protection Class)
	Live voltage		Earth
	Static sensitive components (black/yellow).	 Ni MH	Recycling information
	Disposal information		Conformité Européenne
	Safety Approval		Safety Approval

## **1.5 Impaired Safety**

Whenever it is likely that safety has been impaired, the test tool must be turned off and disconnected from line power. The matter should then be referred to qualified technicians. Safety is likely to be impaired if, for example, the test tool fails to perform the intended measurements or shows visible damage.

## **1.6 General Safety Information**

### **Warning**

**Removing the test tool covers or removing parts, except those to which access can be gained by hand, is likely to expose live parts and accessible terminals which can be dangerous to life.**

The test tool shall be disconnected from all voltage sources before it is opened.

Capacitors inside the test tool can hold their charge even if the test tool has been separated from all voltage sources.



When servicing the test tool, use only specified replacement parts.



# Chapter 2

## Characteristics

Title	Page
2.1 Introduction.....	2-3
2.2 Dual Input Oscilloscope.....	2-3
2.2.1 Isolated Inputs A and B (Vertical).....	2-3
2.2.2 Horizontal.....	2-4
2.2.3 Trigger and Delay.....	2-4
2.2.4 Automatic Connect&View Trigger.....	2-4
2.2.5 Edge Trigger.....	2-5
2.2.6 Isolated External Trigger.....	2-5
2.2.7 Video Trigger.....	2-5
2.2.8 Pulse Width Trigger.....	2-5
2.2.9 Continuous Auto Set.....	2-5
2.2.10 Automatic Capturing Scope Screens.....	2-6
2.3 Automatic Scope Measurements.....	2-6
2.3.1 General.....	2-6
2.3.2 DC Voltage (VDC).....	2-6
2.3.3 AC Voltage (VAC).....	2-6
2.3.4 AC+DC Voltage (True RMS).....	2-7
2.3.5 Amperes (AMP).....	2-7
2.3.6 Peak.....	2-7
2.3.7 Frequency (Hz).....	2-8
2.3.8 Duty Cycle (DUTY).....	2-8
2.3.9 Pulse Width (PULSE).....	2-8
2.3.10 Power.....	2-8
2.3.11 Phase.....	2-8
2.3.12 Temperature (TEMP).....	2-9
2.3.13 Decibel (dB).....	2-9
2.4 Meter.....	2-9
2.4.1 Meter Input.....	2-9
2.4.2 Meter Functions.....	2-9
2.5 DMM Measurements on Meter Inputs.....	2-9

2.5.1 General.....	2-9
2.5.2 Ohms ( $\Omega$ ).....	2-10
2.5.3 Continuity (CONT).....	2-10
2.5.4 Diode.....	2-10
2.5.5 Temperature (TEMP) .....	2-10
2.5.6 DC Voltage (VDC).....	2-10
2.5.7 AC Voltage (VAC).....	2-10
2.5.8 AC+DC Voltage (True RMS).....	2-11
2.5.9 Amperes (AMP).....	2-11
2.6 Recorder .....	2-11
2.6.1 TrendPlot (Meter or Scope).....	2-11
2.6.2 Scope Record .....	2-11
2.7 Zoom, Replay and Cursors.....	2-12
2.7.1 Zoom.....	2-12
2.7.2 Replay .....	2-12
2.7.3 Cursor Measurements .....	2-12
2.8 Miscellaneous .....	2-13
2.8.1 Display .....	2-13
2.8.2  Power .....	2-13
2.8.3 Probe Calibration.....	2-13
2.8.4 Memory.....	2-13
2.8.5 Mechanical.....	2-13
2.8.6 Optical Interface Port.....	2-14
2.9 Environmental .....	2-14
2.10  Safety.....	2-14
2.11 10:1 probe .....	2-16
2.11.1 Safety .....	2-16
2.11.2 Electrical specifications.....	2-16
2.11.3 Environmental.....	2-16
2.12 Electromagnetic Immunity .....	2-17

## 2.1 Introduction

### Performance Characteristics

FLUKE guarantees the properties expressed in numerical values with the stated tolerance. Specified non-tolerance numerical values indicate those that could be nominally expected from the mean of a range of identical ScopeMeter test tools.

### Environmental Data

The environmental data mentioned in this manual are based on the results of the manufacturer's verification procedures.

### Safety Characteristics

The test tool has been designed and tested in accordance with Standards ANSI/ISA S82.01-1994, EN 61010.1 (1993) (IEC 1010-1), CAN/CSA-C22.2 No.1010.1-92 (including approval), UL3111-1 (including approval) Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use.

This manual contains information and warnings that must be followed by the user to ensure safe operation and to keep the instrument in a safe condition. Use of this equipment in a manner not specified by the manufacturer may impair protection provided by the equipment.

## 2.2 Dual Input Oscilloscope

### 2.2.1 Isolated Inputs A and B (Vertical)

Bandwidth, DC Coupled	
FLUKE 199 .....	200 MHz (-3 dB)
FLUKE 196 .....	100 MHz (-3 dB)
FLUKE 192 .....	60 MHz (-3 dB)
Lower Frequency Limit, AC Coupled	
with 10:1 probe .....	<2 Hz (-3 dB)
direct (1:1) .....	<5 Hz (-3 dB)
Rise Time	
FLUKE 199 .....	<1.7 ns
FLUKE 196 .....	<3.5 ns
FLUKE 192 .....	<5.8 ns
Analog Bandwidth Limiters .....	20 MHz and 10 kHz
Input Coupling .....	AC, DC
Polarity .....	Normal, Inverted
Sensitivity Ranges	
with 10:1 probe .....	50 mV to 1000 V/div
direct (1:1) .....	5 mV to 100 V/div
Trace Positioning Range .....	±4 divisions
Input Impedance on BNC	
DC Coupled .....	1 MΩ (±1 %)/15 pF (±2 pF)

$\Delta$ Max. Input Voltage	
with 10:1 probe.....	600 V CAT III, 1000 V CAT II
direct (1:1) .....	300 V CAT III
	(For detailed specifications, see "Safety")
Vertical Accuracy .....	$\pm(1.5 \% + 0.04 \text{ range/div})$
Digitizer Resolution.....	8 bits, separate digitizer for each input

### 2.2.2 Horizontal

Maximum Time Base Speed:	
FLUKE 199 .....	5 ns/div
FLUKE 196 .....	5 ns/div
FLUKE 192 .....	10 ns/div
Minimum Time Base Speed (Scope Record) ..	2 min/div
Real Time Sampling Rate (for both inputs simultaneously):	
FLUKE199:	
5 ns to 2 $\mu$ s /div .....	up to 2.5 GS/s
5 $\mu$ s to 120 s/div .....	20 MS/s
FLUKE 196:	
5 ns to 2 $\mu$ s /div .....	up to 1 GS/s
5 $\mu$ s to 120 s/div .....	20 MS/s
FLUKE 192	
10 ns to 2 $\mu$ s /div .....	up to 500 MS/s
5 $\mu$ s to 120 s/div .....	20 MS/s
Record Length	
Scope Record Mode.....	55000 points on each input
Scope Normal Mode.....	1000 points on each input
Scope Glitch Capture Mode .....	500 points on each input
Glitch Detection	
2 $\mu$ s to 120 s/div.....	displays glitches as fast as 50 ns
Waveform Display.....	Normal, Average 8x, Average 64x, Persistence
Time Base Accuracy.....	$\pm 100 \text{ ppm}$

### 2.2.3 Trigger and Delay

Trigger Modes .....	Automatic, Edge, External, Video, Pulse Width
Trigger Delay.....	up to +1000 divisions
Pre Trigger View .....	one full screen length
Max. Delay .....	10 seconds

### 2.2.4 Automatic Connect&View Trigger

Source .....	A, B, EXT
Slope .....	Positive, Negative

### 2.2.5 Edge Trigger

Screen Update.....	Free Run, On Trigger, Single Shot
Source.....	A, B, EXT
Slope.....	Positive, Negative
Trigger Level Control Range.....	$\pm 4$ divisions
Trigger Sensitivity A and B	
DC to 5 MHz at $>5$ mV/div.....	0.5 divisions
DC to 5 MHz at 5 mV/div.....	1 division
200 MHz (FLUKE 199).....	1 division
250 MHz (FLUKE 199).....	2 divisions
100 MHz (FLUKE 196).....	1 division
150 MHz (FLUKE 196).....	2 divisions
60 MHz (FLUKE 192).....	1 division
100 MHz (FLUKE 192).....	2 divisions

### 2.2.6 Isolated External Trigger

Bandwidth.....	10 kHz
Modes.....	Automatic, Edge
Trigger Levels (DC to 10 kHz)	120 mV, 1.2 V

### 2.2.7 Video Trigger

Standards.....	PAL, PAL+, NTSC, SECAM
Modes.....	Lines, Line Select, Field 1 or Field 2
Source.....	A
Polarity.....	Positive, Negative
Sensitivity.....	0.7 division sync level

### 2.2.8 Pulse Width Trigger

Screen Update.....	On Trigger, Single Shot
Trigger Conditions.....	$<T$ , $>T$ , $\approx T$ ( $\pm 10\%$ ), $\neq T$ ( $\pm 10\%$ )
Source.....	A
Polarity.....	Positive or negative pulse
Pulse Time Adjustment Range.....	1/100 div. to 250 div. with a maximum resolution of 50 ns.

### 2.2.9 Continuous Auto Set

Autoranging attenuators and time base, automatic Connect&View™ triggering with automatic source selection.

Modes	
Normal.....	15 Hz to max. bandwidth
Low Frequency.....	1 Hz to max. bandwidth

Minimum Amplitude A and B	
DC to 1 MHz .....	10 mV
1 MHz to max. bandwidth .....	20 mV

**2.2.10 Automatic Capturing Scope Screens**

Capacity .....	100 dual input scope Screens
----------------	------------------------------

*For viewing screens, see Replay function.*

**2.3 Automatic Scope Measurements**

The accuracy of all readings is within  $\pm$  (% of reading + number of counts) from 18 °C to 28 °C. Add 0.1x (specific accuracy) for each °C below 18 °C or above 28 °C. For voltage measurements with 10:1 probe, add probe accuracy unless the probe has been calibrated on the test tool. At least 1.5 waveform period must be visible on the screen.

**2.3.1 General**

Inputs .....	A and B
DC Common Mode Rejection (CMRR) .....	>100 dB
AC Common Mode Rejection .....	>60 dB at 50, 60, or 400 Hz

**2.3.2 DC Voltage (VDC)**

Maximum Voltage	
with 10:1 probe .....	1000 V
direct (1:1) .....	300 V
Maximum Resolution	
with 10:1 probe .....	1 mV
direct (1:1) .....	100 $\mu$ V
Full Scale Reading .....	1100 counts
Accuracy at 5 s to 5 $\mu$ s/div .....	$\pm$ (1.5 % +5 counts)
Normal Mode AC Rejection at 50 or 60 Hz ...	>60 dB

**2.3.3 AC Voltage (VAC)**

Maximum Voltage	
with 10:1 probe .....	1000 V
direct (1:1) .....	300 V
Maximum Resolution	
with 10:1 probe .....	1 mV
direct (1:1) .....	100 $\mu$ V
Full Scale Reading .....	1100 counts
Accuracy	
DC coupled:	
DC to 60 Hz .....	$\pm$ (1.5 % +10 counts)

AC coupled, low frequencies:

50 Hz direct (1:1).....	$\pm(2.1 \% + 10 \text{ counts})$
60 Hz direct (1:1).....	$\pm(1.9 \% + 10 \text{ counts})$

With the 10:1 probe the low frequency roll off point will be lowered to 2 Hz, which improves the AC accuracy for low frequencies. When possible use DC coupling for maximum accuracy.

AC or DC coupled, high frequencies:

60 Hz to 20 kHz.....	$\pm(2.5 \% + 15 \text{ counts})$
20 kHz to 1 MHz.....	$\pm(5 \% + 20 \text{ counts})$
1 MHz to 25 MHz.....	$\pm(10 \% + 20 \text{ counts})$

For higher frequencies the instrument's frequency roll off starts affecting accuracy.

Normal Mode DC Rejection..... >50 dB

All accuracies are valid if:

- The waveform amplitude is larger than one division
- At least 1.5 waveform period is on the screen

### 2.3.4 AC+DC Voltage (*True RMS*)

Maximum Voltage

with 10:1 probe.....	1000 V
direct (1:1).....	300 V

Maximum Resolution

with 10:1 probe.....	1 mV
direct (1:1).....	100 $\mu$ V

Full Scale Reading..... 1100 counts

Accuracy

DC to 60 Hz.....	$\pm(1.5 \% + 10 \text{ counts})$
60 Hz to 20 kHz.....	$\pm(2.5 \% + 15 \text{ counts})$
20 kHz to 1 MHz.....	$\pm(5 \% + 20 \text{ counts})$
1 MHz to 25 MHz.....	$\pm(10 \% + 20 \text{ counts})$

For higher frequencies the instrument's frequency roll off starts affecting accuracy.

### 2.3.5 Amperes (*AMP*)

*With Optional Current Probe or Current Shunt*

Ranges ..... same as VDC, VAC, VAC+DC

Probe Sensitivity..... 100  $\mu$ V/A, 1 mV/A, 10 mV/A, 100 mV/A,  
1 V/A, 10 V/A, and 100 V/A

Accuracy..... same as VDC, VAC, VAC+DC  
(add current probe or -shunt accuracy)

### 2.3.6 Peak

Modes ..... Max peak, Min peak, or pk-to-pk

Maximum Voltage

with 10:1 probe.....	1000 V
direct (1:1).....	300 V

Maximum Resolution	
with 10:1 probe.....	10 mV
direct (1:1) .....	1 mV
Full Scale Reading.....	800 counts
Accuracy	
Max peak or Min peak.....	±0.2 division
Peak-to-peak .....	±0.4 division

### **2.3.7 Frequency (Hz)**

Range .....	1.000 Hz to full bandwidth
Full Scale Reading.....	9 999 counts, with at least 10 waveform periods on screen.
Accuracy	
1 Hz to full bandwidth .....	±(0.5 % +2 counts)

### **2.3.8 Duty Cycle (DUTY)**

Range .....	4.0 % to 98.0 %
-------------	-----------------

### **2.3.9 Pulse Width (PULSE)**

Resolution.....	1/100 division
Full Scale Reading.....	999 counts
Accuracy	
1 Hz to full bandwidth .....	±(0.5 % +2 counts)

### **2.3.10 Power**

Power Factor.....	ratio between Watts and VA
Range .....	0.00 to 1.00
Watt .....	RMS reading of multiplication corresponding samples Input A (volts) and Input B (amperes)
Full Scale Reading.....	999 counts
VA .....	V <sub>rms</sub> x A <sub>rms</sub>
Full Scale Reading.....	999 counts
VA Reactive .....	$\sqrt{((VA)^2 - W^2)}$
Full Scale Reading.....	999 counts

### **2.3.11 Phase**

Range .....	-180 to +180 degrees
Resolution.....	1 degree
Accuracy	
0.1 Hz to 1 MHz .....	±2 degrees
1 MHz to 10 MHz.....	±3 degrees



### 2.3.12 Temperature (TEMP)

With Optional Temperature Probe


Ranges (°C or °F) .....	-40.0 to +100.0 ° -100 to +250 ° -100 to +500 ° -100 to +1000 ° -100 to + 2500 °
Probe Sensitivity.....	1 mV/°C and 1 mV/°F
Accuracy.....	as VDC (add temp. probe accuracy)

### 2.3.13 Decibel (dB)

dBV .....	dB relative to one volt
dBm .....	dB relative to one mW in 50 Ω or 600 Ω
dBon .....	VDC, VAC, or VAC+DC
Accuracy.....	same as VDC, VAC, VAC+DC

## 2.4 Meter

### 2.4.1 Meter Input

Input Coupling.....	DC
Frequency Response .....	DC to 10 kHz (-3 dB)
Input Impedance .....	1 MΩ (±1 %)/10 pF (±1.5 pF)
 Max. Input Voltage .....	1000 V CAT II, 600 V CAT III (For detailed specifications, see “Safety”)

### 2.4.2 Meter Functions

Ranging.....	Auto, Manual
Modes .....	Normal, Relative

## 2.5 DMM Measurements on Meter Inputs

The accuracy of all measurements is within ± (% of reading + number of counts) from 18 °C to 28 °C.

Add 0.1x (specific accuracy) for each °C below 18 °C or above 28 °C.

### 2.5.1 General

DC Common Mode Rejection (CMRR).....	>100 dB
AC Common Mode Rejection .....	>60 dB at 50, 60, or 400 Hz

### 2.5.2 Ohms ( $\Omega$ )

Ranges .....	500.0 $\Omega$ , 5.000 k $\Omega$ , 50.00 k $\Omega$ , 500.0 k $\Omega$ , 5.000 M $\Omega$ , 30.00 M $\Omega$
Full Scale Reading	
500 $\Omega$ to 5 M $\Omega$ .....	5000 counts
30 M $\Omega$ .....	3000 counts
Accuracy .....	$\pm(0.6\% + 5 \text{ counts})$
Measurement Current .....	0.5 mA to 50 nA, $\pm 20\%$ decreases with increasing ranges
Open Circuit Voltage.....	<4 V

### 2.5.3 Continuity (CONT)

Beep .....	<30 $\Omega$ ( $\pm 10 \Omega$ )
Measurement Current .....	0.5 mA, $\pm 20\%$
Detection of shorts of .....	$\geq 1 \text{ ms}$

### 2.5.4 Diode

Maximum Voltage Reading.....	2.8 V
Open Circuit Voltage.....	<4 V
Accuracy .....	$\pm(2\% + 5 \text{ counts})$
Measurement Current .....	0.5 mA, $\pm 20\%$

### 2.5.5 Temperature (TEMP)

*With Optional Temperature Probe*

Ranges ( $^{\circ}\text{C}$ or $^{\circ}\text{F}$ ) .....	-40.0 to +100.0 $^{\circ}$ -100.0 to +250.0 $^{\circ}$ -100.0 to +500.0 $^{\circ}$ -100 to +1000 $^{\circ}$ -100 to +2500 $^{\circ}$
Probe Sensitivity.....	1 mV/ $^{\circ}\text{C}$ and 1 mV/ $^{\circ}\text{F}$
Accuracy .....	as VDC (add temp. probe accuracy)

### 2.5.6 DC Voltage (VDC)

Ranges .....	500.0 mV, 5.000 V, 50.00 V, 500.0 V, 1100 V
Full Scale Reading.....	5000 counts
Accuracy .....	$\pm(0.5\% + 5 \text{ counts})$
Normal Mode AC Rejection.....	>60 dB at 50 or 60 Hz $\pm 1\%$

### 2.5.7 AC Voltage (VAC)

Ranges .....	500.0 mV, 5.000 V, 50.00 V, 500.0 V,
--------------	--------------------------------------

	1100 V
Full Scale Reading.....	5000 counts
Accuracy	
15 Hz to 60 Hz.....	$\pm(1 \% +10 \text{ counts})$
60 Hz to 1 kHz.....	$\pm(2.5 \% +15 \text{ counts})$
For higher frequencies the frequency roll off of the Meter input starts affecting accuracy.	
Normal Mode DC Rejection.....	>50 dB

### 2.5.8 AC+DC Voltage (*True RMS*)

Ranges .....	500.0 mV, 5.000 V, 50.00 V, 500.0 V, 1100 V
Full Scale Reading.....	5000 counts
Accuracy	
DC to 60 Hz.....	$\pm(1 \% +10 \text{ counts})$
60 Hz to 1 kHz.....	$\pm(2.5 \% +15 \text{ counts})$
For higher frequencies the frequency roll off of the Meter input starts affecting accuracy.	
All accuracies are valid if the waveform amplitude is larger than 5 % of full scale.	

### 2.5.9 Amperes (*AMP*)

*With Optional Current Probe or Current Shunt.*

Ranges .....	same as VDC, VAC, VAC+DC
Probe Sensitivity.....	100 $\mu$ V/A, 1 mV/A, 10 mV/A, 100 mV/A, 1 V/A, 10 V/A, and 100 V/A
Accuracy.....	same as VDC, VAC, VAC+DC (add current probe or -shunt accuracy)

## 2.6 Recorder

### 2.6.1 TrendPlot (*Meter or Scope*)

Chart recorder that plots a graph of min and max values of Meter or Scope measurements over time.

Measurement Speed.....	> 2.5 measurements/s
Time/Div.....	10 s/div to 20 min/div
Record Size.....	27000 points per input
Recorded Time Span .....	90 min to 8 days
Time Reference.....	time from start, time of day

### 2.6.2 Scope Record

Records scope waveforms in deep memory while displaying the waveform in Roll mode.





## 2.8.6 Optical Interface Port

Via RS-232, optically isolated

To Printer

Supports Epson FX, LQ, HP Deskjet®, Laserjet®, and Postscript  
Serial via PM9080 (optically isolated RS-232 adapter/cable, optional).  
Parallel via PAC91 (optically isolated Print Adapter Cable, optional).

To PC/Notebook

Serial via PM9080 (optically isolated RS-232 adapter/cable, optional), using SW90W  
(FlukeView® software for Windows95® and Windows NT®).

## 2.9 Environmental

Environmental ..... MIL 28800F, Class 3

Temperature

Operating:

battery operated ..... 0 to 50 °C (32 to 122 °F)  
power operated ..... 0 to 40 °C (32 to 104 °F)

Storage ..... -20 to +60 °C (-4 to +140 °F)

Humidity

Operating:

0 to 10 °C (32 to 50 °F) ..... noncondensing  
10 to 30 °C (50 to 86 °F) ..... 95 %  
30 to 40 °C (86 to 104 °F) ..... 75 %  
40 to 50 °C (104 to 122 °F) ..... 45 %

Storage:

-20 to 60 °C (-4 to 140 °F) ..... noncondensing

Altitude

Operating ..... 3 km (10 000 feet)

Storage ..... 12 km (40 000 feet)

Vibration ..... max. 3 g

Shock ..... max. 30 g

Electromagnetic Compatibility (EMC)

Emission and immunity ..... EN-IEC61326-1 (1997)

Enclosure Protection ..... IP51, ref: IEC529

## 2.10 Safety

Designed for measurements on 1000 V Category II Installations, 600 V Category III Installations, Pollution Degree 2, per:

- ANSI/ISA S82.01-1994
- EN61010-1 (1993) (IEC1010-1)
- CAN/CSA-C22.2 No.1010.1-92
- UL3111-1

- ⚠ Max. Input Voltages
- Input A and B directly ..... 300 V CAT III
  - Input A and B via 10:1 probe ..... 1000 V CAT II, 600 V CAT III
  - METER/EXT TRIG inputs..... 1000 V CAT II, 600 V CAT III

- ⚠ Max. Floating Voltage
- from any terminal to ground ..... 1000 V CAT II, 600 V CAT III
  - between any terminal..... 1000 V CAT II, 600 V CAT III

**Voltage ratings are given as “working voltage”. They should be read as  $V_{ac-rms}$  (50-60 Hz) for AC sinewave applications and as  $V_{dc}$  for DC applications.**

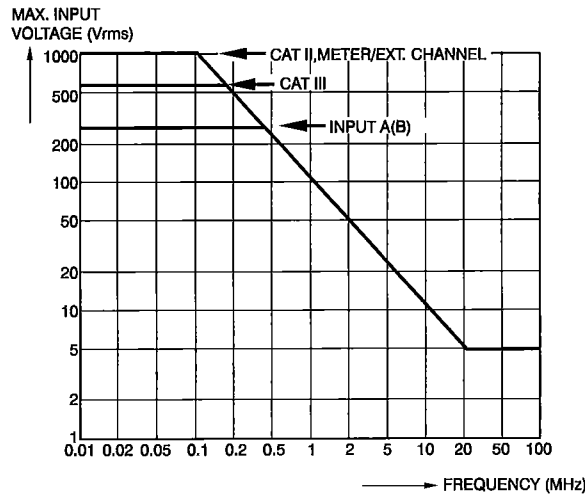


Figure 2-1. Max. Input Voltage v.s. Frequency

ST8543.WMF

*Note*

*Overvoltage Category III refers to distribution level and fixed installation circuits inside a building. Overvoltage Category II refers to local level, which is applicable for appliances and portable equipment.*

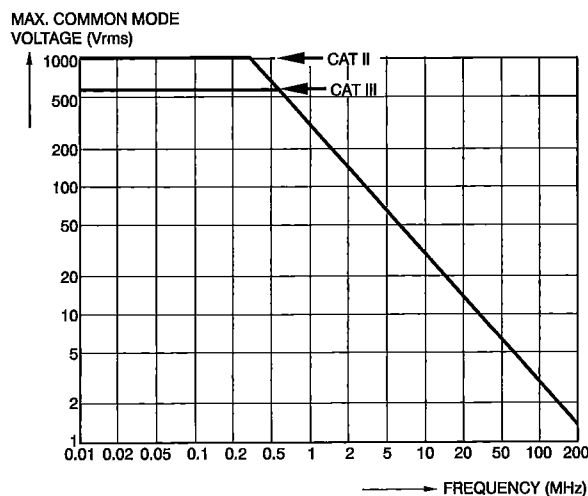


Figure 2-2. Safe Handling: Max. Input Voltage Between Scope References, and Between Scope References and Meter Reference

ST8699.WMF

## 2.11 10:1 probe

### 2.11.1 Safety

⚠ Max. Input Voltage.....	1000 V CAT II, 600 V CAT III
⚠ Max. Floating Voltage from any terminal to ground.....	1000 V CAT II, 600 V CAT III up to 400 Hz

### 2.11.2 Electrical specifications

Input Impedance at probe tip .....	10 MΩ (±2 %)//14 pF (±2 pF)
Capacity Adjustment Range .....	10 to 25 pF
Attenuation at DC (1 MΩ input) .....	10 x (±2 %)
Bandwidth (with Fluke 199).....	DC to 200 MHz (-3 dB)

### 2.11.3 Environmental

Temperature	
Operating .....	0 to 50 °C (32 to 122 °F)
Storage .....	-20 to +60 °C (-4 to 140 °F)
Altitude	
Operating .....	3 km (10 000 feet)
Storage .....	12 km (40 000 feet)
Humidity	
Operating at 10 to 30 °C (50 to 86 °F) .....	95 %

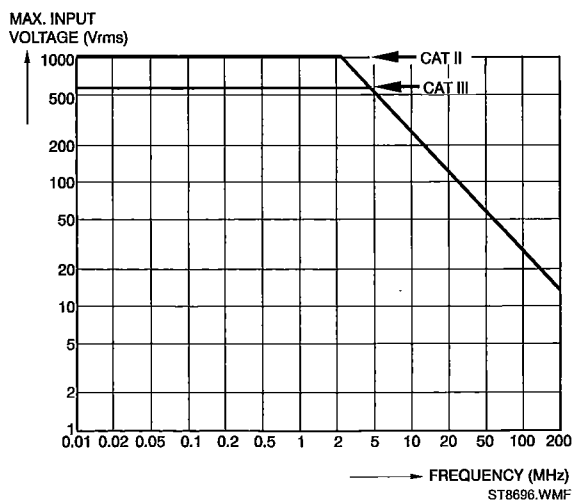


Figure 2-3. Max Voltage from Probe Tip to Ground and from Probe Tip to Reference

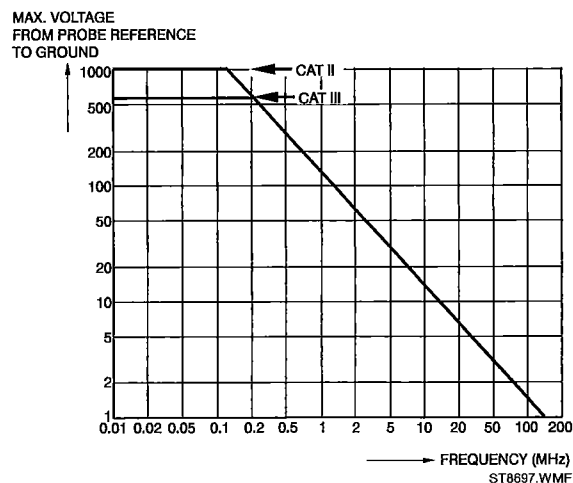


Figure 2-4. Safe Handling: Max. Voltage from Probe Reference to Ground



## 2.12 Electromagnetic Immunity

The Fluke 190 series, including standard accessories, conforms with the EEC directive 89/336 for EMC immunity, as defined by EN-61326-1, with the addition of the following tables.

**Scope Mode (10 ms/div): Trace disturbance with VP190 shorted**

**Table 2-1. Scope No Visible Disturbance at E=3 V/m**

No visible disturbance	E = 3V/m
Frequency range 10 kHz to 20 MHz	5 mV/div to 100 V/div
Frequency range 20 MHz to 100 MHz	100 mV/div to 100 V/div
Frequency range 100 MHz to 1 GHz	500 mV/div to 100 V/div *)

\*) With the 20 MHz Bandwidth Filter switched on: no visible disturbance  
With the 20 MHz Bandwidth Filter switched off: disturbance is max 2div.

**Table 2-2. Scope Disturbance <10% at E=3 V/m**

Disturbance less than 10% of full scale	E = 3V/m
Frequency range 20 MHz to 100 MHz	10 mV/div to 50 mV/div

Test Tool ranges not specified in tables 2-1 and 2-2 may have a disturbance of more than 10% of full scale.

**Meter Mode (Vdc, Vac, Vac+dc, Ohm and Continuity): Reading disturbance with test leads shorted**

**Table 2-3. Meter Disturbance <1% at 3 V/m**


Disturbance less than 1% of full scale	E = 3V/m
Frequency range 10 kHz to 1 GHz	500 mV to 1000 V , 500 Ohm to 30 MOhm ranges



## **Chapter 3**

# **Circuit Description**

<b>Title</b>	<b>Page</b>
3.1 Introduction.....	3-3
3.2 Block Diagram .....	3-3
3.3 Start-up Sequence, Operating Modes.....	3-7
3.4 Detailed Circuit Descriptions.....	3-9
3.4.1 Scope Channel A - Scope Channel B .....	3-9
3.4.2 Meter/Ext Trigger Channel.....	3-12
3.4.3 Sampling&Triggering (S-ASIC).....	3-14
3.4.4 S-ASIC supply .....	3-19
3.4.5 ADC's .....	3-19
3.4.6 Digital Control .....	3-19
3.4.7 Power .....	3-24
3.4.8 Slow ADC, RS232 Serial Interface, Backlight, Buzzer .....	3-28

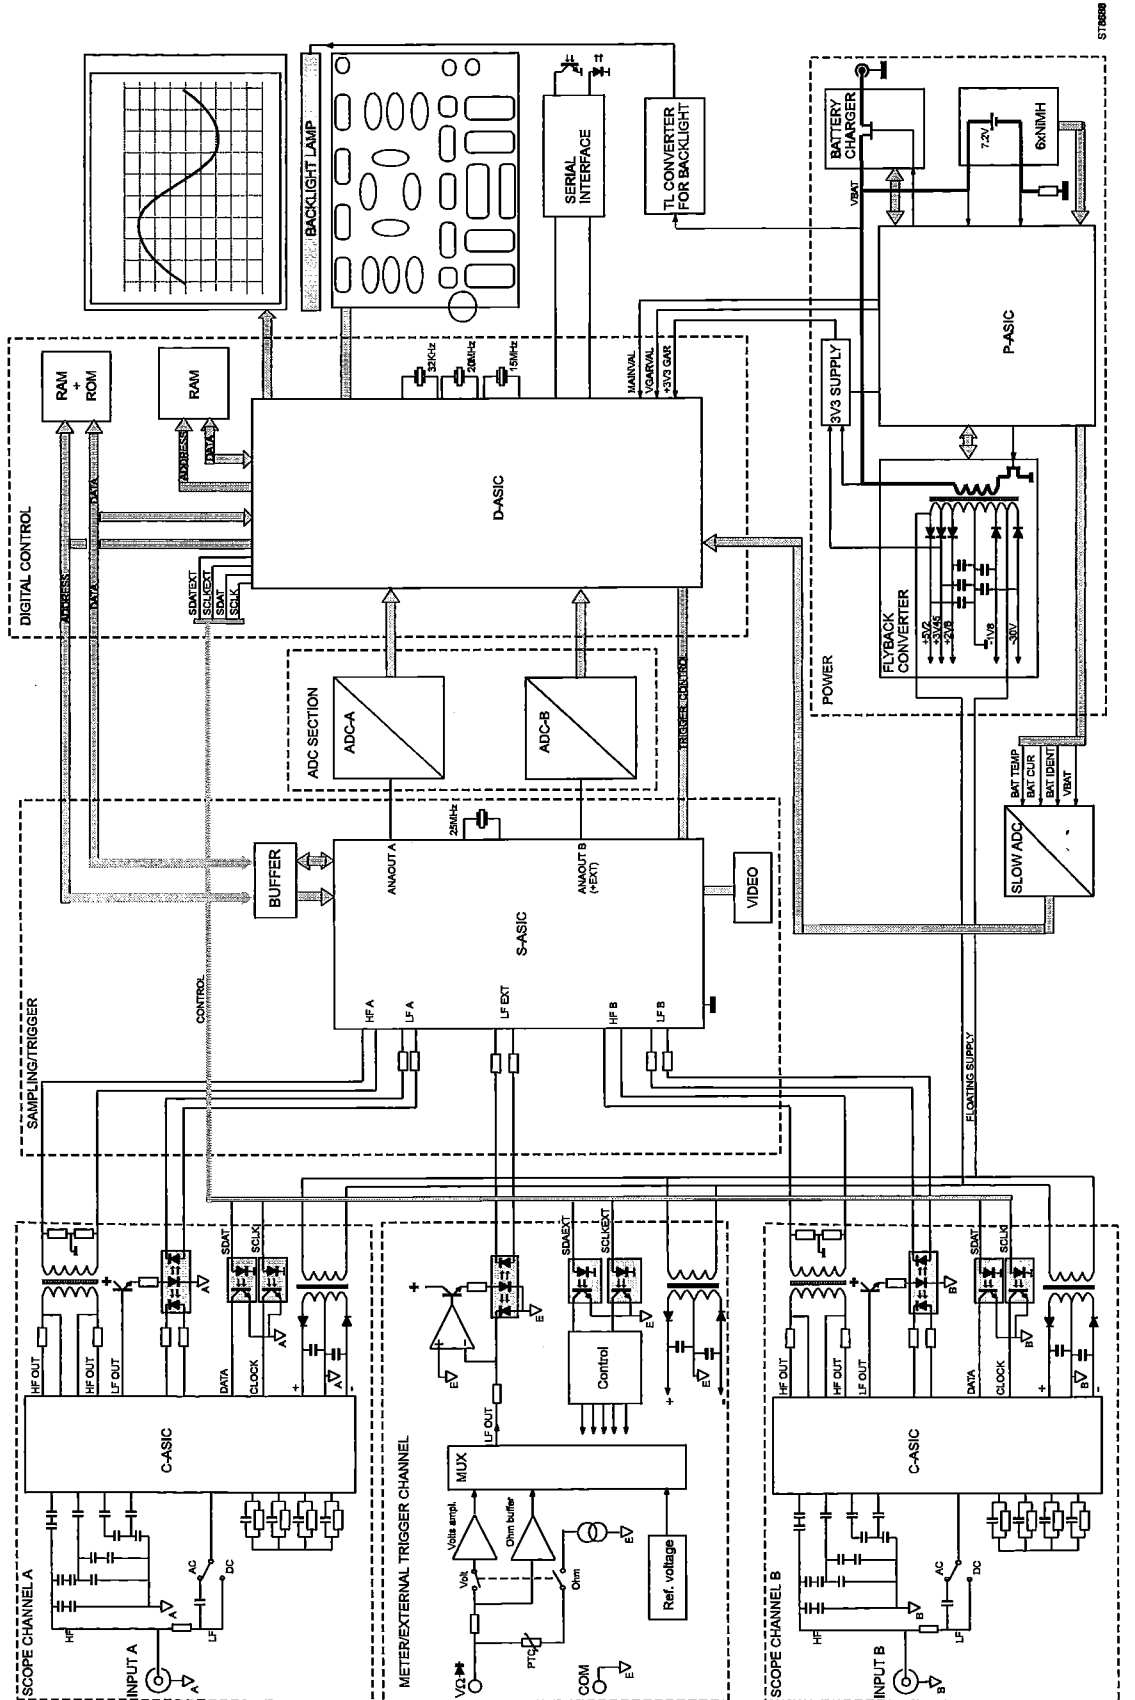

ST10089

Figure 3-1. Fluke192-196-199 Block Diagram

AL-BLOCK.WMF

### 3.1 Introduction

The Fluke 192/196/199 ScopeMeter test tools have three input channels that are electrically floating with respect to each other, and with respect to the power adapter input.

Channel A and channel B are oscilloscope channels with a 60/100/200 MHz bandwidth. The Meter/External Trigger channel is a combined DMM and external trigger channel with a limited (20 kHz) bandwidth.

Section 3.2 describes the functional block diagram. It provides a quick way to get familiar with the test tool basic build-up.

Section 3.3 describes the test tool start-up sequence, and basic operating modes.

Section 3.4 describes the principle of operation of the test tool functions in detail, on the basis of the circuit diagrams.

### 3.2 Block Diagram

For the overall block diagram of the test tool see Figure 3-1. Fluke192-196-199 Block Diagram. The dashed frames indicate the division into the detailed circuit diagrams Figures 9-1 to 9-9.

Table 3-1 shows the main functions of the circuits in diagrams Figure 9-1 to 9-9.

**Table 3-1. Fluke196-199 Main Functional Blocks**

Circuit Diagram	Main Functions	Figure
SCOPE CHANNEL A	Scope Input A signal conditioning	9-1
SCOPE CHANNEL B	Scope Input B signal conditioning	9-2
METER/EXTERNAL TRIGGER CHANNEL	Multimeter Input signal conditioning External trigger input, probe calibration output signal	9-3
SAMPLING/TRIGGER	Sampling of conditioned input signals Trigger generation	9-4
S-ASIC SUPPLY	Filtering/de-coupling of various supply voltages for the S-ASIC	9-5
ADC's	Analog to Digital Conversion of the Input A and B, and Meter Input signals	9-6
DIGITAL CONTROL	Acquisition of ADC samples Micro controller (μP-ROM-RAM) Keyboard- and LCD control	9-7
POWER	Power supply , Battery charger	9-8
MISCELLANEOUS	TL converter for LCD backlight RS232 Optical interface Slow- ADC Buzzer	9-9

All circuits, except the Liquid Crystal Display (LCD) unit and the KEYBOARD, are located on one Printed Circuit Board (PCB), called the MAIN PCB.

Many functions are incorporated in Application Specific Integrated Circuits (ASIC's). The ASIC's are referred to as C-ASIC (Channel ASIC), S-ASIC (Sampling ASIC), P-ASIC (Power ASIC), and D-ASIC (Digital ASIC).

### **Scope Channel A & B**

The Scope Channel A and Scope Channel B circuit are identical.

An input voltage connected to the BNC input is supplied to the C-ASIC LF and HF path. The C-ASIC converts (attenuates, amplifies) the input voltage to a normalized HF voltage and a normalized LF output current.

The floating HF output voltage is transferred to the non-floating S-ASIC HF input path via a transformer.

The floating LF output current drives an optocoupler LED via a transistor. The resulting non-floating optocoupler photodiode current is converted into a voltage by the S-ASIC LF input path. An additional phototransistor is used for feed back of a copy of the non-floating LF signal.

The S-ASIC HF and LF input circuits convert the HF input voltage and the LF input current to one normalized signal. The S-ASIC samples this signal, stores the samples in an analog way, and supplies the samples to the ADC.

The D-ASIC acquires the digital equivalents of the samples to process them and show them on the display as traces and readings.

The D-ASIC provides the SDAT and SCLK control signals for the C-ASIC, e.g. to select the required attenuation factor, via optocouplers.

The C-ASIC supply voltages are supplied via a transformer.

### **Meter/External Trigger Channel**

The input signal is connected to the banana jack inputs. The Meter/External trigger Channel has a limited bandwidth (about 10 kHz).

#### **Voltage measurements**

The input voltage is attenuated by a factor 4, 40, 400 or 4000. The attenuated voltages are supplied to a de-multiplexer. Depending on the selected range, one of the de-multiplexer input voltages is supplied to an amplifier that drives the current in the photodiode of an optocoupler. The optocoupler phototransistor is sensed by the S-ASIC LF path. An additional phototransistor is used for feed back of the optocoupler transfer characteristic.

The S-ASIC LF input circuit converts the input current to a normalized signal. The S-ASIC supplies this signal to the ADC.

#### **External triggering**

The S-ASIC can also use the transferred input voltage for triggering if External Triggering is selected.

#### **Resistance, continuity, and diode measurements**

A current source supplies a current to the banana jack inputs via the Ohms relay and a protection PTC. The voltage drop across the connected resistance or diode is supplied to the de-multiplexer via the Ohm buffer (attenuation factor 1 or 10). The de-multiplexer supplies the voltage to a x1.2 amplifier, which drives the current in the photodiode of an

optocoupler. From the measured voltage and supplied current the resistance value is calculated.

### **Control**

The D-ASIC provides the SDATEXT and SCLKEXT control signals for the de-multiplexer and relays via optocouplers.

### **Probe calibration**

By switching a current on and off, a 500 Hz square wave for probe calibration is generated.

### **Supply voltages**

To achieve floating inputs, the supply voltages are supplied via a transformer.

## **Sampling/Trigger**

The S-ASIC conditions the Channel A, Channel B circuit output signals, and samples them simultaneously at a maximum sample rate of 2.5 Giga Samples per second. The samples are stored in an internal analog memory array, and can be read out at a lower speed. The read out samples are supplied to the ADC's (ANAOUTA, ANAOUTB).

The Meter/External Trigger circuit output signal is conditioned, and directly supplied to the Channel B ADC (not sampled in the S-ASIC).

The S-ASIC also contains the trigger circuitry. Scope Channel A, Scope Channel B, and the Meter/External Trigger Channel can be selected as trigger source. For video triggering a video synchronization separator IC (VIDEO) is installed.

## **ADC's**

For the Channel A and Channel B signal an ADC is provided to convert the analog input signal into an 8-bit digital code. The Meter signal uses the Channel B ADC.

## **Digital Control**

The D-ASIC includes a micro processor, ADC sample acquisition logic, trigger processing logic, display and keyboard control logic, I/O ports, and various other logic circuits.

The instrument software is stored in the FlashROM, the RAM is used for temporary data storage as processed ADC samples (traces).

The digitized Input A, Channel B, and Meter/Ext Channel input signals are acquired from the ADC's, and processed by the D-ASIC.

The D-ASIC supplies control data and display data to the LCD module. The LCD module consists of the LCD, LCD drivers, and a Cold Cathode Fluorescent (CCFL) back light lamp. As the module is not repairable, no detailed description and diagrams are provided. The back light supply voltage is generated by the back light TL converter on the MISCELLANEOUS CIRCUITS part.

The keys of the keyboard are arranged in a matrix. The D-ASIC drives the rows and scans the matrix. The ON-OFF key is not included in the matrix, but is sensed by a logic circuit in the D-ASIC that is continuously powered.

The D-ASIC sends control data to the C-ASIC's via the SCLK and SDAT serial control lines. The SDATEXT and SCLKEXT lines supply the control data for the Meter/External Trigger Channel.

The D-ASIC controls the Slow-ADC. Via the Slow ADC it reads the battery temperature, -voltage, -current, and -type.

The D-ASIC includes a UART (Universal Asynchronous Receiver Transmitter) for serial communication via the serial interface (RS232) circuit.

## **Power**

The test tool can be powered by the BC190 Battery Charger/Power Adapter, or by the NiMH (Nickel Metal Hydride) battery pack.

If the power adapter voltage is present, it supplies the test tool power, and the battery charge current via the Charger circuit (VBAT voltage). The battery charge current is sensed, and controlled by the P-ASIC by changing the output current of the Charger circuit.

If the power adapter voltage is not present, the battery pack supplies the VBAT voltage.

The VBAT voltage supplies the P-ASIC power, and is also supplied to the Fly Back Converter (switched mode power supply).

If the test tool is turned on, the Fly Back Converter generates supply voltages for various test tool circuits. The Fly Back Converter is controlled by the P-ASIC.

The +3V3GAR supply voltage powers the D-ASIC, RAM, and FlashROM. If the test tool is turned off, the battery supplies the +3V3GAR voltage via the 3V3 Supply circuit. This circuit is controlled by the P-ASIC. So when the test tool is turned off, the D-ASIC can still control the battery charging process, the real time clock, the on/off key, and the serial RS232 interface (to turn the test tool on via the interface).

To monitor and control the battery charging process, the P-ASIC senses and buffers various battery signals, as temperature, voltage, and current. These signals are supplied to the Slow ADC to be measured by the D-ASIC. Using the results, the D-ASIC controls the battery charge current. The P-ASIC also contains circuits that can switch off the battery charging process if the charge conditions are not OK (e.g. temperature too high).

## **Miscellaneous**

### **Slow ADC**

Via the Slow ADC the following analog signals can be measured by the D-ASIC: battery voltage, battery type, battery temperature, and battery current. The signals are used for control purposes.

### **Back Light TL Converter**

The Back Light TL Converter generates the **400V !** supply voltage for the LCD fluorescent back light lamp. If the lamp is defective a 1.5 kV voltage can be present for 0.2 second maximum.

### **RS232 Optically Isolated Serial Interface**

Serial communication with a PC or printer is possible via the RS232 optically isolated interface.

The circuit converts the optical input signal (light or no-light) into a voltage which is supplied to the D-ASIC serial data input.

Serial data sent by the D-ASIC are converted into an optical signal (light or no-light).

### **Buzzer Circuit**

The buzzer circuit is controlled by a 4 kHz square wave from a D-ASIC output port.



### 3.3 Start-up Sequence, Operating Modes

The test tool sequences through the following steps when power is applied (see also Figure 3-2).

1. The P-ASIC is directly powered by the battery or power adapter voltage VBAT. Initially the Fly Back Converter is off, and the D-ASIC is powered by supply voltage +3V3GAR. The +3V3GAR voltage is derived from VBAT by the 3V3 Supply circuit.  
If the voltage +3V3GAR is below 3.05V, the P-ASIC signals this to the D-ASIC (VGARVAL line low), and the D-ASIC will not start up. The test tool is not working, and is in the **Idle mode**.
2. If the voltage +3V3GAR is above 3.05V, the P-ASIC makes the line VGARVAL high, and the D-ASIC will start up. The test tool is operative now. If it is powered by **batteries only, and not turned on**, it is in the **Off mode**. In this mode the D-ASIC is active: the real time clock runs, and the ON/OFF key is monitored to see if the test tool will be turned on.
3. If the **power adapter is connected** (P-ASIC output MAINVAL high), **and/or the test tool is turned on**, the embedded D-ASIC program, called mask software, starts up. The mask software checks if valid instrument software is present in the Flash ROM. If not, the test tool does not start up and the mask software continues running until the test tool is turned off, or the power is removed. This is called the **Mask active mode**. The mask active mode can also be entered by pressing the up (^) and right (>) arrow key when turning on the test tool.

If valid instrument software is present, one of the following modes will become active:

#### Charge mode

The Charge mode is entered when the test tool is **powered by the power adapter, and is turned off**. The Fly Back Converter is off. The Charger circuit charges the batteries.

#### Operational & Charge mode

The Operational & Charge mode is entered when the test tool is **powered by the power adapter, and is turned on**. The Fly Back Converter is on, the Charger circuit supplies its primary current. The batteries will be charged.

#### Operational mode

The Operational mode is entered when the test tool is **powered by batteries only, and is turned on**. The Fly Back Converter is on, the batteries supply its primary current. If the battery voltage (VBAT) drops below 4V when starting up the fly back converter, the Off mode is entered.

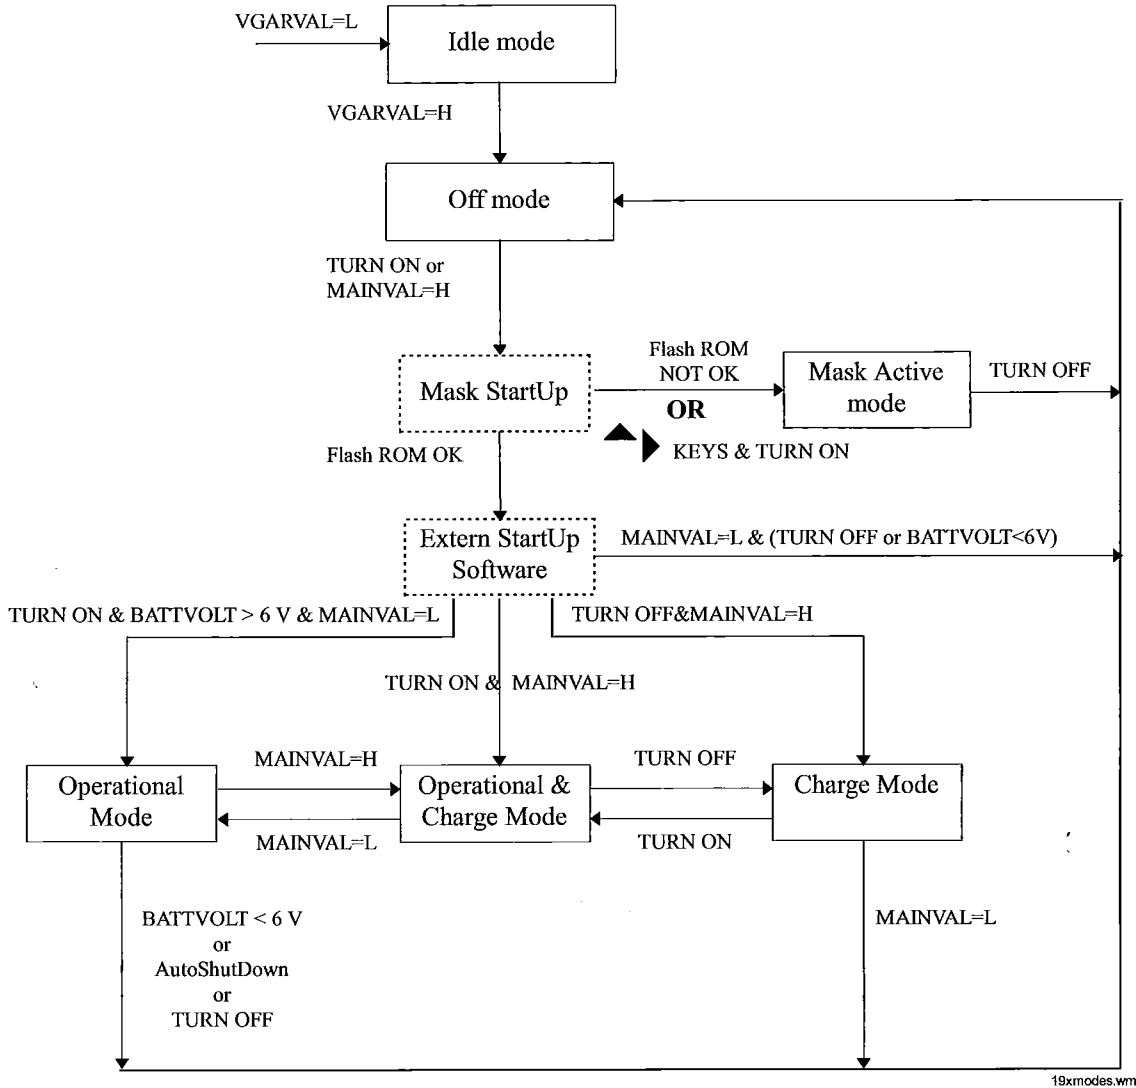


Figure 3-2. Fluke 192-196-199 Start-up Sequence, Operating Modes

Table 3-2 shows an overview of the test tool operating modes.

Table 3-2. Fluke 192-196-199 Operating Modes

Mode	Conditions	Remark
Idle mode	No power adapter and no battery	no activity
Off mode	No power adapter connected, battery installed, test tool off	P-ASIC & D-ASIC powered (VBAT & +3V3GAR).
Mask active mode	No valid instrument software, or ^ and > key pressed when turning on	Mask software runs
Charge mode	Power adapter connected and test tool off	Batteries will be charged
Operational & Charge mode	Power adapter connected and test tool on	Test tool operational, and batteries will be charged
Operational mode	No power adapter connected, battery installed, and test tool on	Test tool operational, powered by batteries

### 3.4 Detailed Circuit Descriptions

*Note:*

*Capacitors of 0 pF, and resistors of 100 MΩ shown in circuit diagrams are not placed on the PCA. They are drawn in the circuit diagrams for PCA layout purposes. In the layout design process they create locations on the PCA where capacitors or resistors can be placed.*

#### 3.4.1 Scope Channel A - Scope Channel B


See circuit diagrams Figure 9-1 and Figure 9-2.

As the Scope Channel A and B circuits are identical, a description is given for Scope Channel A only.

The Channel A/B circuitry is built-up around a C-ASIC OQ0260. The C-ASIC is placed directly behind the input BNC, and does the analog signal conditioning for the channel.

##### The C-ASIC OQ0260

Figure 3-3 shows the simplified block diagram of the OQ0260 C-ASIC. The C-ASIC consists of separate input paths for HF and LF signals, an output stage that drives separate HF and LF isolation facilities, and a control block that allows software control of all modes and adjustments. The transition frequency from the LF input path to the HF input path is approximately 10 kHz. The transition frequency of the HF and LF output signal is 25 kHz.

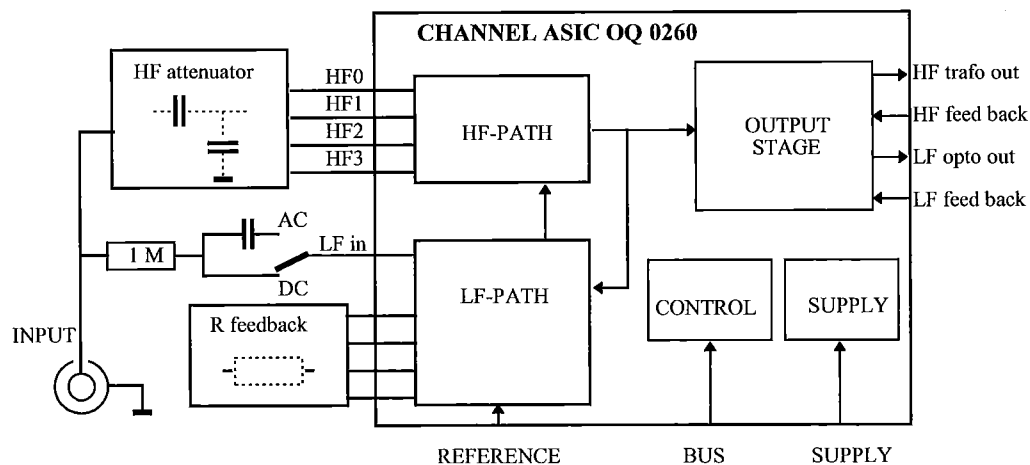

**Figure 3-3. C-ASIC OQ0260 Block Diagram**

##### LF input

The LF-input (pin 59) is connected to a LF decade attenuator consisting of an inverting amplifier with switchable external feedback resistors R1031 to R1034. Depending on the selected range the LF attenuation factor which will be set. The input of the LF attenuator is a virtual ground, which is connected to the BNC input via a 1 MΩ resistor (R1050...R1052). The LF decade output signal is supplied to a gain adjust stage, and then added to the HF path output signal. The resulting signal is supplied to the C-ASIC output stage.

The AC/DC input coupling relay K1000 is controlled by C-ASIC output ACDC (pin 61), and V1004. Resistor R1053 limits the discharge current of C1050 when switching from

AC coupled to DC coupled input. At AC coupled input, the maximum voltage across C1050 is limited by voltage divider:  
 $(10\text{ M}\Omega \text{ of } 10:1 \text{ probe if connected}) + R1050 + R1051 + R1052 / R1055 + R1056.$

**HF input**

The HF component of the input signal is connected to a HF decade attenuator via C1001-C1002 (:1) and C1003-C1004 (attenuated). The HF decade attenuator contains four separate current input amplifiers, which are connected to external capacitive dividers: HF0 (:1), HF1 (:10), HF2 (:100), HF3 (:1000). Only one amplifier is active at a time. Inputs of inactive input buffers are internally connected to ground to eliminate crosstalk. To control the DC bias of the buffers inputs, the LF output path voltage is fed back via resistors R1010, R1001, R1002, R1003, and R1004. To obtain a large HF gain filter R1000/C1000 eliminates HF feed back. The HF attenuator output voltage is supplied to a HF pre-amplifier with switchable gain factors, and then to a gain adjust stage. Finally the HF signal is added to the LF signal. The resulting signal is supplied to the C-ASIC output stage.

**Output Stage**

The output stage splits the combined HF/LF input signal into a LF and a HF part.

LF output signal

The LF output signal drives a current in the LED of an optocoupler (H1120) via transistor V1120 (output pin 30). For stability the V1120 emitter voltage is fed back to the LF output driver (CLED pin 28). The current in the optocoupler photodiode is converted into a voltage by R1136 and R1133. This voltage (LFA1, LFA2) is measured by a differential amplifier in the S-ASIC (see 3.4.3 Acquisition Section). A copy of the LF output signal is fed back to the C-ASIC to optimize the overall frequency response flatness and to optimize the LF path linearity. The current in the second optocoupler photodiode is converted into a voltage by R1123 and R1124. The voltage (pin 34 and 35) is measured by a differential amplifier in the C-ASIC. The output signal of the amplifier is fed back via filter R1122/C1125.

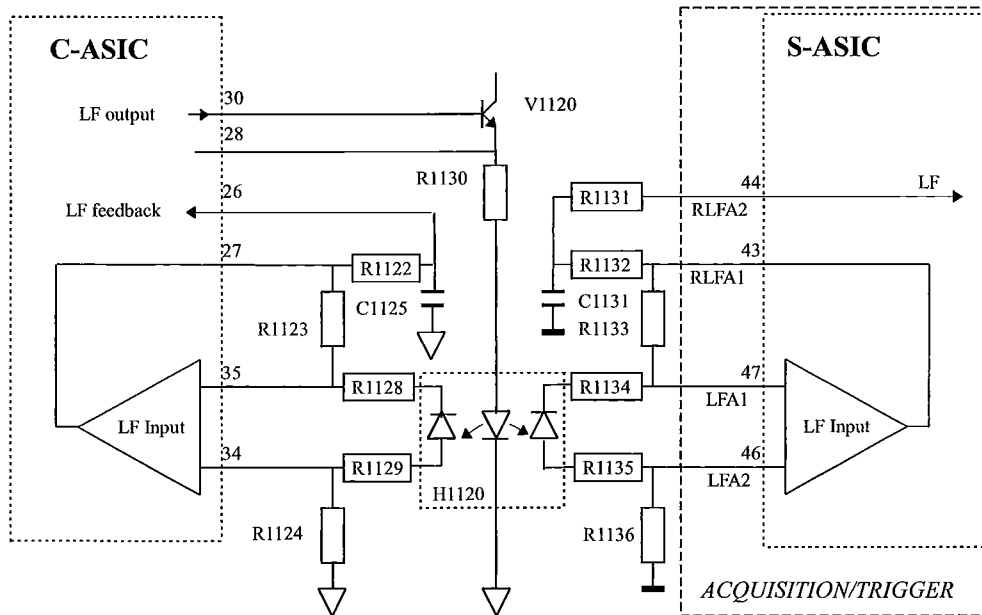


Figure 3-4. LF Floating to Non-Floating

al-float.wmf

HF output signal

The HF output signal supplies a voltage to the primary side of HF transformer T1100 (C-ASIC pin 40, 41). This voltage is proportional to the input voltage. The voltage at the secondary side of the transformer is referred to the non-floating ground level via R1110, R111, etc. The secondary voltage (HFA1, HFA2) is supplied to the sampling system S-ASIC (see 3.4.3 Acquisition Section ).

Any HF output DC offset is fed back to C-ASIC pin 32,33 to be eliminated. This prevents saturation and distortion in the HF transformer.

Feedback of the HF signal via C-ASIC pin 37, 38 minimizes the LF-HF turn over error.

Due to the parasitic capacitance between the primary and secondary transformer windings, large common mode input voltage steps can cause voltage spikes on the transformer lines. Diodes V1100...1105 will clamp these spikes to the supply voltage. Circuit V1106/C1112/R1112-R1116 limits the consequences of fast common mode voltage spikes caused by for example motor control systems.

**Calibration signals (PWMA, CALOUTA)**

The PWM output (pin 21) supplies a pulse width modulated square wave to filter/attenuator C1039-R1046-R1068-C1045. By changing the square wave duty cycle, a linear ramp is created for linearization during the pre-cal stage of the calibration. The ramp voltage (LINA) is supplied to pin 62 of the C-ASIC. The PWM output control pulses are supplied by the D-ASIC via the SDATFLT line to C-ASIC input pin 22 (FASDAT line).


The CALOUT output (pin 49) supplies a -0.5V or +0.5V voltage to the CALSIG input (pin 53) via R1065, R1049, and R1041 for dynamic (that is periodical during normal operation) gain calibration. The CALOUT voltage is derived from the 1.225V reference diode voltage VREFPA at pin 47.

**Control - Linearization**

Control information for the C-ASIC, for example selection of the attenuation factor, is sent via the SDATFLT data line. The SCLKFLT line provides the synchronization clock signal. Optocoupler H1150 transfers the non-floating control signals to the floating C-ASIC.

The SDATFLT line is controlled by the D-ASIC SDAT data line, or by the D-ASIC OFFSETAD line. The selection is made by D2000 on the Acquisition Section (see 3.4.3). The SDAT line provides the control data to change the C-ASIC settings. The OFFSETAD line provides a Pulse Width Modulated signal that is used for linearization of the C-ASIC during calibration.

The SCLKFLT line is controlled by the D-ASIC SCLK line.

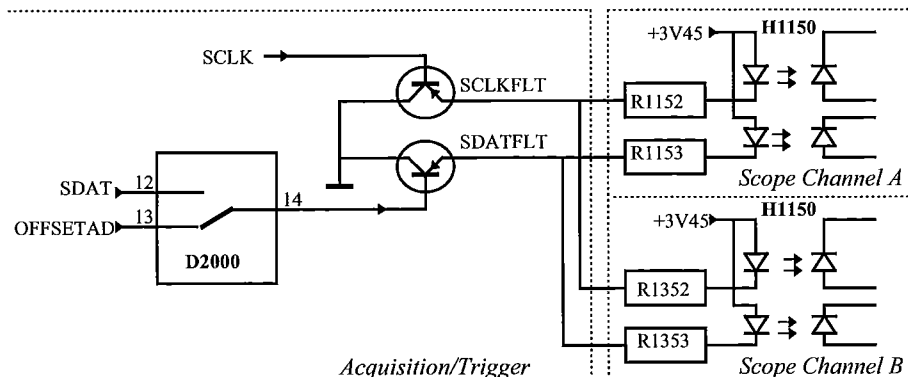

**Figure 3-5. C-ASIC Control Circuit**

### IREF

A 100  $\mu$ A reference current into pin 48 is derived via R1083 from reference diode voltage VREFPA (V1010) for biasing internal C-ASIC circuits.

### Supply Voltages

When the test tool is on, the Fly Back Converter on the POWER circuit supplies the primary voltage for supply transformer T1102. The floating secondary voltages are rectified, filtered, and supplied to the C-ASIC.

## 3.4.2 Meter/Ext Trigger Channel

See Figure 3-6. Meter/Ext Channel Block Diagram, and Circuit Diagram Figure 9-3.

The Meter/Ext Channel can measure voltages up to 1000V, resistance up to 30 M $\Omega$ , continuity, and diode voltage. It provides no trace but only readings, except in the Trendplot mode. The input is always DC coupled, and the channel has a limited bandwidth of 10 kHz. The Meter/Ext Channel input is floating with respect to Input A and Input B, and with respect to the power supply ground.

The channel can also be used as external trigger input, and as a probe cal generator.

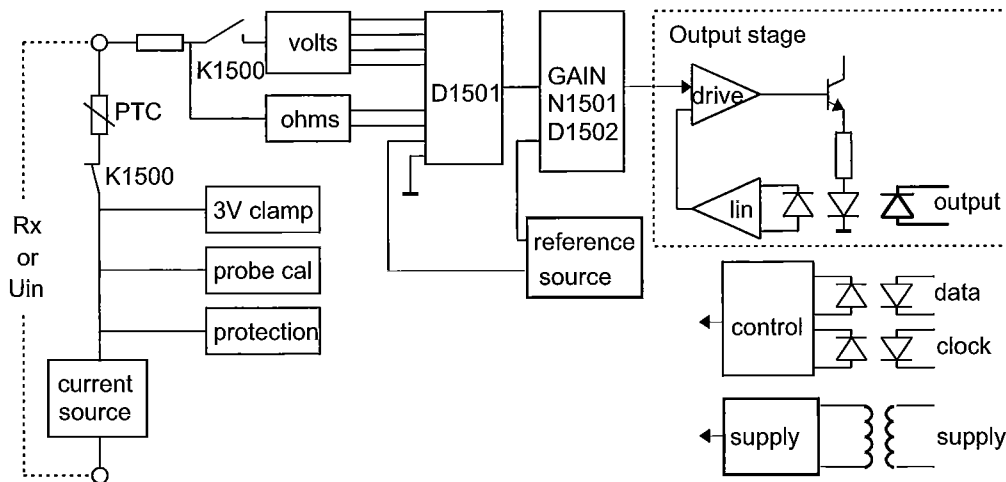


Figure 3-6. Meter/Ext Channel Block Diagram

fal-ex-bl.wmf

Section 7.5.7 provides a table that shows the control line status for all meter channel functions.

### Voltage Measurements

The input voltage  $U_{in}$  is applied to “volts” attenuation stage via K1500. This stage consist of opamp N1500 , switch D1500 and resistors R1504-R1507. Possible attenuation factors are :4 (R1504), :40 (R1505), :400 (R1506), and :4000 (R1507). Switch D1501 connects one of the attenuator outputs to the “gain” stage (D1501 pin 1,5,2,4), see below.

### Ohms/Continuity/Diode Measurements

A current source (see below) supplies a constant current to the unknown resistance  $R_x$  connected to the banana input. The current flows via K1500 and PTC resistor R1535. The voltage across the unknown resistor is supplied to the “ohms” buffer N1501 pin 3. The buffered voltage is supplied to D1501 pin 15 (for ranges up to 5 M $\Omega$ ). For the

30 M $\Omega$  range a :10 voltage is supplied to D1501 pin 14. Switch D1501 supplies the “ohms” voltage to the “gain” stage (see below).

In Ohms C1550 is connected to the current source via D1500 pin 13 to limit hum influences, specially in the 30 M $\Omega$  range

Continuity measurements and diode measurements use a current of 0.5 mA.

### External Triggering

In the External trigger mode the input signal is supplied to the output stage via K1500 pin 3-4, volts attenuator path :4 (R1504, trigger level 120 mV) and :40 (R1505, trigger level 1.2 V), and D1501 pin 1 to 3 or pin 5 to 3.

### Reference Source

A +250 mV reference voltage derived from diode V1550 is supplied to D1501 pin 13.

A -250 mV reference voltage is derived from V1550 via R1511-R1509, D1502 pin 14-3, and N1501.

During measuring, occasionally the reference voltage, and the ground (D1501 pin 12) are sensed for calibration.

The -250 mV reference is also added to the Ohms voltage via the gain stage, see “gain stage”.

### Gain Stage

The gain stage consists of opamp N1501, switch D1502, and R1508-R1512. It provides:

- a x1 gain for diode measurements, zero calibration, positive reference voltage measurement (internal calibration), and probe calibration (D1502 pin 3 to 1,2,4,5).
- a gain factor x2 in the Volts mode (D1502 pin 3 to pin 13)
- a gain factor 1.2 for the Ohms voltage plus an offset voltage of -0.25 V (D1502 pin 3 to pin 14). By adding the negative offset, a large (line) interference voltage does not cause the hardware to clamp. The software will “filter” the interference voltage.
- a gain factor 6 in the External trigger mode.

### Output Stage

The voltage at N1501 pin 7 controls the current in the H1525 LED via opamp N1525 and transistor V1525. Via H1525 pin 5-6 the signal is transferred to the S-ASIC LF input (LFEXT1, LFEXT2). The operation is identical to the Input A LF input (see 3.4.1). Feedback of the LF signal via diode H1525 pin 3-4 and N1502 provides good linearity. The clamp circuit N1515 and related parts limit the output voltage to + or - 150 mV. This prevents the S-ASIC and ADC from being overloaded.

### Current Source

Reference diode V1555 provides a 1.2 V reference voltage compared to +5VEXT.

For the 50 nA current (Ohms ranges 5 M $\Omega$  and 50 M $\Omega$ ), the switches in D1560 are all open. In this case the reference voltage is lowered by a factor 10 by R1556-R1557. The 50 nA current flows via R1558+R1559 and FET V1560 to the input terminal X1000. The voltage drop across R1558+R1559 is fed back via R1560 to the inverting input of N1540.

For the higher currents the switches in D1560 are closed in pairs. For the 0.5 mA current D1560 pin 3 is connected to pin 1, and pin 13 is connected to 12. Now R1560 is shorted. The 0.5 mA current flows from +5VEXT, via R1561, D1560, and FET V1560 to the

input terminal X1000. The voltage drop across R1561 is fed back to N1540 pin 6. The other currents can be set by connecting resistors R1562 (500  $\mu$ A), R1563 (50  $\mu$ A), and R1564+R1565+R1565 (5  $\mu$ A).

### **Ohms Input Protection and Clamp**

When a voltage is applied to the input in the Ohms function V1535, V1536 and V1537 will limit the voltage on the current source. The resulting current is limited by PTC resistor R1535. Under normal conditions the voltage across V1535-V1536 is made zero by buffer amplifier N1540; this prevents measurement errors due to leakage.

The “open input” voltage is limited to about 4 V by FET V1544. The V1544 gate is set to 3 V by N1541 output pin 1. The FET acts as a low leakage diode.

### **Probe Calibration Output**

For DC probe calibration the current source supplies 0.5 mA to R1544 via D1500 pin 13 to pin 12. The resulting 3.1 V is supplied to the red banana input terminal. The voltage is measured by the Meter channel via the Ohms circuit N1501, D1501 pin 14 to 3, etc. The voltage is also measured via the connected probe by Scope channel A or B. From the two measured values a probe correction factor is calculated and applied.

For AC probe adjustment D1572, R1538 and C1538 generate a 1 kHz square wave voltage on D1572 pin 11. This voltage alternately connects D1500 pin 13 to pin 14 (ground) and pin 12 (R1544). The 0.5 mA current will now result in a 1 kHz 3 V square wave on the red banana input terminal.

### **Control**

Control data and clock signal are supplied to optocoupler H1580 by the D-ASIC (pin 99-100) via the SDATEXT data line and the SCLKEXT clock line. The output data and clock are supplied to pulse shapers D1572. Data are shifted into registers D1570 and D1571 on CLK0 (D1572 pin 3). After the last data bit has been shifted into the register, the clock signal CLK (H1501 pin 7) is kept low. Now the shift register strobe input signal ENA (D1572 pin 6) goes high and the data appear at the outputs.

### **Supply Voltages**

The supply voltages are provided by the Fly Back Converter on the POWER circuit via transformer T1575

## **3.4.3 Sampling & Triggering (S-ASIC)**

See circuit diagram Figure 9-4.

The core of the Sampling & Triggering section is the S-ASIC. This ASIC includes a signal path and a trigger path.

### **Signal path**

See Figure 3-7. S-ASIC signal path block diagram and Figure 3-8. S-ASIC Input Circuit.



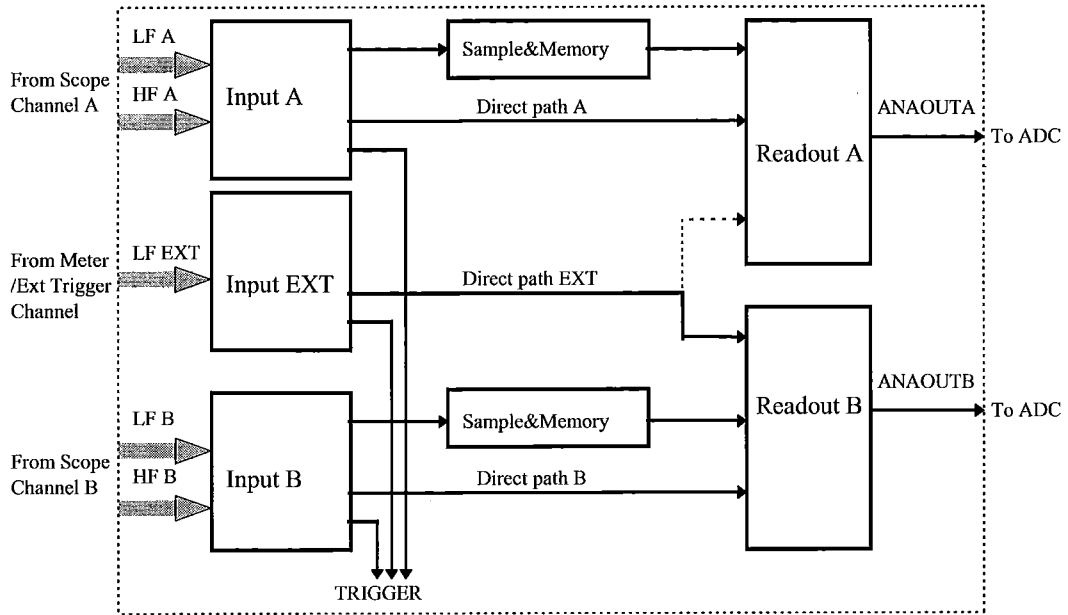


Figure 3-7. S-ASIC signal path block diagram

The S-ASIC has the analog input circuits:

1. Input A, for the Scope Channel A HF and LF signals
2. Input B, for the Scope Channel B HF and LF signals
3. Input EXT for the Meter/External Trigger Channel LF signal

The three analog input circuits are identical, except the input EXT circuit that has no HF input. These circuits convert the LF current input signal and the HF voltage input signal into one combined HF+LF signal.

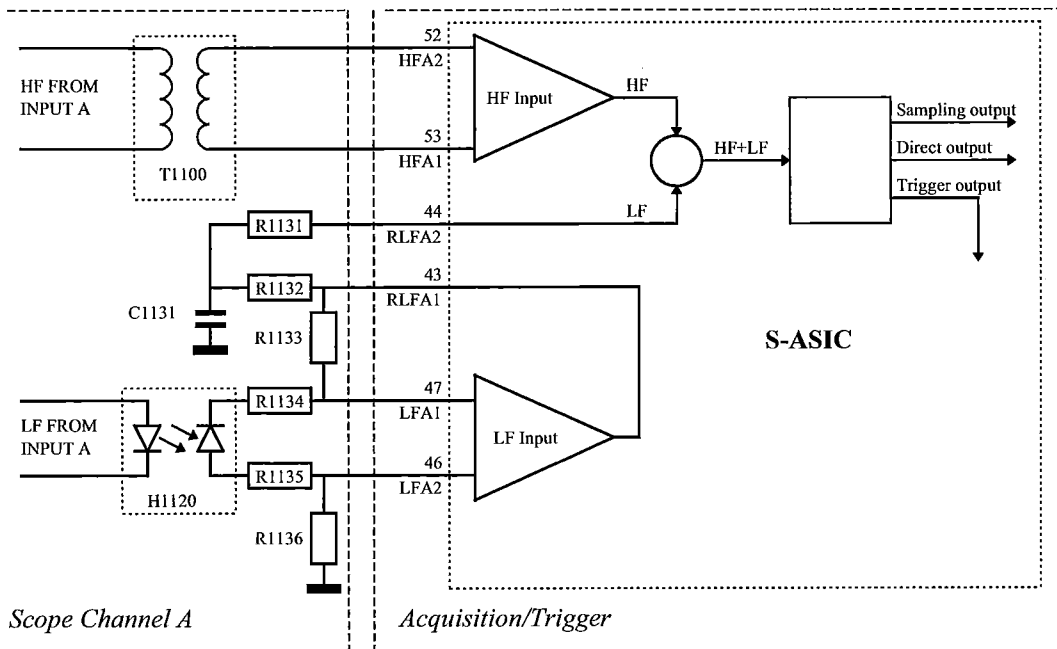


Figure 3-8. S-ASIC Input Circuit

The LF output from the Channel A circuit (see section 3.4.1) controls the current in the LED of H1120. The resulting current in the H1120 photodiode is 5  $\mu\text{A}/\text{div.}$ , and is converted into a voltage by R1136 and R1133. This voltage (LFA1, LFA2) is measured by a differential amplifier in the S-ASIC. The output signal RLFA1 is supplied to the LF/HF adding point via filter R1132/C1131. For the Meter/Ext input the photodiode (H1525) current is 2.5  $\mu\text{A}/\text{div.}$

The HF output from the input A circuit is supplied to transformer T1100. The secondary transformer voltage is 30 mV/div, and supplied to a differential voltage input of the S-ASIC (HFA1, HFA2) .

The S-ASIC input circuits provide three types of output signals to other internal S-ASIC circuits:

- A current output for the Sample&Memory circuits (not for the Input EXT circuit)
- A voltage output routed directly to the Readout circuit (Direct Path)
- A voltage output for triggering (see Trigger Path below).

### **Sample&Memory**

The current output signal supplied to the Sample&Memory circuit represents the measurement signal. The Sample&Memory circuit can operate in two modes, the TCM (Time Conversion Mode) and the WARS (Write And Read Simultaneously) mode.

In time base settings 2  $\mu\text{s}/\text{div}$  and faster, the TCM is active. The circuit samples the Input A(B) circuit output current using a high speed current switch. The current samples are converted into voltages by loading various memory capacitors with a current sample. Up to 3000 input signal samples can be stored at a maximum sample rate of  $2.5 \times 10^6$  samples per second. The sampling clock is generated in the S-ASIC PLL (Phase Locked Loop). The PLL is synchronized with the external crystal B2000. The Readout circuit can output the memory capacitor voltages one after another at a lower speed.

In time base setting slower than 2  $\mu\text{s}/\text{div}$  the WARS mode is active. The Input A(B) circuit output signal is sampled at a speed of 20 MS/s (MegaSamples per second). The samples are directly available on the sample and memory output.

### **Direct path**

The Direct Path voltage output supplies the combined HF-LF signal directly to the Readout circuit. The Input A and Input B direct path monitors the input signal. The monitored signal is not given as a measurement result, but is used for control purposes as for example autoranging.

### **Readout circuits**

The input EXT direct path uses the Readout B circuit..

Low temperature coefficient resistors R2050 and R2034 are connected to the S-ASIC Readout stage to obtain a temperature independent current-to-voltage conversion.

The output voltages of the Readout circuits (pin 2 ANAOUTA, pin 119 ANAOUTB) are supplied to an ADC at an output rate of maximal 20 MS/s (CLKJILL to pin 133, see below CLOCK Signals).

The REFADCT and RWEFADCB reference voltages are supplied to the top and the bottom of the ADC resistor ladders.

To improve the METER accuracy in the WARS mode, a generator in the S-ASIC adds a dither voltage to the measurement signal. Control signals for the generator are

RAMPCLK (pin 131) and RSTRAMP (pin 129).  
 The METER/EXT channel uses the same ADC as the Scope Channel B.

### Trigger Path

See Figure 3-9. Trigger Circuit for the functional block diagram of the trigger circuit.

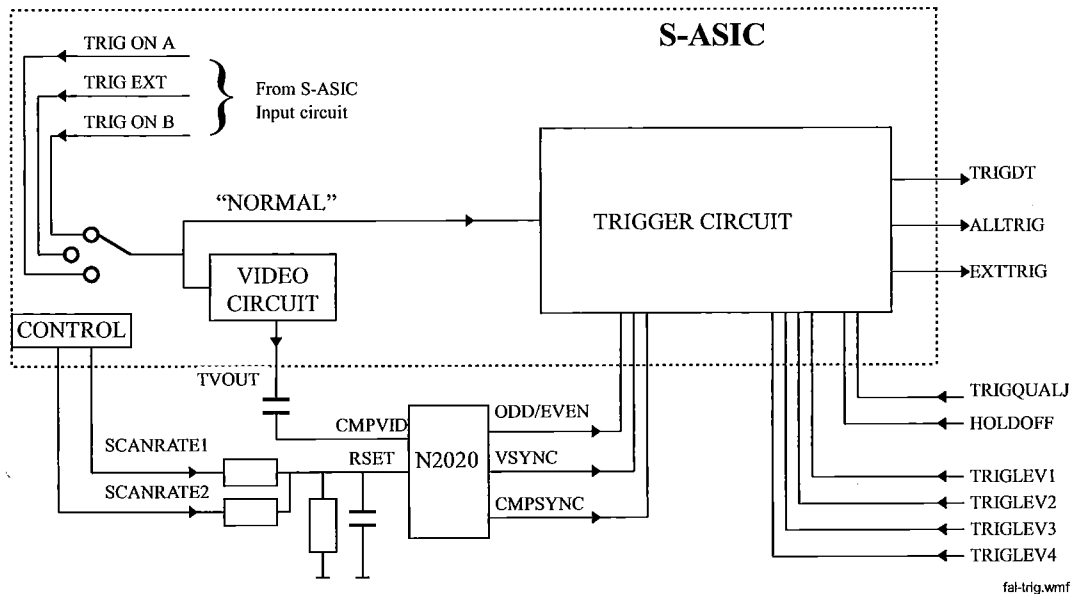


Figure 3-9. Trigger Circuit

Depending on the test tool trigger source setting, one of the S-ASIC Input Circuit trigger output signals TRIGEXT, TRIGONB or TRIGONA is supplied to the S-ASIC trigger circuit.

For VIDEO triggering, the trigger signal (composite video) is supplied to the VIDEO CIRCUIT that removes chroma and video information. The output is supplied to the Video Sync separator IC N2020. This IC extracts timing information from the composite sync signal. Used output signals are Odd/Even field, Composite Sync, and Vertical Sync. By changing the current level at the RSET input, the N2020 can be adjusted for video signals with line scan frequencies from 15.625 Hz to 15.750 kHz. For this purpose, the lines SCANRATE1 and SCANRATE2 can be floating or be connected to ground by the CONTROL circuit. The output signals are supplied to the S-ASIC trigger circuit. In the Fluke 192/196/199 only Input A provides Video triggering.

For "NORMAL" triggering, one of the signals TRIGEXT, TRIGONB or TRIGONA is directly supplied to the trigger circuit.

The trigger circuit has two trigger input circuits (TRIGLEVA and TRIGLEVB) that each can compare the input signal to the set trigger levels (TRIGLEV1A-TRIGLEV2A, and TRIGLEV1B-TRIGLEV2B4). The TRIGLEVB circuit is not active in the Fluke19x test tools. The analog trigger level voltages are supplied by the D-ASIC by means of filtered PWM (Pulse Width Modulated) signals. Each trigger input circuit generates a trigger signal if the input signal crosses the trigger levels.

To prevent triggering on noisy signals a large trigger gap can be created by setting the two trigger levels of each trigger input circuit.

The trigger circuit provides three output signals:

- ALLTRIG includes all triggers (all trigger level crossings).

- TRIGDT gives the final acquisition trigger for the D-ASIC in WARS mode, and is not used in TCM mode.  
TRIGDT can be a qualified trigger, for example at Scope Pulse Triggering with trigger condition >T (e.g. > 10 ms), TRIGDT gives a trigger pulse if the input pulse meets the condition > 10 ms; TRIGDT can also be equal to the ALLTRIG signal.
- EXTTRIG is used to supply an odd/even field indication for video triggering to the D-ASIC. In normal trigger mode EXTTRIG can be used for triggering on a time slot. The EXTTRIG output is supplied to the Slow ADC via R2036 for test purposes.

Control signals for the trigger circuit are:

- HOLDOFF releases the trigger system. It goes low if the acquisition system is able to validate new triggers. HOLDOFF is supplied by the D-ASIC (pin 13).
- TRIGQUALJ qualifies (conditions) the trigger to be supplied to the TRIGDT output. For example at video triggering on line n, the ALLTRIG triggers are counted down and only trigger n is passed to the TRIGDT output.  
The TRIGQUALJ signal is supplied by the trigger qualifier circuit D3202-D3203, see circuit diagram Figure 9-6. The circuit qualifies triggers in the Trigger on Pulse Width mode for short pulses (< 300 ns). Without this circuit the system is unable to qualify short pulses due to (software) processing time.  
If the ENSHPULS line is low, the TRIGQUAL signal is directly routed to the TRIGQUALJ output. If the ENSHPULS line is high, the circuit generates a new trigger qualifier signal TRIGQUALJ.

### **RAMP**

The RSTRAMP and RAMPCLK control a dither signal generator. The output signal of this generator is used to improve the measuring accuracy.

### **Control (data/address buffer)**

Via the buffered address/data bus (D2001, D2002) the D-ASIC can program the S-ASIC as required by the firmware.

The Read and Write control signals are derived from the CSB, ROMREAD and ROMWRITE signals supplied by the D-ASIC.

### **CLOCK Signals**

Crystal B2000 provides the clock signal for the TCM mode (high sample rate).

The 20 MHz CLKJILL clock signal (pin 133) is used for readout of the samples, and is synchronized with the external ADC-CHANNEL-A/ADC-CHANNEL-B clock via the CLOCK KILLER circuit (circuit diagram Figure 9-6). The CLOCK KILLER circuits disables the CLKJILL clock signal during a high sample rate acquisition in the S-ASIC TCM mode. This prevents the input signal samples from being influenced by the CLKJILL signal.

### **Control data for C-ASIC's (D2000, V2000, V2001)**

See sub-section "Control" of section 3.4.1 for a description of the SCLKFLT and SDATFLT lines. Signal LINTAB, supplied by the D-ASIC, controls whether D2000 input pin 12 or 13 is connected to output pin 14.

### **Meter Channel linearization (D2000, N2000)**

If the D-ASIC makes line LINTAB (D2000 pin 9,10,11) high, D2000 pin 1 and 15 are interconnected, and D2000 pin 3 and 4 are interconnected. The D-ASIC PWM output

signal OFFSETAD is supplied to integrating amplifier N2000. Via D200 pin 3-4, the resulting analog output voltage is supplied to the S-ASIC Meter/Ext channel input (N2001 pin 59 LFEXT2). This voltage is used for linearization of the Meter channel during calibration.

#### **3.4.4 S-ASIC supply**

See circuit diagram Figure 9-5.

The S-ASIC supply section provides mutually decoupled supply voltages for the various circuits in the S-ASIC.

The supply voltages V1P5TOA (pin 17) and V1P5TOB (pin 95) influence the offset voltage of the output signal in TCM mode (time base 2  $\mu$ s or faster, see preceding section "Sample&Memory"). They are derived from the REFADCT voltage, and from PWM controlled voltages supplied by the D-ASIC. The voltages are set to such a value that the offset difference between TCM mode and WARS mode is zero. If the offset difference is not eliminated, AUTORANGE and OL (OverLoad) indication will not function correctly.

#### **3.4.5 ADC's**

See circuit diagram Figure 9-6.

The S-ASIC output voltages are supplied to ADC Channel A and ADC Channel B. The Meter/External Trigger channel uses the ADC Channel B. The ADC's sample the analog voltages, and converts them into 8-bit data bytes (D0-D7). The sample rate is 20 MHz (sample clock SMPCLK on pin 24). The output data are read and processed by the D-ASIC on the Digital Control section..

The reference voltages REFADCT and REFADCB determine the input voltage swing that corresponds to an output data swing of 00000000 to 11111111 (D0-D7). These reference voltages are supplied by the S-ASIC.

Current IREF is supplied to pin 7 of the ADC's via R3000/R3100/R3200 for biasing internal ADC circuits.

For the CLOCK KILLER circuit (D3200, D3201) see section 3.4.3, sub section "CLOCK Signals".

For the TRIGGER QUALIFIER circuit (D3202, D3203) see section 3.4.3, sub section "Trigger Path".

#### **3.4.6 Digital Control**

See circuit diagram Figure 9-7.

The Digital circuit is built up around the D-ASIC MOT0002. It provides the following functions:

- ADC data acquisition and processing for traces and numerical readings
- Trigger processing
- Microprocessor, Flash EPROM and RAM control
- Display control
- Keyboard control, ON/OFF control

- Miscellaneous functions, as PWM signal generation, SDA-SCL serial data control, probe detection, Slow ADC control, serial RS232 interface control, buzzer control, etc.

### **+3V3GAR, VGARVAL**

The D-ASIC is permanently powered by the +3V3GAR voltage supplied by the Power Circuit. The P-ASIC indicates the status of the +3V3GAR voltage via the VGARVAL line connected to D-ASIC pin 89. If +3V3GAR is >3V, VGARVAL is high, and the D-ASIC will start-up. As a result D-ASIC functions are operative regardless of the test tool ON/OFF status.

### **ADC data acquisition**

The test tool software starts an acquisition cycle. The D-ASIC acquires the sample data from the ADC, and stores them internally in a cyclic Fast Acquisition Memory (FAM). A separate MIN/MAX Fast Acquisition Memory stores the samples with the highest and lowest value. From the FAMs the required ADC data are moved to RAM D3502 and D3503. The ADC data stored in the RAM are processed and represented as traces and readings via a display generator circuit. Data can also be output via the UART to the optical interface .

### **Triggering**

The D-ASIC controls and processes the trigger signals HOLDOFF, TRIGDT, ALLTRIG, TRIGQUAL. See 3.4.4, sub section Trigger Path for a description of the signals.

### **Microprocessor, ROM and RAM control, mask ROM**

The D-ASIC includes a microprocessor with a 16 bit data bus.

The instrument software is loaded in a 16 Mb Flash ROM D3501. The D-ASIC output ROMRST is high during normal operation.

Measurement data and instrument settings are stored in RAM D3502 and D3503. All RAM data will be lost if all power sources (battery and power adapter) are removed.

The D-ASIC has on-chip mask ROM. If no valid Flash ROM software is present when the test tool is turned on, the mask ROM software will become active. The test tool can be forced to stay in the mask ROM software by pressing and holding the ^ and > key, and then turning the test tool on. When active, the mask ROM software generates a 100 kHz square wave on pin 59 of the D-ASIC.

### **Display Control**


The displayed screen consists of:

- information that is captured by the acquisition system, and is then processed and displayed (e.g. traces and numerical readings). This information is stored in RAM.
- information that is permanently stored in the test tool FlashROM memory, so called bitplanes (e.g. grids).

The LCD unit includes the LCD, LCD drivers, backplane voltage sources, and the fluorescent back light lamp. The unit is connected to the main board via connector X3501.

The LCD is built up of 240 columns of 240 pixels each. The pixel pitch is 0.44x0.33 mm, which results in a landscape oriented display.

The D-ASIC supplies the data and control signals for the LCD drivers on the LCD unit (Figure 3-10).

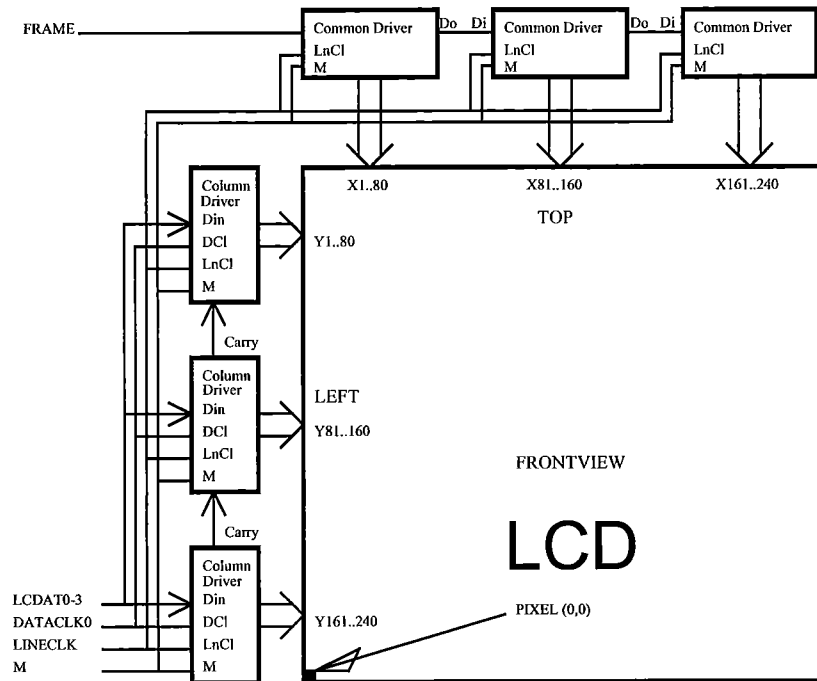

**Figure 3-10. LCD Control**


Each 14 ms the LCD picture is refreshed during a frame. The frame pulse (FRAME) indicates that the concurrent LINECLK pulse is for the first column. The column drivers must have been filled with data for the first column. Data nibbles (4 bit) are supplied via lines LCDAT0-LCDAT3. During 20 data clock pulses (DATACLK0) the driver for Y161..240 is filled. When it is full, it generates a carry to enable the driver above it, which is filled now. When a column is full, the LINECLK signal transfers the data to the column driver outputs. Via the common drivers, the LINECLK also selects the next column to be filled. So after 240 column clocks a full screen image is built up on the LCD.

The LCD unit generates various voltage levels for the LCD drivers outputs to drive the LCD. The various levels are supplied to the driver outputs, depending on the supplied data and the M(ultiplex) signal. The M signal (back plane modulation) is used by the LCD drivers to supply the various DC voltages in such an order, that the average voltage does not contain a DC component. A DC component in the LCD drive voltage may cause memory effects in the LCD.

The LCD contrast is controlled by the CONTRAST voltage. This voltage is controlled by the D-ASIC, which supplies a PWM signal (pin 37 CONTR-D) to PWM filter R3311/C3310. The voltage REFPWM1 is used as bias voltage for the contrast adjustment circuit on the LCD unit.

#### **Keyboard Control, ON/OFF Control**

The keys are arranged in a 6 rows x 6 columns matrix. The D-ASIC drives the rows, and senses the columns, see Figure 3-11. Initially the ROW lines are low, the column lines are high via a pull-up resistance in the D-ASIC. If a key is pressed a column line goes low, and causes an interrupt. Then the D-ASIC supplies pulses to the sequential ROW lines, and senses the column lines to detect which key is pressed.

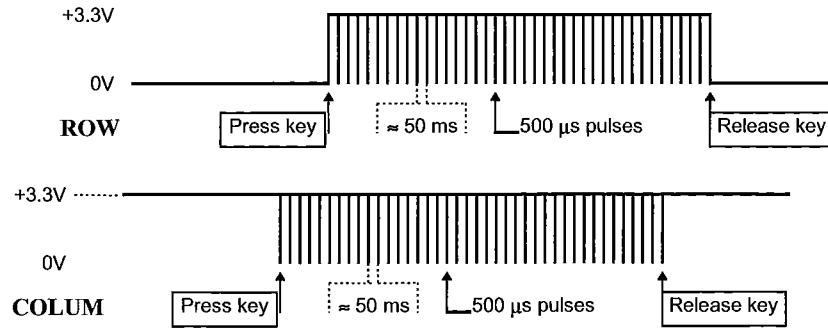

**Figure 3-11. Keyboard Control Signals**

The ON/OFF key is not included in the matrix. This key toggles a flip-flop in the D-ASIC via the ONKEY line (D-ASIC pin 72). As the D-ASIC is permanently powered by +3V3VGAR, the flip-flop can signal the test tool on/off status.

**PWM Signals**

The D-ASIC generates various pulse signals, by switching a reference voltage (REFPWM1 or REFPWM2) with software controllable duty cycle (PWMA, PWMB pins 26-40). By filtering the pulses in low pass filters (RC), software controlled DC voltages are generated. The voltages are used for various control purposes, see Table 3-3.

**Table 3-3. D-ASIC PWM Signals**

PWM signal	Function	Destination	Reference
TRGLEV1AD, TRIGLEV2AD TRGLEV1BD, TRIGLEV2BD	Trigger level control	S-ASIC	REFPWM1
OFFSETAD	Meter/Ext linearization	D2000 (Acquisition/Trigger)	REFPWM1
BACKBRIG	Back light brightness control	Back light converter	REFPWM1
CONTR-D	Display contrast control	LCD unit	REFPWM1
SADCLEVD	Slow ADC comparator voltage	SLOW ADC	REFPWM2
CHARCURD	Battery charge current control	P-ASIC	REFPWM2

**Serial Bus SDA/SCL - SDATEXT/SCLKEXT**

The SDA line pin 57 is used to send control data to the C-ASIC's via the control circuit D2000/V2000/V2001 on Acquisition/Trigger. The SCL line pin 56 transmits the 1.25 MHz synchronization clock. The LINTAB signal (pin 103) controls D2000.

The SDATEXT line pin 99 used to send control data to the Meter/External Trigger channel. The SCLKEXT line pin 100 transmits the synchronization clock.

**TXD, RXD Optical RS232 interface**

The optical interface output LED is directly connected to the TXD line (pin 86). The optical input line is buffered by the P-ASIC on the Power Circuit. The buffered line is supplied to the RXD input (pin 87). The serial data communication (RS232) is



controlled by the D-ASIC. See also 3.4.8 Miscellaneous Circuits: Optical RS232 Interface.

#### **Slow ADC Control, SADC Bus**

The SELMUX0-2 outputs (pins 96-98) and SLOWADC input (pin 54) lines are used for control of the Slow ADC. See 3.4.8 Miscellaneous Circuits: Slow ADC.

#### **BATIDENT**

The BATTIDENT line (pin 90) is connected to R4100 on the Power Circuit, and to a resistor in the battery pack. The voltage level indicates the installed battery type. If the battery is removed, the BATTIDENT line goes high.

#### **MAINVAL, FREQPS**

The MAINVAL signal (pin91) is supplied by the P-ASIC, and indicates the presence of the power adapter voltage (high = present).

The FREQPS signal (pin 93) controls the Fly Back Converter FET switch on the Power Circuit. The D-ASIC measures the frequency in order to detect if the Fly Back Converter is running within specified frequency limits.

#### **D-ASIC Clocks**

A 32 kHz oscillator runs if the 3V3GAR supply voltage is present, so if any power source is present (crystal B3500). The clock activates Power On/Off control circuit, and the real time clock (time and date).

A 20 MHz oscillator runs if the test tool is ON, and/or if the power adapter voltage is present (crystal B3502).

A 16 MHz oscillator becomes active only when the test tool is turned on (crystal B3501).

#### **Buzzer**

The Buzzer signal controls the buzzer circuit. See 3.4.8 Miscellaneous Circuits: Buzzer.

### 3.4.7 Power

See circuit diagram Figure 9-8.

#### Power Sources , Operating Modes

Figure 3-12 shows a simplified diagram of the power supply and battery charger circuit.

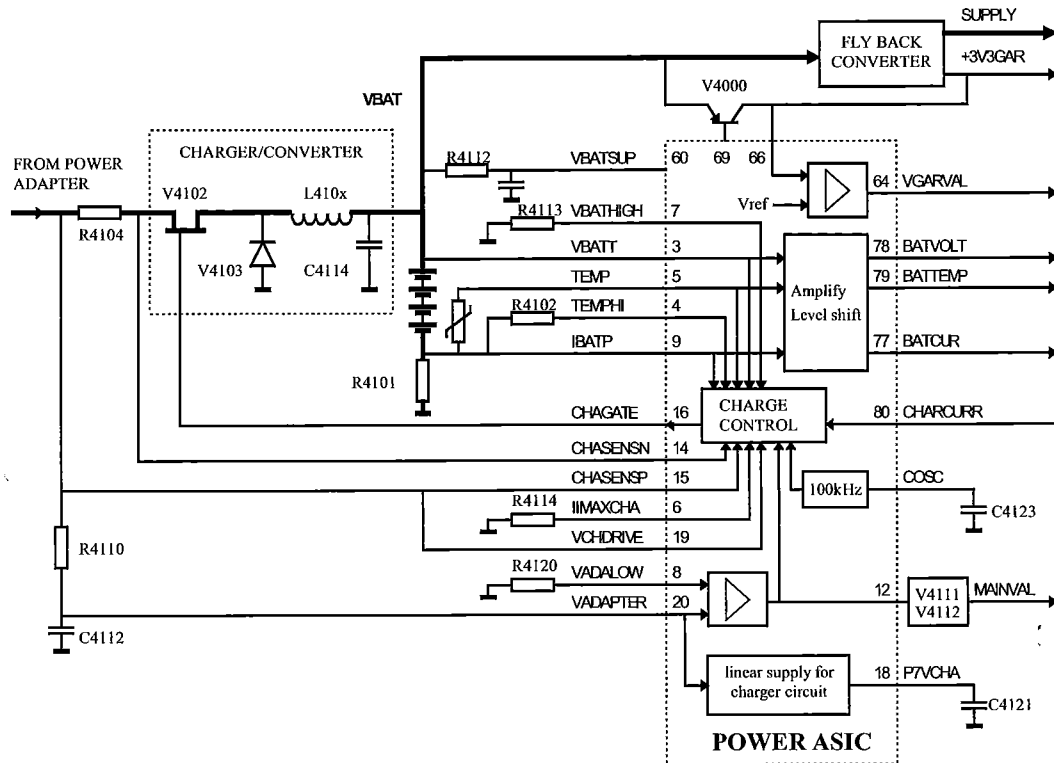


Figure 3-12. Power Supply Block Diagram

As described in Section 3.3 the test tool operating mode depends on the connected power source.

The voltage VBAT is supplied either by the power adapter via V4102/L410x, or by the battery pack. It powers a part of the P-ASIC via R4112 to pin 60 (VBATSUP). If the test tool is off, the Fly Back Converter is off, and VBAT powers the D-ASIC via transistor V4000 (+3V3GAR). This +3V3GAR voltage is controlled and sensed by the P-ASIC. If it is NOT OK ( $<3.05V$ ), the output VGARVAL (pin 64) is low. The VGARVAL line is connected to the D-ASIC, and if the line is low, the D-ASIC is inactive; the test tool is in the **Idle mode**. A low VGARVAL line operates as a reset for the D-ASIC.

If VGARVAL is high ( $+3V3GAR > 3.05V$ ), the D-ASIC becomes active, and the **Off mode** is entered. The D-ASIC monitors the P-ASIC output pin 12 MAINVAL, and the test tool ON/OFF status. By pressing the ON/OFF key, a bit in the D-ASIC, indicating the test tool ON/OFF status is toggled. If neither a correct power adapter voltage is supplied (MAINVAL is low), nor the test tool is turned on, the **Off mode** will be maintained.

If a correct power adapter voltage is supplied (MAINVAL high), or if the test tool is turned on, the mask software starts up. The mask software checks if valid instrument software is present. If not, e.g. no instrument firmware is loaded, the mask software will keep running, and the test tool is not operative: the test tool is in the **Mask active** state.

For test purposes the mask active mode can also be entered by pressing the ^ and > key when the test tool is turned on.

If valid software is present, one of the three modes **Operational**, **Operational & Charge** or **Charge** will become active. The Charger/Converter circuit is active in the Operational & Charge and in the Charge mode. The Fly back converter is active in the Operational and in the Operational & Charge mode.

#### **Charger/Converter** (See Figure 3-12.)

The power adapter powers the Charge Control circuit in the P-ASIC via an internal linear regulator. The power adapter voltage is applied to R4104. The Charger/Converter circuit controls the battery charge current. If a charged battery pack is installed, the nominal VBAT is 7.2 V (up to 9 V). If no battery pack is installed, VBAT is about 11 V. The voltage VBAT is supplied to the battery pack, to the P-ASIC, to the Fly Back Converter, and to transistor V4000. The FET control signal CHAGATE is a 100 kHz square wave voltage with a variable duty cycle, supplied by the P-ASIC Control circuit. The duty cycle determines the amount of energy loaded into L410x/C4114. By controlling the voltage VBAT, the battery charge current can be controlled. The various test tool circuits are supplied by the Fly Back Converter, and/or V4000.

#### **Required power adapter voltage**

The P-ASIC supplies a current to reference resistor R4120 (VADALOW pin 8). It compares the voltage on R4120 to the power adapter voltage VADAPTER on pin 20 (supplied via R4110, and attenuated in the P-ASIC). If the power adapter voltage is below 14 V, the P-ASIC output pin 12, and the line MAINVAL, are low. This signal on pin 12 is also supplied to the P-ASIC internal control circuit, which then makes the CHAGATE signal high. As a result FET V4102 becomes non-conductive, and the Charger/Converter is off.

#### **Battery charge current**

The actual charge current is sensed via resistor R4101, and filter R4103-C4102, on pin 9 of the P-ASIC (IBATP). The sense voltage is supplied to the control circuit in the P-ASIC. The required charge current information is supplied by the D-ASIC via the CHARCUR line and filter R4121-C4122 to pin 80. A control loop in the control circuit adjusts the actual charge current to the required value.

Depending on the required charge current the filtered CHARCUR voltage range on pin 80 is:

- 0 V for a 1 A charge current.
- 1.75 V for a 0.35 A charge current
- 2.5 V for a 0.09 A charge current
- 2.6 V for a 0.06 A charge current
- 2.7 V for no charge current (0 A), for example if the battery temperature limit is exceeded (>50 °C)
- > 3 Volt if the charger converter is off (V4102 permanently non-conductive). This happens for example if no BC190 is connected

The D-ASIC derives the required charge current value from the battery voltage VBAT. The P-ASIC converts this voltage to an appropriate level and supplies it to output pin 78 (BATVOLT). The D-ASIC measures this voltage via the Slow ADC. The momentary value, and the temperature change as a function of time (-dT/dt), are used as control parameters. If the dT/dt exceeds 0.75 °C per minute the battery is full.

### **Battery low indication**

The battery empty indication on the LCD is given for a battery voltage < 6.9 V. If the voltage drops below 6.0 V, the test tool turns off.

### **Charging the battery**

#### Battery Refresh

If a battery refresh is started the following actions are performed:

- the 1 A charge current is applied to the battery until it is full
- the charger is turned off, and as much as possible circuits are activated in order to discharge the battery in the shortest time. The initial discharge current is about 1 A.
- when the battery is discharged (battery voltage < 6.4V) the 1 A charge current is applied until the battery is full; then the 90 mA charge current is applied continuously.

#### Battery Charger BC190 connected, test tool off, battery completely discharged

- the 1 A charge current is applied until the battery is full (takes about 3.5 hrs)
- the 0.35 A charge current is applied for 2 hrs.
- the 90 mA charge current is applied continuously.

#### Battery Charger BC190 connected, test tool on

- the 60 mA charge current is applied continuously.

### **Battery temperature monitoring**

The P-ASIC supplies a current to a NTC resistor in the battery pack (TEMP pin 5, battery connector pin 3). The P-ASIC conditions the voltage on pin 5 and supplies it to output pin 79 BATTEMP. The D-ASIC measures this voltage via the slow ADC. It uses the BATTEMP voltage for control purposes (set charge current).

Additionally the temperature is monitored by the P-ASIC. The P-ASIC supplies a current to reference resistor R4102 (TEMPHI pin 4), and compares the resulting TEMPHI voltage to the voltage on pin 5 (TEMP). If the battery temperature is too high, the P-ASIC Control circuit will set the charge current to zero, in case the D-ASIC fails to do this.

During charging, the measured temperature change as a function of time ( $-dT/dt$ ) is used to see if the battery is completely charged.

If the battery temperature monitoring system fails, a temperature switch in the battery pack interrupts the battery current if the temperature becomes higher than 70 °C

### **Maximum VBAT**

The P-ASIC supplies a current to reference resistor R4113 (VBATHIGH pin 7). It compares the voltage on R4113 to the battery voltage VBAT on pin 3 (after being attenuated in the P-ASIC). The P-ASIC limits the voltage VBAT to 11 V via its internal Control circuit. This situation arises in case no battery or a defective battery (open) is present.

### **Charger/Converter input current**

This input current is sensed by R4104. The P-ASIC supplies a reference current to R4114. The P-ASIC compares the voltage drop on R4104 (CHASENSP-CHASENSN pin 14 and 15) to the voltage on R4114 (IMAXCHA pin 6). It limits the input current (e.g. when loading C4114 and C4000/C4001 just after connecting the power adapter) via its internal Control circuit.

### CHAGATE control signal

The CHARGE CONTROL circuit in the P-ASIC supplies the CHAGATE control signal. The control circuit end stage supply voltage is VCHDRIVE. The CHAGATE high level makes V4102 non-conductive (“OFF”,  $V_{gs} > 0$ ). The CHAGATE low level is limited to VCHDRIVE minus 13V, and makes V4102 conductive (“ON”,  $V_{gs}$  negative).

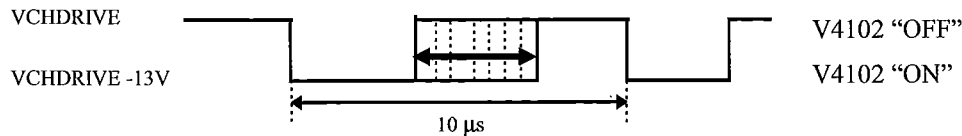


Figure 3-13. CHAGATE Control Voltage

### +3V3GAR Voltage

When the test tool is not turned on, the Fly Back Converter does not run. In this situation, the +3V3GAR voltage for the D-ASIC, the FlashROM, and the RAM is supplied via transistor V4000. The voltage is controlled by the VGARDRV signal supplied by the P-ASIC (pin 69). The current sense voltage across R4000 is supplied to pin 70 (VGARCURR). The voltage +3V3GAR is sensed on pin 66 for regulation. The internal regulator in the P-ASIC regulates the +3V3GAR voltage, and limits the current.

### Reference voltage REFPWM2

The +3.3 V voltage REFPWM2 is used as reference voltage for one of the PWM circuits in the D-ASIC. It is derived from reference diode V4114, as shown in Figure 3-14.


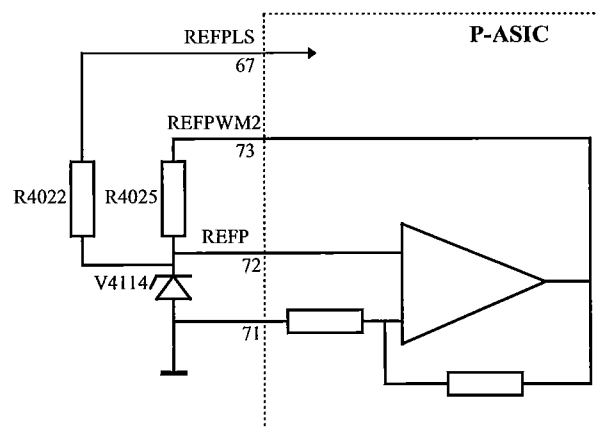


Figure 3-14. REFPWM2 circuit

### Fly Back Converter

When the test tool is turned on, the D-ASIC makes the PWRON line (P-ASIC pin 62) high. Then the self oscillating Fly Back Converter becomes active. It is started up by the internal 100 kHz oscillator that is also used for the Charger/Converter circuit. First the FLYGATE signal (pin 49) turns FET V4001 on (see Figure 3-15), and an increasing current flows in the primary transformer winding to ground, via sense resistor R4003. If the voltage FLYSENSP across this resistor exceeds a certain value, the P-ASIC turns FET V4001 off. Then a decreasing current flows in the secondary windings to ground. If the windings are “empty” (all energy transferred), the voltage VCOIL sensed by the P-ASIC (pin 52) via R4001 is zero, and the FLYGATE signal will turn FET V4001 on again.

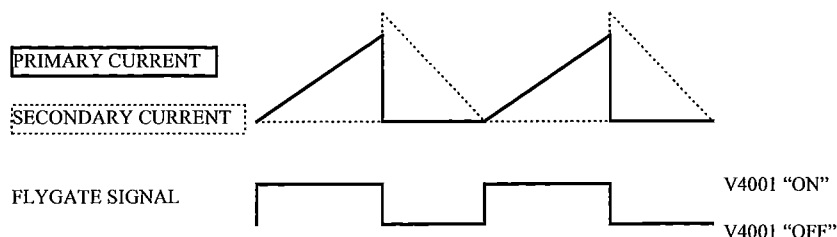

**Figure 3-15. Fly-Back Converter Current and Control Voltage**

The output voltage is regulated by feeding back a part of the +3V45 output voltage via R4011-R4012-R4013 to pin 54 (VSENS). This voltage is compared in the P-ASIC to a 1.23V reference voltage. Any deviation of the +3V45 voltage from the required 3.45V changes the current level at which current FET V4001 will be switched off. If the output voltage increases, the current level at which V4001 is switched off will become lower, and less energy is transferred to the secondary winding. As a result the output voltage will become lower.

An current source in the P-ASIC supplies a current to R4020. The resulting voltage is a reference for the maximum allowable primary current (IMAXFLY). The voltage across the sense resistor (FLYSENSP) is compared in the P-ASIC to the IMAXFLY voltage. If the current exceeds the set limit, FET V4001 will be turned off.

Another internal current source supplies a current to R4014. This resulting voltage is a reference for the maximum allowable output voltage (VOUTHI). The -1V8 secondary output voltage is attenuated and level shifted in the P-ASIC, and then compared to the VOUTHI voltage. If the -1V8 exceeds the set limit, FET V4001 will be turned off,

The FREQPS signal drives the P-ASIC output stage that supplies the FET drive FLYGATE signal. It is also supplied to the D-ASIC, in order to detect if the Fly Back converter is running well (used in factory test only).

### **3.4.8 Slow ADC, RS232 Serial Interface, Backlight, Buzzer**

See circuit diagram Figure 9-9.

#### **Slow ADC**

With the Slow ADC the D-ASIC can measure various signals for control and test puposes.

D4300 input pions 12-15 are used to measure the battery current (BATCUR), battery voltage (BATVOLT), battery temperature (BATTEMP), battery identity (BATIDENT).

The signals REFADCT and ETRIGSADC can be measured for test puposes.

D4300 input pin 4 is used to detect the PCB version: for version 5 pin 4 is +3.45 V, for version 6 it is 0 V.

In PCB version 5 D4300 input pin 2 is not used. In PCB version 6 and higher pin 2 is used to measure the backlight lamp current.

De-multiplexer D4300 supplies one of its input signals to comparator N4300 (pin 4). The D-ASIC supplies the D4300 control signals SELMUX0-2. The Slow ADC works according to the successive approximation principle. The D-ASIC changes the voltage level on pin 3 of the comparator (SADCLEV) step wise, by changing the duty cycle of the PWM signal SADCLEVD. The comparator output SLOWADC is monitored by the D-ASIC, in order to detect if the previous input voltage step caused the comparator output to switch. By decreasing the voltage steps, the voltage level can be approximated

within the smallest possible step of the SADCLEV voltage. From its set SADCLEVD duty cycle, the D-ASIC determines the voltage level of the selected input.

### RS232 Serial Interface

Received data line RXDANA is buffered by the P-ASIC. It is connected to ground via a 20 k $\Omega$  resistor in the P-ASIC (pin 75).

If no light is received by the light sensitive diode H3401, the RXDANA line is +200 mV, which corresponds to a "1" (+3V) on the RXD (P-ASIC output pin 76) line.

If light is received, the light sensitive diode will conduct, and the RXDANA line goes low (0...-0.6V), which corresponds to a "0" on the RXD line.

The level on the RXDANA line is compared by a comparator in the P-ASIC to a 100 mV level. The comparator output is the RXD line, which is supplied to the D-ASIC (pin 87).

The D-ASIC controls the transmit data line TXD. If the line is low, diode H3400 will emit light.

The supply voltage for the optical interface receive circuit (RXDANA), is the +3V3SADC voltage. The +3V3SADC voltage is present if the test tool is turned on, or if the Power Adapter is connected (or both). So if the Power Adapter is present limited serial communication is possible, even when the test tool is off. In this way the test tool can be turned on by means of a command sent via the serial interface.

### Backlight Converter

The LCD back light is provided by a  $\varnothing$ 2.4 mm fluorescent lamp in LCD unit. The back light converter generates the 300-400 Vpp ! supply voltage. The circuit consist of:

- A pulse width modulated (PWM) buck regulator to generate a variable, regulated voltage (V4200, V4202, L4200, C4210).
- A zero voltage switched (ZVS) resonant push-pull converter to transform the variable, regulated voltage into a high voltage AC output (V4201, T4200).

The PWM buck regulator consists of FET V4200, V4202, L4200, C4202, and a control circuit in N4200. FET V600 is turned on and off by a square wave voltage on the COUT output of N4200 (pin 14). By changing the duty cycle of this signal, the output on C4210 provides a variable, regulated voltage. The turn on edge of the COUT signal is synchronized with each zero detect.

Outputs AOUT and BOUT of N4200 provide complementary drive signals for the push-pull dual FET V601. If the upper V601 conducts, the circuit consisting of the primary winding of transformer T4200 and C4211, will start oscillating at its resonance frequency. After half a cycle, a zero voltage is detected on pin 9 (ZD) of N4200, the upper V601 will be turned off, and the lower V601 is turned on. This process goes on each time a zero is detected. The secondary current is sensed by R4202/R4203, and fed back to N4200 pin 7 and pin 4 for regulation of the PWM buck regulator output voltage. The BACKBRIG signal supplied by the D-ASIC provides a pulse width modulated (variable duty cycle) square wave. By changing the duty cycle of this signal, the average on-resistance of V4210 can be changed. This will change the secondary current, and thus the back light intensity. The voltage on the "cold" side of the lamp is limited by V4204 and V4203. This limits the emission of electrical interference.

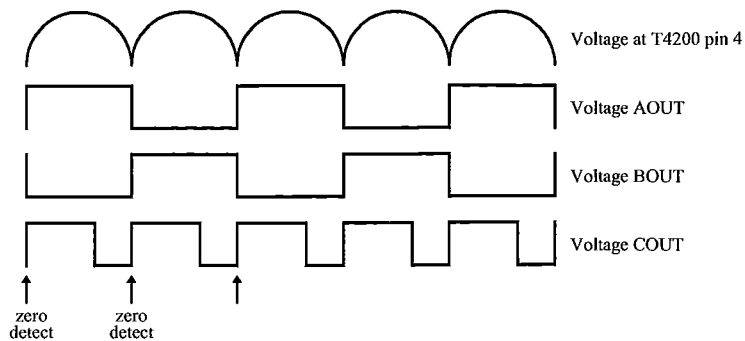


Figure 3-16. Back Light Converter Voltages

### Buzzer

The buzzer is directly driven by a 4 kHz square wave from the D-ASIC (pin 101) via FET V3500. If the test tool is on, the -30VD supply from the Fly Back converter is present, and the buzzer sounds loudly. If the -30VD is not present, the buzzer sounds weak, e.g. when the Mask Active mode is entered.



## **Chapter 4**

# **Performance Verification**

<b>Title</b>	<b>Page</b>
4.1 Introduction.....	4-3
4.2 Equipment Required For Verification .....	4-3
4.3 General Instructions .....	4-3
4.4 Operating Instructions.....	4-4
4.4.1 Resetting the test tool .....	4-4
4.4.2 Navigating through menu's .....	4-4
4.4.3 Creating Test Tool Setup1 .....	4-4
4.5 Display and Backlight Test .....	4-5
4.6 Scope Input A&B Tests .....	4-6
4.6.1 Input A&B Vertical Accuracy Test.....	4-6
4.6.2 Input A&B DC Voltage Accuracy Test.....	4-9
4.6.3 Input A&B AC Voltage Accuracy Test (LF).....	4-11
4.6.4 Input A & B AC Coupled Lower Frequency Test.....	4-12
4.6.5 Input A and B Peak Measurements Test.....	4-13
4.6.6 Input A&B Frequency Measurement Accuracy Test .....	4-14
4.6.7 Input A&B Phase Measurements Test.....	4-15
4.6.8 Time Base Test .....	4-16
4.6.9 Input A Trigger Sensitivity Test .....	4-18
4.6.10 Input A AC Voltage Accuracy (HF) & Bandwidth Test .....	4-20
4.6.11 Input B Trigger Sensitivity Test .....	4-21
4.6.12 Input B AC Voltage Accuracy (HF) & Bandwidth Test .....	4-22
4.6.13 Video test.....	4-23
4.7 External Trigger Level Test .....	4-27
4.8 Meter (DMM) Tests .....	4-28
4.8.1 Meter DC Voltage Accuracy Test .....	4-28
4.8.2 Meter AC Voltage Accuracy & Frequency Response Test.....	4-29
4.8.3 Continuity Function Test .....	4-30
4.8.4 Diode Test Function Test .....	4-30
4.8.5 Ohms Measurements Test.....	4-31
4.9 Probe Calibration Generator Test .....	4-32



## 4.1 Introduction

### Warning

**Procedures in this chapter should be performed by qualified service personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.**

The Fluke 192/196/199 ScopeMeter® test tool (referred to as test tool) should be calibrated and in operating condition when you receive it.

The following performance tests are provided to ensure that the test tool is in a proper operating condition. If the test tool fails any of the performance tests, calibration adjustment (see Chapter 5) and/or repair (see Chapter 7) is necessary.

The Performance Verification Procedure is based on the specifications, listed in Chapter 2 of this Service Manual. The values given here are valid for ambient temperatures between 18 °C and 28 °C.

The Performance Verification Procedure is a quick way to check most of the test tool's specifications. Because of the highly integrated design of the test tool, it is not always necessary to check all features separately.

## 4.2 Equipment Required For Verification

The primary source instrument used in the verification procedures is the Fluke 5500A. If a 5500A is not available, you can substitute another calibrator as long as it meets the minimum test requirements.

- Fluke 5500A Multi Product Calibrator, including SC300 or SC600 Oscilloscope Calibration Option.
- Stackable Test Leads (4x), supplied with the 5500A.
- 50Ω Coax Cables (2x), Fluke PM9091 (1.5m) or PM9092 (0.5m).
- Male BNC to Dual Female BNC adapter (1x), Fluke PM9093/001
- 50Ω feed through termination (2x), Fluke PM5985.
- Dual Banana Plug to Female BNC Adapter (1x), Fluke PM9081/001.
- Dual Banana Jack to Male BNC Adapter (1x), Fluke PM9082/001.
- TV Signal Generator, Philips PM5418.
- 75Ω Coax cable (1x), Fluke PM9075.
- 75Ω Feed through termination (1x), ITT-Pomona model 4119-75.

## 4.3 General Instructions





Follow these general instructions for all tests:

- For all tests, power the test tool with the BC190 power adapter/battery charger. The battery pack must be installed.
- Allow the 5500A to satisfy its specified warm-up period.
- For each test point, wait for the 5500A to settle.
- Allow the test tool a minimum of 20 minutes to warm up.
- One division on the LCD consists of 25 pixels. So 1 pixel corresponds to 0.04 division.

## 4.4 Operating Instructions

### 4.4.1 Resetting the test tool






Proceed as follows to reset the test tool:

- Press  to turn the test tool off.
- Press and hold .
- Press and release  to turn the test tool on.
- Wait until the test tool has **beeped twice**, and then release . When the test tool has beeped twice, the RESET was successful.

### 4.4.2 Navigating through menu's

During verification you must open menus, and to choose items from the menu.

Proceed as follows to make choices in a menu :

- Reset the test tool
- Open a menu, for example press , then press  (**READING 1**). The menu as showed in Figure 4-1 will be opened.  
Active functions are marked by , inactive functions by .  
If more than one menu groups are available, they will be separated by a vertical line.  
The menu you opened indicates that **READING 1** (that is the upper left reading) shows the result of a V ac+dc measurement ( V ac+dc ) on Input A (  on A ).
- Press  or  to highlight the function to be selected.
- Press  (**ENTER**) to confirm the selection.  
The active function in the next menu group will be highlighted now. If the confirmation was made in the last (most right) menu group, the menu will be closed.

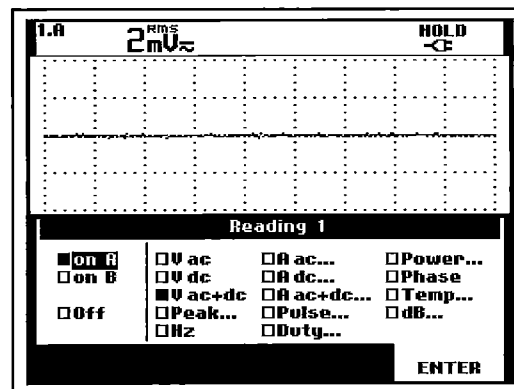



















Figure 4-1. Menu item selection

AL-RDNG1.BMP

### 4.4.3 Creating Test Tool Setup1




Before starting the verification procedure you must define a standard test tool setup, called SETUP 1. During verification you will be asked to recall this setup. This defines the initial test tool setup for each verification.

Proceed as follows to create SETUP1:



1. Reset the test tool. Input A is ON, Input B is OFF now.
2. Press  . The inverse text indicates the actual settings.
3. Press  (toggle key) to select **INPUT B ON**. The Input B trace will become visible.
4. Press  to change the **PROBE B** setting.
5. Select **Probe Type: ■ Voltage | Attenuation: ■ 1:1** .
6. Press  . The inverse text indicates the actual settings.
7. Press  to change the **PROBE A** setting.
8. Select **Probe Type: ■ Voltage | Attenuation: ■ 1:1** .
9. Press 
10. Press  to select **READINGS ON**
11. Press  **READING 1** , and select **■ on A | ■ V dc**
12. Press  **READING 2** , and select **■ on B | ■ V dc**
13. Press  **WAVEFORM OPTIONS** and select **Waveform: ■ NORMAL** , **Display Glitches: ■ NO**
14. Press  to select **MANUAL** ranging (**MANUAL** in upper left of screen)
15. Press 
16. Press  **SAVE...**
17. Using  and  select **SCREEN+SETUP □ 1** (or **■ 1**).
18. Press  **SAVE** to save the actual test tool settings in setup memory 1.
19. Press  to leave the HOLD mode.

## 4.5 Display and Backlight Test

Proceed as follows to test the display and the backlight:

1. Press  to turn the test tool on.
2. Remove the BC190 adapter power, and verify that the backlight is dimmed.
3. Apply the BC190 adapter power and verify that the backlight brightness increases.
4. Press and hold  (USER), then press and release  (CLEAR MENU)

The test tool shows the calibration menu in the bottom of the display.

- Do not press  now! If you did, turn the test tool off and on, and start at 4.
- Pressing  will remove the menu. Press any other key to restore the menu.

5. Press **F1** PREVIOUS three times.  
The test tool shows **Contrast (CL 0100)**:

6. Press **F3** CALIBRATE .  
The test tool shows a dark display; the test pattern as shown in Figure 4-2 may be not visible or hardly visible.  
Observe the display closely, and verify that the display shows no abnormalities, as for example very light pixels or lines.

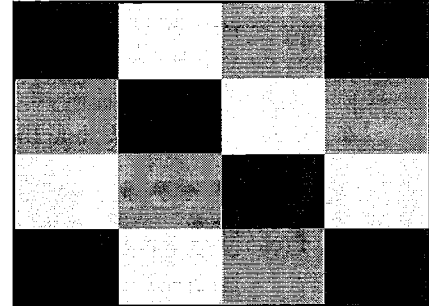


Figure 4-2. Display Pixel Test Pattern

7. Press **F2** .  
The test pattern is removed; the test tool shows **Contrast (CL 0100)**:
8. Press **F2** again to do the next step **Contrast (CL 0110)**:
9. Press **F3** CALIBRATE  
The test tool shows the display test pattern shown in Figure 4-2, at default contrast. Observe the display closely, and verify that the display shows no abnormalities. Also verify that the contrast of the upper left and upper right square of the test pattern is equal.
10. Press **F2** .  
The test pattern is removed; the test tool shows **Contrast (CL 0110)**:
11. Press **F2** again to do the next step **Contrast (CL 0120)**:
12. Press **F3** CALIBRATE  
The test tool shows a light display; the test pattern as shown in Figure 4-2 may not be visible or hardly visible.  
Observe the display closely, and verify that the display shows no abnormalities.
13. Turn the test tool OFF and ON to exit the calibration menu and to return to the normal operating mode.

If the maximum, minimum, or default display contrast is not OK, then you can set these items without performing a complete calibration adjustment; refer to Section 5 for detailed information.

## 4.6 Scope Input A&B Tests

### 4.6.1 Input A&B Vertical Accuracy Test

#### WARNING

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows:

1. Connect the test tool to the 5500A as shown in Figure 4-3.

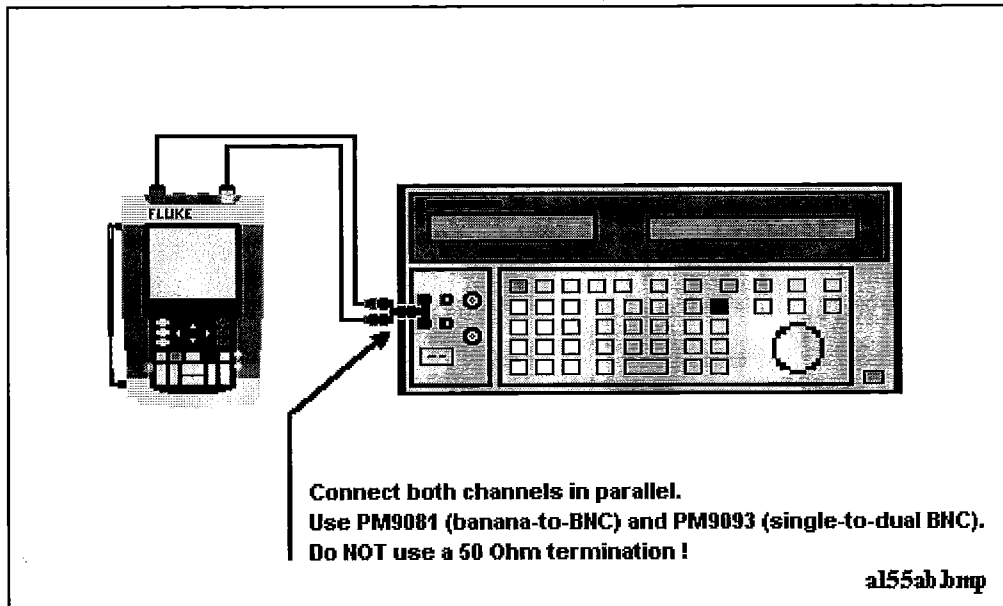


Figure 4-3. Test Tool Input A&B to 5500 Normal Output

2. Select the following test tool setup:

- Recall the created SETUP 1 (see section 4.4.3): press **SAVE PRINT**, **F2** **RECALL**, select **SCREEN+SETUP** **1**, press **F3** **RECALL SETUP**.
- Press **A**, press **F4** **INPUT A OPTIONS...**, and select **Polarity Normal** | **Bandwidth: 10 kHz (HF reject)**
- Press **B**, press **F4** **INPUT B OPTIONS...**, and select **Polarity Normal** | **Bandwidth: 10 kHz (HF reject)**
- Press **CLEAR MENU** to clear the softkey menu, and to see the full screen.

*Note:*

*The 10 kHz bandwidth limiter rejects calibrator noise. It does not affect the gain accuracy at a 50 Hz input signal*

3. Using **TIME** **10** change the time base to select manual time base ranging, and lock the time base on 10 ms/div.
4. Using **MOVE** **▲** and **MOVE** **▼** move the Input A ground level (indicated by the zero icon **0** in the left margin) to the center grid line.
5. Using **MOVE** **▲** and **MOVE** **▼** move the Input B ground level (indicated by the zero icon **0** in the left margin) to the grid line one division below the center grid line.
6. Using **MV** **1** and **RANGE** **V** set the Input A and B sensitivity range to the first test point in Table 4-1.

7. Set the 5500A to source the appropriate initial ac voltage.
8. Adjust the 5500A output voltage until the displayed Input A trace amplitude is 6 divisions.
9. Observe the 5500A output voltage and check to see if it is within the range shown under the appropriate column.
10. Adjust the 5500A output voltage until the displayed Input B trace amplitude is 6 divisions.
11. Observe the 5500A output voltage and check to see if it is within the range shown under the appropriate column.
12. Continue through the test points.
13. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

**Table 4-1. Vertical Accuracy Verification Points**

Range	Initial 5500A Setting, V ac, sine, 50 Hz	Allowable 5500A output for trace amplitude of 6 divisions
5 mV/div	10.606 mV	10.376 to 10.836
10 mV/div	21.213 mV	20.753 to 21.672
20 mV/div	42.426 mV	41.507 to 43.345
50 mV/div	106.06 mV	103.76 to 108.36
100 mV/div	212.13 mV	207.53 to 216.72
200 mV/div	424.26 mV	415.07 to 433.45
500 mV/div	1.0607 V	1.0377 to 1.0836
1 V/div	2.1213 V	2.0754 to 2.1673
2 V/div	4.2426 V	4.1507 to 4.3346
5 V/div	10.606 V	10.376 to 10.836
10 V/div	21.213 V	20.753 to 21.672
20 V/div	42.426 V	41.507 to 43.345
50 V/div	106.06 V	103.76 to 108.36
100 V/div	212.13 V	207.53 to 216.72

*Note*

*The vertical accuracy test can also be done with dc voltage. This method is advised for automatic verification using the Fluke Met/Cal Metrology Software. For each sensitivity range you must proceed as follows:*

- 1. Apply a +3 divisions voltage, and adjust the voltage until the trace is at +3 divisions. Write down the applied voltage V1*
- 2. Apply a -3 divisions voltage, and adjust the voltage until the trace is at -3 divisions. Write down the applied voltage V2*






















3. Verify that  $V1-V2 = 6 \times \text{range} \pm (1.5\% + 0.04 \times \text{range})$ .:  
 Example for range 10 mV/div.:  
 The allowed  $V1 - V2 = 60 \text{ mV} \pm (0.015 \times 60 + 0.04 \times 10)$   
 $= 60 \text{ mV} \pm (0.9 + 0.4) = 60 \text{ mV} \pm 1.3 \text{ mV}$

## 4.6.2 Input A&B DC Voltage Accuracy Test

### WARNING

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to verify the automatic dc voltage scope measurement:

1. Connect the test tool to the 5500A as for the previous test (see Figure 4-3).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press  ,  **RECALL** , select **SCREEN+SETUP**  **1** , press  **RECALL SETUP** .
  - Press  , then press  **INPUT A OPTIONS ...**
  - Select **Polarity:**  **Normal** | **Bandwidth:**  **10 kHz (HF Reject)**
  - Press  , then press  **INPUT B OPTIONS ...**
  - Select **Polarity:**  **Normal** | **Bandwidth:**  **10 kHz (HF Reject)**
  - Press  to clear the softkey menu, and to see the full 8 divisions screen.
3. Using  change the time base to select manual time base ranging, and lock the time base on 10 ms/div.
4. Using  and  move the Input A and B ground level (zero icon  in the left margin) approximately to the center grid line.
5. Using  and  select manual vertical ranging and set the Input A and B sensitivity range to the first test point in Table 4-2.  
 The sensitivity ranges are indicated in the left and right lower display edge.
6. Set the 5500A to source the appropriate dc voltage.
7. Observe the readings (**1.A** and **2.B**) and check to see if it is within the range shown under the appropriate column.  
 Due to calibrator noise, occasionally OL (overload) can be shown.
8. Continue through the test points.
9. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

**Table 4-2. Volts DC Measurement Verification Points**

Range	5500A output V dc	Input A&B Reading
5 mV/div	+15.0 mV	+14.3 to +15.7
	-15.0 mV	-14.3 to -15.7
10 mV/div	+30.0 mV	+29.1 to +30.9
	-30.0 mV	-29.1 to -30.9
20 mV/div	+60.0 mV	+58.6 to +61.4
	-60.0 mV	-58.6 to -61.4
50 mV/div	+150 mV	+1.43 to +1.57
	-150 mV	-1.43 to -1.57
100 mV/div	+300 mV	+291 to +309
	-300 mV	-291 to -309
200 mV/div	+600 mV	+586 to +614
	-600 mV	-586 to -614
500 mV/div	+1.50 V	+1.43 to +1.57
	-1.50 V	-1.43 to -1.57
1 V/div	+3.00 V	+2.91 to +3.09
	-3.00 V	-2.91 to -3.09
2 V/div	+6.00 V	+5.86 to +6.14
	-6.00 V	-5.86 to -6.14
5 V/div	+15.0 V	+14.3 to +15.7
	-15.0 V	-14.3 to -15.7
10 V/div	+30.0 V	+29.1 to +30.9
	-30.0 V	-29.1 to -30.9
20 V/div	+60.0 V	+58.6 to +61.4
	-60.0 V	-58.6 to -61.4
50 V/div	+150 V	+143 to +157
	-150 V	-143 to -157
100 V/div	+300 V	+291 to +309
	-300 V	-291 to -309

### 4.6.3 Input A&B AC Voltage Accuracy Test (LF)

This procedure tests the Volts ac accuracy with dc coupled inputs up to 50 kHz. The high frequencies are tested in sections 4.6.10 and 4.6.12.

#### Warning

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to test the Input A and B automatic scope ac Voltage measurement accuracy:












































1. Connect the test tool to the 5500A as for the previous test (see Figure 4-3).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press ,  **RECALL** , select **SCREEN+SETUP**  **1** , press  **RECALL SETUP** .
  - Press  , then press  **INPUT A OPTIONS ...**
  - Select **Polarity:**  **Normal** | **Bandwidth:**  **20 MHz**
  - Press  , then press  **INPUT B OPTIONS ...**
  - Select **Polarity:**  **Normal** | **Bandwidth:**  **20 MHz**
  - Press 
  - Press  **READING 1** , and select  **on A** |  **V ac**.
  - Press  **READING 2** , and select  **on B** |  **V ac**.
  - Press  to clear the softkey menu, and to see the full screen.
3. Using  **TIME ITS** change the time base to select manual time base ranging. Lock the time base on 20  $\mu$ s/div for the 20 kHz signals, and on 10 ms/div for the 60 Hz signal.
4. Using  and  move the Input A and B ground level (indicated by the zero icon  in the left margin) to the center grid line.
5. Using  and  select manual vertical ranging, and set the Input A and B sensitivity range to the first test point in Table 4-3. The sensitivity ranges are indicated in the left and right lower display edge in gray.
6. Set the 5500A to source the appropriate ac voltage.
7. Observe the readings (**1.A** and **2.B**) and check to see if it is within the range shown under the appropriate column.
8. Continue through the test points.
9. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

Table 4-3. Volts AC Measurement Verification Points

Range	5500A output		Input A&B Reading
	V ac	Frequency	
5 mV/div	10 mV	20 kHz	8.3 mV to 11.7 mV
10 mV/div	20 mV	20 kHz	18.0 mV to 22.0 mV
20 mV/div	40 mV	20 kHz	37.5 mV to 42.5 mV
50 mV/div	100 mV	20 kHz	96.0 mV to 104.0 mV
100 mV/div	200 mV	20 kHz	180 mV to 220 mV
200 mV/div	400 mV	20 kHz	375 mV to 425 mV
500 mV/div (Select 10 ms/div)	900 mV	60 Hz	877 mV to 923 mV
500 mV/div (Select 20 μs/div)	900 mV	20 kHz	863 mV to 937 mV
1 V/div	2 V	20 kHz	1.80 V to 2.20 V
2 V/div	4 V	20 kHz	3.75 V to 4.25 V
5 V/div	9 V	20 kHz	8.63 V to 9.37 V
10 V/div	20 V	20 kHz	18.0 V to 22.0 V
20 V/div	40 V	20 kHz	37.5 V to 42.5 V
50 V/div	90 V	20 kHz	86.3 V to 93.7 V
100 V/div	200 V	20 kHz	180 V to 220 V

#### 4.6.4 Input A & B AC Coupled Lower Frequency Test

Proceed as follows to test the ac coupled input low frequency accuracy:

1. Connect the test tool to the 5500A as for the previous test (see Figure 4-3).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press  ,  **RECALL** , select **SCREEN+SETUP**  **1** , press  **RECALL SETUP** .
  - Press  **SCOPE**
  - Press  **READING 1** , and select  on **A** |  **V ac**.
  - Press  **READING 2** , and select  on **B** |  **V ac**.
  - Press  , then using  select **COUPLING AC**
  - Press  , then using  select **COUPLING AC**
  - Press  to clear the softkey menu, and to see the full screen.
3. Using  change the time base to select manual time base ranging, and lock the time base on 50 ms/div.






4. Using  and  move the Input A and B ground level (indicated by the zero icon  in the left margin) to the center grid line.
5. Using  and  select manual vertical ranging, and set the Input A and B sensitivity range to 500 mV.
6. Set the 5500A to source the appropriate ac voltage and frequency, according to Table 4-4.
7. Observe the readings (1.A and 2.B) and check to see if it is within the range shown under the appropriate column.
8. Continue through the test points.
9. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

Table 4-4. Input A&B AC Input Coupling Verification Points



















5500A output, V rms	5500A Frequency	Reading 1.A and 1.B
900 mV	60 Hz	873 mV to 927 mV
900 mV	5 Hz	>630 mV

### 4.6.5 Input A and B Peak Measurements Test

#### WARNING

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to test the Peak measurement accuracy:

1. Connect the test tool to the 5500A as for the previous test (see Figure 4-3).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press ,  **RECALL**, select **SCREEN+SETUP** , press  **RECALL SETUP**.
  - Press .
  - Press  **READING 1**, and select  on A |  **Peak**. Select  **Peak-Peak** from the **Peak** menu.
  - Press  **READING 2**, and select  on B |  **Peak**. Select  **Peak-Peak** from the **Peak** menu.
  - Press  to clear the softkey menu, and to see the full screen.
3. Using  change the time base to select manual time base ranging, and lock the time base on 1 ms/div.
4. Using  and  move the Input A and B ground level (indicated by the zero icon  in the left margin) to the center grid line.



5. Using  and  select manual vertical ranging, and set the Input A and B sensitivity range to 100 mV.
6. Set the 5500A to source the appropriate ac voltage and frequency, according to Table 4-5.
7. Observe the readings (**1.A** and **2.B**) and check to see if it is within the range shown under the appropriate column.
8. Continue through the test points.
9. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

Table 4-5. Volts Peak Measurement Verification Points

5500A output, Vrms (sine)	5500A Frequency	Reading A-B
212.13 mV (0.6 V pp)	1 kHz	0.56 to 0.64

#### 4.6.6 Input A&B Frequency Measurement Accuracy Test

Proceed as follows to test the frequency measurement accuracy:

1. Connect the test tool to the 5500A as shown in Figure 4-4. Do NOT use 50  $\Omega$  terminations!

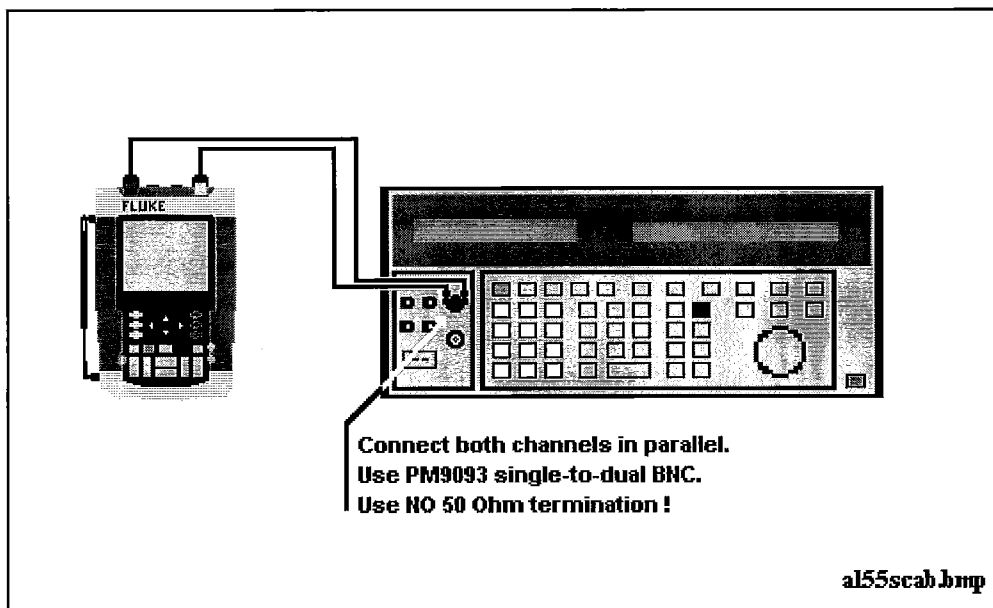










Figure 4-4. 5500 Scope Output to Test Tool Input A&B

2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press ,  **RECALL**, select **SCREEN+SETUP**  **1**, press  **RECALL SETUP**.
  - Press 
  - Press  **READING 1**, and select  on **A** |  **Hz**.

- Press **F2** **READING 2** , and select **on B | Hz**.
3. Using **V** and **mV** select range 100 mV/div for A and B.
  4. Using **TIME** select the required time base setting.
  5. Set the 5500A to source a sine wave according to the first test point in Table 4-6. As no 50Ω termination is applied, the 5500 leveled sine wave output amplitude will be twice the set value.
  6. Observe the readings (**1.A** and **2.B**) and check to see if it is within the range shown under the appropriate column.
  7. Continue through the test points.
  8. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

**Table 4-6. Input A&B Frequency Measurement Accuracy Test**

Model	Time base	5500A-SC... MODE	Voltage	Frequency	Input A&B Reading
all	20 ms/div	wavegen, sine	600 mVpp	16 Hz	15.90 to 16.10
192	20 ns/div	levsine	300 mVpp	60 MHz	59.68 to 60.32
196	20 ns/div	levsine	300 mVpp	100 MHz	99.3 to 100.7
199	20 ns/div	levsine	300 mVpp	200 MHz	198.8 to 201.2

*Note*

*Duty Cycle and Pulse Width measurements are based on the same principles as Frequency measurements. Therefore the Duty Cycle and Pulse Width measurement function will not be verified separately.*

### 4.6.7 Input A&B Phase Measurements Test

Proceed as follows to test the phase measurement accuracy:

1. Connect the test tool to the 5500A as for the previous test (see Figure 4-4).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press **SAVE PRINT** , **F1** **RECALL** , select **SCREEN+SETUP** **1** , press **F3** **RECALL SETUP** .
  - Press **SCOPE**
  - Press **F2** **READING 1** , and select **on A | Phase**.
  - Press **F2** **READING 2** , and select **on B | Phase**.
3. Using **V** and **mV** select range 100 mV/div for A and B.
4. Using **TIME** select the required time base setting.
5. Set the 5500A to source a sine wave according to the first test point in Table 4-6. As no 50Ω termination is applied, the 5500 leveled sine wave output amplitude will be twice the set value.

6. Observe the reading **1.A** and **2.B** and check to see if they are not outside the range shown under the appropriate column.
7. Continue through the test points.
8. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.


**Table 4-7. Phase Measurement Verification Points**

Time base	5500A-SC... MODE	Frequency	Voltage	Input A&B Reading ...Deg
20 ms/div	wavegen, sine, 1 MΩ	10 Hz	600 mVpp	-2 to +2
200 ns/div	levsine	1 MHz	300 mVpp	-2 to +2
20 ns/div	levsine	10 MHz	300 mVpp	-3 to +3

#### 4.6.8 Time Base Test

Proceed as follows to test the time base accuracy:

1. Connect the test tool to the 5500A as shown in Figure 4-5.

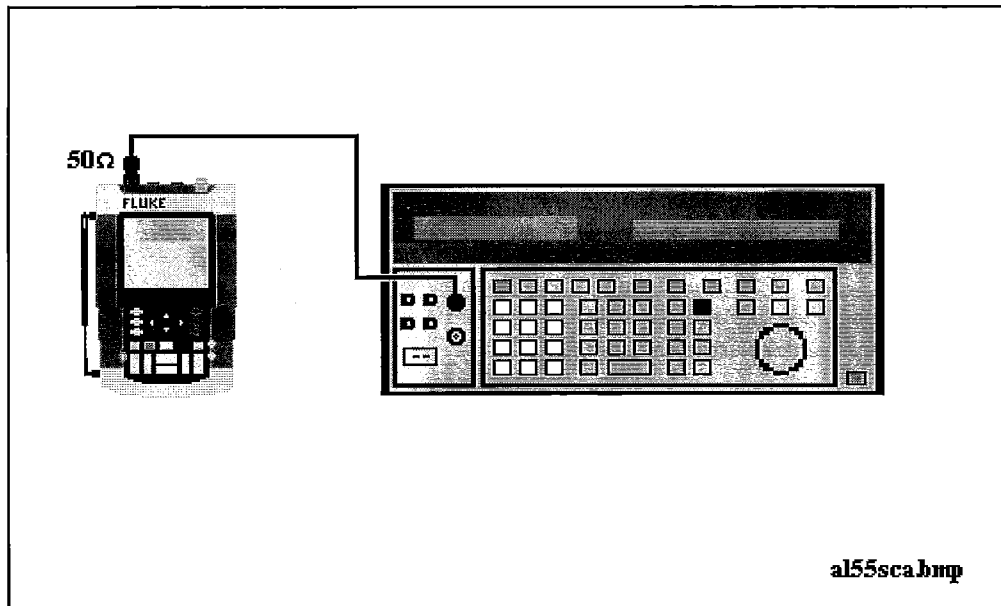

**Figure 4-5. 5500A Scope Output to Test Tool Input A**

al55sca.bmp

2. Select the following test tool setup:
  - Reset the test tool
  - Using **mV RANGE** and **V RANGE** select manual vertical ranging, and set the Input A sensitivity range to 5V (probe A is 10:1, so input sensitivity is 500 mV/div).
  - Using **S TIME 100** change the time base to select manual time base ranging, and lock the time base on 10 ms/div).
  - Using **MOVE** move the trace to the left. After moving the trace 2 divisions, the trigger delay time with respect to the first vertical grid line will be indicated



in the center of the display bottom (gray text if no triggering occurs). Adjust the trigger delay time to 8.000 ms (A  $\Gamma$   $\rightarrow$  | 8.00 ms )

- Using **S TIME ITS** set the time base on 10  $\mu$ s/div.
3. Set the 5500A to source a 8 ms time marker (MODE marker).
  4. Using **MOVE** move the trace to the right until the indicated trigger delay is 7.990 ms.
  5. Examine the rising edge of the time marker pulse at the height of the trigger level indicator top. Verify that the rising edge is at the second grid line from the left. The allowed deviation is  $\pm 2$  pixels, see Figure 4-6.
  6. Select the following test tool setup:
    - Using **S TIME ITS** change the time base to select manual time base ranging, and lock the time base on 10 ms/div).
    - Using **MOVE** move the trace to adjust the trigger delay time to 800.0  $\mu$ s (A  $\Gamma$  800.0  $\mu$ s).
    - Using **S TIME ITS** set the time base on 1  $\mu$ s/div.
  7. Set the 5500A to source a 0.8 ms time marker (MODE marker).
  8. Using **MOVE** move the trace to the right until the indicated trigger delay is 799.0  $\mu$ s.
  9. Examine the rising edge of the time marker pulse at the vertical height of the trigger level indicator top. Verify that the rising edge is at the second grid line from the left. The allowed deviation is  $\pm 2$  pixels, see Figure 4-6.

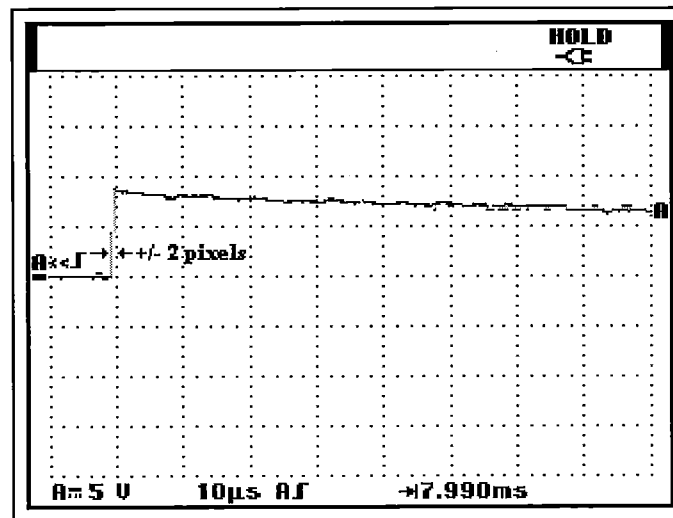


Figure 4-6. Time Base Verification

al-tbase.bmp

### 4.6.9 Input A Trigger Sensitivity Test

Proceed as follows to test the Input A trigger sensitivity:






1. Connect the test tool to the 5500A as for the previous test (see Figure 4-5).
2. Select the following test tool setup:
  - Reset the test tool
  - Using  and  change the sensitivity range to select manual sensitivity ranging, and lock the Input A sensitivity range on 2 V/div.
3. Using  select the time base indicated under the second column of Table 4-8.
4. Set the 5500A to source the leveled sine wave for the appropriate test tool model.
5. Adjust the 5500A output voltage until the displayed trace has the trigger amplitude indicated under the last column of Table 4-8.
6. Verify that the signal is well triggered.  
If it is not, press , then using  enable the up/down arrow keys for manual Trigger Level adjustment. Adjust the trigger level and verify that the signal will be triggered now. The trigger level is indicated by the trigger icon (J).
7. Continue through the test points.
8. When you are finished, set the 5500A to Standby.

Table 4-8. Input A Trigger Sensitivity Test Points

UUT Model	UUT Time base	5500A SC... MODE levsin		UUT Trigger Amplitude
		Initial Input Voltage	Frequency	
192	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	200 mV pp	60 MHz	1 div
	10 ns/div	400 mV pp	100 MHz	2 div
196	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	400 mV pp	100 MHz	1 div
	10 ns/div	800 mV pp	150 MHz	2 div
199	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	400 mV pp	200 MHz	1 div
	10 ns/div	800 mV pp	250 MHz	2 div

### 4.6.10 Input A AC Voltage Accuracy (HF) & Bandwidth Test

Proceed as follows to test the Input A high frequency automatic scope ac voltage measurement accuracy, and the bandwidth:












1. Connect the test tool to the 5500A as for the previous test (see Figure 4-5).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press ,  **RECALL**, select **SCREEN+SETUP**  **1**, press  **RECALL SETUP**.
  - Press , then press  **READING 1**, and select  on **A** |  **V ac**.
  - Press  to select autoranging (**AUTO** in upper right LCD edge)
  - Using  and  change the sensitivity range to select manual sensitivity ranging, and lock the Input A sensitivity range on 500 mV/div. (**AUTO** in upper right LCD edge disappears)
3. Set the 5500A to source a sine wave, to the first test point in Table 4-9.
4. Observe the Input A reading and check to see if it is within the range shown under the appropriate column.
5. Continue through the test points.
6. When you are finished, set the 5500A to Standby.

Table 4-9. HF AC Voltage Verification Points

UUT Model	5500A SC... MODE levsin		UUT Reading A
	Voltage	Frequency	
all	2.545 Vpp	1 MHz	835 mV to 965 mV
all	2.545 Vpp	25 MHz	790 mV to 1.010 V
Fluke 192	2.545 Vpp	60 MHz	>630 mV
Fluke 196	2.545 Vpp	100 MHz	>630 mV
Fluke 199	2.545 Vpp	200 MHz	>630 mV

#### 4.6.11 Input B Trigger Sensitivity Test

Proceed as follows to test the Input B trigger sensitivity:

1. Connect the test tool to the 5500A as shown in Figure 4-7.

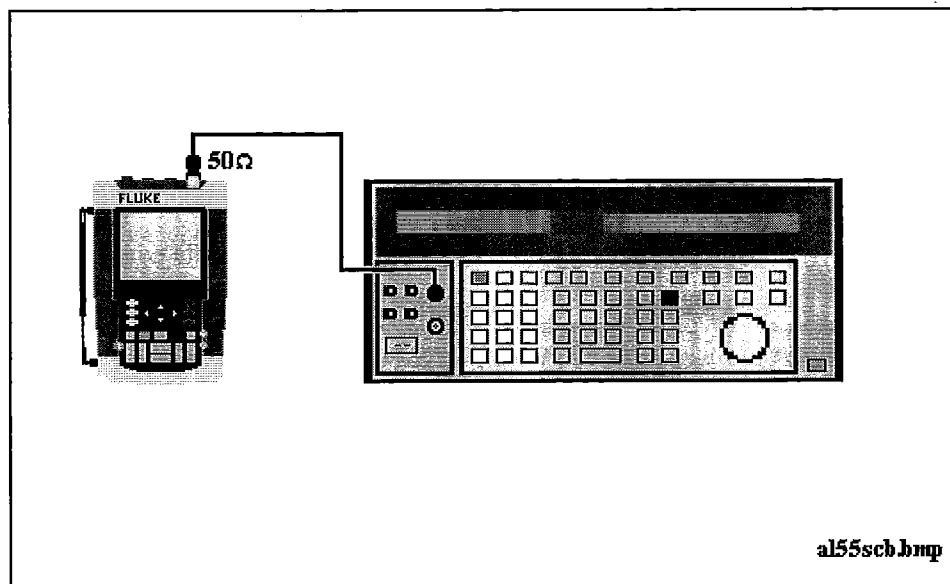


Figure 4-7. 5500A Scope Output to Test Tool Input B

al55scb.bmp

2. Select the following test tool setup:
  - Reset the test tool
  - Press **B** and use **F1** to turn Input B on.
  - Press **A** and use **F1** to turn Input A off.
  - Using **MOVE** move the Input B trace zero to the center grid line.
  - Press **TRIGGER** and use **F1** to select Input B as trigger source.
  - Using **RANGE V** and **mV RANGE** change the sensitivity range to select manual sensitivity ranging, and lock the Input B sensitivity range on 2 V/div.
3. Using **S TIME T10** select the time base indicated under the first column of Table 4-10.
4. Set the 5500A to source the leveled sine wave given in the first row of Table 4-10.
5. Adjust the 5500A output voltage until the displayed trace has the amplitude indicated under the appropriate column of Table 4-10.
6. Verify that the signal is well triggered.

If it is not, press **TRIGGER**, then using **FC** enable the up/down arrow keys for manual Trigger Level adjustment. Adjust the trigger level and verify that the signal will be triggered now. The trigger level is indicated by the trigger icon (⌋).
7. Continue through the test points.
8. When you are finished, set the 5500A to Standby.

Table 4-10. Input B Trigger Sensitivity Test Points

UUT Model	UUT Time base	5500A SC... MODE levsin		UUT Trigger Amplitude
		Initial Input Voltage	Frequency	
192	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	200 mV pp	60 MHz	1 div
	10 ns/div	400 mV pp	100 MHz	2 div
196	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	400 mV pp	100 MHz	1 div
	10 ns/div	800 mV pp	150 MHz	2 div
199	200 ns/div	100 mV pp	5 MHz	0.5 div
	10 ns/div	400 mV pp	200 MHz	1 div
	10 ns/div	800 mV pp	250 MHz	2 div

#### 4.6.12 Input B AC Voltage Accuracy (HF) & Bandwidth Test

Proceed as follows to test the Input B high frequency automatic scope ac voltage measurement accuracy, and the bandwidth:












1. Connect the test tool to the 5500A as for the previous test (see Figure 4-7).
2. Select the following test tool setup:
  - Recall the created SETUP 1 (see section 4.4.3): press ,  **RECALL**, select **SCREEN+SETUP** , press  **RECALL SETUP**.
  - Press , then press  **READING 2**, and select  on **B** |  **V ac**.
  - Press  to select autoranging (**AUTO** in upper right LCD edge)
  - Using  and  change the sensitivity range to select manual sensitivity ranging, and lock the Input B sensitivity range on 500 mV/div.
3. Set the 5500A to source a sine wave, to the first test point in Table 4-11.
4. Observe the Input B reading and check to see if it is within the range shown under the appropriate column of table 4-11.
5. Continue through the test points.
6. When you are finished, set the 5500A to Standby.

Table 4-11. HF AC Voltage Verification Points

UUT Model	5500A SC... MODE levsin		UUT Reading B
	Voltage	Frequency	
all	2.545 Vpp	1 MHz	835 mV to 965 mV
all	2.545 Vpp	25 MHz	790 mV to 1.010 V
Fluke 192	2.545 Vpp	60 MHz	>630 mV
Fluke 196	2.545 Vpp	100 MHz	>630 mV
Fluke 199	2.545 Vpp	200 MHz	>630 mV

#### 4.6.13 Video test

Only one of the systems NTSC, PAL, PALplus, or SECAM has to be verified.

Proceed as follows:

1. Connect the test tool to the TV Signal Generator as shown in Figure 4-8.

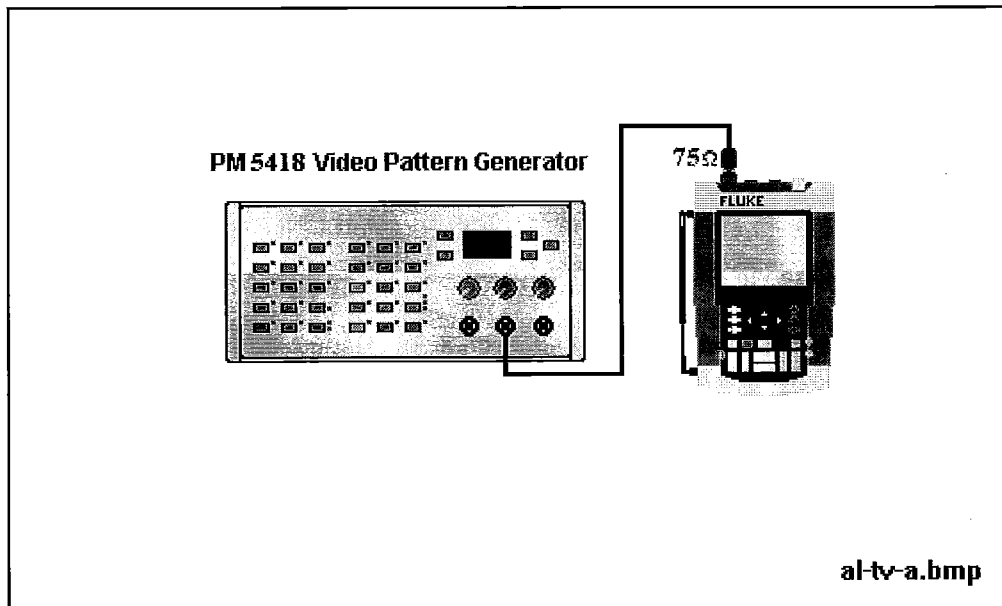





Figure 4-8. Test Tool Input A to TV Signal Generator

al-tv-a.bmp

2. Select the following test tool setup:
  - Reset the test tool
  - Press **TRIGGER**, then press **F4** to open the Trigger Options menu.
  - Choose **VIDEO on A...**, then from the shown opened menu choose **Polarity: POSITIVE | PAL ( or NTSC PALplus SECAM )**
  - Press **F2** to select **ALL LINES**
  - Press **F3** to enable the arrow keys for selecting the video line number.
  - Using **UP/DOWN** select line number:

622 for PAL, PALplus, or SECAM  
525 for NTSC.

- Using  and  set the Input A sensitivity to 2 V/div (the actual probe setting is 10:1).
  - Using  select the time base to 20  $\mu$ s/div.
3. Set the TV Signal Generator to source a signal with the following properties:
    - the system selected in step 2
    - gray scale
    - sync pulse amplitude > 0.7 div.
    - chroma amplitude zero.
  4. Observe the trace, and check to see if the test tool triggers on line number:
    - 622 for PAL or SECAM, see Figure 4-9
    - 525 for NTSC, see Figure 4-10.

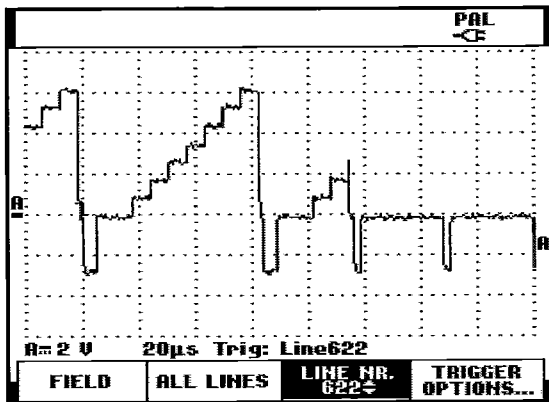


Figure 4-9. Trace for PAL/SECAM line 622

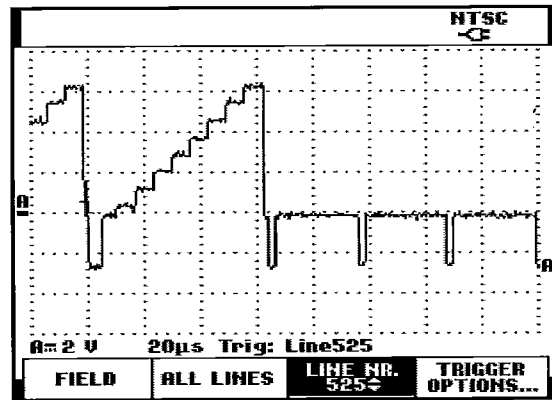




Figure 4-10. Trace for NTSC line 525

5. Using   select line number:
  - 310 for PAL or SECAM
  - 262 for NTSC
6. Observe the trace, and check to see if the test tool triggers on:
  - line number 310 for PAL or SECAM, see Figure 4-11.
  - line number 262 for NTSC, see Figure 4-12.

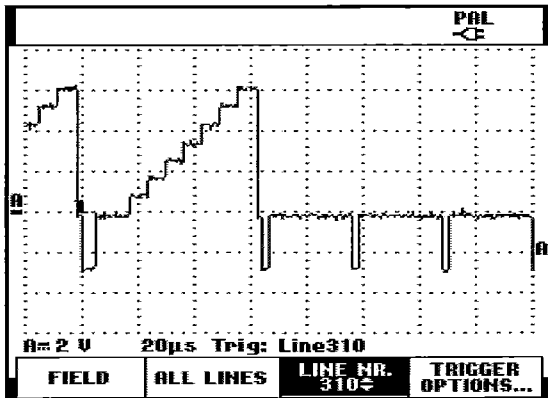


Figure 4-11. Trace for PAL/SECAM line 310

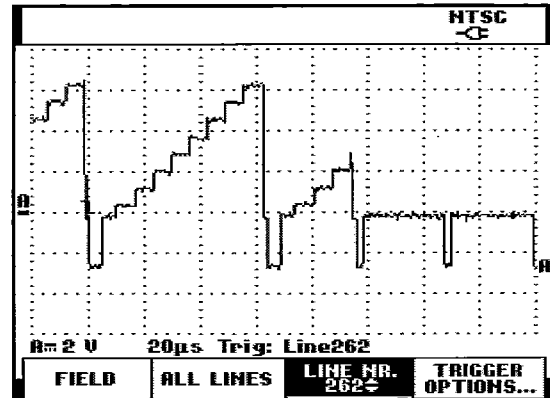


Figure 4-12. Trace for NTSC line 262

7. Apply the inverted TV Signal Generator signal to the test tool.  
Invert the signal by using a Banana Plug to BNC adapter (Fluke PM9081/001) and a Banana Jack to BNC adapter (Fluke PM9082/001), as shown in Figure 4-13.

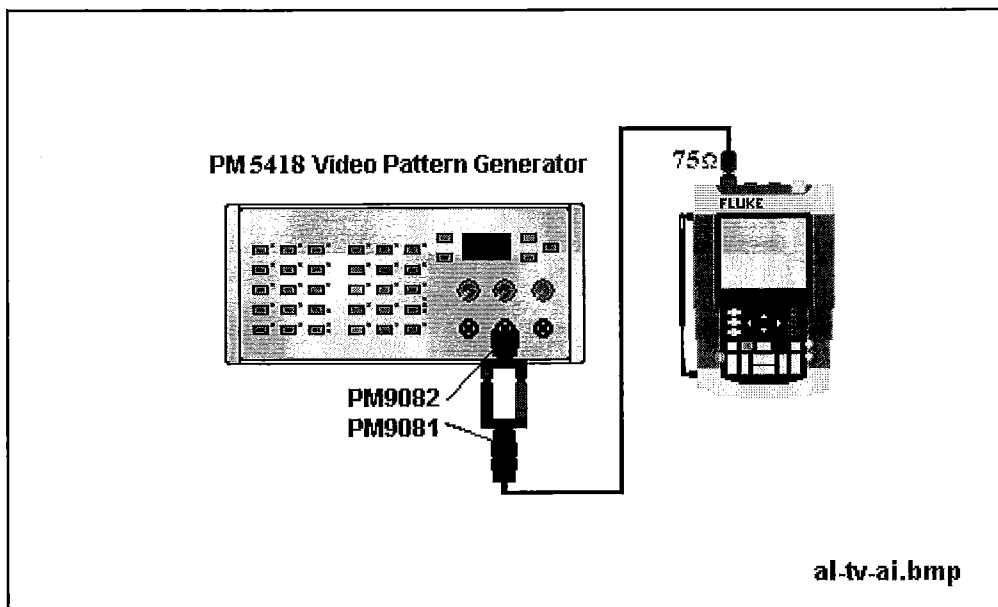


Figure 4-13. Test Tool Input A to TV Signal Generator Inverted

al-tv-ai.bmp

8. Select the following test tool setup:
  - Press **F4** to open the Trigger Options menu.
  - Choose **VIDEO on A...**, then from the shown opened menu choose  
**Polarity: NEGATIVE | PAL ( or NTSC PALplus SECAM )**
9. Using the arrow keys select line number 310 (PAL or SECAM) or 262 (NTSC)
10. Observe the trace, and check to see if the test tool triggers on line number 310 (PAL or SECAM, see Figure 4-14), or line number 262 (NTSC, see Figure 4-15).



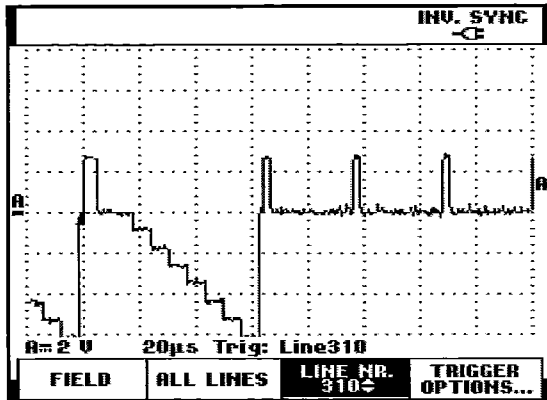


Figure 4-14. Trace for PAL/SECAM line 310 Negative Video

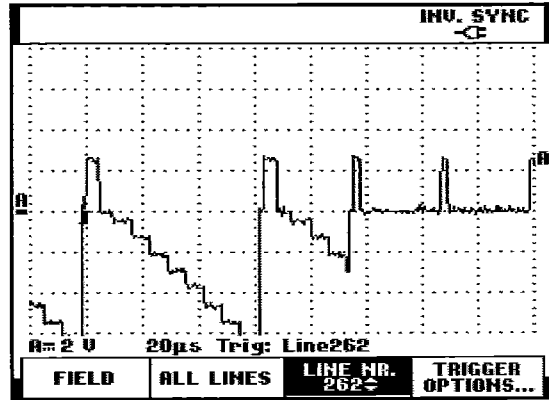


Figure 4-15. Trace for NTSC line 262 Negative Video

## 4.7 External Trigger Level Test

Proceed as follows:

1. Connect the test tool to the 5500A as shown in Figure 4-16.

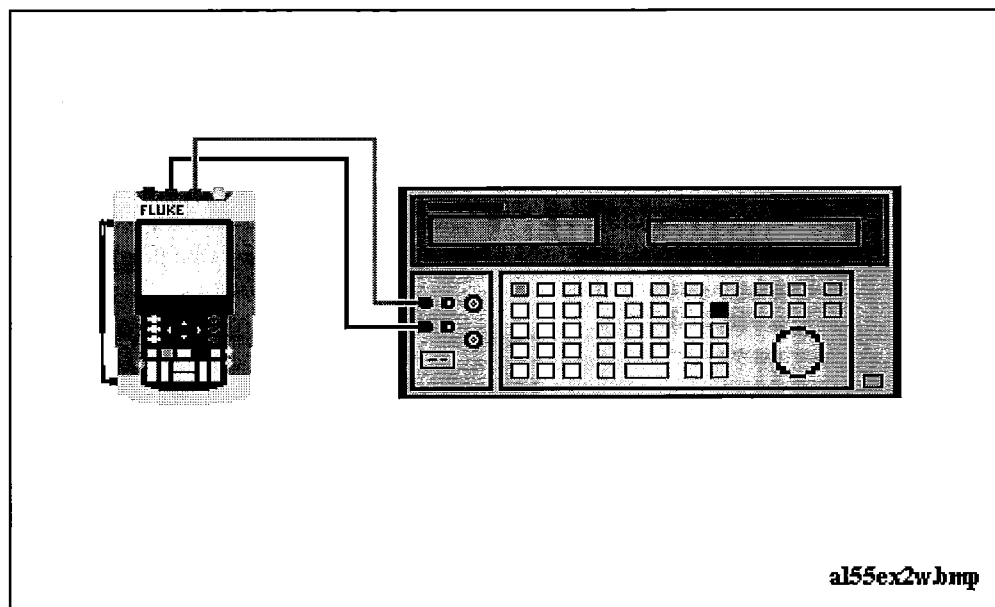


Figure 4-16. Test Tool Meter/Ext Input to 5500A Normal Output

2. Select the following test tool setup:
  - Reset the test tool
  - Press **TRIGGER**
  - Using **F4** select the **TRIGGER OPTIONS...** menu
    - Select **On Edges...** from the **TRIGGER OPTIONS** menu
    - Select **Update: Single Shot | Noise reject Filter: On**
  - Using **F1** **EDGE TRIG** select **Ext** .
  - Using **F2** **SLOPE** select positive slope triggering (trigger icon  $\lrcorner$  ).
  - Using **F3** **Ext LEVEL** select **1.2 V**
3. Set the 5500A to source 0.4V dc.
4. Verify that no trace is shown on the test tool display, and that the status line at the display top shows **SINGLE WAITING**. If the display shows the trace, and status **SINGLE HOLD** then press **HOLD RUN** to re-arm the test tool for a trigger.
5. Set the 5500A to source 1.7 V
6. Verify that the test tool is triggered by checking that the trace becomes visible. To repeat the test, start at step 3.
7. Set the 5500A to Standby.






## 4.8 Meter (DMM) Tests

### 4.8.1 Meter DC Voltage Accuracy Test

#### WARNING

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to test the meter dc voltage measurement accuracy:

1. Connect the test tool to the 5500A as for the previous test (see Figure 4-16).
2. Select the following test tool setup:
  - Press  (this key will toggle the menu bar on and off if the test tool is already in the meter mode)
  - Press  to open the Measurement menu, and select **V dc**
  - Press  to select MANUAL ranging; use   to select the ranges.
3. Set the range to the first test point in Table 4-12.
4. Set the 5500A to source the appropriate dc voltage.
5. Observe the reading and check to see if it is within the range shown under the appropriate column.
6. Continue through the test points.
7. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

**Table 4-12. Meter Volts dc Measurement Verification Points**






Range	5500A output V dc	Meter Reading
500.0 mV	+ 500 mV	497.0 to 503.0
	- 500 mV	-497.0 to -503.0
	0 mV	-0.5 to +0.5
5 V	+ 5.000 V	4.970 to 5.030
	- 5.000 V	-4.970 to -5.030
50 V	+ 50.00 V	49.70 to 50.30
	- 50.00 V	-49.70 to -50.30
500 V	+ 500.0 V	497.0 to 503.0
	- 500.0 V	-497.0 to -503.0
1100 V	+ 1000 V	0.990 to 1.010
	- 1000 V	-0.990 to -1.010

## 4.8.2 Meter AC Voltage Accuracy & Frequency Response Test

### Warning

**Dangerous voltages will be present on the calibration source and connecting cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to test the ac voltage measurement accuracy:



1. Connect the test tool to the 5500A as for the previous test (see Figure 4-16).
2. Select the following test tool setup:
  - Press  METER
  - Press  to open the Measurement menu, and select **V ac**
  - Press  to select MANUAL ranging; use   to select the ranges
3. Set the range to the first test point in Table 4-13.
4. Set the 5500A to source the appropriate ac voltage.
5. Observe the reading and check to see if it is within the range shown under the appropriate column.
6. Continue through the test points.
7. When you are finished, set the 5500A to 0 (zero) Volt, and to Standby.

**Table 4-13. Meter Volts AC Measurement Verification Points**

Range	5500A output V ac	Frequency	Meter Reading
500 mV	500.0 mV	60 Hz	494.0 to 506.0
		1 kHz	486.0 to 514.0
		10 kHz	>350.0
5 V	5.000 V	60 Hz	4.940 to 5.060
		1 kHz	4.860 to 5.140
		10 kHz	>3.500
50 V	50.00 V	60 Hz	49.40 to 50.60
		1 kHz	48.60 to 51.40
		10 kHz	>35.00
500 V	500.0 V	60 Hz	494.0 to 506.0
		1 kHz	486.0 to 514.0
		10 kHz	>350.0
1100 V (1.1 kV)	1000 V	60 Hz	0.980 to 1.020
		1 kHz	0.960 to 1.040
		10 kHz	> 0.700



### 4.8.3 Continuity Function Test

Proceed as follows:

1. Select the following test tool setup:
  - Press 
  - Press  to open the Measurement menu, and select **■ Continuity**
2. Connect the test tool to the 5500A as for the previous test (see Figure 4-16).
3. Set the 5500A to 20  $\Omega$ . Use the 5500A “COMP 2 wire” mode.
4. Listen to hear that the beeper is on.
5. Set the 5500A to 40  $\Omega$ .
6. Listen to hear that the beeper is off.
7. When you are finished, set the 5500A to Standby.

### 4.8.4 Diode Test Function Test

Proceed as follows to test the Diode Test function :

1. Select the following test tool setup:
  - Press 
  - Press  to open the Measurement menu, and select **■ Diode**
2. Connect the test tool to the 5500A as for the previous test (see Figure 4-16).
3. Set the 5500A to **1 k $\Omega$** . Use the 5500A “COMP 2 wire” mode.
4. Observe the main reading and check to see if it is within **0.4 V** and **0.6 V**.
5. Set the 5500A to **1 V dc**.
6. Observe the main reading and check to see if it is within **0.975 V** and **1.025 V**.
7. When you are finished, set the 5500A to Standby.

### 4.8.5 Ohms Measurements Test

Proceed as follows to test the Ohms measurement accuracy:

1. Connect the test tool to the 5500A as shown in Figure 4-17.

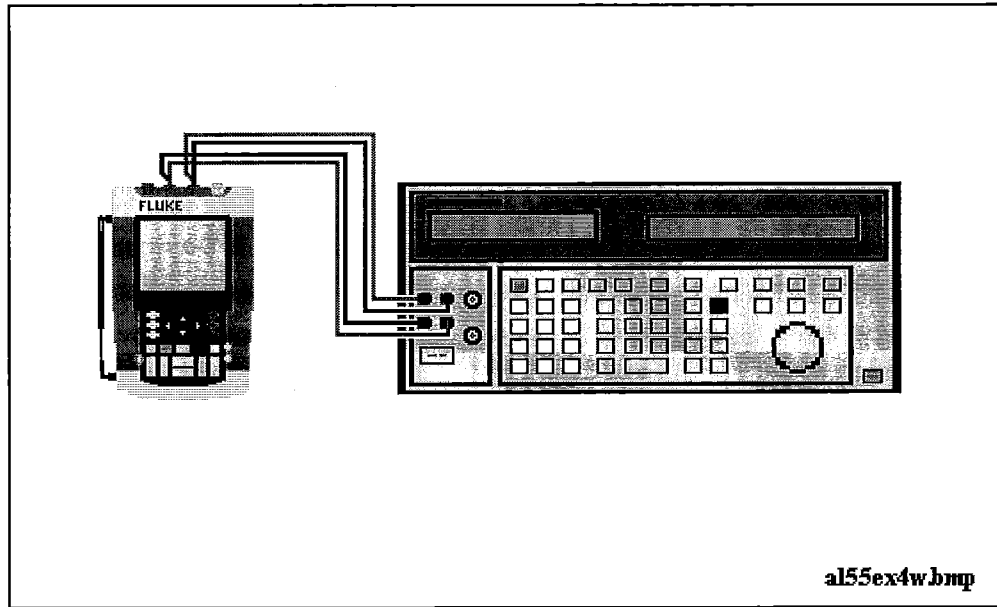


Figure 4-17. Test Meter Tool Input to 5500A Normal Output 4-Wire

1. Select the following test tool setup:
  - Press **METER**
  - Press **F1** to open the Measurement menu, and select **Ohms**
  - Press **F2** to select AUTO ranging.
2. Set the 5500A to source the appropriate resistance value for the first test point in Table 4-14.  
Use the 5500A “COMP 2 wire” mode for the verifications up to and including 50 kΩ. For the higher values, the 5500A will turn off the “COMP 2 wire” mode.
3. Observe the reading and check to see if it is within the range shown under the appropriate column.
4. Continue through the test points.
5. When you are finished, set the 5500A to Standby.

Table 4-14. Resistance Measurement Verification Points

5500A output	Meter Reading
0Ω	0.0 to 0.5
400Ω	397.1 to 402.9
4 kΩ	3.971 to 4.029
40 kΩ	39.71 to 40.29
400 kΩ	397.1 to 402.9
4 MΩ	3.971 to 4.029
30 MΩ	29.77 to 30.23

### **4.9 Probe Calibration Generator Test**

To verify the internal probe calibration square wave generator, you can do a Probe Calibration as described in section 5.8. If no square wave appears on the screen, either

- the probe is defective: try another probe, check the probe with an external voltage in a scope application,

or

- the internal square wave generator is defective.

This is the end of the Performance Verification Procedure.





# Chapter 5

## Calibration Adjustment

Title	Page
5.1 General.....	5-3
5.1.1 Introduction.....	5-3
5.1.2 Calibration number and date.....	5-3
5.1.3 General Instructions.....	5-3
5.1.4 Equipment Required For Calibration .....	5-4
5.2 Calibration Procedure Steps.....	5-4
5.3 Starting the Calibration.....	5-4
5.4 Contrast Calibration Adjustment .....	5-6
5.5 Warming Up & Pre-Calibration.....	5-7
5.6 Final Calibration .....	5-8
5.6.1 Input A LF-HF Gain .....	5-8
5.6.2 Input B LF-HF Gain.....	5-9
5.6.3 Input A&B LF-HF Gain.....	5-11
5.6.4 Input A&B Position .....	5-12
5.6.5 Input A&B Volt Gain .....	5-12
5.6.6 DMM Volt Gain .....	5-14
5.6.7 Input A& B, and DMM Zero .....	5-15
5.6.8 DMM Ohm Gain.....	5-15
5.6.9 Calculate Gain.....	5-16
5.7 Save Calibration Data and Exit.....	5-17
5.8 Probe Calibration .....	5-18



## 5.1 General

### 5.1.1 Introduction

The following information, provides the complete Calibration Adjustment procedure for the Fluke192/196/199 ScopeMeter test tool (referred to as test tool). The test tool allows closed-case calibration using known reference sources. It measures the reference signals, calculates the correction factors, and stores the correction factors in RAM. After completing the calibration, the correction factors can be stored in FlashROM.

The test tool should be calibrated after repair, or if it fails the performance test. The test tool has a normal calibration cycle of one year.

### 5.1.2 Calibration number and date

When storing valid calibration data in FlashROM after performing the calibration adjustment procedure, the calibration date is set to the actual test tool date, and calibration number is raised by one. To display the calibration date and - number:

1. Press **USER**, then press **F3** to see the Version & Calibration data (see Figure 5.1).
2. Press **F4** to return to exit the Version & Calibration screen.

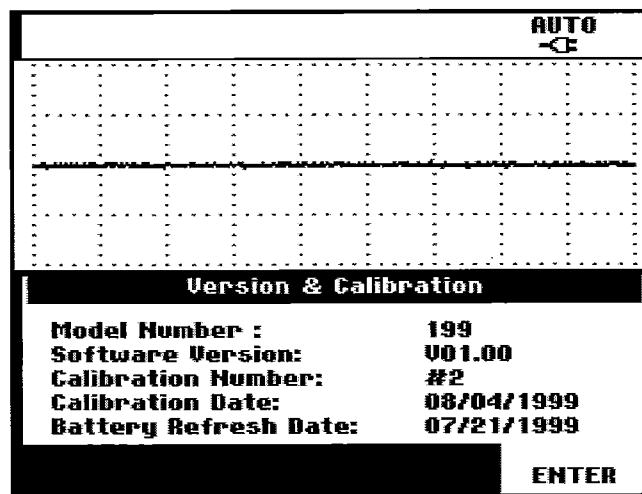


Figure 5-1. Version & Calibration Screen

vers&cal.bmp

*Note:*

*The calibration date and calibration number will not be changed if only the Contrast Calibration Adjustment and /or the Probe Calibration is done*

### 5.1.3 General Instructions

Follow these general instructions for all-calibration steps:

- Allow the 5500A to satisfy its specified warm-up period. For each calibration point , wait for the 5500A to settle.

- The required warm up period for the test tool is included in the WarmingUp & PreCal calibration step.
- Ensure that the test tool battery is charged sufficiently.
- Power the test tool via the BC190 Battery Charger/Power Adapter

### 5.1.4 Equipment Required For Calibration

The primary source instrument used in the calibration procedures is the Fluke 5500A. If a 5500A is not available, you can substitute another calibrator as long as it meets the minimum test requirements.

- Fluke 5500A Multi Product Calibrator, including SC300 or SC600 Oscilloscope Calibration Option.
- Stackable Test Leads (4x), supplied with the 5500A.
- 50Ω Coax Cable (2x), for example Fluke PM9091 (1.5m) or PM9092 (0.5m).
- 50Ω feed through termination, Fluke PM9585.
- Male BNC to Dual Female BNC Adapter (1x), Fluke PM9093/001.
- Dual Banana Plug to Female BNC Adapter (1x), Fluke PM9081/001.

### 5.2 Calibration Procedure Steps

To do a **complete** calibration adjustment you must do all following steps:



1. Select the Calibration Mode, section 5.3
2. Do the Contrast Calibration Adjustment, section 5.4
3. Do the WarmingUp & PreCalibration, section 5.5
4. Do the Final Calibration, section 5.6
5. Save the Calibration Data and Exit the calibration mode, section 5.7
6. Do the probe Calibration, section 5.8




The following **partial** calibrations are allowed:

- Contrast calibration, do the above-mentioned steps 1, 2, and 5.  
If during normal operation the display cannot be made dark or light enough, or if the display after a test tool reset is too light or too dark, you can do this calibration.
- Probe calibration, do the above-mentioned step 6.  
The probe calibration matches the probe to the used input channel.

### 5.3 Starting the Calibration




Follow the steps below to start the calibration:

1. Power the test tool via the power adapter input using the BC190 power adapter.
2. Check the actual test tool date, and adjust the date if necessary (the calibration date will become the test tool date when saving the calibration data):
  - Press  (toggles the menu bar on-off)
  - press  to open the **OPTIONS** menu

- using   select **DATE ADJUST...**
  - press  to open the **DATE ADJUST** menu
  - adjust the date if necessary.
3. Select the calibration mode.

The Calibration Adjustment Procedure uses built-in calibration setups, that can be accessed in the calibration mode.

To enter the calibration mode proceed as follows:

- Press and hold , press and release , release 





The display shows the **CAL MODE** (Calibration Adjustment) screen.

The display shows the calibration step **Warming Up (CL 0200)**, the calibration status **:IDLE (valid)** or **:IDLE (invalid)**, and the softkey menu.

Continue as indicated in section 5.2.

You can leave the calibration mode without changing the calibration data by turning the test tool off.

**Explanation of screen messages and key functions.**

When the test tool is in the calibration Mode, only the  to  soft keys, the  key, and the  key can be operated, unless otherwise stated.





The calibration adjustment screen shows the actual calibration step (name and number) and its status: **Cal Name (CL nnnn) :Status (...)**

**Cal Name** Name of the selected calibration step, e.g. **WarmingUp**  
**(CL nnnn)** Number of the calibration step

**Status (...)** can be:

- IDLE (valid)** After (re)entering this step, the calibration process is not started. The calibration data of this step are valid. This means that the last time this step was done, the calibration was successful. It does not necessarily mean that the unit meets the specifications related to this step!
- IDLE (invalid)** After (re)entering this step, the calibration process is not started. The calibration data are invalid. This means that the last time this step was done, the calibration was not successful. Most probably the unit will not meet the specifications if the actual calibration data are saved.
- BUSY aaa% bbb%** Calibration adjustment step in progress; progress % for Input A and Input B. During WarmingUp the elapsed time is shown.
- READY** Calibration adjustment step finished.
- Error :xxxx** Calibration adjustment failed, due to wrong input signal(s) or because the test tool is defective.  
If the error code is <5000 you can repeat the failed step.  
If the error code is ≥5000 you must repeat the complete final calibration (start at 5.6.1).


Functions of the keys F1-F4 are:

- |   |             |   |
|---|-------------|---|
|  | <b>PREV</b> | select the previous step                            |
|  | <b>NEXT</b> | select the next step                                |
|  | <b>CAL</b>  | start the calibration adjustment of the actual step |
|  | <b>EXIT</b> | leave the calibration mode                          |

















## 5.4 Contrast Calibration Adjustment

After entering the calibration mode the display shows:

**WarmingUp (CL 0200):IDLE (valid)**

Do not press  now! If you did, turn the test tool off and on, and enter the calibration mode again.

Proceed as follows to adjust the maximum display darkness (CL 0100), the default contrast (CL 0110) , and the maximum display brightness (CL 0120).

1. Press  three times to select maximum darkness calibration **Contrast (CL 0100):**
  2. Press  **CALIBRATE** . The display will show a dark test pattern, see Figure 5-2
  3. Using   adjust the display to the maximum darkness at which the test pattern is only just visible.
  4. Press  to return to the softkey menu.
  5. Press  to select default contrast calibration **Contrast (CL 0110):**
  6. Press  **CALIBRATE**. The display shows the test pattern at default contrast.
  7. Using   set the display to optimal (becomes default) contrast.
  8. Press  to return to the softkey menu.
  9. Press  to select maximum brightness calibration **Contrast (CL 0120):**
  10. Press  **CALIBRATE**. The display shows a bright test pattern.
  11. Using   adjust the display to the maximum brightness, at which the test pattern is only just visible.
  12. Press  to return to the softkey menu.
  13. Now you can either
    - Exit, if only the Contrast had to be adjusted. Continue at Section 5.7.
- or
- Do the complete calibration. Press  to select the next step (WarmingUp), and continue at Section 5.5.

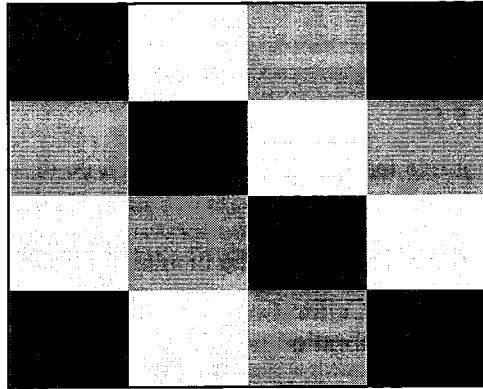


Figure 5-2. Display Test Pattern

## 5.5 Warming Up & Pre-Calibration

The WarmingUp & Pre-Calibration state will be entered after entering the calibration mode (section 5.3), or after selecting the next step if you have done the Contrast Calibration step CL 120 (section 5.4). The display will show **WarmingUp (CL 0200):IDLE (valid) or (invalid)**.

Unless you want to calibrate the display contrast only, you must always start the calibration adjustment at the **Warming Up (CL 0200)** step. Starting at another step will make the calibration invalid!

The WarmingUp & Pre-Calibration consists of a 30 minutes warming-up period, and several internal calibration adjustment steps that do not require input signals.

Proceed as follows to do the WarmingUp & Pre-Calibration:

1. Remove all input connections from the test tool.
2. Press **F3** to start the Warming-Up & Pre-Calibration.  
The display shows the calibration step in progress, and its status.  
The first step is **WarmingUp (CL 0200) :BUSY 00:29:59**. The warming-up period is counted down from 00:29:59 to 00:00:00. Then the remaining pre-calibration steps are performed automatically. The entire procedure takes about 60 minutes.
3. Wait until the display shows **End Precal: READY**  
The PreCal data have now been stored in FlashROM.  
If you turn off the test tool now by accident, turn it on again immediately; now you can select the calibration mode, and continue with step 4 below (press **F2 NEXT** several times, see 5.6).  
If you turn off the instrument now, and you do not turn on immediately, the test tool has cooled down, and you must repeat the WarmingUp and PreCalibration (select the calibration mode and start at CL 0200).
4. Press **F2 NEXT** and continue at Section 5.6.

### Error Messages

If error message **1000** is displayed during WarmingUp or PreCalibration step CL0215, the Main PCA hardware version is not suitable for the installed software version. Other error messages during WarmingUp or PreCalibration indicate that the test tool is defective, and should be repaired.


## 5.6 Final Calibration

Before starting the final calibration you must have done the WarmingUp & PreCalibration (section 5.5)!

The final calibration requires input conditions that will be described in each step. After starting a step, several steps that require the same input conditions will be done automatically. So if you start for example calibration step CL 0915, the calibration can include also step CL 0916, and at the end the display then shows CL 0916: READY


You must always start the Final Calibration at the first step, see Section 5.6.1. Starting at another step will make the calibration invalid!

If you proceeded to calibration step N (for example step CL 0620), then return to a previous step (for example step CL 0616), and then calibrate this step, the complete final calibration becomes invalid; then you must repeat the calibration starting at 5.6.1.

It is allowed to repeat a step that shows the status :READY by pressing  again.

### Error messages

Proceed as follows if an error message **ERROR: nnnn** is displayed during calibration:

- if  $nnnn < 5000$  then check input signal and test leads, and repeat the current step by pressing  again.
- if  $nnnn \geq 5000$  then check input signal and test leads, and repeat the final calibration starting at section 5.6.1.

If the error persists the test tool is defective.

### 5.6.1 Input A LF-HF Gain

Proceed as follows to do the Input A LF-HF Gain calibration:

1. Connect the test tool to the 5500A as shown in Figure 5-3.

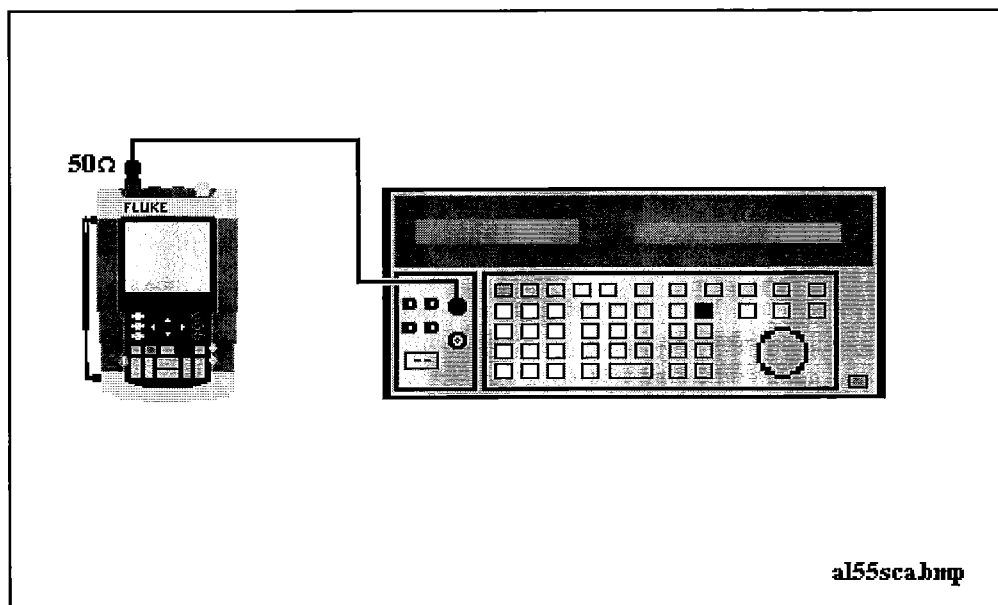


Figure 5-3. 5500A SCOPE Output to Test Tool Input A

al55sca.bmp



2. The display must show step CL 0654. If it does not, then press **F1** or **F2** to select the first calibration step in Table 5-1.
3. Set the 5500A SCOPE output to source the signal required for the first calibration point in Table 5-1.
4. Set the 5500A in operate (OPR) or standby (STBY) as indicated.
5. Press **F3** to start the calibration.
6. Wait until the display shows calibration status **:READY** .
7. Press **F2** to select the next calibration step, set the 5500A to the next calibration point signal, and start the calibration.  
Continue through all calibration points of Table 5-1.
8. When you are finished, set the 5500A to Standby.
9. Continue at Section 5.6.2.

**Table 5-1. Input A LF-HF Gain Calibration Points**

Cal step	UUT input signal	5500A Setting
CL 0654	none	STANDBY
CL 0400	0.5 Vpp square wave, 1 kHz	SCOPE edge, 0.5 Vpp, 1 kHz
CL 0704	none	STANDBY
CL 0420	0.5 Vpp square wave, 1 kHz	SCOPE edge, 0.5 Vpp, 1 kHz
CL 0480	0.5 Vpp sine wave, 50 kHz	SCOPE levsine, 0.5 Vpp, 50 kHz
CL 0481	0.5 Vpp sine wave Fluke 199: 221 MHz Fluke 196: 141 MHz Fluke 192: 91 MHz	SCOPE levsine, 0.5 Vpp, 221 MHz 221 MHz 141 MHz 91 MHz

### 5.6.2 Input B LF-HF Gain

Proceed as follows to do the Input B LF-HF Gain calibration:

1. Press **F2** to select the first calibration step in Table 5-2.
2. Connect the test tool to the 5500A as shown in Figure 5-4.

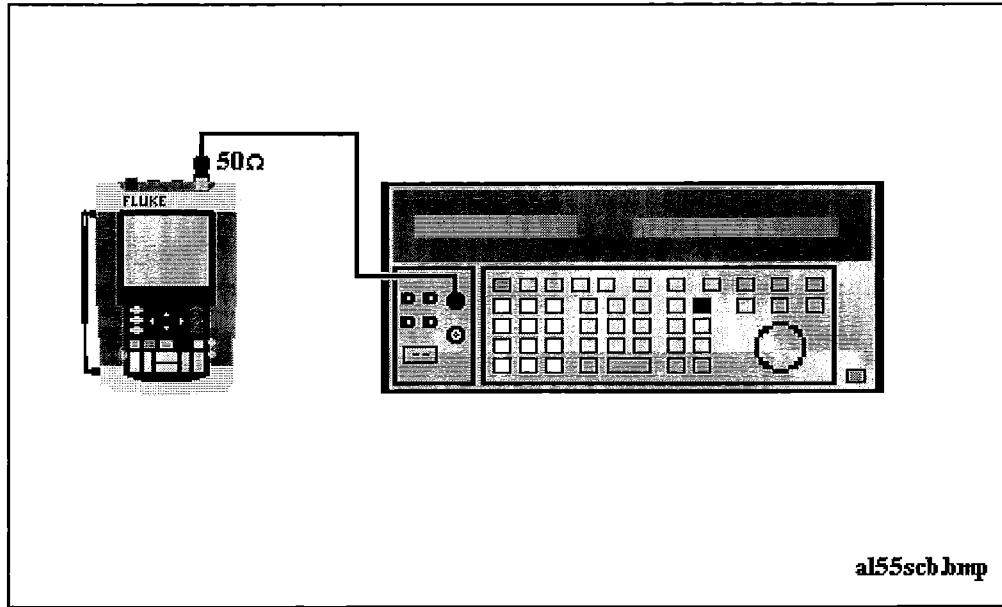


Figure 5-4. 5500A SCOPE Output to Test Tool Input B



3. Set the 5500A SCOPE output to source the signal required for the first calibration point in Table 5-2.
4. Set the 5500A in operate (OPR) or standby (STBY) as indicated.
5. Press  to start the calibration.
6. Wait until the display shows calibration status :READY .
7. Press  to select the next calibration step, set the 5500A to the next calibration point signal, and start the calibration. Continue through all calibration points of Table 5-2.
8. When you are finished, set the 5500A to Standby.
9. Continue at Section 5.6.3.

Table 5-2. Input B LF-HF Gain Calibration Points

Cal step	UUT input signal	5500A Setting
CL 0674	none	STANDBY
CL 0410	0.5 Vpp square wave, 1 kHz	SCOPE edge, 0.5 Vpp, 1 kHz
CL 0724	none	STANDBY
CL 0421	0.5 Vpp square wave, 1 kHz	SCOPE edge, 0.5 Vpp, 1 kHz
CL 0482	0.5 Vpp sine wave, 50 kHz	SCOPE levsine, 0.5 Vpp, 50 kHz
CL 0483	0.5 Vpp sine wave	SCOPE levsine, 0.5 Vpp,
	Fluke 199:           221 MHz	221 MHz
	Fluke 196:           141 MHz	141 MHz
	Fluke 192:           91 MHz	91 MHz

### 5.6.3 Input A&B LF-HF Gain

Proceed as follows to do the Input A&B LF-HF Gain calibration.

1. Press **F2** to select the first calibration step in Table 5-3.
2. Connect the test tool to the 5500A as shown in Figure 5-5.

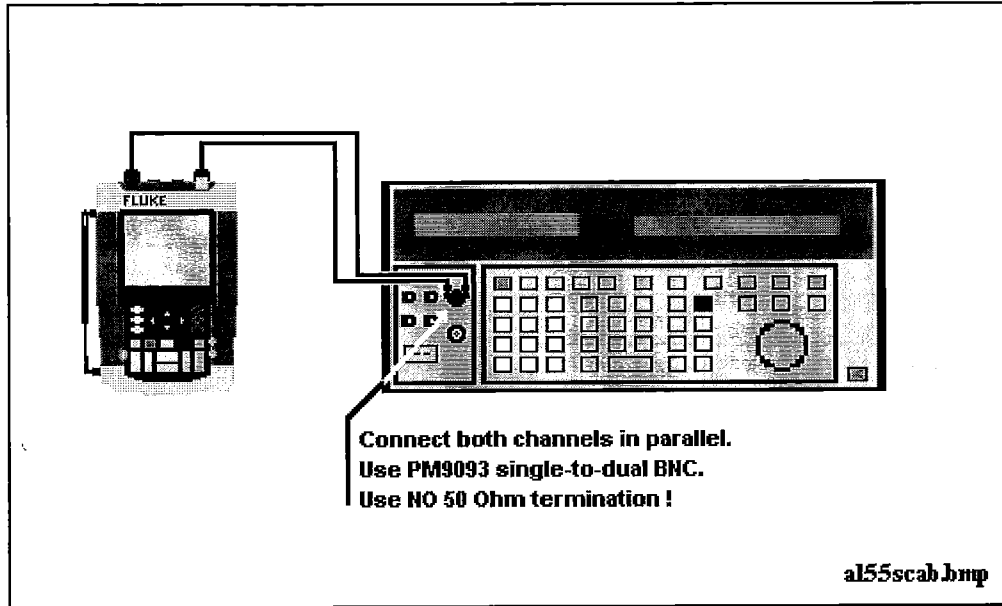


Figure 5-5. Test tool Input A&B to 5500 Scope Output

3. Set the 5500A to supply a 1 kHz square wave (SCOPE, MODE volt, SCOPE Z 1 M $\Omega$ ), to the first calibration point in Table 5-3.

#### **Warning**

**Dangerous voltages will be present on the calibration source and connection cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**



4. Set the 5500A to operate (OPR).
5. Press **F3** to start the calibration.
6. Wait until the display shows calibration status :**READY**.
7. Press **F2** to select the next calibration step, set the 5500A to the next calibration point, and start the calibration. Continue through all calibration points of Table 5-3.
8. Set the 5500A to Standby, and continue at Section 5.6.4.

**Table 5-3. Input A&B Gain Calibration Points**

Cal step	UUT input value (5500A SCOPE, MODE volt, SCOPE Z 1 M $\Omega$ , 1 kHz)
<b>CL 0660</b>	<b>300 mV</b> <b>software version V03.00 and newer only!</b>
CL 0604	500 mV
CL 0637	none      (5500 standby)
CL 0504	500 mV
CL 0624	none      (5500 standby)
CL 0600	25 mV
CL 0601	50 mV
CL 0602	100 mV
CL 0603	250 mV
<b>CL0662</b>	<b>2 V</b> <b>software version V03.00 and newer only!</b>
CL 0605	1 V
CL 0606	2.5 V
CL 0607	5 V
<b>CL0664</b>	<b>20 V</b> <b>software version V03.00 and newer only!</b>
CL 0608	10 V
CL 0609	25 V
CL 0610	50 V      (set 5500A to OPR!)

### 5.6.4 Input A&B Position

Proceed as follows to do the Input A&B Position calibration:

1. Press  to select calibration adjustment step **CL 0620**
2. Remove all Input A and Input B connections (open inputs).
3. Press  to start the calibration
4. Wait until the display shows calibration status **:READY**.
5. Continue at Section 5.6.5

### 5.6.5 Input A&B Volt Gain



**Dangerous voltages will be present on the calibration source and connection cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to do the Input A&B Volt Gain calibration.

1. Press **F2** to select the first calibration step in Table 5-4.
2. Connect the test tool to the 5500A as shown in Figure 5-6.

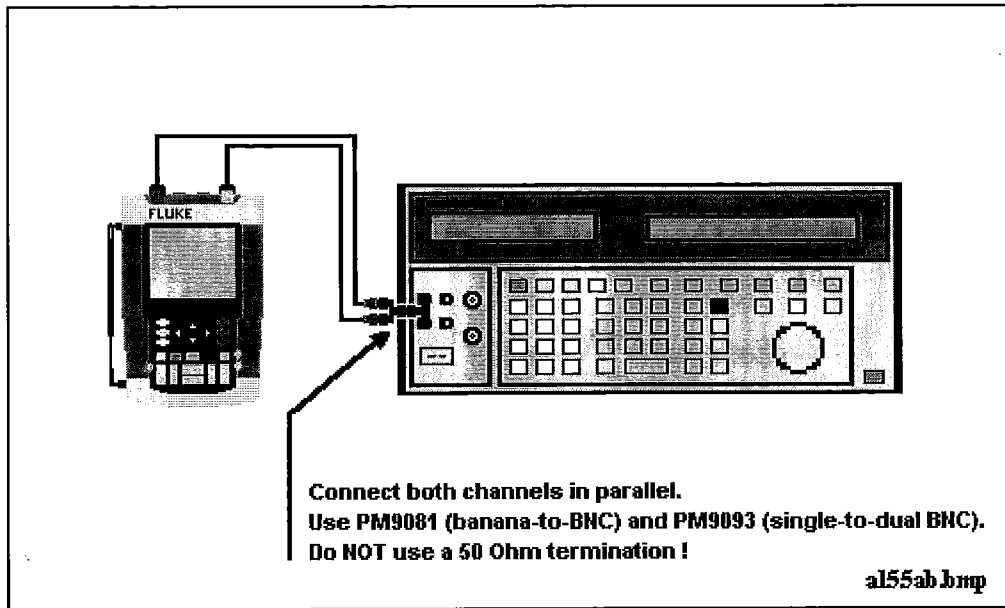


Figure 5-6. Test tool Input A&B to 5500 Normal Output

3. Set the 5500A to supply a DC voltage (NORMAL output), to the first calibration point in Table 5-4.
4. Set the 5500A to operate (OPR).
5. Press **F3** to start the calibration.
6. Wait until the display shows calibration status :**READY**.
7. Press **F2** to select the next calibration step, set the 5500A to the next calibration point, and start the calibration. Continue through all calibration points of Table 5-4.
8. Set the 5500A to Standby, and continue at Section 5.6.6.

Table 5-4. Input A&B Gain Calibration Points

Cal step	UUT input value (5500A NORMAL)
CL 0824	250 mV
CL 0800	12.5 mV
CL 0801	25 mV
CL 0802	50 mV
CL 0803	125 mV
CL 0805	500 mV
CL 0806	1.25 V
CL 0807	2.5 V
CL 0808	5 V


Cal step	UUT input value (5500A NORMAL)
CL 0809	12.5 V
CL 0810	25 V
CL 0811	50 V (set 5500A to OPR!)
CL 0812	125 V
CL 0813	250 V

### 5.6.6 DMM Volt Gain

#### Warning

**Dangerous voltages will be present on the calibration source and connection cables during the following steps. Ensure that the calibrator is in standby mode before making any connection between the calibrator and the test tool.**

Proceed as follows to do the DMM Volt Gain calibration.

1. Press  to select the first calibration step in Table 5-5.
2. Connect the test tool to the 5500A as shown in Figure 5-7.

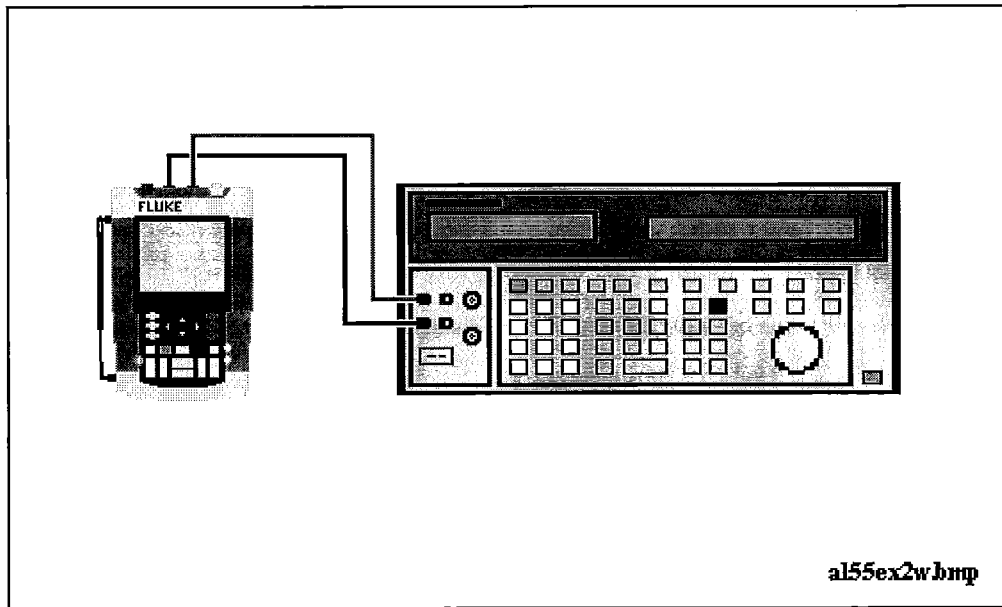




Figure 5-7. 5500A NORMAL Output to Test Tool Banana Input

al55ex2w.bmp

3. Set the 5500A to supply a DC voltage, to the first calibration point in Table 5-5.
4. Set the 5500A to operate (OPR).
5. Press  to start the calibration.
6. Wait until the display shows calibration status **:READY**.



7. Press  to select the next calibration step, set the 5500A to the next calibration point, and start the calibration. Continue through all calibration points of Table 5-4
8. Set the 5500A to Standby, and continue at Section 5.6.7.

**Table 5-5. DMM Gain Calibration Points**

Cal step	UUT input value (5500A NORMAL)
CL 0840	500 mV
CL 0849	2.5 V
CL 0841	5 V
CL 0842	50 V (set 5500A to OPR!)
CL 0843	500 V
CL 0844	1000 V


### 5.6.7 Input A& B, and DMM Zero

Proceed as follows to do the Input A&B, and the DMM Zero calibration:

1. Press  to select calibration adjustment step:  
**CL 0850** for software versions below V01.22  
**CL 0852** for software versions V01.22 and higher
2. Terminate Input A and Input B with a 50Ω or lower resistance termination.
3. Short circuit the banana jack Meter inputs properly (calibration includes Ohms zero!).
4. Press  to start the zero calibration
5. Wait until the display shows the status **:READY**.
6. Remove the input terminations.
7. Continue at Section 5.6.8.

### 5.6.8 DMM Ohm Gain

Proceed as follows to do the DMM Ohm Gain calibration:

1. Press  to select first calibration adjustment step in Table 5-6.
2. Connect the test tool to the 5500A as shown in Figure 5-8.  
 Notice that the sense leads must be connected directly to the test tool.

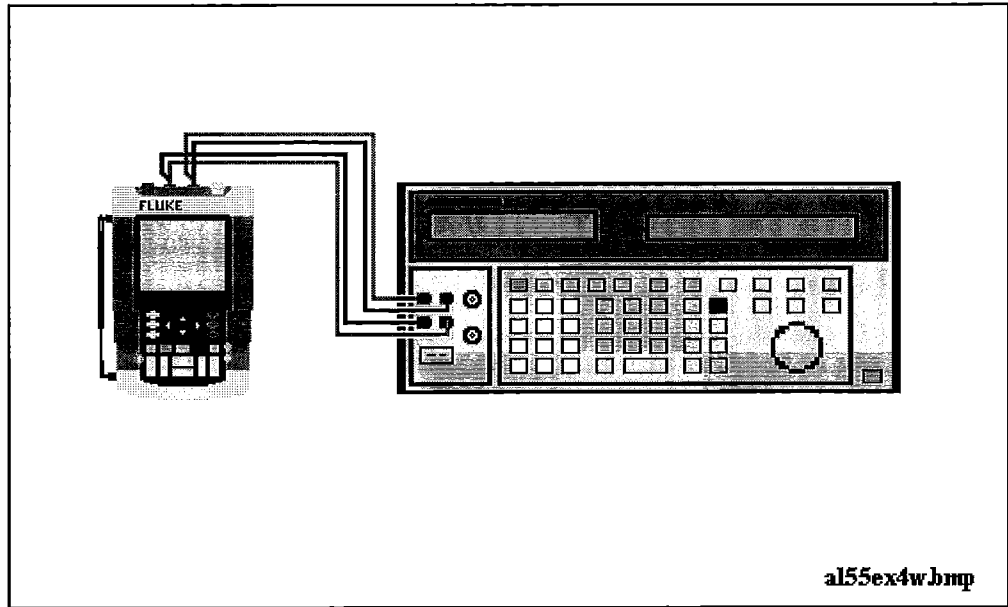


Figure 5-8. Four-wire Ohms calibration connections

3. Set the 5500A to the first test point in Table 5-6. Use the 5500A “COMP 2 wire” mode for the calibration adjustments up to and including 100 kΩ. For the higher values, the 5500A will turn off the “COMP 2 wire” mode.
4. Set the 5500A to operate (OPR).
5. Press **F3** to start the calibration.
6. Wait until the display shows the calibration status :READY.
7. Press **F2** to select the next calibration step, set the 5500A to the next calibration point, and start the calibration. Continue through all calibration points.
8. When you are finished, set the 5500A to Standby.
9. Continue at Section 5.6.9.


Table 5-6. Ohm Gain Calibration Points

Cal Step	UUT input Value (5500 NORMAL)
CL 0910	100 Ω
CL 0911	1 kΩ
CL 0912	10 kΩ
CL 0913	100 kΩ
CL 0914	1 MΩ
CL 0915	10 MΩ

### 5.6.9 Calculate Gain


1. Remove all test leads from the test tool inputs.
2. Press **F2** to select calibration adjustment step CL 0920.



3. Press  to start the calibration.
4. Wait until the display shows the calibration status :READY.
5. Continue at section 5.7

## 5.7 Save Calibration Data and Exit

Proceed as follows to save the calibration data, and to exit the Maintenance mode:

1. Remove all test leads from the test tool inputs.
2. Press  **EXIT**. The test tool will display:

**Calibration data valid.  
Save data and exit maintenance mode?**

*Note*

*Calibration data valid indicates that the calibration adjustment procedure is performed correctly. It does not necessarily mean that the test tool meets the characteristics listed in Chapter 2.*




3. Press  **YES** to save and exit.

*Note 1*

*After saving the calibration data, the calibration number and - date will be updated if the calibration data have been changed and the data are valid. The calibration number and - date will not change if:*

- the calibration mode is entered and left without doing a calibration adjustment.
- only the contrast calibration adjustment (5.4) and/or the probe calibration is done.

*Note 2*

*If you press  **NO**, the test tool returns to the calibration mode. You can either calibrate the test tool again, or press  **EXIT**,  **YES** to save and exit.*

### Possible error messages.

The following messages can be shown on the test tool display:

**WARNING: Calibration data not valid.  
Save data and exit maintenance mode?**

Proceed as follows:

- If you did the WarmingUp and Pre-Calibration successfully (section 5.5), and you want to store the Pre-Calibration data before continuing with the Final Calibration:

Press  **YES**.

When turning the test tool off and on again, it will show the message:

**The instrument needs calibration.  
Please contact your service center.**

The calibration date and number will not be updated. You must continue with the Final Calibration!


- To return to the Maintenance mode, if you want to repeat the complete calibration:  
Press **F3** **NO**.  
Now press **F1** until the display shows **WarmingUp (CL 0200):IDLE**, and calibrate the test tool, starting at section 5.5.
- If you want to exit and maintain the old calibration data:  
Turn the test tool off.

## 5.8 Probe Calibration

To meet full user specifications, you need to adjust the supplied red and gray VP190 voltage probes for optimal response.


To adjust the VP190 probes, do the following:

1. Connect the red probe from the red Input A BNC to the banana jacks. See figure 5-9

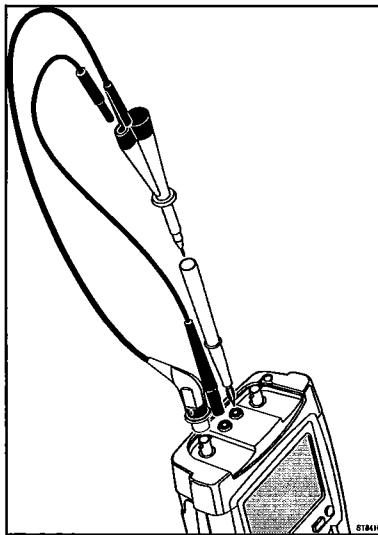

ST8416.WMF

Figure 5-9. 10:1 Probe Calibration Connection

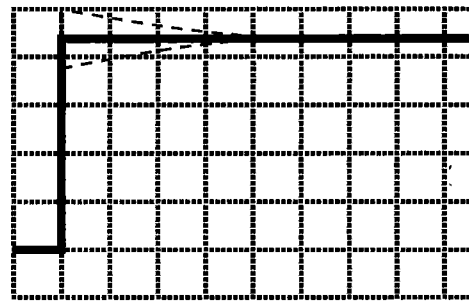

ST7991.WMF

Figure 5-10. 10:1 Probe Calibration

2. Press **A** , and then **F3** to open the **Probe on A** menu
3. Select Probe Type: **Voltage | Attenuation: 10:1 , Probe Cal...**
4. Press **F4** to start the probe calibration. A square wave appears on the screen. See Figure 5-10 (the lower half of the screen is covered with operating instructions).
5. Adjust the trimmer screw in the probe housing until a pure square wave is displayed.
6. Press **F4** to continue with automatic dc calibration.  
The test tool automatically calibrates itself to the probe. A message indicates that the dc calibration has been completed successfully.
7. Repeat the procedure for the gray VP190 probe, connected from the gray Input B BNC to the banana jacks.

# **Chapter 6**

## **Disassembling the Test Tool**

<b>Title</b>	<b>Page</b>
6.1. Introduction .....	6-3
6.2. Disassembly & Reassembly Procedures .....	6-3
6.2.1 Required Tools .....	6-3
6.2.2 Removing the Tilt Stand & Hang Strap.....	6-3
6.2.3 Replacing the Side-Strap, Changing the Side-Strap Position.....	6-3
6.2.4 Opening the Test Tool, Removing the Battery .....	6-3
6.2.5 Removing the Main PCA Unit.....	6-5
6.2.6 Removing the Display Assembly.....	6-6
6.2.7 Removing the Keypad and Keypad Foil.....	6-6
6.2.8 Disassembling the Main PCA Unit.....	6-7
6.2.9 Reassembling the Main PCA Unit.....	6-8
6.2.10 Reassembling the Test Tool .....	6-8



## 6.1. Introduction

This section provides the required disassembling procedures. The printed circuit assembly removed from the test tool must be adequately protected against damage.

### Warning

**To avoid electric shock, disconnect test leads, probes and power supply from any live source and from the test tool itself. Always remove the battery pack before completely disassembling the test tool. Only qualified personnel using customary precautions against electric shock should work on a disassembled unit with power on**

## 6.2. Disassembly & Reassembly Procedures

### 6.2.1 Required Tools

To access all the assemblies, you need the following:

- Static-free work surface, and anti-static wrist wrap.
- #10 Torx screwdriver.
- Cotton gloves (to avoid contaminating the lens, and the PCA).

### 6.2.2 Removing the Tilt Stand & Hang Strap

Use the following procedure to remove the tilt stand and hang strap (Figure 6-5, item 15 and item 10).

1. Set the tilt stand to a 45-degree position respective to the test tool bottom.
2. The hinge consists of a circular raised rim in the tilt stand that is located over a circular lowering in the bottom case. Pull sideward on the front edge of the tilt stand until the hinge releases. Then rotate the stand to the rear to remove it. You can remove the hangstrap now.

### 6.2.3 Replacing the Side-Strap, Changing the Side-Strap Position

The side-strap (figure 6-5, item 13 ) can be attached at the right or left side of the test tool. Use the following procedure to replace the strap, or to change the strap position.


1. To remove the strap, unfold the strap ends (provided with Velcro tape), and pull the ends out of the strap holders (item 14).
2. To change the strap position open the test tool (see Section 6.2.4), remove the strap with the strap holders, attach them to the other side, and reassemble the test tool.

### 6.2.4 Opening the Test Tool, Removing the Battery


Use the following procedure to open the test tool, and to remove the battery:

1. Loosen the two M3 Torx screws that secure the input cover (Figure 6-1).
2. Loosen the two M3 Torx screws that secure the bottom holster (Figure 6-2).
3. Pull off the input cover and the bottom holster (Figure 6-3).


4. Unscrew the two screws that lock the bottom case.
5. Lift the bottom case at the lower side to remove it.
6. Lift out the battery pack (Figure 6-4).
7. Unplug the cable leading to the Main PCA (pull the cable gently backwards).

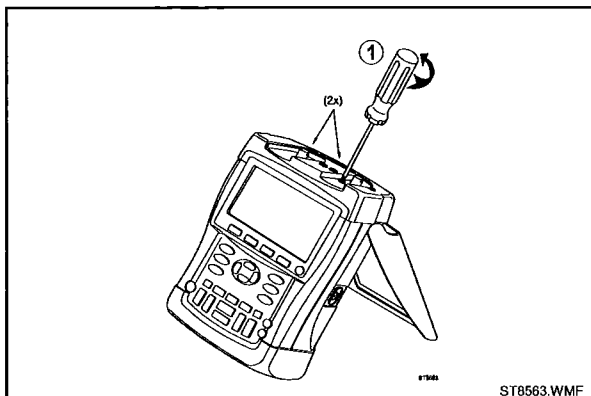


**Figure 6-1. Loosen 2 Input Cover Screws**

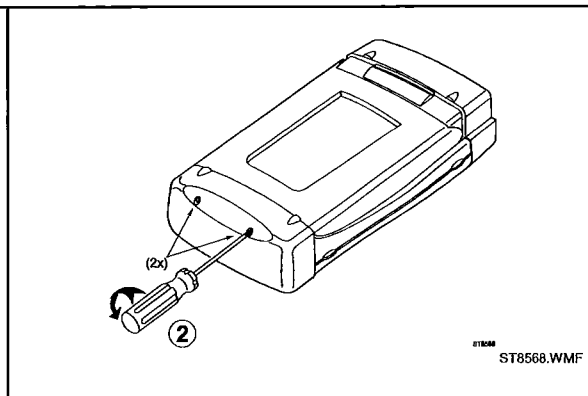

**Figure 6-2. Loosen 2 Bottom Holster Screws**

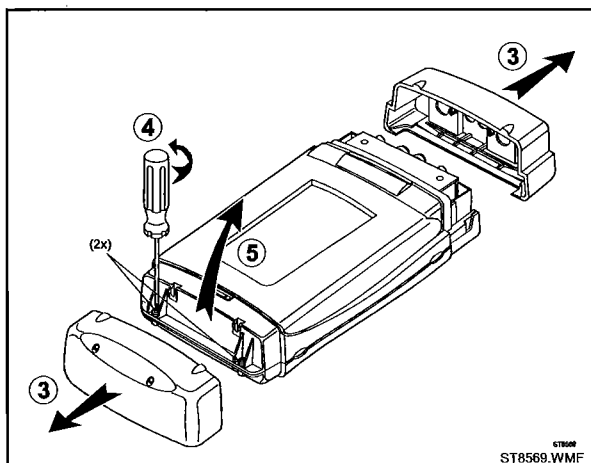

**Figure 6-3. Opening the Test Tool**

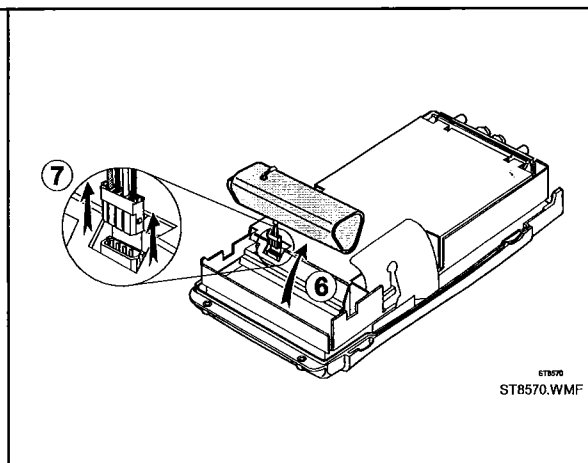

**Figure 6-4. Removing the Battery Pack**

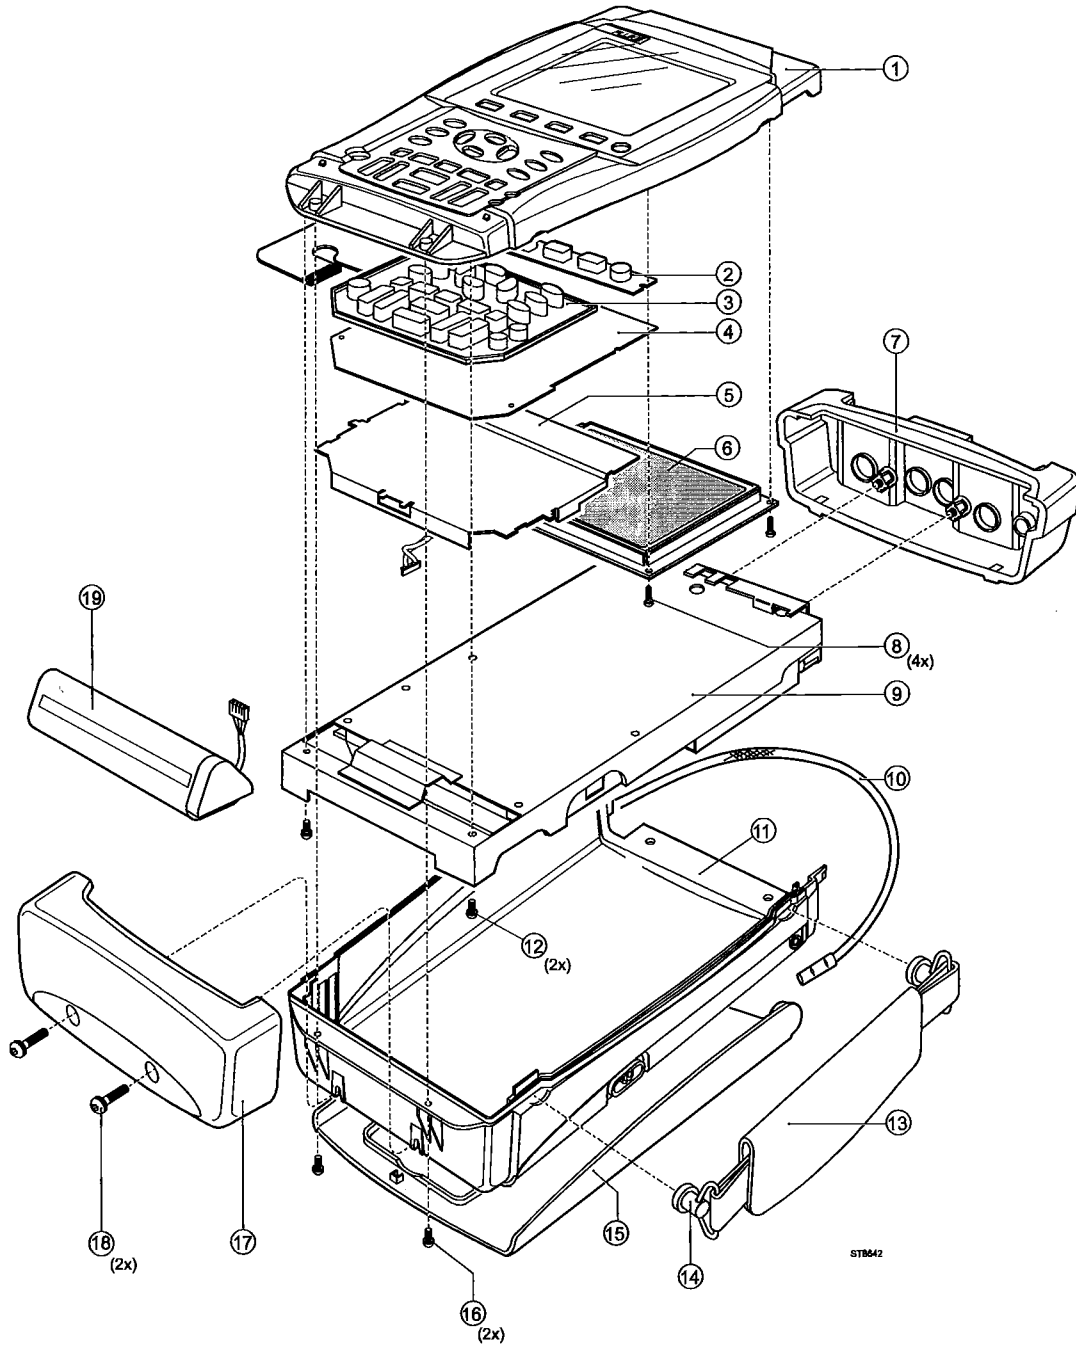


Figure 6-5. Final Assembly Details

### 6.2.5 Removing the Main PCA Unit

Referring to Figure 6-5, use the following procedure to remove the main PCA unit.

1. Open the test tool (see Section 6.2.4).
2. Disconnect the blue keypad foil (item 4) flat cable, and the white LCD (item 6) flex cable. Unlock each cable by lifting the connector latch at the left and right edge using a small screw-driver, see figure 6-6. The latch remains attached to the connector body.

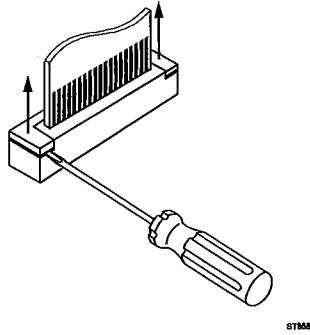


Figure 6-6. Flex Cable Connectors

ST8682.WMF

### Caution

To avoid contaminating the flex cable contacts with oil from your fingers, do not touch the contacts (or wear gloves). Contaminated contacts may not cause immediate instrument failure in controlled environments. Failures typically show up when contaminated units are operated in humid areas.

3. Unplug the two-wire backlight cable.

### Warning

If the battery pack or the power adapter is connected, the LCD backlight voltage on the wire cable is 400V ! (when the test tool is on).

4. Remove the two screws (item 12) that secure the Main PCA unit to the top case.
5. Slide the Main PCA unit in the input cover direction to remove it.

## 6.2.6 Removing the Display Assembly

There are no serviceable parts in the display assembly. Referring to Figure 6-5, use the following procedure to remove the display assembly.

1. Remove the main PCA unit (see Section 6.2.5).
2. Unscrew the four screws item 8.
3. Remove the display assembly (item 6). To prevent finger contamination, wear cotton gloves, or handle the display assembly by its edges.

## 6.2.7 Removing the Keypad and Keypad Foil

Referring to Figure 6-5, use the following procedure to remove the keypad and the keypad foil.

1. Remove the display assembly (see Section 6.2.6).
2. Remove the keypad support plate item 5.
3. Remove the keypad foil item 4. Notice the keypad foil positioning pins in the top case for reassembly.
4. Remove the keypads item 2 and item 3.



**Caution**

To avoid contaminating the keypad contacts, and the keypad foil contacts with oil from your fingers, do not touch the contacts (or wear gloves). Contaminated contacts may not cause immediate instrument failure in controlled environments. Failures typically show up when contaminated units are operated in humid areas.


**6.2.8 Disassembling the Main PCA Unit**

Referring to Figure 6-7, use the following procedure disassemble the main PCA unit.

1. Unscrew the four M3x10 Torx screws (items 9) that secure the shielding cover (item 8), and remove the shielding cover.
2. Unscrew the M3x15 standoffs (item 10) that secure the PCA to the shielding box item 1.
3. Remove the PCA from the shielding box.
4. To remove the isolation strip pull one end out of the sleeves in the PCA (pull at points A). Then pull out the other end (pull at points B).
5. To get access to the input circuits on the PCA, unscrew the Torx screws item 7 and remove the metal input circuit shielding boxes.

**Caution**

To avoid contaminating the main PCA with oil from your fingers, do not touch the contacts (or wear gloves). A contaminated PCA may not cause immediate instrument failure in controlled environments. Failures typically show up when contaminated units are operated in humid areas.

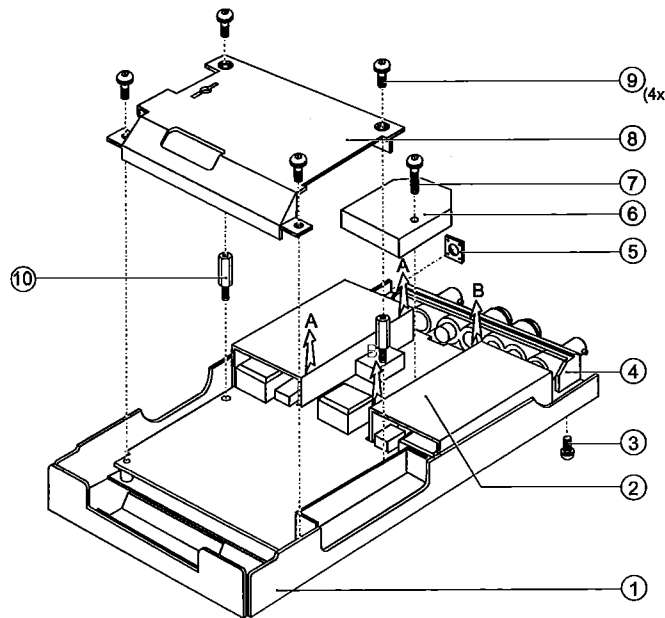

518676

ST8676.WMF

**Figure 6-7. PCA Unit Assembly**

### 6.2.9 Reassembling the Main PCA Unit

Reassembling the main PCA unit is the reverse of disassembly (see figure 6.7). However you must follow special precautions when reassembling the main PCA unit.

1. Install the metal input circuit shielding boxes (items 6) carefully. Take care that the notches at the edges of the boxes match the holes in the PCA. The plate spring in the Input A and Input B box must touch the C-ASIC N1000 (Input A) or N1200 (Input B) for cooling. Do not bend the springs!

#### Caution

**A good thermal coupling between the C-ASIC's (N1000, N1200) and the input boxes is achieved by self adhesive thermal conductive pads. These pads can either be stuck on the spring in the box, or on the C-ASIC. If stuck on the C-ASIC, you can re-use the pad when replacing the C-ASIC.**

2. Attach the isolation strip carefully! Insert the ends of the strip into the slots in the PCA, and push firmly until the strip is in its original position.
3. Put the PCA in the shielding box, and fasten the 2 hexagonal standoffs (item 10).
4. Attach the shielding cover (item 8). Ensure that the small optical gate PCA mounted on the main PCA sticks through the slot in the shielding cover.

#### Caution

**A good thermal coupling between the S-ASIC N2001 and the shielding cover is achieved by a self adhesive thermal conductive pad. This pad can either be stuck on the spring in the shielding cover, or on the S-ASIC. If stuck on the S-ASIC, you can re-use the pad when replacing the S-ASIC.**

5. Ensure that the rubber sealing ring (item 5) for the power connector is present

### 6.2.10 Reassembling the Test Tool

Reassembling the test tool is the reverse of disassembly. However you must follow special precautions when reassembling the test tool. Refer to figure 6-5.

Reassembling procedure for a completely disassembled unit:

1. Clean the inside of the lens with a moist soft cloth if necessary. Keep the lens free of dust and grease.
2. Install the keypads item 2 and item 3. Press the edges of the keypads into the sealing groove of the top case. Ensure that the keypads lay flat in the top case, and that all keys are correctly seated.
3. Install the keypad foil item 4. Align the positioning holes in the keypad foil to the positioning pins in the top case.
4. Install the keypad support plate item 5.
5. Clean the display glass with a moist soft cloth if necessary. Install the display assembly and fasten the 4 screws (item 8).
6. Slide the Main PCA unit into the Top Case from the display end. Make sure that the tabs on the Shielding Box go into the slots in the top of the Top Case. Fasten with the 2 screws (item 12).

7. Verify that the backlight wires are twisted to minimize interference voltages. Reattach the backlight cables. Reattach the LCD flex cable, secure that cable in the connector with the connector latch.
8. The keypad foil is provided with a grounded shielding flap that covers the backlight cable. This decreases the electromagnetic emission. The flap should cover the cable connection area and lay over the PCA shield. Reattach the keypad flex cable, secure the flat cable in the connector with the connector latch.
9. Install the battery pack, and re-attach the cable.
10. Install the bottom case with the strap holders and strap, and fasten the 2 screws item 16.
11. With the bottom cover up, start the screws (item 18) into the square nuts, then press in on the bottom holster to latch the tabs on the top case. Finish tightening the 2 screws.
12. Slide the input cover on and fasten with the 2 M3 Torx screws.
13. Calibrate the display contrast (see section 5.4) if you replaced the display.



# Chapter 7

## Corrective Maintenance

Title	Page
7.1 Introduction.....	7-3
7.2 Starting Fault Finding.....	7-4
7.3 Charger Circuit.....	7-5
7.4 Starting with a Dead Test Tool.....	7-6
7.4.1 Test Tool Completely Dead.....	7-7
7.4.2 Test Tool Software Does not Run.....	7-7
7.4.3 Software Runs, Test Tool not Operative.....	7-8
7.5 Miscellaneous Functions.....	7-8
7.5.1 Display and Back Light.....	7-8
7.5.2 Fly Back Converter.....	7-9
7.5.3 Slow ADC, +3V3SADC.....	7-10
7.5.4 Keyboard.....	7-11
7.5.5 Optical Port (Serial RS232 Interface).....	7-12
7.5.6 Channel A, Channel B Measurements.....	7-12
7.5.7 Meter Channel (Ext Trigger, Probe Cal).....	7-13
7.5.8 Input Signal Acquisition.....	7-16
7.5.9 ADC's.....	7-18
7.5.10 Digital Control & Memory.....	7-19
7.5.11 Buzzer Circuit.....	7-20
7.5.12 RAM Test.....	7-20
7.5.13 Power ON/OFF.....	7-21
7.6 Loading Software.....	7-21



## 7.1 Introduction

This chapter describes troubleshooting procedures that can be used to isolate problems with the test tool.




**Opening the case may expose hazardous voltages. For example, the voltage for the LCD back light fluorescent lamp is >400V! Always disconnect the test tool from all voltage sources and remove the batteries before opening the case. If repair of the disassembled test tool under voltage is required, it shall be carried out only by qualified personnel using customary precautions against electric shock.**

- If the test tool fails, first verify that you are operating it correctly by reviewing the operating instructions in the Users Manual.
- Use the following ground when making measurements for fault finding:
  - Input A input circuit, floating part (circuit diagram Figure 9-1): Red BNC common to PCA wire
  - Input B input circuit, floating part (circuit diagram Figure 9-2): Gray BNC common to PCA wire
  - Meter input circuit, floating part (circuit diagram Figure 9-3): Black banana to PCA wire
  - All other circuits (non floating): metal shield near the connectors, or the metallized holes for the fastening screws
- To access the Main PCA for measurements, proceed as follows:
  1. Remove and disassemble the Main PCA unit, see Section 6.
  2. Connect the Display Assembly flat cable, the Backlight cable, and the Keypad Foil flex cable to the Main PCA unit. The test tool without the case is operative now. Figure 7-1 shows the operative opened test tool with removed metal shielding of the Channel B and of the Meter input circuit.
  3. Power the PCA via the Power Adapter and/or battery pack. Watch out for short circuiting due to metal parts on your desk!!

### Caution

**Do not power the unit when the LCD backlight cable is disconnected. The output voltage of the backlight voltage converter possibly can cause damage to the Main PCA when no load is connected for more than some minutes.**

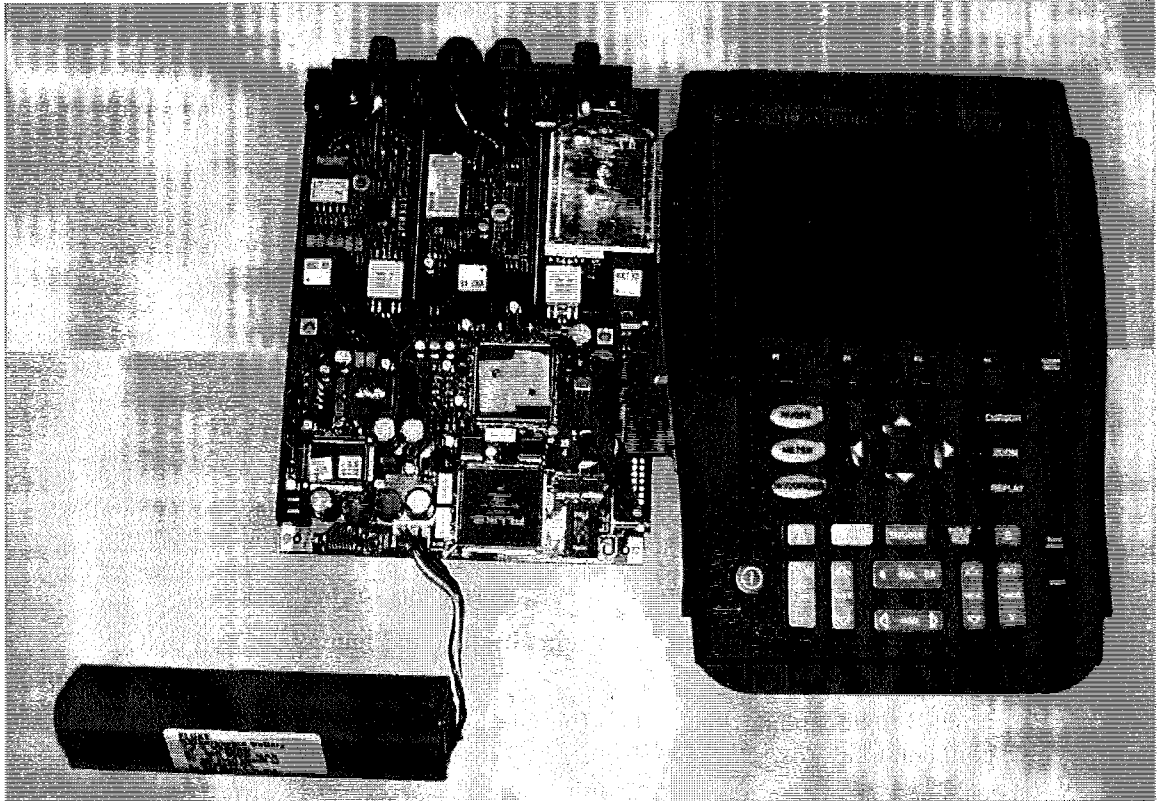

**Figure 7-1. Operative Test Tool without Case**

alf-open.bmp

## 7.2 Starting Fault Finding.

After each step, continue with the next step, unless stated otherwise.

Power the test tool by the battery pack only, then by the power adapter only.

1. The test tool operates with the power adapter, but not with the battery only: install a charged battery (VBAT = 7.2 V nominal), and check the connections between the battery and the test tool (X4100, R4101).
2. The test tool operates with the battery pack, but not with the power adapter only, and the battery pack is not charged by the test tool: continue at 7.3 Charger Circuit.
3. The test tool operates neither with the battery pack, nor with the power adapter: continue at 7.4 Starting with a Dead Test Tool.
4. Particular functions are wrong: continue at 7.5 Miscellaneous Functions.

**Table 7-1. Starting Fault Finding**

	<b>Power adapter</b>	<b>Battery Pack</b>	<b>Check</b>
1	OK	NOT OK	Battery pack, connector, sense resistor
2	NOT OK	OK	See Section 7.3 Charger Circuit
3	NOT OK	NOT OK	See Section 7.4 Starting with a Dead Test Tool
4	Partly OK	Partly OK	See Section 7.5 Miscellaneous Functions



## 7.3 Charger Circuit

See circuit diagram Figure 9-8.

1. Power the test tool by the power adapter only. Do not switch on.
2. Check M4106 for 15...23 V; if wrong, check the power adapter input circuit.
3. Check VBAT (X4100:1) for about 11 V; if correct go to 4.  
Check P-ASIC N4000:16 for a 13 Vpp (about 20 to 7 V) pulse signal (basic frequency 100 kHz, missing pulses allowed).  
If wrong, check the charger circuit parts, and the connections to the P-ASIC N4000; replace N4000.
4. Connect a charged battery. VBAT (X4100: 1) must be now about 8 V.
5. Check P-ASIC N4000: 18 (P7VCHA) for  $\cong 7V$ .  
If wrong, check N4000:20 for  $\cong 19V$  (supplied via R4110). If 19V on pin 20 is correct, check C4112, replace N4000.

*P7VCHA is the supply voltage for the charger control circuit in N4000. It is derived from VADAPTER (pin 20), by an internal linear supply in P-ASIC N4000.*

6. Check N4000:12 (NETVALD) for +2.7V, and M4101 (MAINVAL) for +3.3V.

*The MAINVAL signal indicates to the D-ASIC that a correct power adapter voltage is connected. The NETVALD and MAINVAL signal enable control of the P-ASIC CHARGE circuit (controls V4102 by 100 kHz, 13 Vpp square wave).*

If correct continue at step 7.

If wrong, then:

- a. Check +3V3GAR (P-ASIC N4000:66) for +3.3 V.  
If wrong, possibly caused by V4000, R4000, short to ground, loose pins of N4000, N4000 defective.
- b. Check N4000:8 (VADALOW) for  $\cong 1.6 V$   
If wrong:
  1. Check R4120 and connections.  
*The P-ASIC supplies a current to R4120. The current source uses REFPWM2 and IREF, see 2 and 3 below.*
  2. Check N4000:73 (REFPWM2, supplied by N4000) for +3V3. Check N4000:72 (REFP) for 1.2 V, check V4114 and connected parts.
  3. Check N4000:74 (IREF) for 1.6V.  
If wrong, possibly caused by R4021, loose pin 74, or N4000 defective.
- c. Check +3V3SADC on N4000:65 for +3.3V. If not OK see section 7.5.3 +3V3SADC.

7. Check N4000:80 (CHARCURR):

*The CHARCURR signal controls the battery charge current.*

If < 2.7V continue at step 7a.

If > 2.7V continue at step 7b.

- a. Check if charger FET V4102 is controlled by a  $\cong 100$  kHz, 13 Vpp square wave (20 to 7 V) from P-ASIC N4000:16 (CHAGATE). If correct check V4102.  
If wrong, check:

1. the voltage between N4000:4 and 9 for  $\cong 140$  mV. If wrong, check R4102, R4103 and connections.
2. the voltage between N4000:5 and 9 for  $\cong 400...500$  mV at about 20 °C. If wrong check the NTC in the battery pack for  $\cong 10$  k $\Omega$  at 20 °C (X4100 pins 3 and 2); check connections to N4000.
3. N4000:6 (IMAXCHA) for  $\cong 400$  mV. If wrong check R4114, and connections to N4000.
4. N4000:7 (VBATHHIGH) for  $\cong 1.8$  V. If wrong check R4113, and connections to N4000.

*Steps 1 to 4 verify that N4000 supplies a 47  $\mu$ A current to each of the resistors R4102, battery NTC, R4113, R4114, and R4120.*

5. Check N4000:9 for the same voltage as on M4105 (sense resistor R4101).
  6. If 1 to 5 above correct, then most probably N4000 is defective.
- b. Connect N4000:80 for a short time (max. 1 minute) to ground, and see if N4000:16 then shows a 100 kHz pulse signal.  
If it does not, continue at step 7d.  
If it does, the CHARCURR control signal is wrong, continue at step 7c.
- c. Check the CHARCURR control signal:

*The CHARCURR voltage on N4000:80 is controlled by a pulse width modulated voltage (CHARCUR) from the D-ASIC D3500 (pin 40). The D-ASIC measures the required signals needed for control, via the Slow ADC (see circuit diagram Figure 9-9).*

1. Check the SLOW ADC, see Section 7.5.3.
  2. Check VGARVAL (N4000:64), for +3.3V. If wrong, check if the line is shorted to ground. If it is not, then replace N4000.
  3. Trace the CHARCURR signal path to R4121, R3313 and D3500 (D-ASIC) output pin 40. Check the PWM output for 3.3 V pulses, see also 7.5.10.
- d. Check the following:
1. Parts and connections to N4000:10 and :11
  2. Connections between V4102 and N4000:16 (CHAGATE).
  3. The voltage at N4000:19, VCHDRIVE for  $\cong 15...20$  V.
  4. The voltage at N4000:43 for a triangle wave form, 80...100 kHz, +1.6 V to +3.2 V.
  5. If 1 to 4 correct, then replace N4000.



## **7.4 Starting with a Dead Test Tool**

If the test tool cannot be turned on, when powered by a charged battery pack, or by the power adapter, follow the steps below to locate the fault.

1. Connect a power adapter and a charged battery pack.
2. Turn the test tool on and listen if you hear a beep.
  - a. If you hear no beep, continue at 7.4.1 Test Tool Completely Dead.
  - b. If you hear a weak beep, continue at 7.4.2 Test Tool Software Does not Run.

- c. If you hear a “normal” beep, the software runs, but obviously the test tool is not operative. Continue at 7.4.3 Software Runs, Test Tool not Operative.

### **7.4.1 Test Tool Completely Dead**

1. Turn the test tool off. Keep the keys  and  pressed, and turn the test tool on again. This will start up the mask software.  
If you still hear no beep, continue at step 2.  
If you hear a weak beep now, continue at Section 7.4.2.
2. Check Keyboard ROW1 (MS3603 next to X3600) for a 3.3 V, 80 kHz square wave.  
If wrong, continue at step 3.  
If correct, the mask software runs, but the buzzer circuit does not function. Check the buzzer function (Section 7.5.10), and then continue at Section 7.4.2.
3. Check P-ASIC N4000:60 (VBATSUP) for >4.8V. If wrong check R4112, and connections to battery pack.
4. Check P-ASIC N4000:66 (+3V3GAR) for +3.3V.  
If wrong, this is possibly caused by V4000, R4000, short to ground, loose pins of N4000, or N4000 defective. Check the supply voltages for the D-ASIC (+VD), ROM (+VDF), and RAM (+VDR1, +VDR2), derived from the +3V3GAR supply voltage.
5. Check P-ASIC N4000:64 (VGARVAL) for +3.3V. If wrong:
  - a. Check if the line is shorted to ground.
  - b. Check N4000:73 (REFPWM2, supplied by N4000) for +3.3 V. If not OK check N4000:72 (REFP) for 1.2 V, check V4114 and connected parts. If no 1.2 V, and parts and connections are correct, then replace N4000.
  - c. Check N4000:12 (NETVALID) for +2.6V. If wrong, proceed as indicated in Section 7.3, step 6.
  - d. Check the Power ON/OFF function, see Section 7.5.13.
6. Check X-tal signals on M3504 (32 kHz), and M3506 (20 MHz); if wrong check connections, replace X-tals, replace D3500. The 16 MHz clock on M3505 runs only if the test tool software runs (that is if the test tool is powered by the battery charger, or if it is powered by the battery and the unit is turned on). If the 16 MHz clock is present, then continue at Section 7.4.3.

### **7.4.2 Test Tool Software Does not Run.**

1. Turn the test tool OFF and ON again.
2. Check the Keyboard ROW1 line (MS3603 next to X3600) for a 80 kHz square wave.  
If not present, but you heard a weak beep, the test tool software runs, but the buzzer circuit does not function correctly. Go to Section 7.5.10 to check the buzzer circuit, then continue at Section 7.4.3 to see why the test tool cannot be operated.  
If a 80 kHz square wave is present, the MASK software runs. Continue at step 3.
3. Check the ROM lines:
  - data and address lines: pulses
  - pin 25, 26, 28: pulses.
  - pin 11 : pulses, (from D2003 on circuit diagram part 8)
  - pin 12: high

4. Check the RAM lines:
  - address and data lines: pulses
  - pin 22, 23, 24, 29: pulses
5. Load new software to see if the loaded software is corrupted. See Section 7.6.
6. Do the RAM test, see Section 7.5.12.
7. Check for bad soldered address/data lines and IC pins.
8. Replace FlashROM D3501, and RAMs D3502, D3503.

### **7.4.3 Software Runs, Test Tool not Operative**

1. Check the Display and Backlight function, see Section 7.5.1
2. Check the Fly Back Converter, see Section 7.5.2
3. Check the Keyboard function, see Section 7.5.4.

## **7.5 Miscellaneous Functions**

### **7.5.1 Display and Back Light**



**The voltage for the LCD back light fluorescent lamp is >250V!**

See circuit diagram Figure 9-7 (LCD control) and 9-9 (Backlight control).

1. Connect another LCD unit to see if the problem is caused by the LCD unit. The unit is not repairable.
2. Check the LCD control signals on measure spots MS3501...MS3522 (near to the LCD and key pad foil connectors).

MS3501	-30V	-30V (from Fly Back Converter).
MS3503	CONTRAST	0.5 ... 1.6 V, see step 3 below
MS3504	REFPWM1	+3.3 V.
MS3505	+3V45	+3.45 V
MS3506	+5V2	+5.2 V
MS3508	M	≅600 Hz square wave (occasionally narrow pulse)
MS3509	+VD	+3.3 V (is also M3503)
MS3510	FRAME	300 ns pules, period ≅14 ms
MS3511	LINECLK	150 ns pulses, ≅16 kHz
MS3513	LCDAT0	pulses
MS3514	LCDAT1	pulses
MS3516	LCDAT2	pulses
MS3517	LCDAT3	pulses
MS3519	DATACLK0	pulses
MS3520	GROUND	0 V
MS3521	LCDONOFF	+3.3 V.
MS3522	LCDAT0	pulses
MS3502	REFPWM2	+3.3 V
MS3507	P7VCHA	≅+7 V
MS3512	+2V6	2.6 V

3. Bad contrast.
  - a. Check MS3503 (CONTRAST) for a voltage between +0.5 to +1.6 V, depending on the LCD contrast. Verify that the voltage changes if the contrast is changed. If wrong check PWM circuit (Section 7.5.14).
  - b. Check supply voltages  
MS3506: +5.2V; MS3505 +3.4V; MS3501:-30 V; MS3504: 3.3 V
4. Defective backlight (TL converter), see circuit diagram Figure 9-9:
  - a. Check VBAT and VBATTL for >7 V
  - b. Turn the test tool on, and monitor the voltage on T4200:3 or 5 for a 8 Vpp, 66 kHz, half rectified sine wave. If not present on both pin 3 and pin 5 continue, else go to step c.. If a half rectified sine wave, with an increasing amplitude, is present for about 0.2 second directly after power on, then the secondary circuit is defective:
    - check the resistance between T4200:10 and 11 for  $\cong 300\Omega$
    - check V4203, V4204.
    - install a new LCD unit.
  - c. Check T4200:3 and 5 for a 8 Vpp, 66 kHz, half rectified sine wave. If it is present only on pin 3 or only on pin 5, then replace V4201.
  - d. Check M4200 and M4201 for a 7 Vpp, 66 kHz, square wave. If wrong then check M4203 (TLON) for +3V3. If TLON is correct, then replace N4200.
  - e. Check (replace) V4200, V4202.
5. Backlight brightness control wrong:
 

Check the M4203 (BACKBRIG, supplied by D-ASIC)

  - For low brightness: a 20 kHz 3.3 V pulse signal (30 % high, 70 % low)
  - For high brightness: a 20 kHz, 3.3 V pulse signal (70 % high, 30 % low)

Check V4210, R4203.

### 7.5.2 Fly Back Converter

See circuit diagram Figure 9-8.

1. Check the fly back converter output voltages +5V2, +3V3GAR (+3.3 V), +3V45, +2V6, -1V8, and -30V.
  - a. If one or more voltages are correct, then check the rectifier diodes, coils, and capacitors of the incorrect voltage (s)
  - b. If none of the voltages is correct, then the fly back converter does not run correctly, continue at step 2.
2. Check VBATT for >7 V.
3. Check N4000:49 (FLYGATE) for a square wave voltage of at least some volts (for a correct Fly Back Converter 50...100 kHz,  $\cong 8$  Vpp).

**If a square wave is present on pin 49** (may be not the correct value):

check the voltage on N4000:55 (FLYSENSP). For a correct converter this is a saw tooth voltage of 50...100 kHz, 300 mVpp.

- a. If **no** sawtooth voltage is present on N4000:55, no current, or a DC current flows in FET V4001. The primary coil or V4001 may be defective (or interrupted

connections). Check also R4101 (battery current sense resistor); it can be fused due to a short in FET V4001.

- b. An **incorrect** sawtooth on N4000:55 can be caused by:
- overloaded outputs (Frequency too low,  $\ll 50$  kHz)
  - underloaded outputs (Frequency too high,  $\gg 100$  kHz)
  - bad FET V4001 (Sawtooth voltage is not linear).

**If no square wave is present on N4000:49:**

check N4000:63 (FREQPS) for a 50...100 kHz, 3.3 Vpp square wave. If correct, then check V552, and V553. If no square wave, then go to step 4.

4. Check N4000:62 (PWRONOFF) for  $>+3V$ . If wrong, see Section 7.5.13 Power ON/OFF.
5. Check N4000:43 (COSC) for a triangle wave form, 50...100 kHz, +1.6 V to +3.2 V. If wrong check C4123 and connections; check IREF, see step 6. If all correct, then replace N4000.
6. Check N4000:74 (IREF) for 1.6 V. If wrong:
  - a. Check N4000:73 (REFPWM2) for +3V3. REFPWM2 is supplied by N4000, and derived from REFP. Check N4000:72 (REFP) for 1.22 V. If wrong, check V4114 and connected parts.
  - b. Check R528, replace N4000.
7. Check N4000:51 (VOUTH1) for  $<2.5$  V (nominal value 1.8 V). If wrong check R4014 and connections to N4000.
8. Check N4000:57 (IMAXFLY) for  $\cong 570$  mV. If wrong check R4020 and connections to N4000.

### 7.5.3 Slow ADC, +3V3SADC

See circuit diagram Figure 9-9.

Check the following signals:

1. +3V3SADC (supplied by P-ASIC N4000:65) must be +3.3V. If the unit can be turned on and +3V3SADC is not OK, the line is shorted to ground or N4000 is defective.
2. BATCUR (D4300:12 from P-ASIC N4000:77), must be about  $\{1.6+(6.7 \times IBATP)\}$  Volt. IBATP (N4000:9) senses the battery current. If wrong, replace N4000.
3. BATVOLT (D4300:14), must be  $(0.3 \times VBAT)$  Volt. VBAT is the voltage on the battery connector X4100:1.
4. BATTEMP (D4300:15 from P-ASIC N4000:79), must be **(pin 5 TEMP - pin 9 IBATP)** Volt. If wrong, replace N4000. TEMP (N4000:5) senses the battery temperature. N4000:5 sources 50  $\mu$ A into NTC in battery pack (NTC between X4100:2 and 3) IBATP (N4000:9) voltage is X4100:2 voltage..
5. SELMUX0 and SELMUX1 (M4300, M4301) supplied by the D-ASIC must show LF pulses (0V to +3.3V, 1 second period, duty cycle 33%). SELMUX2 (M4302) is low in the normal operating mode. This line enables D4300 inputs Y4 to Y7 during factory tests.

6. Check M4303, it must show the 3 voltage levels on D4300 pins 14, 15, and 12; if at a fixed level, then replace D4300. The voltages on D4300 pins 13, 1, 5, 2, and 4 are not measured by the Slow ADC..
7. Check M4304. In 330 ms the voltage levels successively approximate the values measured on M4303; if wrong, trace the signal to the PWM circuit on the Digital Control part (Figure 9-7).
8. Check M4305 for 3 V pulses with varying width; if at a fixed level then replace N4300.


### 7.5.4 Keyboard

Proceed as follows if one or more keys cannot be operated. Table 7-2 shows how the keys are connected to the rows and columns. For the ON/OFF key see Section 7.5.13.

Table 7-2. Test Tool Key Matrix

COL↓	ROW →	0	1	2	3	4	5
	test spot	MS3602	MS3603	MS3604	MS3605	MS3606	MS3607
0	MS3608		MOVE A	MOVE A	AUTO MAN		F2
1	MS3609		MOVE	S TIME	TRIGGER		F3
2	MS3610		MOVE	TIME	HOLD RUN		F4
3	MS3611	REPLAY	MOVE B	MOVE B	B	ZOOM	CURSOR
4	MS3612	RANGE V A	RANGE V B	mV RANGE B	SAVE PRINT		CLEAR MENU
5	MS3613	METER	A	mV RANGE A	RECORDER	SCOPE	F1

1. Try a new key pad, and key pad foil to see if this cures the problem.
2. Press a key, and check ROW0...5 (measure spots MS3602..MS3607) for the signal shown below :

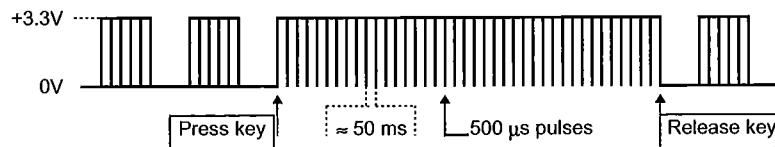


When a battery is installed, and no key is pressed the ROW lines are low.

When no battery is installed and no key is pressed (mains adapter supply), the ROW lines show 300 ms pulse bursts.

During the time a key is pressed, the ROW lines show continuously pulses.

3. Check COL0...5 (measure spots MS3608...MS3613) for a +3.3V level. Then press and hold a key, and check the matching COL line for the signal shown below:

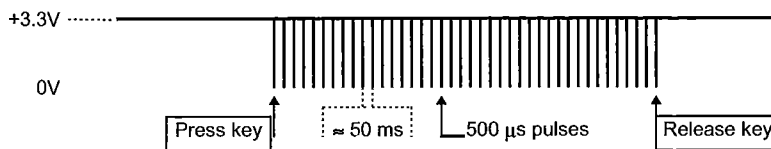

If wrong, check the connections from X3600 to D3500; replace D471.



### 7.5.5 Optical Port (Serial RS232 Interface)

See circuit diagram Figure 9-9.

#### Receive (RXD)

1. Check the voltage RXDANA on M3401 for about 250 mV, and the voltage RXD on the P-ASIC N4000:76 (buffered and amplified RXDA voltage) for +3.3V.
2. Shine with a lamp in the optical port (H522).  
The voltage RXDANA on M3401 must become low (0...-0.6V). RXD on N4000:76 must be low (0 V).

#### Send (TXD).

1. Check the voltage TXD on M3400 for +3.3V.
2. Press , and then press  PRINT to start the test tool print data output.
3. Check the line TXD on M3400 for a burst of pulses (pulses from +2.3 V to +3.3 V).  
The length of the burst and the pulses depends on the selected baud rate.

### 7.5.6 Channel A, Channel B Measurements

See circuit diagram Figure 9-1 and 9-2.

When measuring in the input circuits of a the disassembled test tool, the backlight control voltage can cause noise on the measured signals. Do NOT power the unit when the backlight cable is disconnected!

1. Select SCOPE, and turn both channels on.
2. Apply a 200 kHz sine wave with a peak-to-peak value of 8\*range to the inputs. For example at 1 V/div apply 8 Vpp. Select manual ranging
3. Check the S-ASIC output voltage ANAOUTA on R2051 (channel A) and ANAOUTB on R2035 (channel B). The voltage must be 1.2 Vpp (8 x 125 mV per division), on a +750 mV DC level. For time base settings of 2 μs/div and faster the measured frequency can alternately change from 200 kHz to 80 kHz.
4. Set the input signal frequency to 200 Hz (same amplitude) and repeat step 3. If step 3 and step 4 are OK, then check the ADC..., else continue with the next step.

The following tests are described for Channel A. Channel B can be tested in the same way, using similar test points.

1. Check the supply voltages on:
  - a. T1102:3 and 5 for a 50...100 kHz, 15 Vpp ac voltage (use the **non-floating** ground!)



- b. T1102:9 and 5 for a 50...100 kHz, 15 Vpp ac voltage  
T1102:10, and 12 for a 50...100 kHz, 12 Vpp ac voltage (use the **floating** ground!)
  2. Check the HF path:
    - a. Set the input signal frequency to 200 kHz , amplitude 8 divisions again.
    - b. Check the Channel A HF output on T1100:6 (HFA1) and T1100:7 (HFA2), for a 120 mVpp sine wave on a 700 mV dc level; occasionally the sine wave can be interrupted for internal calibration measurements.
    - c. Check the Channel A HF signal on T1100:2 and 3 (supplied by C-ASIC N1200 pins 40-41) for 120 mVpp (referred to input ground !).  
Check also M1021 and M1022 for a 120 mVpp voltage.
  3. Check the LF path:
    - a. Apply a 200 Hz sine wave with an peak-to-peak value of 8\*range that to the inputs. For example at 1 V/div apply 8 Vpp.
    - b. Check C-ASIC N1000 output pin 30 on M1027 for a 600 mVpp sine wave on a 3 V dc level.
    - c. Check the C-ASIC LF feed back voltage on M1028 and M1029 for 120 mVpp on a -150 mV dc level.
    - d. Check the channel A LF input of the S-ASIC N2001:
      - pin 46 and pin 47 for 120 mVpp on +150 mV dc
      - pin 43 for 200 mVpp on +150 mV dc
      - pin 44 for 200 mVpp on 0 V dc.
  4. Check the control part:  
M1030 (C-ASIC pin 23) and M1031 (C-ASIC pin 22) must show a 0.5 ... 5 ms pulse burst (+3.3 V to 0) when selecting another range. Periodically bursts will be shown if no key is pressed. Use floating input ground!  
Measure on R1152 and R1153 for a 0.5 ...5 ms pulse burst (2.4 to 0.8 V) when selecting another range. Use the non floating ground!  
If wrong See 7.5.8, sub section **C-ASIC Control/Linearization Circuit**
  5. Check the calibration line PWM (pin 21):
    - after power on the line supplies a 150 ms 1.4 V reset signal to the C-ASIC
    - during the calibration adjustment pre-calibration step CL 340 it provides a repetitive ramp (18 s period, 1.8 Vpp) for linearization. If the ramp is wrong, an error message will be generated at step CL 340.
  6. If all OK the S-ASIC control probably does not function correctly, or the S-ASIC is defective: continue at Section 7.5.8. S-ASIC Control.

### **7.5.7 Meter Channel (Ext Trigger, Probe Cal)**

See Circuit diagram Figure 9-3.

When measuring in the input circuits of a the disassembled test tool, the backlight control voltage can cause noise on the measured signals. Do NOT power the unit when the backlight cable is disconnected!



The Meter Channel and Channel B use the same S-ASIC output and ADC. If both channels fail, and Channel A is OK, then check the S-ASIC and ADC (section 7.5.9) first.

Table 7-3 shows the control line status for the various Meter Channel functions.

Table 7-3. Meter Channel Control Line Status

MODE	ATT0	ATT1	ATT2	GAIN0	GAIN1	I0	I1	I2	REL0	REL1	PRCALAC	SEL0	SEL1
VDC 500mV	1	0	1	0	0	1	0	0	0	0	1	0	0
VDC 5V	0	0	1	0	0	1	0	0	0	0	1	1	0
VDC 50V	1	1	1	0	0	1	0	0	0	0	1	0	1
VDC 500V	0	1	1	0	0	1	0	0	0	0	1	1	1
VDC 1000V	0	1	1	1	1	1	0	0	0	0	1	1	1
500 Ohm	0	1	0	1	0	0	0	0	0	0	1	0	1
5K Ohm	0	1	0	1	0	1	0	0	0	0	1	0	1
50K Ohm	0	1	0	1	0	0	1	0	0	0	1	0	1
500K Ohm	0	1	0	1	0	1	1	0	0	0	1	0	1
5M Ohm	0	1	0	1	0	0	0	1	0	0	1	0	1
30M	0	1	0	1	0	0	0	1	0	0	1	1	0
Trig Ext 120 mV	1	0	1	0	1	1	0	0	0	0	1	0	0
Trig Ext 1.2 V	0	0	1	0	1	1	0	0	0	0	1	1	0
Probe Cal DC	1	0	0	1	1	0	0	0	0	0	1	1	0
Probe Cal AC	1	0	0	1	1	0	0	0	0	0	0	1	0
REFp (+220 mV)	0	1	0	1	1	1	0	0	0	0	1	0	0
REFn (-250 mV)	0	1	0	1	0	1	0	0	0	0	1	1	1
REFzero	0	1	0	1	1	1	0	0	0	0	1	1	1
Diode	0	1	0	1	1	0	0	0	0	0	1	1	0
K1500 set to VOLT									0	15 ms			
K1500 set to OHM									15 ms	0			

**Volts function.**

1. Select METER (  ), MEASURE (  ), V ac+dc.
2. Select manual ranging.
3. Apply the half scale + dc voltage to the input for all ranges.
4. Check D1501:3 for a -50 mV voltage level.  
Occasionally reference level pulses must appear (interval 200 ms....700 ms, length about 60 ms): +220 mV from D1501:13; zero from D1501:12.
5. Check N1501:7 for a -100 mV voltage level (gain N1501 is x2).  
Occasionally 200 mV reference level pulses must appear.





6. Check N1525:5 for a -40 mV level, with reference level pulses -70 mV, +70 mV, and zero.
7. Check N1525:7 for a +2.6 V level with reference level pulses. For a zero to full scale input voltage, the DC level must change roughly 0.2 V.
8. Check the H1525 diodes, resistors R1528-R1533, and connections to S-ASIC.
9. If all OK the S-ASIC control probably does not function correctly, or the S-ASIC is defective: continue at Section 7.5.8. S-ASIC Control.

**Ohms function**






1. Verify the Volts function, if OK continue below, else check the Volts function first
2. Select the Ohm function, manual ranging.
3. Connect a dc amp meter between the banana jack inputs. Check the currents supplied by the current source for all ranges:  
0.5 mA, 50  $\mu$ A, 5  $\mu$ A, 0.5  $\mu$ A, 50 nA, 5 nA, all  $\pm$  20 %.  
  - a. If all wrong check the connection from X1000 to FET V1560, V1560, N1540 and connected parts, check N1541:1 for +3 V, check the V1536 emitter, base, and collector for the same voltage.
  - b. If one or more currents OK then check D1560 and control signals.
4. Apply a full scale resistance (e.g. 500  $\Omega$  in the 500  $\Omega$  range) to the input.
5. Check N1501:1 for +250 mV (narrow spikes are allowed).
6. Check D1501:3 for 250 mV dc. Occasionally zero level and +200 mV level pulses will occur (average repetition time 600 ms, duration 80 ms). You can see the 200 mV level if you short the input.
7. Select the 30 M $\Omega$  range, remove the input resistor (open input).
8. Check D1501:3 for a +280 mV level (input voltage attenuated by R1547-R1548) with zero and +200 mV reference voltage level pulses.
9. Check N1501:7 for a +80 mV level with +200 mV and -250 mV reference pulses. The 200 mV offset is subtracted via R1511-R1509, D1502 (pin 14 to 3).

**External trigger function**

The external trigger path uses the Volts 500 mV and 5 V range circuit.

1. Select SCOPE (  ), Trigger menu (  ), Trig Ext (  ), Ext LEVEL 0.12 V (  ).
2. Apply a 100 Hz, 0 to +0.5 V square wave to the banana jack inputs.
3. Check D1501:3 for a 0 to -125 mV square wave.
4. Check N1501:7 for a 0 to -750 mV square wave. The N1501 gain is set to 6x via D1502:3 to 15, and (R1508+R1510+R1512)/R1512.
5. Select Ext LEVEL 1.2 V, and apply a 100 Hz, 0 to +5 V square wave to the inputs.
6. Do step 3 and step 4.
7. Remove the input signal.

### Probe Cal function

1. Select SCOPE (  ), Input a menu (  ), probe A (  ), Probe Cal + ENTER, Yes (  )
2. Check D1500:13 for a 500 Hz, 0 to +3 V square wave.  
If OK, check signal path to red banana input X1000, else continue at 3.
3. Check D1500:10 for a 500 Hz 0 to +5 V square wave, and D1500:9 for 0 V.
4. Check the 0.5 mA current source used for dc probe cal, see Ohms.
5. Check D1571:14 for a low level. Now press  Continue to start the 10:1 probe dc calibration, and verify that the PRCALAC line at V1545 pin goes high. Probe dc calibration can only be done if probe 10:1 is activated.

### Control signals

Control signals are supplied by the D-ASIC (D3500:99 and 100) via the SCLKEXT and SDATEXT lines.

1. Select the Ohms or Volts function.
2. Check D1570:1 for 1.5 ms positive pulses
3. Check D1570:2 and 3 for positive pulses.
4. Check D1571 pin 2 for positive pulses.
5. Using Table 7-3 at the beginning of this section to verify the control line voltage levels for the various functions.

## 7.5.8 Input Signal Acquisition






See circuit diagram Figure 9-4 and 9-5.


### Supply voltages

Check the S-ASIC supply voltages, see circuit diagram Figure 9-5.

### C-ASIC Control/Linearization Circuit

If the circuit is defective, an error can occur during calibration (pre-cal linearization step CL340, 341, 345), or the input C-ASIC's cannot be controlled (e.g. no ranging).

1. Select SCOPE mode and check D2000:
  - a. pin 9-10-11: LOW
  - b. pin 12 and pin 14: HIGH; a pulse burst (about 700  $\mu$ s) must be seen when e.g. selecting another range in SCOPE mode.
2. If linearization fails during calibration, then select calibration mode (  +  ).
  - a. Press  (NEXT), and then  (PREVIOUS) a number of times until you see Lin 20 MS A (CL 0340): IDLE (valid) or (invalid).  
Press  CALIBRATE and check D2000:9,10,11 for a HIGH level  
Check D2000:13 and 14 for a 5 kHz square wave with changing duty cycle.  
If OK trace the signal to M1031 (pin 22 of the C-ASIC N1000).  
If still OK check M1018 (Channel A circuit) for repetitive ramp voltages.

- b. Repeat step a. for calibration step LIN MS B (CL341), and trace same signals to the Channel B circuit.
- c. Select calibration step Lin 20 MS E (CL 345).  
 Press  CALIBRATE and check D2000:9,10,11 for a HIGH level.  
 Check D2000:4 for a very low frequency (period 50 s) sawtooth voltage (+1.6 V to -0.8 V).  
 D2000:1 and 15 must show a 5 kHz square wave with changing duty cycle.

**S-ASIC Control**

- 1. Check the DATA lines, ADDRESS lines, and control lines (pin 13) on D2001 and D2002 for pulses.

- 2. Check D2003 and D2004

D2003	1	pulses	D2004	1	high
	2	pulses		2	pulses
	3	pulses		3	pulses
	4	pulses		4	high
	5	pulses		5	pulses
	6	pulses		6	pulses
	7	low		7	low
	8	pulses		8	pulses
	9	pulses		9	high
	10	low		10	pulses
	11	pulses		11	high
	12	pulses		12	high
	13	low		13	high
	14	high		14	high

- 3. Check N2001

8	INTRP	pulses if time base 2 $\mu$ s/div or faster, else high
84	TRIGLEV4	500 mV
85	TRIGLEV3	500 mV
86	TRIGLEV2	200 mV...600 mV when moving trigger level up/down
87	TRIGLEV1	200 mV...600 mV when moving trigger level up/down
109	EXTACQHO	500 mV pulses; 5 V pulses on HOLDOFF R2028
113	TRIGQUAL	500 mV (on TRGQUAL R2030 5 V), pulses if trigger conditions at pulse width triggering are met; else low.
123	TRIGDT	3 V pulses if trace is updated; low if no trace update at "EDGE triggering - Wait for trigger" occurs.
124	ALLTRIG	3 V pulse each time input signal crosses trigger level
127	EXTTRIG	3 V pulse each time input signal crosses trigger level
129	RSRMPCLM	0.5 V (RSTRAMP 5 V) positive pulses
131	RMPCLM	0.5 V (RAMPCLK 5 V) positive (narrow) pulses
133	ADCCLM	Clock pulse 0.5 V ( SMPCLK 5 V), SCOPE mode 20 MHz; METER mode 4 MHz.
137	XOSCBUF	25 MHz 0.4 V pp (X-tal B2000) on 1.8 V dc
138	XOSCIN	25 MHz 0.4 V pp (X-tal B2000) on 1.8 V dc
152	IREF1	+1.4 V
155	MIDADC	+0.7 V (from ADC D3000)
156	REFPWM	+3.3 V
157	REFADCTOP	+1.4 V

4. Check D3200 and D3201 (on Circuit Diagram Figure 9-6)
 

D3200	1, 13	time base $\geq 5 \mu\text{s}/\text{div}$ : pulse bursts; $< 5 \mu\text{s}/\text{div}$ : HIGH, each $\pm 10 \text{ s}$ a low pulse
	2	time base $\geq 5 \mu\text{s}/\text{div}$ : HIGH; $< 5 \mu\text{s}/\text{div}$ : pulses
	3, 11	pulses
	5, 12	time base $\geq 5 \mu\text{s}/\text{div}$ : LOW; $< 5 \mu\text{s}/\text{div}$ : 3.3 V pulses
	9	time base $\geq 5 \mu\text{s}/\text{div}$ : LOW; $< 5 \mu\text{s}/\text{div}$ : 3.3 V pulses
D3201	1	time base $\geq 5 \mu\text{s}/\text{div}$ : LOW; $< 5 \mu\text{s}/\text{div}$ : 3.3 V pulses
	2,3	LOW, see 6. VIDEO
	4	LOW, see 6. VIDEO
	12	time base $\geq 5 \mu\text{s}/\text{div}$ : 20 MHz clock continuously $< 5 \mu\text{s}/\text{div}$ : 20 MHz clock, periodically stopped for $\pm 50 \text{ ms}$
	13	pulses
	14	pulses
  
5. Select Scope, Triggering on pulse width  $< 300 \text{ ns}$ , apply a 5 MHz square wave to the input  
Check D3203 (and connections to D3202) (on Circuit Diagram Figure 9-6):  
- all signal lines must show activity
  
6. Check VIDEO SYNC SEPARATOR N2020 signals  
Select Video Triggering, and apply a video signal to the Input A
 

N2020	1	+3.3 V with 250 $\mu\text{s}$ low pulses (60 Hz at NTSC)
	2	+3.3 V with 5 $\mu\text{s}$ low pulses 1.5 Vpp (15.7 kHz at NTSC)
	3	+5V with 250 $\mu\text{s}$ low pulses (60 Hz at NTSC)
	6	+1.2 V
	7	square wave 2 Vpp (30 Hz at NTSC)

### 7.5.9 ADC's

See circuit diagram Figure 9-6.

Check the following signals on D3000 and D3001 (SCOPE, A&B on):

- pin 14-21            pin 14-21 for activity (3 V pulses)
- pin 5                125 mV per division trace amplitude; +0.7 V for zero trace.
- pin 6                +3.3 V,
- pin 7                +1.7V
- pin 8                +1.4 V
- pin 9                +0.7 V (only D3000:9 is used)
- pin 24 D3000       SCOPE mode input A on: 300  $\mu\text{s}$  period, 3 Vpp clock
- pin 24 D3100       SCOPE mode input B on: 300  $\mu\text{s}$  period, 3 Vpp clock  
METER mode: 150 ms period, 3 Vpp-clock; occasionally  
300  $\mu\text{s}$  period clock bursts.

### 7.5.10 Digital Control & Memory

Check the signals according to the table below.

**Table 7-4. D-ASIC D3500 Signals**

pin	to/from	signal	remarks
2-11	D3000	see 7.5.9 ADC's	ADC code and supply voltage
13	N2001:109	5 V pulses	trigger holdoff
14	D3500:15	pulses +3 V to 0 V	holdoff out
15	D3500:14	pulses +3 V to 0 V	holdoff in
16-24	N2001	see 7.5.8 Input Signal Acquisition	sub section S-ASIC control
27	R3300	20 kHz, variable duty cycle	trigger level
28	R3301	20 kHz, variable duty cycle	trigger level
29	R3302	20 kHz, variable duty cycle	trigger level, not used in Fluke19x
32	N4000:72	+3.3 V	reference voltage for PWMB (pin 39&40)
34	D2000	5 kHz, variable duty cycle	to linearization circuit (Figure 9-4)
35	V4210	20 kHz, variable duty cycle	backlight brightness control
36	R3310	20 kHz, variable duty cycle	trigger level, not used in Fluke19x
37	R3311	80 kHz, variable duty cycle	display contrast control
38	N2000:156	+3.3 V	reference voltage for PWMA pin 26-37
39	R3312	20 kHz, variable duty cycle	Slow ADC level control
40	R3313	80 kHz, variable duty cycle	Battery charge current control
42-51	D3100	see 7.5.9 ADC's	
54	N4300	see 7.5.3 Slow ADC	
56	R3513	pulse bursts	serial control clock
57	R3514	pulse bursts	serial control data
58-71	X3600	see 7.5.4 Keyboard	
72	X3600	see 7.5.13 Power On-Off	
73-74	M3504	32 kHz clock ( $\approx 3$ V pp)	
77-78	M3505	16 MHz clock ( $\approx 3$ V pp)	only at power on, or with power adapter
80-81	M3506	20 MHz clock ( $\approx 3$ V pp)	
86	R3400	see 7.5.5 Optical Port	serial communication
87	N4000:76	see 7.5.5 Optical Port	serial communication
88	N4000:62	+3 V if power on; 0 V if power off	indicates power on
89	N4000:64	+3 V	indicates supply present
90	X4100:4	0 V if battery present	indicates battery type (not used)
91	M4101	+3 V if power adapter supply present	
93	N4000:63	50...100 kHz square wave	indicates Flyback converter frequency
96-98	D4300	see 7.5.3 Slow ADC	
99	V1584	pulses in METER mode	control data for METER channel
100	V1583	pulses in METER mode	data clock for METER channel
101	M3500	4 kHz 3 V square wave if buzzer on	buzzer control
103	D2000:9	see 7.5.8	C-ASIC Control/Linearization Circuit
109-129	D3502	RAM_A18 high pulses RAM_A17-RAM_A0	
132,133	D3502	pulses	
134	D3503:22	pulses	
135	D2001:13	pulses	
136	D3502:22	pulses	
137-144	D3502	pulses	

pin	to/from	signal	remarks
146	D3501:12	high	
149	D3503:29	pulses	
150	D3503:24	pulses	
151-153	D3501	pulses	
154	D3503:12	pulses; also to D2001:3	
155	N4200:13	high	TL backlight on
158-195	D3501 D3503	pulses	
196-207	X3501	see 7.5.1 Display and Backlight	LCD control

### 7.5.11 Buzzer Circuit



See circuit diagram Figure 9-9.

1. Select METER mode, Measure Continuity
2. Short circuit the Meter Input banana jacks. The buzzer is activated now.
3. Check M3500 for a 4 kHz, 0...3V square wave during beeping (+3 V if not activated).  
If the -30V is not present you will hear a weak beep. This happens if only the mask software is running.

### 7.5.12 RAM Test

You can use the Microsoft Windows Terminal program to test the RAM. Proceed as follows:

1. Connect the Test Tool to a PC via the Optical Interface Cable PM9080.
2. Start the Terminal program, and select the following Settings:

Terminal Emulation	TTY (Generic)	
Terminal Preferences	Terminal Modes	CR -> CR/LF
	<input checked="" type="checkbox"/> Line Wrap	<input checked="" type="checkbox"/> Inbound
	<input checked="" type="checkbox"/> Local Echo	<input type="checkbox"/> Outbound
	<input checked="" type="checkbox"/> Sound	
Communications	Baud Rate	9600
	Data Bits	8
	Stop Bits	1
	Parity	None
	Flow Control	Xon/Xoff
	Connector	COMn
3. Turn the test tool off. Keep the keys  +  pressed, and turn the test tool on again. This will start up the mask software. You will hear a very weak beep now.
4. In the terminal program type capital characters X (no ENTER!). After a number of characters the test tool mask software will respond with an acknowledge 0 (zero). This indicates that the communication between the Terminal program and the test tool is accomplished.
5. Type ID  
and press [Enter]  
The test tool will return an acknowledge 0 (zero), and the string  
Universal Host Mask software; UHM V2.1



If it does not, check the Terminal program settings, the interface connection, and the test tool Optical Port (Section 7.5.5).

- 6. Type EX10, #H400000, #H80000 and press [Enter] for D3502
  - Type EX10, #H600000, #H80000 and press [Enter] for D3503
- The test tool will return one of the following acknowledges:
- 0 the RAM is OK.
  - 1 syntax error in the typed command
  - 6 the RAM does not properly function.

Notice that the acknowledge overwrites the first character of the message sent to the test tool.

### **7.5.13 Power ON/OFF**

Check MS3614 for +3 V (supplied by D3500:72). If the ON key is pressed, MS3614 must go low.

If wrong, do the Section 7.4.1. tests first!

## **7.6 Loading Software**

To load a new software version in the test tool contact an authorized Fluke Service center, see section 8.3.



## **Chapter 8**

# **List of Replaceable Parts**

<b>Title</b>	<b>Page</b>
8.1 Introduction.....	8-3
8.2 How to Obtain Parts.....	8-3
8.3 Service Centers.....	8-3
8.4 Final Assembly Parts.....	8-4
8.5 Main PCA Unit Parts.....	8-6
8.6 Main PCA Parts.....	8-8
8.7 Accessories.....	8-26



## 8.1 Introduction

This chapter contains an illustrated list of replaceable parts for the models 192, 196, and 199 ScopeMeter test tool. Parts are listed by assembly; alphabetized by item number or reference designator. Each assembly is accompanied by an illustration showing the location of each part and its item number or reference designator. The parts list gives the following information:

- Item number or reference designator (for example, “R122”)
- An indication if the part is subject to static discharge: the \* symbol
- Description
- Ordering code

### Caution

**A \* symbol indicates a device that may be damaged by static discharge.**

## 8.2 How to Obtain Parts

Contact an authorized Fluke service center, see section 8.3.

To locate an authorized service center refer to the second page of this manual (back of the title page).

In the event that the part ordered has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

To ensure prompt delivery of the correct part, include the following information when you place an order:

- Instrument model (Fluke 192, Fluke 196, or Fluke 199), 12 digit instrument code (9444 ... ..), and serial number (DM.....). The items are printed on the type plate on the bottom cover.
- Ordering code
- Item number - Reference designator
- Description
- Quantity

## 8.3 Service Centers

To locate an authorized service center, call Fluke using any of the phone numbers listed below, or visit on the World Wide Web: [www.fluke.com](http://www.fluke.com)

USA and Canada: 1-888-99-FLUKE (1-888-993-5853)

Europe: +31-402-678-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-356-5500

## 8.4 Final Assembly Parts

See Table 8-1 and Figure 8-1 for the Final Assembly parts.

Table 8-1. Final Assembly Parts

Item	Description	Ordering Code
1	Top case assembly Fluke 192 Top case assembly Fluke 196 Top case assembly Fluke 199	4022 244 98081 4022 244 98091 4022 244 98101
2+3	Keypad set (includes large & small keypad)	4022 244 98151
4	Keypad foil	4022 244 98161
5	Keypad support	4022244 98171
6	Display unit	4022 244 98111
7	Input cover (including screws)	4022 244 98121
8	EJOT Pt screw	4022 244 92551
9	Main PCA unit. <b>No firmware loaded! Not calibrated!</b>	4022 244 98181
10	Hang strap	4022 244 98321
11	Bottom case assembly	4022 244 98131
12	Combi-screw Torx M3x10 (screw + split spring)	4022 325 42101
13	Strap	4022 244 98191
14	Strap holder	4022 244 98201
15	Tilt stand (ball)	4022 244 98211
16	Combi-screw Torx M3x10 (screw + flat washer)	4022 244 91231
17	Bottom holster	4022 244 98221
18	Combi-screw Torx M3x10 (screw + flat washer)	4022 244 91231
19	Battery Pack	BP190



*Note*

*The test tool contains a NiMH battery (item 18). Do not mix with the solid wastestream. Spent batteries should be disposed of by a qualified recycler or hazardous materials handler.*

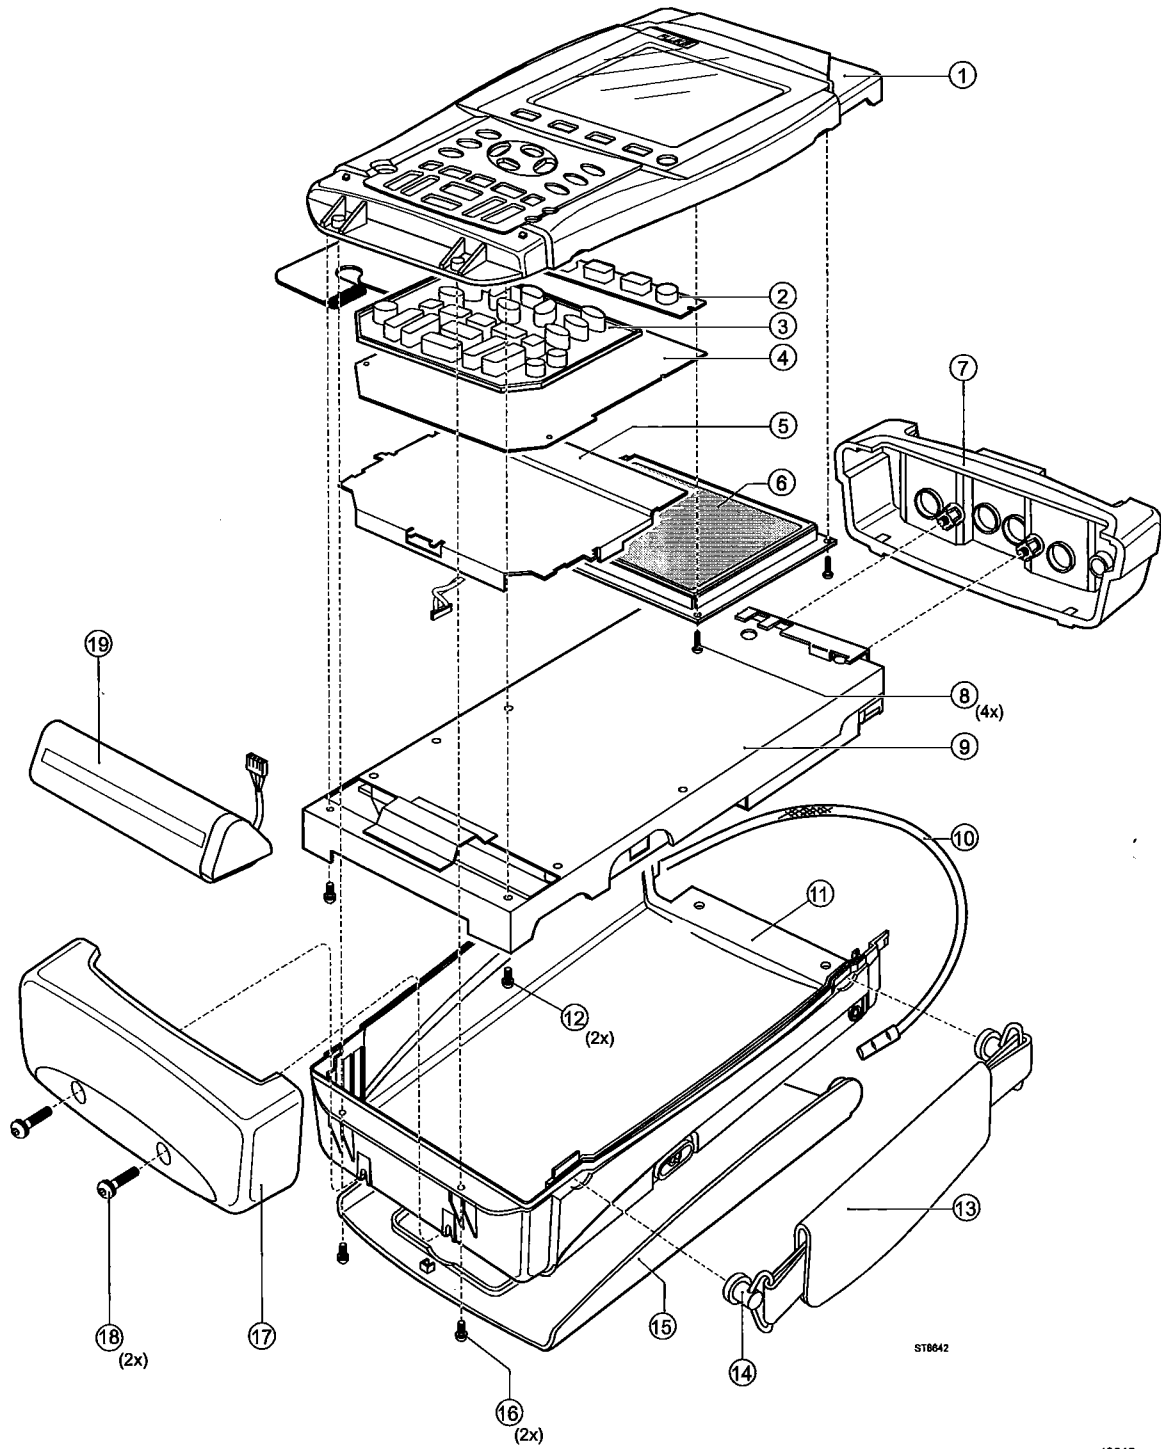


Figure 8-1. Final Assembly Details

## 8.5 Main PCA Unit Parts

See Table 8-2 and Figure 8-2 for the main PCA Unit parts.

**Table 8-2. Main PCA Unit Parts**

Item	Description	Ordering Code
1	Shielding box	4022 244 98231
2	Insulation foil	4022 244 98241
3	PT-Screw K35x8	4022 244 92791
4	Input connector unit	4022 244 98251
5	sealing ring for power connector	4022 244 98331
6	Input attenuator shielding:	
	- METER channel top	4022 244 98261
	- METER channel bottom	4022 244 98271
	- SCOPE channel A top	4022 244 98281
	- SCOPE channel B top	4022 244 98291
	- SCOPE channel A&B bottom	4022 244 98301
7	Screw Torx M3x20	2522 201 08038
8	Shielding cover	4022 244 98311
9	Combi-screw Torx M3x10 (screw + split spring)	4022 325 42101
10	Hexagonal distance piece M3x16.5	4022 244 93071

*Note 1*

*If the main PCA must be replaced, you must order the complete main PCA Unit.*

*Note 2*

*The Scope channel A and B input attenuator top shieldings are provided with a plate spring. The spring end is provided with heat conducting tape; it touches the C-ASIC N1000 and N1200, and conducts the heat from the C-ASIC to the shielding.*

*Do not bend the springs, keep the tape on the spring end free of dust, and put the shielding on the correct position.*



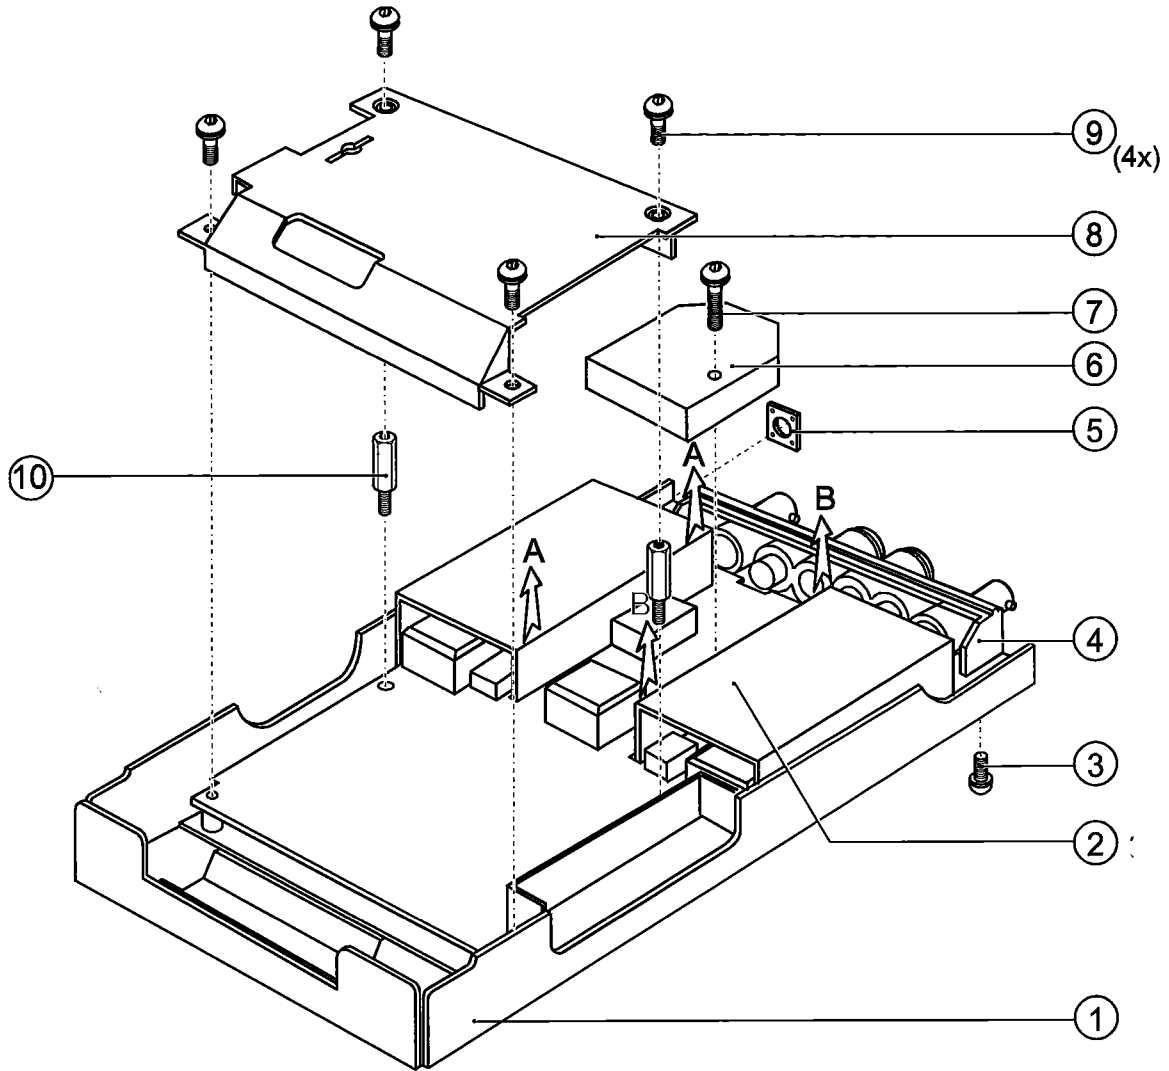


Figure 8-2. Main PCA Unit

ST8676  
ST8676.wmf

## 8.6 Main PCA Parts

See Figure 9-11 and Figure 9-12 at the end of Chapter 9 for the main PCA reference designation views.

Table 8-3. Main PCA Parts

Reference Designator	Description	Ordering Code
B2000	QUARTZ CRYSTAL 25.00MHZ KDK	4022 303 20181
B3500	QUARTZ CRYSTAL 32.768KHZ SEK	5322 242 10302
B3501	QUARTZ CRYSTAL 16.00MHZ KDK	4022 303 20161
B3502	QUARTZ CRYSTAL 20.00MHZ KDK	4022 303 20171
C1000	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1001	CER CAP 1 500V 2% 12PF	2222 654 10129
C1002	CER CAP 1 500V 2% 12PF	2222 654 10129
C1003	CER CAP 1 500V 2% 12PF	2222 654 10129
C1004	CER CAP 1 500V 2% 12PF	2222 654 10129
C1010	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1011	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1012	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1013	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1014	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1025	CC 4.7PF 6% 0805 NP0 50V	4022 301 60131
C1029	CC 12PF 5% 0805 NP0 50V	4022 301 60181
C1030	CC 12PF 5% 0805 NP0 50V	4022 301 60181
C1031	CC .47PF 50% 0805 NP0 50V	4022 301 60011
C1032	CC 10PF 5% 0805 NP0 50V	4022 301 60171
C1033	CC 100PF 5% 0805 NP0 50V	4022 301 60291
C1034	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1038	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1039	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1040	CC 470PF 5% 0805 NP0 50V	4022 301 60371
C1041	CC 470PF 5% 0805 NP0 50V	4022 301 60371
C1044	CER CAP 1 500V 0.25PF 1.2PF	2222 654 09128
C1045	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1050	MKC CAP 250V 10% 68NF	2222 344 48683
C1062	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1063	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1064	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1065	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1073	CC 15NF 10% 0805 X7R 50V	4022 301 60481
C1082	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1083	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1092	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1093	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1094	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1095	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1096	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1097	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1098	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1099	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1100	CC 33PF 5% 0805 NP0 50V	4022 301 60231

Reference Designator	Description	Ordering Code
C1101	CC 33PF 5% 0805 NP0 50V	4022 301 60231
C1102	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1104	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1108	ELCAP 25V SMD 20% 10UF	5322 124 11838
C1109	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1112	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1125	CC 2.2NF 1% 1206 NP0 25V	4022 301 61181
C1131	CC 2.2NF 1% 1206 NP0 25V	4022 301 61181
C1133	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1140	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1141	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1142	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1143	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1144	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1145	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1150	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1200	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1201	CER CAP 1 500V 2% 12PF	2222 654 10129
C1202	CER CAP 1 500V 2% 12PF	2222 654 10129
C1203	CER CAP 1 500V 2% 12PF	2222 654 10129
C1204	CER CAP 1 500V 2% 12PF	2222 654 10129
C1210	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1211	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1212	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1213	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1214	CER CAP 1 500V 0.25PF 2.2PF	2222 654 09228
C1225	CC 4.7PF 6% 0805 NP0 50V	4022 301 60131
C1229	CC 12PF 5% 0805 NP0 50V	4022 301 60181
C1230	CC 12PF 5% 0805 NP0 50V	4022 301 60181
C1231	CC .47PF 50% 0805 NP0 50V	4022 301 60011
C1232	CC 10PF 5% 0805 NP0 50V	4022 301 60171
C1233	CC 100PF 5% 0805 NP0 50V	4022 301 60291
C1234	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1238	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1239	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1240	CC 470PF 5% 0805 NP0 50V	4022 301 60371
C1241	CC 470PF 5% 0805 NP0 50V	4022 301 60371
C1244	CER CAP 1 500V 0.25PF 1.2PF	2222 654 09128
C1245	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1250	MKC CAP 250V 10% 68NF	2222 344 48683
C1262	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1263	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1264	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1265	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1273	CC 15NF 10% 0805 X7R 50V	4022 301 60481
C1282	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1283	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1292	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1293	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1294	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1295	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1296	CC 100NF 10% 0805 X7R 50V	4022 301 61331

Reference Designator	Description	Ordering Code
C1297	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1298	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1299	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1300	CC 33PF 5% 0805 NP0 50V	4022 301 60231
C1301	CC 33PF 5% 0805 NP0 50V	4022 301 60231
C1302	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1304	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1308	ELCAP 25V SMD 20% 10UF	2020 021 91074
C1309	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1312	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1325	CC 2.2NF 1% 1206 NP0 25V	4022 301 61181
C1331	CC 2.2NF 1% 1206 NP0 25V	4022 301 61181
C1333	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1340	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1341	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1342	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1343	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1344	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1345	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C1346	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1350	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1500	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1501	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1504	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C1505	CC 220PF 5% 0805 NP0 50V	4022 301 60331
C1506	CC 2.2NF 10% 0805 X7R 50V	4022 301 60431
C1507	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1508	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C1523	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C1524	CC 150PF 5% 0805 NP0 50V	4022 301 60311
C1526	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C1530	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1538	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C1550	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C1551	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1570	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C1575	CER CAP X5R 1206 10% 1UF	5322 126 14089
C1576	ELCAP 25V SMD 20% 10UF	2020 021 91074
C1577	TACAP 10V SMD 20% 100UF	4022 301 61231
C1578	ELCAP 25V SMD 20% 10UF	2020 021 91074
C1579	TACAP 10V SMD 20% 100UF	4022 301 61231
C1580	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1586	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1587	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1588	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1589	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1590	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1592	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1593	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1594	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1595	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C1596	CC 100NF 10% 0805 X7R 50V	4022 301 61331

Reference Designator	Description	Ordering Code
C1597	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2000	CC 2.2NF 10% 0805 X7R 50V	4022 301 60431
C2001	CC 2.2NF 10% 0805 X7R 50V	4022 301 60431
C2002	CC 2.2NF 10% 0805 X7R 50V	4022 301 60431
C2003	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C2004	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C2005	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C2006	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C2007	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2008	CER CAP X5R 1206 10% 1UF	5322 126 14089
C2010	CC 220PF 5% 0805 NP0 50V	4022 301 60331
C2011	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C2015	CC 470PF 5% 0805 NP0 50V	4022 301 60371
C2020	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2021	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2022	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2023	CC 1PF 25% 0805 NP0 50V	4022 301 60051
C2024	CC 1PF 25% 0805 NP0 50V	4022 301 60051
C2025	CC 1PF 25% 0805 NP0 50V	4022 301 60051
C2026	CC 15PF 5% 0805 NP0 50V	4022 301 60191
C2028	CC 2.2PF 11% 0805 NP0 50V	4022 301 60091
C2030	CC 2.2PF 11% 0805 NP0 50V	4022 301 60091
C2031	CC 2.2PF 11% 0805 NP0 50V	4022 301 60091
C2032	CC 2.2PF 11% 0805 NP0 50V	4022 301 60091
C2033	CC 1PF 25% 0805 NP0 50V	4022 301 60051
C2034	CC 4.7PF 6% 0805 NP0 50V	4022 301 60131
C2036	CC 39PF 5% 0805 NP0 50V	4022 301 60241
C2037	CC 39PF 5% 0805 NP0 50V	4022 301 60241
C2038	CC 39PF 5% 0805 NP0 50V	4022 301 60241
C2039	CC 2.2NF 10% 0805 X7R 50V	4022 301 60431
C2051	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2052	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2053	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2054	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2055	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2060	CC 4.7NF 10% 0805 X7R 50V	4022 301 60451
C2061	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2062	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2063	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C2064	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2065	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2200	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2201	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2202	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2203	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2204	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2205	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2206	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C2210	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2211	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2212	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2213	CC 100NF 10% 0805 X7R 50V	4022 301 61331

Reference Designator	Description	Ordering Code
C2214	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2216	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C2220	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2221	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2222	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2230	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2231	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2232	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2233	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2240	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2241	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2242	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2243	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2250	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2251	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2252	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2253	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2254	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2255	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2260	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2261	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2262	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2263	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2264	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2270	ELCAP 25V SMD 20% 10UF	2020 021 91074
C2271	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2272	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2273	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2274	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2280	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2281	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2282	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2283	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2284	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C2291	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3000	CC 4.7PF 6% 0805 NP0 50V	4022 301 60131
C3001	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3003	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3004	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3010	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3011	ELCAP 25V SMD 20% 10UF	2020 021 91074
C3100	CC 4.7PF 6% 0805 NP0 50V	4022 301 60131
C3101	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3103	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3104	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3110	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3200	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3201	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3202	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3203	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3300	CC 4.7NF 10% 0805 X7R 50V	4022 301 60451
C3301	CC 4.7NF 10% 0805 X7R 50V	4022 301 60451

Reference Designator	Description	Ordering Code
C3302	CC 4.7NF 10% 0805 X7R 50V	4022 301 60451
C3305	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3306	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3307	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3308	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3309	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3310	CC 4.7NF 10% 0805 X7R 50V	4022 301 60451
C3311	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3312	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3313	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3500	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3501	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3502	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3503	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3504	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3505	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3510	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3511	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3513	CC 100PF 5% 0805 NP0 50V	4022 301 60291
C3514	CC 100PF 5% 0805 NP0 50V	4022 301 60291
C3519	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C3520	CC 27PF 5% 0805 NP0 50V	4022 301 60221
C3521	CC 27PF 5% 0805 NP0 50V	4022 301 60221
C3522	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C3523	CC 22PF 5% 0805 NP0 50V	4022 301 60211
C3524	CC 18PF 5% 0805 NP0 50V	4022 301 60201
C3529	CC 2.2PF 11% 0805 NP0 50V (PCB version 4&5 only)	4022 301 60091
C3530	CC 18PF 5% 0805 NP0 50V	4022 301 60201
C3533	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C3534	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4000	ELCAP 25V RAD 20% 470UF	4022 301 61271
C4001	ELCAP 25V RAD 20% 470UF	4022 301 61271
C4002	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4004	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C4005	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C4010	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4011	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4012	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4014	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4015	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4016	ELCAP 25V SMD 20% 10UF	2020 021 91074
C4020	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4021	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4022	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4023	TACAP 6.3V SMD 20% 100UF	4022 301 61211
C4024	ELCAP 35V SMD 20% 47UF	5322 124 11842
C4030	CER CAP X5R 1206 10% 1UF	5322 126 14089
C4031	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C4032	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C4033	CC 22NF 10% 0805 X7R 50V	4022 301 60491
C4034	ELCAP 25V SMD 20% 10UF	2020 021 91074
C4040	CC 100NF 10% 0805 X7R 50V	4022 301 61331

Reference Designator	Description	Ordering Code
C4100	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4101	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4102	CER CAP X5R 1206 10% 1UF	5322 126 14089
C4103	CER CAP X5R 1206 10% 1UF	5322 126 14089
C4104	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4110	CER CAP Y5V 1206 10% 1UF	5322 126 14086
C4111	ELCAP 25V RAD 20% 470UF	4022 301 61271
C4112	ELCAP 25V SMD 20% 10UF	2020 021 91074
C4113	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4114	ELCAP 25V RAD 20% 470UF	4022 301 61271
C4115	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C4120	ELCAP 25V SMD 20% 10UF	2020 021 91074
C4121	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4122	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4123	CC 150PF 5% 0805 NP0 50V	4022 301 60311
C4200	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4201	CER CAP X5R 1206 10% 1UF	5322 126 14089
C4202	CC 680PF 5% 0805 NP0 50V	5322 126 10733
C4203	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4204	CC 10NF 10% 0805 X7R 50V	4022 301 60471
C4210	CC 47NF 20% 0805 X7R 25V	4022 301 60551
C4211	MKT FILM CAP63V 10% 100NF	2222 370 78104
C4212	CER.CAP. 2KV +-5% 33PF	5322 126 14047
C4213	CER CAP X5R 1206 10% 1UF	5322 126 14089
C4214	ELCAP 25V RAD 20% 470UF	4022 301 61271
C4220	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4221	CC 1NF 5% 0805 NP0 50V	4022 301 60411
C4222	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4223	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4300	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4301	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4302	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4303	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4304	CC 100NF 10% 0805 X7R 50V	4022 301 61331
C4310	CC 22NF 10% 0805 X7R 50V	4022 301 60491
D1500	* 2X4-IN MUX/DM 74HC4052D PEL	9337 148 30653
D1501	* 8-INP MUX74HC4051D PEL	9337 148 20653
D1502	* 8-INP MUX74HC4051D PEL	9337 148 20653
D1560	* 2X4-IN MUX/DM 74HC4052D PEL	9337 148 30653
D1570	* 8-ST SH/ST REG 74HC4094D PEL	9337 148 50653
D1571	* 8-ST SH/ST REG 74HC4094D PEL	9337 148 50653
D1572	* 4 X 2-INP SCHM 74HC132DPEL	9337 141 30653
D2000	* 3X2 INP A/MUX 74HC4053D PEL	9337 148 40653
D2001	* 8X TRANSC.3ST 74LVC543APW	4022 304 10311
D2002	* 8X TRANSC.3ST 74LVC543APW	4022 304 10311
D2003	* 4 X 2-INP OR 74LVC32AD	4022 304 10321
D2004	* 4 X 2-INP AND 74LVC08AD	4022 304 10331
D3000	* LOW VOLT ADC TDA8792M/C2/R1	5322 209 14837
D3100	* LOW VOLT ADC TDA8792M/C2/R1	5322 209 14837
D3200	* 2 X D-FF 74LVC74A	4022 304 10751
D3201	* 4 X 2-INP MUX 74LVC157A	4022 304 10761



Reference Designator	Description	Ordering Code
D3202	* 2 X D-FF 74LVC74APW	4022 304 10961
D3203	* 4 X 2-INP NAND 74LVC00APW	4022 304 10971
D3500	* D-ASIC MOT0002	4022 244 89232
D3501	* 16M FEPROM M5M29FB160AVP-80 MITSUBISHI	4022 304 10381
D3501	* 16M FEPROM TE28F160B3XXXXX See section 10.2 "FlashROM" !	4022 304 10382
D3502	* 512KX8SRAM M5M5408ATP-10VLL	4022 304 10411
D3503	* 512KX8SRAM M5M5408ATP-10VLL	4022 304 10411
D4300	* 8-INP MUX74HC4051D PEL	9337 148 20653
H1120	H.L.AN.OPTOCPLR HCNR201H.P	4022 304 10111
H1150	2X HS OPTOCPLR HCPL4534H.P	4022 304 10121
H1320	H.L.AN.OPTOCPLR HCNR201H.P	4022 304 10111
H1350	2X HS OPTOCPLR HCPL4534H.P	4022 304 10121
H1525	H.L.AN.OPTOCPLR HCNR201H.P	4022 304 10111
H1580	2X HS OPTOCPLR HCPL4534H.P	4022 304 10121
H3400	IR LED SFH409-2SIE	5322 130 61296
H3401	PHOTODIODEOP906 OPT OPT	5322 130 10777
H3500	PE SOUNDER PKM13EPP-4002 MUR	5322 280 10311
K1000	DPDT RELAY ASL-1.5W-K-B05	5322 280 10309
K1200	DPDT RELAY ASL-1.5W-K-B05	5322 280 10309
K1500	DPDT RELAY DE1A1B-L5V MAT	4022 303 20011
L1001	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L1002	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L1003	CHIP INDUCT. 22UH 10% TDK	4022 301 92061
L1100	CHIP INDUCT. 0.027UH 5% TDK	2422 535 96815
L1101	CHIP INDUCT. 0.027UH 5% TDK	2422 535 96815
L1201	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L1202	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L1203	CHIP INDUCT. 22UH 10% TDK	4022 301 92061
L1300	CHIP INDUCT. 0.027UH 5% TDK	2422 535 96815
L1301	CHIP INDUCT. 0.027UH 5% TDK	2422 535 96815
L2200	CHIP INDUCT. 1UH 5% TDK	2422 535 96505
L2203	CHIP INDUCT. 22UH 10% TDK	4022 301 92061
L2212	CHIP INDUCT. 22UH 10% TDK	4022 301 92061
L2230	CHIP INDUCT. 1UH 5% TDK	2422 535 96505
L2250	CHIP INDUCT. 1UH 5% TDK	2422 535 96505
L3000	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L4000	CHOKE 100UH TDK	4022 301 92071
L4001	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L4002	CHOKE 100UH TDK	4022 301 92071
L4003	CHOKE 100UH TDK	4022 301 92071
L4004	CHOKE 100UH TDK	4022 301 92071
L4010	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L4015	CHIP INDUCT. 47UH 10% TDK	4822 157 70794
L4100	SHIELDED CHOKE 22UH	4022 301 92041
L4101	SHIELDED CHOKE 22UH	4022 301 92041
L4200	SHIELDED CHOKE 150UH TDK	5322 157 10996
L4201	CHOKE 100UH TDK	4022 301 92071

Reference Designator	Description	Ordering Code
N1000	* C-ASIC OQ0260 - <b>See Caution in section 6.2.9</b>	4022 244 89993
N1200	* C-ASIC OQ0260 - <b>See Caution in section 6.2.9</b>	4022 244 89993
N1500	* HIGH PREC.OPAMP OP97EP AND	4022 304 10611
N1501	* 2X CMOS OPAMP LM662AIMNSC	4022 304 10551
N1515	* 2X JFET OPAMP TLE2082CD T.I	5322 209 12943
N1525	* 2X CMOS OPAMP LM662AIMNSC	4022 304 10551
N1540	* 2X CMOS OPAMP LM662AIMNSC	4022 304 10551
N1541	* LOW POW OPAMP LMC7101BIM5X NSC	5322 209 15144
N1575	* L.D.O.VOLT.REG LP2981M5X-50	4022 304 11051
N1576	* NEG.LDO.VOLT.REG ILC7362CM-50	4022 304 10591
N2000	* LOW POW OPAMP LMC7101BIM5X NSC	5322 209 15144
N2001	* S-ASIC IBM0001 - <b>See Caution in section 6.2.9</b>	4022 244 89982
N2020	* VID.SYNC.SEP. LM1881M NSC	9322 005 78685
N4000	* P-ASIC OQ0256	4022 244 89203
N4200	* LAMP CNTRLLR UC3872DWUNI	5322 209 14851
N4300	* LOW POW OPAMP LMC7101BIM5X NSC	5322 209 15144
R1000	SMDRES 10K 1% TC50 0805	4022 301 22071
R1001	SMDRES 10M 5% TC200 0805	4022 301 22451
R1002	SMDRES 10M 5% TC200 0805	4022 301 22451
R1003	SMDRES 10M 5% TC200 0805	4022 301 22451
R1004	SMDRES 10M 5% TC200 0805	4022 301 22451
R1010	SMDRES 464K 1% TC50 0805	4022 301 22651
R1011	SMDRES 0E 1% 0805	4022 301 21281
R1012	SMDRES 100E 1% TC100 0805	4022 301 21591
R1013	SMDRES 147E 1% TC100 0805	4022 301 21631
R1014	SMDRES 100E 1% TC100 0805	4022 301 21591
R1020	SMDRES 100E 1% TC100 0805	4022 301 21591
R1021	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1022	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1023	SMDRES 178E 1% TC100 0805	4022 301 21651
R1024	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1030	SMDRES 100E 1% TC100 0805	4022 301 21591
R1031	SMDRES 619K 1% TC50 0805	4022 301 22791
R1032	SMDRES 61K9 1% TC50 0805	4022 301 22851
R1033	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1034	SMDRES 619E 1% TC50 0805	4022 301 22871
R1038	SMDRES 261K 1% TC50 0805	4022 301 22591
R1040	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1041	SMDRES 619K 1% TC50 0805	4022 301 22791
R1046	SMDRES 909K 1% TC50 0805	4022 301 22431
R1049	SMDRES 121K 1% TC100 0805	4022 301 22321
R1050	MTL FILM RST MRS25 1% 487K	2322 156 24874
R1051	MTL FILM RST MRS25 1% 487K	2322 156 24874
R1052	SMDRES 26K1 1% TC50 0805	4022 301 22581
R1053	SMDRES 1M 1% TC50 0805	4022 301 22441
R1054	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1055	SMDRES 1M 1% TC50 0805	4022 301 22441
R1056	SMDRES 1M 1% TC50 0805	4022 301 22441
R1065	SMDRES 1M 1% TC50 0805	4022 301 22441
R1066	SMDRES 1M 1% TC50 0805	4022 301 22441
R1067	SMDRES 10M 5% TC200 0805	4022 301 22451

Reference Designator	Description	Ordering Code
R1068	SMDRES 121K 1% TC100 0805	4022 301 22321
R1073	SMDRES 7K5 1% TC100 0805	4022 301 22041
R1082	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1083	SMDRES 12K1 1% TC100 0805	4022 301 22091
R1092	SMDRES 1E 1% TC250 0805	4022 301 21291
R1093	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1094	SMDRES 10E 1% TC100 0805	4022 301 21351
R1095	SMDRES 10E 1% TC100 0805	4022 301 21351
R1096	SMDRES 10E 1% TC100 0805	4022 301 21351
R1097	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1098	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1099	SMDRES 10E 1% TC100 0805	4022 301 21351
R1100	SMDRES 1K 1% TC50 0805	4022 301 21831
R1101	SMDRES 1K 1% TC50 0805	4022 301 21831
R1102	SMDRES 4E64 1% TC100 0805	4022 301 21511
R1103	SMDRES 4E64 1% TC100 0805	4022 301 21511
R1104	SMDRES 464K 1% TC50 0805	4022 301 22651
R1105	SMDRES 31E6 1% TC100 0805	4022 301 21471
R1106	SMDRES 31E6 1% TC100 0805	4022 301 21471
R1107	SMDRES 464K 1% TC50 0805	4022 301 22651
R1108	SMDRES 3K83 1% TC100 0805	4022 301 21971
R1109	SMDRES 1K 1% TC50 0805	4022 301 21831
R1110	SMDRES 51E1 1% TC100 0805	4022 301 21521
R1111	SMDRES 51E1 1% TC100 0805	4022 301 21521
R1112	SMDRES 464E 1% TC100 0805	4022 301 21751
R1113	SMDRES 464E 1% TC100 0805	4022 301 21751
R1114	SMDRES 178E 1% TC100 0805	4022 301 21651
R1115	SMDRES 178E 1% TC100 0805	4022 301 21651
R1116	SMDRES 464K 1% TC50 0805	4022 301 22651
R1117	SMDRES 6E81 1% TC250 0805	4022 301 21341
R1118	SMDRES 6E81 1% TC250 0805	4022 301 21341
R1119	SMDRES 0E 1% 0805	4022 301 21281
R1120	SMDRES 0E 1% 0805	4022 301 21281
R1122	SMDRES 3K16 .1% TC25 1206	4022 301 22781
R1123	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1124	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1128	SMDRES 1K 1% TC50 0805	4022 301 21831
R1129	SMDRES 1K 1% TC50 0805	4022 301 21831
R1130	SMDRES 68E1 1% TC100 0805	4022 301 21551
R1131	SMDRES 3K16 1% TC100 0805 (PCB version 4&5)	4022 301 21951
R1131	SMDRES 2K87 1% TC100 0805 (PCB version ≥6)	4022 301 21941
R1132	SMDRES 3K16 .1% TC25 1206	4022 301 22781
R1133	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1134	SMDRES 1K 1% TC50 0805	4022 301 21831
R1135	SMDRES 1K 1% TC50 0805	4022 301 21831
R1136	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1139	SMDRES 7K5 1% TC100 0805	4022 301 22041
R1150	SMDRES 1K 1% TC50 0805	4022 301 21831
R1151	SMDRES 1K 1% TC50 0805	4022 301 21831
R1152	SMDRES 4E64 1% TC100 0805	4022 301 21511
R1153	SMDRES 4E64 1% TC100 0805	4022 301 21511
R1200	SMDRES 10K 1% TC50 0805	4022 301 22071

Reference Designator	Description	Ordering Code
R1201	SMDRES 10M 5% TC200 0805	4022 301 22451
R1202	SMDRES 10M 5% TC200 0805	4022 301 22451
R1203	SMDRES 10M 5% TC200 0805	4022 301 22451
R1204	SMDRES 10M 5% TC200 0805	4022 301 22451
R1210	SMDRES 464K 1% TC50 0805	4022 301 22651
R1211	SMDRES 0E 1% 0805	4022 301 21281
R1212	SMDRES 100E 1% TC100 0805	4022 301 21591
R1213	SMDRES 147E 1% TC100 0805	4022 301 21531
R1214	SMDRES 100E 1% TC100 0805	4022 301 21631
R1220	SMDRES 100E 1% TC100 0805	4022 301 21591
R1221	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1222	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1223	SMDRES 178E 1% TC100 0805	4022 301 21651
R1224	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1230	SMDRES 100E 1% TC100 0805	4022 301 21591
R1231	SMDRES 619K 1% TC50 0805	4022 301 22791
R1232	SMDRES 61K9 1% TC50 0805	4022 301 22851
R1233	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1234	SMDRES 619E 1% TC50 0805	4022 301 22871
R1238	SMDRES 261K 1% TC50 0805	4022 301 22591
R1240	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1241	SMDRES 619K 1% TC50 0805	4022 301 22791
R1246	SMDRES 909K 1% TC50 0805	4022 301 22431
R1249	SMDRES 121K 1% TC100 0805	4022 301 22321
R1250	MTL FILM RST MRS25 1% 487K	2322 156 24874
R1251	MTL FILM RST MRS25 1% 487K	2322 156 24874
R1252	SMDRES 26K1 1% TC50 0805	4022 301 22581
R1253	SMDRES 1M 1% TC50 0805	4022 301 22441
R1254	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1255	SMDRES 1M 1% TC50 0805	4022 301 22441
R1256	SMDRES 1M 1% TC50 0805	4022 301 22441
R1265	SMDRES 1M 1% TC50 0805	4022 301 22441
R1266	SMDRES 1M 1% TC50 0805	4022 301 22441
R1267	SMDRES 10M 5% TC200 0805	4022 301 22451
R1268	SMDRES 121K 1% TC100 0805	4022 301 22321
R1273	SMDRES 7K5 1% TC100 0805	4022 301 22041
R1282	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1283	SMDRES 12K1 1% TC100 0805	4022 301 22091
R1292	SMDRES 1E 1% TC250 0805	4022 301 21291
R1293	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1294	SMDRES 10E 1% TC100 0805	4022 301 21351
R1295	SMDRES 10E 1% TC100 0805	4022 301 21351
R1296	SMDRES 10E 1% TC100 0805	4022 301 21351
R1297	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1298	SMDRES 4E64 1% TC250 0805	4022 301 21331
R1299	SMDRES 10E 1% TC100 0805	4022 301 21351
R1300	SMDRES 1K 1% TC50 0805	4022 301 21831
R1301	SMDRES 1K 1% TC50 0805	4022 301 21831
R1302	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1303	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1304	SMDRES 464K 1% TC50 0805	4022 301 22651
R1305	SMDRES 31E6 1% TC100 0805	4022 301 21471

Reference Designator	Description	Ordering Code
R1306	SMDRES 31E6 1% TC100 0805	4022 301 21471
R1307	SMDRES 464K 1% TC50 0805	4022 301 22651
R1308	SMDRES 3K83 1% TC100 0805	4022 301 21971
R1309	SMDRES 1K 1% TC50 0805	4022 301 21831
R1310	SMDRES 51E1 1% TC100 0805	4022 301 21521
R1311	SMDRES 51E1 1% TC100 0805	4022 301 21521
R1312	SMDRES 464E 1% TC100 0805	4022 301 21751
R1313	SMDRES 464E 1% TC100 0805	4022 301 21751
R1314	SMDRES 178E 1% TC100 0805	4022 301 21651
R1315	SMDRES 178E 1% TC100 0805	4022 301 21651
R1316	SMDRES 464K 1% TC50 0805	4022 301 22651
R1317	SMDRES 6E81 1% TC250 0805	4022 301 21341
R1318	SMDRES 6E81 1% TC250 0805	4022 301 21341
R1319	SMDRES 0E 1% 0805	4022 301 21281
R1320	SMDRES 0E 1% 0805	4022 301 21281
R1322	SMDRES 3K16 .1% TC25 1206	4022 301 22781
R1323	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1324	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1328	SMDRES 1K 1% TC50 0805	4022 301 21831
R1329	SMDRES 1K 1% TC50 0805	4022 301 21831
R1330	SMDRES 68E1 1% TC100 0805	4022 301 21551
R1331	SMDRES 3K16 1% TC100 0805 (PCB version 4&5)	4022 301 21951
R1331	SMDRES 2K87 1% TC100 0805 (PCB version ≥6)	4022 301 21941
R1332	SMDRES 3K16 .1% TC25 1206	4022 301 22781
R1333	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1334	SMDRES 1K 1% TC50 0805	4022 301 21831
R1335	SMDRES 1K 1% TC50 0805	4022 301 21831
R1336	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1339	SMDRES 7K5 1% TC100 0805	4022 301 22041
R1350	SMDRES 1K 1% TC50 0805	4022 301 21831
R1351	SMDRES 1K 1% TC50 0805	4022 301 21831
R1352	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1353	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1500	MTL FILM RST MRS25 1% 332K	2322 156 13324
R1501	MTL FILM RST MRS25 1% 332K	2322 156 13324
R1502	MTL FILM RST MRS25 1% 332K	2322 156 13324
R1503	SMDRES 3K83 1% TC100 0805	4022 301 21971
R1504	SMDRES 261K 1% TC50 0805	4022 301 22591
R1505	SMDRES 26K1 1% TC50 0805	4022 301 22581
R1506	SMDRES 2K61 1% TC50 0805	4022 301 22571
R1507	SMDRES 261E 1% TC50 0805	4022 301 22561
R1508	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1509	SMDRES 19K6 1% TC50 0805	4022 301 22801
R1510	SMDRES 1K96 1% TC100 0805	4022 301 21901
R1511	SMDRES 100K 1% TC50 0805	4022 301 22311
R1512	SMDRES 1K 1% TC50 0805	4022 301 21831
R1513	SMDRES 2K61 1% TC50 0805	4022 301 22571
R1514	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1515	SMDRES 1M 1% TC50 0805	4022 301 22441
R1516	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1517	SMDRES 1M 1% TC50 0805	4022 301 22441
R1518	SMDRES 51K1 1% TC100 0805	4022 301 22241

Reference Designator	Description	Ordering Code
R1519	SMDRES 1K62 1% TC100 0805	4022 301 21881
R1520	SMDRES 51K1 1% TC100 0805	4022 301 22241
R1521	SMDRES 31K6 1% TC100 0805	4022 301 22191
R1522	SMDRES 2K15 1% TC100 0805	4022 301 21911
R1523	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1524	SMDRES 1K 1% TC50 0805	4022 301 21831
R1525	SMDRES 1K 1% TC50 0805	4022 301 21831
R1526	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1527	SMDRES 100E 1% TC100 0805	4022 301 21591
R1528	SMDRES 1K 1% TC50 0805	4022 301 21831
R1529	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1530	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1531	SMDRES 0E 1% 0805	4022 301 21281
R1532	SMDRES 1K 1% TC50 0805	4022 301 21831
R1533	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1534	SMDRES 1K62 1% TC100 0805	4022 301 21881
R1535	PTC THERM DISC 1000V 1K1	4022 301 22491
R1536	SMDRES 3K16 1% TC100 0805	4022 301 21951
R1537	SMDRES 511E 1% TC100 0805	4022 301 21761
R1538	SMDRES 100K 1% TC50 0805	4022 301 22311
R1539	SMDRES 100K 1% TC50 0805	4022 301 22311
R1540	SMDRES 21K5 1% TC50 0805	4022 301 22151
R1541	SMDRES 31K6 1% TC100 0805	4022 301 22191
R1544	SMDRES 6K19 1% TC50 0805	4022 301 22861
R1545	SMDRES 1K 1% TC50 0805	4022 301 21831
R1546	SMDRES 10K 1% TC50 0805	4022 301 22071
R1547	SMDRES 100K 1% TC50 0805	4022 301 22311
R1548	SMDRES 10K 1% TC50 0805	4022 301 22071
R1549	SMDRES 21K5 1% TC50 0805	4022 301 22151
R1550	SMDRES 100K 1% TC50 0805	4022 301 22311
R1551	SMDRES 21K5 1% TC50 0805	4022 301 22151
R1555	SMDRES 31K6 1% TC100 0805	4022 301 22191
R1556	SMDRES 100K 1% TC50 0805	4022 301 22311
R1557	SMDRES 9K09 1% TC50 0805	4022 301 22671
R1558	SMDRES 1M 1% TC50 0805	4022 301 22441
R1559	SMDRES 1M 1% TC50 0805	4022 301 22441
R1560	SMDRES 1M 1% TC50 0805	4022 301 22441
R1561	SMDRES 2K61 1% TC50 0805	4022 301 22571
R1562	SMDRES 26K1 1% TC50 0805	4022 301 22581
R1563	SMDRES 261K 1% TC50 0805	4022 301 22591
R1564	SMDRES 1M 1% TC50 0805	4022 301 22441
R1565	SMDRES 1M 1% TC50 0805	4022 301 22441
R1566	SMDRES 619K 1% TC50 0805	4022 301 22791
R1570	SMDRES 1M 1% TC50 0805	4022 301 22441
R1575	SMDRES 100E 1% TC100 0805	4022 301 21591
R1580	SMDRES 1K47 1% TC100 0805	4022 301 21871
R1581	SMDRES 1K47 1% TC100 0805	4022 301 21871
R1582	SMDRES 46E4 1% TC100 0805	4022 301 21511
R1583	SMDRES 46E4 1% TC100 0805	4022 301 21511
R2003	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2004	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2005	SMDRES 51K1 1% TC100 0805	4022 301 22241

Reference Designator	Description	Ordering Code
R2006	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2007	SMDRES 511E 1% TC100 0805	4022 301 21761
R2008	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2015	SMDRES 82K5 1% TC100 0805	4022 301 22291
R2016	SMDRES 82K5 1% TC100 0805	4022 301 22291
R2017	SMDRES 82K5 1% TC100 0805	4022 301 22291
R2018	SMDRES 82K5 1% TC100 0805	4022 301 22291
R2020	SMDRES 261K 1% TC50 0805	4022 301 22591
R2021	SMDRES 1M 1% TC50 0805	4022 301 22441
R2022	SMDRES 681K 1% TC100 0805	4022 301 22411
R2023	SMDRES 13K3 1% TC100 0805	4022 301 22101
R2024	SMDRES 10K 1% TC100 0805	4022 301 22071
R2025	SMDRES 5K62 1% TC100 0805	4022 301 22011
R2027	SMDRES 10K 1% TC50 0805	4022 301 22071
R2028	SMDRES 10K 1% TC50 0805	4022 301 22071
R2030	SMDRES 10K 1% TC50 0805	4022 301 22071
R2031	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2032	SMDRES 51K1 1% TC100 0805	4022 301 22241
R2033	SMDRES 10K 1% TC50 0805	4022 301 22071
R2034	SMDRES 1K 1% TC50 0805	4022 301 21831
R2035	SMDRES 100E 1% TC100 0805	4022 301 21591
R2036	SMDRES 100K 1% TC50 0805	4022 301 22311
R2037	SMDRES 10E 1% TC100 0805	4022 301 21351
R2040	SMDRES 0E 1% 0805	4022 301 21281
R2049	SMDRES 1K47 1% TC100 0805	4022 301 21871
R2050	SMDRES 1K 1% TC50 0805	4022 301 21831
R2051	SMDRES 100E 1% TC100 0805	4022 301 21591
R2052	SMDRES 17K8 1% TC100 0805	4022 301 22131
R2053	SMDRES 422E 1% TC100 0805	4022 301 21741
R2060	SMDRES 1M 1% TC50 0805	4022 301 22441
R2061	SMDRES 383K 1% TC100 0805	4022 301 22381
R2062	SMDRES 42K2 1% TC100 0805	4022 301 22221
R2063	SMDRES 178K 1% TC100 0805	4022 301 22341
R2202	SMDRES 1E 1% TC250 0805	4022 301 21291
R2204	SMDRES 1E 1% TC250 0805	4022 301 21291
R2210	SMDRES 1E 1% TC250 0805	4022 301 21291
R2213	SMDRES 1E 1% TC250 0805	4022 301 21291
R2214	SMDRES 1E 1% TC250 0805	4022 301 21291
R2220	SMDRES 1E 1% TC250 0805	4022 301 21291
R2221	SMDRES 1E 1% TC250 0805	4022 301 21291
R2222	SMDRES 1E 1% TC250 0805	4022 301 21291
R2232	SMDRES 1E 1% TC250 0805	4022 301 21291
R2233	SMDRES 1E 1% TC250 0805	4022 301 21291
R2240	SMDRES 2K15 1% TC100 0805	4022 301 21911
R2242	SMDRES 2K15 1% TC100 0805	4022 301 21911
R2252	SMDRES 1E 1% TC250 0805	4022 301 21291
R2253	SMDRES 1E 1% TC250 0805	4022 301 21291
R2254	SMDRES 1E 1% TC250 0805	4022 301 21291
R2260	SMDRES 1E 1% TC250 0805	4022 301 21291
R2261	SMDRES 1E 1% TC250 0805	4022 301 21291
R2262	SMDRES 1E 1% TC250 0805	4022 301 21291
R2263	SMDRES 1E 1% TC250 0805	4022 301 21291

Reference Designator	Description	Ordering Code
R2264	SMDRES 1E 1% TC250 0805	4022 301 21291
R2270	SMDRES 1E 1% TC250 0805	4022 301 21291
R2272	SMDRES 1E 1% TC250 0805	4022 301 21291
R2273	SMDRES 1E 1% TC250 0805	4022 301 21291
R2280	SMDRES 1E 1% TC250 0805	4022 301 21291
R2282	SMDRES 1E 1% TC250 0805	4022 301 21291
R2283	SMDRES 1E 1% TC250 0805	4022 301 21291
R2284	SMDRES 1E 1% TC250 0805	4022 301 21291
R2291	SMDRES 1E 1% TC250 0805	4022 301 21291
R3000	SMDRES 21K5 1% TC50 0805	4022 301 22151
R3001	SMDRES 1E 1% TC250 0805	4022 301 21291
R3002	SMDRES 1E 1% TC250 0805	4022 301 21291
R3003	SMDRES 1E 1% TC250 0805	4022 301 21291
R3100	SMDRES 21K5 1% TC50 0805	4022 301 22151
R3102	SMDRES 1E 1% TC250 0805	4022 301 21291
R3103	SMDRES 1E 1% TC250 0805	4022 301 21291
R3200	SMDRES 100K 1% TC50 0805	4022 301 22311
R3300	SMDRES 147K 1% TC50 0805	4022 301 22331
R3301	SMDRES 147K 1% TC50 0805	4022 301 22331
R3302	SMDRES 147K 1% TC50 0805	4022 301 22331
R3303	SMDRES 42K2 1% TC100 0805	4022 301 22221
R3304	SMDRES 42K2 1% TC100 0805	4022 301 22221
R3310	SMDRES 147K 1% TC50 0805	4022 301 22331
R3311	SMDRES 51K1 1% TC100 0805	4022 301 22241
R3312	SMDRES 3K16 1% TC100 0805	4022 301 21951
R3313	SMDRES 1K47 1% TC100 0805	4022 301 21871
R3400	SMDRES 162E 1% TC100 0805	4022 301 21641
R3401	SMDRES 261K 1% TC50 0805	4022 301 22591
R3500	SMDRES 0E 1% 0805	4022 301 21281
R3501	SMDRES 100K 1% TC50 0805	4022 301 22311
R3502	SMDRES 51K1 1% TC100 0805	4022 301 22241
R3503	SMDRES 0E 1% 0805	4022 301 21281
R3504	SMDRES 3K16 1% TC100 0805	4022 301 21951
R3505	SMDRES 3K16 1% TC100 0805	4022 301 21951
R3506	SMDRES 100K 1% TC50 0805	4022 301 22311
R3510	SMDRES 10K 1% TC50 0805	4022 301 22071
R3513	SMDRES 100E 1% TC100 0805	4022 301 21591
R3514	SMDRES 100E 1% TC100 0805	4022 301 21591
R3520	SMDRES 0E 1% 0805	4022 301 21281
R3521	SMDRES 0E 1% 0805	4022 301 21281
R3522	SMDRES 0E 1% 0805	4022 301 21281
R4000	SMDRES .33E 5% TC700 1206	4022 301 21261
R4001	SMDRES 100K 1% TC50 0805	4022 301 22311
R4002	SMDRES 100E 1% TC100 0805	4022 301 21591
R4003	SMDRES 0.1E 5% TC999 1206	4022 301 21251
R4011	SMDRES 237E 1% TC100 0805	4022 301 21681
R4012	SMDRES 3K83 1% TC100 0805	4022 301 21971
R4013	SMDRES 2K15 1% TC100 0805	4022 301 21911
R4014	SMDRES 38K3 1% TC100 0805	4022 301 22211
R4020	SMDRES 12K1 1% TC100 0805	4022 301 22091
R4021	SMDRES 34K8 1% TC100 0805	4022 301 22201
R4022	SMDRES 51K1 1% TC100 0805	4022 301 22241



Reference Designator	Description	Ordering Code
R4023	SMDRES 100E 1% TC100 0805	4022 301 21591
R4025	SMDRES 10K 1% TC50 0805	4022 301 22071
R4100	SMDRES 10K 1% TC50 0805	4022 301 22071
R4101	SMDRES 0E15 1% TC75 2010	4022 301 22471
R4102	SMDRES 2K87 1% TC100 0805	4022 301 21941
R4103	SMDRES 46E4 1% TC100 0805	4022 301 21511
R4104	SMDRES 0.1E 5% TC999 1206	4022 301 21251
R4110	SMDRES 10E 1% TC100 0805	4022 301 21351
R4112	SMDRES 10E 1% TC100 0805	4022 301 21351
R4113	SMDRES 38K3 1% TC100 0805	4022 301 22211
R4114	SMDRES 8K25 1% TC100 0805	4022 301 22051
R4120	SMDRES 34K8 1% TC100 0805	4022 301 22201
R4121	SMDRES 1K47 1% TC100 0805	4022 301 21871
R4122	SMDRES 100K 1% TC50 0805	4022 301 22311
R4123	SMDRES 100K 1% TC50 0805	4022 301 22311
R4124	SMDRES 100K 1% TC50 0805	4022 301 22311
R4130	SMDRES 1M 1% TC50 0805	4022 301 22441
R4200	SMDRES 10K 1% TC50 0805	4022 301 22071
R4201	SMDRES 100K 1% TC50 0805	4022 301 22311
R4202	SMDRES 5K11 1% TC100 0805	4022 301 22001
R4203	SMDRES 1K 1% TC50 0805	4022 301 21831
R4204	SMDRES 46E4 1% TC100 0805	4022 301 21511
R4205	SMDRES 4E64 1% TC250 0805	4022 301 21331
R4206	SMDRES 10K 1% TC50 0805 (PCB version ≥6 only)	4022 301 22071
R4207	SMDRES 6K19 1% TC100 1206	4022 301 20781
R4208	SMDRES 10K 1% TC100 1206	4022 301 20831
R4300	SMDRES 21K5 1% TC50 0805	4022 301 22151
R4301	SMDRES 100K 1% TC50 0805	4022 301 22311
R4302	SMDRES 42K2 1% TC100 0805	4022 301 22221
R4303	SMDRES 100E 1% TC100 0805	4022 301 21591
R4304	SMDRES 1K 1% TC50 0805 (PCB version 4&5 only)	4022 301 21831
R4305	SMDRES 0E 1% 0805 (PCB version 6)	4022 301 21281
R4305	SMDRES 17K8 1% TC100 0805 (PCB version 7)	4022 301 22131
T1100	K20 FLOAT SIGNAL TRANSFORMER	4022 301 92221
T1102	EF16 FLOAT POWER TRANSFORMER	4022 301 92211
T1300	K20 FLOAT SIGNAL TRANSFORMER	4022 301 92221
T1302	EF16 FLOAT POWER TRANSFORMER	4022 301 92211
T1575	EF16 FLOAT POWER TRANSFORMER	4022 301 92211
T4001	EF16 FLYBACK TRANSFORMER	4022 301 92201
T4200	SMD TRNSFRMR 678XN-1081 TOK	5322 146 10634
V1004	* PNP/NPN TR.PAIR BCV65PEL	5322 130 10762
V1009	* PREC.VOLT.REF. LM4041CIM3X-1.2	4022 304 10571
V1100	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1101	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1102	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1103	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1104	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1105	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1106	* HF TRANSISTOR BFR92A PEL	9335 515 60215
V1120	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011

Reference Designator	Description	Ordering Code
V1150	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1151	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1152	* SCHOTTKY DIODE BAT74 PEL	9337 422 90215
V1160	* SCHOTTKY DIODE MBRS1100T3 MOT	5322 130 10675
V1161	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V1162	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V1204	* PNP/NPN TR.PAIR BCV65PEL	5322 130 10762
V1209	* PREC.VOLT.REF. LM4041CIM3X-1.2	4022 304 10571
V1300	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1301	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1302	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1303	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1304	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1305	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1306	* HF TRANSISTOR BFR92A PEL	9335 515 60215
V1320	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1350	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1351	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1352	* SCHOTTKY DIODE BAT74 PEL	9337 422 90215
V1360	* SCHOTTKY DIODE MBRS1100T3 MOT	5322 130 10675
V1361	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V1362	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V1515	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1516	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1525	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1535	* LF TRANSISTOR BC868 PEL	9336 787 70115
V1536	* LF TRANSISTOR BC868 PEL	9336 787 70115
V1537	* VOLT REG DIODE BZD27-C7V5 PEL	9338 674 50115
V1544	* P-CHAN FET SST270SLX	4022 304 10541
V1545	* SWITCH DIODE BAV99 PEL	5322 130 34337
V1550	* PREC.VOLT.REF. LM4041CIM3X-1.2	4022 304 10571
V1555	* PREC.VOLT.REF. LM4041CIM3X-1.2	4022 304 10571
V1560	* P-CHAN FET SST270SLX	4022 304 10541
V1575	* SCHOTTKY DIODE MBRS1100T3 MOT	5322 130 10675
V1576	* SCHOTTKY DIODE MBRS1100T3 MOT	5322 130 10675
V1580	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1581	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V1582	* SCHOTTKY DIODE BAT74 PEL	9337 422 90215
V1583	* LF TRANSISTOR BC858CLT1 PEL	4022 304 11021
V1584	* LF TRANSISTOR BC858CLT1 PEL	4022 304 11021
V2000	* LF TRANSISTOR BC858CLT1 PEL	4022 304 11021
V2001	* LF TRANSISTOR BC858CLT1 PEL	4022 304 11021
V2002	* SCHOTTKY DIODE BAS85 PEL	9338 765 40115
V3500	* P-CHAN. MOSFET BSS84 PEL	5322 130 10669
V4000	* LF TRANSISTOR BC869 PEL	9336 787 80115
V4001	* N-CHANN FET NDC651NNSC	4022 304 10341
V4004	* RECT DIODE BYD77DPEL	9338 123 60115
V4005	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V4011	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V4012	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V4013	* SCHOTTKY DIODE MBRS340T3 MOT	5322 130 10674
V4014	* RECT DIODE BYD77DPEL	9338 123 60115

Reference Designator	Description	Ordering Code
V4015	* SCHOTTKY DIODE MBR51100T3 MOT	5322 130 10675
V4100	* SCHOTTKY DIODE MBR5340T3 MOT	5322 130 10674
V4101	* SCHOTTKY DIODE MBR5340T3 MOT	5322 130 10674
V4102	* POWER TMOS FET MTD5P06ET4 MOT	9322 085 50682
V4104	* SIL DIODE BAS16 PEL	5322 130 31928
V4105	* DUAL SCH.DIODE MBRD630CTT4 MOT	5322 130 62922
V4110	* VOLT REG DIODE BZX84-B7V5 PEL	9336 960 10215
V4111	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V4112	* LF TRANSISTOR BC848CLT1 PEL	4022 304 11011
V4114	* PREC.VOLT.REF. LM4041CIM3X-1.2	4022 304 10571
V4200	* TMOS P-CH FET MMSF3P03HD MOT	5322 130 10672
V4201	* TMOS N-CH FET MMDF3N04HD MOT	4022 304 10221
V4202	* SCHOTTKY DIODE MBR5340T3 MOT	5322 130 10674
V4203	* SIL DIODEBAS16 PEL	5322 130 31928
V4204	* LF TRANSISTOR BC858CLT1 PEL	4022 304 11021
V4210	* N-CHAN FET BSN20 PEL	9340 125 00215
X3401	MALE HEADER 4-P SNG RT.ANG	4022 303 10111
X3501	FLEX-PRINT CON 15-P FCN	5322 265 10725
X3600	FLEX-PRINT CON 15-P FCN	5322 265 10725
X4100	MALE HDR 2.5MM 4-P SNG STRGHT	4022 303 10071
X4101	POWER CONNECTOR SP	4022 244 92561
X4200	MALE HEADER 7-P SNG RT.ANG	5322 267 10502
Z4100	EMI-FILTER 50V 10AMUR	5322 156 11139

## 8.7 Accessories

Table 8-4. Standard Accessories

Item	Ordering Code
<p>Battery Charger, available models:</p> <ul style="list-style-type: none"> <li>Universal Europe 230 V, 50 and 60 Hz</li> <li>North America 120 V, 50 and 60 Hz</li> <li>United Kingdom 240 V, 50 and 60 Hz</li> <li>Japan 100 V, 50 and 60 Hz</li> <li>Australia 240 V, 50 and 60 Hz</li> <li>Universal 115 V/230 V, 50 and 60 Hz</li> </ul> <p><i>The universal adapter is standard equipped with a plug EN60320-2.2G. For connection to the mains outlet use a line plug that complies with National Standards. The 230V rating of the BC190/808 is not for use in North America.</i></p>	<p>BC190/801 BC190/803 BC190/804 BC190/806 BC190/807 BC190/808</p>
<p>Voltage Probe Set (Red), designed for use with the Fluke ScopeMeter 190 series test tool.</p> <p>The set includes the following items (not available separately):</p> <ul style="list-style-type: none"> <li>• VP190, 10:1 Voltage Probe (red)</li> <li>• PB1901, 4-mm Test Probe for Probe Tip (red)</li> <li>• HC190, Hook Clip for Probe Tip (red)</li> <li>• HC1901, Ground Lead with Hook Clip (red)</li> <li>• GM190, Ground Lead with Mini Alligator Clip (black)</li> <li>• Ground Spring for Probe Tip (black)</li> <li>• Adjustment tool (screwdriver)</li> </ul>	<p>VP190-R</p>
<p>Voltage Probe Set (Gray), designed for use with the Fluke ScopeMeter 190 series test tool.</p> <p>The set includes the following items (not available separately):</p> <ul style="list-style-type: none"> <li>• VP190, 10:1 Voltage Probe (gray)</li> <li>• HC190, Hook Clip for Probe Tip (gray)</li> <li>• HC1901, Ground Lead with Hook Clip (gray)</li> <li>• GM190, Ground Lead with Mini Alligator Clip (black)</li> </ul>	<p>VP190-G</p>
<p>Flexible Test Leads (red and black General Purpose Leads)</p>	<p>TL24</p>
<p>Accessory Set (Red)</p> <p>The set includes the following items (not available separately):</p> <ul style="list-style-type: none"> <li>• AC190, Industrial Alligator for Probe Tip (red)</li> <li>• PB190, 2-mm Test Probe for Probe Tip (red)</li> <li>• AC1901, Industrial Alligator for Banana Jack (red)</li> <li>• BB190, 2-mm Test Probe for Banana Jack (red)</li> <li>• GB190, Ground Lead with 4-mm Banana Jack (black)</li> </ul>	<p>AS190-R</p>
<p>Accessory Set (Gray)</p> <p>The set includes the following items (not available separately):</p> <ul style="list-style-type: none"> <li>• AC190, Industrial Alligator for Probe Tip (gray)</li> <li>• PB190, 2-mm Test Probe for Probe Tip (gray)</li> <li>• AC1901, Industrial Alligator for Banana Jack (black)</li> <li>• BB190, 2-mm Test Probe for Banana Jack (black)</li> <li>• GB190, Ground Lead with 4-mm Banana Jack (black)</li> </ul>	<p>AS190-G</p>

**Table 8-5. Standard Accessories (continued)**

Item	Ordering Code
Replacement Set for Voltage Probe VP190 The set includes the following items (not available separately): <ul style="list-style-type: none"> <li>• 1x PB1901, 4-mm Test Probe for Probe Tip (red)</li> <li>• 3x HC190, Hook Clip for Probe Tip (2 red, 1 grey)</li> <li>• 2x HC1901, Ground Lead with Hook Clip (red and grey)</li> <li>• 2x GM190, Ground Lead with Mini Alligator Clip (black)</li> <li>• 5x Ground Spring for Probe Tip (black)</li> <li>• 1x Adjustment Tool</li> </ul>	RS190

**Table 8-6. Users Manuals**

Item	Ordering Code
Users Manual (English)	4822 872 00841
Users Manual (German)	4822 872 00904
Users Manual (French)	4822 872 00905
Users Manual (Spanish)	4822 872 00906
Users Manual (Portuguese)	4822 872 00907
Users Manual (Italian)	4822 872 00908
Users Manual (Chinese)	4822 872 00909
Users Manual (Japanese)	4822 872 00911
Users Manual (Korean)	4822 872 00912

**Table 8-7. Optional Accessories**

Item	Ordering Code
Software & Cable Carrying Case Kit	SCC190
Set contains the following parts:	
• Optically Isolated RS-232 Adapter/Cable	PM9080
• Hard Carrying Case	C190
• FlukeView™ ScopeMeter Software for Windows 95®, 98® and NT®	SW90W
Optically Isolated RS-232 Adapter/Cable	PM9080
Hard Case	C190
Soft Case	C195
Current Shunt 4-20 mA	CS20MA
Print Adapter Cable for Parallel Printers	PAC91



# **Chapter 9**

## **Circuit Diagrams**

<b>Title</b>	<b>Page</b>
9.1 Introduction.....	9-3
9.2 Tracing signals in circuit diagrams.....	9-3
9.3 Locating Parts & Test Points.....	9-3
9.4 Diagrams.....	9-10





## 9.1 Introduction

This chapter contains all circuit diagrams and reference designator views of the test tool. There are no serviceable parts on the LCD unit. Therefore no circuit diagrams and reference designator views of the LCD unit are provided.

## 9.2 Tracing signals in circuit diagrams

To trace signals from one place to another in the circuit diagrams you can use the coordinates on the edges of the diagrams and Table 9-1, see the example below.

Example:

+2V6	8-G1	5-D10
------	------	-------

indicates that signal +2V6 goes from location G1 in circuit diagram Figure 9-8, to location D10 in circuit diagram Figure 9-5.

The shaded cells in Table 9-1 show the source location of the signal

## 9.3 Locating Parts & Test Points

*Note:*

*Capacitors of 0 pF, and resistors of 100 MΩ shown in circuit diagrams are not placed on the PCA. They are drawn in the circuit diagrams for PCA layout purposes. In the layout design process they create locations on the PCA where capacitors or resistors can be placed.*

Use Table 9-2 to locate parts on the reference designator views of the Main PCA Top View (Figure 9-11) and Bottom View (Figure 9-12). The drawings are provided with coordinates at the edges.

Example:

B2000	T	D7
-------	---	----

indicates that part B200 can be found in location D7 on the Top View of the Main PCA drawing.

Use Table 9-3 to locate test points (Mxxxx) on the PCA Top Side.

Table 9-1. Source & Destination of Signals

+2V6	8-G1	5-C10	EXTTRIG	4-D1	7-F10	RLFB2	2-F1	4-D7		4-G7	4-E7
		7-H9	FLTPOWIN1	8-F1	1-C1	RLFEXT1	3-F1	4-F7	VDDMEMA	5-G7	4-H5
+3V3GAR	8-G4	8-H1		2-C1	3-D1	RLFEXT2	3-G1	4-F7	VDDMEMB	5-H7	4-C5
	7-A10	9-B4	FLTPOWIN2	8-F1	1-B1	RSTRAMP	7-E10	4-D1	VDDOUTA	5-H7	4-H3
+3V3SADC	8-C1	8-G9		2-B1	3-D1		6-B8				4-H4
	9-C4	9-D10	FREQPS	8-B1	7-B3	RXD	8-A1	7-B3	VDDOUTB	5-E7	4-C3
+3V45	8-G1	1-D1	GAIN0	3-D4	3-G6	RXDANA	9-C4	8-A10	VDDPLL	5-E7	4-F2
	2-D1	3-B1	GAIN1	3-D4	3-G6	SADCLEV	7-D10	9-A10	VDDREFS	5-D7	4-G2
	5-H10	6-H10	HFA1	1-H1	4-F7	SCLK	7-B10	4-C9	VDDTRGD	5-F7	4-C4
	7-H9	7-H10	HFA2	1-H1	4-F7	SCLKEXT	7-B3	3-B1			4-C5
		9-E10	HFB1	2-H1	4-E7	SCLKFLT	4-C8	1-D1	VGARVAL	8-G4	7-B3
+3V45J	5-H7	1-H2	HFB2	2-H1	4-E7			2-D1	VSBDIG	5-D3	4-H6
	2-H2	4-A8	HOLDOFF	7-F10	4-C1	SCNRATE1	4-C5	4-A8		4-H5	4-C4
		4-G7	10, 11, 12	3-D4	3-B8	SCNRATE2	4-C5	4-A8	VSBINP	5-D3	4-G7
+5V2	8-H1	4-B5			3-C8	SDAT	7-B10	4-B10		4-C6	4-G3
	4-G1	7-H9	INTRP	4-H2	6-C8	SDATEXT	7-B3	3-A1		4-F7	4-D7
	7-H10	9-E10	LINA	1-D8	1-A7	SDATFLT	4-C8	1-D1	VSBMEMAB	5-B3	4-C5
+VD	7-A9	4-G9	LINB	2-D8	2-A7			2-D1			4-H5
	4-H9	4-H10	LFA1	1-E1	4-G7	SEL0	3-B4	3-H6	VSBMGS	5-B3	4-D3
		4-D9	LFA2	1-E1	4-G7	SEL1	3-B4	3-H6	VSBOUTA	5-C3	4-G2
-1V8	8-G1	5-H6	LFB1	2-E1	4-E7	SELMUX0	7-B3	9-C10	VSBOUTB	4-C3	4-D2
-1V8J	5-H3	1-H2	LFB2	2-E1	4-E7	SELMUX1	7-B3	9-C10	VSBPLL	5-C3	4-F2
	2-H2	4-A9	LFEXT1	3-F1	4-F7	SELMUX2	7-B3	9-C10	VSSINP	5-G3	4-E7
-1V8JSB	5-D3	4-G7	LFEXT2	3-F1	4-F7	SLOWADC	9-C5	7-B10			4-G7
-30V	8-F1	7-G10			4-B8	SMPCLK	7-F10	6-B8	VSSMEMA	5-G3	4-H5
	8-G6	9-F3	LINTAB	7-C3	4-B10		6-D2	6-G2	VSSMEMB	5-G3	4-C5
ADC A	4-H1	6-G8	MAINVAL	8-B1	7-B3	TLON	7-G3	9-E10	VSSOUTA	5-H3	4-H3
ADC B	4-C1	6-E8	MIDADC	6-G8	4-G3	TRGLEV1A	7-E10	4-B8	VSSOUTB	5-E3	4-D4
ALLTRIG	4-D1	6-A8	OFFSETAD	7-E9	4-B10	TRGLEV1B	7-E10	4-C8			4-C4
		7-F10	OFFSTEXT	3-C1	3-H9	TRGLEV2A	7-E10	4-C8	VSSREFS	5-E3	4-G2
ATT0	3-D4	3-D10	PRCALAC	3-B3	3-D9	TRGLEV2B	7-D10	4-D8	VSSSTRGD	5-F3	4-C4
ATT1	3-D4	3-H8	PRSIGN	3-B3	3-A10	TRIGDT	4-C1	7-F10	VSSWARS	5-E3	4-E3
		3-C10	PWRON	7-B3	4-F9	TRIGQUAL	7-F10	6-A8	WRB	4-E9	4-F9
ATT2	3-D3	3-H6			8-A10	TRIGQUALJ	6-A4	4-C1			
ATT0SW	3-D8	3-H8	RAM CS1	7-E3	4-G8	TXD	7-B3	9-B4			
BACKBRIG	7-D10	9-E10	RAMPCLK	7-F10	4-E1	VIPSTOA	7-E10	4-H4			
BATCUR	8-A1	9-C10			6-C8			5-B8			
BATIDENT	8-H6	7-B3	RDB	4-F10	4-G10	VIPSTOB	7-E10	4-C5			
		9-C10	REFADCT	4-G1	4-B10			5-B8			
BATTEMP	8-A1	9-C10		4-A9	5-B10	VBAT	8-F8	9-G10			
BUZZER	7-B3	9-H3		6-E8	6-G8		8-G5	8-H3			
CHARCUR	7-D10	8-B10			9-C10	VBATSUP	8-E7	8-D8			
CLAMPN	3-H2	3-H4	REFPWM1	4-G1	7-E10	VCMLPLL	5-C7	4-E2			
CLAMPP	3-H2	3-H4			7-G10			4-F2			
CLKJILL	6-B4	4-E1	REFPWM2	8-A1	7-D10	VCMLTRGD	5-C7	4-C4			
CLKSWTCH	7-C3	6-C8	REL0	3-C3	3-H9	VDDDIG	5-G7	4-E2			
CONTRAST	7-D10	7-H10	REL1	3-C3	3-H10		4-F9	4-H3			
CSB	4-G9	4-E10	RLFA1	1-F1	4-G7		4-H5	4-H6			
ENSHPULS	7-F3	6-A8	RLFA2	1-F1	4-G7	VDDGMS	5-D8	4-E3			
ETRGSDAC	4-D1	9-C10	RLFB1	2-F1	4-D7	VDDINP	5-G7	4-C6			

**Table 9-2. Location of Parts on the PCA**

B2000	T	D7
B3500	B	C2
B3501	T	C8
B3502	T	C8
C1000	B	E7
C1001	T	E2
C1002	T	E3
C1003	T	E2
C1004	T	E3
C1010	T	E3
C1011	T	E3
C1012	T	E3
C1013	T	E3
C1014	T	E3
C1020	T	E2
C1021	T	E2
C1022	T	E3
C1025	T	E2
C1028	B	E8
C1029	B	E8
C1030	B	E8
C1031	T	E4
C1032	T	E3
C1033	T	E3
C1034	T	E3
C1038	B	F6
C1039	B	F6
C1040	B	E6
C1041	T	E4
C1043	T	E2
C1044	T	F3
C1045	T	F4
C1050	T	F3
C1062	B	E7
C1063	B	E7
C1064	B	E7
C1065	B	E7
C1073	T	E3
C1082	T	E3
C1083	B	E6
C1092	B	E7
C1093	B	E7
C1094	B	E7
C1095	B	E7
C1096	B	E7
C1097	B	E6
C1098	B	E7
C1099	B	E7
C1100	T	E4
C1101	T	E4
C1102	B	E6
C1104	B	E6
C1107	T	E5
C1108	T	D5
C1109	T	D5
C1112	T	E4
C1123	B	B6
C1124	B	E6
C1125	B	E6
C1126	B	E7
C1131	B	E5
C1132	B	E5
C1133	B	E5
C1140	T	E4
C1141	T	E4
C1142	T	F4
C1143	T	F4
C1144	T	F4
C1145	T	F4
C1150	B	E6
C1200	B	B7
C1201	T	B2
C1202	T	B3
C1203	T	B2
C1204	T	B3
C1210	T	B3
C1211	T	B3
C1212	T	B3
C1213	T	B3
C1214	T	B3
C1222	T	B3
C1225	T	B2
C1228	B	B8
C1229	B	B8
C1230	B	B8
C1231	T	B4
C1232	T	B3
C1233	T	B3
C1234	T	B3
C1238	B	A6
C1239	B	A6
C1240	B	B6
C1241	T	B4
C1243	T	B2
C1244	T	B2
C1245	T	A4
C1250	T	A3
C1262	B	B7
C1263	B	B7
C1264	B	B7
C1265	B	B7
C1273	T	B3
C1282	T	B3
C1283	B	B6
C1292	B	B7
C1293	B	B7
C1294	B	B7
C1295	B	B7
C1296	B	B7
C1297	B	B6
C1298	B	B7
C1299	B	B7
C1300	T	B4
C1301	T	B4
C1302	B	B6
C1304	B	B6
C1307	T	B5
C1308	T	C5
C1309	T	D5
C1312	T	B4
C1323	B	B6
C1324	B	B6
C1326	B	B7
C1325	T	A4
C1331	B	D5
C1332	B	D5
C1333	B	D5
C1340	T	B4
C1341	T	B4
C1342	T	A4
C1343	T	A4
C1344	T	A4
C1345	T	A4
C1346	B	A5
C1350	B	B6
C1500	B	C7
C1501	B	C7
C1504	T	C3
C1505	T	D3
C1506	T	D3
C1507	T	D3
C1508	T	C4
C1523	T	D4
C1524	T	D4
C1526	T	D4
C1529	B	D5
C1530	B	D5
C1533	B	D5
C1538	B	D6
C1550	T	D3
C1551	B	D7
C1570	B	D6
C1574	B	C7
C1575	B	C6
C1576	T	D4
C1577	B	C6
C1578	T	C5
C1579	B	C6
C1580	B	C6
C1586	T	D4
C1587	B	D7
C1588	B	C6
C1589	B	C7
C1590	B	C6
C1592	B	D7
C1593	B	C7
C1594	B	D6
C1595	B	D6
C1596	B	C6
C1597	B	D7
C2000	B	D4
C2001	B	D4
C2002	B	D4
C2003	B	C5
C2004	B	C4
C2005	B	C4
C2006	B	C4
C2007	B	D4
C2008	B	D4
C2010	B	C4
C2011	B	D4
C2015	B	E3
C2020	T	C6
C2021	T	C6
C2022	T	C6
C2023	B	C4
C2024	T	C6
C2025	B	C4
C2026	T	C6
C2028	B	D2
C2030	B	D2
C2031	B	E2
C2032	B	D2
C2033	B	D3
C2034	B	D3
C2036	T	D7
C2037	B	D3
C2038	B	D3
C2039	B	D3
C2051	B	E3
C2052	T	E7
C2053	B	E3
C2054	B	D4
C2055	B	D4
C2060	B	D4
C2061	B	D4
C2062	B	D4
C2063	B	D3
C2064	B	D3
C2065	T	C7
C2200	T	C6
C2201	B	E4
C2202	B	E4
C2203	B	E4
C2204	B	E4
C2205	B	D3
C2206	B	E4
C2210	B	D4
C2211	B	D4
C2212	B	D4
C2213	B	D4
C2214	B	D3
C2215	B	C3
C2216	T	C6
C2220	T	D7
C2221	B	D3
C2222	B	D3
C2230	T	C6
C2231	T	C6
C2232	B	D4
C2233	B	D3
C2240	T	C7
C2241	B	E4
C2242	T	C6
C2243	B	D4
C2250	T	C6
C2251	T	C6
C2252	B	E4
C2253	B	E4
C2254	B	D4
C2255	B	D4
C2260	B	D4
C2261	B	D4
C2262	B	D4
C2263	B	D3

C2264	B	D3
C2270	T	C6
C2271	B	E4
C2272	B	D4
C2273	B	D4
C2274	B	D4
C2280	B	D4
C2281	B	D4
C2282	B	D3
C2283	B	E3
C2284	B	D3
C2291	B	D3
C3000	B	D3
C3001	B	D3
C3003	B	D3
C3004	B	E3
C3010	B	D3
C3011	T	C7
C3100	B	D3
C3101	B	C3
C3103	B	D3
C3104	B	D3
C3110	B	D3
C3200	B	E8
C3201	B	D3
C3300	B	E2
C3301	B	D2
C3302	B	D2
C3305	B	F4
C3306	B	F4
C3307	B	F3
C3308	B	F4
C3309	B	F3
C3310	B	D2
C3311	B	D2
C3312	B	D2
C3313	B	D2
C3500	B	D1
C3501	B	E2
C3502	B	D3
C3503	B	D2
C3504	B	F2
C3505	B	C2
C3510	T	E9
C3511	B	D1
C3513	B	C3
C3514	B	C2
C3519	B	F2
C3520	B	C2
C3521	B	C2

C3522	B	C2
C3523	B	C2
C3524	B	C2
C3529	B	C2
C3530	B	C2
C3531	B	D3
C3532	B	D3
C3533	B	D3
C3534	B	D3
C4000	T	B7
C4001	T	C6
C4002	B	B3
C4004	B	B3
C4005	B	B3
C4010	T	B7
C4011	T	B6
C4012	T	B6
C4014	B	A4
C4015	B	B4
C4016	T	B6
C4020	T	B6
C4021	B	A4
C4022	T	B6
C4023	B	B5
C4024	T	B6
C4030	B	B3
C4031	T	A8
C4032	B	B2
C4033	B	B3
C4034	T	A8
C4040	B	A3
C4100	B	C1
C4101	B	C1
C4102	B	A2
C4103	B	C1
C4104	B	A2
C4110	B	A8
C4111	T	B8
C4112	T	B8
C4113	B	B2
C4114	T	C8
C4115	B	B3
C4120	T	A7
C4121	B	B2
C4122	B	A2
C4123	T	B7
C4200	B	E4
C4201	B	E4
C4202	B	F4
C4203	B	E3

C4204	B	E3
C4210	B	E4
C4211	T	E6
C4212	T	E7
C4213	T	F5
C4214	T	E5
C4220	B	F4
C4221	T	F6
C4222	T	E6
C4223	B	E4
C4300	B	B1
C4301	B	B2
C4302	B	B2
C4303	T	A9
C4304	T	B8
C4310	T	B8
D1500	T	D3
D1501	T	D4
D1502	T	D4
D1560	B	D7
D1570	B	C6
D1571	B	D6
D1572	B	D6
D2000	B	C3
D2001	T	E8
D2002	T	E8
D2003	B	E3
D2004	B	E3
D3000	T	D7
D3100	T	D7
D3200	B	E2
D3201	T	D7
D3202	T	C7
D3203	T	C7
D3500	T	D8
D3501	T	E8
D3502	B	D2
D3503	B	E2
D4300	T	B9
H1120	B	E5
H1150	B	E5
H1320	B	B5
H1350	B	B5
H1525	B	D5
H1580	B	C5
H3400	T	A6
H3401	T	A7
H3500	T	E7

K1000	T	F3
K1200	T	A3
K1500	T	C3
L1001	T	E4
L1002	T	F4
L1003	T	F4
L1100	T	D5
L1101	T	E5
L1201	T	B4
L1202	T	A4
L1203	T	A4
L1300	T	D5
L1301	T	D5
L2000	B	D3
L2200	B	C4
L2203	B	E4
L2212	B	C4
L2230	B	B4
L2250	B	C4
L3000	T	C7
L4000	T	B7
L4001	T	A6
L4002	T	A6
L4003	T	A5
L4004	T	B5
L4005	T	A6
L4010	B	B4
L4015	B	B4
L4100	T	B8
L4101	T	B8
L4200	T	E6
L4201	T	E6
N1000	T	E3
N1200	T	B3
N1500	T	C3
N1501	T	C4
N1515	T	C4
N1525	T	D4
N1540	T	D3
N1541	T	D2
N1575	B	C6
N1576	B	C7
N2000	T	C7
N2001	T	D6
N2020	B	C4
N4000	T	B7
N4200	B	E3

N4300	T	B9
R1000	B	E7
R1001	B	E7
R1002	B	E7
R1003	B	E7
R1004	B	E7
R1010	T	E3
R1011	T	E3
R1012	T	E3
R1013	T	E3
R1014	T	E3
R1020	T	E3
R1021	T	E2
R1022	T	E2
R1023	T	E3
R1024	T	E2
R1030	T	E3
R1031	B	E6
R1032	B	E7
R1033	B	E7
R1034	B	E7
R1038	T	F4
R1040	T	E4
R1041	T	F4
R1046	T	F4
R1049	T	F4
R1050	T	F2
R1051	T	F2
R1052	B	F7
R1053	B	F7
R1054	B	F7
R1055	B	F7
R1056	B	F7
R1065	T	F4
R1066	T	F4
R1067	T	F4
R1068	T	F4
R1073	B	E7
R1082	B	E7
R1083	T	E4
R1092	B	E6
R1093	B	E6
R1094	B	E6
R1095	B	E6
R1096	B	F6
R1097	B	E7
R1098	B	E7
R1099	B	E6
R1100	T	E4

R1101	T	E4
R1102	B	E6
R1103	B	E6
R1104	T	E4
R1105	T	E4
R1106	T	E7
R1107	T	E7
R1108	T	E5
R1109	T	E5
R1110	T	D5
R1111	T	D5
R1112	T	E4
R1113	T	E4
R1114	T	E4
R1115	T	E4
R1116	T	E4
R1117	T	E5
R1118	T	E5
R1119	T	E5
R1120	T	E5
R1122	T	E3
R1123	T	E4
R1124	T	E4
R1128	B	E6
R1129	B	E6
R1130	B	E6
R1131	B	E4
R1132	B	E5
R1133	B	E5
R1134	B	E5
R1135	B	E5
R1136	B	E5
R1139	B	F6
R1150	T	E4
R1151	T	E4
R1152	B	E5
R1153	B	E5
R1200	B	B7
R1201	B	B7
R1202	B	B7
R1203	B	B7
R1204	B	B7
R1210	T	B3
R1211	T	B3
R1212	T	B3
R1213	T	B3
R1214	T	B3
R1220	T	B3
R1221	T	B2
R1222	T	B2

R1223	T	B3
R1224	T	B2
R1230	T	B3
R1231	B	B6
R1232	B	B7
R1233	B	B7
R1234	B	B7
R1238	T	A4
R1240	T	B4
R1241	T	B4
R1246	T	A4
R1249	T	A4
R1250	T	A2
R1251	T	A2
R1252	B	A7
R1253	B	A7
R1254	B	A7
R1255	B	A7
R1256	B	A7
R1265	T	A4
R1266	T	A4
R1267	T	B4
R1268	T	A4
R1273	B	B7
R1282	B	B7
R1283	T	B4
R1292	B	B6
R1293	B	B6
R1294	B	A6
R1295	B	B6
R1296	B	A6
R1297	B	B7
R1298	B	B7
R1299	B	B6
R1300	T	B4
R1301	T	B4
R1302	B	B6
R1303	B	B6
R1304	T	B4
R1305	T	B4
R1306	T	B4
R1307	T	B4
R1308	T	D5
R1309	T	D5
R1310	T	D5
R1311	T	D5
R1312	T	B4
R1313	T	B4
R1314	T	B4
R1315	T	B4

R1316	T	B4
R1317	T	B5
R1318	T	B5
R1322	T	B3
R1323	T	B4
R1324	T	B4
R1328	B	B6
R1329	B	B6
R1330	B	B6
R1331	B	D5
R1332	B	D5
R1333	B	D5
R1334	B	C5
R1335	B	C5
R1336	B	D5
R1339	T	A6
R1350	T	B4
R1351	T	B4
R1352	B	B5
R1353	B	B5
R1500	T	D2
R1501	T	D2
R1502	T	C3
R1503	T	D3
R1504	T	D3
R1505	T	D3
R1506	T	D3
R1507	T	D3
R1508	T	C4
R1509	T	D4
R1510	T	C4
R1511	T	D4
R1512	T	D4
R1513	T	D4
R1514	T	C4
R1515	T	C4
R1516	T	C4
R1517	T	C4
R1518	T	C4
R1519	T	C4
R1520	T	C4
R1521	T	D4
R1522	T	D4
R1523	T	D4
R1524	T	D4
R1525	T	D4
R1526	T	D4
R1527	T	D4
R1528	B	D5
R1529	B	D5

R1530	B	D5
R1531	B	D5
R1532	B	D5
R1533	B	D5
R1534	T	C4
R1535	T	C2
R1536	B	C7
R1537	T	D3
R1538	B	D6
R1539	T	D3
R1540	B	C7
R1541	B	C7
R1544	B	D7
R1545	T	D4
R1546	T	D4
R1547	T	D4
R1548	T	D4
R1549	B	D7
R1550	B	D7
R1551	B	D7
R1555	B	D7
R1556	T	D3
R1557	T	D3
R1558	T	D3
R1559	T	D3
R1560	T	D3
R1561	B	D7
R1562	B	D7
R1563	B	D7
R1564	T	D3
R1565	T	D3
R1566	T	D3
R1570	B	D6
R1575	B	C6
R1580	T	C4
R1581	T	C4
R1582	T	C5
R1583	T	C5
R2003	B	C5
R2004	B	C4
R2005	B	C4
R2006	B	C4
R2007	B	E3
R2008	B	F3
R2010	B	C4
R2015	B	C5
R2016	B	C4
R2017	B	C4
R2018	B	C4
R2020	T	C6

R2021	T	C6
R2022	T	C6
R2023	T	C6
R2024	T	C6
R2025	T	C6
R2027	B	D4
R2028	B	D2
R2030	B	D2
R2031	B	D2
R2032	B	D2
R2033	B	D4
R2034	B	D4
R2035	T	C7
R2036	B	D3
R2037	B	D3
R2040	B	F2
R2049	B	E4
R2050	B	E4
R2051	T	E7
R2052	B	D3
R2053	B	D3
R2060	T	C6
R2061	T	C6
R2062	B	D5
R2063	T	C7
R2202	B	D4
R2204	B	D4
R2210	B	D4
R2213	B	D4
R2214	B	D4
R2220	B	D3
R2221	B	D4
R2222	B	C3
R2232	B	C4
R2233	B	D4
R2240	B	D4
R2241	B	D4
R2242	B	D4
R2243	B	D4
R2252	B	D4
R2253	B	D4
R2254	B	D4
R2260	B	D4
R2261	B	D4
R2262	B	D4
R2263	B	D4
R2264	B	D4
R2270	T	C5
R2272	B	D4
R2273	B	D4

R2280	B	D4
R2282	B	D4
R2283	B	D4
R2284	B	D4
R2291	B	C3
R3000	B	D3
R3001	B	C3
R3002	B	C3
R3003	B	C3
R3100	B	D3
R3102	B	C3
R3103	B	C3
R3200	B	C1
R3201	B	D3
R3300	B	E2
R3301	B	D2
R3302	B	D2
R3310	B	D2
R3311	B	D2
R3312	B	D2
R3313	B	D2
R3400	B	A4
R3401	B	A3
R3500	B	C1
R3501	T	C9
R3502	T	C9
R3503	T	F8
R3504	B	E3
R3505	B	E3
R3506	B	C2
R3510	B	D3
R3511	B	D3
R3512	B	D3
R3513	T	C8
R3514	T	C8
R3520	T	F8
R3521	T	F8
R3522	T	F8
R4000	T	A8
R4001	T	B7
R4002	B	B3
R4003	B	B3
R4011	B	B3
R4012	B	B3
R4013	B	B3
R4014	B	B3
R4020	B	B3
R4021	B	A3
R4022	B	A3
R4023	T	A7

R4025	B	A3
R4100	B	B1
R4101	T	C9
R4102	B	A2
R4103	B	A2
R4104	B	B2
R4110	T	B8
R4112	B	A3
R4113	B	A2
R4114	B	A2
R4120	B	B2
R4121	B	A2
R4122	B	A3
R4123	B	A3
R4124	B	A3
R4130	B	B2
R4200	B	E4
R4201	B	F4
R4202	B	F5
R4203	B	F5
R4204	T	F6
R4300	T	B9
R4301	B	B2
R4302	B	B2
R4303	B	A1
R4304	B	D4
R4306	B	D4
T1100	T	E5
T1101	T	E5
T1102	T	F5
T1300	T	B5
T1301	T	C5
T1302	T	A5
T1575	T	C5
T4001	T	B6
T4200	T	E7
V1004	B	F7
V1009	B	F7
V1100	T	E4
V1101	T	E4
V1102	B	E5
V1103	B	E5
V1104	B	E6
V1105	B	E6
V1106	T	E4
V1120	B	E6
V1150	B	E6
V1151	B	E6

V1152	T	E4
V1160	B	E6
V1161	B	F6
V1162	B	F6
V1204	B	A7
V1209	B	A7
V1300	T	B4
V1301	T	B4
V1302	B	C5
V1303	B	B5
V1304	B	B6
V1305	B	B6
V1306	T	B4
V1320	B	B6
V1350	B	B6
V1351	B	B6
V1352	T	B4
V1360	B	B6
V1361	B	A6
V1362	B	A6
V1515	T	C4
V1516	T	C4
V1525	T	D4
V1535	B	C7
V1536	B	C7
V1537	B	C7
V1544	T	D3
V1545	T	D4
V1550	B	D7
V1555	B	D8
V1560	T	D3
V1575	B	C6
V1576	B	D6
V1580	T	C4
V1581	T	C4
V1582	T	C4
V1583	B	C5
V1584	B	C5
V2000	T	C7
V2001	T	C7
V2002	B	E3
V3500	B	E3
V4000	T	A7
V4001	B	B3
V4004	B	B3
V4005	B	B4
V4011	B	A4
V4012	B	B4
V4013	B	B4
V4014	B	B4

V4015	B	B4
V4100	B	A2
V4101	B	B2
V4102	B	B2
V4104	B	B3
V4105	B	C2
V4110	B	B2
V4111	B	A3
V4112	B	A3
V4114	B	A3
V4200	B	F4
V4201	B	E4
V4202	B	F4
V4203	T	F6
V4204	T	F5
V4210	B	F5
X3501	T	F6
X3600	T	F8
X4100	T	C8
X4101	T	A1
X4200	T	F6
Z4100	T	A8

**Table 9-3. Location of Test Points on PCA Top Side**

M1008	E4	M1102	D4	M1232	A4	M2021	C6	M4000	B7
M1010	E4	M1103	D4	M1233	A4	M2022	C6	M4100	C8
M1011	E4	M1104	E4	M1234	A4	M2036	D7	M4101	A7
M1012	E3	M1208	B4	M1235	B4	M2053	E7	M4105	C8
M1013	E4	M1209	B3	M1236	A4	M2200	C6	M4106	B8
M1014	E3	M1210	A4	M1238	B3	M2230	D7	M4107	C8
M1015	E4	M1211	B4	M1300	D4	M2232	C6	M4200	E6
M1016	G4	M1212	B3	M1301	D4	M2250	C7	M4201	E6
M1017	E3	M1213	B4	M1302	D4	M2270	C6	M4202	E6
M1018	G4	M1214	B3	M1303	D4	M3000	C7	M4203	E7
M1020	E4	M1215	B4	M1304	B4	M3001	C7	M4204	G6
M1021	E4	M1216	A4	M1500	D4	M3002	C7	M4210	G6
M1022	E4	M1218	A4	M1501	D4	M3003	D7	M4211	G6
M1023	E3	M1219	B4	M1502	D4	M3100	C7	M4212	G6
M1024	E4	M1220	B4	M1503	D4	M3101	C7	M4213	E7
M1025	E4	M1221	B4	M1504	D4	M3200	D7	M4300	B8
M1026	E3	M1222	B4	M2000	D7	M3201	C7	M4301	B8
M1027	E4	M1223	B3	M2001	D7	M3202	C7	M4302	B8
M1028	E4	M1224	B4	M2002	D7	M3400	A6	M4303	B9
M1029	E4	M1224	B4	M2003	B5	M3401	A7	M4304	B8
M1030	E4	M1225	B4	M2004	B5	M3500	E7	M4305	B8
M1031	E4	M1225	B4	M2006	E7	M3501	C7		
M1032	E4	M1226	B3	M2008	D7	M3502	C8		
M1032	G4	M1227	B4	M2010	C6	M3503	E8		
M1034	E4	M1228	B4	M2011	C6	M3504	C8		
M1035	E4	M1229	B4	M2012	C6	M3505	C8		
M1036	G4	M1230	B4	M2013	C6	M3506	C8		
M1038	E3	M1231	B4	M2014	C6	M3508	E7		

## **9.4 Diagrams**

See next pages for circuit diagrams and PCB layout drawings.



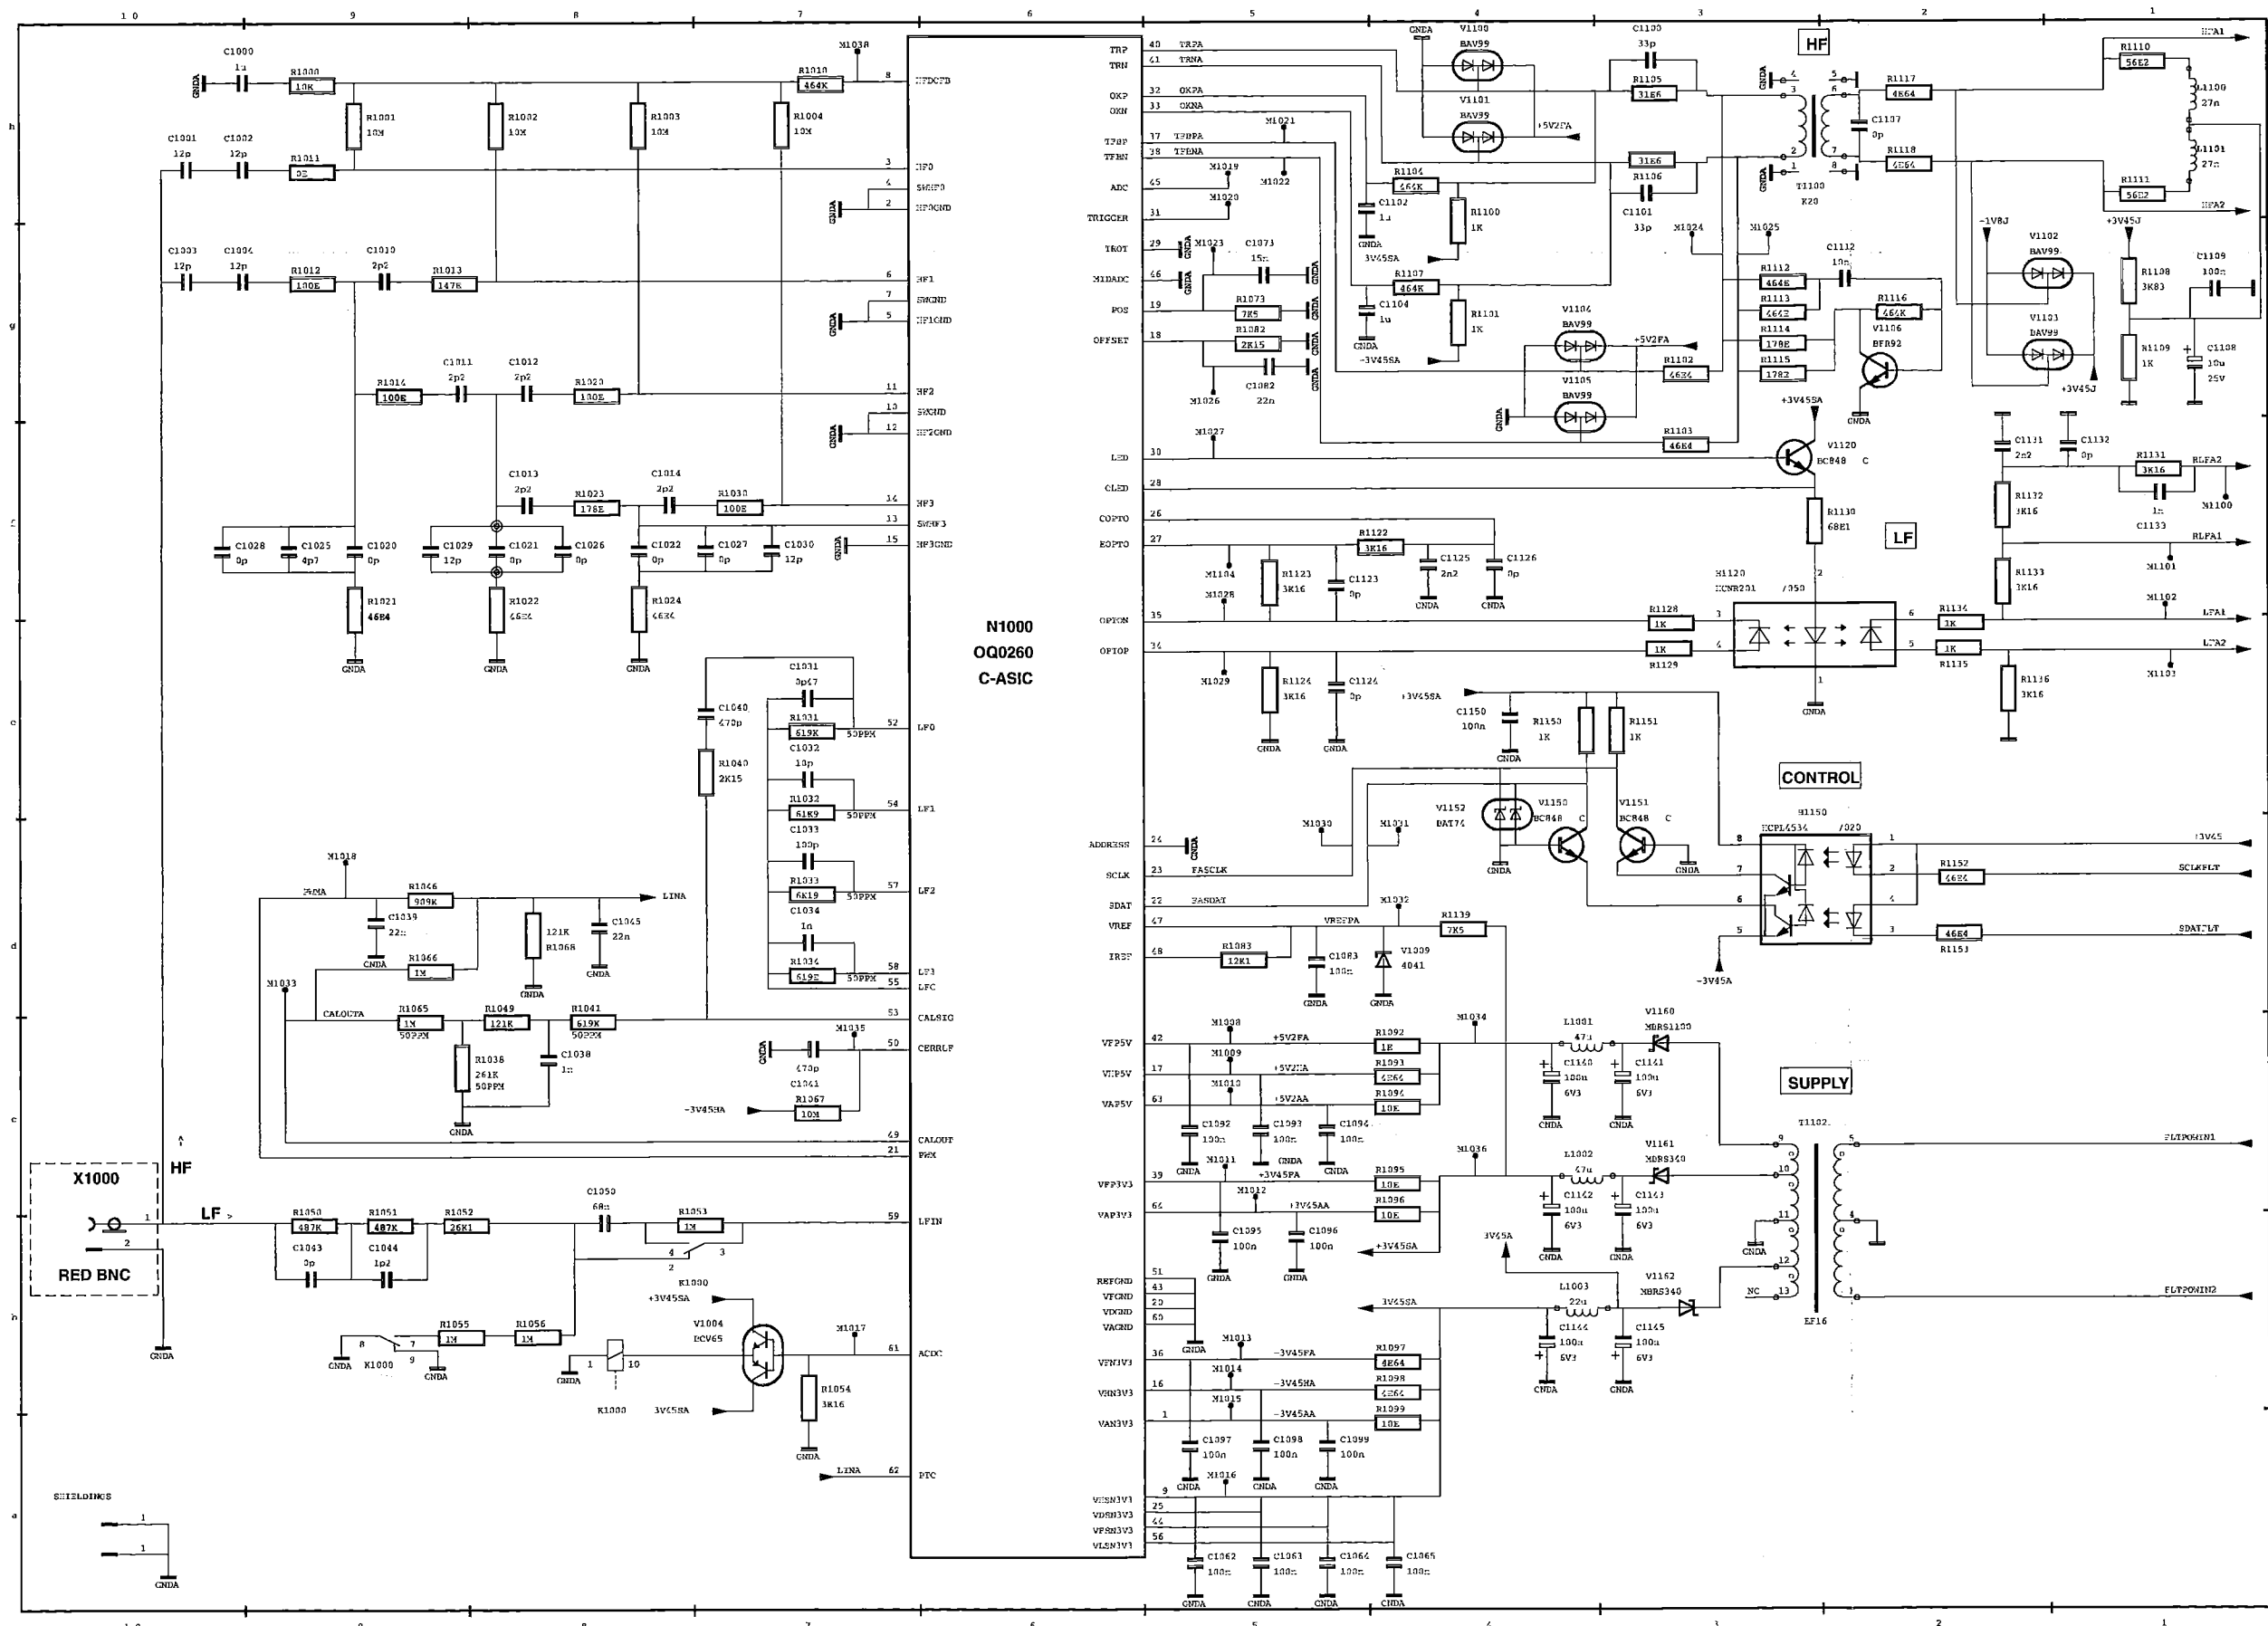


Figure 9-1. Scope Channel A



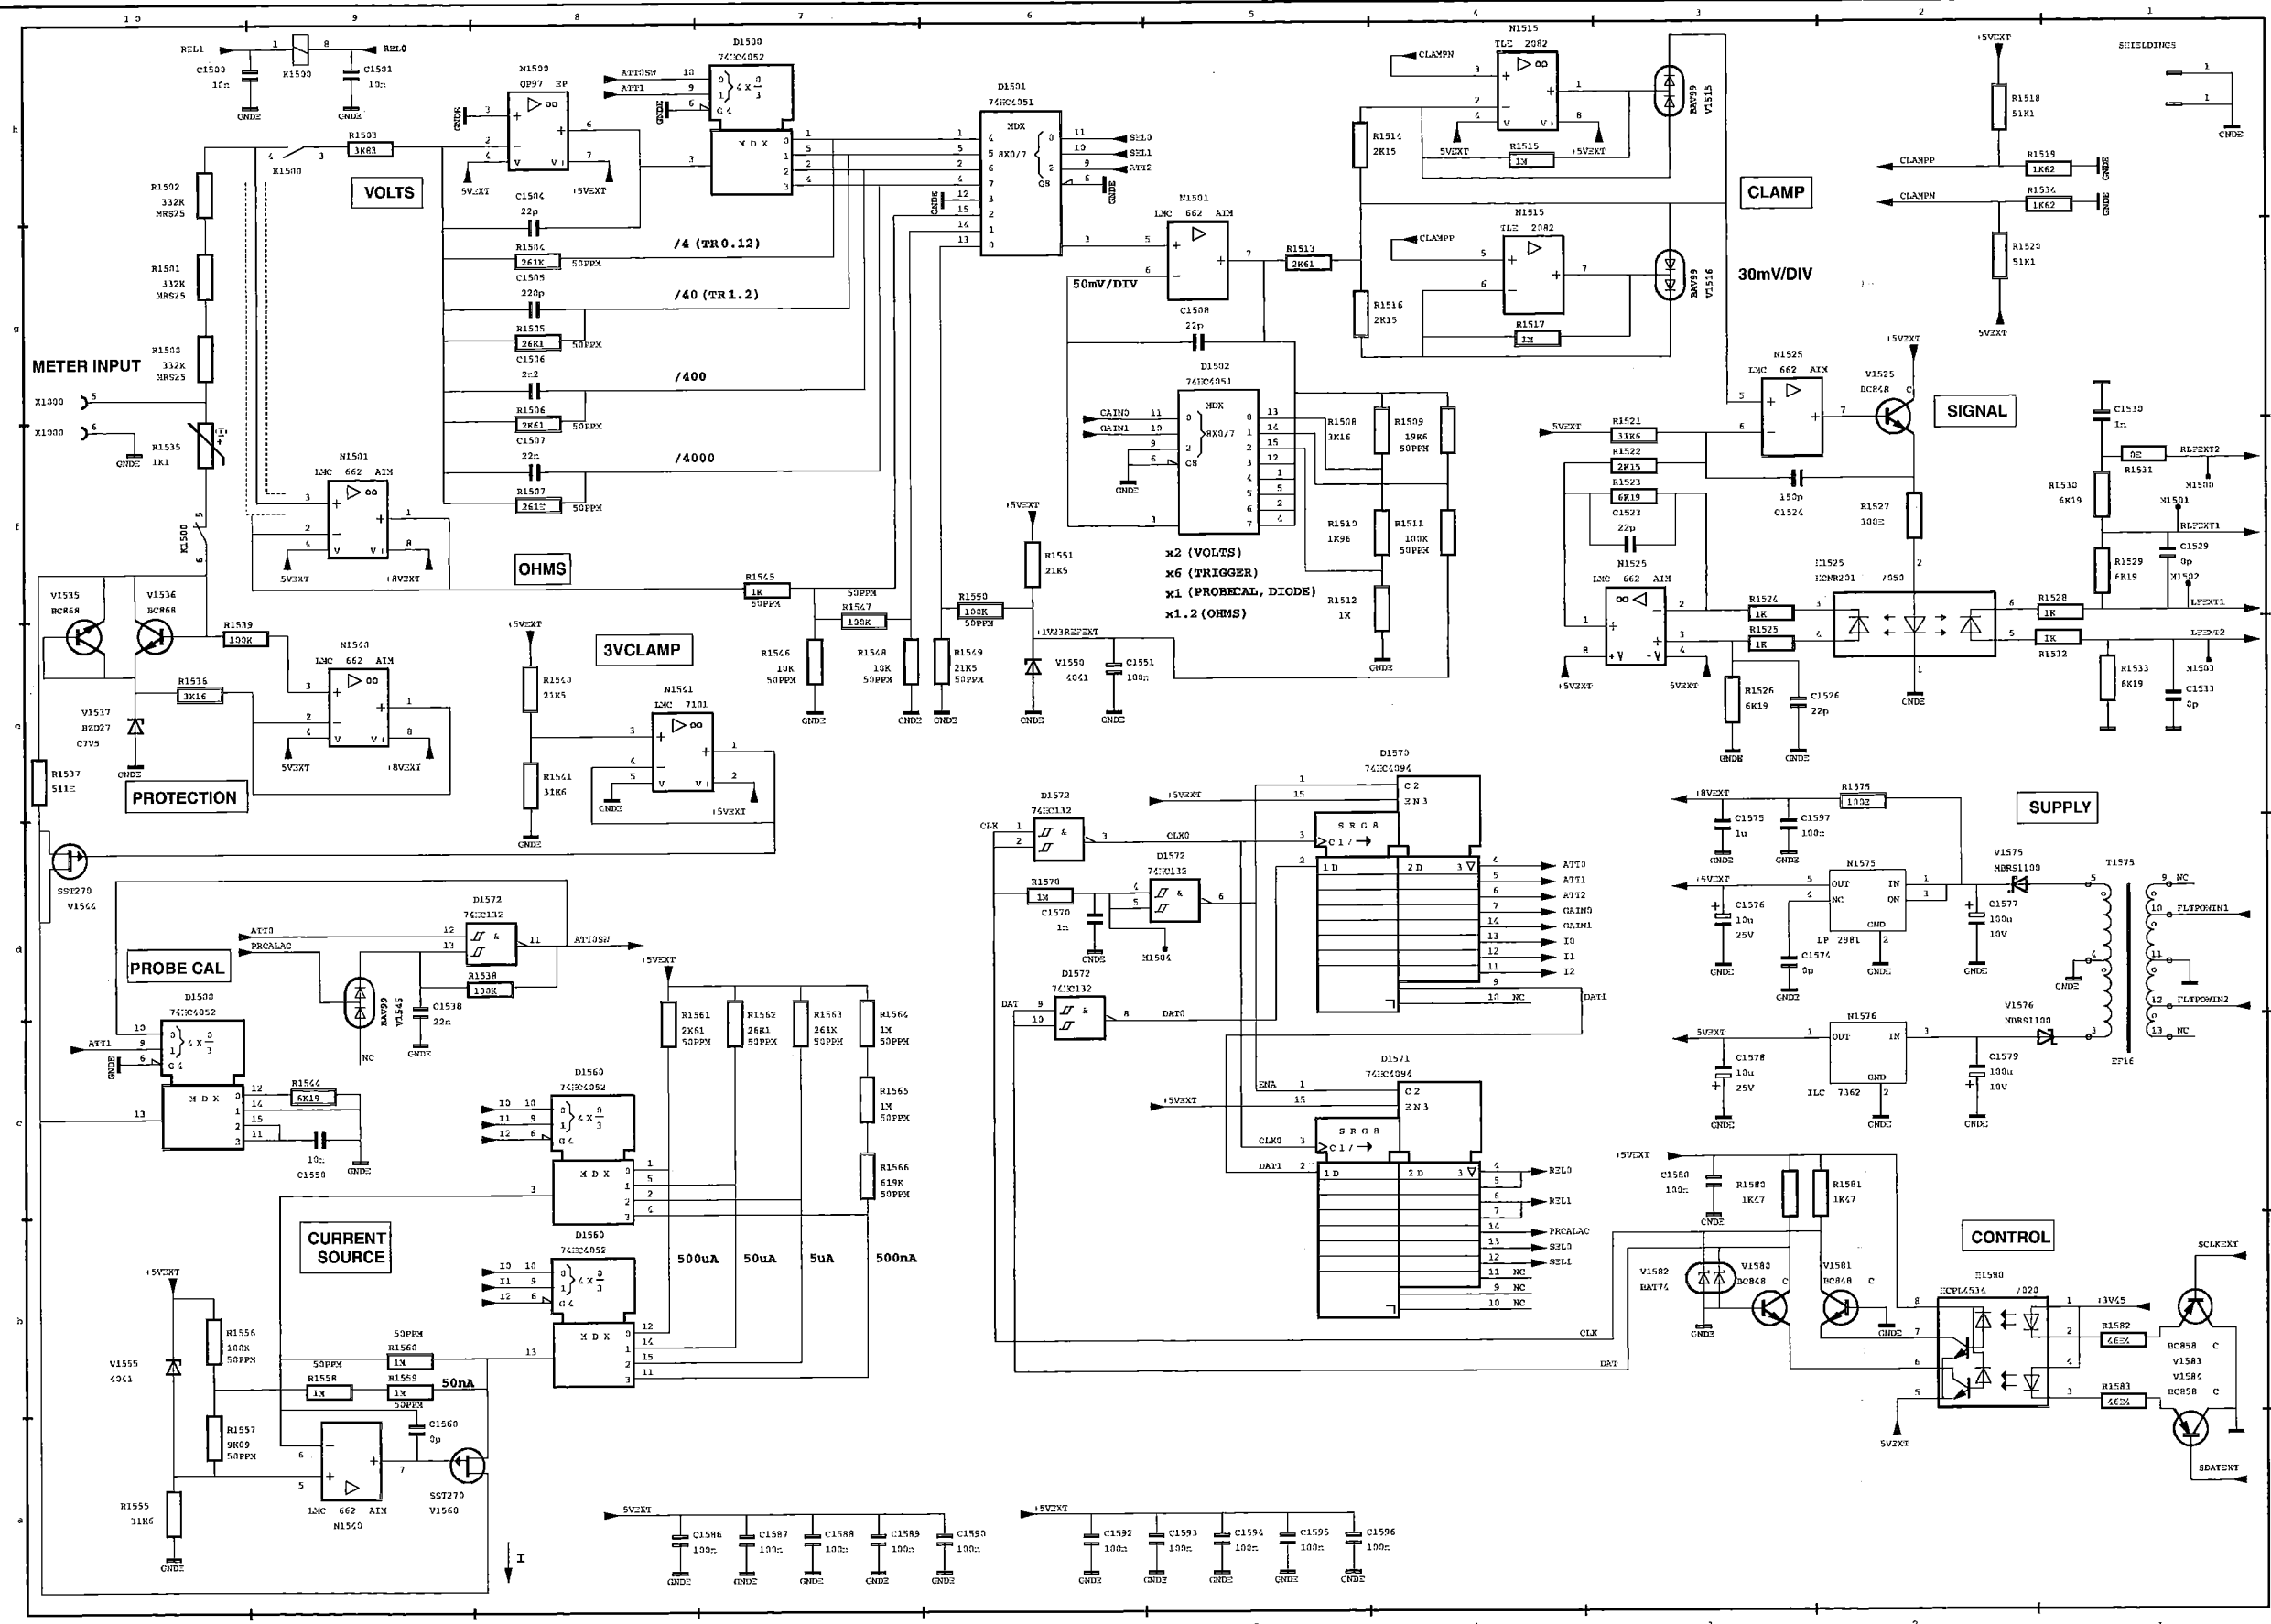


Figure 9-3. Meter/External Trigger Channel

alfext.eps

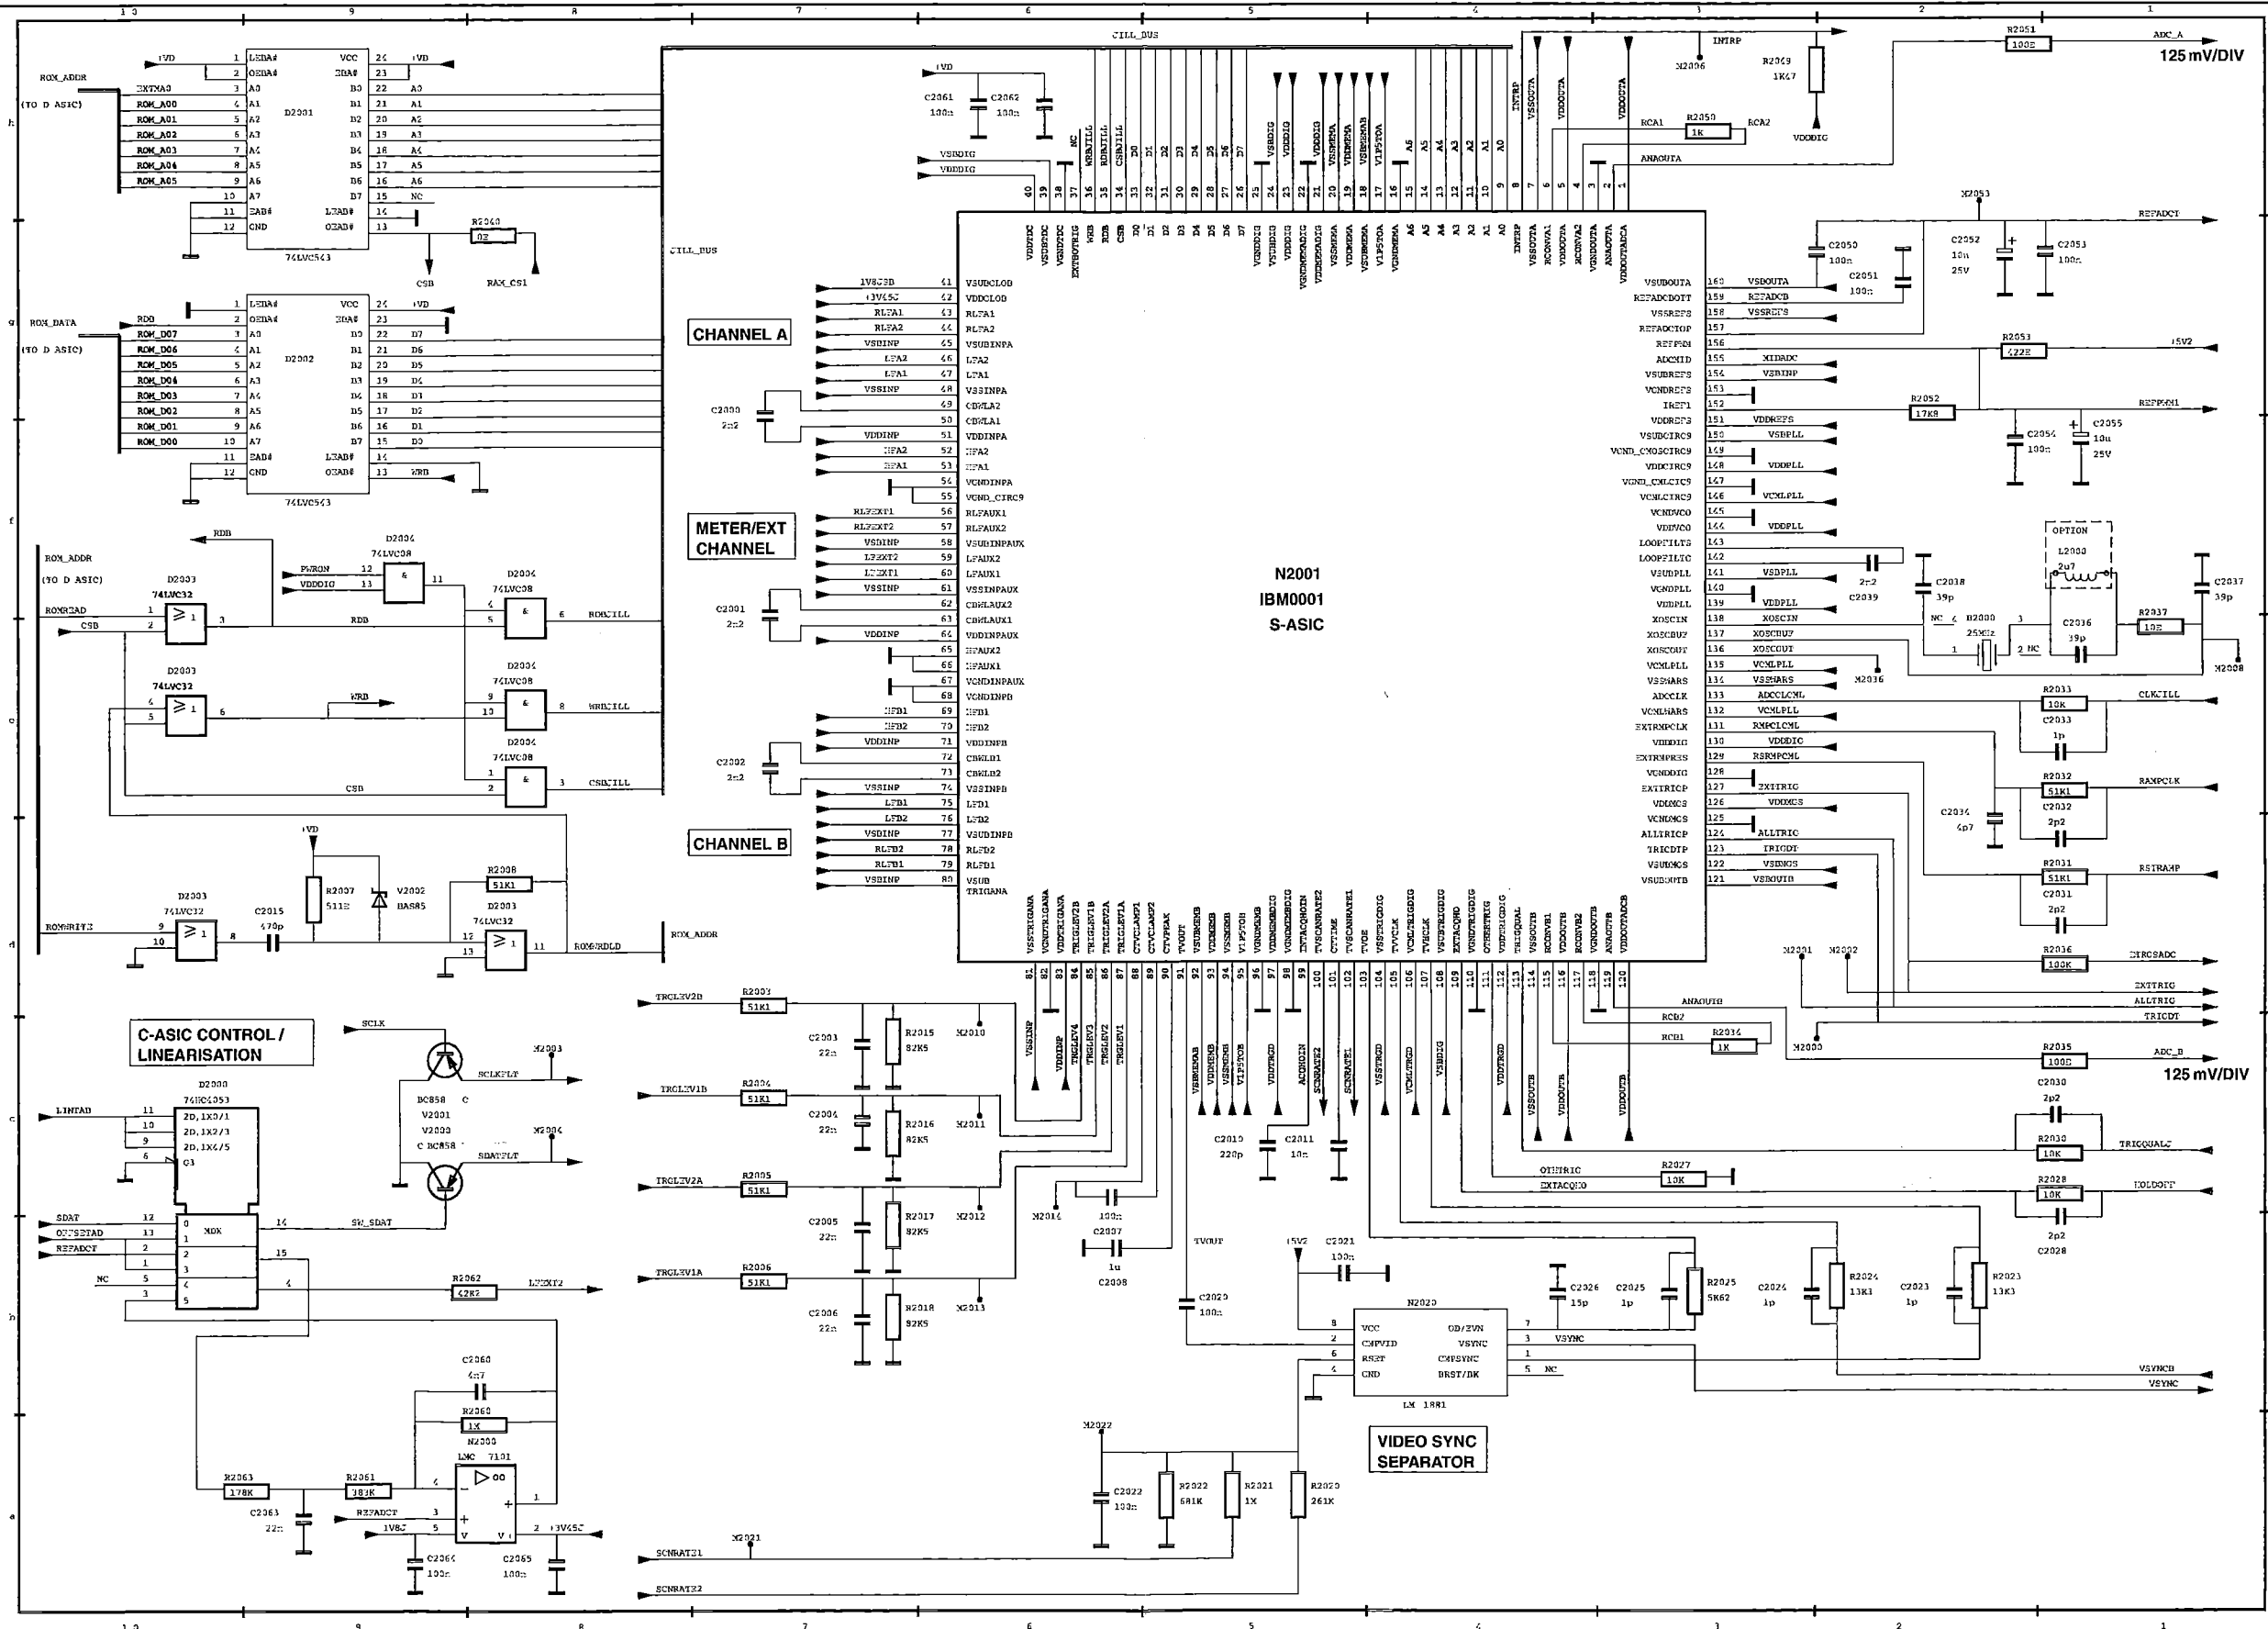


Figure 9-4. S-ASIC Circuit



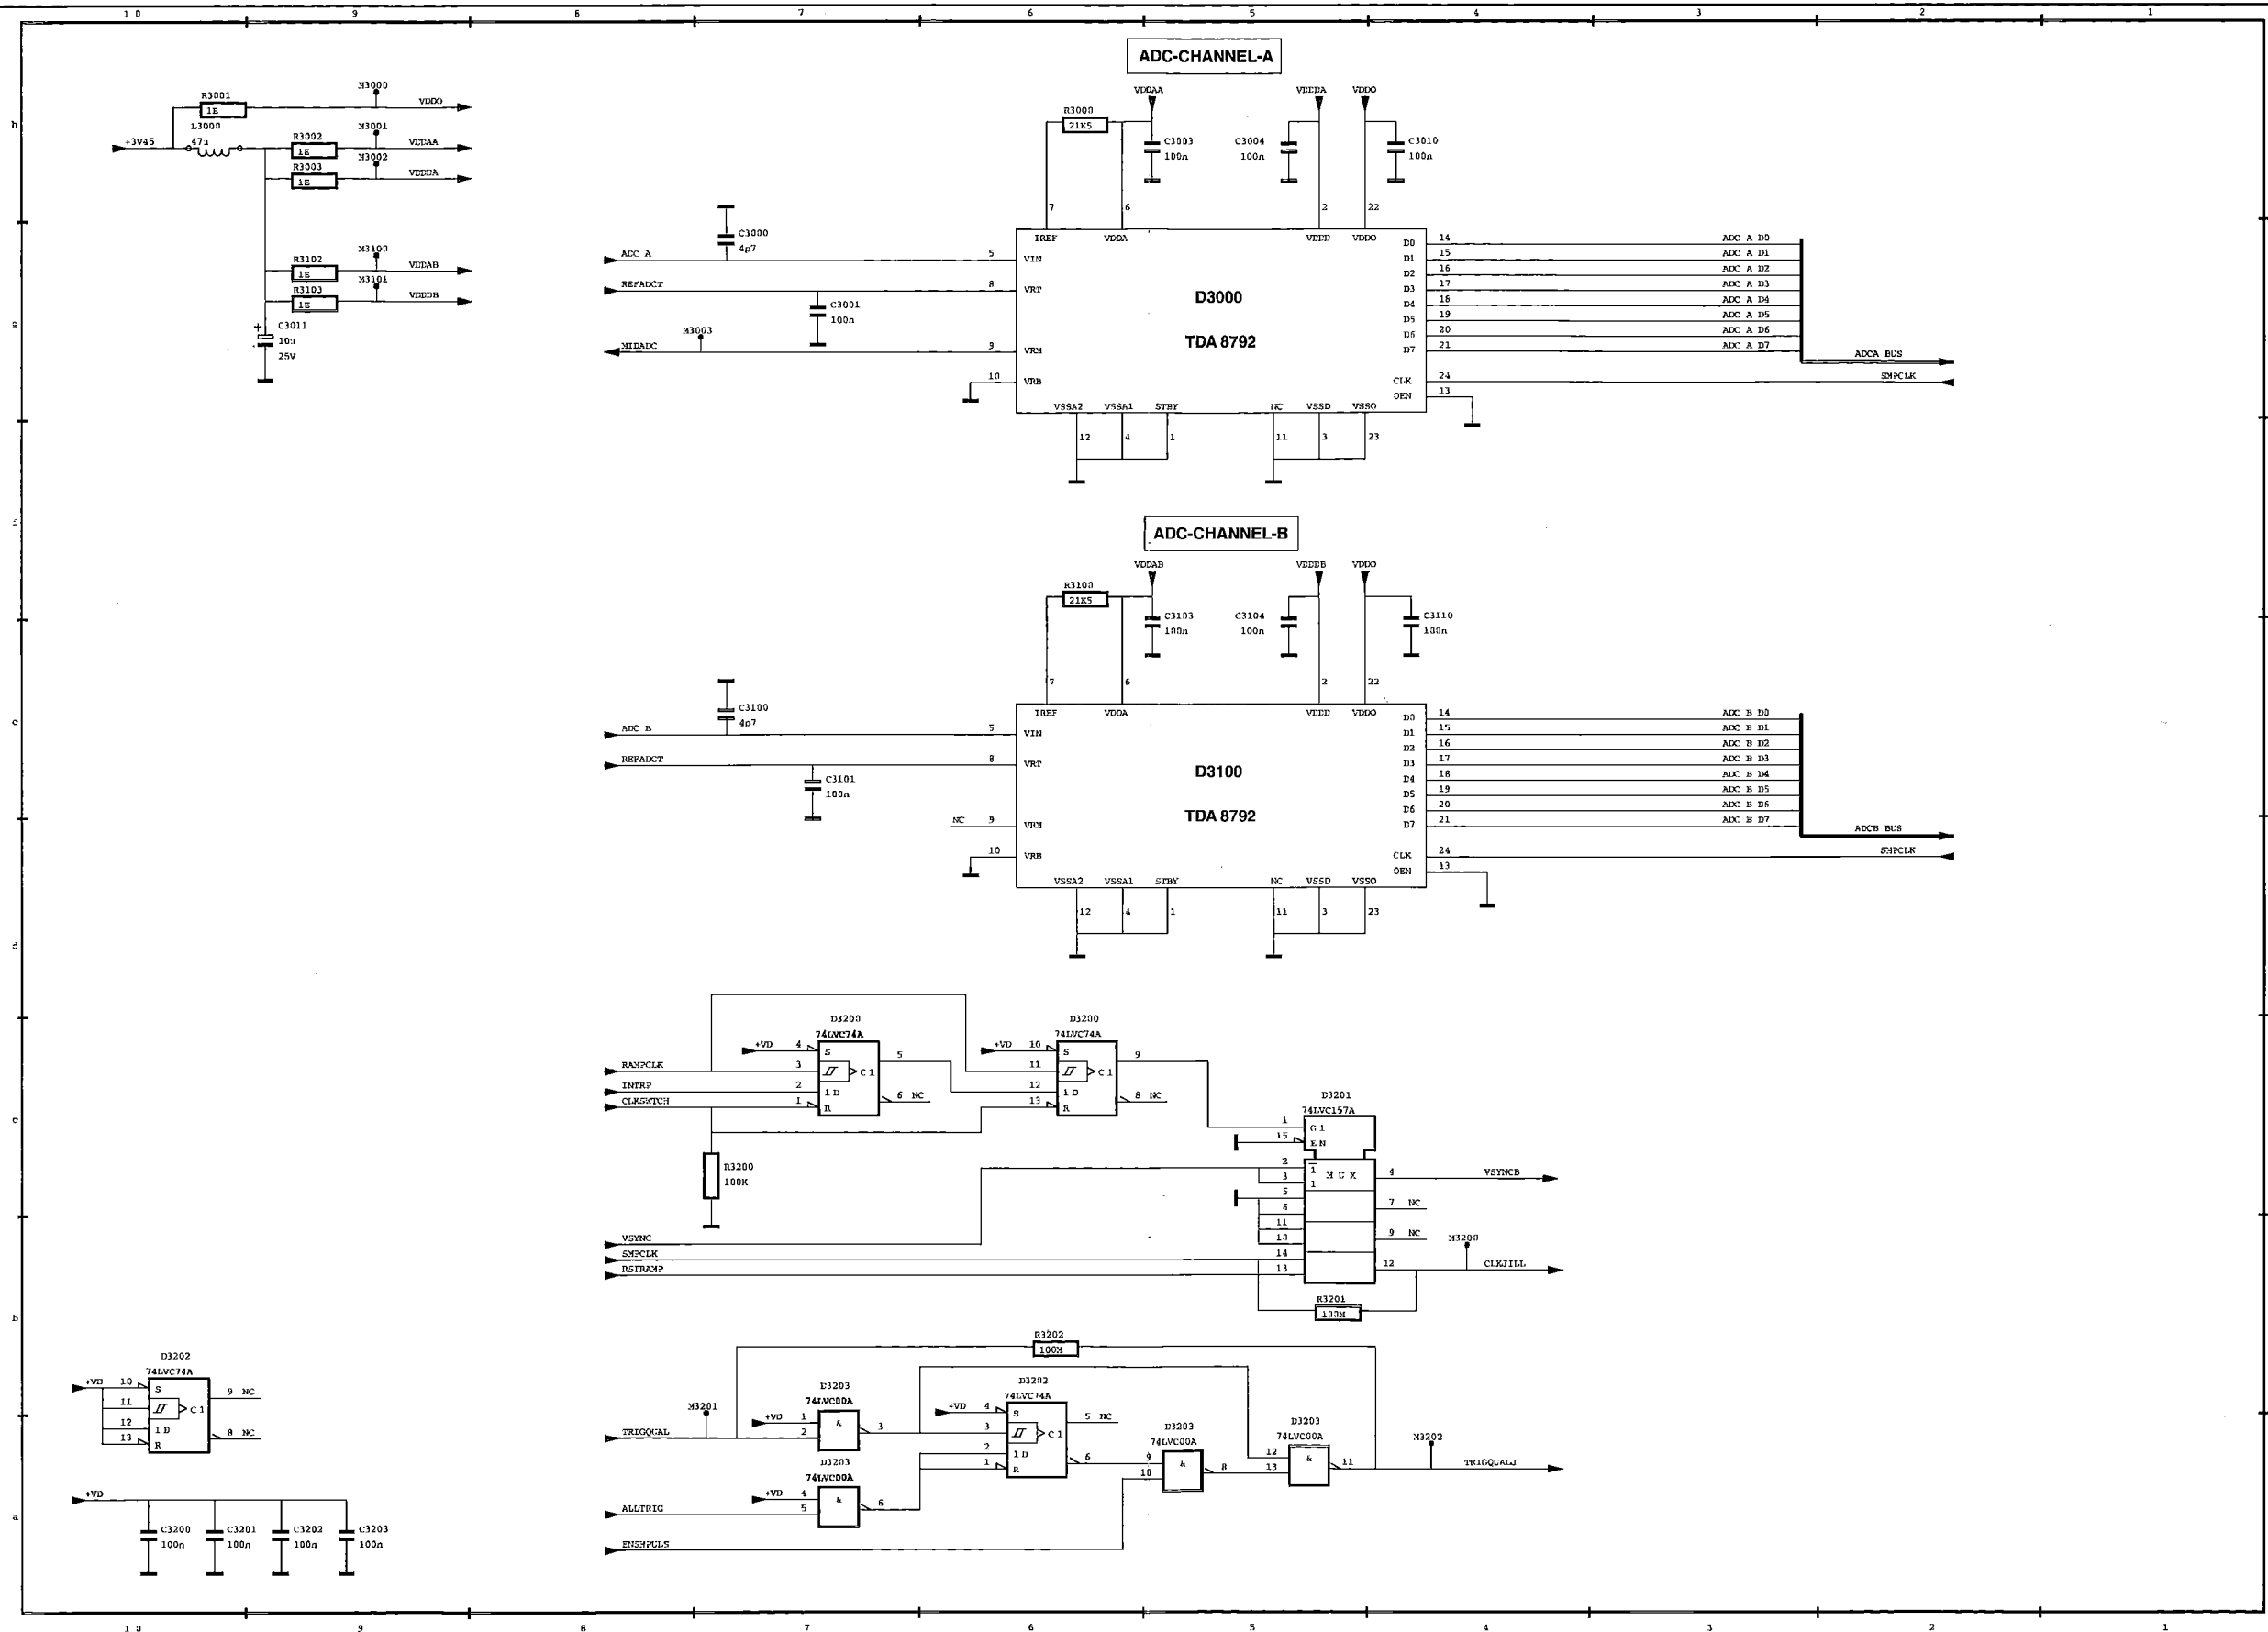


Figure 9-6. ADC's, S-ASIC Clock

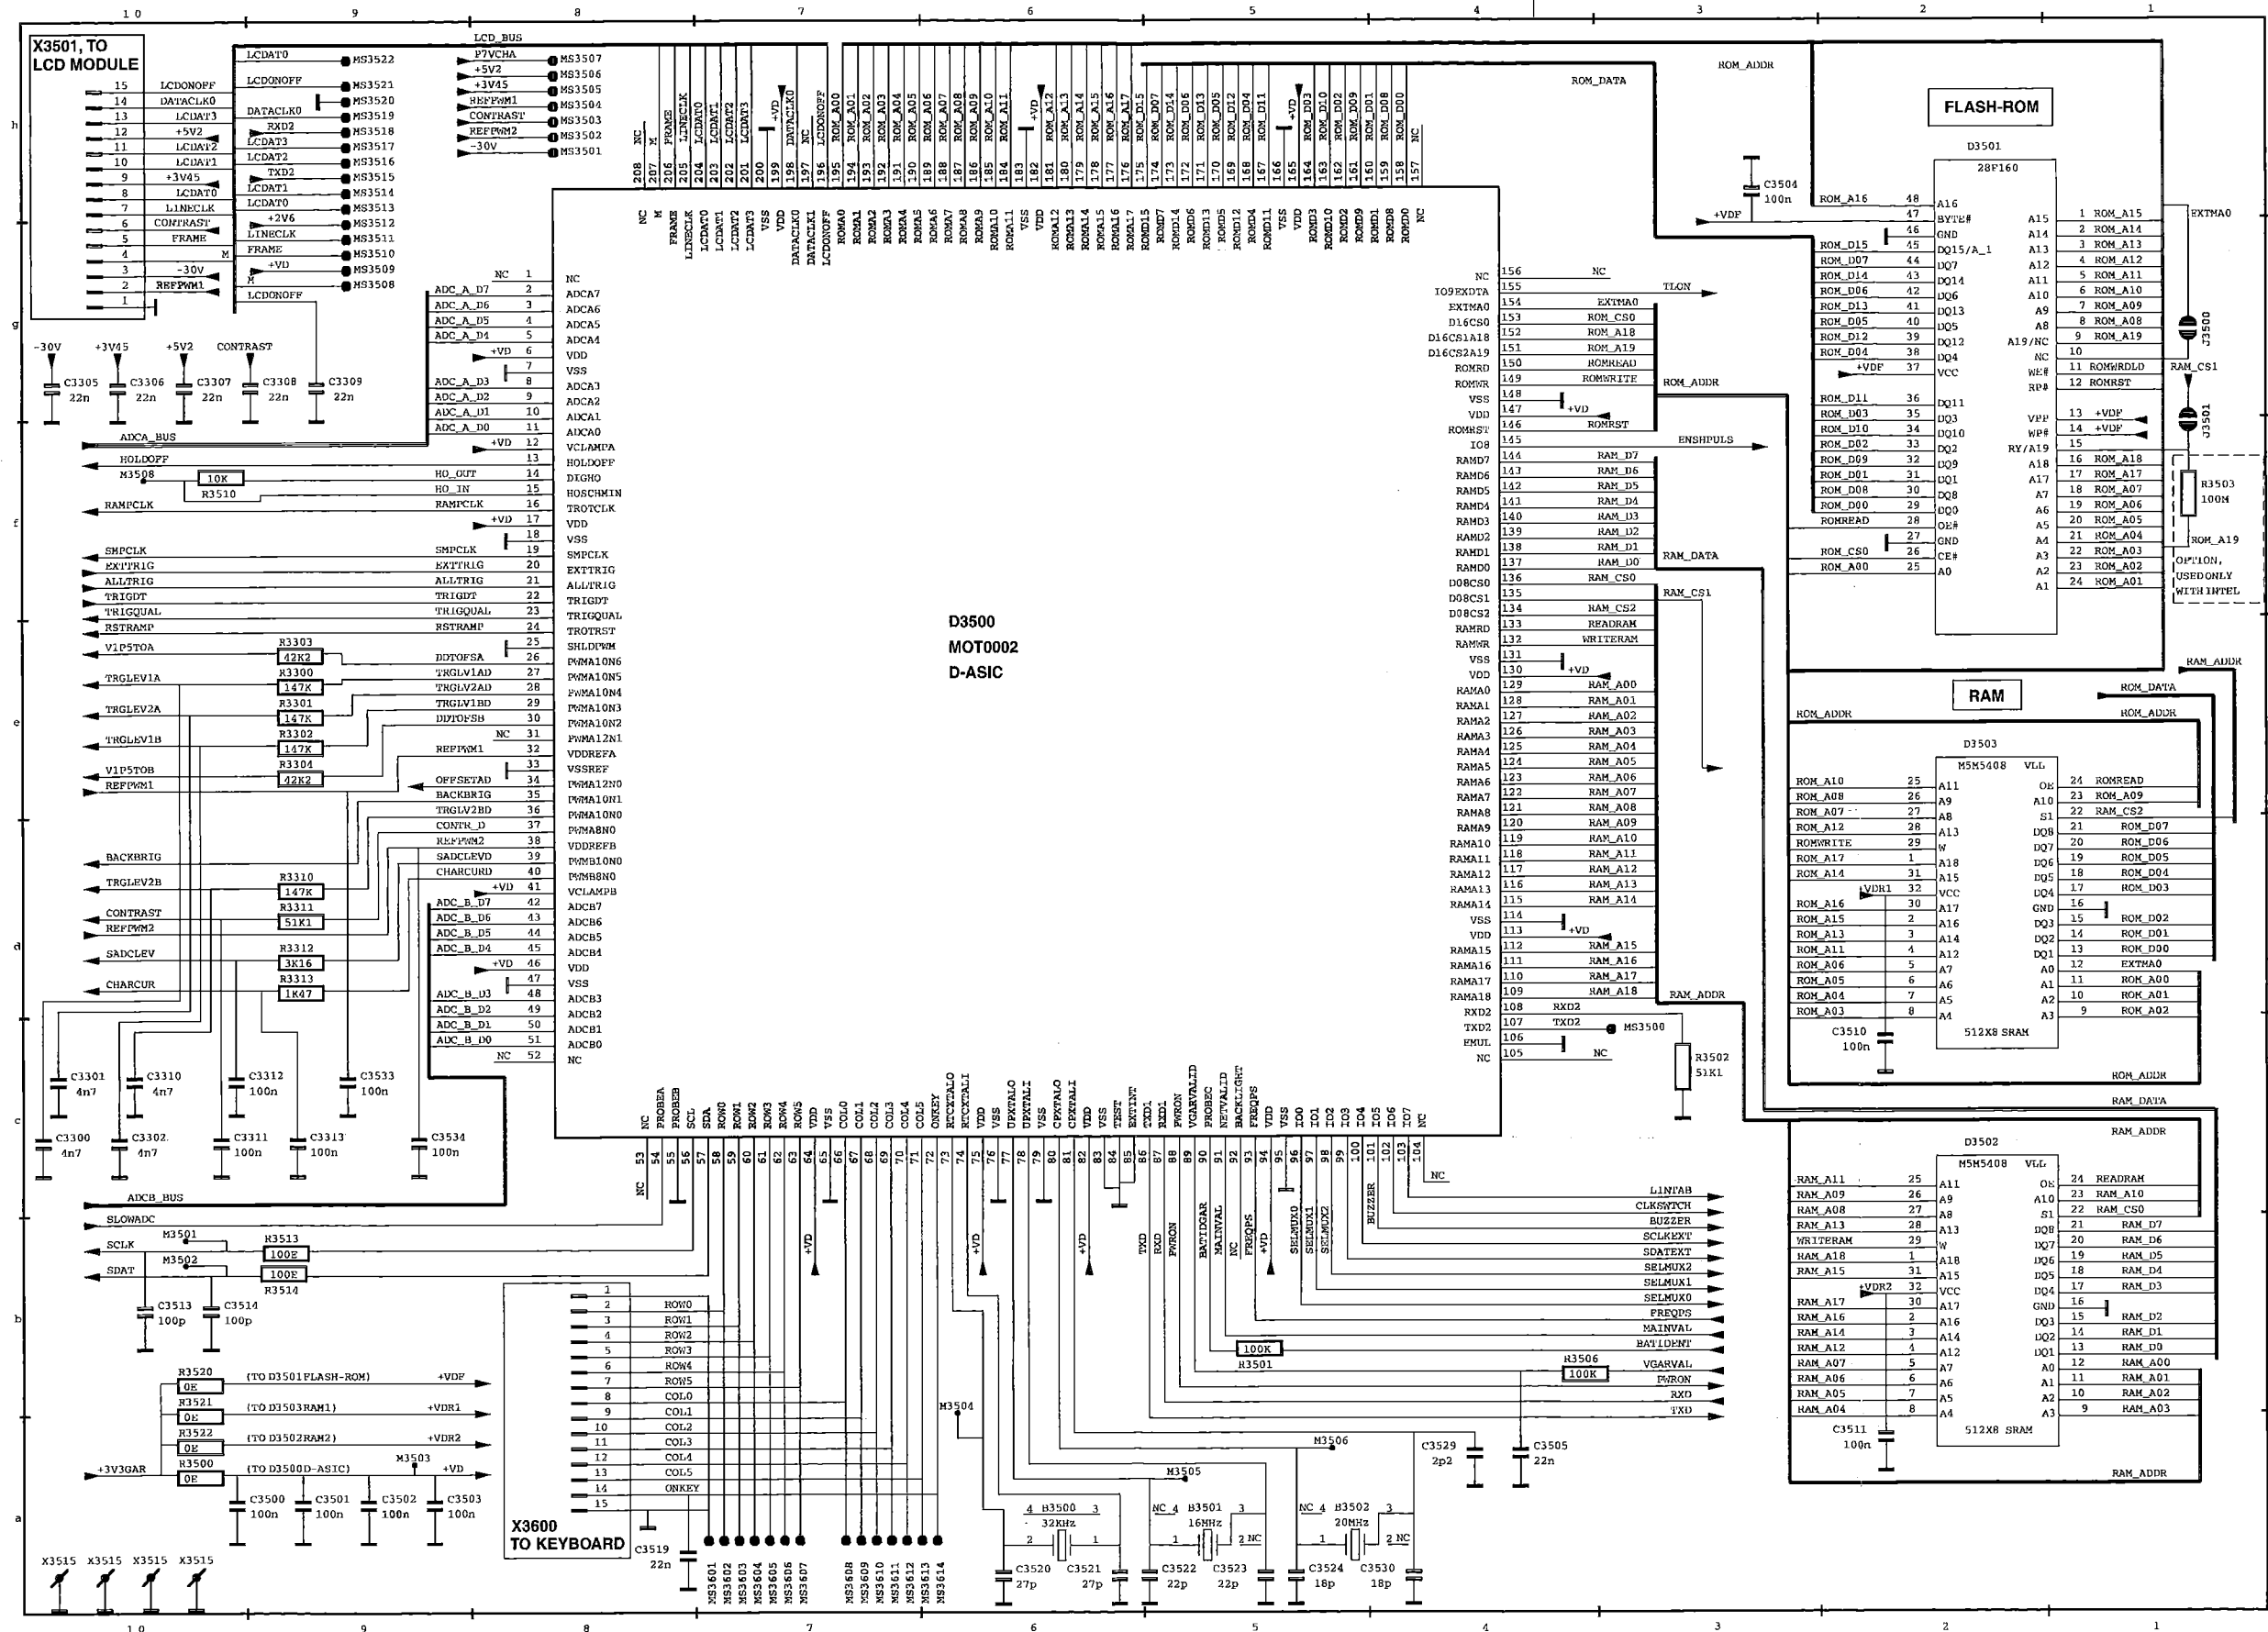



Figure 9-7. Digital Control

The table below shows the row/column matrix of the keypad.

Table 9-4. Keyboard Layout

COL↓	ROW →	0	1	2	3	4	5
	test spot	MS3602	MS3603	MS3604	MS3605	MS3606	MS3607
0	MS3608		MOVE A	MOVE A	AUTO HUNT		F2
1	MS3609		MOVE	TIME	TRIGGER		F3
2	MS3610		MOVE	TIME	HOLD RUN		F4
3	MS3611	REPLAY	MOVE B	MOVE B	B	ZOOM	CURSOR
4	MS3612	RANGE V A	RANGE V B	mV RANGE B	SAVE		CLEAR MENU
5	MS3613	METER	A	mV RANGE A	RECORDER	SCOPE	F1

### Battery Pack BP190

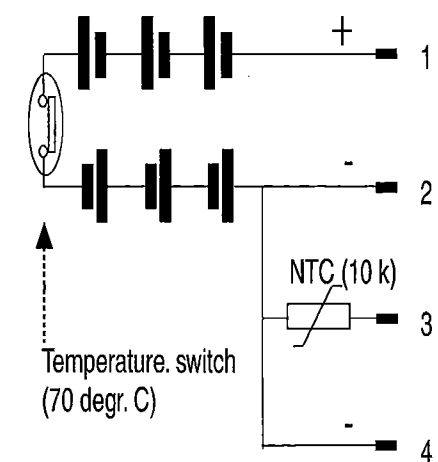

BP190.wmf





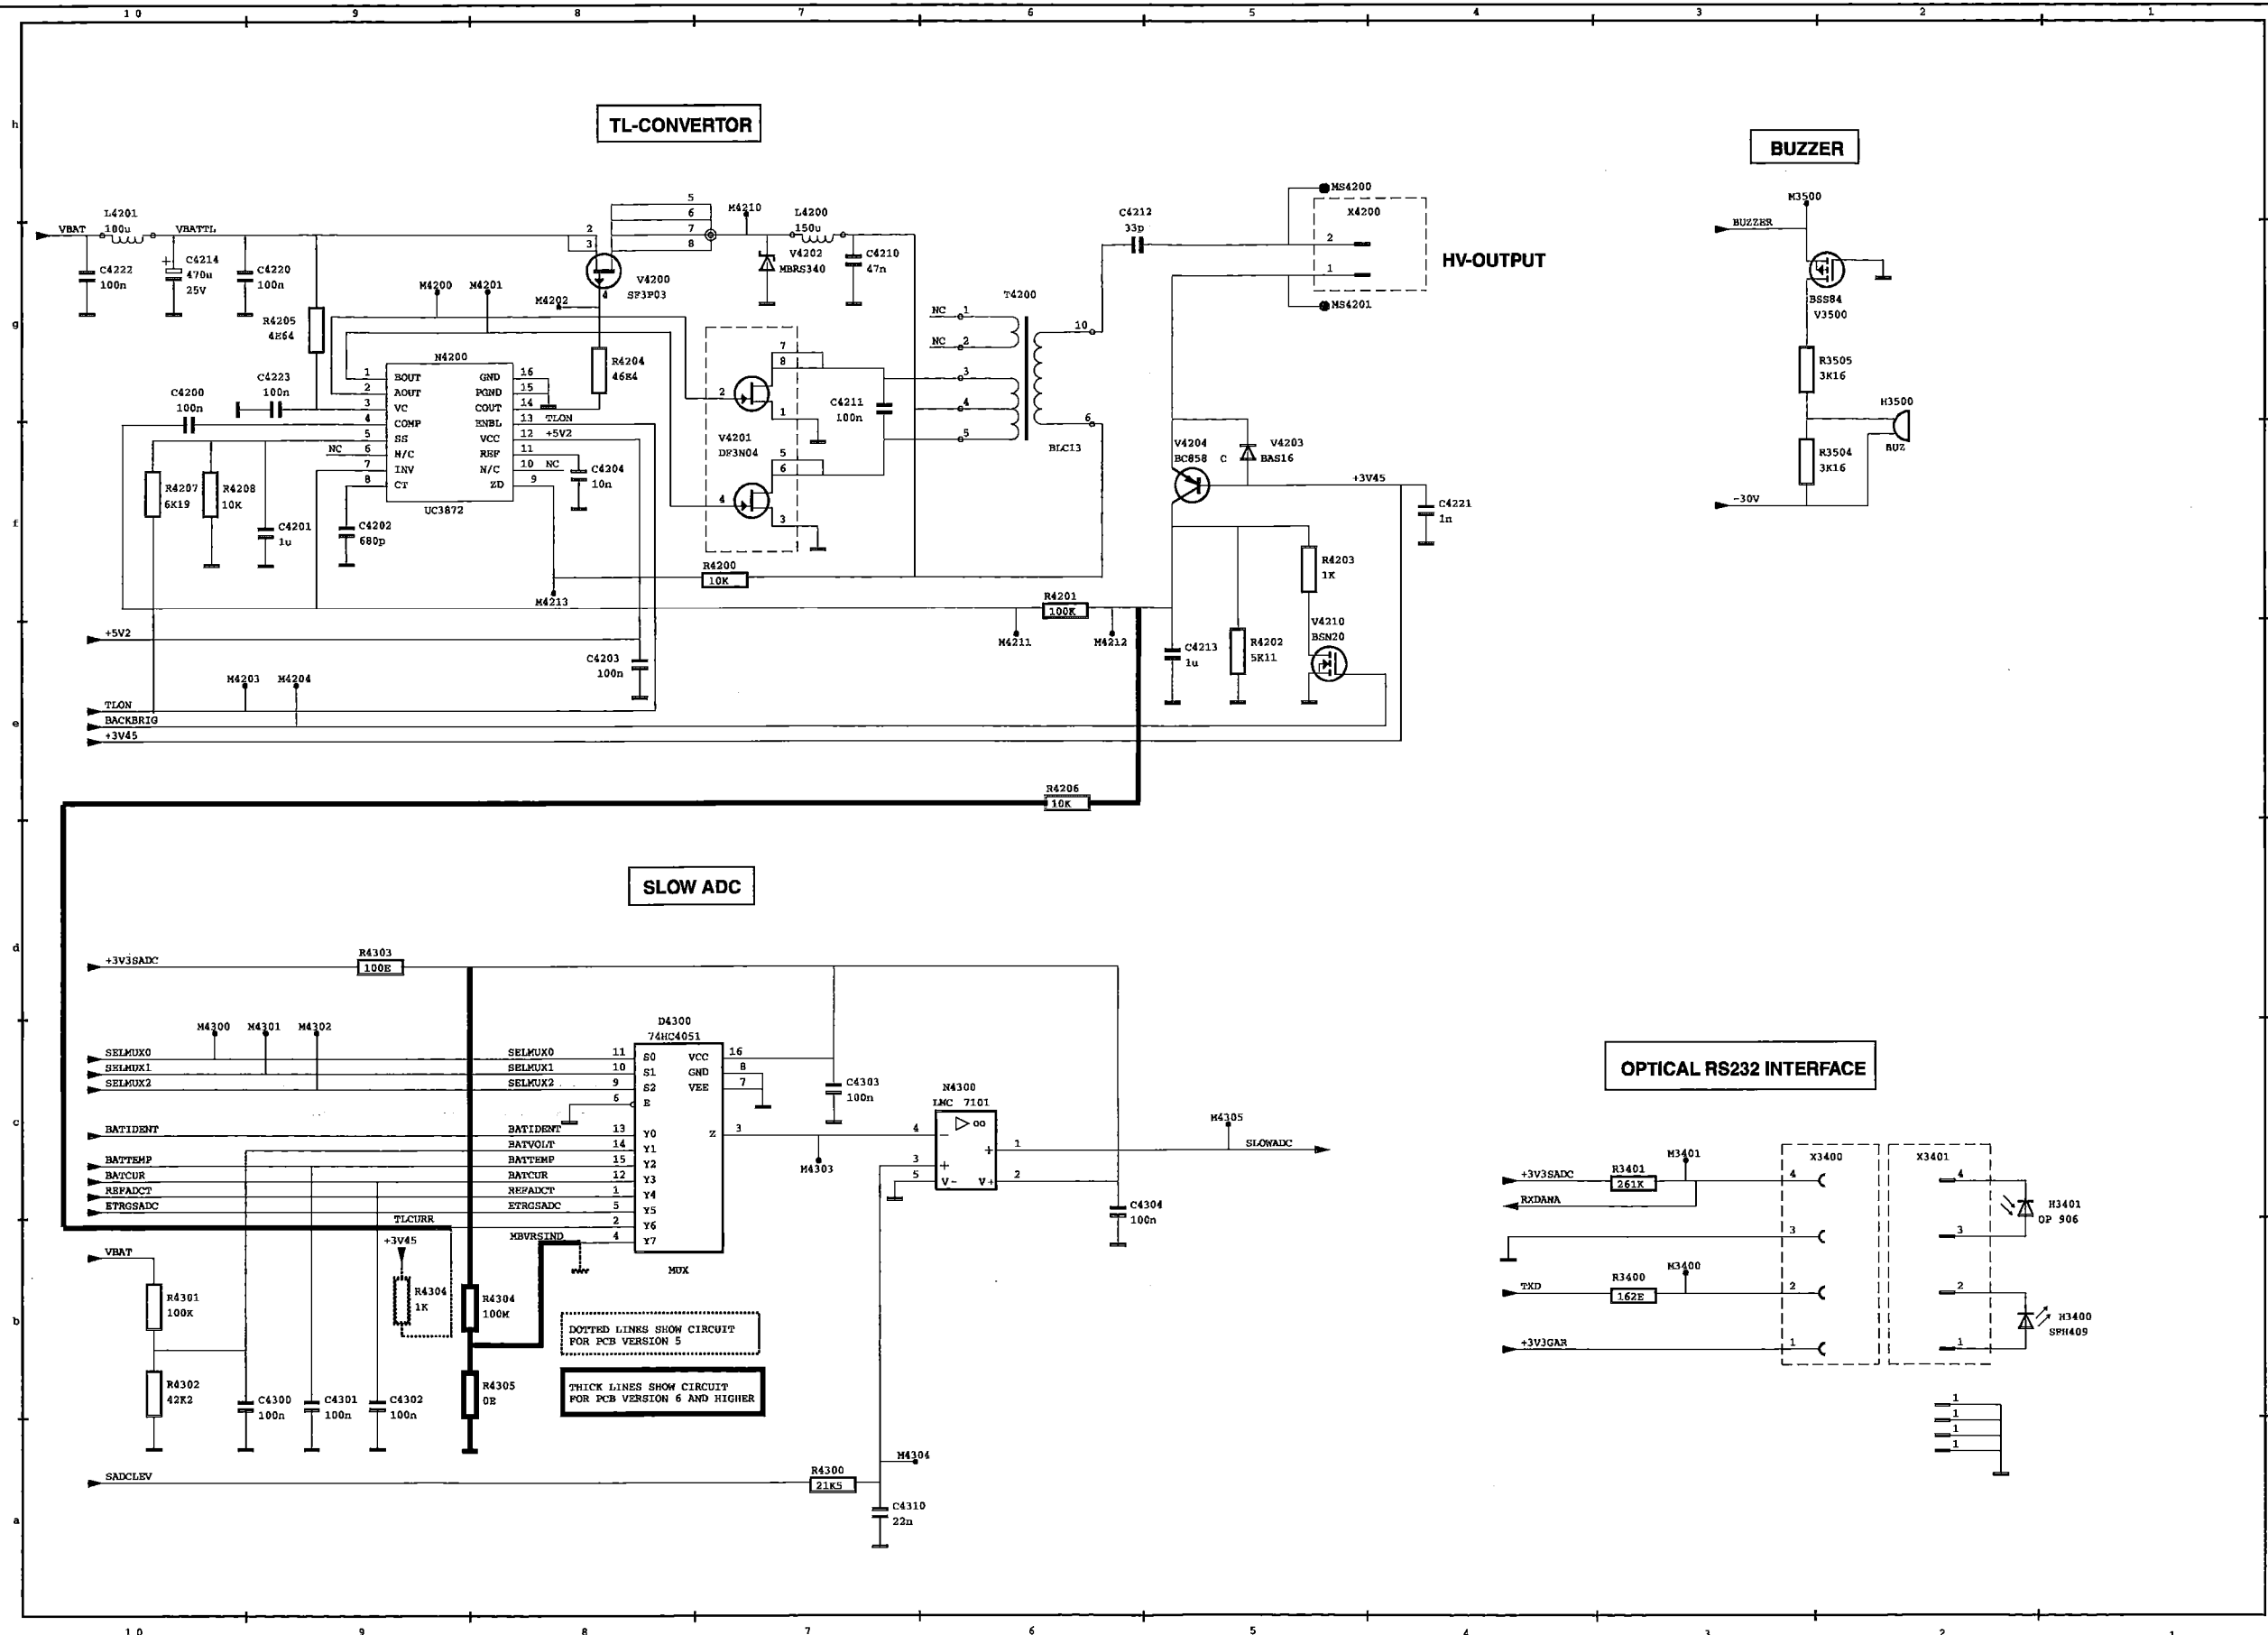


Figure 9-9. Backlight, Slow ADC, Buzzer, Serial Interface

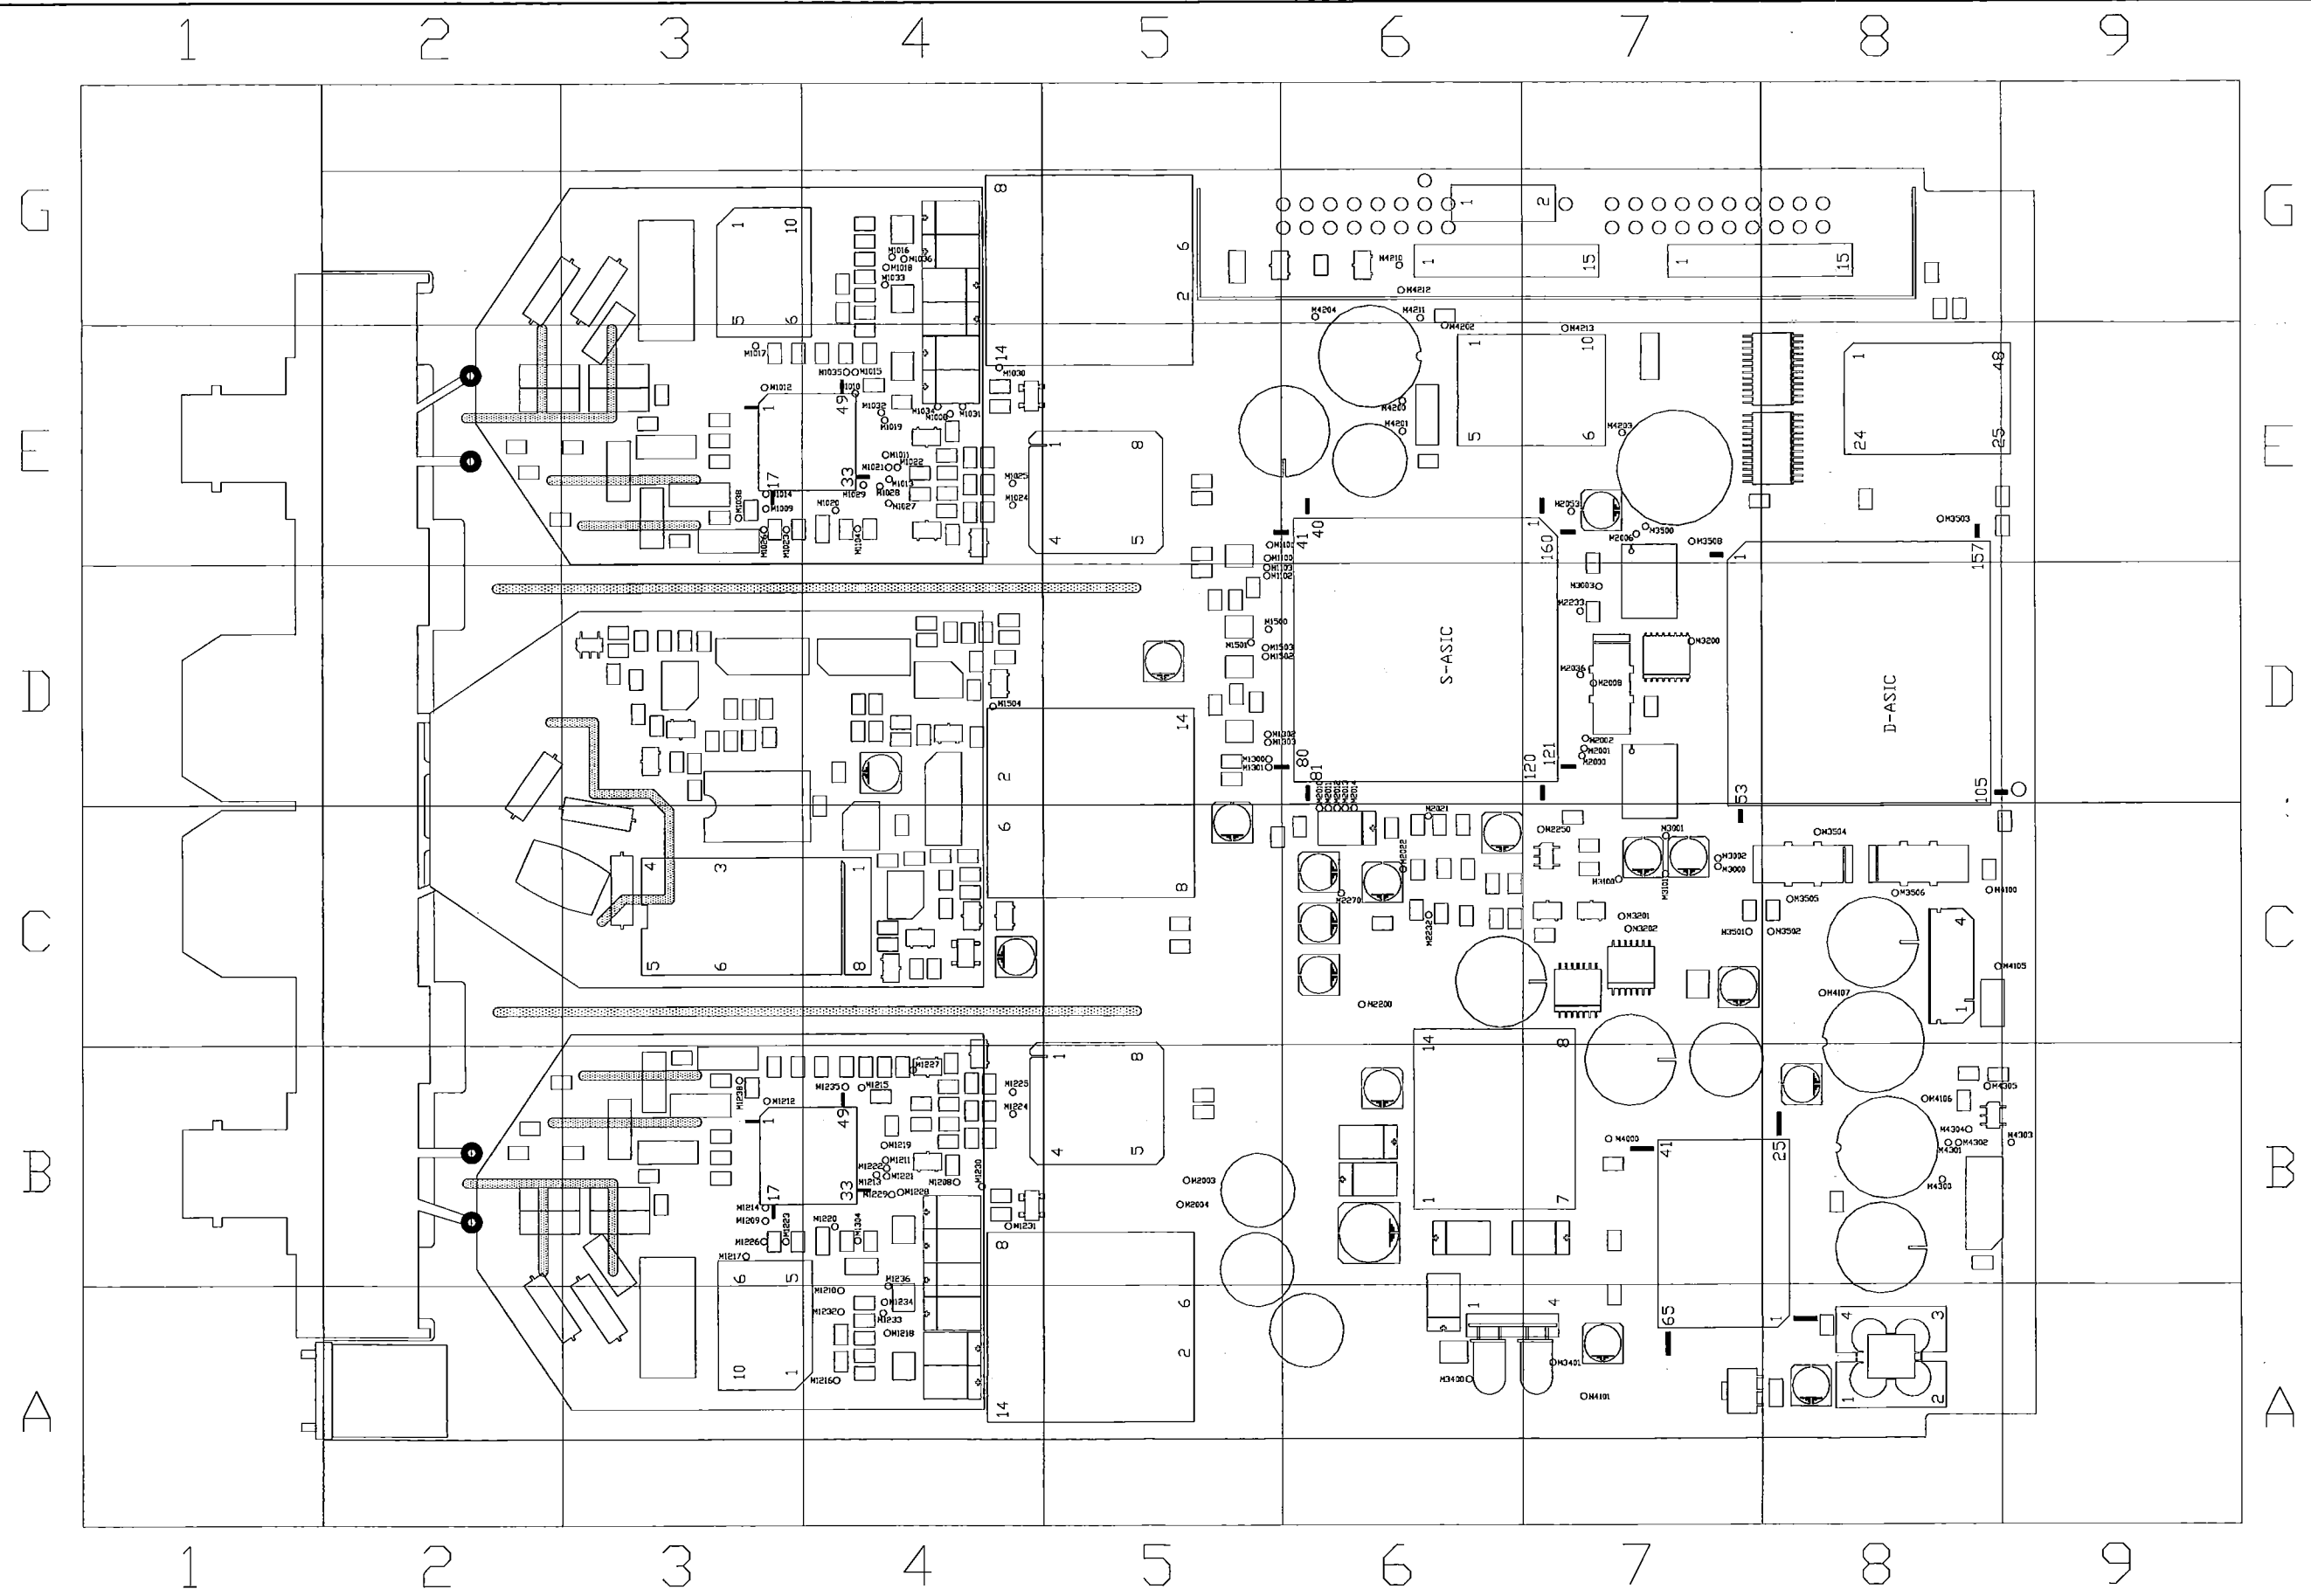


Figure 9-10. Main PCA Top View Test Spots PCB Version 5

allmsp5.wmf





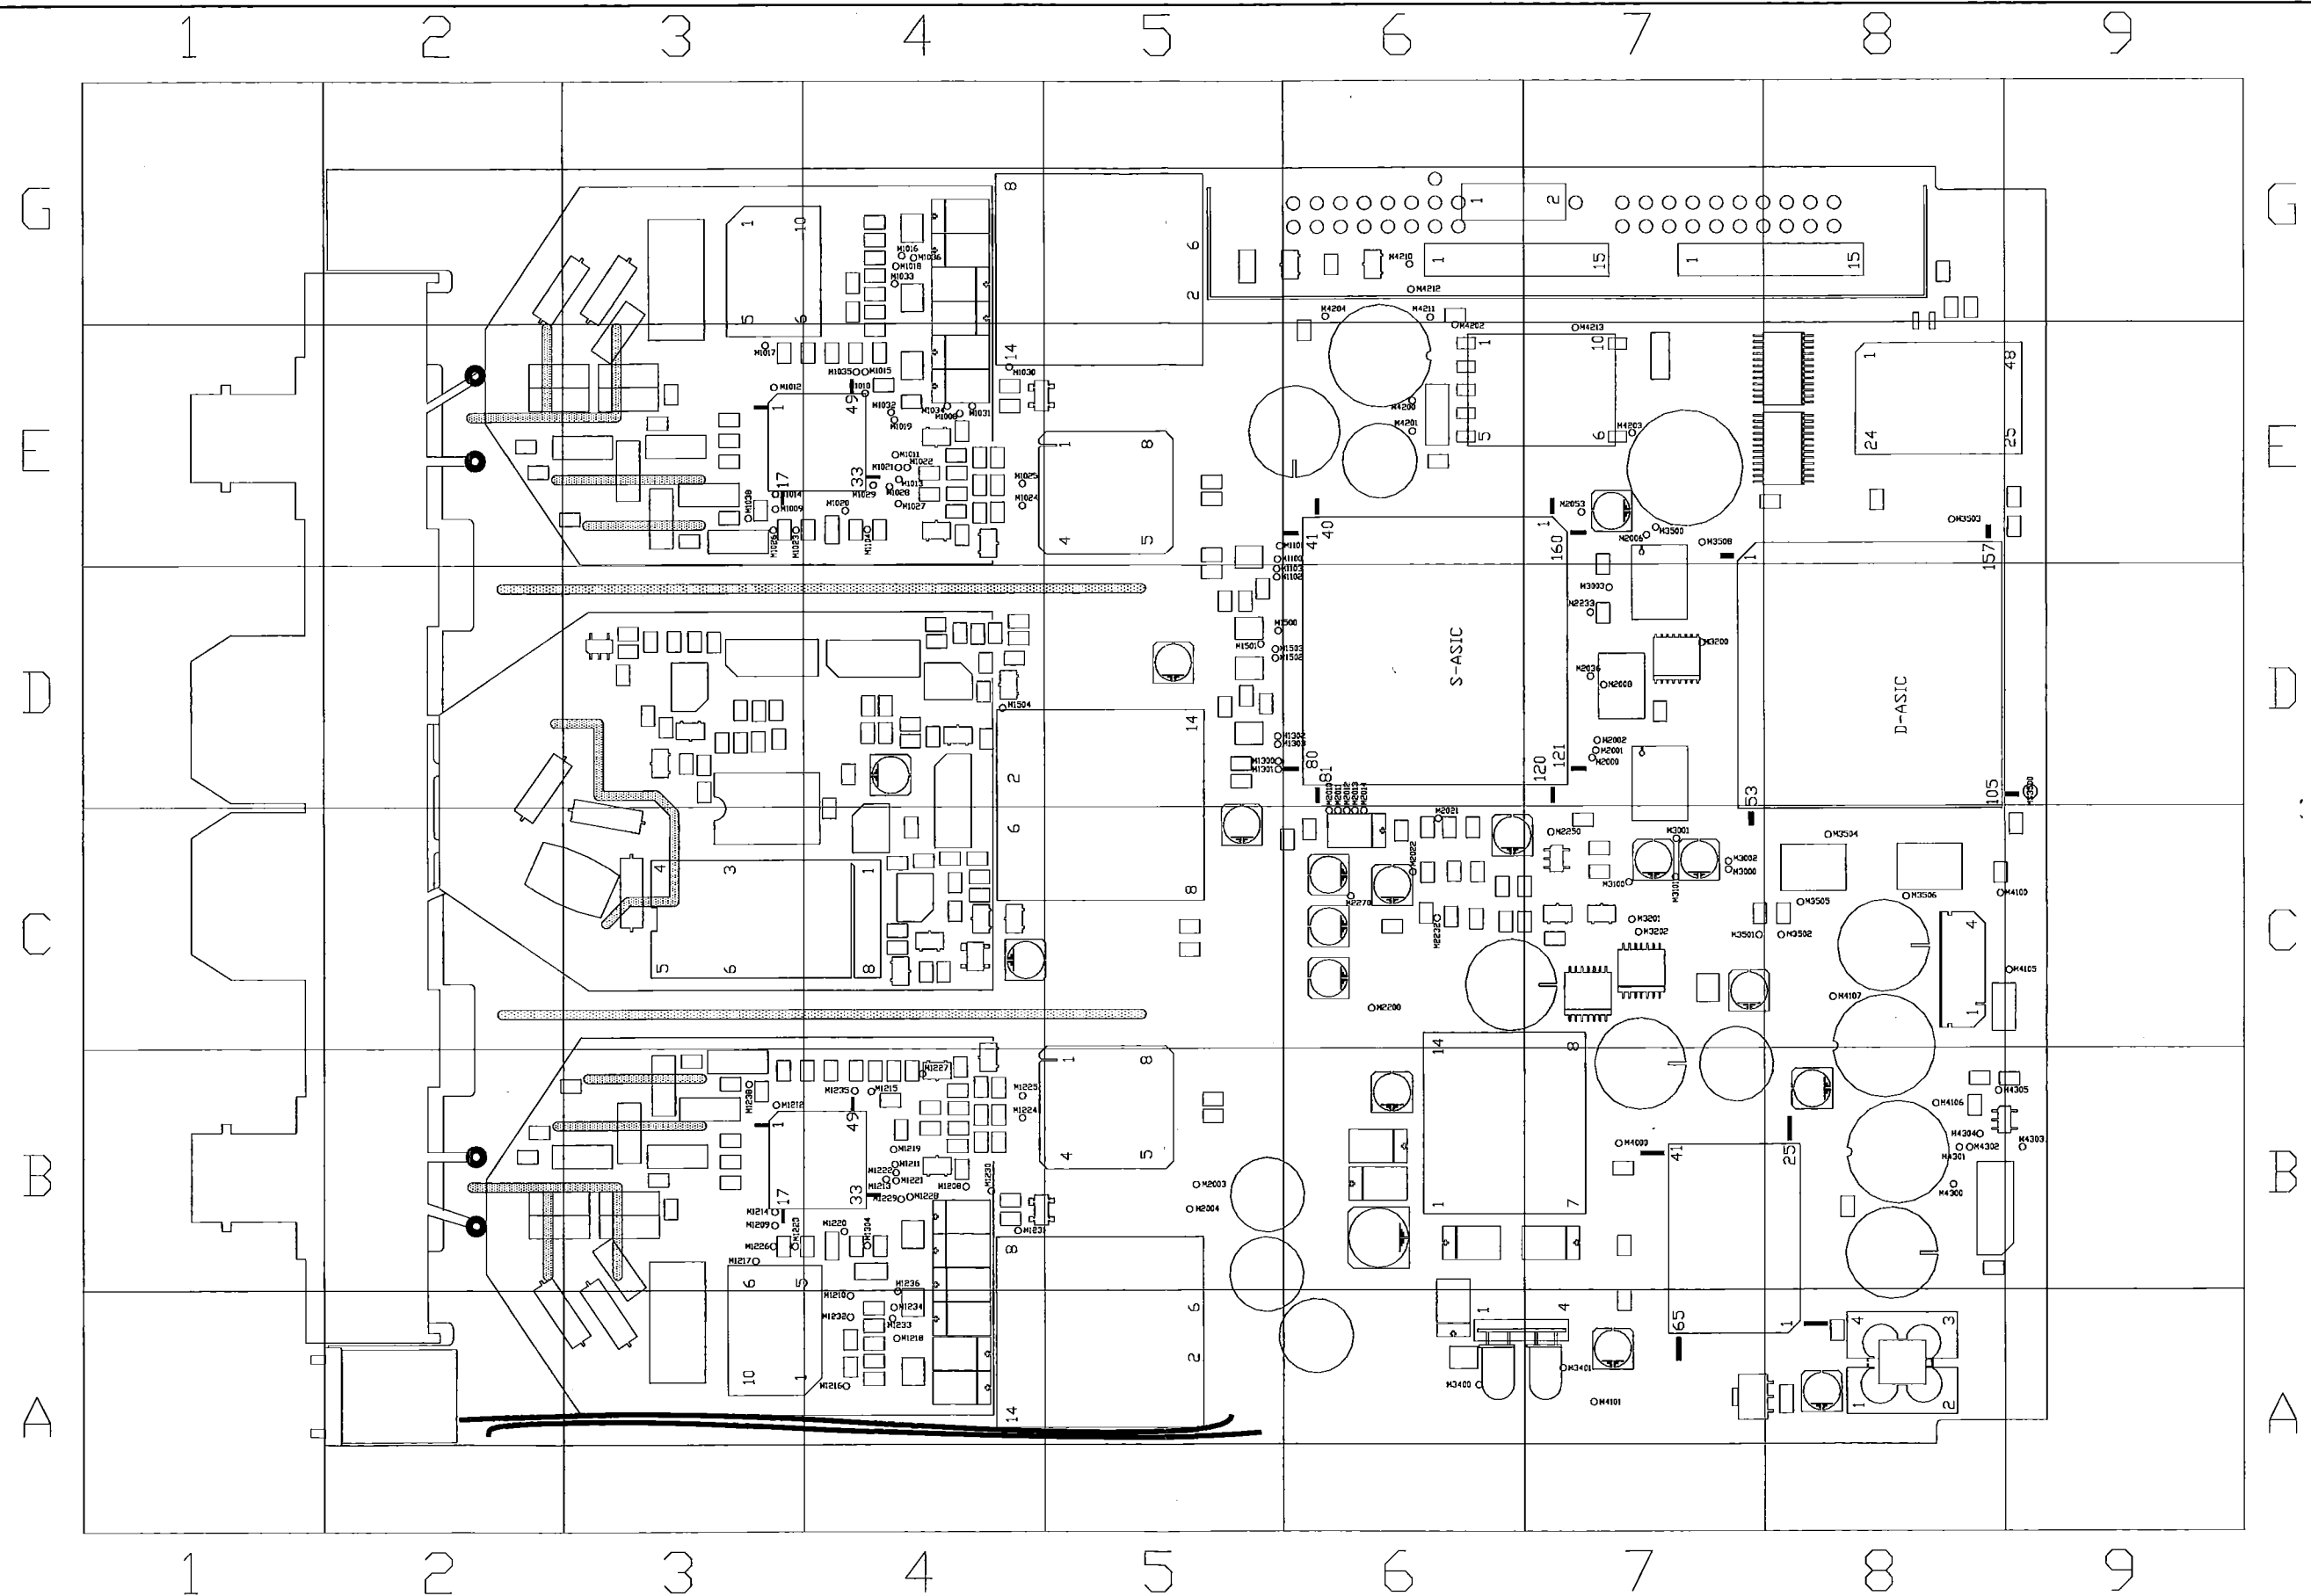


Figure 9-13. Main PCA Top View Test Spots PCB Version 6

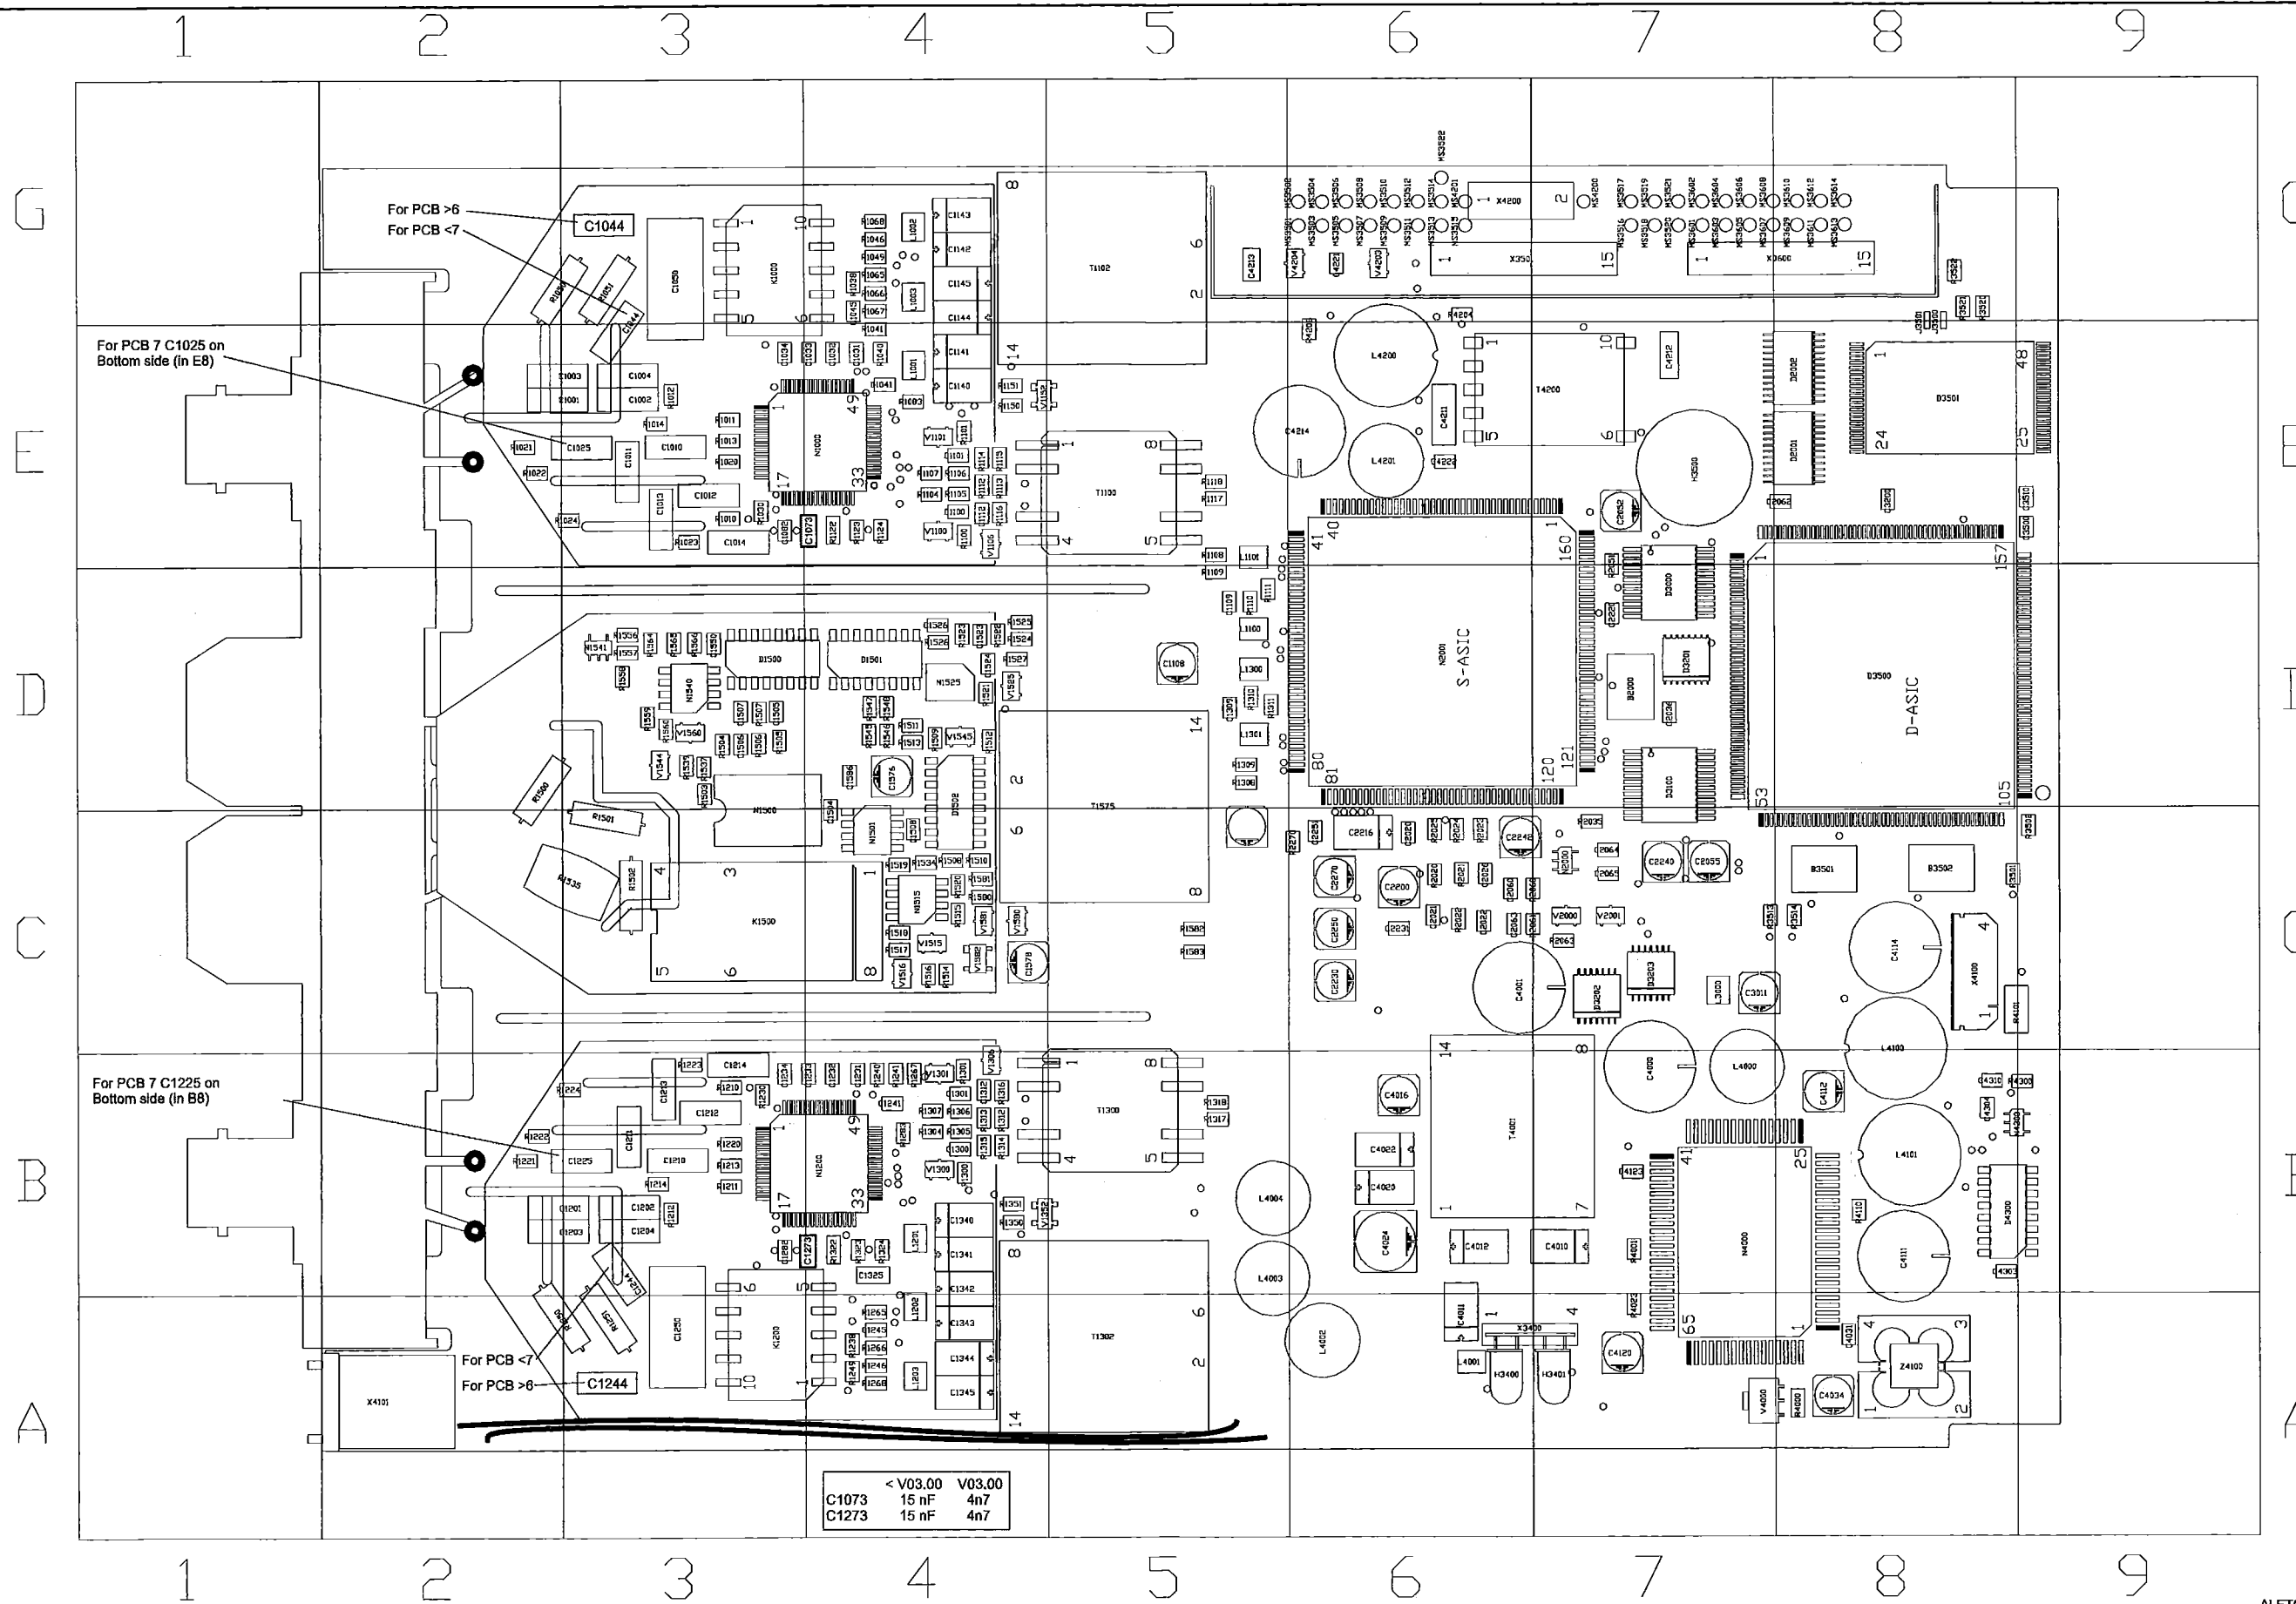


Figure 9-14. Main PCA Top View PCB Version 6 and 7

ALFTOP67 alltop67.wmf





# **Chapter 10**

## **Modifications**

<b>Title</b>	<b>Page</b>
10.1 Software modifications .....	10-3
10.2 Hardware modifications .....	10-3



## 10.1 Software modifications

Changes and improvements made to the test tool software are identified by incrementing the software version number. These changes are documented on a supplemental change/errata sheet which, when applicable, is included with the manual.

To see the test tool software version press , then press  to open the VERSION & CAL... menu.

### V01.00

First units shipped have software version V01.00.

### V01.20

V01.00 bugs fixed .

### V01.21

Sets the noise level of a specific S-ASIC batch within specifications.


### V01.22

Sets the noise level of all S-ASIC batches within specifications.

## 10.2 Hardware modifications

### PCA (Printed Circuit Assembly)

Changes and improvements made to the test tool PCA (Printed Circuit Assembly) hardware are identified by incrementing its revision number (the revision numbers need not necessarily to be increased by 1). This number is printed on a sticker located on the metal shielding plate around the flat cable connectors. Figure 10-1 shows the sticker for revision number 13.

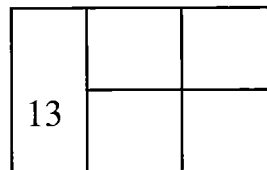

**Figure 10-1. PCA revision number sticker**

### PCB (Printed Circuit Board)

The PCB (Printed Circuit Board without parts) version can be identified by checking its 12 digit code. This code is located on the board edge near the optical gate diodes H3400-H3401.

The code is 4022 245 0478x ; x is the version number of the PCB.

### PCA Revision 11

Revision 11 has PCB version 5, with hand soldered parts near the S-ASIC N2001.

### PCA Revision 12

Revisiion 12 is identical to Revision 11

**PCA Revision 13**

Revision 13 has PCB version 6. The hand soldered parts are included now in the PCB layout. Revision 11 and 13 are fully compatible.

**FlashROM**

The installed FlashROM D3501 on the Main PCA can be one of the types shown in the table below. Depending on the installed type, a 0 Ω resistor R3503 must be present or not present. In the circuit diagram figure 9-7, R3503 is indicated as an optional 100 MΩ resistor.

FlashROM type	Supplier	R3503*
M5M29FB160AVP-80	Mitsubishi	not present
TE28F160B3T-120	Intel	present
TE28F160B3TA-110	Intel	present
TE28F160B3B-120	Intel	present
TE28F160B3BA-110	Intel	present


\* indicated in circuit diagram Figure 9-7 as 100 MΩ

All Intel FlashROMs have the same new part number; if you order the Intel FlashROM, any one of the above mentioned Intel types can be supplied. If the Mitsubishi FlashROM becomes obsolete, you can use the Intel type as a replacement. Then proceed as described below.

**FlashROM replacement procedure:**

If you replace an Intel FlashROM by a Mitsubishi or reverse, you must take care that R3503 is present or not present, depending on the FlashROM you use for replacement. The location of R3503 is indicated in the figure below.

- Remove R3503, if present, when installing 4022 304 10381.
- Install R3503, if not present, when installing 4022 304 10382.

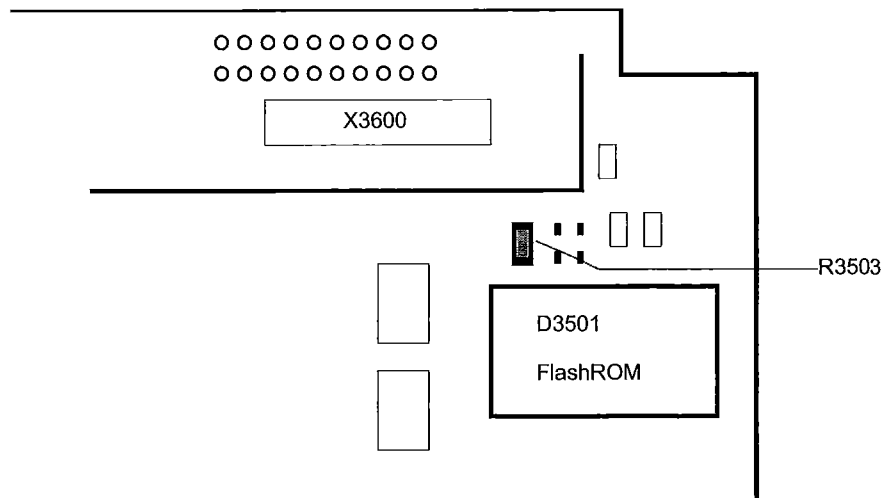

**Figure 10-2. R3503 for Intel FlashROM**

190flash.wmf

**PCA revision 14**

In some units the 5 MOhm and 30 MOhm Meter ranges fail due to oscillation of the current source amplifier N1540. This happens in particular at high temperatures. To cure this problem a 100 pF capacitor C1560 (pn 4022 246 19371) is installed on top of R1560, electrically in parallel with R1560.

**PCA revision 15**

Revision 15 has a new PCB, version 7. The manually soldered parts R4207 and R4208 are included now in the PCB layout. Also some parts have been moved. Figure 9-14 and Figure 9-15 reflect the parts layout for PCB version 6 and 7. Revision 11-15 are fully compatible.

