


# Nikon ZOOM 800

# ZOOM 800 QD

*Instruction Manual / Manual de instrucciones*  
*Manuel d'utilisation / Bedienungsanleitung*

CE

ESFG

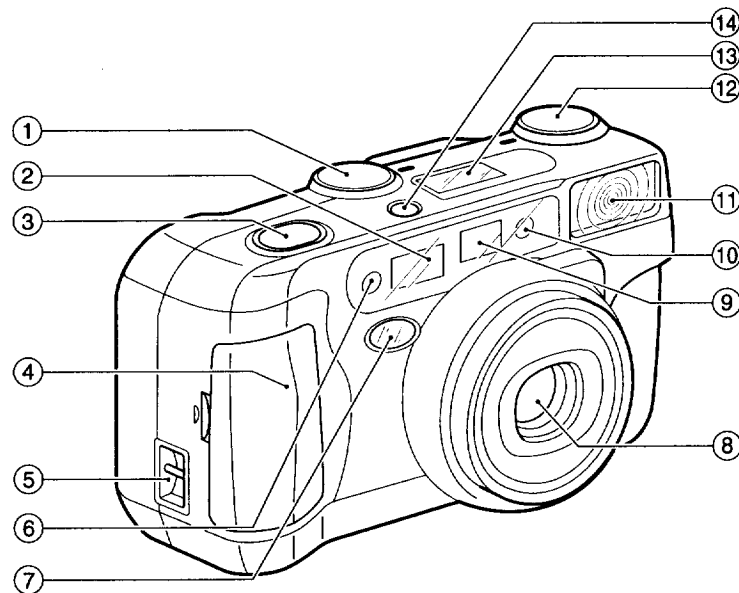

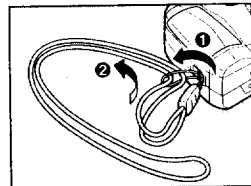
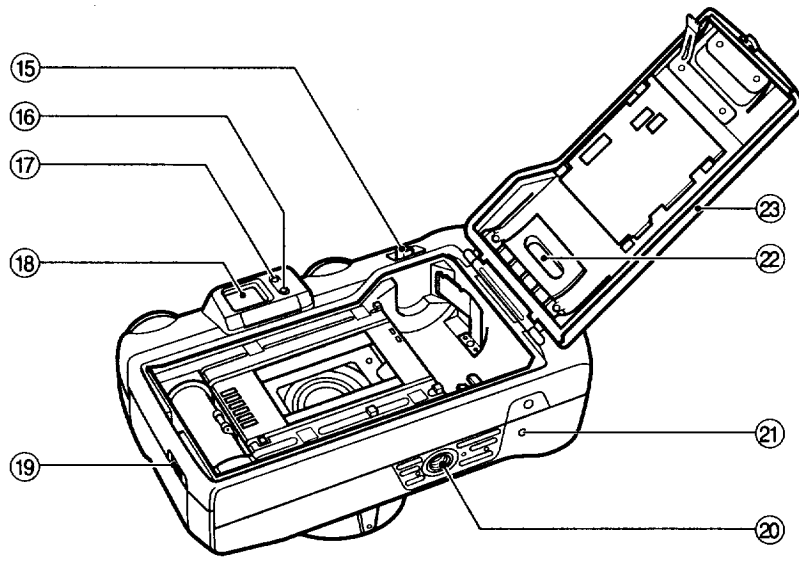


Fig. 1 Abb. 1

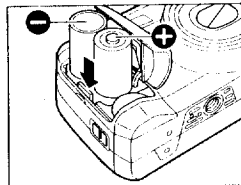


Fig. 4 Abb. 4

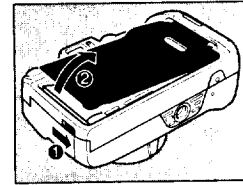


Fig. 7 Abb. 7

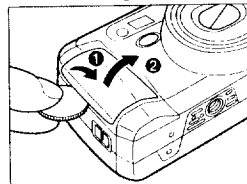


Fig. 2 Abb. 2

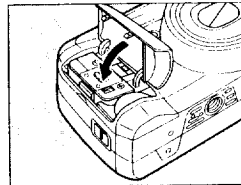


Fig. 5 Abb. 5

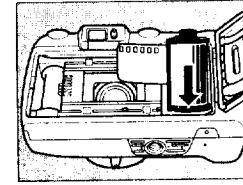


Fig. 8 Abb. 8

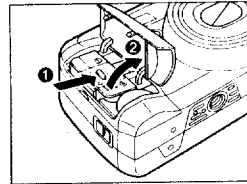


Fig. 3 Abb. 3

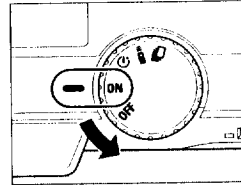


Fig. 6 Abb. 6

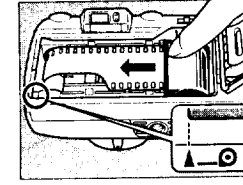


Fig. 9 Abb. 9

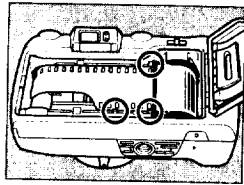


Fig. 10 Abb. 10

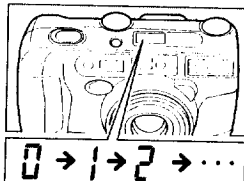


Fig. 12 Abb. 12

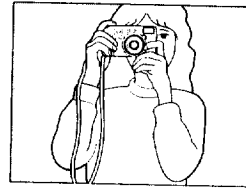


Fig. 15 Abb. 15

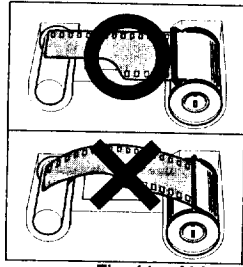


Fig. 11 Abb. 11

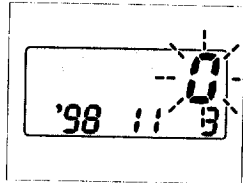


Fig. 13 Abb. 13

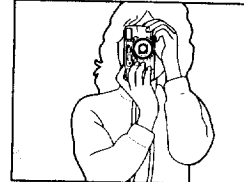


Fig. 16 Abb. 16

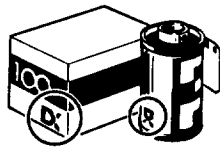


Fig. 14 Abb. 14

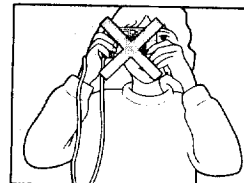


Fig. 17 Abb. 17

5

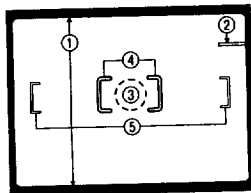


Fig. 18 Abb. 18

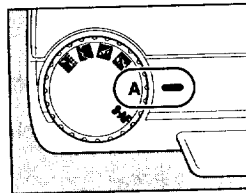


Fig. 21 Abb. 21

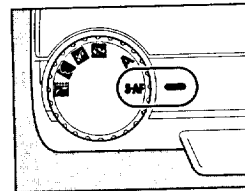


Fig. 24 Abb. 24

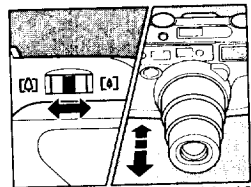


Fig. 19 Abb. 19

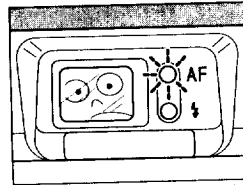


Fig. 22 Abb. 22



Fig. 25 Abb. 25

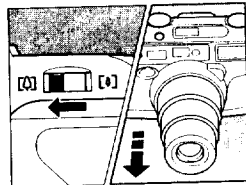


Fig. 20 Abb. 20

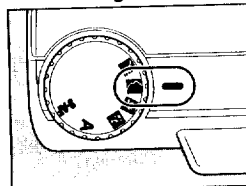


Fig. 23 Abb. 23

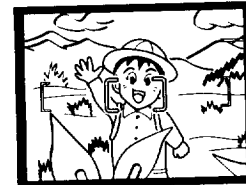


Fig. 26 Abb. 26

6

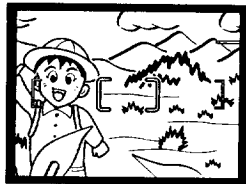


Fig. 27 Abb. 27

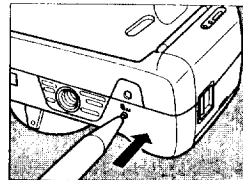


Fig. 30 Abb. 30

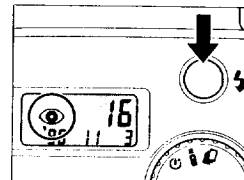


Fig. 33 Abb. 33

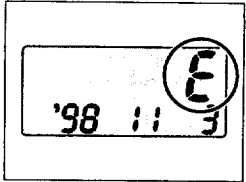


Fig. 28 Abb. 28

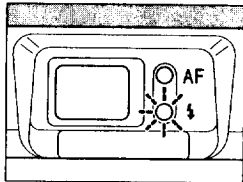


Fig. 31 Abb. 31

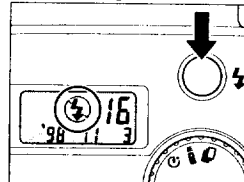


Fig. 34 Abb. 34

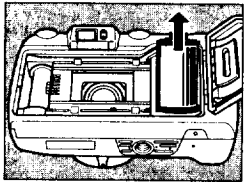


Fig. 29 Abb. 29

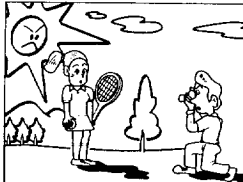


Fig. 32 Abb. 32

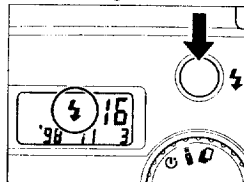


Fig. 35 Abb. 35

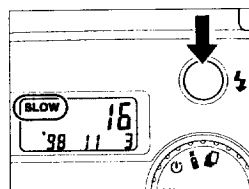


Fig. 36 Abb. 36

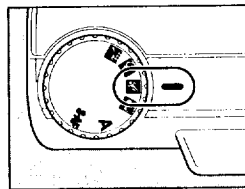


Fig. 39 Abb. 39

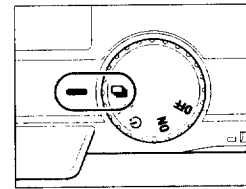


Fig. 42 Abb. 42

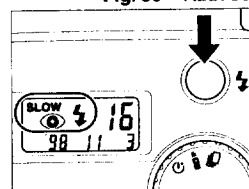


Fig. 37 Abb. 37

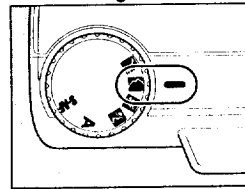


Fig. 40 Abb. 40

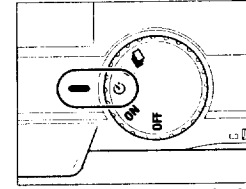


Fig. 43 Abb. 43

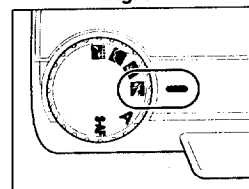


Fig. 38 Abb. 38

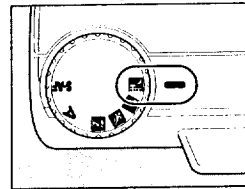


Fig. 41 Abb. 41

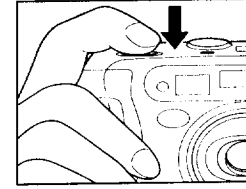


Fig. 44 Abb. 44

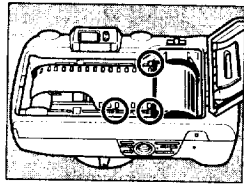


Fig. 10 Abb. 10

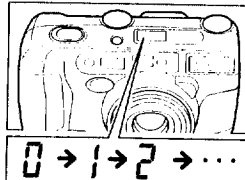


Fig. 12 Abb. 12

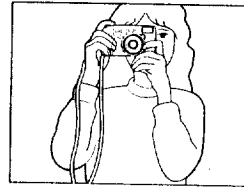


Fig. 15 Abb. 15

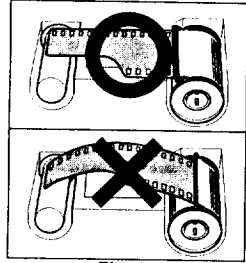


Fig. 11 Abb. 11

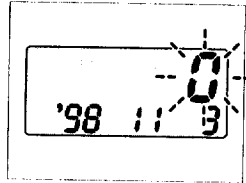


Fig. 13 Abb. 13

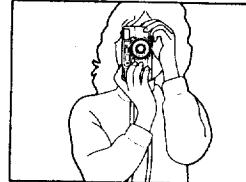


Fig. 16 Abb. 16

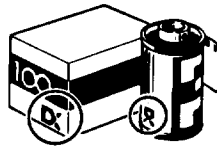


Fig. 14 Abb. 14

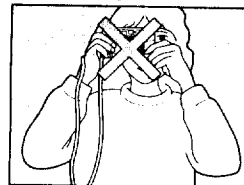


Fig. 17 Abb. 17

5

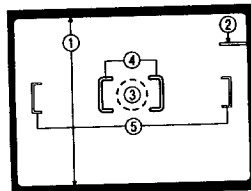


Fig. 18 Abb. 18

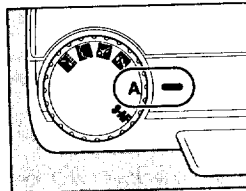


Fig. 21 Abb. 21

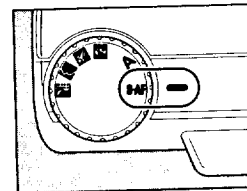


Fig. 24 Abb. 24

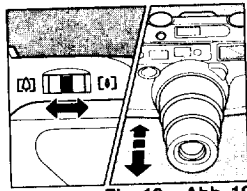


Fig. 19 Abb. 19

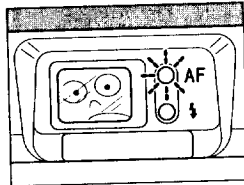


Fig. 22 Abb. 22

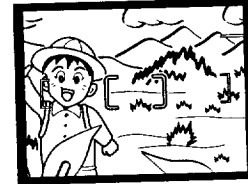


Fig. 25 Abb. 25

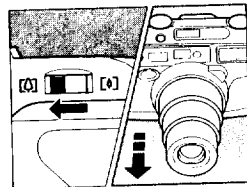


Fig. 20 Abb. 20

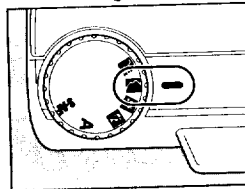


Fig. 23 Abb. 23

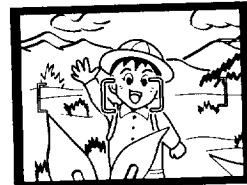


Fig. 26 Abb. 26

6

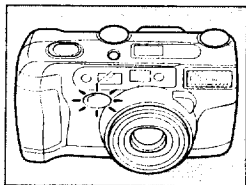


Fig. 45 Abb. 45

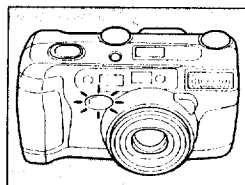


Fig. 48 Abb. 48

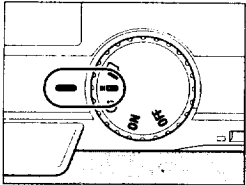


Fig. 46 Abb. 46

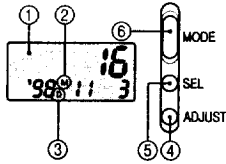


Fig. 49 Abb. 49

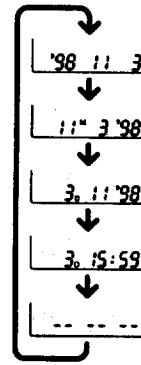


Fig. 50 Abb. 50

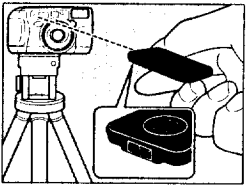


Fig. 47 Abb. 47

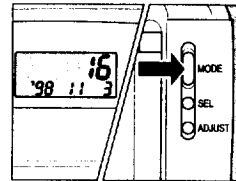


Fig. 51 Abb. 51

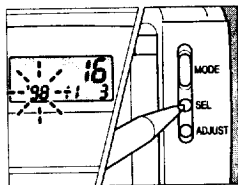


Fig. 52 Abb. 52

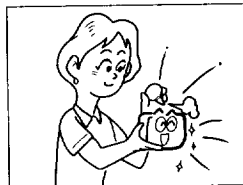


Fig. 55 Abb. 55

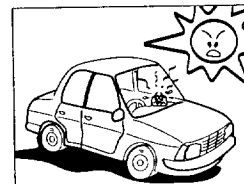


Fig. 58 Abb. 58

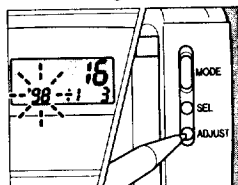


Fig. 53 Abb. 53

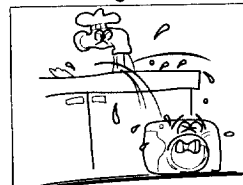


Fig. 56 Abb. 56

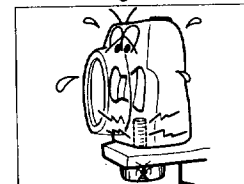


Fig. 59 Abb. 59

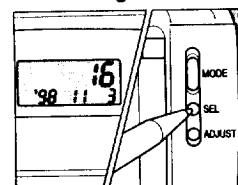


Fig. 54 Abb. 54



Fig. 57 Abb. 57

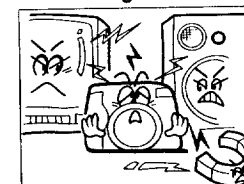


Fig. 60 Abb. 60



**Example 1 / Exemple 1**  
**Ejemplo 1 / Beispiel 1**



**Example 2 / Exemple 2**  
**Ejemplo 2 / Beispiel 2**



**Example 3 / Exemple 3**  
**Ejemplo 3 / Beispiel 3**



**Example 4 / Exemple 4**  
**Ejemplo 4 / Beispiel 4**




**Example 5 / Exemple 5**  
**Ejemplo 5 / Beispiel 5**



**Example 6 / Exemple 6**  
**Ejemplo 6 / Beispiel 6**



**Example 7 / Exemple 7**  
**Ejemplo 7 / Beispiel 7**

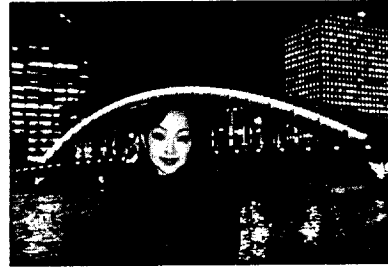

**Example 8 / Exemple 8**  
**Ejemplo 8 / Beispiel 8**

## CONTENTS

Locating the Controls .....	15
LCD Panel .....	16
Combining the Modes .....	17
Main Features .....	17
Before Using .....	18
Attaching the Strap .....	18
Inserting the Batteries .....	18
Turning the Power On/Off .....	18
Checking the Batteries .....	19
Loading the Film .....	19
Setting the Film Speed .....	19
Holding Your Camera .....	20
Viewfinder .....	21
Monitors .....	21
Zooming the Lens .....	22
Macro Photography .....	22
A (Auto) Mode (Multi AF Mode) .....	22
Spot AF Mode/Using Focus Lock .....	23
Auto Film Rewinding .....	24
Flash Photography .....	24
Auto Backlight Control/Auto Fill-Flash .....	25
Other Flash Modes .....	25
Red-Eye Reduction Mode .....	25
Flash Cancel .....	26
Anytime Flash .....	26
Slow Sync Mode .....	27
Red-Eye Reduction with Slow Sync Mode .....	27
Creative Modes .....	28
Portrait Mode .....	28
Action Mode .....	28
Landscape Mode .....	28
Night Scene Mode .....	29
Continuous Shooting Function .....	29
Using the Self-Timer .....	31
Remote Control Unit (ML-L2) (Optional) .....	31
Databack Settings (ZOOM800 QD only) .....	31
Proper Care of Your Camera .....	32
Troubleshooting .....	33
Major Specifications .....	34

14


**We are most gratified that you have selected a Nikon camera. Before using your camera, please be sure to read these instructions carefully.**

### LOCATING THE CONTROLS

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>① Drive Dial</li> <li>② Distance Measuring Window</li> <li>③ Shutter Release Button</li> <li>④ Battery Compartment Cover</li> <li>⑤ Strap Holder</li> <li>⑥ Remote Control Sensor</li> <li>⑦ AF-Assist Illuminator/Self-Timer Lamp</li> <li>⑧ Lens</li> <li>⑨ Viewfinder Window</li> <li>⑩ Auto Exposure Window</li> <li>⑪ Built-in Flash</li> <li>⑫ Mode Dial</li> </ul> | <ul style="list-style-type: none"> <li>⑬ LCD Panel</li> <li>⑭ Flash Button</li> <li>⑮ Zoom Lever</li> <li>⑯ Flash Monitor</li> <li>⑰ AF Monitor</li> <li>⑱ Viewfinder</li> <li>⑲ Back Cover Latch</li> <li>⑳ Tripod Socket</li> <li>㉑ Manual Film Rewind Button</li> <li>㉒ Film Loaded Window</li> <li>㉓ Back Cover</li> </ul> |
|--|--|



## LCD PANEL

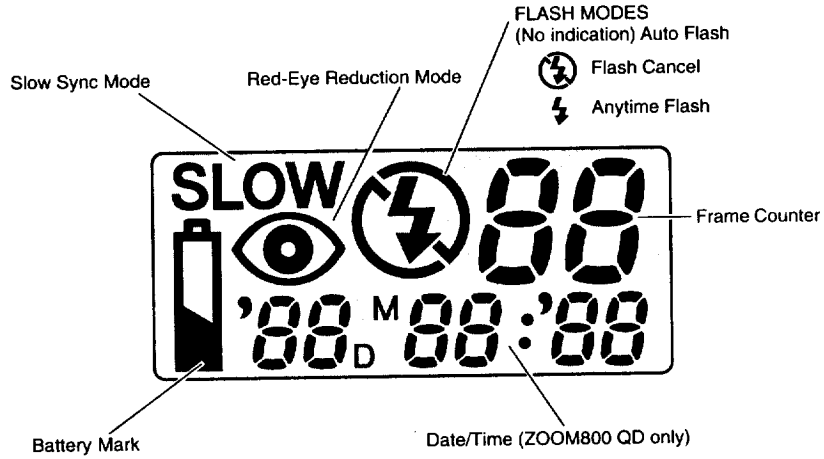

16

### ● COMBINING THE MODES

It is possible to set the camera to combine the Self-Timer and Remote Control with the shooting modes and the flash modes. Some of the shooting modes can also be combined with the flash modes, as shown below.

Shooting Modes Flash Modes	A (Auto) Mode	Portrait Mode	Action Mode	Landscape Mode	Night Scene Mode	Spot AF Mode
Auto Flash	○	○	○	×	○	○
Red-Eye Reduction	○	○	×	×	○	○
Flash Cancel	○	○	○	○	×	○
Anytime Flash	○	○	○	×	×	○
Slow Sync	○	×	×	×	×	○
Red-Eye Reduction with Slow Sync	○	×	×	×	×	○

17

## MAIN FEATURES

- Powerful 38-130mm multi coated zoom lens with aspheric lens elements
- 7-zone passive multi AF in 1024 measuring steps
- High-power zoom flash for tele shooting
- Easy to access 2-dial control with illuminator
- Creative modes (Portrait, Action, Night Scene, Landscape, etc.)
- Compact and light weight body

## BEFORE USING

- A fast film such as ISO 200 or ISO 400 is recommended to prevent blurriness and to obtain a longer flash range.
- When focusing is difficult or impossible, AF Monitor blinks to warn you that an out-of-focus picture will occur. Set Landscape mode or use Focus Lock function. (page 24, 29)
- Do not hold the camera by the lens.
- Before taking important pictures (at weddings, on trips abroad, etc.) test the camera and learn how it works.

## CAUTIONS

- **This camera has a high voltage circuit. Because it is dangerous, do not attempt to take the camera apart.**

18

- ★ For ZOOM800 QD only; The date display [ "00 0 0 ] blinks when the batteries are replaced. By pressing either the Mode Button, Select Button, or Set Button, [11'95] will be displayed. Reset the correct time and date.
- ★ When replacing the batteries, do so as quickly as possible to avoid erasing camera memory. We recommend replacing the batteries when there is no film in the camera.
- ★ **The batteries can explode or cause burns if disposed of in fire or if shorted, disassembled, heated or recharged.**


- **Recommended Replacement 3V Lithium Batteries:** CR-123A, or equivalent X 2.

## TURNING THE POWER ON/OFF

The power is turned on or off by selecting ON or OFF on the Drive Dial. (Fig. 6)

When the power is turned on, the lens moves from the storage position to the wideangle position, and the camera is set automatically to the mode selected on the Mode Dial.

## CHECKING THE BATTERIES

1. When the batteries are nearly exhausted,  will appear on the LCD Panel. Replace with new batteries as soon as possible.

- **If the built-in flash does not operate, do not touch the internal parts of the camera, as it contains a high voltage circuit. Take the camera to an authorized Nikon dealer or service center.**




## ATTACHING THE STRAP

1. Insert the small loop at the end of the strap under the Strap Holder. (Fig. 1 ①)
2. Insert the other end of the strap through the loop to tie the strap onto the Strap Holder. (Fig. 1 ②)

## INSERTING THE BATTERIES

The camera will not operate unless the batteries are installed. Make sure that the batteries are installed correctly.

1. **Insert** a coin in the slot of the Battery Compartment Cover to open it. (Fig. 2)
  2. Slide the inner cover latch in the direction indicated to open. (Fig. 3)
  3. Insert the recommended 3 volt lithium batteries, checking that the + and - are inserted correctly. (Fig. 4)
  4. Press down the inner cover to close.
  5. Close the Battery Compartment Cover by pushing it in the direction indicated until it locks firmly in place. (Fig. 5)
- \* Do not remove the batteries from the camera until you are ready to replace them.

2. When the batteries are exhausted, the  symbol will blink in the LCD Panel. Replace with new batteries.
- ★ As the battery voltage is reduced in extremely cold temperatures, the  symbol may blink. You may be able to use the camera if you remove the batteries and warm them up.
  - ★ In the following cases, battery voltage is insufficient and the batteries need to be replaced.
    - 1) When the power does not turn on.
    - 2) When the  symbol blinks.
    - 3) When the shutter does not release.
    - 4) When film advance or rewind do not function.
    - 5) When the Self-Timer does not function.
  - ★ To avoid tripping the shutter inadvertently and wasting battery power, always turn the power off when you are not taking pictures.
  - ★ If the camera is not operated (buttons, dials and lever) for about 5 minutes, the power automatically turns off, the LCD Panel display disappears and the lens returns to the storage position. The purpose of this function is to prevent waste of battery power. The power will turn on again by operating any of the buttons, dials or lever.

## LOADING THE FILM

Always avoid direct sunlight when loading the film.

1. Push the Back Cover Latch downward to open. (Fig. 7)

19

2. Load the film cassette into the Film Chamber and pull out enough film leader to extend past the mark of the film leader position. (Fig. 8, 9)
- ★ If there is any dust on the inside lens surface, use a blower to blow the dust away.
3. Make sure the film stays within the Film Guides and lies flat. (Fig. 10, 11)
4. Press the Back Cover shut so that the Back Cover Latch returns to its original position. When you close the Back Cover the film is automatically advanced, and the first frame is set in place. The Frame Counter on the LCD Panel displays the number of frames remaining to be exposed. (Fig. 12)
- ★ If the film has not advanced correctly and is not taken up onto the Film Take-up Spool, the Frame Counter will blink. (Fig. 13) The Shutter Release Button will also lock so you cannot take a picture until the film is loaded properly. (DX Film only) Reload the film by following steps 1—4.
- ★ Whether there is film in your camera or not can be confirmed by either the Film Loaded Window or the Frame Counter in the LCD Panel.
- ★ You can confirm that the Film-Wind or Rewind is working properly by observing the Frame Counter.
- ★ You can load film in your camera with the power off. However, the LCD Panel display will disappear after loading is complete.
- ★ Do not touch the inner lens with your fingers or the edge of film.

20

### HOLDING YOUR CAMERA

1. Always use both hands to steady your camera. (Fig. 15)
- ★ When holding the camera vertically, always position it with the flash at the top. (Fig. 16)
- ★ Be careful not to place your fingers over the lens, flash or focusing windows. (Fig. 17)
- ★ We suggest that you become familiar with your new camera by shooting and processing at least one roll of film before using your camera to record an important occasion.
- ★ If the camera moves during the exposure, the whole picture will be blurred. To help insure sharp pictures, hold the camera steadily and properly.

- ★ This camera's Pre-wind System automatically prewinds the film to the end when you load it and rewinds it back into the film cassette as each shot is taken. If the back cover is accidentally opened before the film has reached the end, close it immediately. The film will automatically rewind. When it has completely rewound, the Frame Counter will display "E". Remove the film and develop.
- ★ Sometimes more exposures can be taken than the standard number of frames listed on the film. For this reason, the number of frames counted in the Frame Counter on the LCD Panel may sometimes be higher than the number of frames listed on the film.

### SETTING THE FILM SPEED

DX-coded film cassettes have black-and-silver patterns corresponding to film speeds that the camera reads and automatically sets. Your camera accepts DX films with speeds ranging from ISO 50 to 3200. (Fig. 14)

Most color negative films on the market are DX-coded. When using DX-coded films, setting the film speed is not necessary. Your camera automatically sets the correct film speed.

When using a film without a DX code, your camera will automatically set itself to ISO 100.

### VIEWFINDER (Fig. 18)

- ① **Field of View Frame:**  
The subject (such as people or scenery) you wish to photograph should be contained within this frame.
- ② **Parallax Correction Marks (Close Focusing in Telephoto)**  
When taking a picture of a subject that is between 1m-1.8m (3.3 ft.-6 ft.) away from your camera, the subject should be positioned within this mark. Anything outside the marks will not be included in the picture even if you can see it through the viewfinder.
- ③ **Spot AF Area (no indication)**
- ④ **Multi AF Marks (in Wide)**
- ⑤ **Multi AF Marks (in Tele)**

21

## MONITORS

When the Shutter Release button is pressed lightly, the AF Monitor and the Flash Monitor on the right of the viewfinder will either light up or blink to indicate the following.

### AF Monitor (Green)

Display	Description	Shutter
Lights up	Subject is in focus	Shutter will release
Blinks	Subject is out of focus	*Shutter will release
	Subject too close	Shutter will not release

\* In certain cases the shutter will not release. However, this is not a malfunction.

### Flash Monitor (Red)

Display	Description	Shutter
Lights up	Subject within flash range	Shutter will release
Blinks	Flash is charging	Shutter will not release
Blinks rapidly	Subject out of flash range	Shutter will release

22

## A (AUTO) MODE (MULTI AF MODE)

1. Turn the Mode Dial to **A**. (Fig. 21)
2. Set the subject you wish to take within the multi AF area in the center of the viewfinder. (Fig. 18, Viewfinder)
  - ★ The multi AF area changes depending on the lens position (wide or tele).
3. Press the Shutter Release Button gently to avoid camera shake.
  - ★ If the subject is closer than 1m (3.3 ft.), the AF Monitor blinks and the shutter will lock to prevent out-of-focus pictures. (Fig. 22)
  - ★ The distance between the subject and the camera is measured in 7 zones within the multi AF marks. Among these zones, focusing will be adjusted to the closest subject. This function will help prevent out-of-focus pictures.
  - ★ The AF system uses an actual image of the subject to focus properly. In low light conditions, the AF-Assist Illuminator automatically lights momentarily to provide a bright target for the AF system to see.
  - ★ In backlight conditions, make sure the subject is in the center of the multi AF area. Otherwise, the camera cannot detect the backlight condition, and even if the subject is less than 6m (20 ft.) away, the flash will not fire.

## ZOOMING THE LENS

The built-in 38-130mm zoom lens lets you get more in the picture, or closer to your subject without changing your position. This allows you to easily select the composition that best suits your subject. (Examples 1, 2) To zoom the lens, just turn the zoom lever to the left for Tele or to the right for Wide until your subject is framed properly. (Fig. 19)

- ★ When zooming the lens, keep your fingers away from the moving lens components.
  - ★ When the power is turned off, the lens will return to its storage position automatically.
  - ★ To save on battery life, after about 5 minutes of inactivity, the lens will return to the Storage Position and the display on the LCD panel will disappear.
- When zooming to the telephoto end, be sure to hold the camera firmly to prevent camera shake.

## MACRO PHOTOGRAPHY

Used for close-up photography of flowers, etc.

### (Example 3)

1. Turn the zoom lever to the left to set the 130mm position. (Fig. 20)
2. If necessary, approach to the minimum distance of 1m (3.3 ft.) and release the shutter gently.
  - ★ At 130mm, the magnification at the minimum distance of 1m (3.3 ft.) is approximately 1/7.1 times.

### When the subject is difficult to focus on:

The autofocus sensor determines precise focus by reading the contrast of the subject. In certain rare situations, there may not be enough contrast for proper focusing. For example, clouds, hazy mountains, white walls and dark subjects that do not reflect light well. In these situations, the camera is designed to warn you that an out-of-focus picture may occur. It does so by blinking the green AF Monitor in the viewfinder. In this case, use Landscape Mode (Fig. 23) to set focus to infinity, or use Focus Lock in Spot AF Mode.

- ★ In very rare cases such as strongly backlit subject, clear sky etc., shutter may lock. If this happens, use Focus Lock in Spot AF Mode.

23

## SPOT AF MODE/USING FOCUS LOCK

Your camera's multi AF system will provide excellent results in most shooting conditions. However, when the subject you wish to focus on is behind a window, fence or bars, or located high or low in the viewfinder, you should use Focus Lock shooting. This will ensure a sharply focused image of your subject.

### When the subject is high or low within the viewfinder:

1. Turn the Mode Dial to S•AF. (Fig. 24)
2. There may be cases where none of your main subjects are at the Spot AF area located at the center of the viewfinder (e.g. subject located high or low). If you release the shutter then, only the background will be in focus, and the subject will be out-of-focus. (Fig. 25)
3. To use Focus Lock, move the camera so that one of the subjects is within the Spot AF area. (Fig. 26) Press the Shutter Release Button halfway so that the AF Monitor lights up. Keep holding your finger halfway down on the Shutter Release Button.
4. Now return the camera to its original position so that your main subjects are composed to your liking within the Field of View Frame again, and press the Shutter Release Button fully to take the picture. (Fig. 27)

### When the subject is difficult to focus on:

1. When you are photographing subjects that are diffi-

cult to focus on, or if your main subject is behind other closer objects, then find another subject at the same distance from the camera. Use Focus Lock, in the same way as described before.

- ★ If you are shooting through a window under low light conditions, aim the camera at a slight angle to the glass to minimize any direct reflection of the AF-Assist Illuminator.
- ★ When you release your finger from the Shutter Release Button, the Focus Lock setting is cleared, so that you can use Focus Lock again as many times as you wish.

## AUTO FILM REWINDING

1. After the end of the film has been reached, the film will automatically rewind.
  2. When the film is fully rewound, the motor stops automatically and "E" is displayed in the LCD Panel. (Fig. 28) Open the Back Cover to unload the film. (Fig. 29)
- ★ If you wish to rewind the film before reaching the end of the film, push the Manual Film Rewind Button with a pen, etc. (If the Film Rewind Button is pressed with a pen while it is rewinding, the film leader will not be wound into the film cassette and will remain outside.) (Fig. 30)
  - ★ Be careful not to touch the inner lens surface with your fingers or the edge of film.

24

## FLASH PHOTOGRAPHY

1. If additional light is required, the built-in Flash automatically activates.

### ★ Flash Shooting Range

(ISO 100)

Wideangle: 1m-5.3m (3.3 ft.-17.5 ft.)

Telephoto: 1m-3.2m (3.3 ft.-10.5 ft.)

(ISO 400)

Wideangle: 1m-10.6m (3.3 ft.-35 ft.)

Telephoto: 1m-6.4m (3.3 ft.-21 ft.)

- ★ To increase shooting range, use higher speed film such as ISO 400.
  - ★ To check if the subject is within the recommended flash shooting range, press the Shutter Release Button halfway.  
When red Flash Monitor turns on steadily, it is within the range, and when it blinks fast, it warns that the subject is out of the range.
2. When the flash is still charging, the red Flash Monitor will blink and the shutter will be locked. (Fig. 31) Wait until the red LED turns off in order to use the flash.

## Auto Backlight Control/Auto Fill-Flash

When taking pictures of backlit subjects, important details are often lost in the shadows. Your camera automatically compensates for these lighting situations. If the subject is backlit and is about 6m (20 ft.) from the camera, Auto Backlight Control will be activated. If the subject is within about 6m (20 ft.) of the camera, the Flash activates automatically and the shadows are lightened up using automatic daylight fill-flash. Thus, with backlit subjects, natural looking pictures can be taken easily and automatically. (Fig. 32)

- ★ Frame the subject in the center of the viewfinder to activate compensation.

## Other Flash Modes


The following Flash Modes can be selected by pressing the Flash Button:

- Red-Eye Reduction Mode
- Flash Cancel
- Anytime Flash
- Slow Sync
- Red-Eye Reduction with Slow Sync

25

## RED-EYE REDUCTION MODE

Selecting this mode makes it possible to minimize the red-eye effect that sometimes occurs when taking portrait photographs with flash. Now it is easy for anyone to take superior shots of people.

1. Press the Flash Button until the  symbol appears on the LCD Panel. (Fig. 33)
  2. Press the Shutter Release Button. The flash system will begin its Pre-Flash Cycle. After a brief delay, the Main Flash will then fire.
- ★ Be sure to hold the camera still after pressing the Shutter Release Button.
  - ★ You should advise your subjects that you are using Red-Eye Reduction flash and they should wait for a second.
  - ★ This mode is not cancelled when the camera is switched off.
  - ★ To cancel this mode, press the Flash Button again for any other selection.

### Reducing Flash Output

The flash adjusts the flash brightness to prevent excessively overexposed pictures when photographing, for example, fair-skinned subjects at close range. This function works similarly in any of the Flash Modes.


26

## ANYTIME FLASH

This forcibly trips the flash when you want to photograph subjects with sunlight to their side or back. It lets you take more natural looking pictures by softening harsh shadows.


### Example 4: When the Anytime Flash is set

### Example 5: When the Anytime Flash is not set

1. Press the Flash Button until the  symbol appears on the LCD Panel. (Fig. 35)
  2. Press the Shutter Release Button. There will now be flash every time the shutter is tripped.
- ★ The camera will follow a daytime Synchro-Sunlight Exposure program in cases of bright light.
  - ★ To cancel this mode, press the Flash Button until there is a different mode symbol (or none) on the LCD Panel.

## FLASH CANCEL

This mode forcibly prevents automatic firing of the flash, thus allowing available light photography in museums, churches, etc. where flash photography is prohibited.

1. Press the Flash Button until the  symbol appears on the LCD Panel. (Fig. 34)
  2. Press the Shutter Release Button and the shutter will be tripped without flash.
- ★ To cancel this mode, press the Flash Button until there is a different mode symbol (or none) on the LCD Panel.
  - ★ In dim light, the camera's shutter speed will be automatically reduced. To prevent a blurry picture, use a tripod to keep the camera steady.

## SLOW SYNC MODE

Use this mode indoors, at parties and in lighted rooms when you want both the subject and the background to be sharp. (Example 6)



With Auto-Flash or Anytime Flash modes the background may be dark because of the limited range of the flash light. (Example 7)

1. Press the Flash Button until SLOW appears on the LCD panel. (Fig. 36)
- ★ To cancel this mode, press the Flash Button until there is a different mode symbol (or none) on the LCD panel.
  - ★ In dim light, the camera's shutter speed will be automatically reduced up to 2 sec. To prevent a blurry picture, use a tripod to keep the camera steady.

27

## RED-EYE REDUCTION WITH SLOW SYNC MODE

Set this mode to take red-eye reduced Slow Sync photography.


- ★ Press the Flash Button until SLOW   symbol appears on the LCD panel. (Fig. 37)
- ★ To cancel this mode, press the Flash Button until there is a different mode symbol (or none) on the LCD panel.

## CREATIVE MODES

- Portrait Mode
- Action Mode
- Landscape Mode
- Night Scene Mode

## PORTRAIT MODE

Set this mode for shooting portraits. The camera is set to Spot AF mode, the zoom sets automatically, and the flash fires even in daylight.


1. Turn the Mode Dial to the  symbol. (Fig. 38)
2. Press the Shutter Release Button lightly. The camera automatically zooms and the flash fires when the Shutter Release Button is pressed completely.

28

## LANDSCAPE MODE


Set this mode to take beautiful pictures of distant landscapes.

The camera focuses on infinity.

1. Turn the Mode Dial to the  symbol. (Fig. 40)
  2. Fully depress the shutter release button.
- ★ In dim light, the shutter speed becomes slow. To prevent blurry pictures, use a tripod to keep the camera steady.
  - ★ The flash does not fire in the Landscape Mode.

## NIGHT SCENE MODE


With the Night Scene Mode, beautiful pictures can be taken at night. The camera automatically selects the optimum settings for pictures of night scenery, pictures of people at night (Slow Sync photography), and evening or day landscape pictures. (Example 8)

1. Turn the Mode Dial to the  symbol. (Fig. 41)
- ★ Use a tripod to keep the camera steady.
2. Gently press the Shutter Release Button to take the picture.  
For taking photos of people against a background of night scenery, the camera will first focus on infinity and open the shutter, for up to 2 second without flash. After closing the shutter, the camera will then focus on the people and take a picture with the flash.

- ★ Use this mode to obtain photographs with a constant image size, even when the distance to the subject changes.
- ★ If the Shutter Release Button is pressed lightly again, automatic zooming will also be repeated.
- ★ The flash fires automatically in dim light. A soft flash also fires in sufficient-light conditions.
- ★ If the Zoom Lever is used after pressing the Shutter Release Button lightly, automatic zooming will not operate. It will operate again after the Shutter Release Button is pressed completely.

## ACTION MODE

Set this mode to maintain a moving subject in focus. The camera is set to Spot AF, and pictures can be taken continually for as long as the Shutter Release Button is fully depressed.

1. Turn the Mode Dial to the  symbol. (Fig. 39)
  2. Fully depress the shutter release button and hold it down.
- ★ This mode cannot be combined with the Red-Eye Reduction Mode or the Slow Sync Mode.
  - ★ The camera may not focus on very fast moving subjects.

- ★ By doing this, beautiful pictures focused on both night scenery and people are possible. (The people have to be within 6m [19.7 ft.].)
- ★ When taking pictures of night scenery with no subjects, the camera will focus on infinity. The flash will not fire, and the shutter will open for one second (when there is no object within 6m [19.7 ft.].)
- ★ When taking pictures of landscapes in bright daylight, the camera will focus on infinity and set itself to Auto Exposure.  
If people are taken in bright daylight, the camera will set itself to daytime exposure program which will set the flash off.

### Reference:

- ★ To prevent blurry pictures from slow shutter speeds, we recommend the use of a tripod or optional remote control unit.
- ★ You may wish to advise your subjects not to move until the flash fires, to prevent blurred pictures.
- ★ Also, we recommend that your subject sit on a bench or lean on a fence etc., to be stable.
- ★ Use a wide 38mm position to reduce the possibility of pictures with a blurred subject and to gain flash range.

29

- The following shooting modes are automatically selected depending on lighting of the subject and the shooting distance.  
(Using a ISO 100 film speed)


		Brightness of the subject	
		Dark (Less than 5.5 EV)	Bright (More than 5.5 EV)
Shooting distance	Less than 6m	<p>&lt;Night Scene Mode&gt; (Double exposure in ① and ②)</p> <p>① Night scene photography Focusing: Infinity Shutter speed: Max. 2 sec. Flash: Does not fire</p> <p>② Shooting people Focusing: On the subject Shutter speed: Automatic Flash: Fires</p>	<p>&lt;Slow Sync Mode&gt; Focusing: On the subject Shutter speed: Automatic Flash: Fires</p>
	More than 6m	<p>&lt;Night Scene Mode&gt; Focusing: Infinity Shutter speed: Max. 2 sec. Flash: Does not fire</p>	<p>&lt;Landscape Mode&gt; Focusing: Infinity Shutter speed: Automatic flash: Does not fire</p>

30


## CONTINUOUS SHOOTING FUNCTION

This mode allows you to shoot continuously as long as the shutter is pressed.

You can accurately capture continuous action such as competitive sport events, moving subjects, and even the movements of an infant without missing any important moments.

1. Turn the Drive Dial to the  mark. (Fig. 42)
  2. Press and hold down the Shutter Release Button. Your camera will continuously take pictures at a rate of one frame per second as long as the Shutter Release Button is held down.
- ★ Autofocus in continuous shooting is set each time the shutter is released.

## USING THE SELF-TIMER


1. Compose your picture with the camera on a steady support.
  2. Turn the Drive Dial to the  mark. (Fig. 43)
  3. Press the Shutter Release Button.  
The Self-Timer Lamp on the front of the camera will light steadily for approximately 8 seconds. Then the lamp will blink for about 2 seconds to indicate that the Shutter is about to release. After a total of about 10 seconds have elapsed, the Shutter will release. (Fig. 44, 45)
- ★ If you wish to cancel the Self-Timer once it has started, turn the Drive Dial to a different setting.

## Using the Self-Timer for Flash Photography:

With Self-Timer photography, the built-in flash will fire automatically whenever there is insufficient light.

- ★ You may not be able to activate the Self-Timer when the flash is just beginning to recharge. Wait about 3 sec. for the flash to charge and try again.
- ★ If the distance between the subject and camera is too close, the AF Monitor will blink. At that time, the Self-Timer will not activate. Move back a little and try again.

## REMOTE CONTROL UNIT (ML-L2) (OPTIONAL)

1. When you have decided the composition of your picture, and placed the camera on a steady support, turn the Drive Dial to  mark. (Fig. 46)
- ★ Focus Lock cannot be used during Remote Control shooting.
2. Aim the transmitter of the Remote Control Unit toward the front of your camera, and press the Transmit Button. (Fig. 47)  
When the signal is received, the camera is focused automatically, the Self-Timer Lamp lights up and after about 2 seconds the shutter is released. (Fig. 48)  
For another shot, repeat the procedure 2.
3. When you are finished shooting with the Remote Control Unit, turn the Drive Dial to a different setting.

31



- ★ The camera is focused when the signals from the Remote Control Unit are received.
- ★ When the power is switched off, either by Auto Power Off or by the Drive Dial, remote control shooting is cancelled.
- ★ Be careful to keep the transmitter of the Remote Control Unit clean.
- ★ The operating life of the built-in battery of the ML-L2 is about 2 years. If the camera stops responding to the Remote Control Unit, it is probably because the battery has run out. Take the Remote Control Unit to an authorized Nikon dealer or service center.
- ★ Operating distance is within about 3.5m-5m (12 ft.-16.4 ft. ), which varies depending on the angle of transmission to the camera.

## DATA BACK SETTINGS (ZOOM800 QD ONLY)

### Nomenclature of the Data Imprinting Feature (Fig. 49)

- ① LCD Panel
- ② Month Indication
- ③ Day Indication
- ④ Adjust Button
- ⑤ Select Button
- ⑥ Mode Button

### Imprinting mode

#### Examples of Data Imprinting (Fig. 50)

- ① 1998 November 3rd.
- ② November 3rd. 1998
- ③ 3rd. November 1998
- ④ 3rd. 15:59
- ⑤ No Imprinting

The Data Imprinting Mode can be divided into 5 types: Three types of Date, Day and Time, and No Imprinting.

### Selecting Imprinting Mode (Fig. 50)

Each time the Mode button is pressed, the display changes as shown below. (Fig. 51)

- ① Date (Year/Month/Day)
- ② Date (Month/Day/Year)
- ③ Date (Day/Month/Year)
- ④ Time (Day/Hour/Minute)
- ⑤ No Imprinting

32

### Resetting the Date and Time (Fig. 52, 53, 54)

1. Each time the Select button is pressed the flashing digits change in the order of Year, Month, Day, Hour and Minute.
2. When the digits to be reset flash, press the Adjust Button until the desired digits appear. When the Adjust button is kept pressed, the digits change rapidly.
3. Imprinting is not possible when the date and time are being reset. When resetting is complete, press the Select Button until all digits stop flashing.

### Notes on Data Imprinting Feature

- ★ At temperatures below 0°C (32°F), the battery performance deteriorates. The Data Imprinting Feature may not function correctly and imprinting may become impossible.
- ★ When the batteries are replaced, [00 0 0] appears and blinks in the LCD Panel. By pressing either the Mode Button, Select Button, or Adjust Button, [1 1 '95] will be displayed. Reset the correct time and date.
- ★ The data is sometimes illegible if it is imprinted on the following objects.
  - (1) "Warm"-colored objects, such as red, yellow, orange etc.
  - (2) Objects with details similar in size to the imprinted date (gravel, leaves, etc.)
  - (3) Objects of high luminance (sky, white wall, etc.)

## PROPER CARE OF YOUR CAMERA

- ★ If there is dirt on the lens or Distance Measuring Windows and in the camera body, do not attempt to remove it with your fingers. Use a blower to blow the dust away, or wipe the surface gently with camera lens tissue or a soft cloth. (Fig. 55)
- ★ Camera malfunction can be caused by impact, humidity, salt etc. After using the camera at the beach or places where there is salt spray, high humidity or chemicals, wipe it off carefully. (Fig. 56)
- ★ Take care not to expose the camera to sudden changes in temperature, as that may cause condensation on the lens and film or inside the body, or other malfunctions. (Fig. 57)
- ★ Do not expose the camera for a long period of time to extremely high temperatures, such as in your car or on the beach, as this may ruin your film, or cause other malfunctions. (Fig. 58)
- ★ When using a tripod, do not try to force a long screw into the socket. The screw length should be less than 5.7mm (1/4 inch). (Fig. 59)
- ★ Do not place the camera near equipment that has strong magnetic fields such as a television set or radio. (Fig. 60)

33

## TROUBLESHOOTING

When the shutter does not release or the pictures appear blurry, check the table below. If the camera still does not function properly, take it to an authorized Nikon dealer or service center.

### 1. When the shutter does not release

Cause	Check	Remedy	Page
The power is not on.	Is the lens in the storage position? •The power is not on.	Turn the Drive Dial to ON to turn the power on.	P.19
The batteries are exhausted.	Is the Battery Mark blinking in the LCD Panel?	Replace the batteries with new ones.	P.18
The flash is charging.	Is the Flash Monitor (red) next to the Viewfinder blinking?	Wait until the Flash Monitor turns off.	P.25
The shooting distance is too short.	Is the AF Monitor (green) next to the Viewfinder blinking? Or, is the subject in the AF marks nearer than 1m (3.3 ft.) away?	Change the shooting distance. (Move more than 1m [3.3 ft.] away from the subject.)	P.23
The film is not loaded correctly.	Is "0" blinking in the Frame Counter?	Open the Back Cover and reload the film.	P.19
The film is rewinded.	Is "E" displayed on the Frame Counter?	Replace the film with a new one.	P.19

34

### 2. When the pictures appear blurry

Cause	Remedy	Page
The subject is not in the AF area.	Make sure the subject to be focused is within the multi AF marks, or use the S•AF Mode. The multi AF area is larger in telephoto than in wide.	P.23
The camera focused on something in front of the main subject.	Make sure there is no other object in front of the main subject in the AF marks.	P.23
The Shutter Release Button was pressed when the AF Monitor was blinking to indicate a subject that was difficult to focus.	Press the Shutter Release button halfway and make sure the AF Monitor is lit before pressing it completely.	P.24

35

## MAJOR SPECIFICATIONS

<b>Type:</b>	Fully automatic 35mm autofocus lens shutter camera with built-in zoom lens
<b>Lens:</b>	38mm 1/4.5-130mm f/9.5 zoom lens 6 elements, 3 groups
<b>Focusing:</b>	Multi AF type with spot AF facility Passive type with AF-Assist Illuminator in dark conditions Multi AF in 7 zones Minimum focus distance: 1.0m (3.3 ft.)-infinity
<b>Shutter:</b>	Programmed electronic shutter: 2-1/330 sec.
<b>Viewfinder:</b>	Real image zoom viewfinder; frame coverage approx. 80%; approx. 0.39x magnification at 38mm, approx. 1.27x at 130mm.
<b>Exposure Adjustment:</b>	Programmed zoom AE with automatic backlight control Coupling range EV3.5-17 (Wide, ISO 100), EV5.8-19.3 (Tele, ISO 100)
<b>Film Speed:</b>	ISO 50-3200, Compatible with DX code system, Non-DX films are set to ISO 100
<b>Film Load/Wind/Rewinding:</b>	Auto-load system pre-wind system. Film pre-winds to the last frame number when back cover closed. Mid-roll rewind possible
<b>Exposure Counter:</b>	Electronic, Counts down number of exposures left
<b>Built-in Flash:</b>	Electronic Flash automatically activates in dim light and backlight. Modes: Auto, Red-Eye Reduction, Flash Cancel, Anytime Flash, Slow Sync, Red-Eye Reduction with Slow Sync Guide number; 17-21 (ISO 100/m) 56-69 (ISO 100/ft.)

36

<b>Flash Recycle Time:</b>	Approx. 4 sec.
<b>Other Features:</b>	Twin dial selector with/LED, Zoom flash, Night Scene mode, Action mode, Portrait mode, Landscape mode, Single AF mode. Continuous Shooting mode. Remote control possible with optional Remote Control Unit (ML-L2) Data imprinting (ZOOM800 QD only)
<b>Battery Life:</b>	Approx. 20 rolls of 24-exposure film with flash for half of all exposures
<b>Power Source:</b>	Two 3V lithium batteries (CR123A or DL123A)
<b>Dimensions:</b>	128mm (W) x 72mm (H) X 52mm (D), 5 in. (W) x 2.8 in (H) x 2 in. (D)
<b>Weight:</b>	295g/10.4 oz. (without battery)

Specifications and design are subject to change without notice.

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorisation from NIKON CORPORATION.

Queda prohibida la reproducción total o parcial de este manual (salvo en lo que se refiere a citas breves en artículos o revistas especializadas), sin la autorización escrita de NIKON CORPORATION.

Toute reproduction, en tout ou partie, de ce manuel est, sauf pour de brèves citations dans des bancs d'essai ou des articles de presse, interdite sans l'autorisation écrite de NIKON CORPORATION.

Alle Rechte, auch die des auszugsweisen Nachdrucks (mit Ausnahme kurzer Zitate in technischen Besprechungen), ohne schriftliche Genehmigung durch NIKON CORPORATION, bleiben ausdrücklich vorbehalten.

# **Nikon**

## **NIKON CORPORATION**

FUJI BLDG., 2-3, MARUNOUCHI 3-CHOME  
CHIYODA-KU, TOKYO 100-8331, JAPAN

L136 6210

Printed in Taiwan