

Instruction Sheet

Model 52120A/COIL12V

12-Volt DC Coil Supply

Introduction

The 52120A/COIL12V 12-Volt DC Coil Supply (the Supply) is used to supply power to the fan in the 52120A/COIL6KA and the 52120A/COIL3KA multi-turn coils (the Coil).

How to Connect the Power Supply

Warning

To prevent personal injury:

- **Use the Product indoors only.**
- **Do not use the Product around explosive gas, vapor, or in damp or wet environments.**
- **Use the Product only as specified, or the protection supplied by the Product can be compromised.**
- **Do not use, and disable the Product if it is damaged.**
- **Use only specified replacement parts.**

To supply dc voltage to the Coil:

1. Make sure the applicable interchangeable ac blades are attached to the input of the supply for the mains outlet type.
2. Put the ac blades into the mains outlet.
3. Put the dc connector of the Supply into the dc input jack on the rear-panel of the Coil. See Figure 1.

Note

When the connector is in the dc input jack, the built-in power cord of the Coil is disabled.

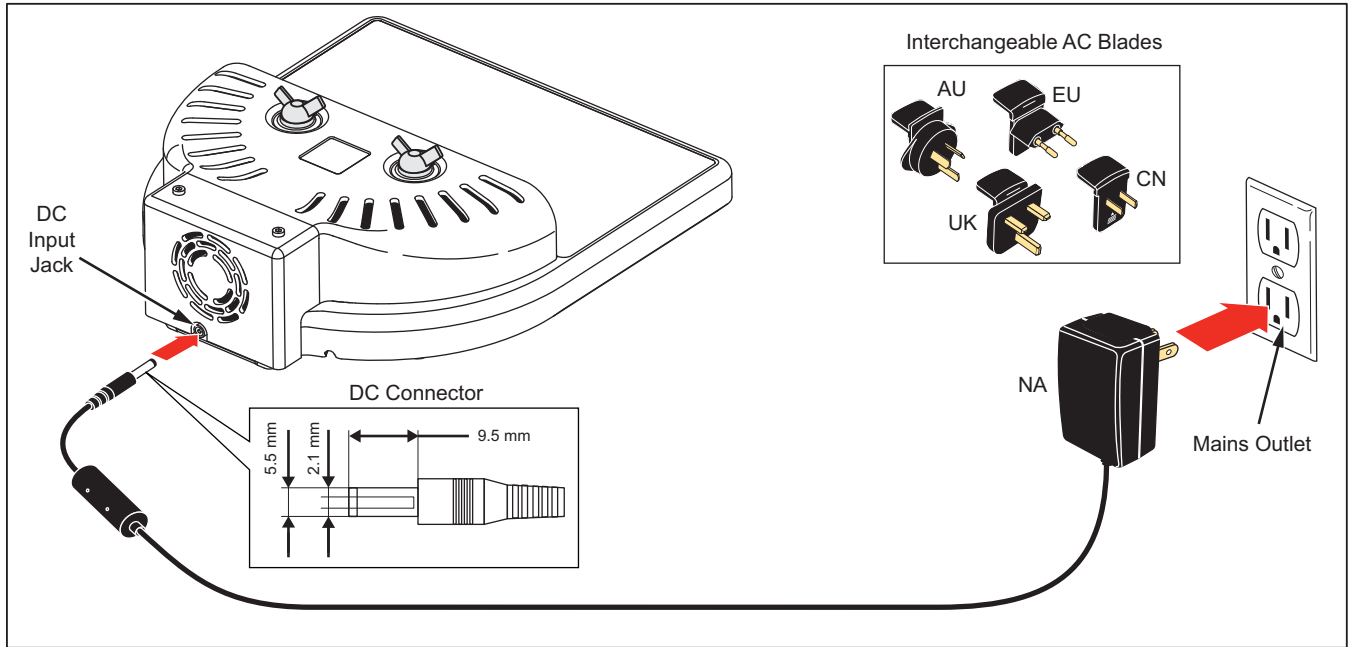


Figure 1. DC Supply Connections

gpp090.eps

Specifications

Temperature

Operating	0 °C to 40 °C
Storage	-10 °C to 70 °C

Humidity

Operating	20 % to 60 %
Storage	10 % to 90 %

Input

Voltage	90 V to 264 V ac
Frequency	47 Hz to 63 Hz
Current	1.0 A ac rms

Output

Voltage	12 V dc
Current	2.5 A dc
Power	30 W
Ripple	300 mV p-p
Efficiency Level	V

DC Plug Type..... Center positive \ominus - \oplus



Protection

Over-Voltage	Protect through primary circuit IC
Short Circuit	Output shut down and auto restart

Safety and Compliance

Isolation

Voltage (input to output at 10 mA for 1 minute)	3,000 V ac (4,242 V dc)
Resistance (input to output at 500 V dc)	100 M Ω
EMI/EMC	FCC part 15B, EN55022B, CE
Leakage Current	0.25 mA max.
RoHS	Compliant

Certifications  ,  , 