

JULY, 1975


397075

Rev. 1 11/75

DIGITAL THERMOMETER

2100A

MODEL

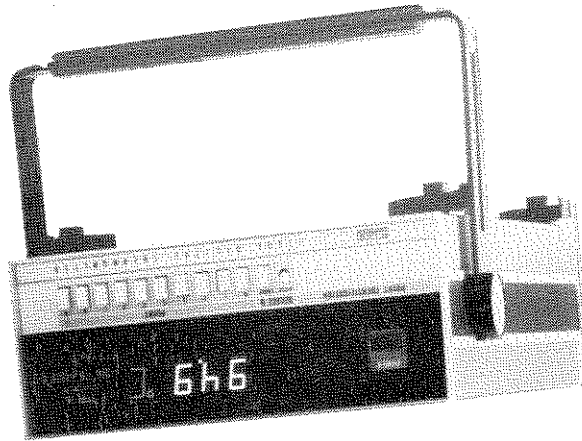

Mountlake Terrace, Washington 98043

P. O. Box 43210

JOHN FLUKE MFG. CO., INC.

WARRANTY

The JOHN FLUKE MFG. CO., INC.* warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof, except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operations, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken:

1. Notify the John Fluke Mfg. Co., Inc.,* giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.
2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate will be made before the work begins, provided the instrument is not covered by the Warranty.

"The foregoing warranty is in lieu of all other warranties, express or implied, including but not limited to, any implied warranty of merchantability, fitness or adequacy for any particular purpose or use. Fluke shall not be liable for any special, incident or consequential damages."

SHIPPING

All shipments of John Fluke Mfg. Co., Inc.* instruments should be made via United Parcel Service or "Best Way"*** prepaid. The instrument should be shipped in the original packing carton, or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc.* Upon receipt of this report, you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc.* will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to: JOHN FLUKE MFG. CO., INC., P.O. Box 43210, MOUNTLAKE TERRACE, WASHINGTON 98043*.

* For European customers: FLUKE (Nederland) B.V.,
Ledboerstraat 27
Tilburg, Netherlands

** For European customers, Air Freight prepaid.

CHANGE/ERRATA INFORMATION

TITLE: 2100A DIGITAL THERMOMETER
 ISSUE: JULY 1975 REV 1 11/75

Please make changes in this manual according to the following change and/or errata information:

ERRATA

1. Make the following corrections:

Page 6-10 On table 6-3 change the code L M and N table at the bottom center to the following:

CODE	
L	M N
1 0 0	
1 0 1	
1 1 0	

CHANGES

1. Basic Unit Assembly

Make the following changes/additions:

Page 5-4 Ref Desig 2: change the present listing to the following:

2: chassis, guard; 416180, 89536; 416180, 1

Ref Desig 10: change the present listing to the following:

10: frame, bezel; 420455, 89536; 420455, 2

2. Basic PCB Assembly (A1)

Rev R

Make the following changes/additions:

Page 5-8 Ref Desig C18: change the present listing to the following:

C18: Cap. poly carb, 0.10 μ F \pm 10%, 400V, 448373; 73445; C280 MCF/A100K; 1

Page 5-9

Ref Desig CR1: Delete the present listing


Ref Desig CR2 thru CR7, CR11, CR12, C14, CR18: Add ref desig CR1 and CR21 and change the quantity column to 12

Make the following alterations to the reference designator drawings:

Page 5-14 Add CR21 to the drawing next to U27 and above CR1. The cathode of CR21 should be away from CR1.

Make the following change to the schematic

Page 8-5 Change the output of U27 as shown below.

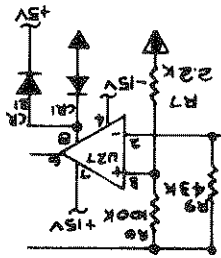

3. Display PCB Assembly (A2)

Rev C

Make the following changes/additions:
 Page 5-15 Ref Desig R6: change the entry in the Ref Desig column to R10, all other columns remain unchanged.

Add the following new listings:
 R6, R7: Res, comp, 200K +5%, 1/4W; 248781; 01121; CB2045; 2
 R8, R9: Res, comp, 2.2M +5%, 1/4W; 198390; 01121; CB2255; 2

Page 8-11 Label the unmarked 10K resistor connecting the base Q15 and emitter Q18 to ground R10

Rev. D

Make the following changes/additions:

Page 5-15 Add the following new listing:

: Decal, display mask; 414367; 89536; 414367; 1

4. Power Supply PCB Assembly (A4)

Rev. D

Make the following changes/additions:

Page 5-17 Ref Desig C4: Delete the present listing

Ref Desig CR2: Add ref desig CR12 and CR13 and change the quantity column to 3

Page 5-18 Ref Desig R5, R6: change the present listing to the following:

R5: Res, comp, 910 +5%, 1/4W; 203851; 01121; CB9115; 1

Add the following new listing:

R8: Res, comp, 15 +5%, 1/4W; 147876; 01121; CB1505; 1

Page 8-7 Change the 910Ω resistor from R6 to R5.

Rev F

Make the following changes/additions:

Page 5-18 Ref Desig U1: change the present listing to the following:

U1: IC, Linear, Neg V Reg; 419044; 49956; RC4195T; 1; 1

: Heatsink; 380220; 13103; 1115B; 1

Substitutes a TO-99 version of the RC4195 for the 8 pin DIP version and add a heat sink.

Applicable only to those pcbs stamped Rev F.

Rev C

Make the following changes/additions:


Page 5-18 Ref Desig U1: change the present listing to the following:

U1: IC, Linear, neg V. Reg; 413187; 04713; MC7815CP; 1; 1


Add the following new listing:

U2, IC, Linear, neg V Reg; 413179; 04713; MC7915CP; 1; 1

Replace U1 in the center of the drawing with the following:



Page 8-7 Replace U1 in Figure 8-1 sheet 3 with the following drawing of U1 and U2.

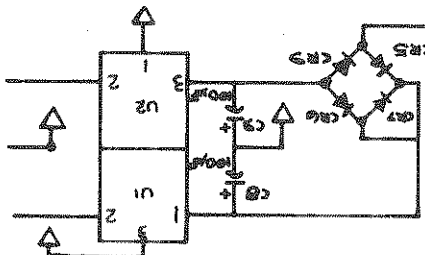

5. Type Select PCB Assembly ° C (A5)

Rev J

Make the following changes/additions:

Page 5-26 Ref Desig A5: Delete the Fluke Stock No. Federal Supply Code and manufacturers part

number. Order the complete pcb by option number.

6. Type Select PCB Assembly ° F (A5)

Rev L

Make the following changes/additions:

Page 5-30 Ref Desig A5: delete the Fluke Stock No. Federal Supply Code and manufacturers part

number. Order the complete pcb by option number.

7. Point Select PCB Assembly (A6)

The Point Select PCB Assy (373811) was replaced by the multipoint PCB Assy (404613). The change is in the layout and the schematic is not changed. For those units with the multipoint assy the reference designator drawing can be made current by the following changes

Page 5-35 Ref Desig DSI: change the present listing to the following:

DSI: Diode, light emitting; 428623; 12040; 59NSL-5046; 1; 1

Ref Desig R2, R3, CR5: change the present listing to the following:

R2, R3, Q1: Ref, Junction Set; 400127; 89536; 400127; 1

Page 5-36 Move the diodes CR1, CR2, CR3 and CR4 to a vertical position on the upper right corner

of the pcb, deleting the jumper markings presently in that location. CR1 is to the edge of the pcb, increasing to CR4 on the left.

Rotate R1 and U1 90° so they are in a horizontal rather than vertical position

Move R2 approximately two inches toward the iso-thermal sink

8. Digital Output Unit PCB Assembly (A8)

Rev H

Make the following changes/additions:

Page 5-40 Ref Desig U9, U17, U20, U27 thru U32: change the present listing to the following:

U9, U17, U20, U27 thru U32: IC, C-MOS, hex buffer/inverter, 381848; 02735; CD4049AE; 9; 2

9. Analog Output Unit

Rev J

Make the following changes/additions:

Page 5-44 Add the following new listings:

C11, C12: Cap, cer. 0.22 μ F +20%, 50V; 309849; 71590; CW30C224K; 2

C13, Cap, cer. 25000 pF +20%, 100V; 168435; 56289; C023B101E502M; 1

Ref. Desig R5: Add the ref desig R33 and increase the quantity column to 2

Page 5-45 Ref Desig R21, R22: change the present listing to the following:

R21, R22: Res, mtl film, 51.1K \pm 1%, 1/8W, 289553; 91637; MFF1-85112F; 2

Ref Desig R24: change the present listing to the following:

R24: Res, var, cer 500 +20%, 1/2W; 291120; 89536; 291120; 1; 1

Ref Desig R25: change the present listing to the following:

R25: Res, mtl film 324 \pm 1%, 1/8W; 289181; 91637; MFF1-83240F; 1


Add the following new listings:

R30, R31: Res, dep, car, 100 \pm 5%, 1/4W; 348771; 80031; CR251-4-SP101E; 2


R32: mtl film, 100 \pm 1%, 1/8W; 168195; 91637; MFF1-81000F; 1

Make the following alterations to the reference designer drawing:
 Page 5-43 Add C13 to the right of and parallel to, R28.
 Add C11 (top) and R32 (bottom) between U6 and U8.
 Add C12 (top) and R31 (bottom) between U8, and U7.
 Add R30 parallel to the lower edge of C7.

Make the following alterations to the schematic drawing
 Page 8-23 Add the previously unused half of U7 to the input of U3 as shown below:

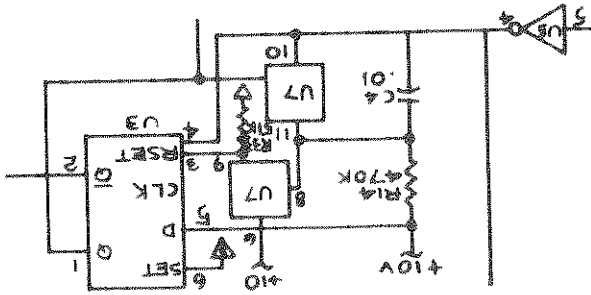

Change the outputs of U8 to reflect the following:

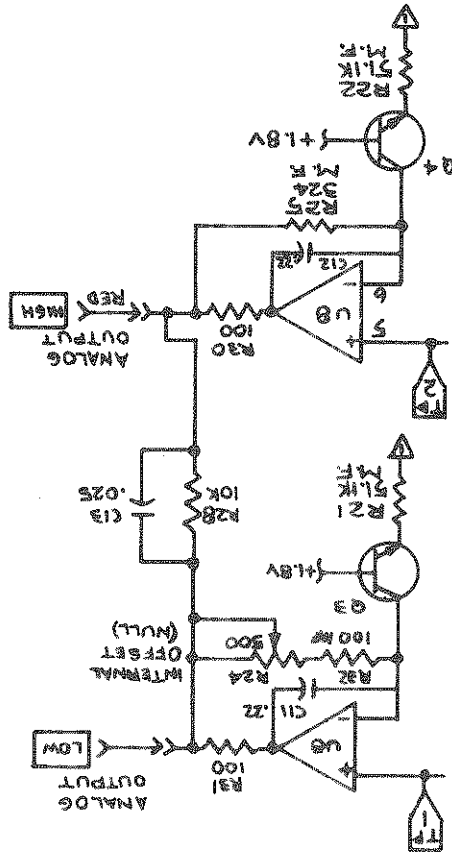

Page No.	Print Date
1	11/77
2	11/77
3	11/77
4	11/77
5	11/77

C/E PAGE EFFECTIVITY

MANUAL
Title: MODEL 2100A DIGITAL THERMOMETER
Print Date: JULY 1975
Rev and Date: 1 - 11/75

This change/errata contains information necessary to ensure the accuracy of the following manual. Enter the corrections in the manual in the order given.

Change/Errata Information
Issue No: 1
11/77

On pages 5-26 and 5-30, delete the Fluke stock no., mfg fed sply code, and mfg part no. for the A5 Type Select PCB Assembly.

CHANGE #2-8541

To:/Inverter, 381848, 02735, CD4049AE
From:/Conv, 355214, 04713, MC14009CP.

On page 5-40, change the description, Fluke stock no., mfg fed sply code and mfg part no. for U9, U17, U20, U27, thru U32

CHANGE #1-8259

On page 8-7, add reference designator R10 to the Q18 emitter resistor (10K).

Add reference designators CR12 and CR13 to CR1, and change the tot qty from 1 to 3.

Delete the entire C4 entry.

On page 5-17, make the following changes:

Add:
R6, R7, Res, comp, 200K ± 5%, 1/4W, 248781, 01121, CB2045; 2
R8, R9; Res, comp, 2.2M ± 5%, 1/4W, 198390, 01121, CB2255; 2
Decal, display mask; 414367; 89536; 414367; 1

Ref desig from R6 to R10.

On page 5-15, make the following changes/additions:

On page 5-11, change to tolerance of R32 and R33 from ± 1% to ± 0.1%.

Item 10 - from 363093 to 420455

Item 2 - from 372276 to 416180

On page 5-4, change the Fluke stock no. and mfg part no. for items 2 and 10 as follows:

ERRATA #3


On page 5-4, change the entry for item 1 (Cable Assembly, power) to read:
1: Cord, power; 343723; 89536; 343723

ERRATA #2

CODE	LMN	100
CODE	LMN	100
CODE	LMN	101
CODE	LMN	110

On page 6-10, Table 6-3, change the code LMN table (bottom center) from:

ERRATA #1

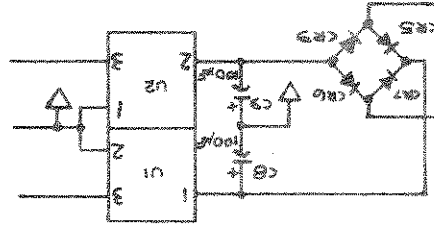

On page 8-5, alter schematic to include U1 and U2 as follows:

U1

U2

On Figure 5-4, replace U1 with U1 and U2 as follows:

U2: IC, linear voltage regulator; 413179; 04713; MC7915CP; 1

Add the following new entry:

U1 Fluke stock no., mfg fed sply code, and mfg part no.
 From: 363861, 49956, RC4195DN
 To: 413187, 04713, MC7815CP

On page 5-18, make the following changes:

CHANGE #4-8871

R2, R3, CR5 to R2, R3, Q1 and tot qty from 3 to 1.

DS1 Fluke stock no., mfg fed sply code, and mfg part no.
 From: 309617, 07263, FLV102
 To: 428623, 12040, 59NSL-5046

On page 5-35, make the following changes:
 A6 Fluke stock no. and mfg part no. from 373811 to 405613.

CHANGE #3-8593

Res, mf, 51.1K ± 1%, 1/8W; 289553; 91637; MFF1-85112F; 2

Res, mf, 5.1K ± 1%, 1/8W; 294868; 91637; MFF1-85111F; 1

Change R21, R22 from:

On page 5-45, make the following changes/additions:

Add R33 to R5 and change the tot qty from 1 to 2.

C13; Cap, cer, 25000 pF ± 20%, 100V; 168435; 56289; CO23B101E502M; 1
 C11, C12; Cap, cer, 0.22 uF ± 20%, 50V; 309849; 71590; CW30C224K; 2

On page 5-44, add the following new listings:

Add R30 parallel to the lower edge of C7.



Add C12 (top) and R31 (bottom) between U8 and U7.

Add C11 (top) and R32 (bottom) between U6 and U8.

Add C13 to the right of, and parallel to, R28.

On page 5-43, make the following alterations to the reference designer drawing:

CHANGE #6-10194

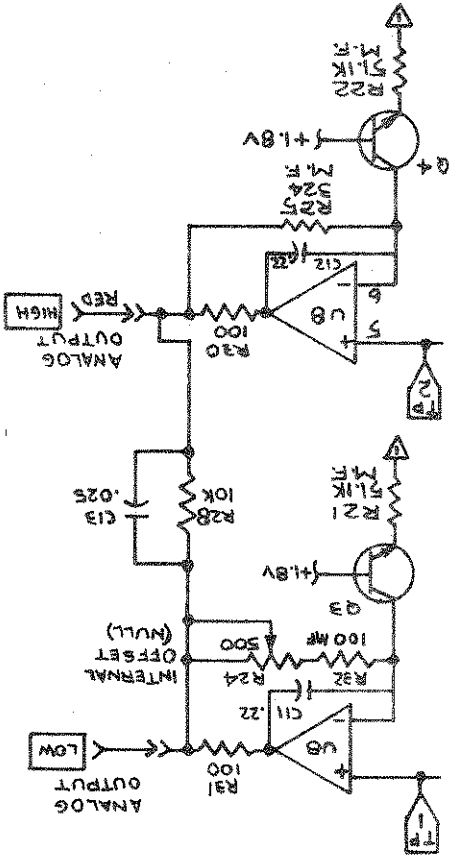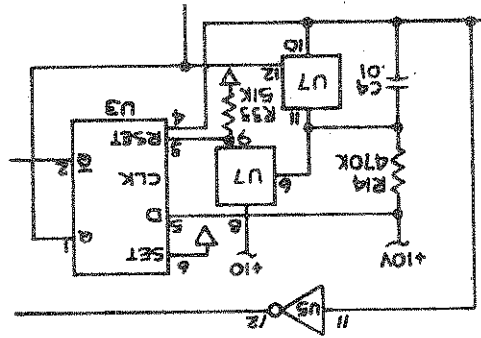

On page 8-13, Figure 8-7, add the previously unused portion of U7 to the input of U3 as shown below. Also change the output circuitry (U8) to agree with the following:

CHANGE #5-10170

On page 6-7, Figure 6-6, change the value of R2 from 1.652 to 2 Ω.

Res, comp, 2 ±5%, 1/2W; 218735; 01121; EB20G5; 1

to:

Res, comp, 1.6 ± 5%, 1/2W; 218727; 01121; EB16G5; 1

On page 5-38, change the entry for R1 from:

CHANGE #9-10725

On page 8-12, change the value of C4 from 10 uF, 20V to 68 uF.


C4: Cap, Ta, 68 uF ± 20%, 8V; 160242; 05397; T330C686-006AS; 1

Add the following new entry:

Delete C3 from the C3, C4 entry and change the tot qty from 2 to 1.

On page 5-39, make the following changes/additions:

CHANGE #8-10714

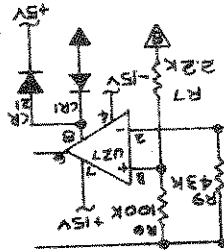

On page 8-4, change the schematic to include CR1 and CR2 as shown below:

On page 5-14, Figure 5-2, add diode CR21 next to U27 and in tandem with CR1. Align cathode end away from CR1.

Add reference designators CR1 and CR21 to ref design group CR2 thru CR18, and change the tot qty from 10 to 12.

Delete the entire entry for zener diode CR1.

On page 5-9, make the following changes:

CHANGE #7-10328

(Change mfg part no. for R26 from MFF1-844020F to MFF1-83240.

Res, mfg, 324 ± 1%, 1/8W; 289181; 91637; MFF1-83240F; 1

to:

Res, mfg, 22.1 ±1%, 1/8W; 261081; 91637; MFF1-822R1F; 1

Change R25 from:

Res, var, cer, 500 ± 20%, 1/2W; 291120; 89536; 291120; 1

to:

Pot, cermet, 50 ± 10%, 1/2W; 285122; 71450; 3605-500A; 1

Change R24 from:

On page 8-3, add a zener diode (CR22) between UI-10 and the -15V supply (Cathode to UI-10).

On page 5-12, change the Fluke stock no. and mfg part no. for UI from 354985 to 407734.

On page 5-9, add the following new entry:
CR22; Diode, zener, 7.5V; 256446; 04713; IN755A; I

CHANGE #11-10779

448373, 73445, C280MCF/A100K

to:

289744, 25403, C280CF/A10K

On page 5-8, change the Fluke stock no., mfg fed sply code, and mfg part no. for C18 from:

CHANGE #10-10470

Table of Contents

(continued on page ii)

SECTION	TITLE	PAGE
1	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1 INTRODUCTION	1-1
	1-14 SPECIFICATIONS	1-3
2	OPERATING INSTRUCTIONS	2-1
	2-1 INTRODUCTION	2-1
	2-3 SHIPPING INFORMATION	2-1
	2-6 INPUT POWER	2-1
	2-9 RACK/PANEL INSTALLATION	2-1
	2-11 OPERATING FEATURES	2-1
	2-13 OPERATING NOTES	2-5
	2-15 AC Line Connection	2-5
	2-17 Fuse Replacement	2-5
	2-19 Open Inputs	2-5
	2-21 OPERATION	2-5
	2-22 Models 2100A-03 and 2100A-10	2-5
	2-24 Model 2100A-06	2-6
	2-26 Model 2100A/Model 2150A Set	2-6
3	THEORY OF OPERATION	3-1
	3-1 INTRODUCTION	3-1
	3-3 OVERALL FUNCTIONAL DESCRIPTION	3-1
	3-5 Thermocouple	3-2
	3-8 Cold Junction Compensation	3-2
	3-10 Buffer Amplifier	3-2
	3-12 A/D Converter	3-2
	3-16 Linearizer	3-3
	3-19 Display	3-3
	3-21 CIRCUIT ANALYSIS	3-3
	3-22 Reference Junction Compensation	3-3
	3-25 Buffer Amplifier	3-4
	3-29 A/D Converter	3-5
	3-33 Linearizer	3-6
	3-48 Summary of Linearizer Operation	3-7

SECTION	TITLE	PAGE
4	MAINTENANCE	4-1
	INTRODUCTION	4-1
	GENERAL MAINTENANCE	4-1
	Cleaning	4-7
	Fuse Replacement	4-9
	Service Tools	4-11
	OPERATIONAL EVALUATION	4-13
	CALIBRATION	4-16
	Power Supply Adjustments	4-18
	Zero Adjustment	4-20
	Equipment Preparation for Calibration	4-22
	Comparator Adjustment (COMP ADJ)	4-25
	Positive Full Scale Adjustment (POS CAL)	4-27
	Negative Full Scale Adjustment (NEG CAL)	4-29
5	LISTS OF REPLACEABLE PARTS	5-1
	INTRODUCTION	5-2
	HOW TO OBTAIN PARTS	5-2
	OPTIONS AND ACCESSORY INFORMATION	6-1
	INTRODUCTION	6-1
	CARRYING CASE (C81)	6-1
	FRONT PANEL COVER (M03-203-700)	6-1
	INSTRUMENT MOUNTING KITS	6-1
	Introduction	6-8
	Installation Procedures	6-10
	THERMOCOUPLE PROBES	6-16
	THERMOCOUPLE TYPE CONVERSION KIT (2100A--K)	6-19
	Introduction	6-20
	Installation	6-22
Fahrenheit to Celsius Conversion Kit (F2CK)	6-24	
Introduction	6-25	
Installation	6-27	
MULTI-POINT SELECTOR SWITCH (2100A-10K)	6-29	
Introduction	6-30	
Installation	6-32	
OPTION -01 BATTERY PACK	6-34	
Introduction	6-35	
Option -01 Operation	6-37	
Option -01 Theory of Operation	6-43	
Option -01 Installation	6-45	
Option -01 Battery Replacement	6-47	

(continued on page iii)

PAGE	TITLE	SECTION
6-8	OPTION -02 DIGITAL OUTPUT UNIT	6-49.
6-8	Introduction	6-50.
6-8	Option -02 Specifications	6-52.
6-8	Option -02 Operation	6-54.
6-9	Option -02 Theory of Operation	6-59.
6-11	Option -02 Installation	6-68.
6-12	ANALOG OUTPUT UNIT, OPTION -04	6-70.
6-12	Introduction	6-71.
6-12	Specification	6-75.
6-12	Installation	6-77.
6-13	OPERATION	6-79.
6-13	Theory of Operation	6-81.
6-15	Calibration	6-87.
6-17	2150A MULTIPPOINT SELECTOR SWITCH	6-89.
6-17	Introduction	6-90.
6-17	Connection for Operation	6-92.
6-19	Operational Evaluation	6-97.
6-19	Calibration	6-99.
7-1	GENERAL INFORMATION	7
8-1	SCHEMATIC DIAGRAMS	8

List of Illustrations

FIGURE	TITLE	PAGE
1-1.	Overall Dimensions	1-5
2-1.	Front Panel Controls and Indicators (Sheet 1 of 2)	2-2
2-1.	Front Panel Controls and Indicators (Sheet 2 of 2)	2-3
2-2.	Rear Panel Connectors	2-4
2-3.	Line Fuse Location	2-5
3-1.	2100A Block Diagram	3-1
3-2.	Thermocouple Connection	3-2
3-3.	Temperature/Millivolt For Thermocouples	3-3
3-4.	Dual-Slope A/D Conversion	3-3
3-5.	Reference Junction Compensation Circuit	3-4
3-6.	Buffer Amplifier Circuit	3-4
3-7.	A/D Converter Circuit Diagram	3-5
3-8.	Linearizer Timing Example	3-7
4-1.	Test Equipment Connection For Power Supply Adjustment	4-3
4-2.	Linearizer and Reference Junction Jumper Locations	4-4
4-3.	Calibration Equipment Connection	4-4
4-4.	Test Equipment Connection For Reference Junction Adjustment	4-8
4-5.	Troubleshooting Waveforms	4-11
5-1.	Basic Unit Assembly	5-6
5-2.	Basic PCB Assembly	5-14
5-3.	Display PCB Assembly	5-16
5-4.	Power Supply PCB Assembly	5-18
5-5.	Single Input Configuration	5-23

(continued on page v)

LIST OF ILLUSTRATIONS, continued

FIGURE	TITLE	PAGE
5-6.	Single Type PCB Assembly	5-23
5-7.	Multi-Type Configuration	5-25
5-8.	Type Select PCB Assembly °C	5-29
5-9.	Type Select PCB Assembly °F	5-33
5-10.	Multi-Point Configuration	5-34
5-11.	Point Select PCB Assembly	5-36
5-12.	Battery Power Supply	5-37
5-13.	Battery Charge PCB Assembly	5-38
5-14.	Digital Output Unit PCB Assembly	5-41
5-15.	Analog Output Unit PCB Assembly	5-43
5-16.	Analog Output Unit Rear Panel Assembly	5-48
6-1.	C81, Carrying Case	6-1
6-2.	Side-By-Side Rack Mounting	6-2
6-3.	Offset Rack Mounting	6-3
6-4.	Panel Mounting	6-3
6-5.	2100A -- K and F2CK Location	6-5
6-6.	Battery Charging Circuit	6-7
6-7.	Battery Pack Installation	6-7
6-8.	DOU Timing Signals	6-9
6-9.	DOU Installation Illustration	6-11
6-10.	AOU Installation Detail	6-12
6-11.	AOU Functional Block Diagram	6-14
6-12.	AOU Timing Diagram	6-15
6-13.	Thermocouple Connections and Calibration Adjustment Locations	6-17
6-14.	2150A-2100A Interconnection	6-18

List of Tables

TABLE	TITLE	PAGE
1-1.	Thermocouple Ranges	1-2
1-2.	Basic Model Summary	1-2
1-3.	Options and Conversion Kits	1-2
2-1.	Front Panel Controls and Indicators	2-3
2-2.	Rear Panel Connectors	2-4
4-1.	Recommended Test Equipment	4-1
4-2.	Comparator Calibration	4-5
4-3.	Positive Full Scale Inputs	4-6
4-4.	Negative Full Scale Inputs	4-6
4-5.	Linearized Gain Check	4-7
4-6.	Reference Junction Adjustment Limits	4-9
4-7.	Reference Junction Adjustment Corrections	4-9
4-8.	Troubleshooting Guide	4-10
6-1.	Mounting Kits	6-1
6-2.	DOU Input/Output Data	6-8
6-3.	DOU Input Data	6-10
6-4.	A.O.U. Full-Scale Calibration (R15)	6-16
6-5.	Offset Voltage Range Limits	6-16

Introduction & Specifications

Section 1

1-1. INTRODUCTION

1-2. The Fluke Model 2100A is a digital, thermocouple thermometer, employing the dual-slope integration technique, and capable of making precise temperature measurements in either degrees Fahrenheit (°F) or degrees Celsius (°C). The instrument is fully guarded and features a fully isolated input.

1-3. The 2100A has a five-digit readout (plus sign) capable of indicating up to ± 3999.9 degrees. However, the range of the instrument is determined by the type of thermocouple used. The instrument can be ordered, configured to use any of the following types: J, K, T, E, R and S. Table 1-1 shows the temperature ranges for each of these types. Resolution of the instrument is 0.1 degree, except in instruments using a type R or a type S thermocouple and indicating in °F, when resolution is 0.2 degrees. The readout features 0.5 inch characters, fixed decimal point, and leading-zero suppression for the two most significant digits.

1-4. The 2100A is available in three basic models: the 2100A-03, the 2100A-06, and the 2100A-10. The

2100A-03 is a single-point instrument (one input); the 2100A-10 is a multi-point instrument (10 inputs). Both of these models are tailored at the factory to use only one specific type of thermocouple. Once tailored, the 2100A-03 and 2100A-10 are limited to that one type, but can be converted to any one of the other five at any time, by means of a conversion kit.

1-5. The 2100A-06 is a multi-type instrument. It is tailored to accept inputs from any of the six different types of thermocouple, but only one type at any given time. (The 2100A-06 is not a multi-point instrument). In effect, the 2100A-06 is a 2100A-03 that can be rapidly converted to accept different thermocouples, by means of integral selector switches, rather than conversion kits. For valid indications from a 2100A-06, the selector switch depressed must correspond to the type of thermocouple being used. In addition, the 2100A-06 can accept linearized voltage inputs on either of two selectable mV ranges directly from other transducers, such as bridge-connected strain gauges.

Table 1-2 is a summary of the differences between the three basic models of the 2100A.

Table 1-1. THERMOCOUPLE RANGES

TYPE OF THERMOCOUPLE	RANGE
J Iron/Constantan (Fe/Cu Ni)	-320° F to +1400° F -200° C to + 760° C
K Chromel/Alumel (Ni Cr/Ni Al)	-320° F to +2400° F -200° C to +1370° C
T Copper/Constantan (Cu/Cu Ni)	-320° F to + 750° F -200° C to + 400° C
E Chromel/Constantan (Ni Cr/Cu Ni)	-320° F to +1830° F -200° C to + 960° C
R Platinum-13% Rhodium/ Platinum (Pt 13% Rh/Pt)	0° F to +3200° F 0° C to +1760° C
S Platinum-10% Rhodium/ Platinum (Pt 10% Rh/Pt)	0° F to +3200° F 0° C to +1760° C

Table 1-2. BASIC MODEL SUMMARY

MODEL	DESCRIPTION
2100A-03	Single-Type, Single-Point
2100A-06	Multi-Type, Single-Point
2100A-10	Single-Type, Multi-Point

1-6. Each of the three 2100A models can have their inputs expanded by means of a companion instrument, the Model 2150A. This instrument is also available in three basic models: the 2150A-10, the 2150A-20, and the 2150A-30. These three models expand the thermocouple inputs of the 2100A-03 and 2100A-06 to 10, 20, and 30 points, respectively. In the case of the 2100A-10, the expanded number of points is added to the 10 existing points.

1-7. All three models of the 2100A can be set up to indicate on either the Fahrenheit or the Celsius scale, but not both. The scale employed in any given instrument is determined by a plug-in, stored-program read-only memory (ROM). A different ROM is used for each temperature scale. An instrument can be converted in the field from °F to °C by replacing the °F-ROM with the °C-ROM changing the thermocouple type board for a °C type, and recalibrating the instrument.

1-8. There are three options and a number of conversion kits and accessories available to any of the three basic models. The options and conversion kits are listed in Table 1-3.

1-9. A Rechargeable Battery Pack (Option -01) permits operation of the 2100A at remote locations where ac

Table 1-3. OPTIONS AND CONVERSION KITS

NO. (2100A-)	NAME
01	Rechargeable Battery Pack
02	Data Output Unit (DOU)
04	Analog Output Unit (AOU)
-K**	Conversion Kit, New Thermocouple
F2CK	Conversion Kit, °F to °C
10K*	Conversion Kit, Multi-Point
*	The letter K denotes kit.
**	Specify new type and desired scale (e.g., 2100A-ECK)
t	Converts 2100A-03 into 2100A-10.

line power is not available. An instrument equipped with a battery pack is still operable from ac line power. During ac line operation, the battery is recharged.

1-10. A Digital Output Unit (Option -02) permits the instrument to interface with digital instrumentation (printer, tape punch, computer, etc.). The Digital Output Unit (DOU) has an isolated parallel, 8-4-2-1 weighted, bcd output. The DOU can be updated by an external signal, or be enabled to be continuously updated at the 2100A cycle rate. (Due to internal space limitations, the -01, 02 and 04 options are mutually exclusive.)

1-11. An Analog Output Unit (Option -04) provides an output voltage representative of the temperature displayed on the front panel. The output of the Analog Output Unit (AOU) is equal to one millivolt for each degree of temperature with a one-half degree temperature recognition factor (0.5mV per degree on R and S Fahrenheit scales). This option, when coupled with a strip-chart recorder, provides a graphic illustration of temperature changes occurring over an extended period of time.

1-12. Two of the conversion kits facilitate field conversion to a new type of thermocouple or from the Fahrenheit scale to the Celsius scale. The third kit facilitates field conversion of a 2100A-03 to a 2100A-10.

1-13. The 2100A can be a bench-top instrument or can be rack-mounted or panel-mounted. Two different rack-mounting kits and a panel-mounting kit are among the accessories available. Power input requirements are 100, 115 or 230V ac ±10% at 50 to 440 Hz, or 11.5 to 17.5V dc. Each individual 2100A operates from only one type of ac source. The voltage and frequency of the required ac source is stamped on a decal attached to the instrument.

2100A-03 Digital Thermometer for one type of thermocouple

1-14. SPECIFICATIONS

2100A	<p>Common Mode Rejection: 160 dB at 50/60 Hz $\pm 0.1\%$ with 100 Ω in either lead. A common mode voltage of 250V will cause an error of less than 0.1°C using a K couple.</p>	<p>Common Mode Voltage: Maximum of 250V dc or ac rms.</p>	<p>Normal Mode Rejection: 90 dB at 50/60 Hz $\pm 0.1\%$ A normal mode 50/60 Hz voltage of 100 mV will cause an error of < 0.1°C using a type K couple.</p>	<p>Accuracy: See Table 1-4 blanked digits.</p>	<p>Size: 3 3/4" high x 8 7/8" wide x 12" deep (8.89 cm x 21.59 cm x 30.5 cm).</p>	<p>Weight: 8 pounds (3.63kg)</p>	<p>Power: nominal range 115V ac 95-128Vac 100V ac 83-111Vac 230V ac 180-256Vac optional optional line voltage standard optional optional External Battery 11.5Vdc to 17.5Vdc - 400 mA drain</p>	<p>Operating Temperature: 0 to +50°C (+32 to +122°F)</p> <p>Storage Temperature: -40 to +75°C (-40 to +167°F) Line operated -40 to +60°C (-40 to +140°F) Battery operated</p>	<p>Humidity: 80% non-condensing over operating temperature range. 90% up to 35°C (95°F) Meets requirements of MIL-T-21200L and MIL-E-16400F</p>	<p>Shock & Vibrations:</p>	<p>1-3</p>
	<p>Types of Thermocouple: J, K, E, T, R, S</p>	<p>Input Circuit: Two wire with guard, isolated</p>	<p>Input Connections: Three screw terminals on isothermal block at rear</p>	<p>Measurement Method: Dual slope integration over 100 ms period with automatic zero</p>	<p>Response Time to Rated Accuracy: < 1.0 second</p>	<p>Reading Rate: 2.5 readings per second fixed</p>	<p>Type of Display: 5 digit 0.55 inch gas discharge</p>	<p>Linearization: Digital with six programs stored in ROM</p>	<p>Number of Segments: 64 segments in each program</p>	<p>Reference Junction Compensation: J, K, T, E 0.01% per ° over ambient range of 20°C to 30°C (+68°F to 86°F) 0.02°C per ° from 0°C to 20°C and 30°C to 50°C (32°F to 68°F and 86°F to 122°F)</p>	<p>11/75</p>
	<p>Temperature Coefficient: $\pm 15 \text{ ppm } \pm 0.1 \text{ uV}/^\circ\text{C}$</p>	<p>Input Impedance: 1000 MΩ</p>	<p>Input Current: < 200 pA</p>	<p>Maximum Source Impedance: 1.5 kΩ source impedance causes less than 0.1°C error</p>	<p>Overload: Continuous 250V dc or ac rms across input will not cause damage</p>	<p>Shock & Vibrations:</p>	<p>Humidity:</p>	<p>Operating Temperature:</p>	<p>Storage Temperature:</p>	<p>Humidity:</p>	<p>11/75</p>

2100A-01 - Rechargeable Battery Pack

Type of Cell: Rechargeable Ni Cad, "HALF D"

Configuration: Self-contained within the instrument

Number: 9 cells providing 11 volts

Operating Time: Typically, 7 hours continuous operation

Charge-Discharge Cycles: Minimum of 1000

Additional Weight: 2 pounds (0,91Kg)

2100A-02 - Digital Output Unit

Type of Output: Fully isolated, buffered, parallel bcd.

Available Data: 18 bits data, 8 bits of channel identity, polarity, open circuit, function.

Data Coding: 1-2-4-8 bcd positive true parallel.

Logic Levels: "1" = +4V, "0" = +0.4V

Drive Capability: All outputs can drive one standard TTL load (i.e., sink 2.1 mA).

Control Inputs: EXTERNAL TRIGGER. (Negative going edge trigger.) This allows external control of DOU update. EXTERNAL TRIGGER ENABLE.

Flags: Busy, not busy

Cell Type	Temperature Range	Resolution	Repeatability & Stability	Applicable Temperature Range	24 Hrs, 23°C to 27°C or 72°F to 82°F	90 Days, 20°C to 30°C, or 68°F to 86°F	1 Year, 15°C to 35°C or 59°F to 95°F	NBS Conformity
J Iron/Constantan	-200°C to +760°C	0.1°C	-200°C to +150°C	-150°C to +760°C	±0.45°C	±0.55°C	±0.7°C	±0.3°C
K Nickel Chromium/Aluminum	-200°C to +1370°C	0.1°C	-200°C to +150°C	-150°C to +1370°C	±0.45°C	±0.6°C	±0.7°C	±0.3°C
E Nickel Chromium/Constantan	-200°C to +960°C	0.1°C	-200°C to +150°C	-150°C to 0°C	±0.5°C	±0.65°C	±0.75°C	±0.35°C
T Copper/Constantan	-200°C to +400°C	0.1°C	-200°C to +150°C	-150°C to +60°C	±0.4°C	±0.45°C	±0.55°C	±0.25°C
R Platinum 13%	0°C to +1760°C	0.1°C	0°C to +80°C	0°C to +600°C	±0.75°C	±0.95°C	±1.3°C	±0.45°C
S Platinum 10%	0°C to +1760°C	0.1°C	0°C to +80°C	0°C to +600°C	±0.65°C	±0.85°C	±1.2°C	±0.35°C

Cell Type	Temperature Range	Resolution	Repeatability & Stability	Applicable Temperature Range	24 Hrs, 23°C to 27°C or 72°F to 82°F	90 Days, 20°C to 30°C, or 68°F to 86°F	1 Year, 15°C to 35°C or 59°F to 95°F	NBS Conformity
J Iron/Constantan	-320°F to +1400°F	0.1°F	-320°F to +190°F	+190°F to +1400°F	±0.4°F	±0.6°F	±0.8°F	±0.2°F
K Nickel Chromium/Aluminum	-320°F to +2400°F	0.1°F	-320°F to 0°F	0°F to +1500°F	±0.45°F	±0.55°F	±0.75°F	±0.25°F
E Nickel Chromium/Constantan	-320°F to +1830°F	0.1°F	-320°F to +600°F	+600°F to +1830°F	±0.45°F	±0.6°F	±0.8°F	±0.15°F
T Copper/Constantan	-320°F to +750°F	0.1°F	-320°F to 0°F	0°F to +750°F	±0.35°F	±0.55°F	±0.75°F	±0.2°F
R Platinum 13%	0°F to +3200°F	0.2°F	0°F to +100°F	0°F to +1800°F	±1.2°F	±1.5°F	±2.0°F	±0.7°F
S Platinum 10%	0°F to +3200°F	0.2°F	0°F to +130°F	+130°F to +3200°F	±1.0°F	±1.3°F	±1.9°F	±0.4°F

DEGREES CENTIGRADE								
Cell Type	Temperature Range	Resolution	Repeatability & Stability	Applicable Temperature Range	24 Hrs, 23°C to 27°C or 72°F to 82°F	90 Days, 20°C to 30°C, or 68°F to 86°F	1 Year, 15°C to 35°C or 59°F to 95°F	NBS Conformity
J Iron/Constantan	-200°C to +760°C	0.1°C	-200°C to +150°C	-150°C to +760°C	±0.45°C	±0.55°C	±0.7°C	±0.3°C
K Nickel Chromium/Aluminum	-200°C to +1370°C	0.1°C	-200°C to +150°C	-150°C to +1370°C	±0.45°C	±0.6°C	±0.7°C	±0.3°C
E Nickel Chromium/Constantan	-200°C to +960°C	0.1°C	-200°C to +150°C	-150°C to 0°C	±0.5°C	±0.65°C	±0.75°C	±0.35°C
T Copper/Constantan	-200°C to +400°C	0.1°C	-200°C to +150°C	-150°C to +60°C	±0.4°C	±0.45°C	±0.55°C	±0.25°C
R Platinum 13%	0°C to +1760°C	0.1°C	0°C to +80°C	0°C to +600°C	±0.75°C	±0.95°C	±1.3°C	±0.45°C
S Platinum 10%	0°C to +1760°C	0.1°C	0°C to +80°C	0°C to +600°C	±0.65°C	±0.85°C	±1.2°C	±0.35°C

Table 1-4. OVERALL ACCURACY (Including reference junction and conformity but not including thermocouple).

Adjustable to any value within a selected range
 1° to 1000
 1000 to 2000
 2000 to 3000
 3000 to 4000

Variable Offset: 4 ranges, switch selectable

Accuracy: 0.5% of reading ± 2 mV
 90 days, 20 to 30°C

Output Resolution: 0.4°F or °C

Output Noise: 500 uV p-p worst case

Output Current Drive: Up to 10 mA

Output Sensitivity: 1.0 mV/°F or °C, Thermocouple Type J, K, E, T, R and S, 0.5 mV/°F, Thermocouple Type R and S, 1.0 mV/°C, Thermocouple type R and S.

Output: Linearized, isolated analog output.

2100-04 - Analog Output Unit

Offset Temperature 200 uV/°C

Coefficient:

Isolation: Fully isolated to 250V dc or rms ac.


2100A-06 - Digital Thermometer for six types of thermocouples

This is the same basic unit as the 2100A-03 but with the addition of 8 select switches on front panel. Instrument configuration for any one of the six available thermocouple types can be selected by means of the switches, but only one type of thermocouple can be connected at one time. Two additional switches for dc voltages of 40 mV and 400 mV are provided.

Accuracy Of Millivolt Ranges:

24 hrs, 23°C to 27°C 40mV - ±(0.01% of rdg + 2 digits) or 72°F to 80°F 400mV - ±(0.01% of rdg + 1 digit)
 90 days, 20°C to 30°C 40mV - ±(0.015% of rdg + 3 digits) or 68°F to 86°F 400mV - ±(0.015% of rdg + 1 digit)
 1 year, 15°C to 30°C 40mV - ±(0.03% of rdg + 4 digits) or 59°F to 95°F 400mV - ±(0.03% of rdg + 2 digits)

Figure 1-1. OVERALL DIMENSIONS

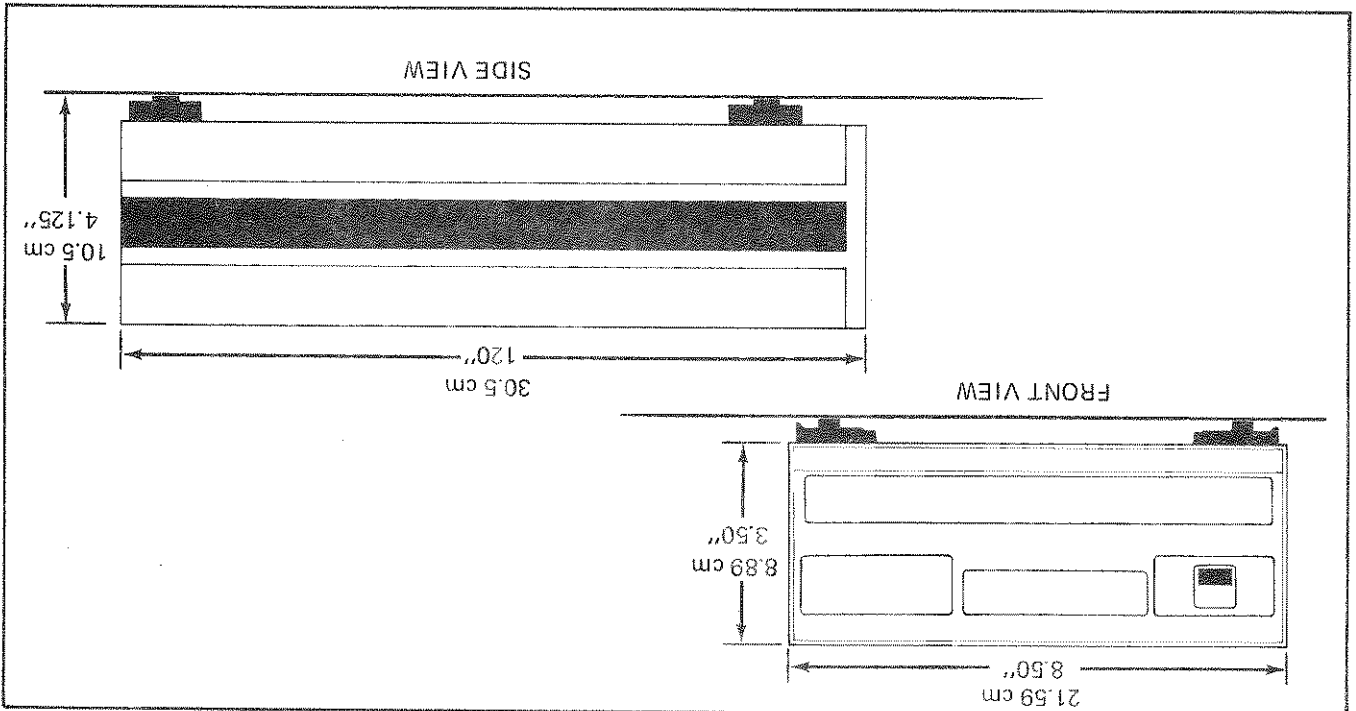

2100A-10 - Digital Thermometer for ten thermocouples of the same type

This is the same basic unit as the 2100A-03 but with the addition of 11 manual switches on front panel. This allows up to 10 thermocouples (all of the same type) to be connected to the rear of the instrument and then switched, one at a time, into the measuring instrument. An error of 0.1° F or 0.1° C is added to the existing errors in the 2100A-03 specifications. A separate switch on the front panel isolates this bank of ten switches from external inputs when the 2150A is used. Channel identity of the selected thermocouple is available when the DOU is fitted.

2150A-10 - Ten point selector switch unit

This is a separate unit containing 10 manual selector

switches on the front panel and a separate switch for isolating the switches. When used with any of the above instruments, the specification will be the same as the 2100A-10. When used with the 2100A-06, any combination of thermocouples can be connected to the unit. Channel identity can be recorded as in the 2100A-10.

2150A-20 - Twenty point selector switch unit

Same as 2150A-10, but with two rows of 10 selector switches.

2150A-30 - Thirty point selector switch unit

Same as 2150A-10, but with three rows of 10 selector switches.

static awareness

A Message From

John Fluke Mfg. Co., Inc.





Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Learning the guidelines for handling them.
3. Using the procedures, and packaging and bench techniques that are recommended.


The Static Sensitive (S.S.) devices are identified in the Fluke technical manual parts list with the symbol




The following practices should be followed to minimize damage to S.S. devices.

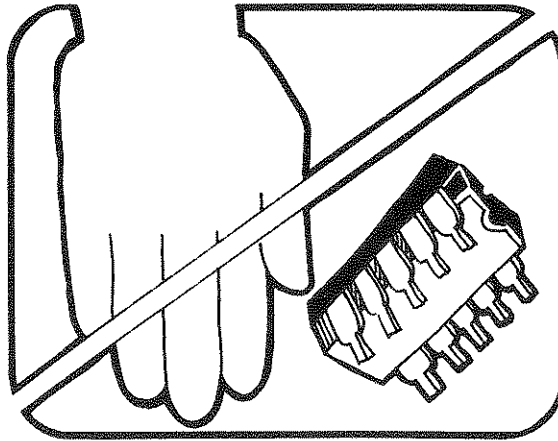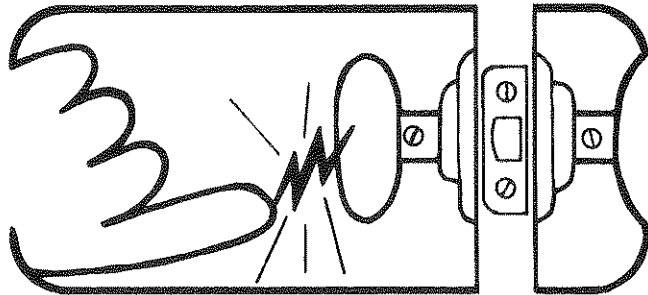


1. MINIMIZE HANDLING

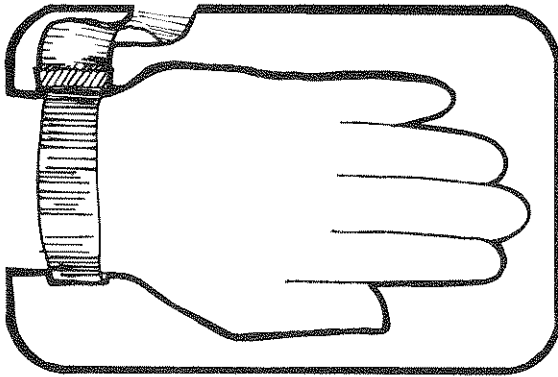

3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES

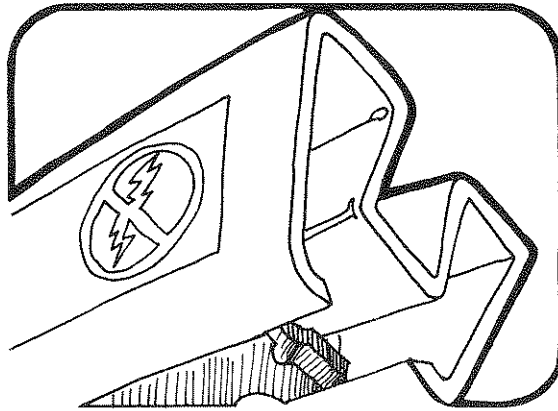


2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

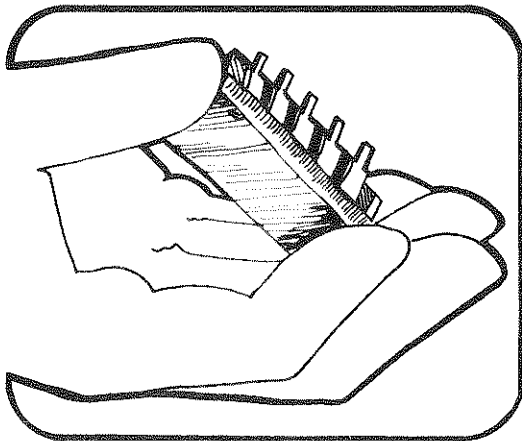


4. HANDLE S.S. DEVICES BY THE BODY


7. AVOID PLASTIC, VINYL AND STYRAFOAM IN WORK AREA

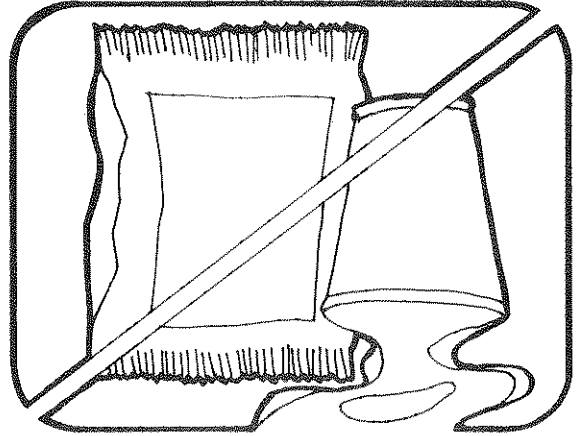

6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE

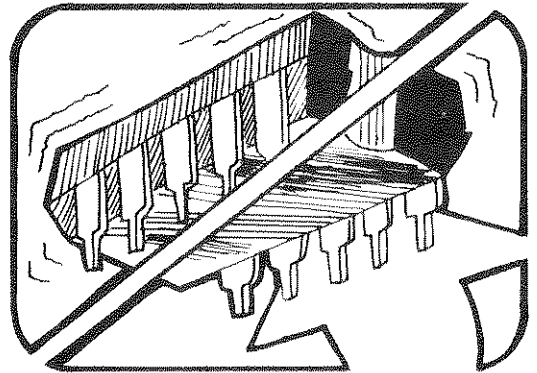

5. USE ANTI-STATIC CONTAINERS FOR HANDLING AND TRANSPORT

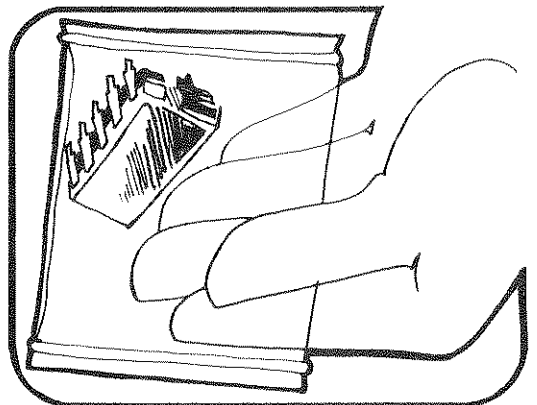


John Fluke Part No.	Bag Size
453522	6" x 8"
453530	8" x 12"
453548	16" x 24"
454025	12" x 15"

Anti-static bags, for storing S.S. devices or pcbs with these devices on them, can be ordered from the John Fluke Mfg. Co., Inc. See section 5 in any Fluke technical manual for ordering instructions. Use the following part numbers when ordering these special bags.

10. ONLY GROUNDED TIP SOLDERING IRONS SHOULD BE USED.

9. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.

8. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION

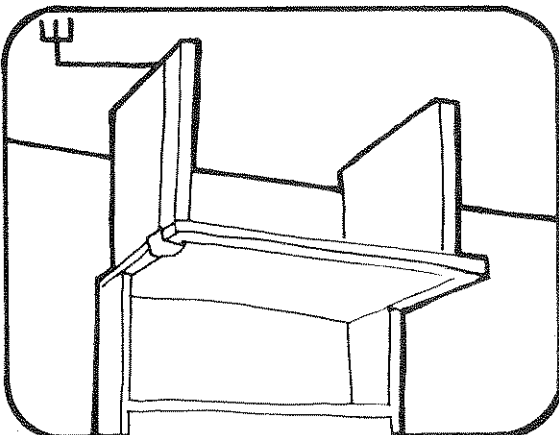

Section 2

Operating Instructions

2-1. INTRODUCTION

2-2. This section of the manual contains information regarding installation and operation of the Model 2100A Digital Thermometer. It is recommended that the contents of this section be read and understood before any attempt is made to operate the instrument. Should any difficulties arise during operation please contact your nearest Fluke Sales Representative, or contact the John Fluke Mfg. Co., P.O. Box 43210, Moundlake Terrace, WA, 98043; telephone (206) 774-2211. A list of Sales Representatives and their addresses is given in Section 7.

2-3. SHIPPING INFORMATION

2-4. The 2100A is packaged and shipped in a foam-packed container. Upon receipt of the equipment, a thorough inspection should be made to reveal any possible shipping damage.

2-5. If reshipment of the equipment is necessary, the original container should be used. If the original container is not available, a new container can be obtained from the John Fluke Mfg. Co., Inc. Please specify the equipment model number when requesting a new shipping container.

2-6. INPUT POWER

2-7. The 2100A can be operated from either an ac or dc power source. Ac power may be either 100, 115 or 230 volts, $\pm 10\%$, at 50 to 440 Hz; however, each individual

2-11. OPERATING FEATURES

2-10. The 2100A can be installed in a standard, 19-inch equipment rack by means of the Offset Rack Mount Kit. A 2100A and a 2150A can be mounted together by means of Side-by-Side Rack Mount Kit. In addition, either of the two instruments can be panel mounted by means of the Panel Mounting Frame. Installation instructions for these accessories are included in Section 6.

2-9. RACK/PANEL INSTALLATION

2-8. The 2100A may be connected to an 11.5 to 17.5 volt dc supply by means of a pair of rear panel terminals. The unit is protected from accidental polarity at the dc inputs, and may be connected concurrently to ac power. Refer to Figure 2-2 for the location of the ac and dc power inputs.

The required ac line voltage for each 2100A is stamped on a decal located on the rear of the instrument.

NOTE

The required ac line voltage is determined by means of the power transformer.

2-12. The location of all front panel controls and indicators is shown in Figure 2-1; a description of each item shown is given in Table 2-1. Rear panel connectors are shown and described in Figure 2-2 and Table 2-2, respectively.

Figure 2-1. FRONT PANEL CONTROLS AND INDICATORS

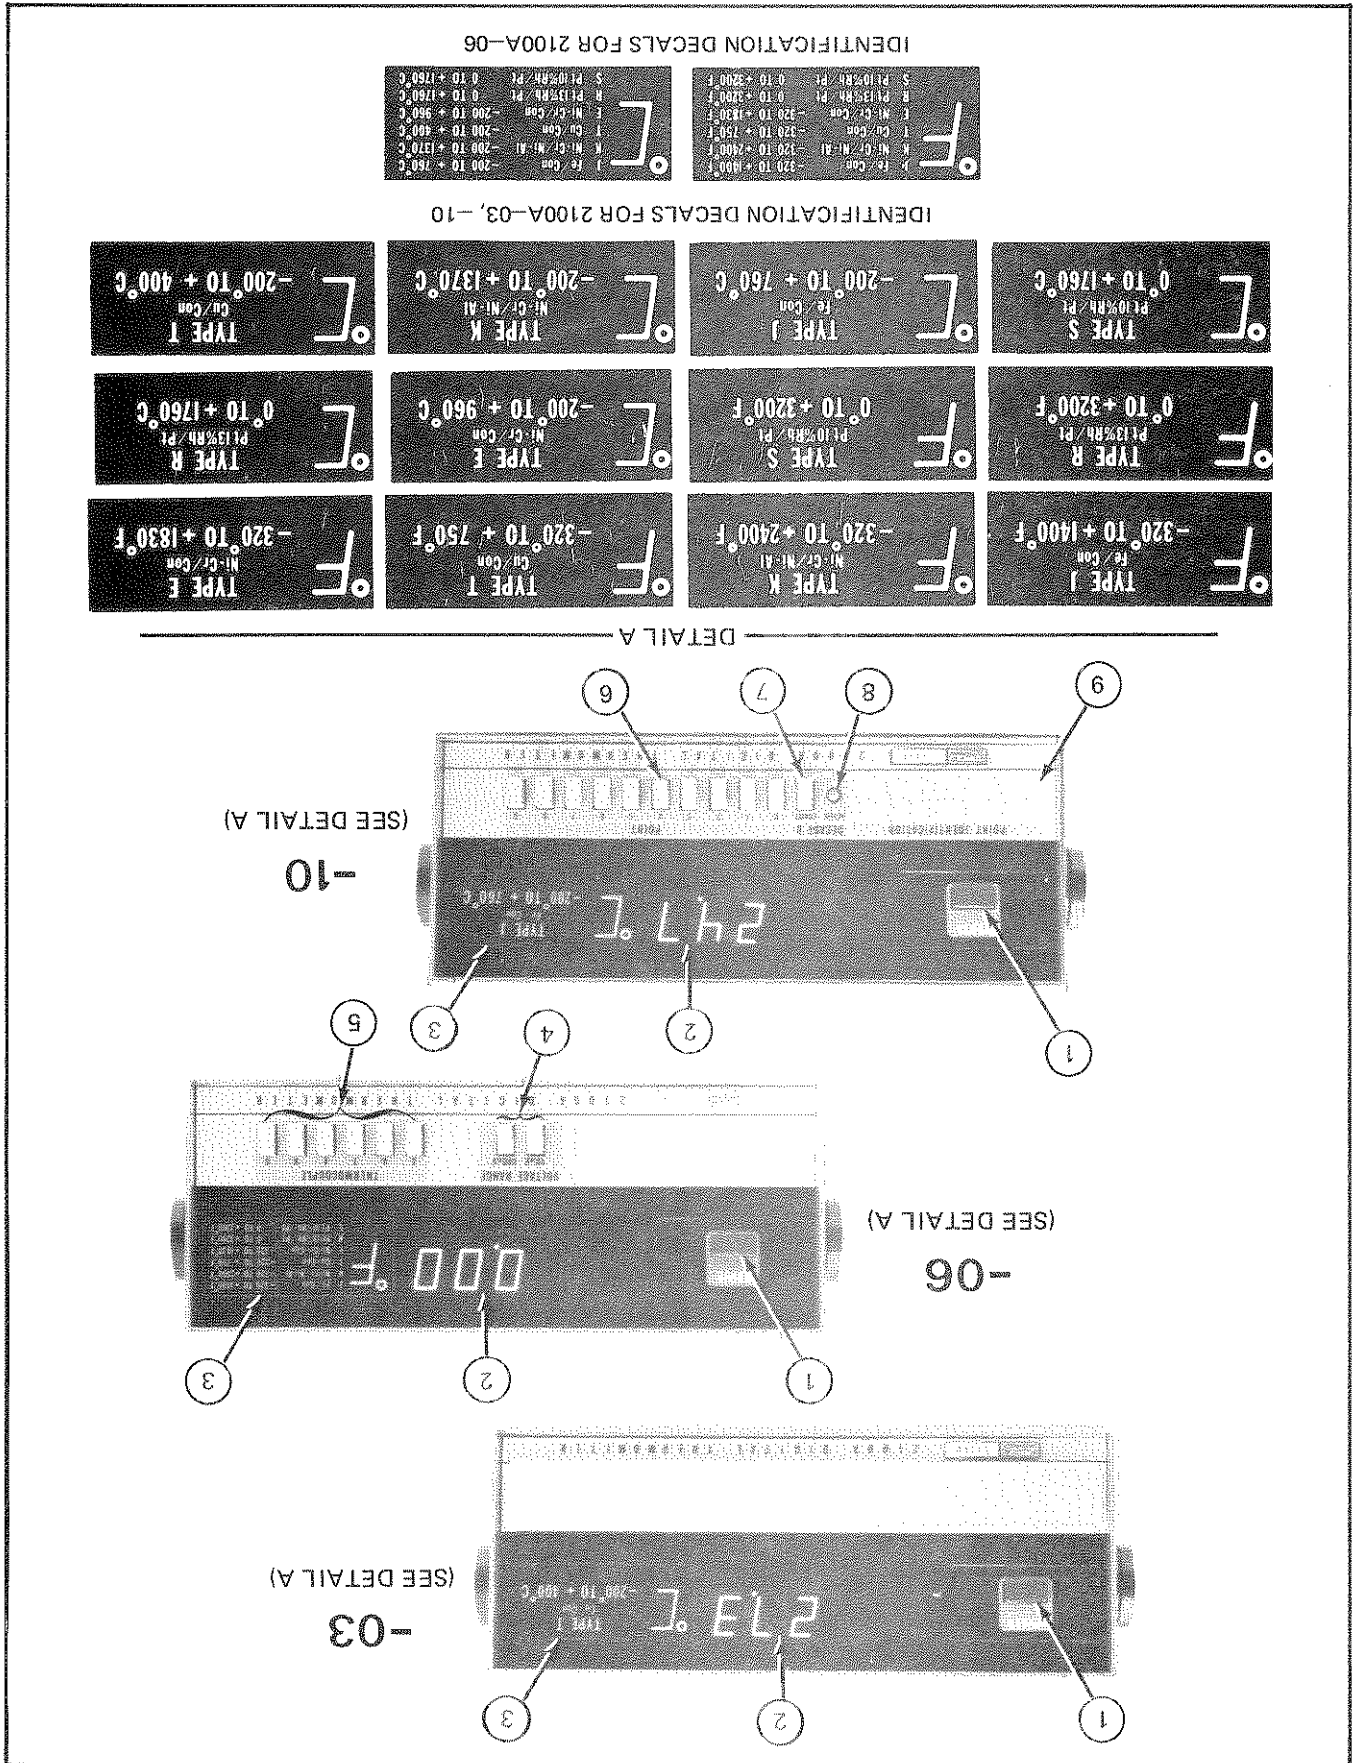



Table 2-1. FRONT PANEL CONTROLS AND INDICATORS

FIG. 2-1 INDEX NO.	NAME	DESCRIPTION
1	POWER Switch	Alternate-action pushbutton switch that switches power on and off. (When in off position, optional batteries are not charged.)
2	Measurement Results Readout	Five-digit Beckman (Planar gas discharge) readout that displays temperature, in degrees of scale noted on Identification Decal (index No. 3). Maximum capacity of readout: ±39999.
3	Identification Decal	Identifies temperature scale and thermocouple type for which instrument has been programmed and calibrated.
4	Thermocouple Switches (J,K,T,E,R,S)	Mutually cancelling pushbutton switches that program the 2100A-06 for particular type of thermocouple being used. (Permits rapid change from one type to another.)
5	VOLTAGE RANGE Switches (40 mV, 400 mV)	Mutually cancelling pushbutton switches that select desired input voltage range when 2100A-06 is used with devices other than thermocouples (such as strain gauges).
6	POINT Switches (0 thru 9)	Mutually cancelling pushbutton switches that select desired thermocouple for input to 2100A-10.
7	DECADE 0 CANCEL Switch	Pushbutton switch that mechanically releases selected POINT switch on 2100A-10 when 2150A is used to expand number of inputs.
8	DECADE 0 ACTIVE Indicator	LED that lights red to indicate DECADE 0 is active (a POINT button has been pressed). LED goes out if CANCEL button is pressed. Used on 2100A-10.
9	POINT IDENTIFICATION Log	Writing surface on 2100A-10 provided to log locations of thermocouples used.
<p style="text-align: center;"><i>NOTE</i></p> <p><i>All eight pushbutton switches form a single group insofar as mutual cancellation is concerned; only one of the eight can be active at a given time.</i></p>		

FIG. 2-1 INDEX NO.	NAME	DESCRIPTION
1	DATA OUTPUT UNIT Connector	Card-edge connector that permits connection to external digital equipment. (Part of -02 option.)
2	12V PWR IN jacks (+, -)	Two connectors that provide means of attaching an external dc power source.
3	AC Power Input Connector	Polarized, three-prong connector that provides means of connecting ac power source.
4	INPUT Terminals - GD, LO, HI	Three screw-and-ling terminals that provide means of connecting thermocouple with or without guard. The 2100A-06 will also accept voltage inputs from other types of transducers, such as strain gauge configurations, etc.
5	Input Terminals (2100A-10)	Same type terminals as item 4, but arranged in 10 front-to-back rows of 3 terminals each (GD, LO, HI, back-to-front). Terminals provide means of connecting up to 10 thermocouples, with or without guard.

Table 2-2. REAR PANEL CONNECTORS.

Figure 2-2. REAR PANEL CONNECTORS

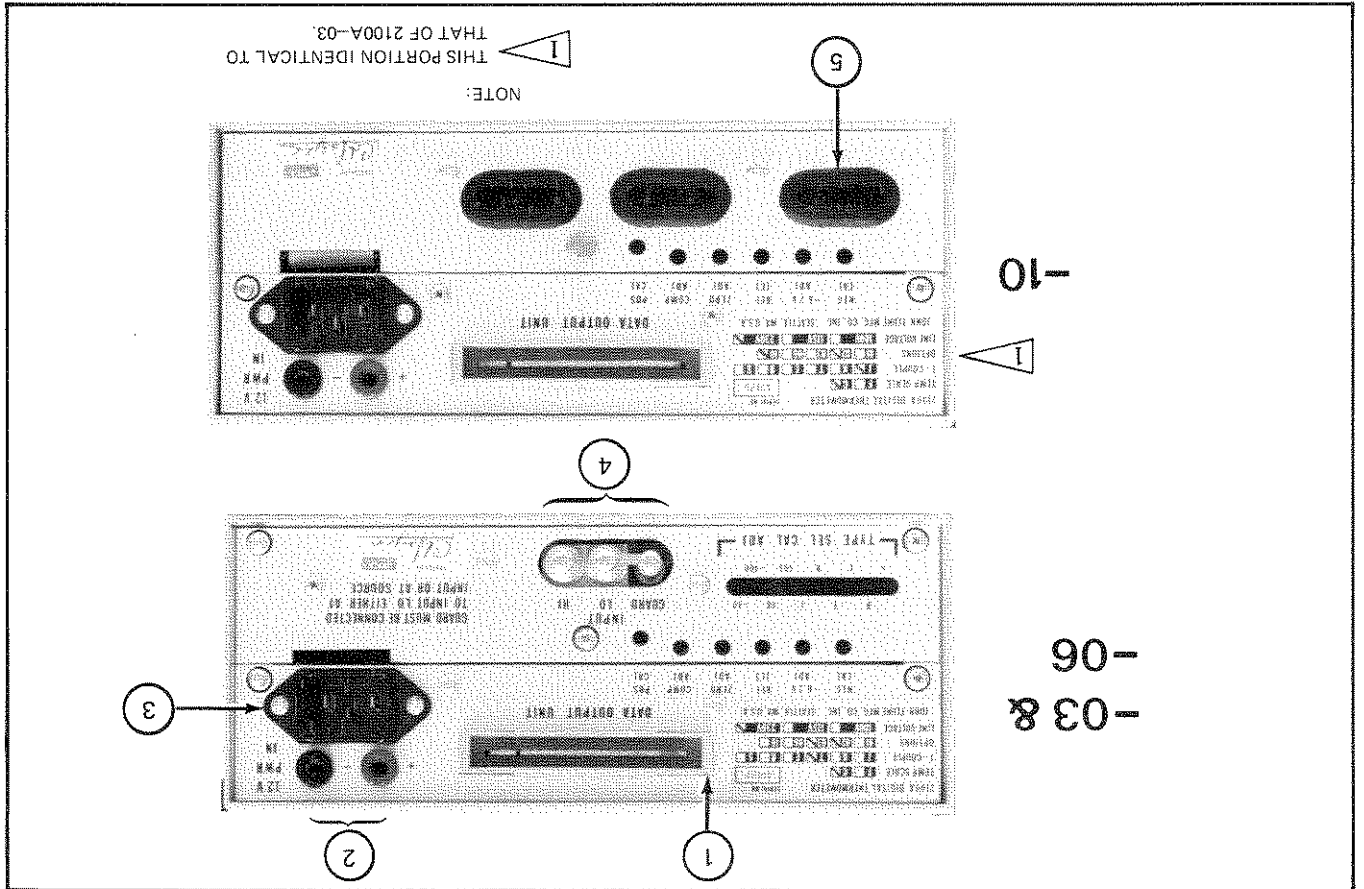

2-13. OPERATING NOTES

2-14. The following paragraphs describe various conditions that should be considered before operating the 2100A.

2-15. AC Line Connection

2-16. The input power cord mates with a three-prong, polarized connector. This permits connection to any of the power line voltages described in paragraph 2-6. Ensure that the offset pin is connected to a high-quality earth ground.

2-17. Fuse Replacement

2-18. A 1/4A fuse is located in a snap-in fuseholder near the power transformer as shown in Figure 2-3. Should the fuse need replacing, remove the 2100A from the case to gain access to the fuse by removing the four retaining screws on the rear panel and sliding the instrument backwards. Replace the fuse with a 1/4A Slo-Blo, Fluke part number 166306.

2-19. Open Inputs

2-20. Open inputs (thermocouple either burned open or not connected), when applied to the 2100A, will cause the readout to go blank. In addition, the readout on the 2100A-10 and 2100A/2150 set will go blank if the CANCEL button corresponding to the lighted ACTIVE indicator is pressed. If all available ACTIVE indicators are out, the blank display is not indicative of an open input. If, however, any ACTIVE indicator is lit, then a blank display indicates that the input selected in the active decade is open.

2-21. OPERATION

2-22. Models 2100A-03 and 2100A-10

2-23. Operate the 2100A-03 and 2100A-10 as follows:

a. Connect thermocouple leads to the input terminals on the rear panel (2100A-03) or to one of the ten sets of terminals located inside the lower half of the rear panel (2100-10). The thermocouple must be of the type indicated on the decal in the upper right corner of the front panel.

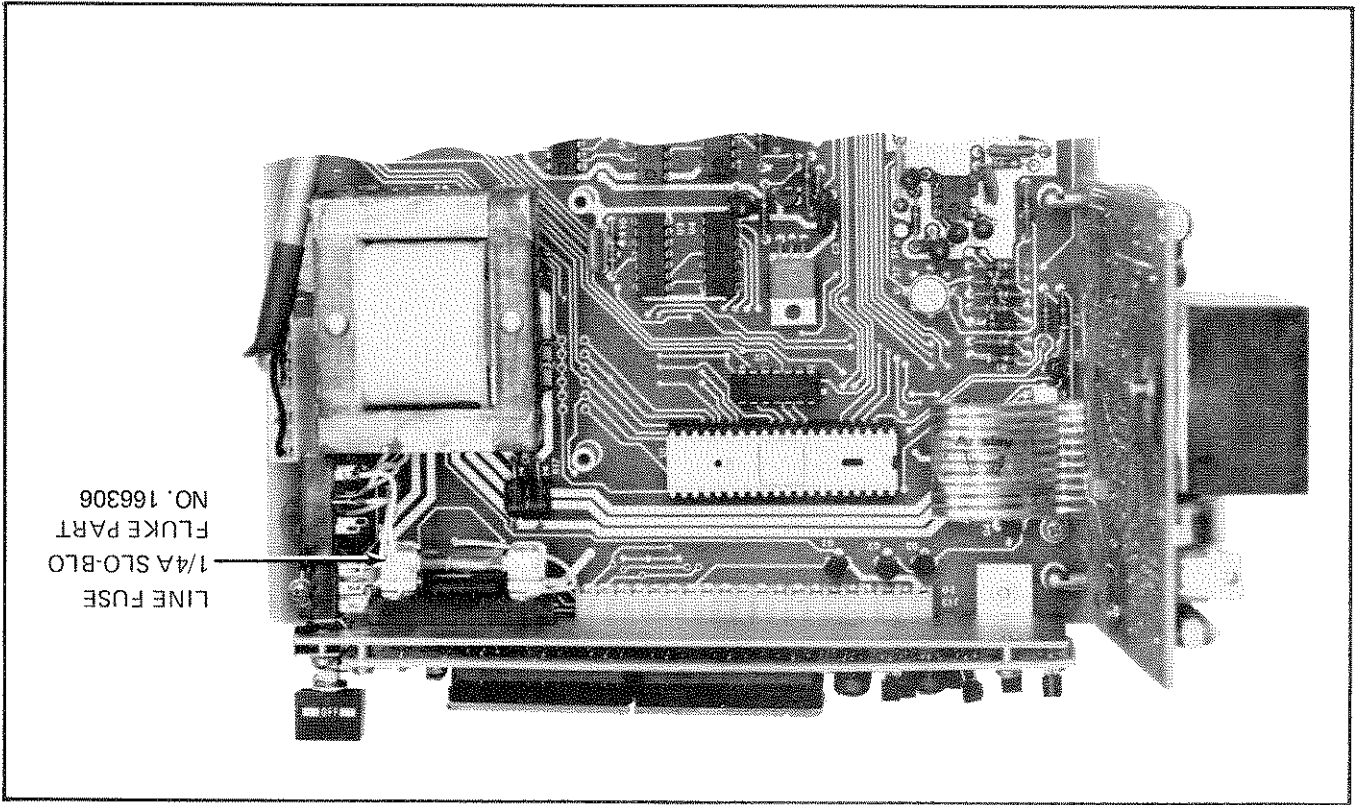


Figure 2-3. LINE FUSE LOCATION

The first metal of the thermocouple, as indicated on the front panel decal, connects to the HI terminal; the second metal connects to the LO terminal. If the thermocouple is guarded, connect the shield to the GD (guard) terminal and the sensor end of the shield to ground; if not, connect the GD and LO terminals together.

NOTE!

On the 2100A-10 only, unscrew the knurled cap-tive screw (center of the rear panel) and pull the lower half of the instrument out of the case to expose the input terminal block. Be sure to route the thermocouple leads through the grommeted holes in the rear panel.

b. Connect the 2100A to the proper power source. (Refer to paragraph 2-6).

c. Press the POWER pushbutton. For the 2100-03, verify that the readout lights.

Steps a, b, and c are all that are required for 2100A-03 operation. For 2100A-10, proceed with steps d, e, and f.

d. Press the POINT selector corresponding to the location (0 through 9) to which the thermocouple is attached; verify that the readout and ACTIVE indicator lights.

e. To select a new thermocouple, press the desired POINT selector (no need to press CANCEL button first).

f. To open all inputs, press the CANCEL button and verify that the ACTIVE indicator and readout both go out.

2-25. Operate the 2100A-06 as follows:
 a. Connect 2100A-06 to proper power source. (Refer to Paragraph 2-6.)
 b. Connect leads of desired type of thermocouple to input terminals on rear panel. (Any one of the six available types may be used.)

c. Press THERMOCOUPLE selector pushbutton corresponding to type of thermocouple connected in step b, or press desired VOLTAGE RANGE pushbutton if using the 2100A-06 as a millivolt meter.
 d. Press POWER pushbutton; verify that readout lights.

NOTE

The 2100A-06 may only have one set of input leads connected at any time.

2-26. Model 2100A/Model 2150A Set

2-27. When a 2150A is used in conjunction with a 2100A, each decade of the 2150A is operated in the same manner as DECADE 0 of the 2100A-10. That is, to select a new point in the active decade, merely press the POINT pushbutton for the new point. (The active decade is indicated by a lighted ACTIVE indicator.) However, to select a new point in a different decade, the active one must first be deactivated. This is accomplished by pressing the CANCEL pushbutton in the active decade (ACTIVE indicator will go out). When all ACTIVE indicators are unit, any of the total points available (up to 30 for the -03 and -06; up to 40 for the -10) may be selected.

2-27. In the case of the 2100A-06/2150 set, thermocouples of any of the six types may be connected to the input connectors on the 2150A in any order (mix as desired). However, after a given point has been selected, the THERMOCOUPLE pushbutton on the 2100A-06 corresponding to the type of thermocouple connected to the selected point, must be pressed.

Section 3 Theory of Operation

3-1. INTRODUCTION

3-2. This section contains the theory of operation for the Model 2100A Digital Thermometer. The theory is presented at a functional block level followed by a more detailed description. The section titled OVER-ALL FUNCTIONAL DESCRIPTION discusses the overall operation of the instrument in terms of the functional relationships of the major circuit areas. Block diagrams and simplified circuit diagrams are used as aids to understanding the instrument theory. The section titled CIRCUIT ANALYSIS provides more detailed information about the circuit operation within each functional block.

3-3. OVERALL FUNCTIONAL DESCRIPTION

3-4. The 2100A processes the thermal emf output of a thermocouple in such a manner as to produce an accurate digital representation of the temperature causing the thermocouple output. Figure 3-1 illustrates, in block diagram form, the steps that the thermocouple output goes through as it is processed for display. The basic purpose for each functional block will be discussed in the following paragraphs.

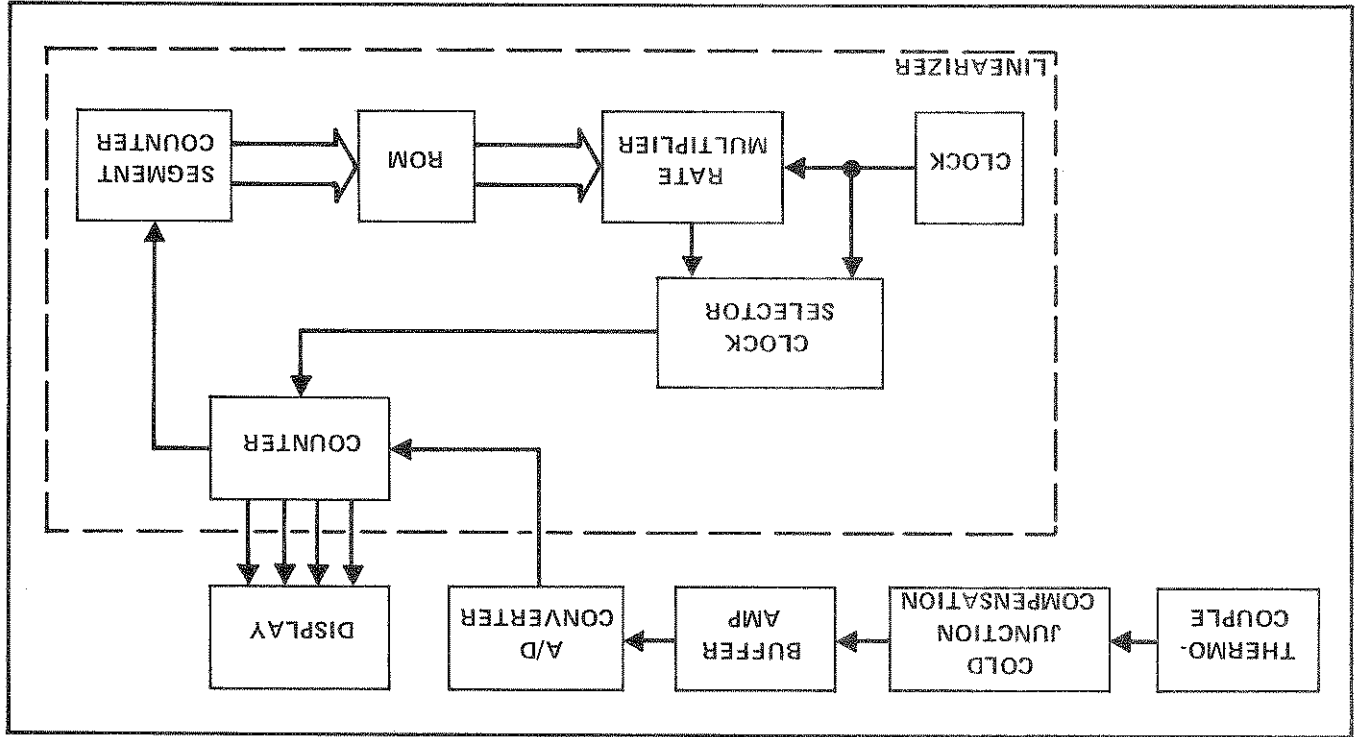


Figure 3-1. 2100A BLOCK DIAGRAM

3-5. Thermocouple

3-6. Three types of thermocouples (J type, K type, and T type) are available as accessories to the 2100A. The E, R, and S type thermocouples are also compatible with the 2100A. These thermocouples consist of two dissimilar metals (wires) connected together at the probe end and attached to the cold junction on the 2100A. Figure 3-2 is a basic representation of the thermocouple; illustrating how it is attached to the instrument.

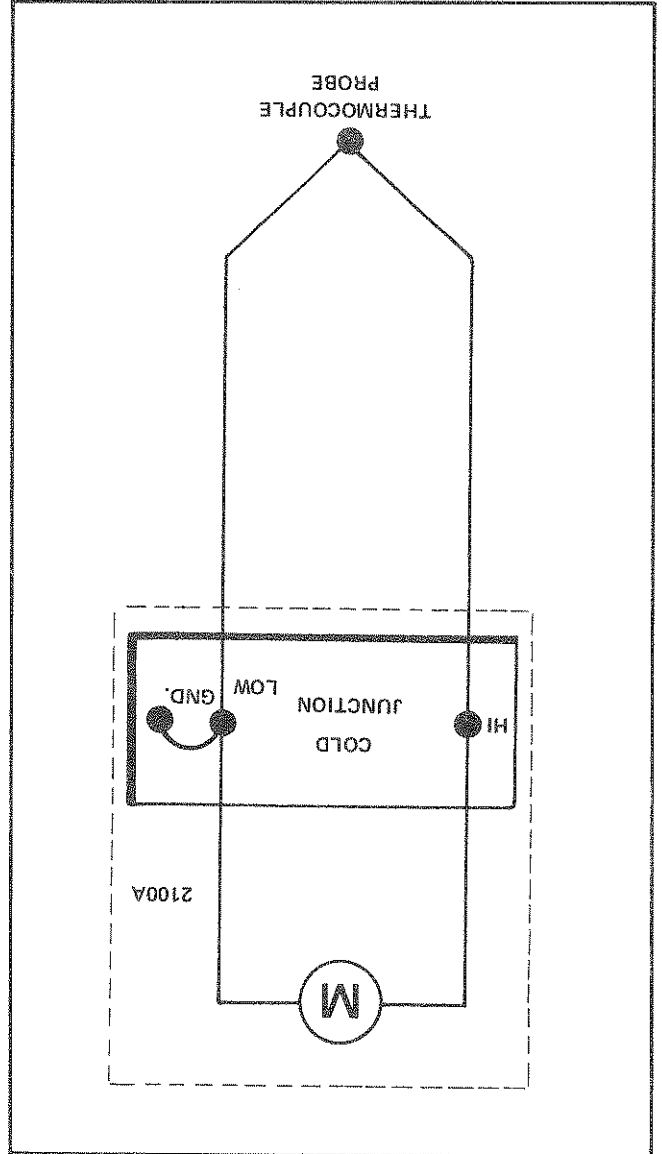


Figure 3-2. THERMOCOUPLE CONNECTION

3-7. The thermal emf generated by the thermocouple changes as the temperature varies. These changes in emf are processed by the 2100A and displayed as a digital representation of the temperature.

3-8. Cold Junction Compensation

3-9. The conversion from thermocouple materials to copper, for connection to the measuring device, must be done with both thermocouple to copper junctions at the same temperature. Temperature gradients or variations at these connections will introduce errors. The 2100A uses an isothermal block containing the terminals for connecting thermocouples to the instrument. The heat conductivity of the isothermal block holds the two thermocouple connection terminals very close to the same temperature. The temperature of the block is monitored by a transistor; the emitter-base junction characteristic of which has been calibrated against changes in temperature. The cold junction is electrically compensated for changes in temperature that would otherwise create an error in the detected temperature at the thermocouple probe.

3-10. Buffer Amplifier

3-11. The buffer amplifier is used to maintain the amplitude of the signal applied to the integrator at approximately the same level for any of six 2100A compatible thermocouples. The amount of buffer amplifier gain applied to each thermocouple output is controlled by changing the amplifier feedback loop resistor. Each thermocouple has its own thermal emf output versus temperature curve as shown in Figure 3-3. The variation in thermal emf output from one thermocouple to another is compensated for by changing the amplifier gain to match each type thermocouple.

3-12. A/D Converter

3-13. The analog to digital (A/D) converter receives a dc voltage output from the buffer amplifier, representative of the thermal emf of a thermocouple, and integrates it for 100ms. The voltage level stored in the integrator capacitor at the end of 100ms is directly proportional to the thermal emf output of the thermocouple, and therefore represents the temperature. Figure 3-4 illustrates how the integrator output would appear for various percentages of full scale inputs.

3-14. The integrator charges a capacitor during the integrate period (100ms) such that the amount of charge at the end of the period is a direct result of the level of thermal emf applied to the instrument. At the end of the integrate period the input from the thermocouple is electrically disconnected from the buffer amplifier input and replaced by a reference voltage. The reference is a fixed voltage level opposite in polarity to the input applied during the integrate period.

3-17. The linearizer comprises a counter, segment counter, read only memory (ROM), rate multiplier, clock selector, and clock. The purpose of the linearizer is to adjust the digital count as compensation for the nonlinear thermal- ϵ - m - t -versus-temperature curves of each type thermocouple. A close look at Figure 3-3 will reveal that thermocouples not only have different thermal- ϵ - m - t -versus-temperature curves but each curve in itself is not linear.

3-16. Linearizer

3-18. At the start of the read period the clock, via the rate multiplier (multiplies by fractions), supplies the counter with a clock signal at a particular frequency. As the counter accumulates the cycles of the clock signal it will output one pulse to the segment counter for every 100 cycles of input to the counter. The segment counter, being tailored to each type of thermocouple, provides an address change command to the ROM after a predetermined number of input pulses from the counter. The address change in the ROM returns changes the fractional multiplier used in the rate multiplier to control the frequency of the clock signal applied to the counter. The change in clock signal frequency compensates for the non linear thermal ϵ m t versus temperature characteristic of the thermocouple.

3-19. Display

3-20. The total number of cycles of the clock signal accumulated by the counter are a digital representation of the temperature at the thermocouple probe. The display processes the accumulated count to provide the proper numeric display on the gas discharge front panel readout.

3-21. CIRCUIT ANALYSIS

3-22. Reference Junction Compensation

3-23. Compensation for thermal ϵ m t generated by the thermocouple connection terminals is provided by Q1, U32, and associated components. The difference in ϵ m t per degree change of temperature, caused by each type thermocouple, is corrected by selected values of R_c and R_d . Figure 3-5 is the reference junction compensation portion of the schematic.

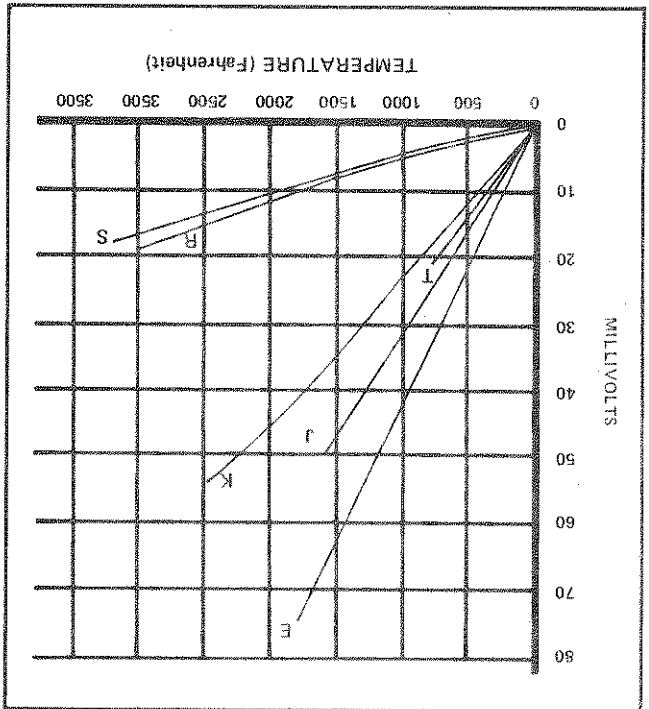


Figure 3-3. TEMPERATURE/MILLIVOLT FOR THERMOCOUPLES


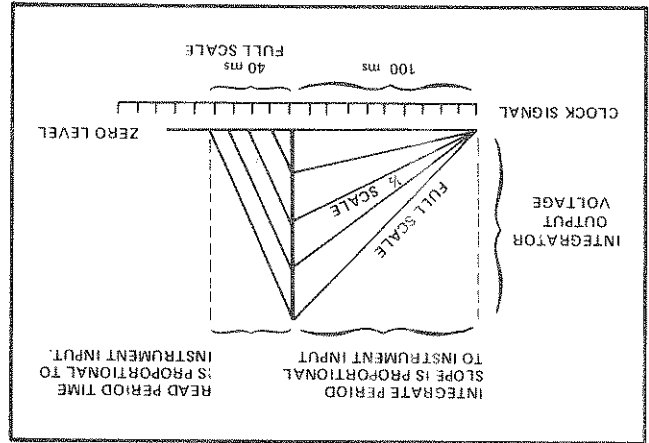


Figure 3-4. DUAL-SLOPE A/D CONVERSION


3-15. During the read period the reference voltage is integrated causing the charge on the integrator capacitor to discharge at a predetermined rate. The time required to discharge the capacitor to the zero level during the read period depends upon the level the capacitor was charged to during the integrate period. A digital representation of the input (thermal ϵ m t) is obtained by counting the number of cycles of a clock signal that occur from the start of the read period until the integrator capacitor has been discharged to the zero level. A comparator attached to the

Figure 3-6. BUFFER AMPLIFIER CIRCUIT

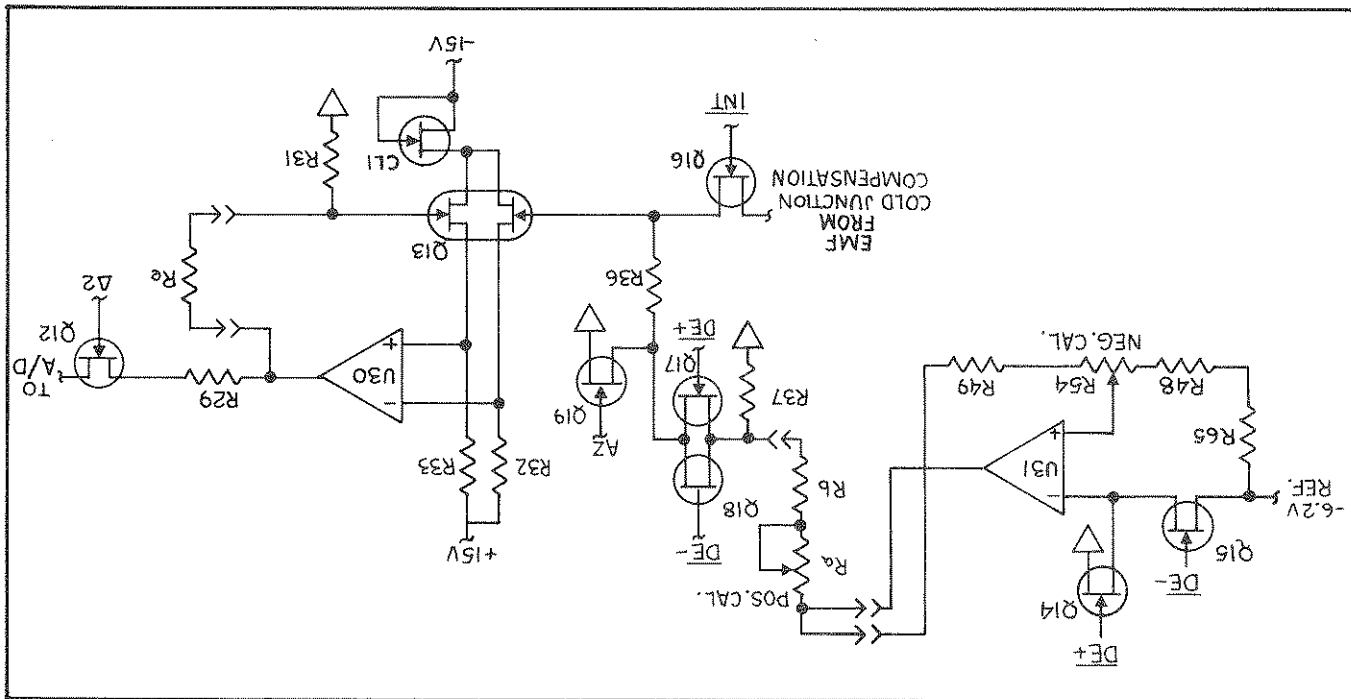

CIRCUIT

Figure 3-5. REFERENCE JUNCTION COMPENSATION

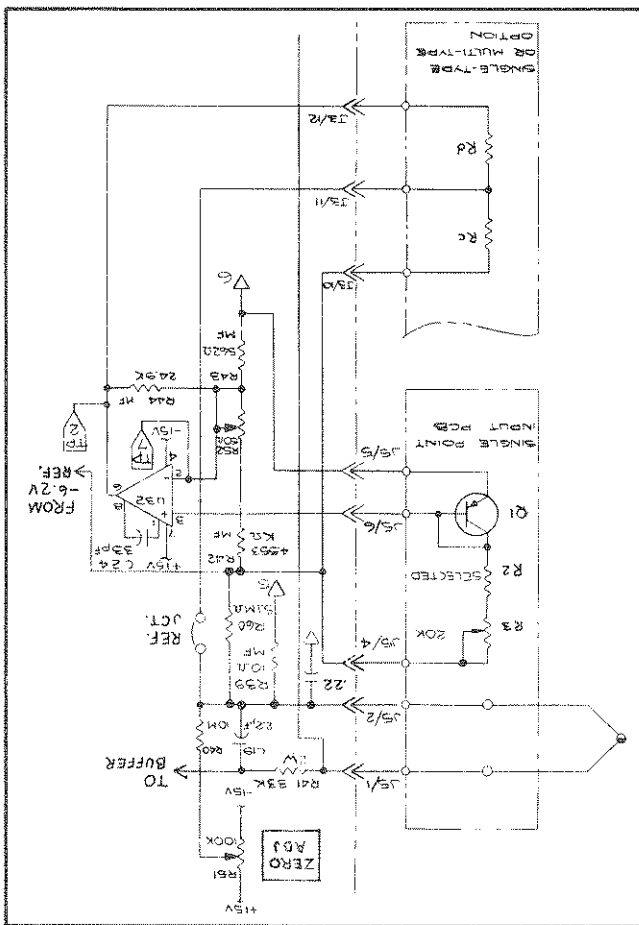

3-27. The thermal emf output of the thermocouple is applied to the buffer, via Q16, for the duration of the 100 ms INT command (integrate period). The buffer output is ap-

3-26. The Buffer Amplifier and its input control circuit is presented in Figure 3-6. The buffer is comprised of Q13, U30, C11, and associated circuitry. The input control circuit is divided into two basic functions; connecting the thermal emf of the thermocouple to the buffer during the integrate period, then the reference voltage during the read period. The control signals for each function come from the LSI chip U1 (not shown).

3-25. Buffer Amplifier

3-24. Operational amplifier U32 is biased, to conduct at a stable rate, by the -6.2 reference voltage. The amplifier's output is connected through resistor R_d and the REF JCT jumper to the junction of R₃₉, R₄₀, and R₆₀. The current through R₃₉ develops a small voltage which, during calibration, is offset by the ZERO ADJ. control. When the temperature of the isothermal block (the connection point for the thermocouple) changes, Q1 causes the voltage applied to the positive input to U32 to change. The change in the input voltage is amplified by U32 about 50 times. As the output of U32 changes the voltage developed across R₃₉ also changes, compensating for the change in the connection terminals thermal emf output.

3-31. During the 100 ms INT command (integrate period) the input to the A/D is a voltage that directly represents the thermal emf output of the thermocouple. This voltage causes U29 to charge C12. The buffer output is applied, through R29, to the inverting input of U29, therefore a positive input will cause C12 to charge to a negative value. The negative charge of C12 is applied to the inverting input of U28. The negative input causes the output of U28 to immediately go to +5 volts and remain at that level until the input returns to zero.

3-32. At the end of the 100 ms integrate period, the input to U29, from the buffer amplifier, is changed to a reference voltage. Because the reference voltage is opposite in polarity, U29 starts to discharge C12. The rate at which C12 discharges is directly related to the value of the reference voltage. The greater the charge in C12 at the end of the integrate period, the longer it will take to discharge. When the charge on C12 reaches zero, the output of U28 (cm) immediately returns to zero volts. This transition signals the end of the read period and is used in U1 to terminate the digital count.

3-28. At the end of the read period, the DE - command will go high causing Q15 and Q18 to stop conducting. The AZ command then causes Q19 to conduct. The input of the buffer is connected to ground through Q19 to insure that any residual voltage that may be present is eliminated. This insures that no offset will be added to the thermal emf or reference voltage applied to the buffer during the next reading.

3-29. A/D Converter

3-30. A simplified schematic representation of the A/D

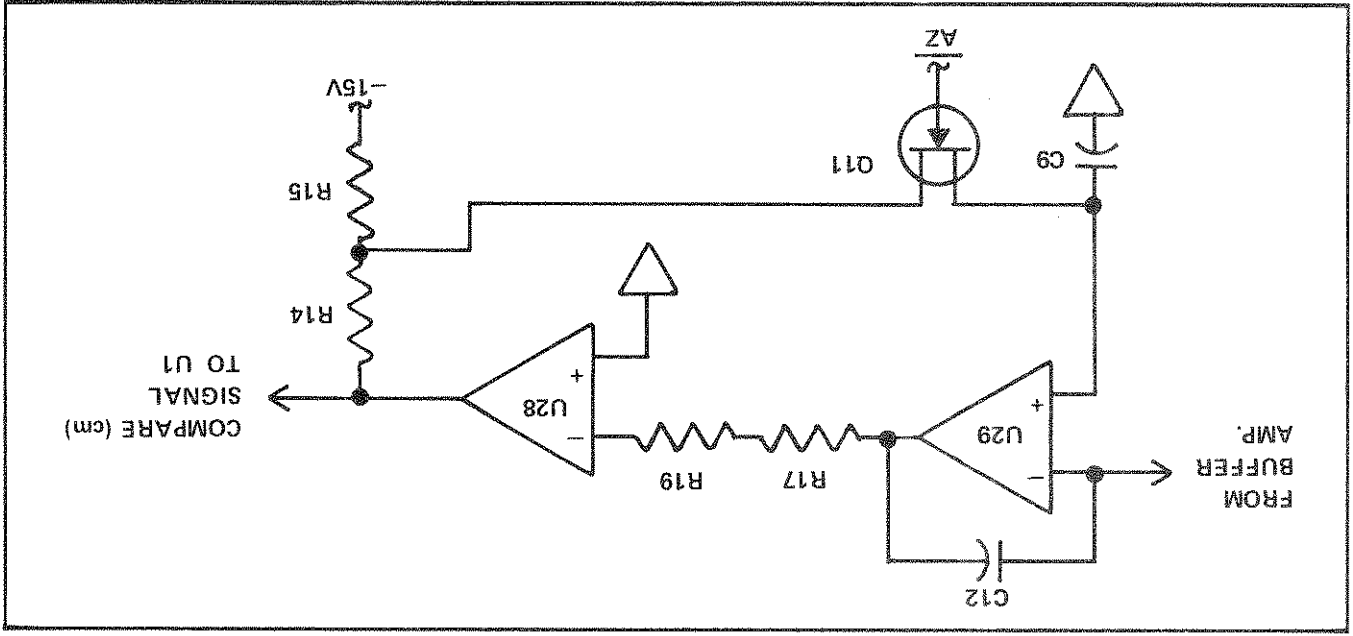


Figure 3-7. A/D CONVERTER CIRCUIT DIAGRAM

- 3-33. **Linearizer**
 3-34. The following discussion of the operation of the Linearizer refers to sheet 4 of 5 of the Basic Instrument schematic in Section 8. Refer to that schematic when reading the following description of the theory of operation of the Linearizer.
- 3-35. **CLOCK**
 3-36. The Clock basically consists of crystal V1 and two CMOS inverters of U25. The 1 MHz output of the Clock is applied to the Clock Selector and to the Rate Multiplier.
- 3-37. **CLOCK SELECTOR**
 3-38. The Clock Selector has two inputs, one from the clock and one from the Rate Multiplier. The 1 MHz clock signal is selected for output to the Counter (U1) during the integrate and auto zero periods, when the 40 mV or 400 mV range is selected, or when the linearizer jumper is removed. The input from the Rate Multiplier is applied to the counter only during the read period when measuring temperature. The frequency of the rate multiplied clock signal depends upon the type thermocouple used and at which point in the thermocouples' temperature range the input temperature is.
- 3-39. **SEGMENT COUNTER**
 3-40. The Segment Counter contains two functionally separate sections, one being a segment length counter and the other a segment address counter. These two sections control signals to the ROM tailored to the particular type of thermocouple being used.
- 3-41. The segment length counter receives an input signal from the counter U1 pin 35 ($TA \div 100$) equal to one positive true pulse for each 100 clock signal input pulses at U1 pin 6. The $TA \div 100$ signal is applied to U19-1. The outputs of U19 at pins 15, 14, 13, and 11 are applied to a series of AND gates (U13, U14, and U18) which are programmed, by the single-type pcb or the type select switch on the multi-type pcb, to provide one output pulse at U9-6 for each 2, 3, 4, or 5 $TA \div 100$ input pulses. This defines a segment length to be equal to 20, 30, 40, or 50 degrees of the thermocouples temperature range. The individualized segment lengths compensate for the differences in temperature range of each type thermocouple. The output of the segment length counter from U5-6 is applied to the segment address counter.
- 3-42. The purpose of the segment address counter is to program a new output from the ROM for each new segment. The output of the segment length counter is applied to U20 pin 14 and U15 pins 9 and 12. The output of U20 at pins 12, 9, 8, and 11 is a binary equivalent of the total of the input pulses at U20-14. When the total reaches 15, all the inputs to U23 will be high causing the output to go low. The low output is inverted by U6-13 and applied to pins 8 and 11 of U15. The sixteenth pulse from the segment length counter will clock U15-9 causing a high output to pass through OR gate U24-1 to the ROM. The thirty-third input pulse will clock U15-12 causing a high output to pass through U24-4 to the ROM.
- 3-43. The DE+ signal from U1 pin 38 will be low when the input to the 2100A is negative. This signal is attached to U9 pins 9 and 13 to cause the Segment Address Counter to start at the count of 48 when the temperature at the thermocouple falls below 0°C or F. The addresses in the ROM from 48 through 63 are reserved for segments of the thermal emf response curves (J, K, T, and E types) corresponding to temperatures below 0°C or F. Addresses from 0 to 47 are used for positive temperatures. All 64 segments are used for positive temperatures for the R and J thermocouples.
- 3-44. **ROM**
 3-45. The Read Only Memory (ROM) contains preprogrammed eight-bit binary numbers which are used by the Rate Multiplier to alter the clock signal frequency. Three program address lines, U22 pins 14, 15, and 16, determine which series of numbers the inputs from the Segment Address Counter will select from. At each address in a particular series, an eight-bit number is stored that is representative of the slope of that segment of the thermocouple emf versus temperature curve. The outputs of the ROM are applied to the Rate Multiplier.
- 3-46. **RATE MULTIPLIER**
 3-47. The Rate Multiplier includes a six-bit counter multiplier U21, NAND gates U11 and U12, and dual flip-flop U10. The 1 MHz signal from the clock is applied to U21 pin 9 and, via inverter U16-8, to the clock inputs of U10-9 and U10-12. Six of the eight bits of the number input from the ROM are applied to the six bit counter multiplier U21. The two most significant bits of the data word are applied to U12 pin 1 and U11, pin 3. The eight bit number is selected to produce a fractional multiplier between 0/256 and 255/256. When the 1 MHz clock signal is multiplied by the fraction, the resulting clock signal is applied to U17, pin 9. When the DE signal from U1-37 goes low (read period), the rate multiplied clock signal will be applied to the input to the Counter U1-6. At the end of each segment, the Segment Address Counter advances the ROM, to the next address location and provides a new eight bit data word to the Rate Multiplier.

Segment Address Counter advances the ROM, to the next address location and provides a new eight bit data word to the Rate Multiplier.

3-48. Summary of Linearizer Operation

3-49. The following summary of the operation of the Linearizer uses the timing diagram in Figure 3-8 to illustrate the closed loop interaction of the subsections of the Linearizer. The diagram represents the first five segments of a hypothetical thermal emf versus temperature curve. In actuality the change in frequency at U1-6, from one segment to the next, would not be as great as that shown in the timing example.

3-50. For this example, the segment length counter is assumed to be programmed to provide a two-to-one division ratio; i.e., each segment represents 20 degrees of temperature. The ROM is programmed for a rate multiplier of 192 over 256 (eight bit number, B7 thru B0, is 1100000) resulting in a clock input to the Counter (U1-6) of 750 kHz during segment number 0.

3-51. At the start of the read period, the Clock Selector will apply the 750 kHz clock frequency (U21-6) to the Counter. On the one-hundredth clock pulse, the output of the Counter (U1-35) produces one positive pulse. On the two-hundredth pulse, the output of the Counter produces the second positive pulse which causes the segment length counter to output one negative pulse (U5-6) to the segment address counter. This pulse causes the segment address counter, via U20-12, to advance the ROM address to access the next eight bit number (segment number 1). The eight bit data word stored in the ROM, for this example, is 10100000 (output lines B7 thru B0). This data word will cause the Rate Multiplier to change to 160 over 256 which causes the clock frequency to change to 625 kHz. The sequence of events is the same as it was for segment number 0 in that the Counter will output one pulse at one hundred counts, then a second pulse at two hundred counts which advances the segment address counter to segment number 2 (U20-12 low, U20-9 high). This results in a binary number 10000000 output from the ROM, a rate multiplier of 128 over 256 and a new clock frequency of 500 kHz.

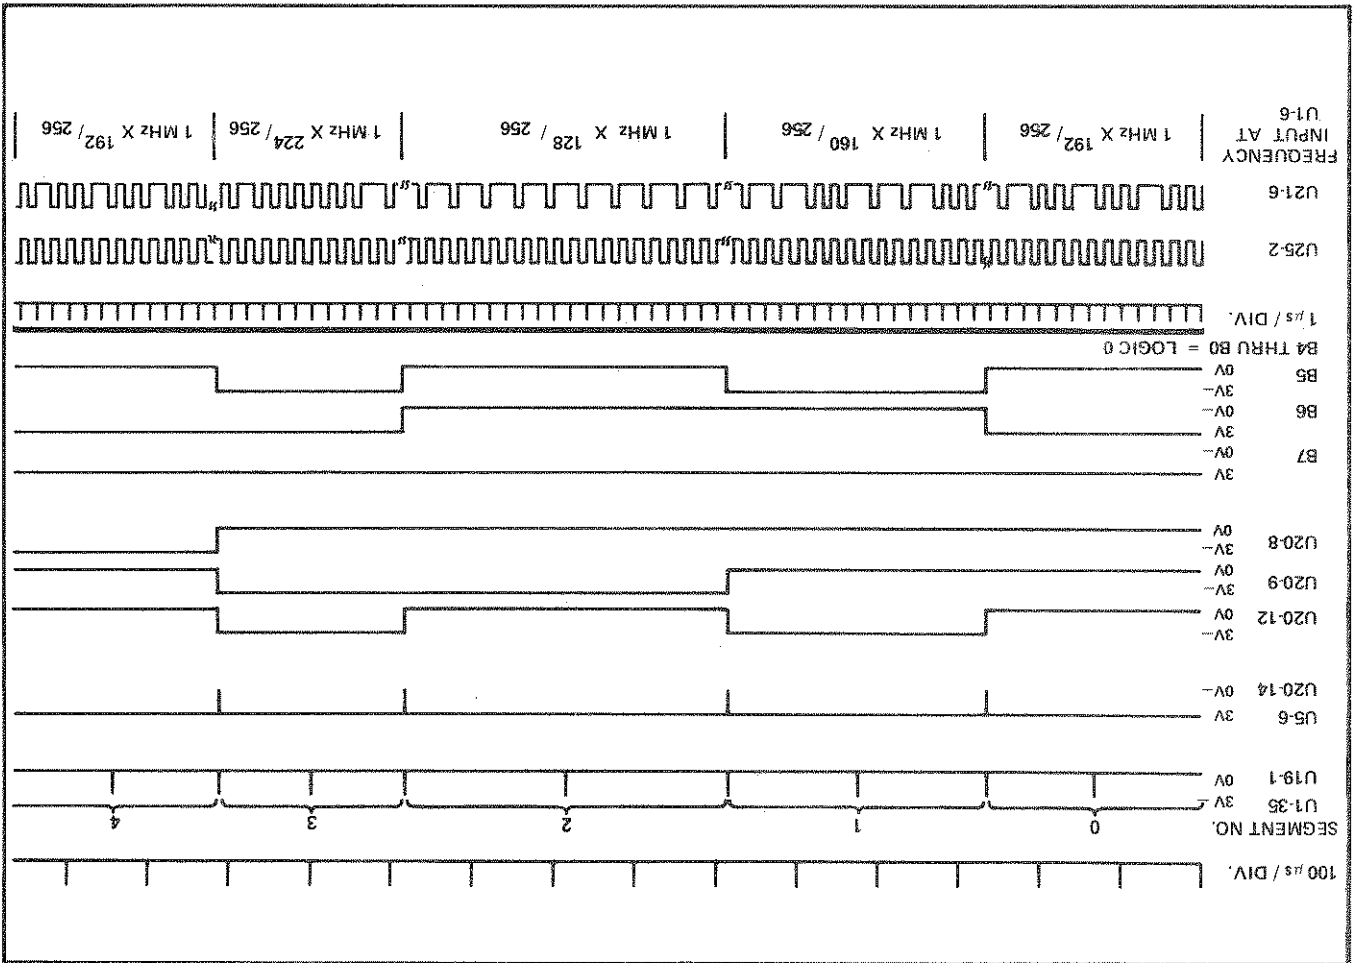


Figure 3-8. LINEARIZER TIMING EXAMPLE

Section 4

Maintenance

4.1. INTRODUCTION

4-2. This section of the manual contains maintenance information for the Model 2100A Digital Thermometer. This includes service information, general maintenance, operational evaluation, calibration, and troubleshooting. The performance test is recommended as a preventative maintenance tool, and should be executed when it is necessary to verify proper instrument operation. A calibration interval of one year is recommended to insure that the 2100A is within the one-year specifications. Table 4-1 lists the recommended test equipment necessary to maintain the 2100A. If the recommended equipment is not available, other equipment having equivalent specifications may be used.

4-3. The 2100A instrument is warranted for a period of one year upon delivery to the original purchaser. The WARRANTY is given on the back of the title page located in the front of this manual. For the WARRANTY to become effective, the validation card included with the instruction manual must be filled out and returned to the John Fluke Mfg. Co., Inc.

4.4. GENERAL MAINTENANCE

4-5. Access Information

4-6. Use the following procedure to gain access to the interior of the 2100A.

a. Remove the line power cord.

Table 4-1. RECOMMENDED TEST EQUIPMENT

EQUIPMENT	NOMENCLATURE	SPECIFICATIONS	RECOMMENDED MODEL
DC Voltage Calibrator	Output Voltage: 10 Volts	Output Voltage: 10 Volts	Fluke Model 332B
Kelvin Varley Voltage Divider	Absolute Linearity: ± 0.1 ppm Resolution: 0.1 ppm	Absolute Linearity: ± 0.1 ppm Resolution: 0.1 ppm	Fluke Model 720A
Voltmeter	Accuracy: (0.005% of input + 0.001% of range) Resolution: 0.001% of range	Accuracy: (0.005% of input + 0.001% of range) Resolution: 0.001% of range	Fluke Model 8375A
Calibration Thermometer	Resolution: 0.02°C	Resolution: 0.02°C	Princo ASTM-56C
Flat Cable Connector	John Fluke P/N 376285	John Fluke P/N 376285	

NOTE

- b. Remove the encircled screws from the right and left edges of the rear panel. (There are four screws, two each side, on the 2100A-03 and 2100A-06, and two screws, one each side, on the 2100A-10).
- c. Slide the inner chassis out of the outer case by pulling the rear panel straight back.

When placing the chassis back into the case, insure that the chassis edges are properly aligned with the guide rails in the outer case.

4-7. Cleaning

- 4-8. Clean the 2100A periodically to remove dust, grease, and other contamination. Use the following procedure:

CAUTION!

Do not use aromatic hydrocarbons or chlorinated solvents to clean the 2100A. They will react with the plastic materials used in the instrument.

- a. Clean the surface of the pcb using clean dry air at low pressure (≤ 40 psi). If grease is encountered, use a mild solution of detergent and water and a soft bristled brush to dislodge the contaminants.
- b. Clean the outer surfaces of the instrument with a soft cloth dampened in a mild solution of detergent and water.
- 4-9. **Fuse Replacement**
- 4-10. The input power fuse F1 is located in the left front corner of the Basic PCB near the power transformer. If replacement is necessary, use a $\frac{1}{4}$ ampere slo-blo fuse.
- 4-11. Service Tools**
- 4-12. No special tools are required to maintain or repair the 2100A.
- 4-13. OPERATIONAL EVALUATION**
- 4-14. The operational evaluation of the 2100A is designed to check the instrument's ability to correctly process input voltages in the range generally produced by thermocouples. The test can be used as an acceptance check and/or a periodic maintenance check. If the 2100A fails this evaluation corrective action, either recalibration or repair, will be required. The test equipment required to perform this evaluation is listed in Table 4-1. Troubleshooting information is given later in this section of the manual.
- 4-15. Use the following procedure to evaluate the operation of the 2100A.
- a. Connect the appropriate thermocouple to the 2100A-03 or -10 input terminals. (For the 2100A-06 use the J-type thermocouple.)
- 4-2

- b. Connect the 2100A to the line power, turn it on and allow one-half hour warmup.
- c. Insert the thermocouple and a mercury-in-glass calibration thermometer (PRINCO ASTM-56C) into a room temperature lag bath to a depth of four inches. Allow at least 10 minutes for temperature stabilization.
- d. Read the temperature indicated on the calibration thermometer.
- e. Check the 2100A display for a temperature indication within the specification limits as defined in Section 1 of this manual.
- 4-16. CALIBRATION**
- 4-17. The 2100A should be calibrated at least once a year or whenever repairs have been made. (If accuracy requirements, more stringent than the one year specifications indicate, are required, then the calibration interval should be reduced.) The calibration procedure should be performed under environmental conditions providing temperatures of 20°C to 26°C and humidity less than 80%. Table 4-1 lists the required test equipment.

NOTE

The 2100A is calibrated using the International Practical Temperature Standard of 1968. Any thermocouple table predating this 1968 issue should not be used to calibrate the 2100A.

4-18. Power Supply Adjustments

- 4-19. Use the following procedure to correctly adjust the power supply output.
- a. Connect the positive input lead of the voltmeter to the junction point of C12, CR10, and CR11 (on the Power Supply PCB) and the negative input lead to the logic common side of C12 (See Figure 4-1).
- b. Adjust R4 for a voltmeter indication of 5.2V $\pm 0.02\text{V}$.
- c. Check the voltage between TP1 (HI) and TP2 (LO); it should be $10.5\text{V} \pm 0.1\text{V}$.
- d. Connect the voltmeter HI input lead to TP6 and the LO input lead to TP1 on the Basic PCB.

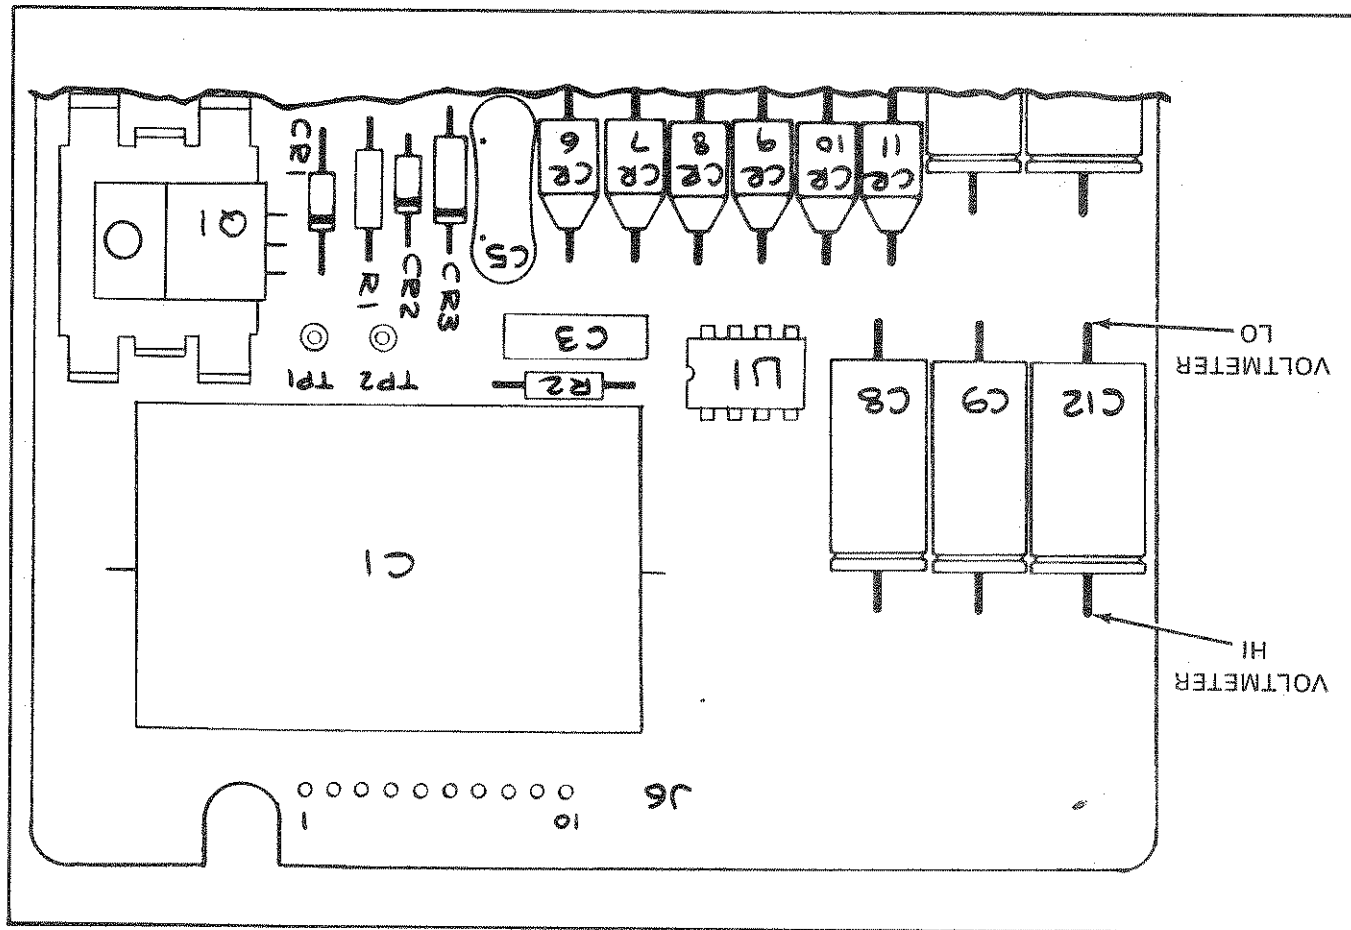


Figure 4-1. TEST EQUIPMENT CONNECTION FOR POWER SUPPLY ADJUSTMENT

- e. Adjust the -6.2V ADJ (access through the rear panel) for an indication of $6.2000V \pm 100 \mu V$.

4-20. Zero Adjustment

- 4-21. Perform the zero adjustment on the 2100A as follows:
 - a. Insure that the 2100A GD and LO terminals are jumpered together.
 - b. Short the HI and LO INPUT together.

NOTE

Select the 40 mV range when adjusting zero on the 2100A-06 instrument.

- c. Adjust the ZERO ADJ (RS1) until the 2100A read-out display is 00.0 and the minus polarity indication just flashes on and off.
- d. Remove the short from between the HI and LO terminals

- c. Connect the 2100A to the proper input power source.
- 4-24. The following procedure requires the test equipment to be prepared as follows:
 - b. Remove the LIN and REF JCT jumpers. They are located near the left rear corner of the Basic PCB, (see Figure 4-2).

- a. Connect the test equipment as shown in Figure 4-3.

Figure 4-3. CALIBRATION EQUIPMENT CONNECTION

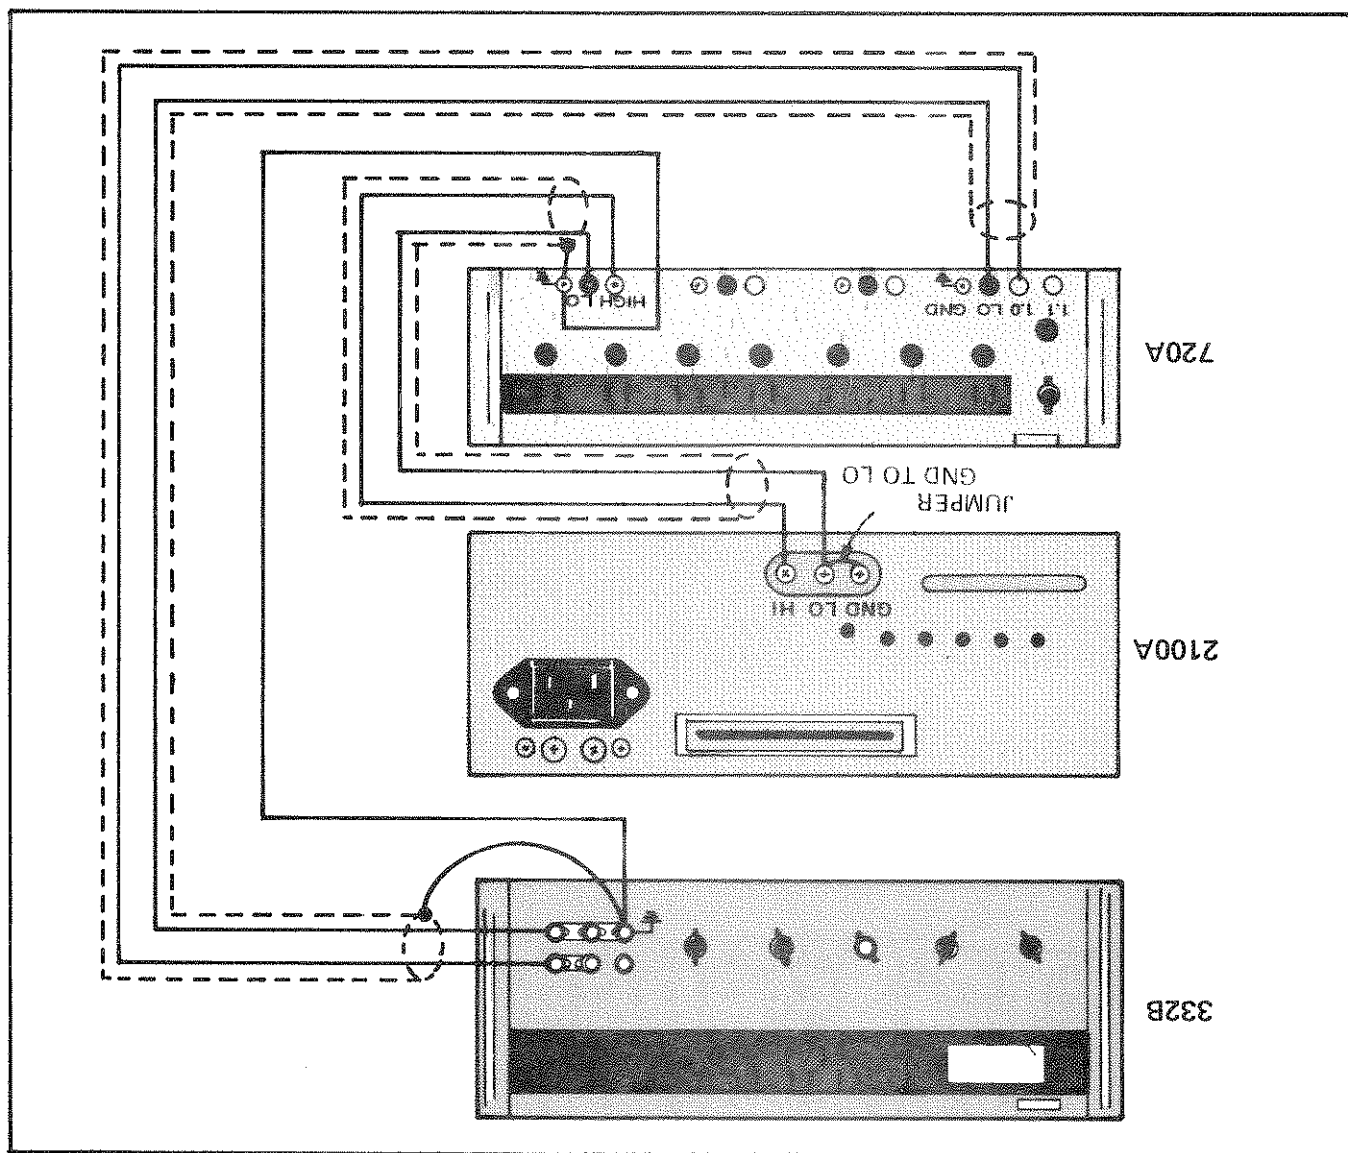


Figure 4-2. LINEARIZER AND REFERENCE JUNCTION JUMPER LOCATIONS.

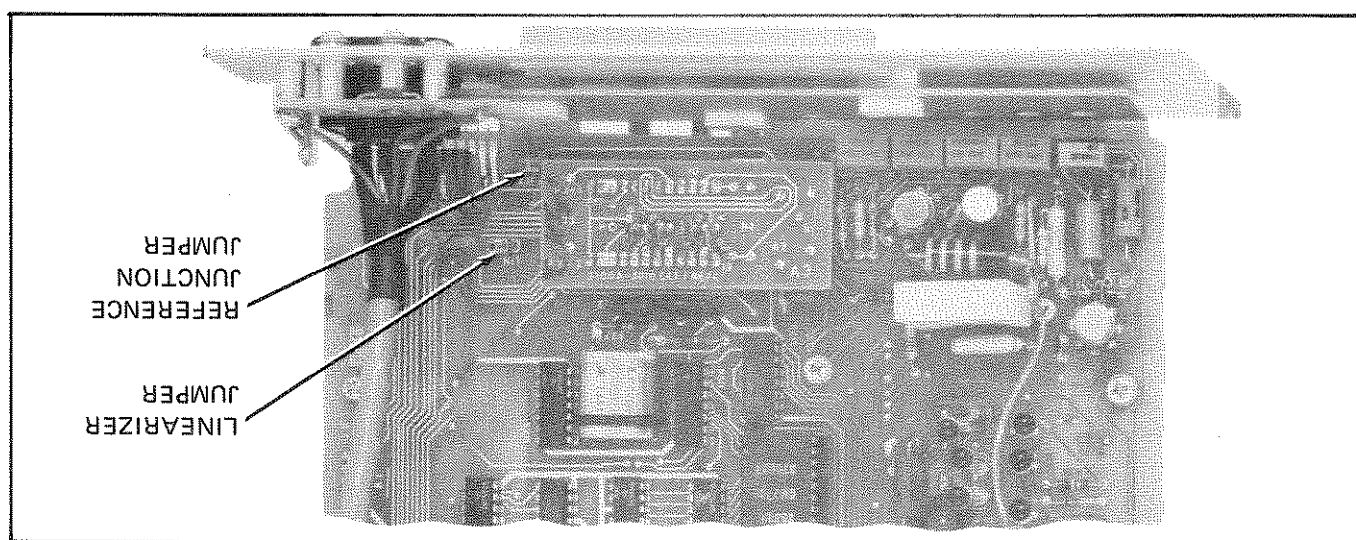


Table 4-2. COMPARATOR CALIBRATION

THERMO-COUPLE TYPE	INPUT	DISPLAY	LIMITS	
			2100A	
J°F	+15.5uV	00.6	±1 digit	±1 digit
J°F	-15.5uV	-01.2	±1 digit	±1 digit
K°F	+11.5uV	00.6	±1 digit	±1 digit
K°F	-11.5uV	-01.2	±1 digit	±1 digit
T°F	+11.5uV	00.6	±1 digit	±1 digit
T°F	-11.5uV	-01.2	±1 digit	±1 digit
E°F	+20.0uV	00.6	±1 digit	±1 digit
E°F	-20.0uV	-01.2	±1 digit	±1 digit
R°F	+3.4uV	00.6	±1 digit	±1 digit
R°F	-3.4uV	-01.2	±1 digit	±1 digit
J°C	+30.0uV	00.6	±1 digit	±1 digit
J°C	-30.0uV	-01.2	±1 digit	±1 digit
K°C	+20.0uV	00.6	±1 digit	±1 digit
K°C	-20.0uV	-01.2	±1 digit	±1 digit
T°C	+20.0uV	00.6	±1 digit	±1 digit
T°C	-20.0uV	-01.2	±1 digit	±1 digit
E°C	+30.0uV	00.6	±1 digit	±1 digit
E°C	-30.0uV	-01.2	±1 digit	±1 digit
R°C	+3.4uV	00.6	±1 digit	±1 digit
R°C	-3.4uV	-01.2	±1 digit	±1 digit
40mV	+6.2uV	0.006	±1 digit	±1 digit
40mV	-6.2uV	-0.006	±1 digit	±1 digit
400 mV	+62.0uV	0.06	±1 digit	±1 digit
400 mV	-62.0uV	-0.06	±1 digit	±1 digit

4-27. Positive Full Scale Adjustment (POS CAL)

NOTE

Calibration procedures contained in paragraphs 4-27 through 4-30 may be omitted during routine calibration. These procedures should, however, be done after the instrument has been repaired or when improper instrument operation is suspected.

4-28. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure. Table 4-3 provides the value of the inputs required for each thermocouple type.

a. Apply the positive input, corresponding to the thermocouple type used, to the 2100A INPUT terminals (See Table 4-3).

b. Adjust POS. CAL. for a display within the tolerance limits specified in Table 4-3. (For the 2100A-06, adjust for each type and voltage range.)

NOTE

Use a shielded pair of copper conductor wires for these connections. Insure that the connections to the 2100A input are tight; loose connections may introduce errors in the calibration. (Do not use alligator clips!) The jumper between the 2100A LO and GD terminals must be installed.

b. Connect a 0.47 microfarad (mylar or polystyrene) capacitor across the voltage divider output terminals (high to low).

c. Turn the dc voltage calibrator and the 2100A on and allow 30 minutes for the instruments to warm up.

4-25. Comparator Adjustment (COMP ADJ)

4-26. The input voltage level required depends on the type of thermocouple used. Adjust the controls of the voltage divider to provide a 1000:1 division ratio. Then adjust the dc voltage calibrator output to obtain the correct input voltage to the 2100A. Table 4-2 provides the required input for each thermocouple type, the required 2100A display, and the tolerance limits for the display. Use the following procedure to make the adjustment.

NOTE

Short the 2100A input and check the display for 00.0 ±1 digit. If the display is not within ±1 digit recheck Zero Adjustment.

a. Apply the negative input, indicated in Table 4-2, that corresponds to the thermocouple type in use. (For the 2100A-06, use the 40 mV range for this adjustment.) (For R or S type, use positive polarity only.)

b. Adjust the COMP ADJ (R50) for a 2100A display within the limits specified.

c. Change the input to positive, as indicated in Table 4-2, and check for a display within the limits listed. If not, adjust the ZERO ADJ (R51) then repeat steps (a) and (b).

d. Remove the dc voltage from the 2100A input and short the HI and LO terminals together.

e. Check for a 2100A display of 00.0 ±1 digit (for the 2100A-06, check on the 40 mV range).

If paragraphs 4-27 through 4-30 have been skipped, adjust POS. CAL. for a display within the verification limits indicated in Table 4-5. (For the 2100A-06, adjust for each type.)

For the 2100A-06, select the K type switch for this adjustment, then check the J, T, and E types. If the display is out of tolerance, recheck Positive Full Scale Adjustment. Adjust -40 and -400 for the corresponding millivolt range.

- a. Unplug the line power cord from the 2100A.
- b. Remove the chassis retainer screws and slide the chassis out of the case about three inches.
- c. Plug the linearizer jumper into the Main PCB (See Figure 4-2).
- d. Slide the chassis back into the case and secure it with one screw.
- e. Short the INPUT HI and LO terminals together and verify that the display reads 00.0 ± 1 digit.
- f. Apply the positive and negative inputs, corresponding to the thermocouple type used, indicated in Table 4-5.
- g. Apply the negative input, corresponding to the thermocouple type used, to the 2100A INPUT terminals.

- a. Apply the negative input, corresponding to the thermocouple type used, to the 2100A INPUT terminals.
- b. Adjust NEG. CAL. for a display within the tolerance limits indicated in Table 4-4.

NOTE

4-30. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure. Table 4-4 provides the value of the inputs required for each thermocouple type.

4-29. Negative Full Scale Adjustment (NEG CAL)

4-32. The following procedure must be done with the linearizer jumper installed. A step-by-step installation procedure for the jumper is provided. Table 4-5 lists the inputs required for each thermocouple type and voltage range. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure.

THERMO-COUPLE TYPE	2100A		ADJUST-MENT LIMITS
	INPUT	DISPLAY	
J° F	+42.919mV	1716.7	±1 digit
K° F	+53.633mV	2896.2	±1 digit
T° F	+20.868mV	1126.8	±1 digit
E° F	+77.712mV	2564.5	±1 digit
R° F	+20.917mV	3765.0	±1 digit
S° F	+18.553mV	3339.6	±1 digit
J° C	+42.919mV	901.3	±1 digit
K° C	+55.833mV	1675.0	±1 digit
T° C	+20.868mV	646.9	±1 digit
E° C	+73.355mV	1467.1	±1 digit
R° C	+21.096mV	3797.3	±1 digit
S° C	+18.704mV	3366.8	±1 digit
40mV	+39.000mV	39.000	±1 digit
400mV	+390.00mV	390.00	±1 digit

4-31. Linearized Gain Check

THERMO-COUPLE TYPE	2100A		ADJUST-MENT OR VERIFI-CATION LIMITS
	INPUT	DISPLAY	
J° F	-6.907mV	-552.6	±1 digit
K° F	-4.859mV	-524.8	±1 digit
T° F	-4.859mV	-524.8	±1 digit
E° F	-7.686mV	-507.3	±1 digit
J° C	-6.907mV	-290.1	±1 digit
K° C	-5.606mV	-336.4	±1 digit
T° C	-5.606mV	-347.6	±1 digit
E° C	-7.686mV	-307.5	±1 digit
40mV	-39.000mV	-39.000	±1 digit
400mV	-390.00mV	-390.00	±1 digit

Table 4-4. NEGATIVE FULL SCALE INPUTS

Table 4-3. POSITIVE FULL SCALE INPUTS

4-35. Reference Junction Calibration

4-36. REFERENCE JUNCTION JUMPER INSTALLATION

4-37. The reference junction jumper must be installed for the following adjustment procedure. Use the following procedure to install the jumper.

a. Unplug the line cord from the 2100A.

b. Remove the rear panel retaining screws and slide the chassis out of the case about three inches.

c. Plug the reference junction jumper into the Basic PCB (see Figure 4-2 for jumper location).

4-38. TEST EQUIPMENT CONNECTION

NOTE

Calibration procedures contained in paragraph 4-39 step (a) through (k) may be omitted during routine calibration. These steps must be done if U32 is replaced during repair of the instrument.

4-39. The following method of connecting the test equipment to the 2100A is recommended to reduce the possibility of damage to the 2100A caused by inadvertent shorting together of J1A and J1B signals. If an alternate method is used to make the required connections, use extreme care to prevent inadvertent shorting together of terminals of J1A or J1B, other than those required for the procedure. Connect the test equipment as described in the following procedure.

a. Remove the center enclosed screw from the lower half of the rear panel.

b. Remove the lower half of the rear panel, (2100A-03 or -06.) Use care when disconnecting the flat cable connection from J5 on the Basic PCB. For cable connection from J5 on the Basic PCB. Refer to Figure 4-4 for a description of the connections.

CAUTION

Because of the possibility of damage to the contacts of J5, caused by incorrect connector diameter, the external connections should be made to a flat cable connector (J.F. Part No. 376285). The flat cable connector can then be plugged into J5 on the Basic PCB. Refer to Figure 4-4 for a description of the connections.

Table 4-5. LINEARIZED GAIN CHECK

THERMO-COUPLE TYPE	2100A		LIMITS
	INPUT	DISPLAY	
J°F	+42.919mV	1374.9	±1 digit
K°F	+53.633mV	2400.00	±1 digit
T°F	+20.868mV	732.3	±1 digit
E°F	+77.712mV	1840.0	±1 digit
R°F	+20.917mV	3175.0	±3 digit
S°F	+18.553mV	3175.0	±3 digit
J°C	+42.919mV	760.0	±1 digit
K°C	+55.833mV	1400.0	±1 digit
T°C	+20.868mV	400.0	±1 digit
E°C	+73.355mV	960.0	±1 digit
R°C	+21.096mV	1767.0	±1 digit
S°C	+18.704mV	1768.0	±1 digit
J°F	-6.907mV	-320.0	±1 digit
K°F	-4.859mV	-292.2	±1 digit
T°F	-4.859mV	-320.0	±1 digit
E°F	-7.686mV	-320.0	±1 digit
J°C	-6.907mV	-162.8	±1 digit
K°C	-5.606mV	-183.0	±1 digit
T°C	-5.606mV	-200.0	±1 digit
E°C	-7.686mV	-161.5	±1 digit

4-33. Open Input Detector Circuit Check

4-34. The 2100A provides a display indication of an open input; i.e., nothing attached to the HI and LO INPUT terminals or an open thermocouple. The following procedure will verify the proper operation of this circuit.

a. Connect a 1k ±5% resistor between the HI and LO INPUT terminals. (For the 2100A-10, select the POINT select switch corresponding to the location of the attached resistor.)


b. The 2100A display should indicate 00.0 ±1 digit.

c. Replace the 1k resistor with a 2k ±5% resistor.

d. The 2100A display should now be blank except for the decimal point and possibly the minus polarity sign.

- c. Slide the chassis back into the case and secure it with one screw. (Insure that the test equipment input is not shorted to the 2100A case.)
- d. Attach the line cord to the 2100A and press the POWER switch to the on position.
- e. Apply -540.0mV through the flat cable connector, power supply low output to J5 pin 6 and power supply high output to J5 pin 5.
- f. Adjust REF JCT (R52) for a 2100A display (see Table 4-6) corresponding to the thermocouple type installed (2100A-03 and -10). For the 2100A-06 type thermocouple. Adjustments R39, R40, R41, R42, and R43 on the Multi-Type PCB adjust for the K type, T type, E type, R type, and S type respectively. Select each type and adjust the display to within the tolerances given in Table 4-6.

Figure 4-4. TEST EQUIPMENT CONNECTION FOR REFERENCE JUNCTION ADJUSTMENT

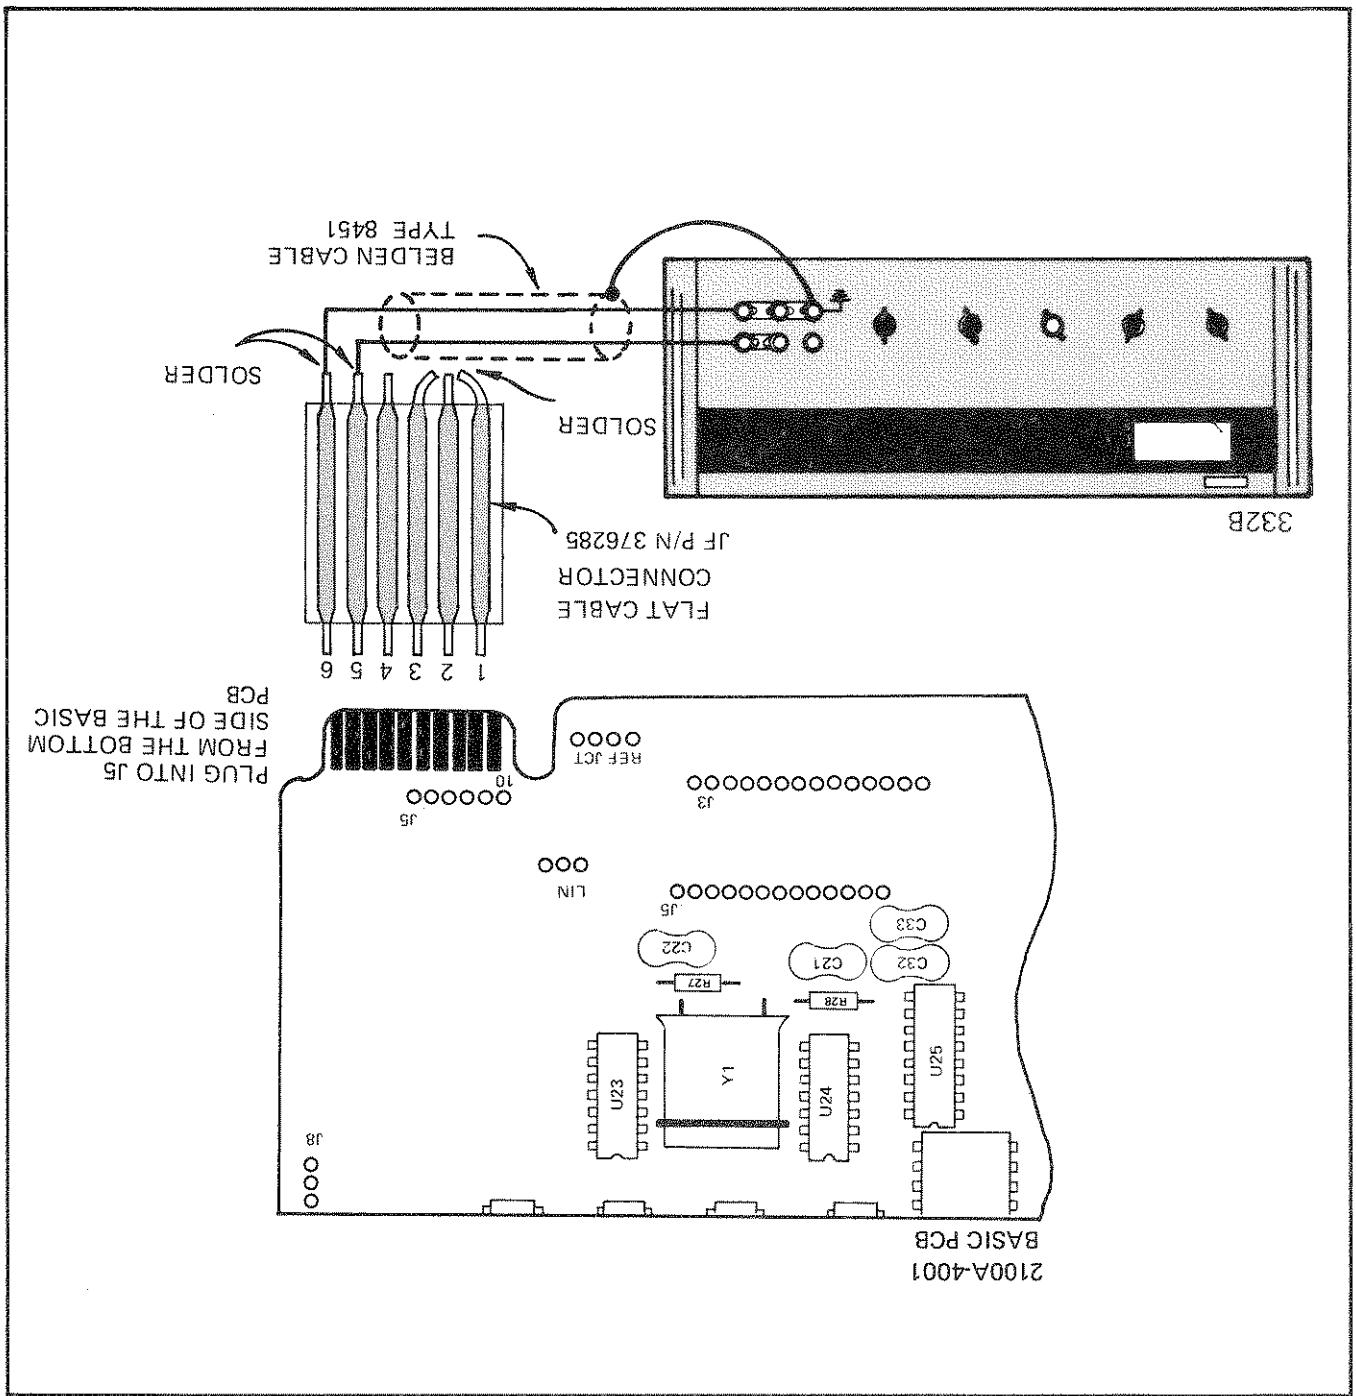

1. Connect the appropriate thermocouple to the HI and LO INPUT terminals (thermocouple wire with red insulation connects to LO). Use a J type thermocouple for the 2100A-06.

m. Insert a calibrated mercury-in-glass thermometer

a lag bath to a depth of four inches. Allow at least 20 minutes for the temperature to stabilize.

NOTE

A lag bath consists of a Dewar flask (vacuum bottle) filled with water at room temperature.

n. Slide the chassis out of the 2100A case about three inches and locate adjustment R3. (On the 2100A-03 and -06, R3 is located just on the inside of the lower half of the rear panel; on the -10, it is located just ahead of the INPUT terminals on the Multi-Point PCB.

o. Adjust R3 for a 2100A display indication, as corrected by Table 4-7, corresponding to the actual temperature indicated on the calibration thermometer.

Table 4-7. REFERENCE JUNCTION ADJUSTMENT CORRECTIONS

THERMO-COUPLE TYPE	
JF	Adjust to read actual temperature
KF	Adjust to read actual temperature
TF	Adjust to read actual temperature
EF	Adjust to read actual temperature
RF	Adjust to read actual temperature
SF	Adjust to read actual temperature
JC	Adjust to read actual temperature
KC	Adjust to read 0.1°C lower than actual temperature.
TC	Adjust to read actual temperature.
EC	Adjust to read actual temperature
RC	Adjust to read 0.1°C lower than actual temperature.
SC	Adjust to read 0.1°C lower than actual temperature.

Table 4-6. REFERENCE JUNCTION ADJUSTMENT LIMITS

THERMO-COUPLE TYPE	2100A	
	INPUT	DISPLAY
J° F	-540.0mV	77.0
K° F	-540.0mV	77.0
T° F	-540.0mV	77.1
E° F	-540.0mV	77.1
R° F	-540.0mV	77.0
S° F	-540.0mV	76.8/77.0
J° C	-540.0mV	24.9
K° C	-540.0mV	25.0
T° C	-540.0mV	25.0
E° C	-540.0mV	25.0
R° C	-540.0mV	24.9/25.0
S° C	-540.0mV	25.0

* The display may momentarily indicate ± .2 indicated values; displaying each about half of the time.

** The display should alternate between the two indicated values; displaying each about half of the time.

g. Remove the test equipment connections from the 2100A.

h. Remove the reference junction jumper and replace the lower half of the rear panel (2100-03 or -06). For the 2100A-10, replace the Multi-Point PCB.

i. Short the 2100A INPUT HI and LO terminals together (use shorting bars). (Insure that the GD and LO terminals are connected together.)

j. Check 2100A display for 00.0 ± 1 digit; if needed, adjust ZERO ADJ (R51). For the 2100A-06, select the 40 mV range for the zero adjustment.

k. Remove the short from between the HI and LO INPUT terminals. (Insure that the LO and GD terminals are connected together and reinstall the REF JCT jumper.)

STEP	INSTRUCTION			GO TO
1	3	2	4	3
2	3	2	4	3
3	3	2	4	3
4	19	5	8	4
5	6	8	8	4
6	7	8	8	4
7	12	9	4	4
8	12	9	4	4
9	11	10	4	4
10	11	10	4	4
11	11	10	4	4
12	15	14	4	4
13	15	14	13	4
14	16	17	4	4
15	16	17	4	4

Table 4-8. TROUBLESHOOTING GUIDE

4-41. The following information is designed to aid in troubleshooting the 2100A instruments. The information presented in Table 4-8 provides procedural steps for locating the problem area within the 2100A. Some steps in the procedure require a decision, either yes or no, the answer to which indicates the next step to be completed. Possible causes for an incorrect response to the tests are provided.

4-42. Instructions for using the troubleshooting guide are as follows:

- Read the instruction in step 1 and make the yes or no decision.
- Refer to the column to the right of the step 1 instructions and proceed to the step corresponding to the decision.
- Execute the instructions in the indicated next step.

4-43. Replacement of CMOS or PMOS integrated circuits require special handling to prevent damage from static discharge through the devices. These integrated circuits are packaged in conductive foam when shipped and should not be removed until the time of installation. The repair personnel and the work surface should be commonly grounded.

4-44. Use caution when handling any of the following integrated circuits:

- On the Basic PCB – U1 thru U4, U6, U7, U22, or U25.
- On the DDU PCB - All integrated circuits.

When an instruction suggests corrective action, locate and correct the fault before proceeding to the next step.


NOTE

4-40. TROUBLESHOOTING

Table 4-8. TROUBLESHOOTING GUIDE (cont.)

STEP	INSTRUCTION	YES	NO	GO TO
16	Replace U1 (Basic PCB).		4	4
17	Check U17 (Basic PCB).		4	4
18	Check U1 on the Display PCB and U2, U3, U4, U6, U7, and Q1 on the Basic PCB.		4	4
19	Perform the operational evaluation as described in paragraph 4-13.		20	
20	Does the 2100A display indicate the temperature correctly?	21	22	
21	Perform the calibration procedure as described in paragraphs 4-16 through 4-37.			
<p>NOTE</p> <p><i>The results of the calibration procedure may point out some fault areas.</i></p>				
22	With the Linearizer jumper removed, attach test equipment as described in paragraph 4-36, to provide a —540 mV input to the 2100A.		23	
23	Connect an oscilloscope to TP5. Is the signal similar to waveform A in Figure 4-5?	25	24	
24	Connect the oscilloscope to TP4. Is the signal similar to waveform B in Figure 4-5?	27	26	
25	Replace integrated circuit U1 on the Basic PCB		19	
26	Use an oscilloscope to check for correct control signals as follows:			
	Connect the scope input to the collector of Q2; Is the signal similar to waveform C?	28	29, 32	
	Connect the scope input to the collector of Q4; Is the signal similar to waveform D?	28	30, 32	
	Connect the scope input to the collector of Q6; Is the signal similar to waveform E?	28	31, 32	
27	Troubleshoot U28, U29, and associated circuitry.		19	
28	Troubleshoot U30 and associated circuitry.		19	
29	Check for defective Q2, Q16, or U1.		19	
30	Check for defective Q4, Q11, Q19, or U1.		19	
31	Check for defective Q6, Q12, or U1.		19	
32	Check for the correct reference voltage as described in paragraph 4-19, section d and e.		19	

Figure 4-5. TROUBLESHOOTING WAVEFORMS

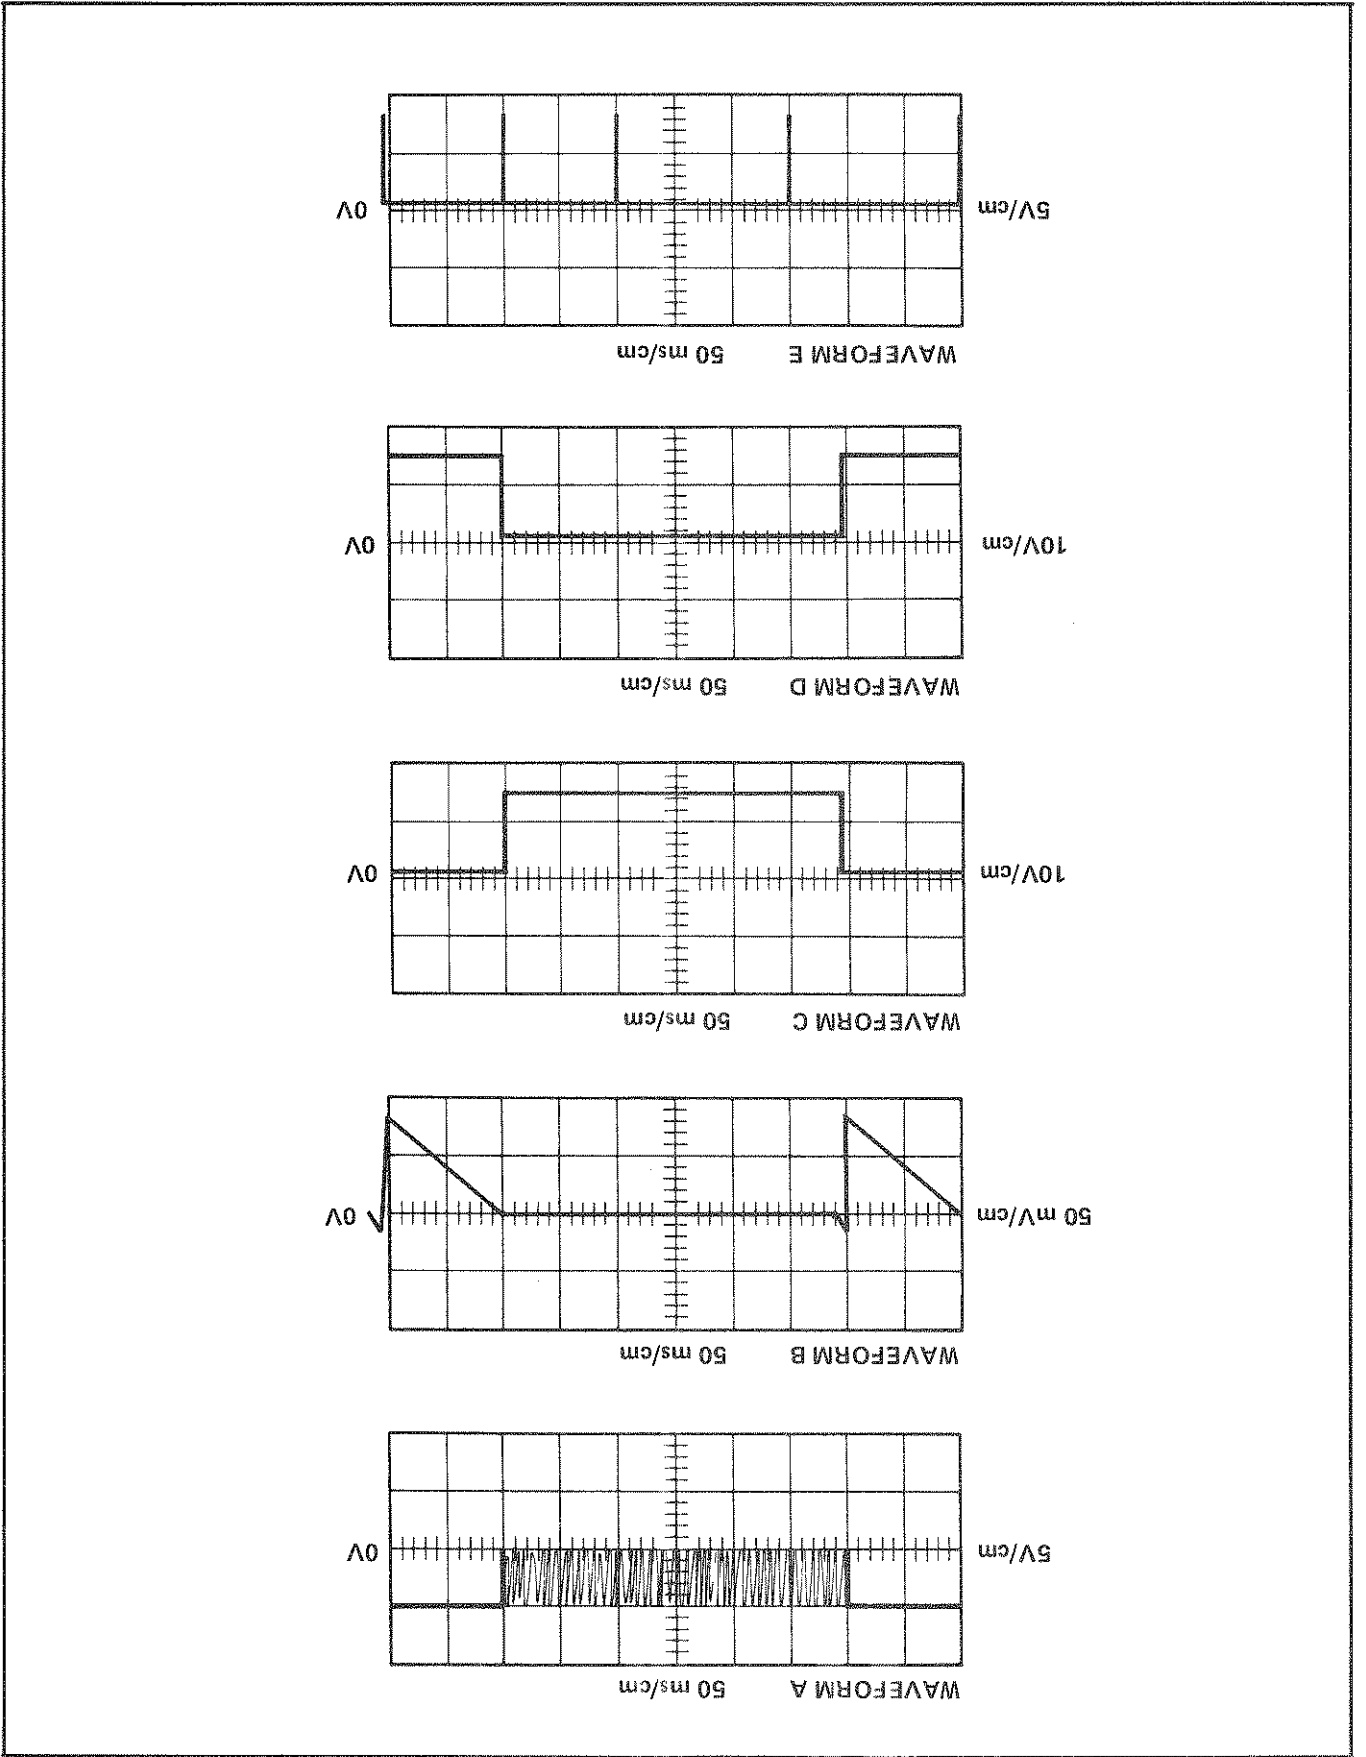

Section 5 Lists of Replacable Parts

REFERENCE DESIGNATOR	ASSEMBLY NAME	PAGE
A1	Basic PCB Assembly	S-8
A2	Display PCB Assembly	S-15
A4	Power Supply PCB Assembly	S-17
A3	Single Point Configuration (2100A-03)	S-19
	Single Type PCB Assembly	S-19
A5	Multi-Type Configuration (2100A-06)	S-24
A5	Type Select PCB Assembly ° C	S-26
A5	Type Select PCB Assembly ° F	S-30
	Multi-Point Configuration (2100A-10)	S-34
A6	Point Select PCB Assembly	S-35
	Battery Power Supply (2100A-01)	S-37
A7	Battery Charge PCB Assembly	S-38
A8	Digital Output Unit PCB Assembly (2100A-02)	S-39
	Analog Output Unit (2100A-04)	S-42

5-1. INTRODUCTION

5-2. This section contains an illustrated parts breakdown of the instrument. Components are listed alpha-numerically by assembly. Electrical components are listed by reference designation and mechanical components are listed by item number. Each listed part is shown in an accompanying illustration.

5-3. Parts lists include the following information:

- a. Reference Designation or Item Number.
- 5-6. To ensure prompt and efficient handling of your order, include the following information.

b. Description of each part.

c. Fluke Stock Number.

d. Federal Supply Code for Manufacturers. (See Appendix A for Code-to-Name list.)

e. Manufacturer's part Number or Type.

f. Total Quantity per assembly or component.

g. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one in each assembly in the instrument be stocked. In the case of optional subassemblies, plugs, etc. that are not always part of the instrument, or are deviations from the basic instrument mode, the RQC column lists the recommended quantity of the item in that particular assembly.

5-4. HOW TO OBTAIN PARTS

5-5. Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from the John Fluke Mfg. Co., Inc. factory or authorized representative by using the FLUKE STOCK NUMBER. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

5-6. To ensure prompt and efficient handling of your order, include the following information.

a. Quantity.

b. FLUKE Stock Number.

c. Description.

d. Reference Designation or Item Number.

e. Printed Circuit Board Part Number.

f. Instrument model and Serial number.

5 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	2100A FINAL ASSEMBLY	2100A					
	Basic Unit Assembly	2100A-03					
	Single Point Configuration	2100A-06					
	Multi-Type Configuration	2100A-10					
	Multi-Point Configuration	2100A-01					
	Battery Power Supply	2100A-02					
	Digital Output Unit	2100A-04					
	Analog Output Unit						

2100A FINAL ASSEMBLY

BASIC UNIT ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
14	Handle grip	284836	89536	284836	2		
15	Insert, non-skid foot	302026	89536	302026	4		
16	Insulator, bottom guard	401083	89536	401083	1		
17	Insulator, fastener	372342	89536	372342	11		
18	Insulator, spacer	372334	89536	372334	11		
19	Knob, female	309054	80536	309054	2		
20	Knob, male	309047	89536	309047	2		
21	Panel Insert, DOU	373274	89536	373274	1		
22	Post, jack black	162073	74970	108-903	1		
23	Post, jack red	162065	74970	108-902	1		
24	Pushbutton, green	268862	71590	J61993	1		
25	Rear Panel, upper	372250	89536	327250	1		
26	Shield, display	372326	89536	372326	1		
27	Washer, spring	228981	89536	228981	2		

Figure 5-1. BASIC UNIT ASSEMBLY (sheet 1 of 2)


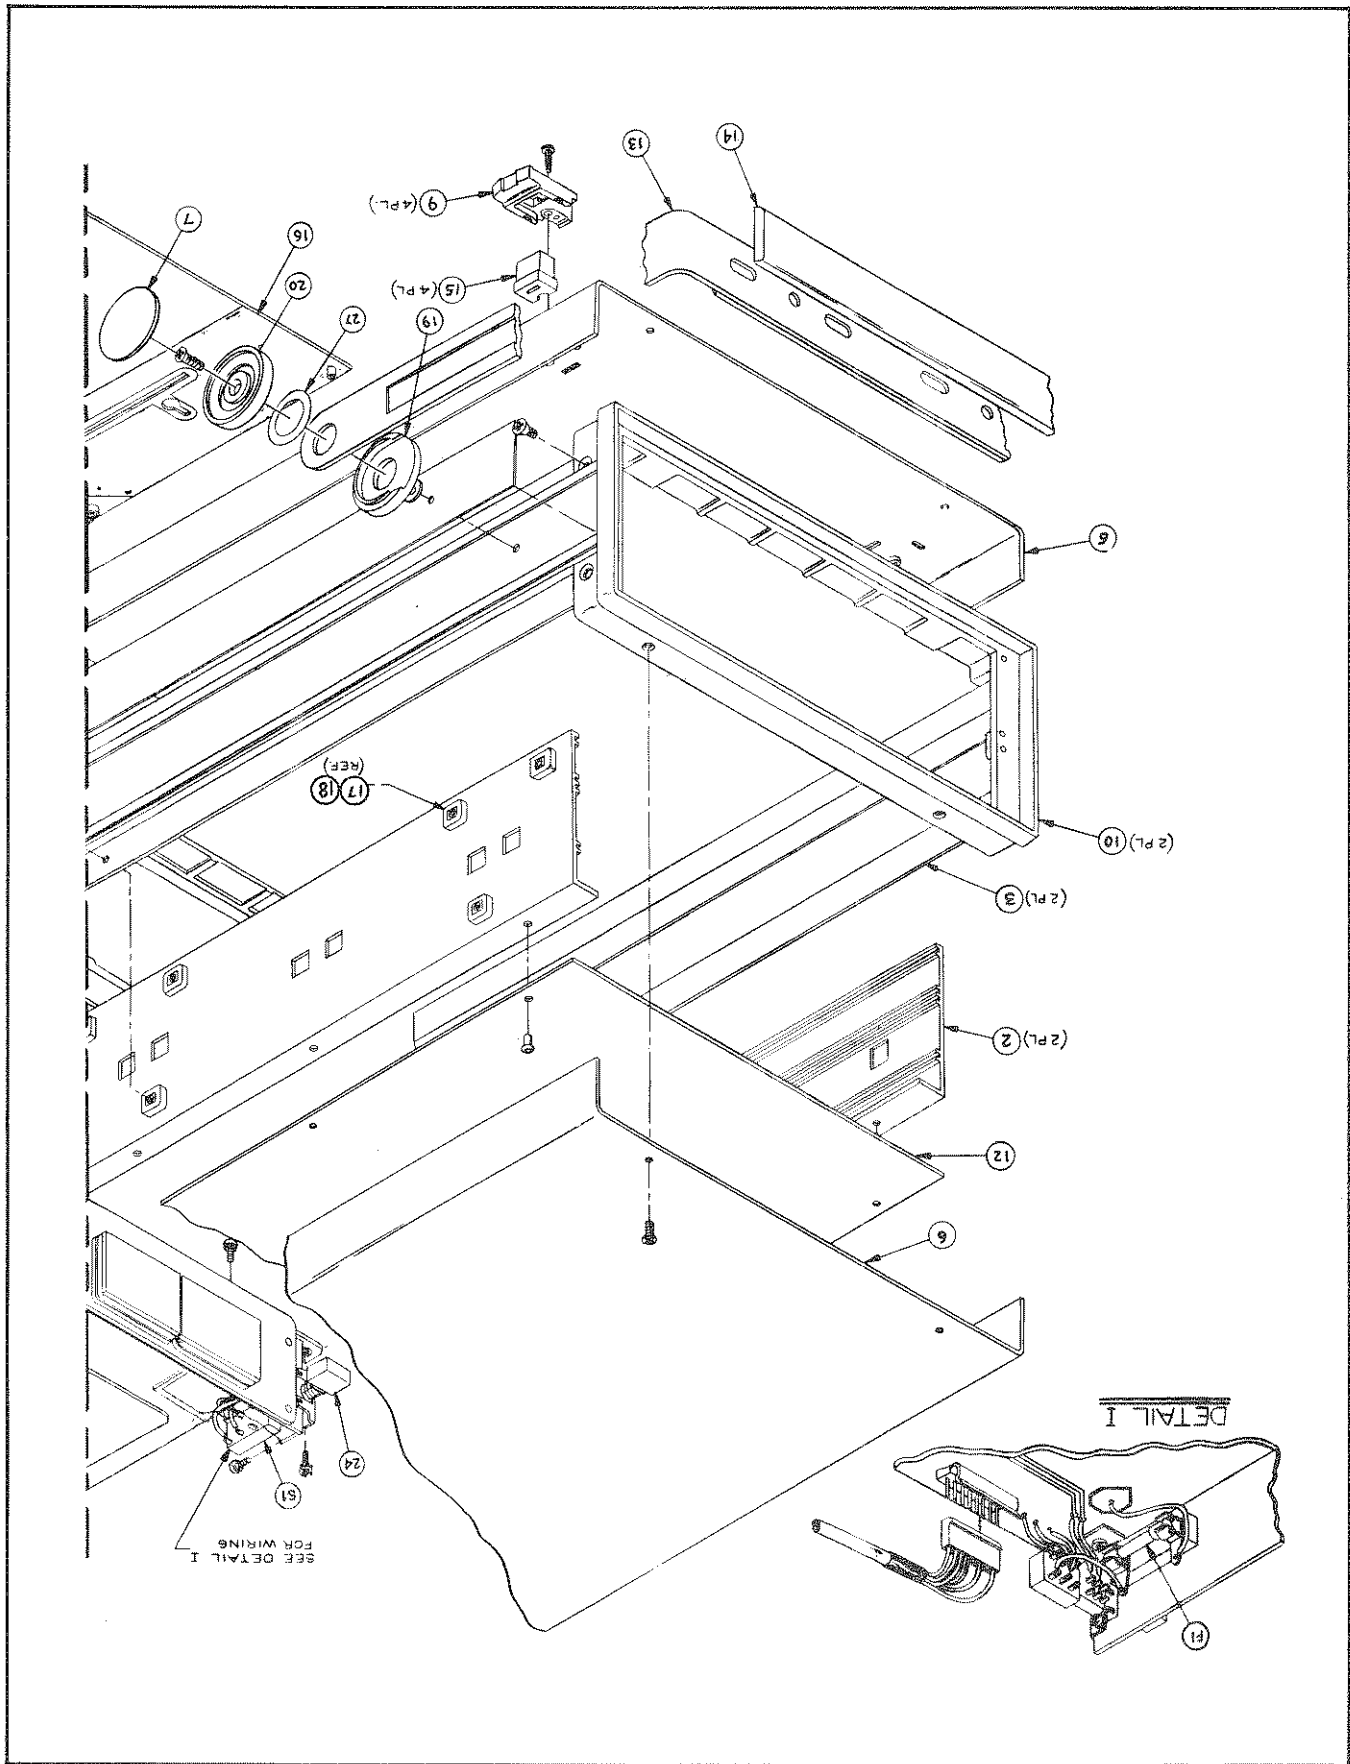


Figure 5-1. BASIC UNIT ASSEMBLY (sheet 2 of 2)

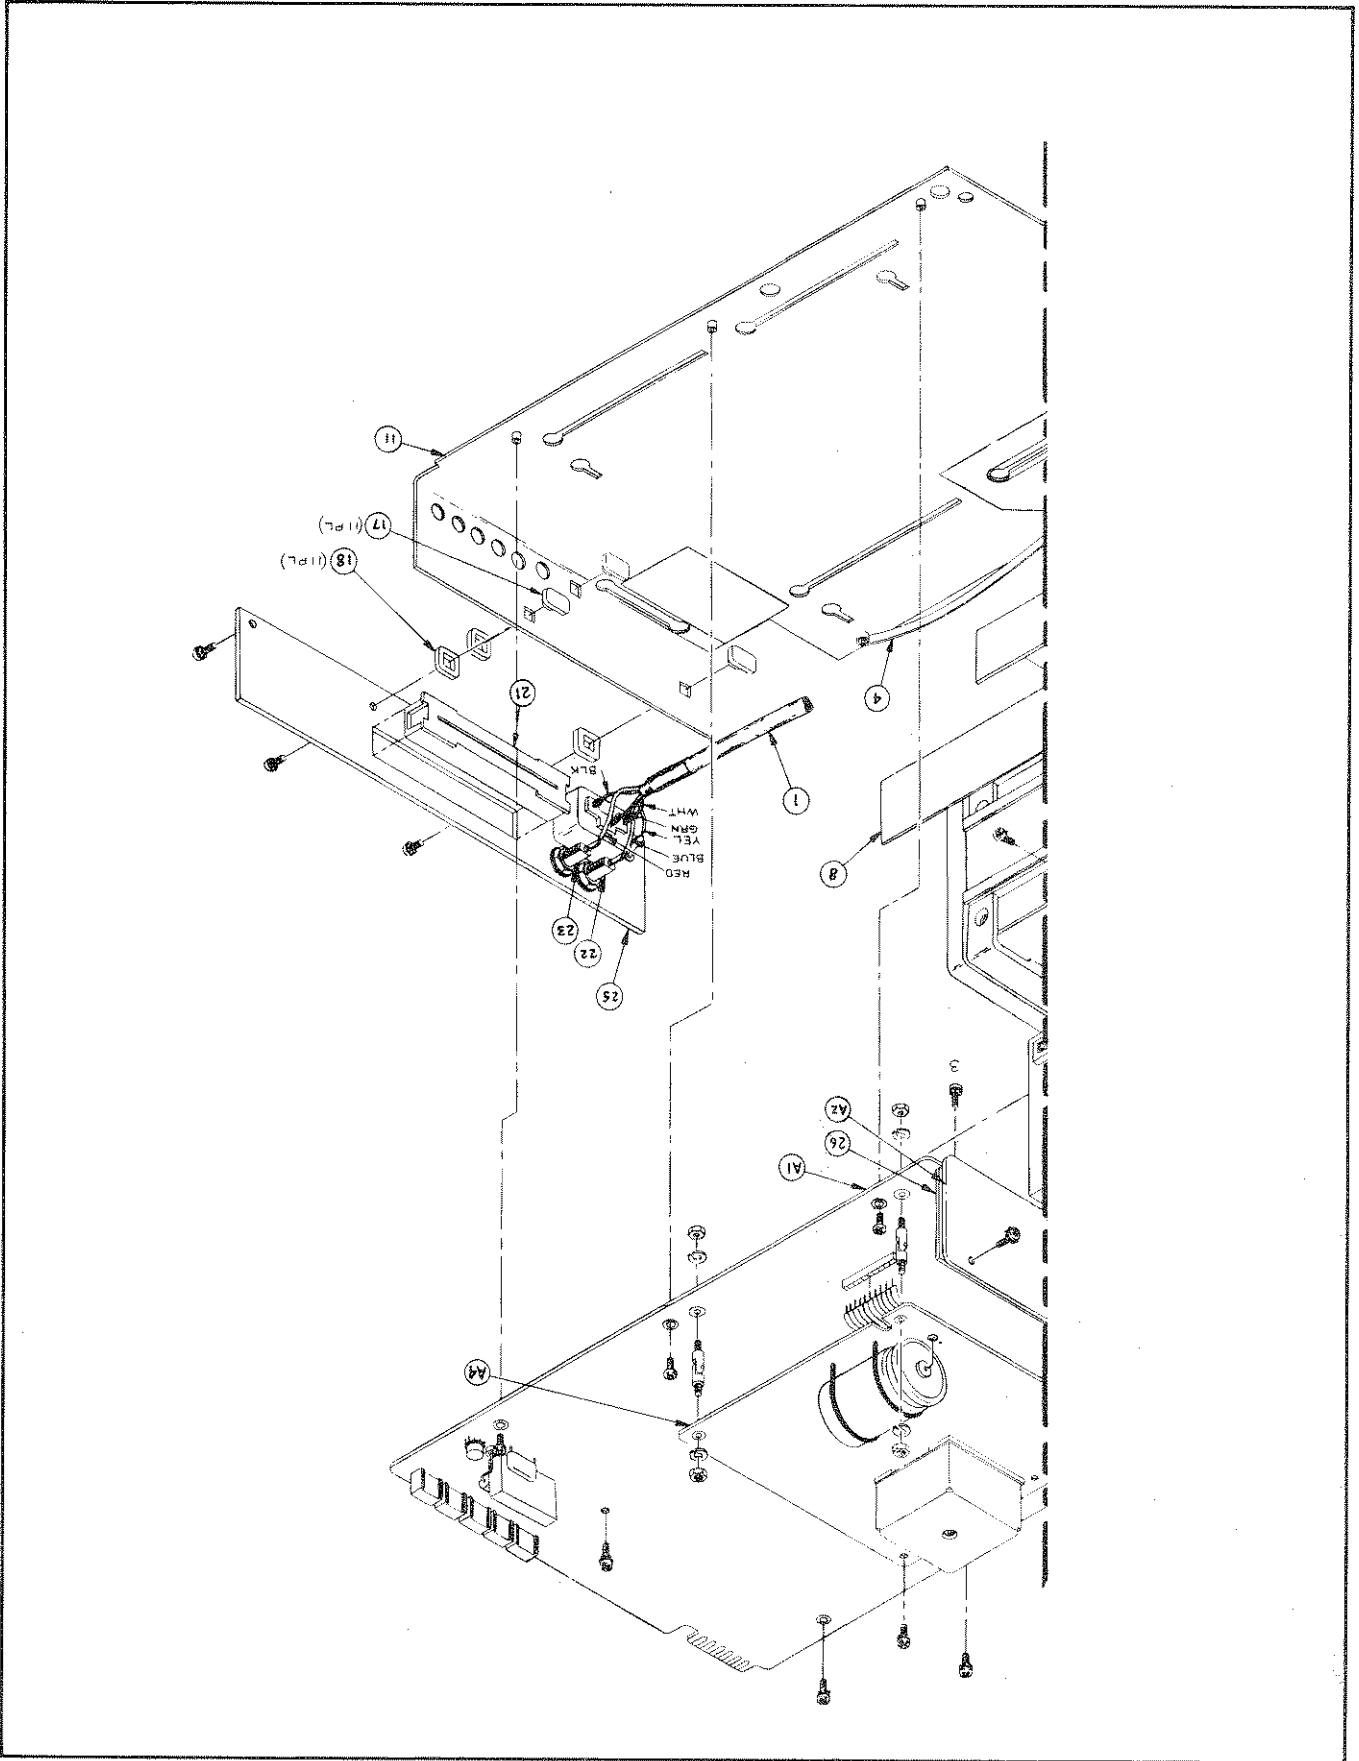

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR1	Diode, zener	113316	07910	IN748	1		
CR2 thru CR7, CR11, CR12, CR14, CR18	Diode, Si, Hi-speed switching	203323	07918	T08253	10		
CR8, CR10, CR13	Xstr, FED, N-channel	376475	12040	SP50072	9		
CR9	Diode, zener	159798	04713	IN751	1		
CR15, R45, R46	Zener, REF Set	377283	89536	377283	1		
CR16, CR17	Diode, Rect, Si	116111	05277	IN4817	2		
CR20	Diode, Rect, Si	343491	04713	IN4002	1		
Q1 thru Q5, Q10	Xstr, Si, NPN	218396	04713	2N3904	6		
Q6	Xstr, Si, NPN	159855	07910	CS23030	1		
Q7	Xstr, power, Si, PNP	325753	03508	D45C5	1		
Q8	Xstr, Si, PNP	352369	04713	2N4403	1		
Q9	Xstr, Si, PNP	195974	04713	2N3906	1		
Q11, Q12, Q16, thru Q19	Xstr, FET, N-channel (See CR8)	376475	12040	SF50072	REF		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q13	Xstr, FET, selected	402024	89536	402024	1		
Q14, Q15	Xstr, FET, N-channel	288324	12040	SF50070	2		
R1, R4	Res, comp, 4.7k ±5%, ¼W	148072	01121	CB4725	2		
R2	Res, comp, 68k ±5%, ¼W	148171	01121	CB6835	1		
R3	Res, comp, 27k ±5%, ¼W	148148	01121	CB2735	1		
R5, R10	Res, comp 47k ±5%, ¼W	148163	01121	CB4735	2		
R6, R38	Res, comp, 100k ±5%, ¼W	148189	01121	CB1045	2		
R7, R8	Res, comp, 2.2k ±5%, ¼W	148049	01121	CB2225	2		
R9	Res, comp, 43k ±5%, ¼W	193367	01121	CB4335	1		
R11, R12, R16	Not used						
R13	Res, comp, 1k ±5%, ¼W	148023	01121	CB1025	1		
R14	Res, met flm, 332k ±1%, 1/8W	289504	91637	MFFI-83323F	1		
R15	Res, comp, 3m ±5%, ¼W	221952	01121	CB3055	1		
R17	Res, met flm, 49.9 ±1%, 1/8W	305896	91637	MFFI-849R9F	1		
R18	Res, comp, 3.3k ±5%, ¼W	148056	01121	CB3325	1		
R19	Not used						
R20, R26	Res, comp, 1.5k ±5%, ¼W	148031	01121	CB1525	2		
R21	Res, comp, 75 ±5%, ¼W	246736	01121	CB7505	1		
R22	Res, comp, 120k ±5%, ¼W	193458	01121	CB1245	1		

BASIC PCB ASSEMBLY (Cont.)

BASIC PCB ASSEMBLY (Cont.)

REF OR DESIGN	ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R23, R24, R25, R27, R34, R56, R58		Res, comp, 10k ±5%, ¼W	148106	01121	CB1035	7		
R28		Res, comp, 1M ±5%, ¼W	182204	01121	CB1055	1		
R29		Res, met flm, 30.6k ±1%, 1/8W	281121	01637	MFFI-88062F	1		
R30		Res, met flm, 182k ±1%, 1/8W	241091	91637	MFFI-81823F	1		
R31		Res, met flm, 402 ±1%, 1/8W	289611	91637	MFFI-84020F	1		
R32, R33		Res, met flm, 10.02k ±1%, 1/8W	352245	91637	MFFI-8-10-0210-IPCT	2		
R35		Res, comp, 300 ±5%, ¼W	348276	01121	CB3015	1		
R36		Res, comp, 16k ±5%, ¼W	221606	01121	CB1635	1		
R37		Res, fxd, sub-mini, 22, 1k, ±0.1%, ¼W	385500	54294	SP21D5102B	1		
R39		Res, met flm, 10 ±0.1%, 1/8W	375501	91637	MFFI-8100B	1		
R40		Res, comp, 10m ±5%, ¼W	194944	01121	CB1065	1		
R41		Res, comp, 33k ±5%, 2W	158964	01121	HB3335	1		
R42, R43		Res, matched set	412056	89536	412056	2		
R44		Res, met flm, 24.9k ±1%, 1/8W	290106	91637	MFFI-82492F	1		
R47		Res, met flm, 61.9k ±1%, 1/8W	237230	91637	MFFI-86192F	1		
R48		Res, sub-mini, ww, 20k ±0.1%, ¼W	385591	54294	SP21D5203B	1		
R49		Res, sub-mini, ww, 10k ±0.1%, ¼W	385534	54294	SP21D5103B	1		
R50, R51		Res, var, cer, 100k ±10%, ¼W	288308	71450	360S104K	2		
R52		Res, var, cer, 50 ±10%, ¼W	285122	71450	360S500A	1		
R53		Res, var, cer, 500 ±10%, ¼W	291120	71450	360S501A	1		


REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R54	Res, var, cer, 100 ±10%, 1/4W	285130	71450	360S101A	1		
R57	Res, comp, 470k ±5%, 1/4W	188441	01121	CB4745	1		
R60	Res, comp, 5.1m ±5%, 1/4W	296467	01121	CB5155	1		
U1	IC, C-MOS, custom	354985	89536	354985			
U2,U3, U4	IC, C-MOS, quad, 2-input, NAND gate	355198	95303	CD4011AE	3		
U5,U10, U15	IC, Dual, JK master-slave Flip-Flop	293043	01295	SN74107N	3		
U6,U25	IC, COS-MOS, Hex, Buffer/Inverter	381848	95303	CD4049AE	2		
U7	IC, MOS, Dual "D" Type Flip-Flop	340117	04713	MC14013L	1		
U8	Res, network, 47k ±5%, 1/4W	381996	56289	Type 916C	1		
U9,U16	IC, TTL, Hex Inverter	292979	01295	SN7404N	2		
U11	IC, TTL, Triple, 3-input positive NAND gate	292995	01295	SN7410N	1		
U12, U17	IC, TTL, Quad, 2-input NAND gate	292953	01295	SN7400N	2		
U13	IC, TTL, Quad, 2-input, positive AND gate	292987	01295	SN7408N	1		
U14, U18	IC, TTL, Quad, 2-input, positive NAND gate	292961	01295	SN7403N	2		
U19	IC, TTL, 5-Bit Shift Register	293399	01295	SN7496N	1		
U20	IC, TTL, 4-Bit Binary Counter	320739	01295	SN7493N	1		
U21	IC, TTL, MSI, Counter, Multiplier, 6-Bit Binary Rate	370692	01295	SN7497N	1		
U22	IC, ROM, for 'C'	370023	89536	370023	1		
U23	IC, TTL, Dual 4-input positive NAND Buffer	293001	01295	SN7420N	1		
U24	IC, TTL, Quad, 2-input positive OR gate	342709	01295	SN7432N	1		

BASIC PCB ASSEMBLY (Cont.)

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY USE	TOT QTY REC	USE CDE
U26	Res, network	375097	71450	TYPE 760	1		
U27, U33	IC, Op-Amp	271502	12040	LM 301A	2		
U28	IC, Voltage Comparator	352195	12040	LM311N-8	1		
U29	IC, Op-Amp, J-FET	357830	12040	LH0042C	1		
U30	IC, Op-Amp	284760	12040	LM308H	1		
U31, U32	IC, Op-Amp	225961	34333	SG-8023	2		
Y1	Crystal, 1 MHZ	375493	75378	Type H17	1		
1	Connector, PCB	376384	27264	09-52-3101	1		
2	Socket, IC	376236	23880	TSA-3100-24W	1		
3	Socket, IC	376244	23880	TSA-3100-40W	1		
4	Socket	392944	00779	3-332070	9		


Figure 5-2. BASIC PCB ASSEMBLY

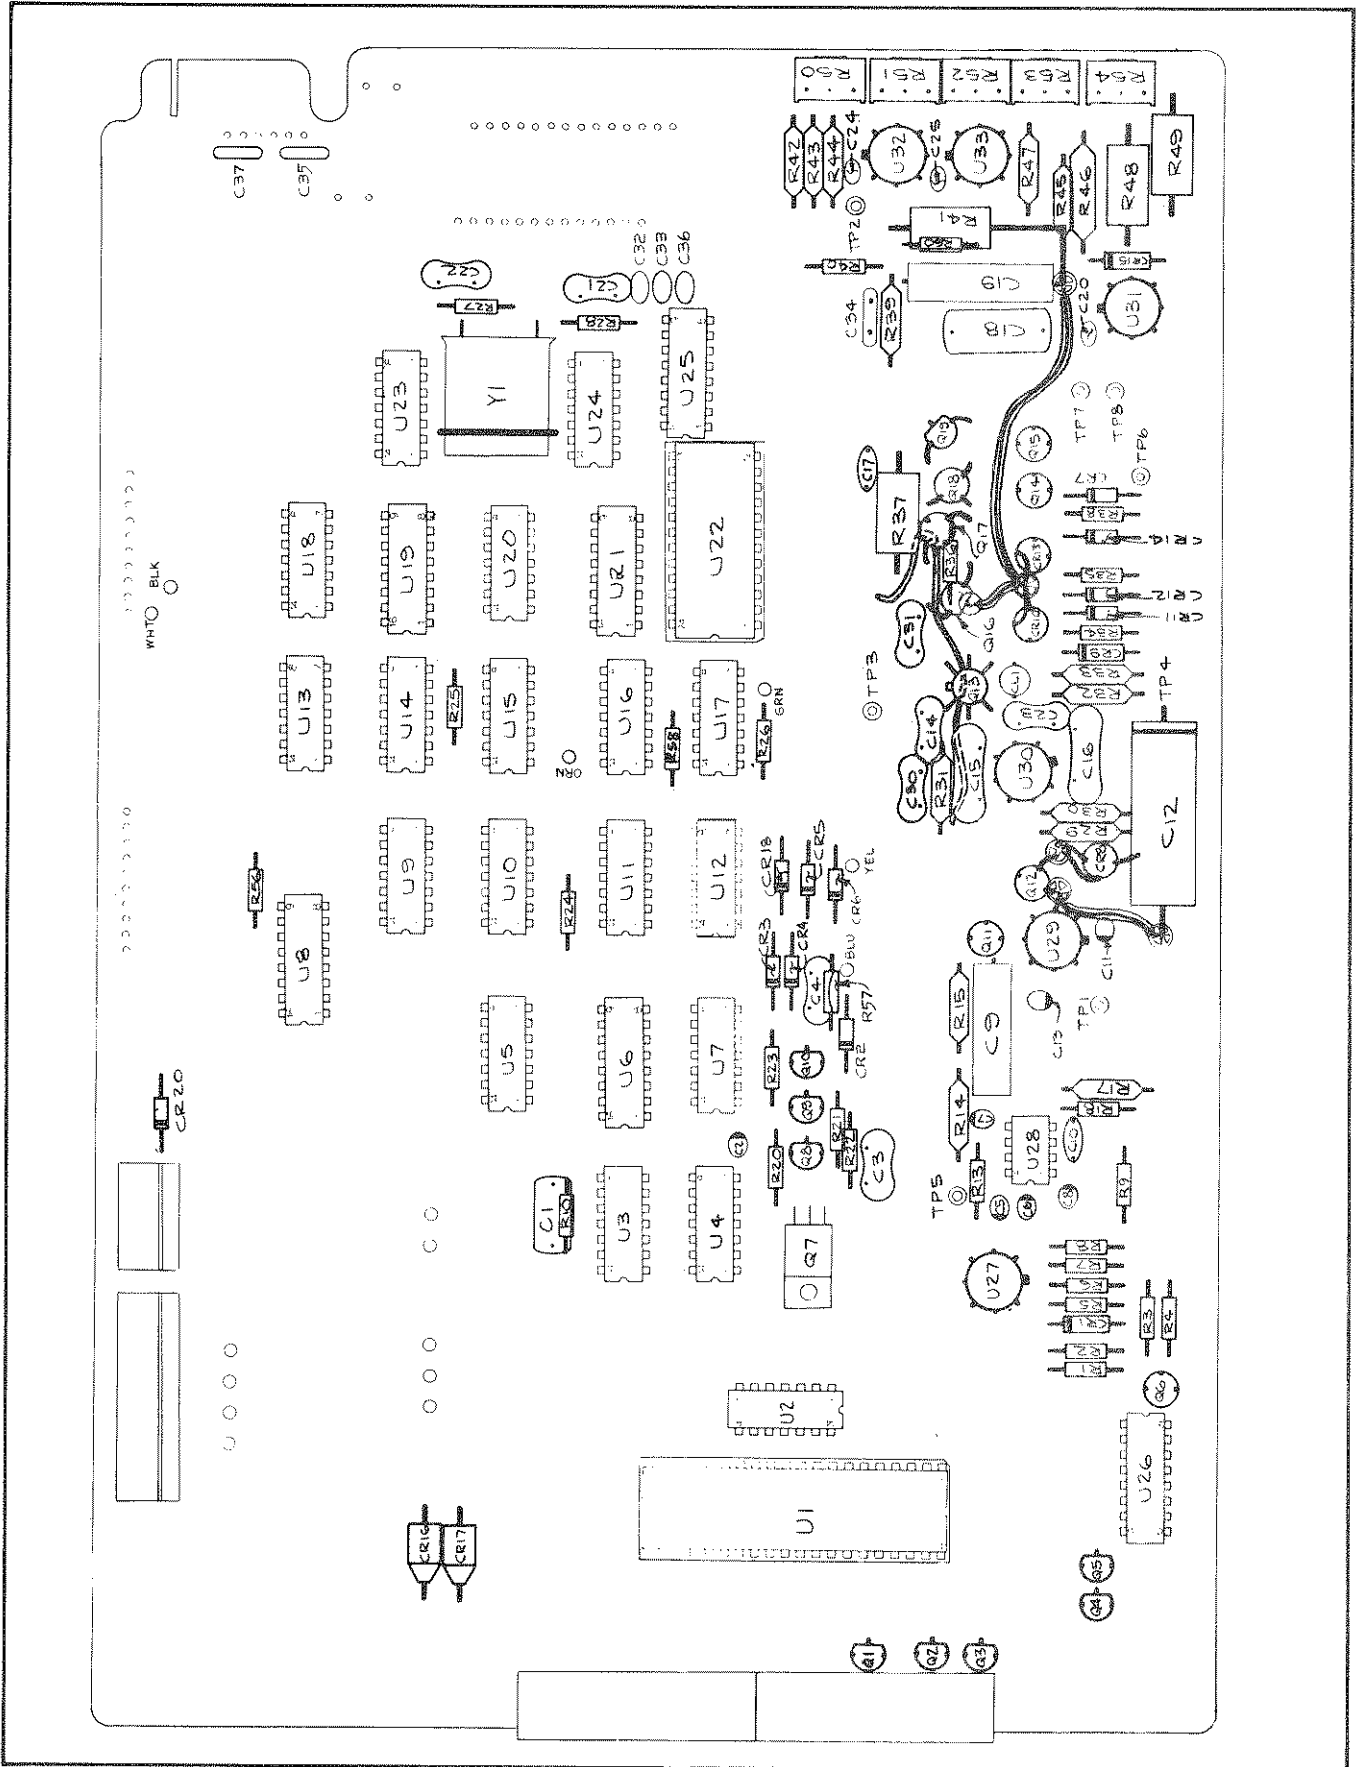

DISPLAY PCB ASSEMBLY

REF	DESIG	ITEM	OR	NO.	DESCRIPTION	FLUKE	STOCK	NO.	MFG	FED	SPLY	CDE	MFG	PART	NO.	OR	TYPE	TOT	REC	USE
																		QTY	QTY	CDE
A2	DIS1,	DS2,	DS3		DISPLAY PCB ASSEMBLY	368134			89536	368134	REF									
	DS4	DS5,	DS6		Display	370718			ZZZZ	SP353	1									
	P1,	P2,	Q1	Q6	Conn, PCB Interconnect	376400			27264	-9-64-1101	2									
	Q7	thru	Q12		Xstr, SI, PNP	266619			07263	PN4888	6									
	Q15,	Q16			Xstr, SI, NPN	245480			04713	ST 81011	2									
	Q18				Xstr, SI, NPN	159855			07910	CS23030	1									
R3					Res, comp, 6.2K ±5%, ¼W	221911			01121	CB6225	1									
R4					Res, comp, 3.9K ±5%, ¼W	148064			01121	CB3925	1									
R5					Res, comp, 18K ±5%, ¼W	148122			01121	CB1835	1									
R6					Res, comp, 10K ±5%, ¼W	148106			01121	CB1035	1									
U1					IC, TTL, High Voltage, 7-segment Driver Decoder	330837			ZZZZ	DD700	1									
U2					Res, network, 16 peices	375089			11236	Type 760	1									
					Socket, IC	376202			ZZZZ	CS353	2									


Figure 5-3. DISPLAY PCB ASSEMBLY

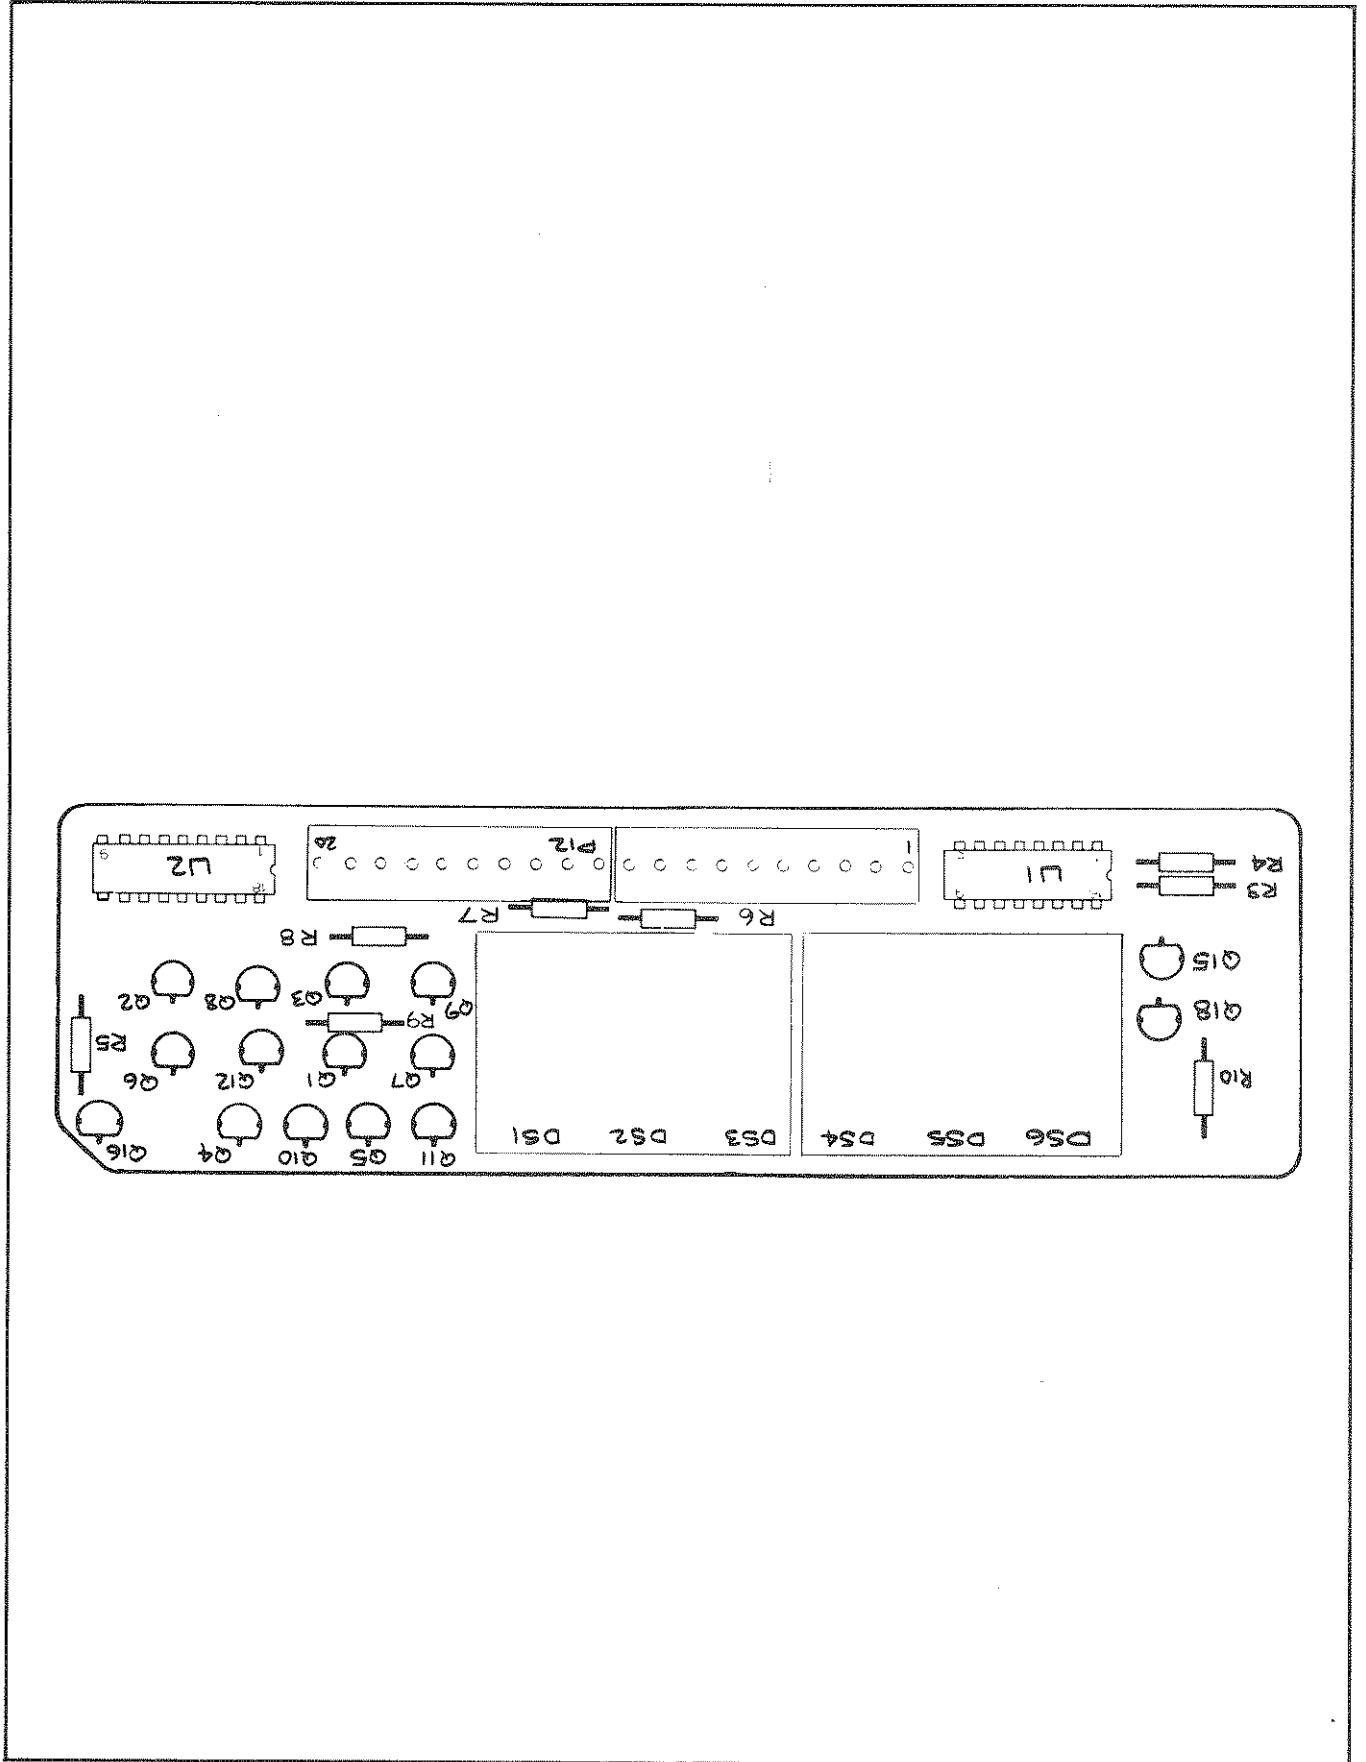

POWER SUPPLY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REF
A4	POWER SUPPLY PCB ASSEMBLY Figure 5-4	371534	89536	371534	REF	
C1	Cap, elect, 4000 uF -10/+100%, 25V	370734	25088	B41010-2200115	1	
C2	Cap, fxd, poly-film, 0.01uF ±10%, 250V	325548	73445	C280AE/A10K	1	
C3	Cap, pistic, 0.022 uF ±10%, 250V	234484	73445	C280A+/A22K	1	
C4	Cap, pistic, 0.047 uF ± 250V	184366	73445	C280A+/A470K	1	
C5	Cap, mica, 1000 pF ±5%, 500V	148387	71236	DM19F102J	1	
C6	Cap, elect, 3 uF -10/+50%, 250V	306555	56289	500D305F250- DC7	1	
C7	Cap, elect, 150 uF - 10/+50%, 16V	186296	73445	ET151X016A5	1	
C8,C9	Cap, elect, 100 uF -10/+50%, 25V	192914	73415	ET101X025A5	2	
C12	Cap, elect, 470 uF -10/+50%, 6.3V	187773	73445	ET471X6P3A6	1	
C13	Cap, fxd, cer, 0.0012 uF ±10%, 500V	106732	71590	CF122	1	
CRI	Diode, zener, 6.8V	260695	07910	1N754A	1	
CR2	Diode, Si, 150 mA	203323	07910	TD8253	1	
CR3	Diode, zener	386557	07910	1N960B	1	
CR4	Diode, Si, 1 Amp 600 piv	112383	05277	1N4822	1	
CR5	Diode, Si, 1 Amp, 100 piv	116111	05277	1N4817	7	
CR11						
Q1, Q4, Q5	Xstr, Si, PNP, pwr	325753	09214	D45C5	3	
Q2	Xstr, Si, PNP	352369	07263	2N4403	1	
Q3	Xstr, Si, PNP	195974	04713	2N3906	1	
R1	Res, comp, 47 ±5%, ¼W	147892	01121	CB4705	1	
R2	Res, comp, 680 ±5%, ¼W	148007	01121	CB6815	1	
R3, R7	Res, comp, 100 ±5%, ¼W	147926	01121	CB1015	2	
R4	Res, var, cermet, 200 ±10%, ¼W	275743	71450	360%201A	1	

Figure 5-4. POWER SUPPLY PCB ASSEMBLY

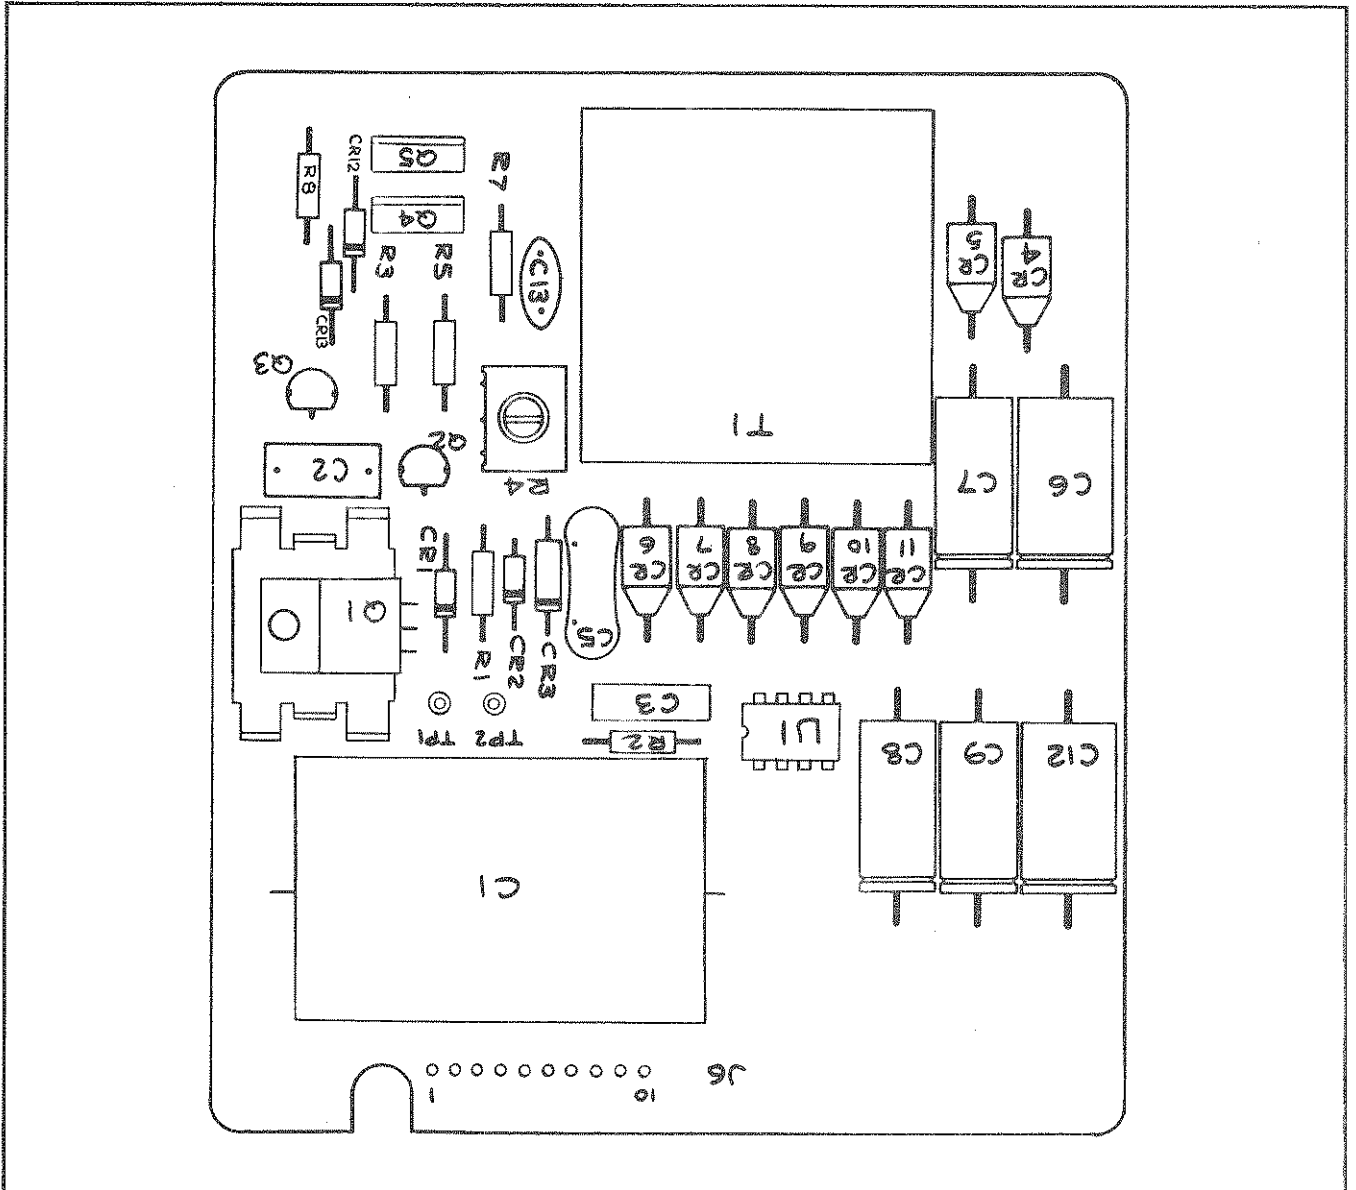

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY CDE	REC QTY CDE
R5, R6	Res, comp, 470 \pm 5%, 1/4w	147983	01121	CB4715	2	
T1	Xfmr, Inverter	377929	89536	377929	1	
U1	IC, Linear Voltage Regulator	363861	49956	RC4195 DN	1	
	Cable, flex	376293	26394	100F40182A10	1	
	Heat sink	352765	13103	6107B14	1	
	Strap, rubber round	104794	98159	2829-115-3	1	

POWER SUPPLY PCB ASSEMBLY (Cont.)

SINGLE INPUT CONFIGURATION

REF	DESIG	OR	ITEM	NO.	DESCRIPTION	FLUKE	STOCK	NO.	MFG	FED	SPLY	CDE	MFG	PART	NO.	OR	TYPE	TOT	QTY	REC	USE	
					Figure 5-5 SINGLE INPUT CONFIGURATION	2100A-03																
				1	Decal, AC Power, Front Panel	89536	381152	381152										1				
				2	Decal, Front Panel Basic	89536	380873	380873										1				
				3	Insert, Front Panel	89536	372359	372359										1				
				4	Front Panel, Finished	89536	397653	397653										1				
				5	Single Input PCB	89536	405316	405316										1				
			A3		Single Type PCB Assembly Figure 5-6	89536	415893	415893														
			R1		Res, var, 100 ±20%, ½W	89536	278923	11236	190PC101B									1				
			R2		Res, fxd, ww, sub-mini, 11.35k ± 0.1%	54294	385542	54294	SP2IDS - 113 50B									1				
			R3		Res, met flm, 7.68k ±1%, 1/8W	91637	370999	91637	MFFI-87R68F									1				
			R4		Res, met flm, 37.01k ±0.1%, 1/8W	91637	386425	91637	MFFI-837R01B									1				
			R5		Res, met flm, 19.901k ±0.1%, 1/8W	91637	386334	91637	MFFI-819R90B									1				
			TYPE	EF		415836	415836	89536	415836													
			R1		Res, var, 200 ±20%, ½W	11236	284711	11236	190PC 201B									1				
			R2		Res, fxd, ww, sub-mini, 19.41k ±0.1%	54294	385583	54294	SP2IDS-19410B									1				
			R3		Res, met flm, 12.4k ±1%, 1/8W	91637	261644	91637	MFFI - 812R4F									1				
			R4		Res, met flm, 95.52k ±1%, 1/8W	91637	386417	91637	MFFI-895R52B									1				
			R5		Res, met flm, 19.90k ±0.1%	91637	386334	91637	MFFI-819R90B									1				
			TYPE	JC		415836	415836	89536	415836													
			R1		Res, var, 100 ±20%, ½W	11236	267823	11236	190PC 201B									1				
			R2		Res, fxd, ww, sub-mini, 11.97k ±0.1%	54294	385559	54294	SP105-11970B									1				
			R3		Res, met flm, 8.06k ±1%, 1/8W	91637	294942	91637	MFFI-88061F									1				
			R4		Res, met flm, 44.563k ±0.1%, 1/8W	91637	386367	91637	MFFI-8442563B									1				
			R5		Res, met flm, 23.445k ±0.1%, 1/8W	91637	386300	91637	MFFI-823R445B									1				
			TYPE	JF		415810	415810	89536	415810													
			R1		Res, var, 200 ±20%, ½W	11236	284711	11236	190PC 201B									1				
			R2		Res, fxd, ww, sub-mini, 23.78k ±0.1%	54294	385609	54294	SP2IDS- 237 80B									1				

REF	DESIG	OR	ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO.	MFG TYPE	TOT QTY	REC QTY	USE CDE
R3				Res, met flm 14.7K ± 1% 1/8W	226225	91637	MFFI-8147IF		1		
R4				Res, met flm, 121K ± 0.1%, 1/8W	370817	91637	MFFI-81213B		1		
R5				Res, met flm, 23.445 K ± 0.1%, 1/8W	386300	91637	MFFI-823R	445B	1		
TYPE	KC				415885	89536		415885			
R1				Res, var, 100 ± 20%, 1/2W	267823	11236	190PC101B		1		
R2				Res, fxd, ww, sub-mini, 17.55K ± 0.1%	385567	54294	SP21D5-12550B		1		
R3				Res, met flm, 11.5K ± 1%, 1/8W	267138	91637	MFFI-81151F		1		
R4				Res, met flm, 55.947K ± 0.1%, 1/8W	386383	91637	MFFI-855R942B		1		
R5				Res, met flm, 29.931K ± 0.1%, 1/8W	386318	91632	MFFI-829R931B		1		
TYPE	KF				415828	89536		415828			
R1				Res, var, 200 ± 20%, 1/2W	284711	11236	190PC 201B		1		
R2				Res, fxd, ww, sub-mini, 32.38K ± 0.1%	385617	54298	SP21D5=32380B		1		
R3				Res, met flm, 21K ± 1%, 1/8W	229484	91637	MFFI-8213F		1		
R4				Res, met flm, 149.0K ± 0.1% 1/8W	386375	91637	MMFFI-814940B		1		
R5				Res, met flm, 29.931K ± 0.1%, 1/8W	386318	91637	MFFI-8238931B		1		
TYPE	RC				415901	89536		415901			
R1				Res, var, 1K ± 20%, 1/2W	267856	11236	190PC102B		1		
R2				Res, fxd, ww, sub-mini, 110.09K ± 0.1%	385633	54942	SP21D5-1DR	09B	1		
R3				Res, met flm, 71.5K ± 1%, 1/8W	291435	91637	MFFI-87151F		1		
R4				Res, met flm, 368.9K ± 0.1%, 1/8W	386441	91632	MFFI-8368	R9B	1		
R5				Res, met flm, 204.5K ± 0.1%, 1/8W	393793	91637	MFFI-8204	R5B	1		

SINGLE INPUT CONFIGURATION (Cont.)

SINGLE INPUT CONFIGURATION (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
RF TYPE	Res, var, 1k ±20%, ½W	415844	89536	190 PC 102 B 415844	1		
R1	Res, var, 1k ±20%, ½W	267856	11236	190 PC 102 B	1		
R2	Res, fxd, ww, sub-mini, 110.09k ±0.1%	385633	54294	SP21DS- 110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFFI-871RSF	1		
R4	Res, met flm, 78.6k ±0.1%, 1/8W	386433	91637	MFFI-878886B	1		
R5	Res, met flm, 204.5 ±0.1%, 1/8W	393793	91637	MFFI-8204RSB	1		
SC TYPE	Res, var, 1k ±20%, ½W	415919	89536	415919			
R1	Res, var, 1k ±20%, ½W	267856	11236	190 PC 102B	1		
R2	Res, fxd, ww, sub-mini, +10.09k ±0.1%	385633	54294	SP21DS- 110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFFI-871RS1F	1		
R4	Res, met flm, 366.7k ±0.1%, 1/8W	386466	91637	MFFI-836687B	1		
R5	Res, met flm, 202.6k ±0.1%, 1/8W	386342	91637	MFFI-8202R6B	1		
SF TYPE	Res, var, 1k ±20%, ½W	415851	89536	415851			
R1	Res, var, 1k ±20%, ½W	267856	11236	190PC102B	1		
R2	Res, fxd, ww, sub-mini, 110.09k ±0.1%	385633	54294	SP21DS- 110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFFI-87151F	1		
R4	Res, met flm, 799.5k ±0.1%, 1/8W	386458	91637	MFFI-8799 RS1B	1		
R5	Res, met flm, 202.6k ±0.1%, 1/8W	386342	91637	MFFI-8202 R6B	1		
TC TYPE	Res, var, 100 ±20%, ½W	415869	89536	415869			
R1	Res, var, 100 ±20%, ½W	267823	11236	190PC 101B	1		

Figure 5-6. SINGLE TYPE PCB ASSEMBLY

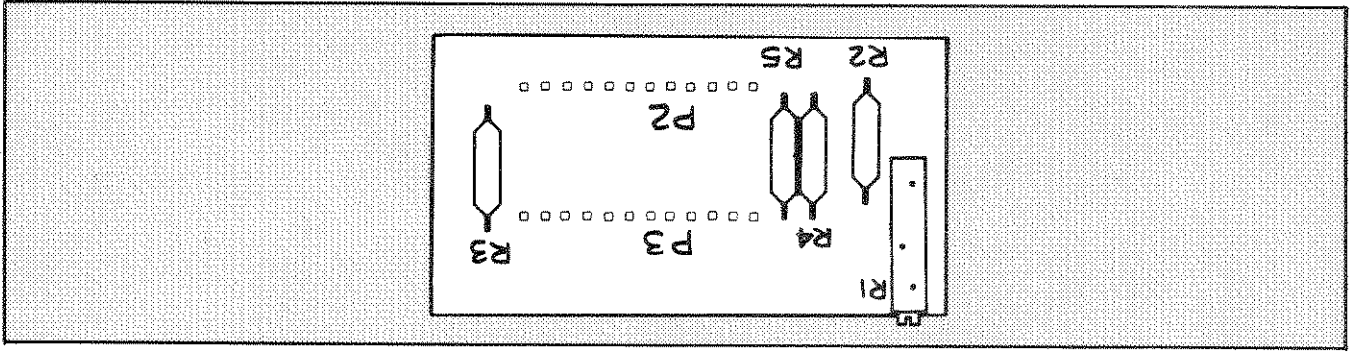


Figure 5-5. SINGLE INPUT CONFIGURATION


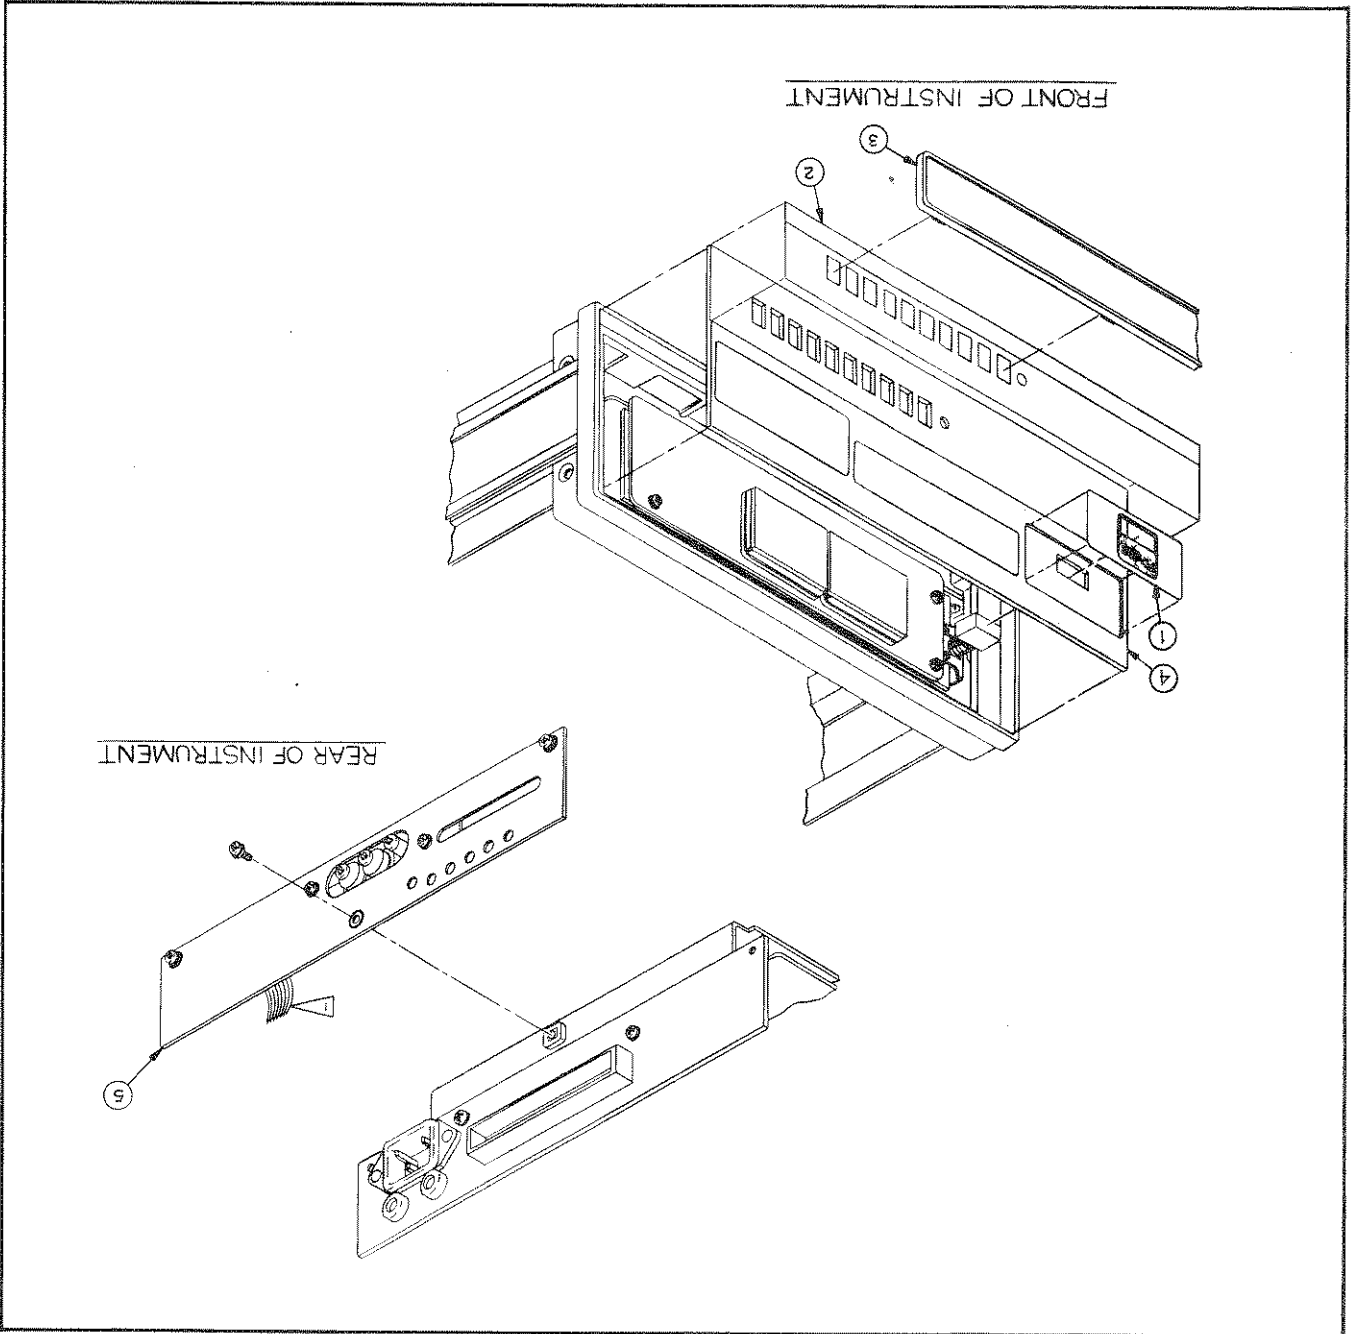


Figure 5-7. MULTI-TYPE CONFIGURATION

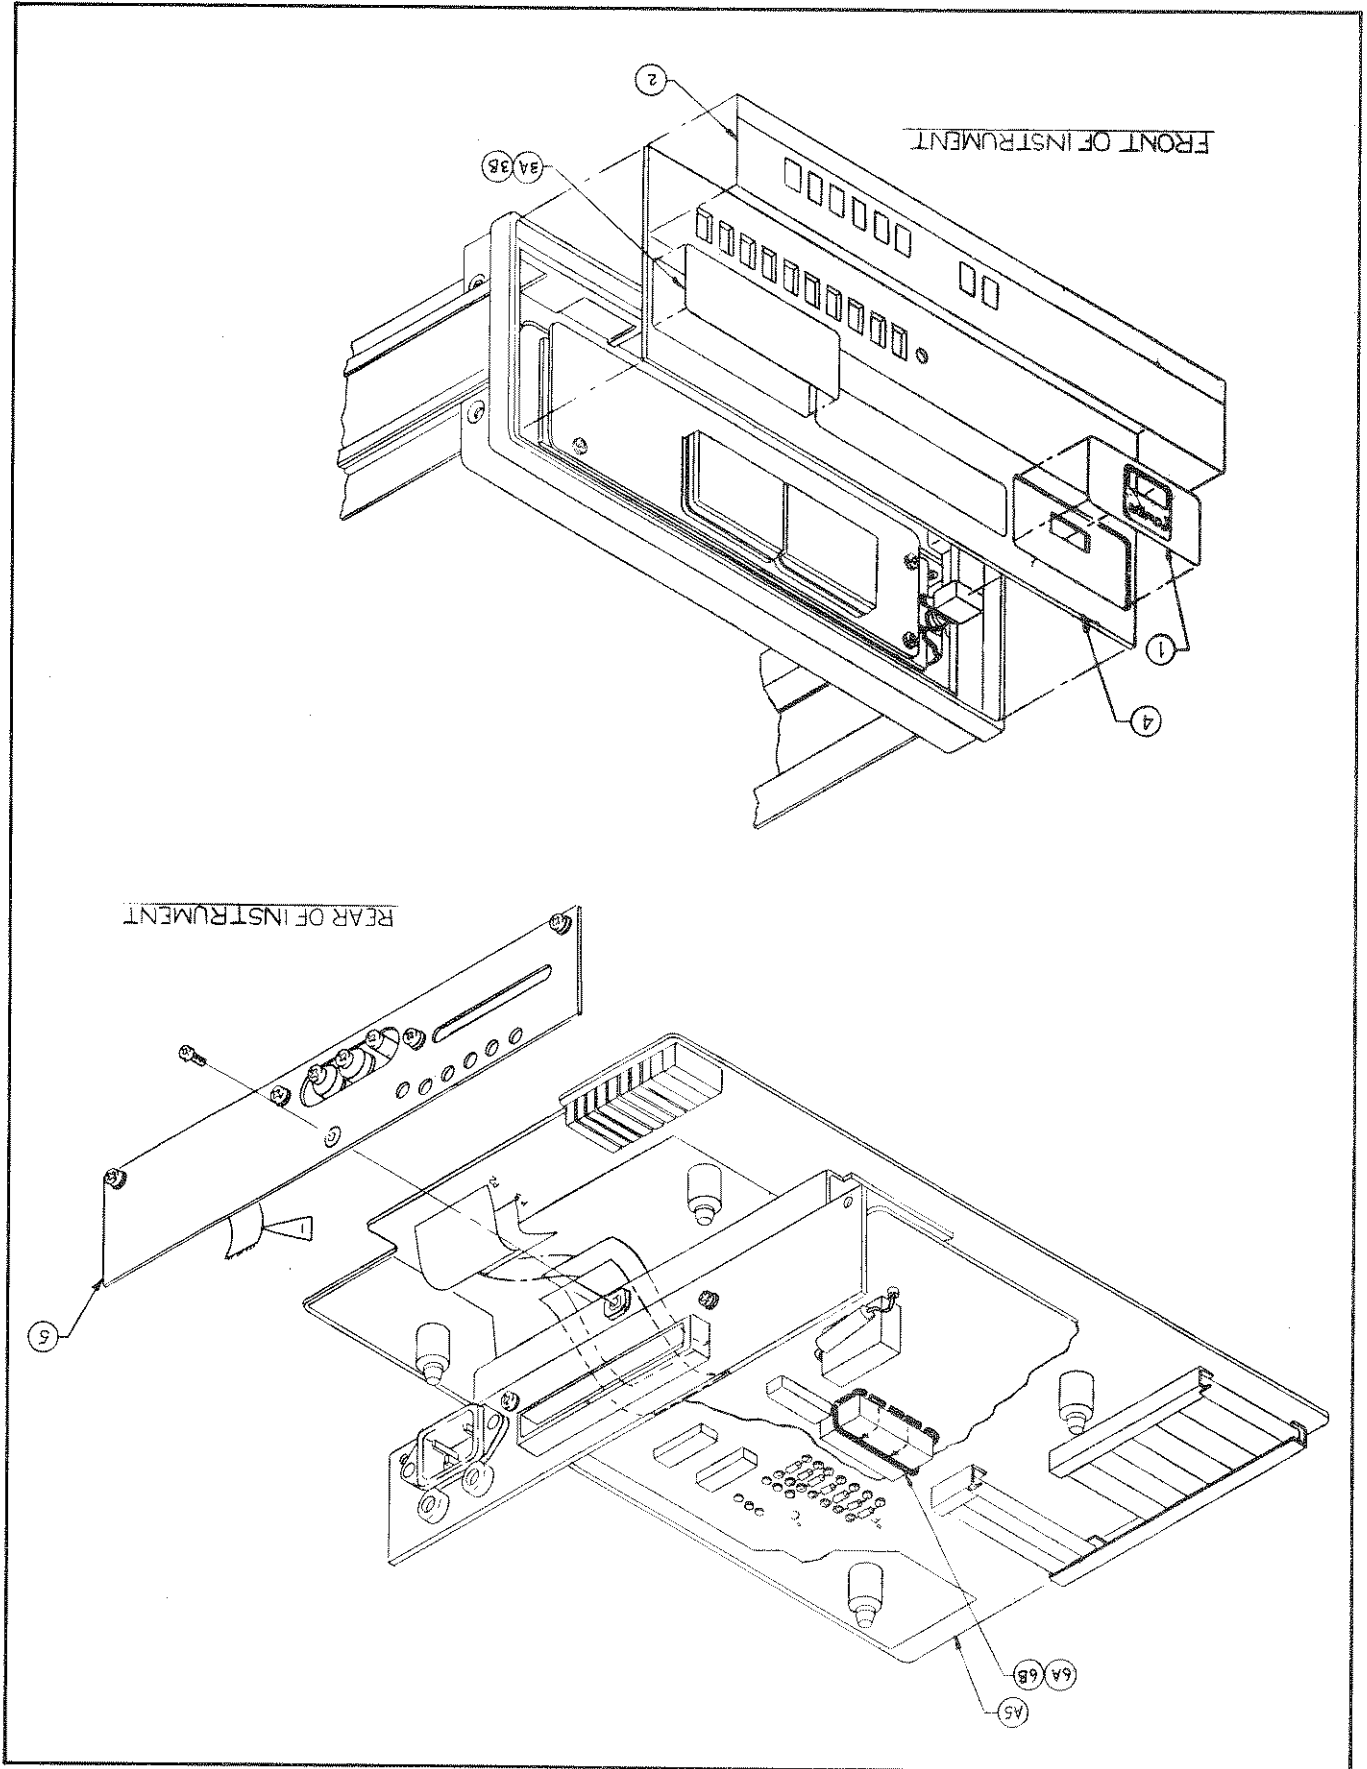


REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A5	TYPE SELECT PCB ASSEMBLY °C Figure 5-8	371989	89536	371989			
CR1, CR2, CR3	Diode, Si, Hi-speed switching	289595	07910	IN4148	3		
R1	Res, met flm, 39.2k ±1%, 1/8W	236414	91637	MFF1-38922F	1		
R2	Res, fxd, sub-mini, ww, 60.75k ±0.1%	385625	54294	SP21DS- 60751B	1		
R3	Res, var, cermet, 500 ±20%, ½W	267849	71450	190PC501B	1		
R4	Res, met flm, 57k ±1%, 1/8W	226217	91637	MFF1-8573F	1		
R5	Res, fxd, sub-mini, ww, 5.175k ±0.1%	385518	54294	SP21DS- 51750B	1		
R6	Res, var, 50 ±20%, ½W	267815	71450	190PC500B	1		
R7	Res, met flm, 23.455k ±0.1%, 1/8W	386300	91637	MFF1-8234 551B	1		
R8	Res, met flm, 8.06k ±1%, 1/8W	294942	91637	MFF1-88061F	1		
R9	Res, fxd, sub-mini, ww, 11.97k ±0.1%	385559	54294	SP21DS- 11971B	1		
R10, R14, R18, R22, R32, R45	Res, var, cermet, 100 ±20%, ½W	267823	71450	190PC 101B	6		
R11	Res, met flm, 29.931k ±0.1%, ½W	386318	91637	MFF1-829931B	1		
R12, R16	Res, met flm, 11.5k ±1%, 1/8W	267138	91637	MFF1-811501F	2		
R13	Res, sub-mini, ww, 17.55k ±0.1%	385567	54294	SP21DS- 19551 B	1		
R15	Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFF1-829784B	1		
R17	Res, sub-mini, ww, 18.17k ±0.1%	385575	54294	SP21DS- 18171B	1		

TYPE SELECT PCB ASSEMBLY °C

TYPE SELECT PCB ASSEMBLY ° C (Cont.)

REF	DESIG	OR	ITEM	NO.	DESCRIPTION	FLUKE	STOCK	NO.	MFG	FED	SPLY	CDE	MFG	PART	NO.	OR	TYPE	TOT	QTY	REC	USE	CDE
R19					Res, met flm, 19.9k ±1%, 1/8W	386334			91637				MFFI-819928					1				
R20					Res, met flm, 7.68k ±1%, 1/8W	370999			91637				MFFI-876801B					1				
R21					Res, sub-mini, ww 11.35k ±0.1%	385542			54294				SP21D5= 11351B					1				
R23					Res, met flm, 204.5k ±0.1%, 1/8W	393793			91637				MFFI-820452B					1				
R24,					Res, met flm, 71.5k ±1%, 1/8W	291435			91637				MFFI-87151F					2				
R25,					Res, sub-mini, ww, 110.09k ±0.1%	385633			54294				SP21D5- 11009B					2				
R26,					Res, var, cermet, 1k ±20%, 1/8W	267856			71450				190PC102B					2				
R27					Res, met flm, 202.6k ±0.1%, 1/8W	386342			91637				MFFI-820262B					1				
R31					Res, sub-mini, ww, 9.975 ±0.1%	385526			54294				SP21D5- 99751B					1				
R33					Res, met flm, 44.563k ±0.1%, 1/8W	386367			91637				MFFI-844563B					1				
R34					Res, met flm, 55.947k ±0.1%, 1/8W	386383			91637				MFFI-855947B					1				
R35					Res, met flm, 55.09k ±0.1%, 1/8W	404038			91637				MFFI-855091B					1				
R36					Res, met flm, 37.01k ±0.1%, 1/8W	386425			91637				MFFI-837011B					1				
R37					Res, met flm, 368.9k ±0.1%, 1/8W	386441			91637				MFFI-836892B					1				
R38					Res, met flm, 366.7 ±0.1%, 1/8W	386466			91637				MFFI-836672B					1				
R39,					Res, var, cermet, 5k ±10%, 1/8W	288282			71450				360S-502A					3				
R42,					Res, var, cermet, 25k ±10%, 1/8W	289678			71450				360S-253A					2				
S1					Switch Assembly	375246			89536				375246					1				

Figure 5-8. TYPE SELECT PCB ASSEMBLY °C

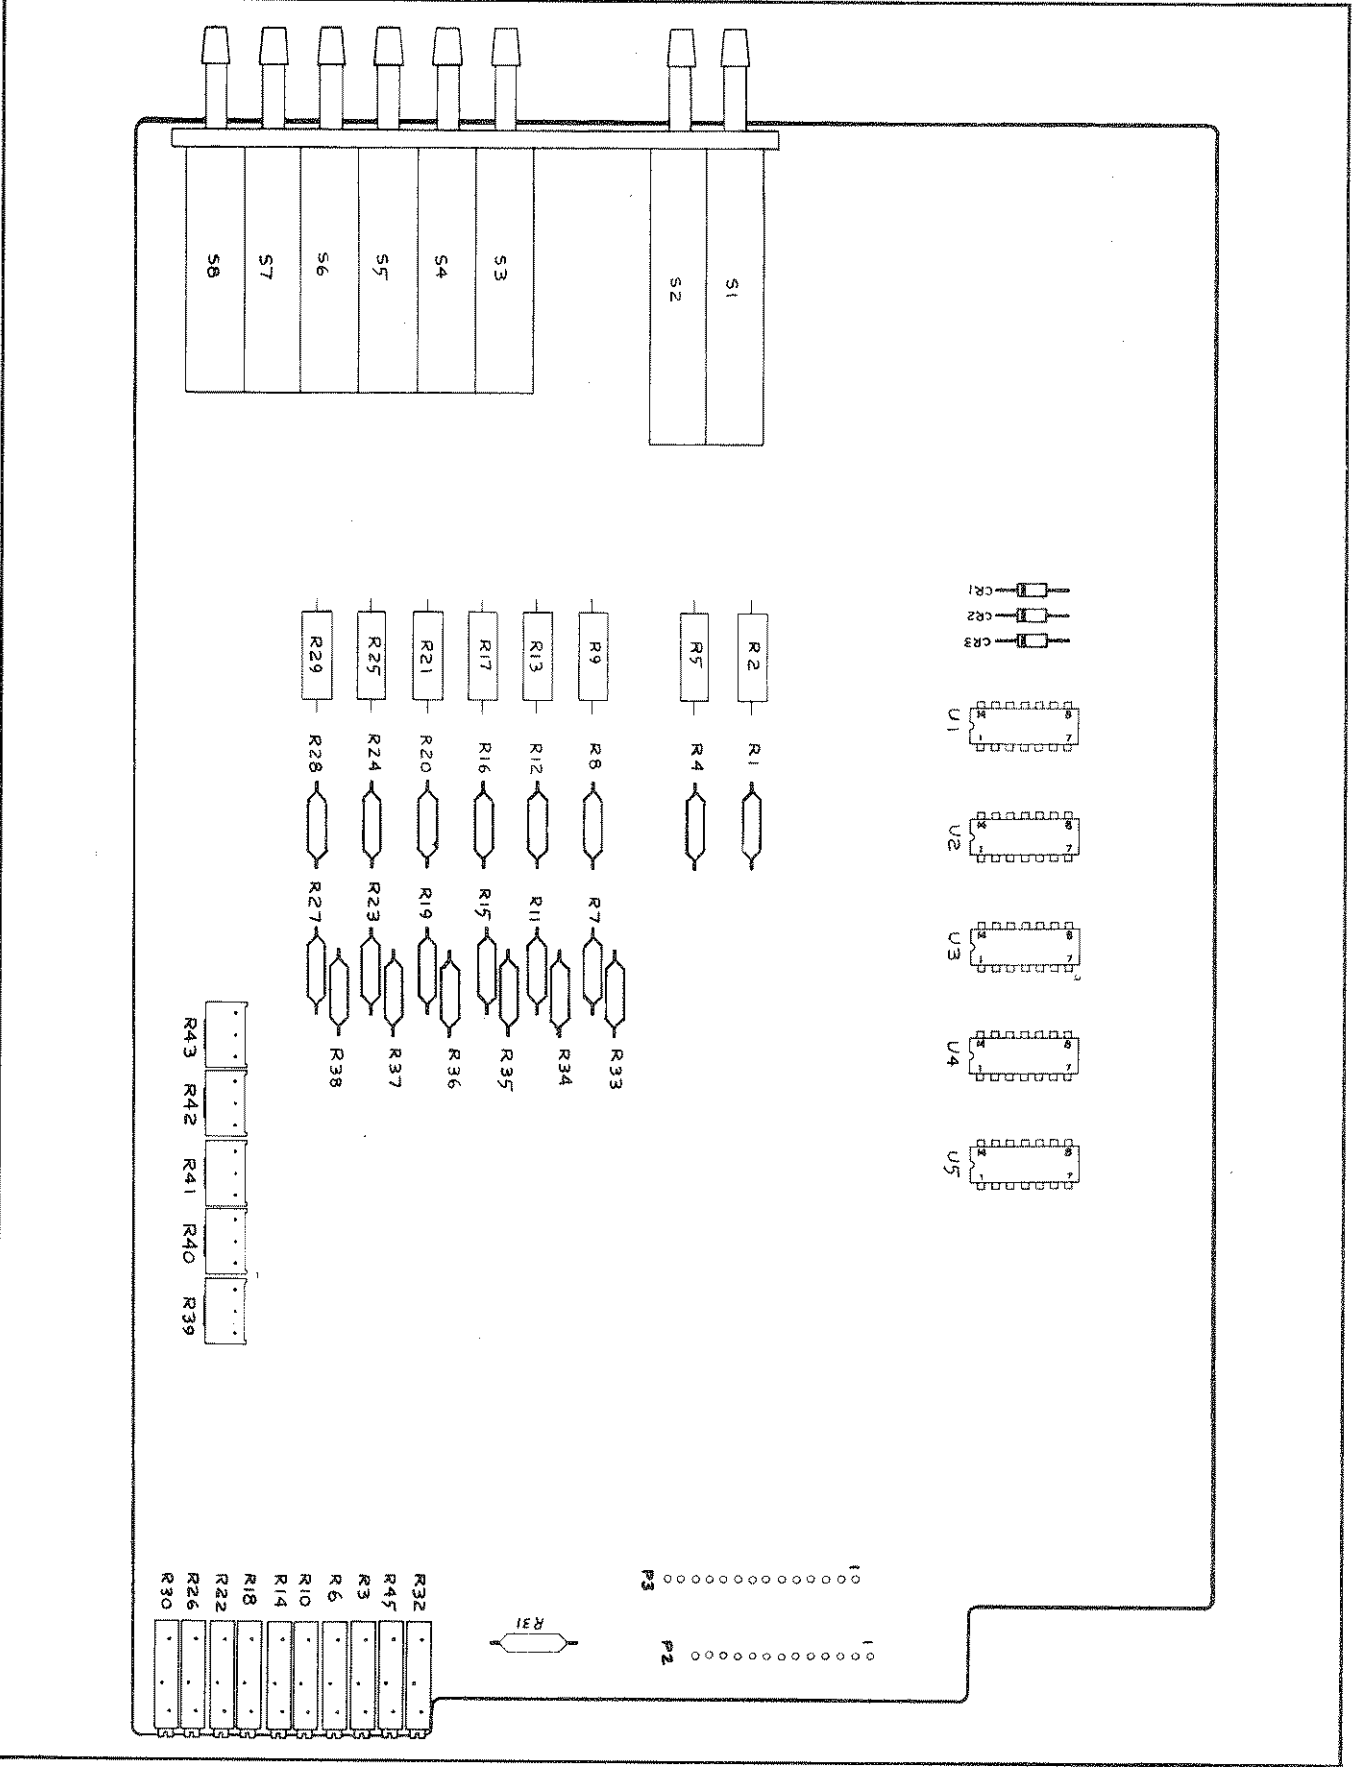

REF	DESIG	OR	ITEM	NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A5					TYPE SELECT PCB ASSEMBLY. F	371690	89536	371690			
CR4			thru	CR10	Diode, Si, Hi-speed switching	289595	07910	IN4148	7		
R1					Res, met flm, 39.2k ±1%, 1/8W	236414	91637	MFFI-83920F	1		
R2					Res, fxd, sub-mini, ww, 60.75k ±0.1%	385625	54294	SP0215- L0751B	1		
R3					Res, var, cermet, 500 ±20%, ½W	267849	71450	190 PC 501B	1		
R4					Res, met flm, 57k ±1%, 1/8W	226217	91637	MFFI-8573F	1		
R5					Res, fxd, sub-mini, ww 5.175k ±0.1%	385518	54294	SP21D5- 51750B	1		
R6					Res, var 50 ±20%, ½W	267815	71450	190 PC 500B	1		
R7					Res, met flm. 23.455k ±0.1% 1/8W	386300	91637	MFFI-8234551B	1		
R8					Res, met flm, 14.7k ±1%, 1/8W	226225	91637	MFFI-81472F	1		
R9					Res, fxd, sub-mini, ww, 23.7k ±0.1%	385609	54294	SP21D 52372B	1		
R10,					Res, var, cermet, 200 ±20%, ½W	284711	71450	190 PC 201B	3		
R11					Res, met flm, 29.93k ±0.1%, 1/8W	386318	91637	MFFI-829931B	1		
R12,					Res, met, flm, 21k ±0.5%, 1/8W	229484	91637	MFFI-8213	2		
R13,					Res, fxd, sub-mini, ww, 32.38k ±0.1%	385617	54294	SP21D5- 32381B	2		
R15					Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFFI-82978 40B	1		
R19					Res, met flm, 19.90k ±0.1%, 1/1W	386334	91637	MFFI-819901B	1		
R20					Res, met flm, 12.4k ±1%, 1/8W	261644	91637	MFFI-81242F	1		
R21					Res, fxd, sub-mini, 1941k ±0.1%	385583	54294	SP31D5- 19411B	1		

TYPE SELECT PCB ASSEMBLY. F

TYPE SELECT PCB ASSEMBLY ° F (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY CDE	REC QTY CDE	USE CDE
R22, R32, R45	Res, var, cermet, 100 ±20%, ½W	267823	71450	190 PC 101B	3		
R23	Res, met flm, 204.5K ±0.1%, 1/8W	393793	91637	MFFI-820452F	1		
R24, R28	Res, met flm, 71.5K ±1%, 1/8W	291435	91637	MFFI-87152F	2		
R25, R29	Res, sub-mini, ww, 110.09K ±0.1%	385633	54294	SP2105- 110091B	2		
R26, R30	Res, var, cermet, 1k ±20%, ½W	267856	71450	190 PC 102B	2		
R27	Res, met flm. 202.6k ±0.1%, 1/8W	386342	91637	MFFI&20262B	1		
R31	Res, sub-mini, ww, 9.975 ±0.1%	385526	54294	SP21D5- 99750B	1		
R33	Res, met flm. 121k ±0.1%, 1/8W	370817	91637	MFFI-81211B	1		
R34	Res, met flm. 149k ±0.1%, 1/8W	386375	91637	MFFI-81493B	1		
R35	Res, met flm. 137.04k ±0.1%, 1/8W	404046	91637	MFFI-8137041B	1		
R36	Res, met flm. 95.52K ±0.1%, 1/8W	386417	91637	MFFI-875521B	1		
R37	Res, met flm. 788.6k ±0.1%, 1/8W	386433	91637	MFFI-878862B	1		
R38	Res, met flm. 799.5k ±0.1%, 1/8W	386458	91637	MFFI-879952B	1		
R39, R40, R41	Res, var, cermet, 10k ±10%, ½W	285171	71450	360S103A	3		
R42, R43	Res, var, cermet, 50k ±10%, ½W	288290	71450	360S503A	2		
S1 thru S8	Switch Assembly	375246	89536	375246	1		
U1	Res, network, 10k ±5%, ½W	355313	56289	914C 103I	1		
U2	IC, TTL, Hex inverter	292979	01295	SN7404N	1		
U3	IC, TTL, Quad, 2-input NOR gate	288845	01396	SN7402N	1		
U4	IC, TTL, Triple, 3-input, NAND Gates	292995	10295	SN7410N	1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U5	IC, TTL, Quad, 2-input NAND Gate	292953	01295	SN7400N	1		
	Button, putty grey	369546	71590	J52305 J31753	8		
	Cable, flex	385716	89536	385716	1		
	Contact, spring	375360	89536	375360	1		
	Guard, Lower, type select	374942	89536	374942	1		
	Insulator, -06 Guard	412072	89536	412072	1		
	Spacer, switch	285353	71590	J64280	7		

TYPE SELECT PCB ASSEMBLY F (Cont.)

Figure 5-9. TYPE SELECT PCB ASSEMBLY °


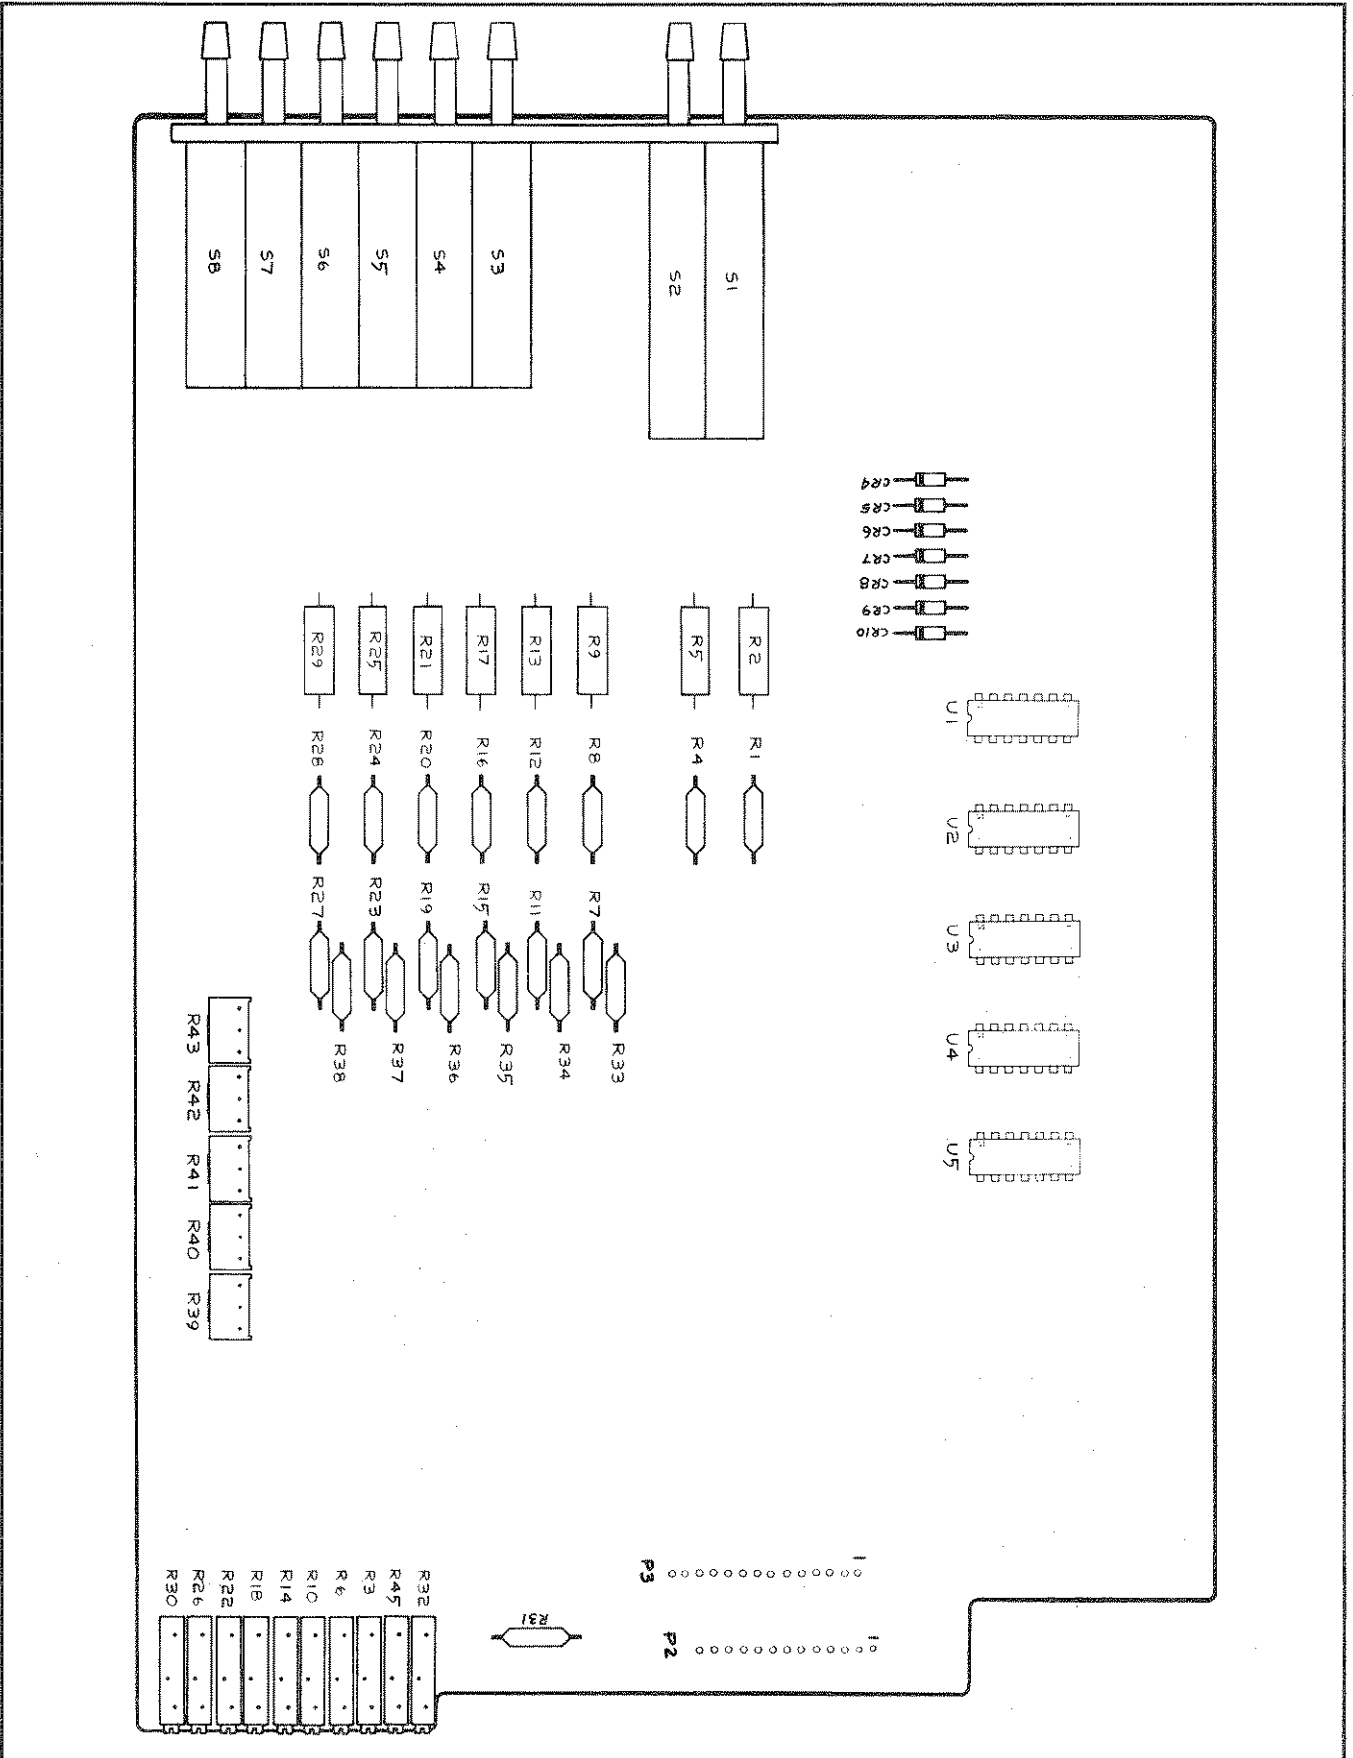


Figure 5-10. MULTI-POINT CONFIGURATION

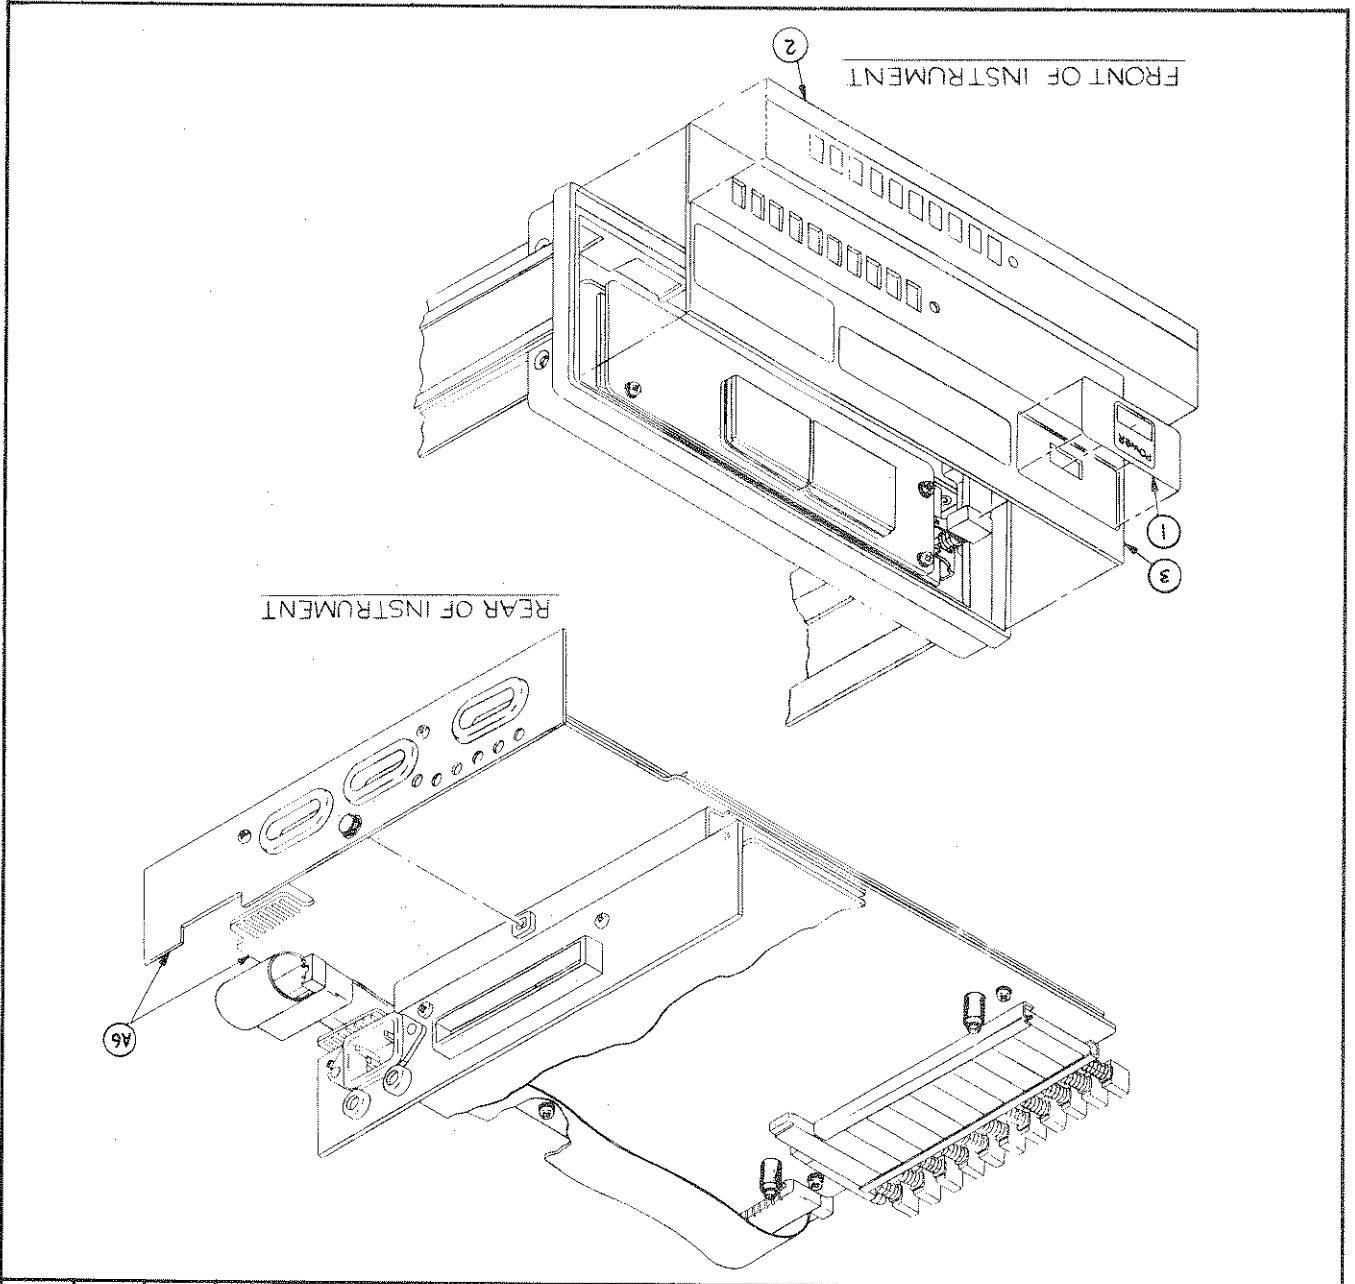

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
3	Front Panel, Finished	397653	89536	397653	1		
2	Decal, Basic, Front Panel	380873	89536	380873	1		
1	Decal, AC Power, Front Panel	381152	89536	381152	1		
MULTI POINT CONFIGURATION Figure 5-10		2100A-10					

POINT SELECT PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A6	POINT SELECT PCB ASSEMBLY Figure 5-11	373811	89536	373811			
CR1 thru CR4	Diode, Si	203323	07910	TD8253	4		
DS1	Light-emitting diode, red	309617	07263	FLV102	1		
R1	Res, comp, 330 ±5%, ¼W	147967	01121	CB3315	1		
R2, R3, CR5	Res, junction set	400127	89536	400127	3		
R4, R5, R6	Res, comp, 100 ±5%, ¼W	147926	01121	CB1015	3		
SI thru SI1	Switch Assy	375253	89536	375253	1		
UI	Diode, matrix, custom programmed	370676	91417	HM1-0104	1		
	Clamp, xstr	393967	89536	393967	1		
	Cover, xstr	394577	89536	394577	1		
	Flex circuit assy	395483	89536	395483	1		
	Gasket xstr	394585	89536	394585	1		
	Iso-thermal sink	380287	89536	380287	1		
	Lower guard	374082	89536	374082	1		
	Rear panel	374074	89536	374074	1		

Figure 5-11. POINT SELECT PCB ASSEMBLY


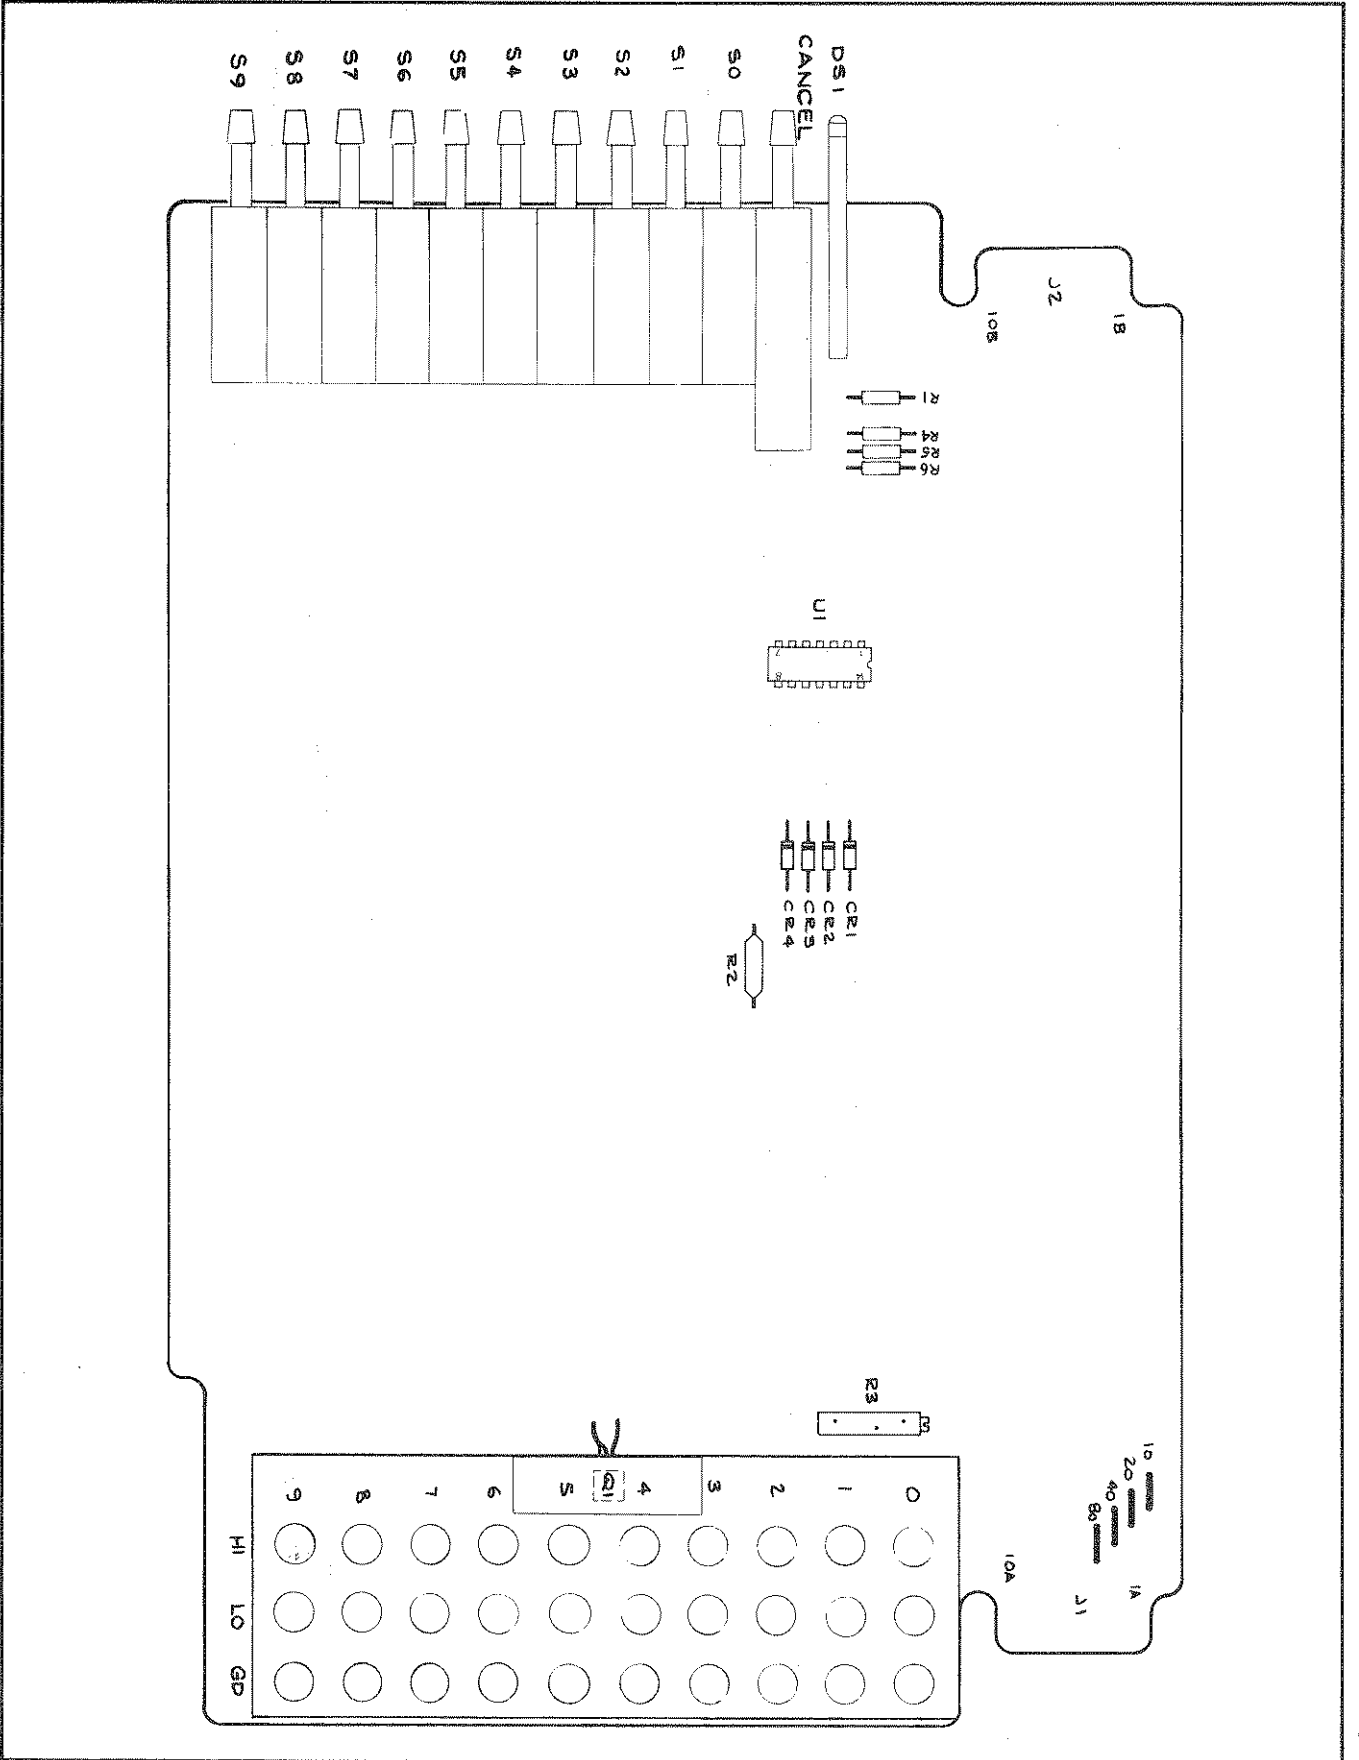



Figure 5-12. BATTERY POWER SUPPLY

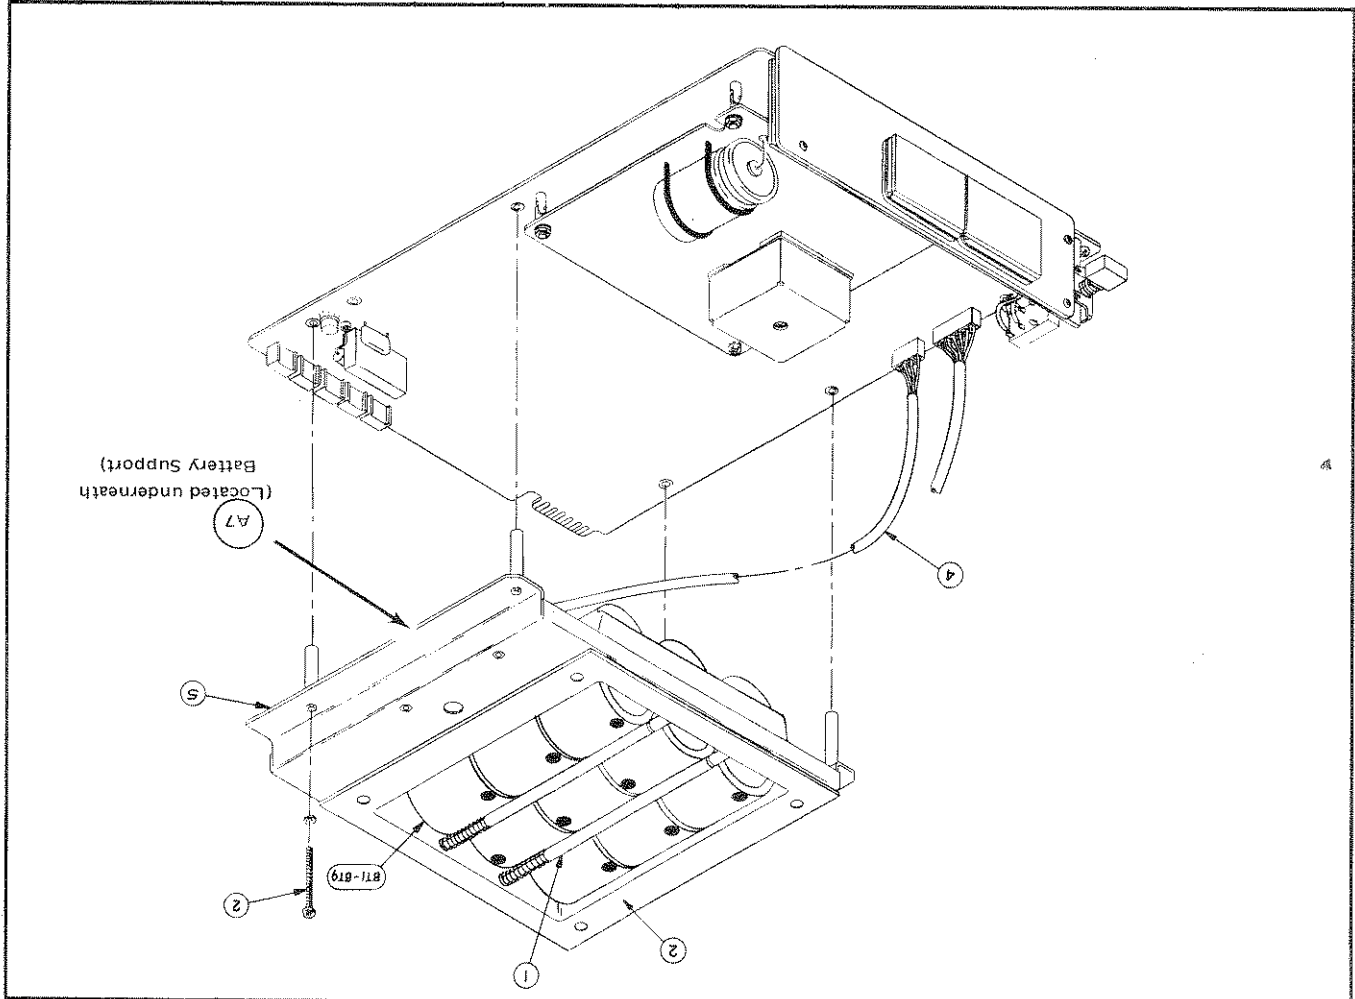

REF DESIGN OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
BT1-01	BATTERY POWER SUPPLY (Figure 5-12)	2100A-01					
BT1-01	Battery, Rechargeable (2100A-01)	370759	89536	370759	9		
1	Retainer, Battery	374066	89536	374066	2		
2	Screw, 4-40 x 1 3/8	404400	89536	404400	4		
3	Battery Charge Assembly	374645	89536	374645	1		
4	Battery Cable Harness	372243	89536	372243	1		
5	Battery Support	373308	89536	373308			
A7	Battery Charge PCB Assembly	374645	89536	374645	1		

BATTERY POWER SUPPLY

Figure 5-13. BATTERY CHARGE PCB ASSEMBLY

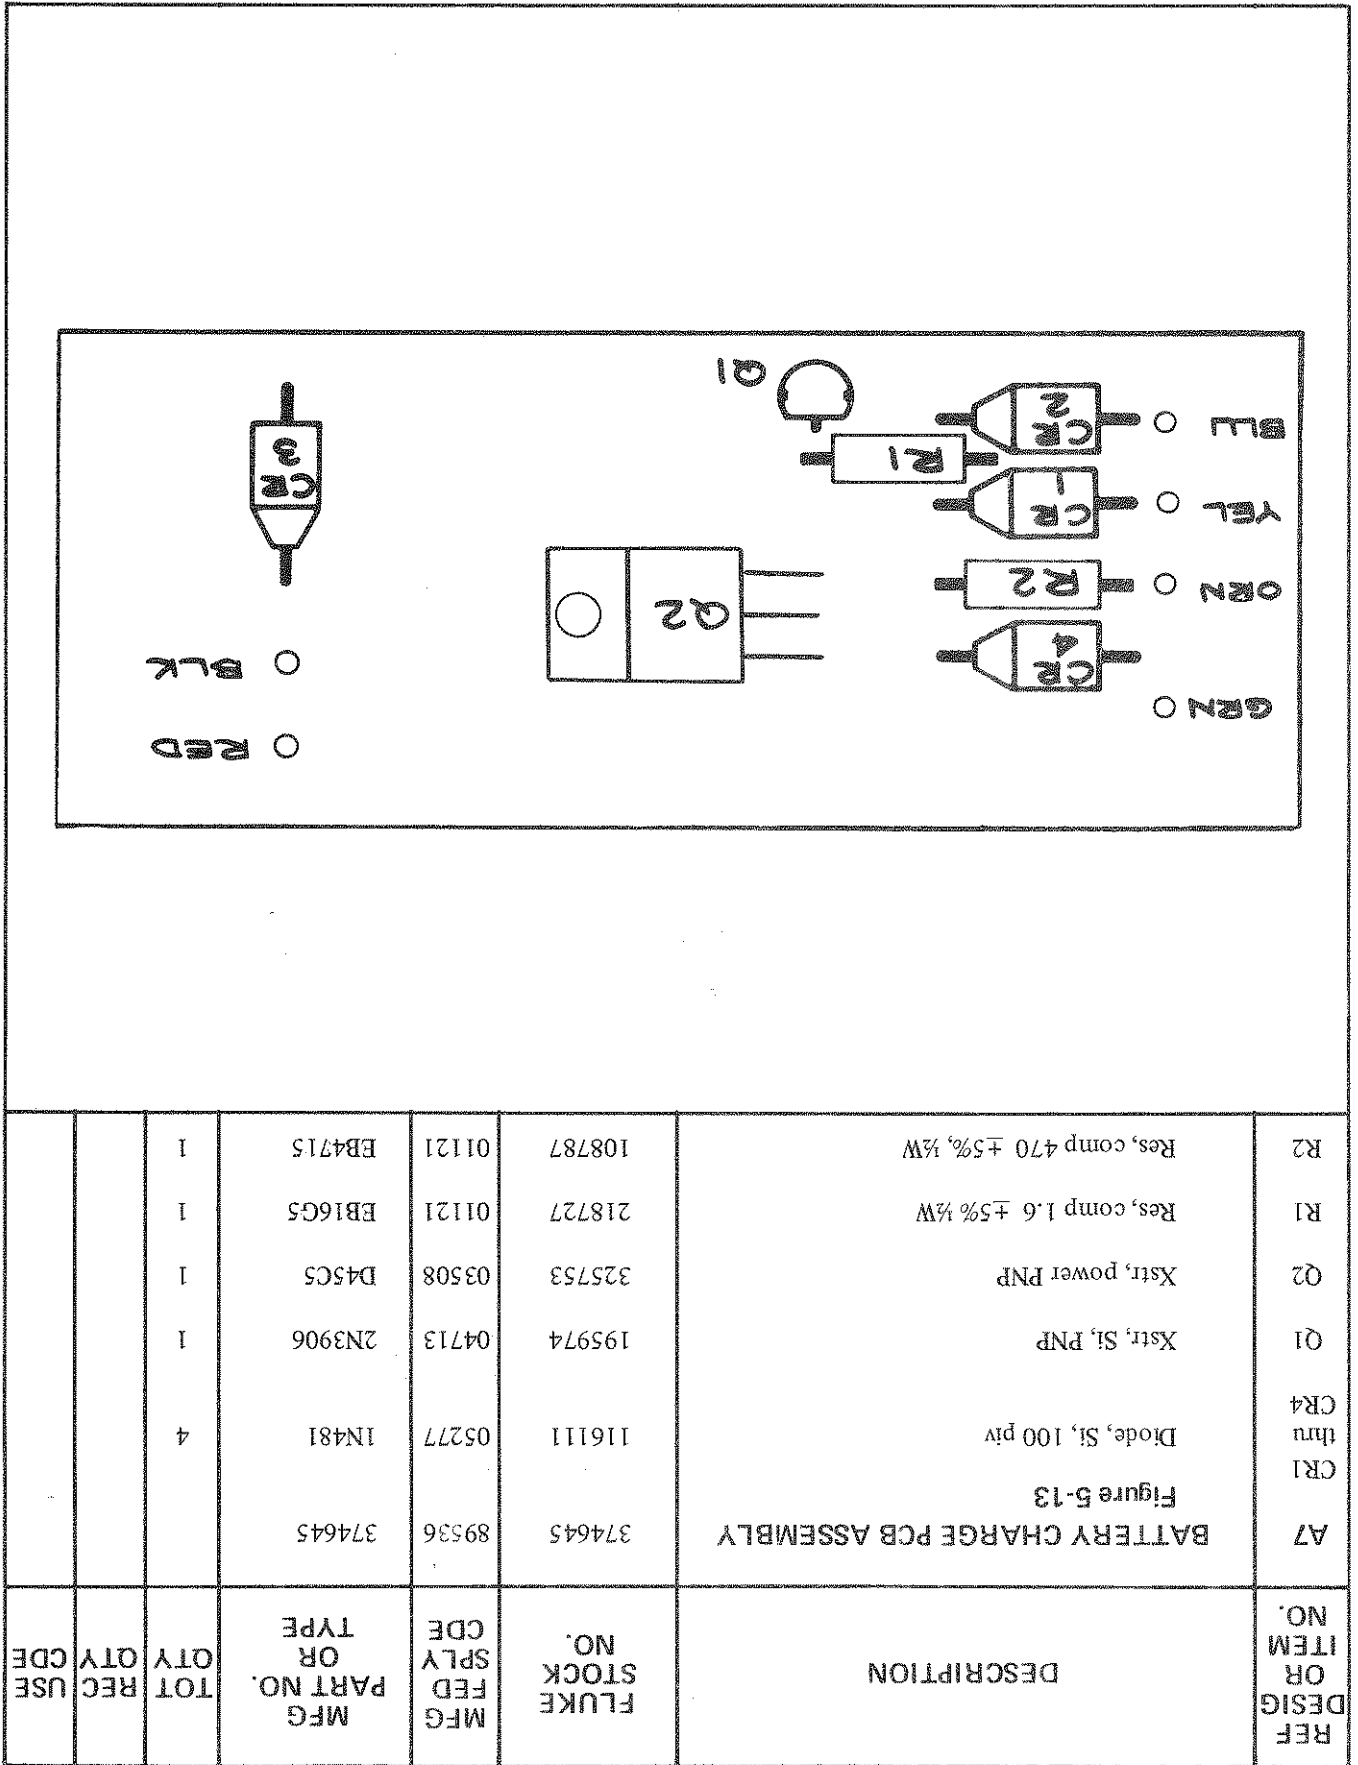

BATTERY CHARGE PCB ASSEMBLY

DIGITAL OUTPUT UNIT PCB ASSEMBLY

REF	DESIG	OR	ITEM	NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A8					DIGITAL OUTPUT UNIT PCB ASSY Figure 5-14	371526	89536	371526	REF		
C1					Cap, cer, 500 pF ±10%, 1KV	105692	32897	2DOH60N50 IK	1		
C2					Cap, cer, 180 pF ±10%, 1KV	105890	71590	BB60181K S3N	1		
C3, C4					Cap, Ta, 10 uF ±20%, 20V	330662	56289	196D106X 0020JA1	2		
C5					Cap, cer, 0.01 uF ±20%, 100V	149153	56289	C023B101 F103M	1		
C6					Cap, mica, 33 pF ±5%, 500V	160317	71236	DM15E330J	1		
CRI thru CR3					Diode, Si, Rect - 1 amp	343491	04713	IN4002	3		
Q1 thru Q4					Xstr, Si, NPN	218396	04713	2N3904	4		
R1, R2, R18					Res, comp, 51k ±5%, ¼W	193334	01121	CB5135	3		
R3, R4, R5, R13					Res, comp, 100k ±5%, ¼W	148189	01121	CB1045	4		
R6, R8, R10					Res, comp, 2k ±5%, ¼W	202879	01121	CB2025	3		
R7, R9, R11					Res, comp 16k ±5%, ¼W	221606	01121	CB1635	3		
R12					Res, comp 15k ±5%, ¼W	148114	01121	CB1535	1		
R14, R17					Res, comp, 10k ±5%, ¼W	148106	01121	CB1035	2		
R15, R16					Res, comp, 33k ±5%, ¼W	148155	01121	CB3335	2		
R19, R20, R21					Res, comp, 200 k ±5%, ¼W	248781	01121	CB2045	3		

Figure 5-14. DIGITAL OUTPUT UNIT PCB ASSEMBLY


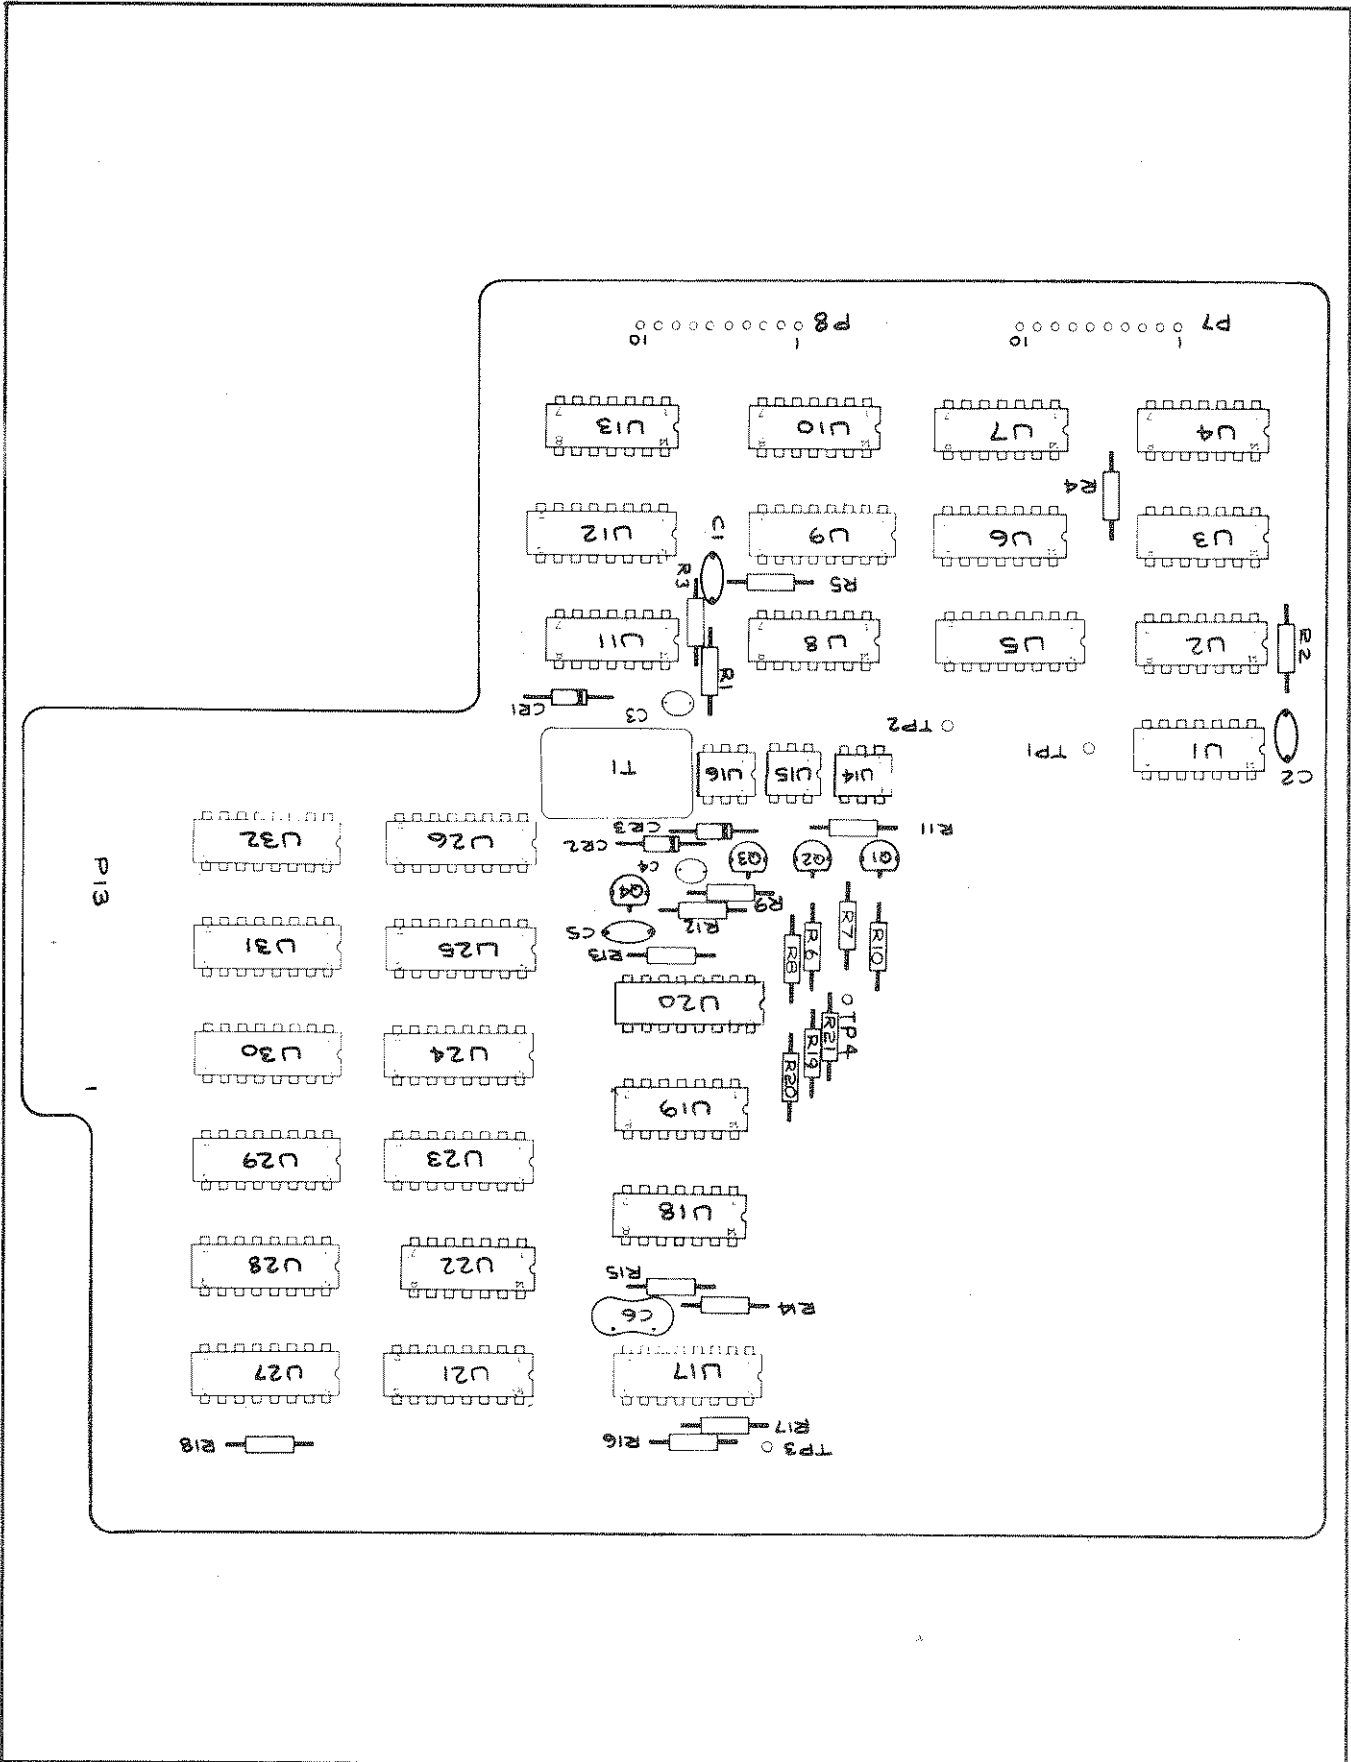


Figure 5-15. ANALOG OUTPUT UNIT PCB ASSEMBLY.

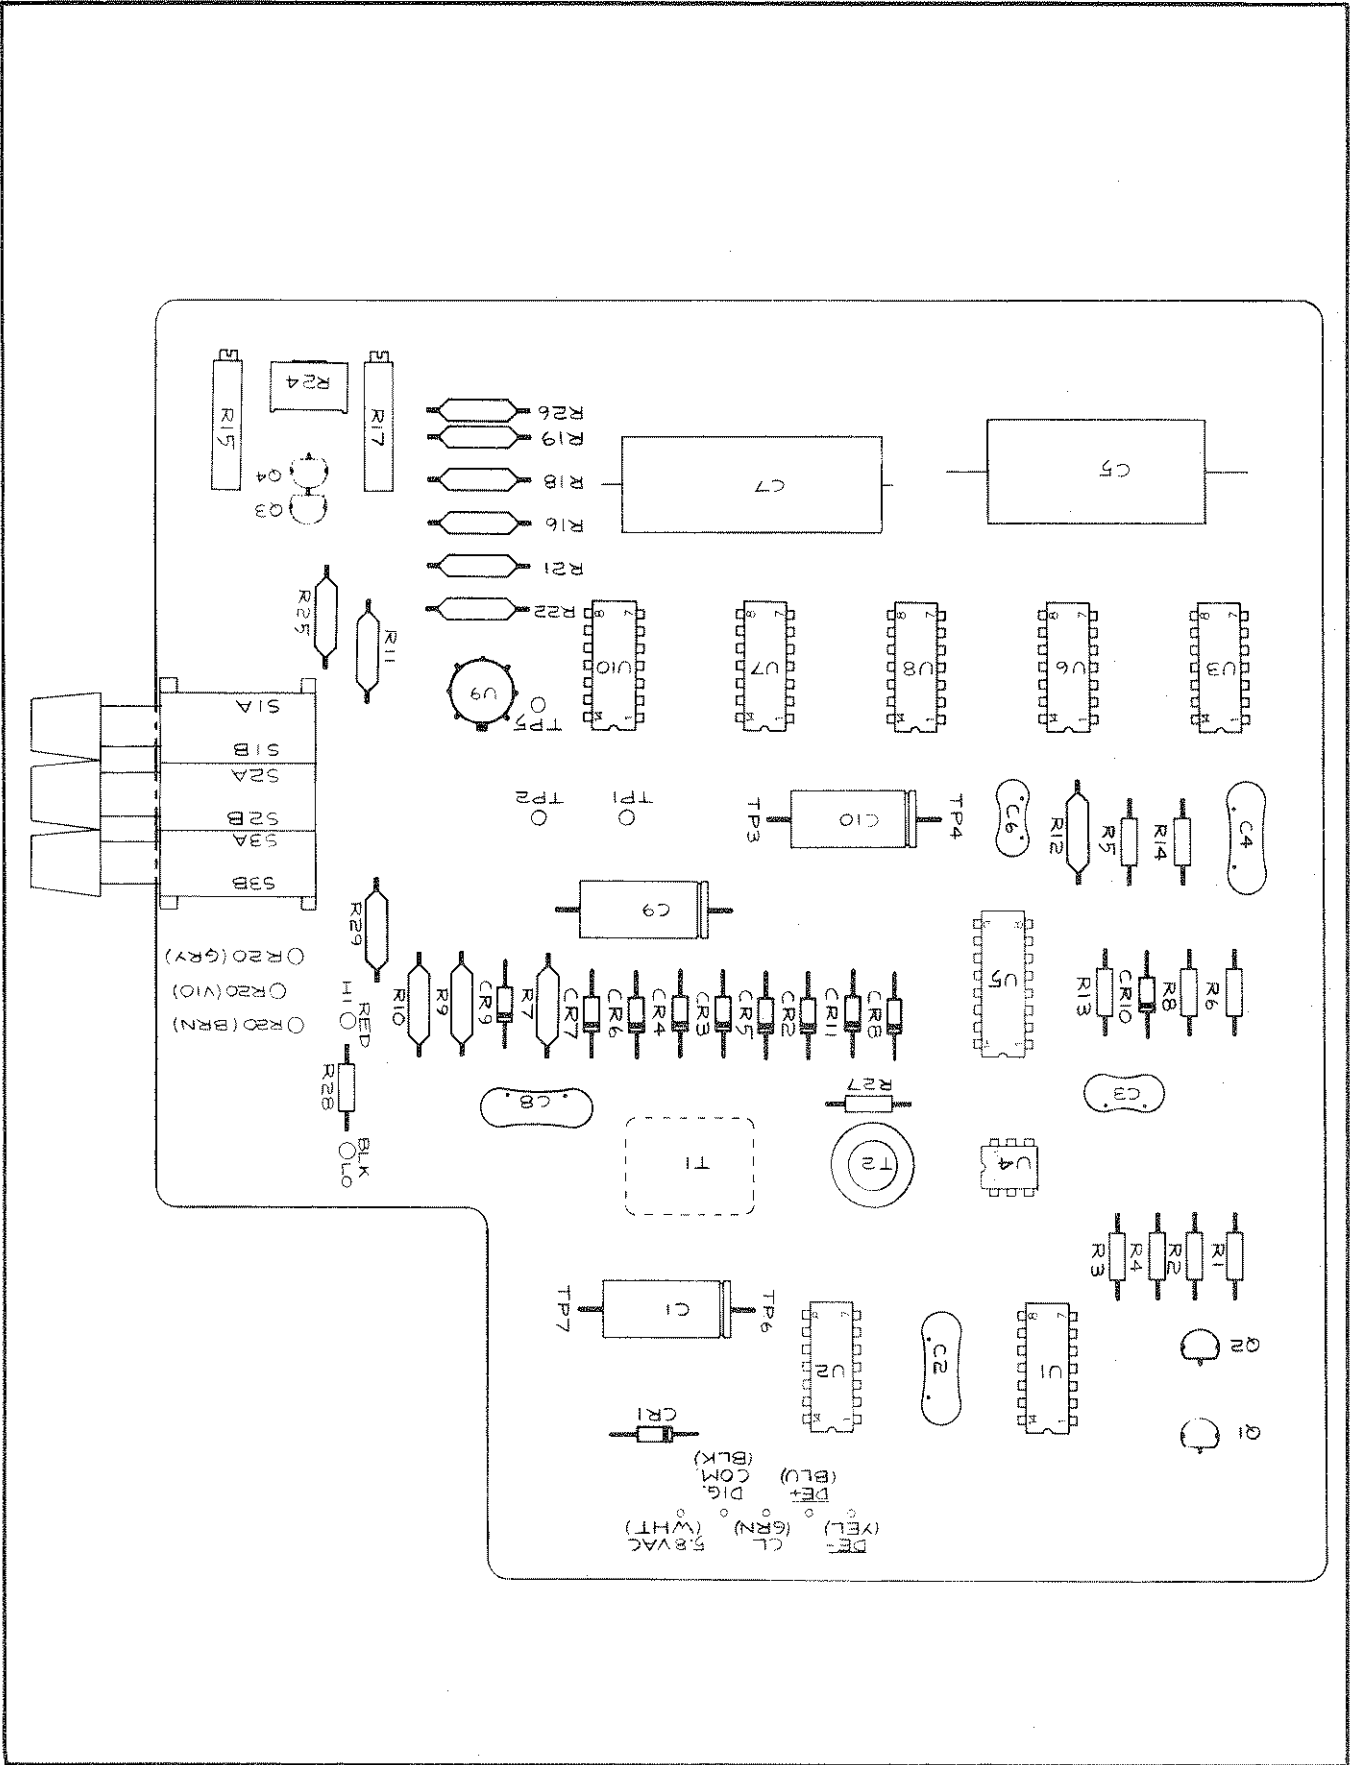

ANALOG OUTPUT UNIT PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
C1, C9 C10	Cap, elect, 150 uF -10/+50%, 16v	186296	73445	ET151X016A5	3		REF
C2	Cap, mica, 820 pF ±5%, 500v	148395	71236	DM19F821J	1		
C3	Cap, mica, 150 pF ±5%, 500v	148478	71236	DM15F151J	1		
C4	Cap, plastic, .010 uF ±10%, 50v	309906	06001	75F1R5A103	1		
C5	Cap, mylar, 2 uF ±10%, 200v	106443	74411	X663F20552W	1		
C6	Cap, mica, 360 pF ±1%, 500v	170407	71236	CM15F361F	1		
C7	Cap, mylar, 1 uF ±20%, 120v	193748	84411	JF-11	1		
C8	Cap, mylar, .047 uF ±10%, 50v	271858	06001	75F1R5A473	1		
CR1, thru CR8,	Diode, Si, hi-speed switching	203323	09214	DHD1105	10		
CR9	Diode, zener, 6.2V	330829	07910	1N4571	1		
Q1, Q2	Xstr, J-FET, N-channel	376475	12040	SF50072	2		
Q3, Q4	Xstr, Si, NPN	218396	04713	2N3904	2		
R1, R2	Res, comp, 1k ±5%, ¼w	343426	01121	CB1025	2		
R3, R6, R28	Res, comp, 10k ±5%, ¼w	348839	01121	CB1035	3		
R4	Res, comp, 270 ±5%, ¼w	348789	01121	CB2715	1		
R5	Res, comp 51k ±5%, ¼w	376434	01121	CB5135	1		
R7	Res, mF, 2.05k ±1%, 1/8w	347013	91637	MFF1-82051F	1		
R8	Res, comp, 5.1k ±5%, ¼w	368712	01121	CB5125	1		
R9	Res, mF, 10k ±1%, 1/8w	168260	91637	MFF1-81002F	1		

ANALOG OUTPUT UNIT PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY USE	TOT REC QTY	CDE
R10	Res, mf, 3.74k \pm 1%, 1/8w	272096	91736	MFF1-83741F	1		
R11	Res, mf, 1.5k \pm 1%, 1/8w	313098	91637	MFF1-81511F	2		
R12	Res, mf, 1k \pm 1%, 1/8w	168229	91637	MFF1-8102F	1		
R13	Res, comp, 220k \pm 5%, 1/4w	384953	01121	CB2245	1		
R14	Res, comp, 470k \pm 5%, 1/4w	342634	01121	CB4745	1		
R15	Pot, cement, 50 \pm 20%, 1/4w	267849	71450	190PC501B	1		
R16	Res, mf, 68.1 \pm 1%, 1/8w	305995	91637	MFF1-86841F	1		
R17	Pot, cement, 50 \pm 20%, 1/4w	267815	71450	190DC500B	1		
R18	Res, mf, 750 \pm 1%, 1/8w	312801	91637	MFF1-89500F	1		
R21, R22	Res, mf, 5.1k \pm 1%, 1/8w	294868	91637	MFF1-85111F	1		
R24	Pot, cement, 50 \pm 10%, 1/4w	285122	71450	360S-500A	1		
R25	Res, mf, 22.1 \pm 1%, 1/8w	261081	91637	MFF1-822R1F	1		
R26	Res, mf, 402 \pm 1%, 1/8w	343400	01121	MFF1-844020F	1		
R27	Res, comp, 2.2k \pm 5%, 1/4w	226209	91637	CB2225	1		
R29	Res, mf 2.49k \pm 1%, 1/8w	226209	91637	MFF1-82491F	1		
S1 Thru S3	Switch assembly, push-button	414466	89536	414466	1		
T1	Xfmr, power	377812	89536	377812	1		
T2	Xsmr	416298	89536	416198	1		
U1	IC, TTL, dual D-type flip-flop	310227	01295	SN7474	1		
U2	IC, TTL, quad 2-input NAND gate	393033	01295	SN74LS00	1		
U3	IC, MOS, dual D-type flip-flop	340117	01295	MC14013L	1		
U4	IC, opto-isolator	380014	01295	TTL116	1		


ANALOG OUTPUT UNIT PCB ASSEMBLY (cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U5	IC, C-MOS, hex buffer/inverter	381848	86684	CD4040	1		
U6	IC, C-MOS, quad bilateral switch	408062	86684	CD4066A+	1		
U7, U10	IC, C-MOS, quad bilateral switch	363838	86684	CD4016AE	2		
U8	IC, C-MOS, quad opnl ampl.	402669	12040	LM 324	1		
U9	IC, opnl ampl	357830	12040	LH0042CH	1		
	Guard, transformr	303412	89536	303412	1		
	Button, switch	369546	71590	J52305-T31753	3		

ANALOG OUTPUT UNIT REAR PANEL ASSEMBLY

REF OR DESIG NO.	DESCRIPTION	FLUKE STOCK NO.	MFG SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REF
J1	Jack, banana, red	162065	74970	108902	1	
J2	Jack, banana, black	162073	74970	108903	1	
R20	Pot, 15-turn, 1k ±10%, 3/4w	417691	80294	3006P-1-100	1	
1	Panel, rear, analog output unit	405928	89536	405928	1	
ANALOG OUTPUT UNIT REAR PANEL (Figure 5-16) ASSEMBLY (2100A-4405)						
						REF

Figure 5-16. ANALOG OUTPUT UNIT REAR PANEL ASSEMBLY.

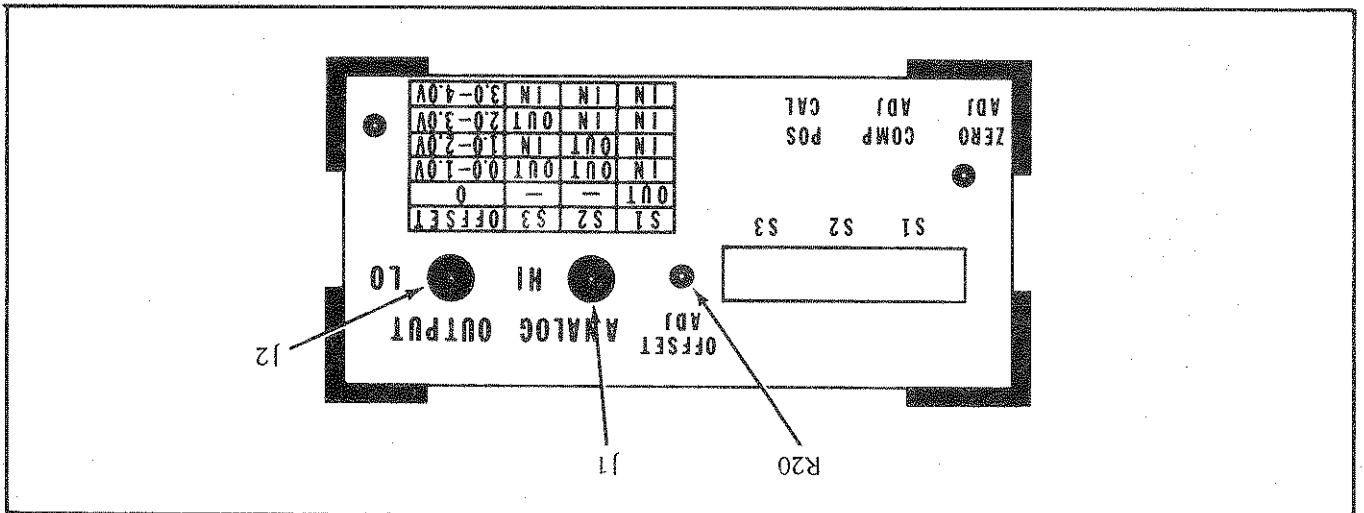

Section 6 Option & Accessory Information

6-1. INTRODUCTION

6-2. This section of the manual contains information pertaining to the options and accessories available for your instrument. Each option and accessory is described under an identifying major heading. The descriptions contain operating and maintenance instructions, and field installation procedures where applicable. A list of replaceable parts and schematics for all options are given in Section 5 and 8, respectively.

6-3. CARRYING CASE (C81)

6-4. The Model C81 Carrying Case, Figure 6-1, is a fiber-glass container for convenient transport or shipment of the 2100A. A foam liner provides the instrument protection from extreme shock. A separate storage compartment provides space for thermocouples, instruction manual, etc.

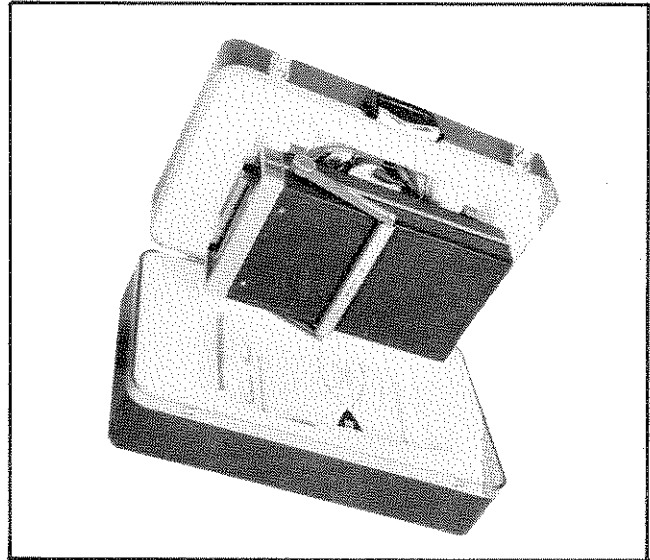


Figure 6-1. C81, CARRYING CASE

6-5. FRONT PANEL COVER (M03-203-700)

6-6. The front panel cover is a molded plastic snap-on accessory which fits over the front panel of the 2100A. The cover provides protection for the front panel controls and display lens, and is useful when storing or transporting the 2100A.

6-7. INSTRUMENT MOUNTING KITS

6-8. Introduction

6-9. Three mounting kits are available for the 2100A. Two kits provide either side-by-side or offset mounting in a standard 19-inch equipment rack; the third kit allows the 2100A to be mounted in any rigid panel (cabinet, console, etc.). Table 6-1 lists the part numbers for each mounting kit.

Table 6-1. MOUNTING KITS

MODEL NUMBER	MOUNTING STYLE
M00-200-618	Side-by-Side Rack Mounting
M00-200-619	Offset Rack Mounting
M00-200-620	Panel Mounting

6-10. Installation Procedures

6-11. Installation instructions for each of the mounting kits is given in the following paragraphs. Use the procedure which corresponds to the model number of the kit being installed.

- 6-12. SIDE-BY-SIDE RACK MOUNTING KIT (M00-200-618)
 - a. Remove the top and bottom dust covers from one instrument.
 - d. Attach the rack ear extension bracket to the rack ear extension using three elastic stop nuts. (See Figure 6-3).

- 6-13. OFFSET RACK MOUNTING KIT
 - a. Remove the feet from the bottom cover.
 - b. Remove the handle disk decals and handle.
 - c. Remove the side trim decals to expose the mounting holes.

- e. Remove the printed circuit boards from the uncovered unit. (See the Access information in Section 4).
- f. Remove the guard enclosure (not shown).
- g. Insert three (3) 8-32 fasteners through the side of the unit, from which the guard enclosure was removed, into the captive nuts on the side of the other unit (see Figure 6-2).
- h. Replace the guard enclosure and printed circuit boards.
- i. Secure the rack ears to the sides, at the front panel end of the assembled units, as shown in Figure 6-2.

- 6-14. PANEL MOUNTING.
 - a. Prepare the cutout in the panel as indicated in Figure 6-4. Insure that the dimensions given for the cutout are followed precisely. Install the 2100A in the panel as follows:
 - b. Remove the handle disc decals and the handle from the 2100A.
 - c. Remove the chassis side decals.


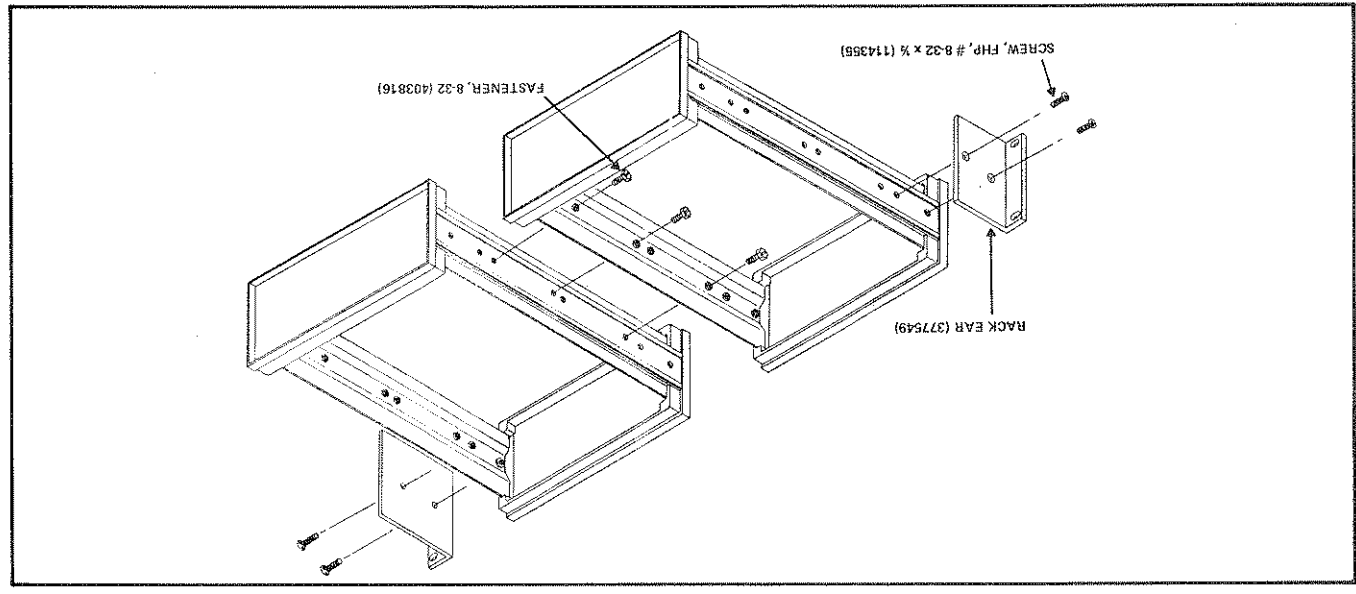



Figure 6-2. SIDE-BY-SIDE RACK MOUNTING

Figure 6-4. PANEL MOUNTING

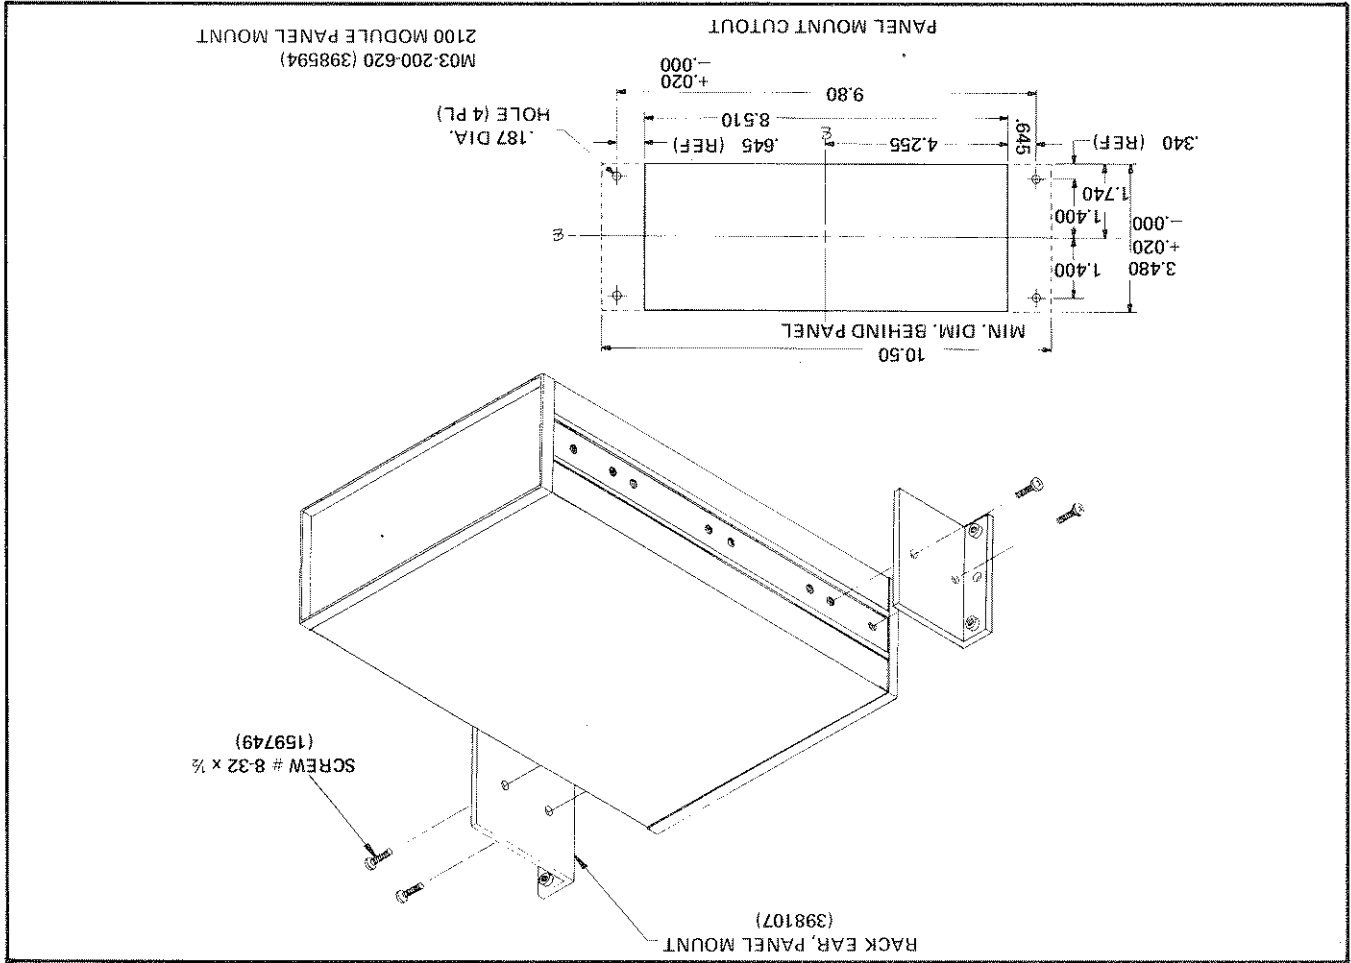

- c. Position the panel mount rack ear against the side of the chassis as shown in Figure 6-4 and secure it in place with two screws. Repeat on the opposite side.
- d. Insert the 2100A into the panel cutout from the rear and fasten it to the panel with the screws provided.

Figure 6-3. OFFSET RACK MOUNTING

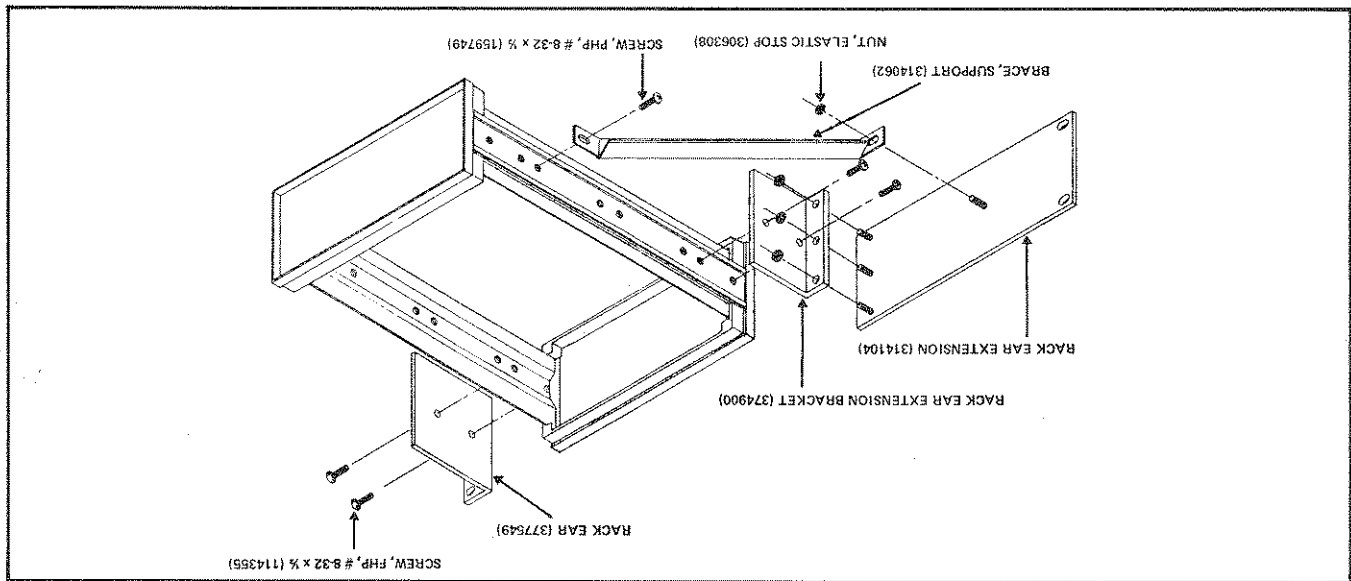

6-16. THERMOCOUPLE PROBES

- f. Align P2 pins 2 thru 13 and P3 pins 1 thru 12, on the type pcb with J-2 pins 2 thru 13 and J3 pins 1 thru 12 of the basic pcb.

g. Press the type pcb down until the pins seat.

h. Remove the old thermocouple type identification decal from the front panel; insert a knife point under one corner and peel it back.

i. Remove the paper back from the new identification decal and press it into place on the front panel.

j. Slide the instrument back into the outer case and secure it in place.

k. Connect the line power cord to the instrument, press the power switch, and allow it to warm up for one-half hour.

l. Recalibrate the instrument following the procedure of section four as they pertain to the new type thermocouple.

6-24. FAHRENHEIT TO CELSIUS CONVERSION KIT (F2CK)**6-25. Introduction**

6-26. The 2100A-03 and 2100A-10 are configured to display temperature in either degrees Fahrenheit or degrees Celsius. Either instrument can be converted from Fahrenheit to Celsius display by installing the 2100A - -- K and the 2100A - F2CK.

6-27. Installation

6-28. The following procedure provides step-by-step instructions for installing the 2100A-F2CK.

a. Remove the 2100A chassis from the outer case as described in steps a, b, and c of paragraph 6-21.

b. Locate and remove the old Read Only Memory (ROM) U22.

NOTE

Use an IC extraction tool to remove the ROM

c. Align the new ROM as shown in Figure 6-5 and press it into place in the IC socket; pin number one should be at the upper left of the ROM as viewed from the rear of the instrument.

d. Reassemble the instrument.

6-17. Three thermocouple probes (J type, K type, and T type) are available from Fluke as accessories for the 2100A.

The thermocouple junction of each probe is connected to the tip of a six inch long one-eighth inch diameter Inconel sheath. Three feet of insulated conductor provide thermocouple connection to the 2100A. The conductor insulation can withstand continuously applied temperatures up to +480° C, (+900° F) or temperatures for a single reading up to +760° C (+1400° C).

6-18. The thermocouple probes (J type, K type, or T type) can be ordered by model numbers P20J, P20K, or P20T, respectively. The type of thermocouple must match the single type configuration of the 2100A-03 or 2100A-10 it is to be used with.

6-19. THERMOCOUPLE TYPE CONVERSION KIT (2100A - -- K)**6-20. Introduction**

6-21. The 2100A-03 or 2100A-10 configured for a particular type thermocouple can be changed to accommodate a new type thermocouple by installing a thermocouple type conversion kit. Each specific conversion kit is identified by filling in the two blanks in the (2100A - -- K) model identification. That is, a kit to accommodate a T type thermocouple in an instrument that displays the temperature in degrees Fahrenheit would be 2100A-TFK. The letter placed in the first blank identifies the thermocouple type (J, K, E, T, R, or S); the letter in the second blank indicates the temperature unit, degrees Celsius (C) or degrees Fahrenheit (F).

6-23. Use the following procedure to install the 2100A - -- K in the 2100A instrument.

a. Remove the line power cord from the instrument.

b. Remove the four retainer screws from the rear panel; two on the extreme left and two on the extreme right of the panel.

c. Pull the rear panel straight back from the outer case about five inches.

d. Locate and remove the old thermocouple type PCB (see Figure 6-5). Use both hands, one at each end of the type pcb, to pull the pcb straight up from the Basic PCB Assembly.

e. Position the new type pcb as indicated in Figure 6-5, i.e., upside down as viewed from the rear of the instrument.

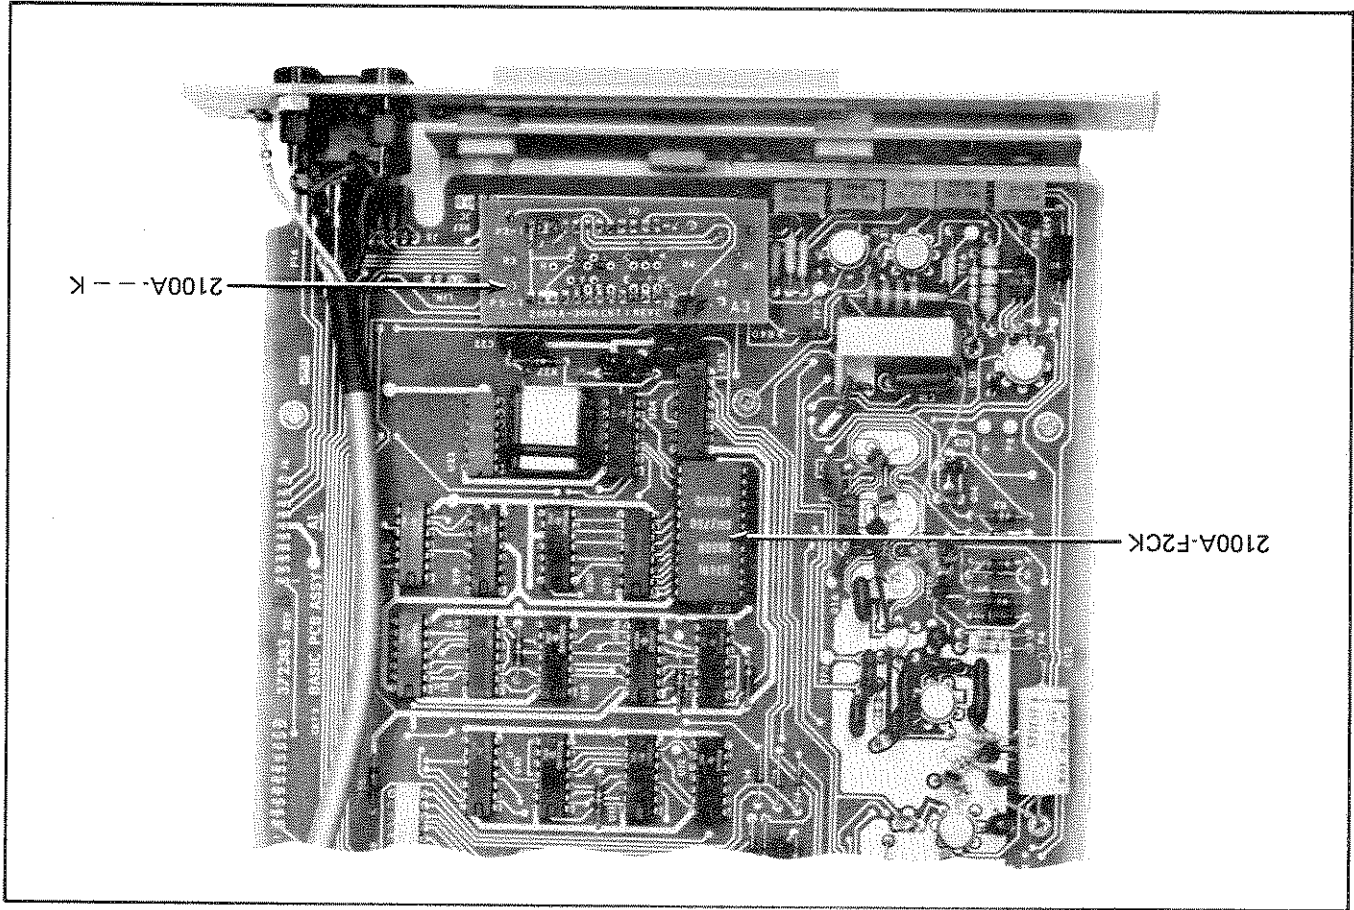


Figure 6-5. 2100A—K AND F2CK LOCATION

- e. Calibrate the 2100A in accordance with the procedure in Section 4 as it pertains to the new configuration of the instrument.

6-29, MULTI-POINT SELECTOR SWITCH (2100A-10K)

6-30. Introduction

- 6-31. The 2100A-10K provides for field conversion from the 2100A-03 single point configuration to the 2100A-10 multipoint configuration. Up to ten thermocouples (all of the same type) can be connected to the 2100A equipped with the multi-point selector switch. Each thermocouple can be selected for display by pressing one of the ten selector switches.

6-32. Installation

- 6-33. The following instructions provide a step-by-step procedure for the installation of the 2100A-10K.

- a. Remove the 2100A from the outer case. Four screws on the rear panel (two each side) secure it in place.

- b. Remove the lower half of the rear panel.

NOTE

Use care when removing the flex connector from J5 on the Main PCB Assy.

- c. Plug one end of the connector cable into J2 on the Multi-Point Assy.
- d. Plug the other end of the cable into P1 on the rear of the Main PCB Assy.
- e. Place the ends of the four plastic standoffs, mounted on the Multi-Point PCB Assy into the slots in the guard cover on the bottom of the Main PCB Assy.

- f. Slide the Multi-Point Assy forward until the two halves of the rear panel are together and secure them with the center mounted thumb screw.
- g. Remove the plastic shield covering the lower half of the outer case front panel.

- h. Slide the assembled 2100A-10 into the outer case and secure it with two screws.

6-34. OPTION -01 BATTERY PACK**6-35. Introduction**

6-36. The 2100A-03, -06, and -10 instruments can be fitted with a battery pack to provide up to seven hours of continuous operation free from external power sources. The battery pack is mounted inside the 2100A case, causing no change in outside dimensions. There is, however, an increase of about two pounds in total instrument weight. Recharging the battery is accomplished by connecting the instrument, via the line power cord, to the appropriate ac power source and turning the instrument on. Recharging will take a maximum of 16 hours.

6-37. Option -01 Operation**CAUTION!**

Damage may result if alkaline, zinc-carbon, or mercury batteries are charged in the 2100A.

6-38. With a fully charged Battery Pack, the 2100A can be disconnected from line power and operated for approximately 7 hours, as a portable instrument. When the least significant digit shows excessive instability plug the 2100A back in to line power; the instability of the digit should immediately stop. This is an indication that the battery is low. If battery operation of the 2100A is continued after instability of the last digit begins, the instrument will stop operating in about 15 minutes.

6-39. Recharging a fully discharged Battery Pack takes about 14 hours. This is accomplished by connecting the 2100A to line power and turning the unit on. The time required to charge the batteries is not significantly affected by operating the 2100A while charging.

Battery manufacturers recommend that Ni-cad batteries be recharged at least every 90 days. Storage temperatures below +25°C are recommended.

NOTE**6-45. OPTION -01 Installation**

- 6-41. Charging capacity may also be affected by a cell's charge-discharge routine, due to a memory-type phenomena. For instance, if a Ni-Cad battery pack is used in a daily routine where it is allowed to discharge by only 30% before being fully recharged again, it will eventually become a battery pack capable of delivering only 30% of its rated capacity. To return such a battery pack to its rated capacity, connect an external load to completely discharge the battery at a rate equal to its capacity divided by 20. For example, a pack of nine series-connected 1.2-volt cells having individual capacity ratings of 2.3 ampere hours should be discharged at 2.3 amp hrs/20 = .115 amp. This requires a load resistor of $10.8\text{V}/.115\text{ amp} = 100\text{ ohms}$ (approximate) with a wattage rating of at least $(10.8\text{V})(.115\text{ amp}) = 1.25\text{W}$. (A 2-watt carbon composition resistor would be suitable.)
- 6-42. Allow the battery pack to discharge for 30 hours, then charge the battery pack at twice the discharge rate for 20 hours. (In the example, the charging rate would be 0.23 amperes at 10.8 volts.) When charging is complete, discharge the pack at the capacity - divided-by-20 rate for 30 hours, then recharge at twice the discharge rate for 20 hours. The battery pack should now be restored to its rated capacity.
- 6-43. **Option -01 Theory of Operation**
- 6-44. The battery charging circuitry, shown in Figure 6-6, will supply charging current to a low battery when the 2100A is connected to line power. The output from the secondary of T1 is connected, via rectifier diodes CR1 and CR2, to a constant current source comprised of Q1, Q2, R1, R2, and CR3. This current source operates as long as the 2100A has line power applied and the power switch is on. When the ac line power is disconnected from the 2100A, operating power comes from the battery via CR4.

- 6-46. The following procedure provides step-by-step instruction for installing the battery pack in the 2100A.

- a. Remove the line power cord from the instrument.
- b. Remove the four retainer screws from the rear panel, two on each side.
- c. Pull the rear panel straight back from the outer case to expose the interior of the instrument.

6-40. There are some phenomena that should be considered when charging nickel-cadmium batteries. For instance, charging Ni-Cad batteries with cell case temperatures above 25°C will cause the cell's charge capacity to decrease. The decrease in capacity is linear from 100% of rated capacity at 25°C to only 60% of rated capacity at 50°C, and as low as 45% at 60°C. Cell case temperatures typically run from 5°C to 10°C above ambient temperature during charging due to heat dissipated by the charging circuit.

d. Remove four screws from the Main PCB to allow the four standoffs of the battery pack to set on the board (see Figure 6-7).

f. Secure the battery pack to the Main PCB by inserting the long screws (four supplied) down through each standoff into the Main PCB.

g. Plug the battery cable into J11 on the Main PCB.

h. Place the 2100A chassis back into the outer case.

6-47. Option -01 Battery Replacement

6-48. Use the following procedure for removing and replacing batteries.

CAUTION!

Do not attempt to use alkaline, zinc-carbon or mercury batteries in the 2100A.

Disconnect the line power cord. Remove the retaining screws from the rear of the instrument case and remove the instrument from the case.

Figure 6-6. BATTERY CHARGING CIRCUIT

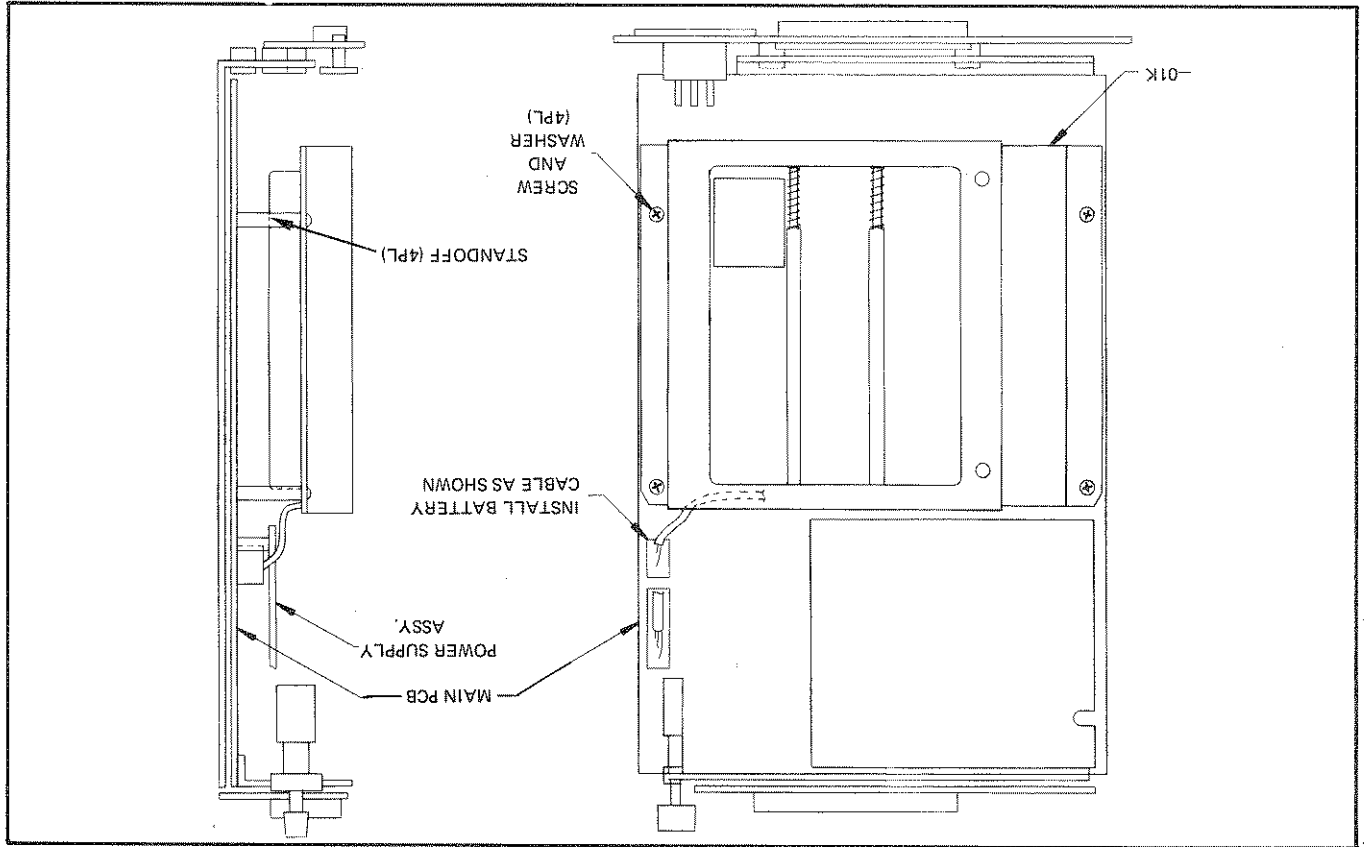
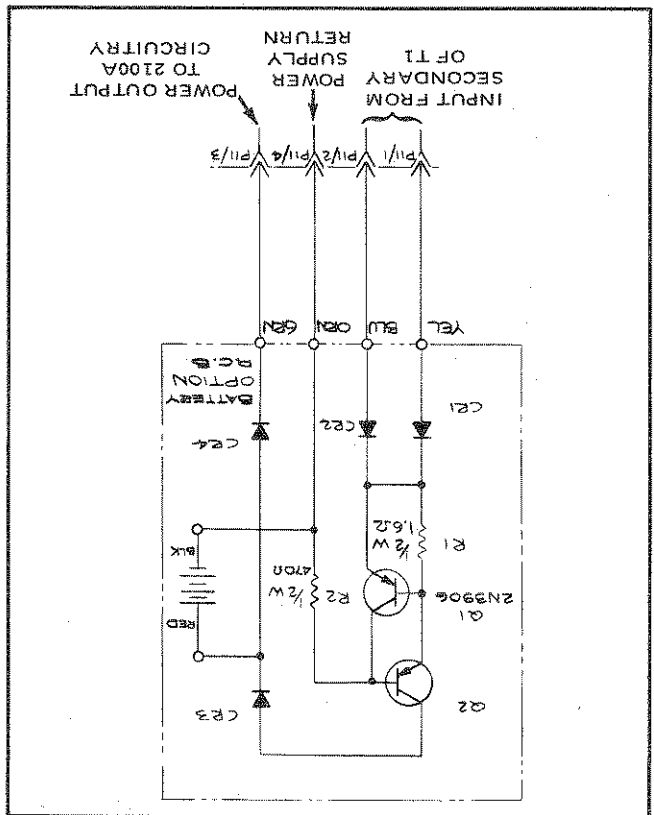


Figure 6-7. BATTERY PACK INSTALLATION

DATA		DOU CONNECTOR		DATA	
+5V Ref	1	A	1	Ground	Ground
BUSY FLAG	2	B	2	Arm Enable	Ground
POLARITY	3	C	3	Arm Input	Ground
CHAN 10 (units)	(8)	D	4	CHAN 10 (units)	Ground
Open Thermocouple	(2)	E	5	CHAN 10 (units)	Ground
Decimal Location	(2)	F	6	Decimal Location	Ground
Digit 5	(8)	H	7	Digit 5	Ground
Digit 4	(8)	J	8	Digit 4	Ground
Digit 3	(8)	K	9	Digit 3	Ground
Digit 2	(8)	L	10	Digit 2	Ground
Digit 1	(8)	M	11	Digit 1	Ground
CHAN 1D (tens)	(2)	N	12	CHAN 1D (tens)	Ground
		P	13		
		R	14		
		S	15		
		T	16		
		U	17		
		V	18		
		W	19		
		X	20		
		Y	21		
		Z	22		
	mV				

NOTES:

- Bit weights are shown in parentheses.
- Digit 1 is most significant.
- Digit 5 is least significant.
- Pins B and C, arm enable and arm input, have no wires in cable. Connections are available in the plug. Pin B, arm enable is normally tied low. See Figure 2.
- A high on pin 6, open thermocouple, prints red.

Table 6-2. DOU INPUT/OUTPUT DATA

- 6-52. **Option -02 Specifications**
 The specifications pertaining to the Digital Output Unit are provided in Section I of this manual.
- 6-53. **Option -02 Operation**
 Replace the batteries with 1.2 volts, 2.3 ampere hour, nickel-cadmium (JF Part No. 370759). Install the batteries in the positions indicated by the molded forms in the battery tray.
- 6-49. **OPTION-02, DIGITAL OUTPUT UNIT**
Introduction
 The Digital Output Unit (DOU) provides 2100A measurement data, in bcd format, at a rear panel output connector. The DOU options can be installed, either at the factory or in the field, in any of the three basic configurations of the digital thermometer (2100A-03, 2100A-06, or the 2100A-10). The output data that can be available at the rear connector (some data changes with 2100A configuration) is presented in Table 6-2. The 2100A equipped with the DOU option can be connected to the Fluke Model 2010A Digital Printer to provide a printed record of temperature data.
- 6-50. **Introduction**
 The data available at the DOU output connector can be updated upon command from an external source or allowed to automatically update once each 400 milliseconds. The data will be automatically updated when pin B (arm enable) of output connector J13 is pulled low (grounded). A commanded update is accomplished by leaving pin B high (open input) and pulling pin C (arm input) low (negative edge trigger) to request new data. The next complete data input from the 2100A will be applied to the DOU output connector. The arm input signal applied to pin C must be low for a minimum of 500 ns to insure that the output data will be updated.
- 6-55. **DATA UPDATE**

6-57. BUSY FLAG

6-58. The Busy Flag (J13 pin 2) is generated when new data is being applied to the DOU output connector. The output at J13 pin 2 can be selected to provide a high true indication (BUSY) or a low true indication (BUSY) that new data is being applied to J13. (Refer to the installation instructions for logic level selection.) The output data on J13 is not valid while the Busy Flag is true.

6-59. Option—02 Theory of Operation

6-60. The DOU is separated by an isolation guard into two halves. One half receives binary coded data from the 2100A and serially passes the data across the guard to the second half. Circuitry in the second half will automatically, or upon command, apply the serial data to a series of shift registers which hold the input data and present it in parallel at the DOU output connector. Timing signals, generated by the 2100A, control the data transfer.


6-61. The three timing signals used to synchronize the data transfer in the DOU are: the Busy Flag (BZ) input on P7-8, the Register pulses (RG) input on P7-7, and Strobe Five (S5) input on P7-6. Figure 6-8 shows the relationship of these three signals. The BZ signal goes high for 2.5 ms of these three signals. The RG signal goes high for 2.5 ms (one series of strobe signals; ST0 through ST7) to indicate that new data has been loaded into the latches within the LSI chip (2100A-U1). The S5 signal that occurs while BZ is high starts the data transfer. The RG pulses then time the sampling of the four bit bcd word(s) applied to the DOU input lines. Refer to the Digital Output Unit schematic in Section 8 when reading the following theory.

6-63. Input data is applied to the DOU on one of two, four-bit parallel inputs (P7-2 thru 5 or P8-2 through 5) plus two three bit parallel inputs (P7-9, P7-10, and P8-7 or P8-8 through 10). The four bit data word transmitted on these lines during each strobe signal is presented in Table 6-3. The code for the decimal location is also provided. Bits of the parallel input data word are sampled one at a time so that the data word is transmitted across the guard in serial form.

6-64. During strobe five (S5), as indicated in Table 6-3, the data word for the decimal location will be present on DOU input lines P7-2 through 5. The four data transfer gates (U4-13, 5, 12, and 6) are opened by the inverted output

6-62. When the BZ signal (P7-8) is high the S5 signal will clock U8 causing the Q output (DT signal) to go high. The DT (Data Transfer) signal is applied to U11-6, U6-12, and U6-6; enabling them to pass the new input data across the GUARD to the DOU output shift registers. The S5 signal is also applied to pin 7 of dual shift register U12. The RG pulse input from P7-7 is applied to U12-9 to clock the S5 signal into the shift register. The RG pulse is also coupled across C1 to U8-4, causing the Q output (U8-2) to go low. This low output is applied to the input (U1-6) of a four pulse oscillator comprised of U1, R2, and C2. This oscillator produces four output pulses for each RG pulse input. The four pulses are inverted by U9-14 and applied to the clock inputs of dual JK Flip-Flop U5. The Q and Q outputs of U5 are connected to U2 in such a way as to enable only one hand gate at a time. The enabled gate then opens the corresponding U3 data transfer gate; U3-13 first, then U3-5, then U3-12, and finally U3-6. The first three gate control signals, indicated as A, B, and C, are also applied to U11-12, U11-5, and U11-13 respectively.

Figure 6-8. DOU TIMING SIGNALS

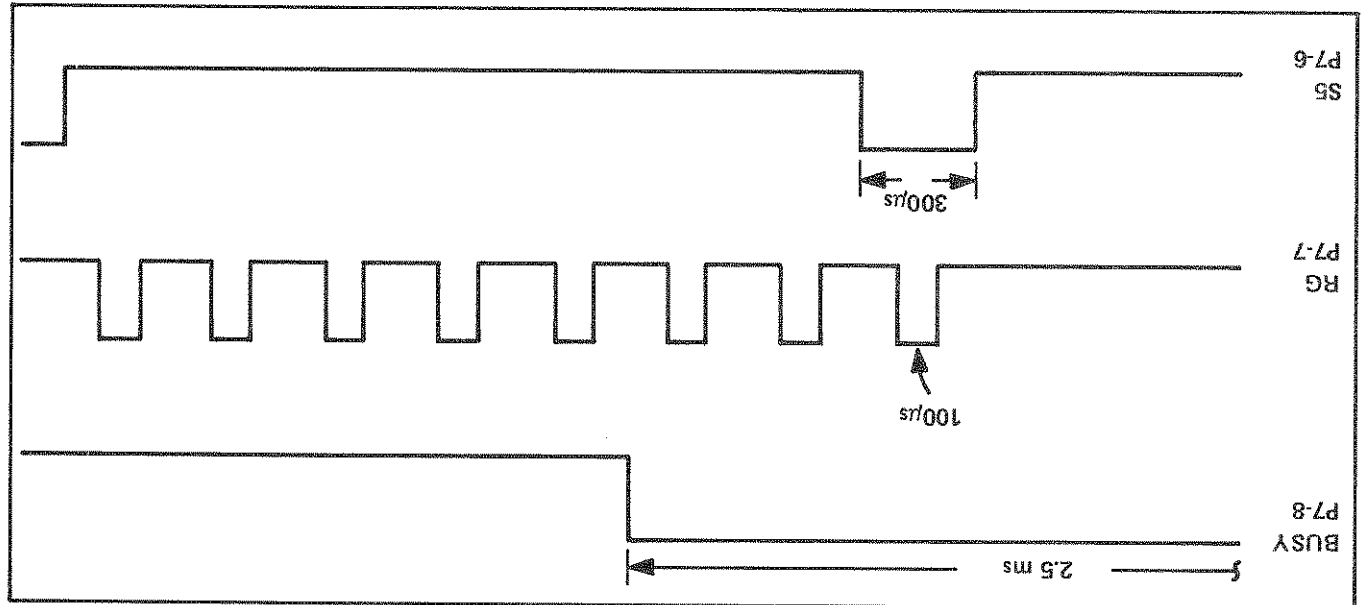

DATA		CONNECTOR PINS				CONNECTOR PINS				DATA							
		STROBE															
DECIMAL LOCATION	S.D.	POL	NO DATA	4th S.D.	MSD	LSD	2nd SD	DECIMAL LOCATION									
	8	POL	—	8	8	8	8	1	2	4	8	39.999	mV	1 0 0	3999.9	DEGREE	0 0 1
	8	POL	—	8	8	8	8	1	2	4	8	3999.9	mV	1 1 0	3999.9	DEGREE	0 0 1
	5	P7-	—	5	5	5	5	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	4	P7-	—	4	4	4	4	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	3	P7-	—	3	3	3	3	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	2	P7-	—	2	2	2	2	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	1	P7-	—	1	1	1	1	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	0	P8-	—	0	0	0	0	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	80	P8-	—	80	80	80	80	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	40	P8-	—	40	40	40	40	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	3	P8-	—	3	3	3	3	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	4	P8-	—	4	4	4	4	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	8	P8-	—	8	8	8	8	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	9	P8-	—	9	9	9	9	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	10	P8-	—	10	10	10	10	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	10	P8-	—	10	10	10	10	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1
	10	P8-	—	10	10	10	10	1	2	4	8	3999.9	mV	1 0 0	3999.9	DEGREE	0 0 1

Table 6-3. DOU INPUT DATA

6-67. The low input to U19-1 is generated to provide either automatic updating or command updating of the DOU output data. Automatic updating occurs when J13-B (ARM ENABLE) is pulled low. The low input is inverted through U16-14 and the resulting high is applied to U19-12 and U18-9. The output at U19-11 goes low which will enable U19-1. Command updating requires a high signal at U13-B (open input) which, when inverted through U17-14 will cause U18-9 to be low. The ARM INPUT signal at J13-C is an edge triggered command; i.e., the high to low transition, when inverted through U17-3, will clock U18-11. The resulting low output at U18-13 is applied to U19-9. The other input (U19-8) will be low when data is not being transmitted across the guard. (This insures that the DOU is not command-

6-65. Due to the amount of data, two three bit data words, one during strobe three and one during strobe four, are transmitted across the guard by a separate path. At strobe three, the output of U12-11 will cause data transfer gates U13-13, U6-5, and U6-13 to open. At the end of strobe three, these gates close and strobe four (U12-2) will open gates U13-6, 5, and 12.

6-66. On the other side of the guard the serial data is loaded into shift registers so that all output data is presented in parallel form. The data is clocked into the shift registers put signal of U12-10 and the data word is applied to data transfer gates U3-13, 5, 12, and 6. The four pulse generator in conjunction with U5 and U2 causes the U3 data transfer gates to open one at a time changing the parallel data word input to serial form for transfer across the guard. The data words of strobe six and strobe seven are transmitted across the guard in the same manner. During strobe zero, however, the output of U12-10 changes state, causing the data transfer gates of U4 to close and those of U7 to open. The data word present on P8-2 thru 5 during strobe zero is changed to serial form for transmission across the guard. The output of U12-10 again changes, at the end of strobe zero, to close the data transfer gates in U7 and reopen those in U4 for the remaining four strobe signals.

- c. Position the DOU on the Main PCB as shown in Figure 6-9.
- d. Insert the DOU flexible land connectors P7 and P8 into J7 and J8 on the Main PCB.
- e. Secure the DOU to the Main PCB by inserting the long screws (four supplied) down through each standoff into the Main PCB.

f. Install the polarity (POL or POD) and busy (BZ or BZ) jumpers to obtain the desired high true or low true logic.

- g. Install the two degree selection jumpers to provide either Celsius or Fahrenheit operation.

- b. Remove four screws from the Main PCB to allow the four standoffs of the DOU to set on the Main PCB.

- a. Remove the 2100A from the outer case.

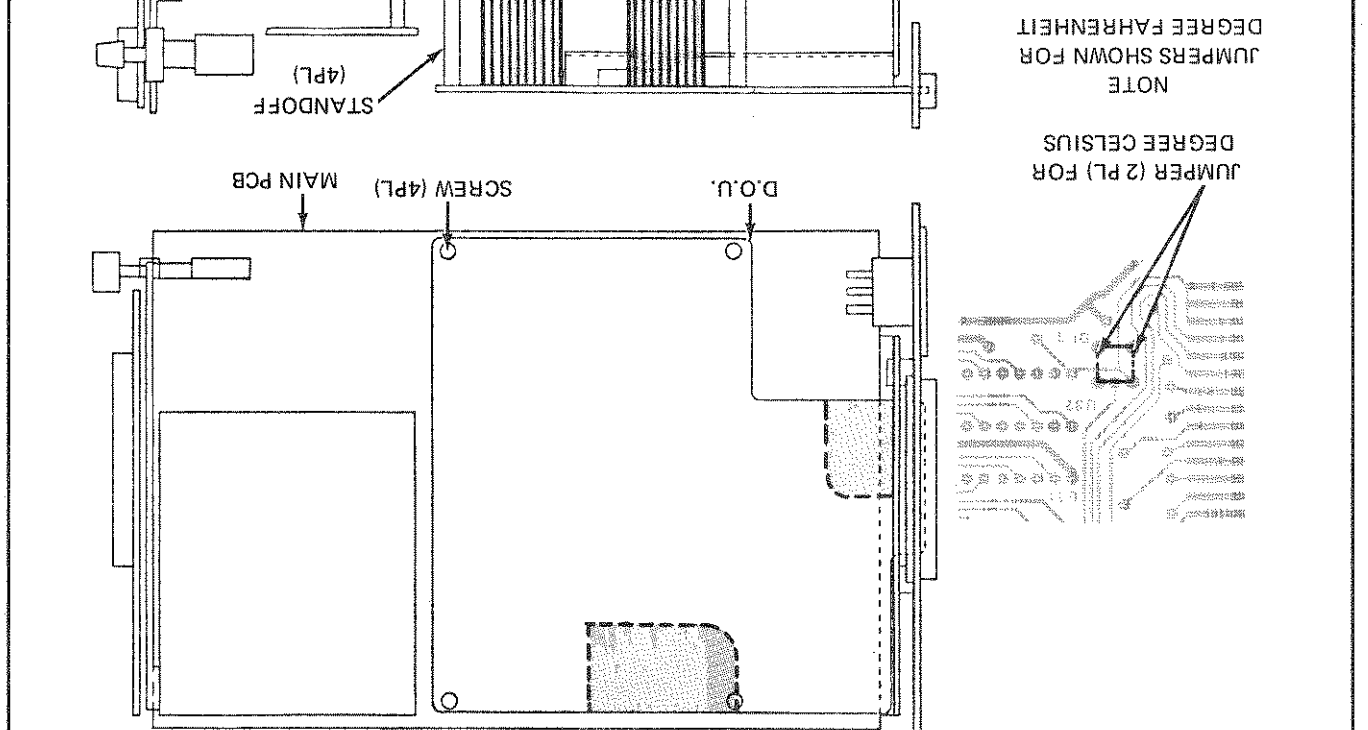
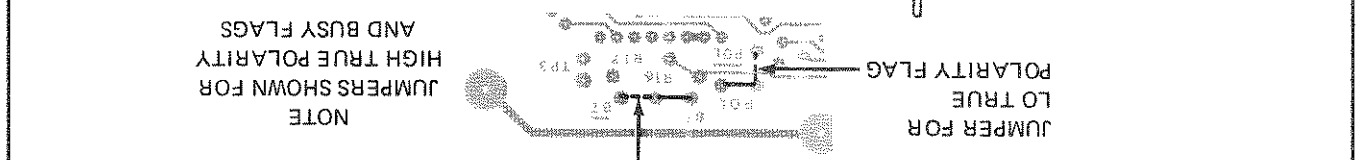


Figure 6-9. DOU INSTALLATION ILLUSTRATION

6-70. ANALOG OUTPUT UNIT, OPTION -04

6-71. Introduction

The Analog Output Unit (AOU) is a field installable pcb assembly which provides the 2100A with a rear panel analog output voltage proportional to the displayed temperature. Provisions are included for zeroing or offsetting the output voltage anywhere within the full scale capability (00000 to 39999) of the 2100A. This feature allows the operator to establish a convenient reference for use with external recording devices, such as, a strip-chart recorder.

6-72. The Analog Output Unit (AOU) is a field installable pcb assembly which provides the 2100A with a rear panel analog output voltage proportional to the displayed temperature. Provisions are included for zeroing or offsetting the output voltage anywhere within the full scale capability (00000 to 39999) of the 2100A. This feature allows the operator to establish a convenient reference for use with external recording devices, such as, a strip-chart recorder.

6-73. The actual output voltage generated by the AOUI is isolated from the measurement circuitry of the 2100A and covers a voltage range of -4 to +4V dc. The output voltage is directly proportional to the displayed temperature when the offset feature is not enabled. For example, a displayed temperature of +125.7 degrees would produce a voltage of +0.1257V dc at the output terminals of the AOUI.

6-74. The offset feature covers the full-scale measurement capability of the 2100A in four separate ranges to

- 6-75. Specification
- 6-76. Specifications for the Analog Output Unit (Option -04) are provided in Section 1 of this manual.
- 6-77. Installation
- 6-78. Use the following procedure to install the Analog Output Unit in the 2100A. Refer to Figure 6-10 for the location of items referenced in the procedure:

- a. Remove the 2100A from its outer case.
- b. Remove the four mounting screws from the main pcb.
- c. Remove the two screws that hold the upper rear panel of the 2100A in place and push out the plastic insert.
- d. Connect the five color-coded leads from the AOUI to the appropriate pins on the main pcb.

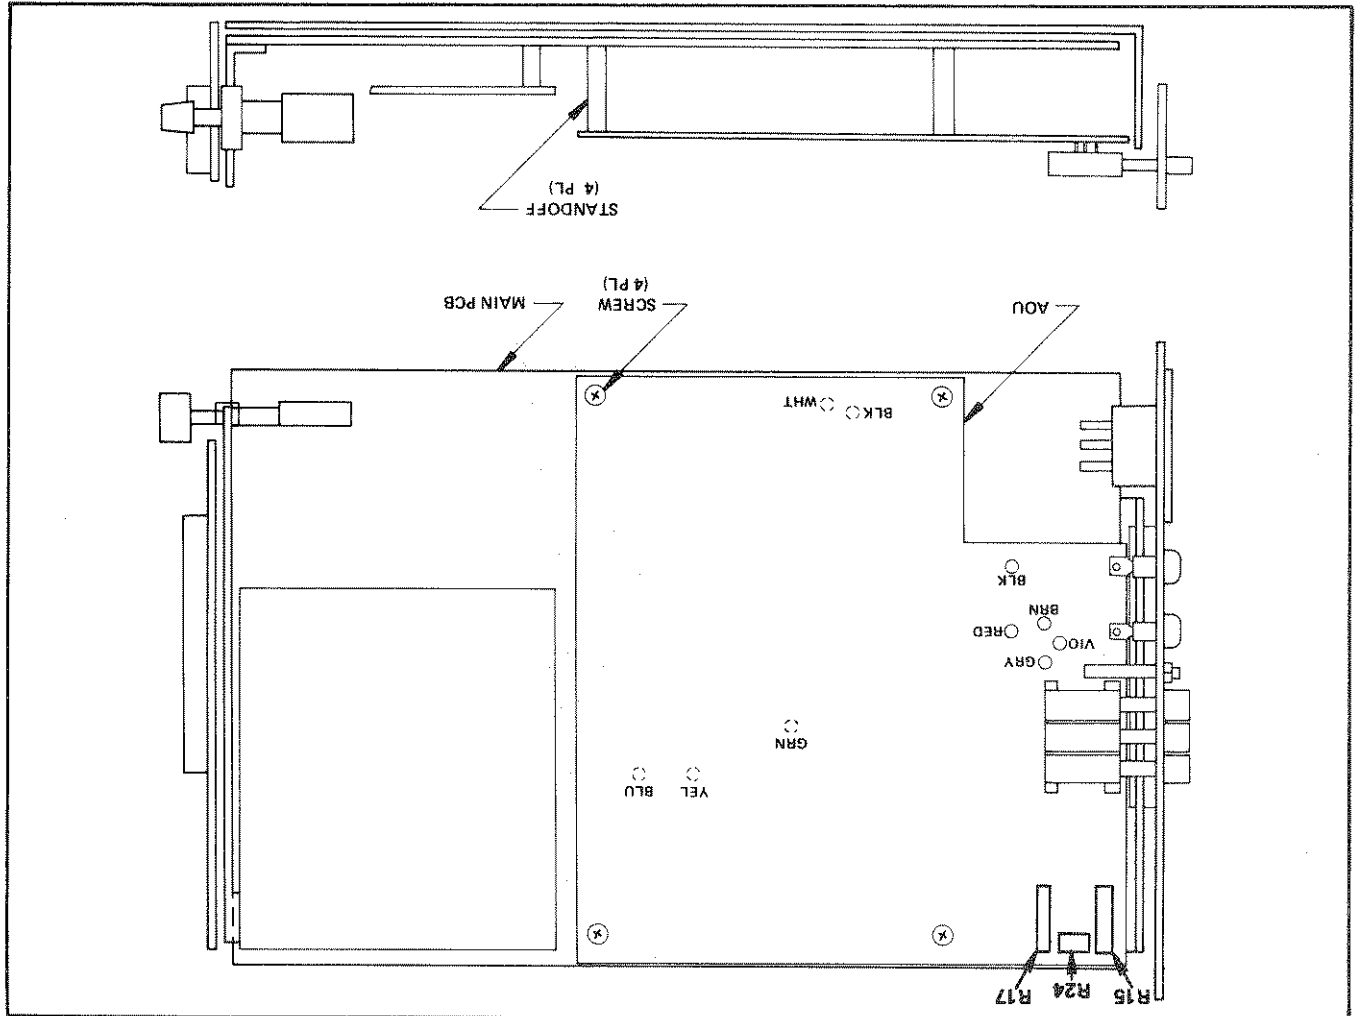


Figure 6-10. AOUI INSTALLATION DETAIL

temperature. For example, if the display reads +1257-2, select the switch combination that will allow a 1.2572 volt offset, i.e., the 1.0 to 2.0V range.

NOTE

The switch combinations required to select a particular offset voltage range are defined on the AOU rear panel.

d. Connect the monitor to the AOU and adjust the AOU OFFSET ADJ pot on the 2100A rear panel until the monitor indication represents the displayed temperature.

NOTE

The AOU output voltage is offset by a voltage

within the selected range and is dependent upon the position of the OUTPUT ADJUST pot. The resultant AOU output is equal to $A-X$. Where: A is the AOU output with SI in the OUT position, and X is the offset voltage selected by the OFFSET ADJ pot (When A is negative, the AOU output is $A+X$).

6-81. Theory of Operation

6-82. The function of the AOU is to convert the read clock from the 2100A into an analog output voltage which is proportional to the displayed temperature. Control signals and operating power for the AOU are transferred through a guard crossing to ensure isolation between the 2100A inputs and the AOU outputs. A functional block diagram of the AOU is given in Figure 6-11 and a timing diagram for the AOU is shown in Figure 6-12.

6-83. Input data to the AOU is received in the form of the read clock and the $\overline{DE} + \overline{DE}$ - reference command, both of which are generated during the 2100A read period. The read clock is coupled across the guard to the Control Logic where it is conditioned for use in driving analog gates B, C and D (shown in Figure 6-11 as switches). The $\overline{DE} +$ and $\overline{DE} -$ signals are also coupled across the guard and used to operate the polarity analog gate (switch A). Initial operation begins with switches A, B, C and D in the positions shown.

6-84. At the end of the read period, the appropriate polarity command is received at the AOU and switch A is positioned to provide either a positive ($\overline{DE} +$) or a negative ($\overline{DE} -$) analog output voltage. As the 1 MHz read clock is received at the control logic, it is divided-by-four and the resulting 250 KHz pulse is used to toggle switch B in the Integrator circuit. The toggle action at switch B causes capacitor C6 to be charged through R12 and then

e. Position the AOU on the main pcb as shown in Figure 6-9.

f. Secure the AOU to the main pcb by inserting the four long screws down through each stand-off and into the main pcb.

g. Place the 2100A rear panel back into position allowing the AOU push-button switches to protrude through the slot.

h. Position the AOU rear panel over the switches and install the two screws to hold the panel in place.

i. Connect the five color-coded leads from the AOU rear panel to the AOU pcb as indicated in Figure 6-9.

j. Install the 2100A in its outer case.

NOTE

If pins are not present on the pcb, install the pins provided with the AOU kit in the color coded positions etched on the main pcb. Some earlier models do not have provisions for installing these pins. Call your local service center or contact the John Fluke Mfg. Co., Inc. in this event.

6-79. OPERATION

6-80. Once installed in the 2100A, the AOU requires no operator attention other than checking to insure that the rear panel offset switches are properly positioned, and, if necessary, adjusting the offset voltage. If an offset is not required, set switch S1 to the OUT position. If required, use the following procedure to adjust the offset:


Use of the offset feature is optional and is only required when it is necessary to display a small temperature band (about some larger temperature) on the external monitor (recorder).

a. Energize the 2100A and connect the desired thermocouple to the input terminals.

b. Expose the thermocouple to a temperature which approximates the typical temperatures to be encountered by the probe. This temperature must fall within the temperature band to be displayed by the external monitor.

c. Observe the 2100A display and select the AOU range switch combination which covers the display

Figure 6-11. AOU FUNCTIONAL BLOCK DIAGRAM

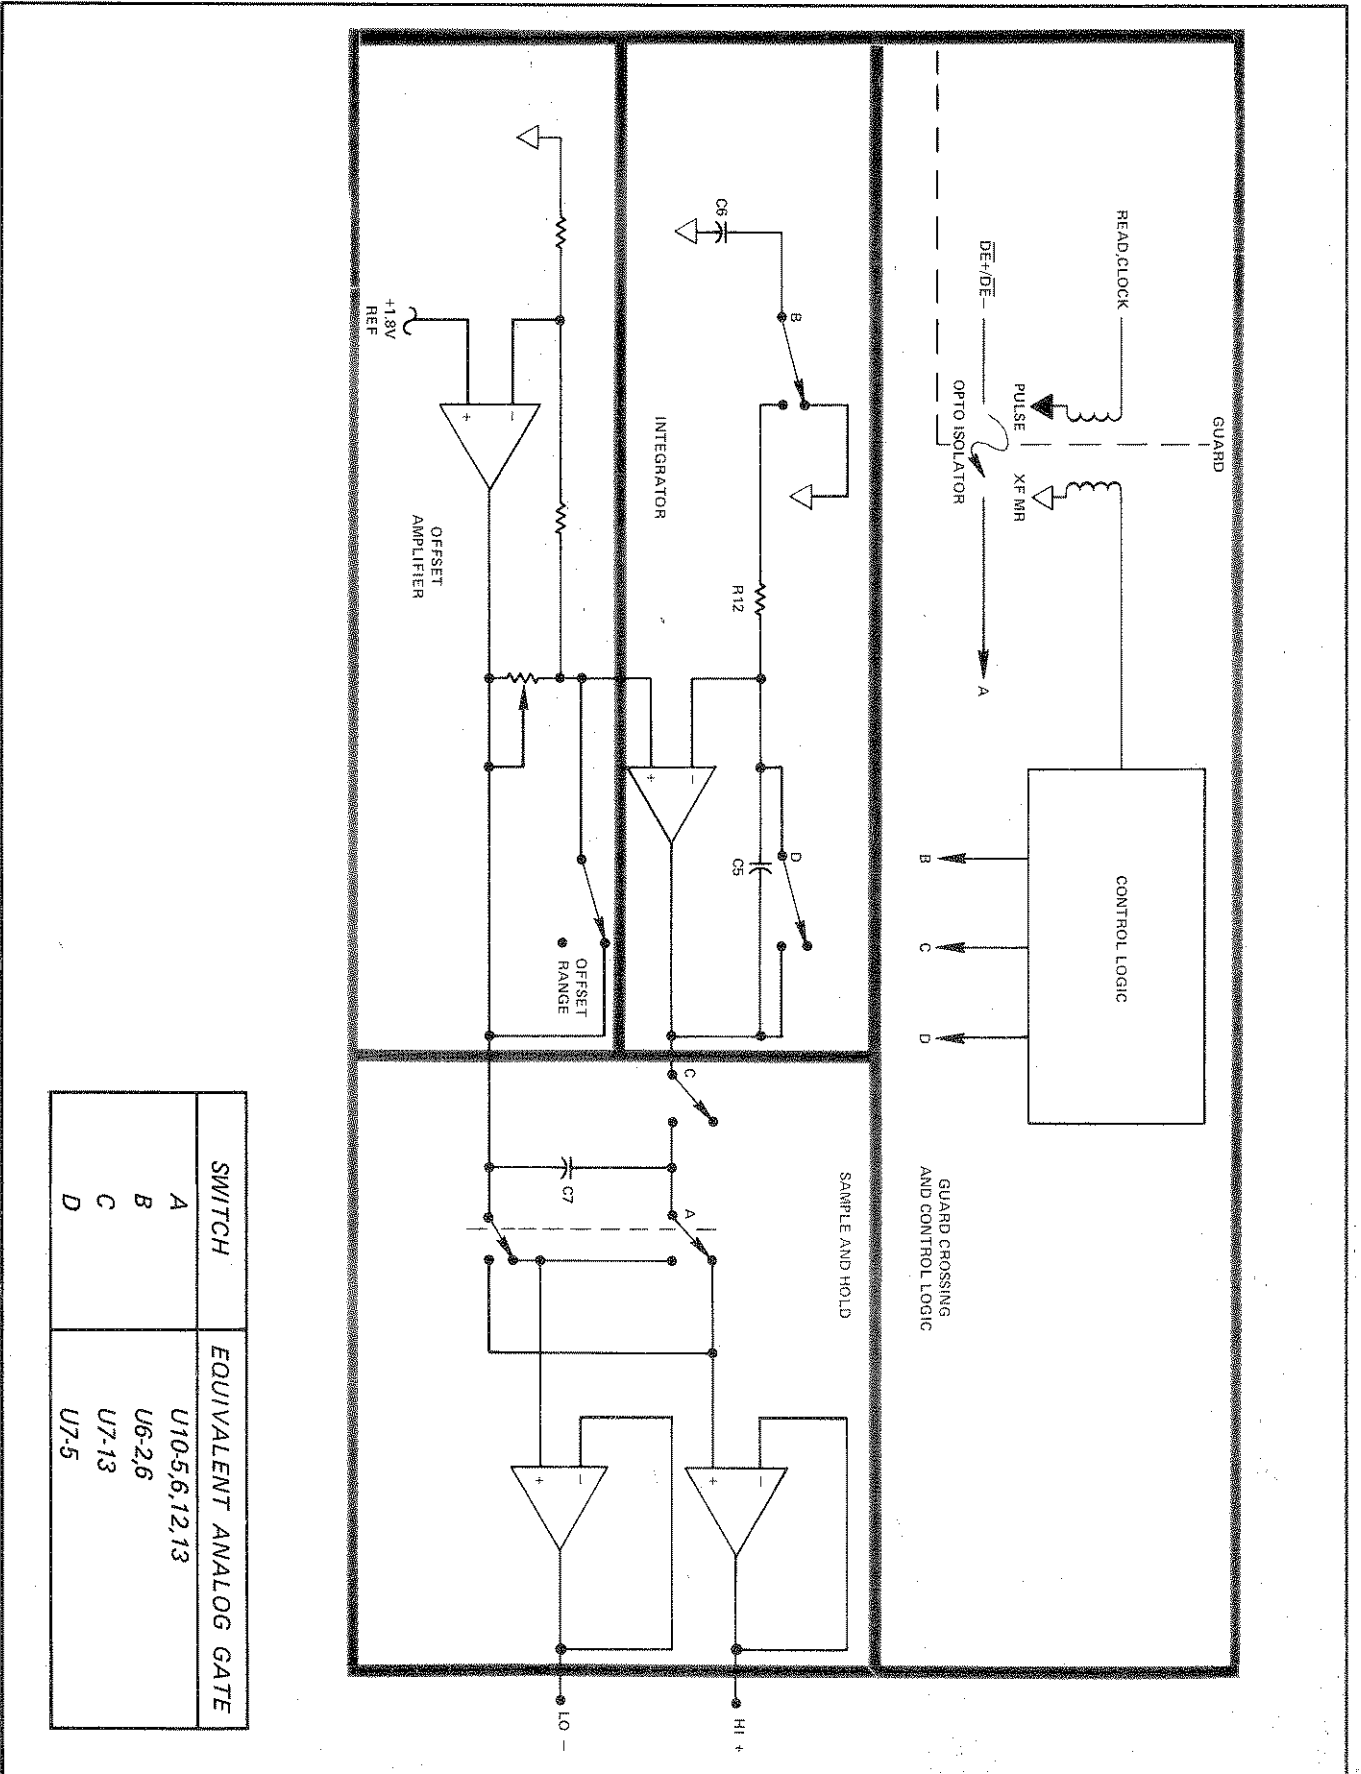

SWITCH	EQUIVALENT ANALOG GATE
A	U10-5,6,12,13
B	U6-2,6
C	U7-13
D	U7-5

- h. Remove the short circuit from TP1 and TP2.
 - g. Adjust R24 (Internal Offset) on the AOU for 0 ± 50 mV on the DVM. See Figure 6-9. The DVM should be on the lowest dc voltage range with filter out.
 - f. Set full AOU offset range switches (S1, S2, and S3) to the out position.
 - e. For units equipped with Option -06, select the 400 mV range.
 - d. Short circuit TP1 to TP2 on the AOU.
 - c. Short circuit the inputs of the 2100A.
 - b. Connect the AOU output terminals (HI, LO) to the DVM inputs.
 - a. Remove the reference junction jumper from the 2100A. See Figure 4-2.
- Refer to Table 6-4, and select the thermocouple type that corresponds to the type used by the 2100A being calibrated. If the 2100A includes the -06 option, select the 400 mV range.
- Adjust the output of the DC Voltage calibrator to provide a 2100A input that corresponds to the thermocouple type selected in step n.
- Adjust R15 (Full Scale Calibration) to provide a DVM reading within the limits given in Table 6-4. If the R15 adjustment is insufficient, solder a shorting bar across R26 (402Ω ± 1%).
- Repeat steps j through p until both zero and full scale readings are within limits. (This compensates for interaction between R17 and R15.)

- m. Reverse the inputs to the 2100A. If the DVM does not indicate 0 ± 150 μV dc, repeat steps c through m.
 - l. Adjust R17 (Zero Offset) for a 0 ± 150 μV dc indication on the DVM.
 - k. Adjust the DC voltage calibrator to obtain +00001 reading on the 2100A. Then reduce the input voltage to obtain a solid +00000 reading, i.e., the 2100A should not flash either a 1 or a minus sign.
- Adjust R17 (Zero Offset) for a 0 ± 150 μV dc indication on the DVM.
- Reverse the inputs to the 2100A. If the DVM does not indicate 0 ± 150 μV dc, repeat steps c through m.
- Refer to Table 6-4, and select the thermocouple type that corresponds to the type used by the 2100A being calibrated. If the 2100A includes the -06 option, select the 400 mV range.
- Adjust the output of the DC Voltage calibrator to provide a 2100A input that corresponds to the thermocouple type selected in step n.
- Adjust R15 (Full Scale Calibration) to provide a DVM reading within the limits given in Table 6-4. If the R15 adjustment is insufficient, solder a shorting bar across R26 (402Ω ± 1%).
- Repeat steps j through p until both zero and full scale readings are within limits. (This compensates for interaction between R17 and R15.)


6-87. Calibration

6-86. At the end of the read period, the read clock and switch B are stopped and C5 is charged to a voltage proportional to the 2100A reading. At this time a 4 ms pulse is generated by the Control Logic to close switch C. During this period, the differential output of the Integrator and the Offset Amplifier is connected to Capacitor C7, and delivered through polarity switch A to the AOU output terminals. At the end of the 4 ms period, switch C opens and capacitor C7 maintains the AOU output until it is updated following the next read period.

6-85. In addition to providing a reference voltage for the Integrator circuit, the Offset Amplifier provides the adjustable voltage used to offset the final AOU output. The Offset Amplifier is a standard positive-gain amplifier with range resistors which are manually selected and adjusted to determine offset amplitude. A +1.8 volt source derived from the +10 volt operating supply is used as a reference input to the Offset Amplifier.

6-84. At the end of the read period, the read clock and switch B are stopped and C5 is charged to a voltage proportional to the 2100A reading. At this time a 4 ms pulse is generated by the Control Logic to close switch C. During this period, the differential output of the Integrator and the Offset Amplifier is connected to Capacitor C7, and delivered through polarity switch A to the AOU output terminals. At the end of the 4 ms period, switch C opens and capacitor C7 maintains the AOU output until it is updated following the next read period.

Figure 6-12. AOU TIMING DIAGRAM

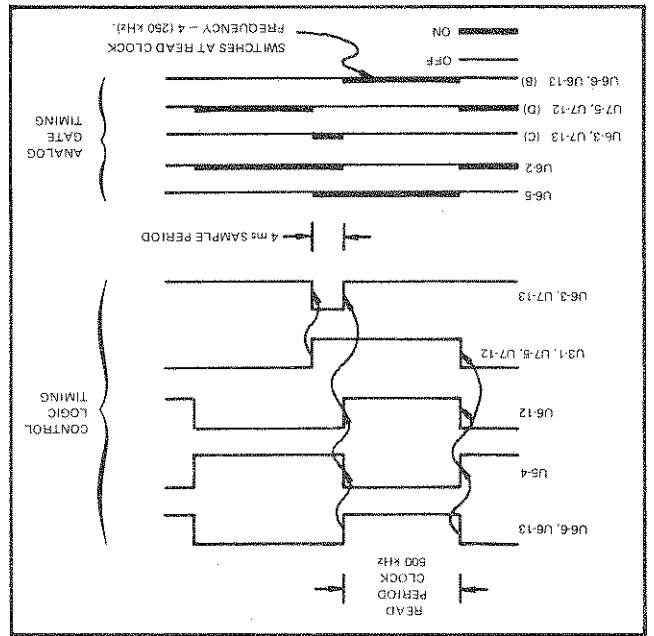

- i. Remove the short circuit from the 2100A input.
- j. Set the output of the DC voltage calibrator to 0V and connect it to the 2100A inputs.

THERMOCOUPLE TYPE	2100A		AOU OUTPUT, V dc
	INPUT IN mV	DISPLAY	
J °F	+42.919	1374.9 ± 1	1.3803 to 1.3695
K °F	+53.633	2400.0 ± 1	2.3920 to 2.4080
T °F	+20.868	732.3 ± 1	0.7285 to 0.7361
E °F	+77.712	1840.0 ± 1	1.8334 to 1.8466
R °F	+20.917	3175.0 ± 3	1.5815 to 1.5934
S °F	+18.553	3175.0 ± 3	1.5815 to 1.5934
J °C	+42.919	760.0 ± 1	0.7561 to 0.7639
K °C	+55.833	1400.0 ± 1	1.3945 to 1.4045
T °C	+20.868	400.0 ± 1	0.3970 to 0.4030
E °C	+73.355	960.0 ± 1	0.0556 to 0.9644
R °C	+21.096	1767.0 ± 1	0.8803 to 0.8867
S °C	+18.704	1768.6 ± 1	0.8811 to 0.8875
400 mV	+390.00	390.00 ± 1	3.8703 to 3.9298

Table 6-4. AOU FULL-SCALE CALIBRATION (R15)

OFFSET VOLTAGE RANGE	LOW LIMIT	HIGH LIMIT
0.0 - 1.0V	-0.01V	+1.001V
1.0 - 2.0V	+0.999V	+2.001V
2.0 - 3.0V	+1.999V	+3.001V
3.0 - 4.0V	+2.999V	+4.001V

Table 6-5. OFFSET VOLTAGE RANGE LIMITS

- v. Select the 0.0 to 1.0V offset range on the AOU and adjust R20 for a maximum reading on the DVM. The reading should be $\geq +1.001V$ dc as shown in Table 6-5.
- w. Sequentially select the three remaining offset voltage ranges and check the DVM reading for each to ensure that it meets or exceeds the high limit listed in Table 6-5.
- x. Install the reference junction jumper removed earlier in this procedure.

- r. Adjust the rear panel OFFSET ADJ pot (R20) for a minimum reading on the DVM. The reading should be $\leq 0.01V$ dc as shown in the low limit column of Table 6-5.
- u. Sequentially select the three remaining offset voltage ranges and check the DVM reading for each to ensure that it is within the low limit listed in Table 6-5.

- s. Refer to the chart on the rear of the AOU and select the switch combination for the 0.0 to 1.0V offset range.

r. Short circuit the 2100A input.

Steps r through x are necessary only if the AOU has been recently repaired or there is other reason to question the operation of the variable offset.

NOTE

NOTE

The first metal of the thermocouple, as indicated on the 2100A front panel decal, connects to the HI terminal; the second metal, to the LO terminal. If the thermocouple has a shield lead connect it to the GD (guard) terminal; if not, short the LO terminal to the GD terminal.

Make the thermocouple connections to the middle pcb next, and the top pcb last.

6-94. The 2150A is connected to the 2100A via a ribbon cable that allows the two units to sit side-by-side or be stacked. Use the following procedure to connect the 2150A to the 2100A. Any difference in procedure related to the 2100A configuration (i.e., 2100A-03, 2100A-06, or 2100A-10) will be noted.

a. Remove the rear cover from the 2150A.

b. (1) (2100A-03 or 2100A-06)

Remove the lower rear panel of the 2100A by removing the three encircled screws and disconnecting the flex cable connector.

b. (2) (2100A-10)

Loosen the thumb screw from the rear panel (center) of the 2100A and slide the lower half of the chassis out about four inches.

c. Connect the supplied interconnect cable to the 2150A board edge connector (s) as shown in Figure 6-14. (One connection for the 2150A-10, two for the 2150A-20, and three for the 2150A-30.)

d. (1) (2100A-03 or 2100A-06)

Connect the other end of the interconnect cable to the board edge connector described as (-03 or -06 CONNECTION) in Figure 6-14.

d. (2) (2100A-10)

Connect the other end of the interconnect cable to the board edge connector described as (-10 CONNECTION) in Figure 6-14.

NOTE

Do not reconnect the flex cable of the 2100A-03 or 2100A-06 disconnected in step b(1). Bend the flex cable perpendicular to the lower rear panel before reinstallation.

e. Replace the rear panels of the 2150A and 2100A in Figure 6-14.

6-89. 2150A MULTIPoint SELECTOR SWITCH

6-90. Introduction

6-91. The 2150A is an accessory to the 2100A that provides input connections for additional thermocouples. This accessory is compatible with all 2100A configurations. Three configurations of the 2150A provide switch selectable input connections for ten thermocouples (2150A-10), twenty thermocouples (2150A-20), or thirty thermocouples (2150A-30). Two or three 2150A units can be connected in series to obtain as many as ninety additional input connections.

6-92. Connection for Operations

6-93. Thermocouple connections to the 2150(s) and point selection, for display on the 2100A, are explained in the following procedure.

a. Remove the rear panel cover from the 2150 (s).

b. Slide the lower pcb out of the 2150A case and make the thermocouple connections (see Figure 6-13.)

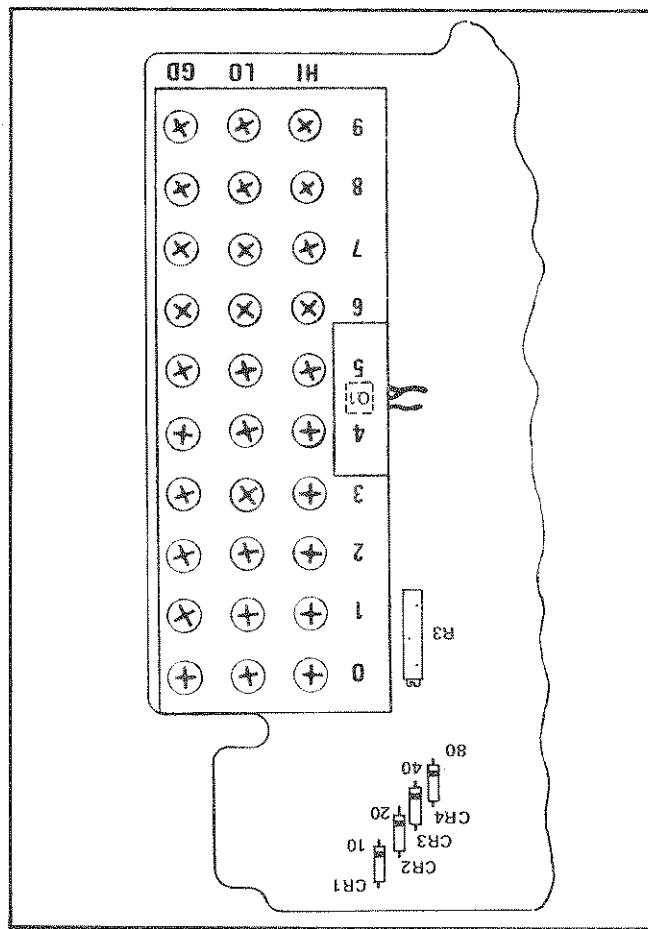


Figure 6-13. THERMOCOUPLE CONNECTIONS AND CALIBRATION ADJUSTMENT LOCATIONS

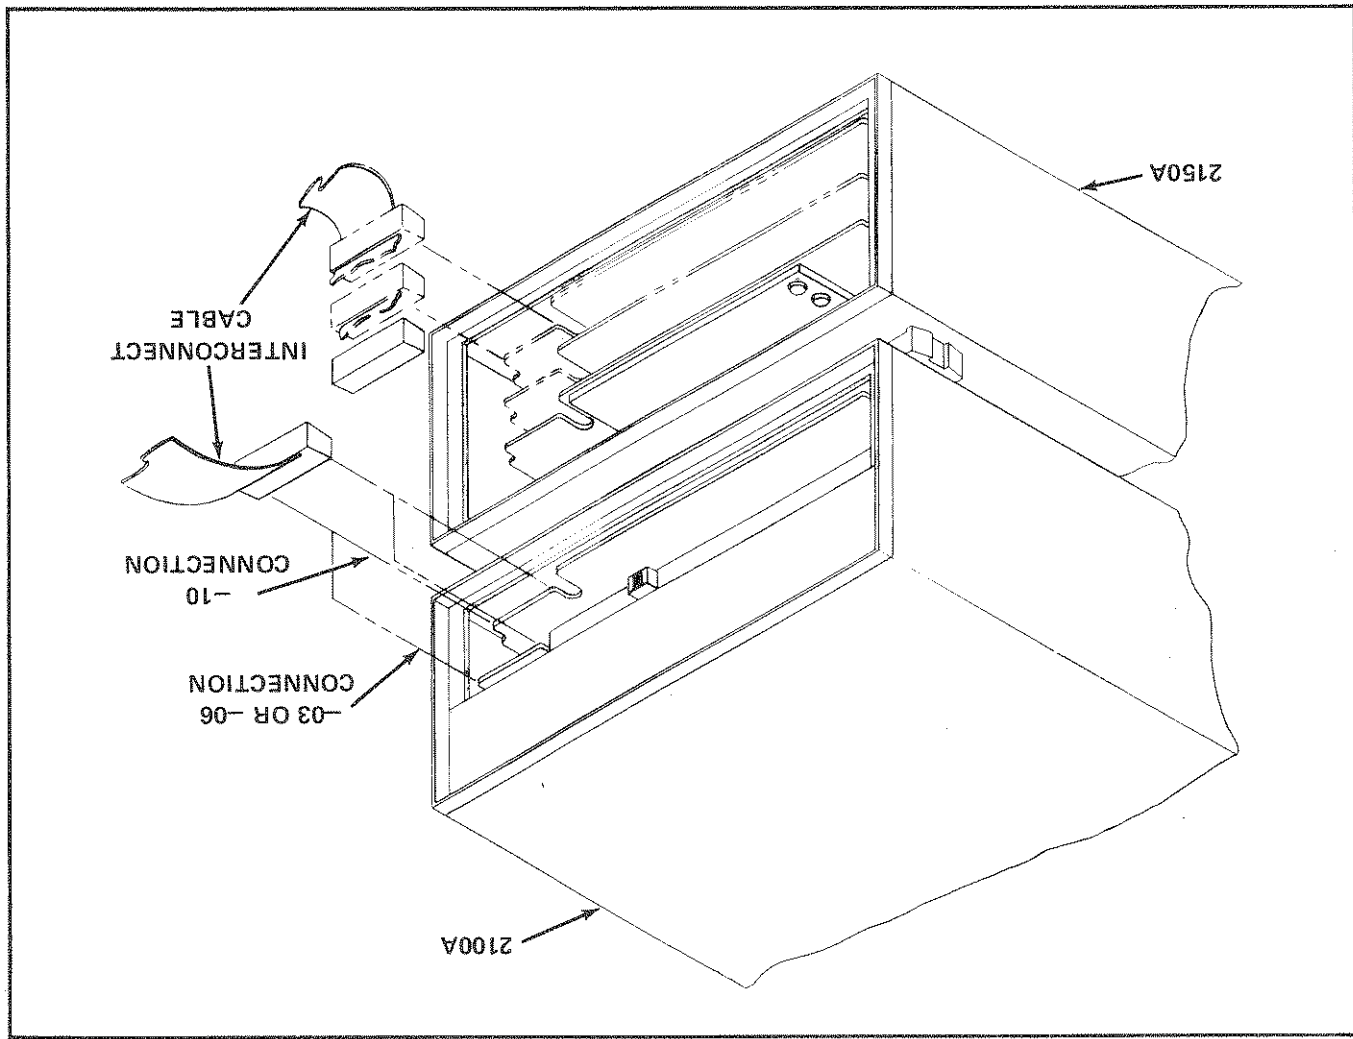


Figure 6-14. 2150A - 2100A INTERCONNECTION

6-95. Series connection of two or three 2150A instruments is described in the following procedure.

- a. Remove the rear panels from the 2150A's
 - b. Connect one end of the interconnect cable to the board edge connectors (see Figure 6-14) on one 2150A.
 - c. Slide the upper board of the second 2150A out of the case.
 - d. Connect the free end of the interconnect cable to the board edge connector at the front end of the board removed in step c.
 - e. Place the upper board back into the 2150A.
- 6-96. When the 2150A is used with a 2100A, equipped with the -02 option (DOU), the channel identification of each decade is determined by selecting and removing the proper diodes from the 2150A PCBs. Figure 6-10 shows the four channel identification diodes, CR1, CR2, CR3 and CR4, which correspond to decades 10, 20, 40, and 80 respectively. Identification of each decade of the 2150 is accomplished in a binary coded manner. To identify the units decade, leave all diodes in place, identify the tens decade by removing CR1, the twenties decade by removing CR2, the thirties decade by removing both CR1 and CR2, and so on until the diodes of each PCB have been selected to provide the proper channel identification code.
- f. Attach the series connected 2150A units to the 2100A following the same procedure used to connect a single 2150A.

Connecting a third 2150A to the second is done in the same manner as described above.

NOTE

6-99. Calibration

6-100. Correct operation of the combined 2100A and 2150A(s) is determined by comparing the temperature indicated by an accurate calibration thermometer (Finnco ASTM-56C). At least one input point in each decade of inputs should be checked to insure correct operation of the 2150A (s). Use the following procedure for the operational evaluation of the 2100A/2150A (s) configuration.

6-98. Correct operation of the combined 2100A and 2150A(s) with attached thermocouple type, must be calibrated as a system in order to assure maximum absolute temperature display accuracy. For this reason it is recommended that the 2150A be adjusted to fit the particular 2100A it is to be used with. Use the following procedure to adjust the 2150A (s).

- a. Connect the 2150A (s) to the 2100A.
- b. Place the thermocouple of the appropriate type (for the 2100A-06 also press the corresponding type select switch) and the calibration thermometer into a temperature lag bath at room temperature (20° C to 26° C).
- c. Connect the thermocouple to the 0 POINT to each decade of the 2150A. (Allow about two minutes for the system to stabilize before going on to step d.

- d. Adjust R3, on the 2150A pcb to which the thermocouple is connected, for a 2100A display equal to the temperature indicated by the calibration thermometer plus or minus 0.1° Celsius or Fahrenheit.
- e. Connect the thermocouple to each decade of the 2150A(s), and wait two minutes, then adjust the corresponding R3 for a 2100A display within 0.1° of the calibration thermometer indication.

NOTE

The CANCEL switch of the completed decade must be pressed and the POINT selection switch, corresponding to the thermocouple location on the next decade, must also be pressed.

6-97. Operational Evaluation

6-97. Correct operation of the combined 2100A and 2150A(s) is determined by comparing the temperature indicated by an accurate calibration thermometer (Finnco ASTM-56C). At least one input point in each decade of inputs should be checked to insure correct operation of the 2150A (s). Use the following procedure for the operational evaluation of the 2100A/2150A (s) configuration.

Insure that the 2100A is within the calibration limits as specified in Section 4.

NOTE

- a. Attach one thermocouple to the 0 position input terminals in each decade of the 2150A (s).
- b. Place the 2100A/2150A (s) and thermocouples in a room temperature (20° C to 26° C) environment protected from drafts that may cause short term instabilities in the temperature.
- c. Place the calibration thermometer next to the thermocouples.
- d. Energize the 2100A and allow one-half hour for the instrument to stabilize.
- e. Press the 0 POINT select switch of each decade (one at a time) and observe the 2100A display for a temperature indication approximately equal to that indicated by the calibration thermometer.

NOTE

Since the absolute accuracy of the temperature reading depends upon the 2100A instrument type (-03, -06, or -10) and thermocouple type (J, K, E, R, or S) plus the 2150A, the operational evaluation checks for a close approximation of equal temperature indication not an absolute accuracy.

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

Section 7

General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the List of Replaceable parts contained in Section 5. The following information is presented in this section:

List of Abbreviations
Federal Supply Codes for Manufacturers
Fike Technical Service Centers — U.S. and Canada
Sales and Service Locations — International
Sales Representatives — U.S. and Canada

Federal Supply Codes for Manufacturers (Continued)

11711	General Instrument Corp	14099
	Rectifier Division	
	Hickville, New York	
11726	Edison Electronic Div.	14140
Qualdyne Corp.	Mc Gray-Edison Co.	
Santa Clara, California	Manchester, New Hampshire	
12014	Santa Clara, California	14193
Chicago River & Machine Co.	Cal-R-Inc. formerly	
Bellwood, Illinois	California Resistor Corp.	
12040	Santa Monica, California	14298
National Semiconductor Corp.	American Components, Inc.	
Danbury, Connecticut	an Inslico Co.	
12060	Conshohocken, Pennsylvania	14655
Diodex, Inc.		
Chatsworth, California		
12136	Cornell-Dubilier Electronics	14878
Philadelphia Handle Co.	Division of Federal Pacific	
Camden, New Jersey	Electric Co. Govt. Control Dept.	
12300	Newark, New Jersey	14752
Potter-Brumfield Division	Electro Cube Inc.	
AMF Canada LTD.	San Gabriel, California	
Guelph, Ontario, Canada		14869
12323	Replaced by 96853	
Presn Co., Inc.		
Shelton, Connecticut		14936
12327	General Instrument Corp.	
Freeway Corp. formerly	Semi Conductor Products Group	
Freeway Washer & Stamping Co.	Hicksville, New York	
Cleveland, Ohio		15636
12443	Elec-Trol Inc.	
Budd Co. The, Polychem Products	Saugus, California	
12480	Parts Division	
Titusville, Pennsylvania		15801
12480	Fenwal Electronics Inc.	
Div. of Kiddle Walter and Co., Inc.	Seattle, Washington	
U.S. Terminals Inc.	Framingham, Massachusetts	
Cincinnati, Ohio		15818
12617	Teledyne Semiconductors, formerly	
Hamilton Inc.	Ampico Semiconductor	
Lake Mills, Wisconsin	Mountain View, California	
12697	Liton Systems Inc. Usco Div.	
Charostat Mfg. Co.	formerly Usco Inc.	
Dover, New Hampshire	Indianapolis, Indiana	
12749	Self-Organizing Systems, Inc.	
James Electronics	Dallas, Texas	
12856	Essex Junction, Vermont	
Micrometals	Buckeye Stamping Co.	
Sierra Madre, California	Columbus, Ohio	
12954	Soliton Devices Inc.	
Dickson Electronics Corp.	Transistor Division	
Scottsdale, Arizona	Riveria Beach, Florida	
12969	Burbank, California	
Unitrode Corp.	Corning Glass	
Watertown, Massachusetts	Electronic Components Div.	
13103	Raleigh, North Carolina	
Thermalloy Co., Inc.	Dallas, Texas	
13227	Soliton Devices Inc.	
Tappan, New York	Cambridge Scientific Ind.	
13511	Div. of Chemed Corporation	
Amphenol Cadre Div.	Cambridge, Maryland	
Los Gatos, California	Paramount Plastics Fabricators, Inc.	
13606 - use 56289	Downey, California	
Sprague Electric Co.	Delco Electronics	
Transistor Div.	Div. of General Motors Corp.	
Concord, New Hampshire	Kokomo, Indiana	
13839	Replaced by 23732	
17001	Replaced by 71468	
24355	Analog Devices Inc.	
Norwood, Massachusetts		
33173	General Electric Co.	
Products Dept.	Owensboro, Kentucky	
24248	Replaced by 94222	
Bourns Inc.	Trimpot Products Division	
32997	Burlingame, California	
Pamotot Div., Wm. J. Purdy Co.		
23936	Santa Clara, California	
Stanford Applied Engng.		
23880	Advanced Mechanical Components	
Northridge, California		
32897	Frequency Control Div.	
Erie Technological Products, Inc.		
32879	Burlingame, California	
Griffith Plastic Corp.		
23050	Product Comp. Corp.	
Mount Vernon, New York		
23050	Great Neck, New York	
Mura Corp.		
32539	Colmar, Pennsylvania	
Optimax Inc.		
31091	Chicago, Illinois	
Illinois Tool Works, Inc.		
30323	A B Enterprise Inc.	
Ahoke, North Carolina		
21604	Buckeye Stamping Co.	
Columbus, Ohio		
21845	Soliton Devices Inc.	
Transistor Division		
16258	Space-Lok Inc.	
16299	Burbank, California	
16299	ITT Semiconductors	
Palo Alto, California		
16332	Product Comp. Corp.	
Mount Vernon, New York		
16473	Replaced by 28478	
23732	Treacor Inc.	
Rockville, Maryland		
16758	Cambridge Scientific Ind.	
Div. of Chemed Corporation		
16742	Cambridge, Maryland	
Paramount Plastics Fabricators, Inc.		
17001	Replaced by 71468	
24355	Analog Devices Inc.	
Norwood, Massachusetts		
33173	General Electric Co.	
Products Dept.	Owensboro, Kentucky	

Federal Supply Codes for Manufacturers (Continued)

34333	Silicon General	Westminister, California
34335	Advanced Micro Devices	Sunnyvale, California
34802	Electromotive Inc.	Kentilworth, New Jersey
37942	Malloy, P.R. & Co., Inc.	Indianapolis, Indiana
42498	National Radio	Melrose, Massachusetts
43543	Nytronics Inc.	Carrollton, Texas
44655	Omrite Mfg. Co.	Skokie, Illinois
49671	RCA Corp.	New York, New York
49956	Raytheon Company	Lexington, Massachusetts
50088	Mostek Corp.	Carrollton, Texas
51605	Scientific Components Inc.	Linden, New Jersey
53021	Sangamo Electric Co.	Springfield, Illinois
54294	Cutler-Hammer Inc. formerly	Cutler-Hammer Co.
55026	Simpson Electric Co.	Div. of Am. Gage and Mach. Co.
58474	Superior Electric Co.	Bristol, Connecticut
60399	Torin Corp. formerly	Torrington Mfg. Co.
63743	Ward Leonard Electric Co., Inc.	Mount Vernon, New York
64834	West Mfg. Co.	San Francisco, California
65092	Western Instruments Inc.	Newark, New Jersey
66150	Winslow Tele-Trans Inc.	Eaton Town, New Jersey
70485	Atlantic India Rubber Works	Chicago, Illinois
70563	Amperite Company	Union City, New Jersey
73293	Hughes Aircraft Co.	Torrance, California
73445	Amperex Electronic Corp.	Balden Corp.
73446	Amperex Electronic Corp.	Div. of Illinois Tool Works Inc.
73559	Carling Electric Inc.	West Hartford, Connecticut
73589	Federal Screw Products, Inc.	Chicago, Illinois
73734	Fischer Special Mfg. Co.	Cincinnati, Ohio
73743	Fischer Special Mfg. Co.	Cleveland, Ohio
73899	JFD Electronics Co.	Long Island City, New York
73949	Guardian Electric Mfg. Co.	Chicago, Illinois
74199	Quan Nichols Co.	Chicago, Illinois
74217	Radio Switch Corp.	Marlboro, New Jersey
74276	Signalite Div.	General Instrument Corp.
74306	Pico Crystal Co.	Carlisle, Pennsylvania
74542	Hoyt Elect. Instr. Works	Penacook, New Hampshire
74970	Johnson E.F., Co.	Waseca, Minnesota
75042	TRW Electronics Components	Pelham Manor, New Jersey
75378	CTS Knights Inc.	Sandwich, Illinois
75382	Kulka Electric Corp.	Mount Vernon, New York
75915	Littlefuse Inc.	Des Plaines, Illinois
76854	Oak Industries Inc.	Chicago, Illinois
77342	AMF Inc.	Porter & Brumfield Div.
77638	General Instrument Corp.	Brooklyn, New York
82389	Switchcraft Inc.	Chicago, Illinois
82305	Palmer Electronics Corp.	South Gate, California
81741	Chicago Lock Co.	Chicago, Illinois
81590	Kory Mfg. Co.	Seattle, Washington
81439	Therm-O-Disc Inc.	Manstfield, Ohio
81483	International Rectifier Corp.	Los Angeles, California
81732	Winchester Electronics Inc.	Div. of Litton Industries Inc.
81073	La Grange, Illinois	Grayhill, Inc.
80640	Stevens, Arnold Inc.	South Boston, Massachusetts
80583	Hammarlund Mfg. Co., Inc.	Red Bank, New Jersey
80294	Bourns Inc., Instrument Div.	Riverside, California
80183 - use 56289	Sprague Products	North Adams, Massachusetts
80145	LFE Corp., Process Control Div.	formerly API Instrument Co.
80031	Electro-Midland Corp., Mepco Div.	A North American Phillips Co.
80031	Mt. Kisko, New York	
79963	Zierick Mfg. Corp.	Chicago, Illinois
79497	Western Rubber Company	Goshen, Indiana
79136	Waldes Kohinor Inc.	Long Island City, New York
79136	Fischer Special Mfg. Co.	Cincinnati, Ohio
78553	Federal Screw Products, Inc.	Chicago, Illinois
78553	Eaton Corp., Engineered	Fastener Div.
78277	Sigma Instruments, Inc.	South Braintree, Massachusetts
78277	Stackpole Carbon Co.	Saint Marys, Pennsylvania
78189	Shakeproof	Div. of Illinois Tool Works Inc.
78189	Hicksville, L.I., New York	
77969	Rubbercraft Corp. of CA, LTD.	Torrance, California

Fluke Technical Service Centers — U.S. and Canada

United States

CALIFORNIA

Burbank
Fluke Western Technical Center
Mike Nagy, Service Manager
2020 N. Lincoln St.
Zip: 91504
Tel: (213) 849-4641

Santa Clara

Fluke Western Technical Center
Tom Marshall, Service Manager
2569 De La Cruz Blvd.
Zip: 95050
Tel: (408) 985-1200

COLORADO

Denver
Fluke Southwestern
Technical Center
Mel Suezle, Service Manager
1980 S. Quebec St.
Unit 4
Zip: 80231
Tel: (303) 750-1228

FLORIDA

Orlando
Fluke S.E. Technical Center
P.O. Box 6578
940 N. Penn Creek Ave.
Zip: 32808
Tel: (305) 896-2296

ILLINOIS

Des Plaines

Fluke Midwestern
Technical Center
Bruce Hunt, Service Manager
1287 N. Rand Road
Zip: 60016
Tel: (312) 298-7470

MARYLAND

Fluke Midwestern
Technical Center
John Hines, Service Manager
11501 Huff Court
Zip: 20795
Tel: (301) 881-5300

MASSACHUSETTS

Lexington
Fluke N.E. Technical Center
Dick Zembra, Service Manager
109 Massachusetts Ave.
Zip: 02173
Tel: (617) 861-8620

MINNESOTA

Minneapolis
Fluke Midwestern
Technical Center
Robert Wayne, Br. Manager
10800 Lyndale Ave. So.
Zip: 55420
Tel: (612) 884-4541

NEW JERSEY

Totowa

Fluke Eastern Technical Center
Al La Fleur, Service Manager
500 Union Blvd.
Zip: 07512
Tel: (201) 742-3215

NEW YORK

Farmingdale, LI

Fluke Eastern Technical Center
Charles Vaneck, Br. Manager
59 Central Ave. Unit 3
Zip: 11735
Tel: (516) 752-1078

ROCHESTER

Fluke Eastern Technical Center
Mike Lambert, Br. Service Manager
4515 Cyber Road
Zip: 14622
Tel: (716) 342-6940

NORTH CAROLINA

Greensboro
Fluke S.E. Technical Center
Dwain Cox, Service Manager
P.O. Box 9619
1310 Beaman Place
Zip: 27408
Tel: (919) 273-1918

WASHINGTON

Mountlake Terrace

John Fluke Mfg. Co., Inc.
Bill Petrov, Tech. Service Spvr.
7001 - 220th Ave. S.W.
Zip: 98043
Tel: (206) 774-2206

ALBERTA

Calgary

Fluke Canadian Technical Center
Dave Rachnisky, Service Manager
3829 - 12th St. N.E.
Zip: T2E 6M5
Tel: (403) 261-0780

ONTARIO

Mississauga

Fluke Canadian Technical Center
Herb Duval, Service Manager
6427 Northam Drive
Zip: L4V 1J5
Tel: (416) 678-1500

Sales and Service Locations — International

Supplied and supported by Fluke (Nederland) B.V.,
P.O. Box 5053, Zevenhewelenweg 53, Tilburg, Netherlands.

AUSTRIA

Walter Reiktsch Elektronsche
Geräte GmbH & Co. KG.
Gottfried-Keller-Gasse 2/9
A-1030 Vienna, Austria
Tel: 734294, 725746

BELGIUM

C.N. Road S/A
Fluke (Deutschland) GmbH
8000 Munich 80
Tel: 211-450831
West Germany

GERMAN FEDERAL

Fluke (Deutschland) GmbH
4-Düsseldorf
Mettnkeckerstrasse 53
Tel: 691-5551
West Germany

ISRAEL

Ramat Hasharon 47235, Israel
Tel: 483211

DENMARK

Tagø Olsen A/S
DK-2100 Copenhagen Ø, Denmark
Tel: 01-294800

FINLAND

Oy Flindp AB
Teollisuusitie 7
02700 Kaunainen, Finland
Tel: 080-602255

FRANCE

M.B. Electronique S.A.
Rue Fourmey
ZAC de BUC
B.P. N° 31
78530 BUC, France
Tel: 9563130

CYPRUS

Chris Radiovision Ltd.
P.O. Box 1989
Nicosia, Cyprus
Tel: 66121

GREECE

Hellenic Scientific
Representations Ltd.
10, Nymphaon Street
Athens 615, Greece
Tel: 021-7792320/705960

NETHERLANDS

C.N. Road, B.V.
Cort van der Lindenstraat 11-13
Rijswijk (Z.H.) 2100
Netherlands
Tel: 070-996360

NORWAY

Morgensliertne & Co. A/S
Kongehelligate 3
P.O. Box 6688, Rodeokka
Oslo 5, Norway
Tel: 02-356110

PORTUGAL

Equipamentos
De Laboratorio Ltda.
P.O. Box 1100
Lisbon I, Portugal
Tel: 019-976551

SPAIN

Atajo Ingenieros S.A.
Enrique Larreta 10-12
Madrid 16, Spain
Tel: 01-7330562

SWEDEN

Teleinstrument AB
P.O. Box 490
S-162 Vallingby-4
Sweden
Tel: 08-380370

SWITZERLAND

Jenachstrasse 1
8002 Zurich, Switzerland
Tel: 01 360711

TURKEY

M. Subeyl Erkman
Necatbey Cad 92/2
Karakoy/Istanbul
Turkey
Tel: 441546, 447651

UNITED KINGDOM

Fluke International Corp.
Garner Close
Watford, WD2 4TF, England
Tel: 0923-33066

USA

Fluke Eastern Technical Center
Fluke Midwestern Technical Center
Fluke Southwestern Technical Center
Fluke S.E. Technical Center

YUGOSLAVIA

Fluke Eastern Technical Center
Fluke Midwestern Technical Center
Fluke Southwestern Technical Center
Fluke S.E. Technical Center

Customers in the following countries:

Bulgaria, Czechoslovakia, Hungary, Poland, Romania,
U.S.S.R. and Yugoslavia

Contact: Amtest Associates Ltd., P.O. Box 55, Addlestone,
Surrey, KT 15 1DU, England. Tel: 0932-52121.

Sales and Service Locations — International (Concluded)

Supplied and supported by Fluke International Corporation,
P.O. Box 43210, Mountlake Terrace, WA 98043.

- ARGENTINA**
Coasim S.A.
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 523186
- AUSTRALIA**
Elmesco Instruments Pty Ltd.
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel: (02) 736-2888
- BOLIVIA**
Coasim Bolivia S.R.L.
Castilla 7295
La Paz, Bolivia
Tel: 40962
- BRAZIL**
Arcore S.A.
Industrial e Comercio
Av. Pacaembu 811
Sao Paulo S.P., Brazil
- CHILE**
Coasim Chile Ltd.
Casilla 14588—Correo 15
Santiago, Chile
Tel: 396713
- COLOMBIA**
Asistec Limitada
Apartado Aereo 12322
Bogota I, Colombia
Tel: 419331
- ECUADOR**
Proteco Coasim CIA, Ltda.
Apartado 2284
Quito, Ecuador
Tel: 526759
- EGYPT**
Lotus Engineering Organisation
P.O. Box 1252
Cairo, Egypt
Tel: 71617
- HONG KONG**
Gilman & Co., Ltd.
P.O. Box 56
Hong Kong
Tel: 794266
- INDIA**
Hinditron Services Pvt. Ltd.
69/A L. Jagmohandas Marg
Bombay 400 006, India
Tel: 366344, 381615
- HINDITRON SERVICES PVT. LTD.**
Hinditron Computers Pvt. Ltd.
"Hinditron House"
412 Rajmahal Vilas Extension
Bangalore 560 006, India
Tel: 32852
- INDONESIA**
P.T. United Dico-Cilas Co., Ltd.
JLN Pengunungan 39A
Jakarta, Indonesia
Tel: 21380
- IRAN**
Irantronic Company Ltd.
20 Salm Road, Roosevelt Avenue
Tehran, Iran
Tel: 828294, 831564
- JAPAN**
Toyo Trading Company Ltd.
P.O. Box 5014
Tokyo International
Tokyo 100-31, Japan
Tel: (03) 279-0771
- JORDAN**
Trading & Agricultural
Development Co.
P.O. Box 567
Amman, Jordan
Tel: 23052
- KENYA**
Advanced Communications Ltd.
City House, Wabera Street
P.O. Box 30635
Nairobi, Kenya
Tel: 31955
- KOREA**
Asia Science & Co.
International P.O. Box 1250
Seoul, Korea
Tel: 76-2761
- KUWAIT**
Tareq Company
P.O. Box Safat 20506
Kuwait, Arabian Gulf
Tel: 436100, 436045
- LEBANON**
General Marketing Trading &
Contracting Company
Amis Nsouh Street
Nsouh Building
P.O. Box 158 655
Beirut, Lebanon
Tel: 319383, 312061
- MALAYSIA**
O'Connor's (Pte) Ltd.
P.O. Box 1197
Kota Kinabalu, Sabah
East Malaysia
Tel: 54082
- MEXICO**
Mexitek, S.A.
Eugenia 408
Department I
Mexico 12, D.F., Mexico
Tel: 5360910
- MOROCCO**
S.I.E.M.
Residence Moulay Ismail
Bat. C.
Boulevard Moulay Shimane
Rabat, Morocco
Tel: 276-64
- NEW ZEALAND**
W&K McLean Ltd.
P.O. Box 3097
Auckland, New Zealand
- NIGERIA**
Motat Engineering Co., Ltd.
Lagos, Nigeria
P.O. Box 6369
- PAKISTAN**
Pak International Operations
506 Muhammad House-
Mal Road
P.O. Box 5323
Karachi, Pakistan
Tel: 288650
- PERU**
Importaciones
y Representaciones
Electronicas S.A.
Ayuda, Franklin D. Roosevelt 105
Lima I, Peru
Tel: 288650
- RUSSIA**
Coasim C.A.
APDO Postal 50939
Sabana Grande No. 1
Caracas 105, Venezuela
Tel: 722311
- SAUDI ARABIA**
Electronic Equipment
Marketing Establishment
P.O. Box 3750
Riyadh, Saudi Arabia
Tel: 32700
- SINGAPORE**
O'Connor's (Pte) Ltd.
99 Pasir Panjang Road
Singapore 5, Singapore
Tel: 637944
- SOUTH AFRICA**
Fluke SA (Pty) Ltd.
P.O. Box 39797
Bramley
Republic of South Africa
Tel: 51563
- TAIWAN**
Tatung Company
22 Chungshan North Road
3rd Sec
Taipei, Taiwan
Rep. of China
Tel: 5215252
- THAILAND**
Dynamic Supply
Engineering R.O.P.
No. 56 Ekamat, Sukhumvit 63
Bankok-11, Thailand
Tel: 91434, 928532
- URUGUAY**
Coasim Uruguay S.R.L.
Centro 617-4° Piso
Montevideo, Uruguay
Tel: 917978
- VENEZUELA**
Coasim C.A.
APDO Postal 50939
Sabana Grande No. 1
Caracas 105, Venezuela
Tel: 722311

Sales Representatives — U.S. and Canada

John Fluke Mfg. Co., Inc.
 P.O. Box 43210, Mountlake Terrace, WA 98043
 Tel: (206) 774-2211 Toll Free: (800) 426-0361 TWX: 910-449-2850 Telex: 32-0018 Cable: Fluke

United States

ALABAMA
 Huntsville
 BCS Associates, Inc.
 P.O. Box 1273
 3322 S. Memorial Parkway
 Chicago, IL 60680
 Tel: (206) 861-6220

ALASKA
 Anchorage
 Harry Lang & Associates
 1406 W 47th Ave.
 Des Plaines, IL 60018
 Tel: (907) 279-5741

ARIZONA
 Phoenix
 Barnhill Associates, Inc.
 7319 E. Stetson Drive
 Scottsdale, AZ 85251
 Tel: (602) 947-7841

CALIFORNIA
 Los Angeles
 Instrument Specialists
 John Fluke Mfg. Co., Inc.
 2020 North Lincoln Street
 Burbank, CA 91504
 Tel: (213) 849-7181

COLORADO
 Denver
 Barnhill Associates, Inc.
 1980 S. Quebec Street, Unit 4
 ZEP: 80231
 Tel: (303) 750-1222

CONNECTICUT
 Hartford
 IRI Sales Group
 John Fluke Mfg. Co., Inc.
 P.O. Box 618
 P.O. Box 518
 2522 Tangletown Road
 2852 Tangletown Road
 Zep: 30083
 Tel: (404) 321-0980

FLORIDA
 Orlando
 BCS Associates, Inc.
 940 N. Fern Creek Ave.
 Zep: 32803
 Tel: (305) 896-4881

GEORGIA
 Decatur
 BCS Associates, Inc.
 345 Girard
 Madison Heights, MI 48071
 Tel: (313) 588-2300

HAWAII
 Honolulu
 Industrial Electronics, Inc.
 P.O. Box 135
 646 Queen Street
 Zep: 96817
 Tel: (808) 533-6095

ILLINOIS
 Chicago
 Czenns & Cudahy Sales Group
 John Fluke Mfg. Co., Inc.
 1301 North Rand Road
 Des Plaines, IL 60018
 Tel: (312) 298-3600

INDIANA
 Indianapolis
 Czenns & Cudahy Sales Group
 John Fluke Mfg. Co., Inc.
 4406 Chouteau Traffic Way
 Zep: 64117
 Tel: (816) 454-5836

KANSAS
 Kansas City, MO
 Czenns & Cudahy Sales Group
 John Fluke Mfg. Co., Inc.
 4406 Chouteau Traffic Way
 Zep: 64117
 Tel: (816) 454-5836

KENTUCKY
 Louisville
 BCS Associates, Inc.
 4506 Freda Way
 Valley Station, KY 40272
 Tel: (502) 935-9634

MARYLAND
 Baltimore
 Mid-Atlantic Sales Group
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

HAWAII

MINNESOTA
 Minneapolis
 Czenns & Cudahy
 Sales Group
 John Fluke Mfg. Co., Inc.
 10800 Lyndale Ave. S.
 Zep: 55420
 Tel: (612) 884-4336

MISSOURI
 Kansas City
 Czenns & Cudahy
 Sales Group
 John Fluke Mfg. Co., Inc.
 4406 Chouteau Traffic Way
 Zep: 64117
 Tel: (816) 454-5836

NEW JERSEY
 Newark
 SBM Representatives
 John Fluke Mfg. Co., Inc.
 1519A Stuyvesant Ave.
 Union, NJ 07083
 Tel: (201) 687-8737

NEW MEXICO
 Albuquerque
 Barnhill Associates, Inc.
 4110-D Wyoming N.E.
 Zep: 87132
 Tel: (505) 299-7658

NORTH CAROLINA
 Rochester
 SBM Representatives
 John Fluke Mfg. Co., Inc.
 4610 Chateaufort Road
 Zep: 14822
 Tel: (716) 266-1400

NORTH CAROLINA
 Raleigh
 BCS Associates, Inc.
 P.O. Box 9619
 1310 Beaman Place
 Zep: 27408
 Tel: (919) 273-1918

OHIO
 Cleveland
 WKM Associates, Inc.
 15141 Puritas Ave.
 Zep: 44135
 Tel: (216) 267-0445

OHIO
 Cleveland
 WKM Associates, Inc.
 15141 Puritas Ave.
 Zep: 44135
 Tel: (216) 267-0445

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO
 Dayton
 WKM Associates, Inc.
 7913 S. Suburban Road
 Zep: 45459
 Tel: (513) 434-7500

OHIO

OHIO
 Cleveland
 Showalter Instruments, Inc.
 1521 - 130th N.E.
 Bellevue, WA 98005
 Tel: (206) 455-4922

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

OHIO

OHIO
 Cleveland
 Showalter Instruments, Inc.
 1521 - 130th N.E.
 Bellevue, WA 98005
 Tel: (206) 455-4922

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

WASHINGTON, D.C.
 Baltimore
 John Fluke Mfg. Co., Inc.
 11501 Huff Court
 Kensington, MD 20795
 Tel: (301) 881-3370

All of the above Fluke Sales Offices carry local stocks of low-cost Digital Multimeters (Models 8000A, 8030A, 8040A), Counters (Model 1900A), Digital Thermometers (Models 2160A, 2170A, 2165A, 2175A) and the Universal Temperature Probe (Model 80T-150). These same products are available from the following distributors:

PIONEER-STANDARD
 Cleveland, OH (216) 587-3600
 Dayton, OH (513) 286-9900

LIBERTY ELECTRONICS
 El Segundo, CA (213) 322-8100
 San Diego, CA (714) 565-9171
 Phoenix, AZ (602) 257-1272
 Seattle, WA (206) 763-8200
 Albuquerque, NM (505) 299-8293
 Beaverton, OR (503) 644-4783

LIBERTY ELECTRONICS
 El Segundo, CA (213) 322-8100
 San Diego, CA (714) 565-9171
 Phoenix, AZ (602) 257-1272
 Seattle, WA (206) 763-8200
 Albuquerque, NM (505) 299-8293
 Beaverton, OR (503) 644-4783

All of the above Fluke Sales Offices carry local stocks of low-cost Digital Multimeters (Models 8000A, 8030A, 8040A), Counters (Model 1900A), Digital Thermometers (Models 2160A, 2170A, 2165A, 2175A) and the Universal Temperature Probe (Model 80T-150). These same products are available from the following distributors:

PIONEER-STANDARD
 Cleveland, OH (216) 587-3600
 Dayton, OH (513) 286-9900


LIBERTY ELECTRONICS
 El Segundo, CA (213) 322-8100
 San Diego, CA (714) 565-9171
 Phoenix, AZ (602) 257-1272
 Seattle, WA (206) 763-8200
 Albuquerque, NM (505) 299-8293
 Beaverton, OR (503) 644-4783

LIBERTY ELECTRONICS
 El Segundo, CA (213) 322-8100
 San Diego, CA (714) 565-9171
 Phoenix, AZ (602) 257-1272
 Seattle, WA (206) 763-8200
 Albuquerque, NM (505) 299-8293
 Beaverton, OR (503) 644-4783

FIGURE NO.	NAME	DRAWING NO.	PAGE
8-1	Basic Instrument Schematic	2100A-1201	8-3
8-2	Single Type PCB Schematic	2100A-1210	8-8
8-3	Multi-Type PCB, F Schematic	2100A-1205	8-9
8-4	Multi-Type PCB, C Schematic	2100A-1222	8-10
8-5	Multi-Point PCB Schematic	2100A-1208	8-11
8-6	Data Output Unit Schematic	2100A-1207	8-12
8-7	Analog Output Unit	2100A-1226	8-13


Section 8

Schematic Diagrams

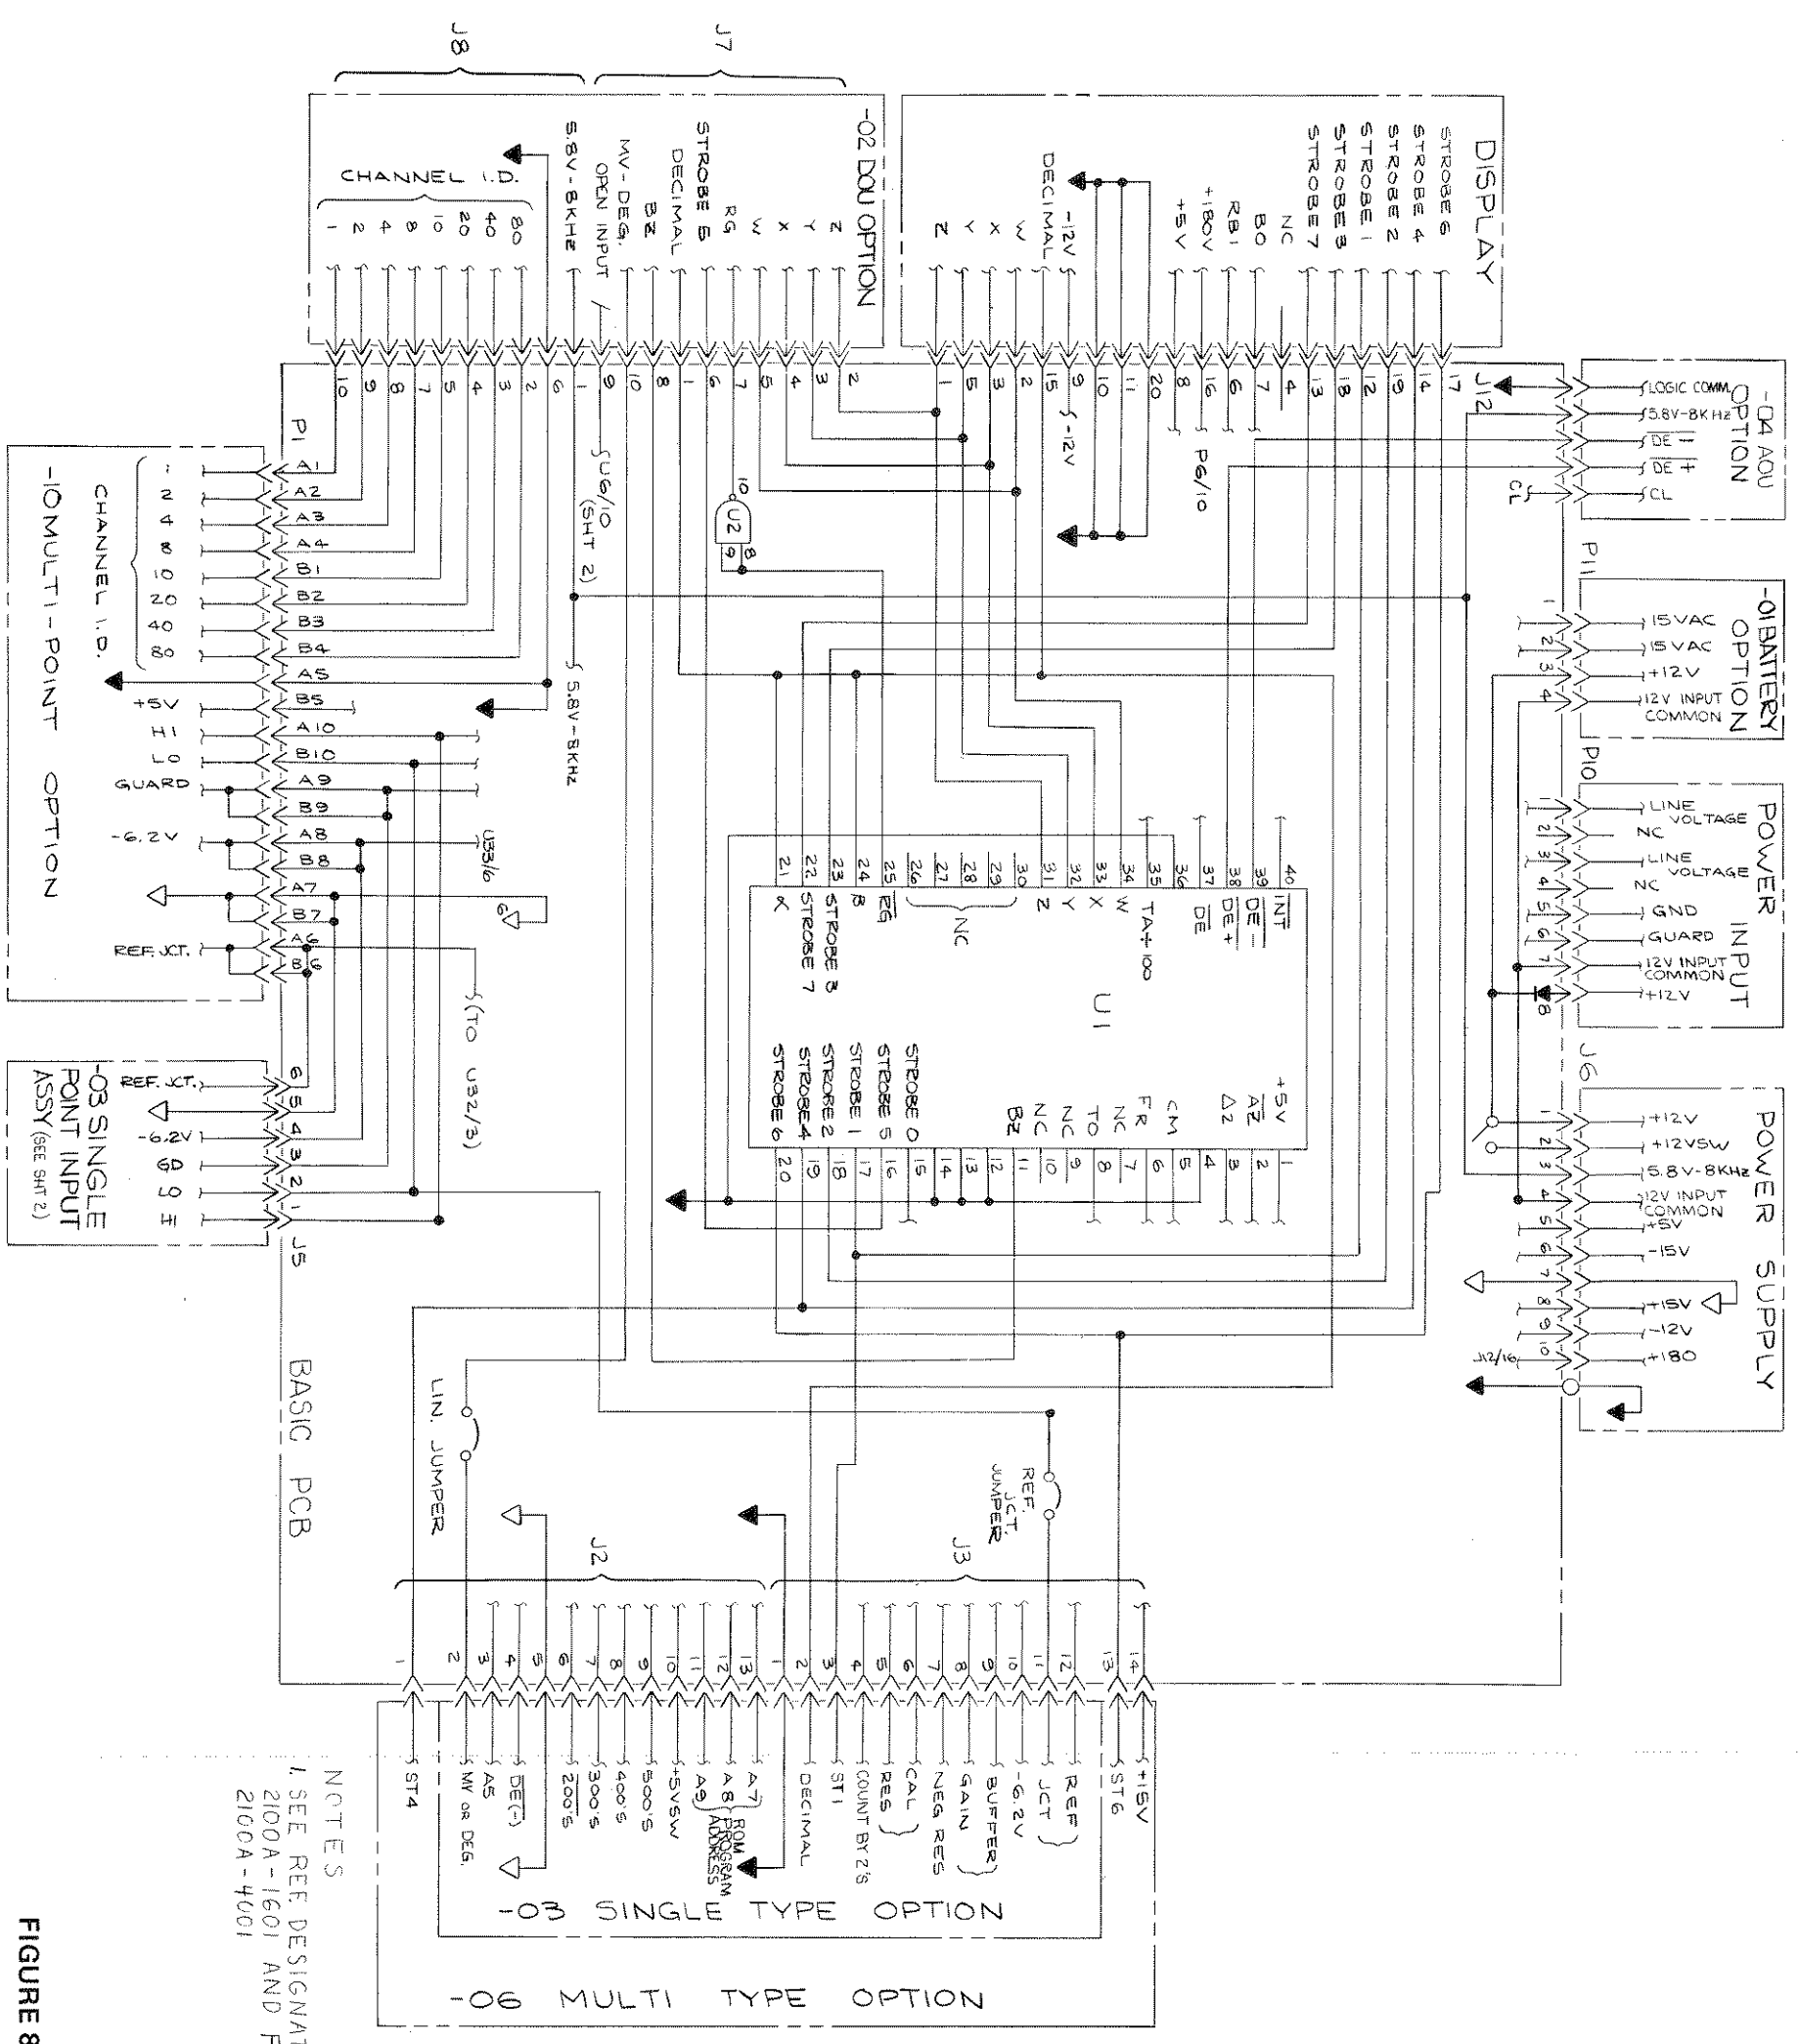

NOTES
 1. SEE REF. DESIGNATOR DWG.
 2100A-1601 AND PCB DWG.
 2100A-4001

FIGURE 8-1. (1 of 5) BASIC INSTRUMENT SCHEMATIC

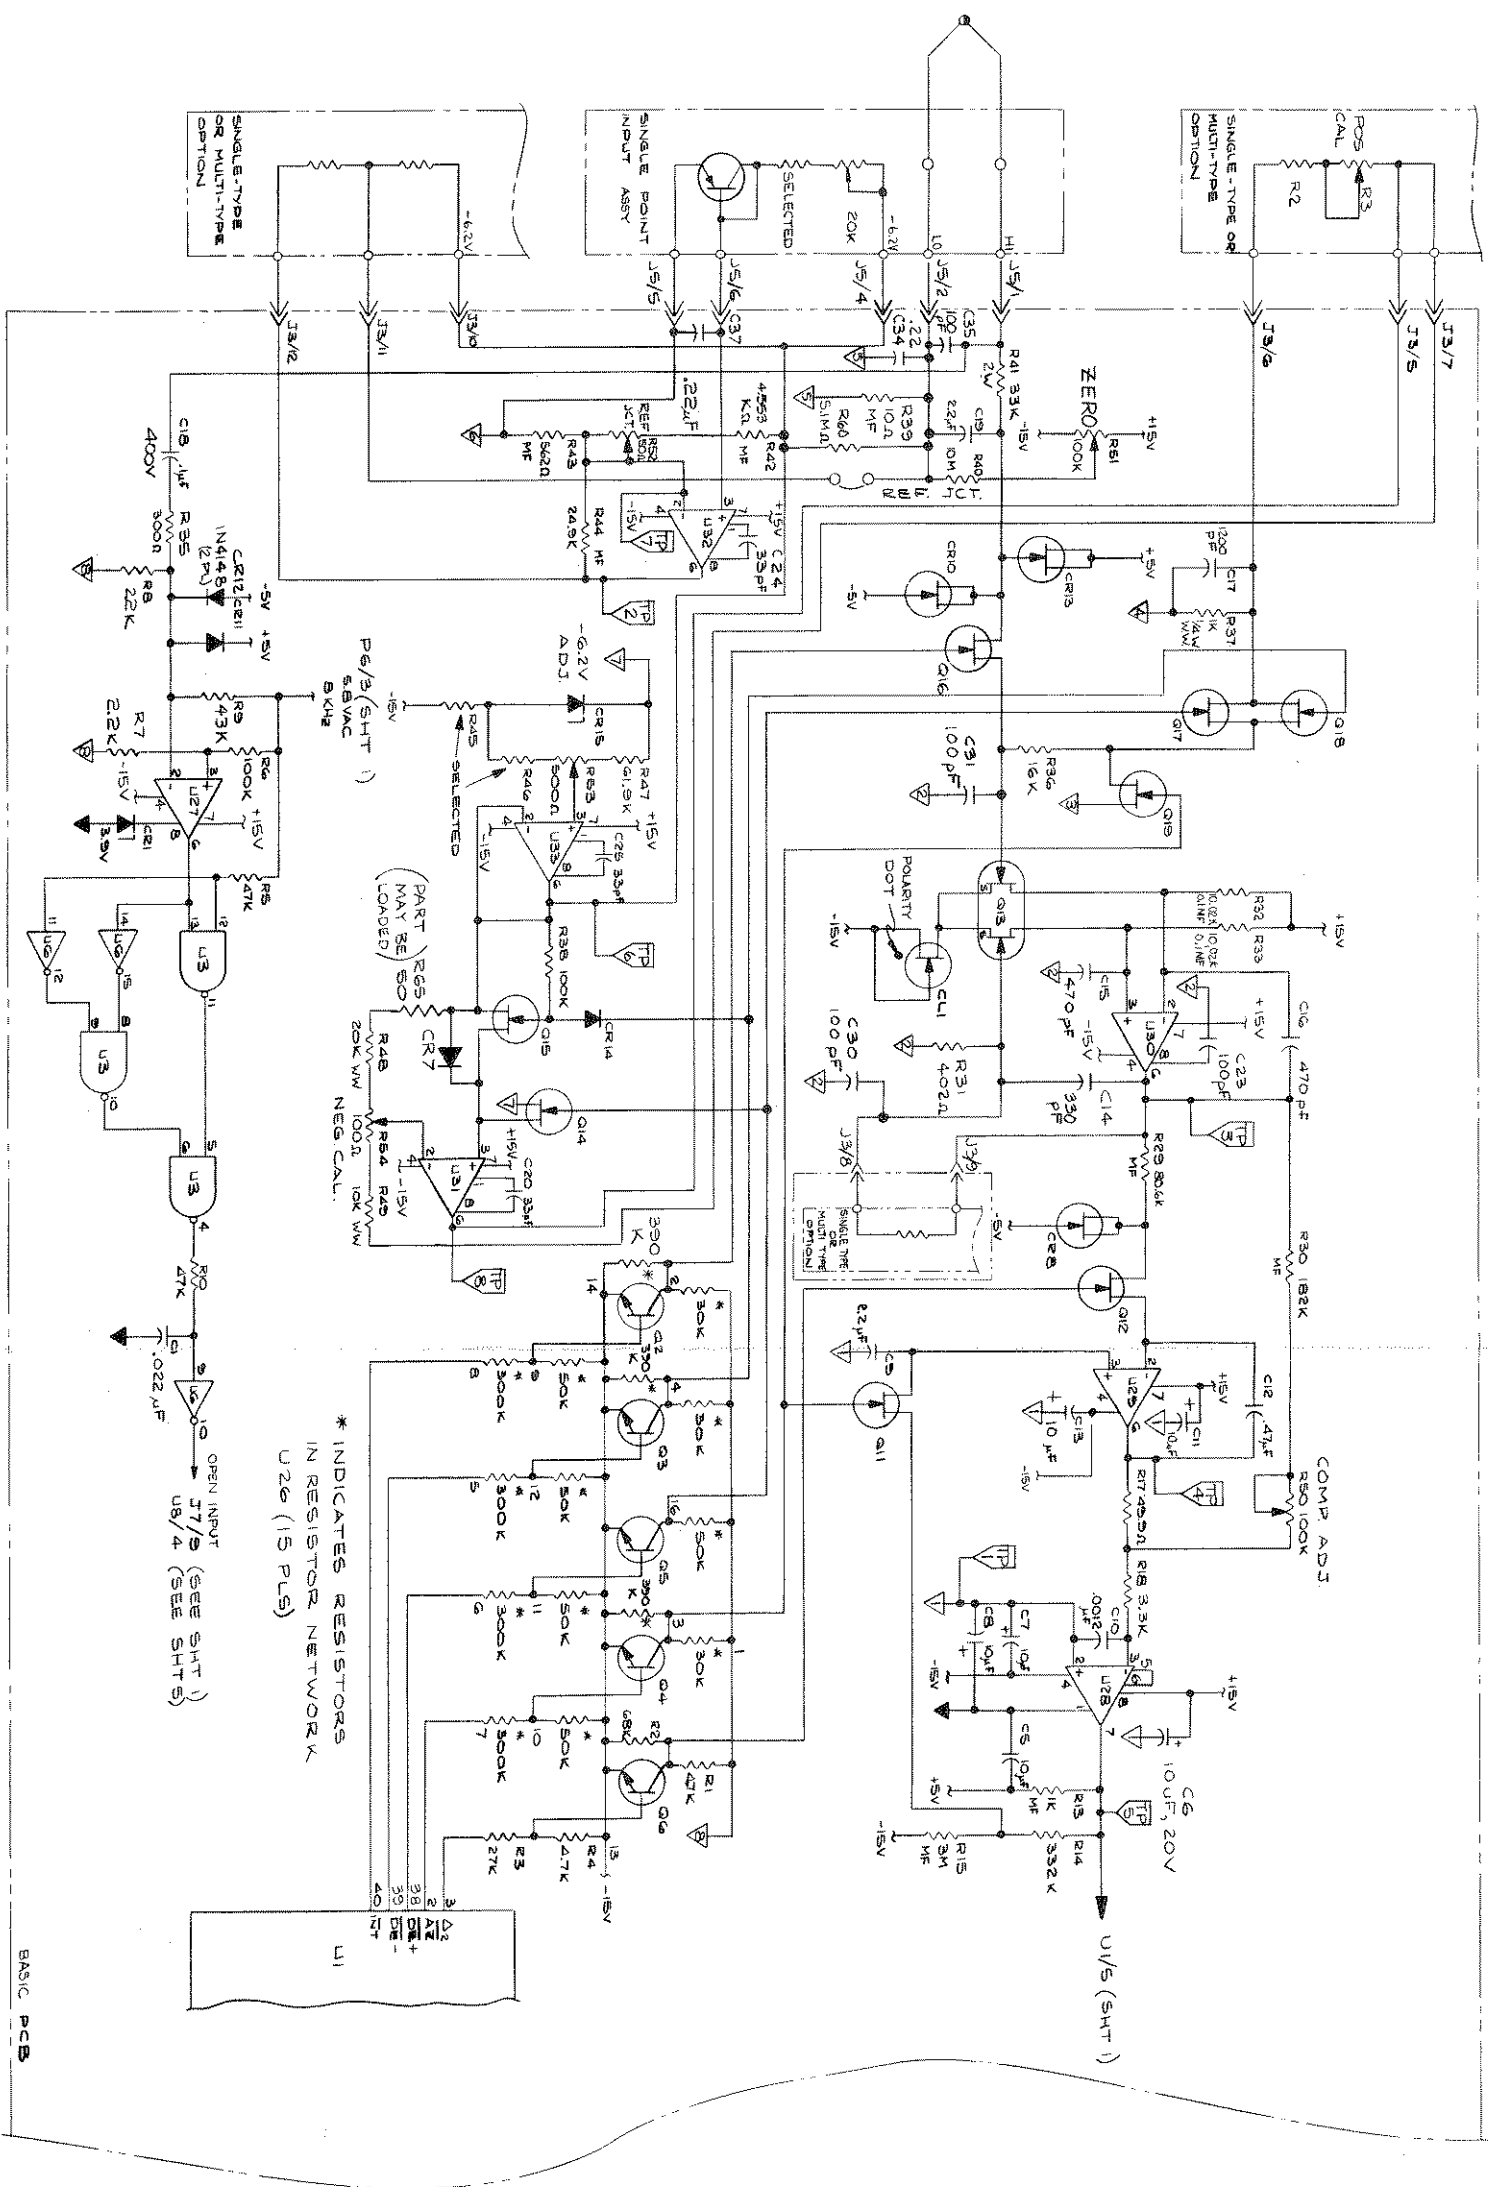

REF DES	QTY	UNIT	PCB	PCN
U1	1	370015	370025	370025
U2	14	370015	370025	370025
U3	14	370015	370025	370025
U4	14	370015	370025	370025
U5	14	370015	370025	370025
U6	14	370015	370025	370025
U7	14	370015	370025	370025
U8	14	370015	370025	370025
U9	14	370015	370025	370025
U10	14	370015	370025	370025
U11	14	370015	370025	370025
U12	14	370015	370025	370025
U13	14	370015	370025	370025
U14	14	370015	370025	370025
U15	14	370015	370025	370025
U16	14	370015	370025	370025
U17	14	370015	370025	370025
U18	14	370015	370025	370025
U19	14	370015	370025	370025
U20	14	370015	370025	370025
U21	14	370015	370025	370025
U22	14	370015	370025	370025
U23	14	370015	370025	370025
U24	14	370015	370025	370025

370015 -F
370025 -0C

FIGURE 8-1. (2 of 5) BASIC INSTRUMENT SCHEMATIC

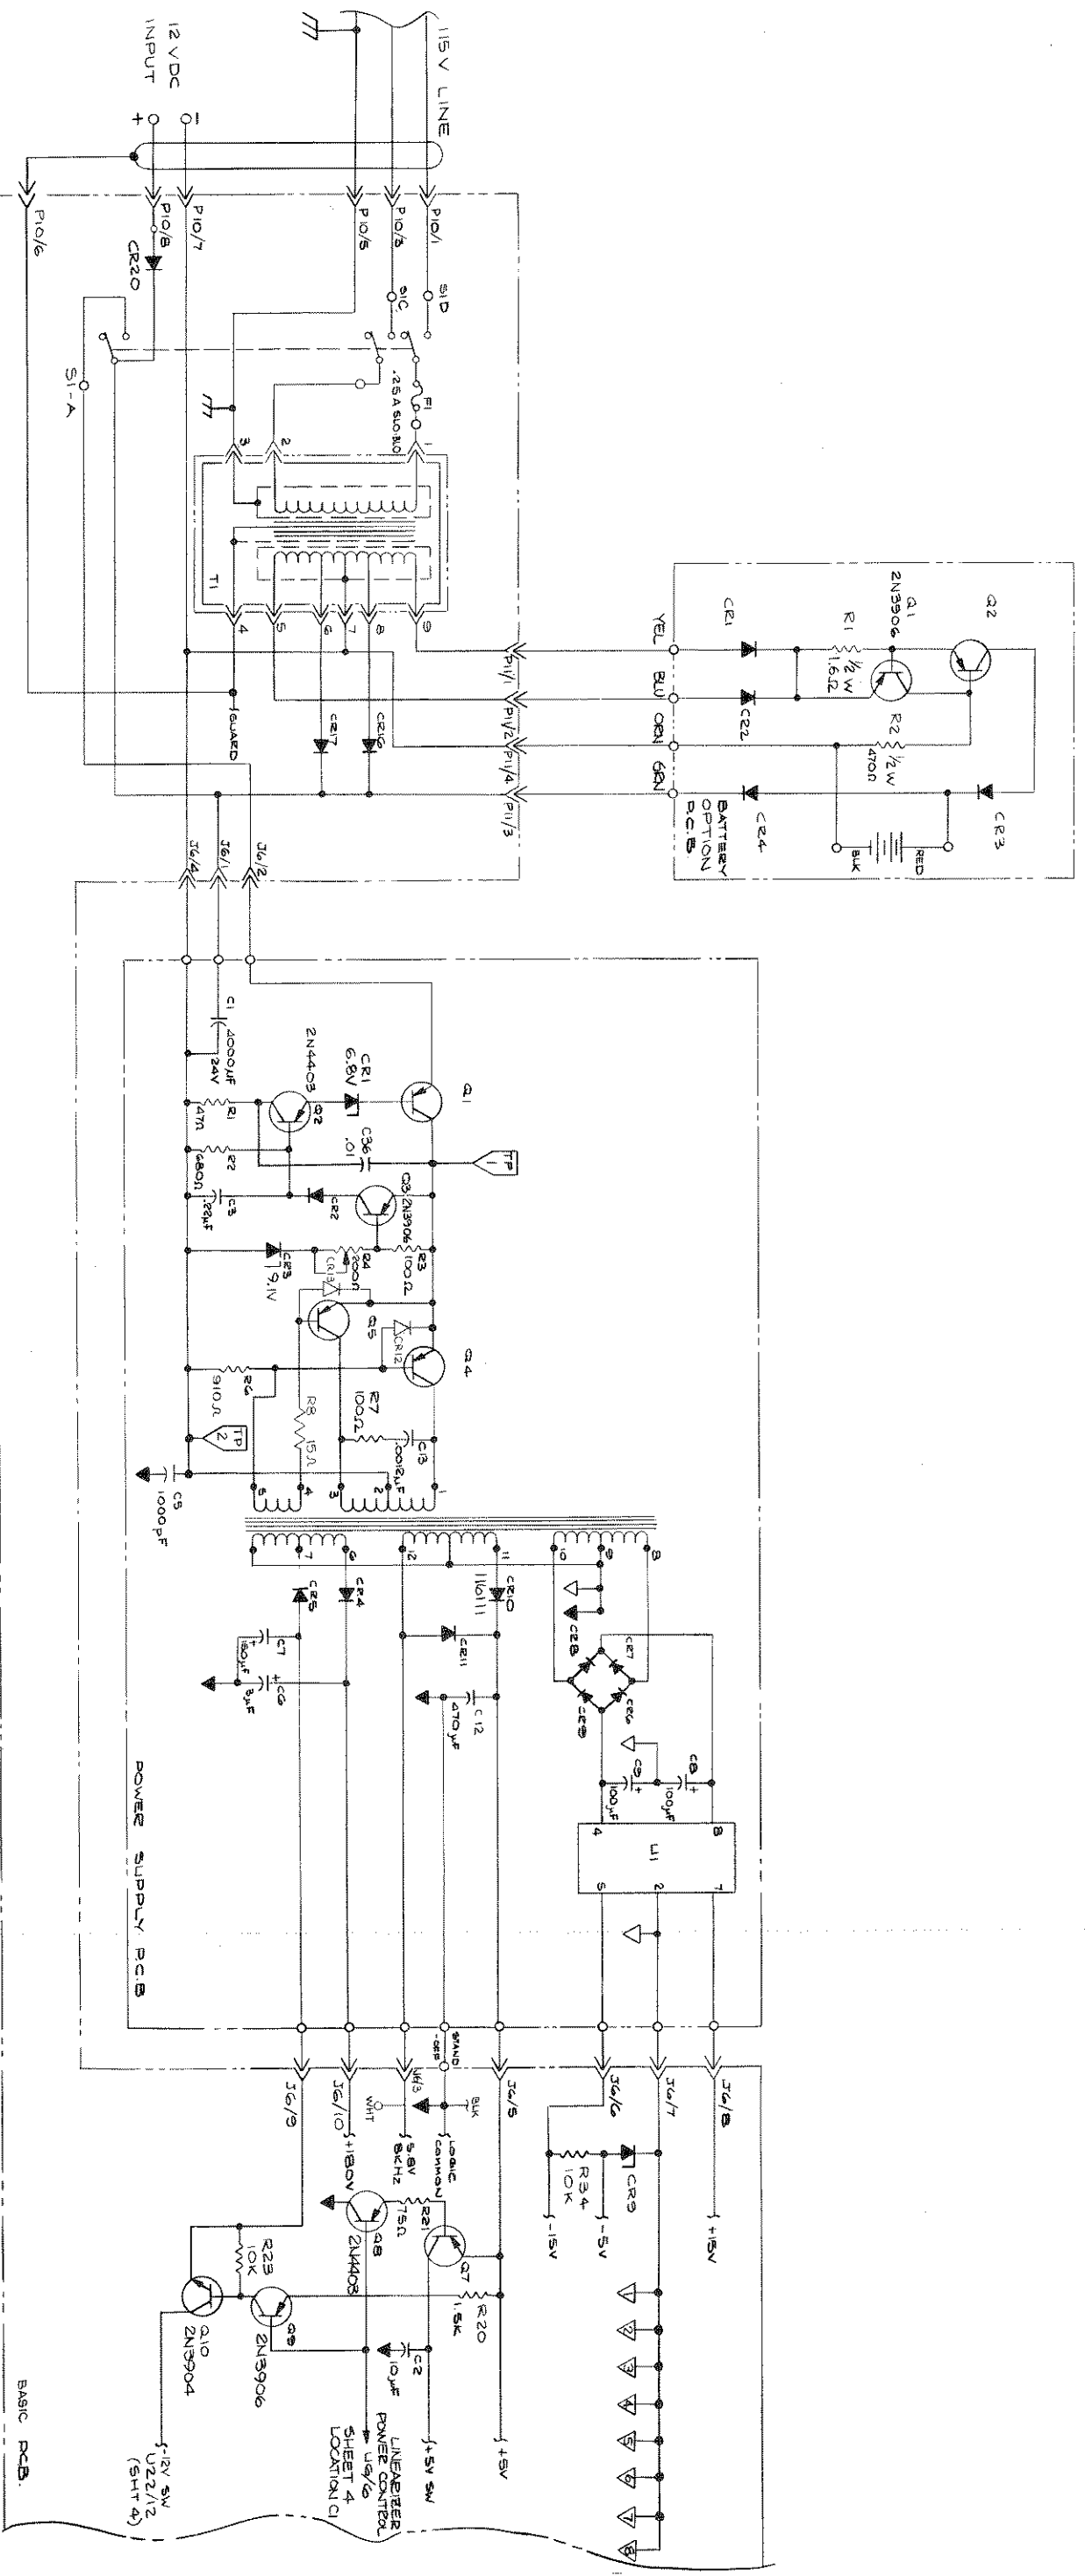


FIGURE 8-1. (3 of 5) BASIC INSTRUMENT SCHEMATIC

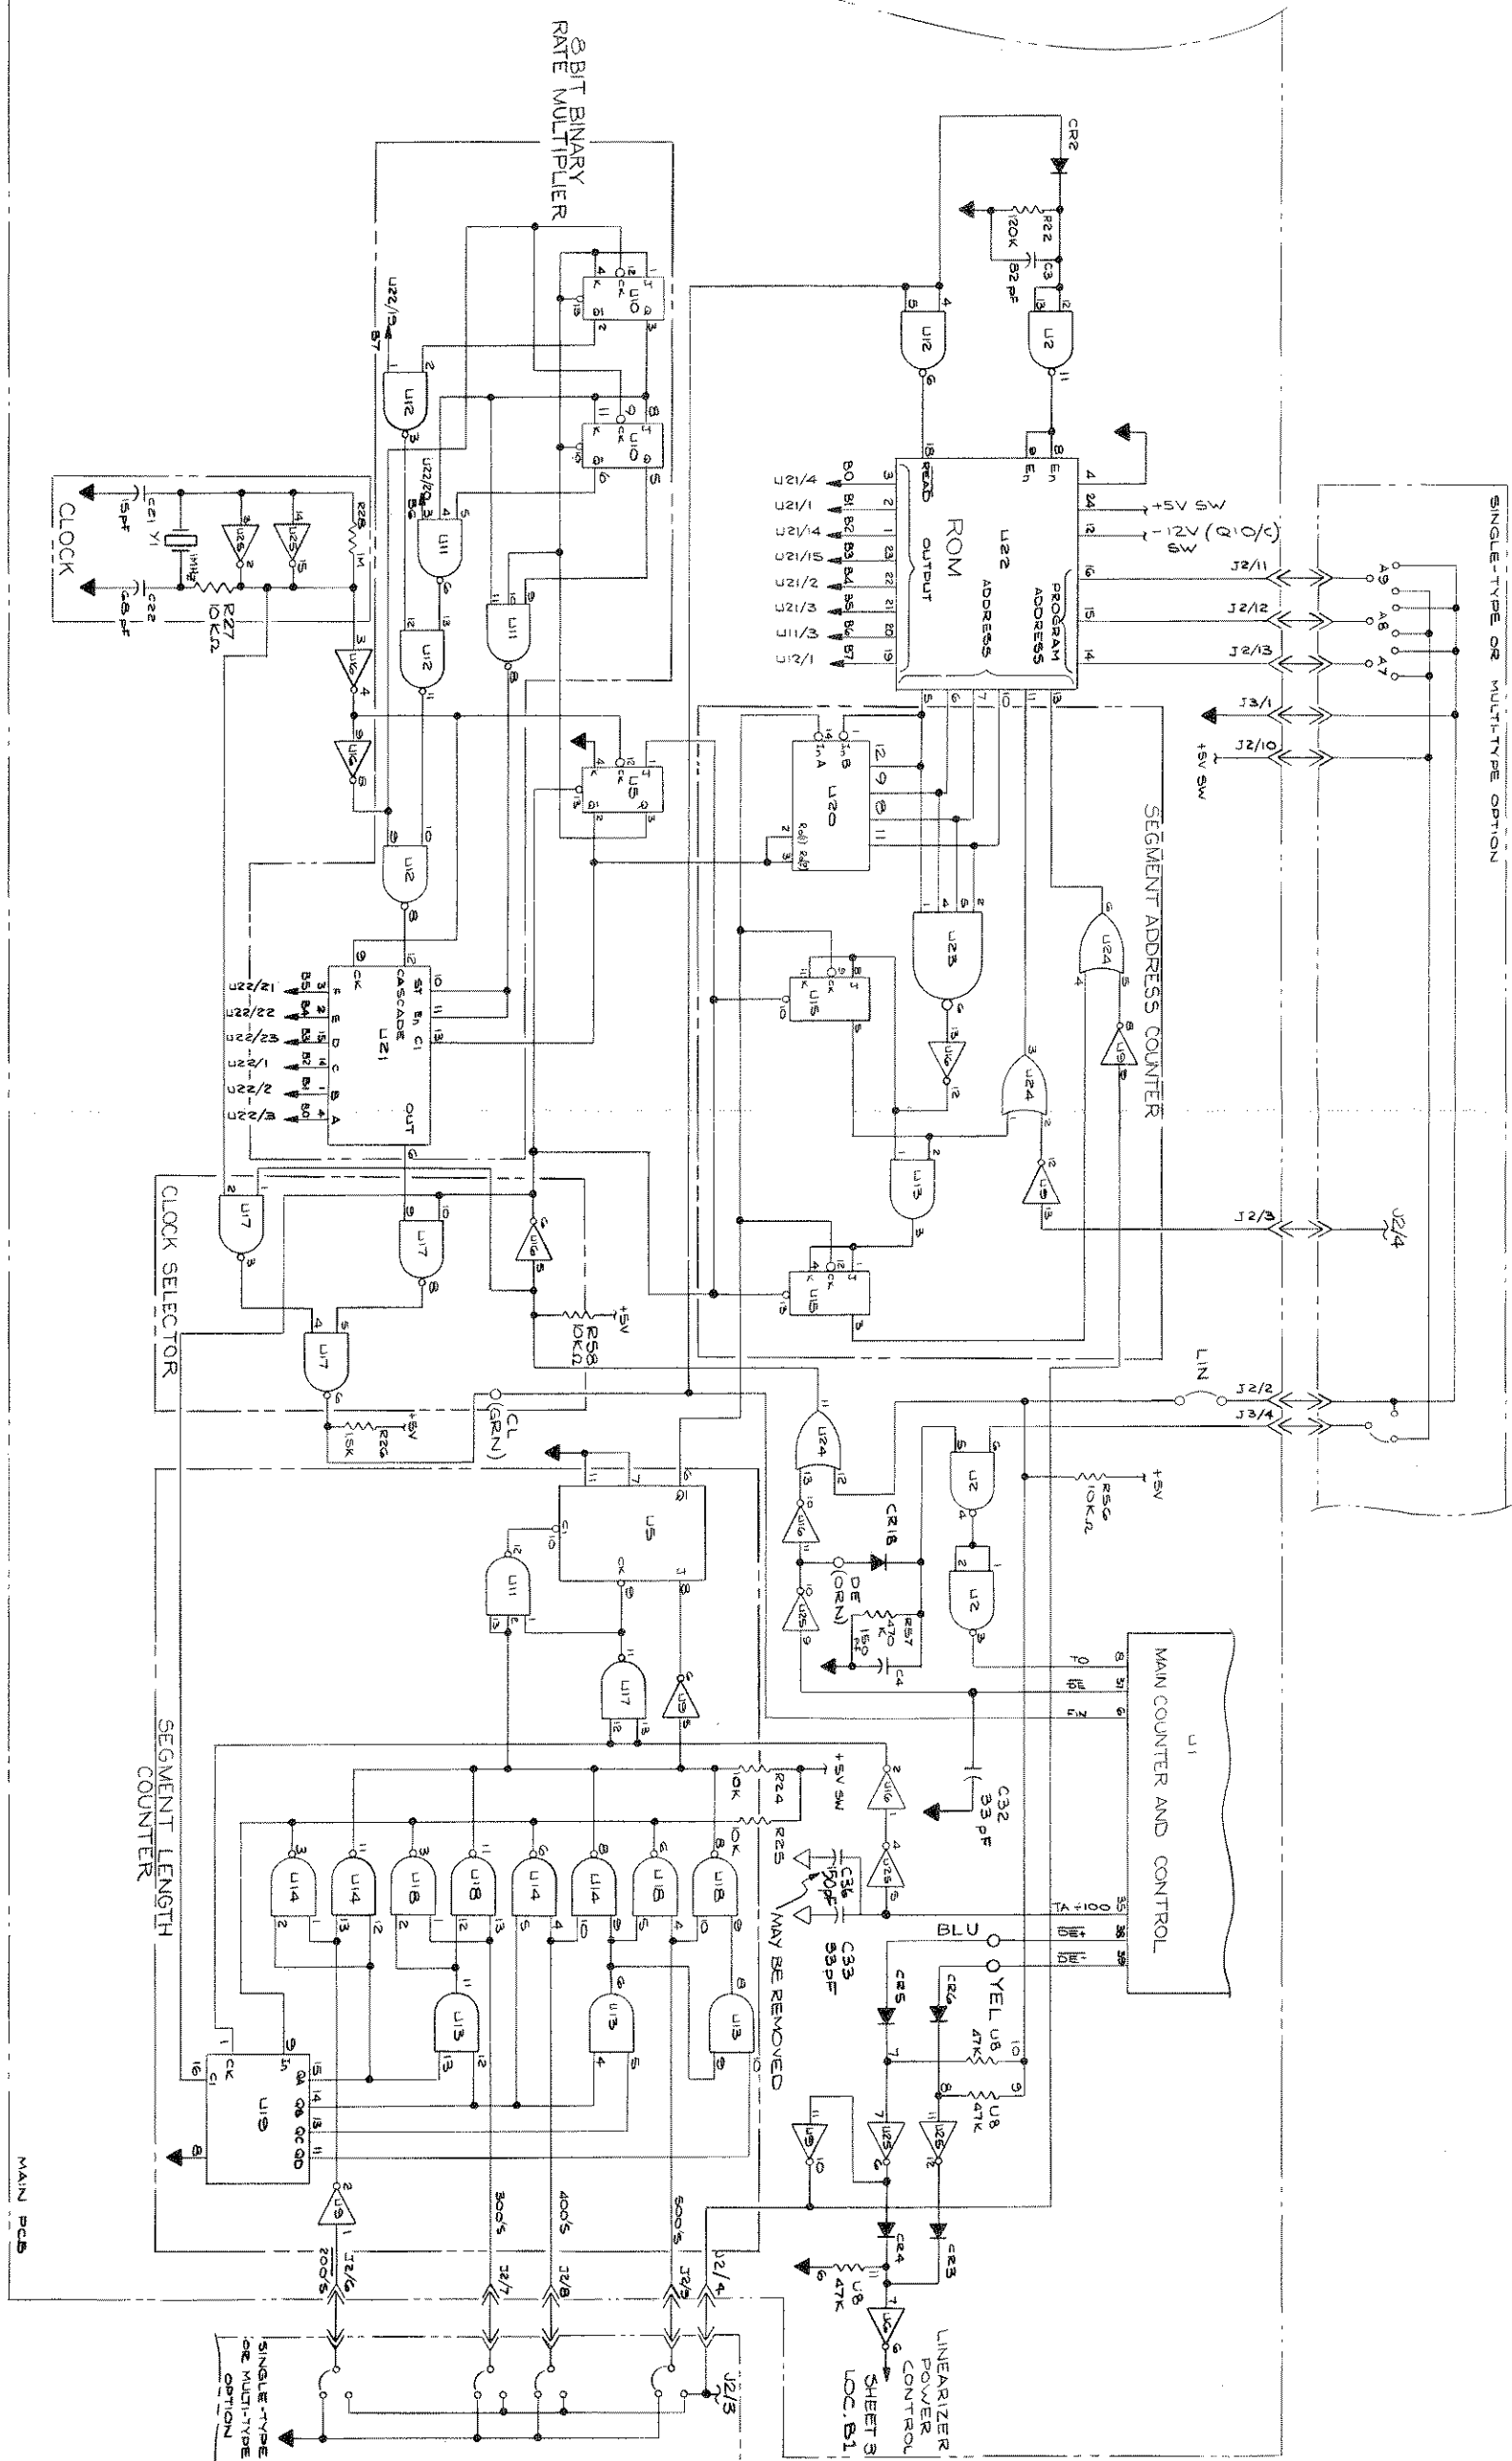


FIGURE 8.1. (4 of 5) BASIC INSTRUMENT SCHEMATIC

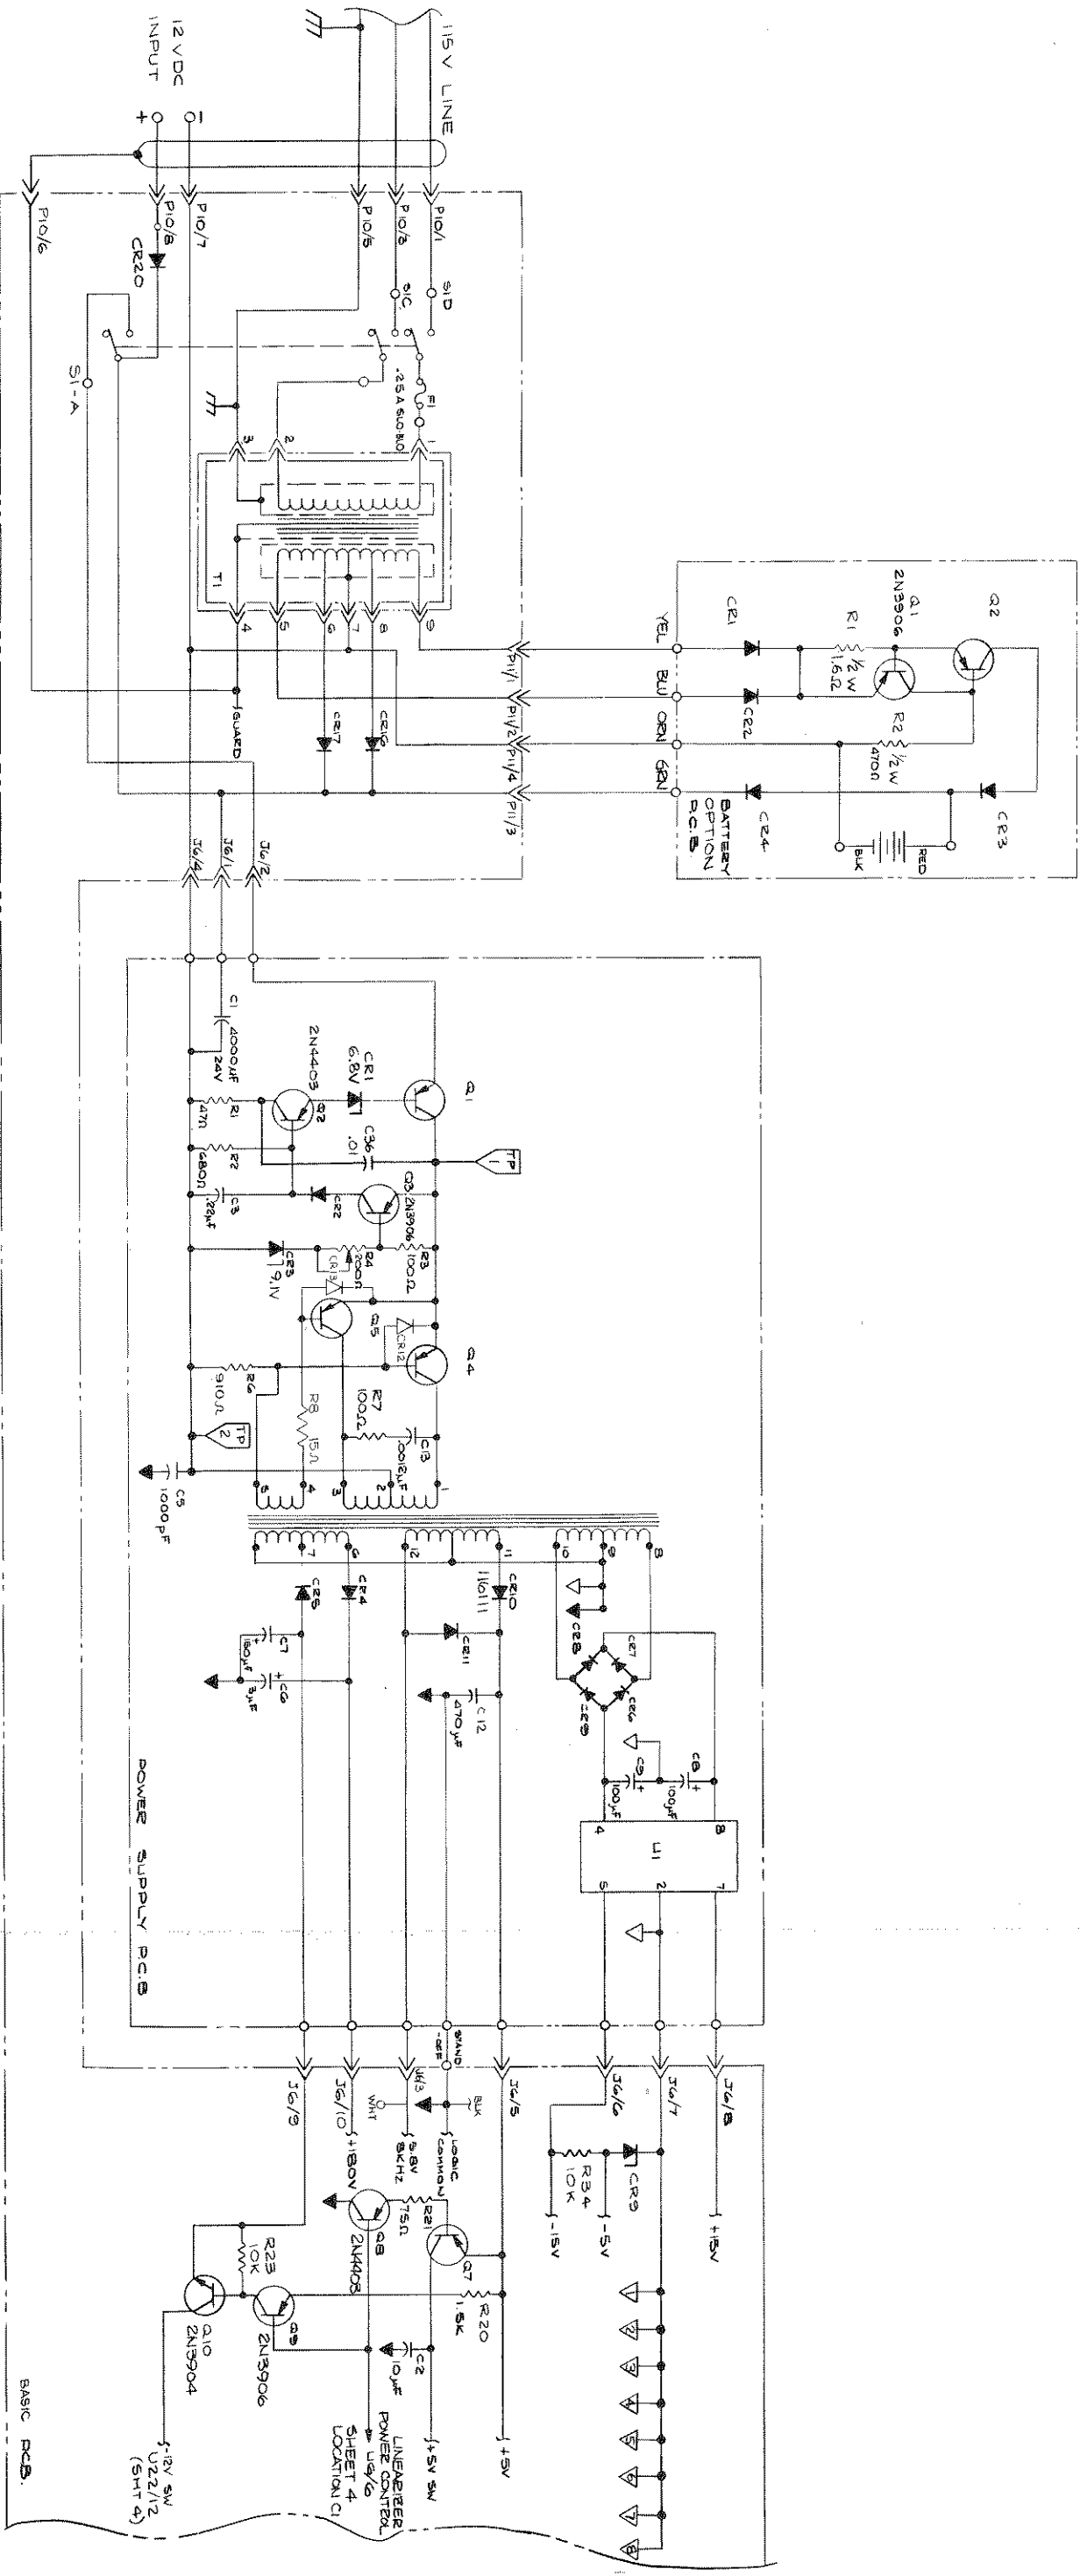


FIGURE 8-1. (3 of 5) BASIC INSTRUMENT SCHEMATIC



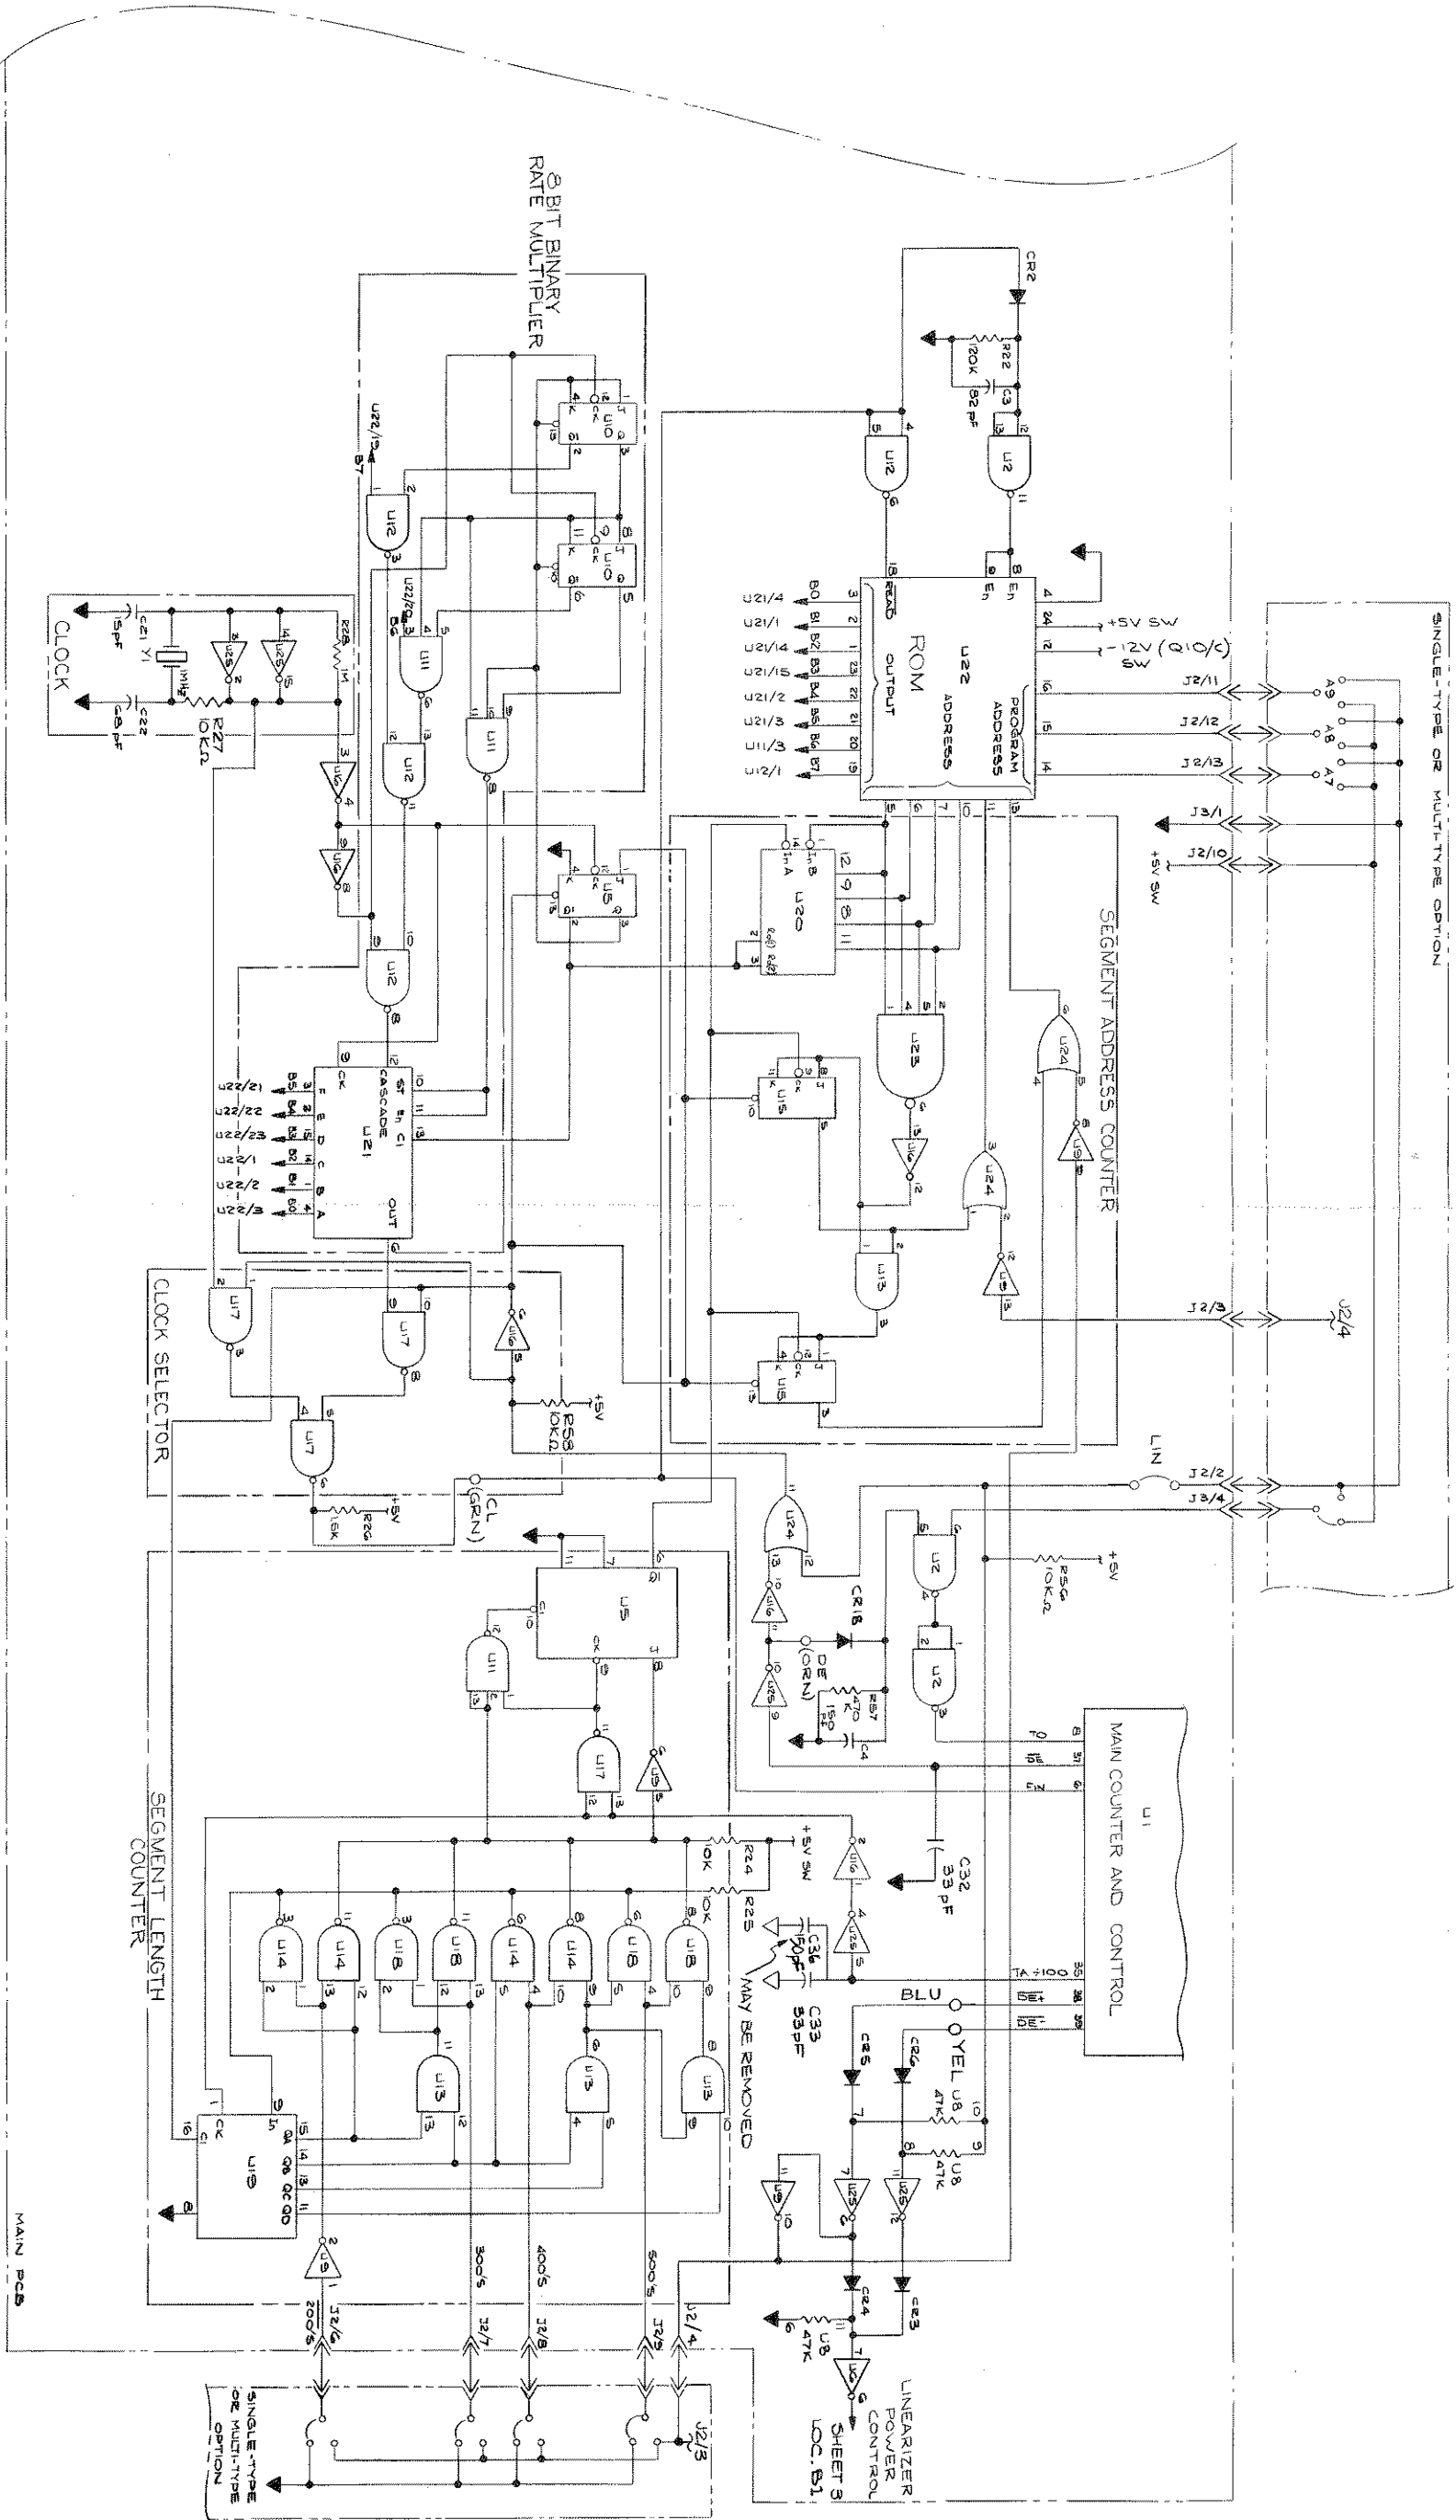


FIGURE 8-1. (4 of 5) BASIC INSTRUMENT SCHEMATIC

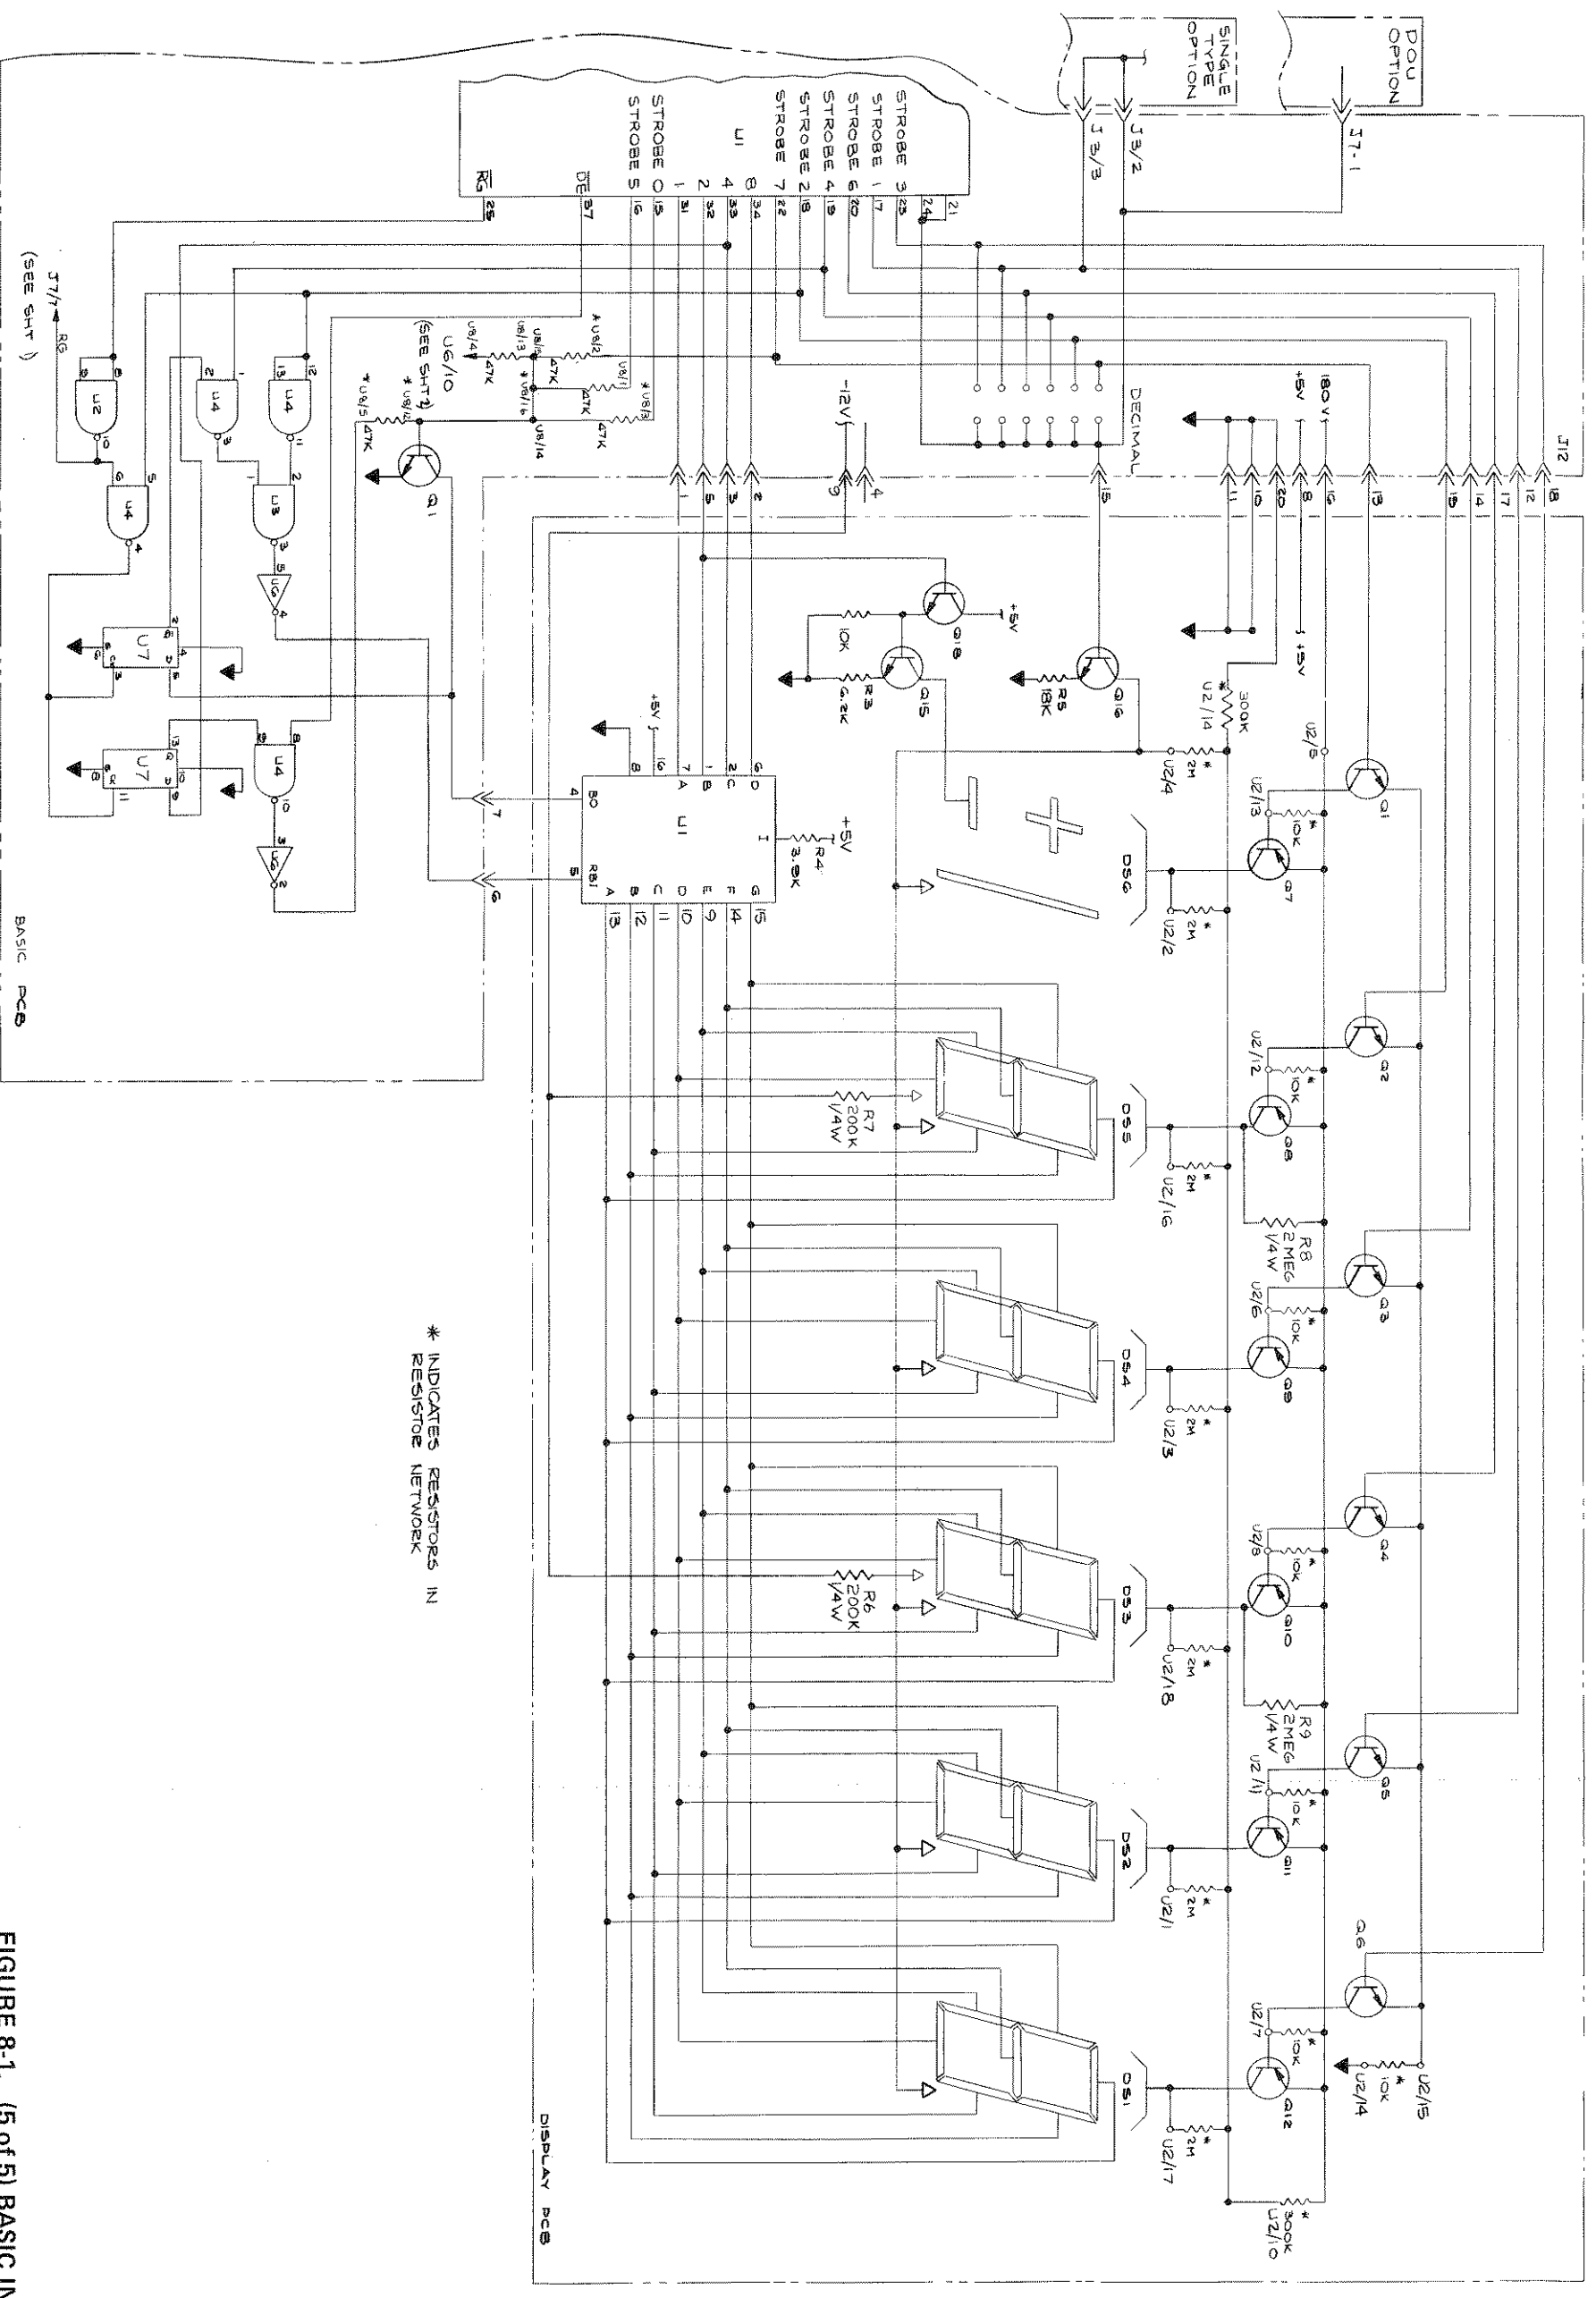

* INDICATES RESISTORS IN RESISTOR NETWORK


FIGURE 8-1. (5 of 5) BASIC INSTRUMENT SCHEMATIC

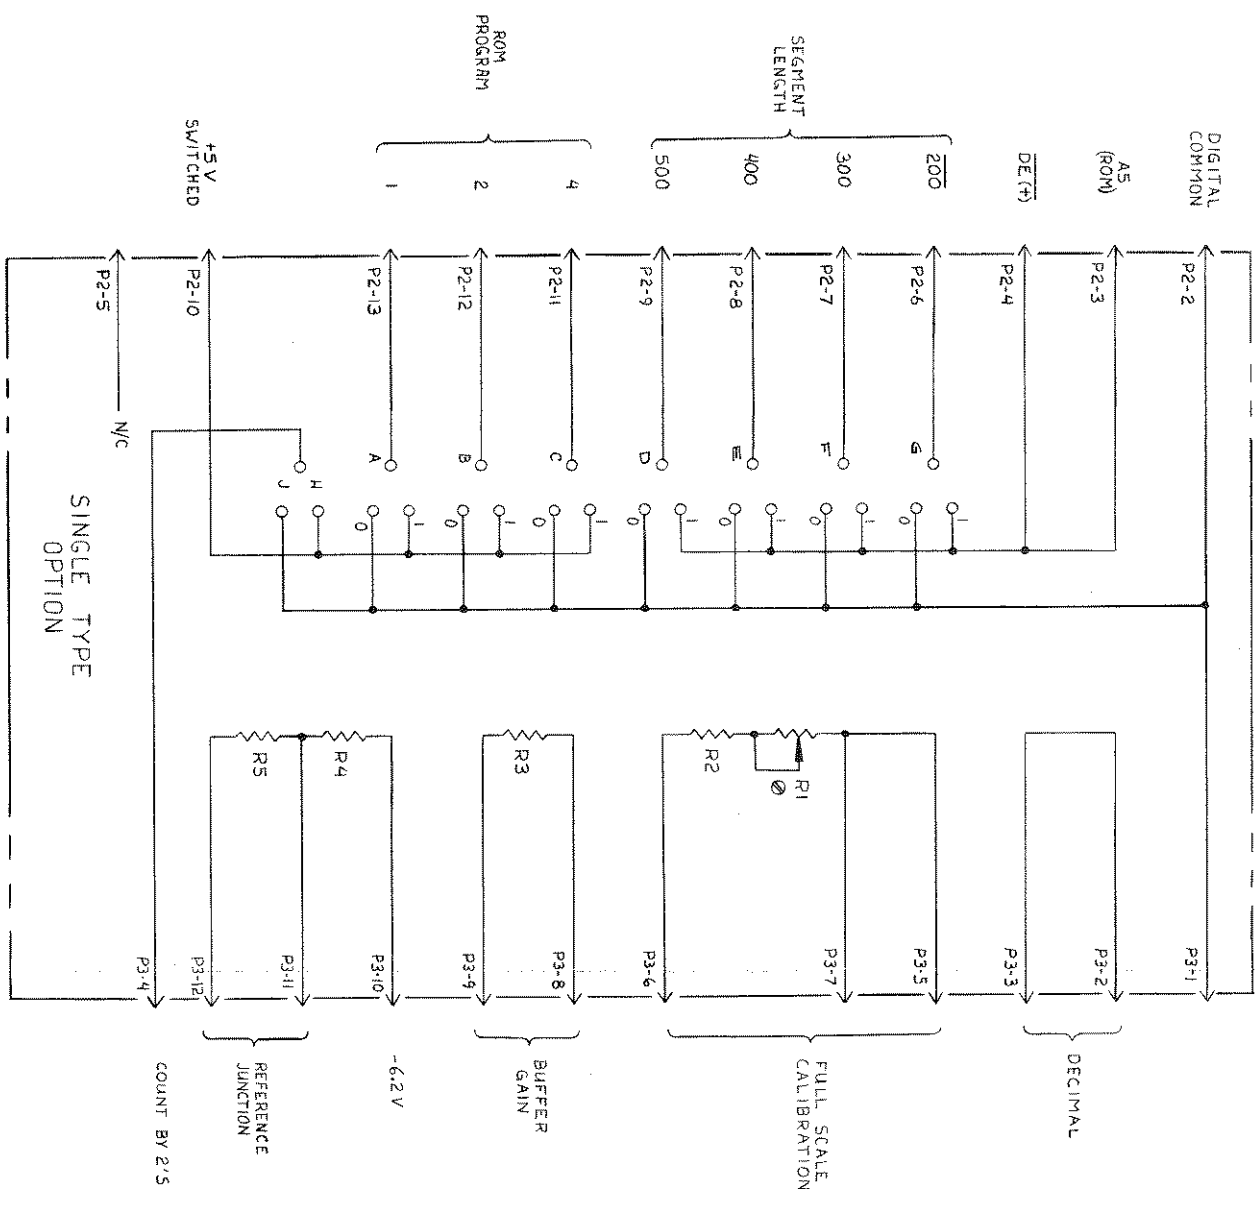

DWG. NO.	THERMO-COUPLE TYPE	JUMPER POSITION										RESISTOR VALUE					
		A	B	C	D	E	F	G	H	J	R1	R2	R3	R4	R5		
1211	J ^o F	0	0	0	1	0	1	0	1	0	1	X	200Ω	23.7K	14.7K	121K	23.445K
1212	K ^o F	1	0	0	1	0	0	1	0	1	X	200Ω	32.38K	21K	149.0K	29.931K	
1210	T ^o F	0	1	0	0	0	0	0	0	0	X	200Ω	32.38K	21K	131.04K	29.784K	
1213	E ^o F	1	1	0	0	1	0	1	0	1	X	200Ω	19.41K	12.4K	93.52K	19.901K	
1214	R ^o F	0	0	1	1	0	0	1	0	1	X	1K	110.09K	71.5K	788.6K	204.5K	
1215	S ^o F	1	0	1	1	0	0	1	1	X	1K	110.09K	71.5K	799.5K	202.6K		
1217	J ^o C	0	0	0	0	0	0	0	0	0	X	100Ω	11.97K	8.06K	44.563K	23.445K	
1218	K ^o C	1	0	0	0	1	0	1	0	1	X	100Ω	17.53K	11.5K	53.947K	29.931K	
1216	T ^o C	0	1	0	0	1	0	1	0	1	X	100Ω	18.17K	11.5K	53.09K	29.784K	
1219	E ^o C	1	1	0	0	0	0	0	0	0	X	100Ω	11.35K	7.68K	37.01K	19.901K	
1220	R ^o C	0	0	1	0	0	1	1	1	1	X	1K	110.09K	71.5K	368.9K	204.5K	
1221	S ^o C	1	0	1	0	0	1	1	1	1	X	1K	110.09K	71.5K	366.7K	202.6K	

NOTES:
 1. LETTERS 'A' THRU 'G' IDENTIFY DUAL POSITION JUMPERS. NUMBERS '0' AND '1' IDENTIFY JUMPER POSITIONS.
 2. LETTERS 'H' AND 'J' IDENTIFY JUMPER POSITIONS.

FIGURE 8-2. SINGLE TYPE PCB SCHEMATIC

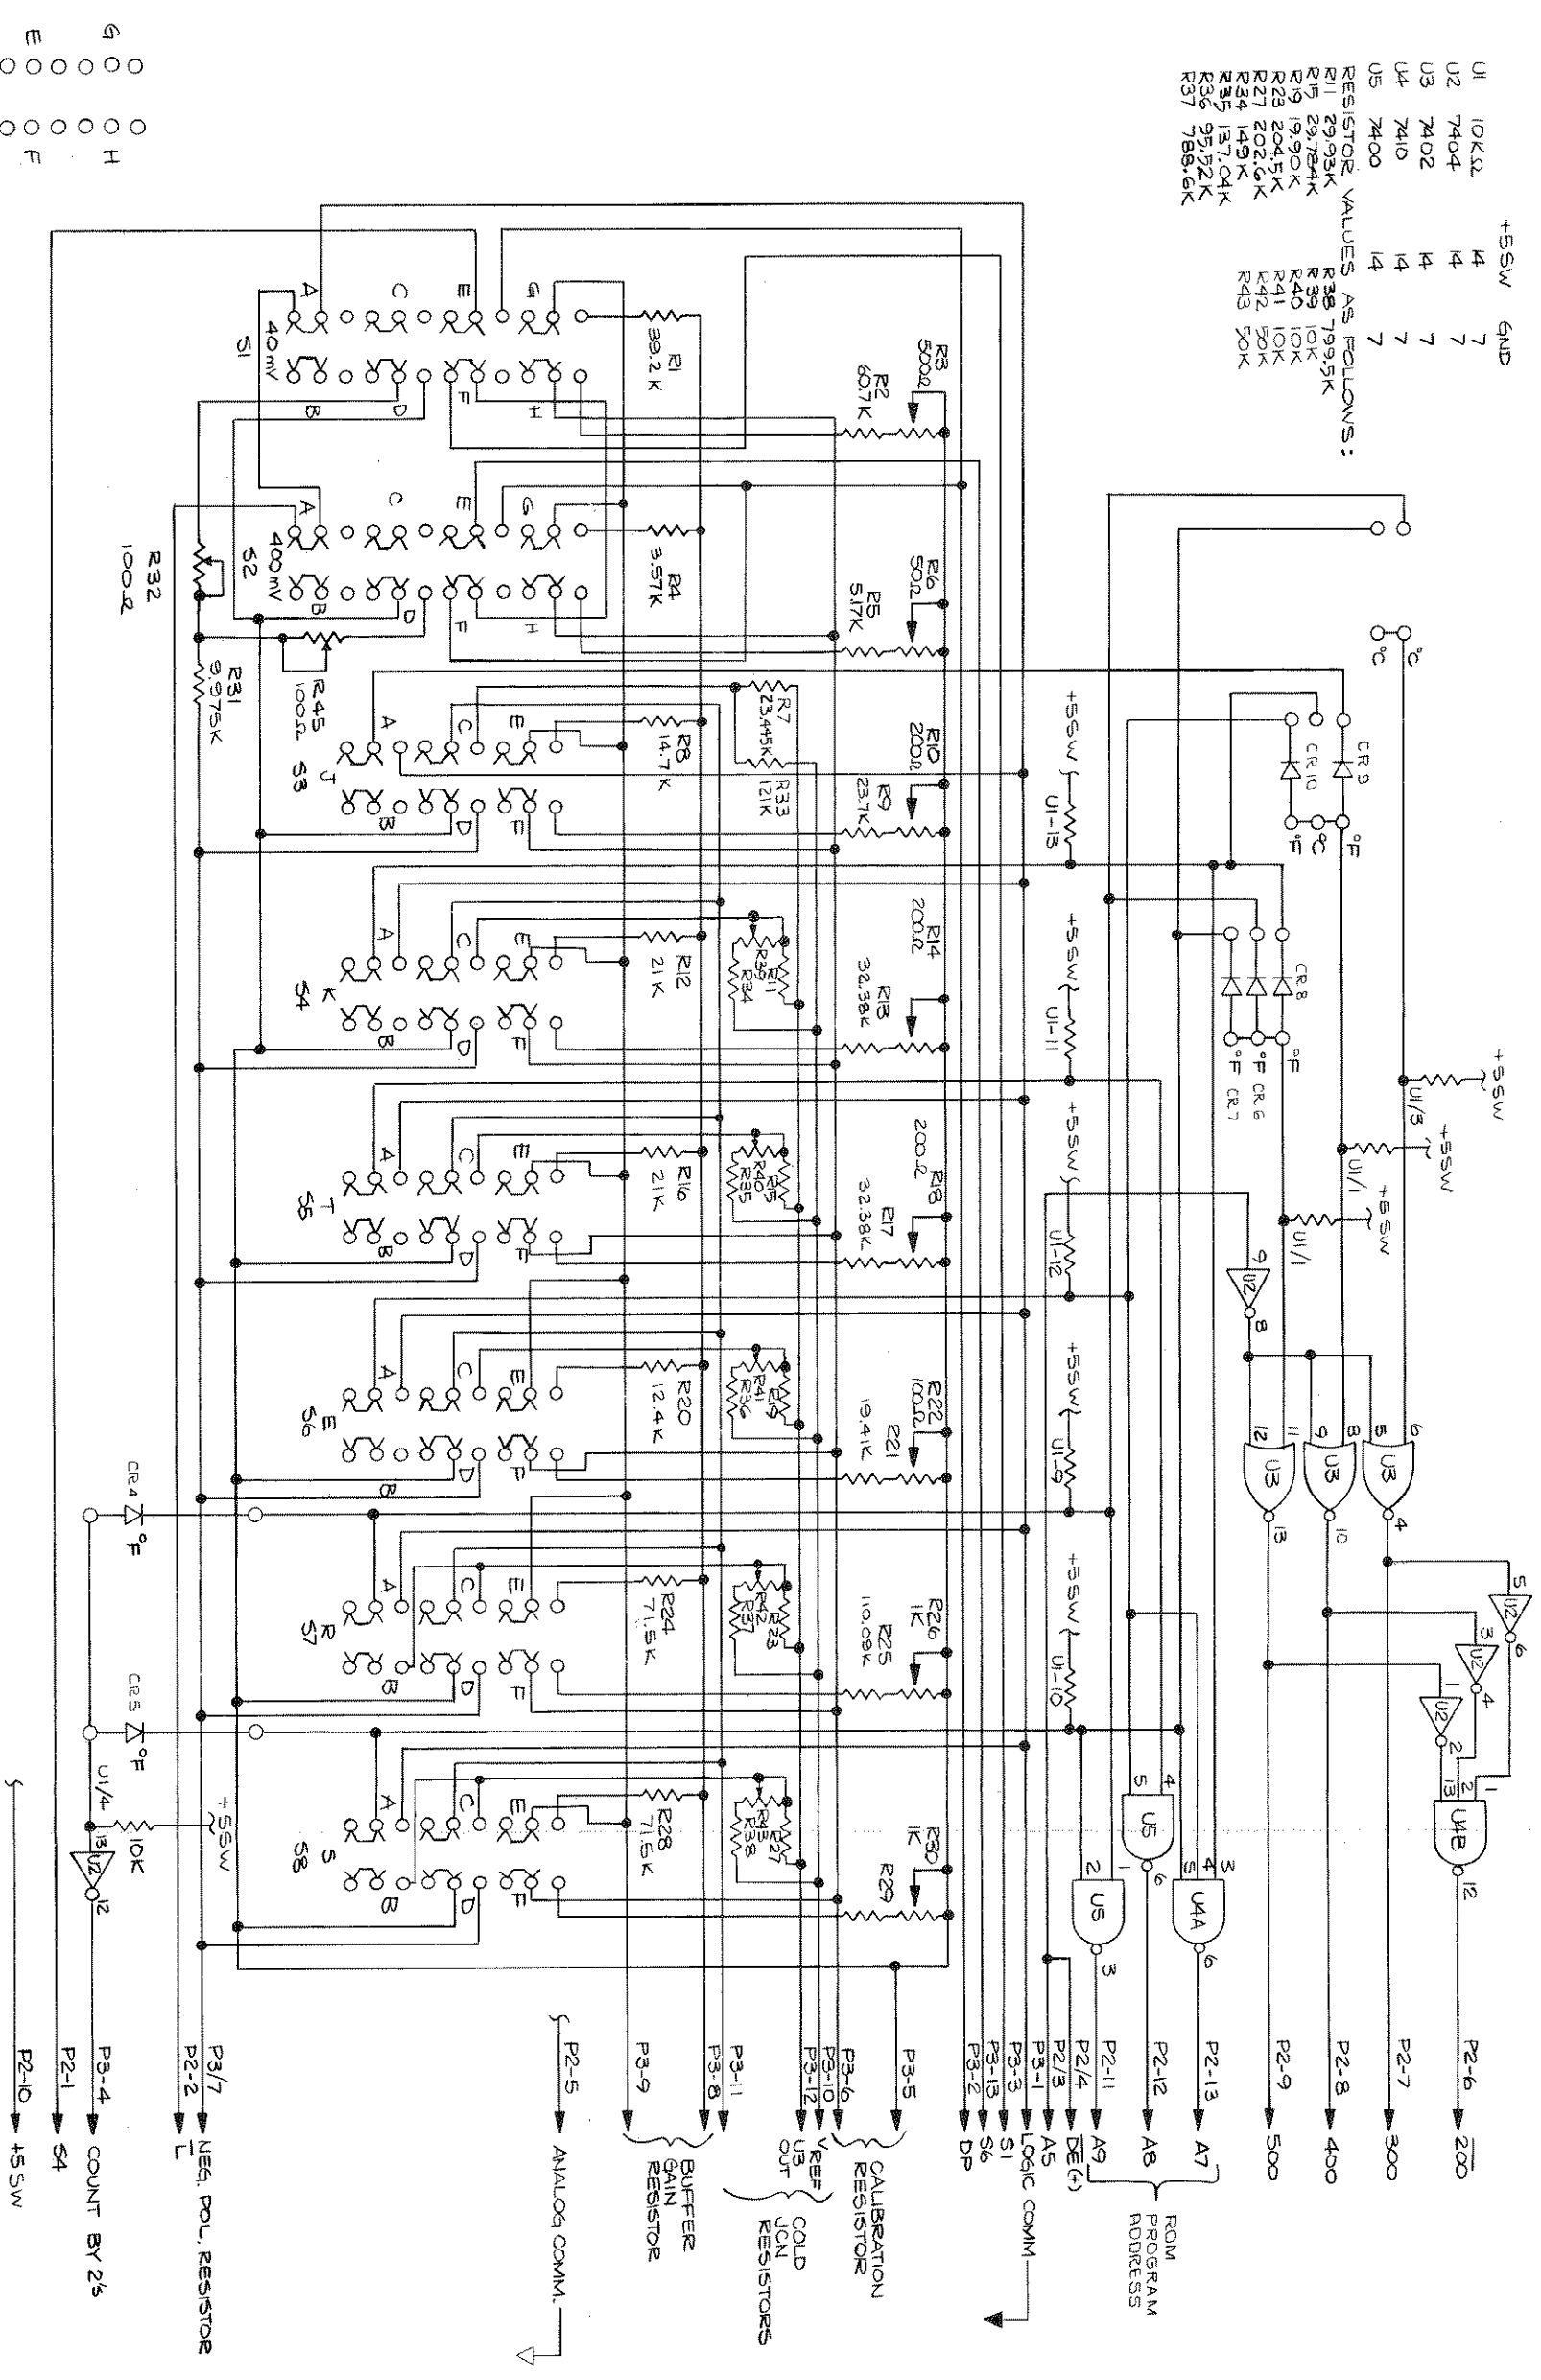


VIEWED FROM CIRCUIT SIDE

FIGURE 8-3. MULTI-TYPE PCB, °F SCHEMATIC

U1	10KΩ	+5SW	GND
U2	7404	14	7
U3	7402	14	7
U4	7410	14	7
U5	7400	14	7

RESISTOR VALUES AS FOLLOWS:

R1	29.93K	R38	79.51K
R2	29.764K	R39	10K
R3	19.90K	R40	10K
R4	204.5K	R41	10K
R5	202.6K	R42	50K
R6	149K	R43	50K
R7	137.04K	R44	50K
R8	95.92K	R45	50K
R9	788.6K		

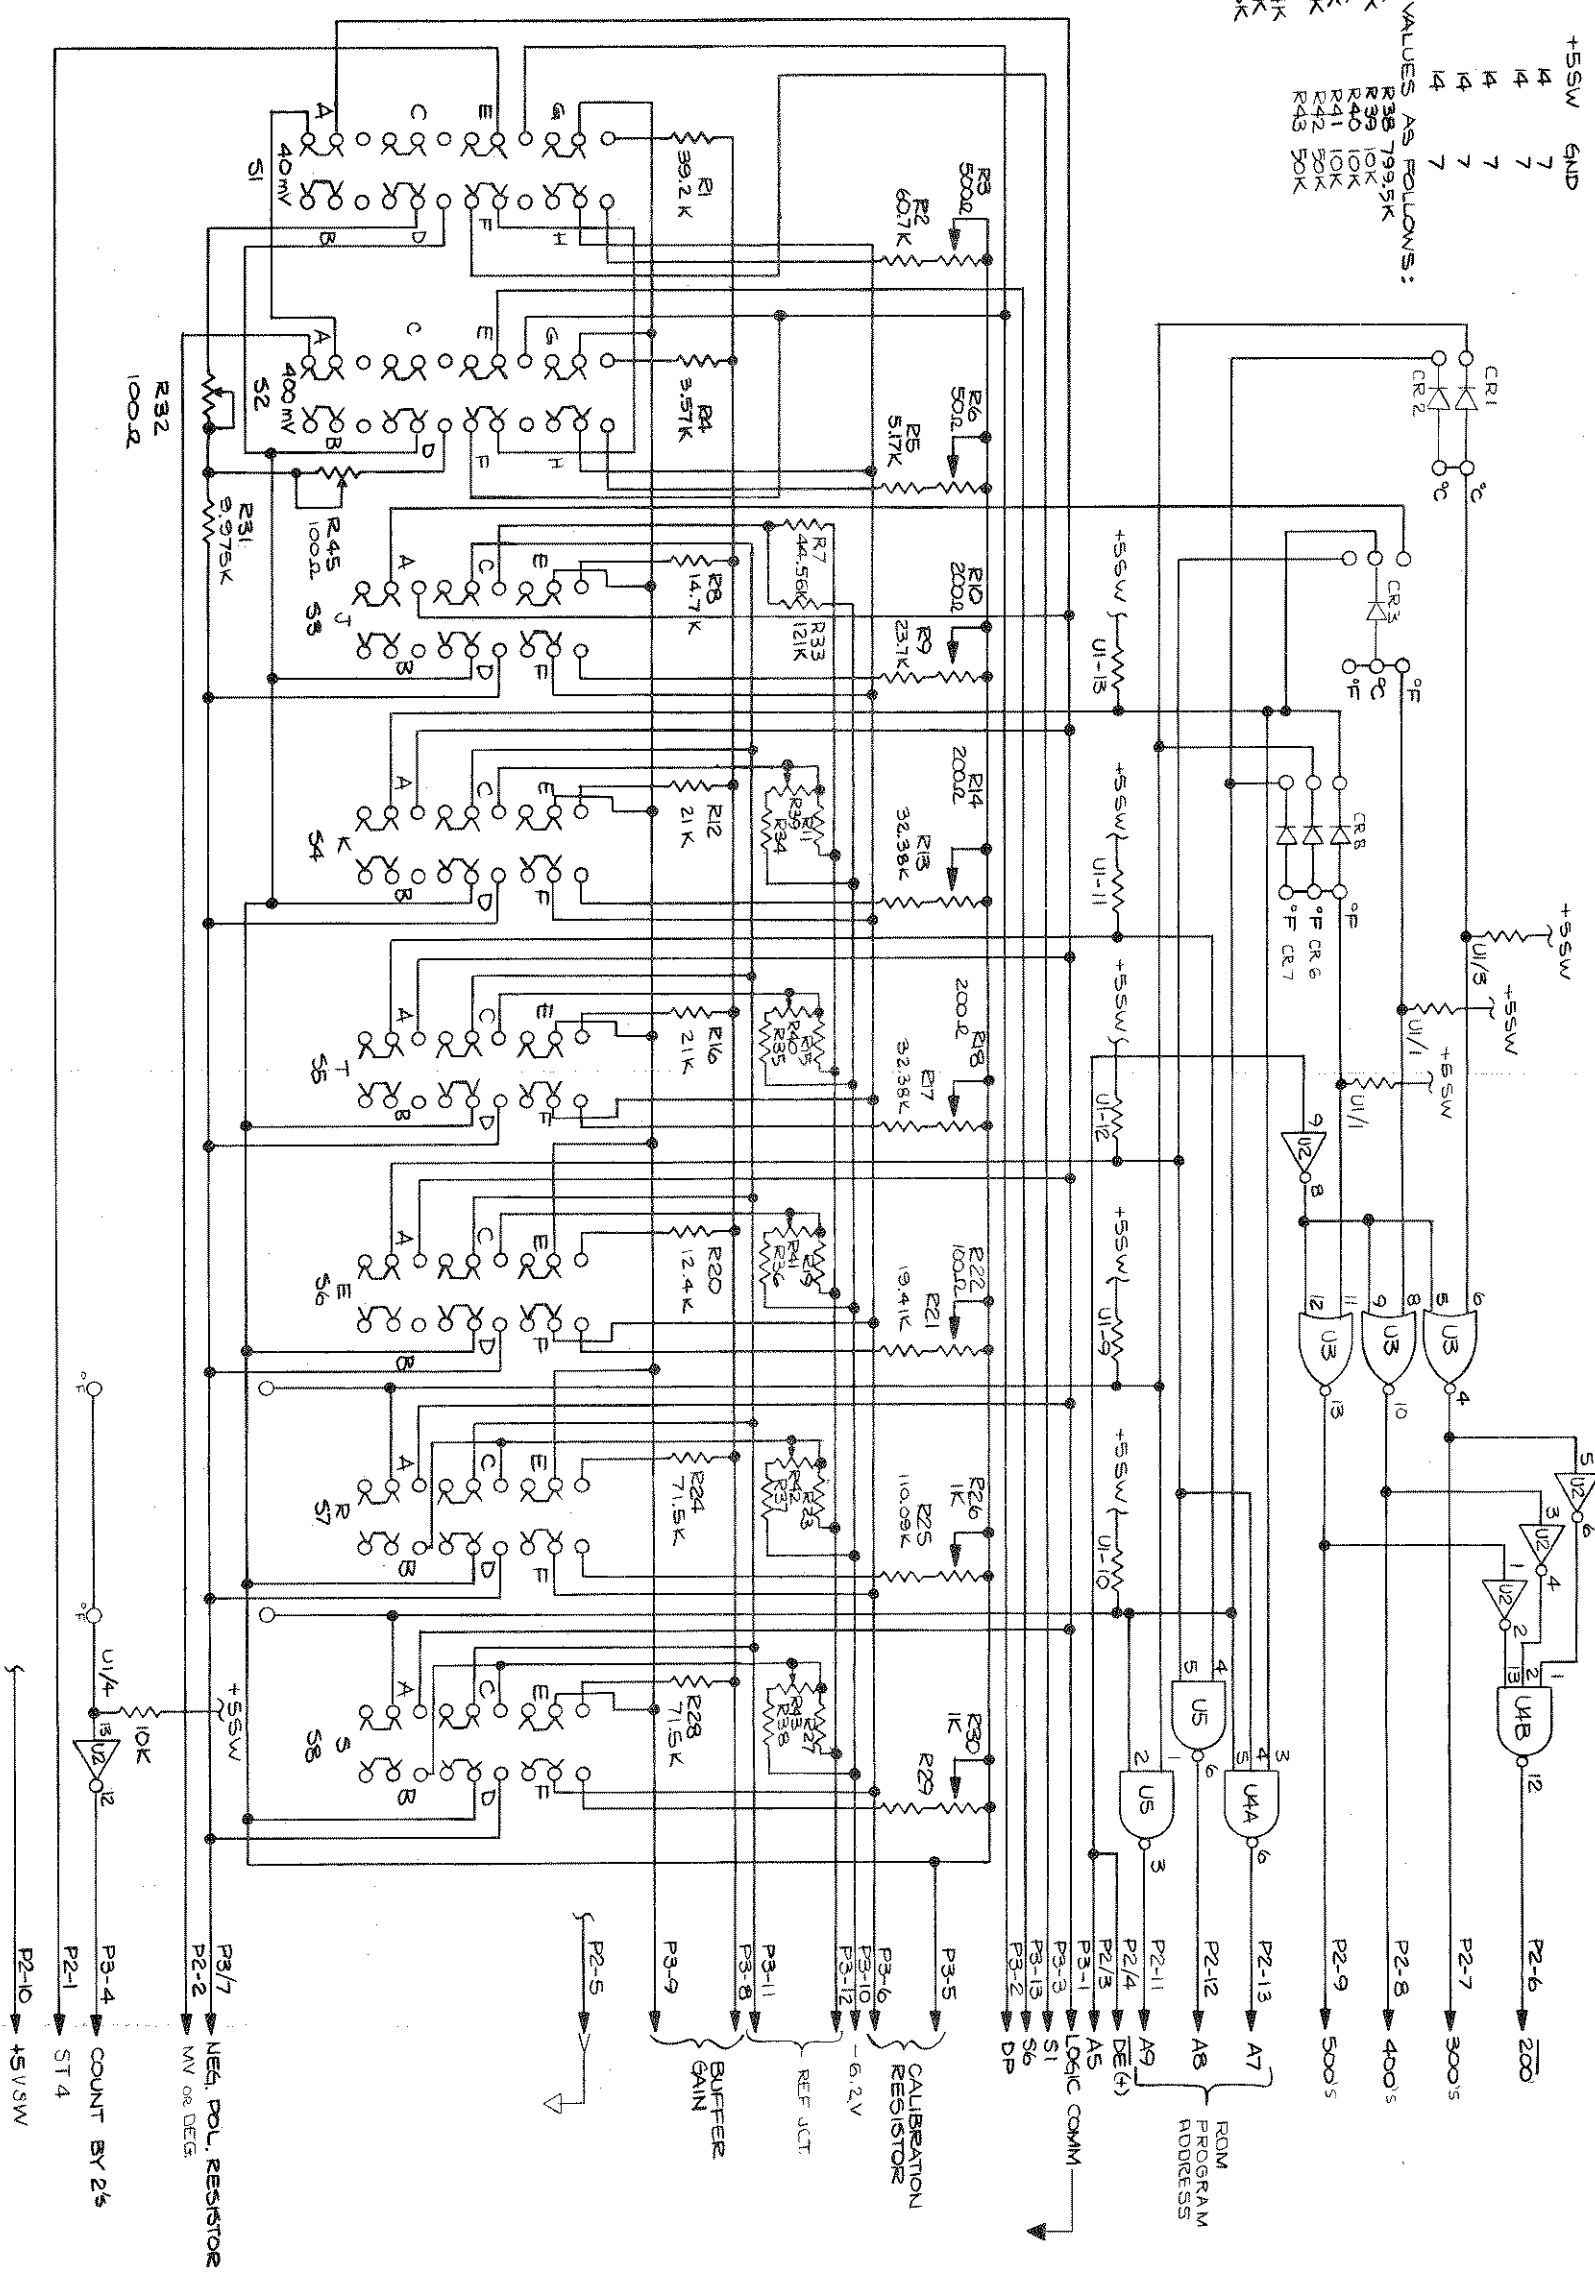

- G ○ ○ ○ ○ ○
- H ○ ○ ○ ○ ○
- E ○ ○ ○ ○ ○
- F ○ ○ ○ ○ ○
- C ○ ○ ○ ○ ○
- D ○ ○ ○ ○ ○
- A ○ ○ ○ ○ ○
- B ○ ○ ○ ○ ○

VIEWED FROM CIRCUIT SIDE

FIGURE 8.4. MULTI-TYPE PCB, C SCHEMATIC


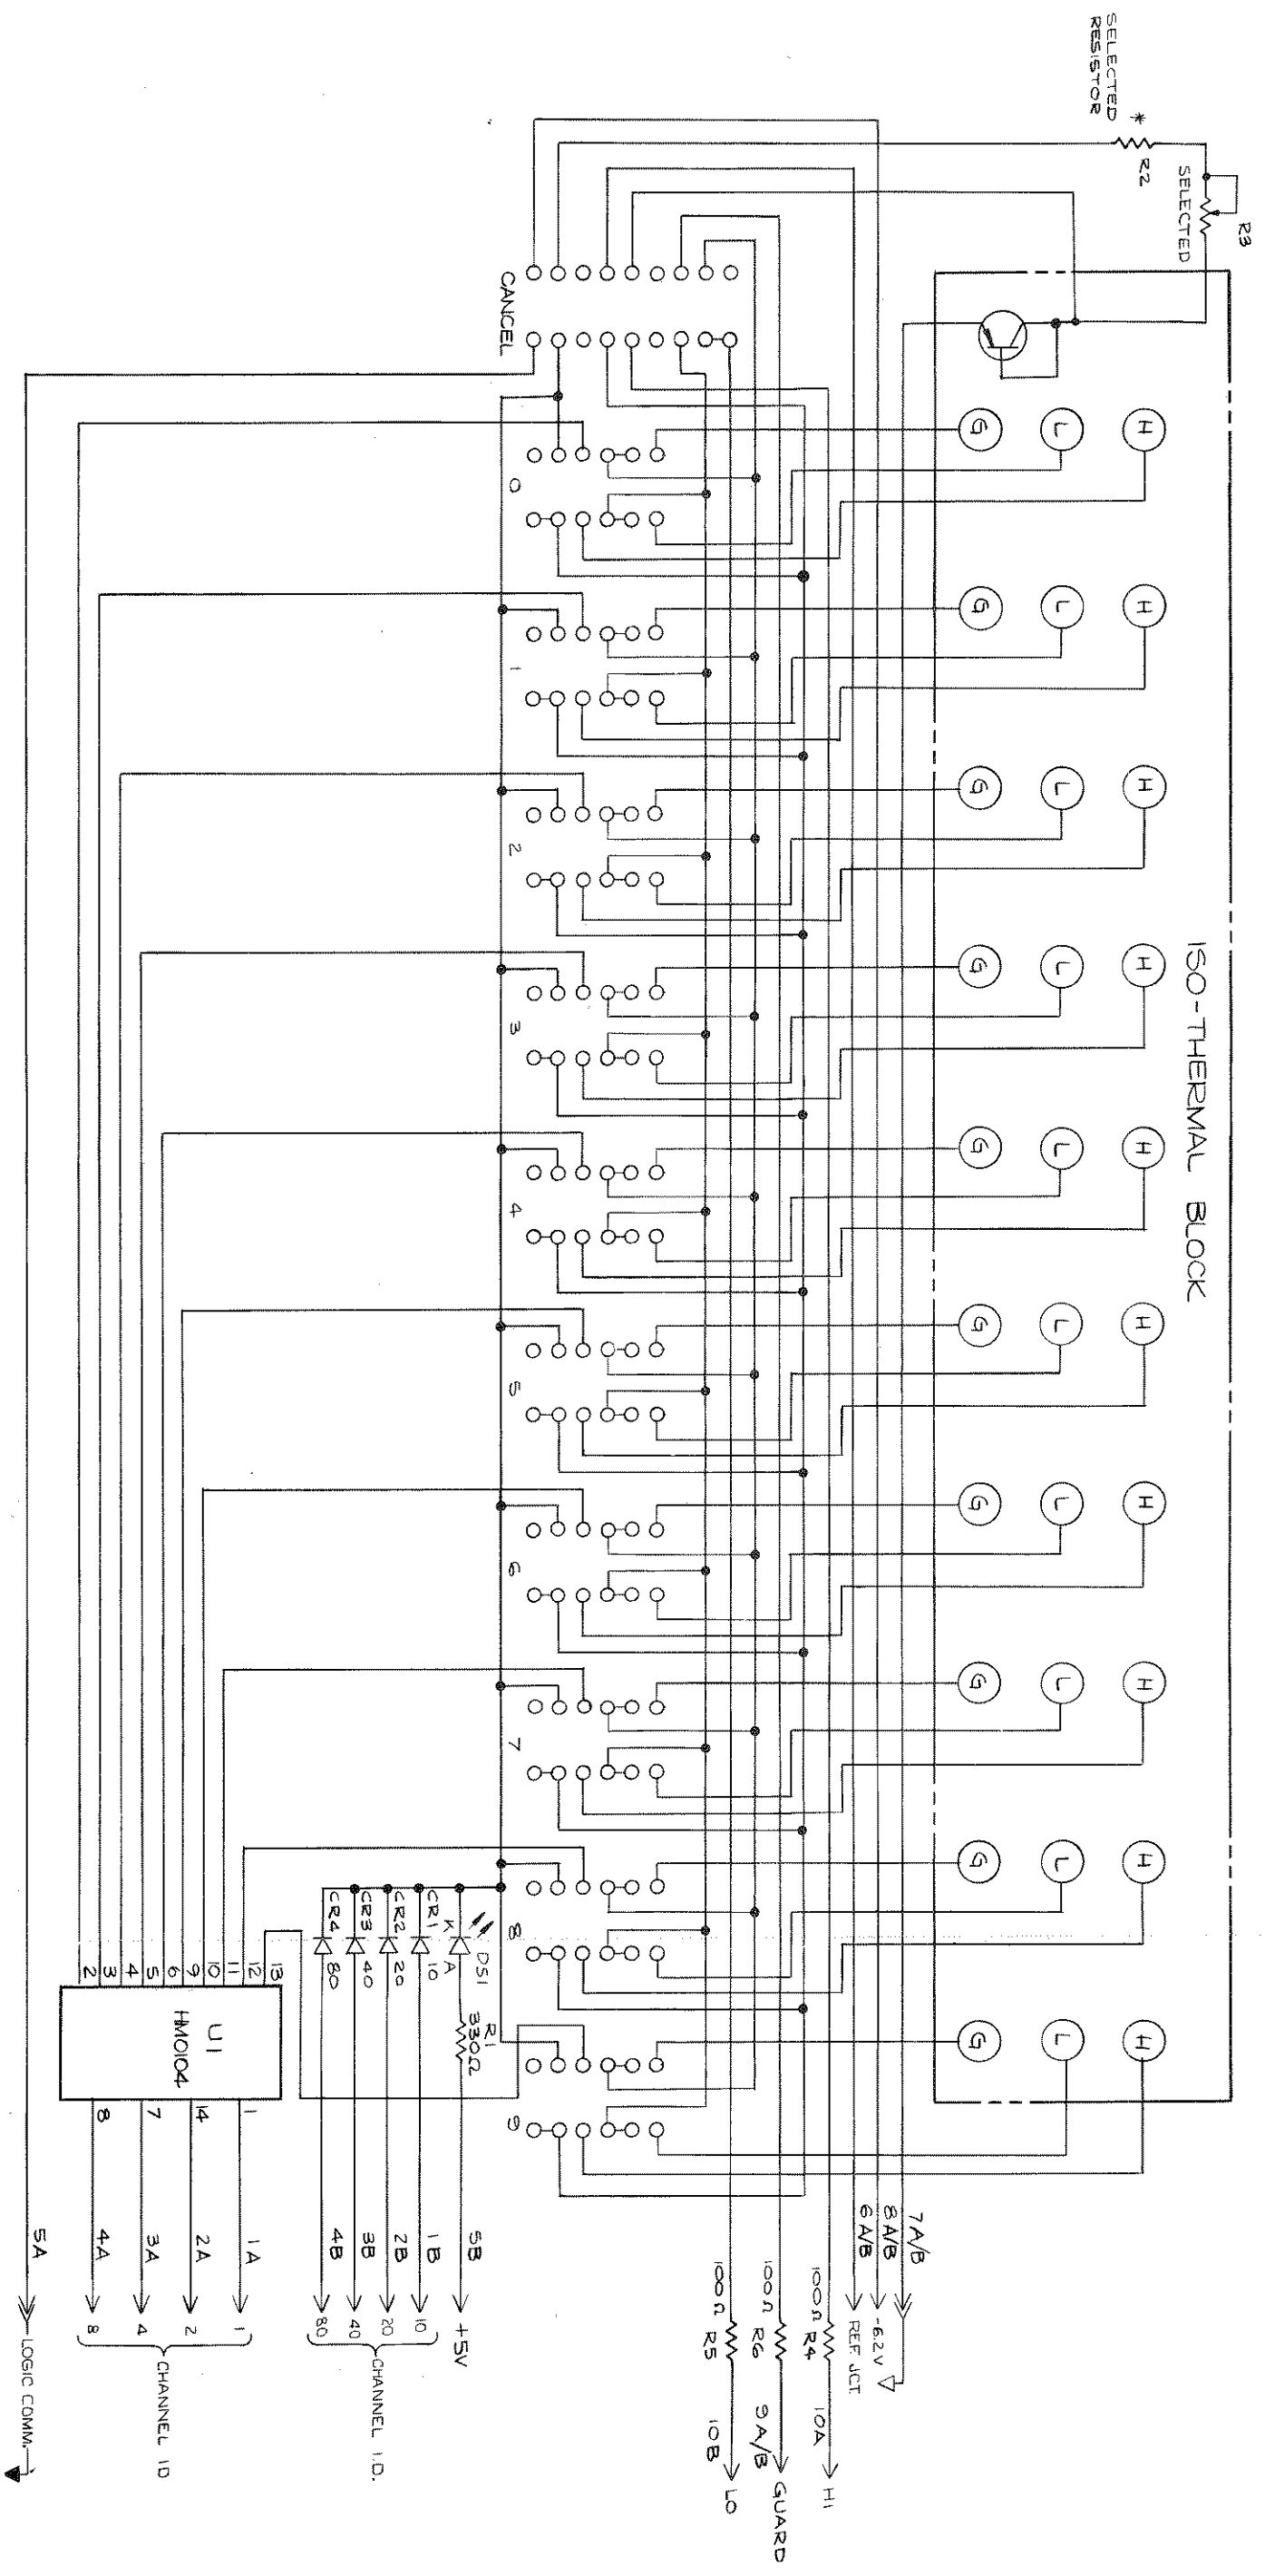


FIGURE 8-5. MULTI-POINT PCB SCHEMATIC

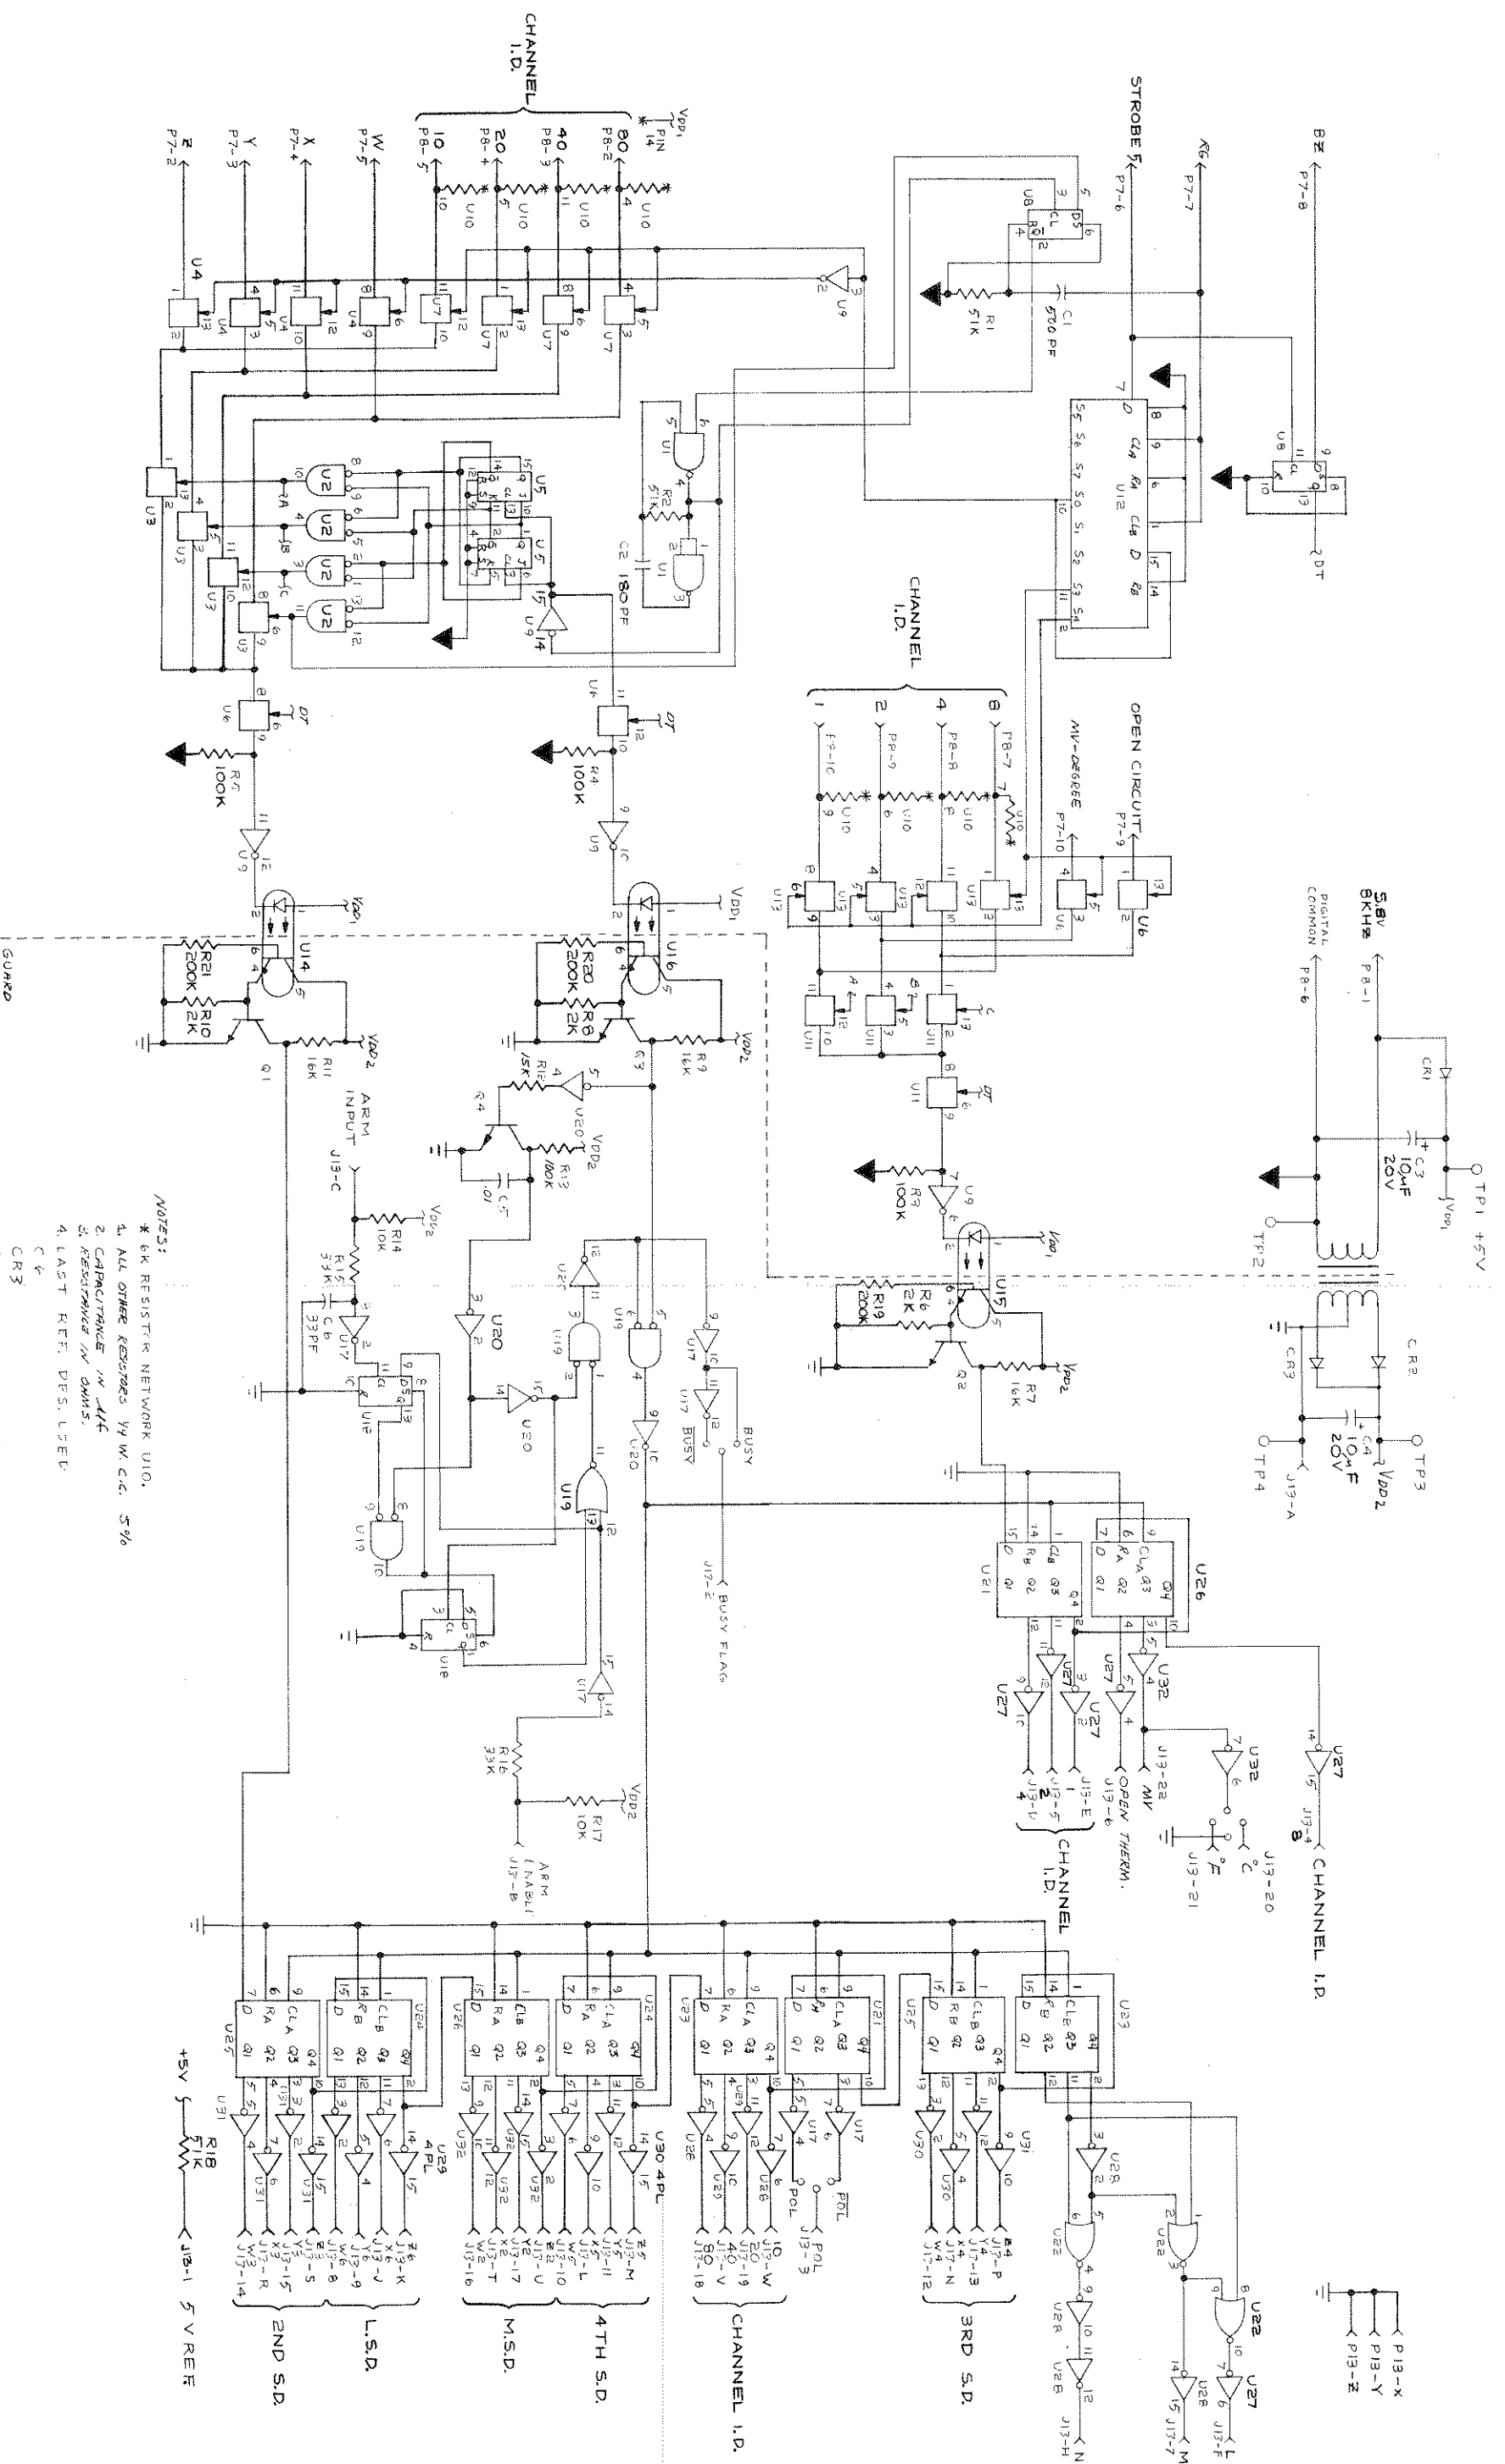

- NOTES:
- * 5% RESISTOR NETWORK U10.
 - 1. ALL OTHER RESISTORS BY W.C.C. 5%
 - 2. CAPACITANCE IN μ F
 - 3. RESISTANCE IN OHMS
 - 4. LAST REF. DES. USED


FIGURE 8-6. DATA OUTPUT UNIT SCHEMATIC

I.C. POWER SUPPLY PINS:

REF. DES.	V _{CC} (+5V)	-V _{CC} (↓)
U1	14	7
U2	14	7

REF. DES.	V _{CC} (+5V)	V _{CC} (↓)	V _{CC} (-7V)
U3	14	7	
U5	1	8	
U6	14	7	
U7	14	7	
U8	4	11	
U9	7		4
U10	14	7	

REFERENCE DESIGNATIONS	HIGHEST USED	NOT USED
C10	S3	
CR11	U10	
Q4		
R29		

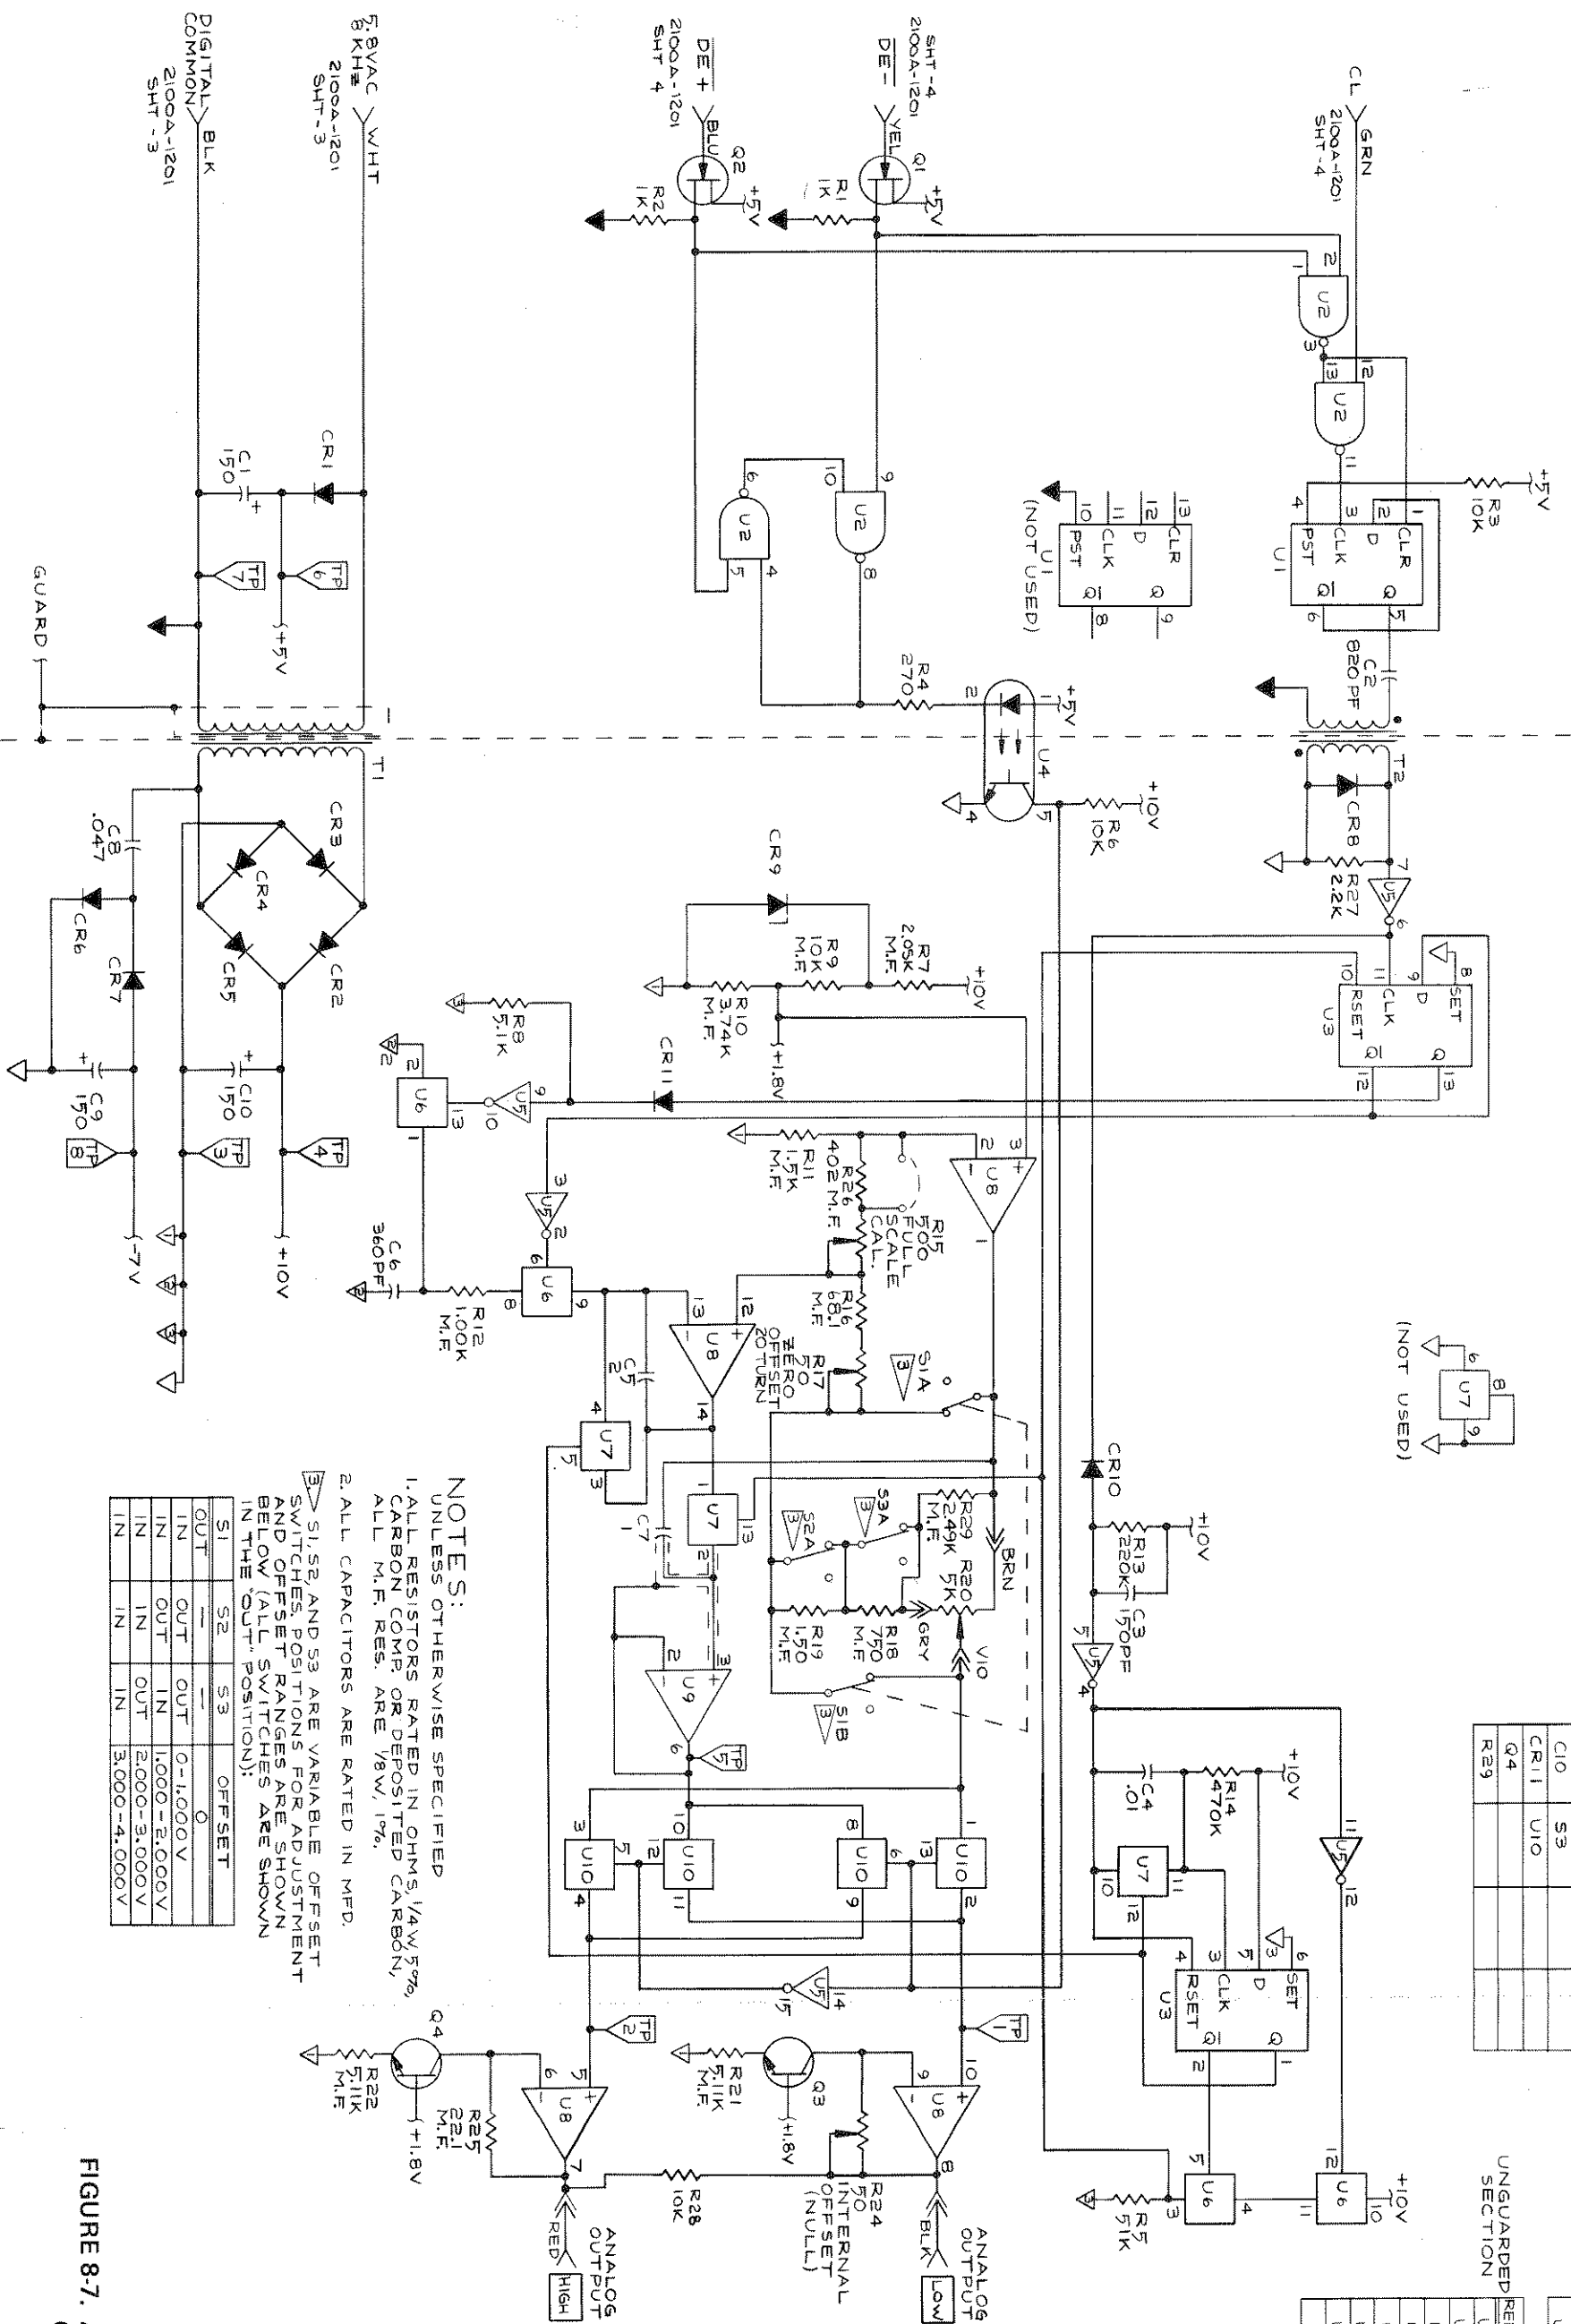

NOTES:

- 1. ALL RESISTORS RATED IN OHMS, 1/4W, 5%, CARBON COMP. OR DEPOSITED CARBON, ALL M.F. RES. ARE 1/8W, 1%. ALL CAPACITORS ARE RATED IN MFD.
- 2. ALL CAPACITORS ARE RATED IN MFD.
- 3. S1, S2, AND S3 ARE VARIABLE OFFSET SWITCHES. POSITIONS FOR ADJUSTMENT AND OFFSET RANGES ARE SHOWN BELOW (ALL SWITCHES ARE SHOWN IN THE OUT. POSITION):

OFFSET	S1	S2	S3
OUT	—	—	0
IN	OUT	OUT	0-1,000.0V
IN	IN	OUT	1,000-2,000.0V
IN	IN	IN	2,000-3,000.0V
IN	IN	IN	3,000-4,000.0V

FIGURE 8-7. ANALOG OUTPUT UNIT, OPTION -04 (2100A-1226)

