

Errata

Title & Document Type: 8410B Network Analyzer 8411A Harmonic Frequency Converter Operating and Service Manual

Manual Part Number: 08410-90521

Revision Date: June 1979

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.




Agilent Technologies

**8410B
NETWORK
ANALYZER**

**8411A
HARMONIC
FREQUENCY
CONVERTER**

Includes Opt. 018

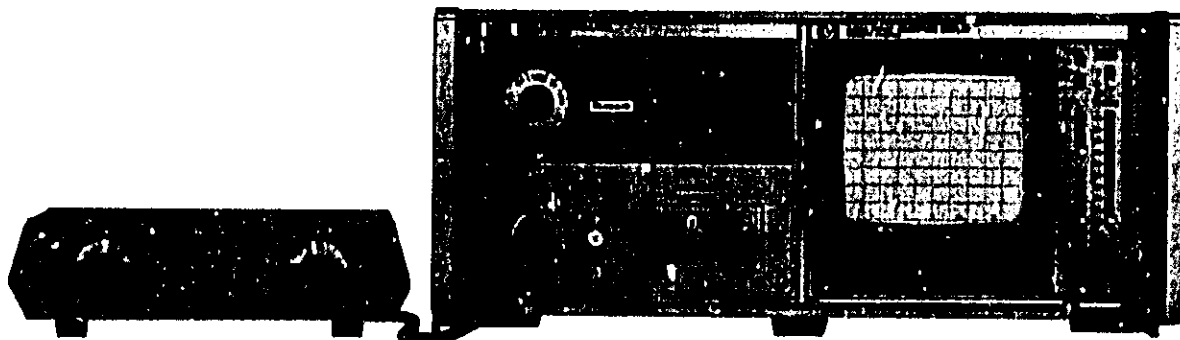

**HEWLETT
PACKARD**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard Instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



**HEWLETT
PACKARD**

OPERATING AND SERVICE MANUAL

8410B NETWORK ANALYZER

SERIAL NUMBERS

This manual applies directly to HP Model 8410B Network Analyzers having serial number prefix 1902A and 1941A. With changes described in Section VII, this manual also applies to 8410B Network Analyzers with serial number prefixes between 1450A and 1741A.

8411A HARMONIC FREQUENCY CONVERTER

SERIAL NUMBERS

Includes Option 018

This manual applies directly to HP Model 8411A Harmonic Frequency Converters having serial number prefix 1925A. With changes described in Section VII, this manual also applies to 8411A Harmonic Frequency Converters with serial number prefixes between 803 and 1905A.

©Copyright

HEWLETT-PACKARD COMPANY
1400 FOUNTAIN GROVE PARKWAY, SANTA ROSA, CALIFORNIA 95404 U.S.A.

1968

MANUAL PART NO. 08410-90521
Microfiche Part No. 08410-90522

Printed: June 1979

CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	2-12. Preparation for Use	2-1
1-1. Description	1-1	2-13. Power Requirements	2-1
1-9. Instruments Covered by Manual	1-1	2-15. Line Voltage Selection	2-2
1-12. Warranty	1-3	2-17. Power Cable	2-2
1-14. Safety Consideration	1-3	2-20. Bench Operation	2-2
1-15. General	1-3	2-22. Rack Mounting	2-2
1-17. Operating Precautions	1-3	2-24. Connecting the Model 8411A	2-2
1-19. Service	1-3	2-26. Installing a Display Unit	2-5
1-20. Accessories Furnished	1-4	2-28. Care of Input Connectors	2-5
1-22. Source Control Cable for 8620C	1-4	2-31. Contact Replacement	2-5
1-24. Servicing Cable	1-4	2-36. Coupling Mechanisms	2-5
1-26. Accessories Available	1-4	2-40. Power Switch Lamp Replacement	2-7
1-27. Accessory Kit	1-4	2-42. Operators Quick-Check Procedure	2-7
1-29. Source Control Cable for 8620A	1-5		
1-31. Rack Mounting Kit	1-5	III OPERATION	3-1
1-33. APC-7 Connector Tool Kit	1-5	3-1. Instructions for Making Measurements	3-1
1-35. Adapters	1-5	3-4. Descriptions of Panel Features	3-1
1-37. Fixed Coaxial Attenuators	1-6		
1-41. Line Lengths	1-6	IV PERFORMANCE TESTS	4-1
1-43. Loads	1-6	4-1. Introduction	4-1
1-44. Fixed Load	1-6	4-3. Line Voltage Requirements	4-1
1-45. Sliding Load	1-6	4-5. Performance Test Procedures	4-1
1-46. Shorts	1-6	4-6. Purpose	4-1
1-48. Display Units	1-6	4-10. Test Equipment Required	4-1
1-54. Auxiliary Equipment	1-7	4-12. Automatic Tuning Test	4-2
1-55. Transmission and Reflection Test Unit	1-7	4-13. Reference Channel Input Power	
1-68. Signal Source Requirements	1-8	Range Test	4-3
1-69. Output Power	1-8	4-14. Amplitude Range and Accuracy Test	4-6
1-72. Signal Purity	1-9	4-15. Test Channel Noise Test	4-8
1-74. Frequency Stability	1-9	4-16. Test Channel Dynamic Range Test	4-10
1-76. Sweep Characteristics	1-9	4-17. Channel Isolation Test	4-12
1-79. Frequency-Related Voltage Output	1-9	4-18. Input Impedance Test	4-14
1-81. Adapting Hewlett-Packard Sweep Oscillators for Use With the Network Analyzer	1-9		
1-82. 8620A Sweep Oscillator With RF Plug-In	1-9	V ADJUSTMENTS	5-1
1-85. Recommended Test Equipment	1-9	5-1. Introduction	5-1
		5-3. Listing of Available Factory Selected Components	5-4
II INSTALLATION	2-1	5-4. Test Equipment Required	5-1
2-1. Initial Mechanical Inspection	2-1	5-6. Replacing Factory-Selected Components	5-1
2-3. Initial Electrical Inspection	2-1	5-8. 8410B Power Supply Assembly A10A1	5-6
2-5. Claims	2-1	5-9. 8410B Phase Detector Assembly A5	5-7
2-7. Repackaging for Shipment	2-1	5-10. 8410B Search Assembly A8	5-8
2-8. Using Original Packaging	2-1	5-11. 8410B 20-MHz Oscillator Assembly A13	5-9
2-10. Using Other Packaging	2-1	5-12. 8410B AGC Amplifier Assembly A15	5-11
		5-13. 8410B Reference 278-kHz Amplifier Assembly A16	5-12

CONTENTS (Cont'd)

Section	Page	Section	Page
5-14, 8410B Channel Phase Variation Over AGC Range	5-14	VII MANUAL CHANGES	7-1
5-15, 8410B Sweep Stability Circuit In CW Mode	5-15	7-1, Introduction	7-1
5-16, 8410B Amplitude Attenuator Amplifier Assembly A11	5-16	7-3, Manual Changes	7-1
5-17, 8410B Automatic Control Assembly A9	5-18	VIII SERVICE	8-1
5-18, 8410B A/D Converter A18	5-19	8-1, Introduction	8-1
5-19, 8411A VTO Check and Adjustment	5-20	8-3, Maintenance Precautions	8-1
5-20, 8411A A4 Reference and A5 Test Channel Preamplifier Bias Centering, Bias, Conversion Efficiency, and Power Amplifier Gain	5-22	8-4, Line Voltage Requirements	8-1
5-21, 8411A A6 VTO Tuning Voltage Shaping Amplifier	5-25	8-6, Maintenance Aids	8-1
5-22, 8411A Channel Isolation	5-27	8-7, Servicing Aids On Printed Circuit Boards	8-1
5-23, 8411A Amplitude and Phase Offset Adjustment	5-28	8-9, Circuit Board Extender	8-1
VI REPLACEABLE PARTS	6-1	8-11, Printed Circuit Board Removal	8-1
6-1, Introduction	6-1	8-13, Test Points	8-3
6-3, Exchange Assemblies	6-1	8-16, Troubleshooting	8-3
6-5, Abbreviations	6-1	8-17, General Procedure	8-3
6-7, Replaceable Parts List	6-1	8-20, Transistor In-Circuit Testing	8-4
6-11, Ordering Information	6-1	8-23, Transistor Out-of-Circuit Testing	8-5
6-14, Spare Parts Kit	6-2	8-25, Standard Circuits	8-5
		8-36, Recommended Test Equipment	8-8
		8-38, Repair	8-8
		8-39, Part Location Aids	8-8
		8-41, Module Exchange Program	8-9
		8-46, After Service Product Safety Checks	8-9
		8-50, Special Installation Instructions	8-9
		8-58, Printed Circuit Boards	8-17
		8-64, Schematic Diagrams	8-18

ILLUSTRATIONS



Figure	Page	Figure	Page
1-1, Model 8410B and 8411A Accessories	1-0	5-2, Test Channel IF Bandpass Birdies	5-23
1-2, Accessory Kit No. 11587A	1-4	5-3, Reference Channel IF Bandpass Birdies	5-24
2-1, Line Voltage Selection	2-2	5-4, A7 VTO Assembly 08411-6024, Date Code C-931-4	5-30
2-2, Rack-Mounting Kit Installation	2-4	5-5, A7 08411-6024 Date Code C-931-4, Circuit Side After Modification	5-31
2-3, APC-7 Connectors	2-6	5-6, Partial Schematic of 08411-6024 Date Code C-931-4, Showing the Circuit Modification	5-32
2-4, Test Setup for Operators Quick Check	2-8	5-7, Frequency Jitter 0.11 to 2.0 GHz	5-33
3-1, Front Panel Features	3-2	5-8, Pulse Line to Substrate Position	5-34
3-2, Model 8410B Rear Panel Features	3-4	5-9, Power Holes Caused by Phase Lock Loop Oscillations	5-34
3-3, Typical Test Setup for Multioctave Measurements	3-5	5-10, Power Hole 10 to 18 GHz Caused by Discontinuity in Sampler	5-35
4-1, Typical Display of Phase-Locked Signal, 0.11 to 2 GHz, or, 2 to 18 GHz	4-3	5-11, Tracking Ripple 2.0 to 12.4 GHz Caused by Sampler Loads	5-35
4-2, Typical Display of Signal That is Not Phase-Locked	4-3		
5-1, 8411A Adjustments Location and Preset Position	5-21		

ILLUSTRATIONS (Cont'd)


Figure	Page	Figure	Page
6-1.	Model 8410B Cabinet Parts	6-24	
6-2.	Model 8410B Front Panel	6-25	
6-3.	8410B Extractor-Retainer Parts	6-26	
6-4.	Model 8411A Cabinet Parts	6-33	
6-5.	Model 8411A Exploded View	6-35	
7-1.	8410A-A10A1 Parts Location (Change D)		
7-2.	8411A-A6 and A7, Schematic Diagram (Change F)	7-4	
7-3.	8411A-A7 Schematic Diagram (Change J)	7-9	
7-4.	8411A-A7 Parts Location (Change L)	7-10	
7-5.	8411A-A7 Schematic Diagram (Change L)	7-11	
7-6.	8411A-A5 Parts Location (Change N)	7-12	
8-1.	Servicing Aids on Circuit Boards	8-3	
8-2.	Printed Circuit Board Removal	8-3	
8-3.	Transistor Operation	8-4	
8-4.	Examples of Diode and Transistor Marking Methods	8-6	
8-5.	Basic Diode Circuits	8-6	
8-6.	Basic Transistor Circuits	8-7	
8-7.	Field Effect Transistor Operation	8-8	
8-8.	Module Exchange Procedure	8-10	
8-9.	8411A Exploded View	8-13	
8-10.	Sampler Diode Replacement	8-14	
8-11.	General Information on Schematic Diagrams	8-19	
8-12.	Schematic Diagram Notes	8-19	
8-13.	8410B Troubleshooting Procedures	8-22	
8-14.	Basic Block Diagram	8-27	
8-15.	Model 8410B Test Points	8-28	
8-16.	Model 8411A Test Points	8-28	
8-17.	Detail Block Diagram	8-29	
8-18.	Models 8410B/8411A Interface Test Points	8-30	
8-19.	Model 8410B/8411A Interface Troubleshooting	8-30	
8-20.	Model 8410B Test Points	8-30	
8-21.	Model 8410B Troubleshooting	8-31	
8-22.	Test Points for 8411A Troubleshooting	8-32	
8-23.	Model 8412A Troubleshooting	8-32	
8-24.	8411A-A1A2A3 and Stripline Troubleshooting	8-33	
8-25.	8411A/A1, A2, A3 and Stripline Troubleshooting Using Common Test Equipment	8-34	
8-26.	8411A-A3 Parts Location	8-35	
8-27.	8411A-A1, A2, A3, and Stripline Schematic Diagram	8-35	
8-28.	8411A-A4 and A5 Troubleshooting	8-36	
8-29.	8411A-A4 and A5 Parts Location	8-37	
8-30.	8411A-A4 and A5 Schematic Diagram	8-37	
8-31.	8411A-A6 and A7 Troubleshooting	8-38	
8-32.	8411A-A6 and A7 Parts Location	8-39	
8-33.	8411A-A6 and A7 Schematic Diagram	8-39	
8-34.	8410B-A12 and A14 Troubleshooting	8-40	
8-35.	8410B-A12 and A14 Parts Location	8-41	
8-36.	8410B-A12 and A14 Schematic Diagram	8-41	
8-37.	8410B-A16 Troubleshooting	8-42	
8-38.	8410B-A16 Parts Location	8-43	
8-39.	8410B-A16 Schematic Diagram	8-43	
8-40.	8410B-A13 Troubleshooting	8-44	
8-41.	8410B-A13 Parts Location	8-45	
8-42.	8410B-A13 Schematic Diagram	8-45	
8-43.	8410B-A15 Troubleshooting	8-46	
8-44.	8410B-A15 Parts Location	8-47	
8-45.	8410B-A15 Schematic Diagram	8-47	
8-46.	8410B-A11 Troubleshooting	8-48	
8-47.	8410B-A11 Parts Location	8-49	
8-48.	8410B-A11 Schematic Diagram	8-49	
8-49.	8410B-A4 Troubleshooting	8-50	
8-50.	8410B-A4 Parts Location	8-51	
8-51.	8410B-A4 Schematic Diagram	8-51	
8-52.	8410B-A5 and A6 Troubleshooting	8-52	
8-53.	8410B-A5 and A6 Parts Location	8-53	
8-54.	8410B-A5 and A6 Schematic Diagram	8-53	
8-55.	8410B-A7 and A8 Troubleshooting	8-54	
8-56.	8410B-A7 and A8 Parts Location	8-55	
8-57.	8410B-A7 and A8 Schematic Diagram	8-55	
8-58.	8410B-A10, A10A1 +20V and -20V Power Supply A10 and A10A1 Troubleshooting	8-56	
8-59.	8410B-A10A1 Parts Location	8-59	
8-60.	8410B-A10A1 Parts Location 8410B +20V and -20V Power Supply Schematic	8-59	
8-61.	8410B-A10, A10A1 -11V Power Supply Troubleshooting	8-60	
8-62.	8410B -11V Power Supply Schematic Diagram	8-61	
8-63.	8410B-A9 Parts Location	8-63	
8-64.	8410B-A9 Schematic Diagram	8-63	
8-65.	8410B-A18 Parts Location	8-65	
8-66.	8410B-A18 Schematic Diagram	8-65	
8-67.	8410B-A19 Parts Location	8-67	
8-68.	8410B-A19 Schematic Diagram	8-67	
8-69.	8410B Signal Wiring Diagram	8-69	

TABLES


Figure	Page	Figure	Page
1-1. Models 8410B and 8411A Specifications	1-2	5-1. Alignment Controls	5-2
1-2. Components of Accessory Kit No. 11587A	1-5	5-2. Factory Selected Components	5-3
1-3. Components of APC-7 Connector Tool Kit No. 11591A	1-5	5-3. Listing of Available Factory Selected Components	5-4
1-4. Adapters	1-5	6-1. Exchange Parts	6-1
1-5. HP 8491B and 8492A Attenuators	1-6	6-2. Reference Designators and Abbreviations	6-3
1-6. Models 8410B and 8414A Compatibility by Serial Number	1-7	6-3. 8410B Replaceable Parts	6-5
1-7. AUTO Tune/Source Compatibility	1-9	6-4. 8411A Replaceable Parts	6-27
1-8. Recommended Test Equipment for Performance	1-10	7-1. Manual Changes by Serial Number	7-1
2-1. AC Power Cables Available	2-3	8-1. Service Sheets	8-2
4-1. Performance Test Record	4-17	8-2. Out of Circuit Transistor Testing	8-5
		8-3. Ohmmeters Used for Transistor Testing	8-5
		8-4. Printed Circuit Soldering Equipment	8-17

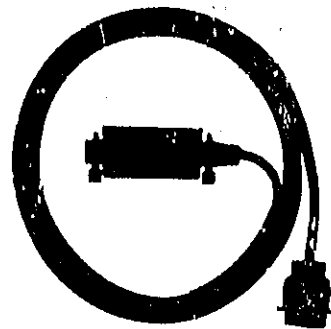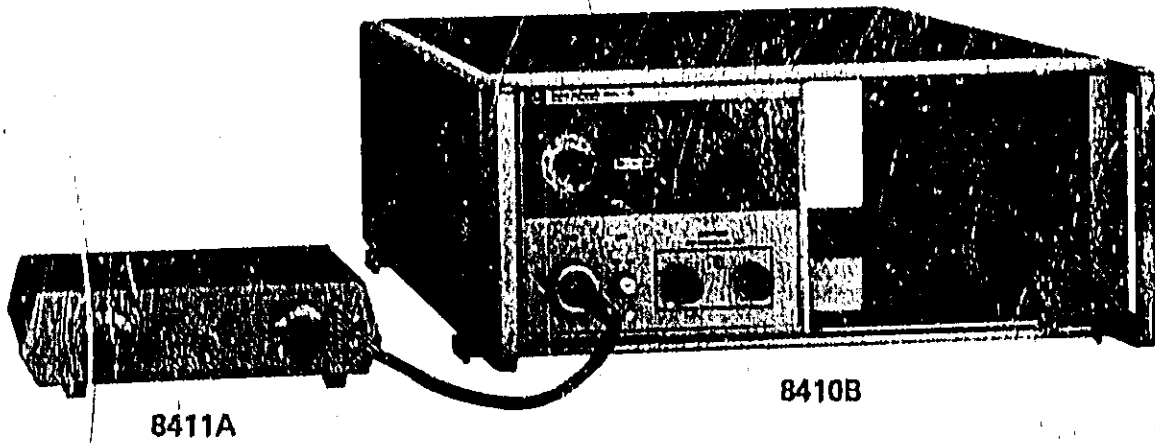

**SOURCE CONTROL
CABLE**
(HP Part No. 8120-2208)
(For 8620C Sweep Oscillator)

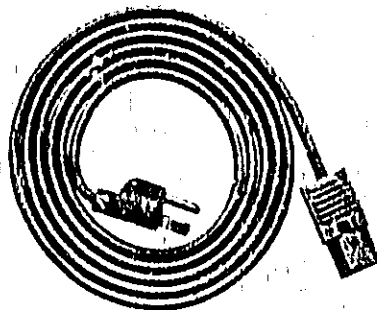

POWER CABLE
(See Table 2-1 for HP Part Number)

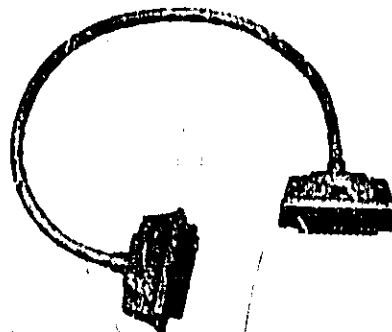

SERVICE CABLE
(HP Part No. 8410-60067)

Figure 1-1. Models 8410B, 8411A And Accessories Supplied

SECTION I GENERAL INFORMATION

1-1. DESCRIPTION

1-2. The combination of Model 8410B Network Analyzer, Model 8411A Frequency Converter, and a display unit for the Model 8410B, functions as a phasemeter and a ratimeter for direct, continuous, simultaneous phase and magnitude ratio measurement of RF voltages. The complete network analyzer measures phase angles from 0 to 360° and magnitude ratios in decibels over a dynamic range of 60 dB. These measurements can be made on single frequencies and on swept frequencies in overlapping octave bands from 110 MHz to 12.4 GHz (110 MHz to 18 GHz for Option 018).

1-3. Measurements possible with the network analyzer include: direct determination of scattering (s) parameters; swept-frequency response measurements of phase sensitive systems; analysis of parameters relating to the use of solid state devices in wideband circuits; group delay measurements for communications systems; analysis of magnitude and phase distortion in filters, amplifiers, and preamplifiers; antenna testing; and performance testing of components in sophisticated radars. Although the network analyzer is intended primarily for wideband coaxial measurements, it can also be used with waveguides within the limits imposed by waveguide bandwidths and the characteristics of waveguide-to-coax adapters.

1-4. The Models 8410B and 8411A convert the two RF signals being measured to two 278 kHz signals that have the same magnitude and phase relationships. The display unit used with the Model 8410B converts these 278 kHz signals to a CRT or meter display. External monitoring points for the 278 kHz signals are provided on the Model 8410B. Operating power for the display unit and for the Model 8411A is furnished by the Model 8410B.

1-5. The Model 8411A automatically tracks the frequency of the signal applied to the reference input. This automatic tuning and tracking takes place over a selected octave or, with an appropriate sweeper interface, a multioctave frequency band.

In addition to the band selector, the search and hold range of the automatic tuning can be adjusted for best performance with the selected band. For a discussion of swept signal source requirements, see paragraph 1-68.

1-6. The signal applied to the reference input of the Model 8411A is used as the reference for both phase and amplitude measurements. Since it actuates the automatic tuning, its level is critical. A meter on the Model 8410B continuously monitors the reference channel signal level and indicates whether it is in the range required for making measurements.

1-7. Controls on the Model 8410B include phase and precision step-action amplitude offset controls. The vernier controls are for convenience in setting reference and calibration phase and amplitude indications. The amplitude offset controls allow large amplitude differences to be measured with greater resolution.

1-8. Complete specifications for the Model 8410B/8411A combination are given in Table 1-1. Specifications that include display unit performance are given in the Operating and Service Manuals for the display units.

1-9. INSTRUMENTS COVERED BY MANUAL

1-10. Each Model 8410B and Model 8411A carries a two-section serial number. The two sections are separated by either a hyphen or a letter. The numbers in the first section are a prefix. The contents of the manual apply directly to Models 8410B and 8411A that have the serial number prefixes listed on the title page.

1-11. Revisions required to adapt this manual to instruments with serial number prefixes not listed on the title page are given in a yellow Manual Changes insert supplied with the manual. For information concerning serial number prefixes not listed on the title page or in a Manual Changes insert, contact the nearest Hewlett-Packard office listed at the rear of this manual.

Table 1-1. Models 8410B and 8411A Specifications

<p>Frequency Range: 8410B: 0.110 to 18 GHz; 8411A: 0.110 to 12.4 GHz; Option 018: 0.110 to 18 GHz</p> <p>RF Frequency Tracking: Typically <35 ms/octave</p> <p>8411A Input Impedance: 50 Ohms nominal, SWR <1.5, 0.11 to 2 GHz; <2.0, 2 to 6 GHz; <3.0, 6 to 12.4 GHz; <3.0, 6 to 18 GHz (Option 018).</p> <p>Channel Isolation: >65 dB, 0.11 to 6 GHz; >60 dB, 6 to 12.4 GHz; >50 dB, 12.4 to 18 GHz.</p>	<p>PHASE</p> <p>Phase Range: 0 to 360°.</p> <p>Control: Vernier provides continuous phase reference adjustment over at least 90°.</p> <p>Frequency Response: Reference and test chan- nels typically track within: ±1° for any octave 0.11 to 4.0 GHz. ±3° for any octave 4.0 to 12.4 GHz. ±10° 12.4 to 18 GHz (Option 018). Phase discontinuity resulting from harmonic number changes: Typically <2°.</p>
<p>MAGNITUDE</p> <p>Magnitude Range: Reference Channel: Phase-lock is maintained (REF CHANNEL LEVEL meter in OPERATE range) for Reference Channel input levels be- tween -18 dBm and -35 dBm from 0.11 to 12.4 GHz, and between -18 dBm and -25 dBm from 12.4 to 18.0 GHz (Option 018). Common amplitude variation at the reference and test channel inputs within these ranges result in <1.5 dB change in measured magnitude ratio and <4 degrees change in measured phase angle.</p> <p>Test Channel: -10 to -75 dBm from 0.11 to 12.4 GHz; -10 to -68 dBm from 12.4 to 18 GHz.</p> <p>Maximum RF input to either Channel: 50 mW (+17 dBm) damage level.</p> <p>Maximum dc on RF line: ±3 V (damage level).</p> <p>IF Gain Control: Adjusts gain of test channel relative to reference channel. Range: 69 dB total in 10 dB and 1 dB steps; vernier provides continuous adjustment over at least 2 dB. Accuracy: ±0.1 dB per 10 dB step, ±0.05 dB per 1 dB step. Maximum cumulative, ±0.2 dB.</p> <p>Frequency Response: Reference and test chan- nels typically track within: ±0.3 dB for any octave 0.11 to 4.0 GHz. ±0.5 dB for any octave 4.0 to 12.4 GHz. ±1.5 dB 12.4 to 18 GHz (Option 018) Magnitude discontinuity resulting from har- monic number changes: Typically <0.25 dB.</p> <p>Noise: Less than -75 dBm equivalent input noise 0.11 to 12.4 GHz; -68 dBm 12.4 to 18 GHz (Option 018).</p>	<p>GENERAL</p> <p>Outputs: Two rear panel auxiliary outputs pro- vide 278 kHz IF signals; outputs may be used for signal analysis, special applications, and convenient test points; modulation bandwidth nominally 10 kHz.</p> <p>Reference Channel IF: 2 volts peak-to-peak.</p> <p>Test Channel IF: 10 volts peak-to-peak or less, depending on signal level and test channel gain setting.</p> <p>Connectors (8411A): APC-7®²</p> <p>Cable Supplied: One Source Control Cable is supplied, HP Part No. 8120-2208, for use with the 8620C Sweep Oscillator. For servicing the plug-ins, a Service Cable is included, HP Part No. 08410-60067.</p> <p>Power: 100, 120, 220, or 240V ac +5% -10%, 50 to 60 Hz, 70 watts (includes 8411A).</p> <p>Weight: 8410B: Net, 14.9 kg (33 lb.). Shipping 18.5 kg (41 lb.). 8411A: Net, 3.2 kg (7 lb.). Shipping 4.5 kg (10 lb.).</p> <p>Dimension: 8410B: 191 mm high, 425 mm wide, 467 mm deep (7-1/2 in. × 16-3/4 in. × 18-3/8 in.) 8411A: 67 mm high, 228 mm wide, 143 mm deep (2-5/8 in. × 9 in. × 5-5/8 in.), exclusive of connectors. 5 ft. cable permanently attached for connection to 8410B.</p>
<p>¹ Specifications for the 8411A 018 Option below 12.4 GHz are the same as the standard instrument. Specifications above 12.4 GHz apply to the Option 018 only.</p> <p>² APC-7® is a registered trademark of the Bunker Ramo Corporation.</p>	

1-12. WARRANTY

1-13. Terms of the warranty on the 8410B and 8411A, and all supplied accessories are described in the warranty on the inside of the front cover. For any additional information concerning warranty, contact the nearest Hewlett-Packard field office listed at the rear of this manual.

1-14. SAFETY CONSIDERATIONS

1-15. General

1-16. The HP Models 8410B and 8411A are Safety Class I instruments and have been manufactured and tested to international safety standards.

1-17. Operating Precautions

CAUTION

BEFORE APPLYING POWER make sure the instrument's ac input is set for the available ac line voltage, that the correct fuse is installed, and that all normal safety precautions have been taken.

Maximum RF Power. Do not apply more than 50 milliwatts of RF power to the Model 8411A inputs. Power in excess of 50 milliwatts may damage the frequency converter units.

Maximum DC on RF line. Steady state (dc) voltage on the inner conductor of the transmission line carrying signals to the Model 8411A must not exceed ± 3 volts. Greater dc voltage prevents normal operation of the Model 8411A, and may damage the converter units.

Static Discharge. Static electrical charge on cables being connected to the Model 8411A inputs can damage the converter units. Before a cable is connected to the Model 8411A, it should be discharged by momentarily touching its inner conductor to the outer parts of the Model 8411A input connector. Another way to prevent static discharge is to first connect the input end of the cable to a discharge path such as that provided by the output termination of a signal source. There is no risk of static discharge when connections are made directly to Model 8740A, 8741A, 8742A, 8743A, 8745A, or 8746B Test Units because internal terminations provide discharge paths.

1-18. Safety Symbols



Instruction manual symbol: the apparatus will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the apparatus against damage.



Indicates dangerous voltages.



Earth terminal (sometimes used in manual to indicate circuit connected to grounded chassis).

WARNING

The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a **WARNING** sign until the indicated conditions are fully understood and met.

CAUTION

The **CAUTION** sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the equipment. Do not proceed beyond a **CAUTION** sign until the indicated conditions are fully understood and met.

1-19. Service

The information, cautions, and warnings in this manual must be followed to ensure safe operation and to keep the instrument safe. **SERVICE AND ADJUSTMENTS SHOULD BE PERFORMED ONLY BY QUALIFIED SERVICE PERSONNEL.**

Adjustment or repair of the opened instrument with the ac power connected should be avoided as much as possible and, when unavoidable, should be performed only by a skilled person who knows the hazard involved.

Capacitors inside the instrument may still be charged even though the instrument has been disconnected from its source of supply.

Make sure only fuses of the required current rating and type (normal blow, time delay, etc.) are used for replacement. Fuse requirements are indicated on the instrument's rear panel. Do not use repaired fuses or short-circuit fuse holders.

Whenever it is likely that the protection has been impaired, make the instrument inoperative and secure it against any unintended operation.

WARNING

If this instrument is to be energized through an auto-transformer (for voltage reduction), make sure the common terminal is connected to the earthed pole of the power source.

BEFORE SWITCHING ON THE INSTRUMENT, the protective earth terminal of the instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with protective earth contact. The protection action must not be negated by using an extension cord (power cable) without a protective grounding conductor. Grounding one conductor of a two-conductor outlet is not sufficient protection.

Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal is likely to make this instrument dangerous. Intentional interruption of the earth ground is prohibited. Whenever it is likely that the protection has been impaired, the instrument must be secured against any unintended operation.

Servicing this instrument often requires that you work with the instrument's protective covers removed and with ac power connected. Be very careful; the energy at many points in the instrument may, if contacted, cause personal injury.

1-20. ACCESSORIES FURNISHED

1-21. A detachable power cable, source control cable, and servicing cable are supplied with the Model 8410B. No accessories are furnished with the Model 8411A.

1-22. Source Control Cable for 8620C

1-23. A source control cable (HP Part No. 8120-2208) provides the control logic interconnection to the 8620C Sweep Oscillator necessary for automatic multi-octave operation.

1-24. Servicing Cable

1-25. The servicing cable (HP Part No. 8410-60067) permits all necessary interconnections to be made between the Model 8410B and a plug-in display unit with the unit outside the plug-in compartment.

1-26. ACCESSORIES AVAILABLE: (See also HP Coaxial and Waveguide Catalog)

1-27. Accessory Kit

1-28. A kit containing an assortment of the line sections, adapters, shorts, and attenuators, together with special APC-7 connector tools and replacement inner conductor contacts, is available from Hewlett-Packard as Accessory No. 11587A. (See Figure 1-2.) The kit consists of the items listed in Table 1-2 and is housed in a sturdy plastic container that has storage space for additional accessories.

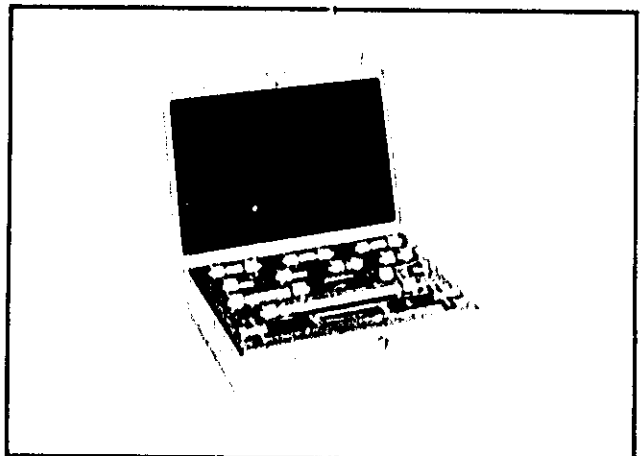


Figure 1-2. Accessory Kit No. 11587A

Table 1-2. Components of Accessory Kit No. 11587A

Quantity	Description	HP Part Number
1	10-cm Air Line	11566A
1	20-cm Air Line	11567A
2	APC-7 to N Female Adapter	11524A
2	APC-7 to N Male Adapter	11525A
2	10-dB Fixed Coaxial Attenuators	8492A Option 010
1	30-dB Fixed Coaxial Attenuator	8492A Option 030
1	N Female Coaxial Short	11511A
1	N Male Coaxial Short	11512A
1	Open End Wrench 9/16" x 1/2"	8710-0877
1	Contact Extractor Tool*	5060-0236
1	Spanner Wrench*	5060-0237
5	Replacement APC-7 Inner Conductor Contacts	1250-0907
*APC-7 Connector Tools		

1-29. Source Control Cable For 8620A

1-30. A source control interconnect cable (HP Part No. 08410-60115) is necessary for automatic multi-octave operation of the 8620A with the 8410B. This cable may be ordered through your nearest Hewlett-Packard office.

1-31. Rack Mounting Kit

1-32. A rack mounting kit is available to install the instrument in a 19-inch rack. Rack mounting kits may be obtained through your nearest Hewlett-Packard office by ordering HP Part Number 5060-8741.

1-33. APC-7 Connector Tool Kit

1-34. The APC-7 Connector Tool Kit No. 11591A contains all of the special tools needed to service APC-7 connectors. The kit is housed in a durable plastic container and consists of the items listed in Table 1-3.

Table 1-3. Components of APC-7 Connector Tool Kit No. 11591A

Quantity	Description	HP Part Number
1	Contact Extractor	5060-0236
1	Spanner Wrench	5060-0237
2	1/2" x 9/16" Open End Wrench	8710-0877
2	Pin Vise	8710-0932
5	Inner Conductor Contact	1250-0907

1-35. Adapters

1-36. Table 1-4 lists adapters available to accommodate some of the most common connector types.

Table 1-4. Adapters

Adapter	Manufacturer	Model Number
APC-7 to N female	1	11524A
APC-7 to N male	1	11525A
APC-7 to OSM male	1	11533A
APC-7 to OSM female	1	11534A
APC-7 to BNC	2	131-1027
APC-7 to TNC	2	131-1026
APC-7 to NPM	2	131-91035
APC-7 to GR874	3	0874-9791
GR874 to GR900	3	0874-9709
1. Hewlett-Packard 2. Amphenol RF Division, Danbury, Connecticut 3. Gen Rad, Concord, Massachusetts		

1-37. Fixed Coaxial Attenuators

1-38. Fixed coaxial attenuators are useful for reducing mismatch ambiguities, reducing power to safe levels for power-sensitive devices, and improving signal-to-noise ratio for wide range attenuation measurements.

1-39. **8492A Series.** These attenuators have APC-7 connectors, and can be used from dc to 18 GHz. Their nominal attenuation values and SWR are listed in Table 1-5.

1-40. **8491B Series.** These attenuators have one male and one female type N connector, and can be used from dc to 18 GHz. Their nominal attenuation values are listed in Table 1-5.

Table 1-5. HP 8491B and 8492A Attenuators

Option Number	Attenuation	Maximum SWR	
		8491B	8492A
003	3 dB	<1.2,	<1.15,
006	6 dB	dc to 8 GHz;	dc to 8 GHz;
010	10 dB	<1.3,	<1.25,
020	20 dB	8 to 12.4 GHz;	8 to 12.4 GHz
030	30 dB	<1.5,	<1.35,
040	40 dB	12.4 to 18 GHz	12.4 to 18 GHz
050	50 dB		
060	60 dB		

1-41. Line Lengths

1-42. Rigid, air dielectric, coaxial line sections of 10 and 20 centimeters are available for making transmission measurements on devices physically longer than the 15-cm extension of the Model 8740A. These line sections, designated 11566A for the 10-cm length and 11567A for the 20-cm length, have APC-7 connectors.

A-43. Loads.

1-44. **Fixed Load.** The Model 909A is a 50-ohm coaxial termination with APC-7 connector for use with the Models 8741A, 8742A, 8743A, 8745A, and 8746B Test Units.

1-45. **Sliding Load.** The Model 905A or 907A is a movable load in a 50-ohm coaxial line that has an APC-7 connector. The sliding load is useful for improving the accuracy of reflection measurements above 1.8 GHz.

1-46. Shorts

1-47. The 11511A Type N Shorting Jack, the 11512A Type N Shorting Plug, and 11565A APC-7 short can be used with the reflection test units for calibrating reflectometer measurements.

1-48. DISPLAY UNITS

1-49. All plug-in display units designated for use with the Model 8410B are completely interchangeable. These units are powered by the Model 8410B with all necessary interconnections made automatically when the unit is properly installed. Markers and display blanking inputs are provided by the source.

1-50. **Model 8412A Phase-Magnitude Display.** Intended for fixed- and swept-frequency transmission or reflection measurement, the Model 8412A provides phase and magnitude information on an oscilloscope. Phase can be displayed at 1, 10, 45, and 90 DEG/Division. A phase offset switch offsets the display in 20 degree steps from -180 degrees to +180 degrees. Magnitude can be displayed at 0.25, 1, 2.5, and 10 dB/Division. Analog voltages for both phase and magnitude are available at rear output jacks. The analog voltages can be used to obtain calibrated plots of phase angle and amplitude ratio against frequency on graphic recorders.

1-51. **Model 8413A Phase-Gain Indicator.** Intended for fixed- and swept-frequency transmission or reflection measurements, the Model 8413A provides phase and amplitude information in two forms: meter indication and analog voltage. The meter indicates phase or amplitude according to the function selected, while the analog voltages continuously monitor both phase and amplitude. The meter has center-zero scales with phase ranges of $\pm 6^\circ$, $\pm 18^\circ$, $\pm 60^\circ$, and $\pm 180^\circ$ and amplitude ranges of ± 3 , ± 10 , and ± 30 dB. Calibrated phase offsets in 10 degree steps allow any phase angle to be read on the best-resolution range of $\pm 6^\circ$. The analog voltages can be used to obtain

calibrated plots of phase angle and amplitude ratio against frequency on conventional two-trace oscilloscopes or graphic recorders.

1-52. Model 8414A Polar Display. The Model 8414A is used for transmission (gain, attenuation) and for reflection measurements (impedance, admittance, reflection coefficient, return loss). It displays linear magnitude ratio and phase in polar form on a built-in cathode ray tube, and provides simultaneous voltages proportional to the amplitude and phase components of the display. Supplied Smith Chart graticule overlays permit impedance and admittance to be read directly from the display.

1-53. A ground modification has been made on the Model 8414A plug-in that affects interchangeability between the units. Table 1-6 shows the units that will work together. As shown in the table, modification kit no. HP 08414-6022 may be added to the 8414A with serial numbers 749-00215 and below to make it compatible with any 8410B.

Table 1-6. Models 8410B and 8414A Compatibility by Serial Number

8414A	Mates with 8410B
802-00216 and above	All
749-00215 and below with HP Part No. 08414-6022 Modification Kit installed.	All

1-54. AUXILIARY EQUIPMENT.

1-55. Transmission and Reflection Test Units

1-56. For added convenience in making transmission and reflection measurements, auxiliary signal separating units are available. These compact, portable modules contain the passive devices required to divide a test signal into two signals for magnitude and phase comparison.

1-57. Model 8740A Transmission Test Unit. The transmission test unit divides a test signal into the two channels required for transmission

measurements. It includes a calibrated line stretcher and a calibrated extension line with separate digital counters for measuring the mechanical and electrical lengths of the network being tested. APC-7 output connectors on the measuring channels are spaced to match the inputs of the Model 8411A Harmonic Frequency Converter. The test unit covers the frequency range of the network analyzer up to 12.4 GHz.

1-58. Models 8741A and 8742A Reflection Test Units. Two reflection test units cover the frequency range of the network analyzer up to 12.4 GHz. Model 8741A spans 0.11 to 2 GHz, and the Model 8742A covers 2 to 12.4 GHz. They contain broadband directional couplers and a calibrated line stretcher. The line stretcher is for equalizing the electrical distance from the test signal input to the incident and reflected signal outputs. It can also be used to move the plane of measurement as much as 14 cm for the Model 8741A and 16.5 cm for the Model 8742A. A digital counter registers line length with 0.1 mm resolution. APC-7 connectors are used on the test unit output ports, compatible type N on the input port. An HP Model 11565A APC-7 short is a furnished accessory with each 8741A and 8742A.

1-59. Model 8743A Reflection-Transmission Test Unit. This reflection-transmission test unit divides a signal into two channels for amplitude and phase comparison. Pushbuttons select either transmission or reflection measurement. It includes a line stretcher with a digital counter. This unit covers the frequency range from 2.0 to 12.4 GHz (2.0 to 18 GHz for Option 018).

1-60. Model 8745A S-Parameter Test Set. The most convenient way to measure S-parameters in the 0.1 to 2 GHz frequency range is with the HP Model 8745A S-Parameter Test Set. This test set combines in one unit all the coaxial switches, directional couplers, bias networks, and signal-path length compensators (line stretchers) that are required for S-parameter measurements. After a simple calibration, all four S-parameters can be measured without disconnecting and reconnecting the device under test. Measurement circuits for each S-parameter are automatically connected by pressing the appropriate front-panel pushbuttons or by remote contact closures.

1-61. Model 8746B S-Parameter Test Set. The HP Model 8746B contains the necessary microwave circuits for measuring all four S-parameters of an active or passive two-port device from 0.5 to 12.4 GHz. The Model 8746B is designed primarily to be used with the Hewlett-Packard Model 11608A Transistor Fixture. However, measurements on other microwave devices may also be made by inserting the necessary coaxial line-lengths in the rear panel reference line. Measuring circuits for each S-parameter are automatically set with front-panel pushbuttons or with remote-contact closures. Attenuation of the incident RF signals, in 10-dB steps, can also be set with front-panel pushbuttons or with remote contact-closures.

1-62. Accessories are available which suit various kinds of two-port devices. The 11604A Universal Extension, with its pivoting air-line extensions and revolving connectors, allows many kinds of non-axial connector devices to be connected to the test set. The 11600B and 11602B Transistor Fixtures adapt the 8745A test set ports for measurements of transistors. The 11600B is for TO-18/TO-72 base patterns, and the 11602B is for TO-5/TO-12 base patterns. The fixtures mount on the front of the test set. Measurements can be made on both bipolar and FET transistors in all of their common operating configurations, using the snap-on dials furnished with the fixture to accommodate the various lead orientations. The 8717B Transistor Bias Supply can be connected to the test set to apply and sense dc bias. The fixtures and their dials can also be used to make measurements on components such as capacitors, inductors, and diodes.

1-63. Models X8747A/P8747A Transmission and Reflection Test Unit. This waveguide transmission and reflection test unit divides a test signal into two channels for amplitude and phase comparison. This unit permits testing waveguide components with the coaxial network analyzer. It includes a calibrated line stretcher. The X8747A covers from 8.2 to 12.4 GHz, while the P8747A covers from 12.4 to 18.0 GHz. An Option 018 8411A is necessary to operate in P-band.

1-64. Model K8747A/P8747A Transmission and Reflection Test Unit. This waveguide transmission and reflection test unit divides a test

signal into two channels for amplitude and phase comparison. This unit permits testing waveguide components with the coaxial network analyzer. It includes a calibrated line stretcher. The K8747A covers the 18 to 26.5 GHz band in frequency segments up to 2 GHz wide, while the P8747A covers the 26.5 to 40 GHz band in 2 GHz segments.

1-65. Model 8418A Auxiliary Display Holder. The 8418A Auxiliary Display Holder provides a means of utilizing two different types of phase-magnitude display units simultaneously (i.e. polar and rectangular displays). The 8418A contains a power supply and phase and amplitude controls for referencing an auxiliary display unit (8412A, 8413A, or 8414A) to a display indicator in the 8410B.

1-66. Signal Sources. The HP Model 8620C Sweep Oscillator, with its series of RF Plug-ins, is the recommended swept source for the 8410B-based network analyzer system. The 8620C is compatible with the 8410B AUTO sweep range capability when the Source Interconnect Cable is connected. The Source Interconnect Cable provides a digital interface between the sweeper and network analyzer to control the sweep at the receiver phase lock acquisition points and sweeper band switch points. The 8620C is also HP-IB compatible, and may be used in automatic system applications.

1-67. A wide choice of single-band and multi-band RF Plug-ins is available for use with the 8620C. For an 8410B-based network analyzer system using the 8745A S-Parameter Test Set, the 86222B provides single sweep coverage of the 110 MHz to 2.0 GHz frequency range of the system. The 86290B features a 10 mW output power over the full 2.0 to 18.0 GHz band of the 8743A Reflection-Transmission Test Unit.

1-68. SIGNAL SOURCE REQUIREMENTS

1-69. Output Power

1-70. Range. About -6 to +10 dBm is adequate for both wide range attenuation measurements and reflection measurements.

1-71. Stability. Output power must be constant enough across the frequency range being swept to hold an OPERATE indication on the REF CHANNEL LEVEL meter. The REF CHANNEL LEVEL meter will stay in the OPERATE range for the following input power levels: -18 to -35 dBm (11 to 12.4 GHz) and -18 to -25 dBm (12.4 to 18 GHz; Option 018).

1-72. Signal Purity

1-73. To prevent the analyzer from mistuning, spurious signal output should be greater than approximately 25 dB below the desired frequency.

1-74. Frequency Stability

1-75. Of chief importance to the tuning and tracking of the network analyzer are the influences on frequency stability and rate of change of frequency. Among these are residual FM and susceptibility to radiated interference, power line conducted interference, and power line transients.

1-76. Sweep Characteristics.

1-77. Swept signal sources should have uniform tuning rate and sweeping time that is variable between about 15 and 150 MHz per millisecond. RF blanking should not be used in order to keep the network analyzer in phase lock during retrace. An additional important requirement is a pause between sweeps. There should be at least a 3 millisecond pause at the start frequency prior to each sweep in order to allow the network analyzer to lock initially.

1-78. The rate of change of frequency must not exceed the tracking ability of the Network Analyzer. With proper sweep reference voltage (see paragraph 1-79), the network analyzer should remain phase-locked with sweep speeds of about 35 milliseconds/octave from 0.11 to 18 GHz.

1-79. Frequency-Related Voltage Output

1-80. For fastest swept-frequency measurements, the signal source should furnish a voltage proportional to output frequency. This voltage enables the network analyzer to track at its highest rate. A 1V/GHz Frequency Reference voltage is supplied by the RF plug-in of the 8620A/C Sweep

Oscillator. The requirements for this voltage are that it be positive in polarity and in direct proportion (1V/GHz) to the signal source output frequency.

1-81. ADAPTING HEWLETT-PACKARD SWEEP OSCILLATORS FOR USE WITH THE NETWORK ANALYZER.

1-82. 8620A Sweep Oscillator with RF Plug-In.

1-83. While all 8620 Sweep Oscillators and RF Plug-in units are fully compatible with the 8410B for octave sweeps, early versions do not incorporate the complete multi-octave sweep capability. Table 1-7 gives a serial number breakdown of the 8620A/C Sweep Oscillator and RF plug-ins that are compatible for 8410B AUTO mode multi-octave operation. Instruments with serial prefixes, or numbers, lower than those listed in Table 1-7 require a service kit and modification. For Service Note and Modification Kit part number, contact the local Hewlett-Packard Field Office.

Table 1-7. AUTO Tune/Source Compatibility

HP Model Number	Instrument Serial Prefix or Number
8620C (Mainframe)	All
8620A (Mainframe)	1427A01876 and above.
86290A/B	All
Other RF plug-ins	1506A and above.

1-84. An 8620A Sweep Oscillator modified for compatibility with the 86290A RF plug-in needs an additional modification for compatibility with the 8410B in AUTO mode operation. This modification provides a path for the Stop Sweep signal from the 8410B, and consists of a jumper between 8620A-J7 (A17) and 8620A-J2 (27). If the jumper is installed, then grounding 8620A-J2 (27) will stop the 8620A Sweep Oscillator from sweeping.

1-85. RECOMMENDED TEST EQUIPMENT

1-86. Equipment required for performance testing, adjustment, and troubleshooting of the Hewlett-Packard Model 8410B/8411A Network Analyzer is listed in Table 1-8. Other equipment may be substituted if it meets or exceeds the critical specifications listed in the table.

Table 1-8. Recommended Test Equipment for Performance (Sheet 1 of 3)

Ref. No.	Instrument	Critical Specifications	Use (Note 1)	Recommended HP Model
1	Sweep Oscillator RF Plug-In	Frequency Range: 0.11 to 18 GHz	P, A, T	8620C/86222A (0.11 to 2.0 GHz) 8620C/86290A/B (2 to 18 GHz)
2	Power Meter & Thermistor Mount	Frequency Range: 0.11 to 18 GHz Power Range: +5 to -15 dBm Instrument Accuracy: $\pm 3\%$ Input Impedance: 50 ohms Connector: APC-7	P, A, T	432A with 8478B Option 011 Thermistor Mount
3	AC Voltmeter	Accuracy: $\pm 1\%$ Range: 500 μ V to 10 VRMS Meter Scale: dB Input Impedance: 10 megohms Frequency: 278 kHz	P	400E.L 400F.L
4	Transmission or Reflection Test Unit	No substitute may be used	A, T	8740A 8741A 8742A 8743A 8745A
5	Dual Trace Oscilloscope with 10:1 probes	Vertical Amplifier: Dual Trace Bandwidth: 100 MHz minimum Horizontal Sweep Rate: 200 ns/cm expanded to 20 ns/cm Vertical Sensitivity: 5 mV/cm	A, T	1740A
6	Spectrum Analyzer	Frequency Range: 0.11 to 18 GHz Sensitivity: 1 mV/cm	T	8565A
7	Reflectometer System (Swept Amplitude Analyzer & Reflectometer Bridge)	No substitute may be used	P	8755B/182T 11666A 8750A
8	Frequency Counter	Frequency Range: 10 Hz to 18 GHz Accuracy: $\pm 0.2\%$ Display: 4 digits minimum	A, T	5340A
9	Dual DC Power Supply	Outputs: 0 to 40 Vdc 0-300 mVdc	A, T	6205B
10	Display Plug-In for 8410B	No substitute may be used	P, A, T	8412A

Table 1-8. Recommended Test Equipment for Performance (Sheet 2 of 3)

Ref. No.	Instrument	Critical Specifications	Use (Note 1)	Recommended HP Model
11	Digital Multimeter	Accuracy: 0.05% Input Impedance: 10 megohms minimum Range: to 150V	A, T	3490A
12	DC Electronic Voltmeter	Accuracy: $\pm 3\%$ of full scale Input Impedance: 10 megohms minimum Range: to ± 100 volts	A, T	427A
13	Low Frequency Signal Source (278 kHz)	Frequency Range: 200 to 400 kHz	A, T	3312A
14	Power Splitter	Frequency Range: 0.11 to 18 GHz	P, A, T	11667A
15	20 dB Fixed Attenuator	Attenuation: 20 dB nominal	A, T	5491A/B, Option 20
16	10 dB Fixed Attenuator (2 required)	Attenuation: 10 dB nominal Frequency Range: 0.11 to 18 GHz SWR: 1.35 maximum Connectors: APC-7	P, A, T	8492A, Option 10 (Note 2)
17	Fixed Air Line	50-ohm, 20 cm air line with APC-7 connectors	A, T	11567A (Note 2)
18	50-ohm Load	50-ohm termination with APC-7 connectors	P, A, T	909A
19	Adapters	50-ohm adapter (APC-7 to male type N)	P, A, T	11525A (Note 2)
20	Adapter (2 required)	50-ohm adapter (APC-7 to female type N)	P, A, T	11524A (Note 2)
21	Short	50-ohm short (APC-7 connector)	P, A, T	11565A (Note 3)
22	50-ohm Feedthru	50-ohm termination Connectors: male BNC and female subminiature	A	11048B (with adapter 1250-0831)
23	RF Cable (3 required)	9-inch cable with Type N connectors	P, A, T	8120-2289
24	RF Cable	24-inch cable with Type-N connectors	P, A, T	8120-2292

Table 1-8. Recommended Test Equipment for Performance (Sheet 3 of 3)

Ref. No.	Instrument	Critical Specifications	Use (Note 1)	Recommended HP Model
25	Source Control Cable	No substitute may be used	P, A, T	8620C 8120-2208 8620A 08410-60115
26	1 dB Step Attenuator	DC to 18 GHz Type N Connectors	P, A	8494B
27	10 dB Step Attenuator	DC to 18 GHz Type N Connector	P, A	8495B
28	Adapter	Type N Male-Male	P, A	1250-0778
29	Adapter	Type N Female-Female	A	1250-0777
30	Adapter (2)	Type N Male to BNC Female	A	1250-0780
31	Adapter	Seulectro SMC Male-Male	A	1250-0827
32	Adapter Cable (2)	36" Cable SMC Female to BNC Male	A	11592-60001
33	Test Covers for 8411A	No substitute may be used	A	08411-60035
34	APC-7 Contact Extractor Tool	No substitute may be used.	R	5060-0236 (Notes 2 and 4)
35	APC-7 Spanner Wrench	No substitute may be used.	R	5060-0237 (Notes 2 and 4)
36	Open End Wrench 9/16" X 1/2"	Thickness: 3/32" maximum	R	8710-0877 (notes 2 and 4)
37	Burndy Extractor Tool	Burndy Part No. Rx20-25 V2	R	None

1. P = Performance; A = Adjustment; T = Troubleshooting; R = Repair.
2. Part of IIP 11587A Accessory Kit.
3. Furnished with IIP 8741A and 8742A.
4. Part of IIP 11591A APC-7 Connector Tool Kit.

INSTALLATION

SECTION II INSTALLATION

2-1. INITIAL MECHANICAL INSPECTION

2-2. If external damage to the shipping carton is evident, ask the carrier's agent to be present when the instrument is unpacked. Check the instrument for external damage such as broken controls or connectors, and dents or scratches on the panel surface. If damage is evident, refer to Paragraph 2-5 for recommended claim procedure and repackaging information. If the shipping carton is not damaged, check the cushioning material and note any signs of severe stress as an indication of rough handling in transit. If the instrument appears undamaged, check for all supplied accessories, then perform the electrical check (paragraph 2-3).

2-3. INITIAL ELECTRICAL INSPECTION

2-4. Check the electrical performance of the network analyzer as soon as possible after receipt by performing the Performance Test (Paragraphs 4-12 through 4-18). The Performance Test procedure compares the electrical performance to the specifications of Table 1-1. This test is also suitable for incoming quality control inspection. If the network analyzer does not perform within the specifications when received, refer to Paragraph 2-5 for recommended claim procedure and Paragraph 2-7 for repackaging information.

2-5. CLAIMS

2-6. If physical damage is evident, or if the instrument does not meet specifications when received, notify the carrier and the nearest Hewlett-Packard Sales and Service Office. (See list at rear of manual.) The Sales and Service Office will arrange for repair or replacement without waiting for settlement of a claim with the carrier.

2-7. REPACKAGING FOR SHIPMENT

2-8. Using Original Packaging

2-9. The same containers and materials used in factory packaging can be obtained through the Hewlett-Packard offices listed at the rear of this manual. If the Model 8410B or Model 8411A is being returned to Hewlett-Packard for servicing, at-

tach a tag indicating the type of service required, return address, model number, and full serial number. Also mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-10. Using Other Packaging

2-11. The following general instructions should be used when repackaging with commercially available materials:

a. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard service office or center, attach a tag indicating the type of service required, the return address, model number, and full serial number.)

b. Use a strong shipping container. A double-wall carton made of 350 pound test material is adequate.

c. Use enough shock-absorbing material (3-to 4-inch layer) around all sides of the instrument to provide firm cushion and prevent movement inside the container. Protect the control panel with cardboard.

d. Seal the shipping container securely, and mark it FRAGILE to assure careful handling.

e. In any correspondence refer to the instrument by model number and full serial number.

2-12. PREPARATION FOR USE

2-13. Power Requirements

2-14. The 8410B requires a power source of 100, 120, 220, or 240 volts ac $\pm 5\% - 10\%$, 50 to 60 Hz, single phase. Power output should be capable of 85 watts when the 8413A Phase-Gain Indicator plug-in is installed, and 105 watts when a CRT display plug-in is installed (8412A rectangular display or 8414A Polar display).

2-15. Line Voltage Selection

2-16. Figure 2-1 provides instructions for line voltage and fuse selection. A set of fuses is supplied with the instrument.

CAUTION

To prevent damage to the instrument, make the line voltage selection before connecting line-power.

2-17. Power Cable

2-18. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that instrument panels and cabinets be grounded. Accordingly, the Model 8410B is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds panel and cabinet. The offset pin of the three-prong connector is the grounding pin. (See Table 2-1.)

2-19. When operating the Model 8410B from a two-contact outlet, the protecting feature may be preserved by using a three-prong to two-prong adapter (HP Stock No. 1251-0048) and connecting the green wire of the adapter to ground.

2-20. Bench Operation

2-21. The Model 8410B cabinet has plastic feet and a foldaway tilt stand for convenience in bench operation. The stand inclines the instrument enough to make the panel features easy to see. The plastic feet provide clearance for air circulation and make the Model 8410B self-aligning when stacked on other Hewlett-Packard full rack-width modular instruments.

2-22. Rack Mounting

2-23. Preparation for rack-mounting is illustrated in Figure 2-2. All necessary hardware is contained in the available rack-mounting kit (HP Stock No. 5060-8741). This rack-mounting kit is supplied with Option 908 instruments.

2-24. Connecting the Model 8411A

2-25. To connect the Model 8411A to the Model 8410B:

- a. Set the Model 8410B LINE to off (push-button not lighted).
- b. Hold the Model 8411A cable connector so that the head of the screw in the connector body enters the slot in the top of the Model 8410B INPUT connector and push the connectors firmly together.
- c. Tighten the coupling ring securely.

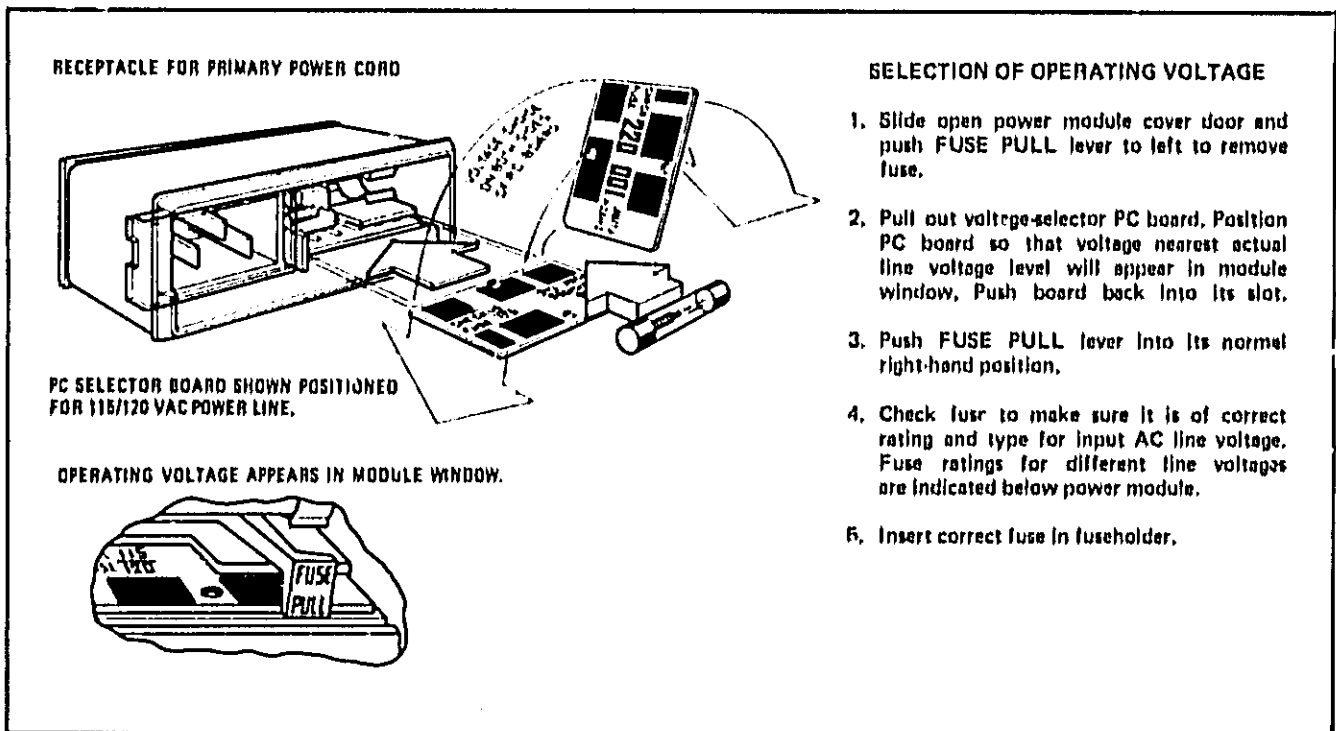
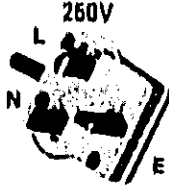









Table 2-1. AC Power Cables Available

Plug Type **	Cable HP Part Number	OD	Plug Description	Cable Length cm (inches)	Cable Color	For Use In Country
 <p>250V L N E</p>	8120-1351 8120-1703	10 6	Straight *BS1363A 90°	229 (90) 229 (90)	Mint Gray Mint Gray	United Kingdom, Cyprus, Nigeria, Rhodesia, Singapore, So. Africa, India
 <p>250V E L N</p>	8120-1369 8120-0696	0 4	Straight *NZSS198/ ASC112 90°	201 (79) 221 (87)	Gray Gray	Australia, New Zealand
 <p>250V E L N</p>	8120-1689 8120-1692	7 2	Straight *CEE7-Y11 90°	201 (79) 201 (79)	Mint Gray Mint Gray	East and West Europe, Saudi Arabia, Egypt (unpolarized in many nations)
 <p>125V E L N</p>	8120-1348	5	Straight *NEMA5-15P 90°	203 (80)	Black	United States, Canada, Japan (100 or 200V), Mexico, Philippines, Taiwan
	8120-1398	5		203 (80)	Black	
	8120-1754	7	Straight *NEMA5-15P	91 (36)	Black	
 <p>125V E L N</p>	8120-1378	1	Straight *NEMA5-15P 90°	203 (80)	Jade Gray	
	8120-1521	6		203 (80)	Jade Gray	
	8120-1676	2	Straight *NEMA5-15P	91 (36)	Jade Gray	
 <p>250V L N E</p>	8120-2104	3	Straight *SEV1011 1959-24507 Type 12	201 (79)	Gray	Switzerland
 <p>250V E</p>	8120-0698	6	Straight *NEMA6-15P			
 <p>250V E</p>	8120-1860	6	Straight *CEE22-VI			

* Part number shown for plug is industry identifier for plug only. Number shown for cable is HP Part Number for complete cable including plug.
 ** E = Earth Ground, L = Line; N = Neutral

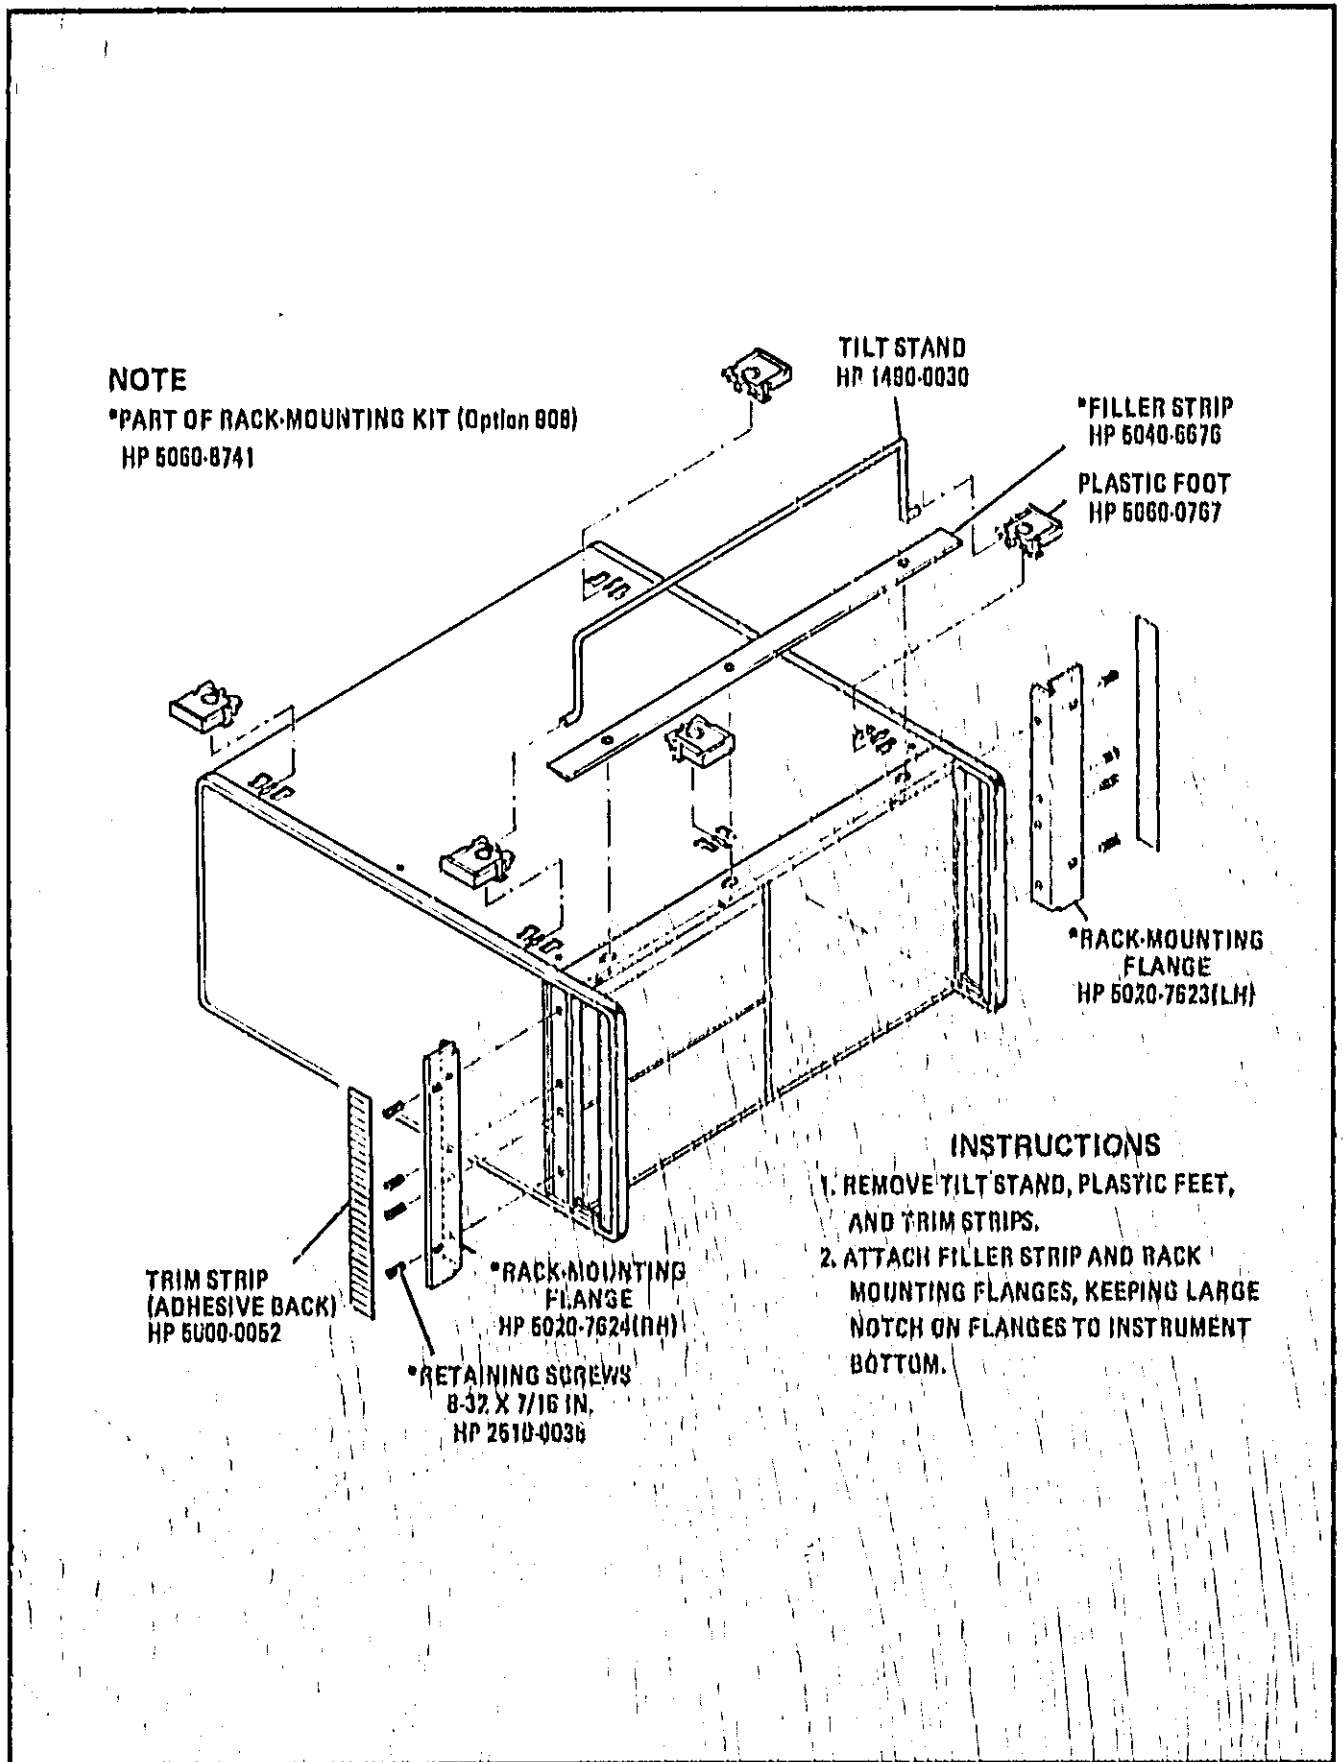


Figure 2-2. Rack-Mounting Kit Installation

2-26. INSTALLING A DISPLAY UNIT.

2-27. To install a plug-in display unit:

a. Set Model 8410B LINE switch to off (pushbutton not lighted).

b. Press down on the extractor-retainer lever latch and swing the lever outward to its mechanical stop.

c. Rest the rear feet of the display unit on the bottom of the plug-in compartment, then slide the plug-in toward the back of the compartment until the extractor-retainer lever starts to move.

d. Pivot the extractor-retainer lever back to its closed and latched position. All necessary electrical connections between the display unit and Model 8410B are made automatically.

2-28. CARE OF INPUT CONNECTORS

2-29. RF signals are coupled into the Model 8411A through 50-ohm, 7-mm APC-7 coaxial connectors. These connectors should be handled with particular care for two main reasons: (1) continuity through APC-7 connectors is obtained by end-to-end contact of the inner and outer conductors; consequently, the electrical performance of the connector is largely dependent upon the condition of these exposed surfaces, and (2) the critical contacting surfaces are directly attached to the vital frequency converter units inside the Model 8411A and are not separately replaceable.

2-30. Important recommendations for the handling and care of the input connectors are given in Figure 2-3. The part of an input connector that is most likely to be damaged is the inner conductor contact. Since it protrudes slightly beyond the plane of electrical contact, any wiping action of one connector across the other can damage the contact enough to cause a discontinuity. The risk of this kind of damage can be minimized by always having the coupling sleeves on the Model 8411A connectors fully extended.

2-31. Contact Replacement

2-32. Replacement inner conductor contacts are available from Hewlett-Packard (Stock Number 1250-0907), and from Amphenol RF Division, Danbury, Connecticut (Part Number 131-129).

2-33. The following important precautions apply to the replacement of inner conductor contacts:

a. Do not apply more than slight inward pressure to the inner conductor.

b. Do not apply ANY twisting force to the inner conductor.

c. Do not attempt to repair contacts.

d. Do not re-use contacts.

CAUTION

Inward pressure or twisting force applied to the inner conductor can render the Model 8411A inoperative.

2-34. Because of the above considerations, contact removal should not be attempted with ordinary hand tools. Only the Hewlett-Packard self-positioning, hypodermic-action contact extractor tool (Stock No. 5060-0236) should be used. This tool exerts no appreciable inward pressure and no twisting force on the inner conductor. Instructions for removing contacts are supplied with the tool.

2-35. No tool is required for installing a replacement contact. Insert the contact gently by hand, applying only enough inward pressure to snap it into place. Then check for proper installation by inspecting the contact for even spacing of its four segments. Also, test for normal spring action by applying light inward pressure against the end of the contact with a pencil eraser. As the pressure is released the spring action of the contact should cause it to move outward. If not, the contact is defective and should be replaced.

2-36. Coupling Mechanisms

2-37. The coupling mechanism includes the coupling nut and the two-piece coupling sleeve assembly shown in Figure 2-3. Both of these parts can be replaced without access to the inside of the Model 8411A, and without disturbing either of the conductors. A special spanner wrench, HP Stock Number 5060-0237, is required. This wrench is included in Accessory Kit 11587A and APC-7 Connector Tool Kit 11591A.

2-38. To remove a coupling mechanism:

a. Fully extend the coupling sleeve to provide a guide for the spanner wrench.

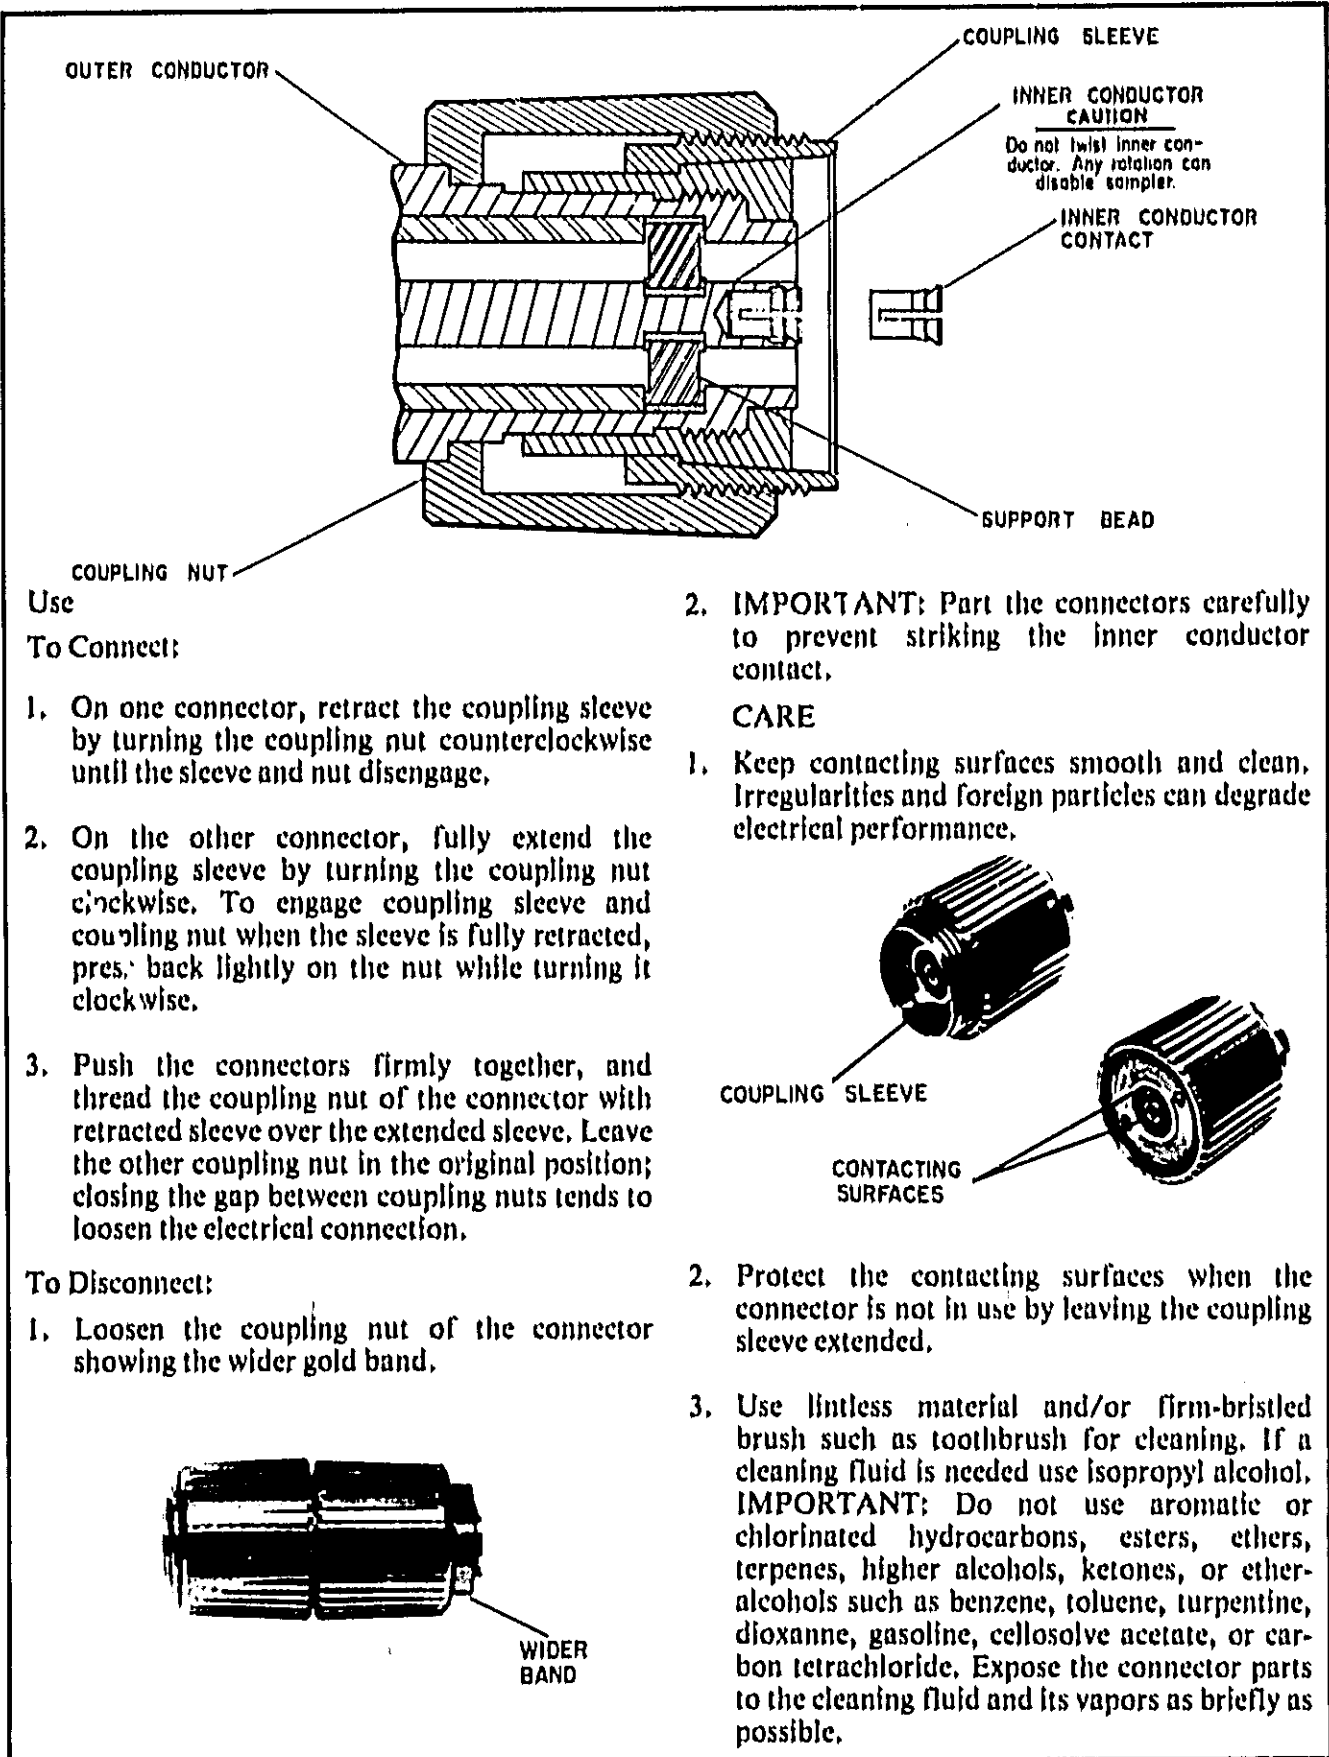


Figure 2-3. APC-7 Connectors

b. Align the wrench so both pegs engage the holes in the end of the coupling sleeve assembly.

c. Pressing the wrench firmly against the connector, unscrew the sleeve assembly by turning the wrench counterclockwise.

2-39. When installing a coupling mechanism, set the coupling nut in place on the connector first, then thread on the coupling sleeve assembly and tighten it firmly with the spanner wrench. (Extending the coupling sleeve helps to keep the spanner in position during the final tightening.

2-40. POWER SWITCH LAMP REPLACEMENT

2-41. The lamp housed in the POWER switch pushbutton indicates that line power is applied to the Model 8410B. To replace the lamp, pull out the pushbutton, and remove the lamp. The HP Stock Number for a replacement lamp is listed under DSI in the Table of Replaceable Parts.

2-42. OPERATORS QUICK-CHECK PROCEDURE

2-43. The following procedure checks the overall

functional operation of the 8410B and 8411A system, but does not check calibration.

a. Connect equipment as shown in Figure 2-4.

b. Set signal source for single-frequency CW operation, any frequency from 110 MHz to 12.4 GHz.

c. Set the 8410B **FREQ RANGE** switch to a position that includes the signal source frequency.

d. Set 8410B **SWEEP STABILITY** control to CW detent position.

e. Slowly increase signal source power until the 8410B **REF CHANNEL LEVEL** meter indicates in the **OPERATE** range.

f. Set **TEST CHANNEL GAIN** for a convenient **TEST CHAN** indication on the 8412A display.

g. Set 8412A **MODE** switch to **PHASE** and **DEG/DIV** switch to 90. Adjust the **PHASE VERNIER** control. The dot on the CRT should be stable and move smoothly in a vertical direction.

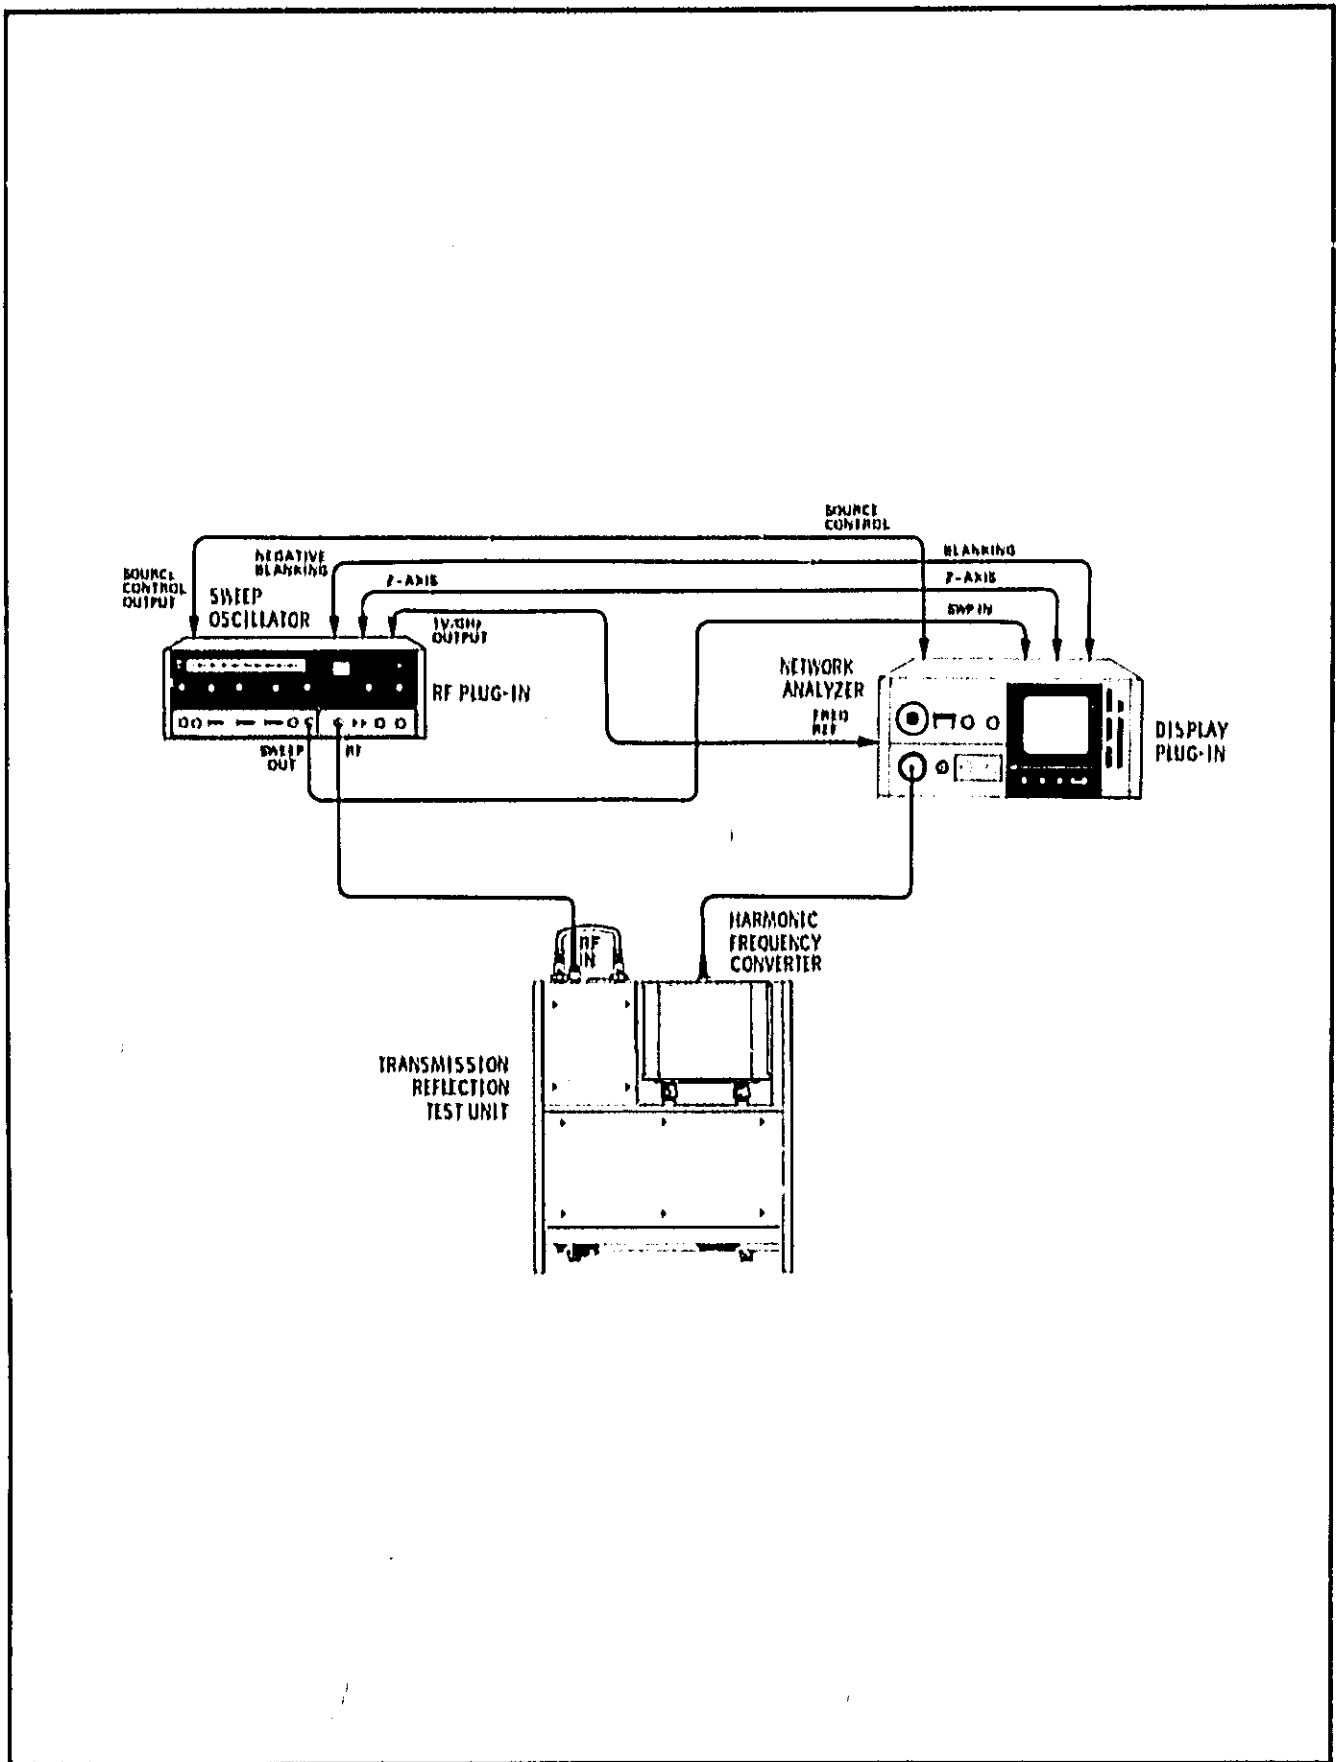


Figure 2-4. Test Setup for Operators Quick Check

OPERATION

SECTION III OPERATION

3-1. INSTRUCTIONS FOR MAKING MEASUREMENTS


3-2. Step-by-step instructions for making basic transmission and reflection measurements with the 8410B/8411A are found in Application Note AN 117-1 included with your instrument. Additional copies may be obtained from your nearest Hewlett-Packard Office.

3-3. A typical test setup for multioctave measurements is shown in Figure 3-3. This test setup

uses an 8620C/86222A for the 0.11 to 2 GHz range and an 8620C/86290A/B for the 2 to 18 GHz range.

3-4. DESCRIPTIONS OF PANEL FEATURES

3-5. Front and rear panel controls, connectors, and indicators are described in Figures 3-1 and 3-2. In these figures the numbers on the illustrations match the description numbers.

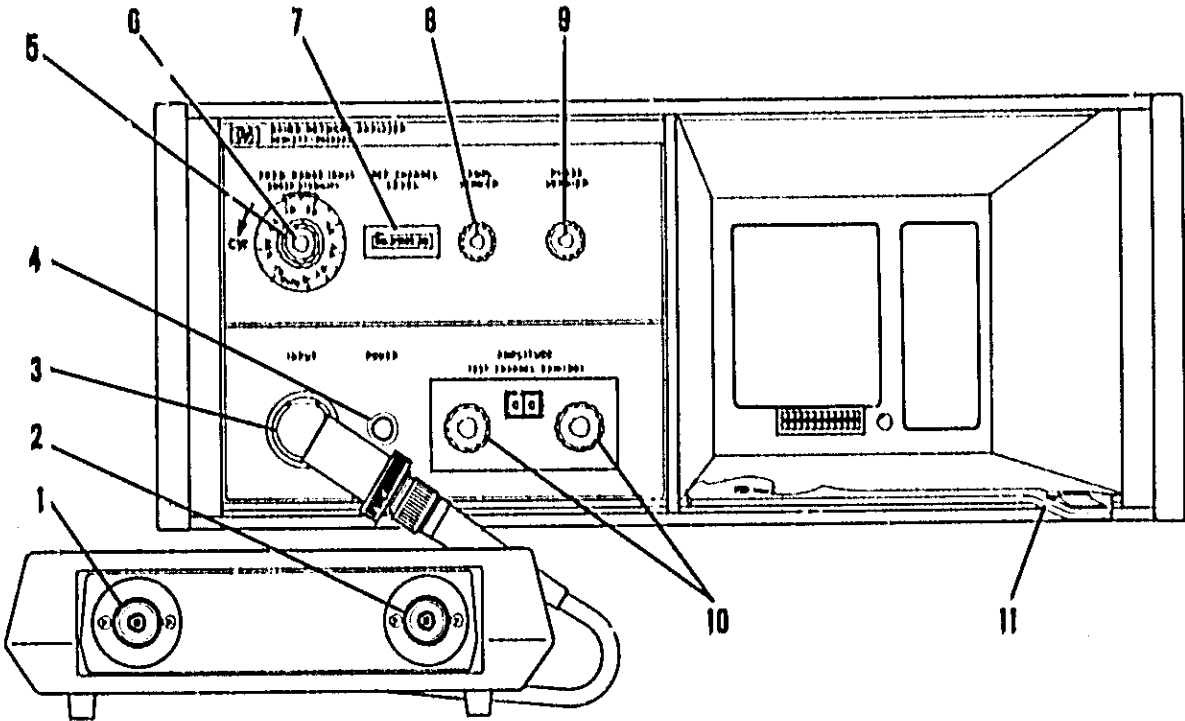

1. **TEST.** Test channel input, Impedance 50 ohms, Frequency range: 0.11 - 12.4 GHz (Option 018: 0.11 to 18 GHz). Input power: -10 dBm maximum, not to exceed reference channel power by more than 20 dB. Dynamic range: at least 60 dB. Admits frequency to which reference channel is tuned. Connector is precision APC-7.^{1,2}

2. **REFERENCE.** Reference channel input, Impedance: 50 ohms, Frequency range: 0.11

- 12.4 GHz (Option 018: 0.11 to 18 GHz). Internal auto-tuning tunes and tracks REFERENCE and TEST channel inputs to the frequency of the REFERENCE input. Required input levels lie in a range between -18 and -35 dBm to 12.4 GHz and -18 to -25 dBm from 12.4 to 18 GHz (for Option 018). Input power is in this range when the REF CHANNEL LEVEL meter indicates in the OPERATE region. Connector is precision APC-7.^{1,2}

CAUTION

8411A INPUT

- Maximum input power: 50 mW (damage level).
- Maximum dc on RF line: ±3 volts (damage level).
- Static Discharge: Static charge on cables being connected to the input can damage the Model 8411A.
- Do not twist the APC-7 inner conductor.


Figure 3-1. Front Panel Features (Sheet 1 of 2)

3. **INPUT.** 8410B connector mates with 8411A Harmonic Frequency Converter cable.
4. **POWER.** Combination line power switch and power indicator. Pushbutton glows when instrument is on. Pushbutton retainer pulls out for lamp replacement (Paragraph 2-40).
5. **FREQ RANGE (GHz).** Automatic or manual frequency range selection control. In AUTO position, the 8410B monitors the source through the Source Interconnect Cable and automatically selects the proper frequency range. Particular frequency ranges can be selected. Selected range must include the frequency (or frequencies) at which measurements are to be made. The dial is marked to indicate that an 8411A Option 018 is required for frequency ranges above 12.4 GHz.
6. **SWEEP STABILITY.** Fine tuning control. Adjusts for best automatic tuning. A CW detent at the fully counterclockwise position gives best auto-tuning for single frequency CW-mode operation. For swept measurements, this control is typically set to the 1 o'clock position.
7. **REF CHANNEL LEVEL.** Meter indicates amplitude of signal applied to Model 8411A reference channel input. Pointer should be in OPERATE region for all phase and magnitude measurements. Because the meter averages in RF power during the automatic relocking cycle and sweeper retrace, the meter level should be set with a slow sweep rate.
8. **AMPLITUDE VERNIER.** Uncalibrated test channel gain vernier with at least 2 dB continuous range. Gain increases with clockwise rotation.
9. **PHASE VERNIER.** Continuous control for changing relative phase of reference and test channel signals. Range is at least 90°, uncalibrated.
10. **AMPLITUDE.** Precision 69 dB test channel gain control. Left hand control has 0 to 60 dB range in 10-dB steps. Right hand control has 0 to 9 dB range in 1-dB steps.
11. Pivoting lever installs, retains, and extracts plug-in display units.

¹ See Paragraph 2-28 for important instructions and information on the use and care of APC-7 connectors.

² Protect critical contacting surfaces by leaving the coupling sleeve extended when connectors are not in use.

Figure 3-1. Front Panel Features (Sheet 2 of 2)

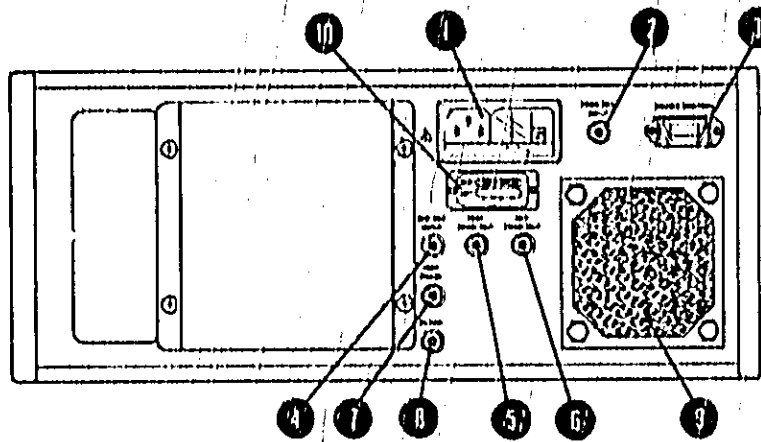

1. **Power Line Module and Fuse.** Allows selection of 100, 120, 220 or 240 Vac Operation. To change power selection, power cable must be disconnected from rear of instrument. This allows plastic window covering fuse compartment to slide to one side, exposing fuse. To either change fuses or power selection, pull outward on lever in fuse compartment.
2. **FREQ REF INPUT.** Accepts a voltage proportional to reference channel input frequency (1 V/GHz). Voltage is used in AUTO mode operation. FREQ REF INPUT is supplied by the RF section of the 8620C Sweep Oscillator.
3. **SOURCE CONTROL.** For use when operated with the 8620C Sweep Oscillator. Connector is used with Source Control cable to provide interconnection of Stop Sweep and External Trigger between 8410B and 8620C Sweep Oscillator to allow multi-octave sweeps.
4. **SWP REF INPUT.** SWP REF INPUT is not used with the 8620A/C Sweep Oscillator. Accepts a voltage proportional to reference channel input frequency for single octave sweeps. Voltage enables auto-tuning to track fast sweeping input frequencies. Nominal 0 to +40 volts per octave from 20K ohms $\pm 20\%$ source impedance required. The lower voltage must coincide with the lowest input frequency. HP 690 and 8690 Sweep Oscillators furnish suitable reference voltages.
5. **TEST CHAN OUT.** 278 kHz sine wave. Amplitude depends upon the amplitude of the test channel RF input and the settings of the front-panel TEST CHANNEL GAIN (dB) and AMPL VERNIER controls. Amplitude range is 0 to about 10 volts p-p.
6. **REF CHAN OUT.** 278 kHz sine wave with amplitude fixed at about 2 volts p-p nominal when REF CHANNEL LEVEL meter reads in the OPERATE region.
7. **TEST PHASE.** 278 kHz sine wave with amplitude fixed at about 0.22 volts p-p. Signal is in phase with test channel input.
8. **BLANK.** Provides a -2 to -4 volt blanking signal when the 8410B is not phase locked. This blanking signal may be used with an auxiliary display unit.
9. **AIR INTAKE FILTER.** Clean regularly. Do not obstruct airflow.
10. **SERIAL NUMBER PLATE.** Eight digit serial number should be included in any correspondence concerning the Model 8410B.

¹Swept frequency measurements can be made over somewhat wider frequency ranges than indicated by the FREQ RANGE (GHz) selector provided the sweep reference voltages cover the required ranges.

Figure 3-2. Model 8410B Rear Panel Features

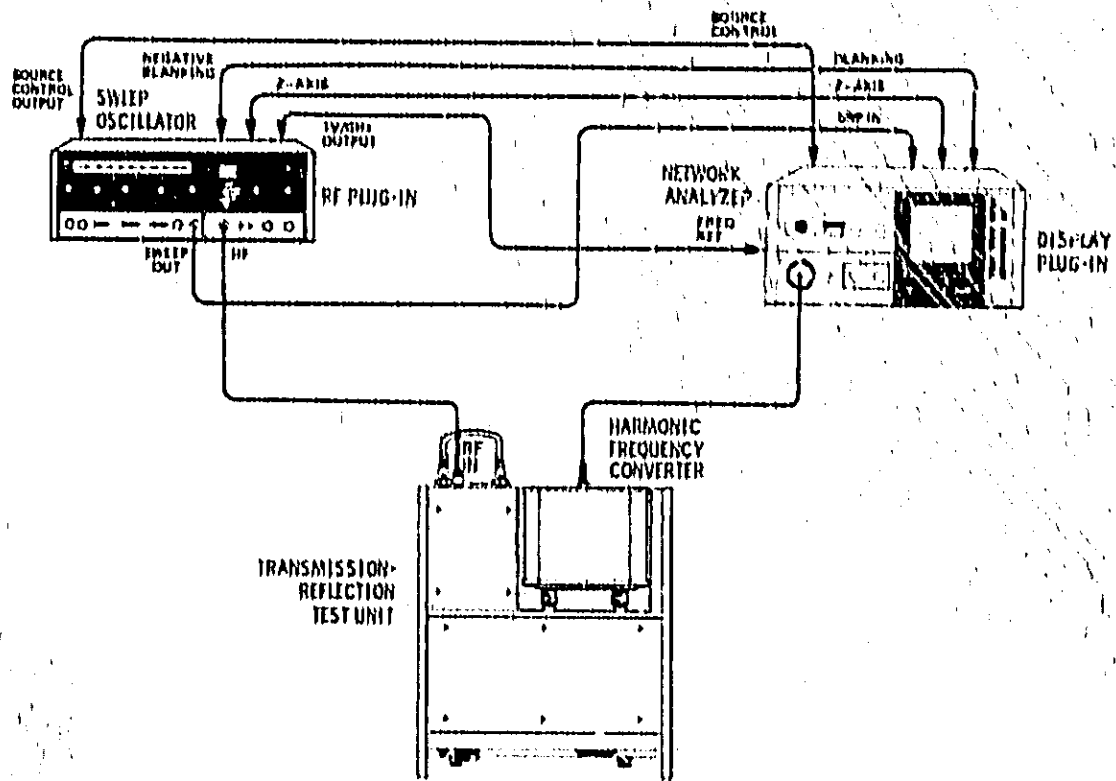


Figure 3-3. Typical Test Setup for Multioctave Measurements

PERFORMANCE

CHECK

SECTION IV PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. This section provides instructions for checking calibration and performance of the 8410B Network Analyzer and 8411A Harmonic Frequency Converter.

CAUTION

STATIC DISCHARGE. The sampling diodes in the 8411A may be damaged by a discharge of static electricity. Momentarily ground and short connectors prior to making connection to 8411A input connectors.

MAXIMUM RF POWER. Maximum RF input at 8411A before damage occurs is 50 mW. RF levels above -10 dBm in the test channel and -18 dBm in the reference channel will cause distortion in the 8411A preamplifiers.

MAGNETIC FIELDS. When using an 8412A or 8414A Display plug-in, do not place the 8410B near a sweep generator containing a BWO which has an unshielded permanent magnet or the CRT will be permanently magnetized, causing poor focus. Separate 8412A or 8414A from any magnetic source by a distance of at least two feet.

4-3. LINE VOLTAGE REQUIREMENTS.

4-4. During the performance test, the network analyzer must be connected to a source of power which is 50 to 60 Hz and 100, 120, 220, or 240 VAC $+5-10\%$. If source power is not within

tolerance, the network analyzer should be connected through a variable auto transformer to the ac power source. The line voltage at the input of the 8410B should then be adjusted to 115 or 230 VAC $+5-10\%$.

4-5. PERFORMANCE TEST PROCEDURES

4-6. PURPOSE

4-7. The procedure in paragraphs 4-12 through 4-18 check the 8410B and 8411A performance. This procedure may be used during incoming inspection, periodic evaluation, or after repair or alignment. The tests can be performed without access to the instrument interior. The specifications of Table 1-1 are the calibration standards.

4-8. Table 4-1 is a performance test record. This may be used during the test to record the test values obtained. This provides a permanent record of the test values for use at a later time during performance testing or periodic evaluation.

4-9. If the 8410B/8411A system fails to meet any of the calibration tests, and a circuit malfunction is not suspected, proceed to the appropriate adjustment procedure in Section V. If a circuit malfunction is suspected, perform troubleshooting procedures in Section VIII.

4-10. TEST EQUIPMENT REQUIRED

4-11. The test instruments and accessories required to make the performance test are listed in Table 1-8. Test instruments other than the ones listed can be used, provided their performance equals or exceeds the Critical Specifications listed.

PERFORMANCE TESTS

4-12. AUTOMATIC TUNING TEST


SPECIFICATION TESTED

Automatic Tuning

TEST DESCRIPTION

Sets up initial test conditions and checks for phase lock of the system.

TEST SETUP

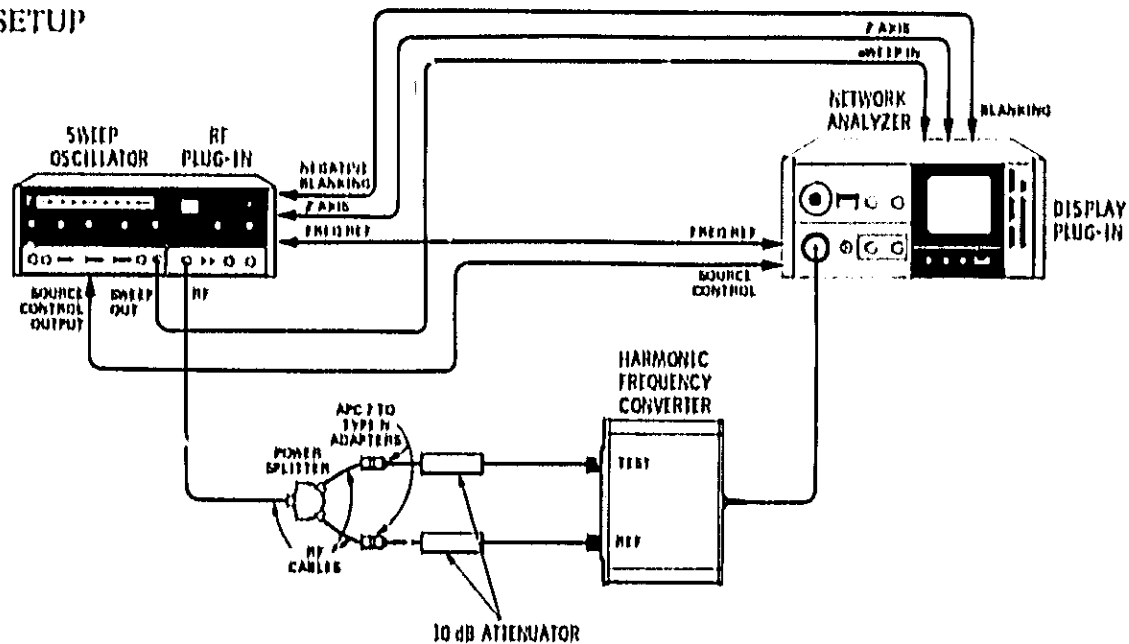

TEST EQUIPMENT: Items 1, 10, 14, 16, 20, 23, 25, Table 1-8.

PROCEDURE

- Connect equipment as shown in test setup above.
- Check that line voltage at input of 8410B is 100, 120, 220, or 240 VAC $\pm 5\%$ or -10% , and that the line-voltage selection card in the power module at the rear of the 8410B corresponds to the line voltage.
- Set signal source for full band sweep operation, any frequency from 110 MHz to 12.4 GHz. (18 GHz if option 018). Set RF BLANKING to OFF. Set sweep speed to approximately the middle of the fast range. Use MARKER Sweep when using 86222A/B RF plug-in and set START MARKER to ≥ 110 MHz.
- Set 8410B FREQ RANGE switch to AUTO and TEST CHANNEL GAIN to 20 dB.
- Adjust signal source POWER LEVEL control for an 8410B REF CHANNEL LEVEL meter indication in the OPERATE region.
- Set 8412A Display MODE switch to AMPL, dB/DIV to 10, and BW to 10 kHz.

PERFORMANCE TESTS

4-12. AUTOMATIC TUNING TEST (Cont'd)

- g. Set 8410B SWEEP STABILITY control to a position that gives a continuous amplitude trace on 8412A display. A typical setting is at 1 o'clock position. It may be necessary to reduce sweep rate on signal source. (Bright dots on the display are band switch points for either the 8410B or the 8620C.) A typical phase-locked signal trace is shown in Figure 4-1. A signal that is not phase locked is shown in Figure 4-2.

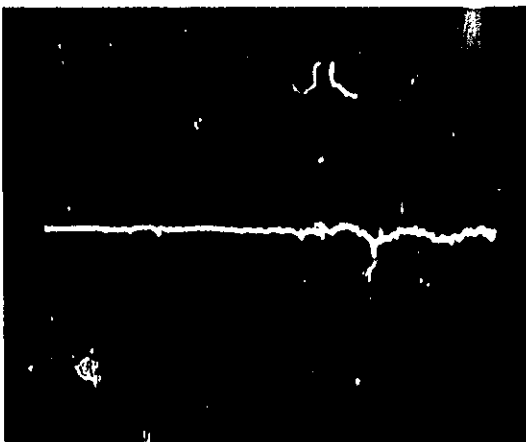


Figure 4-1. Typical Display of Phase-Locked Signal, 0.11 to 2 GHz, or 2 to 18 GHz

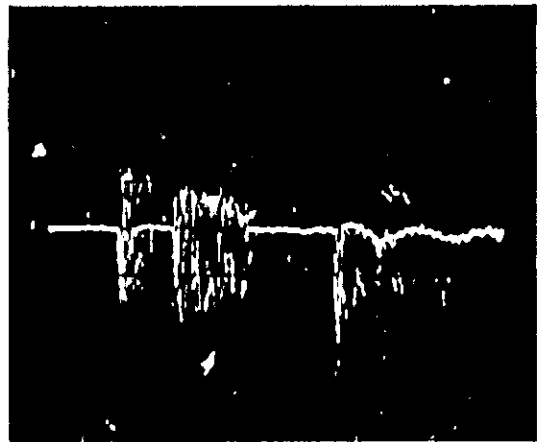


Figure 4-2. Typical Display of Signal That is Not Phase-Locked

4-13. REFERENCE CHANNEL INPUT POWER RANGE TEST
SPECIFICATION TESTED

REFERENCE CHANNEL INPUT POWER RANGE: Variation between -18 and -35 dBm, 0.11 to 12.4 GHz, and between -18 and -25 dBm, 12.4 to 18 GHz (Option 018), causes ≤ 1.5 dB amplitude and $\leq 4^\circ$ phase change at output.

TEST DESCRIPTION


The AGC circuit is checked for correct operation between at least -18 dBm and -35 dBm range, 0.11 to 12.4 GHz, and between -18 and -25 dBm, 12.4 to 18 GHz (Option 018). This is done by changing RF input power levels to the two operating extremes of the AGC circuit and still maintaining constant reference channel output.

Phase and amplitude are then monitored through the specified AGC range to determine that they remain within specifications through the entire range.

PERFORMANCE TESTS

4-13. REFERENCE CHANNEL INPUT POWER RANGE TEST (Cont'd)

TEST SETUP

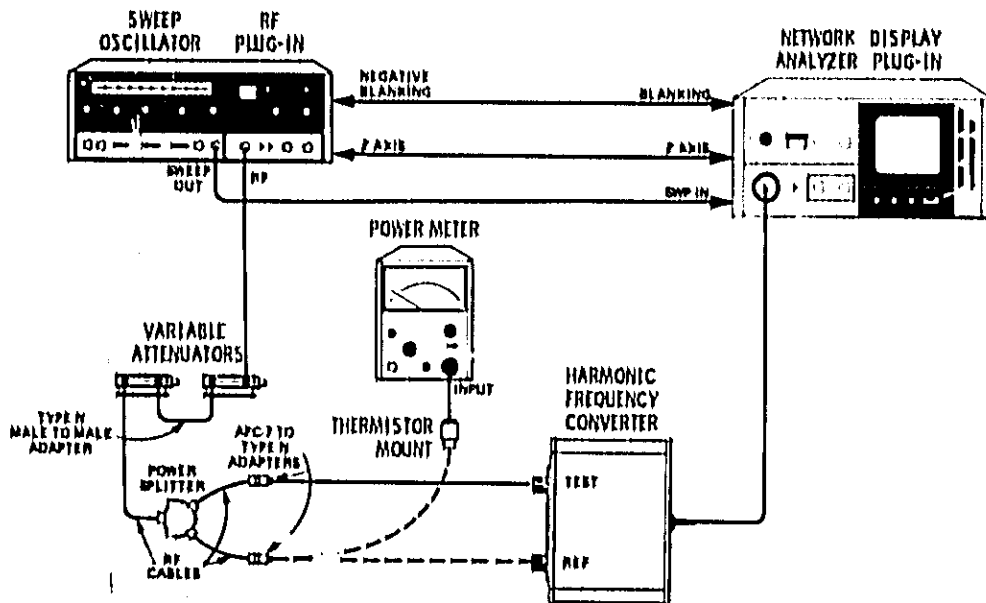

TEST EQUIPMENT: Items 1, 2, 10, 14, 20, 23, 24, 26, 27, 28, Table I-8.

PROCEDURE

- a. Change equipment test setup as above with 8411A REF port connected to cable from power splitter. Set signal source to CW mode and frequency to 2 GHz. Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE control to include 2 GHz. Preset 1 dB step attenuator to 0 and 10 dB step attenuator to 10.
- b. Check for phase-locked condition in the 8410B as follows:
 - (1) REF CHANNEL LEVEL meter should indicate in the OPERATE range. If not, adjust signal source POWER LEVEL control and 10 dB step attenuator to obtain OPERATE indication on meter.
 - (2) Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction. Return 8412A MODE switch to AMP (Amplitude).
- c. Set 8412A Display MODE to AMPL and dB/DIV to 1.0 dB. Set 8410B TEST CHANNEL GAIN to 20 dB and set CRT dot to center horizontal line with AMPLITUDE VERNIER. Increase power from signal source until 8412A indication starts to increase (> 0.5 dB). This indicates that the upper limit of the AGC range is reached.
- d. Disconnect 8411A REFERENCE Port from cable to power splitter and connect power meter thermistor mount to this cable. Power meter indication must be > -18 dBm. Note and record power meter indication.

PERFORMANCE TESTS

4-13. REFERENCE CHANNEL INPUT POWER RANGE TEST (Cont'd)

- e. Set signal source to 12.4 GHz and set 8410B FREQ RANGE control to include 12.4 GHz. Set POWER LEVEL control of signal source for a power meter indication of -18 dBm.
- f. Disconnect power meter thermistor mount and reconnect 8411A REFERENCE port to the cable from the power splitter. Set CRT dot to center horizontal line with AMPLITUDE VERNIER control. Reduce RF input power by inserting attenuation with the variable attenuators until 8412A indication starts to decrease (>1 dB). This indicates that the lower limit of the AGC range is reached. The amount of attenuation inserted should be ≥ 17 dB. This, when added to the -18 dBm reference that was set in step "e" will give the lower AGC limit of ≥ -35 dBm. With normal AGC action, the 8412A display indication should stay constant between at least the -18 to -35 dBm range. Note the limits of the AGC range.
- g. Proceed to step "j" if 8411A does not contain option 018.

OPTION 018 ONLY (12.4 to 18 GHz Range)

- h. Disconnect 8411A REFERENCE port from cable to power splitter and connect thermistor mount to this cable. Set signal source to 18 GHz and set 8410B FREQ RANGE control to include 18 GHz. Set POWER LEVEL control of signal source for a power meter indication of -18 dBm.
- i. Disconnect power meter thermistor mount and reconnect 8411A REFERENCE port to the cable from the power splitter. Set CRT dot to center horizontal line with AMPLITUDE VERNIER control. Reduce RF input power by inserting attenuation with the variable attenuators until 8412A indication starts to decrease (>1 dB). This indicates that the lower limit of the AGC range is reached. The amount of attenuation inserted should be ≥ 7 dB. This, when added to the -18 dBm reference that was set in step "h" will give the lower AGC limit of ≤ -25 dBm. With normal AGC action, the 8412A display indication should stay constant between at least the -18 to -25 dBm range. Note the limits of the AGC range.
- j. Set signal source to 12.4 GHz and set 8410B FREQ RANGE control to include 12.4 GHz. Disconnect 8411A REFERENCE port from cable to power splitter and connect power meter thermistor mount to this cable. Set output level of signal source for a -18 dBm indication on power meter. Disconnect power meter thermistor mount and reconnect the 8411A REFERENCE port to the cable from the power splitter.
- k. Set 8412A Display MODE switch to DUAL, dB/DIV to 1.0, DEG/DIV to 1.0 and BW to 0.1 KHz. With 8410B AMPLITUDE VERNIER control, position amplitude trace dot on center horizontal line and with PHASE VERNIER control, position phase trace dot one major line below the center horizontal line on CRT.
- l. While observing the 8412A Display, increase the variable attenuator by 17 dB. This is the specified AGC range of -18 to -35 dBm. The difference between the maximum and minimum amplitude and phase indications should not be greater than 1.5 dB or 4 degrees over the 17 dB range.

OPTION 018 ONLY (12.4 to 18 GHz Range)

- m. Set signal source to 18 GHz and set 8410B FREQ RANGE control to include 18 GHz. Disconnect 8411A REFERENCE port from cable to power splitter and connect power meter thermistor mount to this cable. Set POWER LEVEL control of signal source for a -18 dBm indication on power meter. Disconnect power meter thermistor mount and reconnect the 8411A REFERENCE port to the cable from the power splitter.

PERFORMANCE TESTS

4-13. REFERENCE CHANNEL INPUT POWER RANGE TEST (Cont'd)

- n. Set 8412A Display MODE switch to DUAL, dB/DIV to 1.0, DEG/DIV to 1.0, and BW to 0.1 KHz. With 8410B AMPLITUDE VERNIER control, position amplitude trace dot on center horizontal line and with PHASE VERNIER control, position phase trace dot one major line below the center horizontal line on CRT.
- o. While observing the 8412A Display, increase the variable attenuator by 7 dB. This is the specified AGC range of -18 to -25 dBm. The difference between the maximum and minimum amplitude and phase indications should not be greater than 1.5 dB or 4 degrees over the 7 dB range.

4-14. AMPLITUDE RANGE AND ACCURACY TEST

SPECIFICATION TESTED


AMPLITUDE RANGE: 69 dB total in 10- and 1-dB steps; vernier provides continuous adjustment over at least 2 dB.

AMPLITUDE ACCURACY: ± 0.1 dB per 10-dB step, not to exceed ± 0.2 dB cumulative; ± 0.05 dB per 1-dB step, not to exceed ± 0.1 dB cumulative.

TEST DESCRIPTION

The TEST CHANNEL GAIN attenuators are tested for accuracy and the AMPL VERNIER control operation is checked. This is done by feeding a constant RF signal through the test channel and monitoring the 278-kHz signal on an ac voltmeter. The attenuators are set at each position and the resultant change in signal level is read on the ac voltmeter.

TEST SETUP

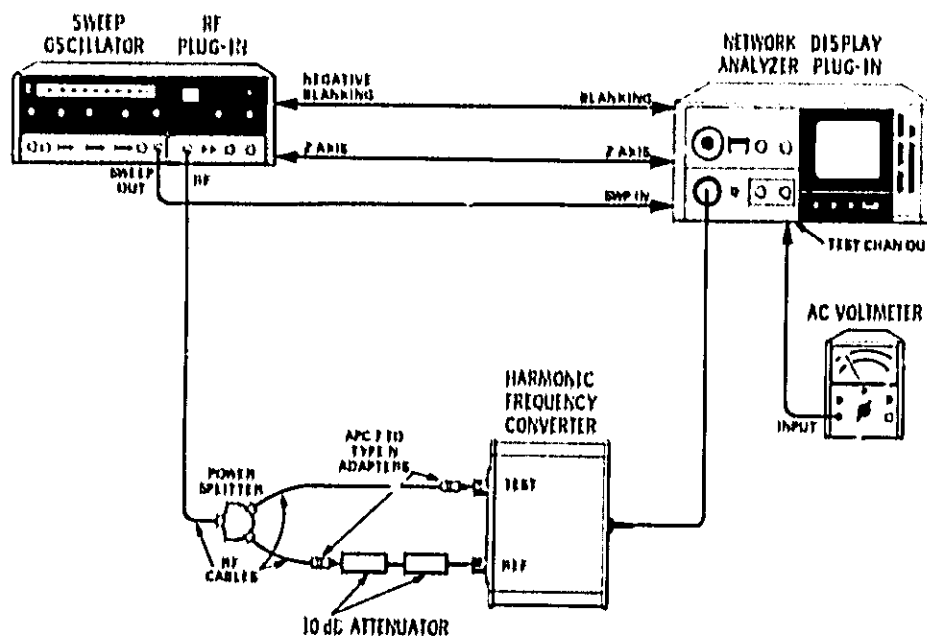

TEST EQUIPMENT: Items 1, 3, 10, 14, 16, 20, 23, Table 1-8

PERFORMANCE TESTS

4.14. AMPLITUDE RANGE AND ACCURACY TEST (Cont'd)

PROCEDURE

- a. Change equipment test setup as shown above. Set signal source to CW mode and frequency to any CW frequency in 0.11 to 12.4 GHz range (18 GHz if option 018). Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE control to include frequency of signal source.
- b. Check for phase-locked condition in the 8410B as follows:
 - (1) REF CHANNEL LEVEL meter should indicate in the OPERATE range. If not, adjust signal source POWER LEVEL control to obtain an OPERATE indication on meter.
 - (2) Set 8412 MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.
- c. Set 8410B TEST CHANNEL GAIN 10 dB/step control to 0 dB.
- d. Set ac voltmeter to -50 dB range and adjust 8410B AMPLITUDE VERNIER control and TEST CHANNEL GAIN 1 dB/step control for zero dB indication on -50 dB range of ac voltmeter.
- e. Increase Model 8410B TEST CHANNEL GAIN in 10-dB steps and check accuracy as indicated below.

Model 8410B TEST CHANNEL GAIN Tens Control Setting	AC Voltmeter Range Setting	AC Voltmeter Indication
10 dB	-40 dB	$0 (\pm 0.1)$ dB \pm voltmeter error
20 dB	-30 dB	$0 (\pm 0.2)$ dB \pm voltmeter error
30 dB	-20 dB	$0 (\pm 0.2)$ dB \pm voltmeter error
40 dB	-10 dB	$0 (\pm 0.2)$ dB \pm voltmeter error
50 dB	0 dB	$0 (\pm 0.2)$ dB \pm voltmeter error
60 dB	$+10$ dB	$0 (\pm 0.2)$ dB \pm voltmeter error

- f. Set ac voltmeter to -30 dB range, set 8410B TEST CHANNEL GAIN 10 dB/step control to 20 dB, and set 1 dB/step control to zero dB. Adjust AMPL VERNIER control for a scale reference on AC Voltmeter at zero or any one-dB scale division.
- g. Increase 8410B TEST CHANNEL GAIN 1 dB/step control in 1-dB steps; ac voltmeter indications should increase in corresponding 1-dB steps. If necessary, change ac voltmeter range to a higher or lower scale. Each meter indication must be within ± 0.1 dB of a 1-dB major scale division on the meter, \pm the tolerance of the voltmeter.
- h. Using the ac voltmeter, check AMPL VERNIER range. It should be at least 2 dB.

PERFORMANCE TESTS

4-15. TEST CHANNEL NOISE TEST

SPECIFICATION TESTED

TEST CHANNEL NOISE: < -75 dBm, 0.11 to 12.4 GHz;
 < -68 dBm, 12.4 to 18 GHz (OPTION 018)


TEST DESCRIPTION

A -30 dBm signal at the TEST input of the 8411A is used to set a reference at the Display Plug-in. The RF input signal is removed from the 8411A TEST input and the TEST input is terminated, leaving only TEST CHANNEL noise to be measured at the display plug-in. Noise level of -75 dBm is 45 dB lower than the -30 dBm reference level. 40 dB of gain is added in the TEST CHANNEL GAIN control and -5 dB from zero reference is indicated on the 8412A Display plug-in totaling 45 dB.

FOR OPTION 018 ONLY (12.4 to 18 GHz RANGE)

A -25 dBm signal at the TEST input of the 8411A is used to set a reference at the Display Plug-in. The RF input signal is removed from the 8411A TEST input and the TEST input is terminated, leaving only TEST CHANNEL noise to be measured at the display plug-in. Noise level of -68 dBm is 43 dB lower than the -25 dBm reference level. 40 dB of gain is added in the TEST CHANNEL GAIN control and -3 dB from zero reference is indicated on the 8412A Display plug-in totaling 43 dB.

TEST SETUP

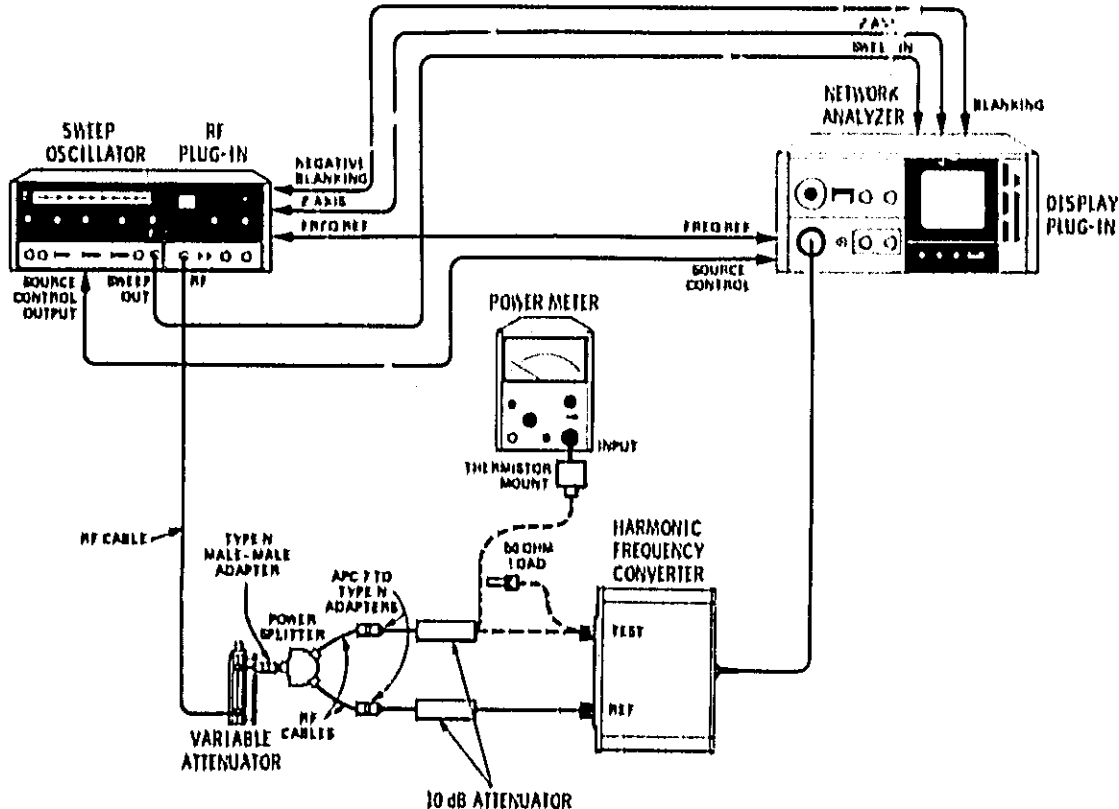

TEST EQUIPMENT: Items 1, 2, 10, 14, 16, 18, 20, 23, 25, 27, 28, Table 1-8.

PERFORMANCE TESTS

4-15. TEST CHANNEL NOISE TEST (Cont'd)**PROCEDURE**

- a. Change equipment test setup as shown above with Power meter thermistor mount connected to 10 dB attenuator from power splitter. Set signal source to CW Mode and frequency to 12.4 GHz.
- b. Adjust 10 dB step attenuator and POWER LEVEL control of Sweep Oscillator for a -30 dBm indication on power meter. Disconnect thermistor mount and connect 8411A TEST port to 10 dB attenuator from power splitter.
- c. Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE control to include 12.4 GHz. Check that REF CHANNEL LEVEL meter indicates in the OPERATE range.
- d. Check for phase-locked condition in the 8410B as follows:
Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.
- e. Set 8410B TEST CHANNEL GAIN controls to 20 dB.
- f. Set 8412A Display MODE switch to AMPL, dB/DIV to 10, and BW to 0.1 KHz. Adjust 8410B AMPLITUDE VERNIER and TEST CHANNEL GAIN 1 dB/step controls to position CRT dot on center horizontal line of 8412 display.
- g. Disconnect 10-dB attenuator from 8411A TEST channel input and connect 50-ohm termination to 8411A TEST input.
- h. Increase 8410B TEST CHANNEL GAIN control by 40 dB. The 8412A should indicate in the negative direction at least -5 dB. (This indicates less than -75 dBm equivalent input noise.)

OPTION 018 ONLY (12.4 to 18 GHz RANGE)

- i. Change CW frequency of signal source to 18 GHz.
- j. Disconnect 10 dB attenuator from 8411A TEST port and check for -25 dBm signal level at 10 dB attenuator. If necessary, adjust Sweep Oscillator POWER LEVEL control for -25 dBm indication on power meter. Reconnect 10 dB attenuator to 8411A TEST port.
- k. Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE control to include 18 GHz.
- l. Check for phase-locked condition in the 8410B as follows:
(1) Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.
- m. Set 8410B TEST CHANNEL GAIN controls to 20 dB.

PERFORMANCE TESTS

4-16. TEST CHANNEL NOISE TEST (Cont'd)

- n. Set 8412A Display MODE switch to AMPL, dB/DIV to 10, and BW to 0.1 kHz. Adjust 8410B AMPLITUDE VERNIER and TEST CHANNEL GAIN 1 dB/step controls to position CRT dot on center horizontal line of 8412A display.
- o. Disconnect 10 dB attenuator from 8411A TEST channel input and connect 50-ohm termination to 8411A TEST input.
- p. Increase 8410B TEST CHANNEL GAIN control by 40 dB. The 8412A should indicate in the negative direction at least -3 dB. (This indicates less than -68 dBm equivalent input noise.)

4-16. TEST CHANNEL DYNAMIC RANGE TEST


SPECIFICATION TESTED

TEST CHANNEL DYNAMIC RANGE: -10 to -75 dBm, 0.11 to 12.4 GHz;
 -10 to -68 dBm, 12.4 to 18 GHz (Option 018).

TEST DESCRIPTION

A known signal level of -10 dBm is applied to the 8411A TEST channel RF input. A reference is established on the 8412A. This represents the top of the test channel input power range. A variable attenuator is used to reduce the RF signal at the TEST channel input of the 8411A to > -75 dBm (-68 dBm, 12.4 to 18 GHz for Option 018). The equivalent TEST CHANNEL GAIN is added and the resulting display is compared to the original reference.

TEST SETUP

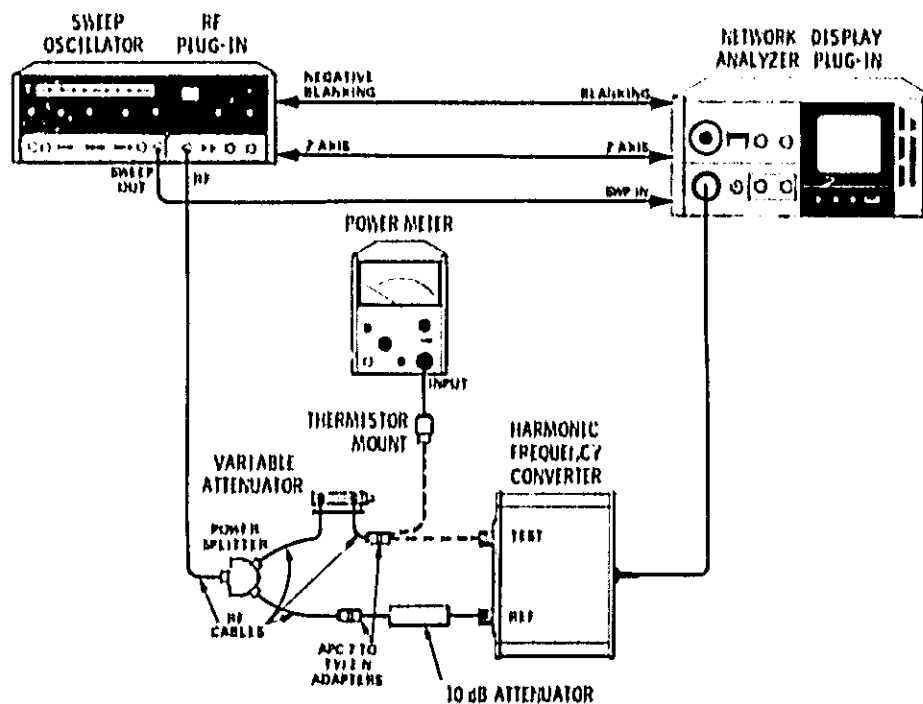

TEST EQUIPMENT: Items 1, 2, 10, 14, 16, 20, 23, 24, 27, Table 1-8.

PERFORMANCE TESTS

4-16. TEST CHANNEL DYNAMIC RANGE TEST (Cont'd)**PROCEDURE**

- a. Change equipment test setup as shown above with 8411A TEST port connected to cable from variable attenuator.
- b. Set signal source to CW mode and Frequency to 12.4 GHz. Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE switch to include 12.4 GHz.
- c. Check for phase-locked condition in the 8410B as follows:
 - (1) REF CHANNEL LEVEL meter should indicate in the OPERATE range. If not, adjust signal source POWER LEVEL control to obtain OPERATE indication on meter.
 - (2) Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction. Return 8412A MODE Switch to AMPL (Amplitude)
- d. Disconnect 8411A TEST port from cable to variable attenuator and connect power meter thermistor mount to this cable.
- e. Set variable attenuator and 8410B TEST CHANNEL GAIN controls to zero dB.
- f. Adjust signal source POWER LEVEL control for -10 dBm indication on power meter. Signal source output power should not be adjusted again during the remainder of the test. Disconnect thermistor mount from cable to variable attenuator and reconnect cable to 8411A TEST port.
- g. Set 8412A MODE Switch to AMPL, BW to 0.1 kHz, and dB/DIV to 10. Adjust 8410B AMPLITUDE VERNIER and TEST CHANNEL GAIN 1 dB/step controls to place dot on CRT one major division below center horizontal graticule line.
- h. Set variable attenuator to 70 dB and increase 8410B TEST CHANNEL GAIN by 65 dB. The dot on the CRT should be below the reference established in step "g".

OPTION 018 ONLY (12.4 to 18 GHz RANGE)

- i. Set signal source to CW mode and Frequency to 18 GHz. Set 8410B SWEEP STABILITY control to CW detent position and FREQ RANGE Switch to include 18 GHz.
- j. Set variable attenuator and 8410B TEST CHANNEL GAIN controls to zero dB.

PERFORMANCE TESTS

4-16. TEST CHANNEL DYNAMIC RANGE TEST (Cont'd)

- k. Check for phase-locked condition in the 8410B as follows:
 - (1) REF CHANNEL LEVEL meter should indicate in the OPERATE range. If not, adjust signal source power output to obtain an OPERATE indication on meter.
 - (2) Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction. Return 8412A MODE Switch to AMPL (Amplitude).
- l. Disconnect 8411A TEST port from cable to variable attenuator and connect power meter thermistor mount to this cable.
- m. Adjust signal source POWER LEVEL control for -10 dBm indication on power meter. Signal source POWER LEVEL control should not be adjusted again during the remainder of the test. Disconnect thermistor mount from cable to variable attenuator and reconnect cable to 8411A TEST port.
- n. Set 8412A MODE Switch to AMPL, BW to 0.1 KHz, dB/DIV to 10. Adjust 8410B AMPLITUDE VERNIER and TEST CHANNEL GAIN 1 dB/step controls to place dot on CRT one major division below center horizontal graticule line.
- o. Set variable attenuator to 60 dB and increase 8410B TEST CHANNEL GAIN by 58 dB. The dot on the CRT should be below the reference established in step "n".

4-17. CHANNEL ISOLATION TEST**SPECIFICATION TESTED**

CHANNEL ISOLATION: >65 dB, 0.11 to 6.0 GHz; >60 dB, 6.0 to 12.4 GHz; >50 dB, 12.4 to 18 GHz (Option 018).


TEST DESCRIPTION

A reference is established on the 8412A Display. The RF signal to the 8411A test channel is disconnected and the input is terminated with a 50-ohm load. With the RF signal applied only to the reference channel, any signal present in the test channel is due to signal leakage between channels. Isolation between channels is measured by observing the signal level below the reference level established on the 8412A Display.

PERFORMANCE TESTS

4-17. CHANNEL ISOLATION TEST (Cont'd)

TEST SETUP

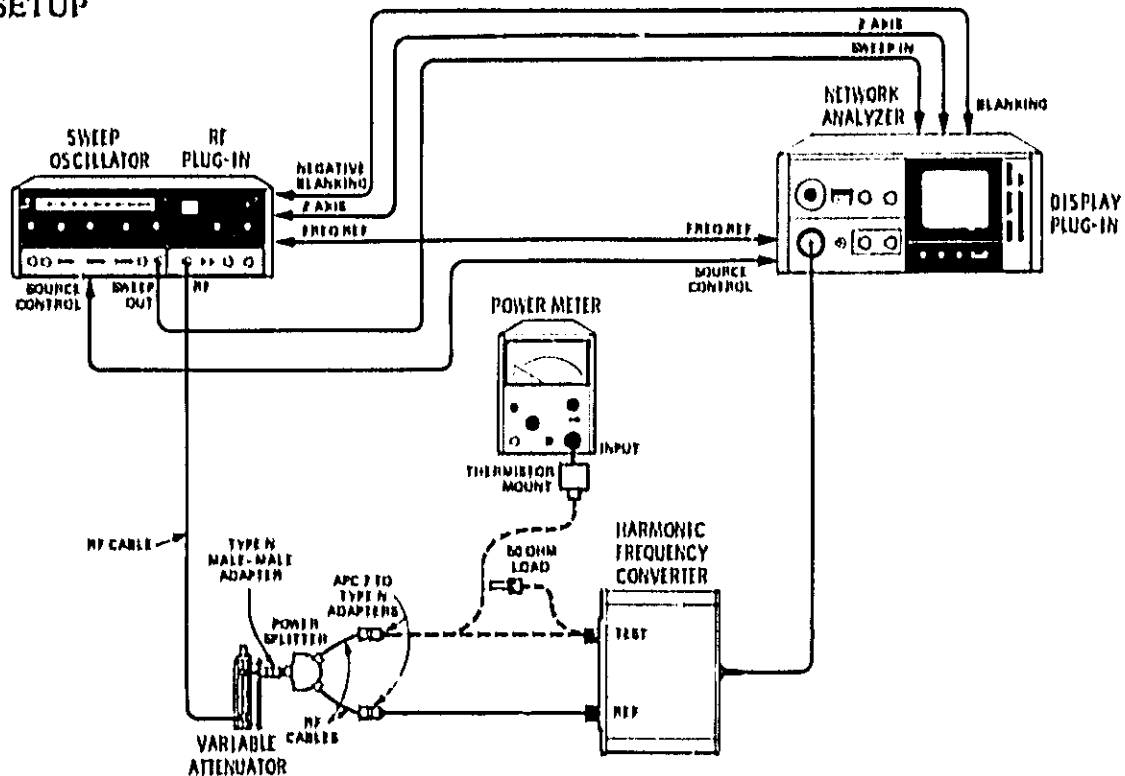

EQUIPMENT: Items 1, 2, 10, 14, 18, 20, 23, 25, 27, 28, Table 1-8.

PROCEDURE

- a. Change equipment test setup as shown above with the power meter thermistor mount connected to the cable from the power splitter.
- b. Set signal source for manual sweep in the 2.0 to 6.0 GHz range and set POWER LEVEL control for -18 dBm indication on power meter. Set MANUAL sweep control to full counterclockwise position.
- c. Disconnect thermistor mount from cable and connect cable to 8411A TEST port.
- d. Set 8410B FREQ Range to AUTO and SWEEP STABILITY to CW detent position. Set TEST CHANNEL GAIN control to 20 dB.
- e. Check for phase-locked condition in the 8410B as follows:
 - (1) REF CHANNEL LEVEL meter should indicate at the right edge of the OPERATE range.
 - (2) Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.

PERFORMANCE TESTS

4-17. CHANNEL ISOLATION TEST (Cont'd)

- f. Set 8412A MODE to AMPL, dB/DIV to 10, and BW to 0.1 KHz positions.
- g. Use TEST CHANNEL GAIN and AMPLITUDE VERNIER controls to place CRT dot on top horizontal graticule line. This is the reference line and will be used for the remainder of the test.
- h. Disconnect RF cable to 8411A TEST port and connect a 50-Ohm termination to TEST port.
- i. Connect thermistor mount to RF cable from power splitter.
- j. Manually sweep the signal source from 2 to 6 GHz while maintaining a -18 dBm indication on the power meter. The signal on the 8412A Display should be ≥ 65 dB below the reference level set in step "g".
- k. Set signal source for manual sweep in the 6 to 12.4 GHz range. Manually sweep the signal source from 6 to 12.4 GHz while maintaining a -18 dBm indication on the power meter. The signal on the 8412A Display should be ≥ 60 dB below the reference level set in step "g".

OPTION 018 ONLY (12.4 to 18 GHz RANGE)

- l. Set signal source for manual sweep in the 12.4 to 18 GHz range. Manually sweep the signal source from 12.4 to 18 GHz while maintaining a -18 dBm indication on the power meter. The signal on the 8412A Display should be ≥ 50 dB below the reference level set in step "g".

4-18. INPUT IMPEDANCE TEST**SPECIFICATION TESTED**

INPUT IMPEDANCE: 50 Ohms

Frequency Range	SWR	RETURN LOSS
0.11 to 2 GHz	<1.5	>14 dB
2 to 6 GHz	<2.0	>9.6 dB
6 to 12.4 GHz	<3.0	>6 dB
12.4 to 18 GHz (Option 018)	<3.0	>6 dB


TEST DESCRIPTION

The input impedance of the REFERENCE and TEST input ports on the 8411A is tested by measuring the reflected RF signal from the ports, using a Swept Amplitude Analyzer with a Reflectometer Bridge. Connecting an APC-7 short to the TEST port of the Reflectometer Bridge provides a reference on the Analyzer. The short completely reflects the RF signal back to the measurement bridge. The REFERENCE and TEST ports of the 8411A are connected and the amplitude of the reflection is compared to the reference on the swept amplitude analyzer.

PERFORMANCE TESTS

4-18. INPUT IMPEDANCE TEST (Cont'd)

TEST SETUP

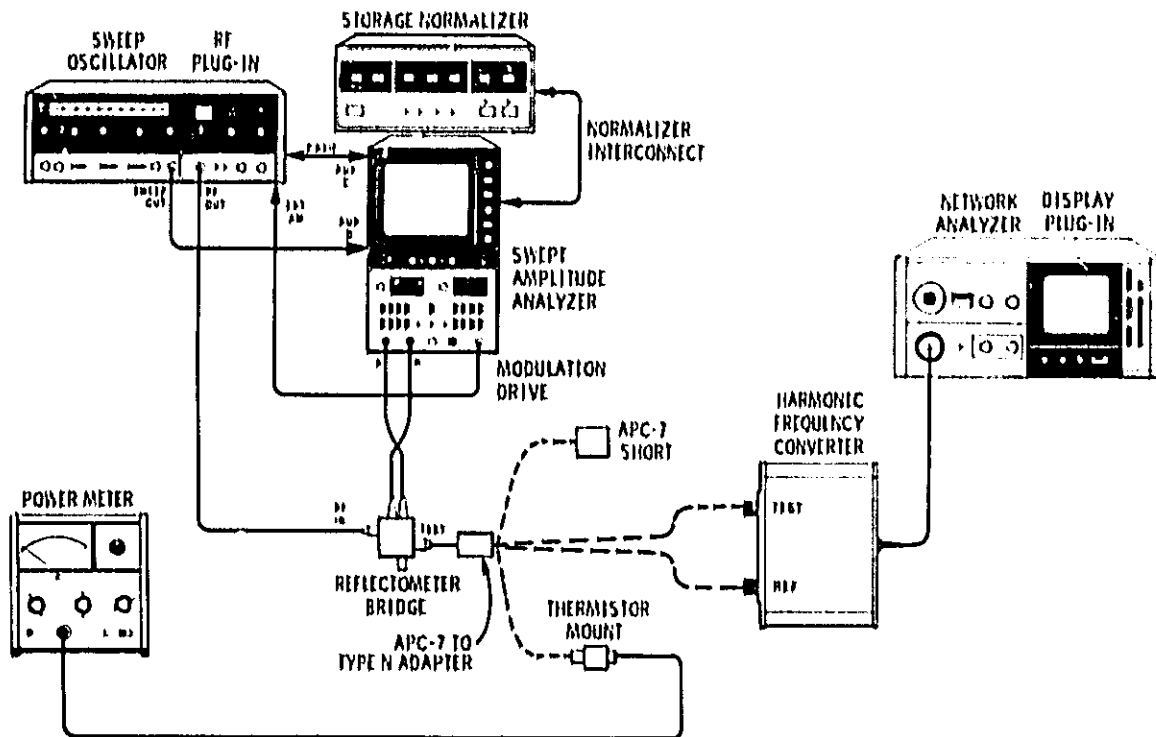

TEST EQUIPMENT: Items 1, 2, 7, 19 21, Table 1-8.

PROCEDURE

- Change equipment test setup as shown above using the 0.11 to 2.0 GHz RF plug-in with no connections made to the TEST port of the reflectometer bridge. Match 8750A Storage-Normalizer to 8755B. Refer to Secm III of 8750A Operating and Service Manual (HP Part Number 08750-90016).
- Set 8755B Channel 1 DISPLAY mode to REFERENCE POSITION and adjust CRT trace to center horizontal graticule line with 8750A in BYPASS mode.
- Set 8755B Channel 1 DISPLAY to A/R, dB/DIV to 5, REFERENCE LEVEL to zero, REFERENCE LEVEL VERNIER to ON, and adjust VERNIER for a CRT trace on center horizontal graticule line.

0.11 TO 2 GHz FREQUENCY RANGE

- Set signal source to sweep from 0.11 to 2 GHz.
- Connect power meter thermistor mount to adapter on TEST port of reflectometer bridge and set signal source RF output level for a -13 dBm indication on power meter.
- Remove thermistor mount and connect APC-7 short to TEST port of bridge.

PERFORMANCE TESTS

4-18. INPUT IMPEDANCE TEST (Cont'd)

- g. On 8750A, press CH 1, then INPUT, then STORE INPUT, then INPUT-MEM. This establishes reference on CRT display. If an 8750A is not available, draw the reference line on the CRT display with a grease pencil and take the difference between this line and the resulting trace in step "h" to determine return loss.
- h. Remove APC-7 short and connect 8411A TEST port and then REFERENCE port to TEST port of reflectometer bridge.
- i. The difference between the resulting CRT display and the reference established in step "g" should be > 14 dB (with a ± 0.8 dB uncertainty).

2 TO 6 GHz FREQUENCY RANGE

- j. Set signal source to sweep from 2 to 6 GHz and repeat steps "e" through "h".
- k. The difference between the resulting CRT display and the reference established in step "g" should be > 9.6 dB (with a ± 0.7 dB uncertainty).

6 TO 12.4 GHz FREQUENCY RANGE

- l. Set signal source to sweep from 6 to 12.4 GHz and repeat steps "e" through "h".
- m. The difference between the resulting CRT display and the reference established in step "g" should be > 6 dB (with a ± 1.0 dB uncertainty).

12.4 TO 18 GHz FREQUENCY RANGE (OPTION 018)

- n. Set signal source to sweep from 12.4 to 18 GHz and repeat steps "e" through "h".
- o. The difference between the resulting CRT display and the reference established in step "g" should be > 6 dB (with a ± 1.1 dB uncertainty).

Table 4-1. Performance Test Record (Sheet 1 of 2)

PARA. NO.	PROCEDURE	MIN.	INDICATION ACTUAL	MAX.
4-12	Power line voltage input Automatic tuning	90 Vac or 108 Vac or 198 Vac or 216 Vac Phase-lock	_____ _____ _____ _____	105 Vac or 126 Vac or 231 Vac or 252 Vac
4-13	Variation in reference channel of - 18 to - 35 dBm, 0.11 to 12.4 GHz and - 18 to - 25 dBm, 12.4 to 18 GHz (Option 018) produces constant output		_____ _____	Amplitude: min & max. 1.5 dB apart Phase: Min. & Max, 4 ° apart
4-14	TEST CHANNEL GAIN 10 dB/step Attenuators at setting: 10 dB 20 dB 30 dB 40 dB 50 dB 60 dB TEST CHANNEL GAIN 1 dB/step Attenuators at setting: 1 dB 2 dB 3 dB 4 dB 5 dB 6 dB 7 dB 8 dB 9 dB AMPL VERNIER range		_____ _____ _____ _____ _____ _____ _____	0(±0.1) dB 0(±0.2) dB 0(±0.2) dB 0(±0.2) dB 0(±0.2) dB 0(±0.2) dB ± volt-meter error ±0.1 dB of a 1-dB major scale division on meter, ± voltmeter error.
4-15	Test channel noise < - 75 dBm, 0.11 to 12.4 GHz < - 68 dBm, 12.4 to 18 GHz (Option 018)	- 75 dBm - 68 dBm	_____ _____	

Table 4-1. Performance Test Record (Sheet 2 of 2)

PARA. NO.	PROCEDURE	MIN.	INDICATION ACTUAL	MAX.
4-16	Test channel operates over - 10 to -75 dBm 0.11 to 12.4 GHz - 10 to -68 dBm 12.4 to 18 GHz (Option 018)	-75 dB -68 dBm	_____ _____	
4-17	Channel isolation > 65 dB in 0.11 to 6.0 GHz range, > 60 dB in 6.0 to 12.4 GHz range, and > 50 dB in 12.4 to 18 GHz range (Option 018)	65 dB (.11 to 6 GHz) 60 dB (6 to 12.4 GHz) 50 dB (12.4 to 18 GHz Option 018)	_____ _____ _____ _____	
4-18	SWR of 8411A REFERENCE and TEST ports, < 1.5 in 0.11 to 2 GHz range, < 2.0 in 2 to 6 GHz range, < 3.0 in 6 to 12.4 GHz range, and < 3.0 in 12.4 to 18 GHz range (Option 018). (Indication in return loss.)		<p style="text-align: center;">REFERENCE PORT</p> <p style="text-align: right;">- 14 dB (0.11 to 2.0 GHz)</p> <p style="text-align: right;">- 9.6 dB (2 to 6 GHz)</p> <p style="text-align: right;">- 6 dB (6 to 12.4 GHz)</p> <p style="text-align: right;">- 6 dB (12.4 to 18 GHz Option 018)</p> <p style="text-align: center;">TEST PORT</p> <p style="text-align: right;">- 14 dB (0.11 to 2.0 GHz)</p> <p style="text-align: right;">- 9.6 dB (2 to 6 GHz)</p> <p style="text-align: right;">- 6 dB (6 to 12.4 GHz)</p> <p style="text-align: right;">- 6 dB (12.4 to 18 GHz Option 018)</p>	<p>_____ _____ _____ _____ _____ _____ _____</p>

ADJUSTMENTS

SECTION V ADJUSTMENTS

5-1. INTRODUCTION

5-2. The procedures in this section provide adjustment instructions for the 8410B and 8411A. The adjustment procedure should not be performed as a routine maintenance procedure, but should only be used (1) after replacement of a part or component, (2) when the performance tests show that the specifications of Table 1-1 cannot be met, or (3) when instructed to do so in the troubleshooting procedure. Before attempting any adjustment, allow 30 minutes warm-up time for the 8410B and 8411A.

5-3. The procedure consists of adjusting variable controls or selecting the value of specific components. A list of controls and their functions is presented in Table 5-1. Table 5-2 is a list of factory-selected components. The procedure for selecting the correct values of each factory-selected component is referenced in the table. Table 5-3 gives HP Part Numbers for range of Factory Selected Components.

WARNING

Any service or adjustment performed with the covers removed should only be performed by qualified service personnel. A shock hazard exists with the covers removed.

5-4. TEST EQUIPMENT REQUIRED.

5-5. Test equipment required for each adjustment procedure is referenced at the bottom of the test setup and is listed in the Equipment List, Table 1-8. Test instruments other than the ones listed can be used, provided their performance equals or exceeds the Critical Specifications listed.

5-6. REPLACING FACTORY-SELECTED COMPONENTS.

5-7. The values of some components in the 8410B and 8411A are selected at the factory to provide particular electrical requirements. A list of Factory-Selected components is presented in Table 5-2. This table describes the function affected by the component, the range of values used, and the adjustment procedure for selecting the correct value. The recommended procedure for replacing a Factory-Selected part is as follows:

a. Try original value, then perform calibration test for that circuit.

b. If calibration test cannot be passed, try typical value listed in Table of Replaceable Parts, Table 6-3 or 6-4.

c. If calibration test still cannot be passed, perform adjustment procedure for that circuit using component values in the range given in Table 5-2, "RANGE OF VALUES" column.

Table 5-1. Alignment Controls

Reference Designator	Function Affected	Component Location Figure	Adjustment Procedure Paragraph
8410B			
A7R10	DC voltage from A7 to control VTO frequency, CW operation	8-56	5-15
A9R9	VTO Trigger Threshold	8-63	5-17
A9R17	Sweep Delay	8-63	5-17
A10A1R9	+ 20 Vdc	8-59	5-8
A10A1R22	- 20 Vdc and - 11 Vdc	8-59	5-8
A12L2	Phase change with change in input power	8-35	5-14
A13C7	Frequency of second I^2	8-41	5-11
A14L2	Phase change with change in input power	8-35	5-14
A18R2	Auto frequency range selection	8-65	5-18
8411A			
A4R3	Reference channel sampler bias balance and channel isolation	8-29	5-20
A4R5	Reference channel sampler bias, and channel tracking	8-29	5-20
A5C13	Channel isolation	8-29	5-22
A5R3	Test channel sampler bias balance and channel isolation	8-29	5-22
A5R5	Test channel sampler bias and channel tracking	8-29	5-20
A5R20	Test channel preamplifier gain	8-29	5-23
A5R21	Channel phase balance	8-29	5-23
A6R2	Phase lock loop gain	8-32	5-19 & 5-21
A6R6	Phase lock loop gain	8-32	5-21
A6R7	Phase lock loop gain	8-32	5-21
A6R8	Phase lock loop gain	8-32	5-21
A6R14	Power amplifier bias	8-32	5-20
A6R16	VTO upper frequency limit	8-32	5-19
A7R5	65 MHz adjust	8-32	5-19
A7R19	Low Frequency clamp adjust	8-32	5-19

Table 5-2. Factory Selected Components

Reference Designator	Function Affected	Range of Values	Component Location Figure	Adjustment Procedure Paragraph
8410B				
A5R3	Phase detector A static output level	8.25K - 23.7K	8-53	5-9
A5R6	Phase detector B static output level	8.25K - 23.7K	8-53	5-
A6C6	20.278 MHz Oscillator frequency	12-39 pF	8-53	5-11
A8R2	Triggering point of positive Schmitt trigger	68 - 100Ω	8-56	5-10
A8R39	Triggering point of negative Schmitt trigger	82 - 121Ω	8-56	5-10
A11C1	Phase relation of output signals	100 - 270 pF	8-47	5-16
A11C5	Test channel 278 kHz bandpass filter tuning	0 - 75 pF	8-47	5-16
A11C7	Phase relation of output signals	240 - 534 pF	8-47	5-16
A11P4	A11 circuit assembly gain	383 - 464Ω	8-47	5-16
A15R21	AGC loop gain, 2nd mixer output	2.15K - 5.6KΩ	8-44	5-12
A15R32	M1 OPERATE region	61.9K to 75KΩ	8-44	5-12
A16C10	Reference channel 278-kHz bandpass filter tuning	0 - 680 pF	8-38	5-13
A16R13	A16 circuit assembly gain	1.1K - 1.62K	8-38	5-13
8411A				
A4R14	Reference channel preamplifier gain	75 - 133Ω	8-29	5-20
A5R8	Test channel preamplifier gain	287Ω to open	8-29	5-23
A6R12	Phase lock loop gain	50 - 90.7Ω	8-32	5-21
A7C13	Phase lock loop gain	14 pF to open	8-32	5-21

Table 5-3. Listing of Available Factory Selected Components (1 of 2)

RESISTORS					
Value (Ω)	HP Part Number	Value (Ω)	HP Part Number	Value (Ω)	HP Part Number
10.0	0757-0346	562	0757-0417	31.6K	0698-3160
11.0	0757-0378	619	0757-0418	34.8K	0757-0123
12.1	0757-0379	681	0757-0419	38.3K	0698-3161
13.3	0698-3427	750	0757-0420	42.2K	0698-3450
14.7	0698-3428	825	0757-0421	46.4K	0698-3162
16.2	0757-0382	909	0757-0422	51.1K	0757-0458
17.8	0757-0294	1.0K	0757-0280	56.2K	0757-0459
19.6	0698-3429	1.1K	0757-0424	61.9K	0757-0460
21.5	0698-3430	1.21K	0757-0274	68.1K	0757-0461
23.7	0698-3431	1.33K	0757-0317	75.0K	0757-0462
26.1	0698-3432	1.47K	0757-1094	82.5K	0757-0463
28.7	0698-3433	1.62K	0757-0428	90.9K	0757-0464
31.6	0757-0180	1.78K	0757-0278	100K	0757-0465
34.8	0698-3434	1.96K	0698-0083	110K	0757-0466
38.3	0698-3435	2.15K	0698-0084	121K	0757-0467
42.2	0757-0316	2.37K	0698-3150	133K	0698-3451
46.4	0698-4037	2.61K	0698-0085	147K	0698-3452
51.1	0757-0394	2.87K	0698-3151	162K	0757-0470
56.2	0757-0395	3.16K	0757-0279	178K	0698-3243
61.9	0757-0270	3.48K	0698-3152	196K	0698-3453
68.1	0757-0397	3.83K	0698-3153	215K	0698-3454
75.0	0757-0398	4.22K	0698-3154	237K	0698-3266
82.5	0757-0399	4.64K	0698-3155	261K	0698-3455
90.0	0757-0400	5.11K	0757-0438	287K	0698-3456
100	0757-0401	5.62K	0757-0200	316K	0698-3457
110	0757-0402	6.19K	0757-0290	348K	0698-3458
121	0757-0403	6.81K	0757-0439	383K	0698-3459
133	0698-3437	7.50K	0757-0440	422K	0698-3460
147	0698-3438	8.25K	0757-0441	46.4K	0698-3260
162	0757-0405	9.09K	0757-0288	51.1K	0757-0135
178	0698-3439	10.0K	0757-0442	56.2K	0757-0868
196	0698-3440	11.0K	0757-0443	61.9K	0757-0136
215	0698-3441	12.1K	0757-0444	68.1K	0757-0869
237	0698-3442	13.3K	0757-0289	750K	0757-0137
261	0698-3132	14.7K	0698-3156	825K	0757-0870
287	0698-3443	16.2K	0757-0447	909K	0757-0138
316	0698-3444	17.8K	0698-3136	1M	0757-0059
348	0698-3445	19.6K	0698-3157	1.1M	0757-0139
383	0698-3446	21.5K	0757-0199	1.21M	0757-0871
422	0698-3447	23.7K	0698-3158	1.33M	0757-0194
464	0698-0082	26.1K	0698-3159	1.47M	0698-3464
511	0757-0416	28.7K	0698-3449		

Table 5-3. Listing of Available Factory Selected Components (2 of 2)

CAPACITORS					
Value (pF)	HP Part Number	Value (pF)	HP Part Number	Value (pF)	HP Part Number
9.1	0160-2256	39	0140-0190	180	0140-0197
10.0	0160-2257	43	0160-2200	200	0140-0198
11.0	0160-2258	47	0160-2307	220	0160-0134
12.0	0160-2259	51	0160-2201	240	0140-0199
13.0	0160-2260	56	0140-0191	270	0140-0210
15.0	0160-2261	62	0140-0205	300	0160-2207
16.0	0160-2262	68	0140-0192	330	0160-2208
18.0	0140-2263	75	0160-2202	360	0160-2209
20.0	0160-2264	82	0140-0193	390	0140-0200
22.0	0160-2265	91	0160-2203	430	0160-0939
24.0	0160-2266	100	0160-2204	470	0160-3533
27	0160-2306	110	0140-0194	510	0160-3534
30	0160-2199	120	0160-2205	560	0160-3535
33	0160-2150	130	0140-0195	620	0160-3536
36	0160-2308	150	0140-0196	680	0160-3537
		160	0160-2206		

ADJUSTMENTS

NOTE

Before any adjustments are made, allow 30 minutes warmup to obtain normal operating temperature on all components.

5-B, 8410B POWER SUPPLY ASSEMBLY A10A1.


ADJUSTMENTS:

Adjust A10A1R9 and A10A1R22.

DESCRIPTION:

The 8410B +20 and -20 volt power supplies are each measured with a dc voltmeter and adjusted to ± 20.00 volts. The ac ripple is monitored on an oscilloscope to check for proper filtering.

TEST SETUP:

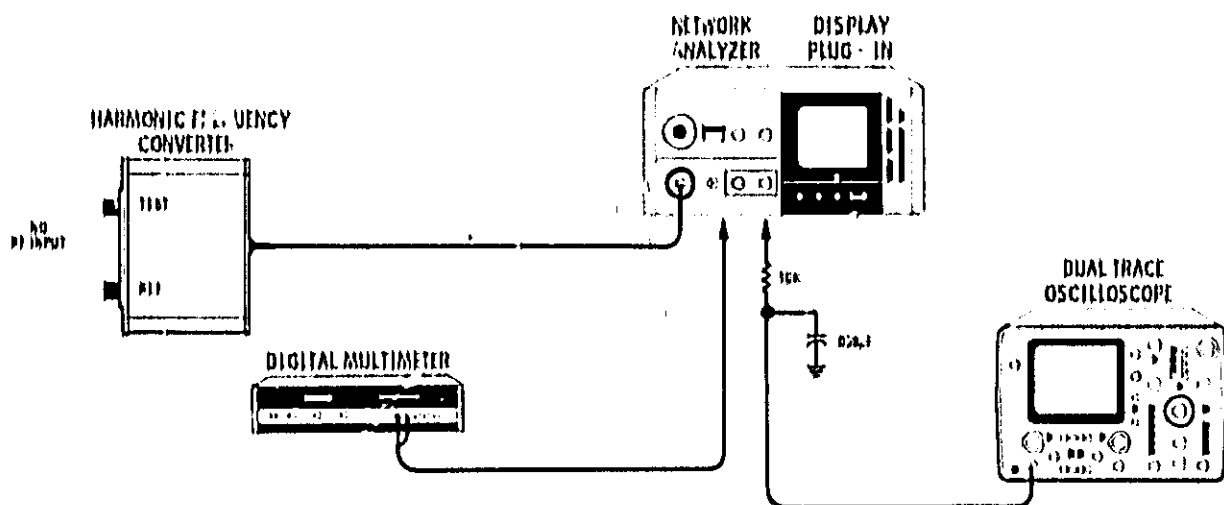

TEST EQUIPMENT: Items 5, 10, and 11, Table 1-8.

PROCEDURE:

- Connect equipment as shown in test setup above. Connect a 400 Hz low-pass filter consisting of a 10 Kilohm resistor and a 0.039 μ F capacitor to oscilloscope input as shown in test setup.
- Remove 8410B top cover.
- Turn on 8410B power.
- Connect oscilloscope and dc voltmeter to test points below and make adjustments if necessary.

NOTE

Power supply voltages should not be adjusted unless very accurate measurement indicates that they are out of tolerance.

ADJUSTMENTS

5-8. 8410B POWER SUPPLY ASSEMBLY A10A1. (Cont'd)

Test Point	DC Voltmeter Indication	Oscilloscope Waveform	Adjustment
A10A1TP2	-20.00 ± 0.01 Vdc	5 mV p-p max.	A10A1R22*
A10A1TP1	$+20.00 \pm 0.01$ Vdc	5 mV p-p max.	A10A1R9*
A10A1TP3	-11.00 ± 0.5 Vdc	5 mV p-p max.	none

*If either supply has to be adjusted, set as close as possible to ± 20.00 V.

5-9. 8410B PHASE DETECTOR ASSEMBLY A5.


ADJUSTMENTS:

Select A5R3 and A5R6

DESCRIPTION:

The phase error signals at the output of phase detector assembly A5 (A5TP1 and A5TP3) should be zero with no RF signal applied to the 8410B input from the 8411A. The phase error signals from phase detectors A and B should be zero Vdc and are checked at the base of emitter followers A5Q1 and A5Q2. The zero Vdc signal produces a negative voltage at the emitters of A5Q1 and A5Q2. The emitters are connected to output test points A5TP1 and A5TP3 through diodes A5CR9 and A5CR10 which offset the negative voltage back to zero. Conduction through the diodes is adjusted to obtain zero Vdc output by selecting the resistance values of A5R3 and A5R6.

TEST SETUP:

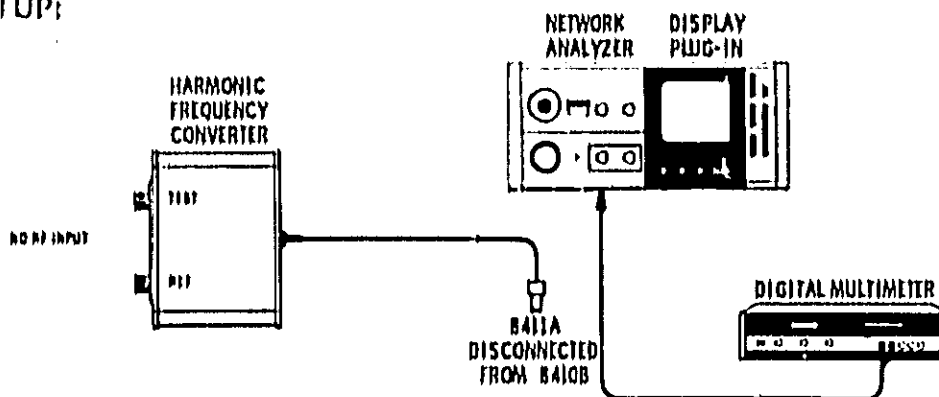

TEST EQUIPMENT: Items 10 and 11, Table 1-8.

PROCEDURE:

Select A5R3

- Connect the voltmeter to A5TP1. If indication is zero ± 50 mV phase detector A is operating correctly and no adjustment of A5R3 is necessary; proceed to step d and check phase detector B.
- Connect the voltmeter to A5Q1 base. If indication is zero ± 50 mV, proceed to step c. If indication is not zero ± 50 mV, troubleshoot phase detector A using procedures in Figure 8-52.

ADJUSTMENTS

5-9. 8410B PHASE DETECTOR ASSEMBLY A5 (Cont'd)

- c. Connect dc voltmeter to A5TP1 and select the value of A5R3 for zero ± 50 mV indication. Typical range of values for A5R3 is 8250 ohms to 23.7 Kilohms.

Select A5R6


- d. Connect dc voltmeter to A5TP3. If indication is zero ± 50 mV, no adjustment of A5R6 is necessary and adjustment of phase detector assembly A5 is complete. If indication is not zero ± 50 mV, proceed to step e.
- e. Connect dc voltmeter to A5Q2 base. If indication is zero ± 50 mV, proceed to step f. If indication is not zero ± 50 mV, troubleshoot phase detector B using procedures in Figure 8-52.
- f. Connect dc voltmeter to A5TP3 and select the value of A5R6 for zero ± 50 mV indication. Typical range of values for A5R6 is 8250 ohms to 23.7 Kilohms.

5-10. 8410B SEARCH ASSEMBLY A8.**ADJUSTMENTS:**

Select A8R2 and A8R39

DESCRIPTION:

Negative Schmitt trigger A8Q8-A8Q9 should trigger and reset on a phase-error signal between -150 mV and -200 mV. The trigger and reset points are positioned in this range by selecting the value of A8R39. Decreasing resistance of A8R39 shifts the trigger and reset points in the negative direction. Positive Schmitt trigger A8Q1-A8Q2 should trigger and reset on a phase-error signal between $+135$ and $+215$ mV. The trigger and reset points are positioned in this range by selecting the value of A8R2. Decreasing resistance of A8R2 shifts the trigger and reset points in the positive direction.

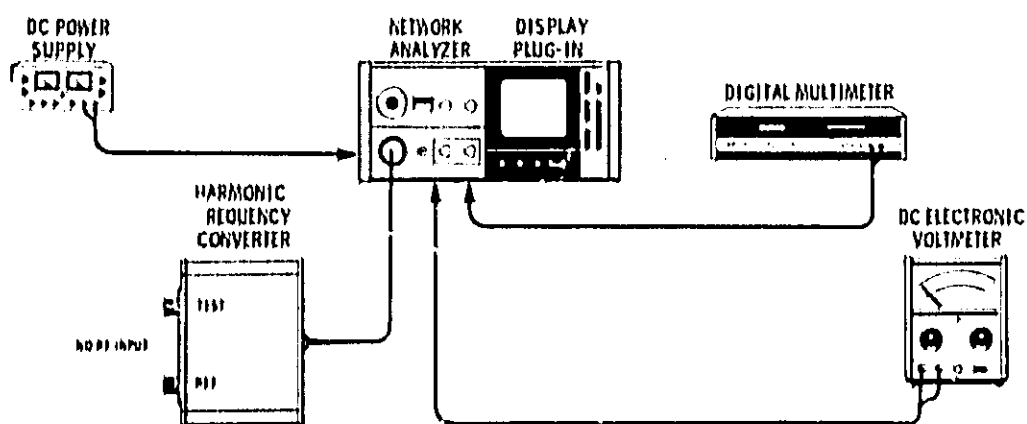TEST SETUP:

TEST EQUIPMENT: Items 9, 10, 11, and 12, Table 1-8.

ADJUSTMENTS

5-10. 8410B SEARCH ASSEMBLY A8 (Cont'd)**PROCEDURE:**

- a. Set external power supply to zero Vdc. Connect negative lead to A8TP1 and positive lead to ground. Connect digital voltmeter between A8TP1 and ground.
- b. Connect dc voltmeter between A8TP5 and ground.
- c. Slowly adjust power supply from zero to -250 mV and back to zero. Note trigger and reset points of Schmitt trigger on digital voltmeter by observing change on dc voltmeter. Dc voltmeter readings should range from about -3 Vdc to about -18 Vdc and back to -3 Vdc. If both trigger and reset points are in the range of -150 mV to -200 mV, no selection of A8R39 is necessary; proceed to step e. If both trigger and reset points are not in the range of -150 mV to -200 mV, selection of A8R39 is necessary; proceed to step d.
- d. Select value of A8R39 for both trigger and reset points in the range of -150 mV to -200 mV. Typical range of values for A8R39 is 82 to 121 ohms. Decreasing resistance of A8R39 shifts trigger point in the negative direction.
- e. Set power supply to zero Vdc. Connect positive lead to A8TP1 and negative lead to ground. Connect digital voltmeter between A8TP1 and ground.
- f. Connect dc voltmeter between A8TP2 and ground.
- g. Slowly adjust power supply from zero to $+250$ mV and back to zero. Note trigger and circuit reset points of Schmitt trigger on digital voltmeter by observing change on dc voltmeter. Dc voltmeter readings should range from about $+9$ Vdc to about $+19$ Vdc and back to $+9$ Vdc. If both trigger and reset points are in the range of $+135$ mV to $+215$ mV, no selection of A8R2 is necessary; alignment procedure for search assembly A8 is complete. If both trigger and reset points are not $+135$ mV to $+215$ mV, selection of A8R2 is necessary; proceed to step h.
- h. Select value of A8R2 for both trigger and reset points in the range of $+135$ mV to $+215$ mV. Typical range of values for A8R2 is 68 to 100 ohms. Decreasing resistance of A8R2 shifts trigger points in the positive direction.

5-11. 8410B 20-MHz OSCILLATOR ASSEMBLY A13.**ADJUSTMENTS:**

Adjust A13C7 and Select A6C6.


DESCRIPTION:

With the 8410B phase-locked, the frequency of the 20-MHz second local oscillator is adjusted to produce a second IF of 277.778 kHz ± 0.077 kHz. If necessary, the 20.278 MHz oscillator in A6 is adjusted in frequency.

ADJUSTMENTS

5-11. 8410B 20 MHz OSCILLATOR ASSEMBLY A13

TEST SETUP:

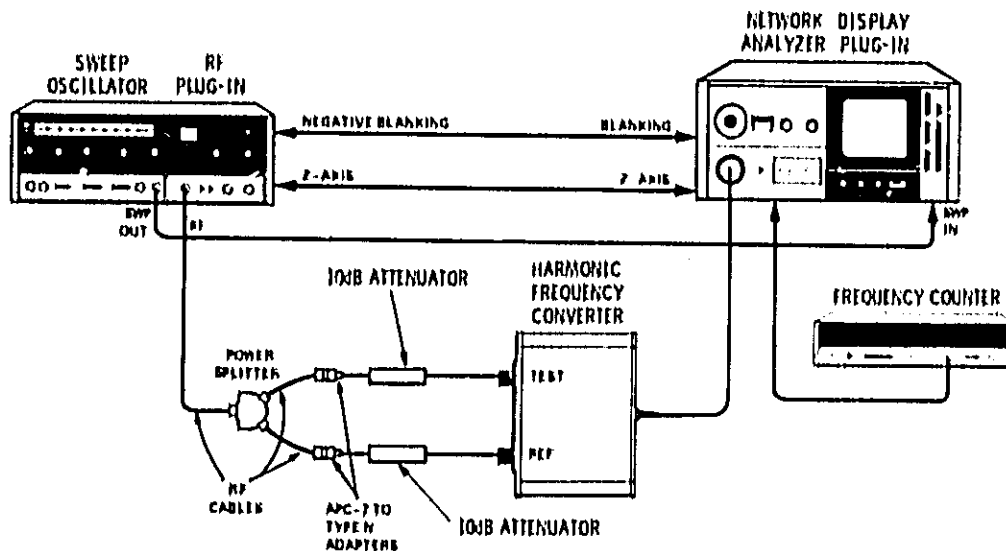

TEST EQUIPMENT: Items 1, 8, 10, 14, 16, 20, 23, Table 1-8.

PROCEDURE:

- a. Phase-lock 8410B as follows:
 1. Set signal source for single-frequency CW operation, any frequency from 10 MHz to 12.4 GHz (to 18 GHz if Option 018).
 2. Set FREQ RANGE switch on 8410B to a position that includes the signal source frequency.
 3. Set SWEEP STABILITY control to the CW detent position.
 4. Adjust RF power from the signal source for REF CHANNEL LEVEL meter indication in the OPERATE range.
 5. Set 8412 MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.
- b. Connect frequency counter to 8410B REF CHAN OUTPUT.
- c. Adjust A13C7 for a frequency counter indication of $277.778 \text{ kHz} \pm 0.077 \text{ kHz}$. If the frequency cannot be obtained, select a value of A5C6 that gives the correct frequency. The value of A6C6 is between 12 and 39 pf.
- d. Check phase balance, paragraph 5-16 of this procedure.

ADJUSTMENTS

5-12. 8410B AGC AMPLIFIER ASSEMBLY A16.


ADJUSTMENTS:

Select A15R21 and A15R32.

DESCRIPTION:

Loop gain through the AGC circuit is adjusted by monitoring overall gain through the reference channel IF amplifier A14. With the 8410B phase-locked, a reference signal level is set at the input of A14. The value of A15R21 is then selected to produce a specific signal amplitude at the outputs of A12 and A14.

TEST SETUP:

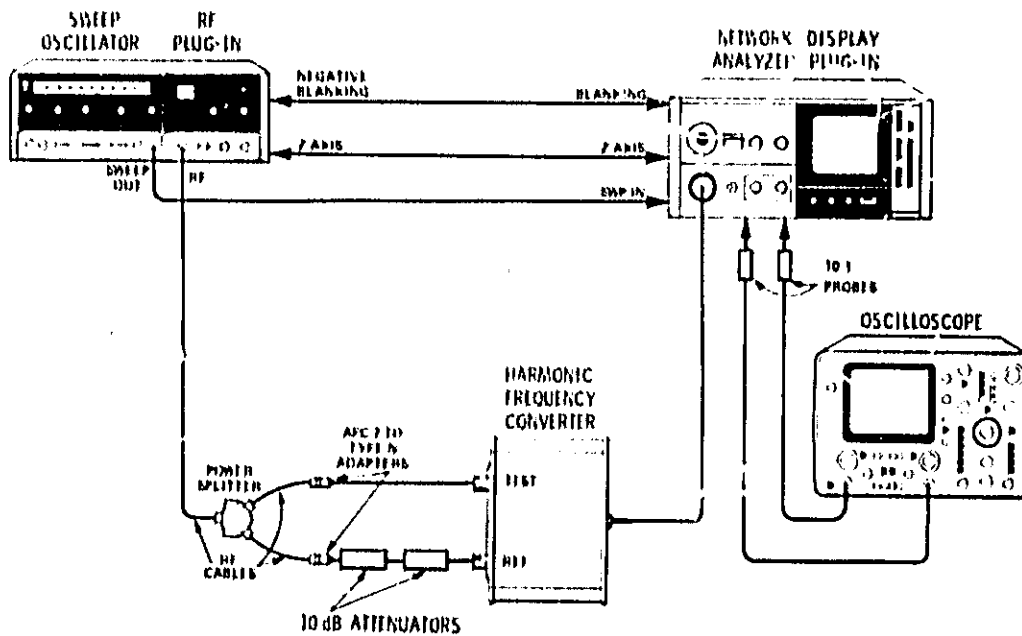

TEST EQUIPMENT: Items 1, 5, 10, 14, 16, 20, 23, Table 1-8.

ADJUSTMENTS

5-12. 8410B AGC AMPLIFIER A15**PROCEDURE:**

- a. Phase-lock 8410B as follows:
 1. Set signal source for single-frequency CW operation, any frequency from 110 MHz to 12.4 GHz (to 18 GHz if Option 018).
 2. Set **FREQ RANGE** switch on 8410B to a position that includes the signal source frequency.
 3. Set **SWEEP STABILITY** control to the CW detent position.
 4. Adjust RF power from the signal source for **REF CHANNEL LEVEL** meter indication in the **OPERATE** range.
 5. Set 8412A **MODE** Switch to **PHASE** and **DEG/DIV** Switch to 90. Adjust the **PHASE VERNIER** control. The dot on the CRT should be stable and move smoothly in a vertical direction.
 - b. Connect oscilloscope X10 divider probe to A14TP4.
 - c. Adjust signal source output level for 100 mV \pm 5 mV peak to peak at oscilloscope.
 - d. Connect oscilloscope X10 divider probes to A12TP1 and A14TP1.
 - e. Select value of resistor A15R21 which produces a 220 mV \pm 30 mV peak-to-trough sine-wave signal on oscilloscope at both test points. Typical range of values for A15R21 is 2.15 Kiloohm to 5.62 Kiloohm.
 - f. Check the **REF. CHANNEL LEVEL** meter (M1) indication. Select values of resistor A15K32 which produces an indication at the high end of **OPERATE** region. Typical range of values for A15K32 is 61.9K to 75K ohms.
-

5-13. 8410B REFERENCE 278-kHz AMPLIFIER ASSEMBLY A16.**ADJUSTMENTS:**

Select A16C10 and A16R13.


DESCRIPTION:

Bandpass filter :: The output of A16 is adjusted for center frequency of 278 kHz by selecting the value of A16C10. Gain through A16 is adjusted by selecting the value of A16R13. Gain is determined by comparing a known 278 kHz signal applied to A16 input to the signal amplitude at the output of A16.

ADJUSTMENTS

5-13. 8410B REFERENCE 278-kHz AMPLIFIER ASSEMBLY A16. (Cont'd)

TEST SETUP

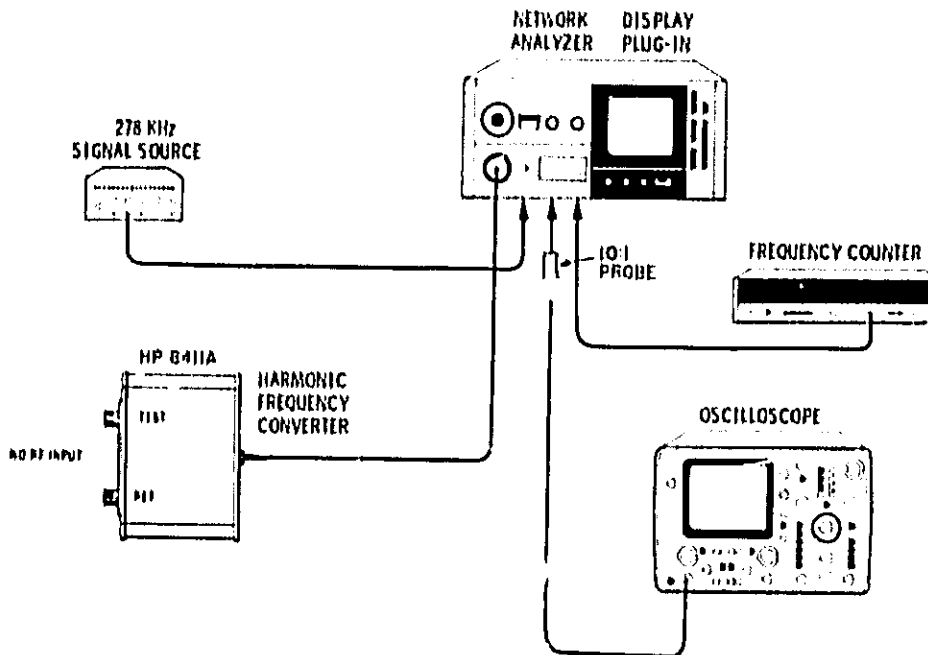

TEST EQUIPMENT: Items 5, 8, 10, and 13, Table 1-8.

PROCEDURE:

- Remove A12 and A14 circuit board assemblies. Set 8410B PHASE VERNIER control to mid position.
- Connect 278 kHz signal source and oscilloscope to A16TP1. Adjust signal source output to 220 mV peak to peak as displayed on oscilloscope.
- Connect oscilloscope to A16TP3, and frequency counter to rear-panel REF CHAN OUT connector.
- Adjust signal source through 278 kHz and note if maximum signal on oscilloscope occurs at 278 kHz ± 2 kHz. If not, select the value of A16C10 for maximum signal at 278 kHz ± 2 kHz. Typical range of values for A16C10 is zero to 680 pF.
- Check if signal amplitude at A16TP3 is 2.3 volts ± 0.3 volts peak to peak. If not, select the value of A16R13 for correct amplitude. Typical range of values for A16R13 is 1.1 Kiloohm to 1.62 Kiloohm.
- Disconnect signal source and reinstall A12 and A14 circuit board assemblies.

ADJUSTMENTS

5-14. 8410B CHANNEL PHASE VARIATION OVER AGC RANGE.


ADJUSTMENTS

Adjust A12L2 and A14L2.

DESCRIPTION:

The input RF signal level at the 8411A is Varied across the AGC range and A14L2 and A12L2 are adjusted for minimum phase change over the AGC range.

TEST SETUP:

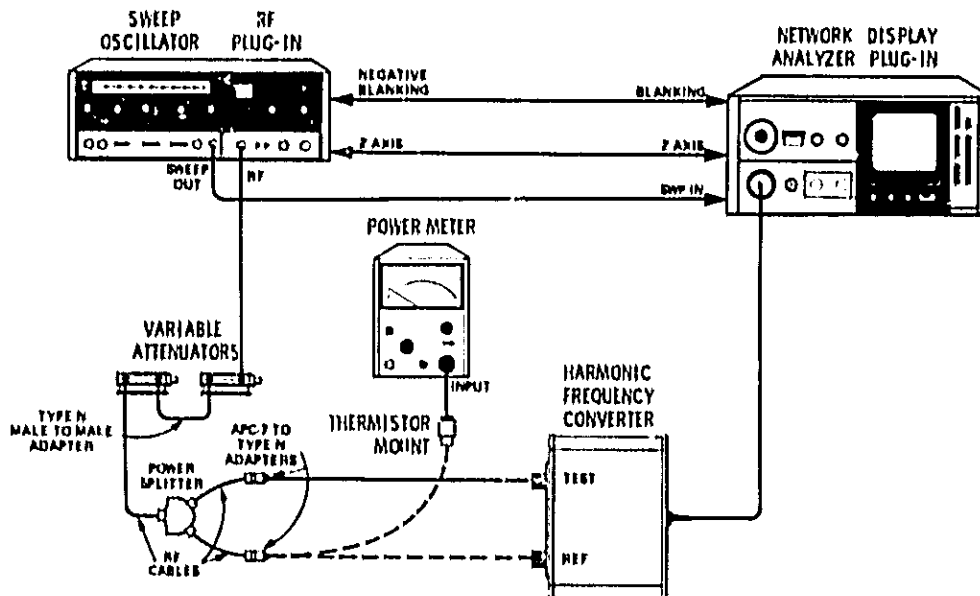

TEST EQUIPMENT: Items 1, 2, 10, 14, 20, 23, 24, 26, 27, 28, Table 1-8.

PROCEDURE:

- a. Change equipment test setup as shown above with power meter thermistor mount connected to cable from power splitter.
- b. Set signal source to CW mode and any frequency between 110 MHz and 12.4 GHz.
- c. Set 1 dB/step variable attenuator to zero dB and adjust output level of signal source and 10 dB/step variable attenuator for -18 dBm indication on power meter.
- d. Disconnect thermistor mount from cable to power splitter and connect 8411A REFERENCE port to cable.
- e. Check for 8410B phase-lock as follows:
 1. Set 8410B FREQ RANGE switch to include signal source frequency and SWEEP STABILITY control to CW detent position.

ADJUSTMENTS

5-14. 8410B CHANNEL PHASE VARIATION OVER AGC RANGE (Cont'd)

2. Set 8412A MODE Switch to PHASE and DEG/DIV Switch to 90. Adjust the PHASE VERNIER control. The dot on the CRT should be stable and move smoothly in a vertical direction.
- f. Set 8412A DEG/DIV Switch to 1.0 and position CRT dot to center horizontal graticule line with 8410B PHASE VERNIER control.
- g. Slowly insert 17 dB of attenuation with variable attenuators while observing CRT dot on 8412A display. Adjust A12L2 and A14L2 for minimum phase change across AGC range.

5-15. 8410B SWEEP STABILITY CIRCUIT IN CW MODE.


ADJUSTMENT:

Adjust A7R10.

DESCRIPTION:

In CW operation, the SWEEP STABILITY control is set to CW position, placing a fixed voltage on the 8411A VTO, centering the VTO frequency for proper search mode. A7R10 is adjusted for a VTO control voltage of +11.1 Vdc at A7TP6.

TEST SETUP:

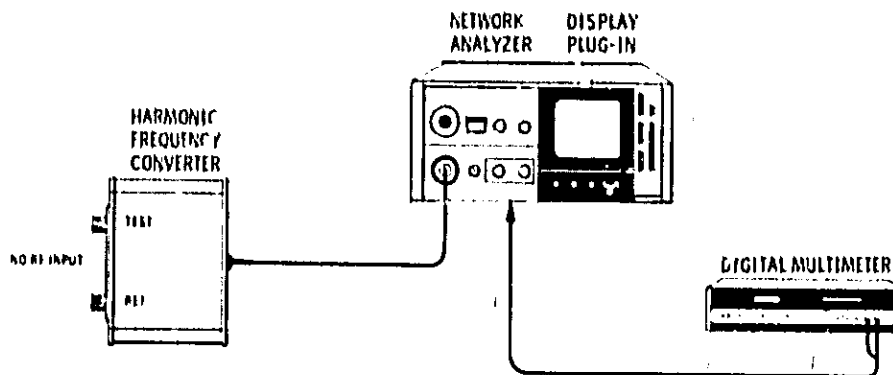

TEST EQUIPMENT: Items 10 and 11, Table 1-8.

PROCEDURE:

- a. Connect dc voltmeter to 8410B-A7TP6.
- b. Set FREQ RANGE, switch to 8.0 to 16.0 GHz.
- c. Set SWEEP STABILITY control to CW detent position.
- d. Adjust A7R10 for +11.1 Vdc \pm 0.01 Vdc indication on dc voltmeter.

ADJUSTMENTS

5-16. 8410B AMPLITUDE ATTENUATOR AMPLIFIER ASSEMBLY A11.

ADJUSTMENTS:


Select A11C1, A11C5, A11C7, and A11R4.

DESCRIPTION:

The 278 kHz bandpass filter in A11 is adjusted by selecting the value of A11C5. Gain through A11 is adjusted by selecting the value of A11R4.

With in-phase signals applied to the 8410B and with the PHASE VERNIER control at mid-range, the output of the test channel should lead the reference channel by +50 degrees. The +50 degree phase difference is adjusted by selecting the values of A11C1 and A11C7.

TEST SETUP:

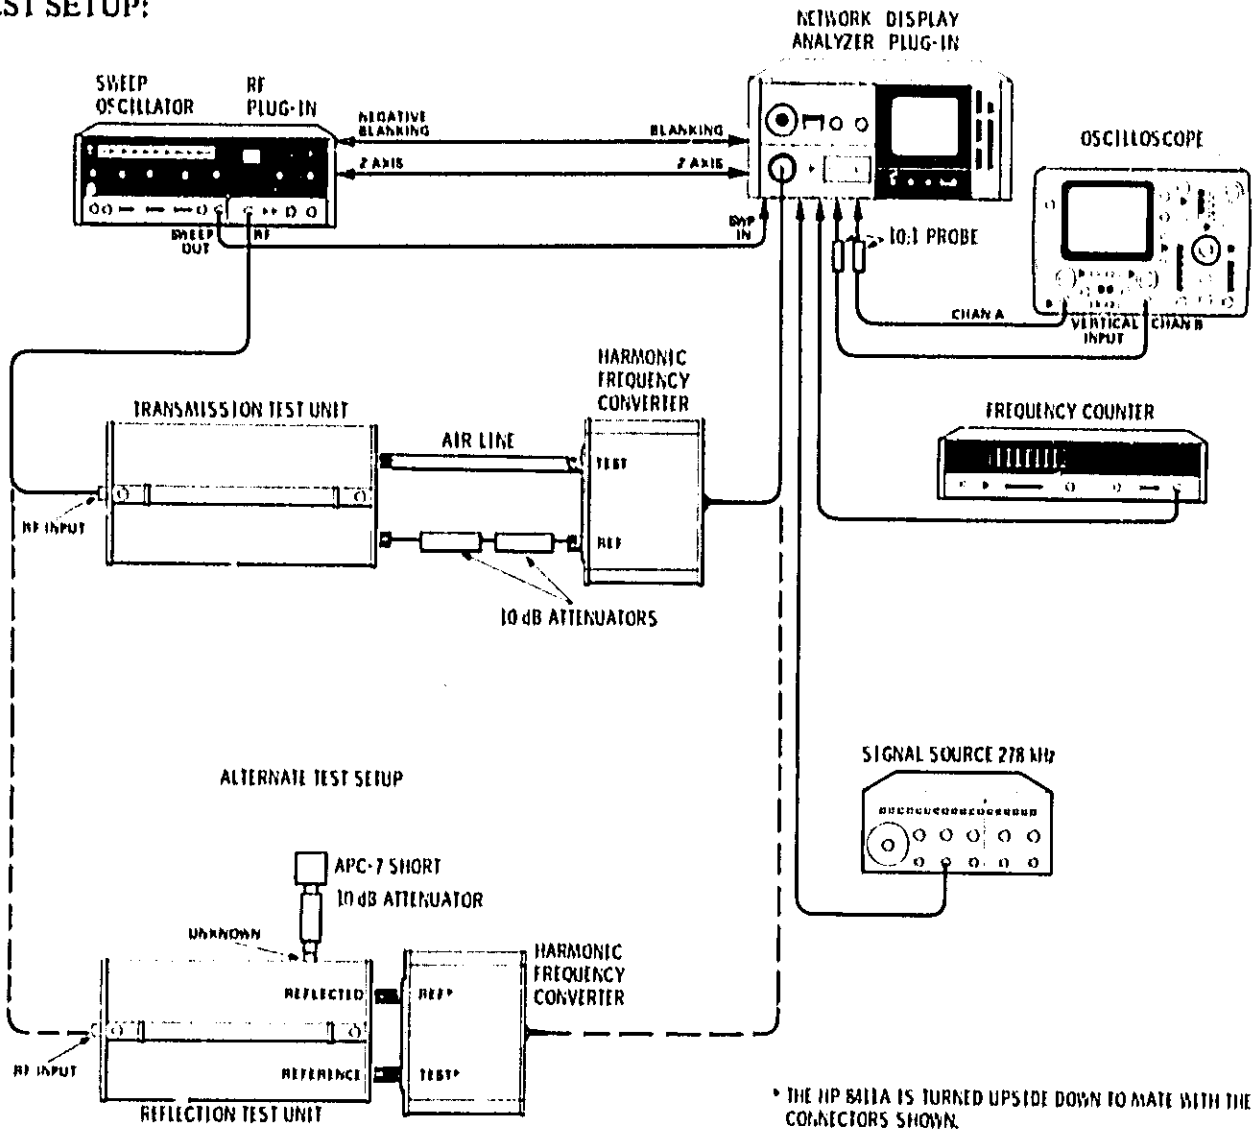

TEST EQUIPMENT: Items 1, 4, 5, 8, 10, 13, 16, 17, 21, 24, Table I-8.

ADJUSTMENTS

5-16. 8410B AMPLITUDE ATTENUATOR AMPLIFIER ASSEMBLY A11. (Cont'd)**PROCEDURE:**

- a. Phase lock 8410B as follows:
 1. Set signal source for single-frequency CW operation and frequency from 110 MHz to 12.4 GHz (to 18 GHz if Option 018).
 2. Set **FREQ RANGE** switch on 8410B to a position that includes the signal source frequency.
 3. Set **SWEEP STABILITY** control to CW position.
 4. Adjust RF power from the signal source for **REF CHANNEL LEVEL** meter indication in the **OPERATE** range.
 5. Set 8412A **MODE** Switch to **PHASE** and **DEG/DIV** Switch to 90. Adjust the **PHASE VERNIER** control. The dot on the CRT should be stable and move smoothly in a vertical direction.

Tune 278-kHz Bandpass Filter

- b. Remove A12 circuit board assembly.
- c. Connect 278-kHz signal source and oscilloscope to A11TP1. Adjust signal source to 220 mV \pm 5 mV peak to peak as displayed on oscilloscope.
- d. Connect oscilloscope 10:1 probe to A11TP3, and connect frequency counter to rear-panel **TEST CHAN OUTPUT**. Set **TEST CHANNEL GAIN** and **AMPL VERNIER** controls for sufficient signal to operate counter.
- e. Adjust signal source through 278 kHz and note if maximum signal on oscilloscope occurs at 278 kHz \pm 2 kHz. If not, select the value of A11C5 for maximum signal at 278 kHz. Typical range of values for A11C5 is zero to 75 pF.

Adjust Gain through A11.

- f. Check if signal amplitude at A11TP3 is 10 volts \pm 1 volt peak to peak. If not, select the value of A11R4 for correct amplitude. Typical range of values for A11R4 is 383 to 464 ohms.
- g. Disconnect signal source and reinstall A12 Circuit Board Assembly.

Adjust Phase Shift through A11.

- h. Connect 10:1 probes of dual trace oscilloscope to 8410B at A12TP4 and A14TP4.
 - i. Adjust 8740A **REFERENCE PLANE EXTENSION** to superimpose the two waveforms on the oscilloscope.
 - j. Set the **PHASE VERNIER** control to mid-range as follows:
 1. Turn **PHASE VERNIER** to maximum counterclockwise position and note phase indication on 8412A.
 2. Turn **PHASE VERNIER** to maximum clockwise position and note phase indication on 8412A.
 3. Set **PHASE VERNIER** for phase indication on 8412A midway between the points noted in steps (1) and (2) above.
 - k. Phase indication on 8412A should be +50 degrees \pm 15 degrees. If not, select the values of A11C1 and A11C7 for indication of +50 degrees \pm 15 degrees. Typical range of values for A11C1 is 100 to 270 pF, and for A11C7 is 240 to 360 pF.
 - l. Recheck gain by performing steps b through g.
-

ADJUSTMENTS

5-17. 8410B AUTOMATIC CONTROL ASSEMBLY A9.

ADJUSTMENTS:


Adjust A9R9 and A9R17.

DESCRIPTION:

The VTO Trigger Threshold (A9R9) is adjusted to ensure the automatic relocking cycle is triggered when the 8411A VTO reaches the upper limits of frequency range.

The Sweep Delay is adjusted to give the 8410B enough time to stabilize after phase locking.

TEST SETUP:

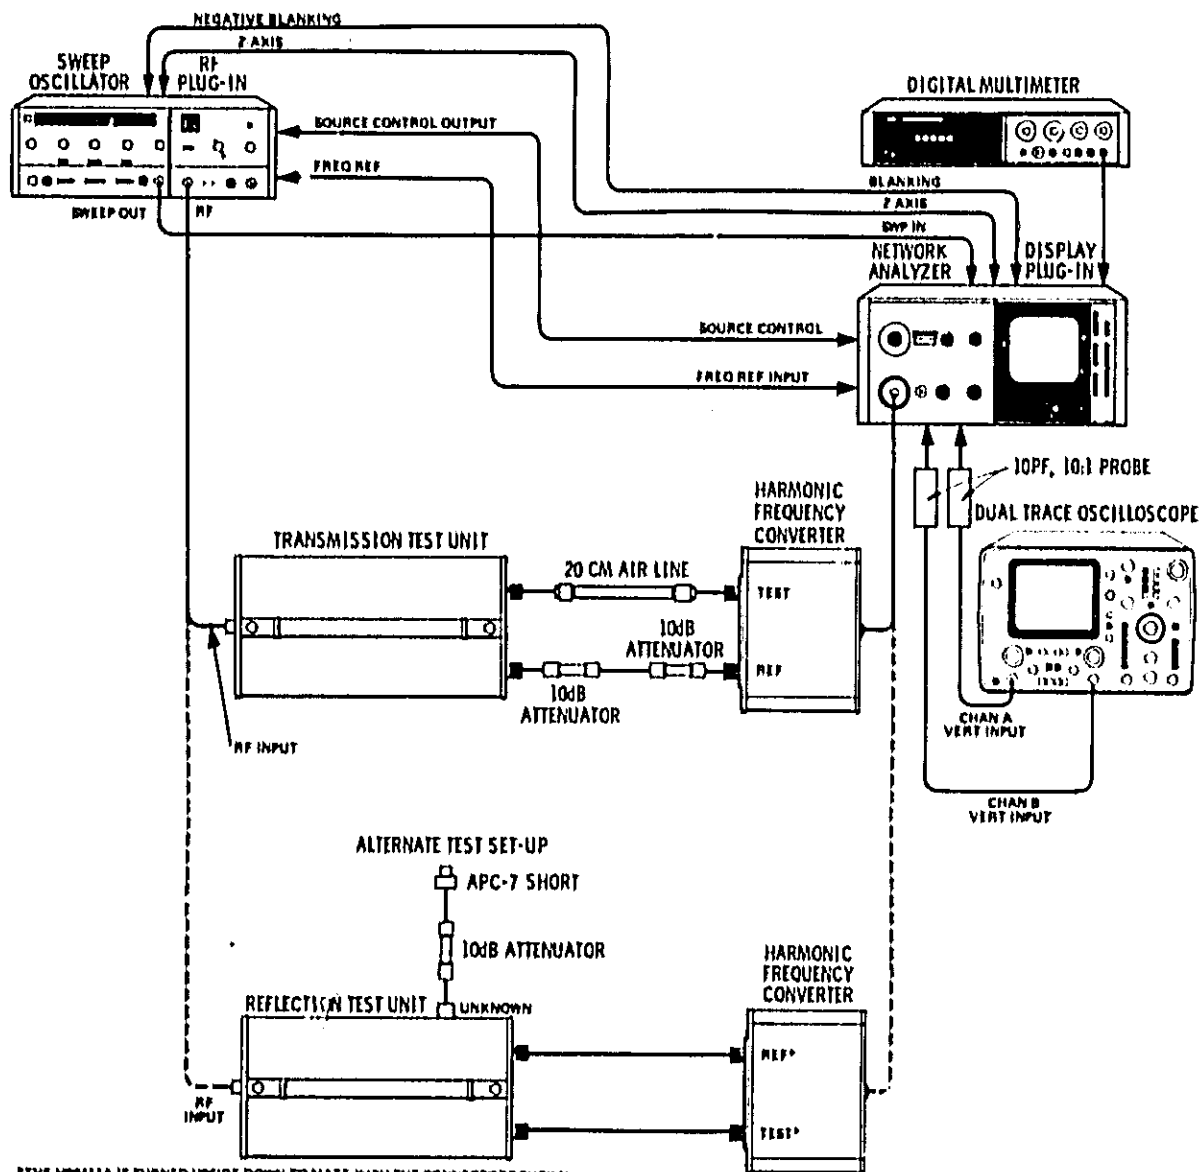

TEST EQUIPMENT: Items 1, 4, 5, 10, 11, 16, 17, 21, and 25, Table 1-8.

ADJUSTMENTS

5-17. 8410B AUTOMATIC CONTROL ASSEMBLY A9 (Cont'd)**PROCEDURE:**

- a. Connect DVM between A9TP1 and chassis ground. Adjust VTO trigger threshold THR (A9R9) for $11.10 \text{ Vdc} \pm 0.01 \text{ Vdc}$.
 - b. Phase lock 8410B as follows:
 1. Set sweep oscillator to sweep over less than one octave band. (For example 2.5 GHz to 3.5 GHz).
 2. Set **FREQ RANGE (GHz)** switch on 8410B to **AUTO** position.
 3. With the sweep oscillator set to a slow sweep time, adjust RF power from the sweep oscillator for **REF CHANNEL LEVEL** meter indication in the middle of the **OPERATE** range. Reset sweep time to a faster sweep.
 4. Set **SWEEP STABILITY** for best display on 8412A.
 5. Adjust 8410B **PHASE VERNIER** control; phase indication on 8412A should change smoothly, indicating the 8410B is tracking properly.
 - c. Connect Channel A probe of oscilloscope to 8410B-A9TP2 and Channel B probe to A9TP3. Set vertical sensitivity of oscilloscope to 5V/DIV and horizontal to 0.2 ms/DIV . Set vertical display of oscilloscope to **A+B** and trigger to **internal A** with positive slope. Set oscilloscope trigger level and 8410B **SWEEP STABILITY** controls for a stable trace.
 - d. Adjust Sweep Delay **DLY** (A9R17) for a positive pulse of $1.6 \text{ ms} \pm 0.1 \text{ ms}$ duration.
-

5-18. 8410B A/D CONVERTER A13**ADJUSTMENT:**

Adjust A18R2.

DESCRIPTION:

The frequency range switching points in **AUTO** mode are affected by the A/D reference voltage set by A18R2. For this adjustment no test setup is required.

PROCEDURE:

- a. Connect DVM between 8410B-A18TP8 and chassis ground. Adjust A18R2 A/D ADJ for $11.25 \text{ Vdc} \pm 0.01 \text{ Vdc}$.
-

NOTE ON 8411A ADJUSTMENTS

Repair of the 8411A will be necessary if it can not be adjusted to meet the limits given in this procedure. There are **Service Hints** at the end of this section to make the adjustments easier, and as an aid in troubleshooting. Repair to the 8411A should not be attempted until these adjustment procedures have been tried.

These procedures assume that a calibrated 8410B Network Analyzer is used and that the 8411A Harmonics Frequency Converter is an Option 018 (18 GHz Operation). However, the procedures will work for the standard 8411A (12.4 GHz).

Before adjustment to the 8411A is started, the 8410B VTO control voltage should be readjusted to 11.1 volts per paragraph 5-15.

ADJUSTMENTS

5-19. 8411A VTO CHECK AND ADJUSTMENT

NOTE

The 8411A covers should be removed and the special test cover (HP Part No. 08411-60035) installed. The 8411A should be allowed to warm up for two hours before adjustments.


ADJUSTMENTS:

Adjust A6R2, A6R16, A7R5, and A7R19.

DESCRIPTION:

The VTO upper limit VTO (A6R16), the low frequency clamp adjust (A7R19), and the 65 MHz adjust (A7R5) are adjusted, to ensure the VTO will tune over its maximum frequency range linearly.

TEST SETUP:

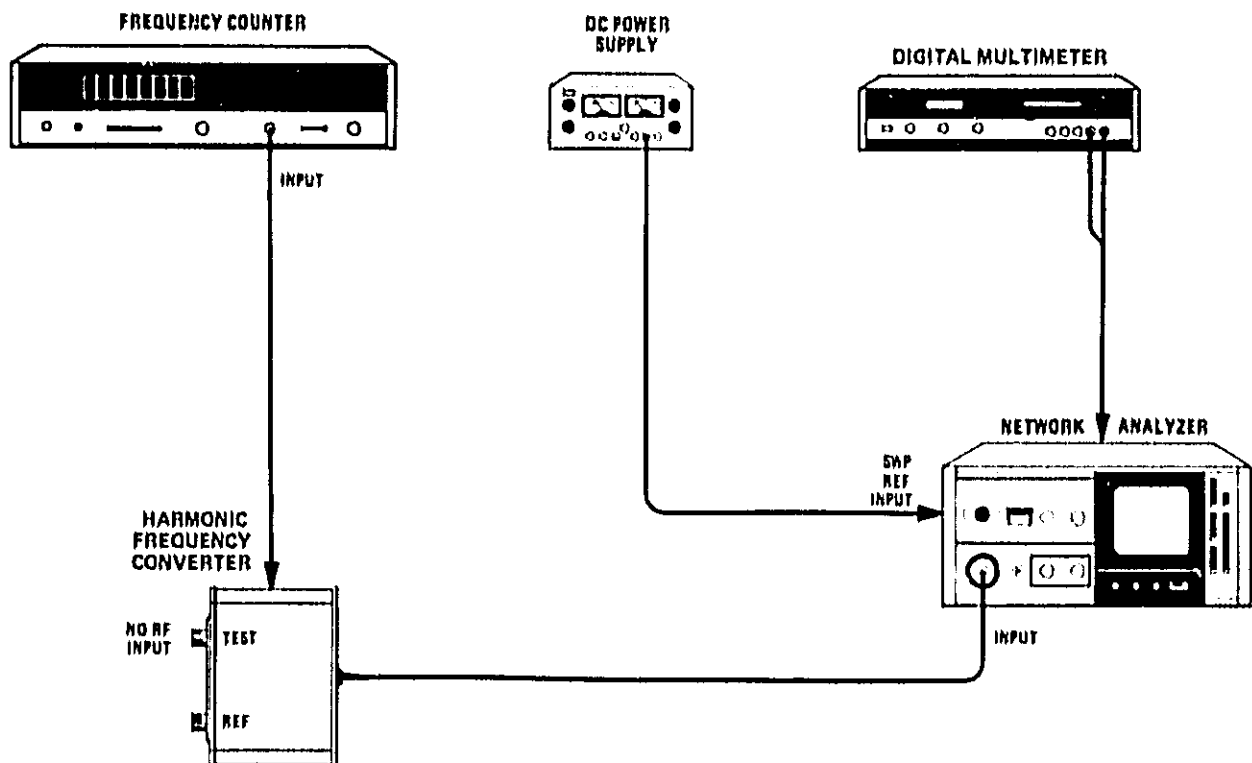

TEST EQUIPMENT: Items 8, 9, 10, 11, and 29, Table 1-8.

PROCEDURE:

- Connect equipment as shown in Test Setup.
- Remove the 8410B-A8 assembly and ground A7TP1.
- Set power supply to +20 Volts and connect to 8410B Sweep Reference input.

ADJUSTMENTS

5-19. 8411A VTO CHECK AND ADJUSTMENT (Cont'd)

d. Preset the 8411A-A6 adjustment potentiometers as shown in Figure 5-1, drawing A.

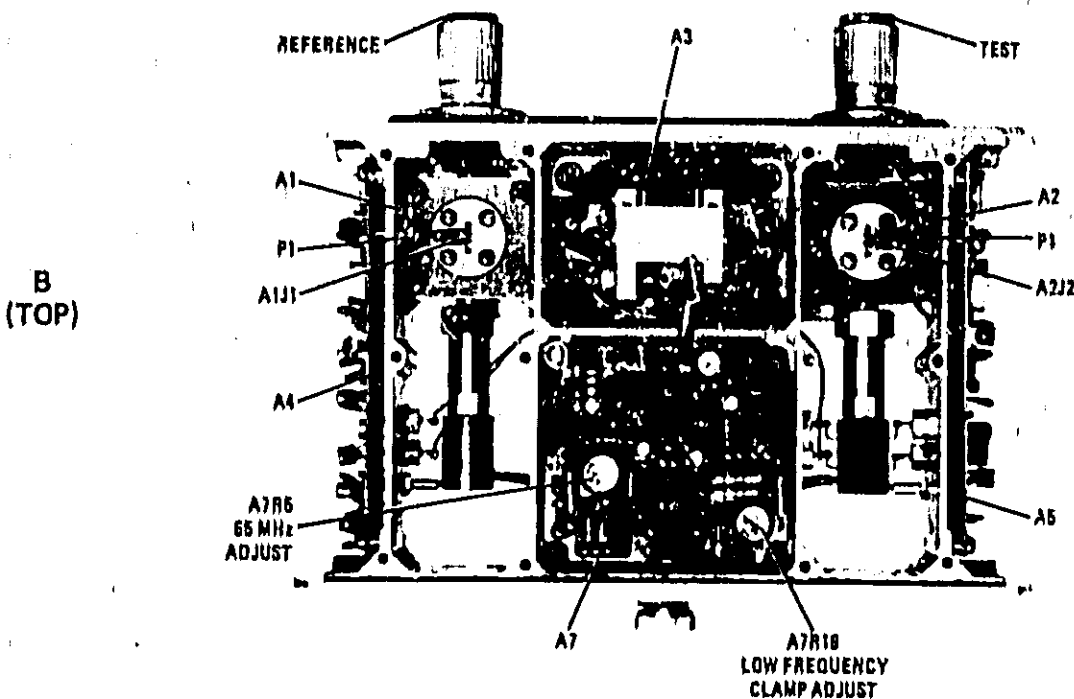
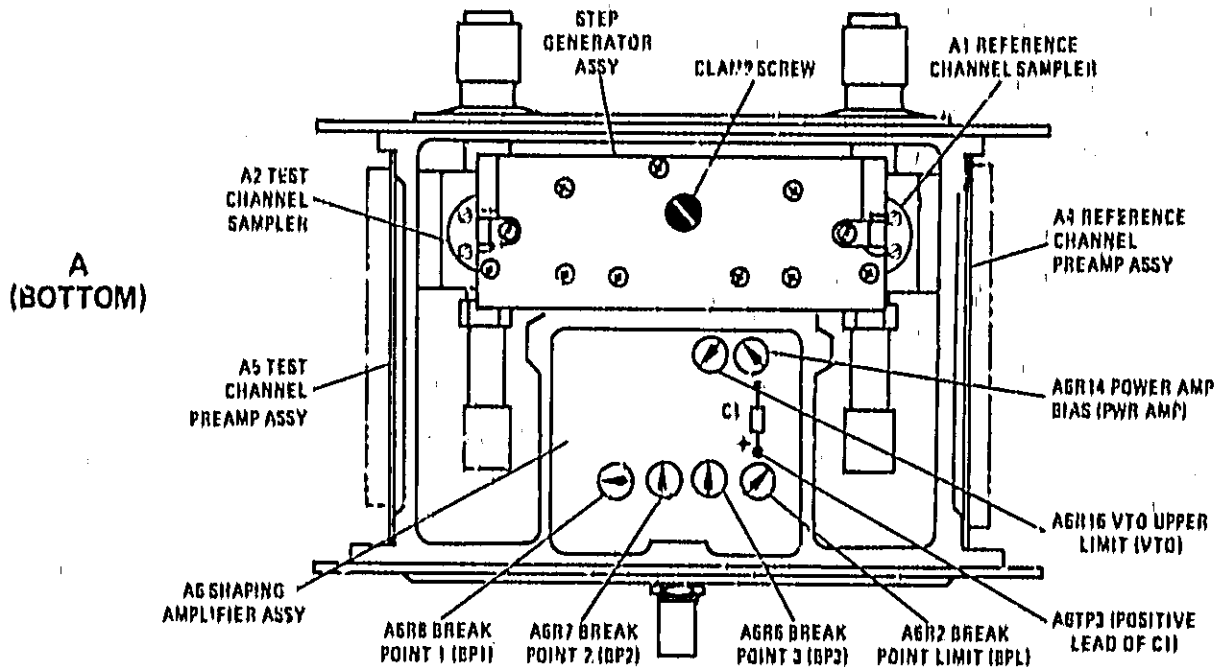


Figure 5-1. 8411A Adjustments Location and Preset Position

ADJUSTMENTS

5-19. 8411A VTO CHECK AND ADJUSTMENT (Cont'd)

- e. Set 8410B SWEEP STABILITY control to CW detent position. Adjust 8411A BPL (A6R2) for $11.20 \text{ Vde} \pm 0.05 \text{ Vde}$ at A6TP3. See Figure 5-1, drawing A for location of A6TP3.
- f. Monitor the VTO frequency with RF Pick-Up Loop (on test cover) and Frequency Counter. Adjust power supply and 8410B SWEEP STABILITY Control for $11.6 \text{ Vde} \pm 0.01 \text{ Vde}$ at 8410B-A7TP6 and adjust 8411A VTO Upper Limit (A6R16) for $155 \text{ MHz} \pm 1 \text{ MHz}$.
- g. Set power supply for negative voltage and adjust 8410B SWEEP STABILITY Control and power supply for $8.00 \text{ Vde} \pm 0.01 \text{ Vde}$ at 8410B-A7TP6. Adjust low frequency clamp (A7R19) for $62.5 \text{ MHz} \pm 0.2 \text{ MHz}$.
- h. Set power supply and sweep stability control for $9.40 \text{ Vde} \pm .02 \text{ Vde}$. Adjust 65 MHz adjust (A7R5) for $65 \text{ MHz} \pm 0.2 \text{ MHz}$. (See Service Hint 1.)
- i. Recheck the 62.5 MHz. There is some interaction between the last two adjustments and some iteration of the adjustments will be necessary.

5-20 8411A A4 REFERENCE AND A5 TEST CHANNEL PREAMPLIFIER BIAS CENTERING, BIAS, CONVERSION EFFICIENCY, AND POWER AMPLIFIER GAIN


ADJUSTMENTS:

A4R3, A4R5, A5R3, A5R5, and A6R14, and select A4R14.

DESCRIPTION:

The 8411A Sampler diode bias supplies are adjusted to balance the response of the diode pairs and the bias adjust is adjusted for the best broadband frequency response of the diodes. The power amplifier is adjusted for maximum gain at the IF frequency. The AC gain of the reference preamplifier is set for a 8411A conversion efficiency of one. The gain and phase offset of the test amplifier is adjusted.

TEST SETUP:

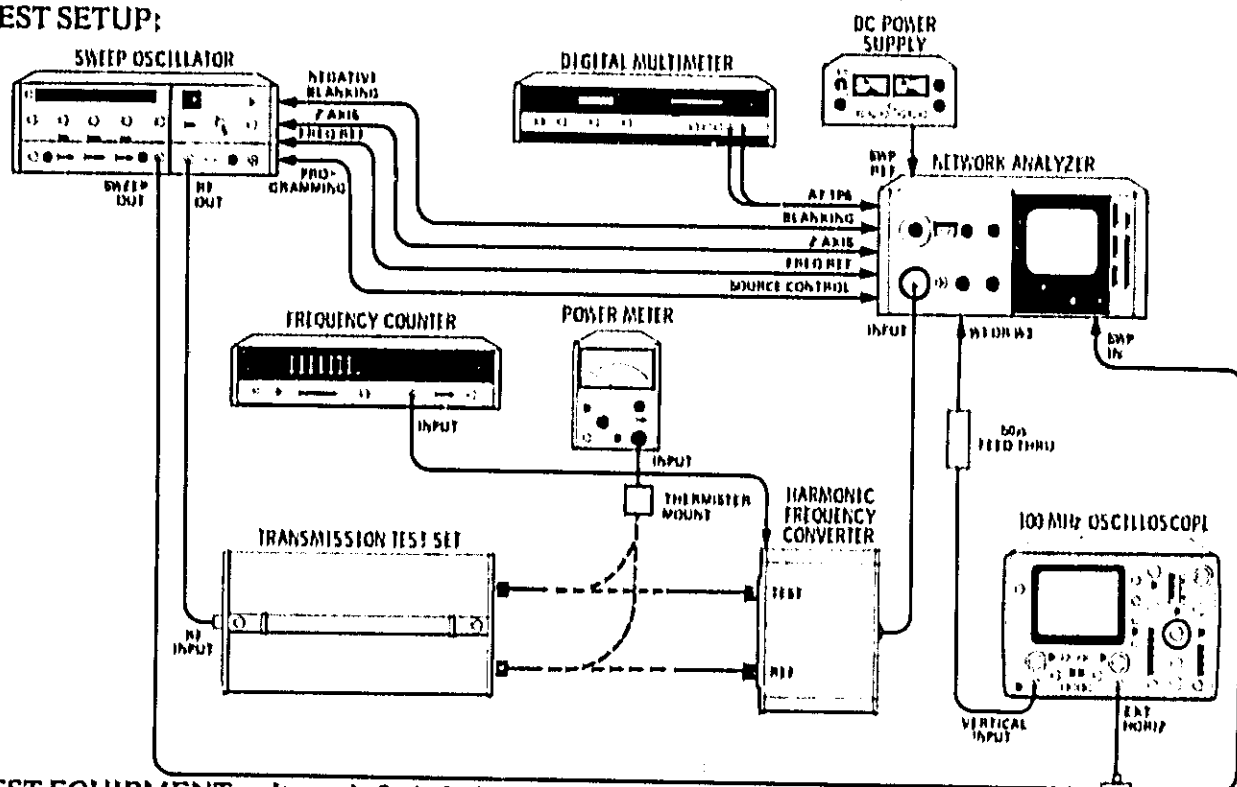

TEST EQUIPMENT: Items 1, 2, 4, 5, 8, 9, 10, 11, 22, 25, 29, 31, 32, Table I-8.

ADJUSTMENTS

5-20. 8411A A4 REFERENCE AND A5 TEST CHANNEL PREAMPLIFIER BIAS CENTERING, BIAS, CONVERSION EFFICIENCY, AND POWER AMPLIFIER GAIN (Cont'd)

PROCEDURE:

- a. Connect equipment as shown in the Test Setup with the power meter thermistor mount connected to the transmission test set TEST port, and the dc power supply set to approximately +20 Volts.
- b. Disconnect cable 8410B-W3P1 (Blue band) from J8 and connect oscilloscope through a 50 ohm load to 8410B-W3P1 (the output of the test channel).
- c. Remove the 8410B-A8 assembly and connect A7 TP1 to ground.
- d. Set 8410B SWEEP STABILITY control and power supply for a VTO frequency of 155 MHz.
- e. Set 8620C for CW frequency of approximately 2.2 GHz and a ΔF of approximately 400 MHz. Set power level to -18 dBm. Disconnect thermistor mount and connect 8411A TEST port to test set. Adjust frequency controls for display on oscilloscope similar to Figure 5-2. It may be necessary to adjust A6R14 from its preset position for maximum birdie amplitude.
- f. Set bias adjust (A5R5) until the oscilloscope display is approximately 10 percent of the peak-to-peak amplitude.
- g. Adjust bias centering (A5R3) for minimum birdie amplitude. If the birdies go into the noise, increase the signal level by adjusting A5R5. Continue to adjust A5R3 for minimum birdie amplitude. Minimum birdie amplitude should occur with A5R3 near its center position. If it must be adjusted more than ± 45 degrees from center, or balancing cannot be achieved, one of the diodes is defective and the sampler should be replaced. Refer to Paragraph 8-42 for sampler replacement procedure.
- h. Adjust Power Amp (A6R14) for maximum (peak) birdie amplitude.
- i. Reset A5R5 for maximum gain (fully clockwise).
- j. Remove oscilloscope connection from W3P1 and reconnect W3P1 to J8. Disconnect 8410B-W1P1 from J7 and connect oscilloscope to W1P1 through a 50 ohm load. The oscilloscope display should be similar to Figure 5-3.

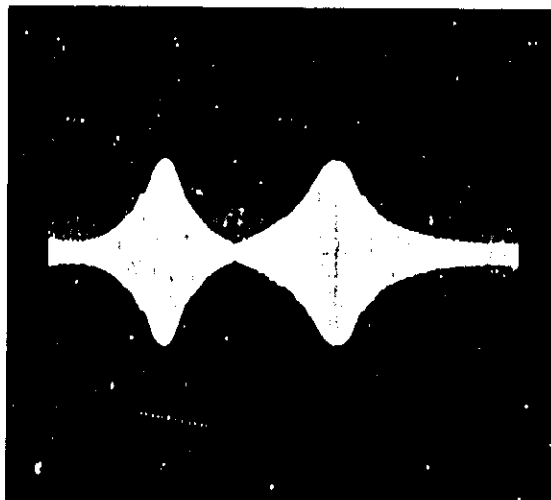


Figure 5-2. Test Channel IF Bandpass Birdies

ADJUSTMENTS

5-20. 8411A A4 REFERENCE AND A5 TEST CHANNEL PREAMPLIFIER BIAS CENTERING, BIAS, CONVERSION EFFICIENCY, AND POWER AMPLIFIER GAIN (Cont'd)

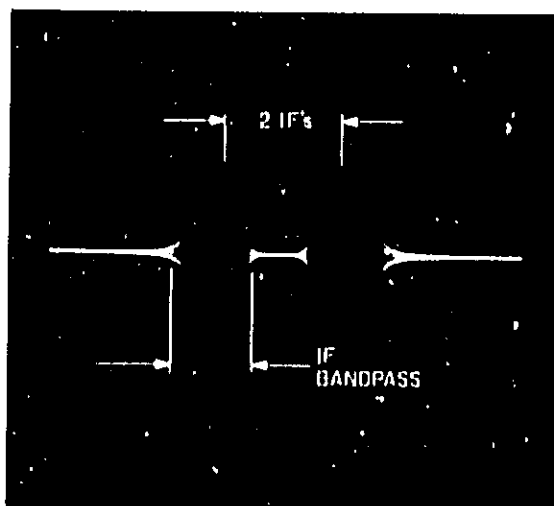


Figure 5-3. Reference Channel IF Bandpass Birdies

- k. Adjust BIAS ADJUST (A4R5) counterclockwise until the oscilloscope display is approximately 20 percent of the peak-to-peak amplitude.
- l. Adjust bias centering (A4R3) for minimum birdie amplitude. If the signal goes into the noise, increase signal level by adjusting A4R5, and continue to adjust A4R3 for minimum birdie amplitude. Adjust A4R5 to obtain a birdie pattern approximately three times the noise level.
- m. Set 8620C for full band sweep (band 3) 12-18 GHz. Adjust BIAS ADJUST (A4R5) for maximum birdie amplitude at 18 GHz with minimum decrease of amplitude at the beginning of the sweep.
- n. Disconnect power supply from 8410B SWP REF input. Remove jumper from 8410B-A7TP1 and ground, and reinstall A8 assembly. Reconnect 8410B-W1P1 to J7.
- o. Set 8620C for 2 — 18 GHz sweep. Set 8410B frequency range for AUTO. Set sweep stability for best display stability. It may be necessary to reduce sweep speed.

NOTE

It may be necessary to perform test on Paragraph 5-21 at this point if a stable trace is not obtainable.

- p. Adjust A5R5 for best overall frequency response on display with minimum amplitude skipping at the stop sweep points. The sweep stability control should be adjusted over the maximum lock range during this adjustment. Lowering the power amp gain slightly may improve the amplitude skipping.
- q. Set 8620C for 0.11 to 2 GHz sweep (using 86222A/B), set 8410B frequency range switch to AUTO, and set sweep stability control for a stable sweep.
- r. Reference channel bias adjust A4R5 may need a slight adjustment clockwise to reduce amplitude jitter. The test channel bias adjust A5R5 may also need a slight adjustment to reduce the amplitude jitter. (See Service Hints 3 and 4.)

ADJUSTMENTS

5-20. 8411A A4 REFERENCE AND A5 TEST CHANNEL PREAMPLIFIER BIAS CENTERING, BIAS, CONVERSION EFFICIENCY, AND POWER AMPLIFIER GAIN (Cont'd)

- s. Remove 8410B-A8 assembly and connect ground to A7TP1. Set 8620C for a CW frequency of 2.2 GHz and a ΔF of ≈ 400 MHz. Set 8411A VTO frequency to 100 MHz using 8410B SWEEP STABILITY control.
- t. Disconnect cable 8410B-W1P1 (Red band) from J7. Connect oscilloscope through 50 ohm load to 8410B-W1P1 (the output of the reference channel).
- u. Apply -20 dBm, 2.0 to 2.4 GHz signal to 8411A REFERENCE port. Select A4R14 for a peak-to-peak signal of 62.5 mV ± 7 mV on oscilloscope. (See Service Hint 2.)

NOTE

62.5 mV ± 7 mV corresponds to -20 dBm ± 1 dBm. A spectrum analyzer can be used if a 100 MHz oscilloscope is not available.

- v. Remove ground jumper from 8410B A7TP1 and reinstall 8410B A8 Assembly. Reconnect 8410B-W1P1 to J7.

5-21. 8411A A6 VTO TUNING VOLTAGE SHAPING AMPLIFIER


ADJUSTMENTS:

A6R2, A6R6, A6R7, A6R8, and select A6R12, and A7C13.

DESCRIPTION:

The VTO tuning voltage is shaped to provide maximum range of the tuning stabilizer control.

TEST SETUP:

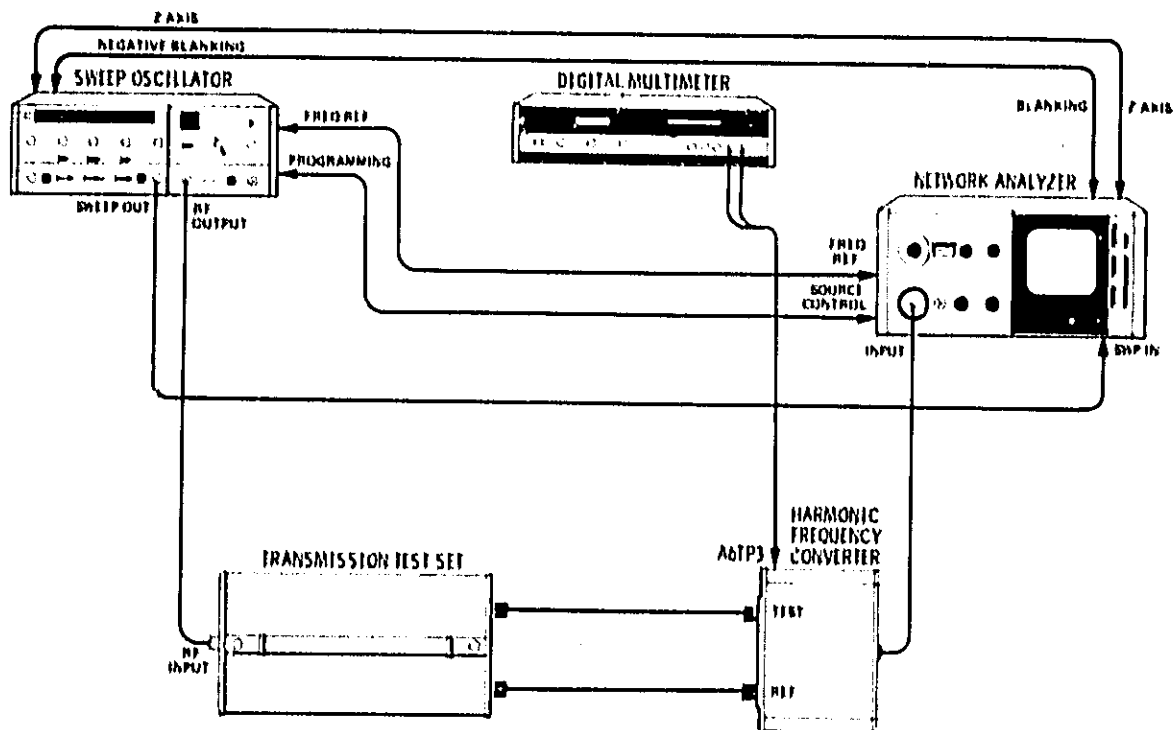

TEST EQUIPMENT: Items 1, 4, 10, 11, and 25, Table 1-8.

ADJUSTMENTS

5-21. 8411A A6 VTO TUNING VOLTAGE SHAPING AMPLIFIER (Cont'd)**PROCEDURE:**

- a. Check the VTO frequency per paragraph 5-19, omitting step d.
- b. Connect equipment as shown in the Test Setup. Connect DC voltmeter to 8411A-A6TP3. Remove ground jumper from 8410B A7TP1 and reinstall 8410B A8 assembly.
- c. Set 8620C for 4 to 8 GHz sweep.
- d. Set 8410B Freq Range Control for 4 to 8 GHz.
- e. Adjust break point limit BPL (A6R2) for $11.20 \text{ Vdc} \pm 0.05 \text{ Vdc}$.
- f. Set 8410B Sweep Stability control for best trace without breakup (loss of phase lock). Note the position of the knob. Phase lock loop oscillations induced by VTO shaping will appear on the display as power holes. (See Figure 5-9). To verify that the power hole is caused by loop oscillations, vary the Sweep Stability control. If the power hole moves along the display, it is caused by loop oscillations. If it does not vary across the display, it is a true RF power hole. (See Service Hint 5).
- g. Rotate Sweep Stability control 10 degrees clockwise and then counterclockwise from the position noted. If the 8410B breaks phase lock, adjust BP1 (A6R8). BP1 (A6R8) should be adjusted to give the maximum range of the Sweep Stability control without losing phase lock.
- h. Move the Frequency Range switch one position clockwise and then one position counterclockwise. The Sweep Stability control should be adjustable to give a complete trace without loss of phase lock or loop oscillations. If oscillations can not be eliminated, adjust BP2 (A6R7) and BP3 (A6R6). It may be necessary to change the value of A6R12 from 90.9 ohm to 75 ohm if oscillations cannot be eliminated with BP2 and BP3. Also, the value of A7C13 may need to be increased to decrease phase lock loop gain.
- i. Set 8620C for 2-18.0 GHz sweep and 8410B FREQ. RANGE to AUTO. Adjust Sweep Stability for best trace without breakup (loss of phase lock). Make final adjustment of BP2 (A6R7) and BP3 (A6R6) if necessary for best results. If oscillation persists, see Service Hints 3 and 4.

ADJUSTMENTS

5-22. 8411A CHANNEL ISOLATION


ADJUSTMENTS:

A5C13 and A5R3

DESCRIPTION:

8411A channel isolation is adjusted for > 65 dB, 0.11 to 6.0 GHz; > 60 dB, 6.0 to 12.4 GHz; > 50 dB, 12.4 to 18 GHz (Option 018).

TEST SETUP:

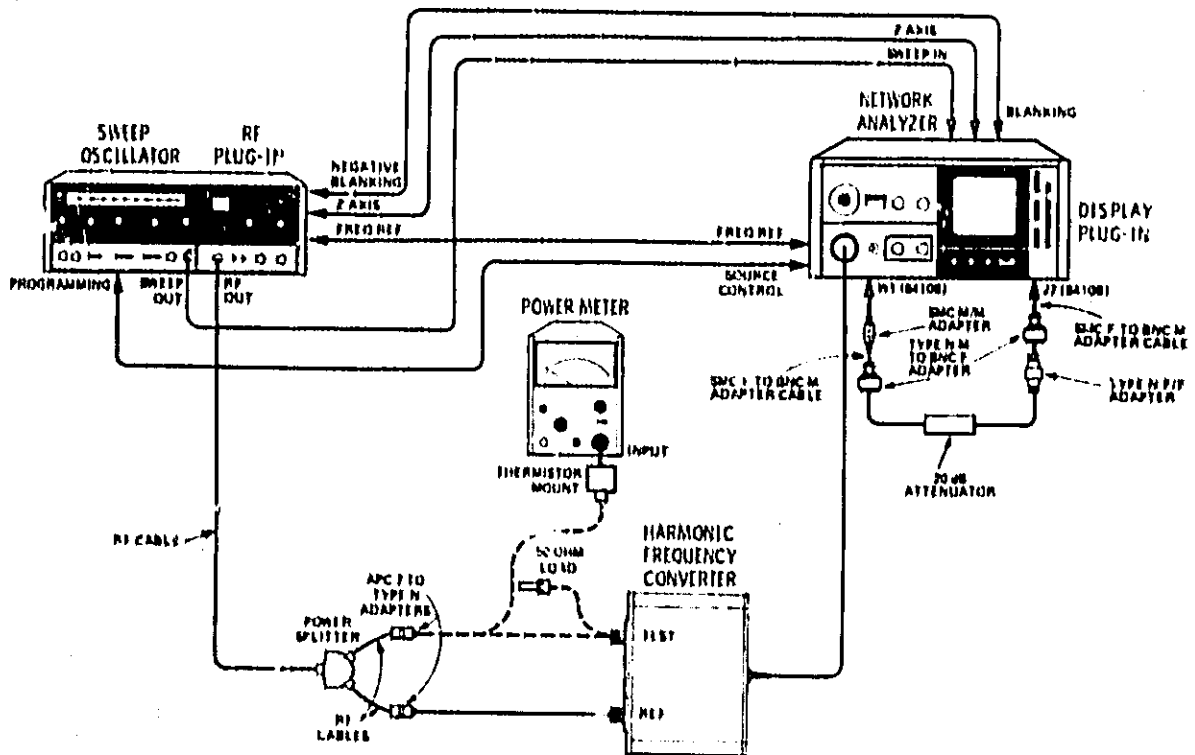

TEST EQUIPMENT: Items 1, 2, 10, 14, 15, 18, 20, 23, 25, 29, 30, 31, 32, 33, Table 1-8.

PROCEDURE:

- Remove special top and bottom test covers from 8411A and install original covers. Install covers over reference and test channel pre-amplifiers. If test channel pre-amplifier cover has only one access hole, use special test cover that has five access holes for making adjustments.
- Disconnect 8410B-W1 from J7. Insert 20 dB attenuator between W1 and J7.
- Connect test equipment as shown in test setup with thermistor mount connected to cable from power splitter.
- Set signal source to sweep from 6 to 12.4 GHz. Set RF output level for a -10 dBm indication on power meter.

ADJUSTMENTS

5-22. 8411A CHANNEL ISOLATION (Cont'd)

- e. Disconnect thermistor mount and connect 8411A TEST port to cable from power splitter.
- f. Set 8412A MODE to AMPL, dB/DIV to 10, and BW to 0.1 kHz.
- g. Set 8410B TEST CHANNEL GAIN to zero dB, FREQ RANGE to AUTO, and SWEEP STABILITY for most stable CRT display.
- h. Use 8410B AMPLITUDE VERNIER control and 1 dB/step TEST CHANNEL GAIN Control (if necessary) to position CRT trace on center horizontal graticule line.
- i. Disconnect 8411A TEST port from cable to power splitter and terminate TEST port with 50 ohm load.
- j. Increase TEST CHANNEL GAIN by 60 dB. The CRT trace should be below the reference established in step h above.
- k. If the CRT trace is below the center horizontal graticule line, no adjustment is necessary. If the CRT trace is above the center horizontal graticule line, try adjusting 8411A-A5C13. If 60 dB isolation can not be achieved try adjusting 8411A-A5R3. Note the position of A5R3 before attempting to adjust it. If adjusting it does not improve the isolation, return it to original setting. If it was necessary to readjust A5R3, the amplitude skip should be rechecked per paragraph 5-20, step p. If 60 dB isolation is not obtainable with these adjustments, repair to the sampler is required.
- l. Repeat steps d through k with the signal source sweeping from 2.0 to 6.0 GHz and the TEST CHANNEL GAIN increased by 65 DB in step j.
- m. For Option 018 only (12.4 to 18 GHz range). Repeat steps d through k with the signal source sweeping from 12.4 to 18 GHz and the TEST CHANNEL GAIN increased by 50 dB in step j.

5-23. 8411A AMPLITUDE AND PHASE OFFSET ADJUSTMENT**ADJUSTMENTS:**

A5R20, A5R21, and select A5R8


DESCRIPTION:

The amplitude and phase offset is adjusted for center screen display with verniers centered.

ADJUSTMENTS

5-23. 8411A AMPLITUDE AND PHASE OFFSET ADJUSTMENT (Cont'd)

TEST SETUP:

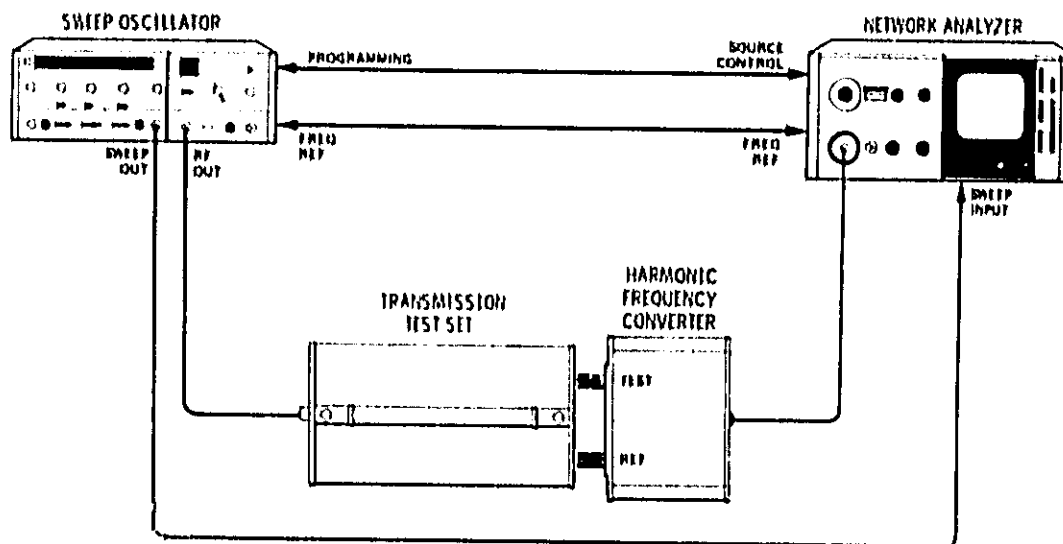

TEST EQUIPMENT: Items 1, 4, and 10, Table I-8.

PROCEDURE:

- a. Connect equipment as shown in Test Setup.
- b. Set 8410B FREQ RANGE to 4 to 8 GHz.
- c. Set signal source to sweep 4 to 8 GHz.
- d. Adjust 8410B SWEEP STABILITY control for stable display.
- e. Set 8410B TEST CHANNEL GAIN to 22 dB.
- f. Center 8410B AMPLITUDE and PHASE VERNIERS.
- g. Set 8412A MODE switch for DUAL display, AMPLITUDE for 1 dB/DIV, and PHASE for 10 DEG/DIV.
- h. Adjust 8411A-A5R20 GAIN adjust and 8411A-A5R21 PHASE adjust to center the amplitude and phase traces on the display. See Service Hint 6. The interaction of these controls may require repeating the adjustments several times. If phase and amplitude still cannot be centered remove A5R8 and adjust for amplitude and phase zeroing with only the Phase control, A5R21.

ADJUSTMENTS

8411A SERVICE HINT 1

The interaction between the 62.5 and 65 MHz adjustment on most 8411A can be minimized by making a simple circuit modification. The modification is to the A7 VTO Assembly, part number 08411-6024 Date Code C-931-4 only. There are three versions of the A7 assembly, 08411-6002, 08411-6024 Date Code C-931-4, and 08411-6024 Date Code D-1836-45. The 08411-6002 should not be modified. The 08411-6024 Date Code D-1836-45 already contains the modification. The Part Number and date code are located on the circuit side of A7 board as shown in Figure 5-5.

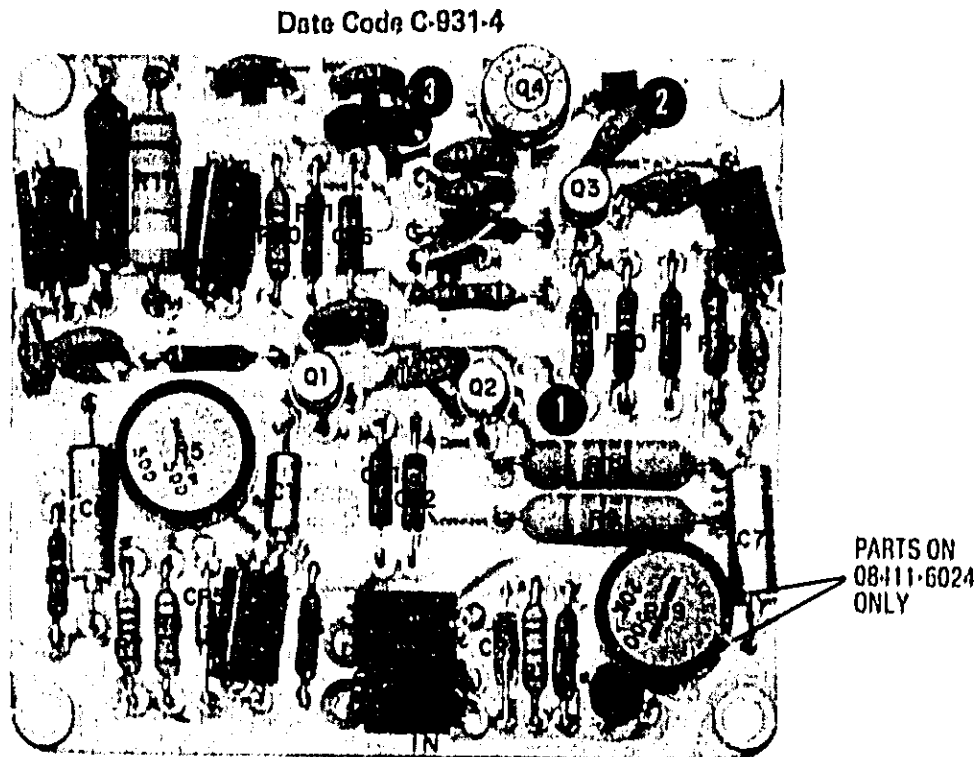


Figure 5-4. A7 VTO Assembly 08411-6024, Date Code C-931-4

MODIFICATION PROCEDURE:

1. Remove the 4 screws securing the A7 assembly to the 8411A casting.
2. Carefully tip the A7 assembly up so that the circuit side of the board is exposed.
3. Locate the printed circuit board trace that connects the base of Q5 to the wiper of R19 (see Figure 5-5). With exacto knife or razor blade cut the trace between the wiper and the end of R19. Also cut the trace from the base of Q5 to R19. Solder a jumper from the wiper of R19 to the base of Q5. See partial schematic, Figure 5-6.
4. Secure A7 assembly to the 8411A chassis.

ADJUSTMENTS

8411A SERVICE HINT 1 (Cont'd)

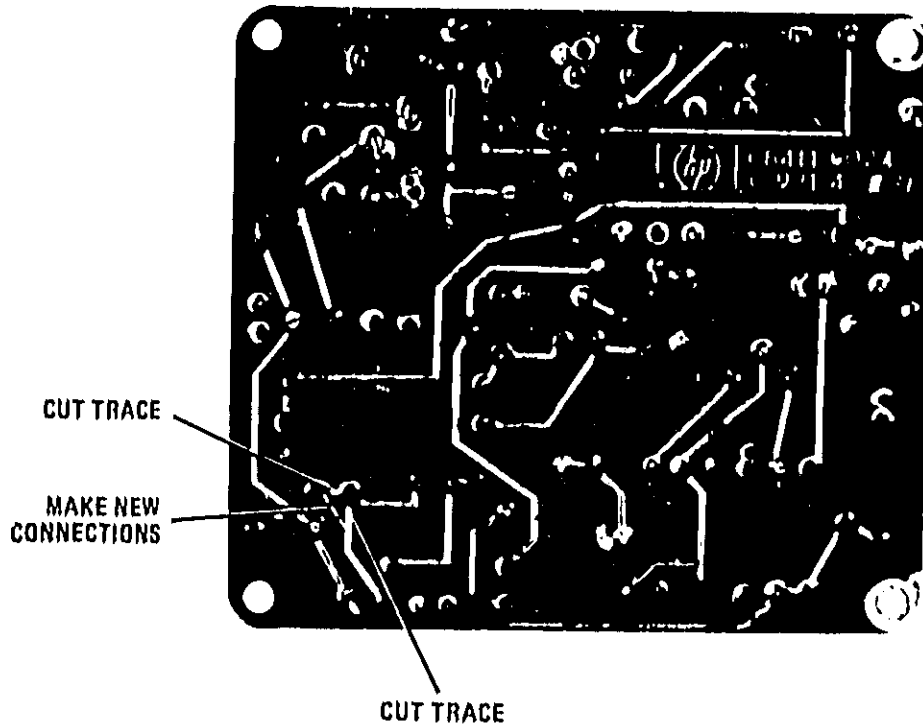


Figure 5-5. A7 08411-6024 Date Code C-931-4, Circuit Side After Modification

ADJUSTMENTS

SERVICE HINT 1 (Cont'd)

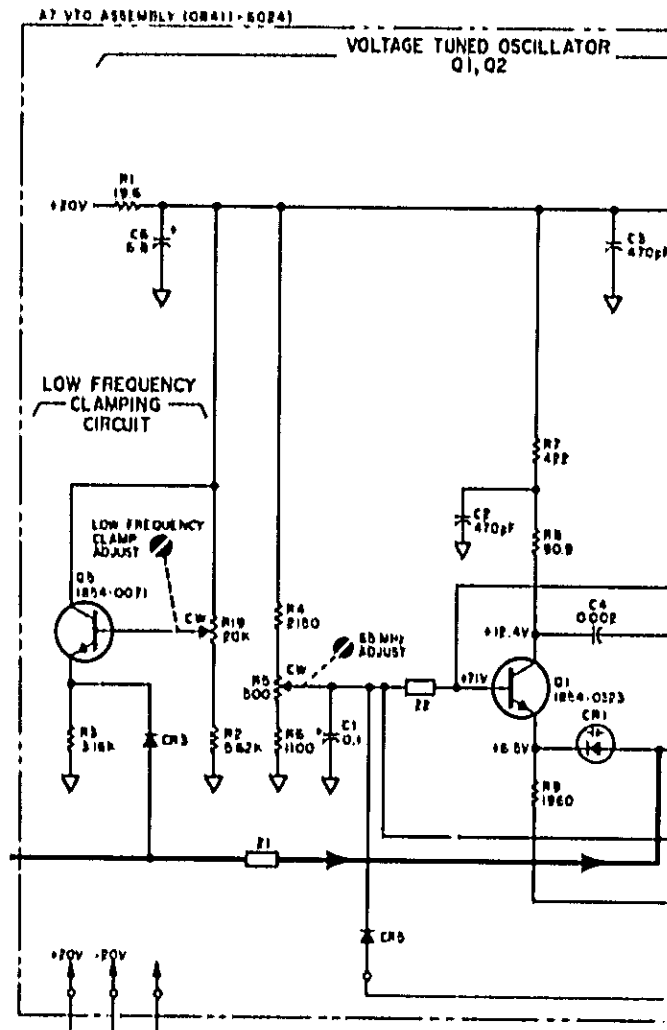


Figure 5-6. Partial Schematic of 08411-6024 Date Code C-931-4, Showing the Circuit Modification

ADJUSTMENTS

8411A SERVICE HINT 2

The Reference Channel IF gain may be changed by selecting a new value of 8411A-A4R14. Its value should not exceed 133 ohms. If A4R14 is larger than 133 ohms, the noise level will be adversely affected.

8411A SERVICE HINT 3**Frequency Jitter Over 0.11 to 2 GHz**

Frequency jitter as shown in Figure 5-7 can be the result of diode bias 8411A-A4R5 not being optimized for 0.11 to 18 GHz operation. Adjusting A4R5 to completely eliminate the jitter will cause the efficiency to decrease at the high frequency end. If an adjustment of A4R5 is necessary to reduce the jitter, the efficiency should be rechecked per paragraph 5-20, steps p through r.

A power hole in the frequency range of 0.4 to 0.7 GHz is probably caused by a resonant in the sampler diode and IF amplifier. To reduce the resonant, Ferrite Beads, HP Part Number 9170-0847, can be added to the sampler diode leads. The addition of the beads will usually cause higher overall jitter but will eliminate the power hole.

Jitter can also be caused by the connection of the pulse line to the strip line. This lead should be trimmed and positioned as shown in Figure 5-8.

Another cause of jitter could be matching of the ferrite beads in the pulse line clamps. The tension on the beads is critical. First try tightening the nylon hold-down screws. If this does not improve ripple, try loosening screws. If this improves the ripple, the bead length should be shortened slightly by sanding or by selecting different beads if they are available. Frequency jitter can also be caused by the VTO transistors A7Q1 and A7Q2, HP Part No. 1854-0323. It may be necessary to try several of these transistors and choose the pair that gives minimum jitter and will oscillate over the frequency range. If the transistors are changed, it will be necessary to reset the frequency limits per paragraph 5-19 of this adjustment procedure.



Figure 5-7. Frequency Jitter 0.11 to 2.0 GHz

ADJUSTMENTS

8411A SERVICE HINT 3 (Cont'd)

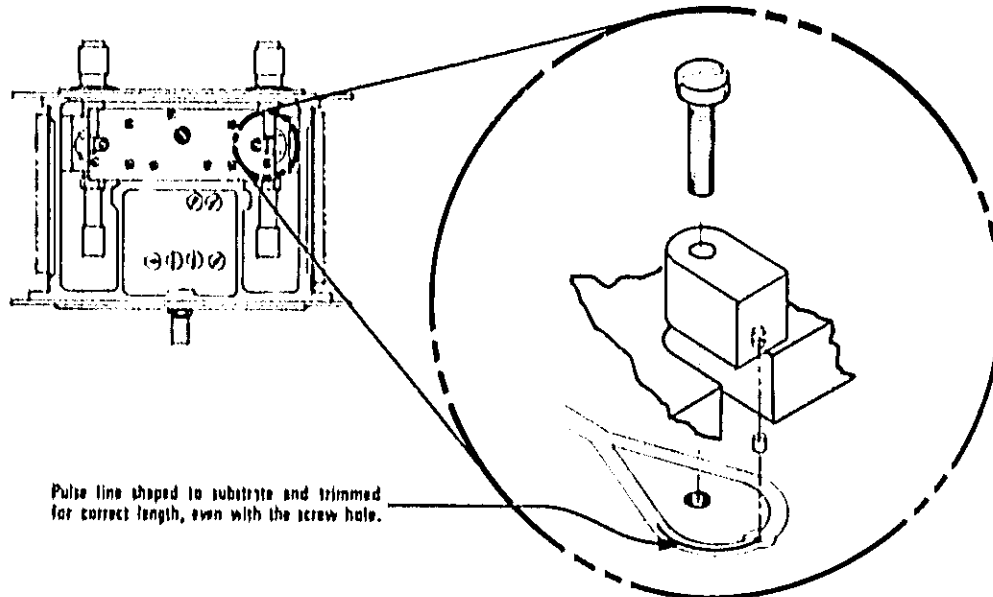


Figure 5-8. Pulse Line to Substrate Position

8411A SERVICE HINT 4

Phase Lock Loop Oscillations Eliminated By Adding Ground To A7 VTO Assembly

If VTO oscillations can not be eliminated in the frequency range of 4 to 8 GHz with A6 VTO gain shaping (Paragraph 5-21), an additional ground in A7 assembly may help.

Experiment to determine if an additional ground will reduce phase lock oscillation. Set 8410B frequency range switch to 3-6 GHz. Normally the A7 assembly is grounded to chassis by the mounting screw in the upper left corner. With a small screw driver or metal tip tuning tool, try grounding the printed circuit ground plane to each of the other mounting screws. The point that has the best results in lowering the loop oscillations should be permanently grounded. A ground terminal, HP Part Number 0360-0037, cut off, placed under the screw, then soldered to the PC board ground plane, works well.




Figure 5-9. Power Holes Caused By Phase Lock Loop Oscillations

ADJUSTMENTS


8411A SERVICE HINT 5

A power hole around 10 to 18 GHz as shown in Figure 5-10 can be caused by a discontinuity in the sampler. Try reducing the temperature at the point where the load meets the body and where the front connector meets the body with cool freeze. If the discontinuity changes, the sampler must be changed.

Tracking ripple in the 2 to 12.4 GHz range (see Figure 5-11) can be caused by the sampler loads not matching. To improve matching, try substituting different loads until the tracking errors are minimized. The part number for the loads is 08410-6000.

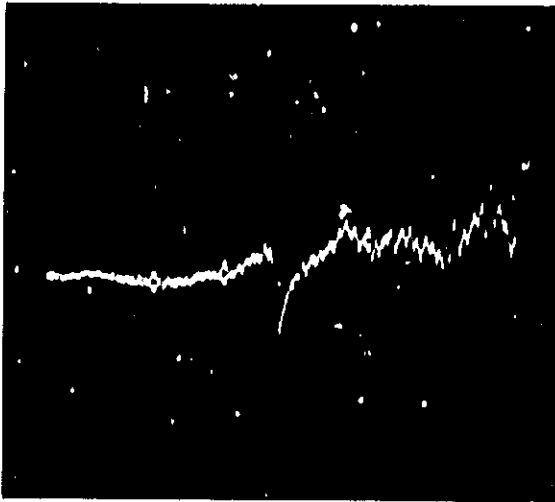

*Figure 5-10. Power Hole 10 to 18 GHz
Caused By Discontinuity in Sampler*

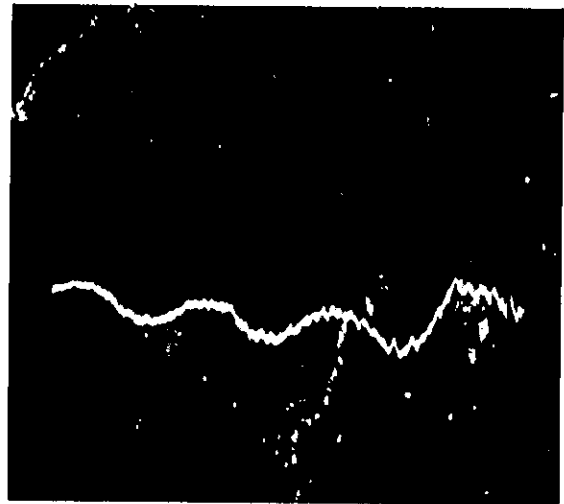

*Figure 5-11. Tracking Ripple 2.0 to 12.4 GHz
Caused By Sampler Loads*

8411A SERVICE HINT 6

The adjustment range of the PHASE ADJ 8411A-A5R21 and GAIN ADJ 8411A-A5R20 can be increased by increasing the value of the pots by a factor of 10. See below for values and part numbers.

A5R14 RESISTOR FIXED 100 Ohm 1% 0757-0401
 A5R20 RESISTOR VAR 10K 5% 2100-1776
 A5R21 RESISTOR VAR 2K 5% 2100-1774

PARTS LIST

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering parts. Table 6-2 lists abbreviations used in the parts list and throughout the manual. Tables 6-3 and 6-4 lists all replaceable parts in reference designator order. Table 6-5 contains the names and addresses that correspond to the manufacturer's code numbers.

WARNING

Any service or adjustment performed with the covers removed should only be performed by qualified service personnel. A shock hazard exists with the covers removed.

6-3. EXCHANGE ASSEMBLIES

6-4. Table 6-1 lists assemblies within the instrument that may be replaced on an exchange basis, thus affording a considerable cost saving. Exchange, factory-repaired and tested assemblies are available only on a trade-in basis; therefore, the defective assemblies must be returned for credit. For this reason, assemblies required for spare parts stock must be ordered by the new assembly part number.

6-5. ABBREVIATIONS

6-6. Table 6-2 lists abbreviations used in the parts list and schematics. In some cases, two forms of the abbreviation are used, one all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always all capitals. However, in the schematics, other abbreviation forms are used with both lower case and upper case letters.

6-7. REPLACEABLE PARTS LIST

6-8. Tables 6-3 and 6-4 is the list of replaceable parts and is organized as follows:

a. Electrical assemblies and their components in alpha-numerical order by reference designation.

b. Chassis-mounted parts in alpha-numerical order by reference designation.

c. Miscellaneous parts.

6-9. The information given for each part consists of the following:

a. The Hewlett-Packard part number.

b. Part number check digit (CD)

c. The total quantity (Qty) in the major assembly (A1, A2, or A3).

d. The description of the part.

e. A typical manufacturer of the part in a five-digit code.

f. The manufacturer's number for the part.

6-10. The total quantity for each part is given only once — at the first appearance of the part number in the list for each major assembly.

NOTE

Total quantities for optional assemblies are totaled by assembly and not integrated into the standard list.

6-11. ORDERING INFORMATION

6-12. To order a part listed in the replaceable parts table, quote the Hewlett-Packard Part number (with the check digit) indicate the quantity required, and address the order to the nearest Hewlett-Packard office. The check digit will ensure accurate and timely processing of your order.

6-13. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

6-14. SPARE PARTS KIT

6-15. Stocking spare parts for an instrument is often done to ensure quick return to service after a malfunction occurs. Hewlett-Packard has a "Spare Parts Kit" available for this purpose. The kit consists of selected replaceable assemblies and

components for this instrument. The contents of the kit and the "Recommended Spares" list are based on failure reports and repair data, and provides parts support for one year. A complimentary "Recommended Spares" list for this instrument may be obtained on request and the "Spare Parts Kit" may be ordered through your nearest Hewlett-Packard office.

Table 6-1. Exchange Parts

REFERENCE DESIGNATION	NEW PART NUMBER	REBUILT-EXCHANGE PART NUMBER	DESCRIPTION
STANDARD 8411A 0.11 TO 12.4 GHz			
A1 Prefix 1824A and Above	08411-80010	08411-80012	Wideband Sampler Assembly (Reference Channel)
A1 Prefix 1726A and Below	08411-80003	5080-0245	
A2 Prefix 1824A and Above	08411-80011	08411-80013	Wideband Sampler Assembly (Test Channel)
A2 Prefix 1726A and Below	08411-80004	5080-0246	
8411A OPTION 018 0.11 TO 18 GHz			
A1 Prefix 1824A and Above	08411-80005	08411-80007	Wideband Sampler Assembly (Reference Channel)
A1 Prefix 1726A and Below	08411-80102	5081-8123	
A2 Prefix 1824A and Above	08411-80006	08411-80008	Wideband Sampler Assembly (Test Channel)
A2 Prefix 1726A and Below	08422-80103	5081-8124	
NOTE			
For module exchange procedure, see Paragraph 8-41.			

Table 6-2. Reference Designators and Abbreviations (1 of 2)

REFERENCE DESIGNATIONS

A..... Assembly	(A/D), Signaling Device (Audible or Visible)	MP..... Miscellaneous Mechanical Part	TC..... Thermocouple
AT.... Attenuator, Isolator, Limiter, Termination	E..... Miscellaneous Electrical Part	P..... Electrical Connector (Movable Portion), Plug	TP..... Test Point
B..... Fan, Motor	F..... Fuse	Q..... Silicon Controlled Rectifier (SCR), Transistor, Triode Thyristor	U..... Integrated Circuit, Microcircuit
BT..... Battery	FL..... Filter	R..... Resistor	V..... Electron Tube
C..... Capacitor	H..... Hardware	RT..... Thermistor	VR..... Breakdown Diode (Zener), Voltage Regulator
CP..... Coupler	HY..... Circulator	S..... Switch	W..... Cable, Transmission Path, Wire
CR..... Diode, Diode Thyristor, Step Recovery Diode (SCR), Varactor	J..... Electrical Connector (Stationary Portion), Jack	T..... Transformer	X..... Socket
DC.... Directional Coupler	K..... Relay	TB..... Terminal Board	Y..... Crystal Unit (Piezoelectric, Quartz)
DL..... Delay Line	L..... Coil, Inductor		Z..... Tuned Cavity, Tuned Circuit
DS.... Annunciator, Lamp, Light Emitting Diode	M..... Meter		

ABBREVIATIONS

A	C	DB Decibel, Double Break	FDTHRU .. Feed Through
ABS..... Absolute, Acrylonitrile Butadiene Styrene	C..... Capacitance, Capacitor, Center Tapped, Centistoke, Cermet, Circular Mil Foot, Closed Cup, Cold, Compression	DC..... Direct Current, Double Contact	FEM..... Female
A/D.... Analog-to-Digital	CCP..... Carbon Composition Plastic	DEG..... Degree	FET..... Field-Effect Transistor
ADJ.. Adjust, Adjustment	CER..... Ceramic	DIO..... Diode	FH... Flat Head, Full Hard
AG..... Silver	CMOS... Complementary Metal Oxide Semiconductor	D-MODE..... Depletion Mode	FIG..... Figure
ACIC.... Automatic Gain Control	CNDCT..... Conducting, Conductive, Conductivity, Conductor	DO..... Package Type Designation	FL..... Filament, Fillet, Fillister
AL..... Aluminum	COAX..... Coaxial	DPDT..... Double Pole Double Throw	FL..... Flash, Flat, Fluid
ALTNG..... Alternating	CONN..... Connect, Connection, Connector	DR... Dram, Drill, Drilled, Drive, Drum	FLM..... Film, Flame
ANDZ..... Anodized	CONT..... Contact, Continuous, Control, Controller		FM..... Flange, Male Connection; Foam, Frequency Modulation
APC.... Automatic Phase Control	CTR..... Center	E	FR..... Folder
ASSY..... Assembly		ELEC..... Electrical, Electronic	FREQ..... Frequency
AT..... Ampere Turn		ELECT..... Electrolytic	FT..... Current Gain Bandwidth Product (Transition Frequency); Feet, Foot
ATTEN..... Attenuation, Attenuator		EXT..... Extended, Extension, External, Extinguish	FXD..... Fixed
AWG..... American Wire Gage		F	G
B	D	F..... Fahrenheit, Farad, Female, Film (Resistor), Fixed, Flange, Flint, Fluorine, Frequency	GA..... Gallium, Gallon, Gauge
BDG..... Binding	D, Deep, Depletion, Depth, Diameter, Direct Current		GE..... Germanium
BH..... Binding Head			GMV..... Guaranteed Minimum Value
BLK.. Black, Blank, Block			GP..... General Purpose, Group
BNC... Type of Connector			GRA..... Gray
BRS..... Brass			

Table 6-2. Reference Designators and Abbreviations (2 of 2)

H			
HD . . . Hand, Hard, Head, Heavy Duty	MACH. Machined	PF Picofarad; Pipe, Female Connection; Power Factor	STL Steel
HEX Hexadecimal, Hexagon, Hexagonal	MET Metal, Metallic, Metallized, Metallurgical	PIEN . . Bakelite (Phenolic)	SUBMIN . . . Subminiature
HLCL Helical	MET OX Metal Oxide	PHL Phillips	SW . . . Single Wall, Switch
HV High Voltage	MH Medium High	PIN Positive Intrinsic Negative (Transistor)	
HZ Hertz	MHZ Megahertz	PIV . . . Peak Input Voltage	T
	MLD Mold, Molded	PL Phase Lock, Plain, Plate, Plug	T Tab Width, Taper, Teeth, Temperature, Tern, Tesla, Thermoplastic (Insulation), Thickness, Time, Timed, Tooth, Turns Ratio, Typical
	MO Metal Oxide, Milliohmic, Molybdenum	PNP Positive Negative Positive (Transistor)	
I	MOD . . . Model, Modified, Modular, Modulated, Modulator	POLYE Polyester	TA Ambient Temperature, Tantalum
IC Collector Current, Integrated Circuit	MOSFET Metal Oxide Semiconductor Field Effect Transistor	POZI Pozidriv Recess	TANT Tantalum
ID Inside Diameter		PRCN Precision	TC Thermoplastic
IF Forward Current, Intermediate Frequency		PRP Purple, Purpose	TERM Terminal, Termination
IN Inch, Indium		PS Picosecond, Pulse, Polystyrene, Positive Shorting, Pressure Sensitive	THD . . . Thread, Threaded
INCL Including		PTS Parts	THK Thick
INS Insert, Inside, Insulation, Insulator		PWW Precision Wirewound	THRU Through
INT . . . Integral, Intensity, Internal	N		TRMR Trimmer
INTL Internal, International	NAND . . . Logic Not-AND		TRN Turn, Turns
IV Insulation Voltage, Valley Point (Emitter) Current	N-CHAN N-Channel		TSTR Transistor
	NH Nanohenry	Q	TUR Turret
J	NM Nanometer, Nonmetallic	Q Figure of Merit	
J Jack, Joule, Junction	NO Normally Open, Number	QUAD Set of Four	U
J-FET Junction Field Effect Transistor	NOM Nominal		U Micro, Untapped, Uranium
JKT Jacket	NOR Logic Not-OR		UF Microfarad
	NP Nickel Plated	R	UH Microhenry
K	NPN Negative Positive Negative (Transistor)	R . . Range, Red, Resistance, Resistor, Right, Ring, Roshn, Rubber-Resin, Run Torque	UNMTD Unmounted
K Kelvin, Key, Kilo, Potassium	NPO Negative Positive Zero (Zero Temperature Coefficient)	RD . . . Dynamic Resistance, Round	US Microsecond, Microsolen
KHZ Kilohertz	NS Nanosecond, Non-Shorting, Nose	RECT Rectangle, Rectangular, Rectifier	
KV Kilovolt	NSR Not Separately Replaceable	REF Reference	V
		RF Radio Frequency	V . . . Vanadium, Variable, Violet, Volt, Voltage
L	O	RFI Radio Frequency Interference	VAR Variable
L Inductance, Left, Length, Liquid, Locking Threaded, Long, Low	OD . . . Olive Drab, Outside Diameter	RG Source Resistance	VDC Volts, Direct Current
LG Length, Long	OPT Optical, Option, Optional	RMS . . . Root Mean Square	VDCW Direct Current Working Volts
LIN Linear, Linear Taper, Linearity	OX Oxide	RTNR Retainer	VTO Voltage Tuned Oscillator
LITE Light			W
LKWR Lockwasher	P	SEC . . . Second, Secondary	W . . . Watt, Wattage, White, Wide, Width, Wire
LRD Legend Red (HP 6009-0035)	P . . Peak, Phosphorus, Pico, Picosecond, Pitch, Plug, Pole, Polyester, Power, Probe, Pure	SQL Single	W/ With
LT Left, Light, Liter	PI Lead (Metal), Push Button	SHFT Shaft	WIV Working Inverse Voltage
	P.C Printed Circuit	SI Silicon, Square Inch	WV Working Voltage
M	PC Picocoulomb, Piece, Printed Circuit	SL Slide, Slow	WVAC Working Voltage, Alternating Current
M Male, Maximum, Mega, Mil, Milli, Made, Momentary, Mounting Hole Centers, Mounting Hole Diameter	P-CHAN P-Channel	SLDR Solder	WW Wire Wound
MA Milliampere	PD Pad, Palladium, Pitch Diameter, Power Dissipation	SLT Slate, Slot, Slotted	
		SMC Subminiature, C Type (Threaded Connector)	Z
		SPPG Spacing	ZMAX Maximum Impedance
		SST Stainless Steel	ZNR Zener
		ST Set	
		STD Standard	
		STDOFF Standoff	

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	0210-6013	5	1	ASSEMBLY, FREQUENCY RANGE SWITCH	2848U	0210-6013
A1R1	0757-0290	5	3	RESISTOR 6,19K 1% .125W F TC90±100	19701	MFC1/8-10-6191-F
A1R2	0757-0290	5	11	RESISTOR 3,11K 1% .125W F TC90±100	2454b	C4-1/8-10-3111-F
A1R3	0757-0279	0	2	RESISTOR 3,16K 1% .125W F TC90±100	2454b	C4-1/8-10-3161-F
A1R4	0698-3150	5	2	RESISTOR 2,37K 1% .125W F TC90±100	2454b	C4-1/8-10-2371-F
A1R5	0757-0278	1	3	RESISTOR 1,02K 1% .125W F TC90±100	2454b	C4-1/8-10-1021-F
A1R6	0757-0278	5	2	RESISTOR 1,21K 1% .125W F TC90±100	2454b	C4-1/8-10-1211-F
A1R7	0757-0278	3	1	RESISTOR 750 1% .125W F TC90±100	2454b	C4-1/8-10-751-F
A1R8	0757-0218	0	2	RESISTOR 619 1% .125W F TC90±100	2454b	C4-1/8-10-6191-F
A1R9	0698-3147	4	1	RESISTOR 422 1% .125W F TC90±100	2454b	C4-1/8-10-4221-F
A1R10	0698-3148	1	6	RESISTOR 316 1% .125W F TC90±100	2454b	C4-1/8-10-3161-F
A1R11	0757-0402	1	3	RESISTOR 110 1% .125W F TC90±100	2454b	C4-1/8-10-111-F
A1R12	0698-4037	0	1	RESISTOR 40,4 1% .125W F TC90±100	2454b	C4-1/8-10-4041-F
A1R13	0757-0340	1	1	RESISTOR 10 1% .125W F TC90±100	2454b	C4-1/8-10-101-F
A1R14	0757-0347	3	1	RESISTOR 62,1 1% .125W F TC90±100	2454b	C4-1/8-10-6211-F
A1R15	0757-0347	5	5	RESISTOR 22,5 1% .125W F TC90±100	2454b	C4-1/8-10-2251-F
A1R16	0757-0401	0	2	RESISTOR 100 1% .125W F TC90±100	2454b	C4-1/8-10-101-F
A1R17	0698-3137	2	1	RESISTOR 33 1% .125W F TC90±100	2454b	C4-1/8-10-331-F
A1R18	0757-0405	4	1	RESISTOR 102 1% .125W F TC90±100	2454b	C4-1/8-10-1021-F
A1R19	0698-3141	1	1	RESISTOR 215 1% .125W F TC90±100	2454b	C4-1/8-10-2151-F
A1R20	0698-3143	0	2	RESISTOR 247 1% .125W F TC90±100	2454b	C4-1/8-10-2471-F
A1R21	0698-3144	1	1	RESISTOR 316 1% .125W F TC90±100	2454b	C4-1/8-10-3161-F
A1R22	0757-0216	7	2	RESISTOR 511 1% .125W F TC90±100	2454b	C4-1/8-10-5111-F
A1R23	0757-0219	0	2	RESISTOR 681 1% .125W F TC90±100	2454b	C4-1/8-10-6811-F
A1R24	0757-0278	5	3	RESISTOR 1,21K 1% .125W F TC90±100	2454b	C4-1/8-10-1211-F
A1R25	0757-0278	0	3	RESISTOR 1,78K 1% .125W F TC90±100	2454b	C4-1/8-10-1781-F
A1R26	0698-3153	9	4	RESISTOR 3,43K 1% .125W F TC90±100	2454b	C4-1/8-10-3431-F
A1R27	3100-2015	7	1	RESISTOR-VAR W/CM 20K 20K LIN BPDY=HC=40	2848U	3100-2015
A1R28	0757-0227	0	1	RESISTOR 22K 1% .125W F TC90±100	2454b	C4-1/8-10-2211-F
A1B1	3100-2015	2	1	SWITCH-NTPT DP13T-P8 1,502-CTR-SPCC	2848U	3100-2015
A2	0210-6014	4	1	ASSEMBLY, ATTENUATOR 0-9 DB	2848U	0210-6014
	0210-6006	7	2	COVER, ATTENUATOR	2848U	0210-6006
	0210-6019	1	2	CLAMP/PLATE ATTENUATOR COVER	2848U	0210-6019
	0210-6027	4	1	CABLE ASSEMBLY, AMPLIFIER VERNIER	2848U	0210-6027
A2R1	0211-1773	7	2	RESISTOR 220,00K 1% .05W PWH TC90±20	20940	140-1/40-220000-B
A2R2	0211-1778	2	4	RESISTOR 2,20971K 1% .05W PWH TC90±20	20940	140-1/40-220971-B
A2R3	0211-1778	2	2	RESISTOR 2,20971K 1% .05W PWH TC90±20	20940	140-1/40-220971-B
A2R4	0211-1773	7	2	RESISTOR 220,00K 1% .05W PWH TC90±20	20940	140-1/40-220000-B
A2R5	0211-1778	2	2	RESISTOR 2,20971K 1% .05W PWH TC90±20	20940	140-1/40-220971-B
A2R6	0211-1778	2	2	RESISTOR 2,20971K 1% .05W PWH TC90±20	20940	140-1/40-220971-B
A2R7	0211-1772	0	2	RESISTOR 110,149 1% .05W PWH TC90±20	20940	140-1/40-110149-B
A2R8	0211-1771	7	6	RESISTOR 4,30212K 1% .05W PWH TC90±20	20940	140-1/40-430212-B
A2R9	0211-1701	7	7	RESISTOR 4,30212K 1% .05W PWH TC90±20	20940	140-1/40-430212-B
A2R10	0211-1772	0	6	RESISTOR 110,149 1% .05W PWH TC90±20	20940	140-1/40-110149-B
A2R11	0211-1721	7	7	RESISTOR 4,30212K 1% .05W PWH TC90±20	20940	140-1/40-430212-B
A2R12	0211-1721	7	7	RESISTOR 4,30212K 1% .05W PWH TC90±20	20940	140-1/40-430212-B
A2R13	0211-1771	5	1	RESISTOR 57,69 1% .05W PWH TC90±20	20940	140-1/40-5769-B
A2R14	0211-1782	0	2	RESISTOR 6,49548K 1% .05W PWH TC90±20	20940	140-1/40-649548-B
A2R15	0211-1782	0	2	RESISTOR 6,49548K 1% .05W PWH TC90±20	20940	140-1/40-649548-B
A2B1	3100-2014	7	1	SWITCH-ROTARY 1,250 BYRUT CTR SPCC 10	2848U	3100-2014
A3	0210-6015	9	1	ASSEMBLY, 0-60 DB	2848U	0210-6015
	0210-6006	7	2	COVER, ATTENUATOR	2848U	0210-6006
	0210-6019	1	2	CLAMP/PLATE ATTENUATOR COVER	2848U	0210-6019
A3C1	0100-2204	0	3	CAPACITOR-PAD 100PF ±5% 300VDC MICA	2848U	0100-2204
A3L1	9100-1000	3	1	COIL-PLD 2MH 5% 065 .215DK,56LG-HCM	2848U	9100-1000
A3R1	0211-1774	3	3	RESISTOR 2,475K 1% .05W PWH TC90±20	20940	140-1/40-2475K-B
A3R2	0211-1775	9	6	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B
A3R3	0211-1775	9	9	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B
A3R4	0211-1776	0	3	RESISTOR 711,51 1% .05W PWH TC90±20	20940	140-1/40-71151-B
A3R5	0211-1777	1	2	RESISTOR 92,475 1% .05W PWH TC90±20	2848U	0211-1777
A3R6	0211-1777	1	1	RESISTOR 92,475 1% .05W PWH TC90±20	2848U	0211-1777
A3R7	0211-1774	1	3	RESISTOR 2,475K 1% .05W PWH TC90±20	20940	140-1/40-2475K-B
A3R8	0211-1775	9	9	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B
A3R9	0211-1775	9	9	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B
A3R10	0211-1776	0	2	RESISTOR 711,51 1% .05W PWH TC90±20	20940	140-1/40-71151-B
A3R11	0211-1777	1	1	RESISTOR 92,475 1% .05W PWH TC90±20	2848U	0211-1777
A3R12	0211-1777	1	1	RESISTOR 92,475 1% .05W PWH TC90±20	2848U	0211-1777
A3R13	0211-1774	3	3	RESISTOR 2,475K 1% .05W PWH TC90±20	20940	140-1/40-2475K-B
A3R14	0211-1775	9	9	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B
A3R15	0211-1775	9	9	RESISTOR 611,111 1% .05W PWH TC90±20	20940	140-1/40-611111-B

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3M16	0R11-1776	0		RESISTOR 711.5 Ω, 1%, 0.5W PWR TC00±20	20400	100-1/40-7115B-0
A3M17	0R11-1777	1		RESISTOR 942.0 Ω, 1%, 0.5W PWR TC00±20	20400	0R11-1777
A3M18	0R11-1777	1		RESISTOR 942.0 Ω, 1%, 0.5W PWR TC00±20	20400	0R11-1777
A3M19	CA11-1770	0	1	RESISTOR 500 Ω, 1%, 0.5W PWR TC00±20	20400	100-1/40-501-0
A3D1	3100-2006	7	1	SWITCH-ROTARY 1,250 STRUT CTR SPEC; 7	20400	3100-2006
A4	0R10-0003	0	1	ASSEMBLY, 20 MHz IF AMPLIFIER BOARD	20400	0R10-0003
A4C1	0100-2055	9	29	CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C2	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C3	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C4	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C5	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C6	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C7	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C8	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C9	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C10	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C11	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C12	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C13	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4C14	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A4D1	1A50-0073	9	9	TRANSISTOR NPN B; 10-72 PD=200mW	20400	1A50-0073
A4D2	1A50-0073	9		TRANSISTOR NPN B; 10-72 PD=200mW	20400	1A50-0073
A4D3	1A50-0073	0	3	TRANSISTOR PNP B; 10-18 PD=100mW	20400	1A50-0073
A4D4	1A50-0073	0		TRANSISTOR NPN B; 10-72 PD=200mW	20400	1A50-0073
A4D5	1A50-0073	0		TRANSISTOR PNP B; 10-18 PD=100mW	20400	1A50-0073
A4D6	1A50-0073	9		TRANSISTOR NPN B; 10-72 PD=200mW	20400	1A50-0073
A4M1	0757-0442	9	5	RESISTOR 10K Ω, 125m F TC00±100	20400	CA-1/8-10-1002-F
A4M2	0757-0430	3	0	RESISTOR 5.11K Ω, 125m F TC00±100	20400	CA-1/8-10-5111-F
A4M3	0757-0401	3	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M4	0757-0420	3	0	RESISTOR 1K Ω, 125m F TC00±100	20400	CA-1/8-10-1001-F
A4M5	0640-3153	9	0	RESISTOR 3.03K Ω, 125m F TC00±100	20400	CA-1/8-10-3031-F
A4M6	0640-0083	0	0	RESISTOR 1.90K Ω, 125m F TC00±100	20400	CA-1/8-10-1901-F
A4M7	0640-0085	0	0	RESISTOR 2.01K Ω, 125m F TC00±100	20400	CA-1/8-10-2011-F
A4M8	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M9	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M10	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M11	0640-3132	0	1	RESISTOR 201 Ω, 125m F TC00±100	20400	CA-1/8-10-2010-F
A4M12	0757-0279	0	0	RESISTOR 3.16K Ω, 125m F TC00±100	20400	CA-1/8-10-3161-F
A4M13	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M14	0757-0430	0	0	RESISTOR 5.11K Ω, 125m F TC00±100	20400	CA-1/8-10-5111-F
A4M15	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M16	0757-0220	3	0	RESISTOR 1K Ω, 125m F TC00±100	20400	CA-1/8-10-1001-F
A4M17	0757-0410	3	0	RESISTOR 619 Ω, 125m F TC00±100	20400	CA-1/8-10-6191-F
A4M18	0757-0422	5	2	RESISTOR 909 Ω, 125m F TC00±100	20400	CA-1/8-10-9091-F
A4M19	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M20	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M21	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M22	0757-0430	3	0	RESISTOR 5.11K Ω, 125m F TC00±100	20400	CA-1/8-10-5111-F
A4M23	0640-3130	0	3	RESISTOR 1.47K Ω, 125m F TC00±100	20400	CA-1/8-10-1471-F
A4M24	0757-0279	0	0	RESISTOR 3.16K Ω, 125m F TC00±100	20400	CA-1/8-10-3161-F
A4M25	0640-3400	7	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-1001-F
A4M26	0640-3400	3	3	RESISTOR 303 Ω, 125m F TC00±100	20400	CA-1/8-10-3031-F
A4M27	0757-0270	0	0	RESISTOR 3.16K Ω, 125m F TC00±100	20400	CA-1/8-10-3161-F
A4M28	0757-0401	0	0	RESISTOR 100 Ω, 125m F TC00±100	20400	CA-1/8-10-101-F
A4M29	0757-0430	3	0	RESISTOR 5.11K Ω, 125m F TC00±100	20400	CA-1/8-10-5111-F
A4M30	0640-3130	0	2	RESISTOR 10.7K Ω, 125m F TC00±100	20400	CA-1/8-10-1071-F
A5	0010-0037	5	1	ASSEMBLY, PHASE DETECTOR BOARD	20400	0010-0037
A5C1				DELETED		
A5C2	0100-2255	1	1	CAPACITOR-FXD 0.22UF +5% 500VDC CER	20400	0100-2255
A5C3	0100-0191	0	1	CAPACITOR-FXD 50PF +5% 300VDC MICA	20400	0100-0191
A5C4	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C5	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C6	0100-0370	7	1	CAPACITOR-FXD 0.33UF +5% 500VDC MICA	20400	0100-0370
A5C7	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C8	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C9	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C10	0100-2307	0	0	CAPACITOR-FXD 0.15UF +5% 300VDC MICA	20400	0100-2307
A5C11	0100-2307	0	0	CAPACITOR-FXD 0.15UF +5% 300VDC MICA	20400	0100-2307
A5C12	0100-2307	0	0	CAPACITOR-FXD 0.15UF +5% 300VDC MICA	20400	0100-2307
A5C13	0100-2307	0	0	CAPACITOR-FXD 0.15UF +5% 300VDC MICA	20400	0100-2307
A5C14	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055
A5C15	0100-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	20400	0100-2055

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5C16 A5C17	0160-0155	0	1	CAPACITOR-FXD 3300PF ±10% 200VDC POLY DELETED	28480	0160-0155
A5C18 A5C19 A5C20 A5C21 A5C22 A5C23	1401-0179	7	8	DIODE-SWITCHING 15V 50MA 750PB DO-7	28480	1401-0179
A5C24 A5C25 A5C26 A5C27 A5C28 A5C29 A5C30	1401-0179 1401-0179 1401-0179 1401-0179 1401-0179 1401-0179 1401-0022	7 7 7 7 7 7 9	7	DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-SWITCHING 15V 50MA 750PB DO-7 DIODE-STABILIZOR 15V 250MA DIODE-STABILIZOR 15V 250MA	28480 28480 28480 28480 28480 28480 28480	1401-0179 1401-0179 1401-0179 1401-0179 1401-0179 1401-0179 1401-0022
A5L1 A5L2 A5L3 A5L4 A5L5	9180-0105 9100-1618 9140-0121	3 3 3	1	COIL-PLD 2,5UM 10K OHM ±15% 375LG-4DM COIL-PLD 2,5UM 10K OHM ±15% 375LG-4DM COIL-PLD 1,5UM 10K OHM ±15% 375LG-4CM DELETED	28480 28480 28480	9180-0105 9100-1618 9140-0121
A5Q1 A5Q2 A5Q3 A5Q4 A5Q5	1454-0071 1454-0071 1454-0071 1454-0071 1454-0071	7 7 7 7 9	12	TRANSISTOR NPN 81 PDB300MA F7R200MHZ TRANSISTOR NPN 81 PDB300MA F7R200MHZ TRANSISTOR NPN 81 PDB300MA F7R200MHZ TRANSISTOR NPN 81 TO-72 PDB300MA TRANSISTOR NPN 81 TO-72 PDB300MA	28480 28480 28480 28480 28480	1454-0071 1454-0071 1454-0071 1454-0071 1454-0071
A5Q6	1454-0071	9	9	TRANSISTOR NPN 81 TO-72 PDB300MA	28480	1454-0071
A5R1 A5R2 A5R3 A5R4 A5R5	0757-0016 0757-0016 0694-1157 0757-0016 0757-0016	7 3 1 7 7	2	RESISTOR 511K 1% 125W P TCO0-100 RESISTOR 5,11K 1% 125W P TCO0-100 RESISTOR 17,5K 1% 125W P TCO0-100 RESISTOR 511K 1% 125W P TCO0-100 RESISTOR 5,11K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-5111-F CA-18-Y0-5111-F CA-18-Y0-1752-F CA-18-Y0-5111-F CA-18-Y0-5111-F
A5R6 A5R7 A5R8 A5R9 A5R10	0698-1157 0757-0001 0757-0199 0757-0199 0757-0001	1 1 6 3 0	2	RESISTOR 17,5K 1% 125W P TCO0-100 RESISTOR 525K 1% 125W P TCO0-100 RESISTOR 21,5K 1% 125W P TCO0-100 RESISTOR 21,5K 1% 125W P TCO0-100 RESISTOR 100K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-1752-F CA-18-Y0-5251-F CA-18-Y0-2152-F CA-18-Y0-2152-F CA-18-Y0-1001-F
A5R11 A5R12 A5R13 A5R14 A5R15	0757-0020 0757-0001 0694-1158 0757-0001 0757-0016	3 1 3 3 3	3	RESISTOR 1K 1% 125W P TCO0-100 RESISTOR 100K 1% 125W P TCO0-100 RESISTOR 1K7 1% 125W P TCO0-100 RESISTOR 100K 1% 125W P TCO0-100 RESISTOR 5,11K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-1001-F CA-18-Y0-1001-F CA-18-Y0-1001-F CA-18-Y0-1001-F CA-18-Y0-5111-F
A5R16 A5R17 A5R18 A5R19 A5R20	0694-0083 0694-1143 0694-0083 0694-1143 0757-0001	0 0 0 0 0	0	RESISTOR 1,75K 1% 125W P TCO0-100 RESISTOR 287K 1% 125W P TCO0-100 RESISTOR 1,75K 1% 125W P TCO0-100 RESISTOR 287K 1% 125W P TCO0-100 RESISTOR 100K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-1751-F CA-18-Y0-2871-F CA-18-Y0-1751-F CA-18-Y0-2871-F CA-18-Y0-1001-F
A5R21 A5R22 A5R23 A5R24 A5R25	0694-1155 0757-0016 0757-0001 0757-0020 0694-1154	1 3 0 1 0	5	RESISTOR 4,22K 1% 125W P TCO0-100 RESISTOR 3,11K 1% 125W P TCO0-100 RESISTOR 100K 1% 125W P TCO0-100 RESISTOR 1K 1% 125W P TCO0-100 RESISTOR 4,22K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-4221-F CA-18-Y0-3111-F CA-18-Y0-1001-F CA-18-Y0-1001-F CA-18-Y0-4221-F
A5R26 A5R27 A5R28 A5R29 A5R30	0694-1154 0694-1154 0694-1154 0694-1040 0694-1040	0 0 0 7 7	0	RESISTOR 4,22K 1% 125W P TCO0-100 RESISTOR 4,22K 1% 125W P TCO0-100 RESISTOR 4,22K 1% 125W P TCO0-100 RESISTOR 146K 1% 125W P TCO0-100 RESISTOR 146K 1% 125W P TCO0-100	24546 24546 24546 24546 24546	CA-18-Y0-4221-F CA-18-Y0-4221-F CA-18-Y0-4221-F CA-18-Y0-1461-F CA-18-Y0-1461-F
A6	08410-0000	0	1	20 MHZ OSCILLATOR ASSEMBLY DOES NOT INCLUDE VT	28480	08410-0000
A6C1 A6C2 A6C3 A6C4 A6C5	0160-2055 0160-2055 0160-2055 0160-2055 0160-0149	9 9 9 9 6	1	CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD 200PF ±5% 100VDC MICA	28480 28480 28480 28480 28136	0160-2055 0160-2055 0160-2055 0160-2055 CM15P21J0300V1C8
A6C6 A6C7 A6C8 A6C9 A6C10	0160-2218 0160-0204 0160-2204 0160-2055	0 5 0 9	1	CAPACITOR-FXD 1000PF ±5% 100VDC MICA CAPACITOR-FXD 27PF ±5% 100VDC MICA CAPACITOR-FXD 100PF ±5% 100VDC MICA CAPACITOR-FXD .01UF ±20-20% 100VDC CER	28480 28136 28480 28480	0160-2218 CM15L20J0300V1C8 0160-2204 0160-2055
A6C11 A6C12 A6C13 A6C14	0160-2204 0160-2055 0160-2055 0160-2055	0 9 9 9	0	CAPACITOR-FXD 100PF ±5% 100VDC MICA CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD .01UF ±20-20% 100VDC CER CAPACITOR-FXD .01UF ±20-20% 100VDC CER	28480 28480 28480 28480	0160-2204 0160-2055 0160-2055 0160-2055
A6C15 A6C16	1910-0022 1910-0022	0 0	2	DIODE-GE 5V 50MA 3,548 DO-7 DIODE-GE 5V 50MA 3,548 DO-7	28480 28480	1910-0022 1910-0022

See introduction to this section for ordering information
*Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
16C1	9100-1031	8	1	COIL-PLD 50UM SK 0-55 ,1850J,375L6-NOM	28480	9100-1031
16D1	1850-0073	9		TRANSISTOR NPN 81 TO-18 P02300M	28480	1850-0073
16D2	1850-0073	9		TRANSISTOR NPN 81 TO-18 P02300M	28480	1850-0073
16D3	1850-0034	0		TRANSISTOR PNP 81 TO-18 P01300M	28480	1850-0034
16R1	0698-0083	8		RESISTOR 1,50K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1941-F
16R2	0757-0087	4	3	RESISTOR 16,2K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1022-F
16R3	0698-0187	3		RESISTOR 16,2K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1022-F
16R4	0757-0280	3		RESISTOR 1K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1001-F
16R5	0757-0280	3		RESISTOR 1K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1001-F
16R6	0698-3080	7		RESISTOR 190 1% ,125W F TC00+-100	24506	CA-1/8-T0-190M-F
16R7	0757-0279	0		RESISTOR 3,16K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3161-F
16R8	0757-0201	0		RESISTOR 100 1% ,125W F TC00+-100	24506	CA-1/8-T0-101-F
16R9	0757-0280	4		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
16R10	0757-0280	5		RESISTOR 5,11K 1% ,125W F TC00+-100	24506	CA-1/8-T0-5111-F
16R11	0757-0201	0		RESISTOR 100 1% ,125W F TC00+-100	24506	CA-1/8-T0-101-F
16R12	0757-0280	8		RESISTOR 909 1% ,125W F TC00+-100	24506	CA-1/8-T0-909M-F
16R13	0698-3153	9		RESISTOR 3,83K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3831-F
16R14	0698-3040	7		RESISTOR 190 1% ,125W F TC00+-100	24506	CA-1/8-T0-190M-F
16R15	0698-0083	8		RESISTOR 1,50K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1941-F
16R16	0698-3153	6		RESISTOR 3,83K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3831-F
16R17	0698-3080	7		RESISTOR 190 1% ,125W F TC00+-100	24506	CA-1/8-T0-190M-F
16R18	0757-0201	0		RESISTOR 100 1% ,125W F TC00+-100	24506	CA-1/8-T0-101-F
16R19	0757-0279	0		RESISTOR 3,16K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3161-F
16RY1	1200-0191	7	1	SCHEM-TAL 2-CONT MC-25/U DIP-8LDR	28480	1200-0191
16Y1	0810-0123	4	1	CRYSTAL, QUARTZ(MATCHED TO A13Y1)	28480	0810-0123
17	0810-0041	8	1	ASSEMBLY, VFO-DC AMPLIF(EN BOARD)	28480	0810-0041
17C1	0160-2230	2	1	CAPACITOR-FXD 330PF +-5% 300VDC MICA	28480	0160-2230
17C2	0160-0160	3	1	CAPACITOR-FXD 4,7UF+-10% 25VDC TA	28480	160075K901002
17C3	0160-2209	9	1	CAPACITOR-FXD 360PF +-5% 300VDC MICA	28480	0160-2209
17C4	0160-0160	3	1	CAPACITOR-FXD 4,7UF+-10% 25VDC TA	28480	160010K902002
17C5	0160-0121	5	3	CAPACITOR-FXD ,1UF +-5% 50VDC CER	28480	0160-0121
17C6	0160-0121	5		CAPACITOR-FXD ,1UF +-5% 50VDC CER	28480	0160-0121
17C7	0160-0121	0		CAPACITOR-FXD ,1UF +-5% 50VDC CER	28480	0160-0121
17C8	0160-0159	0	1	CAPACITOR-FXD 5000PF +-10% 200VDC POLYE	28480	0160-0159
17C9	0160-0167	0	1	CAPACITOR-FXD 2200PF +-10% 200VDC POLYE	28480	0160-0167
17C10	0160-0160	3	1	CAPACITOR-FXD 4,7UF +-10% 25VDC POLYE	28480	0160-0160
17C11	1901-0025	2	2	DIODE-GER PNP 100V 200MA DO-7	28480	1901-0025
17C12	1901-0025	2	2	DIODE-GER PNP 100V 200MA DO-7	28480	1901-0025
17D1	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17D2	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17D3	1850-0020	4	2	TRANSISTOR PNP 81 PD300M FT150MMZ	28480	1850-0020
17D4	1850-0078	6	1	TRANSISTOR J-FET N-CMOS D-MODE 81	28480	1850-0078
17D5	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17D6	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17D7	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17D8	1850-0071	7		TRANSISTOR NPN 81 PD300M FT200MMZ	28480	1850-0071
17R1	0698-3260	9	1	RESISTOR 40K 1% ,125W F TC00+-100	24506	0698-3260
17R2	0757-0261	2	1	RESISTOR 68,1K 1% ,125W F TC00+-100	24506	CA-1/8-T0-6812-F
17R3	0757-0280	9		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R4	0698-3451	0	1	RESISTOR 33K 1% ,125W F TC00+-100	24506	CA-1/8-T0-333-F
17R5	0757-0210	7		RESISTOR 511 1% ,125W F TC00+-100	24506	CA-1/8-T0-511M-F
17R6	0757-0221	4		RESISTOR 825 1% ,125W F TC00+-100	24506	CA-1/8-T0-825M-F
17R7	0757-0276	7	1	RESISTOR 81,9 1% ,125W F TC00+-100	24506	CA-1/8-T0-819M-F
17R8	0757-0250	7	2	RESISTOR 51,1K 1% ,125W F TC00+-100	24506	CA-1/8-T0-5112-F
17R9	0757-0230	3		RESISTOR 8,11K 1% ,125W F TC00+-100	24506	CA-1/8-T0-8111-F
17R10	2100-3350	1	1	RESISTOR-TAMA 50K 10% C 510L-ADJ 1-TM	28480	2100-3350
17R11	0698-3153	9		RESISTOR 3,83K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3831-F
17R12	0698-3038	3		RESISTOR 147 1% ,125W F TC00+-100	24506	CA-1/8-T0-147M-F
17R13	0757-0280	1		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R14	0757-0280	9		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R15	0698-3038	3		RESISTOR 147 1% ,125W F TC00+-100	24506	CA-1/8-T0-147M-F
17R16	0698-3450	9	2	RESISTOR 42,2K 1% ,125W F TC00+-100	24506	CA-1/8-T0-4222-F
17R17	0698-3153	1		RESISTOR 3,83K 1% ,125W F TC00+-100	24506	CA-1/8-T0-3831-F
17R18	0757-0280	1		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R19	0757-0280	3		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R20	0757-0280	4		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R21	0757-0210	7		RESISTOR 511 1% ,125W F TC00+-100	24506	CA-1/8-T0-511M-F
17R22	0698-3150	0		RESISTOR 4,22K 1% ,125W F TC00+-100	24506	CA-1/8-T0-4221-F
17R23	0757-0280	9		RESISTOR 10K 1% ,125W F TC00+-100	24506	CA-1/8-T0-1002-F
17R24	0698-3040	1		RESISTOR 190 1% ,125W F TC00+-100	24506	CA-1/8-T0-190M-F
17R25	0698-3080	1		RESISTOR 190 1% ,125W F TC00+-100	24506	CA-1/8-T0-190M-F

See Introduction to this section for ordering information
 *Indicates factory selected value

Table 6-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
17K25 17K27 17K28	0757-0414 0757-0416 0698-0022	0 7 7	1	RESISTOR 50K 1% 125W P TC00±100 RESISTOR 51K 1% 125W P TC00±100 RESISTOR 50K 1% 125W P TC00±100	24506 24506 24506	CA=1/8-T0-50K-F CA=1/8-T0-51K-F CA=1/8-T0-50K-F
AB	0P410-0007	2	1	SEARCH GENERATOR ASSEMBLY	28400	0P410-0007
ABC1	0100-0100	1	1	CAPACITOR-P40 ,1UF ±10% 200VDC POLYE	28400	0100-0100
ABO1 ABO2 ABO3 ABO4 ABO5	1A50-0071 1A50-0071 1A53-0020 1A53-0020 1A53-0020	7 7 4 4 4		TRANSISTOR NPN 81 PD300MH FT0200MHZ TRANSISTOR NPN 81 PD300MH FT0200MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ	28400 28400 28400 28400 28400	1A50-0071 1A50-0071 1A53-0020 1A53-0020 1A53-0020
ABO6 ABO7 ABO8 ABO9 ABO10	1A50-0071 1A53-0020 1A53-0020 1A53-0020 1A53-0020	7 4 4 4 4		TRANSISTOR NPN 81 PD300MH FT0200MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ TRANSISTOR PNP 81 PD300MH FT0150MHZ	28400 28400 28400 28400 28400	1A50-0071 1A53-0020 1A53-0020 1A53-0020 1A53-0020
ABP1 ABP2 ABP3 ABP4 ABP5	0757-0417 0757-0419 0757-0420 0757-0402 0698-0400	8 5 1 1 3	2	RESISTOR 50K 1% 125W P TC00±100 RESISTOR 52.5K 1% 125W P TC00±100 RESISTOR 1.0K 1% 125W P TC00±100 RESISTOR 110 1% 125W P TC00±100 RESISTOR 303 1% 125W P TC00±100	24506 24506 24506 24506 24506	CA=1/8-T0-50K-F CA=1/8-T0-52.5K-F CA=1/8-T0-1021-F CA=1/8-T0-110-F CA=1/8-T0-303-F
ABP6 ABP7 ABP8 ABP9 ABP10	0698-0083 0698-0150 0757-0424 NOT ASSIGNED NOT ASSIGNED	8 7 7 NOT ASSIGNED NOT ASSIGNED		RESISTOR 1.0K 1% 125W P TC00±100 RESISTOR 14.7K 1% 125W P TC00±100 RESISTOR 1.1K 1% 125W P TC00±100 NOT ASSIGNED NOT ASSIGNED	24506 24506 24506 NOT ASSIGNED NOT ASSIGNED	CA=1/8-T0-10K-F CA=1/8-T0-14.7K-F CA=1/8-T0-1101-F NOT ASSIGNED NOT ASSIGNED
ABM11 ABM12 ABM13 ABM14 ABM15	0757-0700 0757-0709 0698-0083 0757-0424 0757-0403	7 0 8 7 0	1	RESISTOR 5.0K 1% 125W P TC00±100 RESISTOR 3.0K 1% 125W P TC00±100 RESISTOR 1.0K 1% 125W P TC00±100 RESISTOR 1.1K 1% 125W P TC00±100 RESISTOR 11K 1% 125W P TC00±100	24506 24506 24506 24506 24506	CA=1/8-T0-50K-F CA=1/8-T0-30K-F CA=1/8-T0-10K-F CA=1/8-T0-1101-F CA=1/8-T0-11K-F
ABM16 ABM17 ABM18 ABM19 ABM20	0698-0151 0698-0083 0757-0708 0757-0401 0757-0199	7 0 8 1 3	1	RESISTOR 2.0K 1% 125W P TC00±100 RESISTOR 247 1% 125W P TC00±100 RESISTOR 1.7K 1% 125W P TC00±100 RESISTOR 0.25K 1% 125W P TC00±100 RESISTOR 21.5K 1% 125W P TC00±100	24506 24506 24506 24506 24506	CA=1/8-T0-20K-F CA=1/8-T0-247K-F CA=1/8-T0-1701-F CA=1/8-T0-250-F CA=1/8-T0-21.5K-F
ABP21 ABP22 ABP23 ABP24 ABP25	0757-0199 0757-0199 0757-0199 0757-0290 0757-0290	3 3 3 5 5		RESISTOR 21.5K 1% 125W P TC00±100 RESISTOR 21.5K 1% 125W P TC00±100 RESISTOR 21.5K 1% 125W P TC00±100 RESISTOR 0.19K 1% 125W P TC00±100 RESISTOR 0.19K 1% 125W P TC00±100	24506 24506 24506 19701 19701	CA=1/8-T0-21.5K-F CA=1/8-T0-21.5K-F CA=1/8-T0-21.5K-F MFC1/8-T0-0.19K-F MFC1/8-T0-0.19K-F
ABP26 ABP27 ABP28 ABP29 ABP30	0757-0450 0698-0150 0698-0150 NOT ASSIGNED 0757-0270	7 5 5 NOT ASSIGNED 9	2	RESISTOR 51.1K 1% 125W P TC00±100 RESISTOR 26.1K 1% 125W P TC00±100 RESISTOR 26.1K 1% 125W P TC00±100 NOT ASSIGNED RESISTOR 1.70K 1% 125W P TC00±100	24506 24506 24506 NOT ASSIGNED 24506	CA=1/8-T0-51.1K-F CA=1/8-T0-26.1K-F CA=1/8-T0-26.1K-F NOT ASSIGNED CA=1/8-T0-1701-F
ABM31 ABM32 ABM33 ABM34 ABM35	NOT ASSIGNED 0698-0150 0698-0450 0757-0407 0698-0400	NOT ASSIGNED 8 9 8 3	1	NOT ASSIGNED RESISTOR 17.0K 1% 125W P TC00±100 RESISTOR 42.2K 1% 125W P TC00±100 RESISTOR 16.2K 1% 125W P TC00±100 RESISTOR 303 1% 125W P TC00±100	NOT ASSIGNED 24506 24506 24506 24506	NOT ASSIGNED CA=1/8-T0-170K-F CA=1/8-T0-42.2K-F CA=1/8-T0-16.2K-F CA=1/8-T0-303K-F
ABP36 ABP37 ABP38 ABP39 ABP40	0698-0083 0757-0402 0757-0402 0757-0401 0757-0417	8 1 1 8 0	20	RESISTOR 1.0K 1% 125W P TC00±100 RESISTOR 110 1% 125W P TC00±100 RESISTOR 1.02K 1% 125W P TC00±100 RESISTOR 100 1% 125W P TC00±100 RESISTOR 50K 1% 125W P TC00±100	24506 24506 24506 24506 24506	CA=1/8-T0-10K-F CA=1/8-T0-110-F CA=1/8-T0-1021-F CA=1/8-T0-100-F CA=1/8-T0-50K-F

See Introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AC	08410-00100	1	1	BOARD ASSEMBLY, AUTOMATIC CONTROL	28000	08410-00100
AC1	0100-0575	4	2	CAPACITOR-PAD .047UF +/-20% 50VDC CER	28000	0100-0575
AC2	0100-1877	5	1	CAPACITOR-PAD 100PF +/-20% 200VDC CER	28000	0100-1877
AC3	0100-0575	4	2	CAPACITOR-PAD .047UF +/-20% 50VDC CER	28000	0100-0575
AC4	0100-0575	4	2	CAPACITOR-PAD .047UF +/-20% 50VDC CER	28000	0100-0575
AC5	0100-1705	0	1	CAPACITOR-PAD .15UF +/-10% 20VDC TA	28000	0100-0575
					56289	180019000002
AC6	0100-1705	2	2	CAPACITOR-PAD .15UF +/-10% 20VDC TA	56289	180019000002
AC7	0100-1705	2	2	CAPACITOR-PAD .15UF +/-10% 20VDC TA	56289	180019000002
AC8	0100-0028	8	2	CAPACITOR-PAD .1UF +/-20% 50VDC CER	28000	0100-0028
AC9	0100-1705	8	1	CAPACITOR-PAD .15UF +/-10% 20VDC TA	56289	180019000002
AC10	0100-0028	8	2	CAPACITOR-PAD .1UF +/-20% 50VDC CER	28000	0100-0028
AC11	1901-0000	1	2	DIODE-SWITCHING 10V 50MA 2PH DO-35	28000	1901-0000
AC12	1901-0000	1	2	DIODE-SWITCHING 10V 50MA 2PH DO-35	28000	1901-0000
AC13	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC14	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC15	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC16	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC17	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC18	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC19	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC20	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC21	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC22	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC23	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC24	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC25	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC26	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC27	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC28	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC29	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC30	1850-0071	7	4	TRANSISTOR NPN 8I PDM300MA FT=200MHZ	28000	1850-0071
AC31	0757-0045	0	1	RESISTOR 100K 1% .125W F TC00+-100	24500	CA-1/8-T0-1001-F
AC32	0757-0061	2	1	RESISTOR 20K 1% .125W F TC00+-100	24500	CA-1/8-T0-201-F
AC33	0757-0047	4	1	RESISTOR 10K 1% .125W F TC00+-100	24500	CA-1/8-T0-1002-F
AC34	0698-1055	5	1	RESISTOR 1M 5% .25W FC TC00+-100	02111	02111
AC35	0757-0058	7	4	RESISTOR 51.1K 1% .125W F TC00+-100	24500	CA-1/8-T0-511-F
AC36	0757-0048	7	4	RESISTOR 51.1K 1% .125W F TC00+-100	24500	CA-1/8-T0-511-F
AC37	0757-0050	7	4	RESISTOR 51.1K 1% .125W F TC00+-100	24500	CA-1/8-T0-511-F
AC38	0698-1122	0	1	RESISTOR 46.8K 1% .125W F TC00+-100	24500	CA-1/8-T0-468-F
AC39	2100-3164	2	1	RESISTOR-TYMR 2K 10% C BIDE-ADJ 17-TMR	02111	02111
AC40	0757-0290	5	1	RESISTOR 4.19K 1% .125W F TC00+-100	19701	HP-1/8-T0-4191-F
AC41	0757-0028	1	2	RESISTOR 1.02K 1% .125W F TC00+-100	24500	CA-1/8-T0-1021-F
AC42	0757-0071	4	1	RESISTOR 825 1% .125W F TC00+-100	24500	CA-1/8-T0-825M-F
AC43	0757-0016	7	2	RESISTOR 511 1% .125W F TC00+-100	24500	CA-1/8-T0-511M-F
AC44	0757-0058	7	4	RESISTOR 51.1K 1% .125W F TC00+-100	24500	CA-1/8-T0-511-F
AC45	0757-0047	4	1	RESISTOR 10K 1% .125W F TC00+-100	24500	CA-1/8-T0-1002-F
AC46	0757-0070	3	1	RESISTOR 750 1% .125W F TC00+-100	24500	CA-1/8-T0-751-F
AC47	2100-3044	4	1	RESISTOR-TYMR 100K 10% C BIDE-ADJ 17-TMR	02111	02111
AC48	0757-0047	4	1	RESISTOR 10K 1% .125W F TC00+-100	24500	CA-1/8-T0-1002-F
AC49	0698-1158	4	2	RESISTOR 23.7K 1% .125W F TC00+-100	24500	CA-1/8-T0-237-F
AC50	0757-0044	1	1	RESISTOR 12.1K 1% .125W F TC00+-100	24500	CA-1/8-T0-121-F
AC51	0757-0123	3	1	RESISTOR 30.8K 1% .125W F TC00+-100	28000	0757-0123
AC52	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC00+-100	24500	CA-1/8-T0-1961-F
AC53	0698-1158	2	2	RESISTOR 14.7K 1% .125W F TC00+-100	24500	CA-1/8-T0-147-F
AC54	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC00+-100	24500	CA-1/8-T0-1961-F
AC55	0757-0280	3	1	RESISTOR 1K 1% .125W F TC00+-100	24500	CA-1/8-T0-1001-F
AC56	0698-1155	1	1	RESISTOR 4.04K 1% .125W F TC00+-100	24500	CA-1/8-T0-4041-F
AC57	0698-1156	2	1	RESISTOR 16.7K 1% .125W F TC00+-100	24500	CA-1/8-T0-167-F
AC58	0698-1158	4	1	RESISTOR 23.7K 1% .125W F TC00+-100	24500	CA-1/8-T0-237-F
AC59	0757-0040	7	1	RESISTOR 7.5K 1% .125W F TC00+-100	24500	CA-1/8-T0-7501-F
AC60	0698-1155	0	1	RESISTOR 3.03K 1% .125W F TC00+-100	24500	CA-1/8-T0-3031-F
AC61	0757-0016	7	1	RESISTOR 511 1% .125W F TC00+-100	24500	CA-1/8-T0-511M-F
AC62	0757-0038	3	1	RESISTOR 5.11K 1% .125W F TC00+-100	24500	CA-1/8-T0-5111-F
AC63	0698-1046	3	1	RESISTOR 385 1% .125W F TC00+-100	24500	CA-1/8-T0-385M-F
AC64	0698-1043	0	1	RESISTOR 287 1% .125W F TC00+-100	24500	CA-1/8-T0-287M-F
AC65	0757-0028	1	1	RESISTOR 1.02K 1% .125W F TC00+-100	24500	CA-1/8-T0-1021-F
AC66	0698-1260	9	1	RESISTOR 804K 1% .125W F TC00+-100	28000	0698-1260
AC67	1870-1530	2	1	IC GATE CMOS NAND QUAD 2-INP	01920	CD0011AF
AC68	1870-2051	6	2		28000	1870-2051
AC69	1870-2051	6	2		28000	1870-2051
AC70	1870-0026	3	1	COMPARATOR PRECN TO-99	00713	PLM3116
AC71	1902-0080	7	1	DIODE-ZNR 14027 6.2V 5% DO-7 PD=25W	24000	14027
AC72	1902-0071	0	1	DIODE-ZNR 4V 5% DO-14 PD=5W TC00+001K	28000	1902-0071
AC73	1902-0025	4	1	DIODE-ZNR 10V 5% DO-7 PD=4W TC00+001K	28000	1902-0025
AC74	1200-0500	0	1	SOCKET-IC 16-COHT DIP-8LCD	28000	1200-0500
AC75	1200-0507	9	2	SOCKET-IC 16-COHT DIP-8LCD	28000	1200-0507
AC76	1200-0507	9	2	SOCKET-IC 16-COHT DIP-8LCD	28000	1200-0507
AC77	1200-0507	9	2	SOCKET-IC 16-COHT DIP-8LCD	28000	1200-0507
AC78	1200-0555	0	1	SOCKET-IC 8-COHT DIP-8LCD	28000	1200-0555

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10	0110-0049	0	1	ASSEMBLY, WIRING INTERCONNECT BOARD (INCLUDES ONLY KAI, CM) THRU 8	2840	0110-0049
A10C1	0180-2777	2	3	CAPACITOR-PAD 3900UF*75-10K 50VDC AL	00253	3003920056AC2A
A10C2	0180-2779	2	3	CAPACITOR-PAD 3900UF*75-10K 50VDC AL	00253	3003920056AC2A
A10C3	0180-2779	2	3	CAPACITOR-PAD 3900UF*75-10K 50VDC AL	00253	3003920056AC2A
A10C4	0180-0050	2	1	CAPACITOR-PAD 48UF*75-10K 50VDC AL	56289	300006000002
A10C5				NOT ASSIGNED		
A10C6				NOT ASSIGNED		
A10C7	0180-0070	4	2	CAPACITOR-PAD 100UF*75-10K 25VDC AL	56289	300107002500F
A10C8	0180-0070	4	2	CAPACITOR-PAD 100UF*75-10K 25VDC AL	56289	300107002500F
A10C9	0180-0370	3	2	CAPACITOR-PAD 100UF*10K 25VDC TA	56289	1500100100002
A10C10	0180-0370	3	2	CAPACITOR-PAD 100UF*10K 25VDC TA	56289	1500100100002
A10C11	0180-0210	2	2	CAPACITOR-PAD 270PF +-5% 300VDC MICA	72156	0M13P271J0300V1CM
A10C12	0180-0210	2	2	CAPACITOR-PAD 270PF +-5% 300VDC MICA	72156	0M13P271J0300V1CM
A10C13	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C14	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C15	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C16	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C17	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C18	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C19	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C20	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C21	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C22	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C23	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C24	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C25	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C26	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C27	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10C28	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29	2840	1901-0026
A10D1	1854-0003	7	3	TRANSISTOR NPN 2N1055 B1 TO-3 PDB115W	2840	1854-0003
A10D2	1854-0003	7	3	TRANSISTOR NPN 2N1055 B1 TO-3 PDB115W	2840	1854-0003
A10D3	1854-0003	7	3	TRANSISTOR NPN 2N1055 B1 TO-3 PDB115W	2840	1854-0003
A10D4	1200-0003	4	1	INSULATOR-2X1X ALUMINUM	2840	1200-0003
A10D5	1200-0147	3	1	INSULATOR-PLG-88HC NYLON	2840	1200-0147
A10E1	1251-1006	4	1	CONNECTOR-PC EDGE 15-CON/ROM 2-RONB	2840	1251-1006
A10F1	0040-0050	3	1	ASSEMBLY, POWER SUPPLY BOARD	2840	0040-0050
A10A1	0180-2205	3	1	CAPACITOR-PAD .33UF+-10% 35VDC TA	56289	1500330100002
A10A2	0160-4300	1	2	CAPACITOR-PAD .001UF +-80-20% 100VDC CER	56289	C023F101L473282Z-CDM
A10A3	0180-0279	7	1	CAPACITOR-PAD .33UF+-10% 35VDC TA	56289	1500330100002
A10A4	0180-0300	1	1	CAPACITOR-PAD .001UF +-80-20% 100VDC CER	56289	C023F101L473282Z-CDM
A10A5	0180-0291	3	10	CAPACITOR-PAD 1UF+-10% 35VDC TA	56289	1500100100002
A10A6	0180-0291	3	10	CAPACITOR-PAD 1UF+-10% 35VDC TA	56289	1500100100002
A10A7	0180-0291	3	10	CAPACITOR-PAD 1UF+-10% 35VDC TA	56289	1500100100002
A10A8	1901-0025	2	3	DIODE-GEN PWR 100V 200MA DO-7	2840	1901-0025
A10A9	1901-0025	2	3	DIODE-GEN PWR 100V 200MA DO-7	2840	1901-0025
A10A10	1901-0025	2	3	DIODE-GEN PWR 100V 200MA DO-7	2840	1901-0025
A10A11	1853-0001	1	3	TRANSISTOR PNP B1 TO-39 PDB000M	2840	1853-0001
A10A12	1853-0001	1	3	TRANSISTOR PNP B1 TO-39 PDB000M	2840	1853-0001
A10A13	1853-0020	4	5	TRANSISTOR PNP B1 PDB300M FT=150MHZ	2840	1853-0020
A10A14	1853-0020	4	5	TRANSISTOR PNP B1 PDB300M FT=150MHZ	2840	1853-0020
A10A15	1853-0001	1	3	TRANSISTOR PNP B1 TO-39 PDB000M	2840	1853-0001
A10A16	0757-0180	2	1	RESISTOR 31.6K 1% 125W F TC00+-100	2840	0757-0180
A10A17	0757-0280	2	20	RESISTOR 1K 1% 125W F TC00+-100	2454	C4-1/8-T0-1001-F
A10A18	0757-0280	2	20	RESISTOR 1K 1% 125W F TC00+-100	2454	C4-1/8-T0-1001-F
A10A19	0757-0442	9	12	RESISTOR 10K 1% 125W F TC00+-100	2454	C4-1/8-T0-1002-F
A10A20	0757-0199	3	1	RESISTOR 21.5K 1% 125W F TC00+-100	2454	C4-1/8-T0-2150-F
A10A21	0811-1552	0	1	RESISTOR .50 5% 2W PH TC00+-800	75042	8M2-27/100-J
A10A22	0698-3155	9	12	RESISTOR 4.64K 1% 125W F TC00+-100	2454	C4-1/8-T0-4641-F
A10A23	2100-2022	4	1	RESISTOR-TYPM 100 10K C BIDE-ADJ 1-TM	30961	E750101
A10A24	0698-3155	1	1	RESISTOR 4.64K 1% 125W F TC00+-100	2454	C4-1/8-T0-4641-F
A10A25	0698-3157	3	2	RESISTOR 10.0K 1% 125W F TC00+-100	2454	C4-1/8-T0-1002-F
A10A26	0698-0088	7	2	RESISTOR 2.15K 1% 125W F TC00+-100	2454	C4-1/8-T0-2151-F
A10A27	0698-3064	1	1	RESISTOR 310 1% 125W F TC00+-100	2454	C4-1/8-T0-310M-F
A10A28	0757-0279	0	5	RESISTOR 3.16K 1% 125W F TC00+-100	2454	C4-1/8-T0-3161-F
A10A29	0768-0015	7	1	RESISTOR 500 5% 2W HO TC00+-200	2840	0768-0015
A10A30	0811-1002	3	2	RESISTOR .47 5% 2W PH TC00+-800	75042	8M2-27/100-J
A10A31	0698-3160	0	3	RESISTOR 31.6K 1% 125W F TC00+-100	2454	C4-1/8-T0-3162-F
A10A32	0698-3162	0	1	RESISTOR 40.8K 1% 125W F TC00+-100	2454	C4-1/8-T0-4082-F
A10A33	0757-0280	0	1	RESISTOR 1K 1% 125W F TC00+-100	2454	C4-1/8-T0-1001-F

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10A1M21	0757-0220	3		RESISTOR 1K 1% 125m F TC00=100	2454b	C=1/8-T0=1001-F
A10A1M22	0100-179b	1	1	RESISTOR 1MM 5% 1/4W 010L-ADJ 1-TM	2440	0100-179b
A10A1M23	0698-0003	0	6	RESISTOR 1.90K 1% 125m F TC00=100	2454b	C=1/8-T0=1901-F
A10A1M24	0757-0401	0	27	RESISTOR 100 1% 125m F TC00=100	2454b	C=1/8-T0=101-F
A10A1M25	0698-1031	0	1	RESISTOR 330 5% 1/4W MD TC00=200	2440	0698-1031
A10A1M26	0757-0220	3		RESISTOR 1K 1% 125m F TC00=100	2454b	C=1/8-T0=1001-F
A10A1M27	0757-0220	3		RESISTOR 1K 1% 125m F TC00=100	2454b	C=1/8-T0=1001-F
A10A1M28				DELETED		
A10A1M29	0757-0200	9	2	RESISTOR 5.10K 1% 125m F TC00=100	2454b	C=1/8-T0=5101-F
A10A1M30	0698-1153	9	7	RESISTOR 3.30K 1% 125m F TC00=100	2454b	C=1/8-T0=331-F
A10A1M31	0757-0274	0		RESISTOR 3.10K 1% 125m F TC00=100	2454b	C=1/8-T0=311-F
A10A1M32	0757-0220	1	2	RESISTOR 9.09K 1% 125m F TC00=100	1701	MFAC1/8-T0=9091-F
A10A1U1	1A70-019b	0	3	IC 723 V NGLTR T0=100	04713	IC1723CG
A10A1U2	1A70-019b	0		IC 723 V NGLTR T0=100	04713	IC1723CG
A10A1U3	1A70-019b	0		IC 723 V NGLTR T0=100	04713	IC1723CG
A11	0610-00073	1	1	ABBY, AMPLITUDE ATTEN, AMPLIFIER BOARD	2440	0610-00073
A11C1	0100-0197	4	1	CAPACITOR-PHD 100PF +-5% 300VDC MICA	7213b	DM19710J0300V1CM
A11C2	0100-0121	5	16	CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C3	0100-0174	9	2	CAPACITOR-PHD .27UF +-20% 20VDC CER	2440	0100-0174
A11C4	0100-1074	0	2	CAPACITOR-PHD .0001F +-5% 200VDC CLR	2440	0100-1074
A11C5				DELETED		
A11C6	0100-0121	4	2	CAPACITOR-PHD .2200PF +-1% 100VDC MICA	7213b	DM2200F0100V1CM
A11C7	0100-0197	4	3	CAPACITOR-PHD .0001F +-5% 300VDC MICA	2440	0100-0197
A11C8	0100-0121	5	3	CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C9	0100-0121	5	5	CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C10	0100-0121	5	5	CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C11	0100-0174	4		CAPACITOR-PHD .27UF +-20% 20VDC CER	2440	0100-0174
A11C12	0100-0121	5		CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C13	0100-0121	5		CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C14	0100-0121	5		CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C15	0100-0197	4	3	CAPACITOR-PHD .22UF +-10% 20VDC TA	56287	150D225K9020A2
A11C16	0100-2201	0	1	CAPACITOR-PHD .15PF +-5% 300VDC CER 0+-30	2440	0100-2201
A11C17	0100-0197	0	8	CAPACITOR-PHD .22UF +-10% 20VDC TA	56287	150D225K9020A2
A11C18	0100-0197	0	8	CAPACITOR-PHD .22UF +-10% 20VDC TA	56287	150D225K9020A2
A11C19	0100-0121	5	5	CAPACITOR-PHD .1UF +-20% 20VDC CER	2440	0100-0121
A11C21	1902-0009	2	1	DIODE-ZNR 6,19V 5% DO-7 P04,4H TC00,022L	2440	1902-0009
A11L1	9100-2209	0	2	COIL-WLD 37.0UM 5% 00135 750K,01LC-NCM	2440	9100-2209
A11L2	9100-0131	0	1	COIL-WLD 100M 5% C800,240Z,7ALC-NCM	2440	9100-0131
A11O1	1A55-0071	7	8	TRANSISTOR NPN 8I PD0300MH FT200MHZ	2440	1A55-0071
A11O2	1A55-0071	7	7	TRANSISTOR NPN 8I PD0300MH FT200MHZ	2440	1A55-0071
A11O3	1A55-0071	7	7	TRANSISTOR NPN 8I PD0300MH FT200MHZ	2440	1A55-0071
A11O4	1A55-0012	4	1	TRANSISTOR PNP 2N2904A 8I T0-18 PD0600MH	01295	2N2904
A11O5	1A55-0001	1	1	TRANSISTOR J-FET N-CHAN D-MODE 8I	01295	2N7245
A11O6	1A55-0020	4		TRANSISTOR PNP 8I PD0300MH FT0150MHZ	2440	1A55-0020
A11R1	0757-0274	0	5	RESISTOR 3.10K 1% 125m F TC00=100	2454b	C=1/8-T0=3101-F
A11R2	0698-1159	0	2	RESISTOR 2.2K 1% 125m F TC00=100	2454b	C=1/8-T0=221-F
A11R3	0757-0424	7	1	RESISTOR 1.1K 1% 125m F TC00=100	2454b	C=1/8-T0=1101-F
A11R4	0148-0002	7	3	RESISTOR 484 1% 125m F TC00=100	2454b	C=1/8-T0=480-F
A11R5	0698-1040	7	22	RESISTOR 100 1% 125m F TC00=100	2454b	C=1/8-T0=100-F
A11R6	0757-0220	3		RESISTOR 1K 1% 125m F TC00=100	2454b	C=1/8-T0=1001-F
A11R7	0698-0003	0		RESISTOR 1.90K 1% 125m F TC00=100	2454b	C=1/8-T0=1901-F
A11R8	0698-1159	0	2	RESISTOR 2.2K 1% 125m F TC00=100	2454b	C=1/8-T0=221-F
A11R9	0757-0424	9		RESISTOR 10K 1% 125m F TC00=100	2454b	C=1/8-T0=1002-F
A11R10	0698-0004	9		RESISTOR 2.15K 1% 125m F TC00=100	2454b	C=1/8-T0=2151-F
A11R11	0698-1153	9		RESISTOR 3.30K 1% 125m F TC00=100	2454b	C=1/8-T0=331-F
A11R12	0698-1040	7		RESISTOR 100 1% 125m F TC00=100	2454b	C=1/8-T0=1000-F
A11R13	0757-0401	0		RESISTOR 100 1% 125m F TC00=100	2454b	C=1/8-T0=101-F
A11R14	0757-0424	3	13	RESISTOR 2.11K 1% 125m F TC00=100	2454b	C=1/8-T0=2111-F
A11R15	0698-1047	4	1	RESISTOR 22 1% 125m F TC00=100	2454b	C=1/8-T0=220-F
A11R16	0757-0420	3	1	RESISTOR 750 1% 125m F TC00=100	2454b	C=1/8-T0=751-F
A11R17	0757-0416	7	10	RESISTOR 511 1% 125m F TC00=100	2454b	C=1/8-T0=511-F
A11R18	0757-0416	7	7	RESISTOR 511 1% 125m F TC00=100	2454b	C=1/8-T0=511-F
A11R19	0698-1040	7		RESISTOR 100 1% 125m F TC00=100	2454b	C=1/8-T0=1000-F
A11R20	0698-7236	7	3	RESISTOR 1K 1% 05m F TC00=100	2454b	C=1/8-T0=1001-C
A11R21	0698-7235	0	1	RESISTOR 2.17K 1% 05m F TC00=100	2454b	C=1/8-T0=2171-C
A11R22	0698-7202	5	1	RESISTOR 1.70K 1% 05m F TC00=100	2454b	C=1/8-T0=1701-C
A11R23	0698-7219	0	2	RESISTOR 190 1% 05m F TC00=100	2454b	C=1/8-T0=1900-C
A11R24	0698-7219	0		RESISTOR 190 1% 05m F TC00=100	2454b	C=1/8-T0=1900-C
A11R25	0698-7236	7		RESISTOR 1K 1% 05m F TC00=100	2454b	C=1/8-T0=1001-C
A11R26	0698-7236	7		RESISTOR 1K 1% 05m F TC00=100	2454b	C=1/8-T0=1001-C
A11R27	0698-7200	7	3	RESISTOR 10K 1% 05m F TC00=100	2454b	C=1/8-T0=1002-C
A11R28	0698-7200	7		RESISTOR 10K 1% 05m F TC00=100	2454b	C=1/8-T0=1002-C
A11R29	0698-7200	7		RESISTOR 10K 1% 05m F TC00=100	2454b	C=1/8-T0=1002-C

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1Z	0810-0038	1	1	8BY, TEST ACC AMPLIFIER BOARD	2840	0810-0038
A1ZC1	0100-2204	0	4	CAPACITOR-FXD 100PF +-5% 300VDC MICA	2840	0100-2204
A1ZC2	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC3	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC4	0100-0194	1	4	CAPACITOR-FXD 110PF +-5% 300VDC MICA	72136	DM15P111J0300V1C8
A1ZC5	0100-0194	1	4	CAPACITOR-FXD 110PF +-5% 300VDC MICA	72136	DM15P111J0300V1C8
A1ZC6	0100-0194	1	1	CAPACITOR-FXD 110PF +-5% 300VDC MICA	72136	DM15P111J0300V1C8
A1ZC7	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC8	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC9	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC10	0100-2201	0	1	CAPACITOR-FXD .01UF +-5% 300VDC MICA	2840	0100-2201
A1ZC11	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC12	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC13	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC14	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC15	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC16	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC17	0100-0177	0	2	CAPACITOR-FXD 500PF +-1% 300VDC MICA	72136	DM15P01F0300V1C8
A1ZC18	0170-0046	0	2	CAPACITOR-FXD .027UF +-10% 250VDC POLYE	2840	U170-0046
A1ZC19	0100-0177	0	2	CAPACITOR-FXD .15UF +-5% 35VDC TA	56289	150D1515035V2
A1ZC20	0100-2055	0	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	2840	0100-2055
A1ZC21	0100-2224	0	2	CAPACITOR-FXD 3000PF +-5% 300VDC MICA	2840	0100-2224
A1ZC22	1901-0090	0	2	DIODE-BRITCHING 20V 200MA 2HS DO-35	2840	1901-0090
A1ZC23	1901-0090	0	2	DIODE-BRITCHING 20V 200MA 2HS DO-35	2840	1901-0090
A1ZC24	1901-0090	0	2	DIODE-BRITCHING 20V 200MA 2HS DO-35	2840	1901-0090
A1ZC25	0810-0005	0	1	DIODES 1 MATCHED QUAD, MATCHED A1ZC25 & 6, A1ZC25 & 6, DELETED	2840	0810-0005
A1ZC26				DELETED		
A1ZC27				DELETED		
A1ZL1	9100-0348	2	2	COIL-PLD 1UH 1% C80 , 1850K, 375LG-NOM	2840	9100-0348
A1ZL2	5100-2516	0	2	COIL 100UH 10% , 375DKLC-NOM	2840	5100-2516
A1ZL3				DELETED		
A1ZC1	1850-0073	0	15	TRANSISTOR NPN 81 70-72 PD=200MH	2840	1850-0073
A1ZC2	1850-0073	0	15	TRANSISTOR NPN 81 70-72 PD=200MH	2840	1850-0073
A1ZC3	1850-0073	0	15	TRANSISTOR NPN 81 70-72 PD=200MH	2840	1850-0073
A1ZC4	1850-0073	0	15	TRANSISTOR NPN 81 70-72 PD=200MH	2840	1850-0073
A1ZC5	0810-0005	0	1	TRANSISTOR, REPLACE IN PAIR, MATCHED TO A1405	2840	0810-0005
A1ZC6	1850-0073	0	15	TRANSISTOR NPN 81 70-72 PD=200MH	2840	1850-0073
A1ZC7	0810-0001	0	1	TRANSISTOR, REPLACE IN PAIR, MATCHED TO A1407	2840	0810-0001
A1ZP1	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP2	0757-0280	0	1	RESISTOR 511K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP3	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F
A1ZP4	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP5	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP6	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP7	0696-0082	0	1	RESISTOR 404 1% , 125W F TC00+-100	24546	CA-1/8-T0-4041-F
A1ZP8	0757-0416	0	1	RESISTOR 511K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP9	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP10	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F
A1ZP11	0696-0083	0	1	RESISTOR 1,96K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1961-F
A1ZP12	0757-0400	0	1	RESISTOR 40,4 1% , 125W F TC00+-100	24546	CA-1/8-T0-4041-F
A1ZP13	0696-3156	0	1	RESISTOR 14,7K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1471-F
A1ZP14	0757-0438	0	1	RESISTOR 5,11K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP15	0757-0428	0	1	RESISTOR 1,67K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1671-F
A1ZP16	0696-3140	0	1	RESISTOR 196 1% , 125W F TC00+-100	24546	CA-1/8-T0-1961-F
A1ZP17	0696-3140	0	1	RESISTOR 196 1% , 125W F TC00+-100	24546	CA-1/8-T0-1961-F
A1ZP18	0757-0444	0	1	RESISTOR 12,1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1211-F
A1ZP19	0757-0442	0	1	RESISTOR 10K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP20	0696-3153	0	1	RESISTOR 5,03K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5031-F
A1ZP21				DELETED		
A1ZP22	0757-0438	0	1	RESISTOR 5,11K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP23	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP24	0696-3153	0	1	RESISTOR 5,03K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5031-F
A1ZP25	0757-0438	0	1	RESISTOR 5,11K 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP26	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F
A1ZP27	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F
A1ZP28	0757-0394	0	1	RESISTOR 51,1 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP29	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F
A1ZP30	0757-0280	0	1	RESISTOR 1K 1% , 125W F TC00+-100	24546	CA-1/8-T0-1001-F
A1ZP31	0757-0417	0	1	RESISTOR 502 1% , 125W F TC00+-100	24546	CA-1/8-T0-5021-F
A1ZP32	0757-0416	0	1	RESISTOR 511 1% , 125W F TC00+-100	24546	CA-1/8-T0-5111-F
A1ZP33	0696-3142	0	1	RESISTOR 237 1% , 125W F TC00+-100	24546	CA-1/8-T0-2371-F
A1ZP34	0757-0401	0	1	RESISTOR 100 1% , 125W F TC00+-100	24546	CA-1/8-T0-101-F

See Introduction to this section for ordering information
 *Indicates factory selected value

Table 6-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1111 A1112	9170-0007 9170-0007	3 3	1	COPE-EMBEDDING HEAD COPE-EMBEDDING HEAD	0711 0711	90-990-0031/31 PARYLENE COATED 90-990-0031/31 PARYLENE COATED
A11	00010-0000	1	1	ASBY, PFC MPZ OSCILLATOR BOARD	2000	00010-0000
A11C1 A11C2 A11C3 A11C4 A11C5	0100-2055 0100-2055 0100-2055 0100-2055 0100-0199	9 9 9 9 1	1	CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .001UF +00-20% 100VDC MICA	2000 2000 2000 2000 7233	0100-2055 0100-2055 0100-2055 0100-2055 0M197111J0300V1C8
A11C6 A11C7 A11C8 A11C9 A11C10	0100-2210 0121-0109 0100-2200 0100-2055 0100-2200	9 1 9 9 9	1	CAPACITOR-FXD 1000PF +0-5% 100VDC MICA CAPACITOR-FXD TRM-CER 9-35PF 300V PC-MTC CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .001UF +00-20% 100VDC MICA CAPACITOR-FXD 100PF +0-5% 100VDC MICA	2000 2703 2000 2000 2000	0100-2210 30070 9/35PF H80 0100-2200 0M197111J0300V1C8 0100-2200
A11C11 A11C12 A11C13 A11C14 A11C15	0100-2055 0100-2200 0100-2055 0100-2055 0100-2055	9 9 9 9 9	1	CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD 100PF +0-5% 100VDC MICA CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER	2000 2000 2000 2000 2000	0100-2055 0100-2200 0100-2055 0100-2055 0100-2055
A11C16 A11C17 A11C18 A11C19 A11C20	0100-0049 0100-2055 0100-2055 0100-2055 0100-2055	4 9 9 9 9	1	CAPACITOR-FXD .030PF +0-5% 100VDC MICA CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER	2000 2000 2000 2000 2000	0100-0049 0100-2055 0100-2055 0100-2055 0100-2055
A11C21	0100-2200	1	1	CAPACITOR-FXD 100PF +0-5% 100VDC MICA	2000	0100-2200
A11C22 A11C23	1910-0022 1910-0022	2 2	4	DIODE-GE 5Y 50MA 3.5V8 DD-7 DIODE-GE 5Y 50MA 3.5V8 DD-7	2000 2000	1910-0022 1910-0022
A11E1 A11E2	9100-1001 9100-0090	1 1	1	COIL-MLD 30UM 5K 0P55 ,1850K,375LC-HOM COIL-MLD 800M 10K 0P50 ,1850K,375LC-HOM	2000 2000	9100-1001 9100-0090
A11G1 A11G2 A11G3 A11G4 A11G5	1893-0034 1893-0073 1893-0073 1893-0073 1893-0034	0 9 9 9 0	3	TRANSISTOR PNP 81 TC-18 P00300M TRANSISTOR NPN 81 TC-72 P00200M TRANSISTOR NPN 81 TC-72 P00200M TRANSISTOR NPN 81 TC-72 P00200M TRANSISTOR PNP 81 TC-18 P00300M	2000 2000 2000 2000 2000	1893-0034 1893-0073 1893-0073 1893-0073 1893-0034
A11H1 A11H2 A11H3 A11H4 A11H5	0757-0200 0698-0003 0698-0003 0757-0200 0757-0200	2 1 1 1 1	1	RESISTOR 1.2K 1% .125W F TC00-100 RESISTOR 1.9K 1% .125W F TC00-100 RESISTOR 1.9K 1% .125W F TC00-100 RESISTOR 1K 1% .125W F TC00-100 RESISTOR 1K 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-1332-F CA-1/20-10-1001-F CA-1/20-10-1001-F CA-1/20-10-1001-F CA-1/20-10-1001-F
A11H6 A11H7 A11H8 A11H9 A11H10	0698-1000 0757-0279 0757-0401 0757-0401 0698-1000	7 0 0 9 7	1	RESISTOR 190 1% .125W F TC00-100 RESISTOR 1.2K 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 190 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-1001-F CA-1/20-10-3101-F CA-1/20-10-101-F CA-1/20-10-101-F CA-1/20-10-1001-F
A11H11 A11H12 A11H13 A11H14 A11H15	0698-1153 0757-0428 0757-0401 0757-0401 0698-0003	9 3 0 1 1	2	RESISTOR 3.0K 1% .125W F TC00-100 RESISTOR 5.1K 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 1.9K 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-2031-F CA-1/20-10-5111-F CA-1/20-10-101-F CA-1/20-10-101-F CA-1/20-10-1001-F
A11H16 A11H17 A11H18 A11H19 A11H20	0698-1150 0698-1000 0757-1094 0757-0401 0698-1000	6 7 1 1 7	3	RESISTOR 2.37K 1% .125W F TC00-100 RESISTOR 190 1% .125W F TC00-100 RESISTOR 1.2K 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 190 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-2031-F CA-1/20-10-1001-F CA-1/20-10-101-F CA-1/20-10-101-F CA-1/20-10-1001-F
A11H21 A11H22 A11H23 A11H24 A11H25	0698-1153 0757-0428 0757-0401 0698-1000 0757-0401	9 3 0 7 5	1	RESISTOR 3.0K 1% .125W F TC00-100 RESISTOR 5.1K 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-2031-F CA-1/20-10-5111-F CA-1/20-10-101-F CA-1/20-10-101-F CA-1/20-10-1001-F
A11H26 A11H27 A11H28 A11H29 A11H30	0698-0003 0698-1150 0757-0279 0757-0401 0757-0401	6 1 0 0 0	1	RESISTOR 1.9K 1% .125W F TC00-100 RESISTOR 2.37K 1% .125W F TC00-100 RESISTOR 1.2K 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100 RESISTOR 100 1% .125W F TC00-100	2000 2000 2000 2000 2000	CA-1/20-10-1001-F CA-1/20-10-2031-F CA-1/20-10-3101-F CA-1/20-10-101-F CA-1/20-10-101-F
A11J1	1200-0191	7	1	SOCKET-PTAL 8-CONT HC-25/U DIP-8LON	2000	1200-0191
A11K1	00010-0039	9	1	ASBY, REP, ACC AMPLIFIER BOARD	2000	00010-0039
A11C1 A11C2 A11C3 A11C4 A11C5	0100-2200 0100-2055 0100-2055 0100-0199 0100-0199	9 9 9 1 1	1	CAPACITOR-FXD 100PF +0-5% 100VDC MICA CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD .01UF +00-20% 100VDC CER CAPACITOR-FXD 100PF +0-5% 100VDC MICA	2000 2000 2000 2000 7233	0100-2200 0100-2055 0100-2055 0M197111J0300V1C8 0M197111J0300V1C8

See introduction to this section for ordering information
*Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1AC5	0160-0190	1		CAPACITOR-FXD 110PF ±5% 300VDC MICA	72130	DM15P111J0300V1CA
A1AC7	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC8	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC9	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC10	0160-2150	5	1	CAPACITOR-FXD 110PF ±5% 300VDC MICA	28480	C160-2150
A1AC11	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC12	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC13	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC14	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC15	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC16	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC17	0160-0177	0		CAPACITOR-FXD 800PF ±1% 100VDC MICA	72130	DM15P801F0300V1CA
A1AC18	0170-0066	0		CAPACITOR-FXD .027UF ±10% 200VDC POLYE	28480	0170-0066
A1AC19	0160-2127	0		CAPACITOR-FXD .15UF ±5% 100VDC TA	28249	150D150100V02
A1AC20	0160-2055	0		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A1AC21				DELETED		
A1AC21	1901-0050	3		DIODE-SWITCHING 80V 200MA 248 DO-35	28480	1901-0050
A1AC22	1901-0050	3		DIODE-SWITCHING 80V 200MA 248 DO-35	28480	1901-0050
A1AC23	1901-0050	3		DIODE-SWITCHING 80V 200MA 248 DO-35	28480	1901-0050
A1AC24	1901-0050	3		DIODE-SWITCHING 80V 200MA 248 DO-35	28480	1901-0050
A1AC25				PART OF A1AC25		
A1AC26				PART OF A1AC25		
A1AC27				DELETED		
A1AC28				DELETED		
A1AL1	9100-0368	2		COIL-EMD 1UM 1% 0950, 1950, 375LG-NOM	28480	9100-0368
A1AL2	9100-2516	0		COIL-EMD 10K 375D1LG-NOM	00213	9150-7
A1AL3				DELETED		
A1AG1	185A-0073	0		TRANSISTOR NPN 81 TO-72 P02200M	28480	185A-0073
A1AG2	185A-0073	0		TRANSISTOR NPN 81 TO-72 P02200M	28480	185A-0073
A1AG3	185A-0073	0		TRANSISTOR NPN 81 TO-72 P02200M	28480	185A-0073
A1AG4	185A-0073	0		TRANSISTOR NPN 81 TO-72 P02200M	28480	185A-0073
A1AG5				PART OF A1AG5, REPLACE IN PAIRS		
A1AG6	185A-0073	0		TRANSISTOR NPN 81 TO-72 P02200M	28480	185A-0073
A1AG7				PART OF A1AG7, REPLACE IN PAIRS		
A1AJ1	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AJ2	0757-0250	3		RESISTOR 511 1% .125W F TC00±100	24540	CA-18-70-5111-F
A1AJ3	0757-0250	0		RESISTOR 100 1% .125W F TC00±100	24540	CA-18-70-101-F
A1AJ4	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AJ5	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK1	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK2	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK3	0757-0250	0		RESISTOR 511 1% .125W F TC00±100	24540	CA-18-70-5111-F
A1AK4	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK5	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK6	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK7	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK8	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK9	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK10	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK11	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK12	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK13	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK14	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK15	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK16	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK17	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK18	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK19	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK20	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK21	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK22	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK23	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK24	0698-0023	0		RESISTOR 40 1% .125W F TC00±100	24540	CA-18-70-401-F
A1AK25	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK26	0757-0250	0		RESISTOR 100 1% .125W F TC00±100	24540	CA-18-70-101-F
A1AK27	0757-0250	0		RESISTOR 100 1% .125W F TC00±100	24540	CA-18-70-101-F
A1AK28	0757-0250	0		RESISTOR 511 1% .125W F TC00±100	24540	CA-18-70-5111-F
A1AK29	0757-0250	0		RESISTOR 100 1% .125W F TC00±100	24540	CA-18-70-101-F
A1AK30	0757-0250	3		RESISTOR 1K 1% .125W F TC00±100	24540	CA-18-70-1001-F
A1AK31	0757-0250	0		RESISTOR 502 1% .125W F TC00±100	24540	CA-18-70-5021-F
A1AK32	0698-0023	0		RESISTOR 511 1% .125W F TC00±100	24540	CA-18-70-5111-F
A1AK33	0698-0023	0		RESISTOR 237 1% .125W F TC00±100	24540	CA-18-70-2371-F
A1AK34	0757-0250	0		RESISTOR 100 1% .125W F TC00±100	24540	CA-18-70-101-F
A1AL1	9170-0247	3		CON-SMELTING BEAD	02110	90-570-05/30 PARYLENE COATED
A1AL2	9170-0247	3		CON-SMELTING BEAD	02110	90-570-05/30 PARYLENE COATED
A1B	0810-0040	0	1	ABSTRACT-DC AMPLIFIER BOARD	28480	0810-0040

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	C/D	Qty	Description	Mfr Code	Mfr Part Number
A19C1	0160-2085	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C2	0160-2086	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C3	0160-2088	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C4	0160-2089	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C5	0160-2085	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C6	0160-2086	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C7	0160-2210	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-2210
A19C8	0160-2212	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-2212
A19C9	0160-2213	9		CAPACITOR-P2D .01UF +80-203 100VDC TA	2800	0160-2213
A19C10	0160-2224	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2224
A19C11	0160-2085	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-2085
A19C12	0160-2209	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-2209
A19C13	0160-0121	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-0121
A19C14	0160-0121	9		CAPACITOR-P2D .01UF +80-203 100VDC CER	2800	0160-0121
A19C15	0160-2224	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-2224
A19C16	0160-2228	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-2228
A19C17	0160-0126	9		CAPACITOR-P2D 1000PF +80-203 100VDC MICA	2800	0160-0126
A19C18	1910-0022	9		DIODE-GE BY 60MA 5,848 DO-7	2800	1910-0022
A19C19	1910-0022	9		DIODE-GE BY 60MA 5,848 DO-7	2800	1910-0022
A19C20	1910-0023	9		DIODE-GEN PNP 100V 200MA DO-7	2800	1910-0023
A19C21	1910-0023	9		DIODE-GEN PNP 100V 200MA DO-7	2800	1910-0023
A19C22	1910-0023	9		DIODE-GEN PNP 100V 200MA DO-7	2800	1910-0023
A19C23	1910-0023	9		DIODE-GEN PNP 100V 200MA DO-7	2800	1910-0023
A19L1	9100-1071	9		COIL-MFD 100UH 100V 50% 1550DF 375L6-NOM	2800	9100-1071
A19L2	9100-1070	9		COIL-MFD 100UH 100V 50% 1550DF 375L6-NOM	2800	9100-1070
A19O1	1850-0073	9		TRANSISTOR NPN 81 TC-72 PDM200MH	2800	1850-0073
A19O2	1850-0073	9		TRANSISTOR NPN 81 TC-72 PDM200MH	2800	1850-0073
A19O3	1850-0073	9		TRANSISTOR NPN 81 TC-72 PDM200MH	2800	1850-0073
A19O4	1850-0073	9		TRANSISTOR-DUAL NPN PDM200MH (ALTERNATE REPLACEMENT IS 1850-0221)	2800	1850-0073
A19O5				PART OF A19O4 AND B		
A19O6	1850-0009	9		TRANSISTOR NPN 81 TC-18 PDM200MH	2800	1850-0009
A19O7	1850-0071	9		TRANSISTOR NPN 81 PDM200MH FT180MHZ	2800	1850-0071
A19O8	1850-0070	9		TRANSISTOR NPN 81 PDM200MH FT180MHZ	2800	1850-0070
A19N1	0757-0200	9		RESISTOR 10K 1/4 125W F TC00-100	2800	C01/28-70-1002-F
A19N2	0698-3153	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N3	0757-0210	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N4	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N5	0757-0200	9		RESISTOR 1K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N6	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N7	0698-3025	9		RESISTOR 1,00K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N8	0698-3026	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N9	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N10	0757-0203	9		RESISTOR 11K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N11	0757-0200	9		RESISTOR 9,07K 1/4 125W F TC00-100	1970	MFC1/28-70-9091-F
A19N12	0698-3150	9		RESISTOR 6,37K 1/4 125W F TC00-100	2800	C01/28-70-6372-F
A19N13	0757-0200	9		RESISTOR 1K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N14	0757-0200	9		RESISTOR 1K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N15	0757-0200	9		RESISTOR 1K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N16	0757-0203	9		RESISTOR 11K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N17	0698-3025	9		RESISTOR 1,00K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N18	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N19	0757-0203	9		RESISTOR 11K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N20	0698-3000	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N21	0698-3155	9		RESISTOR 6,37K 1/4 125W F TC00-100	2800	C01/28-70-6372-F
A19N22	0698-3160	9		RESISTOR 3,16K 1/4 125W F TC00-100	2800	C01/28-70-3162-F
A19N23	0757-0200	9		RESISTOR 1K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N24	0757-0200	9		RESISTOR 400K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N25	0757-0200	9		RESISTOR 40,9 1/4 125W F TC00-100	2800	0757-0200
A19N26	0698-3040	9		RESISTOR 150 1/4 125W F TC00-100	2800	C01/28-70-150-F
A19N27	0757-0210	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N28	0757-0210	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N29	0757-0203	9		RESISTOR 11K 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N30	0757-0210	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N31	0698-3159	9		RESISTOR 20,1K 1/4 125W F TC00-100	2800	C01/28-70-2012-F
A19N32	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N33	0757-0202	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N34	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N35	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N36	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N37	0757-0210	9		RESISTOR 5,11K 1/4 125W F TC00-100	2800	C01/28-70-5112-F
A19N38	0757-0201	9		RESISTOR 100 1/4 125W F TC00-100	2800	C01/28-70-101-F
A19N39	1902-3171	9		DIODE-GEN 11V 50 DO-7 PDM,AN TC00-002R	2800	1902-3171

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 0410B Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1A	0410-0000	E	1	ASSEMBLY W/2 REP, AMPLIFIER BOARD	20000	0410-0000
A1AC1	0100-2227	7	2	CAPACITOR-P3D 200PF +-5% 300VDC MICA	20000	0100-2227
A1AC2	0100-2227	7		CAPACITOR-P3D 200PF +-5% 300VDC MICA	20000	0100-2227
A1AC3	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC4	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC5	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC6	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC7	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC8	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC9	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC10	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC11	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC12	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC13	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC14	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC15	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1AC16	0100-0121	3		CAPACITOR-P3D .1UF +-20% 30VDC TA	20000	0100-0121
A1AC17	0100-0121	5		CAPACITOR-P3D .1UF +-20% 30VDC CER	20000	0100-0121
A1B1	9100-2200	8		COIL-PLD 37,5UM 5% 0.125, 750, 0.125-HCM	20000	9100-2200
A1B2	1800-0071	7		TRANSISTOR NPN 2N 200300M F70200MHZ	20000	1800-0071
A1B3	1800-0071	7		TRANSISTOR NPN 2N 200300M F70200MHZ	20000	1800-0071
A1B4	1800-0071	7		TRANSISTOR NPN 2N 200300M F70200MHZ	20000	1800-0071
A1B5	1800-0071	7		TRANSISTOR NPN 2N 200300M F70200MHZ	20000	1800-0071
A1B6	0757-0042	9		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1001-F
A1B7	0757-0042	9		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1002-F
A1B8	0757-0042	9		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1003-F
A1B9	0698-1000	8		RESISTOR 3,3K 1% .125W F TC00+-100	20506	CR-1/8-T0-1004-F
A1B10	0757-0200	7		RESISTOR 5,6K 1% .125W F TC00+-100	20506	CR-1/8-T0-1005-F
A1B11	0698-1000	0		RESISTOR 4,7K 1% .125W F TC00+-100	20506	CR-1/8-T0-1006-F
A1B12	0698-1000	7		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1007-F
A1B13	0698-1000	7		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1008-F
A1B14	0757-0042	9		RESISTOR 40,0 1% .125W F TC00+-100	20506	CR-1/8-T0-1009-F
A1B15	0698-1153	9		RESISTOR 3,3K 1% .125W F TC00+-100	20506	CR-1/8-T0-1010-F
A1B16	0757-0042	3		RESISTOR 5,11K 1% .125W F TC00+-100	20506	CR-1/8-T0-1011-F
A1B17	0757-0042	7		RESISTOR 100 1% .125W F TC00+-100	20506	CR-1/8-T0-1012-F
A1B18	0698-1000	7		RESISTOR 3,3K 1% .125W F TC00+-100	20506	CR-1/8-T0-1013-F
A1B19	0698-1000	7		RESISTOR 3,3K 1% .125W F TC00+-100	20506	CR-1/8-T0-1014-F
A1B20	0698-1000	7		RESISTOR 3,3K 1% .125W F TC00+-100	20506	CR-1/8-T0-1015-F
A1B21	0698-1000	7		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1016-F
A1B22	0698-1000	7		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1017-F
A1B23	0698-1000	7		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1018-F
A1B24	0757-0042	9		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1019-F
A1B25	0757-0042	9		RESISTOR 10K 1% .125W F TC00+-100	20506	CR-1/8-T0-1020-F

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	QTY	Description	Mfr Code	Mfr Part Number
A1VC1	0190-0378	1	CAPACITOR, 100 P.F., 50VDC TA	2828	100P50VDC28
A1VMP1	0000-0000	2	EXTRACTOR, P.C. BOARD	2800	0000-0000
A1VMP2	0000-0000	2	P.H.P.C. BOARD EXTRACTOR	2800	0000-0000
A1VC2	1055-0027	2	TRANSISTOR J-FET P-CHANNEL D-MODE 81	2800	1055-0027
A1VC3	1055-0027	2	TRANSISTOR J-FET P-CHANNEL D-MODE 81	2800	1055-0027
A1VC4	1055-0027	2	TRANSISTOR J-FET P-CHANNEL D-MODE 81	2800	1055-0027
A1VC5	1055-0027	2	TRANSISTOR J-FET P-CHANNEL D-MODE 81	2800	1055-0027
A1VC6	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC7	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC8	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC9	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC10	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC11	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC12	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC13	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC14	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC15	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC16	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC17	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC18	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC19	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC20	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC21	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC22	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC23	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC24	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC25	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC26	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC27	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC28	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC29	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC30	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC31	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC32	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC33	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VC34	1055-0020	2	TRANSISTOR J-FET N-CHANNEL D-MODE TO-18 81	2800	1055-0020
A1VQ1	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ2	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ3	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ4	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ5	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ6	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ7	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ8	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ9	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ10	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ11	0757-0100	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ12	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ13	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ14	0757-0170	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ15	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ16	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ17	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ18	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ19	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ20	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ21	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ22	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ23	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ24	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ25	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ26	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ27	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ28	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ29	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ30	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ31	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ32	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ33	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ34	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ35	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ36	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ37	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ38	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F
A1VQ39	0757-0007	1	RESISTOR 75K 1% 1/8W F TC00-100	2850	CM-1/8-T0-7500-F
A1VQ40	0692-3260	1	RESISTOR 692K 1% 1/8W F TC00-100	2850	CM-1/8-T0-6920-F

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts

Reference Designation	HP Part Number	QTY	Description	Mfr Code	Mfr Part Number
A10W1	0299-3749	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3749
A10W2	0299-3750	1	RESISTOR 10K 1% .125W P TC000-100	2800	0299-3750
A10W3	0299-3751	1	RESISTOR 10K 1% .125W P TC000-100	2800	0299-3751
A10W4	0299-3752	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3752
A10W5	0299-3753	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3753
A10W6	0797-0202	1	RESISTOR 100 1% .125W P TC000-100	2800	0797-0202
A10W7	0299-3754	1	RESISTOR 10K 1% .125W P TC000-100	2800	0299-3754
A10W8	0299-3755	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3755
A10W9	0299-3756	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3756
A10W10	0797-0203	1	RESISTOR 75 1% .125W P TC000-100	2800	0797-0203
A10W11	0797-0204	7	RESISTOR 500K 1% .125W P TC000-100	2800	0797-0204
A10W12	0299-3757	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3757
A10W13	0299-3758	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3758
A10W14	0797-0205	1	RESISTOR 50 2% .125W P TC000-100	2800	0797-0205
A10W15	0299-3759	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3759
A10W16	0797-0206	1	RESISTOR 50 1% .125W P TC000-100	2800	0797-0206
A10W17	0299-3760	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3760
A10W18	0299-3761	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3761
A10W19	0299-3762	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3762
A10W20	0797-0207	1	RESISTOR 20 3% .125W P TC000-100	2800	0797-0207
A10W21	0797-0208	1	RESISTOR 6.8K 1% .125W P TC000-100	2800	0797-0208
A10W22	0299-3763	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3763
A10W23	0299-3764	1	RESISTOR 400K 1% .125W P TC000-100	2800	0299-3764
A10W24	0299-3765	1	RESISTOR 22 7% .125W P TC000-100	0300	0299-3765
A10W25	0797-0209	1	RESISTOR 4.00K 1% .125W P TC000-100	0701	0797-0209
A10W26	0299-3766	1	RESISTOR 10 7% .125W P TC000-100	2800	0299-3766
A10Y1	3101-1273	1	SWITCH=BL DPDT/BUMIN PA 120VAC PC	2800	3101-1273
A10U1	1070-1076	2	IC DECP CMDB RCD-YO-DEC R-YO-10-LINE	0873	MC14078CL
A10U2	1070-1076	2	IC DECP CMDB RCD-YO-DEC R-YO-10-LINE	0873	MC14078CL
A10U3	1070-1076	2	IC GATE CMDB NON TPL 3-INP	0142B	CD4055F
A10YH1	1902-0193	1	DIODE=ZNR 13,3V 5K DO-7 PDB,OH TC00,0596	2800	1902-0193
A10ZU1	1200-0507	2	SOCKET=IC 18-CONT DIP-BLDR	2800	1200-0507
A10ZU2	1200-0507	2	SOCKET=IC 18-CONT DIP-BLDR	2800	1200-0507
A10ZU3	1200-0508	2	SOCKET=IC 18-CONT DIP-BLDR	2800	1200-0508

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts


Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
				EMBEDDED PARTS		
B1	3100-0000	7	1	PAH-TB2; 30-CFM (10V F/60-HZ 1,000-TM)	2000U	3100-0000
C1				DELETED		
C2				DELETED		
C3	0100-2030	2	10	CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C4	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C5	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C6	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C7	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C8	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C9	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C10	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C11	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C12	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C13	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C14	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C15	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C16	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C17	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C18	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C19	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C20	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C21	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C22	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C23	0100-2030	2	10	CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C24	0100-2037	2		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2037
C25	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C26	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C27	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C28	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C29	0100-2030	2		CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-2030
C30	0100-2037	2		CAPACITOR-FDTHRU 5000PF 100 -20L 200V	20000	0100-2037
C31	0100-0177	0	1	DELETED		
C32	0100-0179	0	1	CAPACITOR-F3D 400PF 0-5L 300VDC MICA	70136	0100-0179
C33	0100-0180	0	1	CAPACITOR-F3D 300PF 0-5L 300VDC MICA	20000	0100-0180
C34	0100-0181	0	1	CAPACITOR-F3D 400PF 0-5L 300VDC MICA	20000	0100-0181
C35	0100-0182	0	1	CAPACITOR-F3D 300PF 0-5L 300VDC MICA	20000	0100-0182
C36	0100-0183	0	1	CAPACITOR-F3D 400PF 0-5L 300VDC TA	20000	0100-0183
C37	0100-0184	0	1	CAPACITOR-F3D 300PF 0-5L 300VDC TA	20000	0100-0184
C38	0100-0185	0	1	CAPACITOR-F3D 400PF 0-5L 300VDC TA	20000	0100-0185
C39	0100-0186	0	1	CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-0186
C40	0100-0187	0	1	CAPACITOR-BTDOFF 5000PF 100 -20L 200V	20000	0100-0187
C41	0100-2030	0		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C42	0100-2030	0		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C43	0100-2030	0		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C44	0100-2030	0		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C45	0100-2030	0		CAPACITOR-FDTHRU 100PF 20L 200V CER	20000	0100-2030
C46	0100-0030	0	1	CAPACITOR-F3D 400PF 0-5L 300VDC MICA	20000	0100-0030
C47	0100-0031	0	2	CAPACITOR-F3D 5000PF 0-20L 200VAC(RMS)	20000	0100-0031
C48	0100-0032	0	2	CAPACITOR-F3D 5000PF 0-20L 200VAC(RMS)	20000	0100-0032
D01	2100-0200	0	1	LAMP-BLON A1M (35/100VDC 1,20A T-2-BULB)	00000	A1M
E1	0300-1031	3	1	TERMINAL, STUD F3D-TUR (4)-IND-MTC	20000	0300-1031
F1	2110-0330	2	1	FUSE .5A 250V BLD-BLD 1,20A,25 UL SEC (FOR 230V OPERATION)	20000	2110-0330
F2	2110-0330	4	1	FUSE 1.5A 250V BLD-BLD 1,20A,25 UL SEC (FOR 110V OPERATION)	20000	2110-0330
FL1	0900-0000	2	1	LINE POWER MODULE (RECOMMENDED REPLACEMENT)	20000	0900-0000
J1	0020-3057	0	1	BODY/RECEPTACLE	20000	0020-3057
J2	1001-1000	0	1	CONTACT-COHN PALE CRP	20000	1001-1000
J3	1001-1001	0	1	INS-COHN,MB-M,COAX JACK 400V	00000	1001-1001
J4	0000-0000	0	1	INSULATOR	20000	0000-0000
J5	0020-3058	0	1	NUT-4H/PLED	20000	0020-3058
J6	0020-3059	0	1	NUT-4H	20000	0020-3059
J7	00010-0000	0	1	CONNECTOR, FEMALE MOD	20000	00010-0000
J8	1000-0100	0	1	CONNECTOR-MF 5NC FEM BGL-HOLE-FR 50-0HM	20000	1000-0100
J9	1000-0100	0	1	CONNECTOR-MF 5NC FEM BGL-HOLE-FR 50-0HM	20000	1000-0100
J0	1000-0000	0	2	CONNECTOR-MF 5NC FEM BGL-HOLE-FR 50-0HM	20000	1000-0000
J1	1000-0000	0	2	CONNECTOR-MF 5NC M BGL-HOLE-FR 50-0HM	20000	1000-0000

See Introduction to this section for ordering information
 *Indicates factory selected value

Table G-3. 8410B Replaceable Parts


Reference Designation	HP Part Number	QTY	Description	Mfr Code	Mfr Part Number
PA17	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA18	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA19	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA10	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA11	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA12	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA13	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA14	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA15	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA16	1251-0160	1	CONNECTOR-PC EDGE 15-CONT/RON 1-RON	28000	1251-0160
PA17	1251-1190	3	CONNECTOR-PC EDGE 15-CONT/RON 2-RON2	28000	1251-1190
PA18	1251-1190	3	CONNECTOR-PC EDGE 15-CONT/RON 2-RON2	28000	1251-1190
PA19	1251-1190	3	CONNECTOR-PC EDGE 15-CONT/RON 2-RON2	28000	1251-1190
MISCELLANEOUS PARTS					
	02010-01020	1	CABLE ASBY/SERVICE(ELT, GREY)OPT 220/225	28000	02010-01020
	02010-01021	1	CABLE ASBY/SERVICE(ELT, GREY)OPT 225	28000	02010-01021
	02010-01022	1	CABLE ASBY/SERVICE(JAGL GREY)OPT 220/225	28000	02010-01022
	02010-01023	1	CABLE ASBY/SERVICE(JAGL GREY)OPT 225	28000	02010-01023
	02010-01024	1	COVER, P/D HOUSING BOARD	28000	02010-01024
	02010-01025	1	COVER, MOVABLE HOUSING BOARD	28000	02010-01025
	02010-01026	1	COVER, P/D HOUSING CONNECTOR	28000	02010-01026
	02010-01027	1	COVER, MOVABLE HOUSING CONNECTOR	28000	02010-01027
	02010-01028	1	DIAL, 0-9 DB	28000	02010-01028
	02010-01029	1	DIAL, 0-60 DB	28000	02010-01029
	0370-0103	1	WASHER 1/4"X1/8"X 3/8" OD 1/8" SHAFT	28000	0370-0103
	0370-0104	1	WASHER 1/4"X1/8"X 3/8" OD 1/8" SHAFT	28000	0370-0104
	0370-0105	1	WASHER 1/4"X1/8"X 3/8" OD 1/8" SHAFT	28000	0370-0105
	0370-0106	1	WASHER 1/4"X1/8"X 3/8" OD 1/8" SHAFT	28000	0370-0106
	0370-0107	1	GUIDE PINS-IN PC BOARD	28000	0370-0107
	02010-01020	1	WASHER, BLACK 3/8" W/DIAL	28000	02010-01020
	02010-01021	1	FILTER	28000	02010-01021
	02010-01022	1	FRAME, FILTER	28000	02010-01022
	02010-01023	1	HEAT SINK, POWER SUPPLY TRANSISTOR	28000	02010-01023

See introduction to this section for ordering information
 *Indicates factory selected value

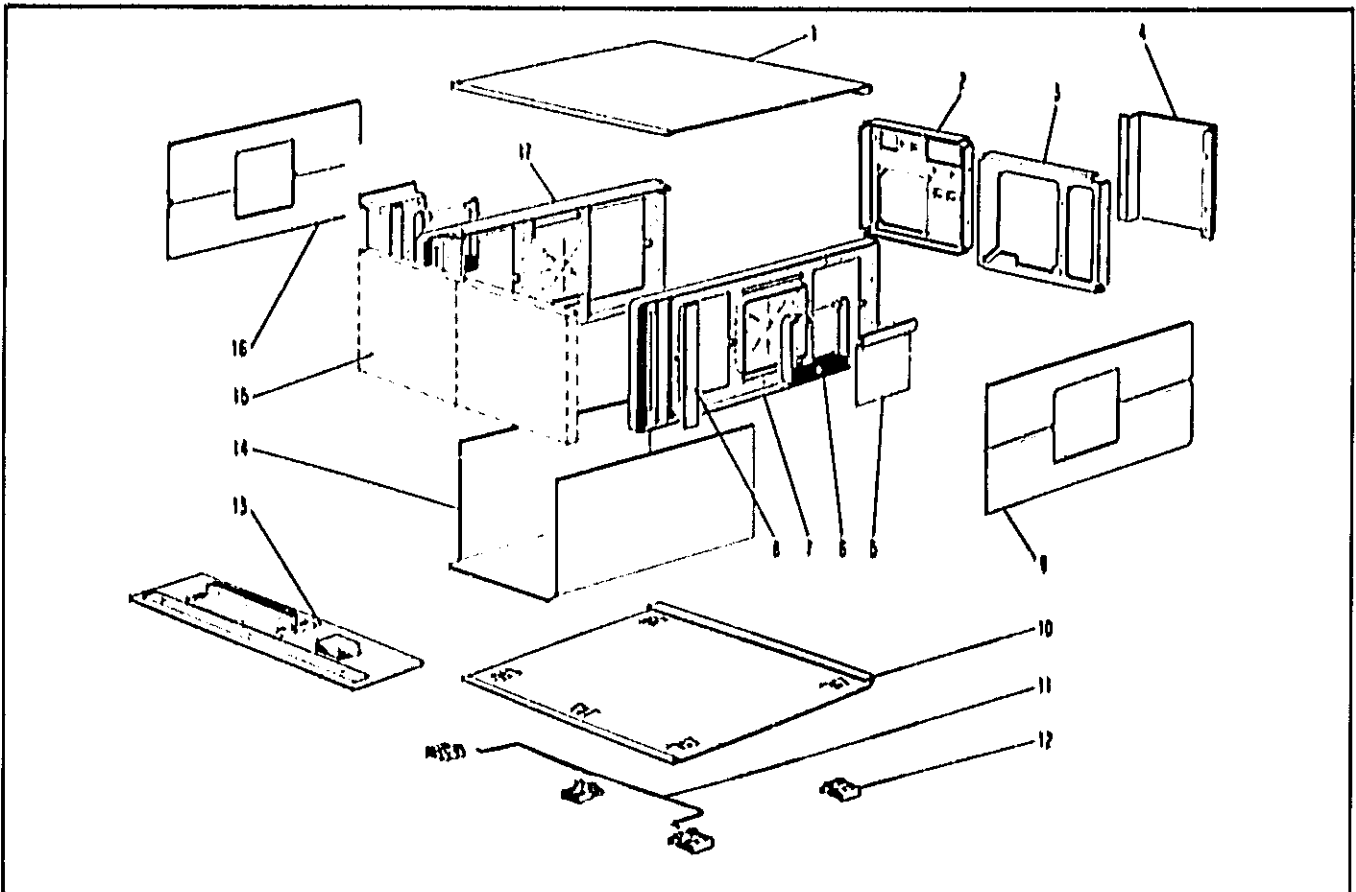


Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
1	5000-0267 2170-0011	4 7	1 2	COVER FRONT TOP (OLIVE GRAY) SCREEN SET PLATE HD 100 DEG 100 DEG	2800 0000	5000-0267 2170-0011
2	0810-0009 2010-0040 2110-0100	4 4 4	1 1 1	PANEL, REAR (FRONT SIDE) SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000 0000	0810-0009 ORDER BY DESCRIPTION ORDER BY DESCRIPTION
3	0810-0009 2110-0100 2110-0073 2110-0110 2110-0001	4 4 4 4 4	1 1 1 1 1	PANEL, REAR, PLUG-IN SIDE SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000 0000 0000 0000	0810-0009 ORDER BY DESCRIPTION ORDER BY DESCRIPTION ORDER BY DESCRIPTION ORDER BY DESCRIPTION
4	0810-0029 2010-0093 2110-0094	4 4 4	1 1 1	COVER, REAR PANEL SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000 0000	0810-0029 2010-0093 ORDER BY DESCRIPTION
5	2110-0009 5000-0715 2110-0011 2110-0073	4 4 4 4	1 1 1 1	RETAINER HANDLE ABSOLUTE GRAY SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000 0000 0000	2110-0009 5000-0715 ORDER BY DESCRIPTION 2110-0073
6	5000-0777	4	1	HANDLE ABSOLUTE SIDE	2800	5000-0777
7	5000-0777	4	1	FRAME ABSOLUTE SIDE	2800	5000-0777
8	5000-0532	4	1	PLATE/PLATED ALUMINUM	2800	5000-0532
9	5000-0715 2170-0020	4 4	1 2	COVER SIDE 7 1/2 (OLIVE GRAY) SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000	5000-0715 ORDER BY DESCRIPTION
10	5000-0760 2110-0011	4 4	1 1	COVER, BOTTOM, OLIVE GRAY SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000	5000-0760 ORDER BY DESCRIPTION
11	1090-0010	4	1	FEET STAND 1-1/2" X 1-1/2" X 1-1/2" X 1-1/2" HD 100 DEG	2800	1090-0010
12	5000-0767	4	1	FOOT ABSOLUTE	2800	5000-0767
13	5000-0715	4	1	FOOT MOUNT (GRAY)	2800	5000-0715
14	0810-0009 2110-0009	4 4	1 1	CLICK, SLIDING (OLIVE GRAY) SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000	0810-0009 ORDER BY DESCRIPTION
15	5000-0717 2170-0020	4 4	1 1	PANEL ABSOLUTE FRONT, BLUE PLG, 3-1/2" COVER ABSOLUTE GRAY SCREEN-MACH A-37, 112-11-16 LG 100 DEG	2800 0000	5000-0717 ORDER BY DESCRIPTION
17	0810-0009	4	1	LEFT FRAME ABS, MCU 7 X 16 PM	2800	0810-0009

Figure 6-1. Model 8410B Cabinet Parts

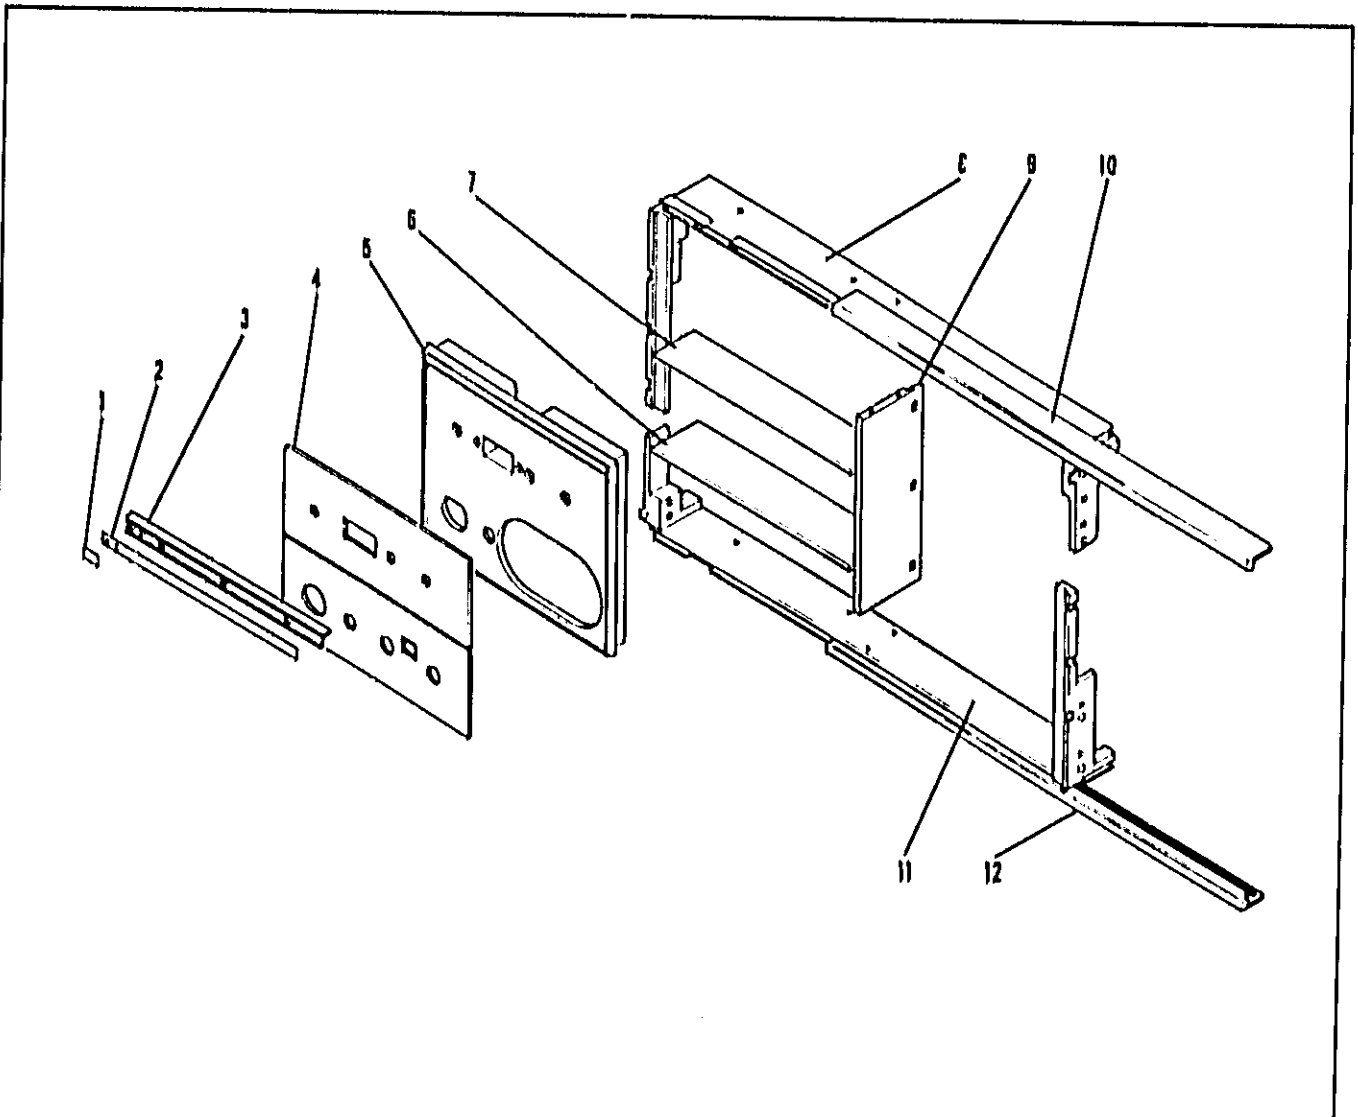

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
				FIGURE 6-2, MODEL 8410B FRONT PANEL		
1	7120-1754 7120-4476	L S	1	NAMEPLATE, 1120-1754, 80-1754-01 AL PLATE, IDENTIFICATION	22=00 72=00	7120-1754 7120-4476
2	5020-3281	U	1	TRIM, NAMEPLATE	22=00	5020-3281
3	02410-00001	U	1	PANEL, FRONT (MINT GRAY)	22=00	02410-00001
4	02410-2021	U	1	SUB-PANEL, FRONT	22=00	02410-2021
5	2370-0001	U	1	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
6	02410-2022	U	1	BRACKET, FRONT PANEL MTC (BOTTOM)	22=00	02410-2022
	2370-0001	U	2	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
	0590-0305	U	2	NUT, #2-1/2, 0590-0305, 0590-0305	00000	ORDER BY DESCRIPTION
7	02410-2022	C	1	BRACKET, FRONT PANEL MTC, (TOP)	22=00	02410-2022
	2370-0001	U	1	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
	0590-0305	U	1	NUT, #2-1/2, 0590-0305, 0590-0305	00000	ORDER BY DESCRIPTION
8	02410-2023	U	1	FRAME, UPPER (MINT GRAY)	22=00	02410-2023
	2370-0001	U	2	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
9	02410-20054	U	1	DEVICES FRAME SUPPORT (MINT GRAY)	22=00	02410-20054
	2370-0001	U	1	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
10	5020-3077	U	1	TRIM, UPPER FRAME (MINT GRAY)	22=00	5020-3077
11	02410-20053	U	1	FRAME, LOWER (MINT GRAY)	22=00	02410-20053
	2370-0001	U	1	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
	2370-0001	U	1	SCREW, #2-1/2, 2370-0001 PP DCS	00000	ORDER BY DESCRIPTION
12	5020-3078	U	1	TRIM, LOWER FRAME (MINT GRAY)	22=00	5020-3078

Figure 6-2, Model 8410B Front Panel

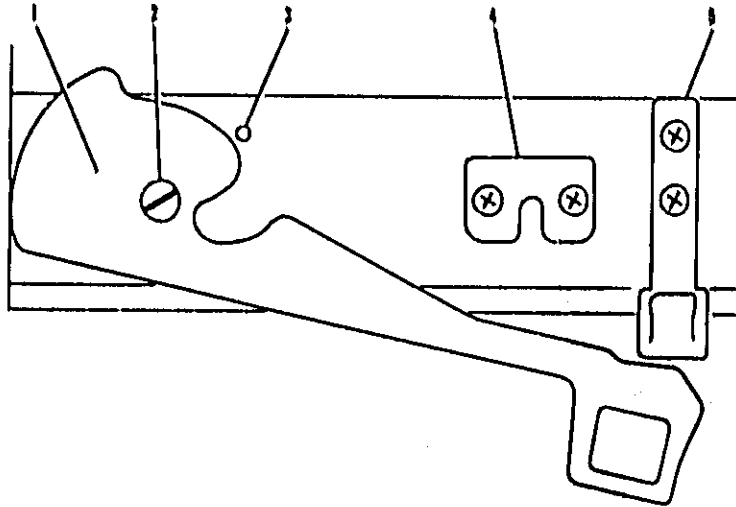

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
				FIGURE 6-3, 8410B EXTRACTOR-RETAINER P/B		
1	5070-3226	0	1	EXTRACTOR	28-80	5020-3226
2	5070-3227	0	1	PIN, PIVOT	30-80	5020-3227
3	08410-2027	0	1	PIN, STOP	22-80	08410-2027
4	5020-3226	0	1	GUIDE, PLUG-IN	28-80	5020-3226
5	2300-0004	3	2	SCREENPACK 0-32 ,128-15-LG R2 CLG	00000	ORDER BY DESCRIPTION
	5040-0301	7	1	LOCK, EXTRACTOR, W/INT CHLY	28-80	5040-0301
	2300-0004	3	1	SCREENPACK 0-32 ,128-15-LG R2 CLG	00000	ORDER BY DESCRIPTION

Figure 6-3. 8410B Extractor-Retainer Parts

Table G-4. 8411A Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1 (PREFIX 1274A AND ABOVE)	02411-80010	9	1	WIDEHAND SAMPLER ASSEMBLY (REF. CHANNEL)	28480	02411-80010
A1 (COPT. DIR. 1274A AND ABOVE)	02411-80017	1		REBUILD 02411-80010, REQUIRES EXCHANGE	28480	02411-80017
A1 (PREFIX 1724A AND ABOVE)	02411-80005	2		WIDEHAND SAMPLER ASSEMBLY (REF. CHANNEL)	28480	02411-80005
A1 (PREFIX 1724A AND BELOW)	02411-80007	4		REBUILD 02411-80005, REQUIRES EXCHANGE	28480	02411-80007
A1 (COPT. DIR. 1724A AND BELOW)	02411-80001	0		WIDEHAND SAMPLER ASSEMBLY (REF. CHANNEL)	28480	02411-80001
A1CR1	5080-0745	0		REBUILD 02411-80001, REQUIRES EXCHANGE	28480	5080-0745
A1CR2	02411-80107	0		WIDEHAND SAMPLER ASSEMBLY (REF. CHANNEL)	28480	02411-80107
A1J1	5081-8121	1		REBUILD 02411-80107, REQUIRES EXCHANGE	28480	5081-8121
A1J2				NOT SEPARATELY REPLACEABLE		
A1J3				NOT SEPARATELY REPLACEABLE		
A1MP1	1250-0707	8	2	CONTACT-RE CONN SER APC-71 SPRING	02660	131-179
A1R1				NOT SEPARATELY REPLACEABLE		
A1R2				NOT SEPARATELY REPLACEABLE		
A1R3				LOAD CARTRIDGE, NSR		
A2 (PREFIX 1274A AND ABOVE)	02411-80011	0	1	WIDEHAND SAMPLER ASSEMBLY (TEST CHANNEL)	28480	02411-80011
A2 (COPT. DIR. 1274A AND ABOVE)	02411-80013	2		REBUILD 02411-80011, REQUIRES EXCHANGE	28480	02411-80013
A2 (PREFIX 1724A AND BELOW)	02411-80008	3	1	WIDEHAND SAMPLER ASSEMBLY (TEST CHANNEL)	28480	02411-80008
A2 (COPT. DIR. 1724A AND BELOW)	02411-80004	3		REBUILD 02411-80008, REQUIRES EXCHANGE	28480	02411-80004
A2CR1	5080-0746	1		WIDEHAND SAMPLER ASSEMBLY (TEST CHANNEL)	28480	5080-0746
A2CR2	02411-80101	1		REBUILD 02411-80004, REQUIRES EXCHANGE	28480	02411-80101
A2J1	5081-8124	2		WIDEHAND SAMPLER ASSEMBLY (TEST CHANNEL)	28480	5081-8124
A2J2				REBUILD 02411-80101, REQUIRES EXCHANGE	28480	
A2J3				NOT SEPARATELY REPLACEABLE		
A2J4				NOT SEPARATELY REPLACEABLE		
A2MP1	1250-0407	8		CONTACT-RE CONN SER APC-71 SPRING	02660	131-179
A2R1				NOT SEPARATELY REPLACEABLE		
A2R2				NOT SEPARATELY REPLACEABLE		
A2R3				LOAD CARTRIDGE, NSR		
A3	02411-80005	9	1	POWER AMPLIFIER ASSEMBLY	28480	02411-80005
A3C1				DELETED		
A3C2	0160-2516	7	10	CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C3	0160-0745	6	10	CAPACITOR-PDTHU 1000PF 50V 500V CER	01121	02411-80005
A3C4	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C5	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C6	0160-2140	3	11	CAPACITOR-PD 470PF +80-20% 14VDC CER	28480	0160-2140
A3C7	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C8	0160-2140	3		CAPACITOR-PD 470PF +80-20% 14VDC CER	28480	0160-2140
A3C9	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C10	0160-2140	3		CAPACITOR-PD 470PF +80-20% 14VDC CER	28480	0160-2140
A3C11	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C12	0160-2140	3		CAPACITOR-PD 470PF +80-20% 14VDC CER	28480	0160-2140
A3C13	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C14	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C15	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3C16	0160-2516	7		CAPACITOR-BTDOFF 1000PF 50V 1250V CER	01121	02411-80005
A3L1	9140-0120	8	1	COIL-MLO 1000H 20K G-50 .155DI.315LG-NOM	28480	9140-0120
A3Q1	1250-0498	2	8	TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q2	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q3	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q4	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q5	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q6	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3Q7	1250-0498	2		TRANSISTOR NPN B1 TO-18 PDM	28480	1250-0498
A3R1				DELETED		
A3R2				DELETED		
A3R3	0757-0804	5	1	RESISTOR 125K 1% 125W P TCO=100	28480	0757-0804
A3R4	0240-3696	5	7	RESISTOR 39 5% 1/4W TC=200	27167	0240-3696
A3R5	0240-3692	1	8	RESISTOR 27 5% 1/4W TC=200	27167	0240-3692
A3R6	0240-3697	1		RESISTOR 27 5% 1/4W TC=200	27167	0240-3697
A3R7	0240-3696	5		RESISTOR 39 5% 1/4W TC=200	27167	0240-3696
A3R8	0240-3697	1		RESISTOR 27 5% 1/4W TC=200	27167	0240-3697
A3R9	0240-3692	1		RESISTOR 27 5% 1/4W TC=200	27167	0240-3692
A3R10	0240-3698	1	2	RESISTOR 165 1% 1/2W P TCO=100	28480	0240-3698
A3R11	0240-3698	1		RESISTOR 165 1% 1/2W P TCO=100	28480	0240-3698
A3R12	0757-0804	7	2	RESISTOR 200 1% 1/2W P TCO=100	28480	0757-0804
A3R13	0757-0804	7		RESISTOR 200 1% 1/2W P TCO=100	28480	0757-0804

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-4. 8411A Replaceable Parts

Reference Designation	HP Part Number	QTY	Description	Mfr Code	Mfr Part Number
A171	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A172	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A173	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A174	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A175	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A176	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A177	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A178	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A179	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A180	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A211	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A212	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A213	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A214	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A215	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A216	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A217	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A218	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A219	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A220	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A221	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A222	0811-0009	7	COIL/CHOKE FERRITE	2840	0811-0009
A223	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A224	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A225	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A226	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A227	9100-1791	1	COIL 200MM ZOL P2D, 375LG-NOM	2840	9100-1791
A228	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
A229	9170-0016	2	CORE-SMELTING HEAD	2840	9170-0016
AN	0811-0003	1	BOARD ASSEMBLY, REFERENCE PREAMP	2840	0811-0003
ANC1	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC2	0100-0198	5	CAPACITOR-PXD .0001PF +80-201 100VDC MICA	2840	0100-0198
ANC3	0100-0198	5	CAPACITOR-PXD .0001PF +80-201 100VDC MICA	2840	0100-0198
ANC4	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC5	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC6	0100-2200	1	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2200
ANC7	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC8	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC9	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC10	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC11	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC12	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC13	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC14	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC15	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC16	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
ANC17	0100-2055	9	CAPACITOR-PXD .01UF +80-201 100VDC CER	2840	0100-2055
AL1	9100-0114	4	COIL-WLD 16UM 10K C85, 155D, 375LG-NOM	2840	9100-0114
AL2	9100-0114	4	COIL-WLD 16UM 10K C85, 155D, 375LG-NOM	2840	9100-0114
AL3	9100-0114	4	COIL-WLD 16UM 10K C85, 155D, 375LG-NOM	2840	9100-0114
AL4	9100-0114	4	COIL-WLD 16UM 10K C85, 155D, 375LG-NOM	2840	9100-0114
AL5	9100-0114	4	COIL-WLD 16UM 10K C85, 155D, 375LG-NOM	2840	9100-0114
AN1	1850-0073	5	TRANSISTOR NPN 2E 70-72 PD200M	2840	1850-0073
AN2	1850-0036	3	TRANSISTOR NPN 2E 70-72 PD200M	2840	1850-0036
AN3	1850-0073	5	TRANSISTOR NPN 2E 70-72 PD200M	2840	1850-0073
AN4	1850-0036	3	TRANSISTOR NPN 2E 70-72 PD200M	2840	1850-0036
AN5	1850-0073	5	TRANSISTOR NPN 2E 70-72 PD200M	2840	1850-0073
AN6	0698-1157	1	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1902-F
AN7	0698-1157	1	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1902-F
AN8	2100-1775	4	RESISTOR-TXRN 5K 5% 1/4W YCP-10J 1-T4	2840	2100-1775
AN9	0698-1157	1	RESISTOR 20,0K 1% 125M F TC00-100	2840	C=1/8-T0-2012-F
AN10	100-1775	4	RESISTOR-TXRN 5K 5% 1/4W YCP-10J 1-T4	2840	2100-1775
AN11	0698-1049	4	RESISTOR 20,0K 1% 125M F TC00-100	2840	C=1/8-T0-2072-F
AN12	0757-0458	1	RESISTOR 1K 1% 125M F TC00-100	2840	C=1/8-T0-1001-F
AN13	0698-1101	9	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1002-F
AN14	0757-0458	1	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1002-F
AN15	0698-1049	4	RESISTOR 20,0K 1% 125M F TC00-100	2840	C=1/8-T0-2012-F
AN16	0698-1049	4	RESISTOR 20,0K 1% 125M F TC00-100	2840	C=1/8-T0-2012-F
AN17	0698-1153	9	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1001-F
AN18	0698-1153	9	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1001-F
AN19	0757-0458	1	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1001-F
AN20	0698-1049	4	RESISTOR 10,0K 1% 125M F TC00-100	2840	C=1/8-T0-1001-F

See introduction to this section for ordering information
 *Indicates factory selected value

Table G-4. 8411A Replaceable Parts

Reference Designation	HP Part Number	C O	Qty	Description	Mfr Code	Mfr Part Number
ARR1	0757-0403	2	1	RESISTOR 101 1% .125W F TC000-100	24546	C4-1/8-10-10101-F
ARR2	0757-0417	2	2	RESISTOR 501 1% .125W F TC000-100	24546	C4-1/8-10-50101-F
ARR3	0698-3163	4	1	RESISTOR 316 1% .125W F TC000-100	24546	C4-1/8-10-3161-F
ARR4	0698-3161	4	1	RESISTOR 316 1% .125W F TC000-100	24546	C4-1/8-10-3161-F
ARR5	0698-3170	4	1	RESISTOR 316 1% .125W F TC000-100	24546	PHL55-1/8-10-3161-F
ARR6	0698-0025	0	2	RESISTOR 2,01A 1% .125W F TC000-100	24546	C4-1/8-10-2011-F
ARR7	0757-0416	3	1	RESISTOR 5,11A 1% .125W F TC000-100	24546	C4-1/8-10-5111-F
ARZ1	9170-0016	0	1	CONV-SOLDERING HEAD	24480	9170-0016
AS	00411-0004	7	1	BOARD ASSEMBLY, TEST PLAMP	24480	00411-0004
ASC1	0160-2061	0	1	CAPACITOR-FXD 100P +-5% 300VDC CER R-30	24480	0160-2061
ASC2	0160-2058	0	1	CAPACITOR-FXD 100P +-5% 300VDC MICA	24480	0160-2058
ASC3	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC4				NOT ASSIGNED		
ASC5	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC6	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC7	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC8	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC9	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC10	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC11	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC12	0160-2055	0	1	CAPACITOR-FXD .01UF +-20-20% 100VDC CER	24480	0160-2055
ASC13	0130-0017	0	1	CAPACITOR-V TRM-CER R-300P 300V PE-MTG	24480	0130-0017
ASL1	9140-0111	1	1	COIL-MLD 3,3UM 10% GR55 ,1550P,375LG-NOM	24480	9140-0111
ASL2	9140-0111	1	1	COIL-MLD 10UM 10% GR55 ,1550P,375LG-NOM	24480	9140-0111
ASL3	9140-0111	1	1	COIL-MLD 10UM 10% GR55 ,1550P,375LG-NOM	24480	9140-0111
ASQ1	1254-0073	0	1	TRANSISTOR NPN 50 TO-18 PD200MA	24480	1254-0073
ASQ2	1254-0073	0	1	TRANSISTOR NPN 50 TO-18 PD200MA	24480	1254-0073
ASQ3	1254-0073	0	1	TRANSISTOR NPN 50 TO-18 PD200MA	24480	1254-0073
ASR1	0698-3157	2	1	RESISTOR 10,0K 1% .125W F TC000-100	24546	C4-1/8-10-10001-F
ASR2	0698-3157	2	1	RESISTOR 10,0K 1% .125W F TC000-100	24546	C4-1/8-10-10001-F
ASR3	2100-1774	4	1	RESISTOR-TRM 5K 5% 1/4W TOP-ADJ 1-TM	24480	2100-1774
ASR4	0698-3159	4	1	RESISTOR 20,1K 1% .125W F TC000-100	24546	C4-1/8-10-2011-F
ASR5	2100-1774	4	1	RESISTOR-TRM 5K 5% 1/4W TOP-ADJ 1-TM	24480	2100-1774
ASR6	0698-3164	0	1	RESISTOR 20,1K 1% .125W F TC000-100	24546	C4-1/8-10-2011-F
ASR7	0757-0417	7	1	RESISTOR 1,13K 1% .125W F TC000-100	24546	C4-1/8-10-1131-F
ASR8	0698-3163	0	1	RESISTOR 316 1% .125W F TC000-100	24546	C4-1/8-10-3161-F
ASR9	0757-0458	7	1	RESISTOR 51,1K 1% .125W F TC000-100	24546	C4-1/8-10-5111-F
ASR10	0757-0417	0	1	RESISTOR 50,1K 1% .125W F TC000-100	24546	C4-1/8-10-5011-F
ASR11	0698-3161	0	1	RESISTOR 316 1% .125W F TC000-100	24546	C4-1/8-10-3161-F
ASR12	0698-3159	0	1	RESISTOR 20,1K 1% .125W F TC000-100	24546	C4-1/8-10-2011-F
ASR13	0757-0416	7	2	RESISTOR 5,11A 1% .125W F TC000-100	24546	C4-1/8-10-5111-F
ASR14	0698-0025	0	1	RESISTOR 2,01A 1% .125W F TC000-100	24546	C4-1/8-10-2011-F
ASR16	0757-0416	3	1	RESISTOR 5,11A 1% .125W F TC000-100	24546	C4-1/8-10-5111-F
ASR17	0698-3160	7	1	RESISTOR 100 1% .125W F TC000-100	24546	C4-1/8-10-10001-F
ASR18				NOT ASSIGNED		
ASR19	0698-3160	5	3	RESISTOR 21,5 1% .125W F TC000-100	01245	PHL55-1/8-10-2151-F
ASR20	2100-1774	5	1	RESISTOR-TRM 10K 5% 1/4W TOP-ADJ 1-TM	24480	2100-1774
ASR21	2100-1774	3	3	RESISTOR-TRM 5K 5% 1/4W TOP-ADJ 1-TM	24480	2100-1774
AS	00411-0001	1	1	BOARD ASSEMBLY, SHAPING AMPLIFIER	24480	00411-0001
ASC1	0160-0100	3	3	CAPACITOR-FXD 4,7UF+-10% 35VDC TA	50249	150D7514035Z
ASC2	0160-0100	3	3	CAPACITOR-FXD 4,7UF+-10% 35VDC TA	50249	150D7514035Z
ASC3	0160-0158	0	1	CAPACITOR-FXD 5000PF +-10% 200VDC PCLYE	24480	0160-0158
ASC4	0160-0148	5	1	CAPACITOR-FXD 2000PF +-5% 300VDC MICA	72136	0M15F201J3000VICR
ASC5	0160-0100	3	3	CAPACITOR-FXD 4,7UF+-10% 35VDC TA	50249	150D7514035Z
ASC6	1901-0025	1	1	DIODE-ZNR 14WZ 11,7V 5% DO-7 PD-3M	24480	1901-0025
ASC7	1901-0025	2	5	DIODE-CEN PNP 100V 200MA DO-7	24480	1901-0025
ASC8	1901-0025	2	5	DIODE-CEN PNP 100V 200MA DO-7	24480	1901-0025
ASC9	1901-0025	2	5	DIODE-CEN PNP 100V 200MA DO-7	24480	1901-0025
ASC10	1910-0016	0	3	DIODE-GE 60V 80MA 1UB DO-7	24480	1910-0016
ASC11	1910-0016	0	3	DIODE-GE 60V 80MA 1UB DO-7	24480	1910-0016
ASC12	1901-0025	2	5	DIODE-CEN PNP 100V 200MA DO-7	24480	1901-0025
ASL1	9100-1012	5	1	COIL-MLD 3304M 20% GR45 ,1550P,375LG-NOM	24480	9100-1012
ASQ1	1253-0012	0	1	TRANSISTOR PNP 2N2904A 50 TO-18 PD200MA	01245	2N2904A
ASR1	0698-3161	0	1	RESISTOR 316 1% .125W F TC000-100	24546	0698-3161
ASR2	2100-1769	0	1	RESISTOR-TRM 50 5% 1/4W TOP-ADJ 1-TM	24480	2100-1769
ASR3	0757-0382	0	2	RESISTOR 10,2 1% .125W F TC000-100	19701	MFAC1/8-10-1022-F
ASR4	0757-0382	0	1	RESISTOR 10,2 1% .125W F TC000-100	19701	MFAC1/8-10-1022-F
ASR5	0698-3162	1	1	RESISTOR 316 1% .125W F TC000-100	24546	0698-3162

See introduction to this section for ordering information
 *Indicates factory selected value


Table G-4. B411A Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6N0	2100-1773	2	2	RESISTOR-100K 1% 5% HP TOP-ADJ 1-TNH	2000	2100-1773
A6N1	2100-1774	2	2	RESISTOR-100K 1% 5% HP TOP-ADJ 1-TNH	2000	2100-1774
A6N2	2100-1775	2	2	RESISTOR-100K 1% 5% HP TOP-ADJ 1-TNH	2000	2100-1775
A6N3	0698-1007	1	1	RESISTOR 22K 1% 125W F TC000-100	2000	CN-1/8-T0-022K-1
A6N4	0757-0274	1	1	RESISTOR 3.3K 1% 125W F TC000-100	2000	CN-1/8-T0-033K-1
A6N5	0757-0275	1	1	RESISTOR 4.7K 1% 125W F TC000-100	2000	CN-1/8-T0-047K-1
A6N6	0757-0276	1	1	RESISTOR 6.8K 1% 125W F TC000-100	2000	CN-1/8-T0-068K-1
A6N7	0757-0277	1	1	RESISTOR 10K 1% 125W F TC000-100	2000	CN-1/8-T0-010K-1
A6N8	0757-0278	1	1	RESISTOR 15K 1% 125W F TC000-100	2000	CN-1/8-T0-015K-1
A6N9	0757-0279	1	1	RESISTOR 22K 1% 125W F TC000-100	2000	CN-1/8-T0-022K-1
A6N10	0757-0280	1	1	RESISTOR 33K 1% 125W F TC000-100	2000	CN-1/8-T0-033K-1
A6N11	0757-0281	1	1	RESISTOR 47K 1% 125W F TC000-100	2000	CN-1/8-T0-047K-1
A6N12	0757-0282	1	1	RESISTOR 68K 1% 125W F TC000-100	2000	CN-1/8-T0-068K-1
A6N13	0757-0283	1	1	RESISTOR 100K 1% 125W F TC000-100	2000	CN-1/8-T0-100K-1
A6N14	0757-0284	1	1	RESISTOR 150K 1% 125W F TC000-100	2000	CN-1/8-T0-150K-1
A6N15	0757-0285	1	1	RESISTOR 220K 1% 125W F TC000-100	2000	CN-1/8-T0-220K-1
A6N16	2100-1776	1	1	RESISTOR-100K 1% 5% HP TOP-ADJ 1-TNH	2000	2100-1776
A7	0001-0001	0	1	BOARD ASSEMBLY, YTO	2000	0001-0001
A7C1	0100-1453	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	1500000001502
A7C2	0100-1454	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1454
A7C3	0100-1455	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1455
A7C4	0100-1456	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1456
A7C5	0100-1457	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1457
A7C6	0100-1458	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1458
A7C7	0100-1459	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1459
A7C8	0100-1460	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1460
A7C9	0100-1461	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1461
A7C10	0100-1462	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1462
A7C11	0100-1463	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1463
A7C12	0100-1464	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1464
A7C13	0100-1465	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1465
A7C14	0100-1466	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1466
A7C15	0100-1467	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1467
A7C16	0100-1468	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1468
A7C17	0100-1469	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1469
A7C18	0100-1470	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1470
A7C19	0100-1471	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1471
A7C20	0100-1472	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1472
A7C21	0100-1473	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1473
A7C22	0100-1474	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1474
A7C23	0100-1475	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1475
A7C24	0100-1476	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1476
A7C25	0100-1477	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1477
A7C26	0100-1478	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1478
A7C27	0100-1479	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1479
A7C28	0100-1480	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1480
A7C29	0100-1481	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1481
A7C30	0100-1482	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1482
A7C31	0100-1483	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1483
A7C32	0100-1484	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1484
A7C33	0100-1485	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1485
A7C34	0100-1486	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1486
A7C35	0100-1487	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1487
A7C36	0100-1488	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1488
A7C37	0100-1489	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1489
A7C38	0100-1490	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1490
A7C39	0100-1491	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1491
A7C40	0100-1492	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1492
A7C41	0100-1493	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1493
A7C42	0100-1494	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1494
A7C43	0100-1495	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1495
A7C44	0100-1496	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1496
A7C45	0100-1497	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1497
A7C46	0100-1498	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1498
A7C47	0100-1499	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1499
A7C48	0100-1500	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1500
A7C49	0100-1501	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1501
A7C50	0100-1502	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1502
A7C51	0100-1503	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1503
A7C52	0100-1504	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1504
A7C53	0100-1505	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1505
A7C54	0100-1506	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1506
A7C55	0100-1507	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1507
A7C56	0100-1508	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1508
A7C57	0100-1509	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1509
A7C58	0100-1510	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1510
A7C59	0100-1511	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1511
A7C60	0100-1512	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1512
A7C61	0100-1513	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1513
A7C62	0100-1514	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1514
A7C63	0100-1515	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1515
A7C64	0100-1516	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1516
A7C65	0100-1517	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1517
A7C66	0100-1518	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1518
A7C67	0100-1519	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1519
A7C68	0100-1520	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1520
A7C69	0100-1521	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1521
A7C70	0100-1522	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1522
A7C71	0100-1523	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1523
A7C72	0100-1524	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1524
A7C73	0100-1525	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1525
A7C74	0100-1526	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1526
A7C75	0100-1527	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1527
A7C76	0100-1528	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1528
A7C77	0100-1529	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1529
A7C78	0100-1530	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1530
A7C79	0100-1531	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1531
A7C80	0100-1532	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1532
A7C81	0100-1533	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1533
A7C82	0100-1534	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1534
A7C83	0100-1535	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1535
A7C84	0100-1536	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1536
A7C85	0100-1537	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1537
A7C86	0100-1538	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1538
A7C87	0100-1539	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1539
A7C88	0100-1540	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1540
A7C89	0100-1541	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1541
A7C90	0100-1542	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1542
A7C91	0100-1543	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1543
A7C92	0100-1544	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1544
A7C93	0100-1545	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1545
A7C94	0100-1546	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1546
A7C95	0100-1547	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1547
A7C96	0100-1548	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1548
A7C97	0100-1549	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1549
A7C98	0100-1550	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1550
A7C99	0100-1551	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	0100-1551
A7C100	0100-1552	2	1	CAPACITOR-FID 470PF 50V-20V 1%VDC CER	2000	0100-1552
A7C101	0100-1553	2	1	CAPACITOR-FID 100PF 50V-20V 1%VDC CER	2000	0100-1553
A7C102	0100-1554	2	1	CAPACITOR-FID 220PF 50V-20V 1%VDC CER	2000	

Table 6-4. 8411A Replaceable Parts

Reference Designation	HP Part Number	C/D	Qty	Description	Mfr Code	Mfr Part Number
CA	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CB	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CC	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CD	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CE	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CF	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CG	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CH	0100-0305	0		CAPACITOR-POLYMER 1000PF 50V 500V CLM	01121	7020-1020
CI	1901-0309	3	1	DICDE	20000	1901-0309
L1				NOT SEPARATELY REPLACEABLE		
L2				NOT SEPARATELY REPLACEABLE		
L3	9100-0110	0		COIL-WLD 10UM 100 GR55 ,1550Z,175LC-NOM	20000	9100-0110
L4	9100-0110	0		COIL-WLD 10UM 100 GR55 ,1550Z,175LC-NOM	20000	9100-0110
P1	1200-0200	0	0	COIL-WP COHN SUBMIN BEPILS	20000	1200-0200
P2	1200-0200	0	0	COIL-WP COHN SUBMIN BEPILS	20000	1200-0200
P3	1200-0200	0	0	COIL-WP COHN SUBMIN BEPILS	20000	1200-0200
P4	1200-0200	0	0	COIL-WP COHN SUBMIN BEPILS	20000	1200-0200
R1				NOT SEPARATELY REPLACEABLE		
R2				NOT SEPARATELY REPLACEABLE		
R3				NOT SEPARATELY REPLACEABLE		
WI	00011-0006	1	1	INTERCONNECT CABLE ASSEMBLY, COMPLETE	20000	00011-0006
WIP1				NOT SEPARATELY REPLACEABLE		
Z1	9170-0010	0		COIL-WELDING HEAD	20000	9170-0010
Z2	9170-1005	0	1	COIL-WELDING HEAD	20000	9170-1005

See introduction to this section for ordering information
 *Indicates factory selected value

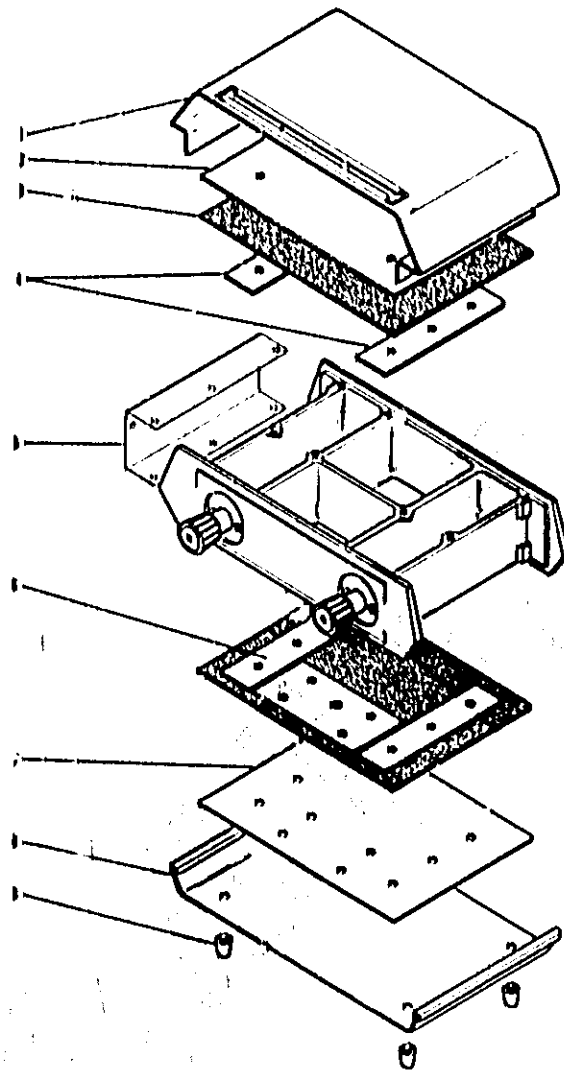

Reference Designation	HP Part Number	c d	Qty	Description	Mfr Code	Mfr Part Number
1	0A411-00013	4	1	FIGURE 6-4, MODEL 8411A CABINET PARTS		
2	0A411-0005	3	1	COVER, TOP (ACTIVE SHIELD)	2800	0A411-00013
3	0A411-0010	4	1	COVER, RF TOP	2800	0A411-0005
4	0A411-0007	1	1	CABINET, RF	2800	0A411-0010
5	0A411-00016	2	1	SHIELD, TEST PREAMP	2800	0A411-0007
6	0A411-00017	0	1	SHIELD, REF PREAMP	2800	0A411-00016
7	0A411-0001	0	1	ASSEMBLY, RF-REF	2800	0A411-00017
8	0A411-0004	1	1	COVER, RF BOTTOM	2800	0A411-0001
9	0A411-00014	0	1	COVER, BOTTOM (ACTIVE SHIELD)	2800	0A411-0004
	0A411-0003	3	0	FOOT	2800	0A411-00014

Figure 6-4. Model 8411A Cabinet Parts

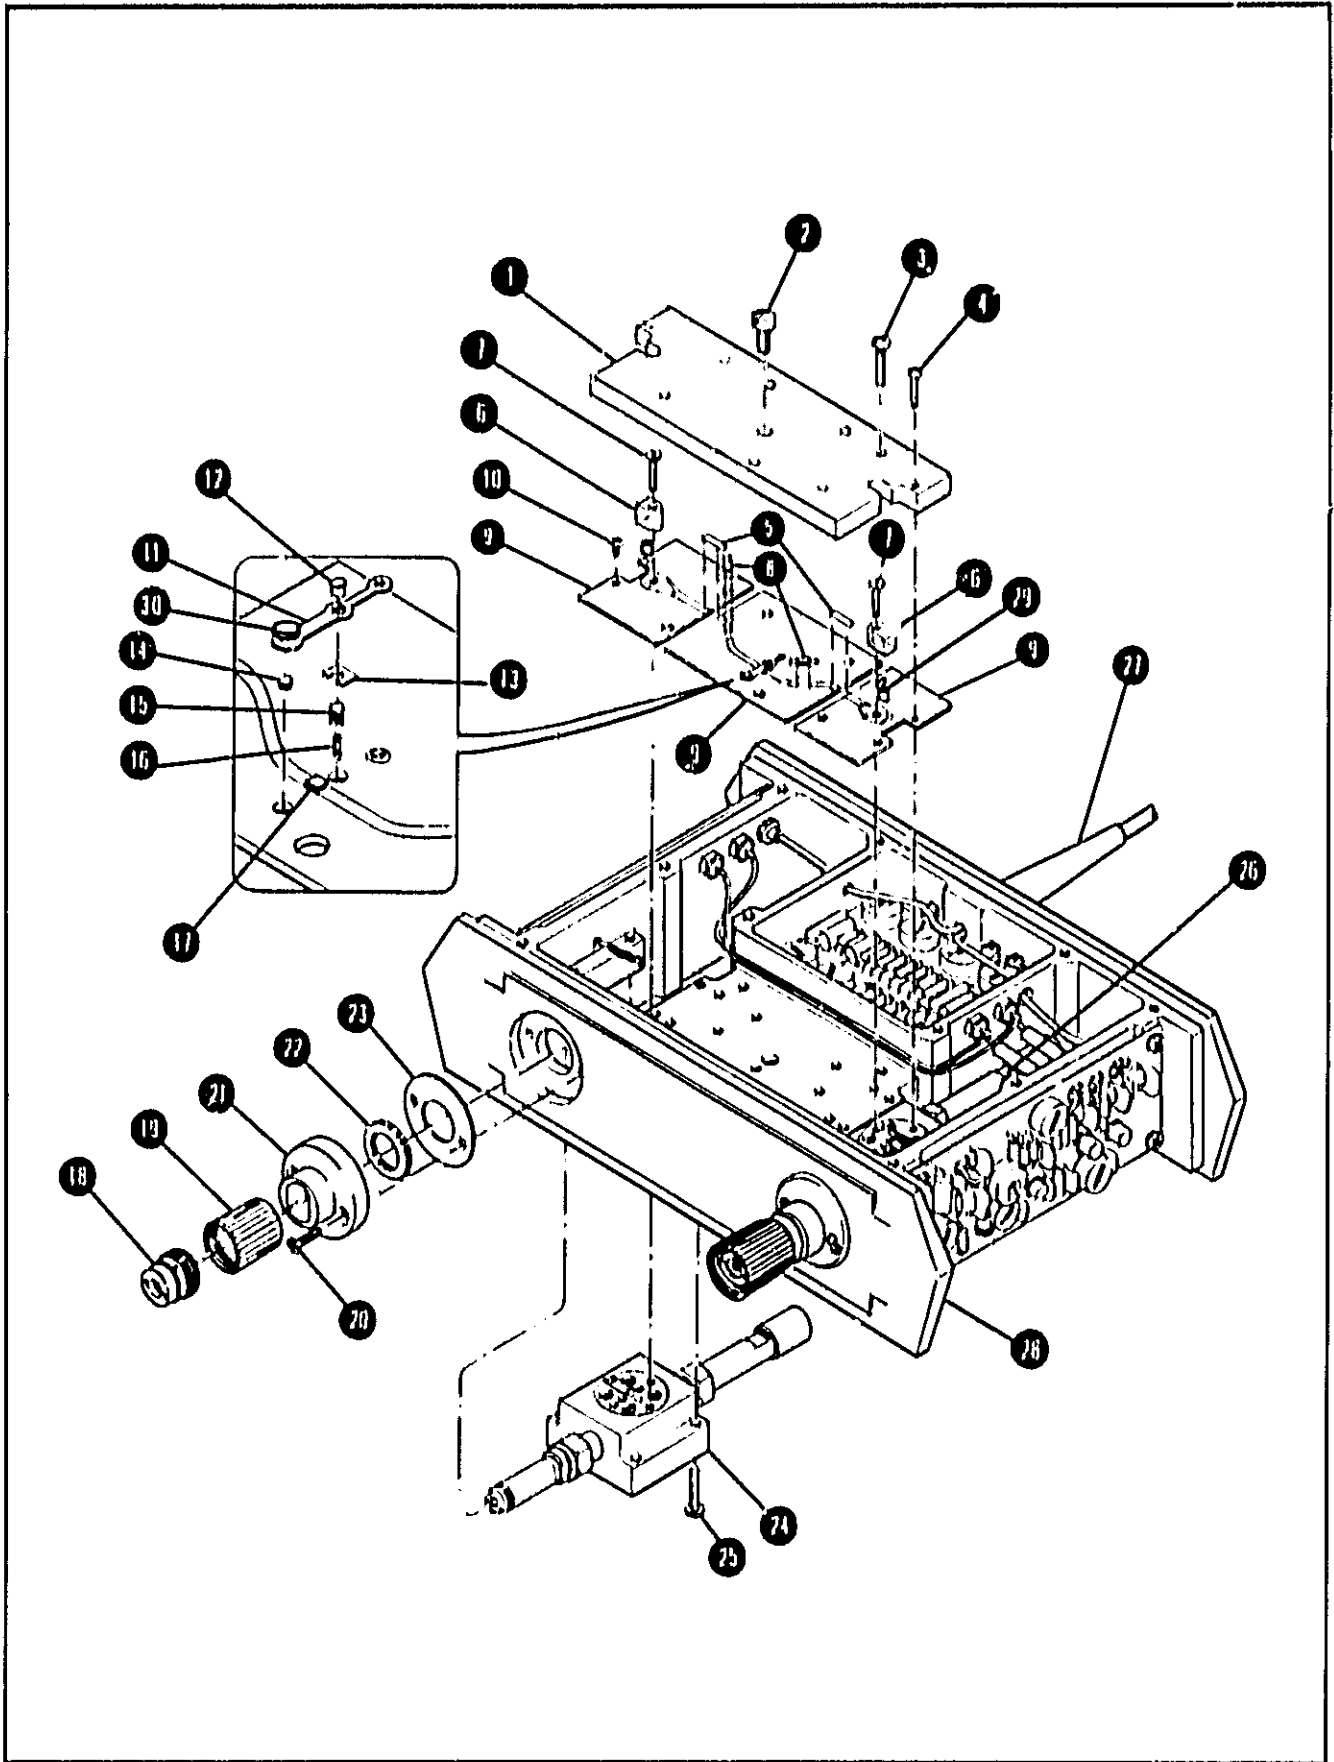


Figure 6-5. Model 8411A Exploded View (1 of 2)

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
1	0001-2001	0	1	CABLE, STRIPLINE	2000	0001-2001
2	210-0100	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
3	210-0110	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
4	0570-0100	1	1	SCREW-MACH 2-60, 1/16-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
5	0001-0001	0	1	JUMPER, STRIPLINE (SEE ITEM 6 FOR DLE)	2000	0001-0001
6	0001-2000	0	1	CLAMP, HIGH COND (INCL SUPPLEMENTARY)	2000	0001-2000
7	0000-0001	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
8	0000-0100	1	1	RETRACTOR 1/2, 0-12, 0-12 T.C.D. 0-12	2000	01-1/2-100-0100
				NOTE THIS RETRACTOR IS BEING USED AS A TEMPORARY MEASURE UNTIL A MORE DURABLE REPLACEMENT IS AVAILABLE. WHEN REPLACING THIS RETRACTOR, ORDER BY MODEL NUMBER AND REFERENCE DESIGNATION TO OBTAIN THE MOST RECENT RETRACTOR AVAILABLE.		
9	0001-0002	0	1	STRIPLINE ASSEMBLY, END SECTION, 0-22, 1/20-1/16 P.H.-D-PDZ	2000	0001-0002
10	0001-2001	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
11	190-0100	1	1	CONTACT, BWP RECOVERY DIODE	2000	0001-2001
12	190-0100	1	1	DIODE	2000	190-0100
13	190-0100	1	1	SPRING	2000	190-0100
14	0000-0100	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0000-0100
15	0001-2001	0	1	CONTACT, SLIDING	2000	0001-2001
16	190-0100	0	1	SPRING (SEE ITEM 13 FOR COMPLETE LISTING)	2000	190-0100
17	0100-0100	0	1	CAPACITOR 0-100 1000PF 50VDC 50V	2000	0100-0100
18	190-0100	0	1	RETRACTOR OF COND WITH SPR FOR	0000	190-0100
19	190-0100	0	1	HIGH COND SERIES (SEE ITEM 14 FOR COMPLETE LISTING)	0000	190-0100
20	0000-0100	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
21	0000-0100	0	1	SCREW-MACH 0-22, 1/20-1/16 P.H.-D-PDZ	0000	ORDER BY DESCRIPTION
22	0001-2001	0	1	COVER, W/ FRONT	2000	0001-2001
23	0100-0100	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0100-0100
24	0001-2001	0	1	DIODE, PHEN	2000	0001-2001
25	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
26	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
27	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
28	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
29	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
30	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
31	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
32	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
33	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
34	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
35	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
36	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
37	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
38	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
39	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
40	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
41	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
42	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
43	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
44	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
45	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
46	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
47	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
48	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
49	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
50	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
51	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
52	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
53	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
54	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
55	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
56	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
57	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
58	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
59	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
60	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
61	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
62	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
63	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
64	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
65	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
66	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
67	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
68	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
69	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
70	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
71	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
72	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
73	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
74	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
75	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
76	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
77	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
78	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
79	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
80	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
81	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
82	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
83	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
84	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
85	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
86	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
87	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
88	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
89	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
90	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
91	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
92	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
93	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
94	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
95	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
96	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
97	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
98	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
99	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001
100	0001-2001	0	1	RETRACTOR 20-12, 0-12 T.C.D. 0-100	2000	0001-2001

Figure 6-5. Model 8411A Exploded View (2 of 2)

Table 6-5. Code List of Manufacturers

Mfr. No.	Manufacturer Name	Address	Zip Code
00000	ANY SATISFACTORY SUPPLIER		
00460	NORTELCO NORTH AMER PHILIPS LTC CORP	LOS ANGELES, CA	90021
00570	SANGAMO ELEC CO S CAROLINA DIV	PICKENS, SC	29671
01121	ALLEN-BRADLEY CO	MILWAUKEE, WI	53204
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS, TX	75222
01920	RCA CORP SOLID STATE DIV	SOMERVILLE, NJ	08876
02111	SPECTROL ELECTRONICS CORP	CITY OF IND, CA	91745
02114	FERROXUBE CORP	SAUGERTIES, NY	12477
02660	AMPHENOL SALES DIV OF BUNKER-RAMO	BROADVIEW, IL	60153
03888	KDI PYROFILM CORP	WHIPPANY, NJ	07981
04213	CADDELL-BURNS MFG CO INC	MINEOLA, NY	11501
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX, AZ	85062
09922	BURNDY CORP	NORWALK, CT	06852
19701	MEPCO/ELECTRA CORP	MINERAL WELLS, TX	76067
20940	MICRO-OILM CORP	EL MONTE, CA	91731
24046	TRANSITRON ELECTRONIC CORP	WAKEFIELD, MA	01880
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD, PA	16701
27167	CORNING GLASS WORKS (WILMINGTON)	WILMINGTON, NC	28401
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO, CA	94304
30983	MEPCO/ELECTRA CORP	SAN DIEGO, CA	92121
52763	STETTNER-TRUSHI INC	CAZENOVIA, NY	13035
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS, MA	01247
72136	ELECTRO MOTIVE CORP SUB DEC	WILLIMANTIC, CT	06226
75042	TRW INC PHILADELPHIA DIV	PHILADELPHIA, PA	19108

**BACK DATING
MANUAL
CHANGES**

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION

7-2. This section contains instructions for adapting this Operating and Service Manual to instruments with serial prefixes different from the ones listed on the title page of this manual.

7-3. MANUAL CHANGES

7-4. To adapt this manual to your 8410B or 8411A, refer to Table 7-1 and make all the changes

listed opposite the serial number of your instrument. (The serial number plate is on the instrument's rear panel.) Perform all the indicated changes in the order in which they are listed.

7-5. If your instrument's serial number, or serial number prefix, is not listed on the title page of this manual or in Table 7-1, it may be documented in a yellow MANUAL CHANGES supplement. For additional information about serial number coverage refer to INSTRUMENTS COVERED BY MANUAL in Section I.

Table 7-1. Manual Changes By Serial Number

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
8410A	
1450A, 1525A00191 thru 1525A00302	A, B, C, D, E
1525A00303 thru 1525A prefix	A, B, C, D
1647A	A, B, C
1734A, 1741A prefix thru 1741A01370	A, B
1741A01371 thru 1741A Prefix	A

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
8411A	
803-	F thru N
821-	F thru M
850-	F thru L
905-	F thru K
930-	F thru J
0934A	F, G, H, I
1144A	F, G, H
1644A, 1726A	F, G
1824A	F

CHANGE A

Table 6-3:

Delete A10F1, A10MP1, and A10MP2.

Figure 8-62:

Delete fuse F1 and connect jumper wire where fuse was connected.

CHANGE B

Table 6-3:

Change A10A1C6 to HP Part Number 0160-4300, Capacitor-FXD 0.05 UF +80 – 20% 100 VDCW

Figure 8-62:

Change A10A1C6 to 0.05 UF.

CHANGE C

Table 6-3:

Change A7R10 to HP Part Number 2100-0942, R:VAR FLM 50K OHM 20% 3/4 W.

Change A10A1C3 to HP Part Number 0160-2917.

Change A10A1C6 to HP Part Number 0160-2917.

Change A11C1 to HP Part Number 0160-0134, C:FXD MICA 220 PF 5% 300 VDCW. Factory selected part.

Add A11C5, HP Part No. 0160-0939, C:FXD MICA 430 PF 5% 300 VDCW.

Change A11C7 to HP Part Number 0160-2207, C:FXD MICA 300 PF 5%.

Figure 8-48:

Change the value of A11C1* to 220 PF.

Remove asterisk (*) from A11C4.

Add A11C5, 430PF, in parallel with A11C4.

Change the value of A11C7* to 300 PF.

CHANGE D

Table 6-3:

Add A10A1C2, HP Part Number 0160-2917, C:FXD CER 0.05 UF +80 – 20% 100 VDCW.

Add A10A1C4, HP Part Number 0160-0291, C:FXD ELECT 1.0 UF 10% 35 VDCW.

Add A10A1C7, HP Part Number 0160-2917, C:FXD CER 0.05 UF +80 – 20% 100 VDCW.

Add A10A1R7, HP Part Number 0757-0346, R:FXD MET FLM 10 OHM 1% 1/8 W.

Add A10A1R17, HP Part Number 0683-0275, R:FXD COMP 2.7 OHM 5% 1/4 W.

Add A10A1R28, HP Part Number 0757-0346, R:FXD MET FLM 10 OHM 1% 1/8 W.

Delete A10A1C9, A10A1C10, and A10A1C11.

Figure 8-59:

Replace capacitor A10A1C9 with series RC circuit A10A1R7 (10 Ω) and A10A1C2 (0.05 UF).

Replace capacitor A10A1C10 with series RC circuit A10A1R17 (2.7 Ω) and A10A1C4 (1.0 UF).

CHANGE D (Cont'd)

Figure 8-61:

Replace the Parts Location Drawing of A10A1 with the one in Figure 7-1.

Figure 8-62:

Replace capacitor A10A1C11 with series RC circuit A10AIR28 (10Ω) and A10A1C7 (0.05 UF).

CHANGE E

Table 6-3:

Delete A12Z2

Delete A14Z2

Figure 8-36:

Delete A12Z2

Delete A14Z2

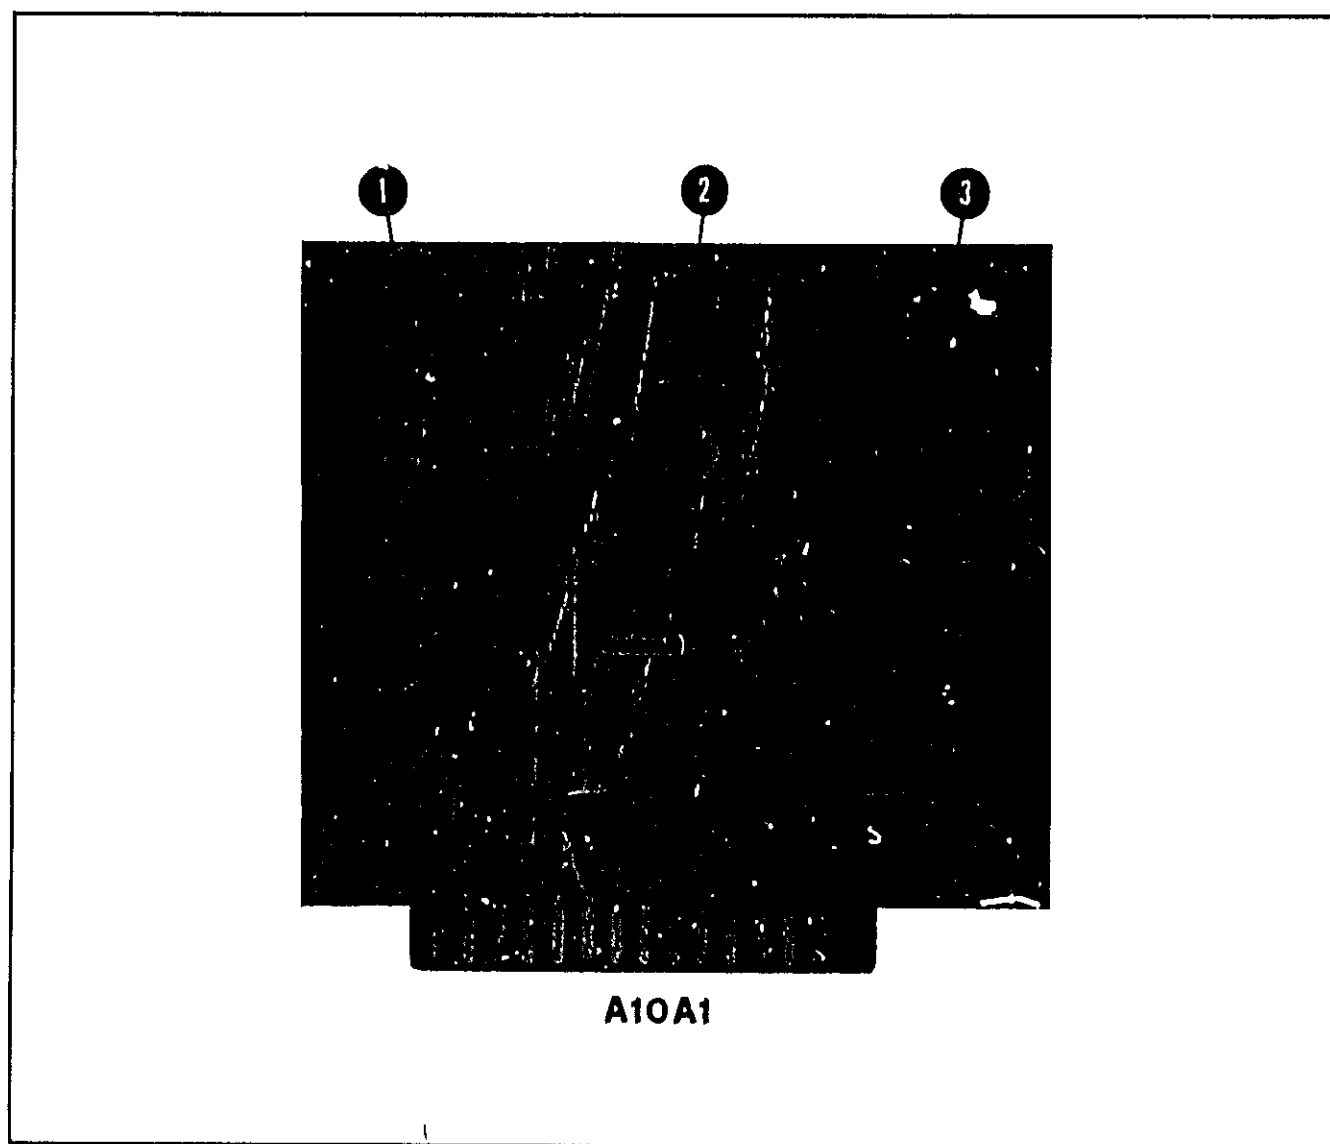


Figure 7-1. (Figure 3-80, 8410A-A10A1 Parts Location (Change D))

CHANGE F

Table 6-4:

Change A7C2, A7C3, A7C8, and A7C9 through A7C12 to HP Part number 0160-2140.

Change A7C4 and A7C5 to HP Part Number 0160-2143.

Change A7C14 through A7C16 to HP Part Number 0160-2139.

Change A7R2 to HP Part Number 0757-0200, 5620 Ohms.

Change A7R3 to HP Part Number 0757-0279.

Change A7R15 to HP Part Number 0757-0280, 1000 Ohms.

Change A7R19 to HP Part Number 2100-1777, 20K Ohms.

Delete A7R22.

Figure 8-33:

Change A7R19 to 20 K Ohms.

Change A7R2 to 5620 Ohms.

Delete A7R22.

Change A7 VTO Assembly LOW Frequency Clamp Circuit as shown in Figure 7-2.

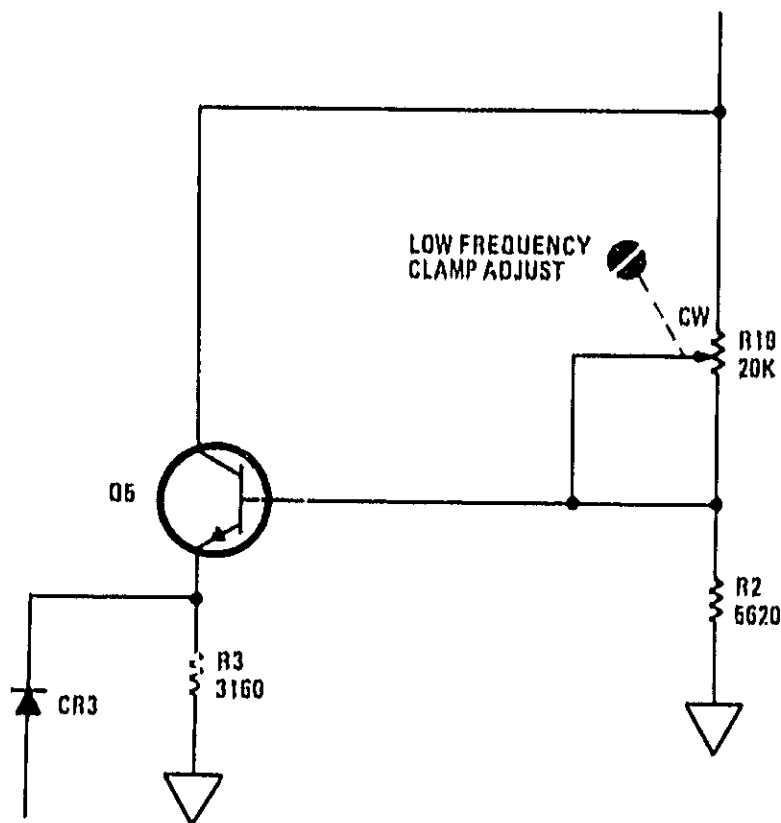


Figure 7-2. (P/O Figure 8-33) 8411A-A6 and A7, Schematic Diagram (CHANGE F)

CHANGE G

Table 1-1:

Change 8411A Input Impedance specification to: 50 Ohms nominal, SWR < 1.5:1, 0.11 to 8.0 GHz; < 2:1, 8.0 to 12.4 GHz; typically increases to a 10:1 SWR, 12.4 to 18 GHz.

Paragraph 4-18:

Under "SPECIFICATION TESTED", change Input Impedance to: 50 Ohms; SWR < 1.5:1, 0.11 to 8.0 GHz; < 2:1, 8.0 to 12.4 GHz.

Change step f to read as follows:

f. SWR meter should indicate (a) at least 12.7 dB below zero dB reference level (or SWR of 1.6) at a frequency of 0.11 to 8.0 GHz, or (b) at least -8.7 dB below zero dB reference level (or SWR of 2.2) at a frequency of 8.0 to 12.4 GHz. (These test limits include ambiguity due to 30 dB directivity in reflection test unit or directional coupler.)

Change step h to read as follows:

h. SWR meter should indicate (a) at least 12.7 dB below zero dB reference level at a frequency of 0.11 to 8.0 GHz, or (b) at least -8.7 dB below zero dB reference level at a frequency of 8.0 to 12.4 GHz. (These test limits include ambiguity due to 30 dB directivity in reflection test unit or directional coupler.)

Table 6-4:

Change 8411A-A1 to HP Part Number 08411-80003; Wideband Sampler Assy. (Ref. channel).

Change second entry for 8411A-A1 to: HP Part Number 5080-0245 (Rebuilt 08411-80003, exchange required).

Change 8411A-A2 to HP Part Number 08411-80004; Wideband Sampler Assy. (Test Channel).

Change second entry for 8411A-A2 to: HP Part Number 5080-0246 (Rebuilt 08411-80004, exchange required).

In the list of callouts for figure 6-4, change item 5 to read: 08411-0011, SHIELD; PREAMP.

In the list of callouts for Figure 6-5, change the following items to read:

Item 24, 08411-80003, Wideband Sampler Assy. (Ref. Channel)
5080-0245, Rebuilt 08411-80003, Requires Exchange.

Item 26, 08411-80004, Wideband Sampler Assy. (Test Channel).
5080-0246, Rebuilt 08411-80004, Requires Exchange.

CHANGE H

Table 6-4:

Add A3R1, HP Part Number 0757-0796, R:FXD MET FLM 82.5 OHM 1% 1/2 W.

Add A3R2, HP Part Number 0757-0198, R:FXD MET FLM 100 OHM 1% 1/2 W.

Delete A3R10 through A3R13.

Figure 8-27:

Replace R10 and R11 in parallel with a single 82.5 Ohm resistor R1.

Replace R12 and R13 in parallel with a single 100 Ohm resistor R2.

CHANGE I

Table 6-4:

In the list of callouts for Figure 6-5, change Item 8 to: HP Part Number 0698-8138, RFXD ALUMINA-CER 20 OHM 10% 0.075W (See #9); Order recommended replacement, 0698-7195.

CHANGE J

Table 6-4:

Delete Z2, HP Part Number 9170-1045 listing.

Change Item 27 to HP Part Number 08411-6006 INTERCONNECT CABLE ASSY; COMPLETE

Change Item 28 to HP Part Number 08411-2022 HOUSING.

Figure 8-33.

Replace Figure 8-33 A7 Schematic Diagram in the manual with Figure 7-3 in this Section.

CHANGE K

Table 6-4

In the listing for Figure 6-5, add to the description of Reference Designator 6: "RECOMMENDED REPLACEMENT"

The coaxial clamp on your instrument may not have suppressor beads. Recommended replacement clamps include a suppressor bead.

CHANGE L

Table 5-1:

Delete 8411A-A7R19 listing.

Table 5-2:

Add 8411A-A7R3; FUNCTION AFFECTED, VTO lower frequency limit; NORMAL RANGE OF VALUES, 10-196Ω; COMPONENT LOCATION FIGURE 8-32; ADJUSTMENT PROCEDURE, Paragraph 5-19.

Paragraph 5-19:

Change step h to read: Set power supply and sweep stability control for $9.4 \text{ Vdc} \pm .02 \text{ Vdc}$. Adjust 8411A-A7R5 (65 MHz ADJUST) for a VTO frequency of $65.0 \text{ MHz} \pm 0.2 \text{ MHz}$. (If $65.0 \text{ MHz} \pm 0.2 \text{ MHz}$ cannot be obtained, remove 8411A-A7R3 to disable the low-frequency clamping action of A7CR4).

Add the following step after step h and reletter the remaining steps: Adjust SWEEP STABILITY control for lowest VTO frequency. The VTO frequency should be $62 \text{ MHz} \pm 1 \text{ MHz}$. If not, select the value of 8411A-A7R3 as follows:

1. Remove A7R3.
2. Adjust SWEEP STABILITY control for VTO frequency below 60 MHz.
3. Select a value of A7R3 that shifts the VTO frequency to $62 \text{ MHz} \pm 1 \text{ MHz}$. (Typical range of values for A7R3 is 10 to 196 Ohms.)

Table 6-4:

Change A7 to HP Part Number 08411-6002.

Delete A7C14, A7C15, and A7C16 listings.

CHANGE L (Cont'd)

Add A7CR4, HP Part Number 1902-0041 DIODE; BREAKDOWN 5.11V 5% 400 MW.

Delete A7CR5, A7CR6, and A7Q5 listings.

Change A7R2 to HP Part Number 0757-0317 R; FXD MET FLM 1.33 K OHM 1% 1/8W.

Change A7R3 to HP Part Number 0757-0401 R; FXD MET FLM 100 OHM 1% 1/8W.

Delete A7R19, A7R20, and A7R21 listings.

Figure 8-32:

Replace Figure 8-32 Lower Half, A7 Parts Location illustration with Figure 7-4 in this Section.

Figure 8-33:

Replace P/O Figure 8-33, A7 Schematic Diagram in the manual with Figure 7-5 in this Section.

CHANGE M**Table 6-4:**

In listing for Figure 6-5, change Item 20 to HP Part No. 2200-0057 SCREW; SST FH POS DR 4-40 x 5/16.

CHANGE N**Table 5-1:**

Delete 8411A-A5R20 listing.

Delete 8411A-A5R21 listing.

Table 5-2:

Add 8411A-A5L1; FUNCTION AFFECTED, Channel phase balance; NORMAL RANGE OF VALUES 3.3 — 4.7 μ H; COMPONENT LOCATION FIGURE 8-29; ADJUSTMENT PROCEDURE, paragraph 5-20.

Add 8411A-A5R8; FUNCTION AFFECTED, Test channel preamplifier gain; NORMAL RANGE OF VALUES, 343-909 Ω ; COMPONENT LOCATION FIGURE 8-29; ADJUSTMENT PROCEDURE, paragraph 5-20.

Add 8411A-A5R19; FUNCTION AFFECTED, Channel phase balance; NORMAL RANGE OF VALUES, 21.5-196 Ω ; COMPONENT LOCATION FIGURE 8-29; ADJUSTMENT PROCEDURE, paragraph 5-20.

Table 6-4:

Change A3R4 and A3R7 to HP Part Number 0698-3396, R; FXD MET FLM 38.3 OHM 1% 1/2 W.

Change A3R5, A3R6, A3R8 and A3R9 to HP Part Number 0698-3392, R; FXD MET FLM 23.7 OHM 1% 1/2 W.

Change A5R8 to HP Part Number 0757-0416 R; FXD MET FLM 511 OHM 1% 1/8 W.

Change A5R19 to HP Part Number 0698-3438 R; FXD MET FLM 147 OHM 1% 1/8 W FACTORY SELECTED PART.

Delete A5R20 and A5R21 listings.

Figure 8-27:

Change A3R5, A3R6, A3R8 and A3R9 to 23.7 ohms.

CHANGE N (Cont'd)

Change A3R4 and A3R7 to 38.3 ohms.

Figure 8-28:

Change upper right box to read: Change the value of A5R8 to 343 ohms (maximum gain). If pre-amplifier gain is still low, check gain through each stage to isolate trouble.

Figure 8-29:

Replace P/O Figure 8-29, A5 Parts Location in the manual with the Figure 7-6 in this Section.

Figure 8-30:

Change A5C13 to 9-35 pF.

Change A5R8 to 511 ohms (typical value).

Change A5R19 to 147 ohms and add asterisk (*).

Delete R20 and R21; replace with shorts.


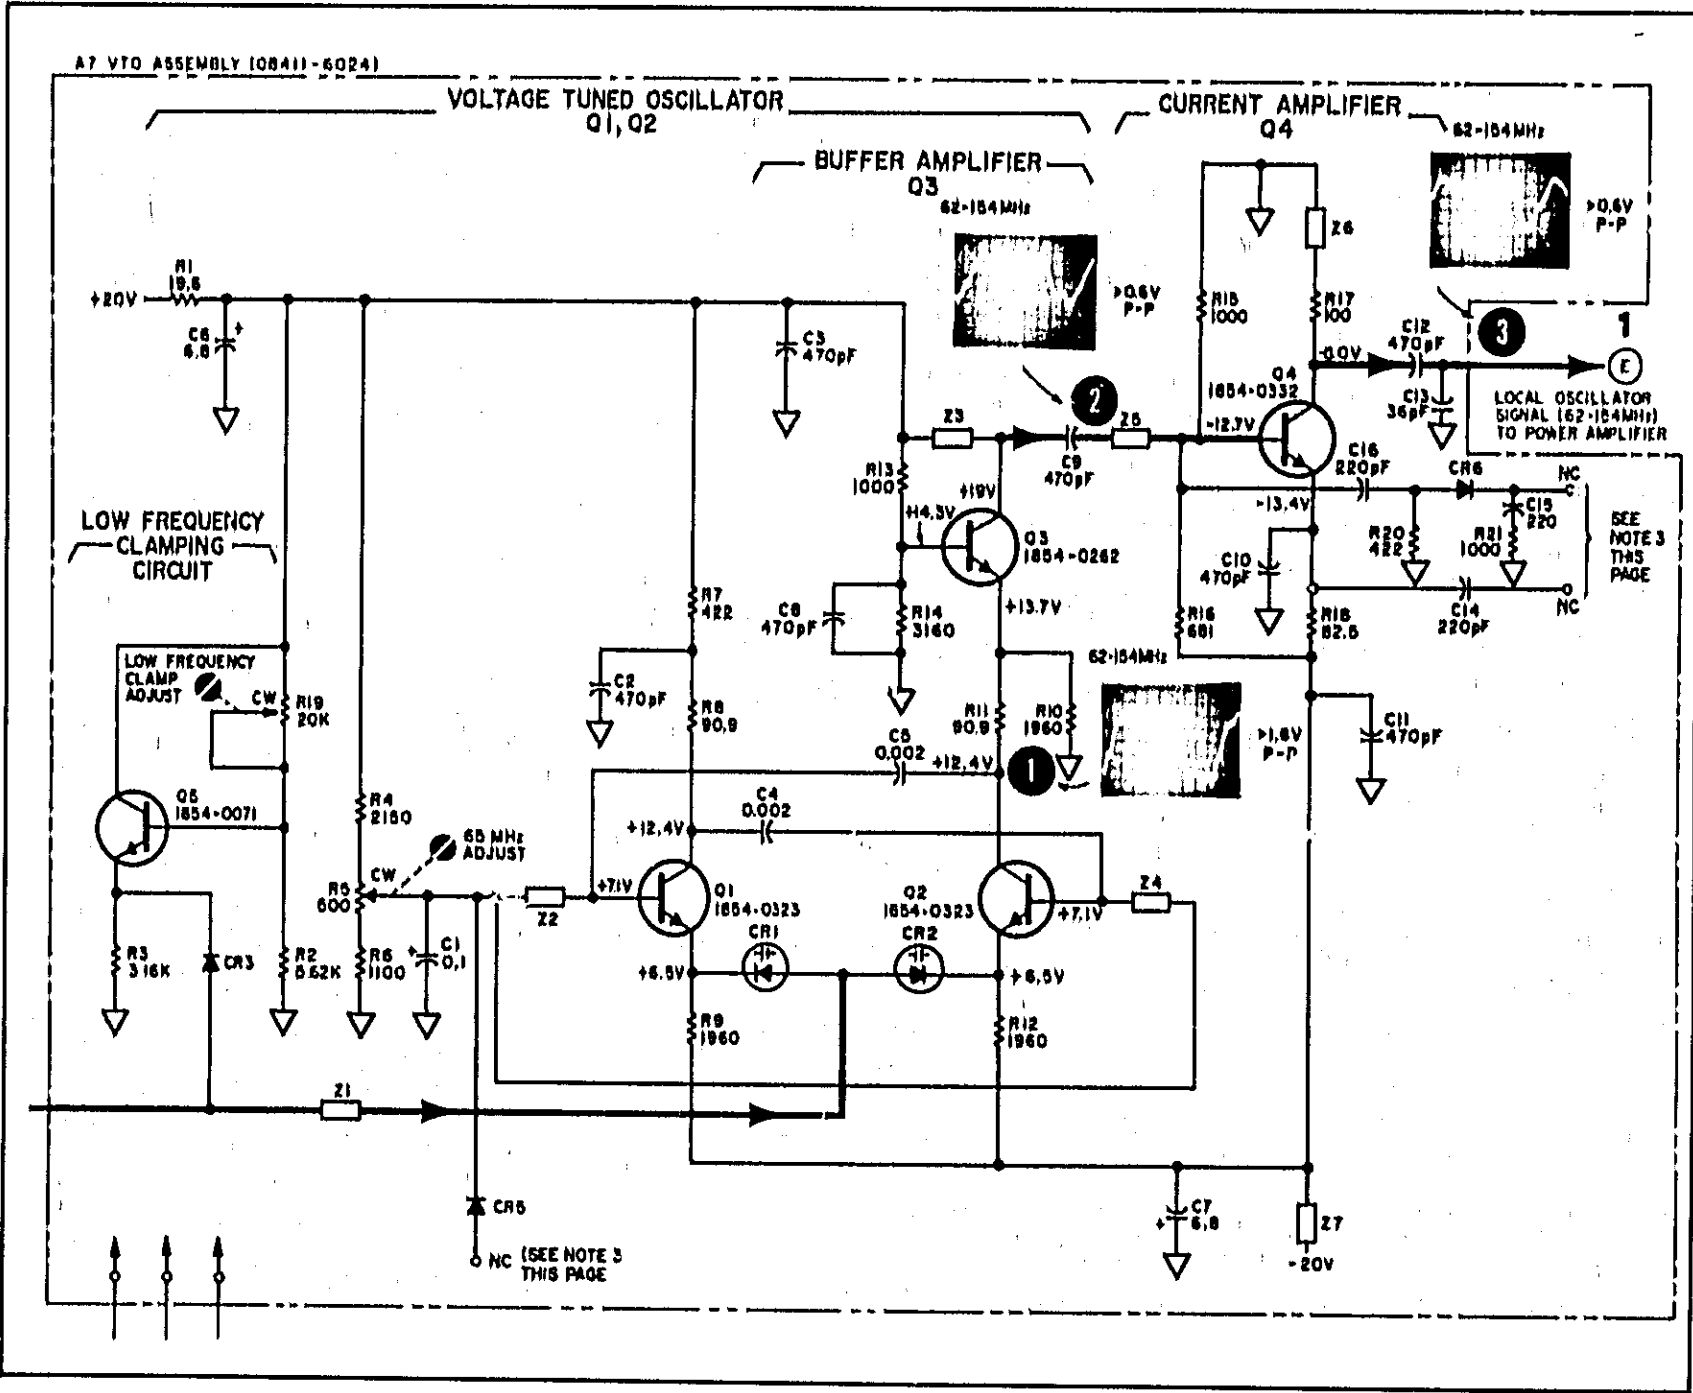


Figure 7-3. (P/O Figure 8-33.) 8411A-A7 Schematic Diagram (Change J)

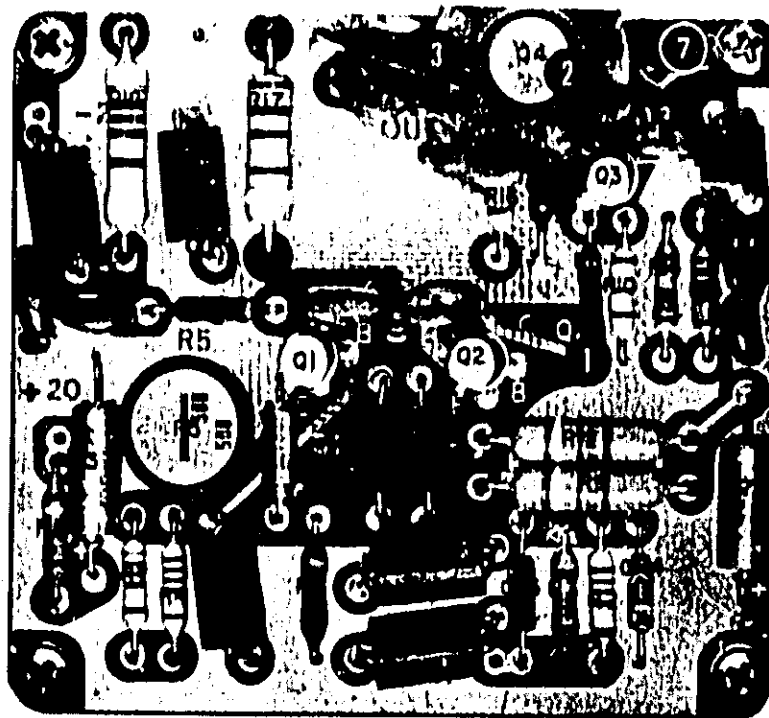

A7

Figure 7-1. (P/O Figure 8-32.) 8411A-A7 Parts Location (Change L)


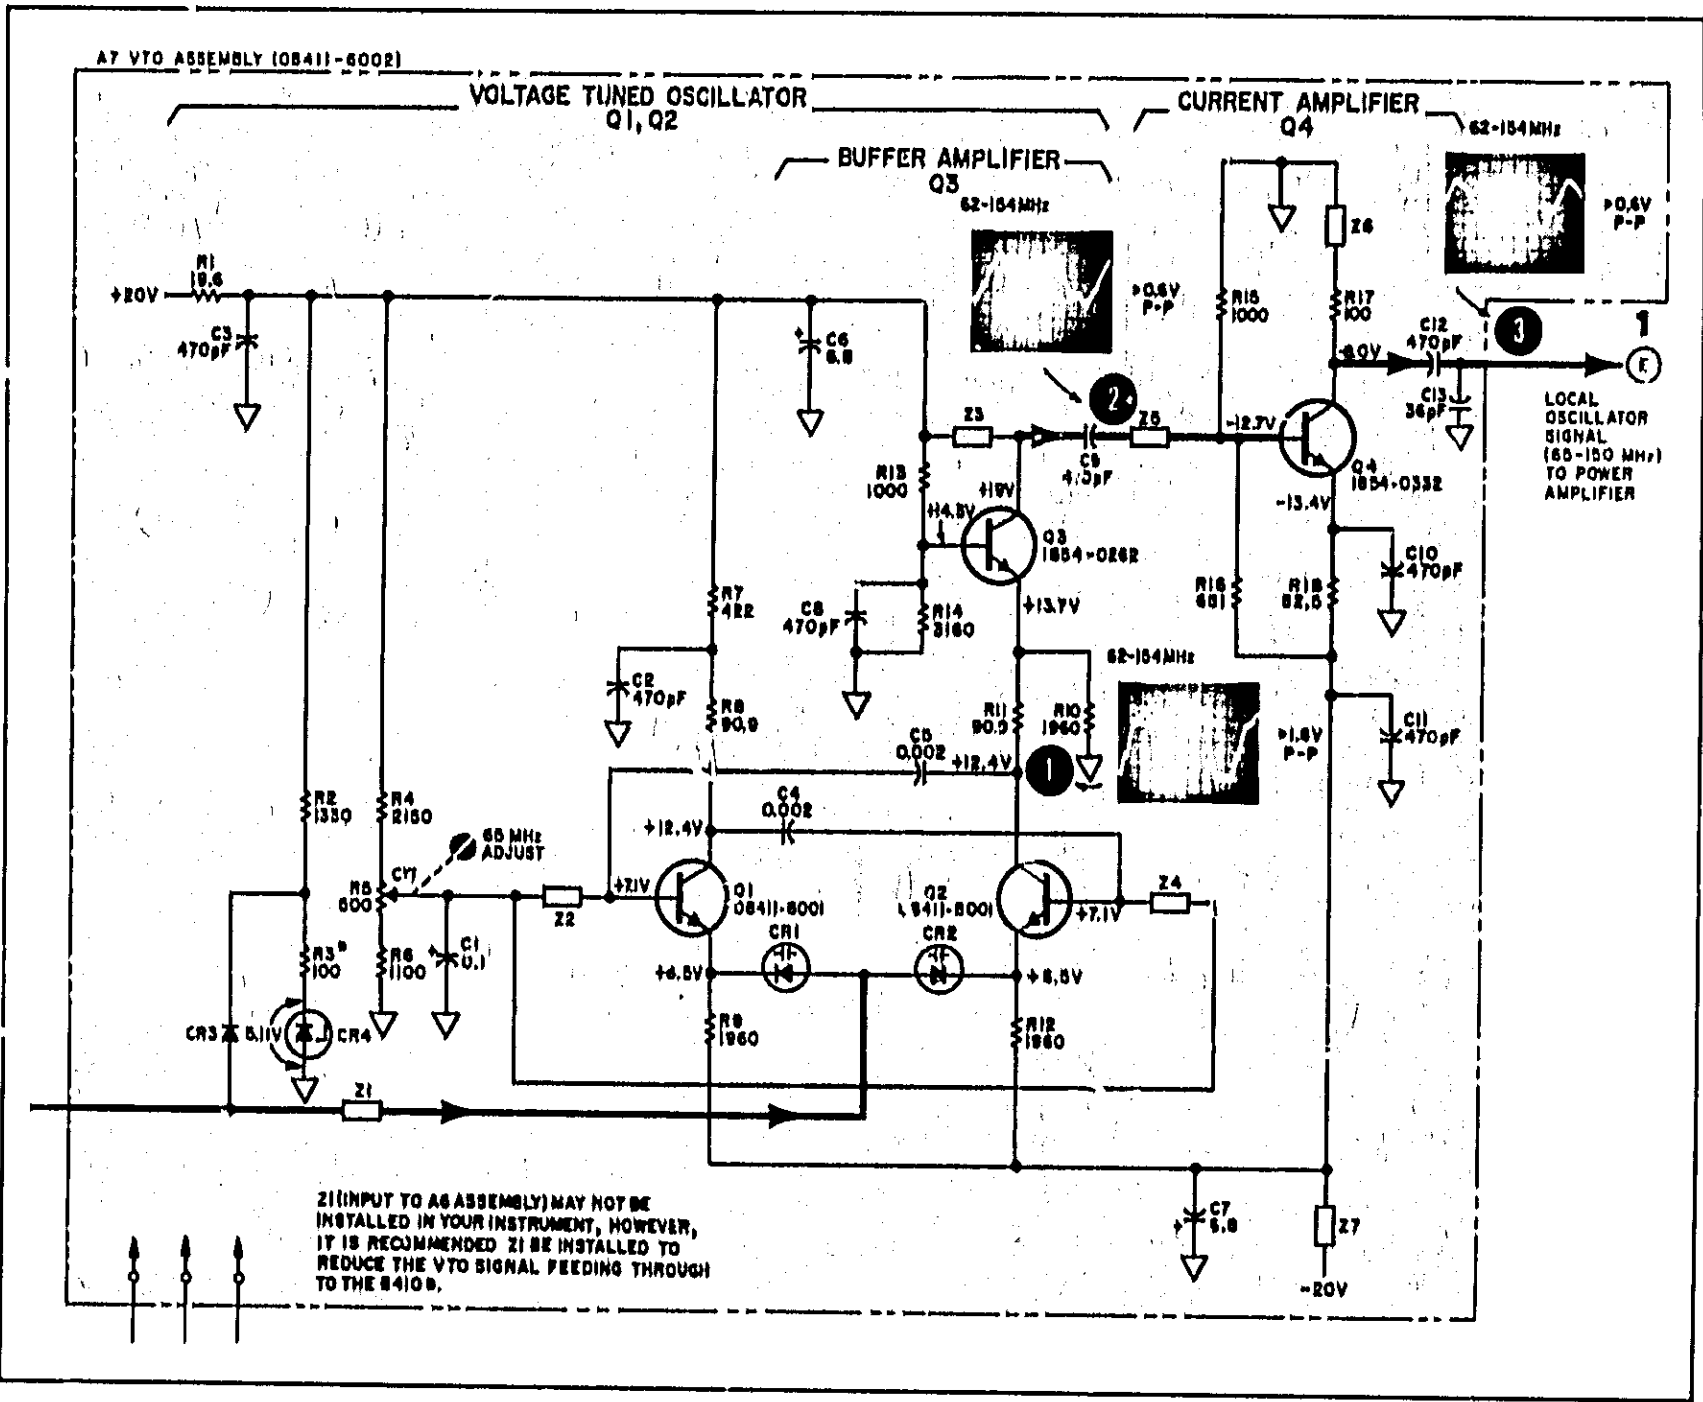


Figure 7-5. (P/O Figure 8-33.) 8411A-A7 Schematic Diagram (Change L)

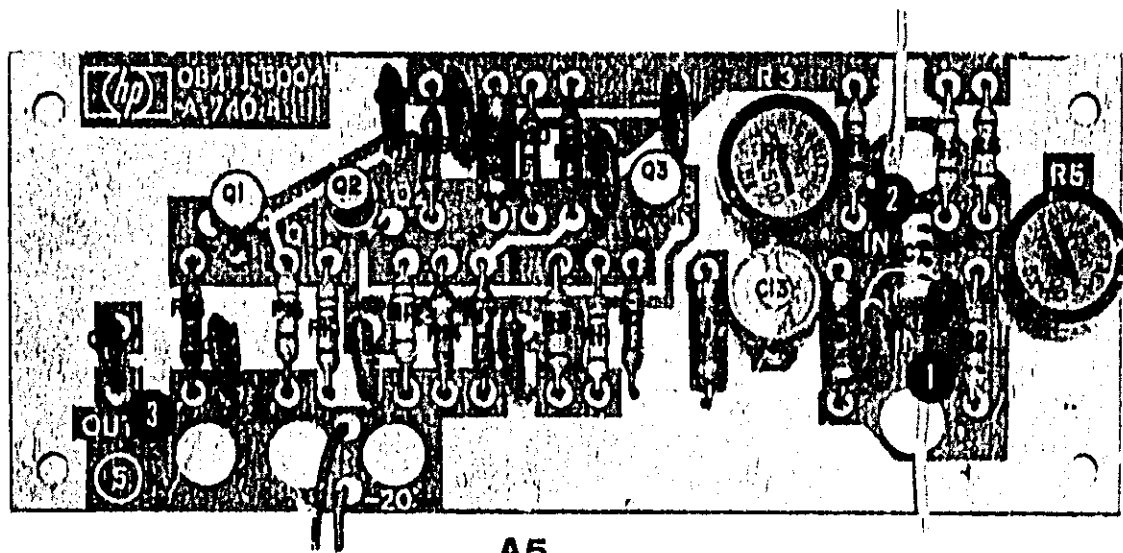

A5

Figure 7-6, (P/O Figure 8-29.) 8411A-A5 Parts Location (Change N)

SERVICE INFORMATION

SECTION VIII SERVICE

8-1. INTRODUCTION

8-2. This section provides instructions for troubleshooting, and repair of the 8410B Network Analyzer and 8411A Harmonic Frequency Converter. A cross reference of a assembly to service sheet number is located on table 8-1.

8-3. MAINTENANCE PRECAUTIONS

WARNING

Any service or adjustment performed with the covers removed should only be performed by qualified service personnel. A shock hazard exists with the covers removed.

STATIC DISCHARGE. The sampling diodes in the 8411A may be damaged by a discharge of static electricity. Momentarily ground and short connections of external equipment prior to making connection to 8411A input connectors.

MAXIMUM INPUT LEVELS. Maximum input at 8411A before damage occurs is 50 mW RF and 3 Volts DC. RF levels above -10 dBm in the test channel and -16 dBm in the reference channel will cause distortion in the 8411A preamplifiers.

SOLDERING ON PRINTED CIRCUITBOARDS. The soldering tool should have a power rating no higher than 40 watts and a tip no wider than 1/8 inch. If these limits are exceeded, the board may be damaged by burning, by lifting the printed circuit, or by spotting.

GROUNDING TRANSISTORS. Do not short-circuit the case of a chassis mounted transistor to the chassis because some transistors have collector internally connected to the case.

MAGNETIC FIELDS. When using 8414A Polar Display plug-in, do not place the 8410B near a sweep generator containing a BWO which has an unshielded permanent magnet or the CRT may be permanently magnetized, causing poor focus. Separate 8414A from any magnetic source by at least two feet.

8-4. LINE VOLTAGE REQUIREMENTS

8-5. During testing, the network analyzer must be connected to a source of power which is 50 to 60 Hz and 100, 120, 220, or 240 Vac $+5\%$ -10% . If adjustment of the dc power supplies is necessary, the network analyzer should be connected through a variable auto transformer to the ac power source. The line voltage at the input of the 8410B may then be adjusted $\pm 10\%$ of nominal (100, 120, 220, or 240 Vac) to check regulator action in the power supply.

8-6. MAINTENANCE AIDS

8-7. Servicing Aids On Printed Circuit Boards

8-8. As shown in Figure 8-1, the servicing aids provided on circuit boards include pry holes, numbered test points, transistor designators, terminal numbers, assembly designators, and assembly stock numbers with number-coded revision information.

8-9. Circuit Board Extender

8-10. A circuit board extender (HP Part No. 08410-60109) is supplied with the 8410B and is stored behind the front panel assembly (Figure 8-15). The extender raises boards clear of the chassis for easier access to the test points, and is designed to work with either 12 or 15 pin circuit boards.

8-11. Printed Circuit Board Removal

CAUTION

Turn off the line voltage before removing, or replacing printed circuit boards. Damage to integrated circuits may occur if power is applied during printed circuit board removal or replacement.

Table 8-1. Service Sheets

SERVICE SHEET & SCHEMATIC	ASSEMBLY NAME	ASSEMBLY NO.	HP PART NO.	PARTS LOCATION FIGURE NO.
1 8-27	Sampler	8411A-A1	08411-80010	8-9
	Sampler	8411A-A2	08411-80011	8-9
	Power Amplifier	8411A-A3	08411-6005	8-26
	Stripline Assembly	8411A Stripline	08411-60029	8-9
	Shaping Amplifier	8411A-A6	08411-6001	8-32
2 8-30	Reference Preamplifier	8411A-A4	08411-6003	8-29
	Test Preamplifier	8411A-A5	08411-6004	8-29
3 8-33	Shaping Amplifier	8411A-A6	08411-6001	8-32
	VTO (Voltage-Tuned Oscillator)	8411A-A7	08411-6024	8-32
4 8-36	Test AGC Amplifier	8410B-A12	08410-6038	8-35
	Reference AGC Amplifier	8410B-A14	08410-6039	8-35
5 8-39	Reference 278 kHz Amplifier	8410B-A16	08410-60062	8-38
6 8-42	20 MHz Oscillator	8410B-A13	08410-6008	8-41
7 8-45	AGC Amplifier	8410B-A15	08410-6040	8-44
8 8-48	0-9 dB Attenuator	8410B-A2	08410-6014	8-20
	0-60 dB Attenuator	8410B-A3	08410-6015	8-20
	Amplitude Attenuator Amplifier	8410B-A11	08410-60073	8-47
9 8-51	20.278 MHz IF Amplifier	8410B-A4	08410-6003	8-50
10 8-54	Phase Detector	8410B-A5	08410-6037	8-53
	20.278 MHz Oscillator	8410B-A6	08410-6009	8-53
11 8-57	VTO DC Amplifier	8410B-A7	08410-6041	8-56
	Search	8410B-A8	08410-3007	8-56
12 8-60	Interconnect	8410B-A10	08410-6049	8-59
	Power Supply (+20V & -20V)	8410B-A10A1	J8410-6050	8-59
13 8-62	Interconnect	8410B-A10	08410-6049	8-59
	Power Supply (-11 Vdc & 175 Vac)	8410B-A10A1	08410-6050	8-59
	Power Line Module	8410B-FL1	0960-0444	8-15
14 8-64	Automatic Control	8410B-A9	08410-60106	8-63
15 8-66	A/D Converter	8410B-A18	08410-60107	8-65
16 8-68	Frequency Range	8410B-A19	08410-60108	8-67
17 8-69	Signal Wiring Diagram	8410B-A1S1	08410-6013	None

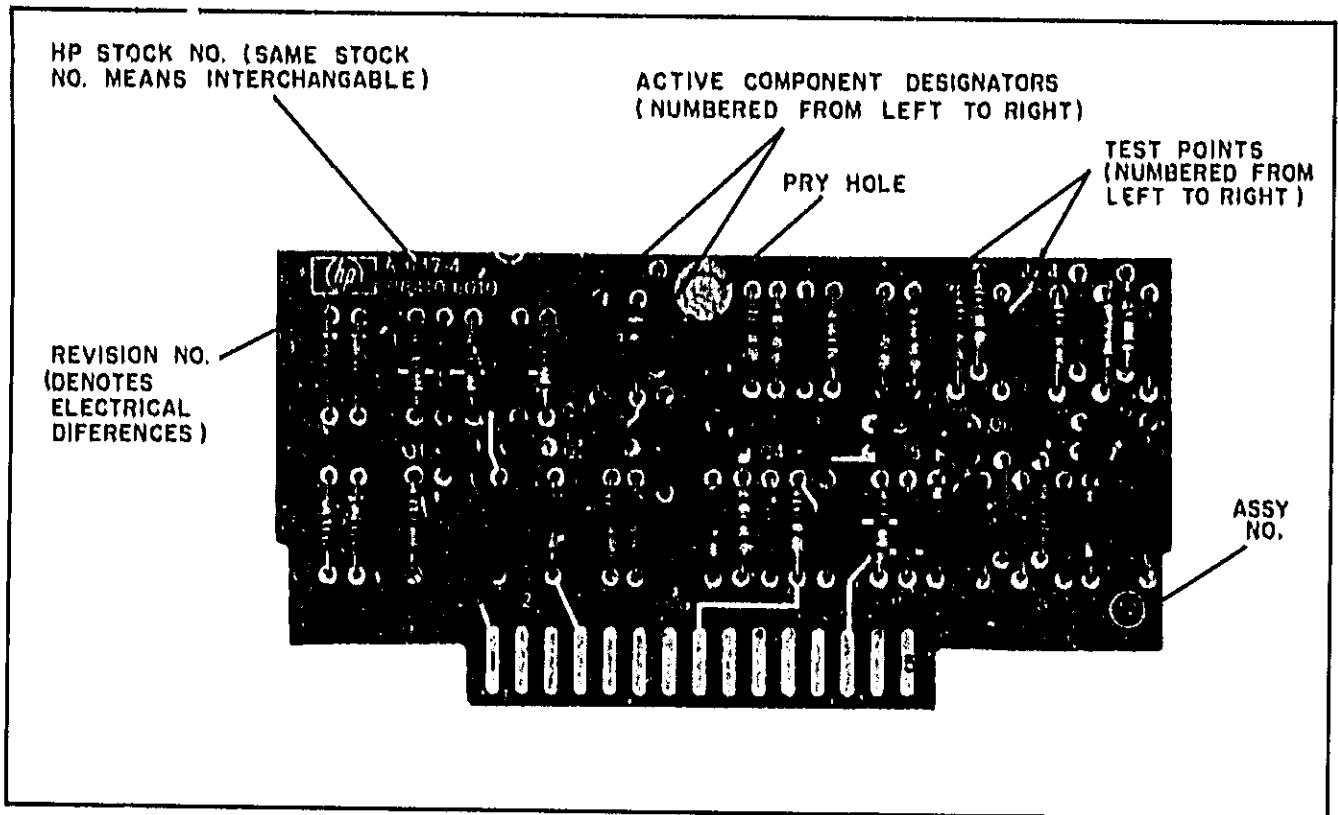


Figure 8-1. Servicing Aids on Circuit Boards

8-12. When removing printed circuit assemblies from the 8410B, care must be taken not to damage the assemblies. A pry hole (Figure 8-1) is located in the top center of each board. To remove the board, insert a soldering aid or screwdriver into the hole and pry against the housing. To prevent bowing the circuit board, apply pressure to the side of the board with the index finger to counteract the sideways pressure of the soldering aid or screwdriver (see Figure 8-2).

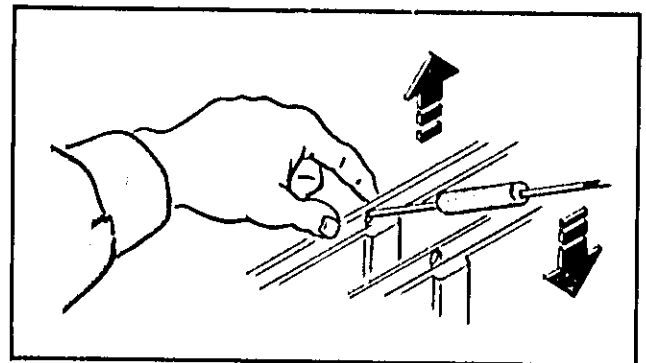


Figure 8-2. Printed Circuit Board Removal

8-13. Test Points

8-14. The 8410B printed circuit assemblies contain test point posts with the test point number designation etched on the board (Figure 8-1). The schematic diagram for each assembly has the corresponding test point shown as a numbered black spot.

8-15. The 8411A printed circuit assemblies do not have test point posts. Test points shown on the schematic diagrams and the corresponding parts location diagram were selected as convenient locations to monitor voltage waveforms and do not indicate test-point post locations.

8-16. TROUBLESHOOTING

8-17. General Procedure

8-18. The troubleshooting procedure is divided into three maintenance levels. The first level of troubleshooting isolates trouble to either the 8410B or 8411A. (See Figure 8-19.) The next level of troubleshooting further isolates trouble to a single printed circuit board, where possible. (See Figure 8-21 and 8-22.) The last level of troubleshooting isolates trouble to a circuit within the printed circuit board. Procedures for this level are located on the page facing the schematic

diagram of each printed circuit board. Normal test point waveforms and voltages used in these procedures are shown on the schematic diagrams and are obtained, using the standard test conditions described in Figure 8-12. Test equipment required for troubleshooting is listed in Table 1-8.

8-19. After a trouble has been located and corrected, either by performing an adjustment procedure or by replacing an assembly or component, the performance test procedures in Section IV should be performed. This ensures that all circuits in the instrument are operating within specifications.

8-20. Transistor In-Circuit Testing

8-21. The common causes of transistor failures are internal short-and open-circuits. In transistor circuit testing, the most important consideration is the transistor base-to-emitter junction. Like the control grid of a vacuum tube, this is the operational control point in the transistor. This junction is essentially a solid-state diode. For the transistor to conduct, the diode must conduct; that is, the diode must be forward biased. As with simple diodes, the forward-bias polarity is determined by the materials forming the junction. Use the transistor symbol on the schematic diagram to determine the bias polarity required to forward-bias the base-emitter junction. The B part of Figure 8-3 shows transistor symbols with terminals labeled. Notice that the emitter arrow points toward the type N material. The other two columns of the illustration compare the biasing required to cause conduction and cut-off in NPN and PNP transistors. If the transistor base-emitter diode (junction) is forward-biased, the transistor saturates. However, if the base-emitter diode is reverse-biased the transistor is cut off (open). The voltage drop across a forward-biased, emitter-base diode varies with transistor collector current. For example, a germanium transistor has a typical forward-bias, base-emitter voltage of 0.2 to 0.3 volt when collector current is 1 to 10 mA, and 0.4 to 0.5 volt when collector current is 10 to 100 mA. In contrast, forward-bias voltage for silicon transistors is about twice that for germanium types; about 0.5 to 0.6 volt when collector current is low, and about 0.8 to 0.9 volt when collector current is high.

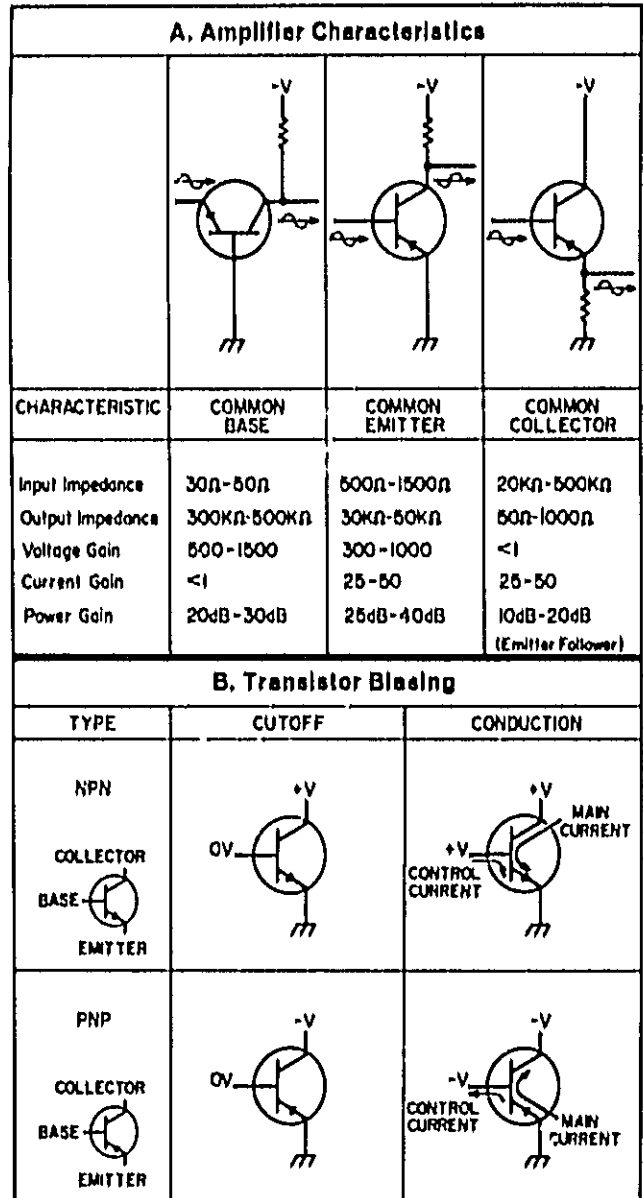


Figure 8-3. Transistor Operation

8-22. Figure 8-3, part A, shows simplified versions of the three basic transistor circuits and gives the characteristics of each. When examining a transistor stage, first determine if the emitter-base diode is biased for conduction (forward-biased) by measuring the voltage difference between emitter and base. When using an electronic voltmeter, do not measure directly between emitter and base; there may be sufficient loop current between the voltmeter leads to damage the transistor. Instead, measure each voltage separately with respect to a voltage

common point (e.g., chassis). If the emitter-base diode is forward-biased, check for amplifier action by short-circuiting base to emitter while observing collector voltage. The short circuit eliminates base-emitter bias and should cause the transistor to stop conducting (cut off). Collector voltage should then shift to near the supply voltage. Any difference is due to leakage current through the transistor and, in general, the smaller this current, the better the transistor. If collector voltage does not change, the transistor has either an emitter-collector short circuit or emitter-base open circuit.

CAUTION

Most ohmmeters can supply enough current or voltage to damage a transistor. Before using an ohmmeter to measure transistor forward or reverse resistance, check its open-circuit voltage and short-circuit current output **ON THE RANGE TO BE USED**. Open-circuit voltage must not exceed 1.5 volts and short-circuit current must be less than 3 mA. See Table 8-3 for safe resistance ranges for some common ohmmeters.

8-23. Transistor Out-of-Circuit Testing

8-24. The two common causes of transistor failure are internal short and open circuits. Remove the transistor from the circuit and use an ohmmeter to measure internal resistance. See Table 8-2 for measurement data.

Table 8-2. Out of Circuit Transistor Testing

Transistor Type		Connect Ohmmeter		Measure Resistance (ohms)
		Pos. lead to	Neg. lead to	
PNP Germanium	Small Signal	emitter	base*	200-250
		emitter	collector	10K-100K
	Power	emitter	base*	30-50
		emitter	collector	several hundred
PNP Silicon	Small Signal	emitter	base*	10K-100K
		emitter	collector	very high (might read open)
NPN Silicon	Small Signal	base	emitter	1K-3K
		collector	emitter	very high (might read open)
	Power	base	emitter	200-1000
		collector	emitter	high, often greater than 1M

*To test for transistor action, add collector-base short. Measured resistance should decrease.

Table 8-3. Ohmmeters Used for Transistor Testing

Ohmmeter	Range(s)	Open Circuit Voltage	Short Circuit Current	Lead	
				Color	Polarity
HP 412A HP 427A	R x 1K R x 10K R x 100K R x 1M R x 10M	1.0V 1.0V 1.0V 1.0V 1.0V	1mA 100µA 10µA 1µA 0.1µA	Red Black	+ -
HP 410C	R x 1K R x 10K R x 100K R x 1M R x 10M	1.3V 1.3V 1.3V 1.3V 1.3V	0.57mA 57µA 5.7µA 0.5µA 0.05µA	Red Black	+ -
Simpson 280	R x 100	1.5V	1mA	Red Black	+ -
Simpson 269	R x 1K	1.5V	0.82mA	Black Red	+ -
Triplet 310	R x 10 R x 100	1.5V 1.5V	750µA 75µA	Varies with Serial Number	

8-25. Standard Circuits

8-26. Diode Limiter or Clipper. The limiter or clipper is a circuit which removes positive or negative peaks from a waveform. It can be used either as a waveform shaping circuit or as a protective device to prevent excessive voltages.

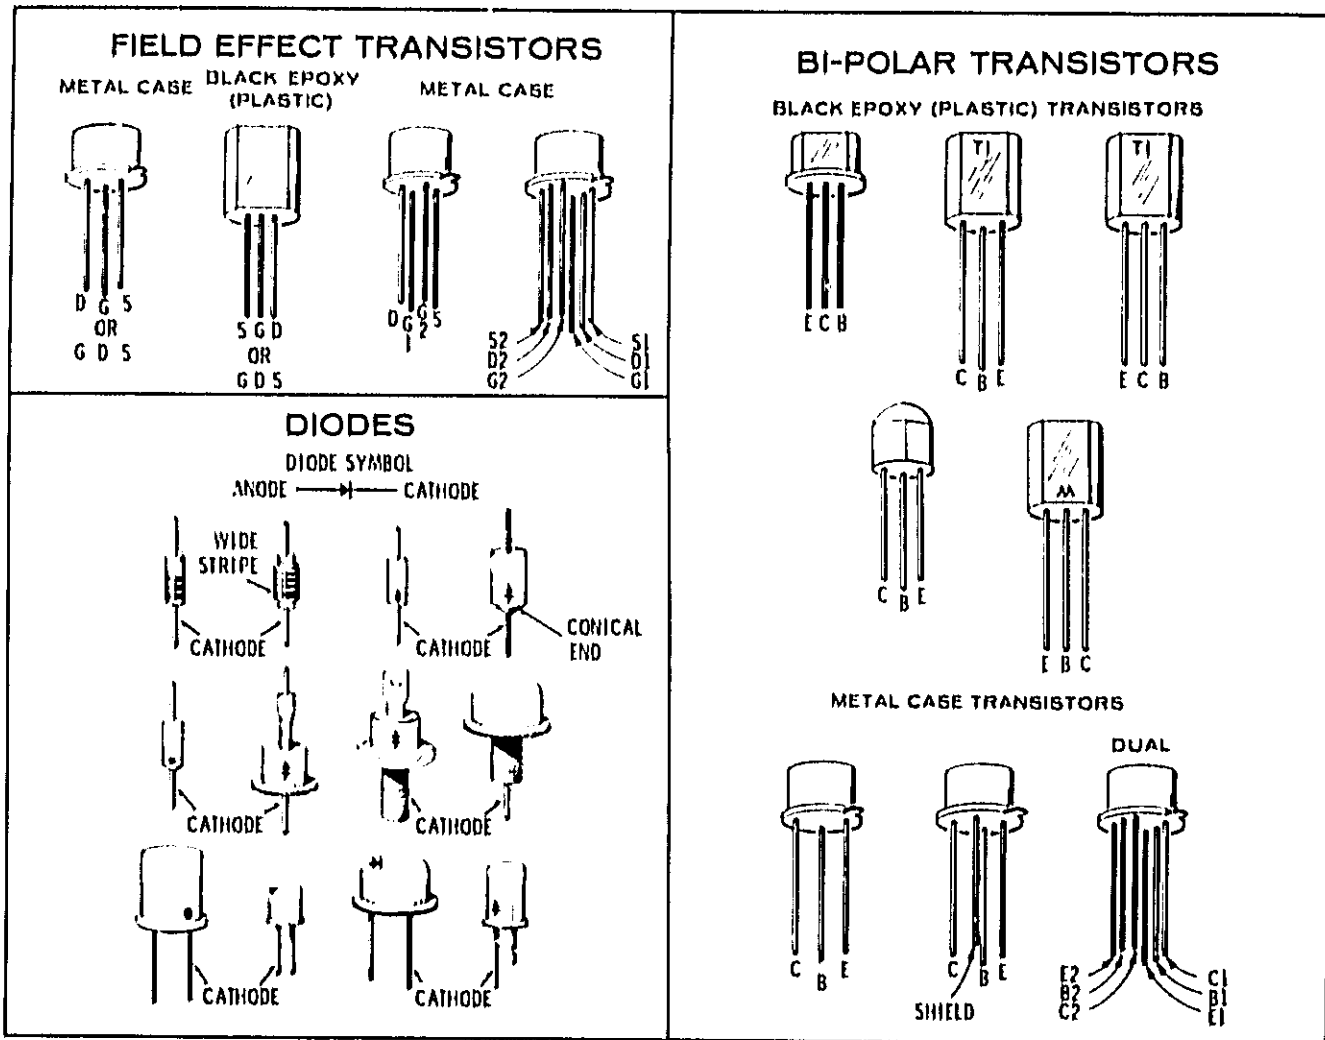


Figure 8-4. Examples of Diode and Transistor Marking Methods

Figure 8-5, Schematic A, shows a limiter which prevents the negative peak of the pulse from exceeding about -0.6 volt. Note that for a conducting silicon diode the cathode voltage is about 0.6 to 0.8 volt more negative than the anode. A typical diode limiter circuit is 8410B—A15CR2.

8-27. Diode Clamp. The clamper is a circuit which establishes either the positive or negative peak of a waveform at a particular de reference voltage; in other words, it provides a definite baseline voltage for the waveform. Figure 8-5, Schematic B, shows a clamper which provides a baseline of about $+20$ volts for a negative pulse. A typical diode clamper circuits is 8410B—A7CR1.

8-28. Diode Regulator. A diode regulator uses either the constant reverse-bias breakdown voltage characteristic of a breakdown diode or the constant forward-bias voltage drop characteristic of a silicon diode. Power supply reference voltages

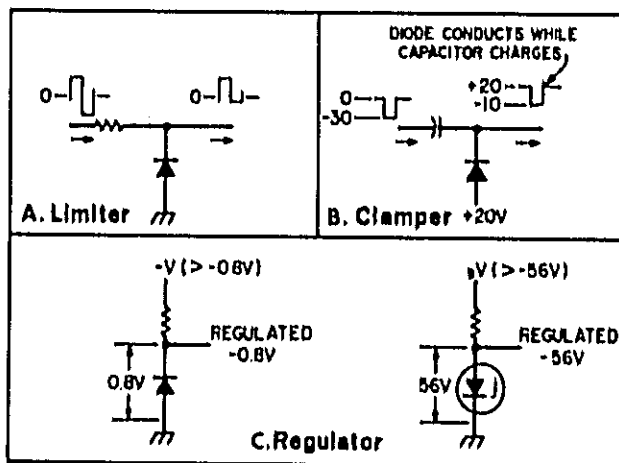


Figure 8-5. Basic Diode Circuits

are generally provided by breakdown diodes which maintain a constant voltage when supplied with a reverse-bias voltage greater than their specified breakdown voltage. Regulated voltages can also be

provided by a forward-biased silicon diode which maintains a constant 0.6- to 0.8-volt drop. Figures 8-5, Schematic C shows connections for both types of diodes. A typical circuit of this type is 8410B—A10VR3.

8-29. Transistor Amplifiers. There are three basic amplifier configurations (Figure 8-3, Part A). These amplifiers may be used alone or in combination to form complex circuits.

8-30. Transistor Biasing and Conduction. In a transistor a small base-to-emitter current controls a large collector-to-emitter current. Typical NPN transistor and PNP transistor operation is shown in Figure 8-3, Part B; indicated current represents conventional flow of positive charges external to the transistor and is not intended to indicate flow of carriers inside the transistor structure. Notice that the effect of emitter-base-collector voltages is totally reversed between NPN and PNP transistors; circuits which are arranged for an NPN transistor usually function normally for a PNP transistor if supply voltages are reversed.

8-31. Trigger Circuit. The trigger circuit (Figure 8-6, Schematic A) is a limiter or squaring circuit which produces an output waveform with very fast rise and fall times. The trigger circuit is similar to the flip-flop except that the RC network in one half is replaced by the input signal. Capacitor C1 bypasses R3 to couple fast changes in voltage at the Q1 collector to the base of Q2. Either Q1 or Q2 can conduct depending on the voltage at the input. Note that there is a slight difference in input voltage (called hysteresis) between switching with a negative-going input (time t_2). A typical circuit of this type is 8410B—A8Q1 and Q2.

8-32. Differential Amplifier. The differential amplifier (Figure 8-6, Schematic B) is composed of two transistor stages coupled together in the emitter circuit. Signals at the output of the two collectors are 180 degrees out of phase. Inverse feedback may be applied to the base of Q2 as shown. As voltage at the emitter of Q1 changes, the emitter of Q2 also changes by the same amount. This changes the base-to-emitter bias of Q2. If a more negative voltage were applied to the base of Q1, current through Q1 would decrease, causing the emitter of Q1 to go in the negative direction. A negative-going voltage at the emitter of Q2 increases the effective forward bias

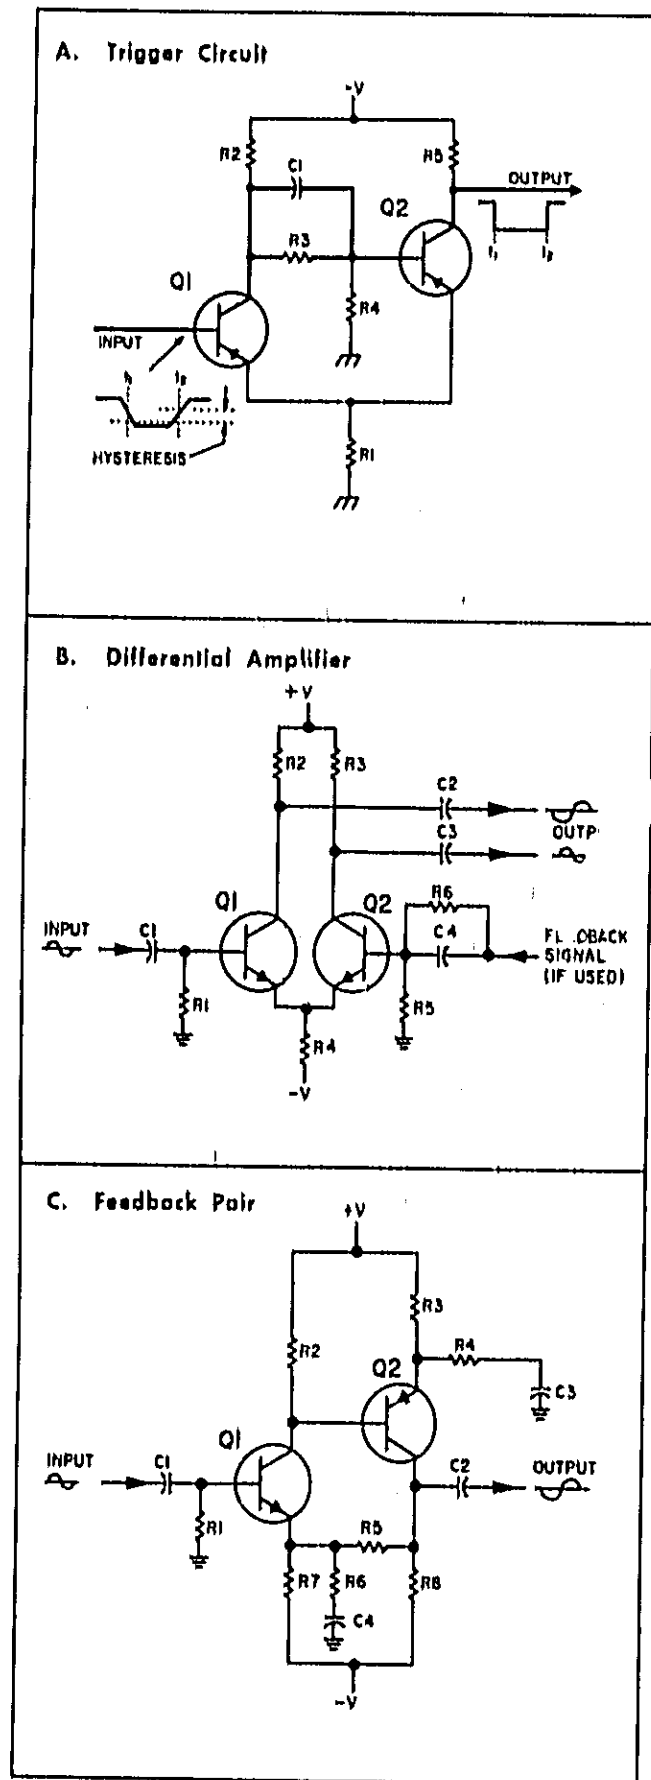


Figure 8-6. Basic Transistor Circuits

between base and emitter of Q2, causing it to conduct more heavily. Therefore, when current through Q1 decreases, current through Q2 increases. A typical circuit of this type is 8410B—A14Q1 and Q2.

8-33. Feedback-Pair Amplifier. The feedback-pair amplifier (Figure 8-6, Schematic C) is a high-gain direct-coupled amplifier stage composed of an NPN and a PNP transistor cascaded together. Feedback of the pair is accomplished by an RC network between the collector of Q2 and the emitter of Q1. Voltage gain of the stage may be calculated by the formula: R5 plus R6 divided by R6. Gain through the amplifier may be changed by selecting either R5 or R6. A typical circuit of this type is 8410B—A4Q5 and Q6.

8-34. Field Effect Transistor (FET). Field effect transistors (Figure 8-7) have three terminals: source, drain, and gate which correspond in function to emitter, collector, and base of junction transistors. Source and drain leads are attached to the same block (channel) of N or P semiconductor material. A band of oppositely doped material around the channel (between the source and drain) is connected to the gate lead.

8-35. In normal FET operation, the gate-source voltage reverse-biases the PN junction, causing an electric field that creates a depletion region in the source-drain channel. In the depletion region the number of available current carriers is reduced as the reverse-biasing voltage increases, making source-drain current a function of gate-source voltage. With the input (gate-source) circuit reverse-biased, the FET presents a high impedance to its signal sources (as compared with the low impedance of the forward-biased junction transistor base-emitter circuit). Because there is no input current, FET's have less noise than junction transistors. Figure 8-7 shows the schematic symbol and biasing for N channel and P channel field effect transistors.

8-36. RECOMMENDED TEST EQUIPMENT

8-37. Test equipment required to maintain the Model 8410B/8411A is listed in Section I. If the equipment listed is not available, equipment that meets the minimum specifications shown may be substituted. (Figure 8-12. Standard Test Setup for Waveforms supplied.)

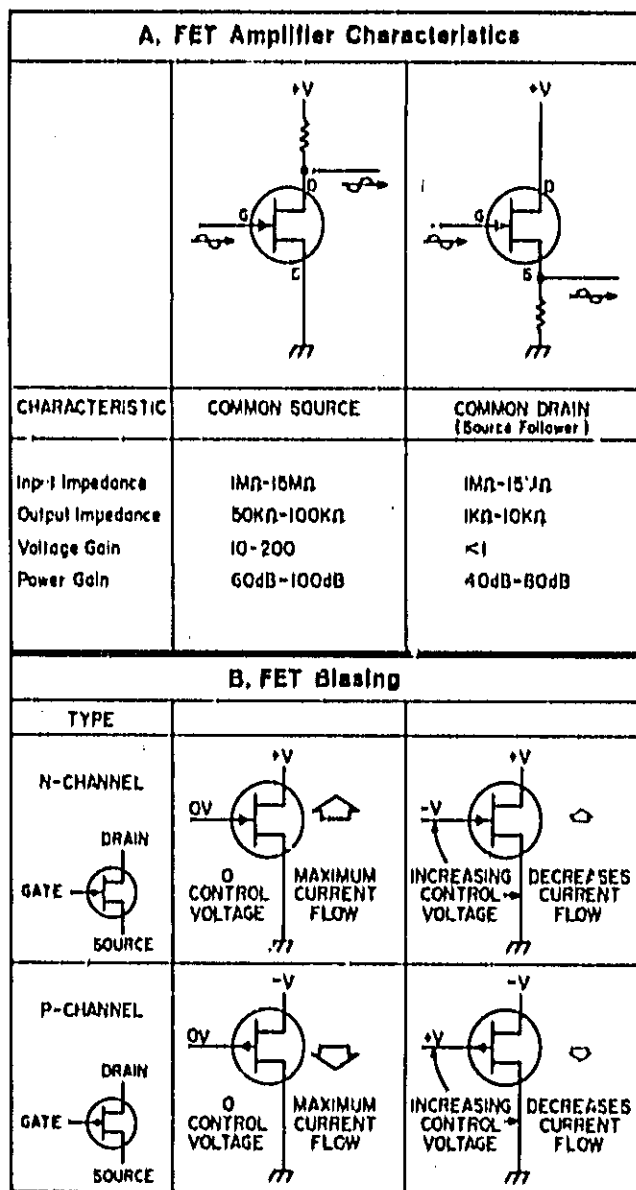


Figure 8-7. Field Effect Transistor Operation

8-38. REPAIR

8-39. Part Location Aids

8-40. The locations of chassis-mounted parts and major assemblies is shown in Figures 8-9 and 8-20. The locations of individual components mounted on a printed circuit board are shown opposite the appropriate schematic diagram. The part reference designator may be found from the schematic diagram.

8-41. Module Exchange Program

8-42. This instrument may be quickly repaired by replacing a defective module with a restored-exchange module. To support the modular repair concept Hewlett-Packard has set up a module exchange program.

8-43. The procedure for using the module exchange program is given in Figure 8-8. When you locate the defective module, order a replacement module through the nearest Hewlett-Packard sales office. The restored-exchange module will be sent immediately directly from a customer service replacement parts center. When you receive the exchange module, return the defective module in the same special carton in which the exchange module was received. DO NOT return a defective module to Hewlett-Packard until you receive the exchange module.

8-44. If you are not going to return the defective module to Hewlett-Packard, or if you are ordering a module for spare parts stock, etc., order a new module using the new module part number listed in Table 6-3 or 6-4.

8-45. The Hewlett-Packard module exchange program allows you to obtain a fully tested and guaranteed restored-exchange module at a reduced price. (The reduced price is contingent upon return of the defective module to Hewlett-Packard.) Assemblies available for module exchange are listed in Table 6-1.

8-46. After Service Product Safety Checks

8-47. Visually inspect interior of instrument for any signs of abnormal internally generated heat, such as discolored printed circuit boards or components, damaged insulation, or evidence of arcing. Determine and remedy cause of any such condition.

8-48. Using a suitable ohmmeter, check resistance from instrument enclosure to ground pin on power cord plug. The reading must be less than one ohm. Flex the power cord while making this measurement to determine whether intermittent discontinuities exist. Check resistance from instrument enclosure to line and neutral (tied together) with the line switch ON and the power source disconnected. The minimum acceptable resistance is 2 megohms. Replace any component which results in failure to meet this minimum.

8-49. Check line fuse to verify that a correctly rated fuse is installed.

8-50. Special Installation Instructions

8-51. Replacement of certain components in the 8410B and 8411A requires special procedures to prevent damage to parts and to complete proper installation. Components which require special procedures are the following:

- a. Cable 8411A-W1.
- b. Samplers 8411A-A1 and A2.
- c. Power Amplifier 8411A-A3.
- d. 8411A Stripline.
- e. Step Generator Diode 8411A-CR1.
- f. Connector 8410B-J1.

8-52. 8411A Cable W1, HP Part No. 08411-6013. HP Part No. 08411-6013 includes a kit which contains additional parts required to install the cable.

Parts Included in the Cable Replacement Kit

Qty	Description	HP Part No.
1	Cable Assembly	08411-6013
3	Coax Feed-thru	08411-2017
1	Service Note	P-08411-6013

To replace cable W1 perform the following:



- a. Preparation of 8411A.
 - 1. Cut off old wires and coaxial leads where they enter the 8411A casting (inside).
 - 2. Remove boot and old cable.
- b. Installaion of Cable

NOTE


New cable has braid pulled over wires and coaxial leads. Braid is pointed to allow easy installation into 8411A.

- 1. Carefully insert cable (with clamp-washer and bolt installed on cable) into 8411A casting hole.


The module exchange program described here is a fast, efficient, economical method of keeping your Hewlett-Packard instrument in service.

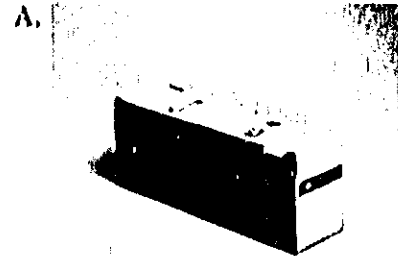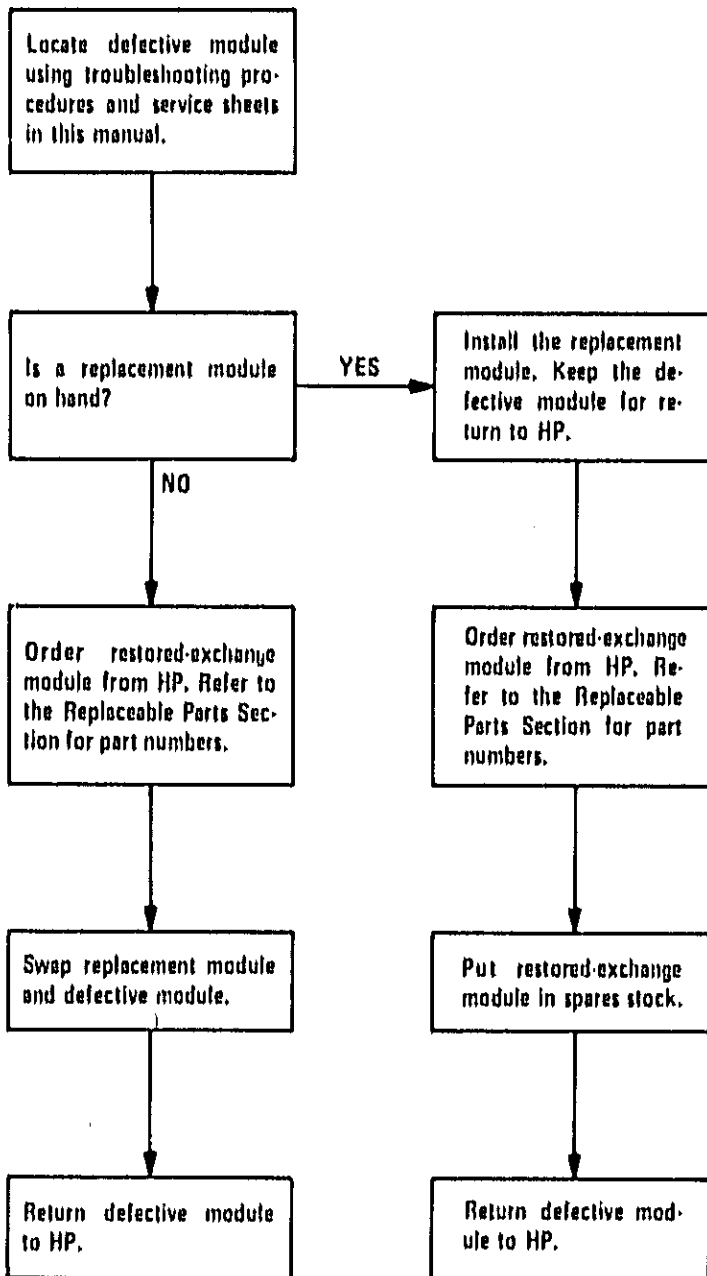

Restored-exchange modules are shipped individually in boxes like this. In addition to the circuit module, the box contains:
 Module repair report
 Return address label
 Tape for resealing box

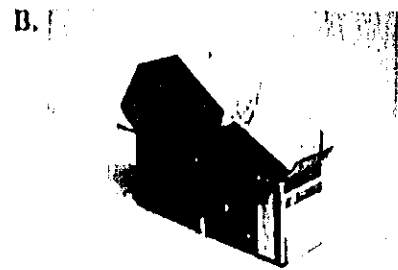

Open box carefully - it will be used to return defective module to HP. Complete repair report. Place it and defective module in box. Be sure to remove enclosed return address label.

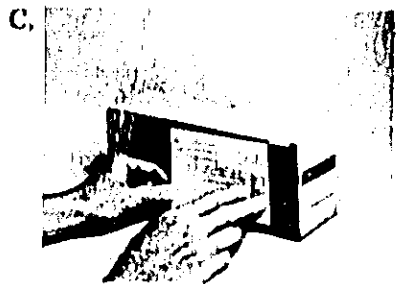

Seal box with tape provided. Inside U.S.A.*, stick preprinted return address label over label already on box, and return box to HP. Outside U.S.A., do not use address label; instead, address box to the nearest HP office.

*HP pays postage on boxes mailed in U.S.A.

Figure 8-8. Module Exchange Procedure

2. When three to four inches of braided cable are inside casting, cut braid away from cable at a point about 1/4 inch from clamp-washer.

NOTE

Clamp-washer must be firmly against cable jacket.

3. Flare braid over clamp-washer and trim at largest diameter shoulder of clamp-washer.
4. Carefully insert cable with clampwasher as far as possible into casting.
5. Rotate cable until black wire is uppermost.

NOTE

Boot must be tightened enough to cut rubber washer.

6. Hold wires firmly in place while moving boot against casting and tighten in place.
7. One at a time remove the old unshielded color-coded wires in the 8411A and replace with same color-coded wires from new cable. Insert white wire with red strip thru hole in casting. This wire will be connected later.
8. Remove old white coaxial cable and install center conductor with ferrite beads and shield of new white coaxial line.
9. Loosen mounting screws of 8411A-A4 circuit board and disconnect center conductor of red hole.
10. Remove old red coaxial lead and old metal feed-thru from casting wall.
11. Insert new red coaxial lead through first casting hole.

NOTE

Before installing new metal feed-thru in second casting wall, red coaxial leadwire should be installed and shield should be soldered to get sufficient heat on solder joint. Center conductor dielectric is teflon and will not be damaged by soldering heat applied to metal feed-thru.

12. Put center conductor lead through metal feed-thru. Extend shield over the new metal feed-thru and solder shield to feed-thru.
13. Install metal feed-through in second casting wall and tighten in place with nut from original feed-thru.
14. Tighten mounting screws of 8411A-A4 circuit board and connect conductor of red coaxial lead.
15. Using above procedure, steps 8 thru 14, install blue coaxial lead in other casting wall and connect to 8411A-A5.
16. Turn 8411A over, remove A7 Assy mounting screws and carefully lift end of A7 Assy closest to cable end of 8411A to expose wires under the assembly.

NOTE

The brown coax cable and white wire with red stripe are used in automatic systems only. For standard systems they may be cut off where they enter the 8411A; however, the old cable must be removed to prevent ground loop problems. If the brown coax is to be connected the outer conductor (shield) between the circuit board and feed-thru will be re-installed on the new center conductor.

17. Unsolder brown coax center conductor and shield from A7 Assy and cut off exposed center conductor to prevent damage to shield when removing center conductor.

18. Remove feed-thru retaining nut, feed-thru and old center conductor from casting.
19. Put new center conductor lead thru metal feed-thru. Extend shield over new metal feed-thru and solder shield to feed-thru.
20. Insert center conductor and feed-thru in casting. Carefully insert center conductor thru old outer conductor, install outer conductor ground lug and feed-thru retaining nut on feed-thru and tighten nut.
21. Connect center conductor and outer conductor to A7 Assembly.
22. Replace old white wire with red stripe with wire from new cable.
23. Replace A7 Assembly mounting screws.
2. Remove the two Pozidrive screws (20) holding the cover (21) located behind the APC-7 connector. Remove the cover and the parts under the cover, noting the order of removal.
3. Remove clip-on leads from both sides of sampler (24) and push leads into hole in casting.

NOTE

When plastic stripline cover, Figure 8-8, Item 1, is removed, stop recovery diode (12), rubber gasket, Mylar shim (13), and pellet resistor (14) are loose and should be removed to prevent loss.

4. Remove metal screws (3 and 4) from plastic stripline cover (1) and remove cover.
5. Remove mixer coax clamps (6), ferrite bead, and two metal screws (10) from end section of stripline board.
6. Unsolder one end of stripline jumper (5) and remove end section stripline board.
7. Remove the four Pozidrive screws (25) holding the sampler in place and lift sampler from casting.

8-53. Sampler Assemblies 8411A-A1 and A2.

To replace sampler, perform the following:

a. HANDLING PRECAUTIONS.

1. When attaching leads to the diode posts exert as little pressure as possible. Excessive pressure will break the diode.
2. Do not allow the sampler to rest on the diode posts.
3. The sampler diodes are sensitive to transients. When connecting leads to diode posts, always (a) connect the ground lead first, (b) discharge any energy stored in the other lead by grounding it, and (c) make connection to diode post.
4. Diodes may be damaged if placed in presence of large electrostatic fields.

b. REMOVAL PROCEDURE.

1. Remove APC-7 connector (Figure 8-9, Items 18 and 19) using spanner wrench, HP Stock Number 5060-0237 (supplied in Accessory Kit 11587A and APC-7 Connector Tool Kit 11591A).

c. SAMPLER DIODE REPLACEMENT

CAUTION

The top diode (CR2) must NEVER be removed. If this diode is removed and the bottom diode (CR1) is still in position, the springloaded action of the bottom diode (CR1) will permanently damage the sampler stripline. The top diode (CR2) is shimmed using the proper thickness of spacer(s) so the diode just makes contact with the sampler stripline. This can only be done properly by using a microscope. Also note that two diode clips are used for CR2. If CR2 is defective, the entire sampler should be replaced.

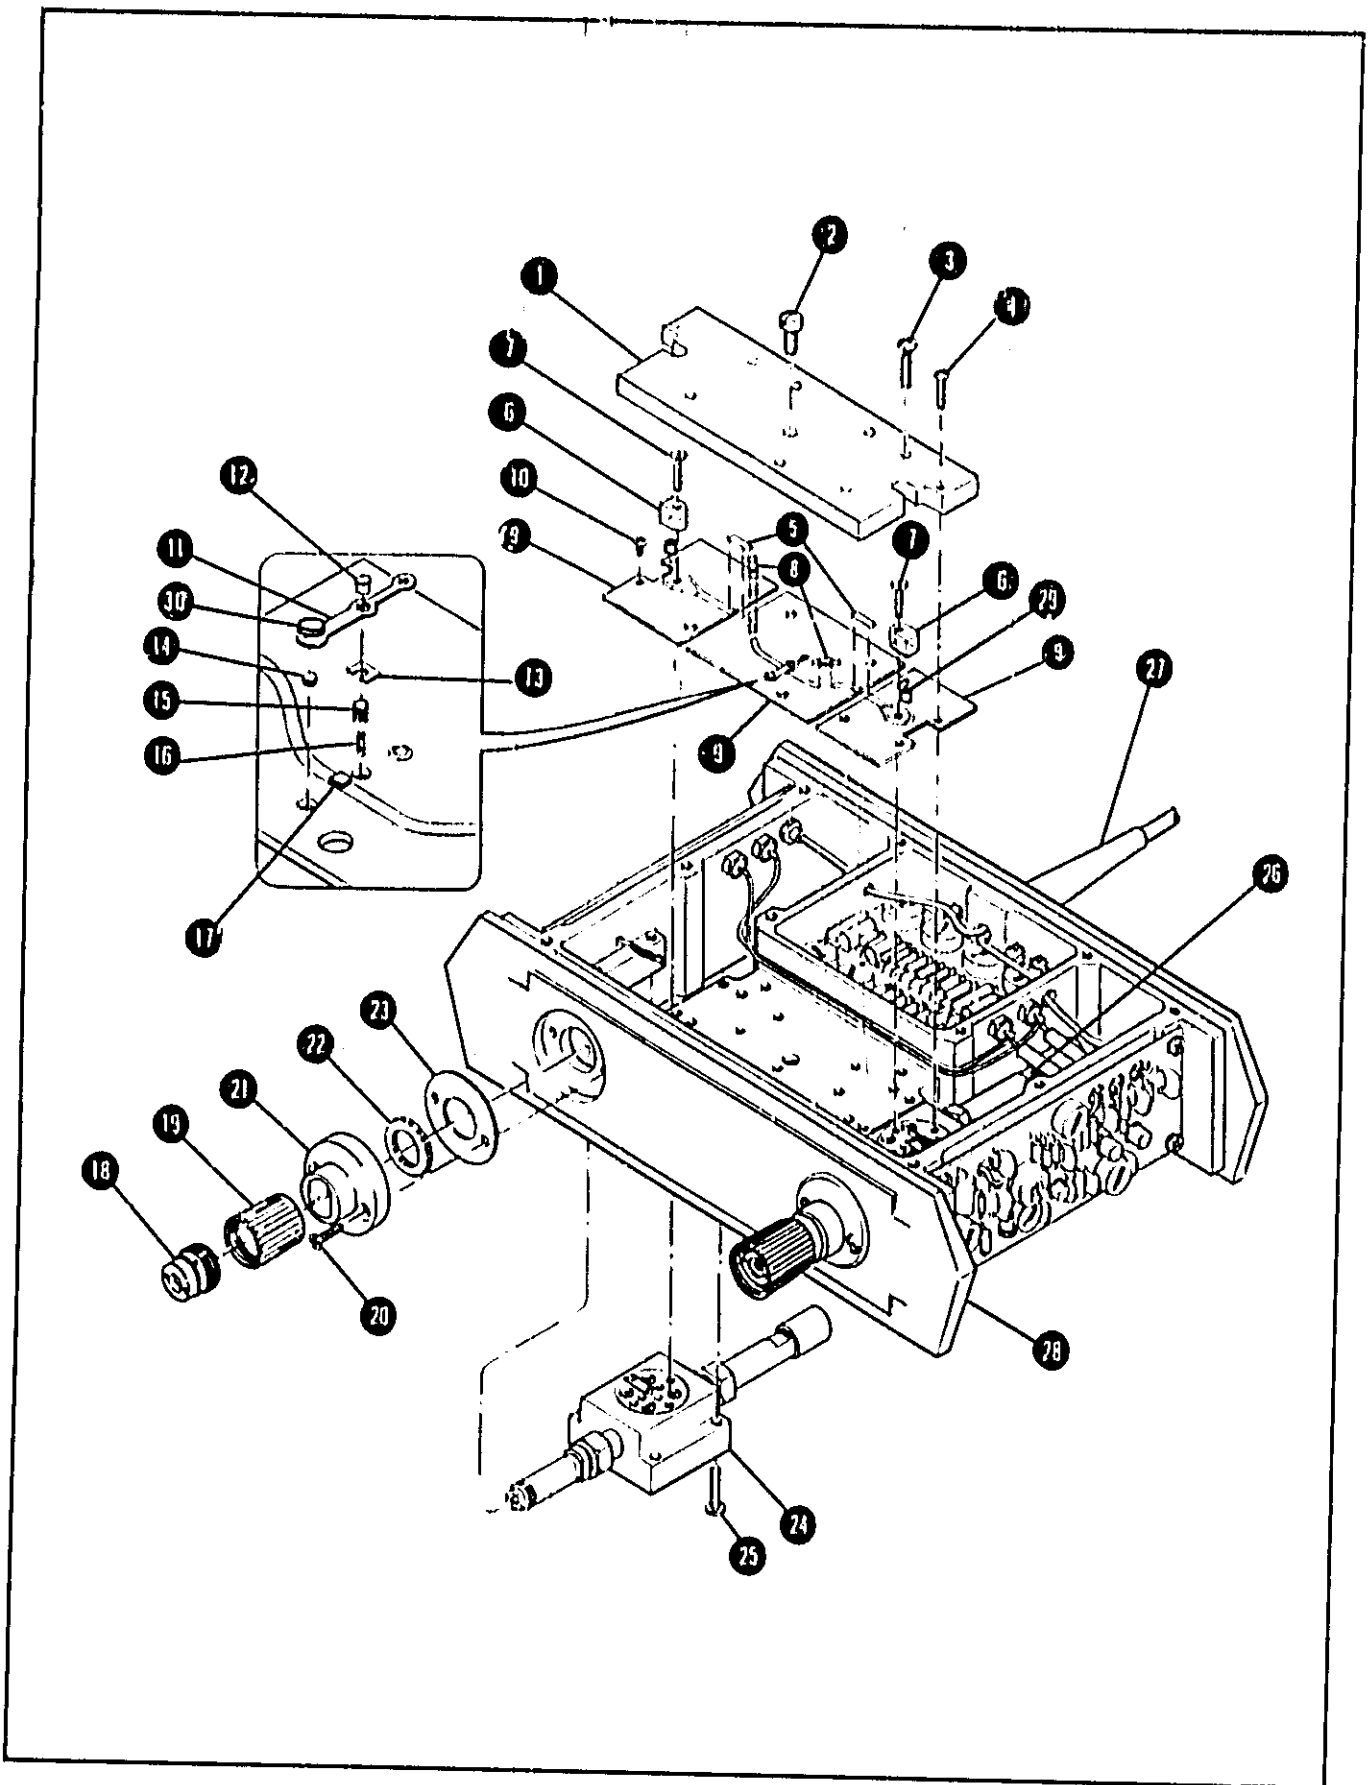


Figure 8-9. 8411A Exploded View

BOTTOM DIODE REPLACEMENT

1. Carefully loosen retaining screw (0520-0155) on bottom cap of sampler to loosen bottom diode clip (0510-0939). (See cutaway drawing.)
2. Remove screw, flat washer, diode clip, bottom diode (CR1), and spring washer from sampler housing.
3. Reinstall spring washer, new bottom diode, diode clip, flat washer, and retaining screw, then tighten screw.

d. INSTALLATION PROCEDURE

1. Insert new sampler into casting and install the four Pozidrive screws (25) to hold sampler in place. Do not tighten screws.
2. Install cover (21) and other parts removed in Removal Instructions, Step b-2, in reverse order of removal. Tighten the two Pozidrive screws (20) evenly.
3. Install the APC-7 connector (18 and 19).

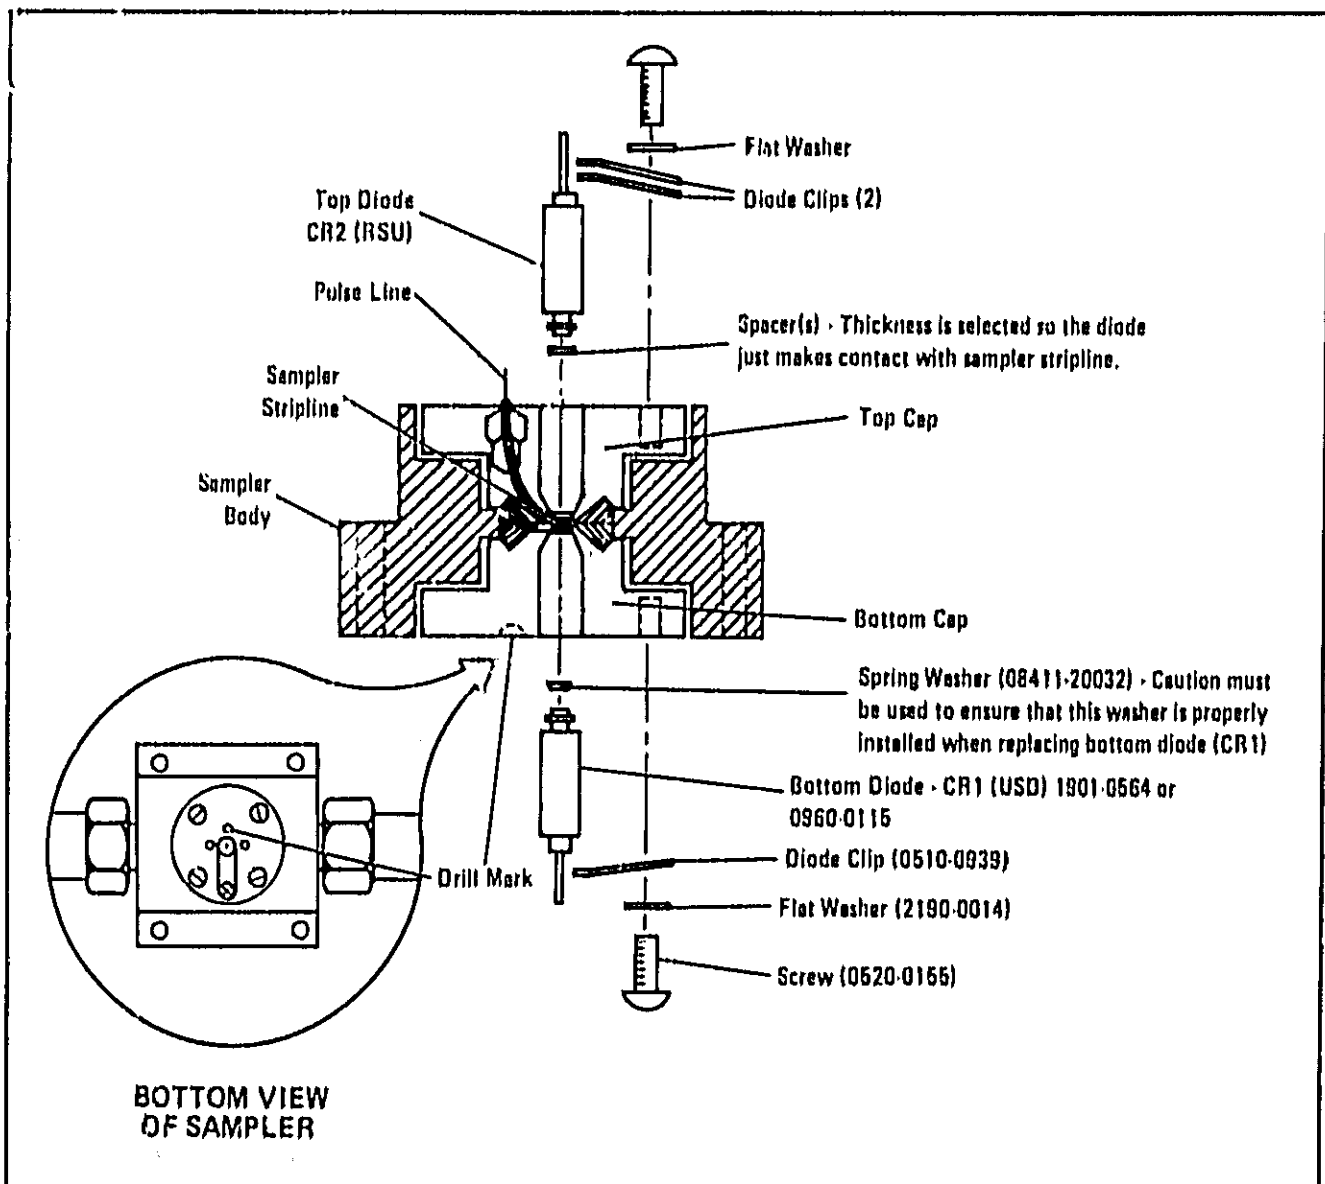


Figure 8-10. Sampler Diode Replacement

4. Align the sampler mechanically so that the distance from center to center of the two APC-7 connectors is 4.750 inches. Tighten the four screws (25) to secure the sampler. To check mechanical alignment of the sampler, connect the 8411A to an 8740A, 8741A, or 8742A.

CAUTION

Center conductor will break with excessive bending.

5. Insert 0.005-inch-diameter center conductor of sampler drive coax through hole in end section of stripline.
6. Install the two metal screws (10) holding the end section of stripline in place. Do not tighten screws.

NOTE

Use a microscope with vertical illuminator to center the hole over the outer conductor of the sampler drive coax.

7. Carefully center the 0.018-inch-diameter hole in the stripline over the outer conductor of the sampler drive coax and tighten the two metal screws (10) to secure the end section of the stripline.
8. Bend center conductor of drive coax to place it along center of stripline.
9. Carefully install plastic clamp (6), ferrite bead, and tighten screw (7).
10. Resolder stripline jumper (5) with as little solder as possible.
11. Install step-recovery diode (12), Mylar spacers (13), rubber gasket, and pellet resistor (14) if removed.
12. Install plastic stripline cover (1).
13. Ground each clip of clip-on leads to casting, then connect clip-on leads to each side of sampler.

14. Perform adjustment procedures, Paragraph 5-20 and 5-22, then the Performance Tests in Section IV.

8-54. Power Amplifier Assembly 8411A-A3.

To replace power amplifier, perform the following:

a. POWER AMPLIFIER REMOVAL.

1. Remove six Pozidrive screws from base of power amplifier.
2. Turn the 8411A upsidedown and remove plastic stripline cover (Figure 8-9, Item 1).
3. Remove step generator diode (12) and Mylar shim (13) under diode.

NOTE

Apply minimum amount of heat to avoid damage to stripline.

4. Unsolder connection on stripline from step generator to power amplifier.
5. Disconnect leads and remove power amplifier assembly from casting.

b. POWER AMPLIFIER INSTALLATION.

1. Clean solder from hole in stripline board (Figures 8-9, Item 9).
2. Place the power amplifier assembly in the casting.
3. Install and tighten the six Pozidrive screws in the base of the power amplifier.
4. Solder the power amplifier connection to the stripline board. (Do not add protective coating.)
5. Reinstall step generator diode (12) and Mylar shim (13).
6. Remove plastic screw (2) from the plastic stripline cover (1), and install cover.

7. Install plastic screw (2) in stripline cover (1).
8. Reconnect all leads to the power amplifier.
9. Adjust 8411A-A6R14 (power amplifier bias adjust). See adjustment procedure in Paragraph 5-20.
10. Check alignment of 8411A tuning voltage shaping amplifier, Paragraph 5-21.

8-55. Step Generator Diode 8411A-CR1.

To replace step generator, perform the following:

- a. Remove plastic stripline cover (Figure 8-9, Item 1).
- b. Remove step generator diode (12).
- c. Install new diode, with Mylar shim (13) positioned as shown in Figure 8-9.
- d. Remove plastic screw (2) from the plastic stripline cover (1) and replace cover.

CAUTION

Overtightening plastic screw (2) may damage stripline capacitor C1.

- e. Insert plastic screw (2) in stripline cover (1). Tighten only until finger tight.
- f. Check alignment of 8411A Tuning Voltage Shaping Amplifier, Paragraph 5-21.

8-56. Stripline in 8411A. To replace stripline, perform the following:

- a. Remove metal screws from plastic stripline cover (Figure 8-9, Items 3 and 4) and remove cover.
- b. Remove step-recovery diode (12) and Mylar shim (13) under diode.
- c. To replace stripline end section:
 1. Remove plastic mixer coax clamp (6) and two metal screws (10) from end section of stripline.

2. Unsolder one end of stripline jumper (5) and remove end section of stripline.
3. Insert 0.005-inch-diameter center conductor of drive coax through hole in end section of strip-line.

CAUTION

Center conductor will break with excessive bending.

4. Insert the two metal screws (10) to hold the end section of stripline in place. Do not tighten screws.

NOTE

Use a microscope with vertical illuminator to center the hole over the outer conductor of the drive coax.

5. Carefully center the 0.013-inch-diameter hole in the stripline over the outer conductor of the drive coax and tighten the two metal screws (10) to secure the end section of the stripline.
 6. Bend center conductor of drive coax, placing it along center of stripline.
 7. Carefully install plastic mixer coax clamp (6) and tighten screw (7).
- d. To replace stripline center section:
1. Unsolder one end of each stripline jumper (5) and stripline resistors.
 2. Unsolder power amplifier connection to stripline and remove step-recovery diode contact (15 and 16) and stripline center section.
 3. Remove pellet resistor (14) from old stripline center section and install on new stripline center section.
 4. Insert new stripline center section and hold in place temporarily with three short screws (3).
 5. Resolder stripline resistors (8). (Do not add protective coating.)

- e. Install step recovery diode (12) with Mylar shim (13) under diode.
- f. Remove plastic screw (2) from stripline cover (1).
- g. Install plastic stripline cover. Note silicone rubber pad over pellet resistor.
- h. Insert plastic screw (2) in stripline cover (1).
- i. Refer to pin adjustment procedures, Paragraphs 5-20 and 5-22, then the Performance Tests in Section IV.
- 2. Force the pin out the rear of the connector.
- 3. Insert the new pin (with cable attached) into the rear of the connector and force the pin into the connector until it is locked into position.
- b. To replace the connector body of 8410B-J1, perform the following procedure:
 - 1. Remove knurled nut on front panel side of connector.

8-57. Input Connector 8410B-J1. To replace connector J1, perform the following:

- a. To replace an individual cable to 8410B-J1, perform the following procedure:
 - 1. Insert Burndy¹ Tool RX20-25V2 into Connector J1 over pin of cable to be replaced.

¹Burndy Corporation, Norwalk, Connecticut

8-58. PRINTED CIRCUIT BOARDS

8-59. The printed circuit boards in the 8410B and 8411A are of the plated through type consisting of metallic conductors bonded to both sides of insulating material. Soldering can be done from either side of the board with equally good results.

Table 8-4 list required tools and materials. Following are recommendations and precautions pertinent to printed circuit repair work.

Table 8-4. Printed Circuit Soldering Equipment

Item	Use	Specification	Item Recommended
Soldering Tool	Soldering Unsoldering	Wattage ratings: 37.5 Tip Temp: 750 - 800° F Tip Size: 1/8" OD	Ungar #776 Handle with Ungar #1237 Heating Unit
Soldering Tip general purpose	Soldering Unsoldering	Shape: chisel Size: 1/8"	Ungar #PL113
De-soldering aid	Unsoldering multi- connection components (e.g., sockets)	Suction device to remove molten solder from connection	Soldapullit by the Edsyn Company, Arleta, California
Resin (flux) solvent	Remove excess flux from soldered area before application of protective coating	Must not dissolve etched circuit base board material or conductor bonding agent	Freon Acetone Lacquer Thinner Isopropyl Alcohol (100% dry)
Solder	Component replacement Circuit board repair Wiring	Resin (flux) core, high tin content (60/40 tin/lead), 18 gauge (SWG) preferred	
Protective Coating	Contamination, corrosion protection after soldering	Good electrical insulation, corrosion-prevention properties	GE Dri-Film 88 General Electric Co. Silicone Products Div. Waterford, N. Y.

- a. Avoid unnecessary component substitution; it can result in damage to the circuit board and adjacent components.
- b. Do not use a high-power soldering iron. Excessive heat may lift a conductor or damage the board.
- c. Use a suction device (Table 8-4) or wooden toothpick to remove solder from component mounting holes. **DO NOT USE A SHARP METAL OBJECT SUCH AS AN AWL OR TWIST DRILL FOR THIS PURPOSE. SHARP OBJECTS MAY DAMAGE THE PLATED-THROUGH CONDUCTOR.**
- d. After soldering, remove excess flux from the soldered area and apply a protective coating to prevent contamination and corrosion. See Table 8-4 for recommendations.

8-60. A broken or burned section of conductor can be repaired by bridging the damaged section with a length of tinned copper wire. Allow adequate overlap and remove any varnish from etched conductor before soldering wire into place.

8-61. Component Replacement. A general procedure for replacing a component is as follows:

- a. Remove defective component from circuit board.
- b. Remove solder from mounting holes using a suction desoldering aid (Table 8-4) or wooden toothpick.
- c. Shape leads of replacement component to match mounting hole spacing.
- d. Insert component leads into mounting holes and position component as original was positioned. **DO NOT FORCE LEADS OF REPLACEMENT COMPONENT INTO MOUNTING HOLES.** Sharp lead ends may damage plated-through conductor.

NOTE

Axial lead components, such as resistors and tubular capacitors, can be replaced without unsoldering. Clip leads near body of

defective component, remove component and straighten leads left in board. Wrap leads of replacement component one turn around original leads. Solder wrapped connection and clip off excess lead.

8-62. Transistor Replacement. A general procedure for replacing a transistor is as follows:

- a. Do not apply excessive heat. See Table 8-4 for soldering tool specifications.
- b. Use a heat sink such as pliers or hemostat between transistor body and hot soldering iron.
- c. When installing a replacement transistor, ensure sufficient lead length to dissipate heat of soldering by maintaining about the same length of exposed lead as used for original transistor.

8-63. Diode Replacement. Solid state diodes are in many physical forms. This sometimes results in confusion as to which lead or connection is for the cathode (negative) or anode (positive), since not all diodes are marked with the standard symbols. Figure 8-4 shows examples of some diode marking methods. If doubt exists as to polarity, an ohmmeter may be used to determine the proper connection. It is necessary to know the polarity of the ohms lead with respect to the common lead for the ohmmeter used. Ohms lead polarities for some common ohmmeters are shown in Table 8-4. When the ohmmeter indicates the least diode resistance, the cathode of the diode is connected to the ohmmeter lead which is negative with respect to the other lead.

NOTE

Diode replacement instructions are the same as those for transistor replacement.

8-64. SCHEMATIC DIAGRAMS.

8-65. The schematic diagrams in this section represent the circuits electrically. They are not wiring diagrams, though wire colors are given when practical.

8-66. The circuits are arranged according to signal flow; consequently, some switch and circuit

assemblies may be shown in part on more than one diagram. If so, the reference designation is preceded by P/O, for "Part Of", and is followed by a notation of the number of parts into which the assembly has been divided.

8-67. Service Sheet numbers are used to cross reference connections between schematics. A list of the service sheets and the assemblies shown on the drawings is listed in Table 8-1.

8-68. Some of the general information obtainable from the schematic diagrams is shown in

Figure 8-11. Notes and explanations of symbols pertaining to all the diagrams are contained in Figure 8-12. Figure 8-12 also contains the test setup and measurement conditions required to obtain the normal test point waveforms and voltages noted on the schematic diagrams. Notes about specific components, circuits, or conditions are given on the diagram to which they apply.

8-69. As an aid to finding components and assemblies in the set of diagrams, each diagram has a box labelled Reference Designations that contains all the reference designations appearing on the diagram.

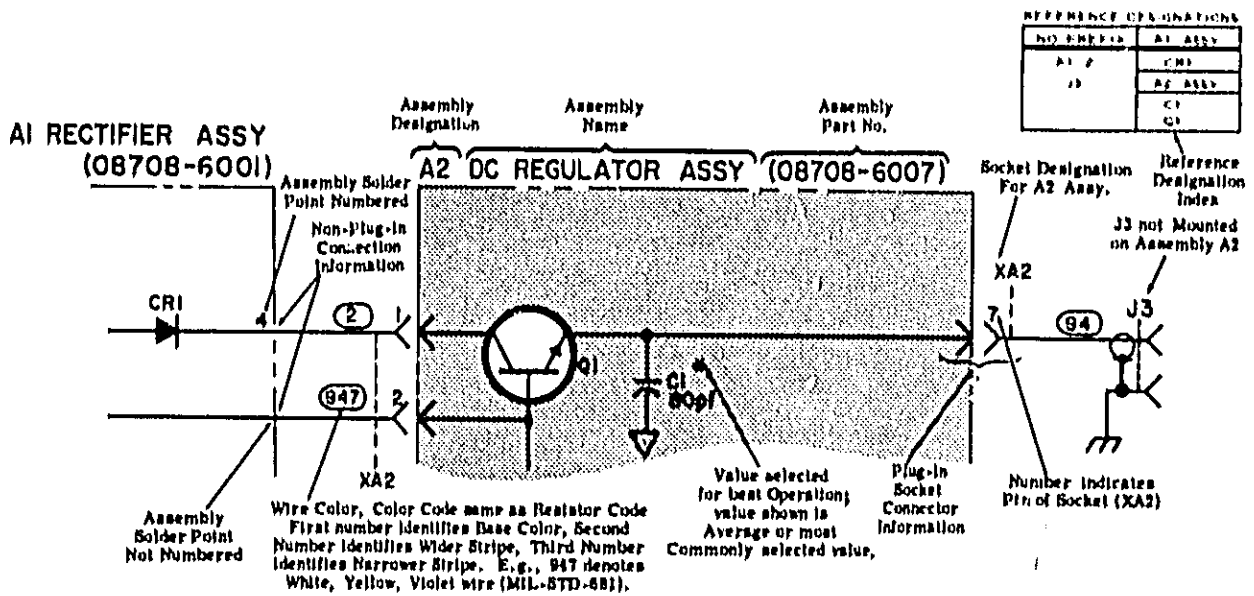


Figure 8-11. General Information on Schematic Diagrams





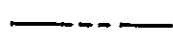
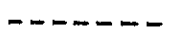
1. Resistance is in ohms and capacitance is in microfarads unless otherwise noted.
2. P/O = part of.
3. *Asterisk denotes a factory-selected value. Value shown is typical. Capacitors may be omitted or resistors jumpered.
4.  Screwdriver adjustment.
-  Panel control.
5.  Encloses front panel designation.
-  Encloses rear panel designation.
6.  Circuit assembly borderline.
-  Other assembly borderline.

Figure 8-12. Schematic Diagram Notes (Sheet 1 of 3)

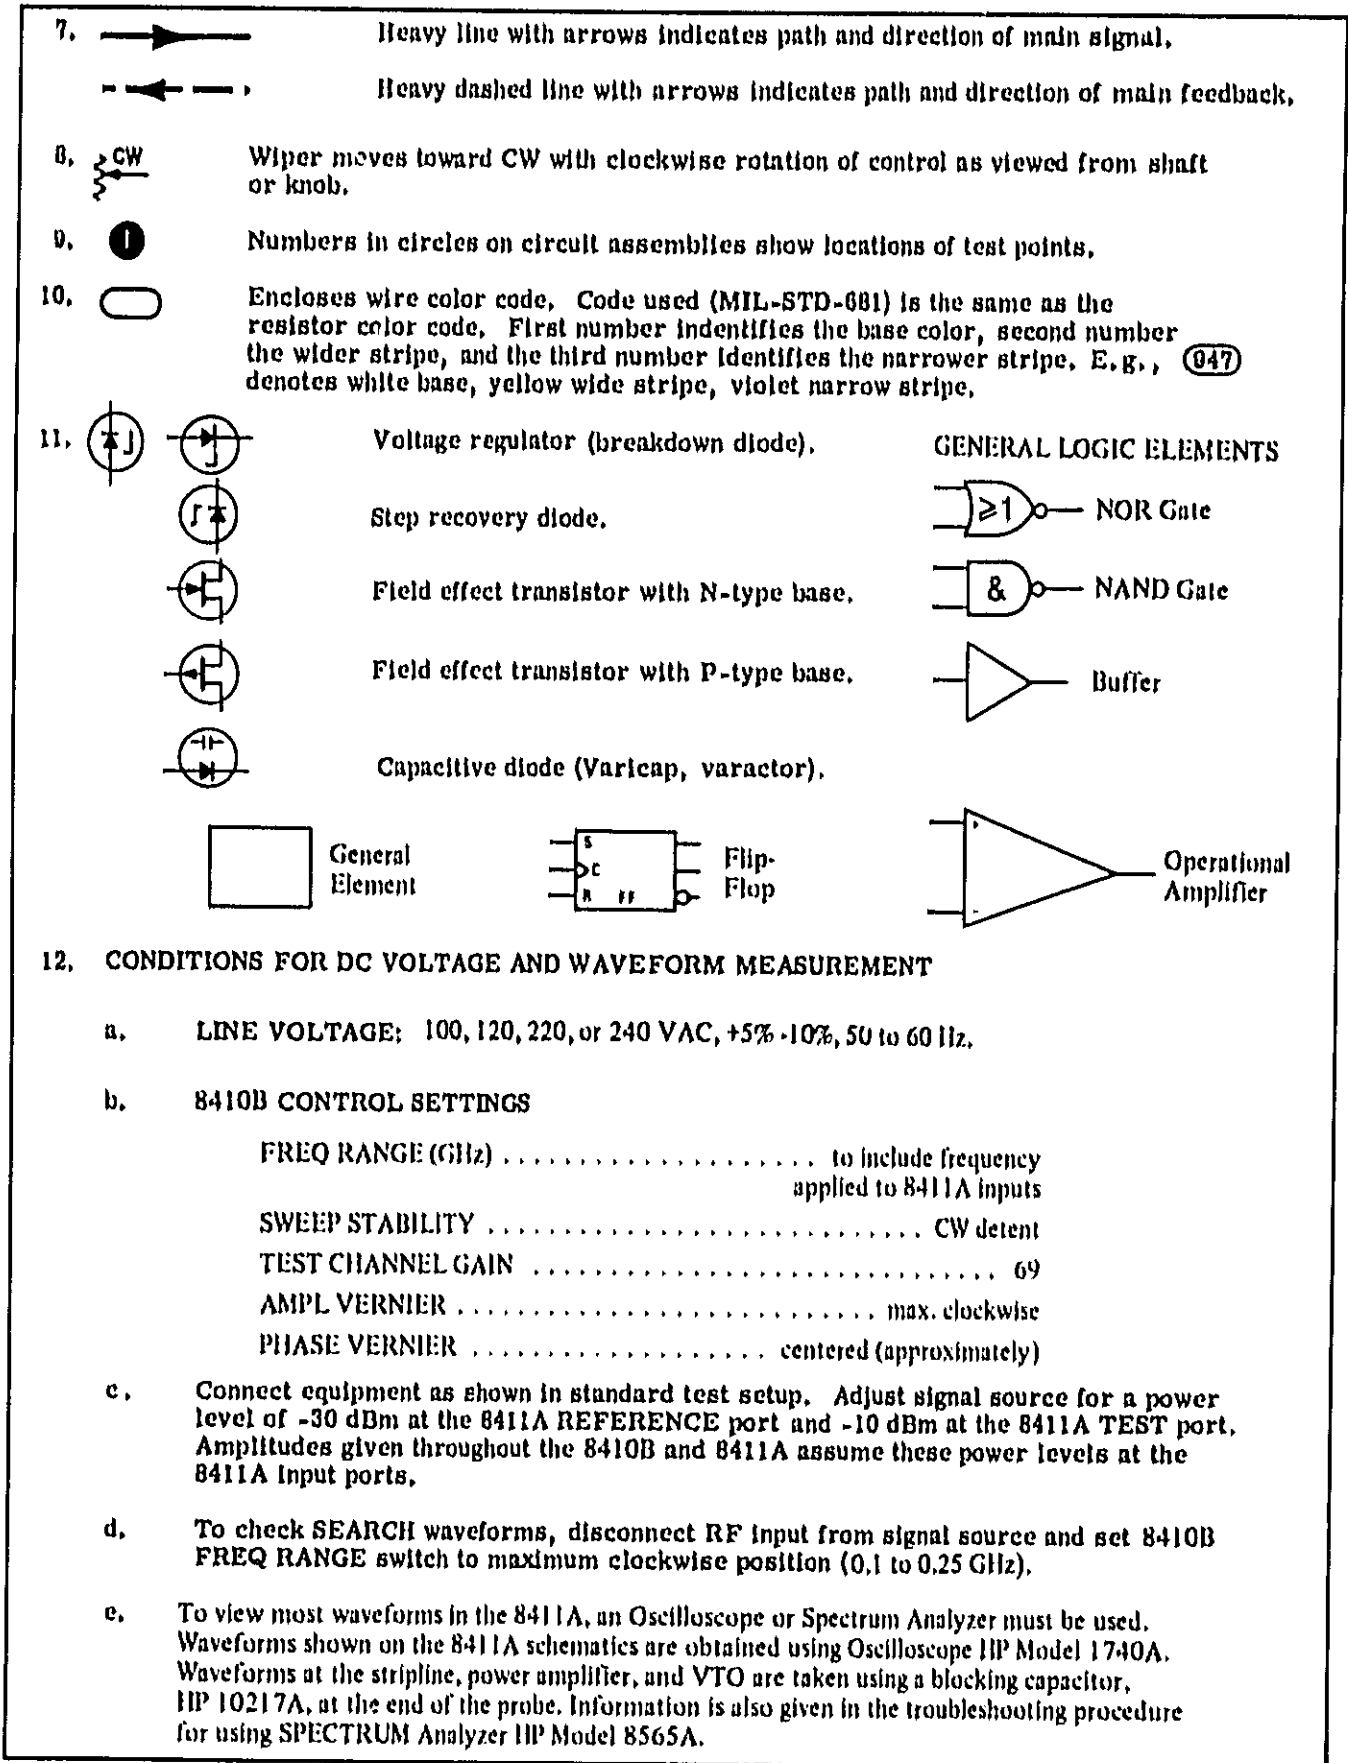


Figure 8-12. Schematic Diagram Notes (Sheet 2 of 3)

- f. DC voltages shown on the schematic diagrams should be taken with a digital voltmeter with 10 megohm input impedance and 0.05% accuracy.
- g. Some of the dc voltages in 8410B-A7 and 8410B-A8 are shown as fractions. The numerator is the voltage during search conditions (no RF input signal to 8411A). The denominator is the voltage during phase-locked condition.
- h. DC voltages at 8410B-A4 and 8410B-A5 are taken with 8411A disconnected from 8410B.

STANDARD TEST SETUP FOR SCHEMATIC WAVEFORMS AND VOLTAGES

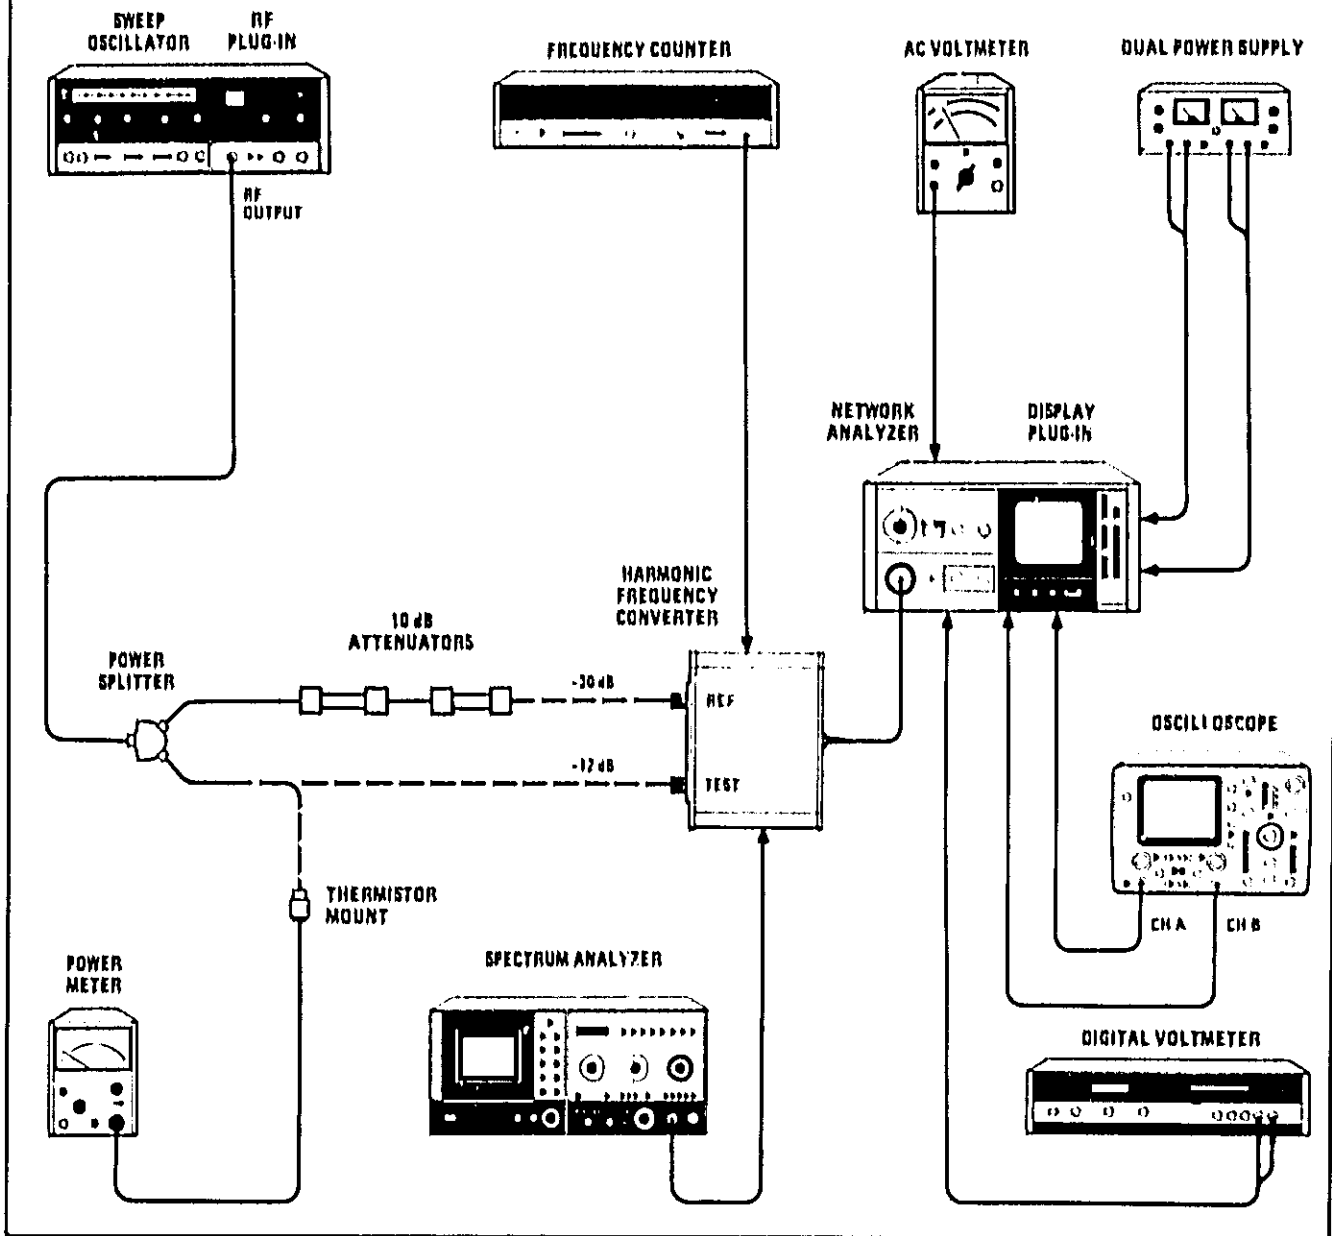


Figure 8-12. Schematic Diagram Notes (Sheet 3 of 3)


8410B TROUBLESHOOTING PROCEDURE

DESCRIPTION

If the 8410B has trouble phase locking or tracking over single octave or multioctave bands, the following troubleshooting procedure should be followed. The troubleshooting is divided into two parts, Part I tests the A19 Frequency Range Assembly and part of the A18 A/D Converter Assembly used in both AUTO mode and for selected frequency ranges. Part II tests the A9 Automatic Control Assembly and part of the A18 A/D Converter used in AUTO mode only.

PART I

TEST SETUP

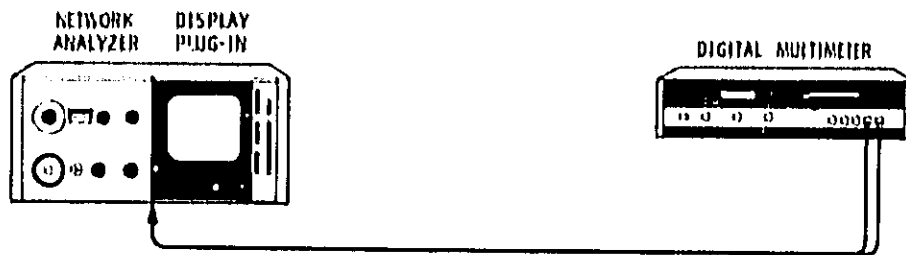

NOTE: Use floating terminals on Digital Voltmeter.

TEST EQUIPMENT: Item 11, Table 1-8.

PROCEDURE

- a. Check overall frequency range selection as follows:
 1. Remove A9 Automatic Control Assembly.
 2. Position A19S1 to 'TEST'.
 3. Stepping FREQ RANGE (GHz) control through all frequency range positions, make resistance checks designated in the table below.

NOTE

Use 10K ohms fullrange display on Digital Voltmeter. Improper range selection may result in inaccurate readings.

4. If the resistance check is good, proceed to Part II of the troubleshooting procedure. If the resistance check is incorrect, proceed to Part I, step b.
- b. Set FREQ RANGE (GHz) control to the position where an incorrect indication was found in step a. Make voltage checks at the designated test points in the following table.

Figure 8-13. 8410B Troubleshooting Procedures (Sheet 1 of 5)

PART I (Con't.)															
RESISTANCE (OHMS)															
FREQ RANGE (GHz)	A19TP5 to A19TP2						A19TP4 to A19TP3								
	LOW	NOMINAL	HIGH	LOW	NOMINAL	HIGH	LOW	NOMINAL	HIGH	LOW	NOMINAL	HIGH	LOW	NOMINAL	HIGH
0.1 - 0.25	3.318K	3.528K	3.743K	37	56	84									
0.18 - 0.35	1.705K	1.816K	1.930K	56	75	105									
0.25 - 0.5	1.110K	1.185K	1.264K	114	137	170									
0.35 - 0.7	612	657	706	321	357	402									
0.5 - 1.0	481	518	559	411	452	504									
0.7 - 1.4	292	318	348	573	624	685									
1.0 - 2.0	269	293	322	733	794	865									
1.4 - 2.8	193	213	237	1.188K	1.276K	1.375K									
2.0 - 4.0	151	168	180	1.492K	1.599K	1.717K									
2.8 - 5.7	118	134	154	2.263K	2.418K	2.583K									
4.0 - 8.0	87	100	119	3.046K	3.250K	3.463K									
5.7 - 11.3	70	83	100	4.825K	5.138K	5.462K									
8.0 - 16.0	54	65	82	6.423K	6.838K	7.264K									
11.3 - 18.0	40	51	67	8.568K	9.118K	9.682K									

TEST POINT VOLTAGE														
TEST POINT	FREQ RANGE (GHz)													
	0.1-0.25	0.18-0.35	0.25-0.5	0.35-0.7	0.5-1.0	0.7-1.4	1.0-2.0	1.4-2.8	2.0-4.0	2.8-5.7	4.0-8.0	5.7-11.3	8.0-16.0	11.3-18.0
A18TP2	+12V	+12V	0V	0V	+12V	+12V	0V	0V	+12V	+12V	0V	0V	+12V	+12V
A18TP3	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	0V	0V	0V	0V	0V	0V
A18TP4	0V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V
A18TP5	+12V	0V	+12V	0V	+12V	0V	+12V	0V	+12V	0V	+12V	0V	+12V	0V
A18TP6	+12V	+12V	+12V	+12V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	0V	0V


e. If Part I, step B checks good, the problem is on the A19 Frequency Range Assembly. If Part I, step B check indicates incorrect, the problem is on the A18 A/D Converter Assembly.

d. Reinstall A9 Automatic Control Assembly and return A18S1 to NORMAL position.

Figure 8-13. 8410B Troubleshooting Procedures (Sheet 2 of 5)

8410B TROUBLESHOOTING PROCEDURE

PART II

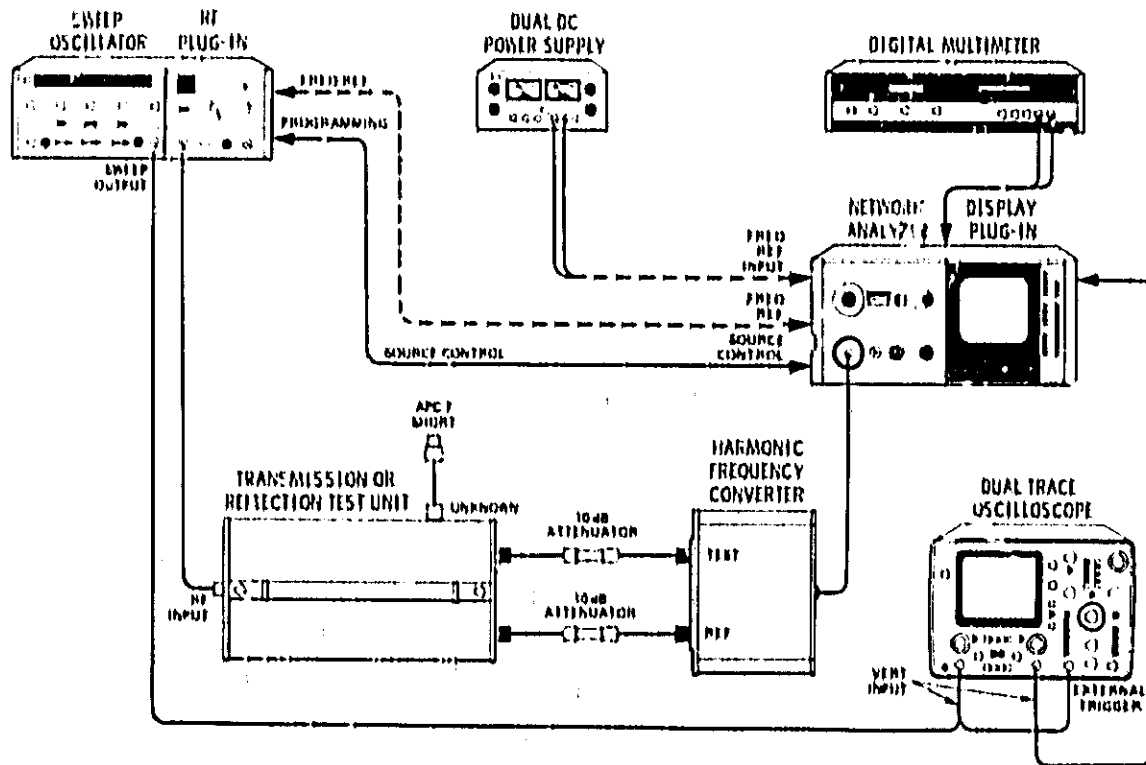

TEST EQUIPMENT: Items 1, 4, 5, 9, 11, 16, and 20, Table 1-8.

PROCEDURE

CAUTION

Do not apply more than +20V to FREQ REF INPUT.

- a. Ground A18TP7 and connect the power supply to FREQ REF INPUT.
- b. Check the A, D Converter Assembly as follows:
 1. Check the Multiplexer output voltages for the corresponding Frequency Reference Input voltages given in the table below. If the Multiplexer output voltages are correct, proceed to Part II, step c. If voltages are incorrect proceed to Part II, step b-2.
 2. Set the FREQ REF INPUT voltage for the incorrect Multiplexer output voltage indication obtained in Part II, step b-1. Check the corresponding Latch output voltages shown in the table below.

Figure 8-13. 8410B Troubleshooting Procedures (Sheet 3 of 5)

PART II (Cont'd)

3. If the Latch output voltages are incorrect, the trouble is in the Log A/D Converter or Latch circuitry. If the Latch output voltages are correct, the trouble is in the Encoder or Multiplexer circuitry.

MULTIPLEXER OUTPUTS

FREQ REF INPUT	A18TP2	A18TP3	A18TP4	A18TP5	A18TP6
+0.1V	+12V	+12V	0V	+12V	+12V
+0.2V	+12V	+12V	0V	0V	+12V
+0.3V	0V	+12V	0V	+12V	+12V
+0.4V	0V	+12V	0V	0V	+12V
+0.6V	+12V	+12V	0V	+12V	0V
+0.8V	+12V	+12V	0V	0V	0V
+1.2V	0V	+12V	0V	+12V	0V
+1.7V	0V	+12V	0V	0V	0V
+2.4V	+12V	0V	+12V	+12V	+12V
+3.4V	+12V	0V	+12V	0V	+12V
+4.8V	0V	0V	+12V	+12V	+12V
+7.0V	0V	0V	+12V	0V	+12V
+9.5V	+12V	0V	+12V	+12V	0V
+11.5V	+12V	0V	+12V	0V	0V

LATCH OUTPUTS

FREQ REF INPUT	A8U5	A18U6				A18U9				A18U10			
	Pin 1	Pin 1	Pin 11	Pin 10	Pin 2	Pin 1	Pin 11	Pin 10	Pin 2	Pin 1	Pin 11	Pin 10	Pin 2
+0.1V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V
+0.2V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	+12V
+0.3V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V
+0.4V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V
+0.6V	0V	0V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V
+0.8V	0V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V
+1.2V	0V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V
+1.7V	0V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+2.4V	0V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+3.4V	0V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+4.8V	0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+7.0V	0V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+9.5V	0V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V
+11.5V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V	+12V

- c. Remove ground from A18TP7 and disconnect power supply.
- d. Connect FREQ REF INPUT from sweep oscillator and set FREQ RANGE (GHz) control to AUTO.
- e. Set the sweep oscillator to sweep over more than one octave band (Example 2GHz to 6 GHz)

Figure 8-13. 8410B Troubleshooting Procedures (Sheet 4 of 5)

f. With Channel A of the oscilloscope connected to the 8620C SWEEP OUT, connect Channel B to the test points designated in the timing diagram below. Set oscilloscope for a chopped display and negative trigger slope. Check that the two triggers and the leading edges of each pulse coincide (except HOLD ALLOW, which may remain high (+10V) for more than one trigger).

NOTE

If an 86290A RF section is not used, the sequential break points at 6.2 GHz and 12.4 GHz will not be present.

g. If Part II step f check indicates incorrect, the problem is in the A9 Automatic Control Assembly or the control signals fed to it.

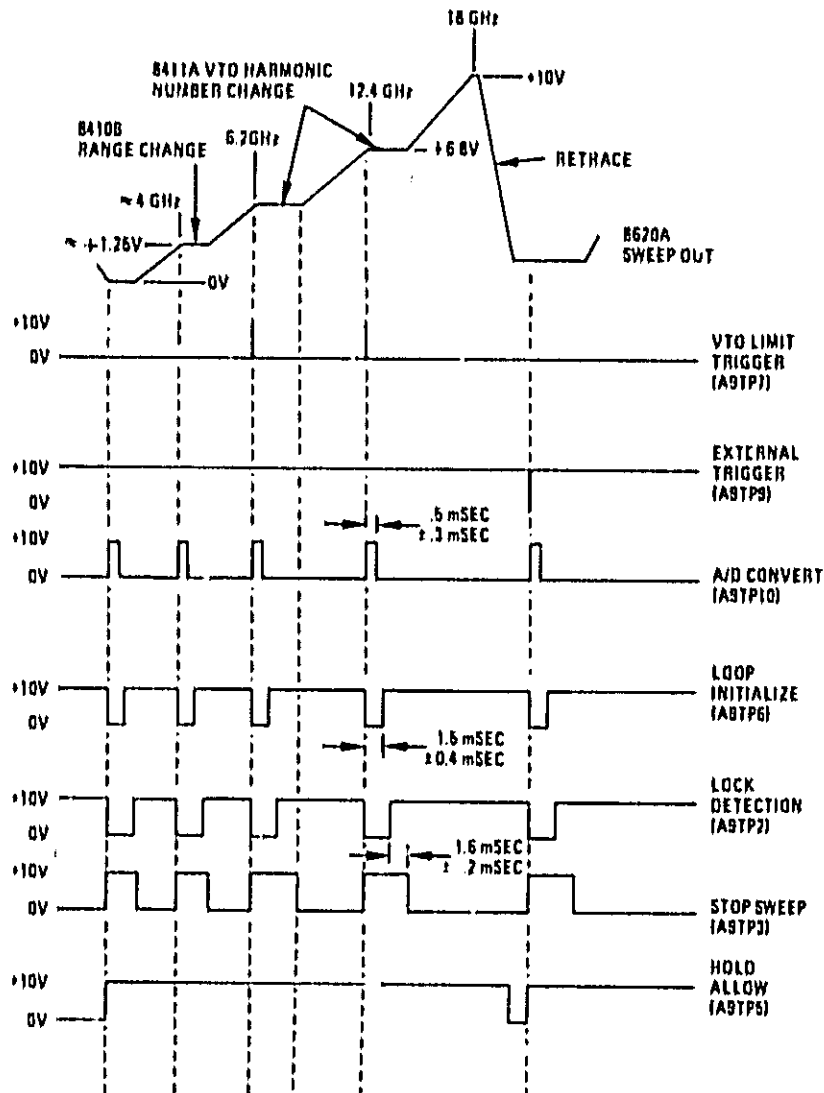
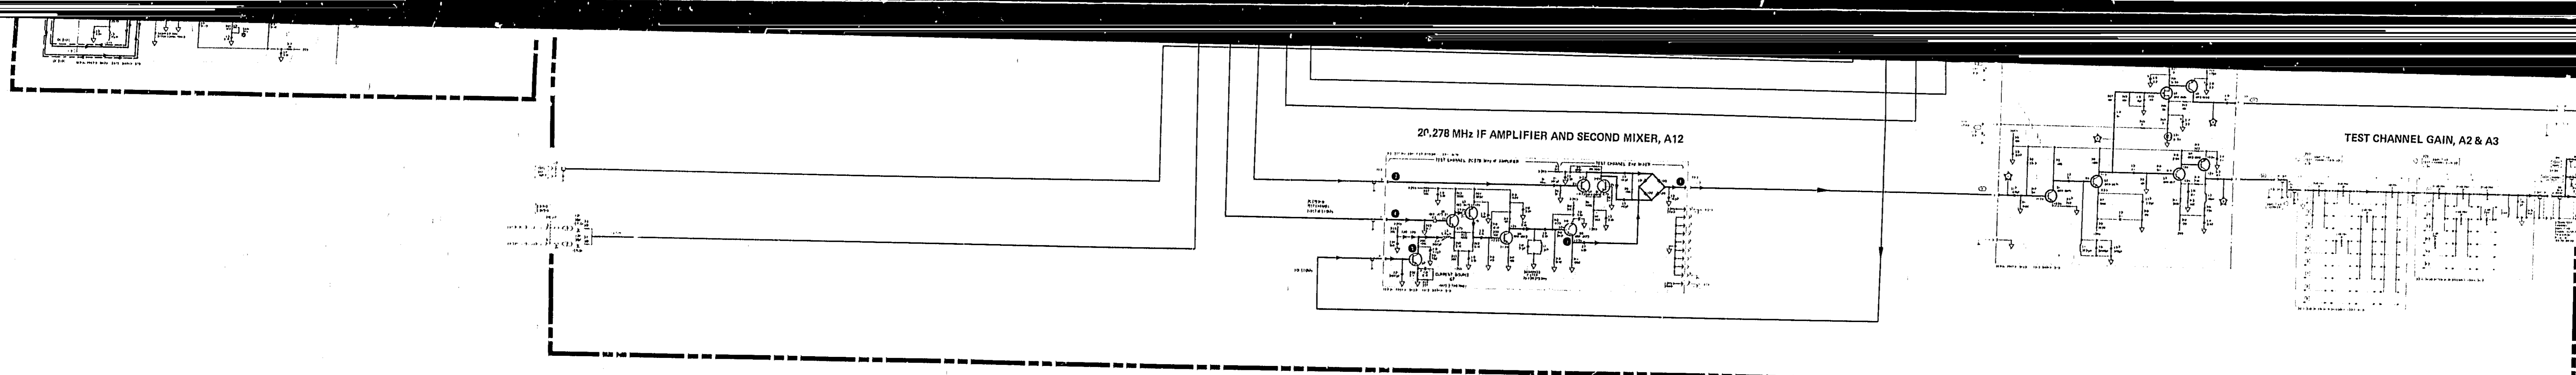
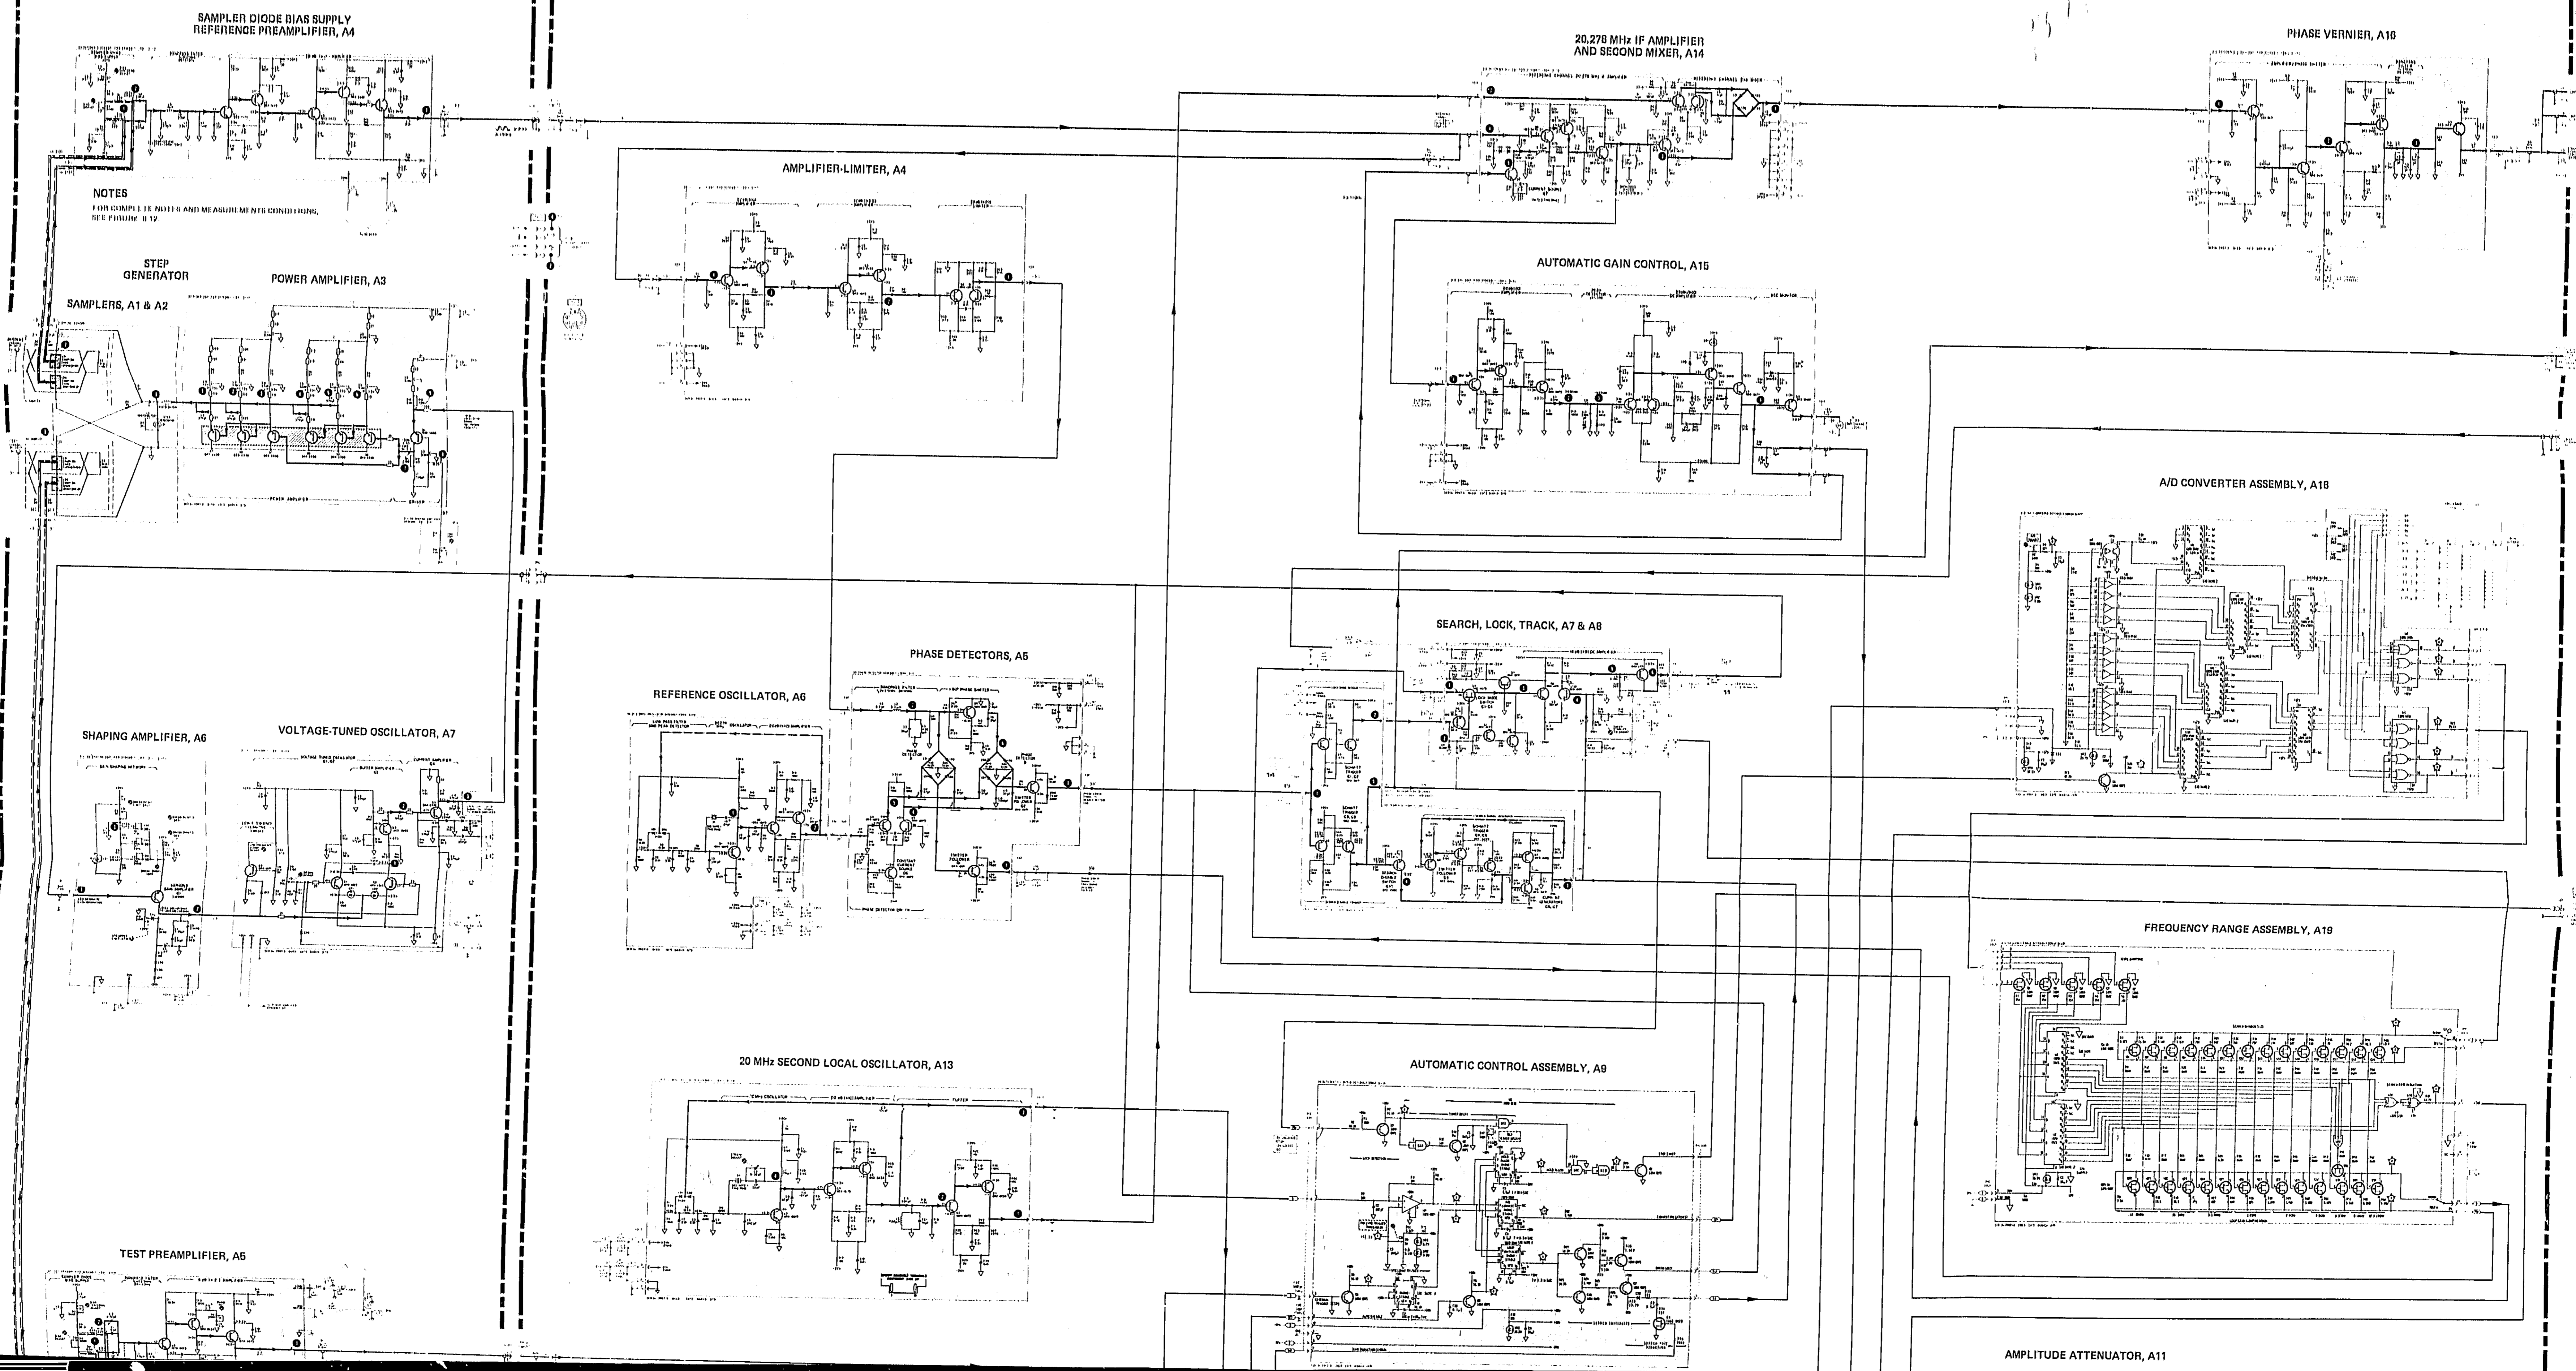


Figure 8-13. 8410B Troubleshooting Procedures (Sheet 5 of 5)

B411A

B410B




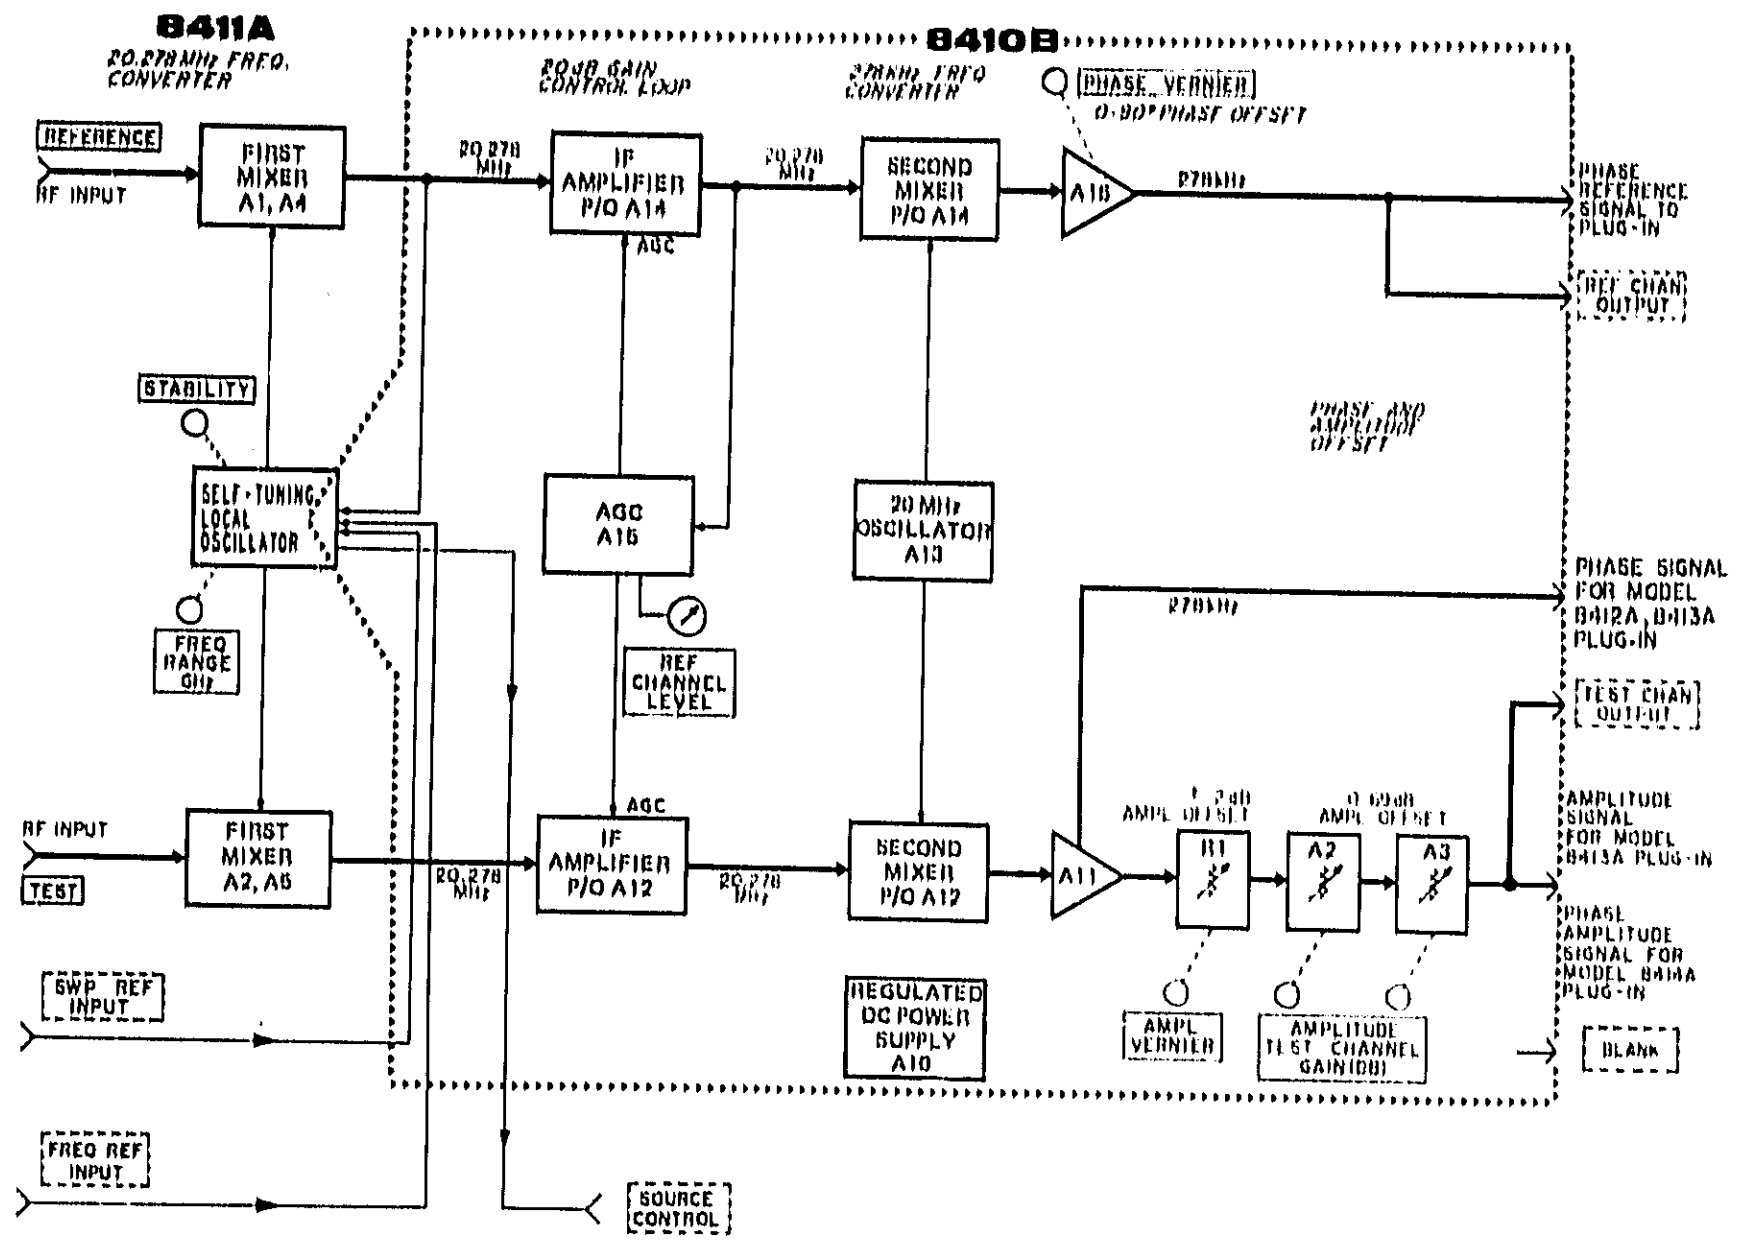


Figure S-14. Basic Block Diagram

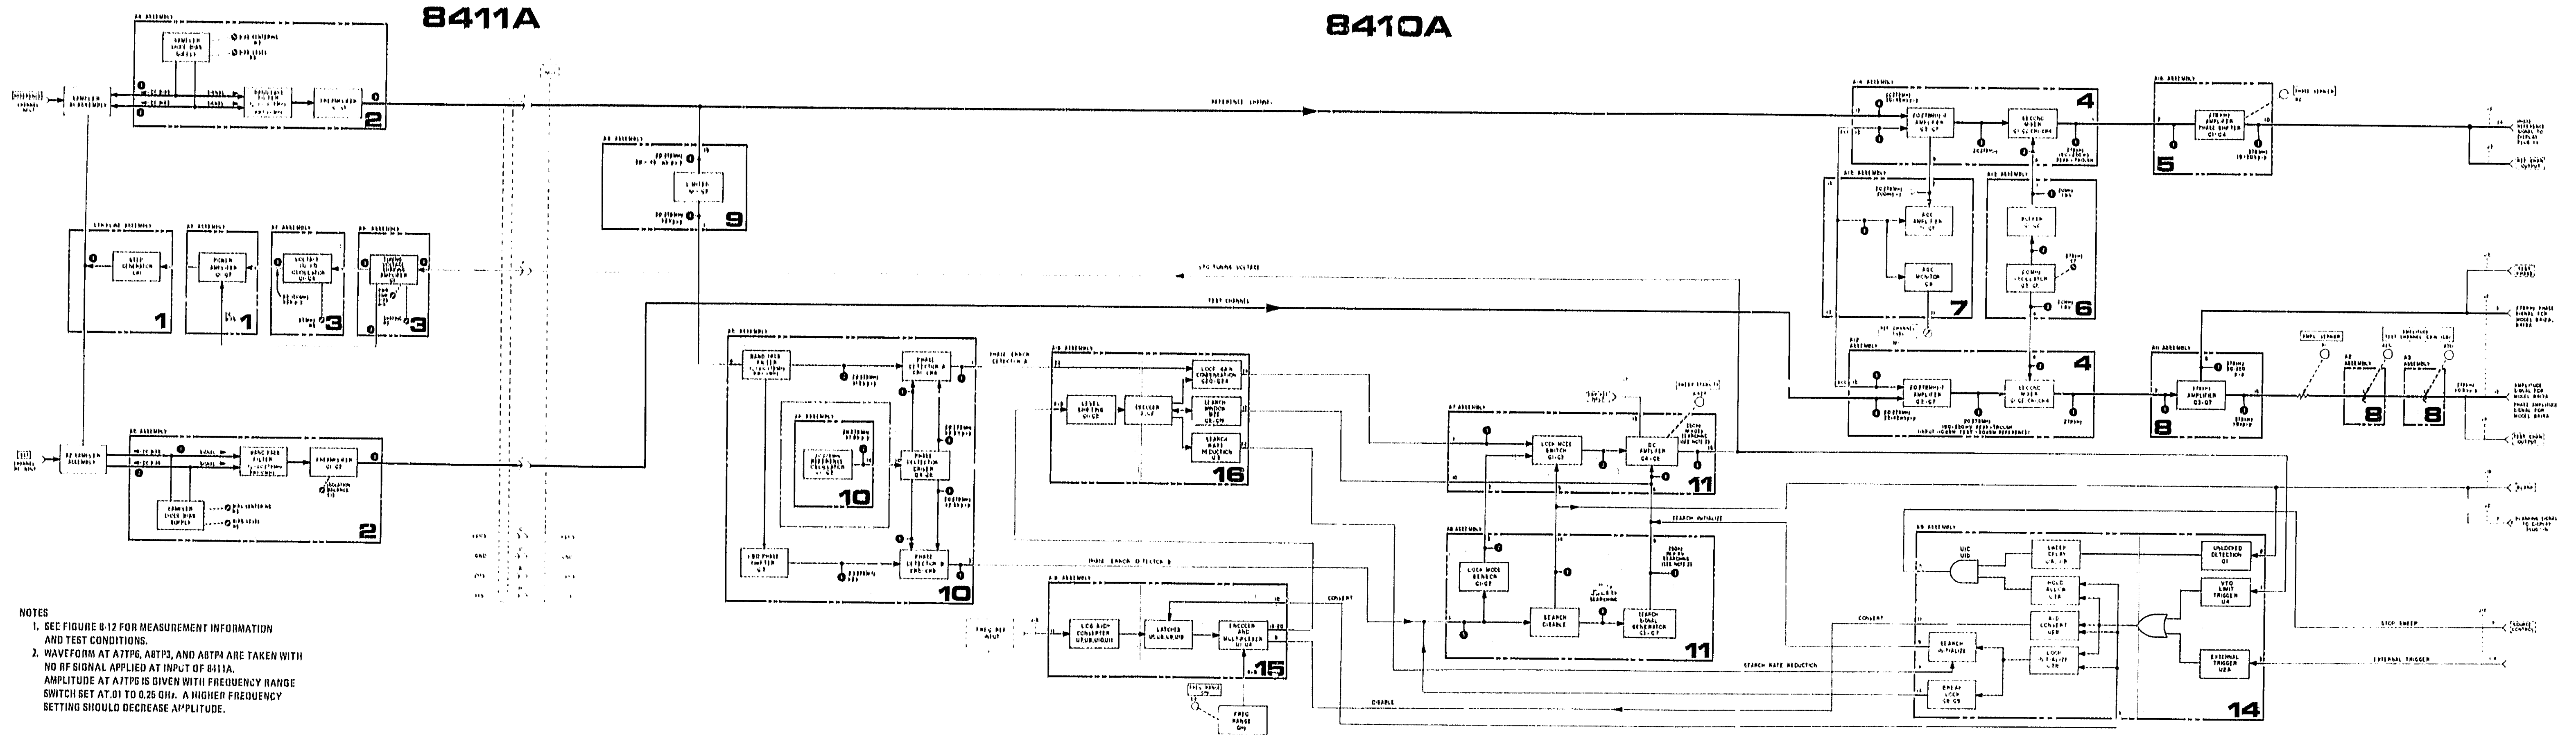

- NOTES
1. SEE FIGURE 8-12 FOR MEASUREMENT INFORMATION AND TEST CONDITIONS.
 2. WAVEFORM AT A77PG, A8TP3, AND A8TP4 ARE TAKEN WITH NO RF SIGNAL APPLIED AT INPUT OF 8411A. AMPLITUDE AT A77PG IS GIVEN WITH FREQUENCY RANGE SWITCH SET AT 0.1 TO 0.25 GHz. A HIGHER FREQUENCY SETTING SHOULD DECREASE AMPLITUDE.

Figure 8-17. Detail Block Diagram

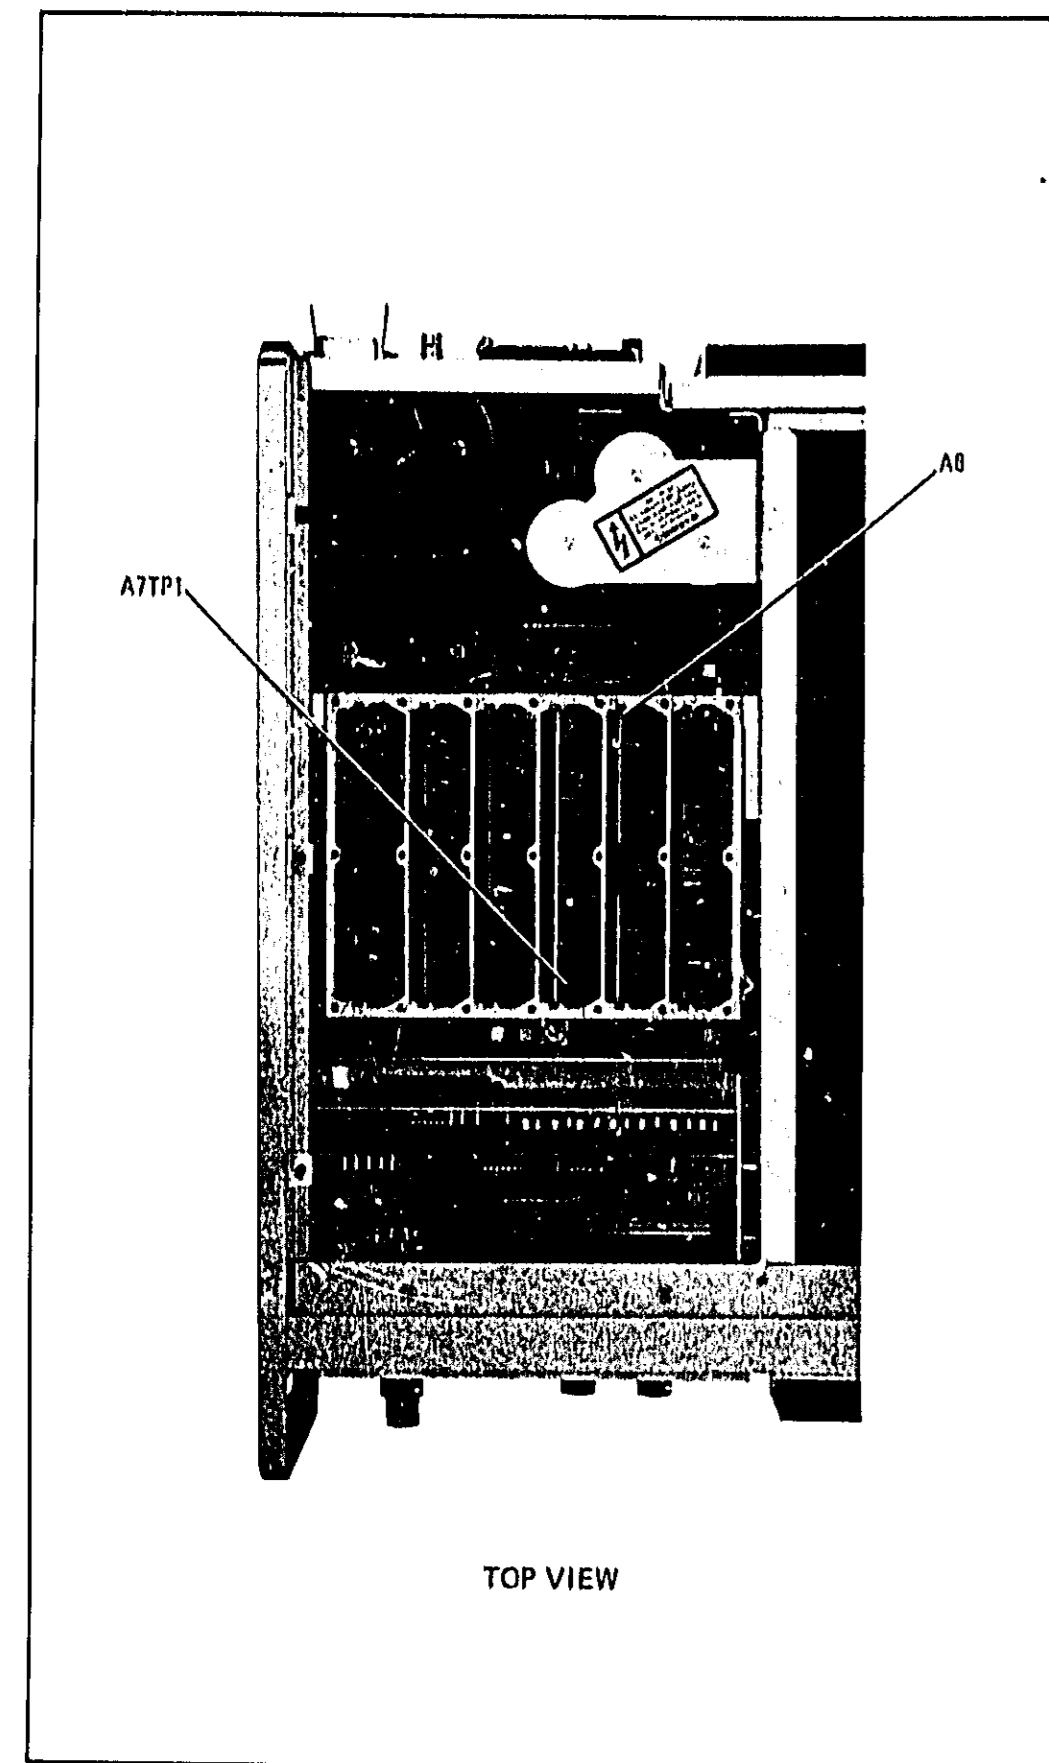


Figure 8-18. Models 8410B/8411A Interface Test Points (1 of 2)

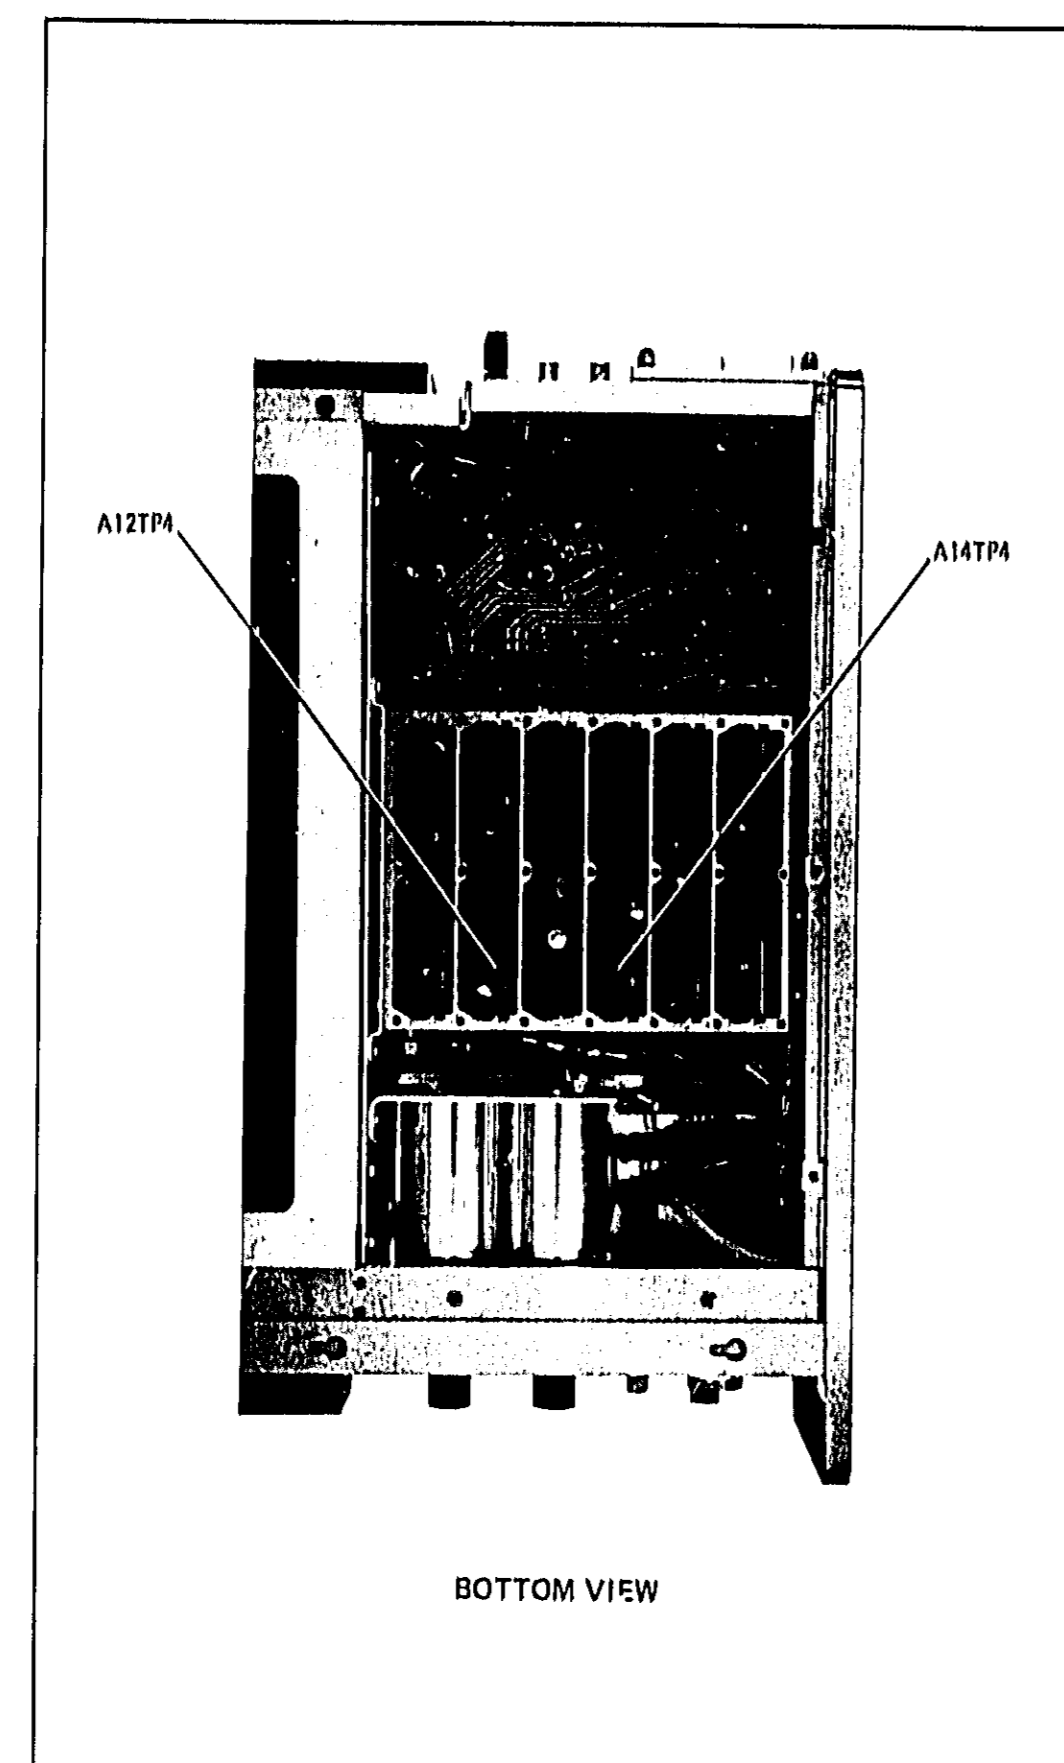


Figure 8-18. Models 8410B/8411A Interface Test Points (2 of 2)

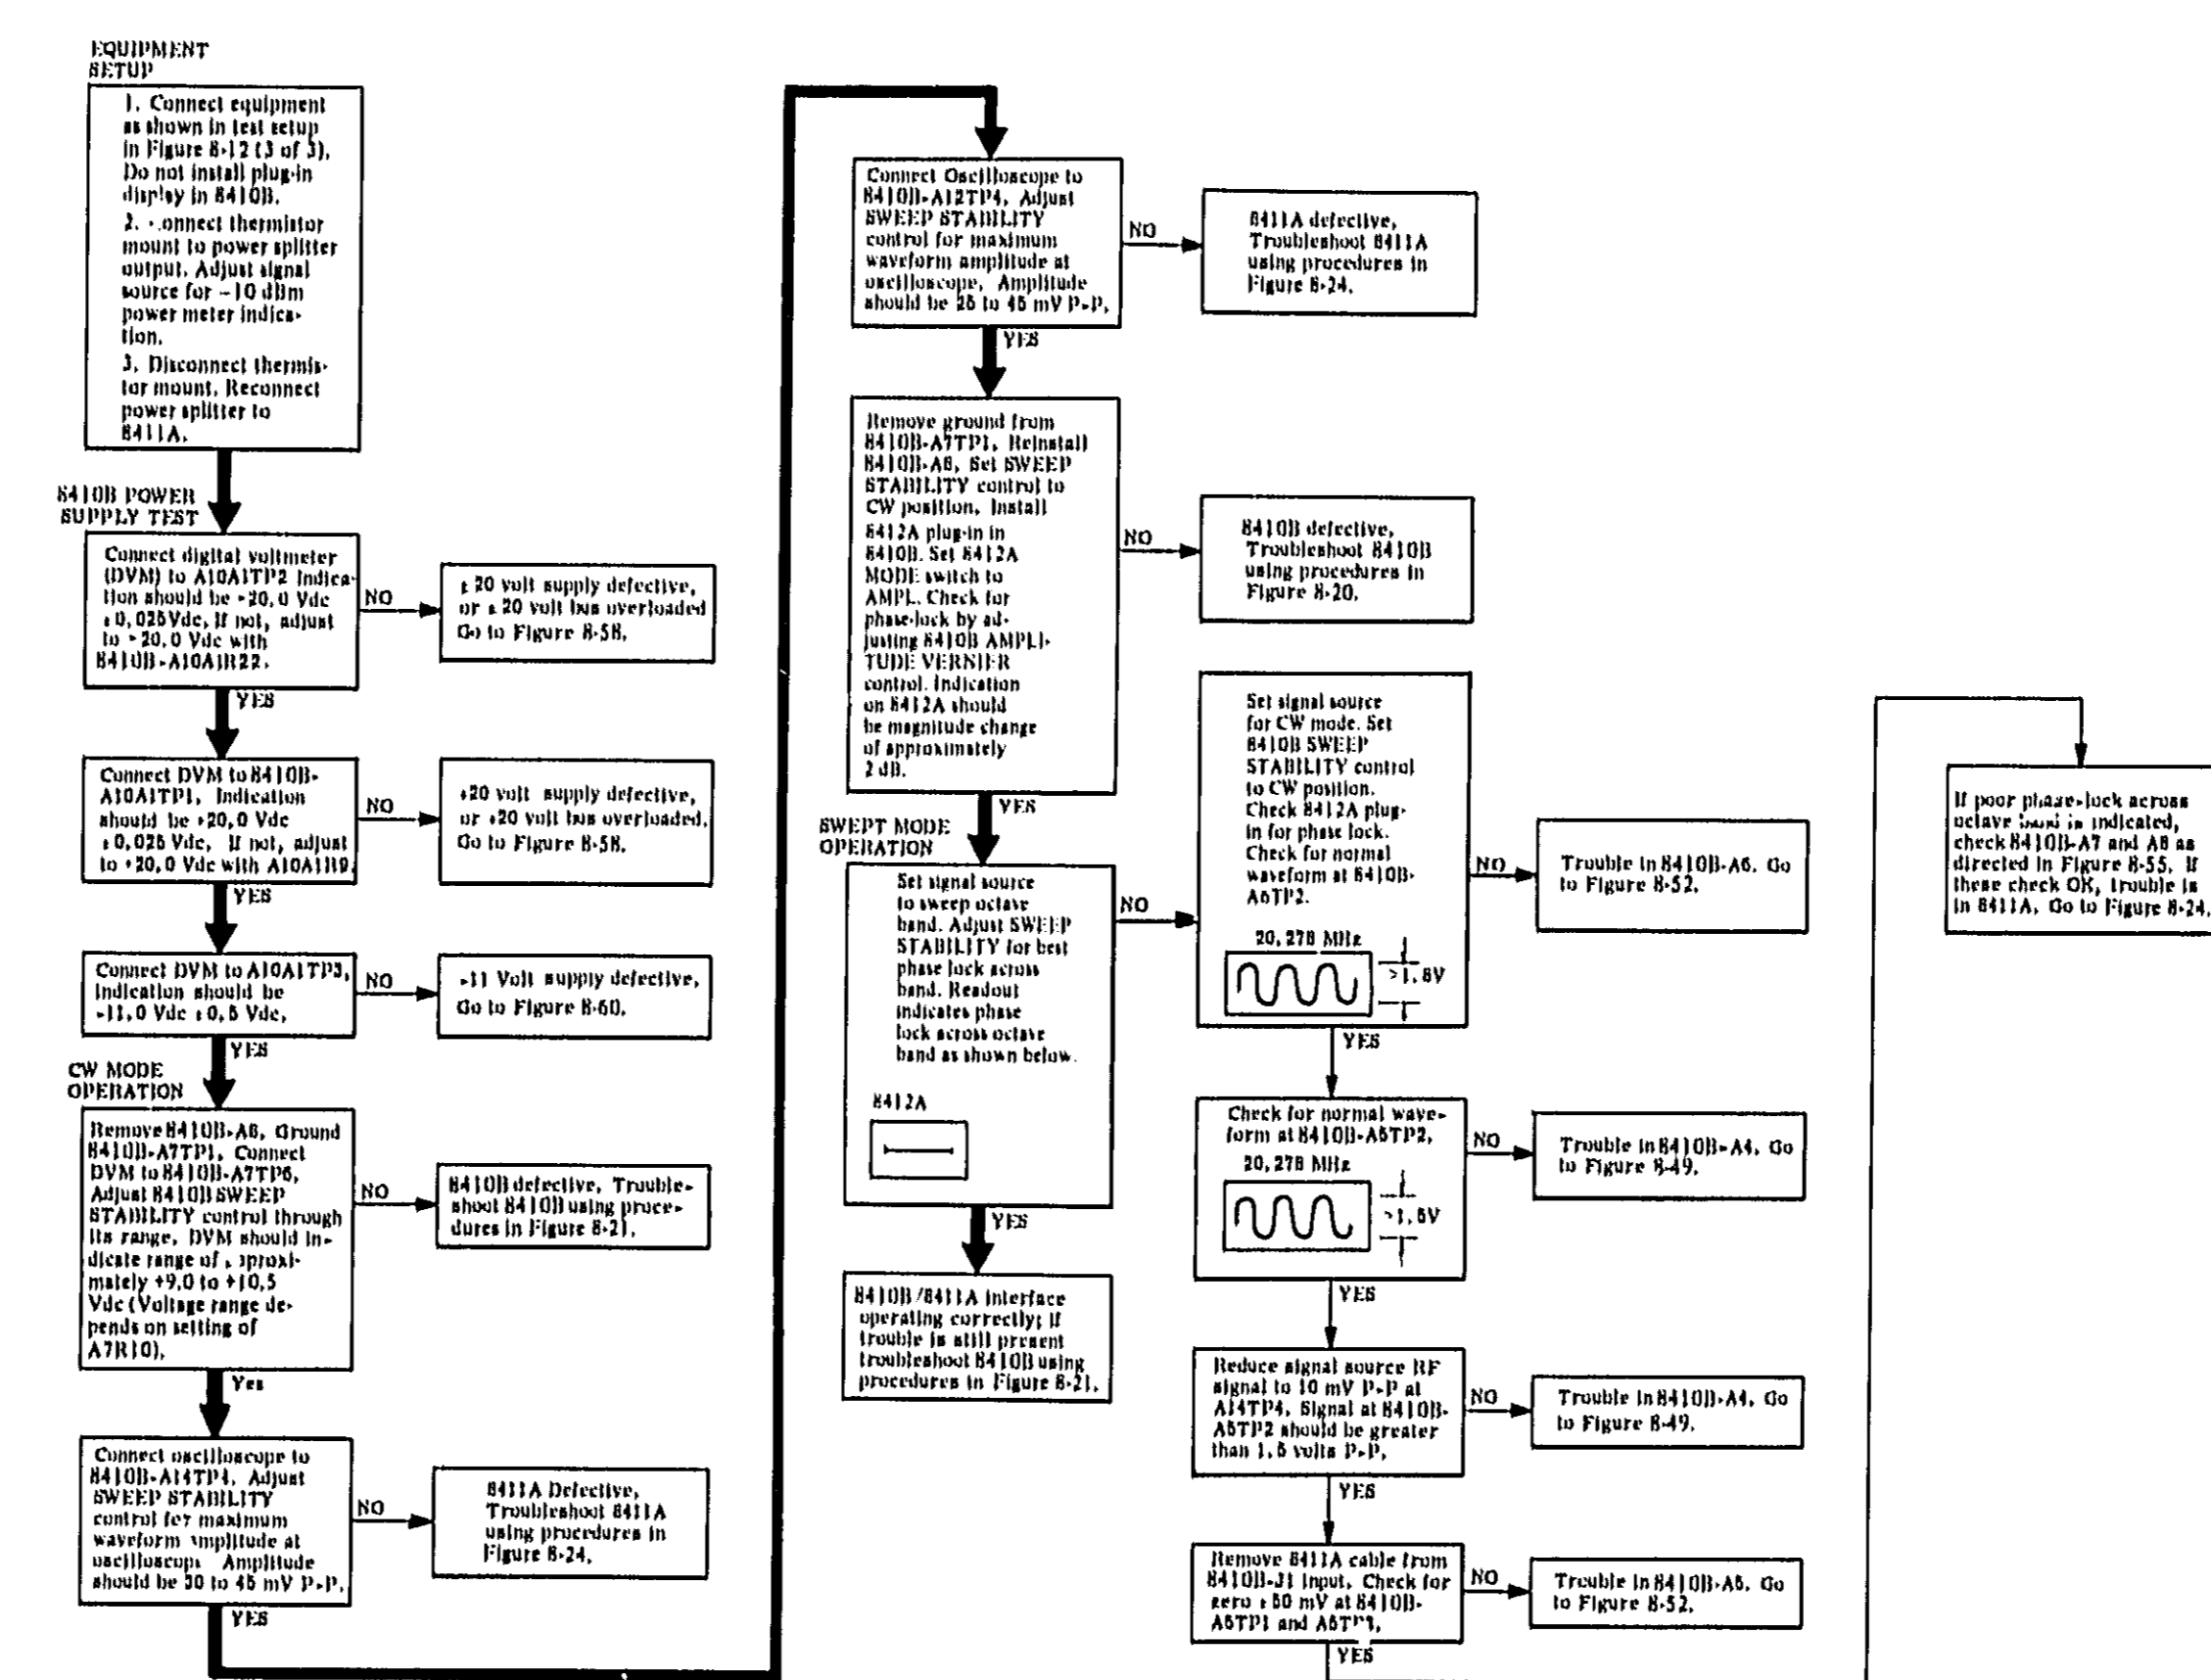


Figure 8-19. Model 8410B/8411A Interface Troubleshooting

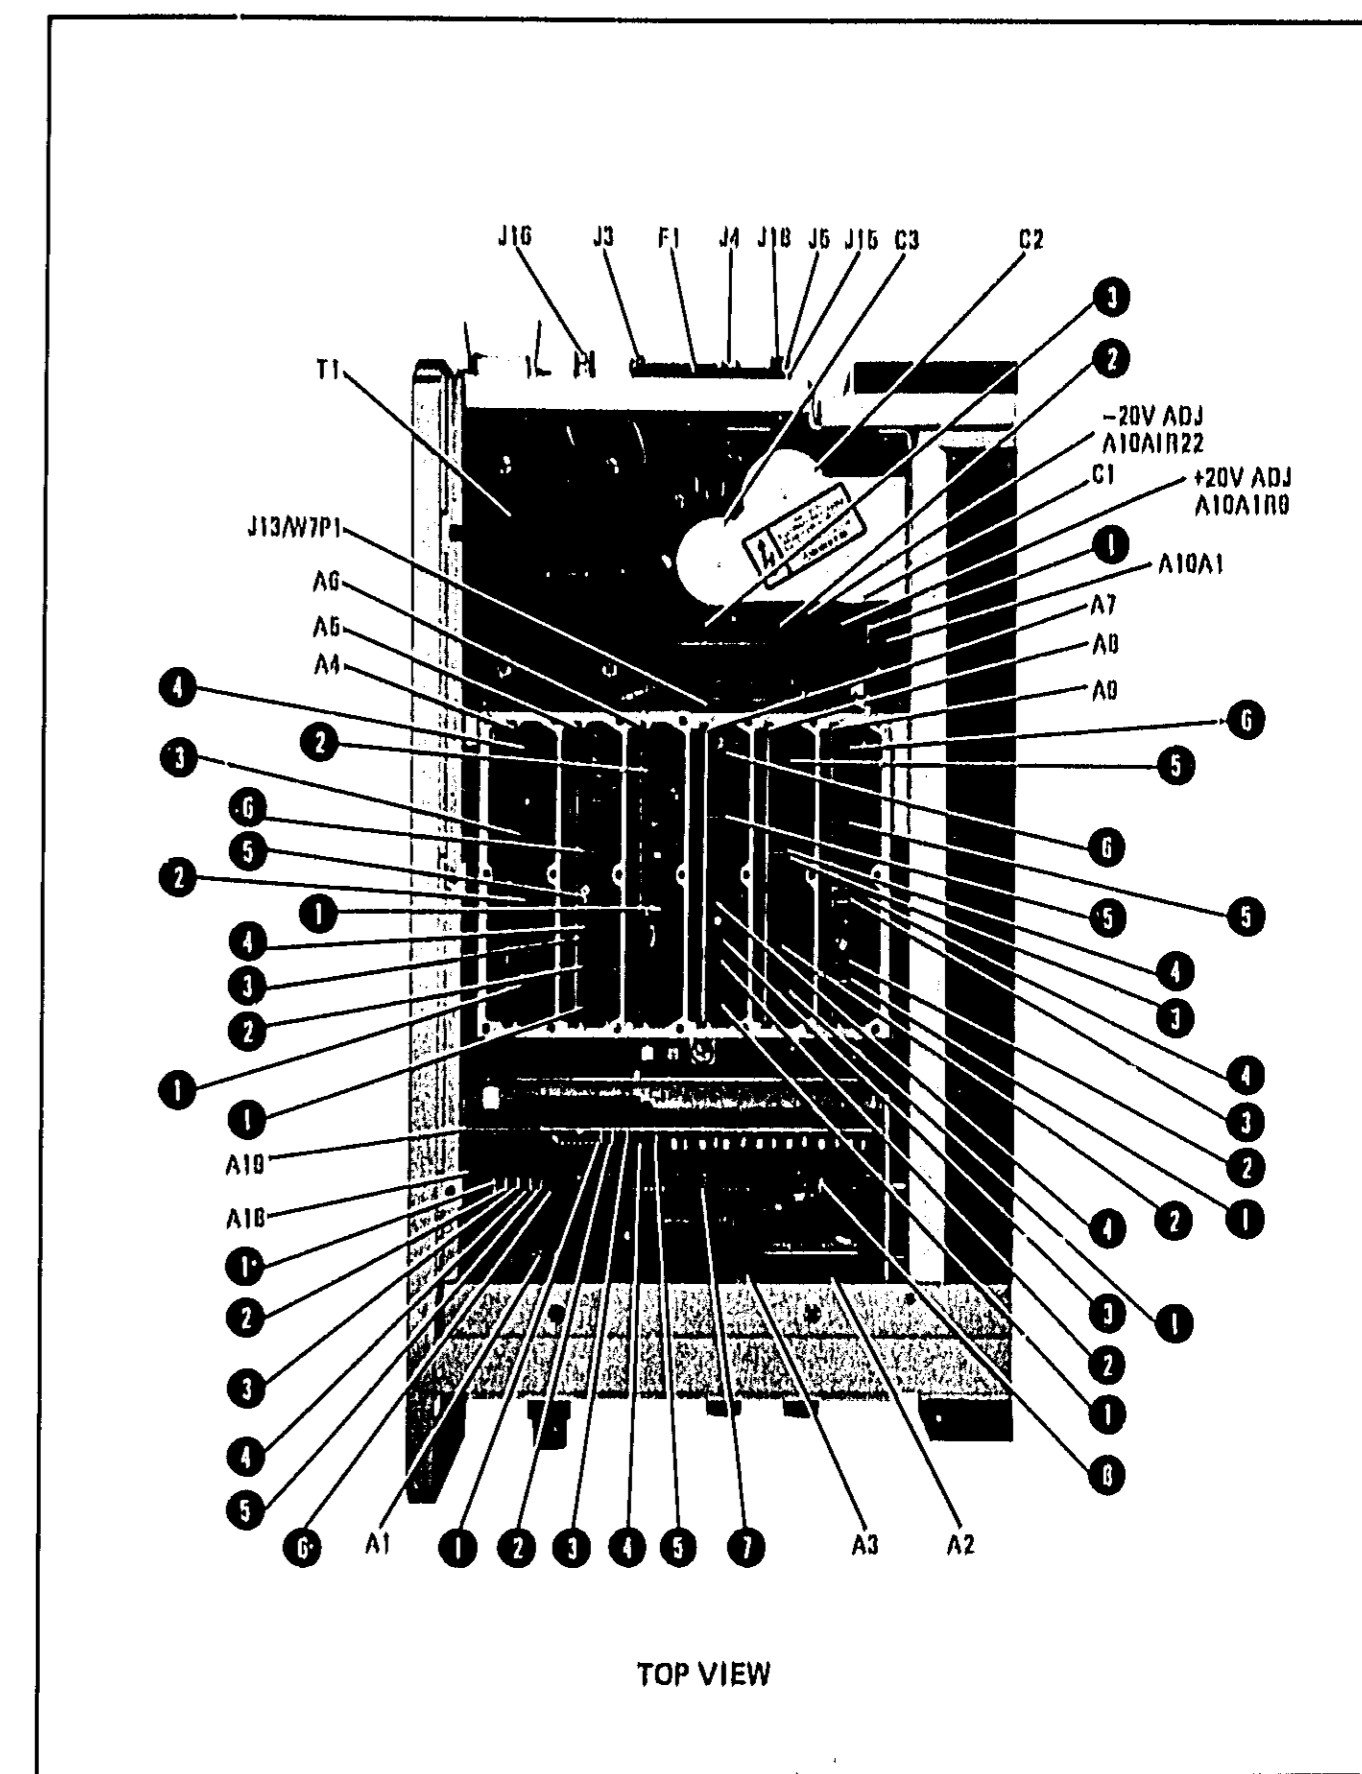


Figure 8-20. Model 8410B Test Points (1 of 2)

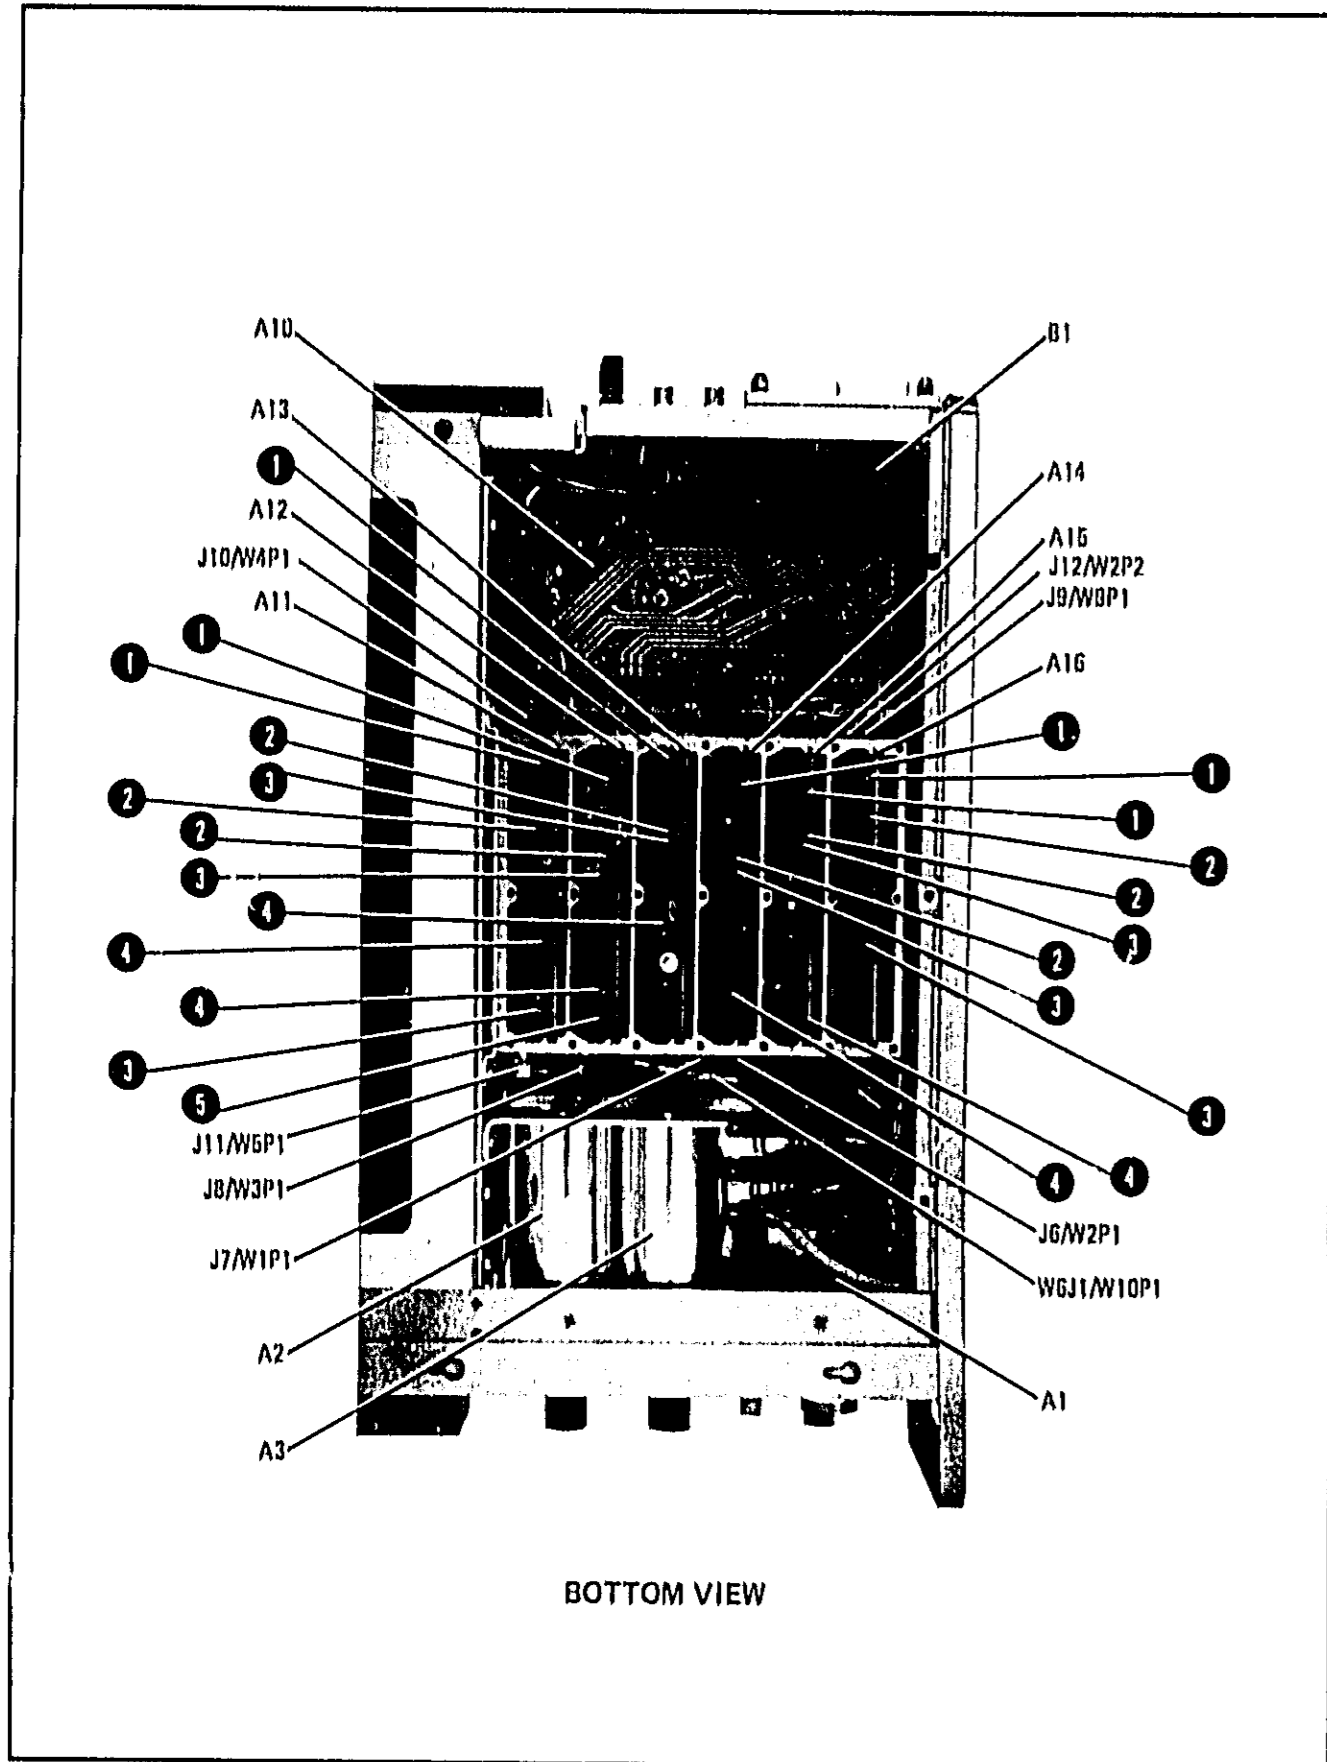


Figure 8-20. Model 8410B Test Points (2 of 2)

From 8410B/8411A interface test, Figure 8-10.

SET UP TEST CONDITIONS

- Using the test setup in Figure 8-12 (3 of 3), set input RF power to 8411A (-10 dBm at TEST, -30 dBm at REF).
- Set 8410A FREQUENCY RANGE to signal source frequency, SWEEP STABILITY to CW detent, TEST CHANNEL GAIN to 69 dB, and AMPL. VERNIER control maximum clockwise.

NOTE: This procedure does not require installation of a read-out plug-in in the 8410B.

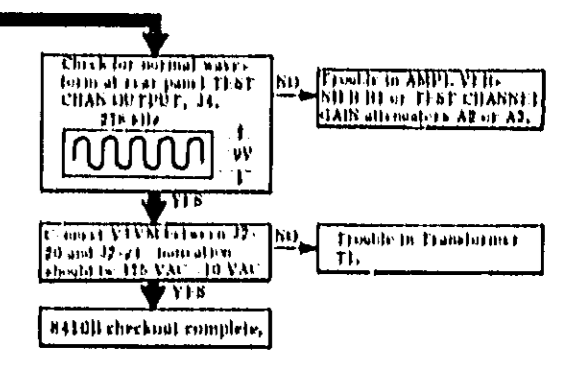
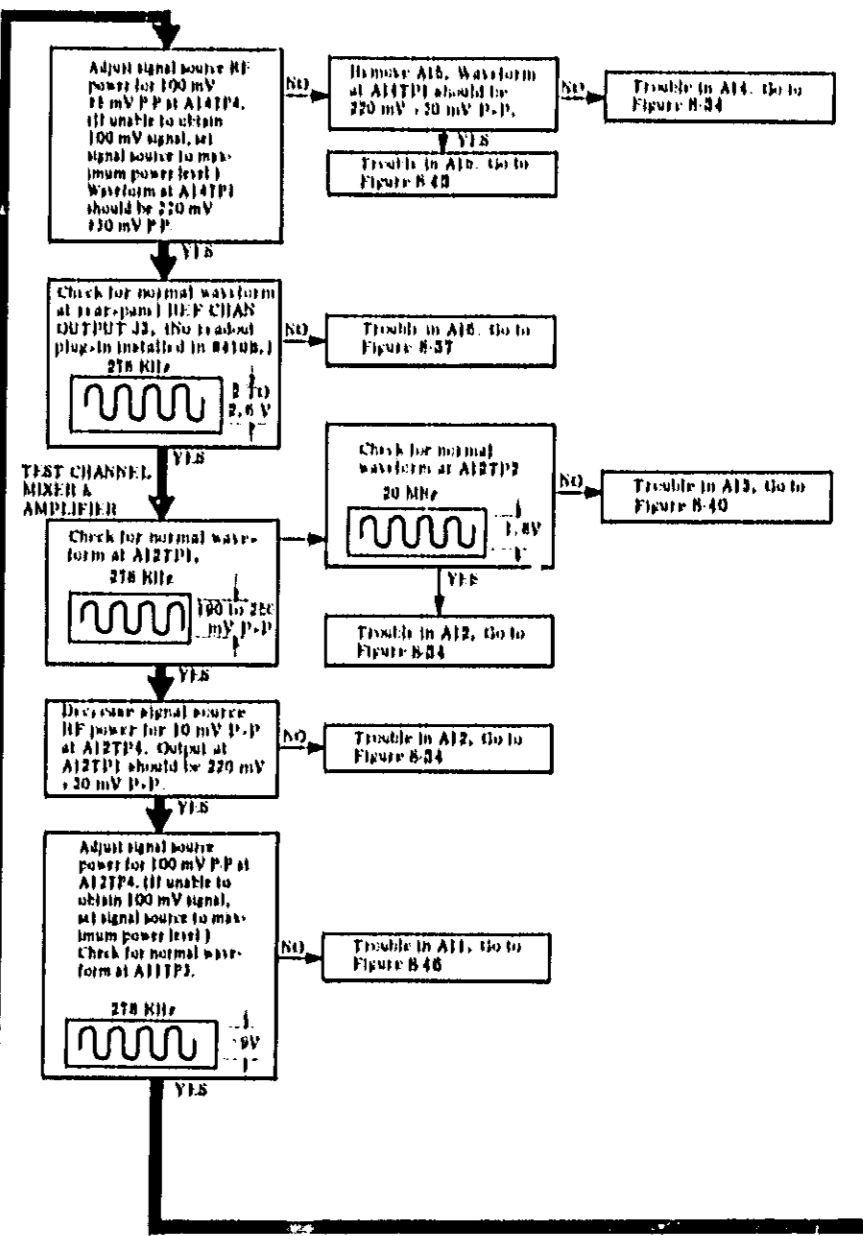
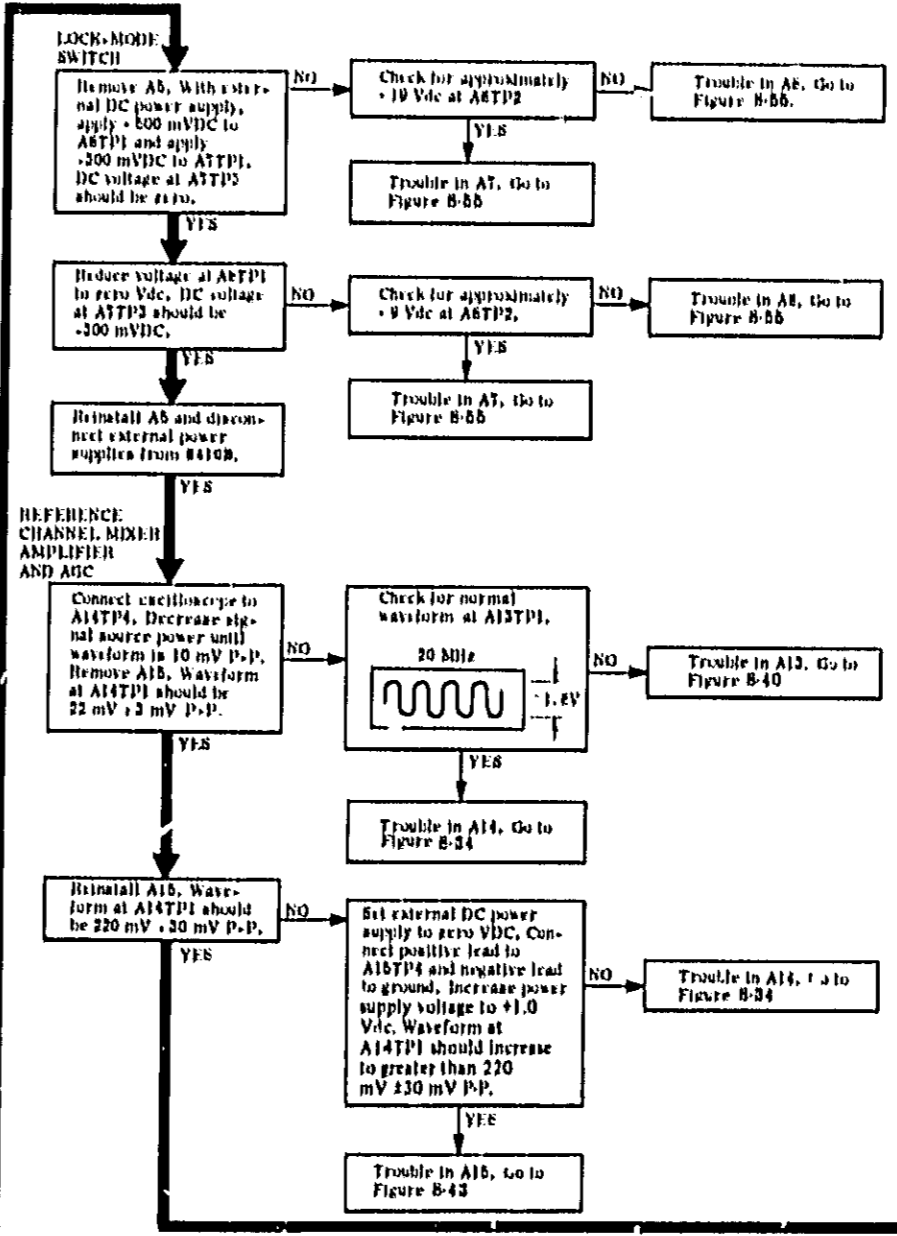
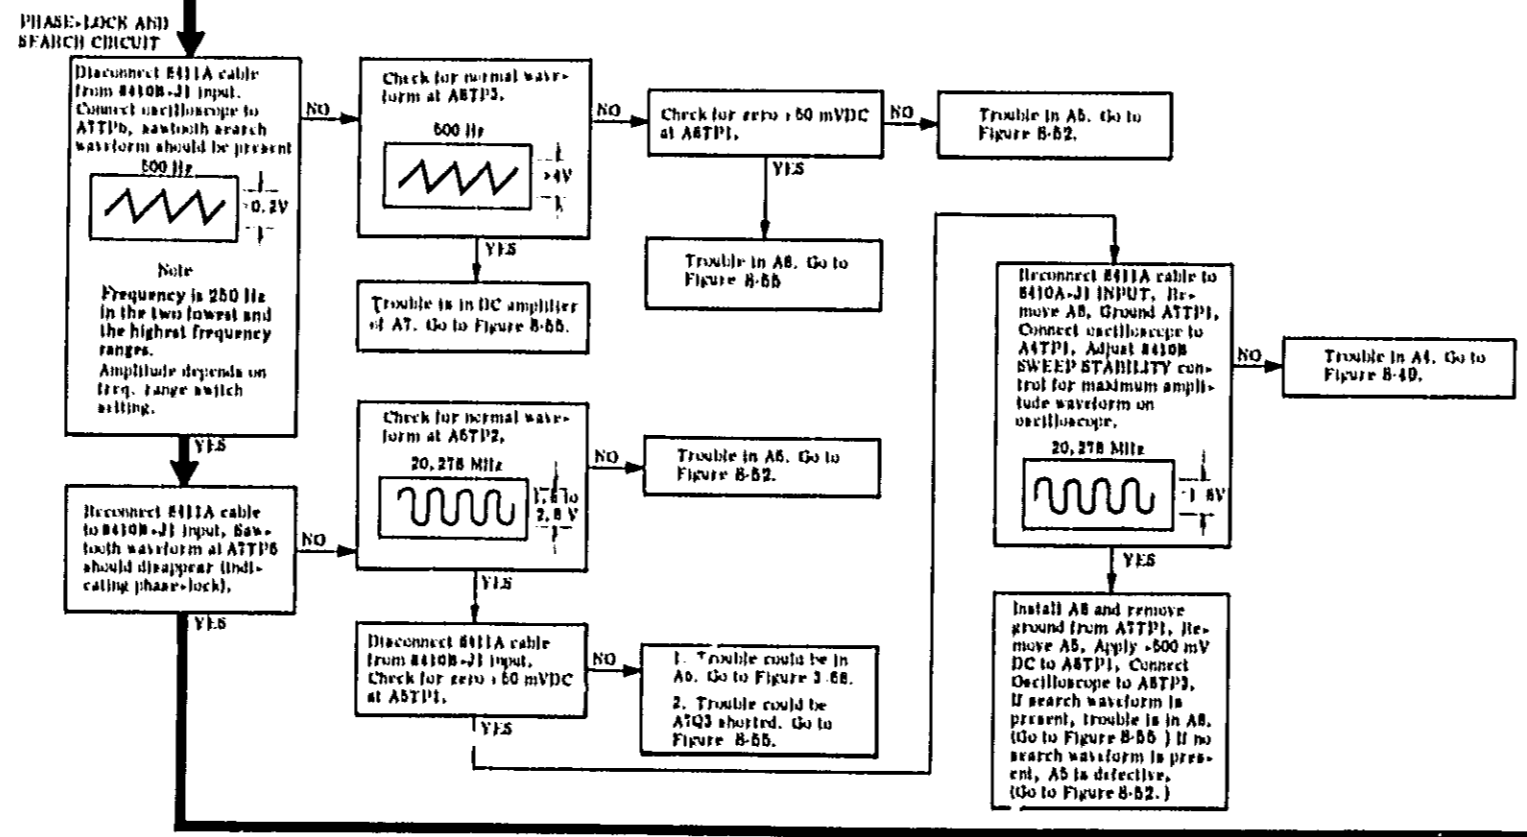


Figure 8-21. Model 8410B Troubleshooting

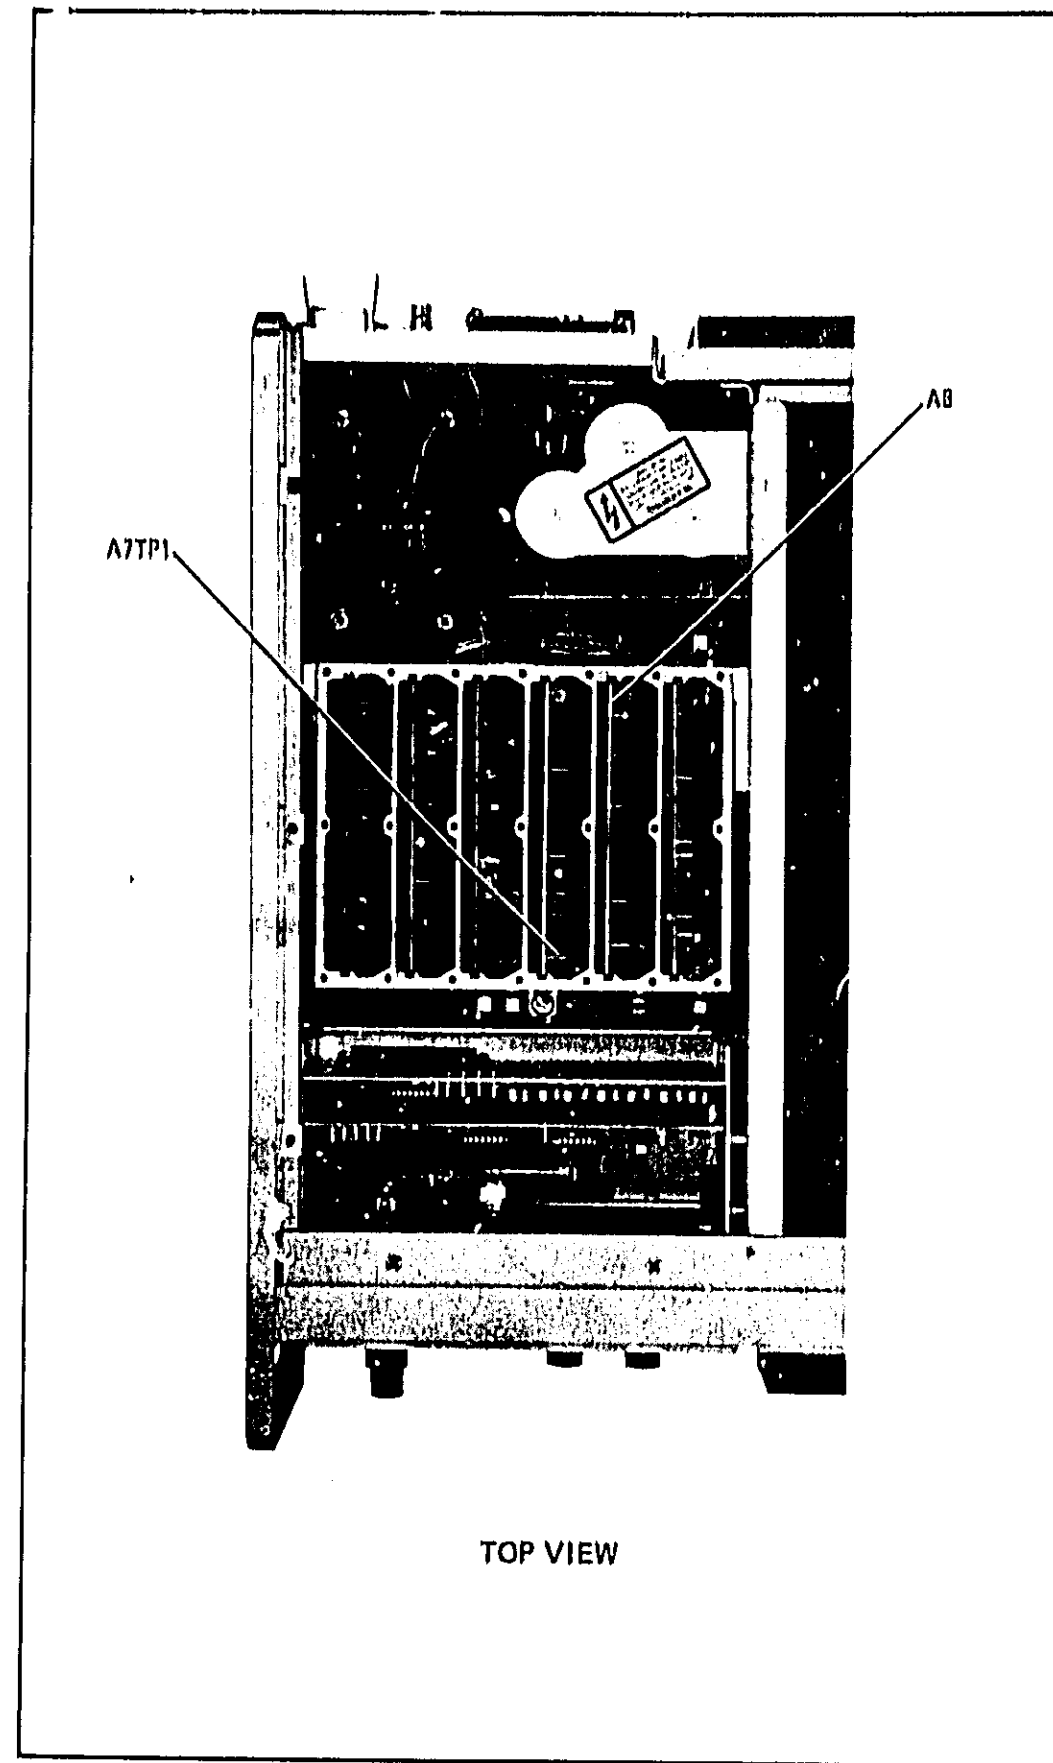


Figure 8-22. Test Points for 8411A Troubleshooting (1 of 2)
(Shows 8410B TP's)

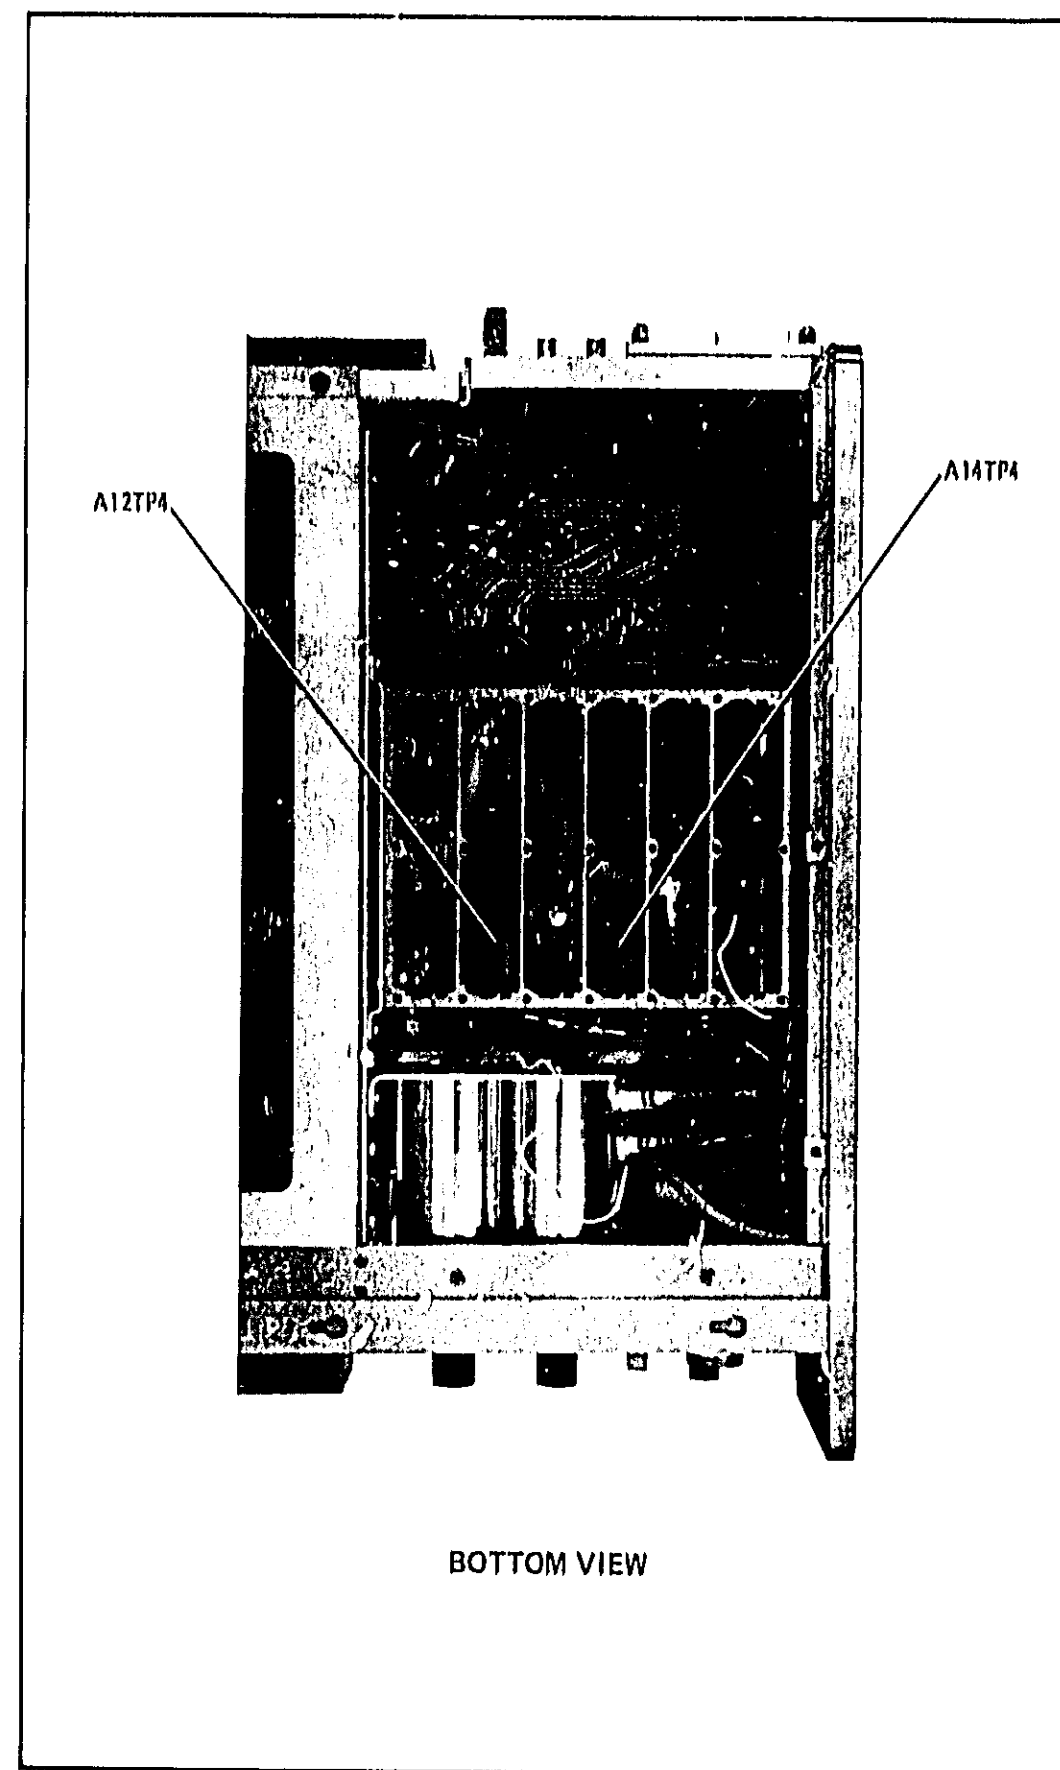


Figure 8-22. Test Points for 8411A Troubleshooting (2 of 2)
(Shows 8410B TP's)

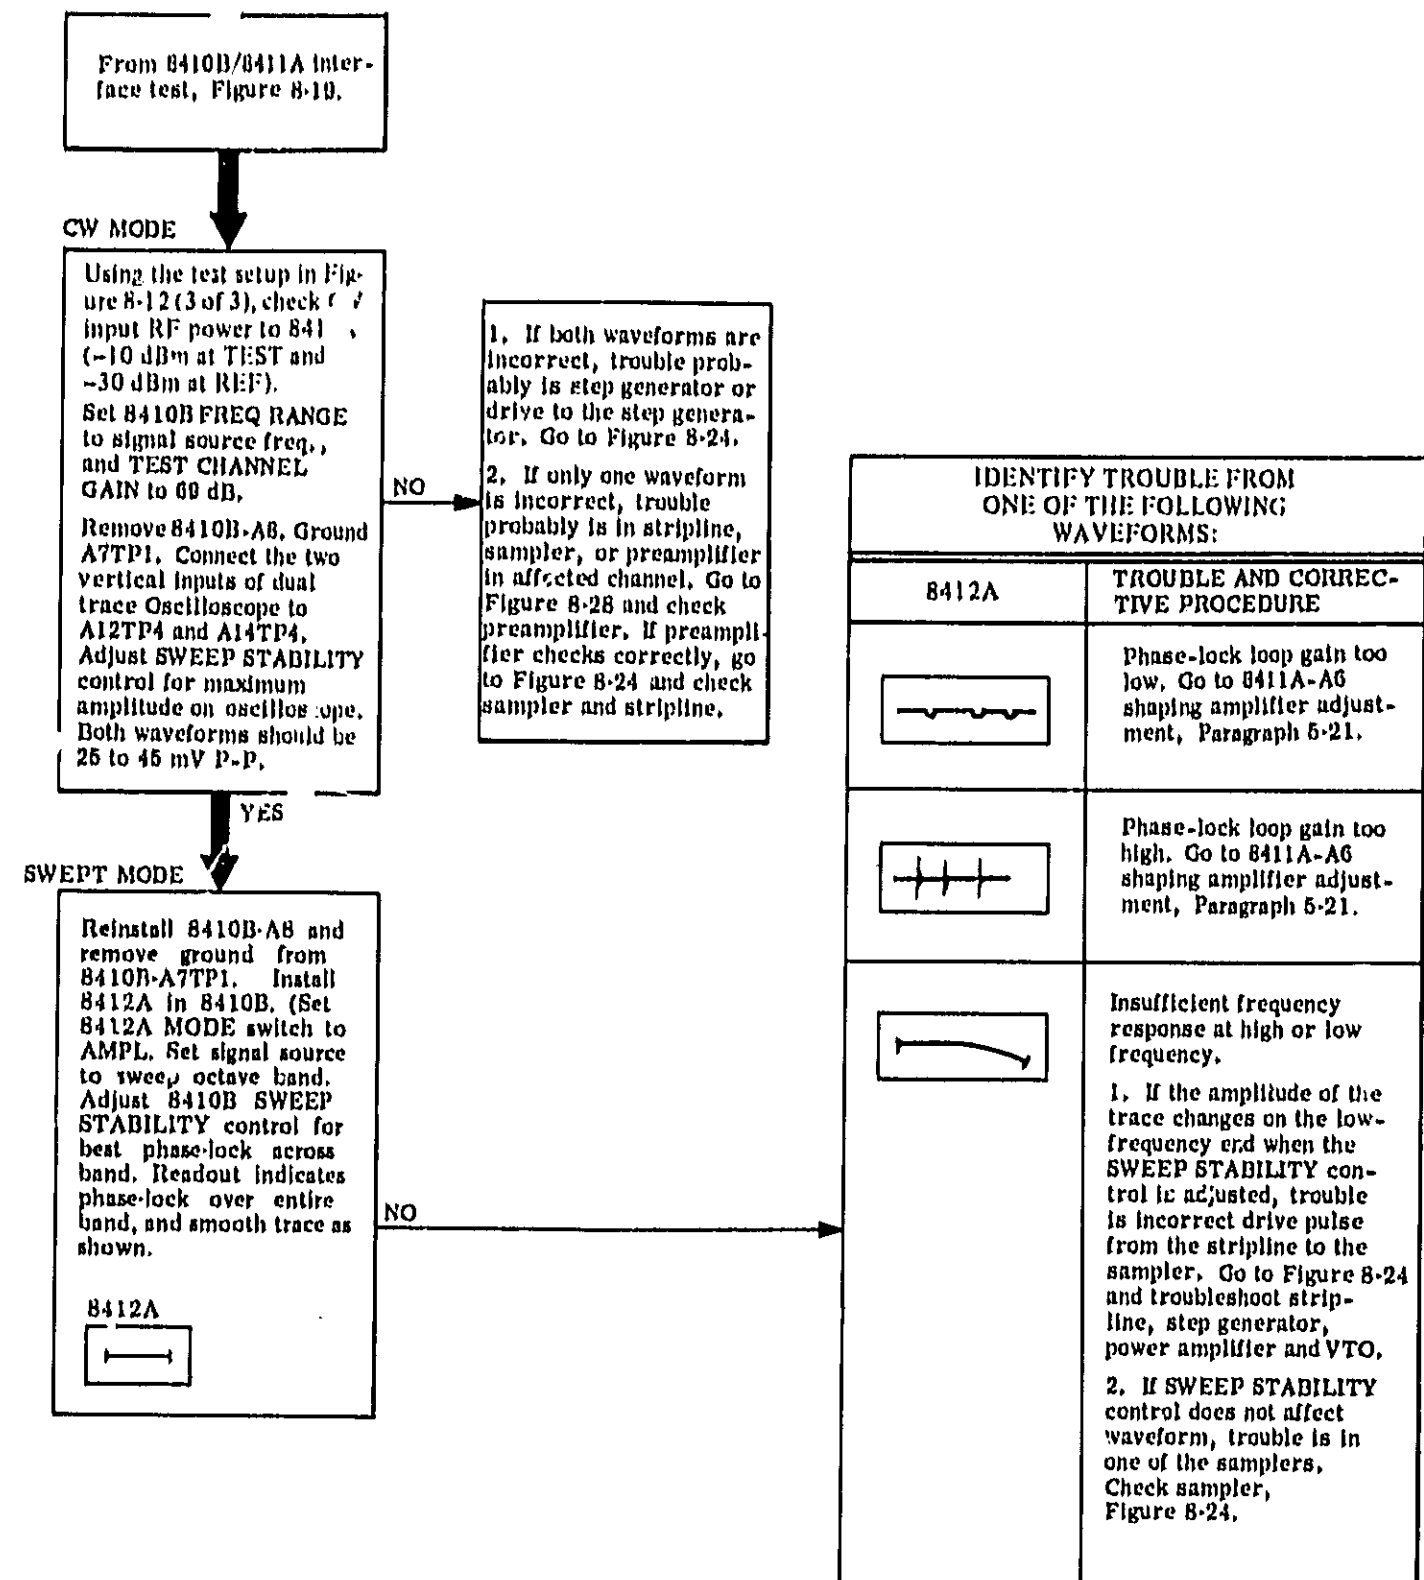


Figure 8-23. Model 8411A Troubleshooting

8411A POWER AMP A3, STRIPLINE, AND SAMPLERS A1 AND A2

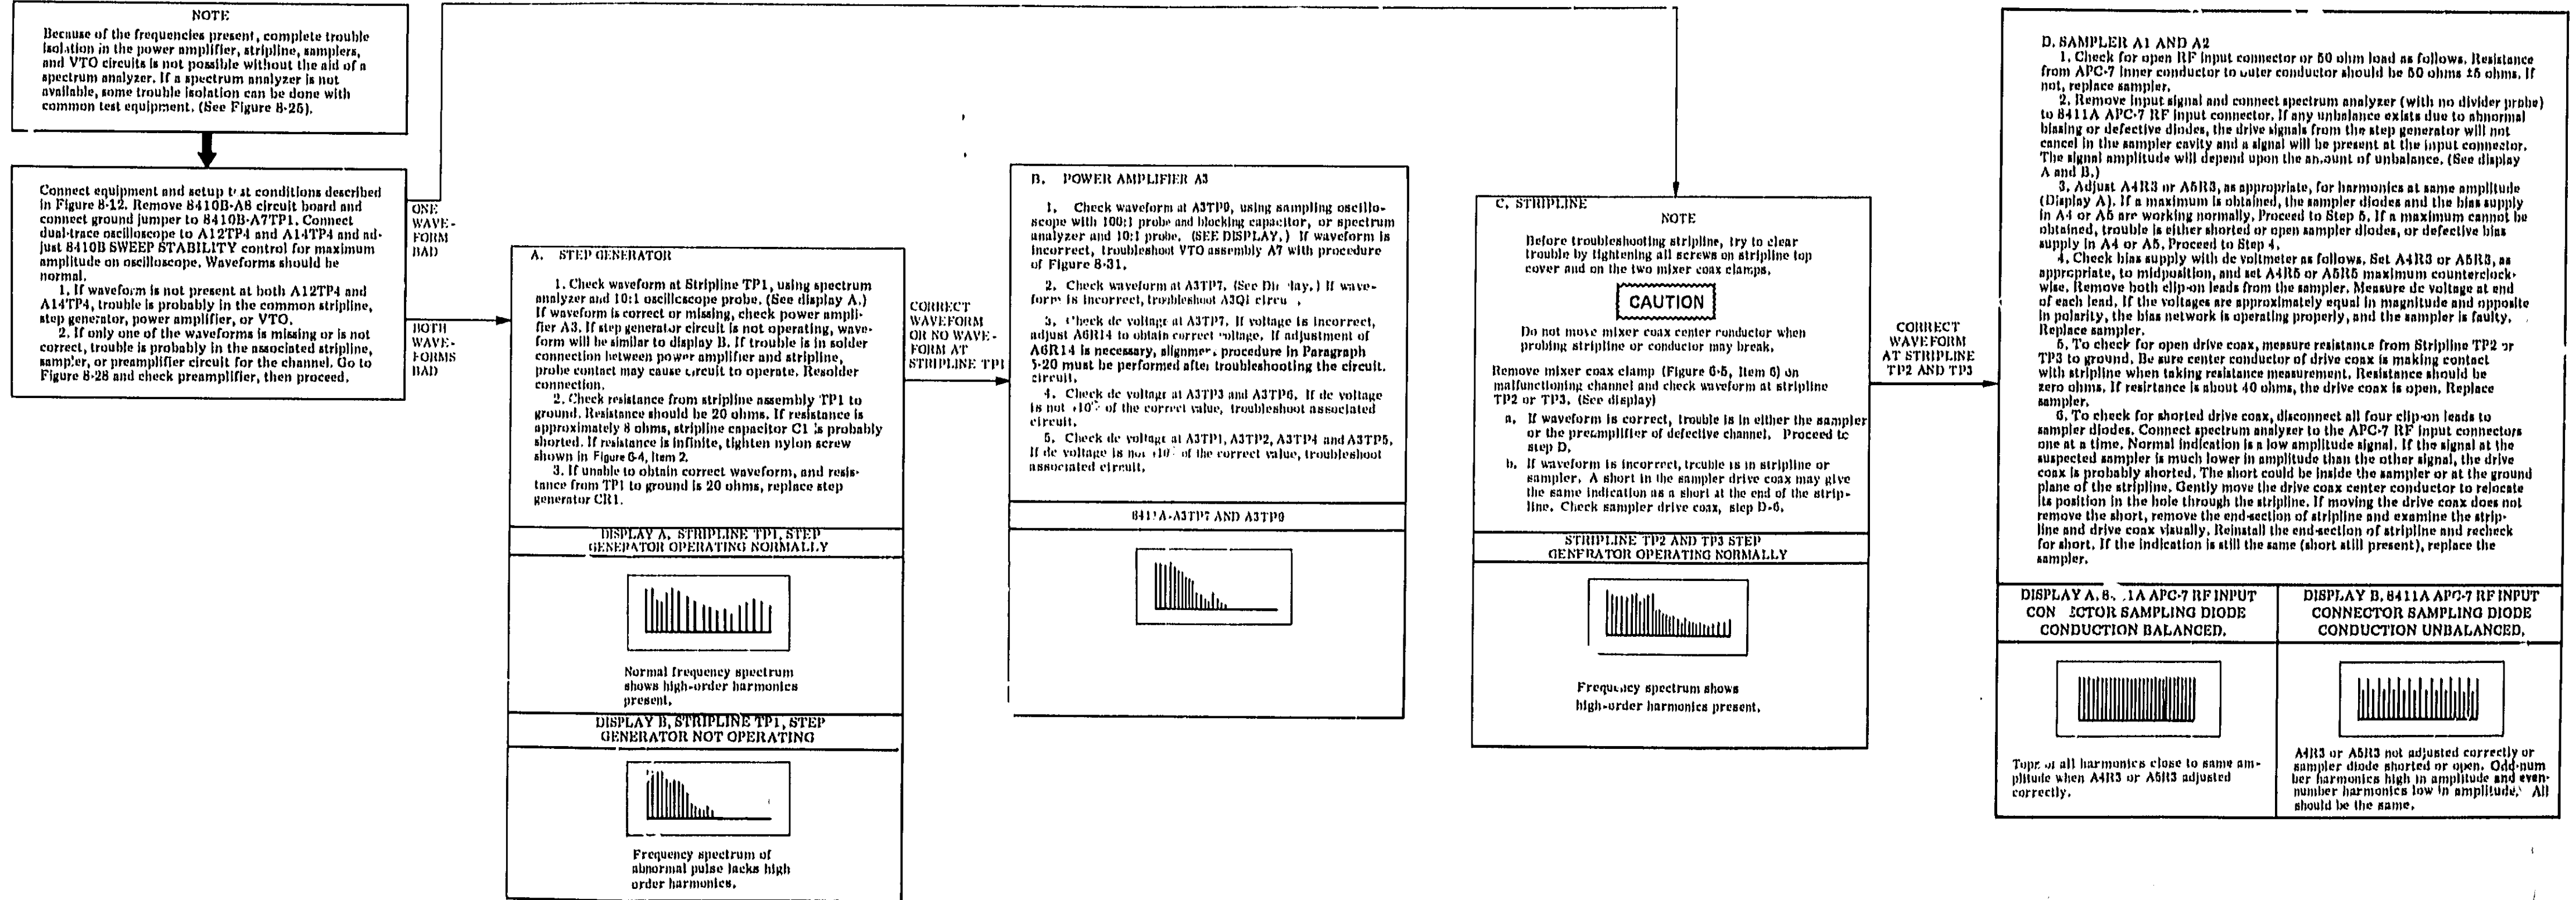


Figure 8-24. 8411A-A1, A2, A3, and Stripline Troubleshooting

8411A POWER AMPLIFIER A3, STRIPLINE, AND SAMPLERS A1 AND A2
ALTERNATE PROCEDURE USING COMMON TEST EQUIPMENT

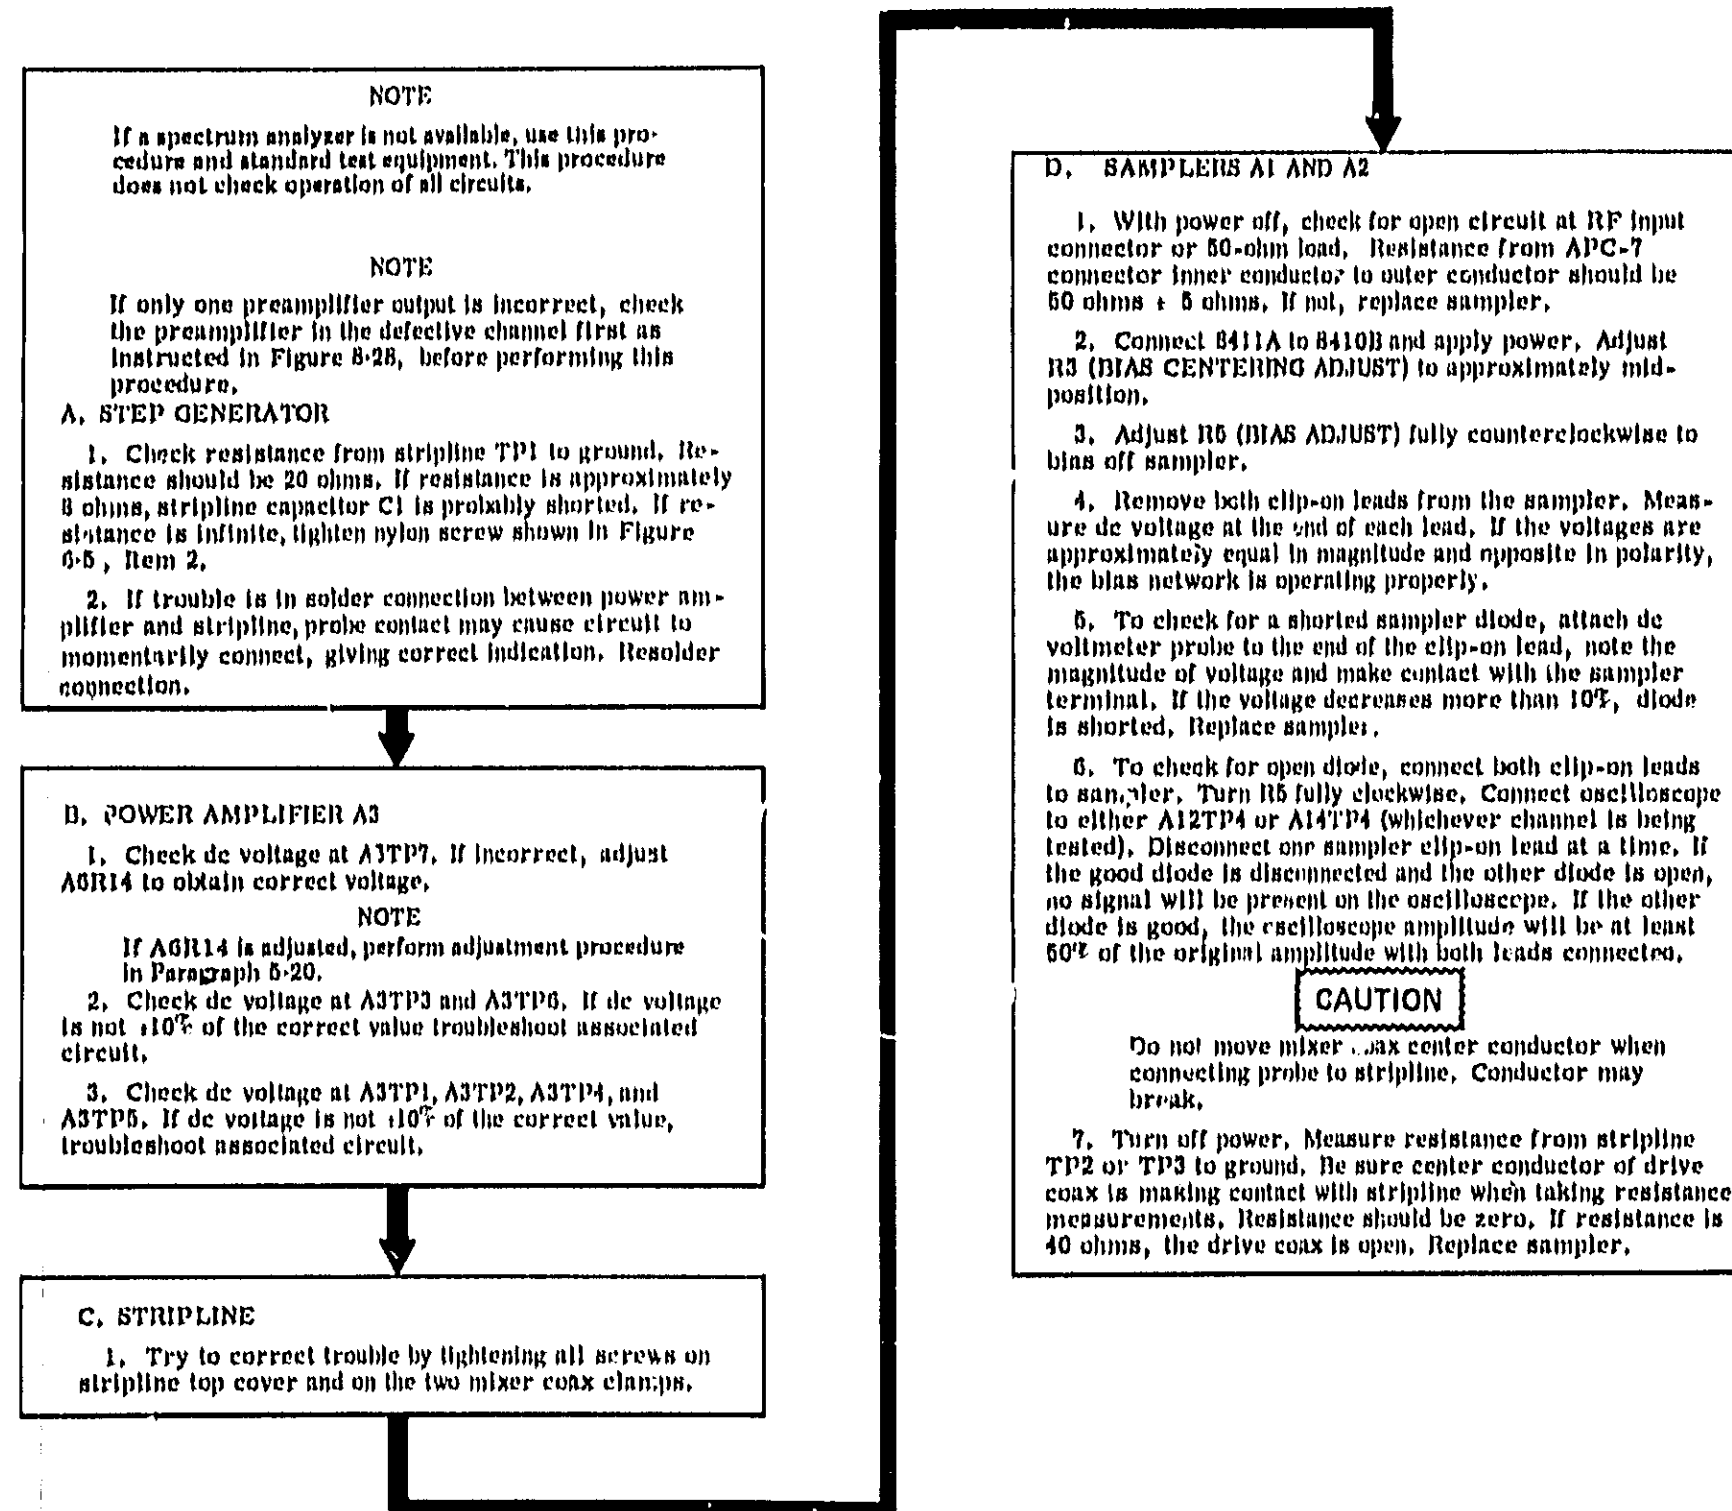


Figure 8-25. 8411A-A1, A2, A3 and Stripline Troubleshooting Using Common Test Equipment

8411A STRIPLINE, SAMPLERS A1 AND A2, AND POWER AMPLIFIER A3,
CIRCUIT DESCRIPTION

STRIPLINE AND SAMPLERS

Sampler diodes A1CR1, A1CR2, A2CR1, and A2CR2 are reverse-biased by a dc voltage from preamplifiers A4 and A5. A harmonic-rich local oscillator signal from step generator CR1 is applied to the diode mixers in the sampler. Harmonics of the local oscillator mix with the RF input signal, producing an IF signal at A4 and A5. When the system is phase-locked, a harmonic of the local oscillator (VTO) is 20.278 MHz above the RF input signal, giving a difference IF of 20.278 MHz.

POWER AMPLIFIER

The local oscillator signal from the VTO (62 to 154 MHz) is applied to power amplifier A3Q1—A3Q7. This high amplitude signal from the power amplifier is applied across step generator CR1. During the positive-going half cycle of the signal,

step-recovery diode CR1 conducts. As the signal starts in the negative direction, CR1 continues to conduct because of the stored charge in the diode. When the stored charge is depleted, conduction through the diode abruptly ceases, producing a fast-rise-time pulse at C1. This pulse, rich in harmonic content, is applied to the sampling diodes in A1 and A2.

DRIVER

The base bias of A3Q1 is adjusted by BIAS ADJUST potentiometer A6R14. This adjustment sets the dc voltage at A3Q1 collector, which forward-biases the bases of A3Q2 and A3Q5. Forward bias at A3Q2 and A3Q5 determines the operating point and, thus, the gain of the amplifiers. This controls the peak-to-peak amplitude of the signal applied to the step generator and thus, controls the amplitude of the signal applied to samplers A1 and A2.

8411A PREAMPLIFIERS A4 AND A5

8411A PREAMPLIFIER A4 AND A5 TROUBLESHOOTING

PRELIMINARY CHECK

Check output of both preamplifiers at 8411A-A4TP3 and 8411A-A5TP3 using standard test setup described in Figure 8-12. If both outputs are incorrect, trouble is in the common stripline, step generator, or drive to the step generator. Go to Figure 8-24. If output is incorrect from only one of the preamplifiers, the trouble is in the associated strip line, sampler, or preamplifier. Check the preamplifier as follows.

TEST PREAMP A5 DEFECTIVE

Connect 20, 278 MHz signal source to the 8411A TEST channel APC-7 input connector. Connect dual trace oscilloscope to A5TP1 and A5TP3. Adjust output from signal source for a signal amplitude at A5TP1 of 1 division on the oscilloscope set to the most sensitive range. (Do not exceed 50 mW RF damage level at APC-7 connectors.) Determine voltage gain through preamplifier. Gain should be 2 or greater.

GAIN OF A5 LESS THAN 2

Adjust A5R20 fully clockwise (maximum gain). If preamplifier gain is still low, check gain through each stage to isolate trouble.

GAIN OF A5 OK

Preamplifier gain checks OK. Check stripline and Sampler A2 (Figure 8-26).

REFERENCE PREAMP A4 DEFECTIVE

Connect 20, 278 MHz signal source to the 8411A REFERENCE channel APC-7 input connector. Connect dual trace oscilloscope to A4TP3 and to the base of A4Q3. Adjust output of signal source for a signal amplitude at base of A4Q3 of 1 division on the oscilloscope set to most sensitive range. (Do not exceed 50 mW RF damage level at APC-7 connectors.) Determine voltage gain from base of A4Q3 to A4TP3. Disconnect oscilloscope from A4TP3 and connect it to A4TP1. Adjust signal source output for a signal amplitude of 1 division on oscilloscope. (Do not exceed 50 mW RF damage level at APC-7 connector.) Determine voltage gain through A4 by multiplying together the gain of the two sections measured. Gain should be 25 or greater.

GAIN OF A4 LESS THAN 25

Change the value of A4R21 to 75 ohms (maximum gain). If preamplifier gain is still low, check gain through each stage to isolate trouble.

GAIN OF A4 OK

A4 preamplifier gain OK. Check stripline and sampler A1 (Figure 8-25).

A4 SAMPLING DIODE BIAS SUPPLY

The sampling-diode bias supply produces a small positive and a small negative dc voltage to reverse-bias the sampling diodes in A1. Bias centering adjust A4R3 and bias level adjust A4R5 allow bias voltage adjustment of the diodes in sampler A1 for best sampling efficiency. This produces two equal-amplitude signals at the input of A4 that are added and applied to the bandpass filter A4L2, A4L3, A4L5, A4C5 and A4C6 at the input of the reference-channel preamplifier. Circuit capacitance due to the sampler and stray capacitance is shown across A4L2, forming a resonant circuit at 20.278 MHz.

BANDPASS FILTER

The bandpass filter has a bandwidth of 20 MHz in order to pass the required frequency range when the phase-lock loop is searching for a lock frequency. However, it still prevents unwanted signals from being passed on to the 8410B Network Analyzer.

A4 28 dB AMPLIFIER

The reference IF amplifier amplifies the 20.278 MHz signal by 28 dB. Gain through A4Q3, A4Q4, and A4Q5 is adjusted by the selection of the value of A4R21. The approximate gain through the three-transistor section is the ratio of A4R22 divided by A4R21. The gain of A4Q1 and Q2 is adjusted by the selection of the value of A4R14.

A5 SAMPLING BIAS SUPPLY

The sampling-diode bias supply produces a small positive and a small negative dc voltage to reverse-bias the sampling diodes in A2. Bias centering adjust A5R3 and bias level adjust A5R5 allow bias voltage adjustment of the diodes in sampler A2 for best sampling efficiency. This produces two equal-amplitude signals at the input of A5 that are added and applied to the bandpass filter at the input of the test-channel preamplifier.

Variable capacitor A5C13 is used to balance the test and reference channels for best isolation.

A5 BANDPASS FILTER

The bandpass filter composed of A5L1 and A5R7 also has the sampler and stray-capacitance shown in dotted lines. This capacity together with A5L1 resonates at 20.278 MHz. This passes the IF frequency and rejects unwanted signals from the test channel.

A5 6 dB AMPLIFIER


The 6-dB test-channel preamplifier has only 10 MHz bandwidth compared to 20 MHz in the reference channel. This gives a higher signal-to-noise ratio for the small levels passed by the test channel preamplifier. The gain of the amplifier can be adjusted by A5R20 and A5R21.

Figure 8-28. 8411A-A4 and A5 Troubleshooting


SERVICE

INFORMATION

CON'T

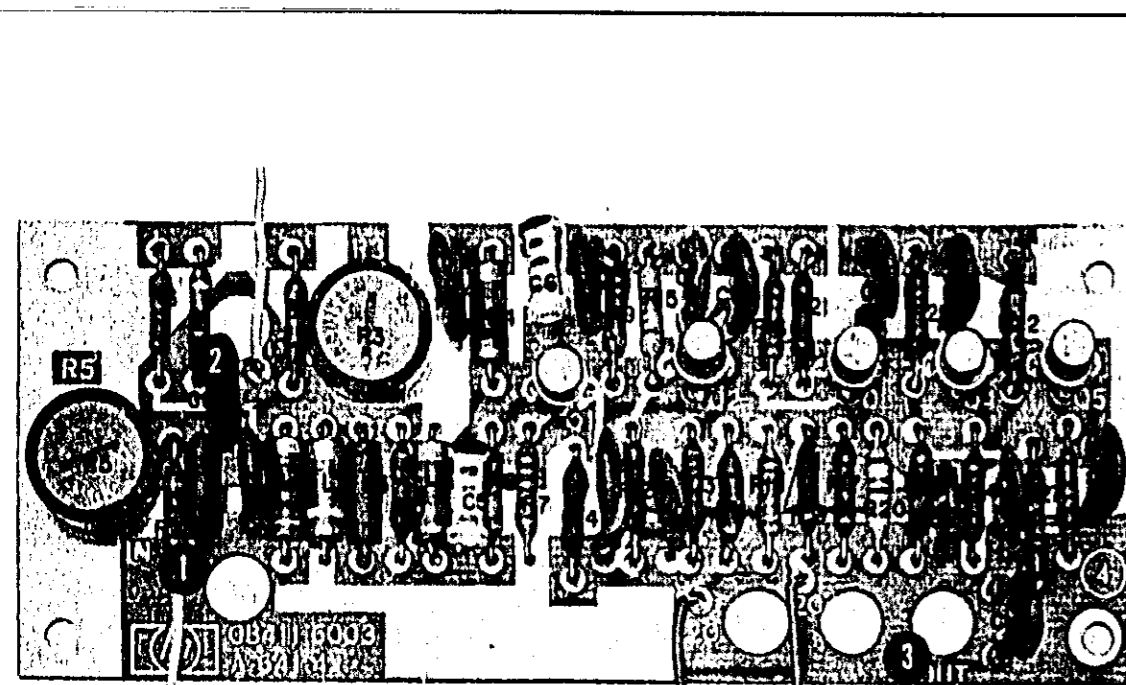

A4

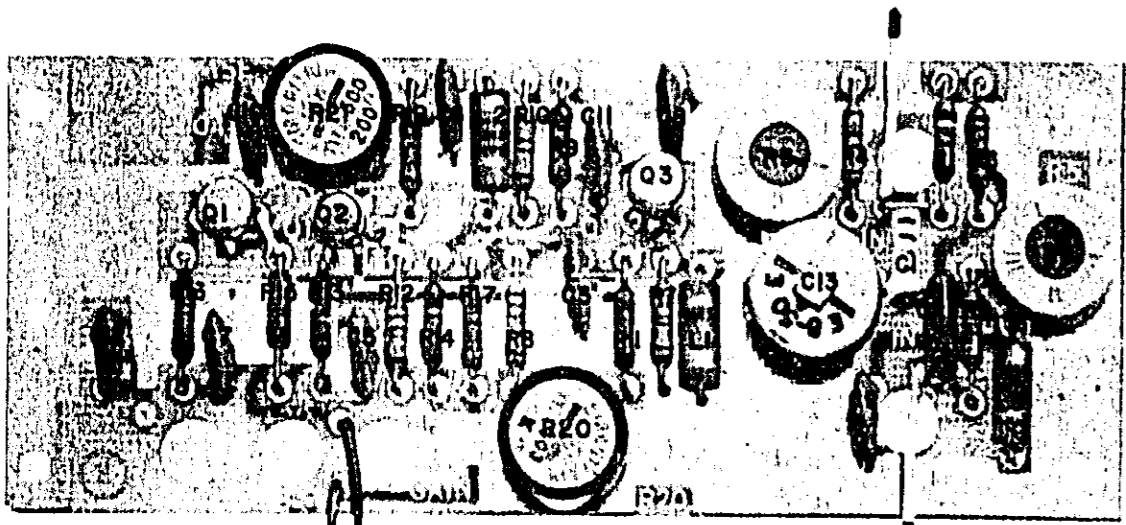

A5

Figure 8-29. 8411A-A4 and A5 Parts Location


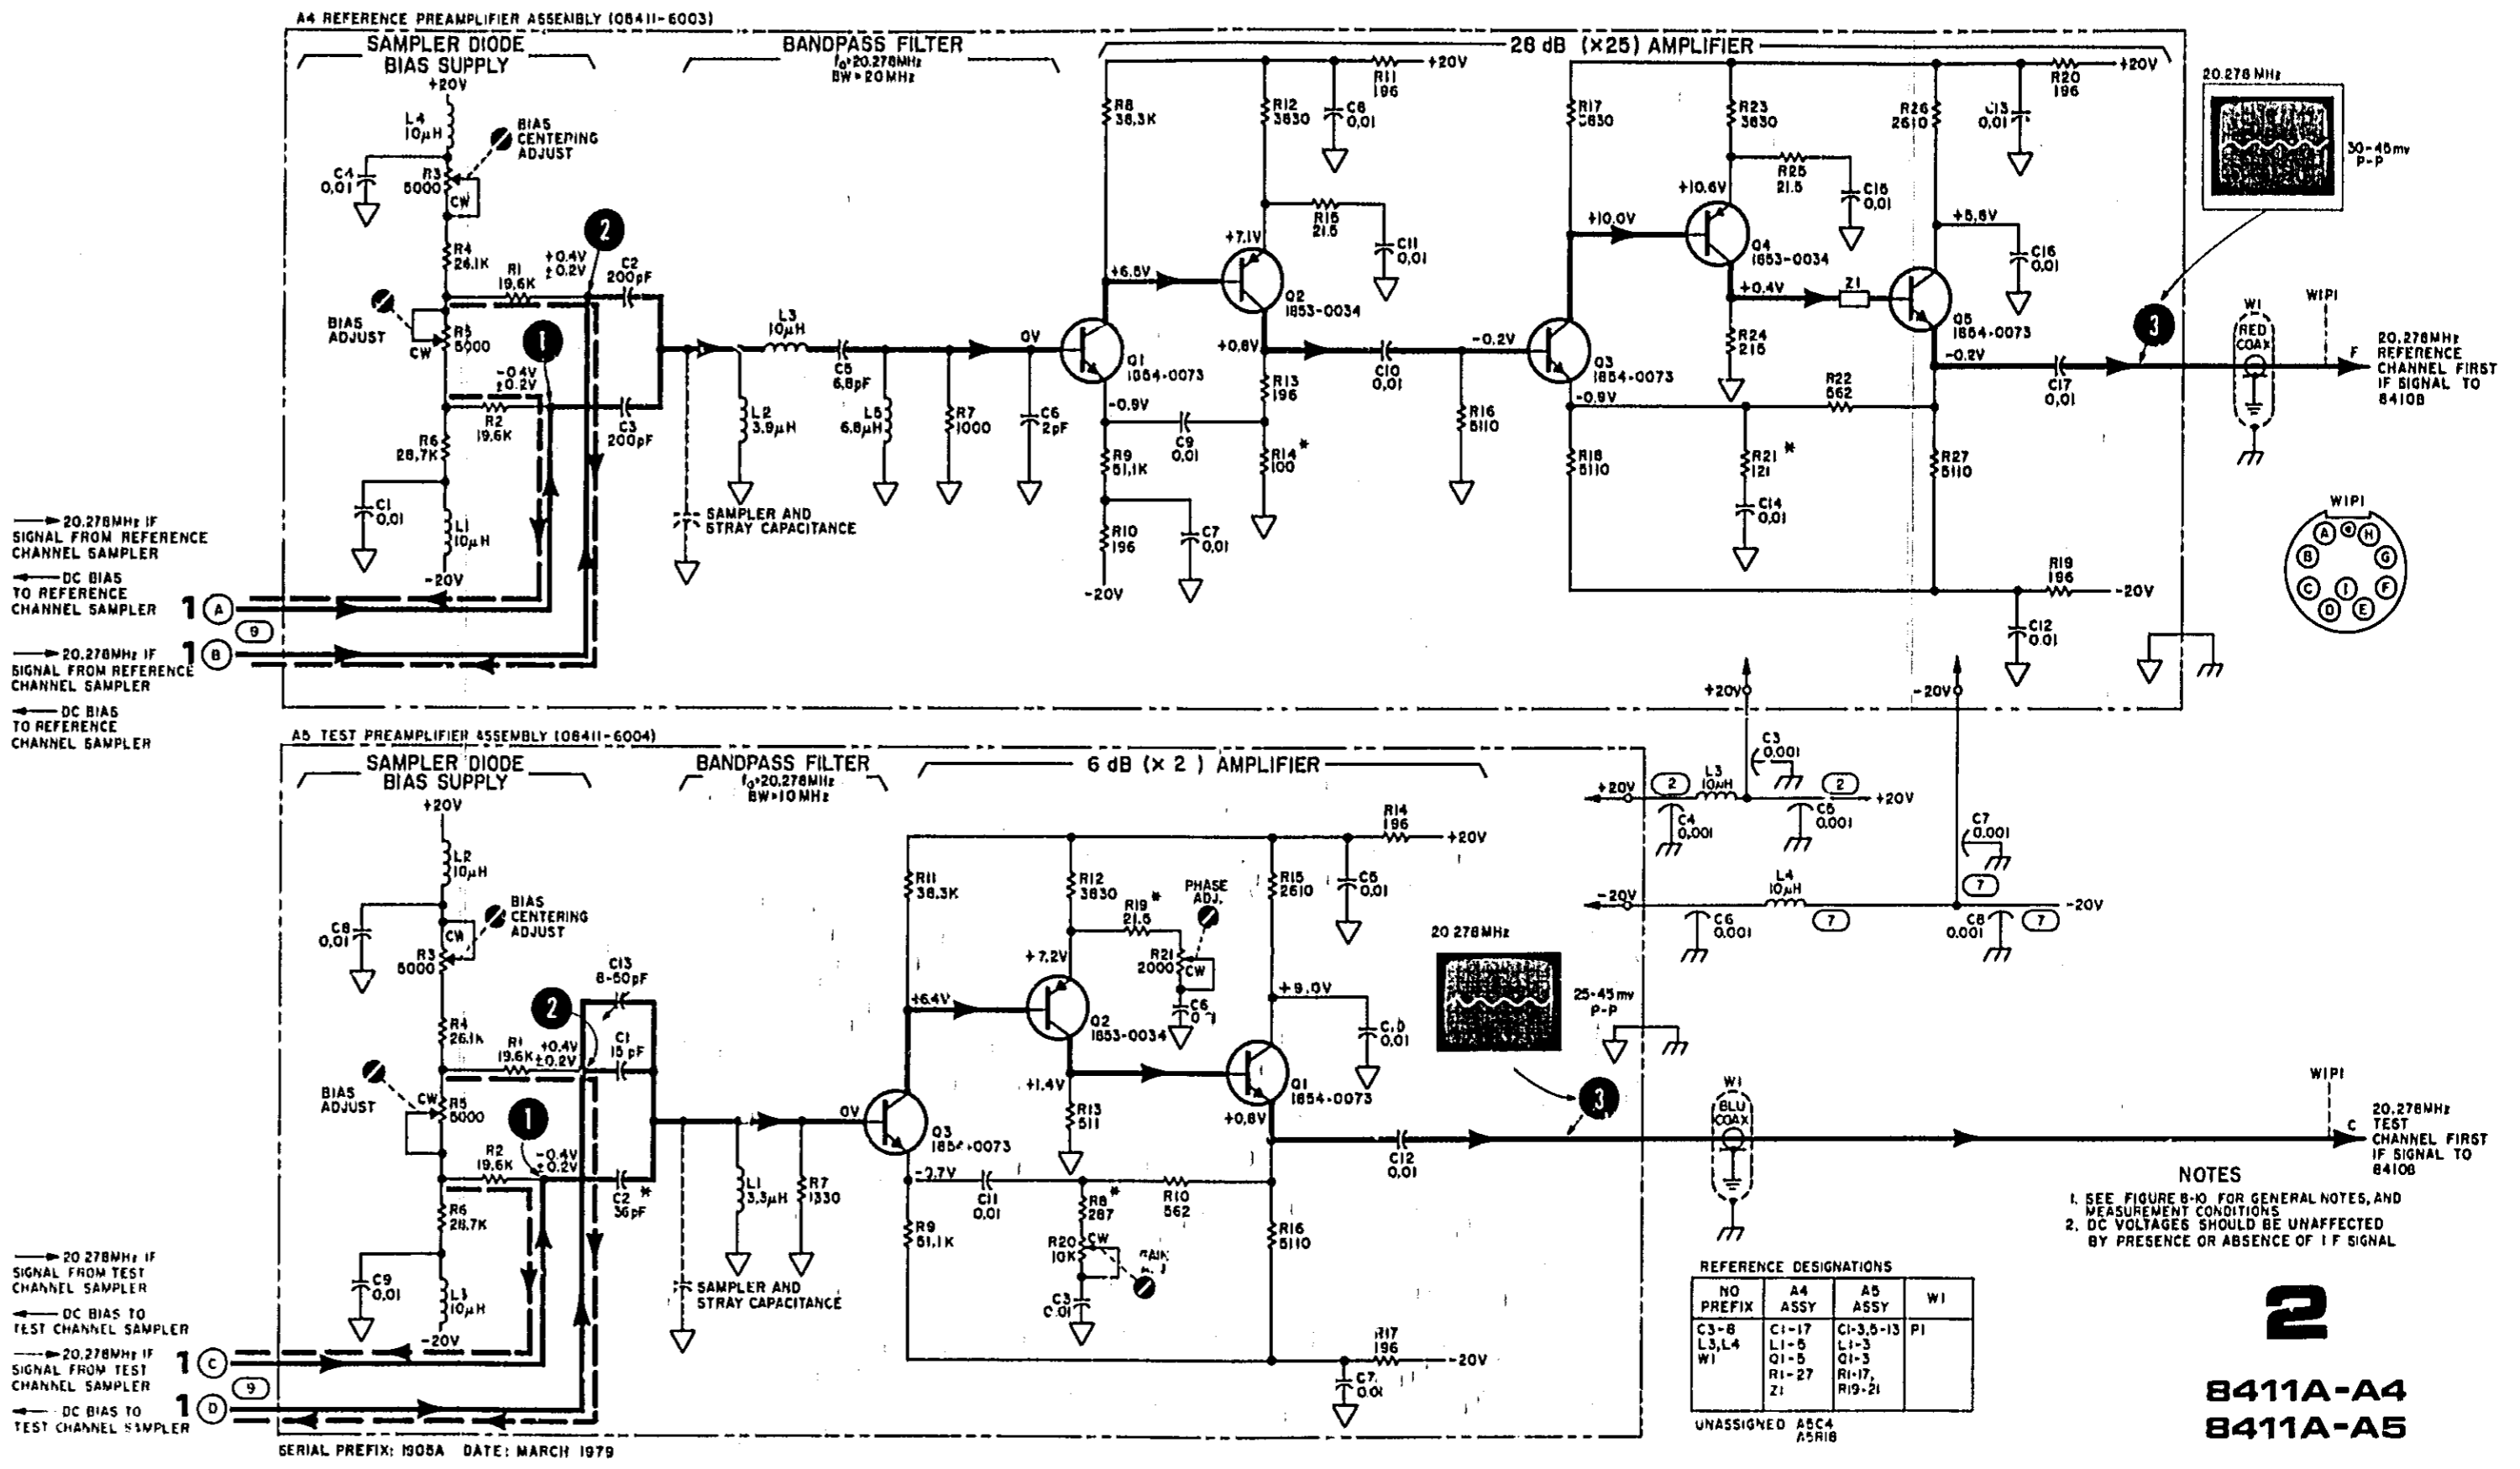


Figure 8-30. 8411A-A4 and A5 Schematic Diagram

8411A SHAPING AMPLIFIER A6 AND 8411A VOLTAGE TUNED OSCILLATOR A7 TROUBLESHOOTING

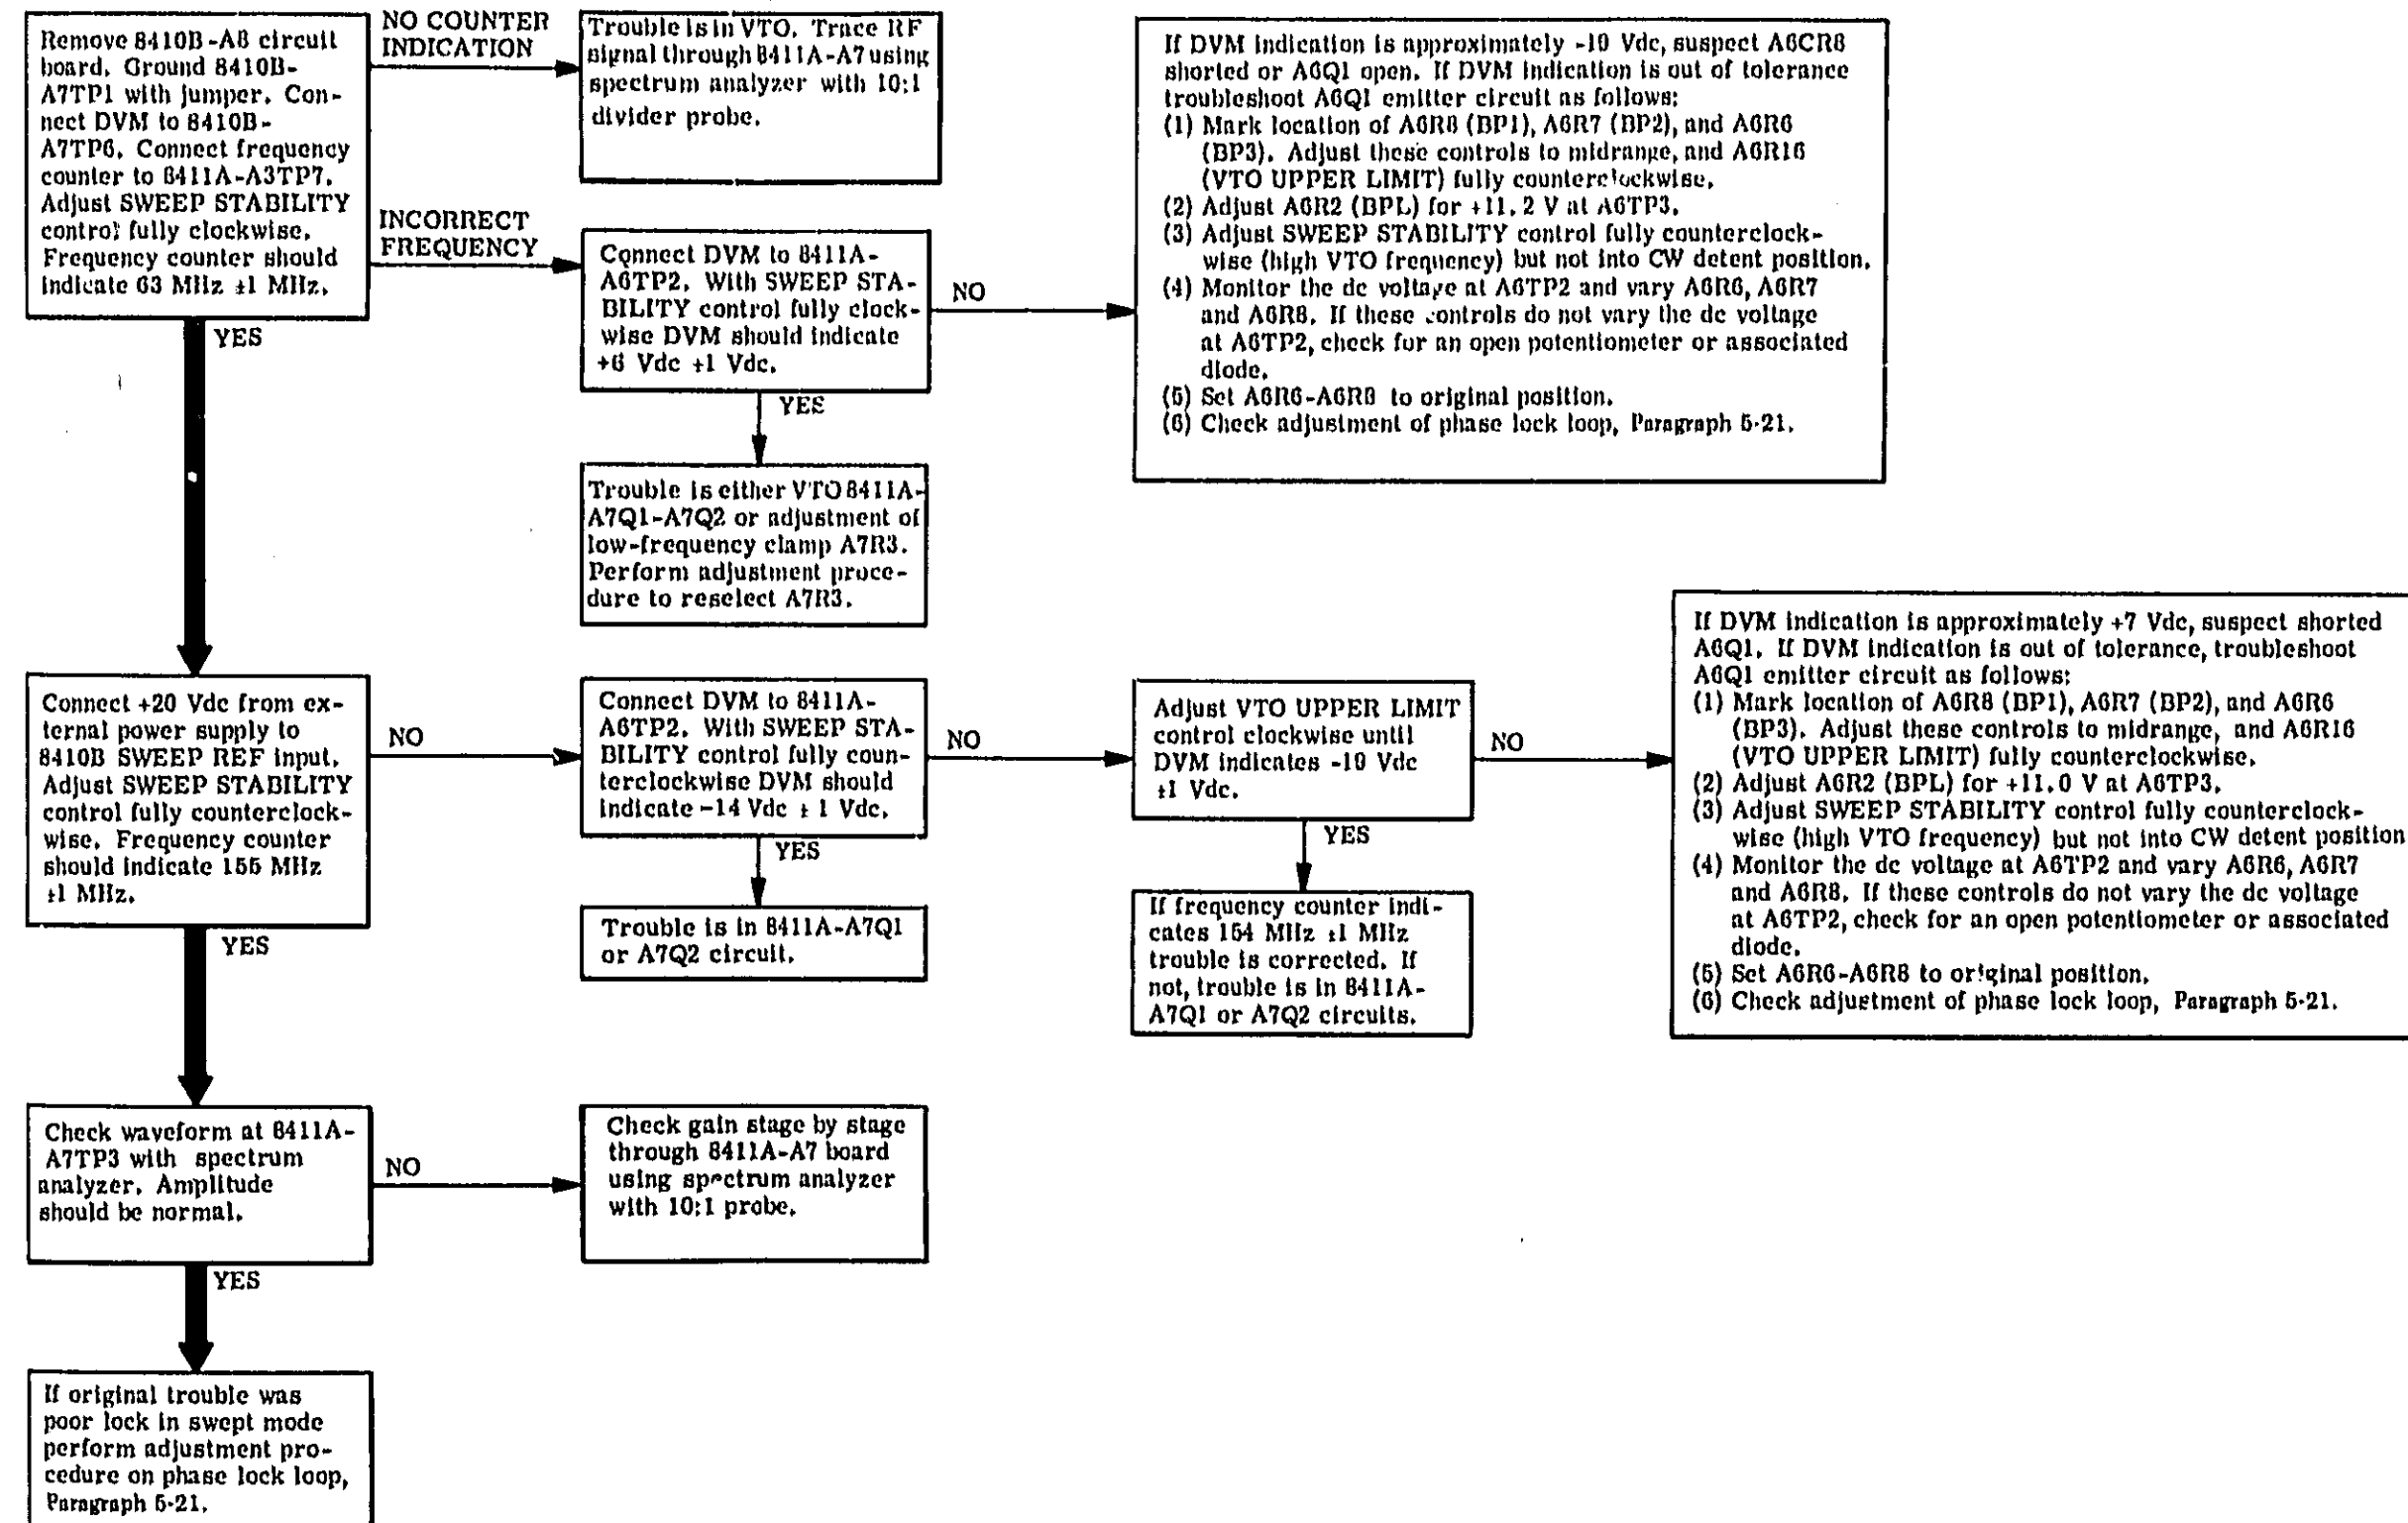

8411A SHAPING AMPLIFIER A6 AND VTO A7, CIRCUIT DESCRIPTION

VARIABLE GAIN AMPLIFIER

Variable gain amplifier A6Q1 converts the error-voltage range produced by the 8410B phase-lock section to the range required to tune the VTO in the range of 65 to 155 MHz.


GAIN SHAPING NETWORK

The network composed of A6R1 through A6R8 and A6CR1 through A6CR4 in the emitter circuit of A6Q1, shapes the output voltage characteristics so that the VTO tunes linear with changing input voltage to A6. This allows the voltage-tuned-oscillator frequency to track with the RF input signal at the 8411A, obtaining the most stable phase-lock during swept-frequency operation. A6R6 affects the high-frequency section, A6R7 affects the mid-frequency section, and A6R8 affects the low-frequency section. A6CR8 sets the upper VTO frequency limit by clamping the maximum negative tuning voltage to the voltage set at A6R16.


VOLTAGE-TUNED OSCILLATOR

The voltage-tuned oscillator (VTO), A7Q1 and A7Q2 is a free-running multivibrator with a frequency range of 65 to 155 MHz. The frequency of the multi-vibrator is controlled by voltage-variable capacitive diodes, A7CR1 and A7CR2. DC control voltage from collector of A6Q1 is applied to the junction of A7CR1 and A7CR2, providing voltage control of the oscillator frequency. Increasing the reverse bias applied to A7CR1 and A7CR2 reduces the capacitance of the diodes, thus increasing the frequency of the multivibrator.

With an input control voltage of approximately +6.5 Vdc from the collector of A6Q1, A7R5 is adjusted for an oscillator frequency of 65 MHz. A7R3 is adjusted to clamp the upper-voltage limit of the control-voltage line to a voltage (approximately +6.5 Vdc) that limits the lowest frequency of the VTO to 62 ± 1 MHz. The upper-frequency VTO limit of 154 ± 1 MHz is controlled through clamping diode A6CR8 and A6R16.

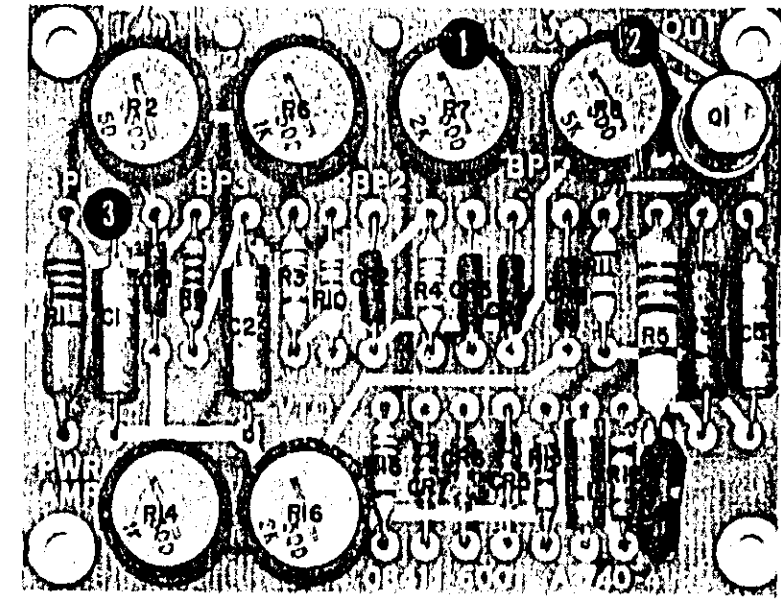

A6

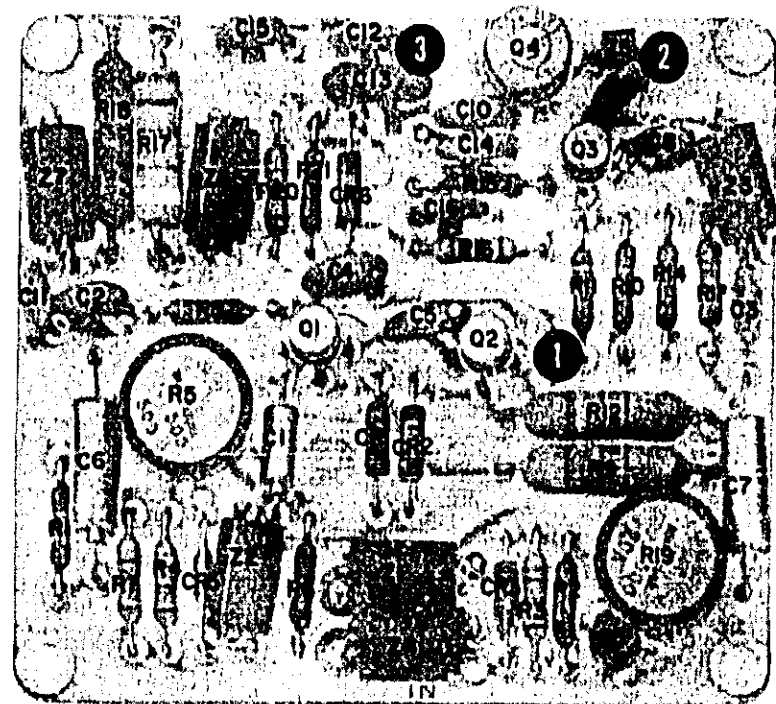

A7

Figure 8-32. 8411A-A6 and A7 Parts Location


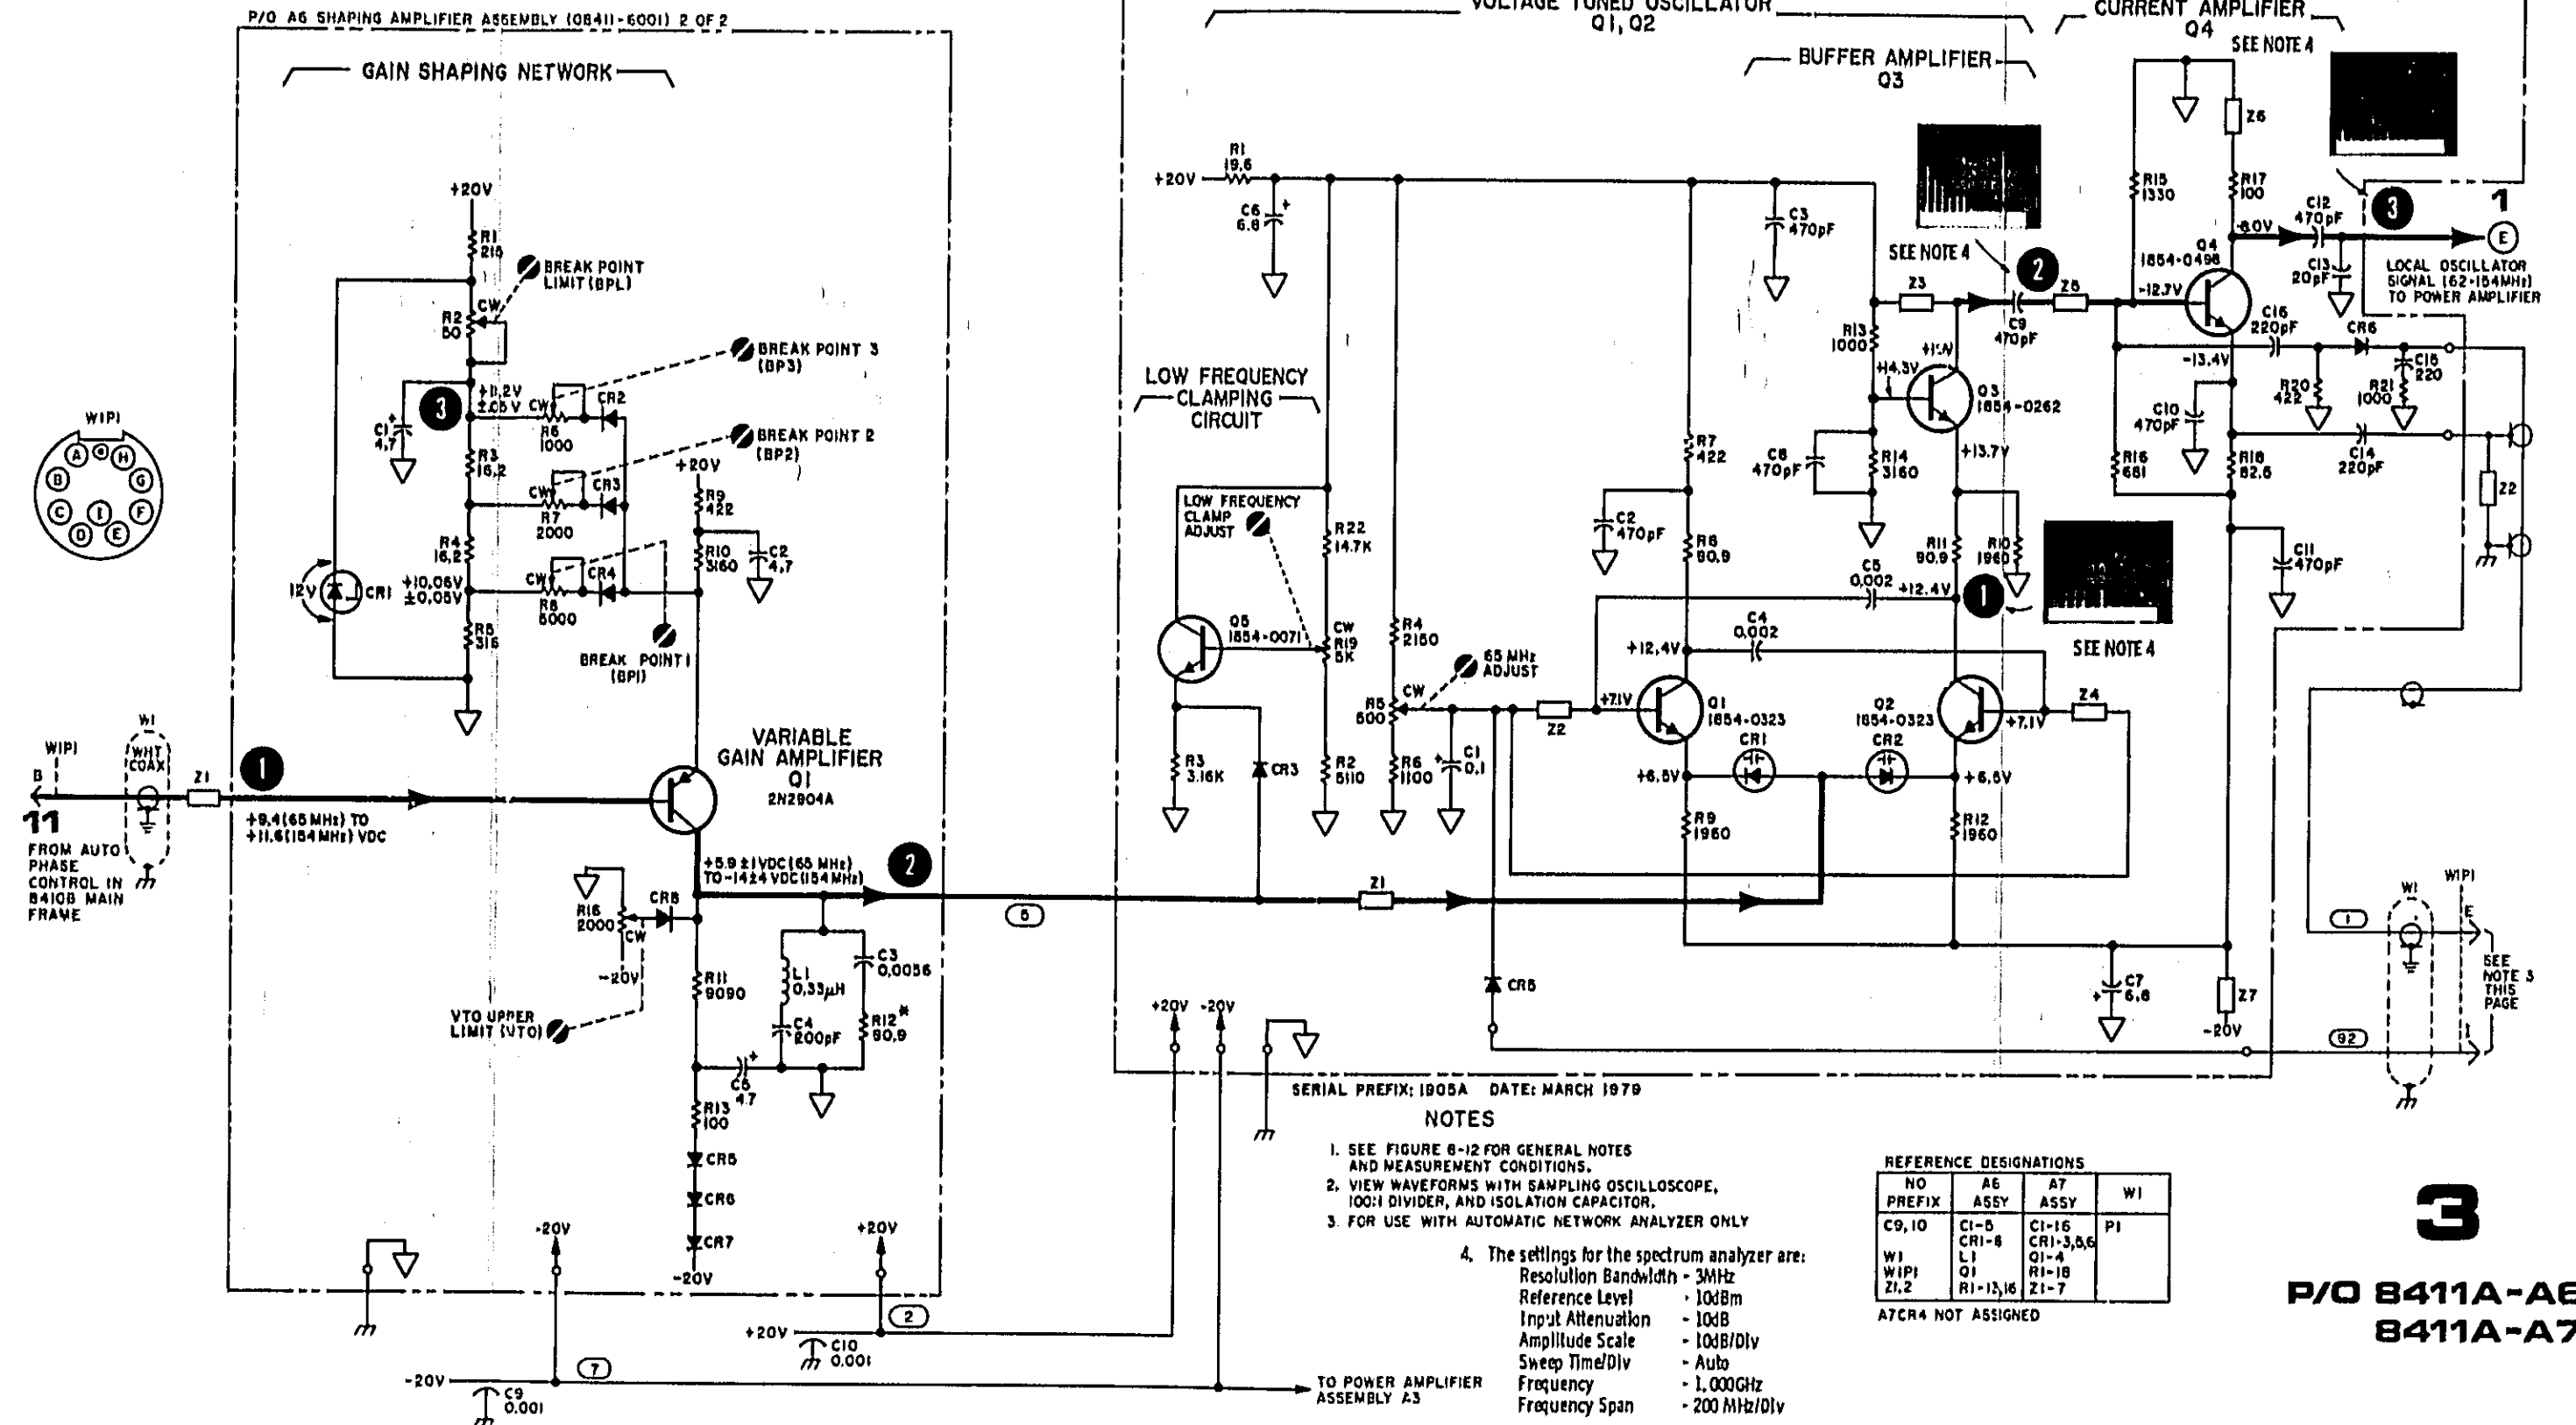


Figure 8-33. 8411A-A6 and A7 Schematic Diagram

**8410B TEST AND REFERENCE AGC AMPLIFIERS A12 AND A14,
CIRCUIT DESCRIPTION**

8410B TEST AND REFERENCE AGC AMPLIFIERS A12 AND A14 TROUBLESHOOTING

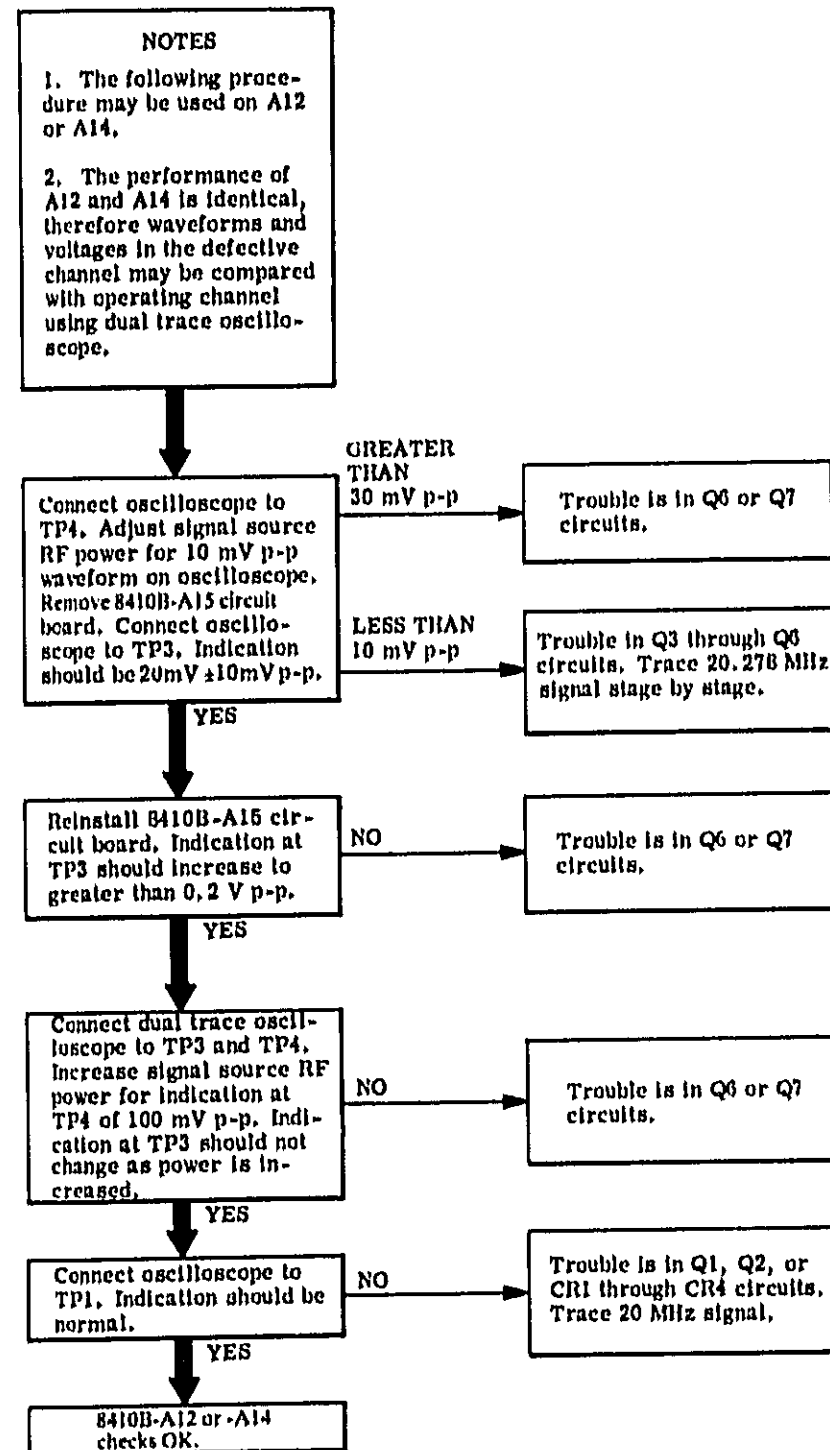

REFERENCE CHANNEL 20.278 MHz IF AMPLIFIER

The two series diodes, A14CR5 and A14CR6, act as a variable resistance between A14C17 and ground by-pass A14C20. Effective resistance through the diodes is changed by changing the dc current through the diodes. This is controlled by the AGC signal, which is applied at the base of A14Q7. A positive AGC signal at A14Q7 base causes A14Q7 to conduct, forward biasing diodes A14CR5 and A14CR6. This gives minimum impedance through the series resonant bandpass circuit, A14C17 and A14L2 to ground, and therefore produces maximum gain through feedback pair A14Q5—A14Q6. Minimum gain through A14Q5—A14Q6 is produced by a zero-volt AGC signal.

A14Q5 and A14Q6 compose a feedback-pair amplifier. A14R23 provides fixed feedback between transistors. Gain of the A14Q5—A14Q6 stage is controlled by an RF bandpass circuit from the emitter of A14Q6 through CR5 and CR6 to ground. The bandpass circuit is formed by A14L2, A14C17, A14CR5, A14CR6 and A14C20 connected in series and is resonant at about 20.278 MHz.

REFERENCE CHANNEL 2ND MIXER

Differential amplifier A14Q1—A14Q2 produces two equal amplitude, 20-MHz signals of opposite

polarity at the collector of each transistor. These signals are coupled through A14C4 and A14C5 to the diode mixer.

A14CR1—A14CR4 is a balanced mixer. The 20-MHz signal from differential amplifier A14Q1 and A14Q2 mixes with the 20.278-MHz reference-channel signal. The output signal at the junction of A14CR3 and A14CR4 is the sum and difference of the two mixing signals as well as the two original signals. A14C6 bypasses the higher frequency signals allowing the 278 KHz difference signal to pass to the phase vernier circuit in A16.

Emitter follower A14Q3 is a buffer stage between bandpass filter A14C10—A14L1 and diode mixer A14CR1—A14CR4. Bandpass filter A14C10—A14L1 has a resonant frequency of about 20.278 MHz. Capacitor A14C10 has the distributed capacitance of the cable to A15 across it, forming a lump capacitance of about 50 pF.


A12 TEST AGC AMPLIFIER

A12 is identical to A14 except for the 20.278-MHz bandpass filter. A14 has an AGC output coaxial cable connected across the parallel resonant circuit (A14C10 and A14L1), providing about 18 pF in parallel with A14C10. A12 has no output cable attached, therefore A12C10 is 51 pF.

Figure 8-34. 8410B-A12 and A14 Troubleshooting

8410B REFERENCE 278 kHz AMPLIFIER A16, CIRCUIT DESCRIPTION

8410B REFERENCE 278 KHZ AMPLIFIER A16, TROUBLESHOOTING

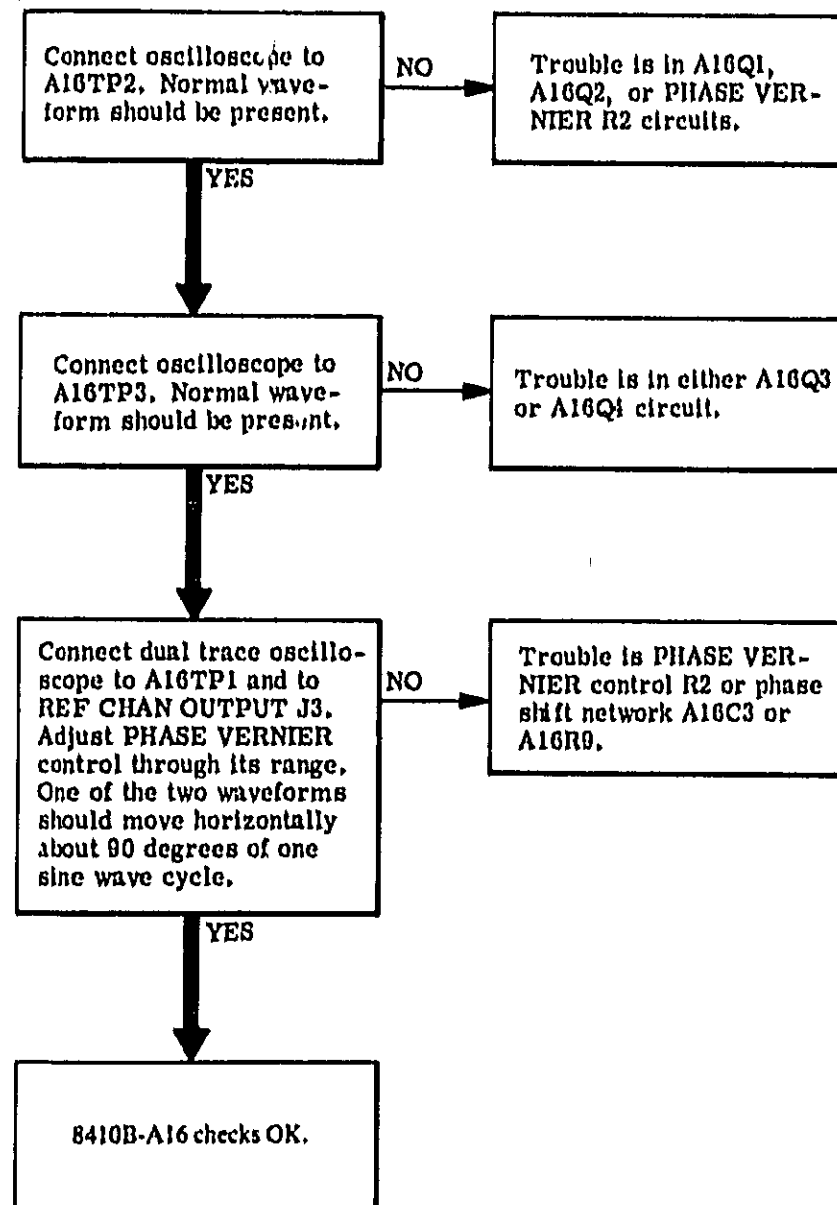

AMPLIFIER/PHASE SHIFTER

A16Q1 forms an emitter follower with unity gain through the stage.

A16Q2 and A16C2 form a variable phase-shift circuit. Phase shift from the stage input to output is obtained by adding vectorially signals passing through A16C2 and through A16Q2. Phase shift and amplitude of the signal vector through A16C2 remains constant, while the amplitude of the signal vector through A16Q2 is variable and is controlled by the setting of PHASE VERNIER control R2. With R2 set at maximum resistance, phase shift is about +10 degrees. With R2 set at minimum resistance, phase shift is about +110 degrees through the stage.


A16Q3 and A16Q4 form a feedback-pair amplifier. The gain is approximately equal to the value of A16R13 divided by A16R12. The value of A16R13 is selected so that 200 mV peak to peak at A16TP1 produces 2.0V \pm 0.3V peak to peak at A16TP3.

BANDPASS FILTER

A16C8, A16C9, A16C10, and A16L1 form a parallel-resonant circuit at 278 kHz. The value of A16C10 is selected so that the center of resonance occurs at 278 kHz. The bandwidth of the filter is 20 kHz.

Figure 8-37. 8410B-A16 Troubleshooting

A16

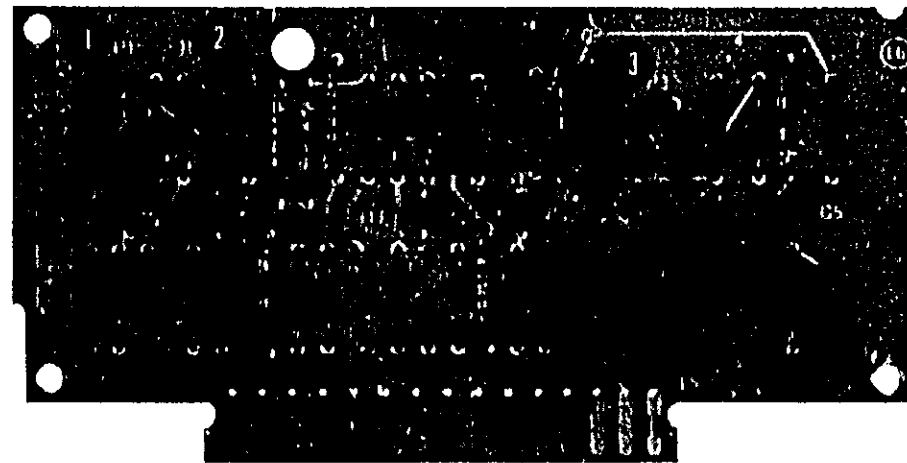

*FACTORY SELECTED VALUE.
PART MAY BE OMITTED.

Figure 8-38. 8410B-A16 Parts Location

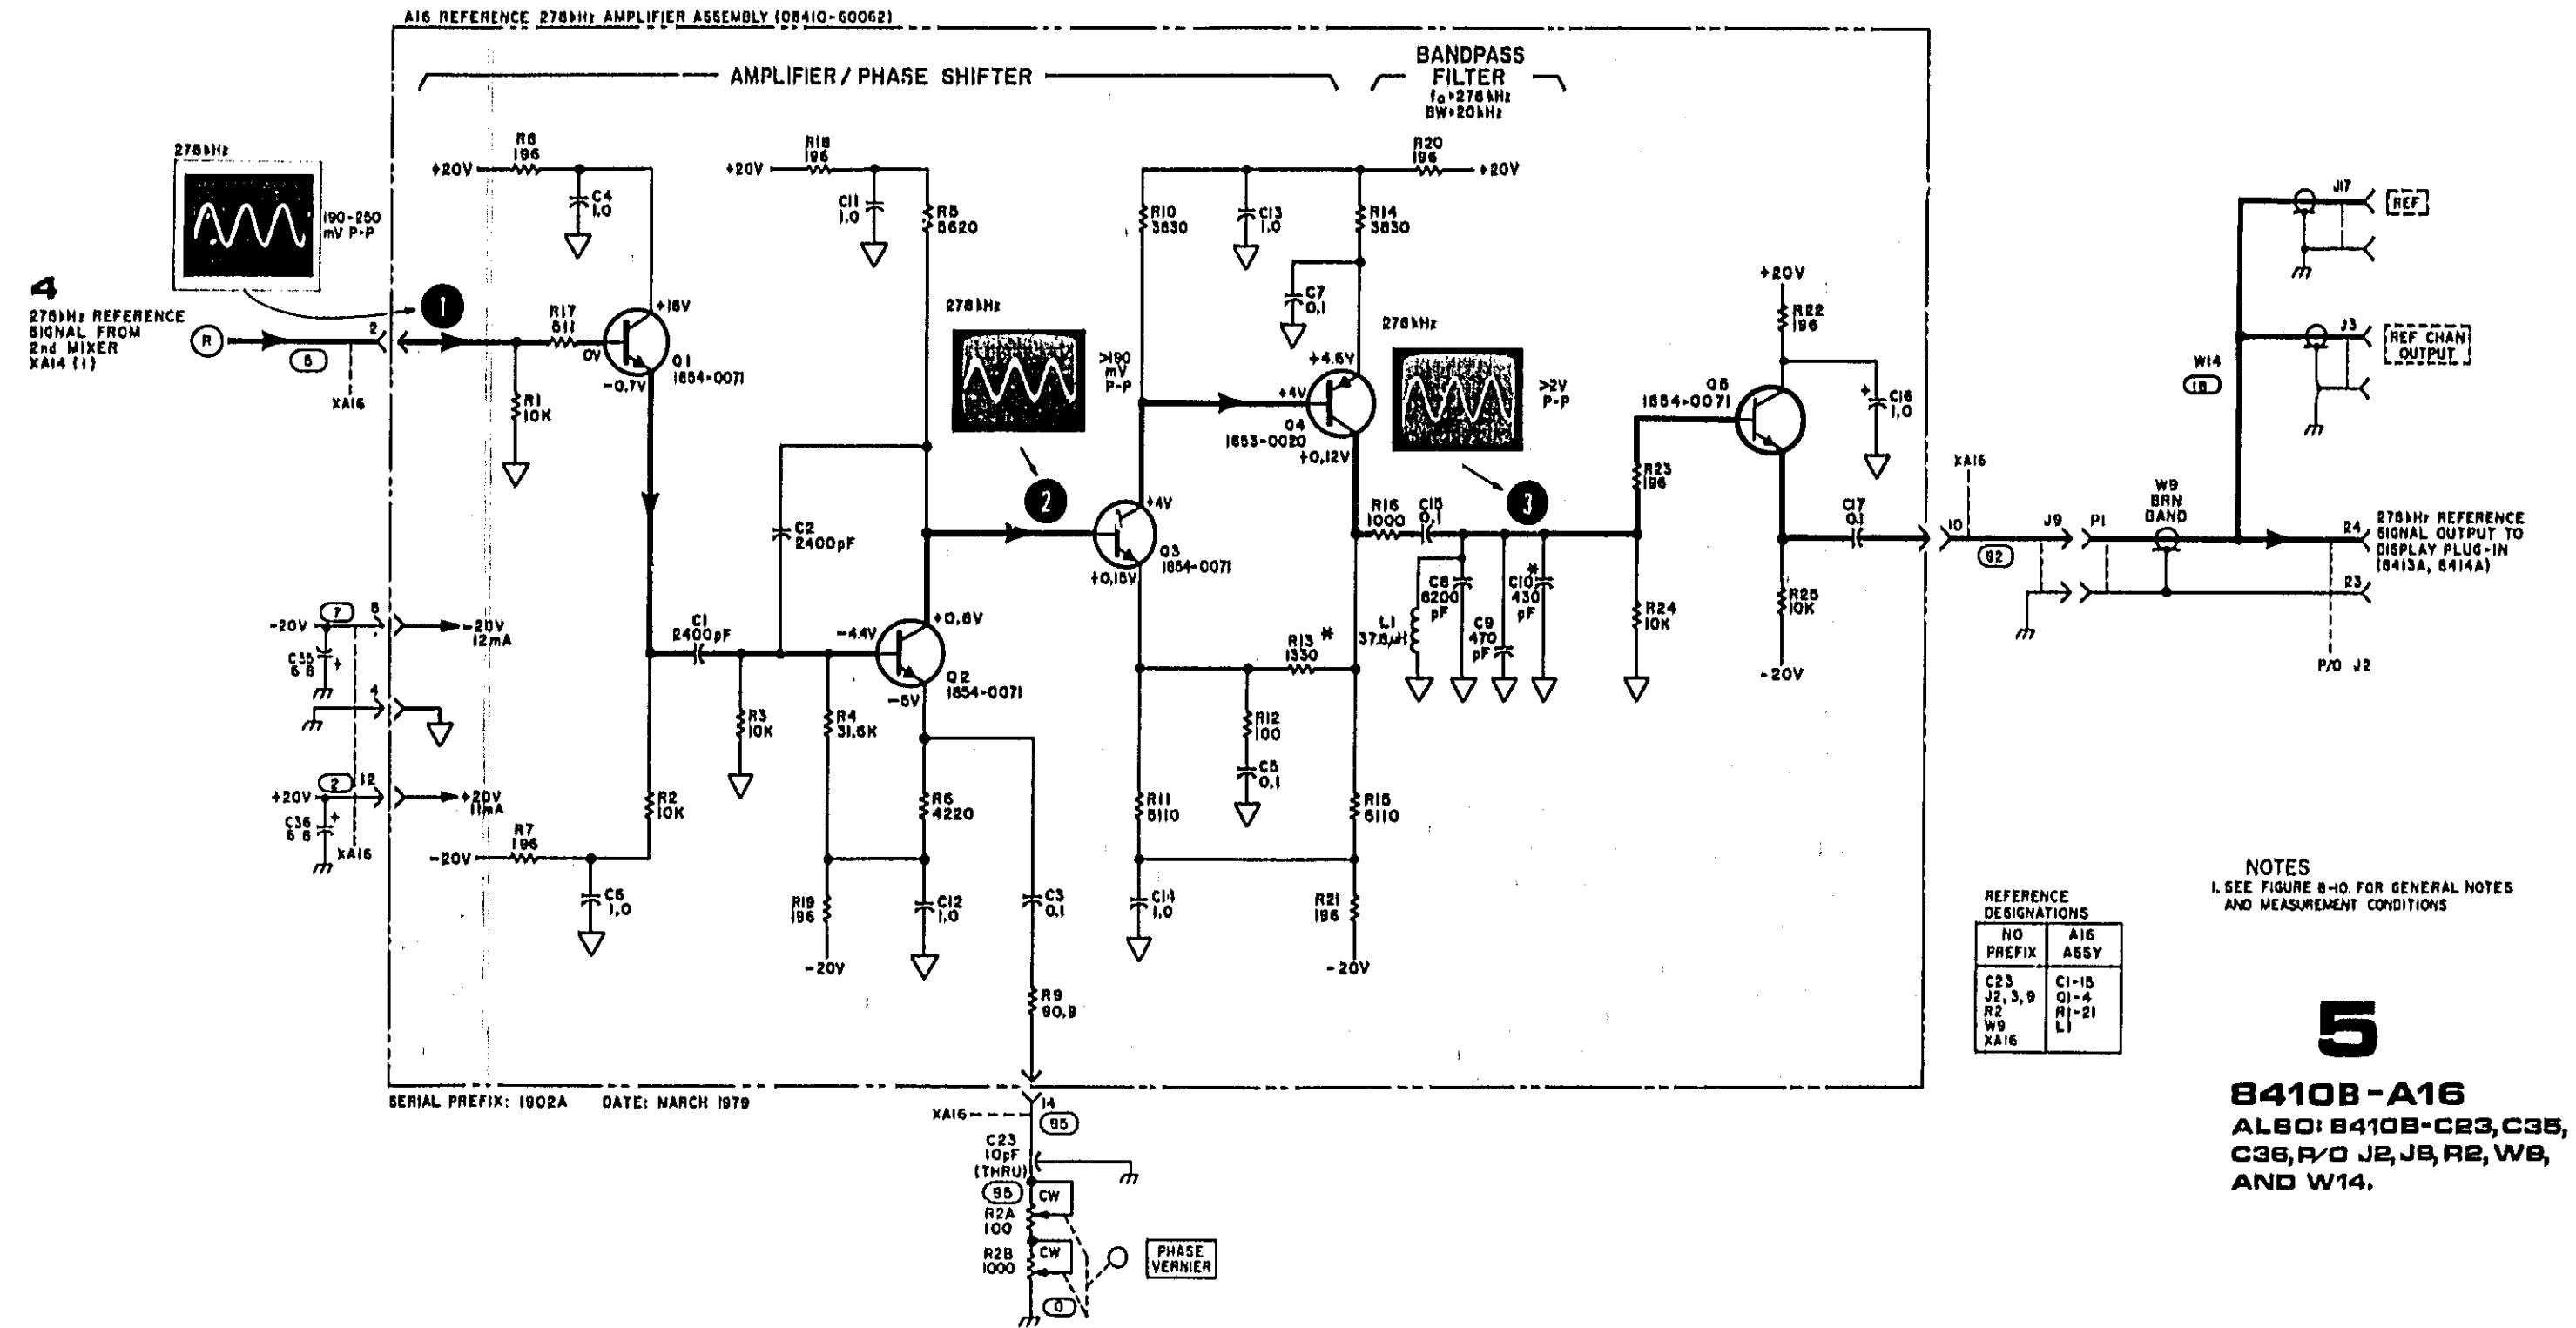


Figure 8-39. 8410B-A16 Schematic Diagram

8410B 20 MHz OSCILLATOR A13, CIRCUIT DESCRIPTION

20 MHz OSCILLATOR AND 20 dB AMPLIFIER

A13Q3 and A13Y1 form a 20-MHz crystal oscillator circuit. The feedback loop is formed by A13C7, A13C8, and A6Y1. A13C7 allows adjustment of the oscillator frequency so that the difference frequency between the 20.278-MHz oscillator and this 20-MHz oscillator is 278 kHz.

A13C12, A13CR1, and A13CR2, together with the associated resistor-capacitor network, form a negative feedback circuit which maintains a constant-amplitude oscillator signal to the second mixer. Feedback signals from A13C12 are detected by A13CR1 and A13CR2 and develop a dc signal across A13R3. This changes the dc bias at A13Q3

base, depending on feedback amplitude. The signal at A13TP3 stabilizes with constant output at about 1.8 to 2.8 volts peak-to-peak.

BUFFER

A13Q1 and A13Q2 compose a feedback-pair amplifier. The approximate gain of the circuit is determined by the ratio of A13R25 divided by A13R23.

A13C21 and A13L2 form a parallel-resonant circuit at 20 MHz. This acts as a bandpass circuit for the 20-MHz oscillator signal, but rejects harmonics of the oscillator signal.

8410B 20-MHz OSCILLATOR A13 TROUBLESHOOTING

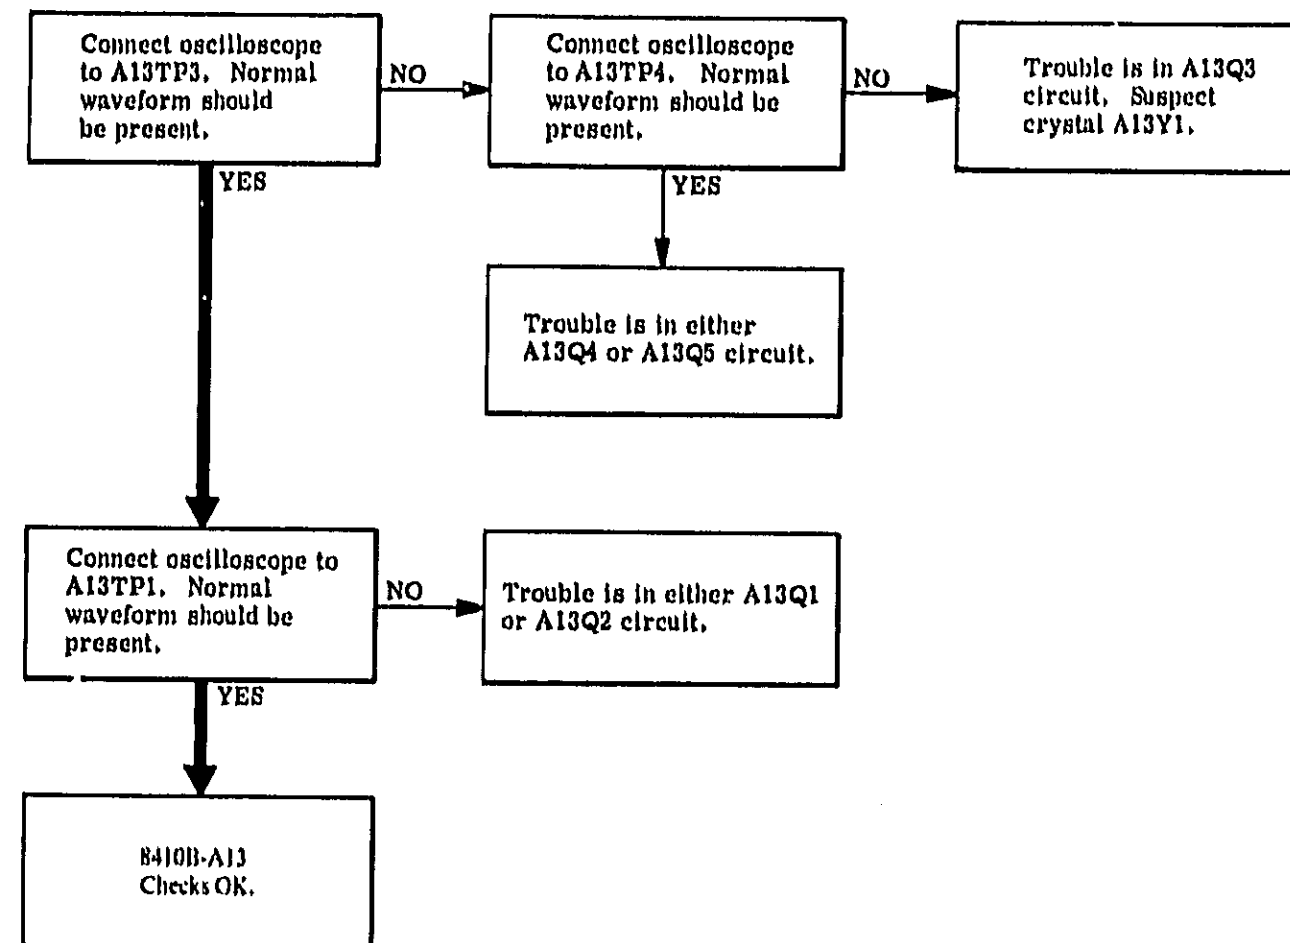


Figure 8-40. 8410B-A13 Troubleshooting


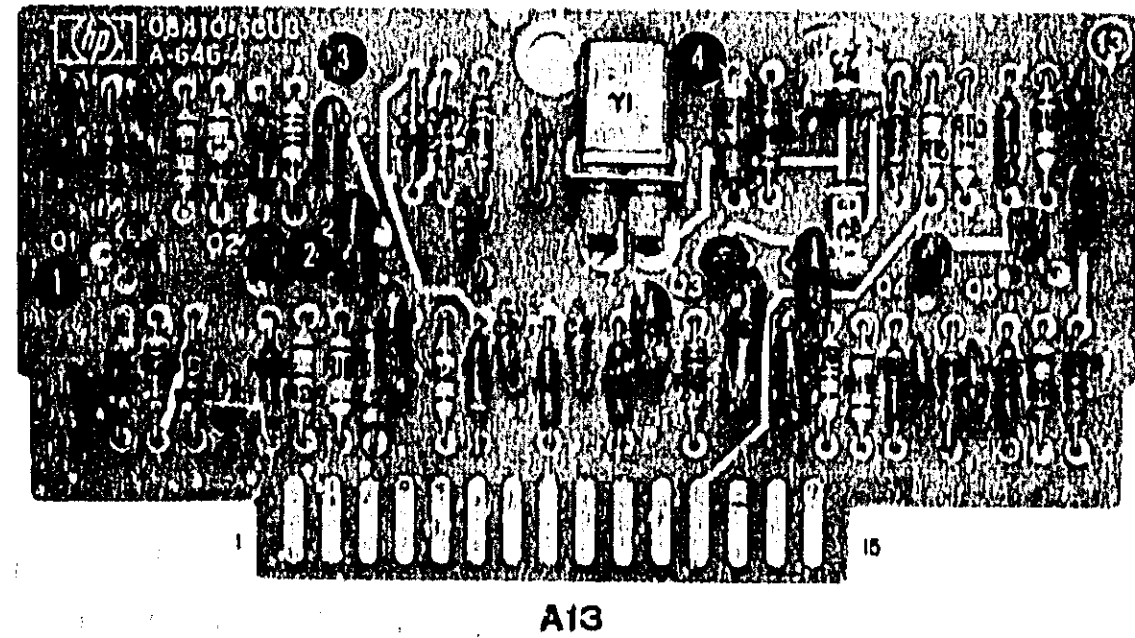


Figure 8-41, 8410B-A13 Parts Location

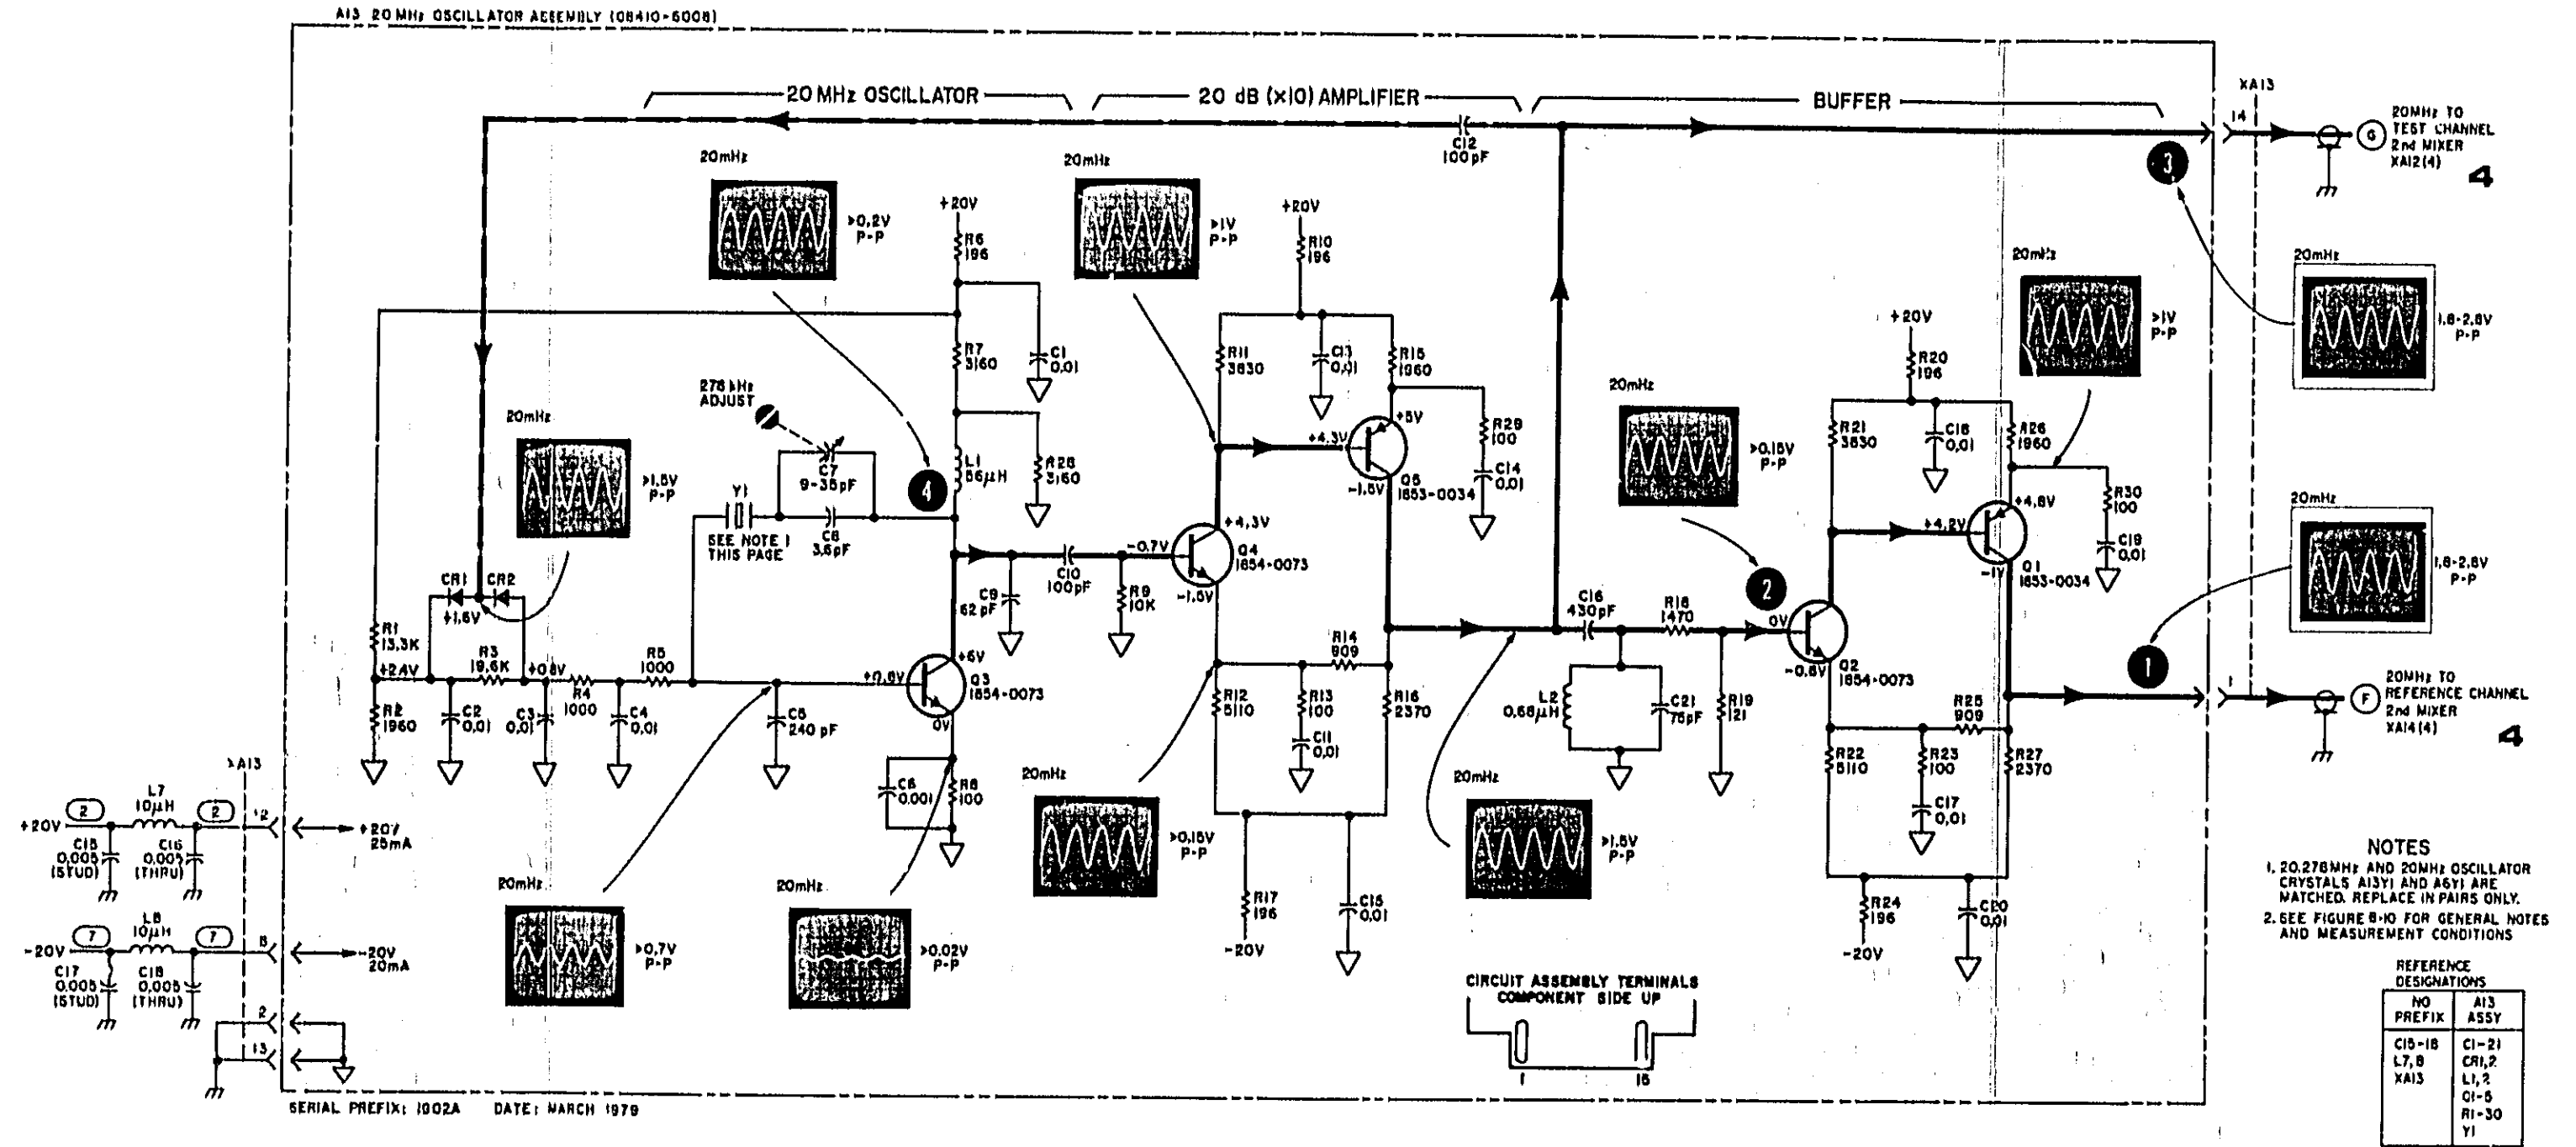


6
84108-A13
 ALSO: 84108-C15,
 C16, C17, C18, L7 AND L8.

Figure 8-42, 8410B-A13 Schematic Diagram

8410B AGC AMPLIFIER A15, CIRCUIT DESCRIPTION

8410B AGC AMPLIFIER A15 TROUBLESHOOTING

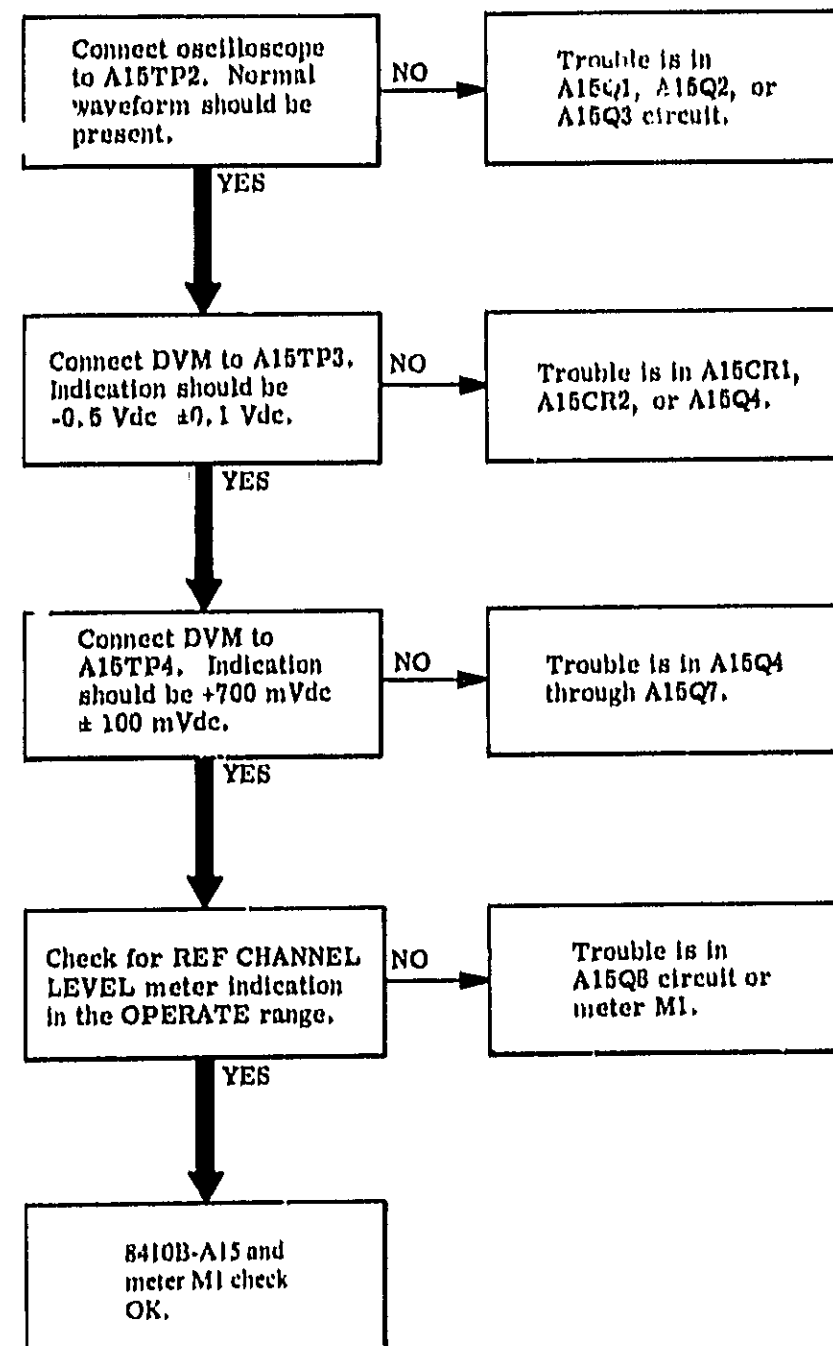

20 dB AMPLIFIER

A15Q1 and A15Q2 comprise a feedback-pair amplifier. The approximate gain of the stage is the value of A15R5 divided by A15R4. A15Q3 is an emitter follower, providing (1) isolation between A15Q2 and peak detector A15CR1, and (2) low-impedance output to the peak detector circuit.

PEAK DETECTOR

A15CR1 and A15CR2 comprise a peak detector. A15CR1 passes the negative portion of the signal from A15Q3 to A15Q4. The peak negative signal applied to the base of A15Q4 is limited to -0.6 Vdc by A15CR2.

50 dB DC AMPLIFIER

A15Q4A and A15Q4B comprise a differential amplifier. Output at the collector of A15Q4A is determined by the difference between the input voltages at the bases of A15Q4A and A15Q4B. AGC signals from the differential amplifier pass through amplifier A15Q6 and emitter follower A15Q7 to the AGC controlled circuits, A12 and

A14. The amplifier is stabilized by the feedback circuit formed by A15R24, A15R25, and A15C12. The feedback signal is applied to the base of A15Q4B, holding the gain of the amplifier constant. A15R21 is selected to obtain the desired gain through amplifiers A12 and A14. The value is selected so that 100 mV peak-to-peak input at A14TP4 in the Reference AGC Amplifier produces an output at A14TP1 of 190 to 250 mV peak to peak.

AGC MONITOR

A15Q8 forms a current amplifier for the REF CHANNEL LEVEL meter, M1. Changes in base bias applied to A15Q8 control current through the 0–1 mA meter, M1. An input of about +750 mVdc at A15TP4 produces a meter indication at M1 at the upper limit of the OPERATE range. An input of about +8 Vdc produces near zero meter indication.

A15C16 and A15L1 form a filter circuit between the TEST and REFERENCE automatic gain control circuits.

Figure 8-43. 8410B-A15 Troubleshooting


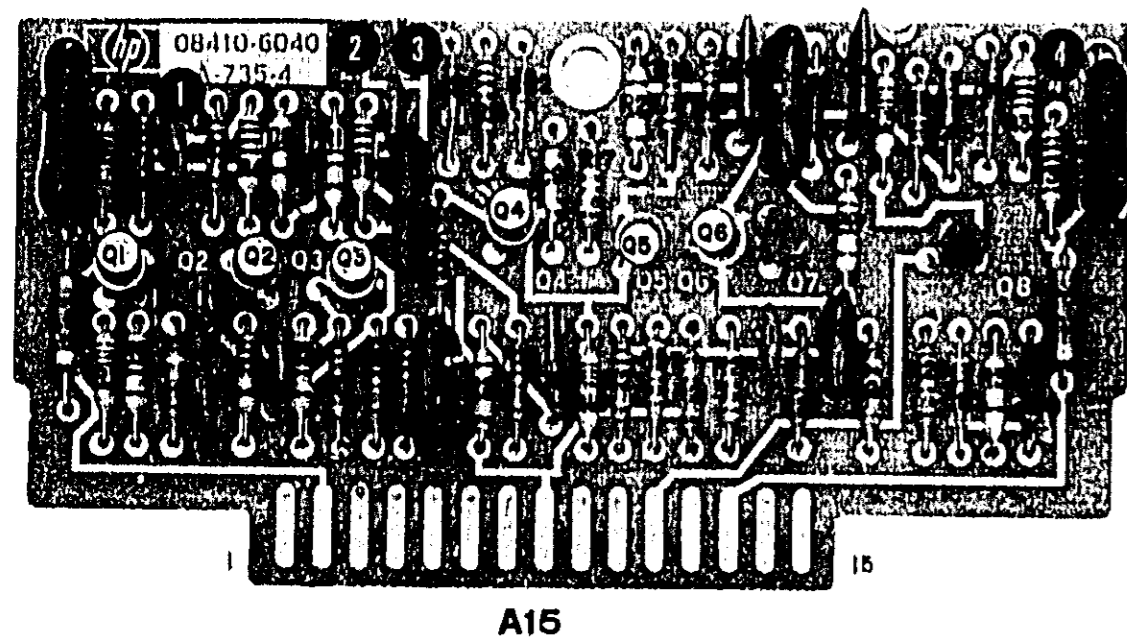


Figure 8-44. 8410B-A15 Parts Location

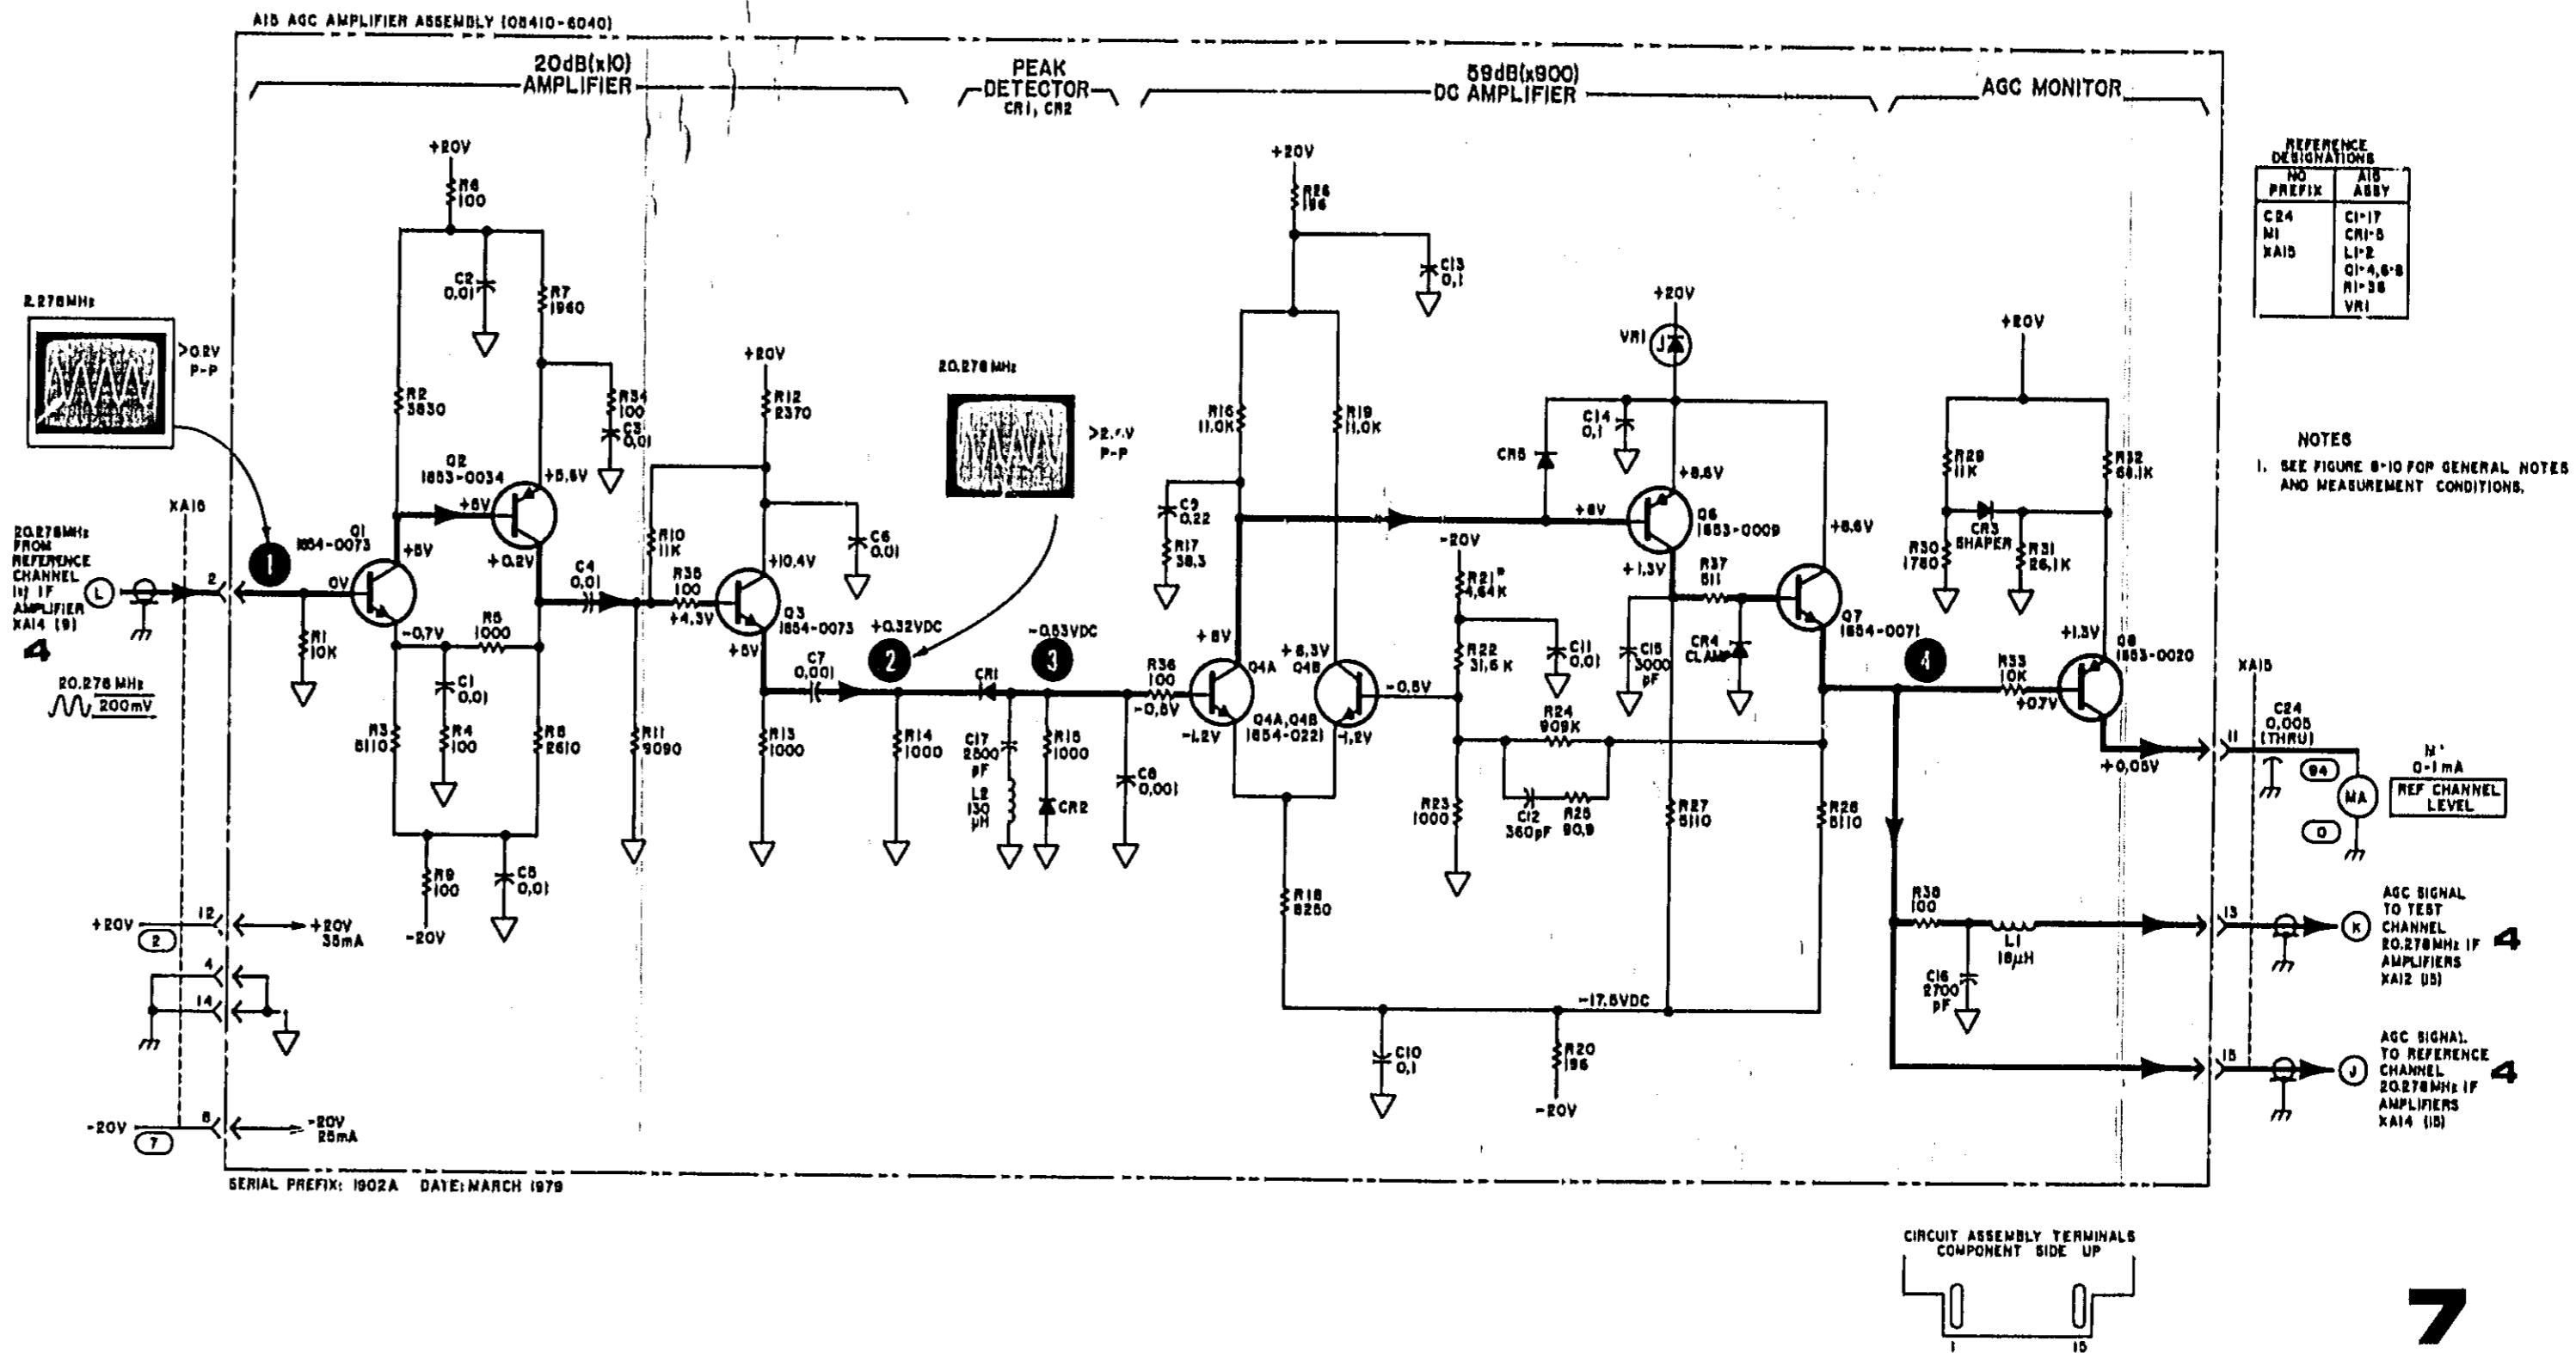


8410B-A15
 ALBO: 8410B-CR4, AND M1

Figure 8-45. 8410B-A15 Schematic Diagram

8410B TEST CHANNEL SECOND IF AMPLIFIER A2, A3, AND A11, CIRCUIT DESCRIPTION

8410B TEST CHANNEL SECOND IF AMPLIFIER A11 TROUBLESHOOTING

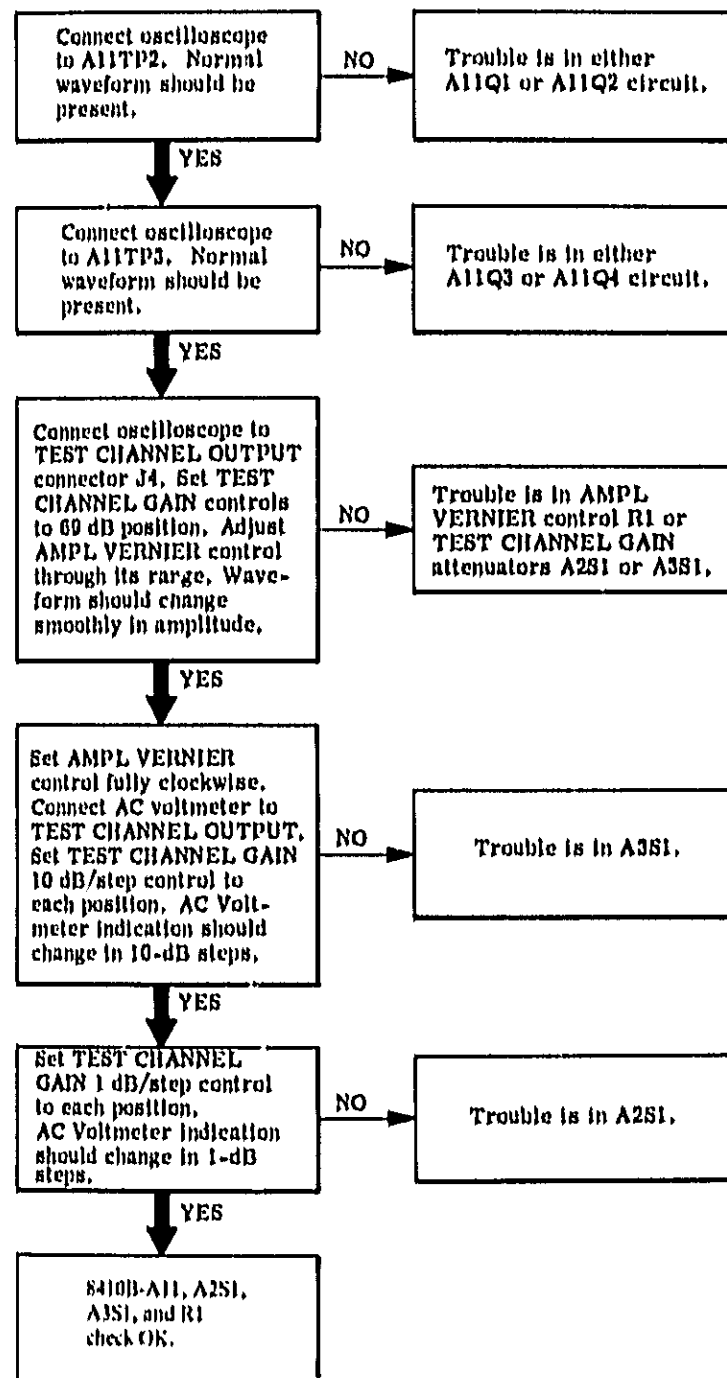

10 dB AMPLIFIER

The gain of A11Q1 is determined approximately by the value of A11R3 divided by A11R4. The value of A11R4 is selected so that a 200 mV peak-to-peak signal at A11TP1 will produce a 10V ± 1V peak-to-peak signal at A11TP3.

BANDPASS FILTER

A11C4, A11C6, and A11L1 form a parallel-resonant 278-kHz circuit. The value of A11C14 is selected to tune the center frequency of the circuit to 278 kHz.

FEEDBACK PAIR AMPLIFIER

FET A11Q5 and A11Q6 form a feedback pair amplifier. The feedback path is from collector of A11Q6 through R23, R24, and C17 to ground. The gain can be determined approximately by the formula:

$$A_v = \left(\frac{A_{11R28}}{A_{11R27} + A_{11R28}} \right) \left(\frac{A_{11R23} + A_{11R24}}{A_{11R24}} \right)$$

FEEDBACK PAIR AMPLIFIER

A11Q3 and A11Q4 form a feedback-pair amplifier. The gain is approximately equal to the value of A11R14 plus A11R13 divided by A11R13.

AMPLITUDE TEST CHANNEL GAIN

AMPLITUDE TEST CHANNEL GAIN controls A2S1 and A3S1 provide 0 to 69 dB of attenuation to the 278-kHz signal in 1-dB steps.

A2S1 is a 0- to 9-dB attenuator consisting of five pi-type attenuator pads: one 1-dB, two 2-dB, and two 4-dB circuits. Switching combinations of these pads in series with the signal provide an attenuation range of 0 to 9 dB in 1-dB steps.

A3S1 is a 0-to 60-dB attenuator consisting of six pi-type attenuator pads: three 10-dB and three 20-dB circuits. Switching combinations of these pads in series with the signal provides a range of 0 to 60 dB in 10-dB steps.

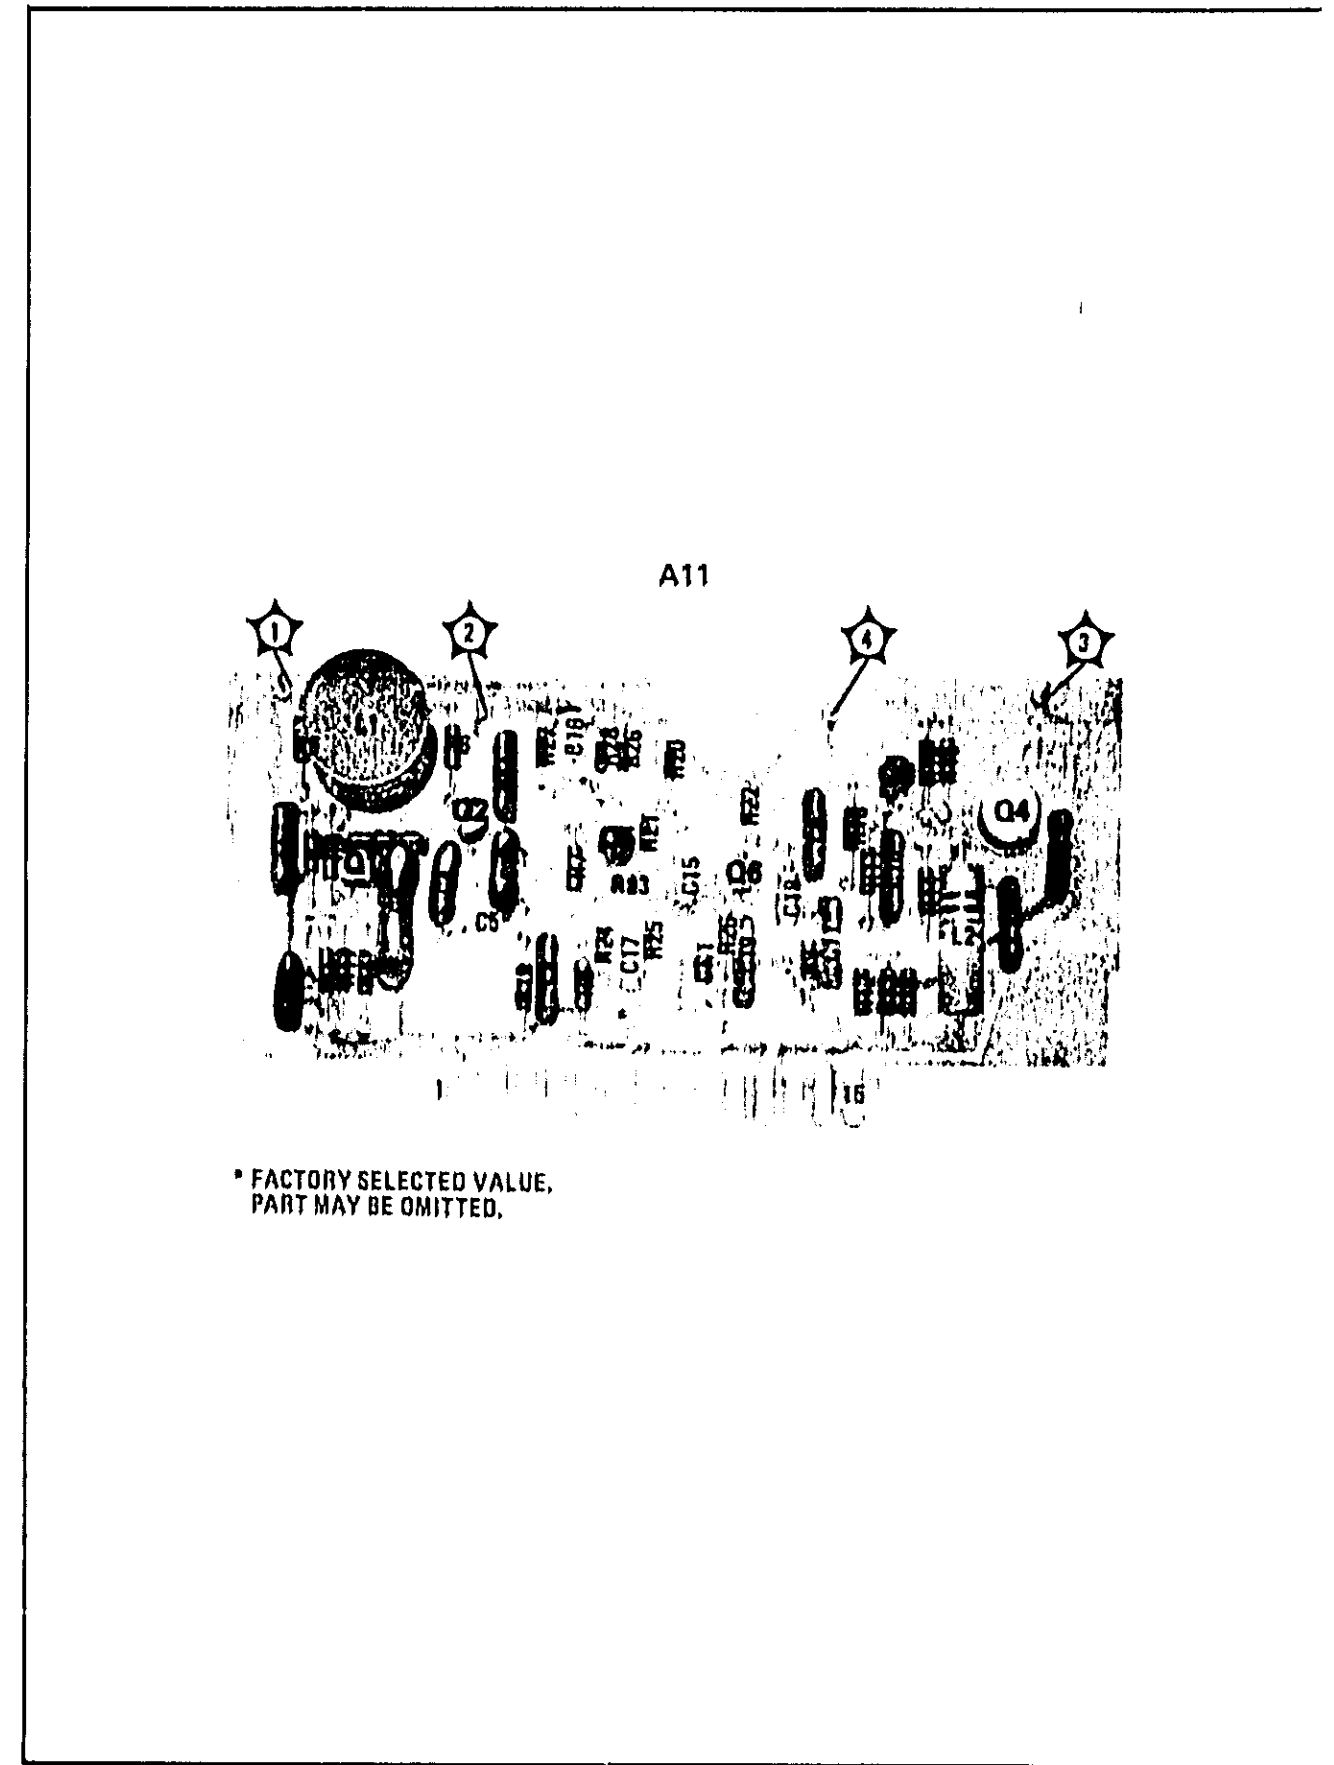


Figure S-17. 8410B-A11 Parts Location


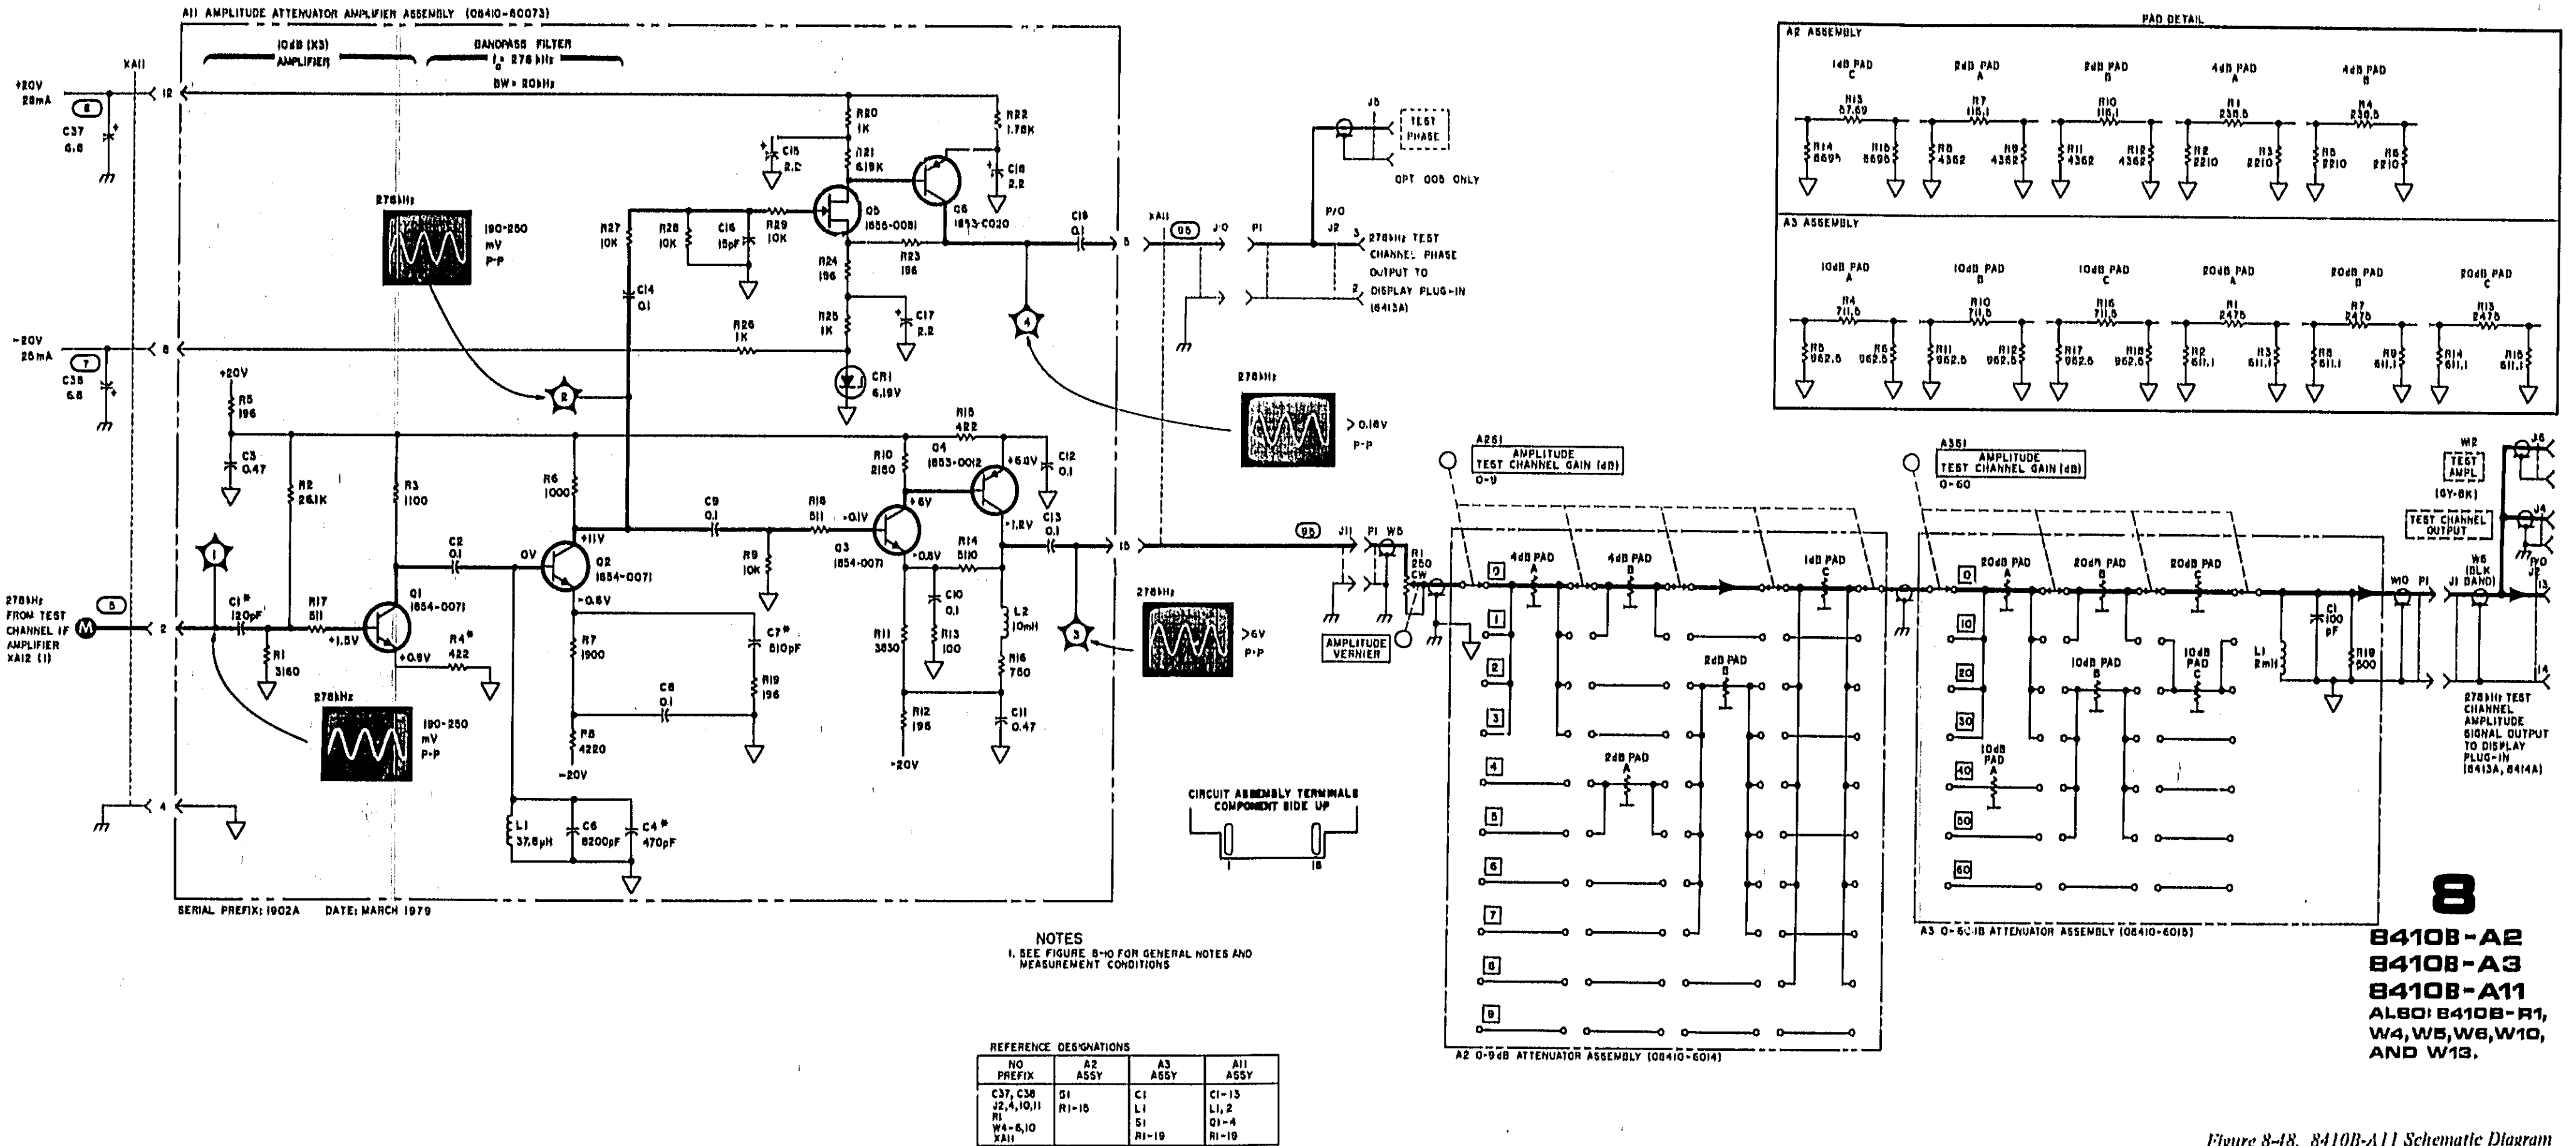


Figure 8-18. 8410B-A11 Schematic Diagram

8410B — 20.278 MHz IF AMPLIFIER A4 TROUBLESHOOTING

8410B 20.278 MHz IF AMPLIFIER A4, CIRCUIT DESCRIPTION

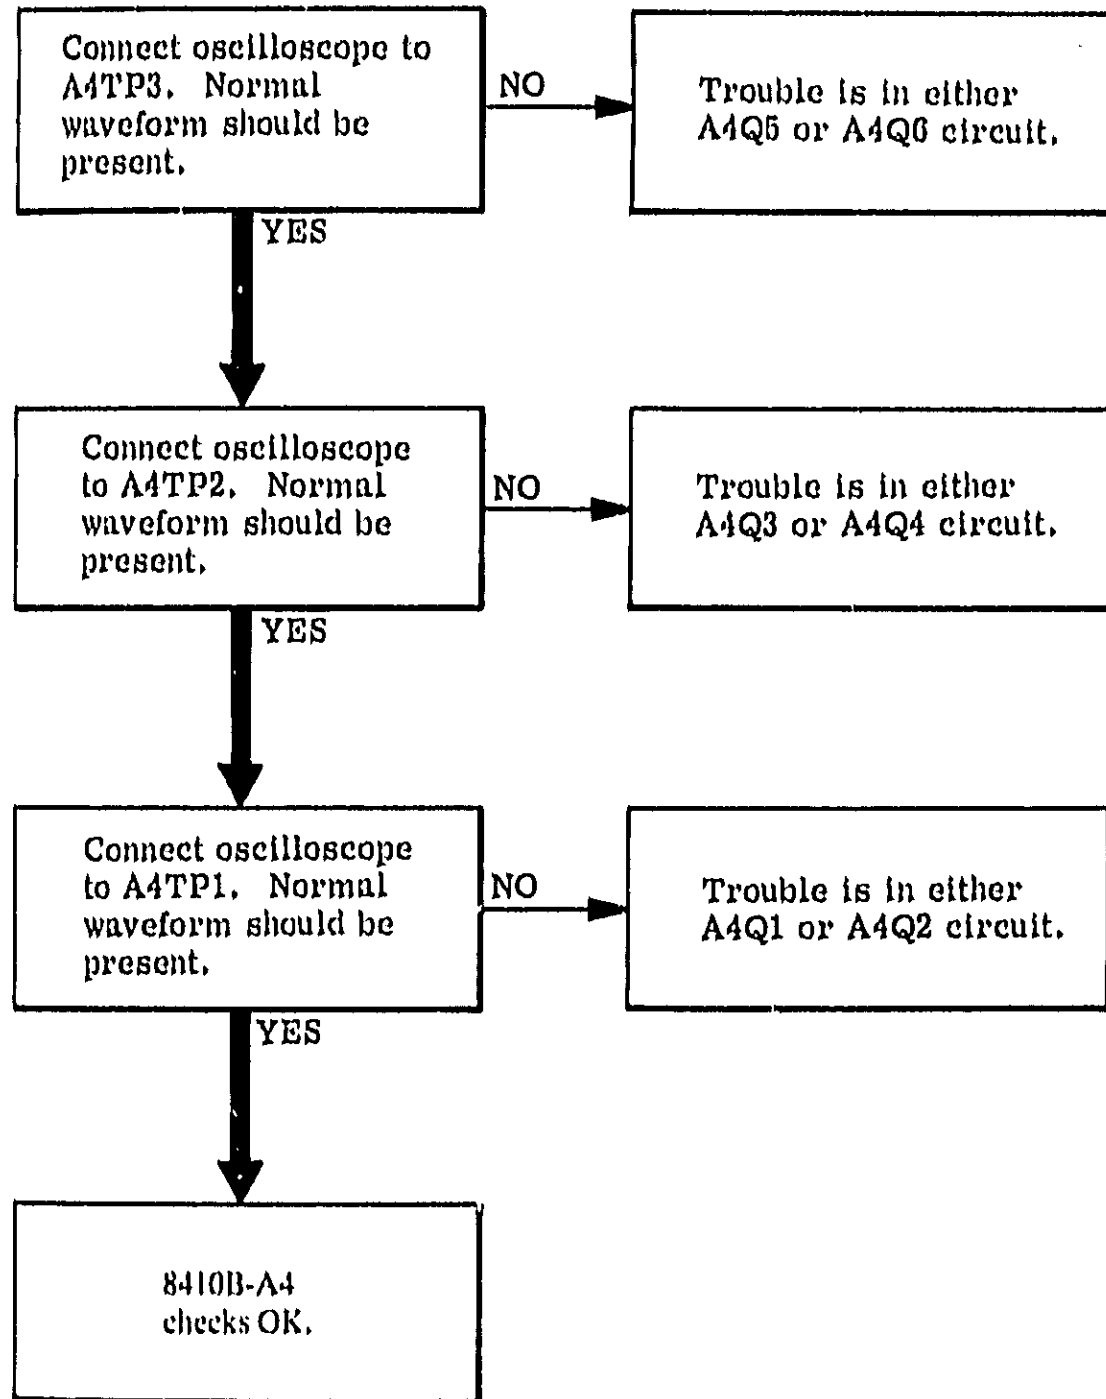

20 dB AMPLIFIER

A4Q3 through A4Q6 compose two feedback-pair amplifiers. The approximate gain of the A4Q3—A4Q4 pair is determined by the ratio of A4R16 divided by A4R15. The approximate gain of the A4Q5—A4Q6 pair is determined by the ratio of A4R4 divided by A4R3.

26 dB LIMITER

A4Q1 and A4Q2 comprise a differential amplifier that acts as a limiter to high-signal level inputs. With a 20.278-MHz input sine-wave signal in the range of 1 to 10 volts peak to peak, the output squarewave signal will be about 2 volts peak to peak.

Figure 8-19. 8410B-A4 Troubleshooting

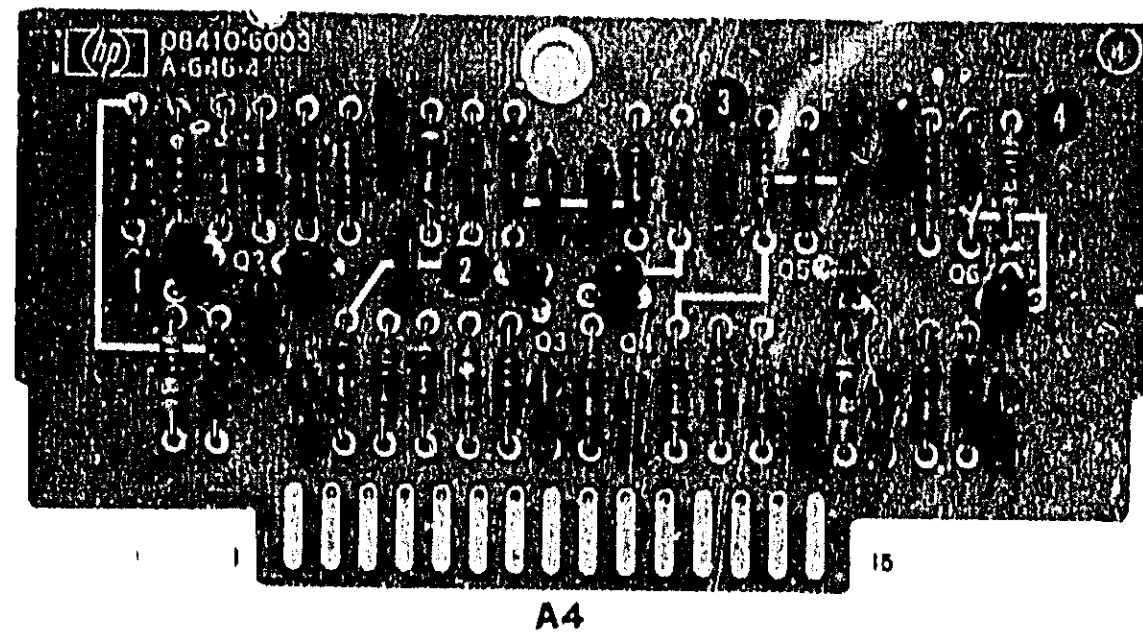


Figure 8-50. 8410B-A4 Parts Location

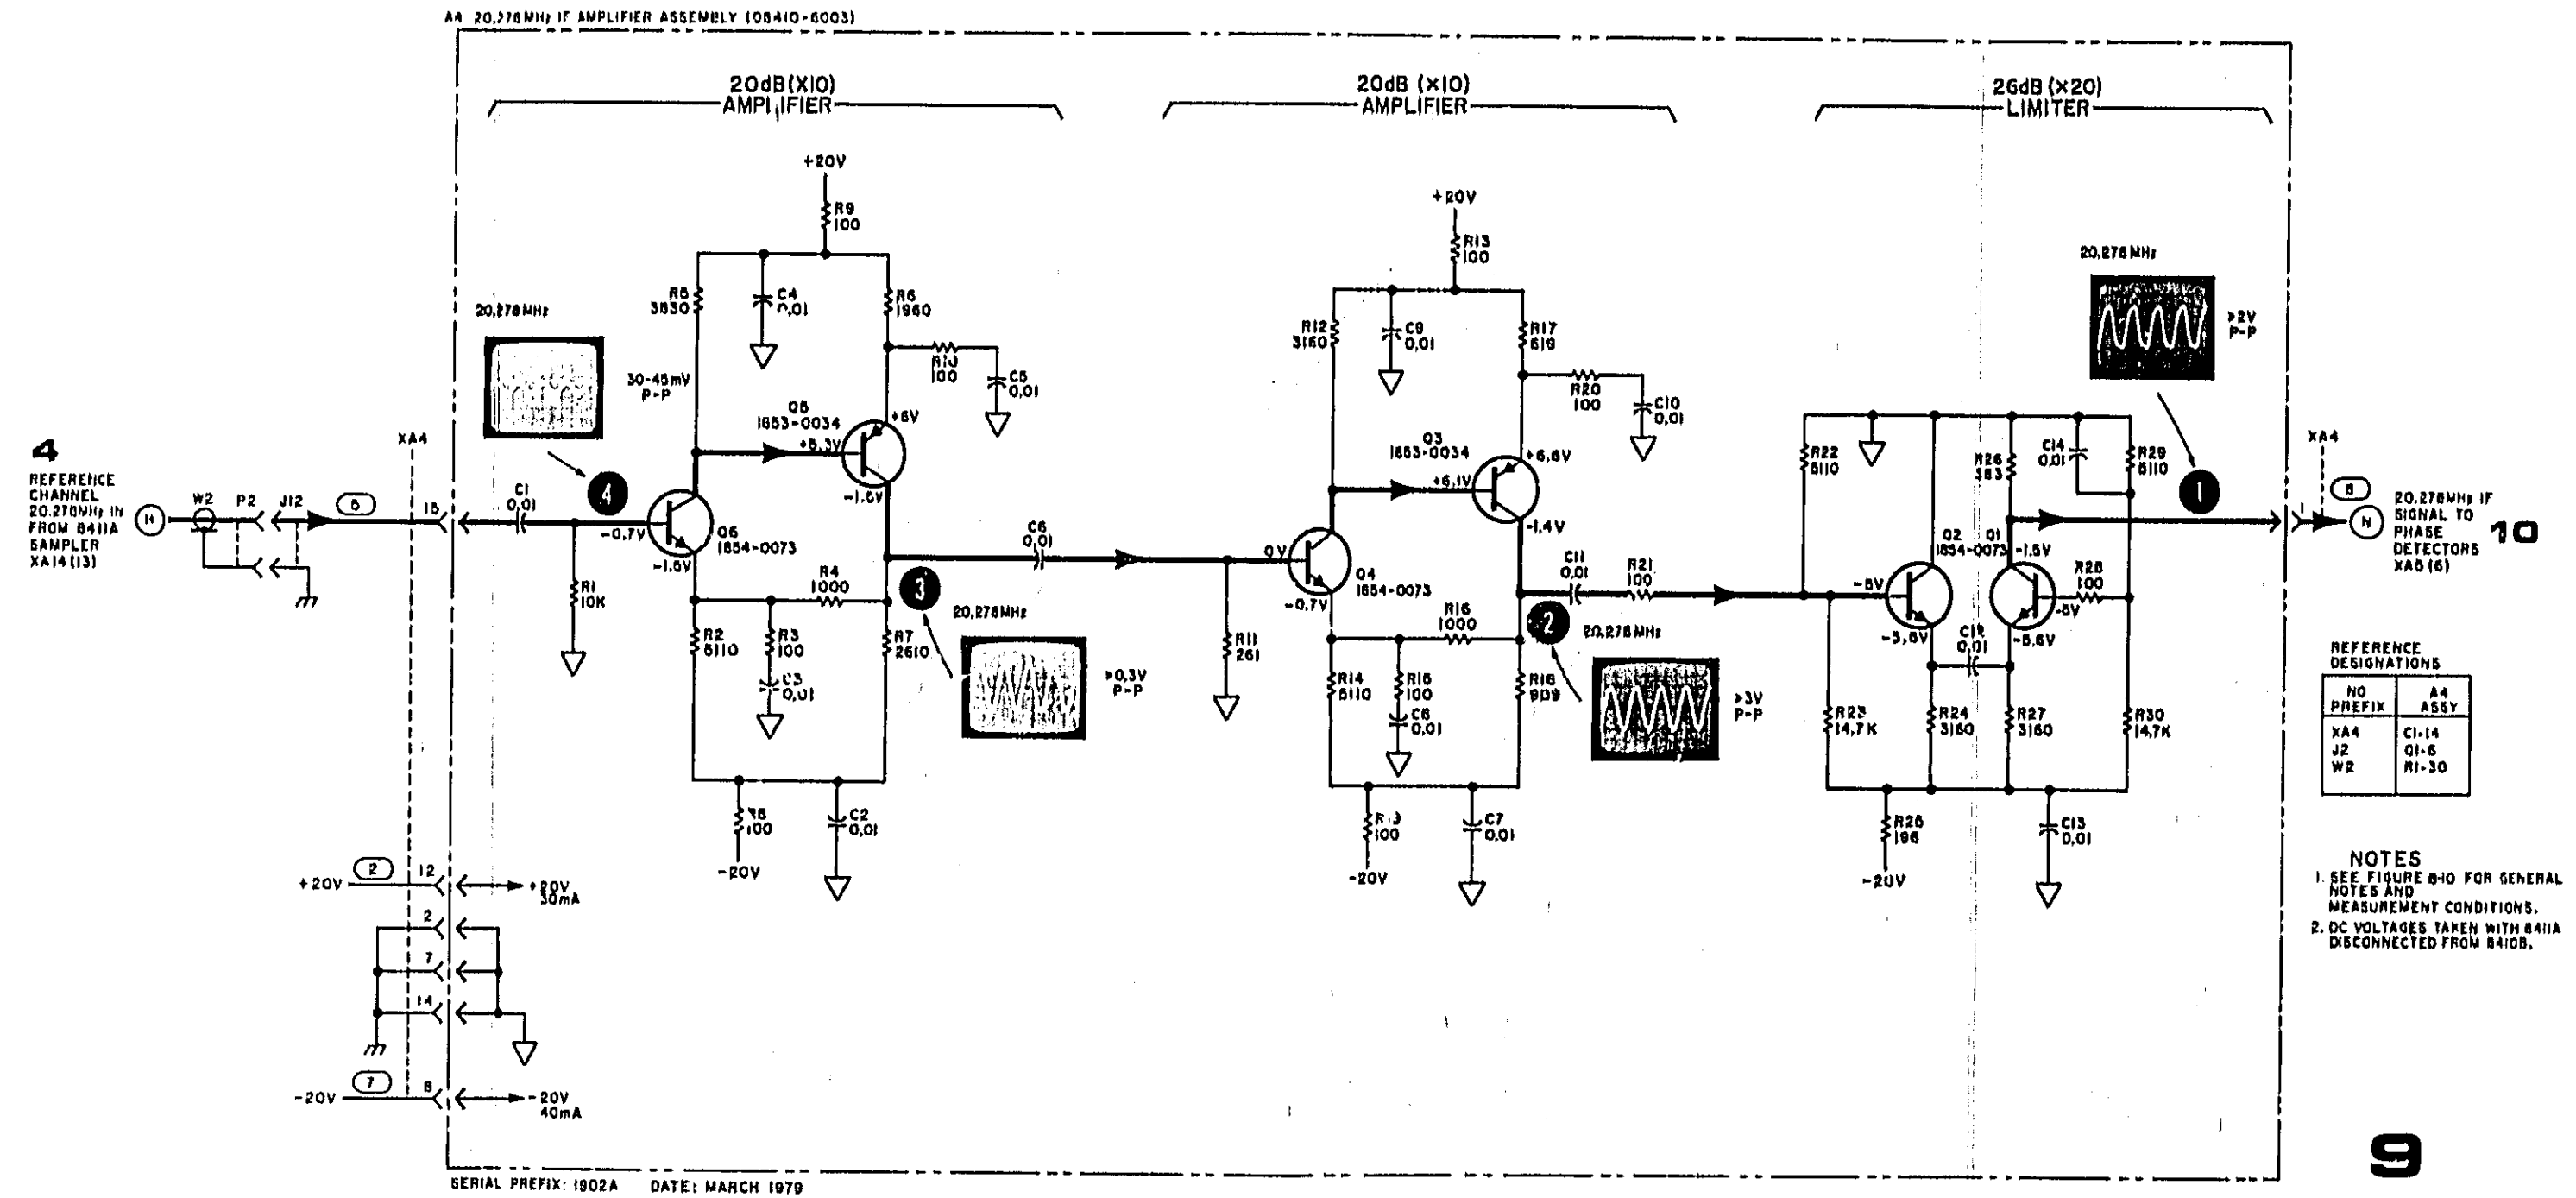


Figure 8-51. 8410B-A4 Schematic Diagram

8410B PHASE DETECTOR A5, CIRCUIT DESCRIPTION

BANDPASS FILTER

A bandpass filter consisting of A5C2, A5C3, A5L2, and A5L3 resonates at 20.278 MHz, with a bandwidth of about 10 MHz.

PHASE DETECTOR DRIVER

The 20.278-MHz signal from the reference oscillator (A6) is applied to the base of A5Q4. Because of the high-amplitude input signal, the differential amplifier, A5Q4—A5Q5, acts as a limiter to the input sine wave, producing two square-wave outputs, 180 degrees apart. The two square-wave signals from the differential amplifier are used to gate phase detectors A and B. Constant current source A5Q6 allows the differential amplifier to turn on and off at fast rise times to produce a well squared output waveform.

+90° PHASE SHIFTER

A5Q3, A5R13, A5C6, and A5L4 produce a +90-degree phase shift in the 20.278-MHz signal before it is applied to phase detector B. Gain through the stage is approximately one.

PHASE DETECTOR A

Phase detector A consists of A5CR1 through A5CR4. The square-wave outputs from A5Q4 and A5Q5 are coupled through A5C10 and A5C11,

gating phase detector A. The voltage level of the input signal during the gate time causes conduction through A5CR1 and A5CR2, developing a voltage across A5R25 and A5R26. The junction of A5CR3 and A5CR4 forms a summing point. When the positive voltage at A5R25 equals the negative voltage at A5R26, the summing point is zero volts. As the phase relationship changes between the input signal at A5TP2 and the reference signal at A5TP4 and A5TP5, the summing point voltage changes to either a positive or a negative voltage. The summing point voltage is applied as a phase-error signal through emitter follower A5Q1 and FREQ RANGE switch A1 to the input of the lock-mode switch in A7.

PHASE DETECTOR B

Phase detector B consists of A5CR5 through A5CR8. The square-wave outputs from A5Q4 and A5Q5 are coupled through A5C12 and A5C13, gating phase detector B. The voltage level of the input signal during the gate time develops a voltage across A5R27 and A5R28. This voltage is summed through A5CR7 and A5CR8 and is transmitted as a phase-error signal through emitter follower A5Q2 to the search disable switch in A8. Due to the 90-degree phase difference between the signal inputs to the detectors, the output voltages from the two phase detectors differ in amplitude and polarity. During normal phase-locked conditions, the output of detector B will be a negative dc voltage.

8410B 20.278 MHz OSCILLATOR A6, CIRCUIT DESCRIPTION

LOW PASS FILTER AND PEAK DETECTOR

A6C11, A6CR1, and A6CR2, together with the associated resistor-capacitor network, form a negative feedback circuit which maintains a constant-amplitude oscillator signal to the phase detectors. Feedback pulses from A6C11 are detected by A6CR1 and A6CR2 and develop a dc signal across A6R3. This changes the dc bias at A6Q1 base, depending on feedback amplitude. The signal at A6TP2 stabilizes with constant output at about 1.8 to 2.3 volts peak to peak.

20.278 MHz OSCILLATOR

A6Q1 and A6Y1 form a 20.278-MHz crystal oscillator circuit. The feedback loop is formed by A6C6 and A6Y1.

20 dB AMPLIFIER

A6Q2 and A6Q3 compose a feedback-pair amplifier. The approximate gain of the circuit is determined by the ratio of A6R12 divided by A6R11.



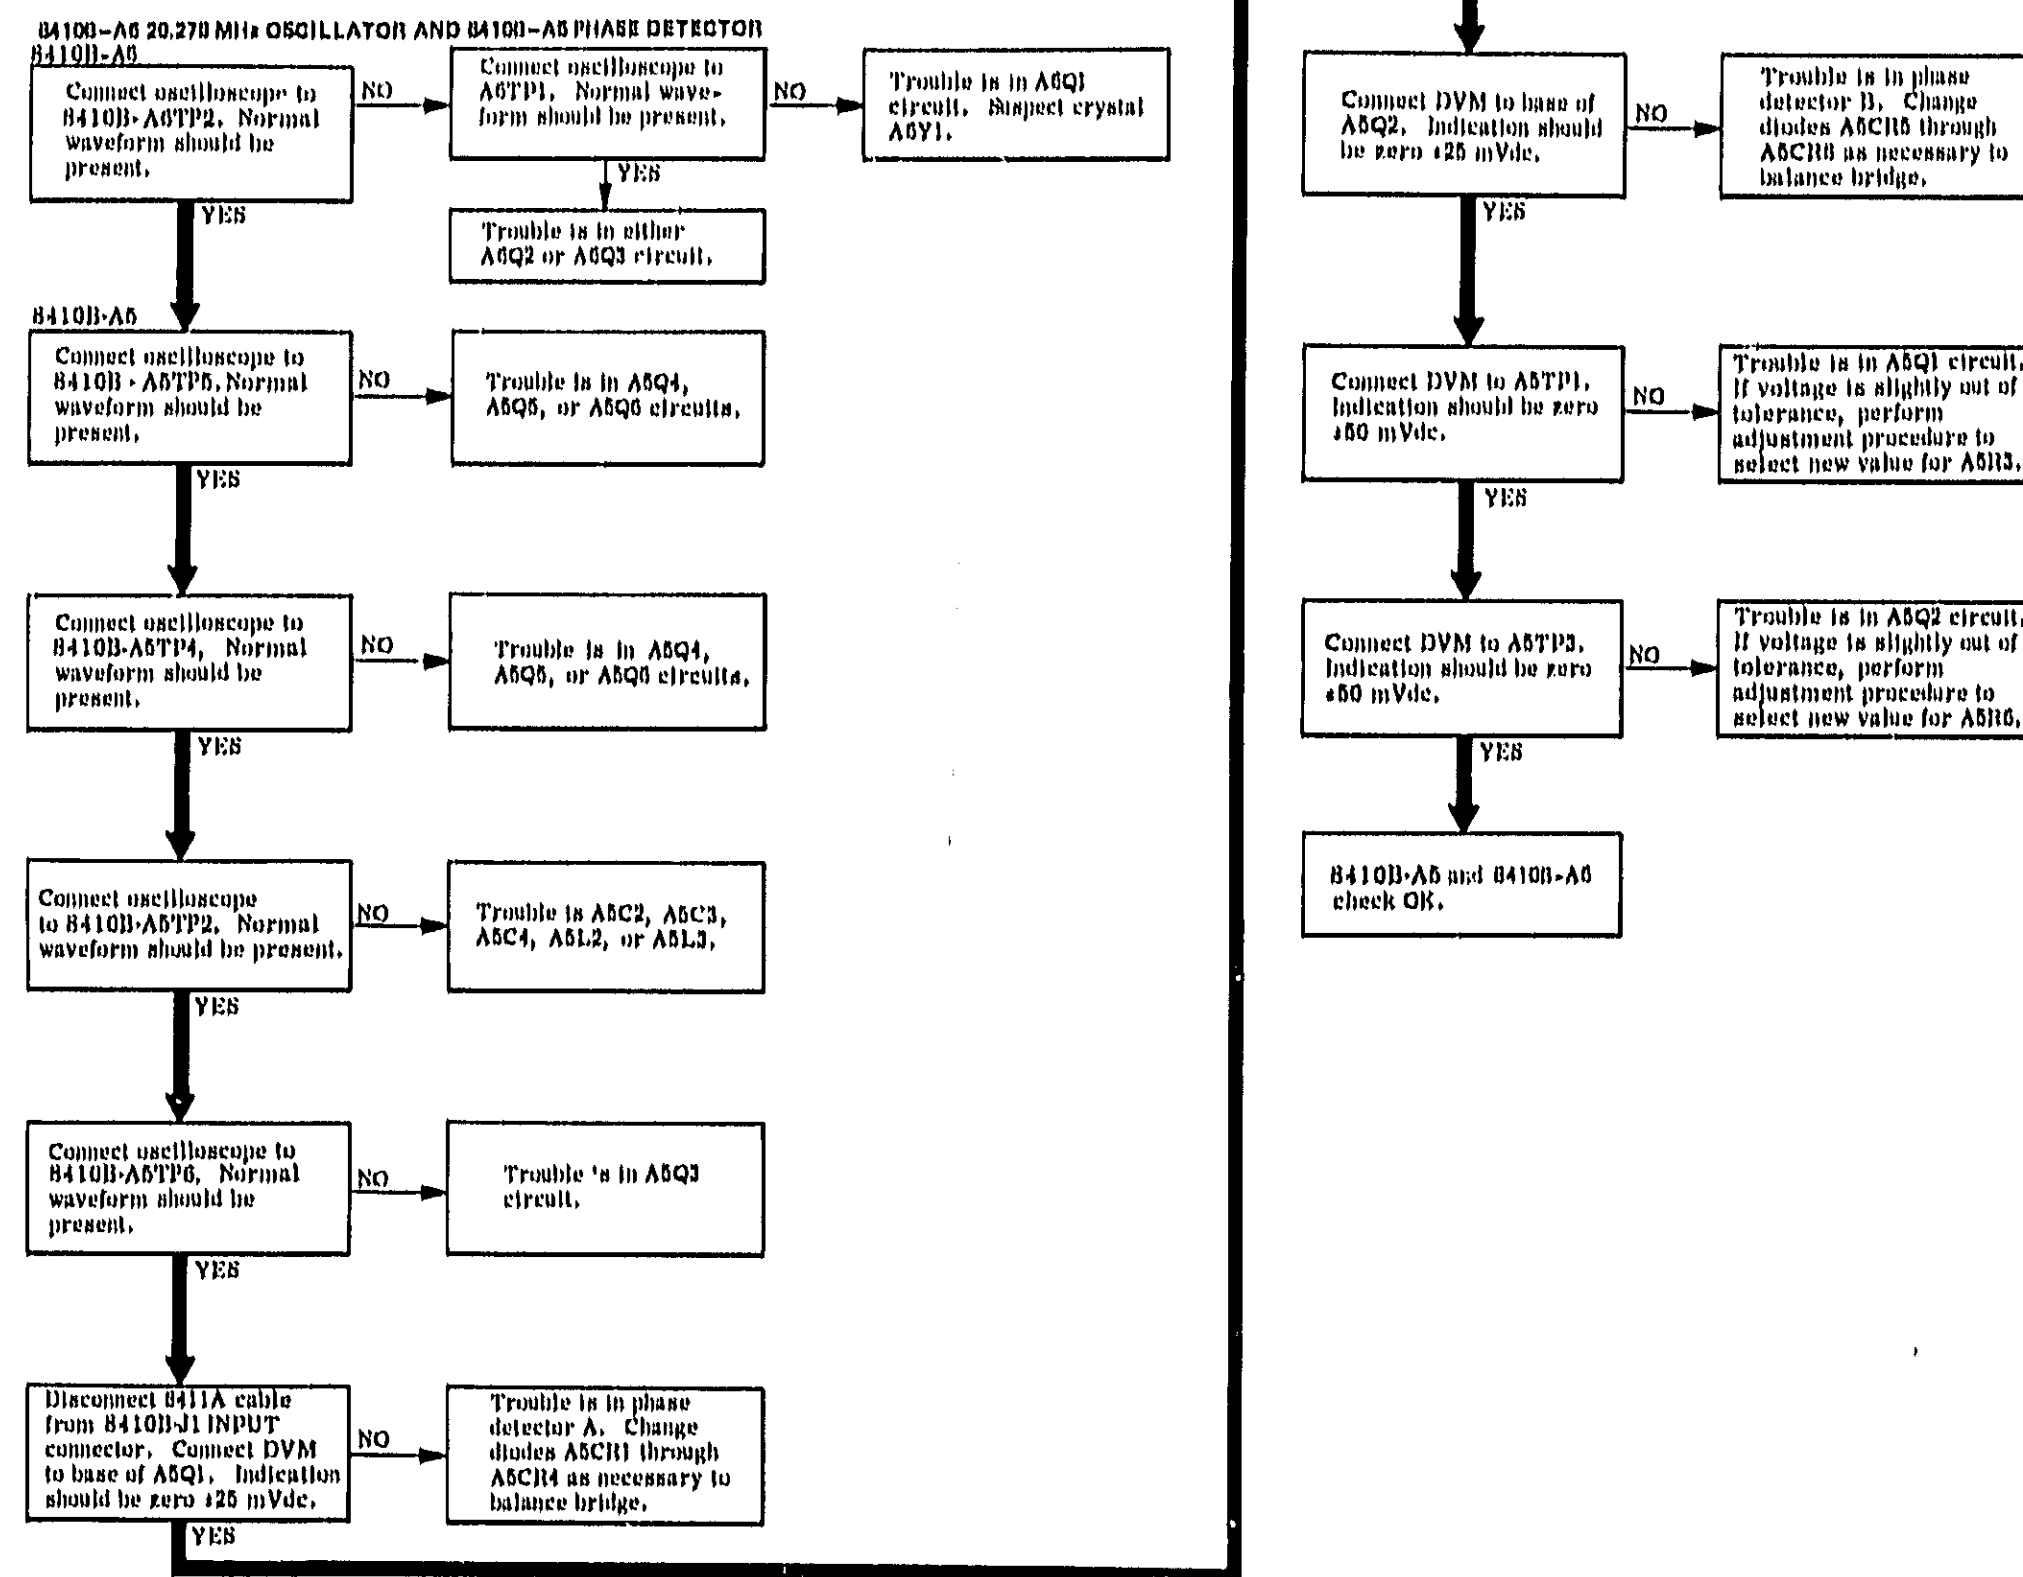


Figure 8-52. 8410B-A5 and A6 Troubleshooting

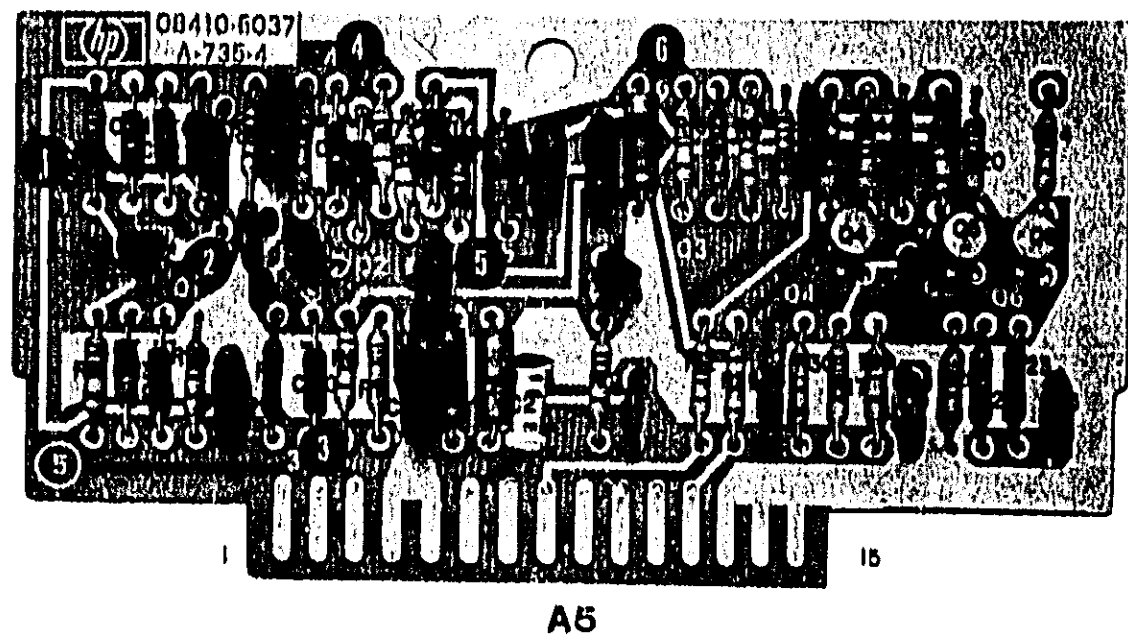

A5

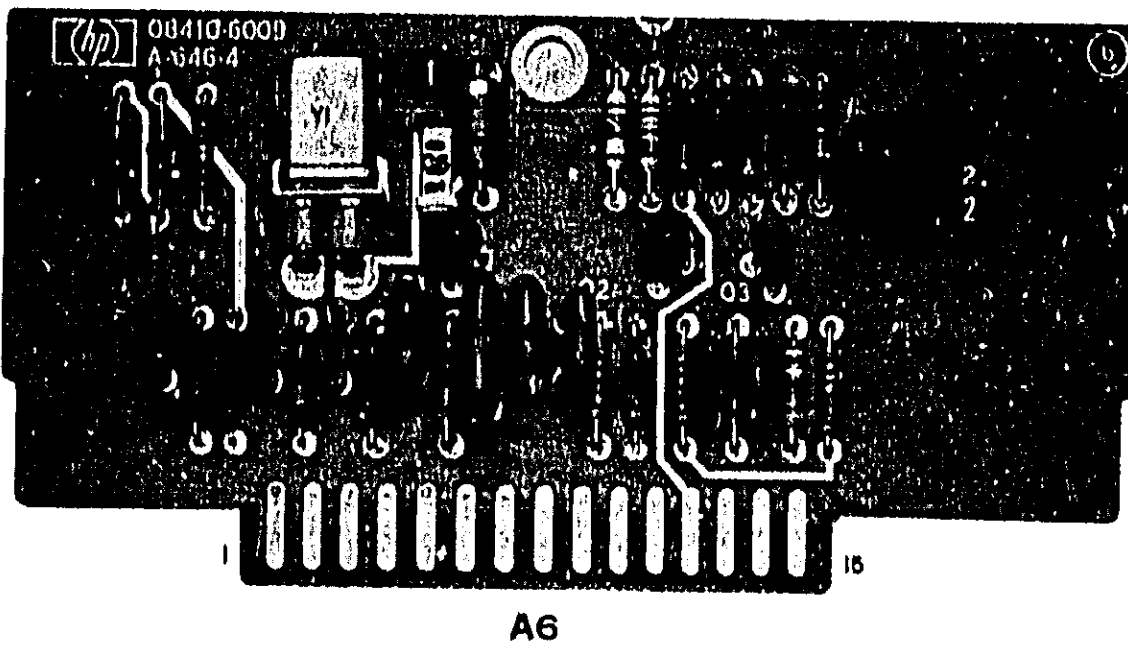


A6

REFERENCE DESIGNATIONS


NO PREFIX	A5 ASSY	A6 ASSY
C19-22, 24	C2-16	C1-14
L9, 10	CR1-10	CR1, 2
XA5, 6	L2-4	L1
	Q1-6	Q1-3
	R1-30	R1-19

DELETED: ABC1, ABC17, ABL1, ASL5

- NOTES
- 20 MHz AND 20.278 MHz OSCILLATOR CRYSTALS ASY1 AND ASY2 ARE MATCHED. REPLACE IN PAIRS ONLY.
 - SEE FIGURE 8-10 FOR GENERAL NOTES AND MEASUREMENT CONDITIONS
 - AS DC VOLTAGES TAKEN WITH 8411A DISCONNECTED FROM 8410B.

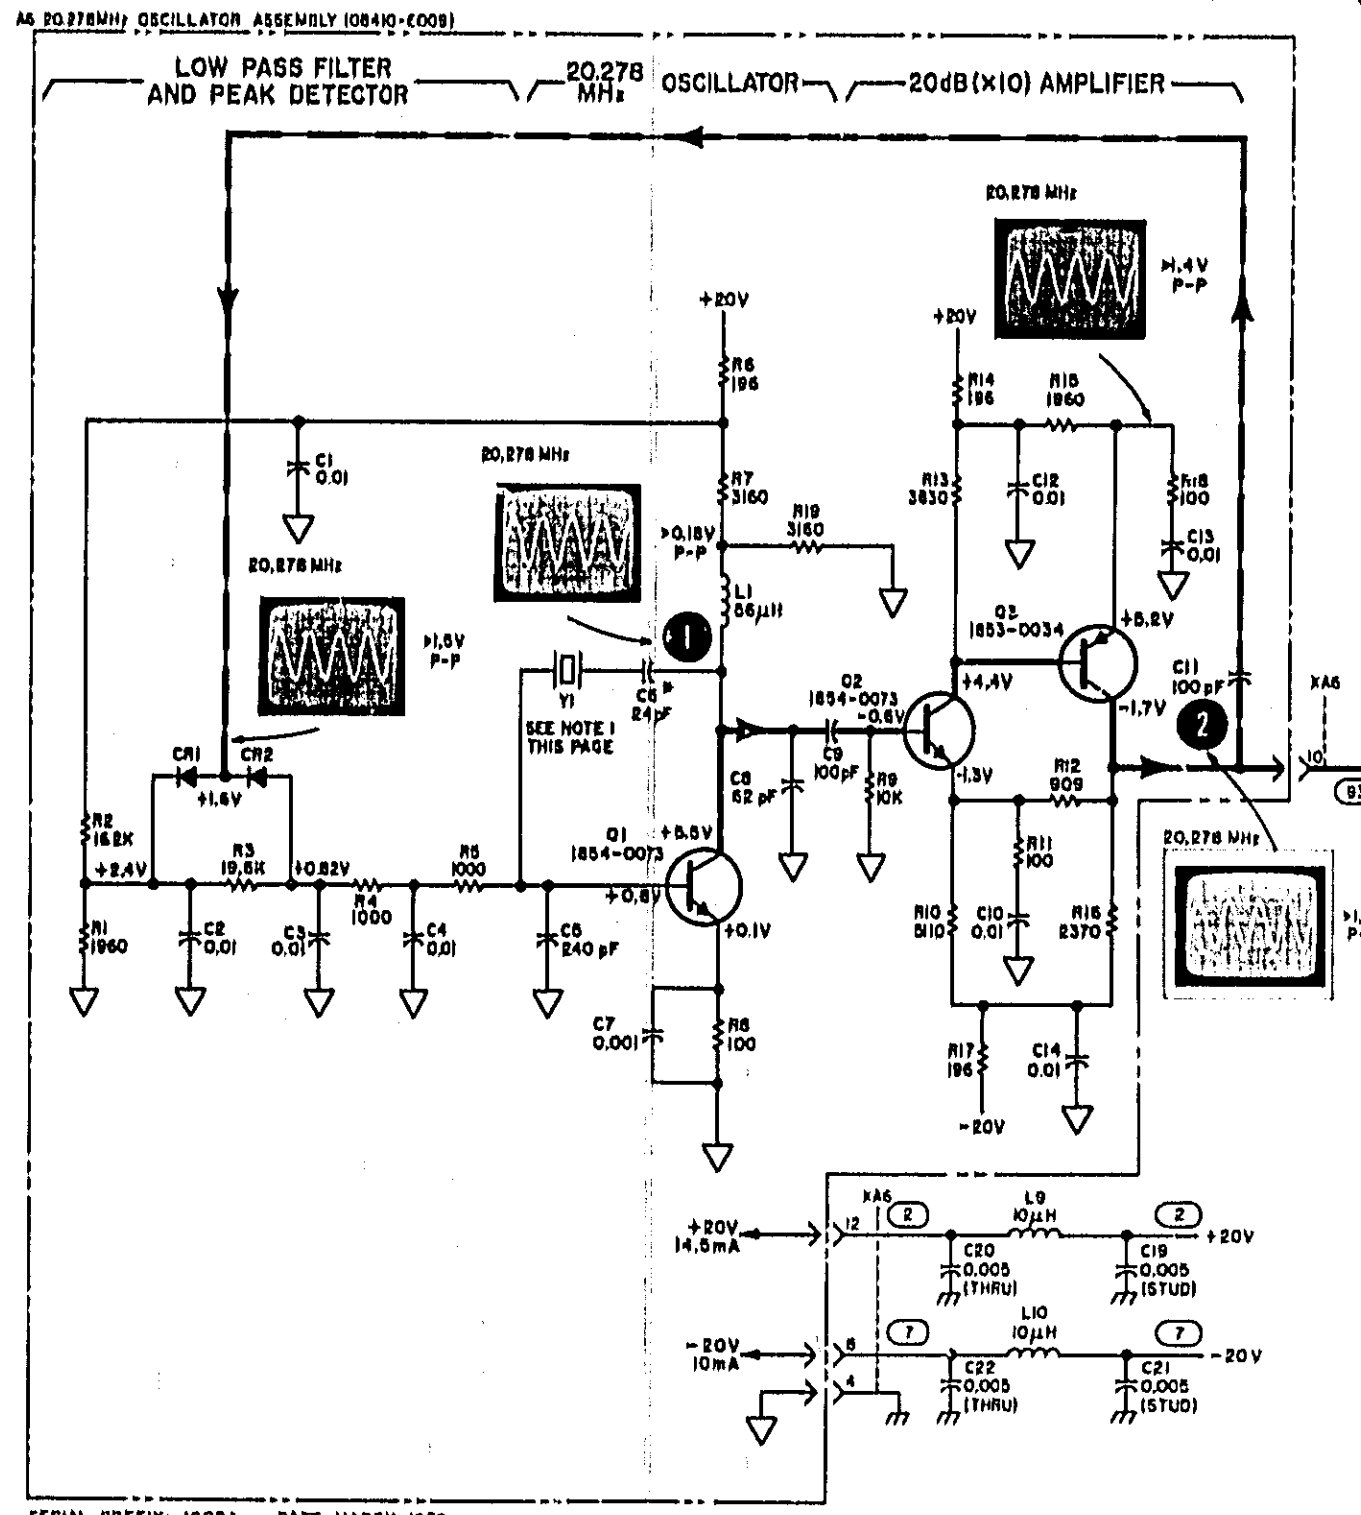

SERIAL PREFIX: 1902A DATE: MARCH 1979

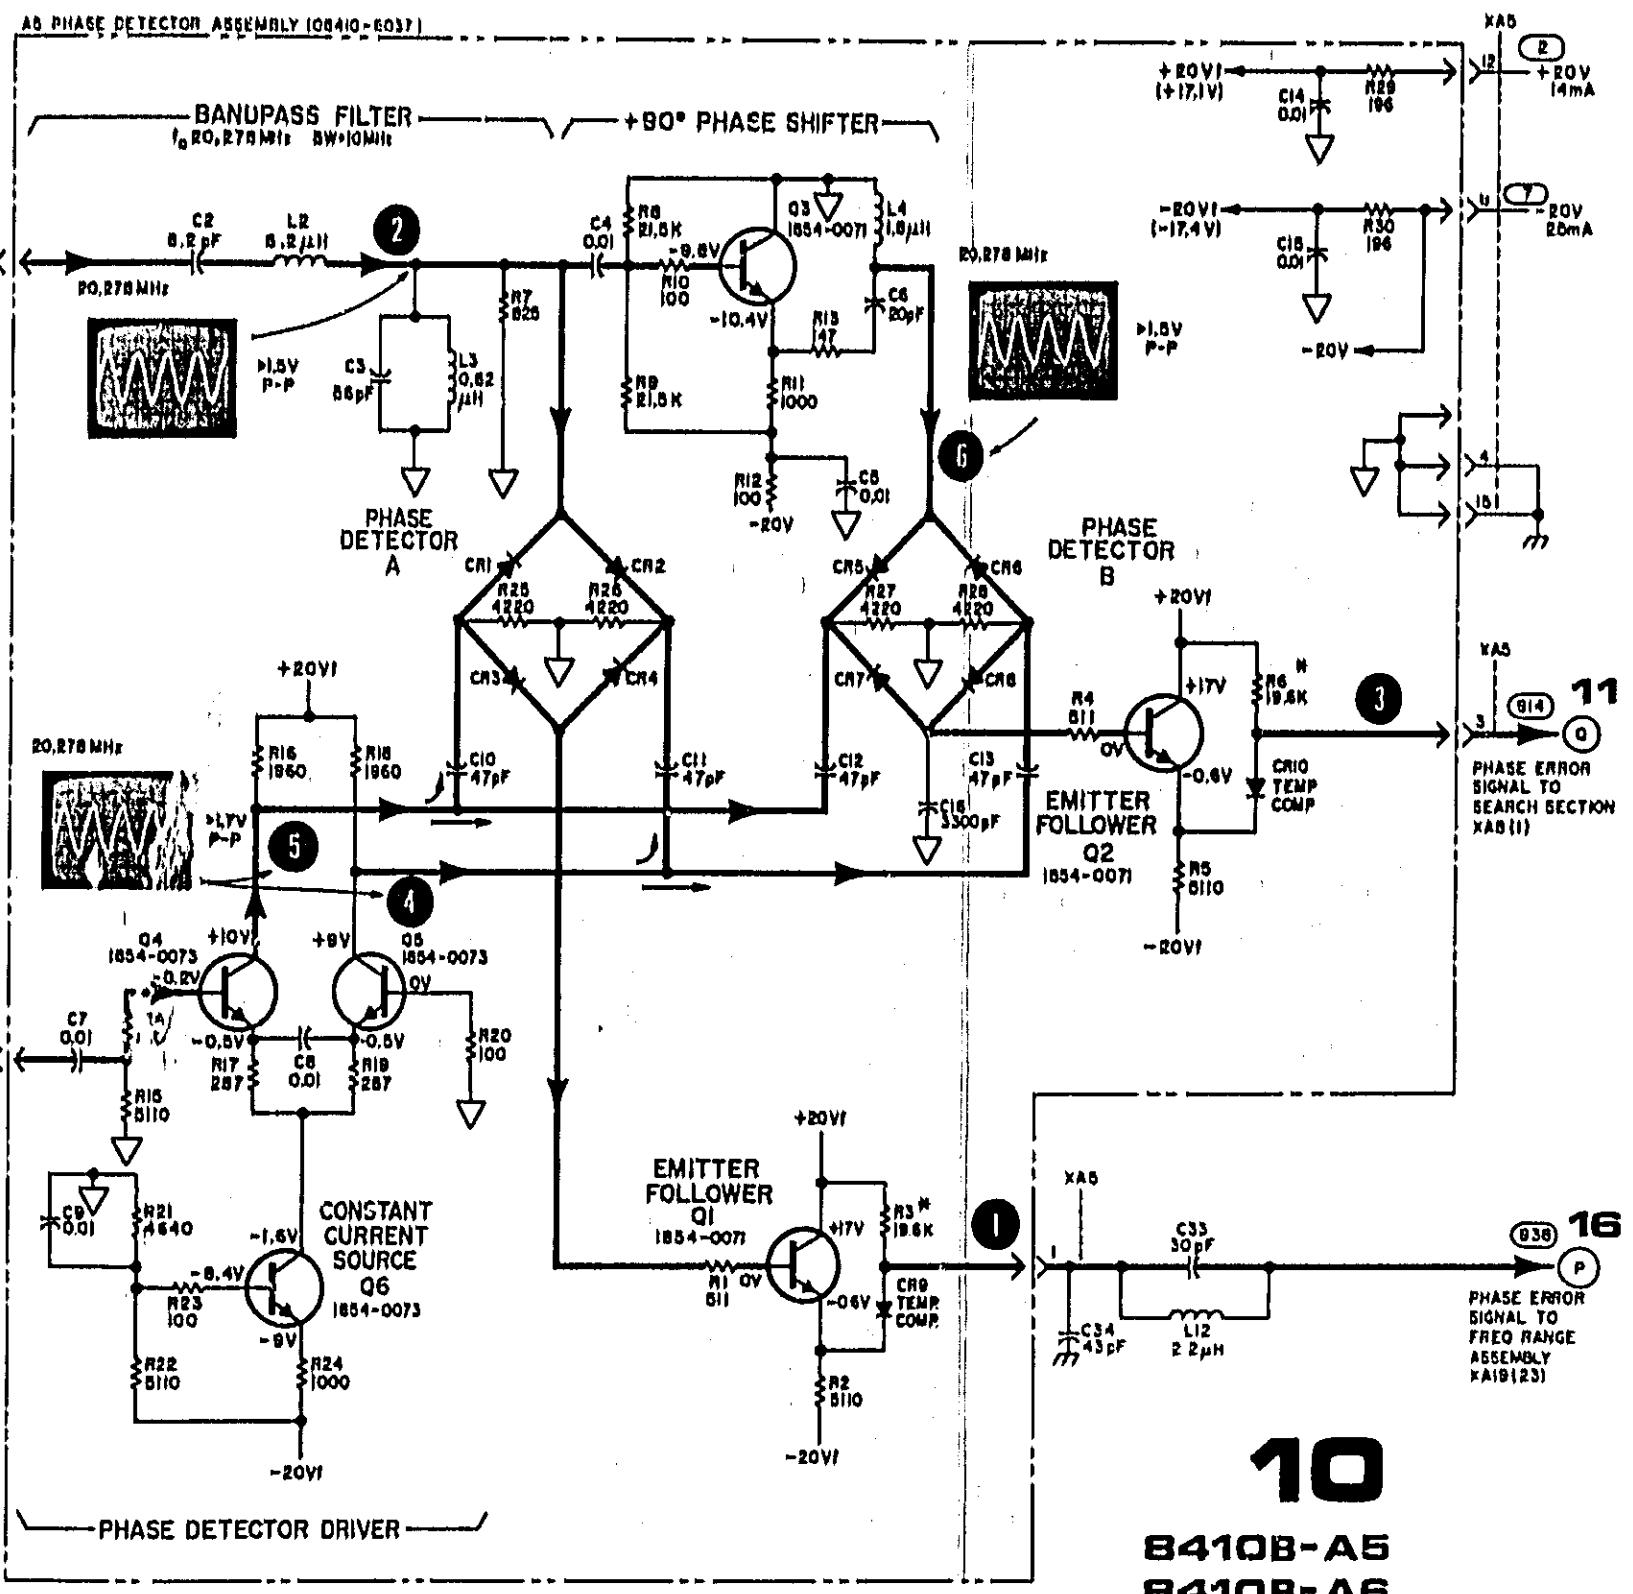


10
8410B-A5
8410B-A6
 ALSO: 8410B-C19, C20, C21,
 C22, C33, C34, L9, L10, L12

Figure 8-53. 8410B-A5 and A6 Parts Location

Figure 8-54. 8410B-A5 and A6 Schematic Diagram

8410B SEARCH SIGNAL GENERATOR A6 AND
8410B VTO DC AMPLIFIER A7 TROUBLESHOOTING
8410B-A8

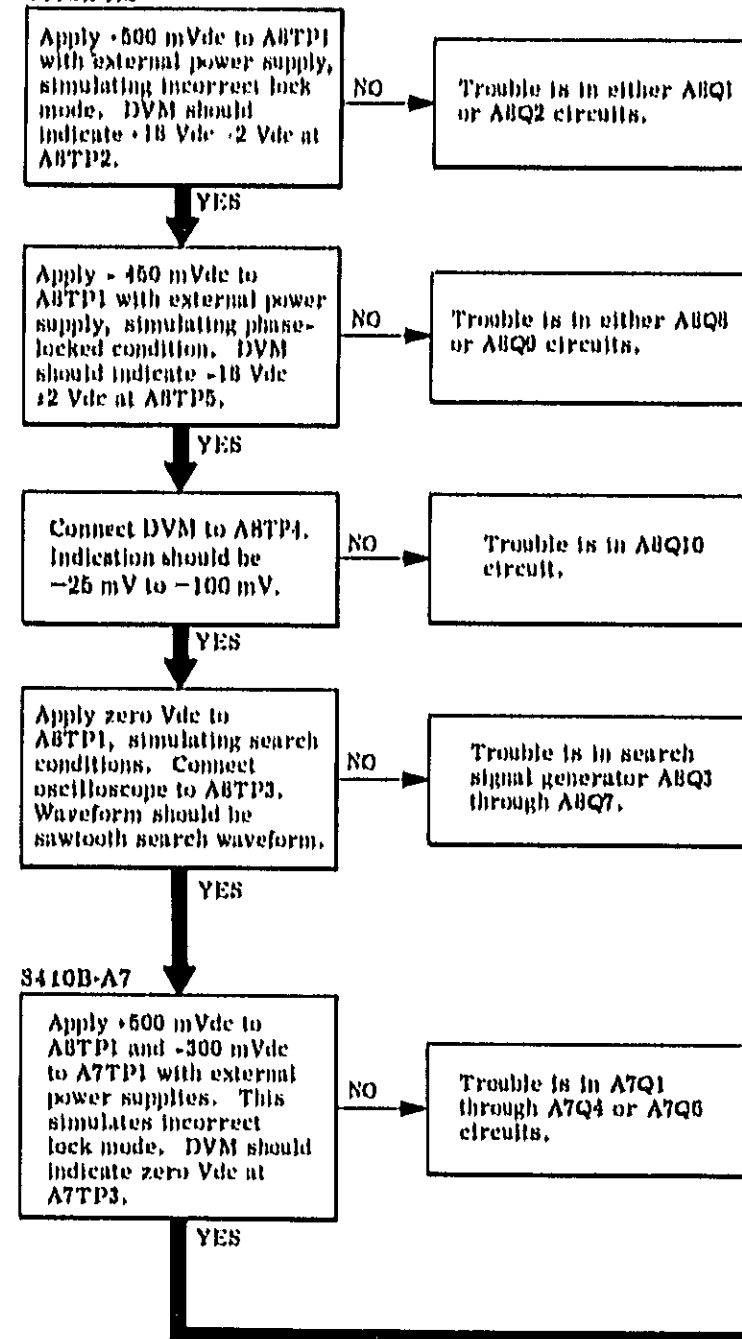

8410B SEARCH A6 CIRCUIT DESCRIPTION

LOCK MODE SENSOR

The correct phase-lock condition is obtained when the system locks to a VTO harmonic that is 20,278 MHz higher in frequency than the input RF signal from the signal source. If the phase-lock loop attempts to lock on a VTO harmonic below the input RF frequency, an incorrect lock mode is detected, and the search mode continues until a new lock point is found. This is accomplished as follows. The Break Lock signal from A8 or phase detector B in A5 produces a positive dc voltage which triggers Schmitt trigger A8Q1-A8Q2. The output of A8Q2 turns off A7Q3 which, in turn, turns off lock-mode switch A7Q4. This opens the phase-lock loop and allows the search sequence to continue until the proper VTO harmonic is found. Trigger and reset points for A8Q1-A8Q2 are adjusted by selecting the value of A8R2. The circuit should trigger and reset with input voltages in the range of 135 to 215 mV.

SEARCH DISABLE TRIGGER


When the phase-lock loop locks in the correct mode, phase detector B of A5 produces a negative

signal which triggers and holds Schmitt trigger A8Q8-A8Q9. With A8Q9 turned off, A8Q10 turns on and clamps A8Q5 collector near ground, stopping the search signal generator from oscillating.

The value of resistor A8R39 is selected to ensure that the turn-on and reset potentials for A8Q8 are between -150 and -200 mVdc.

SEARCH SIGNAL GENERATOR

A8Q3-A8Q7 form the search-signal generator. A feedback loop from the output of A8Q6-A8Q7 passes through emitter follower A8Q3 and triggers Schmitt Trigger A8Q4-A8Q5, initiating another cycle of search signal. The output of the Schmitt Trigger is amplified by A8Q6-A8Q7. The sawtooth waveform is formed by the charging and discharging of A8C1. The output frequency at A8TP3 is about 250 Hz and is determined by the RC time constant of A8C1 and A8R27. When the system phase locks, the search signal is stopped by grounding the collector of A8Q5 through the conduction of A8Q10.

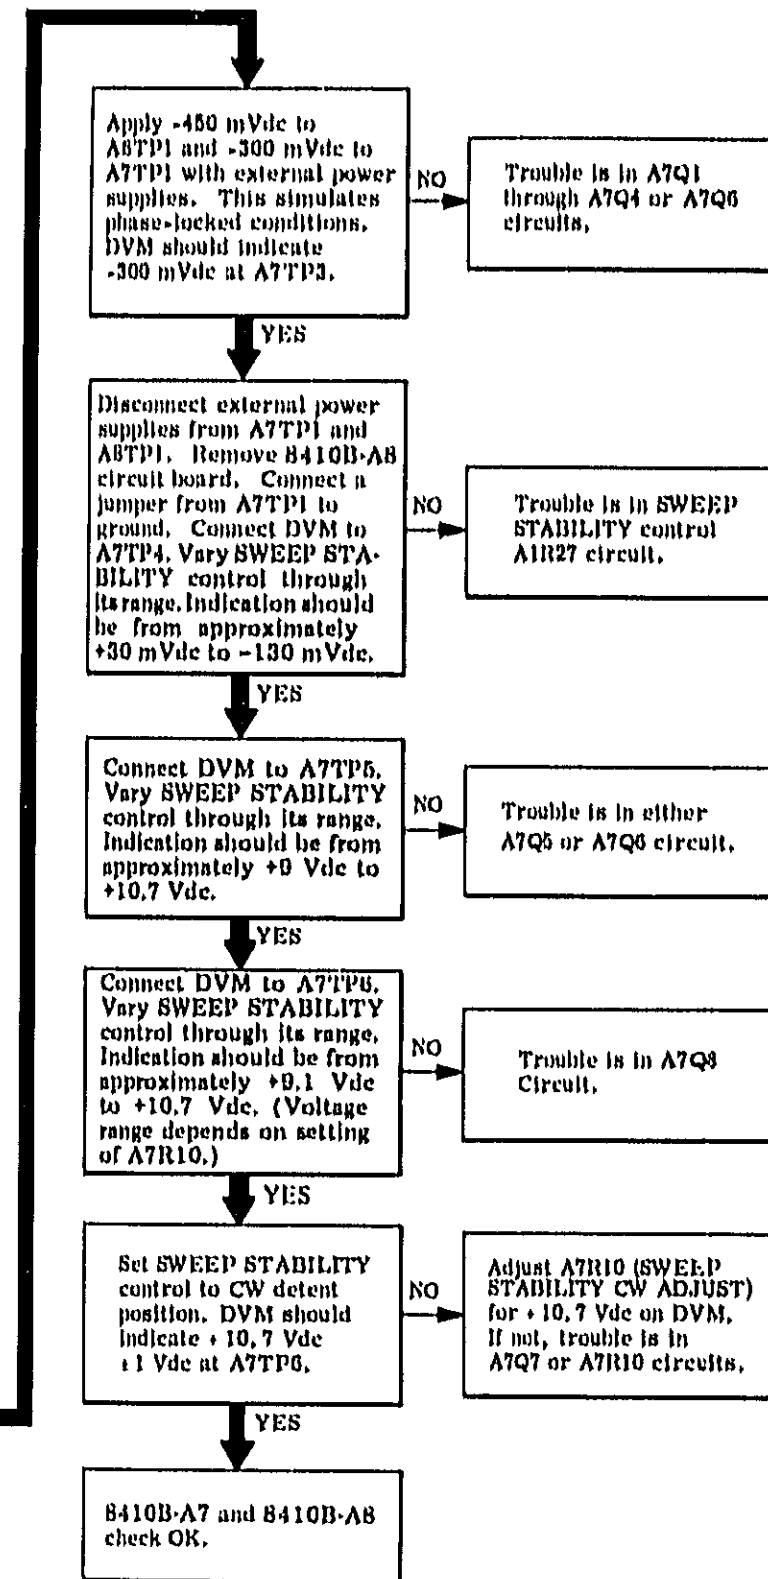

8410B VTO DC AMPLIFIER A7, CIRCUIT DESCRIPTION

LOCK MODE SWITCH

Field effect transistor (FET) A7Q4 passes or blocks the phase-error signal from A5 and Search Initialize signal from A9, depending on the bias voltage at the gate (G). A negative gate-to-source bias blocks current flow through the FET, and zero or positive voltage between the gate and source allows signal flow through the FET.

When an incorrect lock mode is sensed, a +19 Vdc signal is applied to the base of A7Q3. This (1) turns off A7Q3, biasing off A7Q4, and breaking the phase-lock loop; and (2) turns on A7Q1 and A7Q2, clamping to ground the base circuit of A7Q6 through A7Q2.

When the phase-lock loop loses lock, a positive-going pulse from the collector of A8Q9 passes through A7C1 to the bases of A7Q1 and A7Q3, causing A7Q1 to turn on and A7Q3 to turn off. This turns A7Q2 on and turns A7Q4 off. The effect is to ground A7Q6 base, establishing a center frequency for the VTO search, depending on the setting of the SWEEP STABILITY control.

18 dB DC AMPLIFIER

A7Q5 and A7Q6 comprise a differential amplifier. The output at A7TP5 is the difference between signals at A7TP3 and A7TP4.

A7Q7 is a common-base amplifier for the sweep-reference signal from the external sweep generator. The common-base amplifier configuration provides a low-impedance input circuit. A7C8 couples the high-frequency component of the sweep-reference signal.

A7Q8 comprises an emitter follower circuit. The dc voltage at A7TP6 is controlled by SWEEP STABILITY control, A1R27 and A1S1. During search mode, the search waveform rides on the dc level present at A7TP6. At A7TP6 the waveform is

2V peak to peak or greater with the FREQ. RANGE switch set at 0.1-0.25 GHz position. With the FREQ. RANGE switch set at 8-12.4 GHz, the waveform is about 20 mV peak to peak.

The SWEEP STABILITY control A1R27 controls the dc reference level at A7TP6. During search mode this control selects the center frequency of the VTO capture range. In swept-frequency operation this control is adjusted for best phase lock over the entire band. A CW position on the control supplies a fixed dc voltage of approximately 10.7 Vdc at A7TP6 that is applied to the VTO.

EXTERNAL INPUT SIGNALS

The Search Window Size line at connector pin 10 puts a fixed resistance from that line to ground. This resistance is selected in A19 by the setting of front panel FREQ. RANGE GHz switch, A1S1. At the lower input RF frequencies, the selected resistance is high, producing a high-amplitude search waveform in order to sweep a wide VTO range. At the higher input RF frequencies, the selected resistance is lower, producing a low-amplitude search waveform in order to produce a very narrow VTO sweep range. This is necessary because the higher frequencies use a higher harmonic number. This circuit limits the number of lock points to two or three.

The Gain Compensation and Phase Error signal at connector pin 1 comes from A19. In A19, a series resistor is selected to set the amplitude of the phase error signal from A5. The series resistor is selected by the setting of front panel FREQ. RANGE GHz switch, A1S1.

The Search Initialize and Rate Reduction signal at connector pin 6 comes from A9. When the frequency range is 0.11 to 0.2, a slower search rate is required to obtain lock due to the few harmonics available for locking. A positive going square wave on this line starts the search cycle.

Figure 8-55. 8410B-A7 and A8 Troubleshooting

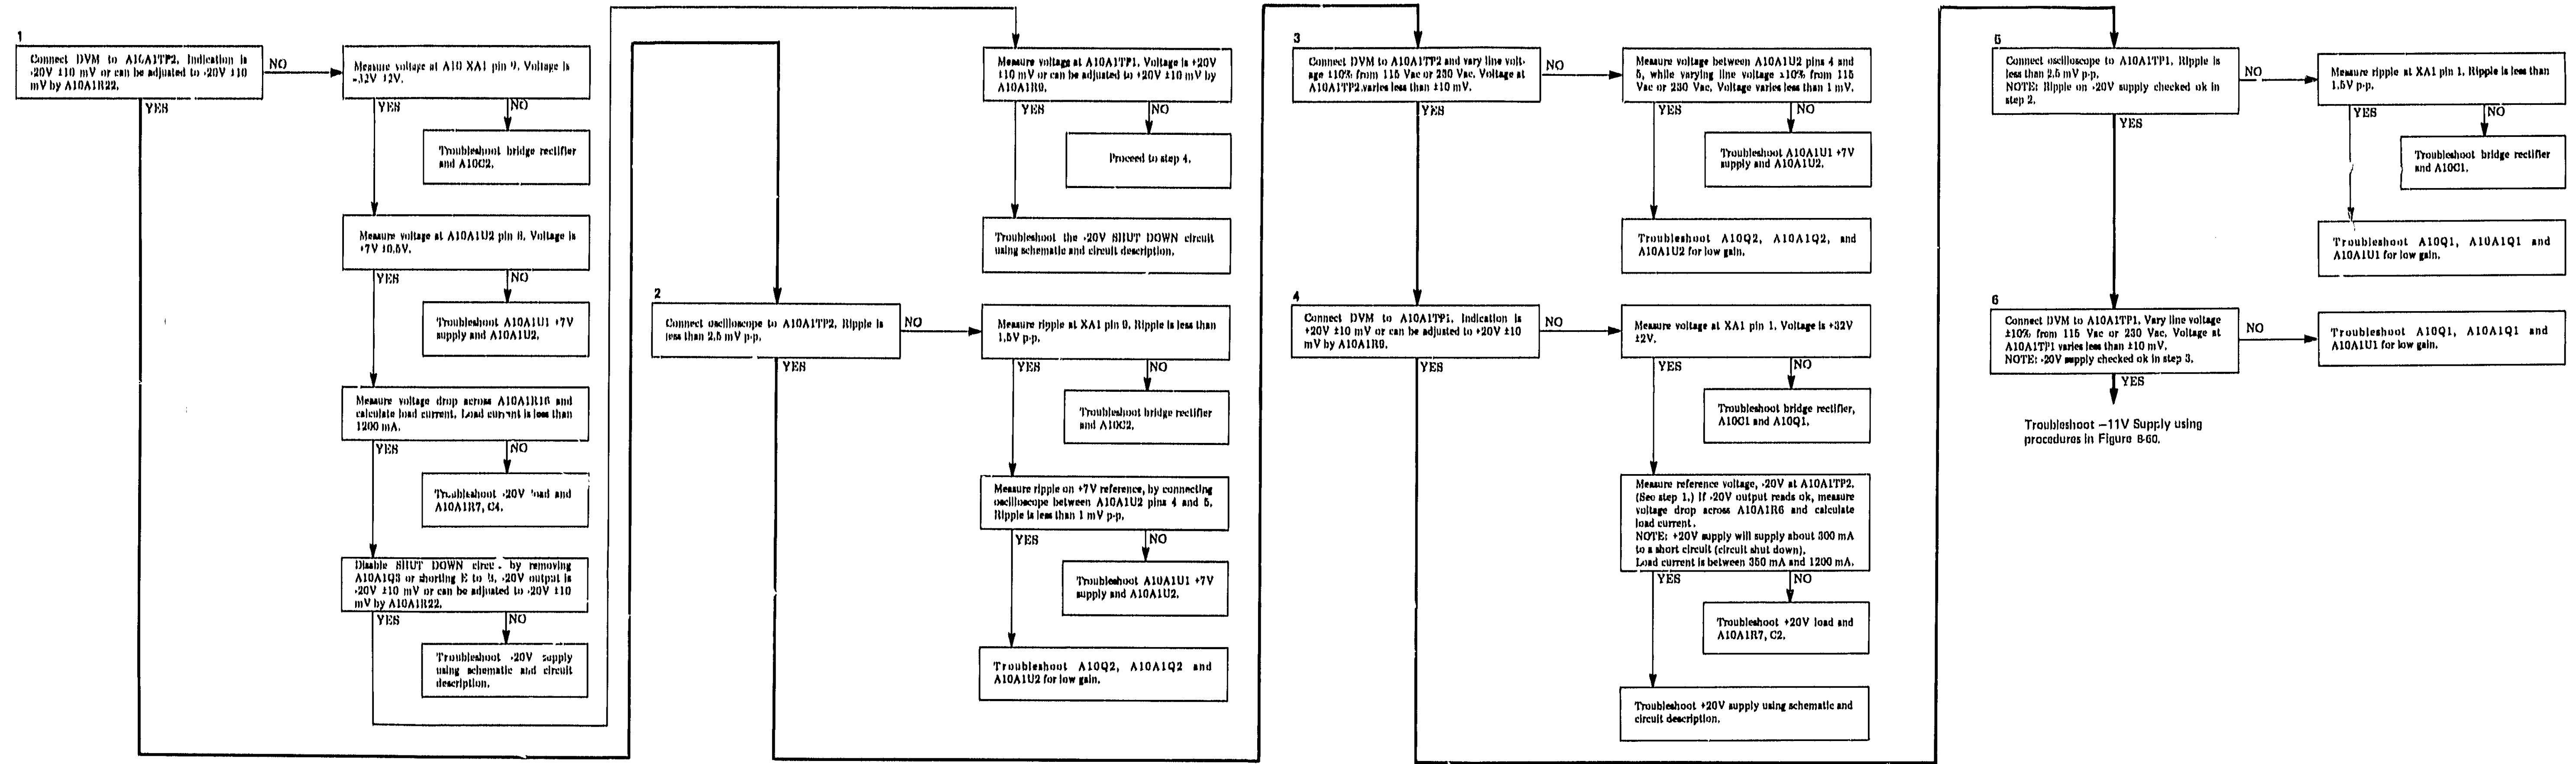


Figure 8-58. 8410B-A10, A10A1 +20V and -20V Power Supply A10 and A10A1 Troubleshooting

8410B +20V AND -20V POWER SUPPLY A10 AND A10A1, CIRCUIT DESCRIPTION**+20V SUPPLY**

The +7V supply has a voltage regulated output that is used in the -20V and -11V supplies.

Part of A10A1U1 is a differential amplifier. It compares voltages at U1 pin 2 and pin 3 and amplifies the difference. If +20V output goes more positive, pin 2 goes more positive than pin 3, resulting in a positive at the inverting input. This causes the amplifier's output to go negative.

A voltage amplifier in A10A1U1 amplifies the error signal from the Differential Amplifier. A negative input from the differential amplifier causes the output to go positive.

A current limiter resistor A10A1R6 senses load current. As load current approaches 1 A, the voltage drop across R6 turns on the current limiter, causing a negative-going input to U1's voltage amplifier which decreases the supply output voltage and limits current to about 300 mA.

Driver A10A1Q1 is a voltage amplifier. A positive input from U1's voltage amplifier causes the output to go negative.

Series regulator A10Q1 acts as a variable resistor. It's resistance varies inversely with collector current. That is, a negative voltage from its driver decreases collector current causing resistance to increase. This drops more voltage across the regulator, decreasing output voltage.

Voltage divider A10A1R11 and R12 samples output voltage. With output at +20V, U1 pin 3 is at about +2V.

Voltage divider A10A1R8, R9 and R10 compares +20V supply against -20V supply.

A10A1C1 and A10A1R1 provide frequency compensation to prevent the supply from oscillating.

NOTE

The -20V supply should always be adjusted first. The -20V output is the reference voltage for the +20V and -11V supplies. If the -20V output goes more negative, the -11V output follows and the +20V output goes more positive.

8410B +20V AND -20V POWER SUPPLY A10 AND A10A1, CIRCUIT DESCRIPTION (Cont'd)**-20V SUPPLY**

The voltage reference section of A10A1U2 establishes a reference voltage for the -20V supply. U2 pin 5 samples the supply's output voltage. Pin 4 is always about 7V more positive than pin 5. Current through pin 4 is negligible so pin 3 is at nearly the same voltage as pin 4. The reference voltage at pin 3 follows any change in the supply's output.

The differential voltage amplifier section of A10A1U2 compares the voltage at U2 pin 3 and pin 2, and amplifies the difference. If the -20V output goes more negative, pin 3 goes more negative than pin 2, resulting in a negative at the non-inverting input. This causes the amplifier's output to go negative.

The current amplifier in A10A1U2 provides drive to Driver A10A1Q2. A negative input from the differential amplifier decreases the current amplifier's conduction which is also the conduction of A10A1Q2.

Resistor A10A1R16 senses load current. As load current approaches 1200 mA, the voltage drop across R16 turns on the current limiter in U2, causing a negative-going input to U2's current amplifier. This decreases its conduction, which will shut down the supply's output voltage.

The conduction of driver A10A1Q2 varies directly with U2's current amplifier conduction. If conduction of Q2 decreases, base drive to series regulator A10Q2 decreases.

Series regulator A10Q2 acts as a variable resistor whose resistance varies inversely with collector current. That is, a decrease in base drive from A10A1Q2 decreases the regulator's collector current. This causes the resistance to increase dropping more voltage across the regulator, and causing the output voltage to go less negative or in a positive direction.

Shut down A10A1Q3 and Q4 shuts down the -20V supply when the +20V supply is shorted. Q4 is normally conducting, holding Q3 at cut off. If the +20V output goes to zero, Q4 shuts off, causing Q3 to conduct. Q3 conducting presents a positive-going signal at U2 pin 2, the inverting input. U2's differential amplifier's output goes negative which shuts down the -20V output. Because of the 7V difference between U2 pin 4 and pin 5, the output shuts down to about -7V.

Voltage divider A10A1R21, R22, and R23 samples the output voltage. With the output at -20V, U2 pin 2 is at about -13V.

A10A1CR2 and CR3 develops base bias for A10A1Q2 and Q5.

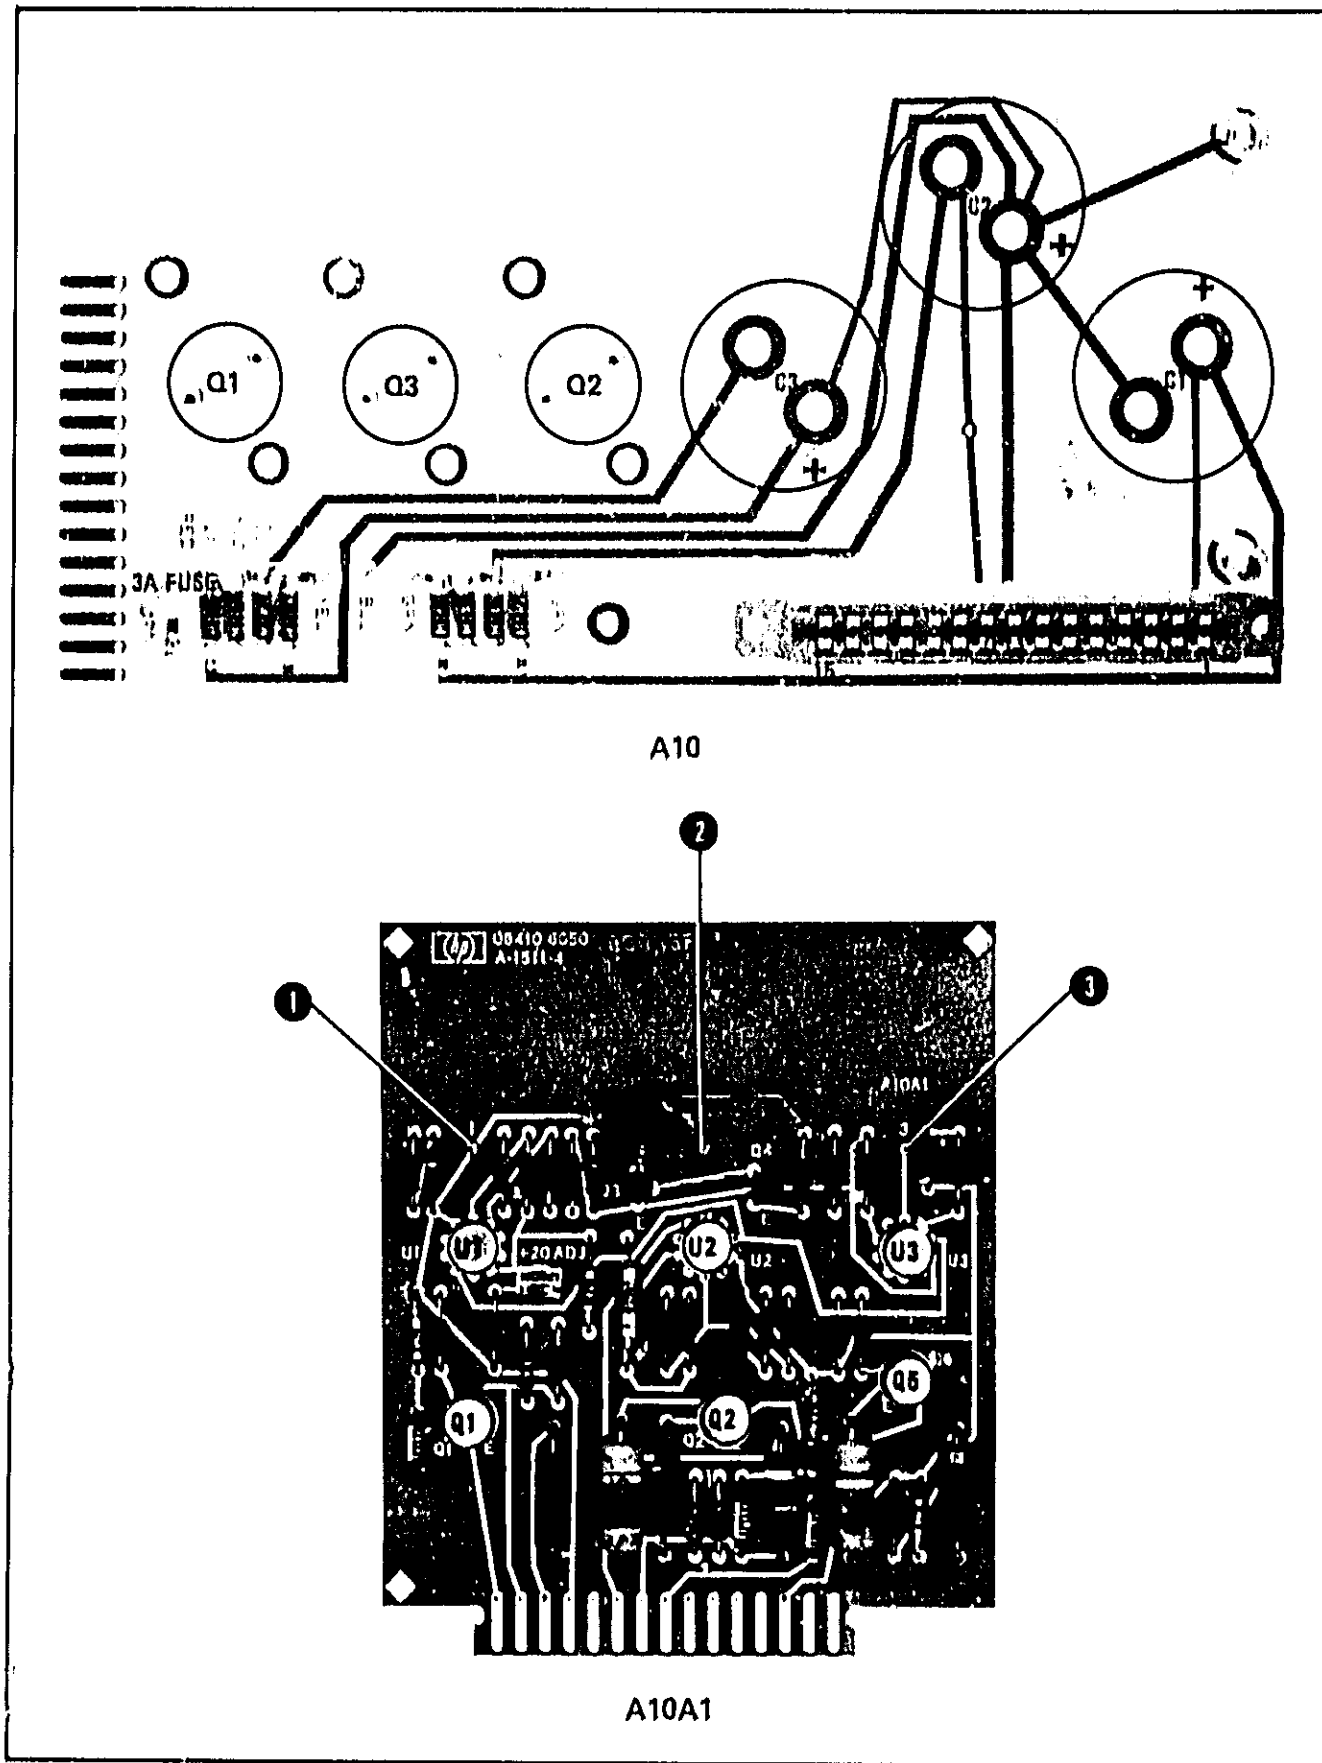


Figure 8-59. S410B-A10A1 Parts Location


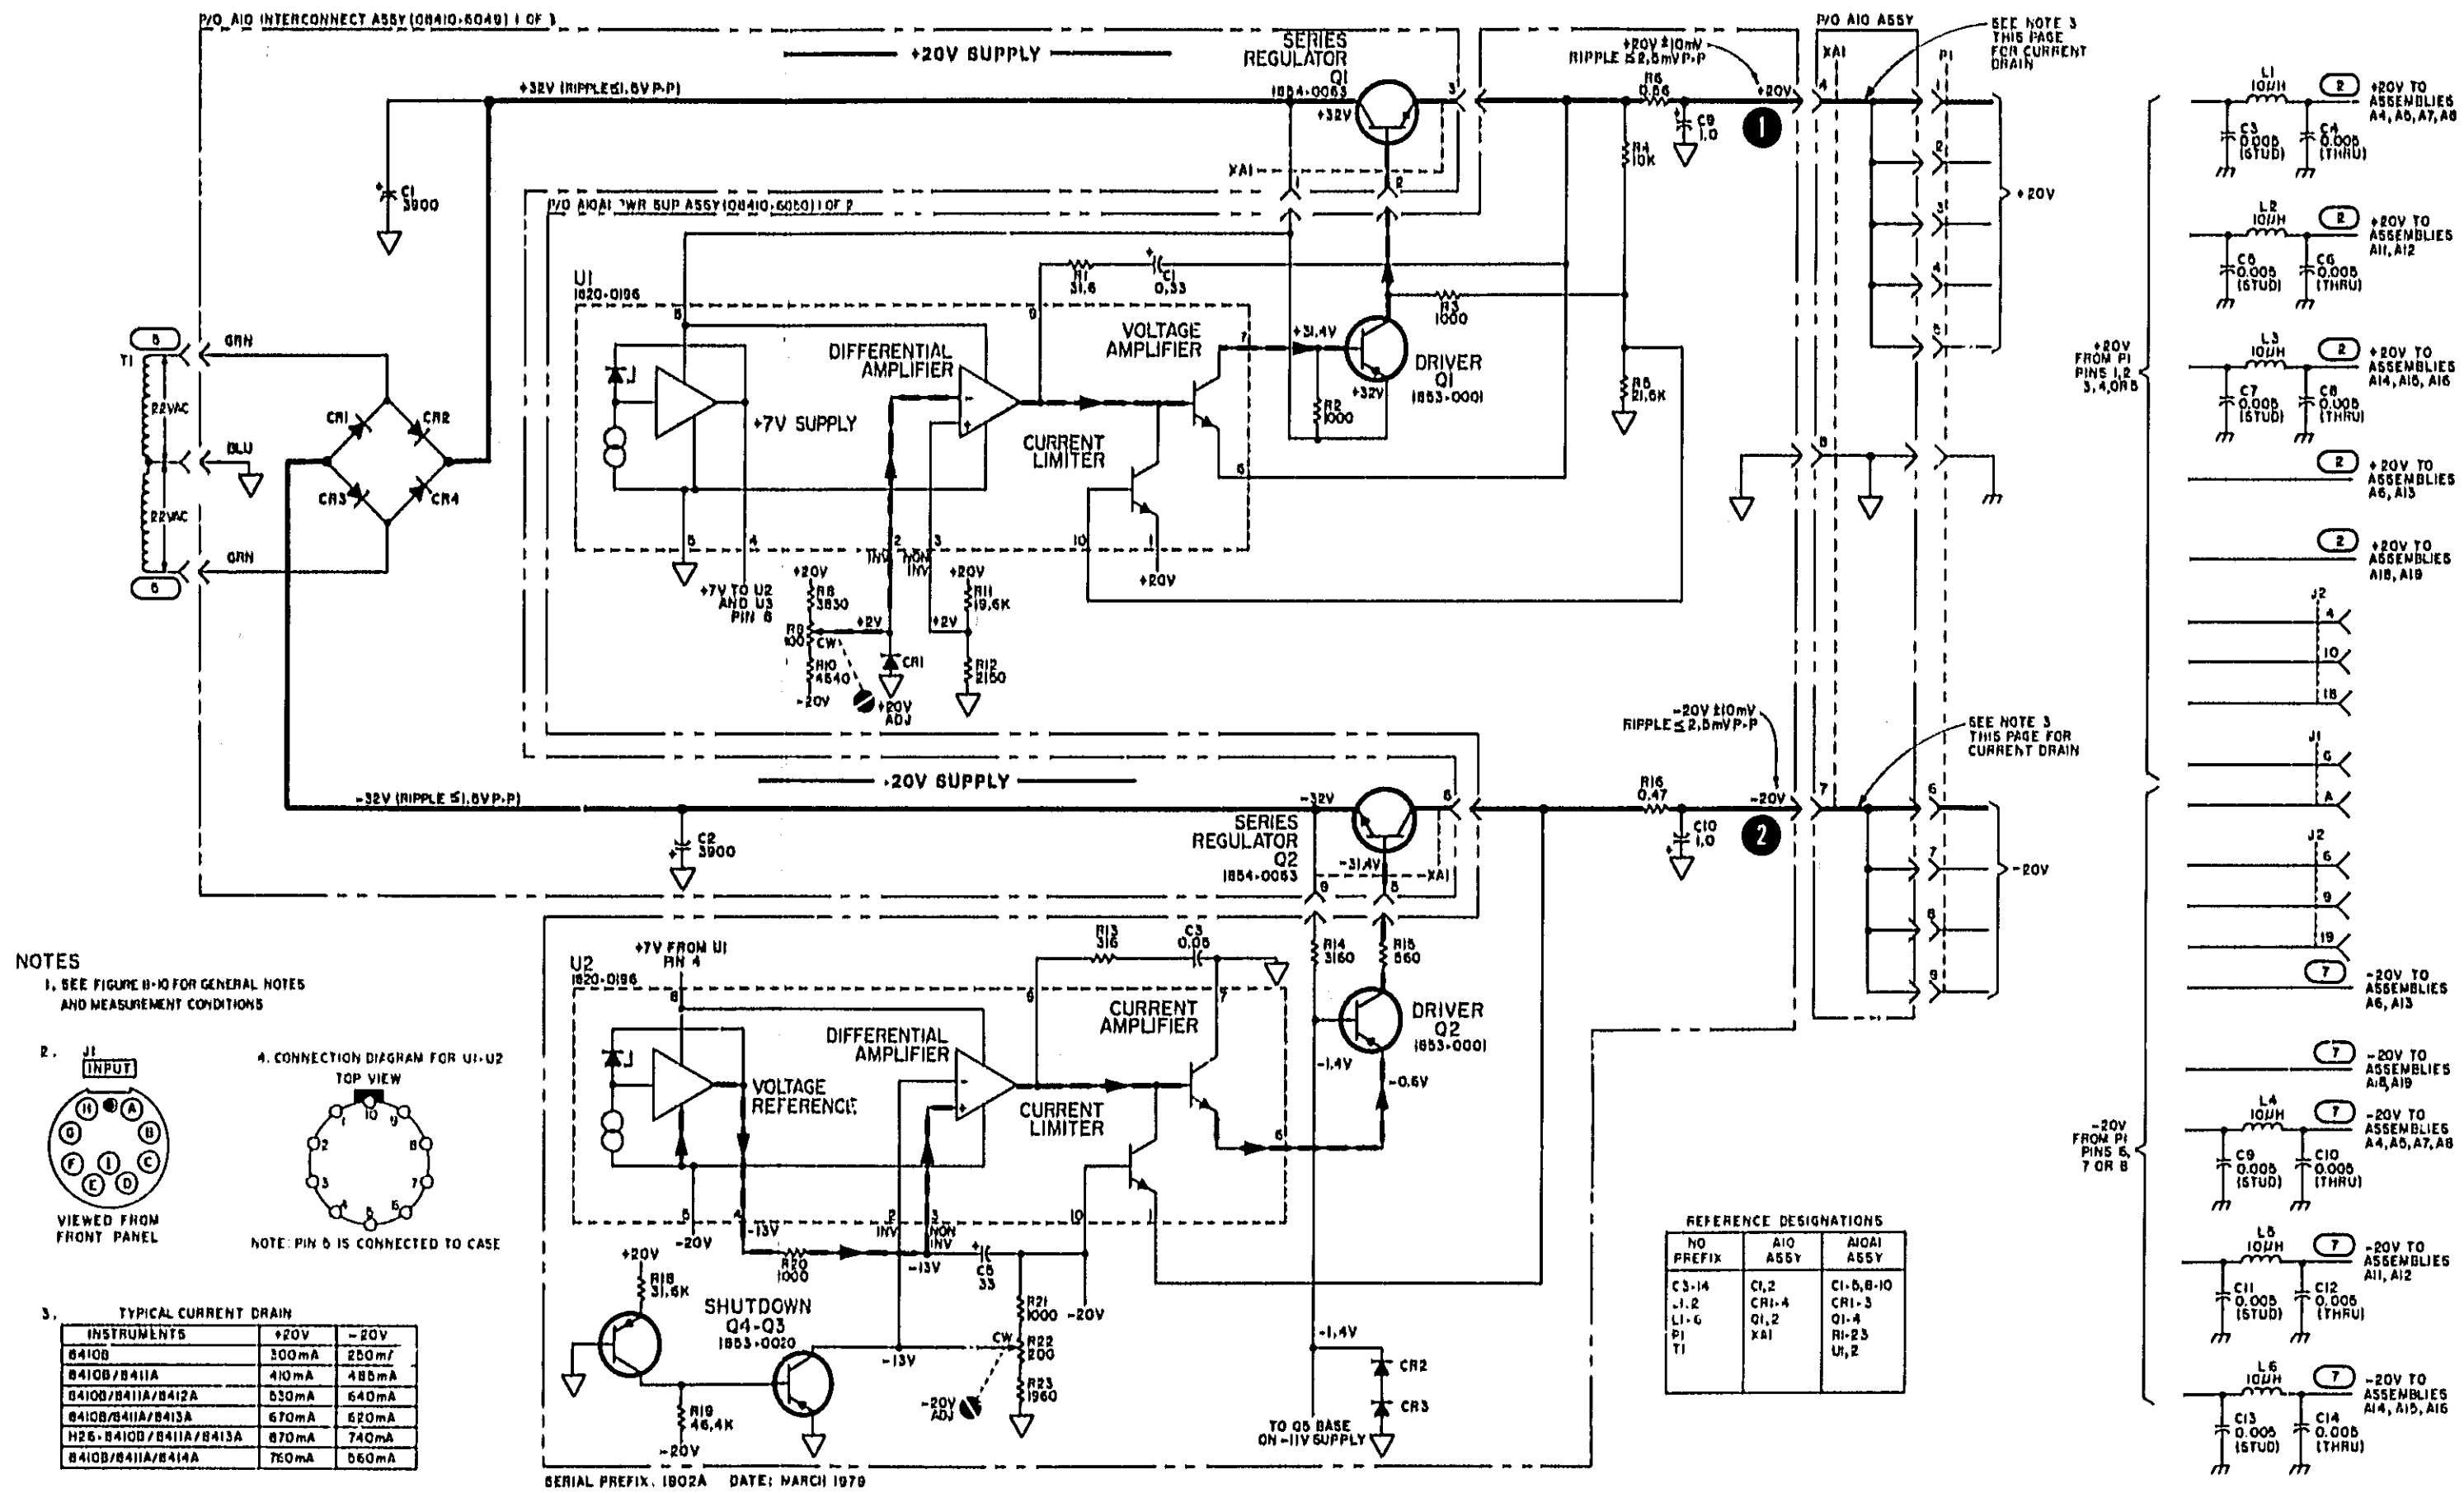


Figure 8-60. 8410B +20V and -20V Power Supply Schematic

12

P/O 8410B-A10
P/O 8410B-A10A1
ALSO: 8410B-C3 THRU C14,
L1 THRU L6, AND P/O T1

8410B -11V POWER SUPPLY A10 AND A10A1, TROUBLESHOOTING

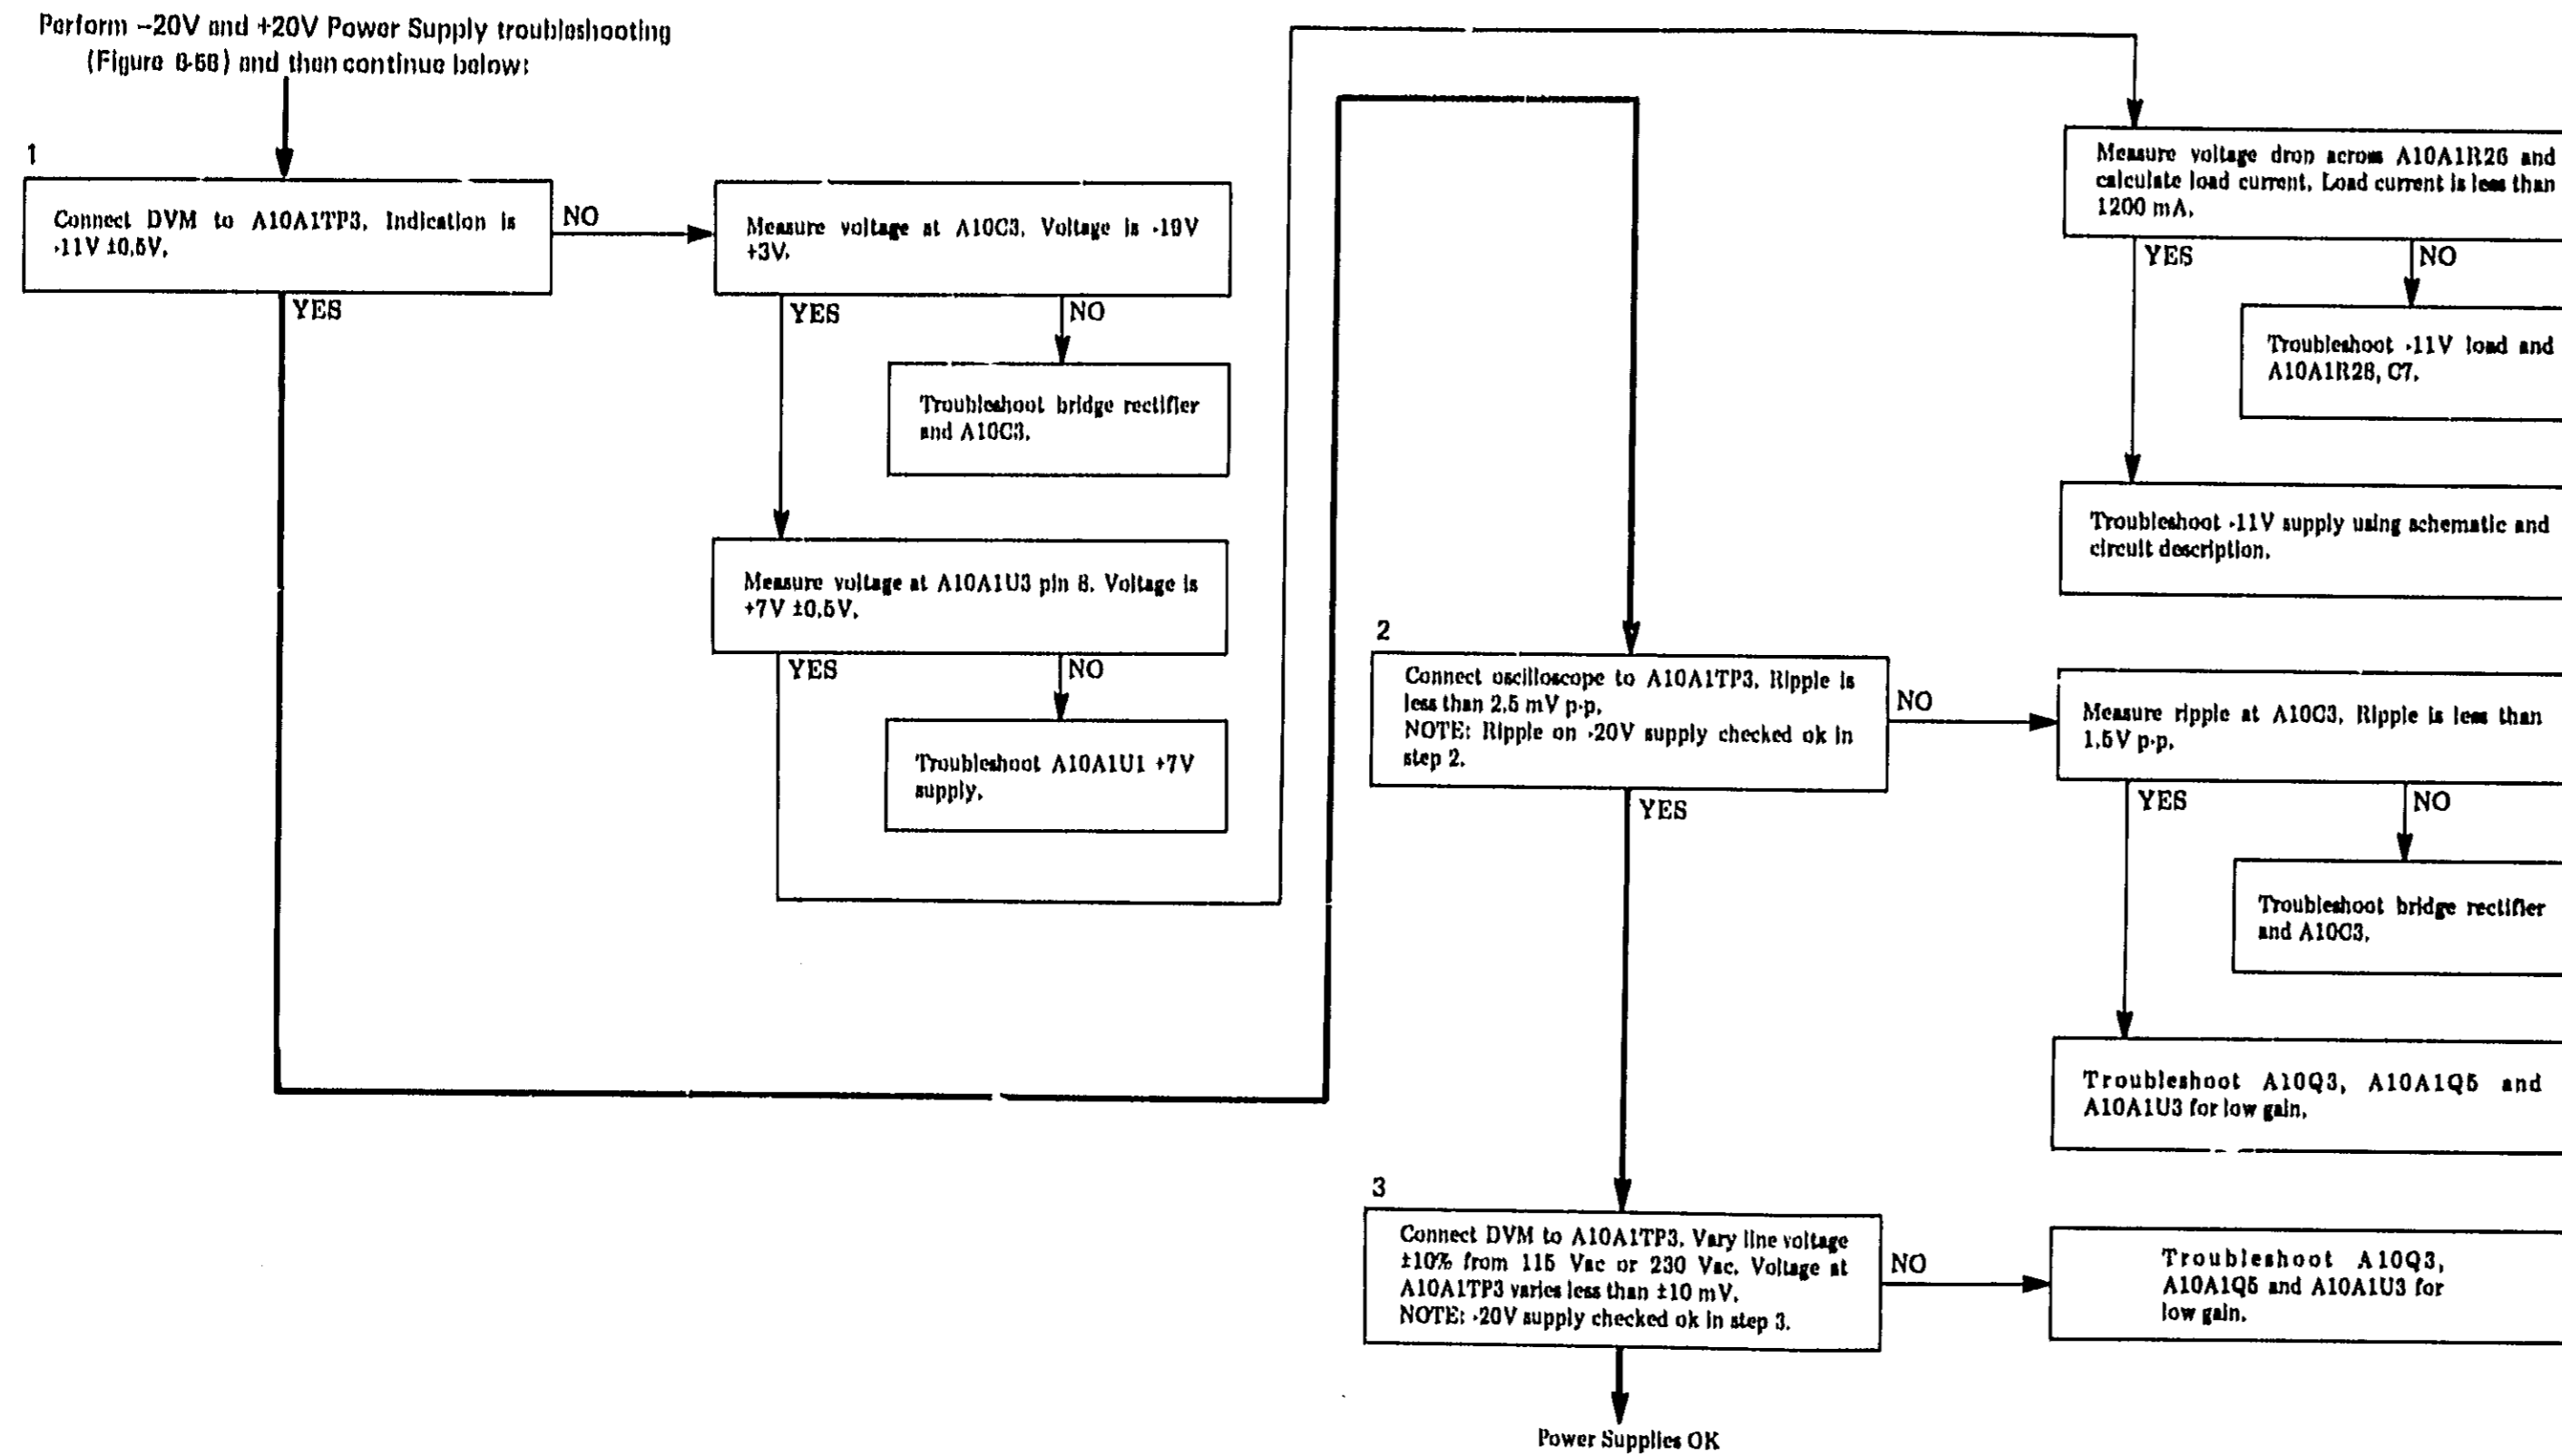

8410B - 11V POWER SUPPLY A10 AND A10A1, CIRCUIT DESCRIPTION

The differential amplifier in A10A1U3 compares voltage at U3 pin 2 and pin 3 and amplifies the difference. If the -11V output goes more negative, pin 3 goes more negative than pin 2, resulting in a negative at the noninverting input. This causes the amplifier's output to go negative. A negative input from the differential amplifier decreases the current amplifier's conduction which is also the conduction of A10A1Q5.

Series regulator A10Q3 acts as a variable resistor whose resistance varies inversely with collector current. That is, a decrease in base drive from A10A1Q5 decreases the regulator's collector current. This, in turn, increases the effective resistance of the regulator and drops more voltage across the regulator, causing the output voltage to go less negative.

Current limiter resistor A10A1R26 senses load current. As load current approaches 1200 mA, the voltage drop across R26 turns on the current limiter causing a negative going input to U3's current amplifier. This decreases its conduction which shuts down the supply's output voltage. The -11V supply will supply about 1200 mA to a short circuit.

A voltage divider composed of A10A1R31 and R32 samples the output voltage. With output at -11V, U3 pin 3 is at about -8V.

A voltage divider composed of A10A1R29 and R30 samples the -20V reference. With the -20V supply operating normally, the voltage at U3 pin 2 is about -8V and equal to the voltage at U3 pin 3. The -11V output follows any change in the -20V output, and if the -20V output is shorted, the -11V supply shuts down.

Conduction of Driver A10A1Q5 varies directly with U3's current amplifier conduction. If conduction of A10A1Q5 decreases, base drive to series regulator A10Q3 decreases.

NOTE

If the -11V output is shorted the ±20V supplies are not affected.

Figure 8-61. 8410B-A10, A10A1 -11V Power Supply Troubleshooting

8410B AUTOMATIC CONTROL A8, CIRCUIT DESCRIPTION

AUTO MODE

In the AUTO mode of operation, the Automatic Control Assembly, A9, provides the timing and logic necessary to keep the 8410B Network Analyzer phase locked and tracking with the RF sweeper source. When triggered, the Automatic Control Assembly starts the automatic relocking cycle with the simultaneously generated control signals as follows:

1. **BREAK LOCK** - Simulates a large phase error signal to the A8 Search Assembly.
2. **SEARCH INITIALIZE** - Sets the Search Signal Generator (P/O A8) to a repeatable starting point.
3. **STOP SWEEP** - Stops the sweeper until the 8410B Network Analyzer is phase locked and stable.
4. **CONVERT** - Control signal to the A/D CONVERTER Assembly (A18) to enable an update of frequency range selection.

When the **FREQ RANGE (GHz)** is in a manually selected frequency range, the A9 Automatic Control Assembly is disabled by a high on the auto disable line.

VTO LIMIT TRIGGER

The output of U4 (TP7) becomes high (+10V) when the VTO tuning voltage (XA9-1) becomes greater than the VTO Trigger Threshold voltage (TP1). This triggers the automatic relocking cycle when the 8411A VTO reaches its frequency range limit.

EXTERNAL TRIGGER

The base of Q4 is held at +5V until the sweeper either begins sweeping after a retrace, or the sweeper switches itself through a sequential break

(changes YIG harmonics). When either of these occur, the sweeper drops the DC level to 0V, Q4 is shut off and the voltage at TP8 goes high (+10V). The change in voltage at TP8 triggers the External Trigger Monostable (U2A), and a low (0V) pulse is generated at TP9.

MONOSTABLE OPERATION

The Hold Allow, A/D Converter, and Loop Initialize monostables, U2B, U3A, and U3B, are connected in parallel, and fired at the same time by either trigger source (U2A or U4). When **FREQ RANGE (GHz) AISI** is in a selected frequency range, the low (0V) DC level at TP4 disables the monostables (U2B, U3A, U3B).

HOLD ALLOW MONOSTABLE

When fired by either trigger source, U3A generates a high (+10V) pulse of typically 15 msec at TP5. This pulse enables the **STOP SWEEP** signal to be generated.

A/D CONVERT MONOSTABLE

When fired by either trigger source, U2B generates a high (+10V) pulse of typically 0.5 msec at TP10. This pulse enables the frequency range selection to be updated on the Frequency Range Assembly (A19).

LOOP INITIALIZE MONOSTABLE

When fired by either trigger source, U3B generates a low (0V) pulse of typically 1.5 msec at TP6. This pulse is used to generate the Break Lock and Search Initialize signals.

LOCK DETECTION

When the 8410B Network Analyzer is not phase locked, a high (-4V) DC level at XA9-2 biases Q1 on and drops the DC level at TP2 to 0V.

SWEEP DELAY

A low (0V) DC level at TP2 causes the outputs of U1A and U1B to go high (+10V). The output of U1A turns on Q2 to set the DC level of U1B-6 to 0V. When the 8410B Network Analyzer regains phase lock, the DC level at TP2 becomes high (+10V) and Q2 is shut off. However the DC level at U1B-6 remains low until C1 charges up through R17 and R18, causing the output of U1B to remain high (+10V) for approximately 1.6 msec after the network analyzer has regained phase lock.

STOP SWEEP

Only when both inputs to U1C are high (+10V), is a **STOP SWEEP** (+10V) DC level present at TP3. This signal turns on Q5, which effectively grounds the **STOP SWEEP** line to the sweeper (J17-7).

BREAK LOCK

The low (0V) DC level on TP6 turns off Q9, which turns on Q8 to give a typically +1V Break Lock signal to the A8 Search Assembly.

SEARCH INITIALIZE

The Search Initialize circuit provides a signal that sends the search oscillator and 8411A VTO to a repeatable starting point. A low (0V) signal at TP6 shuts off Q10 which turns on Q7. The emitter of Q7 goes positive and through CR2 clamps the Search Signal Generator (P/O A8) to a repeatable starting point.

SEARCH RATE REDUCTION

A high (0V) signal on the gate of Q6 turns Q6 on to switch R34 and C8 in parallel with the search signal from the A8 Search Assembly. This RC network slows the search rate for the two lowest and the highest octave bands.

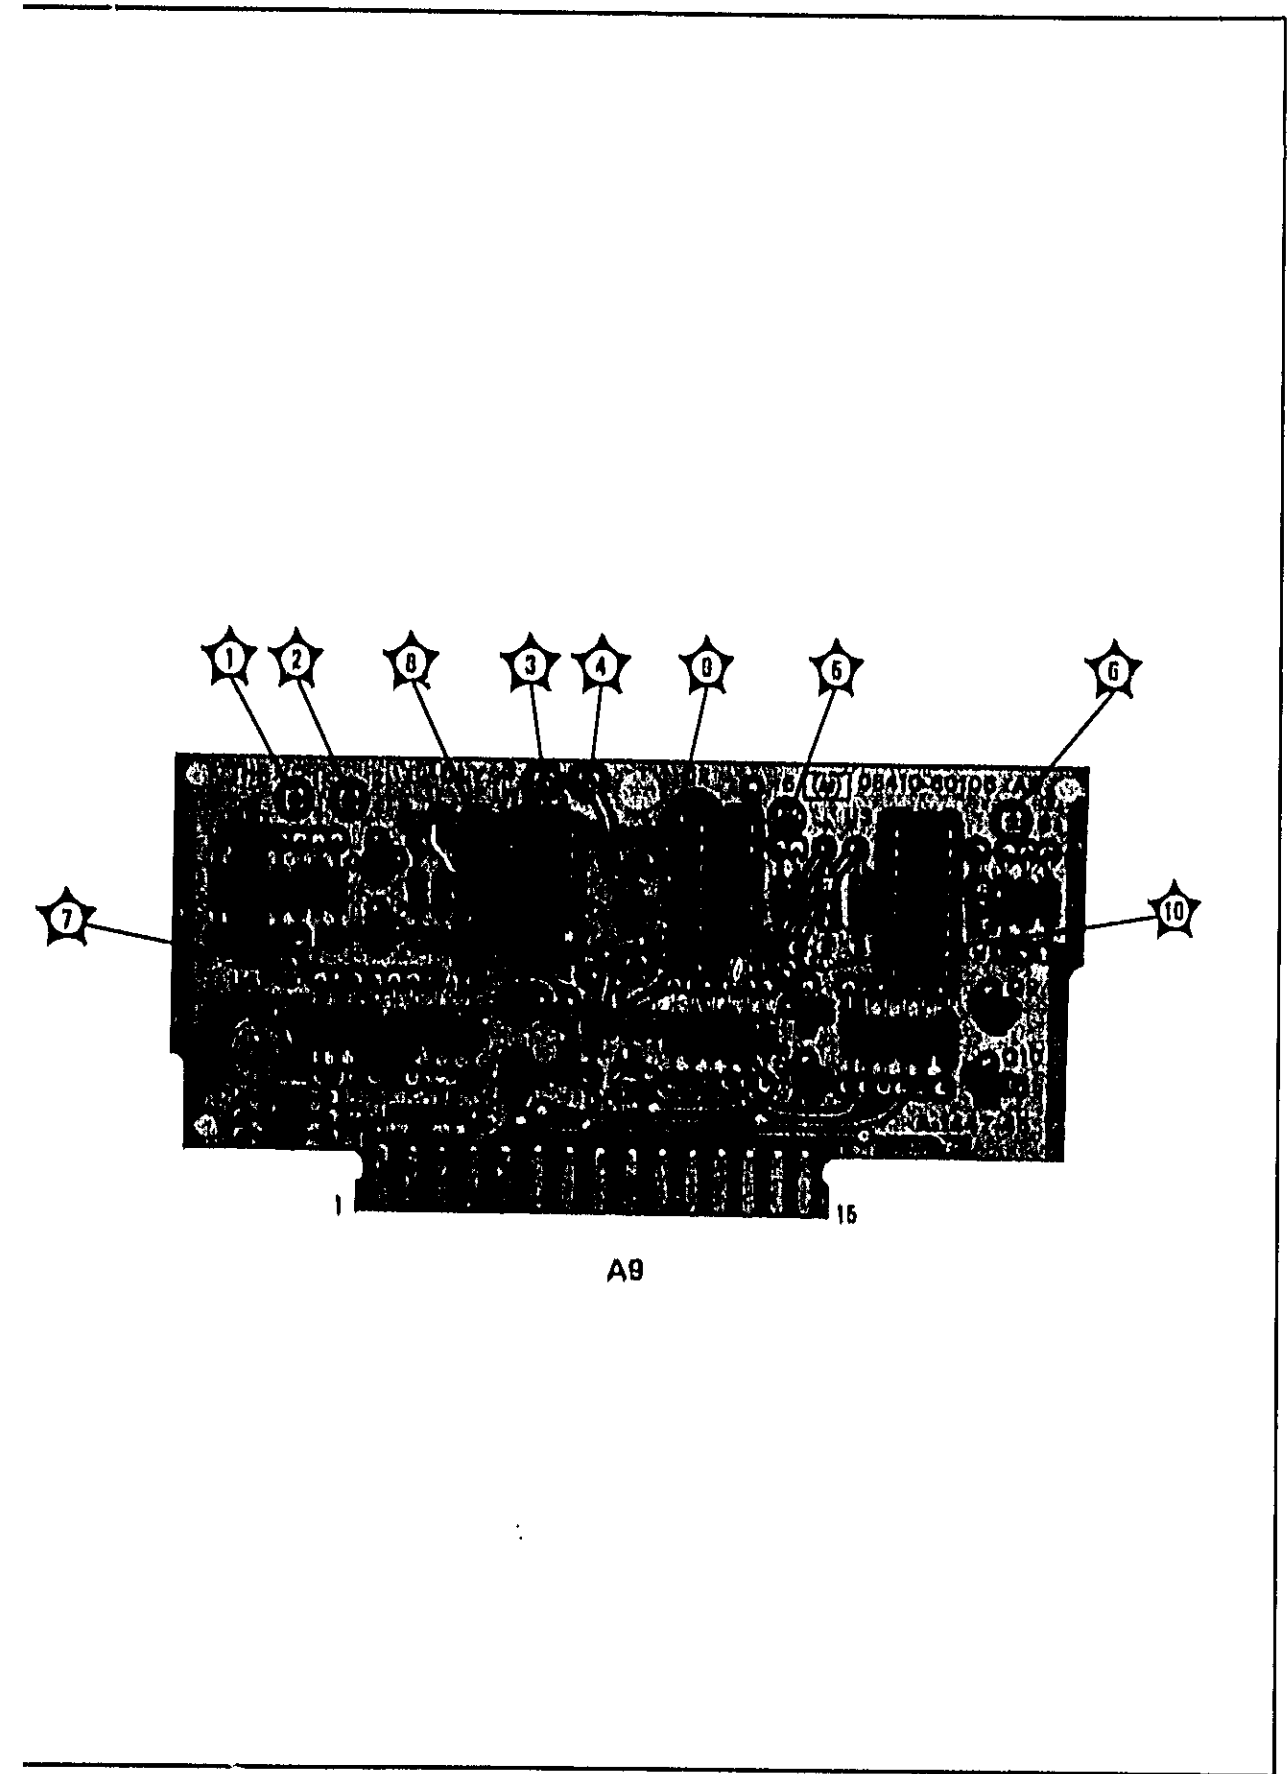


Figure 8-63. S410B-A9 Parts Location

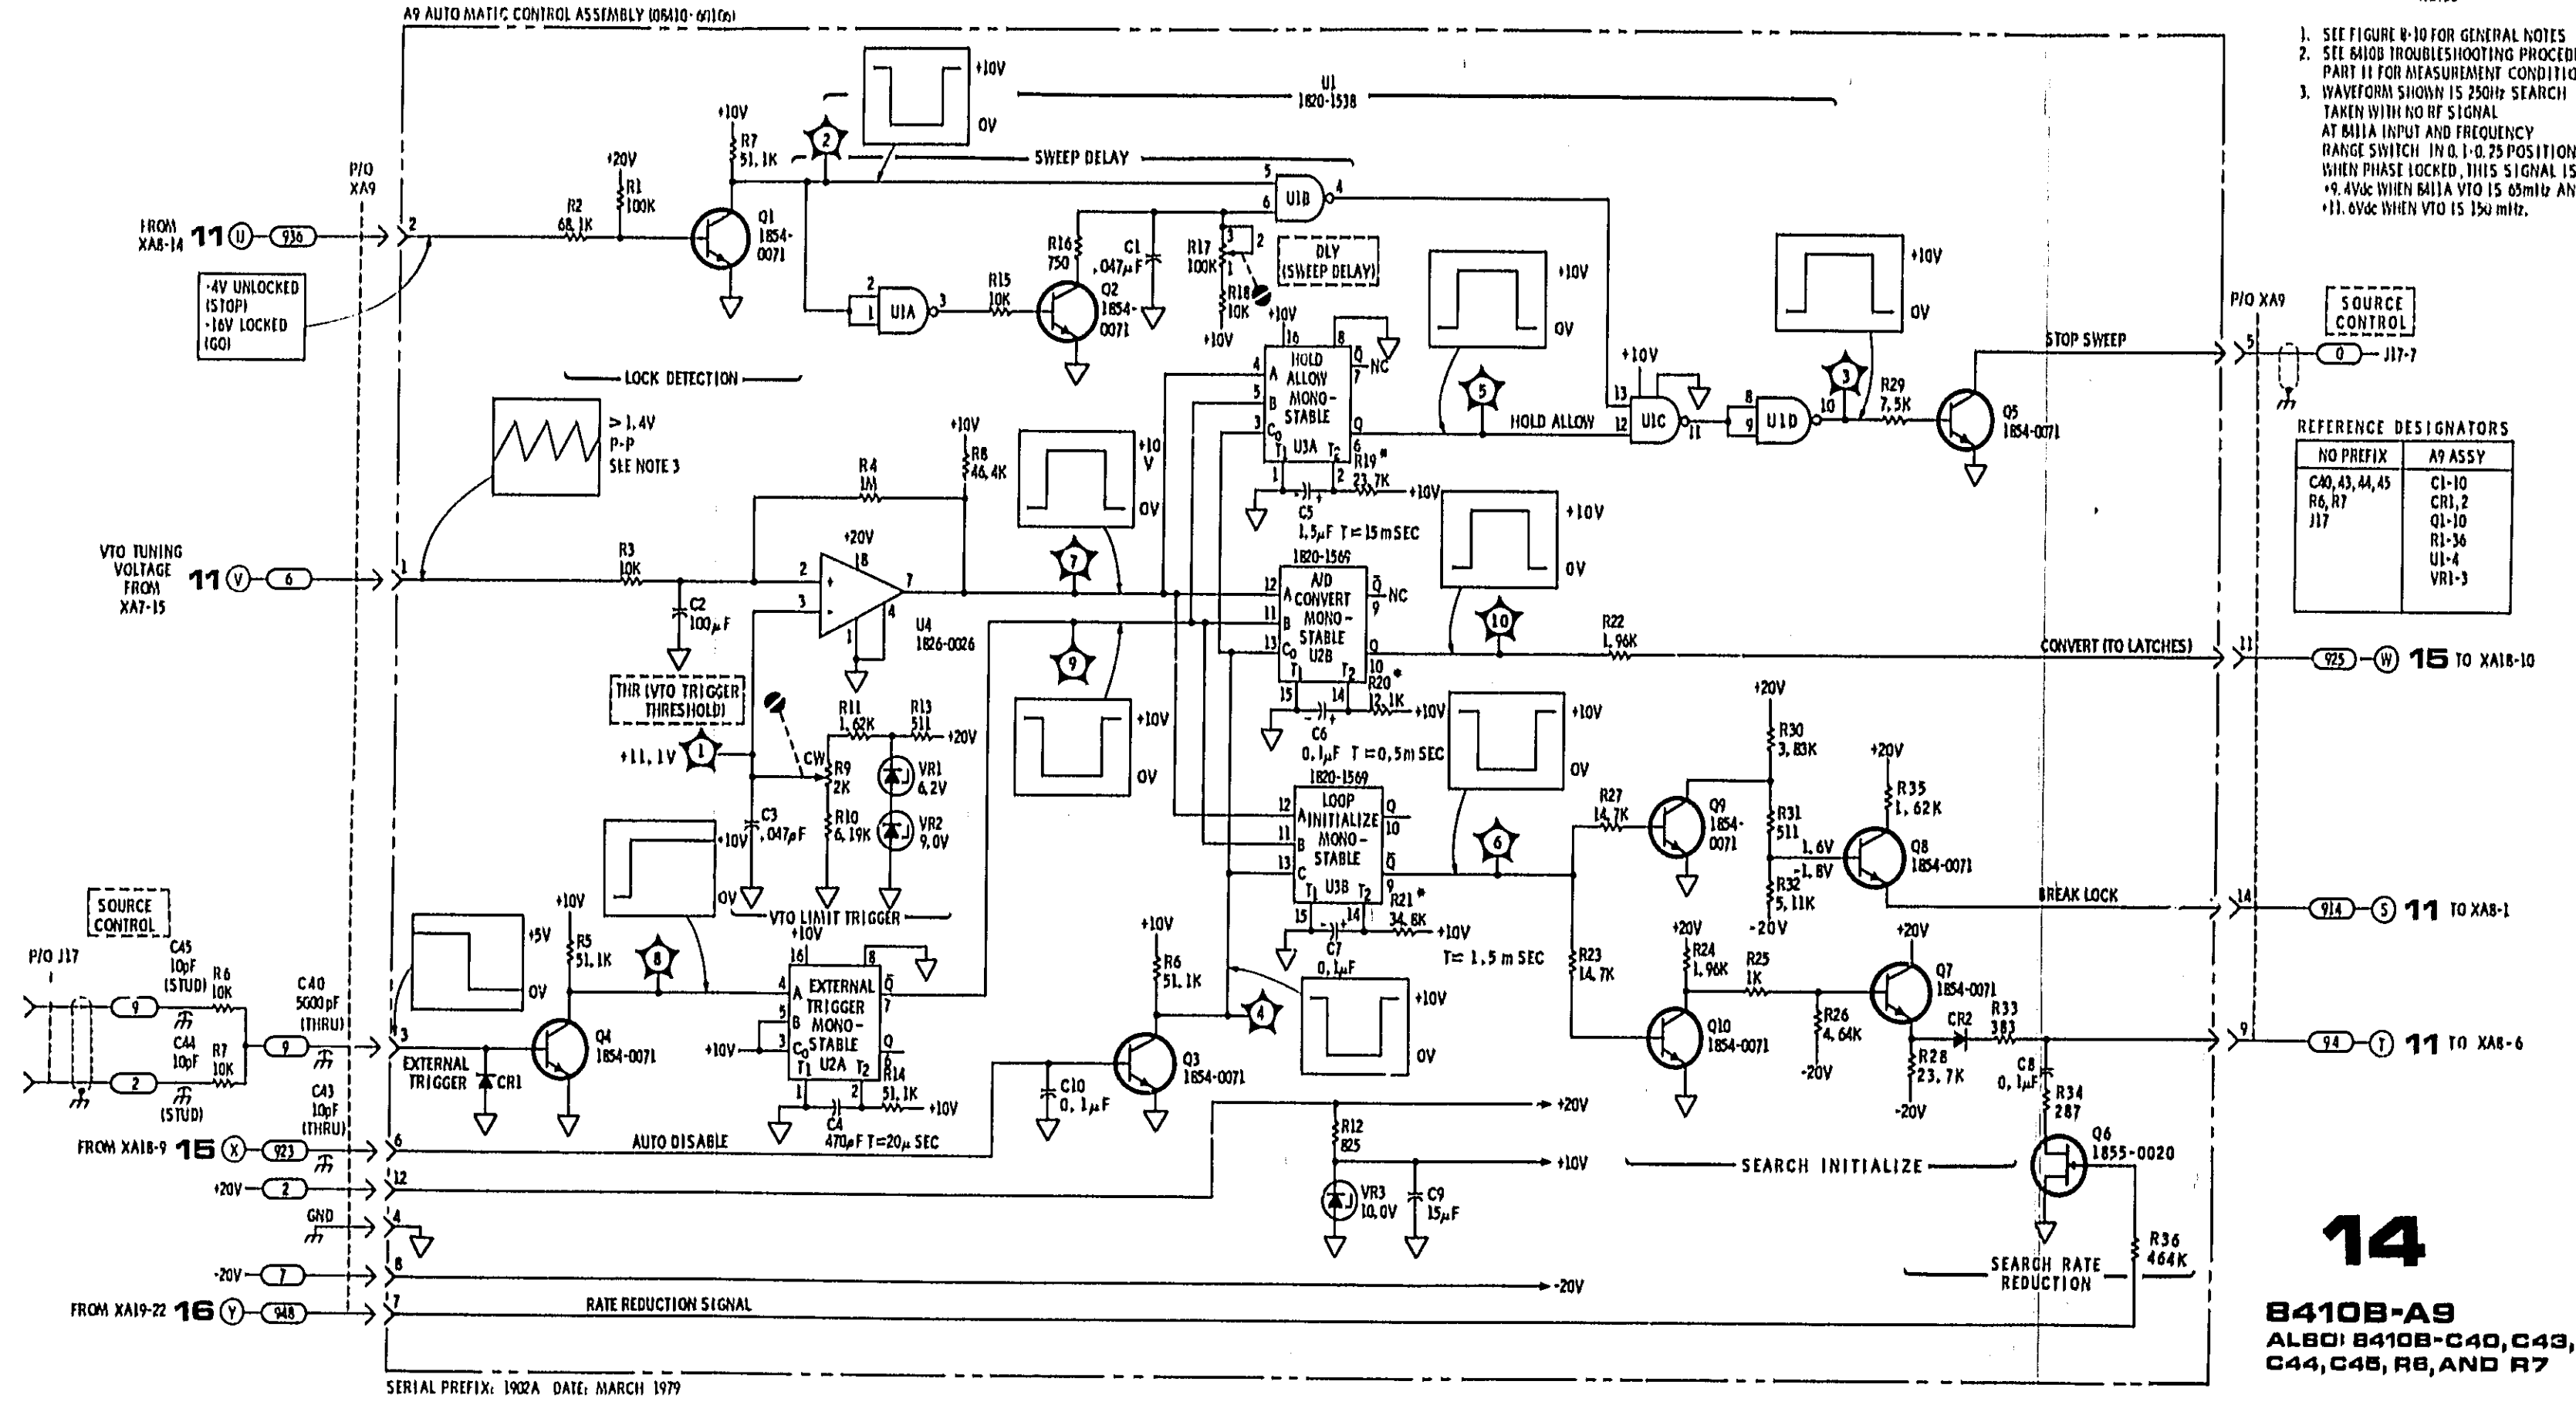


Figure 8-64. S410B-A9 Schematic Diagram

- SEE FIGURE 8-10 FOR GENERAL NOTES
- SEE 8410B TROUBLESHOOTING PROCEDURE PART II FOR MEASUREMENT CONDITIONS.
- WAVEFORM SHOWN IS 250Hz SEARCH TAKEN WITH NO RF SIGNAL AT B11A INPUT AND FREQUENCY RANGE SWITCH IN 0.1-0.25 POSITION. WHEN PHASE LOCKED, THIS SIGNAL IS +9.4Vdc WHEN B11A VTO IS 65mhz AND +11.6Vdc WHEN VTO IS 150 mhz.

REFERENCE DESIGNATORS

NO PREFIX	A9 ASSY
C40, 43, 44, 45	C1-10
R6, R7	CR1, 2
J17	Q1-10
	R1-36
	U1-4
	VR1-3

8410B A/D CONVERTER A18 CIRCUIT DESCRIPTION

GENERAL DESCRIPTION

When enabled by the convert pulse from the A9 Automatic Control Assembly, the A18 A/D Converter takes the analog FREQ REF INPUT and converts it to a binary output for use in the A19 Frequency Range Assembly. The output is determined by the setting of the AISI FREQ RANGE (GHz) switch.

LOG A/D CONVERTER

The Log A/D Converter is composed of a chain of comparators (U7, U8, U11, U12) whose outputs go high (+12V) in succession as the FREQ REF INPUT amp (J16) increases. For example, with a 2.5V FREQ REF INPUT, the outputs of U11 and U12 are high (+12V) and the outputs of U7 and U8 are low (0V).

LATCHES

A high (+12V) Convert signal turns on Q1, which effectively grounds TP7 to open the latches (U5, U6, U9, U10). With the latches open, their outputs correspond with their inputs. When the Convert signal from A9 Automatic Control Assembly becomes low (0V), Q1 shuts off and TP7 switches to a high DC level (+12V). This closes the latches and any change of input has no effect on their output.

ENCODER

The encoder U3 and U4 converts logic from the latches to binary coded decimal logic. The output of U4 is a binary count (0 to 7) of the eight lowest frequency ranges selected, and the output of U3 is a binary count (8 to 13) of the six highest frequency ranges selected. The Encoder is disabled by a low (0V) DC level at pin 5. This signal is present when AISI FREQ RANGE (GHz) is in a selected manual frequency range.

MULTIPLEXER

In the AUTO mode of operation, the Multiplexer (U1 and U2) converts the octal output of the encoders to BCD, inverts the logic, and routes it to the A19 Frequency Range Assembly. The inputs from AISI FREQ RANGE (GHz) are grounded and have no effect. When the frequency range is manually selected, the inputs to the multiplexer from the encoder are 0 Volts, and the inputs from AISI FREQ RANGE (GHz) control the multiplex output. In a manually selected frequency range, a disable signal (Hi) is sent to the encoder and the A9 Automatic Control Assembly.

FREQUENCY RANGE SWITCH

The FREQ RANGE GHz switch on the 8410B front panel connects to the A/D Converter, A18. The switch position puts a logic level at the inputs of Multiplexer U1 and U2, selecting the search window size and loop gain compensation (in A19) for the selected Frequency Range.


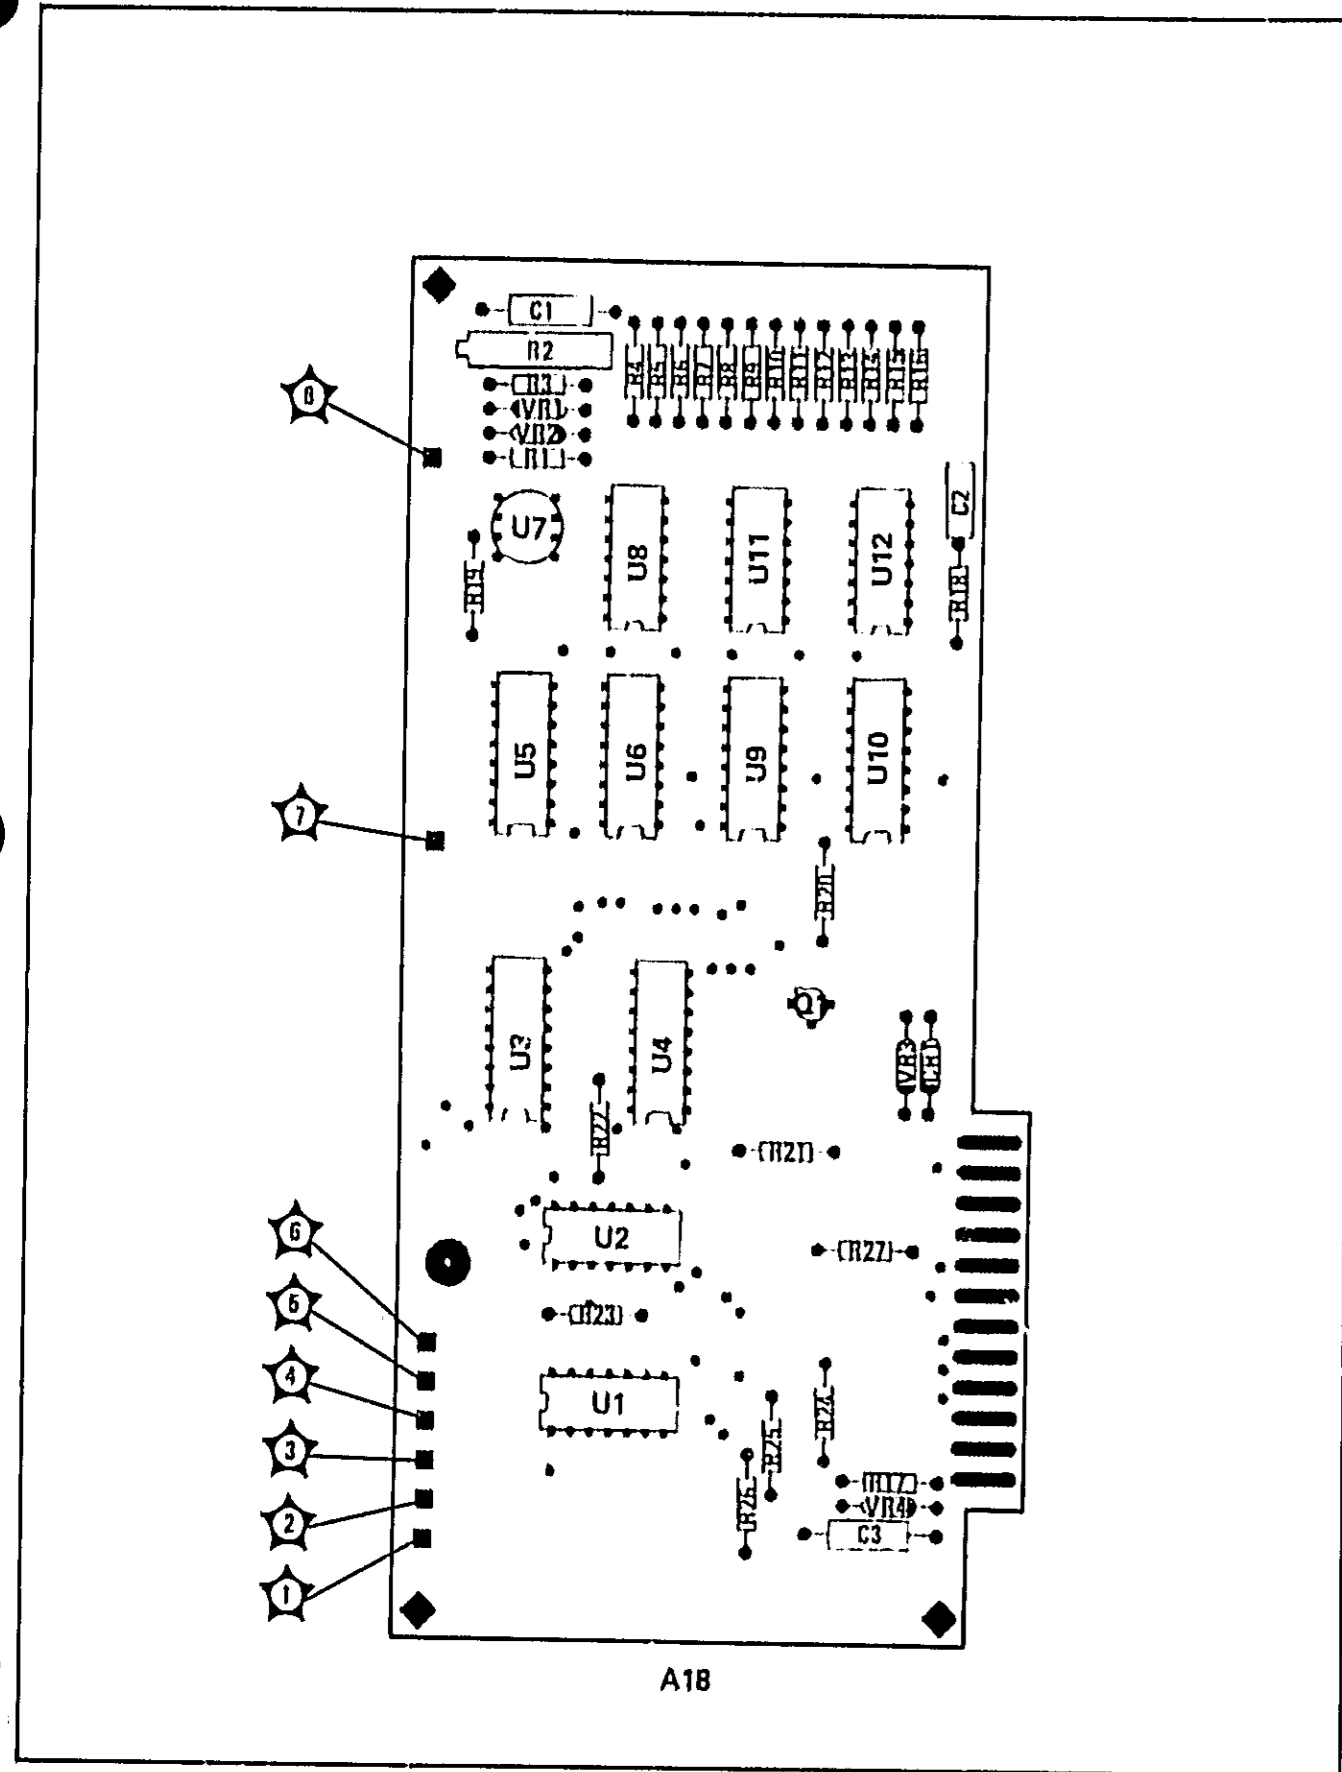


Figure 8-65. 8410B-A18 Parts Location

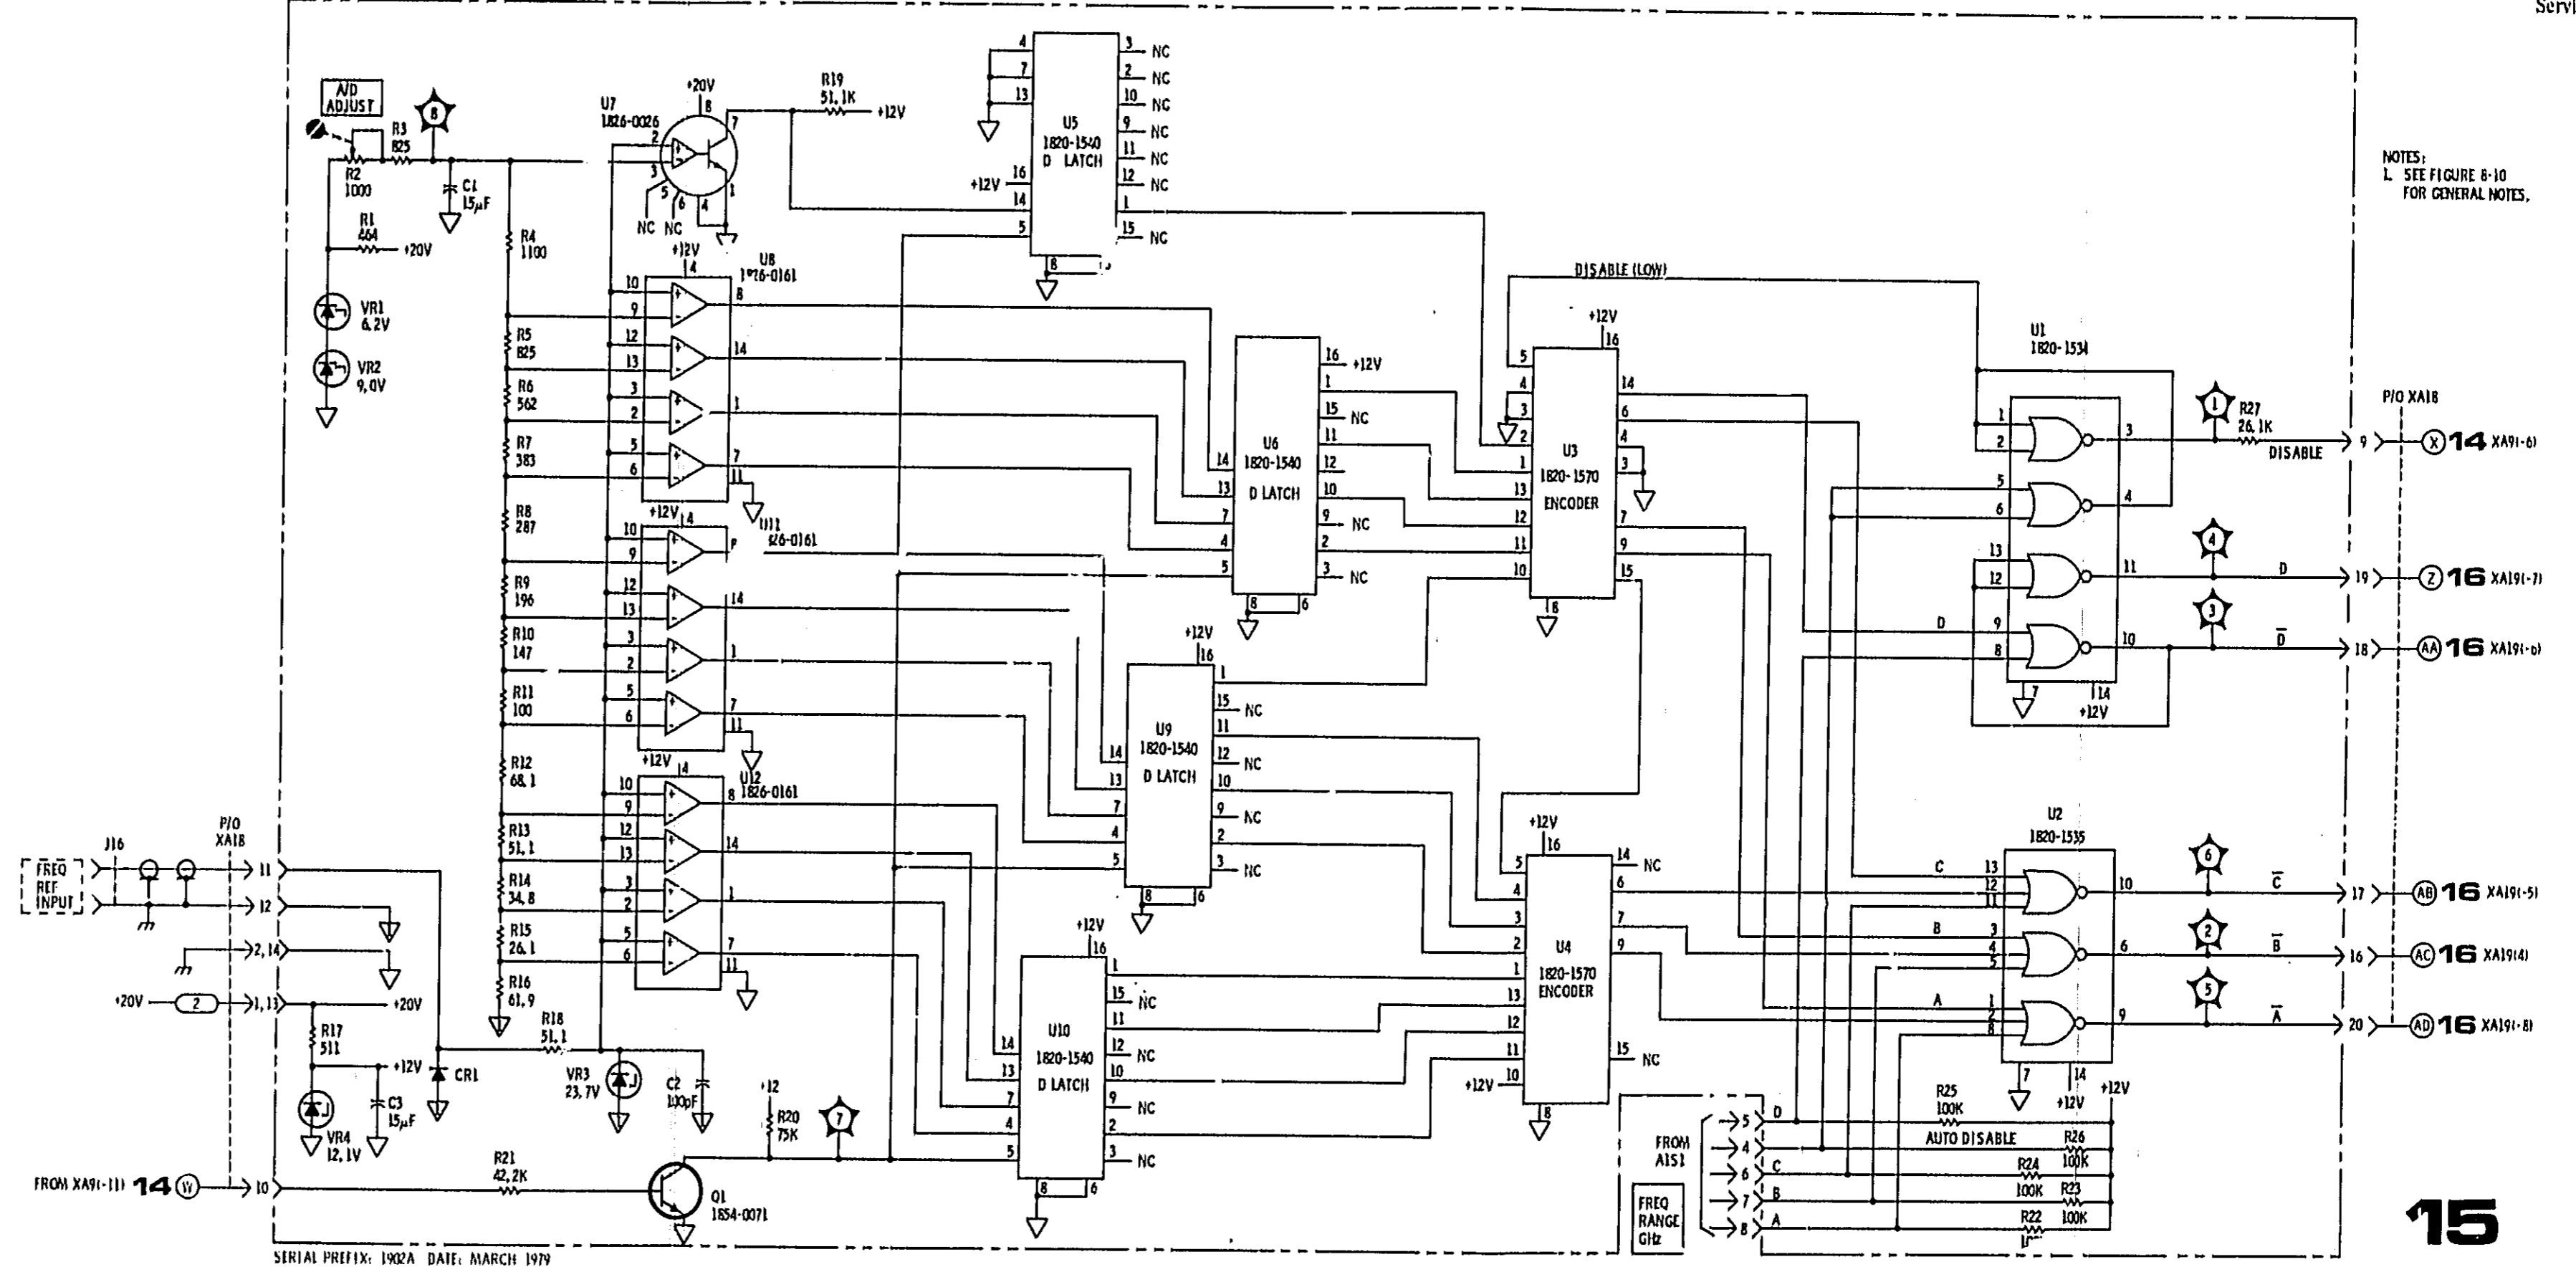

SERIAL PREFIX: 1902A DATE: MARCH 1979

NOTES:
1. SEE FIGURE 8-10 FOR GENERAL NOTES.

15

8410B-A18
ALBO:8410B-J18

Figure 8-66. 8410B-A18 Schematic Diagram

8410B FREQUENCY RANGE ASSEMBLY A19, CIRCUIT DESCRIPTION

GENERAL DESCRIPTION

The A19 Frequency Range Assembly uses the inverted binary input from the A18 A/D Converter to vary the VTO search signal amplitude and the phase-lock loop gain. This compensates for the increased frequency response of the higher VTO harmonics. A Search Rate Reduction signal is sent to the A9 Automatic Control Assembly for three frequency ranges.

LEVEL SHIFTING

Q1 through Q5 invert the binary logic from the A18 A/D Converter to a standard form (\bar{A} becomes A). The +12V/0V (Hi/Low) logic is also shifted to a 0V/-13V (Hi/Low) logic. For example, a high (+12V) on the gate turns off the FET, and the drain goes low (-13V); a low (0V) on the gate turns on the FET and the drain goes high (0V).

DECODER

U1 is disabled by \bar{D} for the first eight octave bands, and U2 is disabled by D for the next six octave bands. The output of the decoder is used to switch in different resistor values to vary the

search signal amplitude and phase-lock loop gain as the harmonic number of the 8411A VTO is increased.

SEARCH WINDOW SIZE

The search signal amplitude is reduced as the frequency of the octave band selected is increased. This is done by switching in progressively smaller resistors in parallel to ground. A high (0V) signal on the gate of a FET (Q6-Q19) indicates the resistor selected (the metal case is tied to the gate).

LOOP GAIN COMPENSATION

Progressively larger resistors are switched in series with the phase error signal to reduce phase-lock loop gain as the 8411A VTO harmonic number is increased. Q31 is switched off on the three highest octave bands for better isolation. Switching of the Loop Gain Compensation circuit is the same as in the Search Window Size circuit.

SEARCH RATE REDUCTION

A high (0V) Search Rate Reduction signal (TP1) is sent to the A9 Automatic Control Assembly on the two lowest and the highest octave bands.

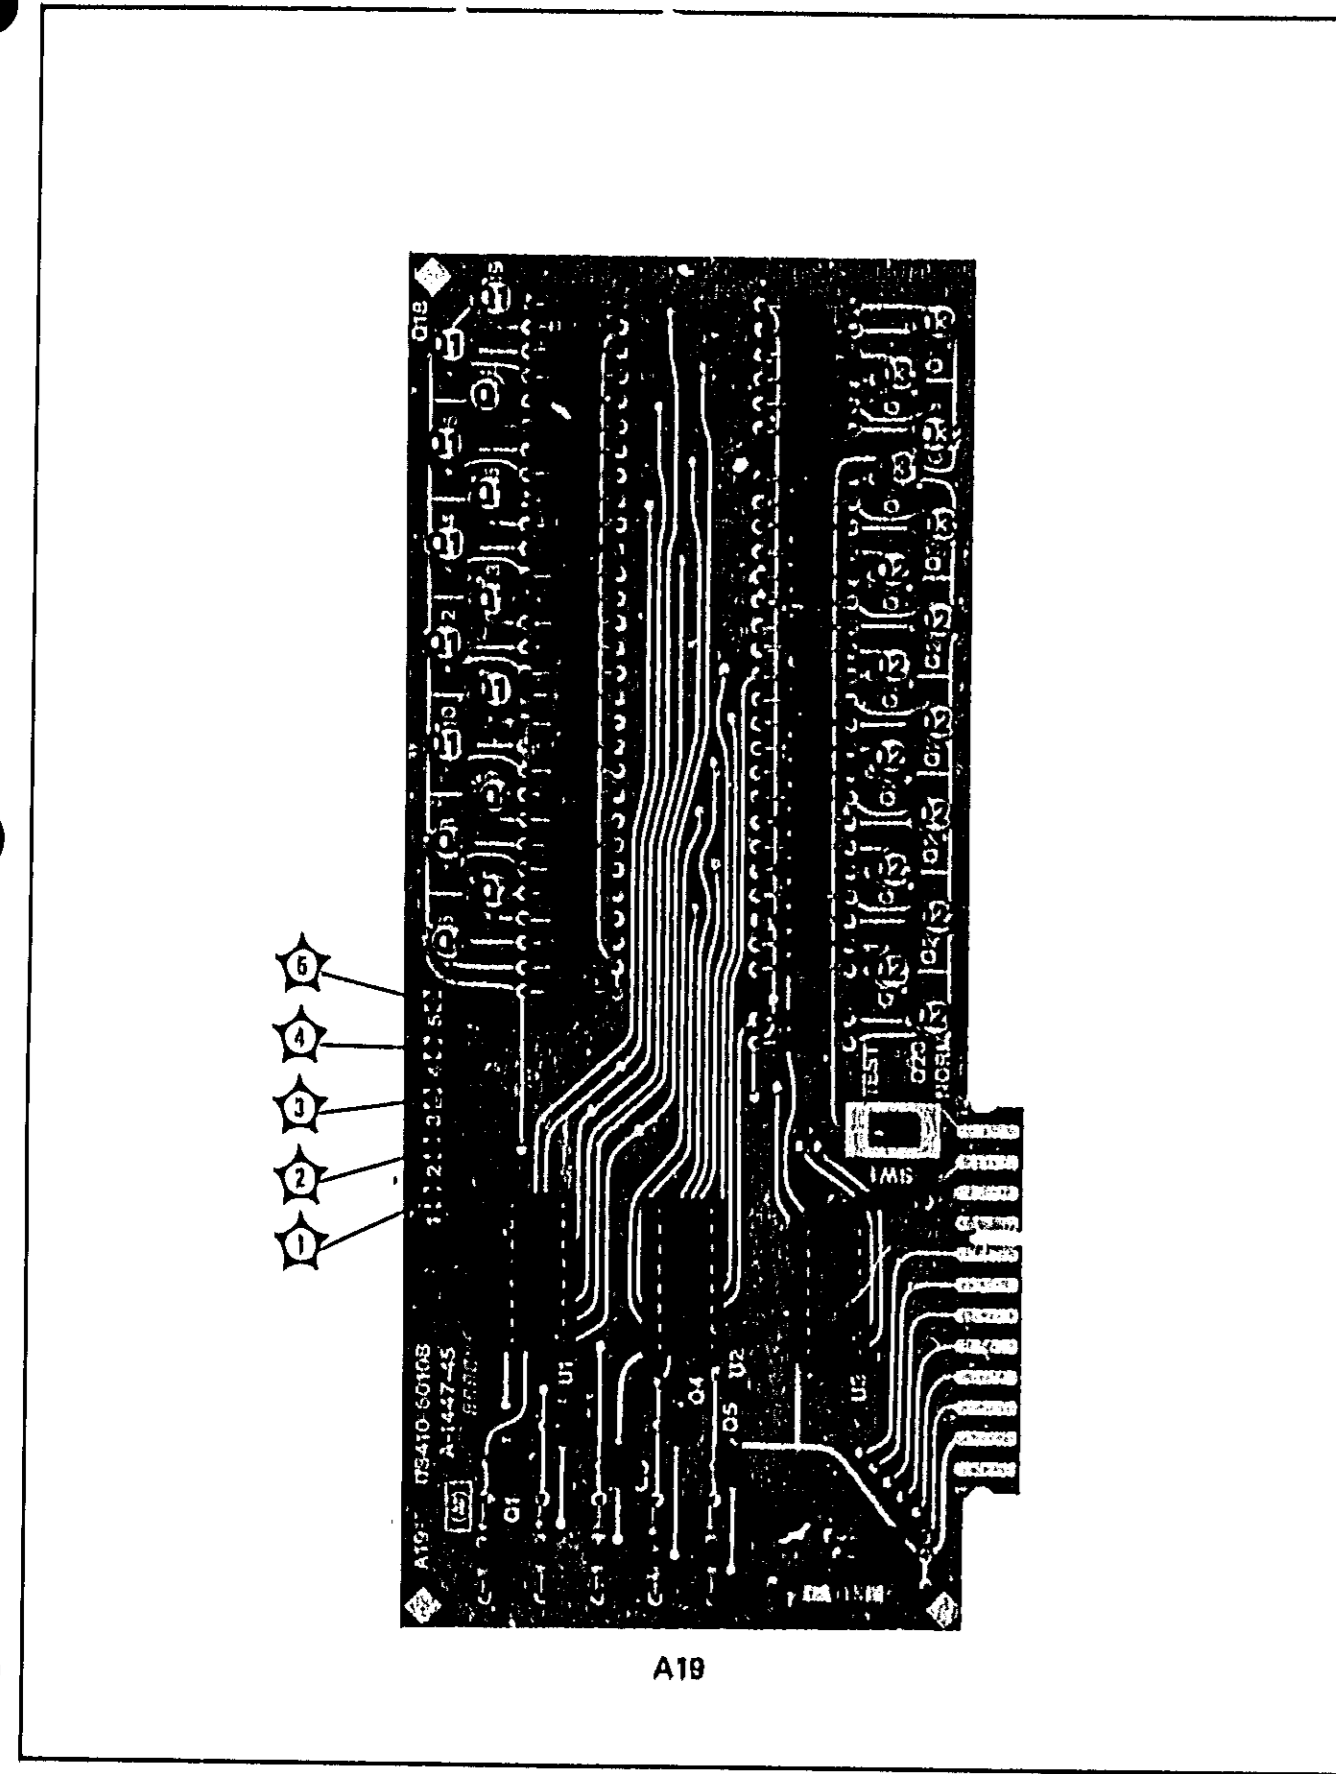


Figure 8-67. 8410B-A19 Parts Location


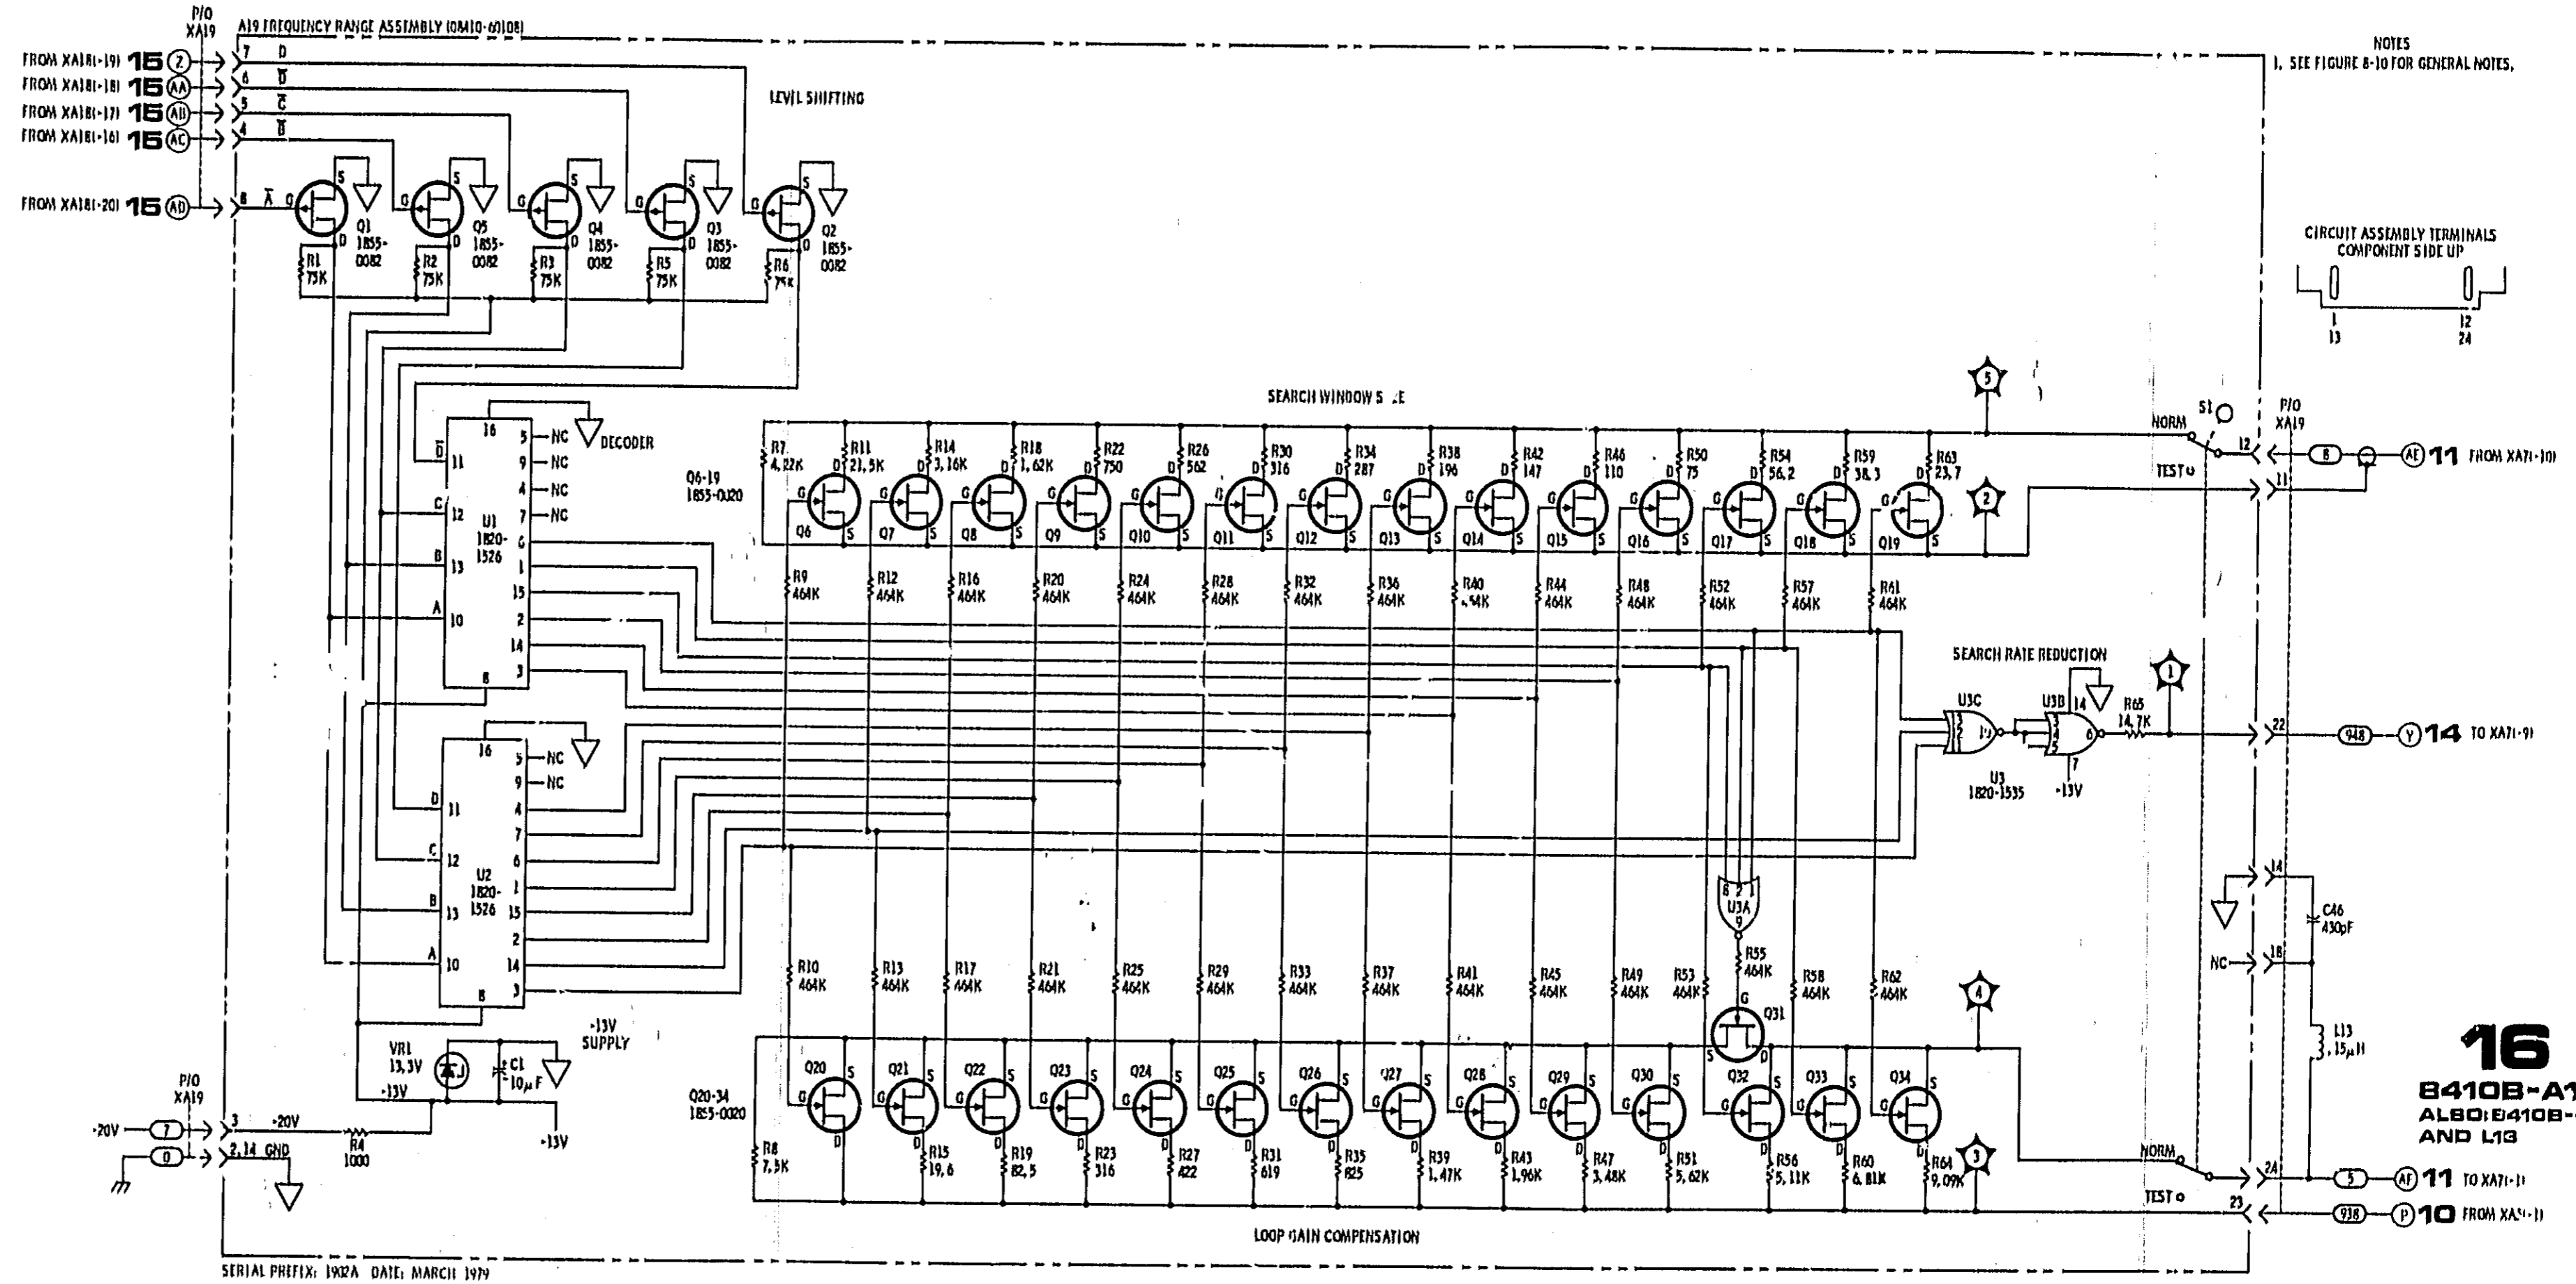


Figure 8-68. 8410B-A19 Schematic Diagram

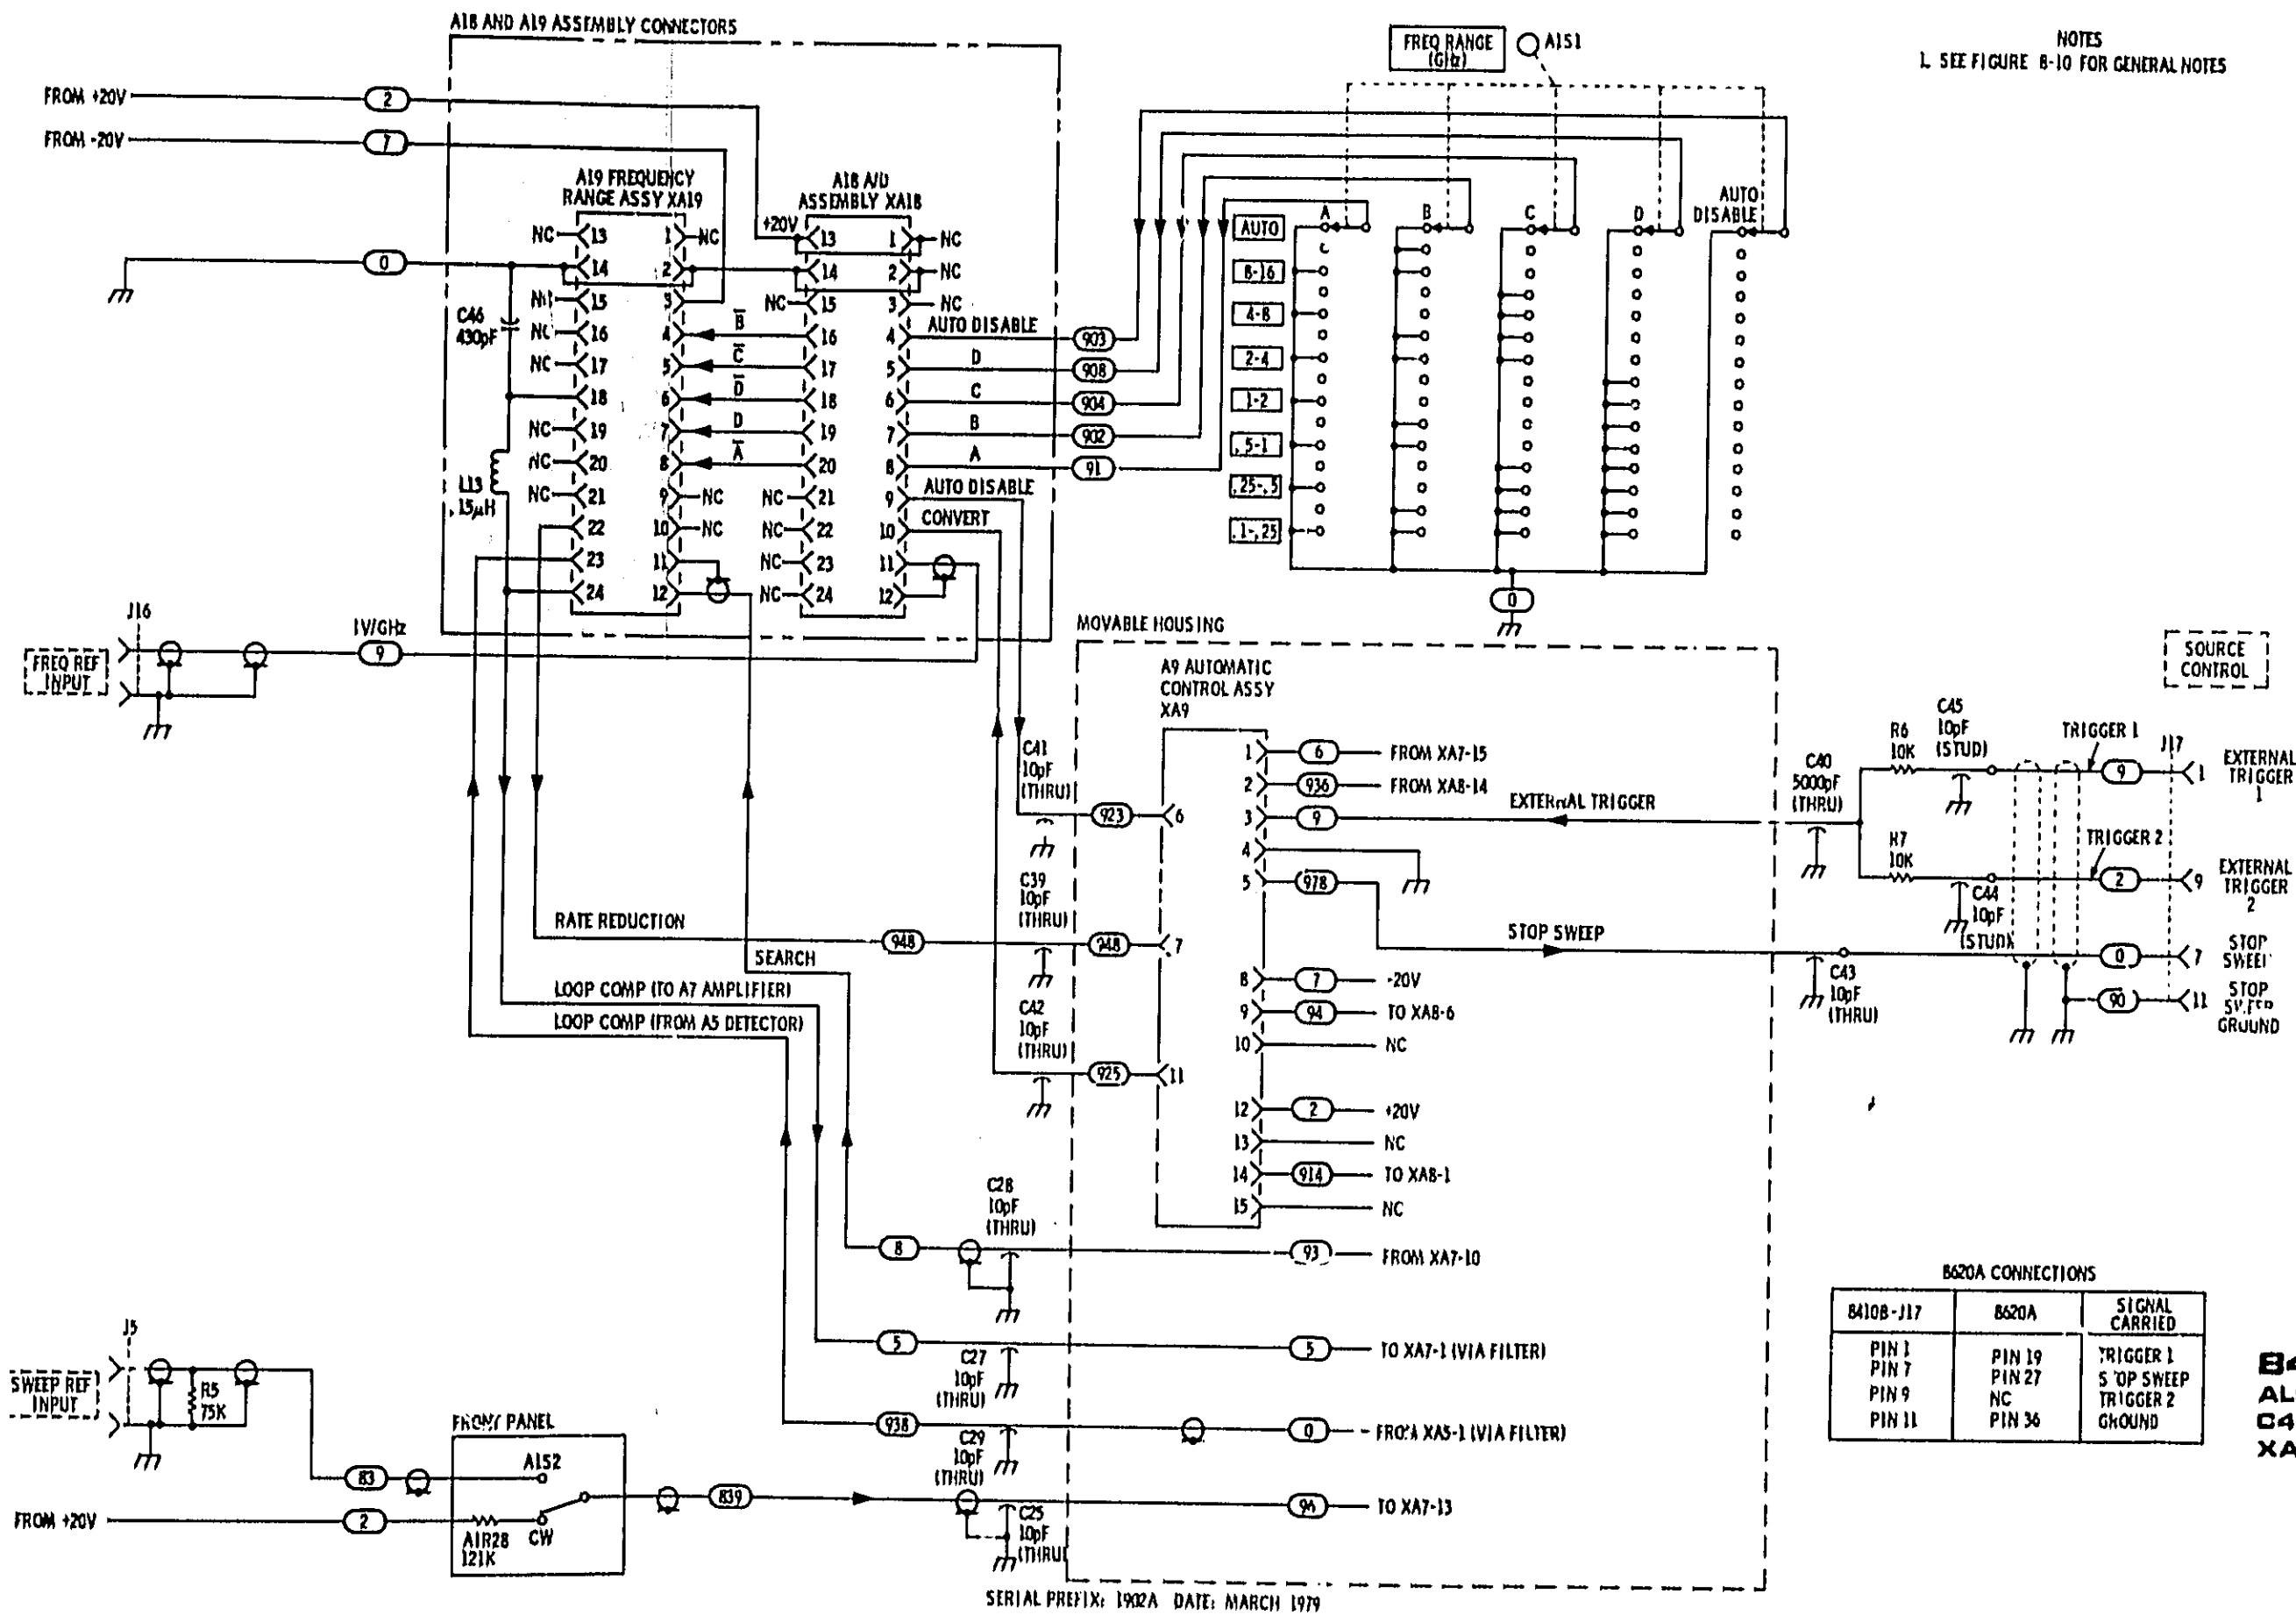

17

B410B-A1S1 AND A1S2
ALSO: B410B-C40, C43, C44,
C46, J5, J16, J17, R5, R6, R7,
XAB, XA1B, AND XA1B

Figure 8-69. B410B Signal Wiring Diagram
8-69/8-70

MANUAL CHANGES

MANUAL CHANGES

NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies, quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement, make all ERRATA corrections and all appropriate serial number related changes indicated in the tables below.

► - NEW ITEM

MANUAL IDENTIFICATION

Model Number: 8410B/8411A
 Date Printed: June/Aug. 1979
 Part Number: 08410-90521

8410B

Serial Prefix or Number	Make Manual Changes
1902A01893-6 1902A01898 1902A01899 1902A1901 1902A01903-5 1902A01980 thru 2005A Prefix	1
2017A thru Serial Number 2017A02550	1,3
2017A02551 thru 2017A Prefix	1,3,4
2138A	1, 3, 4, 5
2310A	1, 3, 4, 5, 6
2348A	1, 3, 4, 5, 6, 7
2416A	1, 3-7, 9
2501A	1, 3-7, 9, 11
2513A	1, 3-7, 9, 11, 12
2539A	1, 3-7, 9, 11-15
2541A	1, 3-7, 9, 11-15
► 2634A	1, 3-7, 9, 11-16

8411A

Serial Prefix or Number	Make Manual Changes
2004A	2
2346A	2,8
2417A	2,8,10

25 JULY 1986
 50 pages



**HEWLETT
 PACKARD**

Service Note	Serial Number	Description
8410B-1	All Serials	8410B Auto-Frequency Mode Interface Cable
8411A-1	Prefix 850 and below	Reducing VTO Feedthrough
8411A-2	All Serials	Adjustment Procedures to ensure compatibility with broadband applications.
8411A-3	All Serials	Correct Part Numbers to use when replacing Sampler Assemblies.
8411A-4	All Serials	8411A Harmonic Converter Sampler Diode Replacement Procedure.

ERRATA**Page 1-0, Figure 1-1:**

Change the Source Control cable description to:

8410B Option 820: HP Part Number 8120-2208 (For 8620C)

8410B Option 850: HP Part Number 08410-60146 (For 8350A).

Page 1-2, Table 1-1:

Change Magnitude Range of Test Channel as follows:

Test Channel: -10 to -72 dBm from 0.11 to 12.4 GHz; -10 to -68 dBm from 12.4 to 18 GHz.

Change NOISE Specification as follows:

NOISE: Less than -72 dBm equivalent input noise 0.11 to 12.4 GHz; -68 dBm 12.4 to 18 GHz (Option 018).

Change Cable Supplied description as follows:

"For servicing plug-ins, a Service Cable is included, HP Part Number 08410-60067. For an 8410B Option 820, a Source Control Cable for use with the 8620C is supplied, HP Part Number 8120-2208. For an 8410B Option 850, a Source Control Cable for use with the 8350A is supplied, HP Part Number 08410-60146."

Under **GENERAL**, change the Reference Channel IF specification to read:

2 volts peak-to-peak (Typical).

Change the Test Channel IF specification to read:

10 volts peak-to-peak or less, depending on signal level and test channel gain setting (Typical).

Page 1-4, Warning:

Change the first sentence of the **WARNING** as follows:

"If this instrument is to be energized through an autotransformer (for voltage reduction), make sure the common terminal is connected to neutral (grounded side of mains supply)."

Page 1-4, Paragraph 1-21:

Change paragraph 1-21 to, "A detachable power cable, and servicing cable are supplied with the 8410B. For Options 820 and 850, a Source Control Cable is also supplied. No accessories are furnished with the 8411A."

Page 1-4, Paragraph 1-23:

Add the following, "This cable is supplied with the 8410B Option 820."

Page 1-4, Following Paragraph 1-23:

Add the following:

1-23A. Source Control Cable for 8350A

1-23B. A source control cable (HP Part Number 08410-60146) provides the control logic interconnection to the 8350A Sweep Oscillator necessary for automatic multi-octave operation. This cable is supplied with the 8410B Option 850.

Page 4-8, Paragraph 4-15:

Change **TEST CHANNEL NOISE** in 0.11 to 12.4 GHz range to ≤ 72 dBm.

Change sentences three and four of the test description as follows:

"Noise level of -72 dBm is 42 dB lower than the -30 dBm reference level. Forty dB of gain is added in the **TEST CHANNEL GAIN** control and -2 dB from the zero reference line is indicated on the 8412A display plug in totaling 42 dB."

Page 4-9, Paragraph 4-15:

In step h, change "-5dB" to "-2 dB" and change "-75 dBm" to "-72 dBm."

Page 4-10, Paragraph 4-16:

Under "Specifications Tested," change Test Channel Dynamic Range for 0.11 to 12.4 GHz to "-10 to -72 dBm."

Under "Test Description," in the fourth sentence change "-75 dBm" to "-72 dBm."

ERRATA (Cont'd)**Page 4-11, Paragraph 4-16:**

In step h, change "65 dB" to "62 dB."

Page 4-13, Paragraph 4-17:

In the test setup, add a 10 dB attenuator between the Harmonic Frequency Converter "REF" port and the APC-7 to Type-N adapter.

In step b, change -18 dBm to -10 dBm.

In step e (1), change the sentence to read, "(1) REF CHANNEL LEVEL meter should indicate in the OPERATE range."

Page 4-14, Paragraph 4-17:

In steps j, k, and l, change "-18 dBm" to "-10 dBm."

Page 5-3, Table 5-2:

Under 8410B, add A11C4, Test channel 276 kHz bandpass filter tuning, 0-470 pF, Figure 8-47, paragraph 5-16.

Change the range of A11C5 to 0-470 pF.

Add the following component under 8410B heading:

A13C8, 20 MHz oscillator frequency 0-39 pF, 8-41, 5-11.

Add the following component under the 8411A heading:

A3C17, IF amplitude, 0-27 pf, 8-26, 5-20.

Under 8410B, add A19R54, Sets On-Resistance between TP2 and TP5, Range is either 61.9 or 68.1 ohms. Figure 8-67, Paragraph 5-18A.

Under 8411A, add A7R8; VTO high end, value must be matched to A7R11; 80.2, 82.5, or 90.9 Ohms: 8-32; 5-19.

Under 8411A, add A7R11; VTO high end, value must be matched with A7R8; 80.2, 82.5, or 90.9 Ohms: 8-32; 5-19.

Page 5-5, Table 5-3:

Add the following components:

15 pf, 0160-4789 CD 5

27 pf, 0160-4786 CD 7

Page 5-10, Paragraph 5-11:

In step c, change the second sentence to read as follows:

If the frequency cannot be obtained, select a value of A13C8 or A6C6 that gives the correct frequency.

In step c, add the following sentence:

The range of A13C8 is 0-39 pF.

Page 5-17, Paragraph 5-16:

At step e, change the second and third sentence as follows:

"If not, select the value of A11C4 and A11C5 for maximum signal at 278 kHz. Typical range of values for A11C4 is 0-470 pF, A11C5 is not normally loaded but may have a range of 0-470 pF.

Page 5-19, Paragraph 5-18:

Following paragraph 5-18, add paragraph 5-18A as follows:

5-18.A 8410B/C FREQUENCY RANGE ASSEMBLY A19

ADJUSTMENT: Select A19R54

DESCRIPTION: A19R54 is selected (61.9 or 68.1 ohms only) for an "on-resistance" between TP2 and TP5 of 72.9 to 93.9 ohms.

PROCEDURE:

1. Set front panel **FREQ. RANGE** switch to 6-12 GHz (8 on top).
2. Put 8410B-A19 on extender board and set **NORM/TEST** switch to **TEST**.
3. Connect ohmmeter between A19 TP5 (positive lead). Resistance should be between 72.9 and 93.9 ohms. If not select A19R54 for resistance in range.
4. Set A19 **NORM/TEST** switch back to **NORM** and reassemble into instrument.

ERRATA (Cont'd)

Page 5-22, Paragraph 5-19:

Change the last sentence of step f as follows:

"Adjust power supply and 8410BSWEEP STABILITY Control for 11.6 Vdc \pm 0.01 Vdc at 8410B-A7TP6 and adjust 8411A VTO Upper Limit (A6R16) for 160 MHz \pm 1 MHz. If this frequency cannot be reached, select new values of A7R8 and A7R11 for a frequency within tolerance. Resistors A7R8 and A7R11 must both be the same value and selection is limited to the following two values:"

A7R8,A7R11	HP Part Number
100 Ω	0699-2054
90.9 Ω	0699-0110

Page 5-23, Paragraph 5-20:

Insert the following steps after step h:

- h.1 Increase scope sensitivity until noise is observed between the IF signals (birdies).
- h.2 Turn A5R5 counterclockwise to decrease the amplitude of the IF signals until they just disappear in the noise.
- h.3 Measure the dc bias voltages at the junction of A5R1 and A5C1, and the junction of A5R2 and A5C2. The difference between these two voltages should be greater than 1.2VDC.
- h.4 If the difference is less than 1.2 VDC, select AfC17 from the list below to increase the voltage (IF amplitude):
 - 0 pf - no part
 - 15 pf - 0160-4789, CD 5
 - 27 pf - 0160-4786, CD 7

Page 5-35, Service Hints 5:

In the second paragraph, change part number 08410-6000 to part number 5060-0230.

Page 6-5, Table 6-3:

Delete the A1 assembly.

Delete AIR1 through AIR26.

Change AIS1 to HP Part Number 3100-3317 CD 5 SWITCH-ROTARY 1.562 STRUT CTR SPCG; 16.

Page 6-5, Table 6-3:

If any of the following attenuator parts fail, replace the entire attenuator assembly HP Part Number 08410-60160.

08410-6014 Attenuator Assy, 0-9 dB

08410-6015 Attenuator Assy, 0-60 dB

08410-6025 Cable Assy, Ampl. Vern. (IN)

08410-6026 Cable Assy, Attenuator

08410-6027 Cable Assy, Ampl. Vern (OUT)

08410-6028 Cable Assy, Switch Connect

If any part fails in the Attenuator Assembly HP Part Number 08410-60160, see Change 11 for the list of replaceable parts.

ERRATA (Cont'd)**Page 6-6, Table 6-3:**

Change the A5 assembly to HP P/N 08410-60175, CD 4. (Recommended Replacement) (See Change 12)
Change A4R15 to HP Part Number 0698-0082, Check Digit 7.

Page 6-7, Table 6-3:

Change A5L3 to HP P/N 9100-3315, CD 9, INDUCTOR RF-CH-MLD 820NH 5% .166DX.385 LG. (Recommended Replacement)
Change A5Q1, A5Q2 and A5Q3 to HP Part Number 1854-0404 CD 0 TRANSISTOR NPN SI TO-18 PD=360MW Mfr. Code 02037 Mfr. Part Number 229333. (Recommended Replacement).
Change A5R3 to HP Part Number 0757-0440, check digit 7 and change value to 7500 Ohms.
Change the A6 Assembly description to read:
20.278 MHz OSCILLATOR ASSEMBLY. DOES NOT INCLUDE Y1.
Change A6R1 to HP P/N 0757-0278, CD 9, Qty 1, 1.78K Ohms.
Change A6CR1, 2 to HP P/N 1901-0539, CD 3, DIODE-SCHOTKY SM SIG.

Page 6-8, Table 6-3:

Change A7Q8 to HP Part Number 1854-0404 CD 0 TRANSISTOR NPN SI TO-18 PD=360MW Mfr. Code 02037 Mfr. Part Number SS9333. (Recommended Replacement).
Change A7R18 to HP Part Number 0757-0462, CD 3, Resistor 75K 1% .125W F TC=0±100.
Change A7R19 to HP Part Number 0757-0459, CD 8, Resistor 56.2K 1% .125W F TC=0±100.

Page 6-10, Table 6-3:

▶ Change A9U4 to HP Part No. 1826-1221.
Change A9R19* to HP Part Number 0757-0442, CD 9, Resistor 10K 1% .125W F TC=0±100.
Change A9R20* to HP Part Number 0757-0438, CD 3, Resistor 5.11K 1% .125W F TC=0±100.
Change A9R21* to HP Part Number 0757-0446, CD 3, Resistor 15K 1% .125W F TC=0±100.
Change A9U2 and A9U3 to HP Part Number 1820-1569, CD 9, IC MV CMOS MONOSTBL RETRIB/RESET DUAL.
Delete A9XU1, A9XU2, A9XU3, and A9XU4 IC sockets.

Page 6-11, Table 6-3:

Change the A10 assembly to HP Part Number 08410-60169, CD 6 (Recommended Replacement - see Change 14 for details).

Page 6-12, Table 6-3:

Change A10A1U1, A10A1U2, and A10A1U3 to HP Part Number 1826-0177, CD 5, IC V RGLTR-ADJ-POS 2/37V TO-100 PKG (PREFERRED REPLACEMENT).
Add A10F1, HP Part Number 2110-0332, FUSE 3I 125V SLO-BLO.
Add A10MP1 and A10MP2, HP Part Number 1251-2313, FUSE SOCKET.
At A11C5, add an asterisk indicating a factory selected value. Change description to:
"Not normally loaded at the factory."

Page 6-14, Table 6-3:

Change the A13 Assembly description to read:
20 MHz OSCILLATOR BOARD.
Add an asterisk (*) to A13C8 to indicate that it is a factory select part.
Change A13R1 to HP P/N 0757-0278, CD 9, Qty 2, 1.78K Ohms.
Change A13CR1, 2 to HP P/N 1901-0539, CD 3, DIODE-SCHOTKY SM SIG.

Page 6-15, Table 6-3:

Change the A15 assembly to HP Part Number 08410-60155, CD 0 (Recommended Replacement - see Change 13 for details).

Page 6-16, Table 6-3:

Change A15R32* to HP Part Number 0757-0460, CD 1, RESISTOR 61.9K 1% .125W F TC=0±100.
Change A15R21* to HP P/N 0698-0084, CD 9, 2.15K Ohms.
Change A15CR1, 2 to HP P/N 1901-0050, CD 3, DIODE-SWITCHING 80V 200MA 2NS DO-35.
Add the following note:
If A15CR1, 2 are replaced, A15R21* (factory select resistor) may have to be changed also. The allowable range for R21 is 562 Ohms to 5.62K Ohms.

ERRATA (Cont'd)

Page 6-17, Table 6-3:

Change A16C8 to HP Part Number 0160-3048, CD 2, CAPACITOR-FXD 8000 PF $\pm 1\%$ 100 VDC MICA.

Page 6-18, Table 6-3:

Delete A18XU1 through A18XU12 IC sockets.

Page 6-19, Table 6-3:

Change A19R15 to HP Part Number 0698-3433, CD 8, RESISTOR 28.7 1% .125W F TC = 0 ± 100 .

Change A19R19 to HP Part Number 0757-0400, CD 9, RESISTOR 90.9 1% .125W F TC = 0 ± 100 .

Page 6-20, Table 6-3:

Change A19R46 to HP Part Number 0757-0275, CD 6, RESISTOR 113 1% .125W F TC = 0 ± 100 .

Change A19R50 to HP Part Number 0698-4096, RESISTOR 80.2 1% .125W F TC = 0 ± 100 .

Change A19R54* to HP Part Number 0757-0276, RESISTOR 61.9 1% .125W F TC = 0 ± 100 (FACTORY SELECTED).

Change A19R59 to HP Part Number 0698-4037, RESISTOR 42.2 1% .125W F TC = 0 ± 100 .

Change A19R53 to HP Part Number 0698-3433, RESISTOR 28.7 1% .125W F TC = 0 ± 100 .

Delete A19XU1 through A19XU3 IC sockets.

Page 6-21, Table 6-3:

Change B1 to HP Part Number 3160-0206, CD 1.

Change C3, C9, C19, C21, and C40 to HP Part Number 0160-2437.

Change C33 to HP Part Number 0160-0181.

Change C47 to HP Part Number 0160-3043 Dual Capacitor 5000 PF, 250V, 1 per. Delete C48.

Change J1 Nut Hex (HP Part Number 5020-3258) to HP Part Number 08410-20065, CD 7, QTY 2.

Page 6-22, Table 6-3:

Add R6, HP Part Number 0757-0442, CD 9, RESISTOR 10K 1% .125W F TC = 0 ± 100 .

Add R7, HP Part Number 0757-0442 CD 9, RESISTOR 10K 1% .125W F TC = 0 ± 100 .

Following S1, add SIMP1, HP Part Number 08410-20065, CD 7, NUT, KNURLED HEX.

Following T1, add TIMP1 thru TIMP4, HP Part Number 2510-0300, CD 8, Screw 8-32 1.875 IN LONG.

Change W12 to HP Part Number 08410-60069.

Change W14 to HP Part Number 08410-60068.

Page 6-23, Table 6-3:

Add the following parts under "Miscellaneous Parts":

08410-00079; CD; QTY 1; LATCH, FIXED HOUSING.

08410-00080; CD; QTY 1; LATCH, MOVABLE HOUSING.

Page 6-24, Figure 6-1:

Add the following prior to item 3:

Ref. Desig.	HP Part Number	CD	Qty.	Description
2A	3160-0214	1	1	Fan Grille
	3060-0066	9	4	Flat Washer
	2420-0001	5	4	NUT-HEX-W/LKWR 6-32-TND .109-IN-THK
	2360-0205	3	4	SCREW-MACH 6-32 .75-IN-LG PAN-HD-POZI
	2190-0006	1	4	WASHER-LK HLCL NO. 6 .141- IN-ID

ERRATA (Cont'd)**Page 6-27, Table 6-4:**

Delete all rebuilt sampler assemblies for A1 and A2.

Add under the description for A3Q1 through A3Q7 the following notation: "(Alternate part is HP Part Number 1854-0378, 2N5109, CD 7)".

Add the following part:

A3C17*, 0160-4789, CD 5, QTY 1, CAPACITOR-FXD 15 pf $\pm 5\%$ 100VDC CER 0 ± 30 .

Add the HP Part Number to the following Reference Designators:

A1CR1 and A2CR1 - HP Part Number 08411-60043, CD 6.

A1CR2 and A2CR2 - HP Part Number 08411-60041, CD 4.

Add the following sentence to the Description of A1CR1, A1CR2, A2CR1, A2CR2:

See Service Note 8411A-4A for replacement instructions.

Page 6-30, Table 6-4:

Change A7Q1 and A7Q2 to HP Part Number 1854-0048, CD 8 (Recommended Replacement).

Change A7R7 to HP Part Number 0757-0418, CD 9, Resistor 619 1%, .125W F TC=0 ± 100 ,

Change A7R9 to HP Part Number 0698-0024, CD 7, Resistor 2.16K 1%, .5W F TC=0 ± 100 ,

Change A7R12 to HP Part Number 0698-0024, CD 7, Resistor 2.16K .5W F TC=0 ± 100 .

Change A7R8 and A7R11 to a factory selected value by adding an asterisk (*) to the reference designator.

Add a note prior to A7R8 as follows:

NOTE

The resistors selected for A7R8 and A7R11 must be the same value.

Page 6-31, Table 6-4:

Change W1 to HP Part Number 08411-60045 and add to the description:

"Includes cable adapter, HP Part Number 08411-20047 for replacement on instruments prior to Serial Number 934-01096."

Page 6-35, Figure 6-5:

Change item 27 to HP Part Number 08411-60045 and add to the description:

"Includes cable adapter, HP Part Number 08411-20047 for replacement on instruments prior to Serial Number 934-01096."

Add Reference Designation 29 HP Part Number 9170-0874 CD 3 CORE SHIELDING-BEAD (INSULATED), Factory Selected.

Add Reference Designation 30 HP Part Number 08411-20042 CD 1 FOAM.

Add Reference Designation 31, HP Part Number 7120-7721, CD 9, Label, I.D., 8411A.

Add Reference Designation 32, HP Part Number 9170-0016, CORE SHIELDING-BEAD (not insulated), Factory Selected.

All schematic diagrams in Section 8:

In the notes on all schematic diagrams, change reference to general notes from Figure 8-10 to Figure 8-12.

Page 8-35, Figure 8-27:

Add A3C17* between TP9 (the junction of Q1 emitter and R12 and R13) and ground.

Add to the notations under A3Q1 through A3Q7 the following: "or 1854-0378."

Page 8-37, Figure 8-30:

On the 8411A-4 Schematic Diagram change the value of A4R14* to 75.

Page 8-39, Figure 8-33:

On the 8411A-A7 Schematic Diagram, add an asterisk (*) to A7R8 and A7R11.

On the 8411A-A7 Schematic Diagram change A7Q1 and A7Q2 to HP Part Number 1854-0048.

On the 8411A-A7 Schematic Diagram change the value of A7R7 to 619 Ohms.

On the 8411A-A7 Schematic Diagram change the values of A7R9 and A7R12 to 2610 Ohms.

ERRATA (Cont'd)

Page 8-43, Figure 8-39:

Change the value of A16C8 to 8000 pF.

Service Sheet 4

Page 8-41, Figure 8-36:

Delete "(SEE NOTE 2)" next to A12Q6 and A14Q7.

Add "(SEE NOTE 2)" next to A12Q7 and A14Q7.

Add the following note:

4. A12CR5 AND A12CR6, A14CR5 AND A14CR6 ARE A MATCHED PAIR, REPLACE IN PAIRS. SEE TABLE OF REPLACEABLE PARTS.

Add "(SEE NOTE 4)" Next to A12CR5, A12CR6, A14CR5 and A14CR6.

Service Sheet 5

Page 8-43, Figure 8-39:

Delete J17 REF connector.

Page 8-47, Figure 8-45:

Under the "AGC Monitor" portion of the schematic, change the value of R32 to 61.9K and add an asterisk.

Service Sheet 6

Page 8-45, Figure 8-42:

Add an asterick (*) to A13C8.

Service Sheet 8

Page 8-49, Figure 8-47:

Add an asterisk to C4.

Page 8-49, Figure 8-48:

Delete J16 TEST AMPL connector.

Change J5 TEST PHASE connector to J15 and delete reference to OPT 005.

Add a capacitor in parallel with C4 with the notation "C5" (See Note 2)."

Add Note 2 at the bottom of the page;

"C5 is not normally loaded at the factory."

Page 8-51, Figure 8-51:

Change A4R15 to 464 Ohms.

Change the gain notation above O3 to "10 dB (X3:2)."

Service Sheet 10

Page 8-53, Figure 8-54:

Change A5Q1, A5Q2 and A5Q3 to HP Part No. 1854-0404.

Change A5R3 to 7500 Ohms.

Service Sheet 11

Page 8-55, Figure 8-57:

Change R6 SWEEP STABILITY potentiometer to A1R27.

Change A1R27 wiper connection from +20V side of potentiometer to the XA7 pin 7 side. (This is the recommended connection.)

Change A7Q8 to HP Part No. 1854-0404.

Change A7R18 to 75K.

ERRATA (Cont'd)**Service Sheet 13**

Page 8-61, Figure 8-62:

Add A10F1 FUSE, 3 A SLO-BLO, in the line from the orange wire connection (Transformer T1 secondary 15 VAC winding) to the junction point of A10CR5 and A10CR6.

Change C47 to C47A.

Change C48 to C47B.

Page 8-63, Figure 8-64:

Change A9R19* to 10K.

Change A9R21* to 5.11K.

Change A9421* to 15K.

Service Sheet 14

Page 8-63, Figure 8-64:

Change C43 (located at the lower left side of the schematic) to C41.

CHANGE 1

Page 6-13, Table 6-3:

Change A12C10 to HP Part No. 0140-0221 CD 5 CAPACITOR-FXD 220PF \pm 1% 300 VDC MICA.

Change A12L1 to HP Part No. 9140-0477 CD2 INDUCTOR RF-CH-MLD 270NH 1% .105 DX .26LG.

Page 6-15, Table 6-3:

Change A14C10 to HP Part No. 0140-0220 CD 4 CAPACITOR-FXD 200PF \pm 1% 300 VDC MICA.

Change A14L1 to HP Part No. 9140-0477 CD 2 INDUCTOR RF-CH-MLD 270NH 1% .105DX .26LG.

Page 8-41, Figure 8-36:

Change value of A12C10 to 220 pF.

Change value of A14C10 to 200 pF.

Change value of A12L1 and A14L1 to 270 nH.

CHANGE 2

Page 6-27, Table 6-4:

Add A3R14 and A3R15 HP Part No. 0698-4037 CD 0 RESISTOR 46.4 1% .125W F TC = \pm 100.

Page 8-35, Figure 8-27:

Add A3R14 46.4 ohms in series with A3Z4 and test point A3TP7.

Add A3R15 46.4 ohms in series with A3Z5 and test point A3TP7.

CHANGE 3

Page 5-15, Paragraph 5-15:

Change voltage level in the DESCRIPTION and step d to 10.0 Vdc.

Page 6-5, Table 6-3:

Change A1R28 to HP Part No. 0698-3161 CD 9 RESISTOR 38.3K 1% .125W F TC = \pm 100 Mfr. Code 00746 Mfr. Part No. CRB14.**Service Sheet 11**

Page 8-55, Figure 8-57:

Change value of A1R28 to 38.3K.

CHANGE 4

Page 6-8, Table 6-3:

Change A6Q2 to HP Part Number 1854-0882, Check Digit 8.

Page 6-14, Table 6-3:

Change A13Q4 to HP Part Number 1854-0882, Check Digit 8.

Page 8-45, Figure 8-42:

Change the HP Part Number for A13Q4 to 1854-0882.

Page 8-53, Figure 8-54:

Change the HP Part Number for A6Q2 to 1854-0882.

CHANGE 5

Page 6-8, Table 6-3:

Change A6Y1 to HP Part Number 0410-1392.

Page 6-19, Table 6-3:

Change A19Q6 through A19Q34 to HP Part Number 1855-0420.

Page 6-23, Table 6-3:

Add as the last entry to "MISCELLANEOUS PARTS": HP Part Number 08410-20057, CD 7, HEAT SINK SUPPORT BRACKET.

CHANGE 6

This change incorporates mother boards within the fixed and movable castings to replace actual wiring harnesses that interconnect the boards and carry signals and power to and from the boards mounted in the castings. Basically, this change does not modify the functions of the circuits but moves some of the chassis-mounted components onto the two new mother boards.

Page 6-20, Table 6-3:

After the description of A20, add the following note: To improve isolation between Test and Reference channels in an HP 8409 system, order HP 8410 Retrofit Kit, having HP Part Number 08410-60157, CD 2.

Add a Mother Board to the Fixed Housing as follows:

<u>Reference Designator</u>	<u>HP Part Number</u>	<u>C.</u>	<u>Qt.</u>	<u>Description</u>
A20	08410-60137	8	1	MOTHERBOARD, FIXED HOUSING
A20C1	0180-0116	1	4	CAPACITOR-FXD 6.8UF \pm 10% 35VDC TA
A20C2	0180-0116	1		CAPACITOR-FXD 6.8UF \pm 10% 35VDC TA
A20C3	0160-4831	3	6	CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C4	0160-4831	3		CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C5	0160-4831	3		CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C6	0160-4831	3		CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C7	0160-4831	3		CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C8	0160-4831	3		CAPACITOR-FXD 4700PF \pm 10% 100 VDC CEP
A20C9	0180-0116	1		CAPACITOR-FXD 6.8UF \pm 10% 35VDC TA
A20C10	0160-0116	1		CAPACITOR-FXD 6.8UF \pm 10% 35VDC TA
A20L1	9140-0114	4	6	INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20L2	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20L3	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20L4	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20L5	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20L6	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .365L
A20XA11	1251-2035	9	6	CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS
A20XA12	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS
A20XA13	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS
A20XA14	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS
A20XA15	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS
A20XA16	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-PCWS

CHANGE 6 (Cont'd)

Add Mother Board to the Movable Housing as follows:

<u>Reference</u>	<u>HP Part</u>	<u>C</u>	<u>Qt.</u>	<u>Description</u>
<u>Designator</u>	<u>Number</u>	<u>Q</u>		
A21	08410-60138	9	1	MOTHERBOARD, MOVABLE HOUSING
A21C1	0160-2199	2	1	CAPACITOR-FXD 30PF $\pm 5\%$ 300VDC MIC
A21C2	0160-4831	3	5	CAPACITOR-FXD 4700PF $\pm 10\%$ 100VDC CEP
A21C3	0160-2200	6	1	CAPACITOR-FXD 43PF $\pm 5\%$ 300VDC MIC
A21C4	0160-4831	3		CAPACITOR-FXD 4700PF $\pm 10\%$ 100VDC CEP
A21C5	0160-4831	3		CAPACITOR-FXD 4700PF $\pm 10\%$ 100VDC CEP
A21C6	0160-4831	3		CAPACITOR-FXD 4700PF $\pm 10\%$ 100VDC CEP
A21C7	0140-0177	0	1	CAPACITOR-FXD 400PF $\pm 1\%$ 300VDC MIC
A21C8	0160-4831	3		CAPACITOR-FXD 4700PF $\pm 10\%$ 100VDC CEP
A21L1	9140-0098	3	1	INDUCTOR RF-CH-MLD 2.2UH 10X
A21L2	9140-0114	4	4	INDUCTOR RF-CH-MLD 10UH 10X .166D .385L
A21L3	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10X .166D .385L
A21L4	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10X .166D .385L
A21L5	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10X .166D .385L
A21L6	9100-2230	5	1	INDUCTOR RF-CH-MLD 150NH 3X .166D .365L
A21R1	0757-0442	9	2	RESISTOR 10K 1X .125W F TC=0 \pm 101
A21R2	0757-0442	9		RESISTOR 10K 1X .125W F TC=0 \pm 100
A21XA4	1251-2035	9	6	CONNECTOR-PC EDGE 15-CONT/ROW 2-POWS
A21XA5	1251-2035	9		CONNECTOR-PC EDGE 1E-CONT/ROW 2-POWS
A21XA6	1251-2035	9		CONNECTOR-PC EDGE 1S-CONT/ROW 2-POWS
A21XA7	1251-2035	9		CONNECTOR-PC EDGE 1S-CONT/ROW 2-POWS
A21XA8	1251-2035	9		CONNECTOR-PC EDGE 1S-CONT/ROW 2-POWS
A21XA9	1251-2035	9		CONNECTOR-PC EDGE 1S-CONT/ROW 2-POWS

Page 6-21, Table 6-3:

Delete the following components:

C4, C6, C8, C10, C12, C14, C16, C18, C20, C22, C32 through C38, and C40.

Page 6-22, Table 6-3:

Delete the following components:

L1 through L12, R6, R7, and XA4 through XA6.

Page 6-23, Table 6-3:

Delete the following components:

XA7 through XA9 and XA11 through XA16.

Change Fixed Connector Cover from HP Part Number 08410-00059 to 08410-00076, CD 8.

Change Movable Connector Cover from HP Part Number 08410-0011 to 08410-00077, CD 9.

Add under Miscellaneous Parts the following HP Part Numbers:

08410-20063; CD 5; QT 1; CASTING, FIXED

08410-20064; CD 6; QT 1; CASTING, MOVABLE

0360-0042; CD 4; QT 2; TERMINAL-SLDR LUG PL-MTG FOR-#6-SCR

0624-0077; CD 5; QT 116; SCREW-TPG 4-40 .312-IN-LG PAN-HD-POZI

2190-0017; CD 4; QT 8; WASHER-LK HLCL NO. 8 .168-IN-ID

2190-0124; CD 4; QT 9; WASHER-LK INTL T NO. 10 .195-IN-ID

2360-0331; CD 6; QT 4; SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI

2510-0103; CD 9; QT 8; SCREW-MACH 8-32 .375-IN-LG PAN-HD-POZI

2510-0048; CD 1; QT 2; SCREW-MACH 8-32 .438-IN-LG 82 DEG

CHANGE 6 (Cont'd)

Page 8-41, Figure 8-36:

- Change XA12 to A20XA12 in two places.
- Change XA14 to A20XA14 in two places.

Page 8-43, Figure 8-39:

- Change XA16 to A20XA16 in four places.

Page 8-45, Figure 8-42:

- Change L7 to A20L4.
- Change C16 to A20C6.
- Change L8 to A20L3.
- Change C18 to A20C5.
- Change XA13 to A20XA13 in two places.

Page 8-47, Figure 8-45:

- Change XA15 to A20XA15 in two places.

Page 8-49, Figure 8-48:

- Change C37 to A20C9.
- Change C38 to A20C10.
- Change XA11 to A20XA11 in two places.

Page 8-51, Figure 8-51:

- Change XA4 to A21XA4 in two places.

Page 8-53, Figure 8-54:

- Change C20 to A21C4.
- Change C22 to A21C5.
- Change C33 to A21C1.
- Change C34 to A21C3.
- Change L12 to A21L1.
- Change XA5 to A21XA5 in five places.
- Change XA6 to A21XA6 in two places.

Page 8-55, Figure 8-57:

- Change C32 to A21C7.
- Change L11 to A21L6.
- Change XA7 to A21XA7 in five places.
- Change XA8 to A21XA8 in four places.

Page 8-59, Figure 8-60:

- Change C4 to A21C2.
- Change C6 to A20C7.
- Change C8 to A20C4.
- Change C10 to A21C6.
- Change C12 to A20C8.
- Change C14 to A20C3.
- Change L1 to LA21L2.
- Change L2 to LA20L6.
- Change L3 to LA20L2.
- Change L4 to A21L5.
- Change L5 to A20L5.
- Change L6 to A20L1.

CHANGE 6 (Cont'd)

Page 8-63, Figure 8-64:

- Change C40 to A21C8.
- Change R6 to A21R1.
- Change R7 to A21R2.
- Change XA9 to A21XA9 in two places.

Page 8-69, Figure 8-69:

- Change C40 to A21C8.
- Change R6 to A21R1.
- Change R7 to A21R2.
- Change XA9 to A21XA9.
- Change XA7-15 to A21XA7-15.
- Change XA8-14 to A21XA8-14.
- Change XA8-6 to A21XA8-6.
- Change XA8-1 to A21XA6-1.
- Change XA7-10 to A21XA7-10.
- Change XA7-1 to A21XA7-1.
- Change XA5-1 to A21XA5-1.
- Change XA7-13 to A21XA7-13.

Add additional pages after Page 8-69 containing Figures 8-70 through 8-73 (CHANGE 6) supplied in this document.

CHANGE 7

Page 6-22, Table 6-3:

- Add W17, HP Part Number 8120-0052 CD 6 COAXIAL CABLE.
- Add W17MPI, HP Part Number 0360-0053, GROUND LUG.
- Add W18, HP Part Number 8120-0052, CD 6, COAXIAL CABLE.
- Add W18MPI, HP Part Number 0360-0053, CD 7, GROUND LUG.

Page 8-41, Figure 8-36:

- Add "W18" on coaxial cable line between J7 and A20XA14 pin 13.
- Add "W17" on coaxial cable line between J8 and A20XA12 pin 13.

CHANGE 8

Page 5-2, Table 5-1:

- Under 8411A, add A7R23, VTO upper frequency limit, Figure 8-32, Paragraph 5-19.

Page 5-3, Table 5-2:

- Under 8411A, add A7R24, VTO frequency limit, Range of values = 100 to 2, 610 ohms, Figure 8-32, Paragraph 5-19.

Page 5-22, Paragraph 5-19:

At the end of step f, add the following:

"If the range of A6R16 is not sufficient, set A6R16 to the highest frequency, then adjust A7R23 for 155 MHz. If this frequency still cannot be obtained, select the value of A7R24 in the range of 100 to 2, 610 ohms."

Page 6-30, Table 6-4:

- Add A7R23, HP Part Number 2100-1986, CD 9, Resistor-TRIMMER 1K 10% 1T.
- Add A7R24, HP Part Number 0757-0401, Resistor 100Ω, 1% .05W (Factory Selected Value).
- Delete A7Z2.

CHANGE 8 (Cont'd)

Page 8-39, Figure 8-32:

Change the drawing for A7 to the one contained in this change sheet.

Page 8-39, Figure 8-33:

Delete A7Z2 and add in its place two resistors in series, A7R23, variable 1000 ohm on left side, and A7R24*, fixed 100 ohm on right side (connected to base of Q1).

CHANGE 9

Page 6-18, Table 6-3:

Change A19 to HP Part Number 08410-60156, CD 1.

Page 6-20, Table 6-3:

Change A19S1 to HP Part Number 3101-2419, CD 8, SWITCH-SL DPDT SUBMIN .5A 125 VAC PC.

Page 8-67/8-68, Figure 8-68:

In the upper left-hand corner of the schematic, change A19 Frequency Range Assembly to HP Part Number 08410-60156.

CHANGE 10

Page 6-29, Table 6-4:

Change A5 to HP Part Number 08411-60049, CD 2.

Change A5C3, and A5C5 through A5C12 to HP Part Number 0160-4832, CD 4, CAPACITOR-FXD .01 UF $\pm 10\%$ 100VDC CER.

Change A5C13 to HP Part Number 0121-0459, CD 1, CAPACITOR-V TRMR-CER 8-50 PF 350V PC-MTG.

Page 8-37, Figure 8-29:

Replace the 8411-A5 Parts Location diagram with the one supplied in this change sheet.

Page 8-37, Figure 8-30:

In the upper left-hand corner of the A5 schematic, change A5 Test Preamplifier Assembly to HP Part Number 08411-60049.

CHANGE 11

Page 6-5, Table 6-3:

Add A1A1 HP Part Number 08410-60160, CD 7, Attenuator assembly: includes A2 and A3 attenuator assemblies, and the associated cables and brackets.

Change the A2 Cable Assembly, Amplitude Vernier (out) with HP Part Number 08410-6027 to HP Part Number 08410-60167, CD 4.

Add A2A1 HP Part Number 08410-60161, CD 8, board assembly 0-9 dB attenuator.

Change A2R1 & R4 to HP Part Number 0699-1555, CD 3, Resistor 238.4 .1% .05W F TC = 0 ± 10 .

Change A2R2, R3, R5, R6 to HP Part Number 0699-1560, CD 0, Resistor 2.209K .1% .05W F TC = 0 ± 10 .

Change A2R7, R10 to HP Part Number 0699-1554, CD 2, Resistor 116.1 .1% .05W F TC = 0 ± 10 .

Change A2R8, R9, R11, R12 to HP Part Number 0699-1562, CD 2, Resistor 4.362K .1% .05W F TC = 0 ± 10 .

Change A2R13 to HP Part Number 0699-1553, CD 1, Resistor 57.69 .1% .05W F TC = 0 ± 10 .

Change A2R14, R15 to HP Part Number 0699-1563, CD 3, Resistor 8.695K .1% .05W F TC = 0 ± 10 .

Change A2S1 to HP Part Number 3100-1953, CD 1.

Change A3 assembly to HP Part Number 08410-60164, CD 1.

Add A3A1 HP Part Number 08410-60162, CD 9, Bd Assy 0-60 dB attenuator.

Add HP Part Number 08410-60168, CD 5, Cable Assembly, Switch Connect.

Add HP Part Number 08410-60166, CD 3, Cable Assembly, Attenuator.

Change A3C1 to HP Part Number 0160-4801, CD 7, CAPACITOR-FXD 100pf $\pm 5\%$ 100VDC CER.

CHANGE 11 (Cont'd)

Page 6-3, Table 6-3:

- Change A3L1 to HP Part Number 9140-0981, CD 3, COIL 2000 μ H 5% Q=55.
- Change A3R1, R7, R13 to HP Part Number 0699-1561, CD 1, Resistor 2.475K .1% .05W F TC=0 \pm 10.
- Change A3R2, R3, R8, R9, R14, R15 to HP Part Number 0699-1557, CD 5, Resistor 611.1 .1% .05W F TC=0 \pm 10.
- Change A3R4, R10, R16 to HP Part Number 0699-1558, CD 6, Resistor 711.5 .1% .05W F TC=0 \pm 10.
- Change A3R5, R6, R11, R12, R17, R18 to HP Part Number 0699-1559, CD 6, Resistor 962.5 .1% .05W F TC=0 \pm 10.
- Change A3R19 to HP Part Number 0699-1556, CD 4, Resistor 500 .1% .05W F TC=0 \pm 10.
- Change A3S1 to HP Part Number 3100-1953, CD 1.

Page 6-22, Table 6-3:

- Add MP1 HP Part Number 08410-0014, CD 1, front mounting bracket.
- Add MP2 HP Part Number 08410-00082, CD 6, rear mounting bracket.
- Change W5 to HP Part Number 08410-60165, CD 2.
- Delete W10 Cable Assembly, Attenuator.

Page 8-70:

- Add Figures 8-74 and 8-75 (CHANGE 11) supplied in this Change Supplement.

CHANGE 12

Page 6-6, Table 6-3:

- Change the A5 assembly to HP P/N 08410-60175, CD 4. (Recommended Replacement)
- Change A5C4 to HP P/N 0160-2930, CD 9.
- Change A5C5, C7, C8, C9, C14, C15 to HP P/N 0150-0093, CD 0.

Page 6-7, Table 6-3:

- Delete A5CR9 and CR10.
- Change A5L3 to HP P/N 9100-3315, CD 9, INDUCTOR RF-CH-MLD 820NH 5% .166DX.385LG. (Recommended Replacement)
- Change A5Q1 & Q2 to HP P/N 1854-0475, CD 5, QTY 2, TRANSISTOR DUAL NPN SI TO-18 PD=750MW.
- Change A5R3* and R6* to HP P/N 0757-0442, CD 9, RESISTOR 10K 1% .125W F TC=0 \pm 100.

Page 8-53

- Replace the A5 Parts Location Diagram with the one supplied in this document.
- Replace the A5 Schematic Diagram Emitter Followers Q1 and Q2 with the partial diagrams supplied in this document

CHANGE 13

Page 6-15, Table 6-3:

- Change the A15 assembly to HP Part Number 08410-60155, CD 0 (Recommended Replacement).

Page 6-16, Table 6-3:

- Add A15R39, HP Part Number 0598-0084, CD 9, Resistor 2.15K 1% .125W F TC=0 \pm 100.

Page 8-47, Figure 8-44:

- Replace the A15 Parts Location Diagram with the one supplied in this document.

Page 8-47, Figure 8-45:

- Change the schematic, Figure 8-45, as shown in the partial Figure 8-45, supplied in this document.

CHANGE 14

Page 6-11, Table 6-3:

Change the A10 assembly to HP Part Number 08410-60169, CD 6 (Recommended Replacement).

Delete A10A1 (HP Part Number 08410-6050) and all parts for the A10 A1 assembly on Page 6-11 and Page 6-12.

Replace the A10 and A10A1 parts list with the one provided below:

Ref. Desig.	HP Part No.	CD	Qty	Description
C1-2	0180-2603	5	2	CAPACITOR-FXD 7200UF +75-10% 50VDC AL
C3	0180-2292	8	1	CAPACITOR-FXD 3900UF +75-10% 50VDC AL
C4-7	0180-2811	7	4	CAPACITOR-FXD 10UF ±20% 35VDC TA
C8	0180-2697	7	1	CAPACITOR-FXD 10UF ±10% 25VDC TA
C9	0180-2661	5	1	CAPACITOR-FXD 1UF ±10% 50VDC TA
C10-11	0180-0089	7	2	CAPACITOR-FXD 10UF +50-10% 150VDC AL
CR1-8	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29
F1	2110-0332	8	1	FUSE 3A 125V NTD .25X.27
Q1-2	1854-0477	7	2	TRANSISTOR NPN 2N2222A SI TO-18 PD 500MW
Q3-6	1853-0281	9	4	TRANSISTOR PNP 2N2907A SI TO-18 PD=400MW
R1-2	0698-3447	4	2	RESISTOR 422 1% .125W F TC=0±100
R3	0698-3437	2	1	RESISTOR 133 1% .125W F TC=0±100
▶ R4-5	0698-7401	8	2	RESISTOR 1.71K .1% .125W F TC=0±100
R6	0757-0280	3	1	RESISTOR 1K 1% .125W F TC=0±100
R7-8	2100-3502	9	2	RESISTOR-TRMR 200 10% C TOP-ADJ 17TRN
R9	0698-3435	0	1	RESISTOR 38.3 1% .125W F TC=0±100
R10-11	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0±100
R12	0698-0085	0	1	RESISTOR 2.61K 1% .125W F TC=0±100
R13-15	0698-3155	1	3	RESISTOR 4.64K 1% .125W F TC=0±100
TPI-3	1251-0600	0	3	CONNECTOR-SGL CONT P/N 1.14-MM-BSC-S2-SQ
U1	1826-0423	4	1	IC V RGLTR-ADJ-POS 1.2/37V TO-3 PKG
U2-3	1826-0523	5	2	IC V RGLTR-ADJ NEG 1.2/37V TO-3 PKG
U4-5	1826-1288	1	2	IC V RGLTR-V-REF-FXD 2.462/2.538V TO-46

Page 8-57/8-58:

Delete the circuit description for the A10 power supply.

Page 8-59, Figure 4-59:

Replace the parts location diagram with the one supplied in this document.

Page 8-59/8-61, Figure 8-60 and Figure 8-62:

Replace the A10 and A10A1 +20V, -20V, and -11V power supply schematics with the ones supplied in this document.

CHANGE 15**Page 6-20, Table 6-3:**

Add the following:

A22, 08410-60171, CD 0, QTY 1, BOARD ASSEMBLY-MOTHERBOARD, 28480, 08410-60171.
A22C1, 0160-0939, CD 4 QTY 1, CAPACITOR-FXD 430PF \pm 5% 300VDC MICA, 28480, 0160-0939.
A22CR1, 1901-0050, CD 3, QTY 1, DIODE-SWITCHING 80V 200MA 2NS DO-35, 02237, FDH 6308.
A22J1, 1251-5905, CD 8, QTY 1, CONN-POST TYPE .100-PIN-SPCG 24-CONT, 03206, 65611-124.
A22J2, 1251-0251, CD 7, QTY 1, CONNECTOR 26-PIN F CIRC STANDARD, 04486, M53102A28-125.
A22J3, J4, J5, 1251-1626, CD 5, QTY 3, CONNECTOR-PC EDGE 12-CONT/ROW 2-ROWS, 28480, 1251-1626.
A22L1, 9100-2249, CD 6, QTY 1, COIL-MLD 150 NH 10% Q-34 .095DX.25LG-NOM, 28480, 9100-2249.
A22MPI, 0380-0066, CD 4, QTY 4, SPACER-RVT-ON .25-IN-LG .152-IN-ID, 041461.

Page 6-21, Table 6-3:

Delete C46.

Page 6-22, Table 6-3:

Delete L13

Page 6-23, Table 6-3:

Delete XA17, XA18, XA19.

Under Miscellaneous Parts, add the following:

08410-00083, CD 7, QTY 1 DECK.
08410-60172, CD 1, QTY 1, CABLE ASSEMBLY SEARCH SIG. (GREY).
08410-60173, CD 2, WIRING HRNS: SIG.
08410-60174, CD 3, CABLE ASSEMBLY (WHITE).

Page 8-65, Figure 8-66:

Change all references to XA18 to A22XA18.

Change all references to XA19 to A22XA19

Page 8-68, Figure 8-68:

Change all references to XA18 to A22XA18.

Change all references to XA19 to A22XA19

Change C46 to A22C1.

Change L13 to A22L1.

Page 8-69/8-70, Figure 8-69:

Change the upper left corner of the schematic as shown in *P/O Figure 8-69. Signal Wiring Diagram (CHANGE 13)* supplied in this document.

Add the *Figure 8-76. A22 Assembly Parts Location (CHANGE 13)* supplied in this document.

A20

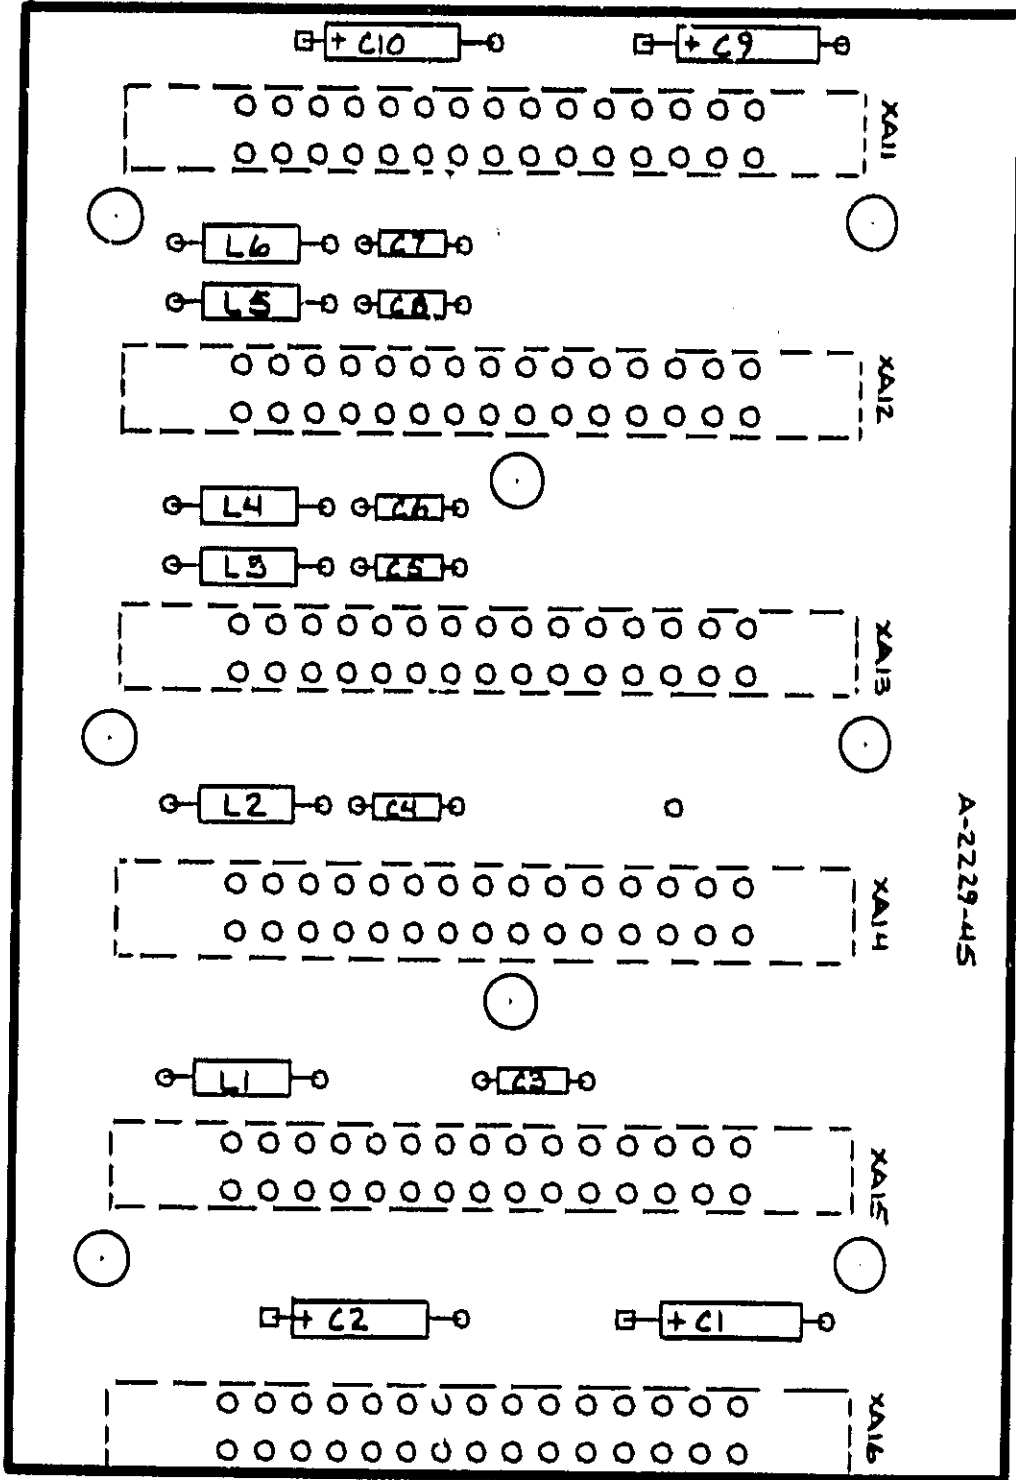


Figure 8-70. 8410C-A20 Parts Location (CHANGE 6)

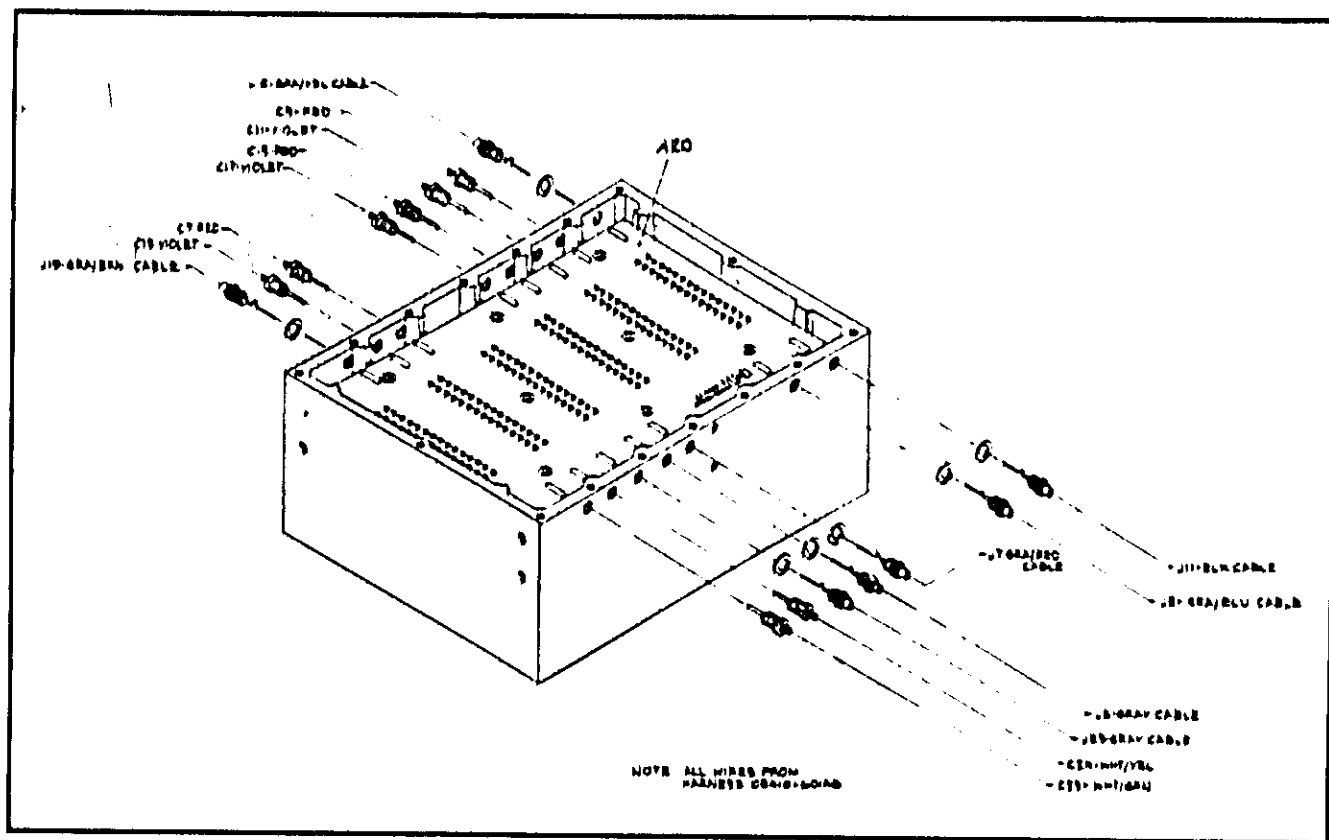


Figure 8-71. Wiring Connections to Fixed Housing (CHANGE 6)

A21

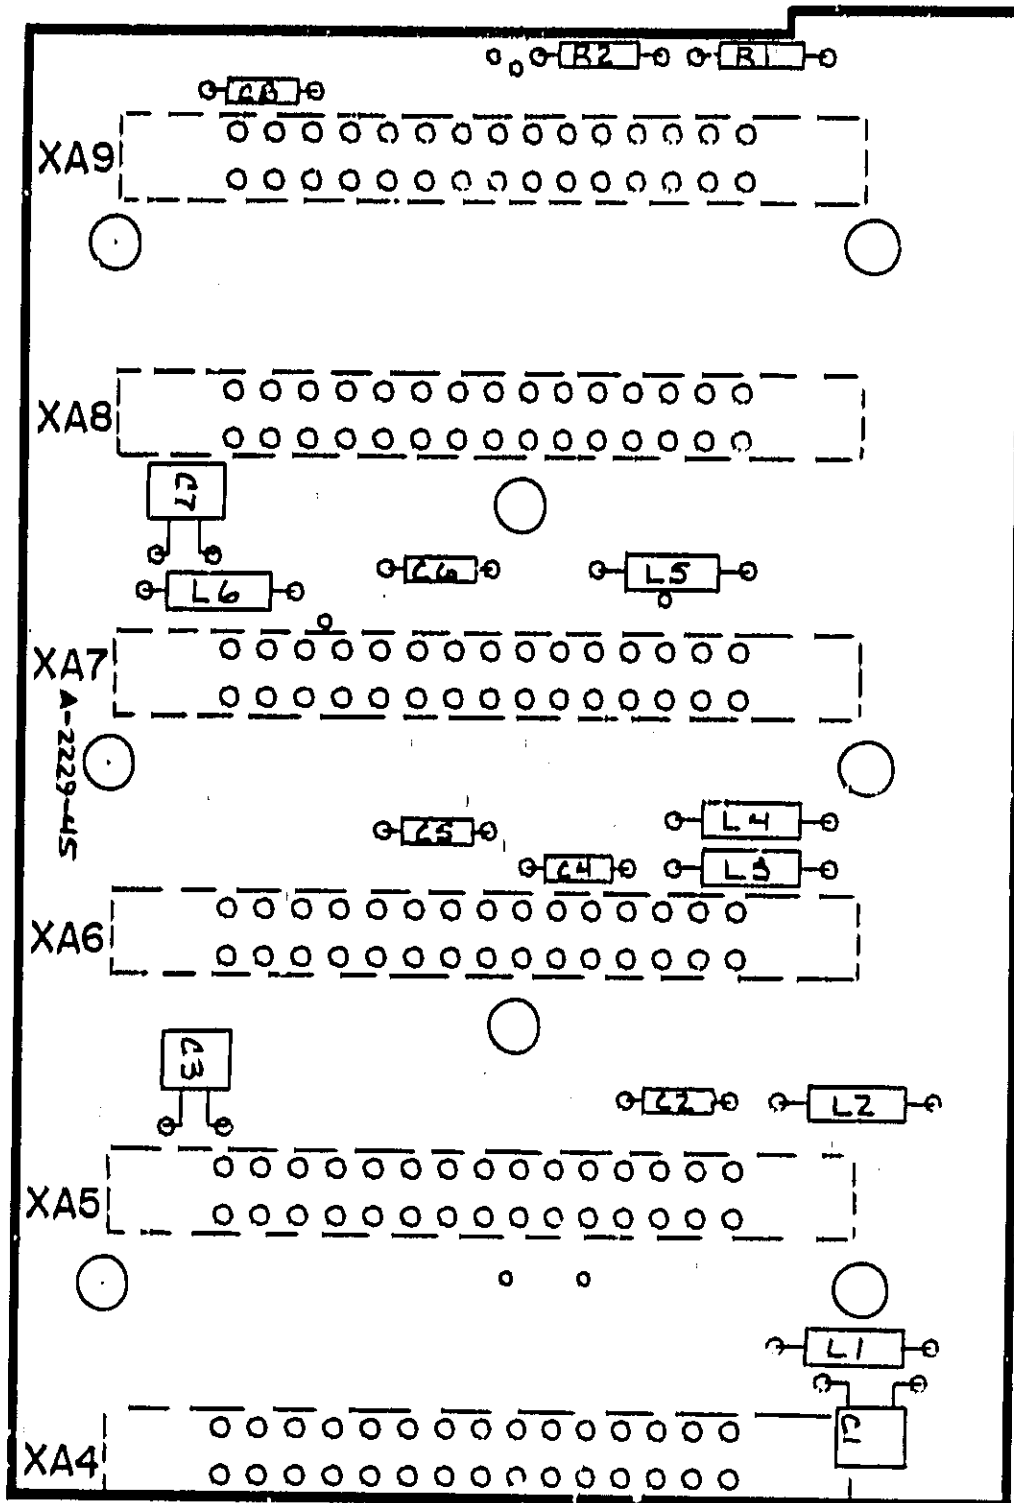


Figure 8-72. 8410-A21 Parts Location (CHANGE 6)


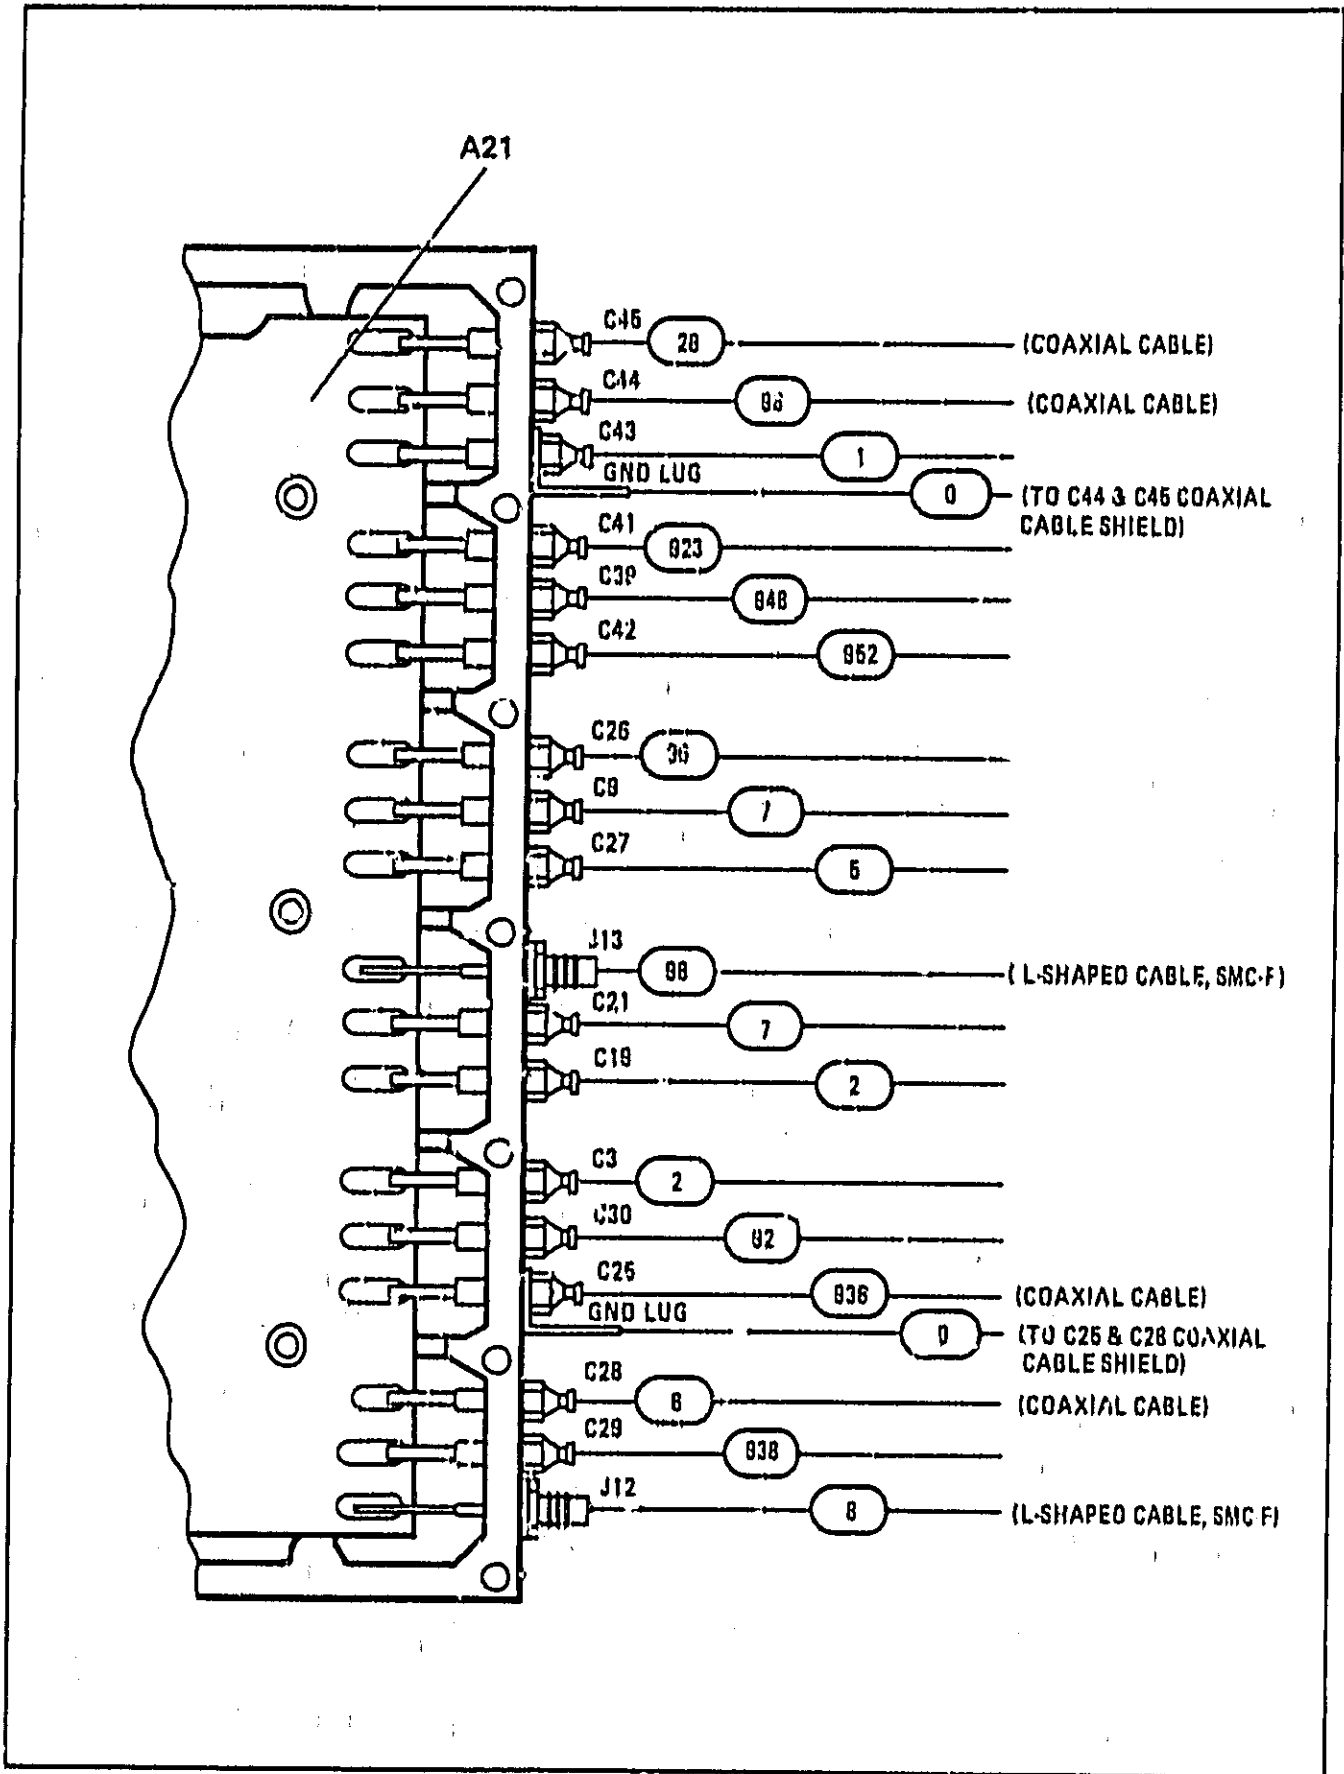


Figure 8-73. Wiring Connections to Movable Housing (CHANGE 6)

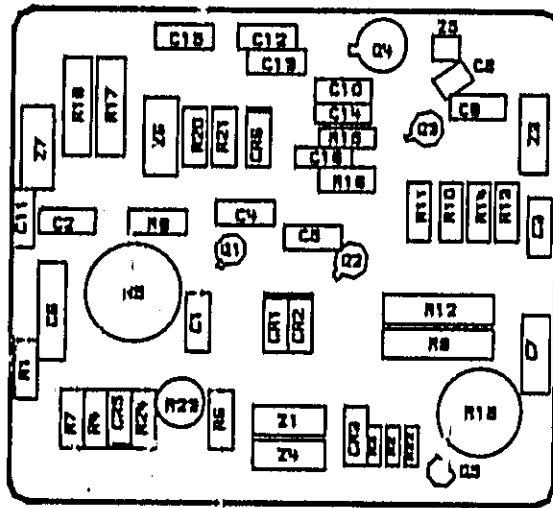

P/O Figure 8-32. 8411A-A6 and A7 Parts Location (CHANGE 8)

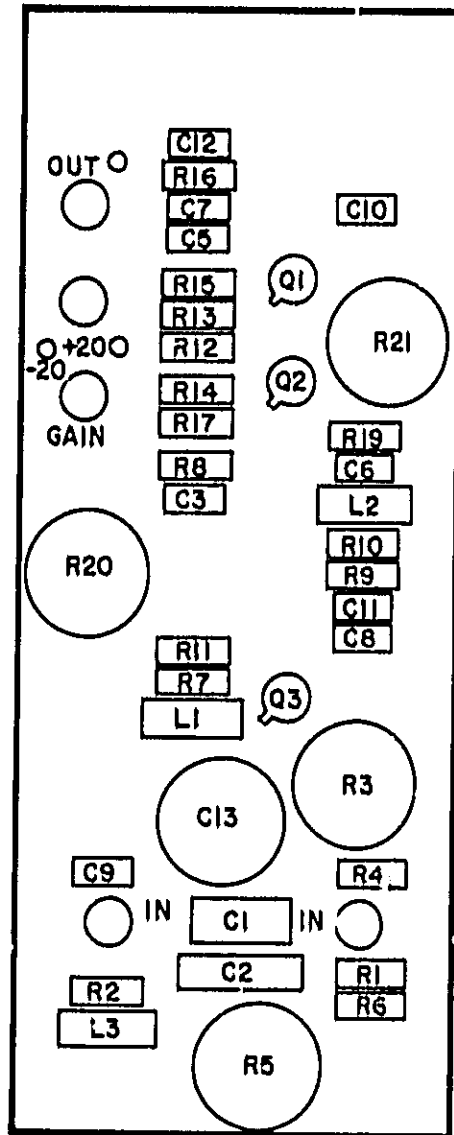


Figure 8-29. 8411-A5 Parts Location (CHANGE 10)

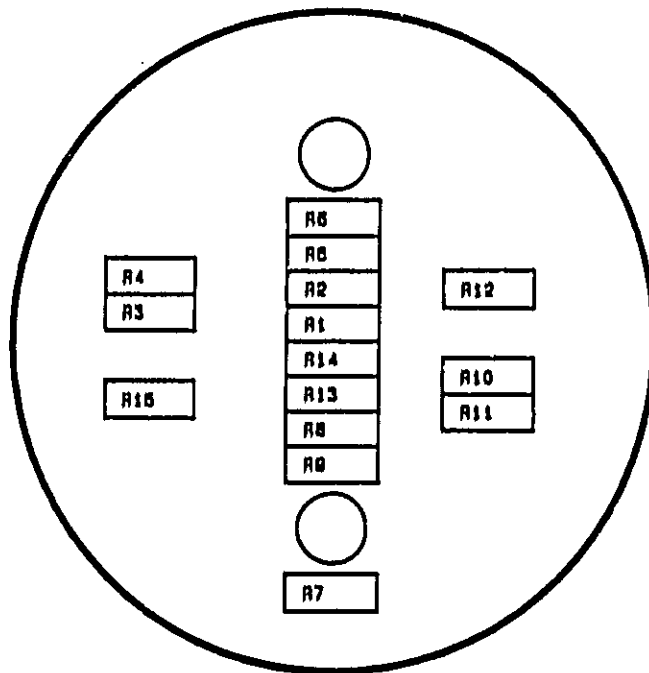


Figure 8-74. A2A1 0-9 dB Attenuator, Parts Location (CHANGE 11)

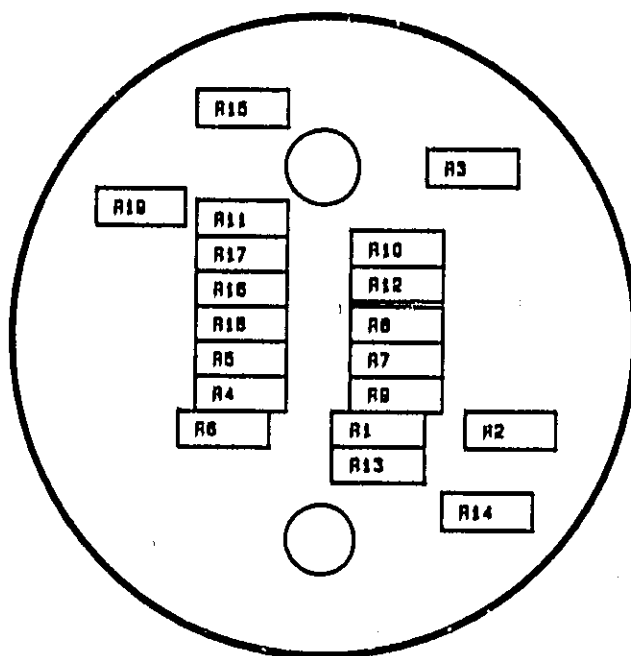


Figure 8-75. A3A1 0-60 dB Attenuator, Parts Location (CHANGE 11)

A15


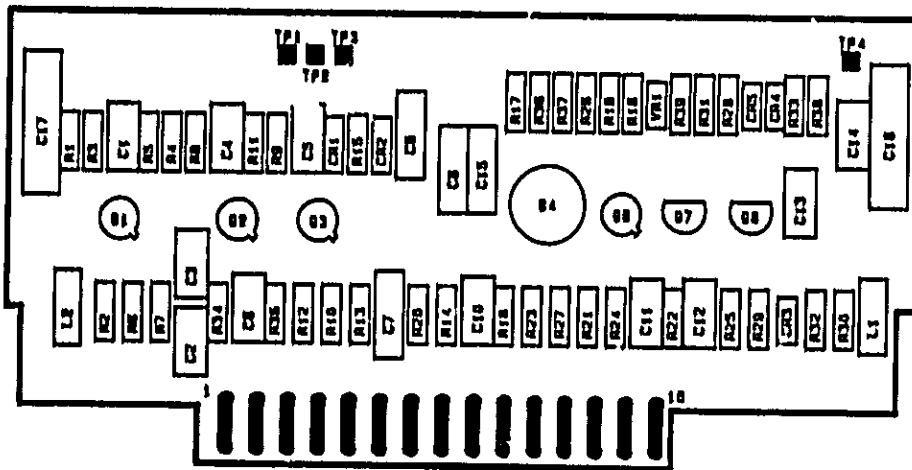


Figure 8-44. HP 8410B - A15 Parts Locations (CHANGE 13)

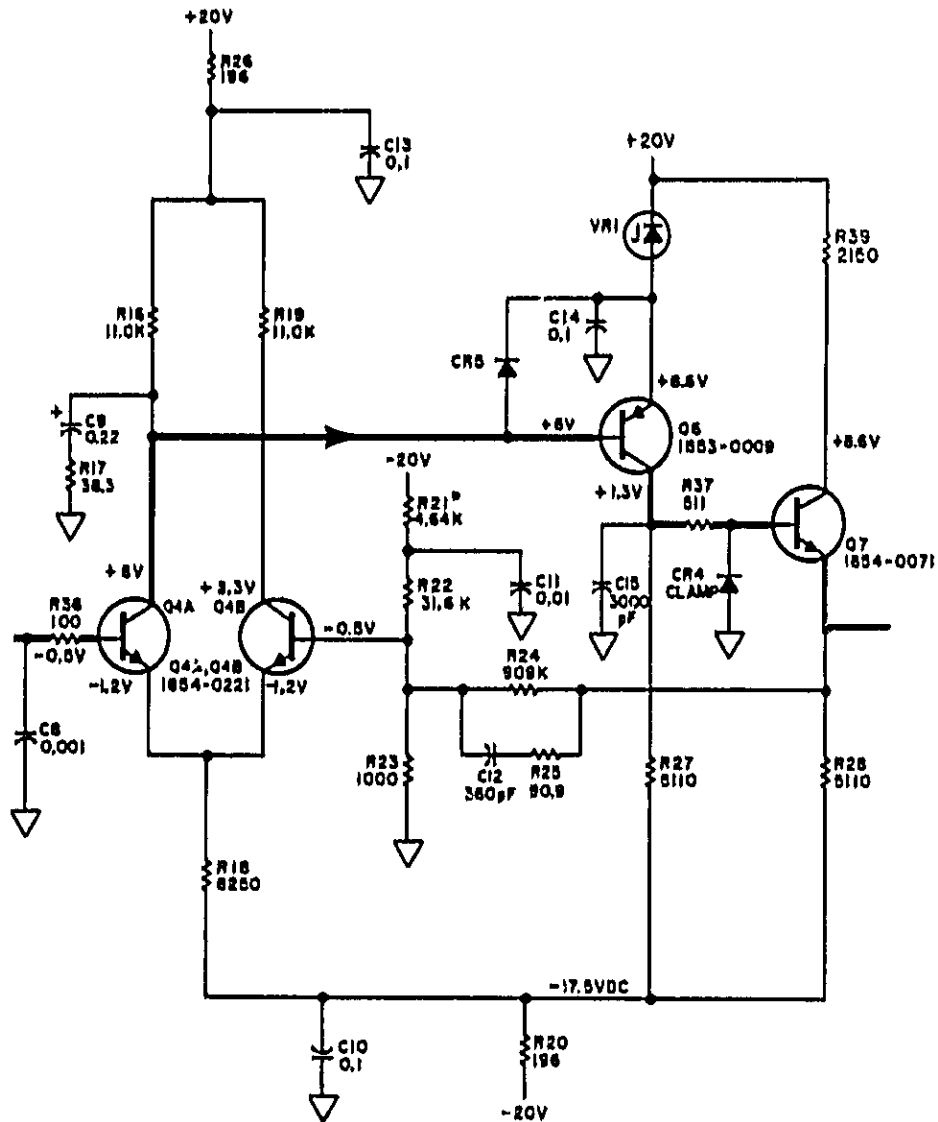

P/O Figure 8-45. 8410B - A15 Schematic Diagram (CHANGE 13)

A10

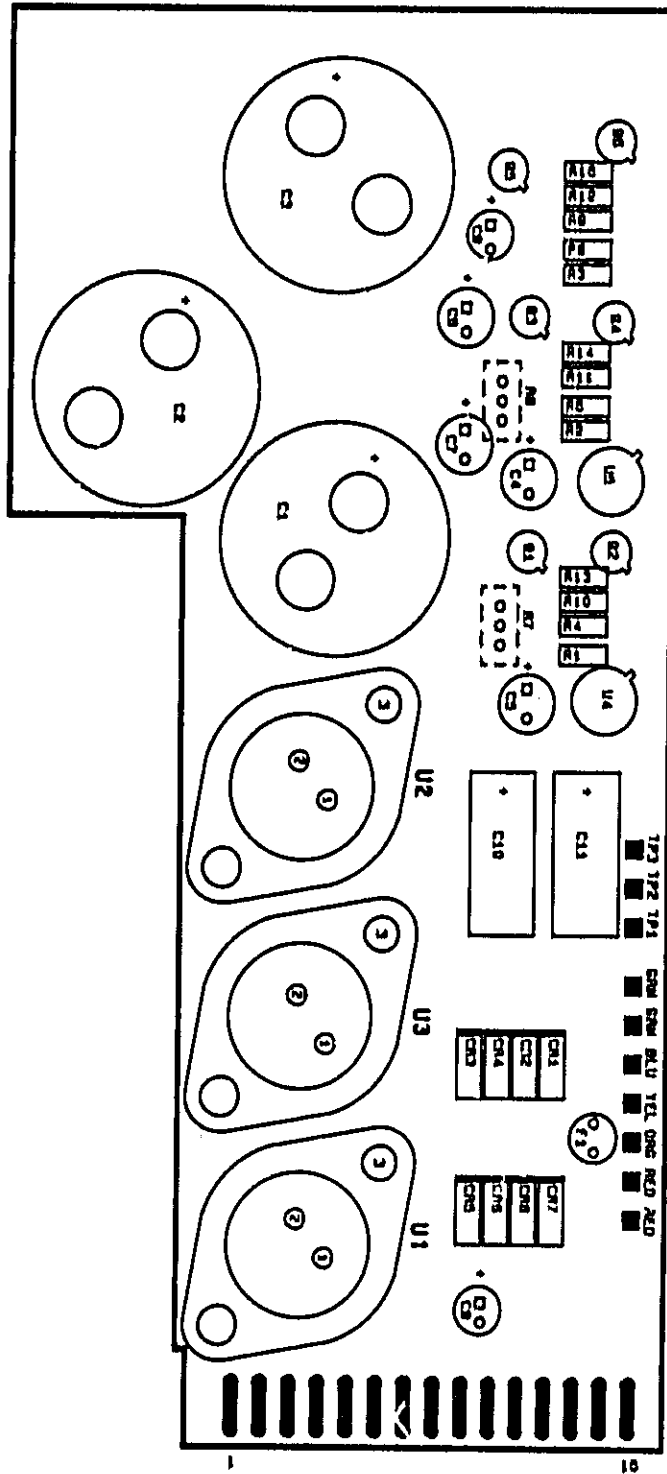


Figure 8-59. HP 8410B - A10 Parts Locations (CHANGE 14)


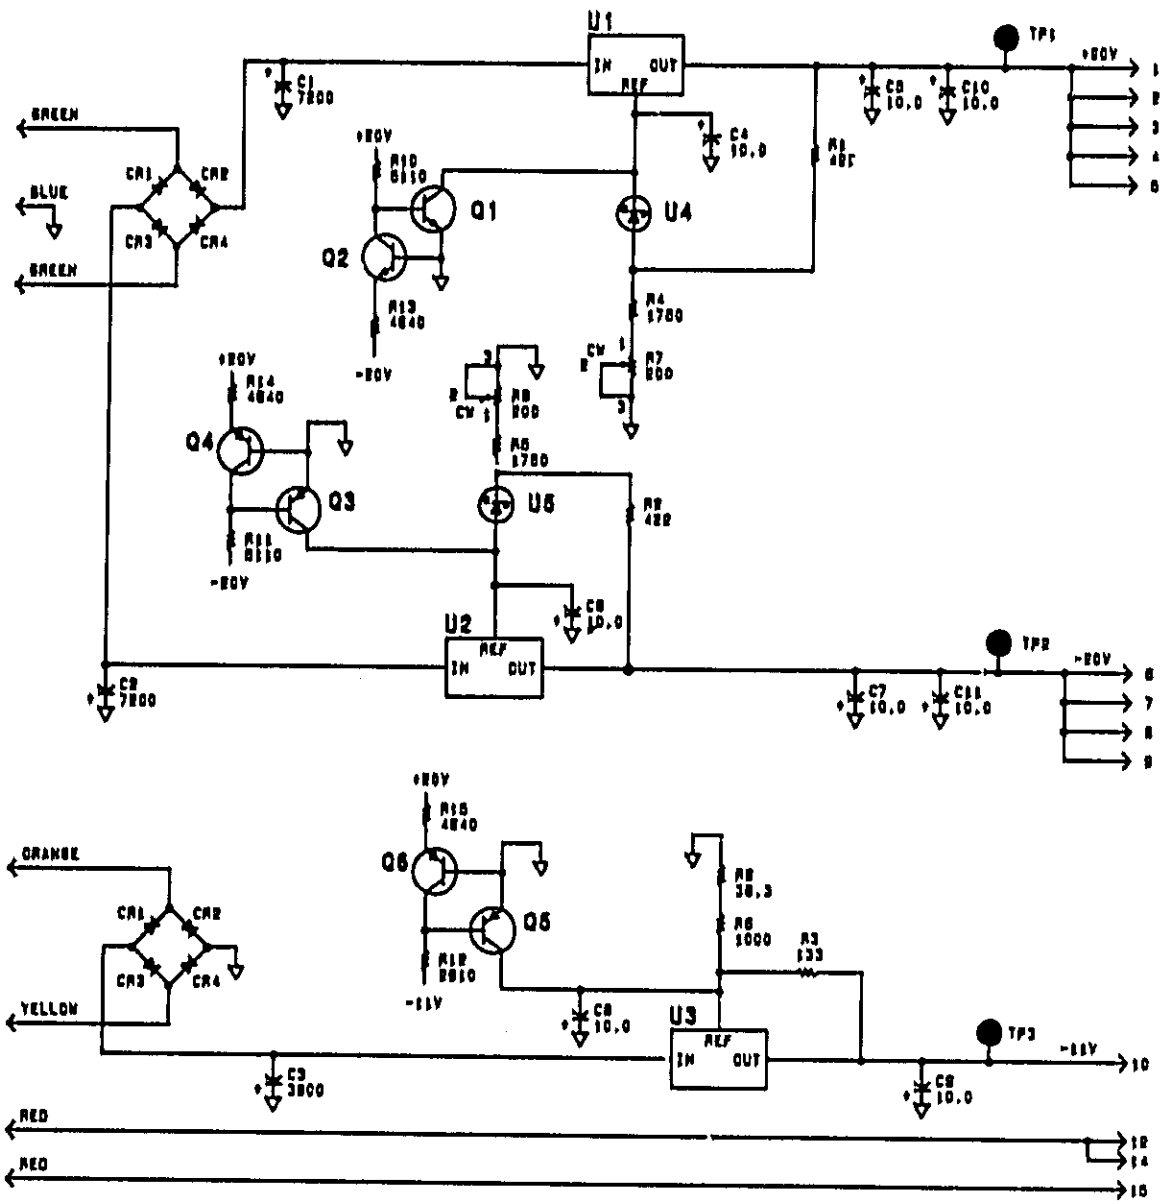


Figure 8-60. 8410B Power Supply Schematic (CHANGE 14)

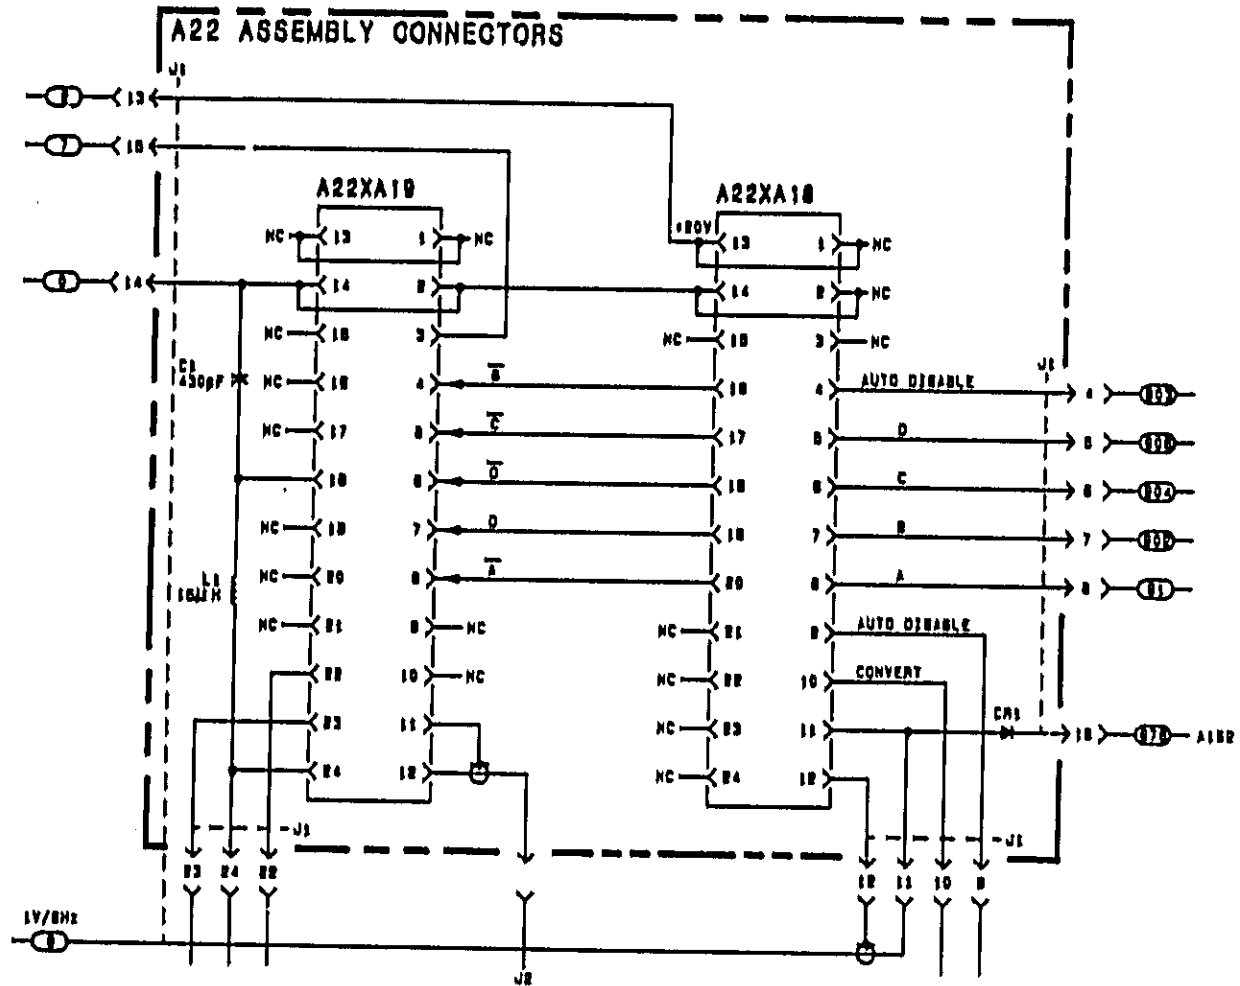

P/O Figure 8-69. Signal Wiring Diagram (CHANGE 15)

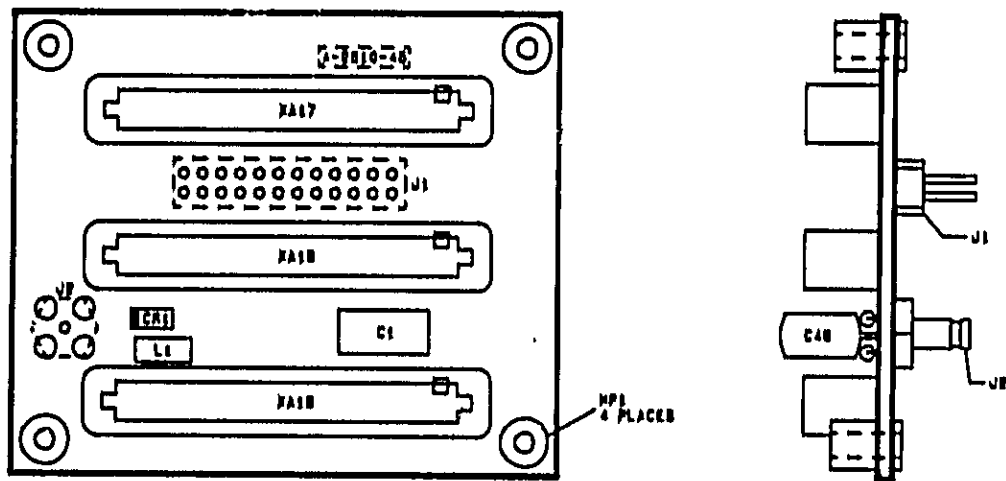


Figure 8-76. A22 Motherboard Components Location Diagram (CHANGE 15)

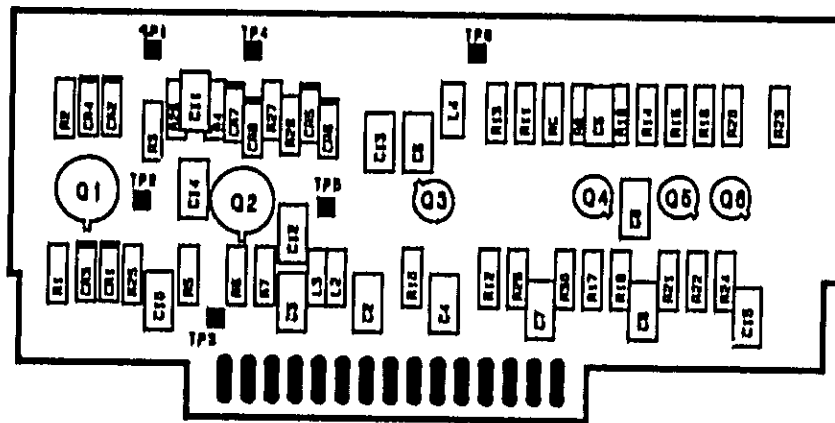


Figure 8-53. 8410B-A5 and A6 Parts Location (CHANGE 12)

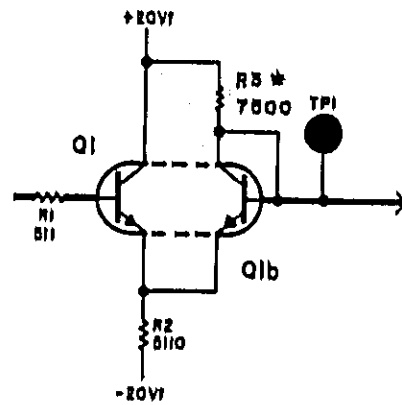
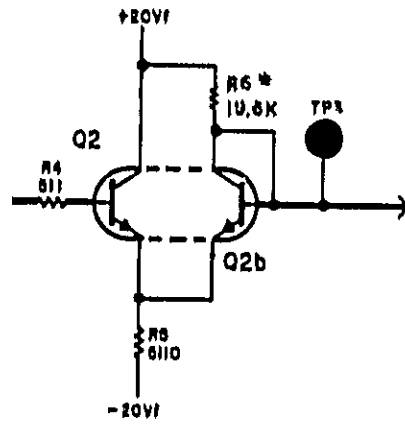


Figure 8-54. 8410B-A5 and A6 Schematic Diagram (CHANGE 12)

MANUAL CHANGES

NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies, quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement, make all ERRATA corrections and all appropriate serial number related changes indicated in the tables below.

▶ = NEW ITEM

MANUAL IDENTIFICATION

Model Number: 8410B/8411A
Date Printed: June/Aug. 1979
Part Number: 08410-90521

8410B

Serial Prefix or Number	Make Manual Changes
1902A01893-6 1902A01898 1902A01899 1902A1901 1902A01903-5 1902A01980 thru 2005A Prefix	1
2017A thru Serial Number 2017A02550	1,3
2017A02551 thru 2017A Prefix	1,3,4
2138A	1, 3, 4, 5
2310A	1, 3, 4, 5, 6
2348A	1, 3, 4, 5, 6, 7
2416A	1, 3-7, 9
2501A	1, 3-7, 9, 11
2513A	1, 3-7, 9, 11, 12
2539A	1, 3-7, 9, 11-15
2541A	1, 3-7, 9, 11-15
▶ 2634A	1, 3-7, 9, 11-16

8411A

Serial Prefix or Number	Make Manual Changes
2004A	2
2346A	2,8
2417A	2,8,10

15 OCTOBER 1986

50 pages



**HEWLETT
PACKARD**

Service Note	Serial Number	Description
8410B-1	All Serials	8410B Auto-Frequency Mode Interface Cable
8411A-1	Prefix 850 and below	Reducing VTO Feedthrough
8411A-2	All Serials	Adjustment Procedures to ensure compatibility with broadband applications.
8411A-3	All Serials	Correct Part Numbers to use when replacing Sampler Assemblies.
8411A-4	All Serials	8411A Harmonic Converter Sampler Diode Replacement Procedure.

ERRATA**Page 1-0, Figure 1-1:**

Change the Source Control cable description to:
 8410B Option 820: HP Part Number 8120-2208 (For 8620C)
 8410B Option 850: HP Part Number 08410-60146 (For 8350A).

Page 1-2, Table 1-1:

Change Magnitude Range of Test Channel as follows:
 Test Channel: -10 to -72 dBm from 0.11 to 12.4 GHz; -10 to -68 dBm from 12.4 to 18 GHz.
 Change NOISE Specification as follows:
 NOISE: Less than -72 dBm equivalent input noise 0.11 to 12.4 GHz; -68 dBm 12.4 to 18 GHz (Option 018).
 Change Cable Supplied description as follows:
 "For servicing plug-ins, a Service Cable is included, HP Part Number 08410-60067. For an 8410B Option 820, a Source Control Cable for use with the 8620C is supplied, HP Part Number 8120-2208. For an 8410B Option 850, a Source Control Cable for use with the 8350A is supplied, HP Part Number 08410-60146."
 Under GENERAL, change the Reference Channel IF specification to read:
 2 volts peak-to-peak (Typical).
 Change the Test Channel IF specification to read:
 10 volts peak-to-peak or less, depending on signal level and test channel gain setting (Typical).

Page 1-4, Warning:

Change the first sentence of the WARNING as follows:
 "If this instrument is to be energized through an autotransformer (for voltage reduction), make sure the common terminal is connected to neutral (grounded side of mains supply)."

Page 1-4, Paragraph 1-21:

Change paragraph 1-21 to, "A detachable power cable, and servicing cable are supplied with the 8410B. For Options 820 and 850, a Source Control Cable is also supplied. No accessories are furnished with the 8411A."

Page 1-4, Paragraph 1-23:

Add the following, "This cable is supplied with the 8410B Option 820."

Page 1-4, Following Paragraph 1-23:

Add the following:
 1-23A. Source Control Cable for 8350A
 1-23B. A source control cable (HP Part Number 08410-60146) provides the control logic interconnection to the 8350A Sweep Oscillator necessary for automatic multi-octave operation. This cable is supplied with the 8410B Option 850.

Page 4-8, Paragraph 4-15:

Change TEST CHANNEL NOISE in 0.11 to 12.4 GHz range to ≤ 72 dBm.
 Change sentences three and four of the test description as follows:
 "Noise level of -72 dBm is 42 dB lower than the -30 dBm reference level. Forty dB of gain is added in the TEST CHANNEL GAIN control and -2 dB from the zero reference line is indicated on the 8412A display plug in totaling 42 dB."

Page 4-9, Paragraph 4-15:

In step h, change "-5dB" to "-2 dB" and change "-75 dBm" to "-72 dBm."

Page 4-10, Paragraph 4-16:

Under "Specifications Tested," change Test Channel Dynamic Range for 0.11 to 12.4 GHz to "-10 to -72 dBm."
 Under "Test Description," in the fourth sentence change "-75 dBm" to "-72 dBm."

ERRATA (Cont'd)

Page 4-11, Paragraph 4-16:

In step h, change "65 dB" to "62 dB."

Page 4-13, Paragraph 4-17:

In the test setup, add a 10 dB attenuator between the Harmonic Frequency Converter "REF" port and the APC-710 Type-N adapter.

In step b, change -18 dBm to -10 dBm.

In step e (1), change the sentence to read, "(1) REF CHANNEL LEVEL meter should indicate in the OPERATE range."

Page 4-14, Paragraph 4-17:

In steps j, k, and l, change " -18 dBm" to " -10 dBm."

Page 5-3, Table 5-2:

Under 8410B, add A11C4, Test channel 278 kHz bandpass filter tuning, 0-470 pF, Figure 8-47, paragraph 5-16. Change the range of A11C5 to 0-470 pF.

Add the following component under 8410B heading:

A13C8, 20 MHz oscillator frequency 0-39 pF, 8-41, 5-11.

Add the following component under the 8411A heading:

A3C17, 1F amplitude, 0-27 pf, 8-26, 5-20.

Under 8410B, add A19R54, Sets On-Resistance between TP2 and TP5. Range is either 61.9 or 68.1 ohms, Figure 8-67, Paragraph 5-18A.

Under 8411A, add A7R8; VTO high end, value must be matched to A7R11; 80.2, 82.5, or 90.9 Ohms; 8-32; 5-19.

Under 8411A, add A7R11; VTO high end, value must be matched with A7R8; 80.2, 82.5, or 90.9 Ohms; 8-32; 5-19.

Page 5-5, Table 5-3:

Add the following components:

15 pf, 0160-4789 CD 5

27 pf, 0160-4786 CD 7

Page 5-10, Paragraph 5-11:

In step c, change the second sentence to read as follows:

If the frequency cannot be obtained, select a value of A13C8 or A6C6 that gives the correct frequency.

In step c, add the following sentence:

The range of A13C8 is 0-39 pF.

Page 5-17, Paragraph 5-16:

At step e, change the second and third sentence as follows:

"if not, select the value of A11C4 and A11C5 for maximum signal at 278 kHz. Typical range of values for A11C4 is 0-470 pF. A11C5 is not normally loaded but may have a range of 0-470 pF.

Page 5-19, Paragraph 5-18:

Following paragraph 5-18, add paragraph 5-18A as follows:

5-18.A 8410B/C FREQUENCY RANGE ASSEMBLY A19

ADJUSTMENT: Select A19R54

DESCRIPTION: A19R54 is selected (61.9 or 68.1 ohms only) for an "on-resistance" between TP2 and TP5 of 72.9 to 93.9 ohms.

PROCEDURE:

1. Set front panel **FREQ. RANGE** switch to 6-12 GHz (8 on top).
2. Put 8410B-A19 on extender board and set **NORM/TEST** switch to **TEST**.
3. Connect ohmmeter between A19 TP5 (positive lead). Resistance should be between 72.9 and 93.9 ohms. If not select A19R54 for resistance in range.
4. Set A19 **NORM/TEST** switch back to **NORM** and reassemble into instrument.

ERRATA (Cont'd)

Page 5-22, Paragraph 5-19:

Change the last sentence of step f as follows:

"Adjust power supply and 8410B SWEEP STABILITY Control for 11.6 Vdc \pm 0.01 Vdc at 8410B-A7TP6 and adjust 8411A VTO Upper Limit (A6R16) for 160 MHz \pm 1 MHz. If this frequency cannot be reached, select new values of A7R8 and A7R11 for a frequency within tolerance. Resistors A7R8 and A7R11 must both be the same value and selection is limited to the following two values:

A7R8,A7R11	HP Part Number
100 Ω	0699-2054
90.9 Ω	0699-0110

Page 5-23, Paragraph 5-20:

Insert the following steps after step h:

- h.1 Increase scope sensitivity until noise is observed between the IF signals (birdies).
- h.2 Turn A5R5 counterclockwise to decrease the amplitude of the IF signals until they just disappear in the noise.
- h.3 Measure the dc bias voltages at the junction of A5R1 and A5C1, and the junction of A5R2 and A5C2. The difference between these two voltages should be greater than 1.2VDC.
- h.4 If the difference is less than 1.2 VDC, select A5C17 from the list below to increase the voltage (IF amplitude):
 - 0 pf - no part
 - 15 pf - 0160-4789, CD 5
 - 27 pf - 0160-4786, CD 7

Page 5-35, Service Hints 5:

In the second paragraph, change part number 08410-6000 to part number 5060-0230.

Page 6-5, Table 6-3:

Delete the A1 assembly.

Delete AIR1 through AIR26.

Change AIS1 to HP Part Number 3100-3317 CD 5 SWITCH-ROTARY 1.562 STRUT CTR SPCG; 16.

Page 6-5, Table 6-3:

If any of the following attenuator parts fail, replace the entire attenuator assembly HP Part Number 08410-60160.

08410-6014 Attenuator Assy, 0-9 dB

08410-6015 Attenuator Assy, 0-60 dB

08410-6025 Cable Assy, Ampl. Vern. (IN)

08410-6026 Cable Assy, Attenuator

08410-6027 Cable Assy, Ampl. Vern (OUT)

08410-6028 Cable Assy, Switch Connect

If any part fails in the Attenuator Assembly HP Part Number 08410-60160, see Change 11 for the list of replaceable parts.

ERRATA (Cont'd)**Page 6-6, Table 6-3:**

Change the A5 assembly to HP P/N 08410-60173, CD 4. (Recommended Replacement) (See Change 12)
Change A4R15 to HP Part Number 0698-0082, Check Digit 7.

Page 6-7, Table 6-3:

Change A5L3 to HP P/N 9100-3315, CD 9, INDUCTOR RF-CH-MLD 820NH 5% .166DX,385 LG. (Recommended Replacement)
Change A5Q1, A5Q2 and A5Q3 to HP Part Number 1854-0404 CD 0 TRANSISTOR NPN SI TO-18 PD=360MW Mfr. Code 02037 Mfr. Part Number 229333. (Recommended Replacement).
Change A5R3 to HP Part Number 0757-0440, check digit 7 and change value to 7500 Ohms.
Change the A6 Assembly description to read:
20,278 MHz OSCILLATOR ASSEMBLY. DOES NOT INCLUDE Y1.
Change A6R1 to HP P/N 0757-0278, CD 9, Qty 1, 1.78K Ohms.
Change A6CR1, 2 to HP P/N 1901-0539, CD 3, DIODE-SCHOTKY SM SIG.

Page 6-8, Table 6-3:

Change A7Q8 to HP Part Number 1854-0404 CD 0 TRANSISTOR NPN SI TO-18 PD=360MW Mfr. Code 02037 Mfr. Part Number 229333. (Recommended Replacement).
Change A7R18 to HP Part Number 0757-0462, CD 3, Resistor 75K 1% .125W F TC=0±100.
Change A7R19 to HP Part Number 0757-0459, CD 8, Resistor 56.2K 1% .125W F TC=0±100.

Page 6-10, Table 6-3:

Change A9U4 to HP Part No. 1826-1221.
Change A9R19* to HP Part Number 0757-0442, CD 9, Resistor 10K 1% .125W F TC=0±100.
Change A9R20* to HP Part Number 0757-0438, CD 3, Resistor 5.11K 1% .125W F TC=0±100.
Change A9R21* to HP Part Number 0757-0446, CD 3, Resistor 15K 1% .125W F TC=0±100.
Change A9U2 and A9U3 to HP Part Number 1820-1569, CD 9, IC MV CMOS MONOSTBL RETRIB/RESET DUAL.
Delete A9XU1, A9XU2, A9XU3, and A9XU4 IC sockets.

Page 6-11, Table 6-3:

Change the A10 assembly to HP Part Number 08410-60169, CD 6 (Recommended Replacement — see Change 14 for details).

Page 6-12, Table 6-3:

Change A10A1U1, A10A1U2, and A10A1U3 to HP Part Number 1826-0177, CD 5, IC V RGLTR-ADJ-POS 2/37V TO-100 PKG (PREFERRED REPLACEMENT).
Add A10F1, HP Part Number 2110-0332, FUSE 31 125V SLO-BLO.
Add A10MP1 and A10MP2, HP Part Number 1251-2313, FUSE SOCKET.
At A11C5, add an asterisk indicating a factory selected value. Change description to:
"Not normally loaded at the factory."

Page 6-14, Table 6-3:

Change the A13 Assembly description to read:
20 MHz OSCILLATOR BOARD.
Add an asterisk (*) to A13C8 to indicate that it is a factory select part.
Change A13R1 to HP P/N 0757-0278, CD 9, Qty 2, 1.78K Ohms.
Change A13CR1, 2 to HP P/N 1901-0539, CD 3, DIODE-SCHOTKY SM SIG.

Page 6-15, Table 6-3:

Change the A15 assembly to HP Part Number 08410-60155, CD 0 (Recommended Replacement — see Change 13 for details).

Page 6-16, Table 6-3:

Change A15R32* to HP Part Number 0757-0460, CD 1, RESISTOR 61.9K 1% .125W F TC=0±100.
Change A15R21* to HP P/N 0698-0084, CD 9, 2.15K Ohms.
Change A15CR1, 2 to HP P/N 1901-0050, CD 3, DIODE-SWITCHING 80V 200MA 2NS DO-35.
Add the following note:
If A15CR1, 2 are replaced, A15R21* (factory select resistor) may have to be changed also. The allowable range for R21 is 562 Ohms to 5.62K Ohms.

ERRATA (Cont'd)

Page 6-17, Table 6-3:

Change A16C8 to HP Part Number 0160-3048, CD 2, CAPACITOR-FXD 8000 PF \pm 1% 100 VDC MICA.

Page 6-18, Table 6-3:

Delete A18XU1 through A18XU12 IC sockets.

Page 6-19, Table 6-3:

Change A19R15 to HP Part Number 0698-3433, CD 8, RESISTOR 28.7 1% .125 F TC=0 \pm 100.

Change A19R19 to HP Part Number 0757-0400, CD 9, RESISTOR 90.9 1% .125W F TC=0 \pm 100.

Page 6-20, Table 6-3:

Change A19R46 to HP Part Number 0757-0275, CD 6, RESISTOR 113 1% .125 W F TC=0 \pm 100.

Change A19R50 to HP Part Number 0698-4096, RESISTOR 80.2 1% .125W F TC=0 \pm 100.

Change A19R54* to HP Part Number 0757-0276, RESISTOR 61.9 1% .125W F TC=0 \pm 100 (FACTORY SELECTED).

Change A19R59 to HP Part Number 0698-4037, RESISTOR 42.2 1% .125W F TC=0 \pm 100.

Change A19R53 to HP Part Number 0698-3433, RESISTOR 28.7 1% .125W F TC=0 \pm 100.

Delete A19XU1 through A19XU3 IC sockets.

Page 6-21, Table 6-3:

Change B1 to HP Part Number 3160-0206, CD 1.

Change C3, C9, C19, C21, and C40 to HP Part Number 0160-2437.

Change C33 to HP Part Number 0160-0181.

Change C47 to HP Part Number 0160-3043 Dual Capacitor 5000 PF, 250V, 1 per. Delete C48.

Change J1 Nut Hex (HP Part Number 5020-3258) to HP Part Number 08410-20065, CD 7, QTY 2.

Page 6-22, Table 6-3:

Add R6, HP Part Number 0757-0442, CD 9, RESISTOR 10K 1% .125W F TC=0 \pm 100.

Add R7, HP Part Number 0757-0442 CD 9, RESISTOR 10K 1% .125W F TC=0 \pm 100.

Following S1, add SIMP1, HP Part Number 08410-20065, CD 7, NUT, KNURLED HEX.

Following T1, add TIMP1 thru TIMP4, HP Part Number 2510-0300, CD 8, Screw 8-32 1.875 IN LONG.

Change W12 to HP Part Number 08410-60069.

Change W14 to HP Part Number 08410-60068.

Page 6-23, Table 6-3:

Add the following parts under "Miscellaneous Parts":

08410-00079; CD; QTY 1; LATCH, FIXED HOUSING.

08410-00080; CD; QTY 1; LATCH, MOVABLE HOUSING.

Page 6-24, Figure 6-1:

Add the following prior to item 3:

Ref. Desig.	HP Part Number	CD	Qty.	Description
2A	3160-0214	1	1	Fan Grille
	3060-0066	9	4	Flat Washer
	2420-0001	5	4	NUT-HEX-W/LKWR 6-32-TND .109-IN-THK
	2360-0205	3	4	SCREW-MACH 6-32 .75-IN-LG PAN-HD-POZI
	2190-0006	1	4	WASHER-LK HLCL NO. 6 .141- IN-ID

ERRATA (Cont'd)**Page 6-27, Table 6-4:**

Delete all rebuilt sampler assemblies for A1 and A2.

Add under the description for A3Q1 through A3Q7 the following notation: "(Alternate part is HP Part Number 1854-0378, 2N5109, CD 7)".

Add the following part:

A3C17*, 0160-4789, CD 5, QTY 1, CAPACITOR-FXD 15 pf \pm 5% 100VDC CER 0 \pm 30.

Add the HP Part Number to the following Reference Designators:

A1CR1 and A2CR1 - HP Part Number 08411-60043, CD 6.

A1CR2 and A2CR2 - HP Part Number 08411-60041, CD 4.

Add the following sentence to the Description of A1CR1, A1CR2, A2CR1, A2CR2:

See Service Note 8411A-4A for replacement instructions.

Page 6-30, Table 6-4:

Change A7Q1 and A7Q2 to HP Part Number 1854-0048, CD 8 (Recommended Replacement).

Change A7R7 to HP Part Number 0757-0418, CD 9, Resistor 619 1%, .125W F TC = 0 \pm 100.

Change A7R9 to HP Part Number 0698-0024, CD 7, Resistor 2.16K 1% .5W F TC = 0 \pm 100.

Change A7R12 to HP Part Number 0698-0024, CD 7, Resistor 2.16K .5W F TC = 0 \pm 100.

Change A7R8 and A7R11 to a factory selected value by adding an asterisk (*) to the reference designator.

Add a note prior to A7R8 as follows:

NOTE

The resistors selected for A7R8 and A7R11 must be the same value.

Page 6-31, Table 6-4:

Change W1 to HP Part Number 08411-60045 and add to the description:

"Includes cable adapter, HP Part Number 08411-20047 for replacement on instruments prior to Serial Number 934-01096."

Page 6-35, Figure 6-5:

Change Item 27 to HP Part Number 08411-60045 and add to the description:

"Includes cable adapter, HP Part Number 08411-20047 for replacement on instruments prior to Serial Number 934-01096.

Add Reference Designation 29 HP Part Number 9170-0874 CD 3 CORE SHIELDING-BEAD (INSULATED), Factory Selected.

Add Reference Designation 30 HP Part Number 08411-20042 CD 1 FOAM.

Add Reference Designation 31, HP Part Number 7120-7721, CD 9, Label, I.D., 8411A.

Add Reference Designation 32, HP Part Number 9170-0016, CORE SHIELDING-BEAD (not insulated), Factory Selected.

All schematic diagrams in Section 8:

In the notes on all schematic diagrams, change reference to general notes from Figure 8-10 to Figure 8-12.

Page 8-35, Figure 8-27:

Add A3C17* between TP9 (the junction of Q1 emitter and R12 and R13) and ground.

Add to the notations under A3Q1 through A3Q7 the following: "or 1854-0378."

Page 8-37, Figure 8-30:

On the 8411-A4 Schematic Diagram change the value of A4R14* to 75.

Page 8-39, Figure 8-33:

On the 8411A-A7 Schematic Diagram, add an asterisk (*) to A7R8 and A7R11.

On the 8411A-A7 Schematic Diagram change A7Q1 and A7Q2 to HP Part Number 1854-0048.

On the 8411A-A7 Schematic Diagram change the value of A7R7 to 619 Ohms.

On the 8411A-A7 Schematic Diagram change the values of A7R9 and A7R12 to 2610 Ohms.

ERRATA (Cont'd)

Page 8-43, Figure 8-39:

Change the value of A16C8 to 8000 pF.

Service Sheet 4

Page 8-41, Figure 8-36:

Delete "(SEE NOTE 2)" next to A12Q6 and A14Q7.

Add "(SEE NOTE 2)" next to A12Q7 and A14Q7.

Add the following note:

4. A12CR5 AND A12CR6, A14CR5 AND A14CR6 ARE A MATCHED PAIR. REPLACE IN PAIRS. SEE TABLE OF REPLACEABLE PARTS.

Add "(SEE NOTE 4)" Next to A12CR5, A12CR6, A14CR5 and A14CR6.

Service Sheet 5

Page 8-43 Figure 8-39:

Delete J17 REF connector.

Page 8-47, Figure 8-45:

Under the "AGC Monitor" portion of the schematic, change the value of R32 to 61.9K and add an asterisk.

Service Sheet 6

Page 8-45, Figure 8-42:

Add an asterick (*) to A13C8.

Service Sheet 8

Page 8-49, Figure 8-47:

Add an asterisk to C4.

Page 8-49, Figure 8-48:

Delete J16 TEST AMPL connector.

Change J5 TEST PHASE connector to J15 and delete reference to OPT 005.

Add a capacitor in parallel with C4 with the notation "C5* (See Note 2)."

Add Note 2 at the bottom of the page:

"C5 is not normally loaded at the factory."

Page 8-51, Figure 8-51:

Change A4R15 to 464 Ohms.

Change the gain notation above O3 to "10 dB (X3:2)."

Service Sheet 10

Page 8-53, Figure 8-54:

Change A5Q1, A5Q2 and A5Q3 to HP Part No. 1854-0404.

Change A5R3 to 7500 Ohms.

Service Sheet 11

Page 8-55, Figure 8-57:

Change R6 SWEEP STABILITY potentiometer to A1R27.

Change A1R27 wiper connection from +20V side of potentiometer to the XA7 pin 7 side. (This is the recommended connection.)

Change A7Q8 to HP Part No. 1854-0404.

Change A7R18 to 75K.

Change A7R19 to 56.2K.

ERRATA (Cont'd)**Service Sheet 13**

Page 8-61, Figure 8-62:

Add A10F1 FUSE, 3 A SLO-BLO, in the line from the orange wire connection (Transformer T1 secondary 1 ϕ VAC winding) to the junction point of A10CR5 and A10CR6.

Change C47 to C47A.

Change C48 to C47B.

Page 8-63, Figure 8-64:

Change A9R19* to 10K.

Change A9R21* to 5.11K.

Change A9421* to 15K.

Service Sheet 14

Page 8-63, Figure 8-64:

Change C43 (located at the lower left side of the schematic) to C41.

CHANGE 1

Page 6-13, Table 6-3:

Change A12C10 to HP Part No. 0140-0221 CD 5 CAPACITOR-FXD 220PF \pm 1% 300 VDC MICA.

Change A12L1 to HP Part No. 9140-0477 CD 2 INDUCTOR RF-CH-MLD 270NH 1% .105 DX .26LG.

Page 6-15, Table 6-3:

Change A14C10 to HP Part No. 0140-0220 CD 4 CAPACITOR-FXD 200PF \pm 1% 300 VDC MICA.

Change A14L1 to HP Part No. 9140-0477 CD 2 INDUCTOR RF-CH-MLD 270NH 1% .105DX .26LG.

Page 8-41, Figure 8-36:

Change value of A12C10 to 220 pF.

Change value of A14C10 to 200 pF.

Change value of A12L1 and A14L1 to 270 nH.

CHANGE 2

Page 6-27, Table 6-4:

Add A3R14 and A3R15 HP Part No. 0698-4037 CD 0 RESISTOR 46.4 1% .125W F TC = \pm 100.

Page 8-35, Figure 8-27:

Add A3R14 46.4 ohms in series with A3Z4 and test point A3TP7.

Add A3R15 46.4 ohms in series with A3Z5 and test point A3TP7.

CHANGE 3

Page 5-15, Paragraph 5-15:

Change voltage level in the DESCRIPTION and step d to 10.0 Vdc.

Page 6-5, Table 6-3:

Change A1R28 to HP Part No. 0698-3161 CD 9 RESISTOR 38.3K 1% .125W F TC = \pm 100 Mfr. Code 00746 Mfr. Part No. CRB14.

Service Sheet 11

Page 8-55, Figure 8-57:

Change value of A1R28 to 38.3K.

CHANGE 4

Page 6-8, Table 6-3:

Change A6Q2 to HP Part Number 1854-0882, Check Digit 8.

Page 6-14, Table 6-3:

Change A13Q4 to HP Part Number 1854-0882, Check Digit 8.

Page 8-45, Figure 8-42:

Change the HP Part Number for A13Q4 to 1854-0882.

Page 8-53, Figure 8-54:

Change the HP Part Number for A6Q2 to 1854-0882.

CHANGE 5

Page 6-8, Table 6-3:

Change A6Y1 to HP Part Number 0410-1392.

Page 6-19, Table 6-3:

Change A19Q6 through A19Q34 to HP Part Number 1855-0420.

Page 6-23, Table 6-3:

Add as the last entry to "MISCELLANEOUS PARTS": HP Part Number 08410-20057, CD 7, HEAT SINK SUPPORT BRACKET.

CHANGE 6

This change incorporates mother boards within the fixed and movable castings to replace actual wiring harnesses that interconnect the boards and carry signals and power to and from the boards mounted in the castings. Basically, this change does not modify the functions of the circuits but moves some of the chassis-mounted components onto the two new mother boards.

Page 6-20, Table 6-3:

After the description of A20, add the following note: To improve isolation between Test and Reference channels in an HP 8409 system, order HP 8410 Retrofit Kit, having HP Part Number 08410-60157, CD 2.

Add a Mother Board to the Fixed Housing as follows:

<u>Reference Designator</u>	<u>HP Part Number</u>	<u>C</u>	<u>Q1</u>	<u>Description</u>
A20	08410-60137	8	1	MOTHERBOARD, FIXED HOUSING
A20C1	0160-0110	1	4	CAPACITOR-FXD 6.8UF ±10% 35VDC TA
A20C2	0180-0110	1		CAPACITOR-FXD 6.8UF ±10% 35VDC TA
A20C3	0160-4E31	3	6	CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C4	0160-4E31	3		CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C5	0160-4E31	3		CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C6	0160-4E31	3		CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C7	0160-4E31	3		CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C8	0160-4E31	3		CAPACITOR-FXD 4700PF ±10% 100 VDC CEP
A20C9	0160-0110	1		CAPACITOR-FXD 6.8UF ±10% 35VDC TA
A20C10	0160-0110	1		CAPACITOR-FXD 6.8UF ±10% 35VDC TA
A20L1	9140-0114	4	6	INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20L2	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20L3	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20L4	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20L5	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20L6	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166D .385L
A20XA11	1251-2035	9	6	CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A20XA12	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A20XA13	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A20XA14	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A20XA15	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A20XA16	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS

CHANGE 6 (Cont'd)

Add Mother Board to the Movable Housing as follows:

Reference Designator	HP Part Number	C	Qt.	DESCRIPTION
A21	08410-60136	9	1	MOTHERBOARD, MOVABLE HOUSING
A21C1	0160-2199	2	1	CAPACITOR-FXD 30PF +5% 300VDC MICA
A21C2	0160-4E31	3	5	CAPACITOR-FXL 4700PF +10% 100VDC CEP
A21C3	0160-2200	6	1	CAPACITOR-FXD 43PF +5% 300VDC MICA
A21C4	0160-4E31	3		CAPACITOR-FXD 4700PF +10% 100VDC CEP
A21C5	0160-4E31	3		CAPACITOR-FXD 4700PF +10% 100VDC CEP
A21C6	0160-4E31	3		CAPACITOR-FXD 4700PF +10% 100VDC CEP
A21C7	0140-0177	0	1	CAPACITOR-FXD 400PF +1% 300VDC MICA
A21C8	0160-4E31	3		CAPACITOR-FXD 4700PF +10% 100VDC CEP
A21L1	9140-0096	3	1	INDUCTOR RF-CH-HLD 2.2UH 10%
A21L2	9140-0114	4	4	INDUCTOR RF-CH-HLD 10UH 10% .166D .385L
A21L3	9140-0114	4		INDUCTOR RF-CH-HLD 10UH 10% .166D .385L
A21L4	9140-0114	4		INDUCTOR RF-CH-HLD 10UH 10% .166D .385L
A21L5	9140-0114	4		INDUCTOR RF-CH-HLD 10UH 10% .166D .385L
A21L6	9100-2230	5	1	INDUCTOR RF-CH-HLD 150NH 3% .166D .385L
A21F1	0757-0442	9	2	RESISTOR 10K 1% .125W F TC=0+101
A21F2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+100
A21XA4	1251-2035	9	6	CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A21XA5	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A21XA6	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A21XA7	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A21XA8	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS
A21XA9	1251-2035	9		CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS

Page 6-21, Table 6-3:

Delete the following components:

C4, C6, C8, C10, C12, C14, C16, C18, C20, C22, C32 through C38, and C40.

Page 6-22, Table 6-3:

Delete the following components:

L1 through L12, R6, R7, and XA4 through XA6.

Page 6-23, Table 6-3:

Delete the following components:

XA7 through XA9 and XA11 through XA16.

Change Fixed Connector Cover from HP Part Number 08410-00059 to 08410-00076, CD 8.

Change Movable Connector Cover from HP Part Number 08410-0011 to 08410-00077, CD 9.

Add under Miscellaneous Parts the following HP Part Numbers:

08410-20063; CD 5; QT 1; CASTING, FIXED

08410-20064; CD 6; QT 1; CASTING, MOVABLE

0360-0042; CD 4; QT 2; TERMINAL-SLDR LUG PL-MTG FOR-#6-SCR

0624-0077; CD 5; QT 116; SCREW-TPG 4-40 .312-IN-LG PAN-HD-POZI

2190-0017; CD 4; QT 8; WASHER-LK HLCL NO. 8 .168-IN-ID

2190-0124; CD 4; QT 9; WASHER-LK INTL T NO. 10 .195-IN-ID

2360-0331; CD 6; QT 4; SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI

2510-0103; CD 9; QT 8; SCREW-MACH 8-32 .375-IN-LG PAN-HD-POZI

2510-0048; CD 1; QT 2; SCREW-MACH 8-32 .438-IN-LG 82 DEG

CHANGE 6 (Cont'd)

Page 8-41, Figure 8-36:

Change XA12 to A20XA12 in two places.

Change XA14 to A20XA14 in two places.

Page 8-43, Figure 8-39:

Change XA16 to A20XA16 in four places.

Page 8-45, Figure 8-42:

Change L7 to A20L4.

Change C16 to A20C6.

Change L8 to A20L3.

Change C18 to A20C5.

Change XA13 to A20XA13 in two places.

Page 8-47, Figure 8-45:

Change XA15 to A20XA15 in two places.

Page 8-49, Figure 8-48:

Change C37 to A20C9.

Change C38 to A20C10.

Change XA11 to A20XA11 in two places.

Page 8-51, Figure 8-51:

Change XA4 to A21XA4 in two places.

Page 8-53, Figure 8-54:

Change C20 to A21C4.

Change C22 to A21C5.

Change C33 to A21C1.

Change C34 to A21C3.

Change L12 to A21L1.

Change XA5 to A21XA5 in five places.

Change XA6 to A21XA6 in two places.

Page 8-55, Figure 8-57:

Change C32 to A21C7.

Change L11 to A21L6.

Change XA7 to A21XA7 in five places.

Change XA8 to A21XA8 in four places.

Page 8-59, Figure 8-60:

Change C4 to A21C2.

Change C6 to A20C7.

Change C8 to A20C4.

Change C10 to A21C6.

Change C12 to A20C8.

Change C14 to A20C3.

Change L1 to LA21L2.

Change L2 to LA20L6.

Change L3 to LA20L2.

Change L4 to A21L5.

Change L5 to A20L5.

Change L6 to A20L1.

CHANGE 6 (Cont'd)

Page 8-63, Figure 8-64:

- Change C40 to A21C8.
- Change R6 to A21R1.
- Change R7 to A21R2.
- Change XA9 to A21XA9 in two places.

Page 8-69, Figure 8-69

- Change C40 to A21C8.
- Change R6 to A21R1.
- Change R7 to A21R2.
- Change XA9 to A21XA9.
- Change XA7-15 to A21XA7-15.
- Change XA8-14 to A21XA8-14.
- Change XA8-6 to A21XA8-6.
- Change XA8-1 to A21XA8-1.
- Change XA7-10 to A21XA7-10.
- Change XA7-1 to A21XA7-1.
- Change XA5-1 to A21XA5-1.
- Change XA7-13 to A21XA7-13.

Add additional pages after Page 8-69 containing Figures 8-70 through 8-73 (CHANGE 6) supplied in this document.

CHANGE 7

Page 6-22, Table 6-3:

- Add W17, HP Part Number 8120-0052 CD 6 COAXIAL CABLE.
- Add W17MPI, HP Part Number 0360-0053, GROUND LUG.
- Add W18, HP Part Number 8120-0052, CD 6, COAXIAL CABLE.
- Add W18MPI, HP Part Number 0360-0053, CD 7, GROUND LUG.

Page 8-41, Figure 8-36:

- Add "W18" on coaxial cable line between J7 and A20 XA14 pin 13.
- Add "W17" on coaxial cable line between J8 and A20XA12 pin 13.

CHANGE 8

Page 5-2, Table 5-1:

Under 8411A, add A7R23, VTO upper frequency limit, Figure 8-32, Paragraph 5-19.

Page 5-3, Table 5-2:

Under 8411A, add A7R24, VTO frequency limit, Range of values = 100 to 2, 610 ohms, Figure 8-32, Paragraph 5-19.

Page 5-22, Paragraph 5-19:

At the end of step f, add the following:

"If the range of A6R16 is not sufficient, set A6R16 to the highest frequency, then adjust A7R23 for 155 MHz. If this frequency still cannot be obtained, select the value of A7R24 in the range of 100 to 2, 610 ohms."

Page 6-30, Table 6-4:

- Add A7R23, HP Part Number 2100-1986, CD 9, Resistor-TRIMMER 1K 10% 1T.
- Add A7R24*, HP Part Number 0757-0401, Resistor 100Ω, 1% .05W (Factory Selected Value).
- Delete A7Z2.

CHANGE 8 (Cont'd)

Page 8-39, Figure 8-32:

Change the drawing for A7 to the one contained in this change sheet.

Page 8-39, Figure 8-33:

Delete A7Z2 and add in its place two resistors in series, A7R23, variable 1000 ohm on left side, and A7R24*, fixed 100 ohm on right side (connected to base of Q1).

CHANGE 9

Page 6-18, Table 6-3:

Change A19 to HP Part Number 08410-60156, CD 1.

Page 6-20, Table 6-3:

Change A19S1 to HP Part Number 3101-2419, CD 8, SWITCH-SL DPDT SUBMIN .5A 125 VAC PC.

Page 8-67/8-68, Figure 8-68:

In the upper left-hand corner of the schematic, change A19 Frequency Range Assembly to HP Part Number 08410-60156.

CHANGE 10

Page 6-29, Table 6-4:

Change A5 to HP Part Number 08411-60049, CD 2.

Change A5C3, and A5C5 through A5C12 to HP Part Number 0160-4832, CD 4, CAPACITOR-FXD .01 UF \pm 10% 100VDC CER.

Change A5C13 to HP Part Number 0121-0459, CD 1, CAPACITOR-V TRMR-CER 8-50 PF 350V PC-MTG.

Page 8-37, Figure 8-29:

Replace the 8411-A5 Parts Location diagram with the one supplied in this change sheet.

Page 8-37, Figure 8-30:

In the upper left-hand corner of the A5 schematic, change A5 Test Preamplifier Assembly to HP Part Number 08411-60049.

CHANGE 11

Page 6-5, Table 6-3:

Add A1A1 HP Part Number 08410-60160, CD 7, Attenuator assembly: includes A2 and A3 attenuator assemblies, and the associated cables and brackets.

Change the A2 Cable Assembly, Amplitude Vernier (out) with HP Part Number 08410-6027 to HP Part Number 08410-60167, CD 4.

Add A2A1 HP Part Number 08410-60161, CD 8, board assembly 0-9 dB attenuator.

Change A2R1 & R4 to HP Part Number 0699-1555, CD 3, Resistor 238.4 .1% .05W F TC=0 \pm 10.

Change A2R2, R3, R5, R6 to HP Part Number 0699-1560, CD 0, Resistor 2.209K .1% .05W F TC=0 \pm 10.

Change A2R7, R10 to HP Part Number 0699-1554, CD 2, Resistor 116.1 .1% .05W F TC=0 \pm 10.

Change A2R8, R9, R11, R12 to HP Part Number 0699-1562, CD 2, Resistor 4.362K .1% .05W F TC=0 \pm 10.

Change A2R13 to HP Part Number 0699-1553, CD 1, Resistor 57.69 .1% .05W F TC=0 \pm 10.

Change A2R14, R15 to HP Part Number 0699-1563, CD 3, Resistor 8.695K .1% .05W F TC=0 \pm 10.

Change A2S1 to HP Part Number 3100-1953, CD 1.

Change A3 assembly to HP Part Number 08410-60164, CD 1.

Add A3A1 HP Part Number 08410-60162, CD 9, Bd Assy 0-60 dB attenuator.

Add HP Part Number 08410-60168, CD 5, Cable Assembly, Switch Connect.

Add HP Part Number 08410-60166, CD 3, Cable Assembly, Attenuator.

Change A3C1 to HP Part Number 0160-4801, CD 7, CAPACITOR-FXD 100pf \pm 5% 100VDC CER.

CHANGE 11 (Cont'd)

Page 6-5, Table 6-3:

- Change A3L1 to HP Part Number 9140-0981, CD 3, COIL 2000 uH 5% Q= 55,
- Change A3R1, R7, R13 to HP Part Number 0699-1561, CD 1, Resistor 2.475K .1% .05W F TC=0±10,
- Change A3R2, R3, R8, R9, R14, R15 to HP Part Number 0699-1557, CD 5, Resistor 611.1 .1% .05W F TC=0±10,
- Change A3R4, R10, R16 to HP Part Number 0699-1558, CD 6, Resistor 711.5 .1% .05W F TC=0±10,
- Change A3R5, R6, R11, R12, R17, R18 to HP Part Number 0699-1559, CD 6, Resistor 962.5 .1% .05W F TC=0±10,
- Change A3R19 to HP Part Number 0699-1556, CD 4, Resistor 500 .1% .05W F TC=0±10,
- Change A3S1 to HP Part Number 3100-1953, CD 1.

Page 6-22, Table 6-3:

- Add MP1 HP Part Number 08410-0014, CD 1, front mounting bracket.
- Add MP2 HP Part Number 08410-00082, CD 6, rear mounting bracket.
- Change W5 to HP Part Number 08410-60165, CD 2,
- Delete W10 Cable Assembly, Attenuator.

Page 8-70:

- Add Figures 8-74 and 8-75 (CHANGE 11) supplied in this Change Supplement.

CHANGE 12

Page 6-6, Table 6-3:

- Change the A5 assembly to HP P/N 08410-60175, CD 4. (Recommended Replacement)
- Change A5C4 to HP P/N 0160-2930, CD 9,
- Change A5C5, C7, C8, C9, C14, C15 to HP P/N 0150-0093, CD 0.

Page 6-7, Table 6-3:

- Delete A5CR9 and CR10.
- Change A5L3 to HP P/N 9100-3315, CD 9, INDUCTOR RF-CH-MLD 820NH 5% .166DX.385LG. (Recommended Replacement)
- Change A5Q1 & Q2 to HP P/N 1854-0475, CD 5, QTY 2, TRANSISTOR DUAL NPN SI TO-18 PD= 750MW.
- Change A5R3* and R6* to HP P/N 0757-0442, CD 9, RESISTOR 10K 1% .125W F TC=0±100.

Page 8-53

- Replace the A5 Parts Location Diagram with the one supplied in this document.
- Replace the A5 Schematic Diagram Emitter Followers Q1 and Q2 with the partial diagrams supplied in this document

CHANGE 13

Page 6-15, Table 6-3:

- Change the A15 assembly to HP Part Number 08410-60155, CD 0 (Recommended Replacement).

Page 6-16, Table 6-3:

- Add A15R39, HP Part Number 0698-0084, CD 9, Resistor 2.15K 1% .125W F TC = 0±100.

Page 8-47, Figure 8-44:

- Replace the A15 Parts Location Diagram with the one supplied in this document.

Page 8-47, Figure 8-45:

- Change the schematic, Figure 8-45, as shown in the partial Figure 8-45, supplied in this document.

CHANGE 14

Page 6-11, Table 6-3:

Change the A10 assembly to HP Part Number 08410-60169, CD 6 (Recommended Replacement).

Delete A10A1 (HP Part Number 08410-6050) and all parts for the A10 A1 assembly on Page 6-11 and Page 6-12.

Replace the A10 and A10A1 parts list with the one provided below:

Ref. Desig.	HP Part No.	CD	Qty	Description
C1-2	0180-2603	5	2	CAPACITOR-FXD 7200UF + 75-10% 50VDC AL
C3	0180-2292	8	1	CAPACITOR-FXD 3900UF + 75-10% 50VDC AL
C4-7	0180-2811	7	4	CAPACITOR-FXD 10UF ± 20% 35VDC TA
C8	0180-2697	7	1	CAPACITOR-FXD 10UF ± 10% 25VDC TA
C9	0180-2661	5	1	CAPACITOR-FXD 1UF ± 10% 50VDC TA
C10-11	0180-0089	7	2	CAPACITOR-FXD 10UF + 50-10% 150VDC AL
CR1-8	1901-0026	3	8	DIODE-PWR RECT 200V 750MA DO-29
F1	2110-0332	8	1	FUSE 3A 125V NTD .25X.27
Q1-2	1854-0477	7	2	TRANSISTOR NPN 2N2222A SI TO-18 PD 500MW
Q3-6	1853-0281	9	4	TRANSISTOR PNP 2N2907A SI TO-18 PD=400MW
R1-2	0698-3447	4	2	RESISTOR 422 1% .125W F TC=0±100
R3	0698-3437	2	1	RESISTOR 133 1% .125W F TC=0±100
▶ R4-5	0698-7401	8	2	RESISTOR 1.71K 1% .125W F TC=0±100
R6	0757-0280	3	1	RESISTOR 1K 1% .125W F TC=0±100
R7-8	2100-3502	9	2	RESISTOR-TRMR 200 10% C TOP-ADJ 1/TRN
R9	0698-3435	0	1	RESISTOR 38.3 1% .125W F TC=0±100
R10-11	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0±100
R12	0698-0085	0	1	RESISTOR 2.61K 1% .125W F TC=0±100
R13-15	0698-3155	1	3	RESISTOR 4.64K 1% .125W F TC=0±100
TPI-3	1251-0600	0	3	CONNECTOR-SGL CONT P/N 1.14-MM-BSC-S2-SQ
U1	1826-0423	4	1	IC V RGLTR-ADJ-POS 1.2/37V TO-3 PKG
U2-3	1826-0523	5	2	IC V RGLTR-ADJ NEG 1.2/37V TO-3 PKG
U4-5	1826-1288	1	2	IC V RGLTR-V-REF-FXD 2.462/2.538V TO-46

Page 8-57/8-58:

Delete the circuit description for the A10 power supply.

Page 8-59, Figure 8-59:

Replace the parts location diagram with the one supplied in this document.

Page 8-59/8-61, Figure 8-60 and Figure 8-62:

Replace the A10 and A10A1 +20V, -20V, and -11V power supply schematics with the ones supplied in this document.

CHANGE 15**Page 6-20, Table 6-3:**

Add the following:

A22, 08410-60171, CD 0, QTY 1, BOARD ASSEMBLY-MOTHERBOARD, 28480, 08410-60171.
 A22C1, 0160-0939, CD 4 QTY 1, CAPACITOR-FXD 430PF \pm 5% 300VDC MICA, 28480, 0160-0939.
 A22CR1, 1901-0050, CD 3, QTY 1, DIODE-SWITCHING 80V 200MA 2NS DO-35, 02237, FDH 6308.
 A22J1, 1251-5905, CD 8, QTY 1, CONN-POST TYPE .100-PIN-SPCG 24-CONT, 03206, 65611-124.
 A22J2, 1251-0251, CD 7, QTY 1, CONNECTOR 26-PIN FCIRC STANDARD, 04486, M53102A28-125.
 A22J3, J4, J5, 1251-1626, CD 5, QTY 3, CONNECTOR-PC EDGE 12-CONT/ROW 2-ROWS, 28480, 1251-1626.
 A22L1, 9100-2249, CD 6, QTY 1, COIL-MLD 150 NH 10% Q=34 .095DX, 25LG-NOM, 28480, 9100-2249.
 A22MP1, 0380-0066, CD 4, QTY 4, SPACER-RVT-ON .25-IN-LG .152-IN-ID, 041461.

Page 6-21, Table 6-3:

Delete C46.

Page 6-22, Table 6-3:

Delete L13

Page 6-23, Table 6-3:

Delete XA17, XA18, XA19.

Under Miscellaneous Parts, add the following:

08410-00083, CD 7, QTY 1 DECK.
 08410-60172, CD 1, QTY 1, CABLE ASSEMBLY SEARCH SIG. (GREY).
 08410-60173, CD 2, WIRING HRNS: SIG.
 08410-60174, CD 3, CABLE ASSEMBLY (WHITE).

Page 8-65, Figure 8-66:

Change all references to XA18 to A22XA18.

Change all references to XA19 to A22XA19

Page 8-68, Figure 8-68:

Change all references to XA18 to A22XA18.

Change all references to XA19 to A22XA19

Change C46 to A22C1.

Change L13 to A22L1.

Page 8-69/8-70, Figure 8-69:

Change the upper left corner of the schematic as shown in P/O Figure 8-69. *Signal Wiring Diagram (CHANGE 13)* supplied in this document.

Add the Figure 8-76. *A22 Assembly Parts Location (CHANGE 13)* supplied in this document.

A20

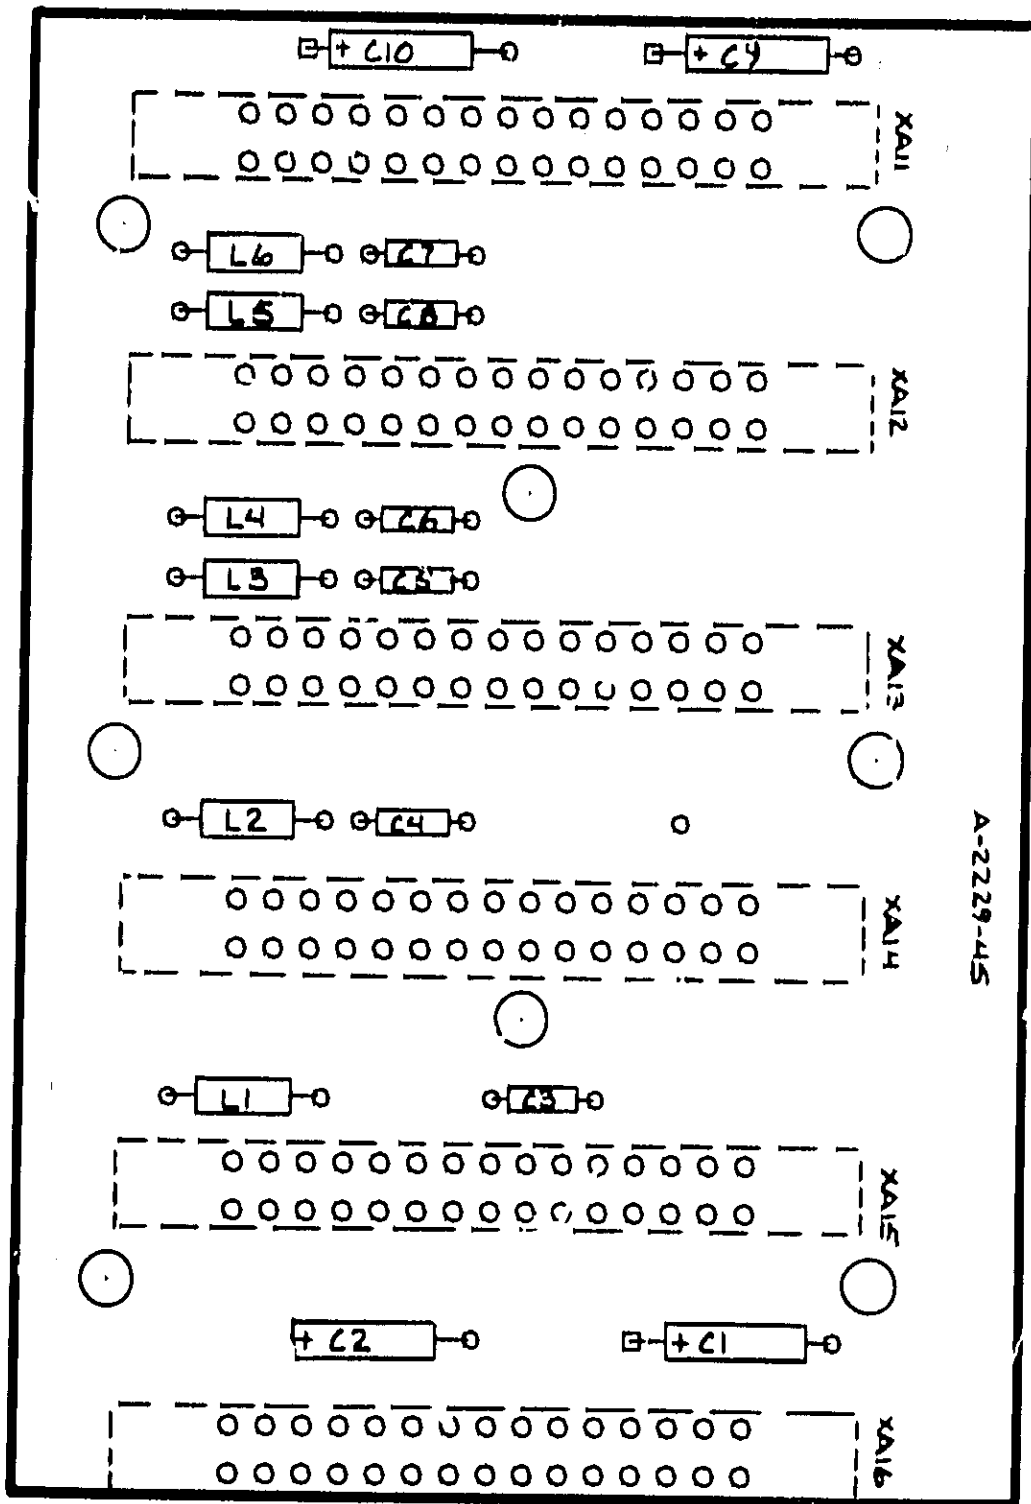


Figure 8-70. 8410C-A20 Parts Location (CHANGE 6)

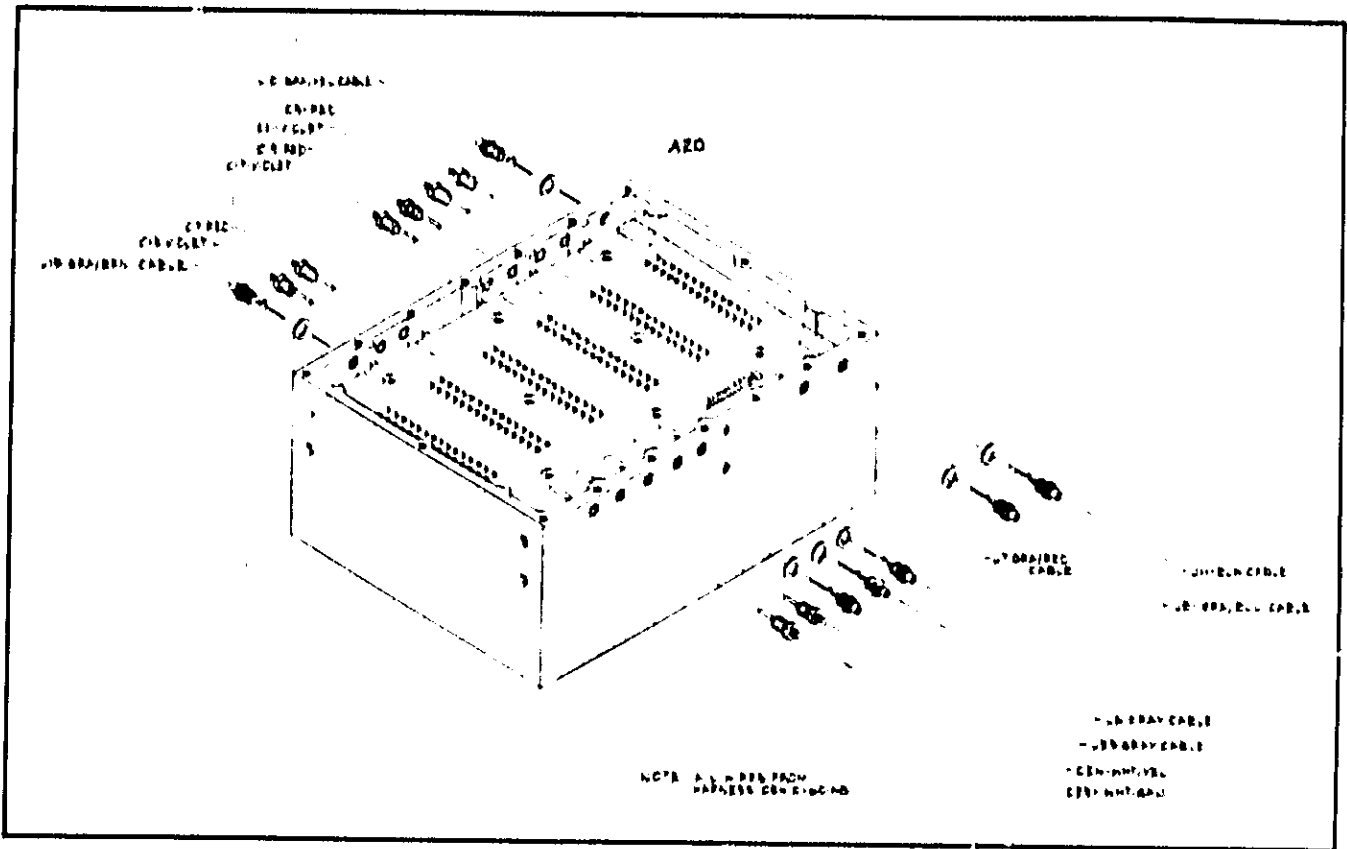


Figure 8-71. Wiring Connections to Fixed Housing (CHANGE 6)

A21

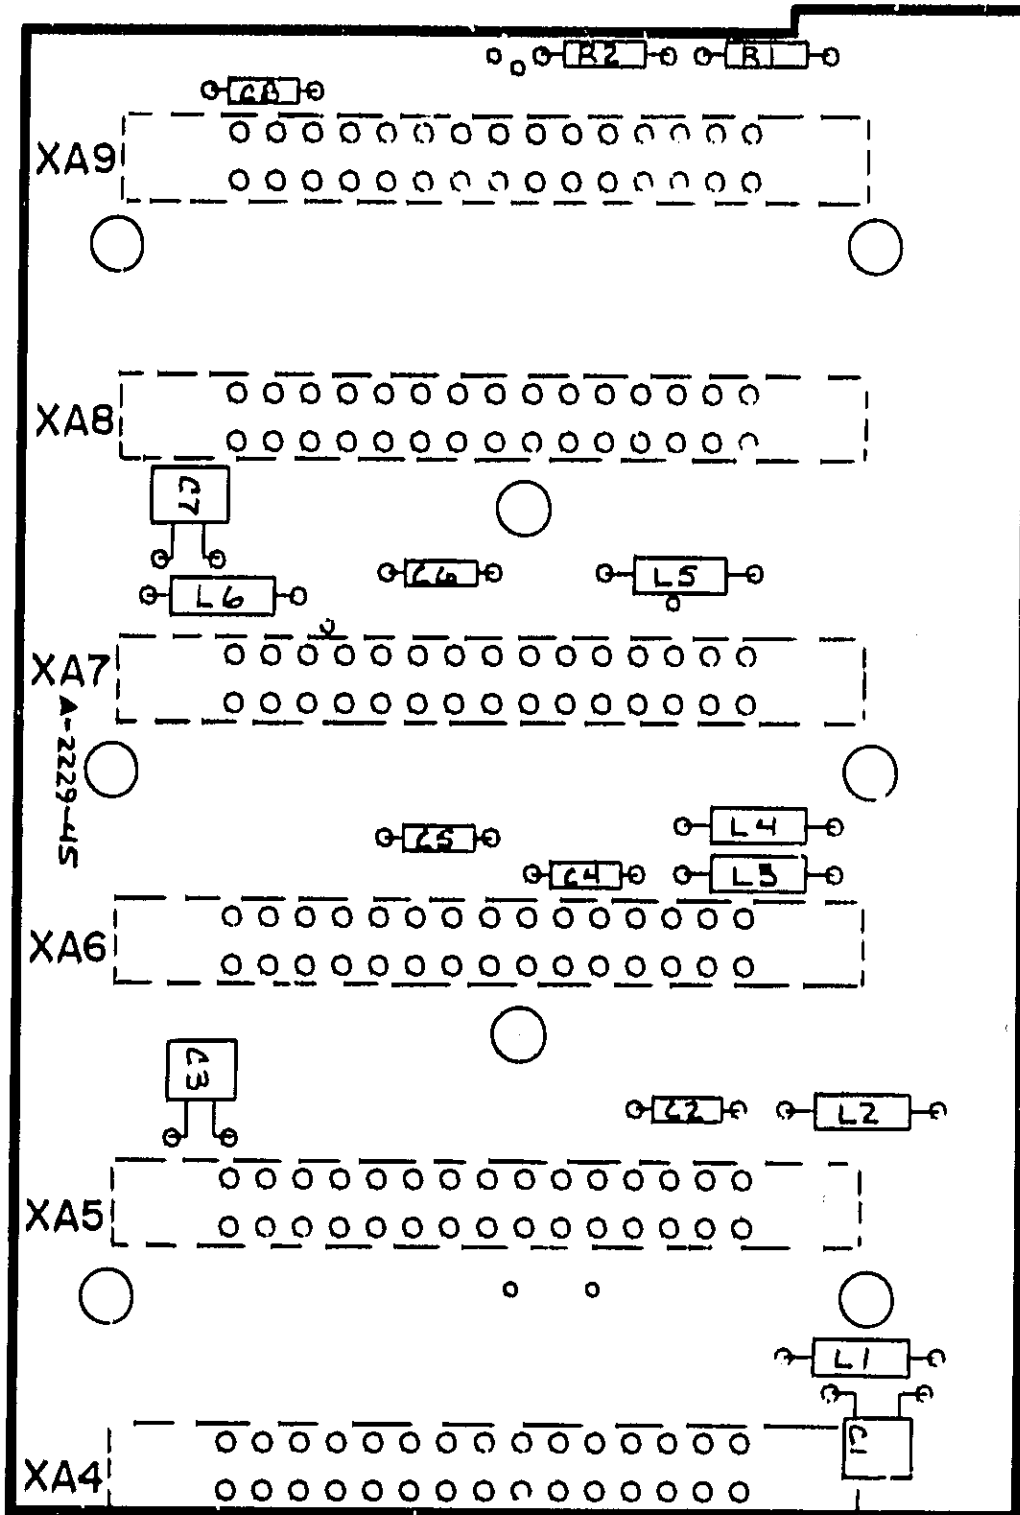


Figure 8-72. 8410-A21 Parts Location (CHANGE 6)

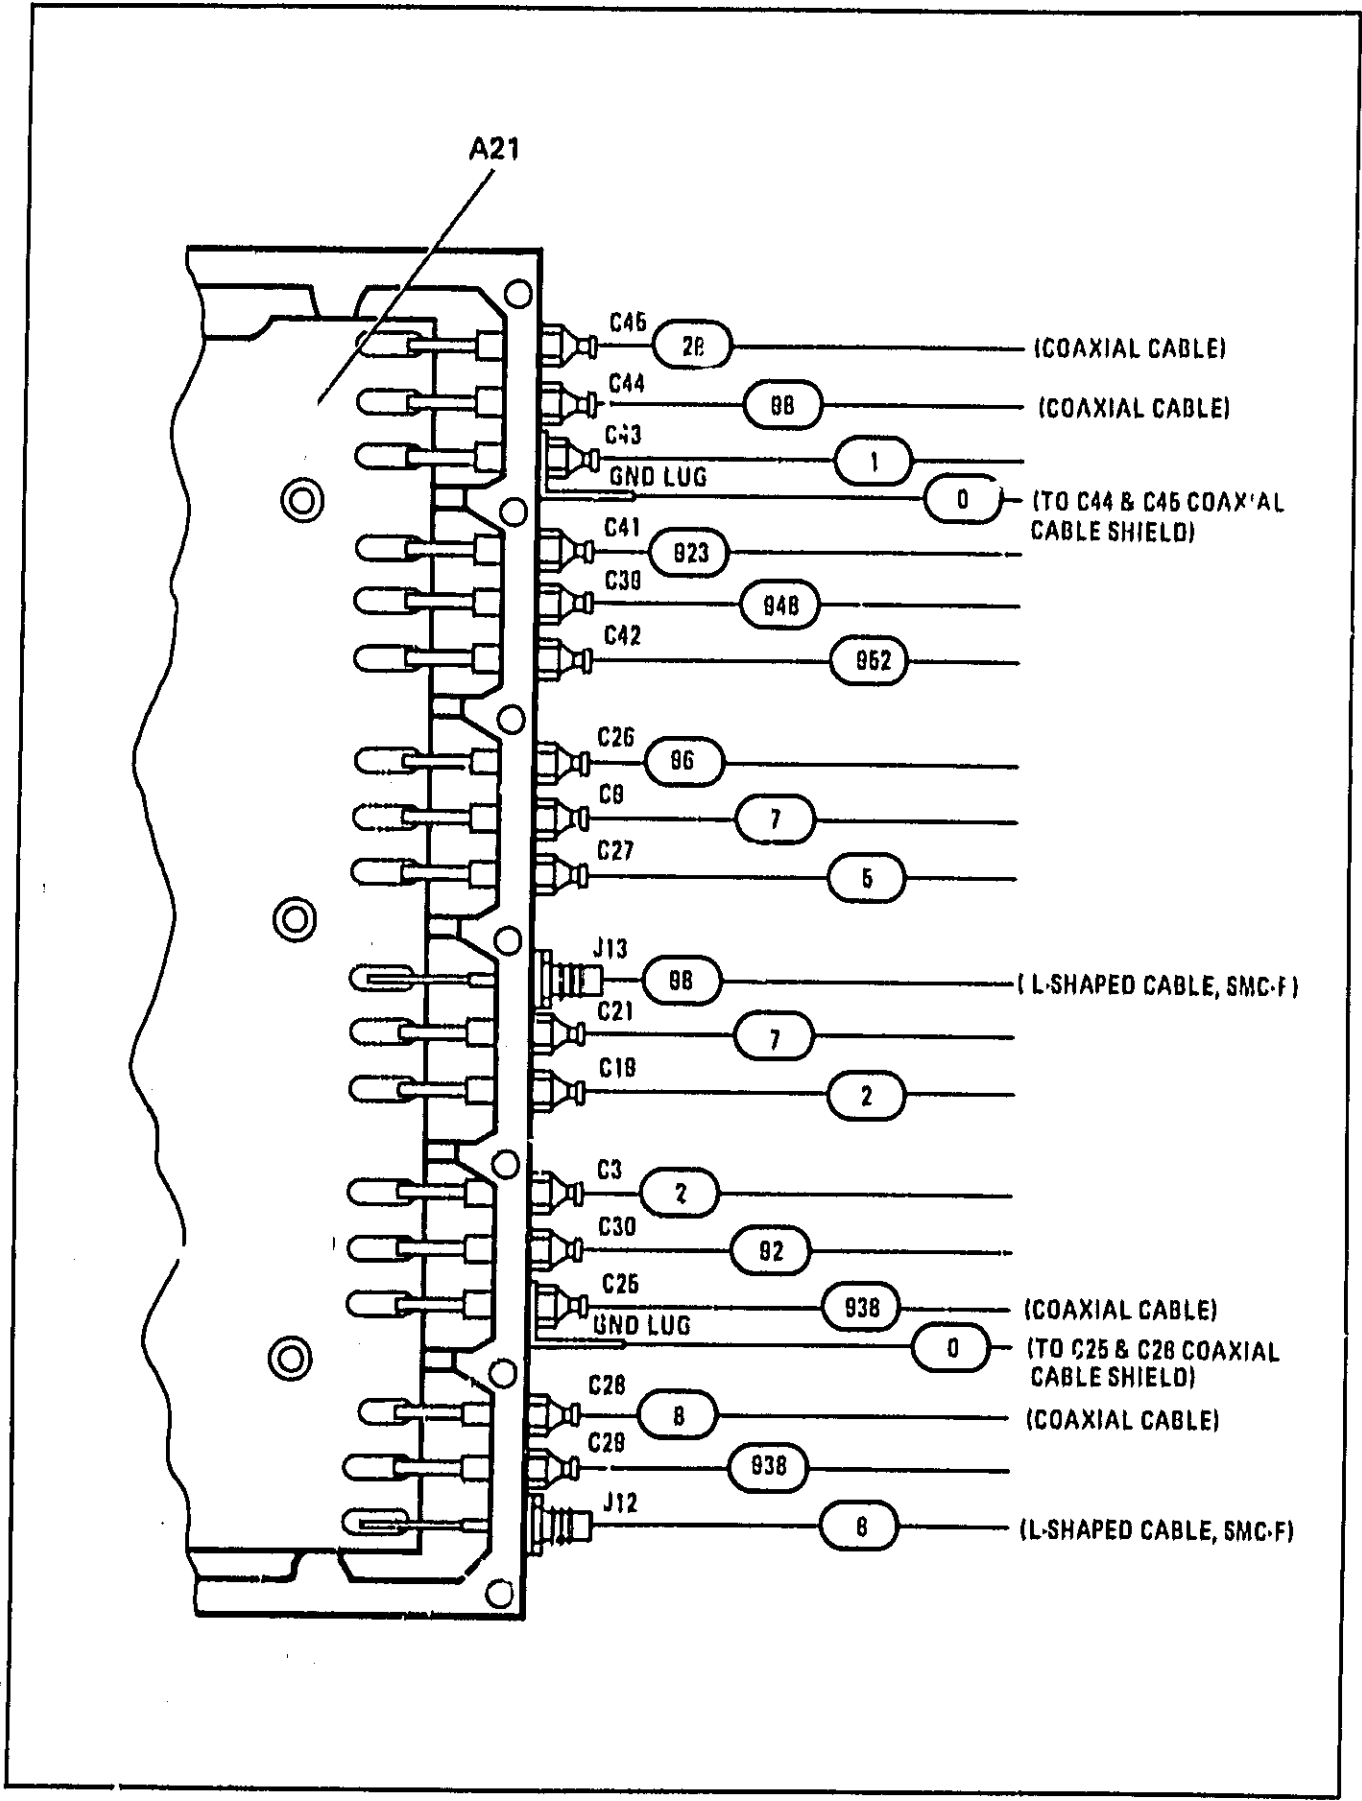
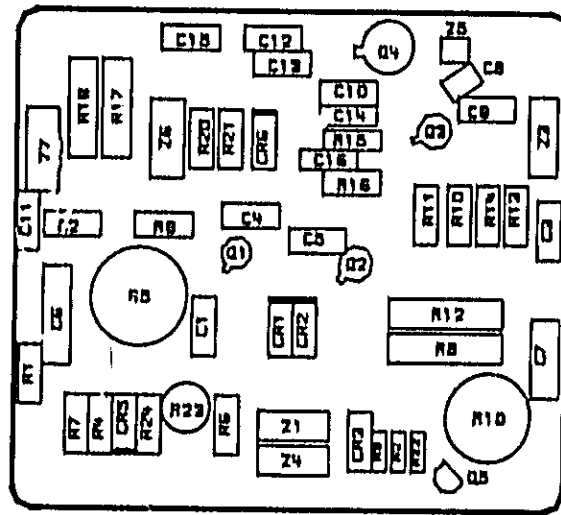


Figure 8-73. Wiring Connections to Movable Housing (CHANGE 6)



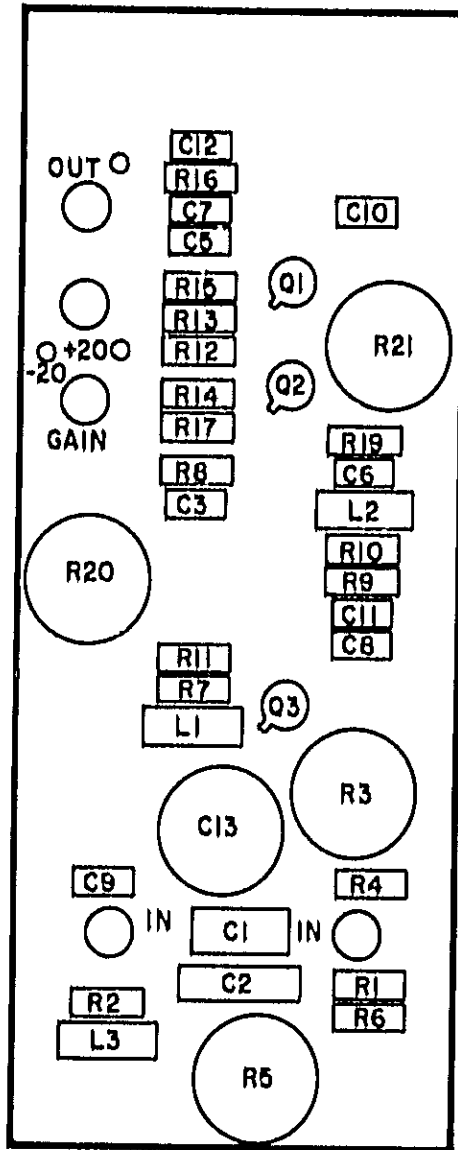


Figure 8-29. 8411-A5 Parts Location (CHANGE 10)

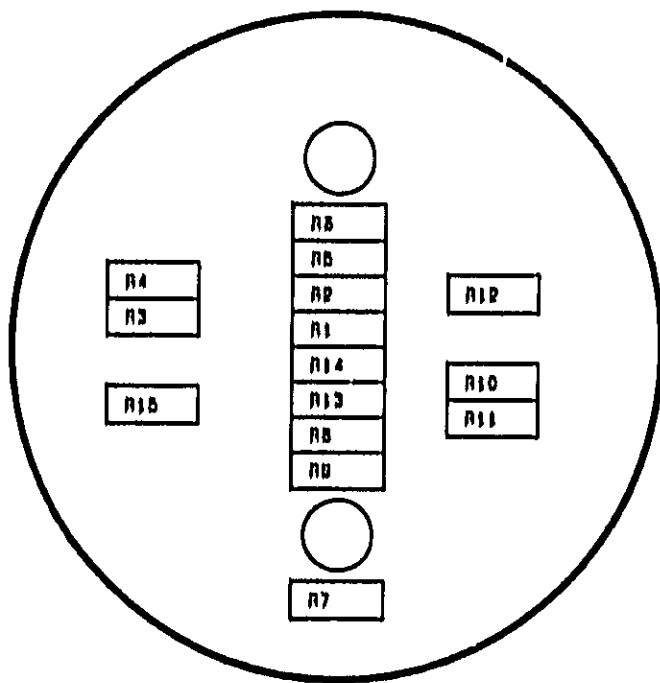


Figure 8-74. A2A1 0-9 dB Attenuator, Parts Location (CHANGE 11)

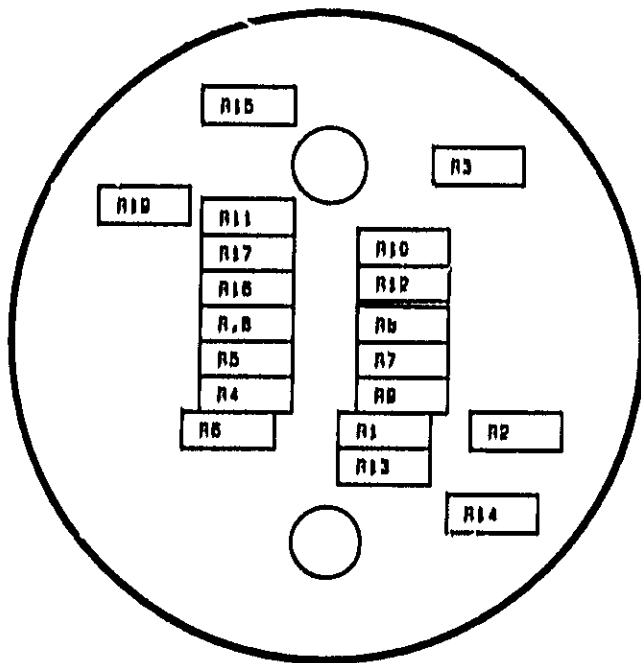


Figure 8-75. A3A1 0-60 dB Attenuator, Parts Location (CHANGE 11)

A15


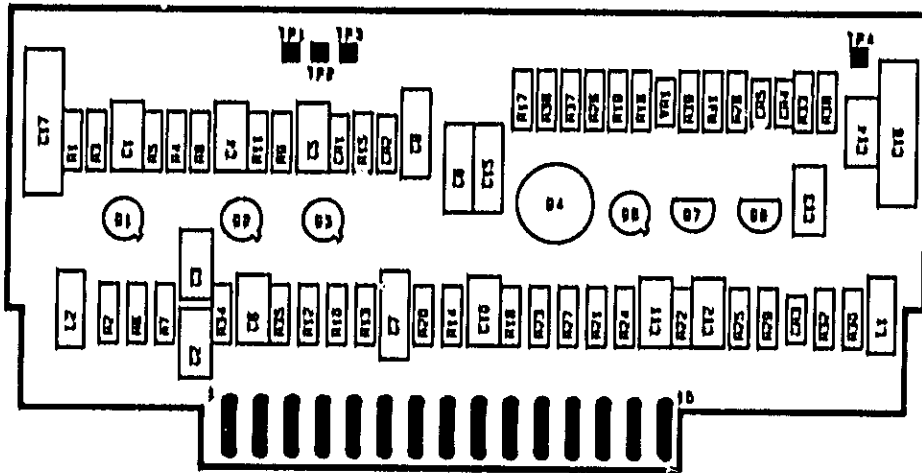


Figure 8-44. HP 8410B - A15 Parts Locations (CHANGE 13)

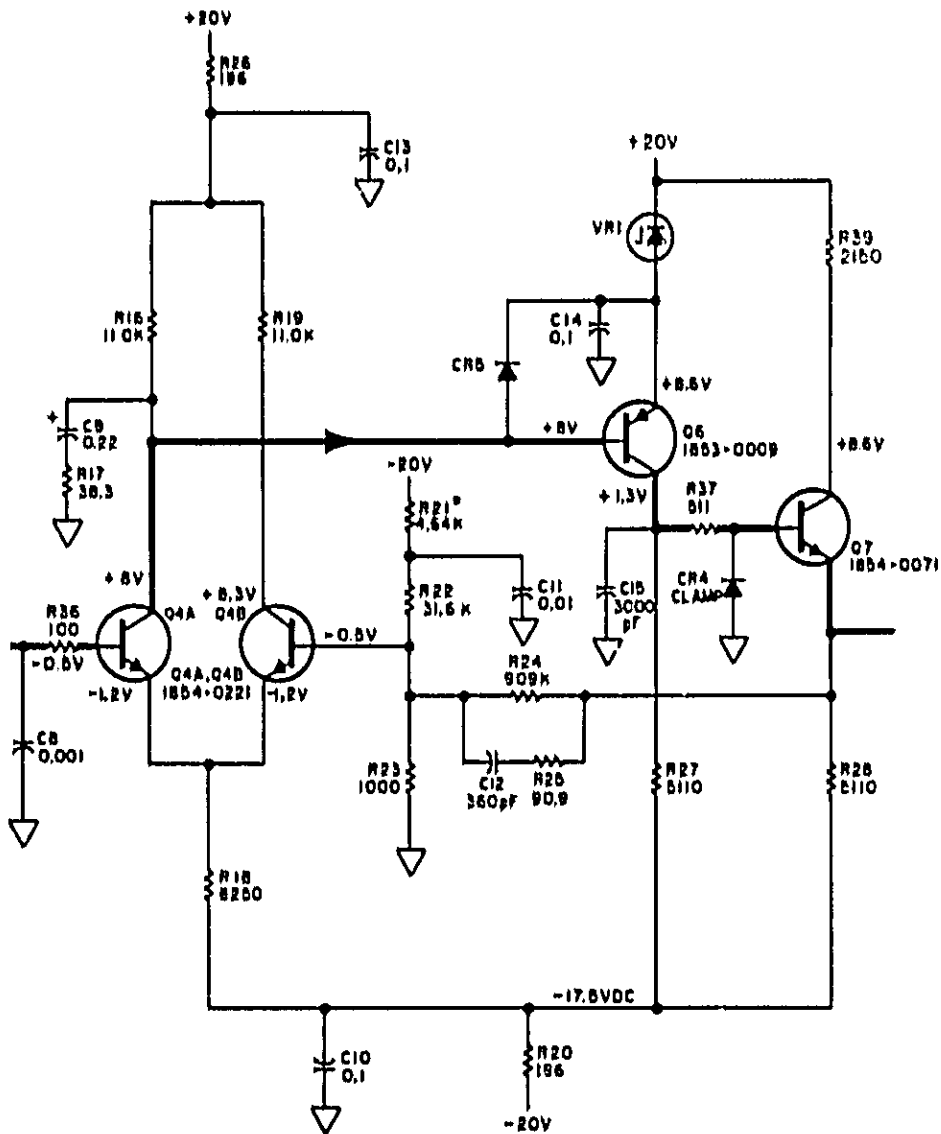

P/O Figure 8-45. 8410B - A15 Schematic Diagram (CHANGE 13)

A10

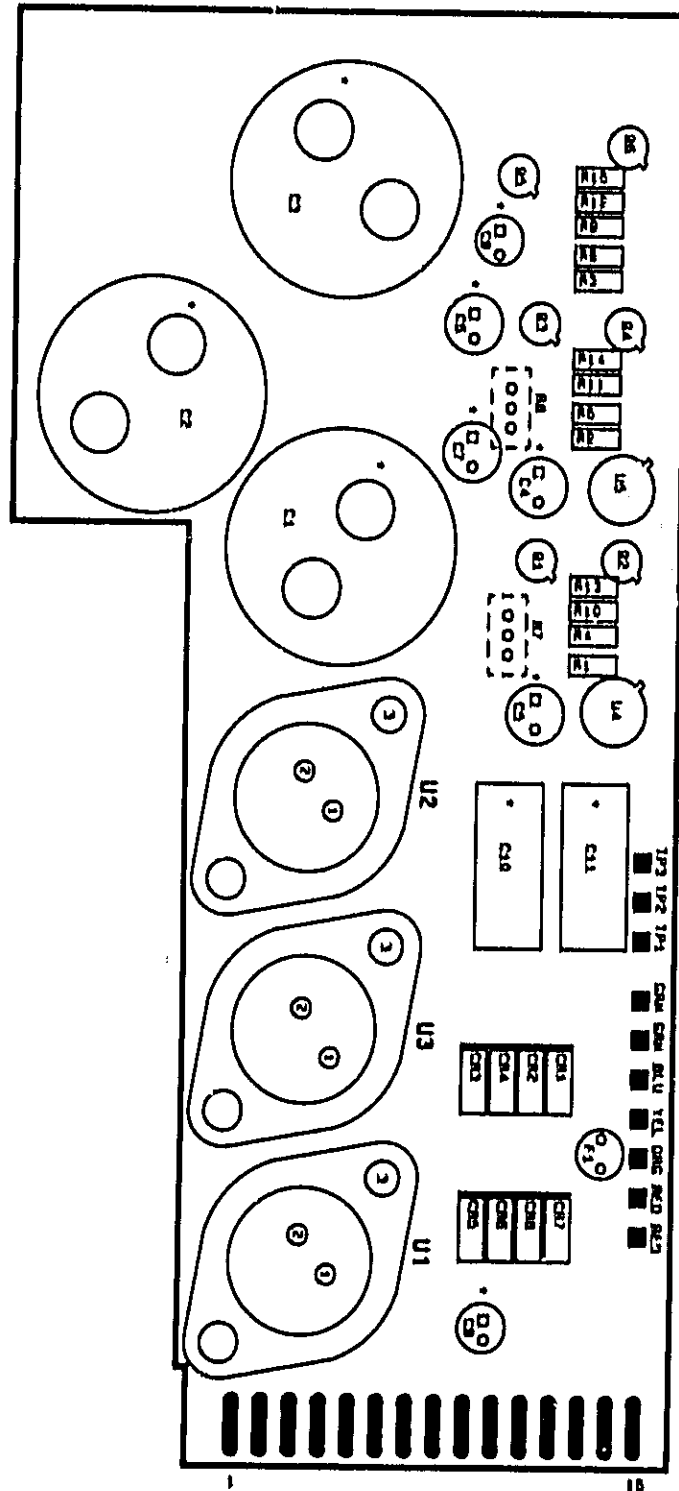


Figure 8-59. HP 8410B - A10 Parts Locations (CHANGE 14)

A10 POWER SUPPLY
08410-60169


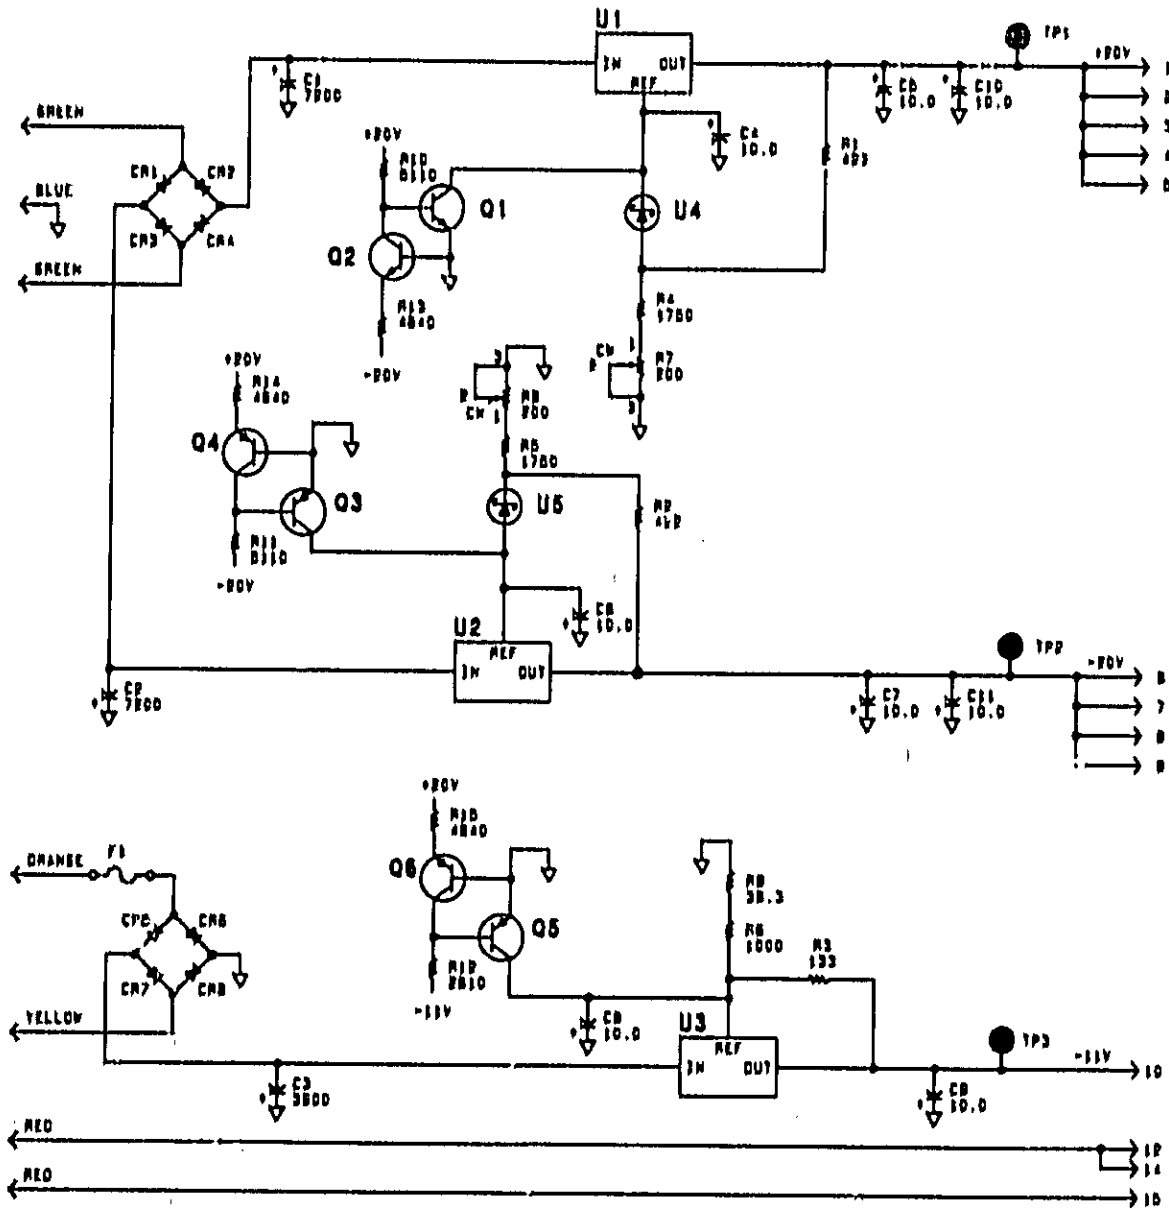


Figure 8-60. 8410B Power Supply Schematic (CHANGE 14)

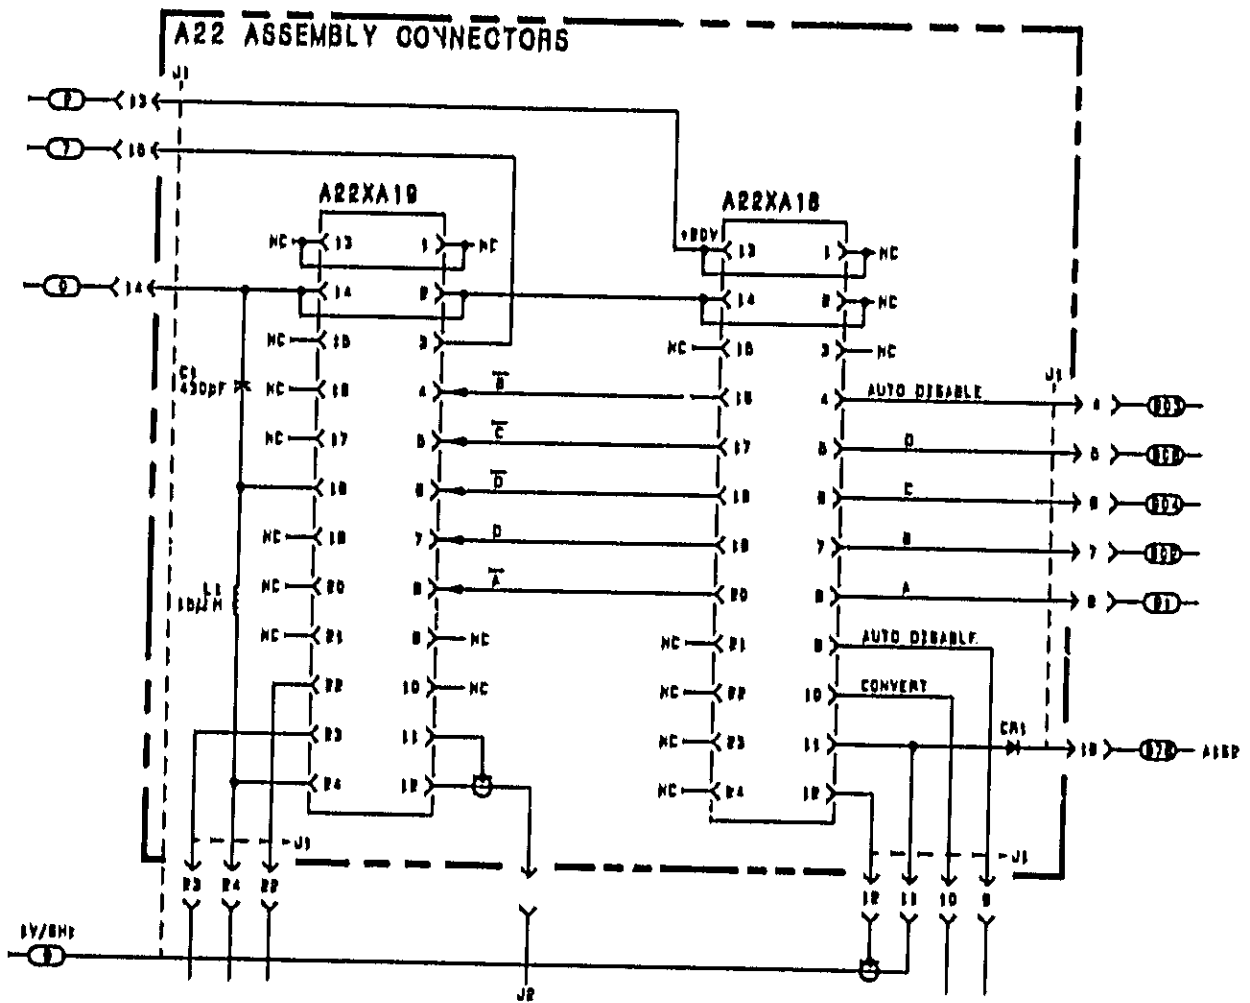

P/O Figure 8-69. Signal Wiring Diagram (CHANGE 15)

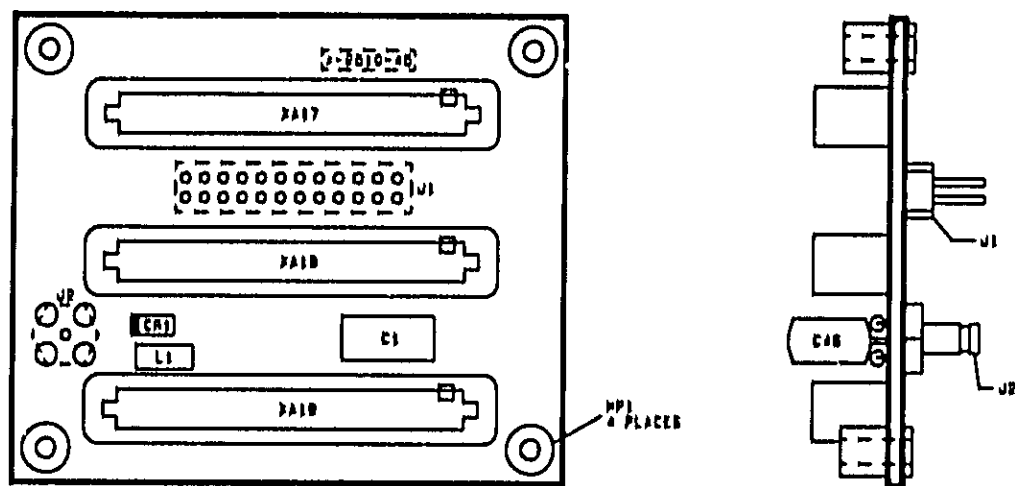


Figure 8-76. A22 Motherboard Components Location Diagram (CHANGE 15)

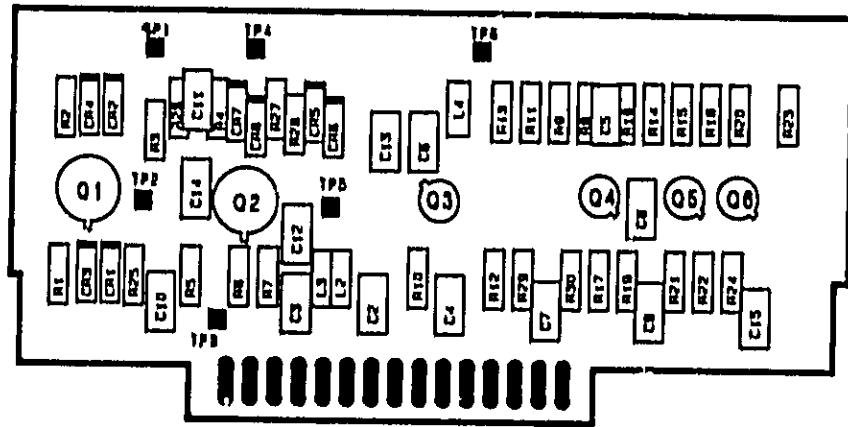


Figure 8-53. 8410B-A5 and A6 Parts Location (CHANGE 12)

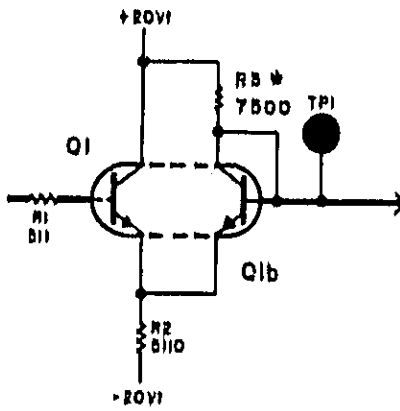
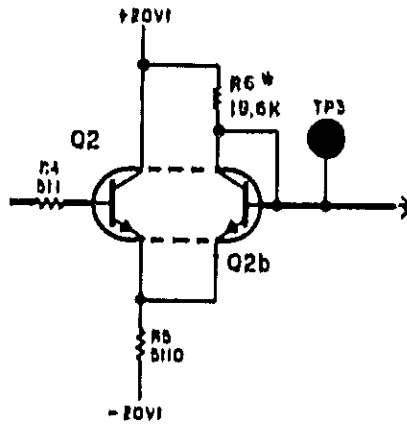


Figure 8-54. 8410B-A5 and A6 Schematic Diagram (CHANGE 12)