

Errata

Title & Document Type: 8601A Generator Sweeper Operating and Service Manual

Manual Part Number: 08601-90017

Revision Date: April 1980

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.

GENERATOR SWEEPER

8601A



**HEWLETT
PACKARD**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

8601A GENERATOR/SWEEPER

Serial Prefix 1848

This manual applies directly to HP Model 8601A Generator/Sweepers having serial prefix number 1848.

Serial Prefixes Not Listed

For serial prefixes above 1848, a "Manual Changes" sheet is included with this manual. For serial prefixes below 1848, see Section VII, Manual Changes.

Options

For options available see Section I of this manual.

Copyright HEWLETT-PACKARD COMPANY 1969
1400 FOUNTAIN GROVE PARKWAY, SANTA ROSA, CA. 95404, U.S.A.

Manual Part No. 08601-90017
Microfiche Part No. 08601-90018

Printed: APRIL 1980



**HEWLETT
PACKARD**

SAFETY CONSIDERATIONS

Safety Symbols



Instruction manual symbol: the apparatus will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the apparatus against damage.



Indicates dangerous voltages.



Earth terminal (sometimes used in manual to indicate circuit connected to grounded chassis).

WARNING

The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a **WARNING** sign until the indicated conditions are fully understood and met.

CAUTION

The **CAUTION** sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the equipment. Do not proceed beyond a **CAUTION** sign until the indicated conditions are fully understood and met.

Operation

CAUTION

BEFORE APPLYING POWER make sure the instrument's ac input is set for the available ac line voltage, that the correct fuse is installed, and that all normal safety precautions have been taken.

Service

The information, cautions, and warnings in this manual must be followed to ensure safe operation and to keep the instrument safe. **SERVICE AND ADJUSTMENTS SHOULD BE PERFORMED ONLY BY QUALIFIED SERVICE PERSONNEL.**

Adjustment or repair of the opened instrument with the

ac power connected should be avoided as much as possible and, when unavoidable, should be performed only by a skilled person who knows the hazard involved.

Capacitors inside the instrument may still be charged even though the instrument has been disconnected from its source of supply.

Make sure only fuses of the required current rating and type (normal blow, time delay, etc.) are used for replacement. Fuse requirements are indicated on the instrument's rear panel. Do not use repaired fuses or short-circuit fuse holders.

Whenever it is likely that the protection has been impaired, make the instrument inoperative and secure it against any unintended operation.

WARNING

If this instrument is to be energized through an auto-transformer (for voltage reduction), make sure the common terminal is connected to the earthed pole of the power source.

BEFORE SWITCHING ON THE INSTRUMENT, the protective earth terminal of the instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with protective earth contact. The protection action must not be negated by using an extension cord (power cable) without a protective grounding conductor. Grounding one conductor of a two-conductor outlet is not sufficient protection.

Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal is likely to make this instrument dangerous. Intentional interruption of the earth ground is prohibited. Whenever it is likely that the protection has been impaired, the instrument must be secured against any unintended operation.

Servicing this instrument often requires that you work with the instrument's protective covers removed and with ac power connected. Be very careful; the energy at many points in the instrument may, if contacted, cause personal injury.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	4-17. Output Level	4-21
1-1. Introduction	1-1	4-18. Harmonics and Spurious Signals	4-22
1-3. Instruments Covered by Manual	1-1		
1-6. Description	1-1	V ADJUSTMENTS	5-1
1-10. Options Available	1-1	5-1. Introduction	5-1
1-19. Recommended Test Equipment	1-2	5-3. Equipment Required	5-1
		5-5. Factory Selected Components	5-1
II INSTALLATION	2-1	5-7. Power Supply Adjustment	5-4
2-1. Initial Inspection	2-1	5-8. Crystal Oscillator Adjustment	5-4
2-2. Mechanical Check	2-1	5-9. VTO Adjustment	5-5
2-4. Electrical Check	2-1	5-10. Loop Amplifier Adjustment	5-6
2-6. Claims for Damage	2-1	5-11. Discriminator and DC Amplifier Adjustments	5-6
2-8. Preparation for Use	2-1	5-12. ALC Balance Adjustment	5-7
2-9. Power Requirements	2-1	5-13. Modulation Rate Adjustment	5-9
2-11. 115/230 Volt Operation	2-1	5-14. FM Adjustment	5-9
2-13. Three-Conductor Power Cable	2-1	5-15. AM Adjustment	5-11
2-15. Operating Environment	2-1	5-16. Meter Adjustment	5-12
2-17. Bench Operation	2-1	5-17. Buffer Adjustment	5-13
2-19. Repackaging for Shipment	2-1	5-18. Dwell Time Adjustment	5-14
2-20. Original Packing Materials	2-1	5-19. Symmetrical Sweep Center Frequency Adjustment	5-14
2-22. Other Packing Materials	2-2	5-20. Sweep Width Adjustment	5-15
III OPERATION	3-1	VI REPLACEABLE PARTS	6-1
3-1. Introduction	3-1	6-1. Introduction	6-1
3-3. Panel Features	3-1	6-6. Ordering Information	6-1
3-5. Operator's Check	3-1		
3-7. Operating Instructions	3-1	VII MANUAL CHANGES	7-1
3-9. General Operating Information	3-1	7-1. Introduction	7-1
3-14. FM and Symmetrical Opera- tion	3-1		
3-17. Amplitude Modulation Opera- tion	3-1	VIII SERVICE	8-1
3-20. Operator's Maintenance	3-13	8-1. Introduction	8-1
3-21. Fuses	3-13	8-3. Principles of Operation	8-1
3-24. Lamp Replacement	3-13	8-5. Troubleshooting	8-1
		8-7. Recommended Test Equipment	8-1
IV PERFORMANCE TESTS	4-1	8-9. Repair	8-1
4-1. Introduction	4-1	8-10. Part Location Aids	8-1
4-3. Equipment Required	4-1	8-12. Circuit Board Repair	8-1
4-5. Test Record	4-1	8-15. Component Replacement	8-1
4-8. Frequency Coverage/Accuracy	4-2	8-17. Transistor Replacement	8-2
4-9. Sweep Characteristics	4-3	8-19. Schematic Diagrams	8-2
4-10. Linearity	4-5	8-25. Operation	8-4
4-11. Amplitude Modulation	4-7	8-27. Primary Signal Path	8-4
4-12. External FM	4-9	8-29. ALC Feedback Loop	8-4
4-13. Internal FM	4-12	8-31. Frequency Control Feedback Loop	8-4
4-14. Residual and Incidental FM	4-15	8-35. Frequency Tuning Control	8-4
4-15. Residual AM	4-17		
4-16. Incidental AM	4-18		

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1.	Model 8610A Generator/Sweeper	1-0	
3-1.	Front Panel Controls, Connectors and Indicators	3-2	
3-2.	Rear Panel Controls and Connectors	3-4	
3-3.	Operator's Check	3-6	
3-4.	Front Panel Operation	3-8	
3-5.	Crystal Calibration	3-10	
3-6.	Using 8601A as AM Indicator (Options 001, 002, 011)	3-11	
3-7.	Using 8601A as FM Indicator (Options 001, 002, 011)	3-12	
3-8.	Maximum Peak Deviation Frequency versus Modulation Rate	3-13	
3-9.	Maximum Percent Modulation versus Modulation Rate	3-13	
4-1.	Sweep Characteristics Test Setup	4-3	
4-2.	Alternate Linearity Test Setup	4-7	
4-3.	Recorder Trace of Linearity	4-7	
4-4.	Typical Amplitude Modulated Carrier Waveform	4-8	
4-5.	External FM Test Setup	4-10	
4-6.	Residual and Incidental FM Test Setup	4-15	
4-7.	Typical Incidental FM Waveform	4-16	
4-8.	Residual AM Test Setup	4-17	
4-9.	Incidental AM Test Setup	4-18	
4-10.	Correction Factor Chart	4-19	
4-11.	Spectrum Analyzer Display	4-20	
5-1.	Oscilloscope Displays of 8601A RF Output Power	5-9	
5-2.	Oscilloscope Displays of Correct and Incorrect ALC Balance Adjustment	5-9	
5-3.	Internal FM Adjustment	5-10	
6-1.	Frequency Readout, A13 Assembly	6-17	
6-2.	Cabinet Parts	6-22	
7-1.	AC Primary Circuit	7-8	
7-2.	Component Identification A1A1 Discriminator Assembly	7-8	
7-3.	A1A1 Discriminator Circuit, Schematic Diagram	7-9	
7-4.	A4 Crystal Oscillator, Modulator, Oscillator Mixer, Oscillator Low Pass Filter, Schematic Diagram	7-10	
7-5.	Component Identification, A4A1 Crystal Oscillator Assembly	7-11	
7-6.	Component Identification, Sweep Generator, P/O A9	7-12	
7-7.	Component Identification, Summing Amplifier, P/O A9	7-12	
7-8.	Sweep Reference Circuit, P/O A9	7-14	
7-9.	Component Identification, A1A1 Discriminator Assembly	7-15	
7-10.	A1A1 Discriminator Circuit, Schematic Diagram	7-16	
7-11.	Component Identification, A2 Divider Assembly	7-17	
7-12.	A2 Divider Assembly, Schematic Diagram	7-18	
7-13.	Component Identification, A3A2A1 Mixer Assembly	7-19	
7-14.	A3A2A1 Mixer Assembly, Schematic Diagram	7-19	
7-15.	Component Identification, A4A1 Crystal Oscillator Assembly	7-20	
7-16.	A4 Crystal Oscillator Assembly, Schematic Diagram	7-21	
7-17.	Component Identification, A5 VTO Assembly	7-22	
7-18.	A5 VTO Assembly, Schematic Diagram	7-23	
7-19.	Primary Wiring Change (Change 29)	7-29	
7-20.	A2 Divider/Divider Bypass, Component Identification (Serial Prefix 912- thru 945-)	7-31	
7-21.	A2 Divider/Divider Bypass, Schematic Diagram	7-31	
8-1.	General Information on Schematic Diagrams	8-2	
8-2.	Schematic Diagram Notes	8-3	
8-3.	8601A Simplified Block Diagram	8-5	
8-4.	Detailed Block Diagram	8-5	
8-5.	Troubleshooting Tree	8-6	
8-6.	A1A1 Discriminator/DC Amplifier, Component Identification	8-9	
8-7.	A1 Discriminator/DC Amplifier, Schematic Diagram	8-9	
8-8.	A2 Divider/Divider Bypass, Component Identification (Serial Prefixed 912- thru 945-)	8-11	
8-9.	A2 Divider/Divider Bypass, Component Identification (Serial Prefixed 954- and above)	8-11	
8-10.	A2 Divider/Divider Bypass, Schematic Diagram	8-11	
8-11.	A3A1 Loop Amplifier/Crystal Calibrator, Component Identification	8-13	
8-12.	A3A2A1 Mixer, Component Identification	8-13	
8-13.	A3 Loop Amplifier/Crystal Calibrator, Mixer, Schematic Diagram	8-13	

LIST OF ILLUSTRATIONS (Cont)

Figure	Page	Figure	Page
8-14. A4A1 Crystal Oscillator, Component Identification	8-14	8-29. P/O A9 Assembly, Summing Amplifier, Component Identification	8-27
8-15. A4A2A1 Low Pass Filter, Component Identification	8-15	8-30. P/O A9 Assembly, Summing Amplifier, Schematic Diagram	8-27
8-16. A4A3A1 Mixer, Component Identification	8-15	8-31. P/O A9 Assembly, ALC Amplifier, Component Identification	8-29
8-17. A4 Crystal Oscillator/Mixer, Low Pass Filter, Schematic Diagram	8-15	8-32. P/O A9 Assembly, ALC Circuit, Schematic Diagram	8-29
8-18. A5 VTO, Component Identification . . .	8-15	8-33. Front Panel Wiring, Component Identification	8-31
8-19. A5 VTO, Schematic Diagram	8-17	8-34. S5/A11/A12 Front Panel Switching, Schematic Diagram	8-31
8-20. A6 Video Amplifier, Component Identification (Serial Prefixed 828- and below)	8-19	8-35. A14 Broadband Amplifier, Component Identification	8-33
8-21. A6 Video Amplifier, Component Identification (Serial Prefixed 838- and above)	8-19	8-36. Block Diagram, 8601A Option 007 . . .	8-33
8-22. A6 Video Amplifier, Schematic Diagram	8-19	8-37. A14 Broadband Amplifier, Schematic Diagram (Option 007 only)	8-33
8-23. A7 Attenuator, Component Identification	8-21	8-38. A15 AM/FM Monitor, Component Identification	8-35
8-24. A7 Attenuator, Schematic Diagram	8-21	8-39. A15AM/FM Monitor, Schematic Diagram (Options 001, 002 and 011 only) . . .	8-35
8-25. A8 Rectifier, A10 Power Supply, Component Identification	8-23	8-40. 8601A Top View	8-37
8-26. A8 Rectifier, A10 Power Supply, Schematic Diagram	8-23	8-41. 8601A Bottom View	8-37
8-27. P/O A9 Assembly, Sweep Generator, Component Identification	8-25	8-42. 8601A Right Adjustments	8-37
8-28. P/O A9 Assembly, Sweep Generator, Schematic Diagram	8-25	8-43. 8601A Lift Side Adjustments	8-37
		8-44. 8601A Front Panel, Assembly Location	8-37
		8-45. 8601A Rear Panel, Assembly Location	8-37

LIST OF TABLES

Table	Page	Table	Page
1-1. Specifications	1-2	6-2. Replaceable Parts	6-3
1-2. Recommended Test Equipment	1-3	7-1. Change Information for Serial Prefixes 959- thru 818-	7-1
2-1. AC Power Cables Available	2-3	7-2. Changes Summary	7-2
4-1. SYM SWEEPWIDTH Accuracy Test	4-5	7-3. A2 Assy Replaceable Parts	7-25
4-2. Performance Test Record	4-23	7-4. A4A1 Assy Replaceable Parts	7-25
5-1. Factory Selected Components	5-2	8-1. Matrix to Select Frequency Control Board Components for 8601A Options	8-26
5-2. Controls Listed in Adjustment Sequence	5-3		
6-1. Reference Designators and Abbreviations	6-2		



Figure 1-1. Model 8601A Generator/Sweeper

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This manual contains installation, operation and service information for the HP Model 8601A, shown in Figure 1-1. Complete specifications for the Model 8601A Generator/Sweeper are given in Table 1-1.

1-3. INSTRUMENTS COVERED BY MANUAL

1-4. Each Model 8601A is identified by a two-section serial number on the rear of the instrument. The first section is separated from the second section by a dash or a letter. The first section of numbers is a serial prefix number used to document changes and the second set of numbers is an identification number unique to each instrument.

1-5. All instruments with the same serial prefix are the same. The groups of instruments to which this manual applies directly are identified on the title page. For instruments with lower serial prefix numbers than those listed, make manual changes listed in Section VII. For instruments with higher serial prefix numbers, a Manual Changes sheet is included, describing the required changes. If a change sheet is missing, the information can be supplied by any Hewlett-Packard sales and service office (see list at the rear of this manual).

1-6. DESCRIPTION

1-7. The Model 8601A Generator/Sweeper is a rf signal source with both CW and wide band swept frequency capabilities in the 0.1 to 1.0 MHz range. In the CW mode, residual fm is less than 50 Hz rms from 0.1 to 11 MHz, and less than 500 Hz rms from 1.0 to 110 MHz (including line-related components). Harmonic outputs are 35 dB below the carrier; spurious and non-harmonic outputs are 40 dB below the carrier. Swept-frequency measurements of all or any part of the 0.1 to 11 MHz or 1.0 to 110 MHz bands are possible by selection of FULL, VIDEO, or SYMMETRICAL sweep modes. Internal and external frequency modulation is also possible for narrow-band sweep operations or remote tuning.

1-8. The FULL sweep covers the whole 0.1 to 11 MHz or 1.0 to 110 MHz band. The VIDEO sweep is from the bottom of the selected range up to the frequency selected by front panel fre-

quency control. The SYMMETRICAL sweep operation sweeps above and below the CW frequency selected by front panel frequency control. The symmetrical sweep width is calibrated from 0.01 to 1.0 MHz for the 0.1 to 11 MHz band, and from 0.1 to 10 MHz for the 1.0 to 110 MHz band. A sweep width vernier adjusts the sweep width from the calibrated position to zero.

1-9. The calibrated rf output is variable from +20 to -110 dBm (2.23V to 1 μ Vrms) into 50 ohms by use of the OUTPUT LEVEL and VERNIER controls. Other outputs include a 0.1 to 11 MHz auxiliary output on both bands to permit use of a low-frequency counter for frequency monitoring; a 0 to +7V sweep output for horizontal drive of oscilloscopes and X-Y recorders; and an uncalibrated rf output for phase-lock operations.

1-10. OPTIONS AVAILABLE

1-11. Options 001 and 002 modify the 8601A to provide variable internal am and fm. FM deviation is variable from 0 to 1000 kHz for Option 001. FM deviation is variable from 0 to 30 kHz for Option 002. Amplitude modulation is variable from zero to 30% with either option. When the front panel MOD pushbutton is depressed, the RF output meter indicates modulation level.

NOTE

Front panel meter is usable as am or fm monitor with externally applied modulation.

1-12. Option 003 reduces the external fm sensitivity to 100 kHz/volt \pm 5%, high range, and 10 kHz/volt \pm 5%, low range.

1-13. Option 004 adds a rear panel auxiliary output in parallel with the standard front panel auxiliary output.

1-14. Option 005 modifies the 8601A to provide a 400 Hz internal modulation frequency rate.

1-15. Option 006 modifies the 8601A to provide 22.5 kHz peak internal fm deviation, high range, and 2.25 kHz peak deviation, low range.

1-16. Option 007 enables the 8601A to be used as a tracking generator by substituting an external

signal for the 8601A vto (Internal Voltage Tuned Oscillator) signal. This capability allows the 8601A to be used with the HP Model 8553 110 MHz Spectrum Analyzer to provide displays of log amplitude versus frequency with 70 dB display range for sweep widths from 500 kHz to 100 MHz. To obtain this operation, the first lo (local oscillator) output of the Spectrum Analyzer is taken directly to an 8601A rear panel input by removing the shorting cable that is used for normal 8601A operation.

1-17. Options 008, 009, and 010 change the output meter, attenuator assembly, RF output cable, and connector to provide the 8601A with a 75 ohm output impedance. The dBm scale on the meter is moved to indicate dBm into 75 ohms. For Option 008, the output connector is a standard BNC connector. For option 009, the output connector is a TNC connector. For Option 010, the output connector is the Western Electric type.

1-18. Option 011 provides variable fm with peak deviation of 0 to 30 kHz and 0 to 10 kHz. A

dual-scale front panel meter monitors peak deviation.

1-19. Option 012 provides internal Fm with deviation variable from 0 to 110 kHz (Option 001). It also provides external FM sensitivity of 100 kHz/Volt $\pm 5\%$, high range, and 10 kHz/Volt $\pm 5\%$, low range (Option 003).

Option 012 also has a special line filter and a special line cord. The Option 012 configuration is designed for 115 volt operation only and has been ruggedized to meet military mechanical specifications. The color of the Model 8601A Option 012 is Navy gray with plain aluminum panels.

1-20. RECOMMENDED TEST EQUIPMENT

1-21. Equipment required to maintain the Model 8601A is listed in Table 1-2. Other equipment may be substituted if it meets or exceeds the critical specifications listed in the table.

Table 1-1. Specifications (1 of 2)

FREQUENCY CHARACTERISTICS	
Coverage: Low range, 0.1 - 11 MHz; high range, 1 - 110 MHz.	SYM 0, Sweep: Less than 100 Hz rms, low range; <1 kHz rms, high range.
Accuracy (in CW, stop frequency of VIDEO sweep, and center frequency of SYMMETRICAL sweep): Low range, $\pm 1\%$ of frequency ± 10 kHz. High range, $\pm 1\%$ of frequency ± 100 kHz.	Incidental FM with 30% AM: CW: negligible. SYM 0, Sweep: <100 Hz peak, low range; <1 kHz peak, high range.
Settability: Vernier settability, $\pm 0.01\%$; range, $\pm 0.1\%$; coarse settability using frequency control is 5 kHz, low range; 50 kHz, high range.	Residual AM: AM noise modulation index (rms, 10 kHz bandwidth) is < -50 dB. (Typically -60 dB at 25°C .)
Linearity: $\pm 0.5\%$ of maximum sweep width.	Incidental AM: Incidental AM modulation index is < -55 dB with 75 kHz deviation.
Stability in CW: 50 ppm ± 1 kHz/10 min. high range after two hour warm up. 50 ppm ± 100 Hz/10 min. low range after two hour warm up. 300 ppm ± 3 kHz/ $^\circ\text{C}$, high range. 300 ppm ± 300 Hz/ $^\circ\text{C}$, low range. 10 ppm/V line voltage change.	
Harmonics and Spurious Signals (CW above 250 kHz, output levels below $+10$ dBm): Harmonics at least 35 dB below carrier (33 dB below carrier for options 008, 009 and 010). Spurious signals at least 40 dB below carrier.	
Residual FM: Noise in a 10 kHz bandwidth including line related components. (Dominant component of RESIDUAL FM is noise.)	
CW: < 50 Hz rms, low range; < 500 Hz rms, high range.	
	OUTPUT CHARACTERISTICS
	Level: $+20$ to -110 dBm ($+18$ to -112 dBm for Options 008, 009 and 010). 10 dB steps and 13 dB vernier provide continuous settings over entire range. Meter monitors output in dBm and rms volts into 50Ω (75Ω for Options 008, 009 and 010).
	Accuracy: ± 1 dB accuracy for any output level from $+13$ dBm to -110 dBm.
	Flatness: ± 0.25 dB over full range, ± 0.1 dB over any 10 MHz portion. ($+10$ dBm step or below)
	Impedance: 50Ω , SWR < 1.2 on 0 dBm step and below.
	RF Leakage: Low leakage permits receiver sensitivity measurements down to 1 microvolt.

Table 1-1. Specifications (2 of 2)

<p>SWEEP CHARACTERISTICS</p> <p>Full: Approximately 0.1 – 11 MHz and 1 – 110 MHz independent of dial setting.</p> <p>Video: Sweep extends from low end of range to frequency dial setting. Start frequency accuracy is $\pm 1\%$ of stop frequency, or ± 10 kHz, low range; ± 100 kHz high range, whichever is greater.</p> <p>Symmetrical: Center frequency may be tuned to any point on either range.</p> <p>Sweep Width: 0 – 1 MHz low range; 0 – 10 MHz high range. There are five calibrated sweep width positions as well as an uncalibrated vernier to provide continuous adjustment.</p> <p>Sweep Width Accuracy: $\pm 2\%$ of sweep width or ± 1 kHz on low range; $\pm 2\%$ of sweep width or ± 10 kHz on high range.</p> <p>Sweep Speeds: Fast, typically 3 to 60 sweeps per second, variable. Slow, typically 3 to 60 seconds per sweep, variable. Manual, continuous tuning over preset limits.</p> <p>Trigger Modes: Manual trigger with reset, line-synchronized, or free running.</p>		<p>External AM: Zero to 50%, up to 400 Hz. Zero to 30%, up to 1 kHz. Applied through external AM input on front panel. Sensitivity typically 2V peak/10% modulation index at 400 Hz (10 – 50% AM).</p>
<p>AMPLITUDE MODULATION</p> <p>Internal AM: 30% $\pm 5\%$ at 1 kHz, less than 3% distortion. Typically $< 1\%$ distortion for output readings on upper half of meter scale.</p> <p style="text-align: center;">Note For Option 005, rate is 400 Hz.</p>		<p>FREQUENCY MODULATION</p> <p>Internal FM: Low range: 7.5 kHz $\pm 5\%$ peak deviation, 1 kHz rate; high range: 75 kHz $\pm 5\%$ peak deviation, 1 kHz rate; less than 3% distortion. Typically $< 1\%$.</p> <p style="text-align: center;">Note For Option 005, internal rate is changed to 400 Hz.</p> <p>External FM: Sensitivity: 0.5 MHz per volt $\pm 5\%$, low range; 5 MHz per volt $\pm 5\%$, high range; negative polarity.</p> <p>Deviations to the band edges are possible for rates to 100 Hz; voltage to frequency linearity is $\pm 0.5\%$, allowing remote frequency programming. FM rates to 10 kHz are obtainable with less linearity and accuracy.</p>
<p>PERFORMANCE CHARACTERISTICS</p> <p>AUXILIARY OUTPUTS</p> <p>Front Panel: Sweep Output: approximately 0 to +7 volts. Auxiliary Output: always 0.1 – 11 MHz for low frequency counter monitoring.</p> <p>Rear Panel: Sweep inhibit; stops sweep when grounded. Uncalibrated RF output: -12 dBm minimum, unmodulated. VTO output: 200.1 – 310 MHz, output level -25 dBm minimum. Blanking: -4 volt pulse concurrent with RF blanking.</p> <p>Stability in CW</p>		<p>CRYSTAL CALIBRATOR</p> <p>Internal 5 MHz crystal allows single frequency calibration to $\pm 0.01\%$ at any multiple of 5 MHz.</p>
<p>GENERAL</p> <p>Power: 115V $\pm 10\%$, 400 Hz; or 115 or 230V $\pm 10\%$, 50–60 Hz; approximately 50 VA (50 watts).</p> <p>Weight: Net, 21 lbs. (9.5 kg).</p> <p>Dimensions: 7-25/32 in. wide, 6-3/32 in. high, 16-3/8 in. deep (190 x 155 x 416 mm).</p>		<p>Low Range: Typically (15 ppm + 100 Hz)/10 min. after 3.5 hours warmup</p> <p>High Range: Typically (15 ppm + 1 kHz)/10 min. after 3.5 hours warmup</p>



Table 1-2. Recommended Test Equipment (1 of 3)

Instrument Type	Critical Specifications	Suggested Model	Use (Note 1)
Counter/Marker Generator	Frequency Range: 0.1 – 12 MHz Accuracy: 0.1% of frequency Input Impedance: 500K ohms	HP 8600A	P, A, T
Digital Voltmeter	Voltage Range: 0 – 75 VDC to +25 V Accuracy: $\pm 0.16\%$ of voltage Input Impedance: > 100 K ohms	HP 3439A/3443A	P, A

Table 1-2. Recommended Test Equipment (2 of 3)

Instrument Type	Critical Specifications	Suggested Model	Use (Note 1)
RF Detector	Frequency Range: 0.1 – 110 MHz Frequency Response: $<\pm 0.1$ dB over any 10 MHz range Output Polarity: Negative Input Impedance: 50 ohms (note 2)	HP 8471A (note 2)	P, A, T
Electronic Counter	Frequency Range: dc to 50 MHz Sensitivity: 100 mV Gate Time: 1 μ S (Time Base)	HP 5245L	P
Frequency Meter and FM Discriminator	Input Frequency Range: 10 MHz Bandwidth: 3 Hz to 2 MHz Discriminator Output: Linearity: $\pm 0.5\%$ Residual FM Noise: All components 43.3 dB below full scale output level Output Range: Adjustable from 100 kHz/volt to 10 MHz volt Output Filtering: (see Note 4)	HP 5210A and 2 MHz low-pass filter (Note 3)	P, A
Oscilloscope	Bandwidth: DC to 20 MHz Vertical Sensitivity: 5 mV/div to 1 volt/div Input Impedance: 100K ohms External and internal horizontal sweep capability	HP 180A/1803A/1820A	P, A, T
110 MHz Spectrum Analyzer	Frequency Range: 1 kHz – 110 MHz Input Measurement Range: -50 to +10 dBm in 50 ohms Amplitude Calibration: 1. 10 dB/div 2. Accuracy: ± 1 dB	HP 140T/8552/8553	P, A, T
400 MHz Spectrum Analyzer	Frequency Range: 10 MHz – 400 MHz Input Measurement Range: -50 to +20 dBm Amplitude Calibration: 1. 10 dB/div 2. Accuracy: ± 1 dB	HP 140T/8552/8555	P, A, T
1 kHz Amplifier	Frequency Range: 1 kHz Amplification: >10 dB in 50 ohms	HP 461A or 466A	P
DC Power Supply	DC Range: 0.05 to +10.9 VDC Output Impedance: <0.5 ohms	HP 6215A	P, A
Signal Generator	Frequency Range: 0.2 to 110 MHz Output Level: -10 dBm into 50 ohms Residual FM: 1. <50 Hz up to 110 MHz 2. <20 Hz up to 11 MHz	HP 606A and 608C	P
Audio Oscillator	Frequency Range: 100 Hz to 10 kHz Output Level: 10 volts into 600 ohms	HP 200CD	P, A
50 Ohm Termination (Note 5)	Frequency Range: 0.1 to 110 MHz Impedance: 50 ohms $\pm 5\%$ Connector: BNC plug	HP Part No. 1250-0207	P, A

Table 1-2. Recommended Test Equipment (3 of 3)

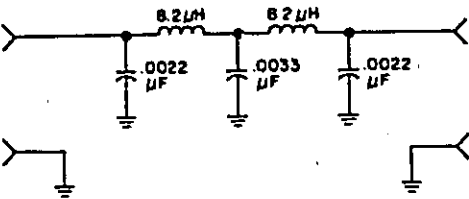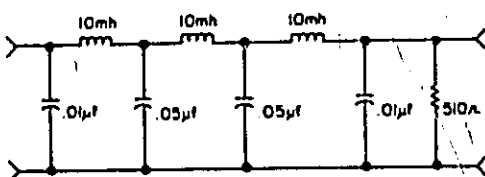Instrument Type	Critical Specifications	Suggested Model	Use (Note 1)
RMS Voltmeter	Frequency Range: DC to 80 kHz Input Range: 7 mV to 1 Vrms Input Impedance: >100K ohms	HP 3400A	P, A
50 Ohm Termination (Note 5)	Frequency Range: 0.1 to 110 MHz Impedance: 50 ohms $\pm 5\%$ Connector: SMC Coaxial Plug	HP Part No. 1250-0839	A, T
Minimum Loss Pad	Frequency Range: 0.1 to 110 MHz 75 ohm to 50 Ohm Transition Connector: BNC plug/BNC jack	Texscan Corporation, Model ZM-57 (Note 6)	P, A
Adapters 1. BNC Tee 2. Subminiature-to-BNC	1. BNC plug and two BNC jacks Impedance: 50 ohms 2. BNC jack to SMC plug Impedance: 50 ohms.	HP Part No. 1250-0781 HP Part No. 1250-0832	P A
Balanced Mixer	Frequency Range: 6 to 60 MHz Inputs: -10 dBm to +10 dBm	HP 10514A or 10534A	P, A
2 MHz low pass filter	 <p>Cutoff Frequency: 2 MHz Insertion Loss: Above 2 MHz: >6 dB Above 10 MHz: >40 dB</p>	Suggested Part Types: 8.2 μ H $\pm 10\%$ (HP Part No. 9140-01u5) 0.0033 μ F $\pm 10\%$ (HP Part No. 0160-0155) 0.0022 μ F $\pm 10\%$ (HP Part No. 0160-0154)	
10 kHz Low Pass Filter		Suggested Part Types: 10 mh $\pm 10\%$ (HP Part No. 9140-0131) .01 μ f $\pm 10\%$ (HP Part No. 0160-0161) .05 μ f $\pm 10\%$ (HP Part No. 0160-3361) 510 Ohm $\pm 1\%$ (HP Part No. 0757-0416)	
<p style="text-align: center;">Notes</p> <ol style="list-style-type: none"> P = Performance tests; A = Adjustment procedures; T = Troubleshooting. For 8601A Options 008, 009 and 010: the HP-8471A, Option 005, is required. 2 MHz low pass filter construction is shown at end of table. 10 kHz and 100 kHz filtering of output signal is required for some tests. The HP Model 10531A Filter Kit is recommended. For 8601A Options 008, 009 and 010: a 75 ohm termination is required. This termination could be a 50-to-75 ohm matching transformer used with a standard 50 ohm termination. (A typical matching transformer is the North Hills Electronics Company's Model 11061.) Texscan Corporation, 2446 North Shadeland Avenue, Indianapolis, Indiana, 46219. 			

INSTALLATION

SECTION II INSTALLATION

2-1. INITIAL INSPECTION

2-2. Mechanical Check

2-3. If external damage to the shipping carton is evident, ask the carrier's agent to be present when the instrument is unpacked. Inspect the instrument for mechanical damage. Also, check the cushioning material for signs of severe stress.

WARNING

BEFORE THE INSTRUMENT IS SWITCHED ON, its protective earth terminals must be connected to the protective conductor of the main power cable. The main plug shall be inserted only in a socket outlet provided with a protective earth contact. DO NOT negate the earth-grounding protection by the use of an extension cable, power cable, or autotransformer that does not have a protective ground conductor. Failure to ground the instrument properly can result in personal injury.

To avoid hazardous electrical shock, do not perform electrical tests when there are signs of shipping damage to any portion of the outer enclosure (covers, panels, meters.)

2-4. Electrical Check

2-5. The electrical performance of the Model 8601A should be verified as soon as possible upon receipt. Performance tests suitable for incoming inspection are given in Section IV, Performance Tests. Equipment required for performance tests is listed in Table 1-2.

2-6. Claims for Damage

2-7. Before shipment this instrument was inspected and found free of electrical and mechanical defects. If the Model 8601A is mechanically damaged in transit, notify the carrier and the nearest Hewlett-Packard sales and service office immediately. Retain the shipping carton and packing material for the carrier's inspection. The Hewlett-Packard sales and service office will arrange for replacement or repair of your instrument without waiting for claim settlements against the carrier.

2-8. PREPARATION FOR USE

2-9. Power Requirements

2-10. The Hp Model 8601A Generator/Sweeper requires a power source of 115V $\pm 10\%$, 400 Hz; or 115 or 230 volts ac $\pm 10\%$, 50 to 60 Hz, single phase, which can supply at least 50VA (50 watts).

2-11. 115/230 Volt Operation

CAUTION

To avoid damage to the instrument, set the 115/230 volt slide switch for the line voltage to be used and insert proper line fuse before connecting the power cable.

2-12. A rear panel two-position slide switch permits operation from either a 115 or 230 volt power source. The number visible on the switch indicates the line voltage for which the instrument is connected. To prepare the Model 8601A for operation, position the 115/230 volt slide switch so that the number visible corresponds to the available line voltage, and install a line fuse of correct rating.

2-13. Three-Conductor Power Cable

2-14. **Power Cable.** The instrument is equipped with a three-wire power cable in accordance with international safety standards. When connected to an appropriate power line outlet, the cable grounds the instrument cabinet. Table 2-1 includes illustrations of the main plug styles available on power cables supplied with Hewlett-Packard instrument. The part numbers are for complete power cables.

2-15. Operating Environment

2-16. The temperature of surrounding air must not exceed 55°C (131°F). Clearances for ventilation should be at least three to four inches at the rear of the cabinet and two to three inches at the sides. The clearances provided by the plastic feet in bench stacking are adequate for the top and bottom cabinet surfaces.

2-17. Bench Operation

2-18. The Model 8601A cabinet has plastic feet and a foldaway tilt stand for convenience in bench operation. The tilt stand permits inclining the instrument for ease in reading the meter. The plastic feet are shaped to provide clearance for air circulation and to make HP half-width modular instruments such as the Generator/Sweeper self-aligning when stacked.

2-19. REPACKAGING FOR SHIPMENT**2-20. Original Packing Materials**

2-21. Containers and packing materials identical to those used by the factory are available through your nearest Hewlett-Packard sales and service office (see list at the rear of this manual). If the Model 8601A is being returned for servicing and repair, attach a tag indicating type of service, return address, and full instrument serial number. Also mark the box FRAGILE to assure careful handling. In any correspondence regarding your instrument, refer to the instrument by its full HP model number and full serial number.

2-22. Other Packing Materials

2-23. The following general instructions should be followed for repackaging with commercially available materials:

1. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard service office or center, attach a tag indicating the type of service required, return address, full HP model number, and full serial number.)
2. Use a strong shipping container. A double-wall carton made of 350 pound test material is adequate.
3. Use enough shock-absorbing material (three to four inch layer) around all sides of the instrument to provide firm cushion and prevent movement inside the container. Protect the control panel with cardboard.
4. Seal the shipping container securely.
5. Mark the shipping container FRAGILE to assure careful handling.

Table 2-1. AC Power Cables Available

Plug Type	Cable HP Part Number	C D	Plug Description	Cable Length (inches)	Cable Color	For Use In Country
250V 	8120-1351 8120-1703	0 6	Straight *BSI 363A 90°	90 90	Mint Gray Mint Gray	United Kingdom, Cyprus, Nigeria, Rhodesia, Singapore
250V 	8120-1369 8120-0696	0 4	Straight *NZSS198/ASC112 90°	79 87	Gray Gray	Australia, New Zealand
250V 	8120-1689 8120-1692	7 2	Straight *CEE7-Y11 90°	79 79	Mint Gray Mint Gray	East and West Europe, Saudi Arabia, Egypt So. Africa, India (unpolarized in many nations)
125V 	8120-1348 8120-1398 8120-1754 8120-1378 8120-1521 8120-1676	5 5 7 1 6 2	Straight *NEMA5-15P 90° Straight *NEMA5-15P Straight *NEMA5-15P 90° Straight *NEMA5-15P	80 80 36 80 80 36	Black Black Black Jade Gray Jade Gray Jade Gray	United States, Canada, Japan (100V or 200V), Mexico, Philippines, Taiwan
250V 	8120-2104	3	Straight *SEV1011 1959-24507 Type 12	79	Gray	Switzerland
250V 	8120-0698	6	Straight *NEMA6-15P			United States, Canada
220V 	8120-1957 8120-2956	2 3	Straight *DHCK 107 90°	79 79	Gray Gray	Denmark
250 V 	8120-1860	6	Straight *CEE22-VI (Systems Cabinet use)			

*Part number shown for plug is industry identifier for plug only. Number shown for cable is HP Part Number for complete cable including plug.
E = Earth Ground; L = Line; N = Neutral

OPERATION

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This operating section explains the function of the controls and indicators of the Model 8601A Generator/Sweeper. It also describes typical operating modes and operator maintenance such as fuse and indicator lamp replacement.

3-3. PANEL FEATURES

3-4. Front and rear panel features are described in Figures 3-1 and 3-2. Description numbers match the numbers on the illustration.

3-5. OPERATOR'S CHECK

3-6. The operator's check (Figure 3-3) is supplied to allow the operator to make a quick check of the main instrument functions prior to use. If the correct indications are not obtained, perform the performance tests in Section IV to determine if the instrument is working correctly.

3-7. OPERATING INSTRUCTIONS

3-8. Figure 3-4 describes general operating procedures and the crystal calibration procedure is described in Figure 3-5. Procedure steps are numbered to correspond to related controls in the photographs.

3-9. General Operating Information

3-10. The FULL sweep covers the full 0.1 to 11 MHz or 1.0 to 110 MHz range. The VIDEO sweep is from the bottom of the band up to the frequency indicated by the front panel tuning controls. The SYMMETRICAL sweep operation sweeps upward, centered on the CW frequency indicated by the front panel tuning controls. The symmetrical sweep width is calibrated and can be varied from 1.0 to 0 MHz on range 11 and from 10 to 0 MHz on range 110. The zero sweep width position disables the sweep and is reserved for fm operation.

3-11. Sweep speed is varied with the FAST/SLOW/MANUAL switch. The control adjacent to this switch serves as a sweep speed vernier in the FAST and SLOW positions and as a manual

sweep control in the MANUAL position. Sweep speed adjustment range is from approximately 3 to 60 sweeps/second in the FAST position and from approximately 3 to 60 seconds/sweep in the SLOW position.

3-12. Sweep triggering is selected with the TRIG/LINE/FREE switch. In the TRIG position, the sweep is started by depressing the trigger button. Retrace occurs automatically or sweep may be terminated manually by depressing the trigger button a second time. In the LINE position, the sweep repetition rate is synchronized with the line frequency. In the FREE position, the sweep repetition rate is free running.

3-13. The OUTPUT LEVEL and VERNIER controls provide continuous adjustment of the rf output level from +20 to -110 dBm. The output level is calibrated when the VERNIER is adjusted for a 0 dBm reading on the meter.

3-14. FM and Symmetrical Operation

3-15. Internal fm (1 kHz rate) may be used in CW or any sweep mode. Internal fm produces a frequency deviation of 7.5 kHz \pm 5% peak on range 11, and 75 kHz \pm 5% on range 110. The internal fm rate is 1 kHz. External fm is available for any SWEEP mode, but not useable in CW mode. External fm deviation and rate limits are shown in Figure 3-8.

3-16. During fm and symmetrical sweep operations, special care should be taken to operate within the specified 8601A frequency limits. If operation is set for frequencies below 0.1 MHz on range 11 or 1.0 MHz on range 110, search circuit activates preventing the output frequency from going below the lower limit of the band. Search operation is indicated by jitter on the oscilloscope display of the detected RF output when the 8601A is required to operate below the lower limit of the band.

3-17. Amplitude Modulation Operation

3-18. Internal or external am can be used in CW or any sweep mode. Internal modulation is 30%

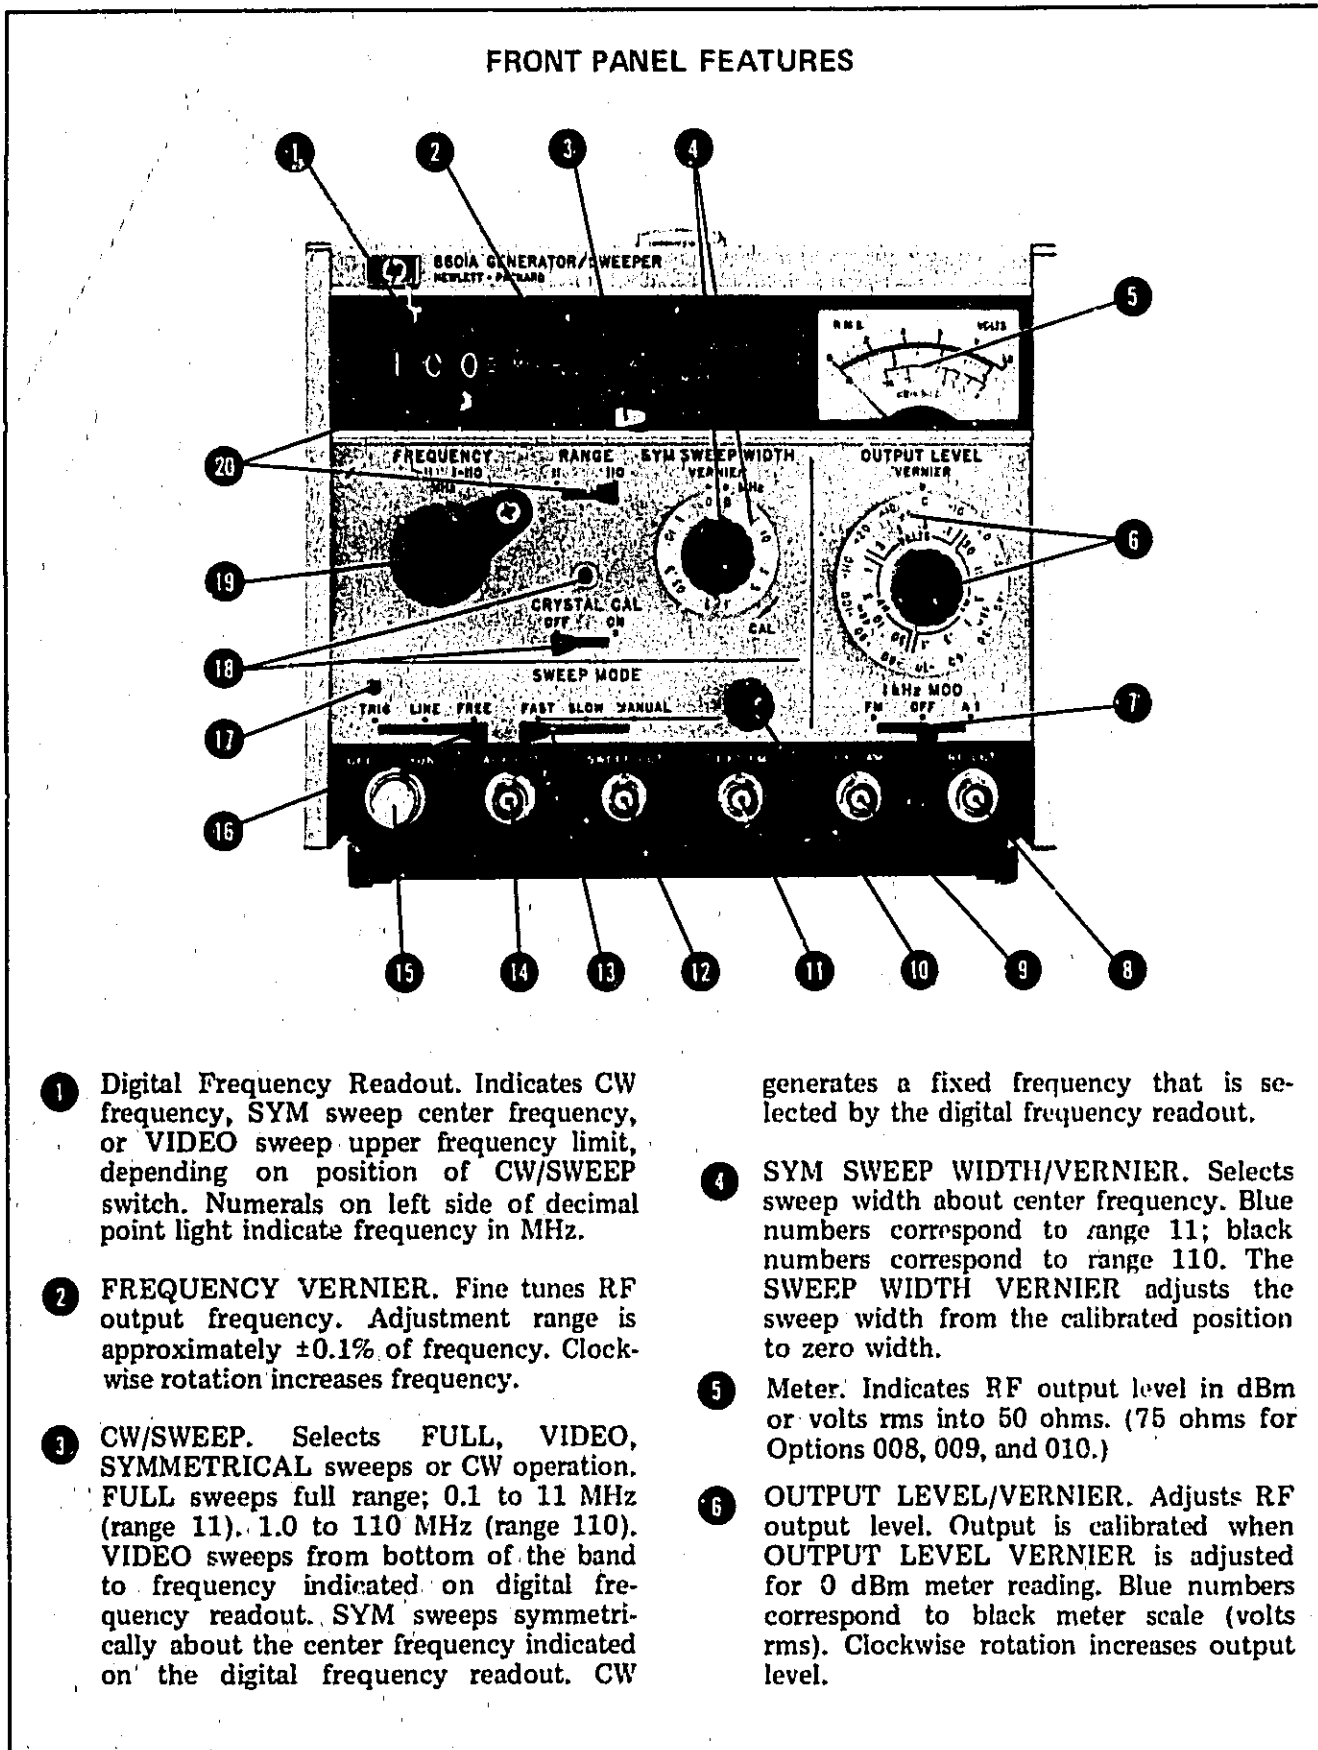



Figure 3-1. Front Panel Controls, Connectors and Indicators (1 of 2)

FRONT PANEL FEATURES

- 7 1 kHz MOD. Turns on either internal frequency or amplitude modulation of RF output. In AM position output is amplitude modulated at 30%, 1 kHz rate. In FM position output is frequency modulated at 7.5 kHz deviation, 1 kHz rate (75 kHz peak deviation on high range).
- 8 RF OUT. Calibrated RF output (into 50 ohms).
- 9 EXT AM. Input for external amplitude modulating signals (see Figure 3-9).
- 10 Manual/Sweep Speed Control. Manual sweep control in MANUAL mode; sweep speed vernier in FAST and SLOW modes. Clockwise rotation sweeps upward across band (in MANUAL) or increases sweep speed (in SLOW and FAST).
- 11 EXT FM. Input for modulation signals at rates up to 10 kHz (see Figure 3-8). Modulation (deviation) sensitivity is 5 MHz/volt in range 110; 0.5 MHz/volt in range 11.
- 12 SWEEP OUT. Output ramp voltage concurrent with RF sweep. Output is approximately 0 to +7V in all sweep modes.
- 13 FAST/SLOW/MANUAL. Selects sweep speed or manual operation.
- 14 AUX OUT. Auxiliary output used for frequency monitoring. Output level is approximately 0.5V p-p into 200 ohms. Output frequency is 0.1 to 11 MHz on both ranges. (Range 110 output is divided by ten.) Provides about a -5 volt DC level for decimal point movement when using HP Model 8600A for frequency measurement.
- 15 ON/OFF. Depressing turns instrument on or off; lamp lights when instrument is on.
- 16 TRIG/LINE/FREE. Selects sweep trigger. In TRIG position, sweep is started by depressing trigger button. Retrace occurs automatically, or sweep can be terminated manually by depressing trigger button a second time. In LINE position, sweep repetition rate is synchronized with line frequency. In FREE position, sweep is derived from internal sweep generator and system is free running.
- 17 Trigger Pushbutton. Initiates single sweep each time it is pressed momentarily when TRIG/LINE/FREE switch is in TRIG position (SYM, VIDEO or FULL SWEEP modes).
- 18 Crystal Cal. Activates 5 MHz calibrator circuit. Output beat-signals at 5 MHz intervals are used to calibrate single or very slow swept frequency readout (refer to Figure 3-5).
- 19 FREQUENCY. Selects CW frequency, SYMMETRICAL sweep center frequency, or VIDEO sweep upper frequency limit, depending on position of CW/SWEEP switch. Clockwise rotation increases frequency.
- 20 RANGE. Selects desired frequency range. Decimal point indicator light is automatically placed for correct frequency readout (MHz).

Figure 3-1. Front Panel Controls, Connectors and Indicators (2 of 2)

REAR PANEL FEATURES

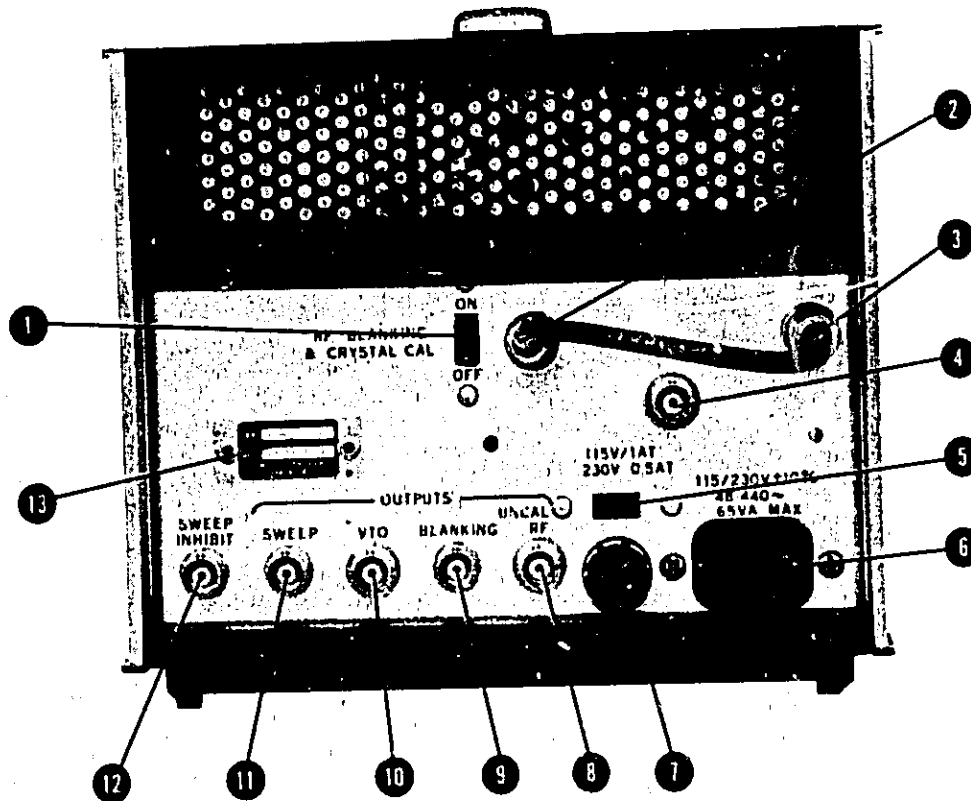

- ① RF BLANKING/CRYSTAL CAL. Enables and disables RF blanking and crystal calibrator circuit.
- ② VTO Output (Option 007 only). 200.1 to 211 MHz in Range 11, 201 to 310 MHz in Range 110. Minimum amplitude is -15 dBm. For normal operating modes connect this VTO output to the LO INPUT (item 3). When using 8601A as a tracking generator leave VTO output unconnected.
- ③ LO INPUT (Option 007 only). For normal operating modes, connect VTO output (item 2) to LO INPUT. When using 8601A as a tracking generator connect output of external oscillator to LO INPUT.
- ④ AUX OUT (Option 004 only). Auxiliary output used for frequency monitoring.

- ⑤ Line Voltage Switch. Slide switch selects proper primary circuit for 115 or 230 Vac operation. Exposed number indicates primary voltage to be used.
- ⑥ Power cable connector.
- ⑦ 1NE FUSE. Primary circuit overcurrent protection. For 115 Vac operation, use 1

CAUTION

Before plugging in power cable, check that line voltage switch is set for correct ac line voltage.

Figure 3-2. Rear Panel Controls and Connectors (1 of 2)

REAR PANEL FEATURES

- amp, slow-blow fuse. For 230 Vac operation, use 0.5 amp, slow-blow fuse.
- ⑧ **UNCAL RF.** RF output concurrent with front panel RF OUT but is not calibrated or blanked during sweep retrace.
 - ⑨ **BLANKING.** Output is a rectangular pulse of approximately $-4V$ that occurs during retrace portion of sweep.
 - ⑩ **VTO OUTPUT.** 200.1 to 211 MHz in range 11; 201 to 310 MHz in range 110. Minimum amplitude is -15 dBm.
 - ⑪ **SWEEP.** Sweep voltage output concurrent with RF sweep. Output is approximately 0 to $+7V$ in all sweep modes.
 - ⑫ **SWEEP INHIBIT.** A sweep inhibit pulse (momentary ground), adjustable for any frequency point across the swept range, is applied to momentarily stop the 8601A sweep. This pause enables the HP Model 8600A Digital Marker to measure the frequency at that particular point in the sweep.
 - ⑬ **Identification Plate.** Serial number that identifies individual instrument. First three or four digits identify the serial prefix. If instrument includes a standard modification (called an Option) then the option number is given on the identification plate just below the serial number.

Figure 3-2. Rear Panel Controls and Connectors (2 of 2)

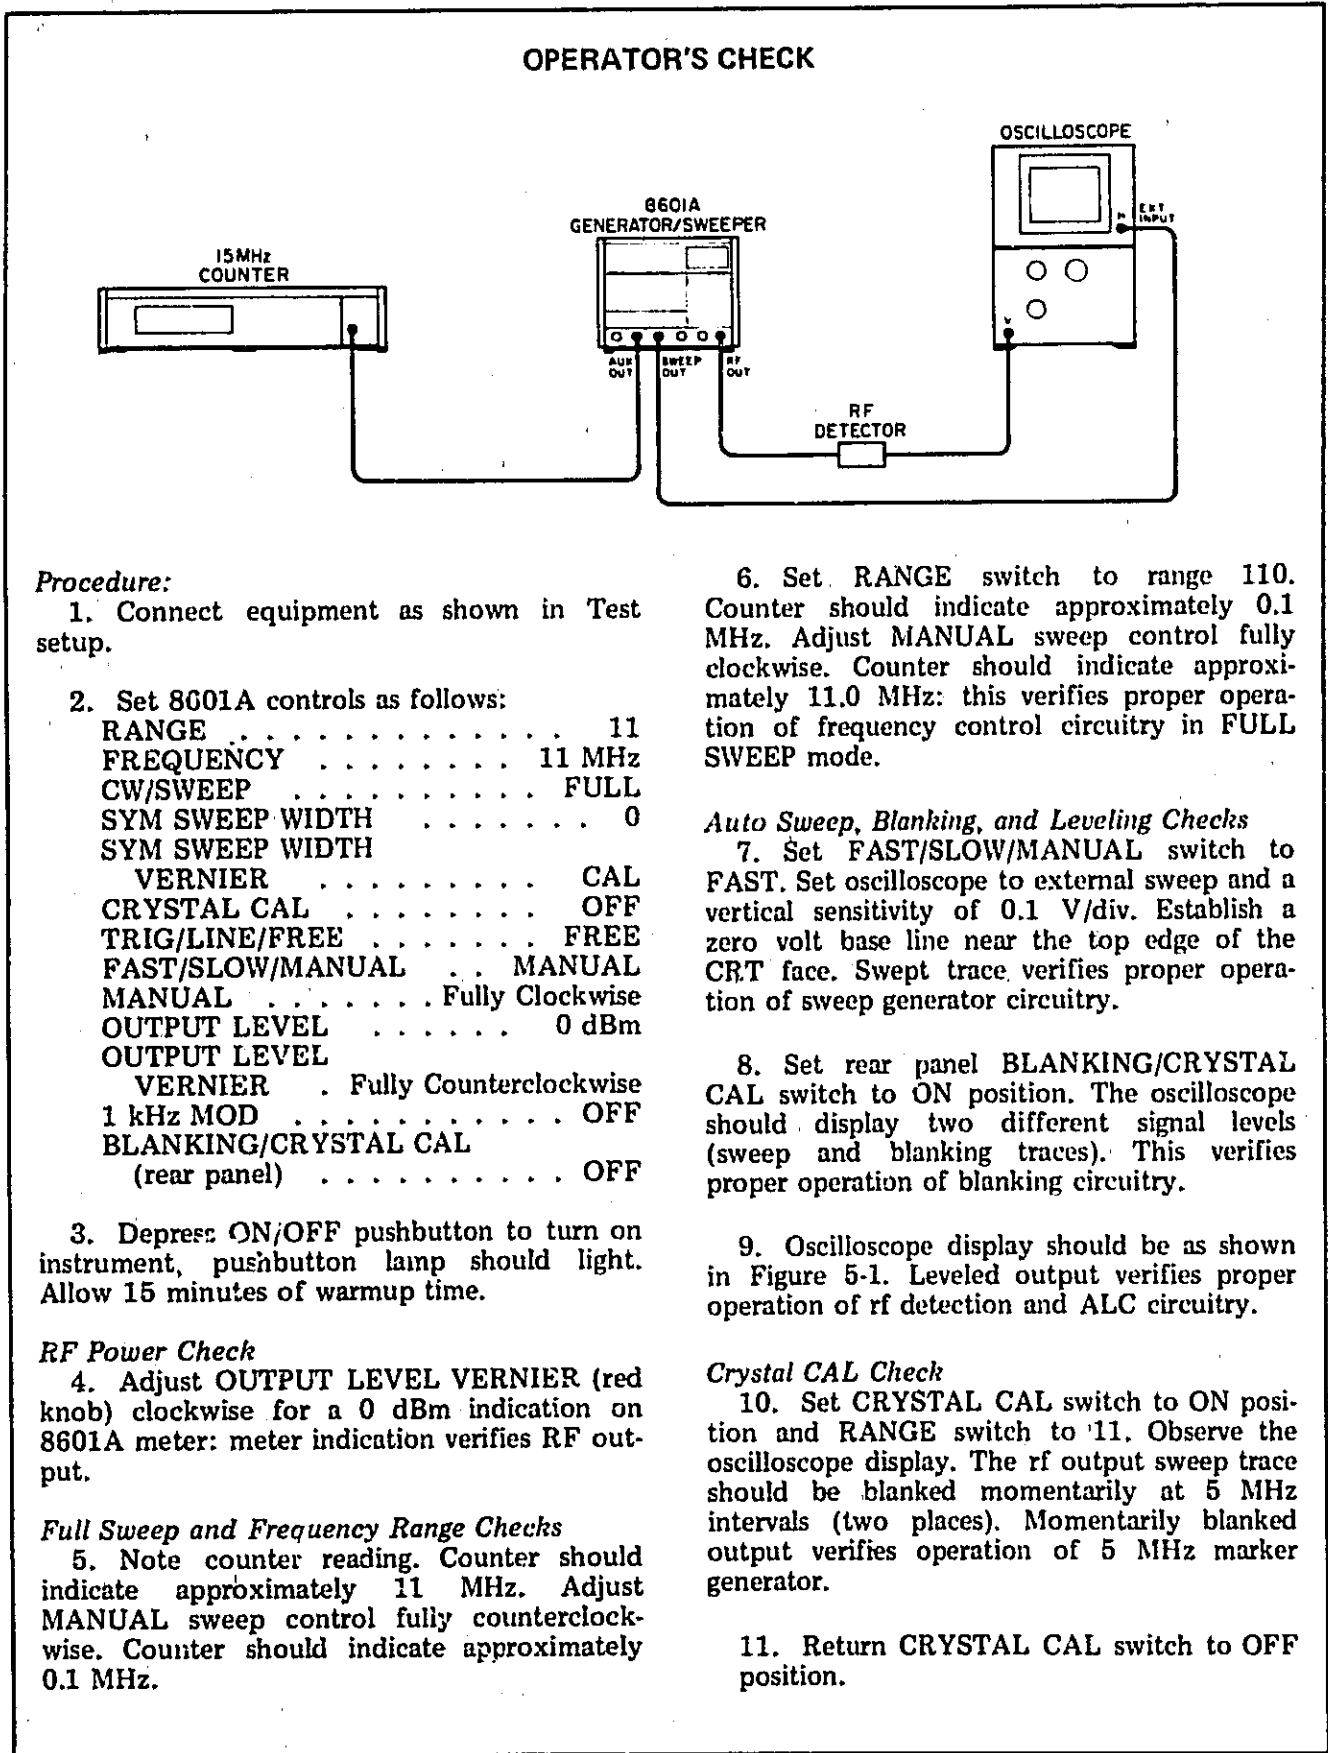


Figure 3-3. Operator's Check (1 of 2)

OPERATOR'S CHECK*Video Sweep Check*

12. Set CW/SWEEP control to VIDEO and adjust FREQUENCY control for 5 MHz.

13. Set FAST/SLOW/MANUAL switch to MANUAL and adjust MANUAL control fully clockwise.

14. Counter should indicate approximately 5 MHz (upper frequency limit of VIDEO SWEEP).

15. Adjust MANUAL control fully counterclockwise. Counter should indicate approximately 0.1 MHz (lower frequency limit of VIDEO SWEEP). Frequency outputs verify proper operation of frequency control circuitry in VIDEO SWEEP mode.

SYM Sweep Check

16. Set CW/SWEEP switch to SYM. Adjust FREQUENCY control for a counter indication of 5.0 ± 0.1 MHz.

17. Set SYM SWEEP WIDTH control to 1 MHz (blue numbers).

18. Adjust MANUAL control from fully counterclockwise position to fully clockwise position. Counter should indicate a total frequency change of approximately 1 MHz. This verifies proper operation of frequency control circuitry in SYM SWEEP mode.

Modulation Check

19. Set 1 kHz MOD switch to AM position and set oscilloscope for an internal sweep of 1 ms/div. Oscilloscope display should appear as a 1 kHz sine wave. This verifies proper operation of internal 1 kHz oscillator circuitry.

This completes the operator's check. Detailed performance testing procedures are given in Section IV.

Figure 3-3. Operator's Check (2 of 2)

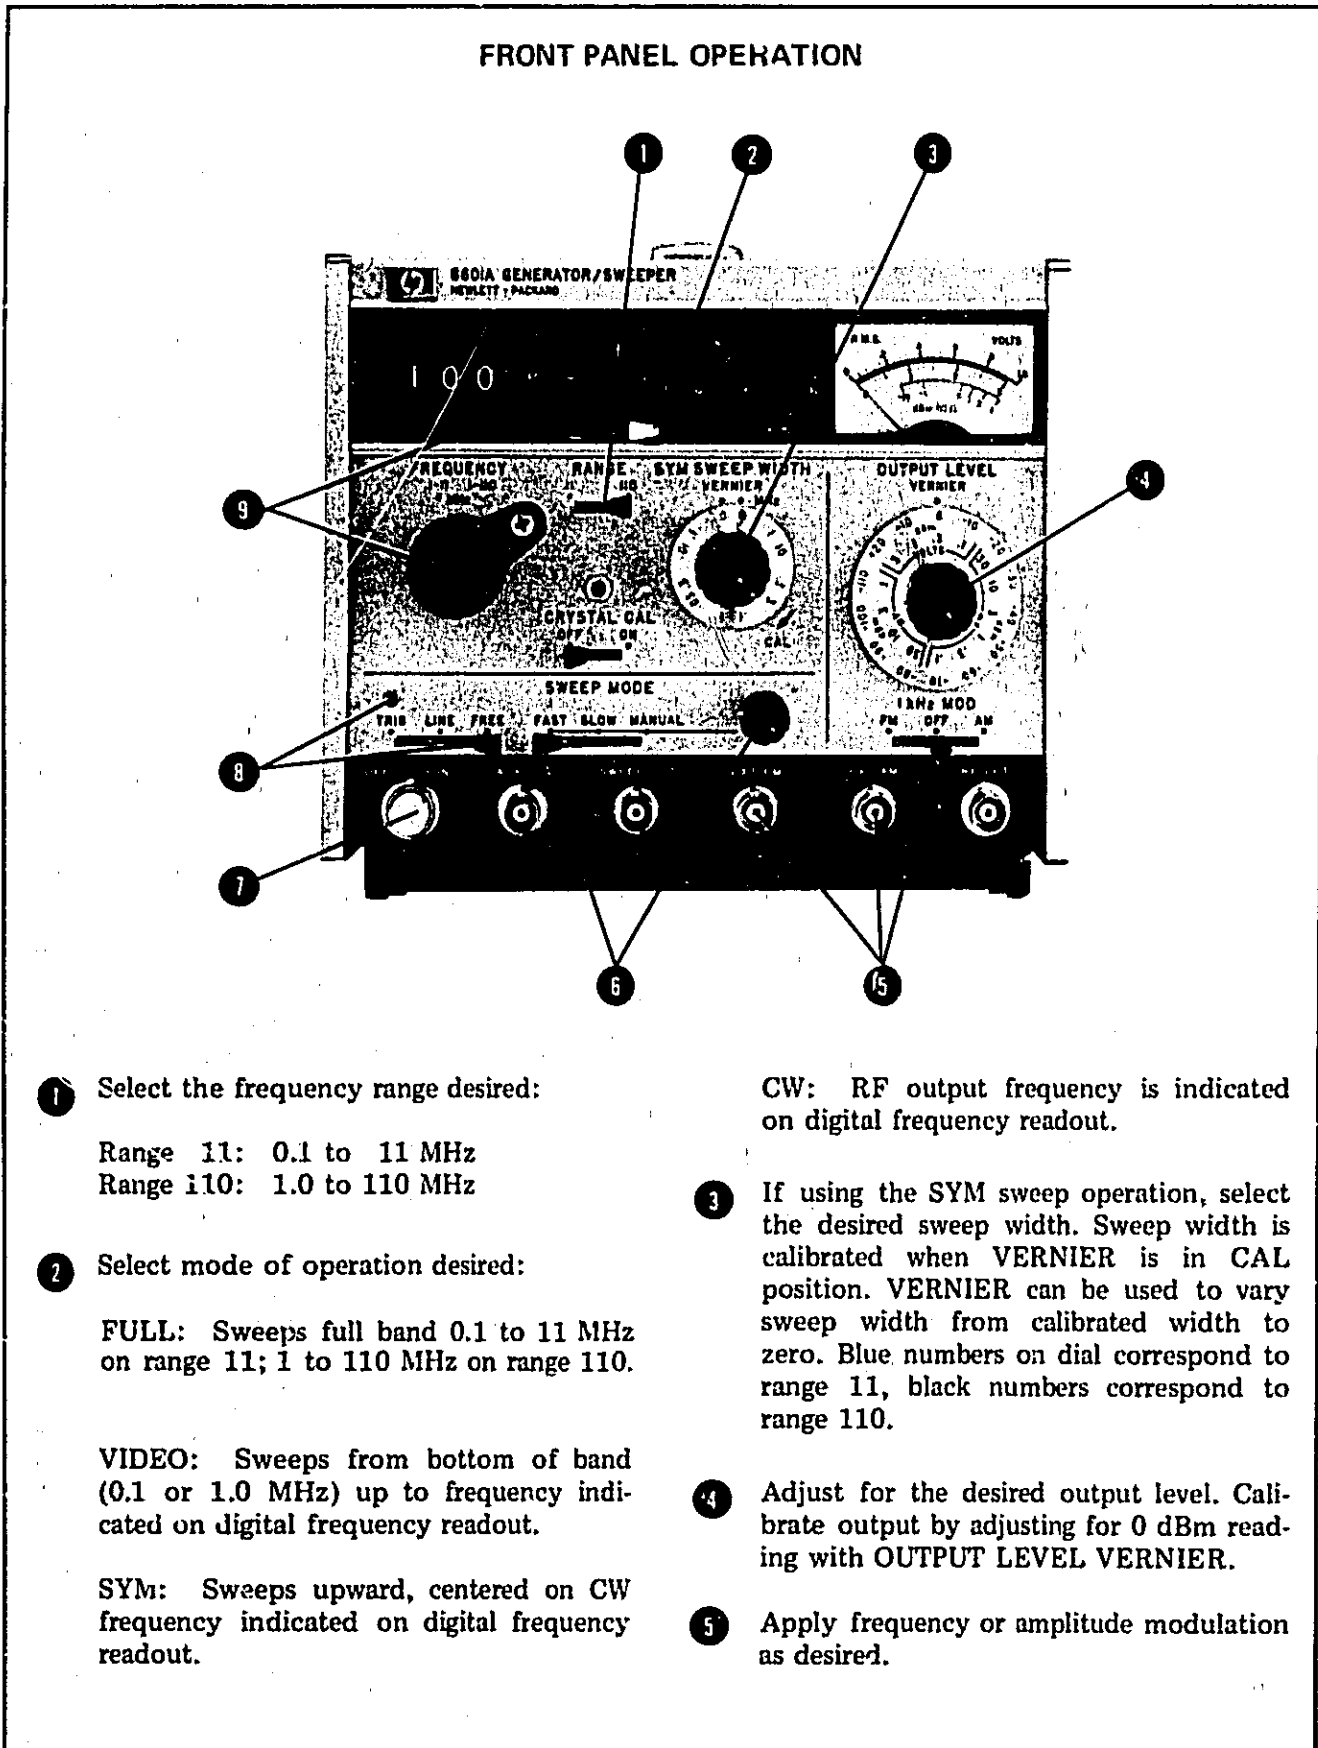


Figure 3-4. Front Panel Operation (1 of 2)

FRONT PANEL OPERATION

NOTE

Internal modulation is obtained with 1 kHz MOD switch set to AM or FM. External modulation is obtained with MOD switch to OFF and external signal applied to EXT AM or EXT FM jack.

Internal am, fm or external am may be applied in CW or any sweep mode. External am limits are shown in Figure 3-9.

External fm may be applied in any sweep mode, except CW mode. External fm limits are shown in Figure 3-8.

- 6 Select the desired sweep speed or manual operation. In FAST and SLOW position, the manual control serves as a sweep speed vernier. Clockwise rotation increases sweep speed.

FAST: 3 to 60 sweeps/second
SLOW: 3 to 60 seconds/sweep

- 7 Depress ON/OFF button. Allow two hour warmup.
- 8 Select the desired sweep trigger:


TRIG: Sweep is started by depressing trigger button. Retrace occurs automatically or sweep may be terminated manually by depressing trigger button a second time.

LINE: Sweep is synchronized with line frequency.

FREE: Sweep free runs.

- 9 Tune to the desired frequency on the digital frequency readout. The VERNIER can be used to fine-tune the frequency approximately $\pm 0.1\%$ of frequency

Figure 3-4. Front Panel Operation (2 of 2)

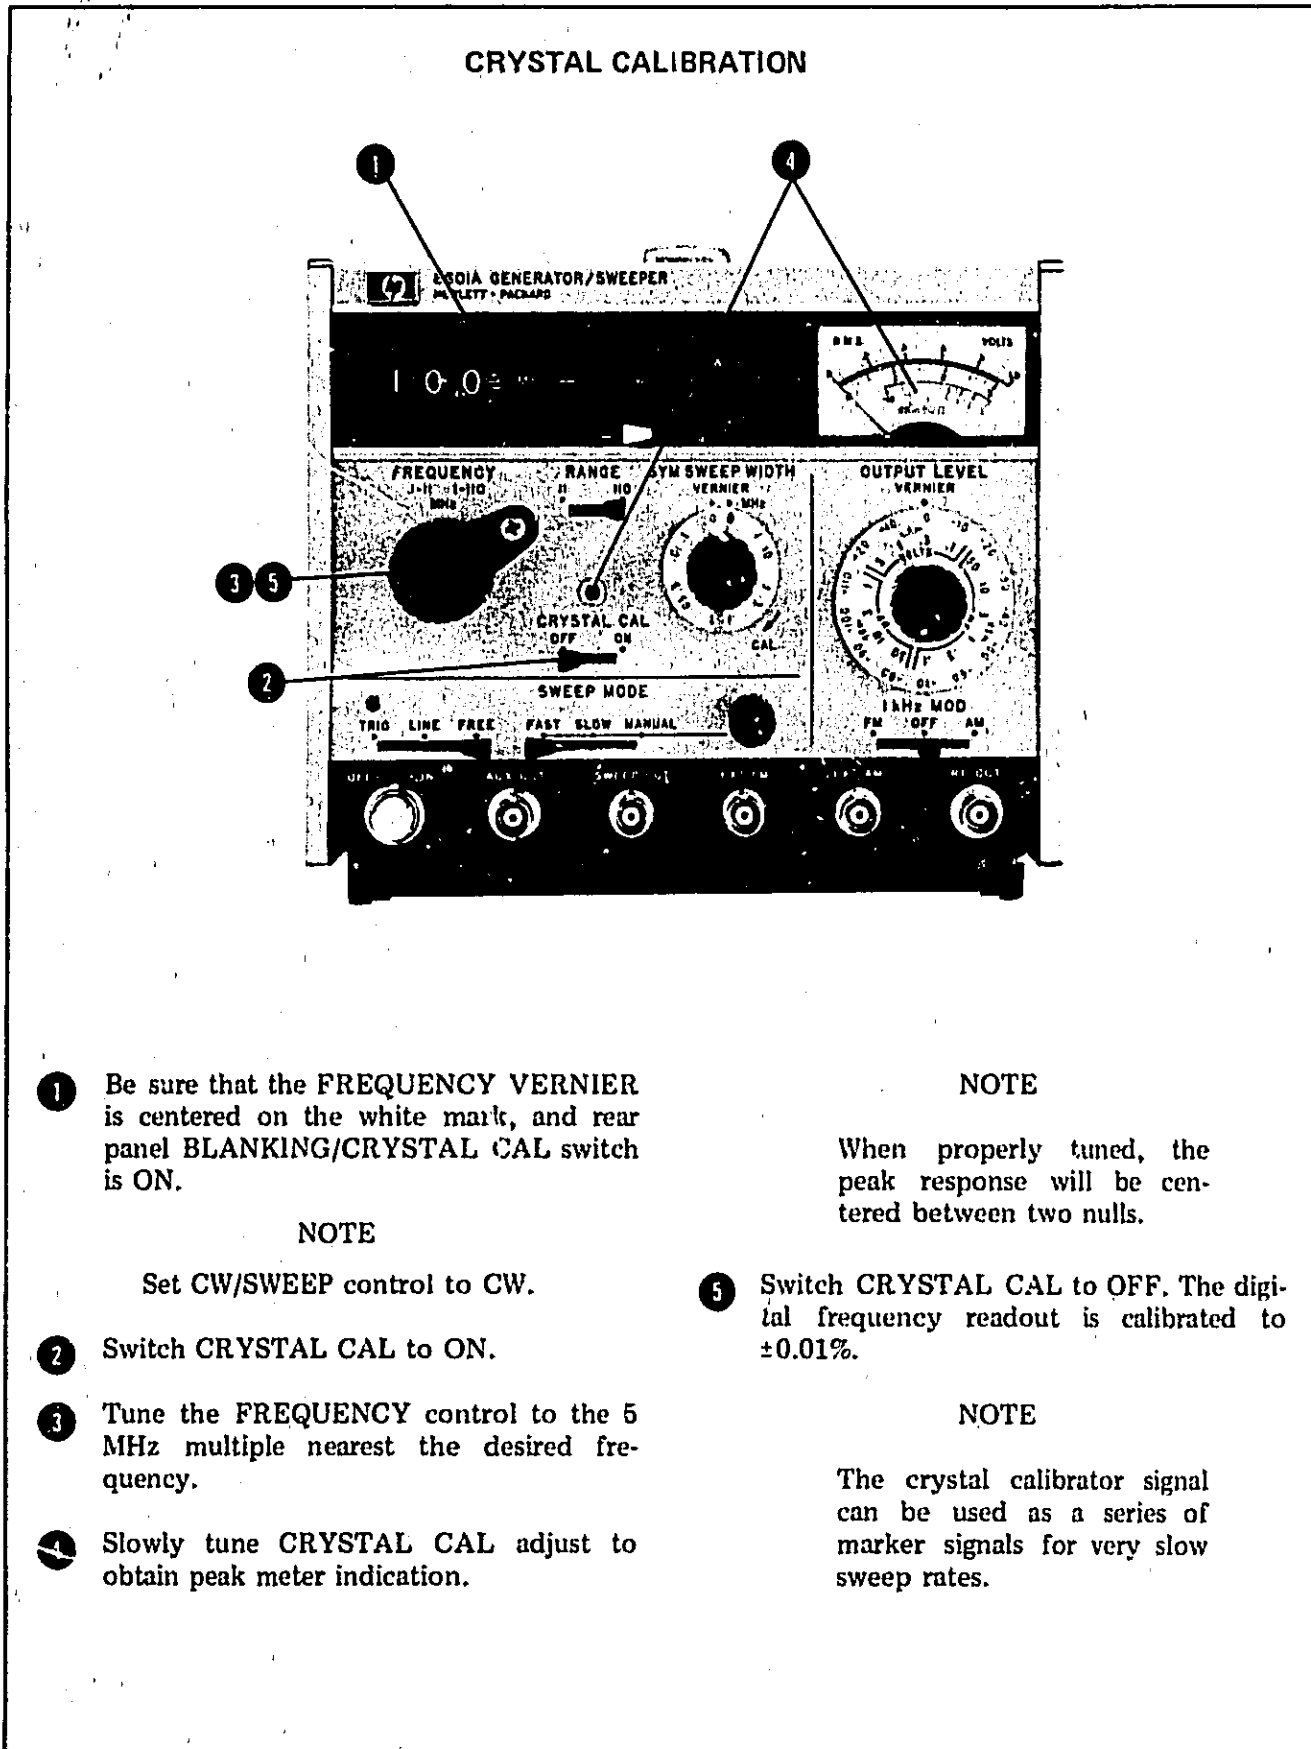

- 1 Be sure that the FREQUENCY VERNIER is centered on the white mark, and rear panel BLANKING/CRYSTAL CAL switch is ON.

NOTE

Set CW/SWEEP control to CW.

- 2 Switch CRYSTAL CAL to ON.
- 3 Tune the FREQUENCY control to the 5 MHz multiple nearest the desired frequency.
- 4 Slowly tune CRYSTAL CAL adjust to obtain peak meter indication.

- 5 Switch CRYSTAL CAL to OFF. The digital frequency readout is calibrated to $\pm 0.01\%$.

NOTE

The crystal calibrator signal can be used as a series of marker signals for very slow sweep rates.

Figure 3-5. Crystal Calibration

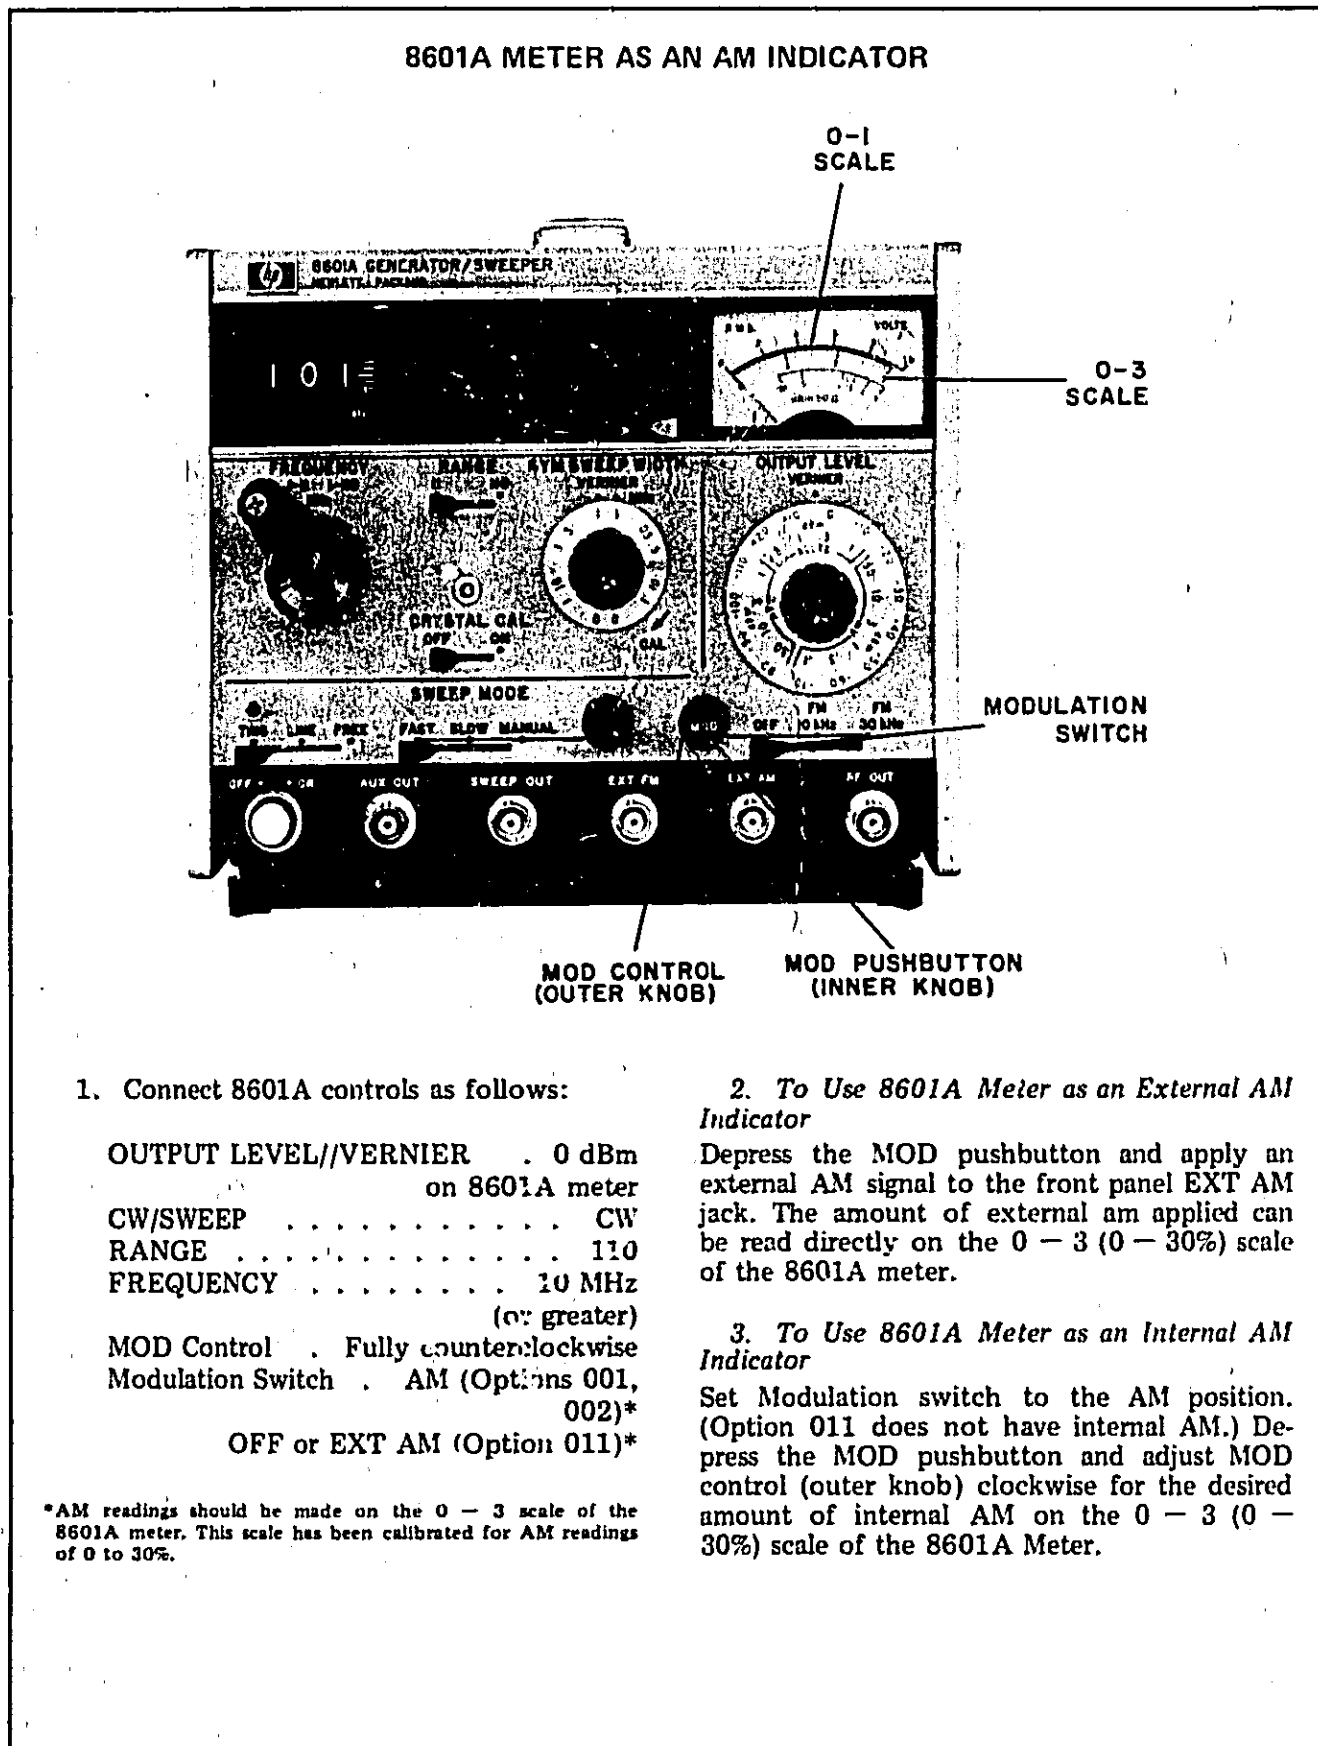


Figure 3-6. Using 8601A as AM Indicator (Options 001, 002, 011)

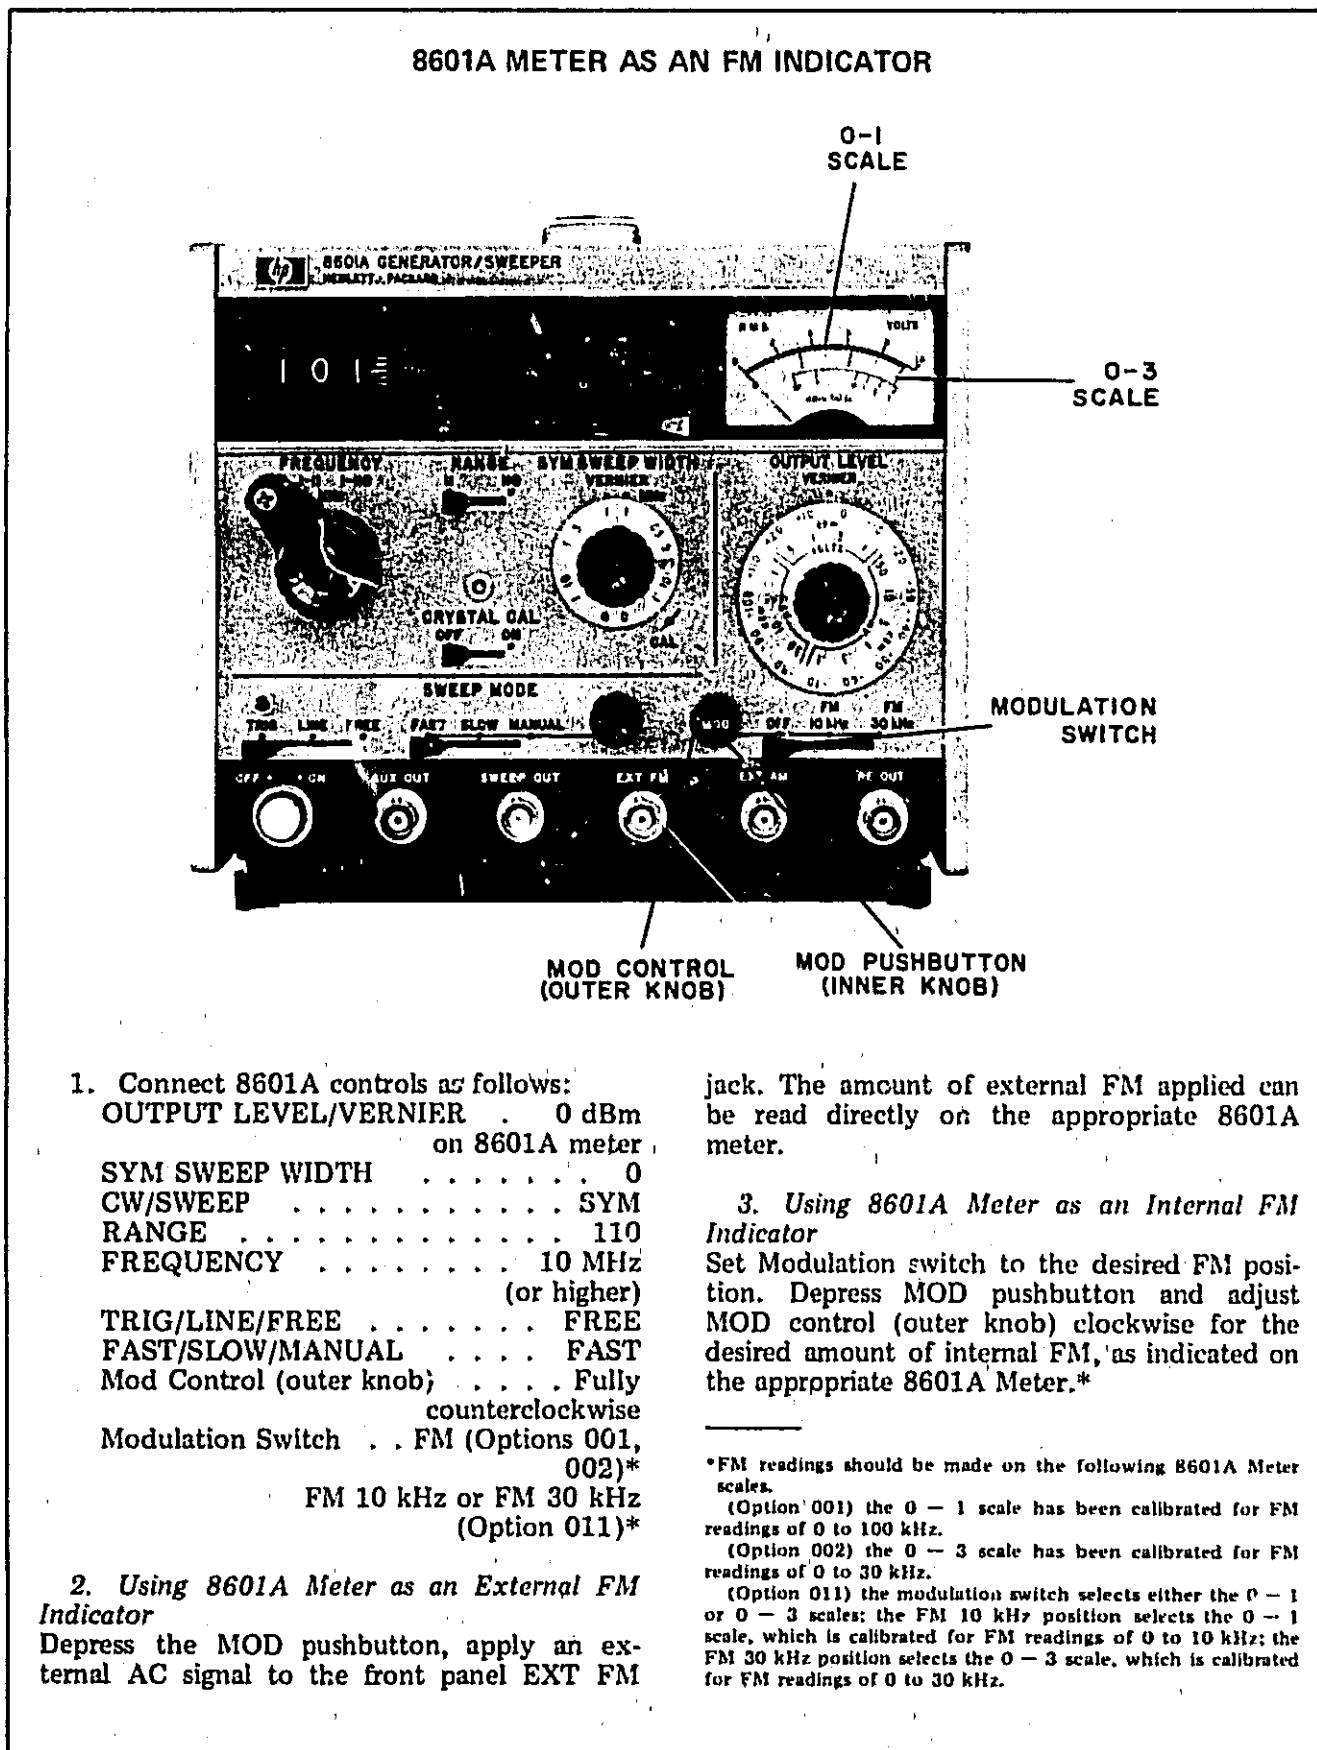


Figure 3-7. Using 8601A Meter as an FM Indicator (Options 001, 002, 011)

±5% at a 1 kHz rate. The external am is adjustable from about 10% at 0.5 kHz rate, 50% at a 400 Hz rate, 80% at a 10 Hz rate (see Figure 3-9 for maximum limits).

3-19. For AM operation, the rf output level should be adjusted before applying modulation. The meter monitors the output of a peak detector and, therefore, reads a greater apparent rf level when amplitude modulation is applied.

3-20. OPERATOR'S MAINTENANCE

3-21. Fuses

3-22. Fuse F1, located on the rear panel, is installed in the primary circuit of power transformer T1, to protect the instrument. For 115 Vac operation, F1 should be a standard 1 amp, slow-blow fuse, for 230 Vac operation, F1 should

be a standard 0.5 amp, slow-blow fuse. Refer to parts list in Section VI for fuse part number.

3-23. Fuses A8F1 and A8F2 are located on rectifier board A8. A8F1 is a standard 2 amp, slow-blow fuse, that protects the +20V and -6.3V power supplies. A8F2 is a standard 0.125 amp, slow-blow fuse, that protects the -75V power supply. Refer to parts list in Section VI for fuse part number.

3-24. Lamp Replacement

3-25. The front panel indicator lamp located in the ON/OFF switch is replaceable from the front. Pull the white pushbutton straight out, and replace the lamp (HP Part Number 2140-0244). Align the pushbutton guide (small protrusion) with the notch in the ON/OFF switch-receptacle and reinsert pushbutton.

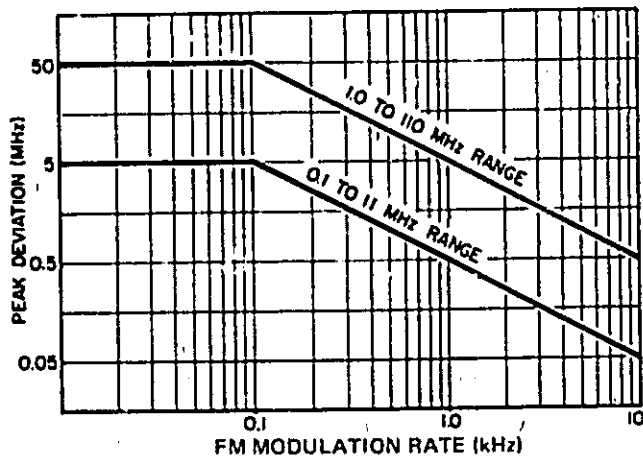


Figure 3-8. Maximum Peak Deviation versus Frequency Modulation Rate

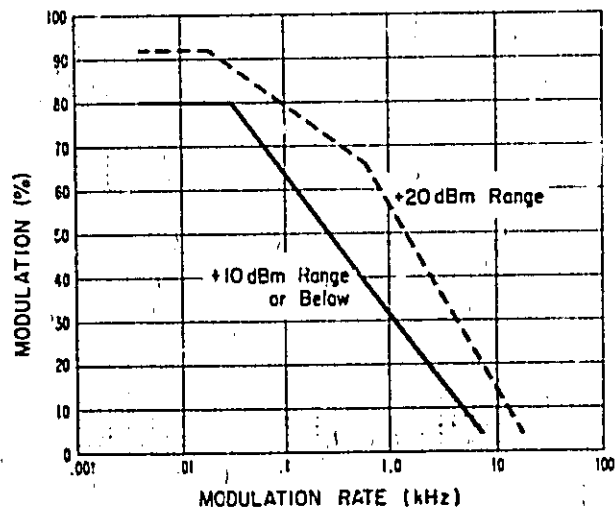


Figure 3-9. Maximum Percent Modulation versus Modulation Rate

PERFORMANCE

CHECK

SECTION IV PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. The procedures in this section test the instrument's electrical performance (standard instrument and instrument Options 001 — 011) using the specifications of Table 1-1 as the performance standards. All tests can be performed without access to the interior of the instrument. A simpler operational test is included in Section III under Operator's Checks.

4-3. EQUIPMENT REQUIRED

4-4. Equipment required for the performance tests is listed in Table 1-2, Recommended Test

Equipment. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended models.

4-5. TEST RECORD

4-6. Results of the performance tests may be tabulated on the Performance Test Record (Table 4-2) at the end of the procedures. The Test Record lists all of the tested specifications and their acceptable limits. Test results recorded at incoming inspection can be used for comparison in periodic maintenance and troubleshooting and after repairs or adjustments.

PERFORMANCE TESTS

4-7. Initial Setup. Before proceeding with performance tests, allow the Model 8601A at least a one hour warmup.

4-8. Frequency Coverage/Accuracy

Specification:

Coverage: Low range, 0.1 — 11 MHz; high range, 1 — 110 MHz.

Accuracy (in CW, stop frequency of VIDEO sweep, and center frequency of SYMMETRICAL sweep):

Low Range, ±1% of frequency ±10 kHz

High Range, ±1% of frequency ±100 kHz.

Description:

The frequency coverage (range) and accuracy is tested using a counter to measure the model 8601A AUX OUT frequency. The AUX OUT frequency is equal to the actual RF output frequency in low range of the 8601A and is equal to the actual RF output frequency divided by ten (through a precision-internal divider) in the high range of the 8601A.

Equipment:

Counter/Marker Generator HP 8600A

Procedure:

1. Connect counter to 8601A AUX OUT connector.

2. Make the following 8601A settings:

FREQUENCY	0.1 MHz	CRYSTAL CAL	OFF
RANGE	11	SWEEP MODE	FAST
FREQUENCY VERNIER	Centered	TRIG/LINE/FREE	FREE
CW/SWEEP	CW	OUTPUT LEVEL	0 dBm
SYM SWEEP WIDTH	0	CUTPUT LEVEL VERNIER	0 dBm
SYM SWEEP WIDTH VERNIER	CAL		on output meter
		1 kHz MOD	OFF (or EXT)

3. Counter should indicate 0.1 MHz ±11 kHz.

4. Adjust 8601A FREQUENCY control to 5 MHz.

5. Counter should indicate 5 MHz ±60 kHz.

6. Adjust FREQUENCY control to 11 MHz.

7. Counter should indicate 11 MHz ±120 kHz.

8. Set 8601A RANGE switch to 110.

9. Adjust FREQUENCY control to 1 MHz.

NOTE

With RANGE in 110 frequency measured at 8601A AUX OUT jack will be one-tenth the actual frequency output.

10. Counter reading should be 0.1 MHz ±11 kHz.

PERFORMANCE TESTS

4-8. Frequency Coverage/Accuracy (Cont)

NOTE

When using a HP Model 8600A counter, the decimal point is automatically shifted one place when 8601A is used on high 110 RANGE. Therefore, for step 10 a HP Model 8600A counter reading should be 1 MHz \pm 110 kHz.

11. Adjust FREQUENCY control to 50 MHz: the counter reading should be 5 MHz \pm 60 kHz.
12. Adjust FREQUENCY control to 110 MHz: the counter reading should be 11 MHz \pm 120 kHz.

4-9. Sweep Characteristics

Specifications:

Full Sweep: Approximately 0.1 – 11 MHz and 1 – 110 MHz independent of dial setting.

Video Sweep: Sweep extends from low end of range to frequency dial setting. Start frequency accuracy is \pm 1% of stop frequency, \pm 100 kHz, high range; \pm 1% of stop frequency, \pm 10 kHz low range.

Symmetrical Sweep: Center frequency may be tuned to any point on either range:

Sweep Width: 0 – 1 MHz low range; 0 – 10 MHz high range. There are five calibrated sweep width positions as well as an uncalibrated vernier to provide continuous adjustment.

Sweep Width Accuracy: \pm 2% of sweep width or \pm 1 kHz on low range; \pm 2% of sweep width or \pm 10 kHz on high range.

Description:

The sweep characteristics of the 8601A are tested by actually measuring RF frequency points during swept operation with a special electronic counter (the HP Model 8600A). If this special counter is not available, an alternate test of 8601A sweep characteristics can be made with the 8601A in MANUAL SWEEP mode and using a standard electronic counter.

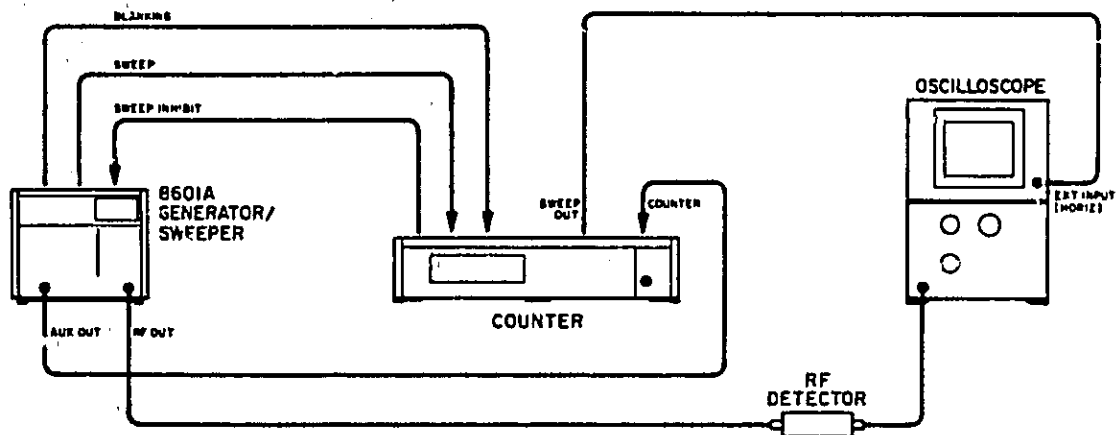


Figure 4-1. Sweep Characteristics Test Setup

PERFORMANCE TESTS

4-9. Sweep Characteristics (Cont)

Equipment:

RF Detector	HP 8471A
Oscilloscope	HP 180A/1803A/1820A
Counter/Marker Generator	HP 8600A

Procedure:

1. Connect equipment as shown in Figure 4-1.
2. Make the following initial settings:

8601A

RANGE	110	OUTPUT LEVEL	0 dBm
CW/SWEEP	FULL	SYM SWEEP WIDTH	0
SWEEP MODE	FAST/FREE	SYM SWEEP WIDTH VERNIER	CAL
MANUAL SWEEP CONTROL	Fully clockwise	CRYSTAL CAL	OFF
			MOD	OFF (or EXT)

3. Set Counter/Marker Generator for SCOPE/SWEEP mode and Oscilloscope DC coupled-external horizontal input sensitivity for full screen (horizontal line) CRT display.
4. Select a marker to be counted by pushing the pushbutton in the center of the desired marker knob.

NOTE

The marker selected provides a brighter marker dot than the other dots.

5. Position selected marker to highest swept frequency point on display. The counter indication should be 110 to 120 MHz.
6. Push a different pushbutton and position newly selected marker to lowest swept frequency point on display. The counter indication should be 0.98 to 3 MHz.
7. Set 8601A range to 11 and reposition selected markers, if necessary measure highest and lowest swept frequencies. Highest frequency should be 11 to 12 MHz. Lowest frequency should be 0.1 to 0.3 MHz.
8. Set 8601A CW/SWEEP control to VIDEO and FREQUENCY control to 10 MHz.
9. Select and position markers on highest and lowest frequency point on display. The lowest frequency should be 0.1 ± 0.11 MHz. The highest frequency should be 10 ± 0.11 MHz.

NOTE

Frequency of the 8601A AUX OUT jack when in RANGE 110 will be one-tenth the actual frequency output.

10. Set 8601A to range 110 and FREQUENCY control to 100 MHz.
11. Select and position markers on highest and lowest frequency point on display. The lowest frequency should be 1 ± 1.1 MHz. The highest frequency should be 100 ± 1.1 MHz.
12. Set 8601A CW/SWEEP control to SYM, SYM SWEEP WIDTH control to 10 MHz, SYM SWEEP WIDTH VERNIER to CAL, and SWEEP MODE to FAST/FREE.

PERFORMANCE TESTS

4-9. Sweep Characteristics (Cont)

13. Position a selected marker to center of oscilloscope swept display line.
14. Adjust 8601A FREQUENCY control for counter indication of 100 MHz.
15. Position a selected marker to highest frequency point on display. Note counter indication. Position a selected marker to lowest frequency point on display. Note this counter indication.
16. The difference between the two counter indications should be within the test limits in the table below. Set the RANGE and SYM SWEEP WIDTH controls to each of the positions in the table below. Repeat step 15 for each setting and compare to the corresponding test limits.

Table 4-1. SYM SWEEP WIDTH Accuracy Test

RANGE	Calibrated SYM SWEEP WIDTH	Highest, Lowest Difference Frequency Test Limits	
		Minimum	Maximum
110	10	9.8 MHz	10.2 MHz
110	3	2.94 MHz	3.06 MHz
110	1	0.98 MHz	1.02 MHz
110	.3	0.29 MHz	0.31 MHz
110	.1	.09 MHz	0.11 MHz
11	1	980 kHz	1020 kHz
11	.3	294 kHz	306 kHz
11	.1	98 kHz	102 kHz
11	.03	29 kHz	31 kHz
11	.01	9 kHz	11 kHz

NOTE

Steps 17 through 20 comprise an alternate method for testing the symmetrical sweep using a standard electronic counter.

17. Connect electronic counter to 8601A RF OUT connector.
18. Set 8601A controls as follows:

RANGE.....110
 FREQUENCY.....45 MHz
 SWEEP.....SYM
 SYM SWEEP WIDTH.....10 MHz
 SYM SWEEP WIDTH VERNIER.....CAL
 SWEEP MODE.....MANUAL

19. Set SWEEP MODE MANUAL control full clockwise note frequency on counter. Set SWEEP MODE MANUAL control full counter-clockwise and note this frequency.
20. The difference between the two counter indications should be within the test limits in the table above. Set the RANGE and SYM SWEEP WIDTH controls to each of the positions in the table above. Repeat step 19 for each setting and compare to the corresponding test limits.

PERFORMANCE TESTS

4-10. Linearity

Specification:

Linearity: $\pm 0.5\%$ of full sweep.

Description:

Linearity (RF output frequency versus sweep output voltage) can be checked two ways. Measuring RF frequency points during swept operation with an oscilloscope and a special electronic counter (HP Model 8600A) or calibrating an X-Y recorder and plotting the 5 MHz markers of the internal 8601A Crystal Calibrator. Both measurement techniques are described in the following procedure.

NOTE

The accuracy of the special counter technique is dependent on the oscilloscope accuracy.

Procedure:

Special Counter Technique

1. Use equipment setup of Figure 4-1.

2. Make the following initial settings:

CW/SWEEP	FULL	OUTPUT LEVEL	0 dBm
SWEEP MODE	FAST/FREE	CRYSTAL CAL	OFF
MANUAL SWEEP		MOD	OFF (or EXT)
CONTROL	Full clockwise	RANGE	110

3. Set Counter/Marker Generator for SCOPE/SWEEP and de-couple the oscilloscope for external horizontal sweep. Adjust the oscilloscope horizontal control, input sensitivity for full screen (horizontal line) display.

4. Select a marker to be counted by pushing the pushbutton in the center of the desired marker knob.

5. Position selected marker to highest swept frequency point on display and record counter reading.

6. Position selected marker to lowest swept frequency point on display and record counter reading.

7. Position selected marker to center of swept display. The counter reading should equal a frequency half way between the highest and lowest swept frequency points.

PERFORMANCE TESTS

4-10. Linearity (Cont)

8. Position selected marker to a point on the swept display that is half way between the lowest and center points. Counter reading should equal a frequency one-quarter way between the highest frequency and lowest frequency.

9. Position selected marker to a point on the swept display half-way between the center and highest points. Counter reading should equal a frequency three-quarters of the way between the highest frequency and lowest frequency.

10. Repeat above procedure at all frequency points of interest.

X-Y Recorder Technique

11. Connect equipment as shown in Figure 4-2.

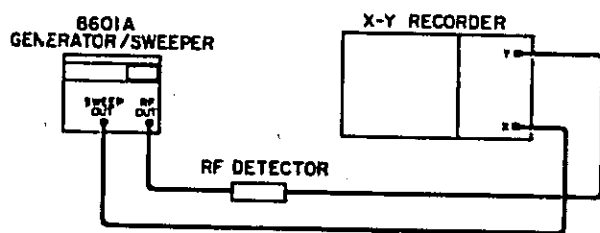


Figure 4-2. Alternate Linearity Test Setup

12. Set 8601A controls as follows:

CW/SWEEP	VIDEO	SWEEP MODE	TRIG/SLOW
RANGE	110	CRYSTAL CAL	ON
FREQUENCY	110 MHz	OUTPUT LEVEL	0 dBm

13. Adjust recorder X-axis sensitivity for 21 cm horizontal display between 1st and last 5 MHz marker. With this calibration, 1 mm equals 0.5% of sweep width.

14. Depress TRIG button to obtain sweep.

15. Markers are visible every 5 MHz and occur every cm (also occur ≈ 2.5 cm below 10 MHz) ± 1 mm (1 mm = 0.5% linearity).

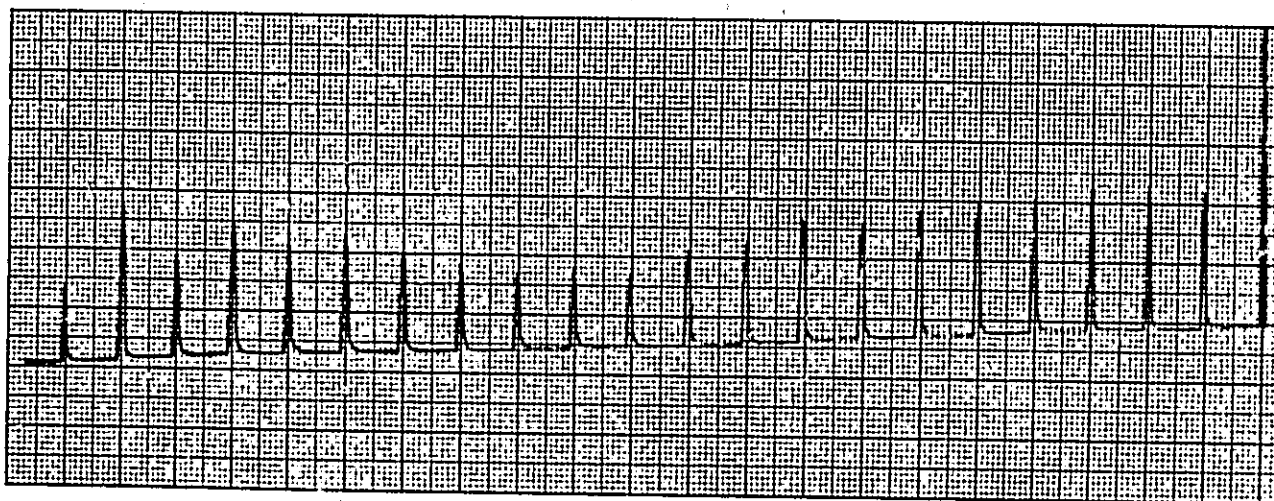


Figure 4-3. Recorder Trace of Linearity

PERFORMANCE TESTS

4-11. Amplitude Modulation

Specification:

Standard Instrument and Options 003, 004 and 006 – 010

Internal AM: 30% ±5% at 1 kHz, less than 3% distortion. Typically <1% distortion for output readings on upper half of meter scale.

External AM: Zero to 50%, up to 400 Hz. Zero to 30%, up to 1 kHz. Applied through external AM input on front panel. Sensitivity typically 2V peak/10% modulation index at 400 Hz (10 – 50% AM).

Option 001 and 002 Instruments

Same as standard instrument, except:

1. Output level meter usable as 0 – 30% AM monitor for internal or external AM with ±3% accuracy for 22 to 30% AM levels (50 Hz to 1 kHz rates).
2. Internal AM adjustable 0 – 30%.

Option 005 Instrument

Same as standard instrument, except Internal AM rate is 400 Hz.

Option 011 Instrument

Same as Option 001 instrument except that internal AM is removed from instrument.

Description:

The amplitude modulation rate and level is measured using an oscilloscope.

Equipment:

Oscilloscope HP 180A/1803A/1820A Audio Oscillator HP 200CD

Procedure:

1. Connect oscilloscope to 8601A RF OUT with 50 ohm termination connected in parallel with RF input at oscilloscope input.

NOTE

For Option 008, 009 and 010 instruments (75 ohm output impedance) use a 75 ohm to 50 ohm minimum loss pad. Refer to Table 1-2.

2. Make following 8601A settings:

CW/SWEEP	CW	FREQUENCY	10 MHz
OUTPUT LEVEL	+10 dBm	MOD	OFF (or EXT AM)
RANGE	11		

3. Adjust oscilloscope vertical sensitivity for a 5 cm display (oscilloscope horizontal sweep time should be about 0.5 millisecond/div).

4. Connect audio oscillator (1000 Hz) to 8601A EXT AM connector.

5. Adjust audio oscillator amplitude output level for 30% amplitude modulation level as indicated on oscilloscope display (1.5 cm peak-to-trough modulation signal as shown in Figure 4-4).

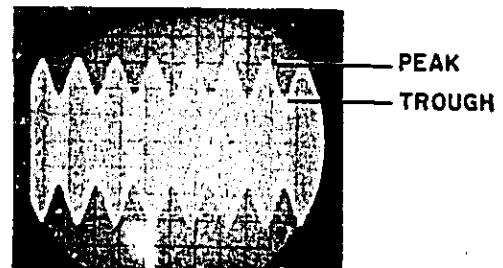


Figure 4-4. Typical Amplitude Modulated Carrier Waveform

PERFORMANCE TESTS

4-11. Amplitude Modulation (Cont)**NOTE**

By varying audio oscillator amplitude output level, the modulation signal should be adjustable from 1.5 cm (peak-to-trough) amplitude to approximately zero amplitude.

AM Monitor TEST (For Option 001, 002 and 011 instruments only)

6. For Option 001 or Option 002 instruments, turn front panel MOD vernier control full counter-clockwise and set AM/FM/OFF switch to AM. For Option 011 instruments, 10 kHz/30 kHz/OFF switch should be set to OFF.

NOTE

For some Option 011 instruments, the OFF position was labeled EXT AM.

7. If necessary, re-adjust audio oscillator for 30% amplitude modulation as in step 5.

8. With front panel MOD pushbutton depressed, the 8601A OUTPUT LEVEL METER should indicate 30 ± 3 divisions ($30 \pm 3\%$) on the 0 — 3 volt scale.

Internal AM Test**NOTE**

The Option 011 instrument does not have internal AM.

9. Remove 8601A EXT AM input signal.

10. Set OFF/AM/FM switch to AM. For Option 001 and 002 instruments, push MOD button and adjust MOD vernier control for 30% output level meter reading on 0 — 3V scale.

11. Internal amplitude modulation level as indicated on oscilloscope should be 1.5 ± 0.25 cm ($30 \pm 5\%$).

4-12. External FM**Specifications:****Standard Instrument (and Options 004 — 010)**

External FM: Sensitivity; 5 MHz per volt $\pm 5\%$, high range; 0.5 MHz per volt $\pm 5\%$ low range; negative polarity.

Deviations to the band edges are possible for rates from DC to 100 Hz; voltages to frequency linearity are $\pm 0.5\%$, allowing remote frequency programming.

Option 001 Instrument

Same as standard instrument except:

Meter is usable as FM peak deviation monitor for FM deviations of 0 — 100 kHz at RF frequencies above 10 MHz. Meter accuracy is ± 5 kHz for 50 Hz to 10 kHz FM rates; ± 10 kHz for 10 to 20 kHz FM rates.

PERFORMANCE TESTS

4-12. External FM (Cont)

Option 002 Instrument

Same as standard instrument, except:

Meter is usable, as FM peak deviation monitor for FM deviations of 0 – 30 kHz at RF frequencies above 10 MHz. Meter accuracy is ±1.5 kHz for 50 Hz to 10 kHz rates; ±3 kHz for 10 to 20 kHz rates.

Option 003 Instrument

Same as standard instrument except:

For narrow frequency control up to 300 kHz (30 kHz on low range); External FM sensitivity is reduced to 100 kHz/volt high range; 10 kHz/volt, low range.

Option 011 Instrument

Same as standard instrument, except:

1. Meter is usable as FM peak deviation monitor for deviation rates of 0 – 30 kHz and 0 – 10 kHz at frequencies above 10 MHz.

2. Meter accuracy for 0 – 30 kHz deviation same as Option 002.

3. Meter accuracy for 0 – 10 kHz deviation, ±0.6 kHz for 50 Hz to 10 kHz rates; ±1.0 kHz for 10 kHz to 20 kHz rates.

Description:

The frequency modulated carrier signal from the 8601A is down converted to 1.0 MHz using a signal generator and a frequency mixer. This down-converted frequency retains all frequency modulation characteristics of the original signal. It (1 MHz frequency modulated signal) is demodulated, using a calibrated discriminator, and a rms voltmeter is used to measure the magnitude of the modulation signal.

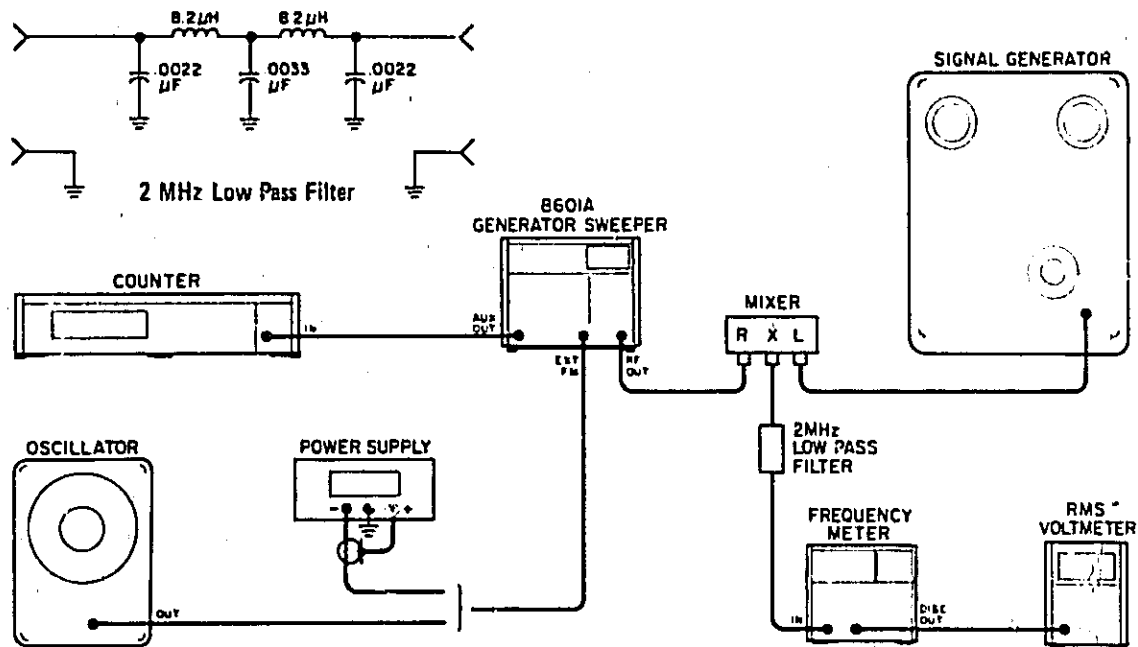


Figure 4-5. External FM Test Setup

Equipment:

Counter/Marker Generator	HP 8600A	Signal Generator	HP 606A and HP 608C
DC Power Supply	HP 6215A	2 MHz Low Pass Filter	(See Table 1-2)
Audio Oscillator	HP 200CD	Digital Voltmeter	HP 3439A/3443A
RMS Voltmeter	HP 3400A		
Frequency Meter	HP 5210A		
Balanced Mixer	HP 10514A or HP 10534A		

PERFORMANCE TESTS

4-12. External FM (Cont)

Procedure (Standard and all Option Instruments)

1. Connect dc power supply to 8601A as shown in Figure 4-5. Connect counter to RF OUT.

NOTE

For Options 008, 009 or 010 instruments 75 ohm output impedance, use a 75 ohm to 50 ohm minimum loss pad. (Refer to Table 1-2).

2. Set 8601A controls as follows:		CW/SWEEP	SYM
SWEEP MODE	FAST	SYM SWEEP WIDTH	0
RANGE	110	OUTPUT LEVEL	+10 dBm
FREQUENCY	60 MHz	MOD	OFF*

*For some Option 011 instruments, the OFF position was labeled EXT AM.

3. Increase power supply output in -1 volt steps.

NOTE

For Option 003 instruments, only up to 3 volts.

4. Counter indicates 8601A frequency, increases approximately 5 MHz for every -1 volt step across the band (100 kHz per volt for Option 003 instruments).

5. Set power supply to 0 volt and 8601A RANGE to 11. Connect counter to AUX OUT.

6. Increase power supply in -1 volt steps.

7. Counter indicates 8601A frequency, increases approximately 0.5 MHz for every 1 volt increase across the band (10 kHz per volt for Option 003 instruments).

8. Remove power supply and connect audio oscillator to EXT FM jack.

9. Frequency Meter Calibration. Before connecting the frequency meter in the test setup, calibrate it as follows:

- a. Install shorting board in Model 5210A.

- b. Set sensitivity (volts RMS) to CAL (100 kHz) and range to 100 kHz. The meter should display a full scale indication; if not, adjust screwdriver CAL (100 kHz) as necessary.

- c. Adjust rear panel DISC GAIN CONTROL for -1 volt DC at DISC OUT jack of 5210A (as measured on voltmeter).

- d. Reset SENSITIVITY (volts RMS) to 0.1 Vrms.

- e. Remove internal shorting board and install 10 kHz low pass filter (HP Part No. 10531-6001) in 5210A. The Butterworth configuration is preferred because it provides maximum amplitude response flatness.

NOTE

If internal 10 kHz low pass filter is not available, internal shorting board should be installed in 5210A and 10 kHz low pass filter (see Table 1-2) connected to DISC OUT jack of 5210A.

PERFORMANCE TESTS

4-12. External FM (Cont)

10. Connect equipment as shown in Figure 4-5. Set 8601A RANGE to 110, FREQUENCY to 60 MHz and adjust Signal Generator for 61.0 MHz at a level of about -10 dBm.

11. Set 5210A frequency meter RANGE to 1 MHz, the DISC OUT is now calibrated for 1 MHz/volt (peak). Adjust signal generator frequency for 1 MHz (full scale) frequency meter reading.

12. Set audio oscillator to 1 kHz and adjust output level for 70.7 mV rms voltmeter reading (this indicates a 100 kHz, 8601A frequency peak deviation).

13. Set 8601A FREQUENCY RANGE 11, Control to 10 MHz and repeat steps 11 and 12.

Procedure (Option 001, 002 and 011 Instruments Only)

14. For Option 001 instrument: Set MOD control fully counterclockwise and OFF/AM/FM switch to FM.

15. Push MOD button, the output level meter should indicate 100 ± 5 kHz on 0 - 1 volt scale.

16. For Option 002 and 011 instruments: Set MOD control fully counterclockwise and switch to FM (Option 002) or FM 30 kHz (Option 011). Adjust audio oscillator output level for 21.21 mVrms voltmeter reading (this indicates 30 kHz peak frequency deviation).

17. Push MOD pushbutton, the output level meter should read 30 ± 1.5 kHz on the 0 - 3 volt scale.

18. For Option 011 instruments: With MOD control fully counterclockwise, adjust audio oscillator output level for 7.07 mVrms (indicating 10 kHz peak frequency deviation).

19. Set switch to FM 10 kHz. Push MOD pushbutton, the output level meter should read 10 ± 0.6 kHz on the 0 - 1 volt scale.

4-13. Internal FM*Specifications:**Standard and Option 003, 004, 007 - 010 Instruments:*

1 kHz rate; 75 kHz $\pm 5\%$ deviation, high range.

1 kHz rate; 7.5 kHz $\pm 5\%$ deviation, low range.

Option 001 Instruments

1 kHz rate; 0 - 100 kHz peak deviation, high range; 0 - 10 kHz peak deviation, low range.

For RF frequencies >10 MHz an internal deviation monitor provides ± 5 kHz readout accuracy for deviations of 70 to 100 kHz.

Option 002 Instruments

1 kHz rate; 0 - 30 kHz peak deviation, high range; 0 - 3 kHz peak deviation, low range.

For RF frequencies >10 MHz an internal deviation monitor provides ± 1.5 kHz readout accuracy for deviations of 21 to 30 kHz.

Option 005 Instruments

Same as standard instrument, except internal AM rate is 400 Hz.

PERFORMANCE TESTS

4-13. Internal FM (Cont)

Option 006 Instruments

Same as standard instrument, except internal FM deviation is 22.5 kHz \pm 5% on high range and 2.25 kHz \pm 5% on low range.

Option 011 Instruments

Same as Option 002 instrument, additionally: a 0 – 10 kHz deviation, high range is provided with internal deviation monitor, usable above 10 MHz, accuracy of \pm 0.6 kHz for deviations of 7 to 10 kHz.

NOTE

Internal FM operation is not guaranteed on low range.

Description:

The frequency modulated carrier signal from the 8601A is down converted to 1 MHz (or 100 kHz) using a signal generator and a balanced mixer. This down converter signal retains all frequency modulation characteristics of the original signal. It (1 MHz or 100 kHz signal) is demodulated, using a calibrated discriminator, and an rms voltmeter is used to measure the magnitude of the modulation signal.

Procedure (all instruments):

1. Setup equipment as shown in Figure 4-5. Audio Oscillator, DC Power Supply and Counter/Marker Generator are not needed.

2. Set 8601A controls as follows:

SWEEP MOD	FAST	SYM SWEEP WIDTH	0
RANGE	110 MHz	OUTPUT LEVEL	+10 dBm
FREQUENCY	60 MHz	MOD	FM
CW/SWEEP	SYM		(or FM 30 kHz)

3. Frequency Meter Calibration:

- a. Install shorting board in 5210A.
- b. Set sensitivity (volts RMS) to CAL (100 kHz) and range to 100 kHz. The meter should display a full scale indication; if not, adjust screwdriver CAL. (100 kHz) as necessary.
- c. Adjust rear panel DISC GAIN CONTROL for -1 volt DC at DISC OUT jack of 5210A.
- d. Reset sensitivity (volts rms) to 0.1 Vrms.
- e. Remove internal shorting board and install 100 kHz low pass filter (HP 10531-6002) in 5210A (the Butterworth configuration is recommended).

4. Set 5210A frequency meter RANGE to 1 MHz.

5. Adjust signal generator frequency for 1 MHz (full scale) frequency meter reading.

6. RMS voltmeter indication should be:

- a. For Standard and Options 003, 004, 005, 007, 008, 009 and 010 instrument: 53 mVrms \pm 5%.
- b. For Option 006 instrument: 15.9 mVrms \pm 5%.

PERFORMANCE TESTS

4-13. Internal FM (Cont)

c. For Option 011 instruments: Voltmeter indication should be adjustable to 70.7 mVrms using MOD control.

NOTE

With MOD button pushed the 8601A OUTPUT LEVEL meter should indicate 100 ± 5 kHz on the 0 — 1 volt scale (1 = 100 kHz).

d. For Option 002 and 011 instruments: The voltmeter indication should be adjustable to 21.2 mVrms using MOD control.

NOTE

With MOD button pushed the 8601A OUTPUT LEVEL meter should indicate 30 ± 1.5 kHz on the 0 — 3 volt scale (3 = 30 kHz).

e. For Option 011 instruments: Adjust FM 30 kHz switch to FM 10 kHz. Voltmeter indication should be adjustable to 7.07 mVrms and MOD button push should cause 10 ± 0.6 kHz indication on OUTPUT LEVEL meter on 0 — 1 volt scale (1 = 10 kHz).

7. Set 8601A RANGE to 11 (low range).

8. Remove 100 kHz low pass filter from 5210A frequency meter and install 10 kHz low pass filter.

9. Set 5210A frequency meter RANGE to 100 kHz.

10. Adjust signal generator frequency for 100 kHz (full scale frequency meter reading).

11. RMS voltmeter indication should be:

a. For Standard and Options 003, 004, 005, 007, 008, 009 and 010 instruments: 53 mVrms $\pm 5\%$.

b. For Option 006 instruments: 15.9 mVrms $\pm 5\%$.

c. For Option 001 instruments: Voltmeter indication should be adjustable to 70.7 mVrms using MOD control.

NOTE

MOD button is not usable on 8601A (0.1 — 11 MHz) low range.

d. For Option 002 and 011 instruments: The voltmeter indication should be adjustable, to 21.2 mVrms using MOD control.

NOTE

MOD button is not usable on 8601A (0.1 — 11 MHz) low range.

PERFORMANCE TESTS

4-14. Residual and Incidental FM

Specifications:

Residual FM (noise in 10 kHz bandwidth including line related components):

CW: <50 Hz rms, low range; <500 Hz rms, high range.

SYM, 0 Sweep: <100 Hz rms, low range; <1000 Hz rms, high range.

Incidental FM (with 30% AM):

SYM, 0 Sweep: <100 Hz peak, low range; <1000 Hz peak, high range.

Description:

Residual FM: The CW signal from the 8601A is down converted to 100 kHz using a signal generator and a frequency mixer. The down-converted frequency retains all frequency stability characteristics of the original CW signal. It (100 kHz signal) is discriminated and used to generate an AC signal proportional to its frequency instability (residual FM) and measured on an rms voltmeter.

Incidental FM: The amplitude modulated CW signal from the 8601A is down converted to 100 kHz and used to generate an AC signal proportional to frequency instability and measured.

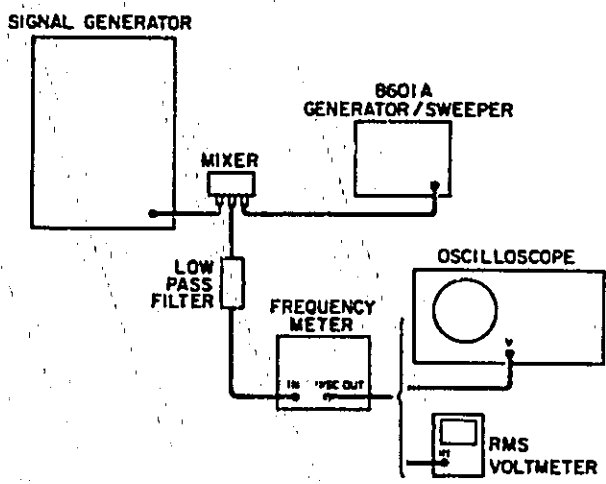


Figure 4-6. Residual and Incidental FM Test Setup

Equipment:

Signal Generator	HP 606A/608A	RMS Voltmeter	HP 3400A
Balanced Mixer	HP 10514A or HP 10534A	Oscilloscope	HP 180A/1803A/1820A
Frequency Meter	HP 5210A	2 MHz Low Pass Filter	(See Table 1-2)

Procedure:

1. Connect equipment as shown in Figure 4-6.

2. Set 8601A controls:

FREQUENCY	110 MHz	CRYSTAL CAL	OFF
RANGE	110	MODULATION	OFF (or EXT)
CW/SWEEP	CW	OUTPUT LEVEL	+10 dBm

PERFORMANCE TESTS

4-14. Residual and Incidental FM (Cont)

Frequency Meter Calibration

3. Install internal shorting board into model 5210A.
4. Set sensitivity (volts RMS) to CAL (100 kHz) and range to 100 kHz. The meter should display a full scale indication, if not, adjust screwdriver CAL (100 kHz) as necessary.
5. Adjust rear panel DISC GAIN CONTROL for -1 volt dc at DISC OUT jack of 5210A.
6. Reset SENSITIVITY (volts RMS) to 0.1 Vrms.
7. Set range to 100 kHz. The DISC OUT is now calibrated for 100 kHz/volt or 100 Hz per millivolt.

Residual FM Test

8. Remove internal shorting board and install the 10 kHz low pass filter (HP 10531-6001) in 5210A. The Butterworth configuration is preferred because it provides maximum amplitude response flatness.

9. Adjust signal generator frequency for about -10 dBm output and 100 kHz difference frequency reading on frequency meter (5210A).

10. Connect rms voltmeter to frequency meter (5210A) DISC OUT. The voltage indication should be less than 5 mVrms (500 Hz).

11. Repeat steps 9 and 10 at any other frequencies of interest in high range (1 - 110 MHz).

12. Set 8601A range to 11 and repeat step 9 at all frequencies of interest in low range (0.1 - 11 MHz). RMS voltmeter indication should be less than 0.5 mVrms (50 Hz).

13. Set 8601A CW/SWEEP to SYM and SYM SWEEP WIDTH to 0.

14. Repeat step 9 at all frequency points of interest in low range (0.1 - 11 MHz). RMS voltmeter indication should be 1 mVrms or less (100 Hz).

15. Set 8601A range to 110. Repeat step 9 at all frequency points of interest. RMS voltmeter indication should be 10 mVrms or less (1 kHz).

Incidental FM Test

16. Replace rms voltmeter with oscilloscope. Line synchronize and ac couple oscilloscope.

17. Set 8601A RANGE to 110, CW/SWEEP to SYM and SYM SWEEP WIDTH to 0.

18. Adjust signal generator frequency for 100 kHz difference frequency reading on frequency meter (5210A).

19. Set 8601A 1 kHz MOD to AM.

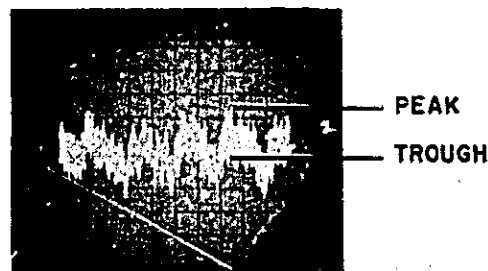


Figure 4-7. Typical Incidental FM Waveform

PERFORMANCE TESTS

4-14. Residual and Incidental FM (Cont)

20. Oscilloscope indication should be less than 10 mV peak-to-trough (1 kHz) as shown in Figure 4-7.

21. Repeat steps 18 through 20 at all frequencies of interest.

22. Set 8601A RANGE to 11.

25. Repeat steps 18 and 19 at all frequency points of interest. Oscilloscope indication should be less than 1 mV peak-to-trough (100 Hz).

4-15. Residual AM

Specification:

Residual AM: AM noise modulation index (rms, 10 kHz bandwidth) is <-50 dB.

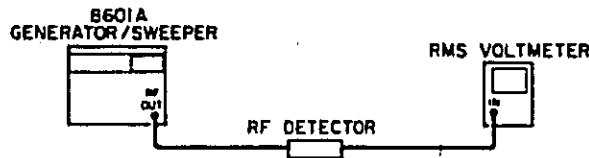


Figure 4-8. Residual AM Test Setup

Equipment:

RF Detector	HP 8471A*	RMS Voltmeter	HP 3400A
-------------	-------	-----------	---------------	-------	----------

*For Options 008, 009 and 010 instruments, use HP 8471A -- Option 005.

Procedure:

1. Connect equipment as shown in Figure 4-8.

2. Set 8601A controls as follows:

RANGE	11	CW/SWEEP	CW
FREQUENCY	6 MHz	OUTPUT LEVEL	+15 dBm

3. Set 8601A 1 kHz MOD to AM.

4. Carefully adjust 8601A OUTPUT LEVEL VERNIER to set rms voltmeter at convenient reference point. Record as R1 in dB.

5. Set 8601A 1 kHz MOD to OFF.

6. Down-range the voltmeter to obtain on scale reading. Record as R2 in dB.

PERFORMANCE TESTS

4-15. Residual AM (Cont)

7. Compute Residual AM: $(R2 - R1) \text{ dB} + (10 \text{ dB})$.
8. Residual AM (step 7 answer) is $>50 \text{ dB}$ below R1 reading.

NOTE

A correction factor of 10 dB is added because the reference R1 set in step 4 is not the actual carrier level. The reference is 10 dB down because of the square-law response of the RF Detector and the response of the Voltmeter to a square wave signal.

4-16. Incidental AM

Specification:

Incidental AM: Modulation index is less than -55 dB with 75 kHz deviation.

Description:

With the carrier signal approximately 30% AM modulated, the actual percent of modulation is measured. This measured modulation signal is then used to establish a reference with respect to the carrier. Since the reference (modulation signal) is not equal to the carrier, a correction factor is determined and added to the measured incidental AM signal (incidental AM is amplitude modulation caused by frequency modulation of carrier signal).

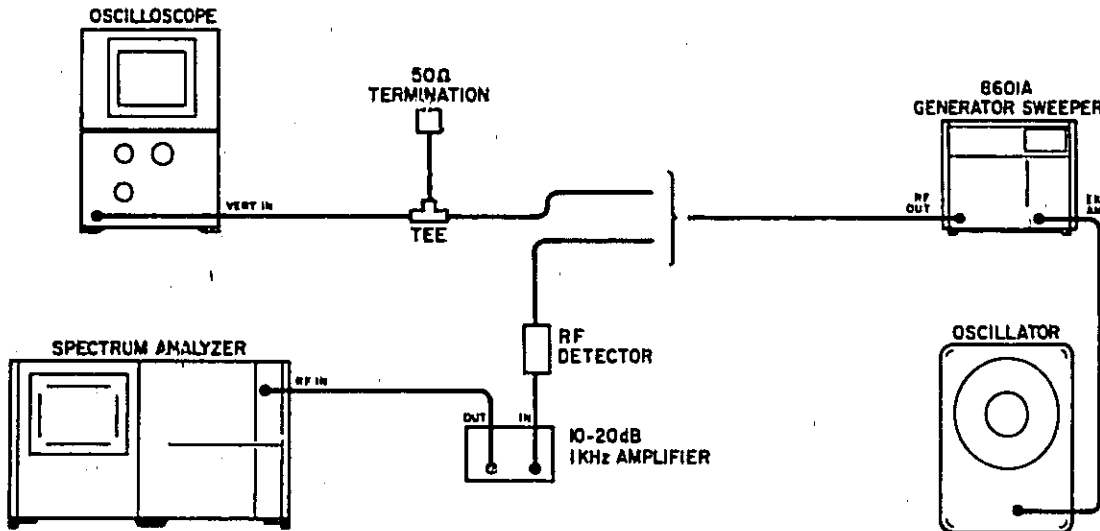


Figure 4-9. Incidental AM Test Setup

Equipment:

RF Detector	HP 8471A	400 MHz Spectrum Analyzer	HP 140T/8552/8553
	(Note 1)	50 Ohm Termination	HP 1250-0207
1 kHz Amplifier	HP 461A or HP 466A	Audio Oscillator	HP 200CD (Note 2)
Oscilloscope	HP 180A/1803A/1820A		

NOTE

1. For Options 008, 009 and 010 instruments, use HP 8471A (Option 005).
2. The Audio Oscillator is only needed for instruments Options 005 and 011.

PERFORMANCE TESTS

4-16. Incidental AM (Cont)

Procedure:

Determining Level of AM Reference Relative to Carrier

1. Connect equipment to oscilloscope as shown in Figure 4-9. Set oscilloscope for internal sweep.

NOTE

1 kHz Audio Oscillator is only needed for 8601A instruments without internal 1 kHz AM (instrument Options 005 and 011).

2. Set 8601A controls:

FREQUENCY	10 MHz	CRYSTAL CAL	OFF
RANGE	110	1 kHz MOD	OFF
CW/SWEEP	CW	OUTPUT LEVEL	0 dBm

NOTE

For instruments without an OFF setting, set 1 kHz MOD switch to AM.

3. Using BNC tee, connect 8601A RF OUT and 50 ohm termination to oscilloscope vertical input.
4. Adjust oscilloscope vertical sensitivity for 5 cm waveform display.
5. Adjust 8601A for 1 kHz AM modulation as follows:
 - a. For all instruments, except instrument Options 001, 002, 005 and 011, set 1 kHz MOD to AM.
 - b. For instrument Options 001 and 002, set MOD switch to AM. With MOD button pushed, adjust MOD control for a three reading on the 0 - 3 volt scale of 8601A OUTPUT LEVEL meter.
 - c. For instrument Options 005 and 011, set MOD switch to OFF (or EXT AM). Connect 1 kHz audio oscillator to EXT AM input and adjust amplitude of audio oscillator for a 1.5 cm peak-to-trough signal on the oscilloscope (30% modulation).

6. Determine the correction factor by difference in amplitude between the 30% amplitude modulation signal level and the unmodulated carrier signal level calculating actual percentage of modulation and referring to the graph in Figure 4-10. To calculate actual percentage divide peak-to-trough amplitude of modulated signal by the peak-to-peak amplitude of the unmodulated signal (5 cm) and multiply by 100.

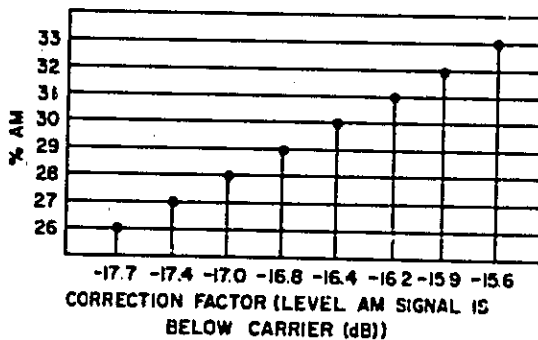


Figure 4-10. Correction Factor Chart

Incidental AM Test

7. Disconnect 8601A RF OUT from oscilloscope and connect to 110 MHz spectrum analyzer as shown.

NOTE

1 kHz amplifier gain should be about 20 dB.

PERFORMANCE TESTS

4-16. Incidental AM (Cont)

8. Set spectrum analyzer controls:

SCAN TIME	0.2 sec.	BANDWIDTH	0.1 kHz
LOG/LINEAR	LOG	CENTER FREQUENCY	0 MHz
INPUT ATTENUATION	20 dB	SCAN WIDTH	1.0 kHz/Div

9. Adjust spectrum analyzer frequency control to center 1 kHz 8601A modulation signal on spectrum analyzer (see Figure 4-11).

NOTE

As shown in Figure 4-11, there are three signals present. Adjust actual 1 kHz signal to center of analyzer display as shown.

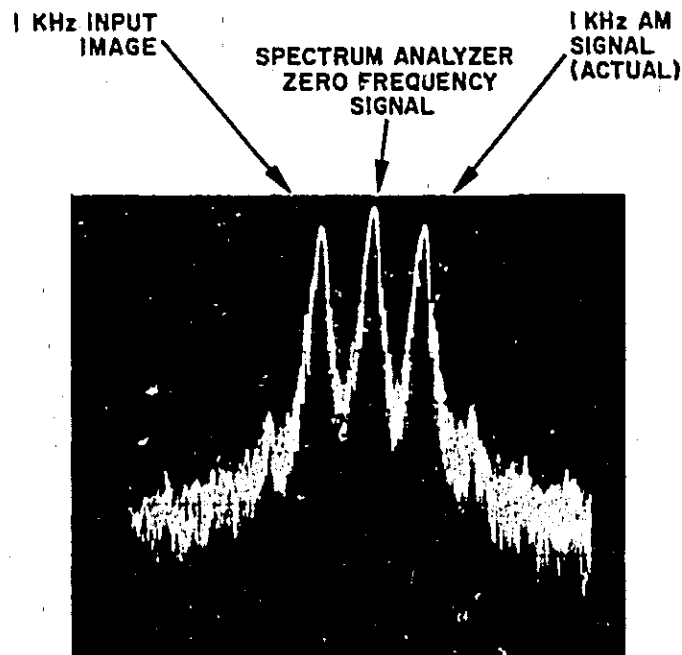


Figure 4-11. Spectrum Analyzer Display

10. Set spectrum analyzer scan width to 0.2 kHz.
11. Adjust spectrum analyzer amplitude controls to display reference signal at top graticule line of spectrum analyzer.
12. Set 8601A 1 kHz MOD control to FM (for instruments being externally modulated, remove modulation signal from EXT AM input and connect to EXT FM input).

PERFORMANCE TESTS

4-16. Incidental AM (Cont)

13. Determine Incidental AM. Incidental AM is equal to the decrease in amplitude of the 1 kHz signal + the correction factor. (Typically the 1 kHz signal level is so small that the actual spectrum analyzer display is only noise.)

NOTE

Example, if the calculated percent of modulation is 30% (step 6) the correction factor will be 16.4 dB (Figure 4-10). Since the minimum level of Incidental AM must be 55 dB below the carrier, the 1 kHz amplitude should decrease by at least 38.6 dB (minimum specification level - correction factor).

4-17. Output Level

Specification:

Level: +20 to -110 dBm into 50 ohms.

Accuracy: ±1 dB for any level from +13 to -110 dBm.

NOTE

For instrument Options 008, 009 and 010, the output level is +18 to -110 dBm into 75 ohms.

Description:

Output level is measured using a spectrum analyzer or RF voltmeter with absolute voltage calibration.

NOTE

Using spectrum analyzer is only approximate check (±0.5 dB).

Procedure Using 110 MHz Spectrum Analyzer:

1. Set 8601A controls as follows:

RANGE	110 MHz	OUTPUT LEVEL	
FREQUENCY	10 MHz	VERNIER	Fully counterclockwise
CW/SWEEP	CW	CRYSTAL CAL	OFF
OUTPUT LEVEL	+20 dBm	1 kHz MOD	OFF

2. Connect 20 dB of attenuation (HP 355D) between 8601A RF OUTPUT and the input of the spectrum analyzer. Set spectrum analyzer input attenuation to 20 dB.

NOTE

For Option 008, 009 and 010 instruments (75 ohm output impedance), use a 75 ohm to 50 ohm minimum loss pad. Refer to Table 1-2.

3. Adjust 8601A OUTPUT LEVEL controls for a spectrum analyzer indication of 0 dBm (for 50 ohm output instruments) or a spectrum analyzer indication of -7.7 dBm (for 75 ohm output instruments).

PERFORMANCE TESTS

4-17. Output Level (Cont)

NOTE

The -7.7 dBm level corresponds to +18 dBm attenuated by 25.7 dB in the RF signal path (20 dB attenuator and 5.7 dB attenuation of minimum loss pad).

4. The 8601A output level meter indication should be:
 - a. 0 dBm ±1.5 dB for all 50 ohm output 8601A instruments.
 - b. -2 dBm ±1.5 dB for all 75 ohm output 8601A instruments.

NOTE

Do *Not* change setting of OUTPUT LEVEL vernier control.

5. Reduce the 8601A RF output in 10 dB steps with the coarse OUTPUT LEVEL control. The 8601A meter indication should stay within the tolerances specified in step 4.

4-18. Harmonics and Spurious Signals

Specifications:

All instruments except Options 008, 009 and 010 (CW above 250 kHz, output level below +10 dBm): Harmonics at least 35 dB below carrier. Spurious signals at least 40 dB below carrier.

Instrument Options 008, 009 and 010 (CW above 250 kHz, output level below +10 dBm): Harmonics at least 33 dB below carrier. Spurious signals at least 40 dB below carrier.

Description:

The level of harmonic and spurious signals relative to the carrier signal is measured using a spectrum analyzer with absolute calibration.

Procedure:

1. Connect 8601A RF OUT to input of 400 MHz spectrum analyzer with a 10 dB fixed attenuator connected between 8601A and spectrum analyzer.

NOTE

For Option 008, 009 and 010 instruments (75 ohm output impedance), use a 75 ohm input to 50-ohm output minimum loss pad. Refer to Table 1-2.

2. Set 8601A controls as follows:

RANGE	110	CW/SWEEP	CW
FREQUENCY	1 MHz	OUTPUT LEVEL	+10 dBm

3. Slowly tune the 8601A FREQUENCY from 1 to 110 MHz while observing the spectrum analyzer display for any questionable harmonics or spurious signals.

NOTE

If the input to the spectrum analyzer is overloaded, the spectrum analyzer may originate some mixing harmonics that can appear on the display. If a signal is in question, increase the spectrum analyzer attenuation by 10 dB, note the changes in signal amplitude, then return the attenuator to its original position. If the signal in question originates in the spectrum analyzer, the level will either change by greater or less than 10 dB or it may not change at all.

Table 4-2. Performance Test Record (1 of 3)

Hewlett-Packard Model 8601A Generator Sweeper Serial Number _____		Test Performed by: _____ Date: _____	
	Upper Limit	Measured Value	Lower Limit
4-8. Frequency Coverage/Accuracy			
<i>Range 11</i>			
3. FREQUENCY control to 0.1 MHz	0.111 MHz	_____	0.089 MHz
5. FREQUENCY control to 5 MHz	5.060 MHz	_____	4.940 MHz
7. FREQUENCY control to 11 MHz	11.120 MHz	_____	10.880 MHz
NOTE: Frequency measured at 8601A AUX OUT jack in Range 110 will be one-tenth the actual frequency output.			
<i>Range 110</i>			
10. FREQUENCY control to 1 MHz	0.111 MHz	_____	0.089 MHz
11. FREQUENCY control to 50 MHz	5.060 MHz	_____	4.940 MHz
12. FREQUENCY control to 110 MHz	11.120 MHz	_____	10.880 MHz
4-9. Sweep Characteristics			
<i>Full Sweep (Range 110)</i>			
5. High end frequency	120 MHz	_____	110 MHz
6. Low end frequency	3.0 MHz	_____	0.98 MHz
<i>Full Sweep (Range 11)</i>			
7. a. High end frequency	12 MHz	_____	11 MHz
b. Low end frequency	0.3 MHz	_____	0.1 MHz
<i>Video Sweep (Range 11)</i>			
9. a. Low end frequency	0.21 MHz	_____	0.0 MHz
b. High end frequency	10.11 MHz	_____	9.89 MHz
<i>Video Sweep (Range 110)</i>			
11. a. Low end frequency	2.1 MHz	_____	0.0 MHz
b. High end frequency	101.1 MHz	_____	98.9 MHz
<i>Sym Sweep (Range 110)</i>			
<i>10 MHz Sweep Width</i>			
16.	10.2 MHz	_____	9.8 MHz
<i>3 MHz Sweep Width</i>			
16.	3.06 MHz	_____	2.94 MHz

Table 4-2. Performance Test Record (2 of 3)

	Upper Limit	Measured Value	Lower Limit
4-9. Sweep Characteristics (cont)			
1 MHz Sweep Width 16.	1.02 MHz	_____	0.98 MHz
0.3 MHz Sweep Width 16.	0.31 MHz	_____	0.29 MHz
0.1 MHz Sweep Width 16.	0.11 MHz	_____	0.9 MHz
<i>SYM Sweep (Range 11)</i>			
1 MHz Sweep Width 16.	1020 KHz	_____	980 KHz
0.3 MHz Sweep Width 16.	306 KHz	_____	294 KHz
0.1 MHz Sweep Width 16.	102 KHz	_____	98 KHz
0.03 MHz Sweep Width 16.	31 KHz	_____	298KHz
0.01 MHz Sweep Width 16.	11 KHz	_____	9 KHz
4-10. Linearity			
15. Refer to initial recorder trace of 5MHz markers.			
4-11. Amplitude Modulation			
8. AM Monitor	33%	_____	27%
10. Internal AM	35%	_____	25%
4-12. External FM			
4. External FM (Range 110)		_____	5MHz/V
7. External FM (Range 11)		_____	0.5 MHz/V
12. a. Deviation (Range 110)		_____	70.7 mVrms
b. Deviation (Range 11)		_____	70.7 mVrms

Table 4-2. Performance Test Record (3 of 3)

	Upper Limit	Measured Value	Lower Limit
4-13. Internal FM			
6. Internal FM (Range 110)	55.65 mVrms	_____	50.35 mVrms
11. Internal FM (Range 11)	55.65 mVrms	_____	50.35 mVrms
4-14. Residual and Incidental FM			
<i>CW Mode</i>			
10. Residual FM (Range 110)	5mVrms	_____	
12. Residual FM (Range 11)	0.5 mVrms	_____	
<i>SYM Mode (0 Sweep)</i>			
14. Residual FM (Range 11)	1.0 mVrms	_____	
15. Residual FM (Range 110)	10 mVrms	_____	
20. Incidental FM (Range 110)	10 mV	_____	
23. Incidental FM (Range 11)	1 mV	_____	
4-15. Residual AM			
7. Residual AM		_____	-50 dB
4-16. Incidental AM			
13. Incidental AM		_____	-55 dB
4-17. Output Level			
4. Meter Output Level	+1.5 dB	_____	-1.5 dB
4-18. Harmonics and Spurious Signals			
3. a. Harmonics		_____	-35 dB
b. Spurious Signals		_____	-40 dB

ADJUSTMENTS

SECTION V ADJUSTMENTS

5-1. INTRODUCTION

5-2. This section provides instructions for adjusting the standard Model 8601A instruments including Options 001 through 011. These procedures should not be performed as routine maintenance, but should be used only after replacement of a part or component, or when the performance test shows that the specifications of Table 1-1 cannot be met.

NOTE

If an instrument includes an Option or Options, the serial plate (rear panel) will list Option number(s).

WARNING

With the covers removed, terminals are exposed that have voltages capable of causing death. The adjustments in this section should be performed only by a skilled person who knows the hazard involved.

NOTE

Before performing any adjustments, allow 1 hour warmup time for the instrument.

5-3. EQUIPMENT REQUIRED

5-4. Recommended test equipment is listed in Table 1-2. If recommended test equipment is not available, other equipment may be substituted if performance meets the critical specifications listed in the table.

5-5. FACTORY SELECTED COMPONENTS

5-6. Table 5-1 is a list of factory selected components by reference designation, reason for selection, and Service Sheet number on which the component is illustrated. Factory selected components are designated by an asterisk (*) on the schematic diagrams in Section VIII of this manual.

Table 5-1. Factory Selected Components

Selected Component	Reason for Selection	Service Sheet
A3A1R2	Selected to produce an output signal of +2 dBm minimum at A3J1 at 118 MHz.	3
A3A1R3	Selected to produce an output signal of +2 dBm minimum at A3J1 at 118 MHz.	3
A3A1R14 ²	Selected to eliminate noise on the swept carrier when the CRYSTAL CAL switch (S2) is ON.	3
A4A1C7 ³	Selected to give optimum flatness when the output level vernier is fully counterclockwise.	4
A4A1R7	Selected to produce an output signal of -2 dBm \pm 2 dB at A4J2.	4
A5A1R12	Selected to obtain sufficient oscillator frequency range.	5
A6A1R6	Selected to control open loop gain of ALC loop.	6
A9R122	Selected to bring A9R120 approximately into the center of its range when adjusted for input offset voltage.	11
A11R7 ¹	Selected to compensate for tolerance variation in A11R6.	12
A14A1C7 (Option 007 only)	Selected to reduce spurious responses \geq 40 dB below carrier with OUTPUT LEVEL set at +10 dBm and VERNIER set for -10 dBm reading.	13
A15R9 (Options 001, 002, 011 only)	Selected for correct monitor accuracy with 20 kHz FM deviation.	14
A15R35 (Options 001, 002, 011 only)	Selected to center AM adjust range (A15R34).	14

¹ A11R7 must be one of three values: 14.3K OHM (HP Part No. 0698-4307), 14.7K OHM (HP Part No. 0698-3156), or 15K OHM (HP Part No. 0757-0446). Typically, if the measured value of A11R6 is less than 48K, A11R7 should be 15K; if value of A11R6 is between 48K and 52K, A11R7 should be 14.7K; if A11R6 is greater than 52K, A11R7 should be 14.3K.

² The value is selected to eliminate noise on the swept carrier when the CRYSTAL CAL switch S2 is ON. Value should be \geq 909 ohms and \leq 1210 ohms. Nominal value is 1100 ohms.

³ The procedure for selection of C7 is to choose the value that gives the minimum power out on the 110 MHz range with the output level vernier fully counterclockwise.

Table 5-2. Controls Listed in Adjustment Sequence (1 of 2)

Reference Designation	Title	Function Adjusted
A10R11	+20V ADJ	Sets +20V Regulator
A5A1R13	High Frequency ADJ	Adjusts VTO high frequency for 318 MHz (RF OUT = 118 MHz or greater).
A5A1R11	Low Frequency ADJ	Adjusts VTO low frequency for 201 MHz (RF out = 1 MHz).
A4A1L5	200 MHz Amplitude Peaking ADJ	Adjusts crystal oscillator 200 MHz OUTPUT for peak amplitude.
A4A3A1L3	0 - 110 MHz Amplitude Peaking ADJ	Adjusts low pass filter 0 - 110 MHz OUTPUT for peak amplitude.
A3A2A1L3	0 - 110 MHz Amplitude Peaking ADJ	Adjusts loop amplifier 0 - 110 MHz OUTPUT for peak amplitude.
A1A1C6	Slope ADJ	Adjusts frequency linearity across band.
A1A1R29	Frequency offset ADJ	Adjusts ramp voltage for 0 Vdc at low frequency end.
A9R136	ALC Balance ADJ	Adjusts flatness of blanking retrace.
A9R160	Frequency ADJ	Adjusts frequency of internal modulation oscillator.
A9R138	FM Deviation ADJ	Adjusts amount of FM deviation about center frequency.
A9R162	% MOD ADJ	Adjusts amplitude modulation for 30%.
A9R131	METER ADJ	Adjusts meter for 0 dB reading.
A9R181	-10 ADJ	Adjusts meter for -10 dB reading.
A9R138	B ADJ	Adjusts temperature balance for wide sweep ranges.
A9R95	A ADJ	Adjusts temperature balance for symmetrical sweep.
A9R20	Dwell Time ADJ	Adjusts for equal delay time at start and end of each sweep.
A9R120	SYM Fc MIN	Minimizes frequency shift at low end of frequency band when switching CW/SWEEP between SYM and CW.
A9R117	SYM Fc MAX	Minimizes frequency shift at middle of frequency band when switching CW/SWEEP between SYM and CW.
A9R24	VIDEO SWP STOP ADJ	Minimizes frequency shift at high end of frequency band when switching CW/SWEEP between CW and VIDEO.

Table 5-2. Controls Listed in Adjustment Sequence (2 of 2)

Reference Designation	Title	Function Adjusted
A9F34	VIDEO START ADJ	Minimizes frequency shift at low end of band when switching CW/SWEEP between CW and VIDEO.
A9R71	Δ SYM ADJ	Adjusts symmetry of sweep about the center frequency.
A9R75	SYM CAL ADJ	Adjusts sweep width of symmetrical sweep.
A15R22	FM 1 ADJ	Adjusts deviation monitor accuracy for Options 001, 002 and 011 instruments.
A15R15	FM 2 ADJ	Same as A15R22.
A15R34	AM ADJ	Adjusts AM % monitor accuracy for Option 001, 002 and 011 instruments.

ADJUSTMENTS

5-7. Power Supply Adjustment

NOTE

The location of all adjustments is shown in Figures 8-40 thru 8-45 of this manual.

Description:

The +20V power supply is adjusted for correct output voltage.

Equipment:

Digital Voltmeter HP 3439A/3443A

Procedure:

1. Connect the digital voltmeter to XA10 pins 7 - 9 (A10TP1).
 2. Adjust +20V ADJUST A10R11 for +20.0 ±0.01 volts.
-

FREQUENCY RANGE ADJUSTMENTS

5-8. Crystal Oscillator Adjustment

Description:

The crystal oscillator output is first adjusted for the correct power level at 200 MHz output. The oscillator mixer is then adjusted for the correct injection voltage to the video amplifier.

Equipment:

400 MHz Spectrum Analyzer HP 140T/8552/8555
 50 Ohm Termination (subminiature) HP 1250-0839
 BNC to Subminiature Adapter HP 1250-0832

Procedure:

1. Disconnect all cable connections to A4.
2. Remove the six screws holding the board down and remove A4.
3. Place a piece of insulating material across the top of the instrument and set A4 on it. Reconnect the -6.3V and +20V wires and the VTO INPUT cable.
4. Connect the 50 ohm termination to the AM INPUT jack on A4.
5. Connect 400 MHz spectrum analyzer to the 200 MHz OUTPUT jack on A4.

NOTE

Adjustment of A4A1L5 can be critical. When not properly tuned, the 200 MHz signal level is very low.

ADJUSTMENTS

5-8. Crystal Oscillator Adjustment (Cont)

6. Adjust 200 MHz amplitude peaking ADJ A4A1L5 for $-2 \text{ dBm} \pm 2 \text{ dB}$.

NOTE

It may be necessary to change the value of resistor A4A1R7 to change the 200 MHz signal level (any increase in resistor resistance will decrease signal level).

7. Disconnect 400 MHz spectrum analyzer from the 200 MHz OUTPUT jack and connect it to the 0 - 110 MHz OUTPUT jack on A4. Reconnect the 200 MHz OUTPUT cable. Disconnect the TUNING VOLTAGE cable connection from the A5 VTO assembly.
8. Adjust 0 - 110 MHz amplitude peaking ADJ A4A3A1L3 for maximum output on the spectrum analyzer. (Minimum output level should be at least -30 dBm).
9. Re-install A4 board and restore all A4 and A5 connections.

5-9. VTO Adjustment

Description:

The voltage-tuned oscillator is adjusted to give frequency coverage over the entire range of the instrument.

Equipment:

Counter/Marker Generator	HP 8600A
Subminiature 50 ohm Termination	HP 1250-0839

Procedure:

1. Disconnect TUNING VOLTAGE cable from A5.
2. Set 8601A RANGE to 110 and connect counter to 8601A AUX OUT.
3. Counter indication should be $11.9 \pm 0.1 \text{ MHz}$ ($119 \pm 1 \text{ MHz}$ when using HP Model 8600A). If necessary, adjust HIGH FREQ ADJ, A5A1R13.

NOTE

Frequency decreases about 5 MHz if VTO assembly is removed from module box.

4. Attach 50 ohm termination to the TUNING VOLTAGE jack on A5 VTO assembly.
5. Counter indication should be $100 \pm 10 \text{ kHz}$ ($1 \pm 0.1 \text{ MHz}$ when using HP Model 8600A). If necessary, adjust LOW FREQ ADJUST A5A1R11.
6. Remove 50 ohm termination from TUNING VOLTAGE jack and restore all A5 connections.

ADJUSTMENTS

PEAK OUTPUT POWER ADJUSTMENT

5-10. Loop Amplifier Adjustment

Description:

The loop amplifier mixer is adjusted for maximum output.

Equipment:

110 MHz Spectrum Analyzer HP 140T/8552/8553
 BNC to Subminiature Adapter HP 1250-0832

Procedure:

1. Set controls as follows:

8601A
 SWEEP MODE FREE/SLOW CW/SWEEP FULL
 RANGE 110 FREQUENCY 110 MHz

2. Disconnect all connections to A3.

3. Remove the six screws holding the board down and remove A3.

4. Place a piece of insulating material across the top, set A3 on it, and reconnect all cables and wires except for the 0 – 110 MHz OUTPUT cable.

NOTE

Disconnect TUNING VOLTAGE cable connection from A5 VTO assembly.

5. Connect 110 MHz spectrum analyzer to the 0 – 110 MHz OUTPUT jack on A3.

6. Adjust amplitude peaking ADJ A3A2A1L3 for maximum power on spectrum analyzer. (Minimum output level should be at least +2 dBm).

7. Re-install A3 board and restore all A3 and A5 cable connections.

FREQUENCY ACCURACY ADJUSTMENTS

5-11. Discriminator and DC Amplifier Adjustments

Description:

The discriminator and dc amplifier are adjusted to produce the correct output frequency for a given dial setting.

Equipment:

Counter/Marker Generator HP 8600A

Procedure:

1. Set the 8601A front panel controls as follows:

CW/SWEEP CW FREQUENCY 110 MHz
 RANGE 110 OUTPUT LEVEL 0 dBm

ADJUSTMENTS

5-11. Discriminator and DC Amplifier Adjustments (Cont)

2. Connect counter to the 8601A AUX OUT jack.
 3. Adjust SLOPE ADJUST A1A1C6 for 11 MHz counter reading ± 0.12 MHz (110 MHz ± 1.2 MHz counter reading on 8600A).
 4. Set 8601A FREQUENCY control to 1.0 MHz.
 5. Adjust FREQUENCY OFFSET ADJUST A1A1R29 for 100 kHz counter reading ± 11 kHz (1 MHz ± 110 kHz counter reading on 8600A).
 6. Set 8601A RANGE switch to 11.
 7. Set FREQUENCY control to 11 MHz.
 8. Re-adjust A1A1C6 (if necessary) for 11 MHz counter reading ± 0.12 MHz.
 9. Set FREQUENCY control to 0.1 MHz.
 10. Re-adjust A1A1R29 (if necessary) for 100 kHz counter reading ± 11 kHz.
 11. Repeat steps 3 through 10 until no further adjustment is required.
-

5-12. ALC Balance Adjustment

Description:

The ALC loop is adjusted for a swept leveled output across the band.

Equipment:

Oscilloscope HP 180A/1803A/1820A RF Detector HP 8471A

Procedure:


1. Connect 8601A RF OUT to oscilloscope vertical input via rf detector and SWEEP OUT to horizontal input. Set oscilloscope for external horizontal sweep and a vertical sensitivity of 0.2 V/div. Establish a 0 volt base-line at the center of the oscilloscope display.

2. Set 8601A controls as follows:

CW/SWEEP	FULL	TRIG/LINE/FREE	FREE
FAST/SLOW/MANUAL	FAST	OUTPUT LEVEL	+10 dBm

3. If necessary, slowly turn OUTPUT LEVEL VERNIER counterclockwise until power output is leveled across the band as shown in Figure 5-1.

ADJUSTMENTS

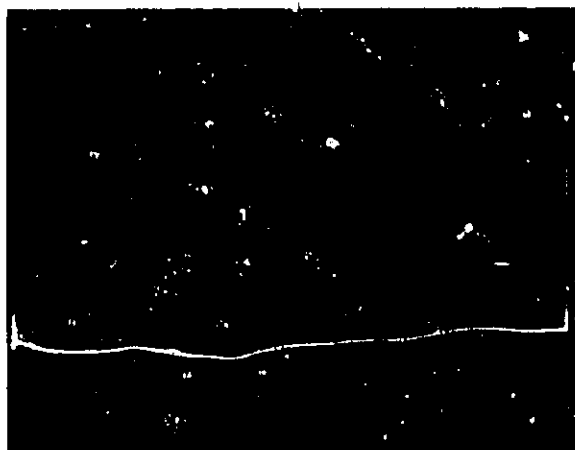

UNLEVELED




LEVELED

Figure 5-1. Oscilloscope Displays of 8601A RF Output Power

4. Adjust ALC BALANCE ADJUST A9R136 to obtain a flat RF blanking level (top line) across the band as shown in Figure 5-2.



INCORRECT

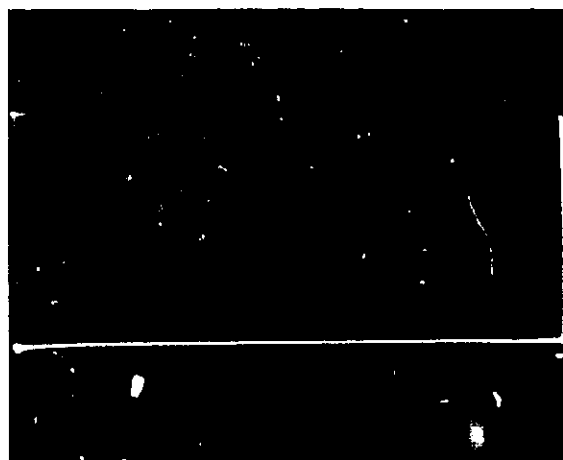

CORRECT

Figure 5-2. Oscilloscope Displays of Correct and Incorrect ALC Balance Adjustment

ADJUSTMENTS

5-13. Modulation Rate Adjustment

Description:

The modulation is adjusted for a 1 kHz rate (400 Hz for Option 005 instruments).

Equipment:

Counter/Marker Generator HP 8600A

Procedure:

1. Connect counter to A9TP4.
2. Set 8601A 1 kHz MOD switch to FM.
3. Adjust FREQ ADJ A9R160 for a 1 kHz counter reading (400 Hz for Option 005 instruments).

5-14. FM Adjustment

Description:

The correct FM deviation is adjusted using a calibrated FM discriminator (demodulator) and a monitoring oscilloscope.

Equipment:

Frequency Meter HP 5210A 50 Ohm Termination HP 1250-0207*
Oscilloscope HP 180A/1803A/1820A BNC Tee Connector HP 1250-0781

NOTE

*75 ohm termination for instrument options 008, 009 and 010.

Procedure:

1. Connect equipment as shown in Figure 5-3.

NOTE

For instrument Options 008, 009 and 010 use 75 ohm termination.

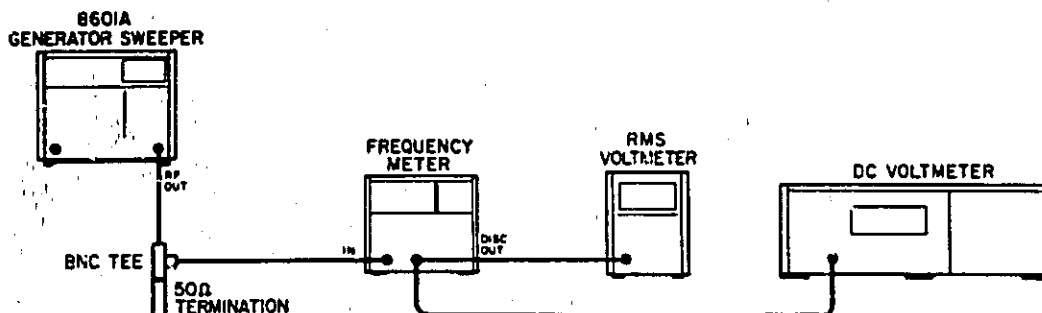


Figure 5-3. Internal FM Adjustment Setup

ADJUSTMENTS

5-14. FM Adjustment (Cont)

2. Calibrate frequency meter as follows:

- a. Install the internal shorting board into the Model 5210A frequency meter.
- b. Set the SENSITIVITY (VOLTS RMS) switch to the CAL (100 kHz) position and the RANGE switch to the 100 kHz position. The meter should display a full scale indication; if not, adjust the screwdriver CAL (100 kHz) control as necessary.
- c. Adjust the rear panel DISC GAIN control for 1 Vdc at the DISC OUT jack.
- d. Reset the SENSITIVITY (VOLTS RMS) switch to 0.1 Vrms.

3. Set controls as follows:

8601A

TRIG/LINE/FREE	FREE	CW/SWEEP	SYM
FAST/SLOW/MANUAL	FAST	1 kHz MOD	FM (or
SYM SWEEP WIDTH	0		FM 30 kHz)
RANGE	110	OUTPUT LEVEL	+10 dBm
FREQUENCY	10 MHz		

NOTE

For option 001, 002 and 011 instruments adjust MOD knob full clockwise.

Frequency Meter

SENSITIVITY (VOLTS RMS) 0.1 Vrms RANGE 10 MHz

Oscilloscope

VERTICAL SENSITIVITY . . . 5 mV/cm HORIZONTAL TIME/DIVISION . . 0.5 ms/div

- 4. Install 100 kHz low pass filter (HP 10531A) in the Model 5210A frequency meter in place of the internal shorting board.

NOTE

If 100 kHz low pass filter (HP 10531A) is not available, a 100 kHz low pass filter may be connected to frequency meter output while internal shorting board remains in 5210A.

- 5. Adjust 8601A FREQUENCY control for 10 MHz reading (full scale) on the frequency meter.
- 6. Adjust 8601A FM DEVIATION ADJUST A9R183 for the following rms voltmeter reading:
 - a. For all instruments (except Option 001, 002, 006 and 011 instruments): 5.3 mVrms.
 - b. For Option 001 instruments: 7.1 to 7.7 mVrms.
 - c. For Option 002 and 011 instruments: 2.8 mVrms.
 - d. For Option 006 instruments: 1.59 mVrms.

ADJUSTMENTS

5-14. FM Adjustment (Cont)

Procedure (Option 001, 002 and 011 Instruments Only):

7. Re-adjust 8601A FREQUENCY control, if necessary, for 10 MHz reading (full scale) on the frequency meter.

NOTE

For 8601A instruments Option 011, set modulation switch to FM 10 kHz.

8. Adjust MOD knob for the following rms voltmeter reading:

- a. For Option 001 instruments: 7.07 mVrms.
- b. For Option 002 instruments: 2.12 mVrms.
- c. For Option 011 instruments: 0.707 mVrms.

9. Depress MOD pushbutton and adjust FM1 ADJ (A15R22) and FM 2 ADJ (A15R1E) for an 8601A meter reading of:

- a. For Option 001 and 011 instruments: 1 on 0 — 1 volt scale.
- b. For Option 002 instruments: 3 on 0 — 3 volt scale.

5-15. AM Adjustment

Description:

The amplitude modulation percentage is adjusted using a 20 MHz oscilloscope for measurement.

Equipment:

Oscilloscope	HP 180A/1803A/182GA	50 ohm Termination	HP 1250-0207*
BNC Tee Connector	HP 1250-0781	Audio Oscillator	HP 200CD**

NOTE

*For 8601A Options 008, 009 and 010, use 75 ohm termination.

**The Audio Oscillator is required for 8601A Options 001, 002 and 011 only.

Procedure (For all Instruments except Option 011):

1. Connect 8601A RF OUT to oscilloscope vertical input using BNC Tee connector and termination at oscilloscope input.

2. Set controls as follows:

8601A CW/SWEEP CW RANGE 11 FREQUENCY 5 MHz FAST/SLOW/MANUAL FAST	TRIG/LINE/FREE FREE OUTPUT LEVEL +10 dBm MODULATION OFF (or EXT AM)
---	---

<i>Oscilloscope</i> VERTICAL SENSITIVITY 0.5 V/cm	HORIZONTAL TIME/DIVISION 0.5 ms/div
--	--

ADJUSTMENTS

5-15. AM Adjustment (Cont)

- 3. Re-adjust oscilloscope vertical sensitivity to obtain a 5 cm display.
- 4. Set modulation switch to AM.
- 5. Adjust % MOD ADJUST A9R162 for a peak-to-trough amplitude variation of 1.5 cm (1.5 cm = 30% modulation).

Procedure (Option 001, 002 and 011 Instruments Only):

- 6. Repeat steps 1 through 3.
- 7. Connect 1 kHz audio oscillator to 8601A EXT AM input and adjust oscillator output level for 1.5 cm (30%) peak-to-trough oscilloscope display.
- 8. With MOD button depressed, adjust AM ADJ A15R34 for 3.0 (30%) reading on 0 - 3 scale of 8601A meter.

5-16. Meter Adjustment

Description:

The meter sensitivity is adjusted so that the reading on the front panel meter corresponds to the actual RF power output.

Equipment:

- 110 MHz Spectrum Analyzer HP 140T/8552/8553
- 75 ohm input to 50 ohm output minimum loss pad (Option 008, 009 and 010 instruments only)

Procedure:

- 1. Connect the 110 MHz spectrum analyzer to the 8601A RF OUT jack.

NOTE

For instrument Options 008, 009 and 010, connect 75 to 50 ohm minimum loss pad between 8601A and spectrum analyzer.

- 2. Set controls as follows:

8601A		RANGE	110
CW/SWEEP	CW	FREQUENCY	60 MHz

Spectrum Analyzer

LOG REF LEVEL	+10 dBm
-------------------------	---------

- 3. Set 8601A OUTPUT LEVEL to the +10 dBm position and adjust the OUTPUT LEVEL VERNIER for a +10 dBm signal on the spectrum analyzer display.

NOTE

For Option 008, 009 and 010 instruments, spectrum analyzer display should be adjusted for a +10 dBm signal minus attenuation of 75 to 50 ohm minimum loss pad.

ADJUSTMENTS

5-16. Meter Adjustment (Cont)

4. Adjust METER ADJUST A9R131 for +10 dBm (0 dBm on 8601A meter scale).
5. Adjust 8601A OUTPUT LEVEL VERNIER for a 0 dBm signal on the spectrum analyzer display.

NOTE

For Option 008, 009 and 010 instruments, spectrum analyzer display should be adjusted for a 0 dBm signal minus attenuation of 75 to 50 ohm minimum loss pad.

6. Adjust -10 ADJUST A9R181 for 0 dBm (-10 dBm on 8601A meter scale).
 7. Repeat steps 3 through 6 until no further adjustment is required.
-

5-17. Buffer Adjustment

Description:

The buffers are adjusted for a zero offset of the summing amplifier.

Equipment:

Digital Voltmeter HP 3439A/3443A

Procedure:

1. Disconnect cable from A1J2 FREQ CONTROL jack.
 2. Set 8601A SWEEP switch to SYM.
 3. Ground test points A9TP7 and A9TP10.
 4. Connect the dc digital voltmeter to test point A9TP9.
 5. Adjust SYM Fc MIN A9R120 for 0 volt reading.
 6. Disconnect ground leads from A9TP7 and A9TP10.
 7. Ground test points A9TP8 and A9TP12.
 8. Connect the dc digital voltmeter to test point A9TP7.
 9. Adjust buffer A ADJUST A9R95 for 0 ± 1 mV reading.
 10. Connect the dc digital voltmeter to test point A9TP10.
 11. Adjust buffer B ADJUST A9R88 for 0 ± 0.5 mV reading.
 12. Remove grounds from A9TP8 and A9TP12.
 13. Re-connect frequency control cable to A1J2.
-

ADJUSTMENTS

5-18. Dwell Time Adjustment

Description:

The dwell time (horizontal length before and after each ramp), is adjusted for a symmetrical sweep output display.

Equipment:

Oscilloscope HP 180A/1803A/1820A

Procedure:

1. Set controls as follows:

8601A		SWEEP MODE	FAST
CW/SWEEP	FULL	TRIG/LINE/FREE	FREE

<i>Oscilloscope</i>		HORIZONTAL	
VERTICAL SENSITIVITY	1 V/cm	TIME/DIVISION	5 ms/div

2. Connect oscilloscope to 8601A front panel SWEEP OUT jack.
3. Adjust DWELL TIME ADJUST A9R20 for a symmetrical dwell time on the oscilloscope display.

5-19. Symmetrical Sweep Center Frequency Adjustment

Description:

The symmetrical sweep controls are adjusted for a minimum frequency shift across the band when switching from CW to SYM.

Equipment:

Counter/Marker Generator HP 8600A

Procedure:

1. Set 8601A controls as follows:

CM/SWEEP	CW	RANGE	110
SYM SWEEP WIDTH	0	FREQUENCY	1.0 MHz

2. Connect the counter to the front panel AUX OUT jack and note counter reading.
3. Set CW/SWEEP switch to SYM and adjust SYM Fc MIN A9R120 to obtain the same counter reading as in CW (step 2).
4. Set CW/SWEEP switch back to CW.
5. Set FREQUENCY control to 50 MHz and note counter reading.
6. Set CW/SWEEP switch back to SYM and adjust SYM Fc MAX A9R117 to obtain the same counter reading as in CW (step 5).
7. Set CW/SWEEP switch back to CW.

ADJUSTMENTS

5-19. Symmetrical Sweep Center Frequency Adjustment (Cont)

8. Set FREQUENCY control to 110 MHz and record counter reading.
 9. Set CW/SWEEP switch to SYM and record counter reading.
 10. Compute:

$$\frac{(\text{freq in CW}) - (\text{freq in SYM})}{(\text{freq in CW})}$$
 11. Repeat steps 3 through 10 until answer is less than 0.5% (550 kHz).
 12. Repeat steps 3 through 11 until no further adjustment is required.
-

5-20. Sweep Width Adjustment

Description:

The symmetrical sweep circuitry is adjusted for a calibrated symmetrical sweep about the center frequency. The video sweep circuitry is adjusted for a minimum frequency shift when switching from VIDEO to CW mode.

Equipment:

Counter/Marker Generator HP 8600A

Procedure:

1. Set 8601A controls as follows:

CW SWEEP	SYM	RANGE	11
SYM SWEEP WIDTH	0	SWEEP MODE	MANUAL

2. Connect the counter to the front panel AUX OUT jack.
3. Tune 8601A FREQUENCY control for 5 MHz counter reading.
4. Set SYM SWEEP WIDTH to 1 MHz position (blue numbers).
5. Note frequency change on counter while rotating MANUAL control from fully clockwise to fully counterclockwise position. Adjust Δ SYM adjust A9R71 for a total frequency change of 1 MHz.
6. With MANUAL control fully counterclockwise, adjust the SYM CAL adjust A9R76 for a counter reading of 4.500 MHz. Rotate MANUAL control fully clockwise and counter should indicate 5.500 MHz.

NOTE

These two adjustments interact, so repeat steps 5 and 6 until no further adjustment is required.

7. Set 8601A CW/SWEEP to CW and note counter reading.
-

ADJUSTMENTS

5-20. Sweep Width Adjustment (Cont)

8. Turn MANUAL control full clockwise. Set CW/SWEEP to VIDEO and adjust VIDEO SWEEP STOP adjust A9R24 to obtain same counter reading as in CW (step 7).

9. Set CW/SWEEP back to CW and tune FREQUENCY to 0.1 MHz. Note counter reading.

10. Set CW/SWEEP to VIDEO and adjust VIDEO START adjust A9R34 to obtain same counter reading as in CW (step 9).

11. Repeat steps 7 through 10 until no further adjustment is required.

PARTS LIST

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replaceable parts. Table 6-1 gives the meanings of the abbreviations and reference designations used in the table of replaceable parts.

6-3. Table 6-2 is the table of replaceable parts and is organized as follows:

1. Electrical assemblies and their component parts in alpha-numerical order by reference designation.

2. Chassis parts in alpha-numerical order by reference designation.

3. Miscellaneous parts.

4. Illustrated parts breakdown, if appropriate.

6-4. The information given for each part consists of:

1. The Hewlett-Packard part number.
2. The part number check digit.

3. Total quantity (TQ) in the instrument. Total quantity for each part is given only once — at the first appearance of the part number.

4. Description of the part.

5. Typical manufacturer of the part, in a five-digit code.

6. The manufacturer's number for the part.

6-5. Table 6-3 contains the names and addresses that correspond to the manufacturer's code numbers.

6-6. ORDERING INFORMATION

6-7. To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-8. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

Table 6-1. Reference Designators and Abbreviations

REFERENCE DESIGNATORS							
A	= assembly	F	= fuse	P	= plug	V	= vacuum tube, neon bulb, photocell, etc.
B	= motor	FL	= Filter	Q	= transistor	VR	= voltage regulator
BT	= battery	J	= jack	R	= resistor	W	= cable
C	= capacitor	K	= relay	RT	= thermistor	X	= socket
CP	= coupler	L	= inductor	S	= switch	Y	= crystal
CR	= diode	LS	= loud speaker	T	= transformer	Z	= tuned cavity, network
DL	= delay line	M	= meter	TB	= terminal board		
DS	= device signaling (lamp)	MK	= microphone	TP	= test point		
E	= misc electronic part	MP	= mechanical part	U	= integrated circuit		

ABBREVIATIONS							
A	= amperes	H	= henries	N/O	= normally open	RMO	= rack mount only
AFC	= automatic frequency control	HDW	= hardware	NOM	= nominal	RMS	= root-mean square
AMPL	= amplifier	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	RWV	= reverse working voltage
BFO	= beat frequency oscillator	HG	= mercury			S-B	= slow-blow
BE CU	= beryllium copper	HR	= hour(s)	NPN	= negative-positive-negative	SCR	= screw
BH	= binder head	Hz	= Hertz	NRFR	= not recommended for field replacement	SE	= selenium
BP	= bandpass	IF	= intermediate freq			SECT	= section(s)
BRS	= brass	IMPG	= impregnated	NSR	= not separately replaceable	SEMICON	= semiconductor
BWO	= backward wave oscillator	INCD	= incandescent			SI	= silicon
		INCL	= include(s)	OBD	= order by description	SIL	= silver
		INS	= insulation(ed)	OH	= oval head	SL	= slide
		INT	= internal	OX	= oxide	SPG	= spring
CCW	= counterclockwise	K	= kilo = 1000			SPL	= special
CER	= ceramic	LH	= left hand			SST	= Stainless steel
CMO	= cabinet mount only	LIN	= linear taper	P	= peak	SR	= split ring
COEF	= coefficient	LK WASH	= lock washer	PC	= printed circuit	STL	= steel
COM	= common	LOG	= logarithmic taper	PF	= picofarads = 10 ⁻¹² farads		
COMP	= composition	LPF	= low pass filter	PH BRZ	= phosphor bronze	TA	= tantalum
COMPL	= complete			PHL	= Phillips	TD	= time delay
CONN	= connector	M	= milli = 10 ⁻³	PIV	= peak inverse voltage	TGL	= toggle
CP	= cadmium plate	MEG	= meg = 10 ⁶	PNP	= positive-negative-positive	THD	= thread
CRT	= cathode-ray tube	MET FLM	= metal film			TI	= titanium
CW	= clockwise	MET OX	= metallic oxide	P/O	= part of	TOL	= tolerance
DEPC	= deposited carbon	MFR	= manufacturer	POLY	= polystyrene	TRIM	= trimmer
DR	= drive	MIHz	= mega Hertz	PORC	= porcelain	TWT	= traveling wave tube
ELECT	= electrolytic	MINAT	= miniature	POS	= position(s)		
ENCAP	= encapsulated	MOM	= momentary	POT	= potentiometer	μ	= micro = 10 ⁻⁶
EXT	= external	MOS	= metalized substrate mounting	PP	= peak-to-peak	VAR	= variable
F	= farads	MTG	= "mylar"	PT	= point	VDCW	= dc working volts
FH	= flat head	MY		PWV	= peak working voltage		
FIL H	= Fullster head	N	= nano (10 ⁻⁹)			W/	= with
FXD	= fixed	N/C	= normally closed	RECT	= rectifier	W	= watts
G	= giga (10 ⁹)	NE	= neon	RF	= radio frequency	WIV	= working inverse voltage
GE	= germanium	NI PL	= nickel plate	RH	= round head or right hand	WW	= wirewound
GL	= glass					W/O	= without
GRD	= ground(ed)						

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	08601-6072	0	1	DISCRIMINATOR ASSEMBLY (INCL C1-C4, J1-J3, A1A1 ABBY & COVER)	28480	08601-6072
A1	08601-6051	6	1	DISCRIMINATOR ASSEMBLY (OPT. 001, 002, 011 ONLY)	28480	08601-6051
A1	08601-2027	1	1	(INCL C1-C4, J1-J4, A1A1 ABBY & COVER)	28480	08601-2027
A1	08601-2017	0	1	FRONT PANEL-DISC ASSEMBLY BOX-DISC ASSEMBLY	28480	08601-2017
A1C1	0160-2152	7	1	CAPACITOR-PDTHRU 10PF 20% 500V CER	28480	0160-2152
A1C2	0160-2049	1	20	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XSV0-5022
A1C3	0160-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XSV0-5022
A1C4	0160-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XSV0-5022
A1J1	1250-0829	3	23	CONNECTOR-RF 5HC M 8GL-HOLE-PR 50-OHM	28480	1250-0829
A1J2	1250-0829	3	1	CONNECTOR-RF 5HC M 8GL-HOLE-PR 50-OHM	28480	1250-0829
A1J3	1250-0829	3	1	CONNECTOR-RF 5HC M 8GL-HOLE-PR 50-OHM	28480	1250-0829
A1J4	1250-0829	3	1	CONNECTOR-RF 5HC M 8GL-HOLE-PR 50-OHM (OPT. 001, 002, 011 ONLY)	28480	1250-0829
A1A1	08601-6042	7	1	BOARD ASSEMBLY-DISCRIMINATOR/DC AMPL.	28480	08601-6042
A1A1C1	0180-0116	1	4	CAPACITOR-PXD 6.8UF +-10% 35VDC TA	56289	150068X903582
A1A1C2	0180-0116	1	4	CAPACITOR-PXD 6.8UF +-10% 35VDC TA	56289	150068X903582
A1A1C3	0180-2327	0	3	CAPACITOR-PXD 1000PF +-20% 100VDC CER	51442	150-110-X5R-102M
A1A1C4	0180-2262	0	2	CAPACITOR-PXD 16PF +-5% 300VDC CER 0+-30	28480	0180-2262
A1A1C5	0180-2262	0	2	CAPACITOR-PXD 16PF +-5% 300VDC CER 0+-30	28480	0180-2262
A1A1C6	0180-0452	4	1	CAPACITOR-V TMR-AIR 1.3-5.0PF 250V	74970	187-0103-005
A1A1C7	0180-0291	3	8	CAPACITOR-PXD 10UF +-10% 35VDC TA	56289	1500103X903582
A1A1C8	0140-0161	4	2	CAPACITOR-PXD .01UF +-10% 200VDC POLYE	28480	0180-0161
A1A1C9	0140-0298	8	2	CAPACITOR-PXD 1500PF +-10% 200VDC POLYE	28480	0180-0298
A1A1C10	0140-2201	7	3	CAPACITOR-PXD 51PF +-5% 300VDC MICA	28480	0180-2201
A1A1C11	0180-0303	8	1	CAPACITOR-PXD .15UF +-10% 200VDC POLYE	28480	0180-0303
A1A1C12	0180-0161	8	3	CAPACITOR-PXD 3.3UF +-10% 35VDC TA	00908	71108335X03582
A1A1C13	0180-0116	1	1	CAPACITOR-PXD 6.8UF +-10% 35VDC TA	56289	150068X903582
A1A1C14	1901-0535	9	3	DIODE-SEMOTTRY	28480	1901-0535
A1A1C15	1901-0535	9	3	DIODE-SEMOTTRY	28480	1901-0535
A1A1C16	1901-0535	9	3	DIODE-SEMOTTRY	28480	1901-0535
A1A1C17	1902-3149	9	1	DIODE-ZNR 9.0V 5% 00-7 PDM AN TC0-.057X	28480	1902-3149
A1A1C18	1901-0033	2	43	DIODE-GEN PRP 180V 200MA 00-7	28480	1901-0033
A1A1M1	0490-0399	9	2	RELAY-NEED 1A 100MA 12VDC-COIL 3VA	28480	0490-0399
A1A1L1	9100-1618	1	3	COIL-WLD 5.0UM 10% 0045 .1550X.375LG-NOM	28480	9100-1618
A1A1L2	9100-1618	1	3	COIL-WLD 5.0UM 10% 0045 .1550X.375LG-NOM	28480	9100-1618
A1A1O1	1853-0422	0	2	TRANSISTOR PNP 2N4033 BI TO-39 PD800MH	01295	2N4033
A1A1O2	1854-0071	7	38	TRANSISTOR NPN BI PD8300MH FT8200MHZ	28480	1854-0071
A1A1O3	1853-0422	0	4	TRANSISTOR PNP 2N4033 BI TO-39 PD800MH	01295	2N4033
A1A1O4	1853-0020	8	9	TRANSISTOR PNP BI PD8300MH FT8150MHZ	28480	1853-0020
A1A1O5	1853-0221	9	6	TRANSISTOR-DUAL NPN PD8750MH	28480	1853-0221
A1A1O6	1854-0071	7	1	TRANSISTOR NPN BI PD8300MH FT8200MHZ	28480	1854-0071
A1A1O7	1854-0071	7	1	TRANSISTOR NPN BI PD8300MH FT8200MHZ	28480	1854-0071
A1A1O8	1853-0075	9	1	TRANSISTOR-DUAL PNP PD8800MH	28480	1853-0075
A1A1O9	1854-0009	1	5	TRANSISTOR NPN BI PD8300MH FT8600MHZ	04713	2N709
A1A1O10	1854-0009	1	1	TRANSISTOR NPN BI PD8300MH FT8600MHZ	04713	2N709
A1A1O11	1854-0009	1	1	TRANSISTOR NPN BI PD8300MH FT8600MHZ	04713	2N709
A1A1O12	1854-0071	7	1	TRANSISTOR NPN BI PD8300MH FT8200MHZ	28480	1854-0071
A1A1R1	0757-0346	2	8	RESISTOR 10 1% .125W F TC00+-100	24546	C4-1/8-T0-10R0-F
A1A1R2	0757-0346	2	2	RESISTOR 10 1% .125W F TC00+-100	24546	C4-1/8-T0-10R0-F
A1A1R3	0698-3440	7	3	RESISTOR 10K 1% .125W F TC00+-100	24546	C4-1/8-T0-10K0-F
A1A1R4	0698-3410	1	2	RESISTOR 3.16K 1% .125W F TC00+-100	24546	0698-3410
A1A1R5	0698-0311	3	1	RESISTOR 1K 1% .125W F TC00+-25 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	28480	0698-0311
A1A1R6	0698-0319	5	1	RESISTOR 300 1% .125W F TC00+-25 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	03888	PHE53-1/8-T0-300R-F
A1A1R7	0698-3274	5	1	RESISTOR 10K 1% .125W F TC00+-25 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	28480	0698-3274
A1A1R8	0757-0428	1	6	RESISTOR 1.02K 1% .125W F TC00+-100 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	24546	C4-1/8-T0-1021-F
A1A1R9	0698-0082	7	5	RESISTOR 400 1% .125W F TC00+-100 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	24546	C4-1/8-T0-4000-F
A1A1R10	0757-0421	4	2	RESISTOR 825 1% .125W F TC00+-100 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	24546	C4-1/8-T0-825R-F
A1A1R11	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1101-F
A1A1R12	0698-5674	3	1	RESISTOR 5.02K 1% .125W F TC00+-25 (SPEC. TEMP. COEFFICIENT OF 25 PPM/C.)	28480	0698-5674
A1A1R13	0698-5133	9	1	RESISTOR 3.16K 1% .125W F TC00+-25	28480	0698-5133
A1A1R14	0757-0419	0	8	RESISTOR 881 1% .125W F TC00+-100	24546	C4-1/8-T0-881R-F
A1A1R15	0757-0419	0	8	RESISTOR 881 1% .125W F TC00+-100	24546	C4-1/8-T0-881R-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1A1R16	0757-0019	0		RESISTOR 681 1% .125W F TC00+-100	24546	C0=1/8-T0-681R-F
A1A1R17	0757-0022	9	42	RESISTOR 10K 1% .125W F TC00+-100	24546	C0=1/8-T0-1002-F
A1A1R18-				NOT ASSIGNED		
A1A1R25				RESISTOR 100K 1% .125W F TC00+-100	24546	C0=1/8-T0-1003-F
A1A1R26	0757-0465	6	12	RESISTOR 51.1 1% .125W F TC00+-100	24546	C0=1/8-T0-51R1-F
A1A1R27	0757-0394	0	10	RESISTOR 303K 1% .125W F TC00+-100	24546	0698-3459
A1A1R28	0698-3459	8	3	RESISTOR-TWRM 50K 10% C TOP ADJ 1-TWRM	24546	2100-3253
A1A1R29	2100-3253	7	2	RESISTOR 68.1K 1% .125W F TC00+-100	24546	C0=1/8-T0-6812-F
A1A1R30	0757-0461	2	1	RESISTOR 51.1 1% .125W F TC00+-100	24546	C0=1/8-T0-51R1-F
A1A1R31	0757-0394	0		RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R32	0757-0280	3	3	RESISTOR 790 1% .125W F TC00+-100	24546	C0=1/8-T0-791-F
A1A1R33	0757-0442	3	5	RESISTOR 14.7K 1% .125W F TC00+-100	24546	C0=1/8-T0-1472-F
A1A1R34	0698-3459	2	5	RESISTOR 470 1% .125W F TC00+-100	24546	C0=1/8-T0-470-F
A1A1R35	0757-0018	9	3	RESISTOR 1.33K 1% .125W F TC00+-100	24546	C0=1/8-T0-1331-F
A1A1R36	0698-3406	5	1	RESISTOR 1.33K 1% .125W F TC00+-100	24546	0698-3406
A1A1R37	0757-0280	3	3	RESISTOR 10K 1% .125W F TC00+-100	24546	C0=1/8-T0-1002-F
A1A1R38	0757-0442	9	9	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R39	0757-0280	3	7	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R40	0757-0317	7	7	RESISTOR 1.33K 1% .125W F TC00+-100	24546	C0=1/8-T0-1331-F
A1A1R41	0757-0401	0	14	RESISTOR 100 1% .125W F TC00+-100	24546	C0=1/8-T0-101-F
A1A1R42	0757-0317	7	2	RESISTOR 5.11K 1% .125W F TC00+-100	24546	C0=1/8-T0-5111-F
A1A1R43	0757-0333	2	2	RESISTOR 9.11K 1% .125W F TC00+-100	24546	0757-0333
A1A1R44	0757-0333	2	2	RESISTOR 237 1% .125W F TC00+-100	24546	0757-0333
A1A1R45	0698-3442	9	2	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-237A-F
A1A1R46	0757-0280	3	3	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R47	0757-0442	9	3	RESISTOR 10K 1% .125W F TC00+-100	24546	C0=1/8-T0-1002-F
A1A1R48	0757-0280	3	3	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R49	0757-0280	3	3	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R50	0757-0317	7	7	RESISTOR 1.33K 1% .125W F TC00+-100	24546	C0=1/8-T0-1331-F
A1A1R51	0757-0280	3	3	RESISTOR 1K 1% .125W F TC00+-100	24546	C0=1/8-T0-1001-F
A1A1R52	0698-3260	9	2	RESISTOR 464K 1% .125W F TC00+-100	24546	0698-3260
A1A1R53	0698-3459	7	2	RESISTOR 368K 1% .125W F TC00+-100	24546	0698-3459
A2	08601-00117	5	1	DIVIDER ASSEMBLY (INCL C1-C4, J1-J3, A2A1 ASBY & COVER)	24480	08601-00117
A2	08601-20099	8	1	FRONT PANEL-DIVIDER ASSEMBLY	24480	08601-20099
A2	08601-2016	8	3	BOX-SMELD	24480	08601-2016
ARC1	0100-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-25V0-502Z
ARC2	0100-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-25V0-502Z
ARC3	0100-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-25V0-502Z
ARC4	0100-2049	1	1	CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-25V0-502Z
A2J1	1250-0029	3	3	CONNECTOR-RP SMC W 8BL-HOLE-PR 50-DMM	24480	1250-0029
A2J2	1250-0029	3	3	CONNECTOR-RP SMC W 8BL-HOLE-PR 50-DMM	24480	1250-0029
A2J3	1250-0029	3	3	CONNECTOR-RP SMC W 8BL-HOLE-PR 50-DMM	24480	1250-0029
A2A1	08601-00116	4	1	BOARD ASSEMBLY-DIVIDER	24480	08601-00116
A2A1C1	0100-0197	8	13	CAPACITOR-FXD 2.2UF+-10% 20VDC 7A	56289	1500225X9020A2
A2A1C2	0100-0197	8	13	CAPACITOR-FXD 2.2UF+-10% 20VDC 7A	56289	1500225X9020A2
A2A1C3	0100-2055	9	17	CAPACITOR-FXD .01UF +80-20% 100VDC CER	24480	0100-2055
A2A1C4	0100-0197	8	13	CAPACITOR-FXD 2.2UF+-10% 20VDC 7A	56289	1500225X9020A2
A2A1C5	0100-0197	8	13	CAPACITOR-FXD 2.2UF+-10% 20VDC 7A	56289	1500225X9020A2
A2A1C6	0100-2055	9	1	CAPACITOR-FXD .01UF +80-20% 100VDC CER	24480	0100-2055
A2A1C7	0100-0127	2	3	CAPACITOR-FXD 1UF +-20% 25VDC CER	24480	0100-0127
A2A1C8	0100-0127	2	3	CAPACITOR-FXD 1UF +-20% 25VDC CER	24480	0100-0127
A2A1C9	0100-2055	9	1	CAPACITOR-FXD .01UF +80-20% 100VDC CER	24480	0100-2055
A2A1C10	0100-0198	5	1	CAPACITOR-FXD 200PF +-5% 300VDC NICA	72136	0M197201J03004V1CR
A2A1C11	0100-0197	8	5	CAPACITOR-FXD 2.2UF+-10% 20VDC 7A	56289	1500225X9020A2
A2A1C12	0100-0374	3	5	CAPACITOR-FXD 10UF+-10% 20VDC 7A	56289	1500104X9020B2
A2A1C13	0100-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	24480	0100-0127
A2A1C14	1901-0743	1	4	DIODE-PWR RECT 1N4004 400V 1A DO-41	01295	1N4004
A2A1C15	1901-0743	1	4	DIODE-PWR RECT 1N4004 400V 1A DO-41	01295	1N4004
A2A1C16	1901-0743	1	4	DIODE-PWR RECT 1N4004 400V 1A DO-41	01295	1N4004
A2A1C17	1901-0743	1	4	DIODE-PWR RECT 1N4004 400V 1A DO-41	01295	1N4004
A2A1L1	9100-0368	6	5	COIL-MLD 330HM 10K 0.925 .0950X.25LG-NOM	24480	9100-0368
A2A1L2	9100-0237	2	3	COIL-MLD 200HM 5K 0.645 .1550X.375LG-NOM	24480	9100-0237
A2A1L3	9100-1618	1	1	COIL-MLD 5.6UM 10K 0.645 .1550X.375LG-NOM	24480	9100-1618
A2A1L4	9100-1624	9	1	COIL-MLD 30UM 5K 0.645 .1550X.375LG-NOM	24480	9100-1624
A2A1O1	1853-0034	0	2	TRANSISTOR PNP BI TO-18 PD300HM	24480	1853-0034
A2A1O2	1853-0034	0	2	TRANSISTOR PNP BI TO-18 PD300HM	24480	1853-0034
A2A1O3	1853-0345	8	13	TRANSISTOR NPN 2N5179 BI TO-7E PD200HM	08753	2N5179
A2A1R1	0757-0394	5	2	RESISTOR 82.5 1% .125W F TC00+-100	24546	C0=1/8-T0-82R5-F
A2A1R2	0698-3444	1	3	RESISTOR 510 1% .125W F TC00+-100	24546	C0=1/8-T0-510-F
A2A1R3	0757-0394	0	0	RESISTOR 51.1 1% .125W F TC00+-100	24546	C0=1/8-T0-51R1-F
A2A1R4	0757-0394	0	0	RESISTOR 51.1 1% .125W F TC00+-100	24546	C0=1/8-T0-51R1-F
A2A1R5	0698-3441	8	7	RESISTOR 215 1% .125W F TC00+-100	24546	C0=1/8-T0-215R-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2A1R6	0698-3432	7	1	RESISTOR 20.1 1% .125W F TC90+-100	03888	PH855-1/8-T0-20R1-F
A2A1R7	0757-0280	3	48	RESISTOR 1K 1% .125W F TC90+-100	24546	C4-1/8-T0-1001-F
A2A1R8	0698-3444	1		RESISTOR 316 1% .125W F TC90+-100	24546	C4-1/8-T0-316-F
A2A1R9	0757-0280	3		RESISTOR 1K 1% .125W F TC90+-100	24546	C4-1/8-T0-1001-F
A2A1R10	0698-3432	7		RESISTOR 20.1 1% .125W F TC90+-100	03888	PH855-1/8-T0-20R1-F
A2A1R11	0698-3441	8		RESISTOR 215 1% .125W F TC90+-100	24546	C4-1/8-T0-215-F
A2A1R12	0757-0280	3		RESISTOR 1K 1% .125W F TC90+-100	24546	C4-1/8-T0-1001-F
A2A1R13	0757-0306	2		RESISTOR 10 1% .125W F TC90+-100	24546	C4-1/8-T0-10R1-F
A2A1R14	0757-0401	0		RESISTOR 100 1% .125W F TC90+-100	24546	C4-1/8-T0-101-F
A2A1R15	0757-0442	0		RESISTOR 10K 1% .125W F TC90+-100	24546	C4-1/8-T0-10K2-F
A2A1R16	0757-0280	3		RESISTOR 1K 1% .125W F TC90+-100	24546	C4-1/8-T0-1001-F
A2A1U1	1820-1383	5	1	IC CNTR ECL BCD POS-EDGE-TRIG	04713	MC10138L
A2A1U2	1820-0167	7	1	IC PP TTL M J-K M/S PULSE PRESET/CLEAR	01845	SN74M72M
A2A1V4	1902-3024	9	1	DIODE-ZNR 2.87V 5% 00-7 PGM,4M TC90-.07%	28480	1902-3024
A3	08601-0003	5	1	LOOP AMPLIFIER ASSEMBLY (DOES NOT INCLUDE A3A1E1) (INCL C1-C4, J1-J4, A3A1, A3A2 ASSY & COVER)	28480	08601-0003
A3	08601-2029	5	1	FRONT PANEL-LOOP AMPLIFIER ASSEMBLY	28480	08601-2029
A3	08601-2016	8		BOX-EMILEO	28480	08601-2016
A3	08698-0013	5	2	COVER-CAN BOTTOM	28480	08698-0013
A3C1	0180-2049	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XEVC-502Z
A3C2	0180-2049	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XEVC-502Z
A3C3	0180-2049	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XEVC-502Z
A3C4	0180-2049	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	54-743-009-XEVC-502Z
A3J1	1250-0829	3		CONNECTOR-RF 5MC M 8GL-MOLE-FR 50-OHM	28480	1250-0829
A3J2	1250-0829	3		CONNECTOR-RF 5MC M 8GL-MOLE-FR 50-OHM	28480	1250-0829
A3J3	1250-0829	3		CONNECTOR-RF 5MC M 8GL-MOLE-FR 50-OHM	28480	1250-0829
A3J4	1250-0829	3		CONNECTOR-RF 5MC M 8GL-MOLE-FR 50-OHM	28480	1250-0829
A3A1	08601-0023	7	1	BOARD ASSEMBLY-LOOP AMPLIFIER (DOES NOT INCLUDE A3A1E1)	28480	08601-0023
A3A1C1	0180-2150	3		CAPACITOR-FXD 1UF +-10% 35VDC TA	56289	150D105X9035A2
A3A1C2	0180-2150	5	3	CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0180-2150
A3A1C3	0180-2200	8	2	CAPACITOR-FXD 43PF +-5% 300VDC MICA	28480	0180-2200
A3A1C4	0180-0191	6	3	CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	0155E90J0300V1CR
A3A1C5	0180-2200	6		CAPACITOR-FXD 43PF +-5% 300VDC MICA	28480	0180-2200
A3A1C6	0180-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0180-2150
A3A1C7	0180-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0180-2055
A3A1C8	0180-0174	9	3	CAPACITOR-FXD .87UF +80-20% 25VDC CER	28480	0180-0174
A3A1C9	0180-1735	2	7	CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C10	0180-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0180-2150
A3A1C11	0180-0174	9		CAPACITOR-FXD .87UF +80-20% 25VDC CER	28480	0180-0174
A3A1C12	0180-1735	2	2	CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C13	0180-1735	2		CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C14	0180-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0180-2055
A3A1C15	0180-2307	4	1	CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0180-2307
A3A1C16	0180-2202	8	1	CAPACITOR-FXD 75PF +-5% 300VDC MICA	28480	0180-2202
A3A1C17	0180-2210	4	1	CAPACITOR-FXD 820PF +-5% 300VDC MICA	28480	0180-2210
A3A1C18	0180-1735	2		CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C19	0180-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0180-2201
A3A1C20	0180-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0180-2055
A3A1C21	0180-2236	8	1	CAPACITOR-FXD 1PF +-25PF 500VDC CER	28480	0180-2236
A3A1C22	0180-1735	2	7	CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C23	0180-1743	2		CAPACITOR-FXD .1UF +-10% 35VDC TA	56289	150D104X9035A2
A3A1C24	0180-0153	7	3	CAPACITOR-FXD 1000PF +-10% 200VDC POLYE	28480	0180-0153
A3A1C25	0180-0153	8		CAPACITOR-FXD 1000PF +-10% 200VDC POLYE	28480	0180-0153
A3A1C26	0180-1735	2		CAPACITOR-FXD .22UF +-10% 35VDC TA	56289	150D224X9035A2
A3A1C27	0180-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0180-2055
A3A1C28	0180-0197	8	1	CAPACITOR-FXD 2.2UF +-10 20VDC	56289	150D225X902A2
A3A1C29	0180-2055	9		CAPACITOR-FXD .01UF +80-20 100VDC CER	28480	0180-2055
A3A1C30	1901-0456	3		NOT ASSIGNED		
A3A1C31	1901-0033	2	1	DIODE-SCHOTTKY	28480	1901-0033
A3A1C32	1901-0033	2		DIODE-GEN PRP 180V 200MA 00-7	28480	1901-0033
A3A1C33	1901-0033	2		DIODE-GEN PRP 180V 200MA 00-7	28480	1901-0033
A3A1E1	5086-7010	3	2	INTEGRATED CIRCUIT	28480	5086-7010
A3A1E1	5086-7111	5		REQUIRES EXCHANGE, 5086-7111 REPLACEMENT	28480	5086-7111
A3A1L1	9100-0096	1	3	COIL-MLO 1UM 10% 0-50 .155DX, 37SL6-NOM	28480	9100-0096
A3A1L2	9100-1013	6	1	COIL-MLO 870NM 20% 0-45 .155DX, 37SL6-NOM	28480	9100-1013
A3A1L3				NBR, PART OF SD, ASSY, TYPICAL VALUE 80MM		
A3A1L4				NBR, PART OF SD, ASSY, TYPICAL VALUE 80MM		
A3A1L5				NBR, PART OF SD, ASSY, TYPICAL VALUE 80MM		

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
AS1A16	9140-0096	1		W, PART OF BD. ABBY, TYPICAL VALUE 40NM	28480	9140-0096
AS1A17	9140-0096	1		COIL-MLD 1UM 10Z 0*50 .155DX, 375LG-NOM	28480	9140-0096
AS1A18	9100-1622	7	1	COIL-MLD 1UM 10Z 0*50 .155DX, 375LG-NOM	28480	9100-1622
AS1A19	9100-1610	3	1	COIL-MLD 150NM 20Z 0*50 .155DX, 375LG-NOM	28480	9100-1610
AS1A101	1854-0071	7		TRANSISTOR NPN SI PDS300MH FT200MHZ	28480	1854-0071
AS1A102	1854-0247	9	1	TRANSISTOR NPN SI T0-18 PDS1M FT200MHZ	28480	1854-0247
AS1A103	1854-0082	2	1	TRANSISTOR J-FET P-CHAN D-NOMOF SI	28480	1854-0082
AS1A104	1854-0071	7		TRANSISTOR NPN SI PDS300MH FT200MHZ	28480	1854-0071
AS1A105	1854-0071	7		TRANSISTOR NPN SI PDS300MH FT200MHZ	28480	1854-0071
AS1A1R1	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	CA-1/8-T0-1001-P
AS1A1R2	0757-0403	2	2	RESISTOR 121 1% .125W F TC00+-100	24546	CA-1/8-T0-121R-P
AS1A1R3	0698-3431	6	2	RESISTOR 23.7 1% .125W F TC00+-100	03688	PH255-1/8-T0-237R-P
AS1A1R4	0757-0346	2		RESISTOR 10 1% .125W F TC00+-100	24546	CA-1/8-T0-10R-P
AS1A1R5	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	CA-1/8-T0-1001-P
AS1A1R6	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	CA-1/8-T0-1001-P
AS1A1R7	0757-0394	0		RESISTOR 51.1 1% .125W F TC00+-100	24546	CA-1/8-T0-511R-P
AS1A1R8	0698-3441	0		RESISTOR 215 1% .125W F TC00+-100	24546	CA-1/8-T0-215R-P
AS1A1R9	0757-0401	0		RESISTOR 100 1% .125W F TC00+-100	24546	CA-1/8-T0-101-P
AS1A1R10	0698-3432	7		RESISTOR 26.1 1% .125W F TC00+-100	03688	PH255-1/8-T0-261R-P
AS1A1R11	0698-3443	0	3	RESISTOR 287 1% .125W F TC00+-100	24546	CA-1/8-T0-287R-P
AS1A1R12	0698-3136	0	1	RESISTOR 17.0K 1% .125W F TC00+-100	24546	CA-1/8-T0-170R-P
AS1A1R13	0757-0440	7	4	RESISTOR 7.5 1% .125W F TC00+-100	24546	CA-1/8-T0-75R-P
AS1A1R14	0757-0424	7	3	RESISTOR 1.1K 1% .125W F TC00+-100	24546	CA-1/8-T0-1101-P
AS1A1R15	0757-0274	5	1	RESISTOR 1.21K 1% .125W F TC00+-100	24546	CA-1/8-T0-121R-P
AS1A1R16	0757-0445	0		RESISTOR 100K 1% .125W F TC00+-100	24546	CA-1/8-T0-100K-P
AS1A1R17	0698-3240	0		RESISTOR 444K 1% .125W F TC00+-100	28480	0698-3240
AS1A1R18	0698-3458	7		RESISTOR 344K 1% .125W F TC00+-100	28480	0698-3458
AS1A1R19	0698-3193	0	2	RESISTOR 3.03K 1% .125W F TC00+-100	24546	CA-1/8-T0-3031-P
AS1A1R20	0757-0439	0	2	RESISTOR 0.61K 1% .125W F TC00+-100	24546	CA-1/8-T0-611-P
AS1A1R21	0757-0289	2	2	RESISTOR 13.3K 1% .125W F TC00+-100	19701	MFAC1/8-T0-133R-P
AS1A1R22	0698-3157	3	4	RESISTOR 19.0K 1% .125W F TC00+-100	24546	CA-1/8-T0-190R-P
AS1A1R23	0757-0442	9		RESISTOR 10K 1% .125W F TC00+-100	24546	CA-1/8-T0-100R-P
AS1A1R24	0757-0442	9		RESISTOR 10K 1% .125W F TC00+-100	24546	CA-1/8-T0-100R-P
AS1A1R25	0757-0420	3		RESISTOR 750 1% .125W F TC00+-100	24546	CA-1/8-T0-751-P
AS1A1R26	0757-0442	9		RESISTOR 10K 1% .125W F TC00+-100	24546	CA-1/8-T0-100R-P
AS1A1R27	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	CA-1/8-T0-1001-P
AS1A1R28	0698-3157	3		RESISTOR 19.0K 1% .125W F TC00+-100	24546	CA-1/8-T0-190R-P
AS1A1R29	0698-3440	7		RESISTOR 196 1% .125W F TC00+-100	24546	CA-1/8-T0-196R-P
AS1A1R30	0757-0394	0		RESISTOR 51.1 1% .125W F TC00+-100	24546	CA-1/8-T0-511R-P
AS1A1Y1	0410-0170	0	1	CRYSTAL-QUARTZ 9,000 MHZ	28480	0410-0170
AS2A2A1	08601-6001	5	2	MIXER ASSEMBLY	28480	08601-6001
AS2A2A2	08698-0007	2	2	BOX-MIXER	28480	08698-0007
AS2A2A3	08698-0009	0	2	PLATE-INSULATOR	28480	08698-0009
AS2A2A1C1	0100-0204	2	3	CAPACITOR-FXD 20PF +-5% 500VDC CER 0+-30	28480	0100-0204
AS2A2A1C2	0150-0021	4	4	CAPACITOR-FXD .077PF +-5% 500VDC T1 D10X	28480	0150-0021
AS2A2A1C3	0150-0021	4	4	CAPACITOR-FXD .077PF +-5% 500VDC T1 D10X	28480	0150-0021
AS2A2A1C4	0100-1743	2		CAPACITOR-FXD .1UF+-10% 35VDC TA	56289	1500100K903542
AS2A2A1C5	0100-0301	0	2	CAPACITOR-FXD .012UF +-10% 200VDC POLYE	28480	0100-0301
AS2A2A1C6	1901-0357	9	2	DIODE-ARRAY VF DIFFEREN	28480	1901-0357
AS2A2A1L1	9100-0368	0		COIL-MLD 330NM 10Z 0*50 .095DX, 25LG-NOM	28480	9100-0368
AS2A2A1L2	9100-0368	0		COIL-MLD 330NM 10Z 0*50 .095DX, 25LG-NOM	28480	9100-0368
AS2A2A1L3	08698-6013	1	2	COIL-VAR	28480	08698-6013
AS2A2A1L4	9140-0094	9	3	COIL-MLD 660NM 10Z 0*50 .155DX, 375LG-NOM	28480	9140-0094
AS2A2A1L5	9100-2247	0	6	COIL-MLD 180NM 10Z 0*50 .095DX, 25LG-NOM	28480	9100-2247
AS2A2A1R1		0		NOT ASSIGNED		
AS2A2A1R2	0698-3441	0		RESISTOR 215 1% .125W F TC00+-100	24546	CA-1/8-T0-215R-P
AS2A2A1Y1	08698-6012	9	2	TRANSFORMER-MIXER	28480	08698-6012
AS	08601-6004	7	1	FIXED OSCILLATOR ASSEMBLY (INCL C1, C2, J1-J3, A41-A44) ABBYS & COVER)	28480	08601-6004
AA	08601-2030	0	1	FRONT PANEL-FXD OSCILLATOR ASSEMBLY	28480	08601-2030
AB	08601-2016	0		BOX-SHIELD	28480	08601-2016
AC	08698-6013	0		COVER-CAN BOTTOM	28480	08698-6013
AD	08698-6031	3	1	BRACKET-RETAINING	28480	08698-6031
ACE1	0100-2049	1		CAPACITOR-FDTHRU 5000PF +-5% -20% 500V	33095	54-743-007-55V0-5002
ACE2	0100-2049	1		CAPACITOR-FDTHRU 5000PF +-5% -20% 500V	33095	54-743-009-55V0-5002
AEJ1	1250-0029	3		CONNECTOR-RF 5MC M 8SL-MOLE-PH 50-OHM	28480	1250-0029
AEJ2	1250-0029	3		CONNECTOR-RF 5MC M 8SL-MOLE-PH 50-OHM	28480	1250-0029
AEJ3	1250-0029	3		CONNECTOR-RF 5MC M 8SL-MOLE-PH 50-OHM	28480	1250-0029

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AAA1	08601-8024	9	1	BOARD ASSEMBLY-FIXED OSCILLATOR	28480	08601-8024
AAA1C1	0150-0050	9	24	CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
AAA1C2	0140-2327	9		CAPACITOR-FXD 1000PF +-20% 100VDC CER	51642	150-110-K5R-102M
AAA1C3	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
AAA1C4	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
AAA1C5	0140-2327	9		CAPACITOR-FXD 1000PF +-20% 100VDC CER	51642	150-110-K5R-102M
AAA1C6	0160-2253	9	1	CAPACITOR-FXD 6.2PF +-25% 500VDC CER	28480	0160-2253
AAA1C7	0150-2259	5	1	CAPACITOR-FXD 12PF +-5% 500VDC CER 0+-30	28480	0160-2259
AAA1C8	0160-2261	9	1	CAPACITOR-FXD 15PF +-5% 500VDC CER 0+-30	28480	0160-2261
AAA1C9	0160-2266	4	12	CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
AAA1C10	0160-2257	3	5	CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
AAA1C11	0160-2264	4	4	CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2264
AAA1C12	0160-2261	5	1	CAPACITOR-FXD 2.2PF +-25% 500VDC CER	28480	0160-2261
AAA1C13	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
AAA1C14	0150-2139	9	4	CAPACITOR-FXD 220PF +-80-20% 1KVDC CER	28480	0150-2139
AAA1C15	0160-2260	8	2	CAPACITOR-FXD 15PF +-5% 500VDC CER 0+-30	28480	0160-2260
AAA1C16	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
AAA1C17	0160-2260	9		CAPACITOR-FXD 15PF +-5% 500VDC CER 0+-30	28480	0160-2260
AAA1C18	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
AAA1C19	0160-2139	9		CAPACITOR-FXD 220PF +-80-20% 1KVDC CER	28480	0160-2139
AAA1C20	0160-2264	2		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2264
AAA1C21	0160-2139	0		CAPACITOR-FXD 220PF +-80-20% 1KVDC CER	28480	0160-2139
AAA1C22	0160-2257	3		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
AAA1C23	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
AAA1C24	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
AAA1C25	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
AAA1L1	9100-2249	6	2	COIL-MLD 150MH 10% Q334 .095DX,25LG-NCM	28480	9100-2249
AAA1L2	9140-0158	6	4	COIL-MLD 1UH 10% Q332 .095DX,25LG-NCM	28480	9140-0158
AAA1L3	9100-2249	6		COIL-MLD 150MH 10% Q334 .095DX,25LG-NCM	28480	9100-2249
AAA1L4	9100-2247	4		COIL-MLD 100MH 10% Q334 .095DX,25LG-NCM	28480	9100-2247
AAA1L5	08601-8004	9	1	COIL-VAR	28480	08601-8004
AAA1L6	9140-0158	6		COIL-MLD 1UH 10% Q332 .095DX,25LG-NCM	28480	9140-0158
AAA1L7	9100-2247	4		COIL-MLD 100MH 10% Q334 .095DX,25LG-NCM	28480	9100-2247
AAA1L8	9100-2247	4		COIL-MLD 100MH 10% Q334 .095DX,25LG-NCM	28480	9100-2247
AAA1L9	9140-0158	1	1	COIL-MLD 100MH 5% Q350 .153DX,37LG-NCM	28480	9140-0158
AAA1L10	9140-0158	6		COIL-MLD 1UH 10% Q332 .095DX,25LG-NCM	28480	9140-0158
AAA1L11	9140-0158	6		COIL-MLD 1UH 10% Q332 .095DX,25LG-NCM	28480	9140-0158
AAA1O1	1854-0345	8		TRANSISTOR NPN 2N5179 SI TC=72 PD=200MW	04713	2N5179
AAA1O2	1854-0345	8		TRANSISTOR NPN 2N5179 SI TC=72 PD=200MW	04713	2N5179
AAA1O3	1854-0345	8		TRANSISTOR NPN 2N5179 SI TC=72 PD=200MW	04713	2N5179
AAA1O4				NOT ASSIGNED		
AAA1O5	1854-0071	7		TRANSISTOR NPN SI PD=100MW FT=200MHZ	28480	1854-0071
AAA1O6	1854-0345	8		TRANSISTOR NPN 2N5179 SI TC=72 PD=200MW	04713	2N5179
AAA1O7	1854-0345	8		TRANSISTOR NPN 2N5179 SI TC=72 PD=200MW	04713	2N5179
AAA1R1	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24544	C4-1/8-TC-215R-F
AAA1R2	0757-0278	9	1	RESISTOR 1.74K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1741-F
AAA1R3	0757-0278	7		RESISTOR 1.74K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1741-F
AAA1R4	0698-3445	2	2	RESISTOR 340 1% .125W F TC=0+-100	24544	C4-1/8-TC-340R-F
AAA1R5	0698-0083	8	6	RESISTOR 1.94K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1941-F
AAA1R6	0698-0083	8		RESISTOR 1.94K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1941-F
AAA1R7	0757-0803	2		RESISTOR 121 1% .125W F TC=0+-100	24544	C4-1/8-TC-121R-F
AAA1R8	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1001-F
AAA1R9	0757-0394	0		RESISTOR 51.1 1% .125W F TC=0+-100	24544	C4-1/8-TC-511R-F
AAA1R10	0698-3444	1		RESISTOR 310 1% .125W F TC=0+-100	24544	C4-1/8-TC-310R-F
AAA1R11	0757-0019	0		RESISTOR 401 1% .125W F TC=0+-100	24544	C4-1/8-TC-401R-F
AAA1R12	0698-3445	2		RESISTOR 340 1% .125W F TC=0+-100	24544	C4-1/8-TC-340R-F
AAA1R13	0698-0083	8		RESISTOR 1.94K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1941-F
AAA1R14	0698-0083	8		RESISTOR 1.94K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1941-F
AAA1R15	0698-0082	7		RESISTOR 404 1% .125W F TC=0+-100	24544	C4-1/8-TC-404R-F
AAA1R16	0698-3378	0	1	RESISTOR 51.5K .125W CC TC=270+-900	01121	599105
AAA1R17	0698-3435	0	1	RESISTOR 38.3 1% .125W F TC=0+-100	24544	C4-1/8-TC-3831-F
AAA1R18	0698-3444	3		RESISTOR 303 1% .125W F TC=0+-100	24544	C4-1/8-TC-303R-F
AAA1R19	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24544	C4-1/8-TC-101-F
AAA1R20	0758-0005	0	1	RESISTOR 1K 5% .25W F TC=0+-100	24544	C4-1/8-TC-1001-J
AAA1R21	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24544	C4-1/8-TC-1001-F
AAA1R22	0698-3442	9		RESISTOR 237 1% .125W F TC=0+-100	24544	C4-1/8-TC-237R-F
AAA1R23	9100-1788	6	5	CHOKE-WIDE BAND ZMAX=800 OHMS 180 MHZ	02114	VK200 20/48
AAA1R24	9100-1788	6		CHOKE-WIDE BAND ZMAX=800 OHMS 180 MHZ	02114	VK200 20/48
AAA1R25	9100-1788	6		CHOKE-WIDE BAND ZMAX=800 OHMS 180 MHZ	02114	VK200 20/48
AAA1Y1	0410-0199	9	1	CRYSTAL-QUANTZ 200,000 MHZ	28480	0410-0199
AAA2	08698-8029	4	1	Q.C. LOW PASS FILTER ASSEMBLY	28480	08698-8029
AAA2	08698-0005	4	1	CAN-FILTER	28480	08698-0005
AAA2	08698-0008	4	1	COVER-CAN	28480	08698-0008

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AAAZJ1	1250-0826	0	1	CONNECTOR-RF SMC M 8GL-HOLE-FR 50-OHM	28480	1250-0826
AAAZA1	08698-6009	2	1	OSC. & LOW PASS FILTER BOARD ASSEMBLY	28480	08698-6009
AAAZA1C1	0140-0190	7	2	CAPACITOR-FXD 30PF +-5% 300VDC MICA	72136	DM15E560J0300HV1CR
AAAZA1C2	0140-0191	7	8	CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E560J0300HV1CR
AAAZA1C3	0160-2201	0	7	CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
AAAZA1C4	0140-0191	8	8	CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E560J0300HV1CR
AAAZA1C5	0140-0190	7	7	CAPACITOR-FXD 30PF +-5% 300VDC MICA	72136	DM15E560J0300HV1CR
AAAZA1L1				NBR,PART OF SD, ASSY-TYPICAL VALUE 60NM		
AAAZA1L2				NBR,PART OF SD, ASSY-TYPICAL VALUE 60NM		
AAAZA1L3				NBR,PART OF SD, ASSY-TYPICAL VALUE 60NM		
AAAZA1L4				NBR,PART OF SD, ASSY-TYPICAL VALUE 60NM		
AAAZA1	08601-6041	5		MIXER ASSEMBLY	28480	08601-6041
AAAZA1	08698-6007	2		BOX-MIXER	28480	08698-6007
AAAZA1	08698-6009	6		PLATE-INSULATOR	28480	08698-6009
AAAZA1C1	0160-2264	2		CAPACITOR-FXD 20PF +-5% 500VDC CER 0+-30	28480	0160-2264
AAAZA1C2	0150-0021	4		CAPACITOR-FXD .47PF +-5% 300VDC TI DIOX	28480	0150-0021
AAAZA1C3	0150-0031	4		CAPACITOR-FXD .47PF +-5% 300VDC TI DIOX	28480	0150-0031
AAAZA1C4	0180-1743	2		CAPACITOR-FXD .1UF+-10% 35VDC TA	58289	190D108X035A2
AAAZA1C5	0160-0301	8		CAPACITOR-FXD .012UF +-10% 280VDC POLYE	28480	0160-0301
AAAZA1C6	1901-0557	5		DIODE-ARRAY VP DIFF-3MV	28480	1901-0557
AAAZA1L1	9100-0368	6		COIL-MLO 330NM 10% Q28 .695DX,25LG-NOM	28480	9100-0368
AAAZA1L2	9100-0368	6		COIL-MLO 330NM 10% Q28 .695DX,25LG-NOM	28480	9100-0368
AAAZA1L3	08698-6013	1		COIL-VAR	28480	08698-6013
AAAZA1L4	9140-0094	1		COIL-MLO 800NM 10% Q50 .155DX,37LG-NOM	28480	9140-0094
AAAZA1L5	9100-2247	8		COIL-MLO 100NM 10% Q36 .695DX,25LG-NOM	28480	9100-2247
AAAZA1W1				NOT ASSIGNED		
AAAZA1W2	08698-3041	8		RESISTOR 215 1% .125W P TC60+-100	28480	08698-3041
AAAZA1T1	08698-6012	9		TRANSFORMER-MIXER	28480	08698-6012
AS	08601-6005	9	1	OSCILLATOR ASSEMBLY-VOLTAGE TUNED	28480	08601-6005
AS				(INCL C1-C6, J1-J4, AS41 ASSY & COVER)		
AS	08601-2031	0	1	FRONT PANEL-VTO ASSEMBLY	28480	08601-2031
AS	08601-2037	4	1	BOX-VTO	28480	08601-2037
ASC1	0160-2049	1		CAPACITOR-FDTHRU 5000PF +-80 -20% 500V	33095	84-743-009-X5V0-5022
ASC2	0160-2049	1		CAPACITOR-FDTHRU 5000PF +-80 -20% 500V	33095	84-743-009-X5V0-5022
ASC3	0160-2049	1		CAPACITOR-FDTHRU 5000PF +-80 -20% 500V	33095	84-743-009-X5V0-5022
ASC4	0160-2049	1		CAPACITOR-FDTHRU 5000PF +-80 -20% 500V	33095	84-743-009-X5V0-5022
ASJ1	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-FR 50-OHM	28480	1250-0829
ASJ2	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-FR 50-OHM	28480	1250-0829
ASJ3	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-FR 50-OHM	28480	1250-0829
ASJ4	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-FR 50-OHM	28480	1250-0829
ASA1	08601-6044	1	1	BOARD ASSEMBLY-VTO	28480	08601-6044
ASA1C1	0160-0194	3	1	CAPACITOR-FXD .015UF +-10% 200VDC POLYE	28480	0160-0194
ASA1C2	0140-0169	9	1	CAPACITOR-FDTHRU 5000PF 10% 500V MICA	72902	888-034-01AA-951K
ASA1C3	0160-2140	3	2	CAPACITOR-FXD 470PF +-80-20% 1KVDC CER	28480	0160-2140
ASA1C4	0160-2189	3		CAPACITOR-FXD 470PF +-80-20% 1KVDC CER	28480	0160-2140
ASA1C5	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C6	0160-2139	0		CAPACITOR-FXD 220PF +-80-20% 1KVDC CER	28480	0160-2139
ASA1C7	0160-2257	9		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
ASA1C8	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C9	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C10	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C11	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C12	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C13	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C14	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C15	0160-2257	3		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
ASA1C16	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C17	0160-2266	4		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C18	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C19	0160-2266	6		CAPACITOR-FXD 24PF +-5% 500VDC CER 0+-30	28480	0160-2266
ASA1C20	0160-2257	3		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
ASA1C21	0160-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	58289	190D108X035A2
ASA1C22	0160-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	58289	190D225X020A2
ASA1C23	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C24	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C25	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C26	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C27	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C28	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C29	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050
ASA1C30	0150-0050	9		CAPACITOR-FXD 1000PF +-80-20% 1KVDC CER	28480	0150-0050

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ASA1C31	0150-0050	9		CAPACITOR-FXD 1000PF +60-20X 1KVDC CER	28480	0150-0050
ASA1C71	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
ASA1C72	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
ASA1C73	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
ASA1C74	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
ASA1C75	0122-0274	0	1	DIODE-VVC 100PF 5% C/C00-MIN2.8 SVF=60V	28480	0122-0274
ASA1K1	0490-0399	9		RELAY-REED 1A 100MA 12VDC-COIL 3VA	28480	0490-0399
ASA1L1	08533-0015	1	1	INDUCTOR-FXD (CM) GREEN	28480	08533-0015
ASA1L2	08533-0016	3	1	INDUCTOR-FXD (CCM) BLUE	28480	08533-0016
ASA1L3	*100-1610	3		COIL-MLD 150MM 20X 0950 .155DX.375LG-NOM	28480	*100-1610
ASA1L4	*140-0094	9		COIL-MLD 480MM 10X 0950 .155DX.375LG-NOM	28480	*140-0094
ASA1L5	*100-1610	3		COIL-MLD 150MM 20X 0950 .155DX.375LG-NOM	28480	*100-1610
ASA1L6	*100-1610	3		COIL-MLD 150MM 20X 0950 .155DX.375LG-NOM	28480	*100-1610
ASA1L7	*100-1610	3		COIL-MLD 150MM 20X 0950 .155DX.375LG-NOM	28480	*100-1610
ASA1L8	*100-1610	3		COIL-MLD 150MM 20X 0950 .155DX.375LG-NOM	28480	*100-1610
ASA1O1	1858-0380	3	2	TRANSISTOR NPN 8I TC-39 PD=3.5W	08713	M48001
ASA1O2	1858-0385	0		TRANSISTOR NPN 2N5179 8I TC-72 PD=200mW	08713	2N5179
ASA1O3	1858-0380	3		TRANSISTOR NPN 8I TC-39 PD=3.5W	08713	M48001
ASA1O4	1858-0385	0		TRANSISTOR NPN 2N5179 8I TC-72 PD=200mW	08713	2N5179
ASA1O5	1858-0021	7	1	TRANSISTOR NPN 2N418 8I TC-72 PD=200mW	07263	2N418
ASA1O6	1858-0345	0		TRANSISTOR NPN 2N5179 8I TC-72 PD=200mW	08713	2N5179
ASA1O7	1858-0345	0		TRANSISTOR NPN 2N5179 8I TC-72 PD=200mW	08713	2N5179
ASA1O8	1858-0071	7		TRANSISTOR NPN 8I PD=300mW PTA=200mWZ	28480	1858-0071
ASA1O9	1858-0022	0	2	TRANSISTOR NPN 8I TC-39 PD=700mW	07263	817843
ASA1R1	0698-3139	5	8	RESISTOR 26.1K 1% .125W P TC00+-100	24546	C4-1/B-TC-2612-F
ASA1R2	0757-0819	6		RESISTOR 6.81K 1% .125W P TC00+-100	24546	C4-1/B-TC-6811-F
ASA1R3	0698-3150	6	4	RESISTOR 2.37K 1% .125W P TC00+-100	24546	C4-1/B-TC-2371-F
ASA1R4	0757-0280	3		RESISTOR 1K 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R5	0757-0428	1		RESISTOR 1.62K 1% .125W P TC00+-100	24546	C4-1/B-TC-1621-F
ASA1R6	0698-3150	6		RESISTOR 2.37K 1% .125W P TC00+-100	24546	C4-1/B-TC-2371-F
ASA1R7	0757-0817	6	1	RESISTOR 6.25K 1% .5W P TC00+-100	28480	0757-0817
ASA1R8	0698-3447	4	1	RESISTOR 422 1% .125W P TC00+-100	24546	C4-1/B-TC-422-F
ASA1R9	0757-0428	1		RESISTOR 1.62K 1% .125W P TC00+-100	24546	C4-1/B-TC-1621-F
ASA1R10	0698-3150	4	4	RESISTOR 23.7K 1% .125W P TC00+-100	24546	C4-1/B-TC-2372-F
ASA1R11	2100-2030	6	1	RESISTOR-TYRM 20K 10X C TOP=ADJ 1-TYM	73138	82PRE20
ASA1R12	0698-3455	4	2	RESISTOR 261K 1% .125W P TC00+-100	24546	C4-1/B-TC-2611-F
ASA1R13	2100-2035	1	1	RESISTOR-TYRM 100K 10X C TOP=ADJ 1-TYM	73138	82PR100K
ASA1R14	0698-3451	1	1	RESISTOR 133K 1% .125W P TC00+-100	24546	C4-1/B-TC-1331-F
ASA1R15	0757-0441	8	4	RESISTOR 8.25K 1% .125W P TC00+-100	24546	C4-1/B-TC-8251-F
ASA1R16	0757-0420	3		RESISTOR 750 1% .125W P TC00+-100	24546	C4-1/B-TC-751-F
ASA1R17	0757-0199	3	4	RESISTOR 21.5K 1% .125W P TC00+-100	24546	C4-1/B-TC-2152-F
ASA1R18	0757-0280	3		RESISTOR 1K 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R19	0757-0280	3		RESISTOR 1K 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R20	0757-0428	1		RESISTOR 1.62K 1% .125W P TC00+-100	24546	C4-1/B-TC-1621-F
ASA1R21	0757-0416	7	5	RESISTOR 511 1% .125W P TC00+-100	24546	C4-1/B-TC-511-F
ASA1R22	0757-0317	7		RESISTOR 1.33K 1% .125W P TC00+-100	24546	C4-1/B-TC-1331-F
ASA1R23	0757-0421	4		RESISTOR 825 1% .125W P TC00+-100	24546	C4-1/B-TC-825-F
ASA1R24	0698-3152	6	2	RESISTOR 3.48K 1% .125W P TC00+-100	24546	C4-1/B-TC-3481-F
ASA1R25	0698-3446	3		RESISTOR 383 1% .125W P TC00+-100	24546	C4-1/B-TC-383-F
ASA1R26	0757-0819	4	1	RESISTOR 909 1% .5W P TC00+-100	28480	0757-0819
ASA1R27	0757-0401	0		RESISTOR 100 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R28	0757-0230	3		RESISTOR 1K 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R29	0757-0817	0	3	RESISTOR 562 1% .125W P TC00+-100	24546	C4-1/B-TC-562-F
ASA1R30	0757-0401	0		RESISTOR 100 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R31	0698-0090	7	2	RESISTOR 464 1% .5W P TC00+-100	28480	0698-0090
ASA1R32	0757-1060	9	2	RESISTOR 196 1% .5W P TC00+-100	28480	0757-1060
ASA1R33	0698-1840	7		RESISTOR 196 1% .125W P TC00+-100	28480	C4-1/B-TC-196-F
ASA1R34	0757-0401	0		RESISTOR 100 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R35	0757-0401	0		RESISTOR 100 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R36	0757-0280	3		RESISTOR 1K 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R37	0757-0417	8		RESISTOR 562 1% .125W P TC00+-100	24546	C4-1/B-TC-562-F
ASA1R38	0757-0401	0		RESISTOR 100 1% .125W P TC00+-100	24546	C4-1/B-TC-1001-F
ASA1R39	0698-0090	7		RESISTOR 464 1% .5W P TC00+-100	28480	0698-0090
ASA1R40	0757-1060	9		RESISTOR 196 1% .5W P TC00+-100	28480	0757-1060
ASA1R41	*100-1788	6		CHOKE-WIDE BAND 2MAX=680 OHMS 180 MHZ	02114	VK200 20/48
ASA1R42	*100-1788	6		CHOKE-WIDE BAND 2MAX=680 OHMS 180 MHZ	02114	VK200 20/48
ASA1R43	*170-0847	3	2	CORE-SHIELDING BEAD	02114	36-590-05/38 PARYLENE COATED
ASA1R44	*170-0847	3	2	CORE-SHIELDING BEAD	02114	36-590-05/38 PARYLENE COATED
A6	08601-0006	1	1	AMPLIFIER ASSEMBLY-VIDEO (DOES NOT INCLUDE ASA1E1 & ASA1E2) (INCL C1-R, J1-2, ASA1 ABBY & COVER)	28480	08601-0006
A6	08601-0007	7	1	COVER-VIDEO AMPLIFIER	28480	08601-0007
A6	08601-2010	6	1	HOUSING-VIDEO AMPLIFIER	28480	08601-2010

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ABCA	0160-2040	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	50-743-009-X8V0-502Z
ABCB	0160-2040	1		CAPACITOR-PDTHRU 5000PF +80 -20% 500V	33095	50-743-009-X8V0-502Z
ABD1	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-PR 50-OHM	28480	1250-0829
ABD2	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-PR 50-OHM	28470	1250-0829
ABA1	08601-6026	3	1	BOARD ASSEMBLY-VIDEO AMPLIFIER	28480	08601-6026
ABA1C1	0160-0097	7	8	CAPACITOR-PXD .07UF+-10% 35VDC TA	36289	150D74X9035A2
ABA1C2	0160-0376	5	3	CAPACITOR-PXD .07UF+-10% 35VDC TA	36289	150D74X9035A2
ABA1C3	0160-0097	7	8	CAPACITOR-PXD .07UF+-10% 35VDC TA	36289	150D74X9035A2
ABA1C4	0160-3060	8	2	CAPACITOR-PXD .1UF +-20% 25VDC CER	28480	0160-3060
ABA1C5	0160-3060	8	8	CAPACITOR-PXD .1UF +-20% 25VDC CER	28480	0160-3060
ABA1C6				NOT ASSIGNED		
ABA1C7	0160-0376	5		CAPACITOR-PXD .07UF+-10% 35VDC TA	36289	150D74X9035A2
ABA1C8	0160-0376	5		CAPACITOR-PXD .07UF+-10% 35VDC TA	36289	150D74X9035A2
ABA1E1	5086-7010	3		INTEGRATED CIRCUIT	28480	5086-7010
ABA1E2	5086-7112	6	1	INTEGRATED CIRCUIT	28480	5086-7112
ABA1L1	9140-0142	8	2	COIL-WLD 2.2UM 10% 0.95OH, 25LG-NOM	28480	9140-0142
ABA1L2	9140-0142	8	8	COIL-WLD 2.2UM 10% 0.95OH, 25LG-NOM	28480	9140-0142
ABA1MP1	1251-1556	7	15	CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP2	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP3	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP4	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP5	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP6	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP7	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP8	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP9	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP10	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP11	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP12	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP13	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP14	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1MP15	1251-1556	7		CONNECTOR-SGL CONT SKT .018-IN-88C-8Z	28480	1251-1556
ABA1R1	0727-0028	2		RESISTOR 10 1% .125W P TC00+-100	24506	CR-1/8-70-10M0-P
ABA1R2	0727-0028	2		RESISTOR 10 1% .125W P TC00+-100	24506	CR-1/8-70-10M0-P
ABA1R3	0727-0028	2		RESISTOR 10 1% .125W P TC00+-100	24506	CR-1/8-70-10M0-P
ABA1R4	0698-3152	8		RESISTOR 3.6K 1% .125W P TC00+-100	24506	CR-1/8-70-3681-P
ABA1R5	0727-0044	1	3	RESISTOR 12.1K 1% .125W P TC00+-100	24506	CR-1/8-70-1212-P
ABA1R6	0698-3340	4	1	RESISTOR 75 5% .125W CC TC00+-270/+540	01121	887505
AY	08601-6007	3		ATTENUATOR ASSEMBLY	28480	08601-6007
AY	08601-6057	6	1	ATTENUATOR ASSEMBLY (OPT 008, 009, 010 ONLY)	28480	08601-6057
AYJ1	1250-0829	3		CONNECTOR-RF SMC M 8GL-HOLE-PR 50-OHM	28480	1250-0829
AYMP1	08601-2001	7	1	HOUSING-ATTENUATOR ASSEMBLY	28480	08601-2001
AYR1	0727-0028	8	4	RESISTOR 53.27 .5% .25W CF TC00-500	28480	0727-0028
AYR2	0727-0091	1	3	RESISTOR 790 .5% .25W CF TC00-500	28480	0727-0091
AYR3	0727-0028	4		RESISTOR 53.27 .5% .25W CF TC00-500	28480	0727-0028
AYR4	0727-0034	2	2	RESISTOR 61.11 .5% .25W CF TC00-500	28480	0727-0034
AYR5	0727-0062	6	1	RESISTOR 247.5 .5% .25W CF TC00-500	28480	0727-0062
AYR6	0727-0034	2		RESISTOR 61.11 .5% .25W CF TC00-500	28480	0727-0034
AYR7	0727-0042	2	2	RESISTOR 96.25 .5% .25W CF TC00-500	28480	0727-0042
AYR8	0727-0037	5		RESISTOR 71.15 .5% .25W CF TC00-500	28480	0727-0037
AYR9	0727-0042	2	1	RESISTOR 96.25 .5% .25W CF TC00-500	28480	0727-0042
AYR10	0727-0028	4		RESISTOR 53.27 .5% .25W CF TC00-500	28480	0727-0028
AYR11	0727-0091	1		RESISTOR 790 .5% .25W CF TC00-500	28480	0727-0091
AYR12	0727-0016	0	1	RESISTOR 24.63 .5% .5W CF TC00-500	28480	0727-0016
AYR13	0727-0091	1		RESISTOR 790 .5% .25W CF TC00-500	28480	0727-0091
AYR14	0727-0028	2		RESISTOR 53.27 .5% .25W CF TC00-500	28480	0727-0028
AYR15	0663-2405	1	1	RESISTOR 24 5% .25W FC TC00+-500 (OPT 008, 009, 010 ONLY)	01121	CR2405
AYB1	3102-0006	7	4	SWITCH-SENS SPDT SUBMIN 1A 30VDC	28480	3102-0006
AYB2	3102-0006	7		SWITCH-SENS SPDT SUBMIN 1A 30VDC	28480	3102-0006
AYB3	3102-0006	7		SWITCH-SENS SPDT SUBMIN 1A 30VDC	28480	3102-0006
AYB4	3102-0006	7		SWITCH-SENS SPDT SUBMIN 1A 30VDC	28480	3102-0006
	08601-60052	1	1	DIAL-KNOB ASSEMBLY-ATTENUATOR	28480	08601-60052
AB	08601-6018	6	1	BOARD ASSEMBLY-RECTIFIER	28480	08601-6018
ABC1	0150-0082	7	2	CAPACITOR-PXD .0200PF500VDC CER	28480	0150-0082
ABC2	0150-0082	7	7	CAPACITOR-PXD .0200PF500VDC CER	28480	0150-0082

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A8CR1	1901-0018	7	2	DIODE-PWR RECT 400V 1.5A	28480	1901-0018
A8CR2	1901-0018	7		DIODE-PWR RECT 400V 1.5A	28480	1901-0018
A8CR3	1901-0028	5	2	DIODE-PWR RECT 400V 750MA 00-29	28480	1901-0028
A8CR4	1901-0028	5		DIODE-PWR RECT 400V 750MA 00-29	28480	1901-0028
A8P1	2110-0055	2	1	FUSE 4A 250V 1.25X.25 UL	75915	312004
A8P2	2110-0064	3	1	FUSE .125A 250V 1.25X.25 UL	28480	2110-0064
A9	08601-0019	8	1	BOARD ASSEMBLY-PRED CONTROL & LEVELING NOTE: TO OBTAIN AN A9 FREQUENCY CONTROL AND LEVELING BOARD FOR OPTIONS 001, 002, 003, 005, 006, 011, 012 ORDER BOARD REPLACEMENT KIT HP PART NO. 08601-00112. TABLE 6-1 SHOWS THE COMPONENT CHANGES NEEDED FOR CONVERTING THE STANDARD A9 BOARD TO EACH OPTION.	28480	08601-0019
A9C1	0180-0231	1	1	CAPACITOR-PXD 3.5UF±20% 15% 75VDC TA	00001	49718587
A9C2	0180-2186	9	1	CAPACITOR-PXD 300UF±20% 30VDC TA	00001	49745507
A9C3	0170-0040	9	1	CAPACITOR-PXD .047UF ±10% 200VDC POLYE	50289	292P47392
A9C4	0180-2214	2	1	CAPACITOR-PXD 680PF ±5% 300VDC MICA	28480	0180-2214
A9C5	0180-2225	5	2	CAPACITOR-PXD 2000PF ±5% 300VDC MICA	28480	0180-2225
A9C6	0180-0249	7	1	CAPACITOR-PXD 33UF±10% 10VDC TA	50289	1500334X0010R2
A9C7	0180-1746	5	2	CAPACITOR-PXD 15UF±10% 20VDC TA	50289	1500196X0020R2
A9C8	0180-1746	5		CAPACITOR-PXD 15UF±10% 20VDC TA	50289	1500196X0020R2
A9C9	0180-0030	2	1	CAPACITOR-PXD 60UF±75% 10% 30VDC AL	50289	300406605000E
A9C10	0180-0247	5	2	CAPACITOR-PXD .022UF ±80% 20% 100VDC CER	50289	C023P101M222Z22Z-COM
A9C11	0170-0083	0	1	CAPACITOR-PXD .022UF ±20% 50VDC POLYE	00411	601P22230R5W1
A9C12	0180-0197	8		CAPACITOR-PXD 2.2UF±10% 20VDC TA	50289	1500225X0020R2
A9C13	0180-0153	4		CAPACITOR-PXD 1000PF ±10% 200VDC POLYE	28480	0180-0153
A9C14	0180-0174	9		CAPACITOR-PXD .47UF ±80% 20% 25VDC CER	28480	0180-0174
A9C15	0180-1743	2		CAPACITOR-PXD .1UF±10% 35VDC TA	50289	1500104X0035R2
A9C16	0180-1743	2		CAPACITOR-PXD .1UF±10% 35VDC TA	50289	1500104X0035R2
A9C17	0180-1747	6	1	CAPACITOR-PXD 150UF±20% 15VDC TA	50289	1500197X0015
A9C18	0180-2055	9		CAPACITOR-PXD .01UF ±80% 20% 100VDC CER	28480	0180-2055
A9C19	0180-0298	8		CAPACITOR-PXD 1500PF ±10% 200VDC POLYE	28480	0180-0298
A9C20	0180-0291	3		CAPACITOR-PXD 1UF±10% 35VDC TA	50289	1500104X0035R2
A9C21-				NOT ASSIGNED		
A9C23	0180-0291	3		CAPACITOR-PXD 1UF±10% 35VDC TA	50289	1500104X0035R2
A9C24	0180-2225	5		CAPACITOR-PXD 2000PF ±5% 300VDC MICA	28480	0180-2225
A9C25	0180-2224	9	1	CAPACITOR-PXD 3000PF ±5% 300VDC MICA	28480	0180-2224
A9C27	0180-0228	6	1	CAPACITOR-PXD 22UF±10% 15VDC TA	50289	1500224X0015R2
A9C28	0180-0161	4		CAPACITOR-PXD .01UF ±10% 200VDC POLYE	28480	0180-0161
A9C29	0180-1731	2	1	CAPACITOR-PXD 4.7UF±10% 50VDC TA	50289	1500075X0050R2
A9C30	0180-1735	8		CAPACITOR-PXD .22UF±10% 35VDC TA	50289	1500224X0035R2
A9C31	0180-0184	9	2	CAPACITOR-PXD 8200PF ±5% 100VDC MICA	72136	0M20P822P0100NVICR
A9C31	0180-0186	7	1	CAPACITOR-PXD .017UF ±2% 300VDC MICA (OPT 005 ONLY)	72136	0M50P17300300NVICR
A9C32	0180-2228	8	2	CAPACITOR-PXD 2700PF ±5% 300VDC MICA	28480	0180-2228
A9C32	0180-0184	9		CAPACITOR-PXD 8200PF ±5% 100VDC MICA (OPT 005 ONLY)	72136	0M20P822P0100NVICR
A9C33	0180-2234	4	1	CAPACITOR-PXD 820PF ±5% 100VDC MICA	28480	0180-2234
A9C33	0180-2228	8		CAPACITOR-PXD 2700PF ±5% 300VDC MICA (OPT 005 ONLY)	28480	0180-2228
A9C34	0180-0197	8		CAPACITOR-PXD 2.2UF±10% 20VDC TA	50289	1500225X0020R2
A9C35	0180-0163	1	1	CAPACITOR-PXD .033UF ±10% 200VDC POLYE	28480	0180-0163
A9C35	0180-0160	1	1	CAPACITOR-PXD .1UF ±10% 200VDC POLYE (OPT 005 ONLY)	28480	0180-0160
A9C36	0180-0297	5		CAPACITOR-PXD .022UF ±80% 20% 100VDC CER	50289	C023P101M222Z22Z-COM
A9C37	0180-0291	3		CAPACITOR-PXD 1UF±10% 35VDC TA	50289	1500104X0035R2
A9C37	0180-0197	8		CAPACITOR-PXD 2.2UF±10% 20VDC TA (OPT 005 ONLY)	50289	1500225X0020R2
A9C38	0180-0197	8		CAPACITOR-PXD 2.2UF±10% 20VDC TA	50289	1500225X0020R2
A9C38	0180-0374	3		CAPACITOR-PXD 10UF±10% 20VDC TA (OPT 005 ONLY)	50289	1500106X0020R2
A9C39	0180-0159	2	1	CAPACITOR-PXD 220UF±20% 10VDC TA	50289	1500227X0010R2
A9C40	0180-0291	3		CAPACITOR-PXD 1UF±10% 35VDC TA	50289	1500104X0035R2
A9C41	0180-0300	1	1	CAPACITOR-PXD .047UF ±80% 20% 100VDC CER	50289	C023P101L47222Z22Z-COM
A9C42	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C42	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C43	1902-3104	6	2	DIODE-ZNR 5.62V 5% 00-7 PDS, SW TC=0.016X	28480	1902-3104
A9C44	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C45	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C46	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C47	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C48	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C49	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033
A9C50	1901-0033	2		DIODE-GEN PRP 100V 200MA 00-7	28480	1901-0033

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9CR11	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR12	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR13	1902-3104	2		DIODE-ZNR 5.62V 5K DO-7 PDR,4W TC=0.016K	28480	1902-3104
A9CR14	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR15	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR16				NOT ASSIGNED		
A9CR17	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR18	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR19	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR20	1902-0025	4	1	DIODE-ZNR 10V 5K DO-7 PDR,4W TC=0.06K	28480	1902-0025
A9CR21				NOT ASSIGNED		
A9CR22	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR23	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR24	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR25	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR26	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR27	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR28	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR29	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR30	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9CR31	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A9E1	1826-0241	8	1	IC OP AMP LOW-NOISE TC=99	28480	1826-0241
A9L1				NOT ASSIGNED		
A9L2	9140-0131	5	1	COIL-MLD 10MH 5K CR60 .20X.74LG-NOM	28480	9140-0131
A9L3	9100-2847	8	1	COIL-MLD 24MH 5K CR60 .30X.74LG-NOM (OPT 005 ONLY)	28480	9100-2847
A9S1	1854-0221	9		TRANSISTOR-DUAL NPN PD=750mW	28480	1854-0221
A9S2	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S3	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S4	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S5	1853-0010	2	5	TRANSISTOR PNP SI TC=18 PD=300mW	28480	1853-0010
A9S6	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S7	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S8	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S9	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S10	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S11				NOT ASSIGNED		
A9S12	1854-0221	9		TRANSISTOR-DUAL NPN PD=750mW	28480	1854-0221
A9S13	1854-0221	9		TRANSISTOR-DUAL NPN PD=750mW	28480	1854-0221
A9S14	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S15	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S16	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S17				NOT ASSIGNED		
A9S18	1854-0299	7	1	TRANSISTOR-DUAL NPN PD=800mW	28480	1854-0299
A9S19	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S20	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S21	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S22	1854-0069	1		TRANSISTOR NPN SI PD=300mW FT=200MHZ	04713	2N709
A9S23	1853-0009	1		TRANSISTOR NPN SI PD=300mW FT=200MHZ	04713	2N709
A9S24	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S25	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S26	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S27	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S28	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S29	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S30	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S31	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S32	1853-0020	4		TRANSISTOR PNP SI PD=300mW FT=150MHZ	28480	1853-0020
A9S33	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S34	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S35	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S36	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S37	1853-0010	2		TRANSISTOR PNP SI TC=18 PD=300mW	28480	1853-0010
A9S38	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S39	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S40	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9S41				NOT ASSIGNED		
A9S42	1854-0071	7		TRANSISTOR NPN SI PD=300mW FT=200MHZ	28480	1854-0071
A9T1	0757-0482	3		RESISTOR 10K 1% .125W F TC=0+-100	24546	C6-1/8-T0-1002-P
A9T2	0757-0430	9		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C6-1/8-T0-5111-P
A9T3	0757-0482	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C6-1/8-T0-1002-P
A9T4	0757-0450	7	5	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C6-1/8-T0-5112-P
A9T5	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C6-1/8-T0-1003-P

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9R6	0757-0317	7		RESISTOR 1.33K 1% .125W F TC00±100	24546	CA-1/8-T0-1331-F
A9R7	0698-3158	4		RESISTOR 23.7K 1% .125W F TC00±100	24546	CA-1/8-T0-2372-F
A9R8	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R9	0757-0444	1		RESISTOR 12.1K 1% .125W F TC00±100	24546	CA-1/8-T0-1212-F
A9R10	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R11	0757-0440	7		RESISTOR 7.5K 1% .125W F TC00±100	24546	CA-1/8-T0-7501-F
A9R12	0757-0443	0	5	RESISTOR 11K 1% .125W F TC00±100	24546	CA-1/8-T0-1102-F
A9R13	0698-3158	0		RESISTOR 23.7K 1% .125W F TC00±100	24546	CA-1/8-T0-2372-F
A9R14	0757-0280	7	3	RESISTOR 5.0K 1% .125W F TC00±100	24546	CA-1/8-T0-5021-F
A9R15	0698-3454	3	4	RESISTOR 215K 1% .125W F TC00±100	24546	CA-1/8-T0-2153-F
A9R16	0757-0445	6		RESISTOR 100K 1% .125W F TC00±100	24546	CA-1/8-T0-1003-F
A9R17	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R18	0698-3454	8		RESISTOR 383K 1% .125W F TC00±100	24480	0698-3454
A9R19	0698-3454	8		RESISTOR 383K 1% .125W F TC00±100	24480	0698-3454
A9R20	2100-3253	7		RESISTOR-TMR 50K 10% C TOP-ADJ 1-TMR	24480	2100-3253
A9R21	0698-3454	3		RESISTOR 215K 1% .125W F TC00±100	24546	CA-1/8-T0-2153-F
A9R22	0757-0445	4		RESISTOR 100K 1% .125W F TC00±100	24546	CA-1/8-T0-1003-F
A9R23	0757-0317	7		RESISTOR 1.33K 1% .125W F TC00±100	24546	CA-1/8-T0-1331-F
A9R24	2100-0558	5	1	RESISTOR-TMR 500 10% C TOP-ADJ 1-TMR	24480	2100-0558
A9R25	0698-3443	0		RESISTOR 287 1% .125W F TC00±100	24546	CA-1/8-T0-2872-F
A9R26	0698-3443	0		RESISTOR 287 1% .125W F TC00±100	24546	CA-1/8-T0-2872-F
A9R27	0757-0416	7		RESISTOR 511 1% .125W F TC00±100	24546	CA-1/8-T0-5112-F
A9R28	0698-3443	8		RESISTOR 215 1% .125W F TC00±100	24546	CA-1/8-T0-2152-F
A9R29	0698-3454	4	1	RESISTOR 178 1% .125W F TC00±100	24546	CA-1/8-T0-1782-F
A9R30	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R31	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R32	0698-3158	5		RESISTOR 26.1K 1% .125W F TC00±100	24546	CA-1/8-T0-2612-F
A9R33	0698-3454	3	1	RESISTOR 147K 1% .125W F TC00±100	24546	CA-1/8-T0-1473-F
A9R34	2100-3252	4	2	RESISTOR-TMR 5K 10% C TOP-ADJ 1-TMR	24480	2100-3252
A9R35	0698-3161	6	2	RESISTOR 38.3K 1% .125W F TC00±100	24546	CA-1/8-T0-3832-F
A9R36	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R37	0698-0085	0	2	RESISTOR 2.01K 1% .125W F TC00±100	24546	CA-1/8-T0-2011-F
A9R38	0757-0440	1	1	RESISTOR 61.9K 1% .125W F TC00±100	24546	CA-1/8-T0-6192-F
A9R39	0757-0440	1		RESISTOR 1.02K 1% .125W F TC00±100	24546	CA-1/8-T0-1021-F
A9R40	0698-3162	0	2	RESISTOR 46.0K 1% .125W F TC00±100	24546	CA-1/8-T0-4602-F
A9R41	0757-0441	8		RESISTOR 9.25K 1% .125W F TC00±100	24546	CA-1/8-T0-9251-F
A9R42	0698-3409	6	5	RESISTOR 28.7K 1% .125W F TC00±100	24546	CA-1/8-T0-2872-F
A9R43				NOT ASSIGNED		
A9R44	0698-0082	7		RESISTOR 468 1% .125W F TC00±100	24546	CA-1/8-T0-4682-F
A9R45	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R46	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R47	0698-3455	0		RESISTOR 261K 1% .125W F TC00±100	24546	CA-1/8-T0-2613-F
A9R48	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R49	0698-3240	9		RESISTOR 464K 1% .125W F TC00±100	24480	0698-3240
A9R50	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R51	0698-3158	4		RESISTOR 23.7K 1% .125W F TC00±100	24546	CA-1/8-T0-2372-F
A9R52	0757-0279	0	3	RESISTOR 3.16K 1% .125W F TC00±100	24546	CA-1/8-T0-3161-F
A9R53	0757-0442	0		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R54	0757-0445	6		RESISTOR 100K 1% .125W F TC00±100	24546	CA-1/8-T0-1003-F
A9R55	0757-0442	6		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R56	0698-3159	5		RESISTOR 26.1K 1% .125W F TC00±100	24546	CA-1/8-T0-2612-F
A9R57	0698-3159	5		RESISTOR 26.1K 1% .125W F TC00±100	24546	CA-1/8-T0-2612-F
A9R58	0757-0445	6		RESISTOR 100K 1% .125W F TC00±100	24546	CA-1/8-T0-1003-F
A9R59	0698-3162	0		RESISTOR 46.4K 1% .125W F TC00±100	24546	CA-1/8-T0-4642-F
A9R60	0757-0443	0		RESISTOR 11K 1% .125W F TC00±100	24546	CA-1/8-T0-1102-F
A9R61	0698-3150	6		RESISTOR 2.37K 1% .125W F TC00±100	24546	CA-1/8-T0-2371-F
A9R62	0757-0316	4	1	RESISTOR 42.2 1% .125W F TC00±100	24546	CA-1/8-T0-4222-F
A9R63	0757-0280	7		RESISTOR 5.02K 1% .125W F TC00±100	24546	CA-1/8-T0-5021-F
A9R64	0757-0439	3		RESISTOR 5.11K 1% .125W F TC00±100	24546	CA-1/8-T0-5111-F
A9R65	0757-0418	9		RESISTOR 619 1% .125W F TC00±100	24546	CA-1/8-T0-6192-F
A9R66	0757-0442	5	3	RESISTOR 909 1% .125W F TC00±100	24546	CA-1/8-T0-9092-F
A9R67	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R68	0757-0443	0		RESISTOR 11K 1% .125W F TC00±100	24546	CA-1/8-T0-1102-F
A9R69	0698-3460	1	2	RESISTOR 422K 1% .125W F TC00±100	24480	0698-3460
A9R70	0698-3460	1		RESISTOR 422K 1% .125W F TC00±100	24480	0698-3460
A9R71	2100-3253	7		RESISTOR-TMR 50K 10% C TOP-ADJ 1-TMR	24480	2100-3253
A9R72	0698-3450	9	2	RESISTOR 42.2K 1% .125W F TC00±100	24546	CA-1/8-T0-4222-F
A9R73	0698-3456	5	1	RESISTOR 267K 1% .125W F TC00±100	24546	CA-1/8-T0-2673-F
A9R74	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F
A9R75	0698-3160	6	5	RESISTOR 31.6K 1% .125W F TC00±100	24546	CA-1/8-T0-3162-F
A9R76	2100-3253	7		RESISTOR-TMR 50K 10% C TOP-ADJ 1-TMR	24480	2100-3253
A9R77	0757-0199	3		RESISTOR 21.5K 1% .125W F TC00±100	24546	CA-1/8-T0-2152-F
A9R78	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CA-1/8-T0-1002-F
A9R79	0698-0083	8		RESISTOR 1.96K 1% .125W F TC00±100	24546	CA-1/8-T0-1961-F
A9R80	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CA-1/8-T0-1001-F

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9R81	0757-0280	3		RESISTOR 1K 1% .125W P TC00±100	24540	C4-1/8-T0-1001-F
A9R82	0757-0279	0		RESISTOR 3.16K 1% .125W P TC00±100	24540	C4-1/8-T0-3161-F
A9R83	0698-0083	0		RESISTOR 1.96K 1% .125W P TC00±100	24540	C4-1/8-T0-1961-F
A9R84	0698-0085	0		RESISTOR 2.01K 1% .125W P TC00±100	24540	C4-1/8-T0-2011-F
A9R85	0757-0283	0		RESISTOR 11K 1% .125W P TC00±100	24540	C4-1/8-T0-1102-F
A9R86	0757-0283	0		RESISTOR 11K 1% .125W P TC00±100	24540	C4-1/8-T0-1102-F
A9R87	0698-3150	4		RESISTOR 23.7K 1% .125W P TC00±100	24540	C4-1/8-T0-2372-F
A9R88	2100-3409	5	3	RESISTOR-TYMR 20 10K C TOP-ADJ 1-TYM	20480	Z100-3409
A9R89	0757-0222	5		RESISTOR 909 1% .125W P TC00±100	24540	C4-1/8-T0-909-F
A9R90	0757-0295	1	1	RESISTOR 56.2 1% .125W P TC00±100	24540	C4-1/8-T0-562-F
A9R91	0757-0294	0		RESISTOR 31.1 1% .125W P TC00±100	24540	C4-1/8-T0-311-F
A9R92	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R93	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R94	0698-3150	2		RESISTOR 10.7K 1% .125W P TC00±100	24540	C4-1/8-T0-1072-F
A9R95	2100-3252	6		RESISTOR-TYMR 5K 10K C TOP-ADJ 1-TYM	20480	Z100-3252
A9R96	0757-0285	6		RESISTOR 100K 1% .125W P TC00±100	24540	C4-1/8-T0-1003-F
A9R97	0757-0282	6		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R98	0757-0285	6		RESISTOR 100K 1% .125W P TC00±100	24540	C4-1/8-T0-1003-F
A9R99	0757-0282	6		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R100				NOT ASSIGNED		
A9R101				NOT ASSIGNED		
A9R102				NOT ASSIGNED		
A9R103				NOT ASSIGNED		
A9R104	0757-0282	9		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R105	0757-0288	1		RESISTOR 1.62K 1% .125W P TC00±100	24540	C4-1/8-T0-1621-F
A9R106	0698-3431	6		RESISTOR 20.7 1% .125W P TC00±100 (COPY 001 ONLY)	03800	PH55-1/8-T0-207-F
A9R107	0698-4007	0	1	RESISTOR 24.8 1% .125W P TC00±100 (COPY 003 AND 011 ONLY)	03800	PH55-1/8-T0-248-F
A9R108	0698-3637	4	1	RESISTOR 220 5% 2W MC TC00±200	20480	0698-3637
A9R109	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R110	0757-0283	3		RESISTOR 9.11K 1% .125W P TC00±100	24540	C4-1/8-T0-9111-F
A9R111	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R112	0698-3160	6		RESISTOR 31.6K 1% .125W P TC00±100	24540	C4-1/8-T0-3162-F
A9R113	0757-0285	6		RESISTOR 100K 1% .125W P TC00±100 (COPY 006 ONLY)	24540	C4-1/8-T0-1003-F
A9R114	0757-0278	0	2	RESISTOR 11 1% .125W P TC00±100	19701	HP4C1/8-T0-1100-F
A9R115	0698-3429	1	2	RESISTOR 14.7 1% .125W P TC00±100 (COPY 001 AND 012 ONLY)	03800	PH55-1/8-T0-147-F
A9R116	0698-0525	0	2	RESISTOR 5.6 5% .25W TC TC00±100/±100 (COPY 002 AND 011 ONLY)	01121	C05605
A9R117	0757-0282	9		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R118	0757-0201	0		RESISTOR 100 1% .125W P TC00±100	24540	C4-1/8-T0-101-F
A9R119	0757-0199	5		RESISTOR 62.5 1% .125W P TC00±100	24540	C4-1/8-T0-625-F
A9R120	2100-3183	4	1	RESISTOR-TYMR 50 10K C TOP-ADJ 1-TYM	20480	Z100-3183
A9R121	0757-0286	7		RESISTOR 9.62K 1% .125W P TC00±100	24540	C4-1/8-T0-9621-F
A9R122	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R123	2100-3409	3		RESISTOR-TYMR 20 10K C TOP-ADJ 1-TYM	20480	Z100-3409
A9R124	0757-0282	1	1	RESISTOR 110 1% .125W P TC00±100	24540	C4-1/8-T0-111-F
A9R125	0757-0287	4	2	RESISTOR 16.2K 1% .125W P TC00±100	24540	C4-1/8-T0-1622-F
A9R126	0698-0270	1	1	RESISTOR 12.5K 1% .125W P TC00±25	20480	0698-0270
A9R127				NOT ASSIGNED		
A9R128				NOT ASSIGNED		
A9R129	0698-4317	0	1	RESISTOR 3.62K 1% .25W P TC00±25	20480	0698-4317
A9R130				NOT ASSIGNED		
A9R131	0757-0317	7		RESISTOR 1.33K 1% .125W P TC00±100	24540	C4-1/8-T0-1331-F
A9R132	0698-3150	5		RESISTOR 20.1K 1% .125W P TC00±100	24540	C4-1/8-T0-2012-F
A9R133	2100-3409	3		RESISTOR-TYMR 20 10K C TOP-ADJ 1-TYM	20480	Z100-3409
A9R134	2100-0550	9	3	RESISTOR-TYMR 20K 10K C TOP-ADJ 1-TYM	20480	Z100-0550
A9R135	0757-0281	0		RESISTOR 8.25K 1% .125W P TC00±100	24540	C4-1/8-T0-8251-F
A9R136	0698-3150	5		RESISTOR 20.1K 1% .125W P TC00±100	24540	C4-1/8-T0-2012-F
A9R137	0757-1098	0	4	RESISTOR 1.47K 1% .125W P TC00±100	24540	C4-1/8-T0-1471-F
A9R138	0698-3409	6		RESISTOR 20.7K 1% .125W P TC00±100	24540	C4-1/8-T0-2072-F
A9R139	2100-0550	9		RESISTOR-TYMR 20K 10K C TOP-ADJ 1-TYM	20480	Z100-0550
A9R140	0698-3150	2		RESISTOR 14.7K 1% .125W P TC00±100	24540	C4-1/8-T0-1472-F
A9R141	0698-3160	8		RESISTOR 31.6K 1% .125W P TC00±100	24540	C4-1/8-T0-3162-F
A9R142	0757-0286	7		RESISTOR 911 1% .125W P TC00±100	24540	C4-1/8-T0-911-F
A9R143	0698-0082	7		RESISTOR 400 1% .125W P TC00±100	24540	C4-1/8-T0-400-F
A9R144	0698-0082	7		RESISTOR 400 1% .125W P TC00±100	24540	C4-1/8-T0-400-F
A9R145	0757-0289	2		RESISTOR 13.3K 1% .125W P TC00±100	19701	HP4C1/8-T0-1332-F
A9R146	0757-0270	3	1	RESISTOR 102K 1% .125W P TC00±100	24540	C4-1/8-T0-1022-F
A9R147	0757-0282	3	1	RESISTOR 75K 1% .125W P TC00±100	24540	C4-1/8-T0-7502-F
A9R148	0698-3160	2		RESISTOR 31.6K 1% .125W P TC00±100	24540	C4-1/8-T0-3162-F
A9R149	0698-3150	2		RESISTOR 19.7K 1% .125W P TC00±100	24540	C4-1/8-T0-1972-F
A9R150	0698-3150	1	1	RESISTOR 4.44K 1% .125W P TC00±100	24540	C4-1/8-T0-4441-F
A9R151	0757-0282	0		RESISTOR 10K 1% .125W P TC00±100	24540	C4-1/8-T0-1002-F
A9R152	0757-0289	0	2	RESISTOR 10K 1% .25W P TC00±100	20480	0757-0289
A9R153	0698-3409	6		RESISTOR 20.7K 1% .125W P TC00±100	24540	C4-1/8-T0-2072-F
A9R154	0757-0286	7		RESISTOR 911 1% .125W P TC00±100	24540	C4-1/8-T0-911-F
A9R155	0757-1098	9		RESISTOR 1.47K 1% .125W P TC00±100	24540	C4-1/8-T0-1471-F
A9R156	0757-0199	3		RESISTOR 21.5K 1% .125W P TC00±100	24540	C4-1/8-T0-2152-F

See introduction to this section for ordering information.
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
AR154	0757-1098	9		RESISTOR 1.07K 1% .125W F TC00±100	24546	C4-1/8-T0-1471-F
AR155	0757-0448	1		RESISTOR 12.1K 1% .125W F TC00±100	24546	C4-1/8-T0-1212-F
AR156	0757-0199	3		RESISTOR 21.5K 1% .125W F TC00±100	24546	C4-1/8-T0-2152-F
AR157	0757-1098	9		RESISTOR 1.07K 1% .125W F TC00±100	24546	C4-1/8-T0-1471-F
AR158	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR159	0698-3160	8		RESISTOR 31.6K 1% .125W F TC00±100	24546	C4-1/8-T0-3162-F
AR160	0698-3440	8		RESISTOR 28.7K 1% .125W F TC00±100 (OPTION 005 ONLY)	24546	C4-1/8-T0-2872-F
AR161	2100-3210	6	2	RESISTOR-TMR 10K 10% C TOP-ADJ 1-TMR	28480	2100-3210
AR162	0757-0442	5	1	RESISTOR 90.9K 1% .125W F TC00±100	24546	C4-1/8-T0-9092-F
AR163	2100-3210	6		RESISTOR-TMR 10K 10% C TOP-ADJ 1-TMR	28480	2100-3210
AR164	2100-0769	6	1	RESISTOR-TMR 50K 20% MC TOP-ADJ 1-TMR (OPT 001,002 AND 013 ONLY)	28480	2100-0769
AR165	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR166	0757-0430	3		RESISTOR 5.11K 1% .125W F TC00±100 (OPTION 005 ONLY)	24546	CC-1/8-T0-5111-F
AR167	0698-3154	0	2	RESISTOR 4.22K 1% .125W F TC00±100	24546	C4-1/8-T0-4221-F
AR168	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR169	0698-3260	9		RESISTOR 464K 1% .125W F TC00±100	24546	0698-3260
AR170	0698-3410	1		RESISTOR 3.16K 1% .125W F TC00±100	24546	0698-3410
AR171	0698-3417	8	2	RESISTOR 23.7K 1% .125W F TC00±100	24546	0698-3417
AR172	0757-0440	7		RESISTOR 7.5K 1% .125W F TC00±100	24546	C4-1/8-T0-7501-F
AR173	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR174	0698-0086	0	2	RESISTOR 2.15K 1% .125W F TC00±100	24546	C4-1/8-T0-2151-F
AR175	0757-0394	9		RESISTOR 51.1K 1% .125W F TC00±100	24546	C4-1/8-T0-5111-F
AR176	0757-0197	3	1	RESISTOR 80.1K 1% .125W F TC00±100	24546	C4-1/8-T0-8011-F
AR177	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	C4-1/8-T0-1001-F
AR178	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	C4-1/8-T0-1001-F
AR179	0757-0180	2	1	RESISTOR 31.6K 1% .125W F TC00±100	24546	0757-0180
AR180	0698-3154	0		RESISTOR 4.22K 1% .125W F TC00±100	24546	C4-1/8-T0-4221-F
AR181	0811-0093	9	1	RESISTOR 180 3% 4W PW TC00±20	24546	0811-0093
AR182	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	C4-1/8-T0-1001-F
AR183	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR184	2100-0538	0		RESISTOR-TMR 20K 10% C TOP-ADJ 1-TMR	28480	2100-0538
AR185	0757-0394	9		RESISTOR 51.1K 1% .125W F TC00±100	24546	C4-1/8-T0-5111-F
AR186	2100-1497	0	1	RESISTOR-TMR 2K 10% C TOP-ADJ 1-TMR	28480	2100-1497
AR187	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	C4-1/8-T0-1002-F
AR188	0698-3161	9		RESISTOR 38.3K 1% .125W F TC00±100	24546	C4-1/8-T0-3832-F
A10	08601-6020	1	1	BOARD ASSEMBLY-POWER SUPPLY	28480	08601-6020
A10C1	0180-0180	3		CAPACITOR-FXD 4.7UF±10% 35VDC YA	56289	15004754903592
A10C2	0180-0181	8		CAPACITOR-FXD 3.3UF±10% 35VDC YA	06908	71103333035548
A10C3	0180-0094	4	2	CAPACITOR-FXD 100UF±75% 10% 35VDC AL	56289	3001C78025002
A10C4	0180-0181	8		CAPACITOR-FXD 3.3UF±10% 35VDC YA	06908	71103333035548
A10C5	0180-2035	0		CAPACITOR-FXD .01UF ±80-20% 160VDC CER	28480	0180-2035
A10C6	0180-0097	7		CAPACITOR-FXD 47UF±10% 35VDC YA	56289	15004754903592
A10C7	0180-1743	2		CAPACITOR-FXD .1UF±10% 35VDC YA	56289	15001081903552
A10C8	0180-0097	7		CAPACITOR-FXD 47UF±10% 35VDC YA	56289	15004754903592
A10C9	0180-1747	6	1	CAPACITOR-FXD 50UF±50-10% 160VDC AL	56289	300506715074
A10C10	0180-0094	4		CAPACITOR-FXD 100UF±75-10% 35VDC AL	56289	3001078025002
A10C11	0180-0089	7	2	CAPACITOR-FXD 100UF±50-10% 160VDC AL	56289	3001067150002
A10C12	0180-0089	7		CAPACITOR-FXD 100UF±50-10% 160VDC AL	56289	3001067150002
A10C13	1902-3036	3	2	DIODE-ZNR 3.16V 5% DC-7 PDS,4W TC0±064K	28480	1902-3036
A10C14	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C15	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C16	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C17	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C18	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C19	1902-3036	3		DIODE-ZNR 3.16V 5% DC-7 PDS,4W TC0±064K	28480	1902-3036
A10C20	1902-3124	1	1	DIODE-ZNR 8.48V 2% DC-7 PDS,4W TC0±043K	28480	1902-3124
A10C21	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C22	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C23	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10C24	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	28480	1901-0033
A10D1	1854-0221	9		TRANSISTOR-DUAL NPN PD750MW	28480	1854-0221
A10D2	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A10D3	1853-0001	1	1	TRANSISTOR NPN SI TO-39 PD=300MW	28480	1853-0001
A10D4	1853-0010	2		TRANSISTOR NPN SI TO-18 PD=300MW	28480	1853-0010
A10D5	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A10D6	1853-0037	3	2	TRANSISTOR PNP SI TO-39 PDS1W FT=100MHZ	28480	1853-0037
A10D7	1854-0022	8		TRANSISTOR NPN SI TO-39 PD750MW	07263	817803
A10D8	1853-0037	3		TRANSISTOR PNP SI TO-39 PDS1W FT=100MHZ	28480	1853-0037
A10D9	1854-0039	7	1	TRANSISTOR NPN 2N10530 SI TO-39 PDS1W	01928	2N10530
A10D10	1854-0221	9		TRANSISTOR-DUAL NPN PD750MW	28480	1854-0221

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10011	1854-0071	7		TRANSISTOR NPN SI PDS3004H F70200MHZ	28480	1854-0071
A10012	1853-0010	2		TRANSISTOR PNP SI TC-18 PDS3004H	28480	1853-0010
A10013	1853-0010	2		TRANSISTOR PNP SI TC-18 PDS3004H	28480	1853-0010
A1001	0757-0839	8		RESISTOR 10K 1% .5W F TC00+-100	28480	0757-0839
A1002	0698-3434	9	1	RESISTOR 39.8 1% .125W F TC00+-100	24546	C4-1/8-T0-3434-F
A1003	0757-0346	2		RESISTOR 10 1% .125W F TC00+-100	24546	C4-1/8-T0-1000-F
A1004	0761-0047	9	1	RESISTOR 130 5% 1/4 W 40 TC00+-200	28480	0761-0047
A1005	0761-0048	0	1	RESISTOR 100 5% 1/4 W 40 TC00+-200	28480	0761-0048
A1006	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A1007	0698-3157	3		RESISTOR 19.9K 1% .125W F TC00+-100	24546	C4-1/8-T0-1992-F
A1008	0757-0442	9		RESISTOR 10K 1% .125W F TC00+-100	24546	C4-1/8-T0-1002-F
A1009	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A10010	0757-0447	4		RESISTOR 10.2K 1% .125W F TC00+-100	24546	C4-1/8-T0-1022-F
A10011	2100-1773	2	1	RESISTOR-TMR 1K 5% HW TOP-ADJ 1-TMR	28480	2100-1773
A10012	0757-0441	0		RESISTOR 8.25K 1% .125W F TC00+-100	24546	C4-1/8-T0-8251-F
A10013	0757-0465	4		RESISTOR 100K 1% .125W F TC00+-100	24546	C4-1/8-T0-1003-F
A10014	0757-0465	4		RESISTOR 100K 1% .125W F TC00+-100	24546	C4-1/8-T0-1003-F
A10015	0698-3450	9		RESISTOR 42.2K 1% .125W F TC00+-100	24546	C4-1/8-T0-4222-F
A10016	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A10017	0698-3449	8	1	RESISTOR 2.37K 1% .5W F TC00+-100	28480	0698-3449
A10018	0698-3157	3		RESISTOR 19.9K 1% .125W F TC00+-100	24546	C4-1/8-T0-1992-F
A10019	0757-0290	5	1	RESISTOR 8.19K 1% .125W F TC00+-100	19701	HPAC1/8-T0-8191-F
A10020	0698-3243	8	1	RESISTOR 17K 1% .125W F TC00+-100	24546	C4-1/8-T0-1722-F
A10021	0698-3449	8		RESISTOR 28.7K 1% .125W F TC00+-100	24546	C4-1/8-T0-2872-F
A10022	0757-0442	9		RESISTOR 10K 1% .125W F TC00+-100	24546	C4-1/8-T0-1002-F
A10023	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A10024	0698-3158	4		RESISTOR 23.7K 1% .125W F TC00+-100	24546	C4-1/8-T0-2372-F
A10025	0698-0088	9		RESISTOR 2.15K 1% .125W F TC00+-100	24546	C4-1/8-T0-2151-F
A10026	0698-3153	9		RESISTOR 3.83K 1% .125W F TC00+-100	24546	C4-1/8-T0-3831-F
A10027	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A10028	0757-0401	0		RESISTOR 100 1% .125W F TC00+-100	24546	C4-1/8-T0-101-F
A10029	0757-0401	0		RESISTOR 100 1% .125W F TC00+-100	24546	C4-1/8-T0-101-F
A10030	0811-1875	8	1	RESISTOR 5.6 5% 2W PW TC00+-400	75042	88M2-5R6-J
A10031	0698-3417	8		RESISTOR 23.7K 1% .5W F TC00+-100	28480	0698-3417
A10032	0757-0417	8		RESISTOR 302 1% .125W F TC00+-100	24546	C4-1/8-T0-302-F
A10033	0698-3416	7	1	RESISTOR 21.5K 1% .5W F TC00+-100	28480	0698-3416
A10034	0698-3150	6		RESISTOR 2.37K 1% .125W F TC00+-100	24546	C4-1/8-T0-2371-F
A11	08601-0010	0	1	SWITCH ASSEMBLY-SWEEP WIDTH	28480	08601-0010
A1101	0757-0123	3	1	RESISTOR 39.9K 1% .125W F TC00+-100	28480	0757-0123
A1102	0698-6498	6	1	RESISTOR 6.75K 1% .125W F TC00+-100	28480	0698-6498
A1103	0757-0427	0	1	RESISTOR 1.5K 1% .125W F TC00+-100	24546	C4-1/8-T0-1501-F
A1104	0698-6499	7	1	RESISTOR 371 1% .125W F TC00+-100	24546	C4-1/8-T0-3710-F
A1105	0698-4417	0	1	RESISTOR 174 1% .125W F TC00+-100	24546	C4-1/8-T0-174-F
A1106	2100-2424	2	1	RESISTOR-VAR W/SH 50K 10% LIN SPST-NC	28480	2100-2424
A1107	0698-6307	7	1	RESISTOR 14.3K 1% .125W F TC00+-100	24546	C4-1/8-T0-1432-F
A1108	0698-3156	2		RESISTOR 18.7K 1% .125W F TC00+-100	24546	C4-1/8-T0-1872-F
A1109	0757-0416	7		RESISTOR 511 1% .125W F TC00+-100	24546	C4-1/8-T0-511-F
A1101	3100-2088	5	1	SWITCH-ROTARY 1.031 STRUT CTR SPCC	28480	3100-2088
	08601-00053	2	1	DIAL-KNOB ASSEMBLY-BYM, SWEEP WIDTH	28480	08601-00053
A12	08601-0027	5	1	SWITCH ASSEMBLY-FUNCTION	28480	08601-0027
A12C1	0180-0100	9	2	CAPACITOR-PXD 80UF+-20% 6VDC TA	56289	150D06X0006BZ
A12C1	0180-0110	1		CAPACITOR-PXD 8.0UF+-10% 35VDC TA (OPT'S 001, 002, AND 011)	56289	150D06X0015BZ
A12C2	0180-0291	3		CAPACITOR-PXD 1UF+-10% 35VDC TA	56289	150D10X0035BZ
A12C3	0180-0106	9		CAPACITOR-PXD 80UF+-20% 6VDC TA	56289	150D06X0006BZ
A12R1	0757-0280	3		RESISTOR 1K 1% .125W F TC00+-100	24546	C4-1/8-T0-1001-F
A12R2	0757-0378	0		RESISTOR 11 1% .125W F TC00+-100	19701	HPAC1/8-T0-1100-F
A12R2	0698-3428	1		RESISTOR 14.7 1% .125W F TC00+-100 (COPY 001 ONLY)	03688	PH533-1/8-T0-147-F
A12R2	0698-0565	0		RESISTOR 5.6 5% .25W FC TC=400/+500 (COPY 002 AND 011 ONLY)	01121	C8565
A12R1	3100-2464	1	1	SWITCH-ROTARY LEVER 1.250 MTG CTR SPCC	28480	3100-2464
	0370-0433	8	1	KNOB LEVER SWITCH .200 X .220 X .375IN	28480	0370-0433
	08601-0006	7	1	SWITCH ASSEMBLY-FUNCTION (OPT. 001)	28480	08601-0006
	08601-0067	9	1	SWITCH ASSEMBLY-FUNCTION(OPT'S 002 & 011)	28480	08601-0067
A13	08601-0011	2	1	FREQUENCY READOUT ASSEMBLY (SEE FIGURE 6-1)	28480	08601-0011
A13-1	1140-0006	5	1	NUMBER WHEEL RANGE0-9	28480	1140-0006
A13-2	08601-20101	1	1	WHEEL-END COUNTER 0 TO 9 NUMERALS	28480	08601-20101
A13-3	1140-0044	3	1	WHEEL-UNIT 0 TO 9 NUMERALS	28480	1140-0044
A13-4	1410-0142	3	1	BUSHING-BEARING, PLANGED	71041	FB-46-5
A13-5	1430-0035	5	2	GEAR-STEM-PIN 22-DP 20-DEG-PA NYLON	14911	88-2219

See introduction to this section for ordering information
*Indicates factory selected value

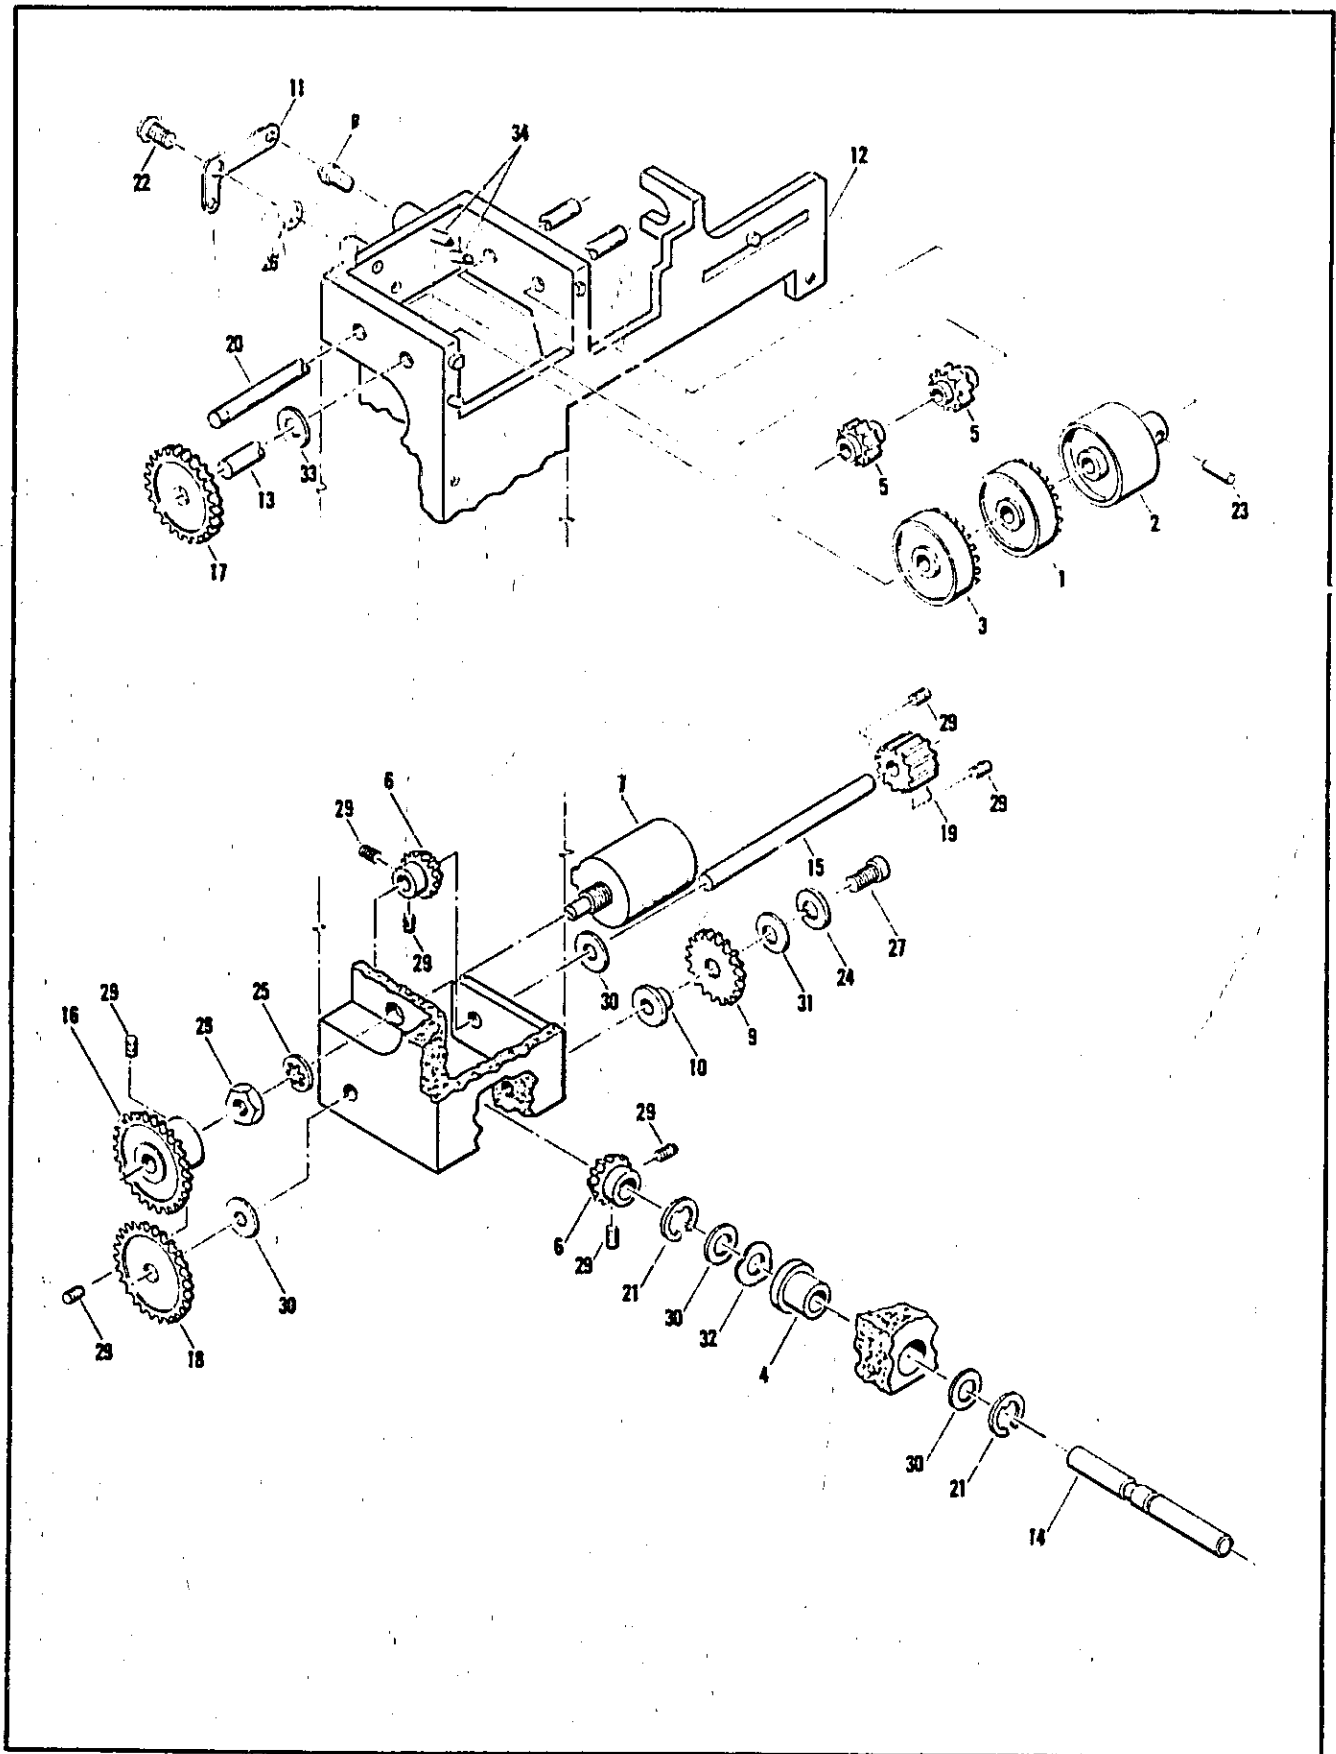


Figure 6-1. Frequency Readout, A13 Assembly

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13-6	1430-0064	0	2	GEAR-WIT 14-T 32-DP 20-DEC-PA 848	28480	1430-0064
A13-7	2100-2335	4	1	RESISTOR-VAR PREC W 10-TM IN 3%	28480	2100-2335
A13-8	2100-0092	0	2	LAMP-INCAND 885 5VDC 60MA T-1-BULB	0000J	885 T1P END
A13-9	00495-285	0	1	GEAR STOP-OFFSET	28480	00495-285
A13-10	08014-218	8	1	SPACER-SMOULDERED	28480	08014-218
A13-11	08001-0004	1	2	CONTACT-LAMP	28480	08001-0004
A13-12	08001-2005	5	1	SUPPORT-READOUT	28480	08001-2005
A13-13	08001-2006	7	1	SHAFT-READOUT	28480	08001-2006
A13-14	08001-2007	9	1	SHAFT-KNOB	28480	08001-2007
A13-15	08001-2008	1	1	SHAFT-DRIVE	28480	08001-2008
A13-16	08001-2012	0	1	GEAR-POY	28480	08001-2012
A13-17	08001-2013	2	1	GEAR-SHAFT READOUT	28480	08001-2013
A13-18	08001-2014	4	1	GEAR-SHAFT DRIVE	28480	08001-2014
A13-19	08001-2015	4	1	GEAR STOP	28480	08001-2015
A13-20	08001-2032	2	1	SHAFT-PINION	28480	08001-2032
A13-21	0510-0091	2	2	RETAINER-RING CRBYT EXT .25-IN-DIA STL	28480	0510-0091
A13-22	0570-0038	2	2	SCREEN-MACH 4-80 .25-IN-LG RD-ND-BLT	00000	ORDER BY DESCRIPTION
A13-23	1400-0072	5	1	PIN-BULL .062-IN-DIA .375-IN-LG 8X-CU	28480	1400-0072
A13-24	2190-0006	1	1	WASHER-LK MLC NO. 6 .141-IN-ID	28480	2190-0006
A13-25	2190-0016	3	1	WASHER-LK INTL Y 3/8 IN .377-IN-ID	28480	2190-0016
A13-26	2190-0001	0	2	WASHER-PL W NO. 8 .12-IN-ID .312-IN-OD	28480	2190-0001
A13-27	2360-0197	2	1	SCREEN-MACH 4-80 .375-IN-LG PAN-ND-POZI	00000	ORDER BY DESCRIPTION
A13-28	2490-0001	4	1	NUT-HEX-DCL-CHAM 3/8-32-TMD .094-IN-TMK	00000	ORDER BY DESCRIPTION
A13-29	3030-0022	8	1	SCREW-SET 6-32 .125-IN-LG SMALL CUP-PT	00000	ORDER BY DESCRIPTION
A13-30	3050-0017	9	6	WASHER-PL MTL 1/4 IN .26-IN-ID	28480	3050-0017
A13-31	3050-0066	8	1	WASHER-PL MTL NO. 6 .147-IN-ID	28480	3050-0066
A13-32	3050-0161	8	1	WASHER-SPR NAVY 1/4 IN .265-IN-ID	28480	3050-0161
A13-33	3050-0177	2	1	WASHER-PL MTL NO. 8 .168-IN-ID	28480	3050-0177
A13-34	9300-0048	3	1	PIPE-FLEXIBLE LIGHT	8747D	EP127 CORD
A14	08001-0047	7	1	BROADBAND AMPLIFIER ASSEMBLY (INCL C1, J1-2, A14A1 ASBY & COVER) (OPT 007 ONLY)	28480	08001-0047
A14	08001-2051	2	1	BOX-8B AMPLIFIER ASSEMBLY-SHIELD	28480	08001-2051
A14C1	0160-2049	1	1	CAPACITOR-FDTHRU 5000PF +80 -20% 500V	33095	54-743-009-15VDC-500Z
A14J1	1250-0829	3	1	CONNECTOR-RF 84C M 8CL-MOLE-PR 50-OMM	28480	1250-0829
A14J2	1250-0829	3	1	CONNECTOR-RF 84C M 8CL-MOLE-PR 50-OMM	28480	1250-0829
A14A1	08001-0046	5	1	BOARD ASSEMBLY-BROADBAND AMPLIFIER	28480	08001-0046
A14A1C1	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C2	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C3	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C4	0160-2266	4	1	CAPACITOR-FXD 24PF +-5% 500VDC CER 80-30	28480	0160-2266
A14A1C5	0150-0050	6	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C6	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C7	0160-2250	6	1	CAPACITOR-FXD 5.1PF 500VDCW CER	7293Z	501-000-6100-5100
A14A1C8	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C9	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1C10	0150-0050	9	1	CAPACITOR-FXD 1000PF +80-20% 1KVDC CER	28480	0150-0050
A14A1L1				NR, P/O 8D ASBY, TYPICAL VALUE 20/30HM		
A14A1L2				NR, P/O 8D ASBY, TYPICAL VALUE 20/30HM		
A14A1L3	9100-2247	4	1	COIL-MLD 100HM 10% 63% .093DX .25LG-ND	28480	9100-2247
A14A1Q1	1854-0345	8	1	TRANSISTOR NPN 2N5179 SI TC-72 PD=200MW	04713	2N5179
A14A1Q2	1854-0345	8	1	TRANSISTOR NPN 2N5179 SI TC-72 PD=200MW	04713	2N5179
A14A1Q3	1854-0345	8	1	TRANSISTOR NPN 2N5179 SI TC-72 PD=200MW	04713	2N5179
A14A1R1	0683-5605	3	1	RESISTOR 68 5% .25W FC TC=400/+500	01121	C86805
A14A1R2	0683-5625	3	4	RESISTOR 5.6K 5% .25W FC TC=400/+700	01121	C85625
A14A1R3	0683-5625	3	1	RESISTOR 5.6K 5% .25W FC TC=400/+700	01121	C85625
A14A1R4	0683-5605	9	1	RESISTOR 56 5% .25W FC TC=400/+500	01121	C85605
A14A1R5	0683-6215	3	2	RESISTOR 620 5% .25W FC TC=400/+600	01121	C86215
A14A1R6	0683-5625	3	1	RESISTOR 5.6K 5% .25W FC TC=400/+700	01121	C85625
A14A1R7	0683-5625	3	1	RESISTOR 5.6K 5% .25W FC TC=400/+700	01121	C85625
A14A1R8	0683-1015	7	1	RESISTOR 100 5% .25W FC TC=400/+500	01121	C81015
A14A1R9	0683-5605	9	1	RESISTOR 56 5% .25W FC TC=400/+500	01121	C85605
A14A1R10	0683-6215	3	1	RESISTOR 620 5% .25W FC TC=400/+600	01121	C86215
A14A1R11	0683-3325	6	1	RESISTOR 3.3K 5% .25W FC TC=400/+700	01121	C83325
A14A1R12	0683-1035	1	1	RESISTOR 10K 5% .25W FC TC=400/+700	01121	C81035
A14A1R13	0683-5605	9	1	RESISTOR 56 5% .25W FC TC=400/+500	01121	C85605
A14A1R14	0683-2715	6	1	RESISTOR 270 5% .25W FC TC=400/+600	01121	C82715
A14A1R15	0683-1525	6	2	RESISTOR 1.5K 5% .25W FC TC=400/+700	01121	C81525
A14A1R16	0683-1525	6	1	RESISTOR 1.5K 5% .25W FC TC=400/+700	01121	C81525

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number	
A15	08601-6062	9	1	AM/FM MONITOR ASSEMBLY (OPT 001 AND 012 ONLY)	28480	08601-6062	
A15	08601-6075	6	1	AM/FM MONITOR ASSEMBLY (OPT 002 AND 011 ONLY)	28480	08601-6075	
A15C1	0180-1743	2	2	CAPACITOR-FXD .1UF±10% 35VDC TA	56289	150D10X9035AR	
A15C2	0180-0154	5		CAPACITOR-FXD 2200PF ±10% 200VDC POLYE	28480	0180-0154	
A15C3	0180-2200	4		CAPACITOR-FXD .01UF±10% 50VDC TA	56289	150D05X70008Z	
A15C4				NOT ASSIGNED			
A15C5	0180-0203	5		CAPACITOR-FXD 150PF ±1% 300VDC MICA	28480	0180-0203	
A15C6	0180-3471	5	1	CAPACITOR-FXD 1000PF ±1% 300VDC MICA	28480	0180-3471	
A15C7	0180-0374	3		CAPACITOR-FXD 10UF±10% 20VDC TA	56289	150D10X90208Z	
A15C8	0180-0197	3		CAPACITOR-FXD 2.2UF±10% 20VDC TA	56289	150D022X90208Z	
A15C9	0180-2055	9		CAPACITOR-FXD .01UF ±10% 20% 100VDC CER	28480	0180-2055	
A15C10	0180-2055	9		CAPACITOR-FXD .01UF ±10% 20% 100VDC CER	28480	0180-2055	
A15C11	0180-0154	5	1	CAPACITOR-FXD 2200PF ±10% 200VDC POLYE	28480	0180-0154	
A15C12	0180-2200	6		CAPACITOR-FXD 220UF±10% 10VDC TA	56289	150D22X90108Z	
A15C13	0180-0374	3		CAPACITOR-FXD 10UF±10% 20VDC TA	56289	150D10X90208Z	
A15C14	0180-0197	3		CAPACITOR-FXD 10UF±10% 20VDC TA	56289	150D10X90208Z	
A15C15	0180-0197	3		CAPACITOR-FXD 2.2UF±10% 20VDC TA	56289	150D022X90208Z	
A15C16	0180-0197	3					
A15C16	0180-0197	3					
A15C17	1901-0050	3	6	CAPACITOR-FXD 2.2UF±10% 20VDC TA	56289	150D022X90208Z	
A15C18	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NB DO-35	28480	1901-0050	
A15C19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NB DO-35	28480	1901-0050	
A15C20	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NB DO-35	28480	1901-0050	
A15C21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NB DO-35	28480	1901-0050	
A15C22	1901-0050	3					
A15L1	0180-0237	2	2	COIL-WLD 200UH 5% QMS .155DX.375LG-NOM	28480	0180-0237	
A15L2	0180-0237	2		COIL-WLD 200UH 5% QMS .155DX.375LG-NOM	28480	0180-0237	
A1501	1855-0071	7	4	TRANSISTOR NPN SI PD300MH FT200MHZ	28480	1855-0071	
A1502	1855-0020	8		TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	28480	1855-0020	
A1503	1855-0020	8		TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	28480	1855-0020	
A1504	1855-0020	8		TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	28480	1855-0020	
A1505	1855-0071	7		TRANSISTOR NPN SI PD300MH FT200MHZ	28480	1855-0071	
A1506	1855-0071	7	1	TRANSISTOR NPN SI PD300MH FT200MHZ	28480	1855-0071	
A1507	1855-0020	8		TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	28480	1855-0020	
A1508	1855-0020	8		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0020	
A1509	0675-5145	2	2	RESISTOR 510K 5% .25W PC TC90±100	01121	CS5145	
A1510	0757-0458	7		RESISTOR 51.1K 1% .125W F TC00±100	24546	CS-1/8-T0-5112-F	
A1511	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1512	0757-0280	3		RESISTOR 7.5K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1513	0757-0180	7		RESISTOR 26.1K 1% .125W F TC00±100 (OPT 001 ONLY)	24546	CS-1/8-T0-2612-F	
A1514	0675-5145	5					
A1515	0757-0442	9	1	RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1516	0757-0222	5		RESISTOR 909 1% .125W F TC00±100	24546	CS-1/8-T0-909R-F	
A1517	0757-0280	1		RESISTOR 9.09K 1% .125W F TC00±100	19701	MF4C1/8-T0-9091-F	
A1518	0757-0442	3		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1519	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1520	2100-2889	0	2	RESISTOR-TMR 5K 10% C SIDE-ADJ 1-TMR	30983	ETS0X502	
A1521	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1522	0757-0458	7		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1523	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1524	0757-0458	7		RESISTOR 51.1K 1% .125W F TC00±100	24546	CS-1/8-T0-5112-F	
A1525	0757-0458	7					
A1526	0757-0280	3	1	RESISTOR 1K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1527	0757-0458	7		RESISTOR 51.1K 1% .125W F TC00±100	24546	CS-1/8-T0-5112-F	
A1528	0757-0280	3		RESISTOR 1K 1% .125W F TC00±100	24546	CS-1/8-T0-1001-F	
A1529	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1530	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1531	0757-0401	0	1	RESISTOR 100 1% .125W F TC00±100	24546	CS-1/8-T0-101-F	
A1532	0757-0442	9		RESISTOR 10K 1% .125W F TC00±100	24546	CS-1/8-T0-1002-F	
A1533	0675-5145	3		RESISTOR 215K 1% .125W F TC00±100	24546	CS-1/8-T0-2153-F	
A1534	2100-2517	4		RESISTOR-TMR 50K 10% C SIDE-ADJ 1-TMR	30983	ETS0X503	
A1535	0757-0463	4					
A15U1	1820-0201	8	2	IC OP AMP OP TC00	00713	MC1396	
A15U2	1820-0201	8		IC OP AMP OP TC00	00713	MC1396	

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-2. REPLACEABLE PARTS


Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
C1	0100-0190	9	2	CAPACITOR-FXD 1500UF*100-10X 50VDC AL	20480	0100-0190
C2	0100-0190	9			20480	0100-0190
C3	0100-0160	1	1	CAPACITOR-FXD .1UF *10X 200VDC POLYE	20480	0100-0160
C4	0100-0291	3	1	CAPACITOR-FXD 1UF*10X 35VDC TA	30259	150D109X9335A2
CR1	1901-0033	2	1	DIODE-GEN PRP 100V 200MA DG-7	20480	1901-0033
CR2	1902-1225	0	1	DIODE-ZNR 1N2971A 7.5V 10X DG-4 PD=10W	12934	1N2971A
F1	2110-0421	0	1	FUSE .375A 250V 1.25X.25 UL (FOR 230V OPERATION)	75915	313,375
F1	2110-0300	2	1	FUSE .75A 250V 1.25X.25 UL (FOR 115V OPERATION) (OPT. 012)	75915	313,750
F2	2110-0312	0	1	FUSE 1A 250V 1.25X.25 UL (OPT 012 ONLY)	71400	MOL-1,
FL1	9100-3115	7	1	FILTER-LINE CEE-22-TERMS	20480	9100-3115
FL1	9100-2789	0	1	FILTER-LINE (OPT. 012 ONLY)	20480	9100-2789
J1	1250-0102	5	7	CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0102
J2	1250-0083	1	0	CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J3	1250-0083	1		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J4	1250-0083	1		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J5	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0102
J6	1250-0083	1		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J7	1250-0083	1		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J8	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0102
J9	1250-0083	1		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0083
J10	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM	20480	1250-0102
J11	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM (OPT 008 ONLY)	20480	1250-0102
J12	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM (OPT 007 ONLY)	20480	1250-0102
J13	1250-0102	5		CONNECTOR-RF BNC FEM 8GL-HOLE-PR 50-OHM (OPT 007 ONLY)	20480	1250-0102
M1	1120-1403	2	1	METER 2.25-IN) 100UA FSD) LINEAR) PIVOT	20480	1120-1403
M1	1120-1515	1	1	METER METER, 100 UA (OPT 008, 009, AND 010 ONLY)	20480	1120-1515
Q1	1854-0063	7	1	TRANSISTOR NPN 2N3055 B1 TO-3 PD=115W	01920	2N3055
Q2	1200-0043	0	1	INSULATOR-K, TR ALUMINUM	20480	1200-0043
Q2	1853-0052	2	1	TRANSISTOR NPN 2N3740 B1 TO-18 PD=25W	06713	2N3740
Q3	0140-0162	7	2	INSULATOR-NSTR ALUMINUM	20480	0340-0162
Q3	1854-0237	7	1	TRANSISTOR NPN B1 TO-18 PD=20W FT=10MHZ	20480	1854-0237
Q3	0140-0162	7		INSULATOR-NSTR ALUMINUM	20480	0340-0162
R1	2100-2652	0	1	RESISTOR-VAR CONTROL C 20 20K LIN	20480	2100-2652
R2	2100-2352	5	1	RESISTOR-VAR CONTROL C 1K 10K LIN	20480	2100-2352
R3	2100-1031	3	1	RESISTOR-VAR CONTROL CCP 100 10K LIN	20480	2100-1031
R4	2100-2651	7	1	RESISTOR-VAR CONTROL CCP 500K 20K LIN NOT ASSIGNED	20480	2100-2651
R6				NOT ASSIGNED		
R7	0757-0010	7	1	RESISTOR 511 1X .125W F TC00+100	24540	C4-1/8-T0-511A-F
R8	2100-2335	4	1	RESISTOR-VAR PREC HW 10-TRN 1K 3X	20480	2100-2335
R9	0690-3450	5	1	RESISTOR 21.5 1X .125W F TC00+100 NOT ASSIGNED	03080	PM25-1/8-T0-215A-F
R10				NOT ASSIGNED		
R11	0690-3102	0	1	RESISTOR 40.4K 1X .125W F TC00+100	24540	C4-1/8-T0-4042-F
R12	0690-3100	0	1	RESISTOR 31.6K 1X .125W F TC00+100	24540	C4-1/8-T0-3102-F
R12	0690-3451	0	1	RESISTOR 133K 1X .125W F TC00+100 (OPT 006 ONLY)	24540	C4-1/8-T0-133K-F
R12						
R13	0683-3145	2	1	RESISTOR 510K 5X .25W FC TC00+100/100 (OPT 001, 011, AND 012 ONLY)	01121	C05145
R14	2100-1900	1	1	RESISTOR-VAR CONTROL CC 10K 20K LIN (OPT 001, 002 AND 011 ONLY)	20480	2100-1900
R15	0686-4725	0	1	RESISTOR 4.7K 5X .5W CC TC00+447 (OPT 001, 002 ONLY)	01121	R04725
S1	3100-2055	0	1	SWITCH-ROTARY LEVER 1.250 MTG CTR SPCS	20480	3100-2055
S2	0370-0432	7	5	KNOB LEVER SWITCH .200 X .220 X .375IN	20480	0370-0432
S2	3100-2020	3	1	SWITCH-ROTARY 1.250 STRUT CTR SPCS; 2	20480	3100-2020
S3	0370-0432	7		KNOB LEVER SWITCH .200 X .220 X .375IN	20480	0370-0432
S3	3101-0040	1	1	SWITCH-PS SPST-NO MOM .5A 115VAC RED-BTN	20480	3101-0040
S4	3100-2055	0	3	SWITCH-ROTARY LEVER 1.250 MTG CTR SPCS	20480	3100-2055
S5	0370-0432	7		KNOB LEVER SWITCH .200 X .220 X .375IN	20480	0370-0432
S5	3100-2055	0		SWITCH-ROTARY LEVER 1.250 MTG CTR SPCS	20480	3100-2055
S6	0370-0432	7		KNOB LEVER SWITCH .200 X .220 X .375IN	20480	0370-0432
S6	3100-2055	0		SWITCH-ROTARY LEVER 1.250 MTG CTR SPCS	20480	3100-2055
S6	0370-0432	7		KNOB LEVER SWITCH .200 X .220 X .375IN	20480	0370-0432

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C	D	Qty	Description	Mfr Code	Mfr Part Number
87	3101-1957	7		1	SWITCH-PR DPDT-NO ALTR 1/2 5A 250VAC	28480	3101-1957
	2140-0244	4		1	LAMP-GLOW A1M 135/105VDC 1.2MA T-2-BULB	08480	A1M
	3101-1234	1		1	SWITCH-SEL DPDT STD 1/2 5A 250VAC 3-CDR-LUG (AC LINE)	28480	3101-1234
89	3101-1081	8		1	SWITCH-BENS SPDT SUBMIN .5A 30VDC	28480	3101-1081
	3101-1081	8		2	SWITCH-BENS SPDT SUBMIN .5A 30VDC	28480	3101-1081
810	3101-0011	2		1	SWITCH-SEL DPDT STD .5A 125VAC/DC	28480	3101-0011
	3101-1205	8		1	SWITCH-BENS DPDT-DB SUBMIN 10A 28VDC (OPT 001, 002, 011, AND 012 ONLY)	28480	3101-1205
811	3101-1206	9		1	ACTUATOR-DB PL-LF (OPT 001, 002, 011, AND 012 ONLY)	28480	3101-1206
811	08401-2047	3		1	PUSHBUTTON (MOD)	28480	08401-2047
	08401-2054	8		1	KNOB (MOD)	28480	08401-2054
T1	9100-2731	1		1	TRANSFORMER-POWER 115/230V 50-60HZ	28480	9100-2731
W1	8120-1348	5		1	CABLE ASBY 18AWG 3-COND BLK-JKY	28480	8120-1348
	08401-8009A	9		1	CABLE ASSEMBLY-POWER (OPT. 012 ONLY)	28480	08401-8009A
W2	08401-8039	0		1	CABLE ASSEMBLY-GRAY (VTO/LOOP AMPLIFIER)	28480	08401-8039
W3	08401-8037	6		3	CABLE-BLUE (VTO/VTO-BNC JACK)	28480	08401-8037
W4	08401-8029	9		3	CABLE-BLACK (VTO/XTAL OSC.)	28480	08401-8029
W5	08401-8032	6		1	CABLE-GREEN (DISC./VTO TV)	28480	08401-8032
W6	08401-8031	6		1	CABLE-RED (LFP/VIDEO AMPL)	28480	08401-8031
W7	08401-8030	2		1	CABLE-BROWN (XTAL OSC/LOOP AMPL)	28480	08401-8030
W8	08401-8038	8		1	CABLE-VIOLET (LOOP AMPL/UNCAL BNC JACK)	28480	08401-8038
W9	08401-8029	9		1	CABLE-BLACK (LOOP AMPL/DIV.)	28480	08401-8029
W10	08401-8029	9		1	CABLE-BLACK (DIV./DISC.)	28480	08401-8029
W11	08401-8036	4		1	CABLE-WHITE (ATTEN/RP OUT JACK)	28480	08401-8036
W11	08401-8054	2		1	OUTPUT CABLE-BNC 75 OHM (OPT 008 ONLY)	28480	08401-8054
W11	08401-8055	4		1	OUTPUT CABLE-TNC 75 OHM (OPT 009 ONLY)	28480	08401-8055
W11	08401-8056	6		1	OUTPUT CABLE-WZ 75 OHM (OPT 01 ONLY)	28480	08401-8056
W12	08401-8037	6		1	CABLE-BLUE (DIV./AUX OUT)	28480	08401-8037
W13	08401-8037	6		1	CABLE-BLUE (DIV./AUX OUT) OPT 004 ONLY	28480	08401-8037
W14	08401-8052	8		1	CABLE-YELLOW (LC INPUT/DB AMPL.)	28480	08401-8052
W15	08401-8078	2		1	CABLE-WHITE (VTO OUT/VTO) OPT 007 ONLY	28480	08401-8078
W16	08401-8034	0		1	CABLE-ORANGE (AM OUT/XTAL OSC) OPT 007 ONLY	28480	08401-8034
W17	08401-8033	8		1	CABLE-YELLOW (ALC SIG/PREG CONT)	28480	08401-8033
W18	08401-8035	2		1	CABLE-GRAY (SW/DISC.)	28480	08401-8035
W19	10502-8001	6		1	CABLE-GRAY (VTO OUT/LO INPUT)	28480	10502-8001
W20	11592-80013	5		1	CABLE ASSEMBLY (OPT. 007)	28480	11592-80013
W21	8120-2582	1		1	CABLE ASBY-COAX 50-OHM 4-IN-LG JCK (OPT 012 ONLY)	28480	8120-2582
					MISCELLANEOUS PARTS		
	0300-0042	4		1	TERMINAL-BLDR LUG PL-MTG FOR-DB-SCR	28480	0300-0042
	1200-0748	4		1	SOCKET-IC 14-COND DIP-BLDR	28480	1200-0748
	1250-0038	4		1	ADAPTER-COAX TEE F-BNC M-BNC M-BNC (OPT 008 ONLY)	28480	1250-0038
	1490-0849	5		1	BRACKET-RYANG 6-LS X 6-LS LG .31-IN-OD STL	28480	1490-0849
	2190-0007	2		1	WASHER-LK INTL T NO. 4 .141-IN-ID	28480	2190-0007
	2300-0195	0		1	SCREW-MACH 6-32 .312-IN-LG PAN-ND-PZII	08000	ORDER BY DESCRIPTION
	2420-0001	5		1	NUT-MEX-M/LWR 6-32-TND .109-IN-TMK	08000	ORDER BY DESCRIPTION
	5040-0170	6		2	GUIDE-PLUG-IN PC BOARD (OPT 001, 002, 011 AND 012 ONLY)	28480	5040-0170
	8160-0084	8		1	RPI ROUND STRIP NI-ALY .125-IN-OD	28480	8160-0084
	08401-0014	2		1	BRACKET-POT (OPT. 007 ONLY)	28480	08401-0014
	08498-0012	3		1	BRACKET-RPI	28480	08498-0012
					FRONT PANEL		
	0370-0134	6		1	KNOB .500 IN OD, .125 IN DIA SHAPED	28480	0370-0134
	0370-0487	2		1	KNOB-1.250 IN OD, .250 IN DIA SHAPED	28480	0370-0487
	0370-0125	5		1	KNOB .500 IN OD, .125 IN DIA SHAPED	28480	0370-0125
	0370-0149	3		1	KNOB-CRANK 1.425 IN OD, .250 IN DIA	28480	0370-0149

See introduction to this section for ordering information
 *Indicates factory selected value

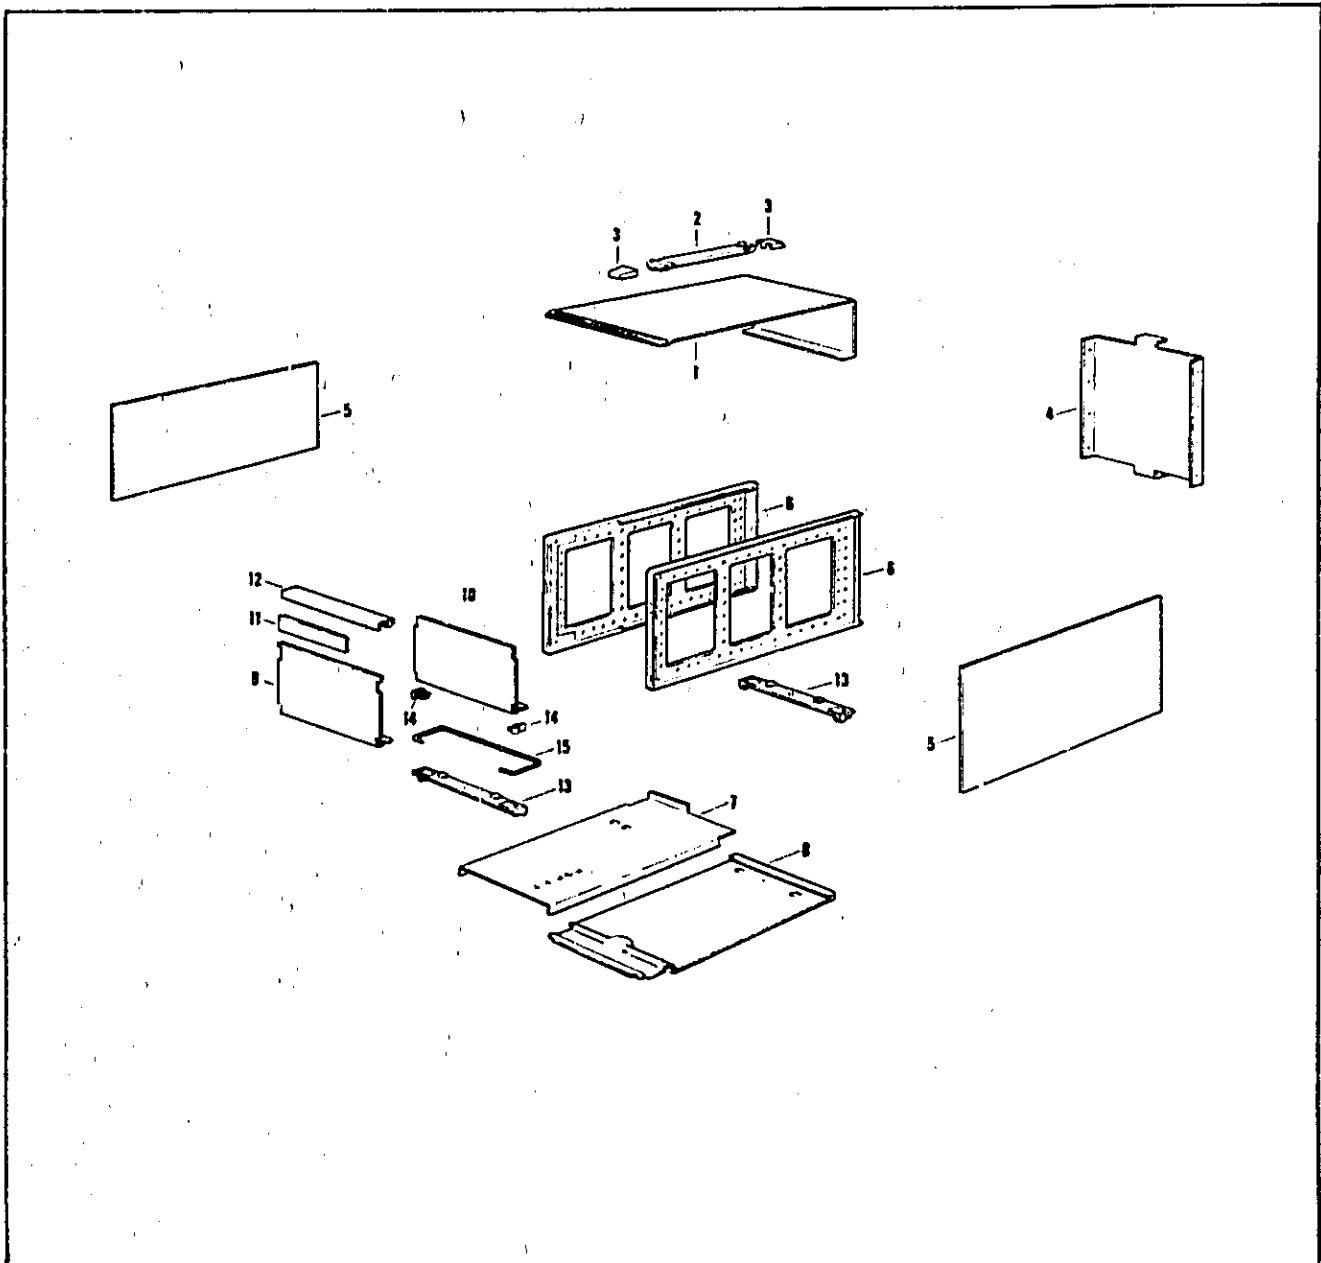

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
CABINET PARTS						
1	00001-00044	1	1	COVER-TOP	20400	00401-00044
2	1440-0076	2	1	HANDLE-POLYP 7,75-LG	20400	1440-0076
3	1440-0077	6	1	RETAINER-HANDLE STL	20400	1440-0077
4	00001-00032	7	1	PANEL-REAR	20400	00001-00032
5	5000-0767	7	1	COVER-SIDE	20400	5000-0767
6	5000-0700	4	2	FRAME ASSEMBLY- 6 X 16 IN	20400	5000-0700
7	00001-00001	0	1	DECK-MAIN	20400	00001-00001
8	5000-0935	0	1	COVER ASSEMBLY-BOTTOM	20400	5000-0935
9	00001-00043	0	1	PANEL-FRONT	20400	00001-00043
10	00001-00003	0	1	PANEL-SUB	20400	00001-00003
11	00001-20009	0	1	PANEL-READOUT	20400	00001-20009
12	00001-20091	0	1	METER TRIM-TOP	20400	00001-20091
13	5000-0720	2	2	FOOT ASSEMBLY MODULE	20400	5000-0720
14	5000-0700	0	2	HINGE	20400	5000-0700
15	1440-0032	0	1	TYLT STAND 2,230-IN-W 7,000-IN-CA-LG BBT	20400	1440-0032

Figure 6-2. Cabinet Parts

Table 6-2. REPLACEABLE PARTS

Reference Designation	HP Part Number	C	D	Qty	Description	Mfr Code	Mfr Part Number
	4000-0005	4	1	1	BEZEL/METER WINDOW (STD) OLIVE BLACK	20000	4000-0005
	00001-2000	3	1	1	ADAPTER-SHAFT	20000	00001-2000
	00001-00003	0	1	1	PANEL-FRONT	20000	00001-00003
	00001-00004	3	1	1		20000	00001-00004
	00001-00005	2	1	1	PANEL-FRONT (OPT 011) (OPT 001,002)	20000	00001-00005
	00001-00006	9	1	1	NAMEPLATE-400HZ MOD (OPT. 005 ONLY)	20000	00001-00006
	2110-0070	5	1	1	REAR PANEL MISCELLANEOUS		
	2110-0065	0	1	1	PUSHHOLDER BODY EXTR PST; BAYONET; TND	75015	34003-010
	0900-0002	6	1	1	PUSHHOLDER CAP EXTR PST; BAYONET; 30A	20000	2110-0065
	00001-00032	7	1	1	PLUG-HOLE DOME-MD FOR .5-D-HOLE STL	20000	0900-0002
					PANEL-REAR	20000	00001-00032
	1250-0053	5	0	0	CAP-COAX TO FIT F-BNC NON-BMTG 2.5-CM	20000	1250-0053
	5020-0701	7	3	3	CABINET SPACER	20000	5020-0701
	00001-00107	3	1	1	PANEL-FRONT (OPT 012 ONLY)	20000	00001-00107
	00001-00035	0	1	1	BRACKET-ATTEN MTG (OPTION 012 ONLY)	20000	00001-00035
	00001-00036	1	1	1	BRACKET-TRANSFORMER MTG. (OPT. 012 ONLY)	20000	00001-00036
	00001-00037	2	1	1	PANEL-REAR (OPT. 012 ONLY)	20000	00001-00037
	00001-00038	3	1	1	COVER-TOP (OPT. 012 ONLY)	20000	00001-00038
	00001-00039	4	1	1	COVER-BOTTOM (OPT. 012 ONLY)	20000	00001-00039
	00001-00040	7	2	2	COVER-SIDE (OPT. 012 ONLY)	20000	00001-00040
	00001-20087	4	1	1	GUIDE-BOARD (OPT. 012 ONLY)	20000	00001-20087
	00001-20088	5	1	1	BAR-BRACE (OPT. 012 ONLY)	20000	00001-20088
	00001-20093	2	1	1	TRIM-MEYER (OPT. 012 ONLY)	20000	00001-20093
	00001-00106	2	1	1	CABLE ASSEMBLY-RP (OPT. 012 ONLY)	20000	00001-00106

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-3. Code List of Manufacturers

MFR NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
00003	GTE SYLVANIA MINIATURE LT PROD	HILLSBORO NH	03244
00000	ANY SATISFACTORY SUPPLIER		
00000	MOORECO NORTH AVER PHILIPS LTD CORP	LOS ANGELES CA	90021
00000	KEMET		
01121	ALLEN-BRADLEY CO	MILWAUKEE WI	53204
01295	TEXAS INSTR INC SEMICONDUCTOR DIV	DALLAS TX	75222
01920	RCA CORP SOLID STATE DIV	BOMERVILLE NJ	08076
02110	FERRONCUBE CORP	SAUGERTIES NY	12077
03000	KODAK PYROFILM CORP	WHIPPANY NJ	07981
04713	INTEGRAL SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85002
06001	GE CO ELEK CAP & BAT PROD DEPT	INMO SC	29003
07203	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW CA	94042
12950	SIEMENS CORR COMPONENTS GROUP	SCOTTSDALE AZ	85252
10011	DURANT DIGITAL INSTRUMENTS	MILWAUKEE WI	53201
10701	MERCO/ELECTRA CORP	MINERAL WELLS TX	76007
20500	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
20400	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
30000	MERCO/ELECTRA CORP	SAN DIEGO CA	92121
31000	SPECTRUM CONTROL INC	FAIRVIEW NJ	10415
51002	CENTRE ENGINEERING INC	STATE COLLEGE PA	16801
50200	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
71001	BOSTON GEAR MFG DIV OF NA ROCKWELL	QUINCY MA	02171
71000	BUSSMAN MFG DIV OF MCGRAW-EDISON CO	ST LOUIS MO	63107
72130	ELECTRO MOTIVE COMP SUB IEC	MILLIMANTIC CT	06226
72902	ERIE TECHNOLOGICAL PRODUCTS INC	ERIE PA	16512
73130	BECHMAN INSTRUMENTS INC MELIPOT DIV	FULLERTON CA	92634
70070	JOHNSON E F CO	WABEKA NH	30093
75012	TRW INC PHILADELPHIA DIV	PHILADELPHIA PA	19100
75015	LITTELFUSE INC	DES PLAINES IL	60016
80011	TRW CAPACITOR DIV	OGALLALA NE	67853
87070	NO MFR DESCRIPTION FOR THIS MFR NUMBER		

**BACK DATING
MANUAL
CHANGES**

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION

7-2. This manual includes information that applies directly to HP Model 8601A instruments serial prefixed 969-. To adapt this manual to instruments with serial numbers prefixed 959-, 954-, 945-, 912-, 839-, 838-, 828-, 826-, or 818-, make the necessary changes listed in Table 7-1. A summary of the circuit assembly components or assemblies affected is given in Table 7-2.

NOTE

Some changes are already shown or noted in the schematic section. If differences are detailed on the schematic diagram, the serial prefix numbers are given in the schematic notes.

7-3. Information for adapting this manual to instruments with serial number prefixes greater than 969- is given in a Manual Changes sheet, included with this manual.

Table 7-1. Change Information for Serial Prefixes 818- thru 1843A.

Serial Prefix or Number	Make Manual Changes*
959-	1
954-	1, 2
945-	1 thru 3
912-00881 thru -01030	1 thru 4
912-05531 thru -00880	1 thru 5
912-00531 thru -00580	1 thru 6
839-00530, -00529 -00527, -00523 -00496, -00468 -00467	1 thru 7
839-00460 thru -00462	
839-00529 839-00524 thru -00526 839-00497 thru -00522 839-00469 thru -00495 839-00463 thru -00466 839-00381 thru -00459	1 thru 8
839-00331 thru -00380	1 thru 9
838-	10
828-	10, 11
826-	10 thru 12
818-	10 thru 13
*and changes 14-34	

Serial Prefix or Number	Make Manual Changes
0969A02216 thru 02355	14 thru 34
0969A02356 thru 02565	15 thru 34
1144A02566 thru 02810	16 thru 34
1144A02811 thru 02845	17 thru 34
1144A02846 thru 02985	18 thru 34
1144A02986 thru 03055	19 thru 34
1144A03056 thru 03300	20 thru 34
1144A03301 thru 03545	21 thru 34
1144A03546 thru 04245	22 thru 34
1144A04246 thru 04630	23 thru 34
1512A04631 thru 04630	24 thru 34
1512A04736 thru 04910	25 thru 34
1512A04911 thru 05155	26 thru 34
1512A05156 thru 1512A prefix	27 thru 34
1612A	28 thru 34
1707A	29 thru 34
1728A	30 thru 34
1752A	31 thru 34
1804A	32 thru 34
1813A	33 thru 34
1843A	34

Table 7-2. Changes Summary (1 of 2)

Change	Assembly (s) Affected													
	A1 Assy	A2 Assy	A2 Assy	A4 Assy	A5 Assy	A6 Assy	A7 Assy	A8 Assy	A9 Assy	A10 Assy	A11 Assy	A12 Assy	A13 Assy	No Prefix
1		A1C14 A1C15												FL1, F1, S7, S8, W1
2		A1L5												
3	A1	A1R16 A1R19 A1R12		A1					Q11/42 R3/18/19 R173/124			C2 (wiring)		R5/6/10 C4
4														R2 Bracket
5					Module Box									
6										CR14				
7		A1C7 A1R1-2	A1C27 A1C28 A1C29	A1C17	A1R9-10 A1R12-13						R10 R12			
8	A1C5 A1C10 A1L1 A1R19 A1R22 A1R30													
9														Q3
10	A1	A1	A2	A1	A1				Q17/18 R11/23 R157/165					FL1 S10 and specifications
11						A1R6			R180 C14					
12		A1R8 A1R2	A1C8	A2	A1R2 A1C14/C34									
13				A1R20	A1Q6	A1			R169 R134 R181					
14									E1					
15									C11					

Table 7-2. Changes Summary (2 of 2)

Changes	Assembly(s) Affected													No. Prefix
	A1 Assy	A2 Assy	A3 Assy	A4 Assy	A5 Assy	A6 Assy	A7 Assy	A8 Assy	A9 Assy	A10 Assy	A11 Assy	A12 Assy	A13 Assy	
16														outside panels color change
17				A1R7										
18									R3					
19				A1Q1+3 A1Q12										
20									R144					
21											R7			
22				A1R14										
23									R120					
24														specifications
25							MP1				S1			
26										R32				
27												C1		
28									F1					
29									R178	A30				ST, Fuseholder
30														F1
31									C41, R24, 34, 88, 95, 117, 130, 136, 160, 162, 181					
32								F1						
33									C10, 36					
34		A1												
35		Q1+3												R11

CHANGE 1

Schematic Sheet 2; Divider, Divider Bypass A2:
Delete capacitors A2A1C14 and A2A1C15, replace with open circuit.

Schematic Sheet 8, Power Supply:
AC Primary circuit is as shown in Figure 7-1.

Table 6-2, Replaceable Parts:

Change fuse F1 (115V) to HP Part No. 2110-0007.
Change fuse F1 (230V) to HP Part No. 2110-0008.
Change line filter FL1 to HP Part No. 9100-2821. The ac receptacle is an integral part of the filter unit.
Change switch S7 to HP Part No. 3101-0100.
Change switch S8 to HP Part No. 3101-0033.
Change power cable W1 to HP Part No. 8120-0078.
Change rear panel to HP Part No. 08601-00033.

CHANGE 2

Schematic Sheet 2; Divider, Divider Bypass, A2:
Delete inductor A2A1L5, replace with short circuit (see Operation discussion opposite schematic).

CHANGE 3

Schematic Sheet 1; A1 Discriminator Assembly:
Schematic Diagram is changed as shown in Figure 7-3. Component identification photo is as shown in Figure 7-2.

Schematic Sheet 2; A2 Divider Assembly:

Delete resistor A2A1R19.
Connect resistor A2A1R16, 100 ohms, between A2J2 and ground.
Connect resistor A2A1R12, 33 ohms, in parallel with A2A1C8.

Schematic Sheet 4, A4 Crystal Oscillator Assembly:

Schematic diagram is changed as shown in Figure 7-4. Component identification photo is as shown in Figure 7-5.

Schematic Sheet 9:

Delete A9Q11, A9R185, A9R184, and SWEEP INHIBIT input connector.
Change A9C1 to 1.5 μ F.
Replace A9CR31 with short circuit.
Change A9R3 to 23.7K and A9R2 to 9090 ohms.
Change A9C11 to 0.01 μ F.
Component identification photo is as shown in Figure 7-6.

Schematic Sheet 10:

Change A9R126 to 1000 and A9R123 to 4220.
Add A9R125, 1100 ohms, in parallel with A9R126.
Add A9R124, 100 ohm, in parallel with A9R123.
Component identification photo is as shown in Figure 7-7.
Add Sweep reference circuit as shown in Figure 7-8.

Schematic Sheet 12:

Add resistor R5, 34.8 ohm, in parallel with R3.
Add resistor R6, 5 ohm, in parallel with R1.
Change capacitor A12C2 to 60 μ F.
Change capacitor C4 to 0.33 μ F.

Table 6-2, Replaceable Parts:

Change capacitor A9C1 to HP Part No. 0180-1745 C:FXD 1.5 μ F 10% 35 VDCW.
Change capacitor A9C11 to HP Part No. 0150-0093 C:FXD CER 0.01 μ F +80 -20% 100 VDCW.

Change resistor A9R3 to HP Part No. 0698-3158 R:FXD MET FLM 23.7K ohm 1% 1/8W.
 Change resistor A9R18 to HP Part No. 0698-3460 R:FXD MET FLM 422K ohm 1% 1/8W.
 Change resistor A9R19 to HP Part No. 0698-3260 R:FXD MET FLM 464K ohm 1% 1/8W.
 Change resistor A9R173 to HP Part No. 0698-3434 R:FXD MET FLM 34.8 ohm 1% 1/8W.
 Change rear panel to HP Part No. 08601-00005.
 Change resistor A9R123 to HP Part No. 0698-3154 R:FXD MET FLM 4.22K ohm 1% 1/8W.
 Change resistor A9R126 to HP Part No. J757-0159 R:FXD MET FLM 1K ohm 1% 1/2W.
 Change capacitor A12C2 to HP Part No. 0180-0106 C:FXD ELEC TA 60 μ F 20% 6 VDCW.
 Change capacitor C4 to HP Part No. 0160-0163 C:FXD MY 0.033 μ F 10% 200 VDCW.

CHANGE 4

The POWER LEVEL VERNIER potentiometer, R2, is attached (with machine-screw threads) to output attenuator body assembly.

CHANGE 5

Module box that houses A5 VTO assembly does not have side holes allowing adjustment access.

Table 6-2:

Change A5 HP Part No. to 08601-2016.

CHANGE 6**Schematic Sheet 8:**

Replace A10CR14 with short circuit.

NOTE

Diode, A10CR14, prevents momentary -75 volt power supply shorts from damaging transistors A10Q6 and A10Q7. It is recommended that A10CR14 be added to all -75 volt power supplies.

CHANGE 7**Schematic Sheet 2, A2 Divider Assembly:**

Add A2A1C7, 10 pF, in parallel with A2A1R9.

Change A2A1R1 to 61.9 ohm; also A2A1R2 to 261 ohm.

Schematic Sheet 3, A3 Loop Mixer Assembly:

Change A3A1C27 and A3A1C29 to 2000 pF.

Change A3A1C28 to 4.7 μ F.

Schematic Sheet 4, A4 Crystal Oscillator Assembly:

Circuitry is same as Figure 7-4 except capacitor A4A1C17 is 20 pF.

NOTE

In event of A4A1Q6 failure or replacement, change capacitor A4A1C17 to 24 pF.

Schematic Sheet 5, A5 Voltage Tuned Oscillator Assembly:

Change A5A1R9 to 1470 ohm, A5A1R10 to 26.1K ohm, A5A1R12 to 237K ohm, and A5A1R13 to 50K ohm.

Schematic Sheet 8, A10 Power Supply Assembly:

Change A10R10 to 19.6K ohm and A10R12 to 10K ohm.

Table 6-2, Replaceable Parts:

Add A2A1C7, HP Part No. 0160-2257 C:FXD CER 10 pF 5% 500 VDCW.

Change A2A1R1 to HP Part No. 0757-0276 R:FXD MET FLM 61.9 ohm 1% 1/8W.

Change A2A1R2 to HP Part No. 0698-3132 R:FXD MET FLM 261 ohm 1% 1/8W.

Change A3A1C27 and A3A1C29 to HP Part No. 0160-2143 C:FXD CER 2000 pF +80 -20% 1000 VDCW.

Change A3A1C28 to HP Part No. 0180-1735 C:FXD ELECT 4.7 μ F 10% 35 VDCW.
 Change A5A1R9 to HP Part No. 0757-1094 R:FXD MET FLM 1.47K ohm 1% 1/8W.
 Change A5A1R10 to HP Part No. 0698-3159 R:FXD MET FLM 26.1K ohm 1% 1/8W.
 Change A5A1R12 to HP Part No. 0698-3266 R:FXD MET FLM 237K ohm 1% 1/8W.
 Change A5A1R13 to HP Part No. 2100-2031 R:VAR CER MET 50K ohm 30% LIN 1/2W.
 Change A10R10 to HP Part No. 0698-3157 R:FXD MET FLM 19.6K ohm 1% 1/8W.
 Change A10R12 to HP Part No. 0757-0442 R:FXD MET FLM 10K ohm 1% 1/8W.

CHANGE 8

Schematic Sheet 1, A1 Discriminator Assembly:

Circuitry is as shown in Figure 7-3, except;

Change A1A1C5 to 0.47 μ F, A1A1C10 to 1000 pF, A1A1L1 to 200 μ H, A1A1R22 to 2150 ohm, A1A1R30 to 68.1K ohm, and A1A1R19 to 1780 ohms.

Table 6-2, Replaceable Parts:

Change A1A1R19 to HP Part No. 0757-0278 R:FXD MET FLM 1.78K ohm 1% 1/8W.

Change A1A1C5 to HP Part No. 0160-0174 C:FXD CER 0.47 μ F +80 -20% 25 VDCW.

Change A1A1C10 to HP Part No. 0160-0153 C:FXD MY 1000 pF 10% 200 VDCW.

Change A1A1L1 to HP Part No. 9140-0237 COIL:FXD RF 200 μ H.

Change A1A1R22 to factory selected component, HP Part No. 0698-0084 R:FXD MET FLM 2.15K ohm 1% 1/8W.

Change A1A1R30 to HP Part No. 0757-0461 R:FXD MET FLM 68.1K ohm 1% 1/8W.

CHANGE 9

Schematic Sheet 8:

Q3 is HP Part No. 1854-0253 which is a discontinued part. Recommended replacement is HP Part No. 1854-0237.

CHANGE 10

Schematic Sheet 1, A1 Discriminator Assembly:

Schematic diagram is changed as shown in Figure 7-10. Component identification photo is as shown in Figure 7-9.

Schematic Sheet 2, A2 Divider Assembly:

Schematic Diagram is changed as shown in Figure 7-12. Component identification photo is as shown in Figure 7-11. Replaceable parts information is given in Table 7-3.

Schematic Sheet 3, A3 Loop Mixer Assembly:

A3A2A1 Mixer Assembly is changed as shown in Figures 7-13 and 7-14.

Schematic Sheet 4, A4 Crystal Oscillator Assembly:

Schematic Diagram is changed as shown in Figure 7-16. Component identification photo is as shown in Figure 7-15. Replaceable parts information is given in Table 7-4.

Schematic Sheet 5, A5 VTO Assembly:

Schematic diagram is changed as shown in Figure 7-18. Component identification photo is as shown in Figure 7-17.

Table 1 1, Specifications:

The following specification changes are made:

Stability in CW: (0.01% +500 Hz) 10 min, high range, after one hour warm-up.
 (0.01% +50 Hz)/10 min, low range, after one hour warm-up.

Sweep Width Accuracy: $\pm 5\%$ of sweep width or ± 10 kHz, high range, $\pm 5\%$ of sweep width or ± 1 kHz, low range, whichever is greater.

Internal FM:

High Range: 75 kHz $\pm 20\%$ peak deviation, 1 kHz range.

Low Range: 7.5 kHz $\pm 20\%$ peak deviation, 1 kHz rate.

Less than 3% distortion, typically less than 1%.

Schematic Sheet 9, A9 Assembly:
 Change A9Q18B to A9Q18, HP Part No. 1854-0071.
 Change A0Q18A to A9Q17, HP Part No. 1854-0071.
 Change A9R23 to 1470 ohms.
 Delete S10 (replace with short circuit).

Schematic Sheet 10, A9 Assembly:
 Change A9R111 to 14.6K ohms.

Schematic Sheet 11, A9 Assembly:
 Change A9R157 to 21.5K and A9R165 to 1000 ohms.
 Delete S10 (replace with short circuit).

Table 6-2, Replaceable Parts:
 Change A9Q18 and A9Q17 to HP Part No. 1854-0071.
 Change A9R23 to HP Part No. 0757-1094 R:FXD 1470 ohms.
 Change A9R111 to HP Part No. 0698-3156 R:FXD 14.6K
 Change A9R157 to HP Part No. 0757-0199 R:FXD 21.5K
 Change A9R165 to HP Part No. 0757-0280 R:FXD 1000 ohms.

CHANGE 11

Schematic Sheet 6, A6 Assembly:
 Delete A6A1R6 (replace with short circuit).

Schematic Sheet 9, A9 Assembly:
 Change A9R180 to 2870 ohms and A9C14 to 0.1 μ F.

Table 6-2, Replaceable Parts:
 Change A9R180 to HP Part No. 0698-3151 R:FXD 2870 ohms.
 Change A9C14 to HP Part No. 0180-1743 C:FXD 0.1 μ F.

CHANGE 12

Schematic Sheet 5, A5 VTO Assembly:
 Schematic diagram is as shown in Figure 7-14 with the following changes;
 A5A1R2 is 8.25K, HP Part No. 0757-0441.
 A5A1C14 and A5A1C34 are 10 pF, HP Part No. 0160-2257.

CHANGE 13

Schematic Sheet 6, A6 Assembly:
 Add capacitor C6, 1.5 pF and coil L3, 0.15 μ H in series between A6A1E1 case and ground.

Section V, paragraph 5-16:
 Change Meter Adjustment procedure as follows:

1. Connect power meter to 8601A RF OUTPUT.
2. Set 8601A controls as follows:

RANGE	110
CW/SWEEP	60 MHz
3. Set OUTPUT LEVEL to +10 dBm position and adjust OUTPUT LEVEL VERNIER for +10 dBm power meter reading.
4. Adjust METER adjust A9R131 for +10 dBm reading (0 dBm on scale).
5. Adjust OUTPUT LEVEL VERNIER for 0 dBm power meter reading.
6. Adjust meter mechanical adjustment for 0 dBm reading (-10 dBm on scale).
7. Repeat steps 3 through 6 until no further adjustment is required.

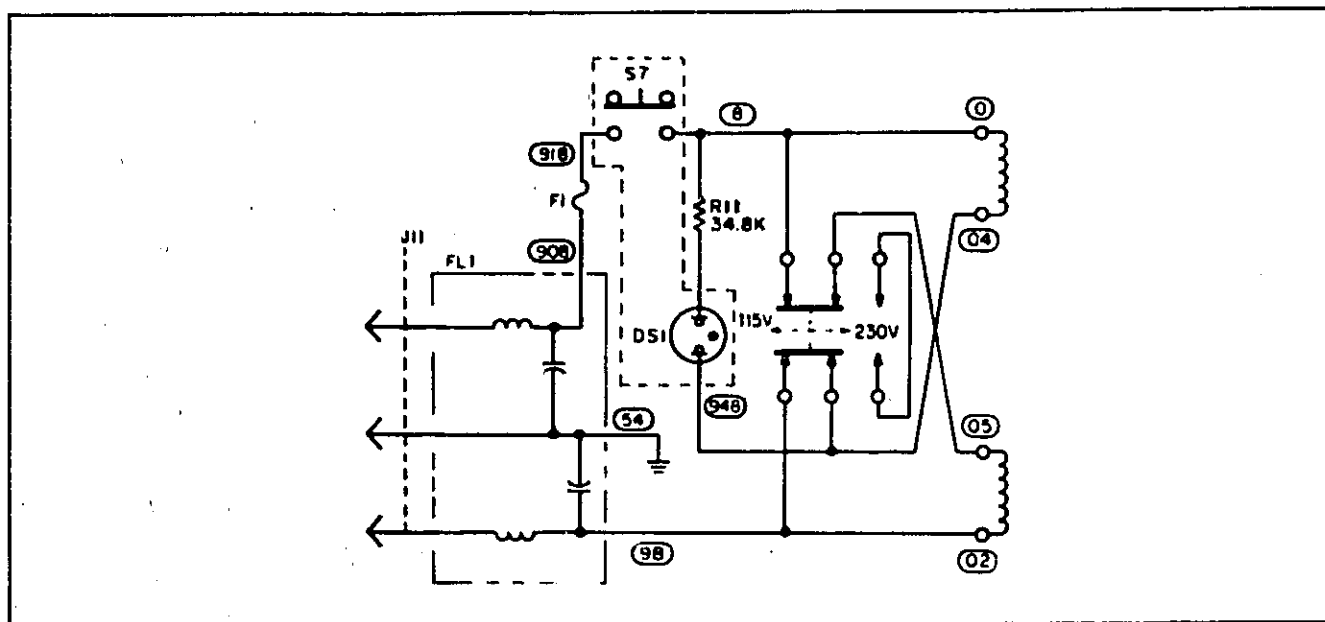


Figure 7-1. AC Primary Circuit
(Part of Change 1)

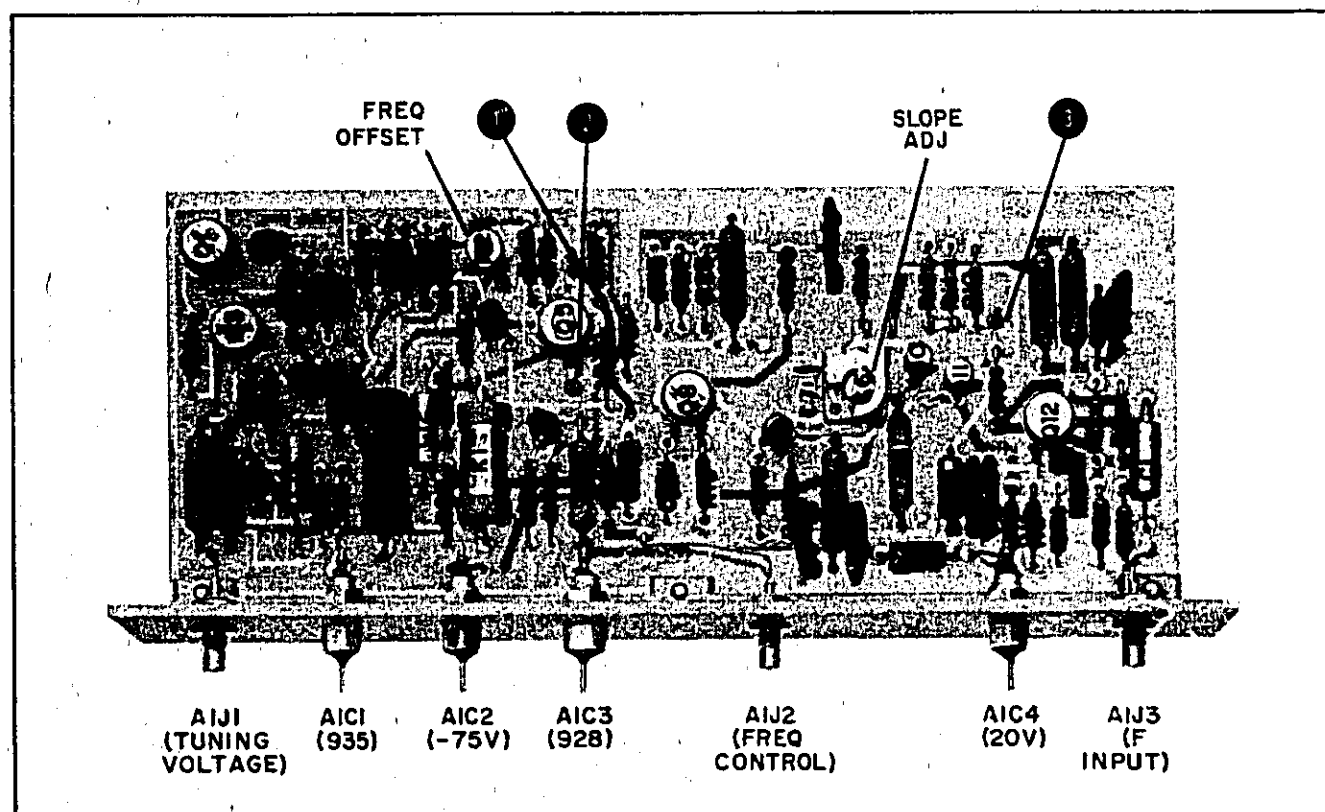


Figure 7-2. Component Identification A1A1 Discriminator Assembly
(Part of Change 3)

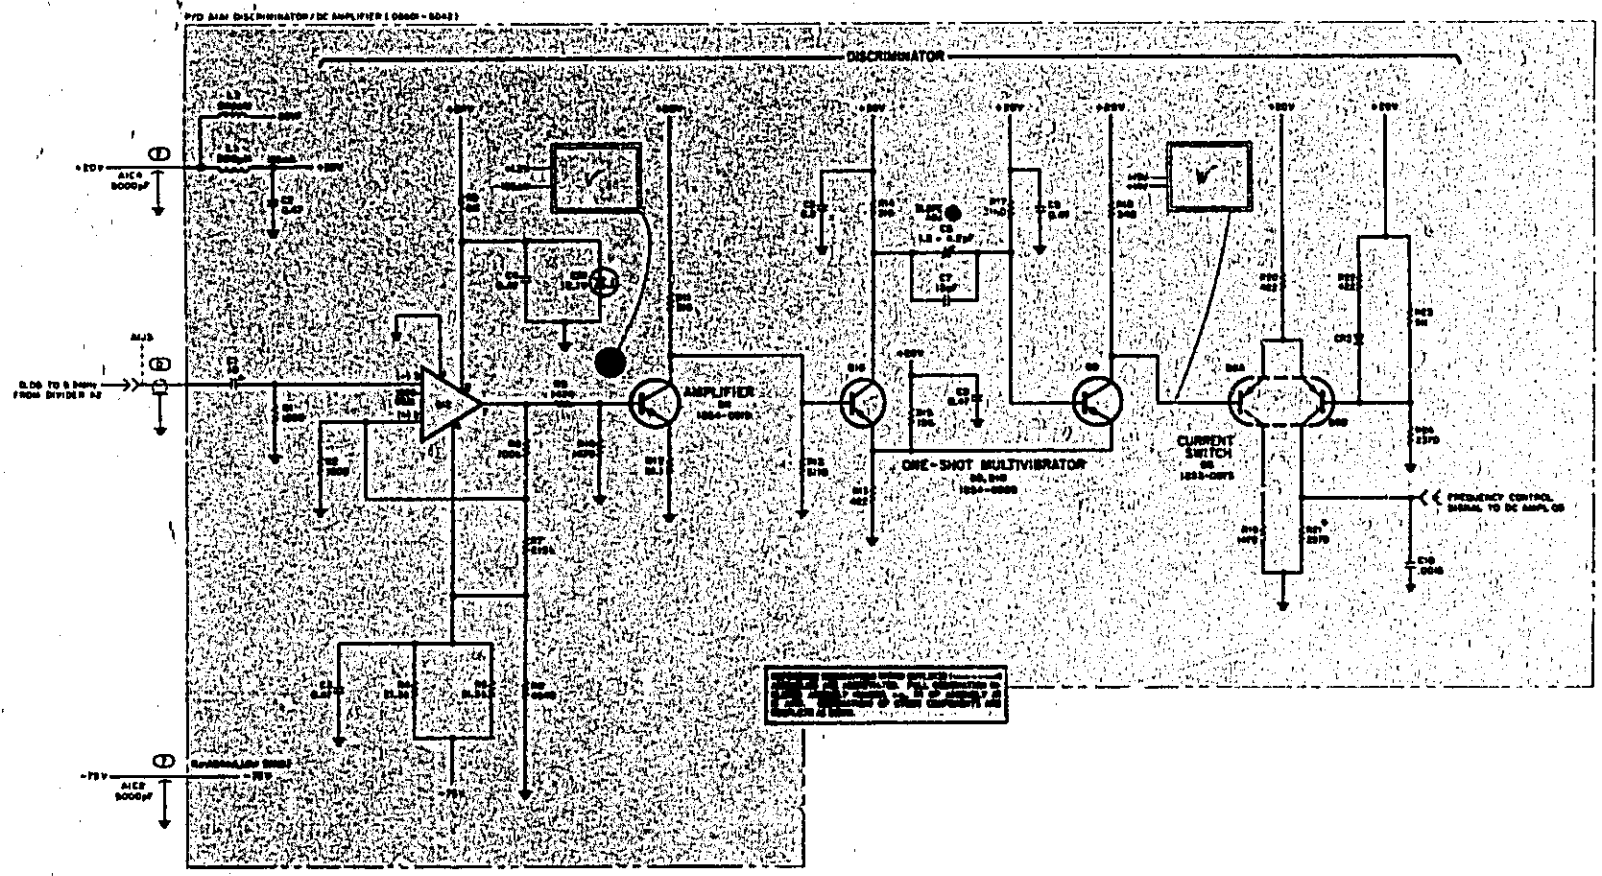
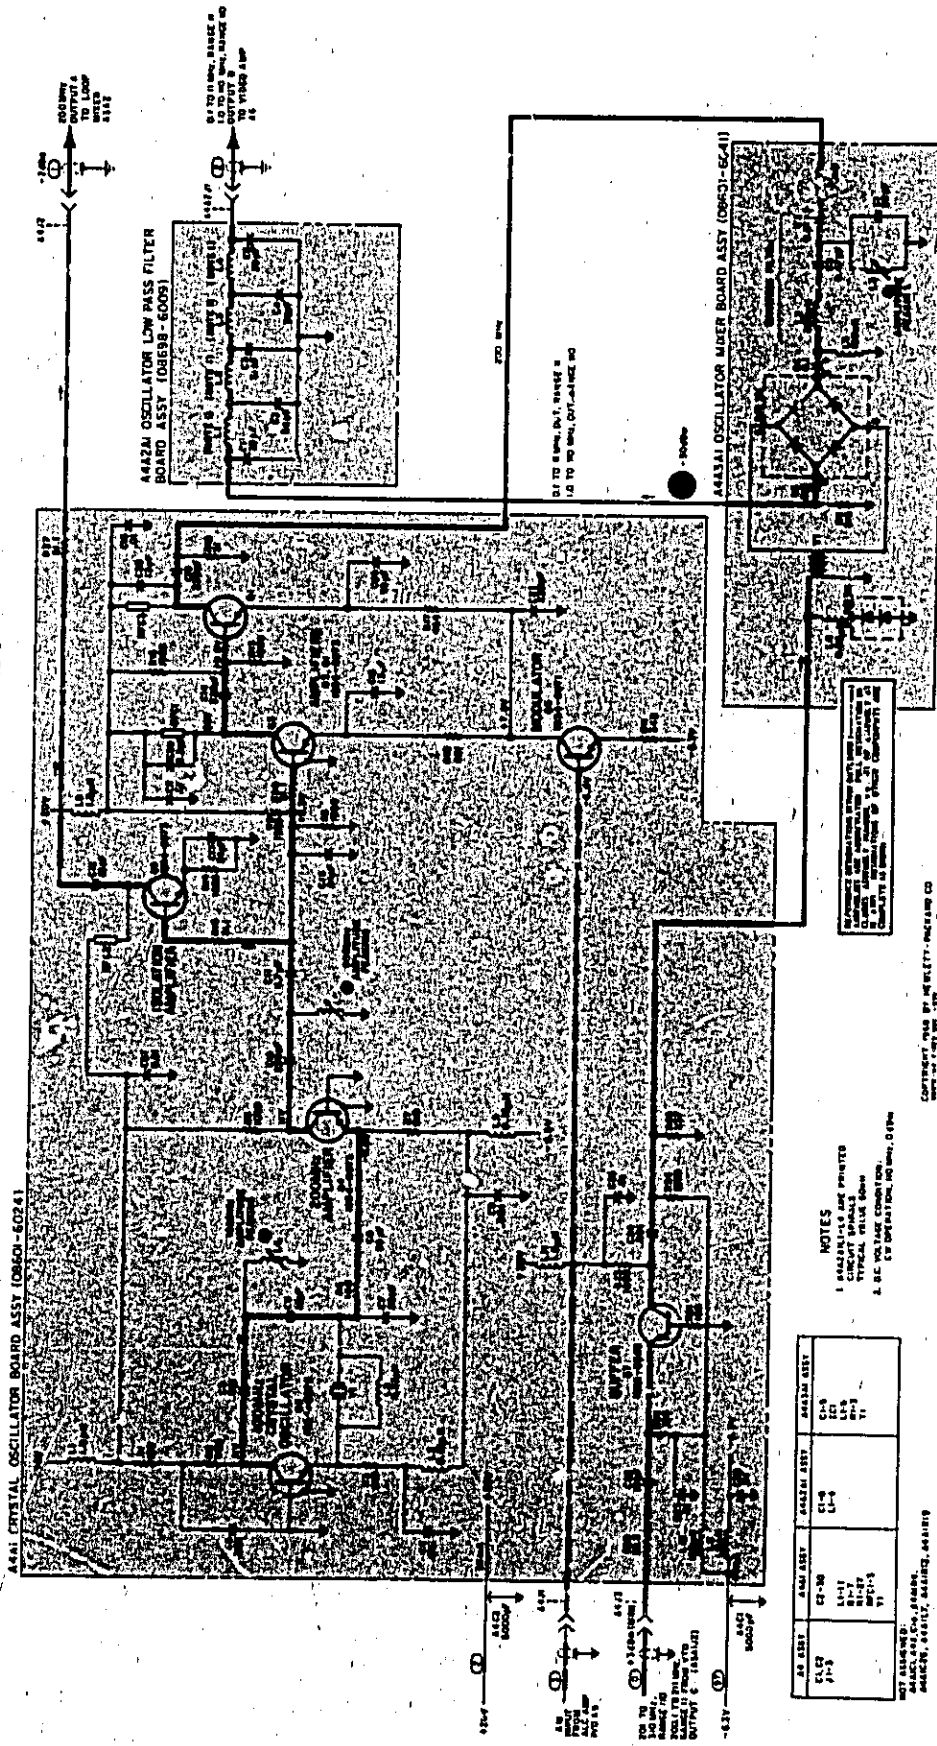


Figure 7-3. A1A1 Discriminator Circuit, Schematic Diagram (Part of Change 3)



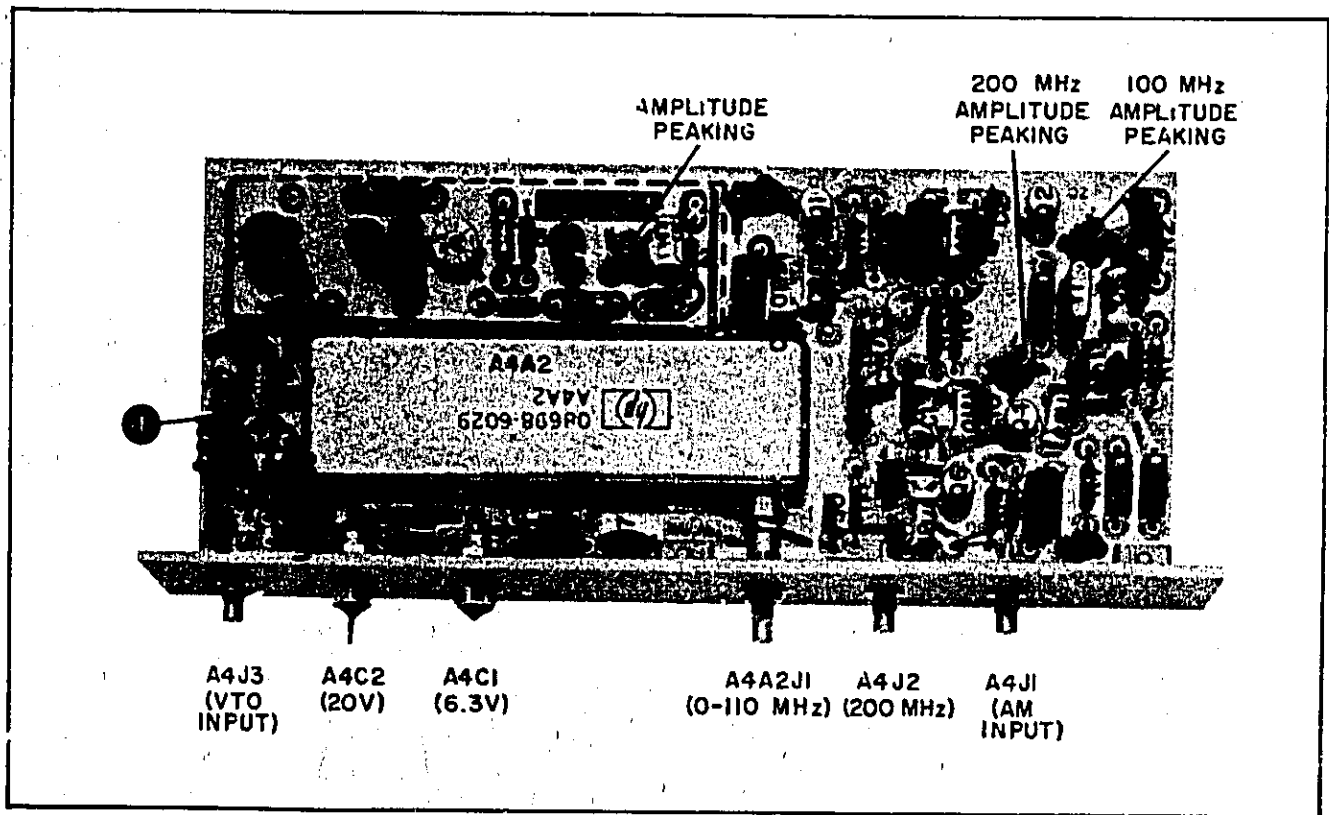


Figure 7-5. Component Identification, A4A1 Crystal Oscillator Assembly (Part of Change 3)

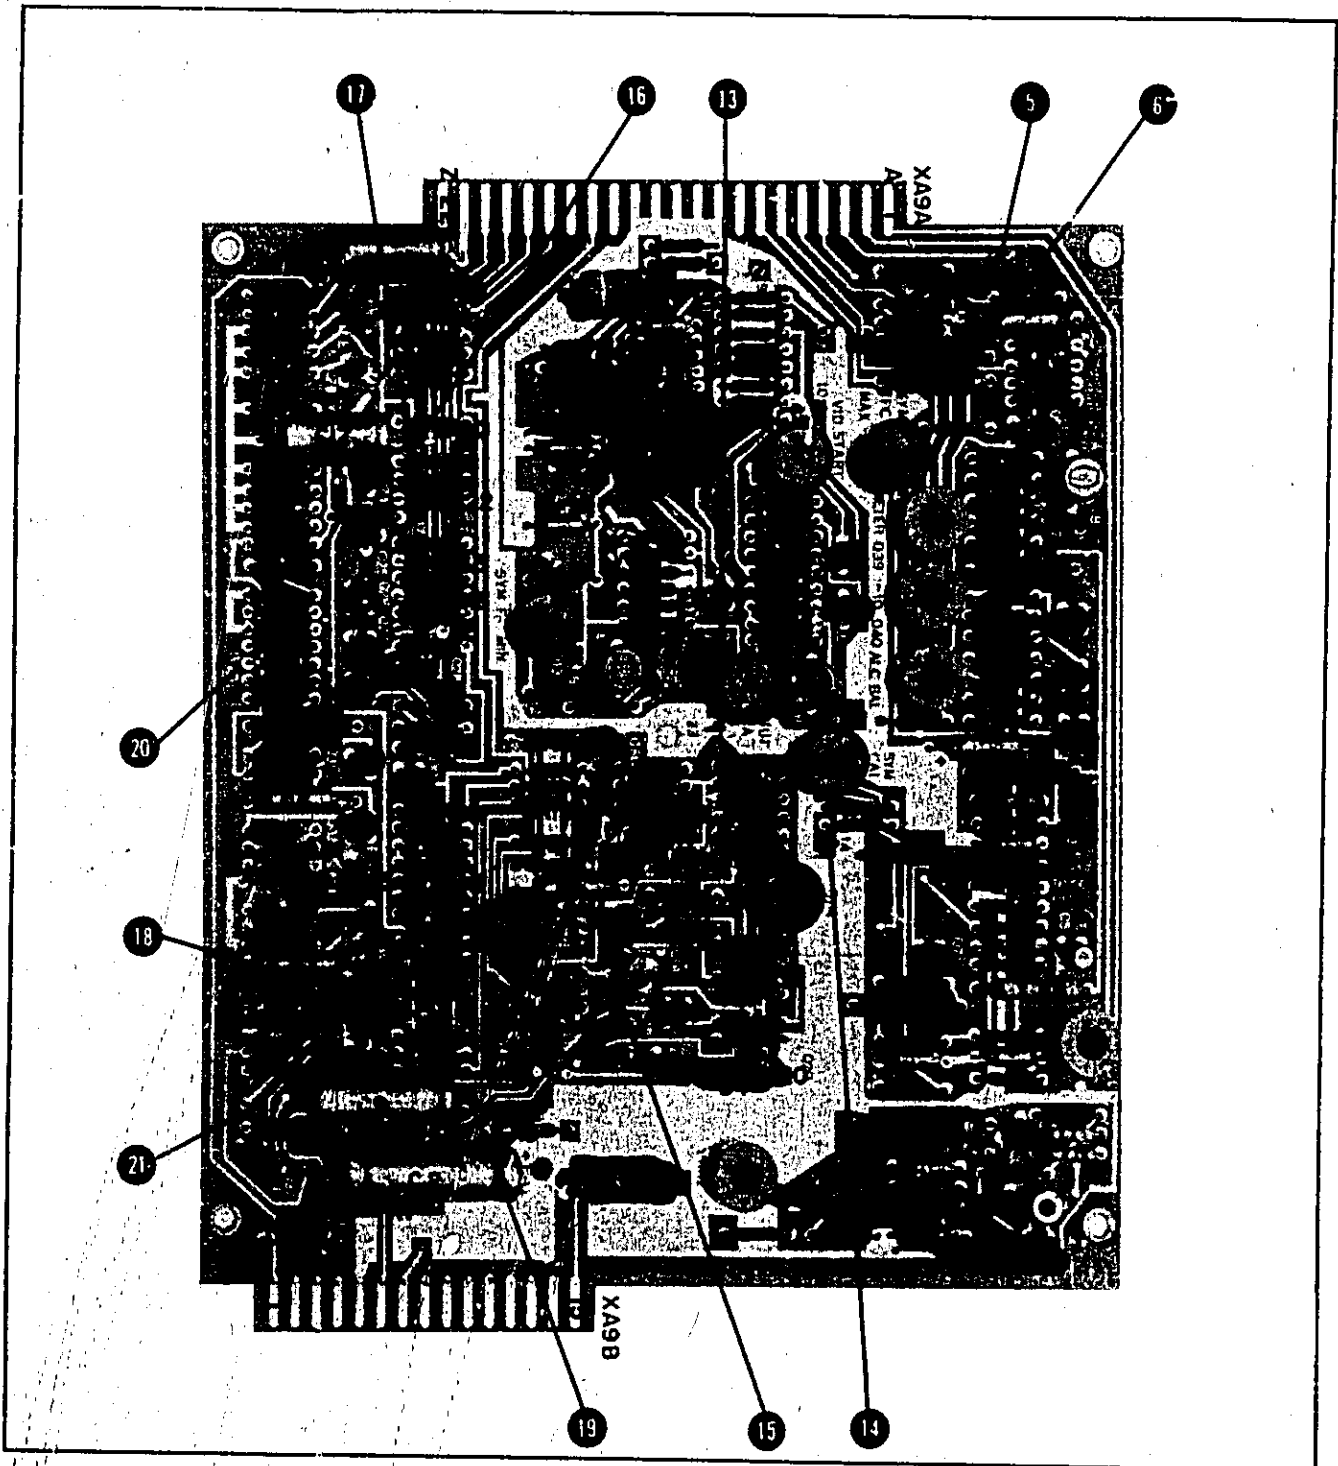


Figure 7-6. Component Identification, Sweep Generator, P/O A9
(Part of Change 3)

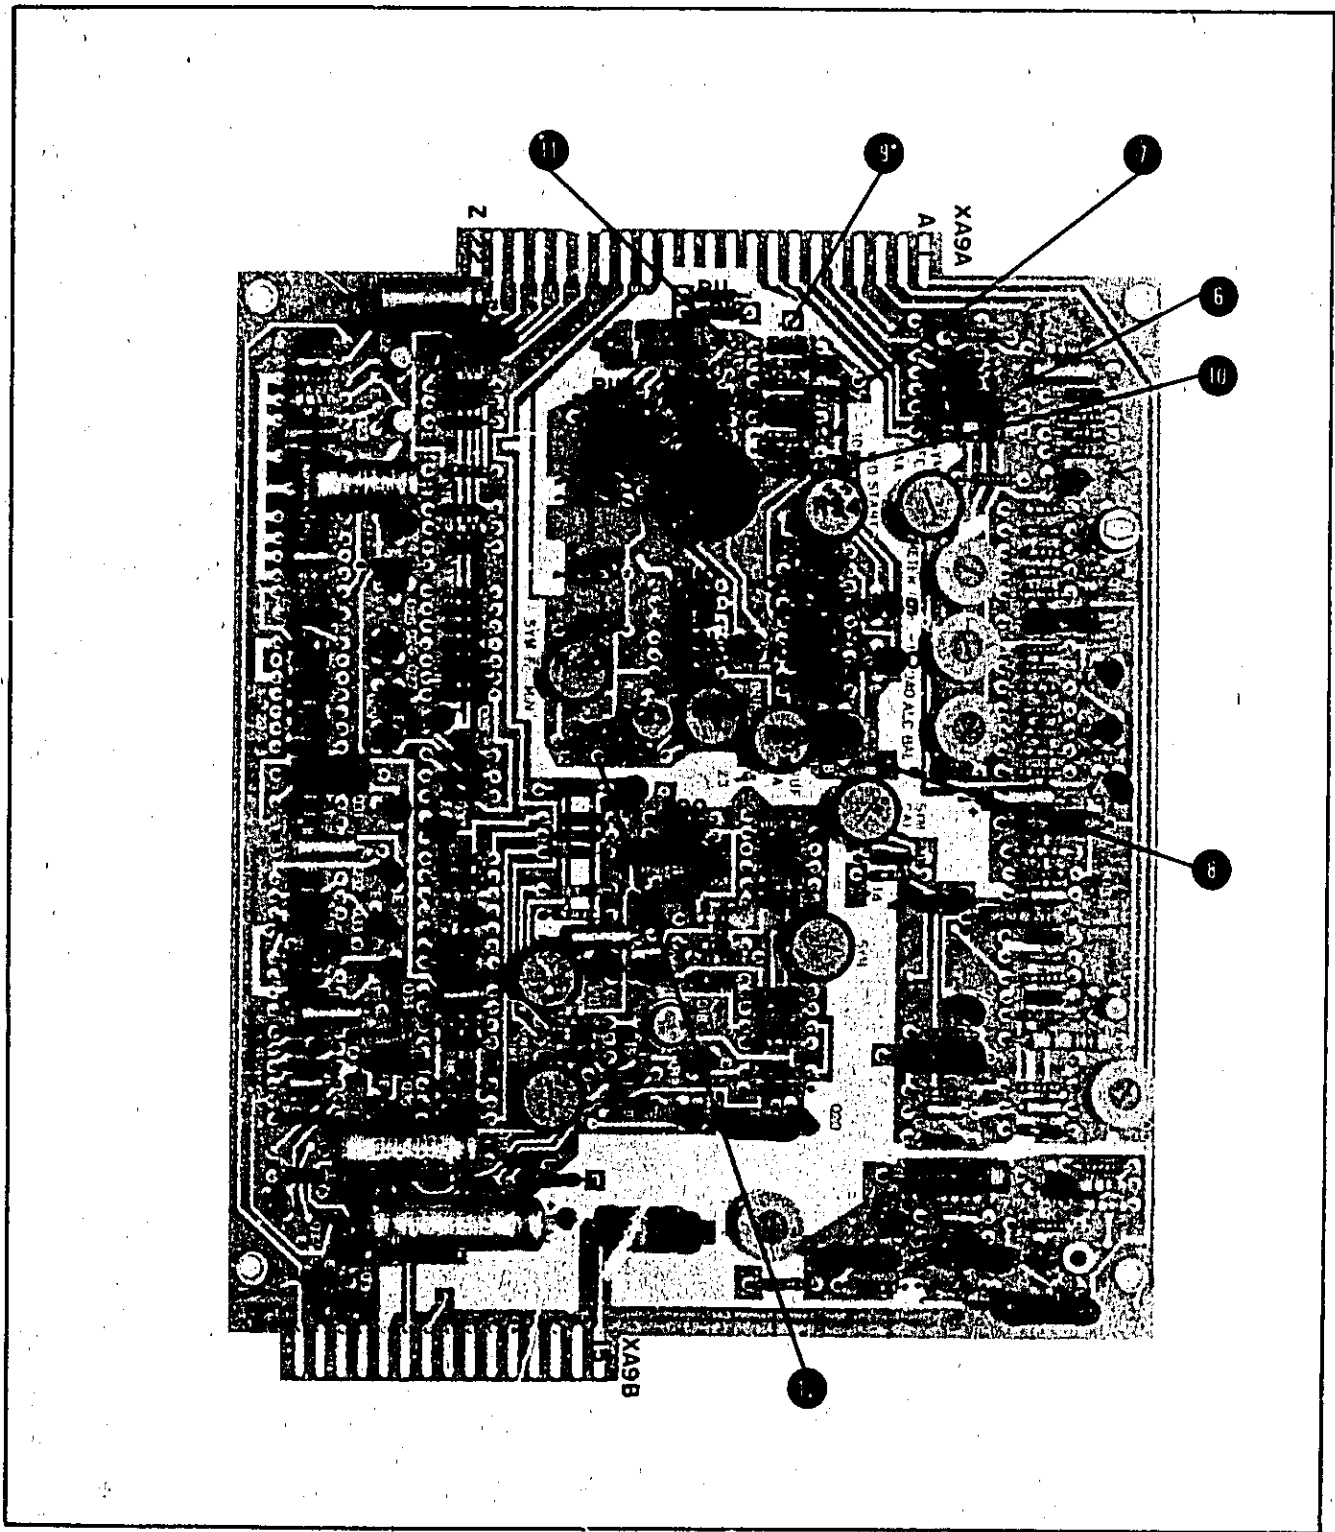


Figure 7-7. Component Identification, Summing Amplifier, P/O A9
(Part of Change 3)

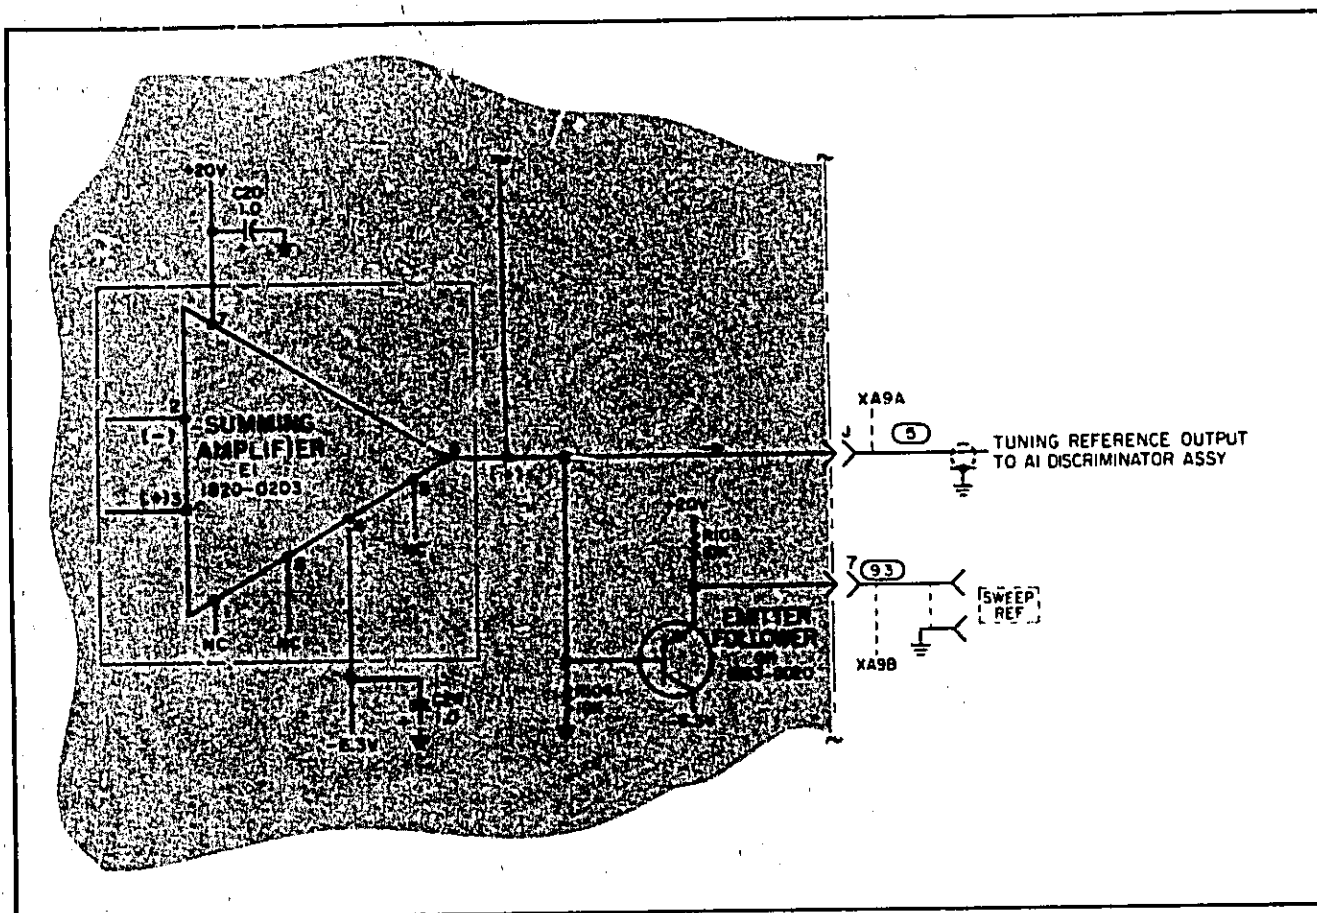


Figure 7-8. Sweep Reference Circuit, P/O A9
(Part of Change 3)

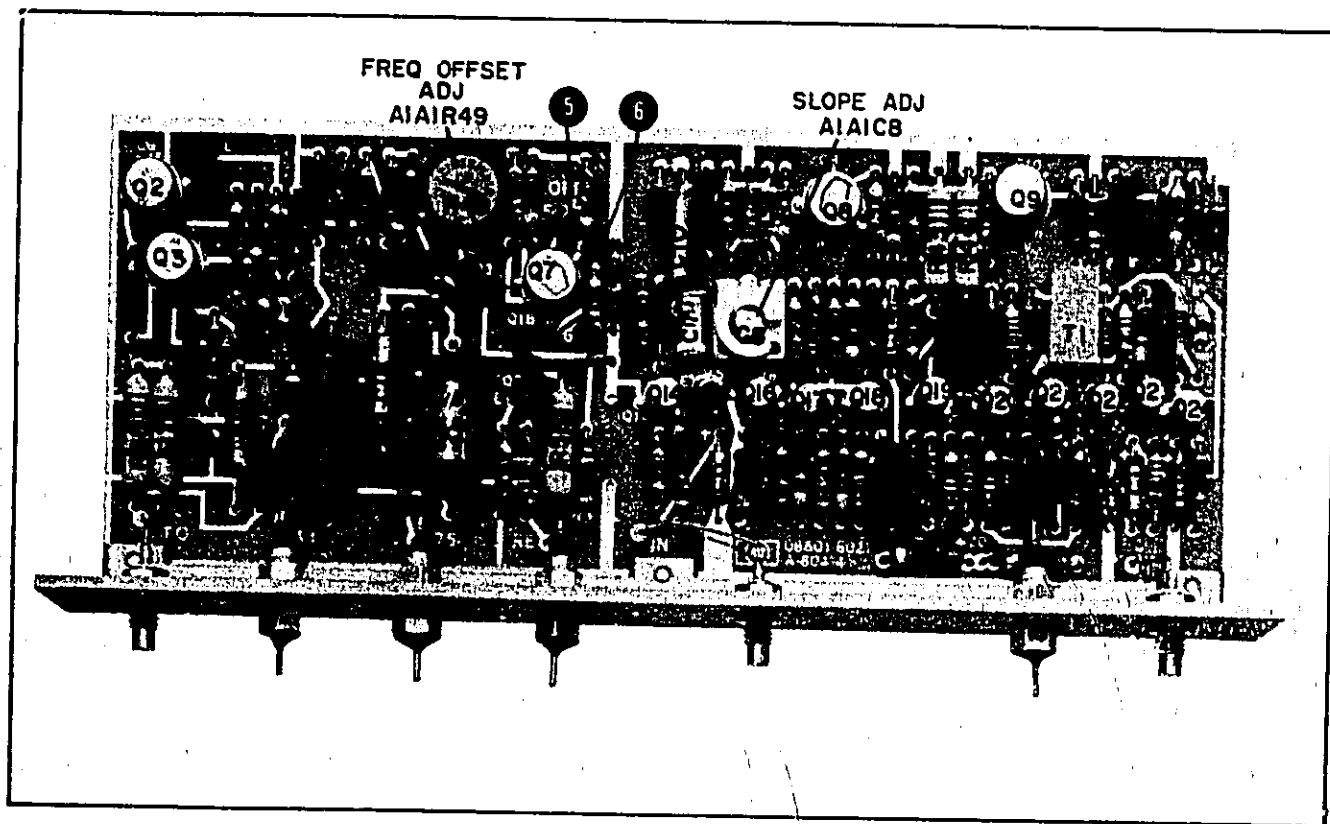


Figure 7-9. Component Identification, A1A1 Discriminator Assembly
(Part of Change 10)

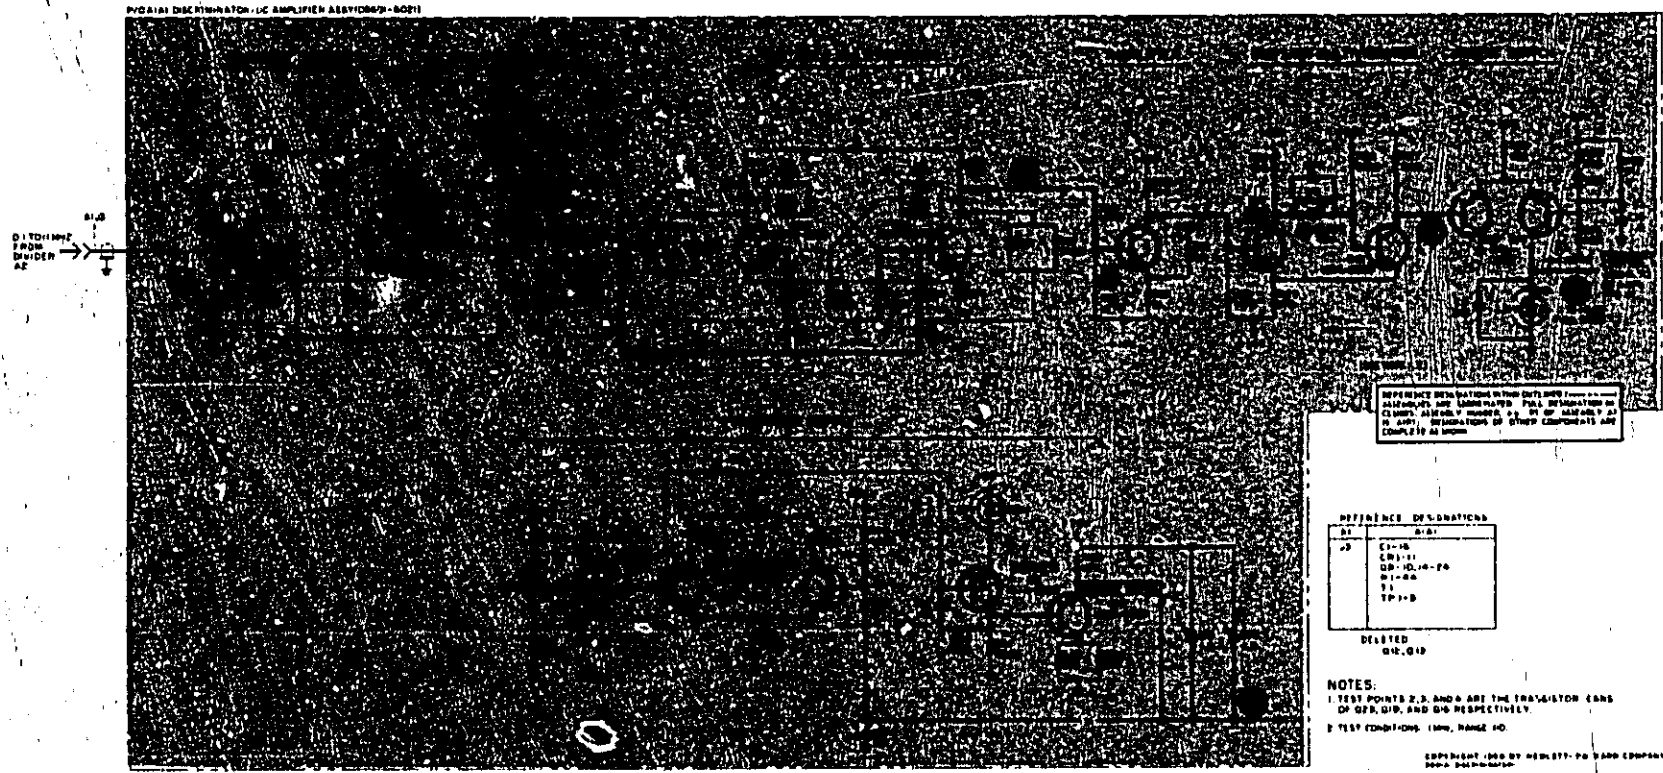
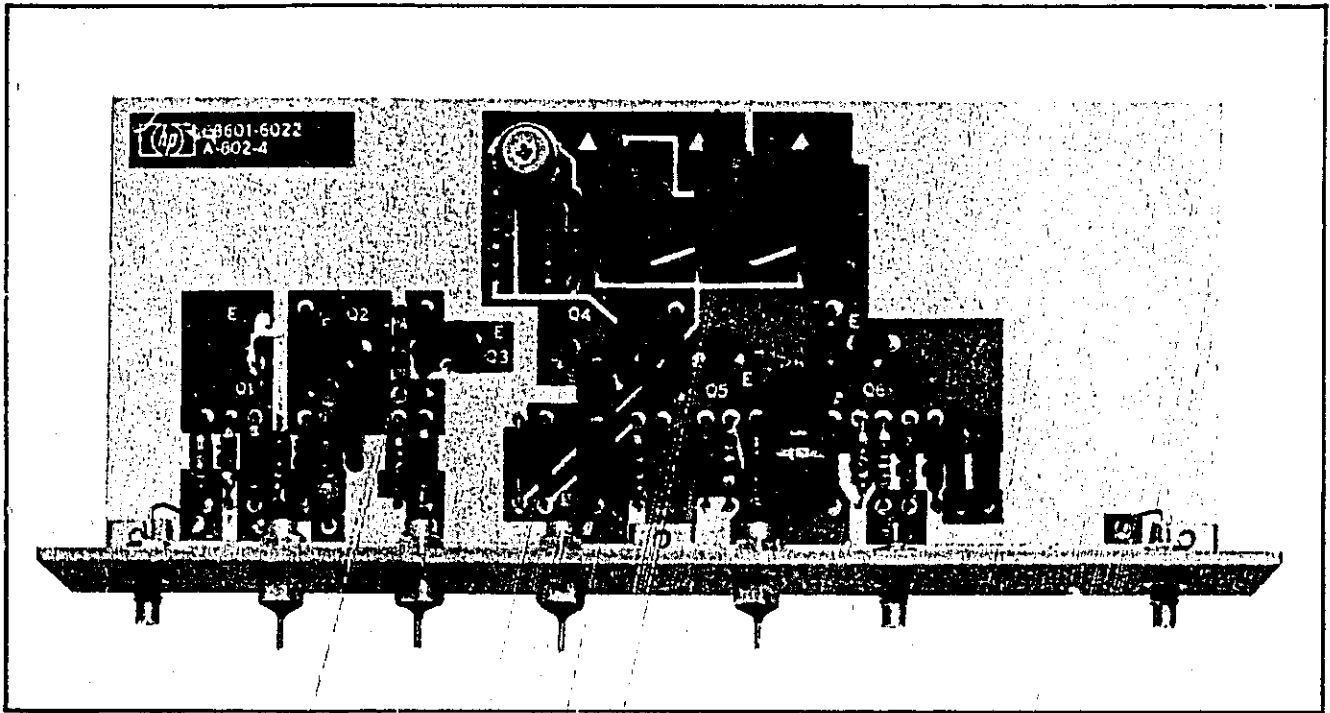


Figure 7-10. A1A1 Discriminator Circuit, Schematic Diagram
(Part of Change 10)



*Figure 7-11. Component Identification, A2 Divider Assembly
(Part of Change 10)*

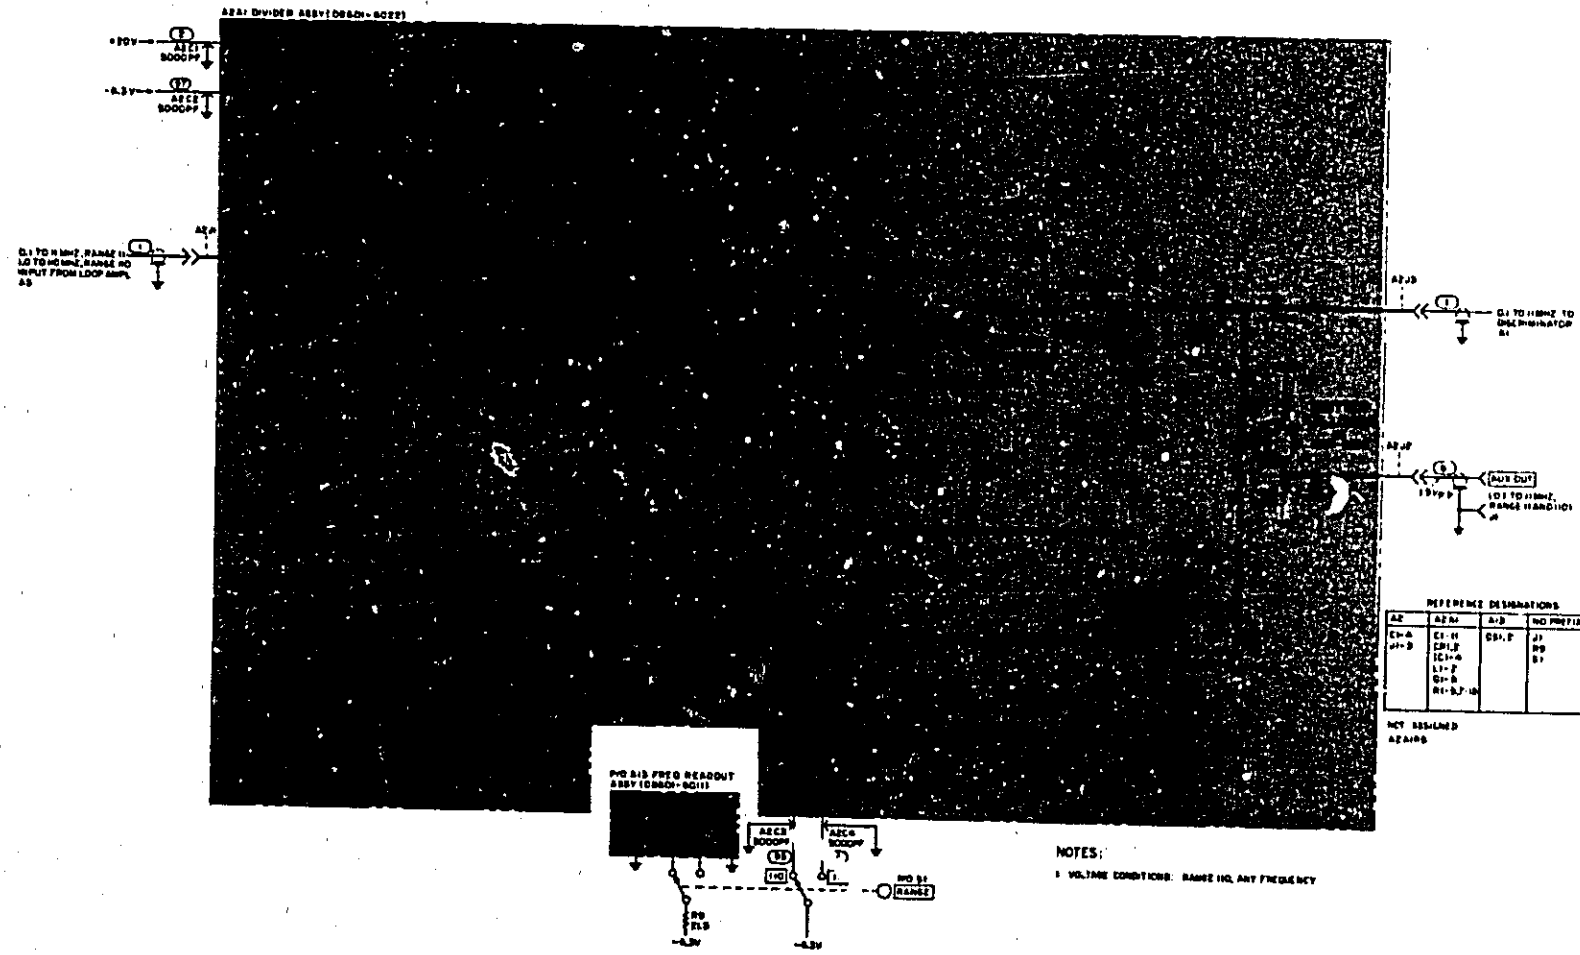


Figure 7-12. A2 Divider Assembly, Schematic Diagram (Part of Change 10)



Figure 7-13. Component Identification, A3A2A1 Mixer Assembly (Part of Change 10)

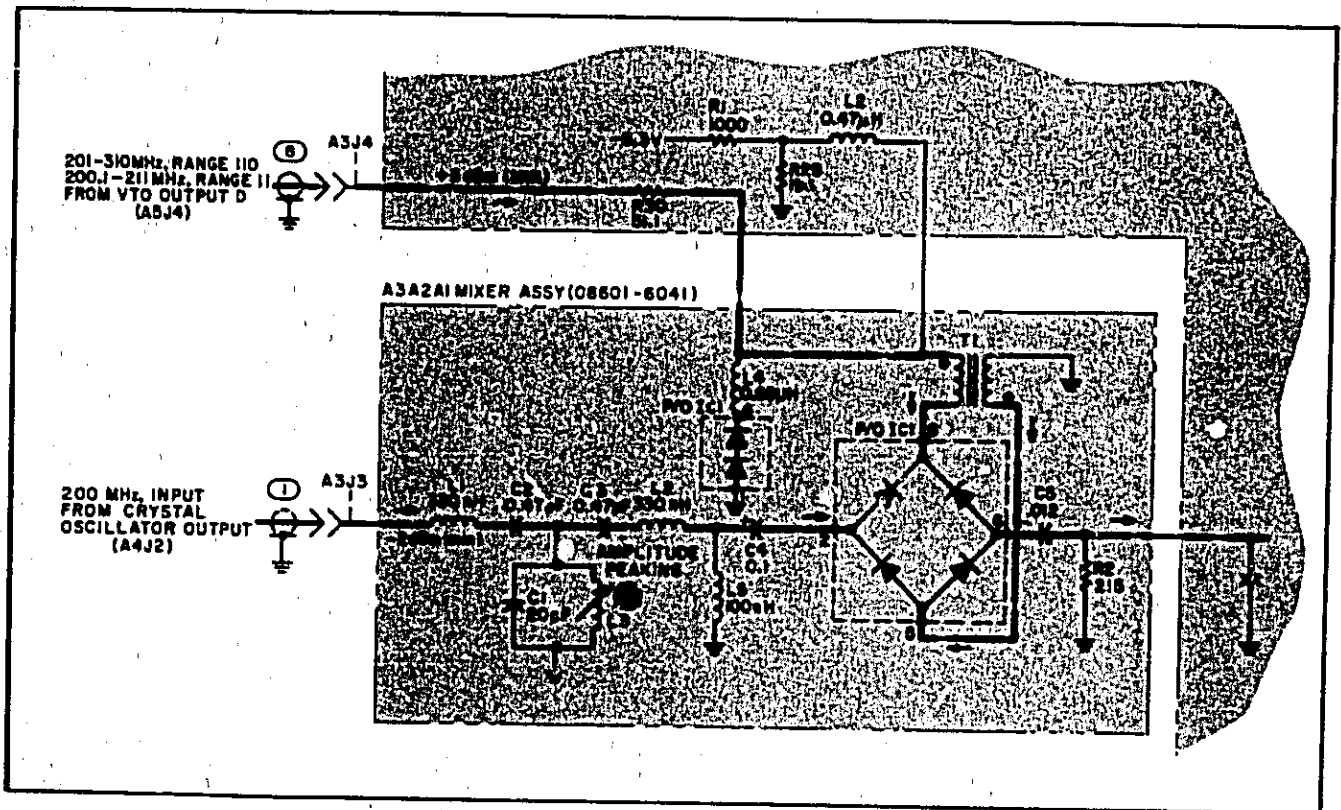


Figure 7-14. A3A2A1 Mixer Assembly, Schematic Diagram (Part of Change 10)

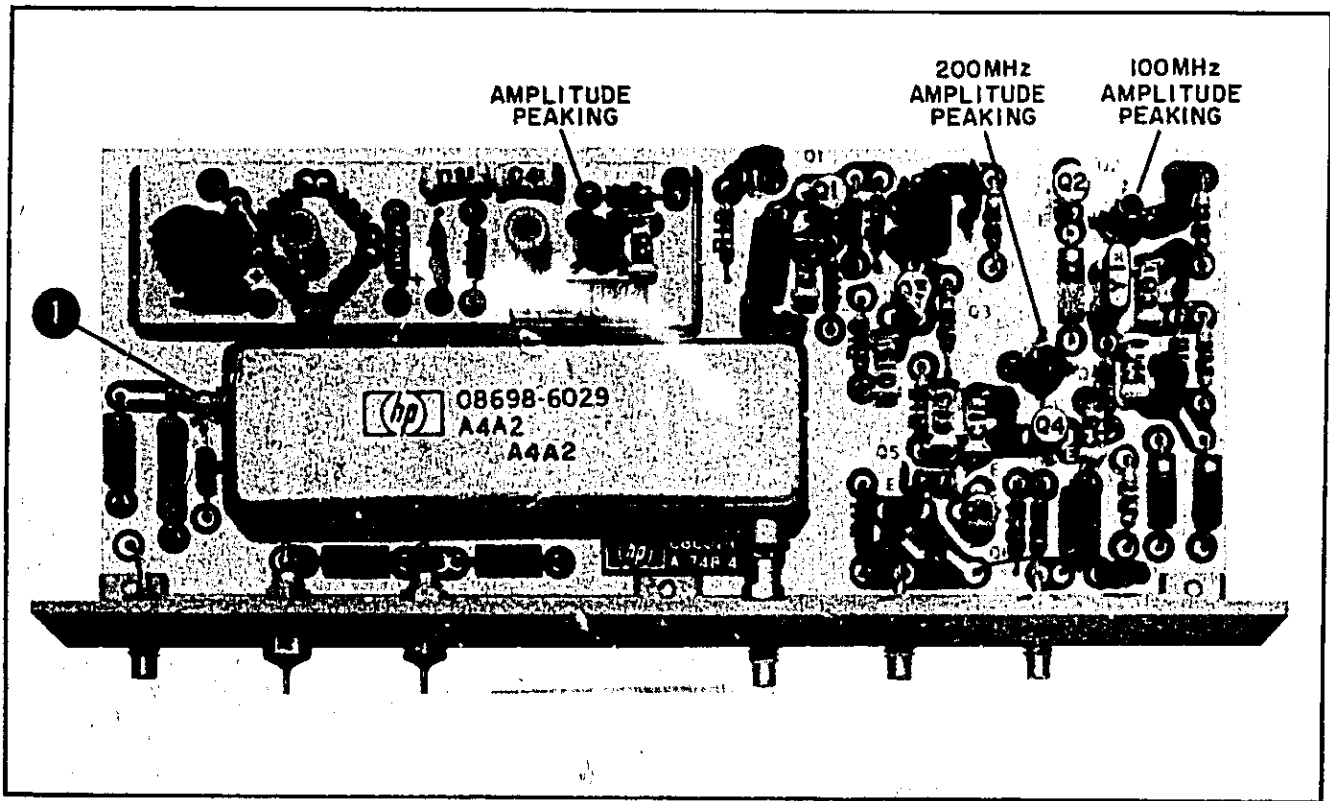
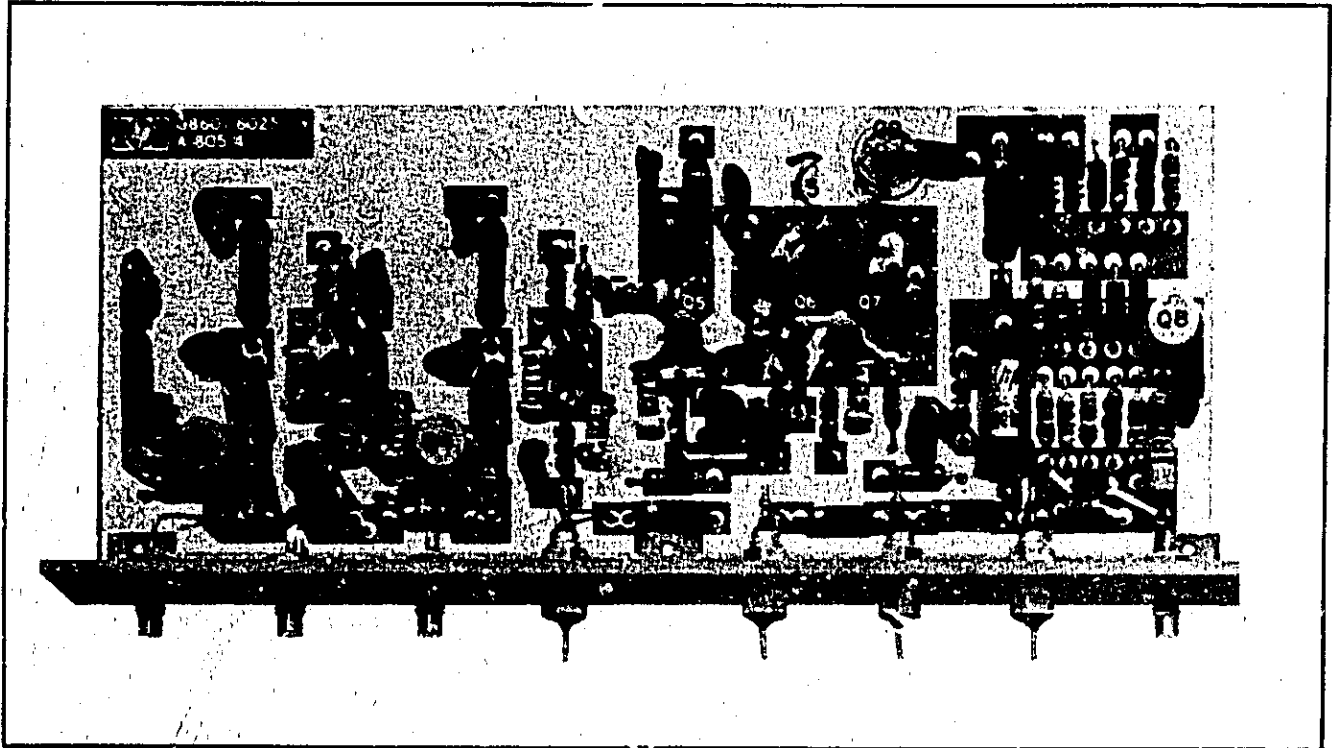


Figure 7-15. Component Identification, A4A1 Crystal Oscillator Assembly (Part of Change 10)



*Figure 7-17. Component Identification, AF VTO Assembly
(Part of Change 10)*

Table 7-3. A2 Assy Replaceable Parts
(Part of Change 10)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2	08601-6002	1	DIVIDER ASSY	28480	08601-6002
A2			INCL C1-C4, J1-J3, A2A1 ASSY & COVER		
A2C1	0160-2049	4	C:FXD CER FEED-THRU 5000 PF +80-20%	28480	0160-2049
A2C2	0160-2049		C:FXD CER FEED-THRU 5000 PF +80-20%	28480	0160-2049
A2C3	0160-2049		C:FXD CER FEED-THRU 5000 PF +80-20%	28480	0160-2049
A2C4	0160-2049		C:FXD CER FEED-THRU 5000 PF +80-20%	28480	0160-2049
A2J1	1250-0829	3	CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2J2	1250-0829		CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2J3	1250-0829		CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2Z	0160-0084	1	BRAID:RF	12881	10-541
A2Z	08698-0012	1	GASKET:RFI	28480	08698-0012
A2Z	08601-2016	1	COVER	28480	08601-2016
A2A1	08601-6022	1	BOARD ASSY:DIVIDER	28480	08601-6022
A2A1C1	0180-0197	5	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2A1C2	0160-2930	5	C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA
A2A1C3	0160-2930		C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA
A2A1C4	0160-2930		C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA
A2A1C5	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2A1C6	0150-0121	2	C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B15-CML
A2A1C7	0150-0121		C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50B15-CML
A2A1C8	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2A1C9	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2A1C10	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56289	150D105X9035A2-DYS
A2A1C11	0180-0197	1	C:FXD ELECT 2.2 UF 10% 20VDCW	56289	150D225X9020A2-DYS
A2A1C11	1902-3070	1	DIODE:BREAKDOWN 4.22V 5%	04713	5210939-74
A2A1C12	1902-0579	1	DIODE BREAKDOWN:5.11V	28480	1902-0579
A2A1C1	1820-0101	1	INTEGRATED CIRCUIT:DIFFERENTIAL AMPL	04713	MC1034P
A2A1C2	1820-0102	3	INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A2A1C3	1820-0102		INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A2A1C4	1820-0102		INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A2A1L1	9140-0178	2	COIL:FXD 12 UH 10%	28480	9140-0178
A2A1L2	9140-0178		COIL:FXD 12 UH 10%	28480	9140-0178
A2A1O1	1853-0015	2	TSTR:SI PNP	80131	2N3560
A2A1O2	1853-0015		TSTR:SI PNP	80131	2N3560
A2A1O3	1854-0092	4	TSTR:SI NPN	80131	2N3563
A2A1O4	1854-0092		TSTR:SI NPN	80131	2N3563
A2A1O5	1854-0092		TSTR:SI NPN	80131	2N3563
A2A1O6	1854-0092		TSTR:SI NPN	80131	2N3563
A2A1R1	0757-0394	6	R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A2A1R2	0757-0821	1	R:FXD MET FLM 1.21K OHM 1% 1/2W	28480	0757-0821
A2A1R3	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A2A1R4	0698-3441	2	R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A2A1R5	0757-0420	3	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A2A1R6			NOT ASSIGNED		
A2A1R7	0811-1675	1	R:FXD WW 5.6 OHM 5% 2W	28480	0811-1675
A2A1R8	0757-0418	3	R:FXD MET FLM 619 OHM 1% 1/8W	28480	0757-0418
A2A1R9	0757-0346	1	R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A2A1R10	0698-3441		R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A2A1R11	0698-3443	2	R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A2A1R12	0757-0394		R:FXD MET FLM 51.1 OHM 1% 1/8W	28480	0757-0394
A2A1R13	0757-1094	1	R:FXD MET FLM 1.47K OHM 1% 1/8W	28480	0757-1094
A2A1R14	0757-0420		R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A2A1R15	0757-0420		R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A2A1R16	0698-3431	1	R:FXD MET FLM 23.7 OHM 1% 1/8W	28480	0698-3431
A2A1R17	0698-3443		R:FXD MET FLM 287 OHM 1% 1/8W	28480	0698-3443
A2A1R18	0764-0033	1	R:FXD MET OX 33 OHM 5% 2W	28480	0764-0033

See Introduction to this section for ordering information

Table 7-4. A4A1 Assy Replaceable Parts
(Part of Change 1U)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4A1	08601-6024	1	BOARD ASSY:FIXED OSCILLATOR NOT ASSIGNED	28480	08601-6024
A4A1C1	0160-2930	4	C:FXD CER 0.01 UF +80-20X 100VDCM C:FXD CER 1000 PF +80-20X 1000VDCM	91418	TA
A4A1C2	0150-0050			56289	C0678102E102Z526-CDM
A4A1C4	0150-0050			56289	C0678102E102Z526-CDM
A4A1C5	0150-0050			56289	C0678102E102Z526-CDM
A4A1C6	0160-2257	2	C:FXD CER 10 PF 5X 500VDCM C:FXD CER 20 PF 5X 500VDCM	72982	301-000-C0G0-100J
A4A1C7	0160-2264			72982	301-000-C0G0-200J
A4A1C8	0160-2264	4	C:FXD CER 20 PF 5X 500VDCM	72982	301-000-C0G0-200J
A4A1C9	0150-0050	3	C:FXD CER 1000 PF +80-20X 1000VDCM C:FXD CER 220 PF +80-20X 1000VDCM	56289	C0678102E102Z526-CDM
A4A1C10	0160-2139			91418	TYPE B
A4A1C11	0160-2249			72982	301-NPO-4.7 PF
A4A1C12	0160-2257	1	C:FXD CER 10 PF 5X 500VDCM C:FXD CER 24 PF 5X 500VDCM	72982	301-000-C0G0-100J
A4A1C13	0160-2266			72982	301-000-C0G0-240J
A4A1C14	0160-2139	1	C:FXD CER 220 PF +80-20X 1000VDCM C:FXD CER 13 PF 5X 500VDCM	91418	TYPE B
A4A1C15	0160-2260			72982	301-000-C0G0 130J
A4A1C16	0160-2264	1	NOT ASSIGNED C:FXD CER 20 PF 5X 500VDCM C:FXD CER 0.01 UF +80-20X 100VDCM	72982	301-000-C0G0-200J
A4A1C17	0160-2930			91418	TA
A4A1C18	0160-2930			91418	TA
A4A1C19	0160-2139	1	C:FXD CER 220 PF +80-20X 1000VDCM C:FXD CER 20 PF 5X 500VDCM	91418	TYPE B
A4A1C20	0160-2264			72982	301-000-C0G0-200J
A4A1C21	1901-0033			07263	FD3369
A4A1L1	9100-1610	2	DIODE:SILICON 100MA 180MV	28480	9100-1610
A4A1L2	9100-1612	1	COIL:MOLDED CHOKE 0.15 UH 20X	28480	9100-1612
A4A1L3	9100-1612	1	COIL:FXD RF 0.33 UH 20X	28480	9100-1612
A4A1L4	08698-6016	1	COIL:VAR 100MHZ COIL:MOLDED CHOKE 0.15 UH 20X	29480	08698-6016
A4A1L5	9100-1610			28480	9100-1610
A4A1L6	08698-6015	1	COIL:VAR 200MHZ	28480	08698-6015
A4A1L7	9100-1613	1	COIL:FXD 0.47 UH 20X COIL:FXD 82 UH 5X	28480	9100-1613
A4A1L8	9140-0238			28480	9140-0238
A4A1O1	1854-0073	5	TSTR:SI NPNISELECTED FROM 2N2857) TSTR:SI NPNISELECTED FROM 2N2857) TSTR:SI NPNISELECTED FROM 2N2857) TSTR:SI NPNISELECTED FROM 2N2857) TSTR:SI NPNISELECTED FROM 2N3704)	28480	1854-0073
A4A1O2	1854-0073			28480	1854-0073
A4A1O3	1854-0073			28480	1854-0073
A4A1O4	1854-0073			28480	1854-0073
A4A1O5	1854-0071			28480	1854-0071
A4A1O6	1854-0073	2	TSTR:SI NPNISELECTED FROM 2N2857) R:FXD MET FLM 100 OHM 1X 1/8W	28480	1854-0073
A4A1R1	0757-0401			28480	0757-0401
A4A1R2	0757-0422	1	R:FXD MET FLM 909 OHM 1X 1/8W R:FXD MET FLM 619 OHM 1X 1/8W	28480	0757-0422
A4A1R3	0757-0418			28480	0757-0418
A4A1R4	0757-0401	2	NOT ASSIGNED R:FXD MET FLM 100 OHM 1X 1/8W R:FXD MET FLM 1K OHM 1X 1/8W	29480	0757-0401
A4A1R5	0757-0280			28480	0757-0280
A4A1R6	0757-0418			28480	0757-0418
A4A1R7	0698-0083			28480	0698-0083
A4A1R8	0698-0083	4	R:FXD MET FLM 1.96K OHM 1X 1/8W R:FXD MET FLM 1.96K OHM 1X 1/8W	28480	0698-0083
A4A1R9	0698-0083			28480	0698-0083
A4A1R10	0757-0419	1	R:FXD MET FLM 681 OHM 1X 1/8W R:FXD MET FLM 348 OHM 1X 1/8W	28480	0757-0419
A4A1R11	0698-3445			28480	0698-3445
A4A1R12	0757-0799	1	R:FXD MET FLM 121 OHM 1X 1/2W R:FXD MET FLM 1.96K OHM 1X 1/8W	28480	0757-0799
A4A1R13	0698-0083			28480	0698-0083
A4A1R14	0757-0280	1	R:FXD MET FLM 1K OHM 1X 1/8W R:FXD MET FLM 51.1 OHM 1X 1/8W	28480	0757-0280
A4A1R15	0757-0394			28480	0757-0394
A4A1R16	0698-0083	1	R:FXD MET FLM 1.96K OHM 1X 1/8W R:FXD MET FLM 464 OHM 1X 1/2W R:FXD MET FLM 51.1 OHM 1X 1/8W	28480	0698-0083
A4A1R17	0698-0090			28480	0698-0090
A4A1R18	0757-0394			28480	0757-0394
A4A1R19	0698-3440	1	R:FXD MET FLM 196 OHM 1X 1/8W	28480	0698-3440
A4A1R20	0757-0394	3	R:FXD MET FLM 51.1 OHM 1X 1/8W COIL:CHOKE COIL:CHOKE COIL:CHOKE	28480	0757-0394
A4A1RFC1	9100-1788			02114	VK200-10/48
A4A1RFC2	9100-1788			02114	VK200-10/48
A4A1RFC3	9100-1788			02114	VK200-10/48
A4A1V1	0410-0172	1	CRYSTAL:QUARTZ 100MHZ	28480	0410-0172
A4A2	08698-6029	1	OSC LOW-PASS FILTER ASSY	28480	08698-6029
A4A2	08698-0005	1	CAN:FILTER	28480	08698-0005
A4A2	08698-0008	1	COVER:CAN	28480	08698-0008
A4A2J1	1250-0826	1	CONNECTOR:RF	98291	50-027-0000
A4A2A1	08698-6009	1	OSC & LOW PASS FILTER BD ASSY	28480	08698-6009
A4A2A1C1	0140-0200	2	C:FXD NICA 43 PF 5X C:FXD NICA 62 PF 5X C:FXD NICA 62 PF 5X C:FXD NICA 62 PF 5X	72136	ADM15E430J3C
A4A2A1C2	0140-0205			28480	0140-0205
A4A2A1C3	0140-0205			28480	0140-0205
A4A2A1C4	0140-0205			28480	0140-0205
A4A2A1C5	0160-2200	1	C:FXD NICA 43 PF 5X	72136	ADM15E430J3C
A4A2A1L1		2	NSR, P70 BD ASSY, TYPICAL VALUE 60 NH NSR, P70 BD ASSY, TYPICAL VALUE 60 NH NSR, P70 BD ASSY, TYPICAL VALUE 60 NH NSR, P70 BD ASSY, TYPICAL VALUE 60 NH		
A4A2A1L2					
A4A2A1L3					
A4A2A1L4					

See Introduction to this section for ordering information

CHANGE 14

Table 6-2; Replaceable Parts:
Change A9E1 to HP Part Number 1820-0203.

CHANGE 15

Table 6-2; Replaceable Parts:
Change A9C11 to HP Part Number 0160-2146, C:FXD CER 0,02 UF +80 -20 10 VDCW.

Schematic Sheet 9; Figure 8-28; FREQUENCY CONTROL A9:
Change value of A9C11 to 0.02.

CHANGE 16**NOTE**

This change implements a different color scheme for the instrument. The old colors are no longer available but listed below for reference.

Table 6-2, Replaceable Parts:
Change HP Part No. 08601-00043 to 08601-0002 FRONT PANEL (LIGHT GRAY/BLACK) 8601A, 8601A OPT 003-010.
Change HP Part No. 4040-8905 to 4040-0328 BEZEL: BLACK METER.
Change HP Part No. 08601-00046 to 08601-0015 FRONT PANEL (LIGHT GRAY/BLACK) (8601A OPT 001, 002).
Change HP Part No. 08601-00045 to 08601-0025 FRONT PANEL (LIGHT GRAY/BLACK) (8601A OPT 011).
Change HP Part No. 08601-00044 to 08601-0006 TOP COVER (BLUE GRAY).
Change HP Part No. 5000-0567 to 5000-0704 SIDE COVER 6 X 16 (BLUE GRAY).
Change HP Part No. 5000-8535 to 5000-0136 BOTTOM COVER 7 X 16 (BLUE GRAY).
Change HP Part No. 08601-20089 to 08601-2004 PANEL READOUT (BLACK).
Change HP Part No. 08601-20091 to 08601-2011 METER TRIM: TOP (BLACK).

CHANGE 17

Table 6-2, Replaceable Parts:
Change A4A1R7 to HP Part No. 0698-3441, R: RXD MET FLM 215 OHM 1% 1/8W (FACTORY SELECTED PART).

Schematic Sheet 4; Figure 8-17; Crystal Oscillator A4A1:
Change value of A4A1R7* to 215.

CHANGE 18

Table 6-2, Replaceable Part:
Change A9R3* 10K to HP Part No. 0757-0443 R: FXD MET FLM 11.0K OHM 1% 1/8W (Not Factory Select).

Schematic Sheet 9; Figure 8-28; Frequency Control A9:
Change A9R3* 10K to A9R3 11K.

CHANGE 19

Table 5-2; Factory Selected Components:
Delete the following entry:

A5A1R12	Selected to obtain sufficient oscillator Frequency Range	5
---------	--	---

Table 6-2, Replaceable Parts:

Change A5A1Q1 and A5A1Q3 to HP Part No. 1854-0247. (HP Part No. 1854-0580 is the recommended replacement).

Change A5A1R12 to HP Part No. 0757-0470 162K OHM 1% 1/8W.

Schematic Sheet 5; Figure 8-19; Voltage-Tuned Oscillator A5A1.
Change A9R3* to A9R3 162K.

CHANGE 20

Table 6-2; Replaceable Parts:

Change A9R144 to HP Part No. 0698-3452, R:FXD 147K OHM 1% 1/8W.

Schematic Sheet 11; Figure 8-32; Frequency Control A9:
Change value of A9R144 to 147K.

CHANGE 21

Table 5-2; Factory Selected Components:
Delete the following entry:

A11R7	Selected to compensate for tolerance variation in A11R6	12
-------	---	----

Table 6-2; Replaceable Parts:

Change A11R7 to HP Part No. 0698-3156, R:FXD MET FLM 14.7K OHM 1% 1/8W.

Schematic Sheet 12; Figure 8-34; SYM SWEEP WIDTH A11:

Change A11R7* 14.3K to A11R7 14.7K.

CHANGE 22

Table 6-2, Replaceable Parts:

Change A3A1R14 to HP Part No. 0757-0422, R:FXD MET FLM 909 OHM 1% 1/8W.

Delete the following HP Part No. in the Miscellaneous section:

0360-0042, LUG GROUNDING
2360-0195, SCREW: POZI-DRIVE
2420-0001; NUT: HEX
2190-0007, WASHER: LOCK
08601-00050, NAME PLATE: 400 HZ MOD (OPTION 005).

Schematic Sheet 3; Figure 8-13; LOOP AMPLIFIER A3A1

Change A3A1R14* 1.1K to A3A1R14 909.

CHANGE 23

Table 6-2; Replaceable Parts:

Change A9R120 to HP Part No. 2100-1768 R-VAR CERMET 20 OHM 10%.

CHANGE 24

Table 1-1, Stability in CW:

Change first two lines of specification to read as follows:

100 ppm +1 kHz/10 min. high range after one-hour warmup.

100 ppm +100 Hz/10 min. Low range after one-hour warmup.

CHANGE 25

Table 6-2; Replaceable Parts:

Change A7 MPI to HP Part No. 08601-0009 DIAL-KNOB ASSY: ATTENUATOR

Change A11 S1 to HP Part No. 08601-0010 DIAL-KNOW ASSY: SYM SWEEP WIDTH.

CHANGE 26

Table 6-2; Replaceable Parts:

Change A10A32 to HP Part No. 0757-0278, R-RFD MET FLM 1.78K OHM 1% 1/8W. Part No. 0757-0417 is the recommended replacement.

Schematic Sheet 8; Figure 8-26; Power Supply A10:

Change value of A10R32 to 1780.

CHANGE 27

Table 6-2, Replaceable Parts:

Delete second and third A12 entries. (Options 001, 002, and 011).

Delete second A12C1 entry (Options 001, 002, and 011).

Schematic Sheet 12; Figure 8-34: CW/SWEEP SWITCH A12:

Delete notes 1 and 2 and the references to the notes.

CHANGE 28

Table 6-2; Replaceable Parts:

Change A9E1 to HP Part No. 1826-0013. Part No. 1826-0261 is a high reliability replacement for the 1826-0013.

CHANGE 29

Table 6-2; Replaceable Parts:

Change A9R178 to HP Part No. 0698-3631, R: FXD MET OX 330 OHM 5% 2W

Change A10R30 to HP Part No. 0811-1678, R: FXD WW 5.6 OHM 5% 2W.

Change first entry for S7 to HP Part No. 3101-1248.

Change the entry 2110-0470, FUSEHOLDER: under MISCELLANEOUS, to HP Part No. 1400-0084, FUSEHOLDER: EXTRACTOR POST TYPE.

Delete the entry 2110-0465, FUSEHOLDER: CAP under MISCELLANEOUS

Schematic Sheet 8; Figure 8-26; Power Supply A10:

Change the value of A10R30 to 10.

Change ac line power circuit as shown in the following partial schematic (Figure 7-19).

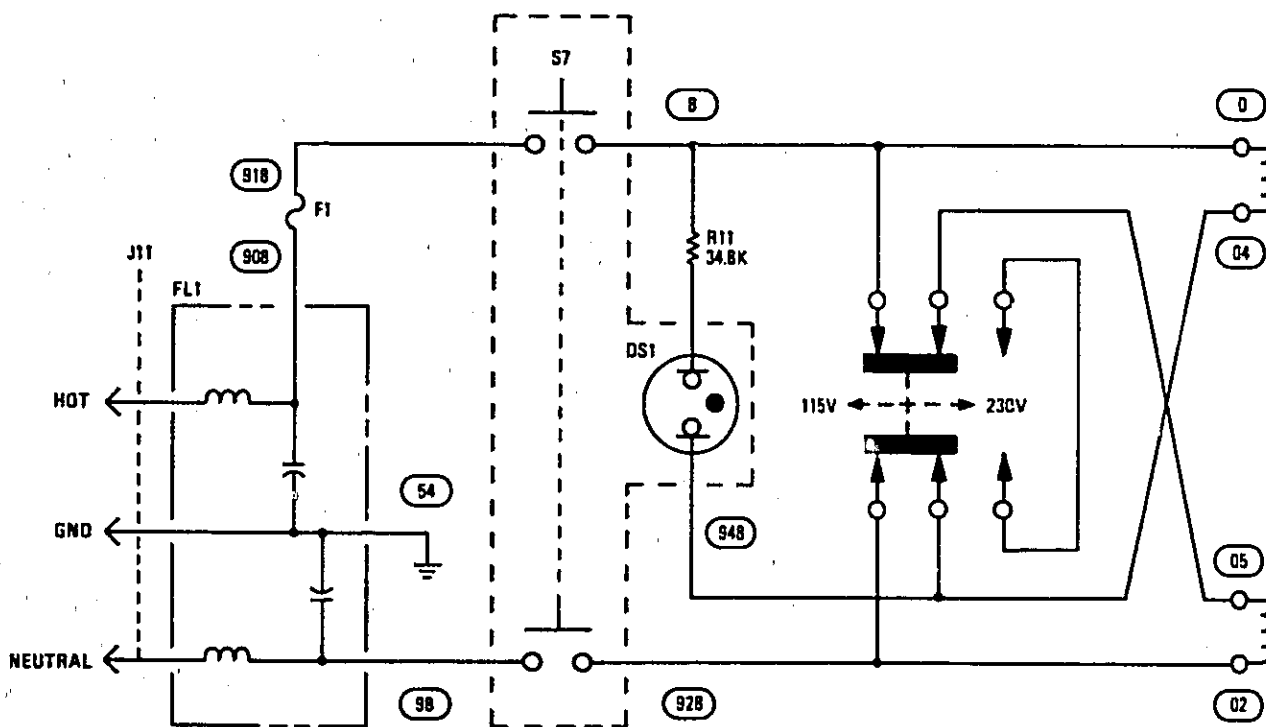


Figure 7-19. Primary Wiring Change (Change 29)

Schematic Sheet 11; Figure 8-32; Frequency Control A9:

Change the value of resistor A9R178 (left side of schematic) to 330.

CHANGE 30

Table 6-2; Replaceable Parts:

Change first entry for F1 to HP Part No. 2110-0202, FUSE 0.50A 250V SLOW-BLOW.

Change third entry for F1 to HP Part No. 2110-0312, FUSE CARTRIDGE 1 AMP 250V SLOW BLOW.

CHANGE 31

Table 6-2, Replaceable Part:

Change A9C41 to HP Part No. 0160-2917, C:FXD CER 0.05 UF +80 -20% 100 VDCW.

Change A9R24 to HP Part No. 2100-1772, R:VAR WW 500 OHM 5% TYPE H 1W.

Change A9R34 to HP Part No. 2100-1775, R:VAR WW 5K OHM 5% TYE H 1W.

Change A9R88 to HP Part No. 2100-1768, R:VAR WW 220 OHM 5% TYPE H 1W.

Change A9R95 to HP Part No. 2100-1775, R:VAR WW SK OHM 5% TYPE H 1W.

Change A9R117 to HP Part No. 2100-1768, R:VAR WW 50 OHM 5% TYPE H 1W.

Delete the A9R130 entry.

Change A9R131 to HP Part No. 2100-1777, R:VAR WW 20K OHM 5% TYPE H 1W.

Change A9R136 to HP Part No. 2100-1777, R:VAR WW 20K OHM 5% TYPE H 1W.

Change A9R160 to HP Part No. 2100-1776, R:VAR WW 10K OHM 5% TYPE H 1W.

Change A9R162 to HP Part No. 2100-1776, R:VAR WW 10K OHM 5% TYPE H 1W.

Change A9R181 to HP Part No. 2100-1777, R:VAR WW 20K OHM 5% TYPE H 1W.

CHANGE 32

Table 6-2, Replaceable Parts:

Change A8F1 to HP Part No. 2110-0006, FUSE: CARTRIDGE 2 AMP 125V SLOW-BLOW.

Schematic Sheet 8: Figure 8-26; Rectifier A8:

Change the value of A8F1 to 2A.

CHANGE 33

Table 6-2, Replaceable Parts:

Change A9C10 to Hp Part No. 0160-2146, C:FXD CER 0.02 UF +80 -20% 100 VDCW.

Change A9C36 to HP Part No. 0160-2146, C:FXD CER 0.02 UF +80 -20% 100 VDCW.

Schematic Sheet 9, Figure 8-28, Frequency Control A9:

Change value of A9C10 to 0.02.

Schematic Sheet 11, Figure 8-32, Frequency Control A9:

Change value of A9C36 to 0.02.

CHANGE 34

Table 6-2, Replaceable Parts:

Substitute Table 7-5 for the A2 DIVIDER ASSY Replaceable Parts List.

Schematic Sheet 2:

Substitute Figure 7-20 for Figure 8-9.

Substitute Figure 7-21 for Figure 8-10.

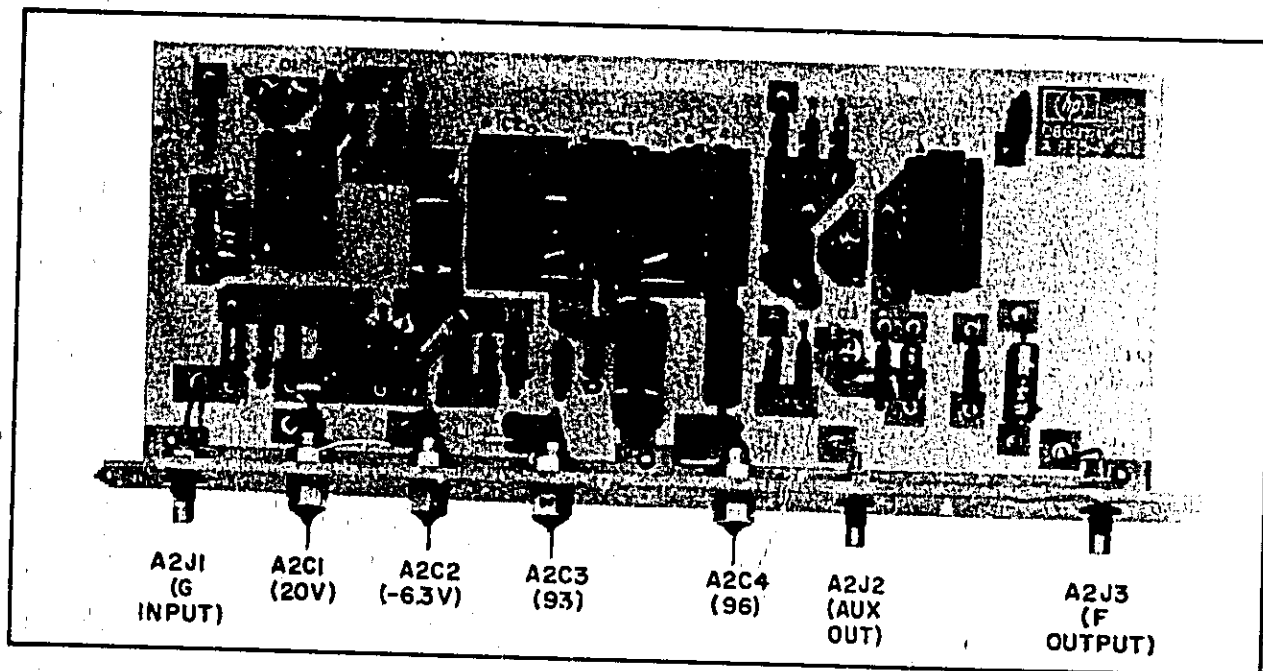


Figure 7-20. A2 Divider/Divider Bypass, Component Identification (Serial Prefixed 912- thru 945-)

CHANGE 35

Table 6-2, Replaceable Parts:

Change A1A1Q1 and A1A1Q3 to HP Part No. 1853-0012,

Change R11 to HP Part No. 0757-3162, R:FXD MET FLM 46.4K OHM 1% 1/8W.

Schematic Sheet 8, Figure 8-26:

Change R11 value to 34.8K.

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2	08601-2028	1	FRONT PANEL:DIVIDER ASSY	28480	08601-2028
A2	08601-2016	2	BOX:SHIELD	28410	08601-2016
A2C1	0160-2049		C:FXD CER 5000 PF 80/20%	28480	0160-2049
A2C2	0160-2049		C:FXD CER 5000 PF 80/20%	28480	0160-2049
A2C3	0160-2049		C:FXD CER 5000 PF 80/20%	28480	0160-2049
A2C4	0160-2049		C:FXD CER 5000 PF 80/20%	28480	0160-2049
A2J1	1250-0829		CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2J2	1250-0829		CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2J3	1250-0829		CONNECTOR:RF 50-OHM SCREW ON TYPE	98291	50-045-4610
A2A1	08601-6043	1	BOARD ASSY:DIVIDER	28480	08601-6043
A2A1C1	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C2	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103Z522-COM
A2A1C3	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103Z522-COM
A2A1C4	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C5	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X9020B2-DYS
A2A1C6	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103Z522-COM
A2A1C7			NOT ASSIGNED		
A2A1C8	0160-2055		C:FXD CER 0.01 UF +80-20% 100VDCW	56289	C023F101F103Z522-COM
A2A1C9	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C10	0140-0198	1	C:FXD MICA 200 PF 5%	72136	ROM15F201J3C
A2A1C11	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C12	0180-0291		C:FXD ELECT 1.0 UF 10% 35VDCW	56279	1500105X9015A2-DYS
A2A1C13	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C14	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C15	0180-0197		C:FXD ELECT 2.2 UF 10% 20VDCW	56289	1500225X9020A2-DYS
A2A1C16	1902-0579	1	DIODE BREAKDOWN:5.11V	28480	1902-0579
A2A1C17	1902-0041	1	DIODE BREAKDOWN 5.11V 5%	04713	1210939-98
A2A1C18	1820-0101	1	INTEGRATED CIRCUIT:DIFFERENTIAL AMPL	04713	MC1034P
A2A1C19	1820-0102	3	INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A2A1C20	1820-0102		INTEGRATED CIRCUIT:J-K FLIP FLOP	04713	MC1013P
A2A1C21	1820-0387	1	INTEGRATED CIRCUIT	28480	1820-0387
A2A1C22	9100-1624	1	COIL/CHOKO 30 UH 5%	P2142	15-4465-1J
A2A1C23	9100-1618		COIL/MOLDED CHOKO 5.60 UH	28480	9100-1618
A2A1C24	9140-0237		COIL:FXD 200 UH 5%	28480	9140-0237
A2A1C25	9140-0237	5	COIL:FXD 200 UH 5%	99800	1025-20
A2A1C26	9140-0158	2	COIL:FXD RF 1 UH 10%	28480	1853-0034
A2A1C27	1853-0034	2	TSTR:SI PNP(SELECTED FROM 2N3251)	28480	1853-0034
A2A1C28	1853-0034		TSTR:SI PNP(SELECTED FROM 2N3251)	28480	1853-0034
A2A1C29	1854-0345		TSTR:SI, NPN	80131	2N5179
A2A1R1	0757-0399	2	R:FXD MET FLM 82.5 OHM 1% 1/8W	28480	0757-0399
A2A1R2	0698-3444	3	R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A2A1R3	0698-3432	3	R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A2A1R4	0698-3441	8	R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A2A1R5	0698-3629	1	R:FXD MET OX 270 OHM 5% 2W	28480	0698-3629
A2A1R6	0757-0280		R:FXD MET FLM 1K OHM 2% 1/8W	28480	0757-0280
A2A1R7	0698-3444		R:FXD MET FLM 316 OHM 1% 1/8W	28480	0698-3444
A2A1R8	0811-1675	1	R:FXD MW 5.6 OHM 5% 2W	28480	0811-1675
A2A1R9	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2A1R10	0698-3432		R:FXD MET FLM 26.1 OHM 1% 1/8W	28480	0698-3432
A2A1R11	0698-3441		R:FXD MET FLM 215 OHM 1% 1/8W	28480	0698-3441
A2A1R12			NOT ASSIGNED		
A2A1R13	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2A1R14	0757-0401		R:FXD MET FLM 100 OHM 1% 1/8W	28480	0757-0401
A2A1R15	0757-0346		R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A2A1R16			NOT ASSIGNED		
A2A1R17	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2A1R18	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2A1R19	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442

See introduction to this section for ordering information

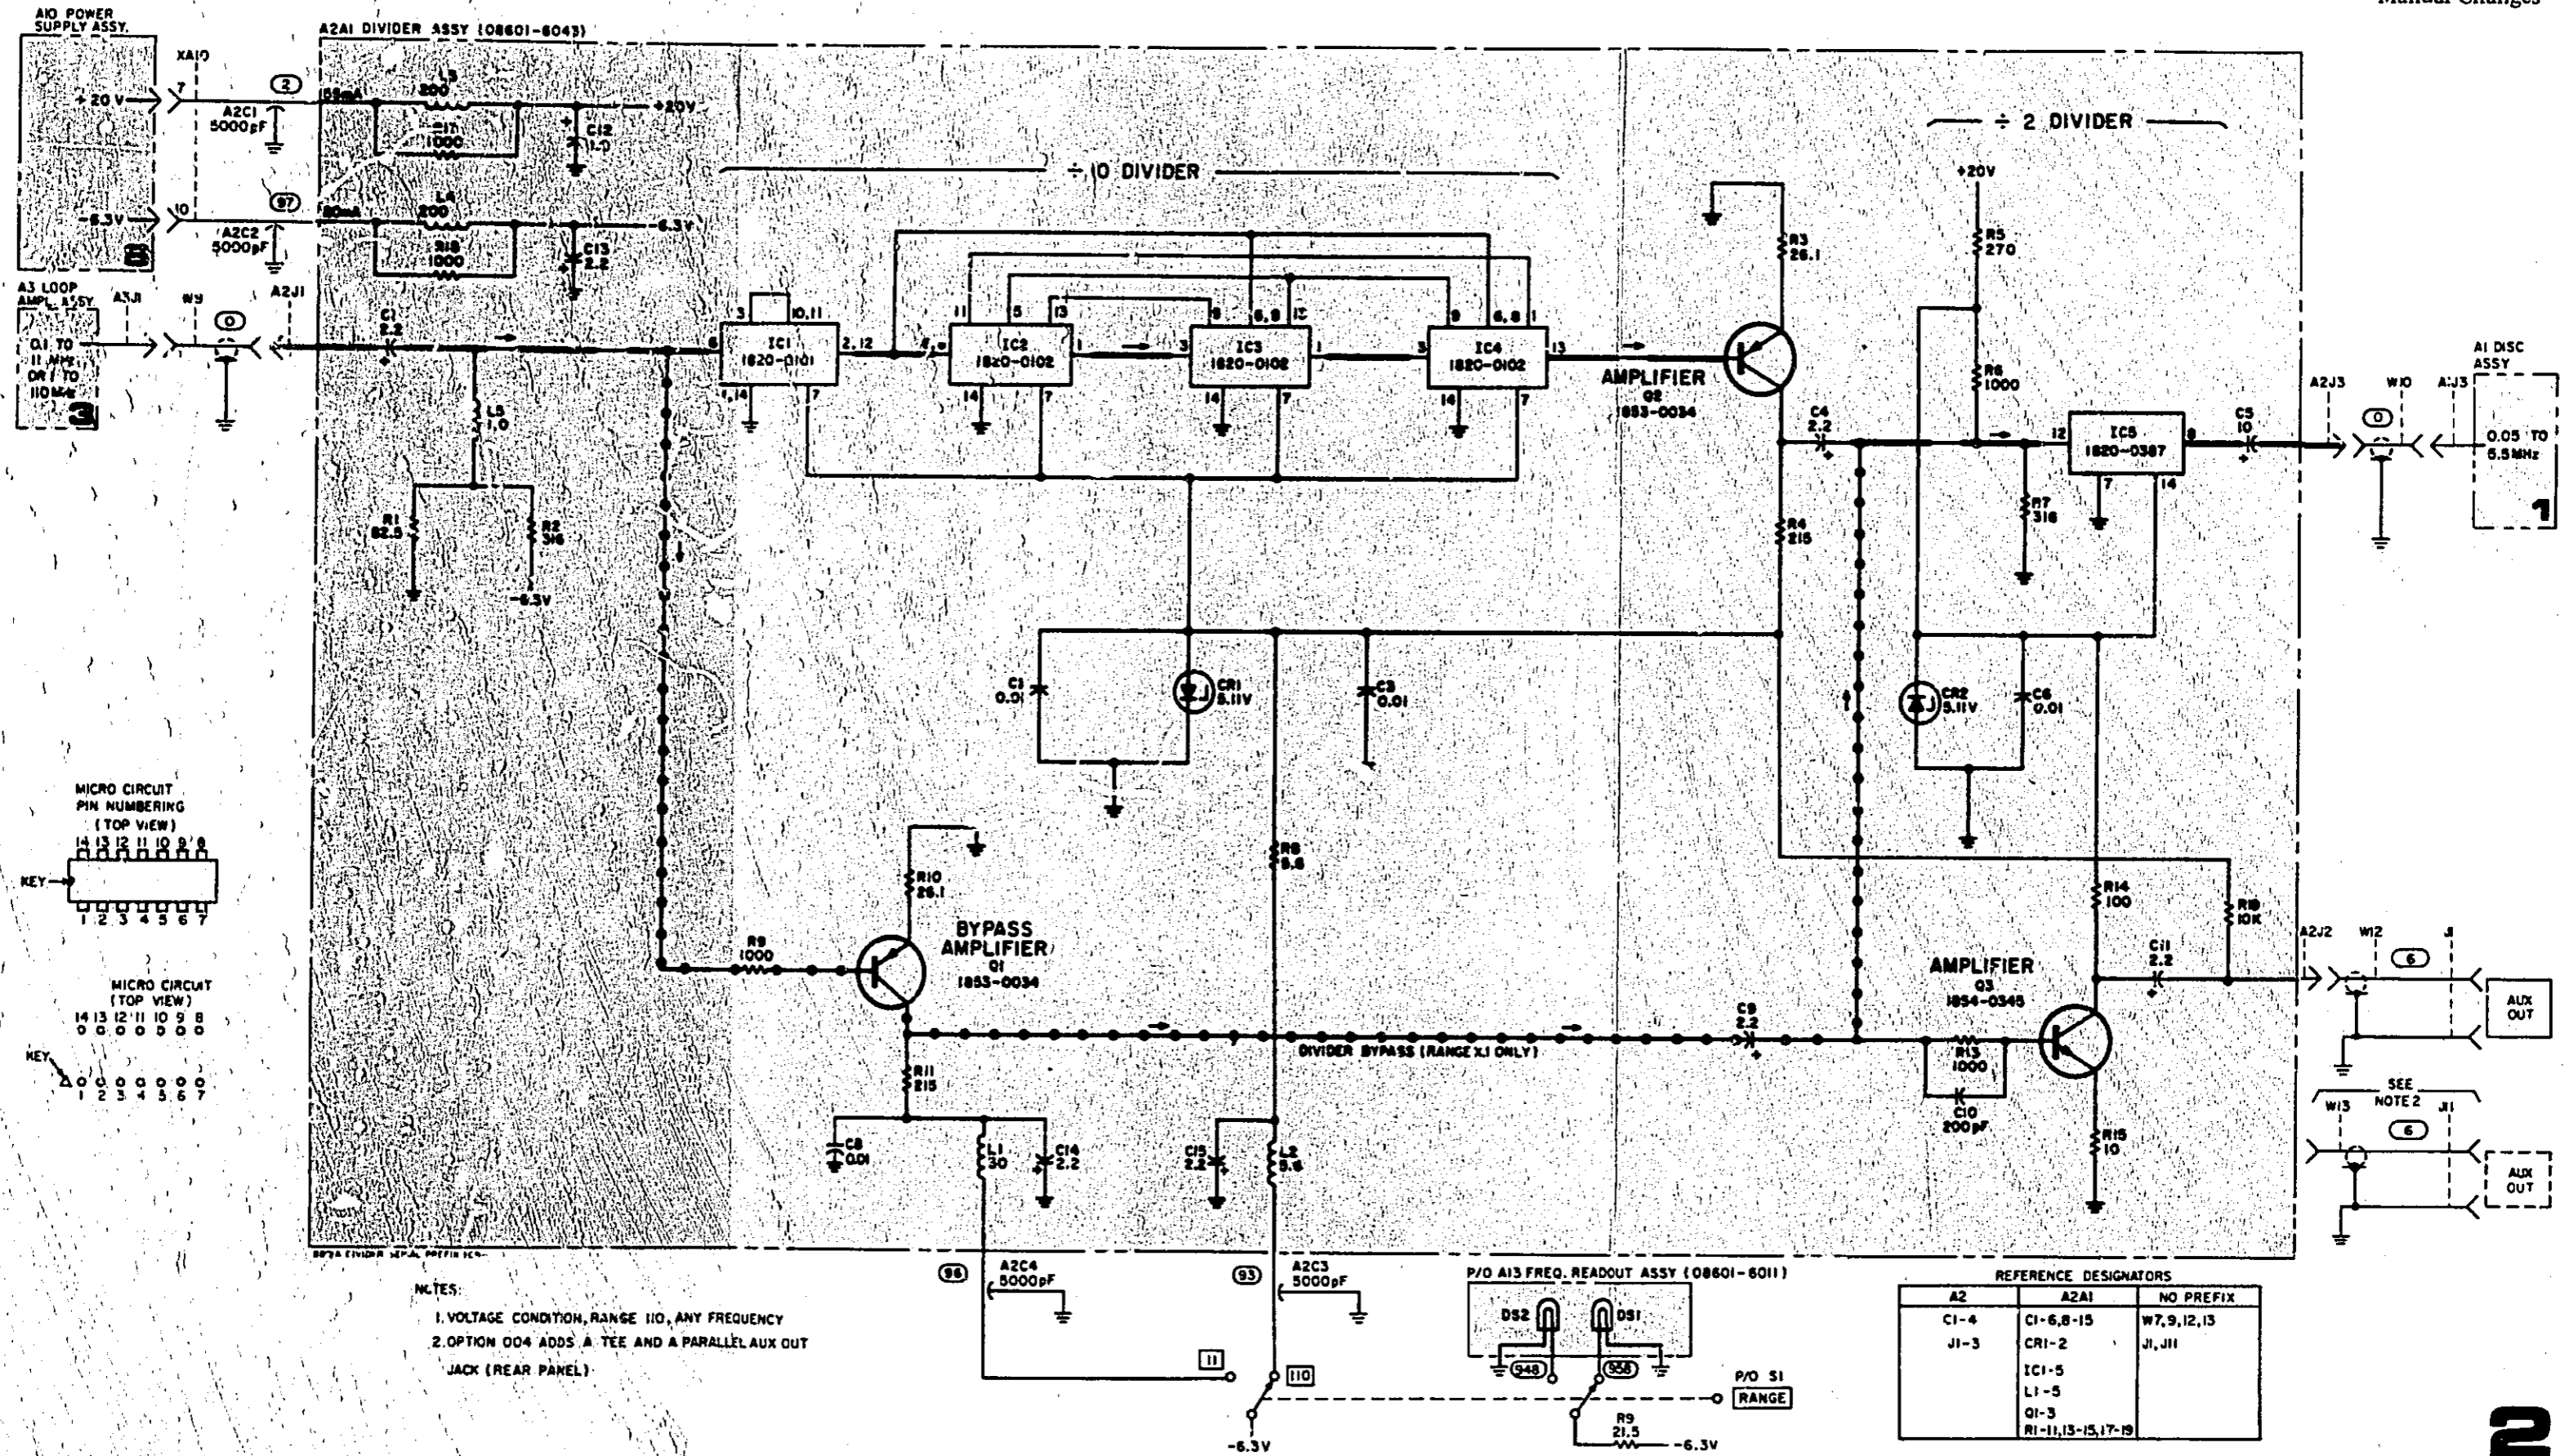


Figure 7-21. A2 Divider/Divider Bypass, Schematic Diagram
7-33/7-34

SERVICE INFORMATION

SECTION VIII SERVICE

8-1. INTRODUCTION

8-2. This section contains principles of operation, circuit descriptions, troubleshooting information, component identification photographs, schematic diagrams and repair procedures.

8-3. PRINCIPLES OF OPERATION

8-4. An overall block diagram is presented in Figure 8-4. An overall theory of operation, is shown opposite the block diagram. A detailed circuit description is placed opposite each Service Sheet with information relating to the appropriate schematic diagram.

8-5. TROUBLESHOOTING

WARNING

With the ac power cable connected, the ac line voltage is present at the terminals of power line module FL1 (mounted on rear panel) and at the LINE switch, whether the LINE switch is on or off. With the covers removed, these terminals are exposed. Care must be taken to avoid contact with these terminals.

With the covers removed, terminals are exposed that have voltages capable of causing death. Any maintenance or repair of the opened instrument under voltage should be carried out only by a skilled person who is aware of the hazard involved.

8-6. An overall troubleshooting tree to the modular level is presented in Figure 8-5. Detailed troubleshooting to the circuit level is shown opposite each schematic diagram.

8-7. RECOMMENDED TEST EQUIPMENT

8-8. Recommended test equipment is listed in Table 1-2. If recommended test equipment is not available, other equipment may be substituted if performance meets the Critical Specifications listed in the table.

8-9. REPAIR

8-10. Part Location Aids

8-11. The locations of adjustment points and major assemblies are shown in Figures 8-40 through 8-45. The location of individual components mounted on a printed circuit board are shown opposite the related schematic diagram. The part reference designator may be found from the schematic diagram, then located on the board.

8-12. Circuit Board Repair

8-13. The printed circuit boards in the Model 8601A are of the plated-through type consisting of metallic conductors bonded to both sides of insulating material. Soldering can be done from either side of the board with equally good results. Following are recommendations and precautions pertinent to printed circuit repair work.

1. Avoid unnecessary component substitution; it can result in damage to the circuit board and adjacent components.

2. Do not use a high-power soldering iron. Excessive heat may lift a conductor or damage the board.

3. Use a suction device (such as a Soldapull, by the Edsyn Company, Arleta, California) or wooden toothpick to remove solder from component mounting holes. *Do not use a sharp metal object such as an awl or twist drill for this purpose. Sharp objects may damage the plated-through conductor.*

4. After soldering, remove excess flux from the soldered area and apply a protective coating to prevent contamination and corrosion.

8-14. A broken or burned section of conductor can be repaired by bridging the damaged section with a length of tinned copper wire. Allow adequate overlap and remove any varnish from the conductor before soldering wire into place.

8-15. Component Replacement

8-16. A general procedure for replacing a component is as follows:

1. Remove defective component from circuit board.

2. Remove solder from mounting holes using a suction desoldering aid or wooden toothpick.
3. Shape leads or replacement component to match mounting hole spacing.
4. Insert component leads into mounting holes and position component as original was positioned. *Do not force leads of replacement component into mounting holes. Sharp lead ends may damage plated-through conductor.*

NOTE

Axial lead components, such as resistors and tubular capacitors, can be replaced without unsoldering. Clip leads near body of defective component, remove component and straighten leads left in board. Wrap leads of replacement component one turn around original leads. Solder wrapped connection and clip off excess lead.

8-17. Transistor Replacement

8-18. A general procedure for replacing a transistor is as follows:

1. Do not apply excessive heat.
2. Use a heat sink such as pliers or hemostat between transistor body and hot soldering iron.
3. When installing a replacement transistor, ensure sufficient lead length to dissipate heat of soldering by maintaining about the same length of exposed lead as used for original transistor.

8-19. SCHEMATIC DIAGRAMS

8-20. The schematic diagrams in this section represent the circuits electrically. They are not wiring diagrams, though wire colors are given where practical.

8-21. The circuits are arranged according to signal flow; consequently, some switch and circuit assemblies may be shown in part on more than one diagram. If so, the reference designation is preceded by P/O, for Part of, and is followed by a notation of the number of parts into which the assembly has been divided.

8-22. The large numbers in the lower right corners of the schematics are the Service Sheet numbers. These numbers are used to cross-reference connections between schematics.

8-23. Some of the general information obtainable from the schematics is shown in Figure 8-1. Notes and explanations of symbols pertaining to all the diagrams are contained in Figure 8-2. Notes about specific components, circuits, or conditions are given on the diagram to which they apply.

8-24. As an aid to finding components and assemblies in the set of diagrams, each diagram has a box labeled Reference Designations that contains all the reference designations appearing on the diagram.

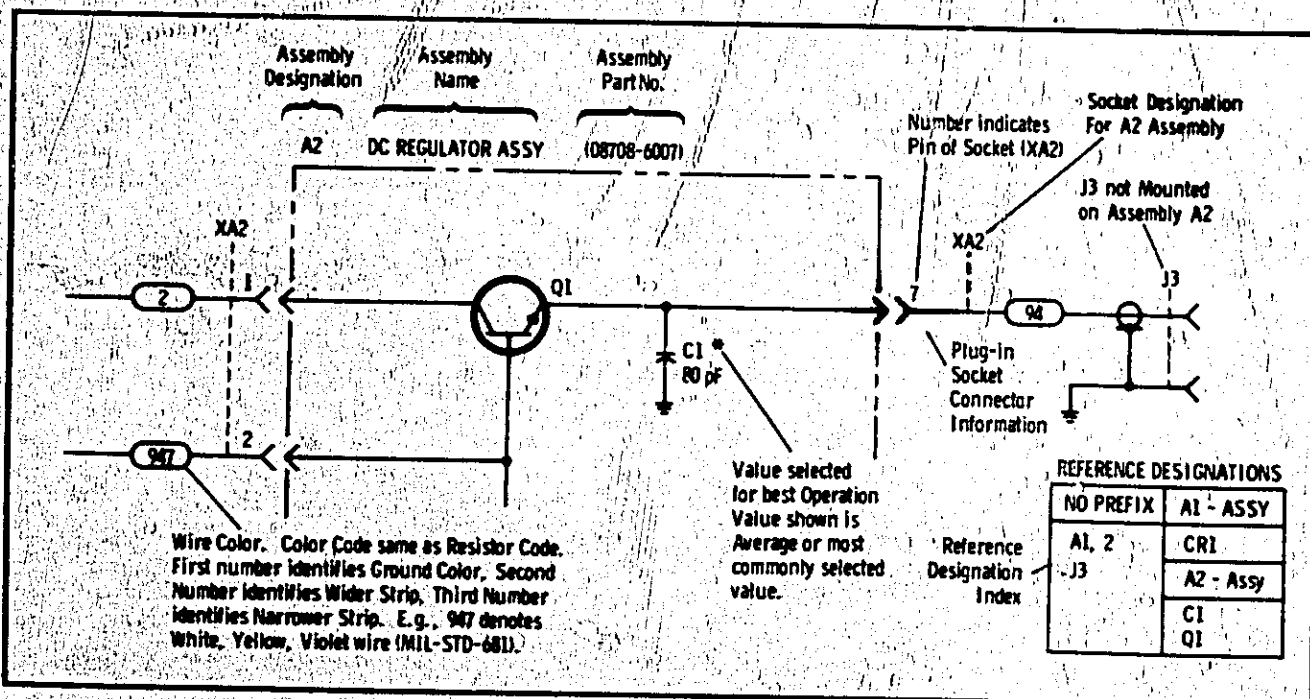


Figure 8-1. General Information on Schematic Diagrams

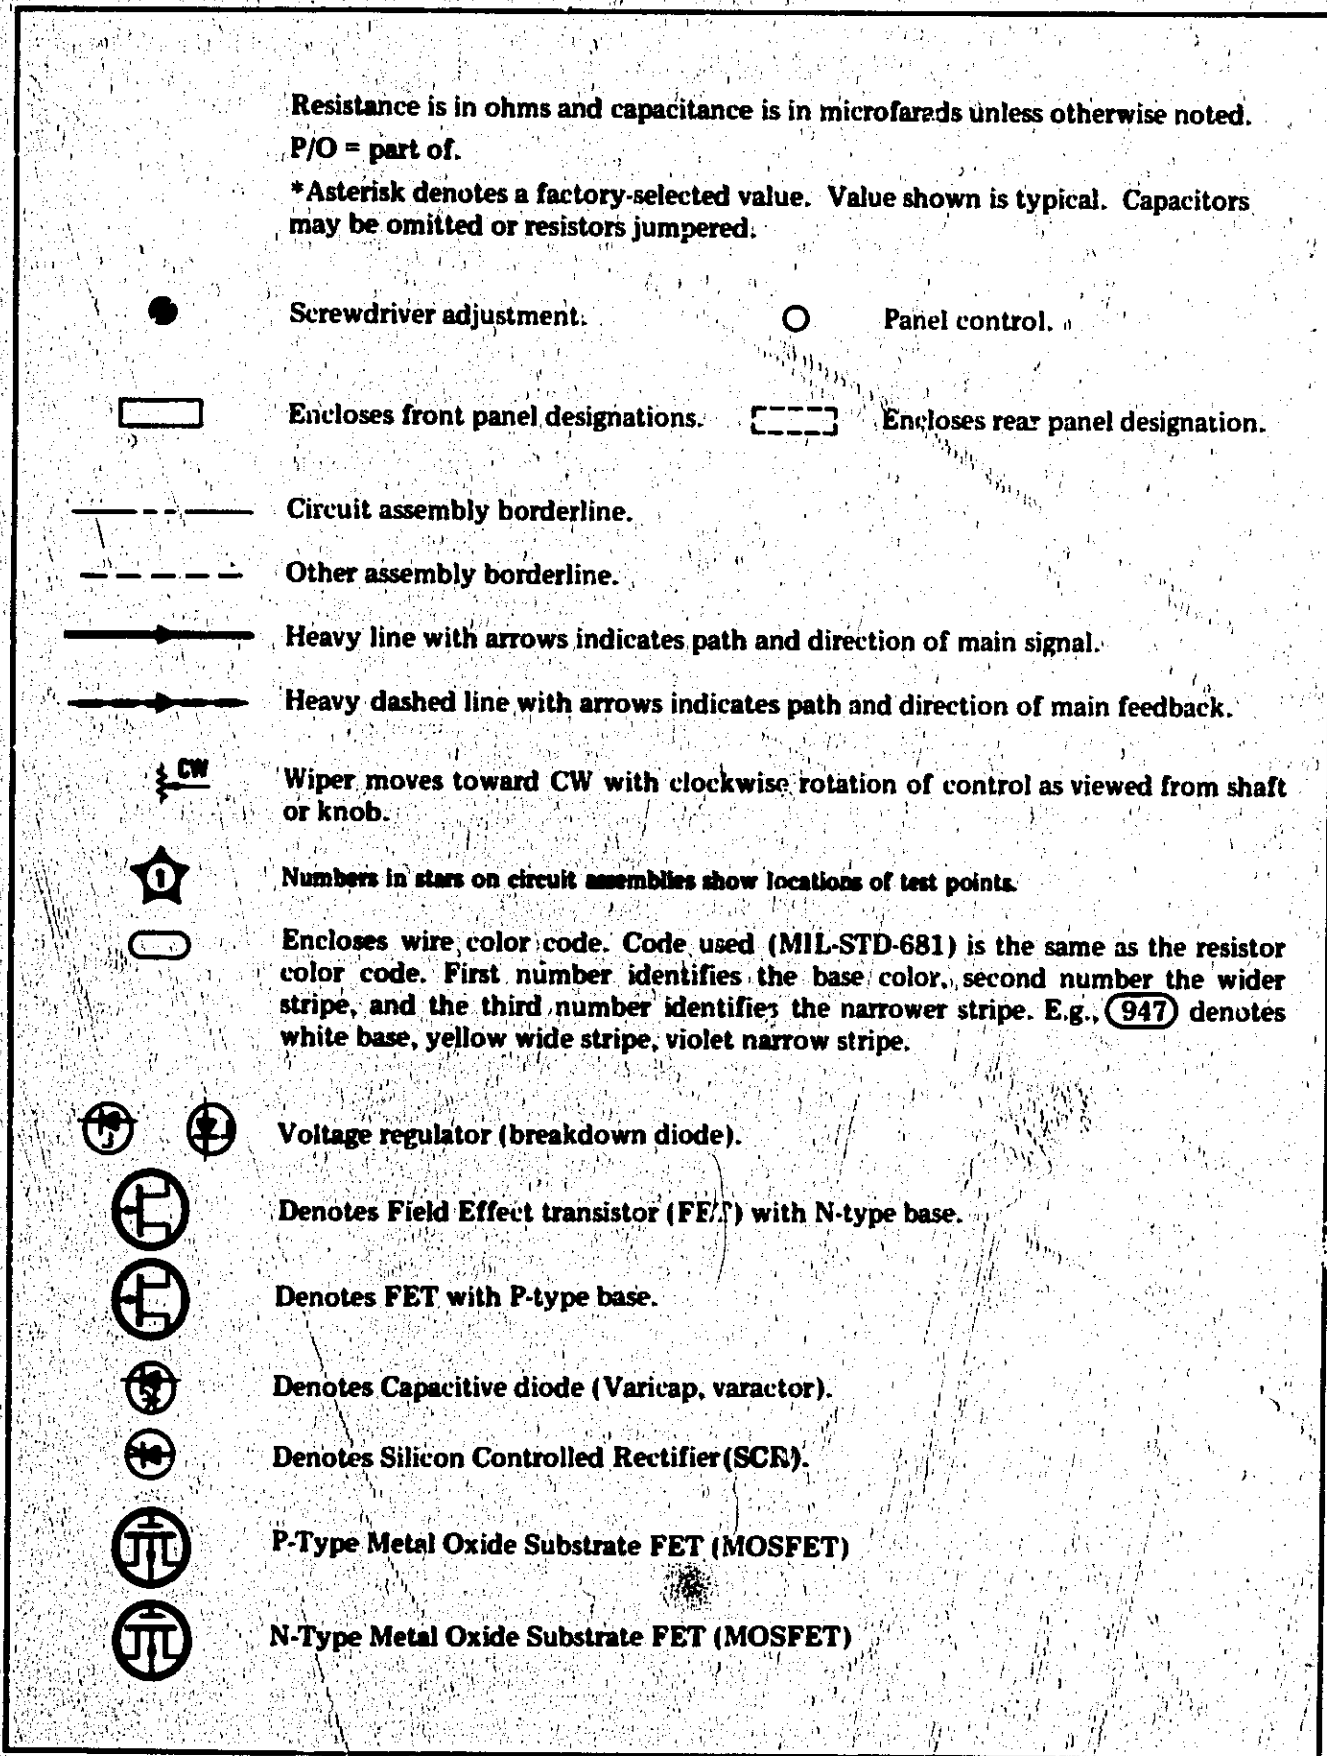


Figure 8-2. Schematic Diagram Notes

8-25. OPERATION

8-26. Figure 8-3 is a simplified block diagram of the 8601A. A detailed block diagram is shown in Figure 8-4. The 8601A consists of four major sections: the primary signal path, the automatic leveling control (ALC) feedback loop, the frequency control feedback loop, and the frequency tuning control.

8-27. Primary Signal Path

8-28. The primary signal path begins in a 200 MHz crystal oscillator. The 200 MHz output is applied to (1) the primary signal mixer and (2) the frequency control loop mixer. Both mixers heterodyne the 200 MHz signal with a 200.1 to 310 MHz signal from a voltage tuned oscillator (VTO) to provide a 0.1 to 110 MHz output. The 0.10 to 110 MHz signal is coupled through a low pass filter to a video amplifier. The video amplifier output is applied to a calibrated attenuator that enables the leveled signal at the 50 ohm RF OUT terminal to be varied from +20 to -110 dBm.

8-29. ALC Feedback Loop

8-30. The video amplifier contains a detector that samples the signal power at the video amplifier output. The detector output is a voltage level proportional to the signal power. The detector output is applied to an ALC level control circuit where it is compared to a reference voltage that is determined by the OUTPUT LEVEL VERNIER control setting. The level control output is amplified by an ALC amplifier and coupled back to the 200 MHz amplifier/modulator. The ALC amplifier output controls the power level of the 200 MHz amplifier/modulator output in the primary signal path. The three modulation functions, RF blanking, frequency markers, and amplitude modulation, are also applied to the ALC level control and amplifier circuits.

8-31. Frequency Control Feedback Loop

8-32. The frequency control feedback loop ensures high-frequency accuracy, stability, and linearity by controlling the 200.1 to 310 MHz VTO. The loop compensates for any 200 MHz oscillator drift and keeps the VTO output frequency independent of the VTO's non-linear tuning characteristic. The loop locks the RF output frequency to the sweep generator linear output tuning voltage.

8-33. The 200 MHz fixed-oscillator output is mixed with the 200.1 to 310 MHz VTO output in the loop mixer. The 0.1 to 11 MHz difference frequency output is applied to a frequency discriminator. (Because the discriminator frequency range is limited, a divide by 10 divider precedes the discriminator during 1.0 to 110 MHz operation.) The discriminator output is a voltage level proportional to the input frequency. This voltage level is applied to a dc amplifier where it is compared to a voltage reference determined by the frequency control setting and the sweep generator mode of operation. (In a sweep mode, the reference is a linear voltage ramp; for CW, the reference is a dc value.) The difference voltage output is amplified by the dc amplifier and tunes the VTO.

8-34. The voltage comparison is a continuous process at either a CW frequency or a sweep over any portion of the 110 MHz range. Thus, the frequency control feedback loop keeps the discriminator output equal to the reference tuning voltage at all times. The dc amplifier also contains a search circuit to ensure that the VTO tuning voltage tunes the VTO upward from 200 MHz.

8-35. Frequency Tuning Control

8-36. The sweep generator produces the tuning voltage reference for the dc amplifier in both sweep and CW modes. The sweep generator tuning ramp output, when applied directly to the dc amplifier, causes the VTO to sweep the full range; 0.1 to 1.1 MHz in range 11 or 1.0 to 110 MHz in range 110. In the VIDEO mode, the tuning ramp's upper limit is determined by the FREQUENCY control setting, so the sweep is from the bottom of the band (0.1 or 1.0 MHz) to the FREQUENCY setting. In the SYM mode, the tuning ramp is centered on a CW frequency determined by the FREQUENCY control. The tuning ramp amplitude is determined by the SYM SWEEP WIDTH control. In the CW mode, no ramp is generated. A dc voltage, determined by the FREQUENCY control, is applied to the dc amplifier.

8-37. Internal and external frequency-modulation signals are imposed on the sweep generator tuning voltage at the summing amplifier during the SYM mode of operation.

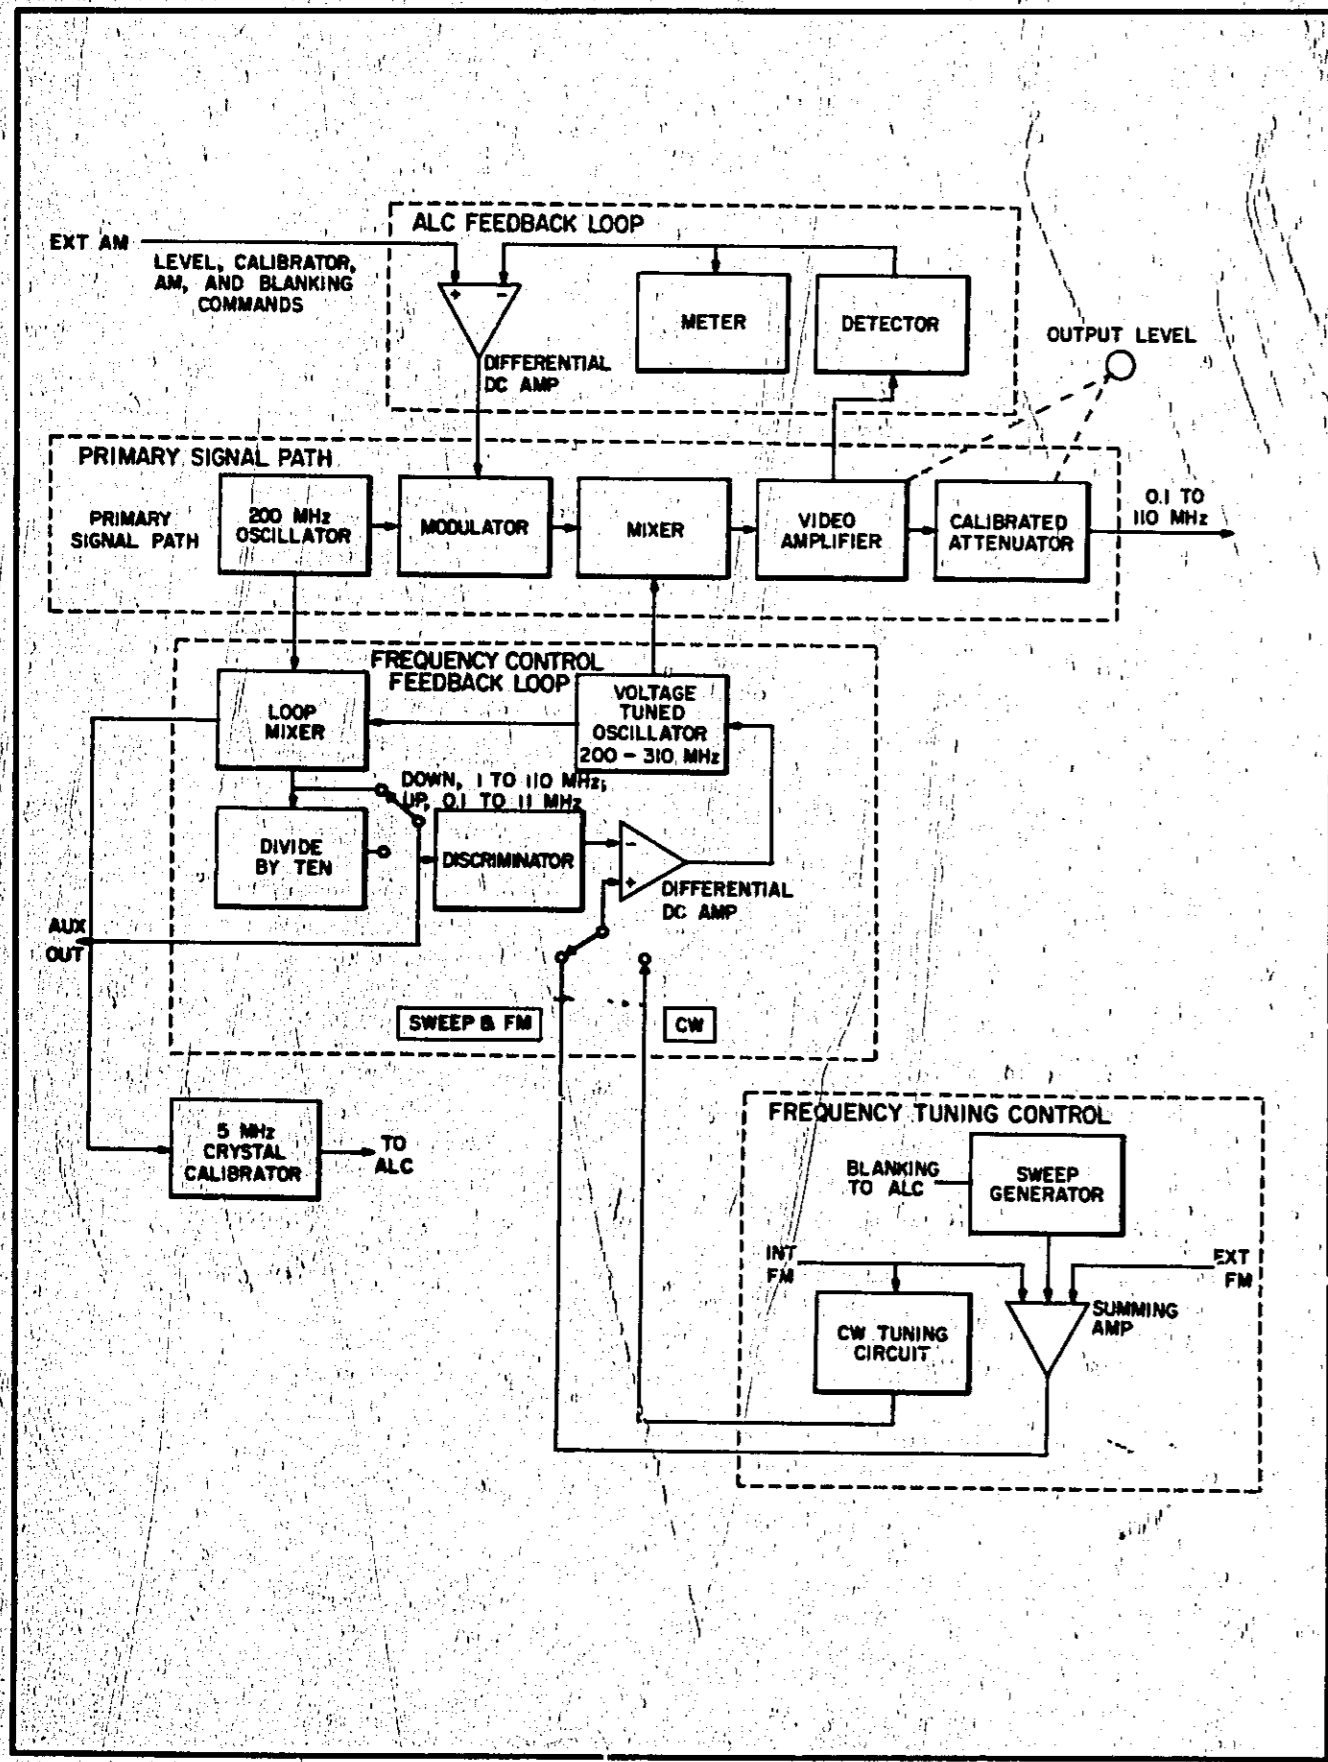


Figure 8-3. 8601A Simplified Block Diagram




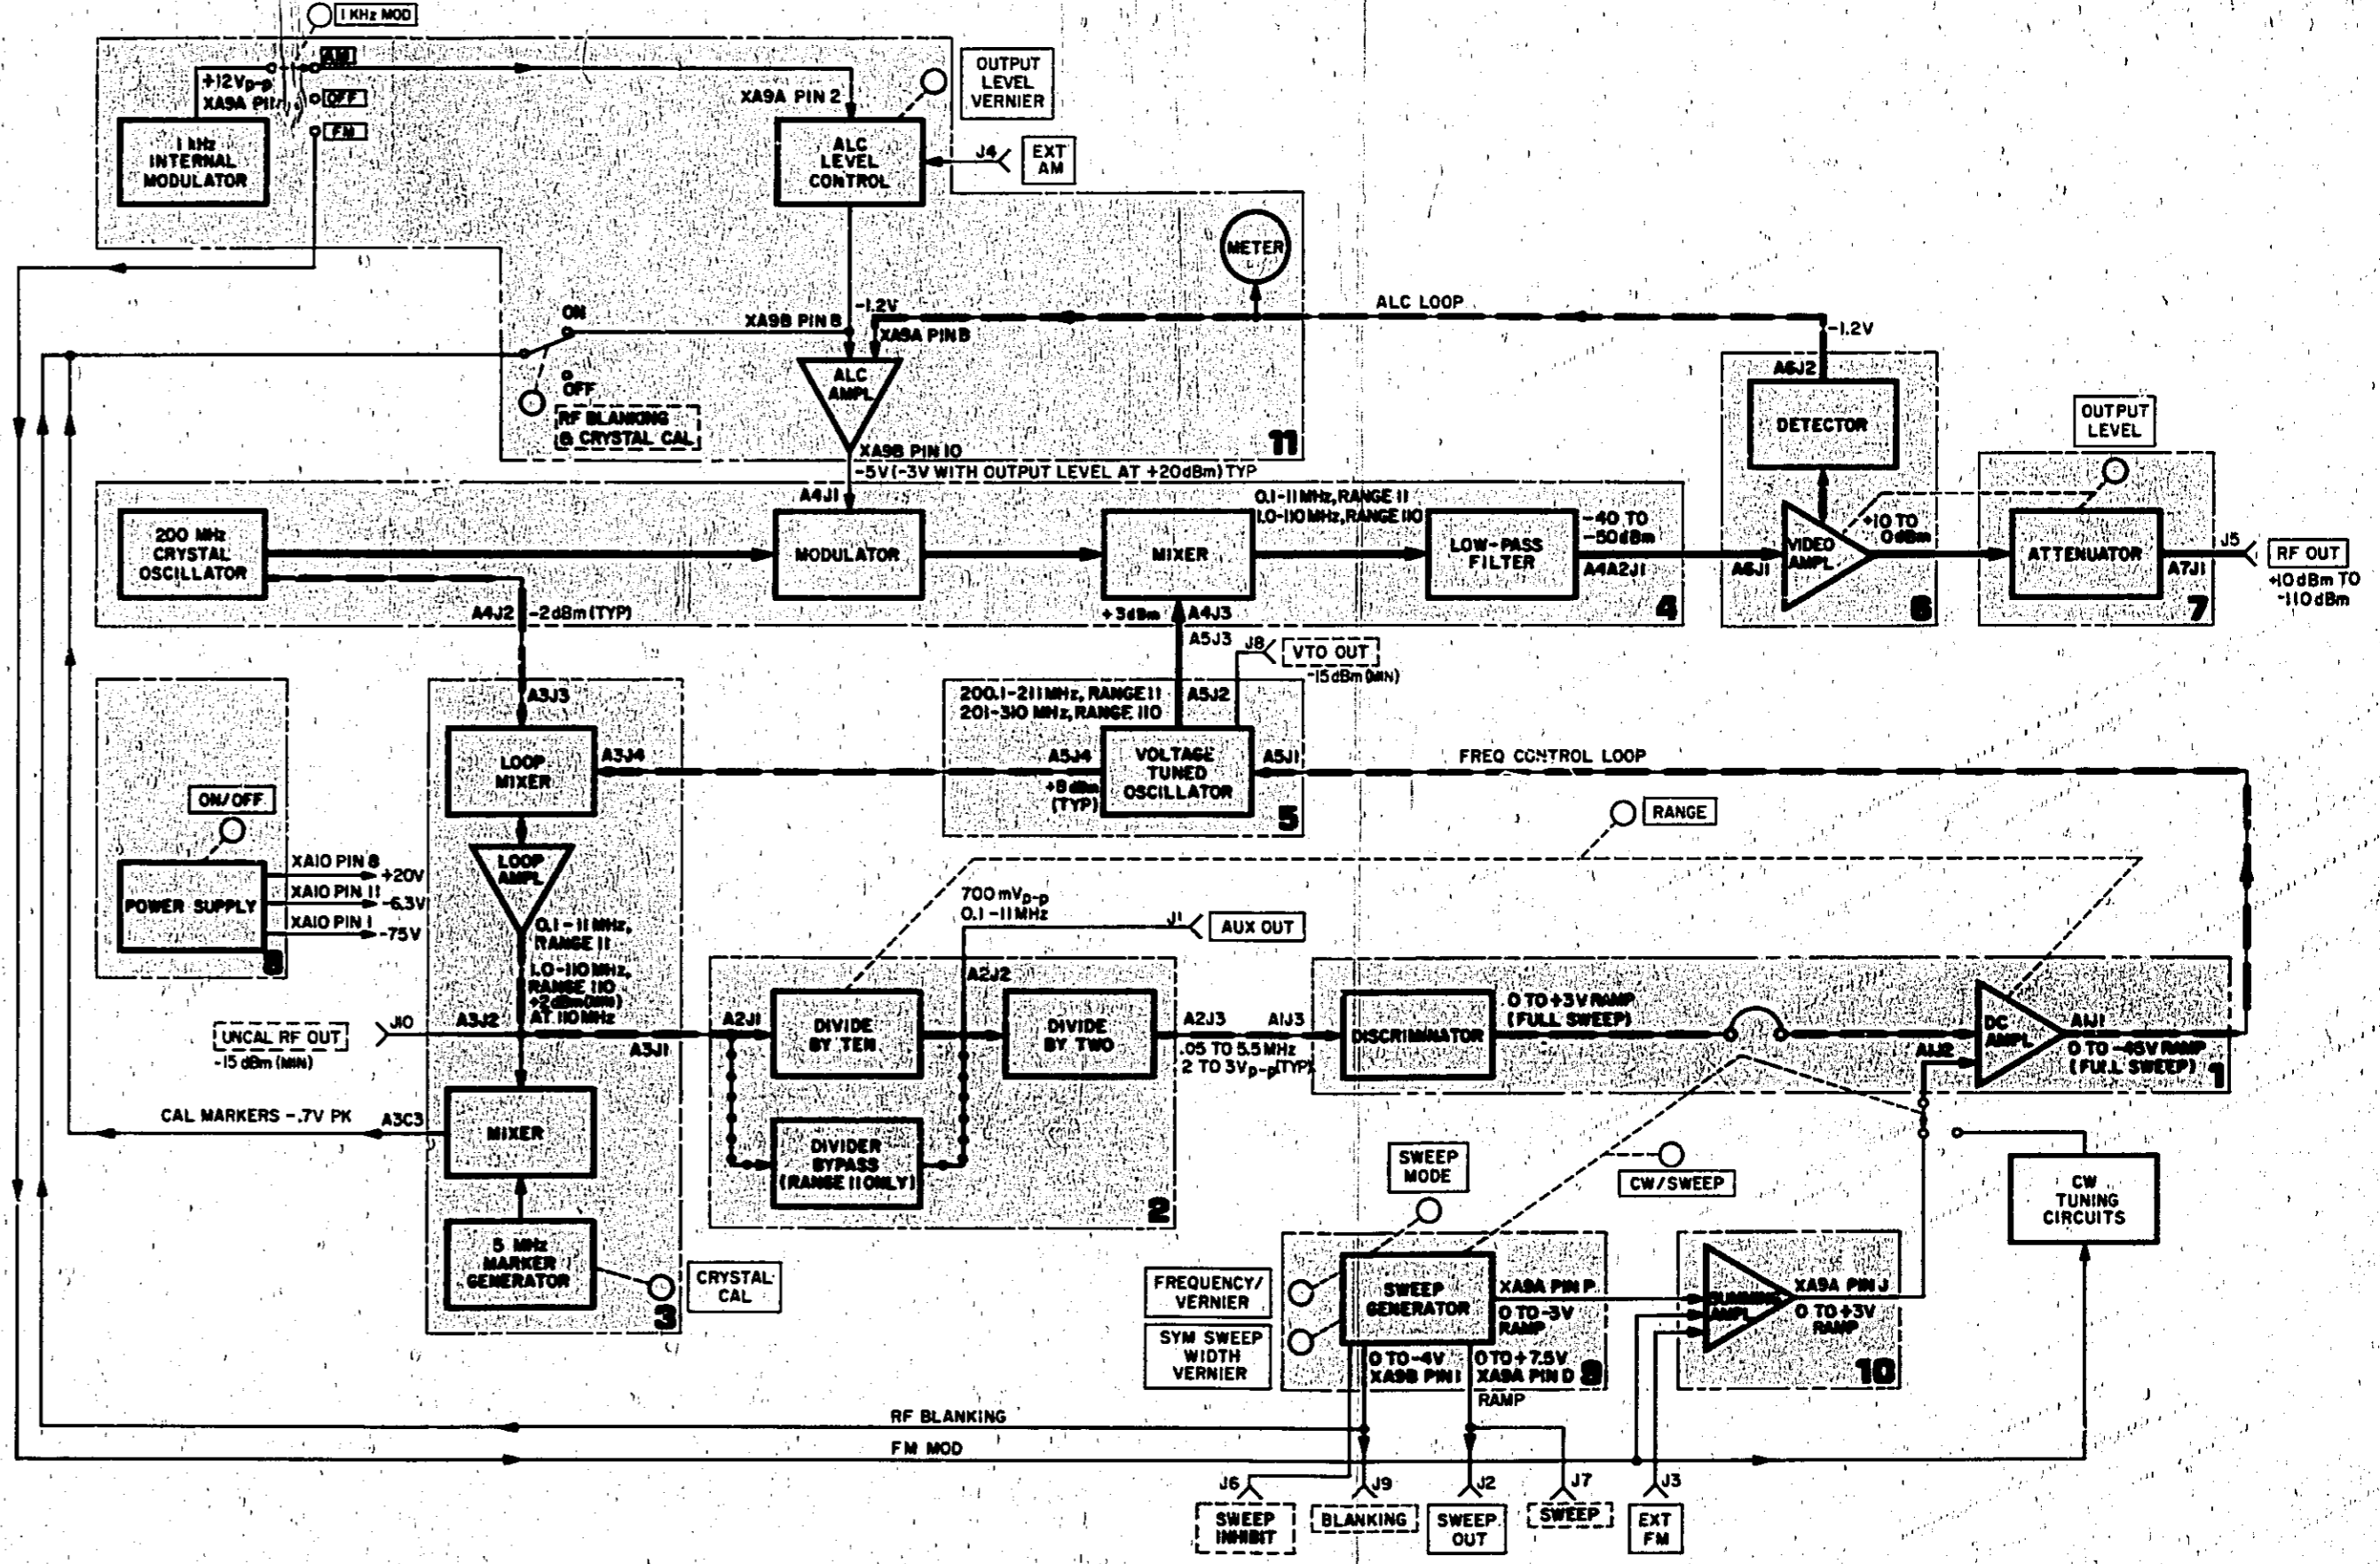



Figure 8-4. Detailed Block Diagram

OVERALL TROUBLESHOOTING TREE

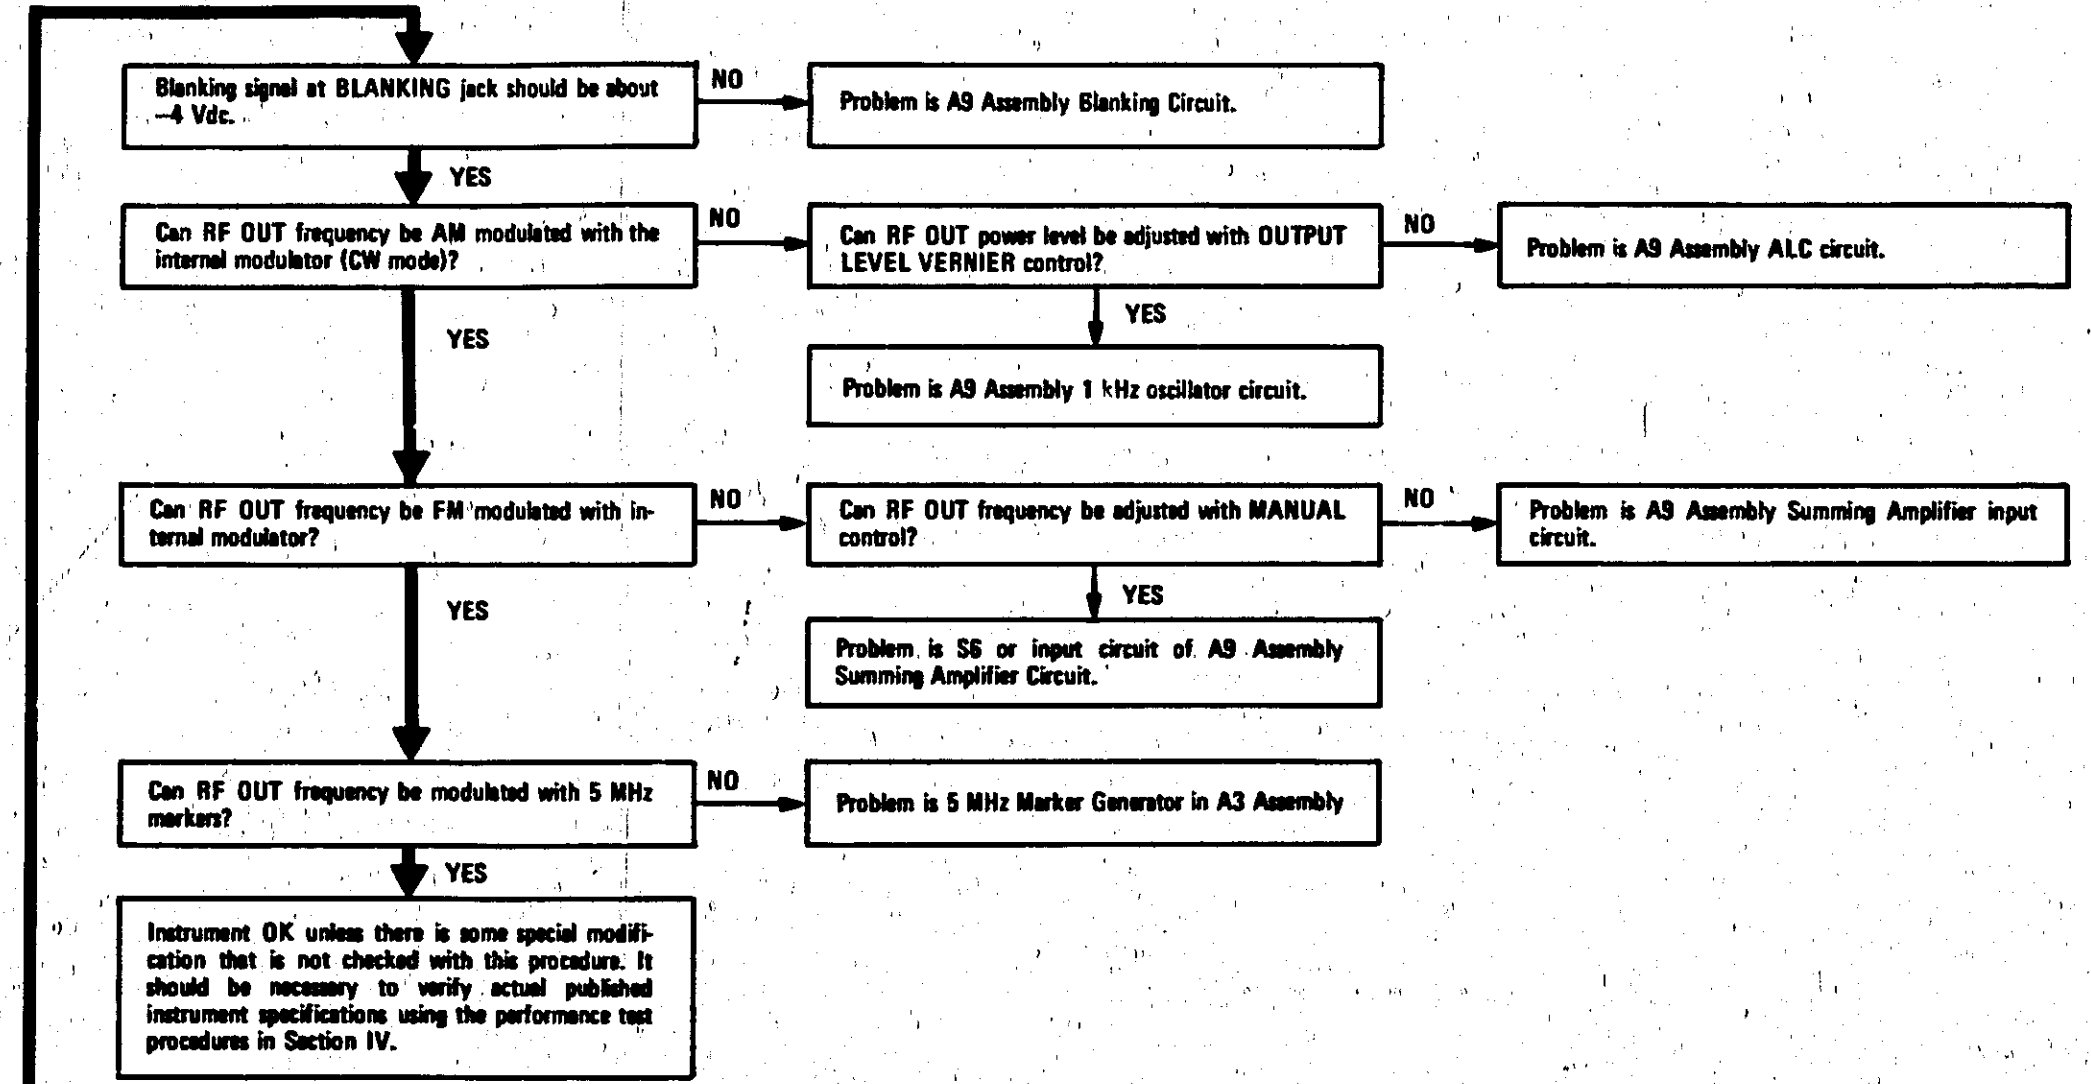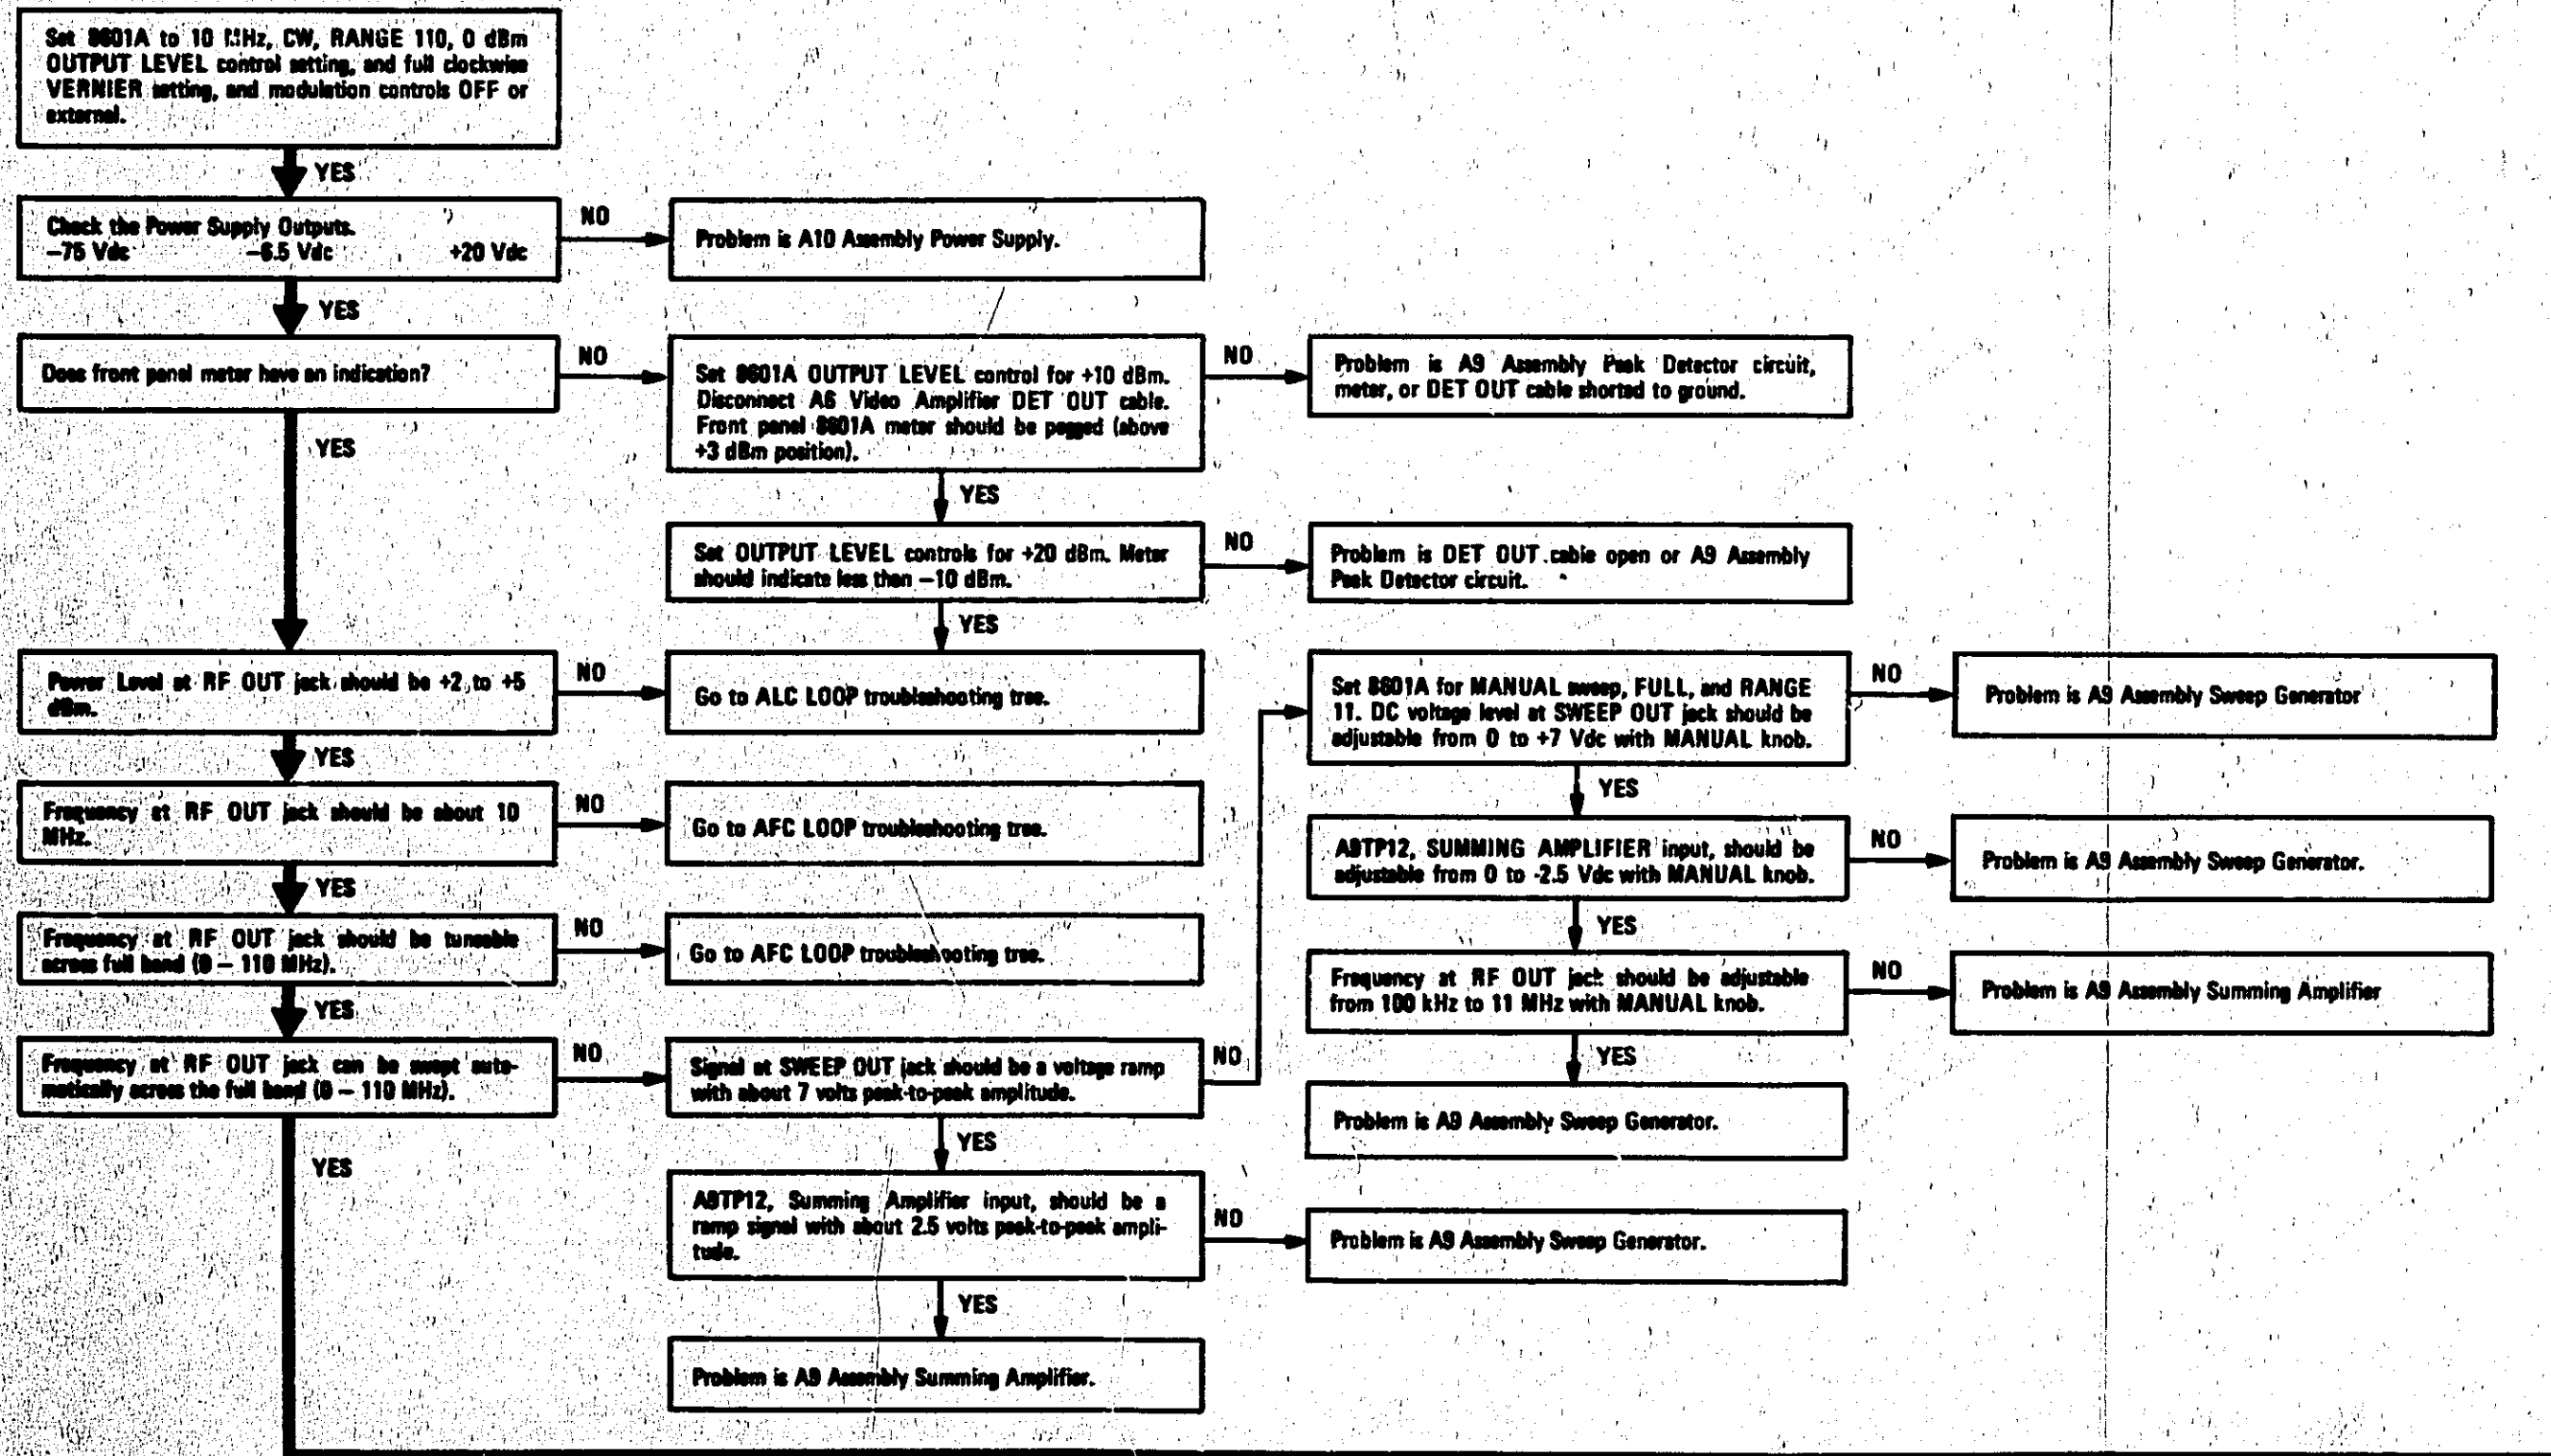

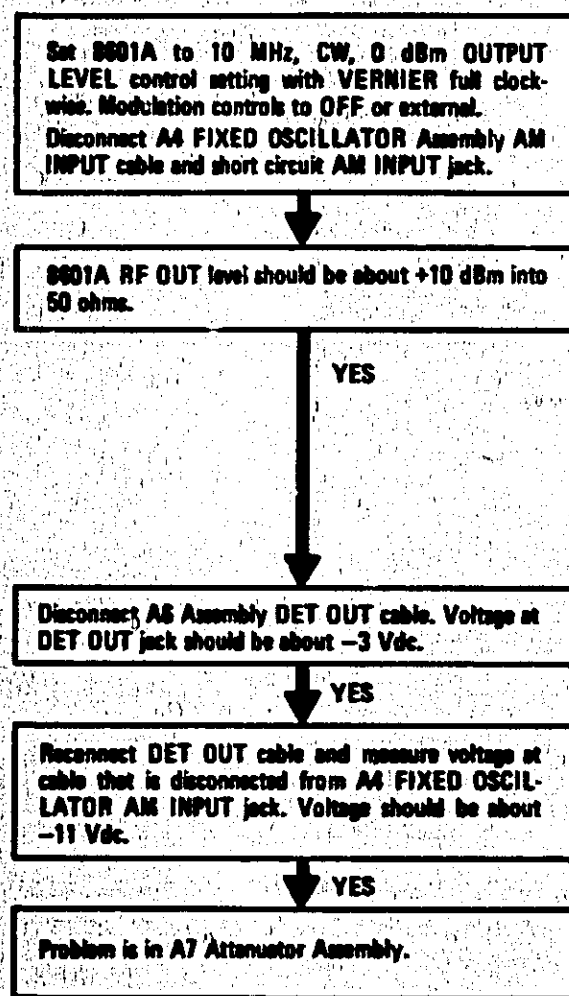

ALC LOOP TROUBLESHOOTING TREE

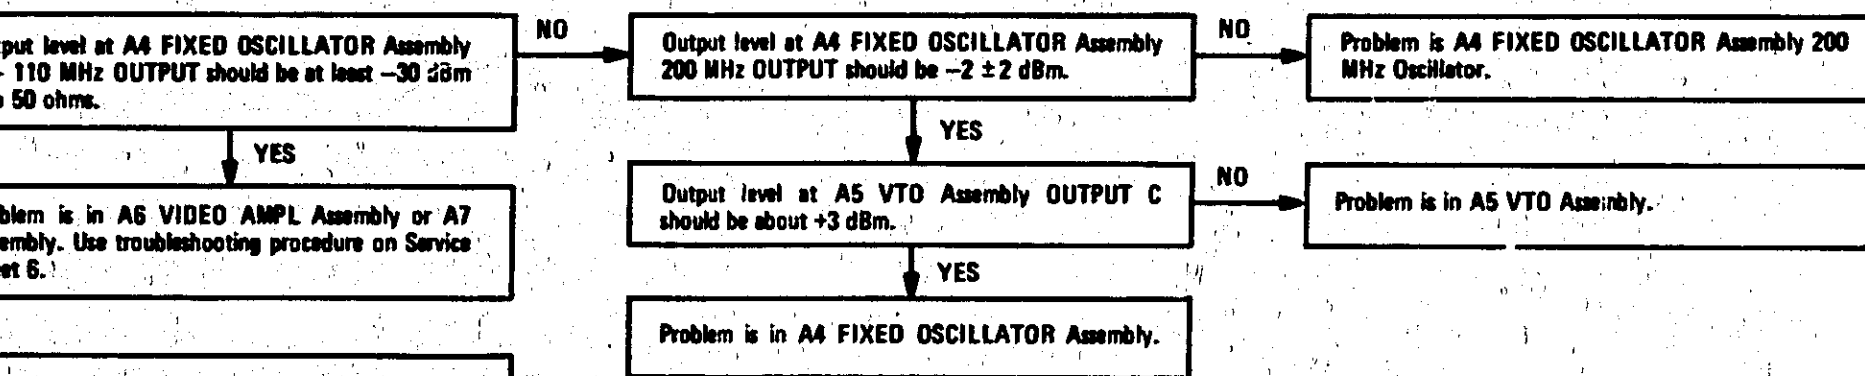

AFC LOOP TROUBLESHOOTING TREE

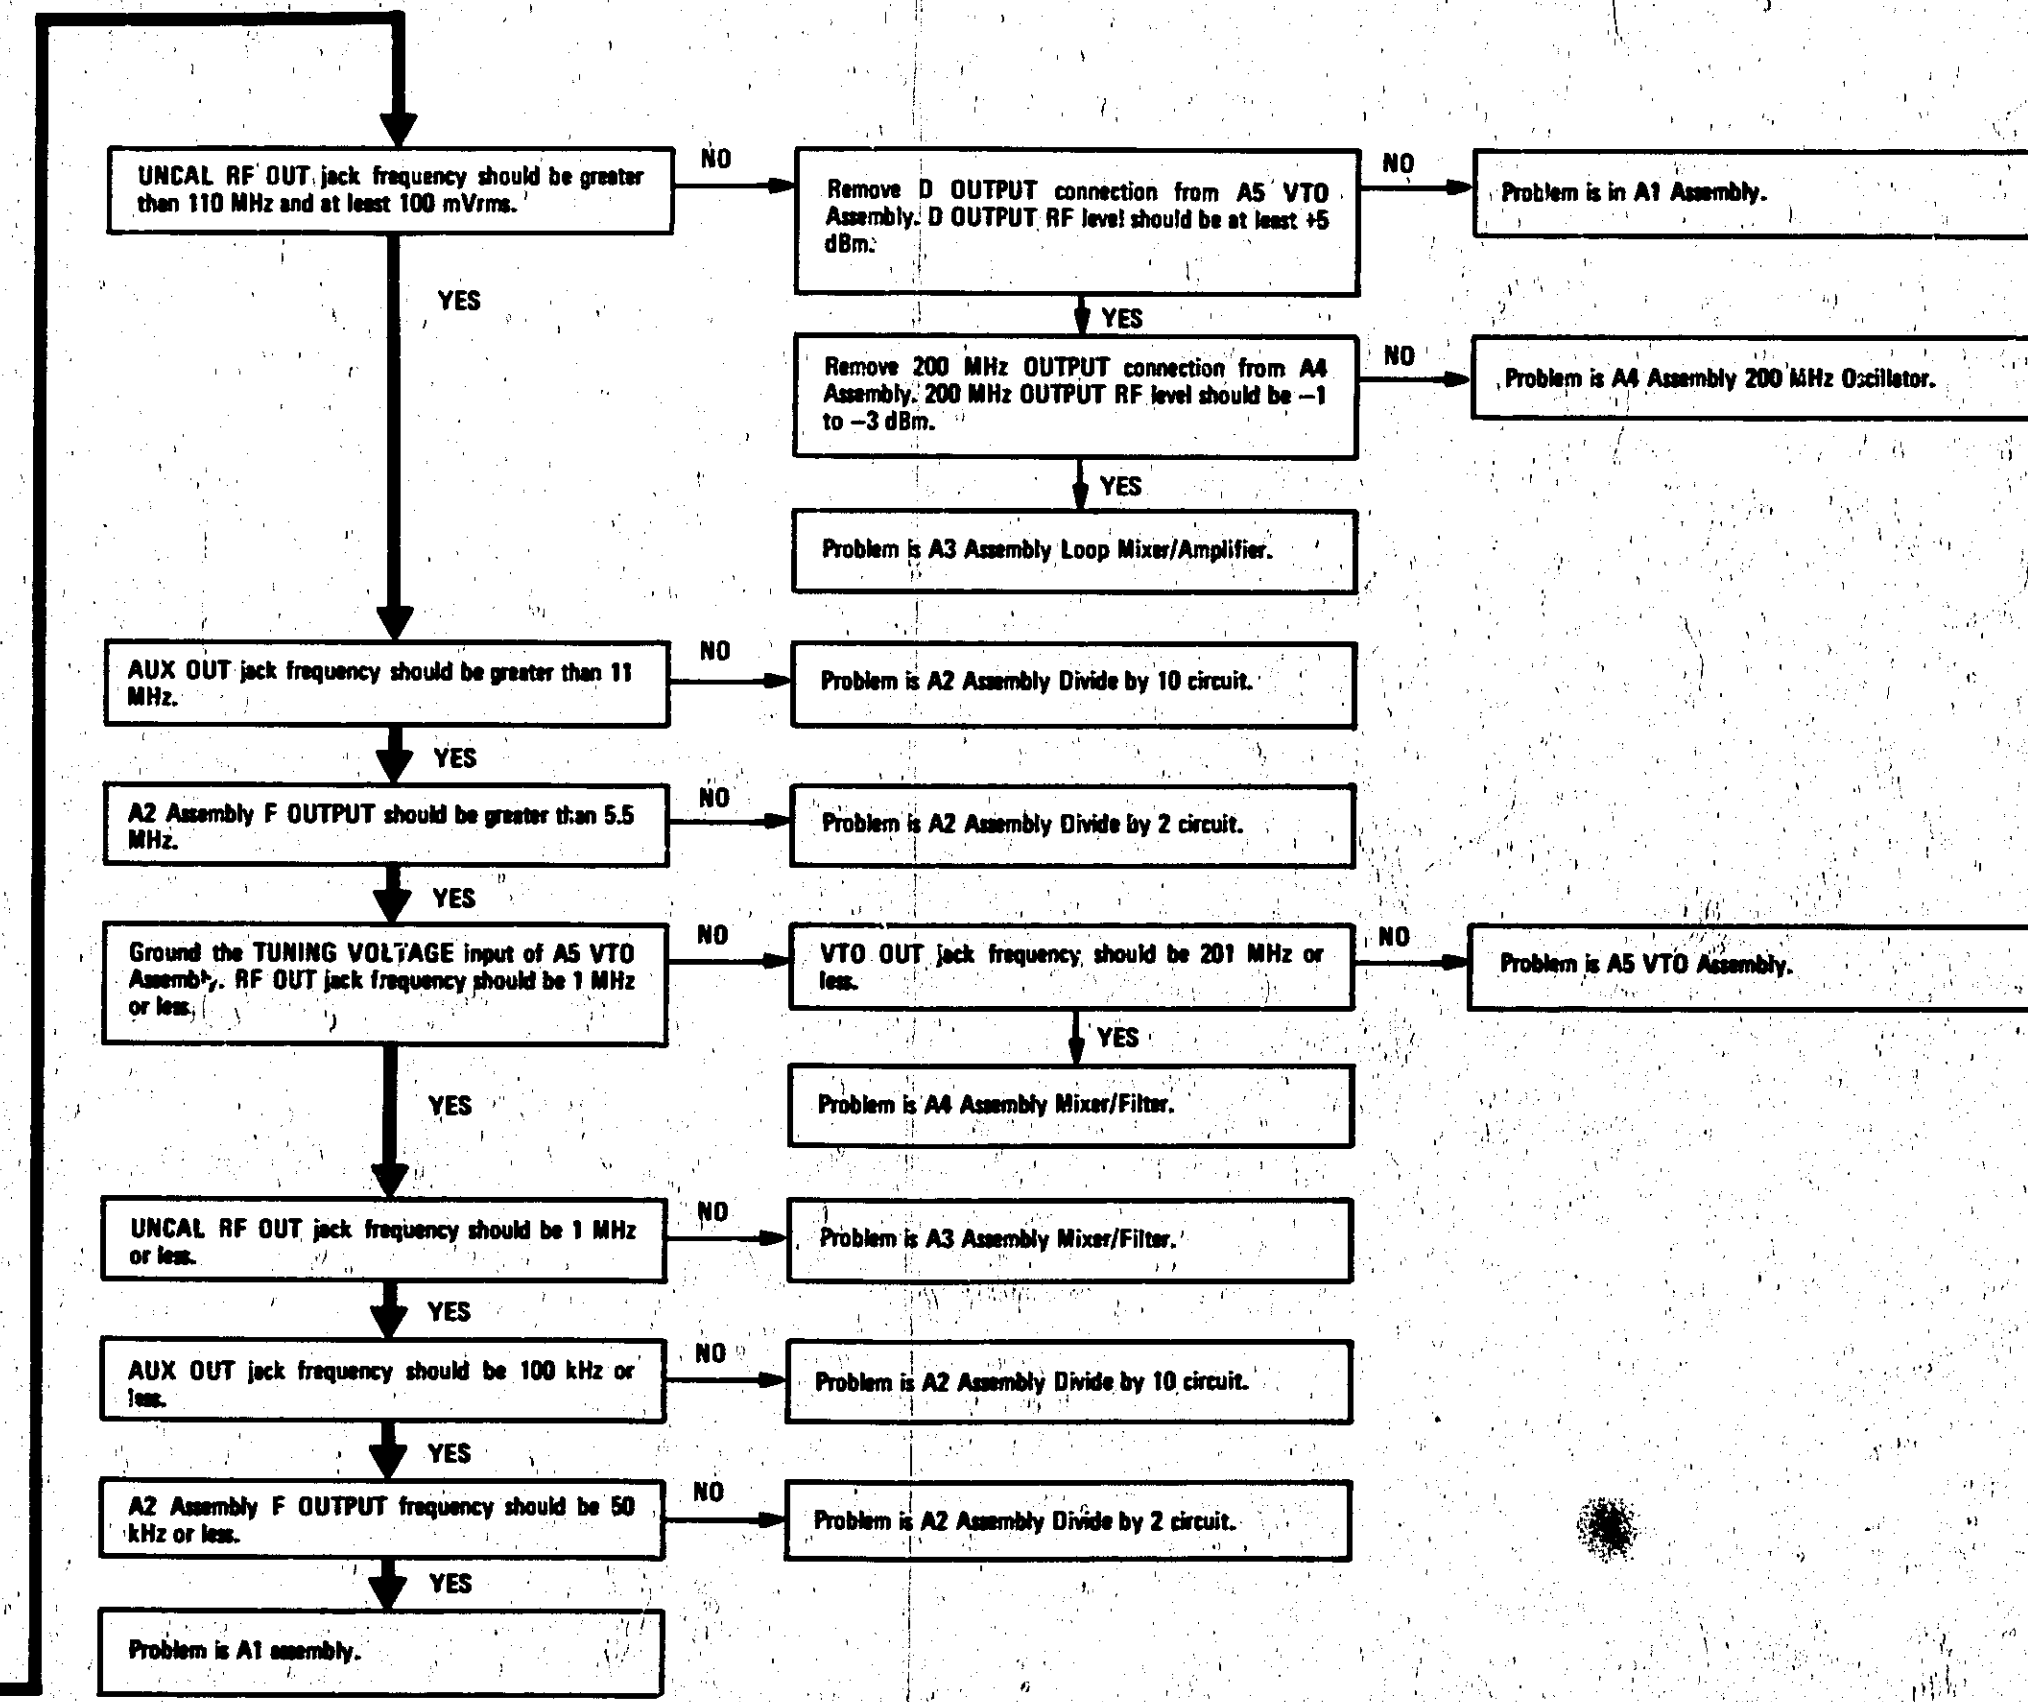
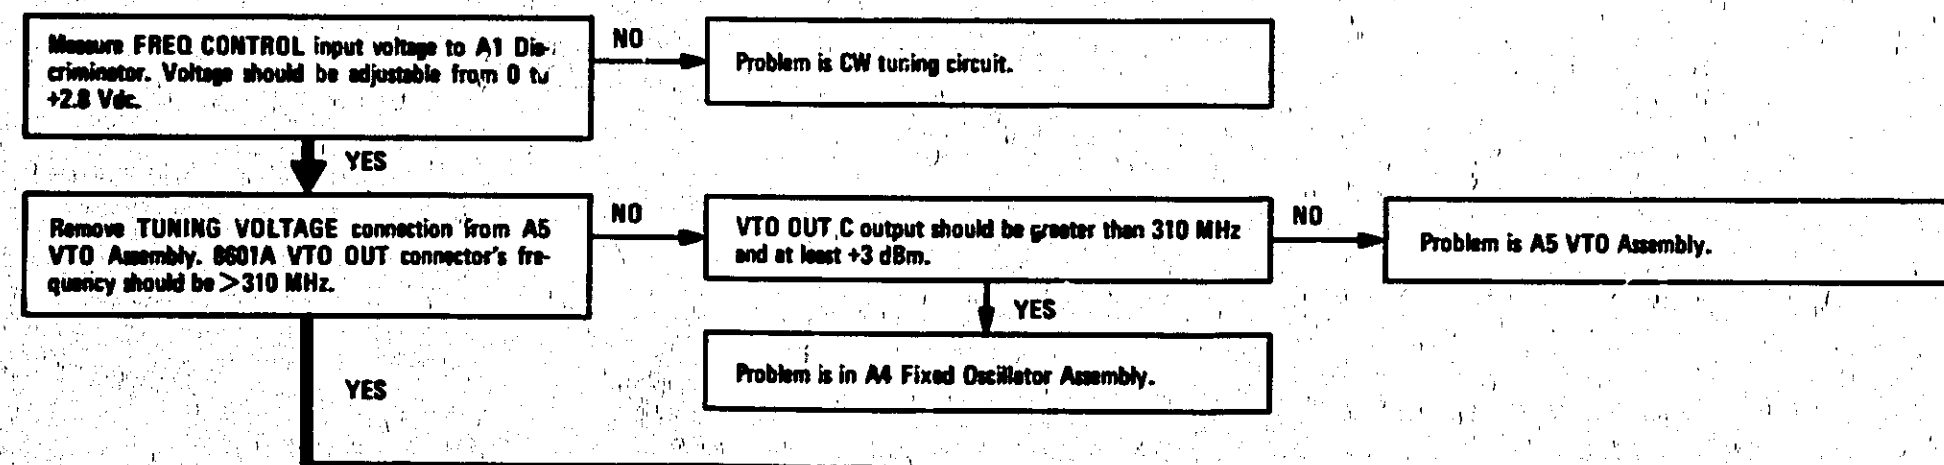


Figure 8-5. Troubleshooting Tree (2 of 2)

SERVICE SHEET 1**Discriminator Operation**

The discriminator circuit is a frequency to voltage converter. The input frequency range is about 50 kHz to 5.5 MHz with a corresponding output voltage range of about 0 to +3 Vdc at test point 1. An input signal is amplified by Q11 and the positive peak of this amplified signal triggers one-shot multivibrator Q9/Q10. The one-shot multivibrator output is a positive pulse (pulse width determined by RF network C4/C5/C6/R7) superimposed upon a square wave signal. This positive pulse signal turns off Q8B causing current to flow in Q8A charging C9. After about 60 nsec, pulse width, the current switch returns to its stable state and charging current is removed from C9. C9 then discharges through R13. Thus, voltage developed by C9 and R13 is proportional to the one-shot multivibrator's output pulse width and repetition rate. The width is constant but the repetition rate is determined by discriminator input frequency.

Discriminator Troubleshooting

A common troubleshooting procedure is to inject a 2.5 MHz, 2.5 to 3 volt peak-peak, signal at the input A1J3 (F INPUT) and measure the DC voltage at Q8A collector. The Q8A collector voltage should be +1.2 to 1.3 volts dc.

DC Amplifier Operation

The output frequency of the 8601A must be tunable over a range of about 110 MHz. The dis-

criminator circuit of the 8601A monitors actual output frequency and provides a proportional DC voltage. The DC amplifier circuit, a differential amplifier, compares this DC voltage to a tuning voltage input signal (A1J2) and provides an error (or difference) signal whenever the two voltages do not agree. This error signal is applied to a voltage tunable oscillator that changes the output frequency as necessary to eliminate the error signal. To ensure that this error signal never tunes the voltage tunable oscillator out of (below) its operating range, a search circuit is provided. Whenever the error signal exceeds +500 mV, the search circuit turns on and creates a large error signal causing the VTO frequency to change drastically. The frequency control loop then retunes itself. In high range (110 MHz range) with single frequency operation (CW or MANUAL) capacitor C12 reduces frequency control loop bandwidth and therefore residual FM.

DC Amplifier Troubleshooting

A common troubleshooting procedure is to replace discriminator input to Q5 with a DC power supply voltage of about +1240 millivolts. By setting 8601A controls to CW, 11 range, and 5.0 MHz frequency, the output at A1J1 should be between +750 and +850 millivolts.

NOTE

Output A1J1 should not be open-circuited, it should be connected to the VTO assembly.

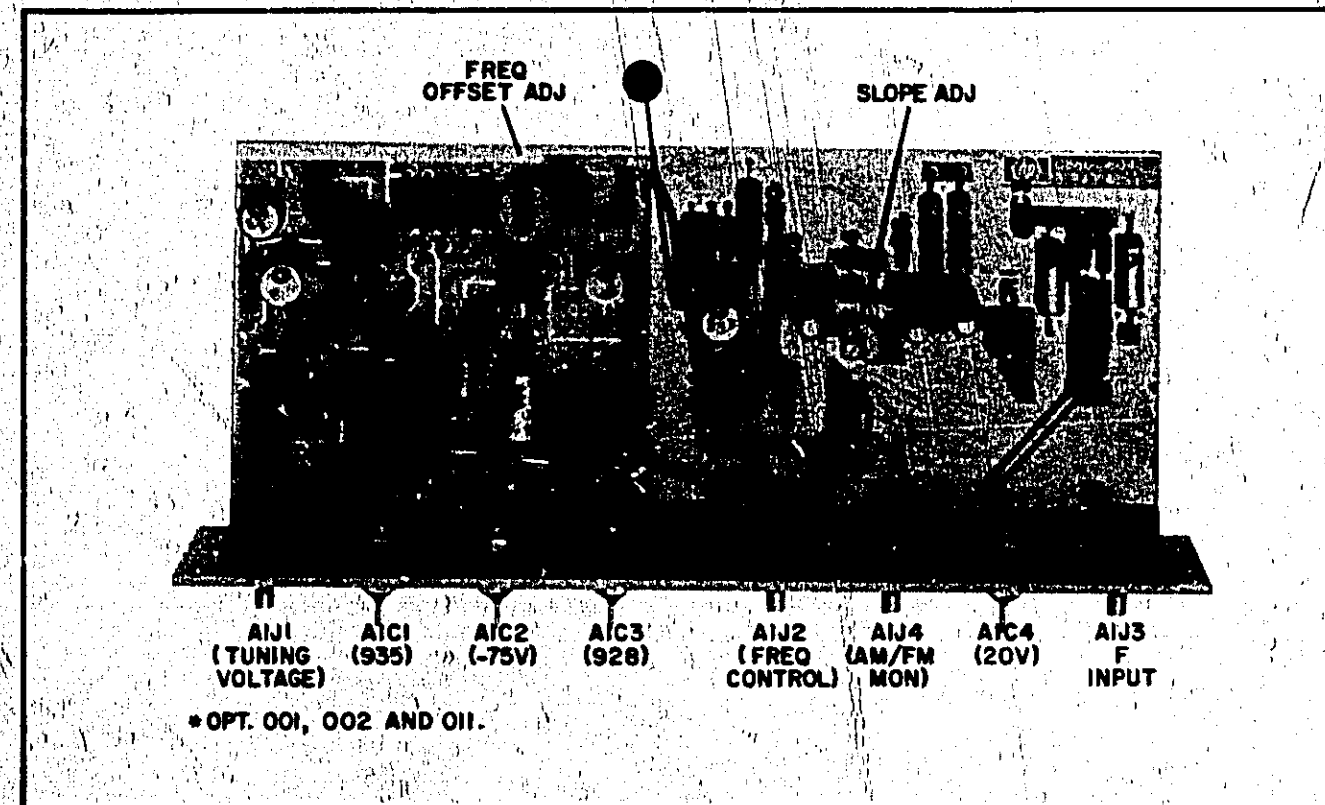


Figure 8-6. A1A1 Discriminator/DC Amplifier, Component Identification

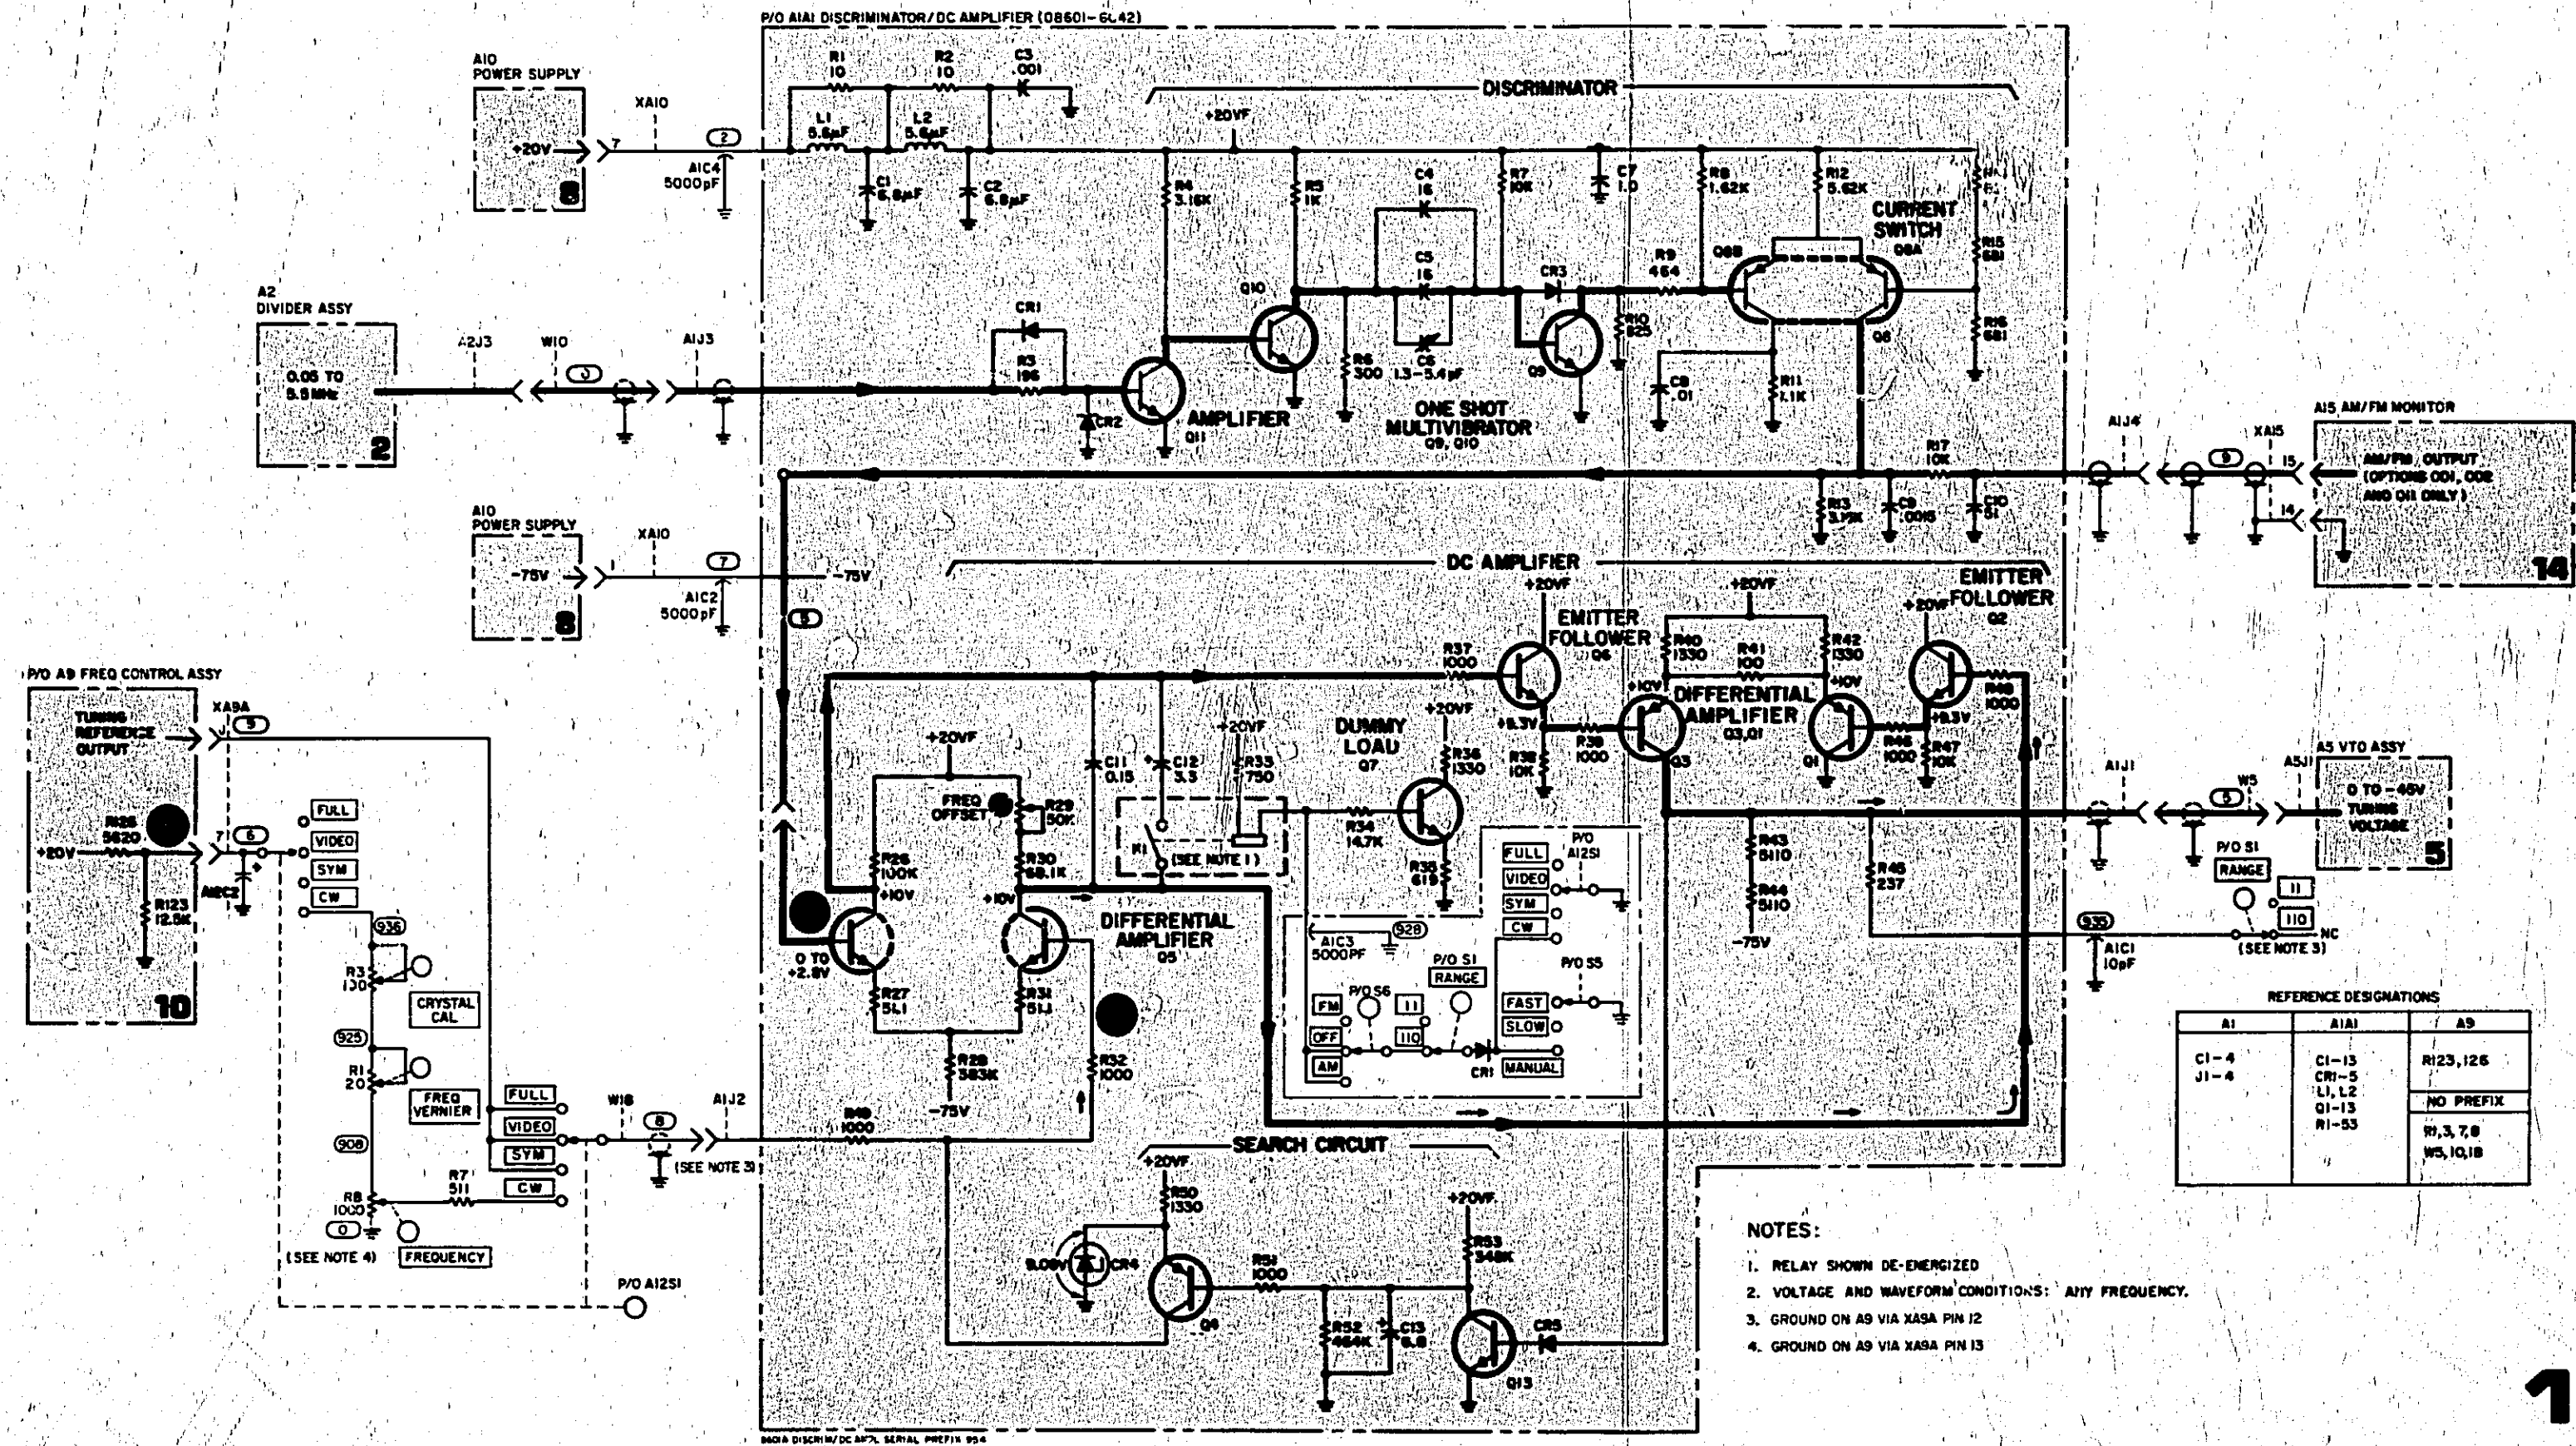


Figure 8-7. A1 Discriminator/DC Amplifier, Schematic Diagram

SERVICE SHEET 2**Operation**

The 10:1 divider consists of a 2:1 divider (IC1) and a 5:1 divider (IC2/IC3/IC4). The 5:1 divider includes three two-to-one dividers connected in a ring counter configuration.

The input circuitry consists of two resistors (R1 and R2) and a coil (L5). The coil is used because the resistors have stray capacity that tends to shunt high frequency inputs (100 MHz or so) and cause the 10:1 divider input signal level to be too low. To eliminate this shunting, the coil (L5) was added.

NOTE

Adding this coil to older instruments can eliminate most high frequency-end divider problems.

Troubleshooting

To troubleshoot divider IC1, set 8601A to 110 RANGE and inject a low frequency signal (1 MHz or greater at a level of about 600 to 800 millivolts peak-peak) at A2J1. The output signal at IC1 (pin 2) should be frequency divided by two.

To troubleshoot dividers IC2, IC3 and IC4, remove IC3 and IC4 from circuit board and set 8601A to 110 RANGE. Inject low frequency signal through IC1 as above through A2J1 connector. The signal frequency at IC2 (pin 1) should be half the signal frequency at IC2 (pin 6). Remove IC2 and place IC3 in the IC2 socket, then repeat procedure. To troubleshoot IC4, repeat procedure.

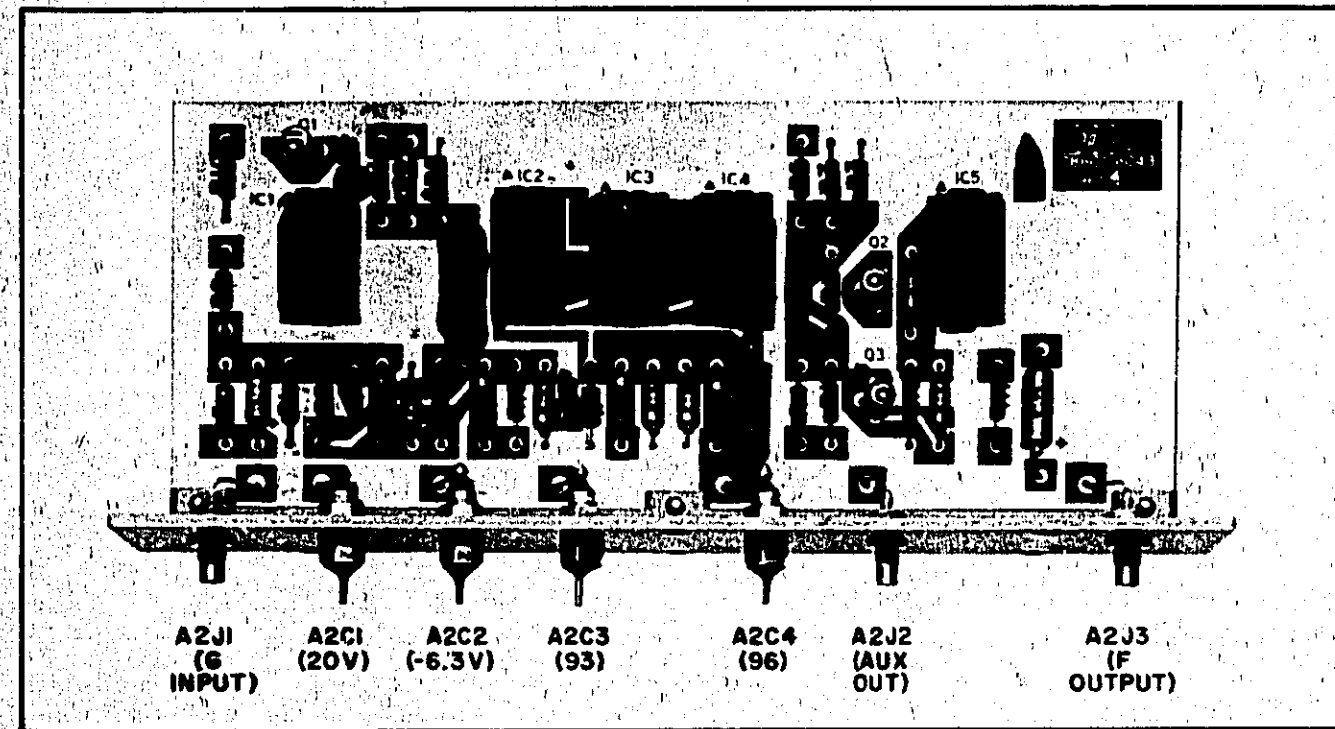


Figure 8-8. A2 Divider/Divider Bypass, Component Identification (Serial Prefixed 954- through 1813)

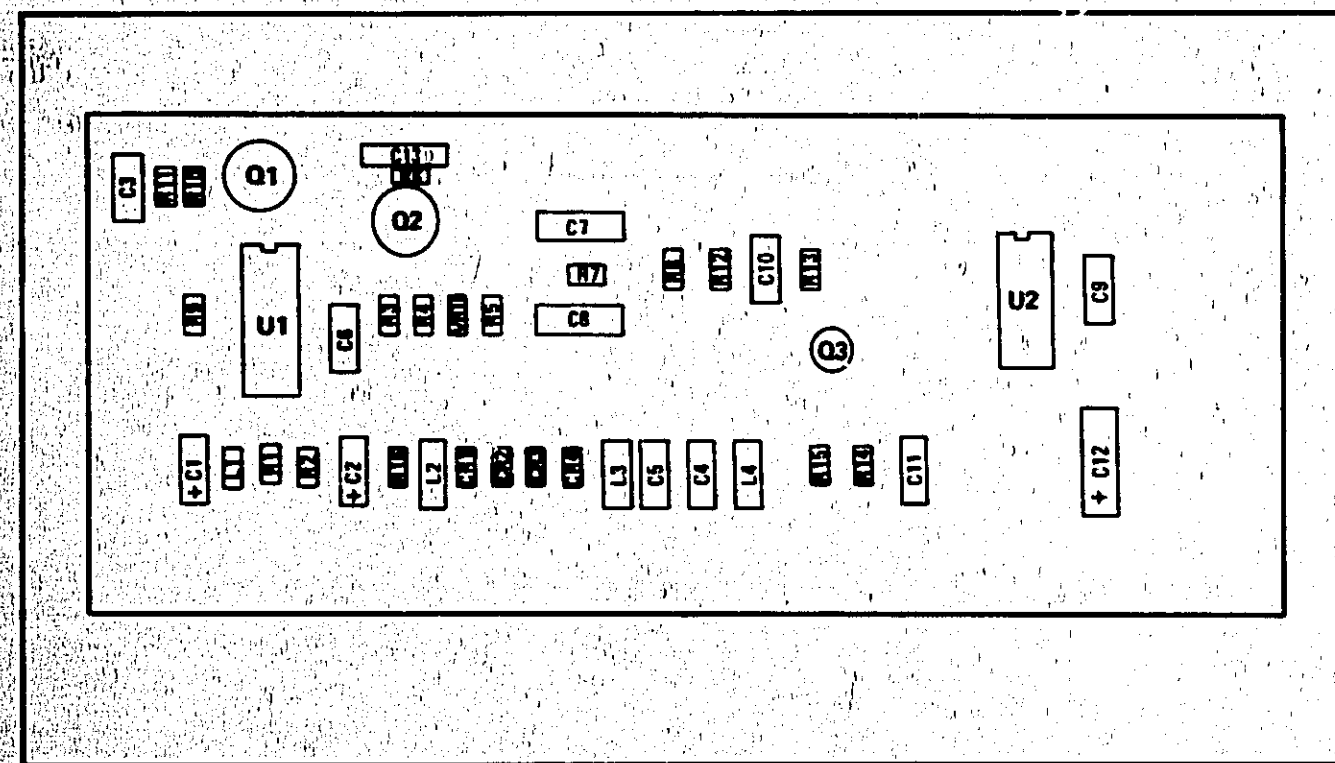


Figure 8-9. A2 Divider/Divider Bypass, Component Identification (Serial Prefixed 1843A and Above)

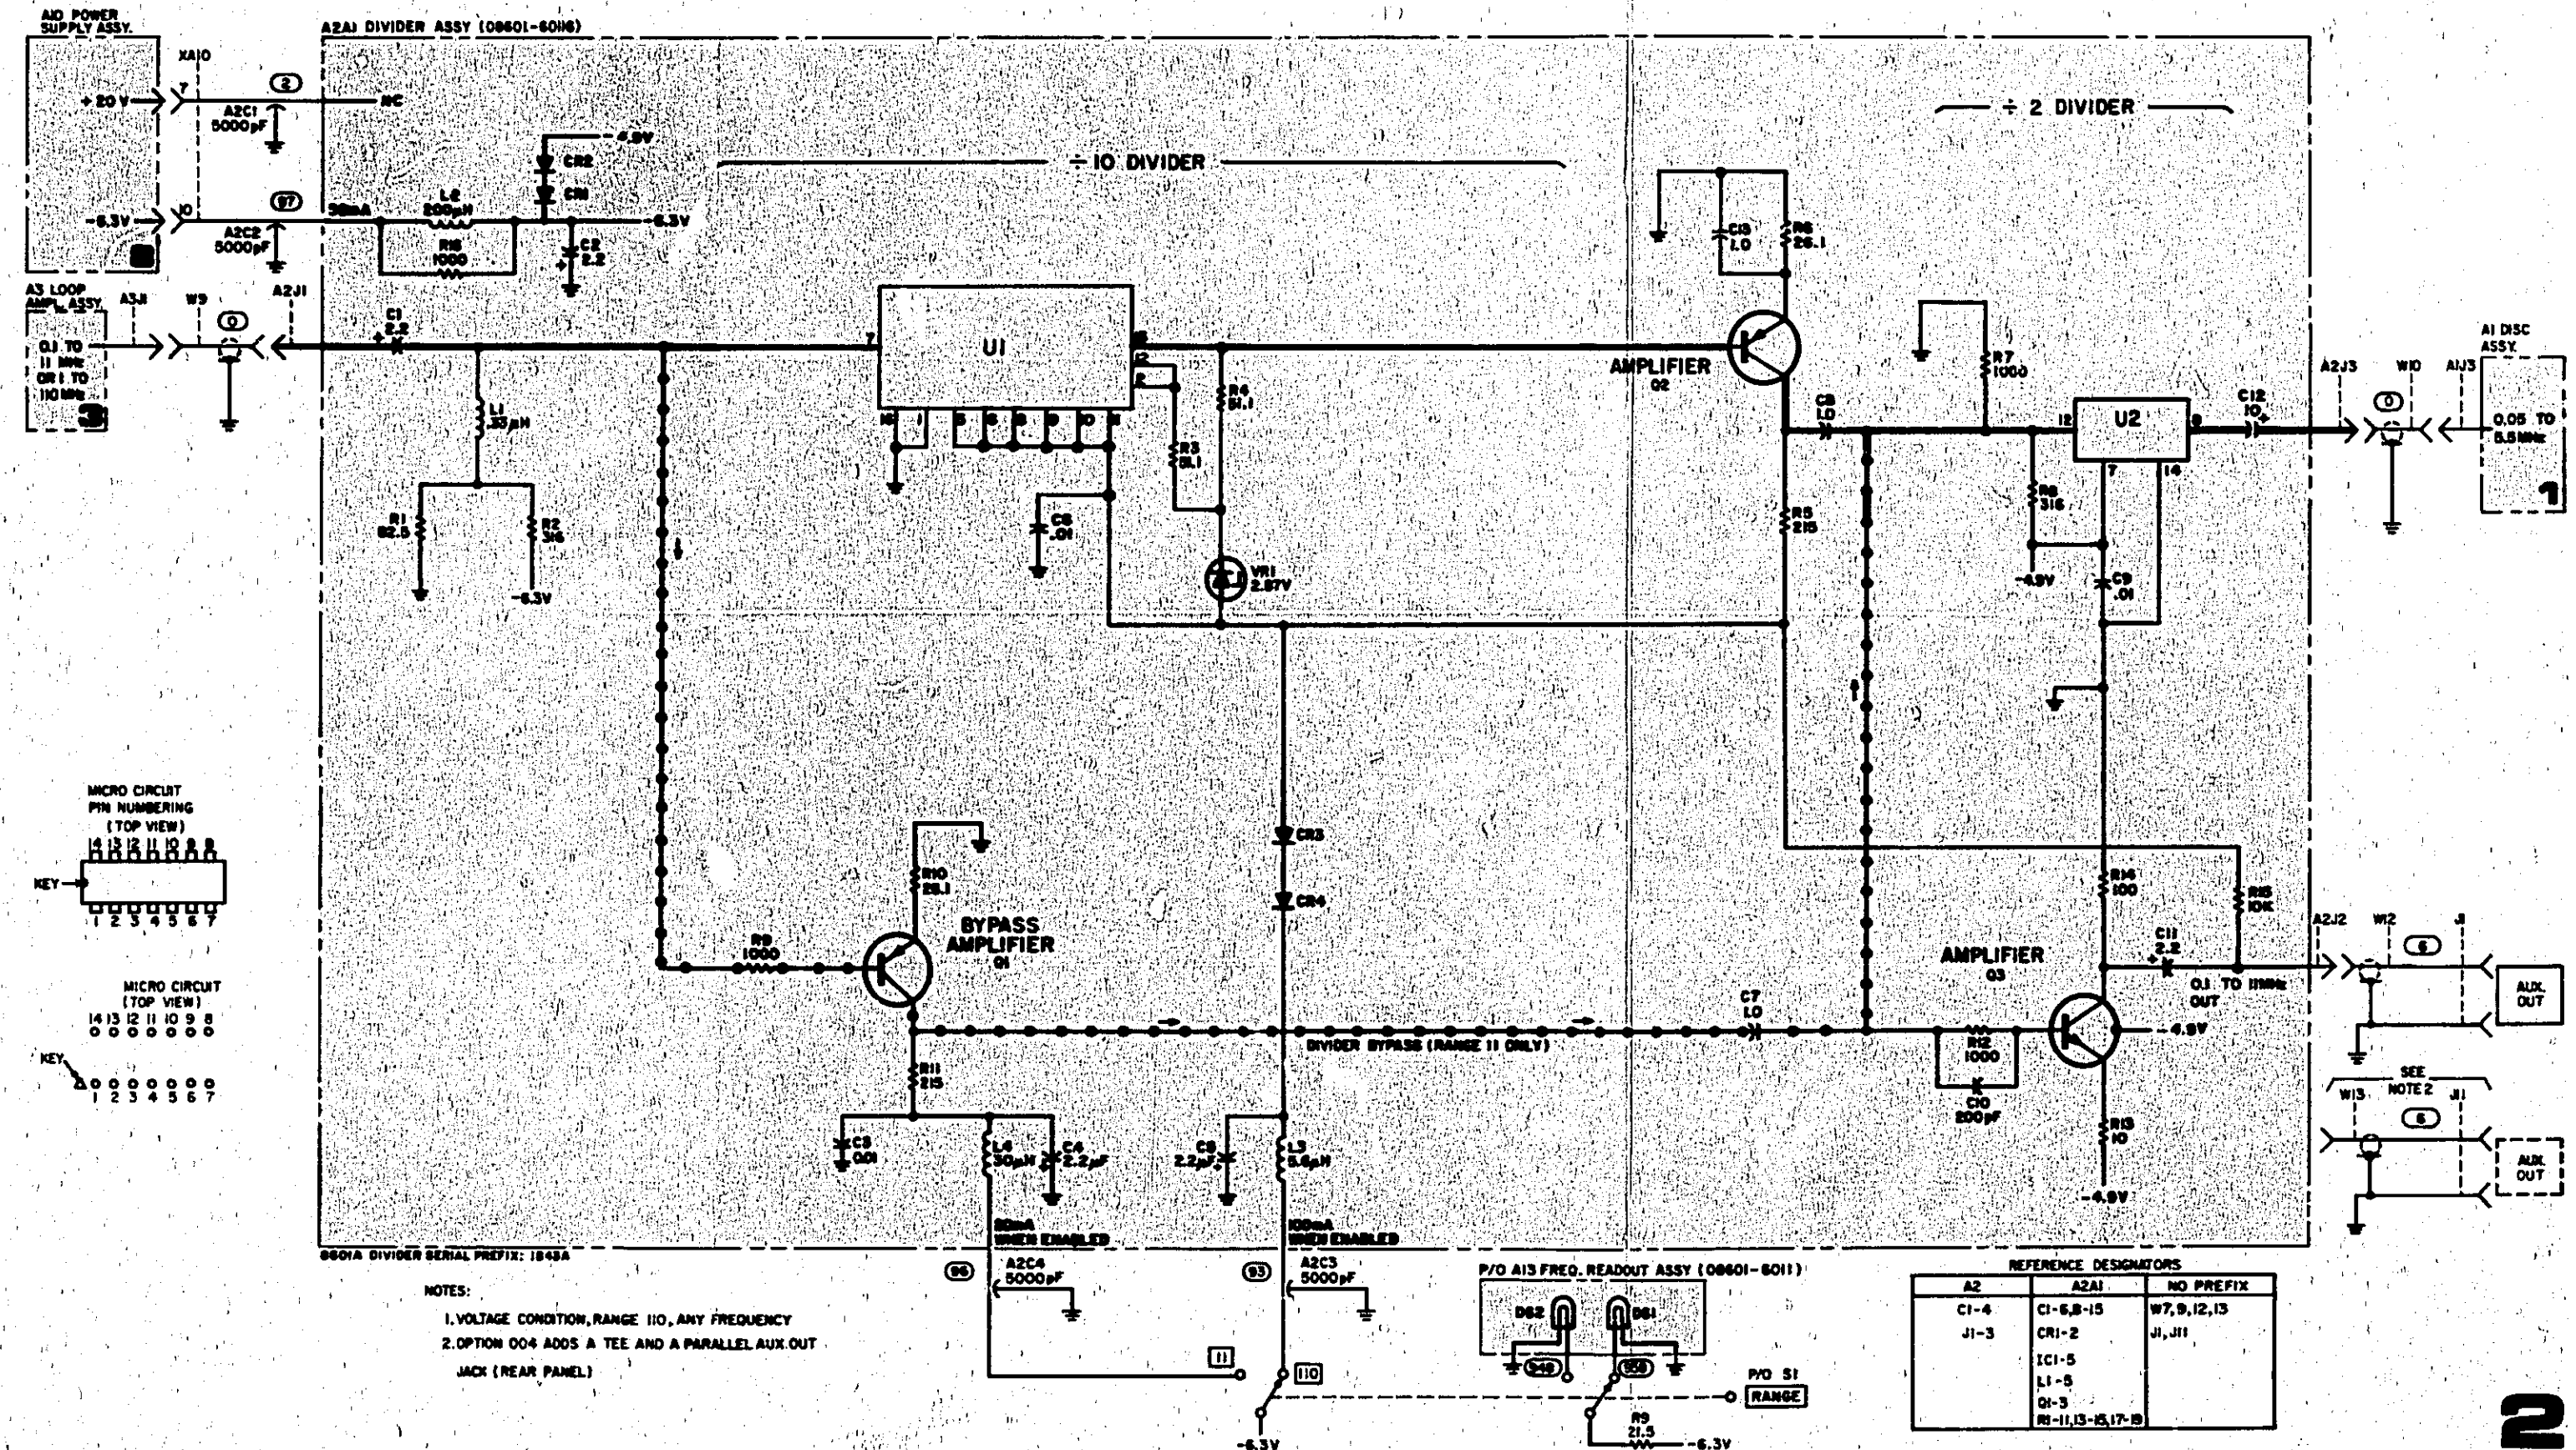


Figure 8-10. A2 Divider/Divider Bypass, Schematic Diagram

SERVICE SHEET 3**Loop Amplifier Operation**

The loop amplifier is a high gain (about 30 dB) wide band (0.1 to 118 MHz) amplifier. The function of importance is that the output (A3J1) should be about 0 dBm across the entire operating frequency range. To increase the gain slightly, if necessary, resistors R2 and R3 may be selected to provide an output of +2 dBm or greater at a frequency of about 118 MHz.

Loop Amplifier Troubleshooting

The loop amplifier and the preamplifier (A6E1) are nearly identical units. Therefore, the loop amplifier can be tested by using the preamplifier unit in its place.

5 MHz Marker Generator/Active Filter Operation

The 5 MHz marker generator circuit consists of a 5 MHz oscillator and a hot carrier diode (CR2). The hot carrier diode generates harmonics of the 5 MHz signal applied to it. These harmonics mix with a sample of the RF signal applied to the diode (CR2). The mixed signal frequencies are applied to amplifier Q3, a field effect transistor with high input impedance, which acts as a buffer

to prevent loading the mixer output. The active filter consists of resistors R20/R21/R22 and capacitors C24/C25. Also, high gain amplifier Q4 which provides feedback to increase filter roll off. The result is an output signal about 16 kHz wide at 5 MHz intervals across the band. Each of these 16 kHz wide signals has a notch signal at the center point corresponding to the 5 MHz point. This output signal is amplified by transistor Q5. The positive portion of the signal is shunted by CR3 while the negative portion is passed by CR4. The negative signal, with a positive going notch at center, is applied to the ALC amplifier causing a dip in output power on each side of the notch signal which corresponds to a multiple of 5 MHz.

NOTE

If the level of rf signal from Q2 (through R15 and C21) is too high, some marker signals may occur at 2.5 MHz intervals. To minimize or eliminate the undesired markers, the rf signal level can be decreased with R15 and C21. Increase C21 capacity for low rf problem, increase this resistance for wide band rf problem.

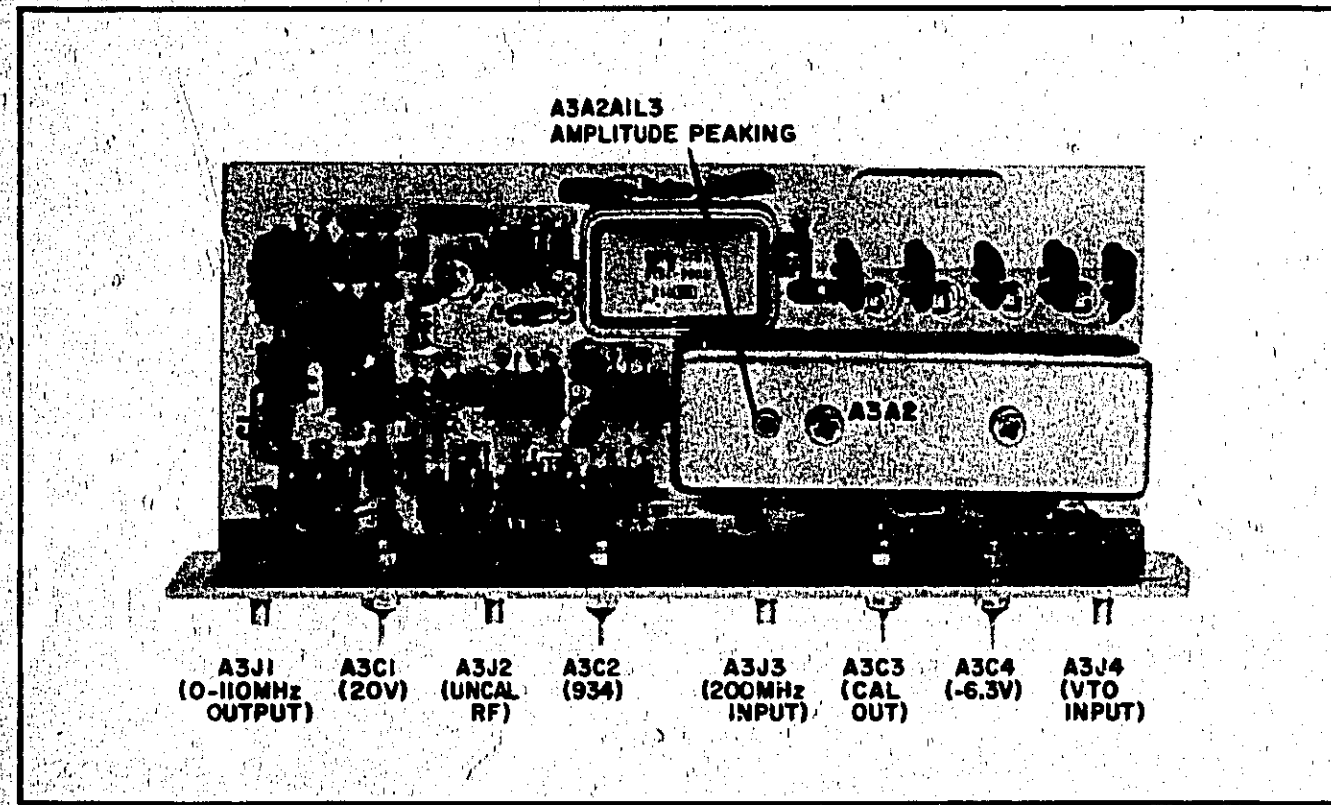


Figure 8-11. A3A1 Loop Amplifier/Crystal Calibrator, Component Identification

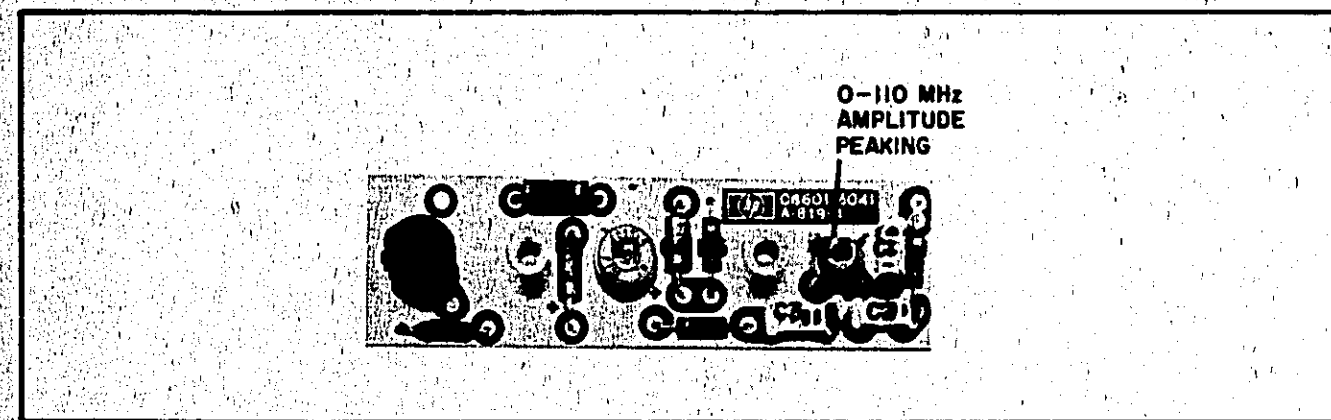


Figure 8-12. A3A2A1 Mixer, Component Identification

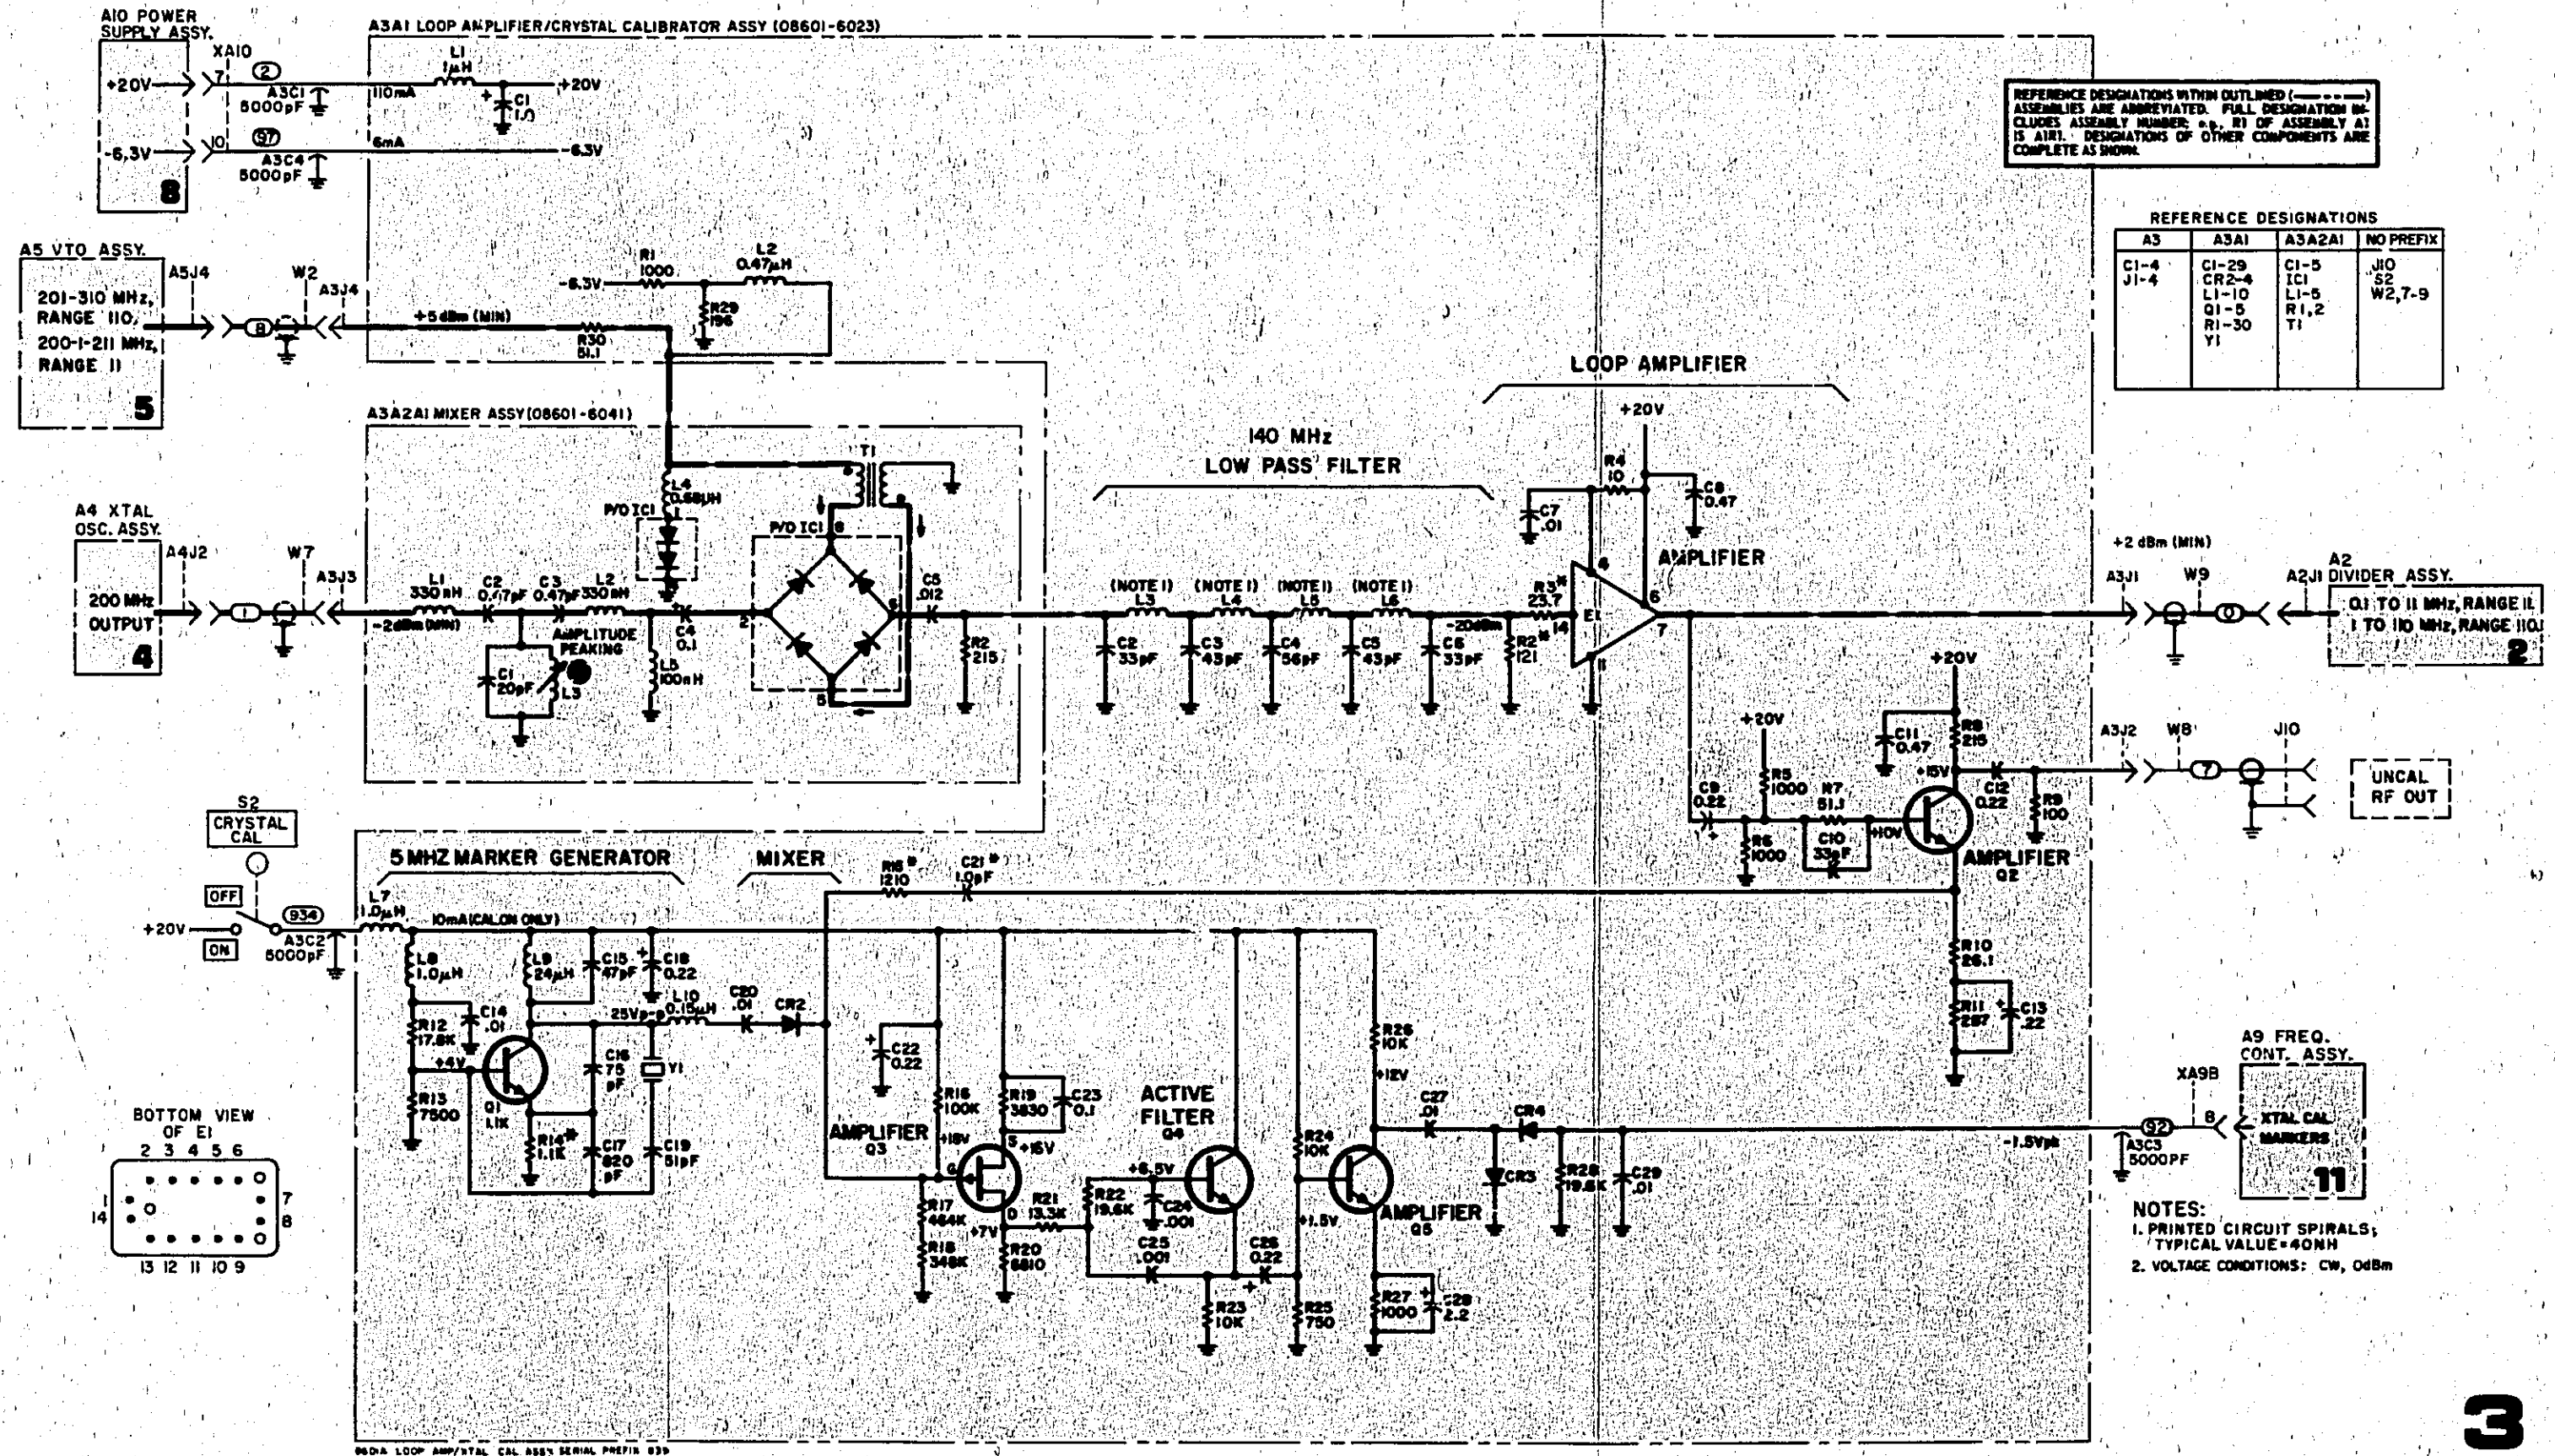


Figure 8-13. A3 Loop Amplifier/Crystal Calibrator, Mixer, Schematic Diagram

SERVICE SHEET 4

Operation

The 200 MHz crystal oscillator is a common base amplifier with positive feedback. The oscillation frequency is determined by resonant circuit C6/C7/L5/Y1. Isolation amplifier Q6 provides a 200 MHz output to the A3 assembly of the frequency control loop. Amplifiers Q1/Q3 provide a signal output to the main output amplifier, A6 assembly, through the mixer board. This main signal output level can be amplitude modulated and/or level controlled by the ALC loop control signal applied to Q5. The control signal, DC voltage with about a -4 to -5 volt range, controls

the gain of amplifiers Q1/Q3 by controlling the current flow through Q5 (a -5 volt signal to Q5 will decrease the gain of amplifiers Q1/Q3 by about 35 dB).

NOTE

A -1.2 volt DC signal to Q5 should cause about a -40 dBm output from the low pass filter assembly; -4.4 volt DC signal should result in about a -50 dBm low pass filter assembly output.

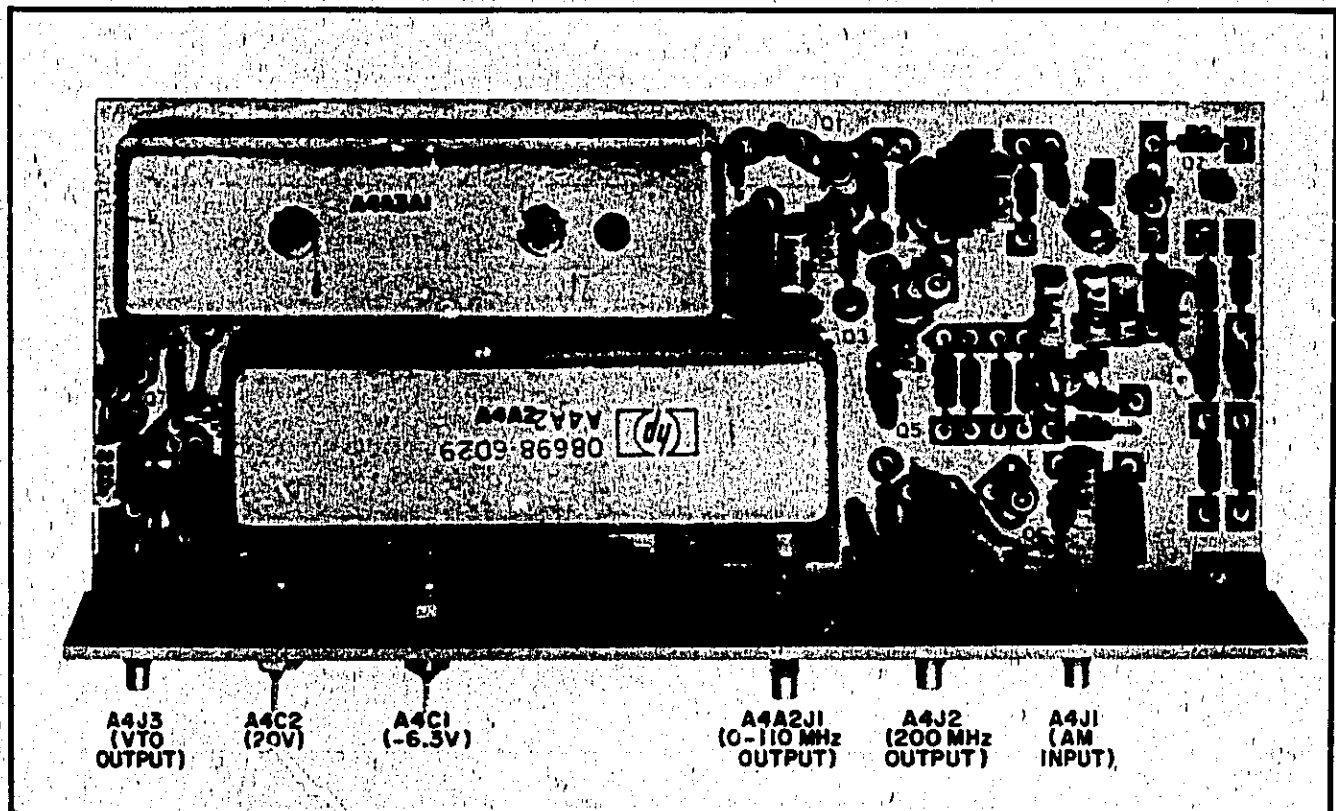


Figure 8-14. A4A1 Crystal Oscillator, Component Identification

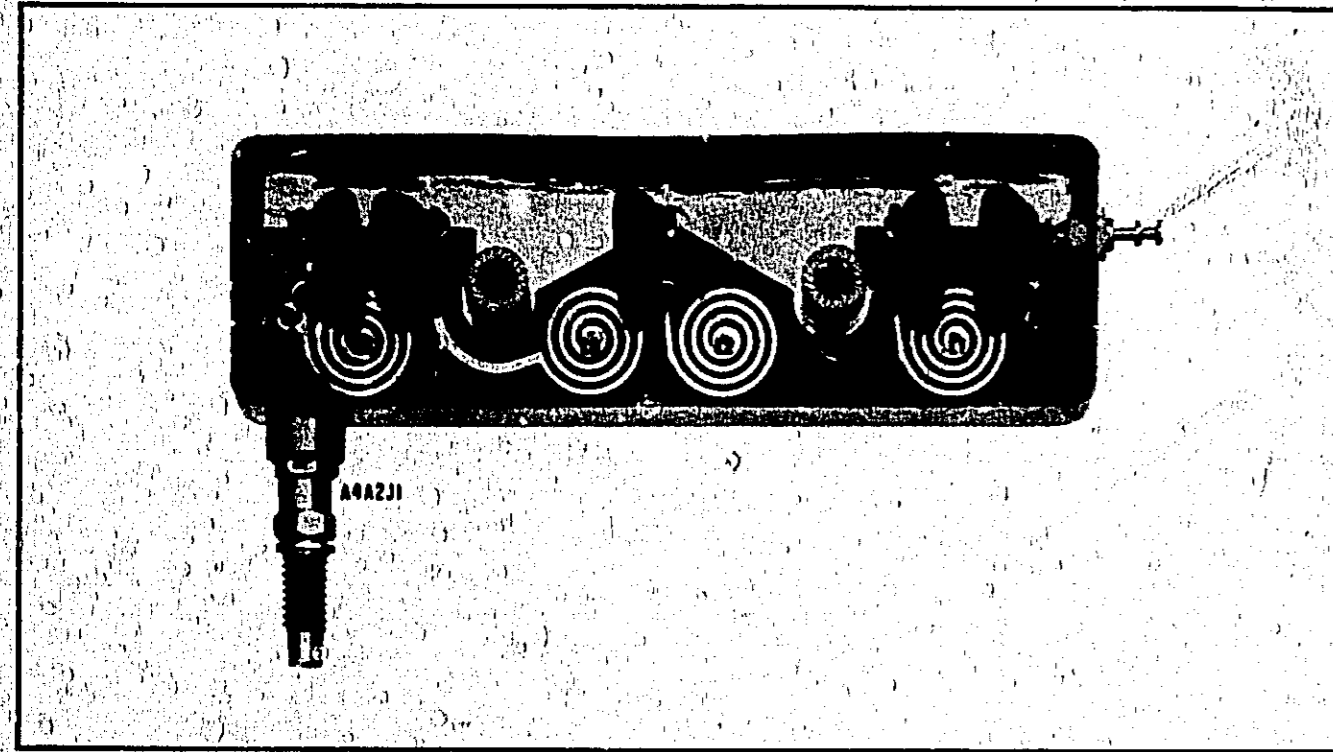


Figure 8-15. A4A2A1 Low Pass Filter, Component Identification

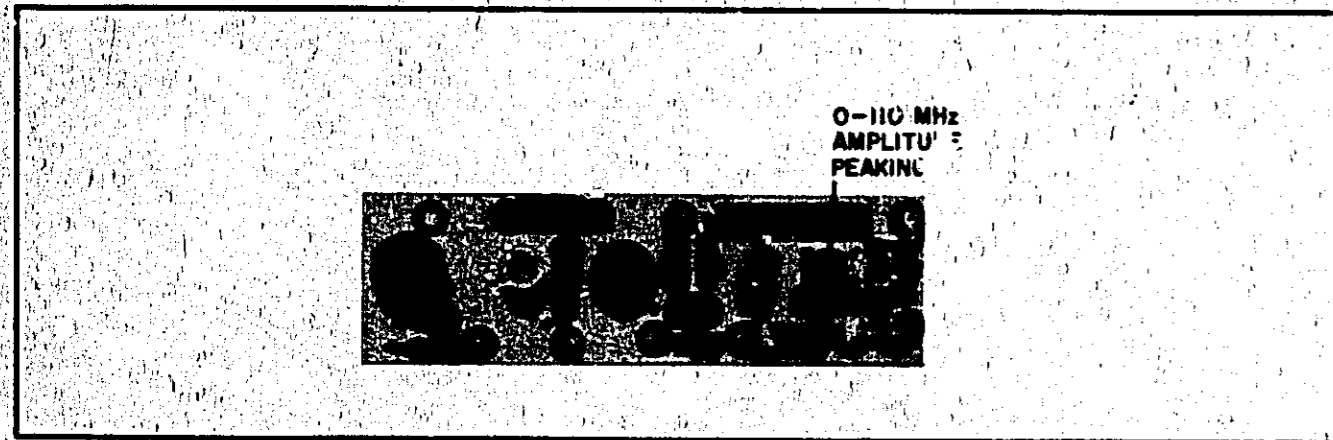


Figure 8-16. A4A3A1 Mixer, Component Identification

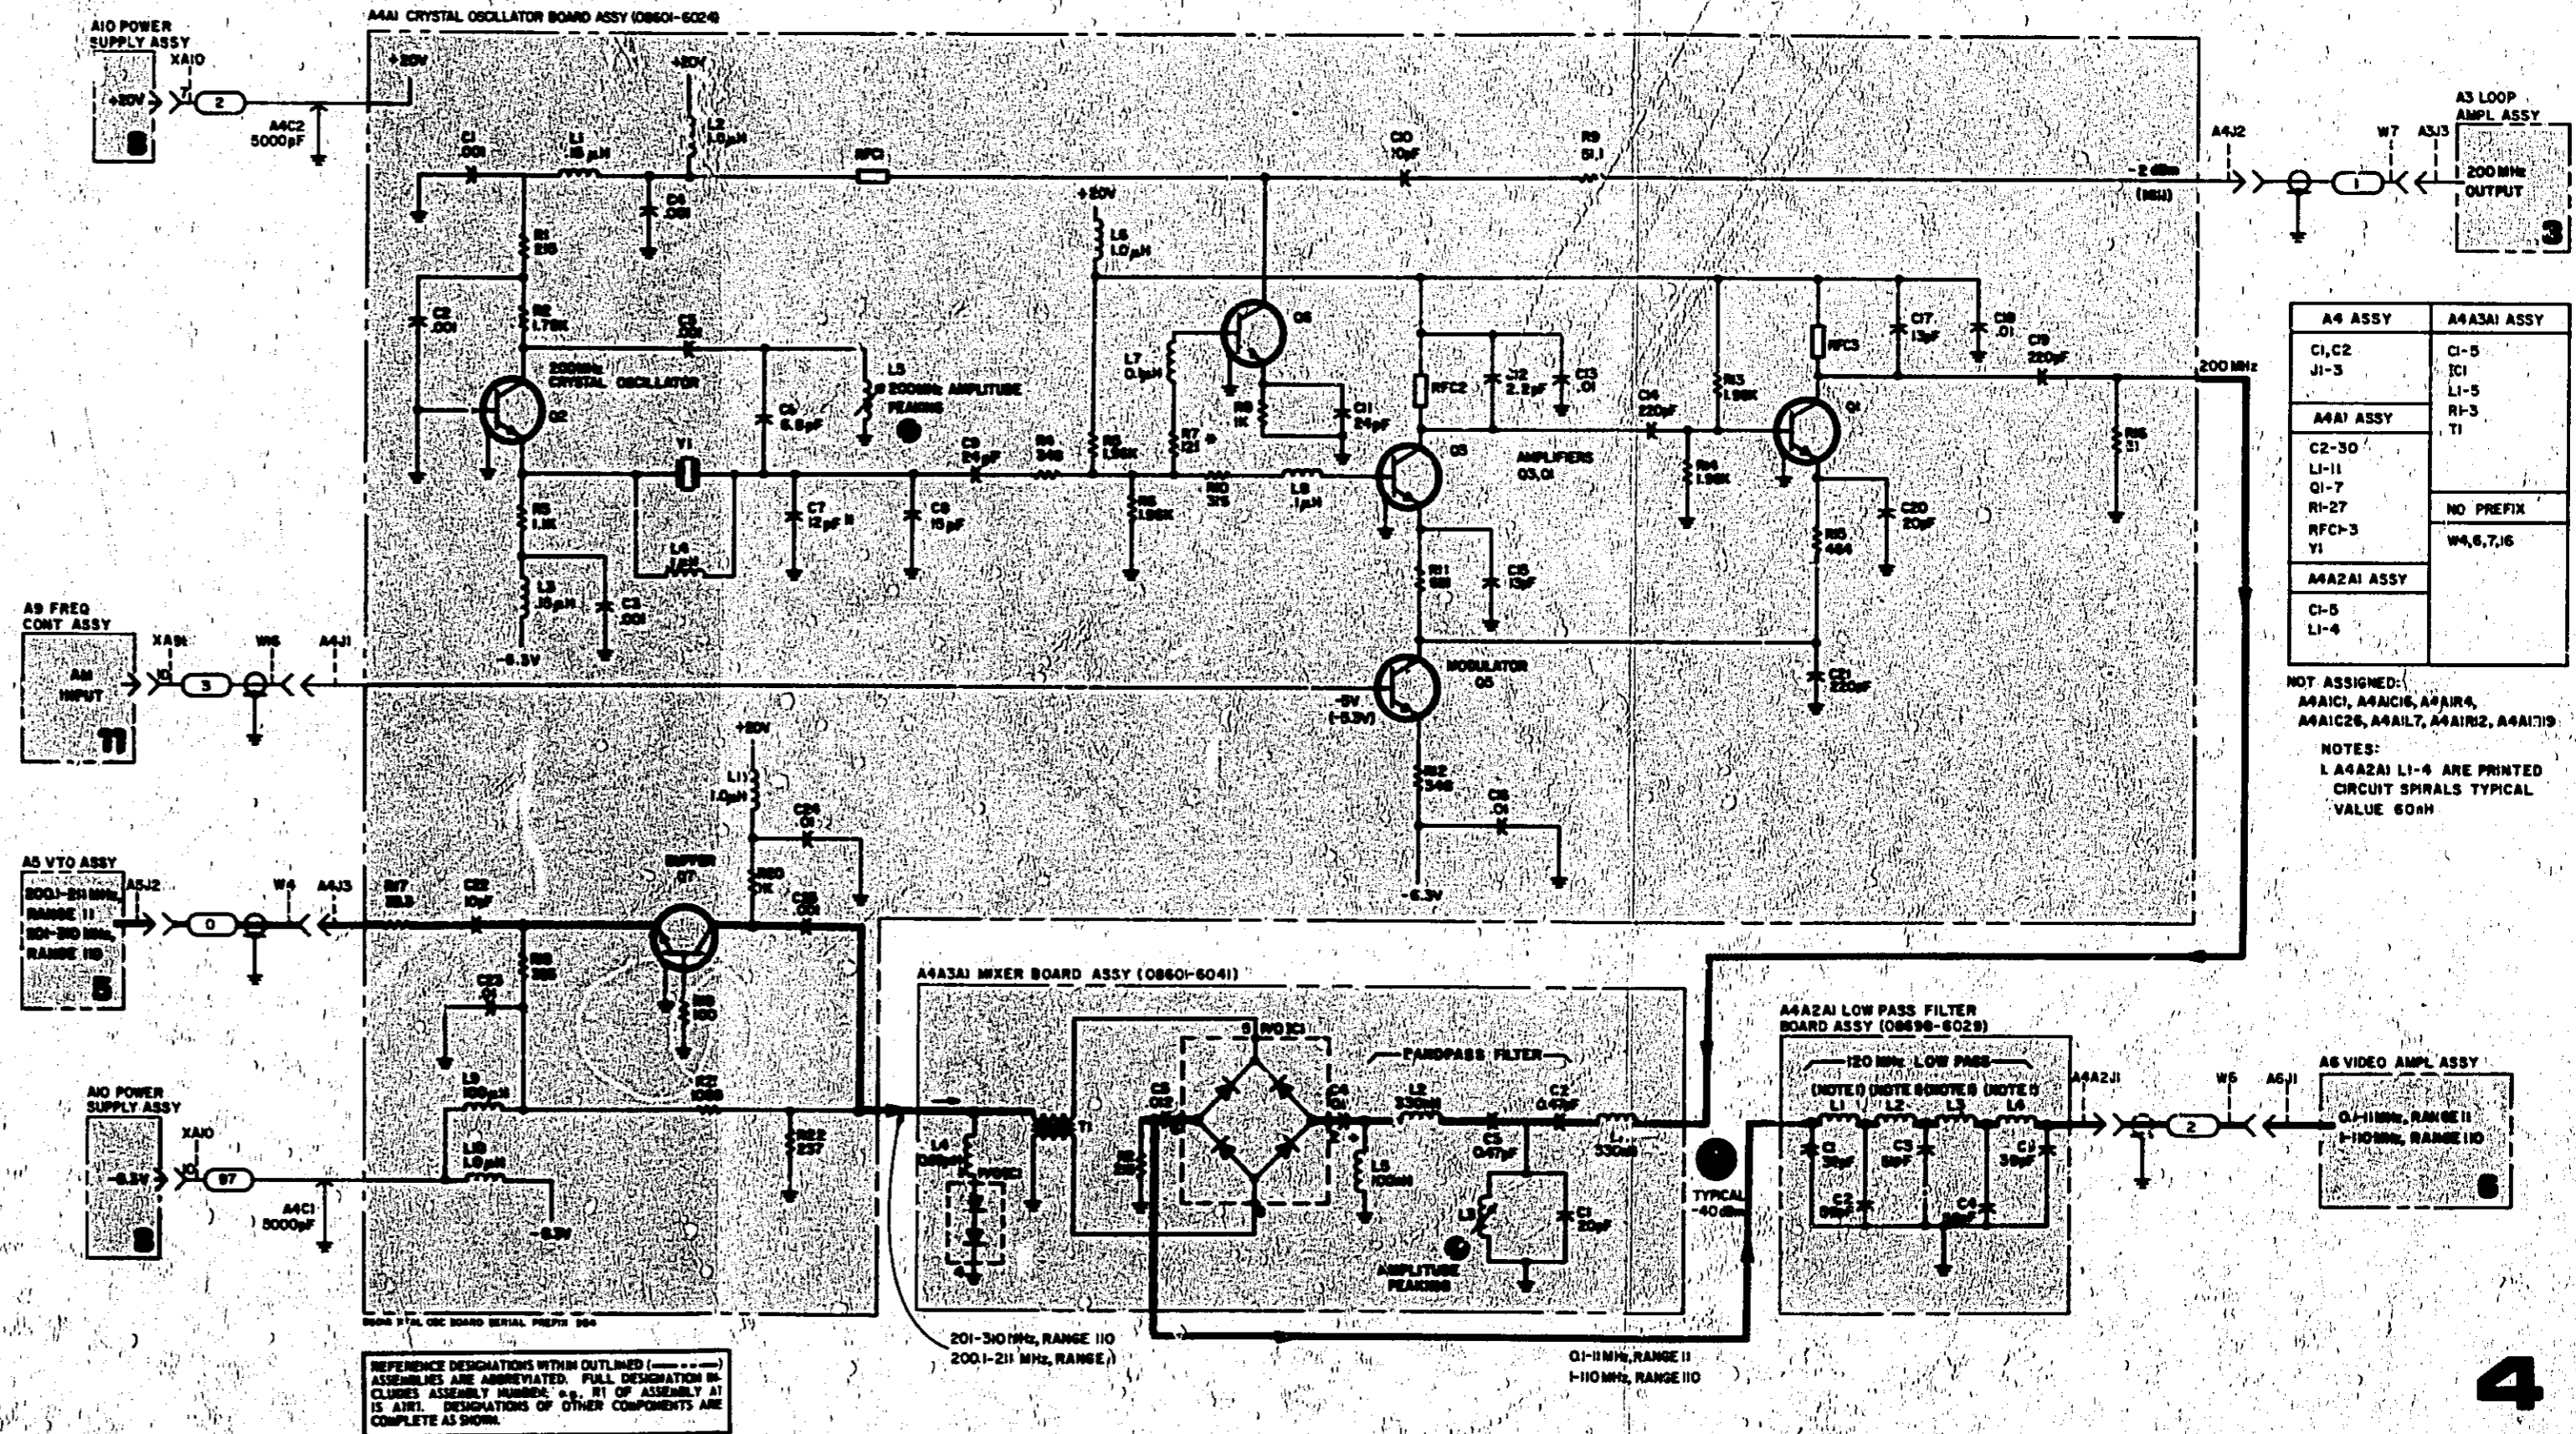


Figure 8-17. A4 Crystal Oscillator/Mixer, Low Pass Filter, Schematic Diagram

SERVICE SHEET 5**Shaping Network Operation**

R1 — R8, CR1 — CR3 and Q9 form a shaping network that improves tuning linearity of the VTO.

Dummy Load Operation

Dummy load Q8 improves the +20V power supply regulation by ensuring that the same current is drawn when K1 is on or off. When K1 is on, Q8 is cut off by a ground on its base. When K1 is off, Q8 turns on and draws approximately the same current.

Voltage Tuned Oscillator Operation

L2 and L3 form the frequency determining network for the VTO. The network exhibits a 180 degree phase shift at the resonant frequency; Q7 and Q6 each provide 270 degrees of phase shift, thus providing the feedback to sustain oscillation. The tuning voltage input varies the capacitance of varactor CR5 and tunes the VTO from 200.1 to 211 MHz (RANGE 11) or from 201 to 310 MHz (RANGE 110).

Z-Match Circuit Operation

C7 and the emitter base junction of Q5 form a resonant circuit that develops the VTO output. The large amount of circulating current produces a strong output signal to amplifier Q4.

VTO Amplifier Operation

Amplifier Q3 and Q4 amplifies the VTO output. Q3 also provides a high output impedance for

VTO output "C" (A5J2). Q1 and Q2 isolate the "C" and "D" VTO outputs. R34 and R35 attenuate the output of Q3 by approximately 6 dB. Q1 also provides a high output impedance for VTO OUTPUT "D" (A5J4).

Troubleshooting A5 VTO Assembly

1. A5 VTO assembly should be installed properly in 8601A.
2. Disconnect cable W5 from A5J1 (TUNING VOLTAGE INPUT) and cable W4 from A5J2 (VTO OUTPUT C). Frequency at A5J2 should be >310 MHz. If not, trouble is in shaping network or voltage tuned oscillator circuitry.
3. Connect subminiature 50 ohm termination to A5J1. Frequency at A5J2 should be <201 MHz. If not, trouble is in shaping network or voltage tuned oscillator circuitry.
4. Power output at A5J2 should be >+3 dBm. If not, trouble is in amplifier A5Q3/A5Q4.
5. Reconnect cable W4 to A5J2. Disconnect cable W2 from A5J4 (VTO OUTPUT D). Connect subminiature (SMC) tee (HP Part No. 1250-0838) to A5J4 and reconnect cable W2. Power output at A5J4 should be >+5 dBm. If not, trouble is in amplifier A5Q1/A5Q2 circuit.
6. Power output at 8601A rear panel VTO jack should be between -5 dBm and -15 dBm. Power variation should be less than 4 dB. If not, trouble is in A5R33/A5C15.
7. A5 VTO assembly checks out okay.

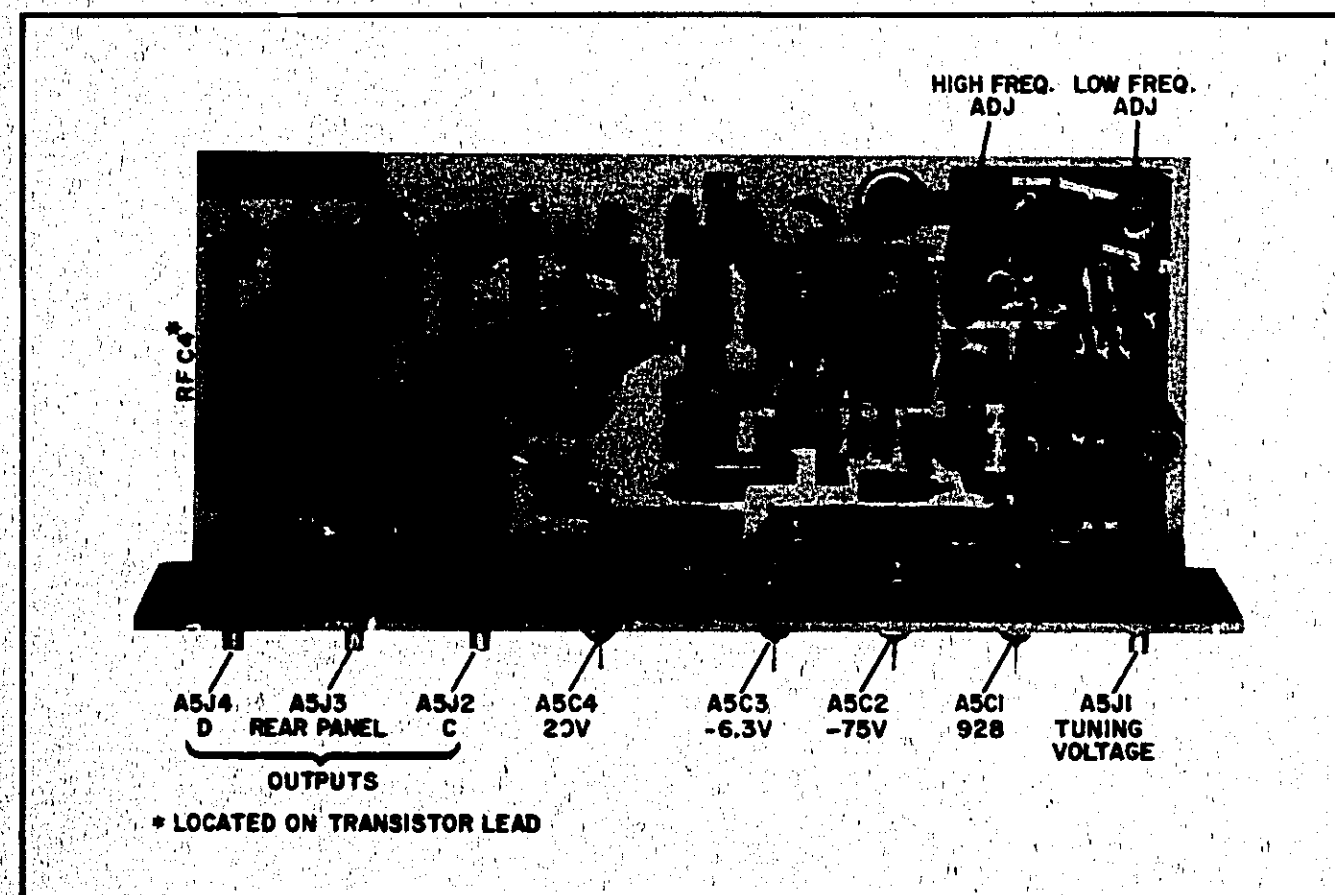


Figure 8-18. A5 VTO, Component Identification

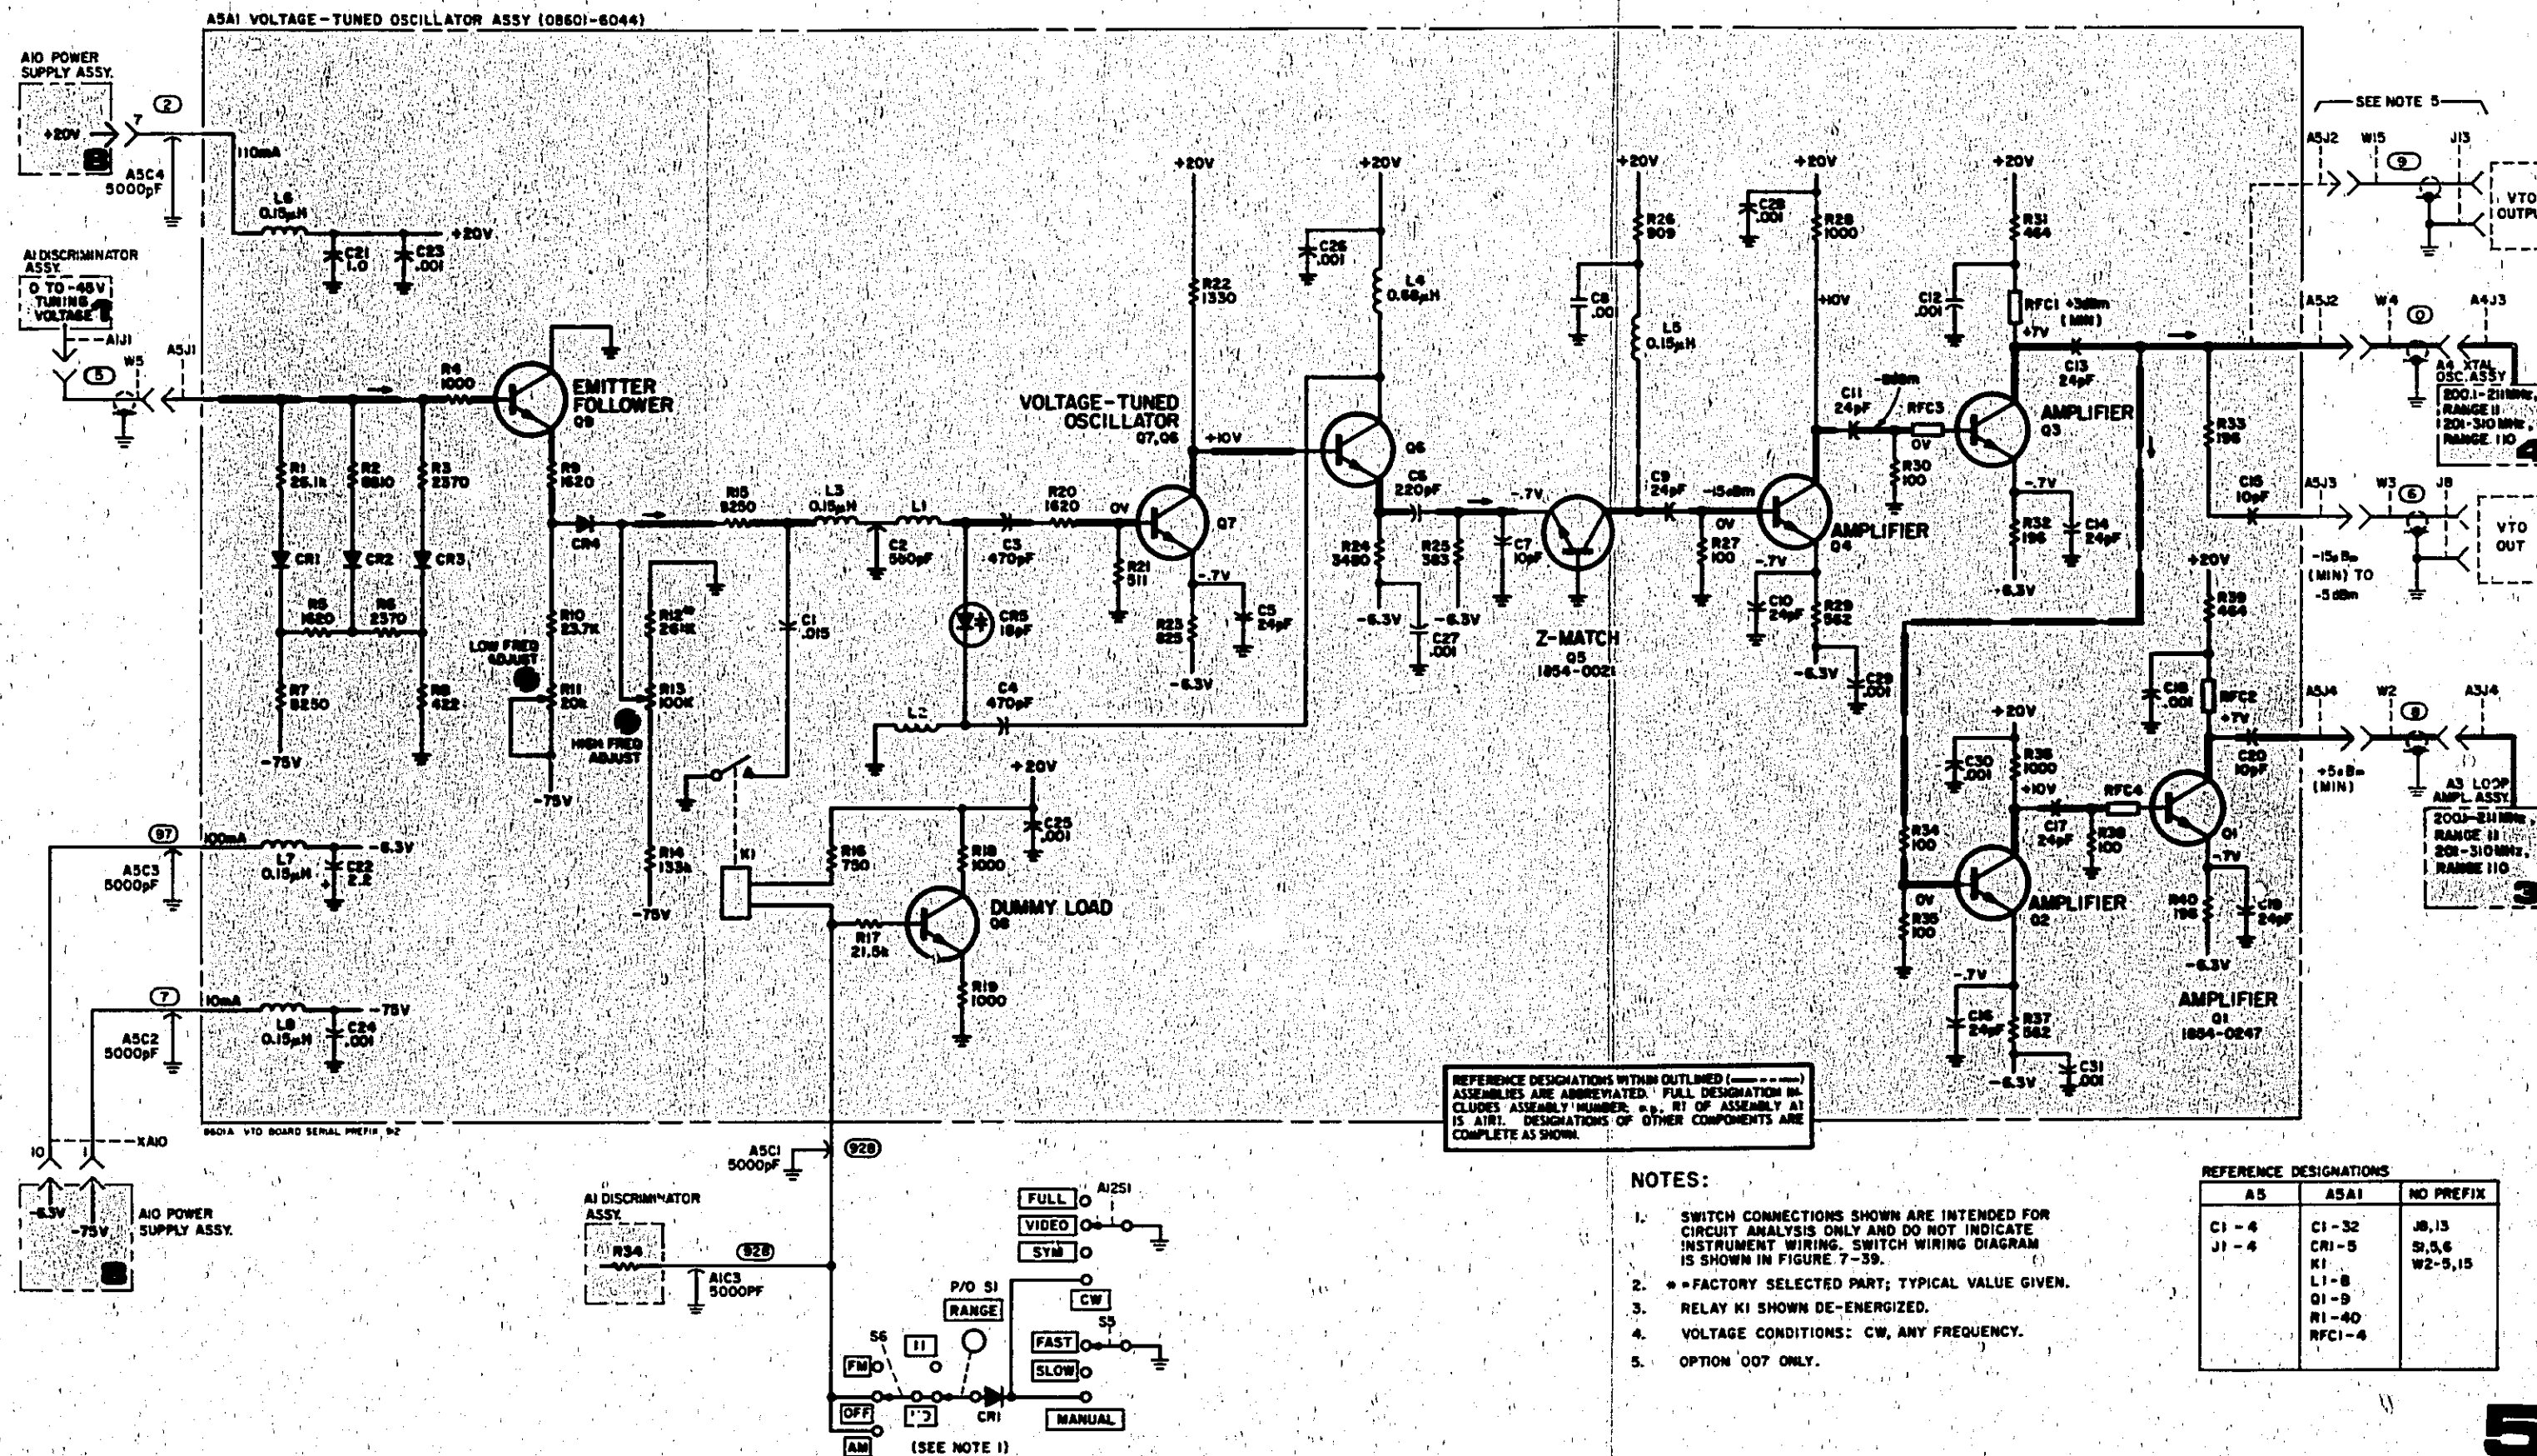


Figure 8-19. A5 VTO, Schematic Diagram 8-17

SERVICE SHEET 6**Operation**

The video amplifier assembly is a broad band (0.1 to 120 MHz) amplifier with a gain of approximately 52 dB. The maximum RF output level is about +21 dBm into 50 ohms. For output levels of greater than about +13 dBm the biasing of the output amplifier (E2) must be increased to minimize distortion components. However, noticeable distortion will almost always be present at some RF output frequencies with output levels above about +16 dBm. In addition to providing required power amplification, the video amplifier assembly is part of the ALC loop which monitors output power for leveling purposes. The ALC loop monitor is a detector which is included in the output amplifier, E2.

Troubleshooting

Turn on 8601A and set OUTPUT LEVEL control to +20 dBm position. Check that +20 and -6.3V power supply voltages are being supplied to the A6 video amplifier assembly (the -6.3 volts is only supplied to the video amplifier assembly when the OUTPUT LEVEL control is set to +20 dBm).

Connect RF source to video amplifier RF IN connector (set for any frequency between 0.1 and 100 MHz) and remove top cover from video amplifier assembly.

1. Set 8601A OUTPUT LEVEL control to +10 dBm position. Set RF source level to -40 dBm. At 8601A RF output, level should be at least +10 dBm. Detector output should be about -1.7 volts DC at A6J2.
2. Set 8601A OUTPUT LEVEL control to +20 dBm position. Set RF source level to -30 dBm. At 8601A RF OUTPUT, level should be at least +20 dBm. Detector output should be about -3.3 volts DC.

NOTE

If output is incorrect, substitute the loop amplifier for the preamplifier, A6A1E1, and repeat the test. If output is ok, A6A1E1 is probably bad. If output is not ok A6A1E2 is probably bad.

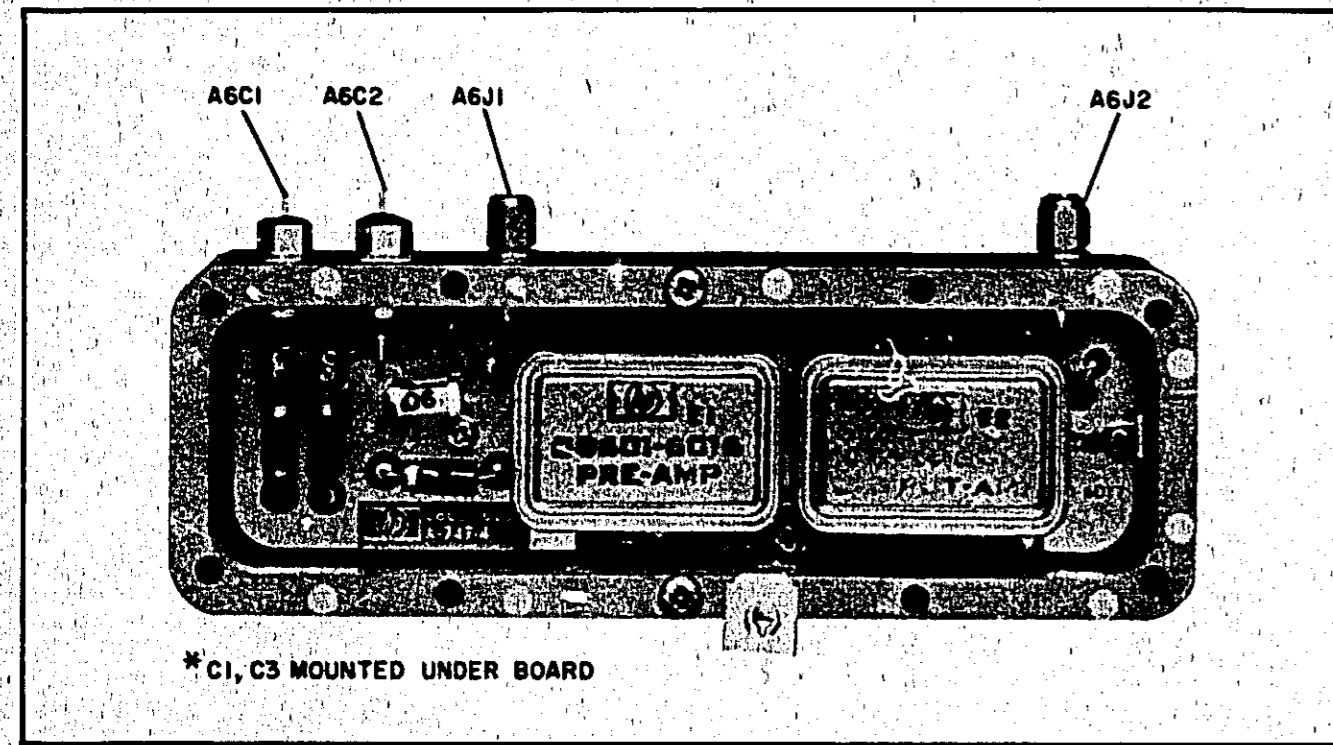


Figure 8-20. A6 Video Amplifier, Component Identification (Serial Prefixed 828- and Below)

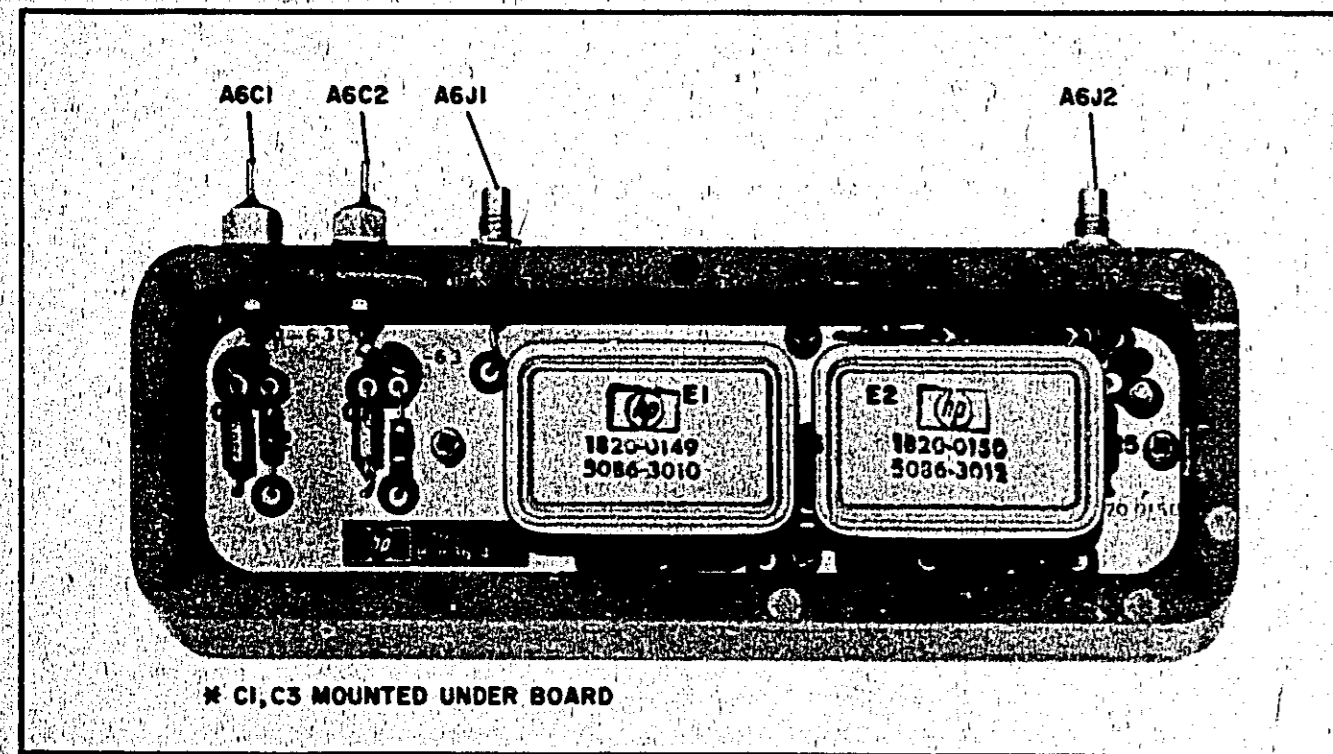


Figure 8-21. A6 Video Amplifier, Component Identification (Serial Prefixed 838- and Above)

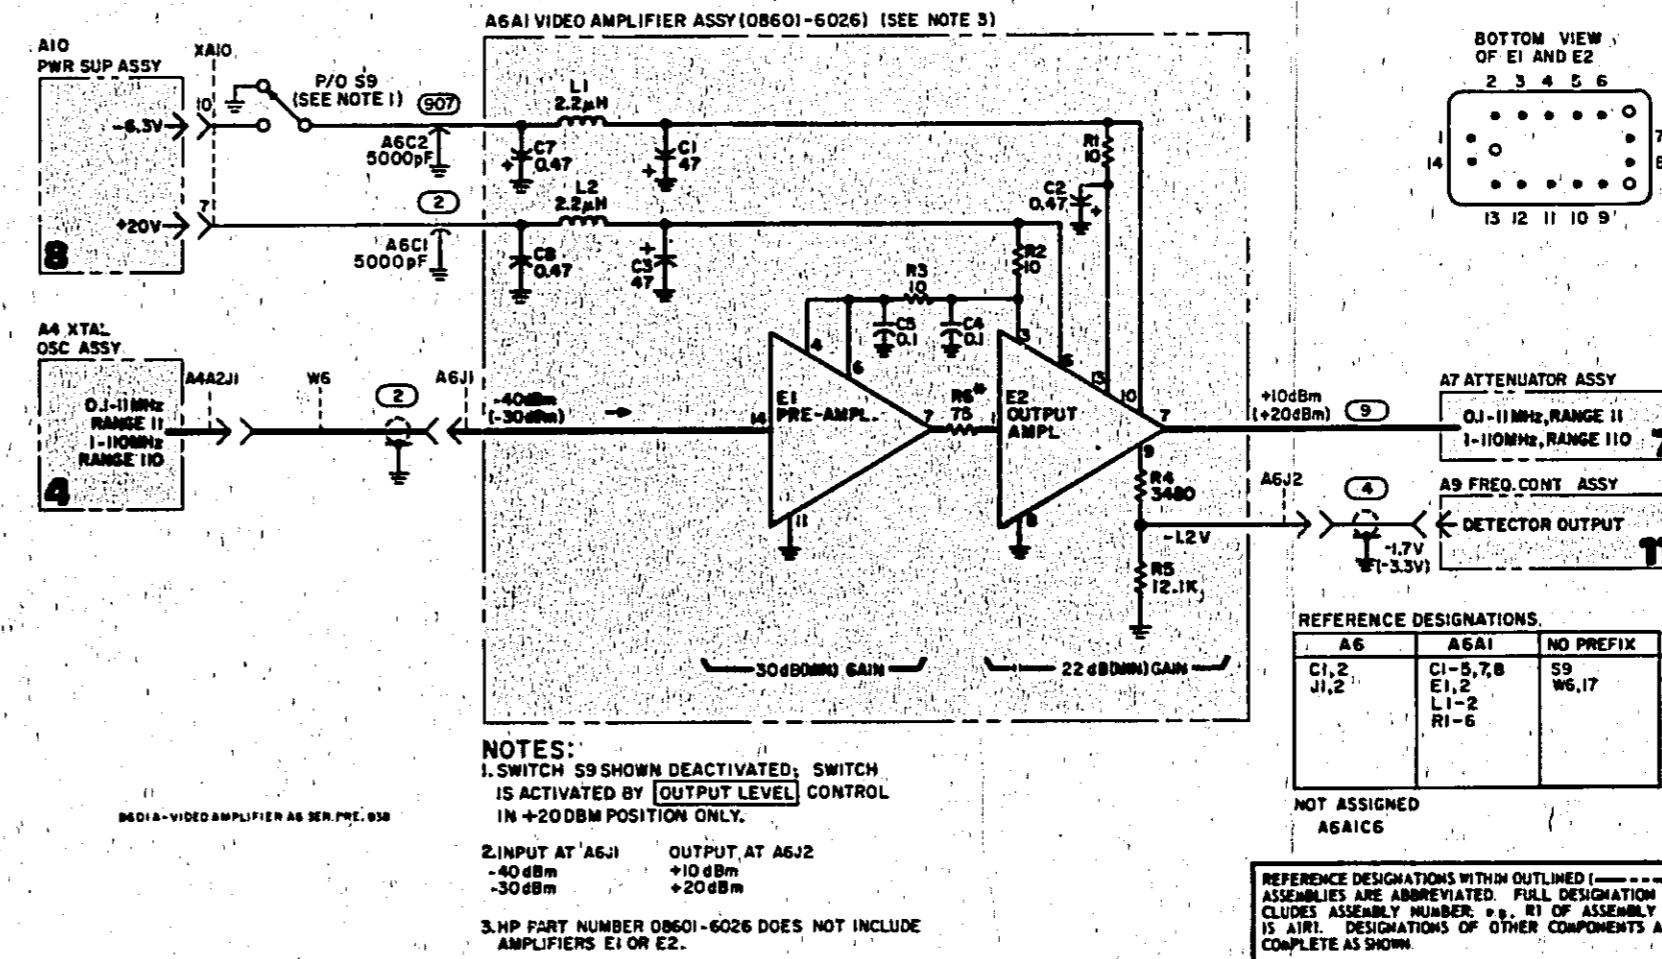


Figure 8-22. A6 Video Amplifier, Schematic Diagram

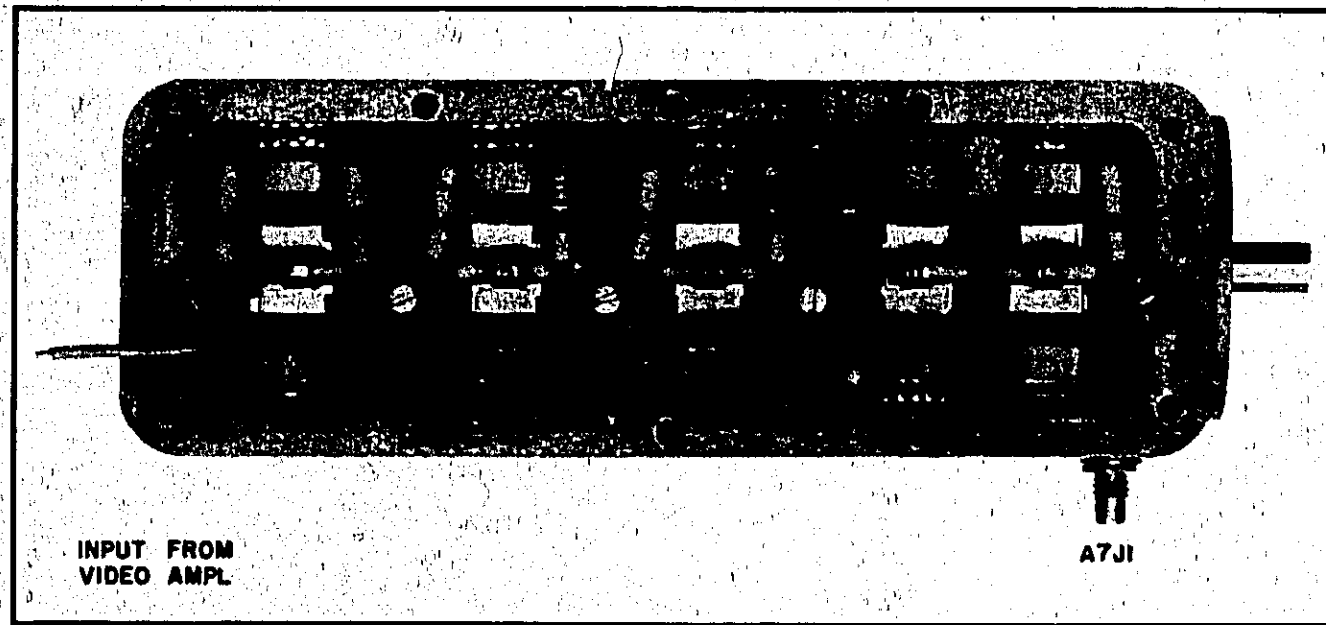


Figure 8-23. A7 Attenuator, Component Identification

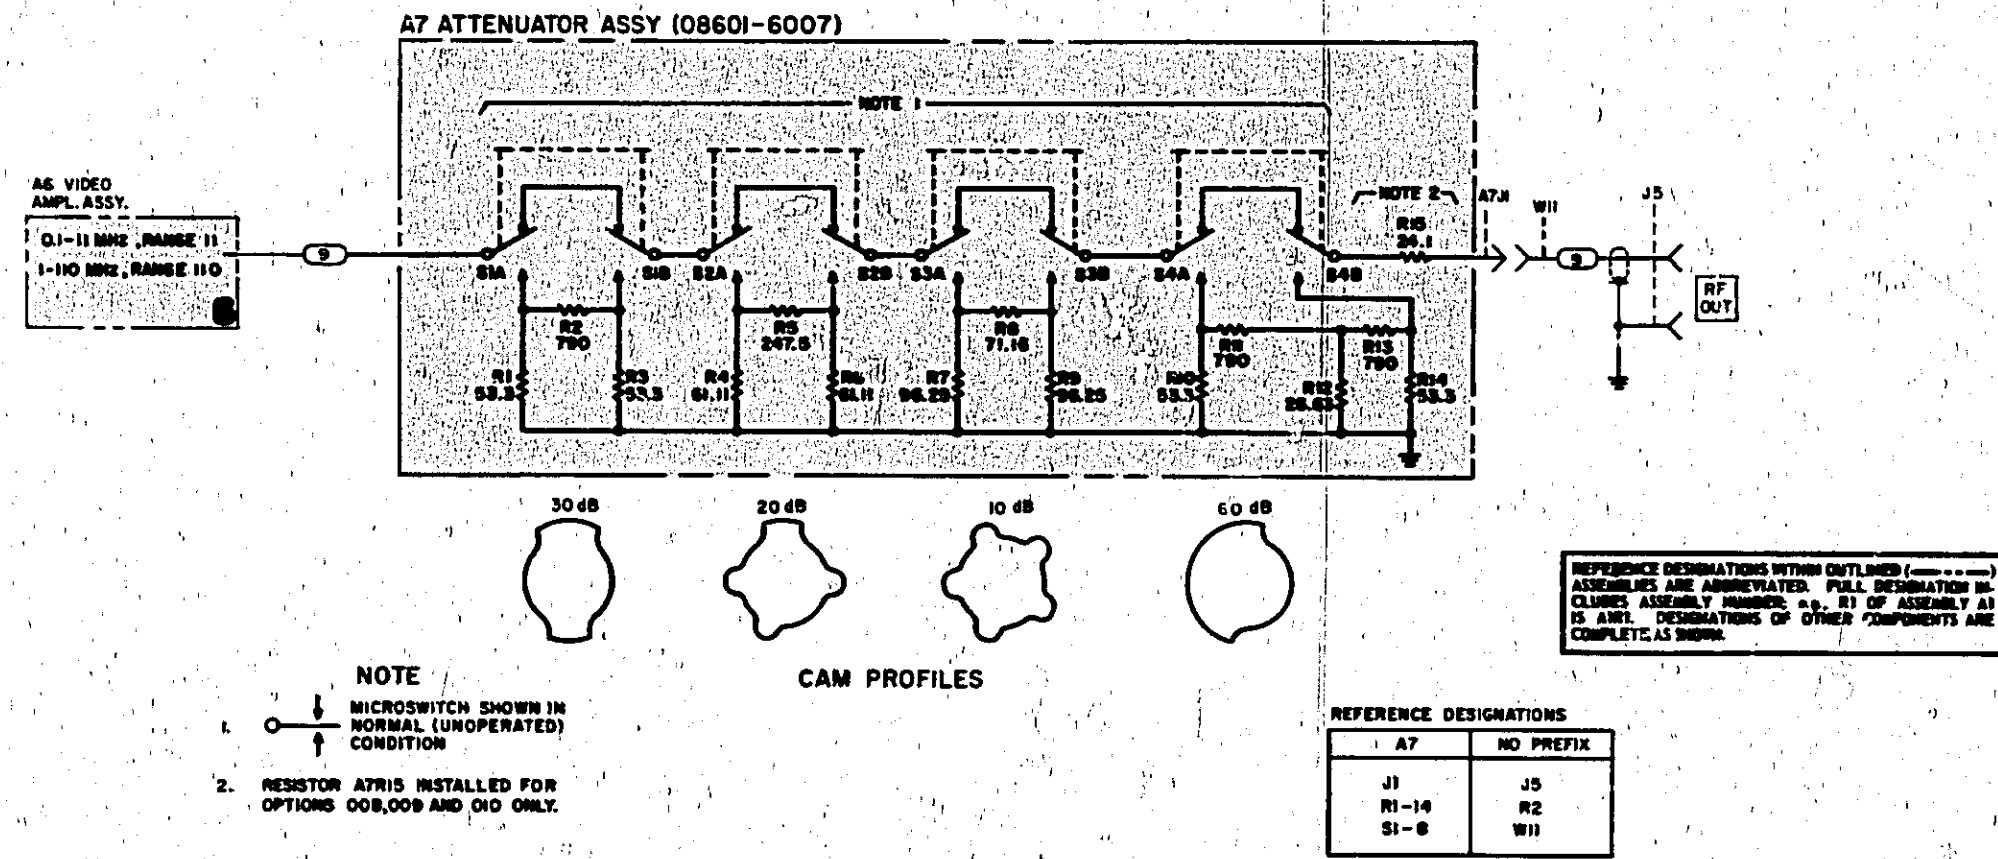
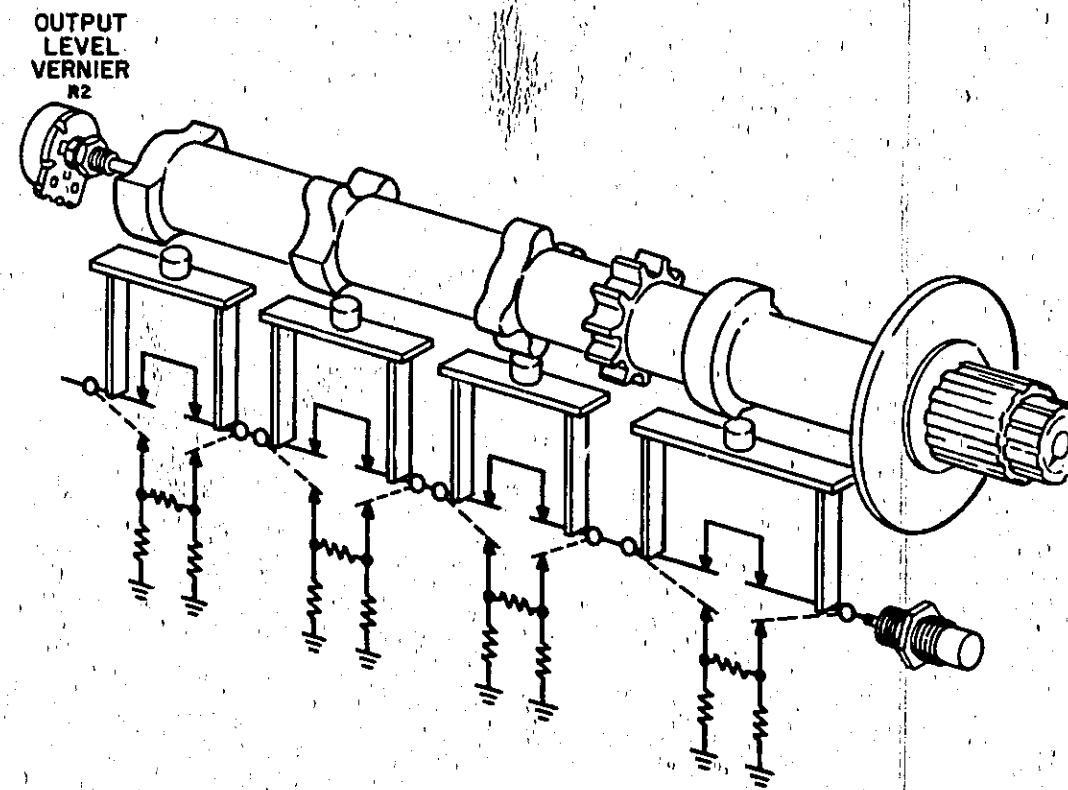


Figure 8-24. A7 Attenuator, Schematic Diagram

SERVICE SHEET 8**Operation**

The power supply assembly includes a 26.3 volt supply and a 75 volt supply. The 26.3 volt supply output is basically a floating supply which is used as a +20 volt and a -6.3 volt regulated supply. The +20 volt is the regulated supply current output while the -6.3 volt is the regulated supply current return. In order to hold these two outputs (+20 and -6.3 volts) constant with respect to a common ground reference, a second supply is included (Q1/Q5) simply to place a constant ground reference between the two voltages (+20 and -6.3). The -75 volt supply consists of a series regulator, current source, and driver (reference amplifier). Both of these supplies operate in the same general manner: The series regulator is an electronically controlled series attenuator which controls the amount of current flowing through the supply.

The supply voltage results from this current flowing through a resistor divider stick. Power supply current is supplied through the emitter collector junction of the current source. The amount of current supplied is controlled by a reference amplifier (or reference amplifier driver combination) which sets series regulator base bias.

The maximum ripple on the +20 and -6.3 volt supply leads should not exceed 2 millivolts peak-to-peak (5 millivolts peak-to-peak for the -75 volt supply).

NOTE

For instruments serial numbered 912-00580 and below, failure of transistors A10Q6 and A10Q7 could be a problem. To eliminate this problem, diode A10CR14 was added.

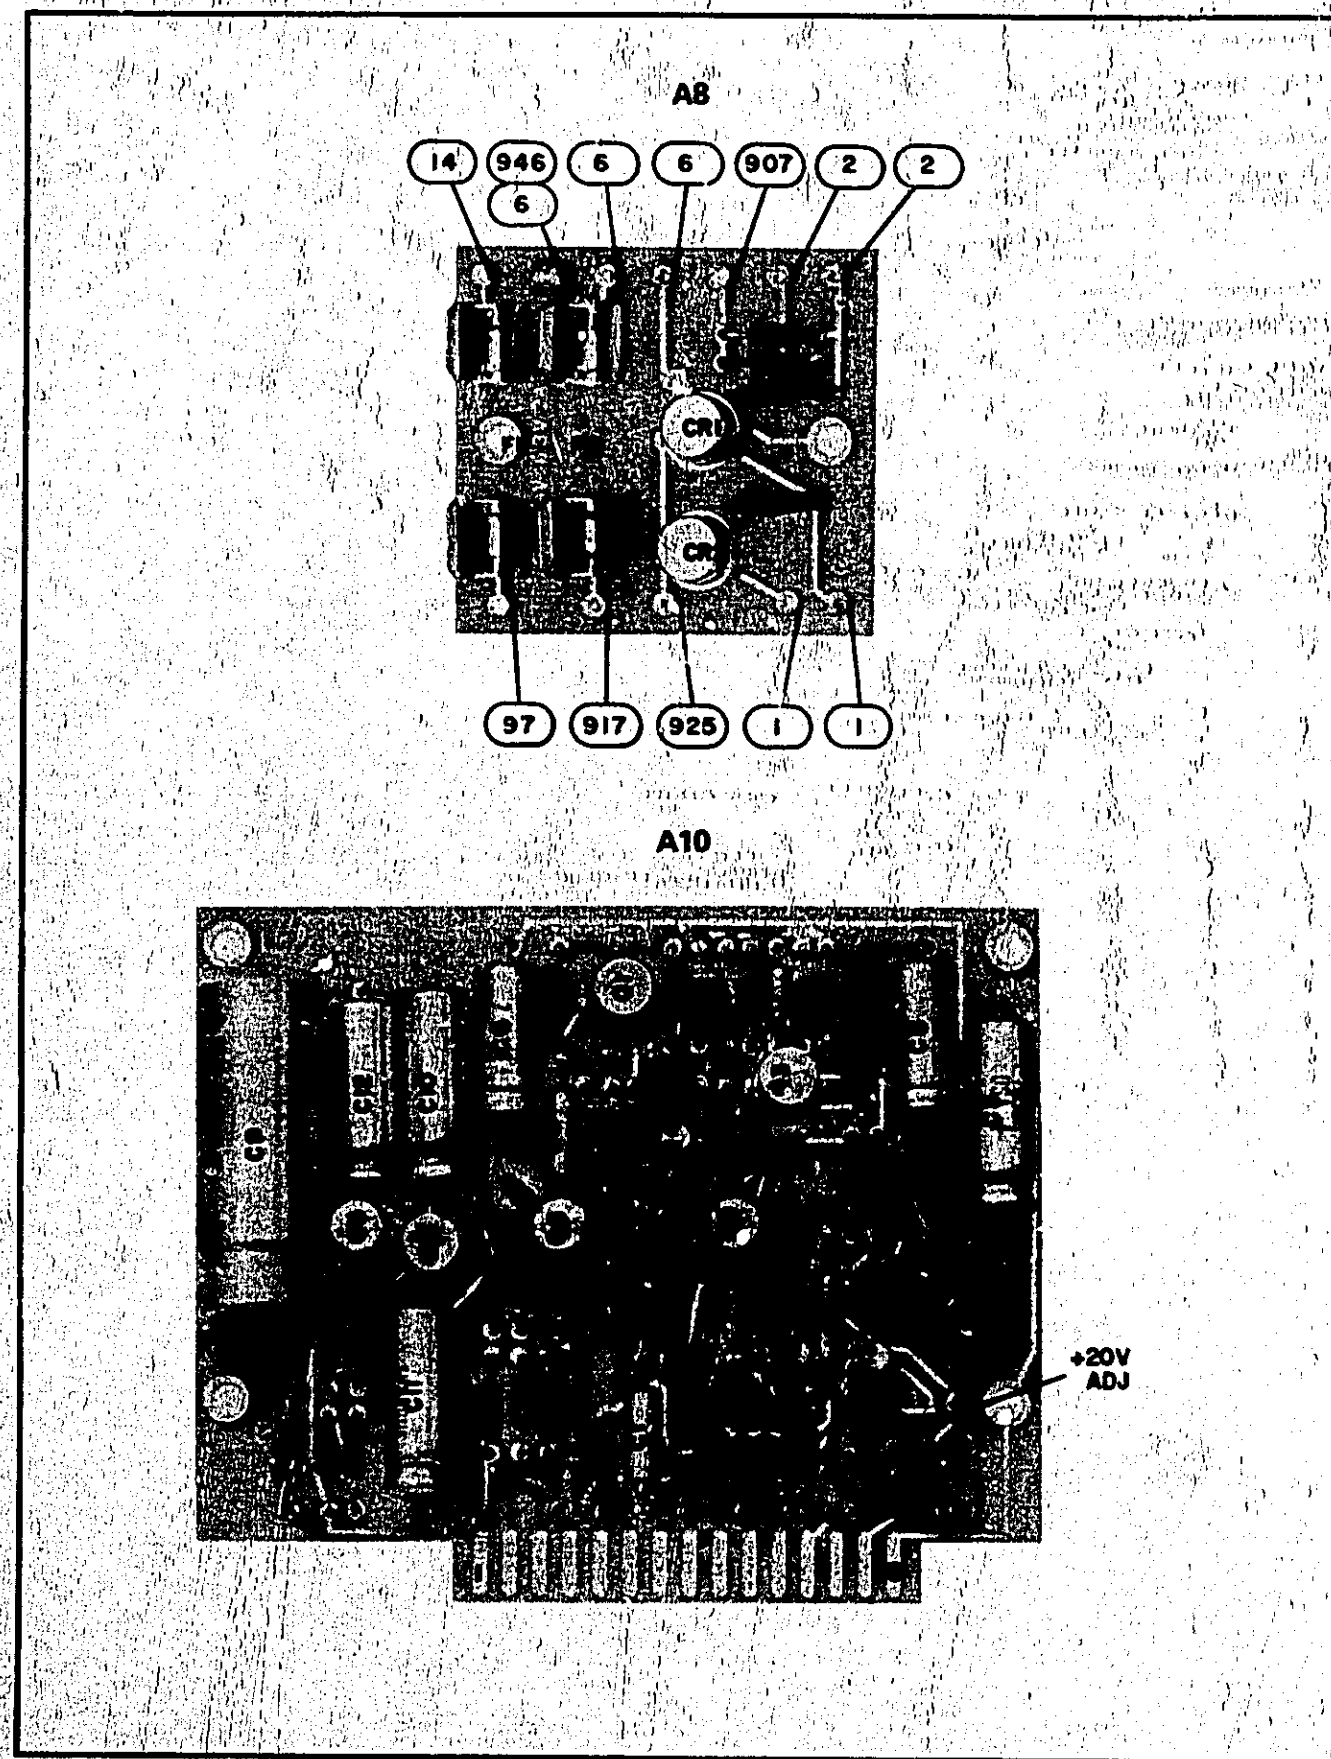


Figure 8-25. A8 Rectifier, A10 Power Supply, Component Identification

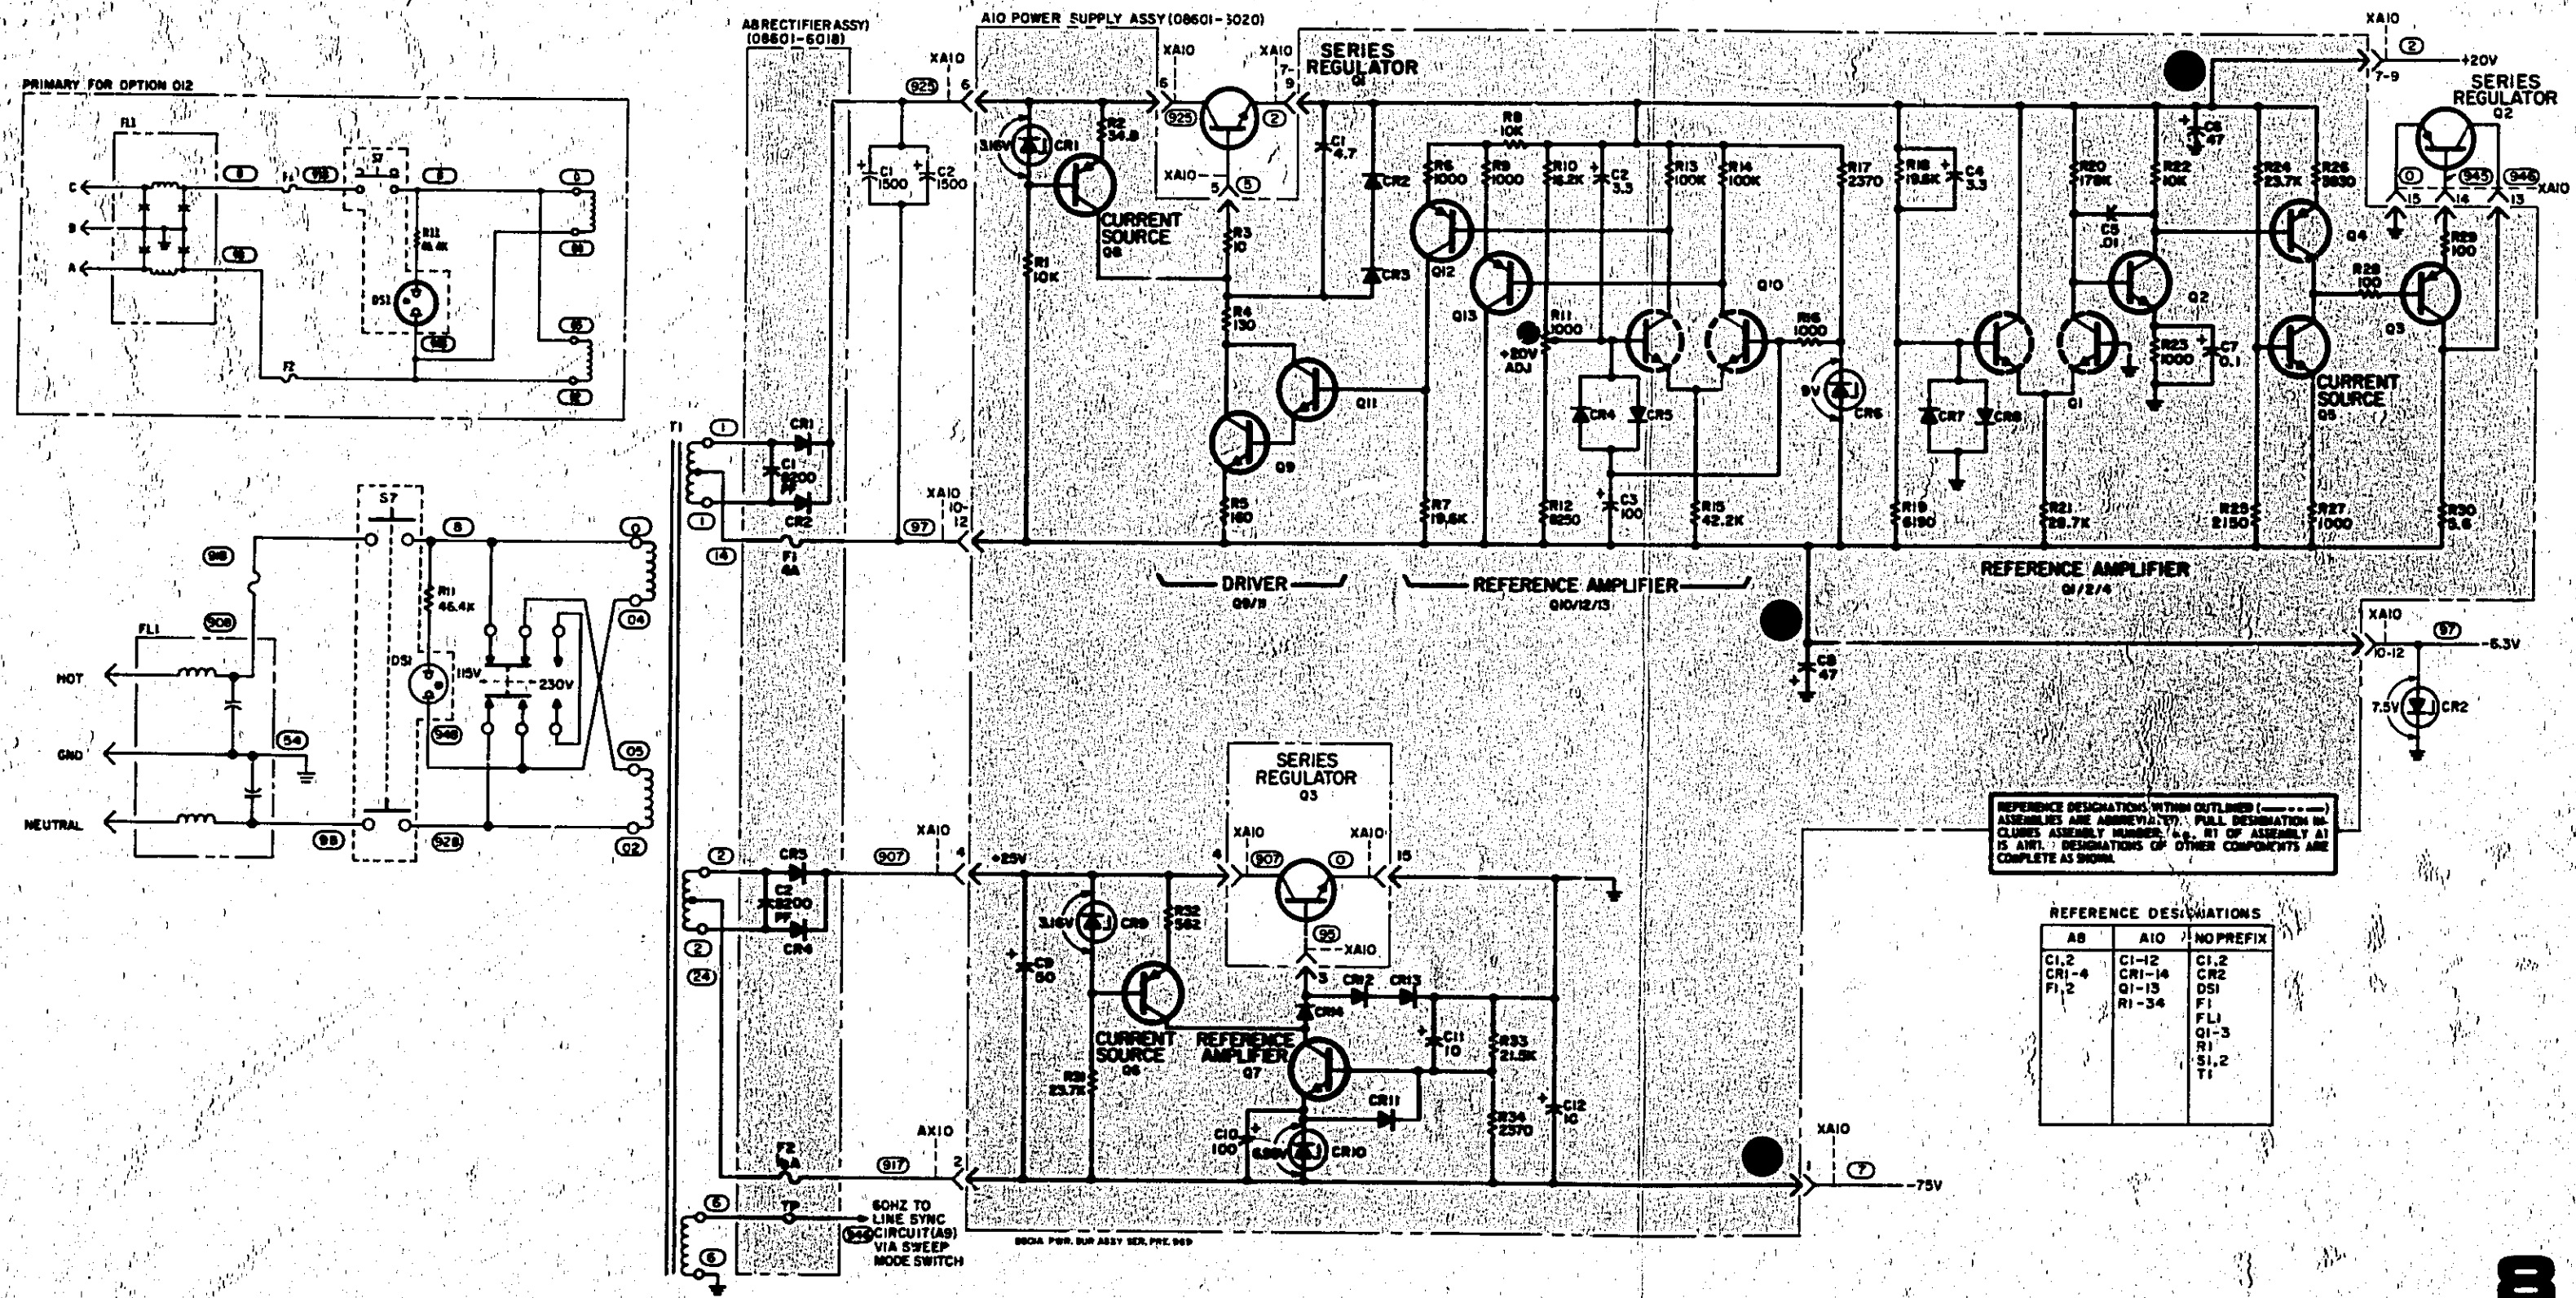


Figure 8-26. A8 Rectifier, A10 Power Supply, Schematic Diagram

SERVICE SHEET 9

Auto Sweep Generator Operation

Automatic swept frequency operation is started by applying bias voltage to Q37 emitter. Q37 conducts causing capacitor C1 to charge towards +1.2 to +1.5 volts (in SLOW mode C2 parallels C1 producing a slower charging ramp). Current to Q37 is controlled by R4, providing a 10:1 sweep speed adjustment. This ramp voltage, charging signal, is applied through Q28 and the sweep output circuit to cause the output frequency (8601A RF OUT) to increase. When the ramp voltage, at positive side of C1, reaches +1.2 to +1.5V, ramp sensor Q36 turns on suddenly, producing a negative step-voltage output. This negative step-voltage, differentiated by C9 and R53, is applied to Q35 causing Q34/Q35 to switch to unstable state (Q34 on/Q35 off). The low impedance path, CR17/Q34/R182, discharges C1 causing sweep signal to retrace. The on time of Q34 is determined by C11 charge time (in SLOW mode C12 parallels C11 increasing Q34 on-time long enough for C1/C2 combination to discharge).

Blanking Operation

Q30 is normally off, Q31 on. Q14 turns on when ramp signal reaches +600 mV. Q14 turn on triggers negative output from Schmitt trigger Q30/Q31 output. When retrace is completed, the positive going Q34 output returns Schmitt trigger to normal state. The output of Schmitt trigger Q30/Q31 is a negative pulse concurrent with sweep retrace. Zener diode CR3 offsets the output, causing a -5 volt blanking pulse.

Manual Trigger Operation

Q26 and Q27 are connected in a four-layer diode (SCR) configuration. In the TRIGGER mode, Q26 and Q27 are connected across the main ramp capacitor. Q26 and Q27 are normally on, disabling the ramp generator, and Q25 is off. C14 is charged negative on the left side, to positive on the right. When the TRIG button is depressed to begin the sweep, C14's negative charge is applied to Q26's emitter, turning Q26 and Q27 off. The ramp generator bypass is removed and the sweep begins. With Q26 and Q27 off, Q25 is turned on and C14 charges positive on the left side to negative on the right. If the TRIG button is depressed a second time, C14's positive charge is applied to Q26's emitter, turning Q26 and Q27 back on. The ramp generator is bypassed and the sweep retraces. If the TRIG button is not used to stop the sweep, normal retrace will occur and the multivibrator's negative step output turns Q26

and Q27 back on. The next sweep will not begin until the TRIG is depressed.

Time Delay Operation

Time Delay circuit Q32/Q33 operates exactly like the main ramp generator and sensor. When the collector of Q32 is 1.0 to 1.2V, Q33 turns on. The negative step output of Q33 is applied to the emitter of main ramp sensor Q36, causing Q36 to turn on suddenly, if ramp capacitor C1 is charged. This action only occurs at initial turn on, allowing voltages to stabilize before normal sweep operation begins. The time delay is about seven seconds.

Sweep Output Operation

The sweep output is about 0 to +7V for any sweep. Output impedance is less than 10K. Δ SYM adjust, R71, adjusts sweep signal symmetry; SYM SWEEP CAL adjust, R76, adjusts the sweep signal amplitude. VIDEO SWEEP STOP adjust, R24, adjusts upper video sweep frequency to match output frequency in CW mode. SYM Fc MAX adjust, R117, adjusts symmetrical sweep center frequency to equal output frequency in CW mode. DWELL TIME adjust, R20, adjusts for equal dead-time at beginning and end of sweep ramp (sweep ramp clipping is caused by saturation or cutoff of Q19/Q20 circuit).

Sweep Inhibit Operation

Q42 is normally off. Applying ground signal to sweep inhibit input stops sweep signal. Capacitor, C1, holds charge for up to about 20 milliseconds so the sweep output voltage and the output 8601A frequency is temporarily held constant. If ground input is removed, C1 will continue to charge and sweep will continue normally. If ground input is held long enough sweep operation will continue very slowly (about one complete sweep would be expected every ten seconds).

Troubleshooting

To troubleshoot sweep generator circuitry, first test sweep output circuitry by operating 8601A in MANUAL/FULL/FREE mode and checking sweep outputs using MANUAL control. Then set 8601A for a sweep FAST mode and measure sweep outputs and blanking signal to isolate problem.

NOTE

Always measure power supply voltages to ensure they are correct, before troubleshooting other circuitry.

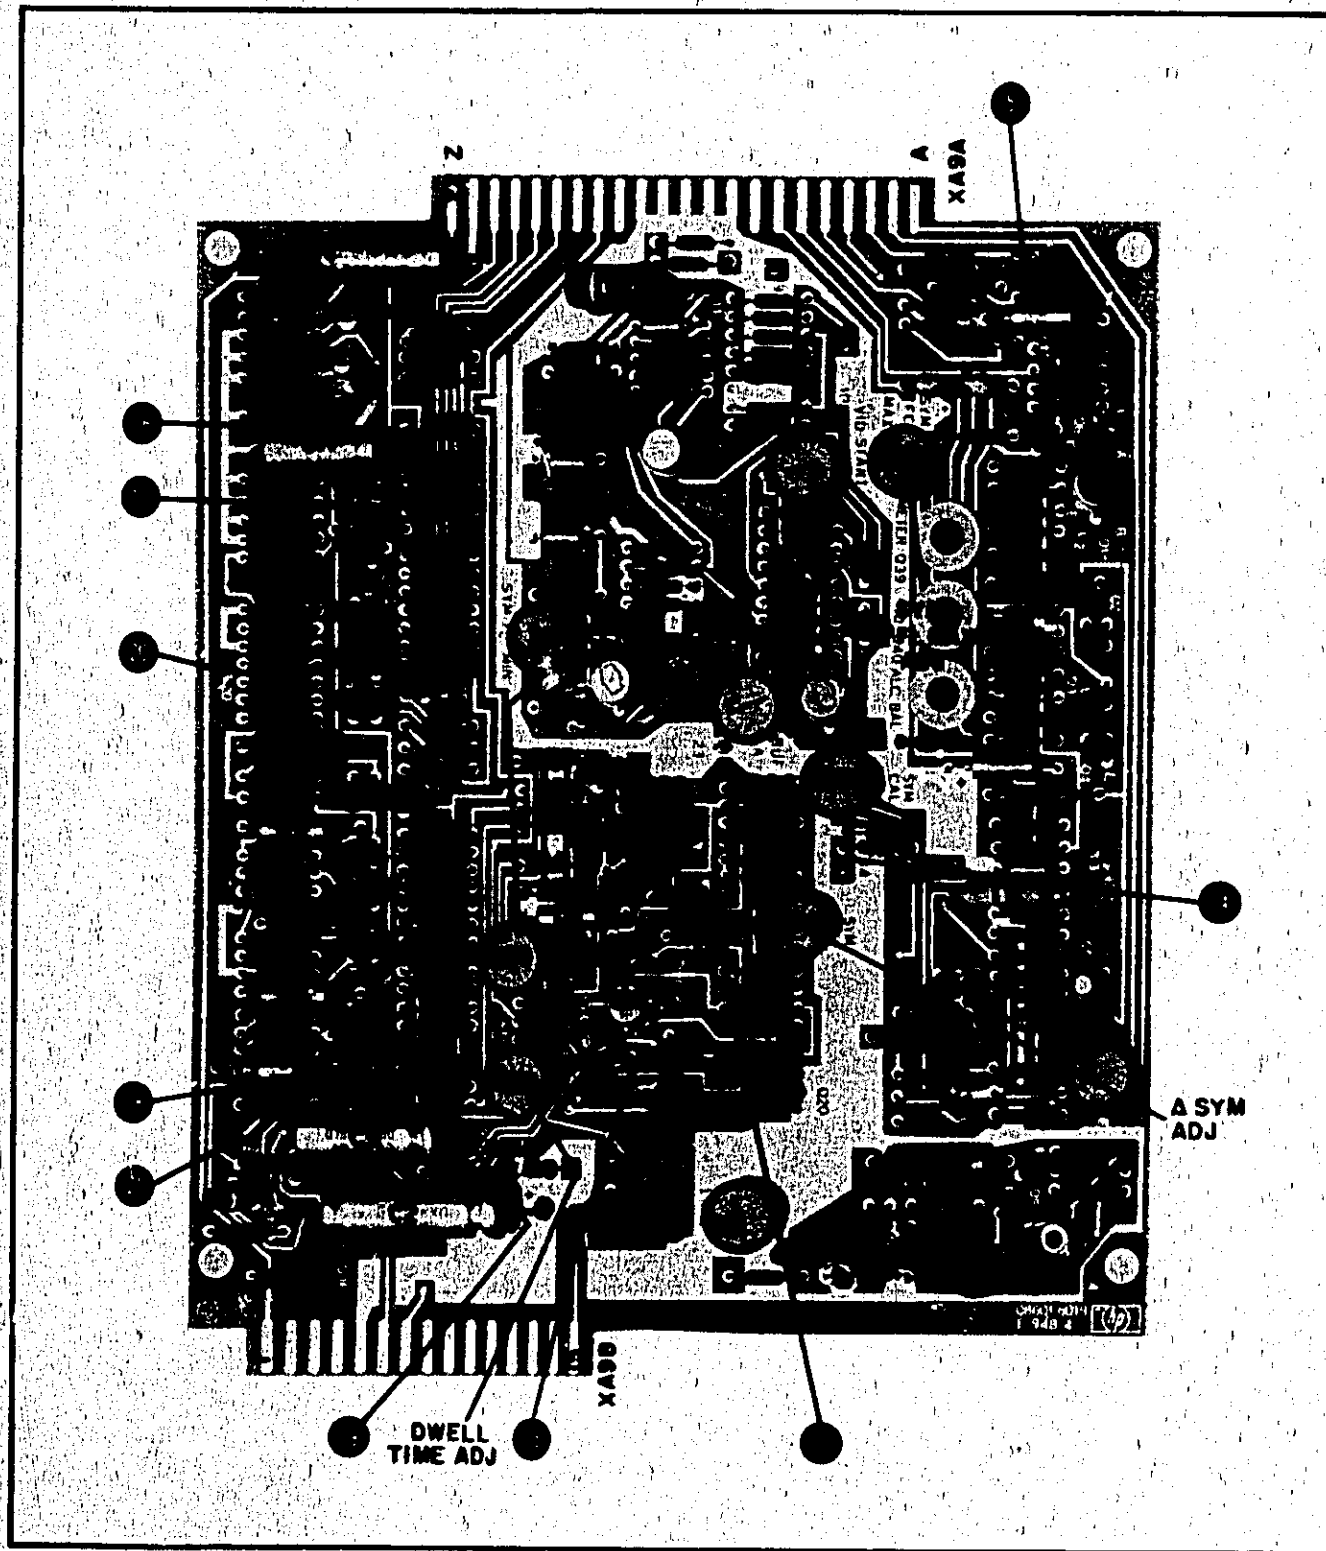


Figure 8-27. P/O A9 Assembly, Sweep Generator, Component Identification

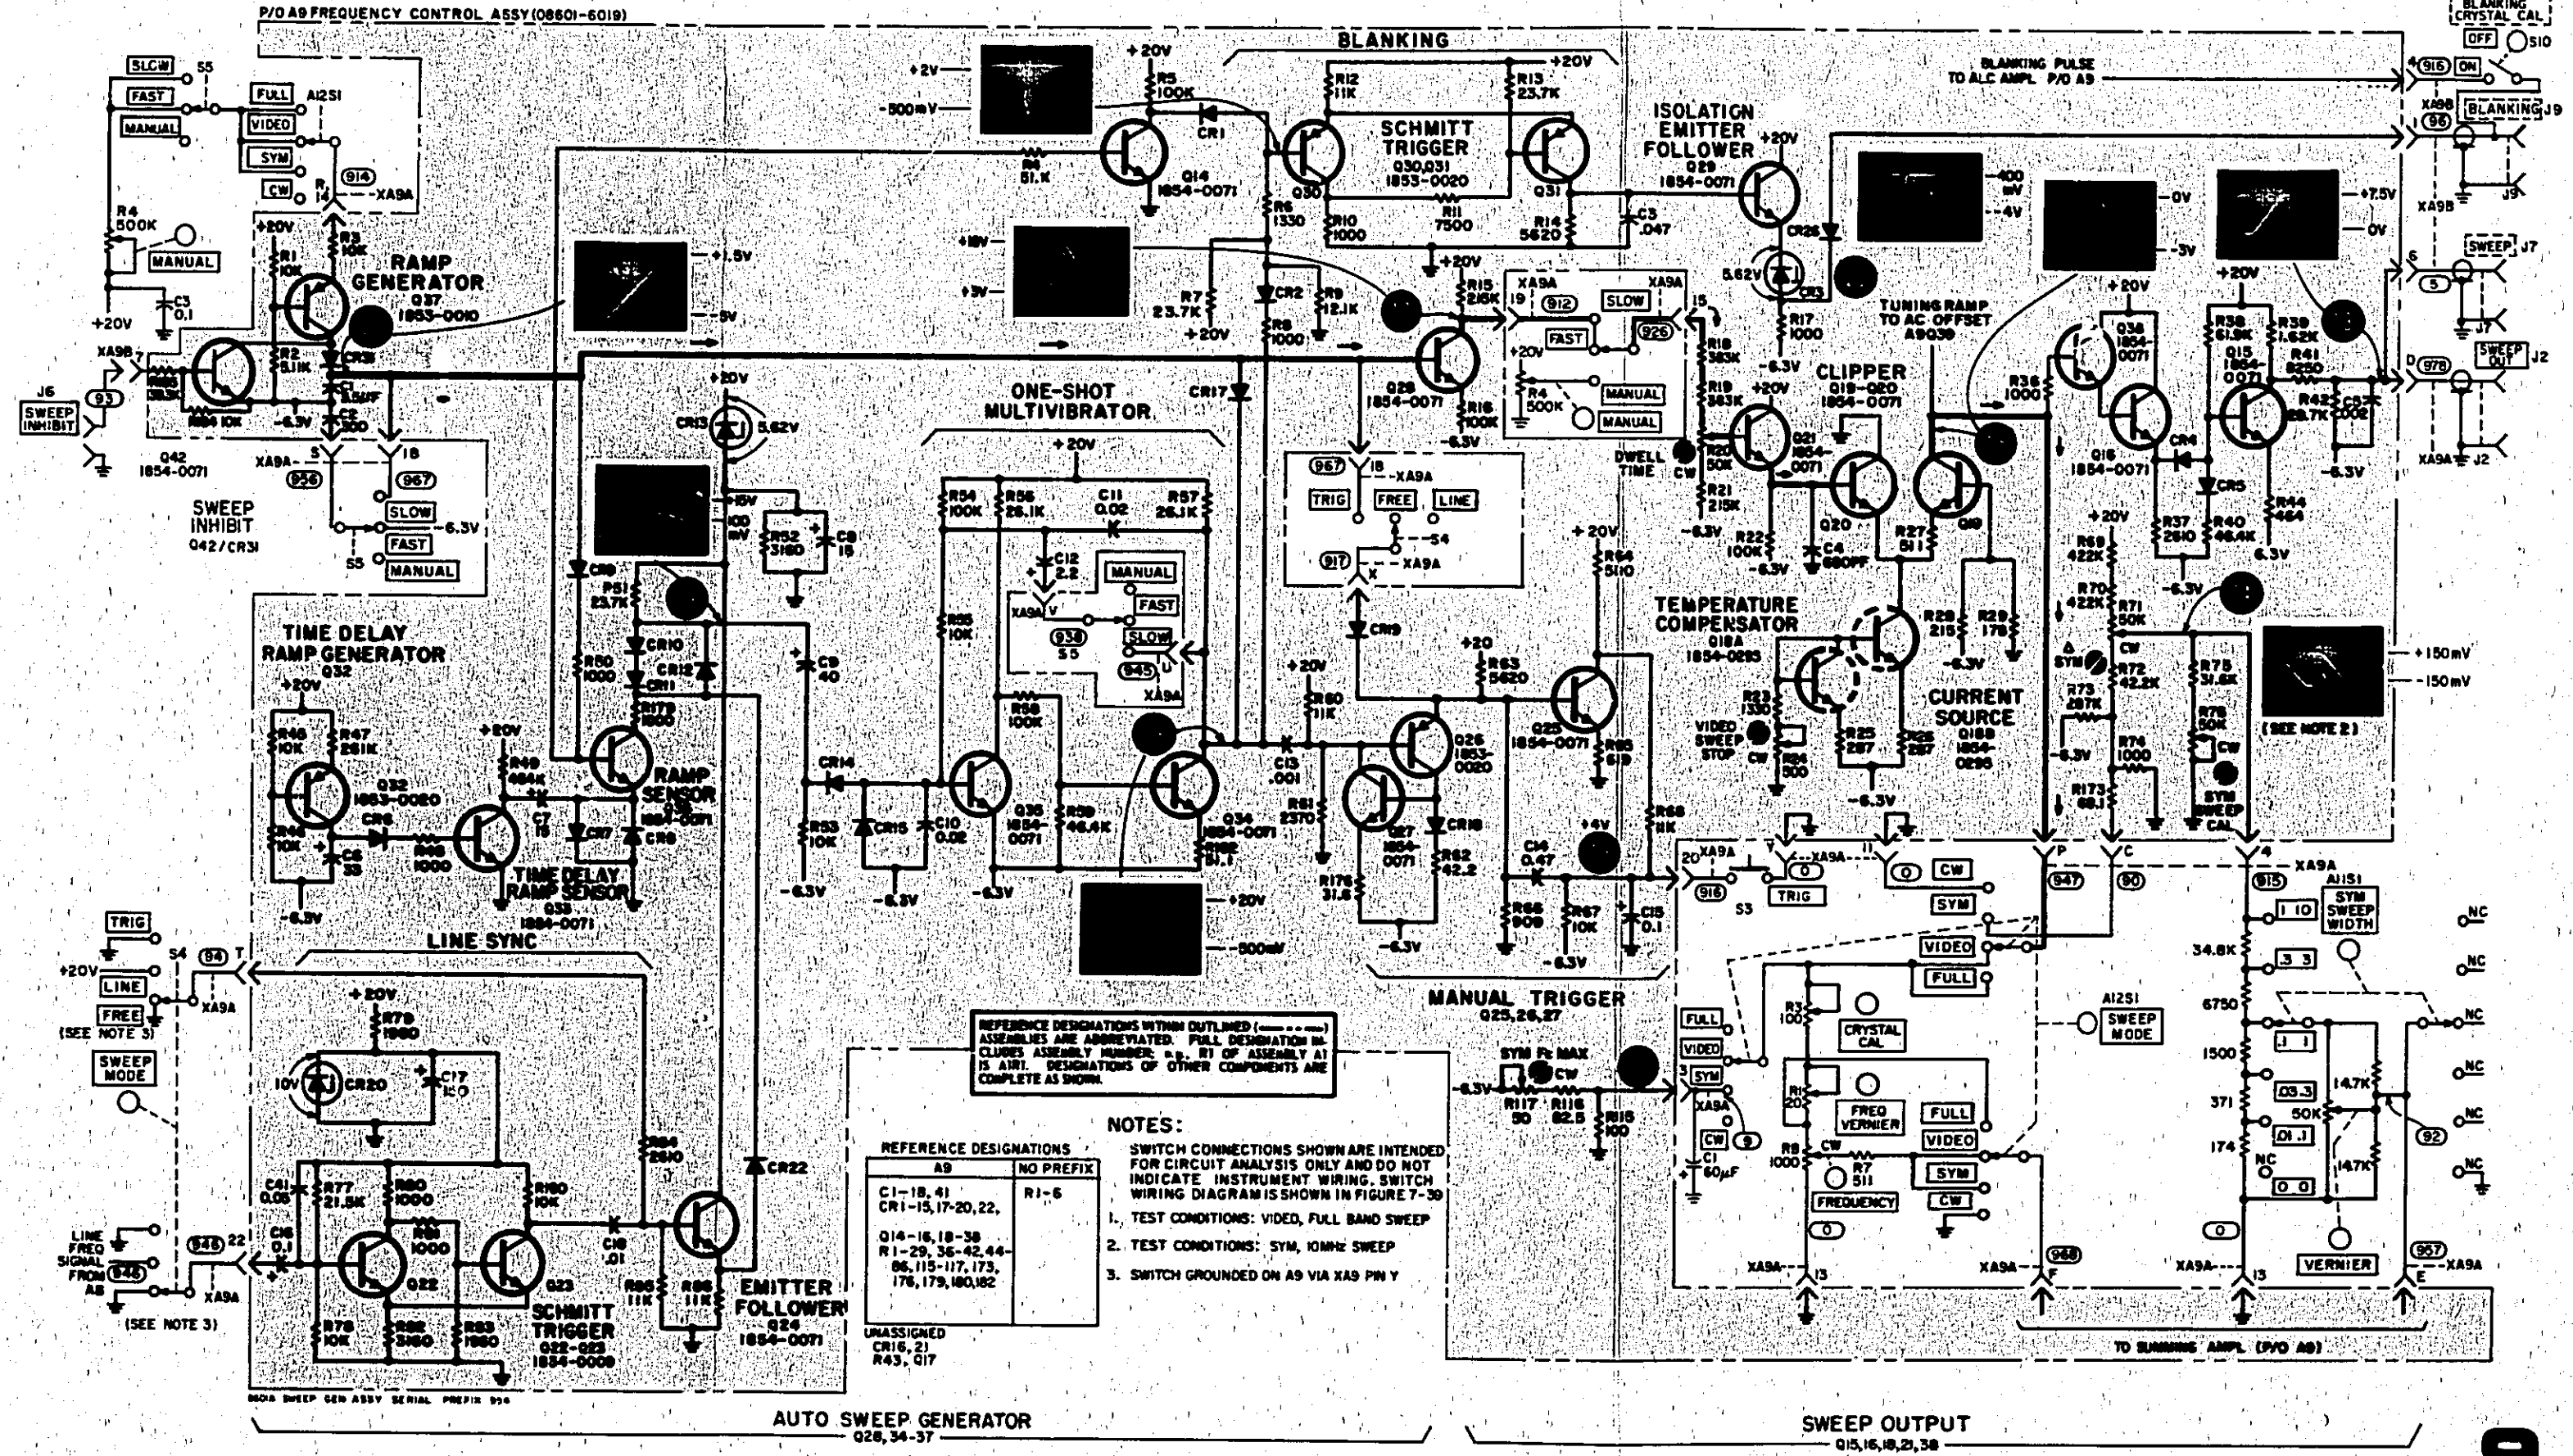


Figure 8-28. P/O A9 Assembly, Sweep Generator, Schematic Diagram

SERVICE SHEET 10

Operation

The summing amplifier, E1, is a high gain, low frequency amplifier. The high gain characteristic, with feedback network R99/C19, make it a very sensitive unity gain amplifier whose input can be held at virtual ground permitting multiple inputs without cross coupling. Diodes CR23 and CR24 limit the input voltage range. The summing amplifier, E1, is used to combine the swept frequency inputs required for frequency modulation and/or swept frequency operation. The adjustments, provided in the summing amplifier assembly, are provided to eliminate frequency tuning differences between SWEEP and CW mode operation (R120 and R34) or frequency drift due to ambient temperature changes (R88 and R95).

Troubleshooting

To troubleshoot the summing amplifier circuitry, first isolate trouble to the amplifier, E1 itself, or the other circuitry as follows:

1. Lift one lead of each of the following resistors: R93, R97, R109 and R114.
2. Set 8601A SWEEP/CW switch to SYM (this should place a ground on one lead of resistor R92).
3. Measure voltage at A9TP9 and record.
4. Vary SYM Fc MIN, A9R120, from end to end. The voltage at A9TP9 should vary from about +25 to -25 millivolts dc (this voltage is usually slightly more positive than negative). If voltage variation is correct, summing amplifier, E1, circuitry is operating properly and trouble is elsewhere in the circuit.
5. Re-adjust SYM Fc MIN, A9R120, for voltage level measured in step 3.

NOTE

To obtain an A9 Frequency Control and Leveling Board for any of the options below, order Board Replacement Kit, HP Part Number 08601-60112. Table 1 below shows the component changes needed for converting the standard A9 board to each option.

Table 2-1. Matrix to Select Frequency Control Board Components for 8601A Options

COMPONENT	STANDARD 0001-0019 CIRCUIT BOARD	CHANGE FROM COMPONENT IN STANDARD COLUMN TO COMPONENT IN OPTION COLUMN BELOW						
		OPT 001	OPT 002	OPT 003	OPT 005	OPT 006	OPT 011	OPT 012
R-107	1.62 K 0757-0428			24.6 Ω 0698-4087			23.7 Ω 0698-3431	23.6 Ω 0698-4087
R-112	31.6 K 0698-3160					100 K 0757-0465		
R-113	11.0 Ω 0757-0378	14.7 Ω 0698-3428	5.6 Ω 0683-0565				5.6 Ω 0683-0565	14.7 Ω 0698-3428
R-159	31.6 K 0698-3160				28.7 K 0698-3149			
R-162	10 K Pot 2100-3210	50 K Pot 2100-0969	50 K Pot 2100-0969					50 K Pot 2100-0969
R-163	10 K 0757-0442				5.11 K 0757-0438			
C-31	8200 pf 0140-0184				17,000 pf 0140-0166			
C-32	2700 pf 0160-2228				8200 pf 0140-0184			
C-33	910 pf 0160-2217				2700 pf 0160-2228			
C-35	.033 μ f 0160-0163				.1 μ f 0160-0168			
C-37	1 μ f 0180-0291				2.2 μ f 0180-0197			
C-38	2.2 μ f 0180-0197				10 μ f 0180-0374			
L-2	10 mH 9140-0131				24 mH 9100-2867			

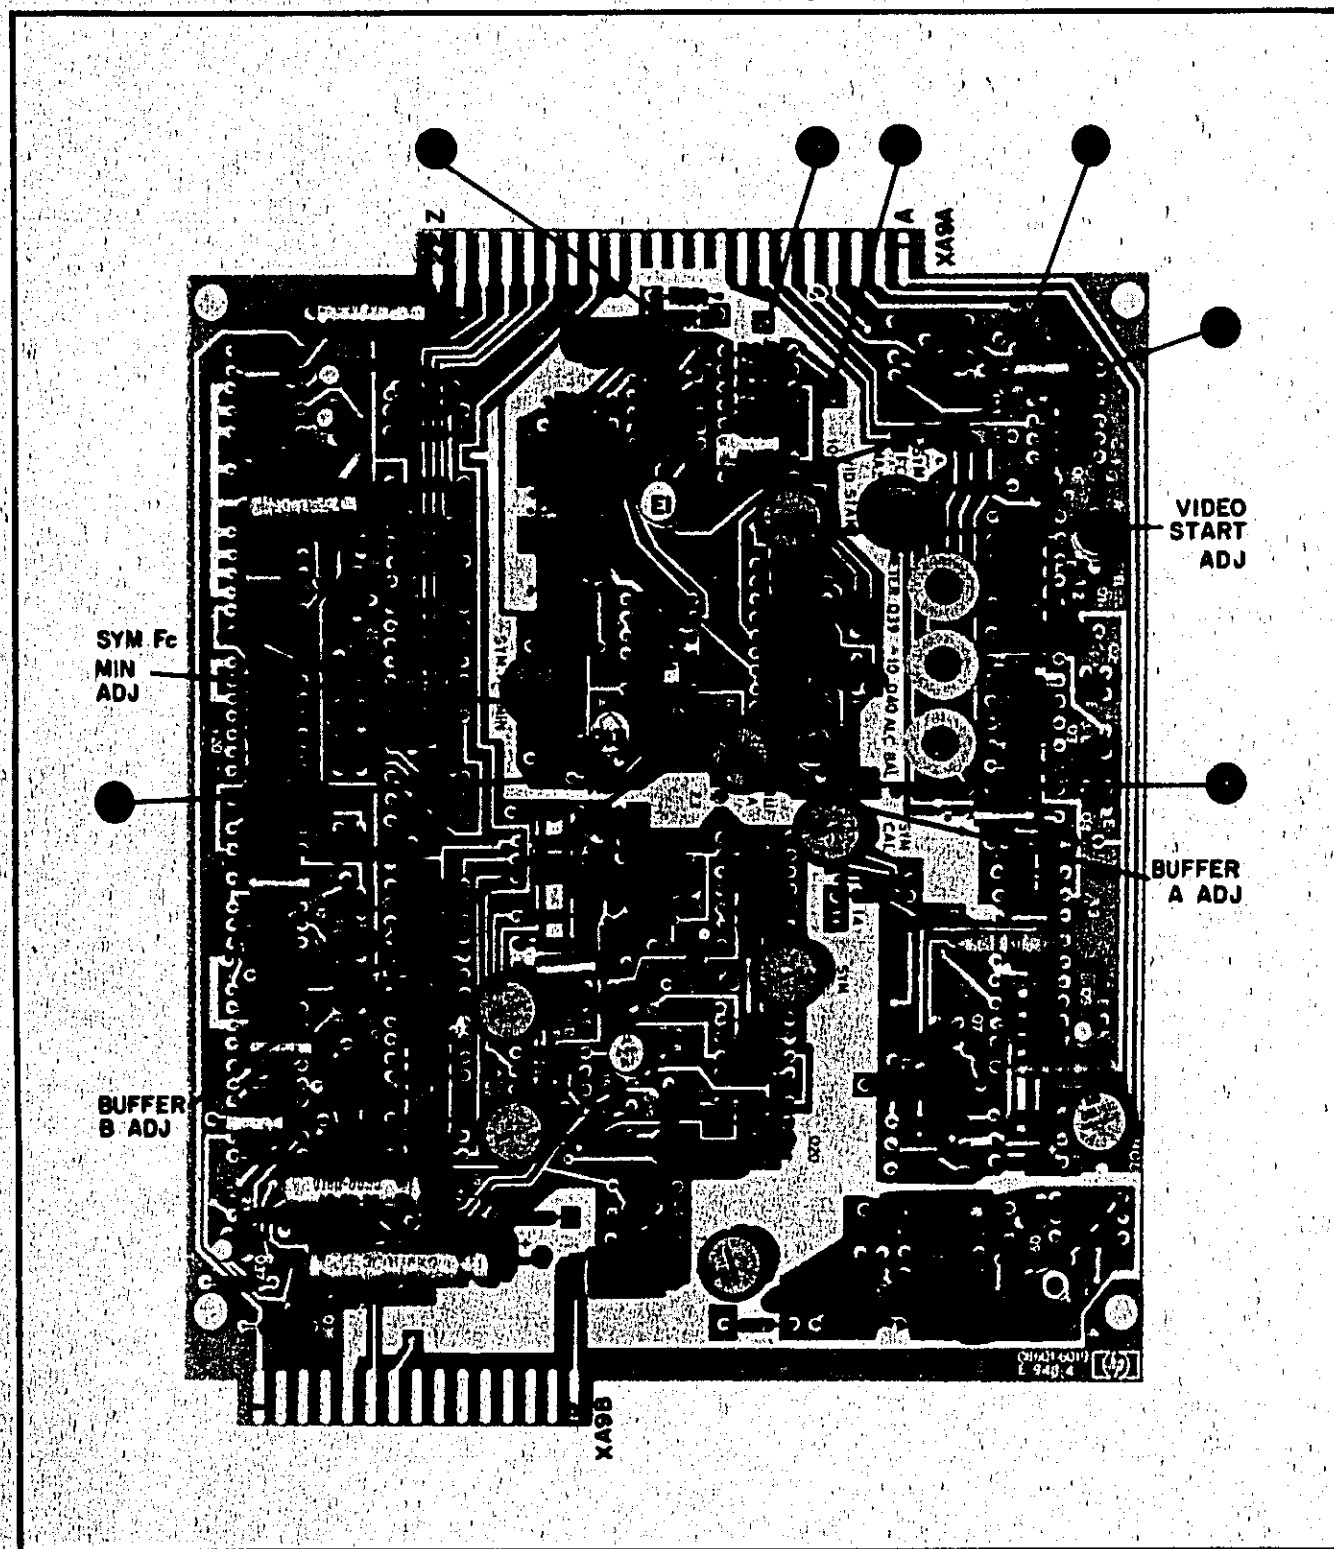


Figure 8-29. P/O A9 Assembly Summing Amplifier, Component Identification

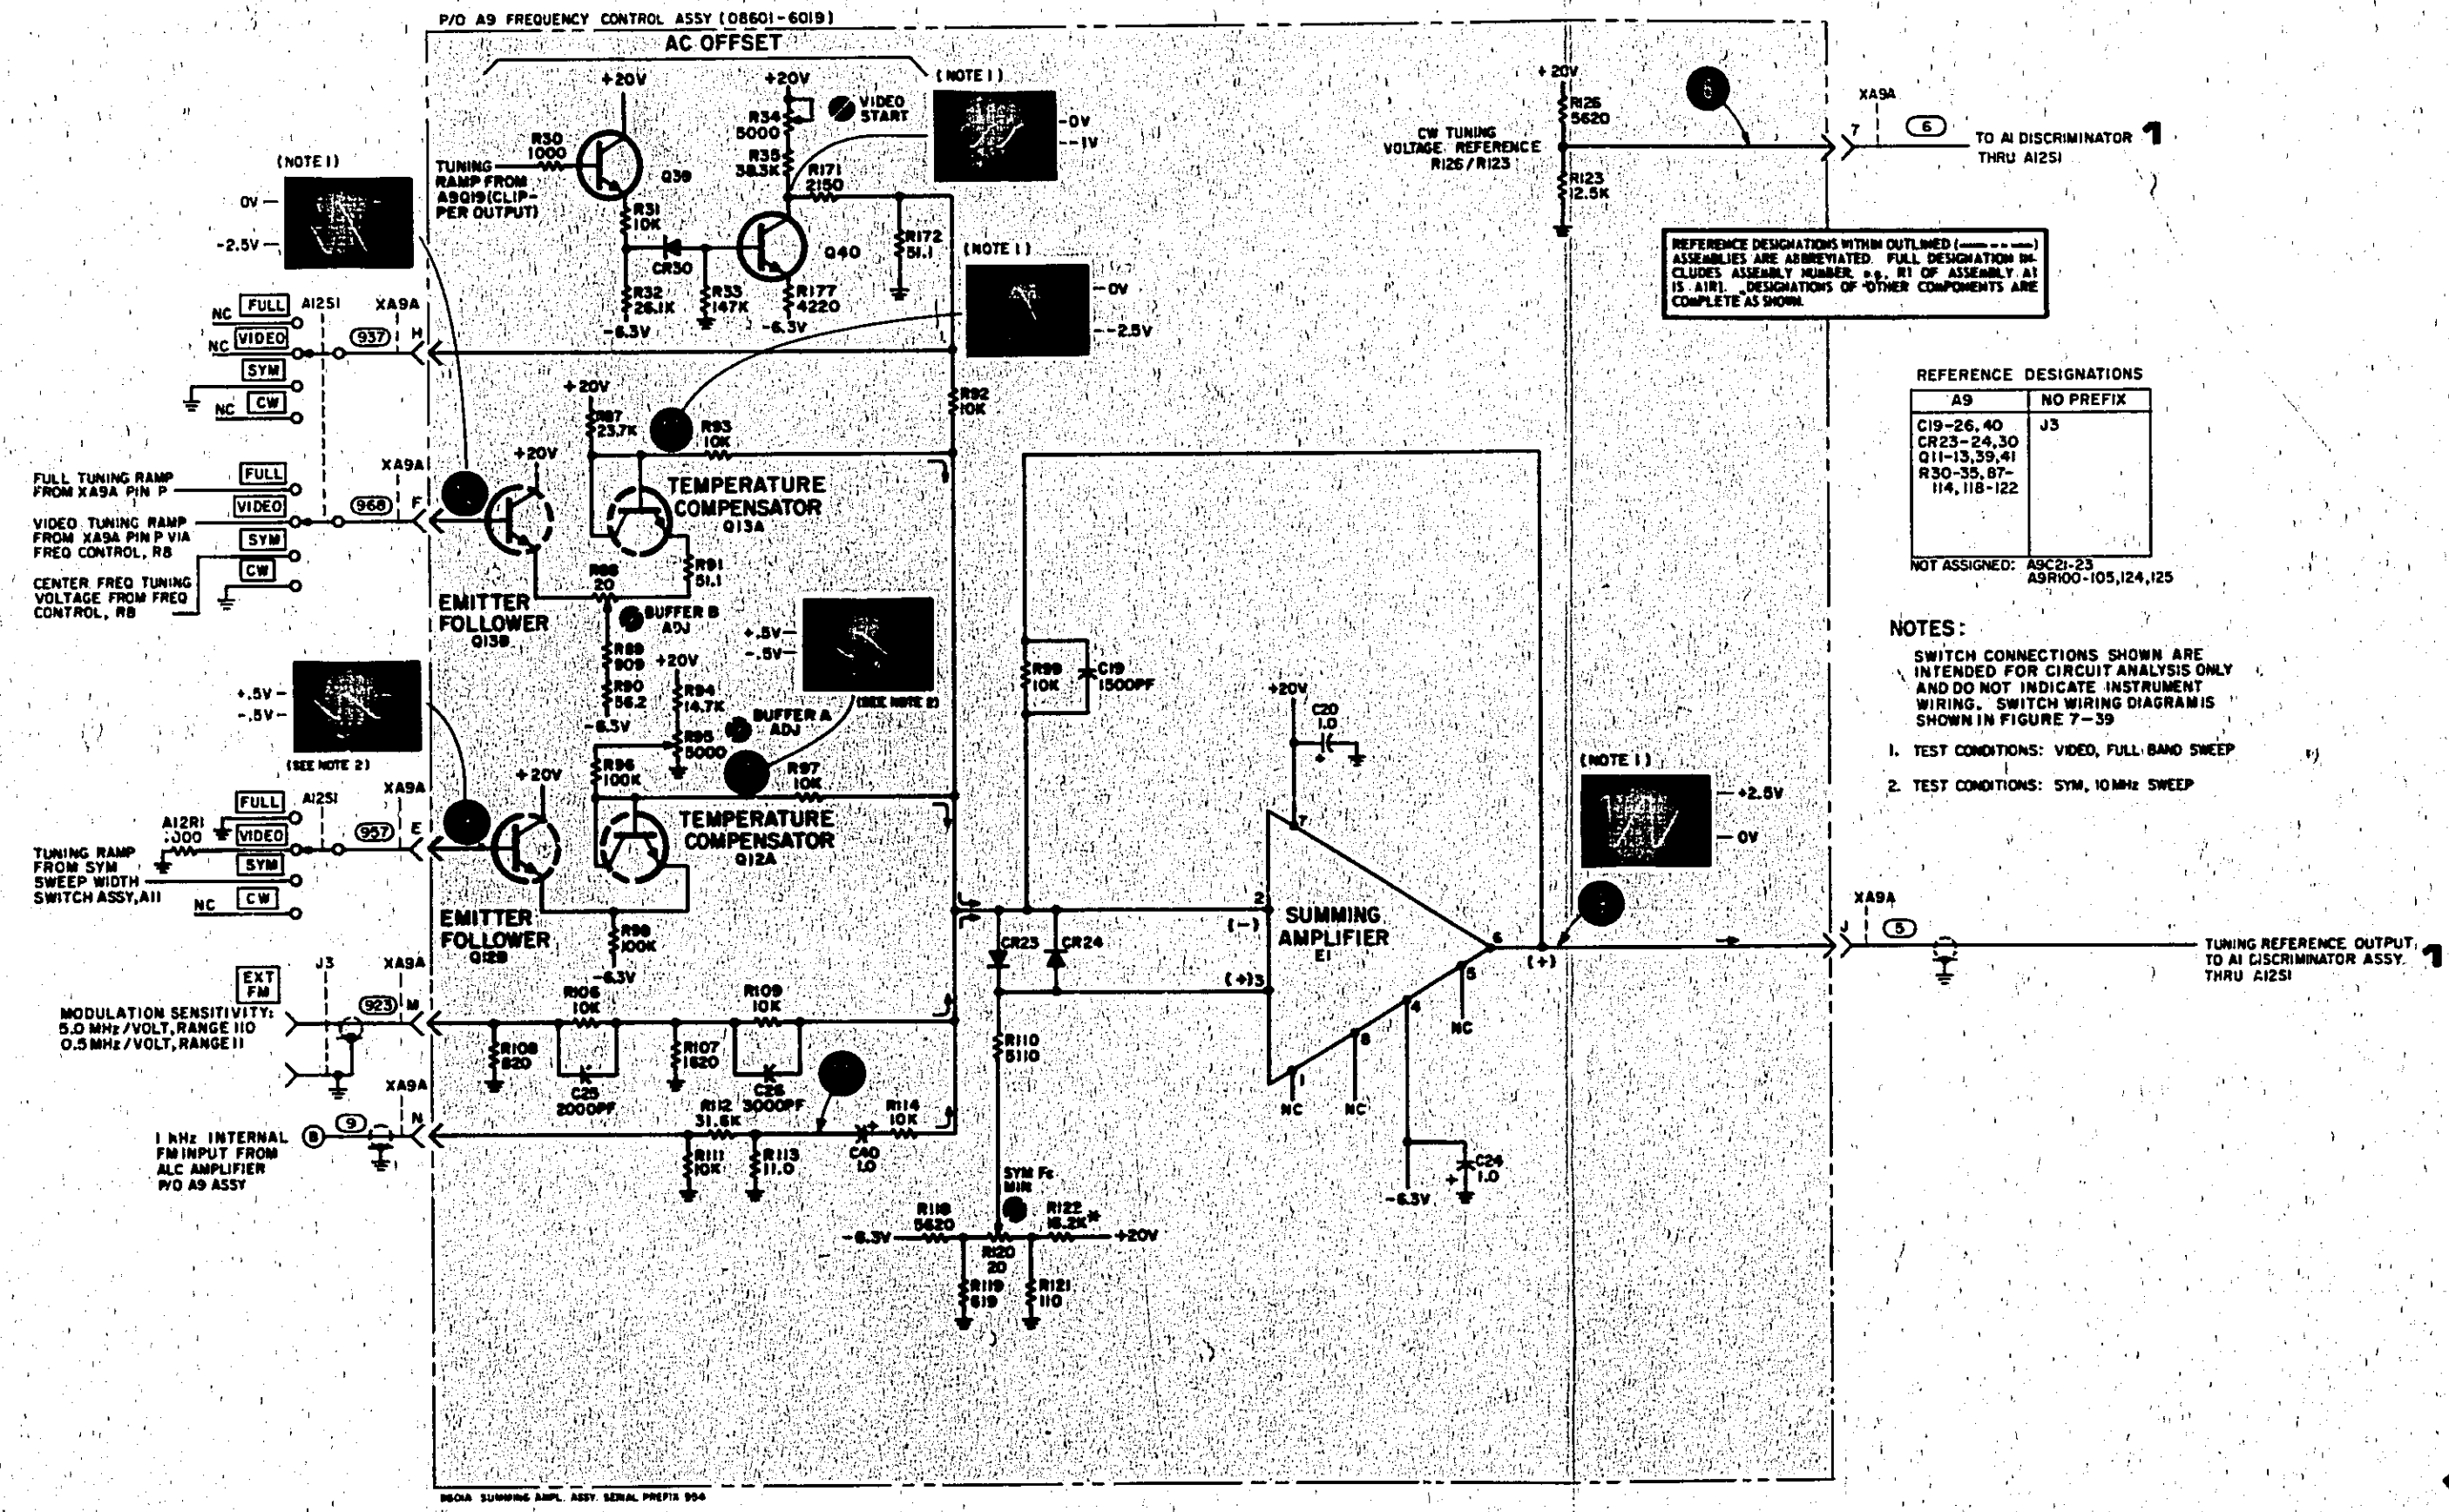


Figure 8-30. P/O A9 Assembly, Summing Amplifier, Schematic Diagram

SERVICE SHEET 11**ALC Amplifier Operation**

Input differential amplifier Q1 compares the detected RF signal with the reference level voltage established by the OUTPUT LEVEL vernier control R2. Any difference between the inputs generates an error signal that is applied to output differential amplifier Q2 and Q3. This error signal is further amplified by amplifier Q4 and applied to the Fixed Oscillator's modulator to adjust the output power level.

ALC Amplifier Troubleshooting

A quick check of the ALC amplifier can be made by varying the OUTPUT LEVEL controls and noting the output power varies.

1 kHz Oscillator Operation

Q8, Q9 and Q10 form a 1 kHz phase-shift oscillator for internal AM and FM. FREQ adjust R160 varies the resistance of the RF phase shift network, thus varying oscillator frequency.

1 kHz Oscillator Troubleshooting

A quick check of the 1 kHz oscillator can be made by setting the 8601A for internal AM and noting that output frequency is amplitude modulated.

AM Driver Operation

Driver Q7 applies the internal 1 kHz phase-modulation signal to the ALC reference input and % MOD ADJ R162 controls the modulation amplitude. Driver Q5 applies the 5 MHz markers and blanking signals to the ALC reference input. The blanking signal shuts off RF power during sweep retrace. C36 provides additional filtering in CW operation to improve marker resolution.

AM Driver Troubleshooting

A quick check of driver Q7 can be made by setting the 8601A for internal AM and noting that the frequency output is amplitude modulated at a 1 kHz rate. A quick check of driver Q5 can be made by setting the BLANKING switch to on, during automatic sweep, and noting that the RF OUTPUT is blanked during retrace.

Peak Detector Operation

Emitter Follower Q6 is normally on and provides a low impedance path for CR25 and C27. Meter M1 indicates C27's charge as dBm and volts rms into 50 ohms.

Peak Detector Troubleshooting

A quick check of the peak detector can be made by varying the OUTPUT LEVEL vernier control and noting that the meter indication varies.

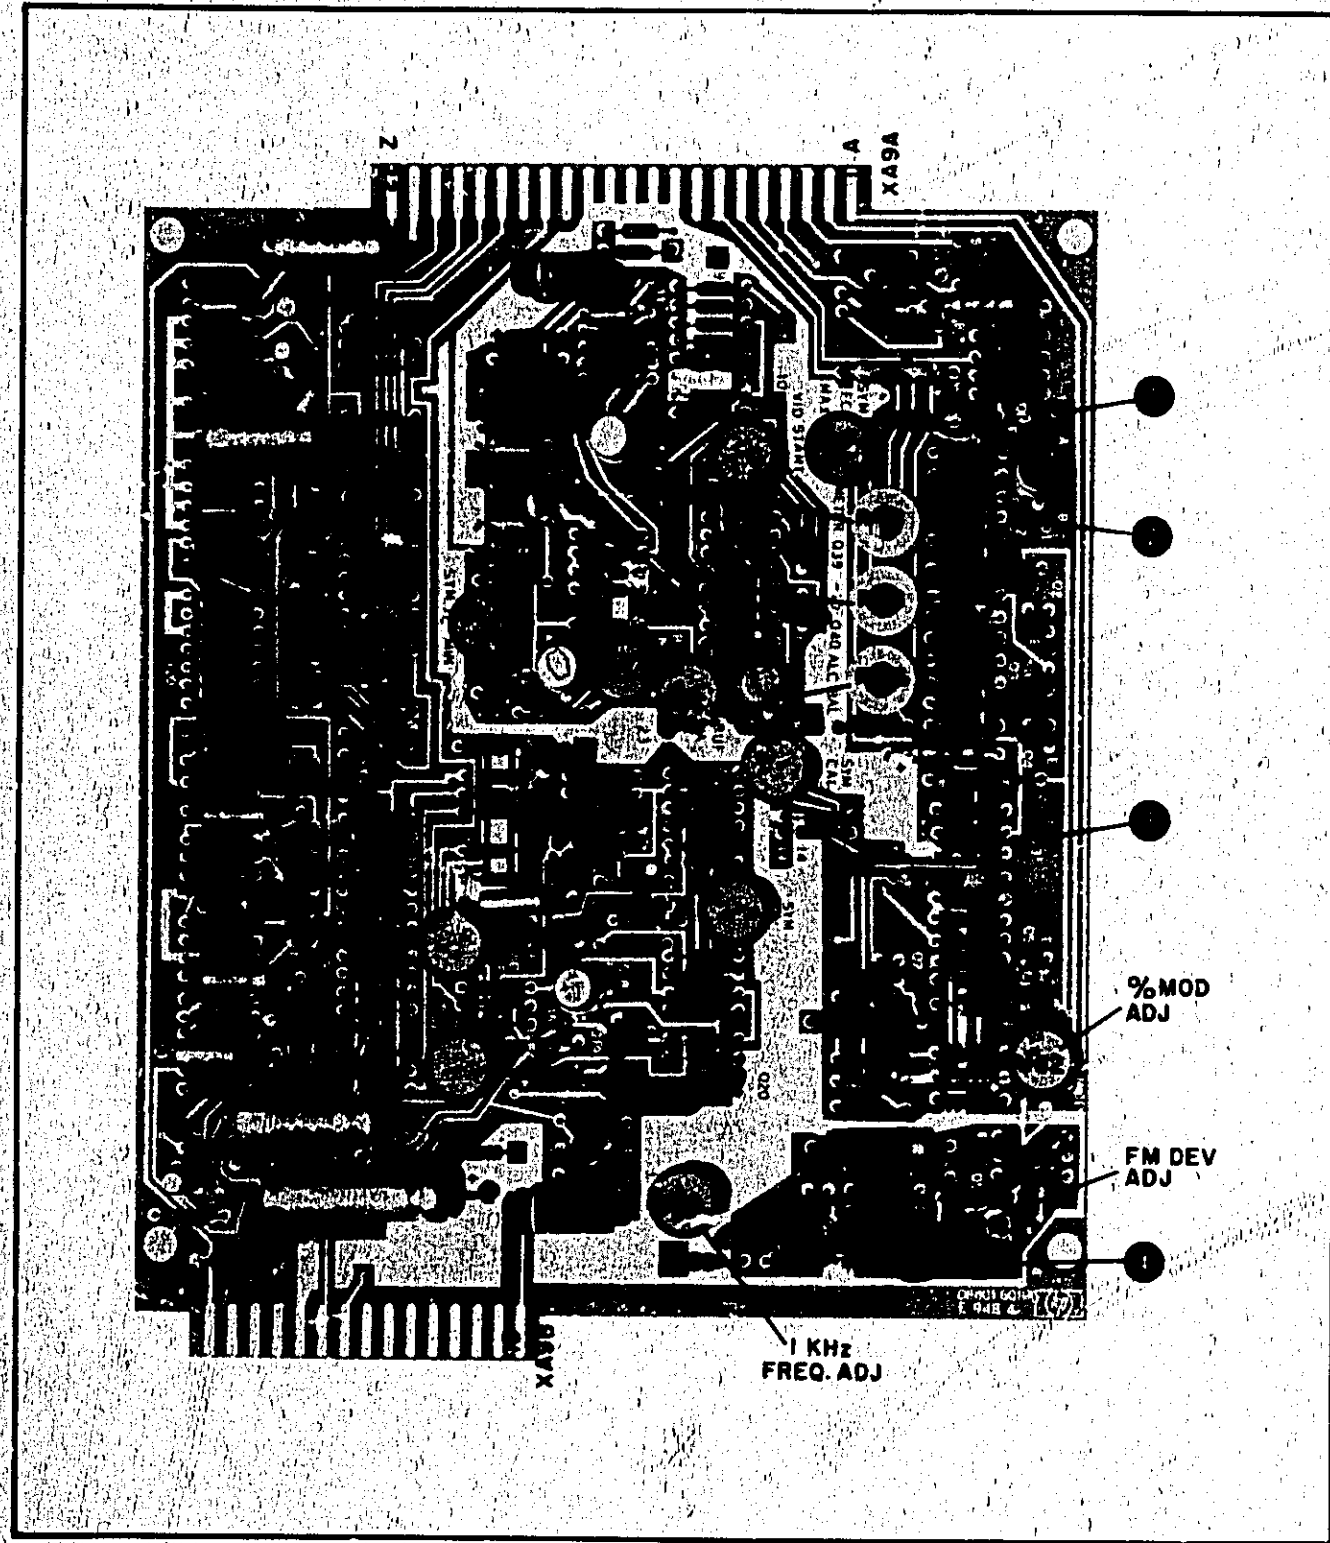


Figure 8-31. P/O A9 Assembly, ALC Amplifier, Component Identification

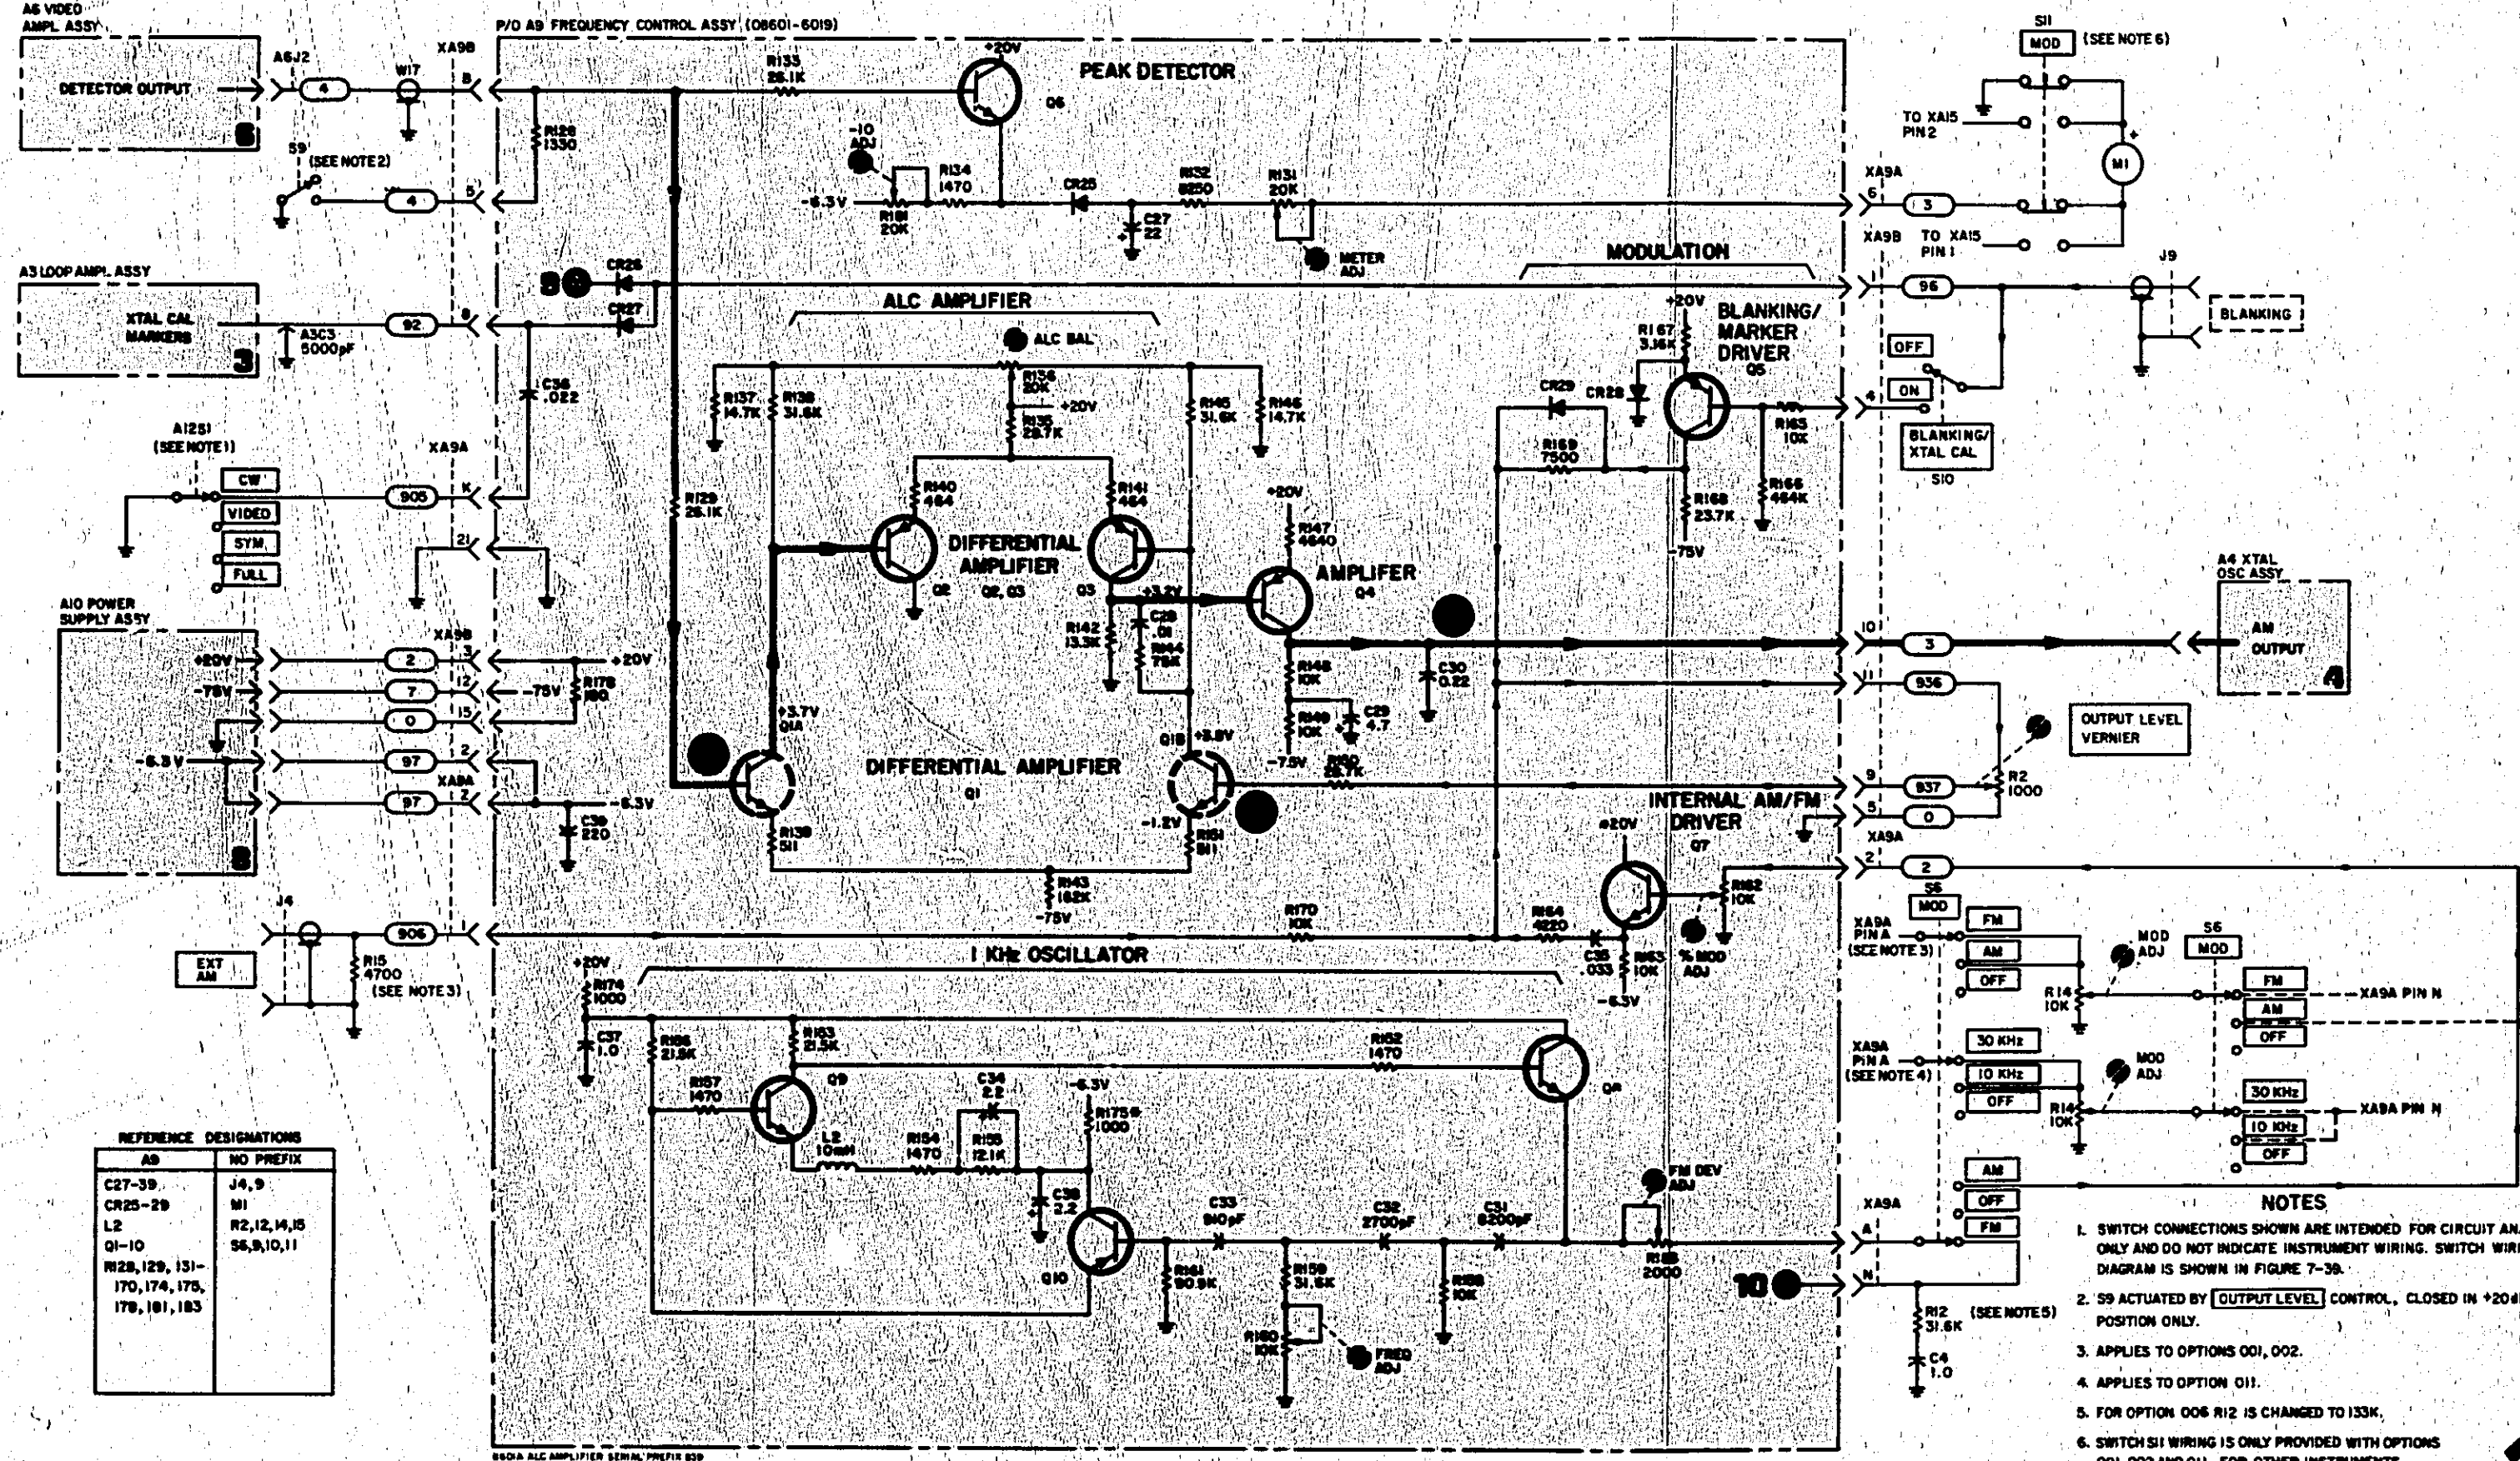


Figure 8-32. P/O A9 Assembly, ALC Circuit, Schematic Diagram

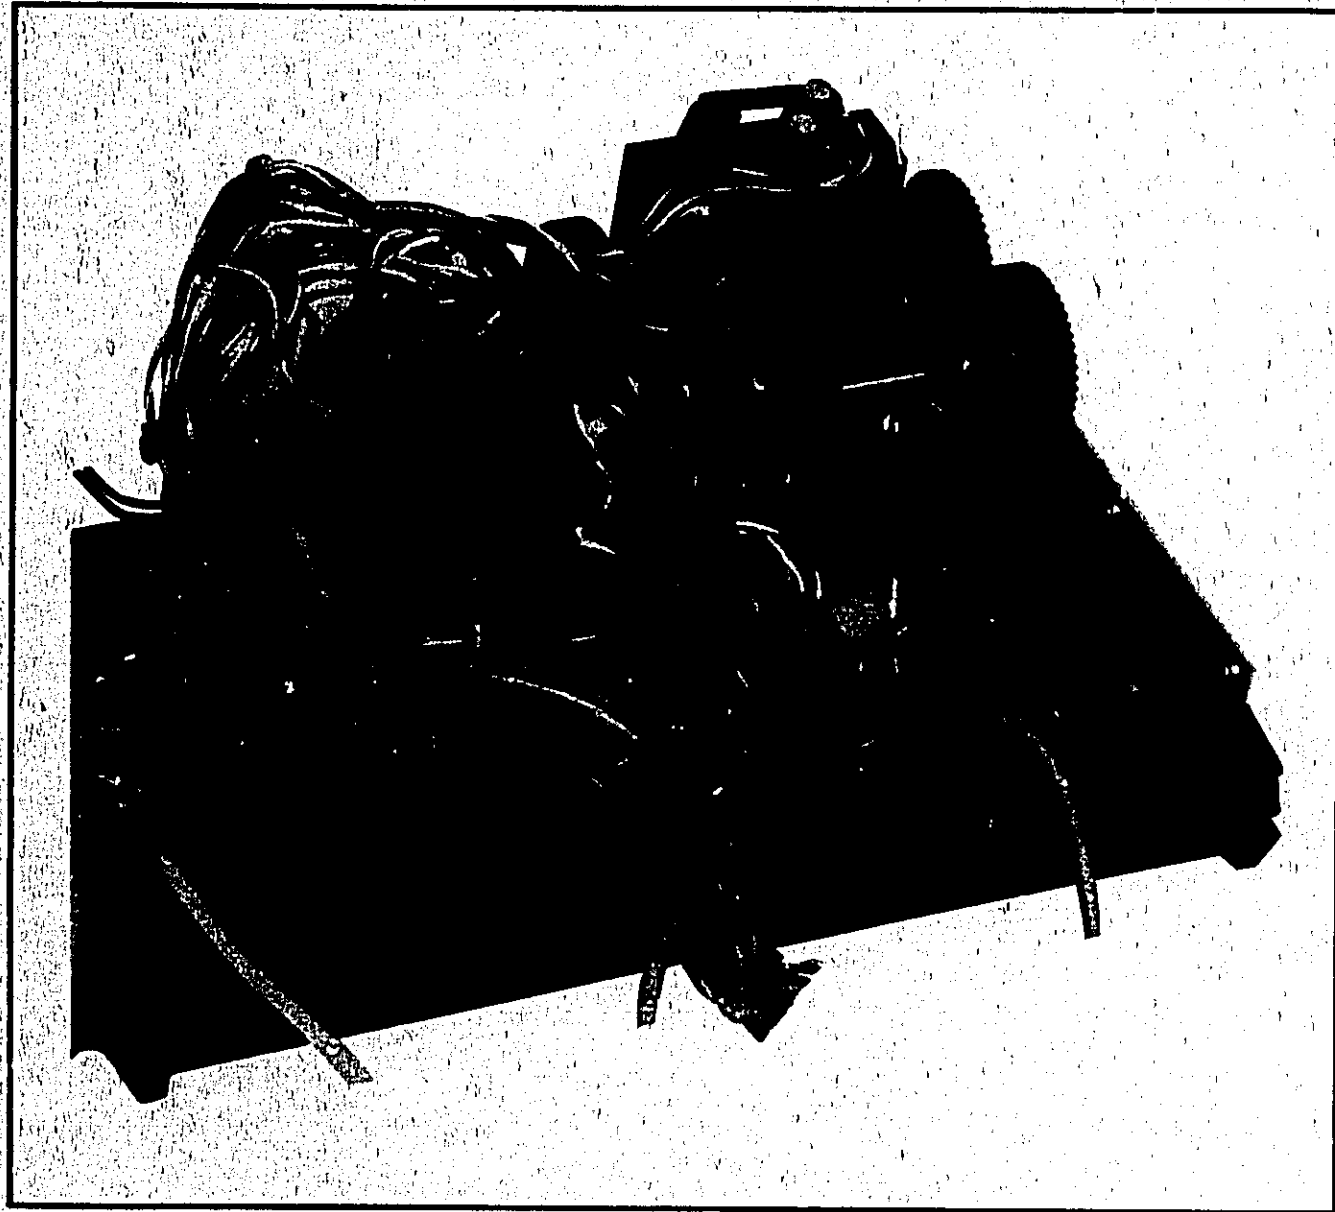


Figure 8-33. Front Panel Wiring, Component Identification

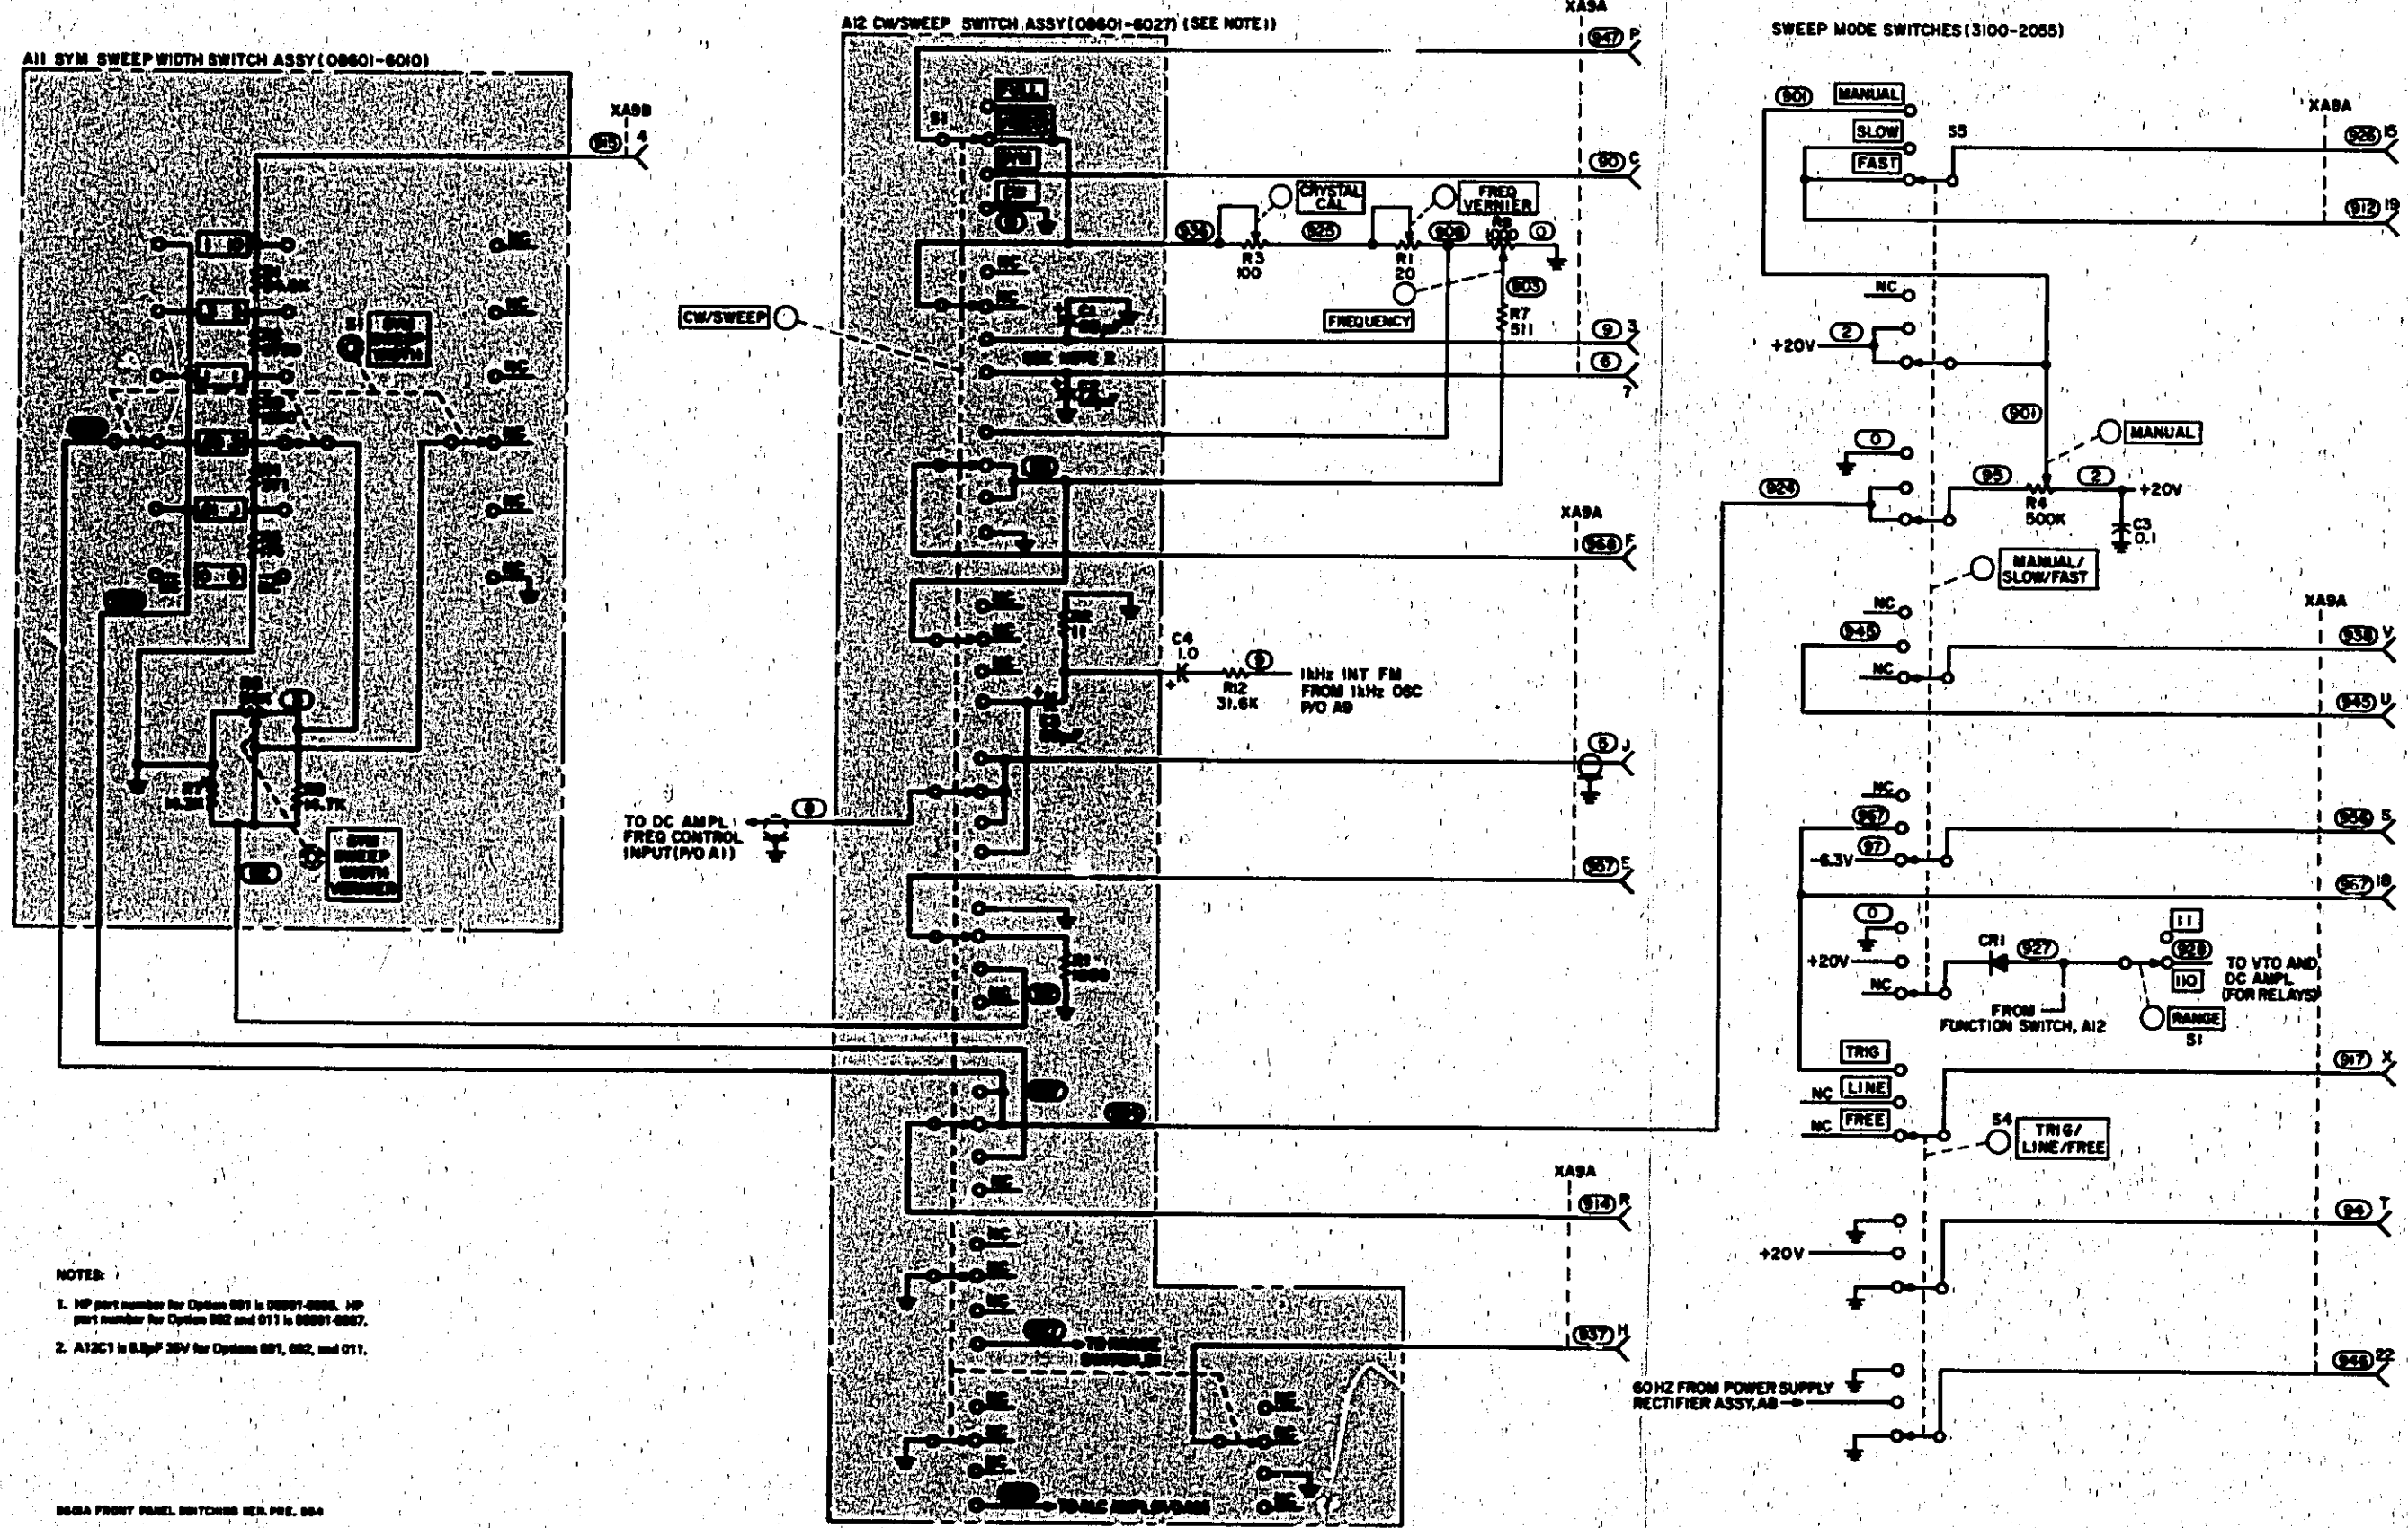


Figure 8-34. S5/A11/A12 Front Panel Switching, Schematic Diagram

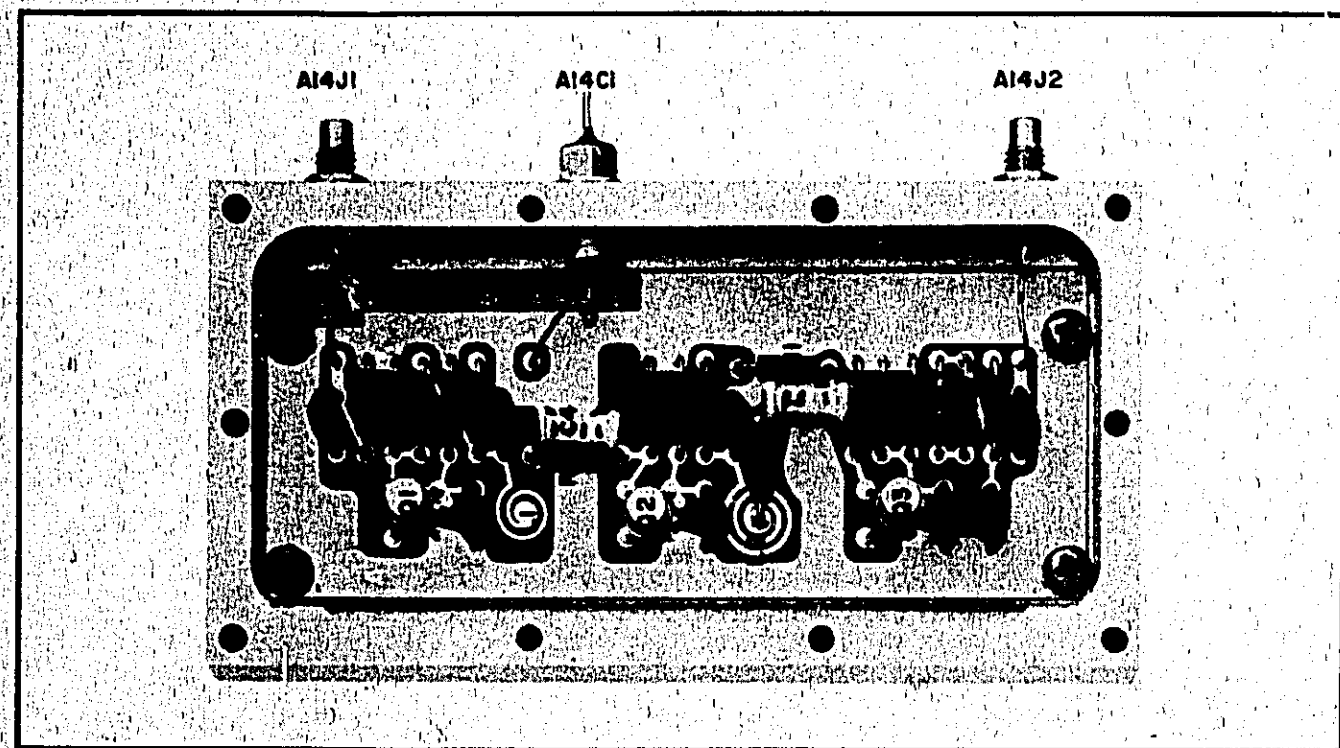


Figure 8-35. A14 Broadband Amplifier, Component Identification

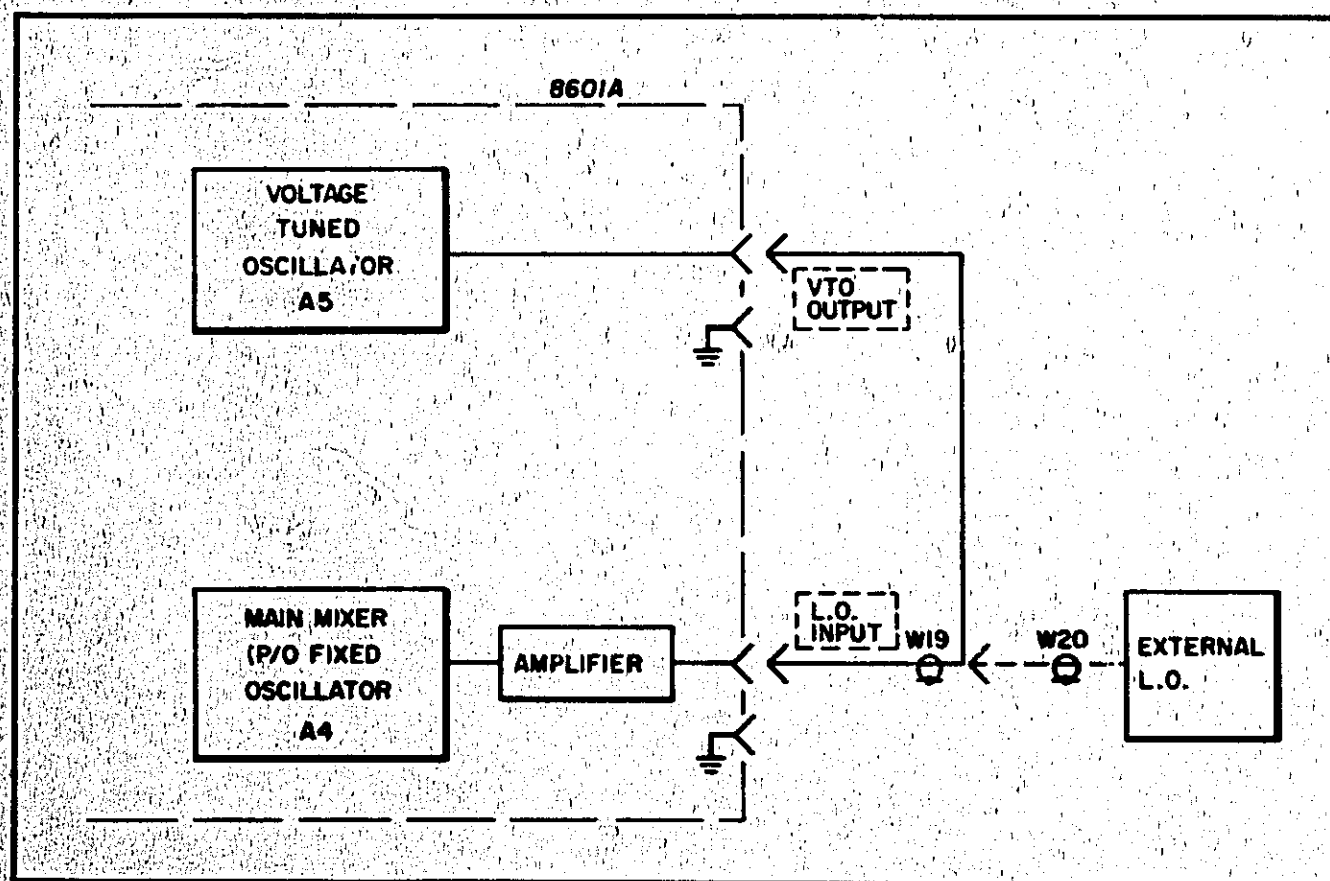


Figure 8-36. Block Diagram, 8601A Option 007

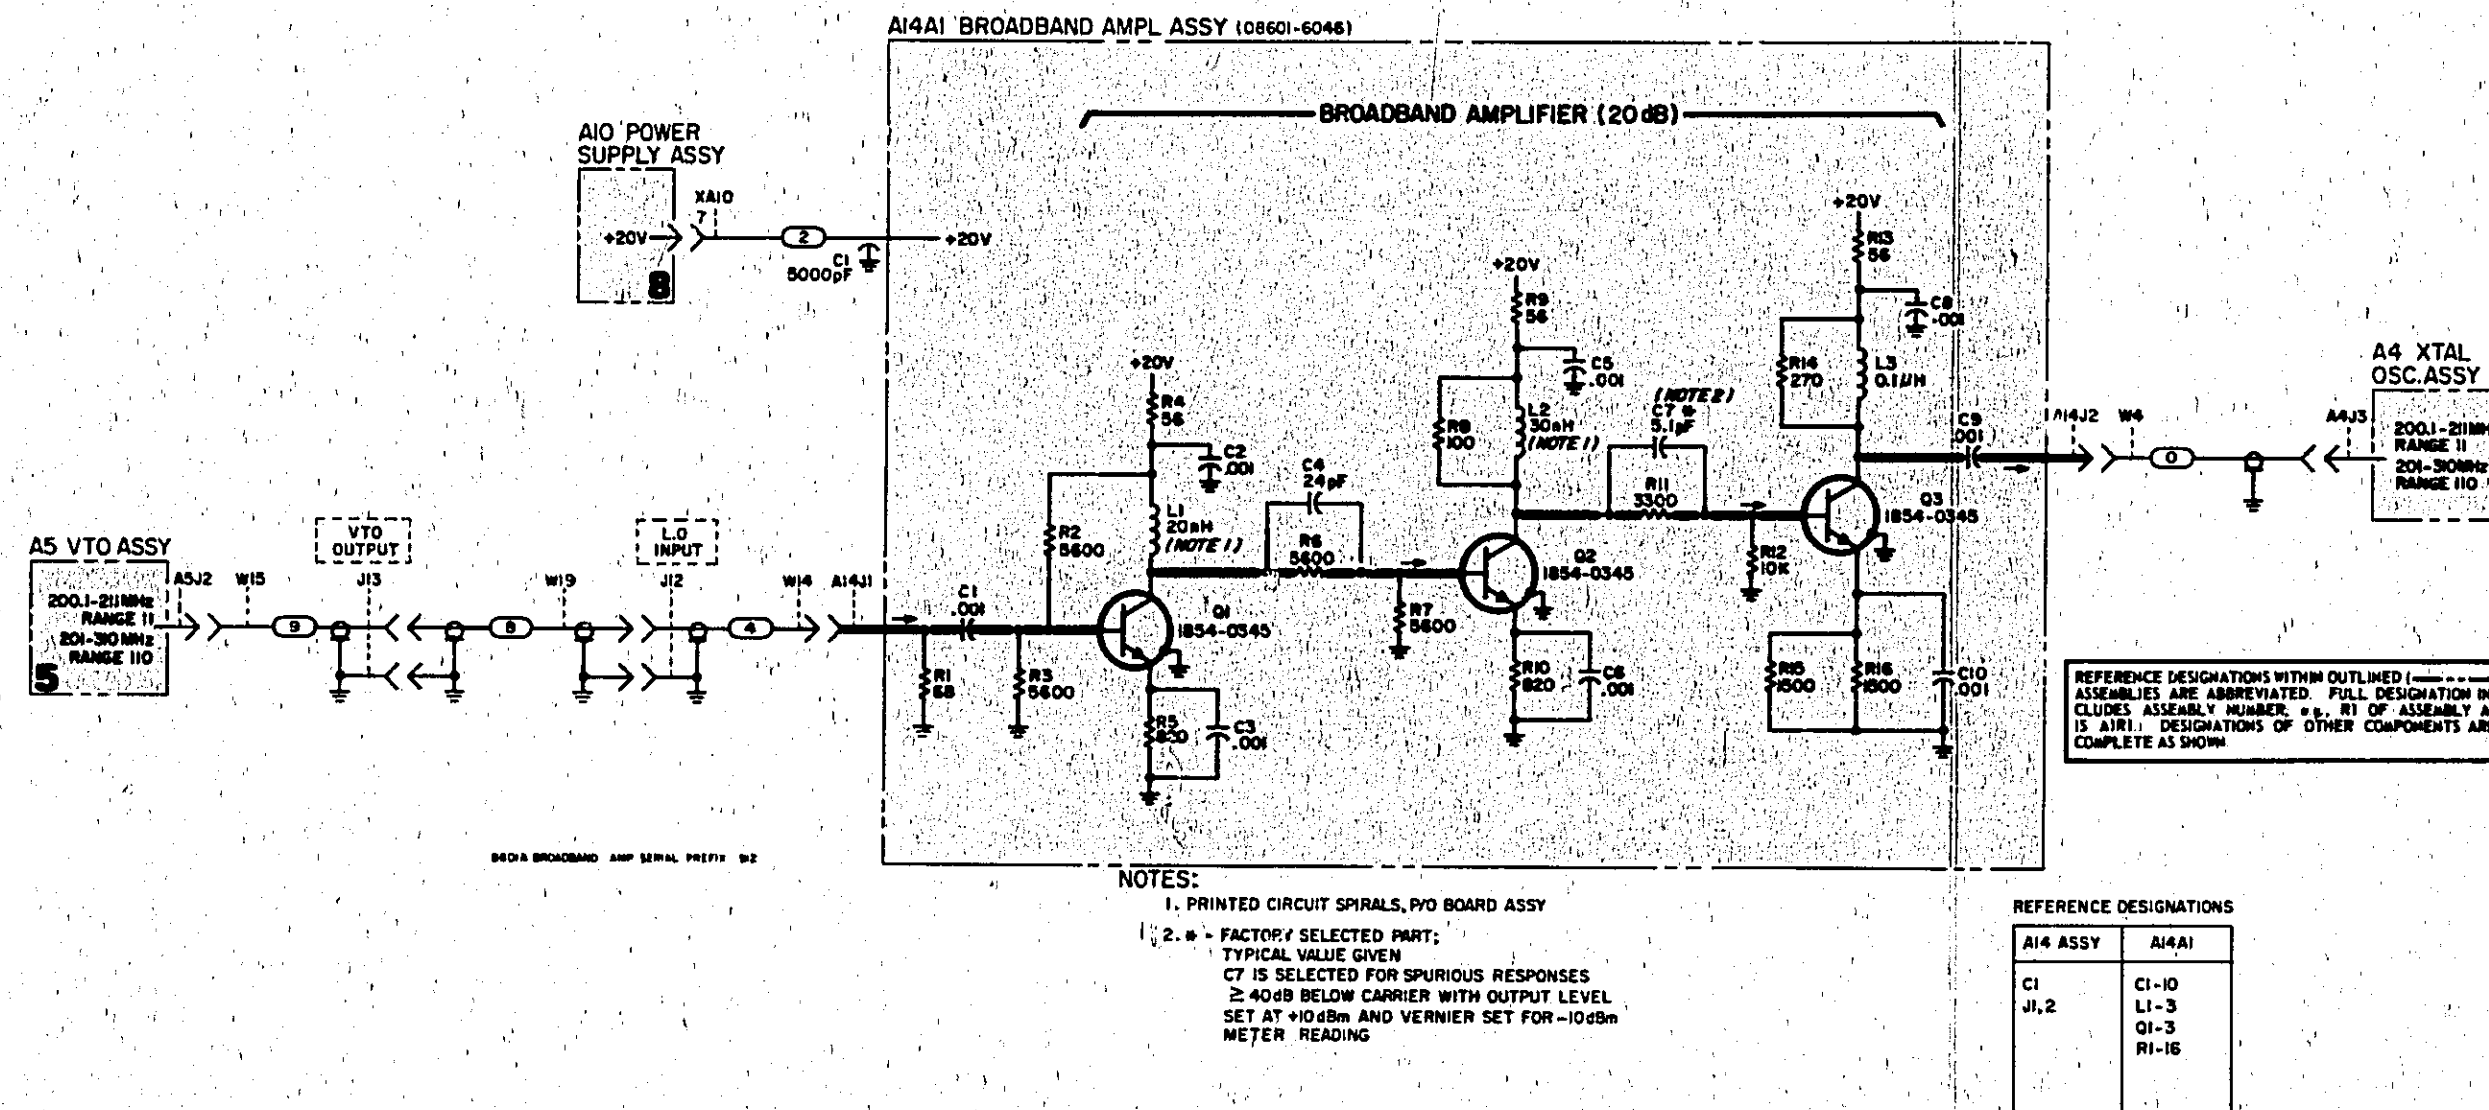


Figure 8-37. A14 Broadband Amplifier, Schematic Diagram (Option 007 Only)

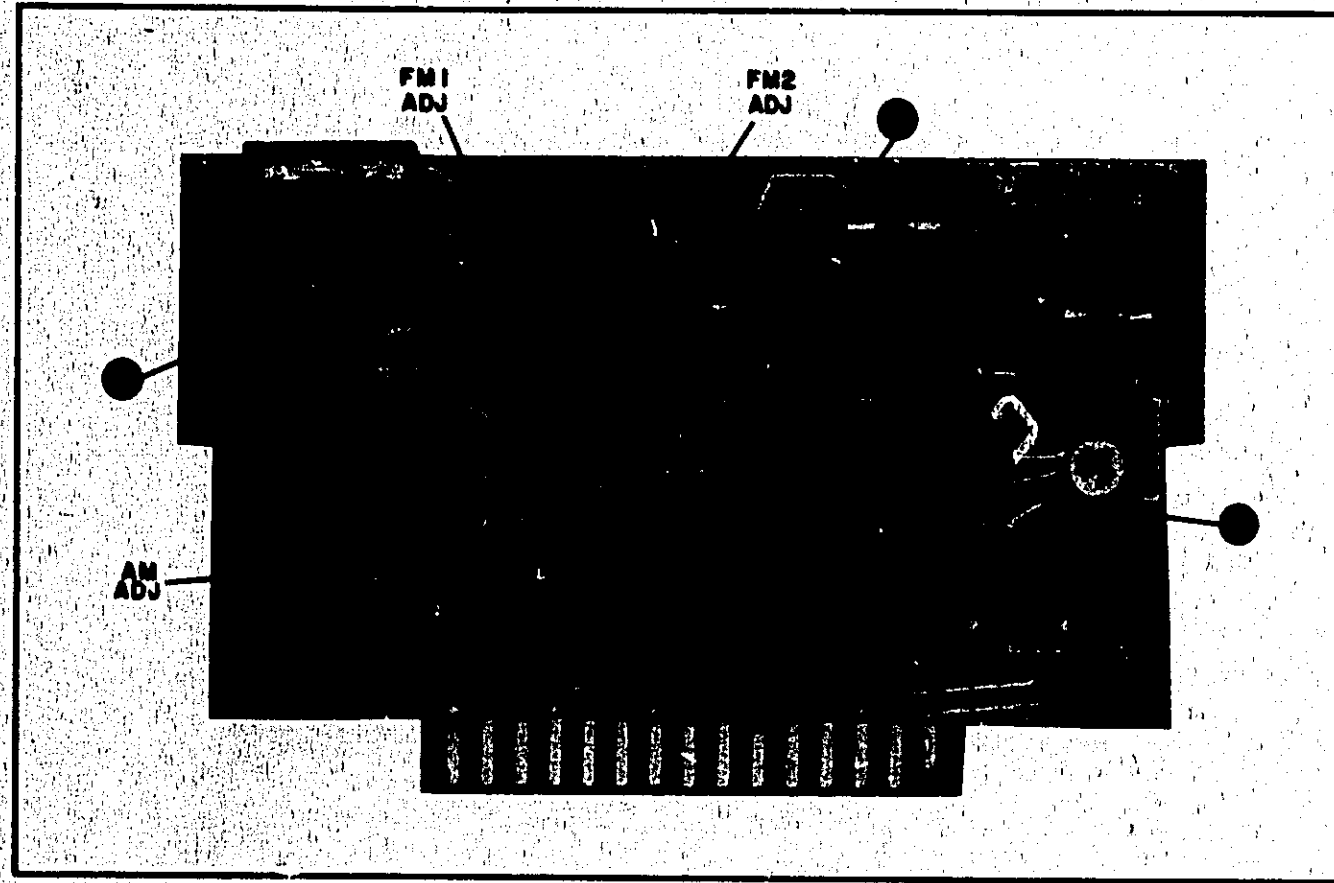


Figure 8-38. A15 AM/FM Monitor, Component Identification

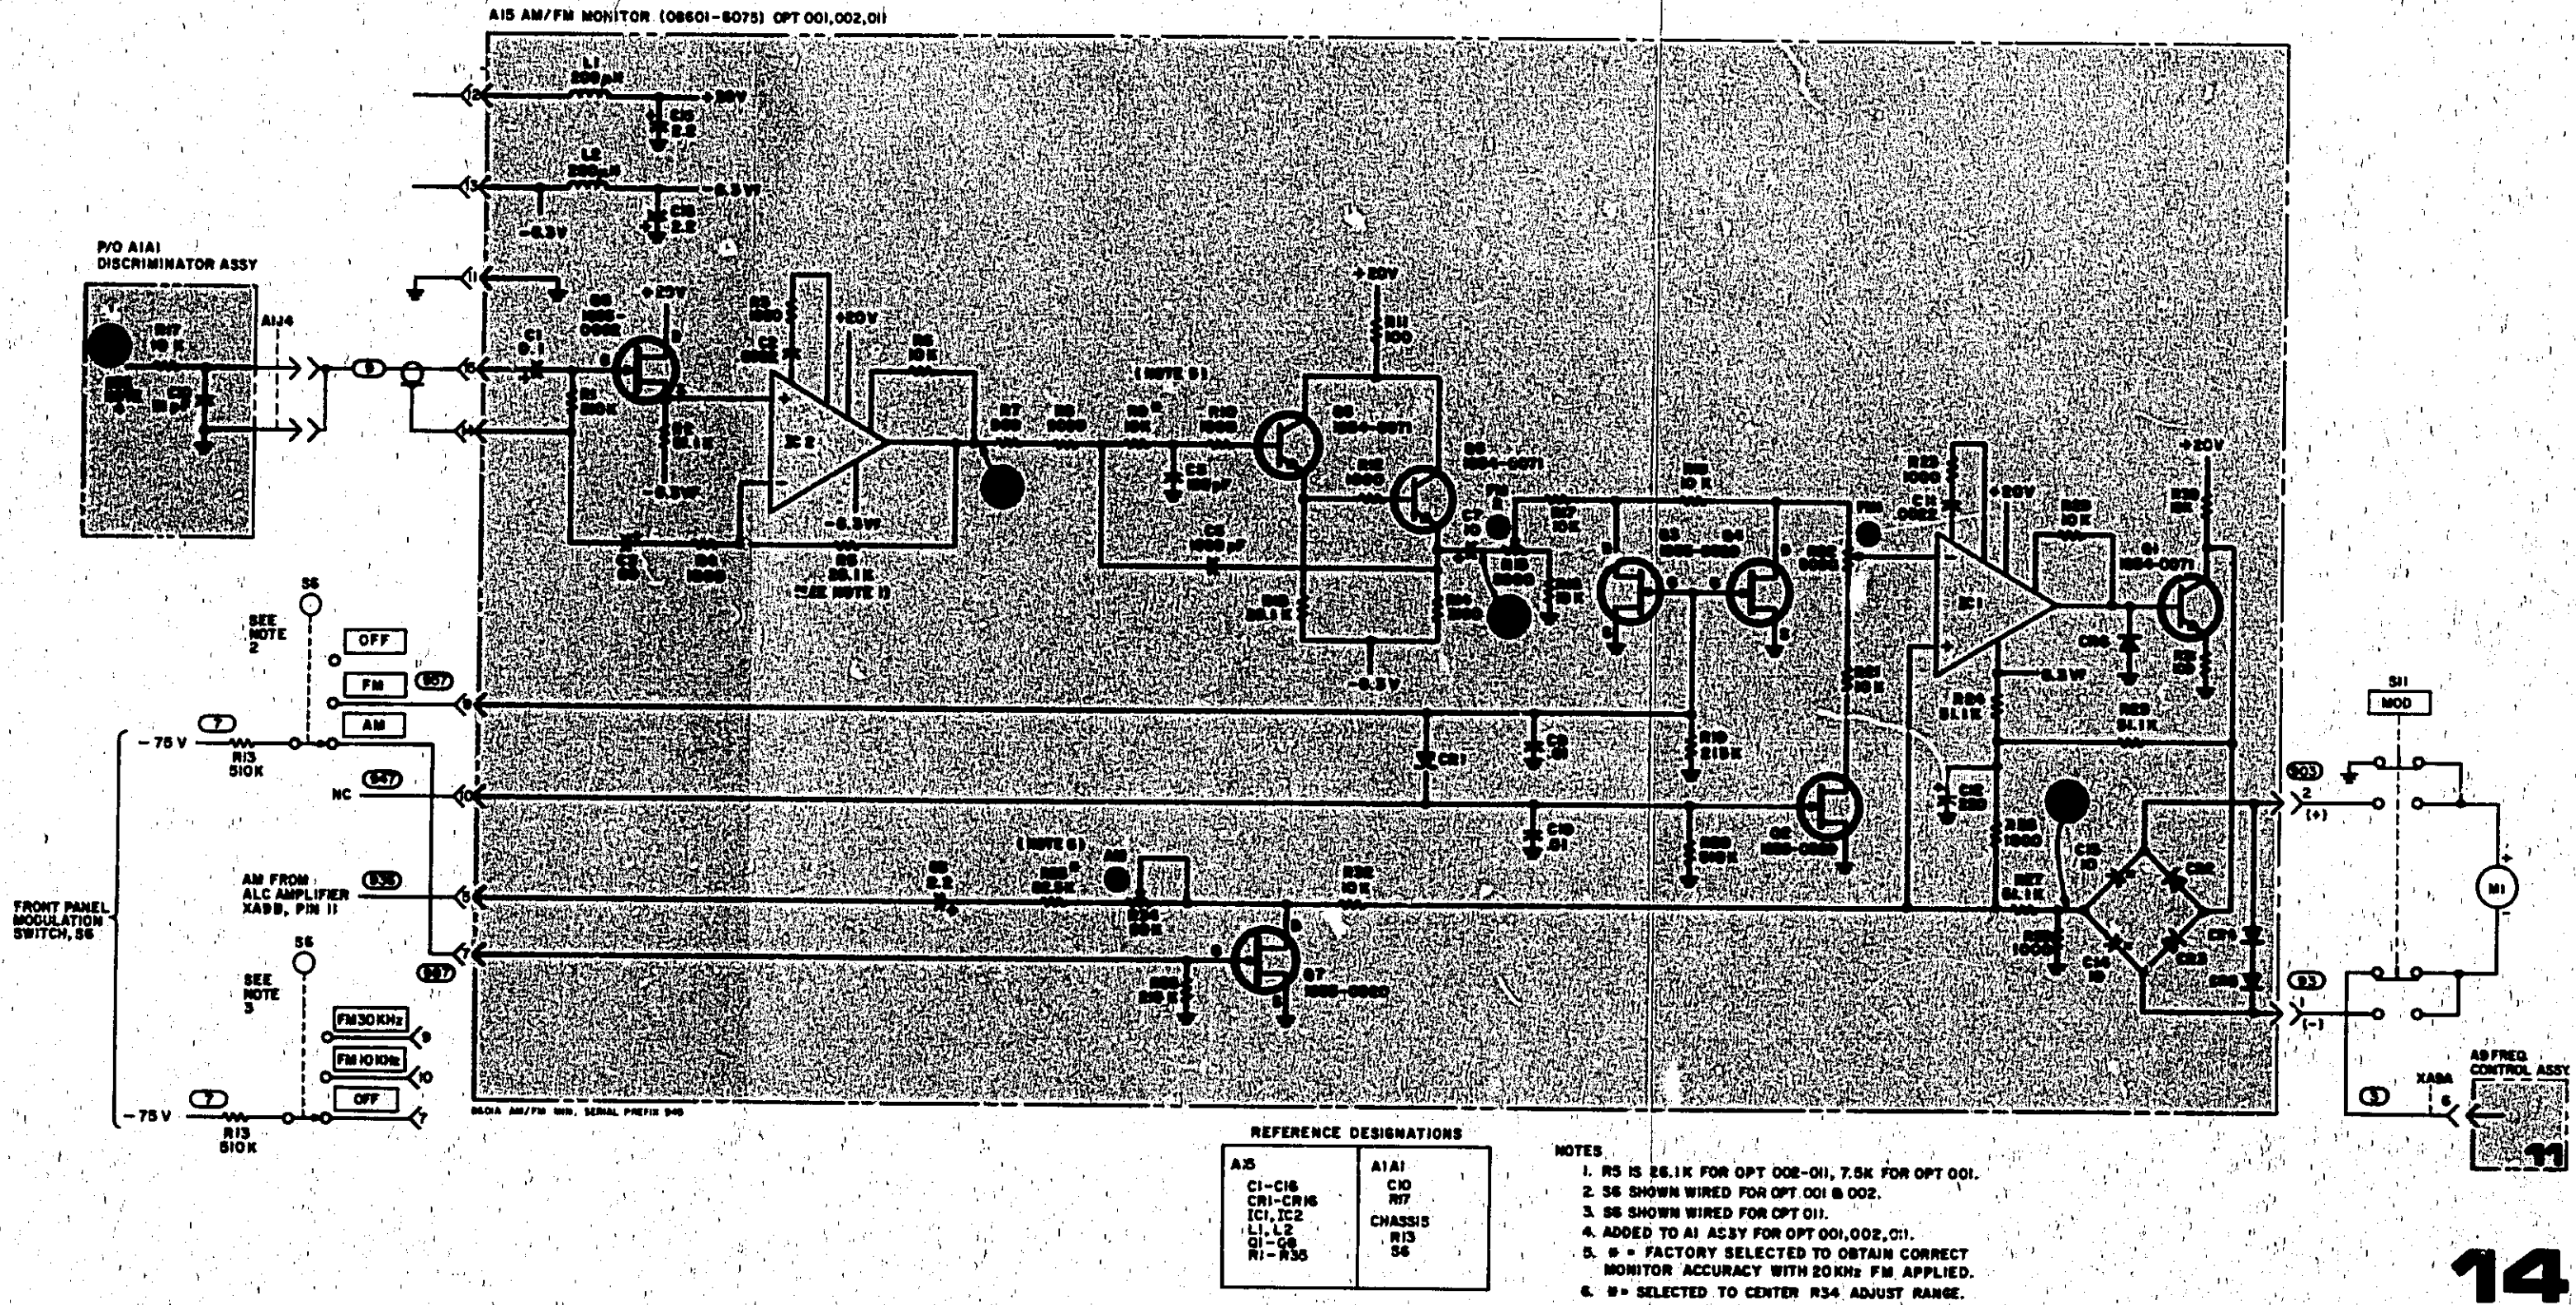


Figure 8-39. A15 AM/FM Monitor, Schematic Diagram (Options 001, 002 and 011 Only)

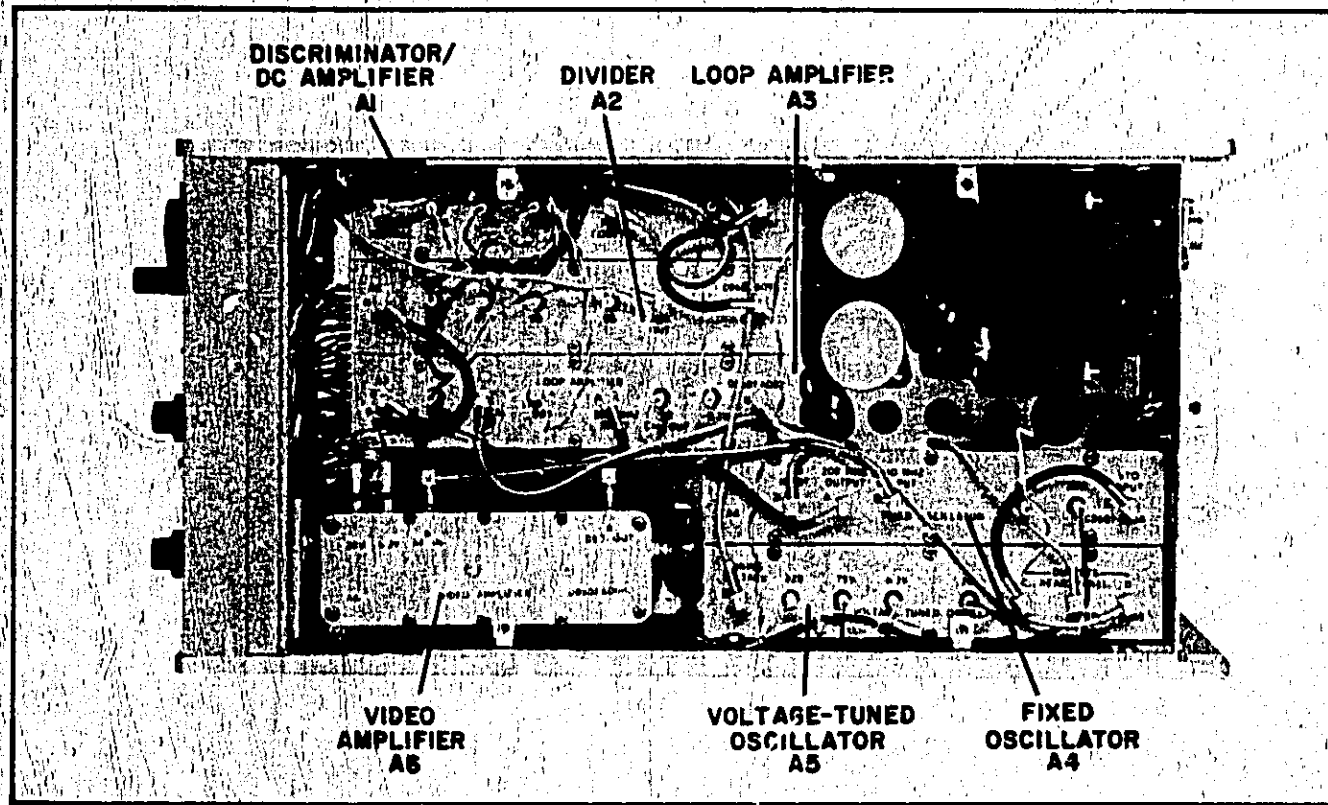


Figure 8-40. 8601A Top View

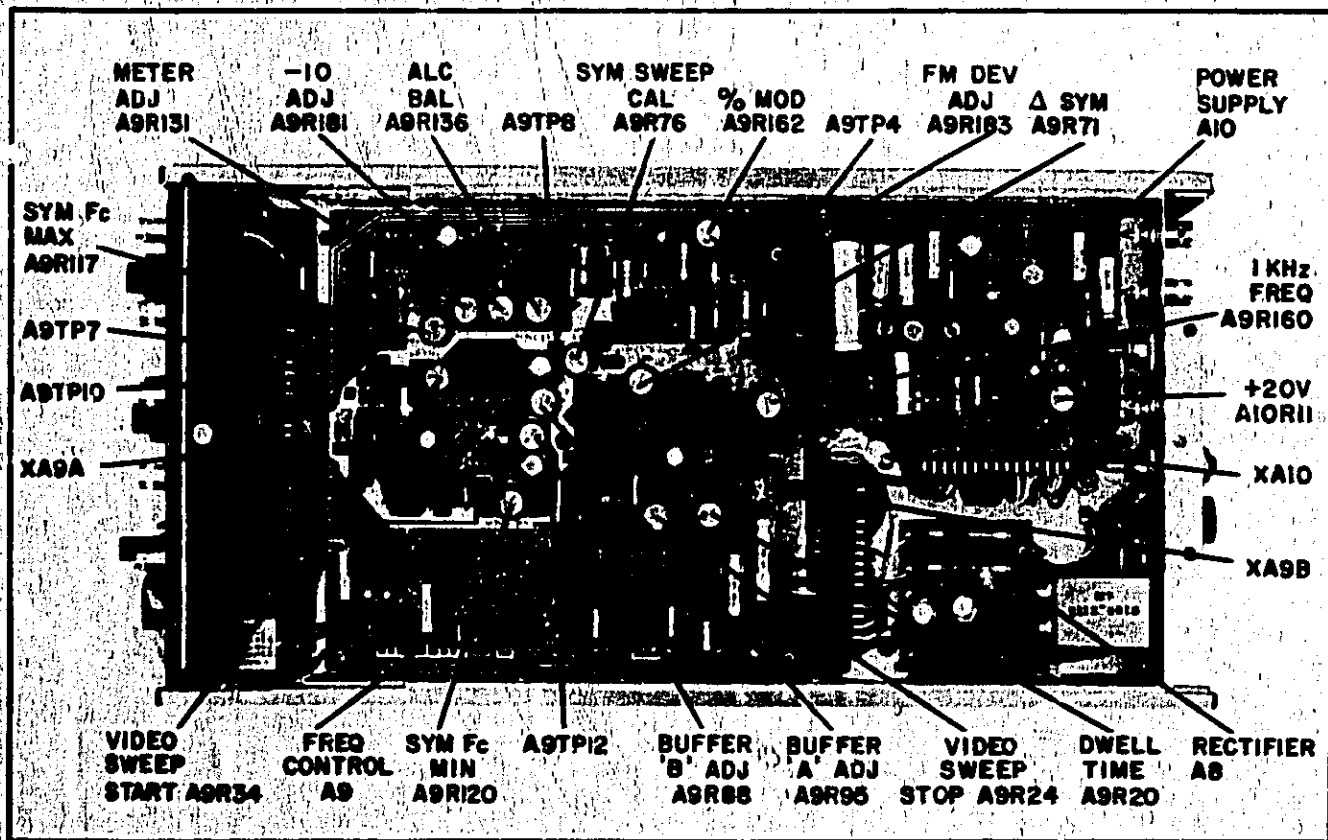


Figure 8-41. 8601A Bottom View

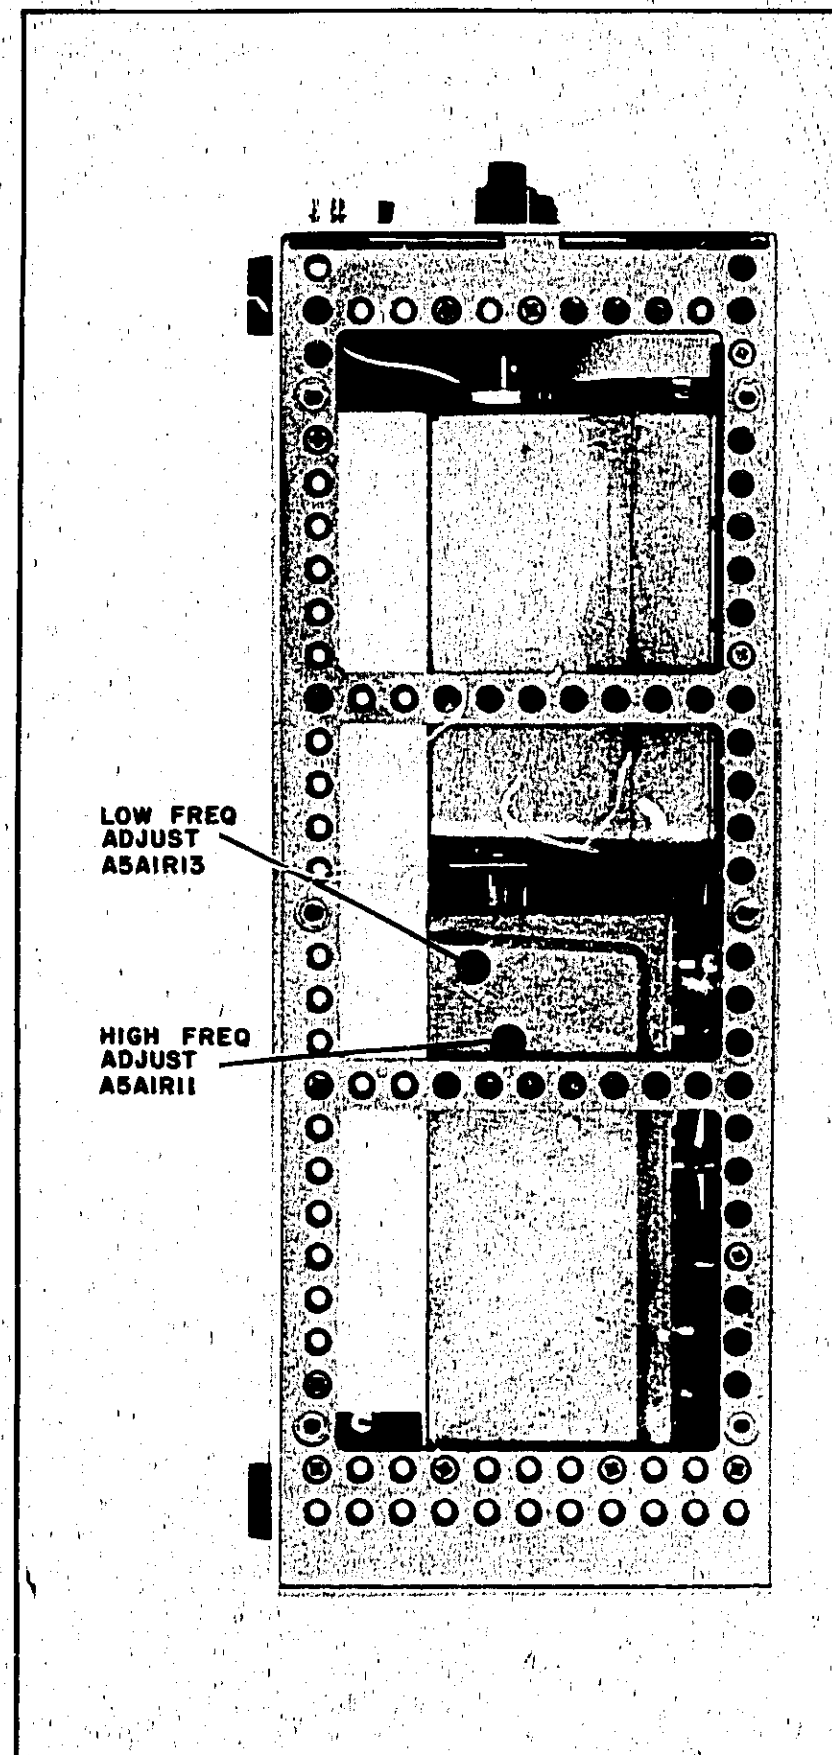


Figure 8-42. 8601A Right Side Adjustments

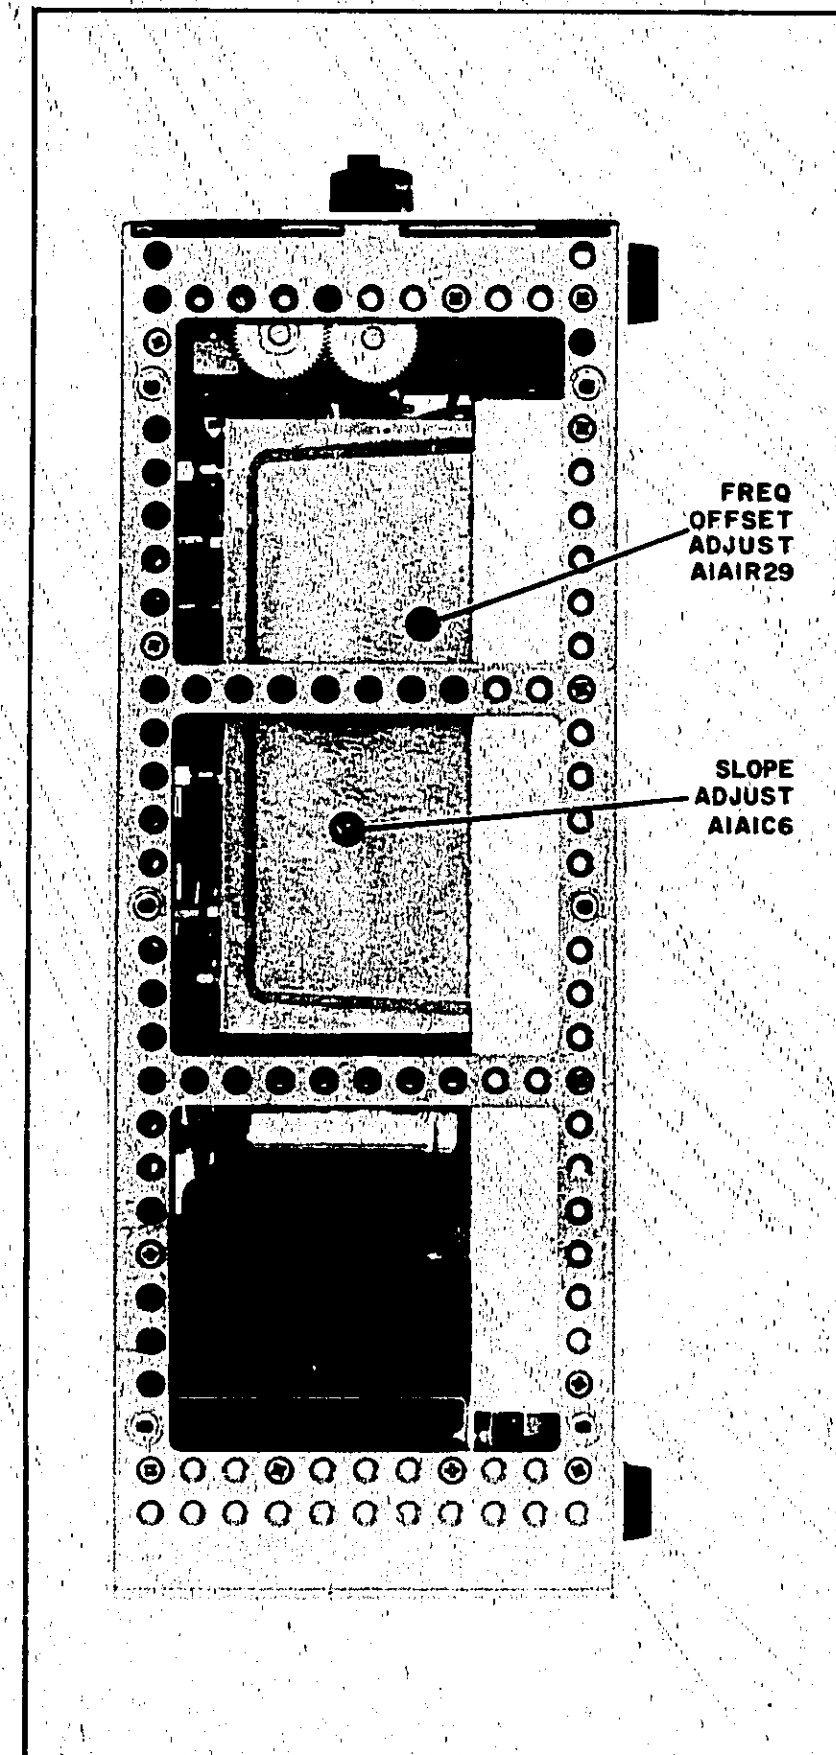


Figure 8-43. 8601A Left Side Adjustments

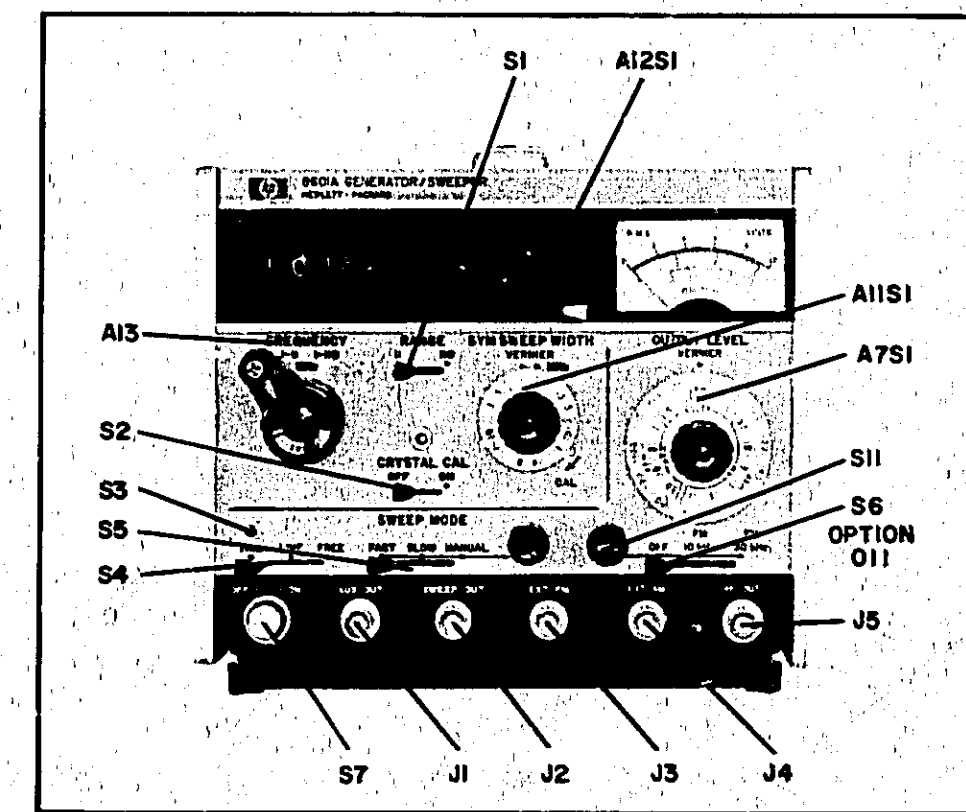


Figure 8-44. 8601A Front Panel, Assembly Location

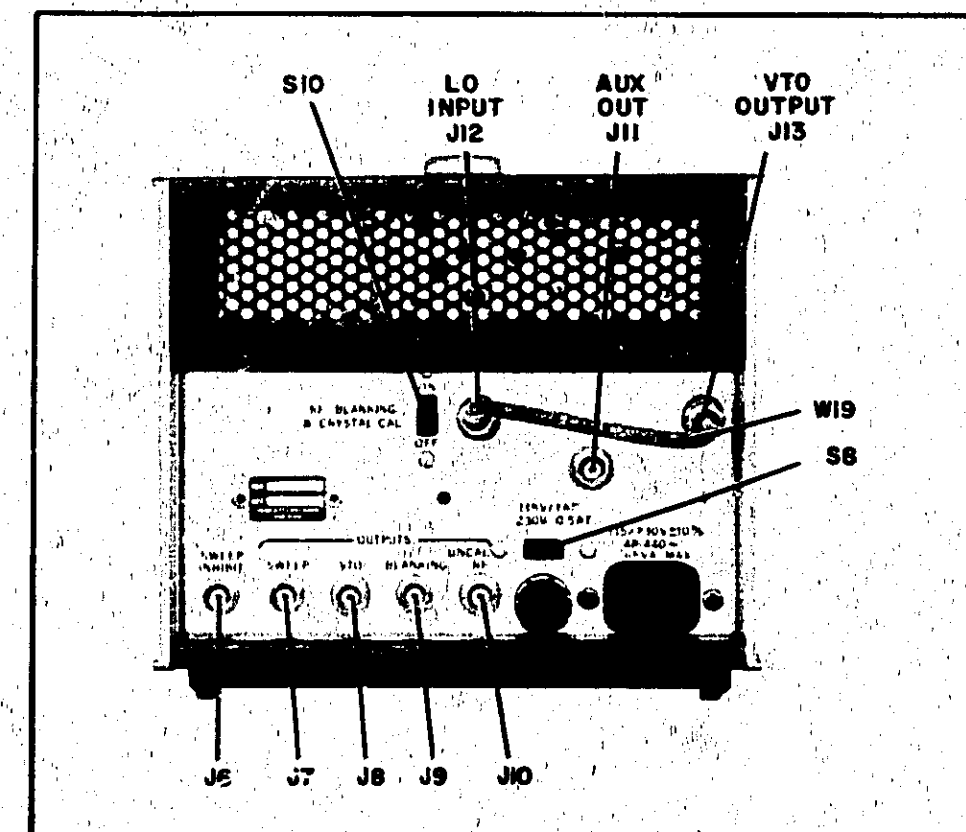


Figure 8-45. 8601A Rear Panel, Assembly Location

MANUAL CHANGES

MANUAL CHANGES

MANUAL IDENTIFICATION

Model Number: 8601A

Date Printed: April 1980

Part Number: 08601-90017

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement, make all ERRATA corrections and all appropriate serial number related changes indicated in the tables below.

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
2224A	1
2435A	1, 2
2609A	1,2,3

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES

► NEW ITEM

NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies, quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

Printed in U.S.A.

1 MARCH 1986

6 pages



**HEWLETT
PACKARD**

ERR/TA**Page 1-2, Table 1-1:**

Change RESIDUAL FM to read:

RESIDUAL FM (in CW): Noise in a 10 kHz bandwidth including line related components. (Dominant Component of RESIDUAL FM is noise.)

Low Range: <50 Hz rms

High Range: <500 Hz rms

Page 6-3, Table 6-2:

Change A1A1Q2, A1A1Q6, A1A1Q7, and A1A1Q13 to 1854-0404, CD 0.

Page 6-10, Table 6-2:

Change A7 to 5086-7359, CD 3.

Delete second reference to A7.

Change A8 to 08601-60123, RECOMMENDED REPLACEMENT—See CHANGE 2.

Page 6-12, Table 6-2:

Change A9E1 to 1826-1058, CD 3, IC OP AMP 8-TO-99 PKG.

Page 6-13, Table 6-2:

Change A9R47 to 0757-0465, CD 6, 100K (Recommended Replacement).

Change A9R48 to 0811-3587, CD 5, RESISTOR - ZERO OHMS 22AWG LEAD DIA (Recommended Replacement).

Page 6-15, Table 6-2:

Change A10 to 08601-60122, RECOMMENDED REPLACEMENT—See CHANGE 2.

Add A10C13, 0160-4182, CD 7, CAPACITOR-FXD .01 μf $\pm 20\%$ 200VDC CER—See CHANGE 2.

Page 6-20, Table 6-2:

Change FL1 to 9100-3875, CD 6.

Page 6-22, Figure 6-2:

Under Ref. Desig. 4, add 08601-00056, CD 5, Rear Panel Opt. 007.

Page 7-1, Paragraph 7-2:

Change the first two sentences to read:

This manual applies directly to HP 8601A instruments serial prefixed 1848. To adapt this manual to instruments with a lower prefix, make the necessary changes listed in Table 7-1.

Page 8-23, Figure 8-25:

Replace Figure 8-25 with Figure 8-25 in this change sheet (CHANGE 2) RECOMMENDED REPLACEMENT.

Page 8-23, Figure 8-26:

To the top of A10C1, add +.

Add C13, .01 μf , between the collector and base of Q7.

Change the A8 Part Number to 08601-60123.

Change the A10 Part Number to 08601-60122.

At the bottom left, change the Serial Prefix to 2435A.

Page 8-25, Figure 8-28:

Change R47 to 100K.

Change R48 to a short.

CHANGE 1

This change replaces the rotary lever switch on the A12 Function Switch Assembly.

Page 6-16, Table 6-2:

Change A12S1 to Part Number 3100-1687, CD 8.

CHANGE 2

Page 6-10, Table 6-2:

Change A8 to 08601-60123.

Page 6-15, Table 6-2:

Change A10 to 08601-60122.

Page 8-23, Figure 8-25:

Replace Figure 8-25 with Figure 8-25 in this change sheet (CHANGE 2).

Page 8-23, Figure 8-26:

Add C13, .01 μ f, between the collector and base of Q7.

Change the A8 Part Number to 08601-60123.


Change the A10 Part Number to 08601-60122.

At the bottom left, change the Serial Prefix to 2435A.

► CHANGE 3

This change replaces the trace between pins 1 and 2 of the A10 power supply board edge connector with an external wire from pin 1 to the negative end of A10CR10. The change improves residual FM performance. (Reference Service Note 8601A-12)

A8

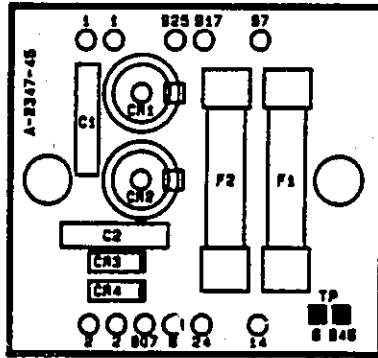

A10

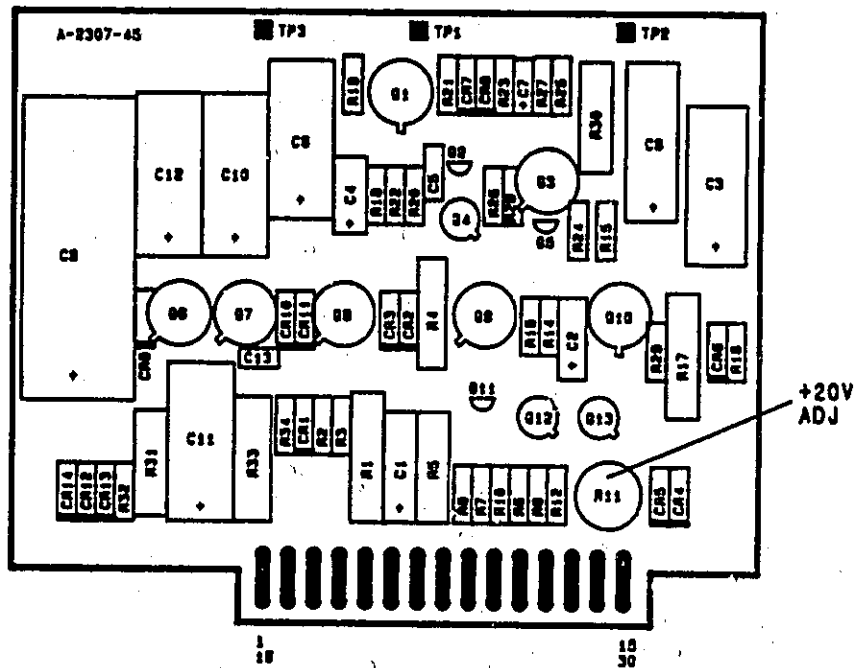


Figure 8-25. A8 Rectifier, A10 Power Supply Component Identification