

5045A
DIGITAL IC TESTER

OPERATING AND SERVICE MANUAL

SERIAL PREFIX: 1932A

This manual applies to Serial Prefix 1932A, unless accompanied by a Manual Change Sheet indicating otherwise.

Copyright HEWLETT-PACKARD COMPANY 1976
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

MANUAL PART NUMBER 05045-90038
Microfiche Part Number 05045-90039

Printed: JUL 1979



CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.

If this product is sold as part of a Hewlett-Packard integrated instrument system, the above warranty shall not be applicable, and this product shall be covered only by the system warranty.

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

TABLE OF CONTENTS

Section	Title	Page
I	GENERAL INFORMATION	1-1
	1-4. Description	1-1
	1-6. Applications	1-1
	1-8. Instrument Identification	1-2
	1-10. Equipment Supplied	1-2
	1-12. Diagnostic Card Kit, 05045-60120	1-2
	1-14. Accessories Available	1-3
	1-15. Operating Accessories	1-3
	1-19. Service Accessory	1-4
	1-21. Complementary Equipment	1-4
	1-23. Specifications	1-4
	1-25. Options	1-4
	1-27. Recommended Test Equipment	1-6
II	INSTALLATION	2-1
	2-1. Introduction	2-1
	2-3. Unpacking and Inspection	2-1
	2-5. Installation Requirements	2-1
	2-11. Power Cables	2-2
	2-14. Repacking for Shipment	2-2
	2-16. Environment During Storage and Shipment	2-3
	2-18. Installation of 24-Pin Option 024	2-3
	2-20. Installation and Rack Mount Option 908	2-3
	2-22. Automatic Handler Signals	2-3
	2-24. Installation and Operation of Monostable Multivibrator Adapter A36	2-3
III	OPERATION	3-1
	3-1. Introduction	3-1
	3-3. Program Cards	3-1
	3-5. Two Tests Available	3-2
	3-7. Loading the Card	3-2
	3-9. Verification of Load Operation	3-3
	3-11. Program Protect Tabs	3-3
	3-13. Self Check Procedure	3-7
	3-15. Loading the IC	3-7
	3-17. Multiple Testing of a Single IC	3-7
	3-20. Multiple Test Setup	3-7
	3-22. Retrieving Pass/Fail Information	3-7
	3-25. Duplicating Magnetic Cards	3-8
	3-27. Duplicating Procedure	3-8
	3-29. Making a ROM Program Card	3-8
	3-31. Verification	3-8
	3-34. Card Reader Cleaning Card	3-9
IV	4-1. INTRODUCTION	4-1
	4-3. Equipment Required	4-1
	4-5. Operational Verification and Performance Tests	4-1
	4-7. In-Cabinet Performance Test Card	4-1
	4-9. Operational Verification Test	4-1

TABLE OF CONTENTS (Continued)

Section	Title	Page
4-12.	Part I: Self Checks 1, 2 and 3	4-2
4-13.	Self Check 1	4-2
4-14.	Self Check 2	4-2
4-15.	Self Check 3	4-2
4-16.	Part II: R-Pack Operational Verification Tests	4-2
4-18.	V/I Performance Checks	4-3
4-22.	+7V, +7 mA Mode	4-3
4-23.	1V, 1 mA	4-4
4-24.	-7V, -7 mA	4-4
4-25.	-1V, -1 mA	4-4
4-26.	Pin Driver C-Current Modes Check	4-5
4-28.	7V, 7 mA +12, C-5	4-5
4-29.	1V, 1 mA +2, C-1	4-5
4-30.	-7V, -7 mA -12, C+5	4-5
4-31.	-1V, 1 mA -2, C+1	4-6
4-32.	Failure Detection Circuitry Check	4-6
4-35.	Performance Test	4-7
4-37.	DAC Adjustment Check	4-8
4-39.	Test 1: DAC REF 7.5V	4-8
4-41.	Test 2: -V Zero 0V	4-8
4-43.	Test 3: +V Zero 2 0V	4-8
4-45.	Test 4: "+6.5V Logic 1"	4-8
4-47.	Test 5: "+6.5V Logic 0"	4-9
4-49.	Test 6: -6.5V Logic 1	4-9
4-51.	Test 7: -6.5V Logic 0	4-9
4-53.	Test 8: Current Gen, +10 mA	4-9
4-55.	Test 9: Current Gen, -10 mA	4-9
4-57.	Test 10: +I Zero; +10 μ A	4-10
4-59.	Test 11: -I Zero, -10 μ A	4-10
4-62.	Analog Voltage Check	4-10
4-65.	Part I	4-11
4-66.	Test 1: +7.5V Pos High Range, High End	4-11
4-67.	Test 2: +1.9V Pos High Range, Low End	4-11
4-68.	Test 3: +1.8V Pos Low Range High End	4-11
4-69.	Test 4: +0.1V Pos Low Range, Low End	4-11
4-70.	Test 5: -7.5V Neg High Range, High End	4-11
4-71.	Test 6: -1.9V Neg High Range, Low End	4-11
4-72.	Test 7: -1.8V Neg Low Range, High End	4-11
4-73.	Test 8: -0.1V Neg Low Range, Low End	4-12
4-74.	Part II	4-12
4-76.	Test 1: +5V Logic 1	4-12
4-77.	Test 2: +5V Logic 0	4-12
4-78.	Test 3: -5V Logic 1	4-12
4-79.	Test 4: -5V Logic 0	4-12
4-80.	Test 5: +1V Logic 1	4-12
4-81.	Test 6: +1V Logic 0	4-12
4-82.	Test 7: -1V Logic 1	4-13
4-83.	Test 8: -1V Logic 0	4-13
4-84.	Analog Current Check	4-13

TABLE OF CONTENTS (Continued)

Section	Title	Page
4-86.	Part I — Low Current Range	4-13
4-87.	Part II — High Range	4-13
4-88.	Part III — Continuous Current Modes	4-13
	Part III — Voltage Verification for Current Modes	4-13
4-90.	Part I — Analog Current Check Low Range	4-13
4-91.	Test 1: +20 mA	4-14
4-92.	Test 2: +2.6 mA	4-14
4-93.	Test 3: +2.4 mA	4-14
4-94.	Test 4: +10 μ A	4-14
4-95.	Test 5: -20 mA	4-14
4-96.	Test 6: -2.6 mA	4-14
4-97.	Test 7: -2.4 mA	4-14
4-98.	Test 8: -10 μ A	4-14
4-99.	Analog Current Check 200 mA Range	4-15
4-101.	Continuous Current Modes	4-15
4-104.	Continuous Current Modes 1-8	4-15
4-105.	Test 1	4-15
4-106.	Test 2	4-15
4-108.	Continuous Current Modes 9-16	4-16
4-109.	Continuous Current Modes 17-24	4-16
4-110.	Voltage Verification for Current Modes	4-16
4-113.	Cross Talk	4-17
4-115.	Cross Talk Part I	4-17
4-116.	Test 1: +V -I	4-17
4-117.	Test 2: +V -I	4-17
4-118.	Test 3: +V +I	4-17
4-119.	Test 4: +V +I	4-17
4-120.	Test 5: -V +I	4-17
4-121.	Test 6: -V +I	4-17
4-122.	Test 7: -V -I	4-17
4-123.	Test 8: -V -I	4-18
4-125.	Test 9: +I +V	4-18
4-126.	Test 10: +I +V	4-18
4-127.	Test 11: +I -V	4-18
4-128.	Test 12: +I -V	4-18
4-129.	Test 13: -I -V	4-18
4-130.	Test 14: -I -V	4-18
4-131.	Test 15: -I +V	4-18
4-132.	Test 16: -I +V	4-18
4-133.	Cross Talk Part II	4-19
4-134.	Failure Detection Circuitry Check	4-20
4-136.	V and I Results — Voltmeter/Ammeter Printout Check	4-21
4-138.	Voltage Printout Feature	4-21
4-139.	V/I 5V Verification	4-21
4-140.	V/I -5V Verification	4-22
4-141.	V/I +1V Verification	4-23
4-142.	V/I -1V Verification	4-23
4-143.	V/I Results Current Check	4-24
4-144.	V/I 7 mA Verification	4-24
4-145.	V/I -7 mA Verification	4-25

TABLE OF CONTENTS (Continued)

Section	Title	Page
	4-146. V/I Offset Check	4-25
	4-147. V/I Pos Offset	4-25
	4-148. V/I Neg Offset Check	4-25
	4-149. Fast Edge Check	4-25
	4-151. Fast Edge Signals for Extended Test Heads	4-27
	4-153. Relays Check	4-27
	4-155. Op Code Check	4-29
	4-157. Printer Check	4-29
	4-158. Automatic IC Handler Signals Check (Optional)	4-29
	4-162. Cable	4-29
	4-164. Procedure	4-30
V	ADJUSTMENTS	5-1
	5-1. Introduction	5-1
	5-3. Test Equipment Required	5-1
	5-5. Adjustments	5-1
	5-7. Standard Front Panel Switch Settings	5-1
	5-9. Power Supply Check and Adjustments	5-2
	5-11. A9 4 MHz Clock Check and Adjustment	5-3
	5-12. Printer Group Enable Timing Adjustment	5-3
	5-13. A11 DAC Voltage Adjustment	5-3
	5-17. "DAC REF" Adjustment	5-4
	5-18. Voltage Generator Adjustment	5-4
	5-20. Current Generator Adjustment	5-9
VI	REPLACEABLE PARTS	6-1
	6-1. Introduction	6-1
	6-3. Ordering Information	6-3
	6-5. HP Part Number Organization	6-3
	6-7. Component Parts and Materials	6-3
	6-10. General Usage Parts	6-4
	6-12. Specific Instrument Parts	6-4
VII	MANUAL CHANGES	7-1
	7-1. Introduction	7-1
	7-3. Newer Instruments	7-1
	7-5. Older Instruments	7-1
VIII	MAINTENANCE AND TROUBLESHOOTING	8-1
	8-1. Introduction	8-1
	8-3. Assembly Identification	8-1
	8-5. Test Equipment Required	8-2
	8-7. Access to Instrument	8-2
	8-10. PC Board Removal	8-3
	8-13. Disassembly of the Test Head Assembly	8-3
	8-15. A35 Magnetic Card Reader Maintenance	8-3
	8-17. Card Reader Removal	8-4
	8-18. Cleaning Solvents	8-4
	8-20. Cleaning the Card Driving Wheels	8-4
	8-22. Cleaning the Motor Commutator Contacts	8-5

TABLE OF CONTENTS (Continued)

Section	Title	Page
8-24.	Cleaning the Read/Write Head	8-5
8-26.	Use of Cleaning Card for Magnetic Card Reader	8-5
8-28.	Lamp Replacement	8-6
8-32.	A34 Thermal Printer Maintenance	8-7
8-34.	Printer Removal and Disassembly	8-7
8-40.	A26 Card Reader/Printer Interface Board Checkout	8-8
8-41.	PC Boards Requiring Special Handling and Cleaning	8-8
8-45.	Repair	8-9
8-46.	Printed Circuit Component Replacement	8-9
8-48.	Replacing Integrated Circuits	8-9
8-50.	Troubleshooting	8-9
8-57.	CPU Troubleshooting	8-10
8-59.	Non-sequential Troubleshooting Hints for 5045A That Fails After TEST Button is Pressed	8-16
8-64.	Printer Problems	8-19
8-66.	Card Reader Problems	8-19
8-68.	Troubleshooting Using Flow Diagram and ROM Listing ...	8-19
8-70.	Example of How to Interpret 1601L versus ROM Listing ...	8-20
8-75.	ROM Contents Allocation	8-22
8-77.	Self Check Troubleshooting Procedures	8-22
8-79.	Self Check 1 (Standard 5045A)	8-22
8-86.	Self Check 2 (Standard 5045A)	8-24
8-93.	Self Check 3 (Standard 5045A)	8-25
8-99.	Self Check 1 (Option 024)	8-26
8-105.	Self Check 2 (Option 024)	8-26
8-112.	Self Check 3 (Option 024)	8-28
8-118.	Troubleshooting Pin Drivers and Control Circuits	8-28
8-122.	V/I R-Pack Test Program	8-29
8-124.	R-Pack C-Current Modes	8-29
8-128.	Current Source Troubleshooting	8-30
8-135.	Voltage Source Troubleshooting	8-32
8-142.	General Troubleshooting Hints for Pindriver Boards	8-33
8-145.	Troubleshooting the Fast Edge (Socket Driver) Circuitry ..	8-34
8-149.	A8 ROM Listings	8-35
8-151.	Schematic Diagram Symbols and Reference Designators	8-69
8-153.	Reference Designations	8-69
8-155.	Theory of Operation	8-69
8-157.	Identification Markings on Printed-Circuit Boards	8-69
8-161.	Block Diagram Theory	8-69
8-165.	The Memories	8-71
8-179.	Reference Voltages and Pin Drivers	8-76
8-185.	ROM Program Control Theory	8-76
8-195.	RAM Address	8-86
8-198.	Data Entry/Exit	8-86
8-202.	Decoding the ROM Words	8-88
8-214.	A4 Arithmetic/Logic Unit Overview	8-89
8-220.	A5 Processor Memory Overview	8-90
8-230.	Example of Operation	8-90
8-234.	A6 Main Memory Overview	8-91
8-240.	Loading Data into the Memory	8-92

TABLE OF CONTENTS (Continued)

Section	Title	Page
8-253.	A7 I/O Board Block Diagram Theory of Operation	8-93
8-256.	LISTEN Mode	8-93
8-258.	TALK Mode	8-93
8-260.	A8 Prom Board Overview	8-93
8-265.	A9 Address Board Overview	8-95
8-272.	A10 D/A and Pin Driver Control Overview	8-96
8-280.	A11 Reference Level Generator Overview	8-98
8-290.	A12 Pin Driver Control Overview	8-99
8-297.	A13-A24 Pin Driver Overview	8-100
8-310.	A26 Card Reader Interface	8-104
8-312.	Print Operation	8-104
8-315.	Character Select ROM U4	8-105
8-320.	Card Reader Circuits	8-105
8-330.	A27 Front Panel Switch Board	8-106
8-337.	A28 and A29 Socket Driver Assemblies	8-106
8-341.	A37 Static Protection Board	8-107

LIST OF TABLES

Table	Title	Page
1-1	Equipment Supplied	1-2
1-2	Specifications	1-5
1-3	Recommended Test Equipment	1-6
2-1	Automatic Handler Signals	2-4
4-1	Operational Verification Test	4-1
4-2	Performance Test Outline	4-7
4-3	Pindriver C-Current Modes (Current)	4-16
4-4	Pindriver C-Current Modes (Voltages)	4-16
5-1	Required Test Equipment	5-1
5-2	Blank Test Aid	5-13
5-3	Sample Test Record Aid	5-15
6-1	Replaceable Parts	6-5
6-2	Manufacturers Code List	6-34
7-1	Manual Backdating	7-1
8-1	Assembly Identification	8-1
8-2	Recommended Test Equipment	8-2
8-3	HP 1601L and HP 10250A Connections	8-12
8-4	Tolerances for R-Pack Parameters	8-30
8-5	Setup Conditions for Troubleshooting Current Sources	8-32
8-6	Hexadecimal ROM Code List	8-78
8-7	Hexadecimal-to-Binary Conversion	8-84
8-8	Processor Instruction Decoder	8-84
8-9	Data Entry/Exit Codes	8-87
8-10	Setup Data Configuration	8-97

LIST OF FIGURES

Figure	Title	Page
1-1	Model 5045A Digital IC Tester	1-0
2-1	Power Cable HP Part Numbers versus Mains Plugs Available	2-2
2-2	Automatic Handler Signal Timing	2-4
3-1	Handling the Program Cards	3-1
3-2	Program Cards	3-2
3-3	Front Panel Controls and Indicators	3-4
3-4	Recessed Panel Controls	3-5
3-5	Control Settings for Handler Use	3-6
4-1	Typical Printout for R-Pack Test (Partial Printout)	4-4
4-2	Fast Edge Check (Positive)	4-26
4-3	Fast Edge Check (Negative)	4-26
4-4	Positive Edge .1V Div/.1 μ sec With Test Head Extender Cable	4-26
4-5	Negative Edge .1V Div/.1 μ sec With Test Head Extender Cable	4-26
4-6	Automatic Handler Signal Timing	4-30
6-1	Cabinet Parts	6-31
7-1	A6 Main Memory Assembly (Sheet 1 of 2)	7-5
7-2	A26 Card Reader/Printer Interface	7-8
7-3	A26 Card Reader/Printer Interface Assembly (Sheet 2 of 2)	7-9
8-1	A35 Card Reader	8-5
8-2	Lamp Replacement	8-6
8-3	Operational Flow Diagram (First 44 Addresses)	8-11
8-4	Troubleshooting Flow Diagram	8-13
8-5	Typical Waveform for A11TP1	8-18
8-6	ROM Addresses 1-5	8-20
8-7	ROM Addresses 6-9	8-21
8-8	ROM Address 8 and 9	8-21
8-9	Schematic Diagram Notes	8-70
8-10	Simplified Block Diagram	8-72
8-11	Serial Bus Data Flow	8-74
8-12	Reference Level Generation	8-75
8-13	Op Code Guide	8-85
8-14	A7 I/O Board Block Diagram	8-94
8-15	Pin Driver Mode Configuration	8-101
8-16	Pin Driver Block Diagram	8-103
8-17	Power Supply Schematic Diagram Including Assemblies A1, A2, A3 (Includes Component Locator)	8-113
8-18	A4 Arithmetic Logic Unit Assembly(Includes Component Locator)	8-115
8-19	A5 Processor Memory Assembly (Includes Component Locator)	8-117
8-20	A6 Main Memory Assembly (Sheet 1 of 2) (Includes Component Locator)	8-119
8-21	A7 I/O Assembly (Includes Component Locator) and	8-123
	A38 HP-IB Interface Assembly (Includes Component Locator)	8-123
8-22	A8 ROM Assembly (Includes Component Locator)	8-125
8-23	A9 Address Assembly (Includes Component Locator)	8-127
8-24	A10 D/A Control Assembly (Includes Component Locator)	8-129
8-25	A11 Reference Level Generator Assembly (Includes Component Locator)	8-131

LIST OF FIGURES (Continued)

Figure	Title	Page
8-26	A12 Pin Driver Control Assembly (Includes Component Locator)	8-133
8-27	A13 thru A24 Pin Driver Assembly (Sheet 1 of 2) (Includes Component Locator)	8-135
8-28	A25 Card Reader Interface Assembly (Includes Component Locator) ..	8-139
8-29	A26 Card Reader/Printer Interface Assembly (Sheet 1 of 2) (Includes Component Locator)	8-141
8-30	A27 Front Panel Switch Board (Includes Component Locator)	8-145
8-31	A28 Socket Driver Assembly (Includes Component Locator)	8-147
8-32	A29 Socket Driver Assembly (Includes Component Locator)	8-149
8-33	A30 Socket Assembly (Includes Component Locator)	8-151
8-34	A31 Test Head Interconnect Board (05045-60020) Connector Designations (Front View) (Sheet 1 of 2)	8-152
8-35	A33 Motherboard Diagram for Filter Capacitors (Includes Component Locator)	8-155
8-36	A36 Monostable Multivibrator Adapter (Includes Component Locator)	8-157
8-37	A37 Partial Diagram Static Protection Board Assembly (Includes Component Locator)	8-159

SAFETY CONSIDERATIONS

GENERAL

This is a Safety Class I instrument. This instrument has been designed and tested according to IEC Publication 348, "Safety Requirements for Electronic Measuring Apparatus".

OPERATION

BEFORE APPLYING POWER verify that the power transformer primary is matched to the available line voltage and the correct fuse is installed (see Section II, Paragraph 2-6). Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

SERVICE

Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

CAUTION

Do not turn on the instrument if the pin drivers (A13 thru A24) are installed and A10, 11, 12 (any one) are removed. Damage to the pin drivers may result.

WARNING

IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTO-TRANSFORMER (FOR VOLTAGE REDUCTION) MAKE SURE THE COMMON TERMINAL IS CONNECTED TO THE EARTHED POLE OF THE POWER SOURCE.

WARNING

BEFORE SWITCHING ON THE INSTRUMENT, THE PROTECTIVE EARTH TERMINALS OF THE INSTRUMENT MUST BE CONNECTED TO THE PROTECTIVE CONDUCTOR OF THE (MAINS) POWER CORD. THE MAINS PLUG SHALL ONLY BE INSERTED IN A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD (POWER CABLE) WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).

WARNING

THE SERVICE INFORMATION FOUND IN THIS MANUAL IS OFTEN USED WITH POWER SUPPLIED AND PROTECTIVE COVERS REMOVED FROM THE INSTRUMENT. ENERGY AVAILABLE AT MANY POINTS MAY, IF CONTACTED, RESULT IN PERSONAL INJURY.

CAUTION

BEFORE SWITCHING ON THIS INSTRUMENT:

1. MAKE SURE THE INSTRUMENT IS SET TO THE VOLTAGE OF THE POWER SOURCE.
2. ENSURE THAT ALL DEVICES CONNECTED TO THIS INSTRUMENT ARE CONNECTED TO THE PROTECTIVE (EARTH) GROUND.
3. ENSURE THAT THE LINE POWER (MAINS) PLUG IS CONNECTED TO A THREE-CONDUCTOR LINE POWER OUTLET THAT HAS A PROTECTIVE (EARTH) GROUND. (GROUNDING ONE CONDUCTOR OF A TWO-CONDUCTOR OUTLET IS NOT SUFFICIENT.)
4. MAKE SURE THAT ONLY FUSES WITH THE REQUIRED RATED CURRENT AND OF THE SPECIFIED TYPE (NORMAL BLOW, TIME DELAY, ETC.) ARE USED FOR REPLACEMENT. THE USE OF REPAIRED FUSES AND THE SHORT-CIRCUITING OF FUSE HOLDERS MUST BE AVOIDED.

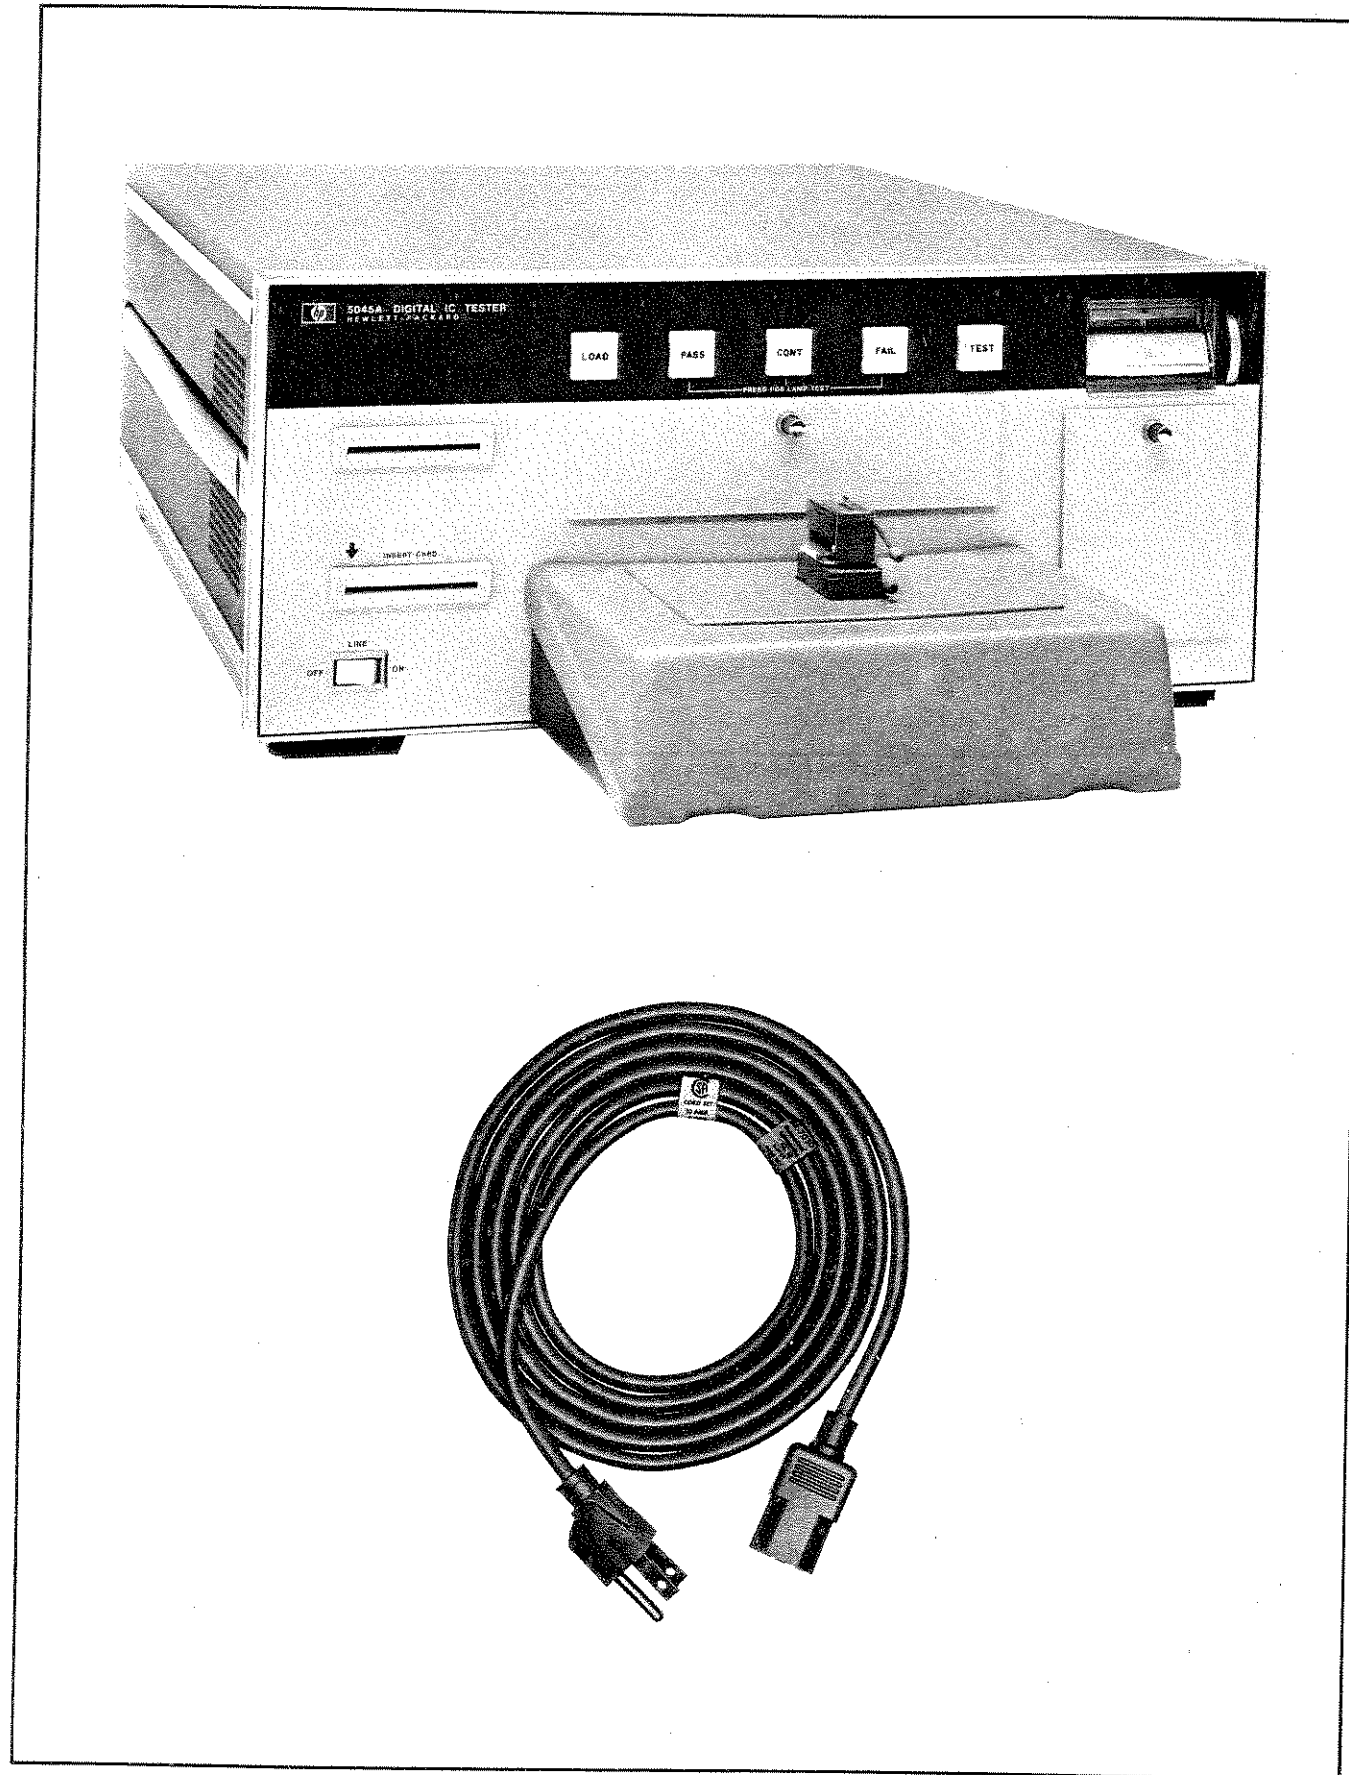


Figure 1-1. Model 5045A Digital IC Tester

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This manual provides operating and service information for the Hewlett-Packard Model 5045A Digital IC Tester. A separate User's Manual also accompanies the instrument to provide a more detailed description of the unit's operating characteristics.

1-3. This manual is divided into eight sections containing the following information:

SECTION I GENERAL INFORMATION covers a description of the tester, options, equipment supplied, accessories available, specifications, and recommended test equipment.

SECTION II INSTALLATION provides instructions for unpacking, inspection, preparation for use, shipment, and storage for the tester. Also covered is the power requirements for the tester.

SECTION III OPERATION covers the basic tester operating features. Describes functions of front-panel controls, programming the tester, printout data, and operator maintenance.

SECTION IV PERFORMANCE TESTS includes a list of recommended test equipment, an in-cabinet performance test and an operational verification test using magnetic cards.

SECTION V ADJUSTMENTS covers the adjustment procedure.

SECTION VI REPLACEABLE PARTS provide a complete list of the tester's replaceable parts and information for ordering parts.

SECTION VII MANUAL CHANGES provide information necessary to backdate the manual to cover earlier instruments.

SECTION VIII SERVICE contains block level theory of operation, schematic diagrams, and component locators.

1-4. DESCRIPTION

1-5. The 5045A DIGITAL IC TESTER performs complete truth table testing on digital IC's contained in standard package form. The unit is compatible with TTL, ECL, CMOS, DTL, RTL, HTL, and associated logic families and is programmed by magnetic cards which contain all test conditions, including test pattern and logic simulation information. Other features include a built-in digital recorder for retrieving failure data, the ability of the tester to "learn" a ROM's output for later transfer to a magnetic card, and the ability to interface with a high-speed handler.

1-6. APPLICATIONS

1-7. Probably the most common type of application for the IC Tester is in-coming inspection of purchased IC's. These parts can be tested manually by hand loading or with the use of a high-speed, automatic handler when large quantities of IC's are involved.

1-8. INSTRUMENT IDENTIFICATION

1-9. Hewlett-Packard instruments have a 2-section, 10-character serial number (0000A00000), which is located on the rear panel. The 4-digit serial prefix identifies instrument changes. If the serial prefix of your instrument differs from that listed on the title page of this manual, there are differences between this manual and your instrument. Instruments having higher serial prefixes are covered with a "Manual Changes" sheet included with this manual. If the change sheet is missing, contact the nearest Hewlett-Packard Sales and Service Office listed at the back of this manual. Instruments having a lower serial prefix than that listed on the title page, are covered in the Manual Changes Section VII.

1-10. EQUIPMENT SUPPLIED

1-11. Table 1-1 lists equipment supplied.

Table 1-1. Equipment Supplied

Description	HP Part Number
Detachable Power Cord 7½ feet (231 cm) long	8120-1378
Head Cleaner Card for Magnetic Card Reader	8660-0463
Resistor Pack (R-Pack) Board	05045-60042
Diagnostic Card Kit	See paragraph 1-14
Dummy IC, 16-pin	05045-80019
Dummy IC, 24-pin (Option 024)	05045-80020
5045A User Manual	05045-90020
Monostable Multivibrator Adapter (20-pin)	05045-60041

1-12. Diagnostic Card Kit, 05045-60120

1-13. The diagnostic kit consists of the following three sets of magnetic cards:

a. A11 Adjustment Check Program Cards

1. DAC REF Check
2. +/-V Zero Adjust
3. DAC V Gain Adjust
4. Current Gen Preset Adjust
5. +/-I Zero 1-2 Adjust

b. Operational Verification Test Program Cards

R-Pack Test Cards:

1. V/I R-Pack 16-Pin
2. V/I R-Pack 24-Pin
3. R-Pack C-Current Modes 16-Pin
4. R-Rack C Current Modes 24-Pin
5. R-Pack Fail Detect Check 16-Pin
6. R-Pack Fail Detect Check 24-Pin

Self-Check Cards:

7. Self Check 1 16-Pin
8. Self Check 1 24-Pin
9. Self Check 2 16-Pin
10. Self Check 2 24-Pin
11. Self Check 3 16-Pin
12. Self Check 3 24-Pin

c. Performance Test Program Cards

1. DAC Adjust Check
2. Analog Voltage Check Part 1
3. Analog Voltage Check Part 2
4. Analog Current Check Low Range
5. Analog Current Check 200 mA Range
6. Pin Driver C-Current Modes 1-8
7. Pin Driver C-Current Modes 9-16
8. Pin Driver C-Current Modes 17-24
9. Cross Talk Part 1
10. Cross Talk Part 2
11. V/I Results Voltage Check 16-Pin
12. V/I Results Voltage Check 24-Pin
13. V/I Results Current Check 16-Pin
14. V/I Results Current Check 24-Pin
15. V/I Offset Check 16-Pin
16. V/I Offset Check 24-Pin
17. Relay Check 16-Pin
18. Relay Check 24-Pin
19. Op Code Check
20. Pos Fast Edge Check
21. Neg Fast Edge Check
22. Printer Check

1-14. ACCESSORIES AVAILABLE

1-15. Operating Accessories

1-16. The 5045A is programmed by prerecorded magnetic cards that are available as accessories. Each card that covers a common type IC is listed in the IC Program Catalog, Part No. 5952-7383. Cards not listed in the program catalog may be programmed at the factory. Contact the factory through your local HP Sales and Service Office (listed at the back of this manual) regarding price and delivery.

1-17. Any card listed in the IC Program Catalog may be ordered directly from the factory by pre-paid coupon. When the coupon is received, the order is filled and returned by airmail. The coupons are ordered in books of ten by Model No. 10846A.

1-18. Other accessories available are:

1. Blank magnetic cards (Pass/Fail) P/N 9164-0071
2. Blank Magnetic Cards (Diagnostic) P/N 9164-0072
3. 250 foot roll of thermal paper (minimum order of six rolls) P/N 9281-0401
3. Preprogrammed magnetic card for any device listed in the IC PROGRAM CATALOG. The specific cards required are designated on the program card order sheet. Order No. 10845A
4. Coupon book containing ten coupons each redeemable in one preprogrammed magnetic card which is listed in the IC PROGRAM CATALOG. The coupons are mailed directly to the factory and the appropriate program card is returned by mail. The coupons expire two years from the date of receipt. . . Order No. 10846A

1-19. SERVICE ACCESSORY

1-20. A special Extender Board, part no. 05045-60100 is available for troubleshooting the 5045A. This board plugs into a 44-pin connector in place of a PC board to allow the PC board to be extended for access.

1-21. COMPLEMENTARY EQUIPMENT

1-22. The 5045A is designed to allow high volume testing using automatic IC handlers. The optional interface equipment used to interface the tester to popular makes of automatic handlers is described in paragraph 1-25. The special circuits used to generate the fast rise and fall times necessary in testing digital circuits are contained in the tester's removable test head. This allows the test head to be placed within inches of the IC under test and eliminates ringing, oscillation, and slow rise/fall times problems created by long cables between tester and handler.

1-23. SPECIFICATIONS

1-24. Specifications for the 5045A are listed in Table 1-2.

1-25. OPTIONS

1-26. Several options are available for the 5045A as listed below.

- a. **Option 004** International Production Technology (IPT) Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and cable to extend the test head. A cable to interface the control signals between the 5045A and the IPT automatic handler is also included. For more information and documentation obtain Installation Note K04-59994A.
- b. **Option 005** Symtek Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and a cable to extend the test head. A cable to interface the control and indication signals between the 5045A and the Symtek automatic handler is also included. For more information and documentation obtain Installation Note K05-59994A.
- c. **Option 006** Daymarc Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and a cable to extend the test head. A cable to interface the control and indication signals between the 5045A and the Daymarc automatic handler is also included. For more information and documentation obtain Installation Note K06-59994A.
- d. **Option 007** Micro Component Technology Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head. A cable to interface the control and indication signals between the 5045A and the Micro Component Technology automatic handlers is also included. For more information and documentation obtain Installation Note K07-59994A.
- e. **Option 008** Delta Design, Inc. Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head. A cable to interface the control and indication signals between the 5045A and the Delta Design automatic handler is also included. For more information and documentation obtain Installation Note K08-59994A.
- f. **Option 009** Control Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and a cable to extend the test head. A connector to allow the control and indication signals from the 5045A to be interfaced with the Control automatic handler is also included. For more information and documentation obtain Installation Note K03-59994A.

Table 1-2. Specifications

TEST SET-UP METHOD:

Preprogrammed magnetic card. All test conditions including parametric information, input stimuli, and corresponding outputs are contained on the card. The program is verified each time it is loaded.

LOGIC FAMILY COMPATIBILITY:

Compatible with ECL, CMOS, TTL, DTL, HTL, RTL and the associated sub-families. See the IC Program Catalog for available programs.

LOGIC FUNCTION COMPATIBILITY:

Gates, flip-flops, monostable multivibrators, counters, shift registers, priority encoders, Schmitt triggers, parity generators/checkers, decoders/encoders, optical isolators, dual-in-line reed relays, adders, arithmetic logic units, ROM's, PROM's, static RAM's, and many more*.

DUAL TEST FOR EACH IC:

Two test programs (Pass/Fail and Diagnostic) are supplied in the test package for each circuit. Each test is on a separate card. The Pass/Fail and Diagnostic programs are tailored to the testing requirements of the individual Logic Family.

TEST STRUCTURE:

Functional Tests—Truth table is verified by direct comparison between the output of a software-generated IC simulator (or stored truth table for certain circuits) and the output of the device under test.

Parametric Tests—All DC parameters (voltages and currents) are tested to the manufacturers' data sheet specifications except where limited by the specifications of the Tester. Test limits are indicated in the information accompanying each magnetic card.

Continuity Test—Verifies pin contact by checking for the presence of current flow into or out of all active pins (failure of this test is shown on the "CONT" indicator).

TEST PATTERN GENERATION:

Test Patterns are derived through algorithmic techniques or from stored truth tables and are individually tailored to each IC.

PASS/FAIL COUNTER:

Prints the number of passed and failed devices. Count is initiated when the magnetic card is inserted.

UNIVERSAL PIN DRIVERS:

Note: The same circuit is used for driving and monitoring a pin whether that pin is an input, output, power supply, or clock. All voltages and currents can be set individually and uniquely on each pin. External test fixtures are not required.

Voltage applied to the device under test:

(Supply Voltage, Input Voltage, and Output Voltage)

Range (15 volts)	Accuracy
-7.5V ≤ to < -1.875V	±25 mV
-1.875V ≤ to ≤ +1.875V	±15 mV
+1.875V < to ≤ +7.5V	±25 mV

Current applied to the device under test:

(Supply Current, Input Current, and Output Current)

Range	Accuracy
-200 mA ≤ to < -2.5 mA	±0.4 mA or ±6%**
-2.5 mA ≤ to ≤ +2.5 mA	±10 μA or ±6%**
+2.5 mA < to ≤ +200 mA	±0.4 mA or ±6%**

Slew Rate: 30 ns/volt

DIGITAL VOLTMETER/MILLIAMMETER FOR FAILED PINS:

Note: When a failure is encountered (with PRINTER: ON, V and I RESULTS: ON), the printing digital Voltmeter/Milliammeter records the voltage and current present

* Some circuits require the optional 24 pin capability.
**Whichever is greater.

on the failed pin(s). In addition, the 5045A reduces the driving parameter which caused the failure (voltage for input pins, current for output pins) until the device no longer fails. The second voltage/current pair is also recorded.

Voltage		Accuracy
Range		
-7.5V ≤ to < -1.875V		±35 mV
-1.875V ≤ to ≤ +1.875V		±15 mV
+1.875V < to ≤ +7.5V		±35 mV
Current		Accuracy
Range		
-200 mA ≤ to < -2.5 mA		±0.4 mA or ±6%**
-2.5 mA ≤ to ≤ +2.5 mA		±10 μA or ±6%**
+2.5 mA < to ≤ +200 mA		±0.4 mA or ±6%**

REAR PANEL OUTPUTS:

Automatic Handler Interface: 14 pin Amphenol connector provides "End of Test", "Pass", "Fail" and "Fail Continuity" signals and accepts "Start Test". Also available is a +5V line capable of supplying up to 200 mA.

GENERAL:

Power: 100/120/220/240V (+5%, -10%), 48-66 Hz, 345 VA.

Dimensions: 19 cm high, 42.5 cm wide, 58 cm deep
(7.5 in. x 16.7 in. x 22.8 in.)

Shipping Weight: 39.1 kg (86 lbs.)

Net Weight: 27.7 kg (61 lbs)

Operating Temperature: 0°C to 50°C

Relative Humidity: 80%

OPTIONS AND ACCESSORIES:

Option 004†: Interface package for IPT Model 800 Automatic IC Handler

Option 005†: Interface package for Sym-Tek Model 7191ND Automatic IC Handler and other related models

Option 006†: Interface package for Daymarc 952/3 Automatic IC Handler

Option 007†: Interface package for Micro Component Technology Model 2604 and 2608 Automatic IC Handler.

Option 008: Interface package for Delta Model 8040 Ambient Naked DIP Handler.

Option 009: Interface package for Contrel Model H310 Automatic IC Handler.

Option 010: Interface package for PAE Model 3033 HR/LP Naked DIP Handler.

Option 013: Interface package for Trigon T2000 Series Multisize Ambient Test Handler.

Option 024: Expands the capability of the 5045A to 24 pins.

Option 025: Flat-Pack adapter for 14, 16, and 24-pin IC

Option 908: Rack flange kit

Option 910: Set of additional product manuals

9164-0071 Blank magnetic program card (Pass/Fail)

9164-0072 Blank magnetic program card (Diagnostic)

9281-0401 250 foot roll of thermal print paper. (minimum order six rolls)

10845A Preprogrammed magnetic card for any device listed in the IC PROGRAM CATALOG. The specific cards required are designated on the program card order sheet.

10846A Coupon book containing ten coupons each redeemable in one preprogrammed magnetic card which is listed in the IC PROGRAM CATALOG. The coupons are mailed directly to the factory and the appropriate program card is returned by mail. The coupons expire two years from the date of receipt.

† All interface packages include a test head extender cable, an interface board unique to the particular handler, and a cable to supply the control signals to the handler. This enables the test head electronics to be mounted within inches of the device under test.

- g. **Option 010** Precision Automated Equipment Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and a cable to extend the test head. A cable to interface the control and indication signals between the 5045A and the Precision automatic handler is also included. For more information and documentation obtain Installation Note K15-59994A.
- h. **Option 013** Trigon Interface. This provides a printed-circuit board to replace the standard socket assembly board on the test head and a cable to extend the test head. A cable to interface the control and indication signals between the 5045A and the Trigon automatic handler is also included. For more information obtain Installation Note K14-59994A.
- i. **Option 024** 24-Pin Test Capability. This provides the required circuits to test 24-pin integrated circuits.
- j. **Option 025** Flat-Pack Adapter. This provides connector adapters for testing flat package integrated circuits.
- k. **Option 908** Rack Flange Kit Part No. 5060-8741. This provides the required hardware to rack mount the 5045A IC Tester.
- l. **Option 910**. This provides an extra set of product manuals.
- m. **K19-59994A**. Teledyne TAC Interface. This provides a cable to extended the test head. The test head is then connected to the handler. A cable to interface the control signals between the 5045A and the Teledyne automatic handler is also included. For more information and documentation obtain Installation Note K19-59994A.

1-27. RECOMMENDED TEST EQUIPMENT

1-28. Test equipment recommended for testing, calibration, and repair of the 5045A is listed in Table 1-3.

Table 1-3. Recommended Test Equipment

Instrument	Required Characteristics	Recommended Type
Oscilloscope	50 MHz	HP 1707B
Vertical	50 mV/div Sens >5 ns rise time	HP 1707B
Horizontal	10 ns/div bandwidth	HP 1707B
Logic State Analyzer	8 MHz, 12 channel	HP 1601L
TTL Trigger Probe	8 MHz, 4 channel w/inverting inputs	HP 10250A
TTL Logic Probe	Bad Level Detect, 10 MHz bandwidth, 10 ns pulse detect	HP 545A
TTL Logic Pulser	1 μ s pulse width TTL levels	HP 546A
Voltmeter, Digital DC	\pm 20V, 4-1/2 digit	HP 3465
Ammeter, Digital DC	5 μ A -100 ms, .5% accuracy	
Power Supply DC	0-10VDC, 0-1A, current limiting	6214A

SECTION II INSTALLATION

2-1. INTRODUCTION

2-2. This section contains information for unpacking, inspection, storage, and installation. Field installation of optional equipment is included.

2-3. UNPACKING AND INSPECTION

2-4. If the shipping carton is damaged, inspect the tester for visible damage (scratches, dents, etc.). If the tester is damaged, notify the carrier and the nearest Hewlett-Packard Sales and Service Office immediately (offices are listed at the back of this manual). Keep the shipping carton and packing material for the carrier's inspection. The Hewlett-Packard Sales and Service Office will arrange for repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-5. INSTALLATION REQUIREMENTS

CAUTION

BEFORE CONNECTING THE INSTRUMENT TO AC POWER LINES, BE SURE THAT THE VOLTAGE SELECTOR IS PROPERLY POSITIONED AS DESCRIBED BELOW.

2-6. **LINE VOLTAGE REQUIREMENTS.** The 5045A is equipped with a power module that contains a printed-circuit line voltage selector to select 100, 120, 220, or 240-volt ac operation. Before applying power, the pc selector must be set to the correct position and the correct fuse must be installed as described below.

2-7. Power line connections are selected by the position of the plug-in circuit card in the module. When the card is plugged into the module, the only visible markings on the card indicate the line voltage to be used. The correct value of line fuse, with a 250 volt rating, must be installed after the card is inserted. This instrument uses a 3AT fuse (HP Part No. 2110-0003) for 100/120 volt operation; a 1.5AT fuse (HP Part No. 2110-0043) for 220/240 volt operation.

2-8. To convert from one line voltage to another, the power cord must be disconnected from the power module before the sliding window covering the fuse and card compartment can be moved to expose the fuse and circuit card.

2-9. Pull on the fuse lever to remove the fuse and then pull the card out of the module. The fuse lever must be held to one side to extract and insert the card. Insert the card so the marking that agrees with the line voltage to be used is visible.

2-10. Return fuse lever to normal position, insert correct fuse, slide plastic window over the compartment, and connect the power cord to complete the conversion.

2-11. Power Cables

WARNING

TO PROTECT OPERATING AND SERVICING PERSONNEL, THIS INSTRUMENT IS EQUIPPED WITH A THREE-PIN POWER RECEPTACLE. THE CENTER PIN OF THE RECEPTACLE CONNECTS THE INSTRUMENT CHASSIS AND PANELS TO EARTH GROUND WHEN USED WITH A PROPERLY WIRED THREE-CONDUCTOR OUTLET AND POWER CABLE. IMPROPERLY GROUNDED EQUIPMENT CAN RESULT IN HAZARDOUS POTENTIALS BETWEEN EQUIPMENT.

2-12. LINE FREQUENCY REQUIREMENTS. The tester operates at line frequencies between 48 Hz and 66 Hz.

2-13. THREE-CONDUCTOR POWER CABLE. To protect the operator, the tester uses a grounded three-conductor detachable power cable shown in Figure 2-1. The male connector end is a NEMA type connector, and the female connector end is a C.E.E. type connector that mates with the 5045A rear panel power connector. Connect the power cable to a power source receptacle with a NEMA grounded third conductor. If the line power receptacle is a standard two-pin type instead of the NEMA three-pin receptacle, use a two-to-three pin adaptor (HP Part No. 1251-0048) and connect the green pigtail on the adaptor to ground.

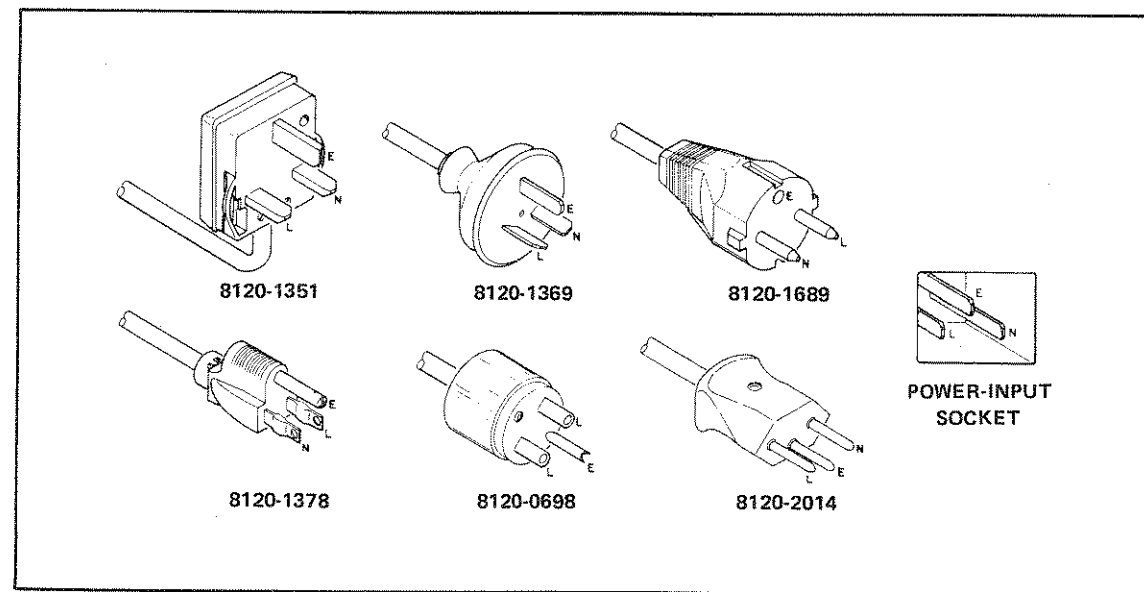


Figure 2-1. Power Cable HP Part Numbers versus Mains Plugs Available

2-14. REPACKING FOR SHIPMENT

2-15. If it becomes necessary to reship the tester, good commercial packing should be used. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Instruments should be packed securely in a strong corrugated container (350 lb./sq. in. bursting test) with suitable filler pads between the instrument and container. *The 4-corner support is not adequate, tester must also have center support.* Before returning instruments to Hewlett-Packard, contact the nearest Hewlett-Packard Sales and Service Office for instructions.

2-16. ENVIRONMENT DURING STORAGE AND SHIPMENT

2-17. Conditions during storage and shipment should normally be limited as follows:

- a. Maximum altitude: 25,000 feet.
- b. Minimum temperature: -40°F (-40°C).
- c. Maximum temperature: $+167^{\circ}\text{F}$ ($+75^{\circ}\text{C}$).

2-18. Installation of 24-Pin Option 024

2-19. To extend the testing capability of the 5045A to IC's with up to 24 pins, install Option 024 as follows:

- a. Disconnect power and remove top cover of 5045A.

CAUTION

Pin driver boards are wrapped in anti-static protective bags. These boards are very susceptible to static discharge damage. Remove each board from its bag separately and handle only by the large black heat sink or by the board extractors.

- b. Insert the four-pin driver board (Part No. 05045-60013) into slots A17, A18, A19, and A20.
- c. Perform the Operational Verification Test in Section IV to ensure proper operation.

2-20. Installation and Rack Mount Option 908

2-21. Install the Optional rack mount flange kit, Part No. 5061-0078 per instructions on the label provided with the kit.

2-22. AUTOMATIC HANDLER SIGNALS

2-23. When an automatic handler is to be installed, the interface signals are connected via the 5045A rear panel connector J5. All signals are negative-true logic. Table 2-1 lists the signals at each active pin of connector J5. The name of the signal indicates the condition that occurs at that pin (relative to front panel indicators). Figure 2-2 shows the timing of the signals in reference to the End of Test signal. The signals occur only when the named signal condition exists. The duration of all signals is as shown, within ± 5 milliseconds.

2-24. INSTALLATION AND OPERATION OF MONOSTABLE MULTIVIBRATOR ADAPTER A36

2-25. Insert adapter (A36) in the 24-pin test socket on the 5045A standard test head assembly. Follow card loading procedure (see paragraph 3-7) and set the switches on A36 to the ON position as noted in the IC header printout. All other switches must be set in the OFF position. The following printouts are typical for use of the multivibrator adapter.

74123 DIAGNOSTIC
USE BOARD 5045-60041
SWITCH ON: ABGHINP

74123 P/F USE WITH
HANDLER OR FLATPACKS
---SEE DATA SHEET---

Table 2-1. Automatic Handler Signals

J5 Pin	Signal
NOTE	
Signals are TTL levels (true = +0.4V @ 6 mA, False = 2.4V).	
1	$\overline{\text{Fail Cont}}$
2	$\overline{\text{End of Test}}$
5, 12	+5V @ 100 mA
6, 13	System Common
9	$\overline{\text{Pass}}$
10	$\overline{\text{*Start Test}}$
11	$\overline{\text{Fail Function}}$

*The Start Test signal is sent from the handler. It must have a 5 ms minimum duration and then go False at the time the End of Test signal goes true (true = 0.4V @ 6 mA, False = 2.4V).

Note: the Handler Signal Timing may be verified by executing a procedure outlined in the Performance Test, see Section IV.

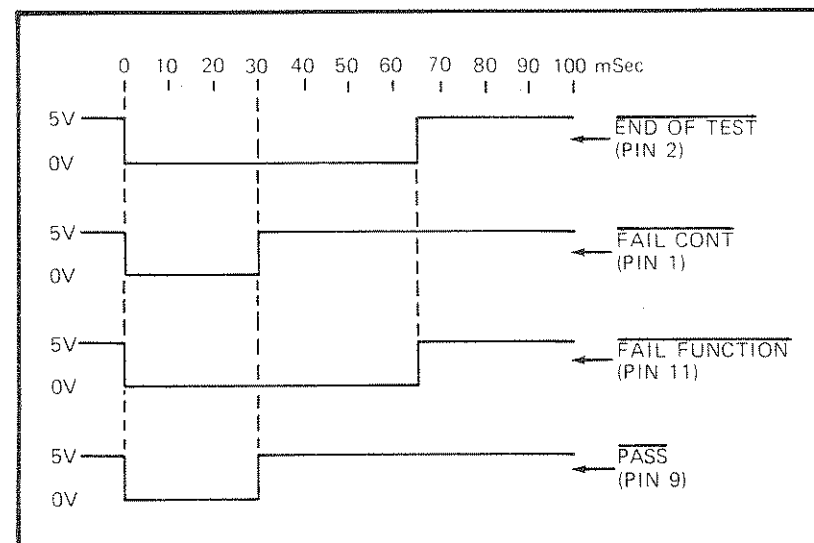


Figure 2-2. Automatic Handler Signal Timing

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section contains operating information for the 5045A. This includes a description of the controls and indicators, proper setup for use with an automatic handler, printout data, a self-check procedure, and operator's maintenance. Also see 5045A Users Manual for detailed operating instructions.

3-3. PROGRAM CARDS

3-4. The program cards store all information unique to the testing of a particular IC. The underside of the card contains a coating of magnetic material responsible for storing this information. When using the cards, try not to touch its magnetic coating since the oil film left from your fingers can cause the card to slip as its being pulled through the card reader. Figure 3-1 shows the proper method of holding the card.

NOTE

To prevent accidental "erasure" of the card, keep the card away from electrical motors and other such devices. Do not lay the card on top of the tester.

CAUTION

LAYING THE CARD ON ABRASIVE SURFACES CAN CAUSE PERMANENT DAMAGE TO THE CARD'S MAGNETIC COATING. RETURN THE CARD TO ITS FOLDER AFTER USE.

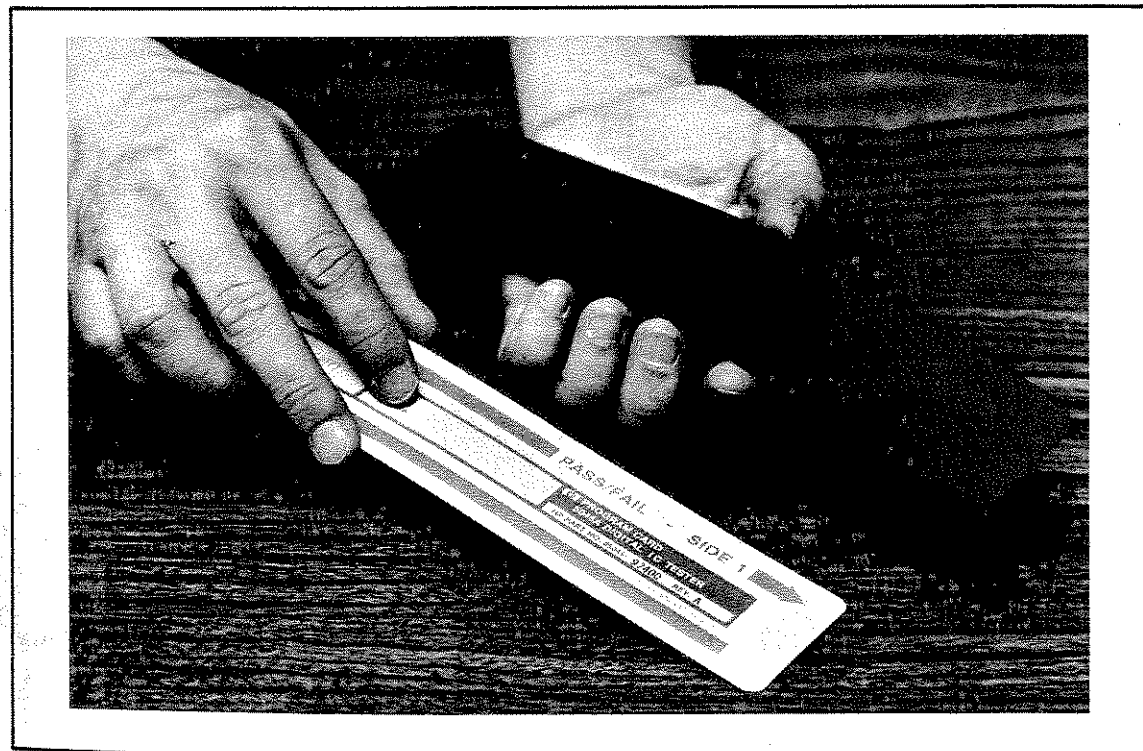


Figure 3-1. Handling the Program Cards

3-5. Two Tests Available

3-6. There are two program cards for each IC. One card contains a PASS/FAIL test while the other card performs a DIAGNOSTIC test. Using the PASS/FAIL test results in faster test times because of the consolidation of tests and the reduced amount of failure data available for printing. Figure 3-2 describes the pertinent information on the cards.

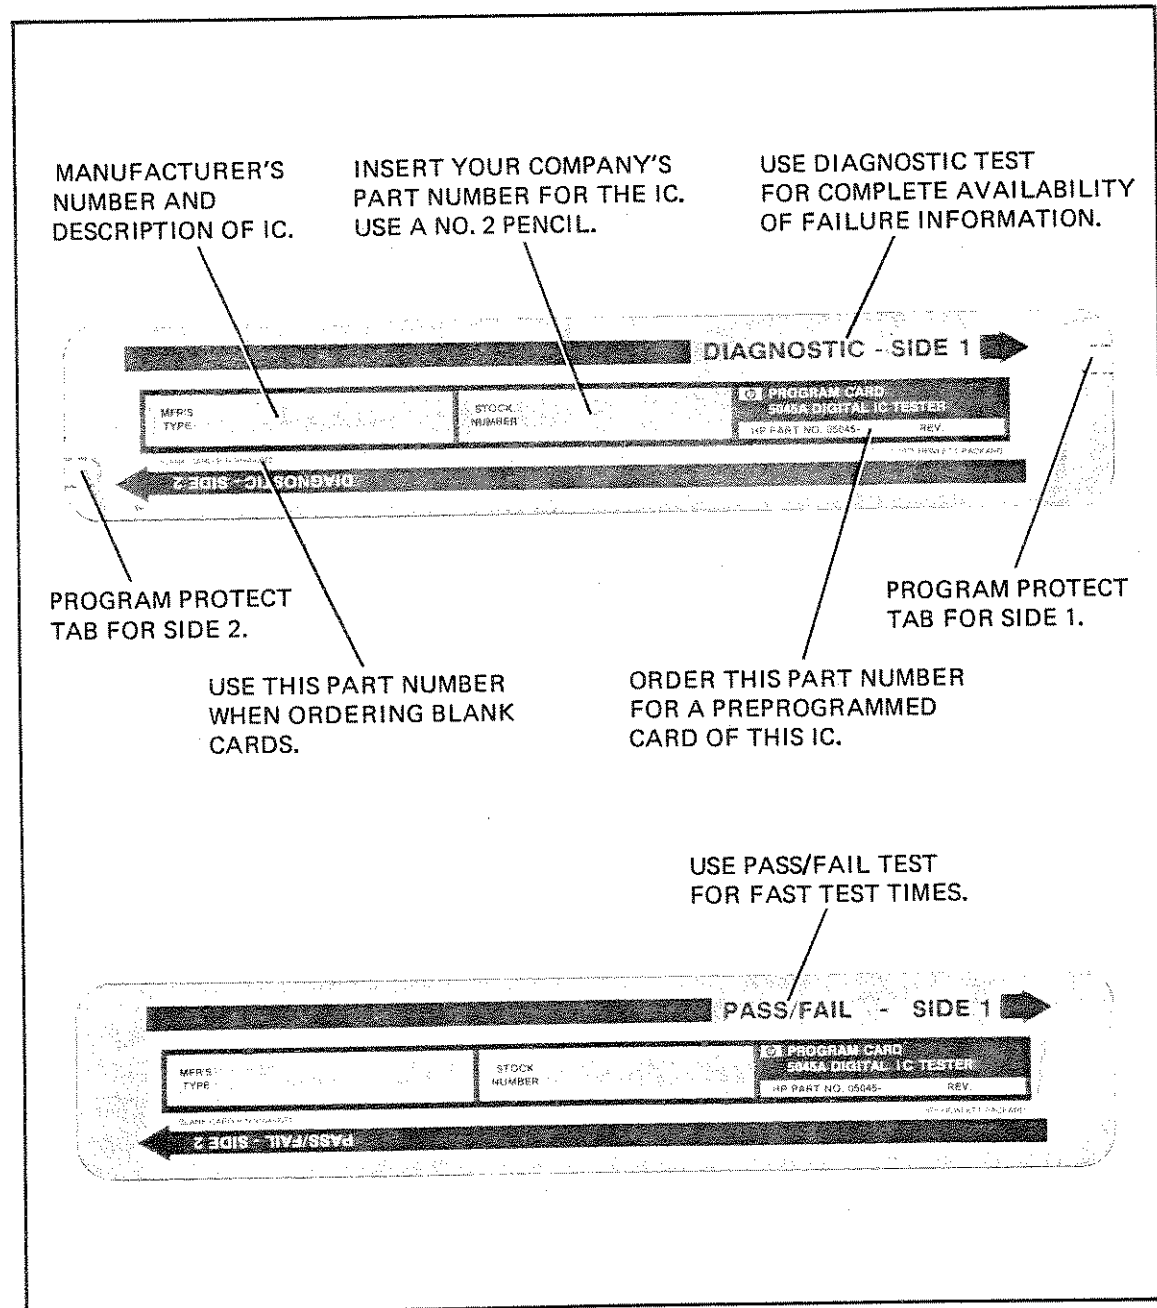


Figure 3-2. Program Cards

3-7. Loading the Card

3-8. Apply power, select one of the test cards, push the LOAD button, and insert side 1 of the card face up into the lower front panel slot. The instrument will automatically route the card into the machine and out the other slot. If the LOAD light stays on, it is an indication that more information is needed. Load side 2 of the magnetic card in the same manner.

3-9. Verification of Load Operation

3-10. Once the card is loaded, note the printer paper. If the tester accepted the card's information, it will print the manufacture's IC number and the type of test to be performed. If the tester determines that the check sum does not agree with the sum recorded on the card, it will print the word "RELOAD". In this case, push the LOAD button and reload the card.


RELOAD

7476 PASS/FAIL

7476 DIAGNOSTIC


3-11. Program Protect Tabs

3-12. Each card contains two *program protect* tabs, located near the arrowheads. Removing either of these tabs prevents the operator from accidentally writing over the existing program. Once the tabs are removed, however, the card cannot be reprogrammed. If the tabs have not been removed, the card can be reprogrammed, but it is highly recommended that the card first be bulk erased.

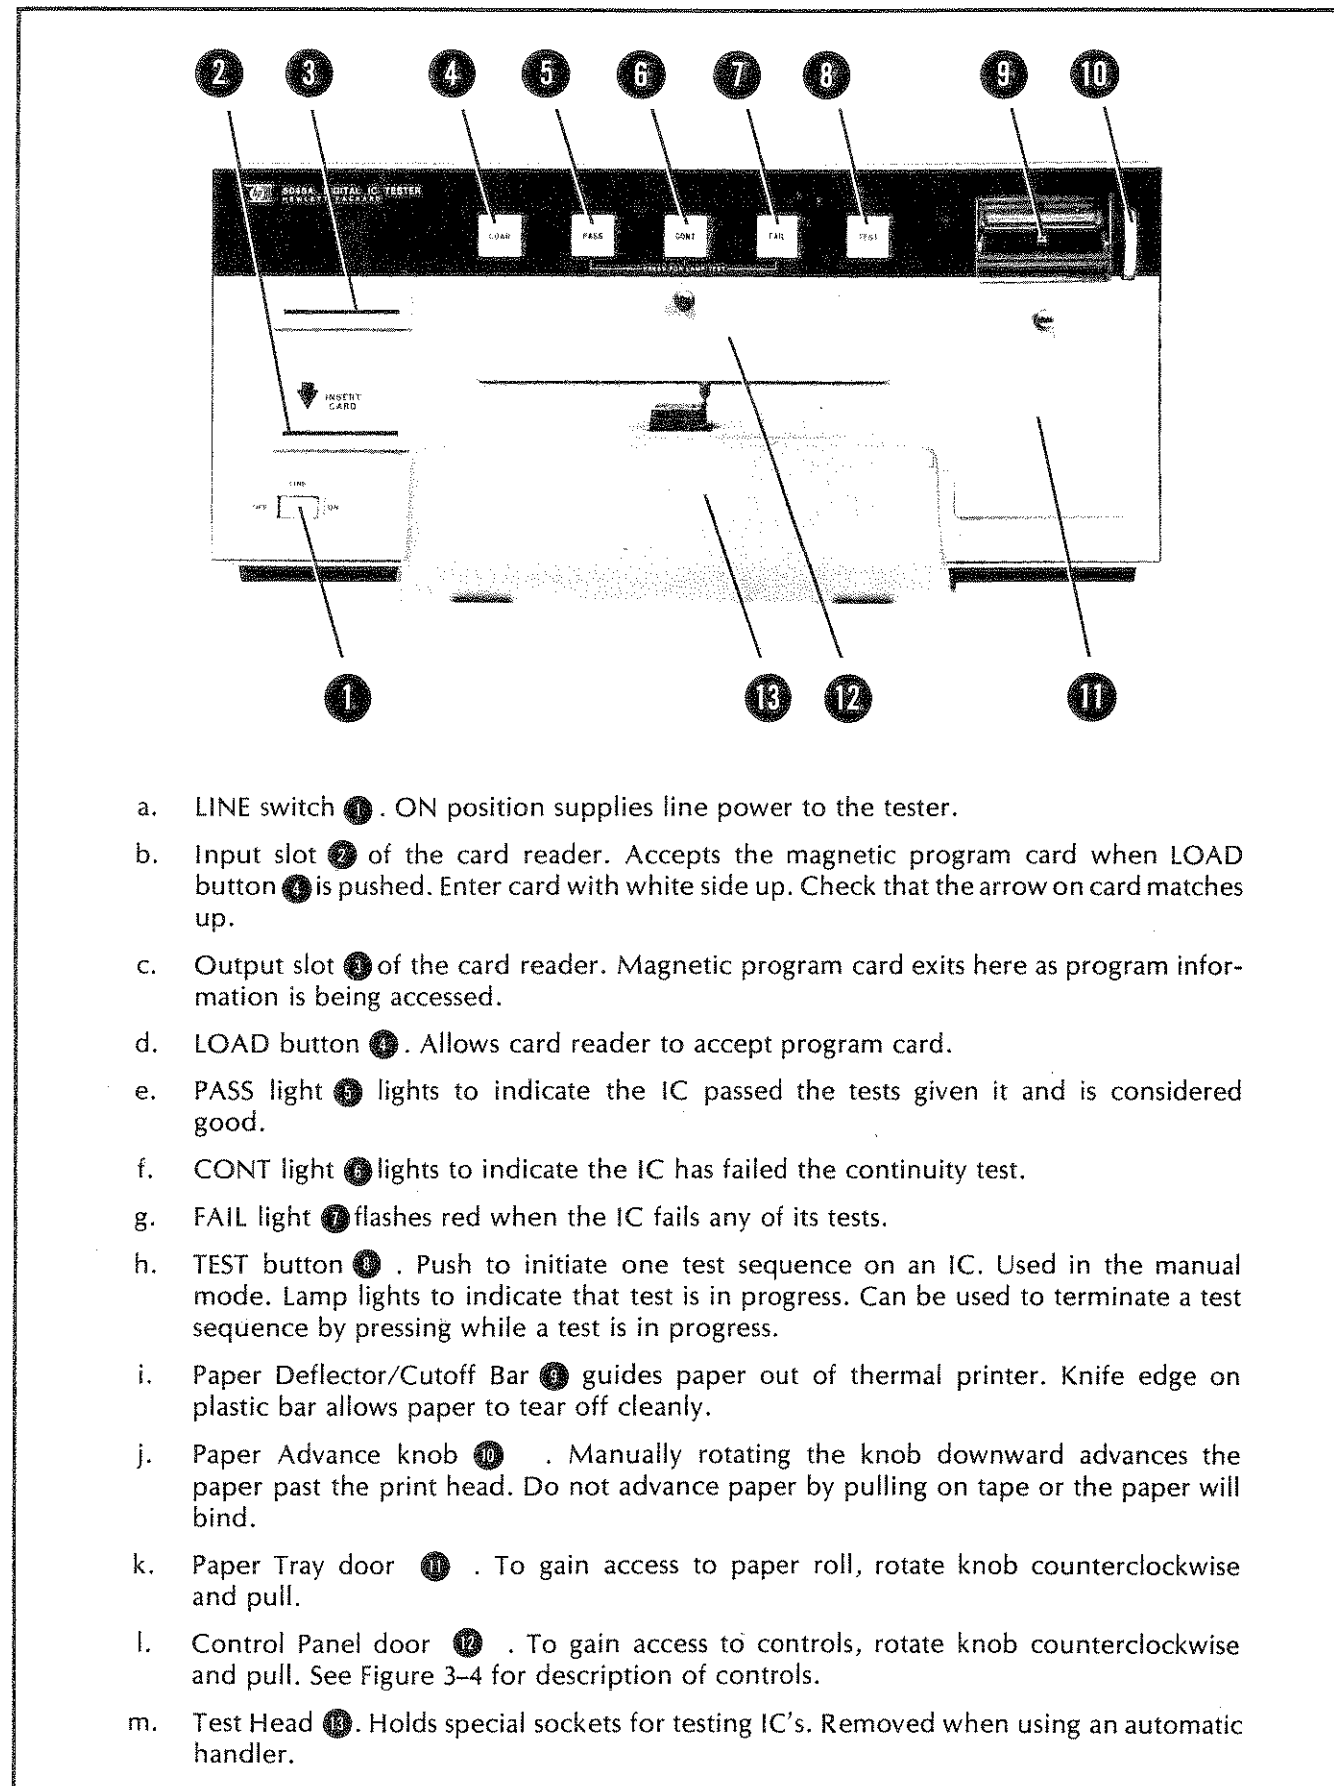


- a. LINE switch ① . ON position supplies line power to the tester.
- b. Input slot ② of the card reader. Accepts the magnetic program card when LOAD button ④ is pushed. Enter card with white side up. Check that the arrow on card matches up.
- c. Output slot ③ of the card reader. Magnetic program card exits here as program information is being accessed.
- d. LOAD button ④ . Allows card reader to accept program card.
- e. PASS light ⑤ lights to indicate the IC passed the tests given it and is considered good.
- f. CONT light ⑥ lights to indicate the IC has failed the continuity test.
- g. FAIL light ⑦ flashes red when the IC fails any of its tests.
- h. TEST button ⑧ . Push to initiate one test sequence on an IC. Used in the manual mode. Lamp lights to indicate that test is in progress. Can be used to terminate a test sequence by pressing while a test is in progress.
- i. Paper Deflector/Cutoff Bar ⑨ guides paper out of thermal printer. Knife edge on plastic bar allows paper to tear off cleanly.
- j. Paper Advance knob ⑩ . Manually rotating the knob downward advances the paper past the print head. Do not advance paper by pulling on tape or the paper will bind.
- k. Paper Tray door ⑪ . To gain access to paper roll, rotate knob counterclockwise and pull.
- l. Control Panel door ⑫ . To gain access to controls, rotate knob counterclockwise and pull. See Figure 3-4 for description of controls.
- m. Test Head ⑬ . Holds special sockets for testing IC's. Removed when using an automatic handler.

Figure 3-3. Front Panel Controls and Indicators

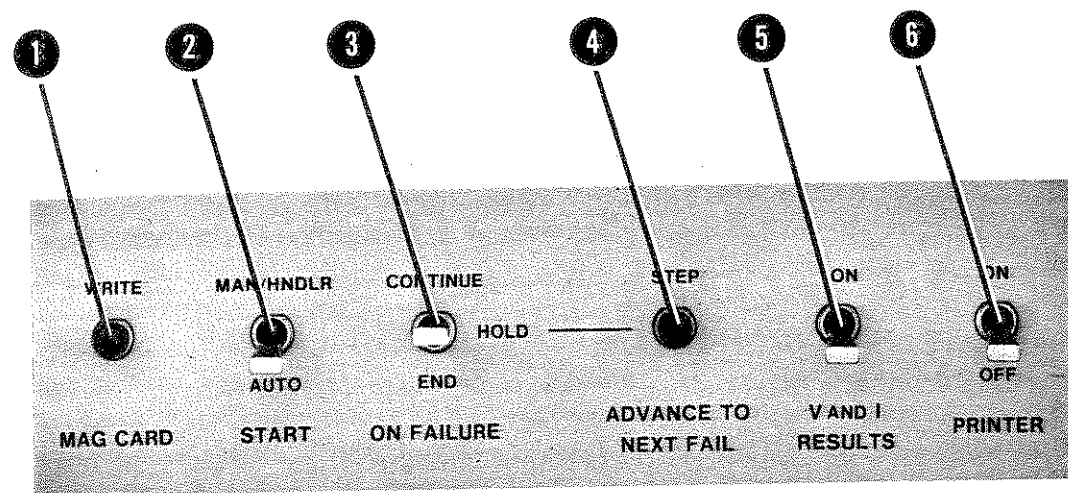

- a. MAG CARD WRITE button ①. When pushed, enables tester to duplicate program data onto a blank card. A preprogrammed card must be entered prior to pushing the button.
- b. START switch ② selects AUTO (automatic) or MAN/HNDLR (Manual/handler) position.
 1. In AUTO position, tester runs multiple test sequences on a single IC. Automatically initiates new test when present test is completed. Also can be used in manual test operation (see users manual).
 2. Use MAN/HNDLR position when using an automatic IC handler or when manually testing using the TEST button.
- c. ON FAILURE switch ③ affects the advance of the tests once a failure is detected.
 1. END ON FAILURE position terminates test sequence when a failure is detected.
 2. HOLD ON FAILURE position stops test sequence where the failure occurs. See description for ADVANCE TO NEXT FAIL button.
 3. CONTINUE ON FAILURE position allows completion of test sequences, regardless of failures. With printer on, provides a summary of failures.
- d. ADVANCE TO NEXT FAIL button ④ is functional only when ON FAILURE switch ③ is in the HOLD position. Pushing button advances test sequence to next failure where test sequence stops again.
- e. V AND I RESULTS switch ⑤ affects content of printout when printer is turned on and an IC fails under test. Off (down) position allows printout of basic failure data. The ON position allows printout of all pins, including their voltage and current data. (V AND I printout is not available with ON FAILURE switch set to CONTINUE.)
- f. PRINTER switch ⑥. Printer becomes fully operational with switch set to ON position. Even with switch set to off position, printer will record the card-loading information.

Figure 3-4. Recessed Panel Controls

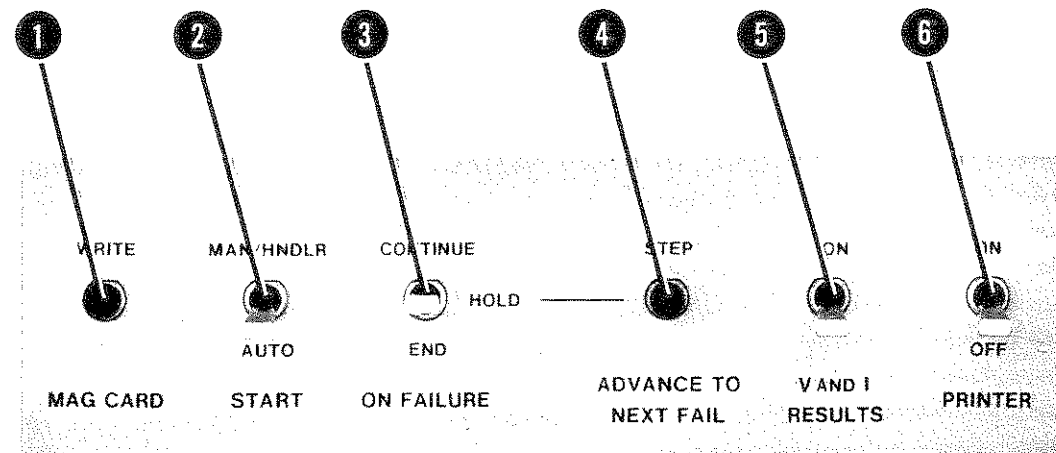

To reduce test times and prevent handling errors, the front panel controls should be set as follows:

- Set the START switch ② to the MAN/HNDLR position.
- Set the ON FAILURE switch ① to the END position.
- Set the V AND I RESULTS switch ⑤ to the off (down) position.
- Set the PRINTER switch ⑥ to the OFF position.

NOTE

It is important to use the PASS/FAIL program card to reduce the test time.

Figure 3-5. Control Settings for Handler Use

3-13. SELF CHECK PROCEDURE

3-14. Each day, before testing begins, a self-check procedure may be run on the tester to ensure the machine is operating properly. This procedure puts the tester through a rigorous test to ensure proper operation. The test can be found in Section IV under Operational Verification.

3-15. LOADING THE IC

3-16. Select the test socket that is compatible with the IC to be tested. Ensure that pin 1 of the IC matches pin 1 of the test socket (marked on the housing). Raise the test socket's locking lever, place the IC into the socket, and secure the IC into place by lowering the lever to its horizontal position.

3-17. MULTIPLE TESTING OF A SINGLE IC

3-18. Multiple testing is the ability to perform repeated test sequences on a single IC and record any failures. The IC might fail only one test in a thousand, but the failure will not go undetected. The internal counter that records the number of passes and failures is reset when a program card is first loaded. This should be done if a record is to be kept.

3-19. Multiple testing is also a useful mode to use when manually testing a group of IC's (i.e., without a handler). This mode eliminates the operation of pressing the TEST button for each new IC. Good IC's are indicated by the PASS light coming on shortly after the socket lever is lowered. (Between tests the FAIL light will be on, since the tester is testing an empty socket.)

3-20. Multiple Test Setup

3-21. Multiple testing is available by placing the START switch in the AUTO position. Also, for fast operation, set the ON FAILURE switch to END, the V AND I RESULTS switch to off (down) and the PRINTER switch to OFF. The TEST light will stay lit while the other lights reflect the test results. This method of testing is totally automatic and should *not* be used when operating from a handler. The tester may be attempting to perform a check while the handler is shifting in a new IC.

3-22. RETRIEVING PASS/FAIL INFORMATION

3-23. The tester records the number of failures even though no printing occurred. To retrieve this information, it is necessary to induce a failure (or wait until the next failure). The following procedure will cause the tester to print the number of failures and passes.

- a. Set the START switch to MAN/HNDLR.
- b. ON FAILURE switch to END.
- c. Set the PRINTER switch to ON.
- d. Remove the IC from its test socket.
- e. Push the TEST button, once.

3-24. The tester will now print the failure data. Of importance here is the number of recorded failures minus one: the one that was induced. In the example below, the IC passed 45 test sequences and failed once of its own accord. If the printer had recorded only one failure (the induced one), the IC tested good.

```
TEST:  FAN OUT
FAIL   2PASS   45
CORRECT 1001001
PIN
STATE 1>1100010
FAIL PIN: 3
```

3-25. DUPLICATING MAGNETIC CARDS

3-26. The Digital IC Tester has the ability of duplicating magnetic cards. The tester does this by "learning" the information from a card containing program data (a source card) and transferring that data to a blank card.

NOTE

Cards missing their *program protect* tabs cannot be reprogrammed.

3-27. Duplicating Procedure

3-28. Use the following procedure when duplicating program cards.

- a. Set the START switch to the MAN/HNDLR position.
- b. Push the LOAD button and insert side 1 of the *source* card (the card already programmed) into the tester. If the LOAD light does not go off, insert side 2 of the source card. The printer will now printout the IC number and the type of test. This verifies that proper loading has occurred. The program stored in the tester can now be transferred to the blank card.
- c. Push the WRITE button — the LOAD light should come on.
- d. Load side 1 of the blank card into the tester. Load side 2 if the LOAD light does not turn off. Any number of cards can be made in this manner without reloading the source card.
- e. To verify for proper duplicating, see paragraph 3-31 below.

3-29. MAKING A ROM PROGRAM CARD

3-30. A feature of the tester is the ability to produce a program card for any ROM, regardless of the ROM's program. To do this, first load the PROGRAM/STIMULUS card for the type of ROM (or PROM) that you're going to test. Then insert and test a known good ROM that contains your own output pattern. The tester "learns" the ROM's program and stores that information in its memory. Next, push the WRITE button and load a *blank* card. The tester will write the ROM's stimulus sequence from the first card and the output pattern from the reference ROM onto the blank card. This newly programmed blank card now becomes the test card to which all subsequent ROM's with that pattern can be tested.

3-31. Verification

3-32. Once the newly programmed card contains the duplicated program information, a verification of the program should be made. Push the LOAD button and insert side 1 of the new card and then side 2, if necessary. The printer should list the test for the type of card entered.

RELOAD

7476 PASS/FAIL


7476 DIAGNOSTIC

3-33. The printer will print the word "RELOAD" if the card didn't accept all of the program information available to it. In such case, first try reloading the card, if this doesn't work reload the source card and the blank card, as described earlier.

3-34. CARD READER CLEANING CARD

3-35. The tester is supplied with a special card that cleans the head of the magnetic card reader. This card is abrasive to the head assembly, therefore use it only when necessary. For example, if the tester printed "RELOAD" after four different program cards were loaded, it would be an indication that the card reader may need cleaning. Load the card in the same manner as a regular program card. Additional instructions are given on the card.

3-36. Power must be turned off to terminate the cleaning operation.

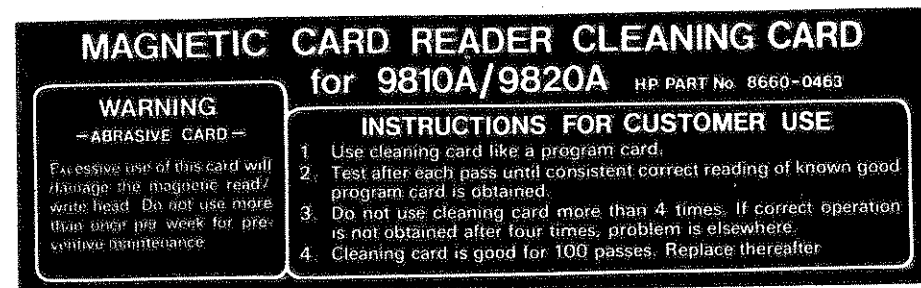

CAUTION

**EXCESSIVE USE OF THIS CARD WILL DAMAGE THE READ/
WRITE HEAD.**



SECTION IV PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. The procedure described in this section tests the instruments electrical performance using the specifications listed in Table 1-2 as the performance standards.

4-3. EQUIPMENT REQUIRED

4-4. Equipment required for the performance tests is listed in the Recommended Test Equipment table in Section I (Table 1-3).

4-5. OPERATIONAL VERIFICATION AND PERFORMANCE TESTS

4-6. Two sets of tests are provided in the following paragraph. The Operational Verification test will indicate whether the instrument tested operates correctly in all modes. The Performance Test is more extensive and may be performed after the Operational Verification Test to measure the condition of the instrument tested with respect to the new instrument specifications. Both tests require the use of pre-programmed magnetic cards which are included as part of the Diagnostic Card Kit.

4-7. IN-CABINET PERFORMANCE TEST CARD

4-8. The Operational Verification Test Card, page 4-6a, is provided to allow results of the tests to be recorded. A series of these cards with data taken at periodic intervals can be used to show trends in performance.

Table 4-1. Operational Verification Test

I. SELF CHECK 1, 2, and 3
II. R-PACK TESTS (Precision Resistor Pack Tests)
a. V/I R-PACK
b. R-PACK C-Current Modes Check
c. R-PACK Failure Detect Check

4-9. Operational Verification Test

4-10. The Operational Verification Test for the 5045A IC Tester consists of several self check routines that quickly verify correct operation of the major testing modes of the instrument. This test may be run each day to verify correct operation. For a rigorous verification of all 5045A specifications, refer to the Performance Test Paragraph 4-35.

4-11. The Operational Verification Test is divided into two parts: Part I uses a dummy IC along with special program cards to check several programmed modes of voltages and currents. In these tests, pin drivers are used in pairs. One driver is used as a source and the other becomes a measuring device. In Part II, a special precision resistor pack is used to obtain information about individual pins and their parameters.

4-12. Part I: Self Checks 1, 2 and 3

- a. Set the front panel switches as follows:
START — MAN/HNDLER
ON FAILURE — CONTINUE
V and I RESULTS — OFF (down)
PRINTER — ON
- b. Install the Dummy IC in the test socket. For Option 024 (24-pin instruments), use the IC (HP P/N 05045-80020). The 16-pin IC should be used for standard 16-pin instruments (HP P/N 05045-60019). The 20-pin socket adapter (HP P/N 05045-60032) must be used with 16-pin ICs.

4-13. Self Check 1

- a. Load the correct "Self Check 1" program card for 16-pin or 24-pin instrument. The following printout will be produced:

```
SELF CHECK 1  
CPU RDR PRNTR OK
```

The printout indicates that the 5045A's card reader, central processing unit, and printer are operating properly.

- c. Press TEST. Verify that the PASS light illuminates. There should be no printer output.

4-14. Self Check 2

- a. Load the correct "Self Check 2" card for 16-pin or 24-pin instrument. This self check program is a test of relative accuracy for several modes of voltage and current setup conditions.
- b. Press TEST. Verify that the PASS light illuminates. There should be no printer output.

4-15. Self Check 3

Note: Self check 3 will not operate with instrument serial numbers 1620A00155 and below.

- a. Load the correct "Self Check 3" card for 16-pin or 24-pin instruments. This self check program further exercises the pin driver voltage and current generators.
- b. Press TEST. Verify that the PASS light illuminates. There should be no printer output.

4-16. Part II: R-Pack Operational Verification Tests

- a. The precision resistor pack (R-Pack HP P/N 05045-60042) is used with special program cards to gain additional information about individual voltage and current parameters for each pin of the IC tester. The R-Pack loads each pin of the IC tester with a precision 1K Ω resistor. The 24 resistors tie to a common ground point. When testing is performed, the R-Pack is inserted in the test socket and its ground lead is connected to A30TP25 (marked !). The R-Pack tests uses the voltage and current generator along with the V and I Results function to produce a printed output for each pin.

4-17. The R-Pack Operational Verification consists of the following tests:

- a. V/I Performance
 - Analog Accuracy
 - V/I Results Function
- b. Pin Driver C-Current Modes Check
- c. Failure Detect Check

4-18. V/I Performance Check

4-19. This test verifies that the pin driver voltage and current generators along with the V and I Results function are working properly.

4-20. Remove the Test Head cover.

- a. Set 5045A Front Panel switches to:
 - START — MAN/HNDLR
 - ON FAILURE — HOLD
 - V and I RESULTS — ON (UP)
 - PRINTER — ON

Note: all of the tests for each program card may be executed automatically by setting ON FAILURE to CONTINUE.

- b. Turn on 5045A and load "V/I R-PACK — 24-pin" or "V/I R-PACK — 16-pin" for 24-pin or 16-pin instrument, respectively.
- c. Install R-PACK in Test Head socket.
- d. Connect R-PACK ground lead to A30TP25 (marked ↓).

4-21. The V/I R-Pack check consists of four operational modes with a corresponding printout for each.

4-22. +7V, +7 mA Mode

- a. Press TEST.
- b. A printout similar to Figure 4-1 will be produced.
- c. All pins should be listed as failing.
- d. Note that each pin is listed twice. For example, observe the data for pin 24. The "L" in the printout denotes the programmed value of the voltage or current. The lower line denotes that 7 mA was forced (programmed) and the resultant voltage is 7.05V (1K Ω resistors are loading each pin). The upper line for pin 24 denotes that 7V was applied and the resultant current was 7.0 mA.
- e. In each printout line, the parameter of importance is the result of the forced current or applied voltage. Voltage printouts will always be on the left and current printouts on the right.
- f. For the 7V, 7 mA printout, make sure that voltage and current results for all pins are within the following limits.

7V, 7 mA
7V \pm 0.40V (6.60/7.40V)
7 mA \pm 0.40 mA (6.60/7.40 mA)


```
TEST: 7V,7MA
FAIL 3PASS 0
20 7LV 7 MA
20 7.05 V 7LMA
21 7LV 7.04 MA
21 7.02 V 7LMA
22 7LV 7 MA
22 7.04 V 7LMA
23 7LV 7.08 MA
23 6.98 V 7LMA
24 7LV 7 MA
24 7.05 V 7LMA
CORRECT 11111111111111
PIN
STATE 1>11111111111111
FAIL PIN: 1 2 3
4 5 6 7 8
9 10 11 12 13
14 15 16 17 18
19 20 21 22 23
24
```

Figure 4-1. Typical printout for R-Pack Test (partial printout)

4-23. 1V, 1 mA

- a. Press ADVANCE TO NEXT FAIL. The "1V, 1 mA" printout will be produced.
- b. Examine the voltage and current parameters as done in paragraph 4-22.
- c. Verify the following limits for all pins.

1V, 1 mA
1V \pm 60 mV (0.940/1.060V)
1 mA \pm 60 μ A (0.940/1.060 mA)

4-24. -7V, -7 mA

- a. Press ADVANCE TO NEXT FAIL. The "-7V, -7 mA" printout will be produced.
- b. Examine the voltage and current parameters as in paragraph 4-22. Verify the following limits for all pins.

-7V, -7 mA
-7V \pm 40 mV (-7.40/-6.60V)
-7 mA \pm 40 μ A (-7.40/6.60 mA)

4-25. -1V, -1 mA

- a. Press ADVANCE TO NEXT FAIL. The "-1V, -1 mA" printout will be produced.
- b. Examine the voltage and current parameters as in paragraph 4-22.

- c. Verify the following limits for all pins.

-1V, -1 mA
-1V \pm 6 mV (-1.060/-0.940V)
-1 mA \pm 60 μ A (-1.060/-0.940 mA)

4-26. Pin Driver C-Current Modes Check

4-27. This test sets up the pin driver in typical continuous current modes. The continuous current function allows for current generators to be turned on independently of the logic state of the pin under test. In each of the tests, both the Logic 1 and Logic 0 current generators are turned on simultaneously. The resultant output current is the difference between the programmed Logic 1 and Logic 0 currents.

- a. Load "R-Pack C-Current Modes — 24-Pin" or "R-Pack C-Current Modes — 16-Pin" for 24-pin or 16-pin instrument, respectively.

4-28. 7V, 7 mA +12, C-5

NOTE

+12, C-5 denotes that the Logic 1 and Logic 0 currents are +12 mA and -5 mA, respectively. C-5 means that the Logic "0" source is turned on continuously for -5 mA.

- a. Press TEST. The "7V, 7 mA +12, C-5" printout will be produced.
b. Examine the voltage and current parameters as in paragraph 4-22. Verify the following limits for all pins.

7V \pm 1.1V (5.9/8.1V)
7 mA \pm 1.1 mA (5.9/8.1 mA)

4-29. 1V, 1 mA +2, C -1

Logic 1 Current Source: +2 mA
Logic 0 Current Source: -1 mA continuous

- a. Press ADVANCE TO NEXT FAIL. The "1V, 1 mA +2, C-1" printout will be produced.
b. Examine the voltage and current parameters as in paragraph 4-22.
c. Verify the following limits for all pins.

1V \pm 0.18V (0.82/1.18)
1 mA \pm 0.18 mA (0.82/1.18 mA)

4-30. -7V, -7 mA -12, C+5

Logic 1 Current Source: +5 mA Continuous
Logic 0 Current Source: -12 mA

- a. Press ADVANCE TO NEXT FAIL. The "-7V, -7 mA -12, C+5" printout will be produced.
b. Examine the voltage and current parameters as in paragraph 4-22.
c. Verify the following limits for all pins.

-7V \pm 1.1V (-8.1/5.9V)
-7 mA \pm 1.1 mA (-8.1/-5.9) mA

4-31. -1V, 1 mA -2, C+1

Logic 1 Current Source: +1 mA Continuous
Logic 0 Current Source: -2 mA

- a. Press ADVANCE TO NEXT FAIL. The "-1V, -1 mA -2, C+1" printout will be produced.
- b. Examine the voltage and current parameters as in paragraph 4-22.
- c. Verify the following limits for all pins.
-1V \pm .18 (-1.18/-0.82V)
-1 mA \pm .18 (-1.18/-0.82 mA)

4-32. Failure Detection Circuitry Check

4-33. The failure detection circuitry check verifies that the tester can indicate failing conditions for IC's under test. Failing voltage and current conditions are set up with the R-Pack. Source and load parameters are tested for each pin. The four tests are as follows:

- | | |
|---------------|---|
| Test 1 | Even Pins "Source" Logic 1
Odd Pins "Load" Logic 0 |
| Test 2 | Even Pins "Load" Logic 0
Odd Pins "Source" Logic 1 |
| Test 3 | Even Pins "Load" Logic 1
Odd Pins "Source" Logic 0 |
| Test 4 | Even Pins "Source" Logic 0
Odd Pins "Load" Logic 1 |

- a. Set 5045A front panel switches as in paragraph 4-20 except:
ON FAILURE — CONTINUE
V and I RESULTS — OFF (Down)
- b. Remove R-Pack from the test socket.
- c. Load "R-Pack Fail Detect Check — 24-Pin" or "R-Pack Fail Detect Check — 16-Pin" for 24-pin or 16-pin instrument.
- d. Press TEST. PASS light should illuminate and no printout will be produced.
- e. Install R-Pack in test socket and connect ground lead to A30TP25 (marked I).
- f. Press TEST. Printout should begin. For all four tests, verify that every pin is listed in the FAIL PIN information. For 16-pin instruments, pins 1-16 should fail. For 24-pin instruments, pins 1-24 should fail. If any pin is not listed in any or all of the tests, then there may be a problem with the failure detect circuitry for that pin. If this occurs, reinsert the R-Pack and run the test again. If problem still occurs refer to Troubleshooting, Section VIII.

4-34. Successful completion of R-Pack Tests 1, 2, and 3 along with positive self check results indicates that with high probability the 5045A Digital IC Tester is functioning properly. For a complete verification of all 5045A published specifications, the Performance Test must be executed.

Operational Verification Test Card


HEWLETT-PACKARD MODEL 5045A
IC TESTER

Test Performed _____
Date _____

SERIAL NO. _____

DESCRIPTION	CHECK
1. Self Check 1	_____
2. Self Check 2	_____
3. Self Check 3	_____
4. V/I R-Pack	_____
5. R-Pack C-Current Modes	_____
6. R-Pack Fail Detect Check	_____

NOTE: Tests 4, 5, 6 printout tapes should be fastened to this Test Card.

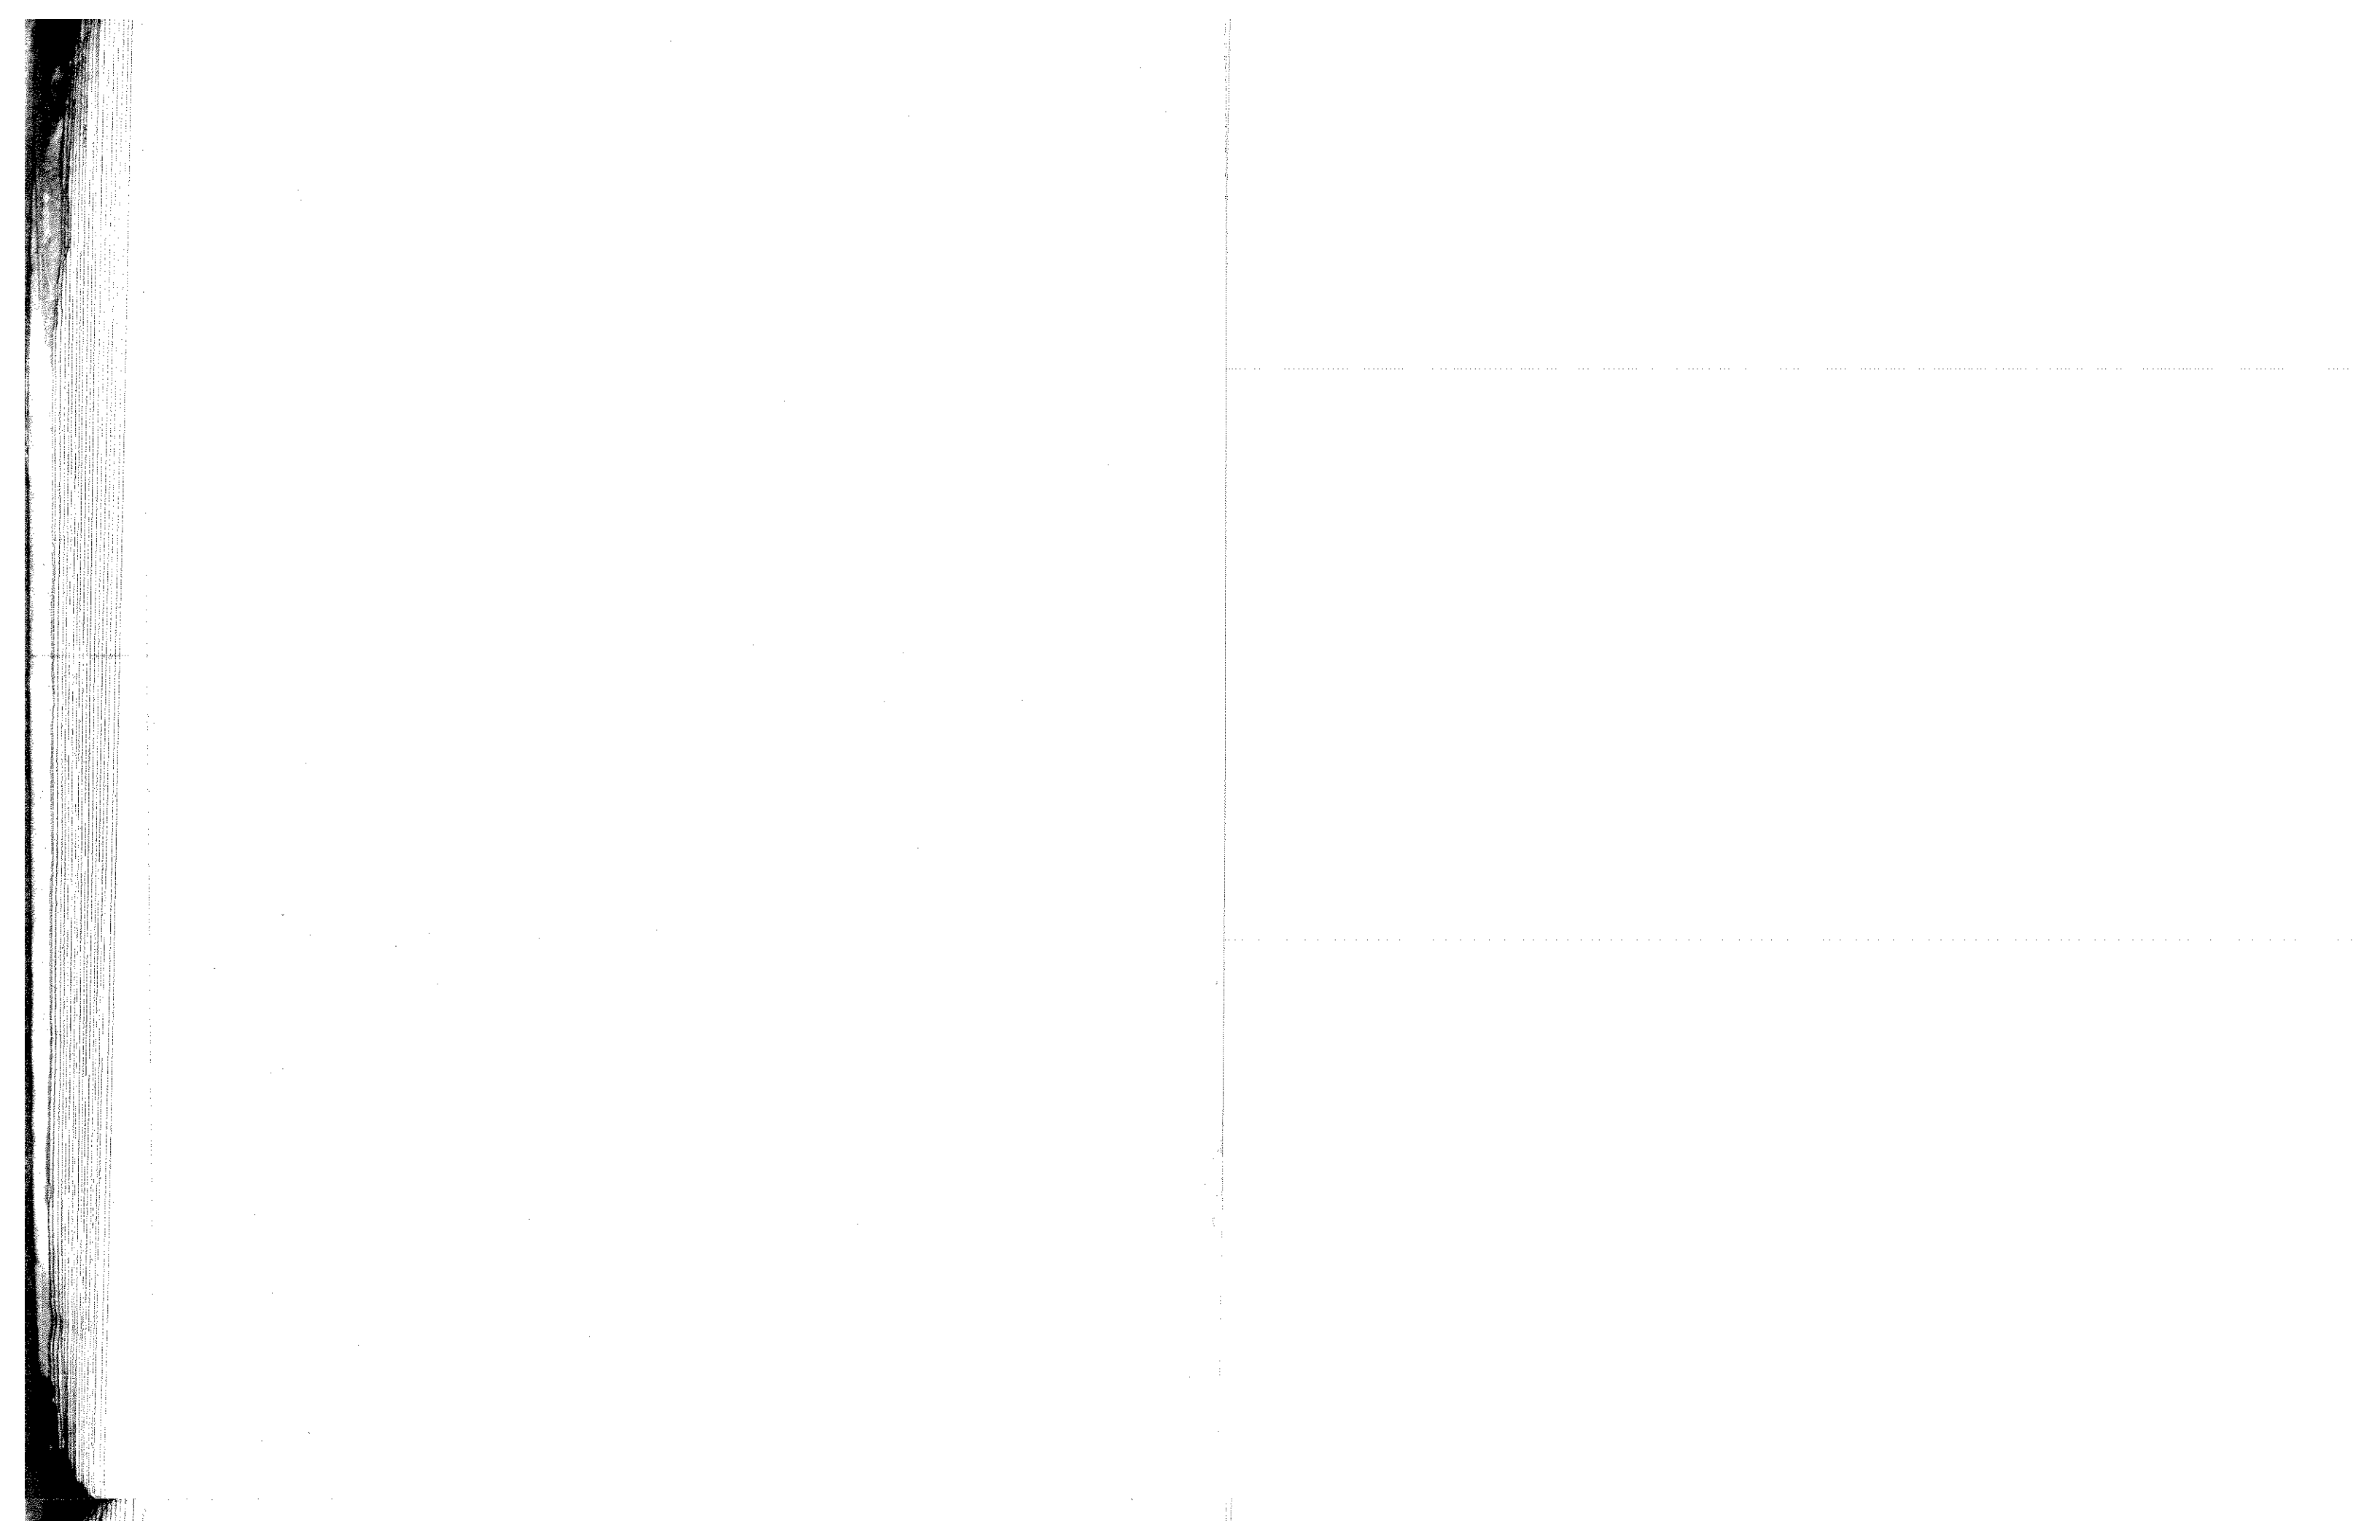

4-35. PERFORMANCE TEST

4-36. The 5045A Performance Test, outlined in Table 4-2 is used to verify that all operational modes of the IC tester are functioning correctly. In addition, all voltage and current specifications are verified. This Performance Test may be used for incoming inspection, periodic certification, troubleshooting and post-repair verification.

Table 4-2. Performance Test Outline

I.	DAC Adjustment Check DAC Reference Level V Zero, V Gain I Zero, I Gain
II.	Analog Voltage Check Part I Hi, Lo Range Part II Logic Levels
III.	Analog Current Check Low Range 200 mA Range Continuous Current Modes
IV.	Cross Talk Part I, II
V.	Failure Detection Circuitry Check
VI.	V and I Results Check Voltage Current V/I Offset
VII.	Fast Edge Check Pos Rise Time Neg Rise Time
VIII.	Relays Check
IX.	Op Code Check
X.	Printer Check
XI.	Automatic IC Handler Signals Check (Optional)

4-37. DAC ADJUSTMENT CHECK

4-38. The "DAC Adj Check" test verifies proper alignment of the A11 Reference Level Generator (DAC). This procedure may be deleted if an alignment has just been performed.

- a. Remove test head cover. Tilt up the front portion of the cover (the cover hinges at the rear).
- b. Attach DVM ground lead to A30 TP25 (marked ↓). Remove R-Pack if installed.
- c. Set front panel switches as follows:
START — MAN/HNDLR
ON FAILURE — HOLD
V and I RESULTS — DOWN
PRINTER — ON
- d. Load "DAC Adjust CHECK"

4-39. Test 1: DAC REF 7.5V

4-40. This test verifies that the DAC reference level is correct.

- a. Press TEST. The "DAC REF 7.5V" printout will be produced.
- b. Measure voltage on TP8.
- c. Verify the following limits of 7.5V ~~±5~~ ^{±15} mV.

4-41. Test 2: -V Zero 2 0V

4-42. This test verifies correct zero offset for the -V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "-V Zero 2 0V" printout will be produced.
- b. Measure voltage on TP8.
- c. Verify the following limits of 0.00V ±10 mV.

4-43. Test 3: +V Zero 2 0V

4-44. This test verifies correct zero offset for the +V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "+V Zero 2 0V" printout will be produced.
- b. Measure voltage on TP8.
- c. Verify the following limits of 0.00V ±10 mV.

4-45. Test 4: "+6.5V Logic 1"

4-46. This test verifies the +6.5V Gain adjustment of the +V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "+6.5V Logic 1" printout will be produced.

- b. Measure voltage on TP8.
- c. Verify the following limits of $+6.5V \pm 10 \text{ mV}$.

4-47. Test 5: "+6.5V Logic 0"

4-48. This test verifies the +6.5V Gain adjustment of the -V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "+6.5V Logic 0" printout will be produced
- b. Measure voltage on TP8.
- c. Verify the following limits of $+6.5V \pm 10 \text{ mV}$.

4-49. Test 6: -6.5V Logic 1

4-50. This test verifies the -6.5V Gain adjustment of the +V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "-6.5V Logic 1" printout will be produced.
- b. Measure voltage on TP8.
- c. Verify the following limits of $-6.5V \pm 10 \text{ mV}$.

4-51. Test 7: -6.5V Logic 0

4-52. This test verifies the -6.5V Gain adjustment of the -V Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "-6.5V Logic 0" printout will be produced.
- b. Measure voltage on TP8.
- c. Verify the following limits of $-6.5V \pm 10 \text{ mV}$.

4-53. Test 8: Current Gen, +10 mA

4-54. This test verifies proper gain for the +I Level Generator. Switch meter to current mode.

- a. Press ADVANCE TO NEXT FAIL. The "Current Gen. +10 mA" printout will be produced.
- b. Measure current at TP8.
- c. Verify the following limits of $10 \text{ mA} \pm 6 \text{ mA}$.

4-55. Test 9: Current Gen, -10 mA

4-56. This test verifies proper gain for the -I Level Generator.

- a. Press ADVANCE TO NEXT FAIL. The "Current Gen. -10 mA" printout will be produced.
- b. Measure current at TP8.
- c. Verify the following limits of $-10 \text{ mA} \pm 6 \text{ mA}$.

4-57. Test 10: +I Zero, +10 μ A

- 4-58. This test verifies proper zero offset for the +I Level Generator.
- Press ADVANCE TO NEXT FAIL. The "I Zero +10 μ A" printout will be produced.
 - Measure current at TP8.
 - Verify the following limits of +10 μ A \pm 5 μ A.

4-59. Test 11: -I Zero, -10 μ A

- 4-60. This test verifies proper zero offset for the -I Level Generator.
- Press ADVANCE TO NEXT FAIL. The "I Zero -10 μ A" printout will be produced.
 - Measure current at TP8.
 - Verify the following limits of -10 μ A \pm 5 μ A.

4-61. If all limits have been satisfied for all 11 tests then the A11 Reference Level Generator (DAC) is properly aligned. Perform the complete A11 adjustment procedure as described in Section V, if any of the tests failed.

4-62. Analog Voltage Check

4-63. The Analog Voltage Check is a verification of the accuracy of programmed voltage levels. The test is divided into two parts.


a. Part I

- +7.5V, Pos High Range High End Logic 1
- +1.9V Pos High Range Low End Logic 1
- +1.8V Pos Low Range High End Logic 1
- +0.1V Pos Low Range Low End Logic 1
- 7.5V Neg High Range High End Logic 0
- 1.9V Neg High Range Low End Logic 0
- 1.8V Neg Low Range High End Logic 0
- 0.1V Neg Low Range Low End Logic 0

b. Part II

- +5V Logic 1
- +5V Logic 0
- 5V Logic 1
- 5V Logic 0
- +1V Logic 1
- +1V Logic 0
- 1V Logic 1
- 1V Logic 0

4-64. The following graph shows the breakdown of the IC Tester's High and Low Voltage Ranges. The \blacktriangle marks denote the voltages checked in Part I. "o" marks denote voltages checked in Part II.

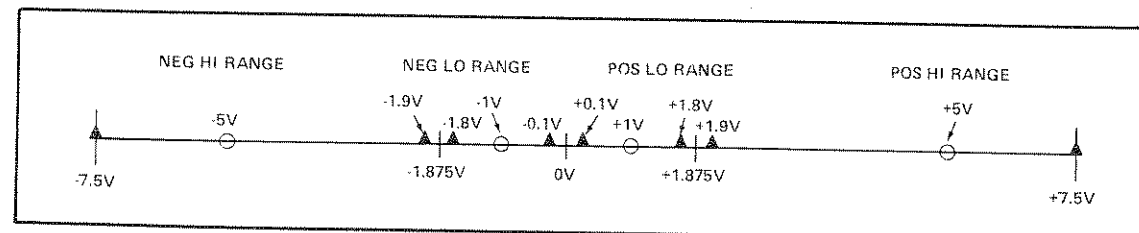

4-65. Part I

- a. Set front panel switches as in paragraph 4-38.
- b. Load "Analog Voltage Check Part 1".
- c. Press TEST.

4-66. Test 1: +7.5V Pos High Range, High End

- a. Measure voltage on Test Points 1-24.
- b. Verify the following limits of $+7.5V \pm 25$ mV for all pins.

4-67. Test 2: +1.9V Pos High Range, Low End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+1.9V \pm 25$ mV for all pins.

4-68. Test 3: +1.8V Pos Low Range High End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+1.8V \pm 15$ mV for all pins.

4-69. Test 4: +0.1V Pos Low Range, Low End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+0.1V \pm 15$ mV for all pins.

4-70. Test 5: -7.5V Neg High Range, High End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $-7.5V \pm 25$ mV for all pins.

4-71. Test 6: -1.9V Neg High Range, Low End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $-1.9V \pm 25$ mV for all pins.

4-72. Test 7: -1.8V Neg Low Range, High End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $-1.8V \pm 15$ mV for all pins.

4-73. Test 8: -0.1V Neg Low Range, Low End

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $-0.1V \pm 15 \text{ mV}$ for all pins.

4-74. Part II

4-75. Voltage Limit Verification for Pos and Neg Logic Modes.

- a. Load "Analog Voltage Check Part II".

4-76. Test 1: +5V Logic 1

- a. Press TEST.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+5V \pm 25 \text{ mV}$ for all pins.

4-77. Test 2: +5V Logic 0

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+5V \pm 25 \text{ mV}$ for all pins.

4-78. Test 3: -5V Logic 1

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage of Test Points 1-24.
- c. Verify the following limits of $-5V \pm 25 \text{ mV}$ for all pins.

4-79. Test 4: -5V Logic 0

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $-5V \pm 25 \text{ mV}$ for all pins.

4-80. Test 5: +1V Logic 1

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+1V \pm 15 \text{ mV}$ for all pins.

4-81. Test 6: +1V Logic 0

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure voltage on Test Points 1-24.
- c. Verify the following limits of $+1V \pm 15 \text{ mV}$ for all pins.

4-82. Test 7: -1V Logic 1

- Press ADVANCE TO NEXT FAIL.
- Measure voltage on Test Points 1-24.
- Verify the following limits of $-1V \pm 15 \text{ mV}$ for all pins.

4-83. Test 8: -1V Logic 0

- Press ADVANCE TO NEXT FAIL.
- Measure voltage on Test Points 1-24.
- Verify the following limits of $-1V \pm 15 \text{ mV}$ for all pins.

4-84. Analog Current Check

4-85. The Analog Current Check is a verification of the accuracy of programmed current levels. The test is divided into three parts.

4-86. Part I — Low Current Range

- $\pm 20 \text{ mA}$
- $\pm 2.6 \text{ mA}$
- $\pm 2.4 \text{ mA}$
- $\pm 10 \mu\text{A}$

4-87. Part II — High Current Range

- $\pm 200 \text{ mA}$


4-88. Part III

a. Continuous Current Modes

- $\pm 100 \text{ mA}$
- $\pm 20 \text{ mA}$
- $\pm 2 \text{ mA}$
- $\pm 10 \mu\text{A}$

b. Voltage Verification for Current Modes

4-89. The following graph shows the breakdown of the IC Testers High and Low current ranges. The "▲" marks denote the currents checked in parts 1 and 2. The "○" marks are for currents checked in part 3 (continuous modes).

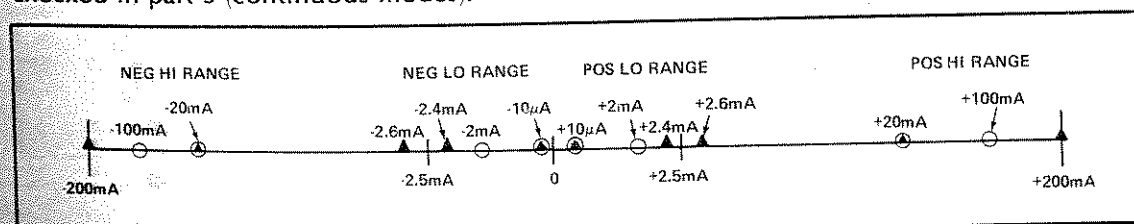

4-90. Part I — Analog Current Check Low Range

- Set up DVM to measure DC current.
- Connect ground level to TP25 (marked ↓).
- Load "Analog Current Check Low Range".

4-91. Test 1: +20 mA

- a. Press TEST.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of 20 mA \pm 1.2 mA for all pins.

4-92. Test 2: +2.6 mA

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of 2.6 mA \pm 0.4 mA for all pins.

4-93. Test 3: +2.4 mA

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of 2.4 mA \pm 0.14 mA for all pins.

4-94. Test 4: +10 μ A

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of 10 μ A \pm 10 μ A for all pins.

4-95. Test 5: -20 mA

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of -20 mA \pm 1.2 mA for all pins.

4-96. Test 6: -2.6 mA

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of -2.6 mA \pm 0.4 mA for all pins.

4-97. Test 7: -2.4 mA

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of -2.4 mA \pm 0.14 mA for all pins.

4-98. Test 8: -10 μ A

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-24.
- c. Verify the following limits of -10 μ A \pm 10 μ A for all pins.

4-99. Analog Current Check 200 mA Range

4-100. The 200 mA ranges are checked with a separate test due to the maximum available current restrictions of the IC Tester. For any one pin setup condition, the total current from either positive or negative current generators may not exceed 600 mA. The test is organized so that only one pin is set up at any one time. The setup condition moves sequentially from pin 1 to 24 each time the ADVANCE TO NEXT FAIL button is pushed. Pin 1 is set up by pressing TEST.

- a. Load "Analog Current Check 200 mA Range".
- b. Press TEST.
- c. Measure current at TP1.
- d. Verify the following limits of $+200\text{ mA} \pm 12\text{ mA}$ on pin 1.
- e. Press ADVANCE TO NEXT FAIL to step test to pin 2. For each step, verify the following limits of $+200\text{ mA} \pm 12\text{ mA}$.
- f. After TP24 has been checked, the -200 mA test begins with TP1. Again press ADVANCE TO NEXT FAIL to step through all 24-pins. The spec for the -200 mA test is $-200\text{ mA} \pm 12\text{ mA}$.

4-101. Continuous Current Modes

4-102. The continuous current function allows the current generators to be turned on independent of the logic state. In each of the tests, both the Logic 1 and Logic 0 current generators are turned on simultaneously. The resultant output appearing at the test points is the difference between the positive and negative programmed current levels. The tests are divided between three program cards as follows:

- a. Card 1 Pins 1-8
- b. Card 2 Pins 9-16
- c. Card 3 Pins 17-24

4-103. For any particular test checkpoint, the 8 pins will have different current setups. Refer to Table 4-3 for the expected outputs and limits.

NOTE

For 16-pin instruments, use the program for modes 1-8 and 17-24. Ignore references to pins 9-16.

4-104. Continuous Current Modes 1-8

- a. Load "Pindriver C-Current Modes 1-8".

4-105. Test 1

- a. Press TEST.
- b. Measure current on Test Points 1-8.
- c. Verify currents according to Table 4-3 Test 1.

4-106. Test 2

- a. Press ADVANCE TO NEXT FAIL.
- b. Measure current on Test Points 1-8.
- c. Verify currents according to Test 2.

4-107. Continue for remaining tests by pressing ADVANCE TO NEXT FAIL. For each test, verify the currents for Test Points 1-8 by referring to Table 4-3 and the appropriate test number.

4-108. Continuous Current Modes 9-16

- a. Load "Pindriver C-Current Modes 9-16".
- b. Proceed as in paragraph 4-104 above making reference to pins 9-16 in Table 4-3.

4-109. Continuous Current Modes 17-24

- a. Load "Pindriver C-Current Modes 17-24".
- b. Proceed as in paragraph 4-104 above making reference to pins 17-24 in Table 4-3.

4-110. Voltage Verification for Current Modes

4-111. This test is a verification of programmed voltage modes for continuous current pin driver setups.

4-112. Use the same procedure and equipment as outlined in paragraphs 4-104 through 4-109 except that voltages will be measured instead of currents. The approximate voltage magnitude is 7 volts. Refer to Table 4-4 for correct voltage levels. Note that for each program card, tests 1 through 4 are programmed for +7V \pm 25 mV. For tests 5 through 8, the level is -7V \pm 25 mV.

Table 4-3. Pindriver C-Current Modes (Current)

Pin Number			Test Number							
Card 1-8	Card 9-16	Card 17-24	1	2	3	4	5	6	7	8
1,2	9,10	17,18	+100 mA +/-18 mA	+20 mA +/-3.6 mA	+2 mA +/-0.52 mA	+10 μ A +20, -10 μ A	-100 mA +/-18 mA	-20 mA +/-3.6 mA	-2 mA +/-0.52 mA	-10 μ A -20, +10 μ A
3,4	11,12	19,20	+20 mA +/-3.6 mA	+20 mA +/-0.52 mA	+10 μ A +20, -10 μ A	-100 mA +/-18 mA	-20 mA +/-3.6 mA	-2 mA +/-0.52 mA	-10 μ A -20 +10 μ A	+100 mA +/-18 mA
5,6	13,14	21,22	+2 mA +/-0.52 mA	+10 μ A +20, -10 μ A	-100 mA +/-18 mA	-20 mA +/-3.6 mA	-2 mA +/-0.52 mA	-10 μ A -20, +10 μ A	+100 mA +/-18 mA	+20 mA +/-3.6 mA
7,8	15,16	23,24	+10 μ A +20, -10 μ A	-100 mA +/-18 mA	-20 mA +/-3.6 mA	-2 mA +/-0.52 mA	-10 μ A -20, +10 μ A	+100 mA +/-18 mA	+20 mA +/-3.6 mA	+2 mA +/-0.52 mA

Table 4-4. Pindriver C-Current Modes (Voltages)

Pin Number			Test Number							
Card 1-8	Card 9-16	Card 17-24	1	2	3	4	5	6	7	8
1,2	9,10	17,18	+7V	+7V	+7V	+7V	-7V	-7V	-7V	-7V
3,4	11,12	19,20	+7V	+7V	+7V	-7V	-7V	-7V	-7V	+7V
5,6	13,14	21,22	+7V	+7V	-7V	-7V	-7V	-7V	+7V	+7V
7,8	15,16	23,24	+7V	-7V	-7V	-7V	-7V	+7V	+7V	+7V

Note: +/-25 mV limits for all.

4-113. Cross Talk

4-114. The Cross Talk tests verify that the accuracy of programmed voltage and currents is within specification when cross talk conditions are set up on the Reference Level Generators and the individual pindrivers.

4-115. Cross Talk Part I

- a. Set front panel switches as in paragraph 4-38c.
- b. Connect DVM ground lead to TP25 (marked I).
- c. Connect DVM Positive lead to TP7.
- d. Load "Cross Talk Part I".

4-116. Test 1: +V -I

- a. Press TEST.
- b. Verify the following limits of $7.5V \pm 25 \text{ mV}$ on TP7.

4-117. Test 2: +V -I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $7.5V \pm 25 \text{ mV}$ on TP7.

4-118. Test 3: +V +I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $7.5V \pm 25 \text{ mV}$ on TP7.

4-119. Test 4: +V +I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $7.5V \pm 25 \text{ mV}$ on TP7.

4-120. Test 5: -V +I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-7.5V \pm 25 \text{ mV}$ on TP7.

4-121. Test 6: -V +I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-7.5V \pm 25 \text{ mV}$ on TP7.

4-122. Test 7: -V -I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-7.5V \pm 25 \text{ mV}$ on TP7.

4-123. Test 8: -V -I

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-7.5V \pm 25 \text{ mV}$ on TP7.

4-124. Set up DVM to measure current (approx. 2 mA).

- a. Connect ammeter positive lead to TP7.
- b. Ground lead remains on TP25 (marked I).

4-125. Test 9: +I +V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-126. Test 10: +I +V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-127. Test 11: +I -V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-128. Test 12: +I -V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-129. Test 13: -I -V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-130. Test 14: -I -V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-131. Test 15: -I +V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-132. Test 16: -I +V

- a. Press ADVANCE TO NEXT FAIL.
- b. Verify the following limits of $-2 \text{ mA} \pm 0.12 \text{ mA}$ at TP7.

4-133. Cross Talk Part II

- a. Set DVM to measure voltage (approx. 7.5V). Connect DVM ground lead to TP25 (marked (I)). Load "Cross Talk Part II".
- b. Press TEST. Printer output should be similar to that below:

```
TEST: 1-2  
FAIL 2PASS 0  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN: 1 4 7  
10 13 16 19 22
```

- c. Measure voltage on indicated Fail Pins. Voltage should be $+7.5V \pm 25$ mV.
- d. Press ADVANCE TO NEXT FAIL. Printer output should be similar to that below:

```
TEST: 1-2  
FAIL 2PASS 0  
CORRECT 001001001001  
PIN  
STATE 1>100100100100  
FAIL PIN: 1 4 7  
10 13 16 19 22
```

- e. Measure voltages on indicated Fail Pins. Voltage should be $+7.5V \pm 25$ mV.
- f. Press ADVANCE TO NEXT FAIL. Printer output should be similar to that below:

```
TEST: 2-3  
FAIL 2PASS 0  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN: 2 5 8  
11 14 17 20 23
```

- g. Measure voltage on indicated Fail Pins. Voltage should be $+7.5V \pm 25$ mV.
- h. Press ADVANCE TO NEXT FAIL. Printer output should be similar to that below:

```
TEST: 2-3  
FAIL 2PASS 0  
CORRECT 010010010010  
PIN  
STATE 1>010010010010  
FAIL PIN: 2 5 8  
11 14 17 20 23
```

- i. Measure voltage on indicated Fail Pins. Voltage should be $+7.5V \pm 25 \text{ mV}$.
- j. Press ADVANCE TO NEXT FAIL. Printer output should be similar to that below:

```
TEST: 3-4  
FAIL 2PASS 0  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN: 3 6 9  
12 15 18 21 24
```

- k. Measure voltage on indicated Fail Pins. Voltage should be $+7.5V \pm 25 \text{ mV}$.
- l. Press ADVANCE TO NEXT FAIL. Printer output should be similar to that below:

```
TEST: 3-4  
FAIL 2PASS 0  
CORRECT 100100100100  
PIN  
STATE 1>001001001001  
FAIL PIN: 3 6 9  
12 15 18 21 24
```

- m. Measure voltage on indicated Fail Pins. Voltage should be $+7.5V \pm 25 \text{ mV}$.

4-134. Failure Detection Circuitry Check

4-135. The Failure Detection Check verifies that a failing device under test can activate the 5045A's failure circuitry. The test uses a precision resistor package (HP P/N 05045-60042) to set up failing conditions for voltage and current. Source and load parameters are tested for each pin. The tests are as follows:

- Test 1** Even Pins "Source" Logic 1
Odd Pins "Load" Logic 0
- Test 2** Even Pins "Load" Logic 0
Odd Pins "Source" Logic 1
- Test 3** Even Pins "Load" Logic 1
Odd Pins "Source" Logic 0
- Test 4** Even Pins "Source" Logic 0
Odd Pins "Load" Logic 1

- a. Set 5045A front panel switches as in paragraph 4-38 c. except:

ON FAILURE — CONTINUE

- b. Load "R-Pack Fail Detect Check 24" or "R-Pack Fail Detect Check 16" for 24-pin or 16-pin instrument. These programs are included in the Operational Verification Card Set. Press TEST. PASS light should illuminate and no printout will be produced. Note: R-Pack is not installed for this part of the test.

- c. Now install R-Pack in test socket and connect ground lead to TP25 (marked I). Secure R-Pack with locking lever. Press TEST. Printout should begin. For all four tests, verify that every pin is listed in the FAIL PIN information. For 16-pin instruments, pins 1-16 should fail. For 24-pin instruments, pins 1-24 should fail. If any pin is not listed in any or all of the tests, then there may be a problem with the failure detect circuitry for that pin. If this occurs, reinsert the R-Pack and run the test again. If problem still occurs, refer to Troubleshooting in Section VIII.

4-136. V AND I RESULTS — VOLTMETER/AMMETER PRINTOUT CHECK

4-137. This test verifies that the V and I RESULTS printout feature is working properly. The voltage specification is verified by applying an external voltage standard to each of the pins and observing the computed printout. The current specifications check uses the Resistor Pack (also used in part V). A known current is produced by applying a specified voltage across each 1K resistor in the R-Pack. The resultant current is then computed and printed by the tester. The last part of the V/I check verifies that the voltmeter circuitry has minimum offset.

CAUTION

Always adjust the power supply to the approximate test range before applying to the IC tester. Damage to the 5045A may result if voltage magnitudes exceeding 7V are applied to the Test Head.

4-138. Voltage Printout Feature

CAUTION AGAIN

Do not connect the power supply until the correct voltage is set up. Damage to the IC Tester may result if excessive voltage is applied to the Test Head pins.

- a. Turn on power supply and set voltage to $+4.99V \pm 5 \text{ mV}$. Connect negative (-) side to A30 TP25 (I).
- b. Install R-Pack in the 24 pin Test Head socket. Do not connect the black ground lead at this time.
- c. Set Front Panel Switches as follows:
START — MAN/HNDLR
ON FAIL — Hold
V and I RESULTS — OFF (DOWN)
Printer — ON
- d. Load "V/I Results Voltage Check 16" or "V/I Results Voltage Check 24". Make sure that the correct program card is used (16-pin or 24-pin version).
- e. Press Test. The "+4.99 Setup" printout will be produced.
- f. Connect Power Supply Positive lead (+) to R-Pack black ground lead.
- g. Measure Voltage on TP8 and adjust Power Supply as necessary to produce $5.000V \pm 5 \text{ mV}$.
- h. Set V and I RESULTS — ON (switch UP).

4-139. V/I 5V Verification

- a. Press ADVANCE TO NEXT FAIL.

b. A printout similar to the following will be produced (partial printout).

```
TEST: +5V VERIF
FAIL SPASS 0
17 6LV >0.01 MA
17 4.99 V 0.01LMA
18 6LV >0.01 MA
18 4.99 V 0.01LMA
19 6LV >0.01 MA
19 4.99 V 0.01LMA
20 6LV >0.01 MA
20 4.99 V 0.01LMA
21 6LV >0.01 MA
21 4.99 V 0.01LMA
22 6LV >0.01 MA
22 4.99 V 0.01LMA
23 6LV >0.01 MA
23 4.99 V 0.01LMA
24 6LV >0.01 MA
24 4.99 V 0.01LMA
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN: 1 2 3
4 5 6 7 8
9 10 11 12 13
14 15 16 17 18
19 20 21 22 23
24
```

NOTE

Each pin number has two listings. Voltage levels are listed on the left side of the printout. All parameters containing "L" should be ignored. In this test, only the lower printout for each pin is of importance.

c. For each pin, verify that the printout reads:

5V ±.03V (4.97V, 5.03V)
.04V (4.96V, 5.04V)

4-140. V/I -5V Verification

- a. Disconnect Power Supply leads.
- b. Set:

V AND I RESULTS — OFF (DOWN)

- c. Press ADVANCE TO NEXT FAIL. The "-4.99V setup" printout will be produced.
- d. Connect Power Supply leads so that -4.99V is applied to the R-Pack black lead.
- e. Measure Voltage on ^{TP24}TP8. If necessary, adjust Power Supply to produce -5.00V ±5 mV on TP8. _{TP8}
- f. Set:

V and I RESULTS — ON (UP)

- g. Press ADVANCE TO NEXT FAIL — wait for printout.
- h. Observe voltage printout for each pin.
- i. For each pin, verify that the printout reads:
 $-5V \pm 0.04V$ (-4.96V, -5.04V)
 $-5V \pm 0.03V$ (-4.97V, -5.03V)

4-141. V/I +1V Verification

- a. Disconnect Power Supply leads.
- b. Set:
V AND I RESULTS — OFF (DOWN)
Printer — ~~OFF~~ ON
- c. Press ADVANCE TO NEXT FAIL. The “+0.99 Setup” printout will be produced.
- d. Connect Power Supply leads so that +0.99V is applied to the R-Pack black lead.
- e. Measure voltage on TP8. If necessary, adjust Power Supply to produce $+1.00V \pm 5 \text{ mV}$ on TP8.
- f. Set:
V AND I RESULTS — ON (UP)
- g. Press ADVANCE TO NEXT FAIL — wait for printout.
- h. Observe voltage printout for each pin.
- i. For each pin, verify that the printout reads:
 $+1V \pm 0.02V$ (+0.98, +1.02)

4-142. V/I -1V Verification

- a. Disconnect Power Supply leads.
- b. Set:
V AND I RESULTS — OFF (DOWN)
Printer — OFF
- c. Press ADVANCE TO NEXT FAIL. The “-0.99 Setup” printout will be produced.
- d. Connect Power Supply leads so that -0.99V is applied to the R-Pack black lead.
- e. Measure voltage on TP8. If necessary, adjust Power Supply to produce $-1.00V \pm 5 \text{ mV}$ on TP8.
- f. Set:
V AND I RESULTS — ON (UP)
- g. Press ADVANCE TO NEXT FAIL — wait for printout.
- h. Observe voltage printout for each pin.
- i. For each pin, verify that the printout reads:
 $-1V \pm 0.02V$ (-0.98, -1.02)

4-143. V/I Results Current Check

- a. Disconnect Power Supply from Test Head.
- b. Turn off 5045A.
- c. Leave R-Pack installed in test socket and connect R-Pack black lead to A30 TP25 (I).

4-144. V/I 7 mA Verification

- a. Turn on 5045A.
- b. Load "V/I Results Current Check 16" or "V/I Results Current Check 24". Make sure that the correct program card is used (16-pin or 24-pin version).
- c. Set:

V and I RESULTS — ON (UP)

Printer — ON

- d. Press TEST.
- e. A printout similar to the following will be produced (partial printout).

```
TEST: +7MA VERIF.  
(6.55/7.45)  
FAIL 2PASS 0  
17 6.93 V 7LMA  
18 7LV 7.08 MA  
18 6.97 V 7LMA  
19 7LV 7.04 MA  
19 7.01 V 7LMA  
20 7LV 7.08 MA  
20 7 V 7LMA  
21 7LV 7.08 MA  
21 6.95 V 7LMA  
22 7LV 7.08 MA  
22 6.98 V 7LMA  
23 7LV 7.12 MA  
23 6.91 V 7LMA  
24 7LV 7.04 MA  
24 6.98 V 7LMA  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN: 1 2 3  
4 5 6 7 8  
9 10 11 12 13  
14 15 16 17 18  
19 20 21 22 23  
24
```

Note

Each pin has two listings. The only parameter of interest is the top current printout (right column). Ignore the information in the left column. Also, ignore the right-column current containing the "L".

Verify that the current printout for each pin reads 7 mA ± 0.45 mA (6.55/7.45).

4-145. V/I -7 mA Verification

- a. Press ADVANCE TO NEXT FAIL.
- b. A printout similar to that obtained in paragraph 4-144e will be produced.
- c. Observe current printout for each pin (as in paragraph 4-144e).
- d. For each pin, verify that the printout leads -7 mA ± 0.45 mA (-6.55/-7.45).

4-146. V/I OFFSET CHECK

- a. Load "V/I OFFSET CHECK 16" or "V/I OFFSET CHECK 24". Make sure that the correct program card is used (16-pin or 24-pin version). **REMOVE R-PACK.**
- b. For 16-pin instruments, pins 6 and 7 should be shorted together with a short length of wire. The short may be mounted in the 24-pin test socket.

4-147. V/I Pos Offset

- a. Press TEST.
- b. A printout similar to that in paragraph 4-144e will be produced.
- c. Observe voltage (left column) for each *failed* pin (as in paragraph 4-144e).
- d. For each *failed* pin, verify that the voltage printout reads:

0.00V ± 10 mV (-.01, .01)

4-148. V/I Neg Offset Check

- a. Press ADVANCE TO NEXT FAIL.
- b. Observe voltage (left column) printout for each *failed* pin (as in paragraph 4-144e).
- c. For each *failed* pin, verify that the voltage printout reads:

0.00 +10 mV (-.01, .01)

4-149. Fast Edge Check

4-150. The Fast Edge Check is a verification of positive and negative rise times for analog voltage levels being applied to the IC under test. If during the check, the FAIL lamp illuminates and a printout occurs, press TEST twice to continue. This is usually caused by shorting two pins together.

- a. Set the 5045A front panel switches as in paragraph 4-38c.
- b. Load "Pos Fast Edge Check".
- c. Insert R-Pack in test socket and connect ground lead to A30 TP25 (marked ↓). Also connect scope ground to A30 TP25 (marked ↓).

Oscilloscope Setup:

Single Trace: CH A
Trigger Slope: POS
Vertical: 0.1V Div with 10X Probe
Horizontal: 0.1 μ sec/div

Note

The display for this fast waveform will be easier to examine with the use of a viewing hood.

- d. Connect scope probe to A30 TP1.
Press TEST. The TEST Light should illuminate and there should be no printer output.
Observe the scope display and compare to Figure 4-2.
Rise time: -2V to +2V; 120 nsec max
Overshoot: Less than 0.8V
Move the probe to TP2 and again observe the waveform. Repeat this for all pins. Note that on 16 pin instruments, TP9 through TP16 will have no output and should not be observed.
- e. Load "Neg Fast Edge Check".
Change scope trigger to Neg slope.
- f. Press TEST.
Observe the waveform as done in the Positive Fast Edge Check. Compare the scope displays to Figure 4-3.
Fall Time; +2V to -2V: 120 nsec max
Overshoot: less than 0.8V

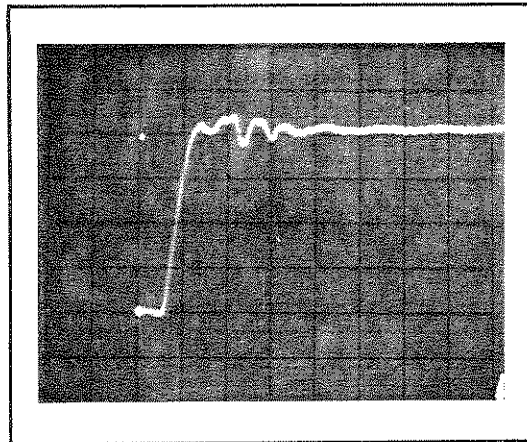


Figure 4-2. Fast Edge Check (Positive)

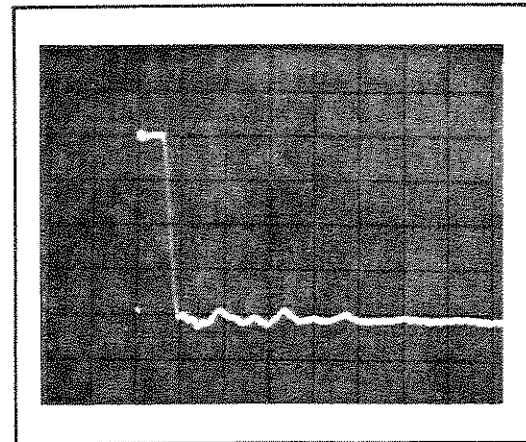


Figure 4-3. Fast Edge Check (Negative)

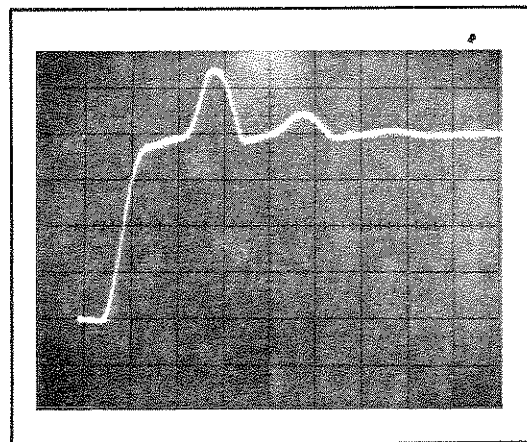


Figure 4-4. Positive Edge .1V Div/.1 μ sec
With Test Head Extender Cable

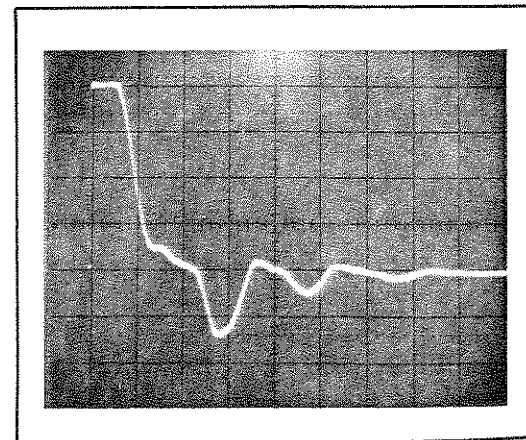


Figure 4-5. Negative Edge .1V Div/.1 μ sec
With Test Head Extender Cable

4-151. Fast Edge Signals for Extended Test Heads

4-152. The Fast Edge signals for test heads using the tongue extender cables are slightly altered. Figures 4-4 and 4-5 are typical waveforms expected after the positive and negative fast edge checks.

4-153. Relays Check

4-154. The Relays Check insures proper operation of the test head grounding and bypass capacitor relays.

- a. Set 5045A front panel switches as in paragraph 4-38c. Note: make sure that the ON FAILURE switch is in the "HOLD" position.
- b. Load appropriate "Relays Check" magnetic card; 16-PIN for a standard instrument or 24-PIN for an Option 024 instrument. Printer output should be one of the following:

RELAYS CHECK-16 PINS RELAYS CHECK-24 PINS

- c. Press TEST. Printer output should be as follows:

(16-pin)	(24-pin)
TEST: K1 OK	TEST: K1 OK
FAIL 1PASS 0	FAIL 1PASS 0
CORRECT 11111111	CORRECT 111111111111
PIN	PIN
STATE 1>11111111	STATE 1>111111111111
FAIL PIN: 12	FAIL PIN: 20

- d. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(16-pin)	(24-pin)
TEST: K2 OK	TEST: K2 OK
FAIL 1PASS 0	FAIL 1PASS 0
CORRECT 11111111	CORRECT 111111111111
PIN	PIN
STATE 1>11111111	STATE 1>111111111111
FAIL PIN: 13	FAIL PIN: 21

- e. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(16-pin)	(24-pin)
TEST: K8 OK	TEST: K4 OK
FAIL 1PASS 0	FAIL 1PASS 0
CORRECT 11111111	CORRECT 111111111111
PIN	PIN
STATE 1>11111111	STATE 1>111111111111
FAIL PIN: 8	FAIL PIN: 10

- f. Press ADVANCE TO NEXT FAIL. Printout output should be as follows:

(16-pin)	(24-pin)
TEST: K9 OK	TEST: K7 OK
FAIL 1PASS 0	FAIL 1PASS 0
CORRECT 11111111	CORRECT 111111111111
PIN	PIN
STATE 1>11111111	STATE 1>111111111111
FAIL PIN: 7	FAIL PIN: 9

- g. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(16-pin final check)	(24-pin)
TEST: K11 OK	TEST: K8 OK
FAIL 1PASS 0	FAIL 1PASS 0
CORRECT 11111111	CORRECT 111111111111
PIN	PIN
STATE 1>11111111	STATE 1>111111111111
FAIL PIN: 1	FAIL PIN: 8

- h. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(24-pin)

```
TEST: K9 OK
FAIL 1PASS 0
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN: 7
```

- i. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(24-pin)

```
TEST: K11 OK
FAIL 1PASS 0
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN: 1
```

- j. Press ADVANCE TO NEXT FAIL. Printer output should be as follows:

(24-pin)

```
TEST: K12 OK
FAIL 1PASS 0
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN: 12
```

4-155. Op Code Check

4-156. The Op Code Check verifies program capabilities for logic and arithmetic functions within the Arithmetic Logic Unit of the 5045A's CPU.

- a. Set front panel switches as in paragraph 4-38c.
- b. Load "OP CODE CHECK".

Press TEST.

PASS light should illuminate and there should be no printer output.

4-157. Printer Check

- a. Set front panel switches as in paragraph 4-38c.
- b. Load "Printer Check".

Press TEST. The following printout will be produced:

```
TEST: @ABCDEFGHIJK  
LMNOPQRSTUVWXYZ [\]^  
_!"#$%&'()*+,-./0123  
456789:;<=>?  
EEEEEEEEEEEEEEEEEEEE  
FAIL 1PASS 0  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN: 1
```

- c. Check vertical print spacing. Ideal spacing should be about 6 characters per inch. If adjustment is necessary, refer to printer adjustments (Paragraph 8-40i).

4-158. Automatic IC Handler Signals Check (Optional)

4-159. Control signals for automatic IC handlers are generated by circuitry within the 5045A IC Tester. The following procedure is a verification of the timing relationships for these signals.

4-160. The test requires the use of a known good TTL IC and its corresponding Pass/Fail Program Card. The 7400 Quad Nand gate is recommended. This IC is used to test the PASS, FAIL CONTINUITY, and FAIL FUNCTION signals.

4-161. In order to gain easy access to the signal lines, a test cable should be used. The test cable connector and pin-out is listed below.

4-162. Cable

4-163. The test cable is made up of connector (HP Part Number 1251-0142) or Amphenol 5730140) with test wires connected as follows:

- EOT — Pin 2
- FAIL CONT — Pin 1
- FAIL FUNCTION — Pin 11
- PASS — Pin 9
- GND — Pin 6, 13

4-164. Procedure

- a. Hook up handler control test cable to rear of 5045A. Connect scope CH A to the $\overline{\text{EOT}}$ line. Set up scope as follows:
Trigger: CH A, Negative Slope
Vertical:— 2V/div
Horizontal:— 10 msec/div
Ground: Connect to pin 6 or 13 on J15 cable
- b. Set 5045A Front Panel switches as follows:
START — AUTO
ON FAILURE — END
V and I RESULTS — OFF (DOWN)
PRINTER — OFF
- c. Turn on 5045A and install 7400 IC (or equivalent) in the test head socket. (The 20-pin adapter must be used.)
- d. Load the test program.
- e. Adjust scope trigger until the $\overline{\text{EOT}}$ signal stabilizes. Using the horizontal position control, move the signal so that beginning of trace is in a convenient location. Verify that the $\overline{\text{EOT}}$ signal is low for about 65 ms (see Figure 4-6).
- f. Connect the CH B probe to the $\overline{\text{PASS}}$ line. Compare the signal to that shown in Figure 4- . Verify that the $\overline{\text{PASS}}$ signal goes high after 30 ms \pm 5 msec (referenced to beginning of $\overline{\text{EOT}}$ trace).
- g. Lift the test IC so that the front panel "CONT" light flashes. (The "FAIL" light will also flash.)
- h. Connect the CH B Probe to the $\overline{\text{FAIL CONT}}$ line (pin 1 on the J5 cable). Compare the signal to that shown in Figure 4-6. Verify that the $\overline{\text{FAIL CONT}}$ signal goes high after 30 msec \pm 5 msec (referenced to beginning of $\overline{\text{EOT}}$ Trace).
- i. Reinsert the test IC in the test head socket. Connect the CH B Probe to the $\overline{\text{FAIL FCN}}$ line (pin 11 on the J5 cable). Use a screwdriver or similar tool to short pins 1 and 2 of the test IC together. Hold the short condition throughout this portion of the test. Verify that the "FAIL" light is flashing.
- j. Compare the signal displayed to that shown in Figure 4-6. Verify that the $\overline{\text{FAIL FCN}}$ signal goes high after 65 msec \pm 5 msec (referenced to beginning of $\overline{\text{EOT}}$ trace).

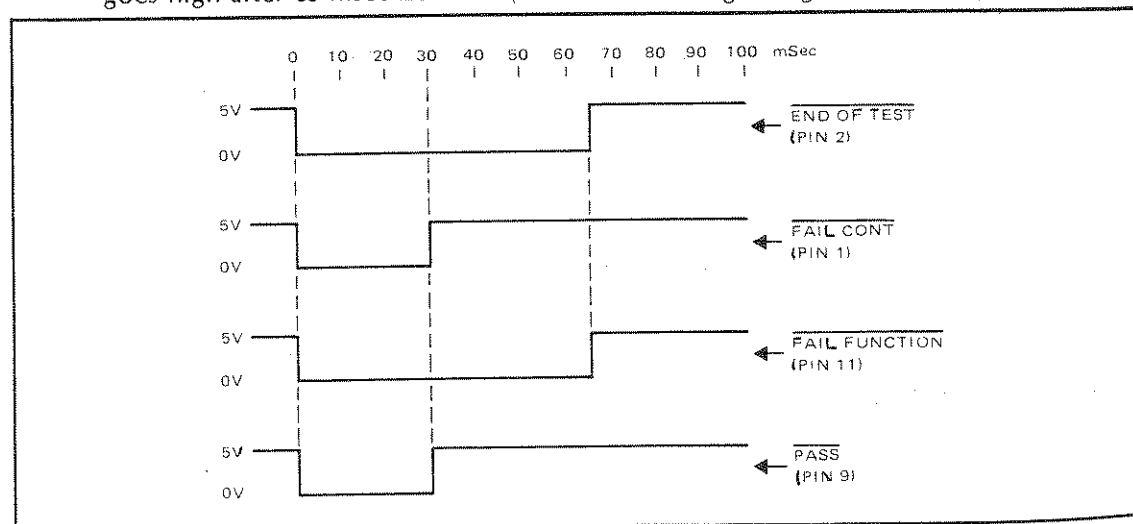


Figure 4-6. Automatic Handler Signal Timing


Performance Test Check Card

HEWLETT-PACKARD MODEL 5045A
IC TESTER

Test Performed _____
Date _____

SERIAL NO. _____

DESCRIPTION	CHECK
1. Reference Level Generator Check (DAC)	_____
2. Analog Voltage Check	_____
3. Analog Current Check	_____
4. Cross Talk	_____
5. Failure Detect Check	_____
6. V and I Results Check	_____
7. Fast Edge Check	_____
8. Relays Check	_____
9. Op Code Check	_____
10. Printer Check	_____
11. Automatic IC Handler Signals Check	_____

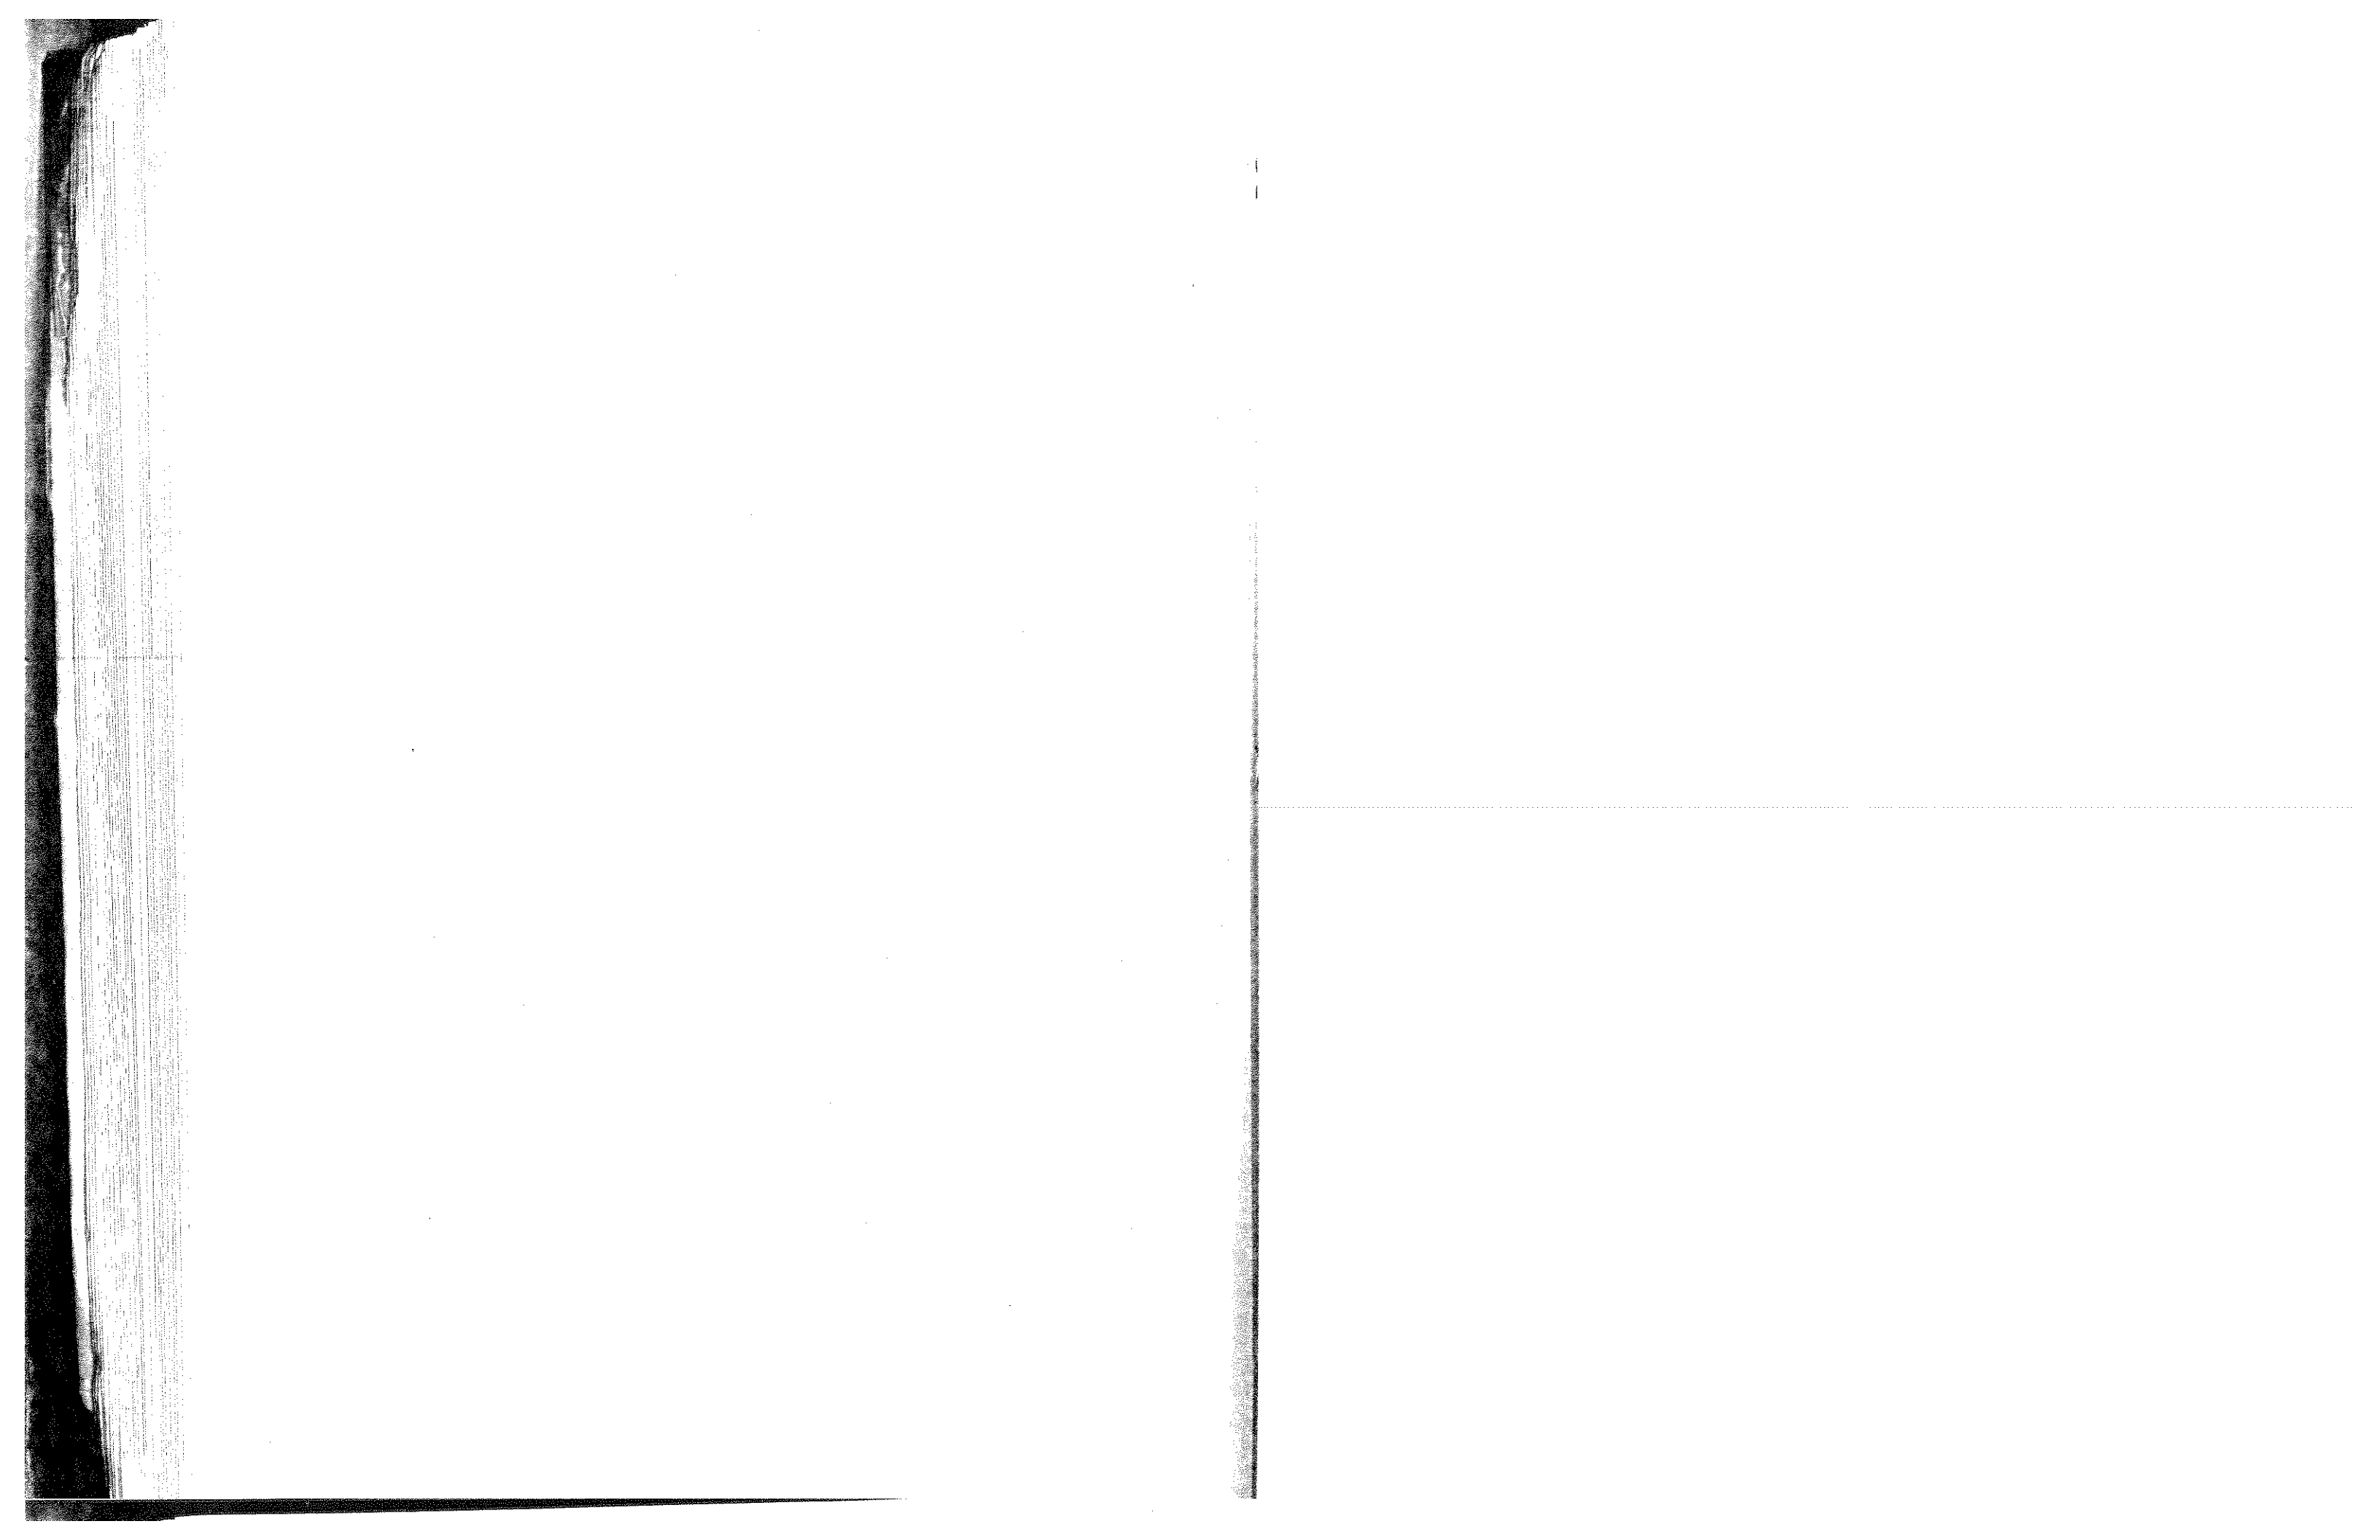

SECTION V ADJUSTMENTS

5-1. INTRODUCTION

5-2. This section contains a list of test equipment required and adjustment procedures.

NOTE

All of the adjustments are written for 5045A's equipped with Option 024 (24-pin). For standard instruments, disregard any reference to test points 9 through 16.

5-3. TEST EQUIPMENT REQUIRED

5-4. Table 5-1 lists the equipment required for adjustments. See Table 1-3 for a complete listing of test equipment required for instrument maintenance.

Table 5-1. Required Test Equipment

Instrument Type	Required Characteristics	Recommended Model No.
Oscilloscope	50 MHz	HP 1707B
Vertical	50 mV/div sensitivity, >5 ns rise time	
Horizontal	10 ns/div bandwidth	
Voltmeter/Ammeter, Digital DC	Voltage: 20V max 1 mV Resolution on 6.5V level Current: 10 μ A, 20 mA 100 μ A Resolution on 10 mA level .1 μ A Resolution on 10 μ A level	HP 3465A

5-5. ADJUSTMENTS

5-6. This section contains checkout and adjustment procedures for the power supplies, 4 MHz clock, printer group enable timing, and DAC alignment. These procedures should be performed in the order given, however the adjustments for the DAC should only be performed when there is an indication that an adjustment is necessary rather than on a periodic basis.

5-7. Standard Front Panel Switch Settings

5-8. Prior to performing adjustments or performance tests, set the front panel switches as follows:

START MAN/HNDLR
 ON FAILURE HOLD
 V AND I RESULTS DOWN
 PRINTER ON

5-9. POWER SUPPLY CHECK AND ADJUSTMENTS

5-10. There are four adjustable power supplies and seven supplies which are not adjustable. The supplies should be checked without a program loaded. To check and adjust the power supplies, proceed as follows:

WARNING

LOCATIONS AT LINE VOLTAGE ARE EXPOSED WHEN THE TOP COVER IS REMOVED AND POWER IS APPLIED. AVOID ELECTRICAL SHOCK. SERVICE AND ADJUSTMENTS SHOULD BE COMPLETED BY QUALIFIED SERVICE PERSONNEL.

- a. Disconnect primary power from the instrument. Set the front panel switches as per paragraph 5-8.
- b. Remove top cover from IC tester.
- c. Remove power supply cover.
- d. Apply power to the 5045A. Be sure the rear panel line selector settings matches the line voltage.
- e. Connect digital voltmeter and oscilloscope to each supply shown in the following table. Board assembly numbers, test points and adjustment locations for the power supplies are marked on the power supply cover. Measure each supply using the chassis in the vicinity of power supply as ground. Adjust as required.
- f. Set front panel switch to MAN/HNDLR. Load any program card **BUT DO NOT PRESS TEST.**
- g. Again measure the supplies and compare tolerances against the table shown below. When necessary, perform adjustments on the adjustable supplies.

Power Supply Voltages, Tolerances, and 120 Hz Ripple

Voltage	Assembly and Adjustment		Tolerances	120 Hz Ripple
+15	A1	None	±.75V	<100 mV
-15	A1	None	±.5V	<100 mV
+18	A1	None	±.9V	<100 mV
-18	A1	R2	±.2V	<100 mV
+8	A2	R2	±.2V	<100 mV
-8	A2	R3	±.2V	<100 mV
+12	A2		±.6V	<100 mV
-12	A2		±.5V	<150 mV
+5	A3	R3	±.05V	<200 mV
-5	A3		±.25V	<200 mV
+18	A3		±2V	<200 mV

- h. Using an oscilloscope, measure the ripple on each supply and verify that the tolerances are met.

NOTE

Re-install power supply cover before proceeding with other measurements.

5-11. A9 4 MHz CLOCK CHECK AND ADJUSTMENT


- a. Connect frequency counter to A9TP4. Check that frequency is 4 MHz \pm .01 MHz, if not adjust A9R4 for proper frequency.

5-12. PRINTER GROUP ENABLE TIMING ADJUSTMENT

- a. Set front-panel switches as follows:


START switch AUTO
ON FAILURE switch CONTINUE
PRINTER switch ON

- b. Load "DAC REF CHECK" magnetic card.
- c. Using a 10:1 divider probe, connect oscilloscope to A26U2(7). Connect ground lead to A26U2(8).
- d. Set oscilloscope to .1 V/division and horizontal sweep to 1 msec/ division. Check that time between positive pulses (period) is 7 msec \pm 1 msec, if not, adjust A26R21 for proper period. See Figure A and B for proper waveform.

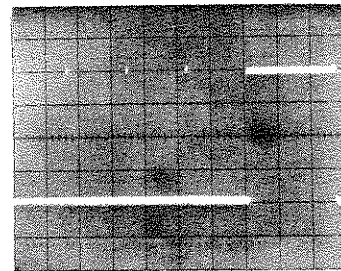

1 V/cm, 5 msec/div

Figure A

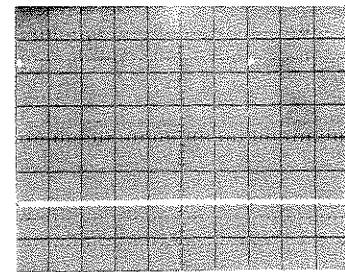

1 V/cm, 1 msec/div

Figure B

NOTE

The remaining adjustments should only be performed when there is an indication that adjusting is necessary rather than on a periodic basis.

5-13. A11 DAC VOLTAGE ADJUSTMENT

5-14. The A11 Adjustment Procedure requires the use of five pre-programmed magnetic test cards which are included in the Diagnostic Card Kit. These cards are:

"DAC REF CHECK"

"+/-V ZERO ADJUST"

"DAC V GAIN ADJUST"

"CURRENT GEN. PRESET ADJUST"

"+/- I ZERO 1-2 ADJUST"

5-15. Proper alignment of the A11 Reference Level Board depends on careful execution of the following procedure. During the adjustments, it will be necessary to record some measurements and make simple averaging calculations. A hand held calculator or scratch paper will be useful. This precise alignment technique is necessary to insure proper DAC offset and linearity. *Note: Allow the 5045A to warm up for at least 20 minutes before making any A11 Reference Level Generator Adjustments.*

5-16. The A11 Reference Level Generator (DAC) Adjustments are performed in 3 steps:

- a. DAC Reference Adjustment
- b. Voltage Generator Adjustment
- c. Current Generator Adjustment

NOTE

All of the tests refer to 24-pin instruments. For 16-pin instruments, test points 9-16 will have no outputs and should not be measured.

5-17. DAC REF Adjustment

- a. Set 5045A Front Panel Switches:
START — — MAN/HNDLR
ON FAILURE — — HOLD
V and I RESULTS — — DOWN
PRINTER — — ON
- b. Load "DAC REF CHECK"
- c. Remove Test Head Cover.
- d. Connect DVM ground lead on A30 TP25 (labeled ↓).
- e. Center all pots on the A11 board.
- f. Press **TEST**. Measure voltage on A30 TP8. Adjust A11 "REF" pot for $7.5V \pm 5 \text{ mV}$.

5-18. Voltage Generator Adjustment

5-19. *Note: Scratch paper or a Calculator will be useful. Some of the adjustments involve splitting voltage differences with the +V ZERO 1 and -V ZERO 1 pots (located on A11). Table 5-2 serves as an aid in recording measurements and calculating these differences. Make a copy of the table and fill it in as measurements are made. (Make a blank copy because the table may have to be used more than once.)*

- a. +V ZERO 2 Adjustment

Set Front Panel Switches as in paragraph 5-17 (a).

Load "+/-V ZERO 2 ADJUST."

Connect DVM ground lead to A30 TP25.

b. Press **TEST**. The following printout will be produced:

```
TEST:  +V ZERO 2 0V
FAIL   1PASS   0
CORRECT 1111111111111111
PIN
STATE 1>1111111111111111
FAIL PIN: 1 2 3
          4 5 6 7 8
          9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

c. Measure **+V ZERO 2** pot to produce 0.00 ± 5 mV on pin 8. Then verify that all other pins measure $0.00V \pm 10$ mV.

d. **-V ZERO 2** Adjustment

Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```
TEST:  -V ZERO 2 0V
FAIL   1PASS   0
CORRECT 0000000000000000
PIN
STATE 1>0000000000000000
FAIL PIN: 1 2 3
          4 5 6 7 8
          9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

e. Adjust **-V ZERO 2** pot to produce 0.00 ± 5 mV on pin 8. Then verify that all other pins measure $0.00V \pm 10$ mV.

f. **+V GAIN (+6.5V)** Adjustment

Load **"DAC V GAIN ADJUST"**

g. Press **TEST**. The following printout will be produced:

```
TEST:  +V GAIN
(+6.5V)
FAIL   1PASS   0
CORRECT 1111111111111111
PIN
STATE 1>1111111111111111
FAIL PIN: 1 2 3
          4 5 6 7 8
          9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

h. Adjust **+V GAIN** pot to produce $6.5V \pm 2$ mV on pin 8.

i. **-V GAIN (-6.5V)** Adjustment

Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```

TEST:    -V GAIN
(-6.5V)
FAIL     1PASS     0
CORRECT 000000000000
PIN
STATE 1>000000000000
FAIL PIN: 1  2  3
          4  5  6  7  8
          9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
    
```

j. Adjust **-V GAIN** pot to produce $-6.5V \pm 2$ mV on pin 8.

The following measurements involve splitting voltage differences. Use Table 5-2 as an aid in making calculations. Table 5-3 is an example of typical measurements. It will be helpful to study Table 5-3 before proceeding.

k. **+V ZERO 1 (-6.5V)**

Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```

TEST:    +V ZERO 1
(-6.5V)
FAIL     1PASS     0
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN: 1  2  3
          4  5  6  7  8
          9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
    
```

l. Measure the voltage on pin 8 and record it under column A of Table 5-2 (line 1). Calculate the **DIFFERENCE** between $-6.5V$ and the voltage recorded in A. For example (Table 5-3), if column A has -6.580 , then the **DIFFERENCE** ($.080V$) is entered in column B. Next, enter $1/2$ the difference in the "**HALF DIFF**" column. In the example this "**HALF DIFF**" is $.040V$. In the **+V ZERO 1** Adjustment Column, enter the voltage from A plus the "**HALF DIFFERENCE**". In other words, split the difference between the voltage recorded in Column A and $-6.5V$ by adjusting the **+V ZERO 1** pot. In the example, $-6.540V$ is entered. Note that the adjustment to **+V ZERO 1** should always bring the output voltage **closer** to $-6.5V$ level. If the adjustment moves the output further from $-6.5V$, then a **sign error** has been made in the calculations. Now that the desired **+V ZERO 1** adjustment has been calculated, adjust the **+V ZERO 1** pot for that voltage (pin 8).

m. **-V ZERO 1 (+6.5V)**

Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```

TEST:   -V ZERO 1
(+6.5V)
FAIL    1PASS    0
CORRECT 000000000000
PIN
STATE 1>000000000000
FAIL PIN: 1  2  3
          4  5  6  7  8
          9 10 11 12 13
         14 15 16 17 18
         19 20 21 22 23
         24
    
```

- n. Measure voltage on pin 8 and record in Table 5-2 column A (line 2). Use the same procedure for calculating **DIFFERENCE**, **HALF DIFFERENCE**, and **-V ZERO 1** level as was used in Paragraph 5-19 step (l). Note that in this test, the difference between the measured reading in column A and +6.5V must be calculated. After calculating the **-V ZERO 1** level, adjust **-V ZERO 1** pot for that voltage (pin 8).
- o. Now that **+V ZERO 1** and **-V ZERO 1** pots have been adjusted, it is necessary to trim the **+V GAIN** and **-V GAIN** levels. Press **TEST** twice. A "**V GAIN (+6.5V)**" printout will be produced. Measure the voltage on pin 8 and record in Table 5-2, column A (line 3). Calculate the "**MAGNITUDE DIFFERENCE**" and enter in column B. In the "**MAGNITUDE DIFFERENCE**" column, note the two arrows, ↑ and ↓. Do not worry about the sign of the difference. Instead, use the arrows to indicate if the adjustment should increase (↑) or decrease (↓) the parameter in question. An example will help: for the **+V GAIN (+6.5V)** test, suppose a level of 6.542V is measured. This is recorded under column A. The "**MAGNITUDE DIFFERENCE**" is .042V and the adjustment direction is down (↓). Under column B, .042V is entered and the (↓) arrow is circled. **Make no adjustments at this time.**
- p. Press **ADVANCE TO FAIL**. A "**-V GAIN (-6.5V)**" printout will be produced. Measure the voltage on pin 8 and record this level under column A of Table 5-2 (line 4). Determine the "**MAGNITUDE DIFFERENCE**" in the same manner as Paragraph 5-19 step (o). If -6.492V is measured, the "**MAGNITUDE DIFFERENCE**" is .008V. The direction for the "**MAGNITUDE DIFFERENCE**" is up (↑). Therefore, .008V is recorded and the (↑) arrow is circled in the "**MAGNITUDE DIFFERENCE**" column. **Make no adjustments at this time.**
- q. Press **ADVANCE TO NEXT FAIL**. A "**+V ZERO 1 (-6.5V)**" printout will be produced. Measure voltage on pin 8. Record level (line 5) and calculate "**MAGNITUDE DIFFERENCE**" as done in Paragraph 5-19 step (p). Be sure to circle the appropriate arrow. **Make no adjustments at this time.**
- r. Press **ADVANCE TO NEXT FAIL**. A "**-V ZERO 1 (+6.5V)**" printout will be produced. Measure voltage on pin 8. Record level (line 6) and calculate "**MAGNITUDE DIFFERENCE**" as done in Paragraph 5-19 step (o). Be sure to circle the appropriate arrow. **Make no adjustments at this time.**
- s. The four "**MAGNITUDE DIFFERENCE**" levels in Table 5-2 are labeled C, D, E, and F. It is now necessary to average these differences and calculate the adjustment required for trimming **+V GAIN** and **-V GAIN**.

t. **+V GAIN AVERAGE** (line 7)

Take the two "**MAGNITUDE DIFFERENCE**" readings from C and E of Table 5-2 and add them. Take this sum and divide by 2 to find the "**AVERAGE DIFFERENCE**". Note that C and E should both have the same arrow direction (↑ or ↓). The "**AVERAGE DIFFERENCE**" should also have the same arrow as C and E. Take the voltage recorded in column A (line 3) and add or subtract "**AVERAGE DIFFERENCE**" as necessary to bring this level **closer** to +6.5V. Press **TEST** twice. Measure voltage on pin 8 and adjust **+V GAIN** pot for the calculated level (should be close to +6.5V).

Use the following example for clarity. Refer to the sample chart, Table 5-3. Note that the "**MAGNITUDE DIFFERENCES**" for C and E are .042 ↓ and .040 ↓ respectively. The "**AVERAGE DIFFERENCE**" is .041V ↓. The **+V GAIN (+6.5V)** level recorded under column A (line 4) is +6.542V. The adjustment for +V gain is therefore $6.542V + .041V \downarrow = +6.501V$ (magnitude addition). In this example, after pressing **TEST**, the **+V GAIN** pot is adjusted to produce +6.501V on pin 8.

u. **-V GAIN AVERAGE** (line 8)

Press **ADVANCE TO NEXT FAIL** and adjust the **-V GAIN** pot for the correct level on pin 8.

Refer to the Sample Test Record, Table 5-3 for an example. The "**MAGNITUDE DIFFERENCE**" is .009V ↑. The **-V GAIN (6.5V)** level recorded under column A (line 4) is -6.492V. The adjustment for the **-V GAIN** pot is therefore $6.492 + .009 \uparrow = -6.501V$ (magnitude addition).

v. It is now necessary to check all 4 levels to insure that the voltage generator is properly aligned. All measurements refer to pin 8.

Press **TEST** twice **+GAIN (+6.5V)**
Measure +6.5V ±10 mV

Press **ADVANCE TO NEXT FAIL -V GAIN (-6.5V)**
Measure -6.5V ±10 mV

Press **ADVANCE TO NEXT FAIL +V ZERO 1 (-6.5V)**
Measure -6.5V ±10 mV

Press **ADVANCE TO NEXT FAIL -V ZERO 1 (+6.5V)**
Measure +6.5V ±10 mV

Note: **Make no adjustments at this time.**

w. **+V ZERO 2** and **-V ZERO 2** Check

Re-checking the ±V Zero 2 adjustments is necessary to insure that the voltage generator still has zero offset.

Repeat Paragraph 5-19 steps (a thru e) and readjust if necessary. If the ±V Zero 2 pots require adjustment, then, after adjusting, repeat step v above. Then proceed to step x.

x. If **any** of the limits measured in step v above could not be met, then a second pass at the voltage adjustments must be made. **DO NOT CENTER ANY OF THE POTS!** The second pass uses the same procedure and fine tunes the adjustments. Perform steps f through w under Paragraph 5-19 if a second pass is necessary. Use a new copy of Table 5-2 and proceed as before.

Verification of Voltage Adjustments

After all adjustments have been made, a verification of performance for all pins must be executed. Use the procedure in step v and w to verify voltage levels for all pins. Make measurements on A30 test points 1-24. If necessary, repeat second pass according to Paragraph 5-19 step x.

Final limits for all pins (Test Points 1-24).*

- +V GAIN (+6.5V) +6.5V = 10 mV
- V GAIN (-6.5V) -6.5V ±10 mV
- +V ZERO 1 (-6.5V) -6.5V ±10 mV
- V ZERO 1 (+6.5V) +6.5V ±10 mV

*Note: For 16-pin instrument, test points 9-16 will have no outputs and should not be measured.

5-20. Current Generator Adjustment

Equipment Required:

HP 3465A or equivalent
4-1/2 Digit Current Meter
10 μ A, 200 mA Ranges

- a. Set front panel switches according to Paragraph 5-17 step (a).
- b. Remove Test Gead cover (if not already done). Connect ammeter ground lead to A30TP25 (marked ↓). Set ammeter to measure 10 mA level.
- c. Center \pm I ZERO 1 and \pm I ZERO 2 pots (if not already done).
- d. Load "CURRENT GEN. PRESET ADJUST". Press TEST. The following printout will be produced:

```
TEST:  ADJ.+I ZERO2
FOR +10MA
FAIL  1PASS  0
CORRECT 1111111111111111
PIN
STATE 1>1111111111111111
FAIL PIN:  1  2  3
           4  5  6  7  8
           9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

- e. Measure current on pin 8. Adjust +I ZERO 2 pot to produce 10 mA ±0.2 mA.

- f. Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```
TEST:  ADJ,-I ZERO2
FOR -10MA
FAIL 1PASS 0
CORRECT 000000000000
PIN
STATE 1>000000000000
FAIL PIN:  1  2  3
           4  5  6  7  8
           9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

- g. Measure current on pin 8. Adjust **-I ZERO 2** to produce $-10 \text{ mA} \pm 0.2 \text{ mA}$.

- h. Load **"+/-I ZERO 1-2 ADJUST."** Press **TEST**. The following printout will be produced:

```
TEST:  ADJ,+I ZERO1
FOR ALL +10UA
FAIL 1PASS 0
CORRECT 111111111111
PIN
STATE 1>111111111111
FAIL PIN:  1  2  3
           4  5  6  7  8
           9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

- i. Measure current and adjust **+I ZERO 1** pot to produce $+10 \mu\text{A} \pm 1 \mu\text{A}$ on pin 8. Then verify that all other pins measure $+10 \mu\text{A} \pm 5 \mu\text{A}$. If necessary, the spec on pin 8 may be relaxed to $+10 \mu\text{A} \pm 5 \mu\text{A}$ to meet tolerance on all other pins.

- j. Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```
TEST:  ADJ,-I ZERO1
FOR ALL -10UA
FAIL 1PASS 0
CORRECT 000000000000
PIN
STATE 1>000000000000
FAIL PIN:  1  2  3
           4  5  6  7  8
           9 10 11 12 13
          14 15 16 17 18
          19 20 21 22 23
          24
```

- k. Measure current and adjust **-I ZERO 1** pot to produce $-10 \mu\text{A} \pm 1 \mu\text{A}$ on pin 8. Then verify that all other pins measure $-10 \mu\text{A} \pm 5 \mu\text{A}$. If necessary, the spec on pin 8 may be relaxed to $-10 \mu\text{A} \pm 5 \mu\text{A}$ to meet tolerance on all pins.

- l. Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```
TEST:  ADJ.+I ZERO2  
FOR ALL +10UA  
FAIL    1PASS    0  
CORRECT 111111111111  
PIN  
STATE 1>111111111111  
FAIL PIN:  1    2    3  
           4    5    6    7    8  
           9   10   11   12   13  
          14   15   16   17   18  
          19   20   21   22   23  
          24
```

- m. Measure current and adjust **+I ZERO 2** pot to produce $+10 \mu\text{A} \pm 1 \mu\text{A}$ on pin 8. Then verify that all other pins measure $+10 \mu\text{A} \pm 2.5 \mu\text{A}$. If necessary, the spec on pin 8 may be relaxed to $+10 \mu\text{A} \pm 2.5 \mu\text{A}$ to meet tolerance on all pins.

- n. Press **ADVANCE TO NEXT FAIL**. The following printout will be produced:

```
TEST:  ADJ.-I ZERO2  
FOR ALL -10UA  
FAIL    1PASS    0  
CORRECT 000000000000  
PIN  
STATE 1>000000000000  
FAIL PIN:  1    2    3  
           4    5    6    7    8  
           9   10   11   12   13  
          14   15   16   17   18  
          19   20   21   22   23  
          24
```

- o. Measure current and adjust **-I ZERO 2** pot to produce $-10 \mu\text{A} \pm 1$ on pin 8. Then verify that all other pins measure $-10 \mu\text{A} \pm 2.5 \mu\text{A}$. If necessary, the spec on pin 8 may be relaxed to $-10 \mu\text{A} \pm 2.5 \mu\text{A}$ to meet tolerance on all pins.

p. **VERIFICATION OF CURRENT ADJUSTMENTS**

Verify that limits are met for all pins.

Note: This step may be deleted if all limits were met under steps h through j above.

Press **TEST +I Zero 1 +10 -A**

Verify: $10 \mu\text{A} \pm 5 \mu\text{A}$

Press **ADVANCE TO NEXT FAIL -I ZERO 1 -10 μA**

Verify $-10 \mu\text{A} \pm 5 \mu\text{A}$ for all pins.

p. **VERIFICATION OF CURRENT ADJUSTMENTS** (Continued)

Press **ADVANCE TO NEXT FAIL +I Zero 2 +10 μ A**
Verify $+10 \mu\text{A} \pm 2.5 \mu\text{A}$ for all pins.

Press **ADVANCE TO NEXT FAIL -I ZERO 2 -10 μ A**
Verify $-10 \mu\text{A} \pm 2.5 \mu\text{A}$ for all pins.

If all limits cannot be met, then repeat steps h through p above as many times as necessary. **DO NOT** center the pots when making a second pass through the adjustments.

5-21. Successful completion of the DAC Reference Adjustment, Voltage Generator Adjustment, and Current Generator Adjustment results in proper calibration of the A11 Reference Level Generator (DAC). All Performance Tests should be run in order to verify instrument specs.


Table 5-2. Blank Test Aid

TEST SEQUENCE	A MEASURED VOLTAGE	B DIFFERENCE	HALF DIFFERENCE	±V ZERO 1 ADJUSTMENT
Press TEST.			(B/2)	(A + B/2)
Line 1 +V ZERO 1 (-6.5V) Press ADVANCE TO NEXT FAIL	- _____ V	(-6.5V -A) _____ V	_____ V	Adj +V ZERO 1 to _____ V.
Line 2 -V ZERO 1 (+6.5V) Press TEST.	+ _____ V	(+6.5V -A) _____ V	(B/2) _____ V	(A + B/2) Adj -V ZERO 1 to _____ V.
Line 3 +V GAIN (+6.5V) Press ADVANCE TO NEXT FAIL	+ _____ V	C Magnitude Difference _____ ↑↓		
Line 4 -V GAIN (-6.5V) Press ADVANCE TO NEXT FAIL	- _____ V	D Magnitude Difference _____ ↑↓		
Line 5 +V ZERO 1 (-6.5V) Press ADVANCE TO NEXT FAIL	- _____ V	E Magnitude Difference _____ ↑↓		
Line 6 -V ZERO 1 (+6.5V)	+ _____ V	F Magnitude Difference _____ ↑↓		
Line 7 +V GAIN AVERAGE	Average = $\frac{C + E}{2}$	Average _____ V Adj + V GAIN to _____ V.	V ↑↓	Press TEST. Measure V. Increase ↑ or Decrease ↓ Output by Average.
Line 8 -V GAIN AVERAGE	Average = $\frac{D + F}{2}$	Average _____ V Adj -V GAIN to _____ V.	V ↑↓	Press ADVANCE TO NEXT FAIL. Measure V. Increase ↑ or Decrease ↓ Output by Average.

NOTE:
Circle the appropriate arrow (↑ or ↓)
to indicate Increase (↑) or Decrease (↓)
adjustment. See text.

Note: C and E should have same arrow direction.

Note: D and F should have same arrow direction.

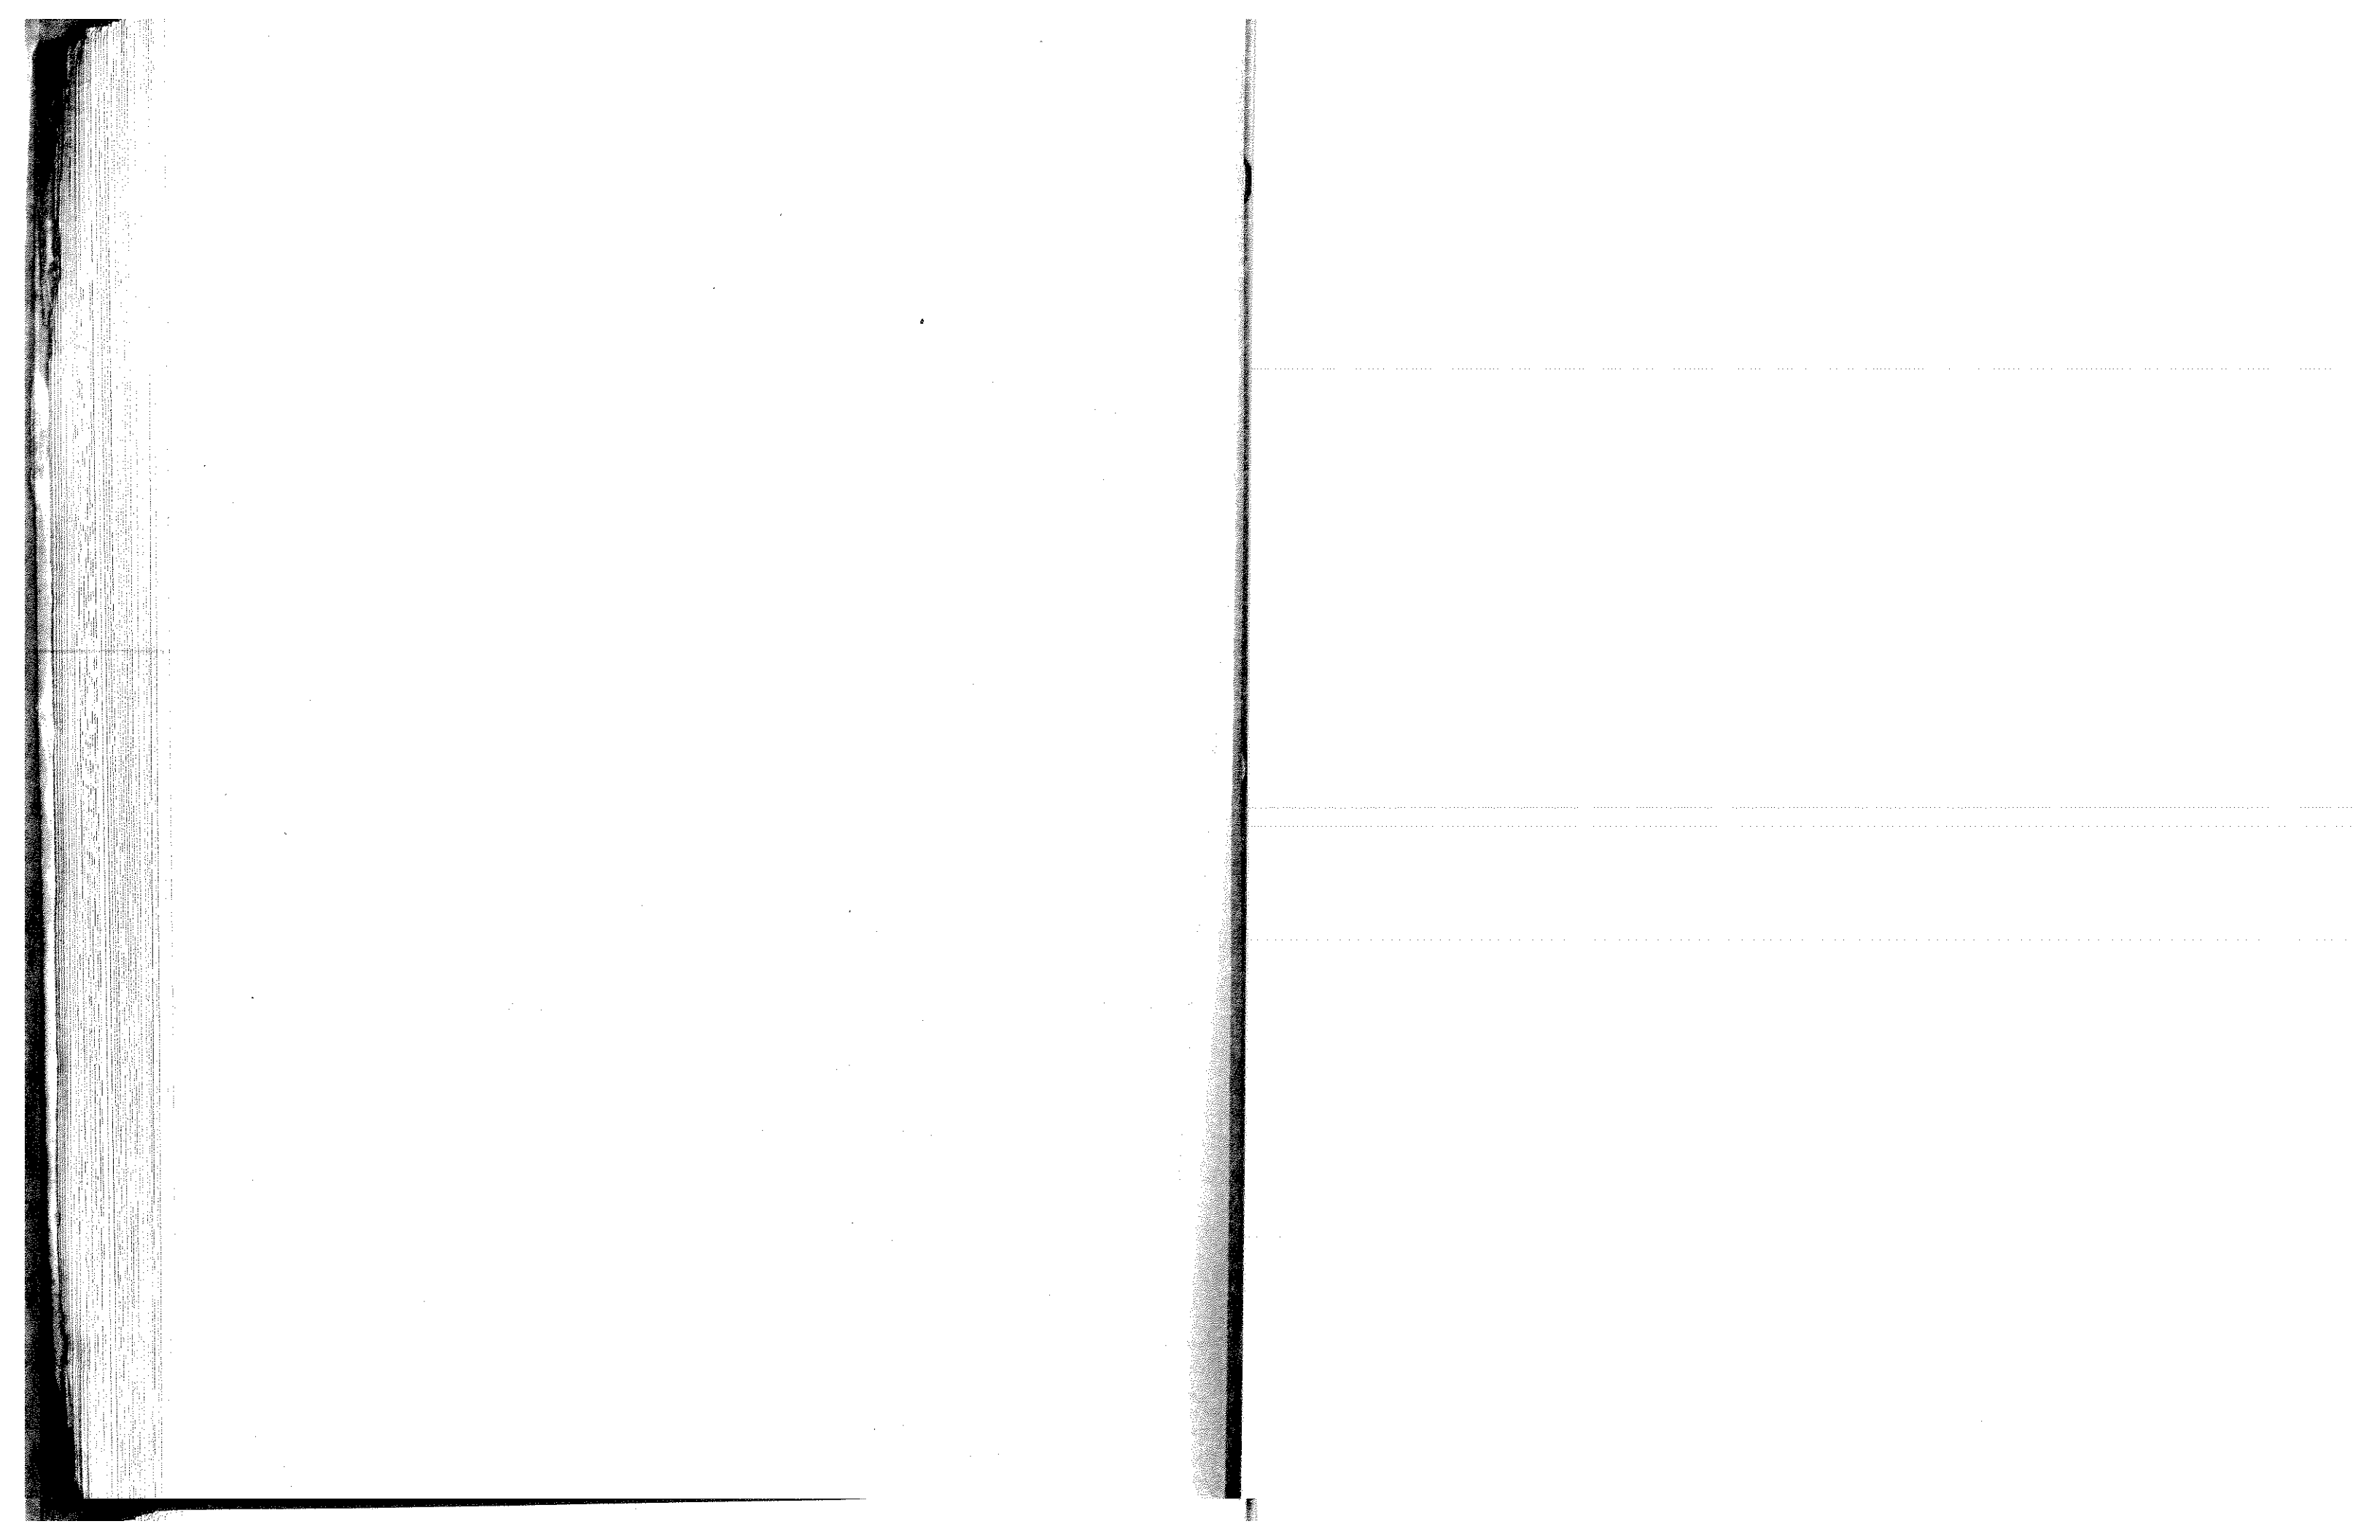

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphanumeric order of their reference designators and indicates the description and HP Part Number of each part, together with any applicable notes. The table includes the following information.

- a. Description of part (see abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-2.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (Qty column).

REFERENCE DESIGNATIONS

<p>A = assembly</p> <p>AT = attenuator; isolator; termination</p> <p>B = fan; motor</p> <p>BT = battery</p> <p>C = capacitor</p> <p>CP = coupler</p> <p>CH = diode; diode thyristor; varactor</p> <p>DC = directional coupler</p> <p>DL = delay line</p> <p>DS = annunciator; signaling device (audible or visual); lamp; LED</p>	<p>E = miscellaneous electrical part</p> <p>F = fuse</p> <p>FL = filter</p> <p>H = hardware</p> <p>HY = circulator</p> <p>J = electrical connector (stationary portion); jack</p> <p>K = relay</p> <p>L = coil; inductor</p> <p>M = meter</p>	<p>MP = miscellaneous mechanical part</p> <p>P = electrical connector (movable portion); plug</p> <p>Q = transistor; SCR; triode thyristor</p> <p>R = resistor</p> <p>RT = thermistor</p> <p>S = switch</p> <p>T = transformer</p> <p>TB = terminal board</p> <p>TC = thermocouple</p>	<p>TP = test point</p> <p>U = integrated circuit; microcircuit</p> <p>V = electron tube</p> <p>VR = voltage regulator; breakdown diode</p> <p>W = cable; transmission path; wire</p> <p>X = socket</p> <p>Y = crystal unit-piezoelectric</p> <p>Z = tuned cavity; tuned circuit</p>
---	--	---	---

ABBREVIATIONS

<p>A = ampere</p> <p>AC = alternating current</p> <p>ACC = accessory</p> <p>ADJ = adjustment</p> <p>AD = analog-to-digital</p> <p>AF = audio frequency</p> <p>AF = automatic frequency control</p> <p>AGC = automatic gain control</p> <p>AL = aluminum</p> <p>ALC = automatic level control</p> <p>AM = amplitude modulation</p> <p>AMP = amplifier</p> <p>APC = automatic phase control</p> <p>AS = assembly</p> <p>AUX = auxiliary</p> <p>AVG = average</p> <p>AWG = American wire gauge</p> <p>BAL = balance</p>	<p>BCD = binary coded decimal</p> <p>BD = board</p> <p>BE CU = beryllium copper</p> <p>BFO = beat frequency oscillator</p> <p>BH = binder head</p> <p>BKDN = breakdown</p> <p>BP = bandpass</p> <p>BPF = bandpass filter</p> <p>BRS = brass</p> <p>BWO = backward-wave oscillator</p> <p>CAL = calibrate</p> <p>ccw = counterclockwise</p> <p>CER = ceramic</p> <p>CHAN = channel</p> <p>cm = centimeter</p> <p>CMO = coaxial</p> <p>COEF = coefficient</p> <p>COM = common</p>	<p>COMP = composition</p> <p>COMPL = complete</p> <p>CONN = connector</p> <p>CP = cadmium plate</p> <p>CRT = cathode-ray tube</p> <p>CTL = complementary transistor logic</p> <p>CW = continuous wave</p> <p>cw = clockwise</p> <p>D/A = digital-to-analog</p> <p>dB = decibel</p> <p>dBm = decibel referred to 1 mW</p> <p>dc = direct current</p> <p>deg = degree (temperature interval or difference)</p> <p>° = degree (plane angle)</p> <p>°C = degree Celsius (centigrade)</p> <p>°F = degree Fahrenheit</p>	<p>°K = degree Kelvin</p> <p>DEPC = deposited carbon</p> <p>DET = detector</p> <p>diam = diameter</p> <p>DIA = diameter (used in parts list)</p> <p>DIFF = differential amplifier</p> <p>AMPL = division</p> <p>div = double-pole, double-throw</p> <p>DPDT = drive</p> <p>DR = double sideband</p> <p>DSB = diode transistor logic</p> <p>DTL = digital voltmeter</p> <p>DVM = emitter coupled logic</p> <p>ECL = electromotive force</p> <p>EMF = electronic data processing</p> <p>EDP = electrolytic</p> <p>ELECT = electrolytic</p>
--	---	--	---

ABBREVIATIONS (CONTINUED)

ENCAP = encapsulated	min = minute (time)	PIV = peak inverse voltage	TFT = thin-film transistor
EXT = external	... = minute (plane angle)	pk = peak	TGL = toggle
F = farad	MINAT = miniature	PL = phase lock	THD = thread
FET = field-effect transistor	mm = millimeter	PLO = phase lock oscillator	THRU = through
F/F = flip-flop	MOD = modulator	PM = phase modulation	TI = titanium
FH = flat head	MOM = momentary	PNP = positive-negative-positive	TOL = tolerance
FOL H = fillister head	MOS = metal-oxide semiconductor	P/O = part of	TRIM = trimmer
FM = frequency modulation	ms = millisecond	POLY = polystyrene	TSTR = transistor
FP = front panel	MTG = mounting	PORC = porcelain	TTL = transistor-transistor logic
FREQ = frequency	MTR = meter (indicating device)	POS = positive; position(s) (used in parts list)	TV = television
FXD = fixed	mV = millivolt	POSN = position	TVI = television interference
g = gram	mVac = millivolt, ac	POT = potentiometer	TWT = traveling wave tube
GE = germanium	mVdc = millivolt, dc	p-p = peak-to-peak	U = micro (10 ⁻⁶) (used in parts list)
GHZ = gigahertz	mVpk = millivolt, peak	PP = peak-to-peak (used in parts list)	UF = microfarad (used in parts list)
GL = glass	mVp-p = millivolt, peak-to-peak	PPM = pulse-position modulation	UHF = ultrahigh frequency
GND = ground(ed)	mVrms = millivolt, rms	PREAMPL = preamplifier	UNREG = unregulated
H = henry	mW = milliwatt	PRF = pulse-repetition frequency	V = volt
h = hour	MUX = multiplex	PRR = pulse repetition rate	VA = voltampere
HET = heterodyne	MY = mylar	PT = point	Vac = volts ac
HEX = hexagonal	μA = microampere	PTM = pulse-time modulation	VAR = variable
HD = head	μF = microfarad	PWM = pulse-width modulation	VCO = voltage-controlled oscillator
HDW = hardware	μH = microhenry	PWV = peak working voltage	Vdc = volts dc
HF = high frequency	μmho = micromho	RC = resistance capacitance	VDCW = volts dc, working (used in parts list)
HG = mercury	μs = microsecond	RECT = rectifier	V(F) = volts, filtered
HI = high	μV = microvolt	REF = reference	VFO = variable-frequency oscillator
HP = Hewlett-Packard	μVac = microvolt, ac	REG = regulated	VHF = very-high frequency
HPF = high pass filter	μVdc = microvolt, dc	REPL = replaceable	Vpk = volts peak
HR = hour (used in parts list)	μVpk = microvolt, peak	RF = radio frequency	Vp-p = Volts peak-to-peak
HV = high voltage	μVp-p = microvolt, peak-to-peak	RFI = radio frequency interference	Vrms = volts rms
HZ = Hertz	μVrms = microvolt, rms	RH = round head; right hand	VSWR = voltage standing wave ratio
IC = integrated circuit	μW = microwatt	RLC = resistance-inductance-capacitance	VTO = voltage-tuned oscillator
ID = inside diameter	nA = nanoampere	RMO = rack mount only	VTVM = vacuum-tube voltmeter
IF = intermediate frequency	NC = no connection	rms = root-mean-square	V(X) = volts, switched
IMPG = impregnated	N/C = normally closed	RND = round	W = watt
in = inch	NE = neon	ROM = read-only memory	W/ = with
INCD = incandescent	NEG = negative	R&P = rack and panel	WIV = working inverse voltage
INCL = include(s)	nF = nanofarad	RWV = reverse working voltage	WW = wirewound
INP = input	NI PL = nickel plate	S = scattering parameter	W/O = without
INS = insulation	N/O = normally open	s = second (time)	YIG = yttrium-iron-garnet
INT = internal	NORM = normal	... = second (plane angle)	Zo = characteristic impedance
kg = kilogram	NORM = normal	S-B = slow-blow (fuse (used in parts list))	
kHz = kilohertz	NPN = negative-positive-negative	SCR = silicon controlled rectifier; screw	
kΩ = kilohm	NPO = negative-positive zero (zero temperature coefficient)	SE = selenium	
kV = kilovolt	NRFR = not recommended for field replacement	SECT = sections	
lb = pound	NSR = not separately replaceable	SEMICON = semiconductor	
LC = inductance-capacitance	ns = nanosecond	SHF = superhigh frequency	
LED = light-emitting diode	nW = nanowatt	SI = silicon	
LF = low frequency	OBDD = order by description	SIL = silver	
LG = long	OD = outside diameter	SL = slide	
LH = left hand	OH = oval head	SNR = signal-to-noise ratio	
LIM = limit	OP AMPL = operational amplifier	SPDT = single-pole, double-throw	
LIN = linear taper (used in parts list)	OPT = option	SPG = spring	
lin = linear	OSC = oscillator	SR = split ring	
LK WASH = lockwasher	OX = oxide	SPST = single-pole, single-throw	
LO = low; local oscillator	oz = ounce	SSB = single sideband	
LOG = logarithmic taper (used in parts list)	Ω = ohm	SST = stainless steel	
log = logarithm(ic)	P = peak (used in parts list)	STL = steel	
LPF = low pass filter	PAM = pulse-amplitude modulation	SQ = square	
LV = low voltage	PC = printed circuit	SWR = standing-wave ratio	
m = meter (distance)	PCM = pulse-code modulation; pulse-count modulation	-SYNC = synchronize	
mA = milliampere	PDM = pulse-duration modulation	T = timed (slow-blow fuse)	
MAX = maximum	PC = printed circuit	TA = tantalum	
MΩ = megohm	PC = printed circuit	TC = temperature compensating	
MEG = meg (10 ⁶) (used in parts list)	PC = printed circuit	TD = time delay	
MET FLM = metal film	PC = printed circuit	TERM = terminal	
MET OX = metal oxide	PC = printed circuit		
MF = medium frequency; microfarad (used in parts list)	PC = printed circuit		
MFR = manufacturer	pF = picofarad		
mg = milligram	PH BRZ = phosphor bronze		
MHZ = megahertz	PHL = Philips		
mH = millihenry	PIN = positive-intrinsic-negative		
mho = mho			
MIN = minimum			

NOTE
All abbreviations in the parts list will be in upper case.

MULTIPLIERS

Abbreviation	Prefix	Multiple
T	tera	10 ¹²
G	giga	10 ⁹
M	mega	10 ⁶
k	kilo	10 ³
da	deka	10
d	deci	10 ⁻¹
c	centi	10 ⁻²
m	milli	10 ⁻³
μ	micro	10 ⁻⁶
n	nano	10 ⁻⁹
p	pico	10 ⁻¹²
f	femto	10 ⁻¹⁵
a	atto	10 ⁻¹⁸

6-3. ORDERING INFORMATION

6-4. To obtain replacement parts, address order of inquiry to your local Hewlett-Packard Sales and Service Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

6-5. HP PART NUMBER ORGANIZATION

6-6. Following is a general description of the HP part number system.

6-7. Component Parts and Materials

6-8. Generally, the prefix of HP part numbers identifies the type of device. Eight digit part numbers are used, where the four digit prefix identifies the type of component, part, or material and the four digit suffix indicates the specific type. Following is a list of some of the more commonly used prefixes for component parts. The list includes HP manufactured parts and purchased parts.

Prefix	Component/Part/Material
0121-	Capacitors, Variable (mechanical)
0122-	Capacitors, Voltage Variable (semiconductor)
0140-	Capacitors, Fixed
0150-	Capacitors, Fixed
0160-	Capacitors, Fixed
0180-	Capacitors, Fixed Electrolytic
0330-	Insulating Materials
0340-	Insulators, Formed
0370-	Knobs, Control
0380-	Spacers and Standoffs
0410-	Crystals
0470-	Adhesives
0490-	Relays
0510-	Fasteners
0674- thru 0778-	Resistors, Fixed (non wire wound)
0811- thru 0831-	Resistors (wire wound)
1200-	Sockets for components
1205-	Heat Sinks
1250-	Connectors (RF and related parts)
1251-	Connectors (non RF and related parts)
1410-	Bearings and Bushings
1420-	Batteries
1820-	Monolithic Digital Integrated Circuits
1826-	Monolithic Linear Integrated Circuits
1850-	Transistors, Germanium PNP
1851-	Transistors, Germanium NPN
1853-	Transistors, Silicon PNP
1854-	Transistors, Silicon NPN
1855-	Field-Effect-Transistors
1900- thru 1912-	Diodes

Prefix	Component/Part/Material
1920- thru 1952- 1990-	Vacuum Tubes
3100- thru 3106- 8120- 9100-	Semiconductor Photosensitive and Light-Emitting Diodes Switches Cables Transformers, Coils, Chokes, Inductors, and Filters

6-9. For example, 1854-0037, 1854-0221, and 1851-0192 are all NPN transistors. The first two are silicon and the last is germanium.

6-10. General Usage Parts

6-11. The following list gives the prefixes for HP manufactured parts used in several instruments, e.g., side frames, feet, top and bottom covers, etc. These are eight-digit part numbers with the four-digit prefix identifying the type of parts as shown below:

Type of Part	Prefix
Sheet Metal	5000- to 5019-
Machined	5020- to 5039-
Molded	5040- to 5059-
Assemblies	5060- to 5079-
Components	5080- to 5099-

6-12. Specific Instrument Parts

6-13. These are HP manufactured parts for use in individual instruments or series of instruments. For these parts, the prefix indicates the instrument and the suffix indicates the type of part. For example, 05328-60001 is an assembly used in the 5328A. Following is a list of suffixes commonly used.

Type of Part	P/N Suffix
Sheet Metal	-00000 to -00499
Machined	-20000 to -20499
Molded	-40000 to -40499
Assembly	-60000 to -60499
Component	-80000 to -80299
Documentation	-90000 to -90249

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	05045-60001	6	1	BOARD ASSEMBLY, -15V/18V REGULATOR (SERIES 1852)	28480	05045-60001
A1C1	0180-0578	9	1	CAPACITOR-FXD 750UF+75-10% 40VDC AL	56289	39D757G0400L4
A1C2	0150-0121	5	11	CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
A1C3	0180-1735	2	4	CAPACITOR-FXD .22UF+10% 35VDC TA	56289	1500224X9035A2
A1C4	0180-0117	2	2	CAPACITOR-FXD 2.7UF+10% 35VDC TA	56289	1500275X9035B2
A1C5	0180-0117	2	2	CAPACITOR-FXD 2.7UF+10% 35VDC TA	56289	1500275X9035B2
A1C6	0160-0127	2	29	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A1C7	0180-1735	2	2	CAPACITOR-FXD .22UF+10% 35VDC TA	56289	1500224X9035A2
A1C8	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A1C9	0150-0121	5	5	CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
A1CR1	1901-0638	3	3	DIODE-FW BRDG 100V 4A	04713	MDA-970-2
A1CR2	1901-0638	3	3	DIODE-FW BRDG 100V 4A	04713	MDA-970-2
A1R1	0698-0083	8	1	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4=1/8-10-1961-F
A1R2	2100-1757	2	2	RESISTOR-TRMR 500 5X WW SIDE-ADJ 1-TRN	28480	2100-1757
A1TP1	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A1TP2	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A1TP3	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A1TP4	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A1U1	1826-0233	4	1	IC V RGLTR TO=3	27014	LM220K-15
A1U2	1826-0126	4	1	IC 7818 V RGLTR TO=3	04713	MC7818CK
A1U3	1826-0169	5	1	IC V RGLTR TO=3	27014	LM320K-15
A1U4	1826-0203	8	1	IC 7815 V RGLTR TO=3	07263	7815KC
	0340-0596	1	12	INSULATOR-XSTR SIL-RBR	28480	0340-0596
	1205-0291	8	5	HEAT SINK TO=3-PKG	28480	1205-0291
	1480-0116	8	26	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0749	4	4	EXTR=PC RD BRN POLYC .062=RD=THKNS	28480	4040-0749
A2	05045-60002	7	1	BOARD ASSEMBLY, 7.5/12V REGULATOR (SERIES 1852)	28480	05045-60002
A2C1	0160-0127	2	8	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A2C2	0180-0197	8	5	CAPACITOR-FXD 2.2UF+10% 20VDC TA	56289	1500225X9020A2
A2C3	0180-0197	8	8	CAPACITOR-FXD 2.2UF+10% 20VDC TA	56289	1500225X9020A2
A2C4	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A2C5	0180-1735	2	2	CAPACITOR-FXD .22UF+10% 35VDC TA	56289	1500224X9035A2
A2C6	0150-0121	5	5	CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
A2C7	0180-1735	2	2	CAPACITOR-FXD .22UF+10% 35VDC TA	56289	1500224X9035A2
A2C8	0150-0121	5	5	CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
A2CR1	1901-0638	3	3	DIODE-FW BRDG 100V 4A	04713	MDA-970-2
A2R1	0757-0284	7	1	RESISTOR 150 1% .125W F TC=0+-100	24546	C4=1/8-TU-151-F
A2R2	2100-1755	0	2	RESISTOR-TRMR 100 5X WW SIDE-ADJ 1-TRN	28480	2100-1755
A2R3	2100-1755	0	2	RESISTOR-TRMR 100 5X WW SIDE-ADJ 1-TRN	28480	2100-1755
A2R4	0698-3443	0	1	RESISTOR 287 1% .125W F TC=0+-100	24546	C4=1/8-TU-287N-F
A2TP1	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A2TP2	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A2TP3	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A2TP4	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A2U1	1826-0160	6	1	IC V RGLTR TO=3	07263	7806KC
A2U2	1826-0235	6	1	IC V RGLTR TO=3	27014	LM220K-12
A2U3	1826-0117	3	1	IC 7812 V RGLTR TO=3	07263	7812KC
A2U4	1826-0202	7	2	IC V RGLTR TO=3	27014	LM320K-05
	0340-0596	1	1	INSULATOR-XSTR SIL-RBR	28480	0340-0596
	1205-0290	7	1	HEAT SINK TO=3-PKG	28480	1205-0290
	1205-0291	8	8	HEAT SINK TO=3-PKG	28480	1205-0291
	1480-0116	8	8	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0750	7	5	EXTR=PC BD RED POLYC .062=RD=THKNS	28480	4040-0750
	1205-0381	7	1	HEAT SINK SGL TO=3-CS	30161	5426
A3	05045-60003	8	2	BOARD ASSEMBLY, +5/18V REGULATOR (SERIES 1520)	28480	05045-60003
A3C1	0160-3456	6	23	CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C2	0160-3879	7	3	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A3C3	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C4	0180-0155	8	1	CAPACITOR-FXD 2.2UF+-20% 20VDC TA	56289	1500225X9020A2
A3C5	0160-0574	3	1	CAPACITOR-FXD .022UF +-20% 100VDC CER	28480	0160-0574
A3C6	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C7	0180-0116	1	4	CAPACITOR-FXD 8.0UF+-10% 35VDC TA	56289	1500685X9035B2
A3C8	0180-1912	7	1	CAPACITOR-FXD 1200UF+75-10% 6VDC AL	56289	390128G000F04

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3CR1	1901-0033	2	1	DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A3CR2	1902-3036	3	2	DIODE-ZNR 3.16V 5X DO-7 PD=.4W TC=+.064X	28480	1902-3036
A3CR3	1902-3036	3	1	DIODE-ZNR 3.16V 5X DO-7 PD=.4W TC=+.064X	28480	1902-3036
A3CR4	1902-0079	8	1	DIODE-ZNR 20V 2X DO-14 PD=.4W TC=+.08X	28480	1902-0079
A3CR5	1901-0040	1	91	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3Q1	1884-0217	6	1	THYRISTOR-TRIAC	04713	MAC-10-d
A3Q2	1854-0671	3	3	TRANSISTOR NPN 2N6282 SI TO-3 PD=160W	04713	2N6282
A3R1	0757-0921	9	2	RESISTOR 750 2X .125W F TC=0+-100	24546	C4-1/8-TU-751-G
A3R2	0757-0948	0	15	RESISTOR 10K 2X .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A3R3	0757-0932	2	2	RESISTOR 2.2K 2X .125W F TC=0+-100	24546	C4-1/8-TU-2201-G
A3R4	0757-0948	0	2	RESISTOR 10K 2X .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A3R5	0757-0900	4	16	RESISTOR 100 2X .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A3R6	0757-0916	2	2	RESISTOR 470 2X .125W F TC=0+-100	24546	C4-1/8-TU-471-G
A3R7	0757-0916	2	2	RESISTOR 470 2X .125W F TC=0+-100	24546	C4-1/8-TU-471-G
A3R8	0811-3333	2	2	RESISTOR .05 3X 2W PWW TC=0+-150	28480	0811-3333
A3R9	0757-0961	7	1	RESISTOR 36K 2X .125W F TC=0+-100	24546	C4-1/8-TU-3602-G
A3R10	0811-3332	8	1	RESISTOR .025 1X 5W PWW TC=0+-150	28480	0811-3332
A3R11	0686-1005	1	1	RESISTOR 10 5X .5W CC TC=0+412	01121	EM1005
A3R12	0811-3333	1	2	RESISTOR .05 3X 2W PWW TC=0+-150	28480	0811-3333
A3R13	2100-1757	2	2	RESISTOR-TMR 500 5X WW SIDE-ADJ 1-TRN	28480	2100-1757
A3R14	0757-0913	9	1	RESISTOR 360 2X .125W F TC=0+-100	24546	C4-1/8-TU-361-G
A3TP1	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A3TP2	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A3TP3	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A3TP4	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A3U1	1820-0439	0	1	IC V RGLTR 14-DIP-P	07263	723PC
A3U2	1820-0216	1	1	OP AMP GP 8-DIP-P	28480	1820-0216
A3U3	1826-0202	7	1	IC V RGLTR TO-3	27014	LM320K-05
	0340-0596	1	1	INSULATOR-XSTR SIL-RBR	28480	0340-0596
	1205-0266	7	1	HEAT SINK SGL TO-3-PKG	28480	1205-0266
	1205-0291	8	1	HEAT SINK TO-3-PKG	28480	1205-0291
	1480-0116	8	1	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0751	8	4	EXTR-PC BD URN POLYC .062-RO-TMKN8	28480	4040-0751
A4	05045-60004	9	1	BOARD ASSEMBLY, ARITHMETIC LOG (SERIES 1520)	28480	05045-60004
A4C1	0180-0210	6	10	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	150335X0015A2
A4R1	0757-0941	3	30	RESISTOR 5.1K 2X .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A4R2	0757-0941	3	30	RESISTOR 5.1K 2X .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A4R3	0757-0941	3	30	RESISTOR 5.1K 2X .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A4U1	1820-0077	2	16	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A4U2	1820-0366	4	8	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A4U3	1820-0366	4	4	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A4U4	1820-0366	4	4	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A4U5	1820-0328	6	8	IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A4U6	1820-0545	9	1	IC CNTR TTL BIN UP/DOWN SYNCHRD	01295	SN74191N
A4U7	1820-0629	0	2	IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN748112N
A4U8	1820-0606	3	1	IC ARITH-LGC-UN TTL 4-BIT	01295	SN74181N
A4U9	1820-0077	2	3	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A4U10	1820-0782	6	3	IC GATE TTL NOR TPL 3-INP	01295	SN7427N
A4U11	1820-0301	5	1	IC LCM TTL D-TYPE 4-BIT	01295	SN7475N
A4U12	1820-0616	5	5	IC MUXR/DATA-SEL TTL 2-TO-1-LINE QUAD	07263	9322PC
A4U13	1820-0174	0	2	IC INV TTL HEX	01295	SN7404N
A4U14	1820-0068	1	1	IC GATE TTL NAND TPL 3-INP	01295	SN7410N
A4U15	1820-0640	5	2	IC MUXR/DATA-SEL TTL 16-TO-1-LINE 16-INP	01295	SN74150N
A4U16	1820-0054	0	7	IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A4U17	1820-0281	0	2	IC FF TTL J-K M/S PULSE CLEAR DUAL	01295	SN74107N
A4U18	1820-0683	6	6	IC INV TTL S HEX 1-INP	01295	SN74894N
A4U19	1820-0262	7	1	IC SHF-RGTR TTL R-S PRL-IN SERIAL-OUT	27014	DM8590N
A4U20	1820-0792	6	1	IC GATE TTL NOR TPL 3-INP	01295	SN7427N
A4U21	1820-0620	1	1	IC MUXR/DATA-SEL TTL 4-TO-1-LINE DUAL	01295	SN74153N
A4U22	1820-0214	2	2	IC ODDR TTL BCD-TO-DEC 4-TO-10-LINE	01295	SN7442AN
A4U23	1820-0495	8	1	IC ODDR TTL 4-TO-16-LINE 4-INP	01295	SN74154N
	1480-0116	8	2	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0748	3	2	EXTR-PC BD BLK POLYC .062-RO-TMKN8	28480	4040-0748
A5	05045-60005	0	1	BOARD ASSEMBLY, PROCESSOR MEMORY (SERIES 1520)	28480	05045-60005
A5R1	0757-0917	3	18	RESISTOR 510 2X .125W F TC=0+-100	24546	C4-1/8-TU-511-G
A5TP1	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A5TP2	0360-1682	0	0	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ASU1	1820-0716	6	21	IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU2	1820-0373	1	1	IC GATE TTL H NAND DUAL 4-INP	01295	SN74H20N
ASU3	1820-0686	9	1	IC GATE TTL S AND TPL 3-INP	01295	SN74811N
ASU4	1820-0694	9	1	IC GATE TTL S EXCL-OR QUAD 2-INP	01295	SN74888N
ASU5	1820-0380	0	2	IC GATE TTL H AND-OR-INV	01295	SN74H53N
ASU6	1820-0693	8	8	IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
ASU7	1820-0054	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
ASU8	1820-0328	6		IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
ASU9	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU10	1816-0598	3	2	IC TTL 256-BIT RAM 3-S	01295	SN748200N
ASU11	1816-0598	3		IC TTL 256-BIT RAM 3-S	01295	SN748200N
ASU12	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU13	1820-0685	8	5	IC GATE TTL S NAND TPL 3-INP	01295	SN74810N
ASU14	1820-1107	1	1	IC SHF-RGTR TTL R-S PRL-IN SERIAL-OUT	01295	SN74166N
ASU15	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU16	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU17	1820-0683	6		IC INV TTL S HEX 1-INP	01295	SN74804N
ASU18	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU19	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
ASU20	1820-0622	3	1	IC MUXR/DATA-SEL TTL 8-TO-1-LINE 8-INP	01295	SN74151AN
	1480-0116	8		PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0749	4		EXTR-PC BD BRN POLYC .062=80-THKNS	28480	4040-0749
A6	05045-00006	1	1	BOARD ASSEMBLY, MAIN MEMORY (SERIES 1712)	28480	05045-00006
A6C1	0160-0301	4	1	CAPACITOR-FXD .012UF +-10% 200VDC POLYE	28480	0160-0301
A6C2	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A6C3	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A6C4	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A6C5	0160-3060	6	1	CAPACITOR-FXD .1UF +-20% 25VDC CER	28480	0160-3060
A6C6	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A6C7	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A6C8	0160-0165	8	2	CAPACITOR-FXD .056UF +-10% 200VDC POLYE	28480	0160-0165
A6C9	0160-0165	8		CAPACITOR-FXD .056UF +-10% 200VDC POLYE	28480	0160-0165
A6C10	0180-1746	5	8	CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	1500156X9020B2
A6C11	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	1500156X9020B2
A6C12	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	1500156X9020B2
A6R1	0757-0941	3	20	RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A6R2	0757-0945	1		RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5102-G
A6R3	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A6R4				NOT ASSIGNED		
A6R5				NOT ASSIGNED		
A6R6	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A6R7	1810-0041	9	10	NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R8	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R9	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R10	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R11	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R12	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R13	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R14	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A6R15	0698-3150	6	2	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-TU-2371-F
A6R16	0698-3150	6		RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-TU-2371-F
A6R17	0698-8823	0	2	RESISTOR 8.25 1% .125W F TC=0+-100	28480	0698-8823
A6R18	0698-8823	0		RESISTOR 8.25 1% .125W F TC=0+-100	28480	0698-8823
A6U1	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A6U2	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A6U3	1820-0281	0		IC FF TTL J-K M/S PULSE CLEAR DUAL	01295	SN74107N
A6U4	1820-0681	4	5	IC GATE TTL S NAND QUAD 2-INP	01295	SN74800N
A6U5	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A6U6	1820-1288	9	1	IC DRVR TTL CLOCK DRVR TTL-TO-MOS 1-INP	04713	MMH0026CL
A6U7	1820-0733	7	8	IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U8	1820-0367	3	12	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A6U9	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U10	1820-0367	3		IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A6U11	1820-0528	6		IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A6U12	1820-0207	0	1	IC MV TTL MONOSTBL RETRIG/RESET	04713	MC6601P
A6U13	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A6U14	1820-0685	8		IC GATE TTL S NAND TPL 3-INP	01295	SN74810N
A6U15	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A6U16	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U17	1820-0367	3		IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A6U18	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U19	1820-0367	3		IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A6U20	1820-0054	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N

See introduction to this section for ordering information
*Indicates factory selected value

Model 5045A
Replaceable Parts

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6U21	1820-0685	8	1	IC GATE TTL S NAND TPL 3=INP	01295	SN74810N
A6U22	1820-0683	6		IC INV TTL S HEX 1=INP	01295	SN74804N
A6U23	1820-1449	4		IC GATE TTL S OR QUAD 2=INP	01295	SN74832N
A6U24	1820-0693	6		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A6U25	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U26	1820-0367	3	2	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4=BIT	01295	SN7495AN
A6U27	1820-1195	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS175N
A6U28	1820-0077	2	1	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A6U29	1820-0512	0		IC FF TTL H D-TYPE POS-EDGE-TRIG	01295	SN74H74N
A6U30	1820-0681	4		IC GATE TTL S NAND QUAD 2=INP	01295	SN74800N
A6U31	1820-1158	2	1	IC GATE TTL S AND-OR=INV DUAL 2=INP	01295	SN74851N
A6U32	1820-0616	5		IC MUXR/DATA=SEL TTL 2=TO=1=LINE QUAD	07263	9322PC
A6U33	1820-0616	5		IC MUXR/DATA=SEL TTL 2=TO=1=LINE QUAD	07263	9322PC
A6U34	1820-0616	5		IC MUXR/DATA=SEL TTL 2=TO=1=LINE QUAD	07263	9322PC
A6U35	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A6U36	1820-0367	3	4	IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4=BIT	01295	SN7495AN
A6U37	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74LS112N
A6U38	1820-0681	4		IC GATE TTL S NAND QUAD 2=INP	01295	SN74800N
A6U39	1820-0511	9		IC GATE TTL AND QUAD 2=INP	01295	SN7408N
	1480-0116	8	7	PIN=GRV .062-IN=DIA .25-IN=LG STL	28480	1480-0116
	4040-0750	7		EXTR=PC 8D RED POLYC .062=RD=THKNS	28480	4040-0750
A7	05045-60007	2	1	BOARD ASSEMBLY, I/O HP18 (SERIES 1852)	28480	05045-60007
A7C1	0160-0571	0	4	CAPACITOR=FXD 470PF +-20% 100VDC CER	28480	0160-0571
A7C2	0160-0571	0		CAPACITOR=FXD 470PF +-20% 100VDC CER	28480	0160-0571
A7C3	0160-0571	0		CAPACITOR=FXD 470PF +-20% 100VDC CER	28480	0160-0571
A7C4	0160-0571	0		CAPACITOR=FXD 470PF +-20% 100VDC CER	28480	0160-0571
A7J1	1200-0522	8	1	SOCKET=IC 24=CONT DIP=8LDR	28480	1200-0522
A7R1	1810-0030	6	6	NETWORK=RES R=PIN=SIP .125=PIN=5PCG	28480	1810-0030
A7R2	1810-0030	6		NETWORK=RES B=PIN=SIP .125=PIN=5PCG	28480	1810-0030
A7R3	0757-0407	6		RESISTOR 200 1% .125M F TC=0+-100	24546	C4=1/8-T0=201-F
A7R4	0757-0407	6		RESISTOR 200 1% .125M F TC=0+-100	24546	C4=1/8-T0=201-F
A7R5	0757-0407	6		RESISTOR 200 1% .125M F TC=0+-100	24546	C4=1/8-T0=201-F
A7R6	0757-0407	6	17	RESISTOR 200 1% .125M F TC=0+-100	24546	C4=1/8-T0=201-F
A7R7	0757-0280	3		RESISTOR 1K 1% .125M F TC=0+-100	24546	C4=1/8-T0=1001-F
A7S1	3101-1860	1	2	SWITCH=5L 5=1A DIP=SLIDE=ASSY .1A 50VDC	28480	3101-1860
A7U1	1820-0706	4	1	IC COMPTT TTL MAGTD 5=BIT	07263	9324PC
A7U2	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS374N
A7U3	1820-1116	2	1	IC FF TTL J-K BAR POS-EDGE-TRIG	01295	SN74109N
A7U4	1820-1202	7		IC GATE TTL LS NAND TPL 3=INP	01295	SN74LS10N
A7U5	1820-1282	3	4	IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
A7U6	1820-1282	3		IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
A7U7	1820-0685	8	2	IC GATE TTL S NAND TPL 3=INP	01295	SN74810N
A7U8	1820-0367	3		IC SHF-RGTR TTL R-S PRL-IN PRL-OUT 4=BIT	01295	SN7495AN
A7U9	1820-1053	6	6	IC SCHMITT=TRIG TTL INV HEX	01295	SN7414N
A7U10	1820-1216	3		IC DDDR TTL LS 3=TO=8=LINE 3=INP	01295	SN74LS138N
A7U11	1820-1281	2	1	IC DDDR TTL LS 2=TO=8=LINE 3=INP	01295	SN74LS139N
A7U12	1820-1216	3		IC DDDR TTL LS 3=TO=8=LINE 3=INP	01295	SN74LS138N
A7U13	1820-1195	7	6	IC FF TTL LS D-TYPE POS-EDGE-TRIG CUM	01295	SN74LS175N
A7U14	1820-0683	6		IC INV TTL S HEX 1=INP	01295	SN74804N
A7U15	1820-1211	8	4	IC GATE TTL LS EXCL=OR QUAD 2=INP	01295	SN74LS80N
A7U16	1820-0628	9		IC TTL 64=BIT RAM 60=NS 0=C	01295	SN7489N
A7U17	1820-0681	4		IC GATE TTL S NAND QUAD 2=INP	01295	SN74800N
A7U18	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A7U19	1820-0628	9		IC TTL 64=BIT RAM 60=NS 0=C	01295	SN7489N
A7U20	1820-1199	1	1	IC INV TTL LS HEX 1=INP	01295	SN74LS09N
A7U21	1820-1053	6		IC SCHMITT=TRIG TTL INV HEX	01295	SN7414N
A7U22	1820-1322	2		IC GATE TTL S NOR QUAD 2=INP	01295	SN74S02N
A7U23	1820-1208	3		IC GATE TTL LS OR QUAD 2=INP	01295	SN74LS32N
A7U24	1820-1283	4		IC SHF-RGTR TTL LS R-S PRL-IN PRL-OUT	01295	SN74LS95BM
A7U25	1820-1202	7	4	IC GATE TTL LS NAND TPL 3=INP	01295	SN74LS10N
A7U26	1820-1322	2		IC GATE TTL S NOR QUAD 2=INP	01295	SN74802N
A7U27	1820-1283	4		IC SHF-RGTR TTL LS R-S PRL-IN PRL-OUT	01295	SN74LS95BN
A7U28	1820-0628	9		IC TTL 64=BIT RAM 60=NS 0=C	01295	SN7489N
A7U29	1820-0621	2		IC BFR TTL NAND QUAD 2=INP	01295	SN7438N
A7U30	1820-0621	2	2	IC BFR TTL NAND QUAD 2=INP	01295	SN7438N
A7U31	1820-1282	3		IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
A7U32	1820-0328	6		IC GATE TTL NOR QUAD 2=INP	01295	SN7402N
A7U33	1820-0621	2		IC BFR TTL NAND QUAD 2=INP	01295	SN7438N
A7U34	1820-0621	2		IC BFR TTL NAND QUAD 2=INP	01295	SN7438N

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A7U36	1820-1201	6	1	IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS00N
A7U37	1820-1433	6	2	IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A7U38	1820-0681	4	1	IC GATE TTL S NAND QUAD 2-INP	01295	SN74800N
A7U39	1820-1470	1	1	IC MUXR/DATA-SEL TTL LS 2-TO-1-LINE QUAD	01295	SN74LS157N
A7U40	1820-1194	6	1	IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS143N
A7U41	1820-0692	7	1	IC GATE TTL S AND-OR-INV	01295	SN74865N
A7U42	1820-1207	2	1	IC GATE TTL LS NAND 8-INP	01295	SN74LS350N
A7U43	1820-0628	9	1	IC TTL 64-BIT RAM 60-NS 0-C	01295	SN7489N
	0360-1682	0	37	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
	4040-0751	6	1	EXTR-PC BD GRN POLYC .062-80-TKNS	28480	4040-0751
	1200-0521	7	1	LOCK-DUAL INLINE PKG INLINE PKG	52072	CA-24-200-DL
AE	05045-60008	3	1	BOARD ASSEMBLY, ROM (SERIES 1520)	28480	05045-60008
A8R1	0757-0941	3	33	RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-TU-5101-G
A8R2	0757-0924	2	1	RESISTOR 1K 2% .125W F TC0+100	24546	C4-1/8-TU-1001-G
A8R3	1810-0030	6	1	NETWORK-RES 8-PIN-SIP .125-PIN-SPCG	28480	1810-0030
A8R4	1810-0030	6	1	NETWORK-RES 8-PIN-SIP .125-PIN-SPCG	28480	1810-0030
A8R5	0757-0907	1	5	RESISTOR 200 2% .125W F TC0+100	24546	C4-1/8-TU-201-G
A8U1	1818-2278	4	1	IC,MOS ROM 512 X 8	28480	1818-2278
A8U2	1818-2281	9	1	IC,MOS ROM 512 X 8	28480	1818-2281
A8U3	1818-2284	2	1	IC,MOS ROM 512 X 8	28480	1818-2284
A8U4	1820-1294	7	3	IC MUXR/DATA-SEL TTL 2-TO-1-LINE QUAD	27014	DM8123N
A8U5	1820-0661	0	3	IC GATE TTL OR QUAD 2-INP	01295	SN7432N
A8U6	1818-2277	3	1	IC,MOS ROM 512 X 8	28480	1818-2277
A8U7	1818-2280	8	1	IC,MOS ROM 512 X 8	28480	1818-2280
A8U8	1818-2283	1	1	IC,MOS ROM 512 X 8	28480	1818-2283
A8U9	1820-1294	7	1	IC MUXR/DATA-SEL TTL 2-TO-1-LINE QUAD	27014	DM8123N
A8U10	1820-0077	2	1	IC FF TTL 0-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A8U11	1818-2276	2	1	IC,MOS ROM 512 X 8	28480	1818-2276
A8U12	1818-2279	5	1	IC,MOS ROM 512 X 8	28480	1818-2279
A8U13	1818-2282	0	1	IC,MOS ROM 512 X 8	28480	1818-2282
A8U14	1820-1294	7	1	IC MUXR/DATA-SEL TTL 2-TO-1-LINE QUAD	27014	DM8123N
A8U15	1820-0214	9	1	IC DCDR TTL BCD-TO-DEC 4-TO-10-LINE	01295	SN7442AN
	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
	1480-0116	8	1	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0752	9	4	EXTR-PC BD YEL POLYC .062-80-TKNS	28480	4040-0752
AF	05045-60009	4	1	BOARD ASSEMBLY, ADDRESS (SERIES 1852)	28480	05045-60009
A9C1	0180-0210	6	1	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A9C2	0180-0210	6	1	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	1500335X0015A2
A9C3	0160-2200	6	1	CAPACITOR-FXD 43PF +-5% 300VDC MICA	28480	0160-2200
A9C4	0180-0106	9	1	CAPACITOR-FXD 60UF+-20% 5VDC TA	56289	1500606X0006B2
A9CR1	1902-0126	6	1	DIODE-ZNR 2.61V 5% DO-7 PD=.4W TC=.072X	28480	1902-0126
A9CR2	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A9Q1	1854-0071	7	27	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A9R1	0757-0941	3	1	RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-TU-5101-G
A9R2	0757-0941	3	1	RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-TU-5101-G
A9R3	0757-0941	3	1	RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-TU-5101-G
A9R4	2100-2633	5	3	RESISTOR-TRMR 1K 10% C SIDE-ADJ 1-TRN	30983	ETS0X102
A9R5	0757-0279	0	1	RESISTOR 3.16K 1% .125W F TC0+100	24546	C4-1/8-TU-3161-F
A9R6	0757-0940	2	4	RESISTOR 4.7K 2% .125W F TC0+100	24546	C4-1/8-TU-4701-G
A9R7	0757-0940	2	4	RESISTOR 4.7K 2% .125W F TC0+100	24546	C4-1/8-TU-4701-G
A9R8	0757-0924	2	1	RESISTOR 1K 2% .125W F TC0+100	24546	C4-1/8-TU-1001-G
A9R9	0757-0976	4	7	RESISTOR 150K 2% .125W F TC0+100	24546	C4-1/8-TU-1502-G
A9R10	0757-0948	0	1	RESISTOR 10K 2% .125W F TC0+100	24546	C4-1/8-TU-1002-G
A9R11	1810-0164	7	1	NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0164
A9R12	0757-0940	2	1	RESISTOR 4.7K 2% .125W F TC0+100	24546	C4-1/8-TU-4701-G
A9R13	0757-0972	0	15	RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-TU-1002-G
A9R14	0757-0924	2	1	RESISTOR 1K 2% .125W F TC0+100	24546	C4-1/8-TU-1001-G
A9TP1	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9TP2	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9TP3	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9TP4	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9TP5	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9TP6	0360-1682	0	1	TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A9U1	1820-0511	9	1	IC GATE TTL AND QUAD 2-INP	01295	SN7408N
A9U2	1820-0661	0	1	IC GATE TTL OR QUAD 2-INP	01295	SN7432N
A9U3	1820-0697	2	1	IC DWRV TTL S NAND LINE DUAL 4-INP	01295	SN748140N
A9U4	1820-0066	1	1	IC GATE TTL NAND TPL 3-INP	01295	SN7410N
A9U5	1820-0567	1	1	IC MV TTL DUAL	04713	MC4024P

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9U6	1820-0655	2	1	IC GATE TTL NOR DUAL 4-INP	01295	SN7425N
A9U7	1820-0669	2	1	IC GATE TTL NAND DUAL 4-INP	01295	SN7420N
A9U8	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A9U9	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A9U10	1820-0683	8		IC INV TTL 5 HEX 1-INP	01295	SN74804N
A9U11	1820-0380	0		IC GATE TTL 4 AND-OR-INV	01295	SN74H53N
A9U12	1820-0718	6		IC CNTR TTL BIN SYNCHRU POS-EDGE-TRIG	01295	SN74161N
A9U13	1820-1064	9	1	IC SHF-RGTR TTL SERIAL-IN PRL-OUT 8-BIT	01295	SN74164N
A9U14	1820-0471	0	10	IC INV TTL HEX 1-INP	01295	SN7406N
A9U15	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A9U16	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A9U17	1820-0716	6		IC CNTR TTL BIN SYNCHRU POS-EDGE-TRIG	01295	SN74161N
A9U18	1820-0788	2	5	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR HEX	01295	SN74174N
A9U19	1820-0716	6		IC CNTR TTL BIN SYNCHRU POS-EDGE-TRIG	01295	SN74161N
A9U20	1820-0716	6		IC CNTR TTL BIN SYNCHRU POS-EDGE-TRIG	01295	SN74161N
A9U21	1820-1042	3	2	IC SHF-RGTR TTL R-S PRL-IN SERIAL-OUT	01295	SN74165N
	1480-0116	8		PIN=GRV .062-IN-DIA .25-IN-LG STL	28880	1480-0116
	4040-0753	0	2	EXTR=PC BD GRN POLYC .062-RO=THKNS	28880	4040-0753
A10	05045-60010	7	1	BOARD ASSEMBLY, DAC (SERIES 1520)	28480	05045-60010
A10C1	0160-2055	9	15	CAPACITOR=FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A10C2	0160-2055	9		CAPACITOR=FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A10C3	0160-3456	6		CAPACITOR=FXD 1000PF +/-10% 1KVDC CER	28480	0160-3456
A10C4	0160-3456	6		CAPACITOR=FXD 1000PF +/-10% 1KVDC CER	00908	T1108335K035AS
A10C5	0160-0161	6	11	CAPACITOR=FXD 3.3UF +/-10% 35VDC TA	28480	0160-2055
A10C6	0160-2055	9		CAPACITOR=FXD .01UF +80-20% 100VDC CER	00908	T1108335K035AS
A10C7	0160-0161	6		CAPACITOR=FXD 3.3UF +/-10% 35VDC TA	28480	0160-2055
A10C8	0160-2055	9		CAPACITOR=FXD .01UF +80-20% 100VDC CER	00908	T1108335K035AS
A10C9	0160-0161	6		CAPACITOR=FXD 3.3UF +/-10% 35VDC TA	28480	0160-2055
A10CR1	1902-3234	3	2	DIODE=ZNR 19.6V 5X DO-7 PD=.4W TC=+.073X	28480	1902-3234
A10CR2	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10CR3	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10CR4	1902-0064	1	3	DIODE=ZNR 7.5V 5X DO-7 PD=.4W TC=+.05X	28480	1902-0064
A10CR5	1902-3234	3		DIODE=ZNR 19.6V 5X DO-7 PD=.4W TC=+.073X	28480	1902-3234
A10CR6	1902-0064	1		DIODE=ZNR 7.5V 5X DO-7 PD=.4W TC=+.05X	28480	1902-0064
A10CR7	1902-0064	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1902-0064
A10CR8	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10CR9	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10CR10	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10CR11	1901-0040	1		DIODE=SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A10R1	1854-0071	7	26	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A10R2	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A10R3	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R4	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R5	0757-0921	9		RESISTOR 750 2% .125W F TC=0+/-100	24546	C4=1/8-T0-751-G
A10R6	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1002-G
A10R7	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R8	0757-0917	3		RESISTOR 100 2% .125W F TC=0+/-100	24546	C4=1/8-T0-101-G
A10R9	0757-0900	4		RESISTOR 100 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R10	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R11	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R12	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R13	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R14	0757-0917	3		RESISTOR 510 2% .125W F TC=0+/-100	24546	C4=1/8-T0-511-G
A10R15	0757-0941	3	7	RESISTOR 5.1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-5101-G
A10R16	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-2001-G
A10R17	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R18	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-5101-G
A10R19	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R20	0757-0935	5	8	RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R21	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R22	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R23	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R24	0757-0976	4		RESISTOR 150K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1502-G
A10R25	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R26	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R27	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R28	0757-0935	5		RESISTOR 3K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-3001-G
A10R29	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R30	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R31	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R32	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R33	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R34	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R35	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R36	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R37	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R38	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R39	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R40	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R41	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R42	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R43	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R44	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R45	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R46	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R47	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R48	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R49	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G
A10R50	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+/-100	24546	C4=1/8-T0-1001-G

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10R31	0757-0924	2	3	RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10R32	0757-0941	3		RESISTOR 5.1K 2% .125W F TC00±100	24546	C4-1/8-T0-5101-G
A10R33	0757-0911	7		RESISTOR 300 2% .125W F TC00±100	24546	C4-1/8-T0-301-G
A10R34	0757-0948	0		RESISTOR 10K 2% .125W F TC00±100	24546	C4-1/8-T0-1002-G
A10R35	0757-0958	2		RESISTOR 27K 2% .125W F TC00±100	24546	C4-1/8-T0-2702-G
A10R36	0757-0924	2	1	RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10R37	0757-0948	0		RESISTOR 10K 2% .125W F TC00±100	24546	C4-1/8-T0-1002-G
A10R38	0757-0967	3		RESISTOR 62K 2% .125W F TC00±100	24546	C4-1/8-T0-6202-G
A10R39	0757-0924	2		RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10R40	0757-0941	3		RESISTOR 5.1K 2% .125W F TC00±100	24546	C4-1/8-T0-5101-G
A10R41	0757-0972	0		RESISTOR 100K 2% .125W F TC00±100	24546	C4-1/8-T0-1002-G
A10R43	0757-0948	0		RESISTOR 10K 2% .125W F TC00±100	24546	C4-1/8-T0-1002-G
A10R44	0757-0958	2		RESISTOR 27K 2% .125W F TC00±100	24546	C4-1/8-T0-2702-G
A10R45	0757-0924	2		RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10R46	0757-0924	2		RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10R47	0757-0958	2		RESISTOR 27K 2% .125W F TC00±100	24546	C4-1/8-T0-2702-G
A10R48	0757-0948	0		RESISTOR 10K 2% .125W F TC00±100	24546	C4-1/8-T0-1002-G
A10R49	0757-0924	2		RESISTOR 1K 2% .125W F TC00±100	24546	C4-1/8-T0-1001-G
A10U1	1820-0899	6	1	IC CNTR TTL DECD SYNCHRO POS-EDGE-TRIG	01295	SN74160N
A10U2	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A10U3	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A10U4	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A10U5	1820-0511	9		IC GATE TTL AND QUAD 2-INP	01295	SN7408N
A10U6	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A10U7	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74874N
A10U8	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A10U9	1820-0054	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A10U10	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A10U11	1820-0491	4	1	IC DCDR TTL BCD-TO-DEC 4-TO-10-LINE	01295	SN74145N
A10U12	1820-0733	7		IC SHF-RGTR PMOS SERIAL-IN SERIAL-OUT	27014	MM1402AD
A10U13	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A10U14	1820-1322	2		IC GATE TTL 3 NOR QUAD 2-INP	01295	SN74802N
A10U15	1820-0328	6		IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A10U16	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A10U17	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74161N
A10U18	1820-0367	3		IC SHF-RGTR TTL P-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A10U19	1820-0788	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR HEX	01295	SN74174N
A10U20	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A10U21	1820-0054	5	1	IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A10U22	1820-0328	6		IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A10U23	1820-0377	5		IC GATE TTL H AND-OR-INV DUAL 2-INP	01295	SN74850N
A10U24	1820-0788	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR HEX	01295	SN74174N
A10U25	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
	1480-0116	8	2	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0754	1		EXTR-PC BD 8LU POLYC .062-BD-THKNS	28480	4040-0754
A11	05045-60011	8	1	BOARD ASSEMBLY, REFERENCE LEVEL G (SERIES 1852)	28480	05045-60011
A11C1	0160-4279	3	3	CAPACITOR-FXD 470PF ±10% 200VDC POLYP	71590	CPP-471J
A11C2	0160-4279	3		CAPACITOR-FXD 470PF ±10% 200VDC POLYP	71590	CPP-471J
A11C3	0160-4279	3		CAPACITOR-FXD 470PF ±10% 200VDC POLYP	71590	CPP-471J
A11C4	0140-0209	9		CAPACITOR-FXD 5PF ±10% 500VDC MICA	72136	DM15C050K0500V1CH
A11C5	0150-0121	5		CAPACITOR-FXD .1UF ±80-20% 50VDC CER	28480	0150-0121
A11C6	0150-0121	5	3	CAPACITOR-FXD .1UF ±80-20% 50VDC CER	28480	0150-0121
A11C7	0160-0181	8		CAPACITOR-FXD 30PF ±5% 300VDC MICA	28480	0160-0181
A11C8	0160-0181	8		CAPACITOR-FXD 30PF ±5% 300VDC MICA	28480	0160-0181
A11C9	0160-2218	6		CAPACITOR-FXD 1000PF ±5% 300VDC MICA	28480	0160-2218
A11C10	0160-2055	9		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A11C11	0160-2197	0	1	CAPACITOR-FXD 10PF ±5% 300VDC MICA	28480	0160-2197
A11C12	0140-0209	9		CAPACITOR-FXD 5PF ±10% 500VDC MICA	72136	DM15C050K0500V1CH
A11C13	0160-0181	8		CAPACITOR-FXD 30PF ±5% 300VDC MICA	28480	0160-0181
A11C14	0140-0184	9		CAPACITOR-FXD 8200PF ±1% 100VDC MICA	72136	DM20F822F0100V1CH
A11C15	0160-2055	9		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A11C16	0160-2225	5	2	CAPACITOR-FXD 2000PF ±5% 300VDC MICA	28480	0160-2225
A11C17	0140-0184	9		CAPACITOR-FXD 8200PF ±1% 100VDC MICA	72136	DM20F822F0100V1CH
A11C18	0160-2225	5		CAPACITOR-FXD 2000PF ±5% 300VDC MICA	28480	0160-2225
A11C19	0160-2055	9		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A11C20	0160-2055	9		CAPACITOR-FXD .01UF ±80-20% 100VDC CER	28480	0160-2055
A11C21	0180-0161	6	2	CAPACITOR-FXD 3.3UF ±10% 35VDC TA	00908	T1108335K03543
A11C22	0140-0151	0		CAPACITOR-FXD 820PF ±2% 300VDC MICA	72136	DM15F82160300V1CH
A11C23	0150-0121	5		CAPACITOR-FXD .1UF ±80-20% 50VDC CER	28480	0150-0121
A11C24	0150-0121	5		CAPACITOR-FXD .1UF ±80-20% 50VDC CER	28480	0150-0121
A11C25	0160-0362	7		CAPACITOR-FXD 510PF ±5% 300VDC MICA	28480	0160-0362

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11C26	0180-0362	7		CAPACITOR-FXD 510PF +/-5% 300VDC MICA	28480	0180-0362
A11C27	0180-0116	1		CAPACITOR-FXD 6.8UF+/-10% 35VDC TA	56289	150D685X903582
A11C28	0180-0116	1		CAPACITOR-FXD 6.8UF+/-10% 35VDC TA	56289	150D685X903582
A11C29	0180-2218	6		CAPACITOR-FXD 1000PF +/-5% 300VDC MICA	28480	0180-2218
A11C30	0140-0151	0		CAPACITOR-FXD R20PF +/-2% 300VDC MICA	72136	DM15F821G0300WV1CR
A11C31	0180-1746	5		CAPACITOR-FXD 15UF+/-10% 20VDC TA	56289	150D156X902082
A11C32	0150-0121	5		CAPACITOR-FXD .1UF +/-20% 50VDC CER	28480	0150-0121
A11C33	0180-2240	4	1	CAPACITOR-FXD 2PF +/-25PF 500VDC CER	28480	0180-2240
A11C34	0180-0161	6		CAPACITOR-FXD 3.3UF+/-10% 35VDC TA	00908	T110B335K035AS
A11C35	0180-1746	5		CAPACITOR-FXD 15UF+/-10% 20VDC TA	56289	150D156X902082
A11C36	0180-0161	6		CAPACITOR-FXD 3.3UF+/-10% 35VDC TA	00908	T110B335K035AS
A11CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR9	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS 00-35	28480	1901-0040
A11CR11	1902-0071	0	1	DIODE-ZNR 9V 5% 00-1A PDR.5W TC=+.001%	28480	1902-0071
A11L1	9140-0144	0	13	COIL-MLD 4.7UH 10% 0#45 .095DX.25LG-NUM	28480	9140-0144
A11L2	9140-0144	0		COIL-MLD 4.7UH 10% 0#45 .095DX.25LG-NUM	28480	9140-0144
A11Q1	1855-0081	1	3	TRANSISTOR J-FET N-CHAN D-MODE SI	01295	2N5245
A11Q2	1853-0020	4		TRANSISTOR PNP SI PDR300MW FT#150MHZ	28480	1853-0020
A11Q3	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q4	1853-0020	4		TRANSISTOR PNP SI PDR300MW FT#150MHZ	28480	1853-0020
A11Q5	1855-0081	1		TRANSISTOR J-FET N-CHAN D-MODE SI	01295	2N5245
A11Q6	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q7	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q8	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q9	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q10	1854-0071	7		TRANSISTOR NPN SI PDR300MW FT#200MHZ	28480	1854-0071
A11Q11	1853-0020	4		TRANSISTOR PNP SI PDR300MW FT#150MHZ	28480	1853-0020
A11Q12	1853-0020	4		TRANSISTOR PNP SI PDR300MW FT#150MHZ	28480	1853-0020
A11Q13	1853-0020	4		TRANSISTOR PNP SI PDR300MW FT#150MHZ	28480	1853-0020
A11R1	0757-0900	4	6	RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R2	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R3	0757-0944	6		RESISTOR 6.8K 2% .125W F TC=0+-100	24546	C4-1/8-TU-6801-G
A11R4	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R5	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R6	0757-0945	7	3	RESISTOR 7.5K 2% .125W F TC=0+-100	24546	C4-1/8-TU-7501-G
A11R7	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A11R8	0757-0944	6		RESISTOR 6.8K 2% .125W F TC=0+-100	24546	C4-1/8-TU-6801-G
A11R9	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A11R10	0757-0952	6	3	RESISTOR 15K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1502-G
A11R11	0757-0955	9	15	RESISTOR 20K 2% .125W F TC=0+-100	24546	C4-1/8-TU-2002-G
A11R12	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A11R13	0757-0944	6		RESISTOR 6.8K 2% .125W F TC=0+-100	24546	C4-1/8-TU-6801-G
A11R14	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R15	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5101-G
A11R16	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R17	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R18	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R19	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R20	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R21	0757-0972	0		RESISTOR 100K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A11R22	0757-0931	1		RESISTOR 2K 2% .125W F TC=0+-100	24546	C4-1/8-TU-2001-G
A11R23	0757-0952	6		RESISTOR 15K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1502-G
A11R24	0757-0944	6		RESISTOR 6.8K 2% .125W F TC=0+-100	24546	C4-1/8-TU-6801-G
A11R25	0757-0965	1		RESISTOR 51K 2% .125W F TC=0+-100	24546	C4-1/8-TU-5102-G
A11R26	0757-0933	3	2	RESISTOR 2.4K 2% .125W F TC=0+-100	24546	C4-1/8-TU-2401-G
A11R27	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1001-G
A11R28	0698-3252	9		RESISTOR 450 1% .125W F TC=0+-50	28480	0698-3252
A11R29	0757-0944	6		RESISTOR 6.8K 2% .125W F TC=0+-100	24546	C4-1/8-TU-6801-G
A11R30	0757-0952	6		RESISTOR 15K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1502-G
A11R31	0757-0955	9		RESISTOR 20K 2% .125W F TC=0+-100	24546	C4-1/8-TU-2002-G
A11R32	0757-0948	0		RESISTOR 10K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1002-G
A11R33	0757-0924	2		RESISTOR 1K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1001-G
A11R34	0757-0900	4		RESISTOR 100 2% .125W F TC=0+-100	24546	C4-1/8-TU-101-G
A11R35	0757-0972	0		RESISTOR 100K 2% .125W F TC=0+-100	24546	C4-1/8-TU-1002-G

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11R36	0757-0940	2		RESISTOR 4.7K 2% .125W F TC0+-100	24546	C4-1/8-T0-4701-G
A11R37	0757-0957	1	4	RESISTOR 24K 2% .125W F TC0+-100	24546	C4-1/8-T0-2402-G
A11R38	0757-0394	0	2	RESISTOR 51.1 1% .125W F TC0+-100	24546	C4-1/8-T0-5111-F
A11R39	0757-0416	7	2	RESISTOR 511 1% .125W F TC0+-100	24546	C4-1/8-T0-5111-F
A11R40	0757-0957	1		RESISTOR 24K 2% .125W F TC0+-100	24546	C4-1/8-T0-2402-G
A11R41	0757-0911	7		RESISTOR 300 2% .125W F TC0+-100	24546	C4-1/8-T0-301-G
A11R42	0757-0924	2		RESISTOR 1K 2% .125W F TC0+-100	24546	C4-1/8-T0-1001-G
A11R43	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R44	0757-0933	3		RESISTOR 2.4K 2% .125W F TC0+-100	24546	C4-1/8-T0-2401-G
A11R45	0757-0957	1		RESISTOR 24K 2% .125W F TC0+-100	24546	C4-1/8-T0-2402-G
A11R46	0698-3252	9		RESISTOR 450 1% .125W F TC0+-50	28480	0698-3252
A11R47	0757-0957	1		RESISTOR 24K 2% .125W F TC0+-100	24546	C4-1/8-T0-2402-G
A11R48	0757-0416	7		RESISTOR 511 1% .125W F TC0+-100	24546	C4-1/8-T0-5111-F
A11R49	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R50	0757-0394	0		RESISTOR 51.1 1% .125W F TC0+-100	24546	C4-1/8-T0-5111-F
A11R51	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R52	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R53	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R54	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R55	0757-0965	1		RESISTOR 51K 2% .125W F TC0+-100	24546	C4-1/8-T0-5102-G
A11R56	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R57	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R58	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R59	0757-0931	1		RESISTOR 2K 2% .125W F TC0+-100	24546	C4-1/8-T0-2001-G
A11R60	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R61	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R62	0757-0920	8	1	RESISTOR 680 2% .125W F TC0+-100	24546	C4-1/8-T0-681-G
A11R63	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+-100	24546	C4-1/8-T0-5101-G
A11R64	0757-0911	7		RESISTOR 300 2% .125W F TC0+-100	24546	C4-1/8-T0-301-G
A11R65	0698-6977	1	2	RESISTOR 30K .1% .125W F TC0+-25	28480	0698-6977
A11R66	0757-0945	7		RESISTOR 7.5K 2% .125W F TC0+-100	24546	C4-1/8-T0-7501-G
A11R67	0698-6977	1		RESISTOR 30K .1% .125W F TC0+-25	28480	0698-6977
A11R68	0757-0945	7		RESISTOR 7.5K 2% .125W F TC0+-100	24546	C4-1/8-T0-7501-G
A11R69	0698-6360	6	2	RESISTOR 10K .1% .125W F TC0+-25	28480	0698-6360
A11R70	0698-6360	6		RESISTOR 10K .1% .125W F TC0+-25	28480	0698-6360
A11R71	0757-0915	1	4	RESISTOR 430 2% .125W F TC0+-100	24546	C4-1/8-T0-431-G
A11R72	0757-0915	1		RESISTOR 430 2% .125W F TC0+-100	24546	C4-1/8-T0-431-G
A11R73	0757-0915	1		RESISTOR 430 2% .125W F TC0+-100	24546	C4-1/8-T0-431-G
A11R74	0757-0915	1		RESISTOR 430 2% .125W F TC0+-100	24546	C4-1/8-T0-431-G
A11R75	0757-0907	1		RESISTOR 200 2% .125W F TC0+-100	24546	C4-1/8-T0-201-G
A11R76	1810-0202	4	1	NETWORK-RESISTOR 12 BIT BIN LADDER NTWK	73138	812-A11-R50K
A11R77	0757-0972	0		RESISTOR 100K 2% .125W F TC0+-100	24546	C4-1/8-T0-1002-G
A11R78	0757-0944	6		RESISTOR 6.8K 2% .125W F TC0+-100	24546	C4-1/8-T0-6801-G
A11R79	0757-0926	4	1	RESISTOR 1.2K 2% .125W F TC0+-100	24546	C4-1/8-T0-1201-G
A11R80	2100-2632	4	2	RESISTOR-TRMR 100 10% C SIDE-ADJ 1-TRN	30983	ET50X101
A11R81	2100-2514	1	4	RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN	30983	ET50W205
A11R82	2100-2632	4		RESISTOR-TRMR 100 10% C SIDE-ADJ 1-TRN	30983	ET50X101
A11R83	2100-2514	1		RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN	30983	ET50W205
A11R84	2100-2514	1		RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN	30983	ET50W205
A11R85	2100-2522	1	2	RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN	30983	ET50X103
A11R86	2100-2514	1		RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN	30983	ET50W205
A11R87	2100-2522	1		RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN	30983	ET50X103
A11R88	2100-2633	5		RESISTOR-TRMR 1K 10% C SIDE-ADJ 1-TRN	30983	ET50X102
A11R89	2100-2489	9	1	RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN	30983	ET50X502
A11R90	2100-2633	5		RESISTOR-TRMR 1K 10% C SIDE-ADJ 1-TRN	30983	ET50X102
A11R91	0757-0924	2		RESISTOR 1K 2% .125W F TC0+-100	24546	C4-1/8-T0-1001-G
A11TP1	0360-1682	0		TERMINAL-STUD SGL-TUR PRESS-MTG	28480	0360-1682
A11U1	1826-0208	3	11	OP AMP GP 8-DIP-P	27014	LM310N
A11U2	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U3	1826-0207	2	3	OP AMP WB 8-DIP-P	27014	LM318N
A11U4	1826-0207	2		OP AMP WB 8-DIP-P	27014	LM318N
A11U5	1826-0207	2		OP AMP WB 8-DIP-P	27014	LM318N
A11U6	1820-0493	6	1	OP AMP GP 8-DIP-P	27014	LM307N
A11U7	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U8	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U9	1820-1938	6	8	IC CMOS QUAD BILATERAL SWITCH	28480	1820-1938
A11U10	1820-1617	8	5	IC CMOS DUAL D F-F POS EDGE CLOCK	04713	MC140138CP
A11U11	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U12	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U13	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U14	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U15	1820-1938	6		IC CMOS QUAD BILATERAL SWITCH	28480	1820-1938
A11U16	1820-1617	8		IC CMOS DUAL D F-F POS EDGE CLOCK	04713	MC140138CP
A11U17	1820-1938	6		IC CMOS QUAD BILATERAL SWITCH	28480	1820-1938
A11U18	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N
A11U19	1820-1617	8		IC CMOS DUAL D F-F POS EDGE CLOCK	04713	MC140138CP
A11U20	1826-0208	3		OP AMP GP 8-DIP-P	27014	LM310N

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11U21	1820-1938	6	1	IC CMOS QUAD BILATERAL SWITCH	28480	1820-1938
A11U22	1820-1617	8		IC CMOS DUAL D F-F POS EDGE CLOCK	04713	MC14013HCP
A11U23	1820-0928	2		IC BFR CMOS QUAD	01928	CD4041AE
A11U24	1820-1622	5		IC SHF-RGTR CMOS DUAL 4-BIT	28480	1820-1622
A11U25	1820-1622	5		IC SHF-RGTR CMOS DUAL 4-BIT	28480	1820-1622
A11U26	1826-0208	3	1	OP AMP GP 8-DIP-P	27014	LM310N
A11U27	1820-1622	5		IC SHF-RGTR CMOS DUAL 4-BIT	28480	1820-1622
A11U28	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A11U29	1820-0980	6		IC BFR CMOS HEX 1-INP	01928	CD4010AF
A11U30	1820-1622	5		IC SHF-RGTR CMOS DUAL 4-BIT	28480	1820-1622
	1480-0116	8	2	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0755	2		EXTR-PC 8D VIO POLYC .062-8D-TMKN8	28480	4040-0755
A12	05045-60012	9	1	BOARD ASSEMBLY, PIN DRIVE C (SERIES 152U)	28480	05045-60012
A12C1	0160-3456	6	12	CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C2	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C3	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C4	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C5	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C6	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C7	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
A12C8	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
A12C9	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
A12C10	0160-2055	9		CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
A12C11	0160-2201	7	7	CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C12	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C13	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C14	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C15	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C16	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C17	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C18	0160-2201	7		CAPACITOR-FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A12C19	0150-0121	5		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	28480	0150-0121
A12C20	0150-0121	5		CAPACITOR-FXD .1UF +-80-20% 50VDC CER	28480	0150-0121
A12C21	0150-0121	5	7	CAPACITOR-FXD .1UF +-80-20% 50VDC CER	28480	0150-0121
A12R1	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R2	0757-0931	1		RESISTOR 2K 2% .125W F TC0+100	24546	C4-1/8-T0-2001-G
A12R3	0757-0931	1		RESISTOR 2K 2% .125W F TC0+100	24546	C4-1/8-T0-2001-G
A12R4	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R5	0757-0931	1		RESISTOR 2K 2% .125W F TC0+100	24546	C4-1/8-T0-2001-G
A12R6	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R7	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R8	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R9	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R10	0757-0972	0	RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G	
A12R11	1810-0041	0	4	NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A12R12	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R13	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R14	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R15	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R16	0757-0814	9		RESISTOR 511 1% .5W F TC0+100	28480	0757-0814
A12R17	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R18	0757-0814	9		RESISTOR 511 1% .5W F TC0+100	28480	0757-0814
A12R19	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R20	0757-0900	4		RESISTOR 100 2% .125W F TC0+100	24546	C4-1/8-T0-101-G
A12R21	0757-0814	9	9	RESISTOR 511 1% .5W F TC0+100	28480	0757-0814
A12R22	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R23	0757-0814	9		RESISTOR 511 1% .5W F TC0+100	28480	0757-0814
A12R24	0757-0972	0		RESISTOR 100K 2% .125W F TC0+100	24546	C4-1/8-T0-1002-G
A12R25	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R26	0757-0917	3		RESISTOR 510 2% .125W F TC0+100	24546	C4-1/8-T0-511-G
A12R27	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R28	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R29	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-T0-5101-G
A12R30	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-T0-5101-G
A12R31	0757-0955	9	6	RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R32	0757-0893	4		RESISTOR 51 2% .125W F TC0+100	24546	C4-1/8-T0-51R0-G
A12R33	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-T0-5101-G
A12R34	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-T0-5101-G
A12R35	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0+100	24546	C4-1/8-T0-5101-G
A12R36	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R37	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R38	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R39	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-T0-2002-G
A12R40	0757-0937	7		RESISTOR 3.6K 2% .125W F TC0+100	24546	C4-1/8-T0-3601-G

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A12R41	0757-0924	2		RESISTOR 1K 2% .125W F TC0+100	24546	C4-1/8-10-1001-G
A12R42	0757-0937	2		RESISTOR 3.6K 2% .125W F TC0+100	24546	C4-1/8-10-3601-G
A12R43	0757-0924	2		RESISTOR 1K 2% .125W F TC0+100	24546	C4-1/8-10-1001-G
A12R44	0757-0955	9		RESISTOR 20K 2% .125W F TC0+100	24546	C4-1/8-10-2002-G
A12R45	0757-0931	1		RESISTOR 2K 2% .125W F TC0+100	24546	C4-1/8-10-2001-G
A12U1	1820-0616	5		IC MUXR/DATA=SEL TTL 2=TO=1-LINE QUAD	07263	9322PC
A12U2	1820-1028	5	1	IC (MISC ITEM)	01295	SN7489N
A12U3	1820-0539	1	1	IC 8FR TTL NAND QUAD 2=INP	01295	SN7437N
A12U4	1820-0471	0		IC INV TTL HEX 1=INP	01295	SN7406N
A12U5	1820-0839	4	1	IC FF TTL D-TYPE POS=EDGE=TRIG CLEAR	01295	SN74175N
A12U6	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS=EDGE=TRIG	01295	SN74161N
A12U7	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS=EDGE=TRIG	01295	SN74161N
A12U8	1820-0782	6		IC GATE TTL NOR TPL 3=INP	01295	SN7427N
A12U9	1820-0683	6		IC INV TTL S HEX 1=INP	01295	SN74808N
A12U10	1820-0693	8		IC FF TTL S D-TYPE POS=EDGE=TRIG	01295	SN74874N
A12U11	1820-0367	3		IC SHF-RGTR TTL R=8 PRL=IN PRL=OUT 4=BIT	01295	SN7495AN
A12U12	1820-1184	4	1	IC 8FR TTL NOR QUAD 2=INP	01295	SN7428N
A12U13	1820-0685	8		IC GATE TTL S NAND TPL 3=INP	01295	SN74810N
A12U14	1820-0328	6		IC GATE TTL NOR QUAD 2=INP	01295	SN7402N
A12U15	1826-0055	8	4	COMPARATOR GP DUAL 14=DIP=C	07263	711DC
A12U16	1826-0055	8		COMPARATOR GP DUAL 14=DIP=C	07263	711DC
A12U17	1820-1615	5	1	IC IC DCDR TTL BCD-TO-DEC 4=TO=10-LINE	04713	MC14049BCP
A12U18	1820-0468	8	1	COMPARATOR GP DUAL 14=DIP=C	07263	711DC
A12U19	1826-0055	8		COMPARATOR GP DUAL 14=DIP=C	07263	711DC
A12U20	1826-0055	8		COMPARATOR GP DUAL 14=DIP=C	07263	711DC
	1250-1368	7	6	CONNECTOR=RF 8MB M PC 50=OHM	28480	1250-1368
	1480-0116	8		PIN=GRV .062=IN=DIA .25=IN=LG STL	28480	1480-0116
	4040-0747	2	2	EXTR=PC BD GRA POLYC .062=BD=THKNS	28480	4040-0747
A13	05045-60013	0	1	BOARD ASSEMBLY, PIN DRIVER (SERIES 1916)	28480	05045-60013
A13C1	0160-2201	7		CAPACITOR=FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A13C2	0170-0094	3	8	CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C3	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C4	0160-2201	7		CAPACITOR=FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A13C5	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C6	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C7	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C8	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C9	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C10	0160-2201	7		CAPACITOR=FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A13C11	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C12	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C13	0160-2201	7		CAPACITOR=FXD 51PF +-5% 300VDC MICA	28480	0160-2201
A13C14	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C15	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C16	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C17	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C18	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C19	0160-2204	0	10	CAPACITOR=FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A13C20	0160-3454	4	4	CAPACITOR=FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A13C21	0160-3454	4		CAPACITOR=FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A13C22	0160-3454	4		CAPACITOR=FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A13C23	0160-2204	0		CAPACITOR=FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A13C24	0150-0071	4	4	CAPACITOR=FXD 400PF +-5% 1KVDC CER	28480	0150-0071
A13C25	0160-3454	4		CAPACITOR=FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A13C26	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C27	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C28	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C29	0160-3456	6		CAPACITOR=FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A13C30	0160-2199	2	8	CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C31	0160-2199	2		CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C32	0160-2204	0		CAPACITOR=FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A13C33	0160-2204	0		CAPACITOR=FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A13C34	0160-2199	2		CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C35	0160-2199	2		CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C36	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C37	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C38	0160-2199	2		CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C39	0160-2199	2		CAPACITOR=FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C40	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C41	0170-0094	3		CAPACITOR=FXD .047UF +-20% 50VDC POLYE	84411	602-4730R5W2
A13C42	0150-0071	4		CAPACITOR=FXD 400PF +-5% 1KVDC CER	28480	0150-0071
A13C43	0150-0071	4		CAPACITOR=FXD 400PF +-5% 1KVDC CER	28480	0150-0071
A13C44	0150-0071	4		CAPACITOR=FXD 400PF +-5% 1KVDC CER	28480	0150-0071
A13C45	0160-2204	0		CAPACITOR=FXD 100PF +-5% 300VDC MICA	28480	0160-2204

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13C46	0160-2199	2		CAPACITOR-FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C47	0160-2199	2		CAPACITOR-FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A13C48	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A13CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR9	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR11	1902-3193	3	4	DIODE-ZNR 13.3V 5% DO-7 PD=4W TC=+.059%	28480	1902-3193
A13CR12	1902-3193	3		DIODE-ZNR 13.3V 5% DO-7 PD=4W TC=+.059%	28480	1902-3193
A13CR13	1902-3193	3		DIODE-ZNR 13.3V 5% DO-7 PD=4W TC=+.059%	28480	1902-3193
A13CR14	1902-3193	3		DIODE-ZNR 13.3V 5% DO-7 PD=4W TC=+.059%	28480	1902-3193
A13CR15	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR16	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR17	1901-0518	8	6	DIODE-SCHOTTKY	28480	1901-0518
A13CR18	1901-0518	8		DIODE-SCHOTTKY	28480	1901-0518
A13CR19	1901-0518	8		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0518
A13CR20	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR21	1910-0034	2	3	DIODE-GE 30V 80MA 8NS DO-7	28480	1910-0034
A13CR22	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR23	1901-0050	3	108	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR24	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR26	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR30	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR31	1910-0034	2		DIODE-GE 30V 80MA 8NS DO-7	28480	1910-0034
A13CR32	1910-0034	2		DIODE-GE 30V 80MA 8NS DO-7	28480	1910-0034
A13CR33	1901-0518	8		DIODE-SCHOTTKY	28480	1901-0518
A13CR34	1901-0518	8		DIODE-SCHOTTKY	28480	1901-0518
A13CR35	1901-0518	8		DIODE-SCHOTTKY	28480	1901-0518
A13CR36	1901-0518	8		DIODE-SCHOTTKY	28480	1901-0518
A13Q1	1854-0071	7	2	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q2	1854-0634	8		TRANSISTOR NPN SI PD=1W FT=50MHZ	04713	MPS-U01
A13Q3	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q4	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q5	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q6	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q7	1854-0634	8		TRANSISTOR NPN SI PD=1W FT=50MHZ	04713	MPS-U01
A13Q8	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q9	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	04713	MPS-U51
A13Q10	1853-0326	3	2	TRANSISTOR PNP SI PD=1W FT=50MHZ	04713	MPS-U51
A13Q11	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q12	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q13	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q14	1853-0326	3		TRANSISTOR PNP SI PD=1W FT=50MHZ	04713	MPS-U51
A13Q15	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q16	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q17	1854-0670	2	2	TRANSISTOR NPN SI DARL PD=50W	01295	TIP110
A13Q18	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q19	1854-0670	2		TRANSISTOR NPN SI DARL PD=50W	01295	TIP110
A13Q20	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A13Q21	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13Q22	1853-0377	4	2	TRANSISTOR PNP SI DARL PD=50W	01295	TIP 115
A13Q23	1853-0377	4		TRANSISTOR PNP SI DARL PD=50W	01295	TIP 115
A13Q24	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A13R1	0757-0909	3	2	RESISTOR 240 2% .125W F TC=0+-100	24546	C4-1/8-10-241-G
A13R2	0757-0909	3		RESISTOR 240 2% .125W F TC=0+-100	24546	C4-1/8-10-241-G
A13R3	0757-0907	1		RESISTOR 200 2% .125W F TC=0+-100	24546	C4-1/8-10-201-G
A13R4	0757-0283	6	8	RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-10-2001-F
A13R5	0811-3453	4	4	RESISTOR 25 1% 3W PW TC=0+-20	28480	0811-3453
A13R6	0757-0283	6		RESISTOR 2K 1% .125W F TC=0+-100	24546	C4-1/8-10-2001-F
A13R7	0757-0974	2	4	RESISTOR 120K 2% .125W F TC=0+-100	24546	C4-1/8-10-1202-G
A13R8	0811-3453	4		RESISTOR 25 1% 3W PW TC=0+-20	24546	0811-3453
A13R9	0757-0974	2		RESISTOR 120K 2% .125W F TC=0+-100	24546	C4-1/8-10-1202-G
A13R10	0757-0918	4	4	RESISTOR 560 2% .125W F TC=0+-100	24546	C4-1/8-10-561-G
A13R11	0757-0965	1		RESISTOR 51K 2% .125W F TC=0+-100	24546	C4-1/8-10-5102-G
A13R12	0757-0918	4		RESISTOR 560 2% .125W F TC=0+-100	24546	C4-1/8-10-561-G
A13R13	0757-0965	1		RESISTOR 51K 2% .125W F TC=0+-100	24546	C4-1/8-10-5102-G
A13R14	0757-0907	1		RESISTOR 200 2% .125W F TC=0+-100	24546	C4-1/8-10-201-G
A13R15	0757-0974	2		RESISTOR 120K 2% .125W F TC=0+-100	24546	C4-1/8-10-1202-G

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R16	0757-0974	2		RESISTOR 120K 2% .125W F TC0+100	24546	C4-1/8-10-1202-G
A13R17	0811-3453	4		RESISTOR 25 1X 3W PW TC0+20	28480	0811-3453
A13R18	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13R19	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13R20	0811-3453	4		RESISTOR 25 1X 3W PW TC0+20	28480	0811-3453
A13R21	0757-0918	4		RESISTOR 560 2X .125W F TC0+100	24546	C4-1/8-10-561-G
A13R22	0757-0965	1		RESISTOR 51K 2X .125W F TC0+100	24546	C4-1/8-10-5102-G
A13R23	0757-0965	1		RESISTOR 51K 2X .125W F TC0+100	24546	C4-1/8-10-5102-G
A13R24	0757-0918	4		RESISTOR 560 2X .125W F TC0+100	24546	C4-1/8-10-561-G
A13R25	0757-0948	0		RESISTOR 10K 2X .125W F TC0+100	24546	C4-1/8-10-1002-G
A13R26	0757-0948	0		RESISTOR 10K 2X .125W F TC0+100	24546	C4-1/8-10-1002-G
A13R27	0757-0948	0		RESISTOR 10K 2X .125W F TC0+100	24546	C4-1/8-10-1002-G
A13R28	0757-0937	7		RESISTOR 3.6K 2X .125W F TC0+100	24546	C4-1/8-10-3601-G
A13R29	0757-0923	1	4	RESISTOR 910 2X .125W F TC0+100	24546	C4-1/8-10-911-G
A13R31	0757-0923	1		RESISTOR 910 2X .125W F TC0+100	24546	C4-1/8-10-911-G
A13R32	0757-0923	1		RESISTOR 910 2X .125W F TC0+100	24546	C4-1/8-10-911-G
A13R33	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13R34	0757-0955	9		RESISTOR 20K 2X .125W F TC0+100	24546	C4-1/8-10-2002-G
A13R35	0757-0976	4		RESISTOR 150K 2X .125W F TC0+100	24546	C4-1/8-10-1502-G
A13R36	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R37	0757-0976	4		RESISTOR 150K 2X .125W F TC0+100	24546	C4-1/8-10-1502-G
A13R38	0757-0955	9		RESISTOR 20K 2X .125W F TC0+100	24546	C4-1/8-10-2002-G
A13R39	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13R40	0757-0911	7		RESISTOR 300 2X .125W F TC0+100	24546	C4-1/8-10-301-G
A13R41	0757-0937	7		RESISTOR 3.6K 2X .125W F TC0+100	24546	C4-1/8-10-3601-G
A13R42	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R43	0698-3457	6	4	RESISTOR 316K 1X .125W F TC0+100	28480	0698-3457
A13R44	0757-0976	4		RESISTOR 150K 2X .125W F TC0+100	24546	C4-1/8-10-1502-G
A13R45	0698-3457	6		RESISTOR 316K 1X .125W F TC0+100	28480	0698-3457
A13R46	0757-0937	7		RESISTOR 3.6K 2X .125W F TC0+100	24546	C4-1/8-10-3601-G
A13R47	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R48	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R49	0757-0976	4		RESISTOR 150K 2X .125W F TC0+100	24546	C4-1/8-10-1502-G
A13R50	0757-0937	7		RESISTOR 3.6K 2X .125W F TC0+100	24546	C4-1/8-10-3601-G
A13R51	0757-0911	7		RESISTOR 300 2X .125W F TC0+100	24546	C4-1/8-10-301-G
A13R52	0757-0911	7		RESISTOR 300 2X .125W F TC0+100	24546	C4-1/8-10-301-G
A13R53	0757-0923	1		RESISTOR 910 2X .125W F TC0+100	24546	C4-1/8-10-911-G
A13R54	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R55	0698-3457	6		RESISTOR 316K 1X .125W F TC0+100	28480	0698-3457
A13R56	0757-0924	2		RESISTOR 1K 2X .125W F TC0+100	24546	C4-1/8-10-1001-G
A13R57	0698-3457	6		RESISTOR 316K 1X .125W F TC0+100	28480	0698-3457
A13R58	0757-0911	7		RESISTOR 300 2X .125W F TC0+100	24546	C4-1/8-10-301-G
A13R59	0757-0955	9		RESISTOR 20K 2X .125W F TC0+100	24546	C4-1/8-10-2002-G
A13R60	0757-0955	9		RESISTOR 20K 2X .125W F TC0+100	24546	C4-1/8-10-2002-G
A13R61	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13R62	0757-0283	6		RESISTOR 2K 1% .125W F TC0+100	24546	C4-1/8-10-2001-F
A13U1	1826-0311	9	8	OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U2	1820-1619	0	2	IC GATE CMOS EXCL-OR/NOR TPL 3-INP	04713	MC14025UBCP
A13U3	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U4	1820-1618	9	2	IC GATE CMOS NAND TPL 3-INP	04713	MC14023UBCP
A13U5	1820-1620	3	3	IC GATE CMOS NOR QUAD 2-INP	04713	MC14001UBCP
A13U6	1820-1621	4	1	IC GATE CMOS NAND QUAD 2-INP	04713	MC14011UBCP
A13U7	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U8	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U9	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U10	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U11	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U12	1820-1619	0		IC GATE CMOS EXCL-OR/NOR TPL 3-INP	04713	MC14025UBCP
A13U13	1826-0311	9		OP AMP GP 8-DIP-P	04713	MLM201AP1
A13U14	1820-1618	9		IC GATE CMOS NAND TPL 3-INP	04713	MC14023UBCP
A13U15	1820-1620	3		IC GATE CMOS NOR QUAD 2-INP	04713	MC14001UBCP
A13U16	1820-1938	6		IC	28480	1820-1938
A13U17	1820-1938	6		IC	28480	1820-1938
A13U18	1820-1614	5	5	IC, CMOS, 4016R 40	28480	1820-1614
A13U19	1820-1614	5		IC, CMOS, 4016R 40	28480	1820-1614
A13U20	1820-1620	3		IC GATE CMOS NOR QUAD 2-INP	04713	MC14001UBCP
A13U21	1820-1614	5		IC, CMOS, 4016R 40	28480	1820-1614
A13U22	1820-1617	8		IC CMOS DUAL D F-F POS EDGE CLOCK	04713	MC14013BCP
A13U23	1820-1614	5		IC, CMOS, 4016R 40	28480	1820-1614
A13U24	1820-1614	5		IC, CMOS, 4016R 40	28480	1820-1614
A13U25	1820-1938	6		IC	28480	1820-1938
A13U26	1820-1938	6		IC	28480	1820-1938

See introduction to this section for ordering information
*Indicates factory selected value

Model 5045A
Replaceable Parts

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	0340-0579 0360-1682 0570-0125 1480-0116 4040-0710	0 0 9 8 9	1 4 2	INSULATOR RUBBER RED TERMINAL-STUD SGL-TUR PRESS-MTG SCREW-MACH 4-40 .188-IN-LG 80G-HD-SLT PIN-GRV .062-IN-DIA .25-IN-LG STL EXTR-PC BD BLK POLYC .07-80-TMKNS	28480 28480 00000 28480 28480	0340-0579 0360-1682 ORDER BY DESCRIPTION 1480-0116 4040-0710
	2360-0055 05045-20202	1 5	4 1	SCREW-MACH 6-32 .188-IN-LG 80G-HD-SLT HEAT SINK	00000 28480	ORDER BY DESCRIPTION 05045-20202
A14				SAME AS A13, USE PREFIX A14		
A15				SAME AS A13, USE PREFIX A15		
A16				SAME AS A13, USE PREFIX A16		
A17				SAME AS A13, USE PREFIX A17(OPTION 024)		
A18				SAME AS A13, USE PREFIX A18(OPTION 024)		
A19				SAME AS A13, USE PREFIX A19(OPTION 024)		
A20				SAME AS A13, USE PREFIX A20(OPTION 024)		
A21				SAME AS A13, USE PREFIX A21		
A22				SAME AS A13, USE PREFIX A22		
A23				SAME AS A13, USE PREFIX A23		
A24				SAME AS A13, USE PREFIX A24		
A25	09810-66562		1	CARD READER INTERFACE ASSEMBLY THE CARD READER INTERFACE AND THE SENSOR ASSEMBLY ARE AN EXCHANGE ITEM, ORDERED BY PART NUMBER 09810-67969. THE REPLACEMENT PARTS ARE LISTED BELOW FOR REFERENCE ONLY.	28480	09810-66562
A25C1	0160-0226	6	8	CAPACITOR-FXD 22UF +-10% 15VDC TA	56289	1500226X9015B2
A25C2	0160-0226	6	8	CAPACITOR-FXD 22UF +-10% 15VDC TA	56289	1500226X9015B2
A25C3	0160-0128	3	2	CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A25C4	0160-0128	3	2	CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A25C5	0160-0174	9	1	CAPACITOR-FXD .47UF +80-20% 25VDC CER	28480	0160-0174
A25C6	0150-0084	9	3	CAPACITOR-FXD .1UF +80-20% 100VDC CER	28480	0150-0084
A25C7	0150-0084	9	3	CAPACITOR-FXD .1UF +80-20% 100VDC CER	28480	0150-0084
A25C8	0150-0084	9	3	CAPACITOR-FXD .1UF +80-20% 100VDC CER	28480	0150-0084
A25C9	0160-3847	9	4	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C10	0160-0226	6	5	CAPACITOR-FXD 22UF +-10% 15VDC TA	28480	0160-2001
A25C11	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2204
A25C12	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C13	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C14	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C15	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C16	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C17	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C18	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C19	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C20	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C21	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C22	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C23	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C24	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C25	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C26	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C27	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C28	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C29	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C30	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C31	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C32	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C33	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C34	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C35	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C36	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C37	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C38	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C39	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C40	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C41	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C42	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C43	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C44	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C45	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C46	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C47	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C48	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C49	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C50	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C51	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C52	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C53	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C54	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C55	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C56	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C57	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C58	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C59	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C60	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C61	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C62	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C63	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C64	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C65	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C66	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C67	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C68	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C69	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C70	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C71	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C72	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C73	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C74	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C75	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C76	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C77	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C78	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C79	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C80	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C81	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C82	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C83	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C84	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C85	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C86	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C87	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C88	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C89	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C90	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C91	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C92	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C93	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C94	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C95	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C96	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C97	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C98	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C99	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C100	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C101	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C102	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C103	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C104	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C105	0160-3847	9	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A25C106	0160-0226	6	5	CAPACITOR-FXD .01UF +100-0% 50VDC CER	56289	1500226X9015B2
A25C107	0160-2001	5	5	CAPACITOR-FXD 50PF +-1% 500VDC MICA	28480	0160-2001
A25C108	0160-2204	9	5	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A25C109						

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A25R25	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R30	0684-5101	1		RESISTOR 33 10% .25W FC TC=400/+500	01121	CB3301
A25R31	0684-2241	5		RESISTOR 220K 10% .25W FC TC=800/+900	01121	CB2241
A25R32	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R33	0684-4731	2		RESISTOR 47K 10% .25W FC TC=400/+800	01121	CB4731
A25R40	0698-5101	1		RESISTOR 33 10% .25W FC TC=400/+500	01121	CB3301
A25R41	0684-2241	5		RESISTOR 220K 10% .25W FC TC=800/+900	01121	CB2241
A25R42	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R43	0684-4731	2		RESISTOR 47K 10% .25W FC TC=400/+800	01121	CB4731
A25R44	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CB1041
A25R45	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R46	0684-3331	6	1	RESISTOR 33K 10% .25W FC TC=400/+800	01121	CB3331
A25R47	0684-2231	3		RESISTOR 22K 10% .25W FC TC=400/+700	01121	CB2231
A25R48	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R49	0684-2231	3		RESISTOR 22K 10% .25W FC TC=400/+700	01121	CB2231
A25R50	0684-4721	0	4	RESISTOR 4.7K 10% .25W FC TC=400/+700	01121	CB4721
A25R101	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R102	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R103	0684-2721	6	4	RESISTOR 2.7K 10% .25W FC TC=400/+700	01121	CB2721
A25R104	0684-1221	9	4	RESISTOR 1.2K 10% .25W FC TC=400/+700	01121	CB1221
A25R106	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R107	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R108	0698-4519	3	4	RESISTOR 140K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1403-F
A25R109	0698-4500	2	4	RESISTOR 57.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=5762-F
A25R110	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R111	0757-0453	2	4	RESISTOR 30.1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=3012-F
A25R112	0757-0280	1		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R113	0684-1051	3	7	RESISTOR 1M 10% .25W FC TC=800/+900	01121	CB1051
A25R114	0698-4211	2	4	RESISTOR 158K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1583-F
A25R115	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CB1041
A25R116	0698-4509	1	4	RESISTOR 80.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=8062-F
A25R117	0698-4505	7		RESISTOR 71.5K 1% .125W F TC=0/+100	24546	C4=1/8-TU=7152-F
A25R118	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	01121	CB1051
A25R119	0684-2231	3		RESISTOR 22K 10% .25W FC TC=400/+700	01121	CB2231
A25R120	0684-4731	2		RESISTOR 47K 10% .25W FC TC=400/+800	01121	CB4731
A25R121	0684-4721	0		RESISTOR 4.7K 10% .25W FC TC=400/+700	01121	CB4721
A25R123	0684-1021	7		RESISTOR 1K 10% .25W FC TC=400/+600	01121	CB1021
A25R201	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R202	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R203	0684-2721	6		RESISTOR 2.7K 10% .25W FC TC=400/+700	01121	CB2721
A25R204	0684-1221	9		RESISTOR 1.2K 10% .25W FC TC=400/+700	01121	CB1221
A25R206	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R207	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R208	0698-4519	3		RESISTOR 140K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1403-F
A25R209	0698-4500	2		RESISTOR 57.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=5762-F
A25R210	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R211	0757-0453	2		RESISTOR 30.1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=3012-F
A25R212	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	01121	CB1051
A25R213	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	24546	C4=1/8-TU=1583-F
A25R214	0698-4211	2		RESISTOR 158K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1583-F
A25R215	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CB1041
A25R216	0698-4509	1		RESISTOR 80.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=8062-F
A25R217	0698-4505	7		RESISTOR 71.5K 1% .125W F TC=0/+100	24546	C4=1/8-TU=7152-F
A25R218	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	01121	CB1051
A25R219	0684-2231	3		RESISTOR 22K 10% .25W FC TC=400/+700	01121	CB2231
A25R220	0684-4731	2		RESISTOR 47K 10% .25W FC TC=400/+800	01121	CB4731
A25R221	0684-4721	0		RESISTOR 4.7K 10% .25W FC TC=400/+700	01121	CB4721
A25R223	0684-1021	7		RESISTOR 1K 10% .25W FC TC=400/+600	01121	CB1021
A25R301	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R302	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CB1031
A25R303	0684-2721	6		RESISTOR 2.7K 10% .25W FC TC=400/+700	01121	CB2721
A25R304	0684-1221	9		RESISTOR 1.2K 10% .25W FC TC=400/+700	01121	CB1221
A25R306	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R307	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R308	0698-4519	3		RESISTOR 140K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1403-F
A25R309	0698-4500	2		RESISTOR 57.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=5762-F
A25R310	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=1001-F
A25R311	0757-0453	2		RESISTOR 30.1K 1% .125W F TC=0/+100	24546	C4=1/8-TU=3012-F
A25R312	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	01121	CB1051
A25R313	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	24546	C4=1/8-TU=1583-F
A25R314	0698-4211	2		RESISTOR 158K 1% .125W F TC=0/+100	01121	CB1041
A25R315	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	24546	C4=1/8-TU=8062-F
A25R316	0698-4509	7		RESISTOR 80.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU=7152-F
A25R317	0698-4505	1		RESISTOR 71.5K 1% .125W F TC=0/+100	01121	CB1051
A25R318	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	01121	CB1051

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A25R319	0684-2231	3		RESISTOR 22K 10% .25W FC TC=400/+800	01121	CH2231
A25R320	0684-4731	2		RESISTOR 47K 10% .25W FC TC=400/+800	01121	CH4731
A25R321	0684-4721	0		RESISTOR 47K 10% .25W FC TC=400/+700	01121	CH4721
A25R323	0684-1021	7		RESISTOR 1K 10% .25W FC TC=400/+600	01121	CH1021
A25R401	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CH1031
A25R402	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CH1031
A25R403	0684-2721	6		RESISTOR 27K 10% .25W FC TC=400/+700	01121	CH2721
A25R404	0684-1221	9		RESISTOR 1.2K 10% .25W FC TC=400/+700	01121	CH1221
A25R406	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1001-F
A25R407	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1001-F
A25R408	0698-4519	3		RESISTOR 140K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1403-F
A25R409	0698-4500	2		RESISTOR 57.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU-5762-F
A25R410	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1001-F
A25R411	0757-0453	2		RESISTOR 30.1K 1% .125W F TC=0/+100	24546	C4=1/8-TU-3012-F
A25R412	0757-0280	3		RESISTOR 1K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1001-F
A25R414	0698-4211	2		RESISTOR 158K 1% .125W F TC=0/+100	24546	C4=1/8-TU-1583-F
A25R415	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CH1041
A25R416	0698-4509	1		RESISTOR 80.6K 1% .125W F TC=0/+100	24546	C4=1/8-TU-8062-F
A25R417	0698-4505	7		RESISTOR 71.5K 1% .125W F TC=0/+100	24546	C4=1/8-TU-7152-F
A25R418	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CH1031
A25R418	0684-1051	3		RESISTOR 1M 10% .25W FC TC=800/+900	01121	CH1051
A25R419	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CH1041
A25R420	0684-1021	7		RESISTOR 1K 10% .25W FC TC=400/+600	01121	CH1021
A25R421	0684-1041	1		RESISTOR 100K 10% .25W FC TC=400/+800	01121	CH1041
A25R422	0684-1031	9		RESISTOR 10K 10% .25W FC TC=400/+700	01121	CH1031
A25R423	0684-1021	7		RESISTOR 1K 10% .25W FC TC=400/+600	01121	CH1021
A25U1	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A25U2	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A25U3	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A25U4	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A25U5	1820-0175	1	1	IC INV TTL HEX 1-INP	01295	SN7405N
A25U6	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A25U7	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A25U100	1820-0203	6	4	OP AMP GP TO-99	01928	CA741CT
A25U200	1820-0203	6		OP AMP GP TO-99	01928	CA741CT
A25U300	1820-0203	6		OP AMP GP TO-99	01928	CA741CT
A25U400	1820-0203	6		OP AMP GP TO-99	01928	CA741CT
	1251-1636	4	1	MISCELLANEOUS PARTS	28480	1251-1636
	4040-0750	7		CONNECTOR-SGL CONT SKT .04-IN-8SC-3Z RND	28480	4040-0750
A25Z4	09820-24761	6	1	EXTR-PC BD RED POLYC .062-RD-TMKNS SPACER, CAPTIVE	28480	09820-24761
A26	05045-60015	2		CARD READER/PRINTER INTERFACE ASSEMBLY (SERIES 1852)	28480	05045-60015
A26C1	0180-0291	3	1	CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A26C2	0180-0373	2	1	CAPACITOR-FXD .68UF+-10% 35VDC TA	56289	150D684X9035A2
A26C3	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	150D335X0015A2
A26C4	0180-0195	6	3	CAPACITOR-FXD .33UF+-20% 35VDC TA	56289	150D334X0035A2
A26C5	0180-0195	6		CAPACITOR-FXD .33UF+-20% 35VDC TA	56289	150D334X0035A2
A26C6	0180-0195	6		CAPACITOR-FXD .33UF+-20% 35VDC TA	56289	150D334X0035A2
A26C7	0180-0210	6		CAPACITOR-FXD 3.3UF+-20% 15VDC TA	56289	150D335X0015A2
A26CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A26CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A26CR3	1901-0029	6	1	DIODE-PWR RECT 600V 750MA DO-29	28480	1901-0029
A26CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A26CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A26CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A26CR7	1902-0644	3	1	DIODE-ZNR 1N5363B 30V 5% PDW5W TC=+29HV	28480	1902-0644
A26J1	1251-3025	9	1	CONNECTOR 34-PIN M RECTANGULAR	28480	1251-3025
A26Q1	1853-0318	3	1	TRANSISTOR PNP SI PD=500MW FT=60MHZ	04713	MPS6502
A26Q2	1854-0449	3	1	TRANSISTOR NPN SI TC=39 PD=5W FT=1MHZ	28480	1854-0449
A26Q3	1853-0058	8	4	TRANSISTOR PNP SI PD=300MW FT=200MHZ	07263	S32248
A26Q4	1853-0058	8		TRANSISTOR PNP SI PD=300MW FT=200MHZ	07263	S32248
A26Q5	1853-0058	8		TRANSISTOR PNP SI PD=300MW FT=200MHZ	07263	S32248
A26Q6	1853-0058	8		TRANSISTOR PNP SI PD=300MW FT=200MHZ	07263	S32248
A26R1	0757-0941	3		RESISTOR 5.1K 2% .125W F TC=0/+100	24546	C4=1/8-TU-5101-G
A26R2	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A26R3	0757-0970	8	1	RESISTOR 82K 2% .125W F TC=0/+100	24546	C4=1/8-TU-8202-G
A26R4	0757-0960	6	1	RESISTOR 33K 2% .125W F TC=0/+100	24546	C4=1/8-TU-3302-G
A26R5				NOT ASSIGNED		
A26R6	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A26R7	1810-0041	9		NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	28480	1810-0041
A26R8	0757-0897	8	1	RESISTOR 75 2% .125W F TC=0/+100	24546	C4=1/8-TU-75K0-G
A26R9	0757-0900	4		RESISTOR 100 2% .125W F TC=0/+100	24546	C4=1/8-TU-101-G
A26R10	0811-2822	9	1	RESISTOR 6.8 5% .75W PH TC=0/+50	91637	RS1/2-T2-68K0-J

See introduction to this section for ordering information
*Indicates factory selected value

Model 5045A
Replaceable Parts

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A26R11	0757-0893	4	0	RESISTOR 51 2% .125W F TC00+-100	24546	C4=1/8-T0=51R0-G
A26R12	0757-0924	2		RESISTOR 1K 2% .125W F TC00+-100	24546	C4=1/8-T0=1001-G
A26R13	0757-0930	2		RESISTOR 1.8K 2% .125W F TC00+-100	24546	C4=1/8-T0=1801-G
A26R14	0757-0924	2		RESISTOR 1K 2% .125W F TC00+-100	24546	C4=1/8-T0=1001-G
A26R15	0686-2015	5		RESISTOR 200 5% .5W CC TC00+529	01121	EB2015
A26R16	0686-2015	5	RESISTOR 200 5% .5W CC TC00+529	01121	EB2015	
A26R17	0686-2015	5	RESISTOR 200 5% .5W CC TC00+529	01121	EB2015	
A26R18	0757-0930	0	RESISTOR 1.8K 2% .125W F TC00+-100	24546	C4=1/8-T0=1801-G	
A26R19	0757-0924	2	RESISTOR 1K 2% .125W F TC00+-100	24546	C4=1/8-T0=1001-G	
A26R20						
A26R21	2100-2517	4	1	RESISTOR-TRMR 50K 10% C SIDE=ADJ 1-TRN	30983	ET50X503
A26R22	0757-0924	2		RESISTOR 1K 2% .125W F TC00+-100	24546	C4=1/8-T0=1001-G
A26R23	0757-0930	0		RESISTOR 1.8K 2% .125W F TC00+-100	24546	C4=1/8-T0=1801-G
A26R24	0757-0930	0		RESISTOR 1.8K 2% .125W F TC00+-100	24546	C4=1/8-T0=1801-G
A26R25	0757-0932	2		RESISTOR 2.2K 2% .125W F TC00+-100	24546	C4=1/8-T0=2201-G
A26R26	0757-0965	1		RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G
A26TP1	0360-0124	3	2	CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	28480	0360-0124
A26TP2	0360-0124	3		CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND	28480	0360-0124
A26U1	1820-0077	2	2	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A26U2	1820-0730	4		IC MV TTL L MONOSTBL RETRIG/RESET DUAL	07263	96L020C
A26U3	1820-0294	5		IC SHF-RGTR TTL SERIAL-IN PRL-OUT 8-BIT	07263	74164PC
A26U4	1818-2103	4		IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	28480	1818-2103
A26U5	1820-0368	4		IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A26U6	1820-0716	6		IC CNTR TTL BIN SYNCHRO POS-EDGE-TRIG	01295	SN74151N
A26U7	1820-0730	4		IC MV TTL L MONOSTBL RETRIG/RESET DUAL	07263	96L020C
A26U8	1820-0294	5		IC SHF-RGTR TTL SERIAL-IN PRL-OUT 8-BIT	07263	74164PC
A26U9	1820-0368	4		IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A26U10	1820-0077	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A26U11	1820-1017	2	1	IC DCDR TTL L 2-T0-4-LINE DUAL 2-INP	07263	93L21PC
A26U12	1820-0368	4		IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7496N
A26U13	1820-0661	0		IC GATE TTL OR QUAD 2-INP	01295	SN7432N
A26U14	1820-0654	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A26U15	1820-0668	7		IC BFR TTL NON-INV HEX 1-INP	01295	SN7407N
A26U16	1820-0368	4	IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7496N	
A26U17	1820-0174	0	IC INV TTL HEX	01295	SN7404N	
A26U18	1820-0367	3	IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7495AN	
A26U19	1820-0368	4	IC SHF-RGTR TTL R=8 PRL-IN PRL-OUT 5-BIT	01295	SN7496N	
A26U20						
	1205-0011	0	1	HEAT SINK T0=5/T0=39-CS	28480	1205-0011
	1480-0116	8		PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
	4040-0752	9		EXTR-PC 8D YEL POLYC .062-8D-THKNS	28480	4040-0752
A27	05045-60021	0	1	BOARD ASSEMBLY, FRONT PANEL SWITCH (SERIES 1712)	28480	05045-60021
A27C1	0160-0161	4	3	CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A27C2	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020A2
A27C3	0160-0161	4		CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A27C4	0160-0161	4		CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A27C5	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A27C6	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A27C7	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A27C8	0180-0116	1		CAPACITOR-FXD 6.8UF+-10% 15VDC TA	56289	150D685X9035B2
A27R1	0757-0965	1		RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G
A27R2	0757-0965	1		RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G
A27R3	0757-0965	1	RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G	
A27R4	0757-0965	1	RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G	
A27R5	1810-0132	9	NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	91637	CSP09C-07-501J	
A27R6	1810-0132	9	NETWORK-RES 9-PIN-SIP .15-PIN-SPCG	91637	CSP09C-07-501J	
A27R7	0757-0941	3	RESISTOR 5.1K 2% .125W F TC00+-100	24546	C4=1/8-T0=5101-G	
A27R8	0757-0965	1	RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G	
A27R9	0757-0965	1	RESISTOR 51K 2% .125W F TC00+-100	24546	C4=1/8-T0=5102-G	
A27R10	0757-0911	7	RESISTOR 300 2% .125W F TC00+-100	24546	C4=1/8-T0=301-G	
A27S1	3101-1916	8	5	SWITCH-PB SPDT MOM .1A	28480	3101-1916
A27S2	3101-0647	0		SWITCH-PB SPDT MOM 1A 120VAC	28480	3101-0647
A27S3	3101-1916	8		SWITCH-PB SPDT MOM .1A	28480	3101-1916
A27S4	3101-1917	9		SWITCH-TGL SUBMIN SPDT .02A 20VAC/DC PC	28480	3101-1917
A27S5	3101-1915	7		SWITCH-TGL SUBMIN SPDT .02A 20VAC/DC PC	28480	3101-1915
A27S6	3101-1916	8	1	SWITCH-PB SPDT MOM .1A	28480	3101-1916
A27S7	3101-0647	0		SWITCH-PB SPDT MOM 1A 120VAC	28480	3101-0647
A27S8	3101-1916	8		SWITCH-PB SPDT MOM .1A	28480	3101-1916
A27S9	3101-1917	9		SWITCH-TGL SUBMIN SPDT .02A 20VAC/DC PC	28480	3101-1917
A27S10	3101-1915	9		SWITCH-TGL SUBMIN SPDT .02A 20VAC/DC PC	28480	3101-1915

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A27011	3101-1916	8		SWITCH-PB SPDT MOM .1A	28480	3101-1916
A27U1	1820-0579	9	3	IC MV TTL MONOSTBL RETRIG DUAL	01295	SN74123N
A27U2	1820-0579	9		IC MV TTL MONOSTBL RETRIG DUAL	01295	SN74123N
A27U3	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A27U4	1820-0579	9		IC MV TTL MONOSTBL RETRIG DUAL	01295	SN74123N
A27U5	1820-0511	9		IC GATE TTL AND QUAD 2-INP	01295	SN7408N
A27U6	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74N
A27U7	1820-1056	9		IC SCHMITT-TRIG TTL NAND QUAD 2-INP	01295	SN74132N
A27U8	1820-0328	6		IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A27U9	1820-1433	6		IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A27U10	1820-0054	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A27U11	1820-1002	3		IC SHF-RGTR TTL R-S PRL-IN SERIAL-OUT	01295	SN74165N
A27U12	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74N
A27U13	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74N
	0380-0771	8	4	STANDOFF-RVT-0N .625-INxLG 6-32TMD	28480	0380-0771
A28	05045-60017	4	1	BOARD ASSEMBLY, SOCKET DRIVER (SERIES 1916)	28480	05045-60017
A28C1	0160-3876	4	24	CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C2	0160-0575	4	25	CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C3	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C4	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C5	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C6	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C7	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C8	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C9	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C10	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C11	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C12	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C13	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C14	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C15	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C16	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C17	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C18	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C19	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C20	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C21	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C22	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C23	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C24	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C25	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C26	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C27	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C28	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C29	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C30	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C31	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C32	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C33	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C34	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C35	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C36	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C37	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C38	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C39	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C40	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C41	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C42	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C43	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C44	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C45	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C46	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28C47	0160-3876	4		CAPACITOR-FXD 47PF +-20% 200VDC CER	28480	0160-3876
A28C48	0160-0575	4		CAPACITOR-FXD .047UF +-20% 50VDC CER	28480	0160-0575
A28CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DD-35	28480	1901-0040
A28CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DD-35	28480	1901-0040
A28CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DD-35	28480	1901-0040
A28CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DD-35	28480	1901-0040
A28CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DD-35	28480	1901-0040

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A28CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR7	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR8	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR9	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR11	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR12	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR13	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR14	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR15	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR16	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR17	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR18	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR19	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR20	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR21	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR22	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR23	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28CR24	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A28L1	9100-2247	4	1	COIL-MLD 100MH 10X Q#34 .095DX.25LG-NOM	28480	9100-2247
A28L2	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L3	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L4	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L5	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L6	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L7	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L8	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L9	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L10	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L11	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28L12	9140-0144	0		COIL-MLD 4.7UH 10X Q#45 .095DX.25LG-NOM	28480	9140-0144
A28P2	1251-3283	1	2	CONNECTOR 24-PIN F MICRO RIBBON	28480	1251-3283
A28P4	1251-0101	6	1	CONNECTOR 50-PIN F MICRO RIBBON	28480	1251-0101
A28Q1	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q2	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q3	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q4	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q5	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q6	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q7	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q8	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q9	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q10	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q11	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q12	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q13	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q14	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q15	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q16	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q17	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q18	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q19	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q20	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q21	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q22	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28Q23	1853-0020	4		TRANSISTOR PNP SI PD=300MH FT=150MHZ	28480	1853-0020
A28Q24	1854-0071	7		TRANSISTOR NPN SI PD=300MH FT=200MHZ	28480	1854-0071
A28R1	0683-1055	5	24	RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R2	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R3	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	24546	C4-1/8-T0-511-G
A28R4	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R5	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R6	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	24546	C4-1/8-T0-511-G
A28R7	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R8	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	24546	C4-1/8-T0-511-G
A28R9	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	01121	CB1055
A28R10	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R11	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	24546	C4-1/8-T0-511-G
A28R12	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	01121	CB1055
A28R13	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R14	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R15	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R16	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	24546	C4-1/8-T0-511-G
A28R17	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	24546	C4-1/8-T0-511-G
A28R18	0757-0917	3		RESISTOR 510 2X .125W F TC=0/+100	01121	CB1055
A28R19	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055
A28R20	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	CB1055

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2BR21	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR22	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR23	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR24	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR25	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR26	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR27	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR28	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR29	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR30	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR31	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR32	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR33	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR34	0683-1055	5		RESISTOR 1M 5X .25W FC TC=800/+900	01121	C81055
A2BR35	1810-0030	6		NETWORK RES 6-PIN-SIP .125-PIN-SPCG	28480	1810-0030
A2BR36	0683-5125	8	12	RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR37	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR38	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR39	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR40	0757-0917	3		RESISTOR 510 2X .125W F TC=0+100	24546	C4-1/8-TU-511-G
A2BR41	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR42	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR43	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR44	1810-0030	6		NETWORK RES 6-PIN-SIP .125-PIN-SPCG	28480	1810-0030
A2BR45	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR46	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR47	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR48	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR49	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR50	0683-5125	8		RESISTOR 5.1K 5X .25W FC TC=400/+700	01121	C85125
A2BR51	0757-0924	2		RESISTOR 1K 2X .125W F TC=0+100	24546	C4-1/8-TU-1001-G
A2BU1	1820-0367	3		IC 9HF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A2BU2	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A2BU3	1820-0471	0		IC INV TTL HEX 1-INP	01295	SN7406N
A2BU4	1820-0788	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR HEX	01295	SN74174N
A2BU5	1820-0788	2		IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR HEX	01295	SN74174N
A2BU6	1820-0367	3	2	IC 9HF-RGTR TTL R-S PRL-IN PRL-OUT 4-BIT	01295	SN7495AN
A2BU7	1820-0903	3		IC 9HF-RGTR TTL L R-S SERIAL-IN PRL-OUT	01295	SN74L164N
A2BU8	1820-0903	3		IC 9HF-RGTR TTL L R-S SERIAL-IN PRL-OUT	01295	SN74L164N
A29				SAME AS A28, USE PREFIX A29		
A30	05045-60019	6	1	BOARD ASSEMBLY, SOCKET (SERIES 1520)	28480	05045-60019
A30C1	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C2	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C3	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C4	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C5	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C6	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C7	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C8	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C9	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C10	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C11	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C12	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C13	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C14	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C15	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C16	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C17	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C18	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C19	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C20	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C21	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C22	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C23	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C24	0160-3877	5		CAPACITOR-FXD 100PF +-20% 200VDC CER	28480	0160-3877
A30C25	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A30C26	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A30C27	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A30C28	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C	D	Qty	Description	Mfr Code	Mfr Part Number
A30J1	1200-0610 1200-0850	5	5	1	SOCKET-IC-TS 24-CONT (BASE) DIP-SLDR SOCKET, TEST 24-PIN	28480 28480	1200-0610 1200-0850
A30K1	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K2	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K3	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K4	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K5	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K6	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K7	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K8	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K9	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K10	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K11	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30K12	0490-1079	4	4		RELAY-REED 1A 500MA 100VDC 5VDC-COIL	28480	0490-1079
A30L1	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L2	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L3	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L4	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L5	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L6	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L7	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L8	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L9	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L10	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L11	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L12	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L13	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L14	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L15	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L16	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L17	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L18	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L19	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L20	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L21	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L22	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L23	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30L24	9100-1791	1	1		COIL 290NH 20% .23DX.375LG-NOM	28480	9100-1791
A30R1	0698-8369	9	9		RESISTOR 2.7 5% .125W CC TC=120/+400	01121	8827G5
A30R2	0698-8369	9	9		RESISTOR 2.7 5% .125W CC TC=120/+400	01121	8827G5
A30R3	0698-8369	9	9		RESISTOR 2.7 5% .125W CC TC=120/+400	01121	8827G5
A30TP1	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP2	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP3	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP4	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP5	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP6	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP7	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP8	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP9	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP10	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP11	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP12	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP13	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP14	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP15	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP16	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP17	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP18	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP19	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP20	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP21	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP22	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP23	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP24	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
A30TP25	0360-0077	5	5		TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480	0360-0077
	0380-0745	6	4		STANDOFF-RVT-ON .187-IN-LG 5-32THD	00000	ORDER BY DESCRIPTION

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A31	05045-60020	9	1	BOARD ASSEMBLY, TEST HD INT	28480	05045-60020
A31XA28	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A31XA29	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A31XA30A	1251-0472	4	1	CONNECTOR-PC EDGE 6-CUNT/ROW 2-ROWS	28480	1251-0472
A32	05045-60016	3	1	BOARD ASSEMBLY, MOTHER INTERFACE	28480	05045-60016
A32C1	0100-0160	5	1	CAPACITOR-FXD 22UF±20% 35VDC TA	56289	1500220X0035N2
A32R1	0757-0941	3		RESISTOR 5.1K 2% .125W F TC0±100	24546	C4=1/8-T0-5101-6
A32XA25	1251-2035	9	1	CONNECTOR-PC EDGE 15-CUNT/ROW 2-ROWS	28480	1251-2035
A32XA26	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33	05045-60014	1	1	BOARD ASSEMBLY, MAIN MOTHER (SERIES 1628)	28480	05045-60014
A33C1	0100-0161	6		CAPACITOR-FXD 3.3UF±10% 35VDC TA	00908	T110B335K035A8
A33C2	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C3	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C4	0100-0161	6		CAPACITOR-FXD 3.3UF±10% 35VDC TA	00908	T110B335K035A8
A33C5	0100-1746	5		CAPACITOR-FXD 15UF±10% 20VDC TA	56289	1500156X9020B2
A33C6	0100-0161	6		CAPACITOR-FXD 3.3UF±10% 35VDC TA	00908	T110B335K035A8
A33C7	0100-0161	6		CAPACITOR-FXD 3.3UF±10% 35VDC TA	00908	T110B335K035A8
A33C8	0100-1746	5		CAPACITOR-FXD 15UF±10% 20VDC TA	56289	1500156X9020B2
A33C9	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C10	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C11	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C12	0100-0161	6		CAPACITOR-FXD 3.3UF±10% 35VDC TA	00908	T110B335K035A8
A33C13	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C14	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C15	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C16	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33C17	0100-0127	2		CAPACITOR-FXD 1UF ±20% 25VDC CER	28480	0100-0127
A33R1	0757-0346	2	1	RESISTOR 10 1% .125W F TC0±100	24546	C4=1/8-T0-5101-6
A33XA4	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA5	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA6	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA7	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA8	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA9	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA10	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA11	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA12	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA13	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA14	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA15	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA16	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA17	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA18	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA19	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA20	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA21	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA22	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA23	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
A33XA24	1251-1365	6		CONNECTOR-PC EDGE 22-CUNT/ROW 2-ROWS	28480	1251-1365
	1251-1115	4	15	POLARIZING KEY-PC EDGE CONN	28480	1251-1115
A34	05150-60011	6	1	PRINTER MECHANICAL ASSEMBLY	28480	05150-60011
A34A1	5080-9051	4	1	PRINT HEAD	28480	5080-9051
A34L1	9100-3515	1	1	PAPER ADV CUIL	28480	9100-3515
A35	09810-67962	7	1	SENSOR ASSEMBLY (ORDERED AS PART OF A25)	28480	09810-67962
A35C1000	1901-0050	3		DIODE-SWITCHING 80V 200MA 2MS D0-35	28480	1901-0050
A350811	2140-0092	0	4	LAMP-INCAND 685 5VDC 60MA T-1-BULB	0000J	685 TIP END
A350821	2140-0092	0		LAMP-INCAND 685 5VDC 60MA T-1-BULB	0000J	685 TIP END
A350831	2140-0092	0		LAMP-INCAND 685 5VDC 60MA T-1-BULB	0000J	685 TIP END
A350841	2140-0092	0		LAMP-INCAND 685 5VDC 60MA T-1-BULB	0000J	685 TIP END

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A35M1	09820-29761	6	1	MOTOR ASSEMBLY	28480	09820-29761
A35Q10	1990-0306	9	4	PHOTOTRANSISTOR VAX#40V ID#100NA	28480	1990-0306
A35Q20	1990-0306	9		PHOTOTRANSISTOR VAX#40V ID#100NA	28480	1990-0306
A35Q30	1990-0306	9		PHOTOTRANSISTOR VAX#40V ID#100NA	28480	1990-0306
A35Q40	1990-0306	9		PHOTOTRANSISTOR VAX#40V ID#100NA	28480	1990-0306
				MISCELLANEOUS PARTS		
	1450-0153	0	1	LAMPHOLDER MDGT-SC-FLG-SKT TUR-TERM	28480	1450-0153
	09810-23301	6	1	LAMP, RETAINER	28480	09810-23301
	09810-25701	4	1	NUT, RETAINING	28480	09810-25701
	09810-26564	9	1	PC BOARD, SENSOR MOUNTING	28480	09810-26564
A36	05045-60041	4	1	BOARD ASSEMBLY, ONE SHUT (SERIES 1748)	28480	05045-60041
A36C1	0160-3762	7	2	CAPACITOR-FXD .68UF +-5% 50VDC MET-POLYC	28480	0160-3762
A36C2	0160-3762	7		CAPACITOR-FXD .68UF +-5% 50VDC MET-POLYC	28480	0160-3762
A36J1	1200-0659	6	1	SOCKET TEST 20-PIN	28480	1200-0651
A36P1	1200-0557	9		SOCKET-IC 20-CONT DIP DIP-SLOW (BASE)	19613	220-0334-00-0602
A36P2	1251-4259	3	1	CONNECTOR-SGL CONT PIN .031-IN-BSC-SZ	28480	1251-4259
A36R1	0757-0449	6	2	RESISTOR 20K 1% .125W F TC#0+-100	24546	C4=1/8-TU=2002-F
A36R2	0757-0449	6		RESISTOR 20K 1% .125W F TC#0+-100	24546	C4=1/8-TU=2002-F
A36S1	3101-1841	1		SWITCH-SL 5-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1841
A36S2	3101-1841	8	3	SWITCH-SL 4-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1841
A36S3	3101-1841	8		SWITCH-SL 4-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1841
A36S4	3101-1841	8		SWITCH-SL 4-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1841
A37	05045-60043	6	1	STATIC PROTECTION BOARD (SERIES 1916)	28480	05045-60043
A37C1	0160-4557	0	2	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4557
A37C2	0160-4557	0		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4557
A37C3	0180-0228	6		CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	1500226X901582
A37C4	0180-0228	6		CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	1500226X901582
A37CR1- A37CR192	1901-0050	3		DIODE-SWITCHING 60V 200MA 2NS DO-35	28480	1901-0050
A37P1	1251-2658	2	1	CONNECTOR-PC EDGE 50-CONT/ROW 2-ROWS	28480	1251-2658
A38	05045-60037	8	1	BOARD ASSEMBLY, HP-IB INTERFACE (SERIES 1712)	28480	05045-60037
A38CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A38J1	1200-0433	0	1	SOCKET-IC 24-CONT	28480	1200-0433
A38J3	1251-3293	1		CONNECTOR 24-PIN F MICRORIBBON	28480	1251-3293
A38R1	1810-0136	3	2	NETWORK-PRES 10-PIN-SIP .1-PIN-SPCG	28480	1810-0136
A38R2	1810-0136	3		NETWORK-PRES 10-PIN-SIP .1-PIN-SPCG	28480	1810-0136
				PRECISION RESISTOR PACK BOARD (06045-60042)		
	0698-6362	24		RESISTOR 1K 0.1% .125W		0698-6362
	1251-4364	2		CONNECTOR 12-PIN HEADER		1251-4364
	1400-0995	1		CABLE GRABBER		1400-0995

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
CHASSIS PARTS						
A1						
B1	3160-0287	8	2	FAN-TBAX 45-CFM 115V 50/60-HZ 1.5-THK	28480	3160-0287
B2	3160-0287	8		FAN-TBAX 45-CFM 115V 50/60-HZ 1.5-THK	28480	3160-0287
C1	0150-0119	1	1	CAPACITOR-FXD .01UF/.01UF +-20%	28480	0150-0119
C1	0180-2179	0	1	CAPACITOR-FXD 4600UF+75-10% 15VDC AL (PART OF J1)	00853	5004620015AA2A
C2	0180-0580	3	2	CAPACITOR-FXD .04F+75-10% 15VDC AL	56289	60204030015BE2A
C3	0180-0580	3		CAPACITOR-FXD .04F+75-10% 15VDC AL	56289	60204030015BE2A
C4	0180-2277	9	2	CAPACITOR-FXD 8200UF+75-10% 25VDC AL	56289	3608226025AC2A
C5	0180-2277	9		CAPACITOR-FXD 8200UF+75-10% 25VDC AL	56289	3608226025AC2A
C6	0180-0579	0	2	CAPACITOR-FXD 7200UF+75-10% 30VDC AL	00853	5007220030AD2A
C7	0180-0579	0		CAPACITOR-FXD 7200UF+75-10% 30VDC AL	00853	5007220030AD2A
C8	0180-0577	8	1	CAPACITOR-FXD .028F+75-10% 40VDC AL	00853	5002830040CE2A
C9	0160-3094	8	4	CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
C10	0160-3094	8		CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
C11	0160-3094	8		CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
C12	0160-3094	8		CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
C13	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
CR1	1902-0986	1	1	DIODE-FW BRDG 100V 30A VF DIFF#1.1MV	04713	M0A990-2
CR2	1902-0986	6	2	DIODE-ZNR 9.1V 5% PDR1W IR#1UA	04713	1N5632A#1
CR3	1902-0986	6		DIODE-ZNR 9.1V 5% PDR1W IR#1UA	04713	1N5632A#1
D81	2140-0025	9	5	LAMP-INCAND 327 28VDC 40MA T-1-3/4-BULB	28480	2140-0025
D82	2140-0025	9		LAMP-INCAND 327 28VDC 40MA T-1-3/4-BULB	28480	2140-0025
D83	2140-0025	9		LAMP-INCAND 327 28VDC 40MA T-1-3/4-BULB	28480	2140-0025
D84	2140-0025	9		LAMP-INCAND 327 28VDC 40MA T-1-3/4-BULB	28480	2140-0025
D85	2140-0025	9		LAMP-INCAND 327 28VDC 40MA T-1-3/4-BULB	28480	2140-0025
F1	2110-0381	7	1	FUSE 1A 250V SLO-BLO 1.25X.25 UL (PART OF J1)	28480	2110-0381
F1	2110-0304	4	1	FUSE 1.5A 250V SLO-BLO 1.25X.25 UL (PART OF J1)	28480	2110-0304
F2	2110-0054	1	2	FUSE 15A 250V MDM-BLO 1.25X.25 UL	28480	2110-0054
F3	2110-0054	1		FUSE 15A 250V MDM-BLO 1.25X.25 UL	28480	2110-0054
J1	0960-0444	2	1	POWER MODULE, UNFILTERED	28480	0960-0444
L1	9140-0136	0	2	COIL-MLD 22UH 10% Q#50 .281DX.938LG-NOM (PART OF J1)	28480	9140-0136
L2	9140-0136	0		COIL-MLD 22UH 10% Q#50 .281DX.938LG-NOM (PART OF J1)	28480	9140-0136
MP1	5040-7219	8	2	STRAP, HANDLE, CAP-FRONT	28480	5040-7219
MP2	5040-7220	1	2	STRAP, HANDLE, CAP-REAR	28480	5040-7220
MP3	5060-9805	4	2		28480	5060-9805
MP4	05045-00023	6	2	COVER, SIDE	28480	05045-00023
MP5	5040-7201	8	4	FOOT(STANDARD)	28480	5040-7201
MP6	5001-0440	1	1	TRIM, SIDE	28480	5001-0440
MP7	5040-7202	9	1	TRIM, TOP	28480	5040-7202
MP8	5060-9848	5	1		28480	5060-9848
MP9	5060-9836	1	1		28480	5060-9836
MP10	05045-20201	4	1	PANEL, FRONT EXTRACTOR	28480	05045-20201
MP11	3131-0367	4	1	CAP, SWITCH, LOAD	28480	3131-0367
MP12	3131-0369	6	1	CAP, SWITCH, PASS	28480	3131-0369
MP13	3131-0370	9	1	CAP, SWITCH, CONT	28480	3131-0370
MP14	3131-0371	0	1	CAP, SWITCH, FAIL	28480	3131-0371
MP15	3131-0368	5	1	CAP, SWITCH, TEST	28480	3131-0368
MP16	05045-00016	7	1	SUB-PANEL, CONTROLS	28480	05045-00016
MP17	05045-60112	0	1	ODDR ASSY, PRINTER	28480	05045-60112
MP18	05045-20205	8	1	PIN, HINGE C.D.	28480	05045-20205
MP19	05045-60111	9	1	ODDR ASSY, CONTROL	28480	05045-60111
MP20	05045-20206	9	1	PIN, HINGE, P.D.	28480	05045-20206
MP21	05045-20203	6	1	AXLE, PAPER ROLL	28480	05045-20203
MP22				NOT ASSIGNED		
MP23	05045-40003	6	1	COVER, TEST HEAD	28480	05045-40003
MP24				NOT ASSIGNED		
MP25				NOT ASSIGNED		
MP26				NOT ASSIGNED		
MP27	05045-20204	7	2	SCREW, TONGUE	28480	05045-20204
MP28	05045-00027	0	1	GUIDE, BOARD, SOCKET DRIVE	28480	05045-00027
MP29	05045-00021	4	1	TRAY, TEST HEAD	28480	05045-00021
MP30	05045-40001	4	1	GUIDE, MAG CARD, BOTTOM	28480	05045-40001
MP31	05045-40002	5	1	GUIDE, MAG CARD, TOP	28480	05045-40002
MP32						
MP33	0403-0150	7	6	GUIDE-PC BD GRA POLYC .062-80-TMKN8	28480	0403-0150
MP34	05045-00004	3	1	COVER, POWER SUPPLY	28480	05045-00004
MP35	5020-8805	8	1	FRAME, FRONT	28480	5020-8805
MP36	05045-00014	5	1	SUPPORT, CARD READER	28480	05045-00014
MP37	05045-00015	6	1	BRACKET, CARD READER	28480	05045-00015

See introduction to this section for ordering information
*Indicates factory selected value

Model 5045A
Replaceable Parts

Table 6-1. Replaceable Parts (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
MP18	05045-00013	4	1	SUPPORT, INTERFACE M.B.	28480	05045-00013
MP19	05045-00010	1	2	GUIDE, BOARD, LEFT	28480	05045-00010
MP40	05045-00011	1	1	GUIDE, BOARD, RIGHT	28480	05045-00011
MP41	05045-00008	7	1	BULKHEAD, FRONT	28480	05045-00008
MP42	5020-8838	7	4		28480	5020-8838
MP43	05045-00009	8	1	STIFFENER, BLOCK HEAD	28480	05045-00009
MP44	05045-00007	6	1	BULKHEAD, REAR	28480	05045-00007
MP45	05045-00005	4	1	GUIDE, BOARD, FRONT, P.S.	28480	05045-00005
MP46	05045-00006	5	1	GUIDE, BOARD, REAR, P.S.	28480	05045-00006
MP47	5020-8806	9	1	FRAME, REAR	28480	5020-8806
MP48	05045-00029	2	1	SUPPORT, P.S. COVER	28480	05045-00029
MP49	9281-0401	0	1	PAPER, ROLL	28480	9281-0401
MP50	05045-00012	3	3	BRACKET, MOTHER BD	28480	05045-00012
Q1	1854-0671	3	1	TRANSISTOR NPN 2N6282 SI TO-3 PD=160W	04713	2N6282
Q2	1854-0671	3	1	TRANSISTOR NPN 2N6282 SI TO-3 PD=160W	04713	2N6282
R1	0811-2640	9	1	RESISTOR 220 1% 3W PW TC=0+20	28480	0811-2640
T1	9100-3044	1	1	TRANSFORMER-POWER PRI: 115/230V; W/100V	28480	9100-3044
W1	05045-60106	2	1	CABLE ASSY, MAIN MOTHER	28480	05045-60106
W2	05045-60105	1	1	CABLE ASSY, BM TO SM	28480	05045-60105
W3	05045-60103	1	1	CABLE ASSY, FRONT PANEL CONTROL	28480	05045-60103
W4	05045-60104	0	1	CABLE ASSY, LM HANDLR	28480	05045-60104
W5	05045-60102	8	1	CABLE ASSY, TRANSFORMER	28480	05045-60102
W6	05045-60101	7	1	CABLE ASSY, AC POWER MODULE	28480	05045-60101
W7	8120-1378	1	1	CABLE ASSY 18AWG 3-CNDCT JGK-JKT	28480	8120-1378
				MISCELLANEOUS PARTS		
	0180-0078	4	2	CLAMP-CAP 2.062-DIA STL	56289	4586-28
	0340-0466	8	2	INSULATOR-COVER NYLON	28480	0340-0466
	0340-0596	1	2	INSULATOR-XSTR SIL-RBR	28480	0340-0596
	0360-0621	5	16	TERMINAL-SLDR LUG LK-MTG FOR=10-SCR	79963	505-196
	0380-0009	5	2	SPACER-RND .562-IN-LG .18-IN-ID	00000	ORDER BY DESCRIPTION
	0380-0342	9	7	STANDOFF-RVT-CN .125-IN-LG 6-32TMD	00000	ORDER BY DESCRIPTION
	0510-0182	2	2	FASTENER-LATCH ADJ PAWL GRIP RANGE	28480	0510-0182
	0590-1116	2	4	NUT-SHMET-U-TP 4-40-TMD .25-WD SPR-STL	00000	ORDER BY DESCRIPTION
	0900-0017	9	2	O-RING .208-IN-ID .07-IN-XSECT-DIA NTRL	28480	0900-0017
	1200-0456	7	2	SOCKET-XSTR 2-CNT TO-3	28480	1200-0456
	1200-0659	0	1	SOCKET TEST 20-PIN	28480	1205-0293
	1205-0293	0	1	HEAT SINK TO-3-PKG	19613	220-0334-89-0602
	1200-0957	9	2	SOCKET, IC 20-CNT DIP TEST 20-PIN (BASE)	28480	1210-0013
	1210-0013	3	5	(PART OF SOCKET ADAPTER)	28480	1251-0159
	1251-0159	4	3	CLAMP-CAP 1.375-DIA STL	28480	1251-1115
	1251-1115	4	2	CONNECTOR-PC EDGE 15-CNT/ROW 2-ROW8	28480	1400-0008
	1400-0008	9	1	POLARIZING KEY-PC EDGE CONN	28480	1400-0596
	1400-0596	2	1	PUSHHOLDER-BLOCK 15A 250V 1-FU	28480	2680-0172
	2680-0172	1	4	CLAMP-CAP 2.5-DIA STL	28480	3101-1671
	3101-1671	2	2	SCREEN-MACH 10-32 .375-IN-LG 100 DEG	28480	050
	4208-0098	2	1	CAP-PUSHBUTTON BLACK; .375-IN DIA	00000	050
	7120-1254	1	1	FOAM STRIP, 1/4 X 2"	28480	7120-1254
	7120-4289	1	1	NAMEPLATE .312-IN-WD .54-IN-LG AL	28480	7120-4289
	7122-0097	2	1	LABEL-INFORMATION 1.32-IN-WD 1.8-IN-LG	28480	7122-0097
	8660-0463	7	1	PLATE-SERIAL .5-IN-WD 1.25-IN-LG AL	28480	8660-0463
	05035-40004	5	4	FOOT	28480	05035-40004
	05045-00002	1	1	PANEL, REAR	28480	05045-00002
	05045-00003	2	1	PAN, FLOOR	28480	05045-00003
	05045-00022	5	1	COVER, BOTTOM INSULATOR	28480	05045-00022
	05045-00024	7	1	COVER, RECEPTACLE	28480	05045-00024
	05045-00036	1	2	BWIELD, PROCESSOR	28480	05045-00036
	05045-60015	2	1	BOARD ASSEMBLY, PR/RDR INT	28480	05045-60015
	05045-60019	8	1	DUMMY IC, 16-PIN	28480	05045-60019
	05045-60032	1	1	SOCKET ADAPTER 20-PIN 30U MILCENTERS	28480	05045-60032
	05045-60042	5	1	R-PACK PRECISION RESISTOR	28480	05045-60042
	05045-60120	0	1	DIAGNOSTIC CARD KIT	28480	05045-60120
	05045-80020	1	1	DUMMY IC, 24-PIN	28480	05045-80020
	05045-00037	2	1	CLIP, PAPER RETURN	28480	05045-00037

See introduction to this section for ordering information
*Indicates factory selected value

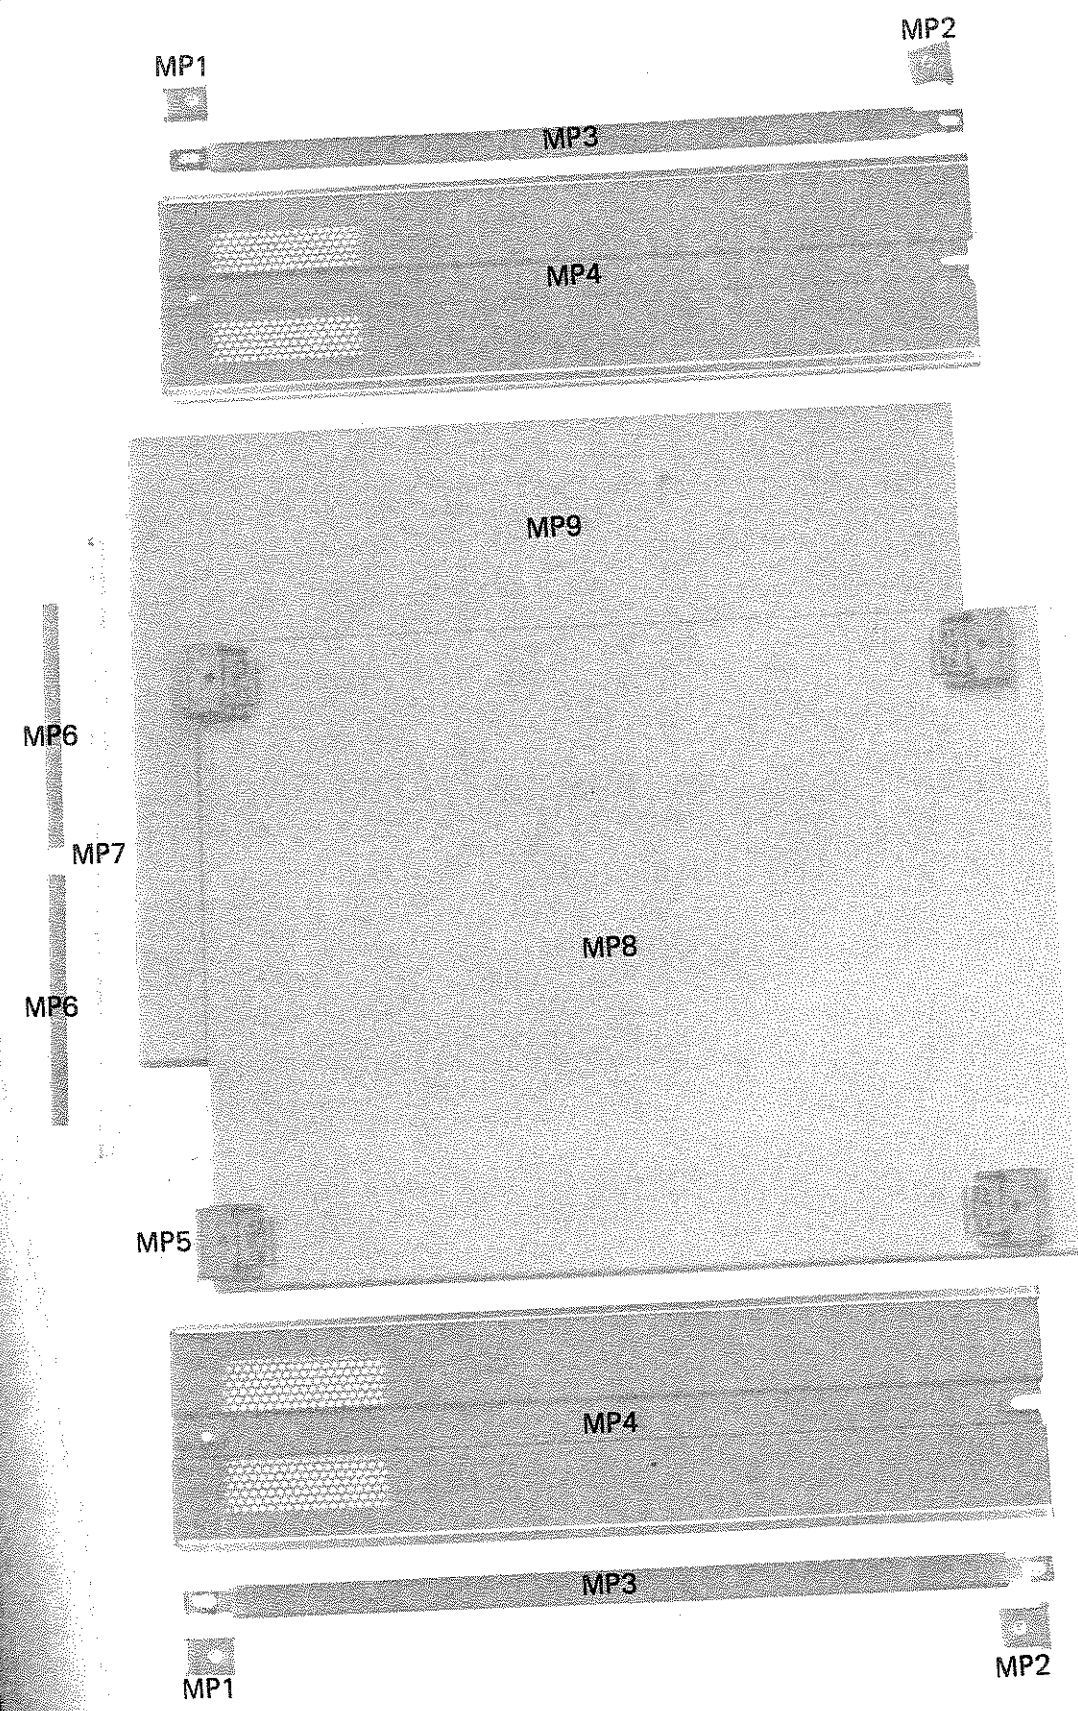


Figure 6-1. Cabinet Parts

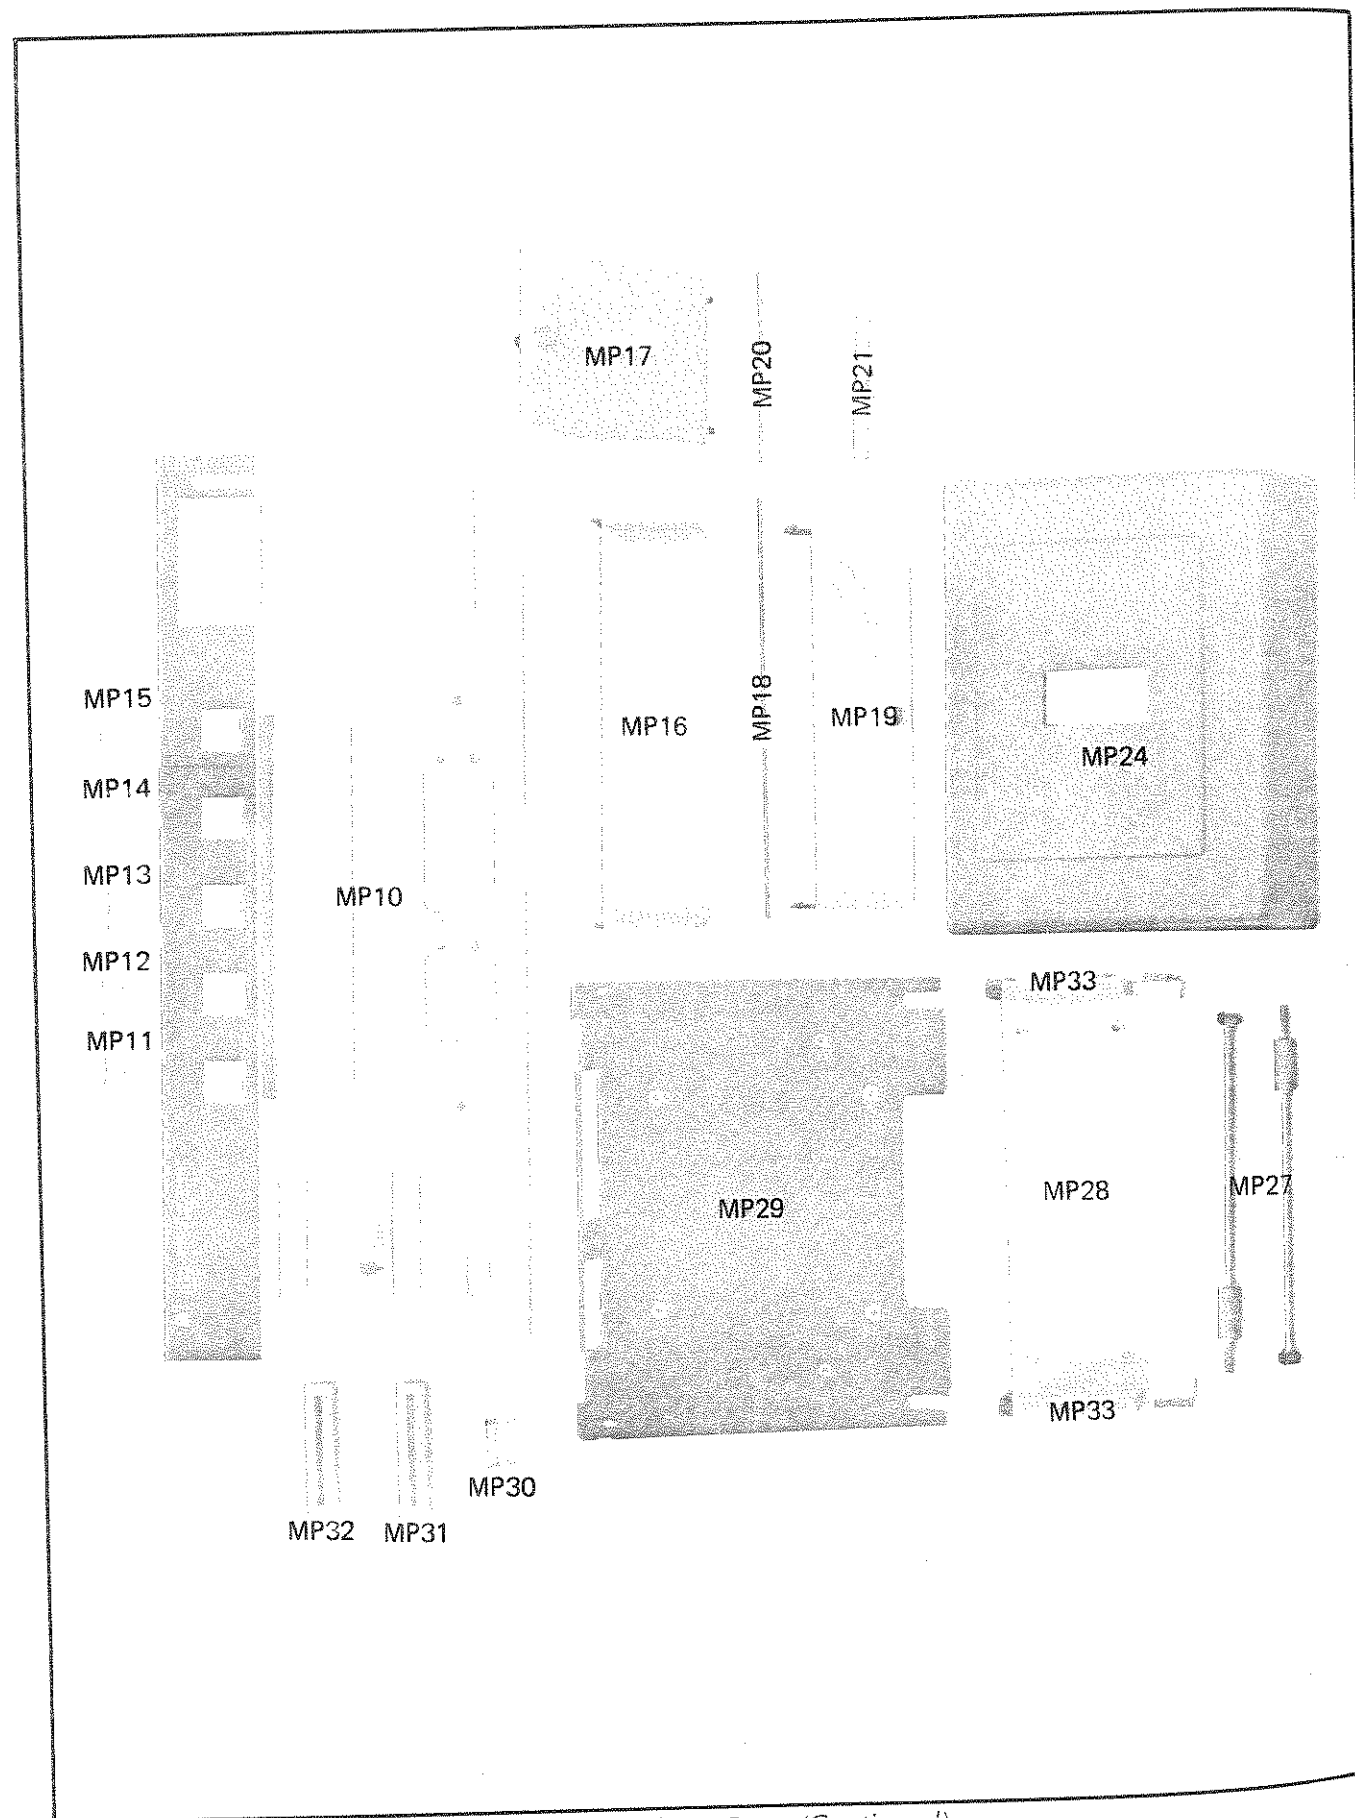


Figure 6-1. Cabinet Parts (Continued)

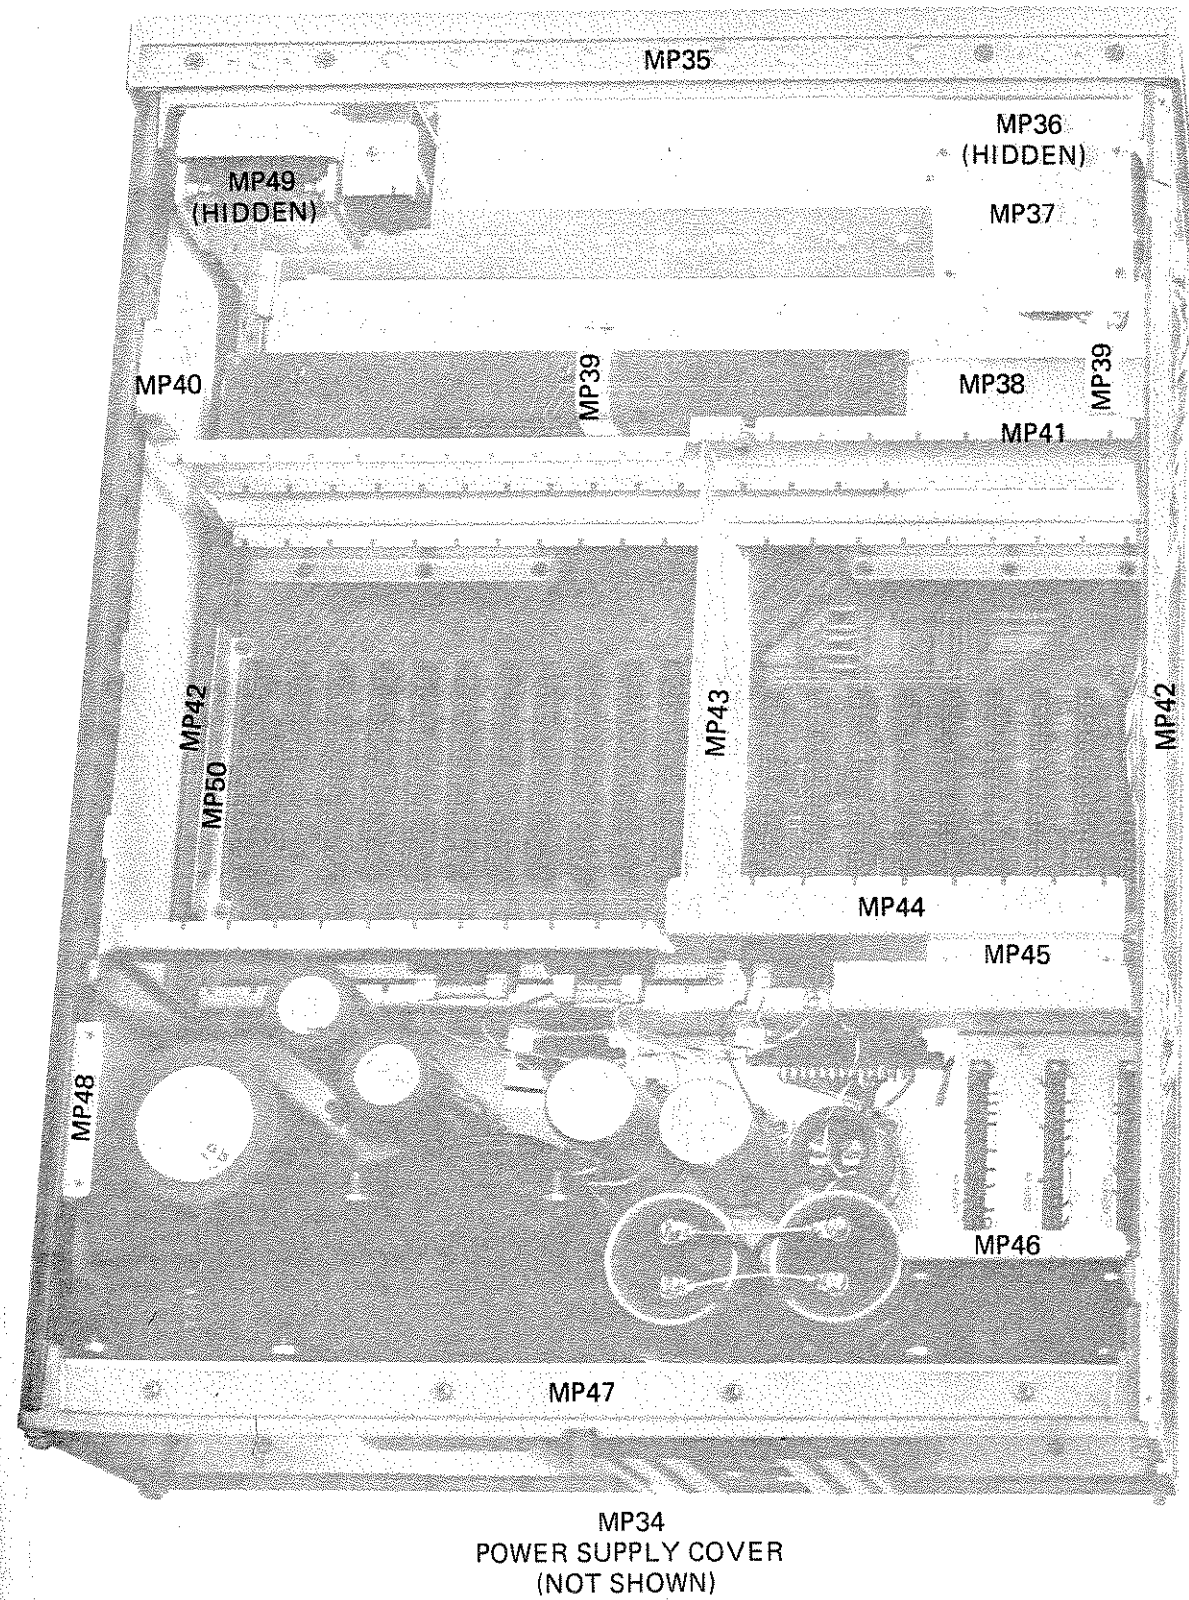


Figure 6-1. Cabinet Parts (Continued)

Table 6-2. Manufacturers Code List

Mfr No.	Manufacturer Name	Address	Zip Code
0000J	GTE Sylvania Miniature LT Prod	Hillsboro, NH	03244
00000	Any Satisfactory Supplier		
00853	Sangamo Elec Co S. Carolina Div	Pickens, SC	29671
0090B	Kemet		
01121	Allen-Bradley Co	Milwaukee, WI	53204
01295	Texas Instr Inc Semicond Cmpnt Div	Dallas, TX	75222
0192B	RCA Corp Solid State Div	Somerville, NJ	08876
04713	Motorola Semiconductor Products	Phoenix, AZ	85062
07263	Fairchild Semiconductor Div	Mountain View, CA	94042
19613	Textool Products Inc	Irving, TX	75060
24546	Corning Glass Works (Bradford)	Bradford, PA	16701
27014	National Semiconductor Corp	Santa Clara, CA	95051
28480	Hewlett-Packard Co Corporte HQ	Palo Alto, CA	94304
30161	Aavid Engineering Inc	Laconia, NH	03246
30983	Mepco/Electra Corp	San Diego, CA	92121
52072	Circuit Assembly Corp	Costa Mesa, CA	92626
56289	Sprague Electric Co	North Adams, MA	01247
71590	Centralab Elek Div Globe-Union Inc	Milwaukee, WI	50501
72136	Electro Motive Corp Sub IEC	Willimantic, CT	06226
73138	Beckman Instruments Inc Helipot Div	Fullerton, CA	92634
79963	Zierick Mfg Co	Mt Kisco, NY	10549
84411	TRW Capacitors Div	Ogallala, NE	69153
91637	Dale Electronics Inc	Columbus, NE	68601

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION

7-2. This section contains information necessary to adapt this manual to older instruments. This manual applies directly to 5045A instruments having serial prefix 1932A.

7-3. NEWER INSTRUMENTS

7-4. As changes are made, newer instruments may have a serial prefix not listed in this manual. Manuals for these instruments are supplied with a manual change sheet, containing the required information. Contact the nearest Hewlett-Packard Sales and Service Office for information if this sheet is missing.

7-5. OLDER INSTRUMENTS

7-6. To adapt this manual to instruments having a serial prefix prior to 1932A, perform the back-dating that applies to your instrument's serial prefix as listed in Table 7-1 below.

Table 7-1. Manual Backdating

If Your Instrument has Serial or Serial Number Below	Make the Following Changes to Your Manual
1916	1
1852	1,2
1712A	1,2,3
1704A	1,2,3,4
1628A176 thru 185	1,2,3,4,5
1628A156 thru 175	1,2,3,4,5,6
1620A	1,2,3,4,5,6,7
1520A	1,2,3,4,5,6,7,8

CHANGE 1

Page 6-23, Table 6-1, A28 Replaceable Parts:
Change A28 from Series 1916 to 1520A.

Page 8-147, Figure 8-31, A28 Schematic Diagram:
Change A28 Series from 1916 to 1516 and 1520.

Delete a connection between the shell and pin 17 (circuit common) of 24-pin dual inline connector P2 and connection between shell and pin 36 (circuit common) of 50-pin dual inline connector P4.

Page 6-15, Table 6-1, A13 (05045-60013) Replaceable Parts:


Change A13 Series from 1916 to 1712.
Change HP Part Numbers for A13U16, 17, 25 and U26 from 1820-1938 to 1820-1614.

Page 8-135, Figure 8-27 (Sheet 1 of 2), A13-A24 Schematic Diagram:
Change A13-A24 from Series 1916 to 1712.

Page 6-29, Table 6-1, Replaceable Parts:
Delete CR3 1902-0986.

Page 8-113, Figure 8-17, A2 Schematic Diagram:
Delete 9.1V breakdown diode (CR3) between terminal $\overline{15}$ and terminals $\overline{11}$, $\overline{11}$.

Page 6-29, Replaceable Parts:
Delete complete A37 parts list.

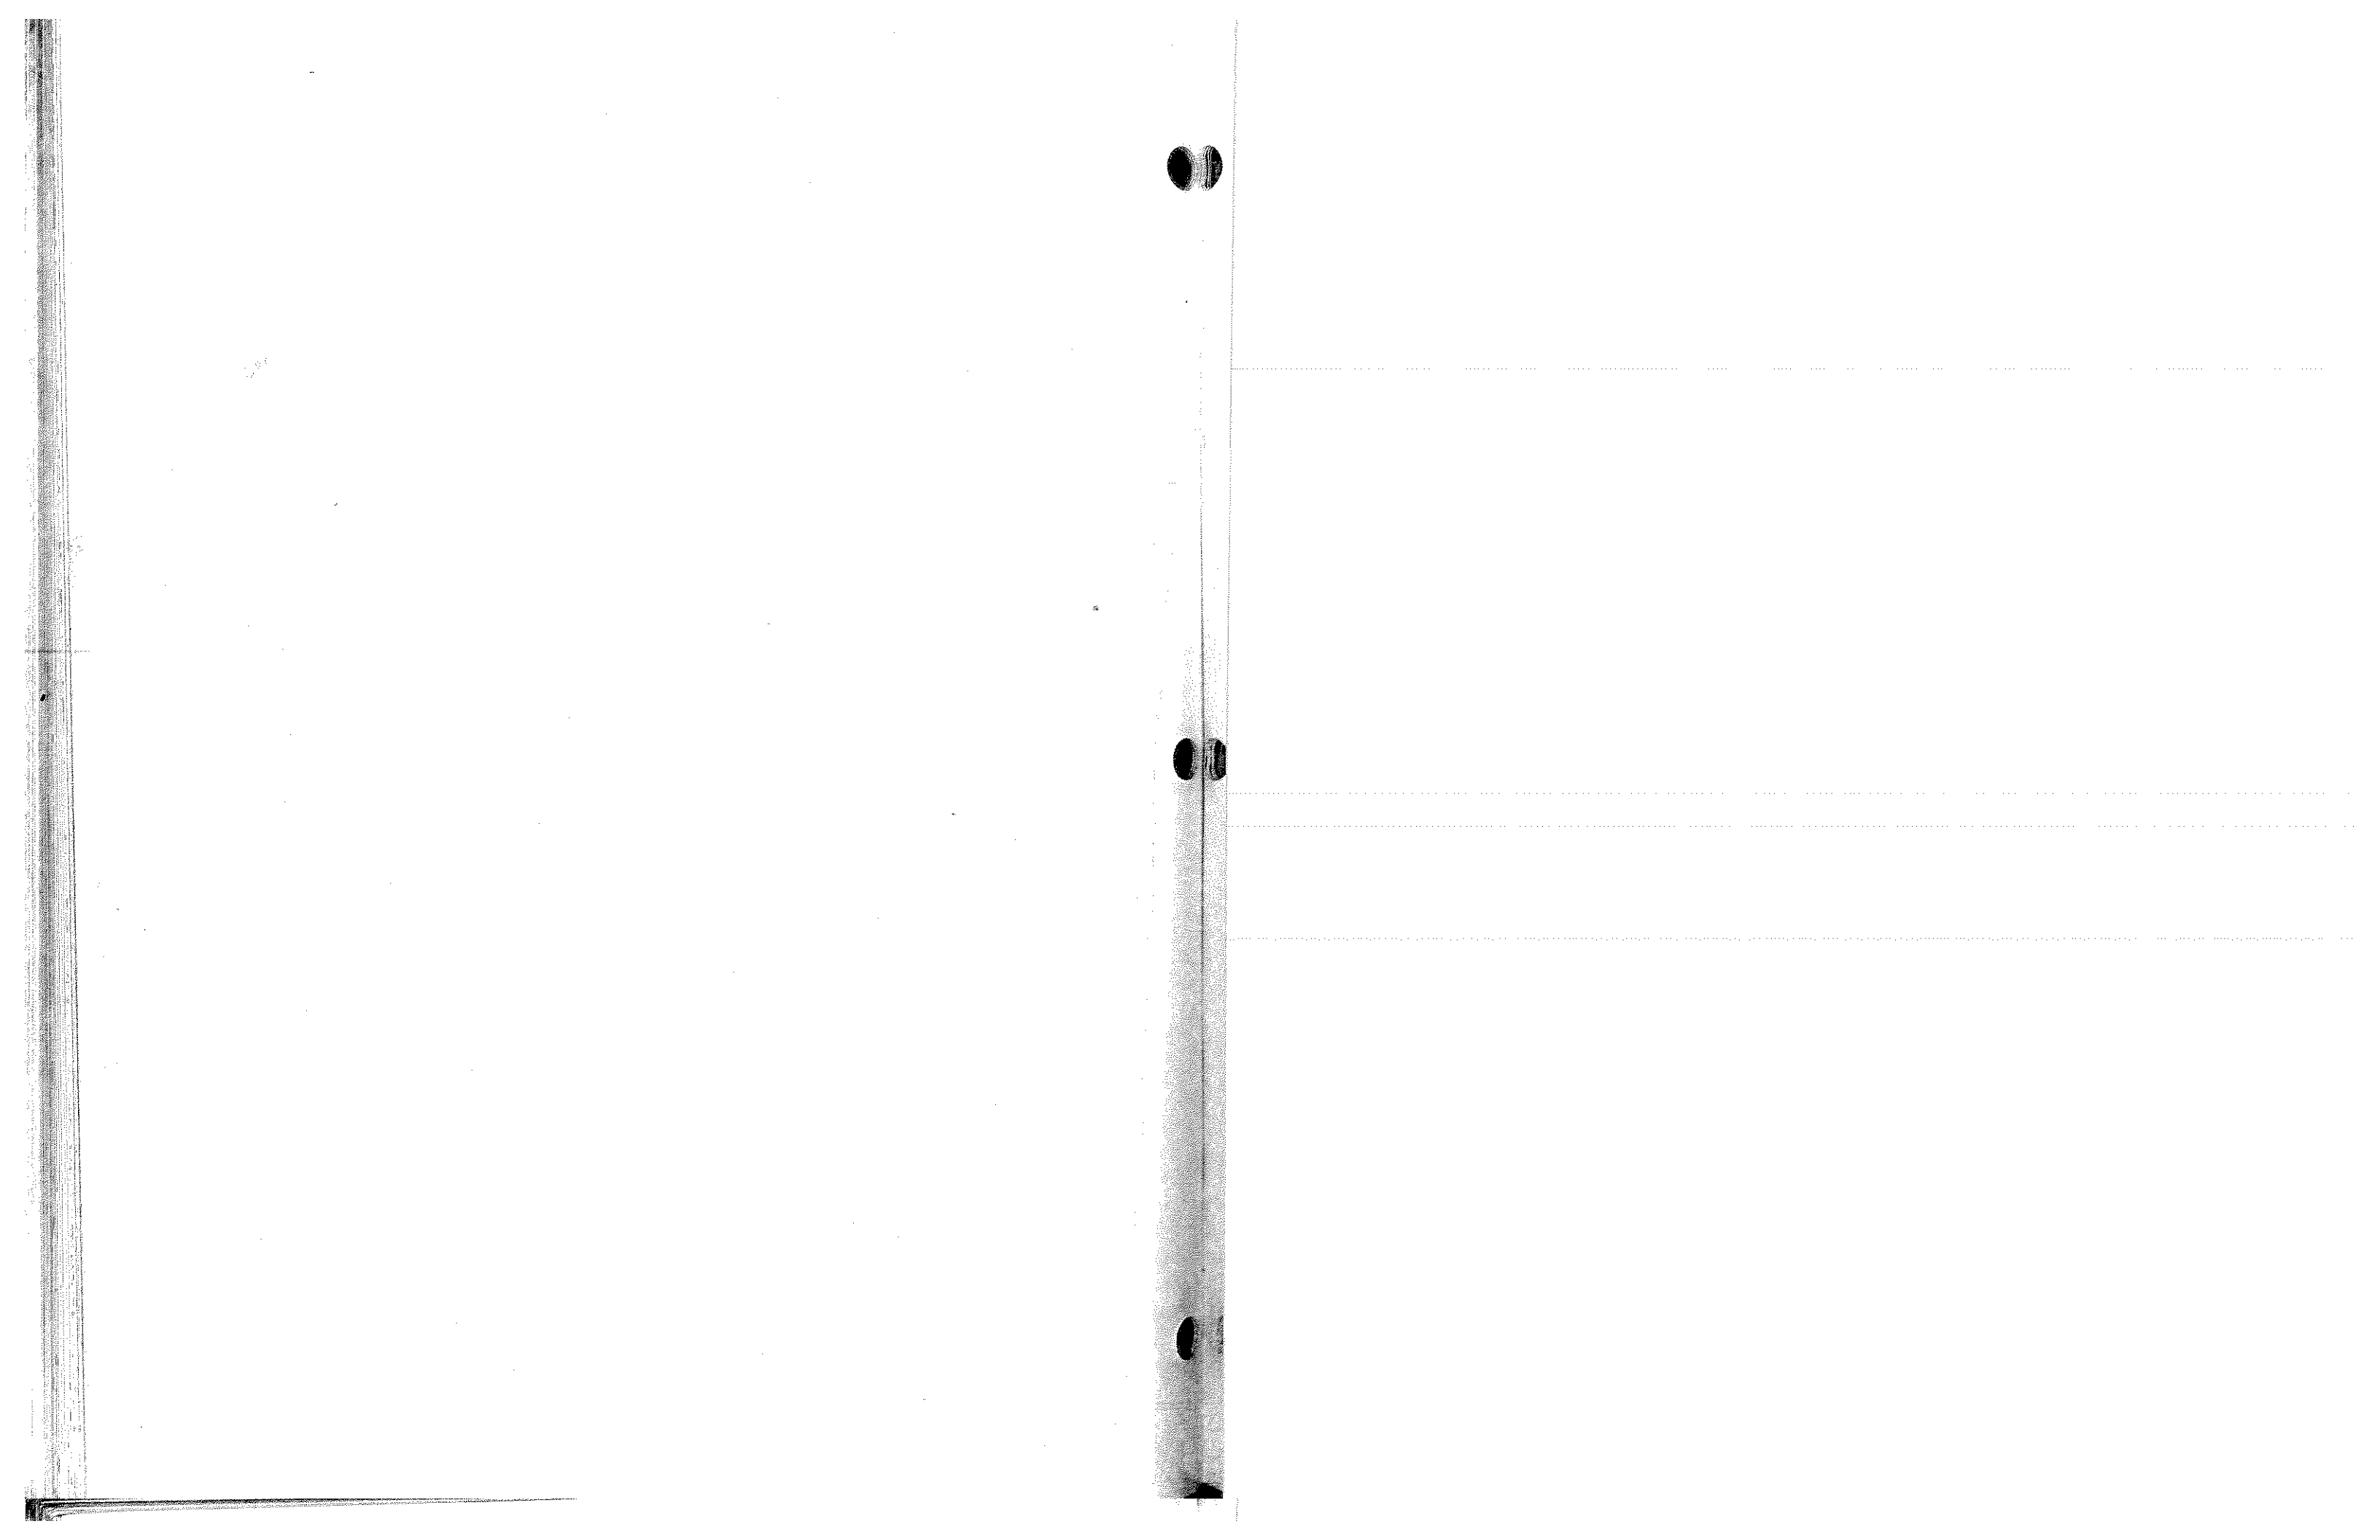

SECTION VIII MAINTENANCE AND TROUBLESHOOTING

8-1. INTRODUCTION

8-2. This section contains maintenance, troubleshooting, theory of operation, component locators and schematic diagrams. The maintenance information includes a table for identification of assemblies and a table of test equipment required. Removal and disassembly procedures, in addition to repair and cleaning procedures, are included. Troubleshooting covers the CPU, the pin drivers and self check. A troubleshooting flow chart, and operation flow chart and a ROM listing are included.

8-3. ASSEMBLY IDENTIFICATION

8-4. Table 8-1 lists the designations, name and Hewlett-Packard part number of the assemblies that comprise the 5045A.

Table 8-1. Assembly Identification

Assembly	Description	HP Part No.
A1	±15V and ±18V Regulator	05045-60001
A2	±8V and ±12V Regulator	05045-60002
A3	±5V and +18V Regulator	05045-60003
A4	Arithmetic Logic Unit	05045-60004
A5	Processor Memory	05045-60005
A6	Main Memory	05045-60006
A7	I/O Board (HP-IB)	05045-60007
A8	ROM	05045-60008
A9	Address	05045-60009
A10	D/A Control	05045-60010
A11	Reference Level Generator	05045-60011
A12	Pin Driver Control	05045-60012
A13 thru A24	Pin Driver (A17 thru A20 comprise Option 024)	05045-60013
A25	Card Reader Interface Assembly	09810-66562
A26	Card Reader/Printer Interface	05045-60015
A27	Front Panel Switch Board	05045-60021
A28 or A29	Socket Driver	05045-60017
A30	Socket Assembly	05045-60019
A31	Test Head Interconnect	05045-60020
A32	Interface Motherboard	05045-60016
A33	Main Motherboard	05045-60014
A34	Thermal Printer	05150-60011
A35	Magnetic Card Reader	09810-67962
A36	One-Shot Multivibrator	05045-60041
A37	Static Protection	05045-60043
A38	HP-IB Interface	05045-60037

8-17. Card Reader Removal

- a. Disconnect power from 5045A.
- b. Remove top cover of 5045A by loosening screw on rear of cover.
- c. Remove top trim strip using flat-blade screwdriver inserted into slots in strip to lift strip out.
- d. Remove A25 Card Reader Interface board by lifting board up until it is out of connector, then push board down and to the rear of the connector until the left end of the board passes through the board guide. Pull left side of board forward, sliding the board under the guide. When clear of the guide lift the board up until the side edge connector can be removed. Remove the connector in the center of the board, making sure not to bend the pins. Remove board from instrument.
- e. Turn 5045 on its side and remove bottom cover by loosening the screw at rear of cover.
- f. Remove the screw second in from left end of the instrument on the front flange (bottom portion). (A nut on the inside of the instrument on this screw must be held to allow removal of the screw.)
- g. Remove the two screws on the left top of the front flange. This will allow the card reader assembly to be removed.
- h. Reverse the preceding procedure to reinstall the card reader assembly. The nut and screw attaching the lower bracket and lower front flange should be loosened and the lower portion of the card reader moved if the card does not feed smoothly into and out of the reader. The nut and screw should then be retightened.

8-18. Cleaning Solvents

8-19. Recommended freon cleaning solvents listed below can be used for the card driving wheels and the commutator contacts.

CAUTION

Do not use freon on Magnetic Read/Write head.

Manufacturer's Name	Manufacturer's Part No.	HP Part No.
Sprayon Products	#2002	8500-0232
Miller-Stephenson	MS-180	
Jesta	TFA 1135	
CRC Chemicals	2016	

CAUTION

Do not use solvents which are not recommended. Some solvents will leave a harmful residue which will seriously affect the operation of the card reader.

8-20. Cleaning the Card Driving Wheels

8-21. The magnetic card reader must be removed as described above. Remake the electrical circuit connections to the card reader and start the card reader running. Spray a moderate amount of solvent on a kimwipe and wipe the driving surface of the two drive wheels which are shown in Figure 8-1. Repeat this procedure until no more dirt can be removed from the drive wheels.

CAUTION

Do not spray solvent directly onto the drive wheels. Solvent will destroy adjacent plastic parts.

8-22. Cleaning the Motor Commutator Contacts

8-23. The magnetic card reader must be removed as described above. Loosen the two hex headed screws which fasten the end cap to the motor shown in Figure 8-1. Pull the end cap back to expose the commutator contacts. Remake the electrical circuit connections to the card reader and start the card reader running. Spray moderate amounts of solvent directly on the commutator contacts, until the motor runs smoothly at the normal speed. Do not wipe the commutator contacts with a cloth or tissue.

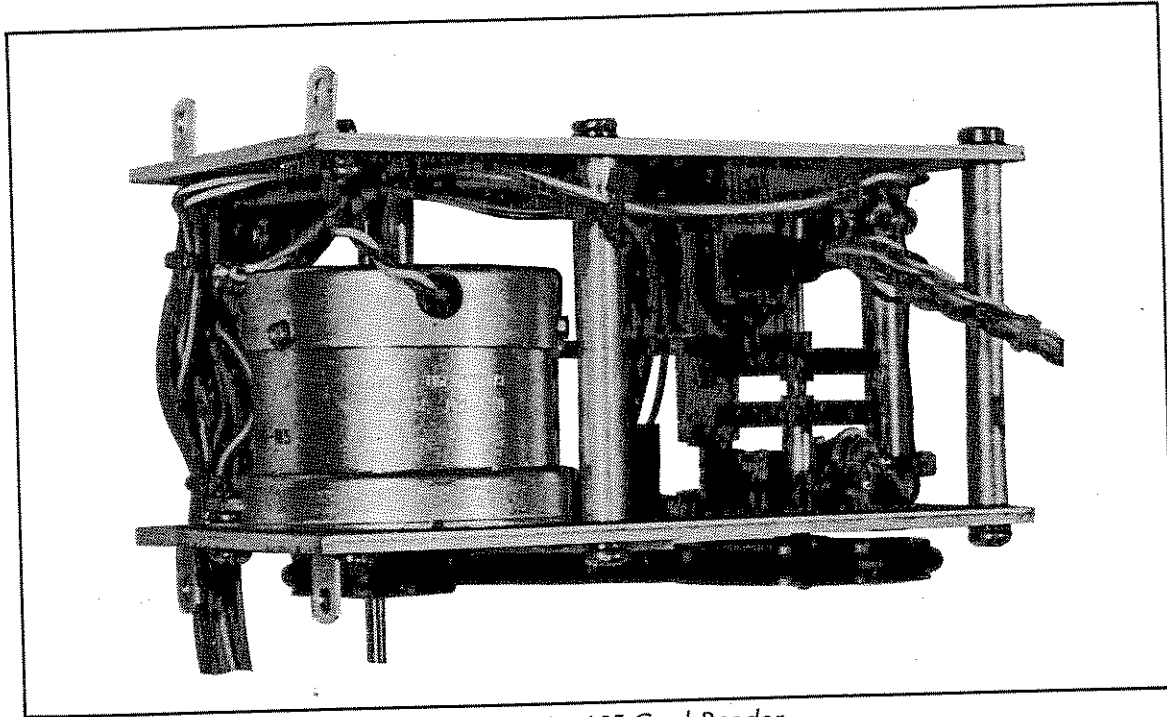


Figure 8-1. A35 Card Reader

8-24. Cleaning the Read/Write Head

8-25. Clean the card reader Read/Write head with cleaning card, HP Part Number 8660-0463. Instructions for use of this cleaning card are listed in the following paragraph. Cards are available from HP Customer Service Center, in Mountain View, California and Parts Center Europe, Boeblingen, Germany.

CAUTION

See warning on card.

8-26. Use of Cleaning Card for Magnetic Card Reader

8-27. This card should be used only as often as is necessary. Use when the reader gives erratic results, such as when loading a program card results in a "RELOAD" being printed by the thermal printer. It should also be used after approximately every 750 program card loadings or every 2 months, whichever comes first. If the reader continues to give erratic results after two passes of the cleaner card and these results are not restricted to a few cards, the problem may be in another part of the tester. Maintenance procedure for cleaning the card drive wheels (paragraph 8-20) should be performed if the card seems to be slipping.

8-28. Lamp Replacement

- 8-29. To replace a defective lamp in the card reader, proceed as follows:
- Remove the card reader as described above.
 - Remove the lamp assembly by pulling it out with a pair of pliers.
 - Loosen brass nut on the front (Lamp) end of the assembly with a $\frac{3}{16}$ " wrench. (See Figure 8-2.)
 - Remove the brass nut and lamp holder.
 - Replace the defective lamp, HP Part Number 2140-0092.
 - Screw the lamp holder back into place and replace the $\frac{3}{16}$ " brass nut.
 - Press the lamp assembly into the assembly holder.
 - Check to assure that the magnetic card reader is performing properly by loading a known good program from a magnetic card into the tester and verify that the program in memory and the program on the card are identical.

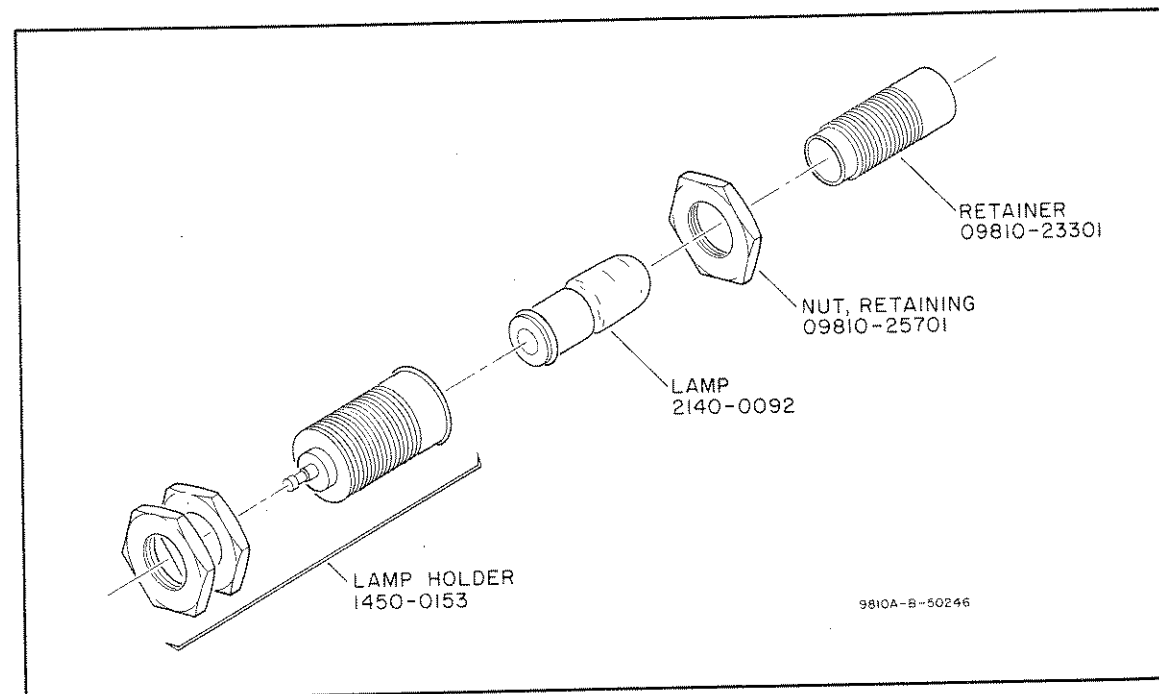


Figure 8-2. Lamp Replacement

8-30. If the card reader still malfunctions after performing the above cleaning and lamp replacement procedures, exchange it via your HP Service Office (listed at the rear of this manual).

8-31. There are two versions of magnetic card readers, as follows:

Version A:

This has a teflon guide on the motor shaft. The motor mounting nuts are the aircraft type with rubber inserts. The motor is purposefully left loose on its mounting bolts.

CAUTION

Do not tighten the motor mounting nuts. To do so will bind the motor shaft.

Version B:

This version does not have a teflon guide on the motor shaft. The motor mounting nuts have lock washers and hold the motor tight against its mounting surface.

CAUTION

Do not loosen the motor mounting nuts. To do so will cause the card reader to malfunction.

8-32. A34 THERMAL PRINTER MAINTENANCE

8-33. The following procedures are provided for maintenance of the thermal printer. To insure that the print head is not damaged by a possibly defective A26 Card Reader/Printer Interface board, the board should be checked per paragraph 8-40.

8-34. Printer Removal and Disassembly

8-35. Remove the printer as follows:

- a. Disconnect gray cable and the red and blue wires from control board.
- b. Remove A26 Card Reader/Printer Interface board.
- c. Remove print mechanism by removing front casting top trim strip. Remove two top screws and mechanism will be loose and can be removed. Note that lower lip of paper guide overhangs the front panel and the upper paper guide is free to move and does not touch panel.
- d. Remove mounting bracket by removing only the four screws on the rear of the assembly that hold the bracket to the side plates.
- e. Remove the spring clip that holds the head in place by pressing down and sliding it towards the left side of the mechanism, then up and out.
- f. Loosen the cam hold screws at rear of heat sink. Head and heat sink are ready to be removed. Note that there is a spring between the upper plastic paper guide and the heat sink. Remove heat sink by pressing the rear down and back.

8-36. PRINT HEAD REPLACEMENT. Remove the head from the heat sink by pressing a blunt tool through hole in the heat sink. There should be enough heat sink compound in heat sink to hold the new head in place. Install the new head in the heat sink.

8-37. ROLLER REPLACEMENT. Remove the thumbwheel. Then remove the right side plate *only*. Do not loosen any screws on the solenoid side of the mechanism other than the two on the mounting bracket. This will insure some mechanical alignment.

8-38. Remove the retaining ring holding the armature onto the shaft. Slide the armature/clutch assembly off the roller shaft. Slide the roller shaft out of the left side plate.

8-39. Install the new roller shaft and reassemble the mechanism. Do not oil the armature or side plate bearings. The right side plate should be adjusted so that the bearing drag is minimized.

8-40. A26 Card Reader/Printer Interface Board Checkout

- a. Check all power supplies. (Refer to paragraph 5-9.)
- b. Load card in (card title should print), place AUTO/MAN switch to MAN.
- c. Check current drawn by A26U5, U9, U13, U17 and U20 in the following manner:
Connect a $\frac{1}{4}$ Watt 200 Ω resistor between +5 volts and:
U5 — pin 10,11,13,14,15
U9 — pin 10,11,13,14,15
U13 — pin 10,11,13,14,15
U17 — pin 10,11,13,14,15
U20 — pin 10,11,13,14,15
Measured voltage at each indicated pin should be less than 0.4V with load resistor applied.
- d. Check the Group Enable lines (pins 19,33,16,32 of gray connector on the A26 board).
Connect $\frac{1}{2}$ Watt 200 Ω resistor from ground to each pin and measure voltage.
pin 19 — $>+9.5V$
pin 33 — $>+9.5V$
pin 16 — $\sim 0V$
pin 32 — $\sim 0V$
- e. Check the voltage at U12A pins 4,5,6,7. Voltage should be greater than 2.4V.
- f. Reinstall mechanism into the instrument and connect the gray cable, the red and blue wires to the A26 board. Mechanism should be positioned, using four screws on mounting bracket so that lip on lower paper guide rests on front panel and upper guide is free.
- g. Check "Printer Group Enable Timing" per paragraph 5-12. Make adjustments as necessary.
- h. Run "Printer Check" per paragraph 4-157.
- i. Print spacing is controlled by an adjustable stop screw located between the solenoid and armature. The hex end is $\frac{3}{16}$ inch. To reduce print spacing, turn the screw clockwise. To increase spacing, turn the screw counter-clockwise. Vertical spacing should be approximately 6 characters per inch.
- j. Press STEP button to obtain a printout and repeat measurement and adjustment as necessary.

8-41. PC Boards Requiring Special Handling and Cleaning

- 8-42. The following PC boards require special handling and cleaning.
- a. A11 Reference Level Generator, Part No. 05045-60011
 - b. A13-A24 Pin Driver, Part No. 05045-60013
 - c. A33 Main Motherboard, Part No. 05045-60014
 - d. A28 or A29 Socket Driver, Part No. 05045-60017
 - e. A30 Socket Assembly, Part No. 05045-60019
 - f. A31 Test Head Interface, Part No. 05045-60020

CAUTION

The A11 DAC and A13 thru A24 pin driver boards contain CMOS circuits which are highly susceptible to static discharge damage. Handle these boards only by the large black heat sink or the board extractor.

8-43. **HANDLING.** The boards listed above should be handled only by the edges. Finger prints on the board surface may cause high resistance leakage and degrade instrument performance.

8-44. **CLEANING.** After repairs are made on the boards listed above, the contaminated areas should be washed with a special detergent such as Alcohol. The areas should be dried and sprayed with a coating (approximately 0.001 inch) of GE Dri-Film (or equivalent). Old film can be stripped from the board when necessary by using freon.

8-45. **REPAIR**

8-46. **Printed Circuit Component Replacement**

8-47. Component lead holes in the circuit boards have plated-through walls to ensure good electrical contact between conductors on opposite sides of the board. To prevent damage to the plating and the replacement component, apply heat sparingly, and work carefully.

8-48. **Replacing Integrated Circuits**

8-49. Following are two recommended methods of replacing integrated circuits:

- a. **SOLDER GOBBLER.** This is the best method. Solder is removed from board by a soldering iron with a hollow tip connected to a vacuum source. **MUST NOT PRODUCE STATIC CHARGES WHEN OPERATING!**
- b. **CLIP-OUT.** This method should be used as a last resort only. Clip the leads as close to the base as possible. With a soldering iron and long nose pliers, carefully remove the wires from each hole. Then clean the holes.

8-50. **TROUBLESHOOTING**

8-51. Troubleshooting the 5045A is divided into two sections: (1) the CPU and its peripherals, and (2) Pin Drivers and associated circuitry.

8-52. CPU troubleshooting covers the following circuits:

- a. A35 Card Reader and interface
- b. A34 Printer and interface
- c. A4 Arithmetic Logic Unit (ALU)
- d. A5 Processor Memory Board
- e. A6 Main Memory Board
- f. A8 ROM Board
- g. A9 ROM Address Board

8-53. Pin Driver troubleshooting covers the following circuits:

- a. A13-A24 Pin Drivers Boards
- b. A28, A29 Socket Driver Boards (Fast Edge circuits)
- c. A10 D/A and A12 Pin Driver Control Logic
- d. A11 Reference Level Generators
- e. A12 Pin Driver Control
- f. A30 Socket Board
- g. Relays

8-54. Troubleshooting the 5045A requires an understanding of the sequence of operation within the instrument. This sequence is divided into three levels of documentation: (1) general overall operations; (2) Firmware flow diagram; (3) ROM listing (mnemonic and hexcode).

8-55. The overall operational flow of information is as follows:

- a. Power on.
- b. Wait for LOAD button to be pressed.
- c. Turn card reader and LOAD light on.
- d. Read information from card.
- e. Turn card reader motor and LOAD light off.
- f. Perform checksum on data read in from card versus information stored on the card.
- g. If checksum error, then print "RELOAD" and return to step b. If checksum is correct, print IC Type information.
- h. Press TEST button (TEST light comes on).
- i. Test Circuit (PASS, FAIL, or CONT light comes on).
- j. Press LOAD button (go back to step c).
- k. Press TEST (In MAN/HANDLR mode).
- l. TEST light goes out.

8-56. Figure 8-4 is a troubleshooting flow diagram showing areas of concern when a particular step is not executed correctly. This is based on the use of the Self Check 1 & 2 Programs covered in paragraphs 4-13 and 4-14.

CAUTION

NEVER operate the 5045 with any of the Pin Driver boards (A13 to A24) installed while A10 or A11 or A12 are removed. It is all right to operate the 5045A with A13 to A24 removed if A10 or A11 or A12 are installed. A11 will not operate without A10 while A12 will operate independently of A10 and A11.

NOTE

Before proceeding further, perform clock adjustment per paragraph 5-11a.

8-57. CPU Troubleshooting

8-58. Check the symptoms listed and perform the appropriate procedure:

- a. Instrument will not operate when LOAD button is pressed.
 1. Remove boards A10 through A24.
 2. Check power supplies per paragraph 5-9.
 3. Check clock per paragraph 5-11a.
 4. Check program flow in operational flow diagram, Figure 8-3.
 5. Connect 1601L and 10250A per Table 8-3 and perform the following steps.

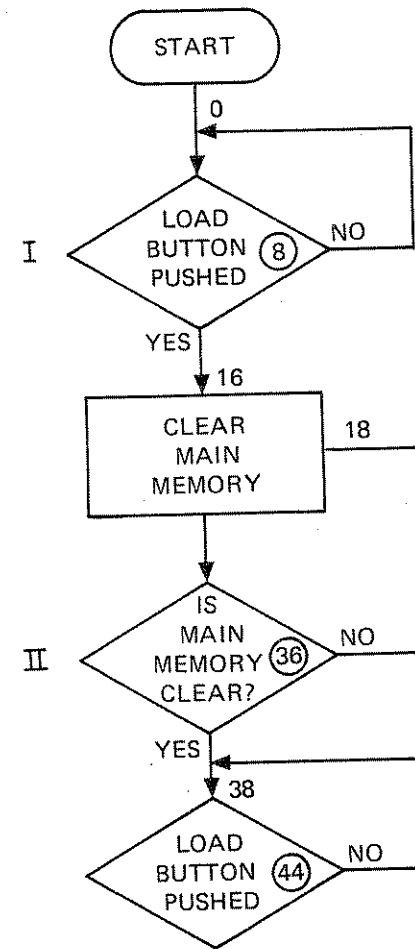


Figure 8-3. Operational Flow Diagram (First 44 Addresses)

Table 8-3. HP 1601L and HP 10250A Connections

Connect 1601L Data Inputs	To 5045A Test Points
0	A8TP1
1	A8TP2
2	A8TP3
3	A8TP4
4	A8TP5
5	A8TP6
6	A8TP7
7	A8TP8
8	A8TP9
9	A8TP10
10	Connect to 10250A output
11	A9TP3 (serial data)
Clock	A9TP1
GND	Chassis

Connect 10250A	To 5045A Test Points
1	A8TP11
2	A8TP12
3	A9TP6
4	A8TP13 (if 5045A is equipped with 05045-60030 connect to A9U2(12))
+5V	A5TP1
GND	Chassis

Trigger switch settings for 1601L and 10250A (Positive True Logic):

10250A:

- 1 & 2 per address to be checked
- 3 HI
- 4 HI

1601L:


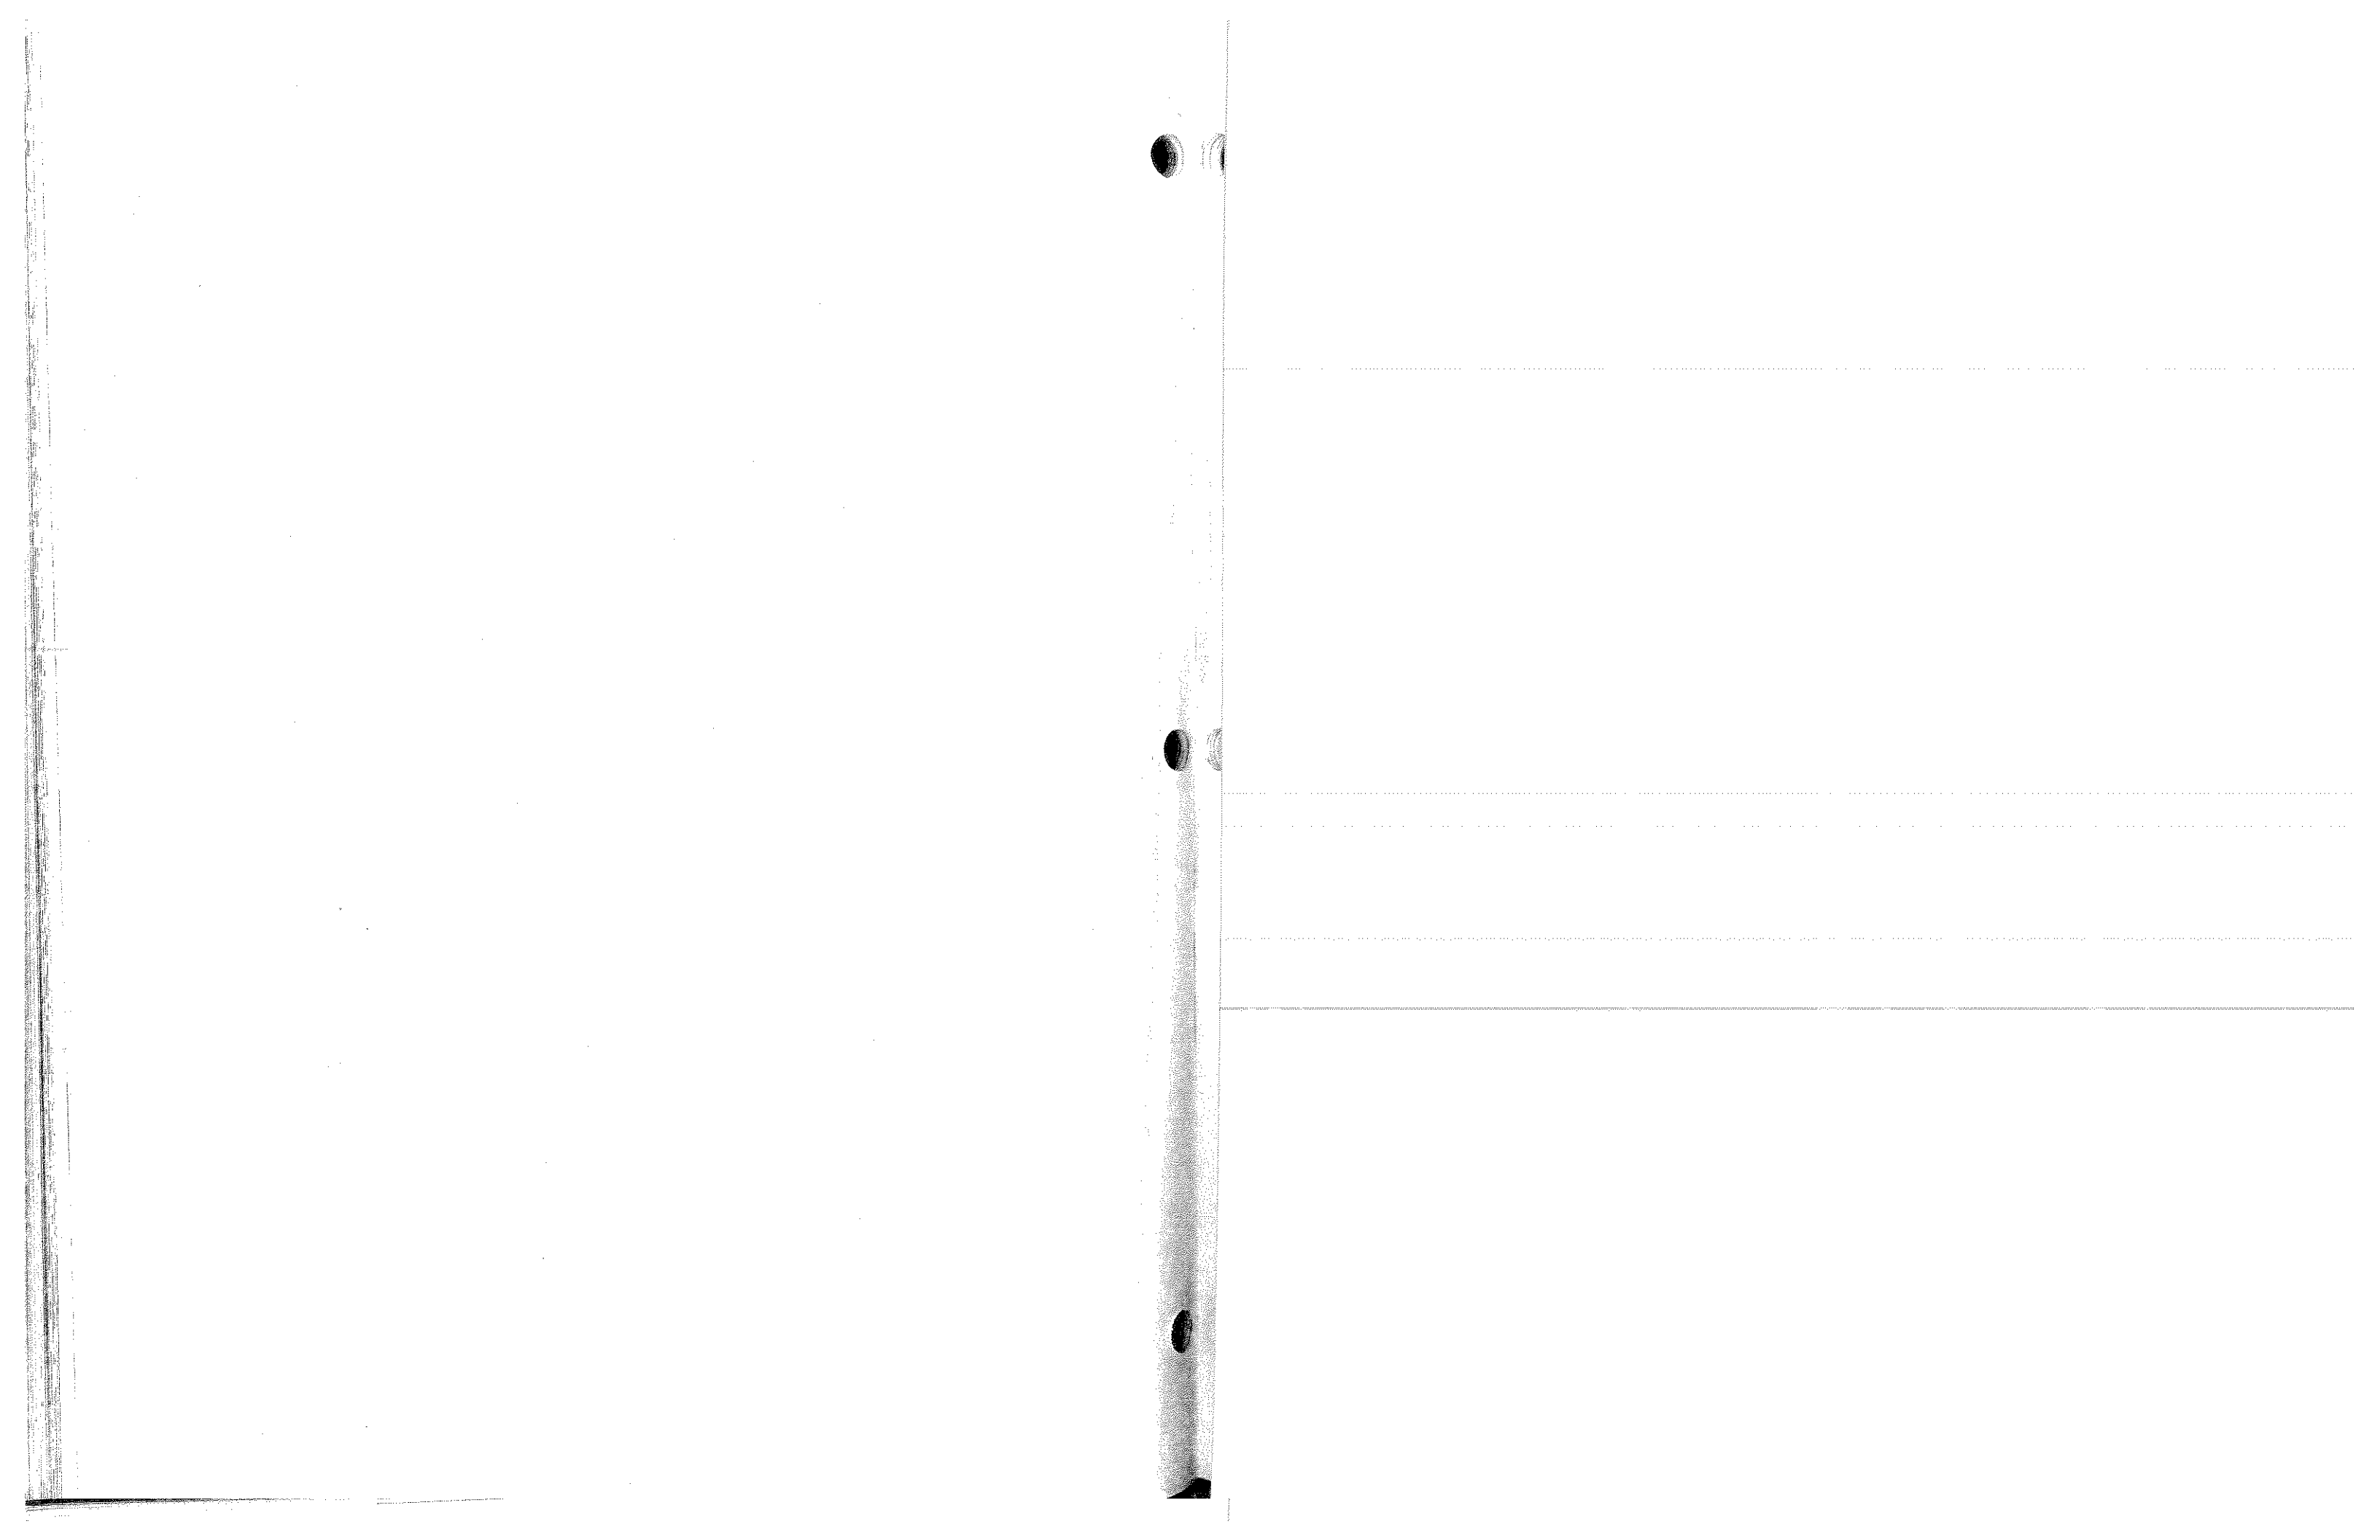
- 0-9 per address to be checked
- 10 HI
- 11 OFF
- LOGIC — POS
- DISPLAY MARK — ON
- BYTE — 3 Bit (OCT)
- CLOCK — 
- THRESHOLD — TTL
- SAMPLE MODE — REPEAT
- TRIGGER MODE — START DISPLAY
- DELAY SET — 00000

Figure 8-4
TROUBLESHOOTING FLOW DIAGRAM
(See Page 8-13)



6. Set the 1601L and 10250A TRIGGER switches as follows:
0-9 on 1601A and 1-2 on 10250A for Address 1. (All address related switches LO except 0 on 1601L to HI.)
7. Display should be as shown in Figure 8-6. (See explanation of how to read the ROM listing and flow diagrams, paragraph 8-71.)
8. Using the flow diagram and listing determine if the flow is correct. If not, determine where it starts to deviate.

NOTE

The basic operation of the CPU is best checked using the first 8 addresses. Check that this loop is correct before proceeding further. Boards included in this basic operation are the Power Supplies, A1, A2 and A3, A4 ALU, A5 Processor Memory, A6 Main Memory, A8 PROM and A9 Address, Front Panel.

- b. Instrument operates properly until LOAD button is pressed.
 1. Check the power supply while the unit is inoperative after LOAD button is pressed. If the power supplies are being loaded it is an indication that the pin driver boards may be loading the power supplies. Turn the power off and remove the pin driver boards. Repeat the test without pin driver boards. The instrument will operate without the pin drivers although failure will be registered.
 2. Check that LOAD button data is being transferred from the A27 Front Panel board to A5U20 when the front panel transfer line is LOW as follows: sync scope of A27U11(1) (+ edge). On the first clock pulse (positive edge) after U11(1) goes high, a low should be shifted out, check that on A5U20(6) a high is also clocked out on the first clock pulse. Keep scope triggered on U11(1).
 3. Check that the Main Memory is cleared *prior* to data loading by triggering on the Refresh line A6U27(5). Press the LOAD button but don't load the card. Check that the outputs of U36, U26, U19, U10, U8 and U17 are low for all 256 memory locations.
 4. To check that the information is being loaded into the memory from the mag card, sync the scope on A6U20(3). Check that the data input at the following points A6U31(13 & 9) and check that U31 (1, 10) are alternately high. If there is no data at A6U31(9) the shift register may not be working properly.
 5. Check that Data is also shifted out on A6(3) during the load operation.
 6. Check that data is being shifted from the memories to the parallel/serial input shift register and back to the memory. Check all 24 outputs of U36, U26, U19, U10, U8 and U17.
 7. Check the Main Memory to insure that the program is being stored. While waiting for the TEST button to be pressed the Main Memory should be periodically refreshed. Trigger scope off the Refresh line A6U27(5). Check that there is one Clock 2 for each of the two \emptyset clocks.
 8. Use 1601L to check that the ROM address is cycling through addresses 464 to 584 prior to the TEST button being pressed. If not, check the CPU flow using the flow diagram.
 9. Check that when A6(4) goes low, A6U28(5) also goes low. (This condition indicates that the ROM program has reached the logic model execution state and the main memory is the program source.) If in refresh mode, A6U28(5) will remain high until completion of refresh cycle.

8-59. Non-sequential Troubleshooting Hints for 5045A That Fails After TEST Button is Pressed.

8-60. With A12(4) shorted to the chassis all programs should be executed with no failure (except Self Check 1). This allows checking the Main Memory Program and ROM program flow. All controls should operate properly. In AUTO START mode the PASS and TEST lights should stay on or may flash. While in MAN START mode the tester should cycle once each time the TEST button is pressed. Pressing the TEST button while the program is being executed should stop execution and the TEST button light should turn off. If not, check the A21 Front Panel board and the ROM program flow.

8-61. To check the parameter storage on the A10 board, remove A11-A24 and load the Self Check 1 Card.

a. Set front panel switches as follows:

START — MAN/HANDLR
ON FAILURE — HOLD
V AND I RESULTS — ON
PRINTER — ON

The printout should be as follows (see page 8-17).

TEST: 1-1
FAIL 1PASS 0
1 -5LV <-200 MA
1 >7.5 V -15LMA
2 -5LV <-200 MA
2 >7.5 V -15LMA
3 -5LV <-200 MA
3 >7.5 V -15LMA
4 -5LV <-200 MA
4 >7.5 V -15LMA
5 -5LV <-200 MA
5 >7.5 V -15LMA
6 -5LV <-200 MA
6 >7.5 V -15LMA
7 -5LV <-200 MA
7 >7.5 V -15LMA
8 -5LV <-200 MA
8 >7.5 V -15LMA
9 -5LV <-200 MA
9 >7.5 V -15LMA
10 -5LV <-200 MA
10 >7.5 V -15LMA
11 -5LV <-200 MA
11 >7.5 V -15LMA
12 -5LV <-200 MA
12 >7.5 V -15LMA
13 5LV 10LMA
14 5LV 10LMA
15 5LV 10LMA
16 5LV 10LMA
17 5LV 10LMA
18 5LV 10LMA
19 5LV 10LMA
20 5LV 10LMA
21 5LV 10LMA
22 5LV 10LMA
23 5LV 10LMA
24 5LV 10LMA
CORRECT 111111111111
PIN
STATE 1>000000000000
FAIL PIN: 1 2 3
4 5 6 7 8
9 10 11 12

SELF CHECK 1
CPU RDR PRNTR OK

TEST: 1-2
FAIL 1PASS 0
1 -5LV -10LMA
2 -5LV -10LMA
3 -5LV -10LMA
4 -5LV -10LMA
5 -5LV -10LMA
6 -5LV -10LMA
7 -5LV -10LMA
8 -5LV -10LMA
9 -5LV -10LMA
10 -5LV -10LMA
11 -5LV -10LMA
12 -5LV -10LMA
13 5LV >200 MA
13 <-7.5 V 15LMA
14 5LV >200 MA
14 <-7.5 V 15LMA
15 5LV >200 MA
15 <-7.5 V 15LMA
16 5LV >200 MA
16 <-7.5 V 15LMA
17 5LV >200 MA
17 <-7.5 V 15LMA
18 5LV >200 MA
18 <-7.5 V 15LMA
19 5LV >200 MA
19 <-7.5 V 15LMA
20 5LV >200 MA
20 <-7.5 V 15LMA
21 5LV >200 MA
21 <-7.5 V 15LMA
22 5LV >200 MA
22 <-7.5 V 15LMA
23 5LV >200 MA
23 <-7.5 V 15LMA
24 5LV >200 MA
24 <-7.5 V 15LMA
CORRECT 111111111111
PIN
STATE 1>000000000000
FAIL PIN: 13 14 15
16 17 18 19 20
21 22 23 24

- b. If overall printout is incorrect, in format and/or wording, the problem is either in the printer interface or A8 ROM.
- c. If limits are incorrect (i.e., 5LV, 10 LMA), problem is on A10 or A5, A6 boards. Check the A10 2K storage element and the output on A10(17) (serial data out to RAM). If limits are correct but non L values are incorrect then problem is in the A8 ROM (A11 and A12 must be installed and A12(4) shorted).

8-62. To check the A11 Reference Level Generator operation use V/I R-Pack Program Card. Figure 8-5 shows a typical waveform for A11TP1 triggered by A11U25(13).

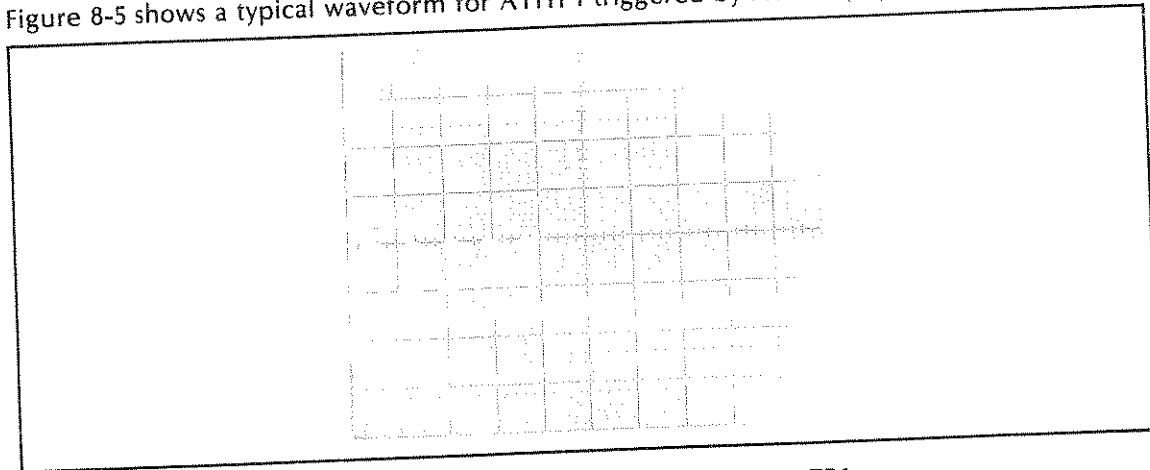


Figure 8-5. Typical Waveform for A11TP1

- a. Check that the four reference output voltages at A11(11, 12, 13, 14) agree with the programmed voltages and currents as shown in Table 8-4, and current equations described in paragraph 8-131.
- b. If the V and I printout is correct from the previous step but waveform or output voltages are incorrect, then the problem is on the A11 DAC converter or the A11 Sample and Hold circuit.

A11 Output	A13 Waveform
A11(8)	A13TP1
A11(12)	A13U24(8)
A11(13)	A13U24(4)
A11(11)	A13U18(11)
A11(14)	A13U19(11)

- c. Check that A11U25 outputs 15, 13, 12, 11, 2, 5, 4, 3 and 10 and U24 outputs 5, 7, 3, 10 are sequentially shifting a low pulse out.

8-63. Failure pin grouping may be used to troubleshoot as follows:

- a. 1 or 2 adjacent pins failed means that pin driver or socket driver board is bad.
- b. Failure of every fourth pin is seven pin groups starting with pin 1 on test socket means A12 board or one of the pin drivers in the group is bad.
- c. If a group of four pins fail, then set 5045A front panel to:

START Auto
ON FAILURE — Continue
V/I RESULTS — OFF (down)
PRINTER — Off
Load "Self Check 2" card.

Then using an oscilloscope (this may require the use of a viewing hood) check for series of pulse at A12 U17 pins 2, 4, 6, 10, 12, 15.

8-64. Printer Problems

8-65. Check the symptoms listed and perform the appropriate procedure:

- a. Paper advances but no printing.
 1. Check the A26 interface board group enable (paragraph 5-12).
 2. Check A26 character storage register clock.
 3. Check A26 print data register.
- b. If printer prints but does not advance paper, check A26 paper advance circuit.
- c. If overall printout format is incorrect but characters printed and spacing is correct, the problem is with the A8 ROM board.
- d. If characters are not printed correctly but overall format spacing is correct, problem is on A26 board.

8-66. Card Reader Problems

8-67. Check the symptoms listed and perform the appropriate procedure:

- a. LOAD button pushed and light comes on but reader motor does not come on.
 1. With instrument power off, remove A26 board from its socket and turn the power on. The reader motor should come on. If not, check A25 card reader interface and A35 card reader assembly.
- b. With LOAD button pushed, LOAD light on, card runs through but "RELOAD" printed.
 1. Check for TTL data streams at A26U19(2,3,4), A26U1(13), U19(10,11,12) (while U19(6) is low) and U1(9).
 2. Use head cleaner card if the operation seems intermittent (paragraph 8-26).
 3. If activity is correct at above points the problem is associated with the A5 processor memory board.

8-68. Troubleshooting Using Flow Diagram and ROM Listing

8-69. Troubleshooting using flow diagram (Figure 8-4) and firmware (ROM) listing (paragraph 8-149) is performed as follows:

- a. Connect 1601L/10250A per Table 8-3.
- b. Set address of first decision point (i.e., address 8) and check that the instrument cycles through address 8 until the LOAD button is pressed.
- c. Repeat step (b) using further check points designated by roman numerals on flow diagram. (Decimal numbers indicate ROM addresses.) When it is found that a check point has not been reached the previous check point should be checked and then the ROM listing used to step sequentially through the intervening program flow. Check that the program reaches each of the designated "GO TO" addresses until a deviation from normal flow is encountered. The test program may have to be reloaded several times to accomplish this isolation procedure. Turn power off then ON or momentarily ground A4(5) to regain control. Then use the normal card loading procedure to load the card.

8-70. Example of How to Interpret 1601L versus ROM Listing

8-71. Figure 8-6 shows the ROM addresses being incremented, starting at ROM address 1. Note that the address holds at address 5 for 12 clock cycles. This corresponds to the implementation of ROM Address 1-5 as shown in Figure 8-6. Figure 8-7 corresponds to the implementation of the last clock of Address 5 and address 6-9 and ending with address 0. This operation is shown in flow diagram, Figure 8-3.

8-72. The ROM Listings (paragraph 8-149) are read as follows:

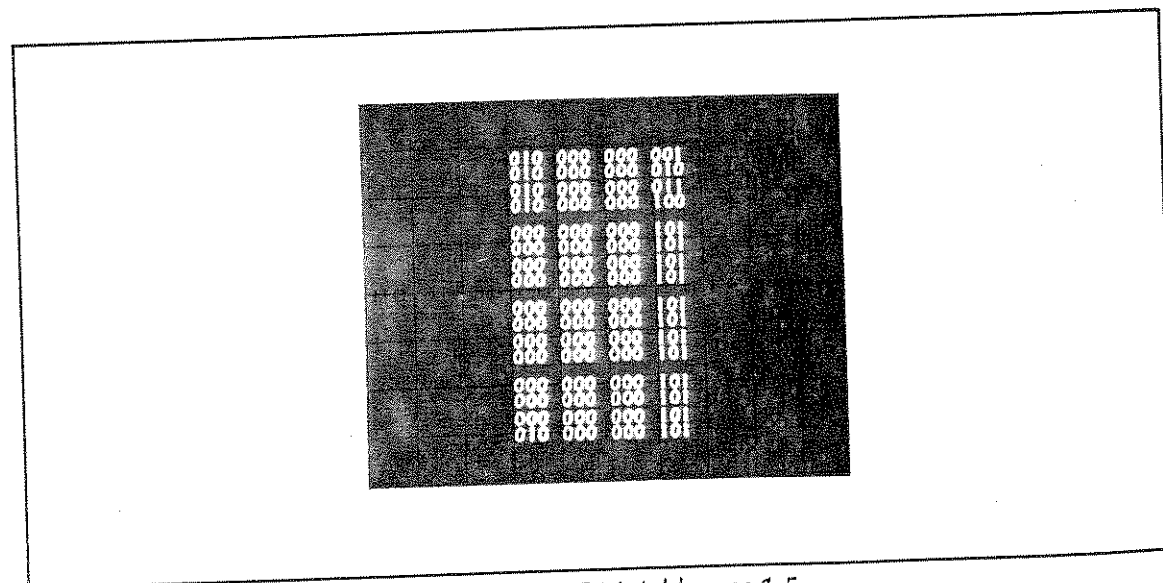
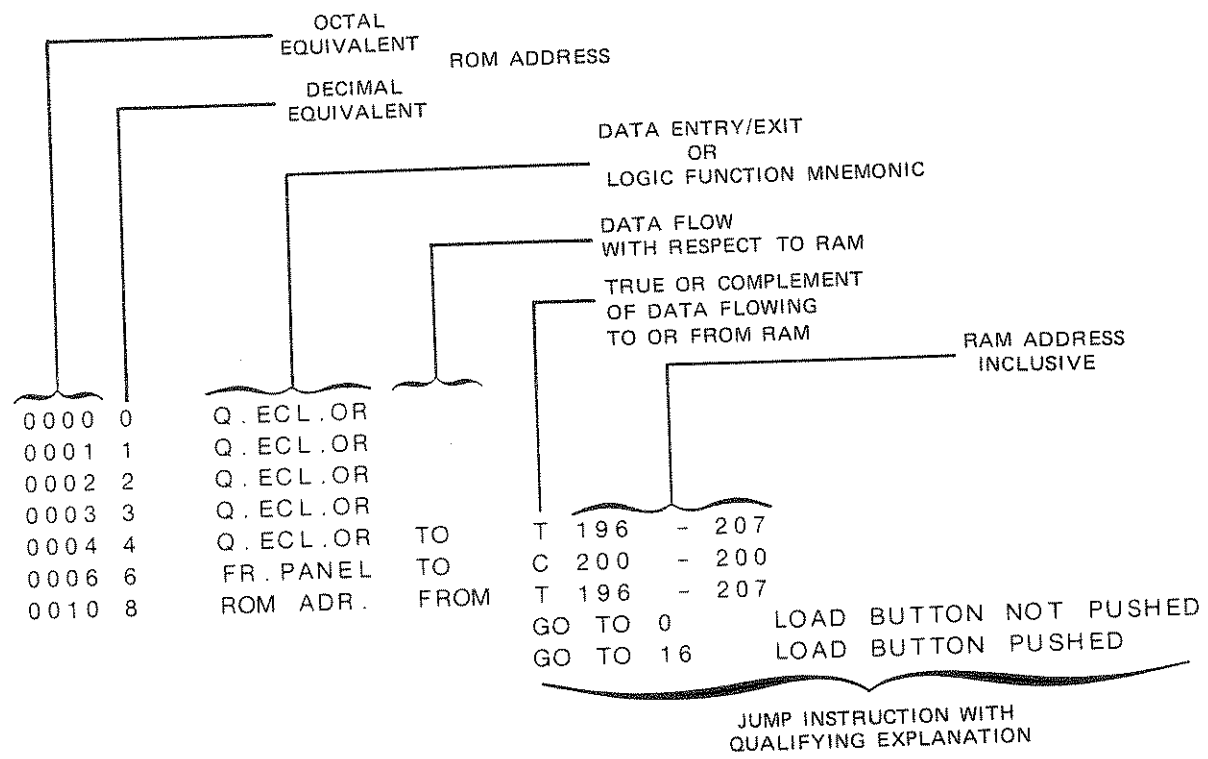


Figure 8-6. ROM Addresses 1-5

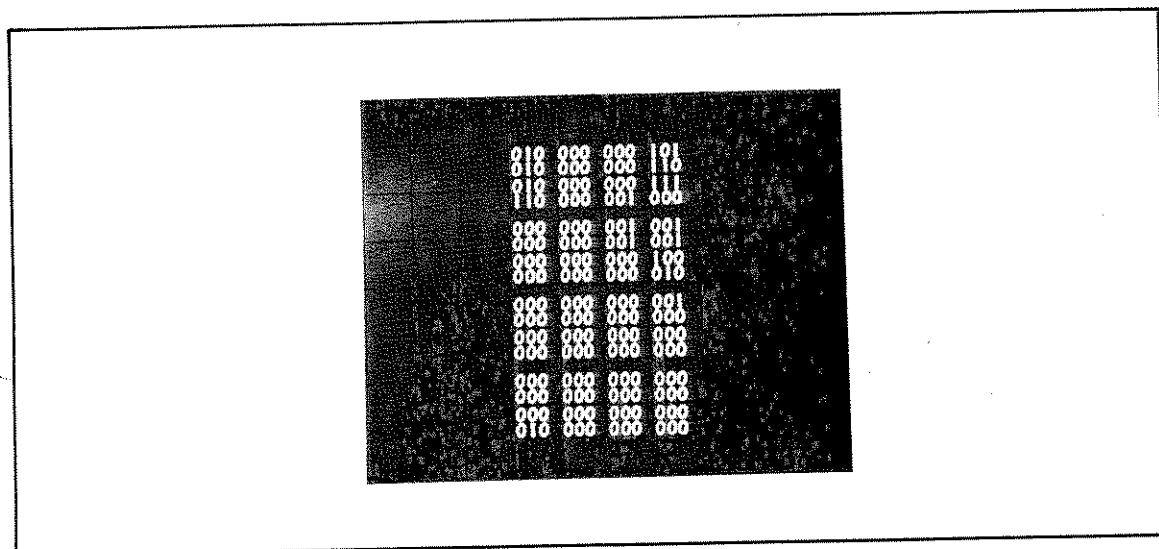


Figure 8-7. ROM Addresses 6-9

8-73. Figure 8-8 shows the implementation of ROM Address 8 and 9 when the LOAD button was pressed.

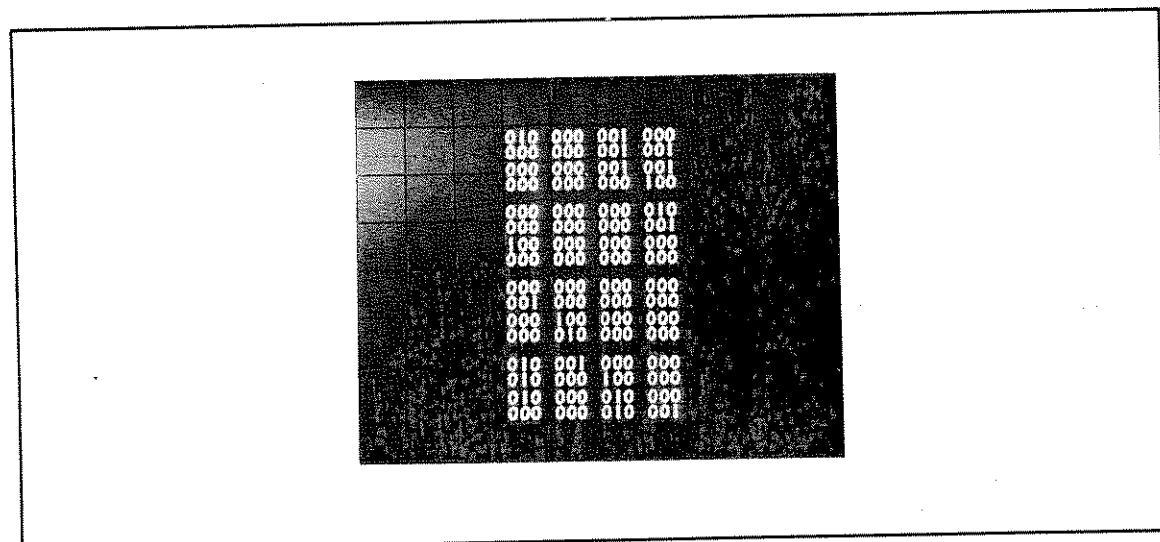


Figure 8-8. ROM Address 8 and 9

8-74. Note that in all cases the leftmost bit displayed is the serial data being transmitted to or from the RAM.

NOTE

Momentarily shorting A9(6) should cause the reset on pin 5 of A4, A5, A6, A8 and A9 to go low for approximately 3 seconds. Check that this resets the RAM and ROM address registers on the A5 and A9 boards to 0. This can also be used to reset the ROM program if it jumps the loop. The logic element used is the quad exclusive OR (op code 03₈) on the A4 board. This should be checked to insure that it is decoded at the ALU as 11₈ at U8 S₀₋₃. Check that data transferred from the front panel is high until the LOAD button is pushed and then one low bit is transferred via A5U20.

8-75. ROM Contents Allocation

8-76. Content allocation for the ROM and PROM boards is described in the following paragraphs:


a. PROM boards (05045-60030) are sectioned as follows:

Address	IC No.
0-511	U1,9,17
512-1023	U2,10,18
1024-1535	U3,11,19
1536-2047	U4,12,20
2048-2559	U5,13,21
2560-3071	U6,14,22

b. ROM boards (05045-60008) are sectioned as follows:

Address	IC No.
0-1023	U1, 6, 11
1024-2047	U2, 7, 12
2048-3071	U3, 8, 13

c. Within each group of 3 PROMs or ROMs the bits are allocated as follows:

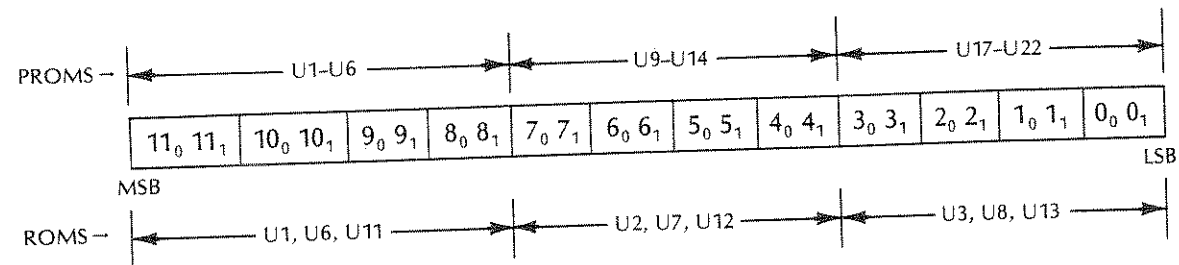

8-77. SELF CHECK TROUBLESHOOTING PROCEDURES

8-78. The operating procedures for performing the Self Check are described in Section III. The following paragraphs provide troubleshooting procedures to use when a failure occurs during the Self Check. The three-part Self Check (Self Check 1, 2 and 3) is described for both the standard 5045A (up to 16-pin ICs) and for Option 024 (up to 24-pin ICs).

8-79. Self Check 1 (Standard 5045A)

8-80. Self Check 1 (16 Program) has four tests which verify the ability to detect and register a failure on each of the pins.

- a. Test 1-1: Checks pins 9-16 in the '1' state.
- b. Test 1-2: Checks pins 1-8 in the '0' state.
- c. Test 1-3: Checks pins 1-8 in the '1' state.
- d. Test 1-4: Checks pins 9-16 in the '0' state.

8-81. If the failure detect circuitry is operating properly, the tester should register a pass each time, the four tests are performed, and the data is being set properly.

8-82. The program requires that the 16 pin Dummy IC (05045-80019) be installed in the 20 pin test socket. In the case of a handler, the IC should be in the handler test socket.

8-83. The switch settings recommended for running the Self Check 1 program are:

AUTO/MAN/HANDLR — Either position
ON FAILURE — HOLD
V AND I — Off (down)
PRINTER — ON

8-84. TROUBLESHOOTING. When a failure is printed, the two interconnected pins may both be printed as failed pins. The failure may be on either of the two pin driver boards and therefore further tests should be run to isolate the failed pin.

8-85. The general procedure for isolating a failure is listed below:

CAUTION

Turn off power before removing or installing printed-circuit boards. The A11 DAC and A13 thru A24 pin driver boards contain CMOS circuits which are highly susceptible to static discharge damage. Handle these boards only by the large black heat sink or the board extractor.

- a. Interchange the pin driver boards associated with the failed pin with a pin driver board that did not register a failure, one board at a time. Rerun the program and see if the failure is registered on the same pin or has moved to the pin where the suspect board was moved to. If the failure has moved, then the problem is associated with the moved board and the troubleshooting procedure in paragraph 8-118 should be used.
- b. If the failure has not moved, then the fault may be associated with the driver interconnected to the failed pin, the fast edge circuitry, or the control circuitry on A10, A11, or A12.
- c. Interchanging boards should be used where possible to isolate the failure. This can be done on the pin driver and socket driver boards.
- d. Where more than one group of pins is registered as failed and the grouping is every fourth pin (i.e., 1,5,9, etc.) the failure is probably associated with the failure detect circuitry on the A12 board or one of the pin driver boards listed as failed.

8-98. TROUBLESHOOTING. The tests in this program complements the tests in Self Check 2 and they are configured in such a way that they exercise the overall pin driver section of the tester in all modes. This program or the programs listed in paragraph 4-12 may be used to isolate the failure to the board and component. See paragraph 8-92 for a general procedure to isolate a failure.

8-99. Self Check 1 (Option 024)

8-100. Self Check 1 (24 Program) has four tests which verify the ability to detect and register a failure on each of the pins.

- a. Test 1-1: Checks pins 13-24 in the '1' state.
- b. Test 1-2: Checks pins 1-12 in the '0' state.
- c. Test 1-3: Checks pins 1-12 in the '1' state.
- d. Test 1-4: Checks pins 13-24 in the '0' state.

8-101. If the failure detect circuitry is operating properly, the tester should register a pass each time the four tests are performed.

8-102. The program requires that the 24-pin dummy IC (05045-80020) be installed in the 24-pin test socket. In the case of a handler, the IC should be installed in the handler test socket. The switch setting recommended for running the Self Check 1 program are:

AUTO — MAN/HNDLR — Either position
ON FAILURE — HOLD
V AND I — Off (down)
PRINTER — ON

8-103. TROUBLESHOOTING. When a failure is printed, the two interconnected pins may both be printed as failed pins. The failure may be on either of the two pin driver boards and therefore further tests should be run to isolate the failed pin.

8-104. The general procedure for isolating a failure is listed below:

- a. Interchange the pin driver boards associated with the failed pin with a pin driver board that did not register a failure, one board at a time. Rerun the program and see if the failure is registered on the same pin or if it has moved to the pin where the suspect board was moved to. If the failure has moved, then the problem is associated with the moved board and the troubleshooting procedure in paragraph 8-118 should be used.
- b. If the failure has not moved, then the fault may be associated with the driver interconnected to the failed pin, the fast edge circuitry, or the control circuitry on A10, A11 or A12.
- c. Interchanging boards should be used where possible to isolate the failure. This can be done on the pin driver and socket driver boards.
- d. Where more than 1 group of pins is registered as failed and the grouping is every fourth pin (i.e., 1,5,9, etc.), the failure is probably associated with the failure detect circuitry on the A12 board or one of the pin driver boards listed as failed.

8-105. Self Check 2 (Option 024)

8-106. Self Check 2 (pin drivers 24 program) contains ten tests that test the overall operation of the pin driver boards, the reference generator, the sample and hold circuits, and related circuitry.

8-107. A description of each test is as follows:

- a. Test 2-1: Checks all pin drivers at the maximum voltages (7.5V) and at the crossover point on the low current range (250 μ A). Pins 13-24 monitor and load pins 1-12. '0' and '1' states are exercised.
- b. Test 2-2: Checks all pin drivers at maximum voltages (7.5V) and at the crossover point on the low current range. Pins 1-12 monitor and load pins 13-24. '0' and '1' states are exercised.
- c. Test 2-3: Checks all pin drivers at the voltage crossover point (1.875V) and at the crossover point between Hi and Lo current ranges (2.5 mA). Pins 13-24 monitor and load pins 1-12. '0' and '1' states are exercised.
- d. Test 2-4: Checks all pin drivers at the voltage crossover point (1.875V) and at the crossover point between Hi and Lo current ranges (2.5 mA). Pins 1-12 monitor and load pins 13-24. '0' and '1' states are exercised.
- e. Test 2-5: Checks continuous current control on pin drivers 13-24. Pins 1-12 monitor pins 13-24. '0' and '1' states are exercised.
- f. Test 2-6: Checks continuous current control on pin drivers 1-12. Pins 13-24 monitor pins 1-12. '0' and '1' states are exercised.
- g. Test 2-7: Checks all pin drivers at the maximum voltage (7.5V) and maximum current (200 mA). Pins 13-24 monitor and load pins 1-12. Each pin combination (e.g., 1 and 24) is separately checked.
- h. Test 2-8: Checks all pin drivers at the maximum voltage (7.5V) and maximum current (200 mA). Pins 1012 monitor and load pins 13-24. Each pin combination (e.g., 1 and 24) is separately checked.
- i. Test 2-9: Checks all pin drivers at the maximum voltage (7.5V) and low current (20 μ A). Pins 1-12 monitor and load pins 13-24. '0' and '1' states are exercised.
- j. Test 2-10: Checks all pin drivers at the maximum voltage (7.5V) and low current (20 μ A). Pins 13-24 monitor and load pins 1-12. '0' and '1' states are exercised.

8-108. When the pin driver circuitry is operating properly, the tester should cycle and register a pass each time the ten tests are performed.

8-109. The test program requires the 24-pin dummy IC (05045-80020) to be installed in the test socket (in the case of a handler, the IC should be installed in the handler test socket).

8-110. TROUBLESHOOTING. The tests in this program are configured in such a way that they exercise the overall pin driver section of the tester in all modes. This program or the programs listed in paragraph 4-12 may be used to isolate the failure to the board and component.

8-111. The general procedure for isolating a failure is listed below:

- a. Interchange the pin driver board associated with the failed pin with a pin driver board that did not register a failure. Rerun the program and see if the failure is registered on the same pin or if it has moved to the pin to where the suspect board was moved.
- b. If the failure has moved then the problem is associated with the moved board and the troubleshooting procedure in paragraph 8-118 should be used.
- c. If the failure has not moved then the faulty circuit may be associated with the driver interconnected to the failed pin driver, the fast edge circuitry or the control circuitry on A10, A11 or A12. Interchanging boards should be used where possible to isolate the failure. This can be done on the pin driver and socket driver boards.

8-126. For all tests in both the V/I R-Pack and the R-Pack C-Current Modes program, the odd and even pins for any pin driver board are set up with the same parameters. Comparison troubleshooting may be done with these programs.

8-127. Failing pins should be isolated by running the R-Pack Tests described in paragraph 4-16. Also, with the R-Pack removed from the test socket, actual programmed voltages and currents may be measured by probing the test points on the Test Head. Scopes, DVMs or other test equipment must be grounded to A30 TP25. The tolerances for voltages and currents when measured with the DVM is listed in Table 8-4.

Table 8-4. Tolerances for R-Pack Parameters

V/I R-Pack		R-Pack C-Current Modes	
Test 1	7V +/- 25 mV 7 mA +/- .42 mA	Test 1	7V +/- 25 mV 7 mA +/- 1.12 mA
Test 2	1V +/- 15 mV 1 mA +/- .06 mA	Test 2	1V +/- 15 mV 1 mA +/- .18 mA
Test 3	-7V +/- 25 mV -7 mA +/- .42 mA	Test 3	-7V +/- 25 mV -7 mA +/- 1.12 mA
Test 4	-1V +/- 15 mV -1 mA +/- .06 mA	Test 4	-1V +/- 15 mV -1 mA +/- .18 mA

Measurements made on A30 test points with DVM.

8-128. Current Source Troubleshooting

NOTE

All circuits on the pin driver boards are susceptible to loading and therefore high input impedance (10 MΩ) oscilloscopes and DVMs should be used to monitor this circuitry. A large portion of the circuitry on the pin driver boards is CMOS with very high input impedances and low output driver currents. The operational amplifiers are also high input impedance devices.

Leads which are strobed onto pin driver boards via bilateral switches should be measured using an oscilloscope unless otherwise specified. These levels should be measured during valid strobe in intervals only. Bilateral switches turn on when U20 pin 3 is high for odd pins and when U20 pin 11 is high for even pins. The high state is approximately +8V.

8-129. The correct (+) op amp voltage for current sources may be calculated by using the formulas below.

Positive Current Sources (+) inputs

Odd U13(16)

Even U3(6)

Negative Current Sources (+) inputs

Odd U11(6)

Even U1(6)

8-130. Each current source has a high and low range. For each test, refer to Table 8-5 for this information.

8-131. Calculation of (+) op amp voltage.

I is programmed level in mA.

$$+I \text{ Hi Range } V(+) = 15 - .025I$$

$$-I \text{ Lo Range } V(+) = 15 - 2.025I$$

$$-I \text{ Hi Range } V(+) = -|15 - .025I|$$

$$-I \text{ Lo Range } V(+) = -|15 - 2.025I|$$

Note: $|a|$ = absolute value of "a".

(see Figure 8-9)

Example:

A programmed current level of +7 mA is set up. 7 mA is in the Hi range; therefore the +I Hi Range equation is used.

The expected (+) op amp voltage is then:

$$15 - .025 \times 7 = 14.83V$$

8-132. When the current source is operating properly the (-) op amp voltage (pin 2) should be within 20 mV of the (+) input (pin 3). The output of the op amp (pin 6) should be approximately two diode drops above or below the (+) input depending on the polarity of the current source.

8-133. When troubleshooting a current source, also check the following:

- a. Make sure that only 1 of the 3 gates in the current source is ON. The "A" gates are for the low current range and the "B" gates are for the high range. For positive current sources, the "ON" gates output voltage is within a few millivolts of the V_{SS} pin (pin 7). The other two gate outputs should be near +18V. For negative current sources, the "ON" gate's output voltage is within a few millivolts of the V_{DD} pin (pin 14). The two other negative current source gates should have outputs near -18V.
- b. The continuous current bit is set high or low depending on the programmed mode. When continuous current is specified, a current source will produce current independent of the logic state. *These levels should be measured with an oscilloscope only.* The levels are strobed onto the pin driver boards via bilateral switches. Bilateral switches turn on when U20 pin 3 is in the high state (approximately 8V) for odd pins and U20 pin 11 for even pins. Measure the continuous bit voltage level during the valid strobe period. The expected logic states for the Resistor Pack programs are listed in Table 8-5.

+ Continuous I U23(2) Odd Pins
 U23(3) Even Pins

-Continuous I U23(10) Odd Pins
 U23(9) Even Pins

Logic H Level 2.5 to 5V (approx.)
Logic L Level -2.5 to -5V (approx.)

- c. The logic state for a pin is determined by the "Odd Pin Test Pattern Setup" or the "Even Pin Test Pattern Setup" control lines.


The logic levels should be measured on U22(12) for odd pins and U22(2) for even pins. Refer to Table 8-5 for expected levels.

Logic H Level +8V (approx.)
Logic L Level -8V (approx.)

- d. Turn on the 5045A and load Self Check 2. Do not use dummy IC.
- e. The PASS light should flash at a consistent rate. This indicates that the processor and memory are functioning correctly.
- f. If the FAIL light flashes then the processor or memory and associated control has a malfunction. Refer to processor troubleshooting paragraph 8-57.
- g. If the pass light flashes then one of the pindriver boards is bad.
- h. Turn the power off. Set "START" to "MAN/HANDLR."
- i. Insert one pindriver board and load Self Check 3. DO NOT USE THE DUMMY IC. Press TEST. Pass light should illuminate. Verify front panel operation by pressing TEST several times and then try to reload the card. If these front panel controls function correctly then turn off the 5045A and insert another pindriver board. Again verify correct operation. Continue this procedure until the bad board is found. When the bad pindriver is isolated, remove all of the others. Remove the ground jumper from A12 and troubleshoot the bad board by using the Current Source Troubleshooting procedure.

8-145. Troubleshooting the Fast Edge (Socket Driver) Circuitry

8-146. Positive and negative fast edge magnetic card program (05045-18009) and the procedure listed in paragraph 5-9 should be used to check each circuit.

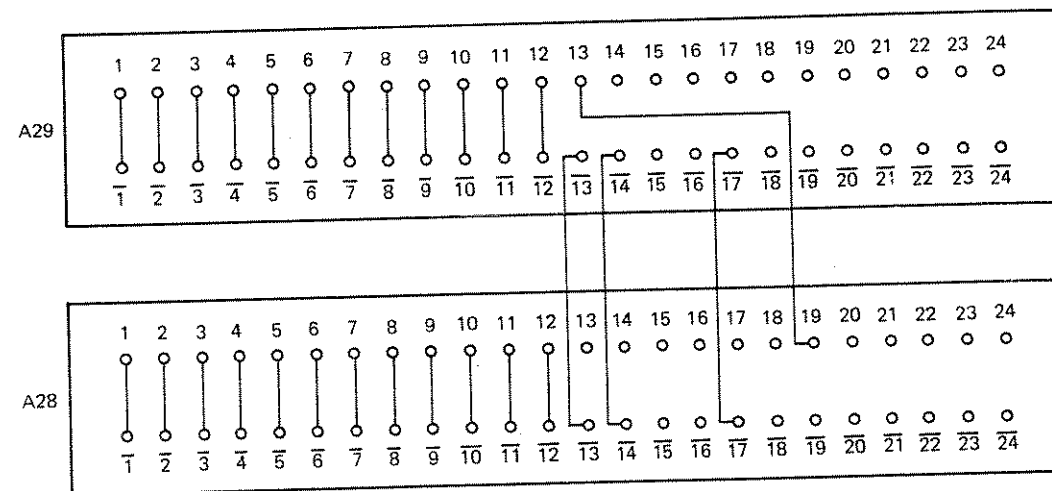

8-147. To gain access to the failed board use above procedure and isolate the failed pin. Interchange the boards if necessary to place the failed board in the A29 position (upper board). Remove the A30 Socket board and the A31 Interconnect board. Connect the A28 and 29 boards together using two 24-pin connectors wired as follows:

- 8-148. Checks to be performed on the failed board using the fast edge program cards:
 - a. Check that data is shifted into circuits U7 and U8.
 - b. The control and generation of information to the fast edge circuitry is controlled by the A12 Pin Driver Control U1-U3, U6-U9. Information designating which pin drivers are driving inputs and which are monitoring outputs is contained in U2. This information is ANDed with the next logic state information in U3D. This information is fed to the A28 and A29 socket driver (fast edge) boards via U3(11) and connector J6. This data is fed in parallel to both boards. Data is clocked onto the A28 board using the output of U3(8) via connector J4 and to the A29 board using the U3(6) via connector J5 output.

- c. Check that the data is transferred from U7 and U8 to U4 and U5.
- d. The transfer from A28/A29 U7 and U8 to U4 and U5 is controlled by the signal generated at U3(3) and output via connector J5.
- e. Check that the transistors are turned on for at least 3 μ s.
- f. Check that the '1' state storage capacitor for each fast edge circuit is charged to the '1' state level while the test socket pin is in the '0' state and the '0' state storage capacitor is charged to the '0' state level while the test socket pin is in the '1' state. These capacitors are charged from the voltage source on the corresponding pin driver circuit.

8-149. A8 ROM LISTINGS

8-150. The ROM listing in connection with the ROM flow chart and an HP 1601 Logic State Analyzer can be used to verify the information flow in the instrument.

Model 5045A
Maintenance and Troubleshooting

```

-(0-8) INITIAL
-WAIT FOR LOAD BUTTON TO BE PRESSED
0000 0 Q.ECL.OR
0001 1 Q.ECL.OR
0002 2 Q.ECL.OR
0003 3 Q.ECL.OR
0004 4 Q.ECL.OR TO T 196 - 207
0006 6 FR.PANEL TO C 200 - 200
0010 8 ROM ADR. FROM T 196 - 207
GO TO 0 LOAD BUTTON NOT PUSHED
GO TO 16 LOAD BUTTON PUSHED

-(16-36) CLEAR MM
-LOOP 255 TIMES
0020 16 Q.ECL.OR TO T 187 - 199
0022 18 A-ONE FROM C 187 - 190
0024 20 A-ONE TO C 187 - 190 ,C 195
0027 23 A-ONE FROM C 191 - 195
0031 25 A-ONE TO C 191 - 194 ,C 198
0034 28 COPY FROM C 198 - 198 ,T 198
0037 31 COPY TO T 200 - 225 ,C 197
0042 34 M.MEM. FROM T 202 - 225
0044 36 ROM ADR. FROM T 196 - 207
GO TO 18 MAIN MEM CLEAR LOOP LESS THAN 255
GO TO 38 MAIN MEM CLEAR LOOP FINISHED

-(38-44) WAIT FOR LOAD BUTTON
0046 38 FR.PANEL TO C 199 - 199
0050 40 Q.ECL.OR TO T 33 - 60 ,C 56 ,T 2
0054 44 ROM ADR. FROM T 196 - 207
GO TO 38 LOAD BUTTON NOT PUSHED
GO TO 46 LOAD BUTTON PUSHED

0056 46 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 47
0060 48 ROM ADR. FROM T 49 - 60
GO TO 128 RTN 50 GO TO MAG CARD SUB

-(50-90) INITIAL D/A SET UP
0062 50 CONSTANT TO T 285 - 286
( 33 ) TO T 287 - 294
( 30 ) TO T 295 - 302
( 277 ) TO T 303 - 310
( 11 ) TO T 311 - 318
( 200 ) TO T 319 - 326
( 4 ) TO T 327 - 334
( 10 ) TO T 335 - 342
( 0 ) TO T 343 - 350
0074 60 A-ONE TO T 404 - 408 ,T 404
0077 63 Q.ECL.OR TO T 212 - 223 ,C 221
0102 66 DECODER TO T 375 - 391
0104 68 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 69
0106 70 ROM ADR. FROM T 380 - 391
GO TO 2048 RTN 72 GO TO D/A IN/OUT SUB

0110 72 DECODER TO T 302 - 311 ,C 289 ,T 329
0114 76 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 77
0116 78 ROM ADR. FROM T 315 - 326
GO TO 2048 RTN 80 GO TO D/A IN OUT SUB

```

Model 5045A
Maintenance and Troubleshooting

0120 80 A-ONE FROM C 289 - 289
 0122 82 A-ONE TO C 289 - 289 ,T 294
 0125 85 A-ONE FROM C 290 - 294
 0127 87 A-ONE TO C 290 - 293 ,C 300
 0132 90 ROM ADR. FROM T 296 - 307
 GO TO 76 PIN SET-UP NOT FINISHED
 GO TO 92 FINISHED '0' ING PIN SET-UP

-(94-100) CHECK SUM COMPARE 4LSB
 0134 92 M.M. ADV FROM T 343 - 350
 0136 94 COPY FROM T 128 - 131
 0140 96 COPY TO T 94 - 98
 0142 98 COMPARE FROM T 94 - 102
 0144 100 COMPARE TO T 94 - 94
 0146 102 COPY FROM T 132 - 135
 0150 104 COPY TO T 98 - 102
 0152 106 CONSTANT TO T 382 - 383
 (50) TO T 384 - 391
 (2) TO T 392 - 399
 (164) TO T 400 - 407
 (100) TO T 408 - 415
 (11) TO T 416 - 423
 (0) TO T 424 - 431
 (245) TO T 432 - 439
 (44) TO T 440 - 447
 (142) TO T 448 - 455
 (1) TO T 456 - 463
 (22) TO T 464 - 471
 (2) TO T 472 - 479
 (200) TO T 480 - 487
 (167) TO T 488 - 495
 (140) TO T 496 - 503
 (12) TO T 504 - 511

0174 124 M.MEM. FROM T 28 - 51
 0176 126 ROM ADR. FROM T 464 - 475
 GO TO 530 RTN 336 GO TO TITLE SEARCH SUB IN MM

-(128-335) CARD READER SUBROUTINE
 0200 128 Q.ECL.OR TO T 96 - 122
 0202 130 Q.ECL.OR TO T 128 - 156
 0204 132 COPY FROM T 500 - 509
 0206 134 COPY TO C 214 - 243
 0210 136 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 137
 0212 138 A-ONE TO C 499 - 503
 0214 140 DECODER TO T 3 - 32 ,C 18 ,C 19
 0220 144 EXT.CONT FROM T 2 - 9
 0222 146 EXT.CONT TO C 502 - 502
 -WAIT FOR CARD IN
 0224 148 CARD RDR FROM C 4 - 7
 0226 150 ROM ADR. FROM T 499 - 510
 GO TO 144 CARD NOT IN
 GO TO 152 CARD IN

-(152-166) SET UP FOR TIME DELAY
 -16MS DELAY
 0230 152 Q.ECL.OR TO C 26 - 28
 0232 154 ROM ADR. FROM T 9 - 20
 GO TO 1536 RTN 156 8 MSEC DELAY

Model 5045A
Maintenance and Troubleshooting

0234 156 A-ONE FROM C 2 - 2
 0236 158 A-ONE TO C 504 - 506 ,T 507 ,T 500 ,T 503
 ,T 505 ,T 501 ,T 511
 0246 166 ROM ADR. FROM T 9 - 20
 GO TO 1536 RTN 174 DO 8 MSEC DELAY THEN READ
 CARD SUB
 268 RTN TO WRITE CARD SUB

0250 168 CARD RDR TO T 95 - 98
 0252 170 ROM ADR. FROM T 21 - 32
 GO TO 224 RTN 172 24 BIT WORD FROM CRD RDR
 COMPLETE
 174 24 BIT WORD FROM CRD RDR
 NOT COMPLETE

-(174) READ CARD SUBROUTINE
 0254 172 M.MEM. FROM T 99 - 122
 0256 174 CARD RDR FROM C 4 - 7
 0260 176 Q.ECL.OR TO T 500 - 501
 0262 178 EXT.CONT TO C 504 - 505
 0264 180 QUAD OR FROM C 504 - 505 ,C 504 ,C 505 ,C 504
 0271 185 QUAD OR TO C 502 - 502 ,T 503 ,T 505
 -WAIT FOR MFL
 0275 189 ROM ADR. FROM T 499 - 510
 GO TO 176 NO CLOCK
 GO TO 168 CARD AND CLOCK
 GO TO 208 END OF CARD

0300 192 EXT.CONT TO T 501 - 501
 0302 194 ROM ADR. FROM T 499 - 510
 GO TO 192 CARD NOT IN
 GO TO 196 CARD IN

0304 196 M.M. ADV FROM T 9 - 16
 0306 198 COPY FROM T 154 - 154
 0310 200 COPY TO T 90 - 90
 0312 202 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 203
 0314 204 ROM ADR. FROM T 9 - 20
 GO TO 1536 RTN 206 DO 8 MSEC DELAY

0316 206 ROM ADR. FROM T 9 - 20
 GO TO 1536 RTN 210 DO 8 MSEC DELAY

0320 208 NOP
 0321 209 NOP
 0322 210 COPY FROM C 214 - 223
 0324 212 COPY TO T 500 - 510
 0326 214 A-ONE FROM C 90 - 90
 0330 216 A-ONE TO T 233 - 233 ,C 231 ,C 226
 0334 220 EXT.CONT FROM T 9 - 16
 0336 222 ROM ADR. FROM T 224 - 235
 GO TO 132 NO END CODE FOUND
 GO TO 512 END CODE FOUND

```

-(224-235) CALCULATE CHECK SUM
-(237-239 + 258-264) CHECK FOR END CODE
0340 224 A+B FROM T 128 - 131 ,T 511 ,T 120 ,T 121
,T 122
0346 230 A+B TO T 128 - 131 ,T 136
0351 233 A+B FROM T 132 - 136
0353 235 A+B TO T 132 - 135
0355 237 OR FROM C 120 - 122
0357 239 OR TO C 140 - 140
0361 241 COPY FROM T 110 - 119
0363 243 COPY TO T 113 - 122
0365 245 COPY FROM T 100 - 109
0367 247 COPY TO T 103 - 112
0371 249 COPY FROM T 96 - 99
0373 251 COPY TO T 99 - 102
0375 253 A-ONE FROM C 137 - 139
0377 255 A-ONE TO C 137 - 139 ,C 500
0402 258 COPY FROM T 140 - 149
0404 260 COPY TO T 141 - 150
-CHECK IF 1 IN S.R. - END CODE FOUND
0406 262 OR FROM C 141 - 148
0410 264 OR TO C 90 - 90
0412 266 ROM ADR. FROM T 224 - 235
GO TO 512

-(268-335) WRITE SUBROUTINE
0414 268 CARD RDR FROM C 4 - 7
0416 270 ROM ADR. FROM T 9 - 20
GO TO 1536 DO 8 MSEC DELAY RTN 272

0420 272 M.MEM. TO T 99 - 122
0422 274 ROM ADR. FROM T 9 - 20
GO TO 1536 DO 8 MSEC DELAY RTN 276

0424 276 CARD RDR FROM C 4 - 7
0426 278 CARD RDR FROM T 120 - 123
0430 280 Q.ECL.OR TO T 236 - 243 ,C 240 ,C 240
0434 284 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 285
0436 286 ROM ADR. FROM T 9 - 20
GO TO 1536 DO 8 MSEC DELAY RTN 288

0440 288 CARD RDR FROM T 120 - 123
0442 290 ROM ADR. FROM T 21 - 32
GO TO 224 RTN 292 GET NEW WORD FROM MAIN MEM
IF FINISHED OLD WORD
294 STILL PROCESSING OLD WORD

0444 292 M.MEM. TO T 99 - 122
0446 294 QUAD OR FROM T 500 - 500 ,C 90 ,C 500
0452 298 QUAD OR TO T 502 - 502 ,T 155
0455 301 Q.ECL.OR TO T 238 - 243
0457 303 Q.ECL.OR TO T 500 - 501 ,C 503
0462 306 ROM ADR. FROM T 9 - 20
GO TO 1536 RTN 308 HAVE END CODE
316 NO END CODE

```


Model 5045A
Maintenance and Troubleshooting

```

0742 482 EXT.CONT FROM C 492 - 499
0744 484 A-ONE FROM C 192 - 192
0746 486 A-ONE TO C 456 - 456 ,C 464
0751 489 ROM ADR. FROM T 455 - 466
GO TO 530 RTN 492 TEST BUTTON PRESSED
494 WRITE BUTTON PRESSED
GO TO 16 LOAD BUTTON PRESSED

0754 492 ROM ADR. FROM T 461 - 472
GO TO 1352 GO TO TEST PROG PREPERATION SUB

0756 494 Q.ECL.OR TO T 467 - 484
0760 496 ROM ADR. FROM T 455 - 466
GO TO 530 RTN 498 LOOK FOR TITLE CODE FFFBEF

0762 498 DECODER FROM T 193 - 193
0764 500 DECODER TO C 219 - 219 ,C 221 ,C 2 ,T 204
0771 505 M.M. ADV FROM T 464 - 471
0773 507 A-ONE TO T 499 - 504 ,T 500
0776 510 ROM ADR. FROM T 212 - 223
GO TO 512 RTN SUB
GO TO 128 RTN 464 WRITE MAG CARD SUB

-(512-528) RETURN SUBROUTINE
1000 512 A-ONE FROM C 501 - 502
1002 514 A-ONE TO C 501 - 502 ,T 511
1005 517 A+B FROM T 503 - 506 ,T 511
1010 520 A+B TO T 503 - 506 ,T 511
1013 523 A+B FROM T 507 - 511
1015 525 A+B TO T 507 - 511 ,T 499
1020 528 ROM ADR. FROM T 499 - 510
GO TO RETURN ADDRESS

-(530-584) TITLE SEARCH SUBROUTINE
1022 530 Q.ECL.OR TO T 212 - 223 ,C 221 ,C 485
1026 534 M.MEM. TO T 256 - 279
1030 536 COMPARE FROM T 256 - 259 ,T 511 ,T 487 ,T 488
,T 489 ,T 490
1037 543 COMPARE TO T 280 - 280
1041 545 COMPARE FROM T 260 - 263 ,T 511 ,T 491 ,T 492
,T 493 ,T 494
1050 552 COMPARE TO T 263 - 263
1052 554 OR FROM C 271 - 277
1054 556 OR TO C 266 - 266
1056 558 OR FROM C 263 - 270
1060 560 OR TO C 277 - 277
1062 562 A-ONE FROM C 477 - 480 ,T 485
1065 565 A-ONE TO C 477 - 480 ,C 485
1070 568 A-ONE FROM C 481 - 485
1072 570 A-ONE TO C 481 - 485
1074 572 OR FROM C 277 - 280
1076 574 OR TO C 486 - 486
1100 576 QUAD OR FROM T 485 - 486 ,T 485 ,T 486
1104 580 QUAD OR TO C 215 - 216
1106 582 M.MEM. TO T 256 - 279
1110 584 ROM ADR. FROM T 212 - 223
GO TO 536 TITLE CODE NOT FOUND
GO TO 512 TITLE CODE FOUND, GOTO RTN ADDRESS
OR LOOPED 256 TIMES

```

```

-BLANK LOADER FOR PRINTER SUBROUTINE
1112 586 Q.ECL.OR TO T 212 - 223
1114 588 Q.ECL.OR TO C 217 - 218 ,C 215 ,C 222
1120 592 CONSTANT TO T 228 - 229
( 40 ) TO T 230 - 237
( 10 ) TO T 238 - 245
( 202 ) TO T 246 - 253
( 40 ) TO T 254 - 261
( 10 ) TO T 262 - 269
( 202 ) TO T 270 - 277
( 40 ) TO T 278 - 285
( 10 ) TO T 286 - 293
( 202 ) TO T 294 - 301
( 40 ) TO T 302 - 309
( 10 ) TO T 310 - 317
( 202 ) TO T 318 - 325
( 40 ) TO T 326 - 333
( 10 ) TO T 334 - 341
( 202 ) TO T 342 - 349
1141609 ROM ADR. FROM T 212 - 223
GO TO 1128 IF STARTED 586
GO TO RETURN ADDRESS IF STARTED 592

-(612-744) REFERENCE GENERATOR
-SET UP SUBROUTINE
1144 612 M.MEM. TO T 280 - 303
1146 614 A-ONE TO T 438 - 443
1150 616 M.MEM. TO T 410 - 433
1152 618 COPY FROM C 266 - 267 ,C 416 ,C 290 ,T 291
1157 623 COPY TO C 404 - 431 ,T 266 ,T 267 ,T 290
,C 291
1165 629 CONSTANT TO T 500 - 501
( 116 ) TO T 502 - 509
1170 632 COPY FROM T 303 - 303
1172 634 COPY TO T 491 - 493 ,T 489 ,C 494
1176 638 ROM ADR. FROM T 487 - 498
GO TO 640 NEED TO DO '1' COMPLEMENT OF SETUP
GO TO 656 '1' COMPLEMENT NOT NEEDED

1200 640 A-ONE FROM T 293 - 294
1202 642 A-ONE TO C 293 - 294 ,T 350
1205 645 A-ONE FROM T 295 - 298 ,C 350
1210 648 A-ONE TO C 295 - 298 ,T 350
1213 651 A-ONE FROM T 299 - 302 ,T 350
1216 654 A-ONE TO C 299 - 303
1220 656 A-ONE FROM T 427 - 428
1222 658 A-ONE TO T 427 - 438
1224 660 COPY FROM T 303 - 303 ,T 302 ,T 301 ,T 300
,T 299
,T 298 ,T 297 ,T 296 ,T 295 ,T 294
1237 671 COPY TO T 296 - 305
1241 673 COPY FROM T 293 - 293 ,T 292
1244 676 COPY TO T 306 - 307
1246 678 A-ONE FROM C 431 - 431
1250 680 A-ONE TO C 501 - 502 ,T 503 ,T 505 ,T 506
,C 501
1256 686 ROM ADR. FROM T 432 - 443
GO TO 896 RTN 632 DATA RFG FROM MM TO D/A NOT
FINISHED
688 DATA RFG FINISHED

```

Model 5045A
Maintenance and Troubleshooting

```

1260 688 M.M. ADV FROM T 212 - 219
1262 690 M.MEM. TO T 232 - 255
1264 692 DECODER TO T 375 - 391
1266 694 M.MEM. TO T 256 - 279
1270 696 COPY FROM C 232 - 239
1272 698 COPY TO T 288 - 295 ,T 287
1275 701 OR FROM C 236 - 237
1277 703 OR TO T 494 - 494
1301 705 A-ONE FROM C 494 - 494
1303 707 A-ONE TO C 435 - 435 ,T 433
1306 710 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 711
1310 712 ROM ADR. FROM C 424 - 435
GO TO 2048 PARAMETRIC INFO IN MM SENT TO/
FROM D/A
GO TO 512 RTN 714 TRANSFER COMPLETED

1312 714 A-ONE FROM C 375 - 376
1314 716 A-ONE TO C 375 - 377
1316 718 DECODER FROM C 239 - 239 ,T 494
1321 21 DECODER TO C 492 - 492 ,T 493
1324 724 QUAD OR FROM C 493 - 493 ,C 493 ,C 494 ,C 377
,C 494
1332 730 QUAD OR TO C 489 - 491
1334 732 COPY FROM T 241 - 250
1336 734 COPY TO T 233 - 242
1340 736 COPY FROM T 251 - 255
1342 738 COPY TO T 243 - 255
1344 740 CONSTANT TO C 500 - 501
( 121 ) TO C 502 - 509
1347 743 ROM ADR. FROM T 487 - 498
GO TO 696 END LIST OF PIN NO. NOT REACHED
GO TO 688 NEED TO INPUT ANOTHER WORD FROM MM
GO TO 612 SET-UP DATA FOR NEW PARAMETRIC INFO
GO TO 512 END OF PAMETRIC INFO SET-UP

-(746-821) SUBROUTINE
-(A+-B)A
-AB
-(A+-1)B
-AB)
-(A+-16)B
-(B-A)
-BB
1352 746 Q.ECL.OR TO T 409 - 413 ,T 415
1355 749 Q.ECL.OR TO T 421 - 429
1357 751 COPY FROM T 417 - 418
1361 753 COPY TO C 430 - 430 ,C 425
1364 756 QUAD OR FROM C 410 - 410 ,C 412 ,T 420 ,C 402
,T 402,1372 762 QUAD OR TO T 214 - 214 ,C 431 ,T 432
1376 766 A-ONE FROM C 409 - 412
1400 768 A-ONE TO C 409 - 412
1402 770 COMPARE FROM T 409 - 416
1404 772 COMPARE TO T 426 - 426
1406 774 Q.ECL.OR FROM C 426 - 426 ,T 418 ,T 417 ,C 431
,T 288 ,T 419
1415 781 Q.ECL.OR TO T 426 - 426 ,T 431 ,T 421
1421 785 COPY FROM T 278 - 287
1423 787 COPY TO T 279 - 288

```

```

1425 789 A+B FROM T 421 - 426
1427 791 A+B TO T 426 - 426 ,T 425
1432 794 A+B FROM T 426 - 431
1434 796 A+B TO T 426 - 426 ,T 430
1437 799 AND OR FROM T 432 - 433 ,C 433 ,T 426
1443 803 AND OR TO T 278 - 278
1445 805 COPY FROM T 392 - 401
1447 807 COPY TO T 393 - 402
1451 809 AND OR FROM C 434 - 434 ,T 426 ,T 434 ,T 432
1456 814 AND OR TO T 392 - 392
1460 816 A-ONE FROM C 214 - 214
1462 818 A-ONE TO T 216 - 219
1464 820 ROM ADR. FROM T 212 - 223
GO TO 756 TRANSFER DATA NOT COMPLETED
GO TO 512 TRANSFER DATA COMPLETED

```

-PASS/FAIL ANALYSIS

```

-RETURN FROM MM LOGIC PROGRAM SOURCE
1466 822 PIN DRV FROM T 1 - 30
1470 824 M.M. ADV FROM C 272 - 279
1472 826 FR. PANEL TO C 457 - 462 ,T 202 ,C 461
1476 830 OR FROM T 447 - 447 ,C 460 ,C 203
1502 834 OR TO C 275 - 275
1504 836 OR FROM T 457 - 459
1506 838 OR TO C 508 - 508
1510 840 COPY FROM T 507 - 511 ,T 511 ,T 508
1514 844 COPY TO C 500 - 506
1516 846 DECODER FROM T 449 - 449 ,C 508
1521 849 DECODER TO T 503 - 504
1523 851 CONSTANT TO T 303 - 304
( 271 ) TO T 305 - 312
( 201 ) TO T 313 - 320
( 11 ) TO T 321 - 328
( 132 ) TO T 329 - 336
1531 857 ROM ADR. FROM T 325 - 336
GO TO 1440 RTN 464 LOAD, WRITE OR TEST
BUTTON PUSHED
860 LOAD, WRITE OR TEST BUTTON
NOT PUSHED AND STOP ON FAIL
876 CONTINUE ON FAIL

1534 860 PIN DRV TO T 241 - 271
1536 862 OR FROM T 248 - 255
1540 864 OR TO T 272 - 272
1542 866 OR FROM T 256 - 263
1544 868 OR TO T 273 - 273
1546 870 OR FROM T 264 - 271
1550 872 OR TO T 274 - 274
1552 874 OR FROM T 272 - 275
1554 876 OR TO T 307 - 307
1556 878 ROM ADR. FROM T 304 - 315
GO TO 882 CONTINUE TESTING
GO TO 890 FAILURE OCCURED

1560 880 M.M. ADV FROM T 477 - 484
1562 882 CONSTANT TO T 497 - 498
( 66 ) TO T 499 - 506
1565 885 ROM ADR. FROM T 436 - 447
GO TO 1470 (NEXT TEST) MAIN MEM AS PROG SOURCE

```

Model 5045A
Maintenance and Troubleshooting

1570 888 M.M. ADV FROM C 272 - 279
 1572 890 Q.ECL. OR TO C 203 - 204 ,T 206 ,T 458
 1576 894 ROM ADR. FROM T 314 - 325
 GO TO 1216 FAILURE OCCURED

-(896-958) 6 BIT PER PASS
 -RIGHT SHIFT SUBROUTINE UP TO
 -16 PASSES PROGRAMMABLE

1600 896 COPY FROM T 344 - 349
 1602 898 COPY TO T 224 - 229
 1604 900 COPY FROM T 334 - 343
 1606 902 COPY TO T 340 - 349
 1610 904 COPY FROM T 324 - 333
 1612 906 COPY TO T 330 - 339
 1614 908 COPY FROM T 314 - 323
 1616 910 COPY TO T 320 - 329
 1620 912 COPY FROM T 304 - 313
 1622 914 COPY TO T 310 - 319
 1624 916 COPY FROM T 294 - 303
 1626 918 COPY TO T 300 - 309
 1630 920 COPY FROM T 284 - 293
 1632 922 COPY TO T 290 - 299
 1634 924 COPY FROM T 274 - 283
 1636 926 COPY TO T 280 - 289
 1640 928 COPY FROM T 264 - 273
 1642 930 COPY TO T 270 - 279
 1644 932 COPY FROM T 254 - 263
 1646 934 COPY TO T 260 - 269
 1650 936 COPY FROM T 244 - 253
 1632 922 COPY TO T 290 - 299
 1634 924 COPY FROM T 274 - 283
 1636 926 COPY TO T 280 - 289
 1640 928 COPY FROM T 264 - 273
 1642 930 COPY TO T 270 - 279
 1644 932 COPY FROM T 254 - 263
 1646 934 COPY TO T 260 - 269
 1650 936 COPY FROM T 244 - 253
 1652 938 COPY TO T 250 - 259
 1654 940 COPY FROM T 234 - 243
 1656 942 COPY TO T 240 - 249
 1660 944 COPY FROM T 224 - 233
 1662 946 COPY TO T 230 - 239
 1664 948 A-ONE FROM T 431 - 434
 1666 950 A-ONE TO T 431 - 434 ,T 219
 1671 953 COPY FROM T 219 - 219
 1673 955 COPY TO T 220 - 220
 1675 957 ROM ADR. FROM T 212 - 223
 GO TO 896 ROTATE DATA
 GO TO 512 END ROTATION OF DATA

-(960-1099) FAILURE PRINTOUT FORMATTERO BE
 -(208-211) NUMBER OF PIN IN IC
 -STORED IN NODES

1700 960 A-ONE TO C 441 - 446 ,T 241
 1703 963 A-B-ONE FROM T 208 - 213 ,C 511
 1706 966 A-B-ONE TO T 494 - 510
 1710 968 FR. PANEL FROM T 204 - 207
 1712 970 ROM ADR. TO T 448 - 459 ,STORE ROM ADR: 971

Model 5045A
Maintenance and Troubleshooting

```

1714 972 COPY FROM T 366 - 375
1716 974 COPY TO T 367 - 375 ,T 351
1721 977 COPY FROM T 356 - 365
1723 979 COPY TO T 357 - 366
1725 981 COPY FROM T 350 - 355
1727 983 COPY TO T 351 - 356
1731 985 A-B-ONE FROM T 494 - 498 ,T 441
1734 988 A-B-ONE TO T 494 - 510 ,C 509
1737 991 DECODER FROM T 442 - 446
1741 993 DECODER TO T 422 - 427 ,C 500
1744 996 A-ONE FROM T 441 - 442
1746 998 A-ONE TO T 441 - 442 ,T 350
1751 1001 A-ONE FROM T 443 - 446 ,C 350
1754 1004 A-ONE TO T 443 - 446 ,T 350
1757 1007 QUAD OR FROM C 350 - 350 ,C 352
1762 1010 QUAD OR TO T 492 - 493
1764 1012 COPY FROM T 493 - 497
1766 1014 COPY TO T 410 - 440
1770 1016 COPY FROM T 414 - 414 ,T 414
1773 1019 COPY TO T 382 - 404 ,T 448
1776 1022 ROM ADR. FROM T 499 - 510
GO TO 1024 DETERMINATION OF OF PINS NOT
FINISHED
GO TO 1026 DETERMINATION FINISHED

2000 1024 A-ONE TO T 493 - 498
2002 1026 AND OR FROM T 444 - 446 ,T 446
2005 1029 AND OR TO C 503 - 503
2007 1031 DECODER FROM T 492 - 492 ,C 351
2012 1034 DECODER TO C 500 - 500 ,T 502
2015 1037 QUAD OR FROM C 502 - 503
2017 1039 QUAD OR TO T 501 - 501 ,C 503 ,C 387
2023 1043 CONSTANT TO C 430 - 431
( 317 ) TO C 432 - 439
2026 1046 ROM ADR. FROM T 429 - 440
GO TO 390 RTN 1048 NO FAILURE
1050 NO MORE INFO FOR PRINTER
1054 FULL LINE READY TO BE
PRINTED
1058 FAILURE INFO

2030 1048 ROM ADR. FROM T 448 - 459
GO TO 970 NO FAILURE

2032 1050 DECODER TO T 463 - 465
2034 1052 ROM ADR. FROM T 462 - 473
GO TO 1746 NO MORE INFO FOR PRINTER

2036 1054 COPY FROM T 382 - 387 ,C 337 ,C 441
2042 1058 COPY TO T 327 - 329 ,T 332 ,T 333 ,T 330
,T 214 ,T 326
2051 1065 QUAD OR FROM T 332 - 333 ,T 337 ,T 214 ,T 214
2056 1070 QUAD OR TO T 336 - 337 ,T 215
2061 1073 QUAD OR FROM C 346 - 350 ,T 501 ,T 501 ,C 350
2066 1078 QUAD OR TO T 431 - 434
2070 1080 A-ONE FROM C 214 - 214
2072 1082 A-ONE TO C 219 - 221 ,T 222 ,C 218
2076 1086 A-ONE TO C 501 - 505
2100 1088 ROM ADR. TO T 448 - 459 ,STORE ROM ADR: 1089
2102 1090 ROM ADR. FROM T 212 - 223
GO TO 896 RTN 1094
GO TO 1100 RTR 1092

```

Model 5045A
Maintenance and Troubleshooting

```

2427 1303 COPY TO T 415 - 424
2431 1305 COPY FROM T 429 - 433
2433 1307 COPY TO T 425 - 433
2435 1309 A+B FROM T 401 - 409
2437 1311 A+B TO T 401 - 409
2441 1313 A+B FROM T 402 - 406 ,T 472 ,T 472
2445 1317 A+B TO T 402 - 404 ,T 473
2450 1320 A-B-ONE FROM T 402 - 405 ,C 511 ,C 473 ,C 473
2455 1325 A-B-ONE TO T 402 - 405
2457 1327 A-ONE FROM T 464 - 466
2461 1329 A-ONE TO T 464 - 466 ,C 222
2464 1332 OR FROM T 472 - 473
2466 1334 OR TO T 221 - 221
2470 1336 DECODER FROM T 221 - 222
2472 1338 DECODER TO T 213 - 213 ,T 221
2475 1341 COPY FROM T 213 - 213 ,T 213 ,T 213 ,T 511
,C 221
2503 1347 COPY TO T 216 - 220
2505 1349 ROM ADR. FROM T 212 - 223
GO TO 1280 LOOP OP NOT FINISHED
GO TO 512 LOOP OP FINISHED
GO TO 372 DECIMAL SUBSTRACT OP

```

-(1352-1487) START OF TEST PROGRAM
-START HERE WHEN TEST BUTTON PUSHED
-INITIALIZE TO TEST

```

2510 1352 Q.ECL.OR TO T 481 - 498
2512 1354 Q.ECL.OR TO T 204 - 207 ,C 206
2515 1357 RELAYS FROM C 256 - 275
2517 1359 NOP
2520 1360 CONSTANT TO T 466 - 467
( 11 ) TO T 468 - 475
( 1 ) TO T 476 - 483
2524 1364 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 1365
2526 1366 ROM ADR. FROM T 467 - 478
GO TO 530 RTN 1368 TITLE SEARCH SUB

2530 1368 A+B FROM T 502 - 508 ,T 485 ,T 485
2534 1372 A+B TO T 502 - 506
2536 1374 ROM ADR. FROM T 499 - 510
GO TO 1376 LAST TEST OF PROGRAM NOT COMPLETED
GO TO 1472 LAST TEST OF PROGRAM COMPLETED

```

```

2540 1376 COPY FROM T 487 - 490
2542 1378 COPY TO T 448 - 451
2544 1380 COPY FROM T 256 - 263
2546 1382 COPY TO T 487 - 494
2550 1384 COPY FROM T 268 - 275
2552 1386 COPY TO T 452 - 459
2554 1388 Q.ECL.OR TO T 477 - 484
2556 1390 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 1391
2560 1392 ROM ADR. FROM T 467 - 478
GO TO 530 TITLE SEARCH SUB

```

```

2562 1394 CONSTANT TO T 485 - 486
( 144 ) TO T 487 - 494
( 302 ) TO T 495 - 502

```

Model 5045A
Maintenance and Troubleshooting

```

2566 1398 Q.ECL.OR TO C 309 - 309
2570 1400 ROM ADR. FROM T 487 - 498
                GO TO 612 REF GEN SET-UP SUB

2572 1402 Q.ECL.OR TO T 465 - 484 ,C 466 ,C 469 ,C 474
,T 203
2600 1408 COPY FROM T 452 - 459
2602 1410 COPY TO T 487 - 494
2604 1412 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 1413
2606 1414 ROM ADR. FROM T 465 - 476
                GO TO 530 RTN 1416 TITLE SEARCH SUB

2610 1416 Q.ECL.OR TO T 155 - 185
2612 1418 M.M. ADV FROM T 155 - 162
2614 1420 Q.ECL.OR TO T 0 - 30
2616 1422 Q.ECL.OR TO T 31 - 61
2620 1424 Q.ECL.OR TO T 62 - 92
2622 1426 Q.ECL.OR TO T 93 - 123
2624 1428 Q.ECL.OR TO T 124 - 154
2626 1430 PIN DRV FROM T 1 - 30
2630 1432 COPY FROM T 448 - 451
2632 1434 COPY TO T 487 - 494 ,C 180
2635 1437 CONSTANT TO C 498 - 499
( 54 ) TO C 500 - 507
2640 1440 Q.ECL.OR TO T 224 - 239
2642 1442 Q.ECL.OR TO C 233 - 234
2644 1444 A-ONE FROM C 498 - 498
2646 1446 A-ONE TO T 240 - 243
2650 1448 ROM ADR. FROM T 224 - 235
                GO TO 1536 IF ENTERED FROM 858 RTN 860 LOAD,
                WRITE OR TEST BUTTON NOT PUSHED,
                STOP ON FAIL
                876 CONTINUE ON FAIL
                464 LOAD, WRITE OR TEST BUTTON PUSHED
                IF ENTERED FROM 1448 RTN 1450

2652 1450 EXT.CONT FROM T 177 - 184
2654 1452 Q.ECL.OR TO T 180 - 199 ,T 205
2657 1455 CONSTANT TO T 434 - 435
( 276 ) TO T 436 - 443
( 5 ) TO T 444 - 451
2663 1459 Q.ECL.OR TO C 350 - 375
2665 1461 CONSTANT TO C 500 - 501
( 231 ) TO C 502 - 509
2670 1464 FR. PANEL FROM C 437 - 440
2672 1466 ROM ADR. FROM C 437 - 448
                GO TO MAIN MEMORY AS PROGRAM SOURCE

2676 1470 A-ONE FROM C 487 - 490
2700 1472 A-ONE TO C 487 - 490 ,T 509 ,T 484
2704 1476 CONSTANT TO T 499 - 500
( 124 ) TO T 501 - 508
2707 1479 A-ONE FROM C 509 - 509
2711 1481 A-ONE TO C 504 - 506 ,T 505
2714 1484 EXT.CONT FROM T 499 - 502
2716 1486 ROM ADR. FROM T 499 - 510
                GO TO 432 ALL TESTS COMPLETED
                GO TO 1360 MORE TESTS TO BE DONE

```


Model 5045A
Maintenance and Troubleshooting

```

-(1488-1533) WALKING '1' AND '0'
2720 1488  CONSTANT TO T 218 - 219
          ( 342 ) TO T 220 - 227
          ( 137 ) TO T 228 - 235
          ( 24  ) TO T 236 - 243
2725 1493  COPY FROM T 31 - 32
2727 1495  COPY TO C 291 - 291 ,C 32
2732 1498  A-ONE FROM C 33 - 36 ,T 32
2735 1501  A-ONE TO C 33 - 37
2737 1503  DECODER FROM T 32 - 36
2741 1505  DECODER TO T 0 - 15
2743 1507  DECODER FROM T 32 - 35 ,C 36
2746 1510  DECODER TO T 16 - 31
2750 1512  A-ONE TO C 280 - 285 ,T 501 ,C 447
2754 1516  M.MEM. TO T 304 - 327
2756 1518  ROM ADR. FROM T 280 - 291
          GO TO MAIN MEMORY AS PROGRAM SOURCE
          GO TO 1520 CONTINUE

2760 1520  DECODER FROM T 32 - 36
2762 1522  DECODER TO C 0 - 15
2764 1524  DECODER FROM T 32 - 35 ,C 36
2767 1527  DECODER TO C 16 - 24 ,C 447 ,C 31 ,C 291
2774 1532  ROM ADR. FROM T 280 - 291
          GO TO MAIN MEMORY AS PROGRAM SOURCE

-(1536-1551) TIME DELAY SUBROUTINE
-MAX 8MS 30MS PER LOOP MAX 256 LOOPS
2776 1534  PIN DRV FROM T 1 - 30
3000 1536  Q.ECL.OR TO T 224 - 235
3002 1538  A-ONE FROM T 236 - 239
3004 1540  A-ONE TO T 236 - 239 ,T 233
3007 1543  A-ONE FROM T 240 - 243 ,T 233
3012 1546  A-ONE TO T 240 - 243 ,T 234 ,C 233
3016 1550  ROM ADR. FROM T 224 - 235
          GO TO 512 END OF DELAY SUB
          GO TO 1536 8MSEC DELAY SUB

-(1552-1745) TRUTH TABLE AND TRUTH TABLE
-MEMORY SUBROUTINE
3020 1552  CONSTANT TO T 314 - 315
          ( 0 ) TO T 316 - 323
          ( 140 ) TO T 324 - 331
3024 1556  M.MEM. TO T 296 - 319
3026 1558  M.M. ADV FROM C 121 - 128
3030 1560  COPY FROM C 199 - 199 ,T 199
3033 1563  COPY TO T 325 - 326
3035 1565  DECODER FROM C 102 - 102 ,C 325
3040 1568  DECODER TO T 323 - 324
3042 1570  Q.ECL.OR TO C 283 - 284 ,C 287
3045 1573  ROM ADR. FROM T 320 - 331
          GO TO 1576
          GO TO 1584
          GO TO 1600

3050 1576  Q.ECL.OR TO T 325 - 330
3052 1578  M.M. ADV FROM T 323 - 330
3054 1580  M.MEM. FROM T 129 - 152

```


Model 5045A
Maintenance and Troubleshooting

```

3260 1712 ROM ADR. TO T 499 - 510 , STORE ROM ADR: 1713
3262 1714 ROM ADR. FROM T 224 - 235
          GO TO 1534

3264 1716 Q. ECL. OR TO C 1 - 24
3266 1718 PIN DRV TO T 506 - 536
3270 1720 Q. ECL. OR TO C 281 - 282 , C 285 , T 511
3274 1724 ROM ADR. FROM T 320 - 331
          GO TO MAIN MEMORY AS P. ROGRAM SOURCE
          GO TO 1730

3276 1726 M. M. ADV FROM C 304 - 311
3300 1728 ROM ADR. FROM T 320 - 331
          GO TO MAIN MEMORY AS PROGRAM SOURCE

3302 1730 CONSTANT TO T 150 - 151
      ( 276 ) TO T 152 - 159
      ( 65 ) TO T 160 - 167
      ( 371 ) TO T 168 - 175
      ( 363 ) TO T 176 - 183
      ( 5 ) TO T 184 - 191
      ( 0 ) TO T 192 - 199

3312 1738 M. M. ADV FROM T 192 - 199
3314 1740 M. MEM. FROM T 164 - 187
3316 1742 Q. ECL. OR TO C 507 - 507
3320 1744 ROM ADR. FROM T 152 - 163
          GO TO 1470 (NEXT TEST)

3322 1746 -( 1746-1761) PRINT OUT " FAIL PIN ---"
      CONSTANT TO T 292 - 293
      ( 352 ) TO T 294 - 301
      ( 116 ) TO T 302 - 309
      ( 2 ) TO T 310 - 317
      ( 201 ) TO T 318 - 325
      ( 114 ) TO T 326 - 333
      ( 22 ) TO T 334 - 341
      ( 30 ) TO T 342 - 349

3333 1755 CONSTANT TO T 499 - 500
      ( 23 ) TO T 501 - 508

3336 1758 ROM ADR. TO T 448 - 459 , STORE ROM ADR: 1759
3340 1760 ROM ADR. FROM T 499 - 510
          GO TO 1100

3342 1762 -( 1762-1807) PIN STATE PRINTOUT SUBROUTINE
      CONSTANT TO T 230 - 231
      ( 344 ) TO T 232 - 239
      ( 307 ) TO T 240 - 247
      ( 140 ) TO T 248 - 255
      ( 101 ) TO T 256 - 263
      ( 5 ) TO T 264 - 271
      ( 324 ) TO T 272 - 279
      ( 304 ) TO T 280 - 287
      ( 162 ) TO T 288 - 295

3354 1772 ROM ADR. TO T 448 - 459 , STORE ROM ADR: 1773
3356 1774 ROM ADR. FROM T 284 - 295
          GO TO 1836

```

Model 5045A
Maintenance and Troubleshooting

```

3360 1776  CONSTANT TO T 230 - 231
          ( 0 ) TO T 232 - 239
          ( 202 ) TO T 240 - 247
          ( 40 ) TO T 248 - 255
          ( 10 ) TO T 256 - 263
          ( 72 ) TO T 264 - 271
          ( 11 ) TO T 272 - 279
          ( 344 ) TO T 280 - 287
          ( 162 ) TO T 288 - 295
3372 1786  ROM ADR. TO T 448 - 459 , STORE ROM ADR: 1787
3374 1788  ROM ADR. FROM T 284 - 295
          GO TO 1838

3376 1790  CONSTANT TO T 230 - 231
          ( 0 ) TO T 232 - 239
          ( 122 ) TO T 240 - 247
          ( 103 ) TO T 248 - 255
          ( 41 ) TO T 256 - 263
          ( 111 ) TO T 264 - 271
          ( 317 ) TO T 272 - 279
          ( 300 ) TO T 280 - 287
          ( 162 ) TO T 288 - 295
3410 1800  A-ONE FROM C 460 - 460
3412 1802  A-ONE TO T 448 - 455 , C 456 , T 350
3416 1806  ROM ADR. FROM T 284 - 295
          GO TO 1836 RTN 1810 CONTINUE ON FAIL
          RTN 1812

-( 1808-1834) CHECK FOR V. I. PRINT OUT
-TITLE SEARCH FOR PASS/ FAIL INFORMATION
-PRINT OUT
3420 1808  M. MEM. TO T 230 - 253
3422 1810  Q. ECL. OR TO T 461 - 461
3424 1812  A-ONE TO C 500 - 505
3426 1814  A-ONE FROM T 461 - 461
3430 1816  A-ONE TO C 501 - 501 , T 503 , T 507 , T 509
, T 510
3436 1822  COPY FROM C 487 - 490
3440 1824  COPY TO C 400 - 407
3442 1826  CONSTANT TO T 463 - 464
          ( 22 ) TO T 465 - 472
          ( 42 ) TO T 473 - 480
          ( 360 ) TO T 481 - 488
          ( 377 ) TO T 489 - 496
3450 1832  DECODER TO C 436 - 446
3452 1834  ROM ADR. FROM T 465 - 476
          GO TO 530 RTN 1908
          GO TO 2664 V-I PRINT OUT

3454 1836  COPY FROM T 208 - 212
3456 1838  COPY TO C 404 - 412 , T 411 , C 204
3462 1842  ROM ADR. TO T 499 - 510 , STORE ROM ADR: 1843
3464 1844  COPY FROM T 1 - 10
3466 1846  COPY TO T 0 - 9
3470 1848  COPY FROM T 15 - 24
3472 1850  COPY TO T 16 - 24 , T 351
3475 1853  COPY FROM T 11 - 12 , T 0 , T 351 , T 13
, T 14
3503 1859  COPY TO T 10 - 15

```

-(2048-2091) D/A INPUT OR OUTPUT INFO
 -SUBROUTINE FOR ONE PIN

4000 2048 D/A FROM T 286 - 293
 4002 2050 EXT .CONT TO T 381 - 384
 4004 2052 DECODER FROM T 379 - 379 ,C 384
 4007 2055 DECODER TO C 381 - 381 ,T 382
 4012 2058 COPY FROM T 382 - 382
 4014 2060 COPY TO T 383 - 383
 4016 2062 ROM ADR. FROM T 380 - 391
 GO TO 2050 WAITING FOR 'READY' SIGNAL FROM D/A
 GO TO 2064 WRITE DATA INTO D/A
 GO TO 2078 READ DATA FROM D/A

-TRANSFER INFORMATION TO D/A

4020 2064 D/A TO T 224 - 229
 4022 2066 D/A FROM T 302 - 314
 4024 2068 D/A FROM T 404 - 408
 4026 2070 D/A FROM T 314 - 332
 4030 2072 D/A FROM T 326 - 344
 4032 2074 D/A FROM T 338 - 350
 4034 2076 ROM ADR. FROM T 212 - 223
 GO TO 512 FINISHED WRITING DATA INTO D/A

-TRANSFER INFORMATION FROM D/A

4036 2078 D/A TO T 302 - 307
 4040 2080 D/A TO T 302 - 314
 4042 2082 D/A TO T 404 - 408
 4044 2084 D/A TO T 314 - 332
 4046 2086 D/A TO T 326 - 344
 4050 2088 D/A TO T 338 - 350
 4052 2090 ROM ADR. FROM T 212 - 223
 GO TO 512 FINISHED READING DATA FROM D/A

-(2092-2151) CONVERT BINARY DATA FROM D/A
 -TO DECIMAL INTERCHANGE DATA POSITION

4054 2092 COPY FROM T 231 - 240
 4056 2094 COPY TO C 231 - 240
 4060 2096 Q.ECL.OR TO C 410 - 410 ,C 412 ,C 415
 4064 2100 A-ONE FROM C 240 - 240
 4066 2102 A-ONE TO T 381 - 381 ,T 383 ,T 386
 4072 2106 A-ONE FROM C 239 - 239
 4074 2108 A-ONE TO T 385 - 385 ,T 387
 4077 2111 COPY FROM T 238 - 238 ,T 237 ,T 236 ,T 235
 ,T 234 ,T 233 ,T 232 ,T 231
 4110 2120 COPY TO T 389 - 396
 4112 2122 COPY FROM T 233 - 234 ,T 511 ,T 233 ,T 232
 ,T 231
 4120 2128 COPY TO T 419 - 433
 4122 2130 COPY FROM T 457 - 466
 4124 2132 COPY TO T 281 - 290
 4126 2134 COPY FROM T 467 - 473
 4130 2136 COPY TO T 291 - 297
 4132 2138 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2139
 4134 2140 ROM ADR. FROM T 255 - 266
 GO TO 390 RTN 2142

Model 5045A
Maintenance and Troubleshooting

4136 2142 COPY FROM T 234 - 234 ,T 232 ,T 231
 4142 2146 COPY TO T 419 - 421
 4144 2148 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2149
 4146 2150 ROM ADR. FROM T 255 - 266
 GO TO 390 RTN 2152

-(2152-2191) MULTIPLIER PROGRAMMABLE
 -THRU 448 -455

4150 2152 COPY FROM T 381 - 390
 4152 2154 COPY TO T 231 - 240
 4154 2156 COPY FROM T 391 - 399
 4156 2158 COPY TO T 241 - 249
 4160 2160 Q.ECL.OR TO T 381 - 404
 4162 2162 A-ONE FROM T 448 - 451
 4164 2164 A-ONE TO T 448 - 451 ,T 456
 4167 2167 A-ONE FROM T 452 - 456
 4171 2169 A-ONE TO T 452 - 455
 4173 2171 OR FROM T 448 - 455
 4175 2173 OR TO T 500 - 500
 4177 2175 A-ONE FROM C 500 - 500
 4201 2177 A-ONE TO T 502 - 507 ,C 501 ,C 502 ,T 503
 4206 2182 COPY FROM T 231 - 240
 4210 2184 COPY TO T 410 - 419
 4212 2186 COPY FROM T 241 - 249
 4214 2188 COPY TO T 420 - 433
 4216 2190 ROM ADR. FROM T 255 - 266
 GO TO 390 RTN 2162
 GO TO 2192

4220 2192 ROM ADR. FROM T 267 - 278
 GO TO 2330
 GO TO 2338
 GO TO 2346

-(2194-2328) READ SET UP DATA FROM D/A
 -SELECTS ONE OF -I +I -V +V
 -REPLACE NON CONTINUOUS OPPOSITE I WITH O

4222 2194 COPY FROM T 381 - 390
 4224 2196 COPY TO T 465 - 474
 4226 2198 COPY FROM T 395 - 402
 4230 2200 COPY TO T 479 - 486
 4232 2202 COPY FROM T 425 - 430
 4234 2204 COPY TO T 457 - 463
 4236 2206 COPY FROM T 493 - 497
 4240 2208 COPY TO C 289 - 293
 4242 2210 DECODER TO T 379 - 390 ,C 391 ,C 287
 4246 2214 ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2215
 4250 2216 ROM ADR. FROM T 380 - 391
 GO TO 2048 RTN 2218

4252 2218 DECODER TO T 290 - 301
 4254 2220 CONSTANT TO T 214 - 215
 (70) TO T 216 - 223
 4257 2223 QUAD OR FROM T 392 - 392 ,T 406 ,C 406
 4263 2227 QUAD OR TO T 406 - 406 ,T 464
 4266 2230 Q.ECL.OR FROM C 406 - 406 ,T 394
 4271 2233 Q.ECL.OR TO T 394 - 394

Model 5045A
Maintenance and Troubleshooting

4273	2235	DECODER	FROM	C 392	- 393			
4275	2237	DECODER	TO	T 388	- 390			
4277	2239	DECODER	FROM	T 392	- 394			
4301	2241	DECODER	TO	T 381	- 387			
4303	2243	AND OR	FROM	T 407	- 407	,T 383	,T 387	,T 387
4310	2248	AND OR	TO	T 386	- 386			
4312	2250	AND OR	FROM	C 404	- 404	,T 381	,T 385	,T 385
4317	2255	AND OR	TO	T 385	- 385			
4321	2257	QUAD OR	FROM	T 385	- 386	,T 385	,T 390	
4325	2261	QUAD OR	TO	T 432	- 433	,C 431		
4330	2264	OR	FROM	T 432	- 433	,T 388		
4333	2267	OR	TO	C 434	- 434			
4335	2269	NOP						
4336	2270	ROM ADR.	TO	T 499	- 510	,STORE ROM ADR:	2271	
4340	2272	ROM ADR.	FROM	T 212	- 223			
			GO TO	896	RTN	2274		
4342	2274	CONSTANT	TO	T 253	- 254			
		(206)	TO	T 255	- 262			
		(241)	TO	T 263	- 270			
		(221)	TO	T 271	- 278			
4347	2279	AND OR	FROM	T 408	- 408	,T 386	,C 405	,T 385
4354	2284	AND OR	TO	T 271	- 271			
4356	2286	DECODER	FROM	C 392	- 392	,T 241	,T 271	
4362	2290	DECODER	TO	T 448	- 449			
4364	2292	DECODER	FROM	C 241	- 241	,T 271		
4367	2295	DECODER	TO	T 450	- 452	,C 270		
4372	2298	QUAD OR	FROM	T 271	- 271	,T 392	,T 271	,T 392
4377	2303	QUAD OR	TO	C 271	- 271	,T 272		
4402	2306	Q.ECL.OR	TO	T 451	- 455			
4404	2308	AND OR	FROM	C 392	- 392	,T 241	,C 270	,C 270
4411	2313	AND OR	TO	T 452	- 452			
4413	2315	Q.ECL.OR	TO	T 381	- 404			
4415	2317	Q.ECL.OR	TO	T 410	- 428			
4417	2319	CONSTANT	TO	T 499	- 500			
		(13)	TO	T 501	- 508			
4422	2322	A+B	FROM	T 502	- 505	,T 230		
4425	2325	A+B	TO	T 502	- 505			
4427	2327	ROM ADR.	FROM	T 499	- 510			
			GO TO	2092				
			GO TO	2100				

-4 BIT SHIFT REGISTER

-DIV 10 EACH

-4 BIT SHIFT REGISTER

-DIV 10

-DIV 1

4432	2330	COPY	FROM	T 385	- 394			
4434	2332	COPY	TO	T 381	- 390			
4436	2334	COPY	FROM	T 395	- 404			
4440	2336	COPY	TO	T 391	- 404			
4442	2338	COPY	FROM	T 385	- 394			
4444	2340	COPY	TO	T 381	- 390			
4446	2342	COPY	FROM	T 395	- 404			
4450	2344	COPY	TO	T 391	- 404			
4452	2346	COPY	FROM	C 281	- 287			
4454	2348	COPY	TO	C 500	- 507			

Model 5045A
Maintenance and Troubleshooting

```

4456 2350  ROM ADR. FROM T 212 - 223
              GO TO 512 RTN 2364
              2376
              2414

-(2352-2522) STATE AND V.I.
-PIN SET UP PRINT OUT
4460 2352  CONSTANT TO T 413 - 414
          ( 64 ) TO T 415 - 422
          ( 161 ) TO T 423 - 430
4464 2356  COPY FROM T 511 - 511 ,T 511 ,C 492
4470 2360  COPY TO T 392 - 394
4472 2362  ROM ADR. FROM T 416 - 427
              GO TO 2202 READ IN -I RTN 2364

4474 2364  COPY FROM T 391 - 394 ,T 492
4477 2367  COPY TO T 475 - 478 ,T 394
4502 2370  DECODER TO C 392 - 393
4504 2372  CONSTANT TO T 413 - 414
          ( 111 ) TO T 415 - 422
          ( 214 ) TO T 423 - 430
4510 2376  ROM ADR. FROM T 414 - 425
              GO TO 2194 READ IN +I RTN 2378

4512 2378  COPY FROM T 289 - 297
4514 2380  COPY TO C 410 - 418
4516 2382  COPY FROM T 474 - 476
4520 2384  COPY TO C 419 - 421
4522 2386  COPY FROM T 477 - 486
4524 2388  COPY TO C 422 - 433
4526 2390  CONSTANT TO T 228 - 229
          ( 204 ) TO T 230 - 237
          ( 1 ) TO T 238 - 245
4532 2394  ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2395
4534 2396  ROM ADR. FROM T 230 - 241
              GO TO 388

-GO TO DEC SUBTRACT
          -(+I) (-I)
4536 2398  COPY FROM T 391 - 394 ,T 434 ,T 492
4542 2402  COPY TO T 475 - 478 ,T 491 ,T 393 ,C 392 ,T
          394
4550 2408  CONSTANT TO T 413 - 414
          ( 111 ) TO T 415 - 422
          ( 324 ) TO T 423 - 430
4554 2412  ROM ADR. FROM T 414 - 425
              GO TO 2194 READ + OR - V

4556 2414  COPY FROM T 289 - 297
4560 2416  COPY TO T 465 - 473
4562 2418  COPY FROM T 397 - 403 ,C 230
4565 2421  COPY TO T 401 - 408
4567 2423  NOP
4570 2424  CONSTANT TO T 417 - 418
          ( 224 ) TO T 419 - 426
          ( 364 ) TO T 427 - 434
4574 2428  ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2429
4576 2430  ROM ADR. FROM T 417 - 428
              GO TO 592 LOAD BLANK IN PRINT OUT FIELD

```


Model 5045A
Maintenance and Troubleshooting

```

4600 2432  DECODER  TO    C 397 - 400 ,T 301 ,C 294
4604 2436  DECODER  FROM  T 351 - 351 ,C 204
4607 2439  DECODER  TO    T 409 - 410
4611 2441  CONSTANT  TO    C 500 - 501
          ( 275 ) TO  C 502 - 509
4614 2444  ROM ADR.  TO    T 412 - 423 ,STORE ROM ADR: 2445
4616 2446  ROM ADR.  FROM  T 212 - 223
          GO TO 512 THEN 2586 RTN 2448
          (FORMAT FOR V PRINTOUT)

4620 2448  COPY     FROM  C 465 - 474
4622 2450  COPY     TO    C 381 - 396 ,C 235 ,C 294
4626 2454  NOP
4627 2455  COPY     FROM  T 475 - 476 ,C 491 ,T 410
4633 2459  COPY     TO    T 391 - 392 ,T 408 ,T 409 ,T 393
4640 2464  COPY     FROM  T 477 - 486
4642 2466  COPY     TO    T 397 - 407
4644 2468  DECODER  TO    T 429 - 430 ,T 277
4647 2471  CONSTANT  TO    C 500 - 501
          ( 275 ) TO  C 502 - 509
4652 2474  ROM ADR.  TO    T 412 - 423 ,STORE ROM ADR: 2475
4654 2476  ROM ADR.  FROM  T 212 - 223
          GO TO 512 THEN 2586(FORMAT FOR I PRINTOUT)

          -(2478-2496) FORMAT FOR I PRINTER
          -CONVERT PIN NUMBER FROM B INTO DECIMAL
          -USING DECIMAL ADDER
4656 2478  COPY     FROM  T 435 - 439
4660 2480  COPY     TO    T 381 - 404
4662 2482  COPY     FROM  T 439 - 439 ,T 439
4665 2485  COPY     TO    T 411 - 433 ,C 410
4670 2488  A-ONE   TO    T 291 - 295
4672 2490  CONSTANT  TO    T 462 - 463
          ( 206 ) TO  T 464 -471
          ( 1   ) TO  T 472 - 479

          4771111
          ( 1   ) TO  T 472 - 479
4676 2494  ROM ADR.  TO    T 499 - 510 ,STORE ROM ADR: 2495
4700 2496  ROM ADR.  FROM  T 464 - 475
          GO TO 390

          -CONVERT DECIMAL TO 6 BIT ASCII
          -SURPRESS LEADING ZERO SET UP 'I'
4702 2498  COPY     FROM  T 381 - 386
4704 2500  COPY     TO    T 338 - 341 ,T 344 ,T 345 ,C 342
4711 2505  OR       FROM  T 344 - 347
4713 2507  OR       TO    T 348 - 348
4715 2509  A-ONE   TO    T 236 - 241 ,T 237 ,C 230 ,T 293
4722 2514  COPY     FROM  T 440 - 446
4724 2516  COPY     TO    T 500 - 507 ,C 508 ,C 391 ,C 203
4731 2521  ROM ADR.  FROM  T 212 - 223
          GO TO 512

4734 2524  Q.ECL.OR  TO    C 326 - 349
4736 2526  PIN DRV  TO    T 319 - 349
4740 2528  CONSTANT  TO    C 500 - 501
          ( 210 ) TO  C 502 - 509

```

Model 5045A
Maintenance and Troubleshooting

```

4743 2531  NOP
          -(2532-2564) SELECTS LOGIC DATA FOR
          -PRINT OUT
4744 2532  COPY      FROM C 493 - 497
4746 2534  COPY      TO    C 319 - 324
4750 2536  A-ONE     FROM T 320 - 323 ,T 319
4753 2539  A-ONE     TO    T 320 - 323 ,T 223
4756 2542  COPY      FROM T 326 - 330 ,T 319 ,T 223
4762 2546  COPY      TO    T 325 - 329 ,C 319 ,T 215
4766 2550  COPY      FROM T 331 - 340
4770 2552  COPY      TO    T 330 - 339
4772 2554  COPY      FROM T 341 - 349 ,T 325
4775 2557  COPY      TO    T 340 - 349
4777 2559  A-ONE     FROM C 223 - 223
5001 2561  A-ONE     TO    T 217 - 222
5003 2563  ROM ADR. FROM T 212 - 223
                   GO TO 2542
                   GO TO 512

5006 2566  DECODER   FROM C 408 - 409 ,C 203
5011 2569  DECODER   TO    T 381 - 382
5013 2571  DECODER   FROM T 408 - 409
5015 2573  DECODER   TO    C 383 - 384 ,T 294
5020 2576  COPY      FROM T 408 - 408 ,T 383 ,C 408
5024 2580  COPY      TO    T 381 - 381 ,T 384 ,C 429 ,T 408
,C 430

-(2586-2663) FORMATTER OF VI PRINT OUT
-1ST PASS V TRUNCATE AND JUSTIFY
-2ND PASS I TRUNCATE AND JUSTIFY
5032 2586  COPY      FROM T 381 - 384
5034 2588  COPY      TO    T 290 - 293
5036 2590  COPY      FROM T 385 - 394
5040 2592  COPY      TO    T 381 - 390
5042 2594  COPY      FROM T 395 - 404
5044 2596  COPY      TO    T 391 - 400
5046 2598  COPY      FROM T 405 - 407
5050 2600  COPY      TO    T 401 - 407
5052 2602  DECODER   FROM C 291 - 292 ,T 293 ,T 290
5056 2606  DECODER   TO    T 424 - 428
5060 2608  AND OR    FROM C 427 - 428 ,C 294 ,C 294 ,C 412
,C 412
5066 2614  AND OR    TO    C 412 - 412
5070 2616  OR        FROM T 396 - 402 ,T 412
5073 2619  OR        TO    T 412 - 412
5075 2621  AND OR    FROM T 428 - 430 ,C 294
5100 2624  AND OR    TO    C 294 - 294
5102 2626  OR        FROM T 381 - 388
5104 2628  OR        TO    T 427 - 427
5106 2630  Q.ECL. OR TO    C 219 - 220
5110 2632  ROM ADR. TO    T 499 - 510 ,STORE ROM ADR: 2633
5112 2634  ROM ADR. FROM T 212 - 223
                   GO TO 896

5114 2636  OR        FROM T 390 - 394 ,T 427 ,T 428 ,C 429
5121 2641  OR        TO    T 503 - 503
5123 2643  COPY      FROM T 502 - 503 ,C 337 ,C 337 ,T 412

```

Model 5045A
Maintenance and Troubleshooting

```

5374 2812   DECODER   TO     T 379 - 390
5376 2814   ROM ADR.  TO     T 499 - 510 ,STORE ROM ADR: 2815
5400 2816   ROM ADR.  FROM   T 380 - 391
                    GO TO 2048

-LOGIC TO CONTROL V OR I
-MANIPULATION AND RETURN CONTROL
5402 2818   CONSTANT  TO     T 460 - 461
( 200 ) TO   T 462 - 469
( 243 ) TO   T 470 - 477
( 56  ) TO   T 478 - 485
5407 2823   AND OR    FROM   C 204 - 204 ,T 376
5412 2826   AND OR    TO     T 505 - 505
5414 2828   A-ONE    TO     C 499 - 504 ,C 414
5417 2831   Q.ECL.OR  FROM   T 351 - 351 ,T 461
5422 2834   Q.ECL.OR  TO     T 378 - 390 ,C 431
5425 2837   AND OR    FROM   C 406 - 406 ,T 351
5430 2840   AND OR    TO     T 440 - 446
5432 2842   Q.ECL.OR  FROM   C 509 - 511 ,T 351 ,T 492 ,T 440
5437 2847   Q.ECL.OR  TO     C 441 - 445
5441 2849   COPY     FROM   T 493 - 497 ,C 406 ,T 204 ,T 505
,T 351
5447 2855   COPY     TO     C 289 - 293 ,T 288 ,C 500 ,C 507
,T 376 ,C 465
5456 2862   COPY     FROM   T 442 - 444
5460 2864   COPY     TO     T 432 - 434
5462 2866   ROM ADR.  FROM   T 380 - 391
                    GO TO 2048 RTN 2678 FINISHED PIN INFO PRINTOUT
                                RTN 2870 GO TO VI TWEAK
                                RTN 2868 TERMINATE PRINTOUT

5464 2868   ROM ADR.  FROM   T 461 - 472
                    GO TO 1808

5466 2870   Q.ECL.OR  TO     T 465 - 465
5470 2872   ROM ADR.  FROM   T 462 - 473
                    GO TO 896 SELECT REF LEVEL TO BE ADJUSTED

5472 2874   AND OR    FROM   T 442 - 444 ,C 278
5475 2877   AND OR    TO     T 417 - 417
5477 2879   Q.ECL.OR  FROM   T 378 - 378 ,T 492
5502 2882   Q.ECL.OR  TO     C 418 - 420 ,T 419 ,T 434
5506 2886   ROM ADR.  TO     T 499 - 510 ,STORE ROM ADR: 2887
5510 2888   ROM ADR.  FROM   T 474 - 485
                    GO TO 746 (A+/-1) (A+/-16) B

-(2890-2833) PRESET RANGE LIMITS
5512 2890   DECODER  FROM   C 442 - 442
5514 2892   DECODER  TO     C 502 - 504 ,C 416
5517 2895   NOP
5520 2896   Q.ECL.OR  FROM   C 415 - 418 ,T 289
5523 2899   Q.ECL.OR  TO     T 431 - 433
5525 2901   CONSTANT  TO     T 228 - 229
( 175 ) TO   T 230 - 237
( 31  ) TO   T 238 - 245
( 126 ) TO   T 246 - 253
( 103 ) TO   T 254 - 261
( 22  ) TO   T 262 - 269
( 0   ) TO   T 270 - 277

```

Model 5045A
Maintenance and Troubleshooting

```

5535 2909  CONSTANT TO T 300 - 301
          ( 175 ) TO T 302 - 309
          ( 21  ) TO T 310 - 317
          ( 126 ) TO T 318 - 325
          ( 203 ) TO T 326 - 333
          ( 23  ) TO T 334 - 341
          ( 276 ) TO T 342 - 349
5545 2917  AND OR FROM C 441 - 443 ,T 408 ,T 443 ,C 405
5552 2922  AND OR TO T 434 - 434
5554 2924  ROM ADR. FROM T 212 - 223
          GO TO 512 THEN 2926 SPECIAL V SET-UP
          RTN 2934

5556 2926  CONSTANT TO C 306 - 307
          ( 261 ) TO C 308 - 315
          ( 105 ) TO C 316 - 323
          ( 22  ) TO C 324 - 331
5563 2931  DECODER TO T 303 - 304 ,T 338
5566 2934  Q.ECL.OR FROM T 432 - 434 ,T 433 ,C 418
5572 2938  Q.ECL.OR TO C 429 - 430 ,C 203
5575 2941  QUAD OR FROM C 429 - 432
5577 2943  QUAD OR TO T 448 - 448 ,T 418 ,T 420 ,C 441
5604 2948  ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2949
5606 2950  ROM ADR. FROM T 462 - 473
          GO TO 896 SELECT CORRECT RANGE LIMIT

5610 2952  Q.ECL.OR TO T 433 - 433
5612 2954  ROM ADR. FROM T 474 - 485
          GO TO 746 COMPARE (A+B) , (A-B) A


-(2956-2975) COMPARE RANGE LIMIT
-WITH ADJUST V OR I
5614 2956  DECODER TO T 431 - 434
5616 2958  Q.ECL.OR FROM T 284 - 284 ,C 418 ,T 430 ,C 418
,C 418
5624 2964  Q.ECL.OR TO C 449 - 449 ,C 416 ,T 433
5630 2968  ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2969
5632 2970  ROM ADR. FROM T 462 - 473
          GO TO 896 RTN 2972

5634 972  Q.ECL.OR TO T 414 - 414
5636 2974  ROM ADR. FROM T 462 - 473
          GO TO 896 RTN 2976

5640 2976  DECODER FROM T 448 - 449 ,T 416
5643 2979  DECODER TO T 204 - 204 ,C 434
5646 2982  COPY FROM T 392 - 392
5650 2984  COPY TO C 419 - 420
5652 2986  ROM ADR. TO T 499 - 510 ,STORE ROM ADR: 2987
5654 2988  ROM ADR. FROM T 474 - 485
          GO TO 746 PRESET B , A , AB

5656 2990  COPY FROM T 441 - 444 ,T 434 ,T 416
5662 2994  COPY TO T 431 - 434 ,T 444 ,C 222
5666 2998  DECODER FROM T 443 - 444 ,C 289
5671 3001  DECODER TO T 419 - 420
5673 3003  Q.ECL.OR TO C 236 - 243

```

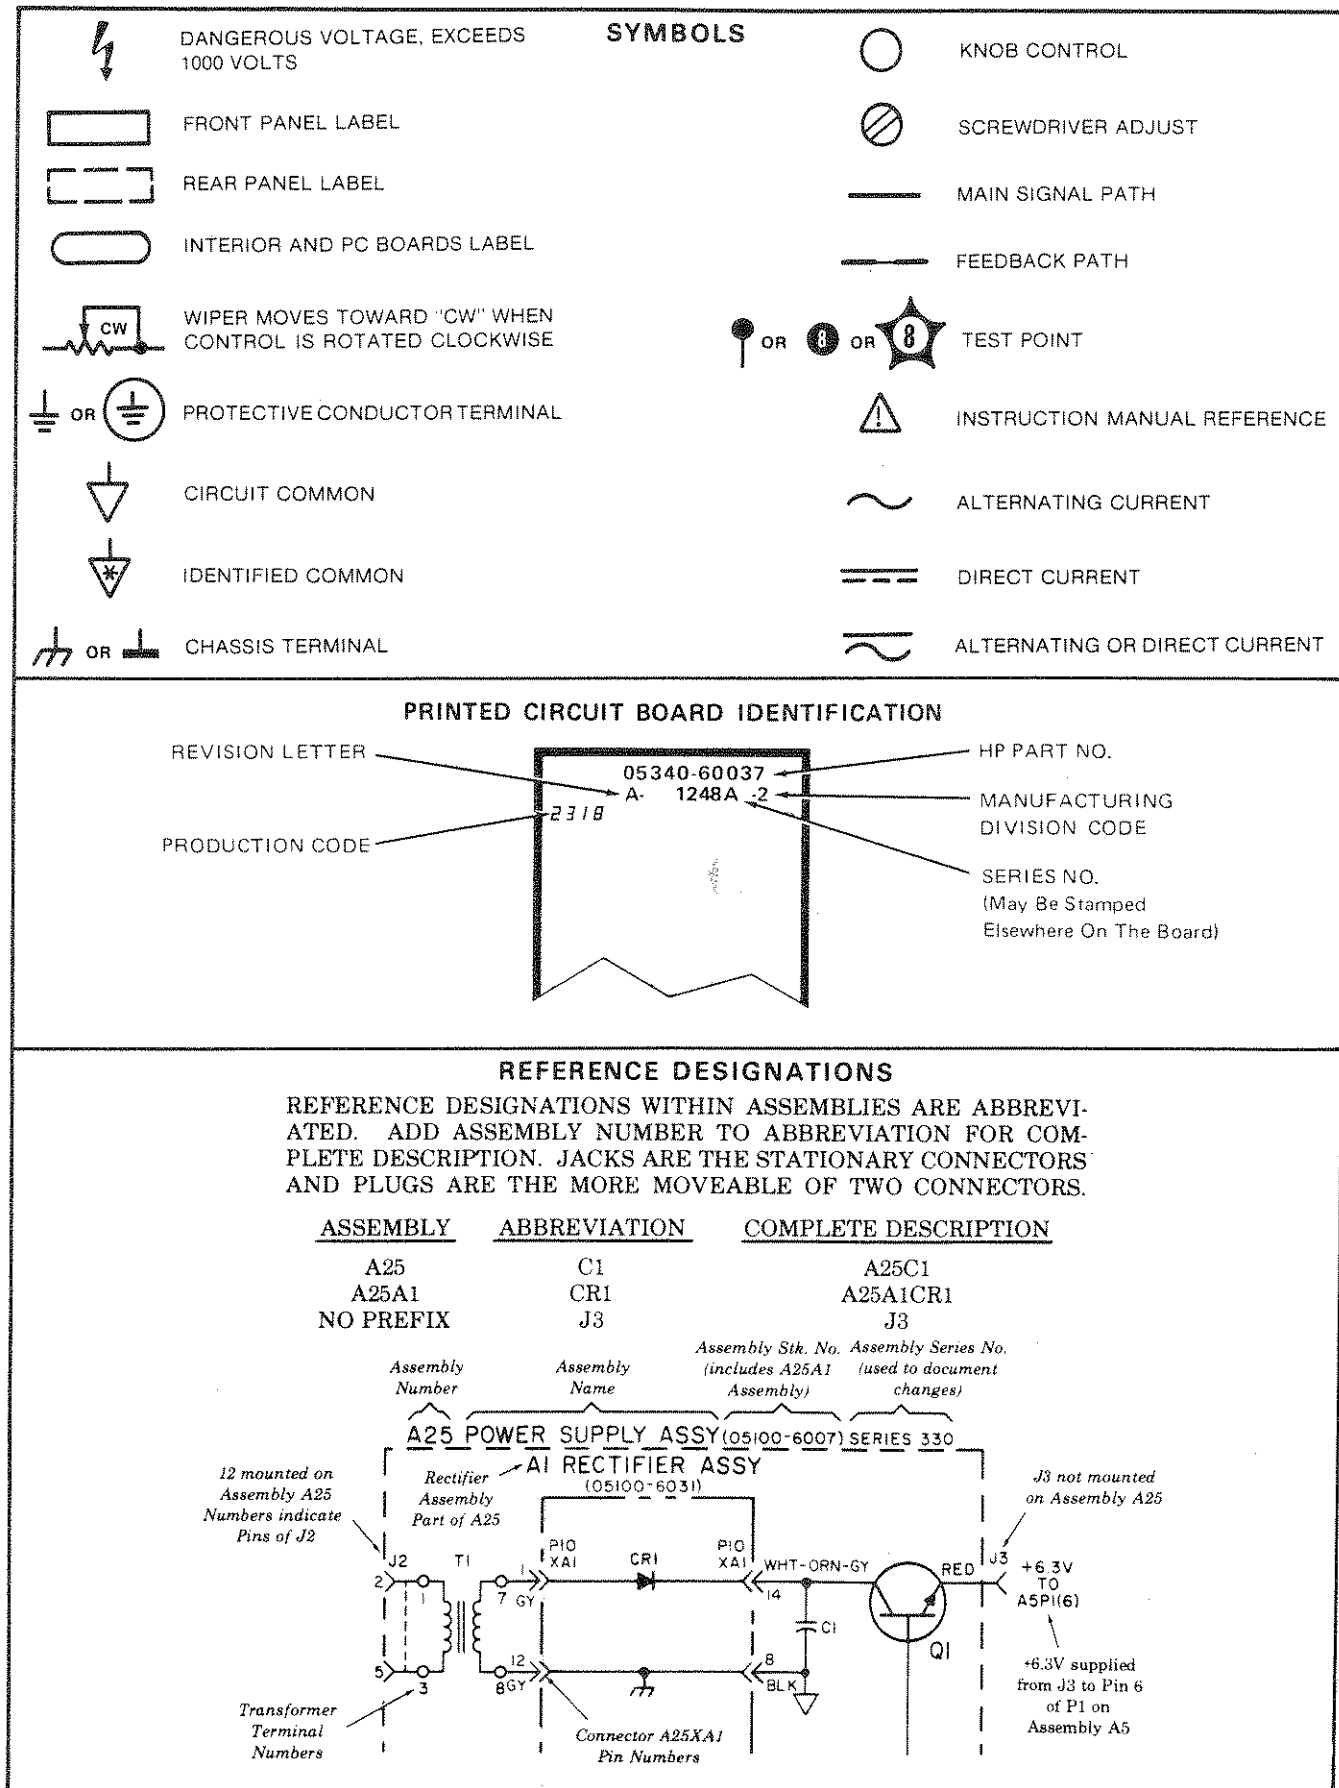

8-164. The two main program sources (ROM and Main Memory) control the flow of serial data to and from those blocks located on the left of the block diagram. For example, data needed to test an IC can flow from the Magnetic Card Reader through the RAM where it is formatted and routed to the Main Memory. It can then be sent, via the RAM, to the ALU (Arithmetic Unit), which helps simulate, for reference purposes, the IC under test. Other data passes to the Reference Voltage Generator and Control block. This block converts the data from a binary code into four lines of reference levels that are strobed to the Pin Drivers. The Pin Drivers are responsible for driving the test socket pins with the correct voltages and currents.

8-165. The Memories

8-166. Of major importance are the three memories that control the tester's operation. These are the ROM, the Main Memory, and the RAM. These memories are described in the following paragraphs.

8-167. THE ROM. The ROM (Read Only Memory) contains 36,864 bits (3072 x 12) of fixed information. This memory stores the tester's basic operating routine. It allows the tester to follow a given procedure but with the ability to vary its algorithm in accordance with the result of the completed operation and the front panel switch positions. It can also relinquish control to other portions of the tester (e.g., the Main Memory). The ROM controls the tester's operation by way of 12 Program Control lines (described later).

8-168. Notice that selection of the ROM program codes (12 lines) is controlled by the ROM Address Register. The Address Register provides 12 address lines to the ROM that enable specific locations (or addresses) within the ROM. The ROM will then output the data contained in the addressed location. The address code can be sequentially advanced by pulsing the Program Advance line, or it can be radically changed (as in a "go-to" statement by enabling the Transfer line and serially clocking in a new address from the RAM. (It must be noted that any information contained in the RAM originated from some other source.) The 11th and 12th lines from the ROM Address Register control whether the program source is the ROM or the Main Memory when both lines are true (11).

8-169. THE MAIN MEMORY. The Main Memory contains up to 6144 bits of information that is taken from the magnetic program card. Therefore, this memory contains information pertaining to the testing of a specific IC plus the PASS/FAIL count. Basically, there are four types of information stored in this memory:

1. *Header information*, which is the IC number and the type of test (pass/fail or diagnostic).
2. The *Setup Data* for the IC to be tested, i.e., the codes for the voltages and currents that will be applied to the IC under test.
3. The *Logic Model* program, i.e., the information that will simulate a logic function and generate a stimulus to that function. This produces a reference to which the device under test can be compared.
4. The *Test Sequence* information. This combines 2 and 3 into a specific test. Also, the Main Memory initially stores the check-sum number at the end of the card. If the number of bits transferred from the card agrees with this number, the number is replaced with Pass/Fail storage locations, i.e., locations that hold numbers representing the number of IC's that passed or failed their tests. If the check-sum number does not agree with the counted bits from the card, the word "RELOAD" is printed out.

8-170. These four types of information are serially transferred from the magnetic program card (three bits at a time) and stored in the Main Memory in words that are 24 bits long. Once all the information is stored, it can be removed serially as data to the RAM or as parallel 12-bit words to the Program Control lines.

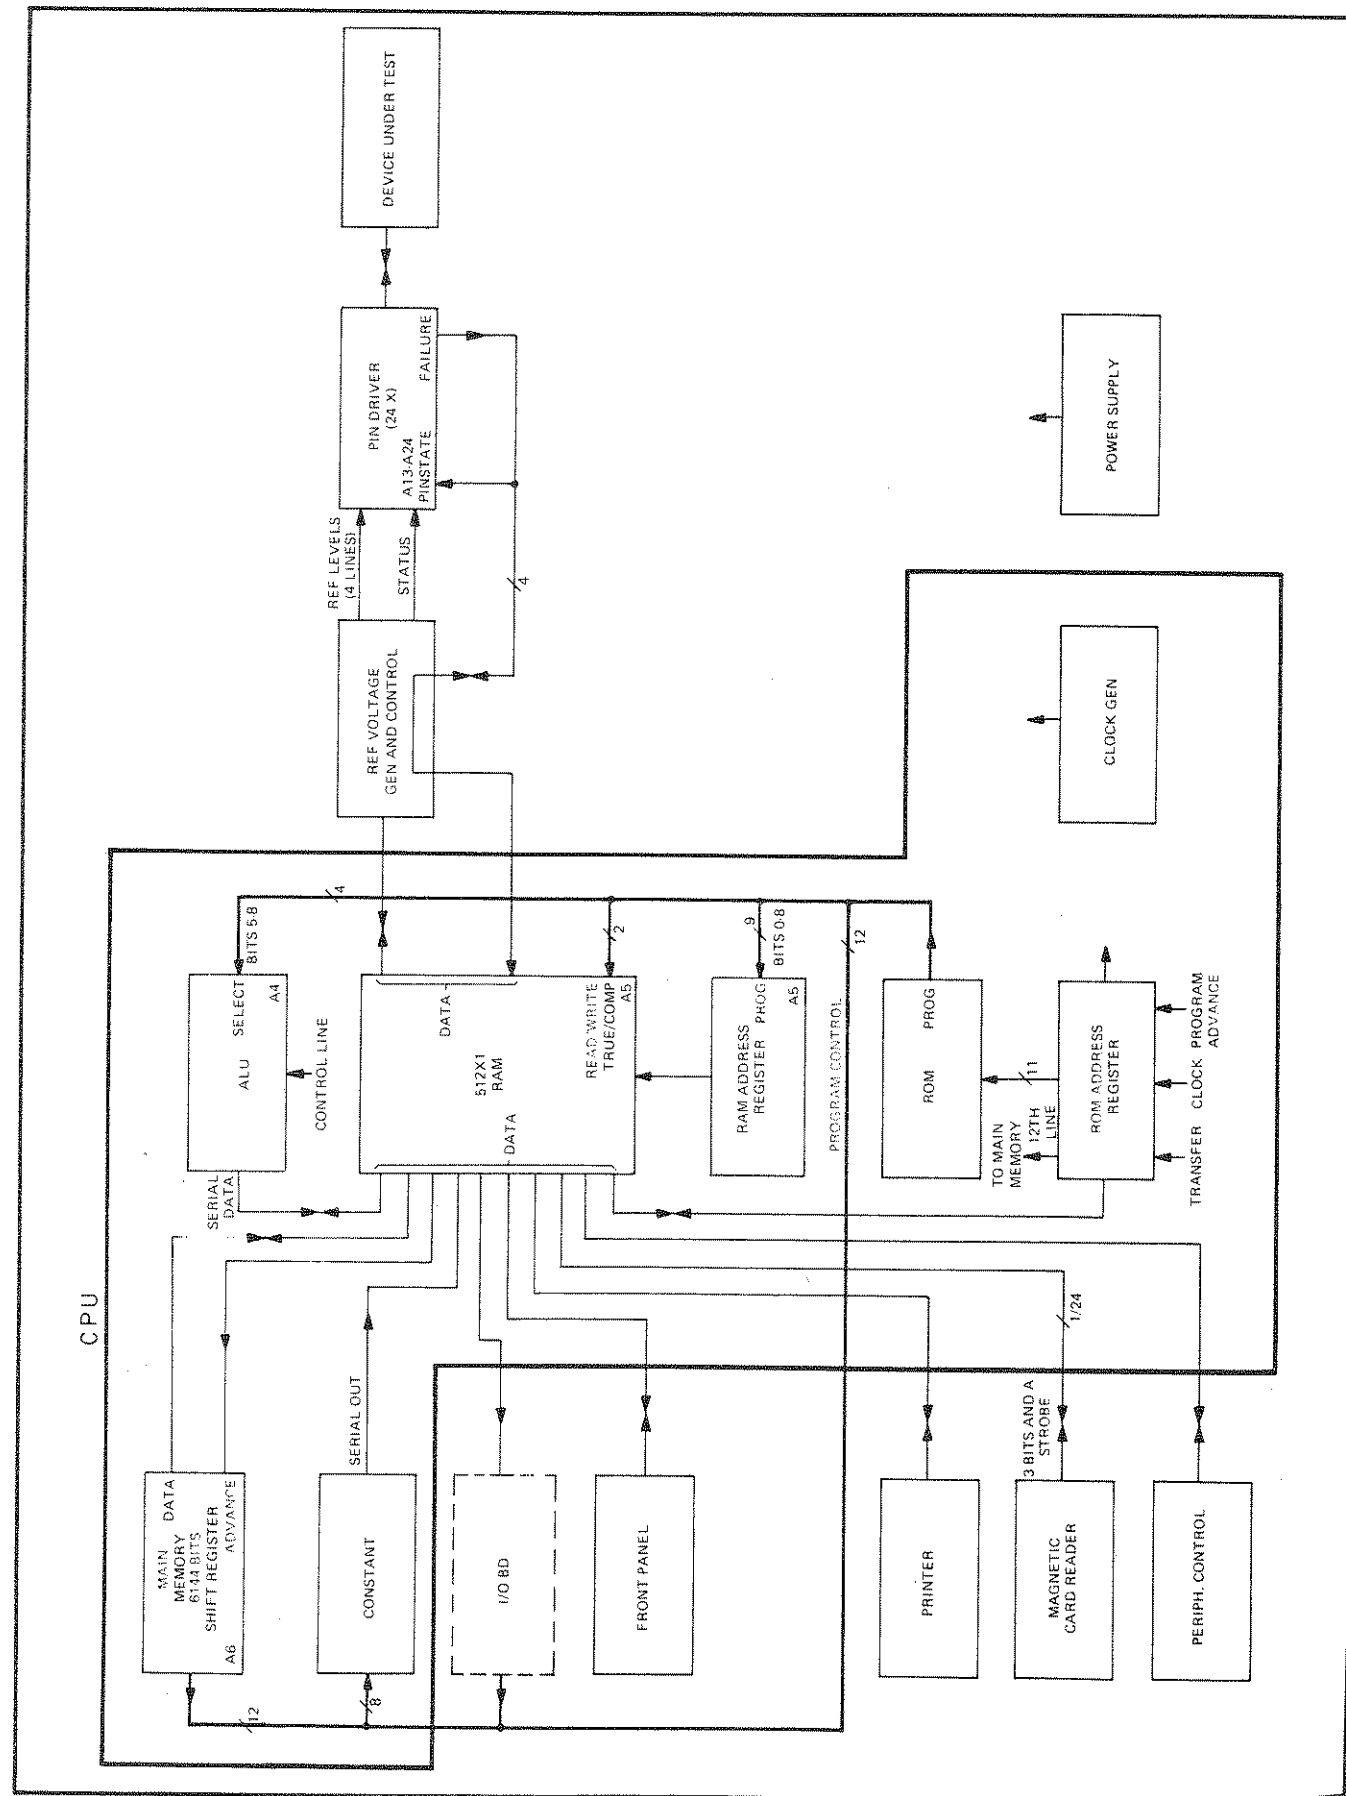


Figure 8-10. Simplified Block Diagram

8-171. During the testing of an IC, the ROM relinquishes program control to the Main Memory's logic Model program. This allows the tester to *simulate* the device under test (a model) and to apply a stimulus pattern to the model. This information is then stored in the RAM for access by the ROM program and is then applied to the actual device under test.

8-172. THE RAM. As previously mentioned, any exchange of data between blocks is accomplished serially and by way of the RAM. The storage capacity of this device is 512 bits long by one-bit wide (512 x 1); expressed differently, there are 512 data locations, each having the capacity of storing one bit of data. This data is stored and retrieved by addressing the RAM Address Register with the nine least-significant bits of the Program Control lines. This method is referred to as *presetting*. Once preset, however, the address code can be sequentially advanced by clocking the register (for example, if the data word is more than one-bit long). Although described later in more detail, it should be noted that before the RAM is addressed with a RAM Address code, the Processor Memory must first receive another 12-bit code that designates certain operations and functions to be performed within the tester.

8-173. Included in this first code is the number of data bits to be automatically transferred to or from the RAM. The subsequent RAM Address code specifies the starting location (*presetting*) after which, the addresses are automatically and sequentially stepped through until the specified number of bits have been transferred. At this point, additional RAM Address codes may be used to address individual locations within the RAM, one at a time and at specified locations. The tester, however, is still under control of the first 12-bit word that specifies the transmitter or receiver of data.

8-174. Figure 8-11 shows the RAM and the particular blocks associated with data transfer. Note that some blocks are strictly senders of data, while others are receivers of data, and still others are bidirectional. Again, none of the blocks can exchange data directly between themselves — data must go from one block, through the RAM and then to the second block.

8-175. THE ALU. The block located immediately above the RAM (Figure 8-10) represents the tester's ALU (Arithmetic Logic Unit). The ALU functions as a decision-making block as the CPU steps through its algorithm. It also serves as a logic model simulator. This section, which can be viewed as a group of "building blocks", performs either logic functions or arithmetic operations, as determined by a control line. Once the operating mode has been established, four of the Program Control lines (bits 5-8) select the actual function to be performed. For example, assume the control line has chosen a Logic Function operation. The four-line code, then must select the *specific* function to be performed — for example, an eight input OR gate, an Exclusive OR, or perhaps a D type flip-flop. Selection of the logic function is in accordance with the device under test and is accomplished by arranging the "building blocks" so they can simulate a logic function.

8-176. Input data is needed, however, for the ALU to actually perform an operation. If no input data is specified, the data inputs are initialized to zero. In the case of the eight-input OR gate, assume that one of the input pins is in the "1" state. The output, then, is also a "1".

8-177. Notice that this setup data (i.e., the stimulus for the model) enters the ALU serially — it is internally converted to parallel and placed across the OR gate's inputs. The resultant data (the "1" state output from the model OR gate) uses this same block diagram line when it is sent to the RAM for storage.

8-178. Each of the first 24 bits in the RAM contains one bit of information that relates to the same pin of the device under test, e.g., RAM address 6 relates to pin 6 of the device. These first 24 bits select the appropriate logic state applied to the device. The logic states are stored in each pin driver and will be described later. The "1" state output of the OR logic model, then, takes its proper place in the RAM to help determine what the device's output should be.

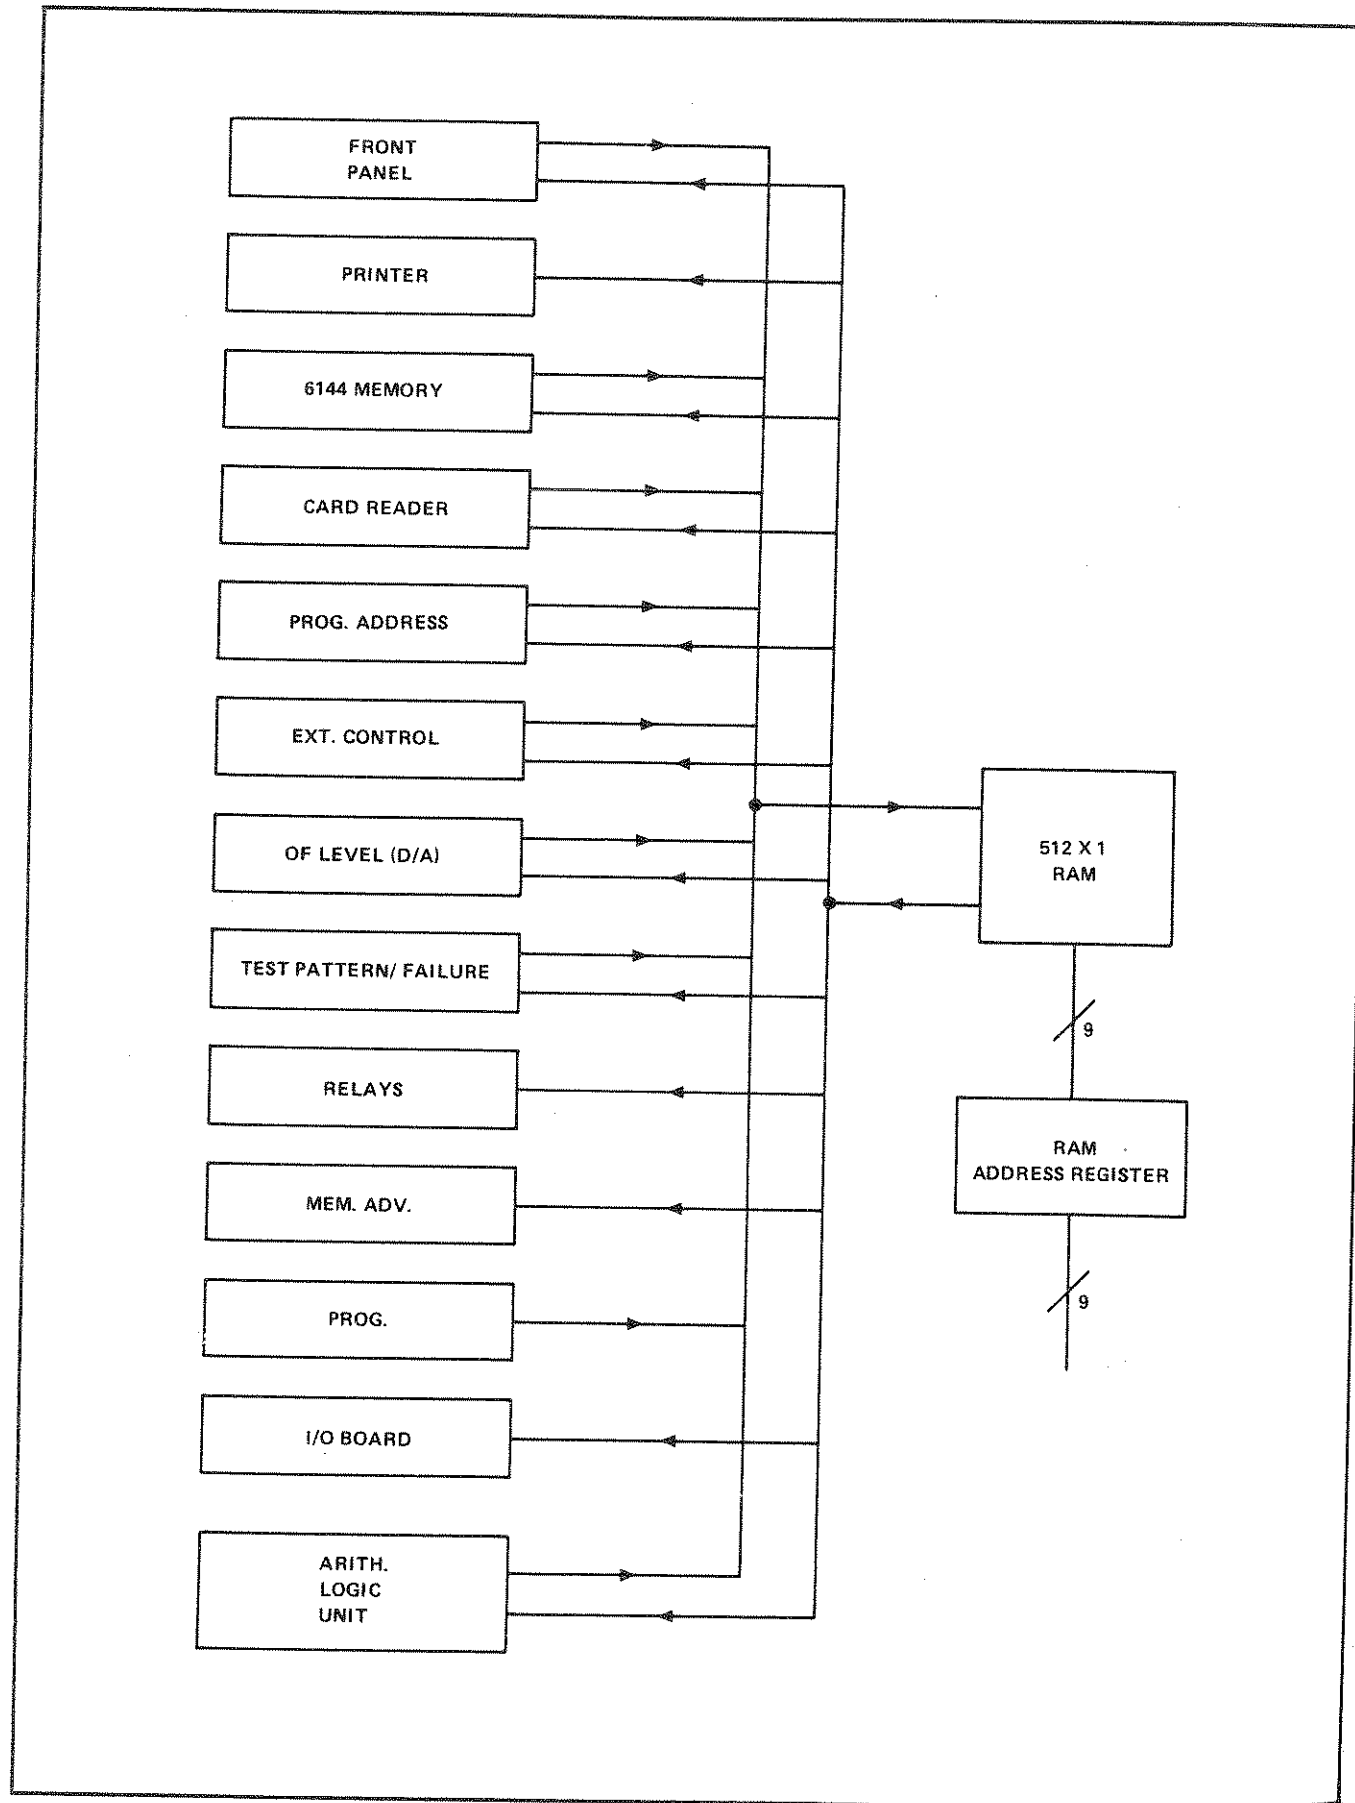


Figure 8-11. Serial Bus Data Flow

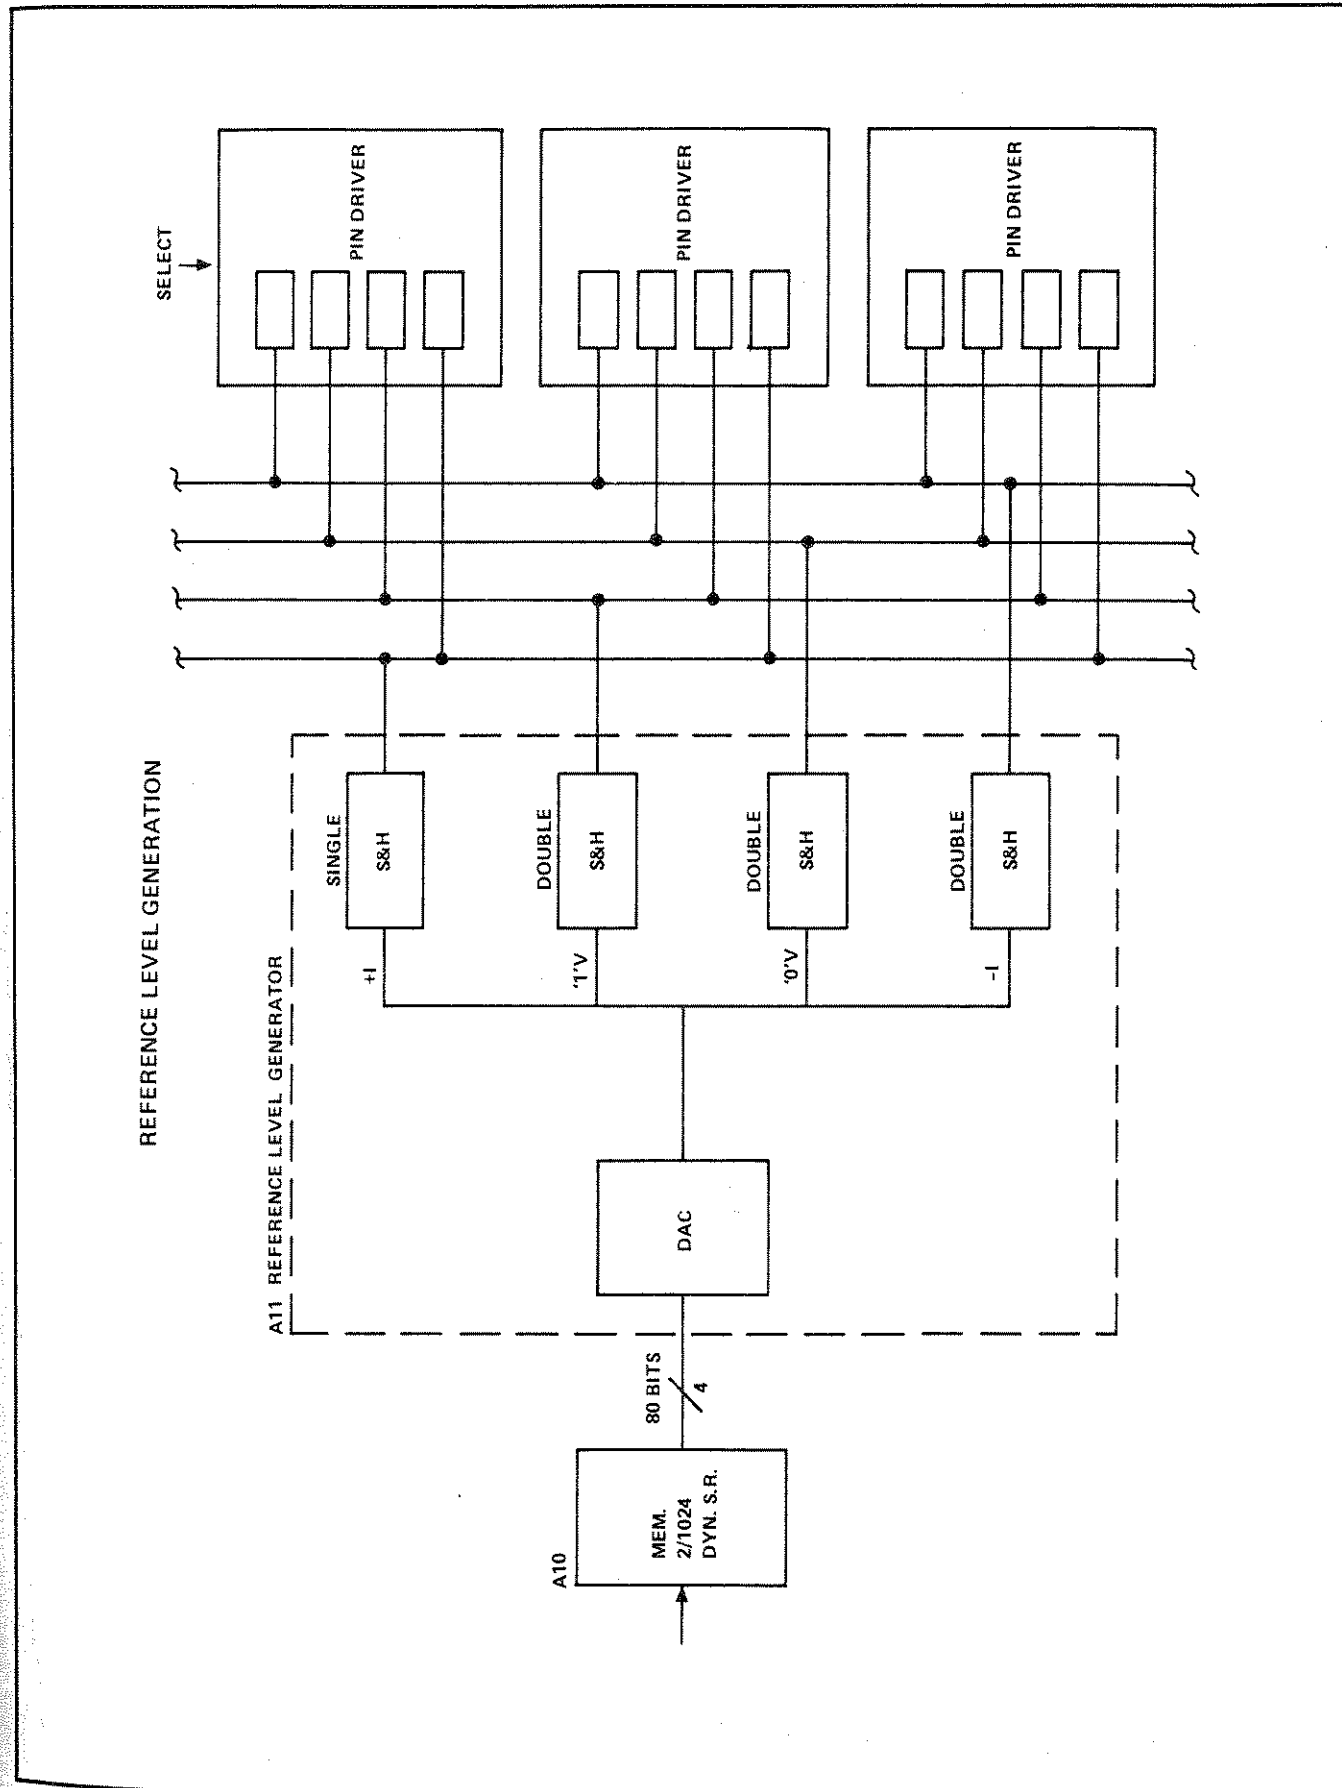


Figure 8-12. Reference Level Generation

8-179. Reference Voltages and Pin Drivers

8-180. The upper right portion of the Block Diagram depicts the Reference Voltage Generator and Control section, along with the Pin Drivers, which drive the Device Under Test. Refer to Figure 8-12, which diagrams these sections in greater detail.

8-181. The memory shown on the left is the Reference Level Storage (RLS) Memory, located on the A10 board. This memory stores setup data that was originally stored on the magnetic program card. The data was accessed by the Card Reader, fed through the RAM, and stored in the Main Memory in the form of 24-bit words. The data is then serially transferred in 24-bit words from the Main Memory and into the RAM, where the data is reconfigured under control of the ROM program. The data is then fed into the Reference Level Storage Memory. A 12-bit *Set-up Data* word enters the Digital-to-Analog Converter (DAC) in a specific manner: the first four most-significant bits enter the DAC in parallel, followed by the remaining eight bits which, are sent in four 2-bit parallel transfers. This method of transfer allows faster settling time in the DAC than if all data were transferred serially.


8-182. The DAC converts 11 bits of the 12-bit Setup Data word into a voltage, where upon it is clocked into a Sample and Hold (S&H) circuit (the 12th bit is used to control the range). Once done, the DAC converts the next 12-bit word into a voltage and stores that in the next S&H circuit. This process continues until all four storage circuits are filled (bottom to top), at which time the four voltages are strobed into four other S&H circuits located on the Pin Driver board. There are 12 Pin Driver boards available. Each board contains two "Pin Drivers". The first board drives pins 1 and 2 of the Device Under Test; the second board drives pins 3 and 4, etc., therefore, 12 boards for a 24-pin device.

8-183. This process of transferring data to the DAC, strobing the resultant voltages into Sample and Hold circuits, and transferring that information into the Pin Driver S&H circuits continues until all Pin Drivers contain the required information. This is a continuous operation. At the same time that each pin driver is having its reference levels strobed in, five select lines (also have the RLS memory) strobe that particular pin driver with information that controls certain functions on the Pin Driver boards. For example, to configure the pin driver circuits so they function as an input or an output. Refer to Figures 8-17 and 8-18.

8-184. In addition to the four reference levels and the five control lines, each pin driver must be given logic state information; i.e., is the pin driver's output going to be a logic "1" or a logic "0"? Again, this information is contained in the RAM as a 24-bit word (one bit for each pin driver). The RAM transfers this word, four bits at a time, onto another four-line bus (not the reference level bus), whereupon six strobe pulses fill all pin drivers with logic state data (6 x 4 = 24). Each pin driver circuit places its bit of data into temporary storage until all pin drivers have been set up. Then, another strobe line clocks all pin drivers to simultaneously change state.

8-185. ROM PROGRAM CONTROL THEORY

8-186. Table 8-6 lists all program words stored in the ROM. These words are listed in hexadecimal form, Table 8-7 shows the hexadecimal-to-binary conversion. The codes are grouped in a six-character format and are shown next to their respective ROM address codes. Notice, however, that the addresses are given in even numbers only. Actually, each character group contains two three-character words, with the first word being the three characters on the right-hand side and corresponding to the ROM address listed to the left. The second three-character word is on the left, and its address is the listed address plus one. For example:

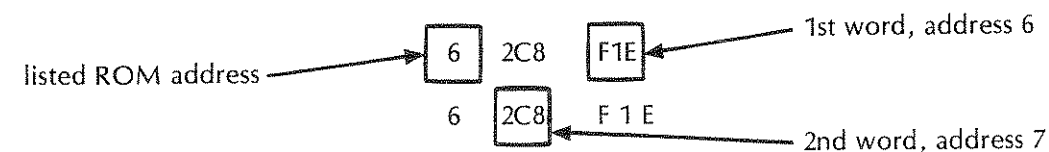

8-187. Recall that all ROM information transfers onto the Program Control lines in the form of a 12-bit word. Therefore, each three-character word, shown above, translates into a 12-bit word.

8-188. There are four types of words stored in the ROM and these are shown in Table 8-8. Notice that each word is 12 bits long and that the MSB is bit 11. The three most-significant bits designate the type of word or mode of operation:

1. A RAM address code.
2. A Logic Function or Arithmetic Computation code.
- c. A Data word (specifies a location, e.g., the pin driver, for the purpose of transferring data to or from the RAM).
4. A space or NOP (no operation).

8-189. In every transfer of information, the sender and receiver of data must be specified. The following paragraphs offer a closer examination of these Program Control codes and how they affect the tester's operation, followed by examples of decoding some of the words found in the ROM listing.

Table 8-6. Hexadecimal ROM Code List

LIST DATA	DATA	FILES	START	BT
0	073073	74	749321	148
2	073073	76	7E2F93	150
4	0C0473	78	59BF93	152
6	208F1E	80	121D9E	154
8	404F93	82	021D9E	156
10	000000	84	09A726	158
12	000000	86	09B122	160
14	000000	88	220322	162
16	68B072	90	53BF93	164
18	08B09B	92	557E97	166
20	28B09B	94	4000EB	168
22	0920C9	96	55E0EB	170
24	0980BE	98	45E0D6	172
26	2062BE	100	65E0DE	174
28	0C60FE	102	4840EB	176
30	DE5406	104	5620EB	178
32	205607	106	70E208	180
34	40E477	108	702728	182
36	404E93	110	740774	184
38	207E1E	112	700709	186
40	621063	114	724705	188
42	602238	116	701762	190
44	404E93	118	702712	192
46	7E3E93	120	777700	194
48	491E93	122	708760	196
50	71DE5D	124	41CE47	198
52	71871B	126	508E93	200
54	7097BF	128	660C64	202
56	704780	130	600C63	204
58	700700	132	5F4DE5	206
5A	794098	134	206DE1	208
5C	073794	136	7E3E93	210
5E	200604	138	3E3D98	212
60	77038E	140	603081	214
62	7E3E93	142	213212	216
64	570E93	144	402EB7	218
66	72EC95	146	5F5E9E	220
68				
70				
72				
74				
76				
78				
7A				
7C				
7E				
80				
82				
84				
86				
88				
8A				
8C				
8E				
90				
92				
94				
96				
98				
9A				
9C				
9E				
A0				
A2				
A4				
A6				
A8				
AA				
AC				
AE				
B0				
B2				
B4				
B6				
B8				
BA				
BC				
BE				
C0				
C2				
C4				
C6				
C8				
CA				
CC				
CE				
D0				
D2				
D4				
D6				
D8				
DA				
DC				
DE				
E0				
E2				
E4				
E6				
E8				
EA				
EC				
EE				
F0				
F2				
F4				
F6				
F8				
FA				
FC				
FE				

Table 8-6. Hexadecimal ROM Code List (Continued)

LIST DATA

0	1F5D9D	74	6D4C79	148	52FDEE	222	6E9DEF5	296	5E789	370	7F1E5D	444	F936DC
2	3F5D9D	76	2D9C7D	150	52D52E	224	4EBDEF	298	5FA1B2	372	F93736	446	000404
4	DBB7FF	78	2DE2D7	152	52B52C	226	6F3DEF2	300	5B05B2	374	0005B4	448	3B9099
6	5FF5F7	80	6E4E5D	154	52952A	228	6F4E5D	302	78805E	376	110E37	450	1D796F1
8	7F7DBB	82	608620	156	527529	230	F93551	304	0D6D9E	378	20BC7D	452	1FF4D0
10	DBA7FF	84	620682	158	DE5526	232	0005E7	306	6D8D9B	380	70860E	454	7EE06E
12	DBA5FB	86	682608	160	DEE729	234	299C7A	308	4D4F93	382	508F93	456	40CF1B
14	7F37FB	88	608620	162	524525	236	67679F	310	401FE1	384	558DF9	458	700F93
16	5F3F93	90	620682	164	792DEFD	238	DFD785	312	110E37	386	5E0DF9	460	5EEDF5
18	6D4C79	92	682608	166	1AED9E	240	DEE581	314	309F19	388	54EDF5	462	76EDF5
20	3E52DD	94	608620	168	3F5D9D	242	3A93AE	316	30D60A	390	754DEF5	464	DE725F
22	700E47	96	E93682	170	7E97F7	244	19AC8E	318	58F01E	392	544DEF5	466	DE5564
24	5000DB	98	0004D4	172	3E57FA	246	5A419C	320	00B10C	394	748DF5	468	DF9765
26	5E75FF	100	718F47	174	580F93	248	592192	322	31301E	396	508DF5	470	DF955E
28	5E95E8	102	786D99	176	4D4E37	250	6D6C3E	324	5C901C	398	748DF5	472	D7475F
30	DEE5E8	104	798F47	178	6E8F47	252	7B038F	326	3ECC1E	400	530DF5	474	5B95EE
32	DBB718	106	100DFD	180	77708E	254	199D98	328	5EBDFE	402	736DF5	476	7EE06E
34	5FF504	108	12180	182	700F47	256	599D97	330	5E35FF	404	520DF5	478	C9A3E0
36	5E05EB	110	DE3523	184	0E8DF7	258	599D97	332	5E35FF	406	720DF5	480	C9A58H
38	5EE5ED	112	708394	186	720DF7	260	7A8DDE	334	5C4DF8	408	510DF5	482	5F4785
40	7070DE	114	232708	188	C1D71E	262	1A8C7E	336	5D109E	410	720DF5	484	5B9099
42	10FC18	116	E5D923	190	C1E0ED	264	5A1582	338	5D7E77	412	512DF5	486	7D9099
44	38AC1E	118	74E7F4	192	D9E7EE	266	52018E	340	7B972F	414	718DF5	488	D9B75E
46	107C17	120	52E0FE	194	D9E1EE	268	C7E583	342	709781	416	508DF5	490	15E588
48	315C1E	122	7EBDFC	196	7B1883	270	7A878A	344	E93758	418	70EDF5	492	76B098
50	100098	124	3EE7E9	198	7E5E93	272	DF5785	346	000545	420	4FEDEF5	494	C3E75E
52	D9B8E5	126	DE7F93	200	1A8E93	274	DF5516	348	6F1FE0	422	704DEF5	496	16015E
54	3E53DD	128	525D9D	202	177D9D	276	DE9717	350	4F8C17	424	4F4DEF5	498	720099
56	1E1D9A	130	925D9D	204	377D9C	278	DEE585	352	716C1E	426	6F8DF5	500	55D0FA
58	3E1D9A	132	D9875E	206	0EFC9E	280	7A978A	354	508C17	428	4E8DF5	502	798DE0
60	115C1B	134	15E527	208	C9E5EE	282	5A88B9	356	711C1E	430	6E0DF5	504	598DFE
62	3E6C1E	136	927D98	210	7ED3EC	284	7A8DDE	358	508C17	432	4E0DF5	506	DE859E
64	5E5C3D	138	D9875E	212	1EDC3E	286	C5D78E	360	712C1E	434	6E6DF5	508	70077E
66	5E65E5	140	5E52B	214	1EE1ED	288	1B1580	362	510C1B	436	5A8DF5	510	5E9F93
68	2D7C9D	142	328D9A	216	1EE179	290	C5E58A	364	733C1E	438	5A8DF5		
70	700F47	144	5A8D9D	218	3E9C3C	292	DF5716	366	530F93	440	DFE68B		
72	4D4F93	146	7A8D93	220	4F1DF5	294	DF5588	368	5DDE37	442	DFE4DB		

Table 8-6. Hexadecimal ROM Code List (Continued)

0	7EDD99	74	4D4F93	148	1DC5D8	222	1624FA	296	592D7B	370	7E5E5D	444	000000
2	5BC05C	76	6D8F18	150	708C1E	224	1634FB	298	1D91FF	372	7C2764	446	1E7D96
4	C5E58E	78	0D8C1C	152	5D7D79	226	378C38	300	D781D9	374	335C7E	448	3E7D9B
6	C9E9F7	80	6DCC1E	154	7D7D7A	228	564DF5	302	D9C5D0	376	9E7F93	450	7E47FD
8	15F5EC	82	5C1DF5	156	6D4C79	230	760DF5	304	D9C5D0	378	7D1C6B	452	7F9E5D
10	3F4C9E	84	7F4DF4	158	2D8C7C	232	56EDF5	306	2DE7D0	380	9D53D2	454	D9E754
12	C3D7F6	86	0DEC9E	160	7F3F93	234	76ADF5	308	5D8C1D	382	6CB3DA	456	D9C1FD
14	C3E1F6	88	C9D4DC	162	4D4F93	236	578DFB	310	6DCC1E	384	5C4DF7	458	7E93F8
16	3F77F5	90	DFE6DD	164	5D0D9E	238	774DE0	312	4D8C9D	386	7E7DF7	460	5F9FEB
18	E5D383	92	4DC4DE	166	2D8D9D	240	0D8D9E	314	6D5C9E	388	7F3F93	462	5F3F93
20	3CF3AE	94	0DD4DE	168	7F3F93	242	2D6D9D	316	DFF6DD	390	5D1F93	464	6D8E5D
22	5ADDF9	96	5CB4DC	170	4D4F93	244	DF53F7	318	4D54D5	392	698C60	466	65F6E2
24	500F93	98	6D7DFA	172	6D7FBA	246	DF54FC	320	5FF4D5	394	498E37	468	DFD614
26	70FC9C	100	6D67FE	174	5D7C1D	248	DF56F8	322	DF90DD	396	600C60	470	DFA41F
28	50EF93	102	4D4F93	176	4D85DA	250	DF5506	324	F936D8	398	61FC60	472	2D0320
30	57EDF9	104	30EC71	178	6D6C1E	252	6D4702	326	0004D4	400	63EC60	474	021D9B
32	1B9151	106	7DC7DC	180	4D6DDE	254	5F3F93	328	7E1C6D	402	6D8C60	476	D9H420
34	747DFC	108	4F8DF9	182	4D6DD5	256	57DDE5	330	6CC07B	404	67CC60	478	C9A221
36	74D74C	110	7D1DF9	184	DFB0D8	258	779DF5	332	60B2CE	406	401FE1	480	C8F420
38	6D674B	112	5CFF31	186	6D06D7	260	567DF5	334	880100	408	500DF9	482	C9B600
40	C3D746	114	510DF9	188	7DC2DE	262	763DF5	336	7D2E5D	410	7E7DF7	484	024420
42	55154C	116	7D1DF9	190	4D4F93	264	551DFB	338	701709	412	E5D2B4	486	610C8F
44	4864D6	118	5CFF31	192	6D4F93	266	7D0DFB	340	7F3F93	414	32C3E2	488	318D99
46	750C3D	120	528DF9	194	3F3D98	268	579DF7	342	5D3F93	416	6E0C6E	490	3BF7F5
48	C9A6D7	122	7D1DF9	196	7C0E5D	270	DF65D9	344	5F6D88	418	2E9C7D	492	730F47
50	5F515A	124	5CFF31	198	D9C7EF	272	DF5791	346	5E55E5	420	1F2D9E	494	518F93
52	15E5F5	126	540DF9	200	D9C130	274	DF5599	348	7F6D8A	422	6F0D9B	496	420C9A
54	7AFC3B	128	7D1DF9	202	2D8330	276	DF5795	350	5F3F93	424	4E0F93	498	268C8F
56	0D6D9E	130	5CFF31	204	1F2C9E	278	DF55A3	352	5E7DFB	426	4B1FB7	500	420C9B
58	2D8D9C	132	558DF9	206	C9E4DB	280	DFA79F	354	7C0DFB	428	6B7D6B	502	C96024
60	2DA6DE	134	7D1DF9	208	7FB3F8	282	DF65AD	356	590DF7	430	E5D6C0	504	38F210
62	3F5D9A	136	5CFF31	210	1BFC9E	284	DB67A9	358	7E7DF7	432	7EE782	506	32921F
64	700F93	138	7AFC7B	212	5FB1CC	286	DB6591	360	50CDF7	434	065795	508	518F93
66	4D4F93	140	1DCF3E	214	7F2C3E	288	D8A791	362	7C4DF7	436	E5D35E	510	401FE1
68	239C7E	142	5CFD9D	216	C3E7E4	290	508592	364	7D0C77	438	3993F4		
70	7F9D9A	144	7CFD9D	218	1684E8	292	88C5D8	366	7E3F93	440	1B5F1B		
72	77D3F4	146	C1D7DC	220	1614F9	294	7D9792	368	5D3F93	442	1B5F93		

DATA FILES START AT 4

Table 8-6. Hexadecimal ROM Code List (Continued)

0	6E0C73	74	DFC499	148	140E37	222	700E93	256	994C94	370	000404	444	719704
2	4EC09B	76	DE5695	150	540E93	224	5F3E93	258	501E93	372	1E7E37	446	700E93
4	6EC09B	78	DE549A	152	478C18	226	6E6E9D	260	400DEA	374	590DEB	448	578E93
6	D9B6E9	80	DF5699	154	666C1E	228	6C76E4	262	394DE6	376	7E7DE7	450	700C77
8	4E94F0	82	DF5484	156	79EE5D	230	641660	264	2C079B	378	778E47	452	583E93
10	6F0098	84	DF5683	158	DBB7C2	232	614605	266	7F5E93	380	6E8C7E	454	E5D980
12	2E95EA	86	DF548E	160	1FF54C	234	6726C4	268	401DE5	382	740E5D	456	7E97C1
14	4E0F93	88	DF568D	162	DBB1FF	236	700F93	270	600DE5	384	304793	458	7E3E93
16	738E5D	90	DF5488	164	75474C	238	51CF93	272	40EDE5	386	3FB786	460	7C109D
18	760700	92	DEA6B7	166	550DBA	240	6E6E5D	274	610DE5	388	DE318C	462	588DEB
20	728E47	94	DF94D2	168	74C0BB	242	682600	276	DED75E	390	DE5358	464	DEA583
22	079E97	96	D9E6C1	170	08B94B	244	686620	278	400405	392	DE5583	466	7E3789
24	0C70FE	98	D9E067	172	6E92E0	246	69569A	280	40055E	394	DE5786	468	746E47
26	DF04C7	100	6C7268	174	8065E0	248	6726E4	282	DF548E	396	DF5578	470	156C17
28	09E745	102	668D9B	176	7F3E93	250	700F93	284	65060A	398	D9877C	472	3E7C1E
30	145066	104	D9B0C7	178	4E0E93	252	51CF93	286	55E15E	400	D88594	474	598E93
32	743C9D	106	6C7268	180	201C67	254	6E6E5D	288	65E00C	402	01B794	476	58EE93
34	31BC7D	108	528D9E	182	7F8FE8	256	652600	290	D982E6	404	4E8558	478	583E37
36	F9331E	110	728D9E	184	919C7D	258	621643	292	D982E7	406	01E198	480	746E47
38	000540	112	D9B74C	186	7FF31D	260	6CF649	294	D9B194	408	C9B75C	482	156C17
40	745C79	114	14C529	188	540F93	262	672600	296	5E8394	410	C95594	484	2E8C1E
42	543E37	116	729D9B	190	190E37	264	1C0D9E	298	599D9B	412	07C7E9	486	599DEA
44	481F47	118	DE347	192	540E93	266	700D97	300	799D9B	414	DE2D8	488	768DEB
46	143E37	120	147147	194	695E5D	268	7FE3C8	302	C7B20A	416	5981E5	490	DEE789
48	6B0E47	122	743DEB	196	6356BE	270	51DE93	304	D9E78E	418	5981E5	492	DEE789
50	079D9B	124	F93349	198	6E36E9	272	6E6E47	306	D9C00A	420	DEA198	494	D5E7E4
52	279D9B	126	000540	200	600605	274	70D07E	308	60E2DB	422	9F47E6	496	D9D18D
54	D9E2C7	128	538D7B	202	400E37	276	3F4D99	310	50C09E	424	99E383	498	C1D2DB
56	0C707D	130	4791FE	204	404F47	278	5C0D9E	312	C9D00A	426	788389	500	40A4DA
58	27D09B	132	47B47A	206	3EBC7E	280	6F5D9E	314	C3E6D7	428	4D4E33	502	2D7C1E
60	267C7E	134	D7B47C	208	498E93	282	7EB7E7	316	0E60EA	430	30HE5D	504	0D7D9E
62	34A26A	136	74074C	210	724E5D	284	7FE7FD	318	C3E4D7	432	3FA3C8	506	6D9D9E
64	482DE5	138	53CD7A	212	74E7EA	286	1E7DEB	320	6062E6	434	5DDE37	508	6DE2DD
66	681DE5	140	47E47D	214	791702	288	990DE7	322	7E57F4	436	71C079	510	4D4E93
68	480DE5	142	48047F	216	71274C	290	7CFE5D	324	194D8B	438	747320		
70	68BDE5	144	750D7A	218	E5D718	292	722712	326	D8B0EA	440	778E5D		
72	496DED	146	34B740	220	7137E3	294	7FF7F0	328	F93394	442	72474C		

DATA FILES START AT 4

Table 8-6. Hexadecimal ROM Code List (Continued)

0	51EFD7	74	4E9DFD	148	701DF5	222	7F3F93	296	787DF1	370	58DDF8	444	701786
2	77DFBB	76	4E95FF	150	58BDF7	224	4D4F93	298	119DF8	372	DF70E6	446	7F3F93
4	57BC9E	78	4E74E8	152	7DFDF7	226	6FDE5D	300	3F4DF7	374	800791	448	500F93
6	C9E180	80	7A3DF0	154	5A9DF9	228	6A1586	302	4D4F93	376	761E5D	450	57DDF9
8	77E37D	82	509DF5	156	7C9DF9	230	C5E691	304	79DE5D	378	7F4794	452	752DFB
10	57EDFE	84	719DF5	158	5EDDF8	232	582598	306	771734	380	7F3F93	454	759793
12	77FDFF	86	503DF8	160	321DF8	234	581195	308	5EFDFF	382	561F93	456	C1B393
14	57CF93	88	723DF8	162	77BC93	236	70FC9E	310	1EC5FF	384	38DC98	458	C1E593
16	6E0FD9	90	7E3F93	164	31F387	238	188C9E	312	780DFC	386	32672D	460	C1E593
18	52EFD2	92	4FFF93	166	7F9F93	240	50F4F1	314	500F93	388	55FC9E	462	5ED9E0
20	594FDH	94	4EADFE	168	57CF93	242	700C9D	316	587DF8	390	C9D0C0	464	7252E6
22	53AFCC	96	4E74E8	170	722C93	244	0F1C9E	318	DFB5E0	392	E5D799	466	580DF8
24	546FCC	98	4E74E8	172	6D6E5D	246	C6E50F	320	78A7DB	394	38D3F4	468	7F4DF7
26	552FD2	100	7F3F93	174	C3E638	248	30E7C2	322	388C9D	396	79CF93	470	3873FC
28	4D4F93	102	4FFF93	176	596538	250	30FD3E	324	79DE5D	398	4D4F93	472	F992C8
30	72EFD9	104	57DDF5	178	C3E196	252	30F588	326	78C749	400	1D1DF5	474	0084D4
32	72EFD2	106	6E7DF5	180	7D0796	254	C9E588	328	59EF93	402	37DDFF	476	346C67
34	794FDH	108	587DF6	182	196C7E	256	71090F	330	521DF6	404	3262EB	478	73E5E0
36	73HFCC	110	6F1DF6	184	C7E588	258	703C78	332	39A7F6	406	DFD880	480	3F4E5D
38	746FCC	112	77DC67	186	C9D788	260	188C5E	334	5DADEC	408	1EB5DB	482	300388
40	752FD2	114	50DD98	188	C9C188	262	18E4F1	336	383DEC	410	DFE598	484	1EJDF8
42	4D4F93	116	7CDD98	190	C9C784	264	C5E10E	338	5DDDF5	412	798787	486	33FDF9
44	4E7DF5	118	D9A7C8	192	C98588	266	C677C4	340	386DF5	414	789799	488	540D98
46	2E7DF5	120	D9B5C4	194	C5E77D	268	C6C77D	342	6E4E5D	416	5DDDF5	490	D9653F
48	39AC7E	122	C177C4	196	57F597	270	E5D799	344	601684	418	78DDF4	492	6DF740
50	39F39C	124	C1E5C0	198	583588	272	F0B7F3	346	7F3F93	420	78DC9D	494	546DF8
52	0F0D9E	126	D9E7F4	200	782C5E	274	5F6DBB	348	4E6F93	422	E5D715	496	4DF53F
54	77DD9E	128	D991F4	202	194C5E	276	D8B4E6	350	587DF8	424	38D3F4	498	745DF8
56	78277F	130	3E57F6	204	58157D	278	F937F6	352	5EC582	426	79CF93	500	6D733F
58	0EFD9E	132	7F73F6	206	C5E581	280	0005F3	354	7DBDF8	428	4D4F93	502	548DF5
60	781D9E	134	4E7DF5	208	C3D781	282	581DF5	356	7897EB	430	5B3DF8	504	748DF5
62	DFE783	136	79ADF5	210	581581	284	77DDF5	358	78A388	432	77DDF7	506	555DF6
64	4ED4EE	138	4F1DF6	212	C3D586	286	58BDF5	360	79DE5D	434	587DFE	508	DE5545
66	4EB4EC	140	7A4DF1	214	38F780	288	787DF1	362	7D4749	436	DE8587	510	D9E754
68	4E94EA	142	4FFF93	216	580C1D	290	581DF5	364	59EF93	438	39A798		
70	4E74E8	144	50BF93	218	C1E584	292	77DDF5	366	521DF6	440	723D9A		
72	785DF7	146	57DDF5	220	8A0382	294	58BDF5	368	7D1DF6	442	70EE5D		

DATA FILES START AT 4

Table 8-6. Hexadecimal ROM Code List (Continued)

LIST DATA

0	D990DF	74	404F93	148	4150FB	222	070726	298	720921	378	092912	448	502EBC
2	F935D9	76	586C18	150	5B35ED	224	76938C	299	9E69F4	379	752721	449	7797F9
4	0004D4	78	5AC5AB	152	DFB5ED	226	5F3F93	300	901778	379	50307C	449	48F493
6	198C9D	80	01E18D	154	3ED7F7	228	55FD9E	302	568B50	376	1A2581	450	14509E
8	C900CB	82	DFD7F7	156	722383	230	6E4D9D	304	780B1C	378	78DC7D	452	09010D
10	C9D77D	84	1515F6	158	D989F8	232	75F2F7	306	97CF93	380	9992CB	454	05E308
12	C9D598	86	59C151	160	1935B4	234	178D9E	308	50DF93	380	09910D	456	18910D
14	26337E	88	7F4DFC	162	784D98	236	728D9D	310	78107E	384	782708	458	40340C
16	588DFE	90	78F7F9	164	D722CC	238	55B32D	312	50EF93	386	989741	460	70705E
18	19857E	92	7827B1	166	40C5EE	240	842308	314	58AC50	388	7E3E93	462	50C03E
20	7DDFE	94	2DC28B	168	7EED7B	242	0EE305	316	07E116	390	50EF93	464	14518D
22	88D788	96	4D4E93	170	57CF93	244	6D8F18	318	07E701	392	781D7E	466	28009E
24	88E798	98	19DDF5	172	562DF5	246	0938CC	320	9C8708	394	5D8E93	468	09570D
26	7DDFB	100	9F4DF5	174	745DF5	248	0938CC	322	98207C	396	78E098	470	97D778
28	722DFB	102	404E93	176	580DF5	250	728D99	324	782708	398	57007E	472	1E4F07
30	581DF5	104	0E088C	178	750DF5	252	778C93	326	7E3E93	400	58E102	474	7E9493
32	7DDF5	106	5DD837	180	576DFD	254	7E3E93	328	5D8E93	402	1A2182	476	570F93
34	58DF5	108	590DFB	182	561568	256	57CF93	330	18AC9E	404	20107E	478	50E18C
36	787DF5	110	7E7DFB	184	DEB545	258	70CE5D	332	3E6C9C	406	781308	480	080808
38	595DFC	112	400DFB	186	7ED758	260	7E9788	334	808928	408	7E9E93	482	5D8E93
40	791DF9	114	784DFB	188	7E59E7	262	05E72E	336	19E078	410	50E993	484	080808
42	133C9D	116	808783	190	570F93	264	5780CC	338	070521	412	79E07E	486	52107E
44	522825	118	7E4E5D	192	00C05E	266	7E905E	340	5D078F	414	50E193	488	58340C
46	788098	120	DD758	194	052545	268	3E3D99	342	77D5E4	416	50C05D	490	584593
48	18807D	122	583480	196	378783	270	07E89E	344	756719	418	09E588	492	07E595
50	126126	124	5855B4	198	720D93	272	5D855E	346	712748	420	98207C	494	738721
52	19C19C	126	DE55B5	200	88097D	274	78C72	348	5D0788	422	583DFE	496	98C795
54	9C05E	128	F933F5	202	1E8FD7	276	05E98E	350	77D72C	424	983DFD	498	189409
56	5C0018	130	000484	204	7F3F93	278	55E196	352	756711	426	7E3E93	500	8834FE
58	01E59C	132	000DF6	206	570F93	280	788058	354	718788	428	5D8E93	502	07978E
60	05C79C	134	8EDDF5	208	778C79	282	1FD07C	356	05C78E	430	589DF8	504	D8E788
62	12658C	136	77CE5D	210	57CF93	284	5E035E	358	588189	432	586582	506	D8E5C1
64	326C5E	138	782729	212	880888	286	078588	360	195588	434	78E18B	508	7483E7
66	57DC17	140	401DF5	214	880888	288	DE8989	362	7B235E	436	28E78C	510	50E193
68	788C1E	142	746DF5	216	178D9E	290	1955ED	364	4D4F93	438	588C98		
70	288C7D	144	488DF5	218	988D98	292	5E94CC	366	982E5D	440	09D181		
72	7F3E93	146	758DF5	220	7E4E5D	294	DF855E	368	345381	442	077788		

DATA FILES START AT 4

Table 8-7. Hexadecimal-to-Binary Conversion

Character	8	4	2	1
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A	1	0	1	0
B	1	0	1	1
C	1	1	0	0
D	1	1	0	1
E	1	1	1	0
F	1	1	1	1

Table 8-8. Processor Instruction Decoder

Bit Number	RAM Address	Logic Function/ Arith Computation	Data Entry/Exit	No Op	Not Used
0	RAM Address	Number of Bits in Word		0	Not Used
1		(Take Complement)		0	
2				0	
3				0	
4				0	
5		Op Code	Data Location Code	0	
6				0	
7				0	
8	0				
9	Read/Write (0) (1)	0	1	0	1
10	True/Comp (1) (0)	1	1	0	0
11	0	1	1	1	1

8-190. Logic Function/Arithmetic Computation

8-191. As previously mentioned, the second column in Table 8-8 contains codes that represent either a Logic Function or Arithmetic Computation, i.e., a function of the ALU. Again, the first three bits (110) are responsible for selecting this column, or, rather, the mode itself. The result is that whatever serial data is subsequently exchanged will be with respect to the ALU.

8-192. The second four bits designate the op code (operation code), i.e., the specific operation to be performed. These four bits represent an octal code that corresponds to one of those found in Figure 8-13. For example, the octal number representing the AN OR Logic Function is 02. Bits 5 through 8 would contain the binary equivalent of this octal number:

0 2
0 010

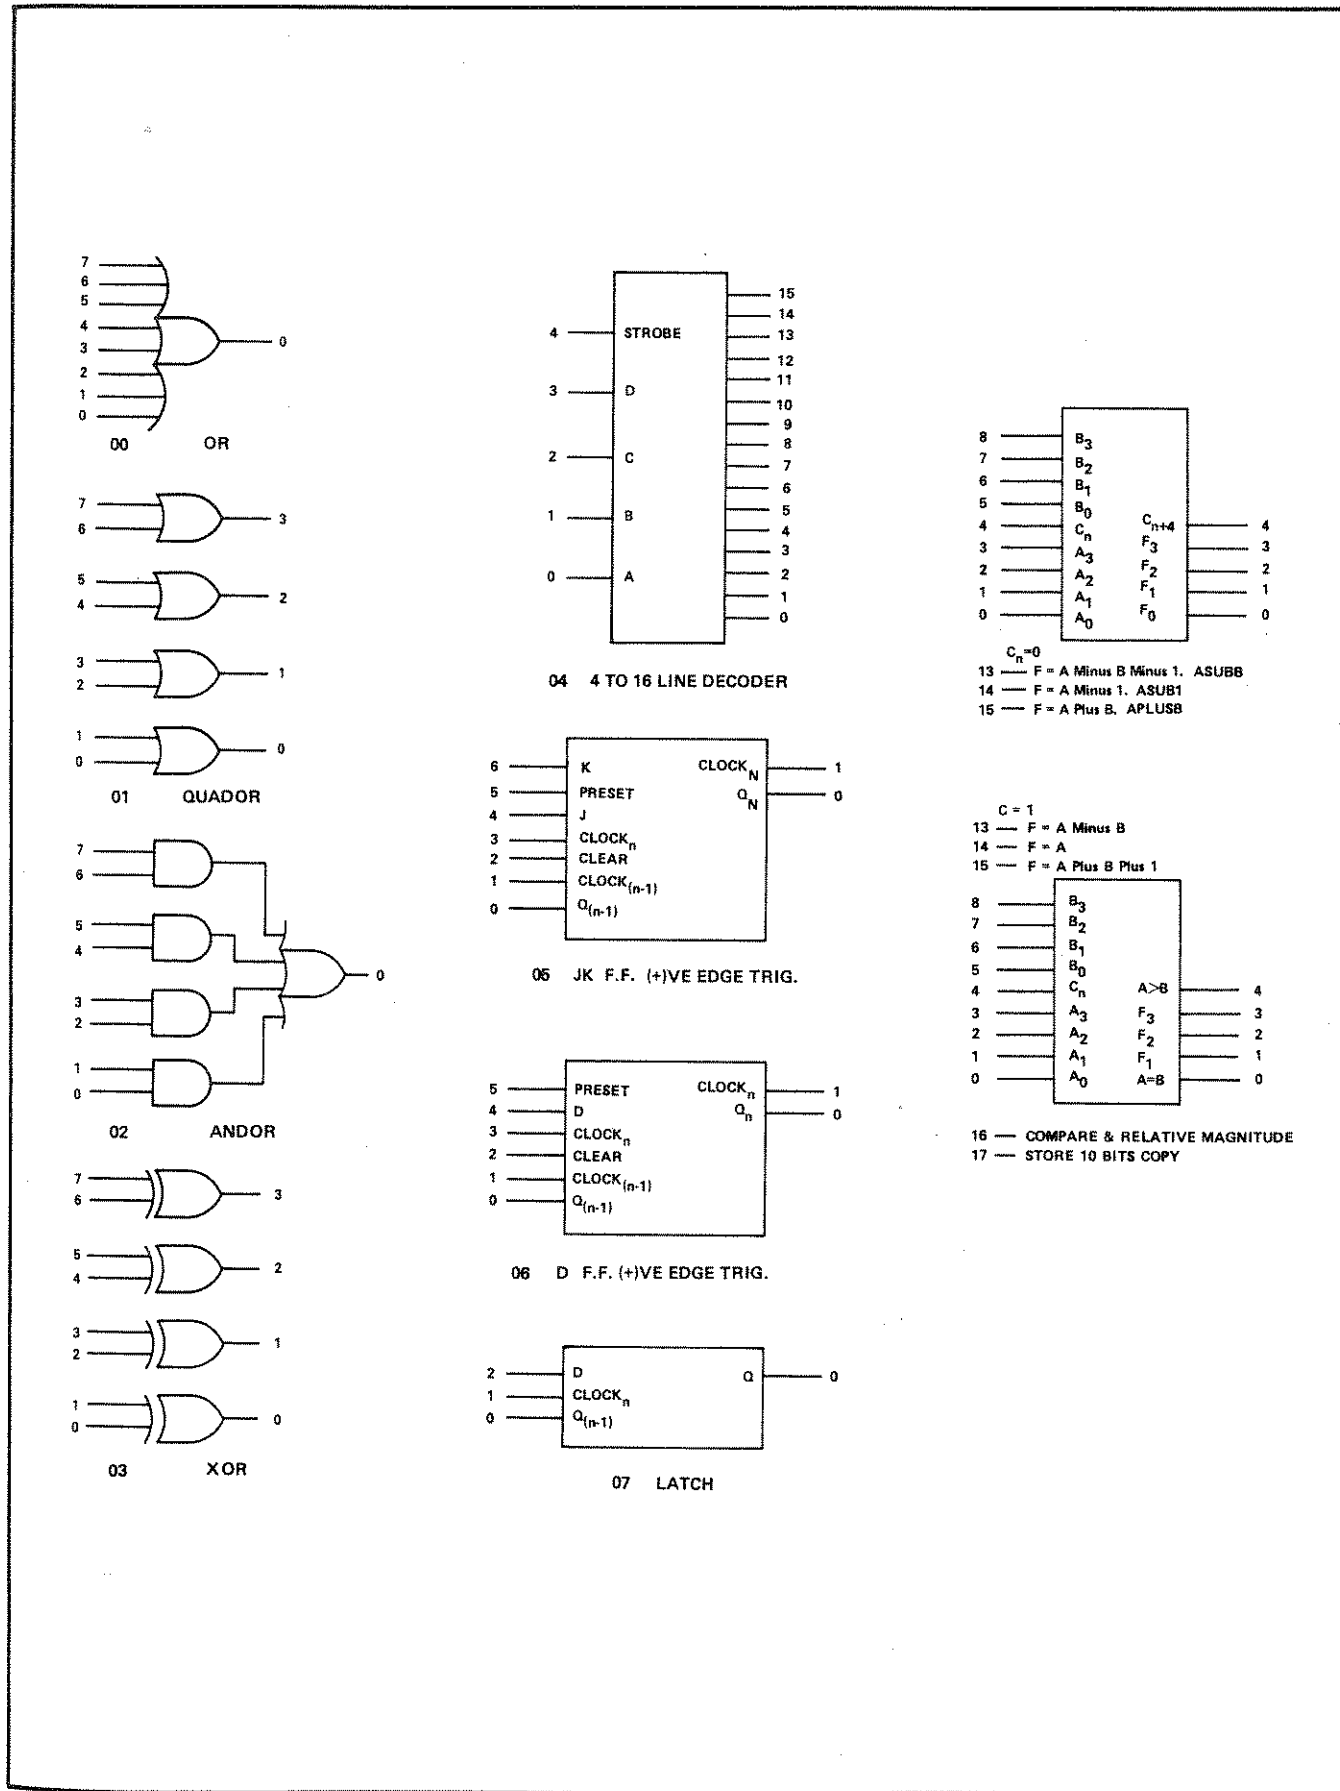


Figure 8-13. Op Code Guide

8-193. The last five bits (Bits 0-4) of the 12-bit word specifies the number of bits involved in the *forthcoming* data transfer. If the purpose of this transfer were to place a stimulus on the AND OR logic model, up to eight bits of information would be needed (one for each input of the model). Those inputs not specified are set to "0". To place a "1" on each input would require a binary eight; however, the binary code used in this portion of the word is always the complement of the desired number. (The tester keeps track of the number of bits transferred by storing this code into a 5-bit counter. As each bit is transferred, the counter is clocked until it overflows.) Since the

5-bit code is weighted in-binary $\left(\begin{array}{c} \text{bit} - 4 \ 3 \ 2 \ 1 \ 0 \\ \text{weight} - 16 \ 8 \ 4 \ 2 \ 1 \end{array} \right)$, an eight would appear as $\left(\begin{array}{c} 43210 \\ 10111 \end{array} \right)$, which is actually the complement of eight $\left(\begin{array}{c} 43210 \\ 01000 \end{array} \right)$. When examining this portion of the 12-bit word, it is easier to refer to the zeros than to perform the complement exercise.

8-194. Now that the ALU function has been selected and the number of bits involved in the transfer has been specified, another Program Control word is needed to regulate the process of transferring serial data. This word-type is found in column 1 of Table 8-8 and is called, simply, the RAM Address code.

8-195. RAM Address

8-196. The MSB of the code is a "0" and is responsible for designating this word as a RAM address. The second MSB (bit number 10) determines whether or not the *serial data* transferring either to or from the RAM is to be complemented (inverted in state). Bit number nine specifies the *direction* of the transferring data: 0 = "read from the RAM", 1 = "write into the RAM". The

$\left(\begin{array}{c} 8 \ 7 \ 6 \ 5 \ 4 \ 3 \ 2 \ 1 \ 0 \text{ - Bit} \\ 256 \ 128 \ 64 \ 32 \ 16 \ 8 \ 4 \ 2 \ 1 \text{ - Weight} \end{array} \right)$. The RAM Address Register stores these last nine bits and uses them to address a RAM data location.

8-197. To complete the above example, assume data is being read from the RAM and to the ALU; therefore, the RAM must already contain the information to be sent. (The result of a previous data transfer.) Also, the RAM has been addressed to its starting location by the RAM address code, which was stored in the RAM Address Register. Each time a bit of data is clocked from the RAM, the RAM Address Register advances one location and the "bit counter" increments by one count. This continues until all data bits are transferred from the RAM, at which time the bit counter overflows and ends the transfer process. The Processor Memory sends out a *program advance* signal and then examines the next Program Control code. This could be another ALU function, for example, or another RAM Address code or a series of these codes that would address individual RAM locations for the purpose of transferring single bits of data.

8-198. Data Entry/Exit

8-199. The next column to be examined is DATA ENTRY/EXIT. This type of word is used when sections of the tester, other than the ALU, require the transfer of serial data to or from the RAM. The code's first three bits (111) specify it as being a DATA ENTRY/EXIT word. The next four bits (Bit numbers 5 through 8) designate the *other* section of the tester involved in the forthcoming data transfer (the RAM is always one of the two). Table 8-9 shows the octal characters that are found in this portion of the Program Control Word and the corresponding section it represents.

8-200. The last five bits of the word specify the number of serial bits to be transferred. Again, this number is expressed as the complement of the number. Once the Processor Memory has accepted this code (in the same manner as the Logic Function example), a RAM address code is needed to determine the direction of data flow and the starting RAM address.

Table 8-9. Data Entry/Exit Codes

Code	Data Location
00	Relay
01	Main Memory Advance
02	Data read from eight least significant bits of the Program Control lines
03	I/O Board
10 ₈	Front Panel* (each bit is transferred in order)
11 ₈	Printer
12 ₈	Magnetic Card Reader
13 ₈	Main Memory
14 ₈	ROM Address Counter
15 ₈	External Control**
16 ₈	Digital-to-Analog Converter
17 ₈	Pin Driver Board (bit pattern, failure data)
<p>*Data to Front Panel:</p> <ul style="list-style-type: none"> (1) Fail Lamp (2) Cont. Lamp (3) Pass/Fail (Sort/Access) <p>Data from Front Panel:</p> <ul style="list-style-type: none"> (1) Load (2) Write (3) Terminate Test (4) Continue on Fail (5) End on Failure (6) Test (7) Printer (8) I & V <p>**External Control from the CPU (from the RAM)</p> <ul style="list-style-type: none"> 2⁰ Record 1 = Read, 0 - Write 2¹ Load light 2² SRQ - I/O Board 2³ Pin Driver on 2⁴ End of Test 2⁵ (Not Used) 2⁶ (Not Used) 2⁷ Sort (reject) <p>External Control to the CPU (to the RAM)</p> <ul style="list-style-type: none"> 2⁰ Card in 2¹ MFL (sync) 2² End of Card Record 2³ Ready (D/A) 2⁴ Request (printer) 	

8-201. In this example, as with the Logic Function example, the RAM address word always follows the Logic Function/Arithmetic Computation and Data Entry/Exit words. This is not true of the Special code, found in column 4 of Table 8-8. This code is a no op (no operation) code and performs no actual function. It does not address the RAM Address Register, but it does generate a Program Advance signal to advance the ROM program.

8-202. DECODING THE ROM WORDS

8-203. Now that the ROM words have been examined as to their type and function, the following paragraphs will describe the process of decoding the hexadecimal words into 12-bit Program Control words. ROM addresses 6 and 7 will serve as an example for this decoding. Table 8-6 lists these addresses as "6 2C8FIE".

8-204. The decoding process begins by first examining ROM address 6, which contains the word FIE. Referring to Table 8-7, Hexadecimal-to-Binary Conversion, the codes appear as shown below.

	F	1	E	
(MSB)	1111	0001	1110	(LSB)

8-205. Once the word is converted to this form, Table 8-8 can be used in determining the type of word it is. Notice that the three-most significant bits are all 1's. Locating this in Table 8-8 reveals the word to be a DATA ENTRY/EXIT word.

8-206. The next step is to separate the coded word into sections, as its particular word type demands. In this case

111	1000	11110.
Specifies DATA ENTRY EXIT	Specifies Data Location (10s)	Specifies Number of Bits in word in complement form

8-207. The Middle portion of the word is expressed in octal with the first three bits on the right being the LSD. Therefore, this code translates to octal 10. Table 8-9 reveals this Data Location to be the front panel.

8-208. The last step in decoding this word is to examine the last five bits (11110). Table 8-8 points out that this specifies the number of bits in the data word to be transferred and that this information is given in *complement* form. Taking the complement reveals that only one data bit will be transferred:

	16	8	4	2	1
11110	0	0	0	0	1

8-209. Again, an easier method is to consider the zeros to be true. The second part of the transmission information (RAM Address 7) can now be translated. The word in this location is 2C8. This translates as shown.

	2	C	8	
(MSB)	0010	1100	1000	(LSB)

8-210. A zero in the MSB designates this word as a RAM address code. It can then be sectioned into the particular word-type format, as outlined in Table 8-3.

0	0	1	011001000
---	---	---	-----------

8-211. The '0' located in bit 10 specifies that the data bit to be transferred will be inverted in state. The '1' located in bit 9 means the data bit will be written *into* the RAM. The last step is to decode the RAM address information. The data bit will be written into this location. This conversion appears as follows:

256	128	64	32	16	8	4	2	1	---	weight	
0	1	1	0	0	1	0	0	0	0	---	bit

Therefore, $128 + 64 + 8 = \text{RAM Address } 200$.

8-212. The two words have been combined to give all information necessary for governing the transfer of data. The codes have decreed that one data bit from the front panel is to be written into RAM location 200 . Knowing this, Table 8-9 can be referred to, once again, to determine the purpose of the data bit. Noting the asterisk that references "Data from the Front Panel," the transfer of a single bit of data from the front panel means that the bit will be *load* information. Specifically, "was the LOAD button pushed?" To determine the position of the PRINTER switch, for example, requires transferring seven bits of data; only the seventh bit is of importance. The RAM will store the previous six bits but may later write over that information.

8-213. The tester's ROM sequence and operation is outlined in paragraph 8-149. ROM Mnemonic Code List. Refer to the decimal side of the ROM Address column. The ROM Address 6 line outlines the previous example: front panel data, TO the RAM, take the complement (c) of the transferring data, and place it in RAM location 200 (first or starting address is 200 , ending address is 200).

8-214. A4 ARITHMETIC/LOGIC UNIT OVERVIEW

8-215. The main purpose of the Arithmetic/Logic Unit board (A4) is to simulate a logic model, as described in the Block Diagram Theory. The simulators, themselves, are actually groups of blocks on the board that may be combined to form a particular function (refer to A4 schematic). The simulators are the ALU (U8) and those groups designated on the schematic: the JK simulator, the 4-16 Line Decoder simulator, etc. The operation involves using a portion of the 12 bit Program Control word (the Op code) to specify the function to be performed (OR, D type F-F, A=B, etc. See Figure 8-13. Once this is determined, serial data is received from the RAM and converted to a parallel format so it can be presented to the inputs of the Model. The results of this operation are then transferred serially back to the RAM (A5) on command.

8-216. The OP CODE-DATA LOC lines entering U22 are also sent to U23. If the lines contain a Data Location code, this code enables one of U23's outputs, provided G₁ and G₂ are Low. This output enables one of the blocks inside the tester (printer, front panel, etc.) to receive data from the RAM. This particular function is unrelated to the other operations on the ALU board and can be thought of as part of the Processor Memory, A5.

8-217. If the OP CODE-DATA LOC lines entering U22 contain an Op code, then U22 and the encoder gates (U16D, U14A, B, and C, and U13E) present a Select code to the ALU, U8. Once U8 has been coded to perform a function, the data can be placed across the A and B inputs of U8.

8-218. The ALU board accepts the input data on pin 7, the RAM MEM OUT line. The data input control circuit (U11C, U17A, B and U2) controls the loading of data into the Logic Simulation Setup Storage circuit (U3 and U4). This circuit is cleared to '0' prior to use so that only the '1' state data bits change the storage data. The data is not loaded directly into U3 and U4 but, rather, controls whether the devices are preset to accept logic levels from U2. To begin with, U2 is preset such that a '1' is placed on the O_A output. Since U17A *alternately* selects either U10B or U10C to pass the data latched in U11C, then U3(I_E) will preset to the same level as the data input. On the next clock pulse, a new bit of '1' state data may be preset into U4(E) in the same manner. (It should be noted that the clock input of U3 and U4 are disabled throughout this process.) After the second clock pulse, the '1' in U2 has shifted to the O_D output, which enables the D inputs of U3 and U4 to be preset by incoming data. This process continues until all data is loaded (up to 10 bits) into U3 and U4. The data goes to the different simulators on the board.

8-219. The results of the simulation is fed to the D inputs of U15. When the DATA XFER/LOGIC FUNC line is Low, it enables the STROBE input, which activates the IC. This IC then uses the Op code to select one of the inputs to pass simulator data to U7 where it is shifted back to the RAM on A5.

8-220. A5 PROCESSOR MEMORY OVERVIEW

8-221. The Processor Memory board contains the 512-bit RAM and its associated Address Register and Word Counter (refer to A5 schematic). Also located on this board are the Constant Converter, the Input Data Selector, and a storage element for the Op Code or Data Location. These blocks operate in accordance with the type of Program Control word placed on Program Control lines, PROG BITS 0-11. The following is a brief statement on each of the schematic blocks.

8-222. **512-Bit RAM.** The RAM consists of two Read/Write Memories, U10 and U11. Only one of these memories is addressed at a time. U10 contains locations from 0-255 while U11 covers locations 256-511. Before these memories can be used, PROG BIT 11 must be a "0". This bit is stored in U6A. PROG BIT 8 selects either U10 or U11 for operation, and PROG BIT 9 (through U12) selects the Read or Write mode. Bit 10, stored in U12D(6,12), determines if data into or out of the RAM is to be true or complement.

8-223. **RAM Address Register.** This register is responsible for addressing the ROM and is formed by U15, U18, and the first bit of U12. The second bit of U12 is an overflow. A new address is loaded into the register when the Q output of U6B is low. Once loaded, the register's address can be incremented by clock pulses. Clocking is controlled by U13A and U13C.

8-224. **Word Counter.** The Word Counter consists of U16 and the first bit of U9. Loading is enabled by U13B. The number stored in this counter is the complement of the number of bits in the word to be transferred. Counter overflows when all bits have been transferred.

8-225. **Register/Word Counter Load Control.** Depending on the state of the Word Counter, U6B will enable the RAM Address Register to load another address or it will enable U13B to load the Word Counter when the appropriate Program Control word demands this operation.

8-226. **Program Advance Counter.** Under all conditions except a Special code, U1 is loading a binary 15(1111). Whether or not the device outputs a carry to the Program Advance line depends on the output of U2A. With a Constant Code, the device loads a binary 9(1001) one clock pulse after it loads a 15.

8-227. **Op Code or Data Location Storage.** When U13B's output is low, U19 stores either the Op Code or Data Location Code, available on PROG BITS 5-8. This information is fed to A4, as well as being used on A5.

8-228. **RAM Input Data Selector.** The data on the A, B, and C input lines can be an Op Code or a Data Location Code. If it is a Data Location code, U13C enables U20 to pass data from the selected data source, through U3A, U4B, and into the RAM. If data is transferred from the RAM, Program Bits 5 through 8 are used by A4U23 to select the recipient of the data.

8-229. **Constant Converter.** The Constant Converter, U14, is used when the tester reads the eight least-significant bits from the Program Control lines into RAM storage. This process requires a parallel-to-serial conversion, which U14 provides. Once the 8-bit word is loaded into U14, it is clocked out serially and into the RAM via U7C, U3A, and U4B.

8-230. EXAMPLE OF OPERATION

8-231. The following example will outline the Processor Memory's operation with a Data Entry/Exit Code and then a RAM Address code. Refer for a moment to Table 8-8 and note the format

of the Data Entry/Exit word. The first two bits and the High \overline{Q} output of U6B allow U13B to store the 4-bit Data Location code into U19. The Low output of U13B also loads PROG BITS 0-4 into the Word Counter, U16 and U9. At this time, the Q outputs of U6A and U6B are High and disable the RAM and the LOAD line of the RAM Address Register. The low \overline{Q} output of the Bit 11 Latch, U6A, disables U13C until the RAM Address Code is presented. When the Data Entry/Exit word is accepted, U13B enables U2A, which allows U1 to output a PROGRAM ADVANCE signal. This is a signal for the program source to present the next Program Control word.

8-232. Once the RAM Address code appears on the Program Control lines, the address (PROG BITS 0-8) is loaded into the RAM Address Register. This is done with the Low Q output of U6B. The same clock pulse that initiates this action also clocks the "0" of PROG BIT 11 onto the Q output of U6A, thus enabling the RAM. If PROG BIT 9 is a "1", it allows data to be written into the RAM by enabling U13A. In this mode, U13C causes U20 to select a data source and transfer the data through U20A, U3A, and the Exclusive OR, U4B. If bit 9 were a "0", the mode would be "read from the RAM". Data would then pass through U2D, U5D, and U5E and out on the RAM MEM OUT line.

8-233. Transferring bits of data, either to or from the RAM, occurs with each clock pulse. These pulses advance both the RAM Address Register and the Word Counter. When in the Write mode, these clock pulses also generate a Read/Write operation on the RAM. After all data bits are transferred, the Word Counter is at a binary 15. This enables U2A, thereby allowing U1 to output a Program Advance.

8-234. A6 MAIN MEMORY OVERVIEW

8-235. The Main Memory circuitry is represented on the schematic diagram Figure 8-11. As mentioned in the Block Diagram theory, the Main Memory stores all information taken from the magnetic program card. Data enters the memory serially and can be removed serially or in parallel. If removed in parallel, it is in the form of a 12-bit Program Control word and is sent to the Processor Memory board — A5. If removed serially, it is also sent to A5, but it will enter the RAM. During a Logic Model simulation, this memory, not the ROM, has full program control of the tester.

8-236. The actual memory is shown on Sheet 2 of the two schematics representing A6. The top three IC's (U34, 33, and 32) are data switches. Depending on the state of the select line, these IC's transfer a 12-bit word from either the ROM or the Main Memory onto the Program Control lines.

8-237. The middle row of IC's (U36, 26, 19, etc.) are 4-bit Shift Registers that can be loaded with data in two ways: (1) enabled and clocked in a serial mode or (2) enabled and clocked in a parallel mode. These registers never function as anything more than a temporary storage location.

8-238. The bottom row of IC's (U35, 25, 18, etc.) comprise the actual memory. Each IC contains four rows of data with each row being 256 bits long. Data is serially shifted in each row with two clock signals. These clocks are generated on A6 and are shown on Sheet 1. They are basically the same signal but 180° out of phase with one another, hence $\emptyset 1$ and $\emptyset 2$. Each clock phase clocks in data.

8-239. A characteristic of the Main Memory is that it is a *dynamic* shift register. This means that once data is stored, the contents of the memory must somehow be changed within a period of time; otherwise, the energy level holding that data bit in memory will decay, and the data will be lost. The memory is changed when $\emptyset 1$ or $\emptyset 2$ clock signals occur; however, these signals are not always present. They occur only when the memory is accessed or if new data has not entered within a set period of time (about 0.5 msec). If approximately 0.5 msec elapses with no access of data, the memory goes into a *refresh* mode, which means that the memory shifts itself 256 pieces. This refreshes the memory's energy level and replaces the data to its position prior to the refresh mode.

8-240. Loading Data into the Memory

8-241. Loading into the memory is done with the help of a circuit (U31 and U22F) shown on the upper right corner of Sheet 1. Recall that when serial data enters the memory, it is in the form of two 12-bit words. This data comes from the RAM and enters A6 on pin 7. The two AND gates of U31 are alternately clocked to pass data from both the RAM MEM OUT line and the QC output of U17 (Sheet 2). These alternate bits of data enter pin 1 of U36 and are shifted through the middle row of shift registers at twice the rate as data input on the board. After the first 12 bits of data are entered, they appear on the QA and QC outputs of each IC, with the QB and QD outputs holding whatever was being shifted out of U17(11).

8-242. The next 12 bits, the second word, is now entered in the same manner: one bit of RAM data then one bit of data from U17(11). This time, however, data from U17(11) will be the first 12-bit data word previously entered. After the second 12 bits are entered, the loading operation is complete. The first word appears on the QA and QC outputs and the second words appears on the QB and QD outputs. (Note the connections to the switching IC's.)

8-243. The outputs of the 4-bit shift registers connect to the inputs of the memory shift registers. This data is now loaded into memory with each phase of the two-phase clock.

8-244. When memory data is to be passed onto the Program Control lines, the data to be transferred (both 12-bit words) appears on the memory's output lines. It is then parallel loaded into the middle row of shift registers. The 12-bit word on the QB and QD outputs pass through the switches and onto the Program Control lines. Then a *shift-right* operation is performed on the register and the second 12-bit word is read out.

8-245. The circuitry represented on Sheet 1 controls the Main Memory's operation. For example, U1 and U2 are presetable binary counters and are used to regulate the 256-bit cycle when the Main Memory is in the refresh mode. Although the counter does not keep track of memory locations during normal data transfer, it can be used to advance the program by N bits. This information is inserted into the DD input of U1 in a serial manner (8 parallel load operation) and is the complement of the number of bits to be advanced.

8-246. When the memory outputs its Setup Data, it is a continuous process and the refresh mode is not needed. Should the memory stop outputting, e.g., if a failure is detected in the Hold on Fail/Step mode, then the refresh mode is necessary.

8-247. Assume that the memory has stopped outputting data but the Refresh One-Shot, U12, has not yet timed out. At this point, the outputs of the Main Memory Advance Counter, U1 and U2, are sitting at all one's, including the Carry Output.

8-248. The next clock pulse does not clock the counter, because the High on U3B(5) causes U11B to disable the counter. However, because the Refresh One-Shot has not yet timed out, U29A(2) will be High, and this clock pulse will cause U29A to set. This places a High on U11B(5), which keeps the counter disabled through subsequent clock pulses, until the one-shot times out. When this occurs, U29A switches state on the next clock pulse and allows the counter to function, once again. The first clock pulse into the counter sets the carry output Low, which results in clearing U29.

8-249. As the counter is being stepped through the counts in the refresh mode, or any other mode, U3B continues to toggle with the clock pulses. This alternately enables and disables the counter. This allows the counter, which is clocked up with 8 MHz, to follow the Main Memory at 4 MHz. This process continues until U1's Carry Output goes high, once again. This removes the Low on U29A(1) and allows the next clock pulse to set the counter with the High on the D input.

8-250. Other elements on Sheet 1 are U27A and B, U29A, and U12, which control the refresh mode. U12 is a retriggerable one-shot. The Q output of the one-shot stays Low as long as it is being triggered by the two gated clock signals. Once these signals stop, the one-shot will time out 0.5 mS later and the refresh operation will begin.

8-251. The Main Memory's phase 1 and phase 2 clock signals are generated by U5A and B, Q1, Q2, and U6. These devices are controlled by U13A. The circuitry to the left of the clock generators are associated with generating the mode control (serial or parallel operation of the Main Memory) and the two clocks for the 24-bit shift register. It is also used for multiplexing the data in and out of the memory.

8-252. U28B prevents the ROM or Main Memory from outputting data onto the Program Control bus. When U28A is clocked, it latches a data bit that indicates whether the program source is the ROM (Q=H) or the Main Memory (Q=L). U29B passes serial data from the Main Memory to the RAM on A5. Since the data is staggered in the memory, the operation for removing it is similar to that of entering it. The data is shifted through the shift register twice. One 12-bit word is read out on the first pass while the second word is temporarily ignored. On the second shift through the shift register, the second 12-bit word is read out.

8-253. A7 I/O BOARD BLOCK DIAGRAM THEORY OF OPERATION

8-254. The A7 I/O board (Figure 8-14) is used to interface, control, and format the data exchanged between the HP 9825A Desk Top Computer and the HP 5045A Digital IC Tester.

8-255. The A7 provides a standard HP-IB interface for these units. After the standard HP-IB handshake routine establishes that the 5045A is to receive (LISTEN mode) or send (TALK mode) data to or from the 9825A, the A7 I/O board accepts the data from the initiating unit and formats the data for use by the receiving unit.

8-256. LISTEN Mode

8-257. When the A7 I/O board is in the LISTEN mode of operation data is being received from the 9825A and transmitted to the 5045A. A typical sequence of operation is as follows:

- a. The information is loaded in from the HP-IB bus by specifying the letter "I" which initializes the address counter.
- b. The data is then loaded into the Program Buffer Memory.
- c. The Run Flip-Flop is then set by specifying the letter "R" and the data stored in the Program Buffer Memory is transferred to the 5045A Digital IC Tester.

8-258. TALK Mode

8-259. The sequence of operation for transferring data from the 5045A to the 9825A requires that a program first be loaded from the 9825A during the listen mode that will generate the data that is to be transferred back to the 9825A. The data generated by the 5045A is then transferred via the serial-to-parallel converter and data selector to the Data Buffer or return address storage. When the A7 I/O board is set to the talk mode, this data is automatically transferred to the 9825A.

8-260. A8 PROM BOARD OVERVIEW

8-261. The PROM (programmable read only memory) board contains 36,864 bits of fixed information arranged in 3072, 12-bit words (refer to A8 schematic). This memory stores the tester's basic operating routine. See Tables 8-6 and 8-7 of the information in hexadecimal and mnemonic operator form. The board is controlled by the 12 ROM ADD lines, the I/O ADDRESS line, and the ROM ADD CNTR XFER EN line. The three most-significant bits of the address lines are decoded in U23, which enables one set of three ROM's (along the horizontal plane of the schematic).

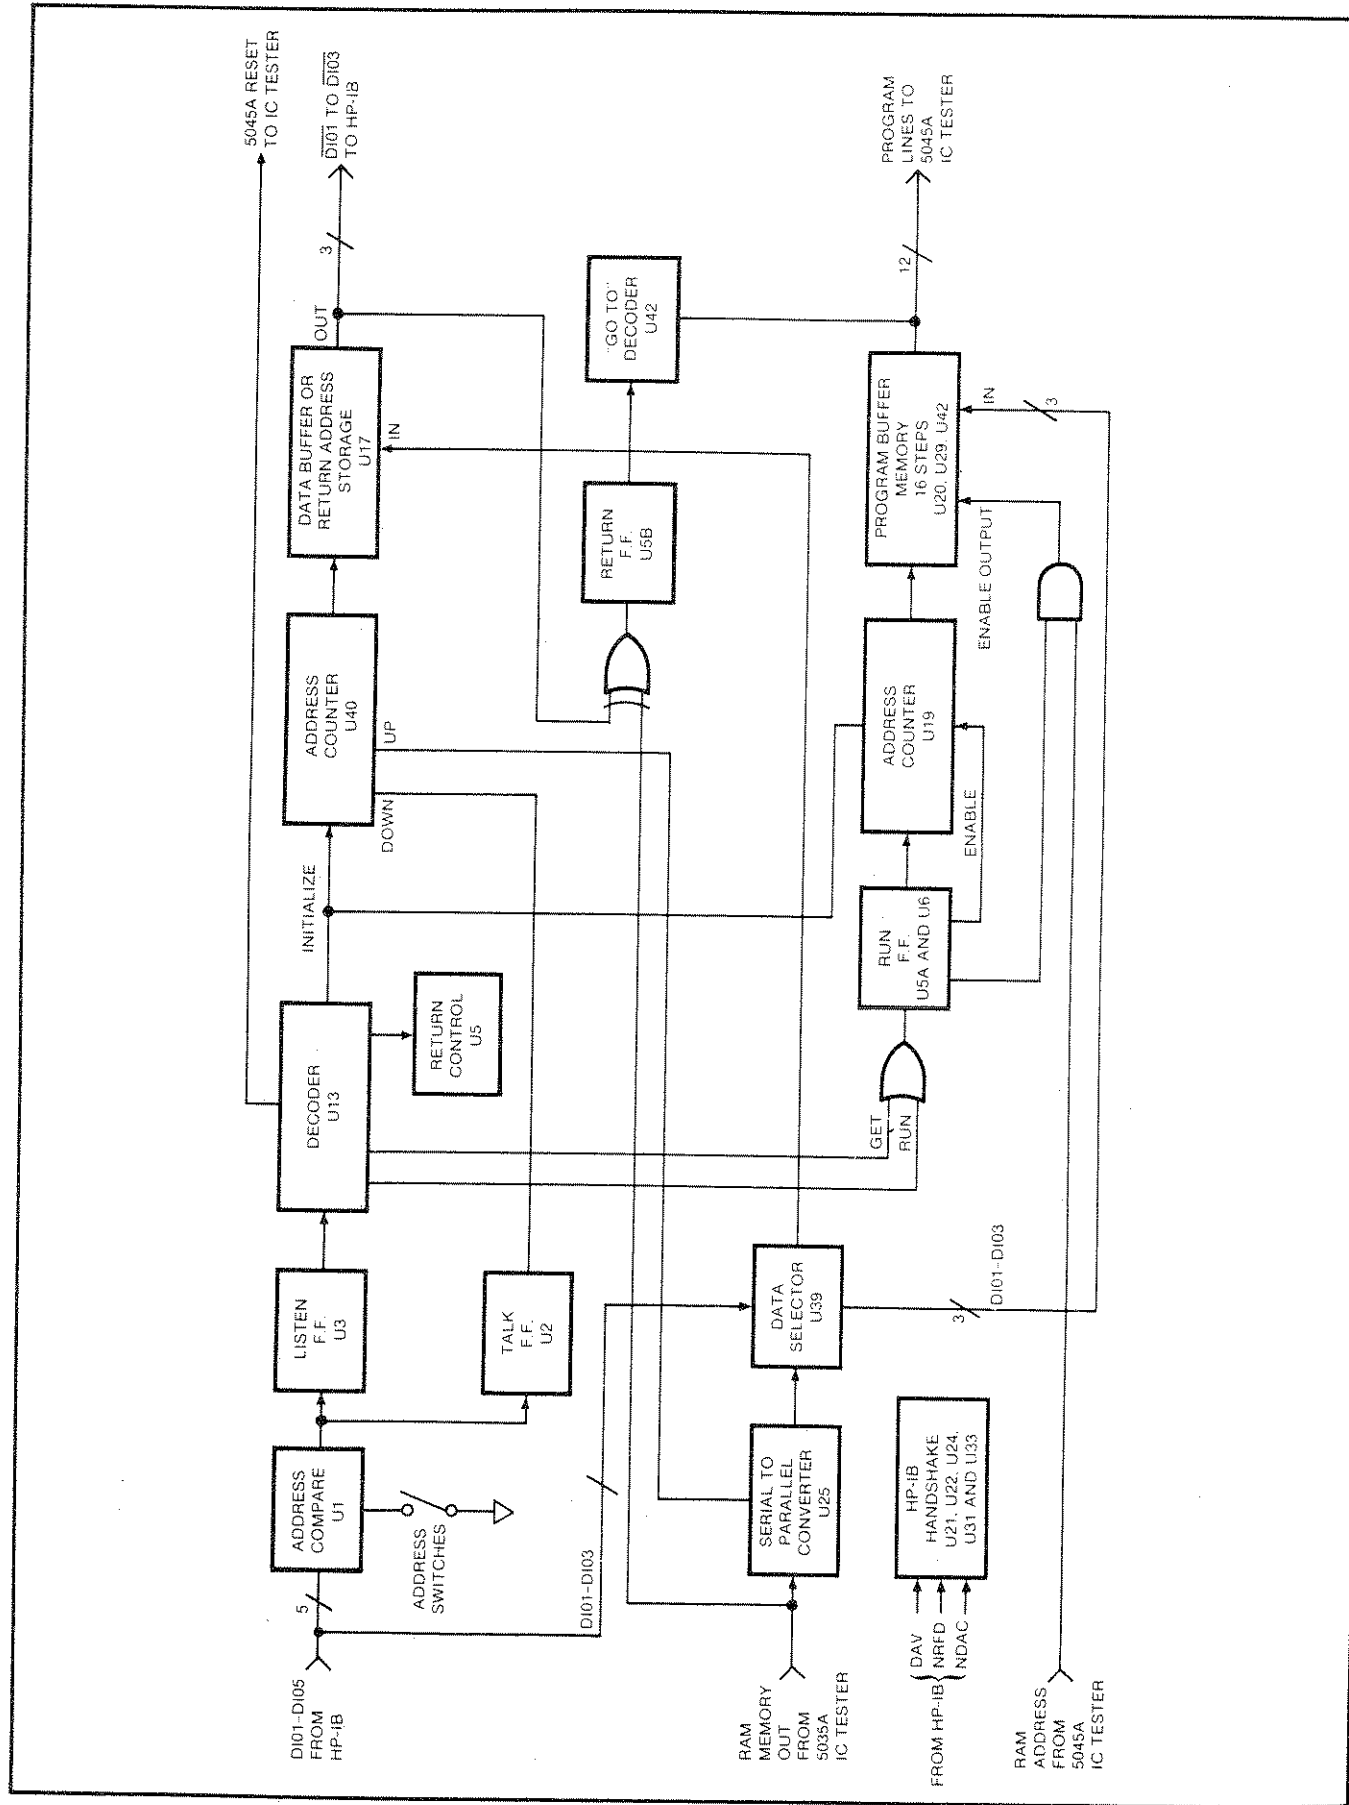


Figure 8-14. A7 I/O Board Block Diagram

8-262. Once a three-ROM set is enabled by U23, ROM ADD lines 2-256 drive the "A" inputs on the three devices, thereby, addressing a specific location within each ROM. The "0" outputs of the ROM's present their stored data to the output multiplexers, U8, U16, and U24. Each multiplexer will accept only four of the ROM's eight output lines at a time, as determined by the ROM ADD 1 line, which feeds the selected inputs. When the select input is a logical '0', the multiplexers select the first word, and select the second word with a logical "1". The selected bits exit the multiplexers as 12-bit Program Control words.

8-263. When appropriate, U7A and B and U15B act to force a logical "1" in Bit 11 of the Program Control word. This forces the Processor Memory (A5) to interpret any instruction on the lines as Data Entry/Exit or Logic Function/Computation rather than a RAM Address code.

8-264. The I/O ADDRESS line inhibits U8, U16, and U24 when ROM addresses 0-15 are selected and the RUN I/O PROG (A9) lines are both active.

8-265. A9 ADDRESS BOARD OVERVIEW

8-266. The primary function of this board is set up ROM addresses. The ROM Address Register is comprised of U17, U20, and U12 (refer to A9 schematic). The register outputs a binary weighted, 12-bit ROM address code, which goes directly to the ROM board, A8. Under normal operation, the register's code increments with each gated clock pulse in a binary fashion. The PROGRAM ADVANCE line goes High for one clock pulse after the Data Location code is entered and again after the data is actually transferred (following the RAM Address code). If the address is to be changed by many counts, e.g., in a "GO TO" statement, the counter is preset with new address. This is done by pulling the register's LOAD inputs Low while the PROGRAM ADVANCE line is low and clocking in the new address code, which is presented serially on the RAM MEM OUT line. Notice that this line goes to the D_D input of U12. Once the first bit of the new code is clocked in, it is presented on the Q_D input. Following this output shows that it is connected to the D_C input. On the next clock pulse, then, the bit that was clocked in first will appear on the Q_C output while the second bit appears on the Q_D output. This left-shift technique continues until all 12-bits are entered when the ROM ADD CNTR XFER EN line goes High. The last bit entered is the most-significant bit.

8-267. Anytime the address is not being loaded and the Q_C and Q_D outputs are High, gate U4A is enabled and allows the multiplexers on A6 to select the Main Memory as the program source. Otherwise, the ROM functions as the program source. However, any time the ROM Address Register is being loaded with a new address (either advance or transfer), U2D is enabled and the resultant Low on the INHIBIT READ PROG line disables the A6 multiplexers from passing any data.

8-268. U5A, in the lower left corner of the schematic, generates the 8 MHz clock signal. U2A ANDs 4 and 8 MHz to give a 4 MHz signal with narrow pulses. This signal indirectly clocks the ROM Address Register. U15B divides the signal by two to provide a 4 MHz signal. When the Main Memory is being accessed, it uses the 8 MHz signal; when it is being refreshed it uses the 4 MHz signal. U9A controls whether U11 passes the 8 or 4 MHz signal onto the MEM CLOCK line. U3A is also gated by U7B to pass the 4 MHz clock signal out to all boards except the pin drivers. This is the main data transfer clock.

8-269. When the instrument is first turned on, it is necessary to preset several circuits within the tester to some initial point, e.g., the ROM Address Register is reset to zero. The circuit that does this is R10 and C4, Q1, U10B, U16B, and their associated components. When the instrument first turns on, C4 conducts current rapidly and appears as a short to ground. This keeps Q1 turned off and allows U10B to clear U16B. The resultant High on the \bar{Q} output pulls the RESET line Low through inverter U3B. Once C4 charges positive enough to turn on Q1, the inverter releases the Low on the CLR line. The D Flip-Flop sets on the next clock pulse, as a result of U1C(8) being High.

8-270. When the Program Control Lines contain a Data Entry/Exit Code that has a Data Location code of 158, it causes A4U23 to pull the EXT CNTL XFER EN line Low. This line disables U4B and causes U21 to perform a parallel load of control lines states available on its inputs. The state of these lines indicate the condition of certain peripheral circuits that are external to the CPU. Once the states are loaded, they can be clocked out serially to the A5 board, where the data bit will be placed in the RAM.

8-271. U13 (External Clock Input) is a serial shift register that accepts data from the RAM on the RAM MEM OUT line. Once the data is fully loaded into this shift register, it is clocked into U18, a buffer/latch device. This second device prevents data from rippling across the output lines as it is being clocked into storage. Once the data is shifted into U18, it is fed out as control lines for other circuits throughout the instrument.

8-272. A10 D/A AND PIN DRIVER CONTROL OVERVIEW

8-273. The main function of this board is to store the pin driver voltage and current information. This data is fed to the D/A converter, where it is strobed out to the appropriate pin drivers.

8-274. The Reference Level Storage circuitry is comprised of U6 and U12, which form a 2K shift-register memory (two parallel 1K memories). U18 controls the encoding and decoding of the information. To store data into the memory, the Processor Memory (A5) outputs this data serially to the serial input of U18. It then exits this device on the Q_C and Q_D outputs, which are connected to the D_A inputs on U6 and U12. The data enters the memory in a staggered format, much like the Main Memory. When information is later removed from the memory, it exits on the Q_C outputs and is parallel loaded into the D_A and D_B inputs of U18 via U5A and B. For the VI printout, data can be read out of the memory to the A5 board through U23B, U13F.

8-275. The memory runs at a slower rate than does the information being fed into it: U18 is clocked at a 4 MHz rate while the memory runs at 2 MHz. Actually, there are two clock signals that operate the register (Ø1 and Ø2). Each of these signals are 1 MHz and are out of phase with each other. The phases of the clock are generated by U7B, U11, and the outputs of U1 (Q_B) and U3 (Q_A). The signals are then level shifted by RC circuitry R30, R33, C6, C8, R19, CR3 and CR2 (clamps). When data is being read from the memory, U18 is in the parallel mode and the parallel clock used is 2 MHz (from U1 Q_A).

8-276. The Reference Level Storage has space available for 80 bits of information per pin. There are 24 valid pins plus one extra pin that is set aside as a "scratch pad"; in addition, there are some extra locations that are not used. Table 8-10 shows the data configuration for a given pin. U1, U2, and U3 form a Stack Counter which keeps track of the information in the memory. Although the memory is not regulated by specific locations, or addresses, the position of the data is known by knowing the total number of available locations and by selecting an arbitrary starting point and keeping track of that point. This starting point is defined by the overflow of U2. Notice that an overflow condition (U2 pin 15 goes High) causes U15B to preset the Stack Counter to a predetermined number (506). This absorbs the extra capacity of the counter which is not needed in this specific application. U1 is a decade counter, while U3 and U2 are binary counters. Starting at the left, then, and working across, the D inputs are weighted as follows: 1, 2, 4, 8 (but counts to 10 only) 10, 20, 40, 80, and 160, 320, 640, 1280.

8-277. A second counting circuit Pin Locator Counter is needed to assign groups of bits inside U6 and U12 as those pertaining to a specific pin number. This is done in U1, U4, and U17. U17 and D_D input of U4 comprise the Pin Number Locator. By loading the complement (plus one) of the pin number into this counter, the counter will overflow after it has been clocked by the same number of pulses as represents the pin number (e.g., pin 12 would require 11 clock pulses into U4D and U17 to produce an overflow). Since each pin represents 80 bits of data location in the memory, the Pin Number Locator must advance one pin number for every 80 clock pulses

because these pulses are also advancing the Memory and the Stack Counter. U1 provides a ÷10 circuit and the first three bits of U4 provide a ÷8 circuit, together they form a ÷80 prescaler for the Pin Driver Locator.

8-278. An example of the entire sequence would be as follows. First, the pin number data (in complement form plus one) is loaded from the Processor Memory (A5) into the Pin Number Locator circuit. This is done by enabling U9C via the $\overline{D/A\ XFER\ EN}$ line. The circuit is disabled from counting, however, due to the states of U16A and U22C. The circuit remains disabled until the Stack Counter overflows at U2(15), which signals the reference point. U16A and U22C release the disable level and all three circuits (Stack Counter, Pin Number Locator, and Reference Level Storage) begin counting. After 80 clock pulses pass, the Pin Number Locator is clocked once and the Reference Level Storage is at the beginning of the pin 2 data group. When U17 reaches the desired pin number, the counter overflows and outputs a $\overline{READY\ FOR\ SETUP\ DATA}$ signal. When the CPU is ready to input the setup data, it sets the $\overline{D/A\ XFER\ EN}$ line Low, once again. This results in U9B(6) going Low, which clears U4 and U17 and enables U18 to accept serial data from the RAM. This setup data is stagger-loaded into the memory, U6 and U12.

Table 8-10. Setup Data Configuration

Bit No.	1st Group -I Source	2nd Group -V Source	3rd Group +I Source	4th Group +V Source
1	1 (MSB)	1 (MSB)	1 (MSB)	1 (MSB)
2	2	2	2	2
3	3	3	3	3
4	4	4	4	4
5	5	5	5	5
6	6	6	6	6
7	7	7	7	7
8	8	8	8	8
9	9	9	9	9
10	10	10	10	10
11	11	11	11	11
12	12 (LSB)	12 (LSB)	12 (LSB)	12 (LSB)
13	∅	∅	∅	∅
14	∅	∅	∅	∅
15	-Gen Continuous	∅	∅	∅
16	-Gen Hi/Lo I	∅	∅	∅
17	Input	∅	∅	∅
18	+Gen Continuous	∅	∅	∅
19	+Gen Hi/Lo I	∅	∅	∅
20	∅	∅	∅	∅

8-279. Once setup data has been loaded for all pins, the data can be placed on the bus and strobed into the appropriate circuits. Refer once again to Table 8-10. The first 12 bits under each category of information (-I, -V, +I, +V) is the actual Setup Data word. This word enters the Digital-to-Analog Converter (DAC) on A11 and is converted to an analog level that will ultimately setup the value of a voltage or current source of a pin driver. This data leaves the board on pin 18 through 21 in the following manner: the first four most-significant bits enter the DAC in parallel, followed by the remaining eight bits which are sent in four 2-bit parallel transfers on the DELAYED 1 and DELAYED 2 lines. The remaining five bits of data (-Gen Continuous, etc.) are then clocked into U19 and are clocked into U24 after the three remaining reference levels are set up and as they transfer to the pin driver.

8-280. A11 REFERENCE LEVEL GENERATOR OVERVIEW

8-281. This board generates the reference voltages for the plus and minus voltage sources and the plus and minus current sources, located on the pin driver boards. (Refer to A11 schematic.) The board accepts four separate groups of digital data, each of which sets up a reference generator on this board. In order: $-I$, $-V$, $+I$, $+V$. The four reference voltages are fed onto a four-line bus that goes to all 12 pin driver boards. The reference generators are loaded twice for each pin drivers per board. The pin drivers are loaded sequentially, starting with A13 and ending with A24. This sequence is controlled by the outputs of U25A&B and U24B, which enable the specific pin driver board along with the odd pin and even pin strobe lines, which enable the specific pin drivers. As one set of voltages is being strobed out, another group of data is being converted into an analog level. This keeps the time between groups as short as possible. It also requires only one D/A converter; however, this system calls for two stages of sample and hold circuits.

8-282. The four most-significant bits of data are parallel loaded into U16A&B and U22A&B. The remaining eight bits of the data group are parallel loaded two bits at a time into shift registers U30A&B. The MSB is the sign bit (+ or -), while the remaining 10 bits determine the magnitude. The state of the LSB (available at U30A pin 13) controls some switching circuits, which are described later.

8-283. The outputs of the data latches are fed through buffers U23 and U29 and into a resistor ladder network contained in R76. The summation of this information is presented to one side of op amp U5, while U6 provides a 10.3V reference (3.4V at U5 pin 3) to the other side. The output level of U5 can now be entered into the first sample and hold circuit of the $-I$ reference generator. This is done by holding the STROBE SETUP VOLTAGE High while pulsing the CLOCK 1 line at the same time. This places a High on U19A Q and enables the electronic switch, U21B, to pass the $-I$ reference level from U5, through the buffer amps U20 and U21B where it charges the storage capacitor, C18.

8-284. Once this is done, the other storage capacitors in the remaining reference generators are set up in a like manner. The latches (U16A&B, U22A&B, and U30A&B) accept the next group of data and convert it into an analog level. The STROBE SETUP VOLTAGE line is set low and remains Low for the next three clock pulses of the LOCK 1 line (one clock pulse for each data group). The second clock pulse, then, will cause U19A \bar{Q} to go Low, but before that can happen, this same clock pulse clocks the High present on U19A \bar{Q} into the D input of U24A. This turns off Q2 and turns on switch U21D, which allows the $-V$ level from U5 to charge C8. The third clock pulse causes U24A pin 12 to go High, which sets up the $+I$ reference generator by enabling U21C and charging C16. The fourth clock pulse causes U24A pin 11 to go High; this turns off Q4 and sets up the $+V$ reference generator by enabling U15D and charging C7.

8-285. The same line that enables the electronic switch U15D at pin 12 also enables, at the same time, switches U15C, U15B, and U15A, which allow the capacitors in the second sample and hold circuits to be charged; these are, respectively, C13, C9, and C29. During the time each group of data bits was being clocked into the first-stage storage capacitors, the least-significant bit of each group, available at U30A pin 13, was being inverted in Q13 and clocked in shift register U27. At the end of the third clock pulse, the least-significant bit of each of the first three groups is present on the outputs of U27. The LSB of the fourth group is present on the D input of U10A. These four bits are used to select the high or low operating range of the reference generators. When the fourth clock arrives, it enables the range selecting devices and also places the reference levels onto the bus. The setup of each generator is individually described below.

8-286. *$-I$ Reference Generator* — U9A passes the level of U27 Q_C onto range capacitor C26, which enables or disables the range switch U9C.

8-287. *$+I$ Reference Generator* — U9B passes the level of U27 Q_A onto range capacitor C25, which enables or disables the range switch U9D.

8-288. *-V Reference Generator* — The Q_B output of U27 is present on the D input of U10B. When fourth clock pulse occurs, it clocks this level onto the Q output. The outputs of U10B turn on one of the range switches — U17C (low range) or U17B (high range). This same clock pulse also turns Q6 on and allows U8 to charge the secondary storage capacitor, C3.

8-289. *+V Reference Generator* — The LSB of the fourth group is present on the D input of U10A. When the fourth clock pulse occurs, it causes U24 Q_D to go High, and this clocks the level onto the Q output. The outputs of U10A turn on one of the range switches — U17D (low range) or U17A (high range). This same clock pulse also turns Q1 on and allows U7 to charge the secondary storage capacitor, C2.

8-290. A12 PIN DRIVER CONTROL OVERVIEW

8-291. This board controls several of the operations that are necessary just prior to testing of a device and, also, once the testing has started. The board supplies the '1' and '0' state setup data to the pin driver boards (A13-A24) and controls the strobing of that information onto boards. It also controls the fast edge circuitry on the socket driver assemblies and the relay operation of the socket assembly. Finally, the A12 board examines the failure data returning from the pin driver boards to determine whether or not the device passed the test. (Refer to the A12 schematic.)

8-292. The six lines located at the upper right of the schematic control the strobing of information onto the pin driver boards. These are the TEST PATTERN/FAILURE STROBE lines and only one line is active at a time. They are driven by the 4-10 line decoder, U18, which is controlled by the DATA SHIFT BIT 2- lines. These lines are directly received from the Word Counter on the Processor Memory board, A5. As the '1' and '0' state setup bits serially enter U11, four bits at a time, the Word Counter on A5 increments its count as each bit is transferred, but U18 does not change state. The timing of this circuit is as follows. On the first clock pulse into U13A, the DATA SHIFT BIT lines 2⁰ and 2¹ go high. On the fourth clock pulse, all three inputs to U13A are low. This disables U13B and places a High on the D input of U18. Since this device is a 4 to 10 line decoder the D input enables one of the upper two output lines, which are not used. This effectively disables the lower half of the device. At this time, the next four bits of '1' and '0' setup data are sitting on the outputs of U5 and are now clocked into U5 where they are presented to the pin drivers. The next clock pulse increments the three most significant DATA SHIFT BIT lines and, once again, enables U13B, which returns control to the lower half of U18. This process continues until all pin drivers are loaded with '1' and '0' setup data.

8-293. When the test is initiated, a particular group of information is to be loaded in the Read/Write Memory, U2 when the test is initiated. This data designates which pairs of the device under test are inputs and which are outputs. This information is important because when testing begins, it will cause the fast edge circuits to generate a fast rise time when driving an input pin. In the case of an output pin, the fast edge circuits are not used and the output stage of the device, itself, controls the rise time. The data enters the board serially from the Processor Memory, A5, and is loaded into the D_A input of U6. There are six bits needed for each pin number. These bits continue being loaded into U6 and are shift-load, as a string, into U7. When all six bits are entered, the last bit entered appears on the Q_A output of U6 and is used as a select line for the multiplier, U1. The first bit entered appears on the Q_B output of U6 and is fed through U1 and is presented to either the D_A or D_B input of U2. The remaining four bits are present on the output lines of U7 and serve as address lines for U2. Once each group of bits has been setup, as described, the write enable (WE) input of U2 goes Low to store this data in a particular address of the memory.

8-294. After all the '1' and '0' state setup voltages are strobed into the pin drivers, pin 9 of U18 goes Low and resets the counter assembly of U7 and U6. Just prior to each test, clock pulses begin incrementing this counter. The outputs address the memory and pass the fast-edge data through the multiplexer and to the fast-edge circuits via U3D.

8-295. The A12 board also examines the failure data from the pin drivers. These line comparators of U15, U19, U16, and U20 and the levels are compared to a reference. The outputs of the comparators are parallel loaded into U11. They are then right-shifted one bit at a time to the clear (CLR) input of U10. If this line is High, it is interpreted as a failure; however, the Processor Memory, then supplies data to designate whether or not a particular pin should be examined for failure data. This is done on the D input of U10. If pin 12 is High, the tester will examine the pin for failure data. The state is then clocked into U10, unless the CLR input is being held Low, and is available as output. The state of the Q output is the failure information: '1' = failure, '0' = no failure.

8-296. At the beginning of the test, the Processor Memory, A5, is sending relay data to the board via U3C and U3B. This data governs the closure of these relays. When closed, they provide a ground for a particular pin on the device under test that is very near the pin. The problems associated with long ground lines.

8-297. A13-A24 PIN DRIVER OVERVIEW

8-298. The Pin Driver board contains 5 major blocks of circuitry, as shown in the A13-A24 block diagram. The first four are the positive current source, the "1" voltage source, the "0" voltage source, and the negative current source. The fifth block is the Gating Circuitry that controls the reference level generators' operation. These generators are configured to either drive an input or load and monitor an output of the device under test (DUT):

Input = "1" and +I or "0" and -I

Output = "1" and -I or "0" and +I

8-299. Electronic switches, control gates, and diodes control the various functions of the reference level generators. (This is represented in a simplified drawing of the generators, Figure 8-15, showing the "1" and "0" voltage sources, with the current sources being listed as either +I or -I.)

8-300. The four reference lines from the Reference Level Generators (A11) are strobed to the Pin Driver board through electronic switches. Storage capacitors hold these reference levels. The noninverting input (+) of each operational amplifier (op amp) is the sense side and monitors the same pin on the device under test as the pin driver drive.

8-301. As an example of driving an input, if the reference level and the sense level are equal, the op amp is balanced and no failure data is generated. If they differ, the voltage source op amp goes into saturation and activates the failure line ('1' voltage source shows failure when it goes positive, '0' voltage source shows failure when it goes negative). When a source is not being activated, the gates and switches are arranged to balance the op amp.

8-302. Each current source has 3 CMOS gates that are drawn as negative input AND gates. At any one time, one of these gates is enabled at a time, as controlled by the Gating Circuitry. When enabled, the op amp output is transferred from the gate's VDD input (for the negative current source) to the sense line. The first gate controls the current-pass transistor. Two of the gates select either the high or low current mode (Low = 5 μ A - 2.5 mA, High = 2.5 mA - 200 mA), and the third gate routes the op amp output onto the sense line when that current generator is not being used to drive the device.

8-303. The two voltage sources operate in much the same manner as the current source. The op amp operation relies on a balanced op amp, which controls the drive voltage through a C-MOS transistor pair. When not actively used, the op amp remains balanced through an electronic switch. The RC time constant circuit ensures that the feedback switch and shunt switch are not on at the same time during the transition. This ensures that the op amp has a feedback path while the drive voltage is changing.

enter the
outputs
and fed
at all pins
12 which
nplished
his logic
on the Q
ilure.

ie socket
ne relays
prevents

schema-
' voltage
trols the
monitor

of these
wing the

onto the
s on the
op amp
trying to

qual, the
mp goes
positive;
ely used,

es. Only
d, the op
s output
n or low
op amp
e DUT.

The cir-
rlington
c switch.
he same
tates are

PIN DRIVER MODE CONF
(Set