

ThinkJet Printer

The Personal Printer from Hewlett-Packard

Reference Section

March 1987

Printed in Singapore

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

Table of Contents

GENERAL INFORMATION

How to Use Your Reference Manual.	vi
---	----

CHAPTER 1 USING PRINT FEATURES 1-1

Introduction to Control Codes and Escape Sequences	1-1
Control Sequence Modes	1-3
Print Pitches	1-4
Print Quality	1-5
Quality Mode	1-5
Bold Print	1-6
Underlining	1-7
Mixing Modes	1-7
Perforation Skip.	1-8
Page Length	1-9
Line Spacing	1-10

CHAPTER 2 MORE ON PRINT FEATURES 2-1

Positioning the Print on the Page	2-1
Overstrike	2-2
Graphics	2-2
Selecting Unidirectional or Bidirectional Print	2-6
End of Line Wrap-Around.	2-7
Linking Escape Sequences.	2-7
Display Functions Mode	2-7
Self Test	2-8
Resets	2-9
Ready to Print.	2-9
Automatic Line Termination.	2-9

CHAPTER 3 MAINTENANCE AND TROUBLESHOOTING 3-1

Environmental Conditions.	3-1
Maintenance of the Print Head Cartridge.	3-1
Maintenance of the Printer	3-3
Troubleshooting.	3-3

APPENDICES A-1

Appendix A: Mode Select Switches	A-1
Appendix B: Table of HP Mode Print Features	B-1
Appendix C: Table of Alternate Mode Print Features	C-1
Appendix D: Character Sets	D-1

Appendix E: Power Modules	E-1
Appendix F: Parallel Interface Specifications	F-1
Appendix G: List of Accessories and Supplies	G-1
Appendix H: Warranty and Service Information	H-1
Appendix I: Application notes (Hardware and Software)	I-1
INDEX	Index-1

Trademarks: IBM/International Business Machines Corporation
Apple/Apple Computer Inc.
Epson/EPSON, Shinshu Seiki Co., Ltd.
Microsoft/Microsoft, Inc.

General Information

Congratulations on your purchase of the Hewlett-Packard ThinkJet printer. Your printer is designed to give you years of trouble-free operation. Its small footprint uses little precious desk space. However, do not let its size fool you. It is fast (150 characters per second), intelligent, and offers a wide variety of easy-to-use print features.



The versatility and convenience of your printer are enhanced by the quietness of its ink jet printing. The ink jet print head cartridge contains sufficient ink to print approximately 500 pages. The cartridge is completely disposable and easy to replace. In addition, the ThinkJet printer uses a standard parallel printer interface to communicate with many different computers.

To set up your printer you will need a printer cable. You should have obtained a printer cable with either your computer or your parallel printer interface card. If you do not have one, contact your Hewlett-Packard dealer or an authorized sales representative.

How to Use Your Reference Manual

Chapters 1 and 2, “Using Print Features” and “More on Print Features,” describe how to use the many advanced print features of the ThinkJet printer.

Chapter 3, “Maintenance and Troubleshooting,” offers easy-to-use tips on how to keep your printer running smoothly.

The appendices contain reference guides where you can quickly find information about your printer. Also included in the appendices are the list of accessories and information on warranty and service.

Using Print Features

The Operator's Section described how to set up and begin operating your ThinkJet printer. This chapter tells you how to use the more commonly selected print modes and form control features: print pitches, Quality mode, Bold printing, underlining, line spacing and perforation skip. Chapter 2 introduces more advanced print features.

Introduction to Control Codes and Escape Sequences

You may already have software which allows you to use many of the print features of your ThinkJet printer. If, however, you wish to use any of these print features on your own, the following two chapters provide you with examples of each of the print features and the data used to generate those examples.

The print features of your printer are controlled by "control codes" and "escape sequences." Control codes are data that, when sent to your printer, do not cause anything to be printed. They are commands which cause an action. An example of how control codes are written in this manual is `[CTL] N`, abbreviation for "Control N."

One of the control codes is named "escape," which appears in this manual as `[ESC]`. Escape sequences consist of the `[ESC]` control code followed by one or more other characters. For example, `[ESC] & k 1 S` is an escape sequence which changes the print pitch. None of the characters in an escape sequence is printed; together they form a command which is used to control a feature of your printer, just as a single control code is a command.

NOTE

When reading this manual, be very careful to not confuse O (uppercase oh) with 0 (zero) or l (lowercase ell) with 1 (one).

Some features are controlled by both a mode select switch on the rear panel of the printer and an escape sequence. In these cases, the switch sets the default condition of the feature but the escape sequence will override the switch. If the printer is turned off and on, the feature will return to the setting selected by the switch.

To generate printouts using these print features, you will need to become familiar with the method used by your computer or software to send escape sequences and control codes to your printer. Some of the different methods commonly used are:

- Typing escape sequences and control codes directly from the keyboard.

Many computer keyboards have a key labeled **ESC** and another key labeled **CTRL**, **CTL**, or **CTRL**. When the **ESC** key is pressed, it generates the escape control code. Other control codes are generated by holding down the **CTL** key while pressing a different key, just as holding down the **SHIFT** key while pressing another key generates special punctuation characters and uppercase characters. On some keyboards that do not have an **ESC** key, **ESC** can be generated as **CTL** |.

NOTE

If you are entering escape sequences in this manner, do not type any spaces between the characters of the escape sequence. In this manual spaces have been inserted in the escape sequences for readability; they are not part of the escape sequence.

- Specifying each control code, including **ESC**, by its ASCII* number.

Some software packages require that you specify each control code by its ASCII number, usually preceded by a special character such as “\”. For example, the escape sequence **ESC** & k l S would be specified as \027 & k l S. Appendix D contains the ASCII representation of each control code.

- Specifying each character of the escape sequence by its ASCII number.

Some software packages require that you specify **ESC** and the characters following it by their ASCII numbers. The reference tables in Appendices B and C contain the ASCII representation of each escape sequence.

As an example, the escape sequence **ESC** & k l S is represented in ASCII as 27 38 107 49 83.

*The ASCII (American Standard Code for Information Interchange) character tables in Appendix D assign a number between 0 and 255 to every character or control code recognized by the printer. Computers use these numbers when storing and communicating text material. Unless specifically noted otherwise, the numbers used in this manual are decimal numbers. A few software packages require you to enter ASCII numbers in “hexadecimal.” The reference tables in Appendices B and C include the hexadecimal representation of each control code and escape sequence.

If you are using a software package such as a word processor or spreadsheet, refer to your software documentation to learn how to represent control codes and escape sequences.

If you are writing BASIC programs, you can generate control codes with the `CHR$()` function. For more information on the `CHR$()` function, refer to a BASIC programming manual.

In this manual, `CHR$()` is used to specify numbers which are ASCII numbers, not characters. For example, `83` and `CHR$(83)` are two different things. The first, `83`, is a string of two characters: `8` and `3`. `CHR$(83)` is a single character, uppercase `"S"`.

Control Sequence Modes

The ThinkJet printer has two different control sequence modes: HP Control Sequence Mode (HP mode) and Alternate Control Sequence Mode (Alternate mode). The escape sequences and control codes which control the print features are different for the two modes. If the printer receives an escape sequence or control code which is invalid for the current mode, it will either ignore the command or produce unexpected results. However, do not be afraid of making mistakes. You cannot damage your printer with an invalid escape sequence.

Switch 5 on the rear panel of the printer determines which mode is currently being used. If switch 5 is down, the printer is in HP Control Sequence Mode; if switch 5 is up, the printer is in Alternate Control Sequence Mode. Page A-3 discusses choosing the appropriate control sequence mode for your computer system.

The following sections discuss both control sequence modes for each print feature. For reference purposes, Appendix B lists all of the HP mode control sequences; the control sequences for Alternate mode are listed in Appendix C.

Print Pitches

Your ThinkJet printer offers four print pitches: normal, expanded, compressed, and expanded-compressed.

This is compressed print.

This is normal print.

This is expanded-compressed print.

This is expanded print.

If switch 5 is DOWN (HP mode):

Table 1-1 provides the specific escape sequence for each print pitch.

**Table 1-1
Print Pitches (HP Mode)**

Print Pitch	Characters/Inch	Characters/Line	Escape Sequence
Compressed	21.3	142	<code>[ESC] & k 2 S</code>
Normal	12.0	80	<code>[ESC] & k 0 S</code>
Expanded- Compressed	10.7	71	<code>[ESC] & k 3 S</code>
Expanded	6.0	40	<code>[ESC] & k 1 S</code>

If more characters per line are sent than is allowed by the selected print pitch, the additional characters are normally ignored. To print those additional characters, you may use the wrap-around mode described in Chapter 2.

The data used to generate the preceding example is:

`[ESC] & k 2 S`This is compressed print.

`[ESC] & k 0 S`This is normal print.

`[ESC] & k 3 S`This is expanded-compressed print.

`[ESC] & k 1 S`This is expanded print.

If switch 5 is UP (Alternate mode):

Table 1-2 specifies the control codes which turn on or off each of the print pitches.

**Table 1-2
Print Pitches (Alternate Mode)**

Print Pitch	Chars/Inch	Chars/Line	Turn On	Turn Off
Compressed	21.3	142	[CTL] O	[CTL] R
Normal	12.0	80	default	
Expanded- Compressed	10.7	71	[CTL] N [CTL] O	[CTL] T [CTL] R
Expanded	6.0	40	[CTL] N	[CTL] T

The data used to generate the preceding example is:

```
[CTL]O This is compressed print. [CTL]R
This is normal print.
[CTL]N [CTL]O This is expanded-compressed print. [CTL]T [CTL]R
[CTL]N This is expanded print. [CTL]T
```

Print Quality

The ThinkJet printer can print characters in normal, Quality mode, or bold.

Quality Mode

Quality mode can be enabled in two ways as described below.

- **Through the Keypad**

Quality mode is enabled by holding down the blue button while turning ON the printer. Once Quality mode is enabled through the blue button, it can only be disabled by turning the printer OFF. See the example of Quality mode given below.

- **By Escape Sequence**

If switch 5 is DOWN (HP mode):

Quality mode is enabled by sending the escape sequence [ESC](s1B. The printer will then print darker characters until Quality mode is disabled by sending the escape sequence [ESC](s0B, or by turning the printer OFF.

Quality mode is used to print entire documents.
Quality mode can highlight a whole page or several pages. The instructions on this page tell you how to enable Quality mode in two ways.

The data used to generate the preceding example is:

```
[ESC](s1BQuality mode is used to print entire documents. Quality
mode can highlight a whole page or several pages. The instructions
on this page tell you how to enable Quality mode in two ways.
[ESC](s0B
```

If switch 5 is UP (Alternate mode):

Quality mode is enabled by sending the escape sequence `ESC`G. The printer will then print darker characters until Quality mode is disabled by sending the escape sequence `ESC`H, or by turning the printer OFF.

The data used to generate the preceding example is:

`ESC`GQuality mode is used to print entire documents. Quality mode can highlight a whole page or several pages. The instructions on this page tell you how to enable Quality mode in two ways. `ESC`H

NOTE

If Quality Mode has been enabled through the keypad be aware that some word processing software packages may not respond to "emphasized" commands.

Bold Print

Bold printing is enabled by sending an escape sequence.

Bold print can **highlight** single words.

Entire lines can also be highlighted.

If switch 5 is DOWN (HP mode):

Bold printing is enabled by sending the escape sequence `ESC`(s1B. The printer will then print darker characters until Bold printing is disabled by sending the escape sequence `ESC`(s0B, or by turning the power OFF.

The data used to generate the preceding example is:

Bold printing can `ESC`(s1Bhighlight`ESC`(s0B single words.
`ESC`(s1BEntire lines can also be highlighted. `ESC`(s0B

If switch 5 is UP (Alternate mode):

Bold printing is enabled by sending the escape sequence `ESC`E. The printer will then print darker characters until Bold printing is disabled by sending the escape sequence `ESC`F, or by turning the power OFF.

The data used to generate the preceding example is:

Bold printing can `ESC`Ehighlight`ESC`F single words.
`ESC`EEntire lines can also be highlighted. `ESC`F

Underlining

Your ThinkJet printer can underline text as shown in the following example.

Underlining can be used for a single word.
Entire lines can be underlined.

If switch 5 is DOWN (HP mode):

Underline mode is enabled by `[ESC] & d D`. The printer will then underline all characters until underline is disabled by `[ESC] & d @`.

The data used to generate the preceding example is:

Underlining can be used for a `[ESC] & d S`single`[ESC] & d @` word.
`[ESC] & d D`Entire lines can be underlined.`[ESC] & d @`

If switch 5 is UP (Alternate mode):

Underline mode is enabled by `[ESC] - 1`. The printer will then underline all characters until underline is disabled by `[ESC] - 0`.

The data used to generate the preceding example is:

Underlining can be used for a `[ESC] - 1`single`[ESC] - 0` word.
`[ESC] - 1`Entire lines can be underlined.`[ESC] - 0`

Mixing Modes

The ThinkJet printer is capable of mixing any combination of print modes. For example, it can print in expanded and underlined mode. The printer does not limit the number of mode changes allowed in a single line.

Print modes can be mixed on a line.

If switch 5 is DOWN (HP mode):

The data used to generate the preceding example is:

Print modes can be mixed on a `[ESC] & k 1 S``[ESC] & d D`line`[ESC] & d @` `[ESC] & k 0 S`.

If switch 5 is UP (Alternate mode):

The data used to generate the preceding example is:

Print modes can be mixed on a `[CTL] N` `[ESC] - 1`line`[ESC] - 0``[CTL] T`.

Perforation Skip

The ThinkJet printer is capable of automatically leaving top and bottom margins on every page. This is called “perforation skip mode” because, when printing, the printer does not print on the perforations, it skips over them.

The printer does not sense the perforations in the paper; you must tell it where to put the margins by setting top of form as described in the Operator’s Section. When you set top of form, you specify the position of the first line of print: the line immediately following the top margin. The default “perforation skip length” (combined length of the top and bottom margins) is 6 lines. If top of form is set to the fourth line of the page, the printer will leave a margin of three lines at the top and bottom of each page.

Figure 1-1 shows top of form set correctly for equal top and bottom margins.

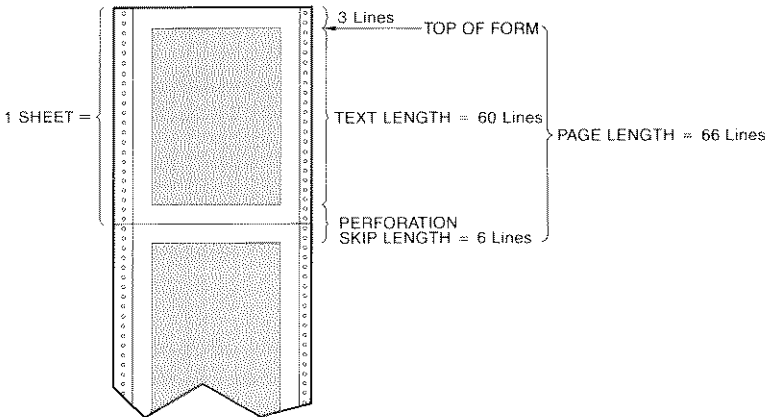


Figure 1-1 Top and Bottom Margins

Switch 3 on the rear panel of the printer determines whether perforation skip mode defaults on or off. If switch 3 is down, perforation skip mode defaults off; if switch 3 is up, perforation skip mode defaults on.

If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] & ℓ 1 L` turns perforation skip mode on, `[ESC] & ℓ 0 L` turns it off. These escape sequences override switch 3.

The perforation skip length is not specified directly. If you wish to use a value other than the default, you must specify a new "text length," which is the number of lines to be printed on each page. The perforation skip length is the total length of each page minus the text length.

The escape sequence to set the text length is `[ESC] & ℓ # F`, where # is the text length specified in number of lines. For example, the escape sequence `[ESC] & ℓ 54 F` sets the text length to 54 lines. If the printer is set for a page length of 66 lines (11 inch paper, 6 lines per inch), the perforation skip length is 66 minus 54: 12 lines. To get equal top and bottom margins of 6 lines, top of form must be set to the seventh line of the page.

Text length cannot be less than one line nor greater than the page length. The escape sequence `[ESC] & ℓ 0 F` will set the text length back to the default, which is 1 inch less than the page length.

If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] N CHR$(#)` sets the perforation skip length to # lines and turns perforation skip mode on. The number used to set the perforation skip length is the ASCII number associated with the character following "N." For example, `[ESC] N 1` does not set perforation skip length to 1 line, the ASCII number for the character "1" is 48 (see Appendix D), so perforation skip length is set to 48 lines. To set the perforation skip length to 10 lines, look in Table D-1 of Appendix D and find that 10 is equivalent to `[CTL] J`. Then use the escape sequence `[ESC] N [CTL] J`.

The escape sequence `[ESC] O` turns perforation skip mode off.

These escape sequences override switch 3.

Page Length

The ThinkJet printer allows you to change the page length. The current value of page length determines how far the printer advances the paper when the form feed button is pressed or the printer receives a form feed control code. The printer also uses the value of page length, when perforation skip mode is on, to determine where to place the top and bottom margins.

Switch 4 on the rear panel of the printer selects the default page length. If switch 4 is down, page length defaults to 11 inches (279.4 mm), which is 66 lines at 6 lines per inch. If switch 4 is up, page length defaults to 12 inches (304.8 mm), which is 72 lines at 6 lines per inch.

If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] &l# P` sets the page length where # is the page length specified in number of lines. For example, `[ESC] &l50 P` sets the page length to 50 lines. This escape sequence overrides switch 4.

Page length can be set to any number of lines from 1 to 255. The escape sequence `[ESC] &l0 P` will reset the page length to the default.

The page length escape sequence automatically sets the text length to 1 inch (6 lines at 6 lines per inch) less than the new page length.

If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] C CHR$(#)` sets the page length to # lines. The number used to specify the page length is the ASCII number associated with the character following "C." For example, `[ESC] C 1` does not set page length to 1 line. The ASCII number associated with the character "1" is 48, so page length is set to 48 lines. To set page length to 70 lines, look up 70 in Table D-1 of Appendix D and find that 70 is equivalent to the character "F". Then use the escape sequence `[ESC] C F`.

The escape sequence `[ESC] C CHR$(0) CHR$(#)` sets the page length to # inches. The number used to specify the page length is the ASCII number associated with #.

These escape sequences also turn perforation skip mode off.

Line Spacing

The ThinkJet printer offers different line spacings as shown in the following example.

This group of lines is printed at a line spacing of 8 lines per inch. Notice that they are close together.

These three lines are printed at the default line spacing of 6 lines per inch.

If switch 5 is DOWN (HP mode):

To print at 8 lines per inch, send the escape sequence `[ESC] &ℓ8D`. To return to 6 lines per inch, use `[ESC] &ℓ6D`.

If line spacing is changed, page length and text length measured in inches remain the same. For example, if line spacing is 6 lines per inch and page length is 66 lines (11 inches), changing line spacing to 8 lines per inch will also change page length to 88 lines (11 inches).

The data used to generate the preceding example is:

```
[ESC] &ℓ8DThis group of lines is printed at a
line spacing of 8 lines per inch. Notice that
they are close together. [ESC] &ℓ6D
```

```
These three lines are printed at
the default line spacing of
6 lines per inch.
```

If switch 5 is UP (Alternate Mode):

To print at 8 lines per inch, send the escape sequence `[ESC] 0`. To return to 6 lines per inch, use `[ESC] 2`. To set line spacing to 7 dot rows (96/7 lines per inch), use `[ESC] 1`. `[ESC] A CHR$(#)` sets line spacing to # dot rows. The number used to set the line spacing is the ASCII number associated with the character following "A." For example, `[ESC] A [CTL] T` sets the line spacing to 20 dot rows because the ASCII value of `[CTL] T` is 20.

The data used to generate the preceding example is:

```
[ESC] 0This group of lines is printed at a
line spacing of 8 lines per inch. Notice that
they are close together. [ESC] 2
```

```
These three lines are printed at
the default line spacing of
6 lines per inch.
```


More on Print Features

In the previous chapter we discussed the frequently used print features. In this chapter we will discuss some advanced print features.

Positioning the Print on the Page

Some of the control codes and escape sequences change the position at which the next character received will be printed. This position is called the "current active position." Each time the printer receives a printing character, the current active position is moved one character to the right. The following control codes separate lines of print, cause the printer to overstrike characters, or cause the printer to advance the paper.

Unless specifically noted otherwise, these control codes and escape sequences are identical in HP mode (switch 5 down) or Alternate mode (switch 5 up).

- Carriage Return (**[CTL M]**): Moves the current active position to the first character position on the current line. Normally you do not need to send carriage returns explicitly; your computer system will send them automatically.

Either switch 1 on the rear panel of the printer or the Automatic Line Termination escape sequence discussed on page 2-9 can cause the printer to perform a line feed in addition to each carriage return.

- Back Space (**[CTL H]**): Moves the current active position one character to the left. If the current active position is already the leftmost character position, no action is taken.
- Line Feed (**[CTL J]**): Advances the paper one line. Normally you do not need to send line feeds explicitly; your computer system will send them automatically.

Either switch 2 on the rear panel of the printer or the Automatic Line Termination escape sequence discussed on page 2-9 can cause the printer to perform a carriage return in addition to each line feed.

- Half Line Feed (**[ESC =]**): Advances the paper half the distance of the current line spacing.

This escape sequence is only valid if switch 5 is down (HP mode). If switch 5 is up (Alternate mode) you must change the line spacing and then send a line feed control code.

Half line feed is useful for printing subscripts and superscripts.

H₂O
a³ = b² + c

The data used to generate the preceding example is:

H [ESC] = [CTL] M 2
3 2 [ESC] = [CTL] M a = b + c

- Form Feed ([CTL] L): Advances the paper to the top of the next form.

NOTE

The printer cannot sense the actual position of the paper. For form feed to advance the paper to the next perforation, top of form must be set correctly as described in the Operator's Section.

Overstrike

There are two methods of overstriking text:

- Sending two lines of text separated only by a carriage return. This causes the printer to print the second line over the first line.

This method will work only if carriage return does not perform a line feed (see Carriage Return on page 2-1). If carriage return does perform a line feed, you must use the back space method for overstriking.

- Using back space. Each time the printer receives a back space control code, it moves the current active position one character position to the left before printing the next character. Therefore, if two characters are sent to the printer separated only by a back space, the second character is printed over the first.

Graphics

Many computer systems allow you to draw graphs or pictures on your computer display using the computer's capabilities and a graphics software package. The computer then handles the details of copying the graphics data to the printer. You may, however, be interested in writing your own graphics software program. The following information provides the details of the ThinkJet graphics capabilities.

The ThinkJet printer is capable of printing in two modes: text mode and graphics mode. In text mode, the printer interprets each data byte it receives from the computer as an ASCII character. It then looks that character up in its internal character table and prints the dot pattern which it finds. In graphics mode, however, the data received from the computer directly specifies the dot pattern which is to be printed.

The ThinkJet uses a form of graphics called "dot-image" graphics. In this system, the paper can be thought of as consisting of a grid of dot positions. Graphics data specifies which of the dot positions should be printed and which should be left blank.

NOTE

Some computers automatically add control codes, such as carriage returns and line feeds, or blanks to the data being sent to the printer. These characters are necessary when printing text. In graphics mode, however, they may be interpreted as graphics data and give unexpected results. Before writing programs which generate graphics, you should consult the manual for your computer to determine how to prevent your computer from sending this extra data to the printer.

If switch 5 is DOWN (HP mode):

Graphics Density

The ThinkJet is capable of printing graphics in two different dot densities. The default dot density is 96 dots/inch in both the horizontal and vertical directions; the print region is 640 dots wide. The higher dot density is 192 dots/inch in the horizontal direction and 96 dots/inch in the vertical direction; the print region is 1280 dots wide. The escape sequence used to select high density graphics is `[ESC] *r 1280 S`. To return to the default graphics density use `[ESC] *r 640 S`. Once the graphics resolution is specified, it stays in effect until it is explicitly changed or the printer is reset.

Raster Dot Row

Graphics data is sent to the printer one byte (8 bits) at a time. Each bit specifies one dot position. If a bit is zero, the corresponding dot position is left blank. If a bit is one, a dot is printed at the corresponding position. In HP mode, graphics data bytes are sent to the printer in groups, where each group contains the graphics data for one "raster" (horizontal) dot row. The first (most significant) bit of a graphics data byte specifies the leftmost dot; the last (least significant) bit specifies the rightmost dot.

The escape sequence to transfer the data for one dot row is `[ESC] * b # W`. The value field, #, specifies the number of graphics data bytes which follow the escape sequence. For example, if the printer receives `[ESC] * b 20 W`, it interprets the next 20 bytes of data as specifying 160 dots (20 x 8 bits) of the current dot row. If less data is sent for a dot row than will fit in the print region, the rightmost dots of the row are left blank. If more data is sent than will fit in the print region, the extra data is ignored.

Paper advance occurs automatically between graphics dot rows; it is not necessary to send any paper advance control codes.

Beginning and Ending Graphics Mode

If the printer has a partial line of text data in its buffer and it receives the raster dot row escape sequence, it terminates the line of text with a carriage return (but no line feed), prints it, and then accepts the graphics data. This may cause the graphics data to be printed over the text data.

To avoid printing graphics over text, send the escape sequence `[ESC] * r A` before sending any graphics data. This escape sequence causes any partial lines of text to be terminated with a carriage return and line feed. If there is no text in the buffer, this escape sequence has no effect.

When the printer receives graphics data, it places that data in its buffer. Normally the graphics data is not actually printed until the buffer contains 12 dot rows of default-density graphics or 6 dot rows of high-density graphics. To make sure all of the dot rows are printed and not still stored in the printer's buffer, send the escape sequence `[ESC] * r B` after sending all of the graphics data.

Sample Graphics Program

The following is an example of a simple HP BASIC program which prints graphics.

Enter	Description
10 PRINT CHR\$(27)&"*r640S";	Select default graphics density
20 PRINT CHR\$(27)&"*rA";	Begin raster graphics
30 FOR I=1 TO 55	55 dot rows will be printed
40 PRINT CHR\$(27)&"*b5W";	Initiate a dot row of length 5 bytes
50 FOR J=1 TO 5	5 bytes = 40 dots
60 PRINT CHR\$(136);	Send 1 byte of graphics data
70 NEXT J	136 decimal = 10001000 binary
80 NEXT I	
90 PRINT CHR\$(27)&"*rB"	Terminate raster graphics

Printer output:



You may need to modify this program to make it run correctly on your computer. To produce the preceding graphics example using Microsoft BASIC, Version A2.00, use the following program:

Enter	Description
10 OPEN "LPT1:" AS #1 20 WIDTH #1,255	Prevent the computer from sending CR, LF
30 PRINT #1, CHR\$(27)+"*r640\$";	Select default graphics density
40 PRINT #1, CHR\$(27)+"*rA";	Begin raster graphics
50 FOR I= 1 TO 55	55 dot rows will be printed
60 PRINT #1, CHR\$(27)+"*b5W";	Initiate a dot row of length 5 bytes
70 FOR J= 1 TO 5	5 bytes = 40 dots
80 PRINT #1, CHR\$(136);	Send 1 byte of graphics data
90 NEXT J	136 decimal = 10001000 binary
100 NEXT I	
110 PRINT #1, CHR\$(27)+"*rB"	Terminate raster graphics

If switch 5 is UP (Alternate mode):

In Alternate mode, each byte of graphics data specifies an 8-dot high column. The first (most significant) bit specifies the top dot of the column; the last (least significant) bit specifies the bottom dot of the column. If a bit is zero, the corresponding dot position is left blank. If a bit is one, a dot is printed at the corresponding position.

You can specify the horizontal distance between adjacent columns as either 1/96 inch or 1/192 inch. The escape sequence `[ESC] K #1 #2` selects default-density graphics (1/96 inch between columns), `[ESC] L #1 #2` selects high-density graphics (1/192 inch between columns).

The 2-byte value field (#1 and #2) specifies the number of following bytes which are to be interpreted as graphics data. #1 and #2 are not interpreted as ASCII characters; they form a 16 bit binary number where #2 is the most significant byte and #1 is the least significant byte. For example, `[ESC] K CHR$(128) CHR$(1)` specifies that the next 384 bytes ($128 + (256 * 1) = 384$) of data are graphics dot columns which are to be printed 1/96 of an inch apart.

Before sending any graphics data, line spacing should be set to 8 dot rows by the `[ESC] A CHR$(8)` escape sequence. After sending all of the graphics columns across one row, you must send a carriage return and line feed to the printer to cause it to advance the paper and return to the left margin.

Some computer systems do not have the capability of controlling the most significant bit of data bytes sent to the printer. If your computer system always clears this bit, you can still print graphics by setting line spacing to 7 dot rows (by either `[ESC] 1` or `[ESC] A CHR$(7)`) before sending graphics data.

Selecting Unidirectional or Bidirectional Printing

The ThinkJet printer normally prints text bidirectionally. You can get slightly better alignment between lines of print by setting the printer to print unidirectionally (left to right only).

If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] & k 0 W` will force unidirectional printing. To return to bidirectional text printing, use `[ESC] & k 1 W`.

This escape sequence does not affect graphics printing; the printer always prints graphics unidirectionally.

If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] U 1` will force unidirectional printing. To return to bidirectional text printing, use `[ESC] U 0`.

This escape sequence does not affect graphics printing; the printer always prints graphics unidirectionally.

End of Line Wrap-Around

If the printer is in wrap-around mode, the first character received which exceeds the line length of the printer forces a new line of print to be started. This causes long lines to be broken and printed as several lines. If the printer is not in wrap-around mode, characters which exceed the line length of the current print pitch are not printed.

If switch 5 is DOWN (HP mode):

The default is wrap-around mode disabled. The escape sequence `[ESC] & s 0 C` enables wrap-around mode, `[ESC] & s 1 C` disables wrap-around mode.

If switch 5 is UP (Alternate mode):

The printer is always in wrap-around mode; you cannot disable it.

Linking Escape Sequences

If switch 5 is DOWN (HP mode):

You can link several escape sequences into one escape sequence string. For example, you can enable perforation skip mode and set line spacing to 8 lines per inch by entering either `[ESC] & l 8 D` and `[ESC] & l 1 L` or `[ESC] & l 8 d 1 L`.

The two rules to follow when linking escape sequences are:

- The first two characters after `[ESC]` must be the same. In the example above these are `&` and `l`. `[ESC]` and the first two characters following it are used only once in a string of linked escape sequences.
- The final character of the internal escape sequences becomes lower case. In the example above, `D` becomes `d`.

If switch 5 is UP (Alternate mode):

It is not possible to link escape sequences; each one must be sent exactly as it is specified in this manual.

Display Functions Mode

Control codes and escape sequences are not normally printed; they are either recognized as commands and cause some action or they are ignored.

The display functions mode allows you to print control codes and escape sequences without executing them. This is useful if you are trying to determine exactly what control codes and escape sequences are being sent to your printer. The symbol which is printed for each control code can be found in Table D-1 of Appendix D.

In **Display Functions mode**, control codes are printed not executed.

␣

␣In ␣Display Functions mode␣, control codes␣are printed ␣&dDnot␣&d@ executed.␣

␣␣Z

If switch 5 is DOWN (HP mode):

Display functions mode is enabled by **[ESC] Y** and disabled by **[ESC] Z**.

When in display functions mode, the only control codes or escape sequences executed are:

- Carriage Return, which is printed and then executed as a carriage return and line feed.
- **[ESC] Z**, which is printed and then executed.

The data used to generate the preceding example is:

In **[CTL]N Display Functions mode[CTL]O**, control codes are printed, **[ESC] &dDnot[ESC] &d@**, executed.

[ESC] Y

In **[CTL]N Display Functions mode[CTL]O**, control codes are printed, **[ESC] &dDnot[ESC] &d@**, executed.

[ESC] Z

If switch 5 is UP (Alternate mode):

There is no display functions mode; escape sequences and control codes are always executed.

Self Test

If switch 5 is DOWN (HP mode):

Your ThinkJet printer can perform a self test to ensure that it is operating properly. The escape sequence **[ESC] z** causes it to perform a test of the electronics and then print one page of characters.

In addition, the Operator's Manual explains how to perform a power-up self test.

If switch 5 is UP (Alternate mode):

There is no escape sequence to cause a self test. The power-up self test described in the Operator's Manual must be used.

Resets

The simplest way to return your printer to its default printing specifications is to turn the printer off for several seconds, then on. This causes the printer to read the mode select switches, reset all features to their default values, and set top of form to the current line.

If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] E` causes the printer to print whatever data is in the print buffer, reset all features to their default values, and, if the paper is not at the top of form, execute a form feed.

This escape sequence does not cause the mode select switches to be read. The printer will use the value it read when it was turned on.

If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] @` causes the printer to reset all features to their default values.

This escape sequence does not cause the mode select switches to be read. The printer will use the value it read when it was turned on.

Ready to Print

The ThinkJet printer is now prepared for printing. The design of ThinkJet requires a minimum left and right margin of 1". This gives a fixed printing area of 6.7 inches, which can accommodate 80 characters in normal print mode. You can increase the margins (i.e., wider) by setting them from your computer. The printer is also pre-set to the following (default) printing specifications:

- 12 characters/inch
- 80 characters/line
- 6 lines/inch
- 66 lines/page

Automatic Line Termination

Most computers terminate each line with a carriage return and a line feed. However, there are computers which terminate with either a carriage return or a line feed, but not both. In order for your printer to operate normally with these systems, you need to change the definition of the carriage return and line feed control codes. This can be done with either switches 1 and 2 on the rear panel of your printer (see Appendix A) or with the escape sequences of Table 2-1.

If switch 5 is DOWN (HP mode):

Table 2-1
Automatic Line Termination Escape Sequences

Character* received by printer	Character(s) executed by printer	Escape Sequence
CR LF FF	CR LF FF	<code>[ESC] & k 0 G</code>
CR LF FF	CR, LF LF FF	<code>[ESC] & k 1 G</code>
CR LF FF	CR CR, LF CR, FF	<code>[ESC] & k 2 G</code>
CR LF FF	CR, LF CR, LF CR, FF	<code>[ESC] & k 3 G</code>

*NOTE: CR = Carriage Return
 LF = Line Feed
 FF = Form Feed

These escape sequences override switches 1 and 2.

If switch 5 is UP (Alternate mode):

There are no escape sequences to change the definition of carriage return, line-feed, or form feed control codes. You must use switches 1 and 2 to specify their definition.

Maintenance and Troubleshooting

Your ThinkJet printer is designed for durability. This chapter provides a few basic instructions on care and some simple troubleshooting instructions for printer malfunctions.

Environmental Conditions

Your printer should be maintained and operated under the following environmental conditions:

- Operate only at temperatures from 50°F to 104°F (10°C to 40°C).
- Store only at temperatures from -4°F to 140°F (-20°C to 60°C).
- Operate only in relative humidity from 10% to 90%.

Maintenance of the Print Head Cartridge

The print head cartridge is durable, disposable, and easy to maintain. Observe a few simple rules of care, and your print head cartridge should be trouble-free.

- Avoid touching the face of the print head cartridge with your fingers.
- Periodically check the ink level of the print head cartridge. Hold the cartridge up and view the bladder inside. If the bladder is collapsed, then the ink supply is nearly depleted and the cartridge needs to be replaced.

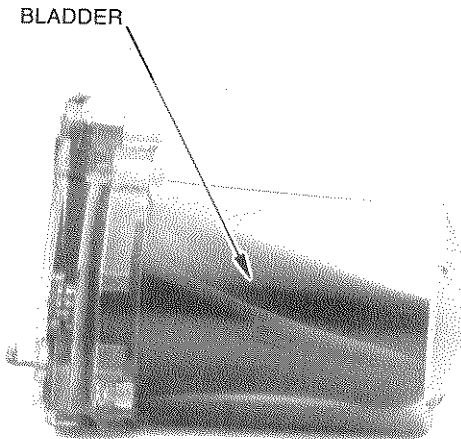


Figure 3-1 Empty Cartridge

- If the printer has not been used for a prolonged period, or if dust has accumulated on the face of the print head cartridge, wipe the face of the cartridge with a tissue to maintain best print quality. If print quality problems remain, see Table 3-1.

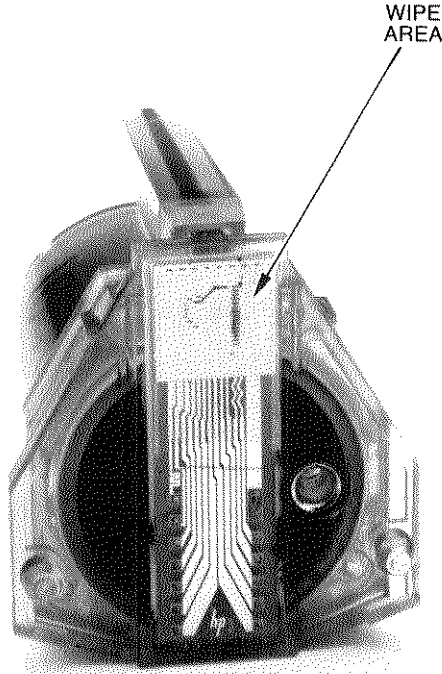


Figure 3-2 Wipe Area

- Avoid allowing the face of the print head cartridge to come into prolonged contact with other materials. This may cause the ink to wick out of the cartridge.
- Use the print head cartridge prior to the month and year of expiration printed on the package.

WARNING

The ink in the print head cartridge contains diethylene glycol which is HARMFUL IF SWALLOWED. Keep new or used cartridges OUT OF REACH OF CHILDREN.

Maintenance of the Printer

Ideally your printer should be stored and operated in a clean, dust-free environment. However, it can endure some rugged use.

To remove dirt and smudges, damp wipe with a mild solution of dishwashing detergent and water. Never use harsh chemicals to clean the printer. Unplug the printer prior to cleaning.

Periodically clean the paper dust out of the printer.

Troubleshooting

Table 3-1 contains some possible error conditions and recommended corrective action. In most instances, performing the corrective action described will eliminate the problem. If the problem persists, however, the printer should be returned for repair.

Table 3-1
Error Conditions

Error Condition	Correction Action
1. Red power light off.	<ul style="list-style-type: none"> • Ensure that the power module is plugged into a working outlet and the power switch is on. See Operator's Section (Power/Interface). • Ensure that the correct power module is used. (See Appendix E.)
2. Yellow attention light on continuously.	<ul style="list-style-type: none"> • Load paper into the printer. The attention light will begin flashing. See Operator's Section (Loading ThinkJet Paper).

<p>3. Yellow attention light flashing.</p>	<ul style="list-style-type: none"> • Press the blue button. The carriage will move and the attention light will turn off. See Operator's Section (Loading ThinkJet Paper). • Remove any obstruction from around the carriage and press the blue button again. See Operator's Section (Loading ThinkJet Paper). • If the attention light continues flashing, the printer should be returned for repair.
<p>4. Printer does not respond to computer.</p>	<ul style="list-style-type: none"> • Ensure that the power light is on and the attention light is off. If this is not the case, refer to error conditions 1 through 3 above. • Verify that the printer is operational by running the self test. See Operator's Section (Self Test).
<p>5. The format of your printouts is incorrect. Lines may start in the wrong place or the top and bottom margins are excessive.</p>	<ul style="list-style-type: none"> • Your computer may be sending all data bytes to the printer with the high bit set. If you are using the Roman-8 character set, control codes with the high bit set are not recognized. Try using one of the 7 bit character sets such as US ASCII (see Appendix D). • Your printer is not correctly configured for your computer system. See Operator's Section (Power/Interface) for switch configurations or work through the instructions in Appendix A for setting the mode select switches of your printer.
<p>6. Paper does not feed properly.</p>	<ul style="list-style-type: none"> • Remove the paper from the printer and discard any that is crumpled. • If you are using fanfold paper, verify that it can travel freely without catching, and that the right-side pinwheel is adjusted correctly for the width of your paper. See Operator's Section (Loading ThinkJet Paper). • Reload the paper. See Operator's Section (Loading ThinkJet Paper).

7. Print quality is poor, rows of dots are missing from print-outs, or the carriage moves but produces no print.

- If the print head stops printing after a few lines, it was probably jarred in shipment and needs to be activated. See Operator's Section (Maintenance).
- Ensure that there is sufficient ink in the cartridge by viewing the bladder. If the bladder is collapsed, replace the cartridge. See Operator's Section (Maintenance).
- Ensure that the carriage latch is fully closed. See Operator's Section (Loading Cartridge).
- Ensure that you are using a recommended ink jet paper.
- Wipe the face of the print head using a tissue to remove any accumulated dust. See Operator's Section (Maintenance). If the print head cartridge has not been used for a prolonged period, moisten the tissue with water before wiping.
- Lightly wipe the electrical connector of the carriage using a cotton swab dipped in alcohol. See Operator's Section (Maintenance).
- If the problem continues, replace the print head cartridge.

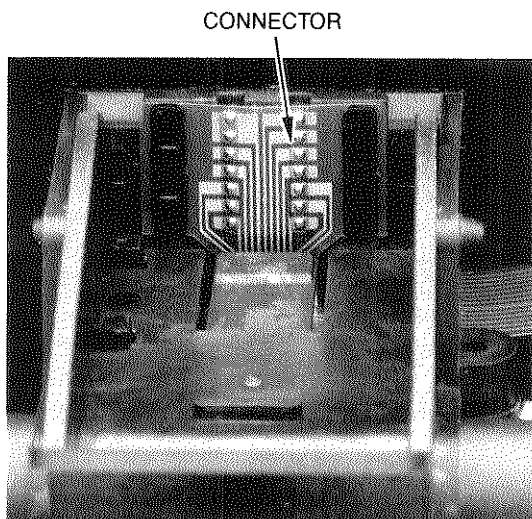


Figure 3-3 Carriage Electrical Connector

Mode Select Switches

The eight switches on the rear panel of the printer allows you to configure the default conditions of your printer for most computer systems and applications. These switches are numbered from 1 (closest to the power switch) to 8 (farthest from the power switch).

NOTE

The printer reads the switch settings only when it is first turned on. Therefore if you change any of the switch settings, you must turn the printer off for several seconds and back on before printing.

You cannot damage your printer by setting the switches incorrectly.

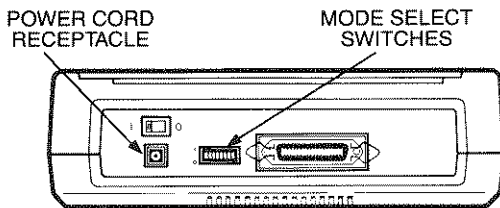


Figure A-1 Rear Panel

**Table A-1
Mode Select Switches (1 through 5)**

Switch number and name	Up	Down
1 CR* definition	CR does CR, LF	CR does CR only
2 LF* definition	LF does CR, LF	LF does LF only
3 Perforation skip mode	1" perforation skip	no perforation skip
4 Page length	12" (304.8 mm)	11" (279.4 mm)
5 Control sequence mode	Alternate	HP

*NOTE: CR = Carriage Return
LF = Line Feed

**Table A-2
Mode Select Switches (6 through 8)**

Switch Settings			Character Set
6	7	8	
down	down	down	Roman-8
up	down	down	United States ASCII
down	up	down	Swedish
up	up	down	IBM 8
down	down	up	French
up	down	up	German
down	up	up	United Kingdom
up	up	up	Spanish

Setting the Mode Select Switches

The switch settings in Table A-3 can be used as a guide for configuring some computer systems.

**Table A-3
Mode Select Configuration Guide
(8½" x 11" paper, English language)**

Computer	Switch Settings							
	1	2	3	4	5	6	7	8
Hewlett-Packard	down	down	down	down	down	down	down	down
IBM PC/XT	down	down	down	down	*	up	up	down
Apple IIe	down	down	down	down	*	up	down	down

*This switch is software dependent, see mode switch 5 description in following text.

If your computer system is not included in Table A-3, or the format of your printouts is incorrect, the following instructions will help you correctly configure your printer.

Before using these instructions, you must obtain some printout from your computer and printer. If you are going to use your printer with software such as a spreadsheet program or a word processor, use your software to generate some printout. Alternatively you may generate printout with a short BASIC program such as the following example.

```
10 FOR I = 1 TO 10
20 LPRINT "This is a line of sample output for testing my printer."
30 NEXT I
40 END
```

If your printer does not respond to your computer at all, try setting switch 6 on the rear panel of your printer up. If you still get no response, refer to the owner's manual for your computer or parallel printer interface card.

NOTE

The printer reads the switch settings only when it is first turned on. Therefore if you change any of the switch settings, you must turn the printer off for several seconds and back on before printing.

The switches are numbered from 1 (closest to the power switch) to 8 (farthest from the power switch). The remainder of this section describes, for each switch, conditions which may cause you to change the switch setting. If none of the conditions apply, leave the switch at its current setting.

Switch 1 - Carriage Return (CR) Definition

If your printer does not advance the paper between lines of print, set switch 1 up. The printer will add a line feed to each carriage return it receives.

If your printout is double spaced, set switch 1 down. The printer will not add a line feed to each carriage return.

Switch 2 - Line Feed (LF) Definition

If some lines of your printout start too far to the right, or only the first line is printed, set switch 2 up. This causes the printer to add a carriage return to each line feed it receives.

If some lines of your printout start too far to the left, set switch 2 down. The printer will not add a carriage return to each line feed.

Switch 3 - Perforation Skip Mode

If you are listing programs or using software which does not provide top and bottom margins in your printout, set switch 3 up. This will put the printer in perforation skip mode. In this mode the printer automatically provides top and bottom margins.

If you do not want top and bottom margins or you are using software such as a word processor which already provides margins, set switch 3 down. This turns off perforation skip mode.

Switch 4 - Page Length

If you are using 12" (304.8 mm) paper, set switch 4 up. This sets the printer's page length to 12 inches (304.8 mm).

If you are using 11" (279.4 mm) paper, set switch 4 down. This sets the printer's page length to 11 inches (279.4 mm).

Switch 5 - Select HP or Alternate Control Sequence Mode

If you are using software such as a word processor or graphics package that does not expect a Hewlett-Packard printer but does expect one of the following printers;

- Epson MX-80
- Epson MX-100
- IBM 80 CPS Printer
- IBM Graphics Printer

set switch 5 up. This puts your printer in Alternate Control Sequence Mode which will work correctly with many software packages.

If you are using software which expects a Hewlett-Packard printer or you are writing your own software, set switch 5 down. This puts your printer in HP Control Sequence Mode.

Switches 6, 7, and 8 - Select Character Set

The ThinkJet printer contains 8 different character sets. Switches 6, 7, and 8 together select which character set is being used for printouts. The 8 character sets and the switch settings used to select them are contained in the following table.

Table A-4
Character Set Selection

Switch Settings			Character Set
6	7	8	
down	down	down	Roman-8
up	down	down	United States ASCII
down	up	down	Swedish
up	up	down	IBM 8
down	down	up	French
up	down	up	German
down	up	up	United Kingdom
up	up	up	Spanish

If you are using an HP computer system which is already configured for the language you want printed, use the Roman-8 character set. Otherwise select the appropriate language character set from the list.

For more details on the character sets, see Appendix D.

Alternate Control Sequence Mode

The ThinkJet printer has two sets of control sequences: HP mode and Alternate mode. Mode selection is controlled by Switch 5 on the rear of the unit. Setting the switch in the UP position selects Alternate mode. HP recommends that your software be written for HP mode for two reasons:

- Your software can be leveraged through both the present and future Hewlett-Packard printer produce line, and
- Your system can have better performance. For example, single density graphics is 50% faster in HP mode than in Alternate mode.

If your system already uses an Epson printer or an IBM Graphics Printer, the use of ThinkJet's Alternate mode may save you development time, since you may not need changes in your software. However, care must be taken to be sure that your software does not depend on the physical characteristics of the printer.

Appendix B: Table of HP Mode Print Features

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
DISPLAY FUNCTIONS MODE			
Display Functions on	[ESC] Y	27, 89	1B, 59
Display Functions off (default)	[ESC] Z	27, 90	1B, 60
UNIDIRECTIONAL OR BIDIRECTIONAL PRINT			
Unidirectional print	[ESC] & k 0 W	27, 38, 107, 48, 87	1B, 26, 6B, 30, 57
Bidirectional text print (default)	[ESC] & k 1 W	27, 38, 107, 49, 87	1B, 26, 6B, 31, 57
PRINT POSITION CONTROLS			
Line Feed	[CTL] J	10	0A
Carriage Return	[CTL] M	13	0D
Back Space	[CTL] H	8	08
Half Line Feed	[ESC] =	27, 61	1B, 3D
Form Feed	[CTL] L	12	0C
GRAPHICS			
Select low density graphics	[ESC] * r 640 S	27, 42, 114, 54, 52, 48, 83	1B, 2A, 72, 36, 34, 30, 53
Select high density graphics	[ESC] * r 1280 S	27, 42, 114, 49, 50, 56, 48, 83	1B, 2A, 72, 31, 32, 38, 30, 53
Raster dot row*	[ESC] * b # W	27, 42, 98, #, ..#, 87	1B, 2A, 62, #, ..#, 57
Begin raster graphics	[ESC] * r A	27, 42, 114, 65	1B, 2A, 72, 41
End raster graphics	[ESC] * r B	27, 42, 114, 66	1B, 2A, 72, 42

AUTOMATIC LINE TERMINATION				
Character** Received	Character(s) Executed	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
CR LF FF	CR LF FF	<u>ESC</u> & k 0 G	27, 38, 107, 48, 71	1B, 26, 6B, 30, 47
CR LF FF	CR, LF LF FF	<u>ESC</u> & k 1 G	27, 38, 107, 49, 71	1B, 26, 6B, 31, 47
CR LF FF	CR CR, LF CR, FF	<u>ESC</u> & k 2 G	27, 38, 107, 50, 71	1B, 26, 6B, 32, 47
CR LF FF	CR, LF CR, LF CR, FF	<u>ESC</u> & k 3 G	27, 38, 107, 51, 71	1B, 26, 6B, 33, 47
(switches 1 and 2 set default)				
SELF TEST				
Perform self test	<u>ESC</u> z		27, 122	1B, 7A
RESET				
Perform reset	<u>ESC</u> E		27, 69	1B, 45

*When using the decimal or hexadecimal form of these escape sequences, you must substitute the decimal or hexadecimal form of each digit of the value field (#). For example, the character "7" is represented in ASCII as 55 decimal or 37 hexadecimal; the character "2" is represented in ASCII as 50 decimal or 32 hexadecimal (see Appendix D). Therefore the escape sequence ESC & ℓ 72 P has a decimal form of 27,38,108,55,50,80 and a hexadecimal form of 1B,26,6C,37,32,50.

**NOTE: CR = Carriage Return
 LF = Line Feed
 FF = Form Feed

Table of Alternate Mode Print Features

You may use the escape sequences and control codes of this table only if switch 5 on the rear panel of the printer is up. If switch 5 is down, you must use the escape sequences and control codes found in Appendix B.

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
PRINT PITCHES			
Expanded on	CTL N	14	0E
Expanded off (default)	CTL T	20	14
Compressed on	CTL O	15	0F
Compressed off (default)	CTL R	18	12
Expanded-compressed on	CTL N CTL O	14, 15	0E, 0F
Expanded-compressed off (default)	CTL T CTL R	20, 18	14, 12
QUALITY MODE			
Quality Mode on	ESC G	27, 71	1B, 47
Quality Mode off (default)	ESC H	27, 72	1B, 48
BOLD PRINT			
Bold Print on	ESC E	27, 69	1B, 45
Bold Print off (default)	ESC F	27, 70	1B, 46
UNDERLINE			
Underline on	ESC -1	27, 45, 49	1B, 2D, 31
Underline off (default)	ESC -0	27, 45, 48	1B, 2D, 30
LINE SPACING			
6 lines/inch (default)	ESC 2	27, 50	1B, 32
8 lines/inch	ESC 0	27, 48	1B, 30
7 dot row line spacing	ESC 1	27, 49	1B, 31
# dot row line spacing	ESC A CHR\$(#)	27, 65, #	1B, 41, (# Hex)
PERFORATION SKIP			
Set perf skip length (in lines)*	ESC N CHR\$(#)	27, 78, #	1B, 4E, (# Hex)
Perforation skip off (switch 3 sets default)	ESC O	27, 79	1B, 4F
PAGE LENGTH			
# lines/page*	ESC C CHR\$(#)	27, 67, #	1B, 43, (# Hex)
# inches/page* (switch 4 sets default)	ESC C CHR\$(0) CHR\$(#)	27, 67, 0, #	1B, 43, 0, (# Hex)

Appendix C: Table of Alternate Mode Print Features

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
PRINT POSITION	CONTROLS		
Line Feed	[CTL] J	10 or 138	0A or 8A
Carriage Return	[CTL] M	13 or 141	0D or 8D
Back Space	[CTL] H	8 or 136	08 or 88
Form Feed	[CTL] L	12 or 140	0C or 8C
GRAPHICS			
Low density column graphics*	[ESC] K #1 #2	27, 75, #1, #2	1B, 4B, (#1 Hex), (#2 Hex)
High density column graphics*	[ESC] L #1 #2	27, 76, #1, #2	1B, 4C, (#1 Hex), (#2 Hex)
RESET			
Perform reset	[ESC] @	27, 64	1B, 40

*When using the decimal or hexadecimal form of these escape sequences, you must substitute the hexadecimal form of the value field (#). The character tables in Appendix D can be used to find the hexadecimal form of decimal numbers. For example, the escape sequence **[ESC]** C CHR\$(48) is represented in decimal as 27, 67, 48. Table D-1 in Appendix D shows that the hexadecimal form of 48 is 30, so the hexadecimal form of **[ESC]** C CHR\$(48) is 1B, 43, 30.

Character Sets

Your computer communicates with your printer by sending it a series of "data bytes" (numbers between 0 and 255). Each data byte value corresponds to either a control code (0-31, 127, 128-159, and 255) or a printing character (32-126, and 160-254).

When the printer receives a data byte corresponding to a printing character, it looks up the value in the current character table and prints the character which it finds. When the printer receives a data byte corresponding to a control code, it either executes the control code (8, 10, 12-15, and 27 are executed) or ignores it.

Some character sets are "7-bit" character sets, which only contain 128 characters. If the printer is using a 7-bit character set and it receives a data byte with a value greater than or equal to 128, it first subtracts 128 from the data byte and then looks the new value up in its character table. Other character sets are "8-bit" character sets, which contain 256 characters. If the printer is using an 8-bit character set, it does not modify the value of the data bytes before looking them up in the character table.

The ThinkJet printer contains eight different character sets, which are discussed in this appendix. Table A-4 of Appendix A shows the switch setting for selecting each of the different character sets.

Roman-8

The Roman-8 character set is an 8-bit character set. In addition to all of the characters of the standard ASCII character set, shown in Table D-1, it contains the international characters and symbols which are displayed in Table D-2.

Table D-1
Roman-8 Characters (ASCII)

CHAR.	DEC.	HEX.
CTL@	N _U	0 00
CTL A	S _H	1 01
CTL B	S _X	2 02
CTL C	E _X	3 03
CTL D	E _T	4 04
CTL E	E _O	5 05
CTL F	A _X	6 06
CTL G	Φ	7 07
CTL H	B _S	8 08
CTL I	H _T	9 09
CTL J	L _T	10 0A
CTL K	V _T	11 0B
CTL L	F _T	12 0C
CTL M	C _R	13 0D
CTL N	S _O	14 0E
CTL O	S _I	15 0F
CTL P	D _L	16 10
CTL Q	D ₁	17 11
CTL R	D ₂	18 12
CTL S	D ₃	19 13
CTL T	D ₄	20 14
CTL U	N _X	21 15
CTL V	S _V	22 16
CTL W	E _B	23 17
CTL X	C _H	24 18
CTL Y	E _M	25 19
CTL Z	S _B	26 1A
CTL [E _C	27 1B
CTL \	F _S	28 1C
CTL]	G _S	29 1D
CTL ^	R _S	30 1E
CTL _	U _S	31 1F

CHAR.	DEC.	HEX.
	32	20
!	33	21
"	34	22
#	35	23
\$	36	24
%	37	25
&	38	26
'	39	27
(40	28
)	41	29
*	42	2A
+	43	2B
,	44	2C
-	45	2D
.	46	2E
/	47	2F
0	48	30
1	49	31
2	50	32
3	51	33
4	52	34
5	53	35
6	54	36
7	55	37
8	56	38
9	57	39
:	58	3A
;	59	3B
<	60	3C
=	61	3D
>	62	3E
?	63	3F

CHAR.	DEC.	HEX.
@	64	40
A	65	41
B	66	42
C	67	43
D	68	44
E	69	45
F	70	46
G	71	47
H	72	48
I	73	49
J	74	4A
K	75	4B
L	76	4C
M	77	4D
N	78	4E
O	79	4F
P	80	50
Q	81	51
R	82	52
S	83	53
T	84	54
U	85	55
V	86	56
W	87	57
X	88	58
Y	89	59
Z	90	5A
[91	5B
\	92	5C
]	93	5D
^	94	5E
_	95	5F

CHAR.	DEC.	HEX.
`	96	60
a	97	61
b	98	62
c	99	63
d	100	64
e	101	65
f	102	66
g	103	67
h	104	68
i	105	69
j	106	6A
k	107	6B
l	108	6C
m	109	6D
n	110	6E
o	111	6F
p	112	70
q	113	71
r	114	72
s	115	73
t	116	74
u	117	75
v	118	76
w	119	77
x	120	78
y	121	79
z	122	7A
{	123	7B
	124	7C
}	125	7D
~	126	7E
␣	127	7F

NOTE: Characters DEC. 0-31, 127-159 and 255 are only printed when display functions are enabled.

**Table D-2
Roman-8 Characters (Roman Extension)**

CHAR.	DEC.	HEX.
N _N	128	80
S _H	129	81
S _X	130	82
E _X	131	83
E _U	132	84
E _D	133	85
A _K	134	86
Q	135	87
E _C	136	88
H _I	137	89
L _R	138	8A
V _T	139	8B
F _F	140	8C
C _A	141	8D
S _A	142	8E
S	143	8F
D ₁	144	90
D ₂	145	91
D ₂	146	92
D ₃	147	93
D ₄	148	94
N _N	149	95
S _V	150	96
E _B	151	97
C _A	152	98
L _M	153	99
S _B	154	9A
E _C	155	9B
F _S	156	9C
C _C	157	9D
R _C	158	9E
U _G	159	9F

CHAR.	DEC.	HEX.
	160	A0
À	161	A1
Â	162	A2
É	163	A3
Ê	164	A4
Ë	165	A5
Ï	166	A6
Ì	167	A7
ˆ	168	A8
˘	169	A9
˙	170	AA
˚	171	AB
˛	172	AC
Û	173	AD
Ü	174	AE
£	175	AF
—	176	B0
	177	B1
	178	B2
°	179	B3
Ç	180	B4
ç	181	B5
Ñ	182	B6
ñ	183	B7
ı	184	B8
ı	185	B9
İ	186	BA
£	187	BB
¥	188	BC
§	189	BD
f	190	BE
ç	191	BF

CHAR.	DEC.	HEX.
ã	192	C0
ê	193	C1
ó	194	C2
û	195	C3
à	196	C4
é	197	C5
ó	198	C6
ú	199	C7
à	200	C8
è	201	C9
ò	202	CA
ù	203	CB
ã	204	CC
ë	205	CD
ö	206	CE
ü	207	CF
À	208	DC
ı	209	D1
ø	210	D2
Æ	211	D3
à	212	D4
ı	213	D5
ɑ	214	D6
æ	215	D7
À	216	D8
ı	217	D9
Ô	218	DA
Û	219	DB
É	220	DC
ı	221	DD
ß	222	DE
Ô	223	DF

CHAR.	DEC.	HEX.
À	224	E0
Á	225	E1
ä	226	E2
ð	227	E3
đ	228	E4
ı	229	E5
ı	230	E6
Ó	231	E7
Ô	232	E8
Õ	233	E9
ó	234	EA
Š	235	EB
š	236	EC
Ú	237	ED
ÿ	238	EE
ÿ	239	EF
ƒ	240	F0
ƒ	241	F1
	242	F2
	243	F3
	244	F4
	245	F5
—	246	F6
$\frac{1}{4}$	247	F7
$\frac{1}{2}$	248	F8
$\frac{3}{4}$	249	F9
φ	250	FA
«	251	FB
■	252	FC
»	253	FD
±	254	FE
■	255	FF

**Table D-3
IBM-8 Characters (ASCII)**

CHAR.	DEC.	HEX.
CTL@	N _U	0 00
CTLA	S _H	1 01
CTLB	S _X	2 02
CTLC		3 03
CTLD		4 04
CTLE		5 05
CTLF		6 06
CTLG	Q	7 07
CTLH	B _S	8 08
CTLI	H _T	9 09
CTLJ	L _F	10 0A
CTLK	V _T	11 0B
CTLL	F _F	12 0C
CTLM	C _R	13 0D
CTLN	S _O	14 0E
CTLO	S _I	15 0F
CTLP	D _L	16 10
CTLQ	D ₁	17 11
CTLR	D ₂	18 12
CTLS	D ₃	19 13
CTLT	D ₄	20 14
CTLU	N _K	21 15
CTLV	S _Y	22 16
CTLW	E _B	23 17
CTLX	C _N	24 18
CTLY	E _M	25 19
CTLZ	S _B	26 1A
CTL[E _C	27 1B
CTL\	F _S	28 1C
CTL]	G _S	29 1D
CTL^	R _S	30 1E
CTL_	U _S	31 1F

CHAR.	DEC.	HEX.
	32	20
!	33	21
"	34	22
#	35	23
\$	36	24
%	37	25
&	38	26
'	39	27
(40	28
)	41	29
*	42	2A
+	43	2B
,	44	2C
-	45	2D
.	46	2E
/	47	2F
0	48	30
1	49	31
2	50	32
3	51	33
4	52	34
5	53	35
6	54	36
7	55	37
8	56	38
9	57	39
:	58	3A
;	59	3B
<	60	3C
=	61	3D
>	62	3E
?	63	3F

CHAR.	DEC.	HEX.
@	64	40
A	65	41
B	66	42
C	67	43
D	68	44
E	69	45
F	70	46
G	71	47
H	72	48
I	73	49
J	74	4A
K	75	4B
L	76	4C
M	77	4D
N	78	4E
O	79	4F
P	80	50
Q	81	51
R	82	52
S	83	53
T	84	54
U	85	55
V	86	56
W	87	57
X	88	58
Y	89	59
Z	90	5A
[91	5B
\	92	5C
]	93	5D
^	94	5E
_	95	5F

CHAR.	DEC.	HEX.
'	96	60
a	97	61
b	98	62
c	99	63
d	100	64
e	101	65
f	102	66
g	103	67
h	104	68
i	105	69
j	106	6A
k	107	6B
l	108	6C
m	109	6D
n	110	6E
o	111	6F
p	112	70
q	113	71
r	114	72
s	115	73
t	116	74
u	117	75
v	118	76
w	119	77
x	120	78
y	121	79
z	122	7A
{	123	7B
	124	7C
}	125	7D
~	126	7E
■	127	7F

**Table D-4
IBM-8 Characters (ASCII)**

CHAR.	DEC.	HEX.
Ç	128	80
ü	129	81
é	130	82
à	131	83
ä	132	84
å	133	85
á	134	86
ç	135	87
ê	136	88
ë	137	89
è	138	8A
ì	139	8B
í	140	8C
î	141	8D
Ā	142	8E
Ă	143	8F
É	144	90
æ	145	91
Æ	146	92
ó	147	93
ô	148	94
ò	149	95
ù	150	96
ú	151	97
ÿ	152	98
Û	153	99
Ü	154	9A
ç	155	9B
£	156	9C
¥	157	9D
	158	9E
f	159	9F

CHAR.	DEC.	HEX.
à	160	A0
í	161	A1
ó	162	A2
ú	163	A3
ñ	164	A4
Ñ	165	A5
à	166	A6
ó	167	A7
ù	168	A8
	169	A9
	170	AA
$\frac{1}{2}$	171	AB
$\frac{1}{4}$	172	AC
ı	173	AD
«	174	AE
»	175	AF
	176	B0
	177	B1
	178	B2
	179	B3
	180	B4
	181	B5
	182	B6
	183	B7
	184	B8
	185	B9
	186	BA
	187	BB
	188	BC
	189	BD
	190	BE
	191	BF

CHAR.	DEC.	HEX.
	192	C0
	193	C1
	194	C2
	195	C3
	196	C4
	197	C5
	198	C6
	199	C7
	200	C8
	201	C9
	202	CA
	203	CB
	204	CC
	205	CD
	206	CE
	207	CF
	208	D0
	209	D1
	210	D2
	211	D3
	212	D4
	213	D5
	214	D6
	215	D7
	216	D8
	217	D9
	218	DA
	219	DB
	220	DC
	221	DD
	222	DE
	223	DF

CHAR.	DEC.	HEX.
	224	E0
ß	225	E1
	226	E2
	227	E3
	228	E4
	229	E5
	230	E6
	231	E7
	232	E8
	233	E9
	234	EA
	235	EB
	236	EC
	237	ED
	238	EE
	239	EF
	240	F0
±	241	F1
	242	F2
	243	F3
	244	F4
	245	F5
	246	F6
	247	F7
.	248	F8
	249	F9
	250	FA
	251	FB
	252	FC
	253	FD
■	254	FE
	255	FF

International Character Sets

The ThinkJet printer contains seven, 7-bit, international character sets. These character sets are all very similar to characters 0 through 127 of the Roman-8 character set, found in Table D-1. Table D-3 shows the differences between Roman-8 and the seven international character sets.

Table D-5
International Character Sets

Dec.	Roman-8	US ASCII	IBM-8	Swedish	French	German	UK	Spanish
35	#	#	#	#	£	#	£	£
36	\$	\$	\$	¤	\$	\$	\$	\$
39	,	,	,	,	,	,	,	,
64	@	@	@	É	à	§	@	§
91	[[[Ä	°	Ä	[¡
92	\	\	\	Ö	ç	Ö	\	Ñ
93]]]	Å	§	Ü]	¿
94	^	^	^	Ü	^	^	^	^
96	´	´	´	é	´	´	´	´
123	{	{	{	ä	é	ä	{	°
124				ö	ù	ö		ñ
125	}	}	}	å	è	ü	}	ç
126	~	~	~	ü	·	ß	—	~

Power Modules

The power module supplied with your printer should match the plug requirement for your area. However, power modules with different plugs are available to operate printers in different countries. The part numbers for these power modules are listed below.

Table E-1
Power Modules

<u>LINE VOLTAGE</u>	<u>AREA</u>	<u>PART NUMBER</u>
100 Volts	Japan	82241AJ
120 Volts	USA/Canada	82241A
220 Volts	Europe	82241AB
240 Volts	United Kingdom	82241AU
240 Volts	Australia	82241AG
240 Volts	South Africa	82241AA

Parallel Interface Specifications

The ThinkJet printer uses a standard parallel printer interface which is compatible with many personal computers.

Printer Connector Pin Assignments

The printer interface connector is compatible with a standard Amphenol-type, 36-pin connector.

The direction conventions used in Table F-1 are:

“In” - The signal is received by the printer from the computer.

“Out” - The signal is transmitted by the printer to the computer.

**Table F-1
Pin Assignments**

Pin No.	Signal	Direction	Description
1	Strobe	In	A LOW pulse of width greater than 0.5 μ s causes the printer to read one byte of data.
2	DATA 1	In	Data bit 0
3	DATA 2	In	Data bit 1
4	DATA 3	In	Data bit 2
5	DATA 4	In	Data bit 3
6	DATA 5	In	Data bit 4
7	DATA 6	In	Data bit 5
8	DATA 7	In	Data bit 6
9	DATA 8	In	Data bit 7
10	$\overline{\text{Acknlg}}$	Out	The printer sends a LOW pulse to indicate that it has accepted a byte of data and is ready for more data.
11	Busy	Out	A HIGH logic level indicates the printer cannot receive data due to data entry, a full buffer, or error status.
12	OOP	Out	A HIGH logic level indicates the printer is out of paper.
13	Selected	Out	Always HIGH
14,15			Not used
16	Logic Gnd		

17,18			Not used
19 to 30	Logic Gnd		
31	$\overline{\text{Input Prime}}$	In	A LOW pulse of width greater than 40 μs resets the printer and clears the print buffer.
32	$\overline{\text{Error}}$	Out	A LOW level indicates the printer has reached an error state: self test failed or carriage position lost.
33	Logic GND		
34 to 36			Not used

Printer Timing Diagram

The timing diagram, Figure F-1, illustrates the data and handshake lines during transfer of one data byte to the printer. DATA 1 through DATA 8 and the Strobe line are driven by the computer; the Acknlg line is driven by the printer.

Table F-2
Minimum and Typical Timing Intervals

Interval	Description	Minimum Value	Typical Value
t_D	Delay from DATA written to data $\overline{\text{Strobe}}$.	0.5 μs	
t_{SB}	Data $\overline{\text{Strobe}}$ width.	0.5 μs	
t_{ACK}	Acknlg pulse width.		5 μs
t_H	Duration of valid data after $\overline{\text{Strobe}}$.	0.5 μs	

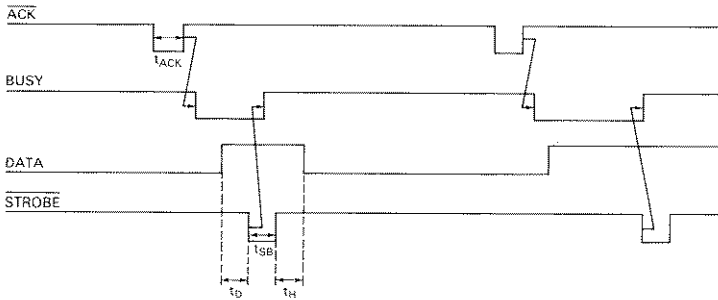


Figure F-1 Timing Diagram

List of Accessories and Supplies

Table G-1
Accessories and Supplies

Part No.	Description
92261A	Print Head Cartridge— Black only
51605R	Print Head Cartridge— Red only
51605G	Print Head Cartridge— Green only
51605B	Print Head Cartridge— Blue only
92261N	Ink Jet Paper — 2500 sheets, Z-fold
51630J	Ink Jet Paper— 500 sheets, single sheets
51630A	Ink Jet Paper— 500 sheets, Z-fold
92261S	Printer Stand — Clear Acrylic
	Power Modules— See page E-1.

Parallel [Centronics] Interface

The parallel interface has an Amphenol 36-pin female connector on the rear of the unit. The table below lists the cables used to connect your printer to some popular personal computers.

Table G-2
**Cables to connect a Parallel ThinkJet
to popular Personal Computers**

PC	Cable P/N
HP 150 (w/45643A I/F)	HP 13242D
HP 80 Series	HP 82949A Parallel Printer I/F
HP 86	HP 82957A
IBM PC/XT	IBM Parallel Printer Cable
IBM PCjr	PCjr printer cable
Compaq	IBM Parallel Printer Cable
TI Professional	TI #2223106-001
Apple IIe Parallel Interface Card	Apple #590-0042

Fast phones for price and availability by location:

Austria: (0222) 25 00 or 615/616 • Belgium/Luxembourg: (02) 7 62 32 00 • Denmark: (02) 8166 40, Ext. 258 • Finland: (90) 4 55 0211 • France: (6) 9 28 32 64 • Greece: (01) 6473360-1 • Italy: (02) 92 36 91 or (06) 5 48 31 • Middle East: Athens –(01) 808-0359 • Norway: (02) 17 1180 • South Africa: Johannesburg –(011) 802 5111; Cape Town –(021) 53 7954; Durban –(031) 28 4178 • Spain: (01) 6 38 4013 • Sweden: (08) 750 20 28 • The Netherlands: (020) 47 0639 • Switzerland: (057) 312254/59 • United Kingdom: (0734) 69 72 01 • United States: 800-538-8787; California –408-738-4133 • West Germany: 0130 33 22.

Warranty and Service Information

Warranty Information

The complete 1 year limited warranty statement is included in the front of this manual. Additional copies may be obtained from any authorized Hewlett-Packard dealer, or the sales and service office where you purchased your printer.

If you have any questions concerning this warranty, please contact an authorized Hewlett-Packard dealer or a Hewlett-Packard sales and service office, listed in the back of this manual. Should you be unable to contact them, please contact:

• **In the United States:**

Hewlett-Packard Company
Personal Computer Group
Customer Support
11000 Wolfe Road
Cupertino, CA 95014
Telephone: (503) 758-1010

Toll-Free Number: (800) FOR-HPPC (800 367-4772)

• **In Europe:**

Hewlett-Packard S.A.
150, route de Nant-d'Avril
P.O. Box CH-1217 Meyrin 2
Geneva
Switzerland
Telephone: (022) 83 81 11

Note: Do **not** send units to this address for repair.

• **In other countries:**

Hewlett-Packard Intercontinental
3495 Deer Creek Rd.
Palo Alto, CA 94304
U.S.A.
Telephone: (415) 857-1501

Note: Do **not** send units to this address for repair.

How to Obtain Repair Service

For information on service in your area, contact an authorized HP dealer, or the nearest Hewlett-Packard service facility listed in the back of this manual under Sales & Support Offices.

If your printer malfunctions and repair is required, you can help assure efficient servicing by having the following items with your printer at the time of service:

- A description of the configuration of the system you were using at the time of failure.
- A brief description of the malfunction symptoms for the service personnel.
- Printouts or other material that illustrate the problem area(s).
- A copy of the sales slip or other proof of purchase to establish the warranty coverage period.

Serial Number

Each printer carries an individual serial number. It is a good idea to keep a separate record of this number. Should your printer be stolen or lost, the serial number is required for insurance claims and is often helpful for tracing and recovery. Hewlett-Packard does not maintain records of individual owners' names and printer serial numbers.

General Shipping Instructions

Should you ever need to ship the printer, be sure that all components are packed in a protective package (use the original shipping case) to avoid in-transit damage. We suggest that you always insure shipments.

If you happen to be outside of the country where you bought your printer, contact the nearest authorized dealer or local Hewlett-Packard office for shipping instructions. All customs and duty charges are your responsibility.

Application Notes (Hardware and Software)

A variety of interface options and extensive software support allow you to use the ThinkJet Printer with most major personal computers—Hewlett-Packard Touchscreen PC's and The Portable, the IBM Family, and Apple's Macintosh, IIc and IIe, to name just a few. Feature definition and set up can vary between manufacturers. Because of this, specific hardware and software documentation has been specially written to facilitate the set up and use of your ThinkJet Printer with your application.

The following list of Application Notes is complete as of April, 1985. New Application Notes will be added on a periodic basis. Ask for the application notes that meet your needs at your local HP Dealer. Your HP Dealer will also have an updated list should you find that your application is not listed here.

Hardware Application Notes

IBM

Connecting the ThinkJet Printer:

- to an IBM PC, XT (Serial Interface) 5954-2901(54)
- to an IBM PC XT (Parallel Interface) 5954-2905(54)
- to an IBM PCjr (Parallel Interface) 5954-2909(54)
- to an IBM PCjr (Serial Interface) 5954-2912(54)

Apple

Connecting the ThinkJet Printer:

- to an Apple II+, Apple IIe (Parallel Interface) 5954-2902(54)
- to an Apple IIc (Serial Interface) 5954-2903(54)
- to an Apple II+, IIc (Serial Interface) 5954-2904(54)
- ThinkJet Works on Macintosh 5954-6121(54)

Hewlett-Packard

Connecting the ThinkJet Printer:

- to an HP 150 A/B (Serial Interface) 5954-2906(54)
- to an HP 150 A/B (HP-IB Interface) 5954-2907(54)
- to an HP 110 (HP-IL Interface) 5954-2908(54)
- to an HP 150 A/B (Parallel Interface) 5954-2910(54)
- to an HP 150 A/B (HP-IL Interface) 5954-2911(54)

Software Application Notes

IBM (Serial Interface)

IBM Writing Assistant on the IBM PCjr	5954-6106(54)
IBM Filing Assistant on the IBM PCjr	5954-6107(54)
IBM Reporting Assistant on the IBM PCjr	5954-6108(54)
IBM Graphing Assistant on the IBM PCjr	5954-6109(54)
Lotus 1-2-3® on the IBM PCjr	5954-6110(54)
WordStar® on the IBM PCjr	5954-6111(54)
Multiplan® on the IBM PCjr	5954-6112(54)
Andrew Tobias Managing Your Money™ on the IBM PCjr	5954-6115(54)
Bank Street Writer® on the IBM PCjr	5954-6118(54)

Apple (Parallel Interface)

<i>pfs</i> ®:write on the Apple IIe	5954-2917(54)
WordStar® on the Apple IIe	5954-2919(54)
<i>pfs</i> ®:report on the Apple IIe	5954-2924(54)
Bank Street Writer® on the Apple IIe	5954-2934(54)
Apple® Writer II on the Apple IIe	5954-2941(54)
Multiplan® on the Apple IIe	5954-2942(54)
<i>pfs</i> ®:file on the Apple IIe	5954-2944(54)
Apple® Works on the Apple IIe	5954-2945(54)
<i>pfs</i> ®:graph on the Apple IIe	5954-2946(54)

Apple (Serial Interface)

Homeword on the Apple IIc	5954-2913(54)
DOLLAR AND SENSE™ on the Apple IIc	5954-6113(54)
Bank Street Writer® on the Apple IIc	5954-6114(54)
Apple® Works on the Apple IIc	5954-6116(54)
The Home Accountant™ on the Apple IIc	5954-6117(54)
WORD JUGGLER™ on the Apple IIc	5954-6119(54)
WORD HANDLER II™ on the Apple IIc	5954-6120(54)

Hewlett-Packard (HP-IB Interface)

MultiMate™ on the HP 150 A/B	5954-2916(54)
Microsoft® Word on the HP 150 A/B	5954-2920(54)
MemoMaker on the HP 110 (HP-IL)	5954-2921(54)
WordStar® on the HP 150 A/B	5954-2922(54)
Lotus 1-2-3® on the HP 150 A/B and the HP 110 (HP-IL)	5954-2923(54)
dBase II™ on the HP 150 A/B	5954-2928(54)
Diagraph™ on the HP 150 A/B	5954-2929(54)
MemoMaker on the HP 150 A/B	5954-2947(54)
Multiplan® on the HP 150 A/B	5954-2949(54)
Picture Perfect™ on the HP 150 A/B	5954-2950(54)

IBM (Parallel Interface)

<i>pfs</i> ®:graph on the IBM PC,XT	5954-2918(54)
<i>pfs</i> ®:write on the IBM PC, XT	5954-2925(54)
MultiMate™ on the IBM PC, XT	5954-2926(54)
TK!Solver™ on the IBM PC, XT	5954-2927(54)
<i>pfs</i> ®:file on the IBM PC, XT	5954-2930(54)
Lotus 1-2-3® on the IBM PC, XT	5954-2931(54)
Volkswriter Deluxe™ on the IBM PC, XT	5954-2932(54)
Multiplan® on the IBM PC, XT	5954-2933(54)
Symphony® on the IBM PC, XT	5954-2935(54)
<i>pfs</i> ®:report on the IBM PC, XT	5954-2936(54)
Framework™ on the IBM PC, XT	5954-2937(54)
Microsoft® Word on the IBM PC, XT	5954-2938(54)
WordStar® on the IBM PC, XT	5954-2939(54)
dBase II™ on the IBM PC, XT	5954-2940(54)
dBase III™ on the IBM PC, XT	5954-2943(54)
EasyWriter II™ System on the IBM PC, XT	5954-2948(54)

1-2-3 and Symphony are registered trademarks of Lotus Development Corporation. dBase II, dBase III, and Framework are trademarks of Ashton-Tate, Inc. MultiMate is a registered trademark of MultiMate International Corporation. *pfs*: is a registered trademark of Software Publishing Corporation. Volkswriter Deluxe and Volkswriter Scientific are trademarks of Lifetree Software, Inc. WordStar is a registered trademark of MicroPro International Company. Supercalc III is a trademark of Sorcium/IUS. Microsoft and Multiplan are registered trademarks of Microsoft Corporation. DOLLARS AND SENSE is a trademark of Monogram. Bank Street Writer is a trademark of Brøderbund Software, Inc. IBM is a registered trademark of International Business Machines Corporation. Managing Your Money is a trademark of Micro Education Corporation of America. Apple Works, MacWRITE and MacPAINT are trademarks of Apple Computer, Inc. The Home Accountant is a trademark of Continental Software Company. WORD JUGGLER is a trademark of Quark, Inc. WORD HANDLER II is a trademark of Advanced Logic Systems. HOMEWORD is a trademark of Sierra On-Line, Inc. Microsoft and Multiplan are registered trademarks of Microsoft Corporation. SoftStyle and Jetstart are trademarks of SoftStyle, Inc.

Index

Page numbers in **bold** type indicate primary references; page numbers in standard type indicate secondary references.

A

- Accessories G-1
- Alternate Controls Mode 1-3, A-1, **A-3**, C-1
- Alternate Control Sequence Mode A-5
- ASCII 1-2, 2-3, A-1, **A-4**, **D-2**, **D-4**
- Attention (Yellow) Light 3-3, 3-4
- Automatic Line Termination 2-1, **2-9**, B-3

B

- Back Space 2-1, 2-2, B-2, C-2
- Battery Pack Maintenance 3-1
- Bidirectional Print 2-6, B-2, C-1
- Blue Button 1-5, 3-3, 3-4
- Bold Print 1-6, 1-7, B-1, C-1

C

- Cable Inside Back Cover
- Carriage Return 2-1, 2-2 thru 2-6, 2-8, 2-10, A-1, **A-3**, B-2, C-2
- Character Sets 3-4, A-1, **A-4**, **D-1 thru D-6**
- CHR\$() Function 1-3
- Control Codes . **1-1 thru 1-3**, 1-5, 2-1, 2-2, 2-7 thru 2-10, B-1, B-2, C-1, C-2
- Control Sequence Modes 1-3, A-1, **A-3**
- Current Active Position 2-1, 2-2

D

- Default Printing Specifications 2-9
- Display Functions 2-7, 2-8, B-2

E

- Environmental Conditions 3-1
- Error Conditions 3-3 **thru 3-5**
- Escape Sequences **1-1**, 1-2 thru 1-10, 2-1 thru 2-10, **B-1 thru B-3**, C-1, C-2
 - Linking 2-7

F

- Form Feed
 - Button 1-8
 - Control 1-8, 2-2, 2-10, B-2, C-2

G

- Graphics 2-2 **thru 2-6**, B-2, C-2

H

- Half Line Feed 2-1, 2-2, B-2
- HP Controls Mode 1-3, A-1, A-3, B-1

I

- IBM-8 Characters (ASCII) D-4
- IBM Graphics Printer Functions Not in ThinkJet A-6
- Interface Cables G-1
- Interference Inside Back Cover, 3-6

L

- Line Feed
 - Control 2-1, 2-9, 2-10, A-1, A-3, B-2, C-2
- Line Spacing 1-10, 1-11, 2-1, 2-6, B-1, C-1

M

- Maintenance
 - Print Head Cartridge 3-1, 3-2, 3-5
 - Printer 3-3
- Margins (Horizontal) 2-9
- Margins (Vertical) 1-8, 2-9, 3-4, A-3
- Mixing Modes 1-7
- Mode Select Switches 1-1, 1-3, A-1 thru A-4
 - Configuration Guide A-2

O

- Operating Conditions 3-1
- Overstrike 2-2

P

- Page Length 1-9, 1-10, A-1, A-3, B-1, C-1
- Paper 3-5, G-1
 - Advance 2-1, 2-2, 2-4, 2-6
 - Dust 3-5
 - Fanfold G-1
 - Ink Jet 3-5, G-1
 - Out of F-1
 - Single Sheet G-1
- Parallel Interface F-1, F-2, G-1
- Perforation Skip 1-8, 1-9, 2-9, A-1, A-3, B-1, C-1
- Power Modules E-1
- Power (Red) Light 3-3
- Print Head Cartridge 3-1, 3-2, 3-5, F-1
- Print Pitches 1-4, 1-5, B-1, C-1
- Print Quality 1-5
- Printer Stand F-1

Printing Self Test	2-8
Q	
Quality Mode	1-5, 1-6
R	
Repair.	3-3, H-2
Reset.	2-9, B-3, C-2, F-2
S	
Self Test	2-8, B-3, F-2
Serial Number	H-2
Service Information.	H-1
Shipping Instructions	H-2
Storing Conditions	3-1, 3-3
Subscripts	2-2
Superscripts	2-2
Supplies.	F-1
T	
Text Length	1-8, 1-9, 1-10, B-1
Top of Form.	1-7, 1-8, 2-9
Troubleshooting.	3-3
U	
Underlining	1-7, B-1, C-1
Unidirectional Print	2-6, B-2, C-1
W	
Warranty Information	H-1
Wrap-Around	2-7, B-1

SALES & SUPPORT OFFICES

Arranged alphabetically by country

Product Line Sales/Support Key

Key Product Line

A Analytical

CM Components

C Computer Systems Sales only

CH Computer Systems Hardware Sales and Services

CS Computer Systems Software Sales and Services

E Electronic Instruments & Measurement Systems

M Medical Products

P Personal Computation Products

* Sales only for specific product line

** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

AFRICA AND MIDDLE EAST

Hewlett-Packard S.A.

Mediterranean and Middle East

Operations

Afrifa Centre

32 Kilissias Ave.

Paradissos-Amarousion, ATHENS

Greece

Tel: 682 88 11

Tel: 21-6588 HPAT GR

Cable: HEWPACKSA Athens

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.

7, Rue du Bois-du-Lan

CH-1217 MEYRIN 2, Switzerland

Tel: (022) 83 12 12

Tel: 27835 hpse

Cable: HEWPACKSA Geneva

ASIA

Hewlett-Packard Asia Ltd.

47/F, 26 Harbour Rd.,

Wanchai, HONG KONG

G.P.O. Box 863, Hong Kong

Tel: 5-820833

Tel: 76793 HPA HX

Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.

687 Goreway Drive

MISSISSAUGA, Ontario L4V 1M8

Tel: (416) 678-9430

Tel: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.H.

Liebigasse 1

P.O. Box 72

A-1222 VIENNA, Austria

Tel: (222) 2365110

Tel: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.

Ullenslede 475

P.O. Box 959

NL-1190 AZ AMSTELVEEN

The Netherlands

Tel: 20 437711

SOUTH EAST EUROPE

Hewlett-Packard S.A.

World Trade Center

110 Avenue Louis Carot

1215 Cointrin, GENEVA, Switzerland

Tel: (022) 96 96 51

Tel: 27225 hpse.

EASTERN USA

Hewlett-Packard Co.

4 Choke Cherry Road

ROCKVILLE, MD 20850

Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.

5201 Tolliver Drive

ROLLING MEADOWS, IL 60008

Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.

2000 South Park Place

P.O. Box 105005

ATLANTA, GA 30346

Tel: (404) 353-1500

WESTERN USA

Hewlett-Packard Co.

3539 Lankerstlim Blvd.

P.O. Box 3919

LOS ANGELES, CA 91604

Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.

Intercontinental headquarters

3495 Deer Creek Road

PALO ALTO, CA 94304

Tel: (415) 857-1501

Tel: 034-8300

Cable: HEWPACK

ANGOLA

Electra

Empresa TÁcnica de Equipamentos

R. Barbosa Rodrigues, 411 DT.

Caixa Postal 648?

LUANDA

Tel: 35515.35516

E/P

ARGENTINA

Hewlett-Packard Argentina S.A.

Avenida Santa Fe 2035

Martinez 1640 BUENOS AIRES

Tel: 798-5725, 792-1293

Cable: HEWPACKARG

A.E.CH.CS.P

AUSTRALIA

Adelaide, South Australia

Hewlett-Packard Australia Ltd.

153 Greenhill Road

FARKSIDE, S.A. 5063

Tel: 272-5911

Tel: 82536

Cable: HEWPARD Adelaide

A*,CH,CM,CS,E,M,P

Brisbane, Queensland

Hewlett-Packard Australia Ltd.

13 Payne Road

THE GAP, Queensland 4061

Tel: 30-4133

Tel: 42133

Cable: HEWPARD Brisbane

A,CH,CS,CM,E,M,P

Canberra, Australia

Capital Territory

Hewlett-Packard Australia Ltd.

121 Wolfongong Street

FYSHWICK, A.C.T. 2609

Tel: 80 4244

Tel: 62650

Cable: HEWPARD Canberra

A,CH,CM,CS,E,P

Melbourne, Victoria

Office

Hewlett-Packard Australia Ltd.

31-41 Joseph Street

BLACKBURN, Victoria 3130

Tel: 895-2895

Tel: 31-024

Cable: HEWPARD Melbourne

A,CH,CM,CS,E,M,P

Perth, Western Australia

Office

Hewlett-Packard Australia Ltd.

261 Stirling Highway

CLAREMONT, W.A. 6010

Tel: 383-2188

Tel: 93859

Cable: HEWPARD Perth

A,CH,CM,CS,E,M,P

Sydney, New South

Wales Office

Hewlett-Packard Australia Ltd.

17-23 Talavera Road

P.O. Box 308

NORTH RYDE, N.S.W. 2113

Tel: 888-4444

Tel: 21561

Cable: HEWPARD Sydney

A,CH,CM,CS,E,M,P

AUSTRIA

Hewlett-Packard Ges.m.b.H.

Grottenhofstrasse 94

A-9052 GRAZ

Tel: (0316) 291 5 66

Tel: 32375

CH,E

Hewlett-Packard Ges.m.b.H.

Liebigasse 1

P.O. Box 72

A-1222 VIENNA

Tel: (022) 23 65 11-0

Tel: 134425 HEPA A

A,CH,CM,CS,E,M,P

BAHRAIN

Office

P.O. Box 557

Manama

BAHRAIN

Office

Telex: 64419

P

Wael Pharmacy

P.O. Box 648

BAHRAIN

Office

Telex: 0530 WAEI BN

E,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.

Bldv de la Woluwe, 100

Woluwedal

B-1200 BRUSSELS

Tel: (02) 762-32-00

Tel: 23-484 paloben brv

A,CH,CM,CS,E,M,P

BERMUDA

Applied Computer Technologies

Atlantic House Building

Par-la-Ville Road

Hamilton 5

Tel: 295-1616

P

BRAZIL

Hewlett-Packard do Brasil

I.E.C. Ltda.

Avameda Rio Negro, 750

Alphaville

06403 BARBERI SP

Tel: (011) 421-1311

Telex: (011) 33672 HPBR-BR

Cable: HEWPACK Sao Paulo

A,CH,CM,CS,E,M,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

BRAZIL (Cont'd)

Hewlett-Packard do Brasil
L.E.C. Ltda.
Avenida Epitacio Pessoa, 4664
22471 RIO DE JANEIRO-RJ
Tel: (021) 286-0237
Telex: 021-21905 HPBR-BR
Cable: HEWPADK Rio de Janeiro
A.CH.CM.E.M.P.*
Convex/Van Den
Rua Jose Bonifacio
468 Todos Os Santos
CEP 20771
RIO DE JANEIRO, RJ
Tel: 240-7121, 591-4946
Telex: 33487

ANAMED I C E I Ltda
Rua Rago, 103
04012 SAO PAULO
Tel: (011) 570-5726
Telex: 021-21905 HPBR-BR
M

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (403) 235-3100
A.CH.CM.E.* M.P.*
Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666
A.CH.CM.CS.E.M.P

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way

RICHMOND,

British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A.CH.CM.CS.E.* M.P.*

Hewlett-Packard (Canada) Ltd.
121 - 3350 Douglas Street
VICTORIA, British Columbia V8Z 3L1
Tel: (604) 381-6616
CH,CS

Manitoba

Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R3H 0Y1
Tel: (504) 796-6701
A.CH.CM.E.M.P.*

New Brunswick

Hewlett-Packard (Canada) Ltd.
37 Shediac Road
MONCTON, New Brunswick E1A 2R6
Tel: (506) 855-2841
CH,CS

Nova Scotia

Hewlett-Packard (Canada) Ltd.
Suite 111
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
CH,CM,CS,E*,M,P*

Ontario

Hewlett-Packard (Canada) Ltd.
3325 N. Service Rd., Unit 6
BURLINGTON, Ontario P3A 2A3
Tel: (416) 335-8644
CS,M*

Hewlett-Packard (Canada) Ltd.
495 Days Road
KINGSTON, Ontario K7M 5R4
Tel: (613) 384-2088
CH,CS

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A.CH.CM.E.* M.P.*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A.CH.CM.CS.E.M.P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A.CH.CM.CS.E.* M.S.,P.*

Hewlett-Packard (Canada) Ltd.
1835 Lasalle Boulevard
SUDBURY, Ontario P3A 2A3
Tel: (705) 560-5459
CH

Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd. Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-8333
CH

Quebec

Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
KIRKLAND, Quebec J9J 2M5
Tel: (514) 697-4292
A.CH.CM.CS.E.M.P.*

Hewlett-Packard (Canada) Ltd.
1150 Rue Claire Fontaine
QUEBEC CITY, Quebec G1R 5G4
Tel: (418) 648-0726
CH,CS

Hewlett-Packard (Canada) Ltd.
#7-100 Robin Crescent
SASKATOON, Saskatchewan S7J 6M7
Tel: (306) 242-3702
CH,CS

CHILE

ASC Ltda.
Austria 2041
SANTIAGO
Tel: 223-5946, 220-6148
Telex: 348182 ASC CH
P.C

Jorge Calcaqui y Cia Ltda.
Av. Italia 834 Santiago
SANTIAGO
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: 440285 JCYCL CZ
CM,E,M

Mexico S.A

Montañas 454 of. 206
SANTIAGO
Tel: 395752, 398296
Telex: 340586 METLAE MX
A

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: 225-5014
Telex: 340892 OLYMP
Cable: Olympichile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Road

HONG KONG
Tel: 5-8323211
Telex: 36678 HEWPA HX
A.C,CH,CS,E,M,P

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Liao 2, Luchang St.
Beiwai Rd., Xuanwu District

BEIJING
Tel: 33-1847, 33-7426
Telex: 30911 CTSHP CN
Cable: 1920
A.CH.CM.CS.E.P

COLOMBIA
Instrumental/Ont
H. A. Langehaer & Kier S.A
Carrera 4A No. 52A-26
Apartado Aereo 6287

BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

Neftomedicas Ltda.
Calle 123 No. 98-31
Apartado Aereo 100-958
BOGOTA D.E., 10

BOGOTA D.E., 10
Tel: 213-3267, 213-1615
Telex: 43415 HEGAS CO
A

Procesa. S.A
CRA 7 No. 24-89 Piso 25
Torre Colpatria
Apartado Aereo No. 49867

BOGOTA D.E.
Tel: 2344925, 2344958, 2344742
Telex: 43127 COVER CO
C,P

Compu mundo
Avenida 15 # 107-80
BOGOTA D.E.
Tel: 214-4458
Telex: 45468 MARICO
P

COSTA RICA

Clientica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159

SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2767 GALGUR CR
CM,E,M

CYPRUS

Telerex Ltd.
P.O. Box 4809
14C Stavros Avenue
NICOSIA
Tel: 62696
Telex: 2894 LEVDDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 BIRKEROD
Tel: (32) 51-55-40
Telex: 37409 hpsa dk
A.CH.CM.CS.E.M,P

Hewlett-Packard A/S
Rohlgadevej 32
DK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpsa dk
CH,E

DOMINICAN REPUBLIC

Micrograf S.A
Juan Tomas Mejia y Cotes No. 80
Arroyo Honda
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 AARENTA DR.(RCA)
P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P

Hospitalar S.A.
Robles 625
Casilla 3580
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL ED
Cable: HOSPTALAR-Quito
M

QUITO
Tel: 2-288-951
Telex: 2298 ECUAME ED

EGYPT
Egyptian International
Office for Foreign Trade
P.O. Box 2556
42 El-Zakara Street
Dokki, CAIRO,
Tel: 212230
Telex: 93337 EGPOR UN
Cable: EGYPOR
P.A

EGYPT (Cont'd)

INFORMATIC FOR SYSTEMS
24 Talat Harb Street

CAIRO,
Tel: 759006
Telex: 93697 SAFLM UN
CS

International Engineering Associates
24 Hussein Hogazi Street
Kasr-el-Aini

CAIRO,
Tel: 23829, 21641
Telex: 93630 IEA UN
Cable: INTEGASSO
E

S.S.C. Medical
40 Gharat El Arab Street
Mohandessin

CAIRO,
Tel: 803844, 805998, 810263
Telex: 20500 SSC UN
M*

EL SALVADOR
IPESA de El Salvador S.A.
29 Avenida Norte 1216

SAN SALVADOR
Tel: 26-8858, 26-6868
Telex: 20539 IPESASAL
A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
Pitkankalliontie 17
02200 ESPOO

Tel: 00359-0-88721
Telex: 121563 HEWPA SF
CH,CM,SS,P

Hewlett-Packard Oy
(Olariluoma 7)
PL 24
02101 ESPOO 10
Tel: (90) 4521022
A,E,M

Hewlett-Packard Oy
Aatoksenkatu 10-C
SF-40720-72 JYVASKYLA
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kalivuatie 1-C
SF-80140-14 OULU
Tel: (351) 338765
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Barthelot

F-13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: (42) 59-41-02
Telex: 410770F
A,CH,E,M,P*

Hewlett-Packard France
64, rue Marchand Salliant
F-61000 ALENCON
Tel: (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
28 rue de la Republique
F-25000 BESANCON
Tel: (81) 83-16-22
Telex: 361157
CH,M

Hewlett-Packard France
13, Place Napoleon III
F-29000 BREST
Tel: (98) 03-38-95
Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 ECULLY Cedex (Lyon)
Tel: (78) 893-81-25
Telex: 310617F
A,CH,CS,E,M

Hewlett-Packard France
Parc d'Activite du Bois Briard
Ave. du Lac
F-91040 ERY Cedex
Tel: 6 977-8383
Telex: 692315F
E

Hewlett-Packard France
5, Avenue Raymond Chanas
F-38520 EYBENS (Grenoble)
Tel: (76) 82-67-98
Telex: 980124 HP GRENBO EYBE
CH

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93158 LE BLANC MESNIL
Tel: (1) 865-44-52
Telex: 211032F
CH,CS,E,M

Hewlett-Packard France
Parc d'Activites Cadura
Quartier Jean Mermoz
Avenue du Président JF Kennedy
F-33760 MERIGNAC (Bordeaux)
Tel: (56) 34-00-84
Telex: 550105F
CH,E,M

Hewlett-Packard France
immeuble "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briard
F-44065 NANTES Cedex
Tel: (40) 80-32-22
Telex: 711085F
CH**

Hewlett-Packard France
125, rue du Faubourg Barrinier
F-45000 ORLEANS
Tel: (38) 88 01 63

Hewlett-Packard France
Zones Industrielles de Courtabouef
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600046F
A,CH,CM,CS,E,M,P

Hewlett-Packard France
Paris Porte-Maillet
15, Avenue de l'Amiral Bruix
F-75762 PARIS CEDEX 16
Tel: (1) 502-12-20
Telex: 619863F
CH,M,P

Hewlett-Packard France
124, Boulevard Tourasse
F-64000 PAU
Tel: (59) 60 38 02

Hewlett-Packard France
2 AbAEE de la Bourgonnette
F-35100 RENNES
Tel: (99) 51-42-44
Telex: 740912F
CH,CM,E,M,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 ROUEN
Tel: (35) 83-57-66
Telex: 770035F
CH** CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 56
F-67033 STRASBOURG Cedex
Tel: (88) 26-56-46
Telex: 890141F
CH,E,M,P**

Hewlett-Packard France
Le PARIPOLE
20, Chemin du Pigeonnier de la
CAEPIEERE
F-31063 TOULOUSE Cedex
Tel: (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: (75) 42 76 18

Hewlett-Packard France
Carolor
ZAC de Bois Briard
F-57640 WIGY (Metz)
Tel: (8) 771 20 22
CH

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Geschäftsstelle
Kellstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbbn d
A,CH,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Hörrenberger Strasse 130
D-7030 BOBLINGEN
Tel: (7031) 14-0
Telex: 07265739
A,CH,CM,CS,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
D-4900 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hppd d
A,CH,CS,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-Aplerbeck
Tel: (0231) 45001

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernar Strasse 117
Postfach 560 140
D-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpfm d
A,CH,CM,CS,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Ausstellung Bad Homburg
Louisenstrasse 115
D-6360 BAD HOMBURG
Tel: (06172) 109-0

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
D-2000 HAMBURG 60
Tel: (040) 63604-1
Telex: 021 63 032 hphd d
A,CH,CS,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Hannoverscher Platz 3-39
D-3000 HANNOVER 61
Tel: (0511) 5798-0
Telex: 092 3259
A,CH,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Rostauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 0731-70241
Telex: 0712616 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Ethenicherstr. 13
D-8500 NURNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860
CH,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
D-9028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,M,P

GREAT BRITAIN
See United Kingdom

SALES & SUPPORT OFFICES

Arranged alphabetically by country

GREECE

Hewlett-Packard A.E.
178, Kifissias Avenue
6th Floor
Halandri-ATHENS
Greece
Tel: 647 1673, 647 1540, 647 2971
A,CH,CM**,CS**,E,M,P

Kostas Karayannis S.A.
3 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,M,P

FLAINDO S.A.

Etiquetas Brokers Ltd
11854

ATHENS

Tel: 34-51-911
Telex: 216286
P

GUATEMALA

IPESA

Avenida Reforma 3-45, Zona 9

GUATEMALA CITY

Tel: 318627, 314786

Telex: 4182 TELTRO GU

A,CH,CM,CS,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.

G.P.O. Box 795

5th Floor, Sun Hung Kai Centre

38 Harbour Road

HONG KONG

Tel: 5-8525211

Telex: 66678 HEWPA HX

Cable: HEWPACK HONG KONG

E,CH,CS,P

CET Ltd.

10th Floor, Hua Asia

Bldg, Gloucester

64-66 Gloucester Road

HONG KONG

Tel: (5) 200922

Telex: 85148 CET HX

CM

Schmidt & Co. (Hong Kong) Ltd.

18th Floor, Great Eagle Centre

23 Harbour Road, Wanchai

HONG KONG

Tel: 5-830222

Telex: 74796 SCHMC HX

A,M

ICELAND

Elding Trading Company Inc.

Hafnarmyvli-Tryggvagotu

P.O. Box 895

IS-REYKJAVIK

Tel: 1-58-20, 1-63-03

M

INDIA

Computer products are sold through

Blue Star Ltd. All computer repairs and

maintenance service is done through

Computer Maintenance Corp.

Blue Star Ltd.

Sabri Complex II Floor

24 Residency Rd.

BANGALORE 560 025

Tel: 56660

Telex: 0845-430

Cable: BLUESTAR

A,CH**,CM,CS*,E

Blue Star Ltd.

Band Box House

Prabhadevi

BOMBAY 400 025

Tel: 422-2101

Telex: 011-3751

Cable: BLUESTAR

A,M

Blue Star Ltd.

Sahas

414/2 Vir Savarkar Marg

Prabhadevi

BOMBAY 400 025

Tel: 422-6155

Telex: 011-71193

Cable: FROSTBLUE

A,CH**,CM,CS*,E,M

Blue Star Ltd.

Kalyan, 19 Vishwas Colony

Algaonji BORDOA, 390 005

Tel: 83235

Cable: BLUE STAR

A

Blue Star Ltd.

7 Hare Street

CALCUTTA 700 001

Tel: 12-01-31

Telex: 021-7655

Cable: BLUESTAR

A,M

Blue Star Ltd.

153 Kodambakkam High Road

MADRAS 600 034

Tel: 82057

Telex: 041-379

Cable: BLUESTAR

A,M

Blue Star Ltd.

Shantari House, 7th/8th Floors

31 Metro Place

NEW DELHI 110 024

Tel: 682547

Telex: 031-2463

Cable: BLUESTAR

A,CH**,CM,CS*,E,M

Blue Star Ltd.

15/16-C Wellesley Rd.

PUNE 411 011

Tel: 22775

Cable: BLUE STAR

A

Blue Star Ltd.

2-2-47/1108 Botaram Rd.

SECUNDERABAD 500 003

Tel: 72257

Telex: 0155-459

Cable: BLUEFROST

A,E

Blue Star Ltd.

T.C. 7/693 Poomina

Maruthakuzhi

TRIVANDRUM 695 015

Tel: 65792

Telex: 0884-258

Cable: BLUESTAR

E

Computer Maintenance Corporation Ltd.

115, Sarsajni Devi Road

SECUNDERABAD 500 003

Tel: 310-184, 345-774

Telex: 031-2960

CH**

INDONESIA

BERCA Indonesia P.T.

P.O. Box 4063/41

Jl. Abdul Muis 62

JAKARTA

Tel: 21-373090

Telex: 46748 BERSAL IA

Cable: BERSAL JAKARTA

P

BERCA Indonesia P.T.

P.O. Box 2497/41

Antara Bldg., 17th Floor

Jl. Medan Merdeka Selatan 17

JAKARTA-PUSAT

Tel: 21-341-181

Telex: BERSAL IA

A,CS,E,M

BERCA Indonesia P.T.

P.O. Box 174/SBY.

Jl. Kutei No. 11

SURABAYA

Tel: 66172

Telex: 31146 BERSAL SB

Cable: BERSAL-SURABAYA

A**,E,M,P

IRAQ

Hewlett-Packard Trading S.A.

Service Operation

Al Mansoor City 98/3/7

BAGHDAD

Tel: 551-49-73

Telex: 212-455 HEPAIRAQ IK

CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.

82/83 Lower Leeson Street

DUBLIN 2

Tel: 0001 608800

Telex: 30439

A,CH,CM,CS,E,M,P

Cardiac Services Ltd.

Kilmore Road

Artane

DUBLIN 5

Tel: (01) 351820

Telex: 30439

M

ISRAEL

Eldan Electronic Instrument Ltd.

P.O. Box 1270

JERUSALEM 91000

16, Ohazit St.

JERUSALEM 94467

Tel: 533 221, 533 242

Telex: 25231 AB/PAKRO IL

A,M

Computation and Measurement

Systems (CMS) Ltd.

11 Masad Street

67060

TEL-AVIV

Tel: 388 388

Telex: 33569 MASH IL

CH,CM,CS,E,P

ITALY

Hewlett-Packard Italiana S.p.A.

Traversa 90C

Via Giulio Petroni, 18

I-70124 BARI

Tel: (080) 41-07-44

M,CH

Hewlett-Packard Italiana S.p.A.

Via Martin Luther King, 38/III

I-40132 BOLOGNA

Tel: (051) 402304

Telex: 511630

CH,CS,E,M

Hewlett-Packard Italiana S.p.A.

Via Principe Nicola 43G/C

I-95126 CATANIA

Tel: (095) 37-10-87

Telex: 970291

CH

Hewlett-Packard Italiana S.p.A.

Via G. Di Vittorio 9

I-20093 CERNUSCO SUL

NAVIGLIO

(Milano)

Tel: (02) 923601

Telex: 334632

A,CH,CM,CS,E,M,P

Hewlett-Packard Italiana S.p.A.

Via C. Colombo 49

I-20090 TREZZANO SUL

NAVIGLIO

(Milano)

Tel: (02) 4459041

Telex: 322116

CH,CS

Hewlett-Packard Italiana S.p.A.

Via Nuova San Rocco a

Capodimonte, 62/A

I-80131 NAPOLI

Tel: (081) 7415544

Telex: 710698

A**,CH,CS,E,M

Hewlett-Packard Italiana S.p.A.

Viale G. Modugno 33

I-16156 GENOVA PEGLI

Tel: (010) 68-37-07

Telex: 215238

E,C

Hewlett-Packard Italiana S.p.A.

Via Polizzo 15

I-35128 PADOVA

Tel: (049) 664888

Telex: 430315

A,CH,CS,E,M

Hewlett-Packard Italiana S.p.A.

Viale C. Pavese 340

I-00144 ROMA EUR

Tel: (06) 54831

Telex: 610514

A,CH,CS,E,M,P*

ITALY (Cont'd)

Hewlett-Packard Italiana S.p.A.
Via di Casellina 57/C
I-50018 SCANDICCI-FIRENZE
Tel: (055) 753863
CH,E,M

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 185
I-10144 TORINO
Tel: (011) 74 4044
Telex: 22 1079
A*,CS,CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Bldg, 6F
3-1 Hon Chiba-cho
CHIBA, 280
Tel: 472 25 7701
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg,
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 250
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg,
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg,
614, Higashi-Shiohji-cho
Karasuma-Nishiru
Shiohji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sanno-maru, 1 Chome
MITO, Ibaraki 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Kokubun Bldg, 7-8
Kokubun, 1 Chome, Sendai
MIYAGI, 980
Tel: (0222) 25-1011
Telex:
C,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg,
Meieki-Mitsumi, 2 Chome
Nakamura-ku
NAGAYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,M

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,M,P*

Yokogawa-Hewlett-Packard Ltd.
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Daichi Seimei Bldg,
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, TOKYO 160
Tel: 03-348-4611
CH,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,M,P*

Yokogawa-Hewlett-Packard Ltd.
Daichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishinaguchi Bldg,
30-4 Tsunaya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN
Scientific and Medical Supplies Co.
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21436 SABCO JO
CH,E,M,P

KENYA
ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331855
Telex: 22639
E,M

KOREA
Samsung Hewlett-Packard Co. Ltd.
12 Fl., Kinan Bldg.
San 75-31, Yeoksam-Dong
Kangnam-ku
Yeongdong P.O. Box 72
SEOUL
Tel: 555-7535, 555-5447
Telex: K2784 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaliya Trading & Contracting
P.O. Box 830
SAFAT
Tel: 4249 10, 411726
Telex: 22481 AREEG KT
Cable: WISCUWNT
E,M,A

Photo & Cine Equipment
P.O. Box 270
SAFAT
Tel: 2445111
Telex: 22241 MATIN KT
Cable: MATIN KUWAIT
P

W.J. Towell Computer Services
P.O. Box 75
SAFAT
Tel: 2462640/1
Telex: 38336 FOWELL KT
C

LEBANON

Computer Information Systems
P.O. Box 11-6274

BEIRUT

Tel: 89 40 73
Telex: 42309
C,E,M,P

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
 Blvd de la Woluwe, 100
Woluwe-la
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-468 palobes bru
A,CH,CM,CS,E,M,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Damansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*

Protei Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pandan Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MALTA

Phios Tolado Ltd.
Notabile Rd.

MRIHEL
Tel: 447 47, 455 66
Telex: Media MW 649
E,P,M

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-76-48-00
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,M,P

Hewlett-Packard Mexicana, S.A.
de C.V.
Czda. del Valle
409 Ote. 1° Piso
Colonia del Valle
Municipio de Garza Garcia
66228 MONTERREY, Nuevo LsAON
Tel: 76 42 41
Telex: 0384186 ECOMEX
A

Equipos Cientificos de Occidente, S.A.
Av. Lazaro Cardenas 3540
QUADALAJARA
Tel: 21-66-91
Telex: 0384186 ECOMEX
A

Infograficas y Sistemas del Noroeste, S.A.
Rta. Orizoco #171 Oriente
Cusapacho 2001
Colonia Del Valle
MONTERREY
Tel: 784398, 7612594
A

MOROCCO

Dubona
87 rue Karachi
CASABLANCA
Tel: 3041-82, 3069-38
Telex: 23051, 22822
E

Gerep

2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

Sema-Maroc

Rue Lapebie
CASABLANCA
Tel: 26 29 80
CH,CS, P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KC AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPAC NL
A,CH,CM,CS,E,M,P

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE A/D IJSEL
P.O. Box 41
NL 2909AA CAPELLE A/D IJSEL
Tel: (10) 51-64-44
Telex: 21281 HEPAC NL
A,CH,CS,E

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 3612 LV EINDHOVEN
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: (040) 3260 11
Telex: 51494 hepac nl
A,CH** E,M

SALES & SUPPORT OFFICES

Arranged alphabetically by country

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189

Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPAK Auckland
CH,CS,CM,E,P*

Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443

Courtenay Place, WELLINGTON 3
Tel: 677-199
Cable: HEWPAK Wellington
CH,CS,CM,E,P

Northrop Instruments & Systems Ltd.
366 Kyber Pass Road
P.O. Box 8602

AUCKLAND

Tel: 794-091
Telex: 00605

A,M

Northrop Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 6388

CHRISTCHURCH

Tel: 488-873
Telex: 4203

A,M

Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406

WELLINGTON

Tel: 850-091
Telex: NZ 3380

A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558

N-5033 FYLLINGSDALEN (Bergen)
Tel: 0047/5/16 55 40

Telex: 16621 hpnas n
CH,CS,E,M

Hewlett-Packard Norge A/S
UCOsterndalen 16-18
P.O. Box 34

N-1345 OCUSTERÅS

Tel: 0047/2/17 11 80

Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khimji Ramdas
P.O. Box 19

MUSCAT

Tel: 722255, 745601

Telex: 3289 BROKER MB MUSCAT

P

Suhail & Saud Bahwan

P.O. Box 169

MUSCAT

Tel: 734 201-3

Telex: 3274 BAHWAN MB

E

India LLC

P.O. Box 8678

MUMBAI

Tel: 601695

Telex: 5741 Tawcos On

A,C,M

PAKISTAN

Mushko & Company Ltd.

House No. 16, Street No. 16

Sector F-6/3

ISLAMABAD

Tel: 824545

Cable: FEMUS Islamabad

A,E,M,P*

Mushko & Company Ltd.

Osman Chambers

Abdulrah Haroon Road

KARACHI

0302

Tel: 524131, 524132

Telex: 2894 MUSKO PK

Cable: COOPERATOR Karachi

A,E,M,P*

PANAMA

Electronica Balboa, S.A.

Calle Samuel Lewis, Ed. Alfa

Apartment 4929

PANAMA 5

Tel: 63-6613, 63-6748

Telex: 3483 ELECTRON PG

A,CH,CS,E,M,P

PERU

Ola Electro Médica S.A.

Calle San Mateo 145, San Isidro

Castilla 1030

LIMA 1

Tel: 41-4325, 41-3703

Telex: Pub. Booth 25306

CM,E,M,P

SAMS

Rio De La Plata 305

SAO ISIDRO

Tel: 419828

Telex: 394 20450 PELIBERTAD

P

PHILIPPINES

The Online Advanced Systems

Corporation

Rico House, Amorsolo Cor. Herrera

Street

Legaspi Village, Makati

P.O. Box 1510

Metro MANILA

Tel: 816-38-11 (up to 16)

Telex: 63274 Online PN

A,CH,CS,E,M

Electronic Specialists and

Proponents Inc.

690-B Epifanio de los Santos

Avenue

Quezon CITY

P.O. Box 2849 Manila

Tel: 98-96-81, 98-96-82, 98-96-83

Telex: 40018, 42000 ITT GLOBE MAC-

KAY BOOTH

P

PORTUGAL

Mundiney

Intercambio Mundial de ComAereos

S.A.R.L.

P.O. Box 2761

Av. Antonio Augusto de Aguiar 138

PLISBON

Tel: (19) 58-21-31, 53-21-37

Telex: 16691 munter p

M

Soquimica

Av. da Liberdade, 220-2

1295 LISBOA, Codex

Tel: 56 21 81/2/3

Telex: 13319 SABASA

P

Telectra-Empresa Técnica de

Equipamentos Eléctricos S.A.R.L.

Rua Rodrigo da Fonseca 103

P.O. Box 2531

P-LISBON 1

Tel: (19) 88-60-72

Telex: 12598

CM,E

Rancentro Ltda

R. Costa Cabral 575

4200 PORTO

Tel: 495174/495173

Telex: 26054

CH,CS

PUERTO RICO

Hewlett-Packard Puerto Rico

101 Muñoz Rivera Av

ESU, Calle Ochoa

HATO REY, Puerto Rico 00918

Tel: (809) 754-7800

A,CH,CS,CM,M,E,P

QATAR

Computer Arabia

P.O. Box 2750

DOHA

Tel: 883555

Telex: 4806 CHPARB

P

Nasser Trading & Contracting

P.O. Box 1563

DOHA

Tel: 422170

Telex: 4439 NASSER DH

M

SAUDI ARABIA

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 281

Thuobah

AL-KHOBAR

Tel: 895-1760, 895-1764

Telex: 671 106 HPMEEK SJ

Cable: ELECTA AL-KHOBAR

CH,CS,E,M

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 1228

Redec Plaza, 6th Floor

JEDDAH

Tel: 644 38 48

Telex: 4027 52 FARNAS SJ

Cable: ELECTA JEDDAH

A,CH,CS,CM,E,M,P

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 22015

RIYADH

Tel: 491-87 15, 491-63 87

Telex: 202049 MEERYD SJ

CH,CS,E,M

Abdul Ghani El Ajou

P.O. Box 78

RIYADH

Tel: 40 41 717

Telex: 200 932 EL AJOU

P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)

Pte. Ltd.

#08-00 Incape House

450-2 Alexandra Road

P.O. Box 58 Alexandra Rd. Post

Office

SINGAPORE, 9115

Tel: 631788

Telex: HPSGSO RS 34209

Cable: HEWPAK, Singapore

A,CH,CS,E,MS,P

Dynamar International Ltd.

Unit 05-11Block 6

Kolam Ayer Industrial Estate

SINGAPORE 1334

Tel: 747-6188

Telex: RS 26283

CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 120

Howard Place CAPE PROVINCE 7450

Pine Park Center, Forest Drive, Pine-

lands

CAPE PROVINCE 7405

Tel: 53-7954

Telex: 57-20006

A,CH,CM,E,M,P

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 37099

Overport Drive 92

DURBAN 4067

Tel: 26-4178

Telex: 6-22954

CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.

6 Linton Arcade

511 Cape Road

Linton Grange

PORT ELIZABETH 6001

CH

Tel: 041-301201

Hewlett-Packard So Africa (Pty.) Ltd.

Fountain Center

Kallden Str.

Monument Park

Ext 2

PRETORIA 0105

Tel: 45-5723

Telex: 32163

CH,E

SOUTH AFRICA (Cont'd)

Hewlett-Packard So Africa (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CS,E,M,P

SPAIN

Hewlett-Packard Española S.A.
Calle Intenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbee
A,CH,CS,E,M,P

Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Aibisa II 7B
E-BILBAO 1
Tel: 423.83 06
A,CH,E,M

Hewlett-Packard Española S.A.
C/ta. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
Telex: 23515 HPE
CH,CS,M

Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/No
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72993
A,CS,M,P

Hewlett-Packard Española S.A.
C/Isabel La Católica, 8
E-VALENCIA
Tel: 0034/6/351 59 44
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvägen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga office)
CH

Hewlett-Packard Sverige AB
Östra Tullgatan 3
S-21128 MALMÖ
Tel: (040) 70270
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Västra Vintergatan 9
S-76344 ÖREBRO
Tel: (18) 10-48-90
Telex: (854) 17886 (via Spånga office)
CH

Hewlett-Packard Sverige AB
Skålhölgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
Teletex: (08) 7527781
A,CH,CM,CS,E,M,P

Hewlett-Packard Sverige AB
Frotällgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarendstrasse 12
CH-4050 BASEL
Tel: (61) 33-59-20
A

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 2
Tel: (0041) 22-83-11-11
Telex: 27233 HPAG CH
CH,CM,CS

Hewlett-Packard (Schweiz) AG
Alimend 2
CH-8987 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,M,P

SYRIA

General Electronic Inc.
Nuri Basha Ahmad Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 32-24-87
Telex: 411 215
Cable: ELECTROBOR DAMASCUS
E

Middle East Electronics
P.O. Box 2308
Abu Rumanneh

DAMASCUS

Tel: 32 42 92
Telex: 411 304
M

TAIWAN

Hewlett-Packard Taiwan
Kaohsiung Office
115F 456, Chung Hsiao 1st Road
KAOSHIUNG
Tel: (07) 2412316
CH,CS,E

Hewlett-Packard Taiwan
8th Floor Hewlett-Packard Building
307 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P

Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3949 101
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Falpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Sinowco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M

Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 67689-BEQUIPT TH
Cable: BUSIGUIPT Bangkok
P

TOGO

Societe Africaine De
Promotion
B.P. 12271
LOME
Tel: 21-62-88
Telex: 5304

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAlister Street &
Eastern Main Road, Laventille
P.O. Box 732

PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN
CM,E,M,P

Computer and Controls Ltd.
P.O. Box 51
86 Independence Square

PORT-OF-SPAIN
Tel: 623-4472
Telex: 3030 POSTLX WG
P

TUNISIA

Tunisite Electronique
21 Avenue de la Liberte

TUNIS

Tel: 280-144
CH,CS,E,P
Carisma
1 ter. Av. de Carthage
ANKARA
Tel: 319175
Telex: 42321 KTX TP
Cable: EMATRADE ANKARA
M

TURKEY

E.M.A
Medina Eldem Sokak No. 4/16
Yanisahir
ANKARA
Tel: 319175
Telex: 42321 KTX TP
Cable: EMATRADE ANKARA
M

Kurt & Kurt A.S.
Mithatpaşa Caddesi No. 75
Kat 4 Kızılay

ANKARA
Tel: 318675/6/7/6
Telex: 42490 MESR TR
A

Sarıya Bilgisayar Sistemleri A.Ş.

Büyükdere Caddesi 103/6
Gayretiye
ISTANBUL
Tel: 1673180
Telex: 26345 SANI TR
C,P

Teksim Company Ltd.
Iran Caddesi No. 7
Kavaklıdere
ANKARA
Tel: 278800
Telex: 42155 TKNM TR
E,CM

UNITED ARAB EMIRATES

Emirat Ltd.
P.O. Box 1641
SHARJAH,
Tel: 591181
Telex: 08136 EMITAC EM
Cable: EMITAC SHARJAH
E,CM,P,A

Emilat Ltd.
P.O. Box 2711
ABU DHABI,
Tel: 820419-20
Cable: EMITACH ABUDHABI

Emilat Ltd.

P.O. Box 6391
DUBAI,
Tel: 377951

Emilat Ltd.
P.O. Box 473
RAS AL KHAIMAH,
Tel: 28193, 21270

UNITED KINGDOM**GREAT BRITAIN**

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: 061 928 6422
Telex: 868068
A,CH,CS,E,M,M,P

Hewlett-Packard Ltd.
Miller House
The Ring, **BRACKNELL**
Berkshire RG12 1XH
Tel: 44344 424898
Telex: 848733
E

Hewlett-Packard Ltd.
Elstree House, Elstree Way
BOREHAMWOOD, Herts WD6 1SG
Tel: 01 207 5900
Telex: 895216
E,CH,CS,P

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS6 2BN
Tel: 0272 736806
Telex: 444302
CH,CS,E,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Bridewell House
Bridewell Place
LONDON EC4V 6BS
Tel: 01 583 8565
Telex: 298 163
CH,CS,P

Hewlett-Packard Ltd.
Fountain House
267-263 High Street
LONDON COLNEY
Herts. AL2 1HA, St. Albans
Tel: 0727 24400
Telex: 1-8692716
CH,CS

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON, West Yorkshire WF6 1RN
Tel: 0924 993589
Telex: 557355
CH,CS,P

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 0737 89655
Telex: 947234
CH,CS,E,P

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, SOLIHULL, West Midlands
B90 4BL
Tel: 021 745 8800
Telex: 339 105
CH,CS,E,P

Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON
Hampshire SO3 3DD
Tel: 04218 6767
Telex: 477138
CH,CS,P

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847 178
A,CH,CS,E,M,P

Hewlett-Packard Ltd.
Nine Mile Ride
Eastthampstead, WOKINGHAM
Berkshire, RG11 3LL
Tel: 0544 773 100
Telex: 848605
CH,CS,E,P

IRELAND

NORTHERN IRELAND

Hewlett-Packard Ltd.
Cardiac Services Building
95A Finaghy Road South
BELFAST BT10 0BY
Tel: 0232 625-566
Telex: 747826
CH,CS

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian. EH30 9TG
Tel: 031 331 1188
Telex: 72682
CH,CM,CS,E,M,P

UNITED STATES

Alabama

Hewlett-Packard Co
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-8802
C,CH,CS,P*

Hewlett-Packard Co.
420 Wynn Drive
P.O. Box 7760
HUNTSVILLE, AL 35807
Tel: (205) 830-2000

C,CH,CM,CS,E,M*
Alaska
Hewlett-Packard Co.
3601 C St., Suite 1234
ANCHORAGE, AK 99503
Tel: (907) 563-8865
CH,CS,E

Arizona

Hewlett-Packard Co
8880 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,M

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 573-7400
CH,E,M**

Hewlett-Packard Co.
99 South Hill Dr.
BRISBANE, CA 94005
Tel: (415) 930-2500
CH,CS

Hewlett-Packard Co.
P.O. Box 7830 (93347)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-3652
CH,CS,M

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-8700
CH,CM,CS,E,M

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Blvd.
LAWNDALE, CA 90260
P.O. Box 32105
LOS ANGELES, CA 90009
Tel: (213) 843-7500
Telex: 910-325-6808
CH,CM,CS,M

Hewlett-Packard Co
3155 Porter Drive
PALO ALTO, CA 94304
Tel: (415) 957-8000
CH,CS,E

Hewlett-Packard Co
4244 So. Market Court, Suite A
P.O. Box 15976
SACRAMENTO, CA 95813
Tel: (916) 929-7222

A*,CH,CS,E,M
Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92123
Tel: (619) 279-3200
CH,CM,CS,E,M

Hewlett-Packard Co.
2335 Camino Ramon 'C'
SAN RAMON, CA 94583
Tel: (415) 698-6900
CH,CS

Hewlett-Packard Co
3005 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,M

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-6800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,CH,CM,CS,E,M

Connecticut

Et. Dec. 1, 1984
Hewlett-Packard Co.
500 Sylvan Av.
BRIDGEPORT, CT 06606
Tel: (203) 371-6454
CH,CS,E

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,M

Florida

Hewlett-Packard Co.
2901 N.W. 82nd Street
P.O. Box 242 10
FORT LAUDERDALE, FL 33307
Tel: (805) 973-2600
CH,CS,E,M,P*

Hewlett-Packard Co.
4085 Woodloch Drive, Suite 132
JACKSONVILLE, FL 32207
Tel: (904) 398-0663
C*,CH*,M**

Hewlett-Packard Co.
6177 Lake Ellenor Drive
P.O. Box 139 10
ORLANDO, FL 32858
Tel: (305) 859-2900

A,CH,CM,CS,E,P*
Hewlett-Packard Co.
4709 Bayview Blvd.
Building 5
PENSACOLA, FL 32505
Tel: (904) 476-8422

A,C,CH,CM,CS,M
Hewlett-Packard Co.
5550 Idlewild, #150
P.O. Box 15200
TAMPA, FL 33684
Tel: (813) 884-3282

A*,C,CH,CS,E*,M*,P*

Georgia

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500
Telex: 610-766-4990
A,C,CH,CM,CS,E,M,P*

Hawaii

Hewlett-Packard Co.
Kawaliahau Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,M

Illinois

Hewlett-Packard Co.
304 Eldorado Road
P.O. Box 1607
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,M**

Hewlett-Packard Co.
525 W. Monroe, #1300
CHICAGO, IL 60606
Tel: (312) 930-0010
CH,CS

Hewlett-Packard Co.
1900 Oneil
NAPERVILLE, IL 60566
Tel: (312) 357-8800
CH*,CS

Hewlett-Packard Co.
5201 Tolview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,M

Indiana

Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
A,CH,CM,CS,E,M

Iowa

Hewlett-Packard Co.
4070 22nd Av. SW
CEDAR RAPIDS, IA 52404
Tel: (319) 390-4250
CH,CS,E,M

UNITED STATES (Cont'd)

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
A**, CH, M**

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road, #100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A, CH, CS, M

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70065
Tel: (504) 467-4100
A, C, CH, E, M, P*

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A, CH, CM, CS, E, M

Hewlett-Packard Co.
2 Choike Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 946-6370
A, CH, CM, CS, E, M

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A, C, CH, CS, CM, E, M, P*
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
CH, CS, E

Michigan

Hewlett-Packard Co.
4325 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH, CS, M

Hewlett-Packard Co.
38550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
A, CH, CS, E, M

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
CH, CS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A, CH, CM, CS, E, M

Missouri

Hewlett-Packard Co.
1001 E. 101st Terrace
KANSAS CITY, MO 64131
Tel: (816) 941-0411
A, CH, CM, CS, E, M

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A, CH, CS, E, M

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM, M

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A, CH, CM, CS, E, M
Hewlett-Packard Co.
20 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A, CH, CM, CS, E

New Mexico

Hewlett-Packard Co.
11300 Lomas Blvd., N.E.
P.O. Box 11634
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH, CS, E, M

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A, CH, E, M
Hewlett-Packard Co.
9500 Main Street
P.O. Box AC
CLARENCE, NY 14031
Tel: (716) 759-8621
CH, CS, E

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
A, CH, CM, CS, E, M

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A, CH, CM, CS, E, M

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
CH, CS, M*

Hewlett-Packard Co.
15 Myers Corner Rd.
WAPPINGER FALLS, NY 12590
CM, E

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
CM, CH, CS, E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-6300
A, CH, CM, CS, E, M

North Carolina

Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6600
C, CH, CM, CS, E, M, P*
Hewlett-Packard Co.
9600-H Southern Pine Blvd.
CHARLOTTE, NC 28210
Tel: (704) 527-8780
CH*, CS*

Hewlett-Packard Co.
5605 Roanne Way
P.O. Box 26500
GREENSBORO, NC 27420
Tel: (919) 852-1800
A, C, CH, CM, CS, E, M, P*

Ohio

Hewlett-Packard Co.
9020 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH, CS, M

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A, CH, CM, CS, E, M

Hewlett-Packard Co.
980 Springboro Pike
MIAMISBURG, OH 45343
Tel: (513) 859-8202
A, CH, CM, E*, M

Hewlett-Packard Co.
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 436-1041
CH, CM, CS, E*

Oklahoma

Hewlett-Packard Co.
304 N. Meridian, Suite A
P.O. Box 75609
OKLAHOMA CITY, OK 73147
Tel: (405) 946-9499
C, CH, CS, E*, M

Hewlett-Packard Co.
2840 S. 103rd E. Ave., #100
P.O. Box 35747
TULSA, OK 74153
Tel: (918) 665-3300
A**, C, CH, CS, M*, E, P*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
P.O. Box 328
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A, CH, CS, E*, M

Pennsylvania

Hewlett-Packard Co.
50 Dorchester Rd.
P.O. Box 6080
HARRISBURG, PA 17111
Tel: (717) 657-5900
C

Hewlett-Packard Co.
111 Zela Drive
PITTSBURGH, PA 15238
Tel: (412) 762-0400
A, CH, CS, E, M

Hewlett-Packard Co.
2750 Monroe Boulevard
P.O. Box 713
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A, CH, CM, CS, E, M

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
P.O. Box 21708
COLUMBIA, SC 29221
Tel: (803) 732-0400
A, C, CH, CS, M

Hewlett-Packard Co.
100 Executive Cntr. Dr.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 297-4120
C

Tennessee

Hewlett-Packard Co.
One Energy Cntr. #200
Mississippi Pkwy.
P.O. Box 22490
KNOXVILLE, TN 37933
Tel: (615) 955-4747
A, C, CH, CS, M

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A, C, M

Hewlett-Packard Co.
220 Great Circle Road, Suite 116
NASHVILLE, TN 37228
Tel: (615) 255-1271
C, M, P*

Texas

Hewlett-Packard Co.
11002-B Metric Boulevard
AUSTIN, TX 78758
Tel: (512) 836-6771
C, M, E, P*

Hewlett-Packard Co.
5700 Cromo Dr
P.O. Box 12903
EL PASO, TX 79913
Tel: (915) 833-4400
CH, E*, M**

SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

Hewlett-Packard Co.
3952 Sand Shell St
FORT WORTH, TX 76137
Tel: (817) 232-9500
A,C,H,E,M

Hewlett-Packard Co.
10535 Harwin Drive
P.O. Box 42816
HOUSTON, TX 77042
Tel: (713) 776-6400
A,C,H,CS,E,M,P*

Hewlett-Packard Co.
511 W. John W. Carpenter Fwy.
Royal Tech. Center #100
IRVINE, TX 75062
Tel: (214) 556-1950
C,CH,CS,E

Hewlett-Packard Co.
930 E. Campbell Rd.
P.O. Box 83/1270
RICHARDSON, TX 75083-1270
Tel: (214) 231-6101
A,C,H,CM,CS,E,M,P*

Hewlett-Packard Co.
1020 Central Parkway South
P.O. Box 32593
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
A,C,H,CS,E,M,P*

Utah

Hewlett-Packard Co.
3530 W. 2100 South
P.O. Box 26626
SALT LAKE CITY, UT 84126
Tel: (801) 974-1700
A,CH,CS,E,M

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
P.O. Box 9669
RICHMOND, VA 23228
Tel: (804) 747-7750
A,C,H,CS,E,M,P*

Washington

Hewlett-Packard Co.
15815 S. E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,M

Hewlett-Packard Co.
708 North Argonne Road
P.O. Box 3608
SPOKANE, WA 99220-3608
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
4654 MacCorkie Ave.
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,M

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr
BROOKFIELD, WI 53005
Tel: (414) 784-8806
A,CH,CS,E*,M

URUGUAY

Pablo Ferrando S.A.C. e I.
275 N. Corporate Dr
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2666
Telex: Public Booth 901
A,CM,E,M

Miti Computadores, Ltda
Avda. del Libertador Brig
Gral Lavalleja 2071
Local 007

MONTEVIDEO

Tel: 28-55-22
Telex: 901 F BOOTH UY
P
Olympia de Uruguay S.A.
Máquinas de Oficina
Avda. del Libertador 1997
Casilla de Correo 6644

MONTEVIDEO

Tel: 91 1809, 98 3807
Telex: 6342 OROU UY
P

VENEZUELA

Hewlett-Packard de Venezuela C.A.
SRA Transversal Los Ruices Norte
Edificio Segre 1, 2 & 3
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 251046 HEWPACK
A,CH,CS,E,M,P

Hewlett-Packard de Venezuela C.A.
Residencias Tía Betty Local 1
Avenida 3 y con calle 75
MARACAIBO, Estado Zulia
Apartado 2648
Tel: (061) 75601-75805-75806-
80304
Telex: 62464 HPMAR
C,E*

Hewlett-Packard de Venezuela C.A.
Urb. Lomas de Este
Torre Treboi — Piso 11
VALENCIA, Estado Carabobo
Apartado 3347
Tel: (041) 322992/223024
CH,CS,P

Albis Venezolana S.R.L.
Av. Las Marías, Ota Aliz,
El Padregal
Apartado 81025
CARACAS 10604
Tel: 747864, 742148
Telex: 24009 ALBIS VC
A

Tecnologica Medica del Caribe, C.A.
Multicentro Empresarial del Este
Ave. Libertador
Edif. Libertador
Núcleo "C" - Oficina 51-52
CARACAS
Tel: 338887/333780
M

CUBA

Cientifica Zulia C.A.
Calle 70, Los Olivos
No. 65-96

APARTADO 1843

MARACAIBO
Tel: 54-64-37, 54-63-85, 54-64-94
Telex: 62144
A

YUGOSLAVIA

Do Hermes
General Zdanova 4
TELEX: YU-11000 BEOGRAD
A,CH,E,P

Hermes

Titova 50
TELEX: YU-61000 LJUBLJANA
CH,CS,E,M,P

Elektrotehna

Titova 51
TELEX: YU-61000 LJUBLJANA
CM

ZAMBIA

R.J. Tibury (Zambia) Ltd.
P.O. Box 32792

LUSAKA

Tel: 215590
E

ZIMBABWE







Field Technical Sales
45 Kelvin Road, North
P.B. 3458

SALISBURY

Tel: 705 231
Telex: 4-122 RH
E,P

August 1984

HP distributors are printed in italics.

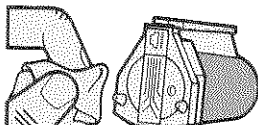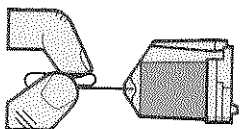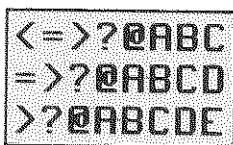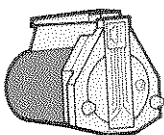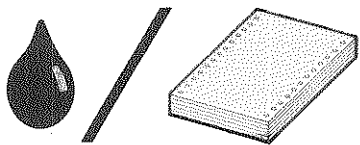



The ink in the print head cartridge contains diethylene glycol which is HARMFUL IF SWALLOWED. Keep new or used cartridges OUT OF THE REACH OF CHILDREN.

Die Tinte der Druckkopfpatrone enthält Diäthylen Glycol. EINNAHME IST SCHADLICH! Bewahren Sie deshalb die Druckkopfpatronen ÄUßERHALB DER REICHWEITE VON KINDERN auf.

L'encre de la cartouche destinée à tête d'impression contient du glycol-diéthylène dont L'ABSORPTION EST DANGEREUSE. Conservez les cartouches neuves ou usagées HORS DE LA PORTEE DES ENFANTS.

La tinta que va en el interior de la cabeza impresora contiene dietilenglicol, el cual puede ser dañino si es ingerido. Mantenga las cabezas nuevas o usadas fuera del alcance de los niños.


L'inchioistro nella cartuccia della testina di stampa contiene dietilen-glicole, una sostanza molto pericolosa se ingerita. Tenete le cartucce, nuove o usate, fuori dalla portata dei bambini.

De inkt in de inktpatroon bevat diethylene glycol, dat schadelijk is bij inwendig gebruik. NIEUWE OF GEBRUIKTE PATRONEN MOETEN BUITEN HET BEREIK VAN KINDEREN WORDEN GEHOUDEN.

Blækket i skrivehoved-beholderen indeholder diethylene glycol, hvilket er farligt at indtage. Opbevar brugte og ubrugte beholdere uden for børns rækkevidde.

Bläcket i skrivhuvudets behållare innehåller dietylen glykol som är farligt att förtära. Förvara dessa behållare utom räckhåll för barn.

Kirjoitinpääyksikön muste sisältää dietyleni glykolia, joka on haitallista nautittuna. Pidä uudet tai käytetyt kirjoitinpääyksiköt POISSA LASTEN ULOTTUVILTA.

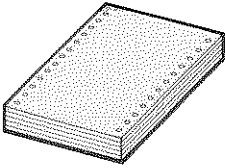

Use Hewlett-Packard ink jet paper for best print quality.

Benutzen Sie das ThinkJet-Papier von Hewlett-Packard, um eine hochwertige Druckqualität zu erreichen.

Pour obtenir une meilleure qualité d'impression, utilisez le papier spécial Hewlett-Packard pour imprimante à jet d'encre.

Use el papel especial de Hewlett-Packard para una mayor calidad de impresión.

Per una migliore qualità di stampa usate la carta speciale della Hewlett-Packard per la thinkjet.



Gebruik Hewlett-Packard ThinkJet papier voor het beste afdrukresultaat.





Anvend Hewlett-Packard ThinkJet papir for at opnå den bedste skrivekvalitet.







Bruk Hewlett-Packard's spesielle Thinkjet-papir for å oppnå best skrivekvalitet.

Hewlett-Packard speciella ThinkJet papper använd för bästa resultat vid utskrift.

Käytä Hewlett-Packard "THINKJET"-paperia parhaan kirjoituslaadun saavuttamiseksi.

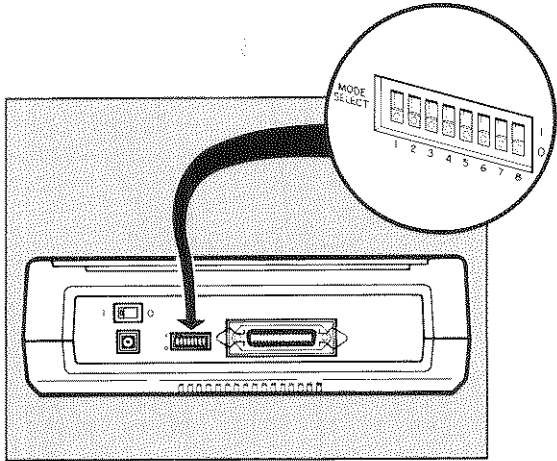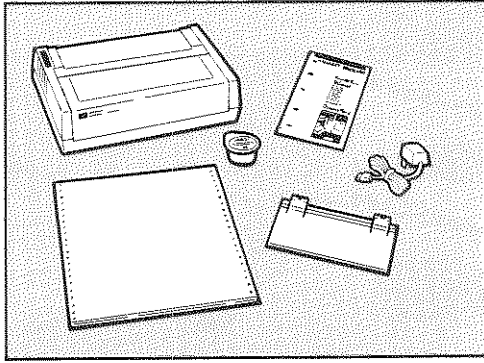

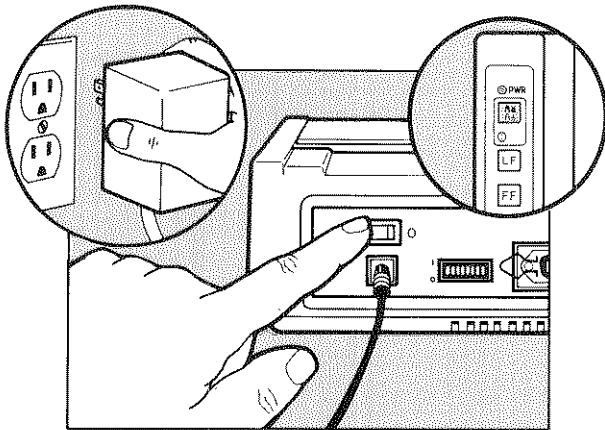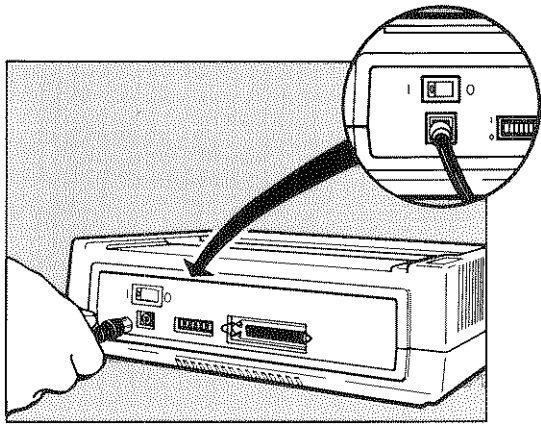

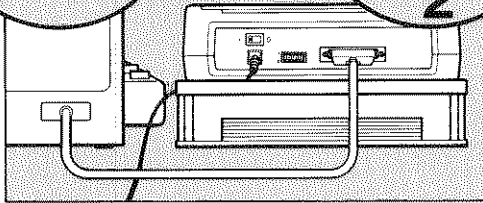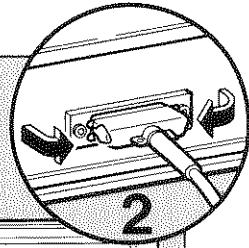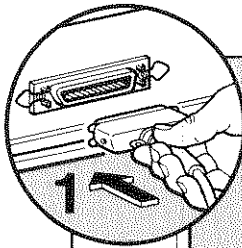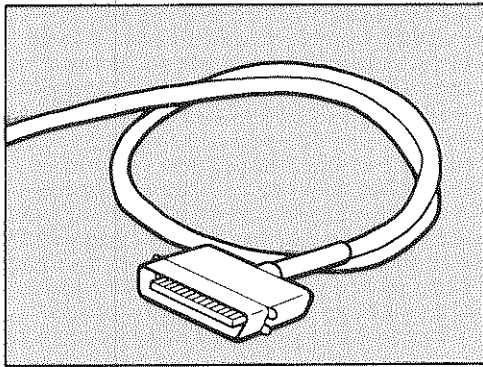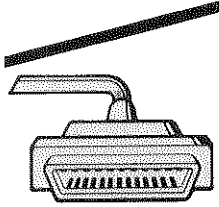



MODE SELECT SWITCHES

Wahl der betriebsart

Commutateur de selection de mode

Conmutadores de selecci3n de modos

Selettori predisposizione modo operativo


Modus keuzeschakelaar

Status-kontaktsæt

Modus brytere

Funktionsval

Kirjoitintyyppin valintakytkimet

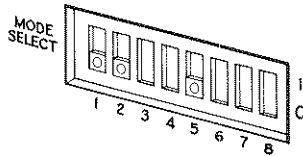


HEWLETT-PACKARD

HP 150

HP SERIES 80


HP SERIES 100

HP SERIES 200

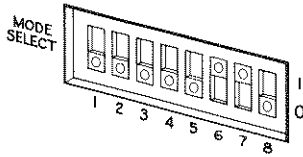

IBM PC

IBM PCXT

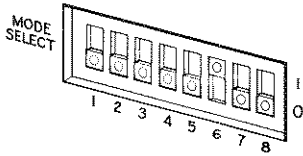

APPLE II

APPLE IIe



PERFORATION SKIP MODE (YES)

Automatischer vorschub vor der perforation
(ja)

Mode saut de perforation (oui)

Modo salto de línea perforada (si)

Margine superiore e inferiore della pagina (si)



Perforatie sprong modus

Spring over perforering (ja)

Automatisk linjeskift (ja)

Skrivning över pappersskarv (ja)

Perforoinnin ylitys (kyllä)

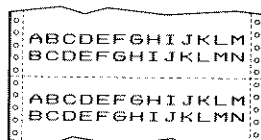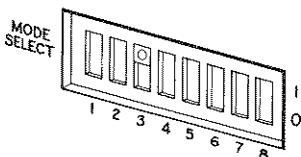

PERFORATION SKIP MODE (NO)

Automatischer vorschub vor der perforation
(nein)

Mode saut de perforation (non)

Modo salto de línea perforada (no)

Margine superiore e inferiore della pagina
(no)


Perforatie sprong modus

Spring over perforering (nej)

Automatisk linjeskift (nei)







Skrivning över pappersskarv (nej)

Perforoinnin ylitys (ei)

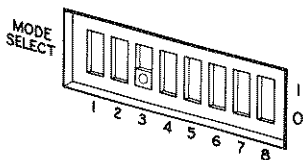



PAGE LENGTH SETTING
Einstellen der seitenlänge
Definition de la longueur de page
Fijación de la longitud de página
Dimensioni lunghezza pagina
Instelling papierlengte
Sidelængdeindstilling
Bestemmelse av arklængde
Val av papperslængde
Sivun pituuden asetus

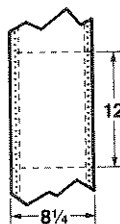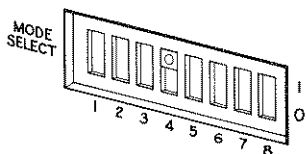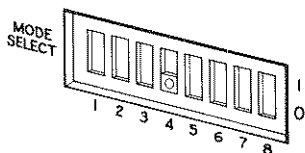



CHARACTER SELECT SWITCHES

Wahl des Zeichensatzes

Commutateur de sélection de caractères

Conmutadores de selección de caracteres

Interruttori selezione caratteri


Tekenset keuzeschakelaar

Tegnsætsindstilling


Brytere for valg av tegnsett

Val av teckenuppsättning


Merkkivalikoiman valintakytkimet

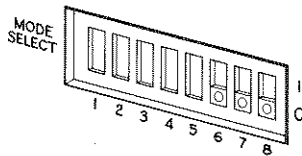


ROMAN-8

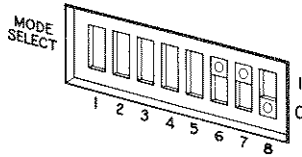


IBM-8

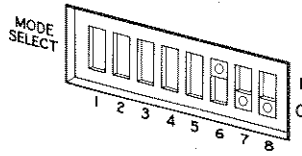

USASCII

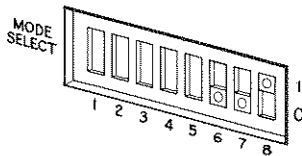

FRENCH



CHARACTER SELECT SWITCHES

Wahl des Zeichensatzes

Commutateur de selection de caracteres

Conmutadores de selección de caracteres

Interruttori selezione caratteri


Tekenset keuzeschakelaar

Tegnsætsindstilling


Brytere for valg av tegnsett

Val av teckenupsättning


Merkkivalikoiman valintakytkimet

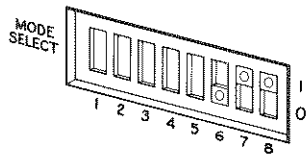


UK

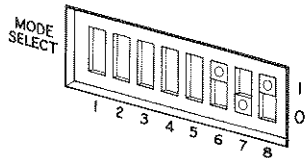





GERMAN




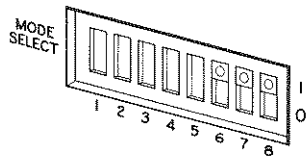






SPANISH




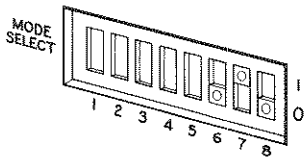






SWEDISH

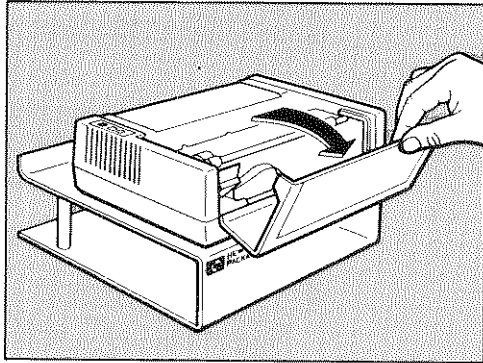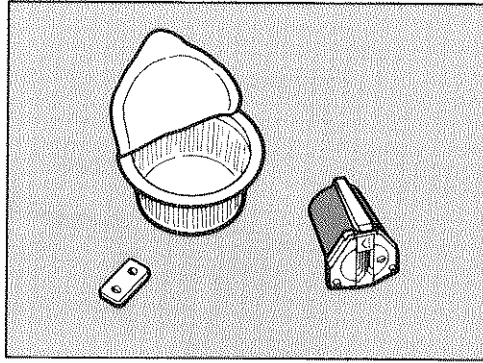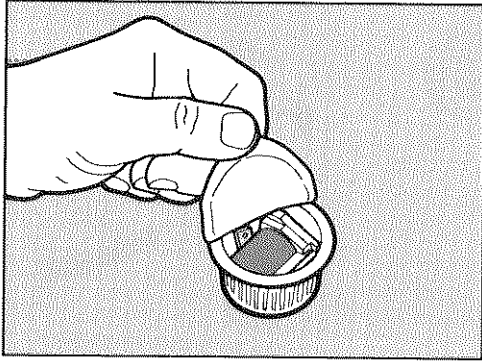



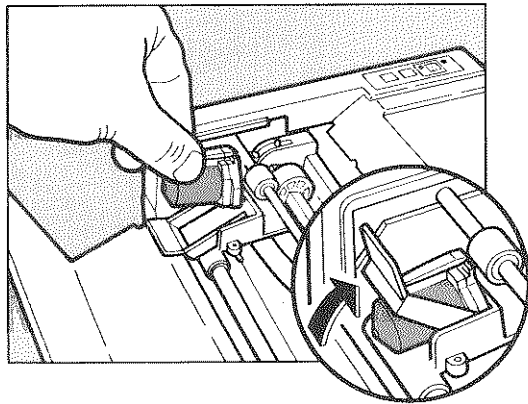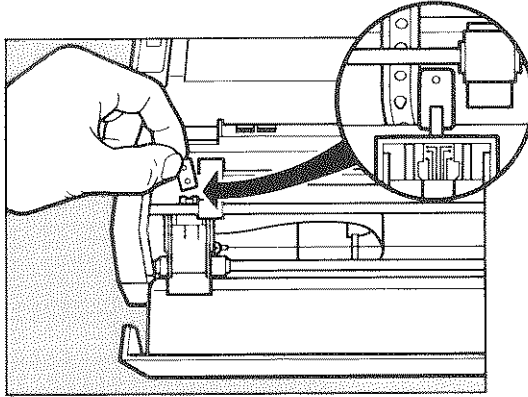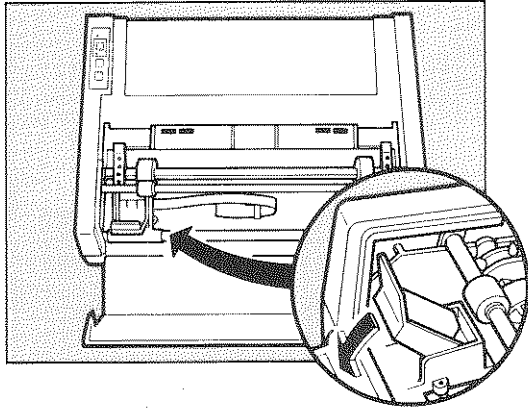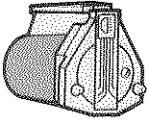


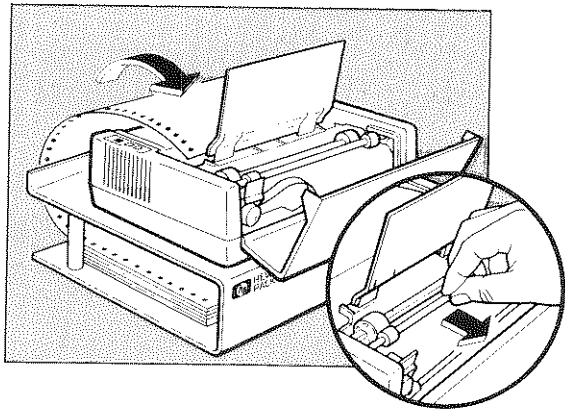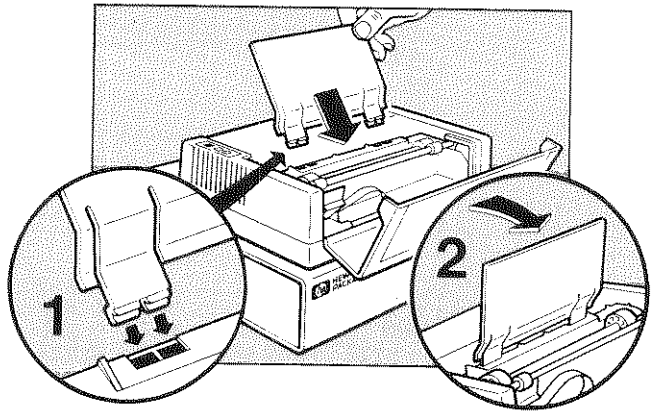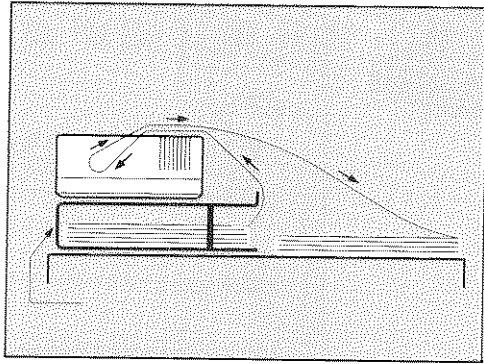

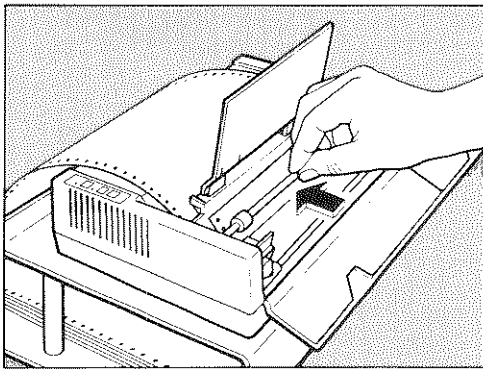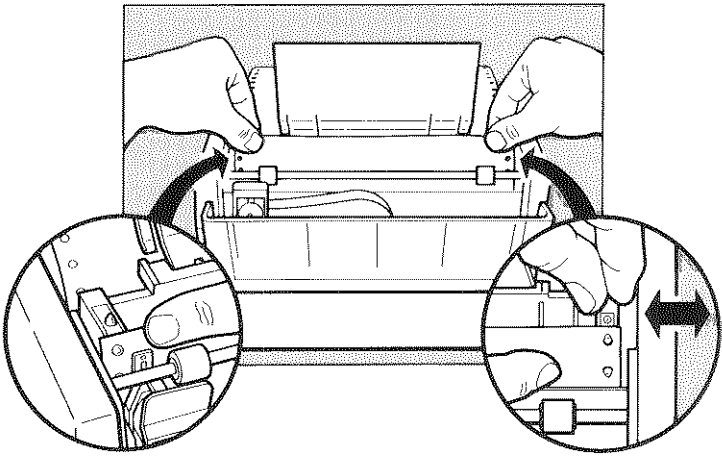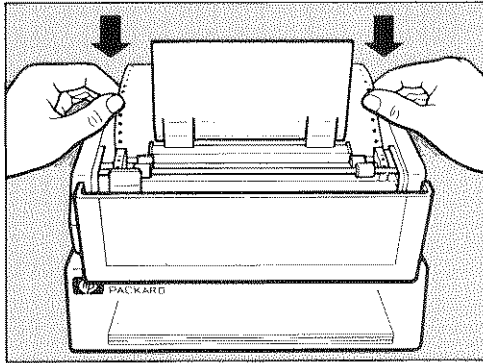

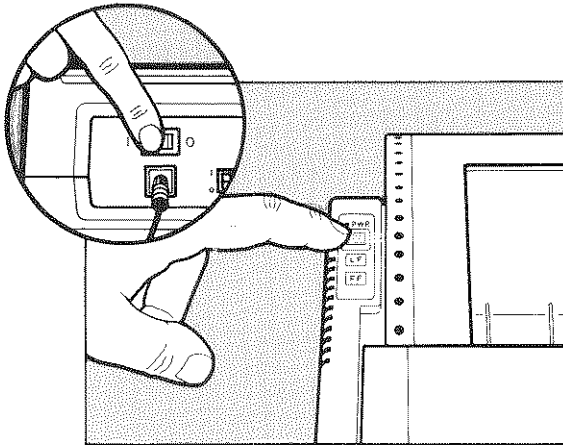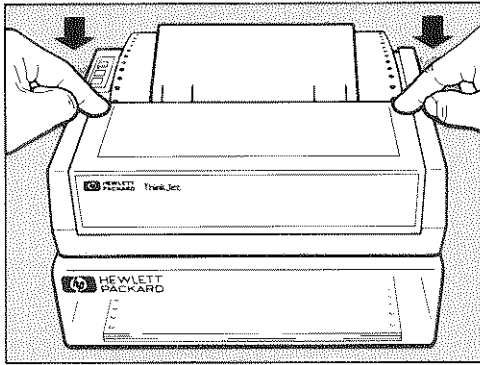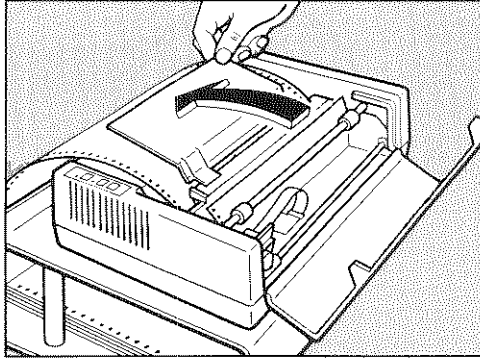

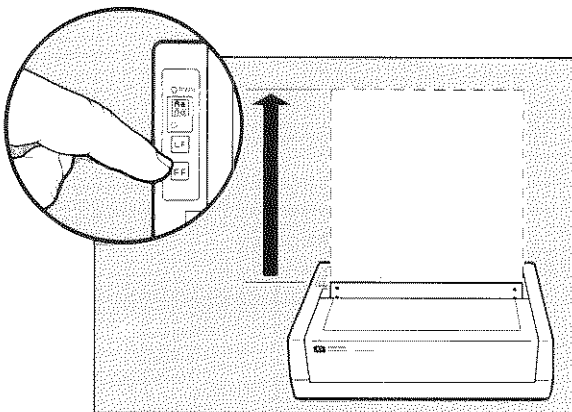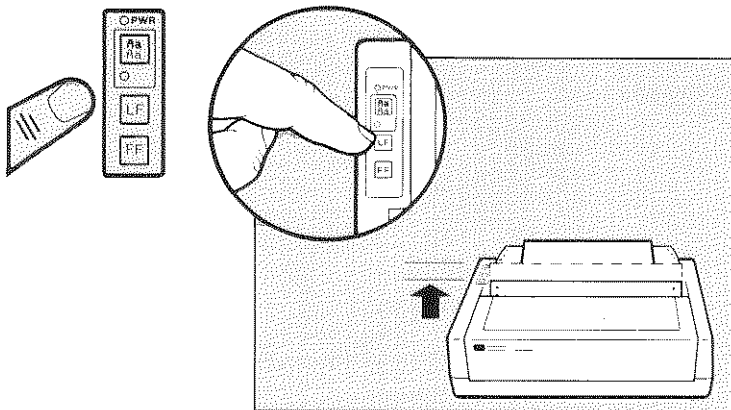

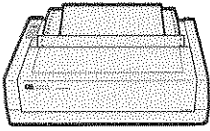

Top of form is set to the current line each time the printer is turned on or the blue button is pushed.

Seitenvorschub wird immer auf die aktuelle Zeile gesetzt, wenn der Drucker eingeschaltet oder der blaue Knopf gedrückt wird.

L'imprimante se positionne en HAUT DE PAGE sur la ligne en cours à chaque remise en marche, ou à chaque fois que vous pressez la touche bleue.

El límite superior del formato se fija en la línea en que se encuentra la cabeza cada vez que se enciende la impresora o se oprime el botón azul.

L'inizio della pagina e' fissato alla linea corrente ogni volta che la stampante viene accesa o il pulsante blu viene premuto.


De bladzijde bovenkant wordt ingesteld op de huidige lijn, waar de printkop staat, iedere keer wanneer de printer aangezet wordt of wanneer de blauwe knop wordt ingedrukt.





Skrivehovedet vil være i startposition (d.v.s. dem linje, hvor shrivehovedet er i postion vil blive toppen of papiret) hver gang skriveren tandes eller hver gang der trykkes på den blå tast.





Når skriveren slås på eller den blå knappen trykkes inn, vil skriveren være innstilt i skriveposisjon.





Skrivhuvudets startpunkt ("Top Of Form") i förhållande till papperet bestäms när skrivaren slås på eller när den blå knappen trycks ned.





Sivun yläreuna asettuu aina sen hetkiselle riville, kun virta kytketään päälle tai kun painetaan sinistä painiketta.



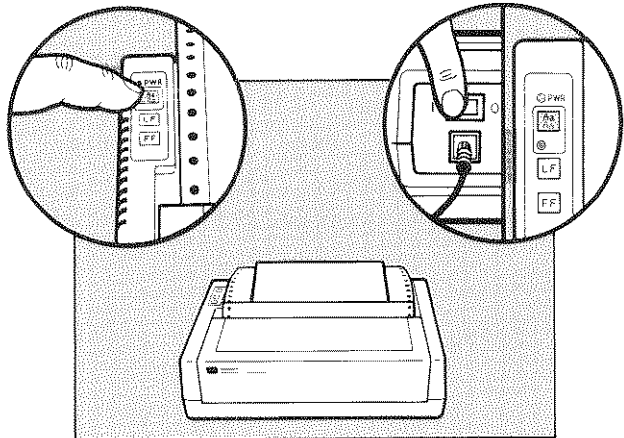


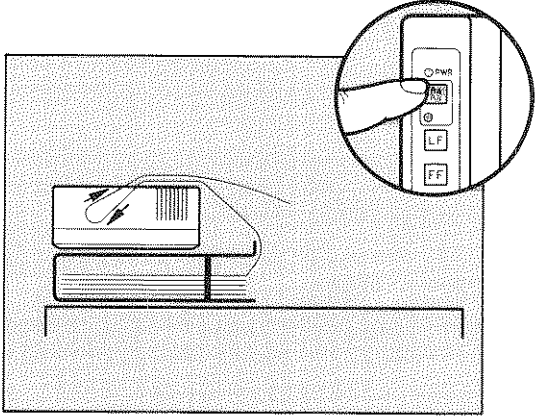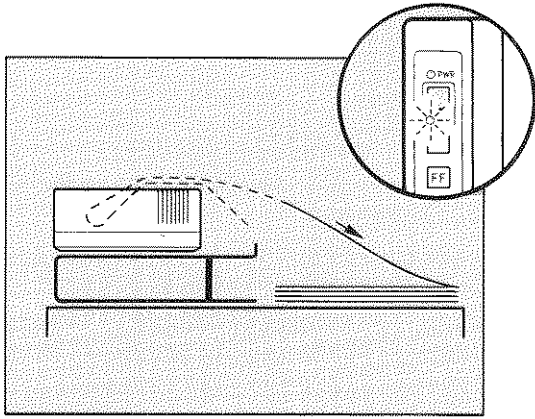


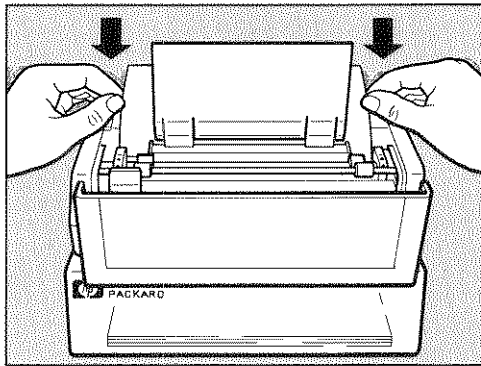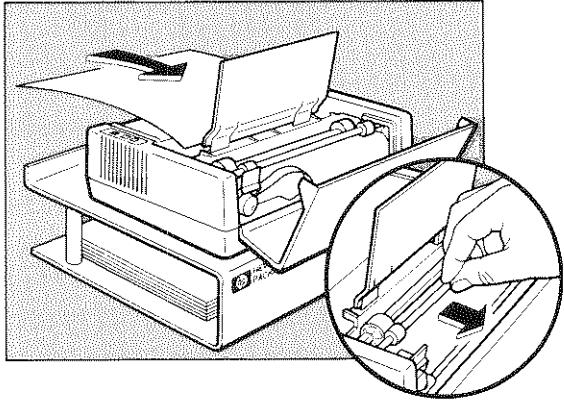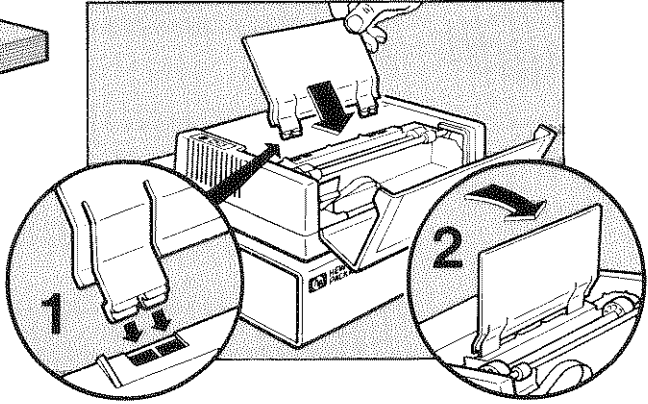

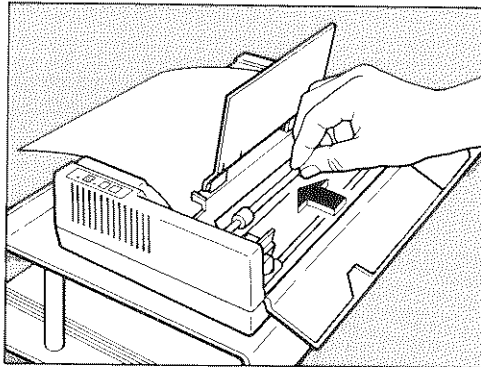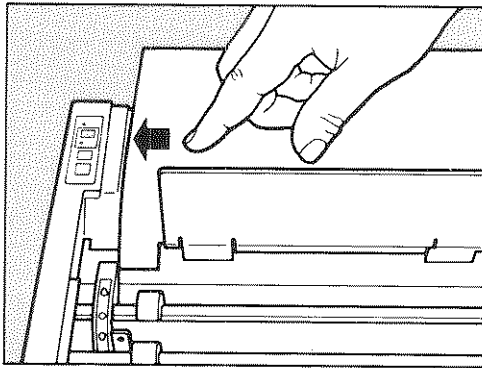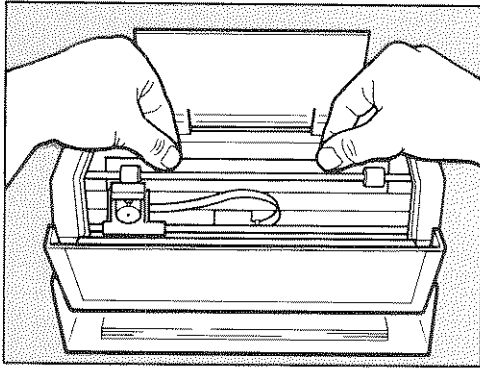

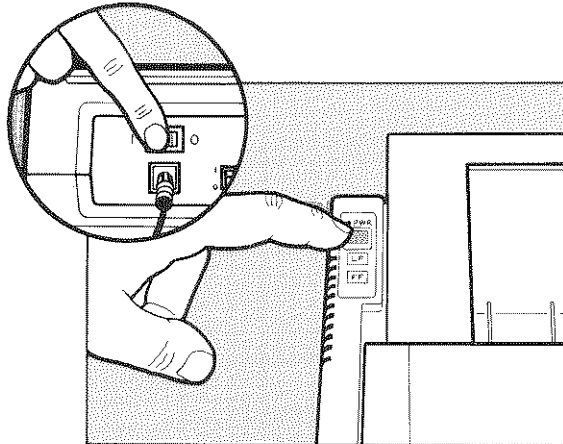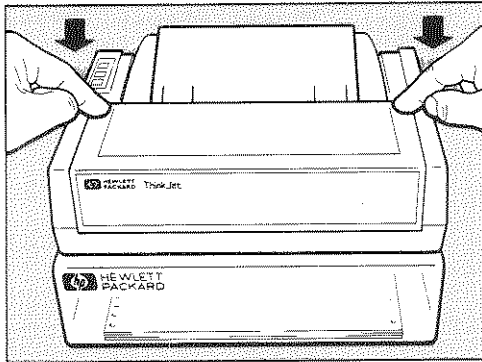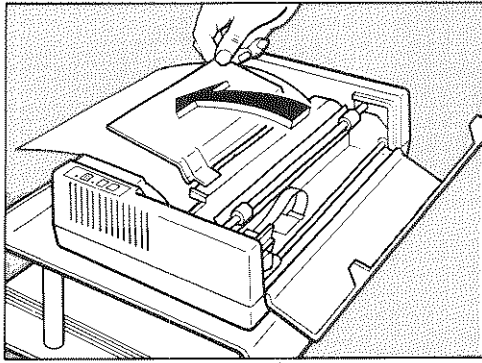

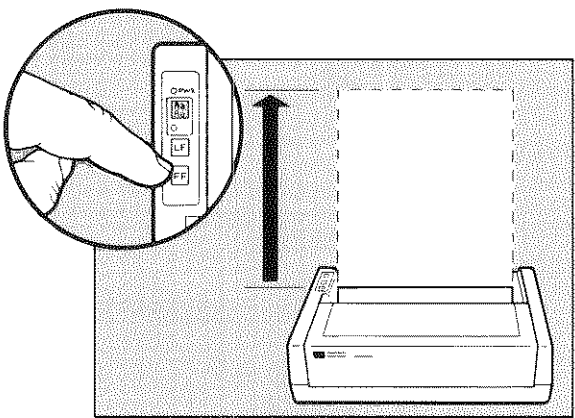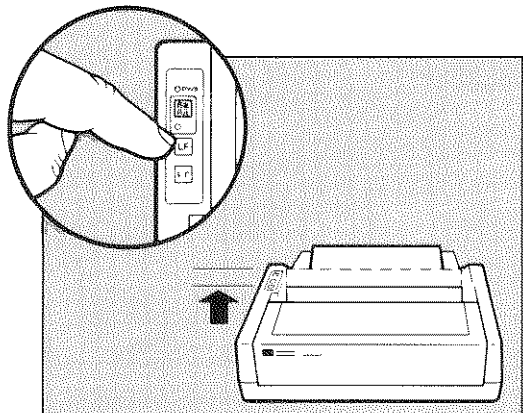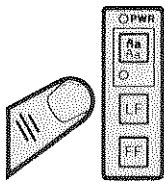

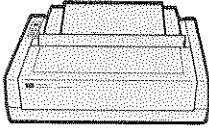

Top of form is set to the current line each time the printer is turned on or the blue button is pushed.

Seitenvorschub wird immer auf die aktuelle Zeile gesetzt, wenn der Drucker eingeschaltet oder der blaue Knopf gedrückt wird.

L'imprimante se positionne en HAUT DE PAGE sur la ligne en cours à chaque remise en marche, ou à chaque fois que vous pressez la touche bleue.

El límite superior del formato se fija en la línea en que se encuentra la cabeza cada vez que se enciende la impresora o se oprime el botón azul.

L'inizio della pagina é fissato alla linea corrente ogni volta che la stampante viene accesa o il pulsante blu viene premuto.


De bladzijde bovenkant wordt ingesteld op de huidige lijn, waar de printkop staat, iedere keer wanneer de printer aangezet wordt of wanneer de blauwe knop wordt ingedrukt.

Skrivehovedet vil være i startposition (d. v. s. den linie, hvor skrivehovedet nu befinder sig vil blive toppen af papiret) hver gang skriveren tændes eller hver gang der trykkes på den blå tast.


Når skriveren slås på eller den blå knappen trykkes inn, vil skriveren være innstilt i skriveposisjon.

Skrivhuvudets startpunkt ("Top Of Form") i förhållande till papperet bestäms när skrivaren slås på eller när den blå knappen trycks ned.


Sivun yläreuna asettuu aina sen hetkisellev riville, kun virta kytketään päälle tai kun painetaan sinistä painiketta.

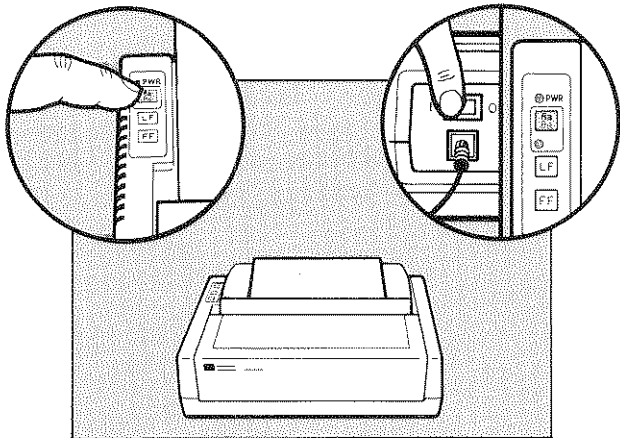

Aa
Aa

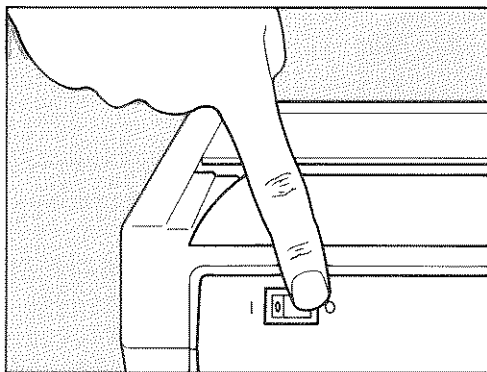

HOLD
HALTEN
MAINTENIR
MANTENER OPRIMIDO
TENERE PREMUTO
HOUD VAST
HOLD
TRYKK
HALL KNAPPEN NEDTRYCKT.
PIDA PAINETTUNA

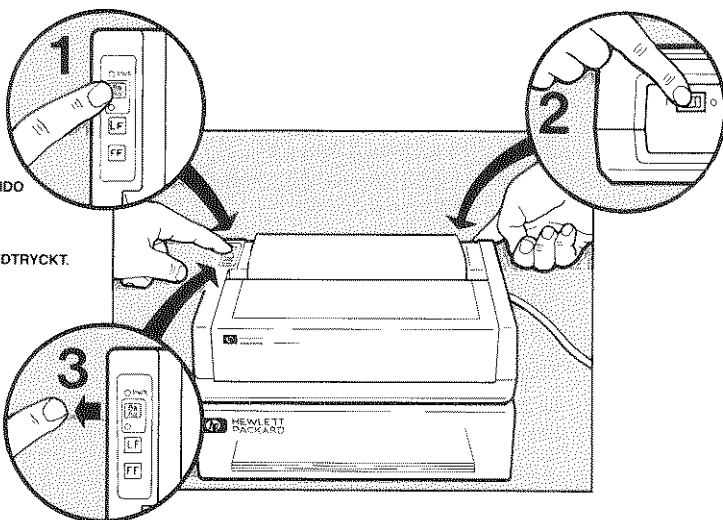



RELEASE
LOSLASSEN
RELÂCHER
SOLTAR
RILASCIARE
LAAT LOS
SLIP
FRIGJØR
SLAPP KNAPPEN.
VAPAUTA

Quality mode is used to print entire documents. Quality mode can highlight a whole page or several pages. The illustrations above tell you how to enable Quality mode.

<=>?@ABC
 =>?@ABCD
 >?@ABCDE

Self test

Eingnungsprüfung
 Test de diagnostic
 Prueba de diagnóstico
 Test diagnostico
 Zelf proef
 System test
 Selvprøve
 Kone testa
 Selv eksamen

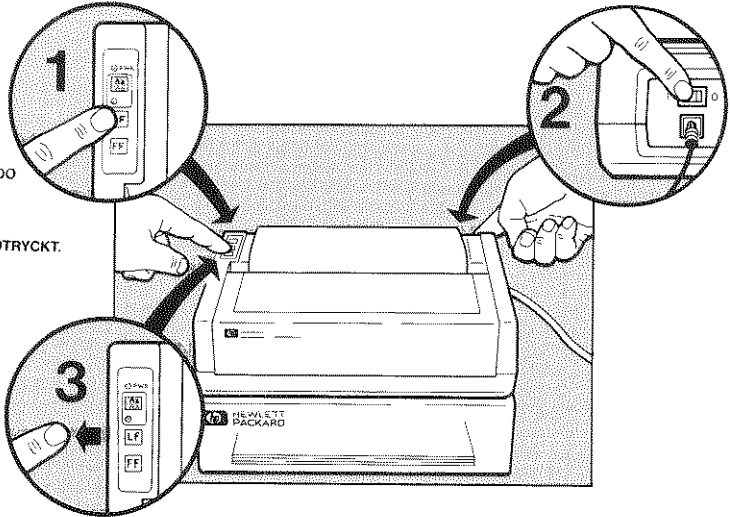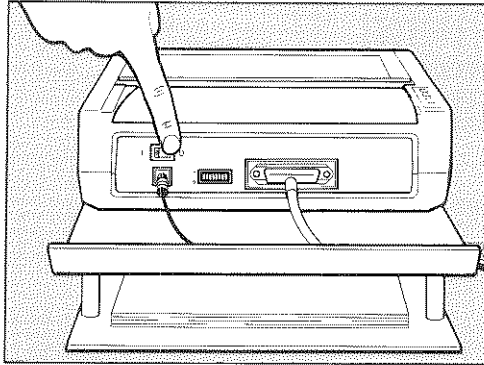

HOLD
 HALTEN
 MAINTENIR
 MANTENER OPRIMIDO
 TENERE PREMUTO
 HOUD VAST
 HOLD
 TRYKK
 HALL KNAPPEN NEDTRYCKT.
 PIDÄ PAINETTUNA

RELEASE
 LOSLASSEN
 RELÄCHER
 SOLTAR
 RILASCIARE
 LAAT LOS
 SLIP
 FRIGJÖR
 SLÄPP KNAPPEN.
 VAPAUTA

