



HP 8562A/B High Performance Portable Spectrum Analyzer Installation Manual

Serial Numbers

This manual applies directly to analyzers
with serial number prefixes through:

HP 8562A: 2703A
HP 8562B: 2703A

For additional important information
about serial numbers, see "Analyzers Covered
by This Manual" in Chapter 1.

Manual Part Number 08562-90007
Microfiche Part Number 08562-90008
Printed in U.S.A. July 1987

Copyright © 1987 by Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999

HP 8562A/B Documentation Description

Manuals shipped with your analyzer:

Installation Manual

HP Part Number 08562-90007

- Tells you how to install the spectrum analyzer
- Tells you what to do in case of a failure

Operating and Programming Manual

HP Part Number 08562-90001

- Tells you how to make measurements with your spectrum analyzer
- Tells you how to program your spectrum analyzer
- Describes analyzer features

Pocket Operating Guide

HP Part Number 08562-90003

- An abbreviated version of the Operating and Programming Manual

Quick Reference Guide

HP Part Number 08562-90006

- Provides you with a listing of all remote programming commands

Options:

Support Manual (Part of Option 915)*

HP Part Number 08562-90009

- Describes troubleshooting and repair of the analyzer

* Option 915, Service Documentation, consists of one copy each of the Support Manual, the Installation Manual, the Operating and Programming Manual, the Pocket Operating Guide, and the Quick Reference Guide.

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of the other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error-free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

How to Use This Manual

Where To Start

If you have just received the HP 8562A/B and want to get it ready to use for the first time:

Skim Chapter 1, "Introducing the HP 8562A/B," for a brief introduction to the unit and its capabilities. Thoroughly read Chapter 2, "Preparation for Use," and follow its instructions for:

- initial inspection of the unit
- preparing it for use
- performing the Trace Alignment and Reference Level Calibration procedures

If you need to verify the unit is operating within its specifications, perform the Operation Verification tests in Chapter 3, "Performance Tests."

Then use the Operating Manual (HP Part Number 08562-90001) to learn how to use the HP 8562A/B.

If the HP 8562A/B has been in use and you want to verify that it is operating correctly or to solve an apparent problem:

Perform the Trace Alignment and Reference Level Calibration procedures given in Chapter 2, "Preparation for Use." If you have the necessary test equipment, perform the Operation Verification tests in Chapter 3, "Performance Tests," to verify that the unit is operating within its specifications.

If there is an apparent problem, read Chapter 4, "Help?," for hints on what may be wrong and how to solve the problem, and instructions for calling HP for additional help.

Manual Terms and Conventions

Words in this manual that appear in brackets [] refer to softkeys that appear on the screen. Keys that appear on the front panel of the analyzer appear CAPITALIZED. Italic type indicates information specific to an HP 8562A or HP 8562B analyzer.

Printing History

Each new edition of this manual incorporates all material updated since the previous edition. Manual change sheets may be issued between editions, allowing you to correct or insert information in the current edition.

The part number of this manual changes only when a new edition is published. Minor corrections or additions may be made as the manual is reprinted between editions.

Part Number 08562-90007
Second Printing July 1987

Table of Contents

| | |
|--|---|
| HP 8562A/B Documentation Description | 2 |
| How to Use This Manual | 3 |
| Where to Start | 3 |
| Manual Terms and Conventions | 3 |
| Printing History | 3 |
| Safety Symbols | 6 |
| Electrostatic Discharge | 7 |
| Reducing Damage Caused by ESD | 7 |
| Static-Safe Accessories | 8 |

1 Introducing the HP 8562A/B

| | |
|--|------|
| What You'll Find in This Chapter | 1-1 |
| Introducing the HP 8562A/B | 1-1 |
| Accessories Supplied | 1-1 |
| Options | 1-1 |
| Accessories Available | 1-3 |
| Analyzers Covered by This Manual | 1-4 |
| Serial Numbers | 1-4 |
| Specifications and Characteristics | 1-5 |
| Calibration Cycle | 1-6 |
| Specifications | 1-7 |
| Characteristics | 1-15 |

2 Preparation for Use

| | |
|--|-----|
| What You'll Find in This Chapter | 2-1 |
| Initial Inspection | 2-1 |
| Preparing the HP 8562A/B for Use | 2-1 |
| Power Requirements | 2-3 |
| Setting the Line Voltage Selector Switch | 2-3 |
| Checking the Fuse | 2-3 |
| Power Cable | 2-4 |
| Turning the HP 8562A/B On for the First Time | 2-6 |
| Trace Alignment Procedure | 2-6 |
| Reference Level Calibration | 2-7 |
| HP-IB Address Selection | 2-7 |

3 Performance Tests

| | |
|---|-----|
| What You'll Find in This Chapter | 3-1 |
| What is Performance Verification? | 3-1 |
| What is Operation Verification? | 3-2 |
| Before You Start | 3-2 |
| Test Equipment You'll Need | 3-2 |
| Recording the Test Results | 3-2 |

| | |
|---|-------|
| If the Analyzer Doesn't Meet Specifications | 3-3 |
| Calibration Cycle | 3-3 |
| HP 85629A Functional Tests | 3-3 |
| Spectrum Analyzer/TAM Compatibility | 3-4 |
| Running the Functional Tests | 3-4 |
| 10 MHz Reference Output Accuracy | 3-11 |
| Calibrator Amplitude and Frequency Accuracy | 3-13 |
| Displayed Average Noise Level | 3-15 |
| Resolution Bandwidth Switching and IF Alignment Uncertainty | 3-19 |
| Resolution Bandwidth Accuracy and Selectivity | 3-21 |
| Input Attenuator Accuracy | 3-25 |
| IF Gain Uncertainty | 3-37 |
| Scale Fidelity | 3-42 |
| Residual FM | 3-48 |
| Noise Sidebands | 3-51 |
| Image, Multiple, and Out-of-Band Responses | 3-53 |
| Frequency Readout Accuracy/Frequency Count Marker Accuracy | 3-58 |
| Pulse Digitization Uncertainty | 3-62 |
| Second Harmonic Distortion | 3-65 |
| Frequency Response | 3-70 |
| Frequency Span Accuracy | 3-84 |
| Third Order Intermodulation Distortion | 3-88 |
| Gain Compression | 3-92 |
| 1ST LO Output Amplitude | 3-96 |
| Sweep Time Accuracy | 3-99 |
| Residual Responses | 3-103 |
| IF Input Amplitude Accuracy | 3-105 |

4 Help?

| | |
|---|-----|
| What You'll Find in This Chapter | 4-1 |
| Before You Call HP | 4-1 |
| Check the Basics | 4-1 |
| HP 85629A Test and Adjustment Module | 4-2 |
| Read the Warranty | 4-2 |
| Service Options | 4-2 |
| How to Call HP | 4-3 |
| How to Return Your Analyzer for Service | 4-3 |
| Service Tag | 4-3 |
| Original Packaging | 4-3 |
| Other Packaging | 4-3 |

Appendix A

| | |
|--------------------------|-----|
| Error Messages | A-1 |
|--------------------------|-----|

SAFETY SYMBOLS

The following safety symbols are used throughout this manual and in the instrument. Familiarize yourself with each of the symbols and its meaning before operating this instrument.



Instruction manual symbol. The instrument will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the instrument against damage. Location of pertinent information within the manual is indicated by use of this symbol in the table of contents.



Indicates dangerous voltages are present. Be extremely careful.

CAUTION

The CAUTION sign denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

GENERAL SAFETY CONSIDERATIONS

WARNING

BEFORE THIS INSTRUMENT IS SWITCHED ON, make sure it has been properly grounded through the protective conductor of the ac power cable to a socket outlet provided with protective earth contact. Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal can result in personal injury.

WARNING

There are voltages at many points in the instrument which can, if contacted, cause personal injury. Be extremely careful. Any adjustments or service procedures that require operation of the instrument with protective covers removed should be performed only by trained service personnel.

CAUTION

BEFORE THIS INSTRUMENT IS SWITCHED ON, make sure its primary power circuitry has been adapted to the voltage of the ac power source. Failure to set the ac power input to the correct voltage could cause damage to the instrument when the ac power cable is plugged in.

Electrostatic Discharge

Electrostatic discharge (ESD) can damage or destroy electronic components. Therefore, all work performed on assemblies consisting of electronic components should be done at a static-free work station. Figure 1 is an example of a static-safe work station using two types of ESD protection:

- conductive table mat and wrist-strap combination
- conductive floor mat and heel-strap combination

These methods may be used together or separately.

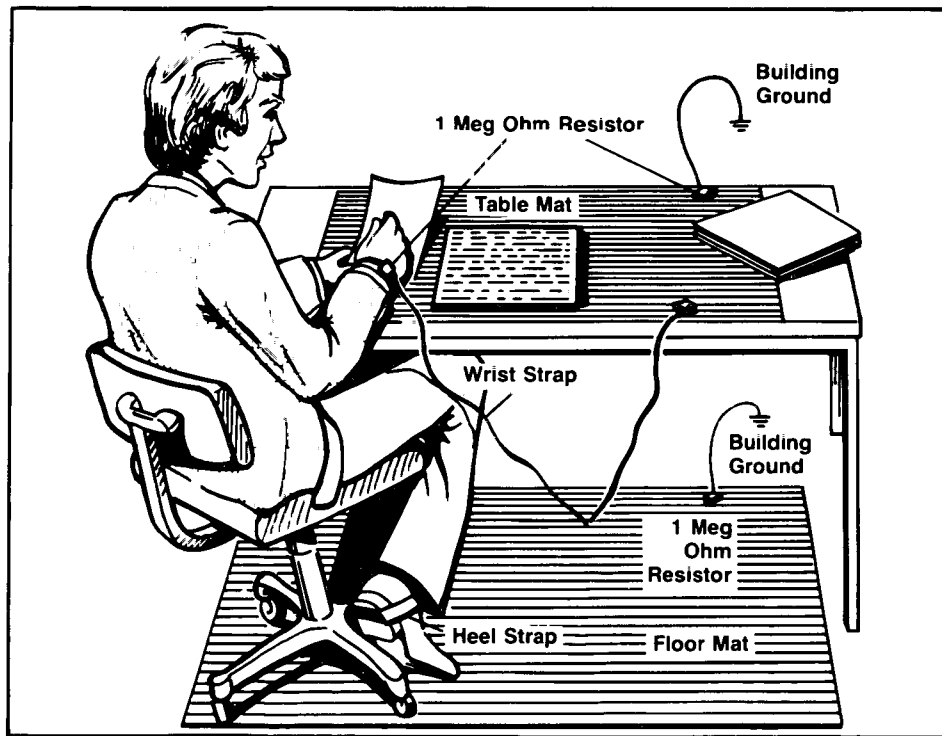


Figure 1. Example of a Static-Safe Work Station

Reducing Damage Caused by ESD

Following are suggestions that may help reduce ESD damage that occurs during testing and servicing operations.

- Before connecting any coaxial cable to an analyzer connector for the first time each day, momentarily ground the center and outer conductors of the cable.
- Personnel should be grounded with a resistor-isolated wrist strap before touching the center pin of any connector and before removing any assembly from the unit.
- Be sure that all instruments are properly earth-grounded to prevent a buildup of static charge.

Static-Safe Accessories

Table 1 lists static-safe accessories that can be obtained from Hewlett-Packard by using the HP part numbers shown.

Table 1. Static-Safe Accessories

| HP Part Number | Description |
|---|--|
| <p>Note: The following items can be ordered through any Hewlett-Packard Sales and Service Office.</p> | |
| 9300-0797 | 3M static control mat, 0.6m x 1.2m (2 ft. x 4 ft.) 4.6m (15 ft.) ground wire wrist strap and attachment cord |
| 9300-0980 | Wrist strap cord, 1.5m (5 ft.) |
| 9300-0985 | Wrist strap (large) |
| 9300-0986 | Wrist strap (small) |
| 9300-1169 | ESD heel strap (reusable 6 to 12 months) |
| 9300-0793 | Shoe ground strap (one-time use only) |
| <p>Note: The following ESD accessories can be ordered only from: Hewlett-Packard Company Computer Supplies Operation 1320 Kifer Road Sunnyvale, CA 94086 Phone: (408) 738-8858</p> | |
| 92175A | Black, hard-surface, static control mat, 1.2m x 1.5m (4 ft. x 5 ft.) |
| 92175B | Brown, soft-surface, static control mat, 2.4m x 1.2m (8 ft. x 4 ft.) |
| 92175C | Small, black, hard-surface, static control mat, 1.2m x 0.9m (4 ft. x 3 ft.) |
| 92175T | Tabletop static control mat, 58 cm x 76 cm (23 in. x 30 in.) |
| 92176A | Anti-static carpet, natural color, 1.8m x 1.2m (6 ft. x 4 ft.) |
| 92176B | Anti-static carpet, natural color, 2.4m x 1.2m (8 ft. x 4 ft.) |
| 92176C | Anti-static carpet, russet color, 1.8m x 1.2m (6 ft. x 4 ft.) |
| 92176D | Anti-static carpet, russet color, 2.4m x 1.2m (8 ft. x 4 ft.) |

INTRODUCING THE HP 8562A/B

1-1. What You'll Find in This Chapter

1-2. This chapter introduces you to the HP 8562A/B Spectrum Analyzer and its options and accessories that tailor the unit to your specific needs. To acquaint you with the analyzer's full capabilities, the HP 8562A/B specifications and characteristics are also provided.

1-3. Introducing the HP 8562A/B

1-4. The HP 8562A/B μ w/RF High-Performance Portable Spectrum Analyzer is a small, lightweight, test instrument that is capable of measuring signals from -119.9 dBm to $+30$ dBm over a frequency range of 1 kHz to 22 GHz. The HP 8562A provides preselection from 2.75 to 22 GHz, while the HP 8562B is unpreselected. The frequency range of the analyzer can be extended, unpreselected, to 110 GHz using HP 11970 Series mixers and to 325 GHz using other commercially available mixers.

1-5. The HP 8562A/B is a complete, self-contained instrument that needs only an external ac power source for operation. An ac power cable, suitable for use in the country to which the analyzer is originally shipped, is included with the unit.

1-6. Accessories Supplied

1-7. See Figure 1-1 for a complete listing of the accessories supplied with your HP 8562A/B Spectrum Analyzer.


1-8. Options

1-9. Several options are available to tailor the HP 8562A/B to your needs. Options can be ordered by option number when you order the analyzer. Some of the options are also available as kits that can be ordered and installed after you have received your HP 8562A/B.


1-10. Second IF Output (Option 001): This option provides an output for the second IF (310.7 MHz) at rear-panel connector J10.

1-11. Rack Mount Flange Kit (Option 908): This option provides the parts necessary to mount the HP 8562A/B in an HP System II cabinet or in a standard 19-inch (482.6-mm) equipment rack. Option 908 is also available as a kit (HP Part Number 5062-0800).


1-12. Rack Mount Flange Kit With Handles (Option 909): Option 909 is the same as Option 908 but includes front handles for added convenience. Option 909 is also available as a kit (HP Part Number 5062-1900).

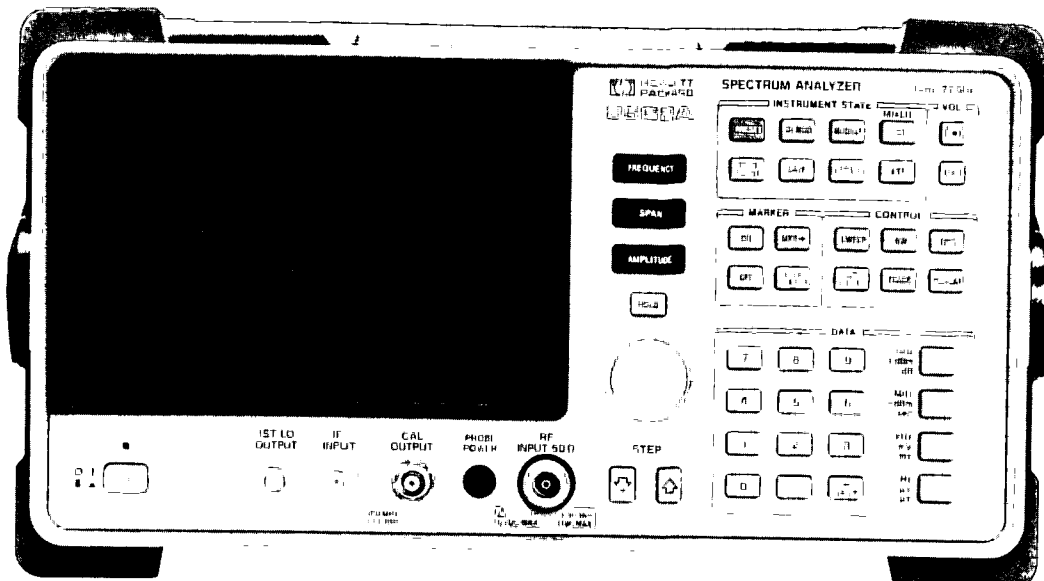

HP 8562A/B

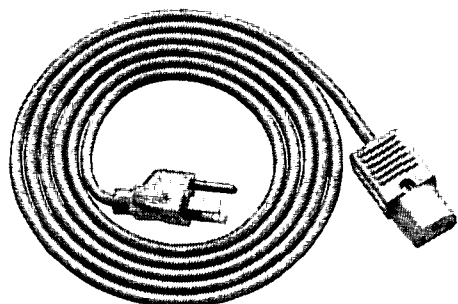

LINE POWER CABLE
(Refer to Table 2-2)

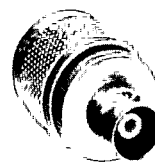

ADAPTER
HP Part Number 1250-0780



50Ω TERMINATION
HP Part Number 1810-0118

ACCESSORIES SUPPLIED BUT NOT SHOWN.

- Standard Front Cover HP 5061-9086
- 23 cm (9 in.) Coax Cable: Type BNC (m) HP 10502A
- Fuse: 5A, 250V HP 2100-0709
- 4mm Hex (Allen) Wrench HP 8710-1755
- Sun Hood HP 5180-9055

Figure 1-1. HP 8562A/B with Accessories Supplied

1-13. Additional Manual Set (Option 910): Option 910 provides an additional set of the manuals shipped with the analyzer. This includes an additional copy of the Installation Manual, the Operating and Programming Manual, the Pocket Operating Guide, and the Quick Reference Guide. To order additional manuals after initial shipment, order by the manual part number, which appears on the title page and on the back cover.

1-14. Service Documentation (Option 915): Option 915 provides a copy of the HP 8562A/B Support Manual and an additional set of the manuals shipped with the analyzer. The Support Manual documents the troubleshooting and repair of the analyzer. To obtain a copy of the HP 8562A/B Support Manual after initial shipment, order by the manual part number (HP Part Number 08562-90009).

1-15. Additional Pocket Operating Guide (Option 916): Option 916 provides an additional copy of the HP 8562A/B Pocket Operating Guide. To obtain a copy of the Pocket Operating Guide after initial shipment, order by the manual part number, which appears on the manual's title page.

1-16. Accessories Available

1-17 A number of accessories are available from Hewlett-Packard to help you configure your HP 8562A/B for your specific needs.

1-18. HP 85629A Test and Adjustment Module: The HP 85629A Test and Adjustment Module, when connected to the rear panel of the HP 8562A/B, assists the user in the testing and repairing of the analyzer. Four procedures are made available to the user:

- Functional Tests
- Adjustment Procedures
- Diagnostic (troubleshooting) Procedures
- Automatic Alignment Routines

1-19. The module displays menus, procedures, and results on the spectrum analyzer CRT. During testing with the module, the spectrum analyzer controls other instruments over HP-IB, reads data, and formats that data for the user. In addition to a large program stored in ROM, the module has the necessary hardware for troubleshooting. This includes dc signal injection and detection.

1-20. Camera Adapter: Camera adapter (HP Part Number 5041-7272) enables the use of a camera in making photographs of the display. Compatible with Tektronix C-5C and C-7 cameras.

1-21. Preamp: The HP 8447D Preamp provides a minimum of 26 dB gain from 100 kHz to 1.3 GHz to enhance measurements of very low-level signals.

1-22. Preamp: The HP 10855A Preamp provides a minimum of 22 dB gain from 2 MHz to 1300 MHz to enhance measurements of very low-level signals. It operates conveniently from the PROBE POWER output of the HP 8562A/B.

1-23. External Harmonic Mixers: The HP 11970 Series harmonic mixers extend the frequency range of the HP 8562A/B up to 110 GHz.

1-24. Close Field Probe: The HP 11940A Close-Field Probe is a small, hand-held, electromagnetic-field sensor. The probe provides repeatable, absolute, magnetic-field measurements from 30 MHz to 1 GHz. When attached to a source, the probe generates a localized magnetic field for electromagnetic interference (EMI) susceptibility testing.

1-25. 75 to 50 ohm Minimum-Loss Pad: The minimum-loss pad, HP Part Number 08562-60047, is a low VSWR device that is required for measurements on 75-ohm devices.

1-26. 75 to 50 ohm Adapter: The HP 11687A allows you to make measurements in 75-ohm systems while retaining amplitude calibration. It is effective over a frequency range of dc to 1300 MHz.

1-27. Microwave Limiter: The HP 11693A Limiter protects the analyzer input circuits from damage due to high power levels and operates over a frequency range of 0.4 to 12.4 GHz.

1-28. HP-IB Cable: Use HP 10833A/B/C/D HP-IB cables.

1-29. Controllers: The HP 8562A/B is fully HP-IB programmable. The preferred controllers are HP 9000 Series 300 computers. Consult your local Hewlett-Packard service representative for other recommended controllers and available software.

1-30. Plotter: The HP ColorPro 7440A Graphics Plotter adds a color printout capability to the HP 8562A/B for permanent records of important measurements. The eight-pen HP ColorPro produces color plots with 0.025-mm (0.001-in.) resolution on either 8.5 × 11-inch paper or transparency film.

1-31. Rack Slide Kit: This kit (HP Part Number 1494-0060) provides the hardware to adapt Rack Mount Kits (Options 908 and 909) for mounting the analyzer on slides in an HP System II cabinet.

1-32. Transit Case: The transit case (HP Part Number 9211-5604) provides extra protection for your HP 8562A/B for frequent travel situations. The HP transit case protects your instrument from hostile environments, shock, vibration, moisture, and impact while providing a secure enclosure for shipping.

1-33. Testmobile: The HP 1008A Testmobile provides a sturdy, mobile, platform for your analyzer.

1-34. Analyzers Covered by This Manual

1-35. This manual applies to analyzers with the serial number prefixes listed under SERIAL NUMBERS on the title page.

1-36. Serial Numbers

1-37. Hewlett-Packard makes frequent improvements to its products to enhance their performance, usability, or reliability. HP service personnel have access to complete records of design changes to each type of equipment, based on the equipment's serial number. Whenever you contact HP about your analyzer, have the complete serial number available to ensure obtaining the most complete and accurate information possible.

1-38. A mylar serial number label is attached to the rear of the analyzer. The serial number has two parts: the prefix (the first four numbers and a letter), and the suffix (the last five numbers). See Figure 1-2.

1-39. The first four numbers of the prefix are a code that identifies the date of the last major design change that is incorporated in your analyzer. The letter identifies the country in which the unit was manufactured. The five-digit suffix is a sequential number and is different for each unit. Whenever you list the serial number or refer to it in obtaining information about your analyzer, be sure to use the complete number, including the full prefix and the suffix.

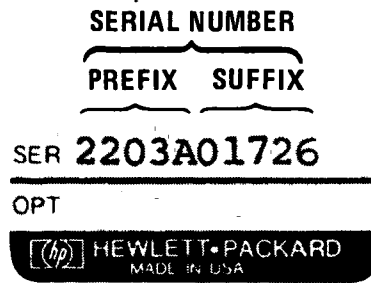


Figure 1-2. Typical Serial Number Label

1-40. Specifications and Characteristics

1-41. Table 1-1 lists the specifications for the HP 8562A/B. Unless stated otherwise, all specifications describe the analyzer's warranted performance under the following conditions:

- a) five-minute warmup from ambient conditions
- b) autocoupled controls
- c) preselector peaked at the signal of interest
- d) digital trace display
- e) IF ADJ ON
- f) REF LVL CAL adjusted
- g) 1ST LO OUTPUT terminated in 50 ohms
- h) 2ND IF OUTPUT (Option 001 analyzers) terminated in 50 ohms
- i) one-year calibration cycle
- j) environmental requirements met

1-42. After a 30-minute warmup, at a temperature range of 20° to 30°C, the preselector does not have to be peaked at each signal of interest; factory preselector peak values are sufficient to meet all specifications.

NOTE

The REF LVL CAL adjustment uses the CAL OUTPUT signal to calibrate the reference level. How often this adjustment should be performed depends on internal temperature changes. Amplitude temperature drift is a nominal 1 dB/10°C. The nominal temperature drift is 10°C, most of which occurs during the first 30 minutes after power-on. Internal temperature equilibrium is reached after two hours of operation at a stable ambient temperature.

1-43. Characteristics provide useful information in the form of typical, nominal, or approximate values for analyzer performance. See Table 1-2 for a list of HP 8562A/B characteristics.

1-44. Calibration Cycle

1-45. To ensure that the HP 8562A/B meets the specifications listed in Table 1-1, the Performance Verification listed in Chapter 3 should be performed every 12 months.

Table 1-1. HP 8562A/B Specifications (1 of 8)

| FREQUENCY | | |
|---|--|----------------------------------|
| Frequency Range | <i>1 kHz to 22 GHz</i> | |
| Internal Mixing | | |
| Internal Mixing Bands | Frequency Band | Harmonic Mixing Mode (N)* |
| | 1 kHz to 2.9 GHz | 1- |
| | 2.75 GHz to 646 GHz | 1- |
| | 5.86 GHz to 13.0 GHz | 2- |
| | 12.4 GHz to 19.7 GHz | 3- |
| | 19.1 GHz to 22.0 GHz | 4- |
| External Mixing | <i>18 to 325 GHz</i> | |
| External Mixing Bands | Frequency Band | Harmonic Mixing Mode (N)* |
| | K 180 to 26.5 | 6- |
| | A 26.5 to 400 | 8- |
| | Q 330 to 500 | 10- |
| | U 400 to 600 | 10- |
| | V 500 to 750 | 14- |
| | E 600 to 900 | 16- |
| | W 750 to 1100 | 18- |
| | F 900 to 1400 | 24- |
| | D 1100 to 1700 | 30- |
| | G 1400 to 2200 | 36- |
| | Y 1700 to 2600 | 44- |
| | J 2200 to 3250 | 54- |
| Frequency Readout Accuracy Accuracy of Start, Center, Stop, or Marker Frequency | $\langle \pm(\text{frequency readout} \times \text{frequency reference accuracy} + 5\% \text{ of frequency span} + 15\% \text{ of resolution bandwidth} + 250 \text{ Hz})$ | |
| Frequency Count Marker Resolution | Selectable from 10 Hz to 1 MHz | |
| Frequency Count Marker Accuracy (For signal-to-noise ratio ≥ 25 dB) | $\langle \pm(\text{marker frequency} \times \text{frequency reference accuracy} + 50 \text{ Hz} \times N + 1 \text{ LSD})^*$ | |
| Delta Frequency Count Accuracy (For signal-to-noise ratio ≥ 25 dB) | $\langle \pm(\text{delta frequency} \times \text{frequency reference accuracy} + 100 \text{ Hz} \times N + 2 \text{ LSD})^*$ | |
| Frequency Reference Accuracy Includes aging, temperature drift, and settability | $\langle \pm 4 \times 10^{-6}$ per year | |
| Stability Residual FM (Zero span) | $\langle 50 \text{ Hz} \times N^*$ peak-to-peak in 100 ms | |
| Spectral Purity Noise Sidebands 30 kHz offset | $\langle (-100 + 20 \log N) \text{ dBc/Hz}^*$ | |

* N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band and 310.7 MHz for all other bands).

Table 1-1. HP 8562A/B Specifications (2 of 8)

| FREQUENCY (Continued) | |
|--|---|
| <p>Frequency Span</p> <p>Range</p> <p style="padding-left: 20px;">Internal Mixing</p> <p style="padding-left: 20px;">External Mixing</p> <p>Accuracy</p> <p>Resolution Bandwidths (-3 dB)</p> <p>Range</p> <p>Accuracy</p> <p style="padding-left: 20px;">1 MHz resolution bandwidth</p> <p style="padding-left: 20px;">300 kHz to 300 Hz resolution bandwidth</p> <p style="padding-left: 20px;">100 Hz resolution bandwidth</p> <p>Selectivity (60 dB/3 dB bandwidth ratio)</p> <p>Bandwidth Shape</p> <p>Video Bandwidth</p> <p>Post-detection low-pass filter averages displayed noise for a smooth trace.</p> <p>Range</p> | <p>0 Hz, 10 kHz to 19.25 GHz over the 10-division CRT horizontal axis, variable in approximately 1% increments or in a 1, 2, 5 sequence</p> <p>Minimum span = 2.5 kHz x N*</p> <p>< ±5%</p> <p>100 Hz to 1 MHz selectable in a 1, 3, 10 sequence</p> <p>< ±25%</p> <p>< ±10%</p> <p>< ±30%</p> <p><15.1</p> <p>Synchronously tuned, 4-pole filters</p> <p>1 Hz to 1 MHz in a 1, 3, 10 sequence</p> |
| AMPLITUDE | |
| <p>MEASUREMENT RANGE</p> <p>Maximum Safe Input Power</p> <p style="padding-left: 20px;">Average Continuous Power</p> <p style="padding-left: 20px;">Input Attenuation ≥10 dB</p> <p>Peak Pulse Power</p> <p style="padding-left: 20px;">Input Attenuation ≥30 dB</p> <p>DC</p> <p>Gain Compression</p> <p style="padding-left: 20px;">With <-3 dBm at Input Mixer</p> <p style="padding-left: 20px;">10 MHz to 22 GHz</p> <p style="padding-left: 20px;">(Input mixer power = Input power - Input Attenuation)</p> | <p>+ 30 dBm (1 Watt)</p> <p>+50 dBm (100 Watts) for pulse widths <10 μs and <1% duty cycle</p> <p>0 Volts</p> <p><1.0 dB</p> |
| <p>* N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band and 310.7 MHz for all other bands).</p> | |

Table 1-1 HP 8562A/B Specifications (3 of 8)

| AMPLITUDE (Continued) | | |
|---|--|--|
| <p>Displayed Average Noise Level With no signal at input, 100 Hz resolution bandwidth, 1 Hz video bandwidth, and 0 dB input attenuation</p> <p style="text-align: center;">Frequency Range</p> <p style="text-align: center;">10 kHz 100 kHz 1 MHz to 2.9 GHz 2.9 GHz to 6.46 GHz 6.46 GHz to 13.0 GHz 13.0 GHz to 19.7 GHz 19.7 GHz to 22.0 GHz</p> | <p>HP 8562A</p> <p>< -90 dBm < -100 dBm < -121 dBm < -121 dBm < -110 dBm < -105 dBm < -100 dBm</p> | <p>HP 8562B</p> <p>< -90 dBm < -100 dBm < -121 dBm < -121 dBm < -110 dBm < -105 dBm < -100 dBm</p> |
| <p>Spurious Responses</p> <p>All input-related spurious responses, except as noted below, with < -40 dBm mixer level¹</p> <p>Second Harmonic Distortion</p> <p style="text-align: center;">Frequency Range</p> <p style="text-align: center;">10 MHz to 2.9 GHz</p> <p style="text-align: center;">2.75 GHz to 22.0 GHz</p> | <p>HP 8562A</p> <p>< -60 dBc 10 MHz to 6.46 GHz</p> | <p>HP 8562B</p> <p>< -60 dBc 10 MHz to 2.9 GHz</p> |
| <p>Third Order Intermodulation Distortion</p> <p>With -30 dBm total power at input mixer¹</p> <p style="text-align: center;">Frequency Range</p> <p style="text-align: center;">10 MHz to 2.9 GHz 2.75 GHz to 22 GHz</p> | <p>HP 8562A</p> <p>< -72 dBc, -40 dBm Mixer Level¹ < -100 dBc, -10 dBm Mixer Level¹</p> | <p>HP 8562B</p> <p>< -72 dBc, -40 dBm Mixer Level¹ < -60 dBc, -40 dBm Mixer Level¹</p> |
| <p>Image, Multiple, and Out-of-Band Responses</p> <p style="text-align: center;">Frequency Range</p> <p style="text-align: center;">10 MHz to 18 GHz 10 MHz to 22 MHz</p> | <p>HP 8562A</p> <p>< -70 dBc < -75 dBc</p> | <p>HP 8562B</p> <p>< -70 dBc < -75 dBc</p> |
| <p>Residual Responses</p> <p>200 kHz to 6.46 GHz, with no signal at input, 0 dB input attenuation</p> | <p>< -90 dBm</p> | |
| DISPLAY RANGE | | |
| <p>Amplitude Scale</p> | <p>10 vertical CRT divisions with the reference level (0 dB) at the top graticule line</p> | |
| <p>¹ Mixer level = Input level - input attenuation</p> | | |

Table 1-1. HP 8562A/B Specifications (4 of 8)

| AMPLITUDE (Continued) | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|---|--------------------|--|-------------|--|-------------|--|-------------|--|-------------|--|-------------|--|--|--------------|--|----------------------|--|----------------------|--|----------------------|--|-----------------------|--|---------------------|
| <p>DISPLAY RANGE (Continued)</p> <p>Calibration Log</p> <p>Linear</p> <p>Reference Level Range</p> <p>Log, adjustable in 0.1 dB steps</p> <p style="padding-left: 20px;">Frequency Band</p> <p style="padding-left: 40px;">10 kHz to 2.9 GHz</p> <p style="padding-left: 40px;">2.75 GHz to 6.46 GHz</p> <p style="padding-left: 40px;">5.86 GHz to 13.0 GHz</p> <p style="padding-left: 40px;">12.4 GHz to 19.7 GHz</p> <p style="padding-left: 40px;">19.1 GHz to 22.0 GHz</p> <p>Linear, settable in 1% steps</p> <p style="padding-left: 20px;">Frequency Band</p> <p style="padding-left: 40px;">10 kHz to 2.9 GHz</p> <p style="padding-left: 40px;">2.75 GHz to 6.46 GHz</p> <p style="padding-left: 40px;">5.86 GHz to 13.0 GHz</p> <p style="padding-left: 40px;">12.4 GHz to 19.7 GHz</p> <p style="padding-left: 40px;">19.1 GHz to 22.0 GHz</p> | <p>10 dB/Div for 90 dB display from reference level</p> <p>5 dB/Div for 50 dB display expanded from reference level**</p> <p>2 dB/Div for 20 dB display expanded from reference level</p> <p>1 dB/Div for 10 dB display expanded from reference level**</p> <p>10% of reference level per division when calibrated in voltage</p> <table style="width: 100%; border: none;"> <tr> <td style="text-align: center;">Range (dBm)</td> <td></td> </tr> <tr> <td style="text-align: center;">-120 to +30</td> <td></td> </tr> <tr> <td style="text-align: center;">-120 to +30</td> <td></td> </tr> <tr> <td style="text-align: center;">-115 to +30</td> <td></td> </tr> <tr> <td style="text-align: center;">-105 to +30</td> <td></td> </tr> <tr> <td style="text-align: center;">-100 to +30</td> <td></td> </tr> <tr> <td></td> <td style="text-align: center;">Range</td> </tr> <tr> <td></td> <td style="text-align: center;">2.2 μV to 7.07V</td> </tr> <tr> <td></td> <td style="text-align: center;">2.2 μV to 7.07V</td> </tr> <tr> <td></td> <td style="text-align: center;">4.0 μV to 7.07V</td> </tr> <tr> <td></td> <td style="text-align: center;">12.6 μV to 7.07V</td> </tr> <tr> <td></td> <td style="text-align: center;">22 μV to 7.07V</td> </tr> </table> | | Range (dBm) | | -120 to +30 | | -120 to +30 | | -115 to +30 | | -105 to +30 | | -100 to +30 | | | Range | | 2.2 μ V to 7.07V | | 2.2 μ V to 7.07V | | 4.0 μ V to 7.07V | | 12.6 μ V to 7.07V | | 22 μ V to 7.07V |
| Range (dBm) | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -120 to +30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -120 to +30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -115 to +30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -105 to +30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -100 to +30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Range | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 2.2 μ V to 7.07V | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 2.2 μ V to 7.07V | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 4.0 μ V to 7.07V | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 12.6 μ V to 7.07V | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 22 μ V to 7.07V | | | | | | | | | | | | | | | | | | | | | | | | | |
| AMPLITUDE ACCURACY | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>REFERENCE LEVEL UNCERTAINTY</p> <p>Frequency Response</p> <p>With 10 dB input attenuation</p> <p>In-Band</p> <p style="padding-left: 20px;">Frequency Range</p> <p style="padding-left: 40px;">1 kHz to 2.9 GHz</p> <p style="padding-left: 40px;">2.9 GHz to 6.46 GHz</p> <p style="padding-left: 40px;">6.46 GHz to 13.0 GHz</p> <p style="padding-left: 40px;">13.0 GHz to 19.7 GHz</p> <p style="padding-left: 40px;">19.7 GHz to 22.0 GHz</p> <p>Referenced to CAL OUTPUT (300 MHz)</p> <p style="padding-left: 20px;">1 kHz to 22.0 GHz</p> | <p>HP 8562A</p> <p>< \pm1.2 dB</p> <p>< \pm2.5 dB</p> <p>< \pm3.5 dB</p> <p>< \pm4.0 dB</p> <p>< \pm4.3 dB</p> <p>< \pm5.1 dB</p> | <p>HP 8562B</p> <p>< \pm1.2 dB</p> <p>< \pm2.0 dB</p> <p>< \pm2.5 dB</p> <p>< \pm3.0 dB</p> <p>< \pm4.3 dB</p> <p>< \pm5.1 dB</p> | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>**These scales are available only in sweep times \geq30 ms (digital display mode).</p> | | | | | | | | | | | | | | | | | | | | | | | | | | |

Table 1-1. HP 8562A/B Specifications (5 of 8)

| AMPLITUDE ACCURACY (Continued) | | |
|--|-----------------|---|
| | HP 8562A | HP 8562B |
| Band Switching Uncertainty Additional uncertainty added to In-Band Frequency Response for measurements between any two bands | < +0.5 dB | < +0.5 dB |
| Calibrator Uncertainty (-10 dBm, 300 MHz) | | < ±0.3 dB |
| Input Attenuator Switching Uncertainty 20 to 70 dB settings, referenced to 10 dB input attenuation Frequency Range 1 kHz to 2.9 GHz 12.4 GHz to 19.4 GHz 19.4 GHz to 22.0 GHz | | < ±0.6 dB/10 dB step, ±1.8 dB max < ±1.3 dB/10 dB step, 2.5 dB max < ±1.8 dB/10 dB step, 3.5 dB max |
| IF Gain Uncertainty 0 dBm to -80 dBm reference levels with 10 dB input attenuation | | < ±1.0 dB |
| Resolution Bandwidth Switching Uncertainty Referenced to 300 kHz resolution bandwidth | | < ±0.5 dB |
| IF Alignment Uncertainty Uncertainty when using 100 Hz and 300 Hz resolution bandwidths 300 Hz resolution bandwidth 100 Hz resolution bandwidth | | < ±0.5 dB < ±2.0 dB |
| Pulse Digitization Uncertainty Pulse response mode, PRF > 720/sweep time Log Linear | | < 1 dB peak-to-peak < 4% of reference level peak-to-peak |
| SCALE FIDELITY | | |
| Log | | < ±0.4 dB/4 dB from reference level to a maximum of ±1.5 dB over 0 to 90 dB range |
| Linear | | < ±3% of reference level |

Table 1-1. HP 8562A/B Specifications (6 of 8)

| SWEEP | |
|---|---|
| <p>Sweep Time</p> <p>Range</p> <p>Span = 0</p> <p>Span = 0</p> <p>Span \geq 10 kHz</p> <p>Accuracy (Span = 0)</p> <p>Sweep time \geq 30 ms</p> <p>Sweep time $<$ 30 ms</p> <p>Sweep Trigger</p> | <p>50 μs to $<$ 30 ms (analog display)</p> <p>30 ms to 60 s (digital display)</p> <p>50 ms to 100 s (digital display)</p> <p>$<$ \pm 1%</p> <p>$<$ \pm 15%</p> <p>Free Run, Single, Line, Video, External</p> |
| INPUTS AND OUTPUTS | |
| <p>IF INPUT</p> <p>Connector</p> <p>Input level for full-screen deflection (external mixing mode, 0 dBm reference level, 30 dB conversion loss)</p> <p>HP-IB</p> <p>Connector</p> <p>Interface Functions</p> <p>Direct Plotter Output</p> <p>CAL OUTPUT</p> <p>Connector</p> <p>Frequency</p> <p>Amplitude</p> <p>IST LO OUTPUT</p> <p>Connector</p> <p>Amplitude</p> <p>10 MHz REF IN/OUT</p> <p>Connector</p> <p>Frequency</p> | <p>SMA female, front panel</p> <p>-30 dBm \pm 1.5 dB</p> <p>IEEE-488 bus connector</p> <p>SH1, AH1, T6, TE0, L4, LE0, SR1, RL1, PP1, DC1, DT0, C1, C28, E1</p> <p>Supports HP 7225A, HP 7440A, HP 7470A, HP 7475A, HP 7550A, HP 9872A/B/C/T</p> <p>BNC female, front panel</p> <p>300 MHz \pm (300 MHz x frequency reference accuracy)</p> <p>-10 dBm \pm 0.3 dB</p> <p>SMA female, front panel</p> <p>+16.5 dBm \pm 2.0 dB (20°C to 30°C)</p> <p>BNC female, rear panel</p> <p>10 MHz \pm (10 MHz x frequency reference accuracy)</p> |
| GENERAL | |
| <p>Environmental</p> <p>Military Specification</p> <p>Calibration Interval</p> <p>Warmup</p> | <p>Per MIL-T-28800C, Type III, Class 3 Style C as follows:</p> <p>1 year</p> <p>5 minutes from ambient conditions***</p> |
| <p>*** 2 hours for conditions of internal condensation, 30 minutes to meet frequency response specifications without preselector peaking</p> | |

Table 1-1. HP 8562A/B Specifications (7 of 8)

| GENERAL (Continued) | |
|----------------------------------|---|
| Environmental (Continued) | |
| Temperature | |
| Operating | −10°C to +55°C |
| Non-operating | −62°C to +85°C |
| Humidity | 95% at 40°C for 5 days |
| Altitude | |
| Operating | 15000 feet |
| Non-operating | 50000 feet |
| Rain Resistance | Drip-proof at 16 liters/hour/square foot |
| Vibration | |
| 5 to 15 Hz | 0059 inch peak-to-peak excursion |
| 15 to 25 Hz | 0039 inch peak-to-peak excursion |
| 25 to 55 Hz | 0020 inch peak-to-peak excursion |
| Pulse Shock | |
| Half Sine | 30 g for 11 ms duration |
| Transit Drop | 8-inch drop on 6 faces and 8 corners |
| Electromagnetic Compatibility | <p>Conducted and radiated interference is in compliance with CISPR publication 11 (1985) and Messempfaenger-Postverfuegung 526/527/79 (Kennzeichnung Mit F-Nummer/Funkschutzzeichen). Meets the requirements of MIL-STD-461B, Part 4, with the exceptions shown below.</p> <p>Conducted Emissions CE01 (Narrowband): 1 kHz to 15 kHz only CE03 (Narrowband): Full limits CE03 (Broadband): 20 dB relaxation from 15 kHz to 100 kHz</p> <p>Conducted Susceptibility CS01: Full limits (limited to 36 Hz for HP 8562B) CS02: Full limits CS06: Full limits</p> <p>Radiated Emissions RE01: 15 dB relaxation to 30 kHz and exceptioned from 30 kHz to 50 kHz RE02: Full limits to 1 GHz</p> <p>Radiated Susceptibility RS01: Full limits RS02: Exceptioned RS03: Limited to 1 V/m from 14 kHz to 1 GHz, with 20 dB relaxation at IF frequencies (30 dB relaxation at IF frequencies for Option 001 instruments)</p> |

Table 1-1. HP 8562A/B Specifications (8 of 8)

| GENERAL (Continued) | | |
|----------------------------------|---|------------------|
| Power Requirements | | |
| 115 Vac Operation | | |
| Voltage | 90 to 140V rms | |
| Current | 3.2A rms max | |
| Frequency | 47 to 440 Hz | |
| 230 Vac Operation | | |
| Voltage | 180 to 250V rms | |
| Current | 1.8A rms max | |
| Frequency | 47 to 66 Hz | |
| Maximum Power Dissipation | 180 Watts | |
| Weight | HP 8562A | HP 8562B |
| | 20 kg (44 lbs) | 19 kg (41.8 lbs) |
| Dimensions | | |
| Without handle or cover | 184 mm high x 337 mm wide x 460.5 mm deep | |
| With handle and cover | 200 mm high x 373 mm wide x 500 mm deep | |

Legend

inches
(millimeters)

14-¹/₈
(373)

13-¹/₄
(337)

TOP

REAR

8
(200)

SIDE

18-¹/₈
(460.5)

7-¹/₄
(184)

Table 1-2 HP 8562A/B Characteristics (1 of 3)

| <p>NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|--------------|--------------|--------------|--------------|---|---|---|---|--------------|--------------|--------------|--------------|---|--------------|---|--------------|--------------|--------------|---|--------------|--------------|---|--------------|--------------|---|--------------|--------------|--------------|---|--------------|---|--------------|--------------|--------------|--------------|---|
| <p>FREQUENCY</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>Frequency Reference Accuracy Aging Temperature drift (−10°C to +55°C) Settability</p> | <p>$< \pm 1 \times 10^{-6}/\text{year}$ $< \pm 2 \times 10^{-6}$ $< \pm 1 \times 10^{-6}$</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>DYNAMIC RANGE</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>Nominal Sensitivity (100 Hz resolution bandwidth, 1 Hz video bandwidth, 0 dB input attenuation) Frequency Range 1 MHz to 2.9 GHz 2.9 GHz to 6.46 GHz 6.46 GHz to 13.0 GHz 13.0 GHz to 19.7 GHz 19.7 GHz to 22.0 GHz</p> | <p>Nominal Sensitivity −128 dBm −126.5 dBm −119 dBm −114 dBm −108 dBm</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>AMPLITUDE ACCURACY</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>Band-to-Band Frequency Response Frequency response uncertainty for measurements between any two bands. Equivalent to the sum of the two In-Band Frequency Response values plus Band Switching Uncertainty. (Values in parentheses apply to HP 8562B.)</p> | <p style="text-align: center;"><i>Band-to-Band Frequency Response (dB)</i></p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Band</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>—</td> <td>4.2 (3.7)</td> <td>5.2 (4.2)</td> <td>5.7 (4.7)</td> <td>6.0 (6.0)</td> </tr> <tr> <td>1</td> <td>4.2 (3.7)</td> <td>—</td> <td>6.5 (5.0)</td> <td>7.0 (5.5)</td> <td>7.3 (6.8)</td> </tr> <tr> <td>2</td> <td>5.2 (4.2)</td> <td>6.5 (5.0)</td> <td>—</td> <td>8.0 (6.0)</td> <td>8.3 (7.3)</td> </tr> <tr> <td>3</td> <td>5.7 (4.7)</td> <td>7.0 (5.5)</td> <td>8.0 (6.0)</td> <td>—</td> <td>8.8 (7.8)</td> </tr> <tr> <td>4</td> <td>6.0 (6.0)</td> <td>7.3 (6.8)</td> <td>8.3 (7.3)</td> <td>8.8 (7.8)</td> <td>—</td> </tr> </tbody> </table> | Band | 0 | 1 | 2 | 3 | 4 | 0 | — | 4.2 (3.7) | 5.2 (4.2) | 5.7 (4.7) | 6.0 (6.0) | 1 | 4.2 (3.7) | — | 6.5 (5.0) | 7.0 (5.5) | 7.3 (6.8) | 2 | 5.2 (4.2) | 6.5 (5.0) | — | 8.0 (6.0) | 8.3 (7.3) | 3 | 5.7 (4.7) | 7.0 (5.5) | 8.0 (6.0) | — | 8.8 (7.8) | 4 | 6.0 (6.0) | 7.3 (6.8) | 8.3 (7.3) | 8.8 (7.8) | — |
| Band | 0 | 1 | 2 | 3 | 4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | — | 4.2 (3.7) | 5.2 (4.2) | 5.7 (4.7) | 6.0 (6.0) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 4.2 (3.7) | — | 6.5 (5.0) | 7.0 (5.5) | 7.3 (6.8) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | 5.2 (4.2) | 6.5 (5.0) | — | 8.0 (6.0) | 8.3 (7.3) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | 5.7 (4.7) | 7.0 (5.5) | 8.0 (6.0) | — | 8.8 (7.8) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 6.0 (6.0) | 7.3 (6.8) | 8.3 (7.3) | 8.8 (7.8) | — | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>Input Attenuator Repeatability</p> | <p>$< \pm 0.2 \text{ dB}$</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>Pulse Digitization Uncertainty (Pulse response mode, PRF $> 720/\text{sweeptime}$) Standard Deviation</p> | <p>$< 0.2 \text{ dB}$</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Table 1-2. HP 8562A/B Characteristics (2 of 3)

| | | | | | |
|--|---|-----------------|-----------------|-------------|-------------|
| <p>NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.</p> | | | | | |
| <p>SWEEP</p> | | | | | |
| <p>Sweep Time Accuracy (Span \geq 10 kHz)</p> | <p>$< \pm 15\%$</p> | | | | |
| <p>DEMODULATION</p> | | | | | |
| <p>Spectrum Demodulation Modulation Type Audio Output Marker Pause Time</p> | <p>AM and FM Internal speaker and phone jack with volume control 100 ms to 65 s</p> | | | | |
| <p>INPUTS AND OUTPUTS</p> | | | | | |
| <p>INPUT 50Ω Connector Type Impedance VSWR (At tuned frequency)</p> <p>LO Emission Level (Average) 10 dB input attenuation</p> <p>IF INPUT Connector Type Impedance Frequency Noise Figure 1 dB Gain Compression Level Full Screen Level (Gain Compression and Full Screen Levels apply with 30 dB conversion loss setting and 0 dBm reference level.)</p> <p>1ST LO OUTPUT Connector Impedance Frequency Range</p> <p>CAL OUTPUT Connector Impedance</p> <p>10 MHz REF IN/OUT Connector Impedance Output Amplitude Input Amplitude</p> | <p>Precision Type N female, front panel 50 ohms (1.5:1 for $<$2.9 GHz and \geq10 dB input attenuation (2.3:1 for $>$2.9 GHz and \geq10 dB input attenuation (3.0:1 for 0 dB input attenuation)</p> <table style="width: 100%; border: none;"> <tr> <td style="text-align: center;">HP 8562A</td> <td style="text-align: center;">HP 8562B</td> </tr> <tr> <td style="text-align: center;">< -70 dBm</td> <td style="text-align: center;">< -10 dBm</td> </tr> </table> <p>SMA female, front panel 50 ohms 310.7 MHz 7 dB -23 dBm -30 dBm</p> <p>SMA female, front panel 50 ohms 3.0000 GHz to 6.8107 GHz</p> <p>BNC female, front panel 50 ohms</p> <p>BNC female, rear panel 50 ohms 0 dBm -2 to +10 dBm</p> | HP 8562A | HP 8562B | < -70 dBm | < -10 dBm |
| HP 8562A | HP 8562B | | | | |
| < -70 dBm | < -10 dBm | | | | |

Table 1-2. HP 8562A/B Characteristics (3 of 3)

NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.

INPUTS AND OUTPUTS (Continued)

VIDEO OUTPUT

Connector
Impedance (dc coupled)
Amplitude (into 50-ohm load)

BNC female, rear panel
50 ohms
0 to +1 Volt full-scale

LO SWP|0.5 V/GHz OUTPUT

Connector
Impedance (dc coupled)
LO SWP OUTPUT (no load)
0.5 V/GHz OUTPUT (no load)

BNC female, rear panel
2 kohms
0 to +10V
0.5V/GHz of tuned frequency

BLANKING OUTPUT

Connector
Amplitude
During Retrace
During Sweep
Maximum Input (High TTL State)

BNC female, rear panel
Low TTL Level (sink 150 mA max)
High TTL Level (source 0.5 mA max)
+40V

EXT TRIG INPUT

Connector
Impedance
Trigger Level

BNC female, rear panel
>10 kohms
Rising edge of TTL Level

PROBE POWER (front panel)

Voltage
Current

+15 Vdc, -12.6 Vdc
150 mA max., each

EARPHONE

Connector
Power Output

1/8-inch miniature monophonic jack, rear panel
0.25 Watts into 4 ohms

2ND IF OUT (Option 001 instruments only)

Connector
Impedance
Frequency

SMA female, rear panel
50 ohms
310.7 MHz

| Frequency Range |
|----------------------|
| 1 kHz to 2.9 GHz |
| 2.75 GHz to 6.46 GHz |
| 5.86 GHz to 6.46 GHz |
| 12.4 GHz to 19.7 GHz |
| 19.1 GHz to 22.0 GHz |

3 dB BW

>30 MHz
>20 MHz
>30 MHz
<30 MHz
<35 MHz

Noise Figure

24 dB
24 dB
33.6 dB
39.8 dB
44.4 dB

Conversion Gain

-5.6 dB
-3.6 dB
-3.7 dB
-9.9 dB
-14.8 dB

PREPARATION FOR USE

2-1. What You'll Find in This Chapter

2-2. This chapter describes the process of getting the HP 8562A/B ready to use. The process includes initial inspection procedures, setting up the unit for the selected ac power source, and performing the trace alignment and reference level calibration procedures.

2-3. Initial Inspection

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, keep it until you have verified that the contents are complete and you have tested the analyzer mechanically and electrically.

2-5. The contents of the shipment are shown in Figure 1-1 and Figure 2-1 and their accompanying legends. If the contents are incomplete or if the analyzer does not pass the operation verification tests (procedures are provided in Chapter 3), notify the nearest Hewlett-Packard office. If the shipping container is damaged or the cushioning material shows signs of stress, also notify the carrier. Keep the shipping materials for the carrier's inspection. The HP office will arrange for repair or replacement without waiting for a claim settlement.


2-6. If the shipping container and cushioning material are in good condition, retain them for possible future use. You may wish to ship the analyzer to another location or to return it to Hewlett-Packard for service. Chapter 4 provides instructions for repackaging and shipping the analyzer.

2-7. Preparing the HP 8562A/B for Use

2-8. The HP 8562A/B is a portable instrument and requires no physical installation other than connection to a source of ac power. If you want to install your HP 8562A/B in an HP System II cabinet or a standard 19-inch (486.2-mm) equipment rack, complete instructions are provided in the Options 908 and 909 Rack Mounting Kits.

CAUTION

DO NOT connect ac power until you have verified that the line voltage is correct, the proper fuse is installed, and the line voltage selector switch is properly positioned, as described in the following paragraphs. Damage to the equipment could result.

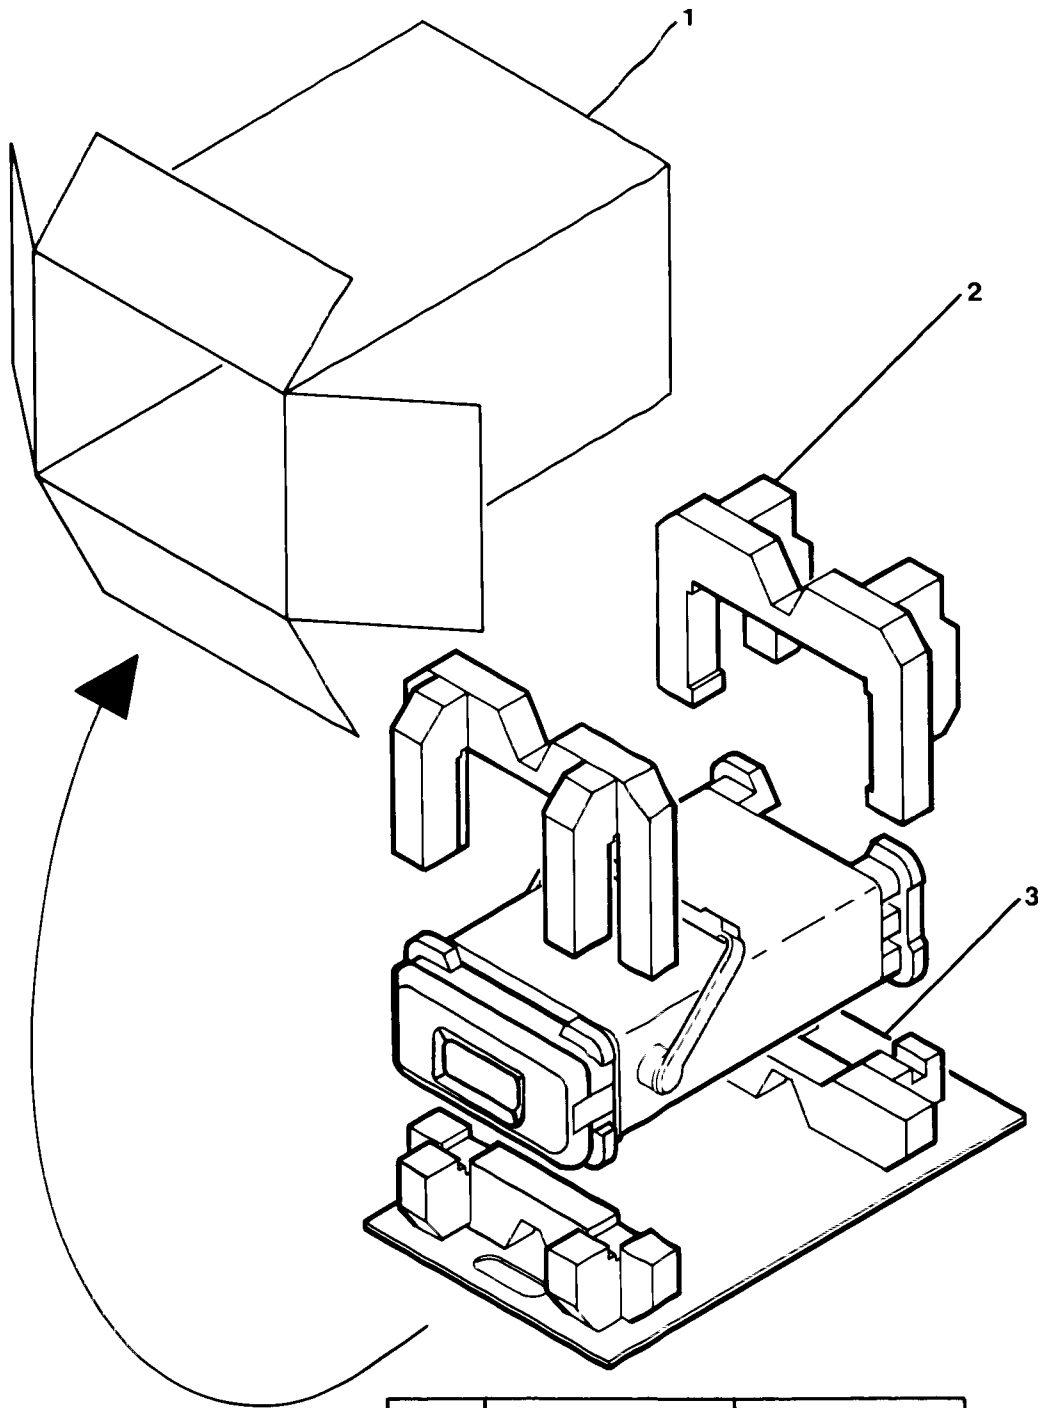

| Item | Description | Part Number |
|------|--------------|-------------|
| 1 | Outer Carton | 9211-5636 |
| 2 | Pads (2) | 08590-80013 |
| 3 | Bottom Tray | 08590-80014 |

Figure 2-1. HP 8562A/B Shipping Container and Contents

2-9. Power Requirements

2-10. The power requirements for the HP 8562A/B are listed in Table 2-1.

Table 2-1. Power Requirements

| Line Input | Power Requirements |
|---|---|
| 115 Vac Operation Line Voltage Current Frequency | 90–140V rms 3.2A rms max. 47–440 Hz |
| 230 Vac Operation Line Voltage Current Frequency | 180–280V rms 1.8A rms max. 47–66 Hz |

2-11. Setting the Line Voltage Selector Switch

CAUTION

BEFORE CONNECTING the HP 8552A/B to the power source, you must set the rear-panel voltage selector switch correctly to adapt the HP 8562A/B to the power source. An improper selector switch setting can damage the analyzer when it is turned on.

2-12. Set the instrument's rear-panel voltage selector switch to the line voltage range (115V or 230V) corresponding to the available ac voltage. See Figure 2-2. Insert a small screwdriver or similar tool in the slot and slide the switch so that the proper voltage label is visible.

2-13. Checking the Fuse

2-14. The type of ac line input fuse will depend on the input line voltage. Use the following fuses:

115V operation: 5A 125V UL/CSA (HP Part Number 2110-0756)

230V operation: 5A 250V IEC (HP Part Number 2110-0709)

2-15. The line fuse is housed in a small container located on the rear-panel power connector. See Figure 2-2. The container provides space for storing a spare fuse, as shown in the figure.

2-16. To check the fuse, insert the tip of a screwdriver in the slot at the top of the container and pry gently to remove the container. When installing a new fuse, be sure to place the fuse in the proper position as illustrated in Figure 2-2.

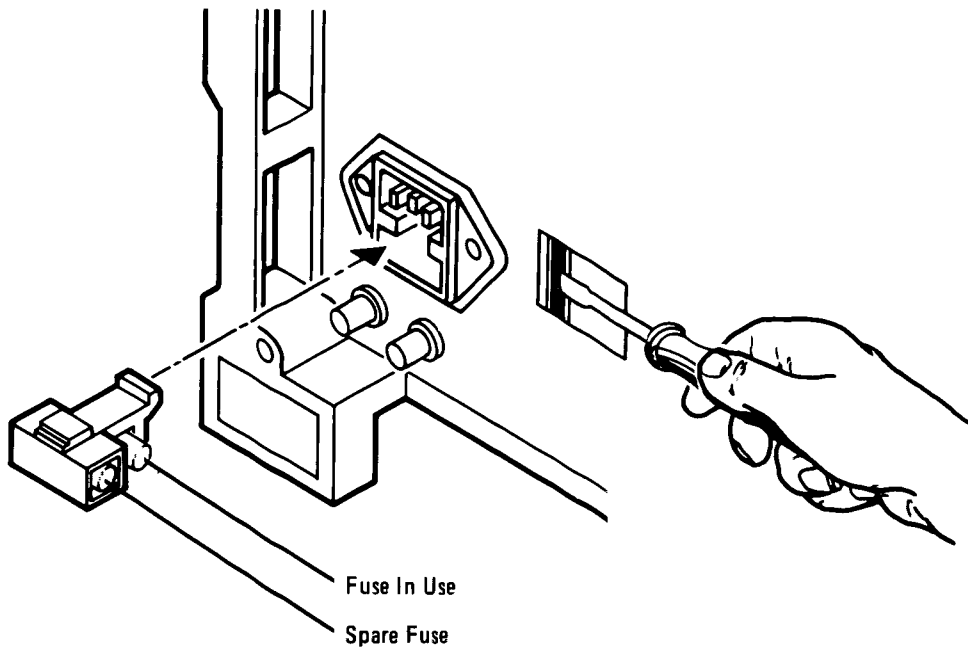


Figure 2-2. Voltage Selection Switch and Line Fuse Locations

2-17. Power Cable








2-18 The HP 8562A/B is equipped with a three-wire power cable, in accordance with international safety standards. When connected to an appropriate power line outlet, this cable grounds the instrument cabinet.

WARNING

Failure to ground the analyzer properly can result in personal injury. Before turning on the HP 8562A/B, you must connect its protective earth terminals to the protective conductor of the main power cable. Insert the main power cable plug only into a socket outlet that has a protective earth contact. **DO NOT** defeat the earth-grounding protection by using an extension cable, power cable, or autotransformer without a protective ground conductor. If you are using an autotransformer, make sure its common terminal is connected to the protective earth contact of the power source outlet socket.

2-19. Various power cables are available to connect the HP 8562A/B to the types of ac power outlets unique to specific geographic areas. The cable appropriate for the area to which the analyzer is originally shipped is included with the unit. You can order additional ac power cables for use in different areas. Table 2-2 lists the available ac power cables, illustrates the plug configurations, and identifies the geographic area in which each cable is appropriate.

Table 2-2. AC Power Cables Available
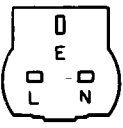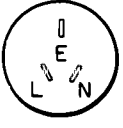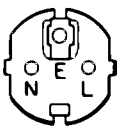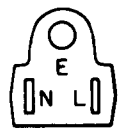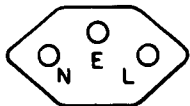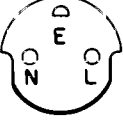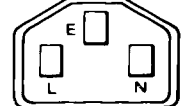
| Plug Type** | Cable HP Part Number | Plug Description | Cable Length cm (inches) | Cable Color | For Use In Country |
|---|-------------------------------------|---|---------------------------------|-------------------------------------|---|
| 250V  | 8120-1351 8120-1703 | Straight*BS1363A 90° | 229 (90) 229 (90) | Mint Gray Mint Gray | Great Britain, Cyprus, Nigeria, Rhodesia, Singapore, So. Africa, India |
| 250V  | 8120-1369 8120-0696 | Straight*NZSS198/ASC112 90° | 201 (79) 221 (87) | Gray Gray | Australia, New Zealand |
| 250V  | 8120-1689 8120-1692 | Straight*CEE7-Y11 90° | 201 (79) 201 (79) | Mint Gray Mint Gray | East and West Europe, Saudi Arabia, United Arab Republic (unpolarized in many nations) |
| 125V  | 8120-1348 8120-1398 8120-1754 | Straight*NEMA5-15P 90° Straight*NEMA5-15P | 203 (80) 203 (80) 91 (36) | Black Black Black | United States Canada, Japan (100 or 200V), Mexico, Philippines, Taiwan |
| | 8120-1378 8120-1521 8120-1676 | Straight*NEMA5-15P 90° Straight*NEMA5-15P | 203 (80) 203 (80) 91 (36) | Jade Gray Jade Gray Jade Gray | |
| | | | | | |
| 250V  | 8120-2104 | Straight*SEV1011 1959-24507 Type 12 | 201 (79) | Gray | Switzerland |
| 220V  | 8120-0698 | Straight*NEMA6-15P | | | |
| 250V  | 8120-1860 | Straight*CEEE22-VI | | | |
| <p>* Part number shown for plug is industry identifier for plug only. Number shown for cable is HP Part Number for complete cable, including plug.</p> <p>** E = Earth Ground; L = Line; N = Neutral.</p> | | | | | |

2-20. Turning the HP 8562A/B On for the First Time

2-21. When you turn the analyzer on for the first time, you should perform the following trace alignment and reference level calibration procedures. The HP-IB address may also be set if needed. Perform the following three steps before continuing with the procedures:

1. Press the LINE key.
2. The analyzer will take about half a minute to perform a series of self diagnostic and calibration routines. Upon completion of the routines, the screen displays the analyzer's model number (HP 8562A/B) and the firmware date (for example, 29.9.86 indicates September 29, 1986). Record the firmware date and keep it for reference. If you should ever need to call HP for service or with any questions regarding your analyzer, it will be helpful to have the firmware date readily available.
3. Allow the analyzer to warm up for five minutes. See the warmup specification in Table 1-1.

2-22. Trace Alignment Procedure

1. Press the PRESET key, the RECALL key, [MORE], and [CRT ADJ].
2. Adjust the rear-panel TRACE ALIGN until the leftmost line of the test pattern is parallel with the CRT bezel. See Figure 2-3.
3. Adjust the rear-panel X POSN until the leftmost "@" characters and the softkey labels appear just inside the left and right edges of the CRT bezel.
4. Adjust the rear-panel Y POSN until the softkey labels align with their appropriate softkeys.
5. Press the PRESET key to return the analyzer to normal operation.

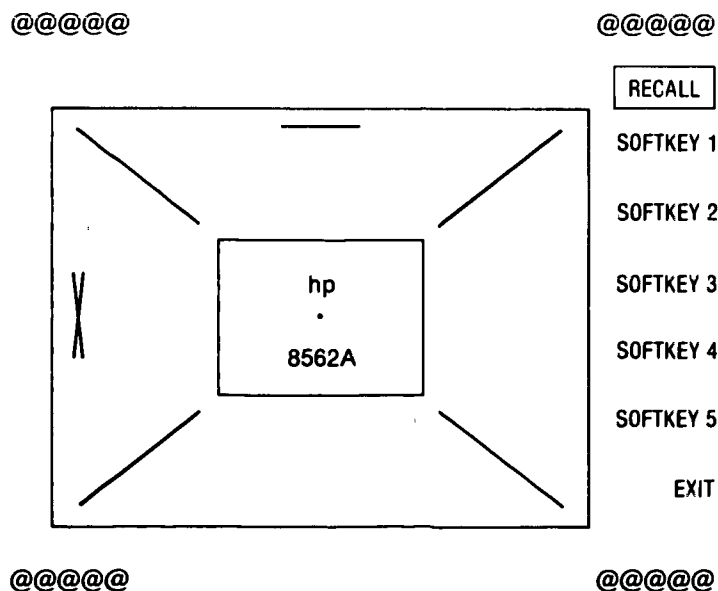


Figure 2-3. CRT Adjustment Pattern

2-23. Reference Level Calibration

1. Press the PRESET key
2. Connect a 50-ohm coaxial cable (such as HP 10503A) between the front-panel CAL OUTPUT and RF INPUT 50 Ω connectors.
3. Set the analyzer's center frequency to 300 MHz by pressing the FREQUENCY key, the 3 key, the 0 key, the 0 key, and the MHz key.
4. Set the analyzer's span to 20 MHz by pressing the SPAN key, the 2 key, the 0 key, and the MHz key.
5. Press the PEAK SEARCH key.
6. Set the analyzer's reference level to -10 dBm by pressing the AMPLITUDE key, the 1 key, the 0 key, and the $-$ dBm key.
7. Press [MORE] and [REF LVL CAL].
8. Rotate the analyzer's front-panel knob until the marker (MKR) reads -10.00 dBm ± 0.17 dB. There is a slight delay in time between the adjusting of the knob and the change in marker value. Notice that the REF LEVEL CAL value displayed on the screen changes.
9. Press [STORE REF LVL].
10. Press the PRESET key.

2-24. HP-IB Address Selection

1. The HP-IB address for the analyzer is preset at the factory to a decimal value of 18. Valid address values range from 0 to 31. To view the HP-IB address, press the PRESET key and [HPIB ADDRESS].
2. To change the address value, enter the new address number using the front-panel data keys, and terminate the entry by pressing a units key. For example, enter an address of 18 by pressing the PRESET key, [HPIB ADDRESS], the 1 key, the 8 key, and the Hz key.
3. Press the PRESET key.

2-25. When the trace alignment and reference level calibration procedures have been completed successfully, the analyzer is ready for normal operation.

PERFORMANCE TESTS

3-1. What You'll Find in This Chapter

3-2. This chapter contains 22 test procedures which test the electrical performance of the HP 8562A/B Spectrum Analyzer against the specifications in Table 1-1. None of the test procedures require removing the cover of the spectrum analyzer. This chapter also provides instructions on using the HP 85629A functional tests

3-3. What is Performance Verification?

3-4. The highest-level testing, called Performance Verification, verifies that analyzer performance is within all specifications of Table 1-1. It is time-consuming and requires extensive test equipment. Performance Verification consists of all the performance tests. See Table 3-1 for a complete listing of the performance tests.

Table 3-1. Performance Tests

| Paragraph Number | Name |
|------------------|---|
| 3-24 | 10 MHz Reference Output Accuracy |
| 3-25 | Calibrator Amplitude and Frequency Accuracy |
| 3-26 | Displayed Average Noise Level |
| 3-27 | Resolution Bandwidth Switching and IF Alignment Uncertainty |
| 3-28 | Resolution Bandwidth Accuracy and Selectivity |
| 3-29 | Input Attenuator Accuracy |
| 3-30 | IF Gain Uncertainty |
| 3-31 | Scale Fidelity |
| 3-32 | Residual FM |
| 3-33 | Noise Sidebands |
| 3-34 | Image, Multiple, and Out-of-Band Responses |
| 3-35 | Frequency Readout Accuracy/Frequency Count Marker Accuracy |
| 3-36 | Pulse Digitization Uncertainty |
| 3-37 | Second Harmonic Distortion |
| 3-38 | Frequency Response |
| 3-39 | Frequency Span Accuracy |
| 3-40 | Third Order Intermodulation Distortion |
| 3-41 | Gain Compression |
| 3-42 | First LO Output Amplitude |
| 3-43 | Sweep Time Accuracy |
| 3-44 | Residual Responses |
| 3-45 | IF Input Amplitude Accuracy |

3-5. What is Operation Verification?

3-6. Operation Verification consists of a subset of the performance tests which test only the most critical specifications of the analyzer. It requires much less time and equipment than the Performance Verification and is recommended for verification of overall instrument operation, either as part of incoming inspection or after repair. Operation Verification consists of the following performance tests:

- 3-24. 10 MHz Reference Output Accuracy
- 3-25. Calibrator Amplitude and Frequency Accuracy
- 3-26. Displayed Average Noise Level
- 3-27. Resolution Bandwidth Switching Uncertainty
- 3-28. Resolution Bandwidth Accuracy and Selectivity
- 3-29. Input Attenuator Accuracy
- 3-30. IF Gain Uncertainty
- 3-31. Scale Fidelity
- 3-32. Residual FM
- 3-33. Noise Sidebands
- 3-35. Frequency Readout Accuracy/Frequency Count Marker Accuracy
- 3-37. Second Harmonic Distortion
- 3-38. Frequency Response

3-7. Before You Start

3-8. There are three things you must do **before** starting Performance Verification or Operation Verification:

1. Switch the analyzer on and let it warm up in accordance with the warmup specification in Table 1-1.
2. After the analyzer has warmed up as specified, perform the Trace Alignment Procedure and Reference Level Calibration contained in Chapter 2, "Preparation for Use." See paragraphs 2-22 and 2-23.
3. Read the rest of this section before you start any of the tests.

3-9. Test Equipment You'll Need

3-10. Table 3-5 lists the recommended test equipment for the performance tests. Any equipment that meets the critical specifications given in the table can be substituted for the recommended model(s). The table also lists the recommended equipment for the analyzer's adjustment procedures which are located in the HP 8562A/B Support Manual.

3-11. Recording the Test Results

3-12. Record the test results in the Performance Test Record, Table 3-38, located at the end of this chapter. The table lists test specifications and acceptable limits. We recommend that you make a copy of this table, record the complete test results on the copy, and keep the copy for your calibration test record. This record could prove valuable in tracking gradual changes in test results over long periods of time.

3-13. If the Analyzer Doesn't Meet Specifications

3-14. If the analyzer doesn't meet one or more of the specifications, complete any remaining tests and record all test results on a copy of the test record. Then refer to Chapter 4, "Help?", for instructions on how to solve the problem. If an error message is displayed, press the PRESET key and [REALIGN LO & IF]. If the error message persists after the automatic RF, LO, and IF adjustments are completed, refer to Appendix A.

3-15. Calibration Cycle

3-16. To ensure that the HP 8562A/B meets the specifications listed in Table 1-1, Performance Verification should be performed every 12 months.

3-17. HP 85629A Functional Tests

3-18. The HP 85629A Test and Adjustment Module (TAM) can be used to perform several automatic functional tests on the HP 8562A/B Spectrum Analyzer. These tests provide increased confidence in analyzer operation while requiring very little equipment or operator attention. Hard copy results are possible with an HP-IB printer. Because these functional tests have greater measurement uncertainties than their related performance tests, they should not be used as part of a calibration. The greater measurement uncertainties in the functional tests are a result of the limited set of test equipment.

3-19. Table 3-2 lists the Functional Tests, their corresponding Performance Tests, and the types of test equipment required for each test. The recommended test equipment for the Functional Tests is indicated in Table 3-5 with the letter "M" placed in the "Use" column.

Table 3-2. TAM Functional Tests

| Functional Test | Corresponding Performance Test | Equipment Required |
|-------------------------------|--------------------------------|---------------------|
| Noise Sidebands | 3-33 | None |
| Residual FM | 3-32 | None |
| IF Gain Uncertainty | 3-30 | Source |
| Scale Fidelity | 3-31 | Source |
| Input Attenuator Accuracy | 3-29 | Source |
| Frequency Marker Accuracy | 3-35 | Source |
| Image, Mult, Out-of-Band Resp | 3-34 | Source |
| RES BW Accy & Selectivity | 3-27, 3-28 | Source, 20 dB Pad |
| 2nd Harmonic Distortion | 3-37 | Source, 50 MHz LPF |
| Frequency Span Accuracy | 3-39 | Source |
| Gain Compression | 3-41 | Source |
| T.O.I. Distortion | 3-40 | Source |
| Frequency Response | 3-38 | Source, Power Meter |
| 1ST LO OUTPUT Amplitude | 3-42 | Power Meter |
| Displayed Average Noise Level | 3-26 | 50Ω Termination |
| Residual Responses | 3-44 | 50Ω Termination |

3-20. Spectrum Analyzer/ TAM Compatibility

3-21. Table 3-3 lists the compatibility rating of each analyzer serial prefix for each TAM firmware revision. A rating of 10 indicates that the analyzer and TAM are fully compatible. If the rating is less than 10, the TAM can still be used, but the results of one or more of the tests will be invalid. Refer to Table 3-4 to determine which tests are valid for a particular TAM firmware revision. Make sure the analyzer's serial prefix matches the serial prefix listed on the table. New tables will be provided for analyzers with serial prefixes not listed on this manual's title page.

Table 3-3. Functional Test Compatibility Matrix

| HP 8562A/B Serial Prefix(es)* | Compatibility Rating** HP 85629A Firmware Revision | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | A | B | C | D | E | F | G | H | I | J | K | L | M |
| 2642A (A) | 10 | | | | | | | | | | | | |
| 2640A (B) | 10 | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| * (A) identifies serial prefixes for HP 8562A analyzers; (B) identifies serial prefixes for HP 8562B analyzers. ** Compatibility is rated on a scale of 0 to 10 (0 = incompatible; 10 = fully compatible). | | | | | | | | | | | | | |

3-22. Running the Functional Tests

3-23. Connect the TAM to the rear panel of the HP 8562A/B. The HP 8562A/B should be allowed to warm up for at least five minutes before running any functional test. Perform the following steps to run the tests:

1. Perform a REF LVL CAL (reference level calibration) as described in Chapter 2, paragraph 2-23, before continuing.
2. Press the MODULE key to select the TAM's main menu. If any error message appears refer to the Error Message section of the HP 85629A Test and Adjustment Module Supplement. Error messages will be displayed either in the lower right-hand corner of the CRT, on the bottom line of the main menu, or in the active function area.

Table 3-4. Functional Test Validity Matrix

HP 8562A/B Serial Prefix: HP 8562A: 2642A
 HP 8562B: 2640A

| Functional Test | Functional Test Validity* HP 85629A Firmware Revision | | | | | | | | |
|-------------------------------|--|---|---|---|---|---|---|---|---|
| | A | B | C | D | E | F | G | H | I |
| Noise Sidebands | V | | | | | | | | |
| Residual FM | V | | | | | | | | |
| IF Gain Uncertainty | V | | | | | | | | |
| Scale Fidelity | V | | | | | | | | |
| Input Attenuator Accuracy | V | | | | | | | | |
| Frequency Marker Accuracy | V | | | | | | | | |
| Image, Mult, Out-of-Band Resp | V | | | | | | | | |
| RES BW Accy & Selectivity | V | | | | | | | | |
| 2nd Harmonic Distortion | V | | | | | | | | |
| Frequency Span Accuracy | V | | | | | | | | |
| Gain Compression | V | | | | | | | | |
| T. O. I. Distortion | V | | | | | | | | |
| Frequency Response | V | | | | | | | | |
| 1ST LO OUTPUT Amplitude | V | | | | | | | | |
| Displayed Average Noise Level | V | | | | | | | | |
| Residual Responses | V | | | | | | | | |

* V = Test results are valid, I = Test results are invalid.

- Press [Config] to enter the configuration menu and verify that the TAM is properly configured and that any test equipment is properly connected to the HP-IB. Refer to the System Configuration Menu section of the TAM Supplement for more information on configuring external test equipment. If a printer is configured and available, Functional Test results will be sent to the printer instead of the screen. If everything is properly configured, return to the main menu and press [Test].

4. Pressing [All Test] executes all the tests listed in the order shown. If only one test is to be performed, rotate the knob until the arrow points to the desired test and press [Execute].
5. The [Repeat] mode can be used to find suspected intermittent problems. If a printer is configured and connected to HP-IB, [Repeat] will perform the selected test continuously until [Abort] is pressed. The results will be sent to the printer. If a printer is not available, the [Repeat] test mode will pause at the end of each execution of the test to display the results. Testing will continue after pressing [Return]. This sequence will continue until [Abort] is pressed.

Table 3-5. Recommended Test Equipment (1 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|---------------------------------|---|-----------------------|-----------|
| Synthesized Sweeper | Frequency Range: 10 MHz to 22 GHz Frequency Accy (CW): 1×10^{-9} /day Leveling Modes: Internal and External Modulation Modes: AM and Pulse Power Level Range: -35 to +16 dBm (2 required) | HP 8340A** | P,A,T,M,V |
| Synthesizer/ Level Generator | Frequency Range: 1 kHz to 80 MHz Frequency Accy: 1×10^{-7} /mo Flatness: ± 0.15 dB Attenuator Accuracy: $< \pm 0.9$ dB | HP 3335A** | P,T,M,V |
| Synthesized Signal Generator | Frequency Range: 100 kHz to 2.5 GHz Residual SSB Phase Noise at 10 kHz offset (320 MHz $< f_c < 640$ MHz): < -131 dBc/Hz | HP 8663A | PV |
| Pulse/Function Generator | Frequency Range: 10 kHz to 50 MHz Pulse Width: 200 ns Output Amplitude: 5V Pk-to-Pk Functions: Pulse and Triangle TTL Sync Output | HP 8116A | P |
| AM/FM Signal Generator | Frequency Range: 1 MHz to 200 MHz Frequency Modulation Mode Modulation Oscillator Frequency: 1 kHz FM Peak Deviation: 5 kHz | HP 8640B | A |
| Microwave Frequency Counter | Frequency Range: 9 MHz to 22 GHz Timebase Accy (Aging): $< 5 \times 10^{-10}$ /day | HP 5343A** Opt 001 | P,A,M,V |
| Universal Counter | Modes: TI A \rightarrow B, Frequency Count Time Interval Measurement Range: 45 us to 120 s Timebase Accy (Aging): $< 3 \times 10^{-7}$ /mo | HP 5316A | P |
| Oscilloscope | Bandwidth (3 dB): dc to 100 MHz Minimum Vertical Deflection Factor: < 2 mV/div | HP 1980A/B** | A |
| Measuring Receiver | Compatible with Power Sensors dB Relative Mode Resolution: 0.01 dB Reference Accuracy: $< \pm 1.2\%$ | HP 8902A** | P,A,T,M,V |
| Power Sensor | Frequency Range: 250 MHz to 350 MHz Power Range: 100 nW to 10μ W Maximum SWR: 1.15 (250 to 350 MHz) | HP 8484A | P,A |

*P = Performance Tests; A = Adjustments; M = Test and Adjustment Module; T = Troubleshooting,
V = Operation Verification

**Part of Microwave Workstation

Table 3-5. Recommended Test Equipment (2 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|------------------------|---|---------------------|-----------|
| Power Sensor | Frequency Range: 100 kHz to 2.9 GHz Maximum SWR: 1.1 (1 MHz to 2.0 GHz) 1.30 (2.0 GHz to 2.9 GHz) | HP 8482A** | P,A,T,M,V |
| Power Sensor | Frequency Range: 50 MHz to 22 GHz Maximum SWR: 1.15 (50 to 100 MHz) 1.10 (100 MHz to 2 GHz) 1.15 (2.0 to 12.4 GHz) 1.20 (12.4 to 18 GHz) 1.25 (18 to 22 GHz) | HP 8485A** | P,A,T,M,V |
| Amplifier | Frequency Range: 300 to 350 MHz VSWR: <2.2 1 dB Gain Compression Point: >+15 dBm Gain >20 dB | HP 8447E | P,A,V |
| Amplifier | Frequency Range: 2.0 to 8.0 GHz Minimum Output Power (Leveled): 2.0 to 8.0 GHz: +16 dBm Output SWR (Leveled): <1.7 | HP 11975A | P |
| Digital Voltmeter | Range: -15 Vdc to +120 Vdc Accuracy: <±1 mV on 10V Range Input Impedance: >1 Megohm | HP3456A** | A |
| DVM Test Leads | >36 inches long, alligator clips, probe tips | HP 34118A | A,T |
| 10 dB Step Attenuator | Attenuation Range: 30 dB Frequency Range: dc to 80 MHz Connectors: BNC female | HP 355D | P,V |
| 1 dB Step Attenuator | Attenuation Range: 12 dB Frequency Range: dc to 80 MHz Connectors: BNC female | HP 355C | P,V,A |
| 20 dB Fixed Attenuator | Frequency Range: dc to 18 GHz Attenuation Accy: <±1 dB Maximum SWR: 1.2 (dc to 8 GHz) 1.5 (12.4 to 18 GHz) | HP 8491B Opt 020 | P,V |
| 10 dB Fixed Attenuator | Frequency Range: dc to 18 GHz Attenuation Accy: <±0.6 dB Maximum SWR: 1.2 (dc to 8 GHz) 1.5 (12.4 to 18 GHz) | HP 8491B Opt 010 | P,V |
| 10 dB Fixed Attenuator | Frequency Range: dc to 22 GHz Attenuation Accy: <±0.3 dB Maximum SWR: 1.25 (12.4 to 22 GHz) | HP 8493C Opt 010 | P,V |
| Signature Multimeter | Clock Frequency >10 MHz | HP 5005A/B | |

*P = Performance Tests; A = Adjustments; M = Test and Adjustment Module; T = Troubleshooting,
V = Operation Verification
**Part of Microwave Workstation

Table 3-5. Recommended Test Equipment (3 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|-----------------------|--|-------------------|---------|
| Reference Attenuator | Supplied with HP 8484A | HP 11708A | P,A |
| Termination | Frequency Range: dc to 22 GHz Impedance: 50 ohms Maximum SWR: <1.22 Connector: APC 3.5 | HP 909D | P,M,V |
| Low Pass Filter | Cutoff Frequency: 50 MHz Rejection at 65 MHz: >50 dB | HP 0955-0306 | P,M,V |
| Low Pass Filter | Cutoff Frequency: 4.1 GHz Rejection at 5.1 GHz: >50 dB (2 required) | HP 360D | P,V |
| Double Balanced Mixer | Maximum Conversion Loss: 9 dB Frequency Range: 5 to 350 MHz Conversion Compression: 0.3 dB for 0dBm signal at RF port Harmonic Distortion: <-30 dBc | HP 10514A | P,V |
| Directional Coupler | Frequency Range: 1.7 to 22 GHz Coupling: 16.0 dB (nominal) Max Coupling Deviation: ± 1 dB Directivity: 14 dB minimum Flatness: 0.75 dB maximum VSWR: <1.45 Insertion Loss: <1.3 dB | HP 0955-0125 | P |
| Power Splitter | Frequency Range: 1 kHz to 22 GHz Insertion Loss: 6 dB (nominal) Output Tracking: <0.25 dB Equivalent Output SWR: <1.22 | HP 11667B | P,A,M,V |
| RF Detector | Frequency Range: 0.1 to 1.2 GHz Maximum SWR: <1.3 (typical) Low Level Sensitivity: >0.35 mV μ W | HP 8471A | A |
| Product Support Kit | No Substitute | HP 08562-60021 | A |
| Adapter | Type N (f) to BNC (m) | HP 1250-1477 | P,V |
| Adapter | Type N (m) to BNC (f) (3 required) | HP 1250-1476 | P,A,M,V |
| Adapter | Type N (f) to APC 3.5 (m) | HP 1250-1750 | A |
| Adapter | Type N (m) to SMA (f) | HP 1250-1250 | P,V |
| Adapter | Type N (m) to APC 3.5 (m) (2 required) | HP 1250-1743 | P,M,V,A |
| Adapter | Type N (m) to APC 3.5 (f) | HP 1250-1774 | P,V,A |
| Adapter | Type N (f) to BNC (f) | HP 1250-1474 | P,V |

*P = Performance Tests; A = Adjustments; M = Test and Adjustment Module, T = Troubleshooting,
V = Operation Verification

Table 3-5. Recommended Test Equipment (4 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|-------------------|--|---|---------|
| Adapter | Type N (f) to SMA (f) | HP 1250-1772 | P,A |
| Adapter | BNC (f) to BNC (f) | HP 1250-0059 | A |
| Adapter | BNC Tee (f), (m), (f) | HP 1250-0781 | P,A,M,V |
| Adapter | BNC (f) to SMA (m) | HP 1250-1200 | P,A,V |
| Adapter | Type N (f) to APC 3.5 (f) (2 required) | HP 1250-1745 | PV |
| Adapter | APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 | P,M,V,A |
| Adapter | BNC (f) to Dual Banana Plug | HP 1251-2816 | A |
| Cable | RG-214/U with Type N (m) connectors Length: \geq 36 inches | HP 11500A | PV |
| RF Cable | Semi-rigid 50 ohm cable, SMA (m) connectors, length 6 to 8 inches | HP 11975-20002 | P |
| Cable | 48 inch 50 ohm Coaxial cable with BNC (m) connectors on both ends (5 required) | HP 10503A | P,A,V |
| Cable | Frequency Range: 1 kHz to 22 GHz Maximum SWR: $<$ 1.4 at 22 GHz Length: \geq 61 cm (24 inches) (2 required) Connectors: SMA (m) both ends Maximum Insertion Loss: 2 dB | HP 8120-1578 | P,A,M,V |
| Cable | HP-IB (Required for using Performance Test Software and using HP 85629A Test and Adjustment Module) Length: 2 m (6.6 feet) (12 required) | HP 10833B | P,A,M |
| Test Cable | Connectors: BNC (m) to SMB (f) Length: \geq 61 cm (24 inches) | HP 85680-60093 | A,M |
| Controller | Required for using Performance Test Software. No Substitute | HP 9816A, HP 9826A, HP 9836A/C, HP 310, or HP 320 | P |
| Spectrum Analyzer | Frequency Range: 1 MHz to 7 GHz | HP 8566A/B | A,T |
| Power Supply | Output Voltage: \geq 24 Vdc Output Voltage Accuracy: $<$ \pm 0.2V | HP 6114A | A |
| Tuning Tool | N/A | HP 8710-1010 | A |

*P = Performance Tests; A = Adjustments; M = Test and Adjustment Module; T = Troubleshooting;
V = Operation Verification

3-24. 10 MHz Reference Output Accuracy

SPECIFICATION

Frequency: $<\pm 4 \times 10^{-6}/\text{year}$

RELATED ADJUSTMENT

10 MHz Frequency Reference Adjustment

DESCRIPTION

The 10 MHz reference signal is measured for frequency accuracy by measuring the frequency of the 300 MHz CAL OUTPUT signal. The CAL OUTPUT signal is referenced to the 10 MHz reference. Measuring the CAL OUTPUT signal yields higher resolution than measuring the 10 MHz reference directly.

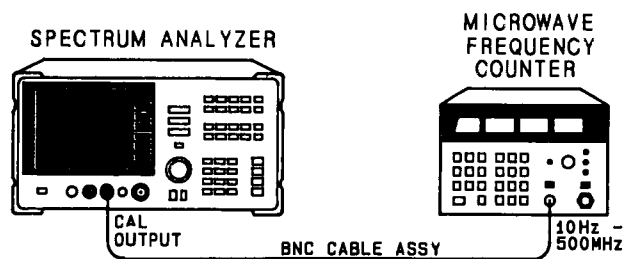


Figure 3-1. Frequency Reference Accuracy Test Setup

EQUIPMENT

Microwave Frequency Counter HP 5343A

Cables:

BNC, 122 cm (48 in.) HP 10503A

PROCEDURE

1. Connect the equipment as shown in Figure 3-1.

2. Set the HP 5343A controls as follows:

SAMPLE RATE Midrange
50Ω–1 MΩ SWITCH 50Ω
10 Hz–500 MHz/500 MHz–26.5 GHz SWITCH 10 Hz–500 MHz

NOTE

The HP 5343A should have either an Option 001 timebase or be connected to a house standard with an aging rate better than 5×10^{-10} /day.

3. On the HP 8562A/B, press the PRESET key.

NOTE

The HP 8562A/B must be allowed to warm up for at least ten minutes with the frequency reference set to INTERNAL. If the HP 8562A/B has warmed up but the frequency reference has been set to EXTERNAL, wait at least five minutes after pressing [PRESET] before proceeding with step 4.

- 4. Wait for the frequency counter to settle. This may take two or three gate times.
- 5. Read the frequency counter display. The frequency should be within the following limits (± 4 ppm with standard timebase):

$$299.998800 \text{ MHz} \leq \text{_____} \leq 300.001200 \text{ MHz}$$

NOTE

The frequency reading will be invalid if any error message is displayed, especially a synthesizer-related error message.

3-25. Calibrator Amplitude and Frequency Accuracy

SPECIFICATION

Amplitude: $-10 \text{ dBm} \pm 0.3 \text{ dB}$

Frequency: $300 \text{ MHz} \pm 1.2 \text{ kHz}$ (using standard timebase)

RELATED ADJUSTMENT

Calibrator Amplitude Adjustment

10 MHz Frequency Reference Adjustment

DESCRIPTION

The amplitude and frequency accuracy of the CAL OUTPUT signal are checked for $-10 \text{ dBm} \pm 0.3 \text{ dB}$ and $300 \text{ MHz} \pm 1.2 \text{ kHz}$, respectively.

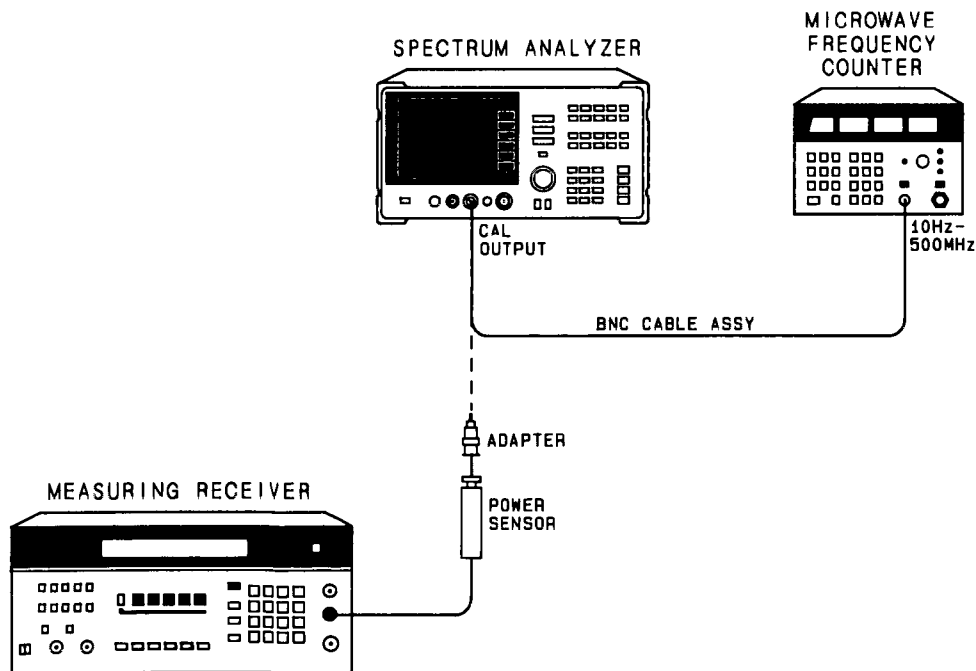


Figure 3-2. Calibrator Accuracy Test Setup

EQUIPMENT

| | |
|---------------------------------------|--------------|
| Measuring Receiver | HP 8902A |
| Microwave Frequency Counter | HP 5343A |
| Power Sensor | HP 8482A |
| Adapters: | |
| Type N (f) to BNC (m) | HP 1250-1477 |
| Cables: | |
| BNC, 122 cm (48 in.) | HP 10503A |

PROCEDURE

1. Connect the equipment as shown in Figure 3-2. The HP 5343A 10 Hz–500 MHz input should be connected to the CAL OUTPUT of the HP 8562A/B.

Calibrator Frequency Accuracy

2. Set the HP 5343A controls as follows:

| | |
|---|---------------|
| SAMPLE RATE | Midrange |
| 50Ω–1 MΩ SWITCH | 50Ω |
| 10 Hz–500 MHz/500 MHz–26.5 GHz SWITCH | 10 Hz–500 MHz |

NOTE

The HP 5343A should have either an Option 001 timebase or be connected to a house standard with an aging rate better than 5×10^{-10} /day.

3. Wait for the frequency counter to settle. This may take two or three gate times.
4. Read the frequency counter display. The CAL OUTPUT frequency should be within the following limits (± 4 ppm with standard timebase):

$$299.998800 \text{ MHz} \leq \underline{\hspace{2cm}} \leq 300.001200 \text{ MHz}$$

Calibrator Amplitude Accuracy

5. Zero the HP 8902A and calibrate the HP 8482A power sensor at 300 MHz as described in the HP 8902A Operation Manual. Enter the power sensor's 300 MHz calibration factor into the HP 8902A.
6. Connect the power sensor through an adapter directly to the CAL OUTPUT connector. Read the power meter display. The power level should be within the following limits (± 0.3 dB):

$$-10.3 \text{ dBm} \leq \underline{\hspace{2cm}} \leq -9.7 \text{ dBm}$$

3-26. Displayed Average Noise Level

SPECIFICATION

| Frequency | Average Noise Level |
|---------------|---------------------|
| 10 kHz | -90 dBm |
| 100 kHz | -100 dBm |
| 1 MHz-2.9 GHz | -121 dBm |
| 2.9-6.46 GHz | -121 dBm |
| 6.46-13.0 GHz | -110 dBm |
| 13.0-19.7 GHz | -105 dBm |
| 19.7-22 GHz | -100 dBm |

RELATED ADJUSTMENT

Frequency Response Adjustment

DESCRIPTION

This test measures the displayed average noise level in all five frequency bands. The analyzer's input is terminated in 50 ohms. In Band 0, the test first measures the average noise at 10 and 100 kHz in zero span. For the rest of Band 0, and for all the remaining bands, the test tunes the analyzer frequency across the band, uses the marker to locate the frequency with the highest response, and then reads the average noise in zero span.

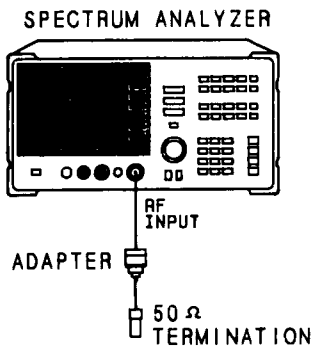


Figure 3-3. Displayed Average Noise Test Setup

EQUIPMENT

- 50Ω Termination HP 909D
- Adapters:
- Type N (m) to APC 3.5 (f) HP 1250-1744
- Type N (m) to BNC (f) HP 1250-1476

Cables:
 BNC, 122 cm (48 in.) HP 10503A

PROCEDURE

Displayed Average Noise, Band 0

1 Connect the CAL OUTPUT to the RF INPUT 50Ω. Press the PRESET key on the HP 8562A/B and set the controls as follows:

SPAN 0 Hz
 CENTER FREQ 300 MHz
 REF LVL -10 dBm
 ATTEN 0 dB
 RES BW 100 Hz
 VIDEO BW 1 Hz

- 2 Press the MARKER ON key, the AMPLITUDE key, [MORE], and [REF LVL CAL].
- 3 Use the knob or step keys to adjust the REF LEVEL CAL # until the MKR amplitude is -10.00 dBm ±0.17 dB.
- 4 Connect the HP 909D 50Ω termination to the HP 8562A/B RF INPUT 50Ω as shown in Figure 3-3.
- 5 On the HP 8562A/B, press the AMPLITUDE key, the 5 key, the 0 key, and the -dBm key.
- 6 Press the TRIG key, [SINGLE], [SINGLE], and the MARKER ON key. Read the marker amplitude and record it in Table 3-6 as the Displayed Average Noise Level at 10 kHz.
- 7 Change the HP 8562A/B center frequency to 100 kHz and press the TRIG key and [SINGLE]. Read the marker amplitude displayed at the upper right-hand corner of the screen and record it in Table 3-6 as the Displayed Average Noise Level at 100 kHz.
- 8 Set the HP 8562A/B controls as follows:

START FREQ 1 MHz
 STOP FREQ 2.9 GHz
 MARKER OFF
 RES BW 1 MHz
 VIDEO BW 10 kHz

- 9 Trigger a single sweep and press the MARKER ON key and [MKRNOISE ON]. Use the front-panel knob to move the marker to the highest average noise level.
- 10 Press the MKR-> key, [MARKER->CF], the SPAN key, the 0 key, the Hz key, and the MARKER OFF key. Set the RES BW to 100 Hz and the VIDEO BW to 1 Hz.
- 11 Press the TRIG key, [SINGLE], and the MARKER ON key.

12. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 1 MHz to 2.9 GHz.

Displayed Average Noise, Band 1

13. Set the HP 8562A/B controls as follows:

| | |
|----------------------|----------|
| START FREQ | 2.9 GHz |
| STOP FREQ | 6.46 GHz |
| MARKER | [OFF] |
| RES BW | 1 MHz |
| VIDEO BW | 10 kHz |

14. Repeat steps 9 through 11.

15. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 2.9 GHz to 6.46 GHz.

Displayed Average Noise, Band 2

16. Set the HP 8562A/B controls as follows:

| | |
|----------------------|----------|
| START FREQ | 6.46 GHz |
| STOP FREQ | 13.0 GHz |
| MARKER | [OFF] |
| RES BW | 1 MHz |
| VIDEO BW | 10 kHz |

17. Repeat steps 9 through 11.

18. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 6.46 to 13.0 GHz.

Displayed Average Noise, Band 3

19. Set the HP 8562A/B controls as follows:

| | |
|----------------------|----------|
| START FREQ | 13.0 GHz |
| STOP FREQ | 19.7 GHz |
| MARKER | [OFF] |
| RES BW | 1 MHz |
| VIDEO BW | 10 kHz |

20. Repeat steps 9 through 11.

21. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 13.0 GHz to 19.7 GHz.

Displayed Average Noise, Band 4

22. Set the HP 8562A/B controls as follows:

START FREQ 19.7 GHz
 STOP FREQ 22.0 GHz
 MARKER [OFF]
 RES BW 1 MHz
 VIDEO BW 10 kHz

23. Repeat steps 9 through 11.

24. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 19.7 GHz to 22.0 GHz.

25. The displayed average noise level readings should be lower than the specifications listed in Table 3-6.

Table 3-6. Displayed Average Noise

| Frequency | Displayed Average Noise Level (dBm) | Specification (dBm) | | Measurement Uncertainty (dB) |
|----------------------|-------------------------------------|---------------------|----------|------------------------------|
| | | HP 8562A | HP 8562B | |
| 10 kHz | _____ | -90 | -90 | +1.74/-1.98 |
| 100 kHz | _____ | -100 | -100 | +1.74/-1.98 |
| 1 MHz to 2.9 GHz | _____ | -121 | -121 | +1.74/-1.98 |
| 2.9 GHz to 6.46 GHz | _____ | -121 | -121 | +1.74/-1.98 |
| 6.46 GHz to 13.0 GHz | _____ | -110 | -110 | +1.74/-1.98 |
| 13.0 GHz to 19.7 GHz | _____ | -105 | -105 | +1.74/-1.98 |
| 19.7 GHz to 22 GHz | _____ | -100 | -100 | +1.74/-1.98 |

3-27. Resolution Bandwidth Switching and IF Alignment Uncertainty

SPECIFICATION

Resolution Bandwidth Switching Uncertainty:

100 Hz to 1 MHz RES BW: $<\pm 0.5$ dB (referenced to 300 kHz RES BW)

IF Alignment Uncertainty (additional uncertainty when using narrow resolution bandwidths):

300 Hz RES BW: $<\pm 0.5$ dB

100 Hz RES BW: $<\pm 2$ dB

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test utilizes the CAL OUTPUT signal for measuring the switching uncertainty and IF alignment uncertainty between resolution bandwidths. At each resolution bandwidth setting, the displayed amplitude variation of the signal is measured. All measurements are referenced to the 300 kHz bandwidth.

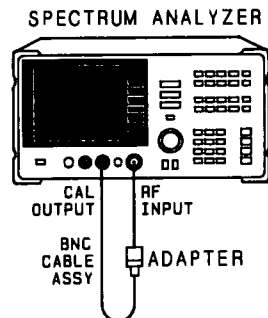


Figure 3-4. Resolution BW Switching and IF Alignment Uncertainty Test Setup

EQUIPMENT

Adapters:

Type N (m) to BNC (f) HP 1250-1476

Cables:

BNC, 122 cm (48 in.) HP 10503A

PROCEDURE

Setting the Reference

1. Connect the HP 8562A/B CAL OUTPUT to the RF INPUT 50Ω as shown in Figure 3-4.
2. Press the PRESET key, the AMPLITUDE key, [MORE], [IF ADJUST], and [FULL IF ADJ]. Wait for the IF ADJUST STATUS message to disappear and set the instrument controls as follows:

CENTER FREQ 300 MHz
 SPAN 1 MHz
 REF LVL -5 dBm
 dB/DIV 1 dB
 RES BW 300 kHz
 TRIGGER SINGLE

3. Press the AMPLITUDE key, [MORE], [IF ADJUST], [IF ADJ OFF], the TRIG key, [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].

Measuring Switching Uncertainty

4. Set the frequency SPAN and RES BW to the values listed in the second entry line of Table 3-7 (SPAN 5 MHz, RES BW 1 MHz).
5. Press the AMPLITUDE key, [MORE], [IF ADJUST], and [ADJ CURR IF STATE]. Wait for the IF ADJUST STATUS message to disappear and press the TRIG key, [SINGLE], and the PEAK SEARCH key. Record the Δ MKR amplitude in the Actual Δ MKR Reading column of Table 3-7. The Δ MKR reading should be within the limits shown.
6. Repeat step 5 for each set of frequency SPAN and RES BW settings in Table 3-7.

Table 3-7. Resolution BW Switching and IF Alignment Uncertainty

| HP 8562A | | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|----------|---------|---------------|-------------|----------|------------------------------|
| Span | Res BW | Min (dB) | Actual (dB) | Max (dB) | |
| 1 MHz | 300 kHz | 0 | 0 (Ref) | 0 | 0 |
| 5 MHz | 1 MHz | -0.5 | _____ | +0.5 | ±0.06 |
| 500 kHz | 100 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 100 kHz | 30 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 50 kHz | 10 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 3 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 1 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 300 Hz | -1.0 | _____ | +1.0 | ±0.11 |
| 10 kHz | 100 Hz | -2.5 | _____ | +2.5 | ±0.27 |

3-28. Resolution Bandwidth Accuracy and Selectivity

SPECIFICATION

Accuracy:

- 100 Hz RES BW: $<\pm 30\%$
- 300 Hz to 300 kHz RES BW: $<\pm 10\%$
- 1 MHz RES BW: $<\pm 25\%$

Selectivity (60 dB BW/ 3 dB BW): $<15:1$

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The accuracy of each of the instrument's 3 dB resolution bandwidths is measured. The 60 dB bandwidths are then determined and the results used to calculate the selectivity for each bandwidth (Selectivity = 60 dB BW/3 dB BW). A frequency synthesizer, phase-locked to the spectrum analyzer's 10 MHz standard, provides a 10.7 MHz measurement signal. A mixer upconverts this signal with the spectrum analyzer's 300 MHz CAL OUTPUT to produce a 310.7 MHz test signal. This signal is injected directly into the spectrum analyzer IF circuitry. The upper and lower 3 dB and 60 dB bandwidth frequencies may be determined by varying the frequency of the frequency synthesizer.

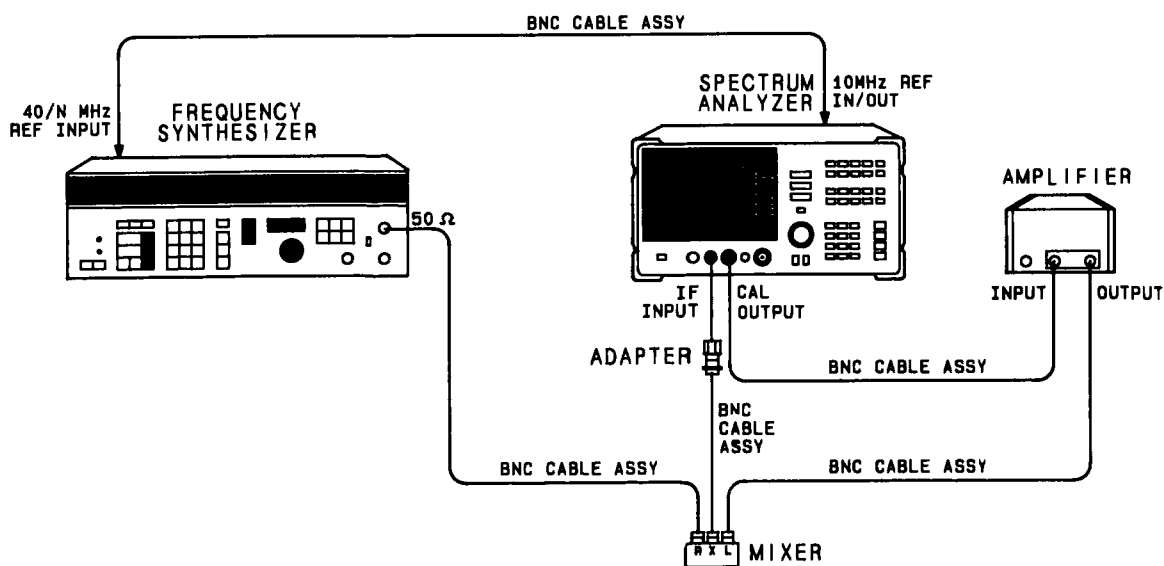


Figure 3-5. Resolution BW Accuracy/Selectivity Test Setup

EQUIPMENT

| | |
|---|--------------|
| Frequency Synthesizer | HP 3335A |
| Amplifier | HP 8447E |
| Double-Balanced Mixer | HP 10514A |
| Adapters: | |
| Type BNC (f) to SMA (m) | HP 1250-1200 |
| Cables: | |
| BNC, 122 cm (48 in.) (5 required) | HP 10503A |

PROCEDURE

Resolution BW Accuracy

1. Connect the equipment as shown in Figure 3-5. The HP 8562A/B provides the frequency reference for the HP 3335A.
2. Set the HP 3335A controls as follows:

| | |
|----------------------|----------|
| FREQUENCY | 10.7 MHz |
| AMPLITUDE | -20 dBm |
| AMPTD INCR | 1 dB |

3. On the HP 8562A/B, press the PRESET key, the AMPLITUDE key, [LOG dB/DIV], the 1 key, and the dB key.
4. On the HP 8562A/B, press the AMPLITUDE key, [MORE], [IF ADJUST], and [IF ADJ OFF]. Press the EXT key to place the analyzer in external mixing mode.
5. Adjust the HP 3335A output amplitude to place the signal displayed on the HP 8562A/B one to two divisions (1 dB to 2 dB) below the reference level. Set the HP 3335A AMPTD INCR to 3 dB.
6. On the HP 8562A/B, press the AMPLITUDE key, [MORE], [IF ADJUST], and [ADJ CURR IF STATE]. Wait for the IF ADJUST STATUS message to disappear before continuing.
7. Adjust the HP 3335A frequency for a peak signal amplitude on the HP 8562A/B display.
8. On the HP 3335A, press the AMPLITUDE key and the ↓ key.
9. On the HP 8562A/B, press the MARKER ON key and [MARKER DELTA].
10. Press the ↑ key on the HP 3335A.
11. Increase the HP 3335A frequency until the Δ MKR reading on the HP 8562A/B display reads 0 dB ±0.02 dB. Record the HP 3335A frequency as the Upper 3 dB Frequency in Table 3-8 for the current Resolution BW setting.
12. Decrease the HP 3335A frequency until the Δ MKR again reads 0 dB ±0.02 dB. Record the HP 3335A frequency as the Lower 3 dB Frequency in Table 3-8.

13. Subtract the Lower 3 dB Frequency from the Upper 3 dB Frequency. Record the result as the Actual 3 dB Bandwidth in Table 3-8 and as the 3 dB Bandwidth in Table 3-9. The bandwidth should be within the limits shown in Table 3-8.
14. Set the HP 3335A frequency to 10.7 MHz.
15. Press the MARKER OFF key on the HP 8562A/B.
16. Repeat steps 6 through 15 for the rest of the Resolution BW settings listed in column 1 of Table 3-8.

Resolution Bandwidth Selectivity

17. Set the HP 8562A/B controls as follows:

| | |
|--------------------|-------|
| RES BW | 1 MHz |
| dB/DIV | 10 dB |
| VIDEO BW | 1 kHz |

18. Adjust the HP 3335A output amplitude to place the signal displayed on the HP 8562A/B at the reference level.
19. Press the AMPLITUDE key, [MORE], [IF ADJUST], and [ADJ CURR IF STATE] on the HP 8562A/B. Wait for the IF ADJUST STATUS message to disappear before continuing.
20. Adjust the HP 3335A frequency for a peak signal amplitude on the HP 8562A/B display.
21. Adjust the HP 3335A AMPLITUDE to place the signal displayed on the HP 8562A/B at the reference level.

NOTE

If it is necessary to set the HP 3335A AMPLITUDE below -26 dBm in step 21, insufficient amplitude range will occur. If this is the case, put 10 dB of attenuation between the HP 3335A output and the R input of the mixer. Continue with step 21.

22. Set the HP 3335A AMPTD INCR to 60 dB. Press the AMPLITUDE key and the ↓ key.
23. On the HP 8562A/B, press the MARKER ON key and [MARKER DELTA].
24. Press the ↑ key on the HP 3335A.
25. Decrease the HP 3335A frequency until the HP 8562A/B Δ MKR reads 0 dB \pm 0.2 dB. Record the HP 3335A frequency as the Lower 60 dB Frequency in Table 3-9 for the current resolution bandwidth.
26. Increase the HP 3335A frequency until the HP 8562A/B Δ MKR reads 0 dB \pm 0.2 dB. Record the HP 3335A frequency as the Upper 60 dB Frequency in Table 3-9.
27. Subtract the Lower 60 dB Frequency from the Upper 60 dB Frequency and record the result as the 60 dB Bandwidth in Table 3-9.

28. Divide the 60 dB Bandwidth by the 3 dB Bandwidth and record the result as the Actual Shape Factor in Table 3-9. The shape factor should be less than the limit shown.

29. Set the HP 3335A FREQUENCY to 10.7 MHz.

30. Press the MARKER OFF key on the HP 8562A/B.

31. Repeat steps 19 through 30 for the rest of the resolution bandwidth settings listed in Table 3-9.

Table 3-8. Resolution Bandwidth Accuracy

| Res BW Setting | HP 3335A Frequency | | 3 dB Bandwidth | | | Measurement Uncertainty |
|----------------|----------------------|----------------------|----------------|--------|----------|-------------------------|
| | Upper 3 dB Frequency | Lower 3 dB Frequency | Min | Actual | Max | |
| 1 MHz | _____ | _____ | 750 kHz | _____ | 1.25 MHz | + 6.8 kHz/ -7.0 kHz |
| 300 kHz | _____ | _____ | 270 kHz | _____ | 330 kHz | + 2.04 kHz/ - 2.1 kHz |
| 100 kHz | _____ | _____ | 90 kHz | _____ | 110 kHz | + 680 Hz/ -700 Hz |
| 30 kHz | _____ | _____ | 27 kHz | _____ | 33 kHz | + 204 Hz/ - 210 Hz |
| 10 kHz | _____ | _____ | 9 kHz | _____ | 11 kHz | + 68 Hz/ -70 Hz |
| 3 kHz | _____ | _____ | 2.7 kHz | _____ | 3.3 kHz | + 20.4 Hz/ - 21 Hz |
| 1 kHz | _____ | _____ | 900 Hz | _____ | 1.1 kHz | + 6.8 Hz/ -7 Hz |
| 300 Hz | _____ | _____ | 270 Hz | _____ | 330 Hz | + 2.04 Hz/ - 2.1 Hz |
| 100 Hz | _____ | _____ | 70 Hz | _____ | 130 Hz | + 0.68 Hz/ - 0.7 Hz |

Table 3-9. Resolution Bandwidth Selectivity

| Res BW Setting | HP 3335A Frequency | | 60 dB BW | 3 dB BW | Shape Factor | | Measurement Uncertainty (of 60 dB BW) |
|----------------|-----------------------|-----------------------|----------|---------|--------------|-----|---------------------------------------|
| | Lower 60 dB Frequency | Upper 60 dB Frequency | | | Actual | Max | |
| 1 MHz | _____ | _____ | _____ | _____ | _____ | 15 | + 63 kHz/ - 66 kHz |
| 300 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 18.9 kHz/ - 19.8 kHz |
| 100 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 6.3 kHz/ - 6.6 kHz |
| 30 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 1.89 kHz/ - 1.98 kHz |
| 10 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 630 Hz/ - 660 Hz |
| 3 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 189 Hz/ - 198 Hz |
| 1 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 63 Hz/ - 66 Hz |
| 300 Hz | _____ | _____ | _____ | _____ | _____ | 15 | + 18.9 Hz/ - 19.8 Hz |
| 100 Hz | _____ | _____ | _____ | _____ | _____ | 15 | + 6.3 Hz/ - 6.6 Hz |

3-29. Input Attenuator Accuracy

SPECIFICATION

Accuracy (referenced to 10 dB input attenuation, for 20 to 70 dB settings):

1kHz to 2.9 GHz: $< \pm 0.6$ dB/10 dB step to a maximum of ± 1.8 dB

12.4 GHz to 19.4 GHz: $< \pm 1.3$ dB/10 dB step to a maximum of ± 2.5 dB

19.4 GHz to 22 GHz: $< \pm 1.8$ dB/10 dB step to a maximum of ± 3.5 dB

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures the input attenuator's switching accuracy and step-to-step accuracy over the full 70 dB range at 50 MHz. The frequency synthesizer is phase-locked to the spectrum analyzer's 10 MHz reference. Switching accuracy is referenced to the 10 dB attenuator setting. The attenuator in the synthesizer/level generator is the measurement standard. Step-to-step accuracy is calculated from switching accuracy data.

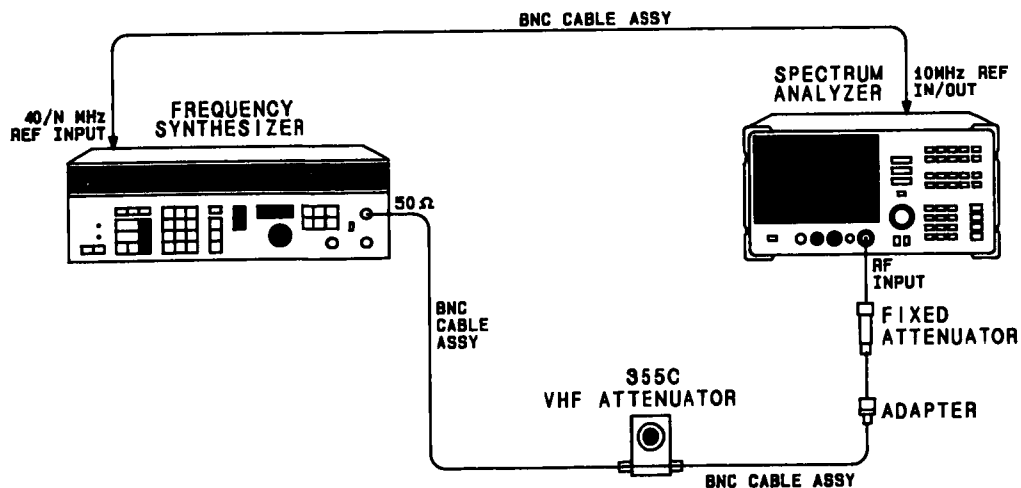


Figure 3-6. Input Attenuator Test Setup, 50 MHz

EQUIPMENT

| | |
|--|-----------------------|
| Synthesized Sweeper | HP 8340A |
| Synthesizer/Level Generator | HP 3335A |
| 20 dB Coaxial Fixed Attenuator | HP 8491B (Option 020) |
| 10 dB Coaxial Fixed Attenuator | HP 8493C (Option 010) |
| 1 dB VHF Step Attenuator | HP 355C |

Adapters:

| | |
|---|--------------|
| Type N (m) to BNC (f) | HP 1250-1476 |
| Type N (m) to APC 3.5 (f) | HP 1250-1744 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |

Cables:

| | |
|---|--------------|
| BNC, 122 cm (48 in.) (3 required) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

Attenuator Switching Accuracy

1. Connect the equipment as shown in Figure 3-6. The HP 8562A/B provides the frequency reference for the HP 3335A.
2. Set the HP 3335A controls as follows:

| | |
|----------------------|---------|
| FREQUENCY | 50 MHz |
| AMPLITUDE | -50 dBm |
| AMPTD INCR | 10 dB |
| OUTPUT | 50Ω |

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF] and set the controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 50 MHz |
| SPAN | 0 Hz |
| REF LVL | -70 dBm |
| dB/DIV | 1 dB |
| RES BW | 3 kHz |
| VIDEO BW | 1 Hz |

4. Set the HP 355C to 0 dB.
5. Adjust the HP 355C step attenuator to place the peak of the signal two to three divisions below the HP 8562A/B reference level.
6. On the HP 8562A/B, press the TRIG key, [SINGLE], and [SINGLE] and wait for a new sweep to finish. Press the MARKER ON key and [MARKER DELTA].
7. Set the HP 3335A amplitude to -40 dBm as indicated in row 2 of Table 3-10.
8. Set the HP 8562A/B REF LVL to -60 dBm and input attenuation to 20 dB as indicated in row 2 of Table 3-10.
9. On the HP 8562A/B, press the TRIG key and [SINGLE] and wait for a sweep to finish. Record the Δ MKR amplitude in Table 3-10 as the Actual Δ MKR Reading. The Δ MKR amplitude reading should be within the limits shown.
10. Repeat step 9 for each row of instrument settings indicated in Table 3-10.
11. Calculate the Step-to-Step Accuracy as described in the following steps and record the results in Table 3-10. Step-to-Step Accuracy should be within the limits shown in Table 3-10.

Step-to-Step Accuracy Calculation

NOTE

Step-to-Step Accuracy is the measure of how accurate a 10 dB step is. Step-to-Step Accuracy is calculated based upon the Actual Δ MKR readings in Table 3-10.

12. For the 20 dB ATTEN setting, subtract 10 dB from the Actual Δ MKR Reading to obtain the Step-to-Step Accuracy.

$$20 \text{ dB ATTEN: Step-to-Step Accuracy} = \text{Actual } \Delta \text{ MKR Reading} - 10 \text{ dB}$$

13. For the 30, 40, 50, 60, and 70 dB ATTEN settings, subtract the previous Actual Δ MKR Reading from the current Actual Δ MKR Reading. Subtract 10 dB from the result above to obtain the Step-to-Step Accuracy.

$$\text{Accuracy} = (\text{Current Actual } \Delta \text{ MKR} - \text{Previous Actual } \Delta \text{ MKR}) - 10 \text{ dB}$$

Table 3-10. Input Attenuator Accuracy, 50 MHz

| HP 3335A Amplitude (dBm) | HP 8562A Ref Lvl (dBm) | HP 8562A/B Atten (dBm) | Δ MKR Reading | | | Step-to-Step Accuracy | | Measurement Uncertainty (dB) |
|--------------------------------|------------------------------|------------------------------|---------------|----------------|-------------|-----------------------|--------------|------------------------------------|
| | | | Min (dB) | Actual (dB) | Max (dB) | Actual (dB) | Spec (dB) | |
| -50 | -70 | 10 | 0 (Ref) | 0 (Ref) | 0 (Ref) | 0 (Ref) | 0 (Ref) | 0 (Ref) |
| -40 | -60 | 20 | +8.2 | _____ | +11.8 | _____ | _____ | ±0.178 |
| -30 | -50 | 30 | +18.2 | _____ | +21.8 | _____ | _____ | ±0.178 |
| -20 | -40 | 40 | +28.2 | _____ | +31.8 | _____ | _____ | ±0.178 |
| -10 | -30 | 50 | +38.2 | _____ | +41.8 | _____ | _____ | ±0.178 |
| 0 | -20 | 20 | +48.2 | _____ | +51.8 | _____ | _____ | ±0.178 |
| +10 | -10 | 20 | +58.2 | _____ | +61.8 | _____ | _____ | ±0.178 |

3-30. IF Gain Uncertainty

SPECIFICATION

± 1.0 dB, reference levels 0 dBm to -80 dBm with 10 dB input attenuation

RELATED ADJUSTMENT

IF Amplitude Adjustment

DESCRIPTION

This test measures the log (10 dB and 1 dB) and linear IF gain uncertainties. A 0 dBm signal is displayed near the reference level for each test. The input signal level is decreased as the spectrum analyzer's reference level is decreased (IF gain increased). Since the signal level decreases in accurate steps, any error between the reference level and the signal level is caused by the analyzer's IF gain. The frequency synthesizer is phase-locked to the spectrum analyzer's 10 MHz reference.

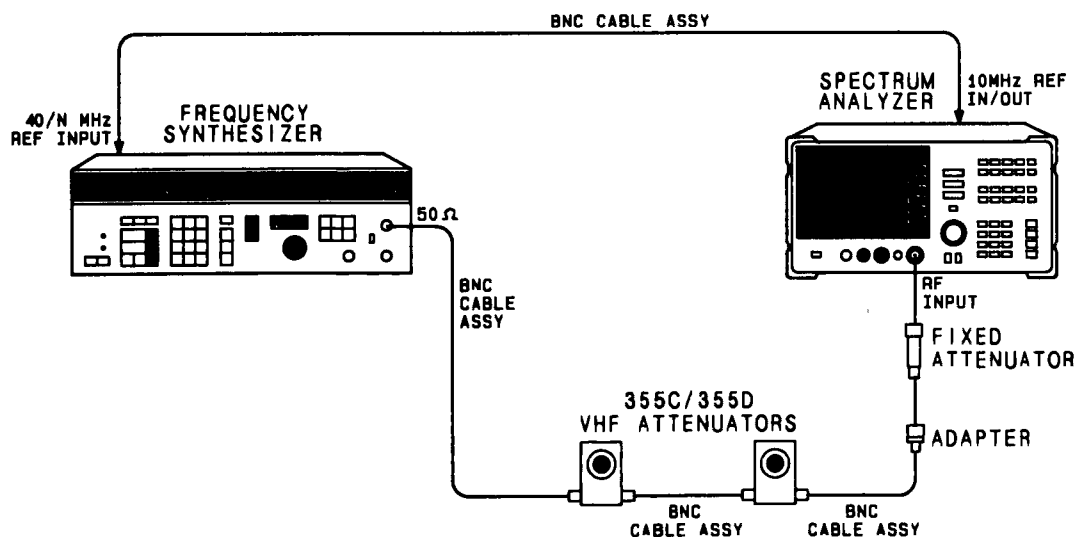


Figure 3-8. IF Gain Uncertainty Test Setup

EQUIPMENT

| | |
|--------------------------------|-----------------------|
| Frequency Synthesizer | HP 3335A |
| 10 dB Coaxial Fixed Attenuator | HP 8491B (Option 010) |
| 1 dB VHF Step Attenuator | HP 355C |

Adapters:

Type N (m) to BNC (f) HP 1250-1476

Cables:

BNC, 122 cm (48 in.) (3 required) HP 10503A

PROCEDURE

1. Connect the equipment as shown in Figure 3-8. The HP 8562A/B provides the frequency reference for the HP 3335A.

Log Gain Uncertainty (10 dB Steps)

2. Set the HP 3335A controls as follows:

FREQUENCY 50 MHz
 AMPLITUDE +10 dBm
 AMPTD INCR 10 dB
 OUTPUT 50Ω

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF]. Set the controls as follows:

CENTER FREQ 50 MHz
 SPAN 0 Hz
 dB/DIV 1 dB
 RES BW 1 kHz
 VIDEO BW 1 Hz

4. Set the HP 355C to 0 dB attenuation.
5. On the HP 8562A/B, press the MARKER ON key.
6. Adjust the HP 355C to place the signal 2 to 3 dB (two to three divisions) below the HP 8562A/B reference level.
7. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].
8. Press the AMPLITUDE key on the HP 3335A.
9. Press the ↓ key on the HP 3335A.
10. Set the HP 8562A/B REF LVL to -10 dBm.
11. On the HP 8562A/B, press the TRIG key and [SINGLE].
12. Record the HP 8562A/B Δ MKR amplitude reading in Table 3-15 as the Actual Δ MKR reading. The Δ MKR reading should be within the limits shown.
13. Repeat steps 9 through 12 for the remaining HP 8562A/B REF LVL settings listed in Table 3-15.

Log Gain Uncertainty (1 dB Steps)

14. Set the HP 3335A the AMPLITUDE key to +10 dBm and the AMPTD INCR key to 1 dB.

15. Set the HP 8562A/B controls as follows:

```

MARKER . . . . . MARKER NORMAL
REF LVL . . . . . 0 dBm
dB/DIV . . . . . 1 dB
TRIG . . . . . CONT
    
```

16. Adjust the HP 355C to place the signal 2 to 3 dB (two to three divisions) below the HP 8562A/B reference level.

17. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].

18. Press the AMPLITUDE key on the HP 3335A.

19. Press the ↓ key on the HP 3335A.

20. On the HP 8562A/B, press the AMPLITUDE key and the ↓ key.

21. Press the TRIG key and [SINGLE] on the HP 8562A/B.

22. Record the HP 8562A/B Δ MKR amplitude reading in Table 3-16 as the Actual Δ MKR reading. The Δ MKR reading should be within the limits shown.

23. Repeat steps 19 through 22 for the remaining HP 8562A/B REF LVL settings listed in Table 3-16.

Linear Gain Uncertainty

24. Set the HP 3335A the AMPLITUDE key to +10 dBm and the AMPTD INCR key to 10 dB.

25. Set the HP 8562A/B controls as follows:

```

MARKER . . . . . MARKER NORMAL
REF LVL . . . . . 0 dBm
AMPLITUDE SCALE . . . . . LINEAR
UNITS . . . . . dBm
TRIG . . . . . CONT
    
```

26. Adjust the HP 355C to place the signal two to three divisions below the HP 8562A/B reference level. The marker should read between -2 dBm and -3 dBm.

27. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].

28. Press the AMPLITUDE key on the HP 3335A.

29. Press the ↓ key on the HP 3335A.

Performance Tests

30. Set the HP 8562A/B REF LVL to -10 dBm.
31. On the HP 8562A/B, press the TRIG key and [SINGLE].
32. Record the HP 8562A/B Δ MKR amplitude reading in Table 3-17 as the Actual Δ MKR reading. The Δ MKR reading should be within the limits shown.
33. Repeat steps 29 through 32 for the remaining HP 8562A/B REF LVL settings listed in Table 3-17.
34. In Table 3-15, locate the Actual Δ MKR Reading with the greatest deviation from its corresponding REF LVL setting. Subtract the REF LVL setting from the Δ MKR Reading and record the result below.

Maximum Log IF Gain Uncertainty (10 dB Steps): _____ dB

35. In Table 3-16, locate the Actual Δ MKR Reading with the greatest deviation from its corresponding REF LVL setting. Subtract the REF LVL setting from the Δ MKR Reading and record the result below.

Maximum Log IF Gain Uncertainty (1 dB Steps): _____ dB

36. In Table 3-17, locate the Actual Δ MKR Reading with the greatest deviation from its corresponding REF LVL setting. Subtract the REF LVL setting from the Δ MKR Reading and record the result below.

Maximum Linear Gain Uncertainty: _____ dB

Table 3-15. Log IF Gain Uncertainty (10 dB Steps)

| HP 8562A/B Ref Lvl (dBm) | HP 3335A Amplitude (dBm) | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|--------------------------------|--------------------------------|----------------------|----------------|-------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | |
| 0 | +10 (Ref) | 0 | 0 (Ref) | 0 | ± 0.035 |
| -10 | 0 | -11 | _____ | -9 | ± 0.035 |
| -20 | -10 | -21 | _____ | -19 | ± 0.035 |
| -30 | -20 | -31 | _____ | -29 | ± 0.035 |
| -40 | -30 | -41 | _____ | -39 | +0.038/-0.039 |
| -50 | -40 | -51 | _____ | -49 | +0.038/-0.039 |
| -60 | -50 | -61 | _____ | -59 | +0.093/-0.095 |
| -70 | -60 | -71 | _____ | -69 | +0.093/-0.095 |
| -80 | -70 | -81 | _____ | -79 | +0.093/-0.095 |

Table 3-16. Log IF Gain Uncertainty (1 dB Steps)

| HP 8562A/B Ref Lvl (dBm) | HP 3335A Amplitude (dBm) | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|--------------------------------|--------------------------------|----------------------|----------------|-------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | |
| 0 | +10 (Ref) | 0 | 0 (Ref) | 0 | ± 0.035 |
| -1 | +9 | -2 | _____ | 0 | ± 0.035 |
| -2 | +8 | -3 | _____ | -1 | ± 0.035 |
| -3 | +7 | -4 | _____ | -2 | ± 0.035 |
| -4 | +6 | -5 | _____ | -3 | ± 0.035 |
| -5 | +5 | -6 | _____ | -4 | ± 0.035 |
| -6 | +4 | -7 | _____ | -5 | ± 0.035 |
| -7 | +3 | -8 | _____ | -6 | ± 0.035 |
| -8 | +2 | -9 | _____ | -7 | ± 0.035 |
| -9 | +1 | -10 | _____ | -8 | ± 0.035 |
| -10 | 0 | -11 | _____ | -9 | ± 0.035 |
| -11 | -1 | -12 | _____ | -10 | ± 0.035 |
| -12 | -2 | -13 | _____ | -11 | ± 0.035 |

Table 3-17. Linear IF Gain Uncertainty

| HP 8562A/B Ref Lvl (dBm) | HP 3335A Amplitude (dBm) | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|--------------------------------|--------------------------------|----------------------|----------------|-------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | |
| 0 | +10 (Ref) | 0 | 0 (Ref) | 0 | ± 0.038 |
| -10 | 0 | -11.0 | _____ | -9.0 | ± 0.038 |
| -20 | -10 | -21.0 | _____ | -19.0 | ± 0.038 |
| -30 | -20 | -31.0 | _____ | -29.0 | ± 0.038 |
| -40 | -30 | -41.0 | _____ | -39.0 | ± 0.041 |
| -50 | -40 | -51.0 | _____ | -49.0 | ± 0.041 |
| -60 | -50 | -61.0 | _____ | -59.0 | + .094 / - .097 |
| -70 | -60 | -71.0 | _____ | -69.0 | + .094 / - .097 |
| -80 | -70 | -81.0 | _____ | -79.0 | + .094 / - .097 |

3-31. Scale Fidelity

SPECIFICATION

Log Scale Fidelity: $<\pm 0.4$ dB/4 dB to a maximum of ± 1.5 dB over 0 to 90 dB range

Linear Scale Fidelity: $<\pm 3\%$ of Reference Level

RELATED ADJUSTMENT

IF Amplitude Adjustment

DESCRIPTION

The 10 dB, 2 dB, and linear scales are tested for fidelity. A -10 dBm signal is displayed at the reference level for each scale. As the input signal level is decreased, the displayed signal level is compared to the reference level. The test also measures the incremental step errors. Figure 3-9 illustrates the test setup used for the test. The frequency synthesizer is phase-locked to the spectrum analyzer's 10 MHz reference.

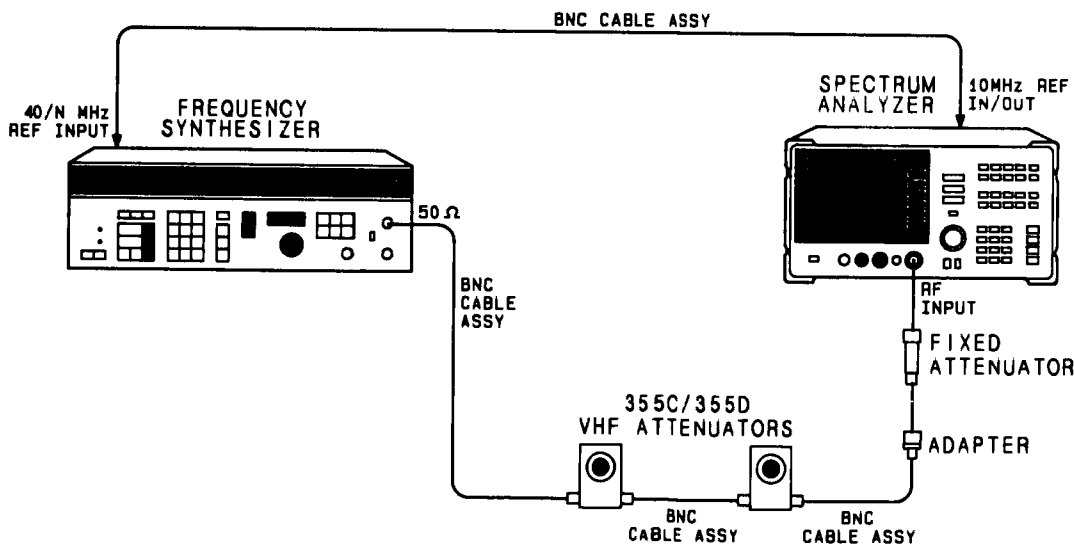


Figure 3-9. Scale Fidelity Test Setup

EQUIPMENT

| | |
|--|-----------------------|
| Frequency Synthesizer | HP 3335A |
| 10 dB Coaxial Fixed Attenuator | HP 8491B (Option 010) |
| 1 dB VHF Step Attenuator | HP 355C |
| 10 dB VHF Step Attenuator | HP 355D |

Adapters:

| | |
|---------------------------------|--------------|
| Type N (m) to BNC (f) | HP 1250-1476 |
|---------------------------------|--------------|

Cables:

| | |
|---|-----------|
| BNC, 122 cm (48 in.) (3 required) | HP 10503A |
|---|-----------|

PROCEDURE

1. Connect the equipment as shown in Figure 3-9. The HP 8562A/B provides the frequency reference for the HP 3335A.

2. Set the HP 3335A controls as follows:

| | |
|---------------------|---------|
| FREQUENCY | 50 MHz |
| AMPLITUDE | +10 dBm |
| AMPL INCR | 0.05 dB |
| OUTPUT | 50Ω |

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF]. Set the controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 50 MHz |
| SPAN | 0 Hz |
| REF LVL | -10 dBm |
| ATTEN | 0 dB |
| RES BW | 1 kHz |
| VIDEO BW | 30 Hz |

4. Set the HP 335C and HP 355D to 0 dB.

5. On the HP 8562A/B, press the MARKER ON key.

6. Adjust the HP 355C and HP 355D until the HP 8562A/B marker reads between -10 dBm and -11 dBm.

10 dB/DIV Log Scale

7. On the HP 3335A, press the AMPLITUDE key and use the INCR keys to adjust the amplitude until the HP 8562A/B marker reads exactly -10.00 dBm.

8. On the HP 3335A, set the AMPL INCR to 4 dB and press the AMPLITUDE key.

9. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].

10. Set the HP 3335A amplitude to the next value listed in Table 3-18 using the INCR ↓ key. Set the AMPTD INCR to 2 dB before setting the HP 3335A AMPLITUDE to the last power level. Press the TRIG key and [SINGLE] on the HP 8562A/B. Record the Δ MKR amplitude reading in Table 3-18 column 4. The Δ MKR amplitude should be within the limits shown. Repeat this step for each HP 3335A setting.
11. For each Δ MKR reading, subtract the previous Δ MKR reading. Add 10 dB to this number and record the result as the Incremental Error in Table 3-18. The Incremental Error should not exceed ±0.4 dB.

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 4 \text{ dB}$$

For the last step:

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 2 \text{ dB}$$

2 dB/DIV Log Scale

12. Set the HP 8562A/B controls as follows:

| | |
|------------------|------|
| TRIG | CONT |
| dB/DIV | 2 dB |

13. Set the HP 3335A controls as follows:

| | |
|---------------------|---------|
| AMPLITUDE | +10 dBm |
| AMPL INCR | 0.01 dB |

14. On the HP 8562A/B, press the MARKER ON key and [MARKER NORMAL].
15. Adjust the HP 355C and HP 355D until the HP 8562A/B marker reads between -10 dBm and -11 dBm.
16. On the HP 3335A, press the AMPLITUDE key. Use the HP 3335A INCR keys to adjust the amplitude until the HP 8562A/B marker reads exactly -10.00 dBm.
17. Set the HP 3335A AMPL INCR key to 4 dB and press the AMPLITUDE key.
18. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].
19. Set the HP 3335A amplitude to the next value listed in Table 3-19 using INCR ↓ key. Set the AMPTD INCR to 2 dB before setting the HP 3335A AMPLITUDE to the last power level. Press the TRIG key and [SINGLE] on the HP 8562A/B. Record the Δ MKR amplitude reading in Table 3-19 column 4. The Δ MKR amplitude should be within the limits shown. Repeat this step for each HP 3335A setting.
20. For each Δ MKR reading in Table 3-19, subtract the previous Δ MKR reading. Add 2 dB to this number and record the result as the Incremental Error in Table 3-19. The Incremental Error should not exceed ±0.4 dB.

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 4 \text{ dB}$$

For the last step:

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 2 \text{ dB}$$

Linear Scale

21. Set the HP 8562A/B controls as follows:

| | | |
|------------|-------|--------|
| TRIG | | CONT |
| LINEAR/LOG | | LINEAR |
| UNITS | | dBm |

22. Set the HP 3335A controls as follows:

| | | |
|-----------|-------|---------|
| AMPLITUDE | | +10 dBm |
| AMPL INCR | | 0.01 dB |

23. On the HP 8562A/B, press the MARKER ON key and [MARKER NORMAL].

24. Adjust the HP 355C and HP 355D until the HP 8562A/B marker reads between -10 dBm and -11 dBm.

25. On the HP 3335A, press the AMPLITUDE key and use the INCR keys to adjust the HP 3335A amplitude until the HP 8562A/B marker reads exactly -10.00 dBm.

26. Set the HP 3335A the AMPL INCR key to 2 dB and press the AMPLITUDE key.

27. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].

28. Set the HP 3335A amplitude to the next value listed in Table 3-20 using the the INCR ↓ key. Press the TRIG key and [SINGLE] on the HP 8562A/B. Record the Δ MKR amplitude reading in Table 3-20 column 4. The Δ MKR amplitude should be within the limits shown. Repeat this step for each HP 3335A setting.

29. In Table 3-18, locate the Actual Δ MKR Reading with the greatest deviation from its corresponding "(nominal) dB from REF LVL". Add the dB from REF LVL to the Actual Δ MKR Reading and record the result below.

Maximum Cumulative 10 dB Log Scale Fidelity: _____ dB

30. Record below the Incremental Error in Table 3-18 with the greatest deviation from 0 dB.

Maximum 10 dB Log Scale Incremental Error: _____ dB

31. In Table 3-19, locate the Actual Δ MKR Reading with the greatest deviation from its corresponding "(nominal) dB from REF LVL". Add the dB from REF LVL to the Actual Δ MKR Reading and record the result below.

Maximum Cumulative 2 dB Log Scale Fidelity: _____ dB

32. Record below the Incremental Error in Table 3-19 with the greatest deviation from 0 dB.

Maximum 2 dB Log Scale Incremental Error: _____ dB

Table 3-18. 10 dB/Div Log Scale Fidelity

| HP 3335A Amplitude (dBm, nominal) | dB from Ref Level (nominal) | Δ MKR Reading | | | Incremental Error (dB) | Measurement Uncertainty (dB) |
|---|-----------------------------------|---------------|----------------|-------------|------------------------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | | |
| +10 | 0 | 0 | 0 (Ref) | 0 | 0 (Ref) | 0 |
| +6 | -4 | -4.4 | _____ | -3.6 | _____ | +0.24/-0.25 |
| +2 | -8 | -8.8 | _____ | -7.2 | _____ | +0.24/-0.25 |
| -2 | -12 | -13.2 | _____ | -10.8 | _____ | +0.24/-0.25 |
| -6 | -16 | -17.5 | _____ | -14.5 | _____ | +0.24/-0.25 |
| -10 | -20 | -21.5 | _____ | -18.5 | _____ | +0.24/-0.25 |
| -14 | -24 | -25.5 | _____ | -22.5 | _____ | +0.24/-0.25 |
| -18 | -28 | -29.5 | _____ | -26.5 | _____ | +0.24/-0.25 |
| -22 | -32 | -33.5 | _____ | -30.5 | _____ | +0.241/-0.255 |
| -26 | -36 | -37.5 | _____ | -34.5 | _____ | +0.241/-0.255 |
| -30 | -40 | -41.5 | _____ | -38.5 | _____ | +0.241/-0.255 |
| -34 | -44 | -45.5 | _____ | -42.5 | _____ | +0.241/-0.255 |
| -38 | -48 | -49.5 | _____ | -46.5 | _____ | +0.241/-0.255 |
| -42 | -52 | -53.5 | _____ | -50.5 | _____ | +0.255/-0.270 |
| -46 | -56 | -57.5 | _____ | -54.5 | _____ | +0.255/-0.270 |
| -50 | -60 | -61.5 | _____ | -58.5 | _____ | +0.255/-0.270 |
| -54 | -64 | -65.5 | _____ | -62.5 | _____ | +0.255/-0.270 |
| -58 | -68 | -69.5 | _____ | -66.5 | _____ | +0.255/-0.270 |
| -62 | -72 | -73.5 | _____ | -70.5 | _____ | +0.255/-0.270 |
| -66 | -76 | -77.5 | _____ | -74.5 | _____ | +0.255/-0.270 |
| -70 | -80 | -81.5 | _____ | -78.5 | _____ | +0.255/-0.270 |
| -74 | -84 | -85.5 | _____ | -72.5 | _____ | +0.255/-0.270 |
| -78 | -88 | -89.5 | _____ | -86.5 | _____ | +0.255/-0.270 |
| -80 ¹ | -90 | -91.5 | _____ | -88.5 | _____ ² | +0.255/-0.270 |

¹ INCR keys cannot be used to set this step; key in the AMPLITUDE from the previous (-78 dBm, nominal) step minus 2 dB.

² This value should not exceed ±0.2 dB.

Table 3-19. 2 dB/Div Log Scale Fidelity

| HP 3335A Amplitude (dBm, nominal) | dB from Ref Level (nominal) | Δ MKR Reading | | | Incremental Error (dB) | Measurement Uncertainty (dB) |
|---|-----------------------------------|----------------------|----------------|-------------|------------------------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | | |
| +10 | 0 | 0 | 0 (Ref) | 0 | 0 (Ref) | 0 |
| +8 | 2 | -2.2 | _____ | -1.8 | _____ | ± 0.06 |
| +6 | 4 | -4.4 | _____ | -3.6 | _____ | ± 0.06 |
| +4 | 6 | -6.6 | _____ | -5.4 | _____ | ± 0.06 |
| +2 | 8 | -8.8 | _____ | -7.2 | _____ | ± 0.06 |
| 0 | 10 | -11.0 | _____ | -9.0 | _____ | ± 0.06 |
| -2 | 12 | -13.2 | _____ | -10.8 | _____ | ± 0.06 |
| -4 | 14 | -15.4 | _____ | -12.6 | _____ | ± 0.06 |
| -6 | 16 | -17.5 | _____ | -14.5 | _____ | ± 0.06 |
| -8 | 18 | -19.5 | _____ | -16.5 | _____ | ± 0.06 |

Table 3-20. Linear Scale Fidelity

| HP 3335A Amplitude (dBm, nominal) | dB from Ref Lvl (nominal) | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|---|---------------------------------|----------------------|----------------|-------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | |
| +10 | 0 | 0 | 0 (Ref) | 0 | 0 |
| +8 | 2 | -2.33 | _____ | -1.68 | + .033/ - .033 |
| +6 | 4 | -4.42 | _____ | -3.60 | + .034/ - .034 |
| +4 | 6 | -6.54 | _____ | -5.50 | + .037/ - .037 |
| +2 | 8 | -8.68 | _____ | -7.37 | + .041/ - .041 |
| 0 | 10 | -10.87 | _____ | -9.21 | + .046/ - .047 |
| -2 | 12 | -13.10 | _____ | -11.02 | + .054/ - .054 |
| -4 | 14 | -15.42 | _____ | -12.78 | + .064/ - .065 |
| -6 | 16 | -17.82 | _____ | -14.49 | + .078/ - .079 |
| -8 | 18 | -20.36 | _____ | -16.14 | + .118/ - .12 |

3-32. Residual FM

SPECIFICATION

Residual FM: $<50 \text{ Hz} \times N$ p-p in 100 ms in zero span

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The Residual FM Test measures the inherent short-term instability of the spectrum analyzer's LO system. With the analyzer placed in zero span, a stable signal is applied to the input and slope-detected on the linear portion of the IF bandwidth filter skirt. Any instability in the LO system transfers to the IF signal in the mixing process. The test determines the slope of the IF filter in Hz/dB and then measures the signal amplitude variation caused by the residual FM. Multiplying these two values gives the residual FM in Hz.

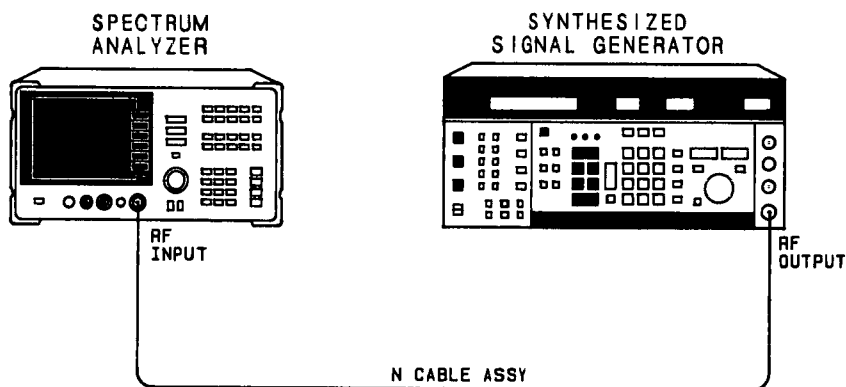


Figure 3-10. Residual FM Test Setup

EQUIPMENT

- Synthesized Signal Generator HP 8663A
- Cables:
- Type N, 183 cm (72 in.) HP 11500A

PROCEDURE

Determining the IF Filter Slope

1. Connect the equipment as shown in Figure 3-10.
2. Set the HP 8663A controls as follows:

FREQUENCY 2500 MHz
 CW OUTPUT -10 dBm

3. On the HP 8562A/B, press the PRESET key and set the controls as follows:

CENTER FREQ 2.5 GHz
 SPAN 1 MHz
 REF LEVEL -5 dBm
 dB/DIV 1 dB
 RES BW 3 kHz

4. On the HP 8562A/B, press the PEAK SEARCH key, [SIGNAL TRK ON], and the SPAN key. Press the ↓ key six times. Press the BW key, the 1 key, the kHz key, the MKR-> key, [MARKER->CF], [MARKER->REF LVL], the MARKER ON key, [SIG TRK OFF], and the MARKER OFF key.
5. On the HP 8562A/B press the TRIG key, [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].
6. Rotate the HP 8562A/B data entry knob counterclockwise until the Δ MKR reads -1 dB \pm 0.1 dB. Press [MARKER DELTA]. Rotate the data entry knob counterclockwise until the Δ MKR reads -4 dB \pm 0.1 dB.
7. Divide the Δ MKR frequency in Hertz by the Δ MKR amplitude in dB to obtain the slope of the RES BW filter. For example if the Δ MKR frequency is 380 Hz and the Δ MKR amplitude is 3.92 dB, the slope would be equal to 97 Hz/dB. Record the result below:

Slope: _____ Hz/dB

Measuring the Residual FM

8. On the HP 8562A/B, press the MARKER OFF key, the PEAK SEARCH key, and [MARKER DELTA]. Rotate the data entry knob counterclockwise until the Δ MKR reads -3 dB \pm 0.1 dB.
9. On the HP 8562A/B, press the MKR-> key, [MARKER NORMAL], [MARKER->CF], the SPAN key, and [ZERO SPAN]. Set the sweep time to 100 ms. Press the TRIG key, and [SINGLE].

NOTE

The displayed trace should be about three divisions below the reference level. If it is not, press [CONT], the FREQUENCY key, and use the data entry knob to place the displayed trace about three divisions below the reference level. Press the TRIG key and [SINGLE] then continue with step 10.

10. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA]. Rotate the data entry knob to position the active marker at the lowest point on the displayed trace. Read the Δ MKR amplitude, take its absolute value, and record the result as the Deviation.

Deviation: _____ dB

11. Calculate the Residual FM by multiplying the Slope recorded in step 7 by the Deviation recorded in step 10. Record the result below. The Residual FM should be less than 50 Hz

Residual FM: _____ Hz

3-33. Noise Sidebands

SPECIFICATION

Noise Sidebands: $<(-100 + 20 \text{ Log } N) \text{ dBc/Hz}$

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The noise sidebands of a 2.5 GHz, -10 dBm, signal are measured at an offset of 30 kHz from the carrier with a 1 kHz resolution bandwidth.

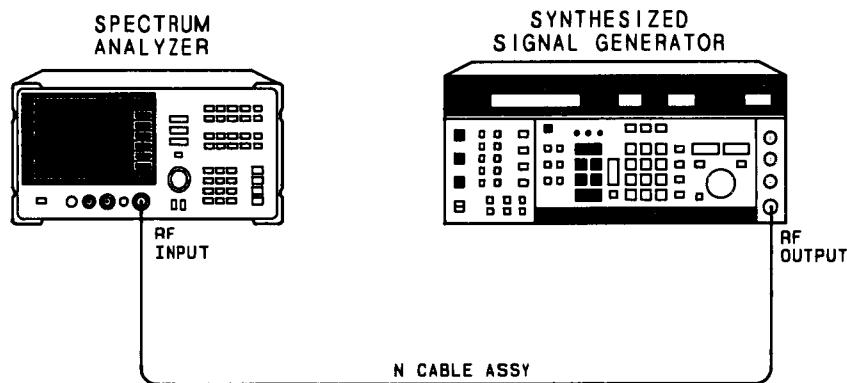


Figure 3-11. Noise Sidebands Test Setup

EQUIPMENT

- Synthesized Signal Generator HP 8663A
- Cables:
- Type N, 183 cm (72 in.) HP 11500A

PROCEDURE

1. Connect the equipment as shown in Figure 3-11.

2. Set the HP 8663A controls as follows:

FREQUENCY 2500 MHz
 CW OUTPUT -15 dBm

3. On the HP 8562A/B, press the PRESET key and set the controls as follows:

CENTER FREQ 2.5 GHz
 SPAN 1 MHz
 REF LEVEL -10 dBm
 ATTEN 0 dB
 CF STEP 30 kHz

4. On the HP 8562A/B, press the PEAK SEARCH key, [SIG TRK ON], and the SPAN key. Press the ↓ key six times. Wait for the completion of two sweeps and then press the MARKER ON key, [SIG TRK OFF], the BW key, the kHz key, the SPAN key, and [ZERO SPAN]. Press the BW key, [VIDEO BW], the 1 key, the 1 key, and the Hz key.

5. Adjust the HP 8663A amplitude as necessary to place the peak of the signal at the HP 8562A/B reference level.

6. On the HP 8562A/B, press the TRIG key, [SINGLE], and [SINGLE]. Wait for the completion of the sweep and press the MARKER ON key, [MKR NOISE ON], and [MARKER DELTA].

7. On the HP 8562A/B, press the FREQUENCY key, [CF STEP], the 3 key, the 0 key, the kHz key, [CENTER FREQ], and the ↑ key.

8. Press the TRIG key and [SINGLE] on the HP 8562A/B. Wait for the completion of the sweep and then record the Δ MKR amplitude in Table 3-21 column 2 as the Single Sideband Noise for +30 kHz offset.

9. On the HP 8562A/B, press the FREQUENCY key, the ↓ key, and the ↓ key.

10. Press the TRIG key and [SINGLE] on the HP 8562A/B. Wait for the completion of the sweep and then record the Δ MKR amplitude in Table 3-21 column 2 as the Single Sideband Noise for -30 kHz offset.

11. The values recorded in steps 8 and 10 should be less than -100 dBc/Hz.

Table 3-21. Noise Sidebands

| Offset (kHz) | Δ MKR Reading | | Measurement Uncertainty (dB) |
|--------------|-----------------|--------------|------------------------------|
| | Actual (dBc/Hz) | Max (dBc/Hz) | |
| +30 | _____ | -100 | +1.51/-1.53 |
| -30 | _____ | -100 | +1.51/-1.53 |

3-34. Image, Multiple, and Out-of-Band Responses

SPECIFICATION

Image, Multiple, and Out-of-Band Responses:

- <18 GHz: <-70 dBc
- <22 GHz: <-60 dBc

RELATED ADJUSTMENT

YTF Adjustment (HP 8562A)

DESCRIPTION

This performance test applies only to HP 8562A analyzers. Image and out-of-band responses are tested in each of the five frequency bands.

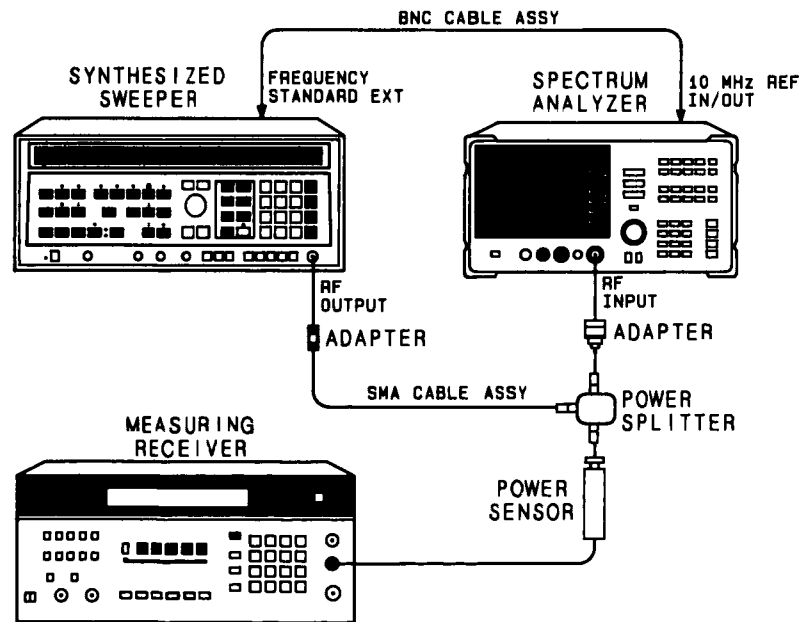


Figure 3-12. Image, Multiple, and Out-of-Band Responses Test Setup

EQUIPMENT

| | |
|-------------------------------|----------|
| Synthesized Sweeper | HP 8340A |
| Measuring Receiver | HP 8902A |
| Power Sensor | HP 8485A |

Adapters:

| | |
|---|--------------|
| Type N (m) to APC 3.5 (m) | HP 1250-1743 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |

Cables:

| | |
|--------------------------------|--------------|
| BNC, 122 cm (48 in.) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

Band 0

1. Connect the equipment as shown in Figure 3-12, but do not connect the power sensor to the power splitter.
2. Press the INSTR PRESET key on the HP 8340A, and set the controls as follows:

| | |
|--|---------|
| CW | 2 GHz |
| POWER LEVEL | -10 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. On the HP 8562A, press the PRESET key, the RECALL key, [MORE], and [FACTORY PRESEL PK]. Set the HP 8562A controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 2 GHz |
| SPAN | 10 kHz |
| REF LEVEL | -10 dBm |
| ATTEN | 0 dB |
| RES BW | 1 kHz |

4. Zero and calibrate the HP 8902A and HP 8485A. Enter the power sensor's 2 GHz calibration factor into the HP 8902A. Connect the HP 8485A to the HP 11667B Power Splitter.
5. Adjust the HP 8340A POWER LEVEL key for a -10 dBm ± 0.1 dB reading on the HP 8902A.
6. On the HP 8562A, press the PEAK SEARCH key, the MKR-> key, [MKR->REF LVL], the TRIG key, [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].
7. For each of the frequencies listed in Table 3-22 for Band 0, do the following:
 - a. Set the HP 8340A to the listed CW key frequency.
 - b. Enter the appropriate power sensor calibration factor into the HP 8902A.
 - c. Set the HP 8340A POWER LEVEL key for a -10 dBm reading on the HP 8902A.
 - d. Press the TRIG key and [SINGLE] on the HP 8562A. Wait for the completion of the sweep before continuing.
 - e. On the HP 8562A, press the PEAK SEARCH key and record the Δ MKR amplitude in Table 3-22 as the Response Amplitude. The Response Amplitude should be less than the specification listed in the table.

8. On the HP 8562A, press the MARKER OFF key, the TRIG key and [CONT].

Band 1

9. Set the HP 8562A center frequency to 4 GHz. Set the HP 8340A CW to 4 GHz.
10. Enter the power sensor's 4 GHz calibration factor into the HP 8902A.
11. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear and press the MARKER OFF key.
12. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 1.

Band 2

13. Set the HP 8562A center frequency to 9 GHz. Set the HP 8340A CW to 9 GHz.
14. Enter the power sensor's 9 GHz calibration factor into the HP 8902A.
15. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear and press the MARKER OFF key.
16. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 2.

Band 3

17. Set the HP 8562A center frequency to 15 GHz. Set the HP 8340A CW to 15 GHz.
18. Enter the power sensor's 15 GHz calibration factor into the HP 8902A.
19. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear and press the MARKER OFF key.
20. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 3.

Band 4

21. Set the HP 8562A center frequency to 21 GHz. Set the HP 8340A CW to 21 GHz.
22. Enter the power sensor's 21 GHz calibration factor into the HP 8902A.
23. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear and press the MARKER OFF key.
24. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 4.

Performance Tests

25. Record the maximum Response Amplitude from Table 3-22 for Band 0, 1, 2, and 3 entries.

Maximum Response Amplitude (<18 GHz): _____ dBc

26. Record the maximum Response Amplitude from Table 3-22 for Band 4.

Maximum Response Amplitude (<22 GHz): _____ dBc

Table 3-22. Image, Multiple, and Out-of-Band Responses

| Band | HP 8562A/B Center Freq (GHz) | HP 8340A [CW] (MHz) | Response Amplitude (dBc) | Specification (dBc) | Measurement Uncertainty (dB) |
|--|------------------------------------|---------------------------|--------------------------------|------------------------|------------------------------------|
| 0 | 2.0 | 1978.6 ¹ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 2021.4 ¹ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 1378.6 ¹ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 2621.4 ¹ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 9821.6 ² | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 7910.7 ² | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 1810.7 ³ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 289.3 ³ | _____ | -70 | +1.52/-1.57 |
| 1 | 4.0 | 3978.6 ¹ | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 4021.4 ¹ | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 3378.6 ¹ | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 4621.4 ¹ | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 289.3 ² | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 3721.4 ³ | _____ | -70 | +1.52/-1.56 |
| 2 | 9.0 | 8978.6 ¹ | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9021.4 ¹ | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 8378.6 ¹ | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9621.4 ¹ | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 289.3 ² | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9921.4 ³ | _____ | -70 | +1.52/-1.57 |
| 3 | 15.0 | 14978.6 ¹ | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 15021.4 ¹ | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 14378.6 ¹ | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 15621.4 ¹ | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 289.3 ² | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 14721.4 ³ | _____ | -70 | +1.53/-1.57 |
| 4 | 21.0 | 20978.6 ¹ | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21021.4 ¹ | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 20378.6 ¹ | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21621.4 ¹ | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 289.3 ² | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21921.4 ³ | _____ | -60 | +1.53/-1.59 |
| ¹ Image Response ² Out-of-Band Response ³ Multiple Response | | | | | |

3-35. Frequency Readout Accuracy/ Frequency Count Marker Accuracy

SPECIFICATION

Frequency Readout Accuracy: $<\pm[(\text{Center Frequency} \times 4 \times 10^{-6}) + (5\% \text{ of Span}) + (15\% \text{ of RES BW}) + 250 \text{ Hz}]$

Frequency Count Marker Accuracy: $<\pm[(\text{Marker Freq.} \times 4 \times 10^{-6}) + (50 \text{ Hz} \times N) + 1 \text{ LSD}]$

RELATED ADJUSTMENT

YTO Adjustment
10 MHz Frequency Reference Adjustment

DESCRIPTION

The accuracy of the HP 8562A/B frequency readout and frequency count marker is tested with an input signal of known frequency.

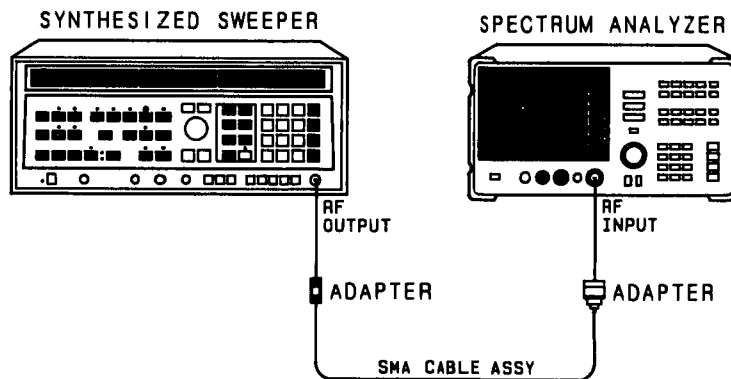


Figure 3-13. Frequency Readout and Frequency Count Accuracy Test Setup

EQUIPMENT

- Synthesized Sweeper HP 8340A
- Adapters:
- Type N (m) to APC 3.5 (f) HP 1250-1744
- Type APC 3.5 (f) to APC 3.5 (f) HP 5061-5311

Cables:
SMA, 61 cm (24 in.) HP 8120-1578

PROCEDURE

1. Connect the equipment as shown in Figure 3-13.

Frequency Readout Accuracy

2. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

CW 1.5 GHz
POWER LEVEL -10 dBm

3. On the HP 8562A/B, press the PRESET key and set the controls as follows:

CENTER FREQ 1.5 GHz
SPAN 1 MHz

4. *Omit this step if spectrum analyzer is an HP 8562B.* On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRSEL PK].
5. On the HP 8562A/B, press the PEAK SEARCH key. Record the MKR frequency in Table 3-23 as the Actual Marker Reading. The reading should be within the limits shown.
6. Repeat step 5 for all the frequency and span combinations listed in Table 3-23. Peak the HP 8562A preselector after tuning the analyzer's center frequency and HP 8340A the CW key to frequencies of 4 GHz and above.

Frequency Count Marker Accuracy

7. Set the HP 8562A/B the SPAN key to 1 MHz. Press the FREQ COUNT key and set [COUNTER RES] to 10 Hz.
8. Key in the HP 8340A CW frequencies and the HP 8562A/B center frequencies as indicated in Table 3-24. For each pair of settings, press the PEAK SEARCH key and record the MKR frequency at each point in Table 3-24. The marker readings should be within the limits shown.

Table 3-23. Frequency Readout Accuracy

| HP 8340A Frequency (GHz) | HP 8562A | | Marker Reading | | | Measurement Uncertainty (kHz) |
|--------------------------------|----------|----------------|----------------|-----------------|--------------|-------------------------------------|
| | Span | Center Freq | Min (GHz) | Actual (GHz) | Max (GHz) | |
| 1.5 | 1 MHz | 1.5 GHz | 1.499942 | _____ | 1.500058 | ±2.045 |
| 1.5 | 10 MHz | 1.5 GHz | 1.49948 | _____ | 1.50052 | ±17.075 |
| 1.5 | 20 MHz | 1.5 GHz | 1.49895 | _____ | 1.50105 | ±33.675 |
| 1.5 | 50 MHz | 1.5 GHz | 1.49745 | _____ | 1.50255 | ±83.675 |
| 1.5 | 100 MHz | 1.5 GHz | 1.4948 | _____ | 1.5052 | ±167.375 |
| 1.5 | 1 GHz | 1.5 GHz | 1.450 | _____ | 1.550 | ±1670.375 |
| 4.0 | 1 MHz | 4 GHz | 3.999932 | _____ | 4.000068 | ±2.67 |
| 4.0 | 10 MHz | 4 GHz | 3.99947 | _____ | 4.00053 | ±17.7 |
| 4.0 | 20 MHz | 4 GHz | 3.99894 | _____ | 4.00106 | ±34.3 |
| 4.0 | 50 MHz | 4 GHz | 3.99744 | _____ | 4.00256 | ±84.3 |
| 4.0 | 100 MHz | 4 GHz | 3.9948 | _____ | 4.0052 | ±168.0 |
| 4.0 | 1 GHz | 4 GHz | 3.950 | _____ | 4.050 | ±1.671 |
| 9.0 | 1 MHz | 9.0 GHz | 8.999912 | _____ | 9.000088 | ±3.92 |
| 9.0 | 10 MHz | 9.0 GHz | 8.99945 | _____ | 9.00055 | ±18.95 |
| 9.0 | 20 MHz | 9.0 GHz | 8.99892 | _____ | 9.00108 | ±35.55 |
| 9.0 | 50 MHz | 9.0 GHz | 8.99742 | _____ | 9.00258 | ±85.55 |
| 9.0 | 100 MHz | 9.0 GHz | 8.9948 | _____ | 9.0052 | ±169.25 |
| 9.0 | 1 GHz | 9.0 GHz | 8.950 | _____ | 9.050 | ±1672.95 |
| 16.0 | 1 MHz | 16.0 GHz | 15.99984 | _____ | 16.000116 | ±5.67 |
| 16.0 | 10MHz | 16.0 GHz | 15.99942 | _____ | 16.00058 | ±20.70 |
| 16.0 | 20 MHz | 16.0 GHz | 15.99889 | _____ | 16.00111 | ±37.3 |
| 16.0 | 50 MHz | 16.0 GHz | 15.99739 | _____ | 16.00261 | ±87.3 |
| 16.0 | 100 MHz | 16.0 GHz | 15.9948 | _____ | 16.0052 | ±171.0 |
| 16.0 | 1 GHz | 16.0 GHz | 15.950 | _____ | 16.050 | ±1674.0 |
| 21.0 | 1 MHz | 21.0 GHz | 20.999864 | _____ | 21.000136 | ±6.92 |
| 21.0 | 10 MHz | 21.0 GHz | 20.99940 | _____ | 21.00060 | ±21.95 |
| 21.0 | 20 MHz | 21.0 GHz | 20.99887 | _____ | 21.00113 | ±38.55 |
| 21.0 | 50 MHz | 21.0 GHz | 20.99737 | _____ | 21.00263 | ±88.55 |
| 21.0 | 100 MHz | 21.0 GHz | 20.9948 | _____ | 21.0052 | ±172.25 |
| 21.0 | 1 GHz | 21.0 GHz | 20.950 | _____ | 21.050 | ±1675.25 |

Table 3-24. Frequency Count Marker Accuracy

| HP 8340A Frequency (GHz) | HP 8562A Frequency (GHz) | Marker Frequency | | | Measurement Uncertainty (Hz) |
|--------------------------------|--------------------------------|------------------|-----------------|--------------|------------------------------------|
| | | Min (GHz) | Actual (GHz) | Max (GHz) | |
| 1.5 | 1.5 | 1.49999394 | _____ | 1.50000606 | ± 375 |
| 4.0 | 4.0 | 3.99998394 | _____ | 4.00001606 | ± 1000 |
| 9.0 | 9.0 | 8.99996389 | _____ | 9.00003611 | ± 2250 |
| 16.0 | 16.0 | 15.99993584 | _____ | 16.00006416 | ± 4000 |
| 21.0 | 21.0 | 20.99991579 | _____ | 21.00008421 | ± 5250 |

3-36. Pulse Digitization Uncertainty

SPECIFICATION

Pulse Digitization Uncertainty (Pulse Repetition Frequency >720/sweep time).

Peak-to-Peak:

Log $<\pm 1$ dB

Linear $<\pm 4\%$ of Reference Level

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures the ability of the analyzer's analog-to-digital circuitry to respond to pulsed RF signals. The synthesized sweeper is phase-locked to the spectrum analyzer's 10 MHz reference. Since the 1 dB/DIV and 5 dB/DIV scale factors are derived digitally from the 2 dB/DIV and 10 dB/DIV scale factors, respectively, it is only necessary to test the 1 dB/DIV, 5 dB/DIV, and Linear scale factors.

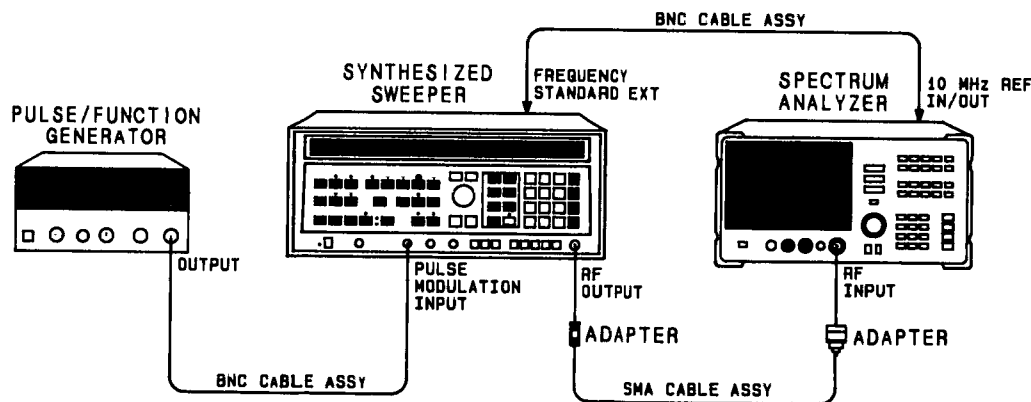


Figure 3-14. Pulse Digitization Uncertainty Test Setup

EQUIPMENT

| | |
|--------------------------------|----------|
| Synthesized Sweeper | HP 8340A |
| Pulse/Function Generator | HP 8116A |

Adapters:

| | |
|---------------------------------------|--------------|
| Type N (m) to APC 3.5 (f) | HP 1250-1744 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |

Cables:

- BNC, 122 cm (48 in.) (2 required) HP 10503A
- SMA, 61 cm (24 in.) HP 8120-1578

PROCEDURE

1. Connect the equipment as shown in Figure 3-14.
2. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

| | |
|--|----------|
| CW | 2500 MHz |
| POWER LEVEL | -15 dBm |
| MODULATION | PULSE |
| RF | ON |
| LEVELING | INT |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

- 3 Set the HP 8116A controls as follows:

| | |
|--------------------|---------|
| FUNCTION | PULSE |
| FREQ | 125 kHz |
| WID | 200 ns |
| AMP | 5.0V |
| OFS | 0.0V |
| MODE | NORM |
| CTRL | OFF |

4. On the HP 8562A/B, press the PRESET key, and set the controls as follows:

| | |
|-----------------------|----------|
| CENTER FREQ | 2500 MHz |
| SPAN | 0 Hz |
| REF LVL | -10 dBm |
| RES BW | 1 MHz |
| VIDEO BW | 3 MHz |
| DETECTOR | POS PEAK |
| dB/DIV | 5 dB |

5. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].
6. On the HP 8116A, use the range switch to set the frequency to 12.5 kHz.
7. On the HP 8562A/B, press the TRIG key, [SINGLE] and the PEAK SEARCH key. Read the Δ MKR amplitude. The value should be less than 1.0 dB.
8. Repeat steps 3 through 7 above, using a 1 dB/DIV scale on the HP 8562A/B. The Δ MKR amplitude reading in step 7 should be less than 1 dB.
9. Repeat steps 3 and 4.
10. Press the AMPLITUDE key, [LINEAR], [MORE], [UNITS], and the dBm key.

Performance Tests

11. Adjust the HP 8340A POWER LEVEL to place the signal one division below the reference level.
12. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].
13. On the HP 8116A, use the range switch to set the frequency to 12.5 kHz.
14. On the HP 8562A/B, press the TRIG key, [SINGLE], and the PEAK SEARCH key. Read the Δ MKR amplitude. The Δ MKR value should be between -0.40 dB and $+0.38$ dB.

3-37. Second Harmonic Distortion

SPECIFICATION

For frequencies <2.9 GHz: <-72 dBc for a -40 dBm mixer level*

(HP8562A) For frequencies >2.9 GHz: <-100 dBc for a -10 dBm mixer level*

(HP8562B) For frequencies >2.9 GHz: <-60 dBc for a -40 dBm mixer level*

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

A synthesized sweeper and low-pass filter provide the signal for measuring second harmonic distortion. The low-pass filter eliminates any harmonic distortion originating at the signal source. The HP 8562A/B's frequency response is calibrated out for the >2.9 GHz test. The synthesized sweeper is phase-locked to the spectrum analyzer's 10 MHz reference.

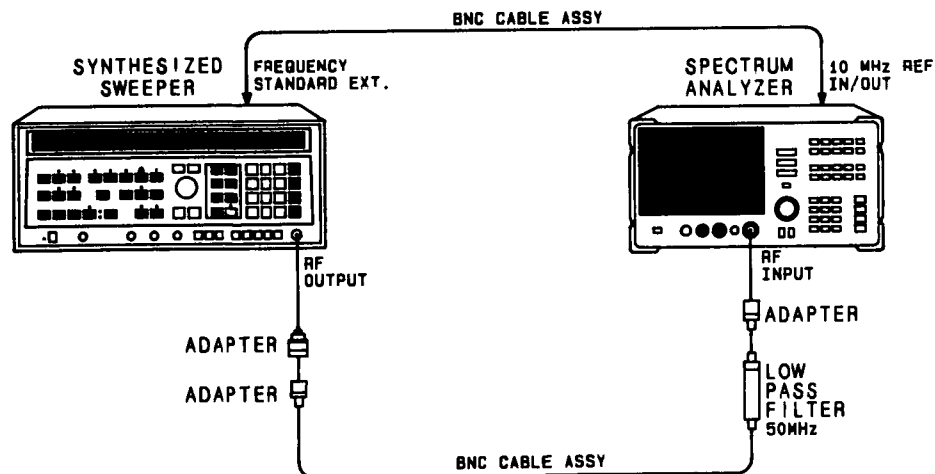


Figure 3-15. Second Harmonic Distortion Test Setup, Band 0

* Mixer Level = Input Level – Input Attenuation

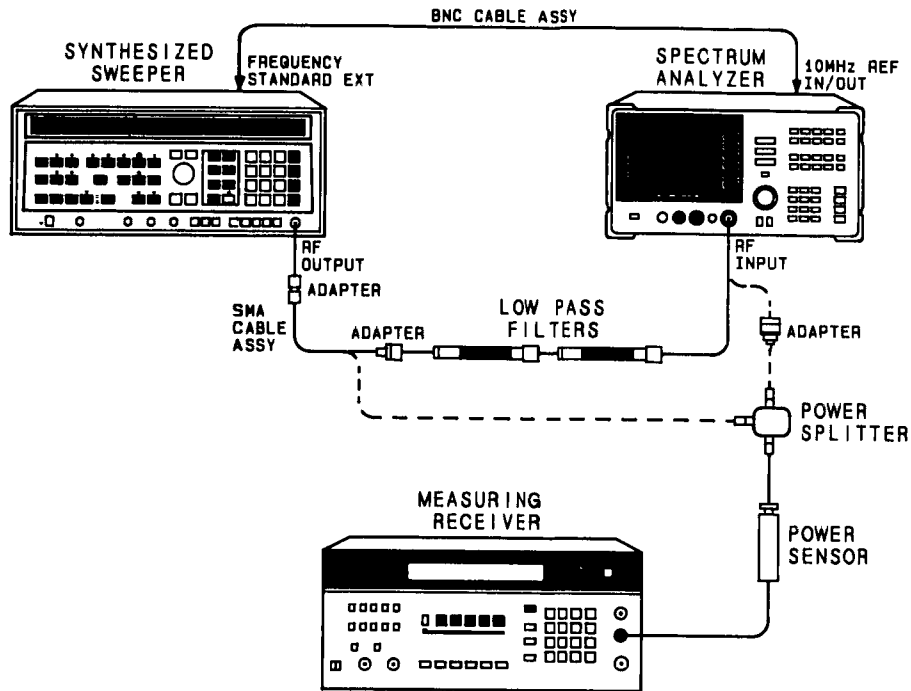


Figure 3-16. Second Harmonic Distortion Test Setup, Bands 1-4

EQUIPMENT

| | |
|--|--------------|
| Synthesized Sweeper | HP 8340A |
| Measuring Receiver | HP 8902A |
| Power Sensor | HP 8485A |
| 50 MHz low-pass filter | HP 0955-0306 |
| 4.1 GHz low-pass filter (2 required) | HP 360D |

Adapters:

| | |
|--|--------------|
| Type N (m) to BNC (f) (2 required) | HP 1250-1476 |
| Type N (m) to SMA (f) | HP 1250-1250 |
| Type N (f) to APC 3.5 (f) | HP 1250-1745 |
| Type N (m) to APC 3.5 (m) | HP 1250-1743 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |

Cables:

| | |
|---|--------------|
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

Distortion, Band 0

1. Connect the equipment as shown in Figure 3-15, using the 50 MHz low-pass filter and BNC cable.
2. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

| | |
|--|---------|
| CW | 30 MHz |
| POWER LEVEL | -30 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. On the HP 8562A/B press the PRESET key and set the controls as follows:

| | |
|-------------|---------|
| CENTER FREQ | 30 MHz |
| SPAN | 10 kHz |
| REF LEVEL | -30 dBm |

4. On the HP 8562A/B, press the PEAK SEARCH key. Adjust the HP 8340A power level for a HP 8562A/B marker amplitude reading of -30 dBm.
5. On the HP 8562A/B, press the TRIG key, [SINGLE], the PEAK SEARCH key, the MKR-> key, and [MARKER->CF STEP]. Press [MARKER DELTA], the FREQUENCY key, and the ↑ key.
6. On the HP 8562A/B, press the TRIG key and [SINGLE]. After the HP 8562A/B completes a new sweep, press the PEAK SEARCH key. The Δ MKR should read less than -72 dB (<-72 dBc).

Second Harmonic Distortion (Band 0): _____ dBc

Distortion, Bands 1-4

7. Zero and calibrate the HP 8902A/ HP 8485A combination in log mode (readout in dBm). Enter the power sensor's 3 GHz calibration factor into the HP 8902A.
8. Connect the equipment as shown in Figure 3-16 without the filters in place.
9. Set the HP 8562A/B controls as follows.

| | |
|-------------|----------|
| CENTER FREQ | 2.95 GHz |
| CF STEP | 2.95 GHz |
| REF LVL | 0 dBm |

10. Set the HP 8340A controls as follows:

| | |
|-------------|----------|
| CW | 2.95 GHz |
| POWER LEVEL | 0 dBm |

11. On the HP 8562A/B, press the TRIG key, [CONT], the MARKER OFF key, and the PEAK SEARCH key.

12. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for PEAKING message to disappear before continuing to the next step.
13. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR reading of -5 dBm.
14. Press the RATIO key on the HP 8902A. Enter the power sensor's 6 GHz calibration factor into the HP 8902A.
15. Set the HP 8340A CW to 5.9 GHz.
16. On the HP 8562A/B, press the FREQUENCY key, the ↑ key, and the PEAK SEARCH key.
17. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
18. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR reading of -5 dBm.
19. Record the HP 8902A reading below as the Frequency Response Error.

Frequency Response Error: _____ dB

20. Connect the equipment as shown in Figure 3-16 with the filters in place.

21. Set the HP 8340A controls as follows:

| | | |
|-------------|-------|-------------------|
| CW | | 2.95 GHz |
| POWER LEVEL | | -5 dBm |
| | | HP 8562B: -30 dBm |

22. On the HP 8562A/B, press the FREQUENCY key, the ↓ key, and the PEAK SEARCH key.
23. *Omit this step if spectrum analyzer is an HP 8562A.* On the HP 8562B, press the AMPLITUDE key, the 3 key, the 0 key, and the -dBm key.
24. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
25. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B marker amplitude reading of 0 dBm. HP 8562B: -30 dBm.
26. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the PEAK SEARCH key, [MARKER DELTA], the FREQUENCY key, and the ↑ key.
27. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the AMPLITUDE key, the 3 key, the 0 key, and the -dBm key.
28. Press the TRIG key and [SINGLE] on the HP 8562A/B.
29. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.

30. Wait for the completion of a new sweep, then press the PEAK SEARCH key. Record the Δ MKR amplitude reading below

Δ MKR Amplitude Reading: _____ dBc

31. Algebraically add the Frequency Response Error recorded in step 19 to the Δ MKR Amplitude Reading in step 30. Record the result below as the Second Harmonic Distortion (>2.7 GHz) The distortion should be less than -100 dBc (*HP 8562B: less than -60 dBc*).

Second Harmonic Distortion (>2.9 GHz): _____ dBc

3-38. Frequency Response

SPECIFICATION

In-band Frequency Response (10 dB Input Attenuation):

| | HP 8562A | HP 8562B |
|----------------|----------|----------|
| 1 kHz–2.90 GHz | ±1.2 dB | ±1.2 dB |
| 2.75–6.46 GHz | ±2.5 dB | ±2.0 dB |
| 6.46–13.0 GHz | ±3.5 dB | ±2.5 dB |
| 13.0–19.7 GHz | ±4.0 dB | ±3.0 dB |
| 19.7–22.0 GHz | ±4.3 dB | ±4.3 dB |

Frequency Response relative to the calibrator (300 MHz): $<\pm 5.1$ dB

Band Switching Uncertainty: $<\pm 0.5$ dB

RELATED ADJUSTMENT

YTF Adjustment (HP 8562A)

Frequency Response Adjustment

DESCRIPTION

The output of the synthesized sweeper is fed through a power splitter to a power sensor and the HP 8562A/B. The synthesized sweeper's power level is adjusted at 300 MHz to place the displayed signal at the HP 8562A/B's center horizontal graticule line. The measuring receiver, used as a power meter, is placed in RATIO mode. At each new synthesized sweeper frequency, and HP 8562A/B center frequency, the sweeper's power level is adjusted to place the signal at the center horizontal graticule line. The measuring receiver displays the inverse of the frequency response relative to the calibrator.

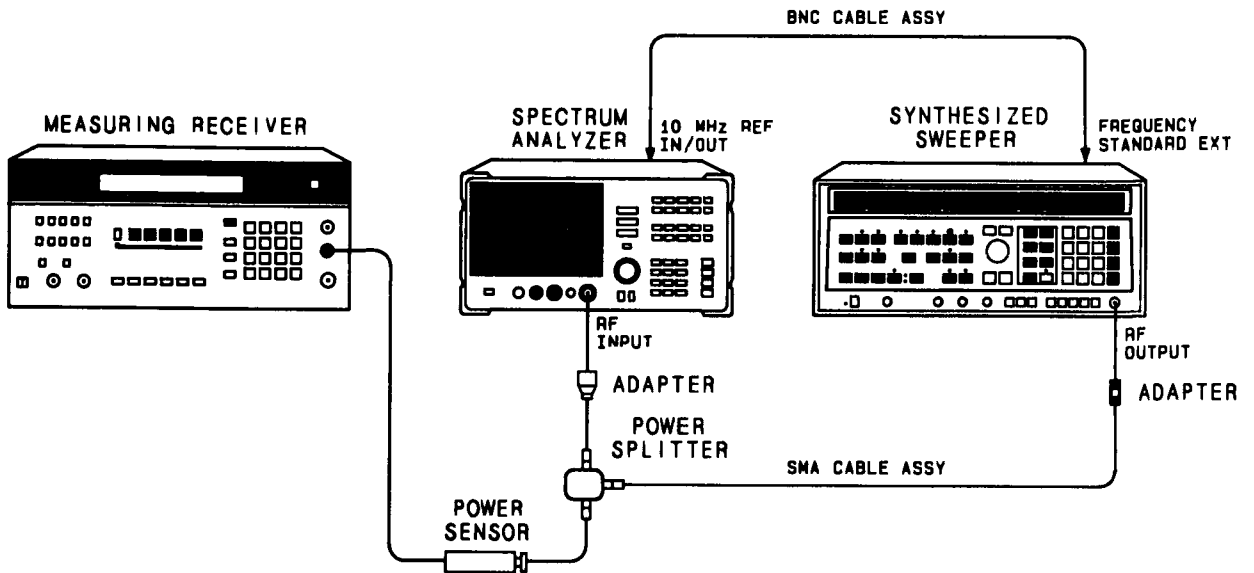


Figure 3-17. Frequency Response Test Setup, 50 MHz to 22 GHz

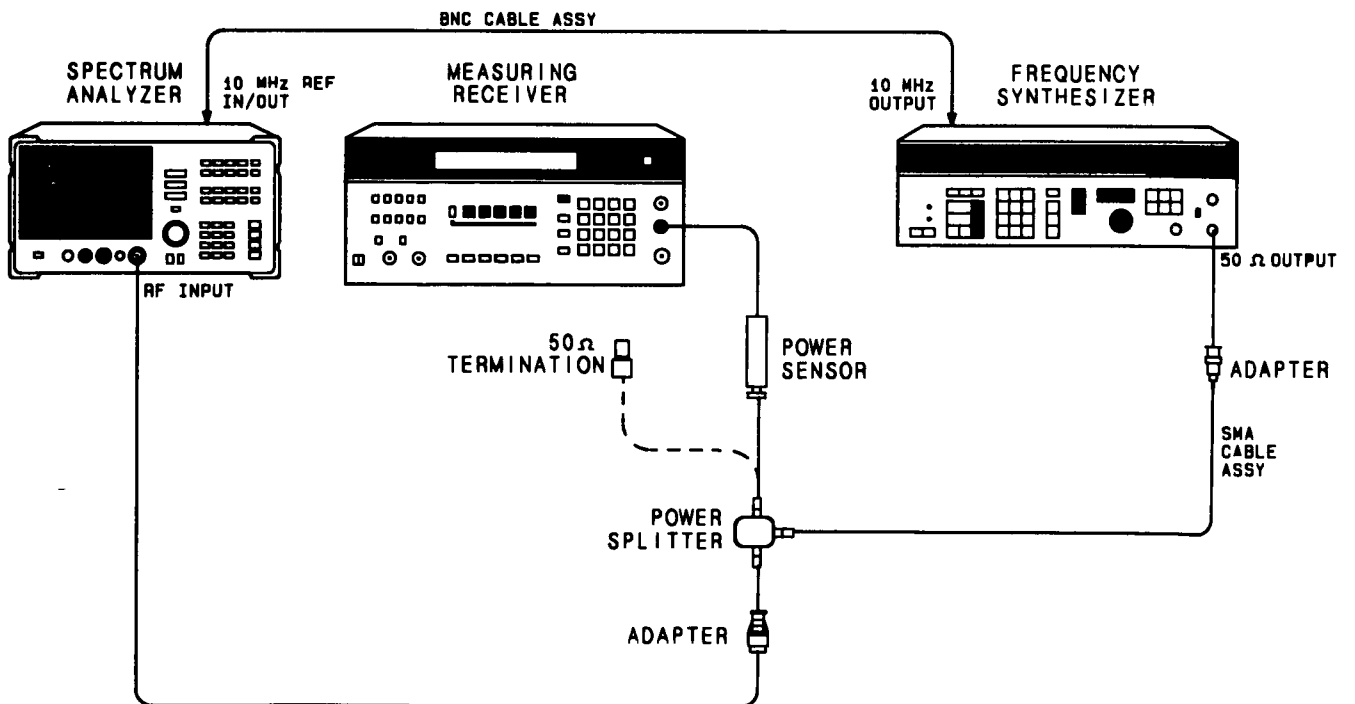


Figure 3-18. Frequency Response Test Setup, <50 MHz

EQUIPMENT

| | |
|--------------------------------------|-----------|
| Measuring Receiver | HP 8902A |
| Synthesized Sweeper | HP 8340A |
| Frequency Synthesizer | HP 3335A |
| Power Sensor | HP 8485A |
| Power Splitter | HP 11667B |
| Coaxial 50-Ohm Termination | HP 909D |

Adapters:

| | |
|--|--------------|
| Type N (m) to APC 3.5 (m) (2 required) | HP 1250-1743 |
| Type N (f) to BNC (f) | HP 1250-1474 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |

Cables:

| | |
|--------------------------------|--------------|
| BNC, 122 cm (48 in.) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

1. Zero and calibrate the HP 8902A and HP 8485A in log mode as described in the HP 8902A Operation Manual.
2. Connect the equipment as shown in Figure 3-17.
3. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

| | |
|--|---------|
| CW | 300 MHz |
| FREQ STEP | 100 MHz |
| POWER LEVEL | -4 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

4. On the HP 8562A/B, press the PRESET key. *If the analyzer is an HP 8562A, press the RECALL key, [MORE], and [FACTORY PRESEL PK].* Set the HP 8562A/B controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 300 MHz |
| CF STEP | 100 MHz |
| SPAN | 0 Hz |
| REF LVL | -5 dBm |
| dB/DIV | 1 dB |
| RES BW | 300 kHz |

5. On the HP 8562A/B, press the AMPLITUDE key, [MORE], [IF ADJUST], [IF ADJ ON], and the MARKER ON key.
6. Adjust the HP 8340A POWER LEVEL for a MKR amplitude reading of -10 dBm ±0.05 dB.
7. Press the RATIO key on the HP 8902A.

Frequency Response, Band 0 (≥ 50 MHz)

8. Set the HP 8340A CW to 50 MHz.
9. Set the HP 8562A/B [CENTER FREQ] to 50 MHz.
10. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of -10 dBm ± 0.05 dB.
11. Record the power ratio displayed on the HP 8902A here. Record the negative of the power ratio in Table 3-25.

HP 8902A reading at 50 MHz: _____ dB

12. Set the HP 8340A CW to 100 MHz.
13. Set the HP 8562A/B [CENTER FREQ] to 100 MHz.
14. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of -10 dBm ± 0.05 dB.
15. Record the negative of the power ratio displayed on the HP 8902A in Table 3-25 as the HP 8902A Reading.
16. On the HP 8340A, press the CW key and the \uparrow key and press the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-25. At each new frequency repeat steps 13 through 15, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-25.

Frequency Response, Band 1

17. On the HP 8562A/B, press the FREQUENCY key, the 2 key, the . key, the 9 key, the 5 key, and the GHz key.
18. Set the HP 8340A CW to 2.95 GHz.
19. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.*
20. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of -10 dBm ± 0.05 dB.
21. Record the negative of the power ratio displayed on the HP 8902A in Table 3-26.
22. On the HP 8340A, press CW and the \uparrow key and on the HP 8562A/B press the FREQUENCY key and the \uparrow key to step through the remaining frequencies listed in Table 3-26. At each new frequency repeat steps 19 through 21, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-26.

Frequency Response, Band 2

23. On the HP 8562A/B, press the FREQUENCY key, the 6 key, the . key, the 5 key, the GHz key, [CF STEP], the 2 key, the 0 key, the 0 key, and the MHz key.
24. Set the HP 8340A CW to 6.5 GHz and the FREQ STEP to 200 MHz.
25. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK].* Wait for the PEAKING message to disappear.
26. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
27. Record the negative of the power ratio displayed on the HP 8902A in Table 3-27 as the HP 8902A Reading.
28. Set the HP 8340A CW and the HP 8562A/B CENTER FREQ to 6.6 GHz. Repeat steps 25 through 27.
29. On the HP 8340A, press CW and the \uparrow key and on the HP 8562A/B press the FREQUENCY key and the \uparrow key to step through the remaining frequencies listed in Table 3-27. At each new frequency repeat steps 25 through 27, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-27.

Frequency Response, Band 3

30. On the HP 8562A/B, press the FREQUENCY key, the 1 key, the 3 key, the . key, the 1 key, and the GHz key.
31. Set the HP 8340A CW to 13.1 GHz.
32. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK].* Wait for the PEAKING message to disappear.
33. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
34. Record the negative of the power ratio displayed on the HP 8902A in Table 3-28 as the HP 8902A Reading.
35. Press CW and the \uparrow key on the HP 8340A and the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-28. At each new frequency repeat steps 32 through 34, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-28.

Frequency Response, Band 4

36. On the HP 8562A/B, press the FREQUENCY key, the 1 key, the 9 key, the . key, the 7 key, the 1 key, the GHz key, [CF STEP], the 1 key, the 0 key, the 0 key, and the MHz key.
37. Set the HP 8340A CW to 19.71 GHz and the FREQ STEP to 100 MHz.

38. If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.
39. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
40. Record the negative of the power ratio displayed on the HP 8902A in Table 3-29 as the HP 8902A Reading.
41. Set the HP 8340A CW and the HP 8562A/B CENTER FREQ to 19.8 GHz. Repeat steps 38 through 40.
42. Press CW and the \uparrow key on the HP 8340A and the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-29. At each new frequency repeat steps 38 through 40, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-29.

Frequency Response, Band 0 (<50 MHz)

43. Set the HP 8562A/B controls as follows:

| | |
|-----------------------|--------|
| CENTER FREQ | 50 MHz |
| RES BW | 100 Hz |
| MARKER | OFF |

44. Connect the equipment as shown in Figure 3-18. Set the HP 3335A controls as follows:

| | |
|----------------------|--------|
| FREQUENCY | 50 MHz |
| AMPLITUDE | -4 dBm |
| AMPTD INCR | 0.1 dB |

45. Enter the power sensor's 50 MHz calibration factor into the HP 8902A
46. Adjust the HP 3335A AMPLITUDE until the HP 8902A display reads the same value as recorded in step 11. Record the HP 3335A amplitude here and in Table 3-30.

HP 3335A Amplitude (50 MHz): _____ dB

47. Replace the HP 8485A power sensor with the HP 909D 50-ohm termination.
48. On the HP 8562A/B, press the MARKER ON key and [MARKER DELTA].
49. Set the HP 8562A/B [CENTER FREQ] and HP 3335A FREQUENCY to the frequencies listed in Table 3-30. At each frequency, adjust the HP 3335A AMPLITUDE for a Δ MKR amplitude reading of $0.00 \pm 0.05 \text{ dB}$. Record the HP 3335A AMPLITUDE setting in Table 3-30 as the HP 3335A Amplitude.
50. For each of the frequencies in Table 3-30, subtract the HP 3335A the AMPLITUDE Reading (column 2) from the HP 3335A AMPLITUDE (50 MHz) recorded in step 46. Record the result as the Response Relative to 50 MHz (column 3) of Table 3-30.
51. Add to each of the Response Relative to 50 MHz entries in Table 3-30 the HP 8902A Reading for 50 MHz listed in Table 3-21. Record the results as the Response Relative to 300 MHz in Table 3-30.

Test Results

52. Frequency Response, Band 0

- a. Enter most positive number from Table 3-30, column 4 _____ dB
- b. Enter most positive number from Table 3-25, column 2 _____ dB
- c. Enter more positive of numbers from (a) and (b) _____ dB
- d. Enter most negative number from Table 3-30, column 4 _____ dB
- e. Enter most negative number from Table 3-25, column 2 _____ dB
- f. Enter more negative of numbers from (d) and (e) _____ dB
- g. Subtract (f) from (c). The result should be less than 2.4 dB _____ dB
- h. The absolute values in (c) and (f) should be less than 5.1 dB.

53. Frequency Response, Band 1

- a. Enter most positive number from Table 3-26, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- b. Enter most negative number from Table 3-26, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- c. Subtract (b) from (a) _____ dB
The result should be less than 5.0 dB. *HP 8562B: 4.0 dB*

54. Frequency Response, Band 2

- a. Enter most positive number from Table 3-27, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- b. Enter most negative number from Table 3-27, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- c. Subtract (b) from (a) _____ dB
The result should be less than 7.0 dB. *HP 8562B: 5.0 dB*

55. Frequency Response, Band 3

- a. Enter most positive number from Table 2-28, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- b. Enter most negative number from Table 2-28, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- c. Subtract (b) from (a) _____ dB
The result should be less than 8.0 dB. *HP 8562B: 6.0 dB*

56. Frequency Response, Band 4

- a. Enter most positive number from Table 3-29, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- b. Enter most negative number from Table 3-29, column 2 _____ dB
The absolute value of this number should be less than 5.1 dB.
- c. Subtract (b) from (a) _____ dB
The result should be less than 8.6 dB.

Band Switching Uncertainty

- 57. In the top row of Table 3-31, enter the values recorded in the indicated steps. For example, if step 54(a) has a value of 1.22 dB, enter 1.22 dB in the top row of the Band 2 column.
- 58. In the left column of Table 3-31, enter the values recorded in the indicated steps. For example, if step 52(b) has a value of -0.95 dB, enter -0.95 dB in the left column of the Band 1 row.
- 59. Compute the other entries of Table 3-31 by taking the absolute value of the difference between the values in the left column and the top row.
- 60. Each computed entry should be less than the limit shown directly below the entry for HP 8562A analyzers. Limits shown in parentheses apply to HP 8562B analyzers.

Table 3-25. Frequency Response Band 0 (≥ 50 MHz)

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|-------------------------|
| Frequency (MHz) | HP 8902A Reading (dB) | CAL Factor Frequency (GHz) | Measurement Uncertainty |
| 50 | _____ | .05 | +.29/- .31 dB |
| 100 | _____ | .05 | +.29/- .31 dB |
| 200 | _____ | .05 | +.29/- .31 dB |
| 300 | _____ | .05 | 0 (Ref) |
| 400 | _____ | .05 | +.29/- .31 dB |
| 500 | _____ | .05 | +.29/- .31 dB |
| 600 | _____ | .05 | +.29/- .31 dB |
| 700 | _____ | .05 | +.29/- .31 dB |
| 800 | _____ | .05 | +.29/- .31 dB |
| 900 | _____ | .05 | +.29/- .31 dB |
| 1000 | _____ | .05 | +.29/- .31 dB |
| 1100 | _____ | 2.0 | +.29/- .31 dB |
| 1200 | _____ | 2.0 | +.29/- .31 dB |
| 1300 | _____ | 2.0 | +.29/- .31 dB |
| 1400 | _____ | 2.0 | +.29/- .31 dB |
| 1500 | _____ | 2.0 | +.29/- .31 dB |
| 1600 | _____ | 2.0 | +.29/- .31 dB |
| 1700 | _____ | 2.0 | +.29/- .31 dB |
| 1800 | _____ | 2.0 | +.29/- .31 dB |
| 1900 | _____ | 2.0 | +.29/- .31 dB |
| 2000 | _____ | 2.0 | +.29/- .31 dB |
| 2100 | _____ | 2.0 | +.29/- .31 dB |
| 2200 | _____ | 2.0 | +.29/- .31 dB |
| 2300 | _____ | 2.0 | +.29/- .31 dB |
| 2400 | _____ | 2.0 | +.29/- .31 dB |
| 2500 | _____ | 3.0 | +.29/- .31 dB |
| 2600 | _____ | 3.0 | +.29/- .31 dB |
| 2700 | _____ | 3.0 | +.29/- .31 dB |
| 2800 | _____ | 3.0 | +.29/- .31 dB |
| 2900 | _____ | 3.0 | +.29/- .31 dB |

Table 3-26. Frequency Response, Band 1

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|-------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | CAL Factor Frequency (GHz) | Measurement Uncertainty |
| 2.95 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.05 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.15 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.25 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.35 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.45 | _____ | 3.0 | +0.43/-0.47 dB |
| 3.55 | _____ | 4.0 | +0.43/-0.47 dB |
| 3.65 | _____ | 4.0 | +0.43/-0.47 dB |
| 3.75 | _____ | 4.0 | +0.43/-0.47 dB |
| 3.85 | _____ | 4.0 | +0.43/-0.47 dB |
| 3.95 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.05 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.15 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.25 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.35 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.45 | _____ | 4.0 | +0.43/-0.47 dB |
| 4.55 | _____ | 5.0 | +0.43/-0.47 dB |
| 4.65 | _____ | 5.0 | +0.43/-0.47 dB |
| 4.75 | _____ | 5.0 | +0.43/-0.47 dB |
| 4.85 | _____ | 5.0 | +0.43/-0.47 dB |
| 4.95 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.05 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.15 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.25 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.35 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.45 | _____ | 5.0 | +0.43/-0.47 dB |
| 5.55 | _____ | 6.0 | +0.43/-0.47 dB |
| 5.65 | _____ | 6.0 | +0.43/-0.47 dB |
| 5.75 | _____ | 6.0 | +0.43/-0.47 dB |
| 5.85 | _____ | 6.0 | +0.43/-0.47 dB |
| 5.95 | _____ | 6.0 | +0.43/-0.47 dB |
| 6.05 | _____ | 6.0 | +0.43/-0.47 dB |
| 6.15 | _____ | 6.0 | +0.43/-0.47 dB |
| 6.25 | _____ | 6.0 | +0.43/-0.47 dB |
| 6.35 | _____ | 6.0 | +0.43/-0.47 dB |
| 6.45 | _____ | 6.0 | +0.43/-0.47 dB |

Table 3-27. Frequency Response, Band 2

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|-------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | CAL Factor Frequency (GHz) | Measurement Uncertainty |
| 6.5 | _____ | 60 | +0.43/-0.48 dB |
| 6.6 | _____ | 70 | +0.43/-0.48 dB |
| 6.8 | _____ | 70 | +0.43/-0.48 dB |
| 7.0 | _____ | 70 | +0.43/-0.48 dB |
| 7.2 | _____ | 70 | +0.43/-0.48 dB |
| 7.4 | _____ | 70 | +0.43/-0.48 dB |
| 7.6 | _____ | 80 | +0.43/-0.48 dB |
| 7.8 | _____ | 80 | +0.43/-0.48 dB |
| 8.0 | _____ | 80 | +0.43/-0.48 dB |
| 8.2 | _____ | 80 | +0.43/-0.48 dB |
| 8.4 | _____ | 80 | +0.43/-0.48 dB |
| 8.6 | _____ | 90 | +0.43/-0.48 dB |
| 8.8 | _____ | 90 | +0.43/-0.48 dB |
| 9.0 | _____ | 90 | +0.43/-0.48 dB |
| 9.2 | _____ | 90 | +0.43/-0.48 dB |
| 9.4 | _____ | 90 | +0.43/-0.48 dB |
| 9.6 | _____ | 100 | +0.43/-0.48 dB |
| 9.8 | _____ | 100 | +0.43/-0.48 dB |
| 10.0 | _____ | 100 | +0.43/-0.48 dB |
| 10.2 | _____ | 100 | +0.43/-0.48 dB |
| 10.4 | _____ | 100 | +0.43/-0.48 dB |
| 10.6 | _____ | 11.0 | +0.43/-0.48 dB |
| 10.8 | _____ | 11.0 | +0.43/-0.48 dB |
| 11.0 | _____ | 11.0 | +0.43/-0.48 dB |
| 11.2 | _____ | 11.0 | +0.43/-0.48 dB |
| 11.4 | _____ | 11.0 | +0.43/-0.48 dB |
| 11.6 | _____ | 12.0 | +0.43/-0.48 dB |
| 11.8 | _____ | 12.0 | +0.43/-0.48 dB |
| 12.0 | _____ | 12.0 | +0.43/-0.48 dB |
| 12.2 | _____ | 12.0 | +0.43/-0.48 dB |
| 12.4 | _____ | 12.0 | +0.43/-0.48 dB |
| 12.6 | _____ | 13.0 | +0.43/-0.48 dB |
| 12.8 | _____ | 13.0 | +0.43/-0.48 dB |
| 13.0 | _____ | 13.0 | +0.43/-0.48 dB |

Table 3-28. Frequency Response, Band 3

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|-------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | CAL Factor Frequency (GHz) | Measurement Uncertainty |
| 13.1 | _____ | 13.0 | 0 (Ref) |
| 13.3 | _____ | 13.0 | +0.43/-0.48 dB |
| 13.5 | _____ | 13.0 | +0.43/-0.48 dB |
| 13.7 | _____ | 14.0 | +0.43/-0.48 dB |
| 13.9 | _____ | 14.0 | +0.43/-0.48 dB |
| 14.1 | _____ | 14.0 | +0.43/-0.48 dB |
| 14.3 | _____ | 14.0 | +0.43/-0.48 dB |
| 14.5 | _____ | 14.0 | +0.43/-0.48 dB |
| 14.7 | _____ | 15.0 | +0.43/-0.48 dB |
| 14.9 | _____ | 15.0 | +0.43/-0.48 dB |
| 15.1 | _____ | 15.0 | +0.43/-0.48 dB |
| 15.3 | _____ | 15.0 | +0.43/-0.48 dB |
| 15.5 | _____ | 15.0 | +0.43/-0.48 dB |
| 15.7 | _____ | 16.0 | +0.43/-0.48 dB |
| 15.9 | _____ | 16.0 | +0.43/-0.48 dB |
| 16.1 | _____ | 16.0 | +0.43/-0.48 dB |
| 16.3 | _____ | 16.0 | +0.43/-0.48 dB |
| 16.5 | _____ | 16.0 | +0.43/-0.48 dB |
| 16.7 | _____ | 17.0 | +0.43/-0.48 dB |
| 16.9 | _____ | 17.0 | +0.43/-0.48 dB |
| 17.1 | _____ | 17.0 | +0.43/-0.48 dB |
| 17.3 | _____ | 17.0 | +0.43/-0.48 dB |
| 17.5 | _____ | 17.0 | +0.43/-0.48 dB |
| 17.7 | _____ | 18.0 | +0.43/-0.48 dB |
| 17.9 | _____ | 18.0 | +0.43/-0.48 dB |
| 18.1 | _____ | 18.0 | +0.43/-0.48 dB |
| 18.3 | _____ | 18.0 | +0.43/-0.48 dB |
| 18.5 | _____ | 18.0 | +0.43/-0.48 dB |
| 18.7 | _____ | 19.0 | +0.43/-0.48 dB |
| 18.9 | _____ | 19.0 | +0.43/-0.48 dB |
| 19.1 | _____ | 19.0 | +0.43/-0.48 dB |
| 19.3 | _____ | 19.0 | +0.43/-0.48 dB |
| 19.5 | _____ | 19.0 | +0.43/-0.48 dB |
| 19.7 | _____ | 20.0 | +0.43/-0.48 dB |

Table 3-29. Frequency Response, Band 4

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | CAL Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 19.701 | _____ | 200 | +0.55/-0.59 |
| 19.8 | _____ | 200 | +0.55/-0.59 |
| 19.9 | _____ | 200 | +0.55/-0.59 |
| 20.0 | _____ | 200 | +0.55/-0.59 |
| 20.1 | _____ | 200 | +0.55/-0.59 |
| 20.2 | _____ | 200 | +0.55/-0.59 |
| 20.3 | _____ | 200 | +0.55/-0.59 |
| 20.4 | _____ | 200 | +0.55/-0.59 |
| 20.5 | _____ | 210 | +0.55/-0.59 |
| 20.6 | _____ | 210 | +0.55/-0.59 |
| 20.7 | _____ | 210 | +0.55/-0.59 |
| 20.8 | _____ | 210 | +0.55/-0.59 |
| 20.9 | _____ | 210 | +0.55/-0.59 |
| 21.0 | _____ | 210 | +0.55/-0.59 |
| 21.1 | _____ | 210 | +0.55/-0.59 |
| 21.2 | _____ | 210 | +0.55/-0.59 |
| 21.3 | _____ | 210 | +0.55/-0.59 |
| 21.4 | _____ | 210 | +0.55/-0.59 |
| 21.5 | _____ | 220 | +0.55/-0.59 |
| 21.6 | _____ | 220 | +0.55/-0.59 |
| 21.7 | _____ | 220 | +0.55/-0.59 |
| 21.8 | _____ | 220 | +0.55/-0.59 |
| 21.9 | _____ | 220 | +0.55/-0.59 |
| 22.0 | _____ | 220 | +0.55/-0.59 |

Table 3-30. Frequency Response, Band 0 (<50 MHz)

| Column 1 | Column 2 | Column 3 | Column 4 | Column 5 |
|-----------|--------------------------|-----------------------------|------------------------------|------------------------------|
| Frequency | HP 3335A Amplitude (dBm) | Response Relative to 50 MHz | Response Relative to 300 MHz | Measurement Uncertainty (dB) |
| 50 MHz | _____ | 0 (Ref) | _____ | + .34/ - .37 |
| 20 MHz | _____ | _____ | _____ | + .34/ - .37 |
| 10 MHz | _____ | _____ | _____ | + .34/ - .37 |
| 1 MHz | _____ | _____ | _____ | + .34/ - .37 |
| 100 kHz | _____ | _____ | _____ | + .34/ - .37 |
| 10 kHz | _____ | _____ | _____ | + .34/ - .37 |
| 1 kHz | _____ | _____ | _____ | + .34/ - .37 |

Table 3-31. Band Switching Uncertainty

| | Band 0 step 51(c) | Band 1 step 52(a) | Band 2 step 53(a) | Band 3 step 54(a) | Band 4 step 55(a) |
|-------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| Band 0 step 51(f) | _____ | 4.2 dB (3.7 dB) | 5.2 dB (3.7 dB) | 5.7 dB (4.7 dB) | 6.0 dB (6.0 dB) |
| Band 1 step 52(b) | 4.2 dB (3.7 dB) | _____ | 6.5 dB (5.0 dB) | 7.0 dB (6.0 dB) | 7.3 dB (6.8 dB) |
| Band 2 step 53(b) | 5.2 dB (4.2 dB) | 6.5 dB (5.0 dB) | _____ | 8.0 dB (6.0 dB) | 8.3 dB (7.3 dB) |
| Band 3 step 54(b) | 5.7 dB (4.7 dB) | 7.0 dB (6.0 dB) | 8.0 dB (6.0 dB) | _____ | 8.8 dB (7.8 dB) |
| Band 4 step 55(b) | 6.0 dB (6.0 dB) | 7.3 dB (6.8 dB) | 8.3 dB (7.3 dB) | 8.8 dB (7.8 dB) | _____ |

3-39. Frequency Span Accuracy

SPECIFICATION

<±5% of actual frequency separation

RELATED ADJUSTMENT

YTO Adjustment

DESCRIPTION

Two synthesized sweepers provide the precise signals required to test the spectrum analyzer's frequency span accuracy. Signal separation, measured with the delta marker function, is checked for accuracy. Span accuracy at several different frequencies is tested. Both sweepers are phase-locked to the analyzer's 10 MHz reference.

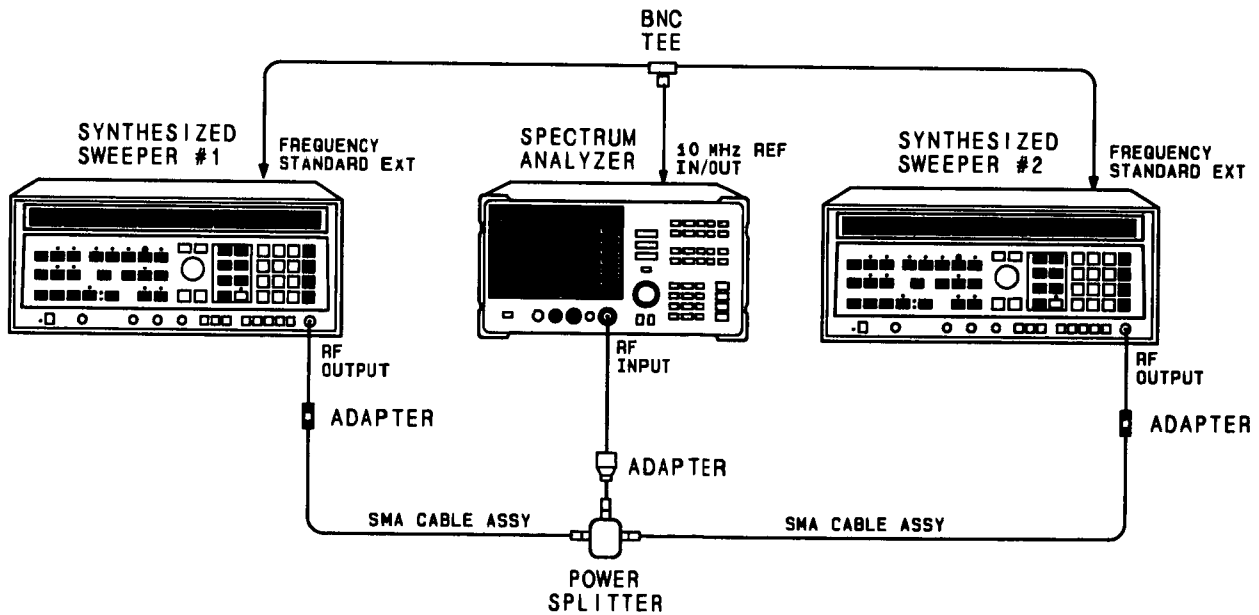


Figure 3-19. Frequency Span Accuracy Test Setup

EQUIPMENT

| | |
|--|-----------|
| Synthesized Sweeper (2 required) | HP 8340A |
| Power Splitter | HP 11667B |

Adapters:

| | |
|--|--------------|
| Type N (m) to APC 3.5 (m) | HP 1250-1743 |
| Type APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| Type BNC tee (m) (f) (f) | HP 1250-0781 |

Cables:

| | |
|---|--------------|
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

1. Connect the equipment as shown in Figure 3-19. Both HP 8340A's should be set for EXT FREQUENCY STANDARD. Connect the power splitter directly to the analyzer's RF INPUT. Do not use a cable.

2. Set the HP 8340A #1 controls as follows:

| | |
|--|--------------|
| CW | 1.499996 GHz |
| POWER LEVEL | -5 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. Set the HP 8340A #2 controls as follows:

| | |
|--|--------------|
| CW | 1.500004 GHz |
| POWER LEVEL | -10 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

4. On the HP 8562A/B, press the PRESET key, the RECALL key, [MORE], and [FACTORY PRSEL PK]. Set the HP 8562A/B controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 1.5 GHz |
| SPAN | 10 kHz |

NOTE

Use the procedure in steps 5 through 7 when testing all frequency spans of HP 8562A analyzers and spans up to 100 MHz of HP 8562B analyzers. Use the procedure in steps 8 through 19 when testing frequency spans of 5 GHz and above of HP 8562B analyzers.

5. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER OFF key, the PEAK SEARCH key, [MARKER DELTA], and [NEXT PEAK]. The active and anchor markers should be on the peaks of the signals near the second and tenth vertical graticule lines.
6. Record the HP 8562A/B Δ MKR frequency reading as the Actual Δ MKR reading in Table 3-32. The reading should be within the limits shown.
7. Repeat steps 5 and 6 above for the combinations of HP 8340A CW frequencies and HP 8562A/B center frequency and spans as indicated in Table 3-32. *When changing [CENTER FREQ] on the HP 8562A, do the following:*

- a. Set the HP 8340A #1 CW to the HP 8562A center frequency.
 - b. On the HP 8562A, press the TRIG key, [CONT], the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
 - c. On the HP 8562A, press the TRIG key and [SINGLE]
 - d. Proceed with steps 5 and 6 above.
8. On the HP 8562B, press the TRIG key, [SINGLE], [SINGLE], the MARKER OFF key, and the PEAK SEARCH key.
 9. Press the INT key and [SIG ID AT MKR]. Wait for the signal identification routine to finish.
 10. If the frequency displayed in the active function block is within 50 MHz of the CW frequency of HP 8340A #1, and it is not identified as being an image, proceed to step 13.
 11. If the frequency displayed in the active function block is more than 50 MHz from the CW frequency of HP 8340A #1 and/or is identified as being an image, press the MARKER ON key. Rotate the knob to place the marker on the peak of the next highest signal.
 12. Repeat steps 9 through 11 until the conditions in step 10 are met.
 13. Press the MARKER ON key and [MARKER DELTA]. Rotate the knob to place the active marker on a signal near the tenth vertical graticule line (one division from the rightmost graticule line).
 14. Press the INT key and [SIG ID AT MKR]. Wait for the signal identification routine to finish.
 15. If the frequency displayed in the active function block is within 50 MHz of the HP 8340A #2 CW frequency, and the signal has not been identified as being an image, proceed to step 18.
 16. If the frequency displayed in the active function block is more than 50 MHz from the HP 8340A #2 CW frequency and/or is identified as being an image, press the MARKER ON key. Rotate the knob to place the active marker on the peak of the next highest signal.
 17. Repeat steps 14 through 16 until the conditions in step 15 are met.
 18. Record the HP 8562A/B Δ MKR frequency reading as the Actual Δ MKR reading in Table 3-32. The reading should be within the limits shown.
 19. For all other frequency spans of 5 GHz or more on the HP 8562B, repeat steps 8 through 18 for the combinations of HP 8340A CW frequencies and HP 8562B center frequencies as indicated in Table 3-32.

Table 3-32. Frequency Span Accuracy

| HP 8340A #1 Frequency (GHz) | HP 8340A #2 Frequency (GHz) | HP 8562A | | Δ MKR Reading | | | Measurement Uncertainty |
|-----------------------------------|-----------------------------------|---------------------|-----------------|----------------------|--------|-----------|----------------------------|
| | | Center Frequency | Span Setting | Min | Actual | Max | |
| 1.499996 | 1.500004 | 1.5 GHz | 10 kHz | 7.60 kHz | _____ | 8.40 kHz | 33 Hz |
| 1.499992 | 1.500008 | 1.5 GHz | 20 kHz | 15.2 kHz | _____ | 16.8 kHz | 66 Hz |
| 1.499980 | 1.500020 | 1.5 GHz | 50 kHz | 38.0 kHz | _____ | 42.0 kHz | 165 Hz |
| 1.499960 | 1.500040 | 1.5 GHz | 100 kHz | 76.0 kHz | _____ | 84.0 kHz | 330 Hz |
| 1.499960 | 1.500040 | 1.5 GHz | 101 kHz | 76.0 kHz | _____ | 84.0 kHz | 333.3 Hz |
| 1.499920 | 1.500080 | 1.5 GHz | 200 kHz | 152 kHz | _____ | 168 kHz | 660 Hz |
| 1.499800 | 1.500200 | 1.5 GHz | 500 kHz | 380 kHz | _____ | 420 kHz | 1.65 kHz |
| 1.499600 | 1.500400 | 1.5 GHz | 1.0 MHz | 760 kHz | _____ | 840 kHz | 3.3 kHz |
| 1.499600 | 1.500400 | 1.5 GHz | 1.01 MHz | 760 kHz | _____ | 840 kHz | 3.333 kHz |
| 1.499200 | 1.500800 | 1.5 GHz | 2.0 MHz | 1.52 MHz | _____ | 1.68 MHz | 6.6 kHz |
| 1.498000 | 1.502000 | 1.5 GHz | 5.0 MHz | 3.80 MHz | _____ | 4.20 MHz | 16.5 kHz |
| 1.496 | 1.504 | 1.5 GHz | 10.0 MHz | 7.60 MHz | _____ | 8.40 MHz | 33 kHz |
| 1.492 | 1.508 | 1.5 GHz | 20.0 MHz | 15.2 MHz | _____ | 16.8 MHz | 66 kHz |
| 1.480 | 1.520 | 1.5 GHz | 50.0 MHz | 38 MHz | _____ | 42.0 MHz | 165 kHz |
| 1.460 | 1.540 | 1.5 GHz | 100 MHz | 76 MHz | _____ | 84.0 MHz | 330 kHz |
| 1.420 | 1.580 | 1.5 GHz | 200 MHz | 152 MHz | _____ | 168.0 MHz | 660 kHz |
| 1.300 | 1.700 | 1.5 GHz | 500 MHz | 380 MHz | _____ | 420 MHz | 1.65 MHz |
| 1.100 | 1.900 | 1.5 GHz | 1.0 GHz | 760 MHz | _____ | 840 MHz | 3.3 MHz |
| 0.700 | 2.300 | 1.5 GHz | 2.0 GHz | 1.52 GHz | _____ | 1.68 GHz | 6.6 MHz |
| 8.999996 | 9.000004 | 9.0 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 8.992 | 9.008 | 9.0 GHz | 20 MHz | 15.2 MHz | _____ | 16.8 MHz | 66 kHz |
| 8.98 | 9.020 | 9.0 GHz | 50 MHz | 38.0 MHz | _____ | 42.0 MHz | 165 kHz |
| 7.0 | 11.0 | 9.0 GHz | 5 GHz | 3.8 GHz | _____ | 4.2 GHz | 16.5 MHz |
| 15.999996 | 16.000004 | 16.0 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 15.98 | 16.02 | 16.0 GHz | 50 MHz | 38 MHz | _____ | 42 MHz | 165 kHz |
| 15.96 | 16.04 | 16.0 GHz | 100 MHz | 76.0 MHz | _____ | 84.0 MHz | 330 kHz |
| 14.0 | 18.0 | 16.0 GHz | 5 GHz | 3.8 GHz | _____ | 4.2 GHz | 16.5 MHz |
| 20.499996 | 20.500004 | 20.5 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 20.48 | 20.52 | 20.5 GHz | 50 MHz | 38 MHz | _____ | 42 MHz | 165 kHz |
| 20.46 | 20.54 | 20.5 GHz | 100 MHz | 76.0 MHz | _____ | 84.0 MHz | 330 kHz |
| 3.0 | 21.0 | 12.40 GHz | 19.25 GHz | 17.1 GHz | _____ | 18.9 GHz | 63.525 MHz |

3-40. Third Order Intermodulation Distortion

SPECIFICATION

For a total mixer input level* of -30 dBm:

- 10 MHz–2.9 GHz: <-70 dBc
- 2.75–22 GHz: <-75 dBc

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

Two synthesized sweepers provide the signals required for measuring third order intermodulation. Both synthesized sweepers are phase-locked to the analyzer's 10 MHz reference.

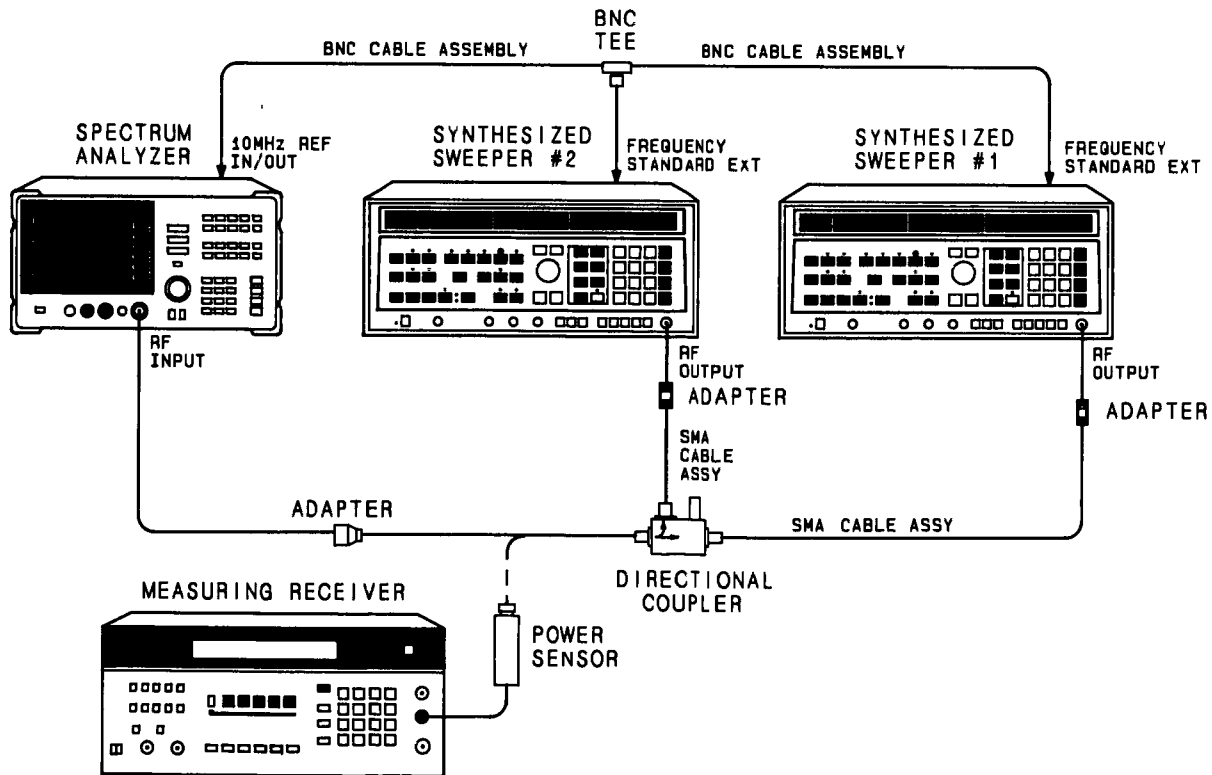


Figure 3-20. Third Order Intermodulation (>2.7 GHz) Test Setup

* Total mixer input level = Total Input Level – Input Attenuation

EQUIPMENT

| | |
|--|--------------|
| Measuring Receiver | HP 8902A |
| Synthesized Sweeper (2 required) | HP 8340A |
| Directional Coupler | HP 0955-0125 |
| Power Sensor | HP 8485A |
| Adapters: | |
| Type N (m) to APC 3.5 (m) | HP 1250-1743 |
| Type APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| Type BNC tee (m) (f) (f) | HP 1250-0781 |
| Cables: | |
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| SMA, 61 cm (24 in.) (2 required) | HP 8120-1578 |

PROCEDURE**Third Order Intermodulation (10 MHz–2.9 GHz)**

1. Connect the equipment as shown in Figure 3-20.
2. Press the INSTR PRESET key on each HP 8340A. Set each of the HP 8340A controls as follows:

| | |
|--|-------------|
| POWER LEVEL | –20 dBm |
| CW (HP 8340A #1) | 2.800 GHz |
| CW (HP 8340A #2) | 2.80005 GHz |
| MODULATION | OFF |
| RF | OFF |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. Set the HP 8902A controls as follows:

| | |
|--------------------|----------|
| FUNCTION | RF POWER |
| LOG/LIN | LOG |

4. On the HP 8562A/B, press the PRESET key. On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRESEL PK]. Set the HP 8562A/B controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 2.8 GHz |
| REF LVL | –20 dBm |
| SPAN | 10 kHz |
| CF STEP | 50 kHz |
| RES BW | 1 kHz |
| VIDEO BW | 100 Hz |

5. Zero the HP 8902A and calibrate the HP 8485A power sensor at 50 MHz as described in the HP 8902A Operation Manual. Enter the power sensor's 3 GHz calibration factor into the HP 8902A.
6. Connect the HP 8485A Power Sensor to the output of the directional coupler.

7. On the HP 8340A #1, press the RF key on. Adjust the the POWER LEVEL key for a -23 dBm reading on the HP 8902A display.
8. Disconnect the power sensor from the directional coupler. Connect the directional coupler directly to the HP 8562A/B RF INPUT using an adapter. (Do not use a cable.)
9. On the HP 8562A/B, press the following keys: the PEAK SEARCH key, the MKR-> key, and [MARKER->REF LVL]. Wait for a new sweep to finish, then press the following keys: [MARKER DELTA], the FREQUENCY key, and the \uparrow key.
10. On the HP 8340A #2, press the RF key on.
11. On the HP 8562A/B, press the PEAK SEARCH key.
12. Adjust the the POWER LEVEL key of the HP 8340A #2 for a Δ MKR reading of $0.0 \text{ dB} \pm 0.17 \text{ dB}$.
13. Press the following HP 8562A/B keys: the MARKER OFF key, the PEAK SEARCH key, [MARKER DELTA], the FREQUENCY key, and the \uparrow key. Wait for a new sweep to finish, then press the PEAK SEARCH key.
14. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Upper Product Suppression. The suppression should be greater than 70 dB.
15. On the HP 8562A/B, press the FREQUENCY key, the \downarrow key, the \downarrow key, and the \downarrow key. Wait for a new sweep to finish and press the PEAK SEARCH key.
16. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Lower Product Suppression. The suppression should be greater than 70 dB.

Third Order Intermodulation, >2.75 GHz

17. Disconnect the directional coupler from the HP 8562A/B. Connect the directional coupler to the power sensor.
18. On the HP 8340A #2, press the RF key off.
19. Set each of the HP 8340A frequencies, the CW key, to the next values listed in Table 3-33. Enter the appropriate power sensor calibration factor into the HP 8902A.
20. Adjust the the POWER LEVEL key on the HP 8340A #1 for a -23 dBm reading on the HP 8902A display.
21. Disconnect the power sensor from the directional coupler. Connect the directional coupler directly to the HP 8562A/B RF INPUT using an adapter.
22. Set the HP 8562A/B center frequency to the same frequency as the HP 8340A #1. Press the MARKER OFF key.
23. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, set the reference level to -20 dBm then press the following keys: the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.

24. On the HP 8562A/B, press the PEAK SEARCH key, the MKR-> key, and [MARKER->REF LVL]. Wait for the completion of a new sweep and press the following keys: [MARKER DELTA], the FREQUENCY key, and the ↑ key.
25. On the HP 8340A #2, press the RF key on.
26. On the HP 8562A/B, press the PEAK SEARCH key.
27. Adjust the the POWER LEVEL key of the HP 8540A #2 for a Δ MKR reading of 0.0 dB ±0.17 dB.
28. On the HP 8562A/B, press the FREQUENCY key and the ↑ key. Wait for the completion of a new sweep and press the PEAK SEARCH key. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Upper Product Suppression. The suppression should be greater than 75 dB.
29. Press the following keys on the HP 8562A/B: the FREQUENCY key, the ↓ key, the ↓ key, and the ↓ key. Wait for the completion of a new sweep and press the PEAK SEARCH key. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Lower Product Suppression. The suppression should be greater than 75 dB.
30. Record the maximum of the Lower Product Suppression and Upper Product Suppression for the 2.8 GHz entries in Table 3-33.

Third Order Intermodulation Distortion at 2.8 GHz: _____ dBc

31. Record the maximum of the Lower Product Suppression and Upper Product Suppression for the 4.0 GHz entries in Table 3-33.

Third Order Intermodulation Distortion at 4.0 GHz: _____ dBc

Table 3-33. Third Order Intermodulation Distortion

| HP 8340A #1 [CW] (GHz) | HP 8340A #2 [CW] (GHz) | Lower Product | | Upper Product | | Measurement Uncertainty (dB) |
|------------------------------|------------------------------|--------------------|--------------------|--------------------|--------------------|------------------------------------|
| | | Frequency (GHz) | Supression (dB) | Frequency (GHz) | Supression (dB) | |
| 2.80000 | 2.80005 | 2.79995 | _____ | 2.8001 | _____ | ±2.83 |
| 4.00000 | 4.00005 | 3.99995 | _____ | 4.00010 | _____ | ±2.83 |

3-41. Gain Compression

SPECIFICATION

<1 dB for a -3 dBm total mixer power level*

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures gain compression in low band and high band. Two signals, separated by 3 MHz, are used. First the test places a -30 dBm signal at the input of the spectrum analyzer (the analyzer's reference level is also set to -30 dBm). Then a $+7$ dBm signal is placed on the analyzer, overdriving its input. The decrease in the first signal's amplitude (gain compression) caused by the second signal is the measured gain compression.

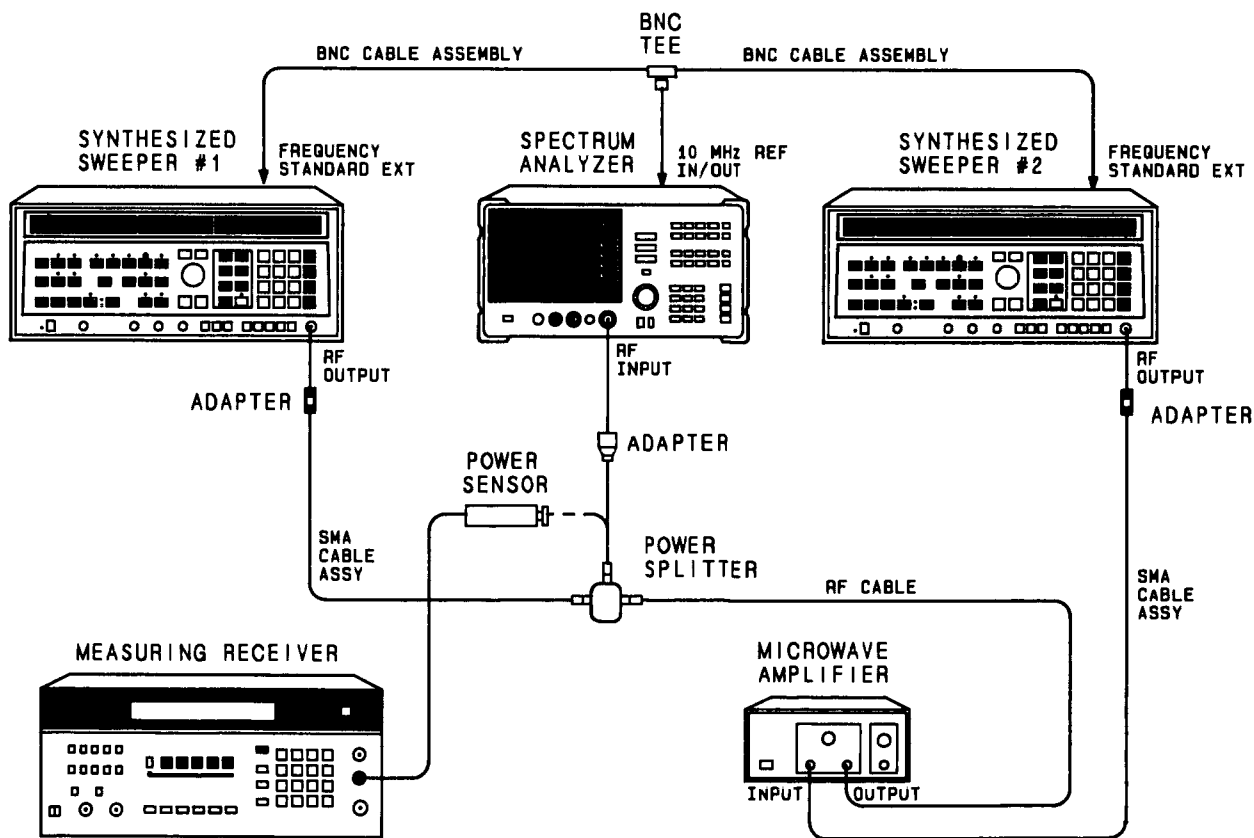


Figure 3-21. Gain Compression Test Setup

* Total mixer power level = Total Input Power Level – Input Attenuation

EQUIPMENT

| | |
|--|----------------|
| Synthesized Sweeper (2 required) | HP 8340A |
| Measuring Receiver | HP 8902A |
| Amplifier | HP 11975A |
| Power Sensor | HP 8485A |
| Power Splitter | HP 11667B |
| Adapters: | |
| Type APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| Type APC 3.5 (m) to N (m) | HP 1250-1743 |
| Type BNC tee (m) (f) (f) | HP 1250-0781 |
| Cables: | |
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |
| RF Cable | HP 11975-20002 |

PROCEDURE**<2.9 GHz**

1. Zero the HP 8902A and calibrate the HP 8485A power sensor as described in the HP 8902A Operation Manual. Enter the power sensor's 2 GHz calibration factor into the HP 8902A.
2. Connect the equipment as shown in Figure 3-21, with the output of the power splitter connected to the HP 8485A Power Sensor.
3. Press the INSTR PRESET key on both HP 8340A's. Set the controls for the HP 8340A #1 as follows:

| | |
|--|---------|
| CW | 2.0 GHz |
| POWER LEVEL | -24 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

4. Set the controls for the HP 8340A #2 as follows:

| | |
|--|-----------|
| CW | 2.003 GHz |
| POWER LEVEL | +8 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

5. On the HP 8562A/B, press the PRESET key. On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRESEL PK]. Set the HP 8562A/B controls as follows:

| | |
|-----------------------|----------|
| CENTER FREQ | 2.0 GHz |
| REF LVL | -30 dBm |
| SPAN | 10 MHz |
| RES BW | 300 kHz |
| SCALE | 1 dB/Div |

6. Adjust the HP 11975A OUTPUT POWER LEVEL for a +7 dBm reading on the HP 8902A display.

7. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.
8. Remove the power sensor from the power splitter. Connect the power splitter to the HP 8562A/B RF INPUT using an adapter. Do not use a cable.
9. Adjust the HP 8340A #1 POWER LEVEL key for a signal 1 dB below the HP 8562A/B reference level.
10. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
11. Set the HP 8340A #2 POWER LEVEL key to $+8$ dBm.
12. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the lower amplitude signal and not on the signal that is off the top of the screen. If it is not on the lower amplitude signal, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude. The amplitude should read less than -1.0 dB.

Gain Compression Band 0 (<1.0 dB): _____ dB

>2.9 GHz

13. Set the HP 8562A/B, HP 8340A #1, and HP 8340A #2 to the frequencies indicated in Table 3-34 for Band 1.
14. Enter the HP 8485A calibration factor at the HP 8562A/B center frequency value into the HP 8902A.
15. Disconnect the power splitter from the HP 8562A/B and reconnect it to the HP 8485A Power Sensor.
16. Adjust the HP 11975A OUTPUT POWER LEVEL for a $+7$ dBm reading on the HP 8902A display.
17. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.
18. Reconnect the power splitter to the HP 8562A/B RF INPUT 50Ω .
19. Adjust the HP 8340A #1 POWER LEVEL key to bring the signal 1 dB (one division) below the HP 8562A reference level.
20. On the HP 8562A/B, press the MARKER OFF key and the PEAK SEARCH key.
21. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
22. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
23. Set the HP 8340A #2 POWER LEVEL key to $+8$ dBm.
24. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the peak of the lower amplitude signal. If it is not, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude and record this as the Gain Compression in Table 3-34. The gain compression should be less than 1 dB.
25. Repeat steps 14 through 24 until all the entries in Table 3-34 have been completed.

Table 3-34. Gain Compression

| Band | HP 8562A Center Freq (GHz) | HP 8340A #1 [CW] (GHz) | HP 8340A #2 [CW] (GHz) | Gain Compression (dB) | Measurement Uncertainty (dB) |
|------|----------------------------------|------------------------------|------------------------------|-----------------------------|------------------------------------|
| 0 | 2.0 | 2.000 | 2.003 | _____ | ± 0.23 |
| 1 | 4.0 | 4.000 | 4.003 | _____ | ± 0.23 |
| 2 | 7.0 | 7.000 | 7.003 | _____ | ± 0.23 |

3-42. 1ST LO Output Amplitude

SPECIFICATION

Amplitude (3.0–6.7 GHz): +16 dBm \pm 20 dB, 20°C to 30°C

RELATED ADJUSTMENT

First LO Distribution Amplifier Adjustment

DESCRIPTION

The 1ST LO OUTPUT power is measured with a power meter. The analyzer is placed in external mixing mode and harmonic-locked to N = 6. This allows the broadest tuning range of the 1ST LO.

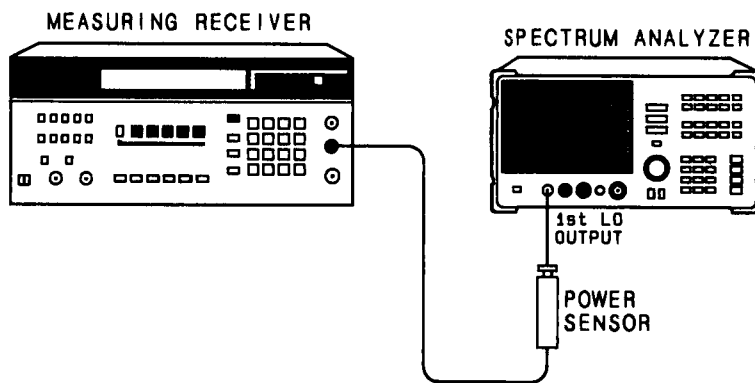


Figure 3-22. 1ST LO Output Amplitude Test Setup

EQUIPMENT

| | |
|------------------------------|----------|
| Measuring Receiver | HP 8902A |
| Power Sensor | HP 8485A |

NOTE

The results of this test are valid only if the ambient temperature is between 20°C and 30°C.

PROCEDURE

1. Zero the HP 8902A and calibrate the HP 8485A Power Sensor at 50 MHz as described in the HP 8902A Operation Manual. Enter the power sensor's 3 GHz calibration factor into the HP 8902A. Set the HP 8902A for dBm output (LOG display).
2. Connect the equipment as shown in Figure 3-22.
3. Press the PRESET key, the SPAN key, and [ZERO SPAN] on the HP 8562A/B, and set the controls as follows:

| | |
|-------------------------|----------|
| MIXING | EXT |
| LOCK HARMONIC | #6 |
| CENTER FREQ | 18 GHz |
| CF STEP | 1200 MHz |

4. Read the RF Power displayed on the HP 8902A and record it as the 3.000 GHz entry in Table 3-35 column 5.
5. Use the [CENTER FREQ] and the ↑ keys to step the 1st LO frequency in 200 MHz steps (center frequency in 1200 MHz steps). At each step, record the power level displayed on the HP 8902A in Table 3-35. Enter the appropriate power sensor calibration factor into the HP 8902A as indicated in Table 3-35.
6. The power levels measured should be within the limits shown in Table 3-35.
7. Record the maximum 1ST LO OUTPUT POWER.

Maximum 1ST LO OUTPUT POWER: _____ dB

8. Record the minimum 1ST LO OUTPUT POWER.

Minimum 1ST LO OUTPUT POWER: _____ dB

Table 3-35. 1st LO Output Amplitude

| 1st LO Freq* (GHz) | Center Freq (n=6) (GHz) | CAL Factor Frequency (GHz) | 1st LO Output Power | | | Measurement Uncertainty (dB) |
|--------------------|-------------------------|----------------------------|---------------------|--------------|-----------|------------------------------|
| | | | Min (dBm) | Actual (dBm) | Max (dBm) | |
| 3.0 | 18 | 3.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 3.2 | 19.2 | 3.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 3.4 | 20.4 | 3.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 3.6 | 21.6 | 4.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 3.8 | 22.8 | 4.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 4.0 | 24.0 | 4.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 4.2 | 25.2 | 4.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 4.4 | 26.4 | 4.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 4.6 | 27.6 | 5.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 4.8 | 28.8 | 5.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 5.0 | 30.0 | 5.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 5.2 | 31.2 | 5.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 5.4 | 32.4 | 5.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 5.6 | 33.6 | 6.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 5.8 | 34.8 | 6.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 6.0 | 36.0 | 6.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 6.2 | 37.2 | 6.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 6.4 | 38.4 | 6.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 6.6 | 39.6 | 7.0 | +14.5 | _____ | +18.5 | ±0.25 |
| 6.7 | 39.99997 | 7.0 | +14.5 | _____ | +18.5 | ±0.25 |

* Nominal; actual 1st LO frequency is within 50 MHz of this frequency.

3-43. Sweep Time Accuracy

SPECIFICATION

For SPAN = 0 Hz:

Sweep time <30 ms: $<\pm 15\%$

Sweep time ≥ 30 ms: $<\pm 1\%$

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

For sweep times less than 30 ms, an amplitude-modulated signal is displayed on the analyzer in zero span, and the frequency of the modulating signal (triangle wave) is adjusted to space the peaks evenly across the display. The frequency of the modulating signal is counted and the actual sweep time is calculated and compared to the specification.

For sweep times of 30 ms and greater, the time interval of the BLANKING OUTPUT's low state is measured. This time interval corresponds to the sweep time. The measured sweep time is compared to the specification.

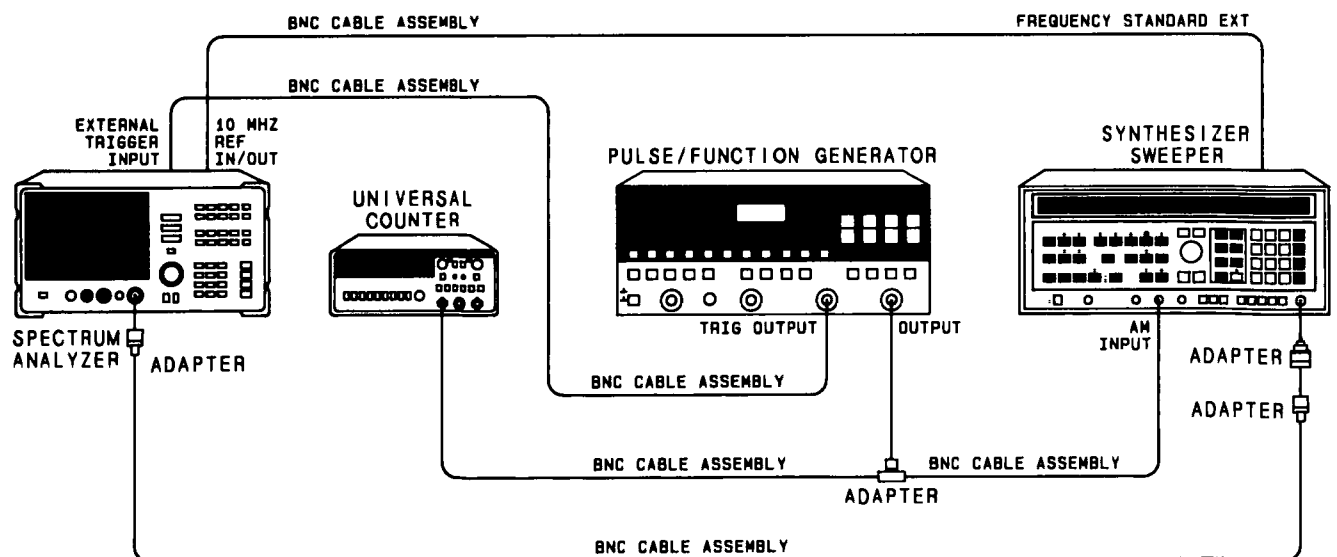


Figure 3-23. Sweep Time Accuracy Test Setup

EQUIPMENT

| | |
|--|--------------|
| Synthesized Sweeper | HP 8340A |
| Universal Counter | HP 5316A |
| Pulse/Function Generator | HP 8116A |
| Adapters: | |
| Type APC 3.5 (f) fo N (f) | HP 1250-1745 |
| Type N (m) to BNC (f) (2 required) | HP 1250-1476 |
| Type BNC tee (m) (f) (f) | HP 1250-0781 |
| Cables: | |
| BNC, 122 cm (48 in.) (5 required) | HP 10503A |

PROCEDURE

1. Connect the equipment as shown in Figure 3-23, with the BNC cable from the HP 5316A connected to the HP 8562A/B EXT TRIG INPUT.

2. On the HP 8562A/B, press the PRESET key and set the controls as follows:

| | |
|-----------------------|------------|
| CENTER FREQ | 300 MHz |
| SPAN | 0 Hz |
| SWEEP TIME | 50 μ s |
| SCALE | LINEAR |

3. Set all buttons on the HP 5816A out, including the blue SHIFT button. Set the LEVEL/SENS control for Channel A to midrange and the LEVEL/SENS control for Channel B fully counterclockwise. Set the GATE TIME Control to MIN.

- a. Push the FREQ A button in
- b. Push the AC/DC buttons for Channels A and B in.
- c. Push the Channel A TRIGGER LEVEL/SENSITIVITY button in.

4. Set the HP 5116A controls as follows:

| | |
|--------------------|----------|
| FRQ | 200 kHz |
| DTY | 50% |
| AMP | 500 mV |
| OFS | 0V |
| FUNCTION | TRIANGLE |

5. Press the INSTR PRESET key on the HP 8340A. Set the controls as follows:

| | |
|-----------------------|---------|
| CW | 300 MHz |
| POWER LEVEL | -5 dBm |
| MODULATION | AM |

6. On the HP 8562A/B, press the TRIG key and [EXTERNAL]

7. Adjust the HP 8116A frequency for 10 cycles evenly spaced relative to the vertical graticule lines on the analyzer. For example, if the peak of the first cycle is 0.2 divisions to the right of the first graticule line, the peak of the tenth cycle should be set 0.2 divisions to the right of the tenth graticule line.
8. Read the frequency displayed on the HP 5316A. Calculate the measured sweep time using the equation below. Record the result as the Measured Sweep Time in Table 3-36 for the 50 μ s Sweep Time Setting. The Measured Sweep Time should lie within the limits shown in Table 3-36.

$$\text{Measured Sweep Time} = 10 / \text{HP 5316A Frequency Reading}$$

9. Repeat steps 6 and 7 above for sweep times between 100 μ s and 20 ms listed in Table 3-36. Set the initial HP 8116A frequency according to the equation below.

$$\text{Initial HP 8116A Frequency} = 10 / \text{Sweep Time Setting}$$

10. Disconnect the BNC cable between the HP 5316A and the HP 8116A. Connect a BNC cable from the BLANKING OUTPUT on the HP 8562A/B to the Channel A input of the HP 5316A.
11. On the HP 8562A/B, press the TRIG key, [FREE RUN], the SWEEP key, the 5 key, the 0 key, and the ms key.
12. On the HP 5316A, set the controls as follows:
 - a. Set the Channel A LEVEL/SENS control fully counterclockwise.
 - b. Press the TI A→B button.
 - c. Push the SEP/COM A button in.
 - d. Set the Channel A TRIGGER LEVEL/SENSITIVITY button out.
 - e. Push the Channel A SLOPE button in (negative edge trigger).
13. On the HP 5316A, slowly rotate the Channel A LEVEL/SENS control clockwise until the yellow LED next to it begins to flash. Repeat for the Channel B LEVEL/SENS control.
14. Repeat the following steps for each sweep time listed in Table 3-36.
15. Set the HP 8562A/B to the sweep time listed in the first column of Table 3-36.
16. Wait for the HP 5316A display to settle (usually about three sweeps). Record the HP 5316A reading as the Measured Sweep Time in Table 3-36. The Measured Sweep Time should fall within the limits shown in Table 3-36.

NOTE

It might be necessary to readjust the LEVEL/SENS controls slightly for a stable display.

Table 3-36. Sweep Time Accuracy

| Sweptime Setting | Minimum Reading | Measured Sweptime | Maximum Reading | Measurement Uncertainty |
|------------------|-----------------|-------------------|-----------------|-------------------------|
| 50 μ s | 42.5 μ s | _____ | 57.5 μ s | \pm 101 ns |
| 100 μ s | 85 μ s | _____ | 115 μ s | \pm 101 ns |
| 200 μ s | 170 μ s | _____ | 230 μ s | \pm 102 ns |
| 500 μ s | 425 μ s | _____ | 575 μ s | \pm 103 ns |
| 1 ms | 850 μ s | _____ | 1.15 ms | \pm 105 ns |
| 2 ms | 1.70 ms | _____ | 2.30 ms | \pm 108 ns |
| 5 ms | 4.25 ms | _____ | 5.75 ms | \pm 119 ns |
| 10 ms | 8.5 ms | _____ | 11.5 ms | \pm 137 ns |
| 20 ms | 17.0 ms | _____ | 23.0 ms | \pm 171 ns |
| 30 ms | 29.7 ms | _____ | 30.3 ms | \pm 209 ns |
| 50 ms | 49.5 ms | _____ | 50.5 ms | \pm 281 ns |
| 100 ms | 99.0 ms | _____ | 101.0 ms | \pm 461 ns |
| 200 ms | 198.0 ms | _____ | 202.0 ms | \pm 821 ns |
| 500 ms | 495.0 ms | _____ | 505.0 ms | \pm 1.901 μ s |
| 1 s | 990.0 ms | _____ | 1010.0 ms | \pm 3.7 μ s |
| 2 s | 1.980 s | _____ | 2.020 s | \pm 7.3 μ s |
| 5 s | 4.95 s | _____ | 5.05 s | \pm 18.1 μ s |
| 10 s | 9.90 s | _____ | 10.1 s | \pm 36.1 μ s |
| 20 s | 19.8 s | _____ | 20.2 s | \pm 72.1 μ s |
| 50 s | 49.5 s | _____ | 50.5 s | \pm 180.1 μ s |
| 60 s | 59.4 s | _____ | 60.6 s | \pm 216.1 μ s |

3-44. Residual Responses

SPECIFICATION

200 kHz to 6.46 GHz: ≤ -90 dBm with no signal at input and 0 dB input attenuation

RELATED ADJUSTMENT

There is no related adjustment for this performance test.

DESCRIPTION

This test checks for residual responses in Bands 0 and 1 ($N = 1$). Any response located above the display line is measured in a narrow frequency span and resolution bandwidth. The spectrum analyzer RF INPUT 50Ω is terminated in 50 ohms.

EQUIPMENT

| | |
|--------------------------------------|--------------|
| Coaxial 50-Ohm Termination | HP 909D |
| Adapters: | |
| Type N (m) to APC 3.5 (f) | HP 1250-1744 |
| Type N (m) to BNC (f) | HP 1250-1476 |
| Cables: | |
| BNC, 122 cm (48 in.) | HP 10503A |

PROCEDURE

1. On the HP 8562A/B, press the PRESET key and set the controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 300 MHz |
| SPAN | 10 kHz |
| RES BW | 300 Hz |
| REF LEVEL | -10 dBm |
| ATTEN | 0 dB |

2. On the HP 8562A/B, connect a BNC cable between the CAL OUTPUT and RF INPUT and press the PEAK SEARCH key, the AMPLITUDE key, [MORE], and [REF LEVEL CAL]. Use the data entry knob or step keys to change the REF LEVEL CAL value until the marker amplitude reads -10.00 dBm ± 0.17 dB.

Residual Responses, Band 0

3. Remove the BNC cable and adapter from the RF INPUT. Install the Type N to APC 3.5 adapter and 50-ohm termination on the RF INPUT. Press the PRESET key and set the controls as follows:

| | |
|------------------------|----------|
| CENTER FREQ | 15.2 MHz |
| SPAN | 30 MHz |
| CF STEP | 28.5 MHz |
| REF LEVEL | -50 dBm |
| ATTEN | 0 dB |
| RES BW | 10 kHz |
| TRIG | SINGLE |
| DISPLAY LINE | -90 dBm |

4. Press the TRIG key and [SINGLE] to trigger a sweep. The noise level should be at least 6 dB below the display line. If it is not, it will be necessary to reduce the SPAN and RES BW to reduce the noise level. If the SPAN is reduced, reduce the [CF STEP] to no more than 95% of the SPAN.
5. If a residual is suspected, press [SINGLE] again. A residual response will persist, but a noise peak will not. Record the frequency and amplitude of any responses above the display line.
6. If a response is marginal, verify the response amplitude as follows:
 - a. Press the SAVE key, [SAVE STATE], and [STATE 0].
 - b. Place the marker on the peak of the response in question.
 - c. Press the MKR-> key and [MARKER->CF].
 - d. Press the SPAN key, the ↓ key four times, the TRIG key, and [CONT].
 - e. Press the BW key and [RES BW AUTO].
 - f. Continue to reduce the SPAN until a RES BW of 300 Hz is reached. If the response is a synthesis-related residual, it might disappear as the SPAN is reduced. If this is the case, measure the amplitude with the narrowest span possible and a 300 Hz RES BW.
 - g. Record the frequency and amplitude of any residual response above the display line.
 - h. Press the RECALL key, [RECALL STATE], and [STATE 0].
7. Check for residuals up to 2.9 GHz using the procedure of steps 4 through 6 above. To change the center frequency, press [CENTER FREQ] and the ↑ key.

Residual Responses, Band 1

8. Set the HP 8562A/B CENTER FREQ to 2.915 GHz.
9. Check for residuals from 2.9 GHz to 6.46 GHz using the procedure of steps 4 through 6 above. To change the center frequency, press [CENTER FREQ] and the ↑ key.

3-45. IF Input Amplitude Accuracy

SPECIFICATION

For a signal at the reference level (EXTERNAL mixing mode, REF LVL of 0 dBm, CONVERSION LOSS of 30 dB), the power applied to the IF INPUT shall be $-30 \text{ dBm} \pm 1.5 \text{ dB}$.

RELATED ADJUSTMENT

External Mixer Amplitude Adjustment

DESCRIPTION

The user-loaded conversion losses for K-band are recorded and reset to 30 dB. A 310.7 MHz signal is applied to the IF INPUT. The power level of the source is adjusted for a signal at the reference level. The power applied to the analyzer is measured with a power meter and the measured power is compared to the specification. The previously recorded conversion losses are re-entered.

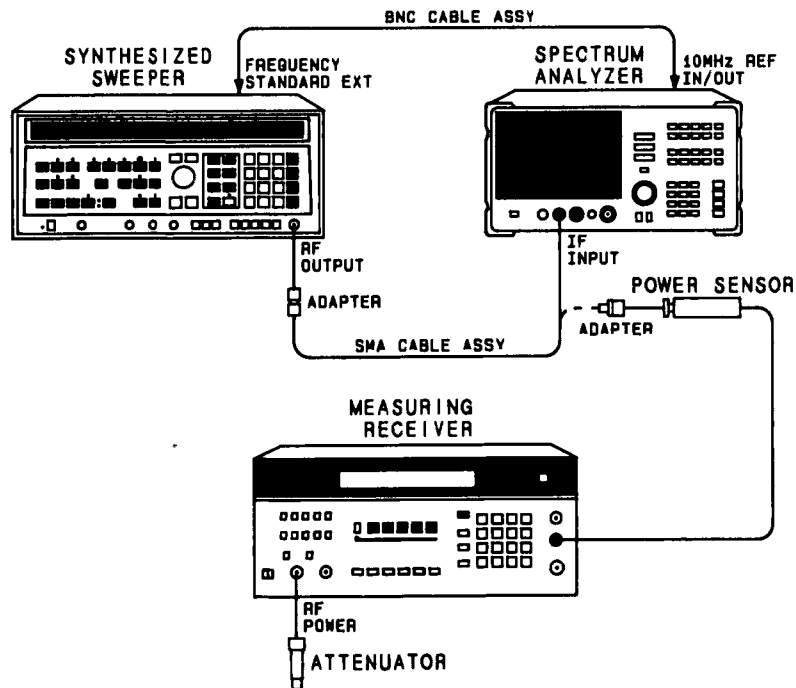


Figure 3-24. IF Input Amplitude Test Setup

EQUIPMENT

| | |
|---|--------------|
| Synthesized Sweeper | HP 8340A |
| Measuring Receiver | HP 8902A |
| Power Sensor | HP 8484A |
| 50 MHz Reference Attenuator | HP 11708A |
| (supplied with HP 8484A) | |
| Adapters: | |
| Type N (f) to SMA (f) | HP 1250-1772 |
| Type APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |
| Cables: | |
| BNC, 122 cm (48 in.) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

1. Connect the equipment as shown in Figure 3-24. The HP 8562A/B provides the frequency reference for the HP 8340A.
2. On the HP 8562A/B, press the PRESET key.
3. On the HP 8562A/B, press the AMPLITUDE key, [LOG dB/DIV], the 1 key, the dB key, and the MARKER ON key.
4. Press the MIXER EXT key, the SPAN key, [ZERO SPAN], the EXT key, [AMPTD CORRECT], and [CNV LOSS VS FREQ].
5. Note the conversion loss displayed in the active function block. Use the ↑ key and the ↓ key to step through the conversion losses for the other frequencies. If all conversion losses are 30.0 dB, proceed to step 11.
6. Press [CNV LOSS VS FREQ] on the HP 8562A/B.
7. Record the 18 GHz conversion loss in Table 3-37.
8. Enter a conversion loss of 30 dB.
9. Press the ↑ key on the HP 8562A/B.
10. Repeat steps 7 through 9 for the remaining frequencies listed in Table 3-37.
11. Press the INSTR PRESET key on the HP 8340A and set the controls as follows:

| | |
|-----------------------|-----------|
| CW | 310.7 MHz |
| POWER LEVEL | -30 dBm |

12. Zero and calibrate the HP 8902A/HP 8484A combination in log mode. Enter the power sensor's 50 MHz calibration factor into the HP 8902A.
13. Adjust the HP 8340A POWER LEVEL key until the marker amplitude reads 0 dBm ±0.05 dB.

14. Disconnect the SMA cable from the HP 8562A/B IF INPUT and connect the cable, through an adapter, to the power sensor.
15. Read the power displayed on the HP 8902A and note the value below. The displayed power should read $-30 \text{ dBm} \pm 1.5 \text{ dB}$.

IF INPUT Amplitude: _____ dBm

NOTE

The following steps should be performed only if it was necessary to change the conversion loss values found in step 5.

16. Press [CNV LOSS VS FREQ] on the HP 8562A/B.
17. Enter the conversion loss at 18 GHz recorded in Table 3-37.
18. Press the \uparrow key on the HP 8562A/B.
19. Repeat steps 17 and 18 for the remaining frequencies listed in Table 3-37.

Table 3-37. IF Input Amplitude Accuracy

| Frequency (GHz) | Conversion Loss (dB) |
|-----------------|----------------------|
| 18 | _____ |
| 20 | _____ |
| 22 | _____ |
| 24 | _____ |
| 26 | _____ |
| 27 | _____ |

Table 3-38. Performance Test Record (1 of 8)

| Hewlett-Packard Company Model _____ HP 8562A _____ HP 8562B (Check one) Serial No. _____ | | | | |
|---|---|----------------|--------|----------------|
| Tested by _____ Date _____ | | | | |
| Para. No. | Test Description | Results | | |
| | | Min | Actual | Max |
| 3-24 | 10 MHz Reference Output Accuracy | | | |
| | 5. 10 MHz Reference Frequency | 299.998800 MHz | _____ | 300.001200 MHz |
| 3-25 | Calibrator Amplitude and Frequency Accuracy | | | |
| | 4. Calibrator Frequency | 299.998800 MHz | _____ | 300.001200 MHz |
| | 6. Calibrator Amplitude | -10.3 dBm | _____ | -9.7 dBm |
| 3-26 | Displayed Average Noise Level | | | |
| | 25. 10 kHz | | _____ | -90 dBm |
| | 100 kHz | | _____ | -100 dBm |
| | 1 MHz to 2.9 GHz | | _____ | -121 dBm |
| | 2.9 GHz to 6.46 GHz | | _____ | -121 dBm |
| | 6.46 GHz to 13.0 GHz | | _____ | -110 dBm |
| | 13.0 GHz to 19.7 GHz | | _____ | -105 dBm |
| | 19.7 GHz to 22.0 GHz | | _____ | -100 dBm |
| 3-27 | Resolution Bandwidth Switching and IF Alignment Uncertainty | | | |
| | 5. 1 MHz | -0.5 dB | _____ | +0.5 dB |
| | 100 kHz | -0.5 dB | _____ | +0.5 dB |
| | 30 kHz | -0.5 dB | _____ | +0.5 dB |
| | 10 kHz | -0.5 dB | _____ | +0.5 dB |
| | 3 kHz | -0.5 dB | _____ | +0.5 dB |
| | 1 kHz | -0.5 dB | _____ | +0.5 dB |
| | 300 Hz | -1.0 dB | _____ | +1.0 dB |
| | 100 Hz | -2.5 dB | _____ | +2.5 dB |
| 3-28 | Resolution Bandwidth Accuracy and Selectivity | | | |
| | 13. 1 MHz | 750 kHz | _____ | 1.25 MHz |
| | 300 kHz | 270 kHz | _____ | 330 kHz |
| | 100 kHz | 90 kHz | _____ | 110 kHz |
| | 30 kHz | 27 kHz | _____ | 33 kHz |
| | 10 kHz | 9 kHz | _____ | 11 kHz |
| | 3 kHz | 2.7 kHz | _____ | 3.3 kHz |
| | 1 kHz | 900 Hz | _____ | 1.1 kHz |
| | 300 Hz | 270 Hz | _____ | 330 Hz |
| | 100 Hz | 70 Hz | _____ | 130 Hz |

Table 3-38. Performance Test Record (2 of 8)

| Para. No. | Test Description | Results | | |
|-----------|---|-----------|--------|--------|
| | | Min | Actual | Max |
| 3-28 | Resolution Bandwidth Accuracy and Selectivity (Continued) | | | |
| | 28. 1 MHz | | _____ | 15 |
| | 300 kHz | | _____ | 15 |
| | 100 kHz | | _____ | 15 |
| | 30 kHz | | _____ | 15 |
| | 10 kHz | | _____ | 15 |
| | 3 kHz | | _____ | 15 |
| | 1 kHz | | _____ | 15 |
| | 300 Hz | | _____ | 15 |
| | 100 Hz | | _____ | 15 |
| 3-29 | Input Attenuator Accuracy | | | |
| | 9 Cumulative Accuracy at 50 MHz | | | |
| | 20 dB ATTEN | + 8.2 dB | _____ | + 11.8 |
| | 30 dB ATTEN | + 18.2 dB | _____ | + 21.8 |
| | 40 dB ATTEN | + 28.2 dB | _____ | + 31.8 |
| | 50 dB ATTEN | + 38.2 dB | _____ | + 41.8 |
| | 20 dB ATTEN | + 48.2 dB | _____ | + 51.8 |
| | 20 dB ATTEN | + 58.2 dB | _____ | + 61.8 |
| | 11. Step-to-Step Accuracy at 50 MHz | | | |
| | 20 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | 30 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | 40 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | 50 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | 60 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | 70 dB ATTEN | - 0.6 dB | _____ | + 0.6 |
| | | _____ | | |
| | | _____ | | |
| | | _____ | | |
| | | _____ | | |
| | | _____ | | |

Table 3-38. Performance Test Record (3 of 8)

| Para. No. | Test Description | Results | | |
|-----------|--|-----------|--------|-------------|
| | | Min | Actual | Max |
| 3-30 | IF Gain Uncertainty | | | |
| | 34. Log IF Gain Uncertainty (10 dB steps) | -1.0 dB | _____ | +1.0 dB |
| | 35. Log IF Gain Uncertainty (1 dB steps) | -1.0 dB | _____ | +1.0 dB |
| | 36. Linear IF Gain Uncertainty | -1.0 dB | _____ | +1.0 dB |
| 3-31 | Scale Fidelity | | | |
| | 28. Linear Scale Fidelity | | | |
| | 2 dB from REF LVL | -2.33 dB | _____ | -1.68 dB |
| | 4 dB from REF LVL | -4.42 dB | _____ | -3.60 dB |
| | 6 dB from REF LVL | -6.54 dB | _____ | -5.50 dB |
| | 8 dB from REF LVL | -8.68 dB | _____ | -7.37 dB |
| | 10 dB from REF LVL | -10.87 dB | _____ | -9.21 dB |
| | 12 dB from REF LVL | -13.10 dB | _____ | -11.02 dB |
| | 14 dB from REF LVL | -15.42 dB | _____ | -12.78 dB |
| | 16 dB from REF LVL | -17.82 dB | _____ | -14.49 dB |
| | 18 dB from REF LVL | -20.36 dB | _____ | -16.14 dB |
| | 29. Maximum Cumulative 10 dB Log Scale Fidelity | -1.5 dB | _____ | +1.5 dB |
| | 30. Maximum Incremental 10 dB Log Scale Fidelity | -0.4 dB | _____ | +0.4 dB |
| | 31. Maximum Cumulative 2 dB Log Scale Fidelity | -1.5 dB | _____ | +1.5 dB |
| | 32. Maximum Incremental 2 dB Log Scale Fidelity | -0.4 dB | _____ | +0.4 dB |
| 3-32 | Residual FM | | | |
| | 11 Residual FM | | _____ | 50 Hz |
| 3-33 | Noise Sidebands | | | |
| | 11. -30 kHz Offset | | _____ | -100 dBc/Hz |
| | +30 kHz Offset | | _____ | -100 dBc/Hz |
| 3-34 | Image, Multiple, and Out-of-Band Responses | | | |
| | 25. Maximum Response Amplitude <18 GHz | | _____ | -70 dBc |
| | 26. Maximum Response Amplitude <22 GHz | | _____ | -60 dBc |

Table 3-38. Performance Test Record (4 of 8)

| Para. No. | Test Description | Results | | |
|----------------------|---|-----------------|-----------------|-----------------|
| | | Min | Actual | Max |
| 3-35 | Frequency Readout Accuracy and Frequency Count Marker Accuracy | | | |
| | 5. 1.5 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 1.499942 GHz | _____ | 1.500058 GHz |
| | 10 MHz SPAN | 1.49948 GHz | _____ | 1.50052 GHz |
| | 20 MHz SPAN | 1.49895 GHz | _____ | 1.50105 GHz |
| | 50 MHz SPAN | 1.49745 GHz | _____ | 1.50255 GHz |
| | 100 MHz SPAN | 1.4948 GHz | _____ | 1.5052 GHz |
| | 1 GHz SPAN | 1.450 GHz | _____ | 1.550 GHz |
| | 4.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 3.999932 GHz | _____ | 4.000068 GHz |
| | 10 MHz SPAN | 3.99947 GHz | _____ | 4.00053 GHz |
| | 20 MHz SPAN | 3.99894 GHz | _____ | 4.00106 GHz |
| | 50 MHz SPAN | 3.99744 GHz | _____ | 4.00256 GHz |
| | 100 MHz SPAN | 3.9948 GHz | _____ | 4.0052 GHz |
| | 1 GHz SPAN | 3.950 GHz | _____ | 4.050 GHz |
| | 9.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 8.999912 GHz | _____ | 9.000088 GHz |
| | 10 MHz SPAN | 8.99945 GHz | _____ | 9.00055 GHz |
| | 20 MHz SPAN | 8.99892 GHz | _____ | 9.00108 GHz |
| | 50 MHz SPAN | 8.99742 GHz | _____ | 9.00258 GHz |
| | 100 MHz SPAN | 8.9948 GHz | _____ | 9.0052 GHz |
| | 1 GHz SPAN | 8.950 GHz | _____ | 9.050 GHz |
| | 16.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 15.99984 GHz | _____ | 16.000116 GHz |
| | 10 MHz SPAN | 15.99942 GHz | _____ | 16.00058 GHz |
| | 20 MHz SPAN | 15.99889 GHz | _____ | 16.00111 GHz |
| | 50 MHz SPAN | 15.99739 GHz | _____ | 16.00261 GHz |
| | 100 MHz SPAN | 15.9948 GHz | _____ | 16.0052 GHz |
| | 1 GHz SPAN | 15.950 GHz | _____ | 16.050 GHz |
| | 22.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 20.999864 GHz | _____ | 21.000136 GHz |
| | 10 MHz SPAN | 20.99940 GHz | _____ | 21.00060 GHz |
| | 20 MHz SPAN | 20.99887 GHz | _____ | 21.00113 GHz |
| | 50 MHz SPAN | 20.99737 GHz | _____ | 21.00263 GHz |
| | 100 MHz SPAN | 20.9948 GHz | _____ | 21.0052 GHz |
| | 1 GHz SPAN | 20.950 GHz | _____ | 21.050 GHz |
| | 8. Frequency Count Marker Accuracy | | | |
| | 1.5 GHz CENTER FREQ | 1.49999394 GHz | _____ | 1.50000606 GHz |
| | 4.0 GHz CENTER FREQ | 3.99998394 GHz | _____ | 4.00001606 GHz |
| | 9.0 GHz CENTER FREQ | 8.99996389 GHz | _____ | 9.00003611 GHz |
| | 16.0 GHz CENTER FREQ | 15.99993584 GHz | _____ | 16.00006416 GHz |
| 21.0 GHz CENTER FREQ | 20.99991579 GHz | _____ | 21.00008421 GHz | |

Table 3-38. Performance Test Record (5 of 8)

| Para. No. | Test Description | Results | | |
|---|---|----------|---------------------|---|
| | | Min | Actual | Max |
| 3-36 | Pulse Digitization Uncertainty | | | |
| | 7. 5 dB/Div | -1.0 dB | _____ | +1.0 dB |
| | 8. 1 dB/Div | -1.0 dB | _____ | +1.0 dB |
| | 14 Linear | -0.40 dB | _____ | +0.38 dB |
| 3-37 | Second Harmonic Distortion | | | |
| | 6. <2.9 GHz 31. >2.9 GHz | | _____ _____ | -72 dBc -100 dBc (HP 8562B: -60 dBc) |
| 3-38 | Frequency Response | | | |
| | Band 0 | | | |
| | 51(c) Maximum Positive Response | | _____ | +5.1 dB |
| | 51(f) Maximum Negative Response | -5.1 dB | _____ | |
| | 51(h) Peak-to-Peak Response | | _____ | +2.4 dB |
| | Band 1 | | | |
| | 52(a) Maximum Positive Response | | _____ | +5.1 dB |
| | 52(b) Maximum Negative Response | -5.1 dB | _____ | |
| | 52(c) Peak-to-Peak Response (HP 8562B: | | _____ | +5.0 dB +4.0 dB) |
| | Band 2 | | | |
| | 53(a) Maximum Positive Response | | _____ | +5.1 dB |
| | 53(b) Maximum Negative Response | -5.1 dB | _____ | |
| | 53(c) Peak-to-Peak Response (HP 8562B: | | _____ | +7.0 dB +5.0 dB) |
| | Band 3 | | | |
| | 54(a) Maximum Positive Response | | _____ | +5.1 dB |
| 54(b) Maximum Negative Response | -5.1 dB | _____ | | |
| 54(c) Peak-to-Peak Response (HP 8562B: | | _____ | +8.0 dB +6.0 dB) | |
| Band 4 | | | | |
| 55(a) Maximum Positive Response | | _____ | +5.1 dB | |
| 55(b) Maximum Negative Response | -5.1 dB | _____ | | |
| 55(c) Peak-to-Peak Response | | _____ | +8.6 dB | |

Table 3-38. Performance Test Record (6 of 8)

| Para. No. | Test Description | Results | | |
|-----------|---|-----------|--------|--------------|
| | | Min | Actual | Max |
| 3-38 | Frequency Response (Cont'd) | | | |
| | Band Switching Uncertainty | | | |
| | 59. Band 0 to Band 1 | | _____ | 4.2 dB (3.7) |
| | Band 0 to Band 2 | | _____ | 5.2 dB (4.2) |
| | Band 0 to Band 3 | | _____ | 5.7 dB (4.7) |
| | Band 0 to Band 4 | | _____ | 6.0 dB |
| | Band 1 to Band 2 | | _____ | 6.5 dB (5.0) |
| | Band 1 to Band 3 | | _____ | 7.0 dB (6.0) |
| | Band 1 to Band 4 | | _____ | 7.3 dB (6.8) |
| | Band 2 to Band 3 | | _____ | 8.0 dB (6.0) |
| | Band 2 to Band 4 | | _____ | 8.3 dB (7.3) |
| | Band 3 to Band 4 | | _____ | 8.8 dB (7.8) |
| | (Limits in parentheses apply to HP 8562B) | | | |
| 3-39 | Frequency Span Accuracy | | | |
| | 6. 1.5 GHz CENTER FREQ | | | |
| | 10 kHz SPAN | 7.60 kHz | _____ | 8.40 kHz |
| | 20 kHz SPAN | 15.20 kHz | _____ | 16.80 kHz |
| | 50 kHz SPAN | 38.00 kHz | _____ | 42.00 kHz |
| | 100 kHz SPAN | 76.0 kHz | _____ | 84.0 kHz |
| | 101 kHz SPAN | 76.0 kHz | _____ | 84.0 kHz |
| | 200 kHz SPAN | 152.0 kHz | _____ | 168.0 kHz |
| | 500 kHz SPAN | 380.0 kHz | _____ | 420.0 kHz |
| | 1 MHz SPAN | 760 kHz | _____ | 840 kHz |
| | 1.01 MHz SPAN | 760 kHz | _____ | 840 kHz |
| | 2 MHz SPAN | 1.520 MHz | _____ | 1.680 MHz |
| | 5 MHz SPAN | 3.800 MHz | _____ | 4.200 MHz |
| | 10 MHz SPAN | 7.60 MHz | _____ | 8.40 MHz |
| | 20 MHz SPAN | 15.20 MHz | _____ | 16.80 MHz |
| | 50 MHz SPAN | 38.00 MHz | _____ | 42.00 MHz |
| | 100 MHz SPAN | 76.0 MHz | _____ | 84.0 MHz |
| | 200 MHz SPAN | 152.0 MHz | _____ | 168.0 MHz |
| | 500 MHz SPAN | 380.0 MHz | _____ | 420.0 MHz |
| | 1 GHz SPAN | 760 MHz | _____ | 840 MHz |
| | 2 GHz SPAN | 1.520 GHz | _____ | 1.680 GHz |
| | 90 GHz CENTER FREQ | | | |
| | 10 kHz SPAN | 7.60 kHz | _____ | 8.40 kHz |
| | 20 MHz SPAN | 15.20 MHz | _____ | 16.80 MHz |
| | 50 MHz SPAN | 38.00 MHz | _____ | 42.00 MHz |
| | 5 GHz SPAN | 3.800 GHz | _____ | 4.200 GHz |
| | 16.0 GHz CENTER FREQ | | | |
| | 10 kHz SPAN | 7.60 kHz | _____ | 8.40 kHz |
| | 50 MHz SPAN | 38.00 MHz | _____ | 42.00 MHz |
| | 100 MHz SPAN | 76.0 MHz | _____ | 84.0 MHz |
| | 5 GHz SPAN | 3.800 GHz | _____ | 4.200 GHz |

Table 3-38. Performance Test Record (7 of 8)

| Para. No. | Test Description | Results | | |
|-----------------|--|--------------|--------|--------------|
| | | Min | Actual | Max |
| 3-39 | Frequency Span Accuracy (Cont'd) | | | |
| | 20.5 GHz CENTER FREQ | | | |
| | 10 kHz SPAN | 7.60 kHz | _____ | 8.40 kHz |
| | 50 MHz SPAN | 38.00 MHz | _____ | 42.00 MHz |
| | 100 MHz SPAN | 76.0 MHz | _____ | 84.0 MHz |
| | 12.4 GHz CENTER FREQ | | | |
| | 19.25 GHz SPAN | 17.10 GHz | _____ | 18.90 GHz |
| 3-40 | Third Order Intermodulation Distortion | | | |
| | 30. TOI Distortion at 2.8 GHz | | _____ | -70 dBc |
| | 31. TOI Distortion at 4.0 GHz | | _____ | -75 dBc |
| 3-41 | Gain Compression | | | |
| | 12. Gain Compression at 2 GHz | | _____ | 1.0 dB |
| | 24. Gain Compression at 4 GHz | | _____ | 1.0 dB |
| | Gain Compression at 7 GHz | | _____ | 1.0 dB |
| 3-42 | 1ST LO OUTPUT Amplitude | | | |
| | 7. Maximum 1ST LO OUTPUT Power | | _____ | +18.5 dBm |
| | 8. Minimum 1ST LO OUTPUT Power | +14.5 dBm | _____ | |
| 3-43 | Sweep Time Accuracy | | | |
| | 8. 50 μ s SWEEP TIME | 42.5 μ s | _____ | 57.5 μ s |
| | 100 μ s SWEEP TIME | 85 μ s | _____ | 115 μ s |
| | 200 μ s SWEEP TIME | 170 μ s | _____ | 230 μ s |
| | 500 μ s SWEEP TIME | 425 μ s | _____ | 575 μ s |
| | 1 ms SWEEP TIME | 850 μ s | _____ | 1.15 ms |
| | 2 ms SWEEP TIME | 1.70 ms | _____ | 2.30 ms |
| | 5 ms SWEEP TIME | 4.25 ms | _____ | 5.75 ms |
| | 10 ms SWEEP TIME | 8.5 ms | _____ | 11.5 ms |
| | 20 ms SWEEP TIME | 17.0 ms | _____ | 23.0 ms |
| | 16. 30 ms SWEEP TIME | 29.7 ms | _____ | 30.3 ms |
| | 50 ms SWEEP TIME | 49.5 ms | _____ | 50.5 ms |
| | 100 ms SWEEP TIME | 99.0 ms | _____ | 101.0 ms |
| | 200 ms SWEEP TIME | 198.0 ms | _____ | 202.0 ms |
| | 500 ms SWEEP TIME | 495.0 ms | _____ | 505.0 ms |
| | 1 s SWEEP TIME | 990.0 ms | _____ | 1010.0 ms |
| | 2 s SWEEP TIME | 1.980 s | _____ | 2.020 s |
| | 5 s SWEEP TIME | 4.95 s | _____ | 5.05 ms |
| | 10 s SWEEP TIME | 9.90 s | _____ | 10.1 s |
| | 20 s SWEEP TIME | 19.8 s | _____ | 20.2 s |
| 50 s SWEEP TIME | 49.5 s | _____ | 50.5 s | |
| 60 s SWEEP TIME | 59.4 s | _____ | 60.6 s | |

Table 3-38. Performance Test Record (8 of 8)

| Para. No. | Test Description | Results | | |
|-----------|-----------------------------|-----------|--------|-----------|
| | | Min | Actual | Max |
| 3-44 | Residual Responses | | | |
| | 7. 200 kHz to 2.9 GHz | | _____ | -90 dBm |
| | 9. 2.9 GHz to 6.46 GHz | | _____ | -90 dBm |
| 3-45 | IF INPUT Amplitude Accuracy | | | |
| | 15. IF INPUT Amplitude | -31.5 dBm | _____ | -28.5 dBm |

HELP?

4-1. What You'll Find in This Chapter

4-2. Your HP 8562A/B Spectrum Analyzer is built to provide dependable service. It is unlikely that you will experience a problem with the HP 8562A/B. However, if you do, or if you desire additional information or wish to order parts, options, or accessories, HP's worldwide sales and service organization is ready to provide the support you need.

4-3. In general, a problem can be caused by a hardware failure, a software error, or a user error. Perform the quick checks listed in paragraph 4-7, "Check the Basics". These checks may eliminate the problem altogether, or may give a clearer idea of its cause. If you have an HP 8562A/B Test and Adjustment Module you can use its automatic fault isolation routine. See paragraph 4-9.

4-4. If the problem is a hardware problem, you have the following options:

- Repair it yourself: see paragraph 4-16, "Service Options".
- Return the analyzer to HP for repair:

If the analyzer is still under warranty or is covered by an HP maintenance contract, it will be repaired under the terms of the warranty or maintenance contract (the warranty is printed in the front of this manual).

If the analyzer is no longer under warranty or covered by an HP maintenance contract, HP will notify you of the cost of the repair after examining the unit.

4-5. See paragraph 4-20, "How to Call HP", and paragraph 4-22, "How to Return Your Analyzer for Service", for more information.

4-6. Before You Call HP

4-7. Check the Basics

4-8. A problem often can be solved by rechecking what was being done when the problem occurred. A few minutes spent in performing some simple checks may save waiting for your instrument to be repaired. Before calling HP or returning the analyzer for service, please make the following checks:

- Is the analyzer plugged in to the proper ac power source? Does the line socket have power?
- Is the rear-panel voltage selector switch set correctly? Is the line fuse good?
- Is the analyzer turned on?
- If other equipment, cables, and connectors are being used with the HP 8562A/B, are they connected properly and operating correctly?

- Review the procedure for the test being performed when the problem appeared. Are all the switch settings correct?
- Is the test being performed, and the results that are expected, within the specifications and capabilities of the HP 8562A/B? See Chapter 1, Table 1-1.
- Is the HP 8562A/B displaying an error message? If so, refer to Appendix A.
- Perform the Trace Alignment and Reference Level Calibration procedures given in Chapter 2, paragraph 2-20. If the necessary test equipment is available, perform the Operation Verification tests given in Chapter 3. Record all results in Table 3-38, the Performance Test Record.

4-9. HP 85629A Test and Adjustment Module

4-10. A powerful feature of the HP 85629A Test and Adjustment Module (TAM) is the Automatic Fault Isolation routine. If a problem with the HP 8562A/B is suspected, Automatic Fault Isolation can determine in most cases whether or not a fault exists in the analyzer. There are some problems, such as excessive residual FM, that Automatic Fault Isolation will not be able to detect. As a minimum, the display and keyboard must be operational to execute Automatic Fault Isolation.

4-11. Running the Automatic Fault Isolation Routine: To start the Automatic Fault Isolation routine, press the MODULE key and [Diagnose]. Rotate the front-panel knob until the arrow points to Automatic Fault Isolation. Press [Execute]. The CAL OUTPUT must be connected to the INPUT 50Ω. A BNC cable and Type N to BNC adapter is shipped with each analyzer in the front cover. Press [Continue] and the Automatic Fault Isolation routine will begin.

4-12. The Automatic Fault Isolation routine will perform checks of five sections of the analyzer. The routine's progress is displayed on the CRT. The routine will stop as soon as it detects a "Failure". If no failures are detected, the Automatic Fault Isolation routine will take about 90 seconds to complete.

4-13. If a failure is detected, either continue troubleshooting using the Support Manual or return the analyzer to the nearest HP Service Center as described in paragraph 4-22. If an HP-IB printer is available and properly connected and configured, a hard-copy printout of the Automatic Fault Isolation results can be obtained by pressing [Print Page]. Include a copy of this printout with the analyzer if it is being returned to an HP Service Center for repair.

4-14. Read the Warranty

4-15. The warranty for your HP 8562A/B is printed in the front of this manual. Please read it and become familiar with its terms. If your analyzer is covered by a separate maintenance agreement, please be familiar with its terms.

4-16. Service Options

4-17. HP offers several maintenance plans to service your analyzer after the warranty has expired. Call your HP Sales and Service office for full details.

4-18. If you want to service the analyzer yourself after the warranty expires, you can purchase the HP 8562A/B Support Manual, HP Part Number 08562-90009, which provides all necessary test and maintenance

information. An HP 8562A/B Product Support Kit, HP Part Number 08562-60021, is also available. The kit contains the following accessories:

- PC Board Prop
- Power Line Switch Assembly
- Power Line Assembly
- SMB Cable Puller
- Option Module Extender Cable
- Two Test Cables, BNC to SMB

4-19. You can order the Support Manual and Product Support Kit through your HP Sales and Service Office.

4-20. How to Call HP

4-21. Hewlett-Packard has Sales and Support offices around the world to provide you with complete support for your HP 8562A/B. To obtain servicing information or to order replacement parts, contact the nearest Hewlett-Packard Sales and Service Office listed in Table 4-1 at the end of this section. In any correspondence or telephone conversations, refer to the analyzer by its model number and full serial number. With this information, the HP representative can quickly determine whether your unit is still within its warranty period.

4-22. How to Return Your Analyzer for Service

4-23. Service Tag

4-24. If you are returning the analyzer to Hewlett-Packard for servicing, fill in and attach a blue service tag. Several service tags are supplied at the rear of this manual.

4-25. Please be as specific as possible about the nature of the problem. If you have recorded any error messages that appeared on the screen, or have completed a Performance Test Record, or have any other specific data on the performance of the analyzer, please send a copy of this information with the unit.

4-26. Original Packaging

4-27. Before shipping, pack the unit in the original factory packaging materials if they are available. If the original materials were not retained, identical packaging materials are available through any Hewlett-Packard office. Descriptions of the packaging materials are listed in the legend for Figure 2-1.

4-28. Other Packaging

CAUTION

Analyzer damage can result from using packaging materials other than those specified. Never use styrene pellets in any shape as packaging materials. They do not adequately cushion the equipment or prevent it from shifting in the carton. They cause equipment damage by generating static electricity and by lodging in the analyzer fan.

4-29. You can repackage the analyzer with commercially available materials, as follows:

1. Attach a completed service tag to the instrument.
2. Install the front-panel cover on the instrument.
3. Wrap the instrument in anti-static plastic to reduce the possibility of damage caused by electrostatic discharge.
4. Use a strong shipping container. A double-walled, corrugated cardboard carton with 159-kg (350-lb) bursting strength is adequate. The carton must be both large enough and strong enough to accommodate the analyzer. Allow at least three to four inches on all sides of the analyzer for packing material.
5. Surround the equipment with three to four inches of packing material and prevent the equipment from moving in the carton. If packing foam is not available, the best alternative is SD-240 Air Cap™ from Sealed Air Corporation (Commerce, California, 90001) Air Cap looks like a plastic sheet filled with 1-1/4 inch air bubbles. Use the pink-colored Air Cap to reduce static electricity. Wrapping the equipment several times in this material should both protect the equipment and prevent it from moving in the carton.
6. Seal the shipping container securely with strong nylon adhesive tape.
7. Mark the shipping container "FRAGILE, HANDLE WITH CARE" to assure careful handling.
8. Retain copies of all shipping papers.

Table 4-1. HP Spectrum Analyzer Sales and Service Offices (1 of 2)

| | |
|--|---|
| <p>IN THE UNITED STATES</p> <p>California Hewlett-Packard Co. P.O. Box 4230 1421 South Manhattan Ave. Fullerton, CA 92631 (714) 999-6700</p> <p>Hewlett-Packard Co. 333 Logue Ave. Mountain View, CA 94040 (415) 969-0880</p> <p>Colorado Hewlett-Packard Co. 24 Inverness Place, East Englewood, CO 80112 (303) 649-5000</p> <p>Georgia Hewlett-Packard Co. P.O. Box 105005 2000 South Park Place Atlanta, GA 30339 (404) 955-1500</p> <p>Illinois Hewlett-Packard Co. 5201 Tollview Drive Rolling Meadows, IL 60008 (312) 255-9800</p> <p>New Jersey Hewlett-Packard Co. 120 W. Century Road Paramus, NJ 07653 (201) 265-5000</p> <p>Texas Hewlett-Packard Co. 930 E. Campbell Rd. Richardson, TX 75081 (214) 231-6101</p> | <p>IN AUSTRALIA Hewlett-Packard Australia Ltd. 31-41 Joseph Street Blackburn, Victoria 3130 895-2895</p> <p>IN CANADA Hewlett-Packard (Canada) Ltd. 17500 South Service Road Trans-Canada Highway Kirkland, Quebec H9J 2X8 (514) 697-4232</p> <p>IN FRANCE Hewlett-Packard France F-91947 Les Ulis Cedex Orsay (6) 907-78-25</p> <p>IN GERMAN FEDERAL REPUBLIC Hewlett-Packard GmbH Vertriebszentrale Frankfurt Berner Strasse 117 Postfach 560 140 D-6000 Frankfurt 56 (0611) 50-04-1</p> <p>IN GREAT BRITAIN Hewlett-Packard Ltd. King Street Lane Winnersh, Wokingham Berkshire RG11 5AR 0734 784774</p> <p>IN OTHER EUROPEAN COUNTRIES Hewlett-Packard (Schweiz) AG Allmend 2 CH-8967 Widen (Zurich) (0041) 57 31 21 11</p> |
|--|---|

Table 4-1. HP Spectrum Analyzer Sales and Service Offices (2 of 2)

| | |
|--|--|
| <p>IN JAPAN Yokogawa-Hewlett-Packard Ltd. 29-21 Takaido-Higashi, 3 Chome Suginami-ku Tokyo 168 (03) 331-6111</p> <p>IN PEOPLE'S REPUBLIC OF CHINA China Hewlett-Packard, Ltd. P.O. Box 9610, Beijing 4th Floor, 2nd Watch Factory Main Bldg. Shuang Yu Shu, Bei San Huan Rd. Beijing 28-0567</p> <p>IN SINGAPORE Hewlett-Packard Singapore Pte. Ltd. #08-00 Inchcape House 450-2 Alexandra Road Alexandra P.O. Box 58 Singapore, 9115 4731788</p> | <p>IN TAIWAN Hewlett-Packard Taiwan 8th Floor, Hewlett-Packard Building 337 Fu Hsing North Road Taipei (02) 712-0404</p> <p>IN ALL OTHER LOCATIONS Hewlett-Packard Inter-Americas 3200 Hillview Avenue Palo Alto, California 94304</p> |
|--|--|

APPENDIX A

ERROR MESSAGES

The HP 8562A/B displays error messages in the lower right-hand corner of the CRT display. A number, or error code, is associated with each error message. Several different error codes can correspond to the same error message. These codes are used by service personnel to troubleshoot the spectrum analyzer.

It might be possible to eliminate some error messages by performing a [REALIGN LO & IF] sequence. Follow this procedure:

1. Press the SAVE key and [SAVE STATE].
2. Store the current state in a convenient STATE register.
3. Press the PRESET key and [REALIGN LO & IF]. Wait for the sequence to finish.
4. Press the RECALL key and [RECALL STATE].
5. Recall the previously stored STATE.

If an error message is still displayed, refer to Chapter 4 of this manual, "Help?"

If it is necessary to send the spectrum analyzer in for repair, note any error messages by the error code. This will provide useful information to the person troubleshooting the analyzer.

The HP 8562A/B can display only one error message at one time, although more error messages may exist. To check for more error messages, proceed as follows:

1. Press the RECALL key and [MORE].
2. Press [RECALL ERRORS]. An error message will be displayed in the active function block.
3. Use the ↑ and ↓ keys to scroll through any other error messages which might exist, making note of each error code.

Error messages and their associated error codes are listed below in numeric order.

| | | |
|---------|----------|---|
| ERR 100 | NO PWRON | Power-on state is invalid; default state is loaded. |
| ERR 101 | NO STATE | State to be RECALLED not valid or not SAVED. |
| ERR 106 | ABORTED! | Current operation is aborted; HP-IB parser reset. |
| ERR 107 | HELLO ?? | No HP-IB listener is present. |
| ERR 108 | TIME OUT | Analyzer timed out when acting as controller. |
| ERR 109 | CtrlFail | Analyzer unable to take control of the bus. |
| ERR 110 | NOT CTRL | Analyzer is not system controller. |
| ERR 111 | # ARGMTS | Command does not have enough arguments. |
| ERR 112 | ??CMD?? | Unrecognized command. |
| ERR 113 | FREQ NO! | Command cannot have frequency units. |
| ERR 114 | TIME NO! | Command cannot have time units. |

| | | |
|---------|-----------|---|
| ERR 115 | AMPL NO! | Command cannot have amplitude units. |
| ERR 116 | ?UNITS?? | Unrecognizable units. |
| ERR 117 | NOP NUM | Command cannot have numeric units. |
| ERR 118 | NOP EP | Enable parameter cannot be used. |
| ERR 119 | NOP UPDN | UP/DN are not valid arguments for command. |
| ERR 120 | NOP ONOF | ON/OFF are not valid arguments for command. |
| ERR 121 | NOP ARG | AUTO/MAN are not valid arguments for command. |
| ERR 122 | NOP TRC | Trace registers are not valid for command. |
| ERR 123 | NOP ABLK | A-block format not valid here. |
| ERR 124 | NOP IBLK | I-block format not valid here. |
| ERR 125 | NOP STRNG | Strings are not valid for this command. |
| ERR 126 | NO ? | This command cannot be queried. |
| ERR 127 | BAD DTMD | Not a valid peak detector mode. |
| ERR 128 | PK WHAT? | Not a valid peak search parameter. |
| ERR 129 | PRE TERM | Premature A-block termination. |
| ERR 130 | BAD TDF | Arguments are only for TDF command. |
| ERR 131 | ?? AM/FM | AM/FM are not valid arguments for this command. |
| ERR 132 | !FAV/RMP | FAV/RAMP are not valid arguments for this command. |
| ERR 133 | !INT/EXT | INT/EXT are not valid arguments for this command. |
| ERR 134 | ??? ZERO | ZERO is not a valid argument for this command. |
| ERR 135 | ??? CURR | CURR is not a valid argument for this command. |
| ERR 136 | ??? FULL | FULL is not a valid argument for this command. |
| ERR 137 | ??? LAST | LAST is not a valid argument for this command. |
| ERR 138 | !GRT/DSP | GRT/DSP are not valid arguments for this command. |
| ERR 139 | PLOTONLY | Argument can only be used with PLOT command. |
| ERR 140 | ?? PWRON | PWRON is not a valid argument for this command. |
| ERR 141 | BAD ARG | Argument can only be used with FDIAG command. |
| ERR 142 | BAD ARG | Query expected for FDIAG command. |
| ERR 143 | NO PRESL | No preselector hardware to use command with (HP 8562B). |
| ERR 200 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 201 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 250 | OUTOF RG | ADC input is outside of ADC range. |
| ERR 251 | NO IRQ | Microprocessor not receiving interrupt from ADC. |
| ERR 300 | YTO UNLK | YTO (1st LO) phase-locked loop (PLL) is unlocked. |
| ERR 301 | YTO UNLK | YTO PLL is unlocked. |
| ERR 302 | OFF UNLK | Offset Roller Oscillator PLL is unlocked. |
| ERR 303 | XFR UNLK | Transfer Roller Oscillator PLL is unlocked. |
| ERR 304 | ROL UNLK | Main Roller Oscillator PLL is unlocked. |
| ERR 305 | FREQ ACC | Frequency accuracy error. |
| ERR 306 | FREQ ACC | Frequency accuracy error. |
| ERR 307 | FREQ ACC | Frequency accuracy error. |
| ERR 308 | FREQ ACC | Frequency accuracy error. |
| ERR 309 | FREQ ACC | Frequency accuracy error. |
| ERR 310 | FREQ ACC | Frequency accuracy error. |
| ERR 311 | FREQ ACC | Frequency accuracy error. |
| ERR 312 | FREQ ACC | Frequency accuracy error. |
| ERR 313 | FREQ ACC | Frequency accuracy error. |
| ERR 314 | FREQ ACC | Frequency accuracy error. |
| ERR 315 | FREQ ACC | Frequency accuracy error. |
| ERR 316 | FREQ ACC | Frequency accuracy error. |
| ERR 317 | FREQ ACC | Frequency accuracy error. |
| ERR 318 | FREQ ACC | Frequency accuracy error. |
| ERR 321 | FREQ ACC | Frequency accuracy error. |

| | | |
|---------|----------|---|
| ERR 322 | FREQ ACC | Frequency accuracy error. |
| ERR 324 | FREQ ACC | Frequency accuracy error. |
| ERR 325 | FREQ ACC | Frequency accuracy error. |
| ERR 326 | FREQ ACC | Frequency accuracy error. |
| ERR 327 | OFF UNLK | Offset Roller Oscillator PLL is unlocked. |
| ERR 328 | FREQ ACC | Frequency accuracy error. |
| ERR 329 | FREQ ACC | Frequency accuracy error. |
| ERR 331 | FREQ ACC | Frequency accuracy error. |
| ERR 333 | 600 UNLK | 600 MHz Reference Oscillator PLL is unlocked. |
| ERR 334 | LO AMPL | YTO (1st LO) unlevelled. |

NOTE

Error codes 400 through 592 are generated when the automatic IF adjustment routine detects a fault. This routine adjusts amplitude parameters first, then resolution bandwidths in this sequence: 300 kHz, 1 MHz, 100 kHz, 30 kHz, 10 kHz, 3 kHz, 1 kHz, 300 Hz, and 100 Hz. The routine will restart from the beginning if a fault is detected. Parameters adjusted after the routine begins and before the fault is detected should be OK; parameters adjusted later in the sequence are suspect.

| | | |
|---------|----------|--|
| ERR 400 | AMPL 100 | Unable to adjust amplitude of 100 Hz RES BW. |
| ERR 401 | AMPL 300 | Unable to adjust amplitude of 300 Hz RES BW. |
| ERR 402 | AMPL 1K | Unable to adjust amplitude of 1 kHz RES BW. |
| ERR 403 | AMPL 3K | Unable to adjust amplitude of 3 kHz RES BW. |
| ERR 404 | AMPL 10K | Unable to adjust amplitude of 10 kHz RES BW. |
| ERR 405 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 406 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 407 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 408 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 409 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 410 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 411 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 412 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 413 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 414 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 415 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 416 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 417 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 418 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 419 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 420 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 421 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 422 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 423 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 424 | RBW 10K | Unable to adjust 10 kHz RES BW. |
| ERR 425 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 426 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 427 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 428 | RBW 3K | Unable to adjust 3 kHz RES BW. |
| ERR 429 | RBW 100 | Unable to adjust 100 Hz RES BW. |

| | | | |
|---------|----------|------|--|
| ERR 430 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 431 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 432 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 433 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 434 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 435 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 436 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 437 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 438 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 439 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 440 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 441 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 442 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 443 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 444 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 445 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 446 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 447 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 448 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 449 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 450 | IF SYSTM | | IF hardware failure. Check other error messages. |
| ERR 451 | IF SYSTM | | IF hardware failure. Check other error messages. |
| ERR 452 | IF SYSTM | | IF hardware failure. Check other error messages. |
| ERR 454 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 455 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 456 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 457 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 458 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 459 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 460 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 461 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 462 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 463 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 464 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 465 | AMPL | | Unable to adjust step gain amplifiers. |
| ERR 466 | LIN AMPL | | Unable to adjust linear amplitude scale. |
| ERR 467 | LOG AMPL | | Unable to adjust log amplitude scale. |
| ERR 468 | LOG AMPL | | Unable to adjust log amplitude scale. |
| ERR 469 | LOG AMPL | | Unable to adjust log amplitude scale. |
| ERR 470 | LOG AMPL | | Unable to adjust log amplitude scale. |
| ERR 471 | RBW | 30K | Unable to adjust 30 kHz RES BW. |
| ERR 472 | RBW | 100K | Unable to adjust 100 kHz RES BW. |
| ERR 473 | RBW | 300K | Unable to adjust 300 kHz RES BW. |
| ERR 474 | RBW | 1M | Unable to adjust 1 MHz RES BW. |
| ERR 475 | RBW | 30K | Unable to adjust 30 kHz RES BW. |
| ERR 476 | RBW | 100K | Unable to adjust 100 kHz RES BW. |
| ERR 477 | RBW | 300K | Unable to adjust 300 kHz RES BW. |
| ERR 478 | RBW | 1M | Unable to adjust 1 MHz RES BW. |
| ERR 483 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 484 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 485 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 486 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 487 | RBW | 100 | Unable to adjust 100 Hz RES BW. |

| | | | |
|---------|------|------|---|
| ERR 488 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 489 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 490 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 491 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 492 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 493 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 494 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 495 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 496 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 497 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 498 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 499 | CAL | UNLK | A16 Cal Oscillator is unlocked. |
| ERR 500 | AMPL | 30K | Unable to adjust amplitude of 30 kHz RES BW. |
| ERR 501 | AMPL | .1M | Unable to adjust amplitude of 100 kHz RES BW. |
| ERR 502 | AMPL | .3M | Unable to adjust amplitude of 300 kHz RES BW. |
| ERR 503 | AMPL | 1M | Unable to adjust amplitude of 1 MHz RES BW. |
| ERR 504 | AMPL | 30K | Unable to adjust amplitude of 30 kHz RES BW. |
| ERR 505 | AMPL | .1M | Unable to adjust amplitude of 100 kHz RES BW. |
| ERR 506 | AMPL | .3M | Unable to adjust amplitude of 300 kHz RES BW. |
| ERR 507 | AMPL | 1M | Unable to adjust amplitude of 1 MHz RES BW. |
| ERR 508 | AMPL | 30K | Unable to adjust amplitude of 30 kHz RES BW. |
| ERR 509 | AMPL | .1M | Unable to adjust amplitude of 100 kHz RES BW. |
| ERR 510 | AMPL | .3M | Unable to adjust amplitude of 300 kHz RES BW. |
| ERR 511 | AMPL | 1M | Unable to adjust amplitude of 1 MHz RES BW. |
| ERR 512 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 513 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 514 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 515 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 516 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 517 | RBW | 100 | Unable to adjust 100 Hz RES BW. |
| ERR 518 | RBW | 300 | Unable to adjust 300 Hz RES BW. |
| ERR 519 | RBW | 1K | Unable to adjust 1 kHz RES BW. |
| ERR 520 | RBW | 3K | Unable to adjust 3 kHz RES BW. |
| ERR 521 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 522 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 523 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 524 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 525 | RBW | 10K | Unable to adjust 10 kHz RES BW. |
| ERR 550 | LOG | AMPL | Unable to adjust amplitude of log scale. |
| ERR 551 | | AMPL | Unable to adjust step gain amplifiers. |
| ERR 552 | LOG | AMPL | Unable to adjust amplitude of log scale. |
| ERR 553 | LOG | AMPL | Unable to adjust amplitude of log scale. |
| ERR 554 | LOG | AMPL | Unable to adjust amplitude of log scale. |
| ERR 555 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 556 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 557 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 558 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 559 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 560 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 561 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 562 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 563 | LOG | AMPL | Unable to adjust amplitude in log scale. |
| ERR 564 | LOG | AMPL | Unable to adjust amplitude in log scale. |

| | | |
|---------|-----------|---|
| ERR 565 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 566 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 567 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 568 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 569 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 570 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 571 | AMPL | Unable to adjust step gain amplifiers |
| ERR 572 | AMPL 1M | Unable to adjust amplitude of 1 MHz RES BW. |
| ERR 573 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 574 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 575 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 576 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 577 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 581 | AMPL | Unable to adjust 100 kHz and ≤ 10 kHz RES BW's. |
| ERR 582 | AMPL | Unable to adjust 100 kHz and ≤ 10 kHz RES BW's. |
| ERR 583 | RBW 30K | Unable to adjust 30 kHz RES BW. |
| ERR 584 | RBW 100K | Unable to adjust 100 kHz RES BW. |
| ERR 585 | RBW 300K | Unable to adjust 300 kHz RES BW. |
| ERR 586 | RBW 1M | Unable to adjust 1 MHz RES BW. |
| ERR 587 | RBW 30K | Unable to adjust 30 kHz RES BW. |
| ERR 588 | RBW 100K | Unable to adjust 100 kHz RES BW. |
| ERR 589 | RBW 300K | Unable to adjust 300 kHz RES BW. |
| ERR 590 | RBW 1M | Unable to adjust 1 MHz RES BW. |
| ERR 591 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 592 | LOG AMPL | Unable to adjust amplitude in log scale. |
| ERR 600 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 601 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 650 | OUTOF RG | ADC input is outside of the ADC range. |
| ERR 651 | NO IRQ | Microprocessor is not receiving interrupt from ADC. |
| ERR 700 | EEROM | Checksum error of EEROM A2U501. |
| ERR 701 | AMPL CAL | Checksum error of frequency response correction data. |
| ERR 702 | ELAP TIM | Checksum error of elapsed time data. |
| ERR 703 | AMPL CAL | Checksum error of frequency response correction data. |
| ERR 704 | PRESELECT | Checksum error of customer preselector peak data. |
| ERR 705 | ROM U906 | Checksum error of Program ROM A2U306. |
| ERR 706 | ROM U307 | Checksum error of Program ROM A2U307. |
| ERR 707 | ROM U308 | Checksum error of Program ROM A2U308. |
| ERR 708 | ROM U309 | Checksum error of Program ROM A2U309. |
| ERR 709 | ROM U310 | Checksum error of Program ROM A2U310. |
| ERR 710 | ROM U311 | Checksum error of Program ROM A2U311. |
| ERR 711 | RAM U303 | Checksum error of System RAM A2U303. |
| ERR 712 | RAM U302 | Checksum error of System RAM A2U302. |
| ERR 713 | RAM U301 | Checksum error of System RAM A2U301. |
| ERR 714 | RAM U300 | Checksum error of System RAM A2U300. |
| ERR 715 | RAM U305 | Checksum error of System RAM A2U305. |
| ERR 716 | RAM U304 | Checksum error of System RAM A2U304. |
| ERR 717 | BAD uP! ! | Microprocessor not fully operational. |
| ERR 718 | BATTERY? | Non-volatile RAM not working; check battery. |
| ERR 750 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 751 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 752 | SYSTEM | Hardware/Firmware interaction; check other errors. |
| ERR 753 | SYSTEM | Hardware/Firmware interaction; check other errors. |

ERR 754 SYSTEM Hardware/Firmware interaction; check other errors.
ERR 755 SYSTEM Hardware/Firmware interaction; check other errors.

Error codes 800 through 899 , MODULE, are reserved for Option Modules, such as the HP 85629A Test and Adjustment Module. Refer to the Option Module's manual for a listing of error messages.



HP 8562A/B Spectrum Analyzer Option 026 Manual Supplement

Supplement HP Part Number: 08562-90035

Supplement Print Date: March 1988

for HP 8562A/B Spectrum Analyzer Installation Manual

Manual HP Part Number: 08562-90007

Manual Print Date: January 1987

This Manual Supplement adapts the information in your HP 8562A/B Spectrum Analyzer Installation Manual to cover Option 026 (26.5 GHz Frequency Extension), as well as standard and Option 001, instruments.

For every page supplied in this supplement, discard the existing page in your manual and replace with the page supplied here.



HP 8562A/B High Performance Portable Spectrum Analyzer

Installation Manual (Includes Options 001 and 026)

Serial Numbers

This manual applies directly to analyzers with the following serial number prefixes:

HP 8562A: 2642A to 2805A
HP 8562B: 2640A to 2809A

For additional important information about serial numbers, see "Analyzers Covered by This Manual" in Chapter 1.

Manual Part Number 08562-90007
Microfiche Part Number 08562-90008
Printed in U.S.A., January 1987

Copyright © 1988 Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999

HP 8562A/B Documentation Description

Manuals shipped with your analyzer:

Installation Manual

HP Part Number 08562-90007

- Tells you how to install the spectrum analyzer
- Tells you what to do in case of a failure

Operating and Programming Manual

HP Part Number 08562-90001

- Tells you how to make measurements with your spectrum analyzer
- Tells you how to program your spectrum analyzer
- Describes analyzer features

Pocket Operating Guide

HP Part Number 08562-90003

- An abbreviated version of the Operating and Programming Manual

Quick Reference Guide

HP Part Number 08562-90006

- Provides you with a listing of all remote programming commands

Options

Support Manual (Part of Option 915)*

HP Part Number 08562-90009

- Describes troubleshooting and repair of the analyzer

* Option 915, Service Documentation, consists of one copy each of the Support Manual, the Installation Manual, the Operating and Programming Manual, the Pocket Operating Guide, and the Quick Reference Guide.

INTRODUCING THE HP 8562A/B

1-1. What You'll Find in This Chapter

1-2. This chapter introduces you to the HP 8562A/B Spectrum Analyzer and its options and accessories that tailor the unit to your specific needs. To acquaint you with the analyzer's full capabilities, the HP 8562A/B specifications and characteristics are also provided.

1-3. Introducing the HP 8562A/B

1-4. The HP 8562A/B μ w/RF High-Performance Portable Spectrum Analyzer is a small, lightweight test instrument that is capable of measuring signals from -119.9 dBm to $+30$ dBm over a frequency range of 1 kHz to 22 GHz (*Option 026: 1 kHz to 26.5 GHz*). The HP 8562A provides preselection from 2.75 to 22 GHz (*Option 026: 2.75 to 26.5 GHz*), while the HP 8562B is unpreselected. The frequency range of the analyzer can be extended, unpreselected, to 110 GHz using HP 11970 Series mixers, and to 325 GHz using other commercially-available mixers.

1-5. The HP 8562A/B is a complete, self-contained instrument that needs only an external ac power source for operation. An ac power cable, suitable for use in the country to which the analyzer is originally shipped, is included with the unit.

1-6. Accessories Supplied

1-7. See Figure 1-1 for a complete listing of the accessories supplied with your HP 8562A/B Spectrum Analyzer.

1-8. Options


1-9. Several options are available to tailor the HP 8562A/B to your needs. Options can be ordered by option number when you order the analyzer. Some of the options are also available as kits that can be ordered and installed after you have received your HP 8562A/B.

1-10. Second IF Output (Option 001): This option provides an output for the second IF (310.7 MHz) at rear-panel connector J10.


1-11. 26.5 GHz Frequency Extension (Option 026): This option extends the specified performance to 26.5 GHz in the HP 8562A. The INPUT 50 Ω connector is changed to a male APC 3.5 connector.

1-12. Rack Mount Flange Kit (Option 908): This option provides the parts necessary to mount the HP 8562A/B in an HP System II cabinet or in a standard 19-inch (482.6-mm) equipment rack. Option 908 is also available as a kit (HP Part Number 5062-0800).


1-13. Rack Mount Flange Kit with Handles (Option 909): Option 909 is the same as Option 908 but includes front handles for added convenience. Option 909 is also available as a kit (HP Part Number 5062-1900).

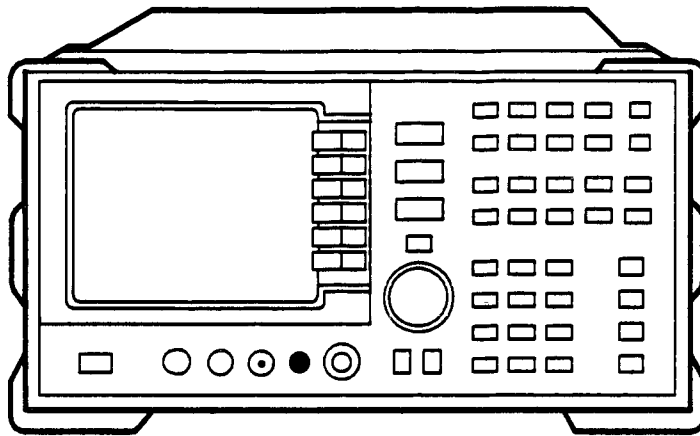

HP 8562A/B




COAX CABLE BNC
HP Part Number 10502A

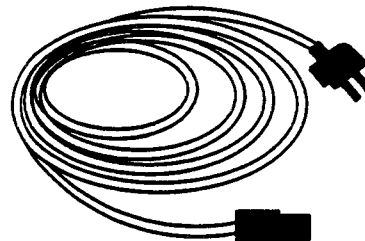

LINE POWER CABLE
(Refer to Table 2-2)



50 TERMINATION
HP Part Number 1810-0118

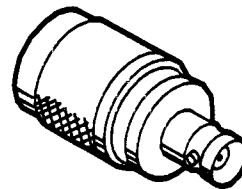

ADAPTER
HP Part Number 1250-0780
(Standard and Option 001)



HEX WRENCH
HP Part Number 8710-1755

ACCESSORIES SUPPLIED BUT NOT SHOWN:

| | |
|---|--------------|
| Impact Cover Assembly | HP 5062-0729 |
| Fuse: 5A, 250V | HP 2110-0709 |
| Sun Hood | HP 5180-9055 |
| Adapter, BNC (f) to SMA (m) (Option 026 only) | HP 1250-1200 |
| Adapter, APC 3.5 (f) to APC 3.5 (f) (Option 026 only) | HP 5061-5311 |

Figure 1-1. HP 8562A/B with Accessories Supplied

Table 3-5. Recommended Test Equipment (3 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|--|---|-------------------|------------|
| Reference Attenuator | Supplied with HP 8484A | HP 11708A | P, A |
| Termination | Frequency Range: dc to 22 GHz Impedance: 50 ohms Maximum SWR: <1.22 Connector: APC 3.5 | HP 909D | P, M, V |
| Low-Pass Filter | Cutoff Frequency: 50 MHz Rejection at 65 MHz: >50 dB | HP 0955-0306 | P, M, V |
| Low-Pass Filter | Cutoff Frequency: 4.1 GHz Rejection at 5.1 GHz: >50 dB (2 required) | HP 360D | P, V |
| Double Balanced Mixer | Maximum Conversion Loss: 9 dB Frequency Range: 5 to 350 MHz Conversion Compression: 0.3 dB for 0 dBm signal at RF port Harmonic Distortion: <-30 dBc | HP 10514A | P, V |
| Directional Coupler | Frequency Range: 1.7 to 22 GHz Coupling: 16.0 dB (nominal) Max. Coupling Deviation: ± 1 dB Directivity: 14 dB minimum Flatness: 0.75 dB maximum VSWR: <1.45 Insertion Loss: <1.3 dB | HP 0955-0125 | P |
| Power Splitter | Frequency Range: 1 kHz to 22 GHz Insertion Loss: 6 dB (nominal) Output Tracking: <0.25 dB Equivalent Output SWR: <1.22 | HP 11667B | P, A, M, V |
| RF Detector | Frequency Range: 0.1 to 1.2 GHz Maximum SWR: <1.3 (typical) Low-Level Sensitivity: >0.35 mV μ W | HP 8471A | A |
| Product Support Kit | No Substitute | HP 08562-60021 | A |
| Adapter | Type N (f) to BNC (m) | HP 1250-1477 | P, V |
| Adapter | Type N (m) to BNC (f) (3 required) | HP 1250-1476 | P, A, M, V |
| Adapter | Type N (f) to APC 3.5 (m) | HP 1250-1750 | A |
| Adapter | Type N (m) to SMA (f) (2 required) | HP 1250-1250 | P, V |
| Adapter | Type N (m) to APC 3.5 (m) (2 required) | HP 1250-1743 | P, A, M, V |
| Adapter | Type N (m) to APC 3.5 (f) | HJP 1250-1744 | P, V, A |
| Adapter | Type N (f) to BNC (f) | HP 1250-1474 | P, V |
| * P = Performance Tests; A = Adjustments; M = Test and Adjustment Module; T = Troubleshooting; V = Operation Verification | | | |

Table 3-5. Recommended Test Equipment (4 of 4)

| Instrument | Critical Specifications for Equipment Substitution | Recommended Model | Use* |
|-------------------|--|---|------------|
| Adapter | Type N (f) to SMA (f) | HP 1250-1772 | P, A |
| Adapter | BNC (f) to BNC (f) | HP 1250-0059 | A |
| Adapter | BNC Tee (f) (m) (f) | HP 1250-0781 | P, A, M, V |
| Adapter | BNC (f) to SMA (m) | HP 1250-1200 | P, A, V |
| Adapter | Type N (f) to APC 3.5 (f) (2 required) | HP 1250-1745 | P, V |
| Adapter | APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 | P, A, M, V |
| Adapter | BNC (f) to Dual Banana Plug | HP 1251-2816 | A |
| Cable | RG-214/U with Type N (m) connectors Length: ≥ 36 in. | HP 11500A | P, V |
| RF Cable | Semi-rigid 50-ohm cable, SMA (m) connectors, length 6 in. to 8 in. | HP 11975-20002 | P |
| Cable | 48-inch 50-ohm coaxial cable with BNC (m) connectors on both ends (5 required) | HP 10503A | P, A, V |
| Cable | Frequency Range: 1 kHz to 26.5 GHz Maximum SWR: < 1.4 at 22 GHz Length: ≥ 91 cm (36 in.) (2 required) Connectors: APC 3.5 (m), both ends Maximum Insertion Loss: 2 dB | HP 8120-4921 | P, A, M, V |
| Cable | HP-IB (required for using Performance Test Software and using HP 85629A Test and Adjustment Module) Length: 2m (6.6 ft.) (12 required) | HP 10833B | P, A, M |
| Test Cable | Connectors: BNC (m) to SMB (f) Length: ≥ 61 cm (24 in.) | HP 85680-60093 | A, M |
| Controller | Required for using Performance Test Software. No substitute. | HP 9816A, HP 9826A, HP 9836A/C, HP 310, or HP 320 | P |
| Spectrum Analyzer | Frequency Range: 1 MHz to 7 GHz | HP 8566A/B | A, T |
| Power Supply | Output Voltage: ≥ 24 Vdc Output Voltage Accuracy: $< \pm 0.2V$ | HP 6114A | A |
| Tuning Tool | N/A | HP 8710-1010 | A |

* P = Performance Tests; A = Adjustments; M = Test and Adjustment Module; T = Troubleshooting;
V = Operation Verification

3-26. Displayed Average Noise Level

SPECIFICATION

| Frequency | Average Noise Level |
|-------------------------------------|---------------------|
| 10 kHz | -90 dBm |
| 100 kHz | -100 dBm |
| 1 MHz–2.9 GHz | -121 dBm |
| 2.9–6.46 GHz | -121 dBm |
| 6.46–13.0 GHz | -110 dBm |
| 13.0–19.7 GHz | -105 dBm |
| 19.7–22 GHz | -100 dBm |
| <i>Option 026:</i> 19.7–26.5 GHz | -100 dBm |

RELATED ADJUSTMENT

Frequency Response Adjustment

DESCRIPTION

This test measures the displayed average noise level in all five frequency bands. The analyzer's input is terminated in 50 ohms. In Band 0, the test first measures the average noise at 10 and 100 kHz in zero span. For the rest of Band 0, and for all the remaining bands, the test tunes the analyzer frequency across the band, uses the marker to locate the frequency with the highest response, and then reads the average noise in zero span.

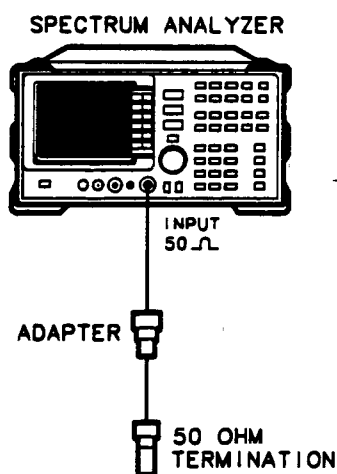


Figure 3-3. Displayed Average Noise Test Setup

EQUIPMENT

50Ω Termination HP 909D

Adapters

Type N (m) to APC 3.5 (f) (*not necessary for Option 026*) HP 1250-1744

Type N (m) to BNC (f) HP 1250-1476

APC 3.5 (f) to APC 3.5 (f) (*required for Option 026*) HP 5061-5311

Cables

BNC, 122 cm (48 in.) HP 10503A

PROCEDURE

Displayed Average Noise, Band 0

1. Connect the CAL OUTPUT to the INPUT 50Ω. Press the PRESET key on the HP 8562A/B and set the controls as follows:

| | |
|-----------------------|---------|
| SPAN | 0 Hz |
| CENTER FREQ | 300 MHz |
| REF LVL | -10 dBm |
| ATTEN | 0 dB |
| RES BW | 100 Hz |
| VIDEO BW | 1 Hz |

2. Press the MARKER ON key, the AMPLITUDE key, [MORE], and [REF LVL CAL].
3. Use the knob or step keys to adjust the REF LEVEL CAL # until the MKR amplitude is -10.00 dBm ±0.17 dB.
4. Connect the HP 909D 50Ω termination to the HP 8562A/B INPUT 50Ω as shown in Figure 3-3.
5. On the HP 8562A/B, press AMPLITUDE and set REF LVL to -50 dBm. Press FREQUENCY and set the CENTER FREQ to 10 kHz.
6. Press the TRIG key, [SINGLE], [SINGLE], and the MARKER ON key. Read the marker amplitude and record it in Table 3-6 as the Displayed Average Noise Level at 10 kHz.
7. Change the HP 8562A/B center frequency to 99 kHz* and press the TRIG key and [SINGLE]. Read the marker amplitude displayed at the upper right-hand corner of the screen and record it in Table 3-6 as the Displayed Average Noise Level at 100 kHz.

* A residual response exists at 100 kHz. Tuning to 99 kHz avoids this response's being displayed, while yielding a displayed average noise reading worse than the noise at 100 kHz.

8. Set the HP 8562A/B controls as follows:

| | | |
|------------|-------|---------|
| START FREQ | | 1 MHz |
| STOP FREQ | | 2.9 GHz |
| MARKER | | OFF |
| RES BW | | 1 MHz |
| VIDEO BW | | 10 kHz |

9. Trigger a single sweep and press the MARKER ON key and [MKRNOISE ON]. Use the front-panel knob to move the marker to the highest average noise level.
10. Press the MKR→ key, [MARKER→CF], the SPAN key, [ZERO SPAN], and the MARKER OFF key. Set the RES BW to 100 Hz and the VIDEO BW to 1 Hz.
11. Press the TRIG key, [SINGLE], and the MARKER ON key.
12. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 1 MHz to 2.9 GHz.

Displayed Average Noise, Band 1

13. Set the HP 8562A/B controls as follows:

| | | |
|------------|-------|----------|
| START FREQ | | 2.9 GHz |
| STOP FREQ | | 6.46 GHz |
| MARKER | | [OFF] |
| RES BW | | 1 MHz |
| VIDEO BW | | 10 kHz |

14. Repeat steps 9 through 11.
15. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 2.9 GHz to 6.46 GHz.

Displayed Average Noise, Band 2

16. Set the HP 8562A/B controls as follows:

| | | |
|------------|-------|----------|
| START FREQ | | 6.46 GHz |
| STOP FREQ | | 13.0 GHz |
| MARKER | | [OFF] |
| RES BW | | 1 MHz |
| VIDEO BW | | 10 kHz |

17. Repeat steps 9 through 11.
18. Read the marker amplitude and record the amplitude in Table 3-6 as the Displayed Average Noise Level from 6.46 GHz to 13.0 GHz.

3-29. Input Attenuator Accuracy

SPECIFICATION

Accuracy (referenced to 10 dB input attenuation, for 20 to 70 dB settings):
 1 kHz to 2.9 GHz: $< \pm 0.6$ dB/10 dB step to a maximum of ± 1.8 dB

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures the input attenuator's switching accuracy and step-to-step accuracy over the full 70 dB range at 50 MHz. The frequency synthesizer is phase-locked to the spectrum analyzer's 10 MHz reference. Switching accuracy is referenced to the 10 dB attenuator setting. The attenuator in the synthesizer/level generator is the measurement standard. Step-to-step accuracy is calculated from switching accuracy data.

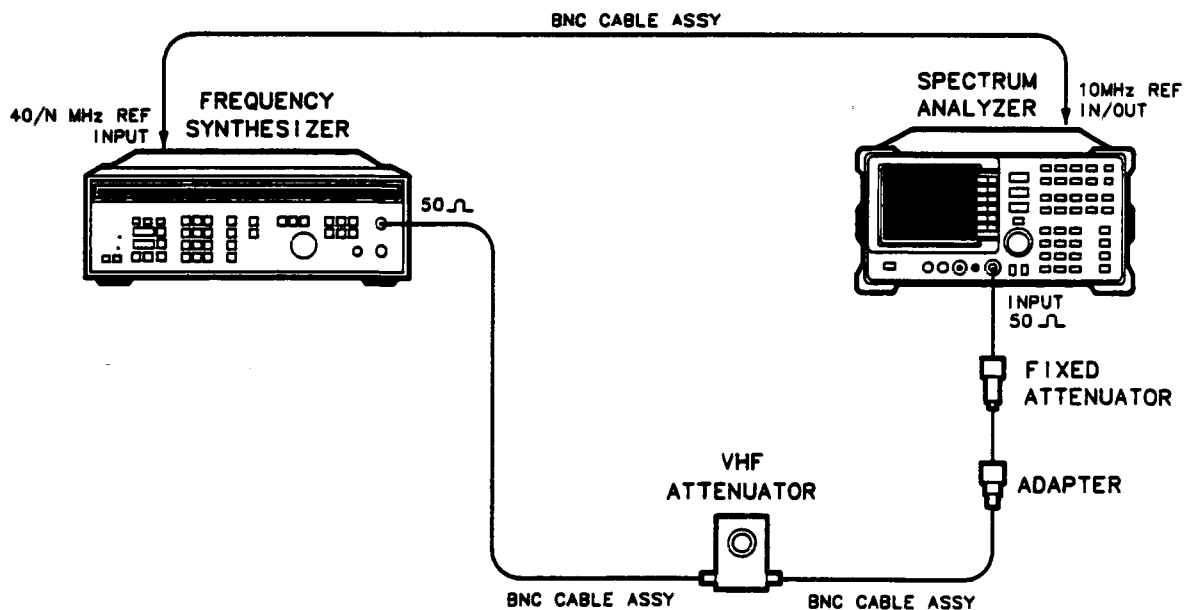


Figure 3-6. Input Attenuator Test Setup, 50 MHz

EQUIPMENT

| | |
|--|----------------------|
| Synthesized Sweeper | HP 8340A |
| Synthesizer/Level Generator | HP 3335A |
| 20 dB Coaxial Fixed Attenuator | HP 8491B, Option 020 |
| 1 dB VHF Step Attenuator | HP 355C |

Adapters

| | |
|---|--------------|
| Type N (m) to BNC (f) | HP 1250-1476 |
| Type N (f) to APC 3.5 (f) (<i>Option 026</i>) | HP 1250-1745 |

Cables

| | |
|--|--------------|
| BNC, 122 cm (48 in.) (<i>3 required</i>) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |

PROCEDURE

Attenuator Switching Accuracy

1. Connect the equipment as shown in Figure 3-6. The HP 8562A/B provides the frequency reference for the HP 3335A.
2. Set the HP 3335A controls as follows:

| | |
|----------------------|---------|
| FREQUENCY | 50 MHz |
| AMPLITUDE | -50 dBm |
| AMPTD INCR | 10 dB |
| OUTPUT | 50Ω |

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF] and set the controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 50 MHz |
| SPAN | 0 Hz |
| REF LVL | -70 dBm |
| dB/DIV | 1 dB |
| RES BW | 3 kHz |
| VIDEO BW | 1 Hz |

4. Set the HP 355C to 0 dB.
5. Adjust the HP 355C step attenuator to place the peak of the signal two to three divisions below the HP 8562A/B reference level.
6. On the HP 8562A/B, press the TRIG key, [SINGLE], and [SINGLE] and wait for a new sweep to finish. Press the MARKER ON key and [MARKER DELTA].
7. Set the HP 3335A amplitude to -40 dBm as indicated in row 2 of Table 3-10.

8. Set the HP 8562A/B REF LVL to -60 dBm and input attenuation to 20 dB as indicated in row 2 of Table 3-10.
9. On the HP 8562A/B, press the TRIG key and [SINGLE] and wait for a sweep to finish. Record the Δ MKR amplitude in Table 3-10 as the Actual Δ MKR Reading. The Δ MKR amplitude reading should be within the limits shown.
10. Repeat step 9 using the HP 3335A Amplitude and HP 8562A/B Ref Lvl and Atten settings listed in Table 3-10.
11. Calculate the Step-to-Step Accuracy as described in the following steps and record the results in Table 3-10. Step-to-Step Accuracy should be within the limits shown in Table 3-10.

Step-to-Step Accuracy Calculation

NOTE

Step-to-Step Accuracy is the measure of how accurate a 10 dB step is. The calculation of Step-to-Step Accuracy is based on the Actual Δ MKR readings in Table 3-10.

12. For the 20 dB ATTEN setting, subtract 10 dB from the Actual Δ MKR Reading to obtain the Step-to-Step Accuracy.

$$20 \text{ dB ATTEN: Step-to-Step Accuracy} = \text{Actual } \Delta \text{ MKR Reading} - 10 \text{ dB}$$

13. For the 30, 40, 50, 60, and 70 dB ATTEN settings, subtract the previous Actual Δ MKR Reading from the current Actual Δ MKR Reading. Subtract 10 dB from the result above to obtain the Step-to-Step Accuracy.

$$\text{Accuracy} = (\text{Current Actual } \Delta \text{ MKR} - \text{Previous Actual } \Delta \text{ MKR}) - 10 \text{ dB}$$

Table 3-10. Input Attenuator Accuracy, 50 MHz

| HP 3335A Amplitude (dBm) | HP 8562A/B Ref Lvl (dBm) | HP 8562A/B Atten (dBm) | Δ MKR Reading | | | Step-to-Step Accuracy | | Measurement Uncertainty (dB) |
|--------------------------------|--------------------------------|------------------------------|----------------------|----------------|-------------|-----------------------|--------------|------------------------------------|
| | | | Min (dB) | Actual (dB) | Max (dB) | Actual (dB) | Spec (dB) | |
| -50 | -70 | 10 | 0 (Ref.) | 0 (Ref.) | 0 (Ref.) | 0 (Ref.) | 0 (Ref.) | 0 (Ref.) |
| -40 | -60 | 20 | +8.2 | _____ | +11.8 | _____ | ± 0.6 | ± 0.178 |
| -30 | -50 | 30 | +18.2 | _____ | +21.8 | _____ | ± 0.6 | ± 0.178 |
| -20 | -40 | 40 | +28.2 | _____ | +31.8 | _____ | ± 0.6 | ± 0.178 |
| -10 | -30 | 50 | +38.2 | _____ | +41.8 | _____ | ± 0.6 | ± 0.178 |
| 0 | -20 | 60 | +48.2 | _____ | +51.8 | _____ | ± 0.6 | ± 0.178 |
| +10 | -10 | 70 | +58.2 | _____ | +61.8 | _____ | ± 0.6 | ± 0.178 |

NOTE

This page replaces pages 3-28 through 3-36 in your manual.

3-30. IF Gain Uncertainty

SPECIFICATION

$< \pm 1.0$ dB, reference levels 0 dBm to -80 dBm with 10 dB input attenuation

RELATED ADJUSTMENT

IF Amplitude Adjustment

DESCRIPTION

This test measures the log (10 dB and 1 dB) and linear IF gain uncertainties. A 0 dBm signal is displayed near the reference level for each test. The input signal level is decreased as the spectrum analyzer's reference level is decreased (IF gain increased). Since the signal level decreases in accurate steps, any error between the reference level and the signal level is caused by the analyzer's IF gain. The frequency synthesizer is phase-locked to the spectrum analyzer's 10 MHz reference.

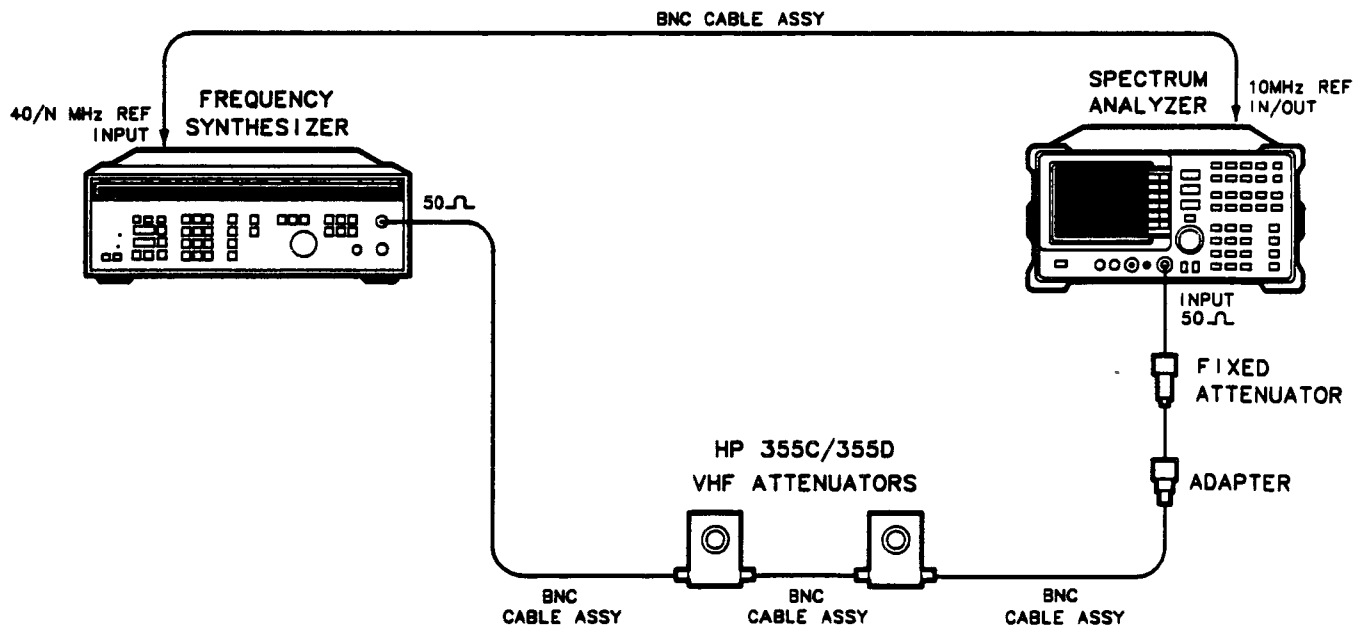


Figure 3-8. IF Gain Uncertainty Test Setup

EQUIPMENT

| | |
|--------------------------------|----------------------|
| Frequency Synthesizer | HP 3335A |
| 10 dB Coaxial Fixed Attenuator | HP 8491B, Option 010 |
| 1 dB VHF Step Attenuator | HP 355C |

Adapters

Type N (m) to BNC (f) HP 1250-1476
 Type N (f) to APC 3.5 (f) (*Option 026*) HP 1250-1745

Cables

BNC, 122 cm (48 in.) (*3 required*) HP 10503A

PROCEDURE

1. Connect the equipment as shown in Figure 3-8. The HP 8562A/B provides the frequency reference for the HP 3335A.

Log Gain Uncertainty (10 dB Steps)

2. Set the HP 3335A controls as follows:

FREQUENCY 50 MHz
 AMPLITUDE + 10 dBm
 AMPTD INCR 10 dB
 OUTPUT 50Ω

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF]. Set the controls as follows:

CENTER FREQ 50 MHz
 SPAN 0 Hz
 dB/DIV 1 dB
 RES BW 1 kHz
 VIDEO BW 1 Hz

4. Set the HP 355C to 0 dB attenuation.
5. On the HP 8562A/B, press the MARKER ON key.
6. Adjust the HP 355C to place the signal 2 to 3 dB (two to three divisions) below the HP 8562A/B reference level.
7. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].
8. Press the AMPLITUDE key on the HP 3335A.
9. Press the ↓ key on the HP 3335A.
10. Set the HP 8562A/B REF LVL to -10 dBm.
11. On the HP 8562A/B, press the TRIG key and [SINGLE].
12. Record the HP 8562A/B Δ MKR amplitude reading in Table 3-15 as the Actual Δ MKR reading. The Δ MKR reading should be within the limits shown.
13. Repeat steps 9 through 12 for the remaining HP 8562A/B REF LVL settings listed in Table 3-15.

EQUIPMENT

| | |
|--|----------------------|
| Frequency Synthesizer | HP 3335A |
| 10 dB Coaxial Fixed Attenuator | HP 8491B, Option 010 |
| 1 dB VHF Step Attenuator | HP 355C |
| 10 dB VHF Step Attenuator | HP 355D |

Adapters

| | |
|---|--------------|
| Type N (m) to BNC (f) | HP 1250-1476 |
| Type N (f) to APC 3.5 (f) (<i>Option 026</i>) | HP 1250-1745 |

Cables

| | |
|--|-----------|
| BNC, 122 cm (48 in.) (<i>3 required</i>) | HP 10503A |
|--|-----------|

PROCEDURE

1. Connect the equipment as shown in Figure 3-9. The HP 8562A/B provides the frequency reference for the HP 3335A.
2. Set the HP 3335A controls as follows:

| | |
|---------------------|-------------|
| FREQUENCY | 50 MHz |
| AMPLITUDE | + 10 dBm |
| AMPL INCR | 0.05 dB |
| OUTPUT | 50 Ω |

3. On the HP 8562A/B, press the PRESET key and [REALIGN LO & IF]. Set the controls as follows:

| | |
|-----------------------|---------|
| CENTER FREQ | 50 MHz |
| SPAN | 0 Hz |
| REF LVL | -10 dBm |
| ATTEN | 0 dB |
| RES BW | 1 kHz |
| VIDEO BW | 30 Hz |

4. Set the HP 335C and HP 355D to 0 dB.
5. On the HP 8562A/B, press the MARKER ON key.
6. Adjust the HP 355C and HP 355D until the HP 8562A/B marker reads between -10 dBm and -11 dBm.

10 dB/DIV Log Scale

7. On the HP 3335A, press the AMPLITUDE key and use the INCR keys to adjust the amplitude until the HP 8562A/B marker reads exactly -10.00 dBm.
8. On the HP 3335A, set the AMPL INCR to 4 dB and press the AMPLITUDE key.
9. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].

10. Set the HP 3335A amplitude to the next value listed in Table 3-18 using the INCR ↓ key. Set the AMPTD INCR to 2 dB before setting the HP 3335A AMPLITUDE to the last power level. Press the TRIG key and [SINGLE] on the HP 8562A/B. Record the Δ MKR amplitude reading in Table 3-18 column 4. The Δ MKR amplitude should be within the limits shown. Repeat this step for each HP 3335A setting.
11. For each Δ MKR reading, subtract the previous Δ MKR reading. Add 4 dB to this number and record the result as the Incremental Error in Table 3-18. The Incremental Error should not exceed ±0.4 dB.

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 4 \text{ dB}$$

For the last step:

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 2 \text{ dB}$$

2 dB/DIV Log Scale

12. Set the HP 8562A/B controls as follows:

TRIG CONT
 dB/DIV 2 dB

13. Set the HP 3335A controls as follows:

AMPLITUDE +10 dBm
 AMPL INCR 0.01 dB

14. On the HP 8562A/B, press the MARKER ON key and [MARKER NORMAL].
15. Adjust the HP 355C and HP 355D until the HP 8562A/B marker reads between -10 dBm and -11 dBm.
16. On the HP 3335A, press the AMPLITUDE key. Use the HP 3335A INCR keys to adjust the amplitude until the HP 8562A/B marker reads exactly -10.00 dBm.
17. Set the HP 3335A AMPL INCR key to 4 dB and press the AMPLITUDE key.
18. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER ON key, and [MARKER DELTA].
19. Set the HP 3335A amplitude to the next value listed in Table 3-19 using INCR ↓ key. Set the AMPTD INCR to 2 dB before setting the HP 3335A AMPLITUDE to the last power level. Press the TRIG key and [SINGLE] on the HP 8562A/B. Record the Δ MKR amplitude reading in Table 3-19 column 4. The Δ MKR amplitude should be within the limits shown. Repeat this step for each HP 3335A setting.
20. For each Δ MKR reading in Table 3-19, subtract the previous Δ MKR reading. Add 4 dB to this number and record the result as the Incremental Error in Table 3-19. The Incremental Error should not exceed ±0.4 dB.

$$\text{Incremental Error} = \text{current } \Delta \text{ MKR} - \text{previous } \Delta \text{ MKR} + 4 \text{ dB}$$

Table 3-19. 2 dB/Div Log Scale Fidelity

| HP 3335A Amplitude (dBm, nominal) | dB from Ref Level (nominal) | Δ MKR Reading | | | Incremental Error (dB) | Measurement Uncertainty (dB) |
|---|-----------------------------------|----------------------|----------------|-------------|------------------------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | | |
| +10 | 0 | 0 | 0 (Ref.) | 0 | 0 (Ref.) | 0 |
| +6 | 4 | -4.4 | _____ | -3.6 | _____ | ± 0.06 |
| +2 | 8 | -8.8 | _____ | -7.2 | _____ | ± 0.06 |
| -2 | 12 | -13.2 | _____ | -10.8 | _____ | ± 0.06 |
| -6 | 16 | -17.5 | _____ | -14.5 | _____ | ± 0.06 |
| -8 | 18 | -19.5 | _____ | -16.5 | _____ | ± 0.06 |

Table 3-20. Linear Scale Fidelity

| HP 3335A Amplitude (dBm, nominal) | dB from Ref Level (nominal) | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|---|-----------------------------------|----------------------|----------------|-------------|------------------------------------|
| | | Min (dB) | Actual (dB) | Max (dB) | |
| +10 | 0 | 0 | 0 (Ref.) | 0 | 0 |
| +8 | 2 | -2.33 | _____ | -1.68 | +0.033/-0.033 |
| +6 | 4 | -4.42 | _____ | -3.60 | +0.034/-0.034 |
| +4 | 6 | -6.54 | _____ | -5.50 | +0.037/-0.037 |
| +2 | 8 | -8.68 | _____ | -7.37 | +0.041/-0.041 |
| 0 | 10 | -10.87 | _____ | -9.21 | +0.046/-0.047 |
| -2 | 12 | -13.10 | _____ | -11.02 | +0.054/-0.054 |
| -4 | 14 | -15.42 | _____ | -12.78 | +0.064/-0.065 |
| -6 | 16 | -17.82 | _____ | -14.49 | +0.078/-0.079 |
| -8 | 18 | -20.36 | _____ | -16.14 | +0.118/-0.12 |

3-32. Residual FM

SPECIFICATION

Residual FM: $< 50 \text{ Hz} \times N \text{ p-p}$ in 100 ms in zero span

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The Residual FM Test measures the inherent short-term instability of the spectrum analyzer's LO system. With the analyzer placed in zero span, a stable signal is applied to the input and slope-detected on the linear portion of the IF bandwidth filter skirt. Any instability in the LO system transfers to the IF signal in the mixing process. The test determines the slope of the IF filter in Hz/dB and then measures the signal amplitude variation caused by the residual FM. Multiplying these two values gives the residual FM in Hz.

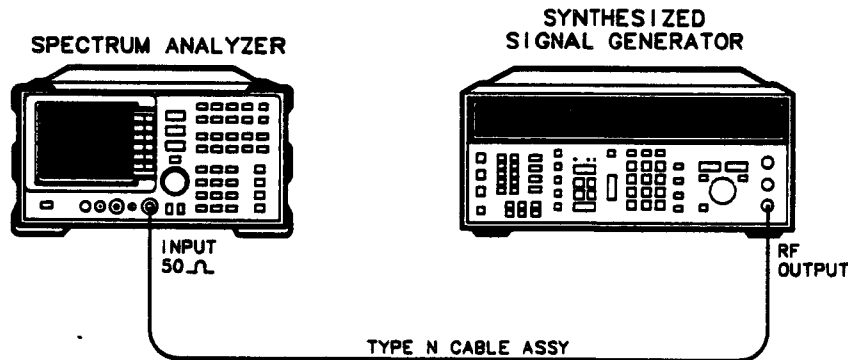


Figure 3-10. Residual FM Test Setup

EQUIPMENT

| | | |
|--|-------|--------------|
| Synthesized Signal Generator | | HP 8663A |
| Adapter | | |
| Type N (f) to APC 3.5 (f) (Option 026) | | HP 1250-1745 |
| Cable | | |
| Type N, 183 cm (72 in.) | | HP 11500A |

3-33. Noise Sidebands

SPECIFICATION

Noise Sidebands: $<(-100 + 20 \text{ Log } N) \text{ dBc/Hz}$

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The noise sidebands of a 2.5 GHz, -10 dBm signal are measured at an offset of 30 kHz from the carrier with a 1 kHz resolution bandwidth.

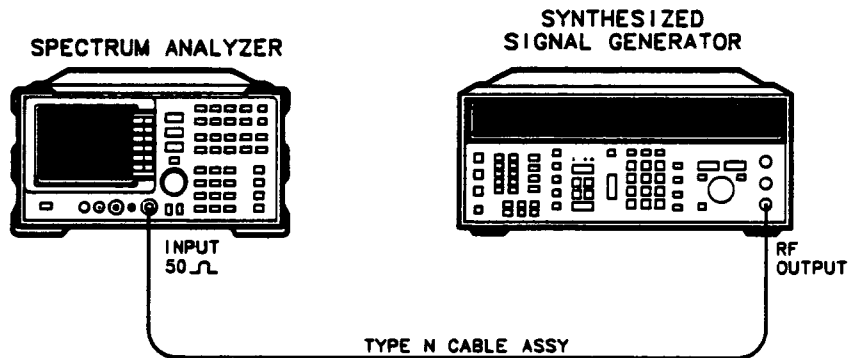


Figure 3-11. Noise Sidebands Test Setup

EQUIPMENT

| | | |
|--|-------|--------------|
| Synthesized Signal Generator | | HP 8663A |
| Adapter | | |
| Type N (f) to APC 3.5 (f) (Option 026) | | HP 1250-1745 |
| Cable | | |
| Type N, 183 cm (72 in.) | | HP 11500A |

PROCEDURE

1. Connect the equipment as shown in Figure 3-11.

2. Set the HP 8663A controls as follows:

FREQUENCY 2500 MHz
 CW OUTPUT -15 dBm

3. On the HP 8562A/B, press the PRESET key and set the controls as follows:

CENTER FREQ 2.5 GHz
 SPAN 1 MHz
 REF LEVEL -10 dBm
 ATTEN 0 dB
 CF STEP 30 kHz

4. On the HP 8562A/B, press PEAK SEARCH, [SIG TRK ON], and SPAN. Set the [SPAN WIDTH] to 10 kHz. Wait for the completion of two sweeps with the SPAN set to 10 kHz, then press Marker ON and [SIG TRK OFF]. Press BW and set [RES BW] to 1 kHz. Press SPAN and [ZERO SPAN]. Press BW and set [VIDEO BW] to 1 Hz.
5. Adjust the HP 8663A amplitude as necessary to place the peak of the signal at the HP 8562A/B reference level.
6. On the HP 8562A/B, press the TRIG key, [SINGLE], and [SINGLE]. Wait for the completion of the sweep and press the MARKER ON key, [MKR NOISE ON], and [MARKER DELTA].
7. On the HP 8562A/B, press the FREQUENCY key, [CF STEP], the 3 key, the 0 key, the kHz key, [CENTER FREQ], and the ↑ key.
8. Press the TRIG key and [SINGLE] on the HP 8562A/B. Wait for the completion of the sweep and then record the Δ MKR amplitude in Table 3-21 column 2 as the Single Sideband Noise for +30 kHz offset.
9. On the HP 8562A/B, press the FREQUENCY key, the ↓ key, and the ↓ key.
10. Press the TRIG key and [SINGLE] on the HP 8562A/B. Wait for the completion of the sweep and then record the Δ MKR amplitude in Table 3-21 column 2 as the Single Sideband Noise for -30 kHz offset.
11. The values recorded in steps 8 and 10 should be less than -100 dBc/Hz.

Table 3-21. Noise Sidebands

| Offset (kHz) | Δ MKR Reading | | Measurement Uncertainty (dB) |
|--------------|-----------------|--------------|------------------------------|
| | Actual (dBc/Hz) | Max (dBc/Hz) | |
| +30 | _____ | -100 | +1.51/-1.53 |
| -30 | _____ | -100 | +1.51/-1.53 |

3-34. Image, Multiple, and Out-of-Band Responses

SPECIFICATION

Image, Multiple, and Out-of-Band Responses:

< 18 GHz: <-70 dBc

< 22 GHz: <-60 dBc

Option 026: <26.5 GHz: <-60 dBc

RELATED ADJUSTMENT

YTF Adjustment (HP 8562A)

DESCRIPTION

This performance test applies only to HP 8562A analyzers. Image, multiple, and out-of-band responses are tested in each of the five frequency bands.

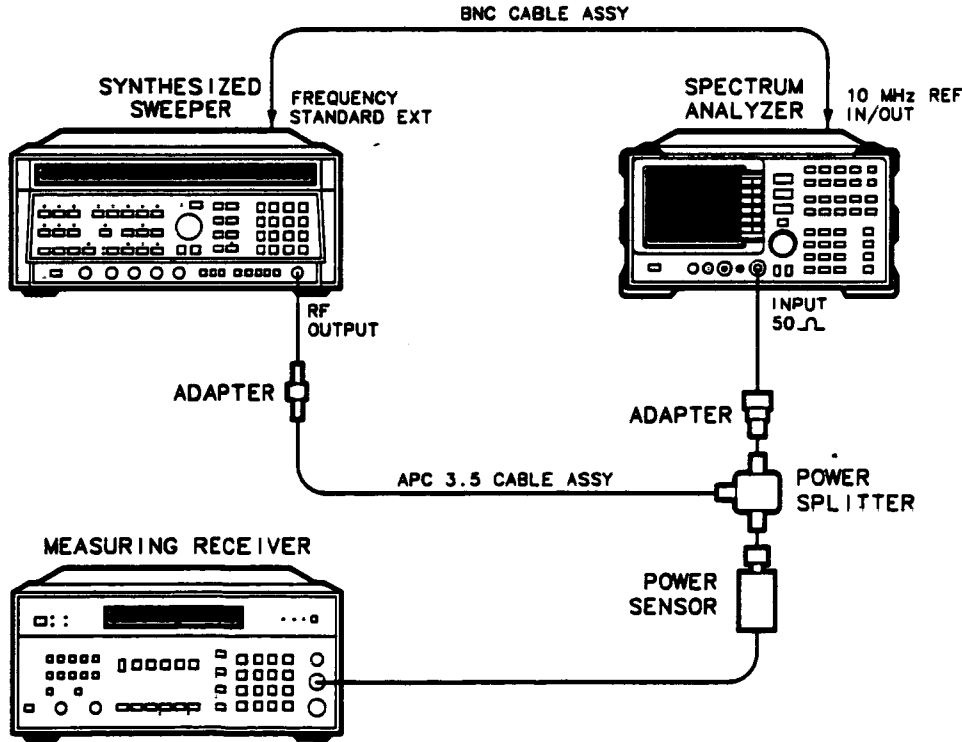


Figure 3-12. Image, Multiple, and Out-of-Band Responses Test Setup

EQUIPMENT

| | | |
|---------------------|-------|-----------|
| Synthesized Sweeper | | HP 8340A |
| Measuring Receiver | | HP 8902A |
| Power Sensor | | HP 8485A |
| Power Splitter | | HP 11667B |

Adapters

| | |
|--|--------------|
| Type N (m) to APC 3.5 (m) (<i>not necessary for Option 026</i>) | HP 1250-1743 |
| Type APC 3.5 (f) to APC 3.5 (f) (<i>2 required for Option 026</i>) | HP 5061-5311 |

Cables

| | |
|-------------------------|--------------|
| BNC, 122 cm (48 in.) | HP 10503A |
| APC 3.5, 91 cm (36 in.) | HP 8120-4921 |

PROCEDURE

Band 0

1. Connect the equipment as shown in Figure 3-12, but do not connect the power sensor to the power splitter.
2. Press the INSTR PRESET key on the HP 8340A, and set the controls as follows:

| | |
|--|---------|
| CW | 2 GHz |
| POWER LEVEL | -10 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. On the HP 8562A, press the PRESET key, the RECALL key, [MORE], and [FACTORY PRESEL PK]. Set the HP 8562A controls as follows:

| | |
|-------------|---------|
| CENTER FREQ | 2 GHz |
| SPAN | 10 kHz |
| REF LEVEL | -10 dBm |
| ATTEN | 0 dB |
| RES BW | 1 kHz |

4. Zero and calibrate the HP 8902A and HP 8485A. Enter the power sensor's 2 GHz calibration factor into the HP 8902A. Connect the HP 8485A to the HP 11667B Power Splitter.
5. Adjust the HP 8340A POWER LEVEL for a -10 dBm ± 0.1 dB reading on the HP 8902A.
6. On the HP 8562A, press the PEAK SEARCH key, the MKR→ key, [MKR→ REF LVL], the TRIG key, [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].
7. For each of the frequencies listed in Table 3-22 for Band 0, do the following:
 - a. Set the HP 8340A to the listed CW key frequency.
 - b. Enter the appropriate power sensor calibration factor into the HP 8902A.
 - c. Set the HP 8340A POWER LEVEL key for a -10 dBm reading on the HP 8902A.
 - d. Press the TRIG key and [SINGLE] on the HP 8562A. Wait for the completion of the sweep before continuing.
 - e. On the HP 8562A, press the PEAK SEARCH key and record the Δ MKR amplitude in Table 3-22 as the Response Amplitude. The Response Amplitude should be less than the specification listed in the table.

8. On the HP 8562A, press the MARKER OFF key, the TRIG key and [CONT].

Band 1

9. Set the HP 8562A center frequency to 4 GHz. Set the HP 8340A CW to 4 GHz.
10. Enter the power sensor's 4 GHz calibration factor into the HP 8902A.
11. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the *PEAKING* message to disappear and press the MARKER OFF key.
12. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 1.

Band 2

13. Set the HP 8562A center frequency to 9 GHz. Set the HP 8340A CW to 9 GHz.
14. Enter the power sensor's 9 GHz calibration factor into the HP 8902A.
15. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the *PEAKING* message to disappear and press the MARKER OFF key.
16. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 2.

Band 3

17. Set the HP 8562A center frequency to 15 GHz. Set the HP 8340A CW to 15 GHz.
18. Enter the power sensor's 15 GHz calibration factor into the HP 8902A.
19. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the *PEAKING* message to disappear and press the MARKER OFF key.
20. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 3.

Band 4

21. Set the HP 8562A center frequency to 21 GHz. Set the HP 8340A CW to 21 GHz.
22. Enter the power sensor's 21 GHz calibration factor into the HP 8902A.
23. On the HP 8562A, press the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the *PEAKING* message to disappear and press the MARKER OFF key.
24. Repeat steps 5 through 8 for the HP 8340A frequencies listed in Table 3-22 for Band 4.

Performance Tests

25. Record the maximum Response Amplitude from Table 3-22 for Band 0, 1, 2, and 3 entries.

Maximum Response Amplitude (< 18 GHz): _____ dBc

26. Record the maximum Response Amplitude from Table 3-22 for Band 4.

Maximum Response Amplitude (< 22 GHz): _____ dBc
(Option 026: < 26.5 GHz:)

Table 3-22. Image, Multiple, and Out-of-Band Responses

| Band | HP 8562A/B Center Freq (GHz) | HP 8340A [CW] (MHz) | Response Amplitude (dBc) | Specification (dBc) | Measurement Uncertainty (dB) |
|---|------------------------------------|---------------------------|--------------------------------|------------------------|------------------------------------|
| 0 | 2.0 | 1978.6* | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 2021.4* | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 1378.6* | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 2621.4* | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 9821.6† | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 7910.7† | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 1810.7‡ | _____ | -70 | +1.52/-1.57 |
| | 2.0 | 289.3‡ | _____ | -70 | +1.52/-1.57 |
| 1 | 4.0 | 3978.6* | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 4021.4* | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 3378.6* | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 4621.4* | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 289.3† | _____ | -70 | +1.52/-1.56 |
| | 4.0 | 3721.4‡ | _____ | -70 | +1.52/-1.56 |
| 2 | 9.0 | 8978.6* | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9021.4* | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 8378.6* | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9621.4* | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 289.3† | _____ | -70 | +1.52/-1.57 |
| | 9.0 | 9921.4‡ | _____ | -70 | +1.52/-1.57 |
| 3 | 15.0 | 14978.6* | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 15021.4* | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 14378.6* | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 15621.4* | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 289.3† | _____ | -70 | +1.53/-1.57 |
| | 15.0 | 14721.4‡ | _____ | -70 | +1.53/-1.57 |
| 4 | 21.0 | 20978.6* | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21021.4* | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 20378.6* | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21621.4* | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 289.3† | _____ | -60 | +1.53/-1.59 |
| | 21.0 | 21921.4‡ | _____ | -60 | +1.53/-1.59 |
| * Image Response † Out-of-Band Response ‡ Multiple Response | | | | | |

3-35. Frequency Readout Accuracy/ Frequency Count Marker Accuracy

SPECIFICATION

Frequency Readout Accuracy: $< \pm [(\text{Center Frequency} \times 4 \times 10^{-6}) + (5\% \text{ of Span}) + (15\% \text{ of RES BW}) + 250 \text{ Hz}]$

Frequency Count Marker Accuracy: $< \pm [(\text{Marker Freq.} \times 4 \times 10^{-6}) + (50 \text{ Hz} \times N) + 1 \text{ LSD}]$

RELATED ADJUSTMENT

YTO Adjustment
10 MHz Frequency Reference Adjustment

DESCRIPTION

The accuracy of the HP 8562A/B frequency readout and frequency count marker is tested with an input signal of known frequency.

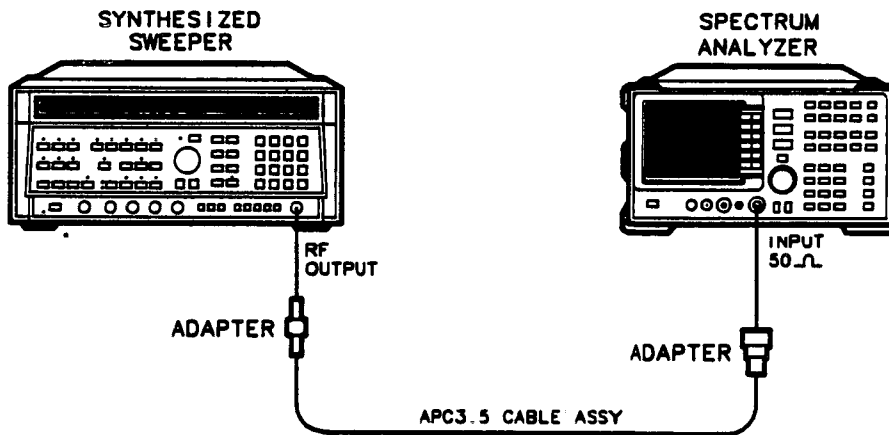


Figure 3-13. Frequency Readout and Frequency Count Accuracy Test Setup

EQUIPMENT

Synthesized Sweeper HP 8340A

Adapters

Type N (m) to APC 3.5 (f) (not necessary for Option 026) HP 1250-1744
Type APC 3.5 (f) to APC 3.5 (f) (2 required for Option 026) HP 5061-5311

Cable

APC 3.5, 91 cm (36 in.) HP 8120-4921

PROCEDURE

1. Connect the equipment as shown in Figure 3-13.

Frequency Readout Accuracy

2. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

| | |
|-------------|---------|
| CW | 1.5 GHz |
| POWER LEVEL | -10 dBm |

3. On the HP 8562A/B, press the PRESET key and set the controls as follows:

| | |
|-------------|---------|
| CENTER FREQ | 1.5 GHz |
| SPAN | 1 MHz |

4. *Omit this step if spectrum analyzer is an HP 8562B.* On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRSEL PK].
5. On the HP 8562A/B, press the PEAK SEARCH key. Record the MKR frequency in Table 3-23 as the Actual Marker Reading. The reading should be within the limits shown.
6. Repeat step 5 for all the frequency and span combinations listed in Table 3-23. Peak the HP 8562A preselector after tuning the analyzer's center frequency and HP 8340A the CW key to frequencies of 4 GHz and above.

Frequency Count Marker Accuracy

7. Set the HP 8562A/B SPAN to 1 MHz. Press the FREQ COUNT key and set [COUNTER RES] to 10 Hz.
8. Key in the HP 8340A CW frequencies and the HP 8562A/B center frequencies as indicated in Table 3-24. For each pair of settings, press the PEAK SEARCH key and record the MKR frequency at each point in Table 3-24. The marker readings should be within the limits shown.

Table 3-23. Frequency Readout Accuracy

| HP 8340A Frequency (GHz) | HP 8562A | | Marker Reading | | | Measurement Uncertainty (kHz) |
|--------------------------------|----------|----------------|----------------|--------|--------------|-------------------------------------|
| | Span | Center Freq | Min (GHz) | Actual | Max (GHz) | |
| 1.5 | 1 MHz | 1.5 GHz | 1.499942 | _____ | 1.500058 | ± 2.045 |
| 1.5 | 10 MHz | 1.5 GHz | 1.49948 | _____ | 1.50052 | ± 17.075 |
| 1.5 | 20 MHz | 1.5 GHz | 1.49895 | _____ | 1.50105 | ± 33.675 |
| 1.5 | 50 MHz | 1.5 GHz | 1.49745 | _____ | 1.50255 | ± 83.675 |
| 1.5 | 100 MHz | 1.5 GHz | 1.4948 | _____ | 1.5052 | ± 167.375 |
| 1.5 | 1 GHz | 1.5 GHz | 1.450 | _____ | 1.550 | ± 1670.375 |
| 4.0 | 1 MHz | 4 GHz | 3.999932 | _____ | 4.000068 | ± 2.67 |
| 4.0 | 10 MHz | 4 GHz | 3.99947 | _____ | 4.00053 | ± 17.7 |
| 4.0 | 20 MHz | 4 GHz | 3.99894 | _____ | 4.00106 | ± 34.3 |
| 4.0 | 50 MHz | 4 GHz | 3.99744 | _____ | 4.00256 | ± 84.3 |
| 4.0 | 100 MHz | 4 GHz | 3.9948 | _____ | 4.0052 | ± 168.0 |
| 4.0 | 1 GHz | 4 GHz | 3.950 | _____ | 4.050 | ± 1.671 |
| 9.0 | 1 MHz | 9.0 GHz | 8.999912 | _____ | 9.000088 | ± 3.92 |
| 9.0 | 10 MHz | 9.0 GHz | 8.99945 | _____ | 9.00055 | ± 18.95 |
| 9.0 | 20 MHz | 9.0 GHz | 8.99892 | _____ | 9.00108 | ± 35.55 |
| 9.0 | 50 MHz | 9.0 GHz | 8.99742 | _____ | 9.00258 | ± 85.55 |
| 9.0 | 100 MHz | 9.0 GHz | 8.9948 | _____ | 9.0052 | ± 169.25 |
| 9.0 | 1 GHz | 9.0 GHz | 8.950 | _____ | 9.050 | ± 1672.95 |
| 16.0 | 1 MHz | 16.0 GHz | 15.99984 | _____ | 16.000116 | ± 5.67 |
| 16.0 | 10 MHz | 16.0 GHz | 15.99942 | _____ | 16.00058 | ± 20.70 |
| 16.0 | 20 MHz | 16.0 GHz | 15.99889 | _____ | 16.00111 | ± 37.3 |
| 16.0 | 50 MHz | 16.0 GHz | 15.99739 | _____ | 16.00261 | ± 87.3 |
| 16.0 | 100 MHz | 16.0 GHz | 15.9948 | _____ | 16.0052 | ± 171.0 |
| 16.0 | 1 GHz | 16.0 GHz | 15.950 | _____ | 16.050 | ± 1674.0 |
| 21.0 | 1 MHz | 21.0 GHz | 20.999864 | _____ | 21.000136 | ± 6.92 |
| 21.0 | 10 MHz | 21.0 GHz | 20.99940 | _____ | 21.00060 | ± 21.95 |
| 21.0 | 20 MHz | 21.0 GHz | 20.99887 | _____ | 21.00113 | ± 38.55 |
| 21.0 | 50 MHz | 21.0 GHz | 20.99737 | _____ | 21.00263 | ± 88.55 |
| 21.0 | 100 MHz | 21.0 GHz | 20.9948 | _____ | 21.0052 | ± 172.25 |
| 21.0 | 1 GHz | 21.0 GHz | 20.950 | _____ | 21.050 | ± 1675.25 |

Table 3-24. Frequency Count Marker Accuracy

| HP 8340A Frequency (GHz) | HP 8562A Frequency (GHz) | Marker Frequency | | | Measurement Uncertainty (Hz) |
|--------------------------------|--------------------------------|------------------|-----------------|--------------|------------------------------------|
| | | Min (GHz) | Actual (GHz) | Max (GHz) | |
| 1.5 | 1.5 | 1.49999394 | _____ | 1.50000606 | ± 375 |
| 4.0 | 4.0 | 3.99998394 | _____ | 4.00001606 | ± 1000 |
| 9.0 | 9.0 | 8.99996389 | _____ | 9.00003611 | ± 2250 |
| 16.0 | 16.0 | 15.99993584 | _____ | 16.00006416 | ± 4000 |
| 21.0 | 21.0 | 20.99991579 | _____ | 21.00008421 | ± 5250 |

3-36. Pulse Digitization Uncertainty

SPECIFICATION

Pulse digitization uncertainty (PDU) for pulse repetition frequency (PRF) $> 720/\text{SweepTime}$

LOG: < 1.25 dB for RES BW ≤ 1 MHz
 < 3 dB for 2 MHz RES BW*

LINEAR: $< 4\%$ of reference level for RES BW ≤ 1 MHz
 $< 12\%$ of reference level for 2 MHz RES BW*

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures the ability of the analyzer's analog-to-digital circuitry to respond to pulsed RF signals. The synthesized sweeper is phase-locked to the spectrum analyzer's 10 MHz reference. The only log scale tested is 5 dB/DIV, since this is the worst case. Linear scale is also tested.

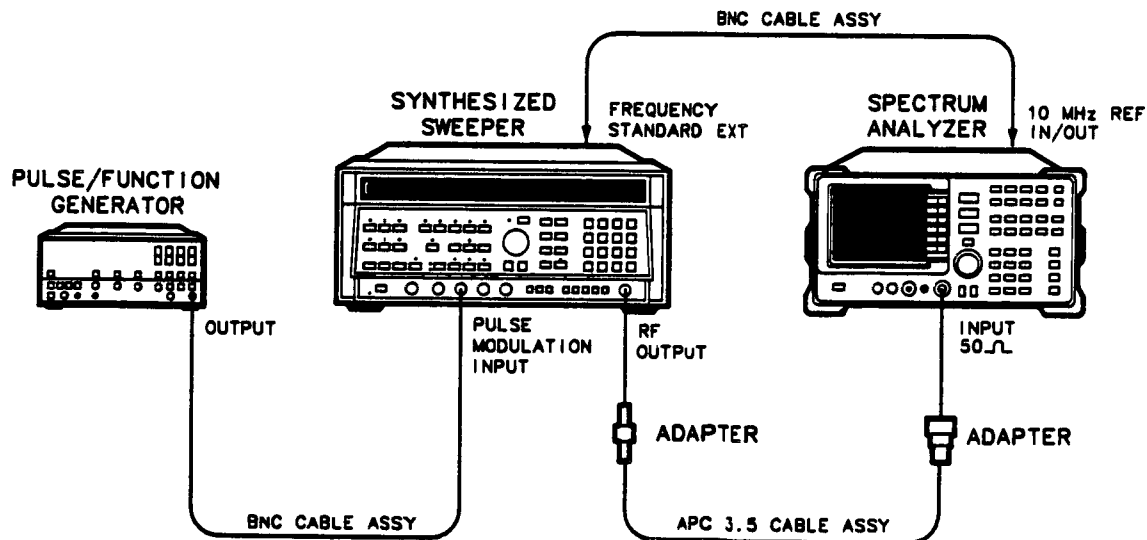


Figure 3-14. Pulse Digitization Uncertainty Test Setup

* Pulse digitization uncertainty is specified in the 2 MHz RES BW setting only for HP 8562A spectrum analyzers with serial prefix of 2805A and above, and for HP 8562B spectrum analyzers with serial prefix of 2809A and above.

3-37. Second Harmonic Distortion

SPECIFICATION

For frequencies <2.9 GHz: <-72 dBc for a -40 dBm mixer level*

(HP8562A) For frequencies >2.9 GHz: <-100 dBc for a -10 dBm mixer level*

(HP8562B) For frequencies >2.9 GHz: <-60 dBc for a -40 dBm mixer level*

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

A synthesized sweeper and low-pass filter provide the signal for measuring second harmonic distortion. The low-pass filter eliminates any harmonic distortion originating at the signal source. The HP 8562A/B's frequency response is calibrated out for the >2.9 GHz test. The synthesized sweeper is phase-locked to the spectrum analyzer's 10 MHz reference.

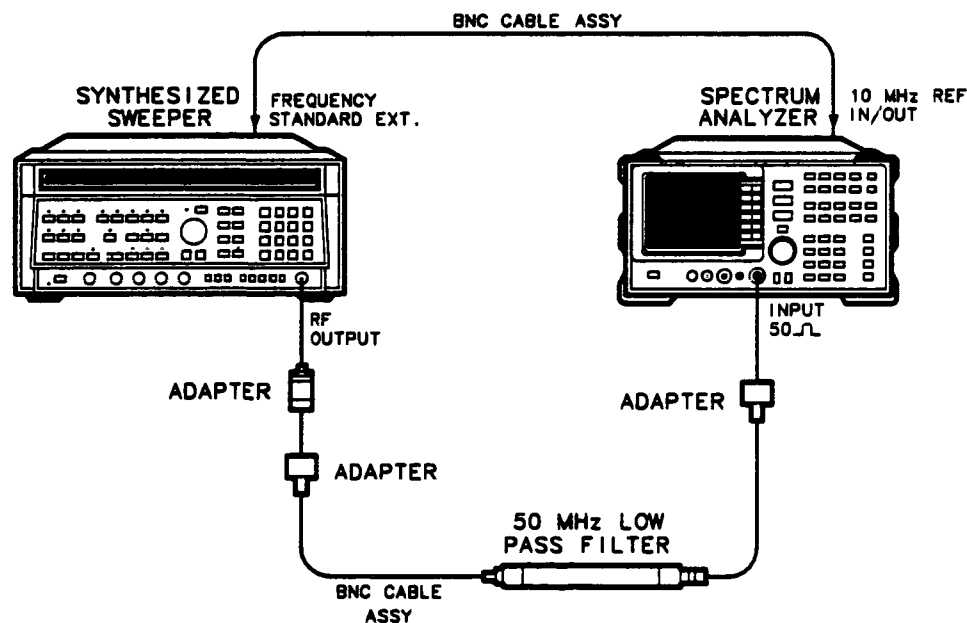


Figure 3-15. Second Harmonic Distortion Test Setup, Band 0

* Mixer Level = Input Level - Input Attenuation

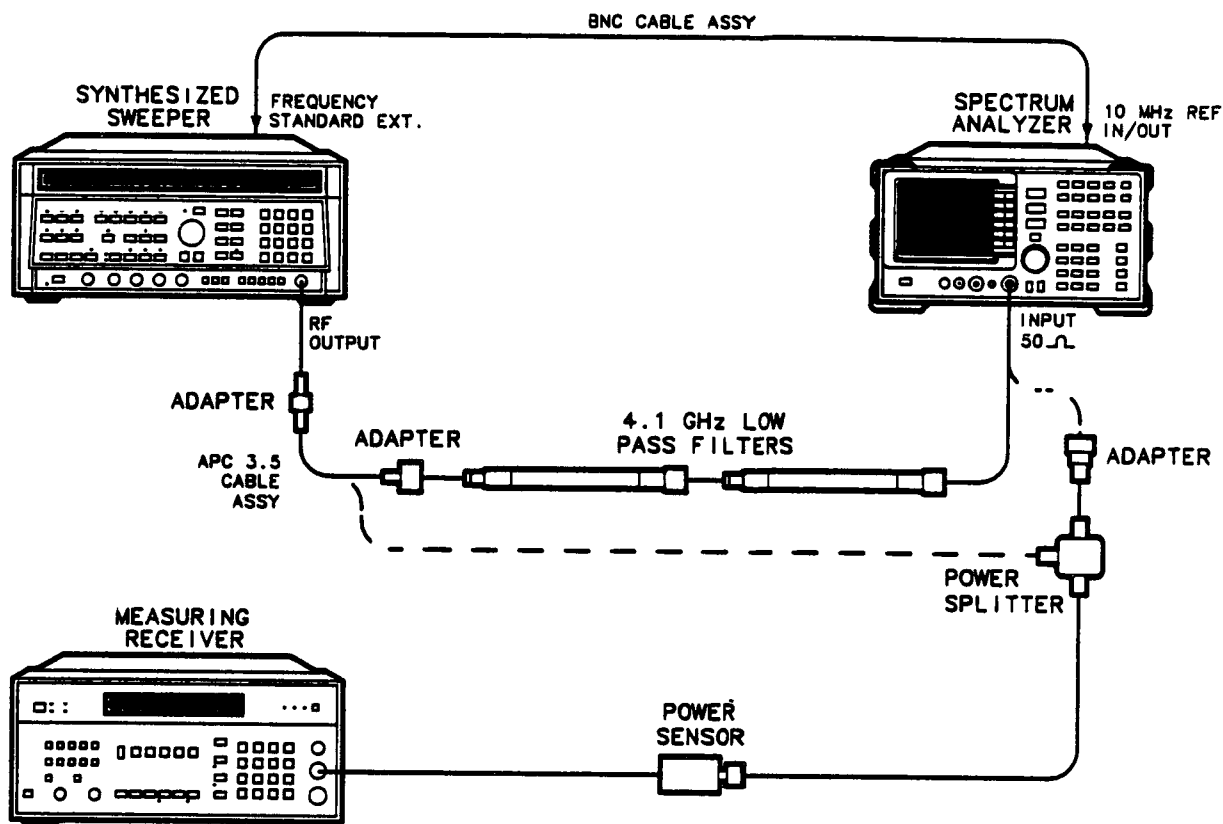


Figure 3-16. Second Harmonic Distortion Test Setup, Bands 1-4

EQUIPMENT

| | |
|--------------------------------------|--------------|
| Synthesized Sweeper | HP 8340A |
| Measuring Receiver | HP 8902A |
| Power Sensor | HP 8485A |
| 50 MHz low-pass filter | HP 0955-0306 |
| 4.1 GHz low-pass filter (2 required) | HP 360D |
| Power Splitter | HP 11667B |

Adapters

| | |
|--|--------------|
| Type N (m) to BNC (f) (2 required) | HP 1250-1476 |
| Type N (m) to SMA (f) | HP 1250-1250 |
| Type N (f) to APC 3.5 (f) | HP 1250-1745 |
| Type N (m) to APC 3.5 (m) (not necessary for Option 026) | HP 1250-1743 |
| APC 3.5 (f) to APC 3.5 (f) | HP 5061-5311 |
| Type N (f) to APC 3.5 (f) (required for Option 026) | HP 1250-1745 |

Cables

| | |
|-----------------------------------|--------------|
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| APC 3.5, 91 cm (36 in.) | HP 8120-4921 |

30. Wait for the completion of a new sweep, then press the PEAK SEARCH key. Record the Δ MKR amplitude reading below.

Δ MKR Amplitude Reading: _____ dBc

31. Algebraically add the Frequency Response Error recorded in step 19 to the Δ MKR Amplitude Reading in step 30. Record the result below as the Second Harmonic Distortion (> 2.9 GHz). The distortion should be less than -100 dBc (*HP 8562B: less than -60 dBc*).

Second Harmonic Distortion (> 2.9 GHz): _____ dBc

3-38. Frequency Response

SPECIFICATION

In-band Frequency Response (10 dB Input Attenuation):

| | HP 8562A | HP 8562B |
|--------------------|----------|----------|
| 1 kHz–2.90 GHz | ±1.2 dB | ±1.2 dB |
| 2.75–6.46 GHz | ±2.5 dB | ±2.0 dB |
| 6.46–13.0 GHz | ±3.5 dB | ±2.5 dB |
| 13.0–19.7 GHz | ±4.0 dB | ±3.0 dB |
| 19.7–22.0 GHz | ±4.3 dB | ±4.3 dB |
| <i>Option 026:</i> | | |
| 19.7–26.5 GHz | ±4.3 dB | ±4.3 dB |

Frequency Response relative to the calibrator (300 MHz): < ±5.1 dB
 Band Switching Uncertainty: < ±0.5 dB

RELATED ADJUSTMENT

YTF Adjustment (HP 8562A)
 Frequency Response Adjustment

DESCRIPTION

The output of the synthesized sweeper is fed through a power splitter to a power sensor and the HP 8562A/B. The synthesized sweeper's power level is adjusted at 300 MHz to place the displayed signal at the HP 8562A/B's center horizontal graticule line. The measuring receiver, used as a power meter, is placed in RATIO mode. At each new synthesized sweeper frequency, and HP 8562A/B center frequency, the sweeper's power level is adjusted to place the signal at the center horizontal graticule line. The measuring receiver displays the inverse of the frequency response relative to the calibrator.

EQUIPMENT

| | |
|----------------------------|-----------|
| Measuring Receiver | HP 8902A |
| Synthesized Sweeper | HP 8340A |
| Frequency Synthesizer | HP 3335A |
| Power Sensor | HP 8485A |
| Power Splitter | HP 11667B |
| Coaxial 50-Ohm Termination | HP 909D |

Adapters

| | |
|---|--------------|
| Type N (m) to APC 3.5 (m) (2 required) (Option 026: 1 required) | HP 1250-1743 |
| Type N (f) to BNC (f) | HP 1250-1474 |
| APC 3.5 (m) to APC 3.5 (m) | HP 1250-1748 |

Cables

| | |
|-------------------------|--------------|
| BNC, 122 cm (48 in.) | HP 10503A |
| APC 3.5, 91 cm (36 in.) | HP 8120-4921 |

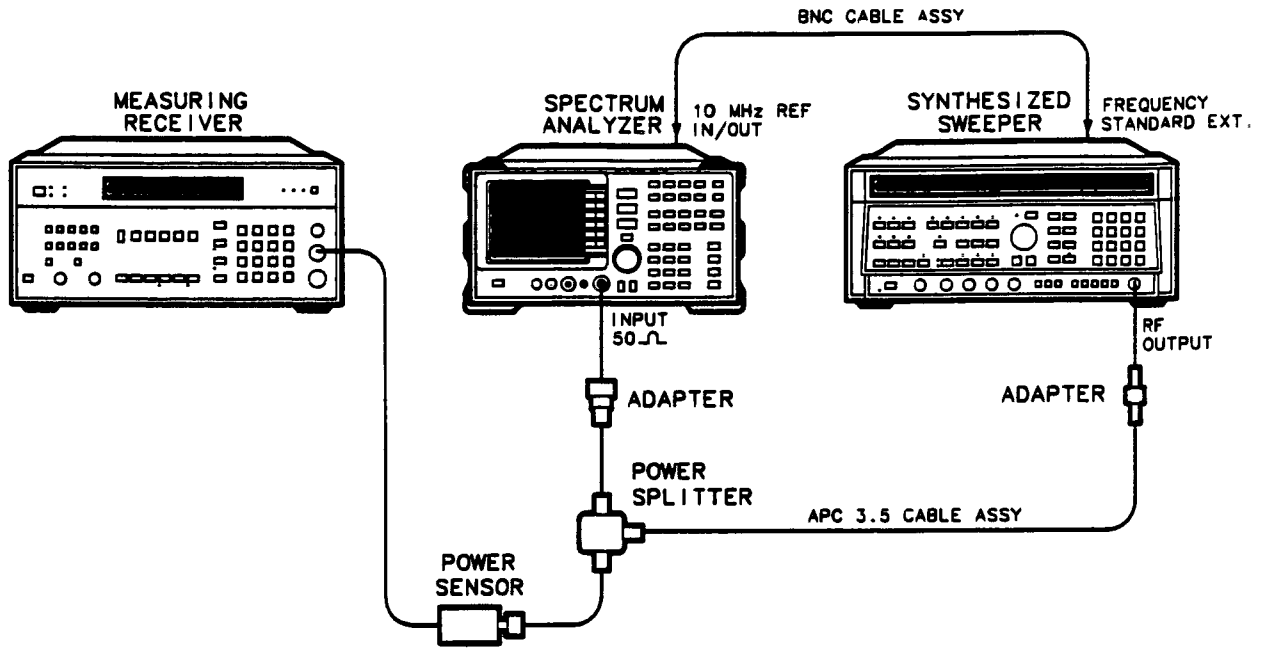


Figure 3-17. Frequency Response Test Setup, 50 MHz to 22 GHz

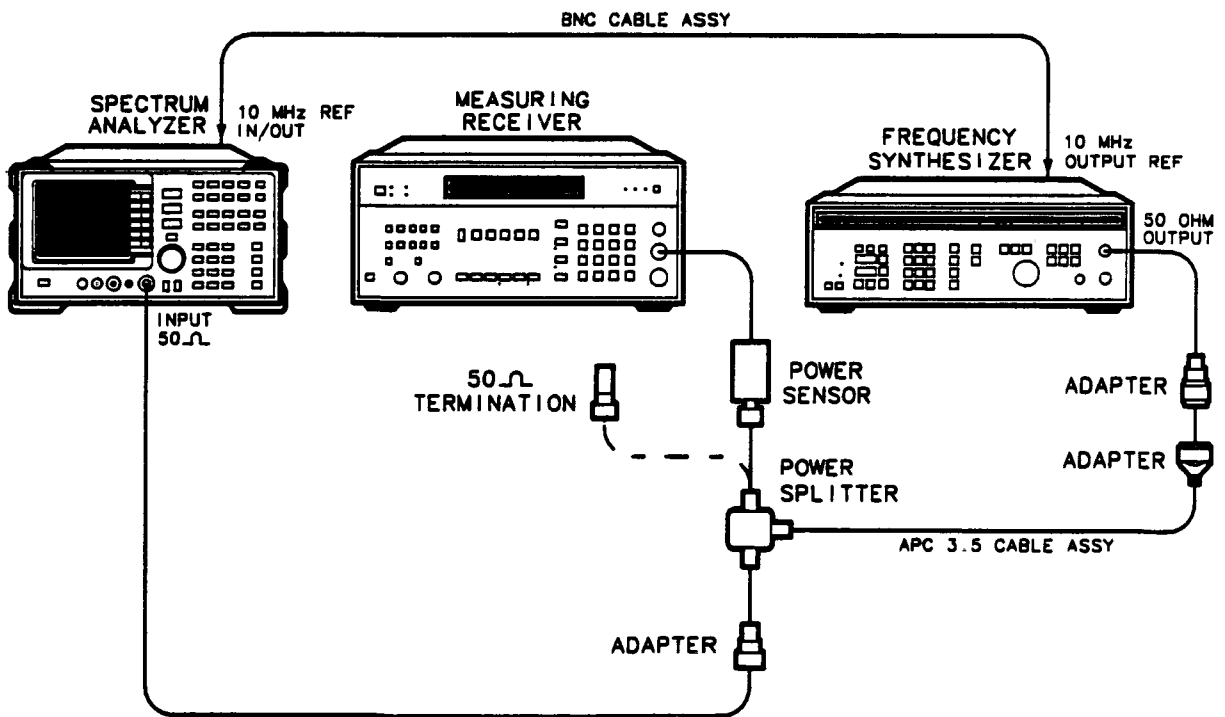


Figure 3-18. Frequency Response Test Setup, < 50 MHz

PROCEDURE

1. Zero and calibrate the HP 8902A and HP 8485A in log mode as described in the HP 8902A Operation Manual.
2. Connect the equipment as shown in Figure 3-17.
3. Press the INSTR PRESET key on the HP 8340A. Set the HP 8340A controls as follows:

| | |
|--|---------|
| CW | 300 MHz |
| FREQ STEP | 100 MHz |
| POWER LEVEL | -4 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

4. On the HP 8562A/B, press the PRESET key. *If the analyzer is an HP 8562A, press the RECALL key, [MORE], and [FACTORY PRESEL PK].* Set the HP 8562A/B controls as follows:

| | |
|-------------|---------|
| CENTER FREQ | 300 MHz |
| CF STEP | 100 MHz |
| SPAN | 0 Hz |
| REF LVL | -5 dBm |
| dB/DIV | 1 dB |
| RES BW | 300 kHz |

5. On the HP 8562A/B, press the AMPLITUDE key, [MORE], [IF ADJUST], [IF ADJ ON], and the MARKER ON key.
6. Adjust the HP 8340A POWER LEVEL for a MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
7. Press the RATIO key on the HP 8902A.

Frequency Response, Band 0 ($\geq 50 \text{ MHz}$)

8. Set the HP 8340A CW to 50 MHz.
9. Set the HP 8562A/B [CENTER FREQ] to 50 MHz.
10. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
11. Record the power ratio displayed on the HP 8902A here. Record the negative of the power ratio in Table 3-25.

HP 8902A reading at 50 MHz: _____ dB

12. Set the HP 8340A CW to 100 MHz.
13. Set the HP 8562A/B [CENTER FREQ] to 100 MHz.
14. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.

15. Record the negative of the power ratio displayed on the HP 8902A in Table 3-25 as the HP 8902A Reading.
16. On the HP 8340A, press the CW key and the \uparrow key and press the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-25. At each new frequency repeat steps 13 through 15, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-25.

Frequency Response, Band 1

17. On the HP 8562A/B, press the FREQUENCY key, the 2 key, the . key, the 9 key, the 5 key, and the GHz key.
18. Set the HP 8340A CW to 2.95 GHz.
19. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.*
20. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of -10 dBm ± 0.05 dB.
21. Record the negative of the power ratio displayed on the HP 8902A in Table 3-26.
22. On the HP 8340A, press CW and the \uparrow key and on the HP 8562A/B press the FREQUENCY key and the \uparrow key to step through the remaining frequencies listed in Table 3-26. At each new frequency repeat steps 19 through 21, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-26.

Frequency Response, Band 2

23. On the HP 8562A/B, press the FREQUENCY key, the 6 key, the . key, the 5 key, the GHz key, [CF STEP], the 2 key, the 0 key, the 0 key, and the MHz key.
24. Set the HP 8340A CW to 6.5 GHz and the FREQ STEP to 200 MHz.
25. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.*
26. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of -10 dBm ± 0.05 dB.
27. Record the negative of the power ratio displayed on the HP 8902A in Table 3-27 as the HP 8902A Reading.
28. Set the HP 8340A CW and the HP 8562A/B CENTER FREQ to 6.6 GHz. Repeat steps 25 through 27.
29. On the HP 8340A, press CW and the \uparrow key and on the HP 8562A/B press the FREQUENCY key and the \uparrow key to step through the remaining frequencies listed in Table 3-27. At each new frequency repeat steps 25 through 27, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-27.

Frequency Response, Band 3

30. On the HP 8562A/B, press the FREQUENCY key, the 1 key, the 3 key, the . key, the 1 key, and the GHz key.
31. Set the HP 8340A CW to 13.1 GHz.
32. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.*
33. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
34. Record the negative of the power ratio displayed on the HP 8902A in Table 3-28 as the HP 8902A Reading.
35. Press CW and the \uparrow key on the HP 8340A and the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-28. At each new frequency repeat steps 32 through 34, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-28.

Frequency Response, Band 4

36. On the HP 8562A/B, press the FREQUENCY key, the 1 key, the 9 key, the . key, the 7 key, the 1 key, the GHz key, [CF STEP], and set the [CF STEP] to 100 MHz.
37. Set the HP 8340A CW to 19.71 GHz and the FREQ STEP to 100 MHz. *If spectrum analyzer is an Option 026, set FREQ STEP to 200 MHz.*
38. *If the spectrum analyzer is an HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear.*
39. Adjust the HP 8340A POWER LEVEL for an HP 8562A/B MKR amplitude reading of $-10 \text{ dBm} \pm 0.05 \text{ dB}$.
40. Record the negative of the power ratio displayed on the HP 8902A in Table 3-29 as the HP 8902A Reading.
41. Set the HP 8340A CW and the HP 8562A/B CENTER FREQ to 19.8 GHz (*Option 026: 19.9 GHz*). Repeat steps 38 through 40.
42. Press CW and the \uparrow key on the HP 8340A and the FREQUENCY key and the \uparrow key on the HP 8562A/B to step through the remaining frequencies listed in Table 3-29. At each new frequency repeat steps 38 through 40, entering the power sensor's calibration factors into the HP 8902A as indicated in Table 3-29.

Frequency Response, Band 0 (<50 MHz)

43. Set the HP 8562A/B controls as follows:

| | | |
|-------------|-------|--------|
| CENTER FREQ | | 50 MHz |
| RES BW | | 100 Hz |
| MARKER | | OFF |
| VIDEO BW | | 1 Hz |

44. Connect the equipment as shown in Figure 3-18. Set the HP 3335A controls as follows:

FREQUENCY 50 MHz
 AMPLITUDE -4 dBm
 AMPTD INCR 0.1 dB

45. Enter the power sensor's 50 MHz calibration factor into the HP 8902A.

46. Adjust the HP 3335A AMPLITUDE until the HP 8902A display reads the same value as recorded in step 11. Record the HP 3335A amplitude here and in Table 3-30.

HP 3335A Amplitude (50 MHz): _____ dB

47. Replace the HP 8485A power sensor with the HP 909D 50-ohm termination.

48. On the HP 8562A/B, press the MARKER ON key and [MARKER DELTA].

49. Set the HP 8562A/B [CENTER FREQ] and HP 3335A FREQUENCY to the frequencies listed in Table 3-30. At each frequency, adjust the HP 3335A AMPLITUDE for a Δ MKR amplitude reading of 0.00 ± 0.05 dB. Record the HP 3335A AMPLITUDE setting in Table 3-30 as the HP 3335A Amplitude.

50. For each of the frequencies in Table 3-30, subtract the HP 3335A the AMPLITUDE Reading (column 2) from the HP 3335A AMPLITUDE (50 MHz) recorded in step 46. Record the result as the Response Relative to 50 MHz (column 3) of Table 3-30.

51. Add to each of the Response Relative to 50 MHz entries in Table 3-30 the HP 8902A Reading for 50 MHz listed in Table 3-25. Record the results as the Response Relative to 300 MHz in Table 3-30.

Test Results

52. Frequency Response, Band 0

- a. Enter most positive number from Table 3-30, column 4 _____ dB
- b. Enter most positive number from Table 3-25, column 2 _____ dB
- c. Enter more positive of numbers from (a) and (b) _____ dB
- d. Enter most negative number from Table 3-30, column 4 _____ dB
- e. Enter most negative number from Table 3-25, column 2 _____ dB
- f. Enter more negative of numbers from (d) and (e) _____ dB
- g. Subtract (f) from (c). The result should be less than 2.4 dB _____ dB
- h. The absolute values in (c) and (f) should be less than 5.1 dB.

53. Frequency Response, Band 1

- a. Enter most positive number from Table 3-26, column 2 _____ dB
 The absolute value of this number should be less than 5.1 dB.

b. Enter most negative number from Table 3-26, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

c. Subtract (b) from (a) dB
 The result should be less than 5.0 dB. *HP 8562B: 4.0 dB*

54. Frequency Response, Band 2

a. Enter most positive number from Table 3-27, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

b. Enter most negative number from Table 3-27, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

c. Subtract (b) from (a) dB
 The result should be less than 7.0 dB. *HP 8562B: 5.0 dB*

55. Frequency Response, Band 3

a. Enter most positive number from Table 2-28, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

b. Enter most negative number from Table 2-28, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

c. Subtract (b) from (a) dB
 The result should be less than 8.0 dB. *HP 8562B: 6.0 dB*

56. Frequency Response, Band 4

a. Enter most positive number from Table 3-29, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

b. Enter most negative number from Table 3-29, column 2 dB
 The absolute value of this number should be less than 5.1 dB.

c. Subtract (b) from (a) dB
 The result should be less than 8.6 dB.

Band Switching Uncertainty

57. In the top row of Table 3-31, enter the values recorded in the indicated steps. For example, if step 54(a) has a value of 1.22 dB, enter 1.22 dB in the top row of the Band 2 column.

58. In the left column of Table 3-31, enter the values recorded in the indicated steps. For example, if step 52(b) has a value of -0.95 dB, enter -0.95 dB in the left column of the Band 1 row.

59. Compute the other entries of Table 3-31 by taking the absolute value of the difference between the values in the left column and the top row.

60. Each computed entry should be less than the limit shown directly below the entry for HP 8562A analyzers. Limits shown in parentheses apply to HP 8562B analyzers.

Table 3-25. Frequency Response Band 0 (≥ 50 MHz)

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 50 | _____ | 0.05 | +0.29/-0.31 |
| 100 | _____ | 0.05 | +0.29/-0.31 |
| 200 | _____ | 0.05 | +0.29/-0.31 |
| 300 | _____ | 0.05 | 0 (Ref.) |
| 400 | _____ | 0.05 | +0.29/-0.31 |
| 500 | _____ | 0.05 | +0.29/-0.31 |
| 600 | _____ | 0.05 | +0.29/-0.31 |
| 700 | _____ | 0.05 | +0.29/-0.31 |
| 800 | _____ | 0.05 | +0.29/-0.31 |
| 900 | _____ | 0.05 | +0.29/-0.31 |
| 1000 | _____ | 0.05 | +0.29/-0.31 |
| 1100 | _____ | 2.0 | +0.29/-0.31 |
| 1200 | _____ | 2.0 | +0.29/-0.31 |
| 1300 | _____ | 2.0 | +0.29/-0.31 |
| 1400 | _____ | 2.0 | +0.29/-0.31 |
| 1500 | _____ | 2.0 | +0.29/-0.31 |
| 1600 | _____ | 2.0 | +0.29/-0.31 |
| 1700 | _____ | 2.0 | +0.29/-0.31 |
| 1800 | _____ | 2.0 | +0.29/-0.31 |
| 1900 | _____ | 2.0 | +0.29/-0.31 |
| 2000 | _____ | 2.0 | +0.29/-0.31 |
| 2100 | _____ | 2.0 | +0.29/-0.31 |
| 2200 | _____ | 2.0 | +0.29/-0.31 |
| 2300 | _____ | 2.0 | +0.29/-0.31 |
| 2400 | _____ | 2.0 | +0.29/-0.31 |
| 2500 | _____ | 3.0 | +0.29/-0.31 |
| 2600 | _____ | 3.0 | +0.29/-0.31 |
| 2700 | _____ | 3.0 | +0.29/-0.31 |
| 2800 | _____ | 3.0 | +0.29/-0.31 |
| 2900 | _____ | 3.0 | +0.29/-0.31 |

Table 3-26. Frequency Response, Band 1

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 2.95 | _____ | 3.0 | +0.43/-0.47 |
| 3.05 | _____ | 3.0 | +0.43/-0.47 |
| 3.15 | _____ | 3.0 | +0.43/-0.47 |
| 3.25 | _____ | 3.0 | +0.43/-0.47 |
| 3.35 | _____ | 3.0 | +0.43/-0.47 |
| 3.45 | _____ | 3.0 | +0.43/-0.47 |
| 3.55 | _____ | 4.0 | +0.43/-0.47 |
| 3.65 | _____ | 4.0 | +0.43/-0.47 |
| 3.75 | _____ | 4.0 | +0.43/-0.47 |
| 3.85 | _____ | 4.0 | +0.43/-0.47 |
| 3.95 | _____ | 4.0 | +0.43/-0.47 |
| 4.05 | _____ | 4.0 | +0.43/-0.47 |
| 4.15 | _____ | 4.0 | +0.43/-0.47 |
| 4.25 | _____ | 4.0 | +0.43/-0.47 |
| 4.35 | _____ | 4.0 | +0.43/-0.47 |
| 4.45 | _____ | 4.0 | +0.43/-0.47 |
| 4.55 | _____ | 5.0 | +0.43/-0.47 |
| 4.65 | _____ | 5.0 | +0.43/-0.47 |
| 4.75 | _____ | 5.0 | +0.43/-0.47 |
| 4.85 | _____ | 5.0 | +0.43/-0.47 |
| 4.95 | _____ | 5.0 | +0.43/-0.47 |
| 5.05 | _____ | 5.0 | +0.43/-0.47 |
| 5.15 | _____ | 5.0 | +0.43/-0.47 |
| 5.25 | _____ | 5.0 | +0.43/-0.47 |
| 5.35 | _____ | 5.0 | +0.43/-0.47 |
| 5.45 | _____ | 5.0 | +0.43/-0.47 |
| 5.55 | _____ | 6.0 | +0.43/-0.47 |
| 5.65 | _____ | 6.0 | +0.43/-0.47 |
| 5.75 | _____ | 6.0 | +0.43/-0.47 |
| 5.85 | _____ | 6.0 | +0.43/-0.47 |
| 5.95 | _____ | 6.0 | +0.43/-0.47 |
| 6.05 | _____ | 6.0 | +0.43/-0.47 |
| 6.15 | _____ | 6.0 | +0.43/-0.47 |
| 6.25 | _____ | 6.0 | +0.43/-0.47 |
| 6.35 | _____ | 6.0 | +0.43/-0.47 |
| 6.45 | _____ | 6.0 | +0.43/-0.47 |

Table 3-27. Frequency Response, Band 2

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 6.5 | _____ | 6.0 | +0.43/-0.48 |
| 6.6 | _____ | 7.0 | +0.43/-0.48 |
| 6.8 | _____ | 7.0 | +0.43/-0.48 |
| 7.0 | _____ | 7.0 | +0.43/-0.48 |
| 7.2 | _____ | 7.0 | +0.43/-0.48 |
| 7.4 | _____ | 7.0 | +0.43/-0.48 |
| 7.6 | _____ | 8.0 | +0.43/-0.48 |
| 7.8 | _____ | 8.0 | +0.43/-0.48 |
| 8.0 | _____ | 8.0 | +0.43/-0.48 |
| 8.2 | _____ | 8.0 | +0.43/-0.48 |
| 8.4 | _____ | 8.0 | +0.43/-0.48 |
| 8.6 | _____ | 9.0 | +0.43/-0.48 |
| 8.8 | _____ | 9.0 | +0.43/-0.48 |
| 9.0 | _____ | 9.0 | +0.43/-0.48 |
| 9.2 | _____ | 9.0 | +0.43/-0.48 |
| 9.4 | _____ | 9.0 | +0.43/-0.48 |
| 9.6 | _____ | 10.0 | +0.43/-0.48 |
| 9.8 | _____ | 10.0 | +0.43/-0.48 |
| 10.0 | _____ | 10.0 | +0.43/-0.48 |
| 10.2 | _____ | 10.0 | +0.43/-0.48 |
| 10.4 | _____ | 10.0 | +0.43/-0.48 |
| 10.6 | _____ | 11.0 | +0.43/-0.48 |
| 10.8 | _____ | 11.0 | +0.43/-0.48 |
| 11.0 | _____ | 11.0 | +0.43/-0.48 |
| 11.2 | _____ | 11.0 | +0.43/-0.48 |
| 11.4 | _____ | 11.0 | +0.43/-0.48 |
| 11.6 | _____ | 12.0 | +0.43/-0.48 |
| 11.8 | _____ | 12.0 | +0.43/-0.48 |
| 12.0 | _____ | 12.0 | +0.43/-0.48 |
| 12.2 | _____ | 12.0 | +0.43/-0.48 |
| 12.4 | _____ | 12.0 | +0.43/-0.48 |
| 12.6 | _____ | 13.0 | +0.43/-0.48 |
| 12.8 | _____ | 13.0 | +0.43/-0.48 |
| 13.0 | _____ | 13.0 | +0.43/-0.48 |

Table 2-28. Frequency Response, Band 3

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 13.1 | _____ | 13.0 | 0 (Ref.) |
| 13.3 | _____ | 13.0 | +0.43/-0.48 |
| 13.5 | _____ | 13.0 | +0.43/-0.48 |
| 13.7 | _____ | 14.0 | +0.43/-0.48 |
| 13.9 | _____ | 14.0 | +0.43/-0.48 |
| 14.1 | _____ | 14.0 | +0.43/-0.48 |
| 14.3 | _____ | 14.0 | +0.43/-0.48 |
| 14.5 | _____ | 14.0 | +0.43/-0.48 |
| 14.7 | _____ | 15.0 | +0.43/-0.48 |
| 14.9 | _____ | 15.0 | +0.43/-0.48 |
| 15.1 | _____ | 15.0 | +0.43/-0.48 |
| 15.3 | _____ | 15.0 | +0.43/-0.48 |
| 15.5 | _____ | 15.0 | +0.43/-0.48 |
| 15.7 | _____ | 16.0 | +0.43/-0.48 |
| 15.9 | _____ | 16.0 | +0.43/-0.48 |
| 16.1 | _____ | 16.0 | +0.43/-0.48 |
| 16.3 | _____ | 16.0 | +0.43/-0.48 |
| 16.5 | _____ | 16.0 | +0.43/-0.48 |
| 16.7 | _____ | 17.0 | +0.43/-0.48 |
| 16.9 | _____ | 17.0 | +0.43/-0.48 |
| 17.1 | _____ | 17.0 | +0.43/-0.48 |
| 17.3 | _____ | 17.0 | +0.43/-0.48 |
| 17.5 | _____ | 17.0 | +0.43/-0.48 |
| 17.7 | _____ | 18.0 | +0.43/-0.48 |
| 17.9 | _____ | 18.0 | +0.43/-0.48 |
| 18.1 | _____ | 18.0 | +0.43/-0.48 |
| 18.3 | _____ | 18.0 | +0.43/-0.48 |
| 18.5 | _____ | 18.0 | +0.43/-0.48 |
| 18.7 | _____ | 19.0 | +0.43/-0.48 |
| 18.9 | _____ | 19.0 | +0.43/-0.48 |
| 19.1 | _____ | 19.0 | +0.43/-0.48 |
| 19.3 | _____ | 19.0 | +0.43/-0.48 |
| 19.5 | _____ | 19.0 | +0.43/-0.48 |
| 19.7 | _____ | 20.0 | +0.43/-0.48 |

Table 3-29. Frequency Response, Band 4

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 19.71 | _____ | 20.0 | +0.55/-0.59 |
| 19.8 | _____ | 20.0 | +0.55/-0.59 |
| 19.9 | _____ | 20.0 | +0.55/-0.59 |
| 20.0 | _____ | 20.0 | +0.55/-0.59 |
| 20.1 | _____ | 20.0 | +0.55/-0.59 |
| 20.2 | _____ | 20.0 | +0.55/-0.59 |
| 20.3 | _____ | 20.0 | +0.55/-0.59 |
| 20.4 | _____ | 20.0 | +0.55/-0.59 |
| 20.5 | _____ | 21.0 | +0.55/-0.59 |
| 20.6 | _____ | 21.0 | +0.55/-0.59 |
| 20.7 | _____ | 21.0 | +0.55/-0.59 |
| 20.8 | _____ | 21.0 | +0.55/-0.59 |
| 20.9 | _____ | 21.0 | +0.55/-0.59 |
| 21.0 | _____ | 21.0 | +0.55/-0.59 |
| 21.1 | _____ | 21.0 | +0.55/-0.59 |
| 21.2 | _____ | 21.0 | +0.55/-0.59 |
| 21.3 | _____ | 21.0 | +0.55/-0.59 |
| 21.4 | _____ | 21.0 | +0.55/-0.59 |
| 21.5 | _____ | 22.0 | +0.55/-0.59 |
| 21.6 | _____ | 22.0 | +0.55/-0.59 |
| 21.7 | _____ | 22.0 | +0.55/-0.59 |
| 21.8 | _____ | 22.0 | +0.55/-0.59 |
| 21.9 | _____ | 22.0 | +0.55/-0.59 |
| 22.0 | _____ | 22.0 | +0.55/-0.59 |

Table 3-29a. Frequency Response, Band 4 (Option 026 only)

| Column 1 | Column 2 | Column 3 | Column 4 |
|-----------------|-----------------------|----------------------------|------------------------------|
| Frequency (GHz) | HP 8902A Reading (dB) | Cal Factor Frequency (GHz) | Measurement Uncertainty (dB) |
| 19.71 | _____ | 20.0 | +0.55/-0.59 |
| 19.9 | _____ | 20.0 | +0.55/-0.59 |
| 20.1 | _____ | 20.0 | +0.55/-0.59 |
| 20.3 | _____ | 20.5 | +0.55/-0.59 |
| 20.5 | _____ | 20.5 | +0.55/-0.59 |
| 20.7 | _____ | 20.5 | +0.55/-0.59 |
| 20.9 | _____ | 21.0 | +0.55/-0.59 |
| 21.1 | _____ | 21.0 | +0.55/-0.59 |
| 21.3 | _____ | 21.5 | +0.55/-0.59 |
| 21.5 | _____ | 21.5 | +0.55/-0.59 |
| 21.7 | _____ | 21.5 | +0.55/-0.59 |
| 21.9 | _____ | 22.0 | +0.55/-0.59 |
| 22.1 | _____ | 22.0 | +0.55/-0.59 |
| 22.3 | _____ | 22.5 | +0.55/-0.59 |
| 22.5 | _____ | 22.5 | +0.55/-0.59 |
| 22.7 | _____ | 22.5 | +0.55/-0.59 |
| 22.9 | _____ | 23.0 | +0.55/-0.59 |
| 23.1 | _____ | 23.0 | +0.55/-0.59 |
| 23.3 | _____ | 23.5 | +0.55/-0.59 |
| 23.5 | _____ | 23.5 | +0.55/-0.59 |
| 23.7 | _____ | 23.5 | +0.55/-0.59 |
| 23.9 | _____ | 24.0 | +0.55/-0.59 |
| 24.1 | _____ | 24.0 | +0.55/-0.59 |
| 24.3 | _____ | 24.5 | +0.55/-0.59 |
| 24.5 | _____ | 24.5 | +0.55/-0.59 |
| 24.7 | _____ | 24.5 | +0.55/-0.59 |
| 24.9 | _____ | 25.0 | +0.55/-0.59 |
| 25.1 | _____ | 25.0 | +0.55/-0.59 |
| 25.3 | _____ | 25.5 | +0.55/-0.59 |
| 25.5 | _____ | 25.5 | +0.55/-0.59 |
| 25.7 | _____ | 25.5 | +0.55/-0.59 |
| 25.9 | _____ | 26.0 | +0.55/-0.59 |
| 26.1 | _____ | 26.0 | +0.55/-0.59 |
| 26.3 | _____ | 26.5 | +0.55/-0.59 |
| 26.5 | _____ | 26.5 | +0.55/-0.59 |

Table 3-30. Frequency Response, Band 0 (< 50 MHz)

| Column 1 | Column 2 | Column 3 | Column 4 | Column 5 |
|-----------|--------------------------|-----------------------------|------------------------------|------------------------------|
| Frequency | HP 3335A Amplitude (dBm) | Response Relative to 50 MHz | Response Relative to 300 MHz | Measurement Uncertainty (dB) |
| 50 MHz | _____ | 0 (Ref.) | _____ | +0.34/-0.37 |
| 20 MHz | _____ | _____ | _____ | +0.34/-0.37 |
| 10 MHz | _____ | _____ | _____ | +0.34/-0.37 |
| 1 MHz | _____ | _____ | _____ | +0.34/-0.37 |
| 100 kHz | _____ | _____ | _____ | +0.34/-0.37 |
| 10 kHz | _____ | _____ | _____ | +0.34/-0.37 |
| 1 kHz | _____ | _____ | _____ | +0.34/-0.37 |

Table 3-31. Band Switching Uncertainty

| | Band 0 step 52(c) | Band 1 step 53(a) | Band 2 step 54(a) | Band 3 step 55(a) | Band 4 step 56(a) |
|-------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| Band 0 step 52(f) | _____ | 4.2 dB (3.7 dB) | 5.2 dB (3.7 dB) | 5.7 dB (4.7 dB) | 6.0 dB (6.0 dB) |
| Band 1 step 53(b) | 4.2 dB (3.7 dB) | _____ | 6.5 dB (5.0 dB) | 7.0 dB (6.0 dB) | 7.3 dB (6.8 dB) |
| Band 2 step 54(b) | 5.2 dB (4.2 dB) | 6.5 dB (5.0 dB) | _____ | 8.0 dB (6.0 dB) | 8.3 dB (7.3 dB) |
| Band 3 step 55(b) | 5.7 dB (4.7 dB) | 7.0 dB (6.0 dB) | 8.0 dB (6.0 dB) | _____ | 8.8 dB (7.8 dB) |
| Band 4 step 56(b) | 6.0 dB (6.0 dB) | 7.3 dB (6.8 dB) | 8.3 dB (7.3 dB) | 8.8 dB (7.8 dB) | _____ |

3-39. Frequency Span Accuracy

SPECIFICATION

< $\pm 5\%$ of actual frequency separation

RELATED ADJUSTMENT

YTO Adjustment

DESCRIPTION

Two synthesized sweepers provide the precise signals required to test the spectrum analyzer's frequency span accuracy. Signal separation, measured with the delta marker function, is checked for accuracy. Span accuracy at several different frequencies is tested. Both sweepers are phase-locked to the analyzer's 10 MHz reference.

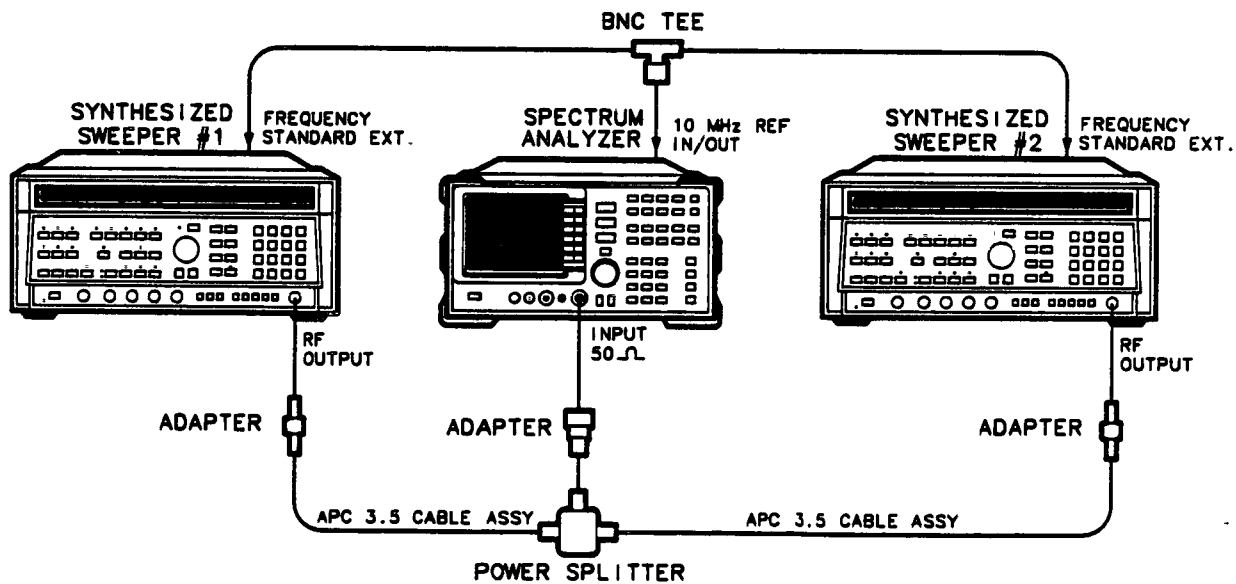


Figure 3-19. Frequency Span Accuracy Test Setup

EQUIPMENT

| | |
|----------------------------------|-----------|
| Synthesized Sweeper (2 required) | HP 8340A |
| Power Splitter | HP 11667B |

Adapters

- Type N (m) to APC 3.5 (m) (*not necessary for Option 026*) HP 1250-1743
- APC 3.5 (f) to APC 3.5 (f) (*2 required*) HP 5061-5311
- BNC tee (m) (f) (f) HP 1250-0781

Cables

- BNC, 122 cm (48 in.) (*2 required*) HP 10503A
- APC 3.5, 91 cm (36 in.) HP 8120-4921

PROCEDURE

1. Connect the equipment as shown in Figure 3-19. Both HP 8340A's should be set for EXT FREQUENCY STANDARD. Connect the power splitter directly to the analyzer's INPUT 50Ω. Do not use a cable.

2. Set the HP 8340A #1 controls as follows:

- CW 1.499996 GHz
- POWER LEVEL -5 dBm
- FREQUENCY STANDARD SWITCH (rear panel) EXT

3. Set the HP 8340A #2 controls as follows:

- CW 1.500004 GHz
- POWER LEVEL -10 dBm
- FREQUENCY STANDARD SWITCH (rear panel) EXT

4. On the HP 8562A/B, press the PRESET key, the RECALL key, [MORE], and [FACTORY PRSEL PK]. Set the HP 8562A/B controls as follows:

- CENTER FREQ 1.5 GHz
- SPAN 10 kHz

NOTE

Use the procedure in steps 5 through 7 when testing all frequency spans of HP 8562A analyzers and spans up to 100 MHz of HP 8562B analyzers. Use the procedure in steps 8 through 19 when testing frequency spans of 5 GHz and above of HP 8562B analyzers.

- 5. On the HP 8562A/B, press the TRIG key, [SINGLE], [SINGLE], the MARKER OFF key, the PEAK SEARCH key, [MARKER DELTA], and [NEXT PEAK]. The active and anchor markers should be on the peaks of the signals near the second and tenth vertical graticule lines.
- 6. Record the HP 8562A/B Δ MKR frequency reading as the Actual Δ MKR reading in Table 3-32. The reading should be within the limits shown.
- 7. Repeat steps 5 and 6 above for the combinations of HP 8340A CW frequencies and HP 8562A/B center frequency and spans as indicated in Table 3-32. *When changing [CENTER FREQ] on the HP 8562A, do the following:*

- a. *Set the HP 8340A #1 CW to the HP 8562A center frequency.*
 - b. *On the HP 8562A, press the TRIG key, [CONT], the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.*
 - c. *On the HP 8562A, press the TRIG key and [SINGLE].*
 - d. *Proceed with steps 5 and 6 above.*
8. On the HP 8562B, press the TRIG key, [SINGLE], [SINGLE], the MARKER OFF key, and the PEAK SEARCH key.
 9. Press the INT key and [SIG ID AT MKR]. Wait for the signal identification routine to finish.
 10. If the frequency displayed in the active function block is within 50 MHz of the CW frequency of HP 8340A #1, and it is not identified as being an image, proceed to step 13.
 11. If the frequency displayed in the active function block is more than 50 MHz from the CW frequency of HP 8340A #1 and/or is identified as being an image, press the MARKER ON key. Rotate the knob to place the marker on the peak of the next highest signal.
 12. Repeat steps 9 through 11 until the conditions in step 10 are met.
 13. Press the MARKER ON key and [MARKER DELTA]. Rotate the knob to place the active marker on a signal near the tenth vertical graticule line (one division from the rightmost graticule line).
 14. Press the INT key and [SIG ID AT MKR]. Wait for the signal identification routine to finish.
 15. If the frequency displayed in the active function block is within 50 MHz of the HP 8340A #2 CW frequency, and the signal has not been identified as being an image, proceed to step 18.
 16. If the frequency displayed in the active function block is more than 50 MHz from the HP 8340A #2 CW frequency and/or is identified as being an image, press the MARKER ON key. Rotate the knob to place the active marker on the peak of the next highest signal.
 17. Repeat steps 14 through 16 until the conditions in step 15 are met.
 18. Record the HP 8562A/B Δ MKR frequency reading as the Actual Δ MKR reading in Table 3-32. The reading should be within the limits shown.
 19. For all other frequency spans of 5 GHz or more on the HP 8562B, repeat steps 8 through 18 for the combinations of HP 8340A CW frequencies and HP 8562B center frequencies as indicated in Table 3-32.

Table 3-32. Frequency Span Accuracy

| HP 8340A #1 Frequency (GHz) | HP 8340A #2 Frequency (GHz) | HP 8562A | | Δ MKR Reading | | | Measurement Uncertainty |
|-----------------------------------|-----------------------------------|----------------|-----------------|---------------|--------|-----------|----------------------------|
| | | Center Freq | Span Setting | Min | Actual | Max | |
| 1.499996 | 1.500004 | 1.5 GHz | 10 kHz | 7.60 kHz | _____ | 8.40 kHz | 33 Hz |
| 1.499992 | 1.500008 | 1.5 GHz | 20 kHz | 15.2 kHz | _____ | 16.8 kHz | 66 Hz |
| 1.499980 | 1.500020 | 1.5 GHz | 50 kHz | 38.0 kHz | _____ | 42.0 kHz | 165 Hz |
| 1.499960 | 1.500040 | 1.5 GHz | 100 kHz | 76.0 kHz | _____ | 84.0 kHz | 330 Hz |
| 1.499960 | 1.500040 | 1.5 GHz | 101 kHz | 76.0 kHz | _____ | 84.0 kHz | 333.3 Hz |
| 1.499920 | 1.500080 | 1.5 GHz | 200 kHz | 152 kHz | _____ | 168 kHz | 660 Hz |
| 1.499800 | 1.500200 | 1.5 GHz | 500 kHz | 380 kHz | _____ | 420 kHz | 1.65 kHz |
| 1.499600 | 1.500400 | 1.5 GHz | 1.0 MHz | 760 kHz | _____ | 840 kHz | 3.3 kHz |
| 1.499600 | 1.500400 | 1.5 GHz | 1.01 MHz | 760 kHz | _____ | 840 kHz | 3.333 kHz |
| 1.499200 | 1.500800 | 1.5 GHz | 2.0 MHz | 1.52 MHz | _____ | 1.68 MHz | 6.6 kHz |
| 1.498000 | 1.502000 | 1.5 GHz | 5.0 MHz | 3.80 MHz | _____ | 4.20 MHz | 16.5 kHz |
| 1.496 | 1.504 | 1.5 GHz | 10.0 MHz | 7.60 MHz | _____ | 8.40 MHz | 33 kHz |
| 1.492 | 1.508 | 1.5 GHz | 20.0 MHz | 15.2 MHz | _____ | 16.8 MHz | 66 kHz |
| 1.480 | 1.520 | 1.5 GHz | 50.0 MHz | 38 MHz | _____ | 42.0 MHz | 165 kHz |
| 1.460 | 1.540 | 1.5 GHz | 100 MHz | 76 MHz | _____ | 84.0 MHz | 330 kHz |
| 1.420 | 1.580 | 1.5 GHz | 200 MHz | 152 MHz | _____ | 168.0 MHz | 660 kHz |
| 1.300 | 1.700 | 1.5 GHz | 500 MHz | 380 MHz | _____ | 420 MHz | 1.65 MHz |
| 1.100 | 1.900 | 1.5 GHz | 1.0 GHz | 760 MHz | _____ | 840 MHz | 3.3 MHz |
| 0.700 | 2.300 | 1.5 GHz | 2.0 GHz | 1.52 GHz | _____ | 1.68 GHz | 6.6 MHz |
| 8.999996 | 9.000004 | 9.0 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 8.992 | 9.008 | 9.0 GHz | 20 MHz | 15.2 MHz | _____ | 16.8 MHz | 66 kHz |
| 8.98 | 9.020 | 9.0 GHz | 50 MHz | 38.0 MHz | _____ | 42.0 MHz | 165 kHz |
| 7.0 | 11.0 | 9.0 GHz | 5 GHz | 3.8 GHz | _____ | 4.2 GHz | 16.5 MHz |
| 15.999996 | 16.000004 | 16.0 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 15.98 | 16.02 | 16.0 GHz | 50 MHz | 38.0 MHz | _____ | 42 MHz | 165 kHz |
| 15.96 | 16.04 | 16.0 GHz | 100 MHz | 76.0 MHz | _____ | 84.0 MHz | 330 kHz |
| 14.0 | 18.0 | 16.0 GHz | 5 GHz | 3.8 GHz | _____ | 4.2 GHz | 16.5 MHz |
| 20.499996 | 20.500004 | 20.5 GHz | 10 kHz | 7.6 kHz | _____ | 8.4 kHz | 33 Hz |
| 20.48 | 20.52 | 20.5 GHz | 50 MHz | 38 MHz | _____ | 42 MHz | 165 kHz |
| 20.46 | 20.54 | 20.5 GHz | 100 MHz | 76.0 MHz | _____ | 84.0 MHz | 330 kHz |
| 3.0 | 21.0 | 12.40 GHz | 19.25 GHz | 17.1 GHz | _____ | 18.9 GHz | 63.525 MHz |

3-40. Third Order Intermodulation Distortion SPECIFICATION

For a total mixer input level* of -30 dBm:

10 MHz–2.9 GHz: <-70 dBc

2.75–22 GHz (Option 026: 2.75–26.5 GHz): <-75 dBc

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

Two synthesized sweepers provide the signals required for measuring third order intermodulation. Both synthesized sweepers are phase-locked to the analyzer's 10 MHz reference.

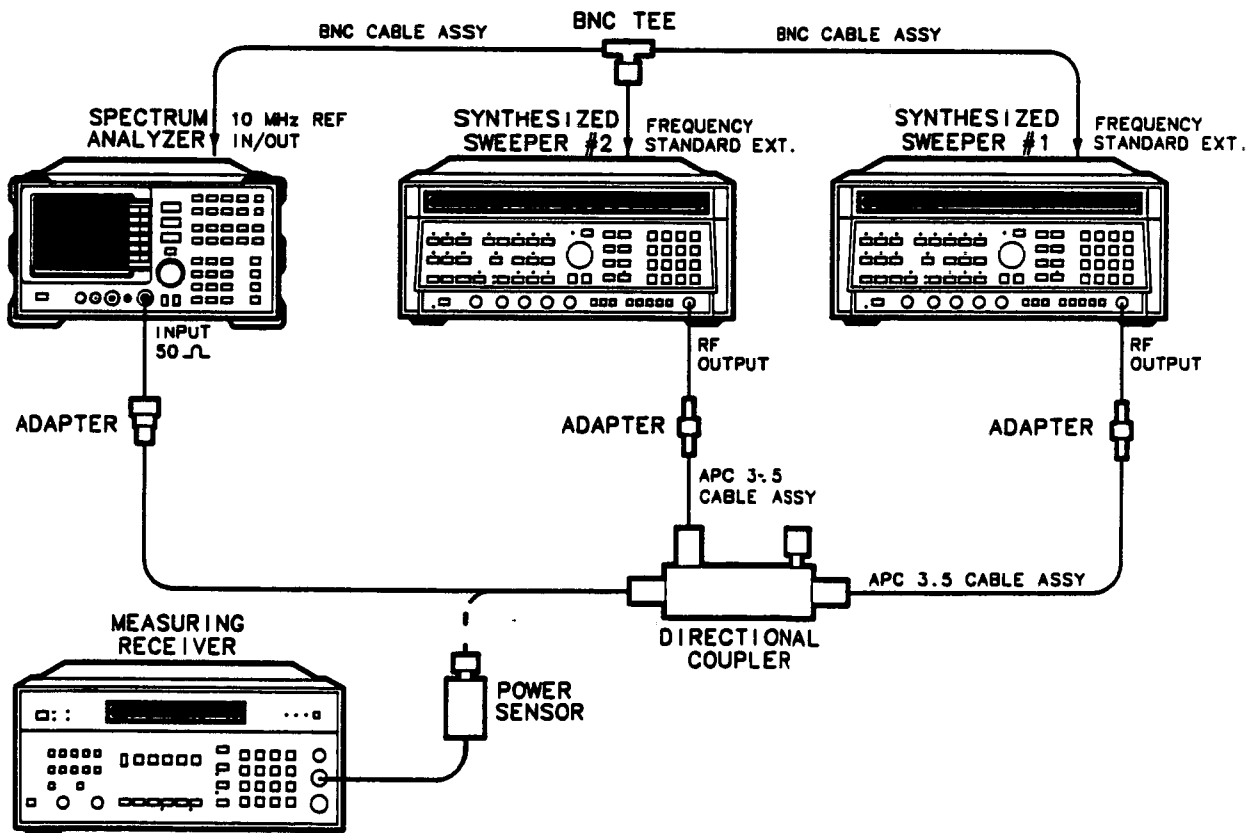


Figure 3-20. Third Order Intermodulation Test Setup

* Total mixer input level = Total Input Level – Input Attenuation

EQUIPMENT

| | |
|----------------------------------|--------------|
| Measuring Receiver | HP 8902A |
| Synthesized Sweeper (2 required) | HP 8340A |
| Directional Coupler | HP 0955-0125 |
| Power Sensor | HP 8485A |

Adapters

| | |
|--|--------------|
| Type N (m) to APC 3.5 (m) (not necessary for Option 026) | HP 1250-1743 |
| APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| BNC tee (m) (f) (f) | HP 1250-0781 |

Cables

| | |
|--------------------------------------|--------------|
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| APC 3.5, 91 cm (36 in.) (2 required) | HP 8120-4921 |

PROCEDURE

Third Order Intermodulation (10 MHz–2.9 GHz)

1. Connect the equipment as shown in Figure 3-20.
2. Press the INSTR PRESET key on each HP 8340A. Set each of the HP 8340A controls as follows:

| | |
|--|-------------|
| POWER LEVEL | -20 dBm |
| CW (HP 8340A #1) | 2.800 GHz |
| CW (HP 8340A #2) | 2.80005 GHz |
| MODULATION | OFF |
| RF | OFF |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

3. Set the HP 8902A controls as follows:

| | |
|----------|----------|
| FUNCTION | RF POWER |
| LOG/LIN | LOG |

4. On the HP 8562A/B, press the PRESET key. On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRSEL PK]. Set the HP 8562A/B controls as follows:

| | |
|-------------|---------|
| CENTER FREQ | 2.8 GHz |
| REF LVL | -20 dBm |
| SPAN | 10 kHz |
| CF STEP | 50 kHz |
| RES BW | 1 kHz |
| VIDEO BW | 100 Hz |

5. Zero the HP 8902A and calibrate the HP 8485A power sensor at 50 MHz as described in the HP 8902A Operation Manual. Enter the power sensor's 3 GHz calibration factor into the HP 8902A.
6. Connect the HP 8485A Power Sensor to the output of the directional coupler.

7. On the HP 8340A #1, press the RF key on. Adjust the the POWER LEVEL key for a -23 dBm reading on the HP 8902A display.
8. Disconnect the power sensor from the directional coupler. Connect the directional coupler directly to the HP 8562A/B INPUT 50 Ω using an adapter. (Do not use a cable.)
9. On the HP 8562A/B, press the following keys: the PEAK SEARCH key, the MKR \rightarrow key, and [MARKER \rightarrow REF LVL]. Wait for a new sweep to finish, then press the following keys: [MARKER DELTA], the FREQUENCY key, and the \uparrow key.
10. On the HP 8340A #2, press the RF key on.
11. On the HP 8562A/B, press the PEAK SEARCH key.
12. Adjust the the POWER LEVEL key of the HP 8340A #2 for a Δ MKR reading of 0.0 dB \pm 0.17 dB.
13. Press the following HP 8562A/B keys: the MARKER OFF key, the PEAK SEARCH key, [MARKER DELTA], the FREQUENCY key, and the \uparrow key. Wait for a new sweep to finish, then press the PEAK SEARCH key.
14. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Upper Product Suppression. The suppression should be greater than 70 dB.
15. On the HP 8562A/B, press the FREQUENCY key, the \downarrow key, the \downarrow key, and the \downarrow key. Wait for a new sweep to finish and press the PEAK SEARCH key.
16. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Lower Product Suppression. The suppression should be greater than 70 dB.

Third Order Intermodulation, > 2.9 GHz

17. Disconnect the directional coupler from the HP 8562A/B. Connect the directional coupler to the power sensor.
18. On the HP 8340A #2, press the RF key off.
19. Set each of the HP 8340A frequencies, the CW key, to the next values listed in Table 3-33. Enter the appropriate power sensor calibration factor into the HP 8902A.
20. Adjust the the POWER LEVEL key on the HP 8340A #1 for a -23 dBm reading on the HP 8902A display.
21. Disconnect the power sensor from the directional coupler. Connect the directional coupler directly to the HP 8562A/B INPUT 50 Ω using an adapter.
22. Set the HP 8562A/B center frequency to the same frequency as the HP 8340A #1. Press the MARKER OFF key.
23. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, set the reference level to -20 dBm then press the following keys: the PEAK SEARCH key, the INT key, and [PRESEL AUTO PK]. Wait for the *PEAKING* message to disappear.

EQUIPMENT

| | |
|----------------------------------|-----------|
| Synthesized Sweeper (2 required) | HP 8340A |
| Measuring Receiver | HP 8902A |
| Amplifier | HP 11975A |
| Power Sensor | HP 8485A |
| Power Splitter | HP 11667B |

Adapters

| | |
|--|--------------|
| Type APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| Type APC 3.5 (m) to N (m) (not necessary for Option 026) | HP 1250-1743 |
| Type BNC tee (m) (f) (f) | HP 1250-0781 |

Cables

| | |
|-----------------------------------|----------------|
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| APC 3.5, 91 cm (36 in.) | HP 8120-4921 |
| RF Cable | HP 11975-20002 |

PROCEDURE

<2.9 GHz

1. Zero the HP 8902A and calibrate the HP 8485A power sensor as described in the HP 8902A Operation Manual. Enter the power sensor's 2 GHz calibration factor into the HP 8902A.
2. Connect the equipment as shown in Figure 3-21, with the output of the power splitter connected to the HP 8485A Power Sensor.
3. Press the INSTR PRESET key on both HP 8340A's. Set the controls for the HP 8340A #1 as follows:

| | |
|--|---------|
| CW | 2.0 GHz |
| POWER LEVEL | -24 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

4. Set the controls for the HP 8340A #2 as follows:

| | |
|--|-----------|
| CW | 2.003 GHz |
| POWER LEVEL | +8 dBm |
| FREQUENCY STANDARD SWITCH (rear panel) | EXT |

5. On the HP 8562A/B, press the PRESET key. On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRESEL PK]. Set the HP 8562A/B controls as follows:

| | |
|-------------|----------|
| CENTER FREQ | 2.0 GHz |
| REF LVL | -30 dBm |
| SPAN | 10 MHz |
| RES BW | 300 kHz |
| SCALE | 1 dB/Div |

6. Adjust the HP 11975A OUTPUT POWER LEVEL for a +5 dBm reading on the HP 8902A display.
7. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.

8. Remove the power sensor from the power splitter. Connect the power splitter to the HP 8562A/B RF INPUT using an adapter. Do not use a cable.
9. Adjust the HP 8340A #1 POWER LEVEL key for a signal 1 dB below the HP 8562A/B reference level.
10. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
11. Set the HP 8340A #2 POWER LEVEL key to +8 dBm.
12. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the lower amplitude signal and not on the signal that is off the top of the screen. If it is not on the lower amplitude signal, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude. The amplitude should read less than -1.0 dB.

Gain Compression Band 0 (< 1.0 dB): _____ dB

>2.9 GHz

13. Set the HP 8562A/B, HP 8340A #1, and HP 8340A #2 to the frequencies indicated in Table 3-34 for Band 1.
14. Enter the HP 8485A calibration factor at the HP 8562A/B center frequency value into the HP 8902A.
15. Disconnect the power splitter from the HP 8562A/B and reconnect it to the HP 8485A Power Sensor.
16. Adjust the HP 11975A OUTPUT POWER LEVEL for a +7 dBm reading on the HP 8902A display.
17. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.
18. Reconnect the power splitter to the HP 8562A/B RF INPUT 50 Ω .
19. Adjust the HP 8340A #1 POWER LEVEL key to bring the signal 1 dB (one division) below the HP 8562A reference level.
20. On the HP 8562A/B, press the MARKER OFF key and the PEAK SEARCH key.
21. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
22. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
23. Set the HP 8340A #2 POWER LEVEL key to +8 dBm.
24. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the peak of the lower amplitude signal. If it is not, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude and record this as the Gain Compression in Table 3-34. The gain compression should be less than 1 dB.
25. Repeat steps 14 through 24 until all the entries in Table 3-34 have been completed.

3-43. Sweep Time Accuracy

SPECIFICATION

For SPAN = 0 Hz:

Sweep time < 30 ms: < -15%

60 s ≥ Sweep time ≥ 30 ms: < -1%

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

For sweep times less than 30 ms, an amplitude-modulated signal is displayed on the analyzer in zero span, and the frequency of the modulating signal (triangle wave) is adjusted to space the peaks evenly across the display. The frequency of the modulating signal is counted and the actual sweep time is calculated and compared to the specification.

For sweep times of 30 ms to 60 seconds, the time interval of the BLANKING OUTPUT's low state is measured. This time interval corresponds to the sweep time. The measured sweep time is compared to the specification.

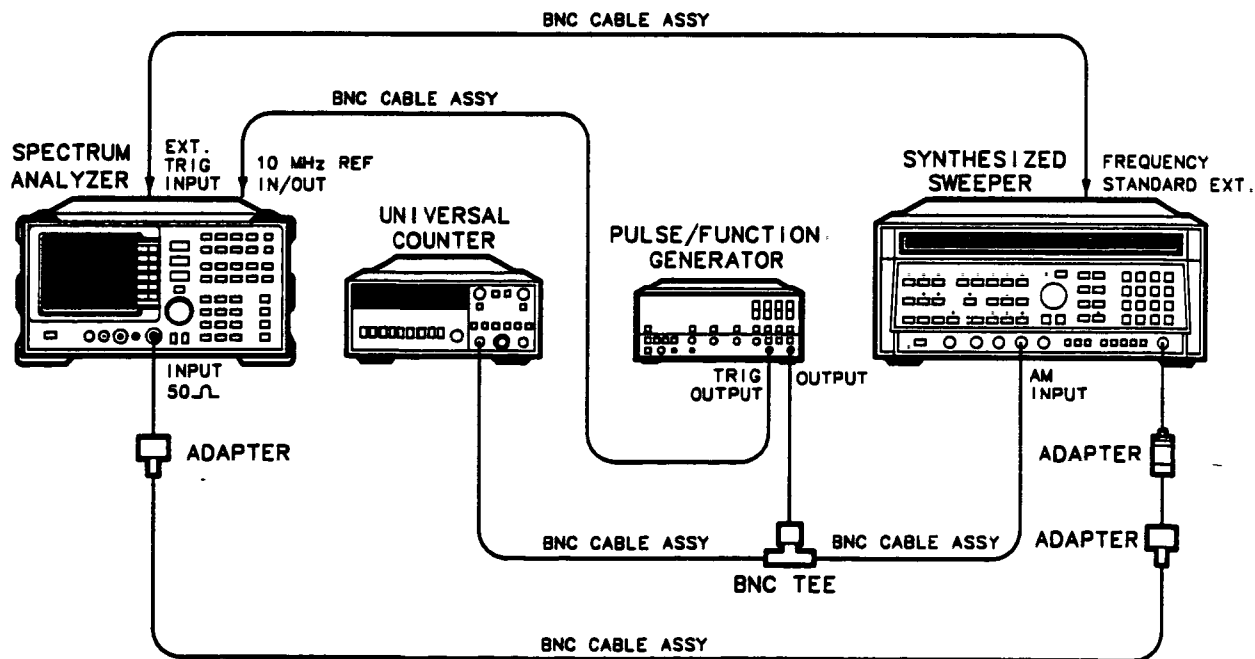


Figure 3-23. Sweep Time Accuracy Test Setup

EQUIPMENT

| | |
|--------------------------|----------|
| Synthesized Sweeper | HP 8340A |
| Universal Counter | HP 5316A |
| Pulse/Function Generator | HP 8116A |

Adapters

| | |
|--|--------------|
| APC 3.5 (f) to N (f) (2 required for Option 026) | HP 1250-1745 |
| Type N (m) to BNC (f) (2 required) | HP 1250-1476 |
| BNC tee (m) (f) (f) | HP 1250-0781 |

Cables

| | |
|-----------------------------------|----------|
| BNC, 122 cm (48 in.) (5 required) | HP 10503 |
|-----------------------------------|----------|

PROCEDURE

1. Connect the equipment as shown in Figure 3-23, with the BNC cable from the HP 5316A connected to the HP 8562A/B EXT TRIG INPUT.
2. On the HP 8562A/B, press the PRESET key and set the controls as follows:

| | |
|-------------|------------|
| CENTER FREQ | 300 MHz |
| SPAN | 0 Hz |
| SWEEP TIME | 50 μ s |
| SCALE | LINEAR |

3. Set all buttons on the HP 5816A out, including the blue SHIFT button. Set the LEVEL/SENS control for Channel A to midrange and the LEVEL/SENS control for Channel B fully counterclockwise. Set the GATE TIME Control to MIN.
 - a. Push the FREQ A button in.
 - b. Push the AC/DC buttons for Channels A and B in.
 - c. Push the Channel A TRIGGER LEVEL/SENSITIVITY button in.
4. Set the HP 5116A controls as follows:

| | |
|----------|----------|
| FRQ | 200 kHz |
| DTY | 50% |
| AMP | 500 mV |
| OFS | 0V |
| FUNCTION | TRIANGLE |

5. Press the INSTR PRESET key on the HP 8340A. Set the controls as follows:

| | |
|-------------|---------|
| CW | 300 MHz |
| POWER LEVEL | -5 dBm |
| MODULATION | AM |

6. On the HP 8562A/B, press the TRIG key and [EXTERNAL].

7. Adjust the HP 8116A frequency for 10 cycles evenly spaced relative to the vertical graticule lines on the analyzer. For example, if the peak of the first cycle is 0.2 divisions to the right of the first graticule line, the peak of the tenth cycle should be set 0.2 divisions to the right of the tenth graticule line.
8. Read the frequency displayed on the HP 5316A. Calculate the measured sweep time using the equation below. Record the result as the Measured Sweep Time in Table 3-36 for the 50 μ s Sweep Time Setting. The Measured Sweep Time should lie within the limits shown in Table 3-36.

$$\text{Measured Sweep Time} = 10 / \text{HP 5316A Frequency Reading}$$

9. Repeat steps 7 and 8 above for sweep times between 100 μ s and 20 ms listed in Table 3-36. Set the initial HP 8116A frequency according to the equation below.

$$\text{Initial HP 8116A Frequency} = 10 / \text{Sweep Time Setting}$$

10. Disconnect the BNC cable between the HP 5316A and the HP 8116A. Connect a BNC cable from the BLANKING OUTPUT on the HP 8562A/B to the Channel A input of the HP 5316A.
11. On the HP 8562A/B, press the TRIG key, [FREE RUN], the SWEEP key, the 3 key, the 0 key, and the ms key.
12. On the HP 5316A, set the controls as follows:
 - a. Set the Channel A LEVEL/SENS control fully counterclockwise.
 - b. Press the TI A \rightarrow B button.
 - c. Push the SEP/COM A button in.
 - d. Set the Channel A TRIGGER LEVEL/SENSITIVITY button out.
 - e. Push the Channel A SLOPE button in (negative edge trigger).
13. On the HP 5316A, slowly rotate the Channel A LEVEL/SENS control clockwise until the yellow LED next to it begins to flash. Repeat for the Channel B LEVEL/SENS control.
14. Repeat the following steps for each sweep time listed in Table 3-36.
15. Set the HP 8562A/B to the sweep time listed in the first column of Table 3-36.
16. Wait for the HP 5316A display to settle (usually about three sweeps). Record the HP 5316A reading as the Measured Sweep Time in Table 3-36. The Measured Sweep Time should fall within the limits shown in Table 3-36.

NOTE

It might be necessary to readjust the LEVEL/SENS controls slightly for a stable display.

Table 3-36. Sweep Time Accuracy

| Sweep Time Setting | Minimum Reading | Measured Sweep Time | Maximum Reading | Measurement Uncertainty |
|--------------------|-----------------|---------------------|-----------------|-------------------------|
| 50 μ s | 42.5 μ s | _____ | 57.5 μ s | \pm 101 ns |
| 100 μ s | 85 μ s | _____ | 115 μ s | \pm 101 ns |
| 200 μ s | 170 μ s | _____ | 230 μ s | \pm 102 ns |
| 500 μ s | 425 μ s | _____ | 575 μ s | \pm 103 ns |
| 1 ms | 850 μ s | _____ | 1.15 ms | \pm 105 ns |
| 2 ms | 1.70 ms | _____ | 2.30 ms | \pm 108 ns |
| 5 ms | 4.25 ms | _____ | 5.75 ms | \pm 119 ns |
| 10 ms | 8.5 ms | _____ | 11.5 ms | \pm 137 ns |
| 20 ms | 17.0 ms | _____ | 23.0 ms | \pm 171 ns |
| 30 ms | 29.7 ms | _____ | 30.3 ms | \pm 209 ns |
| 50 ms | 49.5 ms | _____ | 50.5 ms | \pm 281 ns |
| 100 ms | 99.0 ms | _____ | 101.0 ms | \pm 461 ns |
| 200 ms | 198.0 ms | _____ | 202.0 ms | \pm 821 ns |
| 500 ms | 495.0 ms | _____ | 505.0 ms | \pm 1.901 μ s |
| 1s | 990.0 ms | _____ | 1010.0 ms | \pm 3.7 μ s |
| 2s | 1.980s | _____ | 2.020s | \pm 7.3 μ s |
| 5s | 4.95s | _____ | 5.05s | \pm 18.1 μ s |
| 10s | 9.90s | _____ | 10.1s | \pm 36.1 μ s |
| 20s | 19.8s | _____ | 20.2s | \pm 72.1 μ s |
| 50s | 49.5s | _____ | 50.5s | \pm 180.1 μ s |
| 60s | 59.4s | _____ | 60.6s | \pm 216.1 μ s |

3-44. Residual Responses

SPECIFICATION

200 kHz to 6.46 GHz: <-90 dBm with no signal at input and 0 dB input attenuation

RELATED ADJUSTMENT

There is no related adjustment for this performance test.

DESCRIPTION

This test checks for residual responses in Bands 0 and 1 (N = 1). Any response located above the display line is measured in a narrow frequency span and resolution bandwidth. The spectrum analyzer INPUT 50Ω is terminated in 50 ohms.

EQUIPMENT

Coaxial 50-Ohm Termination HP 909D

Adapters

Type N (m) to APC 3.5 (f) HP 1250-1744
 Type N (m) to BNC (f) HP 1250-1476
 Type N (f) to APC 3.5 (f) (*Option 026*) HP 1250-1745

Cables

BNC, 122 cm (48 in.) HP 10503A

PROCEDURE

1. On the HP 8562A/B, press the PRESET key and set the controls as follows:

CENTER FREQ 300 MHz
 SPAN 10 kHz
 RES BW 300 Hz
 REF LEVEL -10 dBm
 ATTEN 0 dB

2. On the HP 8562A/B, connect a BNC cable between the CAL OUTPUT and INPUT 50Ω and press the PEAK SEARCH key, the AMPLITUDE key, [MORE], and [REF LEVEL CAL]. Use the data entry knob or step keys to change the REF LEVEL CAL value until the marker amplitude reads -10.00 dBm ±0.17 dB.

Residual Responses, Band 0

3. Remove the BNC cable and adapter from the INPUT 50Ω. Install the Type N to APC 3.5 adapter and 50-ohm termination on the INPUT 50Ω. Press the PRESET key and set the controls as follows:

| | |
|--------------|----------|
| CENTER FREQ | 15.2 MHz |
| SPAN | 30 MHz |
| CF STEP | 28.5 MHz |
| REF LEVEL | -50 dBm |
| ATTEN | 0 dB |
| RES BW | 10 kHz |
| TRIG | SINGLE |
| DISPLAY LINE | -90 dBm |

4. Press the TRIG key and [SINGLE] to trigger a sweep. The noise level should be at least 6 dB below the display line. If it is not, it will be necessary to reduce the SPAN and RES BW to reduce the noise level. If the SPAN is reduced, reduce the [CF STEP] to no more than 95% of the SPAN.
5. If a residual is suspected, press [SINGLE] again. A residual response will persist, but a noise peak will not. Record the frequency and amplitude of any responses above the display line.
6. If a response is marginal, verify the response amplitude as follows:
 - a. Press the SAVE key, [SAVE STATE], and [STATE 0].
 - b. Press MARKER ON. Place the marker on the peak of the response in question.
 - c. Press the MKR→ key and [MARKER→CF].
 - d. Press the SPAN key, the ↓ key four times, the TRIG key, and [CONT].
 - e. Press the BW key and [RES BW AUTO].
 - f. Continue to reduce the SPAN until a RES BW of 300 Hz is reached. If the response is a synthesis-related residual, it might disappear as the SPAN is reduced. If this is the case, measure the amplitude with the narrowest span possible and a 300 Hz RES BW.
 - g. Record the frequency and amplitude of any residual response above the display line.
 - h. Press the RECALL key, [RECALL STATE], and [STATE 0].
7. Check for residuals up to 2.9 GHz using the procedure of steps 4 through 6 above. To change the center frequency, press [CENTER FREQ] and the ↑ key.

Residual Responses, Band 1

8. Set the HP 8562A/B CENTER FREQ to 2.915 GHz.
9. Check for residuals from 2.9 GHz to 6.46 GHz using the procedure of steps 4 through 6 above. To change the center frequency, press [CENTER FREQ] and the ↑ key.



Manual Updating Supplement

Supplement HP Part Number: 08562-90059

Supplement Print Date: February 1988

**This supplement updates the following document:
HP 8562A/B Operating and Programming Manual**

**Manual HP Part Number: 08562-90001
Manual Print Date: February 1987**

What Are Manual Updating Supplements?

A Manual Updating Supplement keeps your manual up-to-date. The supplement is shipped with the manual that it modifies. The supplement consists of a cover page, a list of manual modifications, and various replacement and/or additional pages for your manual.

COVER PAGE

The cover page of each Manual Updating Supplement gives the supplement part number and its print date. The supplement print date corresponds to the revision date of the supplement (e.g., Rev. 12JUL87) found at the bottom of the cover page.

The revision date of the supplement is updated each time the supplement changes, but the supplement part number stays the same. For each manual part number there is only one Manual Updating Supplement part number.

MANUAL MODIFICATIONS

The information that immediately follows the cover page tells you what modifications to make to your manual. These modifications are organized by page number and serial prefix. Perform all modifications that apply to your instrument.

In addition to modifications to the existing manual, you may be instructed to replace pages in your manual or add new pages. Refer to the information below if you need clarification of page replacement or adding new pages.

REPLACEMENT OR ADDITIONAL PAGES

A replacement page has the same page number as the page being replaced. Additional pages have page numbers with a lower-case letter. For example, if one additional page is added between pages 6-4 and 6-5, it will be numbered 6-4a.

The revision date appearing on each page is the date that the new page was *originally* added to the supplement.

Replacement or additional pages may contain several different types of information:

- new information that was not supplied in the original document
- change information that documents changes to the product that have occurred since the original printing of the manual
- error information (errata) that corrects errors that were present in the manual

New and change information is usually tied to a serial prefix or firmware version change; however, information that applies to *all* serials or *all* firmware versions may also be included in the supplement.

The applicable serial prefix or firmware version is printed on each page. If the information applies to all serial numbers of the instrument, the page will contain the notation *All Serials*. Similarly, if a replacement page contains error-correction information, it will contain the notation *Errata*.

INSERTING THE REPLACEMENT AND ADDITIONAL PAGES

After you have selected applicable pages, discard each old page for which you have a new version. Insert the new version of the page. Each replacement page will have the exact page number as the old version.

Additional pages have page numbers with a lower-case letter. These pages are added to the manual without removing any old pages. For example, if there is one additional page numbered 6-4a, it should be added between pages 6-4 and 6-5.

PAGE 1-2:

All Serials

Table 1.1. Front-panel connector data.

Change RF INPUT to INPUT 50 Ω .

For INPUT 50 Ω under FREQUENCY RANGE, change "1 kHz–22 GHz" to "1 kHz–22 GHz (*Option 026: 1 kHz–26.5 GHz*)."

For INPUT 50 Ω under AMPLITUDE/VOLTAGE LIMITS, change "+ 10 dBm Max" to "+30 dBm Max with 10 dB attenuation.."

PAGE 1-5:

All Serials

Paragraph 3

Change "0.5V/GHz from 0–22 GHz" to "0.5V/GHz from 0–22 GHz (*Option 026: 0.5V/GHz from 0–26.5 GHz*)."

PAGE 2-2:

All Serials

Paragraph 2, CENTER FREQ

Change "2.75 GHz–22 GHz" to "2.75 GHz–22 GHz (*Option 026: 2.75 GHz–26.5 GHz*)."

PAGE 2-3:

All Serials

Paragraph 2, NOTE

Change "2.75 GHz–22 GHz" to "2.75 GHz–22 GHz (*Option 026: 2.75 GHz–26.5 GHz*)."

All Serials

Paragraph 4, FULL SPAN

Change "the full span is 19.25 GHz" to "the full span is 19.25 GHz (*Option 026: 23.75 GHz*)."

PAGE 2-4:

All Serials

Table 2.1. Frequency bands and their minimum reference levels.

Under BAND, change "19.1 GHz–22 GHz" to "19.1 GHz–22 GHz (*Option 026: 19.1 GHz–26.5 GHz*)."

PAGE 4-2:

All Serials

Table 4.1. State of instrument after [PRESET] is executed.

In the STATE column, make the following changes:

Change line 2, CENTER FREQ, from "12.38 GHz (HP 8562A)" to "12.38 GHz (HP 8562A) *Option 026: 14.63 GHz (HP 8562A)*."

Change line 3, SPAN, from "19.25 GHz (HP 8562A)" to "19.25 GHz (HP 8562A) *Option 026: 23.75 GHz (HP 8562A)*."

Change line 4, CF STEP, from "1.93 GHz, AUTO" to "1.93 GHz, AUTO (*Option 026: 2.375 GHz, AUTO*)."

Change line 20, SWEEP TIME, from "400 ms, AUTO" to "400 ms, AUTO (*Option 026: 500 ms, AUTO*)."

PAGE 4-13:

All Serials

Last paragraph, SIG ID→CF

Change "less than 22 GHz" to "less than 22 GHz (*Option 026: less than 26.5 GHz*)."

PAGE 5-2:

All Serials

Paragraph 7, .5V/GHz (FAV)

Change "0 Hz to 22 GHz" to "0 Hz to 22 GHz (*Option 026: 0 Hz to 26.5 GHz*)."

PAGE 5-3:

HP 8562A: 2805A

HP 8562B: 2809A

Paragraph 6, RES BW and RES BW AUTO MAN

Change the second sentence to read:

The bandwidth, which appears in the active function block, ranges from 100 Hz to 1 MHz in a 1, 3, 10 sequence and 2 MHz (3 MHz at -6 dB).

PAGE 5-7:

HP 8562A: 2805A

HP 8562B: 2809A

Paragraph 8

Above paragraph 8, PLOTTER MENU, add the following text:

PRINT/PLOT

Accesses a menu of print and plot modes which are described below.

PRINT

Prints the entire contents of the spectrum analyzer display (except for the menus and error codes). When PRINT is active, STOP PRINT appears in its place, allowing you to stop printing before it is finished.

COLOR PRINT

Prints the entire contents of the spectrum analyzer display (except for the menus and error codes) in color to the HP 3630A PaintJet printer. When COLOR PRINT is active, STOP PRINT appears in its place, allowing you to stop printing before it is finished. Colors of the printed display are fixed by the spectrum analyzer.

NOTE

If the HP 3630A PaintJet printer is not connected at the execution of COLOR PRINT, erroneous information will be printed.

PLOT

Same as PLOT ALL.

PLOT OPTIONS

Same as PLOTTER MENU.

PAGE 7-4:

HP 8562A: 2805A

HP 8562B: 2809A

After the last page of chapter 7, add the new pages 7A-1 through 7A-3, provided in this Manual Updating Supplement.

PAGE 13-4:

HP 8562A: 2805A
HP 8562B: 2809A

Paragraph 1, Preselector Control

After paragraph 1, add the following paragraph:

Printer Output

PRINT

Sends the analyzer display to a printer.

PAGE 14-66:

All Serials

Table 14.3. HP 8562A/B preset state.

In the STATE column, make the following changes:

Change line 2, CENTER FREQ, from "12.38 GHz (HP 8562A)" to "12.38 GHz (HP 8562A) *Option 026: 14.63 GHz (HP 8562A).*"

Change line 3, SPAN, from "19.25 GHz (HP 8562A)" to "19.25 GHz (HP 8562A) *Option 026: 23.75 GHz (HP 8562A).*"

Change line 4, CF STEP, from "1.93 GHz, AUTO" to "1.93 GHz, AUTO (*Option 026: 2.375 GHz, AUTO.*)"

Change line 20, SWEEP TIME, from "400 ms, AUTO" to "400 ms, AUTO (*Option 026: 500 ms, AUTO.*)"

PAGE 14-108

HP 8562A: 2805A
HP 8562B: 2809A

After page 14-108, add the new pages 14-108a and 14-108b, provided in this Manual Updating Supplement.

CHAPTER 7A

PRINTING REMOTELY

In addition to print functions available from the front panel, the HP 8562A/B allows remote printing. This chapter describes how you can print remotely.

PRINTER REQUIREMENTS

The HP 8562A/B supports the following printers: the HP 3630A PaintJet printer, HP 2225A/B/D ThinkJet printer, and many other printers with IEEE-488 interface and raster graphics.

Set the printer address to one (see Figure 7A.1). If you want to use a different remote address, be sure to modify the example accordingly. Remember, to print from the spectrum analyzer front panel, you must reset the address to one.



Fig. 7A.1. Printer address set to one.

PRINTING

To print, connect the printer via HP-IB to the computer and execute example 1.

Example 1

```

10      OUTPUT 718;"PRINT"
20      SEND 7; UNL LISTEN 1 TALK 18 DATA
30      END

```

Line 10 of the example sends the spectrum analyzer PRINT command to the printer. Line 20 sends the following statements over the HP-IB interface: UNL sets all the instruments on the HP-IB to unlisten mode, LISTEN 1 sets only the printer to listen mode; TALK 18 specifies the spectrum analyzer as the talker. It can then send its display contents to the printer. Since the controller's HP-IB interface must not interfere with the print, the DATA statement puts the controller HP-IB interface on standby and sets the attention line low.

Example 1 illustrates the statements required to print remotely. However, there is no provision to indicate to the controller when printing is finished. Example 2 uses a spectrum analyzer "command complete" service request to indicate when the printing is done (service requests are discussed in Chapter 9). When the spectrum analyzer PRINT command is finished, a "command complete" service request is triggered and signals that the printing is done.

Example 2

```

10      ON INTR 7 GOTO Done
20      ENABLE INTR 7;2
30      OUTPUT 718;"RQS 16;"
40      OUTPUT 718;"PRINT"
50      SEND 7;UNL LISTEN 1 TALK 18 DATA
60      Idle:  GOTO Idle
70      Done:  S_poll=SPOLL(718)
80      OUTPUT 718;"RQS 0;"
90      PRINT "COMMAND IS COMPLETE"
100     END

```

Line 10 commands the controller to go the subroutine "Done" when the interrupt occurs. Line 20 enables the controller to receive the service request interrupts. On line 30, the RQS command specifies that a "command complete" condition will generate a service request. Lines 40 and 50 print the display contents. Line 60 keeps the controller on line 60 until the printing is finished and the PRINT command satisfies the "command complete" condition.

When the printing is finished, a service request interrupt is generated, sending the controller to the "Done" subroutine. "Done" performs a serial poll on the spectrum analyzer. This clears the analyzer of the service request. Line 80 returns the spectrum analyzer service requests to their initial condition. Line 90 prints on the computer screen that the printing is finished.

PRINTING OPTIONS

PRINT At the execution of the PRINT command, the display is printed on the HP 2225A/B/D ThinkJet printer, HP 3630A PaintJet printer (in black and white only), and many other printers with IEEE-488 interface and raster graphics capability.

PRINT 0 Same as PRINT


PRINT 1 At the execution of the PRINT 1 command, the display is printed on the HP 3630A PaintJet printer. Colors of the printed trace are fixed by the spectrum analyzer.

NOTE

If the HP 3630A PaintJet printer is not connected at the execution of the PRINT 1 command, erroneous information will be printed.

PRINT PRINT DISPLAY

SYNTAX

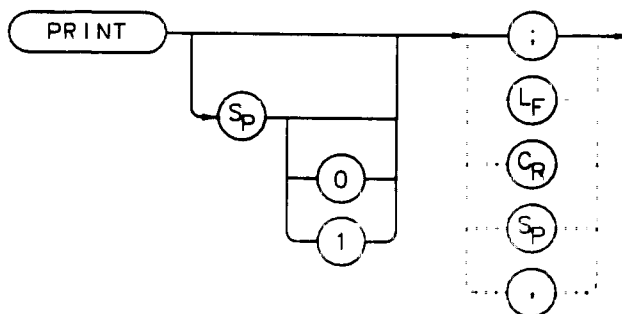

DESCRIPTION

The PRINT command copies the specified display contents onto HP 2225A/B/D ThinkJet, HP 3630A PaintJet, or any other printer with HP-IB interface and raster graphics capability. Set the printer address to one. Once PRINT is executed, no subsequent commands are executed until PRINT is done. For more information, refer to Chapter 7A.

- PRINT** At the execution of the PRINT command, the display is printed on the HP 2225A/B/D ThinkJet, HP 3630A PaintJet (in black and white only), and many other printers with IEEE-488 interface and raster graphics capability.
- PRINT 0** Same as PRINT
- PRINT 1** At the execution of the PRINT 1 command, the display is printed on the HP 3630A PaintJet printer. Colors of the printed trace are fixed by the spectrum analyzer.

NOTE

If the HP 3630A PaintJet printer is not connected at the execution of the PRINT 1 command, erroneous information will be printed.

EXAMPLE

```
10      ON INTR 7 GOTO Done
20      ENABLE INTR 7;2
30      OUTPUT 718;"RQS 16;"
40      OUTPUT 718;"PRINT"
50      SEND 7;UNL LISTEN 1 TALK 18 DATA
60      Idle: GOTO Idle
70      Done: S_poll=SPOLL(718)
80      OUTPUT 718;"RQS 0;"
90      PRINT "COMMAND IS COMPLETE"
100     END
```




Manual Updating Supplement

Supplement HP Part Number: 08562-90060

Supplement Print Date: February 1988

This supplement updates the following document:
HP 8562A/B Spectrum Analyzer Installation Manual

Manual HP Part Number: 08562-90007
Manual Print Date: January 1987

What Are Manual Updating Supplements?

A Manual Updating Supplement keeps your manual up-to-date. The supplement, which consists of a cover page and various replacement and/or additional pages for your manual, is shipped with the manual that it updates.

SELECTING THE PAGES TO BE ADDED

The following information helps you select the applicable pages to add supplement information to your manual.

Serial Prefix or Firmware Version

Check the serial prefix or firmware version information on the pages. If there are several versions of a page, select the version that applies to your instrument. For example, your instrument has a serial prefix of 2825A, and the supplement has two versions of one page: *Serial Prefix 2731A and Above*, and *Serial Prefix 2829A and Above*. In this example *Serial Prefix 2731A and Above* applies to your instrument.

Supplement Revision Date

If there are two copies of a page with the same page number and serial prefix, but different revision dates (e.g., Rev. 12JUL87 and Rev. 28AUG87), select the page with the latest revision date.

If there is an All Serials version of a particular piece of information on a page *and* a version identified by a serial prefix that applies to your instrument, select the version with the latest revision date on the bottom of the page. If there are two such pages with different changes, use both (incorporate one with the other).

If the page already in your manual has a revision date that is *later* than the applicable page in the supplement, keep the page currently in your manual; the manual already may have been updated.

COVER PAGE

The cover page of each Manual Updating Supplement gives the supplement part number and its print date. The supplement print date corresponds to the revision date of the supplement (e.g., Rev. 12JUL87) found at the bottom of the cover page.

The revision date of the supplement is updated each time the supplement changes, but the supplement part number stays the same. For each manual part number there is only one Manual Updating Supplement part number.

REPLACEMENT OR ADDITIONAL PAGES

A replacement page has the same page number as the page being replaced. Additional pages have page numbers with a lower-case letter. For example, if one additional page is added between pages 6-4 and 6-5, it will be numbered 6-4a.

The revision date appearing on each page is the date that the new page was *originally* added to the supplement.

Replacement or additional pages may contain several different types of information:

- new information that was not supplied in the original document
- change information that documents changes to the product that have occurred since the original printing of the manual
- error information (errata) that corrects errors that were present in the manual

New and change information is usually tied to a serial prefix or firmware version change; however, information that applies to *all* serials or *all* firmware versions may also be included in the supplement.

The applicable serial prefix or firmware version is printed on each page. If the information applies to all serial numbers of the instrument, the page will contain the notation *All Serials*. Similarly, if a replacement page contains error-correction information, it will contain the notation *Errata*.

INSERTING THE REPLACEMENT AND ADDITIONAL PAGES

After you have selected applicable pages, discard each old page for which you have a new version. Insert the new version of the page. Each replacement page will have the exact page number as the old version.

Additional pages have page numbers with a lower-case letter. These pages are added to the manual without removing any old pages. For example, if there is one additional page numbered 6-4a, it should be added between pages 6-4 and 6-5.



HP 8562A/B High Performance Portable Spectrum Analyzer

Installation Manual (Includes Options 001 and 026)

Serial Numbers

This manual applies directly to analyzers with the following serial number prefixes:

HP 8562A: 2642A to 2805A
HP 8562B: 2640A to 2809A

For additional important information about serial numbers, see "Analyzers Covered by This Manual" in Chapter 1.

Manual Part Number 08562-90007
Microfiche Part Number 08562-90008
Printed in U.S.A., January 1987

Copyright © 1988 Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999

HP 8562A/B Documentation Description

Manuals shipped with your analyzer:

Installation Manual

HP Part Number 08562-90007

- Tells you how to install the spectrum analyzer

● Tells you what to do in case of a failure

Operating and Programming Manual

HP Part Number 08562-90001

- Tells you how to make measurements with your spectrum analyzer

● Tells you how to program your spectrum analyzer

- Describes analyzer features

Pocket Operating Guide

HP Part Number 08562-90003

- An abbreviated version of the Operating and Programming Manual

Quick Reference Guide

HP Part Number 08562-90006

- Provides you with a listing of all remote programming commands

Options

Support Manual (Part of Option 915)*

HP Part Number 08562-90009

- Describes troubleshooting and repair of the analyzer

* Option 915, Service Documentation, consists of one copy each of the Support Manual, the Installation Manual, the Operating and Programming Manual, the Pocket Operating Guide, and the Quick Reference Guide.

Table 1-1. HP 8562A/B Specifications (1 of 8)

| FREQUENCY | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|---------------------------|---------------------------|------------------|----|----------------------|----|----------------------|----|----------------------|----|----------------------|----|----------------|-----------------------|---------------------------|---|--------------|----|---|--------------|----|---|--------------|-----|---|--------------|-----|---|--------------|-----|---|--------------|-----|---|---------------|-----|---|---------------|-----|---|----------------|-----|---|----------------|-----|---|----------------|-----|---|----------------|-----|
| Frequency Range Internal Mixing Internal Mixing Bands External Mixing External Mixing Bands | <p style="text-align: center;"><i>1 kHz to 22 GHz</i> <i>Option 026: 1 kHz to 26.5 GHz</i></p> <table border="0"> <thead> <tr> <th>Frequency Band</th> <th>Harmonic Mixing Mode (N)*</th> </tr> </thead> <tbody> <tr> <td>1 kHz to 2.9 GHz</td> <td>1-</td> </tr> <tr> <td>2.75 GHz to 6.46 GHz</td> <td>1-</td> </tr> <tr> <td>5.86 GHz to 13.0 GHz</td> <td>2-</td> </tr> <tr> <td>12.4 GHz to 19.7 GHz</td> <td>3-</td> </tr> <tr> <td>19.1 GHz to 22.0 GHz</td> <td>4-</td> </tr> </tbody> </table> <p><i>Opt. 026: 19.1 GHz to 26.5 GHz</i></p> <p style="text-align: center;"><i>18 to 325 GHz</i></p> <table border="0"> <thead> <tr> <th>Frequency Band</th> <th>Frequency Range (GHz)</th> <th>Harmonic Mixing Mode (N)*</th> </tr> </thead> <tbody> <tr> <td>K</td> <td>18.0 to 26.5</td> <td>6-</td> </tr> <tr> <td>A</td> <td>26.5 to 40.0</td> <td>8-</td> </tr> <tr> <td>Q</td> <td>33.0 to 50.0</td> <td>10-</td> </tr> <tr> <td>U</td> <td>40.0 to 60.0</td> <td>10-</td> </tr> <tr> <td>V</td> <td>50.0 to 75.0</td> <td>14-</td> </tr> <tr> <td>E</td> <td>60.0 to 90.0</td> <td>16-</td> </tr> <tr> <td>W</td> <td>75.0 to 110.0</td> <td>18-</td> </tr> <tr> <td>F</td> <td>90.0 to 140.0</td> <td>24-</td> </tr> <tr> <td>D</td> <td>110.0 to 170.0</td> <td>30-</td> </tr> <tr> <td>G</td> <td>140.0 to 220.0</td> <td>36-</td> </tr> <tr> <td>Y</td> <td>170.0 to 260.0</td> <td>44-</td> </tr> <tr> <td>J</td> <td>220.0 to 325.0</td> <td>54-</td> </tr> </tbody> </table> <p>< ± (frequency readout × frequency reference accuracy + 5% of frequency span + 15% of resolution bandwidth + 250 Hz)</p> <p style="text-align: center;">Selectable from 10 Hz to 1 MHz</p> <p>< ± (marker frequency × frequency reference accuracy + 50 Hz × N + 1 LSD)*</p> <p>< ± (delta frequency × frequency reference accuracy + 100 Hz × N + 2 LSD)*</p> <p style="text-align: center;">< ± 4 × 10⁻⁶ per year</p> <p style="text-align: center;">< 50 Hz × N* peak-to-peak in 100 ms</p> <p style="text-align: center;">< (-100 + 20logN) dBc/Hz*</p> | Frequency Band | Harmonic Mixing Mode (N)* | 1 kHz to 2.9 GHz | 1- | 2.75 GHz to 6.46 GHz | 1- | 5.86 GHz to 13.0 GHz | 2- | 12.4 GHz to 19.7 GHz | 3- | 19.1 GHz to 22.0 GHz | 4- | Frequency Band | Frequency Range (GHz) | Harmonic Mixing Mode (N)* | K | 18.0 to 26.5 | 6- | A | 26.5 to 40.0 | 8- | Q | 33.0 to 50.0 | 10- | U | 40.0 to 60.0 | 10- | V | 50.0 to 75.0 | 14- | E | 60.0 to 90.0 | 16- | W | 75.0 to 110.0 | 18- | F | 90.0 to 140.0 | 24- | D | 110.0 to 170.0 | 30- | G | 140.0 to 220.0 | 36- | Y | 170.0 to 260.0 | 44- | J | 220.0 to 325.0 | 54- |
| Frequency Band | Harmonic Mixing Mode (N)* | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 kHz to 2.9 GHz | 1- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2.75 GHz to 6.46 GHz | 1- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5.86 GHz to 13.0 GHz | 2- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12.4 GHz to 19.7 GHz | 3- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 19.1 GHz to 22.0 GHz | 4- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency Band | Frequency Range (GHz) | Harmonic Mixing Mode (N)* | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| K | 18.0 to 26.5 | 6- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| A | 26.5 to 40.0 | 8- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Q | 33.0 to 50.0 | 10- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| U | 40.0 to 60.0 | 10- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| V | 50.0 to 75.0 | 14- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E | 60.0 to 90.0 | 16- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| W | 75.0 to 110.0 | 18- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F | 90.0 to 140.0 | 24- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | 110.0 to 170.0 | 30- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| G | 140.0 to 220.0 | 36- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Y | 170.0 to 260.0 | 44- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| J | 220.0 to 325.0 | 54- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency Readout Accuracy (accuracy of Start, Center, Stop, or Marker frequency) Frequency Count Marker Resolution Frequency Count Marker Accuracy (for signal-to-noise ratio ≥ 25 dB) Delta Frequency Count Accuracy (for signal-to-noise ratio ≥ 25 dB) Frequency Reference Accuracy Includes aging, temperature drift, and settability. Stability Residual FM (zero span) Spectral Purity Noise sidebands (30 kHz offset) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>* N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band, and 310.7 MHz for all other bands).</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Table 1-1. HP 8562A/B Specifications (2 of 8)

| FREQUENCY (Continued) | |
|--|--|
| <p>Frequency Span Range Internal Mixing</p> <p>External Mixing</p> <p>Accuracy (Spans ≥ 10 kHz)</p> <p>Resolution Bandwidths (-3 dB) Range Accuracy 1 and 2\ddagger MHz RES BW 300 kHz to 300 Hz RES BW 100 Hz RES BW</p> <p>Selectivity (60 dB/3 dB bandwidth ratio)</p> <p>Bandwidth Shape</p> <p>Video Bandwidth Post-detection low-pass filter averages delayed noise for a smooth trace.</p> <p>Range</p> | <p>0 Hz, 2.5* kHz $\times N$† to 19.25 GHz (Opt. 026: to 23.75 GHz) over the 10-division CRT horizontal axis, variable in approximately 1% increments or in a 1,2,5 sequence</p> <p>Minimum span = 2.5 kHz $\times N$† $< \pm 5\%$</p> <p>100 Hz to 1 MHz selectable in a 1, 3, 10 sequence; and 2 MHz\ddagger</p> <p>$< \pm 25\%$ $< \pm 10\%$ $< \pm 30\%$</p> <p>$< 15:1$</p> <p>Synchronously tuned, 4-pole filters</p> <p>1 Hz to 3 MHz in a 1, 3, 10 sequence</p> |
| AMPLITUDE | |
| <p>MEASUREMENT RANGE</p> <p>Maximum Safe Input Power Average Continuous Power (input attenuation ≥ 10 dB)</p> <p>Peak Pulse Power (input attn. ≥ 30 dB)</p> <p>DC</p> <p>Gain Compression 10 MHz to 22 GHz (≤ -5 dBm§ at input mixer) 2.9 GHz to 22 GHz (≤ -3 dBm at input mixer) Opt. 026: 2.9 GHz to 26.5 GHz (≤ -3 dBm at input mixer)</p> | <p>+ 30 dBm (1 watt)</p> <p>+ 50 dBm (100 watts) for pulse widths $< 10 \mu\text{s}$ and $< 1\%$ duty cycle</p> <p>0 volts</p> <p>< 1.0 dB</p> |
| <p>* Minimum span is 10 kHz for spectrum analyzers with serial prefix of 2724A and below.</p> <p>† N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band, and 310.7 MHz for all other bands).</p> <p>‡ The 2 MHz resolution bandwidth is specified only for HP 8562A analyzers with serial prefix of 2805A and above, and for HP 8562B analyzers with serial prefix of 2809A and above.</p> <p>§ With ≤ -3 dBm at input mixer for HP 8562A with serial prefix 2805A and below, and HP 8562B with serial prefix 2750A and below.</p> | |

Table 1-1. HP 8562A/B Specifications (3 of 8)

| AMPLITUDE (Continued) | | |
|---|--|--|
| <p>Displayed Average Noise Level with no signal at input, 100 Hz RES BW, 1 Hz video BW, and 0 dB input attenuation</p> <p style="text-align: center;">Frequency Range 10 kHz 100 kHz 1 MHz to 2.9 GHz 2.9 GHz to 6.46 GHz 6.46 GHz to 13.0 GHz 13.0 GHz to 19.7 GHz 19.7 GHz to 22.0 GHz <i>Opt. 026: 19.7 GHz to 26.5 GHz</i></p> | <p>HP 8562A <-90 dBm <-100 dBm <-120 dBm <-121 dBm <-110 dBm <-105 dBm <-100 dBm</p> | <p>HP 8562B <-90 dBm <-100 dBm <-120 dBm <-121 dBm <-110 dBm <-105 dBm <-100 dBm</p> |
| <p>Spurious Responses (All input-related spurious responses, except as noted below, with ≤ -40 dBm mixer level*)</p> | <p>HP 8562A <-60 dBc 10 MHz to 6.46 GHz</p> | <p>HP 8562B <-60 dBc 10 MHz to 2.9 GHz</p> |
| <p>Second Harmonic Distortion</p> <p style="text-align: center;">Frequency Range 10 MHz to 2.9 GHz 2.75 GHz to 22.0 GHz <i>Opt. 026: 2.75 GHz to 26.5 GHz</i></p> | <p>HP 8562A <-72 dBc, -40 dBm mixer level* <-100 dBc, -10 dBm mixer level*</p> | <p>HP 8562B <-72 dBc, -40 dBm mixer level* <-60 dBc, -40 dBm mixer level*</p> |
| <p>Third Order Intermodulation Distortion (with -30 dBm total power at input mixer*)</p> <p style="text-align: center;">Frequency Range 10 MHz to 2.9 GHz 2.75 GHz to 22 GHz <i>Opt. 026: 2.75 GHz to 26.5 GHz</i></p> | <p>HP 8562A <-70 dBc <-75 dBc</p> | <p>HP 8562B <-70 dBc <-75 dBc</p> |
| <p>Image, Multiple, and Out-of-Band Responses</p> <p style="text-align: center;">Frequency Range 10 MHz to 18 GHz 10 MHz to 22 GHz <i>Opt. 026: 10 MHz to 26.5 GHz</i></p> | <p>HP 8562A <-70 dBc <-60 dBc</p> | <p>HP 8562B unspecified unspecified</p> |
| <p>Residual Responses 200 kHz to 6.46 GHz, with no signal at input, 0 dB input attenuation</p> | <p><-90 dBm</p> | |
| <p>DISPLAY RANGE Amplitude Scale</p> | <p>10 vertical CRT divisions with the reference level (0 dB) at the top graticule line</p> | |
| <p>* Mixer level = input level - input attenuation</p> | | |

Table 1-1. HP 8562A/B Specifications (4 of 8)

AMPLITUDE (Continued)

| | | |
|--|---|--|
| <p>DISPLAY RANGE (Continued)</p> | <p>10 dB/Div for 90 dB display from reference level 5 dB/Div for 50 dB display expanded from reference level* 2 dB/Div for 20 dB display expanded from reference level 1 dB/Div for 10 dB display expanded from reference level* 10% of reference level per division when calibrated in voltage</p> | |
| <p>Calibration Log</p> | | |
| <p>Linear</p> | | |
| <p>Reference Level Range Log, adjustable in 0.1 dB steps</p> | | |
| <p>Frequency Band 10 kHz to 2.9 GHz 2.75 GHz to 6.46 GHz 5.86 GHz to 13.0 GHz 12.4 GHz to 19.7 GHz 19.1 GHz to 22.0 GHz <i>Opt. 026: 19.1 GHz to 26.5 GHz</i></p> | <p>Range -120 dBm to +30 dBm -120 dBm to +30 dBm -115 dBm to +30 dBm -105 dBm to +30 dBm -100 dBm to +30 dBm</p> | |
| <p>Linear, settable in 1% steps</p> | | |
| <p>Frequency Band 10 kHz to 2.9 GHz 2.75 GHz to 6.46 GHz 5.86 GHz to 13.0 GHz 12.4 GHz to 19.7 GHz 19.1 GHz to 22.0 GHz <i>Opt. 026: 19.1 GHz to 26.5 GHz</i></p> | <p>Range 2.2 μV to 7.07V 2.2 μV to 7.07V 4.0 μV to 7.07V 12.6 μV to 7.07V 22 μV to 7.07V</p> | |

AMPLITUDE ACCURACY

| | | |
|---|---|---|
| <p>REFERENCE LEVEL UNCERTAINTY</p> | | |
| <p>Frequency Response (with 10 dB input attenuation) In-Band</p> | | |
| <p>Frequency Range 1 kHz to 2.9 GHz 2.9 GHz to 6.46 GHz 6.46 GHz to 13.0 GHz 13.0 GHz to 19.7 GHz 19.7 GHz to 22.0 GHz <i>Opt. 026: 19.7 GHz to 26.5 GHz</i></p> | <p>HP 8562A < \pm1.2 dB < \pm2.5 dB < \pm3.5 dB < \pm4.0 dB < \pm4.3 dB</p> | <p>HP 8562B < \pm1.2 dB < \pm2.0 dB < \pm2.5 dB < \pm3.0 dB < \pm4.3 dB</p> |
| <p>Referenced to CAL OUTPUT (300 MHz)</p> | | |
| <p>1 kHz to 22.0 GHz <i>Opt. 026: 1 kHz to 26.5 GHz</i></p> | <p>< \pm5.1 dB</p> | <p>< \pm5.1 dB</p> |

* These scales are available only in sweep times \geq 30 ms (digital display mode)

Table 1-1. HP 8562A/B Specifications (5 of 8)

| AMPLITUDE ACCURACY (Continued) | | |
|--|---|-----------|
| | HP 8562A | HP 8562B |
| Band Switching Uncertainty Additional uncertainty added to In-Band Frequency Response for measurements between any two bands. | < +0.5 dB | < +0.5 dB |
| Calibrator Uncertainty (-10 dBm, 300 MHz) | < ±0.3 dB | |
| Input Attenuator Switching Uncertainty 20 to 70 dB settings, referenced to 10 dB input attenuation | | |
| Frequency Range 1 kHz to 2.9 GHz | < ±0.6 dB/10 dB step, 1.8 dB max. | |
| IF Gain Uncertainty 0 dBm to -80 dBm reference levels with 10 dB input attenuation | < ±1.0 dB | |
| Resolution Bandwidth Switching Uncertainty Referenced to 300 kHz RES BW | < ±0.5 dB | |
| IF Alignment Uncertainty (uncertainty when using 100 Hz and 300 Hz RES BW) | | |
| 300 Hz RES BW | < ±0.5 dB | |
| 100 Hz RES BW | < ±2.0 dB | |
| Pulse Digitization Uncertainty Pulse response mode, PRF > 720/sweeptime | | |
| Log | < 1.25 dB peak-to-peak for res BW ≤ 1 MHz < 3 dB peak-to-peak for res BW of 2 MHz* | |
| Linear | < 4% of reference level peak-to-peak for res BW ≤ 1 MHz < 12% of reference level peak-to-peak for res BW of 2 MHz* | |
| SCALE FIDELITY | | |
| Log | < ±0.4 dB/4 dB from reference level to a maximum of ±1.5 dB over 0 to 90 dB range | |
| Linear | < ±3% of reference level | |
| * The 2 MHz RES BW is specified only for HP 8562A spectrum analyzers with serial prefix of 2805A and above, and for HP 8562B spectrum analyzers with serial prefix of 2809A and above. | | |

Table 1-1. HP 8562A/B Specifications (6 of 8)

| SWEEP | |
|---|---|
| <p>Sweep Time</p> <p>Range</p> <p>Span = 0</p> <p>Span = 0</p> <p>Span $\geq 2.5^* \text{ kHz} \times N^\dagger$</p> <p>Accuracy (Span = 0)</p> <p>30 ms \leq sweep time \leq 60 seconds</p> <p>Sweep time < 30 ms</p> <p>Sweep Trigger</p> | <p>50 μs to < 30 ms (analog display)</p> <p>30 ms to 60s (digital display)</p> <p>50 ms to 100s (digital display)</p> <p>< $\pm 1\%$</p> <p>< $\pm 15\%$</p> <p>Free Run, Single, Line, Video, External</p> |
| INPUTS AND OUTPUTS | |
| <p>IF INPUT</p> <p>Connector</p> <p>Input level for full-screen deflection (external mixing mode, 0 dBm reference level, 30 dB conversion loss)</p> <p>HP-IB</p> <p>Connector</p> <p>Interface Functions</p> <p>Direct Plotter Output</p> <p>CAL OUTPUT</p> <p>Connector</p> <p>Frequency</p> <p>Amplitude</p> <p>1ST LO OUTPUT</p> <p>Connector</p> <p>Amplitude</p> <p>10 MHz REF IN/OUT</p> <p>Connector</p> <p>Frequency</p> | <p>SMA female, front panel</p> <p>-30 dBm $\pm 1.5 \text{ dB}$</p> <p>IEEE-488 bus connector</p> <p>SH1, AH1, T6, TE0, L4, LE0, SR1, RL1, PP1, DC1, DT0, C1, C28, E1</p> <p>Supports HP 7225A, HP 7440A, HP 7470A, HP 7475A, HP 7550A, HP 9872A/B/C/T</p> <p>BNC female, front panel</p> <p>300 MHz $\pm (300 \text{ MHz} \times \text{frequency reference accuracy})$</p> <p>-10 dBm $\pm 0.3 \text{ dB}$</p> <p>SMA female, front panel</p> <p>+16.5 dBm $\pm 2.0 \text{ dB}$ (20°C to 30°C)</p> <p>BNC female, rear panel</p> <p>10 MHz $\pm (10 \text{ MHz} \times \text{frequency reference accuracy})$</p> |
| GENERAL | |
| <p>Environmental</p> <p>Military Specification</p> <p>Calibration Interval</p> <p>Warmup</p> | <p>Per MIL-T-28800C, Type III, Class 3 Style C as follows:</p> <p>1 year</p> <p>5 minutes from ambient conditions‡</p> |
| <p>* Minimum span is 10 kHz for spectrum analyzers with serial prefix 2724A and below.</p> <p>† N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band, and 310.7 MHz for all other bands).</p> <p>‡ 2 hours for conditions of internal condensation, 30 minutes to meet frequency response specifications without preselector peaking.</p> | |

Table 1-1. HP 8562A/B Specifications (7 of 8)

| GENERAL (Continued) | |
|----------------------------------|--|
| Environmental (Continued) | |
| Temperature | |
| Operating | -10°C to +55°C |
| Non-operating | -62°C to +85°C |
| Humidity | 95% at 40°C for 5 days |
| Altitude | |
| Operating | 15000 feet |
| Non-operating | 50000 feet |
| Rain Resistance | Drip-proof at 16 liters/hour/square foot |
| Vibration | |
| 5 to 15 Hz | 0.059 inch peak-to-peak excursion |
| 15 to 25 Hz | 0.039 inch peak-to-peak excursion |
| 25 to 55 Hz | 0.020 inch peak-to-peak excursion |
| Pulse Shock | |
| Half Sine | 30 g for 11 ms duration |
| Transit Drop | 8-inch drop on 6 faces and 8 corners |
| Electromagnetic Compatibility | <p>Conducted and radiated interference is in compliance with CISPR publication 11 (1985) and Messempefaenger-Postverfuegung 526/527/79 (Kennzeichnung Mit F-Nummer/Funkschutzzeichen). Meets the requirements of MIL-STD-461B, Part 4, with the exceptions shown below.</p> <p>Conducted Emissions CE01 (Narrowband): 1 kHz to 15 kHz only CE03 (Narrowband): Full limits CE03 (Broadband): 20 dB relaxation from 15 kHz to 100 kHz</p> <p>Conducted Susceptibility CS01: Full limits (limited to 36 Hz for HP 8562B) CS02: Full limits CS06: Full limits</p> <p>Radiated Emissions RE01: 15 dB relaxation to 30 kHz and exceptioned from 30 kHz to 50 kHz RE02: Full limits to 1 GHz</p> <p>Radiated Susceptibility RS01: Full limits RS02: Exceptioned RS03: Limited to 1 V/m from 14 kHz to 1 GHz, with 20 dB relaxation at IF frequencies (30 dB relaxation at IF frequencies for Option 001 instruments)</p> |

Table 1-1. HP 8562A/B Specifications (8 of 8)

| GENERAL (Continued) | | |
|----------------------------|---|------------------|
| Power Requirements | | |
| 115 Vac Operation | | |
| Voltage | | 90 to 140V rms |
| Current | | 3.2A rms max |
| Frequency | | 47 to 440 Hz |
| 230 Vac Operation | | |
| Voltage | | 180 to 250V rms |
| Current | | 1.8A rms max |
| Frequency | | 47 to 66 Hz |
| Maximum Power Dissipation | | 180 Watts |
| Weight | HP 8562A | HP 8562B |
| | 20 kg (44 lbs) | 19 kg (41.8 lbs) |
| Dimensions | | |
| Without handle or cover | 184 mm high x 337 mm wide x 460.5 mm deep | |
| With handle and cover | 200 mm high x 373 mm wide x 500 mm deep | |

Legend: inches
(millimeters)

14 ¹/₄ (373)
13 ¹/₄ (337)

TOP

REAR

8 (200)

SIDE

18 ¹/₄ (460.5)
7 ¹/₄ (184)

Table 1-2. HP 8562A/B Characteristics (1 of 3)

NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.

FREQUENCY

Frequency Reference Accuracy
 Aging
 Temperature drift (-10°C to +55°C)
 Settability

$< \pm 1 \times 10^{-6}/\text{year}$
 $< \pm 2 \times 10^{-6}$
 $< \pm 1 \times 10^{-6}$

DYNAMIC RANGE

Nominal Sensitivity (100 Hz Res BW, 1 Hz video BW, 0 dB input attenuation)
Frequency Range
 1 MHz to 2.9 GHz
 2.9 GHz to 6.46 GHz
 6.46 GHz to 13.0 GHz
 13.0 GHz to 19.7 GHz
 19.7 GHz to 22.0 GHz
Opt. 026: 19.7 GHz to 26.5 GHz

Nominal Sensitivity
 -128 dBm
 -126.5 dBm
 -119 dBm
 -114 dBm
 -108 dBm

AMPLITUDE ACCURACY

Band-to-Band Frequency Response
 Frequency response uncertainty for measurements between any two bands. Equivalent to the sum of the two In-Band Frequency Response values plus Band Switching Uncertainty. (Values in parentheses apply to HP 8562B.)

Band-to-Band Frequency Response (dB)

| Band | 0 | 1 | 2 | 3 | 4 |
|------|--------------|--------------|--------------|--------------|--------------|
| 0 | — | 4.2 (3.7) | 5.2 (4.2) | 5.7 (4.7) | 6.0 (6.0) |
| 1 | 4.2 (3.7) | — | 6.5 (5.0) | 7.0 (5.5) | 7.3 (6.8) |
| 2 | 5.2 (4.2) | 6.5 (5.0) | — | 8.0 (6.0) | 8.3 (7.3) |
| 3 | 5.7 (4.7) | 7.0 (5.5) | 8.0 (6.0) | — | 8.8 (7.8) |
| 4 | 6.0 (6.0) | 7.3 (6.8) | 8.3 (7.3) | 8.8 (7.8) | — |

Input Attenuator Repeatability

$< \pm 0.2 \text{ dB}$

Pulse Digitization Uncertainty
 (Pulse response mode,
 PRF > 720/sweep time)
 Standard Deviation

$< 0.2 \text{ dB}$

Table 1-2. HP 8562A/B Characteristics (2 of 3)

| | | | | | |
|--|---|-----------------|-----------------|-------------|-------------|
| <p>NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.</p> | | | | | |
| <p>SWEEP</p> | | | | | |
| <p>Sweep Time Accuracy (span ≥ 2.5 kHz* \times N†)</p> | <p>$< \pm 15\%$</p> | | | | |
| <p>DEMODULATION</p> | | | | | |
| <p>Spectrum Demodulation Modulation Type Audio Output Marker Pause Time</p> | <p>AM and FM Internal speaker and phone jack with volume control 100 ms to 60s</p> | | | | |
| <p>INPUTS AND OUTPUTS</p> | | | | | |
| <p>INPUT 50Ω Connector Type Impedance VSWR (At tuned frequency) LO Emission Level (Average) 10 dB input attenuation IF INPUT Connector Type Impedance Frequency Noise Figure 1 dB Gain Compression Level Full Screen Level (Gain Compression and Full Screen Levels apply with 30 dB conversion loss setting and 0 dBm reference level.) 1ST LO OUTPUT Connector Impedance Frequency Range CAL OUTPUT Connector Impedance</p> | <p>Precision Type N female, front panel <i>Opt. 026: APC 3.5 male</i> 50 ohms $< 1.5:1$ for < 2.9 GHz and ≥ 10 dB input attenuation $< 2.3:1$ for > 2.9 GHz and ≥ 10 dB input attenuation $< 3.0:1$ for 0 dB input attenuation</p> <table style="width: 100%; border: none;"> <tr> <td style="text-align: center;">HP 8562A</td> <td style="text-align: center;">HP 8562B</td> </tr> <tr> <td style="text-align: center;">< -70 dBm</td> <td style="text-align: center;">< -10 dBm</td> </tr> </table> <p>SMA female, front panel 50 ohms 310.7 MHz 7 dB -23 dBm -30 dBm</p> <p>SMA female, front panel 50 ohms 3.0000 GHz to 6.8107 GHz</p> <p>BNC female, front panel 50 ohms</p> | HP 8562A | HP 8562B | < -70 dBm | < -10 dBm |
| HP 8562A | HP 8562B | | | | |
| < -70 dBm | < -10 dBm | | | | |
| <p>* Minimum span is 10 kHz for spectrum analyzers with serial prefix 2721 and below.</p> <p>† N is the harmonic mixing mode. The desired 1st LO harmonic is always higher than the tuned frequency by the 1st IF frequency (3.9107 GHz for the 1 kHz to 2.9 GHz band, and 310.7 MHz for all other bands.)</p> | | | | | |

Table 1-2. HP 8562A/B Characteristics (3 of 3)

NOTE: These are not specifications. Characteristics provide useful, but non-warranted, information about instrument performance.

INPUTS AND OUTPUTS (Continued)

| | | | |
|---|---|---|---|
| <p>10 MHz REF IN/OUT</p> <p>Connector</p> <p>Impedance</p> <p>Output Amplitude</p> <p>Input Amplitude</p> | <p>BNC female, rear panel</p> <p>50 ohms</p> <p>0 dBm</p> <p>-2 to +10 dBm</p> | | |
| <p>VIDEO OUTPUT</p> <p>Connector</p> <p>Impedance (dc coupled)</p> <p>Amplitude (into 50-ohm load)</p> | <p>BNC female, rear panel</p> <p>50 ohms</p> <p>0 to +1 volt full-scale</p> | | |
| <p>LO SWP 0.5 V/GHz OUTPUT</p> <p>Connector</p> <p>Impedance (dc coupled)</p> <p>LO SWP OUTPUT (no load)</p> <p>0.5 V/GHz OUTPUT (no load)</p> | <p>BNC female, rear panel</p> <p>2 kohms</p> <p>0 to +10V</p> <p>0.5V/GHz of tuned frequency</p> | | |
| <p>BLANKING OUTPUT</p> <p>Connector</p> <p>Amplitude</p> <p>During Retrace</p> <p>During Sweep</p> <p>Maximum Input (High TTL State)</p> | <p>BNC female, rear panel</p> <p>Low TTL Level (sink 150 mA max.)</p> <p>High TTL Level (source 0.5 mA max.)</p> <p>+40V</p> | | |
| <p>EXT TRIG INPUT</p> <p>Connector</p> <p>Impedance</p> <p>Trigger Level</p> | <p>BNC female, rear panel</p> <p>10 kohms</p> <p>Rising edge of TTL Level</p> | | |
| <p>PROBE POWER (front panel)</p> <p>Voltage</p> <p>Current</p> | <p>+15 Vdc, -12.6 Vdc</p> <p>150 mA max, each</p> | | |
| <p>EARPHONE</p> <p>Connector</p> <p>Power Output</p> | <p>1/8-inch miniature monophonic jack, rear panel</p> <p>0.25 watts into 4 ohms</p> | | |
| <p>2ND IF OUT (Opt. 001 instruments only)</p> <p>Connector</p> <p>Impedance</p> <p>Frequency</p> | <p>SMA female, rear panel</p> <p>50 ohms</p> <p>310.7 MHz</p> | | |
| <p>Frequency Range</p> <p>1 kHz to 2.9 GHz</p> <p>2.75 GHz to 6.46 GHz</p> <p>5.86 GHz to 6.46 GHz</p> <p>12.4 GHz to 19.7 GHz</p> <p>19.1 GHz to 22.0 GHz</p> <p>(Opt. 026: 19.1 GHz to 26.5 GHz)</p> | <p>3 dB BW</p> <p>> 30 MHz</p> <p>> 20 MHz</p> <p>> 30 MHz</p> <p>> 30 MHz</p> <p>> 30 MHz</p> <p>> 35 MHz</p> | <p>Noise Figure</p> <p>24 dB</p> <p>24 dB</p> <p>33.6 dB</p> <p>39.8 dB</p> <p>44.4 dB</p> | <p>Conversion Gain</p> <p>-5.6 dB</p> <p>-3.6 dB</p> <p>-3.7 dB</p> <p>-9.9 dB</p> <p>-14.8 dB</p> |

3-13. If the Analyzer Doesn't Meet Specifications

3-14. If the analyzer doesn't meet one or more of the specifications, complete any remaining tests and record all test results on a copy of the test record. Then refer to Chapter 4, "Help?", for instructions on how to solve the problem. If an error message is displayed, press the PRESET key and [REALIGN LO & IF]. If the error message persists after the automatic RF, LO, and IF adjustments are completed, refer to Appendix A.

3-15. Calibration Cycle

3-16. To ensure that the HP 8562A/B meets the specifications listed in Table 1-1, Performance Verification should be performed every 12 months.

3-17. HP 85629A Functional Tests

3-18. The HP 85629A Test and Adjustment Module (TAM) can be used to perform several automatic functional tests on the HP 8562A/B Spectrum Analyzer. These tests provide increased confidence in analyzer operation while requiring very little equipment or operator attention. Hard copy results are possible with an HP-IB printer. Because these functional tests have greater measurement uncertainties than their related performance tests, they should not be used as part of a calibration. The greater measurement uncertainties in the functional tests are a result of the limited set of test equipment.

3-19. Table 3-2 lists the Functional Tests, their corresponding Performance Tests, and the types of test equipment required for each test. The recommended test equipment for the Functional Tests is indicated in Table 3-5 with the letter "M" placed in the "Use" column.

Table 3-2. TAM Functional Tests

| Functional Test | Corresponding Performance Test | Equipment Required |
|-------------------------------|--------------------------------|-------------------------|
| Noise Sidebands | 3-33 | None |
| Residual FM | 3-32 | None |
| IF Gain Uncertainty | 3-30 | Source |
| Scale Fidelity | 3-31 | Source |
| Input Attenuator Accuracy | 3-29 | Source |
| Frequency Marker Accuracy | 3-35 | Source |
| Image, Mult, Out-of-Band Resp | 3-34 | Source |
| RES BW Accy & Selectivity | 3-27, 3-28 | Source, 20 dB Pad |
| 2nd Harmonic Distortion | 3-37 | Source, 50 MHz LPF |
| Frequency Span Accuracy | 3-39 | Source |
| Gain Compression | 3-41 | Source |
| T.O.I. Distortion | 3-40 | Source |
| Frequency Response | 3-38 | Source, Power Meter |
| 1ST LO OUTPUT Amplitude | 3-42 | Power Meter |
| Displayed Average Noise Level | 3-26 | 50 Ω Termination |
| Residual Responses | 3-44 | 50 Ω Termination |

3-20. Spectrum Analyzer/TAM Compatibility

3-21. Table 3-3 lists the compatibility rating of each analyzer serial prefix for each TAM firmware revision. A rating of 10 indicates that the analyzer and TAM are fully compatible. If the rating is less than 10, the TAM can still be used, but the results of one or more of the tests will be invalid. Refer to Table 3-4 to determine which tests are valid for a particular TAM firmware revision. Make sure the analyzer's serial prefix matches the serial prefix listed in the table. New tables will be provided for analyzers with serial prefixes not listed on this manual's title page.

Table 3-3. Functional Test Compatibility Matrix

| HP 8562A/B Serial Prefix(es)* | Compatibility Rating† HP 85629A Firmware Revision | | | | | | | | |
|--|--|----|----|----|---|---|---|---|---|
| | A | B | C | D | E | F | G | H | I |
| 2642A to 2750A (A) | 10 | 10 | 10 | 10 | | | | | |
| 2640A to 2750A (B) | 10 | 10 | 10 | 10 | | | | | |
| 2809A (A) | 9 | 9 | 9 | 10 | | | | | |
| 2809A (B) | 9 | 9 | 9 | 10 | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| * (A) identifies serial prefixes for HP 8562A analyzers; (B) identifies serial prefixes for HP 8562B analyzers. † Compatibility is rated on a scale of 0 to 10 (0 = incompatible; 10 = fully compatible). | | | | | | | | | |

3-22. Running the Functional Tests

3-23. Connect the TAM to the rear panel of the HP 8562A/B. The HP 8562A/B should be allowed to warm up for at least five minutes before running any functional test. Perform the following steps to run the tests:

1. Perform a REF LVL CAL (reference level calibration) as described in Chapter 2, paragraph 2-23, before continuing.
2. Press the MODULE key to select the TAM's main menu. If any error message appears, refer to the Error Message section of the HP 85629A Test and Adjustment Module Supplement. Error messages will be displayed either in the lower right-hand corner of the CRT, on the bottom line of the main menu, or in the active function area.

Table 3-4. Functional Test Validity Matrix

HP 8562A/B Serial Prefix: HP 8562A: 2642A to 2750A
 HP 8562B: 2640A to 2750A

| Functional Test | Functional Test Validity* HP 85629A Firmware Revision | | | | | | | | |
|--|--|---|---|---|---|---|---|---|---|
| | A | B | C | D | E | F | G | H | I |
| Noise Sidebands | V | V | V | V | | | | | |
| Residual FM | V | V | V | V | | | | | |
| IF Gain Uncertainty | V | V | V | V | | | | | |
| Scale Fidelity | V | V | V | V | | | | | |
| Input Attenuator Accuracy | V | V | V | V | | | | | |
| Frequency Marker Accuracy | V | V | V | V | | | | | |
| Image, Mult, Out-of-Band Resp | V | V | V | V | | | | | |
| RES BW Accy & Selectivity | V | V | V | V | | | | | |
| 2nd Harmonic Distortion | V | V | V | V | | | | | |
| Frequency Span Accuracy | V | V | V | V | | | | | |
| Gain Compression | V | V | V | V | | | | | |
| T.O.I. Distortion | V | V | V | V | | | | | |
| Frequency Response | V | V | V | V | | | | | |
| 1ST LO OUTPUT Amplitude | V | V | V | V | | | | | |
| Displayed Average Noise Level | V | V | V | V | | | | | |
| Residual Responses | V | V | V | V | | | | | |
| * V = Test results are valid; I = Test results are invalid | | | | | | | | | |

Table 3-4a. Functional Test Validity Matrix

HP 8562A/B Serial Prefix HP 8562A: 2805A & 2809A
 HP 8562B: 2809A

| Functional Test | Functional Test Validity* HP 85629A Firmware Revision | | | | | | | | |
|-------------------------------|--|----|----|---|---|---|---|---|---|
| | A | B | C | D | E | F | G | H | I |
| Noise Sidebands | V | V | V | V | | | | | |
| Residual FM | V | V | V | V | | | | | |
| IF Gain Uncertainty | V | V | V | V | | | | | |
| Scale Fidelity | V | V | V | V | | | | | |
| Input Attenuator Accuracy | V | V | V | V | | | | | |
| Frequency Marker Accuracy | V | V | V | V | | | | | |
| Image, Mult, Out-of-Band Resp | V | V | V | V | | | | | |
| RES BW Accy & Selectivity | I | I | I | V | | | | | |
| 2nd Harmonic Distortion | V | V | V | V | | | | | |
| Frequency Span Accuracy | V | V | V | V | | | | | |
| Gain Compression | V | V | V | V | | | | | |
| T.O.I. Distortion | V | V | V | V | | | | | |
| Frequency Response | V† | V† | V† | V | | | | | |
| 1ST LO OUTPUT Amplitude | V | V | V | V | | | | | |
| Displayed Average Noise Level | V† | V† | V† | V | | | | | |
| Residual Responses | V | V | V | V | | | | | |

* V = Test results are valid; I = Test results are invalid
 † On Option 026 spectrum analyzers, these TAM firmware revisions will test only up to 22 GHz.

3. Press [Config] to enter the configuration menu and verify that the TAM is properly configured and that any test equipment is properly connected to the HP-IB. Refer to the System Configuration Menu section of the TAM Supplement for more information on configuring external test equipment. If a printer is configured and available, Functional Test results will be sent to the

printer instead of the screen. If everything is properly configured, return to the main menu and press [Test].

4. Pressing [All Test] executes all the tests listed in the order shown. If only one test is to be performed, rotate the knob until the arrow points to the desired test and press [Execute].
5. The [Repeat] mode can be used to find suspected intermittent problems. If a printer is configured and connected to HP-IB, [Repeat] will perform the selected test continuously until [Abort] is pressed. The results will be sent to the printer. If a printer is not available, the [Repeat] test mode will pause at the end of each execution of the test to display the results. Testing will continue after pressing [Return]. This sequence will continue until [Abort] is pressed.

3-27. Resolution Bandwidth Switching and IF Alignment Uncertainty

SPECIFICATION

Resolution Bandwidth Switching Uncertainty:
 100 Hz to 2 MHz* RES BW: $< \pm 0.5$ dB (referenced to 300 kHz Res BW)

IF Alignment Uncertainty (additional uncertainty when using narrow resolution bandwidths):
 300 Hz RES BW: $< \pm 0.5$ dB
 100 Hz RES BW: $< \pm 2$ dB

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test utilizes the CAL OUTPUT signal for measuring the switching uncertainty and IF alignment uncertainty between resolution bandwidths. At each resolution bandwidth setting, the displayed amplitude variation of the signal is measured. All measurements are referenced to the 300 kHz bandwidth.

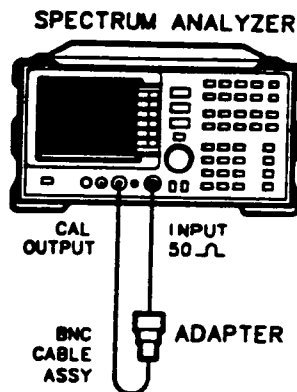


Figure 3-4. Resolution Bandwidth Switching and IF Alignment Uncertainty Test Setup

EQUIPMENT

Adapters

Type N (m) to BNC (f) HP 1250-1476
 Option 026: Type N (f) to APC 3.5 (f) HP 1250-1745

Cables

BNC, 122 cm (48 in.) HP 10503A

* The 2 MHz RES BW setting is specified only for HP 8562A analyzers with serial prefix of 2805A and above, and for HP 8562B analyzers with serial prefix of 2809A and above. On earlier units, the widest specified RES BW setting is 1 MHz.

PROCEDURE

Setting the Reference

1. Connect the HP 8562A/B CAL OUTPUT to the RF INPUT 50Ω as shown in Figure 3-4.
2. Press the PRESET key, the AMPLITUDE key, [MORE], [IF ADJUST], and [FULL IF ADJ]. Wait for the "IF ADJUST STATUS" message to disappear and set the instrument controls as follows:

| | | |
|-------------|-------|---------|
| CENTER FREQ | | 300 MHz |
| SPAN | | 1 MHz |
| REF LVL | | -5 dBm |
| dB/DIV | | 1 dB |
| RES BW | | 300 kHz |
| TRIGGER | | SINGLE |
3. Press the AMPLITUDE key, [MORE], [IF ADJUST], [IF ADJ OFF], the TRIG key, [SINGLE], the PEAK SEARCH key, and [MARKER DELTA].

Measuring Switching Uncertainty

4. Set the frequency SPAN and RES BW to the values listed in the second row of Table 3-7. (SPAN 10 MHz, RES BW 2 MHz for HP 8562A with serial prefix of 2805A and above, and for HP 8562B with serial prefix of 2809A and above; SPAN 5 MHz and RES BW 1 MHz for serial prefixes below 2750A.)
5. Press the AMPLITUDE key, [MORE], [IF ADJUST], and [ADJ CURR IF STATE]. Wait for the "IF ADJUST STATUS" message to disappear and press the TRIG key, [SINGLE], and the PEAK SEARCH key. Record the Δ MKR amplitude in the Actual Δ MKR Reading column of Table 3-7. The Δ MKR reading should be within the limits shown.
6. Repeat step 5 for each set of frequency SPAN and RES BW settings in Table 3-7.

Table 3-7. Resolution Bandwidth Switching and IF Alignment Uncertainty

| HP 8562A/B | | Δ MKR Reading | | | Measurement Uncertainty (dB) |
|------------|---------|---------------|-------------|----------|------------------------------|
| Span | RES BW | Min (dB) | Actual (dB) | Max (dB) | |
| 1 MHz | 300 kHz | 0 | 0 (Ref.) | 0 | 0 |
| 10 MHz | 2 MHz* | -0.5 | _____ | +0.5 | ±0.06 |
| 5 MHz | 1 MHz | -0.5 | _____ | +0.5 | ±0.06 |
| 500 kHz | 100 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 100 kHz | 30 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 50 kHz | 10 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 3 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 1 kHz | -0.5 | _____ | +0.5 | ±0.06 |
| 10 kHz | 300 Hz | -1.0 | _____ | +1.0 | ±0.11 |
| 10 kHz | 100 Hz | -2.5 | _____ | +2.5 | ±0.27 |

* The 2 MHz RES BW setting is specified and tested only for HP 8562A analyzers with serial prefix of 2805A and above, and for HP 8562B analyzers with serial prefix 2809A and above.

3-28. Resolution Bandwidth Accuracy and Selectivity

SPECIFICATION

Accuracy: 100 Hz RES BW: $< \pm 30\%$
 300 Hz to 300 kHz RES BW: $< \pm 10\%$
 1 MHz and 2 MHz RES BW: $< \pm 25\%^*$

Selectivity (60 dB BW/3 dB BW): $< 15:1$

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

The accuracy of each of the analyzer's 3 dB resolution bandwidths is measured. The 60 dB bandwidths are then determined and the results used to calculate the selectivity for each bandwidth (selectivity = 60 dB BW/3 dB BW). A frequency synthesizer, phase-locked to the spectrum analyzer's 10 MHz reference, provides a 40 MHz test signal.

The 2 MHz resolution bandwidth is specified and tested only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

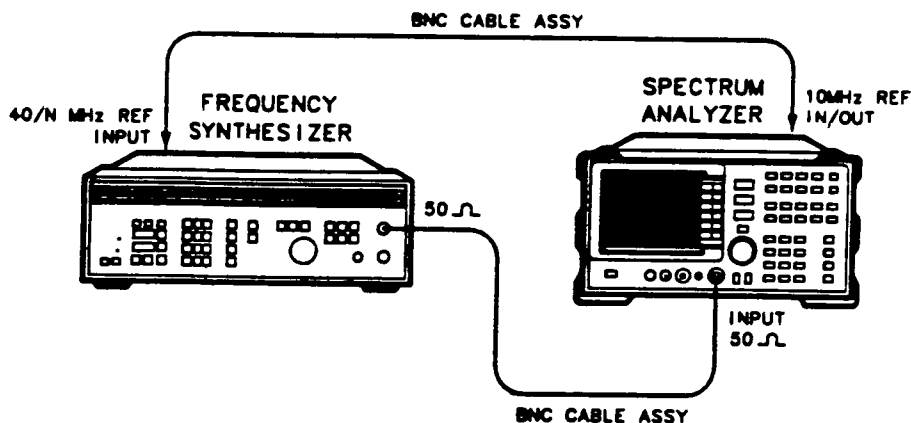


Figure 3-5. Resolution Bandwidth Accuracy and Selectivity Test Setup

* The 2 MHz RES BW setting is specified and tested only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

EQUIPMENT

Frequency Synthesizer HP 3335A

Adapters

BNC (f) to Type N (m) HP 1250-1476
 Option 026: Type N (f) to APC 3.5 (f) HP 1250-1745

Cables

BNC, 122 cm (48 in.) (2 required) HP 10503A

PROCEDURE

Resolution Bandwidth Accuracy

- Connect the equipment as shown in Figure 3-5. The HP 8562A/B provides the frequency reference for the HP 3335A.
- Set the HP 3335A controls as follows:

| | |
|------------|--------|
| FREQUENCY | 40 MHz |
| AMPLITUDE | -3 dBm |
| AMPTD INCR | 1 dB |
- On the HP 8562A/B, press PRESET, AMPLITUDE, [MORE], [IF ADJUST], and [IF ADJ OFF]. Set the controls as follows:

| | |
|-------------|--|
| CENTER FREQ | 40 MHz |
| SPAN | 0 Hz |
| LOG dB/DIV | 1 dB |
| RES BW | 2 MHz |
| | (1 MHz if HP 8562A/B has serial prefix 2750A or below) |
| VIDEO BW | 300 Hz |
| SWEEPTIME | 50 ms |
- Adjust the HP 3335A output amplitude to place the signal two to three divisions (2 dB to 3 dB) below the reference level. Set the HP 3335A AMPTD INCR to 3 dB.
- On the HP 8562A/B, press AMPLITUDE, [MORE], [IF ADJUST], and [ADJ CURR IF STATE]. Wait for the "IF ADJUST STATUS" message to disappear before continuing.
- Adjust the HP 3335A frequency to peak the signal amplitude displayed on the HP 8562A/B.

NOTE

Several minor peaks might be observed when finding the peak signal amplitude for the 2 MHz RES BW setting. Be sure that the peak found is the peak with the highest amplitude.

7. On the HP 3335A, press AMPLITUDE and [↓].
8. On the HP 8562A/B, press Marker ON and [MARKER DELTA].
9. On the HP 3335A, press [↑].
10. Increase the HP 3335A frequency until the HP 8562A/B Δ MKR reads 0 dB ±0.02 dB. In Table 3-8, record the HP 3335A frequency as the Upper 3 dB Frequency for the current RES BW setting.
11. Decrease the HP 3335A frequency until the peak of the signal is found. Decrease the frequency further until the Δ MKR again reads 0 dB ±0.02 dB. In Table 3-8, record the HP 3335A frequency as the Lower 3 dB Frequency for the current RES BW setting.
12. Subtract the Lower 3 dB Frequency from the Upper 3 dB Frequency. Record the result as the Actual 3 dB Bandwidth in Table 3-8, and as the 3 dB Bandwidth in Table 3-9, for the current RES BW setting. The bandwidth should be within the limits shown in Table 3-8.
13. Set the HP 3335A frequency to 40 MHz.
14. Press Marker OFF on the HP 8562A/B.
15. Repeat steps 5 through 14 for the rest of the RES BW settings listed in the first column of Table 3-8. For RES BW settings of 1 kHz and below, change the VIDEO BW to 1 Hz.

Resolution Bandwidth Selectivity

16. Set the HP 8562A/B controls as follows:

| | | |
|------------|-------|---|
| RES BW | | 2 MHz |
| | | <i>(1 MHz if HP 8562A/B has serial prefix 2750A or below)</i> |
| LOG dB/DIV | | 10 dB |
| VIDEO BW | | 300 Hz |

17. Set the HP 3335A amplitude to -3 dBm and AMPTD INCR to 60 dB.
18. On the HP 8562A/B, press AMPLITUDE, [MORE], [IF ADJUST], and [ADJ CURR IF STATE]. Wait for the "IF ADJUST STATUS" message to disappear before continuing.
19. Adjust the HP 3335A frequency for peak signal amplitude on the HP 8562A/B display.

NOTE

Several minor peaks might be observed when finding the peak signal amplitude for the 2 MHz RES BW setting. Be sure that the peak found is the peak with the highest amplitude.

20. On the HP 3335A, press [↓].
21. On the HP 8562A/B, press Marker ON and [MARKER DELTA].

22. On the HP 3335A, press [↑].
23. Increase the HP 3335A frequency until the HP 8562A/B Δ MKR reads $0 \text{ dB} \pm 0.2 \text{ dB}$. In Table 3-9, record the HP 3335A frequency as the Upper 60 dB Frequency for the current RES BW setting.
24. Decrease the HP 3335A frequency until the peak signal amplitude is reached. Decrease the frequency further until the HP 8562A/B Δ MKR again reads $0 \text{ dB} \pm 0.2 \text{ dB}$. In Table 3-9, record the HP 3335A frequency as the Lower 60 dB Frequency for the current RES BW setting.
25. Subtract the Lower 60 dB Frequency from the Upper 60 dB Frequency. Record the result as the 60 dB Bandwidth in Table 3-9 for the current RES BW setting.
26. Divide the 60 dB Bandwidth by the 3 dB Bandwidth and record the result as the Actual Shape Factor in Table 3-9 for the current RES BW setting. The Actual Shape Factor should be less than the limit shown in Table 3-9.
27. Set the HP 3335A frequency to 40 MHz.
28. Press Marker OFF on the HP 8562A/B.
29. Repeat steps 18 through 28 for the rest of the RES BW settings listed in Table 3-9. For RES BW settings of 1 kHz and below, change the VIDEO BW to 1 Hz.

Table 3-8. Resolution Bandwidth Accuracy

| RES BW Setting | HP 3335A Frequency | | 3 dB Bandwidth | | | Measurement Uncertainty |
|----------------|--------------------|------------|----------------|--------|----------|-------------------------|
| | Upper: 1B | Lower 3 dB | Min | Actual | Max | |
| 2 MHz* | _____ | _____ | 1.5 MHz | _____ | 2.5 MHz | + 13.6/-14 kHz |
| 1 MHz | _____ | _____ | 750 kHz | _____ | 1.25 MHz | + 6.8/-7.0 kHz |
| 300 kHz | _____ | _____ | 270 kHz | _____ | 330 kHz | + 2.04/-2.1 kHz |
| 100 kHz | _____ | _____ | 90 kHz | _____ | 110 kHz | + 680/-700 Hz |
| 30 kHz | _____ | _____ | 27 kHz | _____ | 33 kHz | + 204/-210 Hz |
| 10 kHz | _____ | _____ | 9 kHz | _____ | 11 kHz | + 68/-70 Hz |
| 3 kHz | _____ | _____ | 2.7 kHz | _____ | 3.3 kHz | + 20.4/-21 Hz |
| 1 kHz | _____ | _____ | 900 Hz | _____ | 1.1 kHz | + 6.8/-7.0 Hz |
| 300 Hz | _____ | _____ | 270 Hz | _____ | 330 Hz | + 2.04/-2.1 Hz |
| 100 Hz | _____ | _____ | 70 Hz | _____ | 130 Hz | + 0.68/-0.7 Hz |

* The 2 MHz RES BW setting is specified and tested only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

Table 3-9. Resolution Bandwidth Selectivity

| RES BW Setting | HP 3335A Frequency | | 60 dB BW | 3 dB BW | Shape Factor | | Measurement Uncertainty (of 60 dB BW) |
|----------------|--------------------|-------------|----------|---------|--------------|-----|---------------------------------------|
| | Upper 60 dB | Lower 60 dB | | | Actual | Max | |
| 2 MHz* | _____ | _____ | _____ | _____ | _____ | 15 | + 126/-132 kHz |
| 1 MHz | _____ | _____ | _____ | _____ | _____ | 15 | + 63/-66 kHz |
| 300 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 19/-20 kHz |
| 100 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 6.3/-6.6 kHz |
| 30 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 1.9/-2.0 kHz |
| 10 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 630/-660 Hz |
| 3 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 190/-200 Hz |
| 1 kHz | _____ | _____ | _____ | _____ | _____ | 15 | + 63/-66 Hz |
| 300 Hz | _____ | _____ | _____ | _____ | _____ | 15 | + 19/-20 Hz |
| 100 Hz | _____ | _____ | _____ | _____ | _____ | 15 | + 6.3/-6.6 Hz |

* The 2 MHz RES BW setting is specified and tested only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

Table 3-24. Frequency Count Marker Accuracy

| HP 8340A Frequency (GHz) | HP 8562A Frequency (GHz) | Marker Frequency | | | Measurement Uncertainty (Hz) |
|--------------------------------|--------------------------------|------------------|-----------------|--------------|------------------------------------|
| | | Min (GHz) | Actual (GHz) | Max (GHz) | |
| 1.5 | 1.5 | 1.49999394 | _____ | 1.50000606 | ±375 |
| 4.0 | 4.0 | 3.99998394 | _____ | 4.00001606 | ±1000 |
| 9.0 | 9.0 | 8.99996389 | _____ | 9.00003611 | ±2250 |
| 16.0 | 16.0 | 15.99993584 | _____ | 16.00006416 | ±4000 |
| 21.0 | 21.0 | 20.99991579 | _____ | 21.00008421 | ±5250 |

3-36. Pulse Digitization Uncertainty

SPECIFICATION

Pulse digitization uncertainty (PDU) for pulse repetition frequency (PRF) $> 720/\text{Sweeptime}$

LOG: < 1.25 dB for RES BW ≤ 1 MHz
 < 3 dB for 2 MHz RES BW*

LINEAR: $< 4\%$ of reference level for RES BW ≤ 1 MHz
 $< 12\%$ of reference level for 2 MHz RES BW*

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures the ability of the analyzer's analog-to-digital circuitry to respond to pulsed RF signals. The synthesized sweeper is phase-locked to the spectrum analyzer's 10 MHz reference. The only log scale tested is 5 dB/DIV, since this is the worst case. Linear scale is also tested.

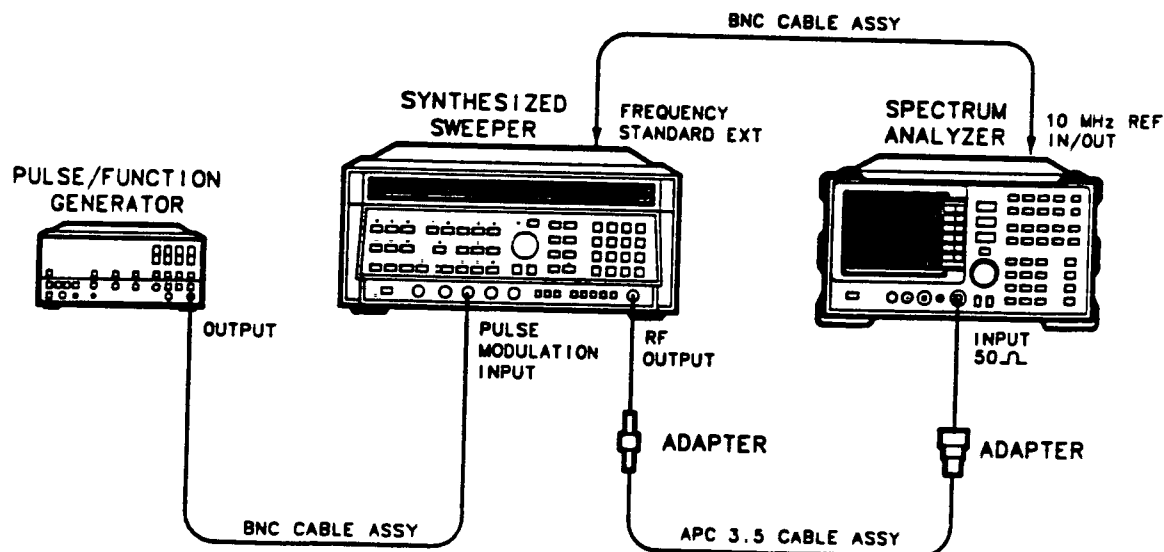


Figure 3-14. Pulse Digitization Uncertainty Test Setup

* Pulse digitization uncertainty is specified in the 2 MHz RES BW setting only for HP 8562A spectrum analyzers with serial prefix of 2805A and above, and for HP 8562B spectrum analyzers with serial prefix of 2809A and above.

EQUIPMENT

Synthesized Sweeper HP 8340A
 Pulse/Function Generator HP 8116A

Adapters

Type N (m) to APC 3.5 (f) (*not necessary for Option 026*) HP 1250-1744
 APC 3.5 (f) to APC 3.5 (f) (*2 required for Option 026*) HP 5061-5311

Cables

BNC, 122 cm (48 in.) (*2 required*) HP 10503A
 APC 3.5, 91 cm (36 in.) HP 8120-4921

PROCEDURE

1. Connect the equipment as shown in figure 3-14.
2. Press INSTR PRESET on the HP 8340A. Set the HP 8340A controls as follows:

CW 2500 MHz
 POWER LEVEL -15 dBm
 MODULATION PULSE
 RF ON
 LEVELING INT
 FREQUENCY STANDARD SWITCH (rear panel) EXT

3. Set the HP 8116A controls as follows:

FUNCTION PULSE
 FREQ 144 kHz
 WID 200 ns
 AMP 5.0V
 OFS 0.0V
 MODE NORM
 CTRL OFF

4. On the HP 8562A/B, press PRESET, TRACE, [MORE], [DETECTOR MODES], and [DETECTOR POS PEAK]. Set the controls as follows:

CENTER FREQ 2500 MHz
 SPAN 0 Hz
 REF LVL -10 dBm
 RES BW 1 MHz
 VIDEO BW 3 MHz
 SWEPTIME 50 ms
 dB/DIV 5 dB

5. On the HP 8116A, use the RANGE switch to set FREQ to 144 kHz.
6. On the HP 8562A/B, press TRIG, [SINGLE], [SINGLE], and PEAK SEARCH. In Table 3-24a, record the Marker Amplitude reading as the MAX level for 144 kHz PRF.

7. Press Marker ON. Move the marker using the knob (RPG) until the marker is at the lowest point on the trace. In Table 3-24a, record the Marker Amplitude reading as the MIN level for 144 kHz PRF.
8. On the HP 8116A, use the RANGE switch to set FREQ to 14.4 kHz.
9. On the HP 8562A/B, press TRIG, [SINGLE], [SINGLE], and PEAK SEARCH. In Table 3-24a, record the Marker Amplitude reading as the MAX level for 14.4 kHz PRF.
10. Press Marker ON. Move the marker using the knob (RPG) until the marker is at the lowest point on the trace. In Table 3-24a, record the Marker Amplitude reading as the MIN level for 14.4 kHz PRF.

(Omit steps 11 and 12 if the spectrum analyzer has serial prefix 2750A or below.)

11. On the HP 8562A/B, press BW and set [RES BW] to 2 MHz.
12. Repeat steps 5 through 10.
13. On the HP 8562A/B, press BW and set [RES BW] to 1 MHz. Press AMPLITUDE and [LINEAR].
14. Repeat steps 5 through 10.

(Omit steps 15 and 16 if the spectrum analyzer has serial prefix 2750A or below.)

15. On the HP 8562A/B, press BW and set [RES BW] to 2 MHz.
16. Repeat steps 5 through 10.
17. For each row of entries in Table 3-24a for the LOG 5 dB/DIV scale, subtract the lowest MIN Marker Amplitude reading from the highest MAX Marker Amplitude reading. Record the result as the PDU (pulse digitization uncertainty). The PDU should be less than the listed specification.
18. For each row of entries in Table 3-24a for the LINEAR scale, calculate the PDU as a percentage of reference level using the equation below. The PDU should be less than the listed specification.

$$\text{PDU} = 100 \times [(\text{highest MAX Marker Amplitude}/\text{lowest MIN Marker Amplitude}) - 1]$$

Table 3-24a. Pulse Digitization Uncertainty

| RES BW | Scale | Marker Amplitude Readings | | | | PDU | Spec |
|--------|--------------|---------------------------|-----------|--------------|-----------|----------|---------|
| | | 144 kHz PRF | | 14.4 kHz PRF | | | |
| | | Max | Min | Max | Min | | |
| 1 MHz | LOG 5 dB/DIV | _____ dBm | _____ dBm | _____ dBm | _____ dBm | _____ dB | 1.25 dB |
| 2 MHz* | LOG 5 dB/DIV | _____ dBm | _____ dBm | _____ dBm | _____ dBm | _____ dB | 3 dB |
| 1 MHz | LINEAR | _____ mV | _____ mV | _____ mV | _____ mV | _____ % | 4% |
| 2 MHz* | LINEAR | _____ mV | _____ mV | _____ mV | _____ mV | _____ % | 12% |

* Pulse digitization uncertainty is only specified in the 2 MHz RES BW setting for HP 8562A analyzers with serial prefix of 2805A and above, and for HP 8562B analyzers with serial prefix 2809A and above.

24. On the HP 8562A/B, press the PEAK SEARCH key, the MKR-> key, and [MARKER->REF LVL]. Wait for the completion of a new sweep and press the following keys: [MARKER DELTA], the FREQUENCY key, and the ↑ key.
25. On the HP 8340A #2, press the RF key on.
26. On the HP 8562A/B, press the PEAK SEARCH key.
27. Adjust the the POWER LEVEL key of the HP 8540A #2 for a Δ MKR reading of 0.0 dB \pm 0.17 dB.
28. On the HP 8562A/B, press the FREQUENCY key and the ↑ key. Wait for the completion of a new sweep and press the PEAK SEARCH key. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Upper Product Suppression. The suppression should be greater than 75 dB.
29. Press the following keys on the HP 8562A/B: the FREQUENCY key, the ↓ key, the ↓ key, and the ↓ key. Wait for the completion of a new sweep and press the PEAK SEARCH key. Record the HP 8562A/B Δ MKR reading in Table 3-33 as the Lower Product Suppression. The suppression should be greater than 75 dB.
30. Record the maximum of the Lower Product Suppression and Upper Product Suppression for the 2.8 GHz entries in Table 3-33.

Third Order Intermodulation Distortion at 2.8 GHz: _____ dBc

31. Record the maximum of the Lower Product Suppression and Upper Product Suppression for the 4.0 GHz entries in Table 3-33.

Third Order Intermodulation Distortion at 4.0 GHz: _____ dBc

Table 3-33. Third Order Intermodulation Distortion

| HP 8340A #1 [CW] (GHz) | HP 8340A #2 [CW] (GHz) | Lower Product | | Upper Product | | Measurement Uncertainty (dB) |
|------------------------------|------------------------------|--------------------|---------------------|--------------------|---------------------|------------------------------------|
| | | Frequency (GHz) | Suppression (dB) | Frequency (GHz) | Suppression (dB) | |
| 2.80000 | 2.80005 | 2.79995 | _____ | 2.80010 | _____ | \pm 2.83 |
| 4.00000 | 4.00005 | 3.99995 | _____ | 4.00010 | _____ | \pm 2.83 |

3-41. Gain Compression

SPECIFICATION

10 MHz to 2.9 GHz: < 1.0 dB for total mixer power level* of -5 dBm†
2.9 GHz to 22 GHz (*Option 026: 2.9 GHz to 26.5 GHz*): < 1.0 dB for total mixer power level* of -3 dBm

RELATED ADJUSTMENT

There is no related adjustment procedure for this performance test.

DESCRIPTION

This test measures gain compression in low band and high band. Two signals, separated by 3 MHz, are used. First the test places a -30 dBm signal at the input of the spectrum analyzer (the analyzer's reference level is also set to -30 dBm). Then a +7 dBm signal is placed on the analyzer, overdriving its input. The decrease in the first signal's amplitude (gain compression) caused by the second signal is the measured gain compression.

Figure 3-21. Gain Compression Test Setup

* Total mixer power level = total input power level - input attenuation

† < 1.0 dB for total mixer power level of -3 dBm for HP 8562A serial prefix 2805A and below, and for HP 8562B serial prefix 2750A and below.

EQUIPMENT

| | |
|---|----------------|
| Synthesized Sweeper (2 required) | HP 8340A |
| Measuring Receiver | HP 8902A |
| Amplifier | HP 11975A |
| Power Sensor | HP 8485A |
| Power Splitter | HP 11667B |
| Adapters | |
| APC 3.5 (f) to APC 3.5 (f) (2 required) | HP 5061-5311 |
| APC 3.5 (m) to Type N (m) | HP 1250-1743 |
| BNC Tee (m) (f) (f) | HP 1250-0781 |
| Cables | |
| BNC, 122 cm (48 in.) (2 required) | HP 10503A |
| SMA, 61 cm (24 in.) | HP 8120-1578 |
| RF Cable | HP 11975-20002 |

PROCEDURE

< 2.9 GHz

1. Zero the HP 8902A and calibrate the HP 8485A power sensor as described in the HP 8902A Operation Manual. Enter the power sensor's 2 GHz calibration factor into the HP 8902A.
2. Connect the equipment as shown in Figure 3-21, with the output of the power splitter connected to the HP 8485A Power Sensor.
3. Press the INSTR PRESET key on both HP 8340A's. Set the controls for the HP 8340A #1 as follows:

CW 2.0 GHz
 POWER LEVEL -24 dBm
 FREQUENCY STANDARD SWITCH (rear panel) EXT

4. Set the controls for the HP 8340A #2 as follows:

CW 2.003 GHz
 POWER LEVEL +8 dBm
 FREQUENCY STANDARD SWITCH (rear panel) EXT

5. On the HP 8562A/B, press the PRESET key. *On HP 8562A analyzers, press the RECALL key, [MORE], and [FACTORY PRESEL PK].* Set the HP 8562A/B controls as follows:

CENTER FREQ 2.0 GHz
 REF LVL -30 dBm
 SPAN 10 MHz
 RES BW 300 kHz
 SCALE 1 dB/Div

6. Adjust the HP 11975A OUTPUT POWER LEVEL for a +5 dBm* reading on the HP 8902A display.

* +7 dBm for HP 8562A serial prefix 2805A and below, and HP 8562B serial prefix 2750A and below.

7. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.
8. Remove the power sensor from the power splitter. Connect the power splitter to the HP 8562A/B RF INPUT using an adapter. Do not use a cable.
9. Adjust the HP 8340A #1 POWER LEVEL key for a signal 1 dB below the HP 8562A/B reference level.
10. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
11. Set the HP 8340A #2 POWER LEVEL key to $+8$ dBm.
12. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the lower amplitude signal and not on the signal that is off the top of the screen. If it is not on the lower amplitude signal, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude. The amplitude should read less than -1.0 dB.

Gain Compression Band 0 (<1.0 dB): _____ dB

>2.9 GHz

13. Set the HP 8562A/B, HP 8340A #1, and HP 8340A #2 to the frequencies indicated in Table 3-34 for Band 1.
14. Enter the HP 8485A calibration factor at the HP 8562A/B center frequency value into the HP 8902A.
15. Disconnect the power splitter from the HP 8562A/B and reconnect it to the HP 8485A Power Sensor.
16. Adjust the HP 11975A OUTPUT POWER LEVEL for a $+7$ dBm reading on the HP 8902A display.
17. Set the HP 8340A #2 POWER LEVEL key to -80 dBm.
18. Reconnect the power splitter to the HP 8562A/B RF INPUT 50Ω .
19. Adjust the HP 8340A #1 POWER LEVEL key to bring the signal 1 dB (one division) below the HP 8562A reference level.
20. On the HP 8562A/B, press the MARKER OFF key and the PEAK SEARCH key.
21. *Omit this step if spectrum analyzer is an HP 8562B.* On the HP 8562A, press the INT key and [PRESEL AUTO PK]. Wait for the PEAKING message to disappear before continuing to the next step.
22. On the HP 8562A/B, press the PEAK SEARCH key and [MARKER DELTA].
23. Set the HP 8340A #2 POWER LEVEL key to $+8$ dBm.
24. On the HP 8562A/B, press the PEAK SEARCH key and [NEXT PEAK]. The active marker should be on the peak of the lower amplitude signal. If it is not, reposition the marker to this peak using the front-panel function knob. Read the Δ MKR amplitude and record this as the Gain Compression in Table 3-34. The gain compression should be less than 1 dB.
25. Repeat steps 14 through 24 until all the entries in Table 3-34 have been completed.

Table 3-34. Gain Compression

| Band | HP 8562A Center Freq (GHz) | HP 8340A #1 [CW] (GHz) | HP 8340A #2 [CW] (GHz) | Gain Compression (dB) | Measurement Uncertainty (dB) |
|------|----------------------------------|------------------------------|------------------------------|-----------------------------|------------------------------------|
| 0 | 2.0 | 2.000 | 2.003 | _____ | ±0.23 |
| 1 | 4.0 | 4.000 | 4.003 | _____ | ±0.23 |
| 2 | 7.0 | 7.000 | 7.003 | _____ | ±0.23 |

3-42. 1ST LO OUTPUT Amplitude

SPECIFICATION

Amplitude (3.0–6.7 GHz): +16.5 dBm ±2.0 dB, 20°C to 30°C

RELATED ADJUSTMENT

First LO Distribution Amplifier Adjustment

DESCRIPTION

The 1ST LO OUTPUT power is measured with a power meter. The analyzer is placed in external mixing mode and harmonic-locked to N = 6. This allows the broadest tuning range of the 1ST LO.

Figure 3-22. 1ST LO OUTPUT Amplitude Test Setup

EQUIPMENT

| | | |
|--------------------|-------|----------|
| Measuring Receiver | | HP 8902A |
| Power Sensor | | HP 8485A |

NOTE

The results of this test are valid only if the ambient temperature is between 20°C and 30°C.

14. Disconnect the SMA cable from the HP 8562A/B IF INPUT and connect the cable, through an adapter, to the power sensor.
15. Read the power displayed on the HP 8902A and note the value below. The displayed power should read $-30 \text{ dBm} \pm 1.5 \text{ dB}$.

IF INPUT Amplitude: _____ dBm

NOTE

The following steps should be performed only if it was necessary to change the conversion loss values found in step 5.

16. Press [CNV LOSS VS FREQ] on the HP 8562A/B.
17. Enter the conversion loss at 18 GHz recorded in Table 3-37.
18. Press the ↑ key on the HP 8562A/B.
19. Repeat steps 17 and 18 for the remaining frequencies listed in Table 3-37.

Table 3-37. IF Input Amplitude Accuracy

| Frequency (GHz) | Conversion Loss (dB) |
|--------------------|-------------------------|
| 18 | _____ |
| 20 | _____ |
| 22 | _____ |
| 24 | _____ |
| 26 | _____ |
| 27 | _____ |

Table 3-38. Performance Test Record (1 of 8)

| Hewlett-Packard Company Model <input type="checkbox"/> HP 8562A <input type="checkbox"/> HP 8562B (Check one) | | Tested by _____ Date _____ | | |
|---|---|-----------------------------------|--------|----------------|
| Serial No. _____ | | | | |
| Para. No. | Test Description | Results | | |
| | | Min | Actual | Max |
| 3-24 | 10 MHz Reference Output Accuracy | | | |
| | 5. 10 MHz Reference Frequency | 299.998800 MHz | _____ | 300.001200 MHz |
| 3-25 | Calibrator Amplitude and Freq. Accuracy | | | |
| | 4. Calibrator Frequency | 299.998800 MHz | _____ | 300.001200 MHz |
| | 5. Calibrator Amplitude | -10.3 dBm | _____ | -9.7 dBm |
| 3-26 | Displayed Average Noise Level | | | |
| | 25. 10 kHz | | _____ | -90 dBm |
| | 100 kHz | | _____ | -100 dBm |
| | 1 MHz to 2.9 GHz | | _____ | -120 dBm |
| | 2.9 GHz to 6.46 GHz | | _____ | -121 dBm |
| | 6.46 GHz to 13.0 GHz | | _____ | -110 dBm |
| | 13.0 GHz to 19.7 GHz | | _____ | -105 dBm |
| | 19.7 GHz to 22.0 GHz | | _____ | -100 dBm |
| | (Option 026: 19.7 GHz to 26.5 GHz) | | _____ | -100 dBm |
| 3-27 | Resolution Bandwidth Switching and IF Alignment Uncertainty | | | |
| | 5. 2 MHz* | -0.5 dB | _____ | +0.5 dB |
| | 1 MHz | -0.5 dB | _____ | +0.5 dB |
| | 100 kHz | -0.5 dB | _____ | +0.5 dB |
| | 30 kHz | -0.5 dB | _____ | +0.5 dB |
| | 10 kHz | -0.5 dB | _____ | +0.5 dB |
| | 3 kHz | -0.5 dB | _____ | +0.5 dB |
| | 1 kHz | -0.5 dB | _____ | +0.5 dB |
| | 300 Hz | -1.0 dB | _____ | +1.0 dB |
| | 100 Hz | -2.5 dB | _____ | +2.5 dB |

* Performance of the 2 MHz RES BW setting is specified only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

Table 3-38. Performance Test Record (2 of 8)

| Para. No. | Test Description | Results | | | |
|-------------------------------------|---|-----------|---------------------------|-----------|----|
| | | Min | Actual | Max | |
| 3-28 | Resolution Bandwidth Accuracy and Selectivity | | | | |
| | 13.2 MHz* | 1.5 MHz | _____ | 2.5 MHz | |
| | 1 MHz | 750 kHz | _____ | 1.25 MHz | |
| | 300 kHz | 270 kHz | _____ | 330 kHz | |
| | 100 kHz | 90 kHz | _____ | 110 kHz | |
| | 30 kHz | 27 kHz | _____ | 33 kHz | |
| | 10 kHz | 9 kHz | _____ | 11 kHz | |
| | 3 kHz | 2.7 kHz | _____ | 3.3 kHz | |
| | 1 kHz | 900 Hz | _____ | 1.1 kHz | |
| | 300 Hz | 270 Hz | _____ | 330 Hz | |
| | 100 Hz | 70 Hz | _____ | 130 Hz | |
| | 3-29 | 28.2 MHz* | | | |
| | | 1 MHz | | _____ | 15 |
| | | 300 kHz | | _____ | 15 |
| | | 100 kHz | | _____ | 15 |
| | | 30 kHz | | _____ | 15 |
| | | 10 kHz | | _____ | 15 |
| | | 3 kHz | | _____ | 15 |
| | | 1 kHz | | _____ | 15 |
| | | 300 Hz | | _____ | 15 |
| | | 100 Hz | | _____ | 15 |
| | | 3-29 | Input Attenuator Accuracy | | |
| | 9. Cumulative Accuracy at 50 MHz | | | | |
| 20 dB ATTEN | + 8.2 dB | | _____ | + 11.8 dB | |
| 30 dB ATTEN | + 18.2 dB | | _____ | + 21.8 dB | |
| 40 dB ATTEN | + 28.2 dB | | _____ | + 31.8 dB | |
| 50 dB ATTEN | + 38.2 dB | | _____ | + 41.8 dB | |
| 60 dB ATTEN | + 48.2 dB | | _____ | + 51.8 dB | |
| 70 dB ATTEN | + 58.2 dB | | _____ | + 61.8 dB | |
| 11. Step-to-step Accuracy at 50 MHz | | | | | |
| 20 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |
| 30 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |
| 40 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |
| 50 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |
| 60 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |
| 70 dB ATTEN | -0.6 dB | | _____ | +0.6 dB | |

* Performance of the 2 MHz RES BW setting is specified only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.

Table 3-38. Performance Test Record (3 of 8)

| Para. No. | Test Description | Results | | |
|-----------|--|-----------|--------|-------------|
| | | Min | Actual | Max |
| 3-30 | IF Gain Uncertainty | | | |
| | 34. Log IF Gain Uncertainty (10 dB steps) | -1.0 dB | | +1.0 dB |
| | 35. Log IF Gain Uncertainty (1 dB steps) | -1.0 dB | | +1.0 dB |
| | 36. Linear IF Gain Uncertainty | -1.0 dB | | +1.0 dB |
| 3-31 | Scale Fidelity | | | |
| | 28. Linear Scale Fidelity | | | |
| | 2 dB from REF LVL | -2.33 dB | | -1.68 dB |
| | 4 dB from REF LVL | -4.42 dB | | -3.60 dB |
| | 6 dB from REF LVL | -6.54 dB | | -5.50 dB |
| | 8 dB from REF LVL | -8.68 dB | | -7.37 dB |
| | 10 dB from REF LVL | -10.87 dB | | -9.21 dB |
| | 12 dB from REF LVL | -13.10 dB | | -11.02 dB |
| | 14 dB from REF LVL | -15.42 dB | | -12.78 dB |
| | 16 dB from REF LVL | -17.82 dB | | -14.49 dB |
| | 18 dB from REF LVL | -20.36 dB | | -16.14 dB |
| | 29. Maximum Cumulative 10 dB Log Scale Fidelity | -1.5 dB | | +1.5 dB |
| | 30. Maximum Incremental 10 dB Log Scale Fidelity | -0.4 dB | | +0.4 dB |
| | 31. Maximum Cumulative 2 dB Log Scale Fidelity | -1.5 dB | | +1.5 dB |
| | 32. Maximum Incremental 2 dB Log Scale Fidelity | -0.4 dB | | +0.4 dB |
| 3-32 | Residual FM | | | |
| | 11. Residual FM | | | 50 Hz |
| 3-33 | Noise Sidebands | | | |
| | 11. -30 kHz Offset | | | -100 dBc/Hz |
| | +30 kHz Offset | | | -100 dBc/Hz |
| 3-34 | Image, Multiple, and Out-of-Band Responses | | | |
| | 25. Maximum Response Amplitude <18 GHz | | | -70 dBc |
| | 26. Maximum Response Amplitude <22 GHz | | | -60 dBc |
| | Opt. 026: <26.5 GHz | | | |

Table 3-38. Performance Test Record (4 of 8)

| Para. No. | Test Description | Results | | |
|-----------|--|-----------------|--------|-----------------|
| | | Min | Actual | Max |
| 3-35 | Frequency Readout Accuracy and Frequency Count Marker Accuracy | | | |
| | 5. 1.5 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 1.499942 GHz | _____ | 1.500058 GHz |
| | 10 MHz SPAN | 1.49948 GHz | _____ | 1.50052 GHz |
| | 20 MHz SPAN | 1.49895 GHz | _____ | 1.50105 GHz |
| | 50 MHz SPAN | 1.49745 GHz | _____ | 1.50255 GHz |
| | 100 MHz SPAN | 1.4948 GHz | _____ | 1.5052 GHz |
| | 1 GHz SPAN | 1.450 GHz | _____ | 1.550 GHz |
| | 4.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 3.999932 GHz | _____ | 4.000068 GHz |
| | 10 MHz SPAN | 3.99947 GHz | _____ | 4.00053 GHz |
| | 20 MHz SPAN | 3.99894 GHz | _____ | 4.00106 GHz |
| | 50 MHz SPAN | 3.99744 GHz | _____ | 4.00256 GHz |
| | 100 MHz SPAN | 3.9948 GHz | _____ | 4.0052 GHz |
| | 1 GHz SPAN | 3.950 GHz | _____ | 4.050 GHz |
| | 9.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 8.999912 GHz | _____ | 9.000088 GHz |
| | 10 MHz SPAN | 8.99945 GHz | _____ | 9.00055 GHz |
| | 20 MHz SPAN | 8.99892 GHz | _____ | 9.00108 GHz |
| | 50 MHz SPAN | 8.99742 GHz | _____ | 9.00258 GHz |
| | 100 MHz SPAN | 8.9948 GHz | _____ | 9.0052 GHz |
| | 1 GHz SPAN | 8.950 GHz | _____ | 9.050 GHz |
| | 16.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 15.99984 GHz | _____ | 16.000116 GHz |
| | 10 MHz SPAN | 15.99942 GHz | _____ | 16.00058 GHz |
| | 20 MHz SPAN | 15.99889 GHz | _____ | 16.00111 GHz |
| | 50 MHz SPAN | 15.99739 GHz | _____ | 16.00261 GHz |
| | 100 MHz SPAN | 15.9948 GHz | _____ | 16.0052 GHz |
| | 1 GHz SPAN | 15.950 GHz | _____ | 16.050 GHz |
| | 22.0 GHz CENTER FREQ | | | |
| | 1 MHz SPAN | 20.999864 GHz | _____ | 21.000136 GHz |
| | 10 MHz SPAN | 20.99940 GHz | _____ | 21.00060 GHz |
| | 20 MHz SPAN | 20.99887 GHz | _____ | 21.00113 GHz |
| | 50 MHz SPAN | 20.99737 GHz | _____ | 21.00263 GHz |
| | 100 MHz SPAN | 20.9948 GHz | _____ | 21.0052 GHz |
| | 1 GHz SPAN | 20.950 GHz | _____ | 21.050 GHz |
| | 8. Frequency Count Marker Accuracy | | | |
| | 1.5 GHz CENTER FREQ | 1.49999394 GHz | _____ | 1.50000606 GHz |
| | 4.0 GHz CENTER FREQ | 3.99998394 GHz | _____ | 4.00001606 GHz |
| | 9.0 GHz CENTER FREQ | 8.99996389 GHz | _____ | 9.00003611 GHz |
| | 16.0 GHz CENTER FREQ | 15.99993584 GHz | _____ | 16.00006416 GHz |
| | 21.0 GHz CENTER FREQ | 20.99991579 GHz | _____ | 21.00008421 GHz |

Table 3-38. Performance Test Record (5 of 8)

| Para. No. | Test Description | Results | | |
|---|---|---------|----------|------------------------------|
| | | Min | Actual | Max |
| 3-36 | Pulse Digitization Uncertainty | | | |
| | 17. LOG, 1 MHz RES BW | | _____ | 1.25 dB |
| | 17. LOG, 2 MHz* RES BW | | _____ | 3.0 dB |
| | 18. Linear, 1 MHz RES BW | | _____ | 4% |
| 3-37 | 18. Linear, 2 MHz* RES BW | | _____ | 12% |
| | Second Harmonic Distortion | | | |
| | 6. < 2.9 GHz | | _____ | -72 dBc |
| 3-38 | 31. > 2.9 GHz | | _____ | -100 dBc (HP 8562B: -60 dBc) |
| | Frequency Response | | | |
| | Band 0 | | | |
| | 51(c) Maximum Positive Response | | _____ | +5.1 dB |
| | 51(f) Maximum Negative Response | -5.1 dB | _____ | |
| | 51(h) Peak-to-Peak Response | | _____ | +2.4 dB |
| | Band 1 | | | |
| | 52(a) Maximum Positive Response | | _____ | +5.1 dB |
| | 52(b) Maximum Negative Response | -5.1 dB | _____ | |
| | 52(c) Peak-to-Peak Response (HP 8562B: | | _____ | +5.0 dB |
| | | | _____ | +4.0 dB) |
| | Band 2 | | | |
| | 53(a) Maximum Positive Response | | _____ | +5.1 dB |
| | 53(b) Maximum Negative Response | -5.1 dB | _____ | |
| | 53(c) Peak-to-Peak Response (HP 8562B: | | _____ | +7.0 dB |
| | | | _____ | +5.0 dB) |
| | Band 3 | | | |
| 54(a) Maximum Positive Response | | _____ | +5.1 dB | |
| 54(b) Maximum Negative Response | -5.1 dB | _____ | | |
| 54(c) Peak-to-Peak Response (HP 8562B: | | _____ | +8.0 dB | |
| | | _____ | +6.0 dB) | |
| Band 4 | | | | |
| 55(a) Maximum Positive Response | | _____ | +5.1 dB | |
| 55(b) Maximum Negative Response | -5.1 dB | _____ | | |
| 55(c) Peak-to-Peak Response | | _____ | +8.6 dB | |

* Performance of the 2 MHz RES BW setting is specified only for HP 8562A spectrum analyzers with serial prefix 2805A and above, and for HP 8562B spectrum analyzers with serial prefix 2809A and above.