



Agilent N5507A Microwave Downconverter

Hardware Reference
May 2014

Notices

© Agilent Technologies, Inc. 2004-2014

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

N5507-90001

Edition

May 2014

Printed in USA

Agilent Technologies, Inc.
1400 Fountaingrove Pkwy
Santa Rosa, CA 95403

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or sub-contract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent

agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Contents

1 General Information

Overview	8
Figure 1. N5507A microwave downconverter	8
Front-Panel Interfaces	9
Figure 2. N5507A front panel	9
ACT (STATUS)	9
AM NOISE (OUTPUT)	9
ERR (STATUS)	10
IF (OUTPUT)	10
LSN (GPIB)	10
POWER	10
RF ANALYZER (OUTPUT)	11
RMT (GPIB)	11
SIGNAL (INPUT)	11
SRQ (GPIB)	12
TLK (GPIB)	12
mW LO (OUTPUT)	12
mW LO (OUTPUT)	13
VOLTAGE CONTROL (INPUT)	13
Rear-Panel Interfaces	14
Figure 3. N5507A rear panel	14
10 MHz IN	14
10 MHz OVEN OUT	15
100 MHz OUT: -2 dBm	15
100 MHz OUT: +8 dBm	15
600 MHz OUT: 0 dBm	16
600 MHz OUT: +20 dBm	16
Buffered 10 MHz Out	16
GPIB	16
IF LEVEL	16
Power Connector (~ LINE)	17
MULTIPLEXER: OUT	17
SPECTRUM ANALYZER: IN	17
TUNE SPAN OUT	17

2 Technical Data

Specifications	20
Table 1. Environmental and mechanical specifications	20
Table 2. RF specifications	20
Spectral Purity	21
Configuration 1: all oscillators locked	21
Table 3. Configuration 1: all oscillators locked	21
Configuration 2: 100 and 600 MHz oscillators locked	22
Table 4. Configuration 2: 100 and 600 MHz oscillators locked	22
Configuration 3: 600 MHz free-running oscillator	23
Table 5. Configuration 3: 600 MHz free-running oscillator	23
RF input supplemental characteristics	24
Table 6. RF input supplemental characteristics	24
IF Output	25
Table 7. IF output specifications	25
Mixing spurious signals	25
Table 8. Mixing spurious	25
IF output supplemental characteristics	26
Table 9. IF output supplemental characteristics	26
Local Oscillator	27
Table 10. Local oscillator specifications	27
Table 11. Local oscillator supplemental characteristics	27
AM Noise Detection	28
Table 12. AM noise detection specifications	28
Table 13. AM detector noise floor specifications (+15 dBm)	28
Power Requirements	29
Table 14. N5507A power supply requirements	29
Power line module	29
Fuse	29

3 Microwave Source

General Specifications	32
Table 15. Environmental and mechanical specifications	32
RF Output	33
Table 16. RF output specifications	33
Spectral Purity	33
Configuration 1: all oscillators locked	34
Table 17. Source configuration 1: all oscillators locked	34
Configuration 2: 100 and 600 MHz oscillators locked	35

Table 18. Source configuration 2: 100 and 600 MHz oscillators locked	35
Configuration 3: 600 MHz free-running oscillator	36
Table 19. Source configuration 3: 600 MHz free-running oscillator	36
AM Noise	37
Table 20. AM detector noise floor specifications (+10 dBm)	37
Table 21. AM noise supplemental characteristics	37
Maximum output power	38
Figure 4. AM noise maximum output power	38
Output supplemental characteristics	38
Figure 5. 10 MHz output typical performance	38
Figure 6. 100 MHz output typical performance	39
Figure 7. 600 MHz output typical performance	39

4 Preventive Maintenance

Using, Inspecting, and Cleaning RF Connectors	42
Repeatability	42
RF cable and connector care	42
Proper connector torque	43
Table 22. Proper connector torque	43
Connector wear and damage	43
SMA connector precautions	44
Cleaning procedure	44
Table 23. Cleaning Supplies Available from Agilent	45
General Procedures and Techniques	46
Figure 8. GPIB, 3.5 mm, Type-N, power sensor, and BNC connectors	46
Connector removal	47
Instrument Removal	49
Half-Rack-Width instrument	49
Figure 9. Instrument lock links, front and rear	50
Benchtop instrument	50
Instrument Installation	51
Half-Rack-Width instrument	51
Benchtop instrument	52



1 General Information

Overview 8
Front-Panel Interfaces 9
Rear-Panel Interfaces 14

Overview

The Agilent N5507A microwave downconverter is part of the Agilent E5505A Phase Noise Measurement System. It is a half-rack-width System II unit. The N5507A downconverter translates microwave signals to RF frequencies with minimal phase and AM noise contribution. State-of-the-art phase noise performance gives the user the capability to lower the microwave noise floor of the phase noise measurement system.

The N5507A accepts signals between 5 MHz and 26.5 GHz at levels from -30 dBm to +30 dBm. Signals above 1.5 GHz are mixed with an internal low-noise oscillator (LO), which tunes by 600 MHz steps, resulting in an intermediate frequency (IF) between 300 and 900 MHz. The input signal goes from the SIGNAL connector to a 0 to 35 dB step attenuator (5 dB steps) before being mixed with the LO. An adjustable IF amplifier follows the mixer. The gain range of the IF amplifier is -10 to 45 dB in 5 dB steps. Input signals below 1.5 GHz, go through the input attenuator and to the IF amplifier, bypassing the mixer.


The N5507A can also serve as a source in the E5505A system. It includes the functionality of the Agilent N5508A microwave source. As a source, the unit can be tuned to a specific frequency and power. (When the unit serves as a downconverter, the internal source hardware functions as an LO.) [Chapter 3](#) contains specifications for the N5507A as a source. For instructions on using it as a source, refer to the *E5505A Phase Noise Measurement System User's Guide*.



Figure 1 N5507A microwave downconverter

Front-Panel Interfaces

This section describes the function of the front-panel interfaces on the N5507A downconverter. [Figure 2](#) shows the front panel. The interface descriptions appear in alphabetical order.

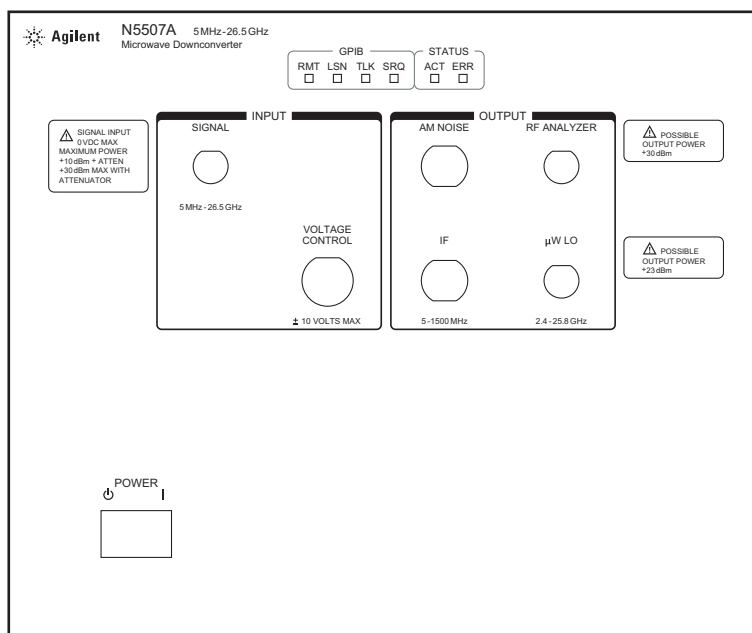

n5507a_front_pnl
27 Apr 04 rev 1

Figure 2 N5507A front panel

NOTE

Some interfaces on the front and rear panels are not used for phase noise measurement, as their descriptions indicate. Their primary function is for factory testing and troubleshooting.

ACT (STATUS)

This LED is not used for phase noise measurement.

AM NOISE (OUTPUT)

The signal at this connector is the output of the downconverter's RF AM detector or the IF AM detector. The downconverter has an AM noise mode that routes the input signal to an input attenuator and then to an RF AM detector. The detected output is routed to the AM NOISE connector.

Characteristics (RF AM detector only)

- Output impedance: $\sim 500\ \Omega$, but designed to drive a $50\ \Omega$ load
- Output bandwidth: 1 Hz to 40 MHz into a $50\ \Omega$ load

ERR (STATUS)

The error message LED illuminates when a communication error occurs and indicates that an error message is available.

IF (OUTPUT)

The signal at this connector is the downconverter's output.

Limits

- Nominal output level: 0 to +5 dBm (input signal ≥ -30 dBm)
- Maximum output level: +15 dBm
- Frequency (RF input 5 to 1500 MHz): 5 to 1500 MHz
- Frequency (RF input 5 to 26.5 GHz): 300 to 900 MHz

NOTE

The IF amplifiers frequency response starts rolling off above 1200 MHz. Avoid using IF frequency between 1200 and 1500 MHz.

Characteristics

- Output impedance: $50\ \Omega$

LSN (GPIB)

The listen LED illuminates when the system addresses the instrument to listen.

POWER

This switch puts the instrument in active operation or standby mode. It is a standby switch and not a LINE switch. The detachable power cord is the instrument's disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument or system.

RF ANALYZER (OUTPUT)

The signal at this connector is the output of the tunable source.

Limits

- Frequency: 2.4 to 26.5 GHz
- Level (2.4 to 6.6 GHz): 0 to +16 dBm
- Level (>6.6 GHz to 2.58 GHz): 0 to +10 dBm
- Level (>25.8 GHz to 26.5 GHz): 0 to +7 dBm

Characteristics

- Output impedance: 50 Ω

Operating considerations

- The level setting resolution is 0.1 dB, but the actual level change for a 0.1 dB change in the entered level can be as much as 0.2 dB.
- You can vary the unit's RF output by approximately +3 dB to -10 dB by varying the signal generator's carrier level.

RMT (GPIB)

The remote indicator LED illuminates when the unit is enabled for GPIB control.

SIGNAL (INPUT)

This connector accepts the input signal for the downconverter.

Limits

- Frequency: 5 MHz to 26.5 GHz
- Maximum signal level: +30 dBm

Characteristics

- Input impedance: 50 Ω
- Typical return loss: 10 dB
- Mixer compression point: -10 dBm

Operating considerations

Optimum mixer input level depends on the application. The level is set by adjusting the input signal level and setting the internal input attenuators. For making noise measurements, use the highest level above the noise floor. For applications such as AM measurement, where distortion is important, the signal should be as far below the mixer compression point as possible.

SRQ (GPIB)

The service request LED illuminates when the instrument requests service.

TLK (GPIB)

The talk indicator LED illuminates when the system addresses the instrument to talk.

μ W LO (OUTPUT)

N5507A as downconverter An IF signal from 5 MHz to 1.2 GHz is available at this connector. The μ W LO output is connected to an external mixer's LO input. One of the harmonics generated by the mixer combines with the input signal to produce the IF signal output. The signal can drive the comb generator of an external mmWave harmonic mixer.

Limits

- Frequency range: 2.4 to 6.8 GHz, in 600 MHz steps
- Output power (2.4 to 6.6 GHz): 0 to +16 dBm
- Output power (7.2 to 25.8 GHz): 0 to +10 dBm

Characteristics

- Output impedance: 50 Ω

mW LO (OUTPUT)

N5507A as source The signal at this connector is the source's output.

Limits

Frequency range: 2.4 to 25.8 GHz, in 600 MHz steps

Output power (2.4 to 6.6 GHz): 0 to +16 dBm

Output power (7.2 to 25.8 GHz): 0 to +10 dBm

Characteristics

Output impedance: 50 Ω

VOLTAGE CONTROL (INPUT)

This connector accepts an external tuning voltage from the phase noise test set for the 10, 100, or 600 MHz oscillators.

Limits


- Maximum voltage: ± 10 V
- Maximum frequency shift (10 MHz): ± 0.25 ppm
- Maximum frequency shift (100 MHz): ± 5 ppm
- Maximum frequency shift (600 MHz): ± 100 ppm

Characteristics

- Input impedance: 100 k Ω

Rear-Panel Interfaces

This section describes the function of the rear-panel connectors in alphabetical order. Figure 3 shows the rear panel.

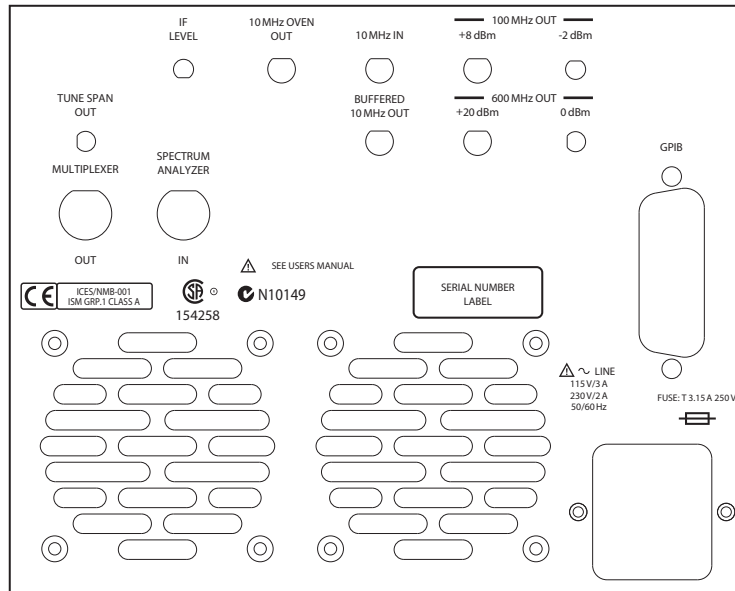

n5507a_rear_pnl
27 Apr 04 rev 1

Figure 3 N5507A rear panel

10 MHz IN

This connector accepts a 10 MHz reference signal for the unit's phase lock loops. It is normally jumpered to the 10 MHz OVEN OUT connector.

Limits and characteristics

- Level range: +7 to +13 dBm
- Input impedance: 50 Ω

Operating considerations

Noise and other impurities on a signal applied to this input will show up on the output. The amount of noise and impurities passed through depends on the tuning sensitivity.

10 MHz OVEN OUT

The signal at this connector is the output of the 10 MHz ovenized crystal reference oscillator. It is normally jumpered to the 10 MHz IN connector.

Characteristics

- Typical output power: +13 dBm
- Output impedance: 50 Ω

Operating considerations

External tuning: Tune this signal by applying a voltage to the VOLTAGE CONTROL connector.

100 MHz OUT: -2 dBm

The signal at this connector is an output of the 100 MHz reference oscillator.

Characteristics

- Output impedance: 50 Ω
- Typical output power: -2 dBm

Operating considerations

External tuning: Tune this signal by applying a voltage to the VOLTAGE CONTROL connector.

100 MHz OUT: +8 dBm

The signal at this connector is an output of the 100 MHz oscillator.

Characteristics

- Output impedance: 50 Ω
- Typical output power: +8 dBm

Operating considerations

External tuning: Tune this signal by applying a voltage to the VOLTAGE CONTROL connector.

600 MHz OUT: 0 dBm

The signal at this connector is an output of the 600 MHz Output oscillator.

Characteristics

- Output impedance: 50 Ω
- Typical output power: 0 dBm

Operating considerations

External tuning: Tune this frequency by applying a voltage to the VOLTAGE CONTROL connector.

600 MHz OUT: +20 dBm

The signal at this connector is an output of the 600 MHz oscillator.

Characteristics

- Output impedance: 50 Ω
- Typical output power: +20 dBm

Operating considerations

External tuning: Tune this signal by applying a voltage to the VOLTAGE CONTROL connector.

Buffered 10 MHz Out

The signal at this connector is the signal at the rear-panel 10 MHz IN connector after it has been buffered by an amplifier.

Characteristics

- Output impedance: 50 Ω
- Typical output power: +7 dBm

GPIB

GPIB communication between the downconverter and the system occurs through this connection.

IF LEVEL

This output connector is not used for phase noise measurement.

Power Connector (~ LINE)

This is the connection for the AC power cord. The detachable power cord is the instrument's disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument or system. For information on power requirements, see "Specifications" on page 20.

MULTIPLEXER: OUT

This connector is not used for phase noise measurement.

SPECTRUM ANALYZER: IN

This connector is used to route the downconverter's IF signal to an RF spectrum analyzer.

TUNE SPAN OUT

This connector is not used for phase noise measurement.

1 General Information



2 Technical Data

Specifications	20
Configuration 1: all oscillators locked	21
IF Output	25
Local Oscillator	27
AM Noise Detection	28
Power Requirements	29



Specifications

This section contains environmental, mechanical, and RF specifications and characteristics for the N5507A downconverter. It also includes specifications for LO and AM noise detection, and power requirements for the unit.

Specifications describe the instrument's warranted performance and apply after the warm-up period. These specifications are valid over the instrument's operating/environmental range unless otherwise noted.

Supplemental Characteristics provide additional information that is useful for operating the instrument by giving typical (expected), but *not warranted*, performance parameters.

Table 1 Environmental and mechanical specifications

Altitude	Up to 2,000 meters (6,500 ft)
Operating temperature range	+0 °C to +45 °C (32 °F to 113°F)
Warm-up time	20 minutes
Maximum relative humidity	80% for temperatures up to 31 °C, decreasing linearly to 50% relative humidity at 40 °C.
Height	177.2 mm (7 in)
Width	212.5 mm (8.4 in)
Depth	574.3 mm (22.6 in)
Weight	~ 34 lbs (15.5 kg)

Table 2 RF specifications

Frequency Range:	
• Downconversion to IF from 300 and 900 MHz	1.5 to 26.5 GHz
• AM detection and input attenuator	5 MHz to 26.5 GHz
• IF amplification	5 MHz to 1.5 GHz
Input Power	+30 dBm max –30 dBm min (phase noise floor degrades if <0 dBm)
Mixer Linearity	±0.4 dB mixer input –5 dBm LO power control in linear mode
Input attenuator	0 to 35 dB (5 dB steps)
Spectral Purity	See “Spectral Purity” on page 21.

Spectral Purity

Spectral purity specifications include the phase noise of the downconverter’s LO and IF sections (functional blocks).

The internal reference oscillators of the N5507A can be locked together in three configurations, each with different phase noise performance and tuning bandwidths. [Table 3](#) on page 21 through [Table 5](#) on page 23 provide the specifications for each configuration. These specifications apply to input signals ≥ 0 dBm.


NOTE

AM noise specifications at any offset can be determined by drawing a line between specification points given on a dB-versus-log frequency plot.

Configuration 1: all oscillators locked

Best phase noise <100 Hz frequency offsets, narrow tuning sensitivity (LO and IF noise only). Refer to [Table 3](#).

Table 3 Configuration 1: all oscillators locked




Input Frequency		Offset From Carrier (Hz)									Spurious (dBc)	
		1	10	100	1k	10k	100k	1M	10M	40M	10 to 100	$\geq 1k$
1.5 to 3.0 GHz	Typ.	-50	-80	-100	-124	-135	-145	-145	-145	-145	-60	-80
	Spec.	-45	-75	-95	-120	-131	-140	-140	-140	-140	-50	-65
3.0 to 4.2 GHz	Typ.	-47	-77	-97	-121	-132	-146	-147	-147	-147	-54	-80
	Spec.	-42	-72	-92	-117	-128	-141	-142	-142	-142	-44	-70
4.2 to 6.0 GHz	Typ.	-44	-74	-94	-118	-130	-144	-147	-147	-147	-54	-80
	Spec.	-39	-69	-89	-114	-126	-139	-142	-142	-142	-44	-70
6.0 to 7.8 GHz	Typ.	-42	-72	-92	-116	-128	-143	-147	-147	-147	-54	-80
	Spec.	-37	-67	-87	-112	-124	-138	-142	-142	-142	-44	-70
7.8 to 10.2 GHz	Typ.	-40	-70	-90	-114	-126	-141	-145	-145	-145	-50	-80
	Spec.	-35	-65	-85	-110	-122	-136	-140	-140	-140	-40	-70
10.2 to 12.6 GHz	Typ.	-38	-68	-88	-112	-124	-140	-143	-143	-143	-50	-80
	Spec.	-33	-63	-83	-108	-120	-135	-138	-138	-138	-40	-70
12.6 to 18.0 GHz	Typ.	-35	-65	-85	-109	-121	-137	-140	-140	-140	-47	-70
	Spec.	-30	-60	-80	-105	-117	-132	-135	-135	-135	-37	-60
18.0 to 26.5 GHz	Typ.	-32	-62	-82	-106	-118	-130	-130	-130	-130	-44	-65
	Spec.	-27	-57	-77	-102	-114	-125	-125	-125	-125	-34	-55

Configuration 2: 100 and 600 MHz oscillators locked

Better phase noise <10 kHz frequency offsets, moderate tuning sensitivity (LO and IF noise only). Refer to [Table 4](#).

Table 4 Configuration 2: 100 and 600 MHz oscillators locked

Input Frequency		Offset From Carrier (Hz)									Spurious (dBc)	
		1 ¹	10 ²	100	1k	10k	100k	1M	10M	40M	100	≥ 1k
1.5 to 3.0 GHz	Typ.	+2	-48	-98	-124	-135	-145	-145	-145	-145	-60	-80
	Spec.	+7	-43	-93	-120	-131	-140	-140	-140	-140	-50	-65
3.0 to 4.2 GHz	Typ.	+5	-45	-95	-121	-132	-146	-147	-147	-147	-54	-80
	Spec.	+10	-40	-90	-117	-128	-141	-142	-142	-142	-44	-70
4.2 to 6.0 GHz	Typ.	+8	-42	-92	-118	-130	-144	-147	-147	-147	-54	-80
	Spec.	+13	-37	-87	-114	-126	-139	-142	-142	-142	-44	-70
6.0 to 7.8 GHz	Typ.	+10	-40	-90	-116	-128	-143	-147	-147	-147	-54	-80
	Spec.	+15	-35	-85	-112	-124	-138	-142	-142	-142	-44	-70
7.8 to 10.2 GHz	Typ.	+12	-38	-88	-114	-126	-141	-145	-145	-145	-50	-80
	Spec.	+17	-33	-83	-110	-122	-136	-140	-140	-140	-40	-70
10.2 to 12.6 GHz	Typ.	+14	-36	-86	-112	-124	-140	-143	-143	-143	-50	-80
	Spec.	+19	-31	-81	-108	-120	-135	-138	-138	-138	-40	-70
12.6 to 18.0 GHz	Typ.	+17	-33	-83	-109	-121	-137	-140	-140	-140	-47	-70
	Spec.	+22	-28	-78	-105	-117	-132	-135	-135	-135	-37	-60
18.0 to 26.5 GHz	Typ.	+20	-30	-80	-106	-118	-130	-130	-130	-130	-44	-65
	Spec.	+25	-25	-75	-102	-114	-125	-125	-125	-125	-34	-55

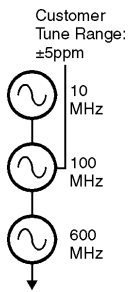

1 All noise levels above -30 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.


2 All noise levels above -40 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

Configuration 3: 600 MHz free-running oscillator

Good phase noise <10 kHz frequency offsets, wide tuning sensitivity (LO and IF noise only). Refer to [Table 5](#).

Table 5 Configuration 3: 600 MHz free-running oscillator

Input Frequency		Offset From Carrier (Hz)									Spurious (dBc)		
		1 ¹	10 ²	100	1k	10k	100k	1M	10M	40M	100	1k	≥10k
1.5 to 3.0 GHz	Nom.	+15	-35	-75	-108	-134	-145	-145	-145	-145	-40	-75	-80
	Spec.										-30	-65	-70
3.0 to 4.2 GHz	Nom.	+18	-32	-72	-102	-133	-146	-147	-147	-147	-34	-74	-80
	Spec.										-24	-64	-70
4.2 to 6.0 GHz	Nom.	+21	-29	-69	-101	-130	-144	-147	-147	-147	-34	-74	-80
	Spec.										-24	-64	-70
6.0 to 7.8 GHz	Nom.	+23	-27	-67	-99	-128	-143	-147	-147	-147	-34	-74	-80
	Spec.										-24	-64	-70
7.8 to 10.2 GHz	Nom.	+25	-25	-65	-96	-126	-141	-145	-145	-145	-30	-70	-80
	Spec.										-20	-60	-70
10.2 to 12.6 GHz	Nom.	+27	-23	-63	-95	-124	-140	-143	-143	-143	-30	-70	-80
	Spec.										-20	-60	-70
12.6 to 18.0 GHz	Nom.	+30	-20	-60	-91	-122	-137	-140	-140	-140	-27	-67	-70
	Spec.										-17	-57	-60
18.0 to 26.5 GHz	Nom.	+33	-17	-57	-88	-117	-130	-130	-130	-130	-24	-64	-70
	Spec.										-14	-54	-60

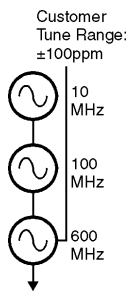

1 All noise levels above -30 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

2 All noise levels above -40 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

RF input supplemental characteristics

Table 6 RF input supplemental characteristics

Input Power	≤30 dBm with IF power output reduction
Input Impedance	50 Ω
SWR	≥5 dB input attenuation: 2:1
Noise Figure	20 dB
Spectral Purity	For input signals <0 dBm, noise at offsets ≥1 kHz may increase by 1 dB for every 1 dB of input power reduction.
Conversion Loss	<15 dB
Mixer Linearity	±0.1 dB for –10 dBm input level ±0.4 dB for –5 dBm input level LO power control in low-noise mode

IF Output

Table 7 IF output specifications

Frequency Range	5 MHz to 1200 MHz
Mixing Spurious (mixer input level -5dBm):	
< 6 GHz	±50 dBc except for those listed in Table 8
> 6 GHz	≤70 dBc

Mixing spurious signals

NOTE

The N5507A has low susceptibility to RFI and mechanical vibration. However, care must be exercised in making measurements in high RFI or mechanical vibration environments as spurious signals may be induced in the unit.

Table 8 Mixing spurious

Carrier frequency range (GHz) in Which a Mixing Spur Occurs ≤40 MHz from Carrier	Typical Spurious Level (dBc)
1.586 - 1.614 (levels ≤10 dBm)	-20
1.790 - 1.810, 1.912 - 1.928 2.392 - 2.408, 2.872 - 2.888 2.990 - 3.000	-30
1.708 - 1.720, 1.993 - 2.007 2.240 - 2.260, 2.493 - 2.507 2.737 - 2.749, 3.592 - 3.600	-40
2.051 - 2.063, 2.095 - 2.100 2.565 - 2.578, 2.793 - 2.807 3.000 - 3.007, 3.080 - 3.092 3.493 - 3.507, 4.108 - 4.120 4.193 - 4.200	-50

IF output supplemental characteristics

Table 9 IF output supplemental characteristics

IF Frequency Range	5 MHz to 1500 MHz
IF Gain Range	0 to 45 dB in 5 dB steps
Absolute Output Power (input signal ≥ 30 dBm)	0 to +5 dBm
LO Feedthrough (LO = 2.4 GHz, input signal power = 0 dBm)	≤ 70 dBc
Carrier Feedthrough (input power = 0 dBm)	<ul style="list-style-type: none"> • 1.5 GHz ≤ 20 dBc • 2.0 GHz ≤ 50 dBc

Local Oscillator

Table 10 contains specifications for the local oscillator and Table 11 provides supplemental characteristics.

Table 10 Local oscillator specifications

Frequency Range	2.4 GHz to 25.8 GHz
Frequency Resolution	600 MHz
Spectral Purity	See Table 3 on page 21 through Table 5 on page 23.
AM Noise	See Table 13 on page 28s.

Table 11 Local oscillator supplemental characteristics

Frequency Switching Speed	3 seconds
Reference Tuning	Voltage control of the internal reference oscillators is available through a port on the front panel.
Tuning Range (sensitivity)	Configuration 1 • ± 0.25 ppm (0.05 ppm/volt) Configuration 2 • ± 5 ppm (1 ppm/volt) Configuration 3 • ± 100 ppm (20 ppm/volt)
Tuning Port Voltage Range	± 5 volts (overrange ± 10 volts)
Tuning Port Input Impedance	• 27.5 kW (0.05 ppm/volt) • 100 kW (1 ppm/volt and 20 ppm/volt)

AM Noise Detection

Table 12 contains AM noise detection specifications and Table 13 provides detector noise floor specifications.

Table 12 AM noise detection specifications

Input Power	0 dBm to +30 dBm
Offset Frequency Range	1 Hz to 40 MHz

Table 13 AM detector noise floor specifications (+15 dBm)

		Offset From Carrier (Hz)								Spurious (dBc)		
		1	10	100	1k	10k	100k	1M	10M	40M	10	1k to 40M
dBc/Hz	Typ.	-113	-123	-133	-143	-150	-155	-155	-155	-155	-60	-80
	Spec.	-108	-118	-128	-138	-145	-150	-150	-150	-150	-50	-70

Power Requirements

This section contains the power requirements and characteristics for the N5507A downconverter.

Table 14 N5507A power supply requirements

Nominal Voltage	115	230
Nominal Frequency	60 Hz	50 Hz
Power	3 A, max	2 A, max

Power line module

The power module in the N5507A unit has the following characteristics:


- 200 W
- 85 to 264 VAC continuous-range operation
- 47 to 63 Hz
- Internal fuse: 5 A, 250 V

Fuse

The instrument's AC line cable has a replaceable fuse with the following characteristics:

- 3.15 A, 250 V, time delayed
- Agilent part number: 2110-1124

2 Technical Data

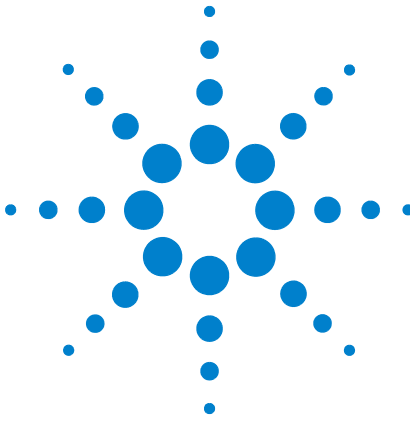

3 Microwave Source

General Specifications 32

RF Output 33

AM Noise 37



General Specifications

The N5507A downconverter also can function as a microwave source in the N5505A phase noise measurement system. For instructions on programming the unit to function as a source, refer to the *N5505A Phase Noise Measurement System User's Guide*.

This section contains environmental, mechanical, RF, and IF specifications and supplemental characteristics for the N5507A when used as a source. The environmental and mechanical specifications for the N5507A as a source are the same as for use as a downconverter. They are shown in [Table 15](#).

Specifications describe the instrument's warranted performance and apply after the warm-up period. These specifications are valid over the instrument's operating/environmental range unless otherwise noted.

Supplemental Characteristics provide additional information that is useful for operating the instrument by giving typical (expected), but *not warranted*, performance parameters.

Table 15 Environmental and mechanical specifications

Altitude	Up to 2,000 meters (6,500 ft)
Operating temperature range	+0 °C to +45 °C (41 °F to 110 °F)
Warm-up time	20 minutes
Maximum relative humidity	80% for temperatures up to 31 °C, decreasing linearly to 50% relative humidity at 40 °C.
Height	177.2 mm (7 in)
Width	212.5 mm (8.4 in)
Depth	574.3 mm (22.6 in)
Weight	~ 34 lbs (15.5 kg)

RF Output

Table 16 contains general RF specifications for the N5507A as a source.

The internal reference oscillators of the N5507A can be locked together in three configurations, each with different phase noise performance and tuning bandwidths. Table 17 on page 34 through Table 19 on page 36 provide the specifications for each configuration. All noise levels are in units of dBc/Hz unless otherwise noted. These specifications apply to input signals ≥ 0 dBm.

Table 16 RF output specifications

Frequency Range	2.4 GHz to 25.8 GHz
Frequency Resolution	600 MHz
Output Power:	
• 2.4 to 6.6 GHz	0 to +16 dBm
• 7.2 to 25.8 GHz	0 to +10 dBm

Spectral Purity

The internal reference oscillators can be locked together in three configurations, each with different phase noise performance and tuning bandwidths. Table 17 on page 34 through Table 19 on page 36 provide the specifications for each configuration. All noise levels are in units of dBc/Hz unless otherwise noted.

NOTE


AM noise specifications at any offset can be determined by drawing a line between specification points given on a dB-versus-log frequency plot.

Configuration 1: all oscillators locked

Best phase noise <100 Hz frequency offsets, narrow tuning sensitivity.
Refer to [Table 17](#).

Table 17 Source configuration 1: all oscillators locked

Output Frequency		Offset From Carrier (Hz)										Spurious (dBc)	
		1 ¹	10	100	1k	10k	100k	1M	10M	40M	10 to 100	1k to 100 MHz	
2.4 to 3.0 GHz	Typ.	-50	-80	-100	-124	-135	-148	-152	-152	-152	-60	-80	
	Spec.	-45	-75	-95	-120	-131	-143	-147	-147	-147	-50	-70	
3.0 to 4.2 GHz	Typ.	-47	-77	-97	-121	-132	-146	-150	-150	-150	-54	-80	
	Spec.	-42	-72	-92	-117	-128	-141	-145	-145	-145	-44	-70	
4.2 to 6.0 GHz	Typ.	-44	-74	-94	-118	-130	-144	-148	-148	-148	-54	-80	
	Spec.	-39	-69	-89	-114	-126	-139	-143	-143	-143	-44	-70	
6.0 to 7.8 GHz	Typ.	-42	-72	-92	-116	-128	-143	-147	-147	-147	-54	-80	
	Spec.	-37	-67	-87	-112	-124	-138	-142	-142	-142	-44	-70	
7.8 to 10.2 GHz	Typ.	-40	-70	-90	-114	-126	-141	-145	-145	-145	-50	-80	
	Spec.	-35	-65	-85	-110	-122	-136	-140	-140	-140	-40	-70	
10.2 to 12.6 GHz	Typ.	-38	-68	-88	-112	-124	-140	-143	-143	-143	-50	-80	
	Spec.	-33	-63	-83	-108	-120	-135	-138	-138	-138	-40	-70	
12.6 to 18.0 GHz	Typ.	-35	-65	-85	-109	-121	-137	-140	-140	-140	-47	-70	
	Spec.	-30	-60	-80	-105	-117	-132	-135	-135	-135	-37	-60	
18.0 to 25.8 GHz	Typ.	-32	-62	-82	-106	-118	-134	-136	-136	-136	-44	-70	
	Spec.	-27	-57	-77	-102	-114	-129	-131	-131	-131	-34	-60	

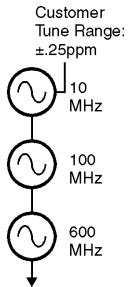


1 All noise levels above -30 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

Configuration 2: 100 and 600 MHz oscillators locked

Better phase noise <10 kHz frequency offsets, moderate tuning sensitivity. Refer to [Table 18](#).

Table 18 Source configuration 2: 100 and 600 MHz oscillators locked

Output Frequency	Offset From Carrier (Hz)										Spurious (dBc)	
	1 ¹	10 ²	100	1k	10k	100k	1M	10M	40M	100	1k to 100 MHz	
2.4 to 3.0 GHz	Typ.	+2	-48	-98	-124	-135	-148	-152	-152	-152	-60	-80
	Spec.	+7	-43	-93	-120	-131	-143	-147	-147	-147	-50	-70
3.0 to 4.2 GHz	Typ.	+5	-45	-95	-121	-132	-146	-150	-150	-150	-54	-80
	Spec.	+10	-40	-90	-117	-128	-141	-145	-145	-145	-44	-70
4.2 to 6.0 GHz	Typ.	+8	-42	-92	-118	-130	-144	-148	-148	-148	-54	-80
	Spec.	+13	-37	-87	-114	-126	-139	-143	-143	-143	-44	-70
6.0 to 7.8 GHz	Typ.	+10	40	-90	-116	-128	-143	-147	-147	-147	-54	-80
	Spec.	+15	-35	-85	-112	-124	-138	-142	-142	-142	-44	-70
7.8 to 10.2 GHz	Typ.	+12	-38	-88	-114	-126	-141	-145	-145	-145	-50	-80
	Spec.	+17	-33	-83	-110	-122	-136	-140	-140	-140	-40	-70
10.2 to 12.6 GHz	Typ.	+14	-36	-86	-112	-124	-140	-143	-143	-143	-50	-80
	Spec.	+19	-31	-81	-108	-120	-135	-138	-138	-138	-40	-70
12.6 to 18.0 GHz	Typ.	+17	-33	-83	-109	-121	-137	-140	-140	-140	-47	-70
	Spec.	+22	-28	-78	-105	-117	-132	-135	-135	-135	-37	-60
18.0 to 25.8 GHz	Typ.	+20	-30	-80	-106	-118	-134	-136	-136	-136	-44	-70
	Spec.	+25	-25	-75	-102	-114	-129	-131	-131	-131	-34	-60

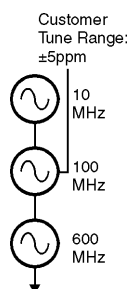

1 All noise levels above -30 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to 1 rad^2/Hz .


2 All noise levels above -40 dBc/Hz are 3 dB below $S_f(f)$ expressed in dB with respect to 1 rad^2/Hz .

Configuration 3: 600 MHz free-running oscillator

Good phase noise <10 kHz frequency offsets, wide tuning sensitivity. Refer to Table 19.

Table 19 Source configuration 3: 600 MHz free-running oscillator

Output Frequency		Offset From Carrier (Hz)									Spurious (dBc)		
		1 ¹	10 ²	100	1k	10k	100k	1M	10M	40M	100	1k	10k to 100 MHz
2.4 to 3.0 GHz	Nom.	+15	-35	-75	-108	-134	-148	-152	-152	-152	-40	-80	-80
	Spec.										-30	-70	-70
3.0 to 4.2 GHz	Nom.	+18	-32	-72	-102	-133	-146	-150	-150	-150	-34	-74	-80
	Spec.										-24	-64	-70
4.2 to 6.0 GHz	Nom.	+21	-29	-69	-101	-130	-144	-148	-148	-148	-34	-74	-80
	Spec.										-24	-64	-70
6.0 to 7.8 GHz	Nom.	+23	-27	-67	-99	-128	-143	-147	-147	-147	-34	-74	-80
	Spec.										-24	-64	-70
7.8 to 10.2 GHz	Nom.	+25	-25	-65	-96	-126	-141	-145	-145	-145	-30	-70	-80
	Spec.										-20	-60	-70
10.2 to 12.6 GHz	Nom.	+27	-23	-63	-95	-124	-140	-143	-143	-143	-30	-70	-80
	Spec.										-20	-60	-70
12.6 to 18.0 GHz	Nom.	+30	-20	-60	-91	-122	-137	-140	-140	-140	-27	-67	-70
	Spec.										-17	-57	-60
18.0 to 25.8 GHz	Nom.	+33	-17	-57	-88	-117	-134	-136	-136	-136	-24	-64	-70
	Spec.										-14	-54	-60

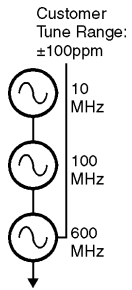

1 All noise levels above -30 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

2 All noise levels above -40 dBc/Hz are 3 dB below $S_{\phi}(f)$ expressed in dB with respect to $1 \text{ rad}^2/\text{Hz}$.

AM Noise

Specifications apply for +10 dBm output power. All noise levels in dBc/Hz. AM noise specifications at any offset can be determined by drawing a line on a log-log plot between specification points.

Table 20 AM detector noise floor specifications (+10 dBm)

Output Frequency		Offset From Carrier (Hz)									Spurious (dBc)	
		1	10	100	1k	10k	100k	1M	10M	40M	10	1k to 40M
2.4 to 18.0 GHz	Typ.	-100	-110	-117	-133	-143	-153	-155	-155	-155	-60	-80
	Spec.	-95	-105	-112	-128	-138	-148	-150	-150	-150	-50	-70
18.0 to 24.8 GHz	Typ.	-100	-110	-117	-130	-139	-147	-151	-151	-151	-60	-80
	Spec.	-95	-105	-112	-125	-134	-142	-146	-146	-146	-50	-70

Supplemental characteristics

Table 21 AM noise supplemental characteristics

Frequency Overrange	26.4 GHz with degraded output power
Output Level Entry Resolution	0.1 dB
Tuning Sensitivity	See microwave downconverter lo supplemental specifications.
Harmonics	-10 dBc
Frequency Switching Transients	Output power can peak at +22 dBm during frequency switching.
Output Power Drift	<1 dB after warm-up
Output power settling time	<100 ms

Maximum output power

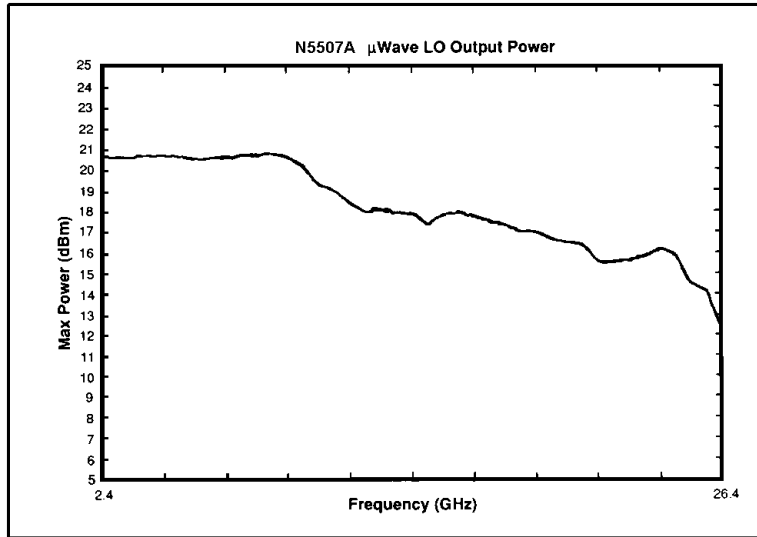


Figure 4 AM noise maximum output power

Output supplemental characteristics

The graphs in Figure 5 through Figure 7 show typical phase noise performance for the output connectors of the N5507A when used as a source.

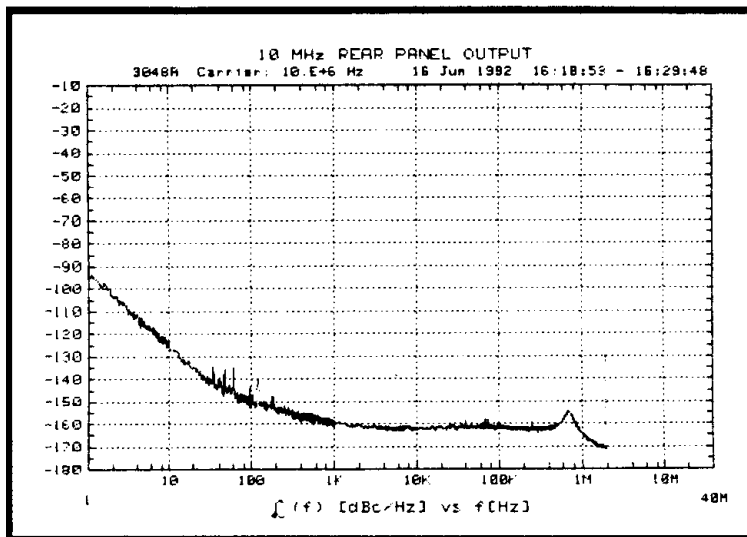


Figure 5 10 MHz output typical performance

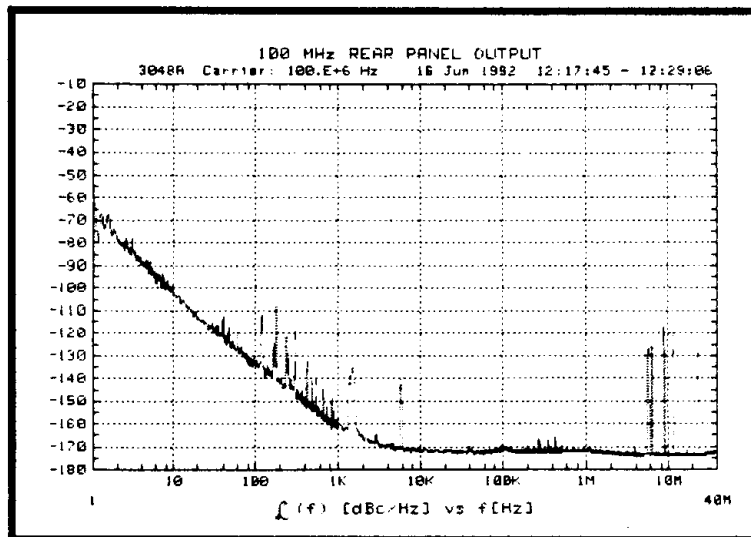


Figure 6 100 MHz output typical performance

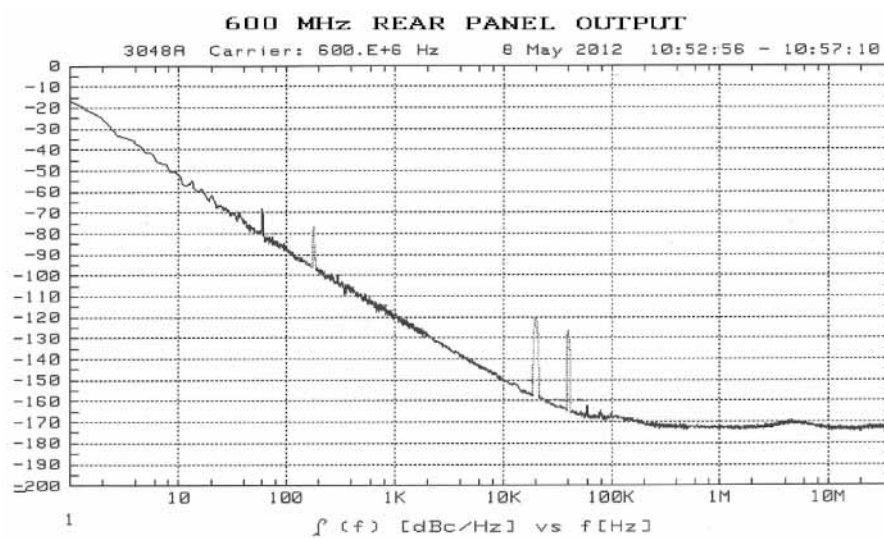


Figure 7 600 MHz output typical performance

3 Microwave Source



4 Preventive Maintenance

Using, Inspecting, and Cleaning RF Connectors 42

General Procedures and Techniques 46

Instrument Removal 49

Instrument Installation 51



Using, Inspecting, and Cleaning RF Connectors

Taking proper care of cables and connectors protects your system's ability to make accurate measurements. One of the main sources of measurement inaccuracy can be caused by improperly made connections or by dirty or damaged connectors.

The condition of system connectors affects measurement accuracy and repeatability. Worn, out-of-tolerance, or dirty connectors degrade these measurement performance characteristics.

Repeatability

If you make two identical measurements with your system, the differences should be so small that they will not affect the value of the measurement. Repeatability (the amount of similarity from one measurement to another of the same type) can be affected by:

- Dirty or damaged connectors
- Connections that have been made without using proper torque techniques (this applies primarily when connectors in the system have been disconnected, then reconnected).

CAUTION

Static-Sensitive Devices

This system contains instruments and devices that are static-sensitive. Always take proper electrostatic precautions before touching the center conductor of any connector, or the center conductor of any cable that is connected to any system instrument. Handle instruments and devices only when wearing a grounded wrist or foot strap. When handling devices on a work bench, make sure you are working on an anti-static worksurface.

RF cable and connector care

Connectors are the most critical link in a precision measurement system. These devices are manufactured to extremely precise tolerances and must be used and maintained with care to protect the measurement accuracy and repeatability of your system.

To extend the life of your cables or connectors:

- Avoid repeated bending of cables—a single sharp bend can ruin a cable instantly.
- Avoid repeated connection and disconnection of cable connectors.

- Inspect the connectors before connection; look for dirt, nicks, and other signs of damage or wear. A bad connector can ruin the good connector instantly.
- Clean dirty connectors. Dirt and foreign matter can cause poor electrical connections and may damage the connector.
- Minimize the number of times you bend cables.
- Never bend a cable at a sharp angle.
- Do not bend cables near the connectors.
- If any of the cables will be flexed repeatedly, buy a back-up cable. This will allow immediate replacement and will minimize system down time.

Before connecting the cables to any device:

- Check all connectors for wear or dirt.
- When making the connection, torque the connector to the proper value.

Proper connector torque

- Provides more accurate measurements
- Keeps moisture out of the connectors
- Eliminates radio frequency interference (RFI) from affecting your measurements

The torque required depends on the type of connector. Refer to [Table 22](#). Do not overtighten the connector.

Never exceed the recommended torque when attaching cables.

Table 22 Proper connector torque

Connector	Torque cm-kg	Torque N-cm	Torque in-lbs	Wrench P/N
Type-N	52	508	45	hand tighten
3.5 mm	9.2	90	8	8720-1765
SMA	5.7	56	5	8710-1582

Connector wear and damage

Look for metal particles from the connector threads and other signs of wear (such as discoloration or roughness). Visible wear can affect measurement accuracy and repeatability. Discard or repair any device with a damaged connector. A bad connector can ruin a good connector on the first mating. A magnifying glass or jeweler's loupe is useful during inspection.

SMA connector precautions

Use caution when mating SMA connectors to any precision 3.5 mm RF connector. SMA connectors are not precision devices and are often out of mechanical tolerances, even when new. *An out-of-tolerance SMA connector can ruin a 3.5 mm connector on the first mating.* If in doubt, gauge the SMA connector before connecting it. The SMA center conductor must *never* extend beyond the mating plane.

Cleaning procedure

- 1 Blow particulate matter from connectors using an environmentally-safe aerosol such as Aero-Duster. (This product is recommended by the United States Environmental Protection Agency and contains tetrafluoroethane. You can order this aerosol from Agilent (see [Table 23](#)).)
- 2 Use alcohol and a lint-free cloth to wipe connector surfaces. Wet a small swab with a small quantity of alcohol and clean the connector with the swab.
- 3 Allow the alcohol to evaporate off of the connector before making connections.

CAUTION

Do not allow excessive alcohol to run into the connector. Excessive alcohol entering the connector collects in pockets in the connector's internal parts. The liquid will cause random changes in the connector's electrical performance. If excessive alcohol gets into a connector, lay it aside to allow the alcohol to evaporate. This may take up to three days. If you attach that connector to another device it can take much longer for trapped alcohol to evaporate.

Table 23 Cleaning Supplies Available from Agilent

Product	Part Number
Aero-Duster	8500-6460
Isopropyl alcohol	8500-5344
Lint-Free cloths	9310-0039
Small polyurethane swabs	9301-1243

WARNING

Cleaning connectors with alcohol should only be performed with the instruments' mains power cord disconnected, in a well ventilated area. Connector cleaning should be accomplished with the minimum amount of alcohol. Prior to connector reuse, be sure that all alcohol used has dried, and that the area is free of fumes.

WARNING

If flammable cleaning materials are used, the material should not be stored, or left open in the area of the equipment. Adequate ventilation should be assured to prevent the combustion of fumes, or vapors.

General Procedures and Techniques

This section introduces you to the various cable and connector types used in the system. Read this section before attempting to remove or install an instrument! Each connector type may have unique considerations.

Always use care when working with system cables and instruments.

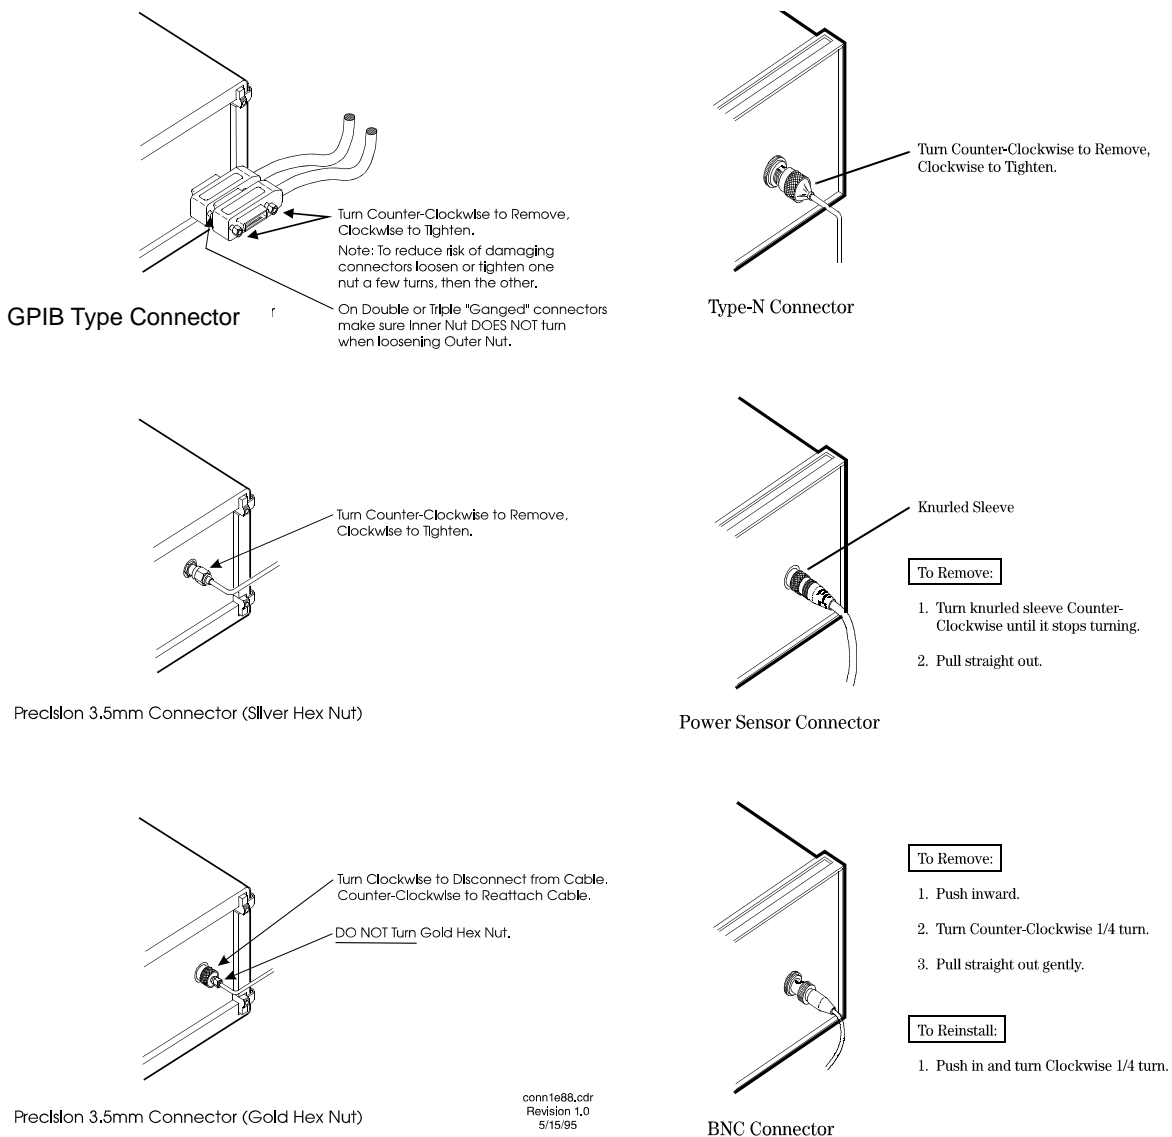


Figure 8 GPIB, 3.5 mm, Type-N, power sensor, and BNC connectors

Connector removal

GPIB connectors

These are removed by two captured screw, one on each end of the connector; these usually can be turned by hand. Use a flathead screwdriver if necessary.

GPIB connectors often are stacked two or three deep. When you are removing multiple GPIB connectors, disconnect each connector one at a time. It is a good practice to connect them back together even if you have not yet replaced the instrument; this avoids confusion, especially if more than one instrument has been removed.

When putting GPIB connectors back on, you must again detach them from one another and put them on one at a time.

Precision 3.5 mm connectors

These are precision connectors. Always use care when connecting or disconnecting this type of connector. When reconnecting, make sure you align the male connector properly. Carefully join the connectors, being careful not to cross-thread them.

Loosen precision 3.5 mm connectors on flexible cables by turning the connector nut counter-clockwise with a 5/16 inch wrench. Always reconnect using an 8 inch-lb torque wrench (Agilent part number 8720-1765). Semirigid cables are metal tubes, custom-formed for this system from semirigid coax cable stock.

3.5 mm connectors with a gold hex nut

The semirigid cables that go to the RF outputs of some devices have a gold connector nut. These do not turn. Instead, the RF connector on the instrument has a cylindrical connector body that turns. To disconnect this type of connector, turn the connector body on the instrument clockwise. This action pushes the cable's connector out of the instrument connector.

To reconnect, align the cable with the connector on the instrument. Turn the connector body counterclockwise. You may have to move the cable slightly until alignment is correct for the connectors to mate. When the two connectors are properly aligned, turning the instrument's connector body will pull in the semirigid cable's connector. Tighten firmly by hand.

3.5 mm connectors with a silver hex nut

All other semirigid cable connectors use a silver-colored nut that *can* be turned. To remove this type of connector, turn the silver nut counter-clockwise with a 5/16 inch wrench.

When reconnecting this type of cable:

- Carefully insert the male connector center pin into the female connector. (Make sure the cable is aligned with the instrument connector properly before joining them.)
- Turn the silver nut clockwise by hand until it is snug, then tighten with an 8 inch-lb torque wrench (part number 8720-1765).

Bent semirigid cables

Semirigid cables are not intended to be bent outside of the factory. An accidental bend that is slight or gradual may be straightened carefully by hand. Semirigid cables that are crimped will affect system performance and must be replaced. Do not attempt to straighten a crimped semirigid cable.

Instrument Removal

To remove an instrument from the system, use one of the following procedures.

Required tools

- #2 Phillips screwdriver
- #2 POZIDRIV screwdriver

Half-Rack-Width instrument

To remove a half-width instrument from a system rack

1 Power off the system.	<ul style="list-style-type: none"> • For details, see the system installation guide.
2 Remove the selected instrument's power cord from the power strip in the rack.	
3 The instrument is attached to the half-rack width instrument beside it; remove that instrument's power cord from the power strip also.	<ul style="list-style-type: none"> • The instruments are secured together by lock links at the front and rear. The lock links at the rear attach with screws. The lock links at the front hook together.
4 Remove the power cord and other cables from the front and rear of both instruments.	<ul style="list-style-type: none"> • Note the location of cables for re-installation.
5 Remove the four corner screws on the front of the rack panel that secures the instruments in place.	<ul style="list-style-type: none"> • The screws are located near the corners of the face of the instrument. • Use a #2 Phillips screwdriver.
6 Slide both instruments, as a single unit, out from the front of the rack and set them on a secure, flat surface.	
7 Detach the lock links that secure the rear of the instruments together by removing their screws.	<ul style="list-style-type: none"> • Use a #2 POZIDRIV screwdriver. • See Figure 9 on page 50.
8 Carefully and at the same time, push one instrument forward and pull the other back to unhook the lock links that secure the front of the instruments to each other.	
9 Store the "partner" instrument and lock links while the selected instrument is out of the rack.	<ul style="list-style-type: none"> • Only install the instruments as a pair; individual installation is not secure.

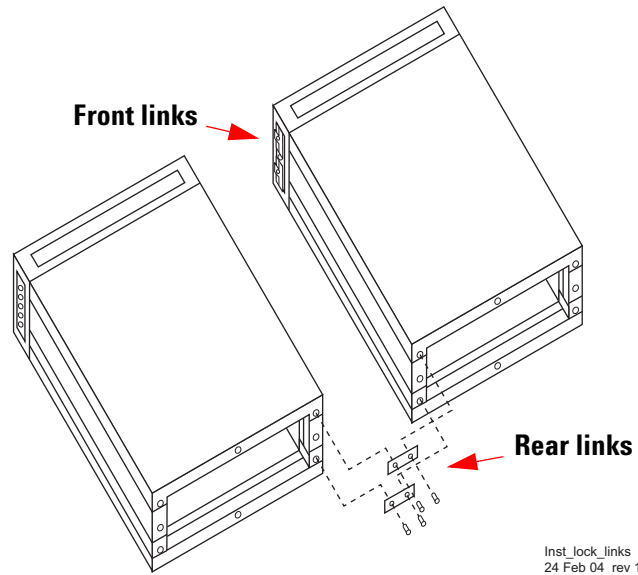


Figure 9 Instrument lock links, front and rear

Benchtop instrument

To remove an instrument from a benchtop system

-
- | | |
|---|--|
| 1 Power off each instrument in the system. | <ul style="list-style-type: none">• For details, see the system installation guide or system user's guide. |
|---|--|
-
- | | |
|--|--|
| 2 Unplug the selected instrument's power cord from the AC power supply. | |
|--|--|
-
- | | |
|--|--|
| 3 Remove the power cord and other cables from the front and rear of the instrument. | <ul style="list-style-type: none">• Note the location of cables for re-installation. |
|--|--|
-

Instrument Installation

To install or re-install an instrument in a system, use one of the following procedures.

Required tools

- #2 Phillips screwdriver
- #2 POZIDRIV screwdriver

Half-Rack-Width instrument

To install the instrument in a rack

Step	Note
1 Make sure the system is powered off.	<ul style="list-style-type: none"> • For details, see the system installation guide or system user's guide.
2 Re-attach the lock link that secures the front of the returned instrument to its partner half-rack-width instrument.	<ul style="list-style-type: none"> • Use a #2 POZIDRIV screwdriver. • See Figure 9 on page 50.
3 Re-attach the lock link that secures the rear of the instruments together.	<ul style="list-style-type: none"> • Use a #2 POZIDRIV screwdriver.
4 Insert the attached instruments in the same slot from which you removed them, sliding them along the support rails until they meet the rack-mount ears.	<ul style="list-style-type: none"> • The rack-mount ears stop the instruments at the correct depth.
5 Replace the rack panel in front of the instruments and secure the four corner screws.	<ul style="list-style-type: none"> • The screws are located near the corners of the face of the instrument. • Use a #2 Phillips screwdriver.
6 Confirm that the instrument is turned off.	
7 Connect the appropriate cables to the instruments (front and rear), including the power cords.	
8 Power on the system.	<ul style="list-style-type: none"> • For details, see the system installation guide or system user's guide.

Benchtop instrument

To install an instrument in a benchtop system

-
- | | |
|---|---|
| 1 Make sure the system is powered off. | <ul style="list-style-type: none">• For details, see For details, see the system installation guide or system user's guide. |
| <hr/> | |
| 2 Connect all cables to the instrument (front and rear), including the power cord. | |
| <hr/> | |
| 3 Connect the power cord to the AC power source. | |
| <hr/> | |
| 4 Power on the system. | <ul style="list-style-type: none">• For details, see the system installation guide or system user's guide. |
| <hr/> | |
| 5 Set the instrument GPIB address, if necessary. | <ul style="list-style-type: none">• For procedures, see the system installation guide or system user's guide. |
-